

MANUFACTURED BY: Backyard Discovery 3305 Airport Drive, Pittsburg, KS 66762 800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476 J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 0800-567-8990

MYSTIC PLAYHOUSE PLAYHOUSE MODEL # 2503014

The assembly manual must be retained since it contains important information



WARNING

Adult Assembly Required. FOR DOMESTIC USE ONLY. INTENDED FOR OUTDOOR USE.

CAN ICES-003 (B)/NMB-003(B)



Please visit www.backyarddiscovery.com


For the most up to date assembly manual, to register your set, or to order replacement parts Para obtener instrucciones en español, visite www.backyarddiscovery.com

Owner's Manual - Basic Setup Dimensions & Assembly Notes

Selecting the correct location for your play product is important for your children's safety and the product's longevity


• The safe play area refers to a zone extending 6'-7" (2007 mm) beyond the play product on all sides, including the space above the play product.

SAFE PLAY AREA DIAGRAM

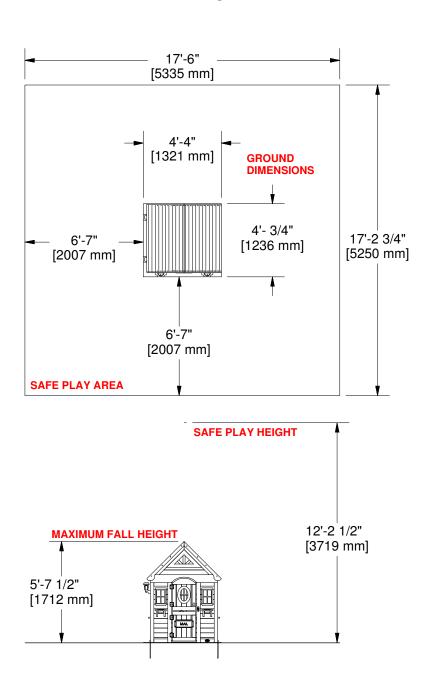


General Information:


Your set has been designed and engineered for children only and for residential use only. A maximum of 5 children is recommended for this playhouse.

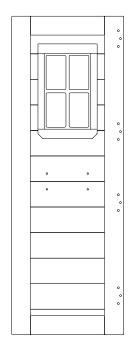


WP1 WALL PANEL - W2A04255 (x1) 1 1/8"x14"x39 3/4" (27x355x1010)

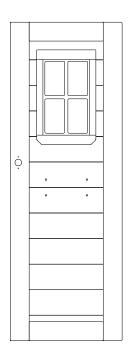


WP2 WALL PANEL - W2A04257 (x1) 1 1/8"x14"x39 3/4" (27x355x1010)

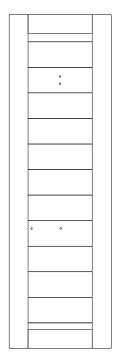


WP3 WALL PANEL - W2A04267 (x1) 1 1/8"x14"x39 3/4" (27x324x1058)

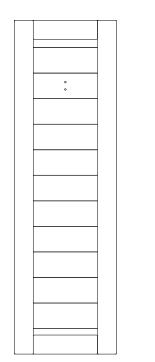


WP4 WALL PANEL - W2A04265 (x1) 1 1/8"x14"x39 3/4" (27x324x1058)

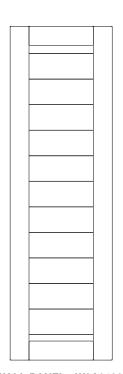

 
WP9 WALL PANEL - W2A04264 (x1) 1 1/8"x14"x39 3/4" (27x324x1058)




WP10 WALL PANEL - W2A04266 (x1) 1 1/8"x14"x39 3/4" (27x324x1058)

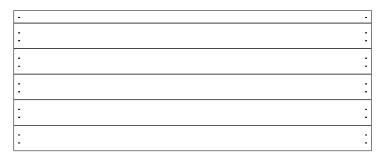

RP1 ROOF PANEL - W2A04263 (x2) 1 3/8"x17 1/2"x44 3/4" (35x445x1136)

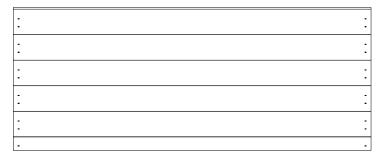


RP2 ROOF PANEL - W2A04261 (x2) 1 3/8"x17 7/8"x44 3/4" (35x454x1136)

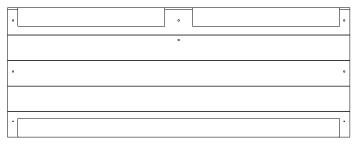


WP6 REAR WALL PANEL - W2A04260 (x1) 1 1/4"x16 1/8"x42 7/8" (32x410x1088)




WP5 WALL PANEL - W2A04268 (x2) 1 1/4"x15 1/4"x16 1/8" (32x386x410)

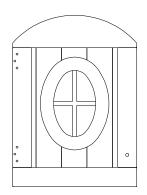


DP1 TOP DOOR PANEL - W2A04258 (x1) 1 1/8"x15 1/2"x21 1/4" (27x394x543)

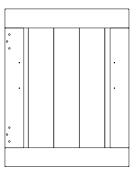


DP2 BOTTOM DOOR PANEL - W2A04259 (x1) 1 1/8"x15 1/2"x19 5/8" (27x394x500)

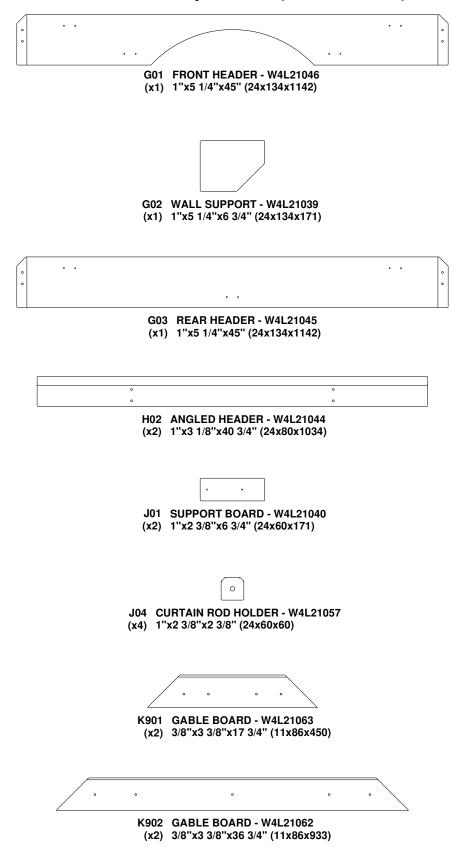

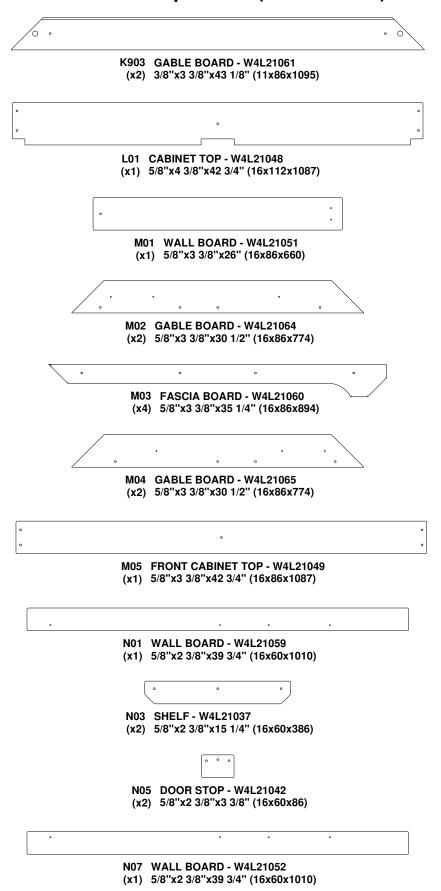

Hardware Components

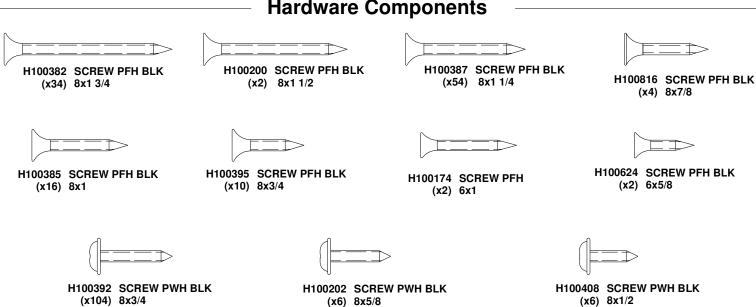




H100806 SCREW POH BLK (x24) 8/32x1 1/8




 
H100804 T-NUT (x24) 8/32






(x4) 5/16

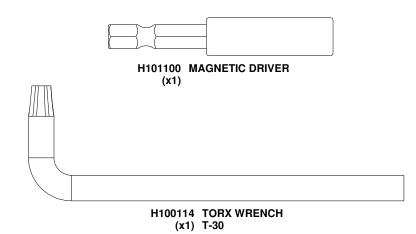

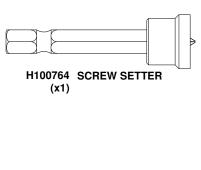


 


Accessory Components (Not to Scale) –




 A4M00997 METAL CLEAT (x18)




A4M01785 ANGLE BRACKET

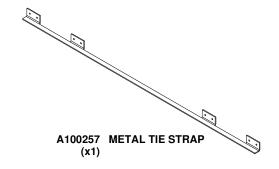


 


A4M01846 Z TIE BRACKET

 

 
A4M00624 HINGE (DOOR, (x2) SPRING LOADED)



A4M00994 HINGE (DOOR, (x2) NON-SPRING LOADED)

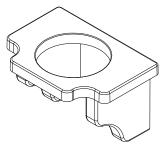



A6P00023 FLOWER POT HOLDER (x2)

 

A6P00020 KNOB KIT (x1)



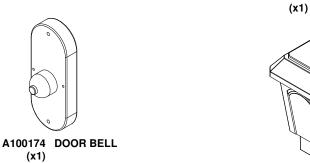


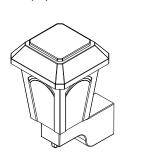

A6P00068 OUTDOOR LIGHT FIXTURE (x2)



(x1)

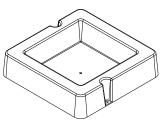

A6P00032 SURFACE MOUNT BASIN (x1)




A6P01499 FLOWER POT (x2)



A6P00290 DOOR BELL PLATE (x1)

Accessory Components (Not to Scale) -

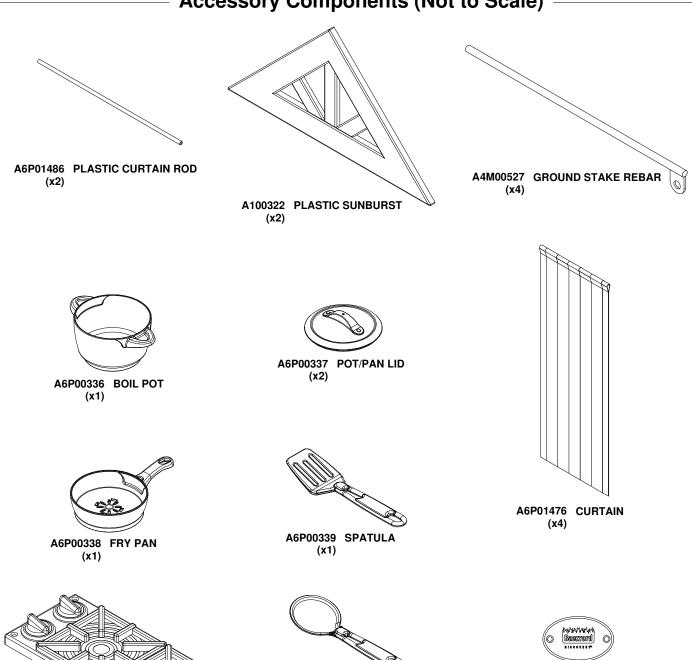

A6P00340 LADLE (x1)

A6P00025 STOVE KIT (x1)

A100241 BYD ID TAG (SMALL)


PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

WOOD PARTS:

- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- · If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- · Allow yourself plenty of room the wood pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.

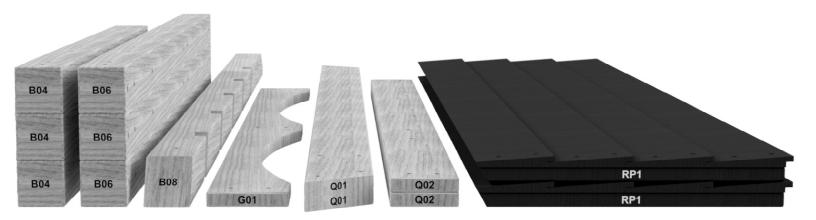

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- · During assembly you only need to reference the last four digits of the number.



PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.

- 1. Printed Assembly Manual included with your set
- 2. BILT APP 3D interactive instructions
- 3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)



 
ELECTRONICS SAFETY WARNING

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- --Reorient or relocate the receiving antenna.
- --Increase the separation between the equipment and receiver.
- --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- --Consult the dealer or an experienced radio/TV technician for help Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

STEP 1 - A100174 BATTERY ASSEMBLY



NOTE:

-DO NOT MIX OLD AND NEW BATTERIES.

-DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NI-CAD, NI-MH, ETC.) BATTERIES.

-NON-RECHARGEABLE BATTERIES
-NON-RECHARGEABLE BATTERIES
ARE NOT TO BE RECHARGED.
-ONLY BATTERIES OF THE SAME
OR EQUIVALENT TYPE AS
RECOMMENDED ARE TO BE USED.
-BATTERIES ARE TO BE INSERTED
WITH THE CORRECT POLARITY.
-EXHAUSTED BATTERIES ARE TO
BE REMOVED FROM THE TOY OR
IF THE TOY IS TO BE LEFT
UNUSED FOR A LONG TIME.
-THE SUPPLY TERMINALS ARE
NOT TO BE SHORT-CIRCUITED.




NOTE:

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

FCC LABEL

NOTE:

USING A SCREW DRIVER, REPLACE BATTERIES BY REMOVING SCREW IN BATTERY COVER, REMOVING BATTERY COVER AND FOLLOWING DIRECTIONS FOR BATTERY REPLACEMENT LOCATED ON THE BATTERY COVER.

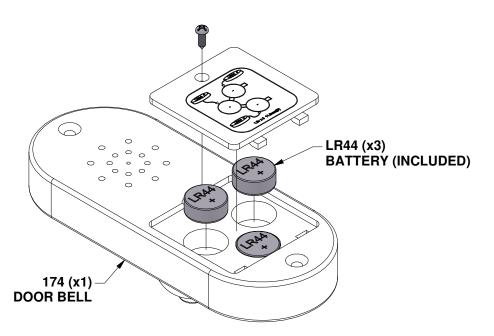




WARNING:

- 1. KEEP BATTERIES OUT OF THE REACH OF CHILDREN.
- 2. SWALLOWING MAY LEAD TO SERIOUS INJURY OR DEATH IN AS LITTLE AS 2 HOURS, DUE TO CHEMICAL BURNS AND POTENTIAL PERFORATION OF THE ESOPHAGUS.
- 3. IF YOU SUSPECT YOUR CHILD HAS SWALLOWED A BUTTON BATTERY, IMMEDIATELY SEEK URGENT MEDICAL ASSISTANCE.
- 4. EXAMINE DEVICES AND MAKE SURE THE BATTERY COMPARTMENT IS CORRECTLY SECURED, E.G. THAT THE SCREW OR OTHER MECHANICAL FASTENER IS TIGHTENED. DO NOT USE IF COMPARTMENT IS NOT SECURE.
- 5. DISPOSE OF USED BUTTON BATTERIES IMMEDIATELY AND SAFELY. FLAT BATTERIES CAN STILL BE DANGEROUS.
- 6. TELL OTHER OF THE RISK ASSOCIATED WITH BUTTON BATTERIES AND HOW TO KEEP THEIR CHILDREN SAFE.

STEP 1 - PLAYHOUSE ASSEMBLY

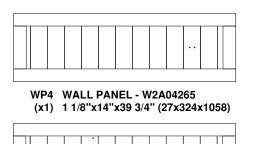



WP3 WALL PANEL - W2A04267 (x1) 1 1/8"x14"x39 3/4" (27x324x1058)

QTY	PART NUMBER	DESCRIPTION
16	H100392	SCREW PWH 8x3/4 BLK



WP5 WALL PANEL - W2A04268 (x1) 1 1/4"x15 1/4"x16 1/8" (32x386x410)

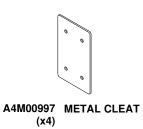

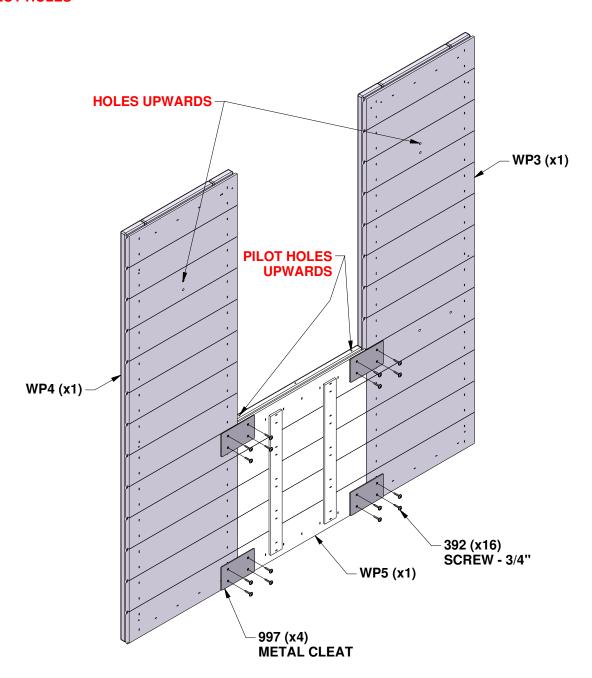

STEP 2 - PLAYHOUSE ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
4	H100816	SCREW PEH 8x7/8 BLK

•		
	•	
•		•
•		


WP6 REAR WALL PANEL - W2A04260 (x1) 1 1/4"x16 1/8"x42 7/8" (32x410x1088)

•		•	•	•	
	-	OARD - V /8"x39 3/4	/4L21059 ''' (16x60x	1010)	
•		•	•	•	


N07 WALL BOARD - W4L21052 (x1) 5/8"x2 3/8"x39 3/4" (16x60x1010)

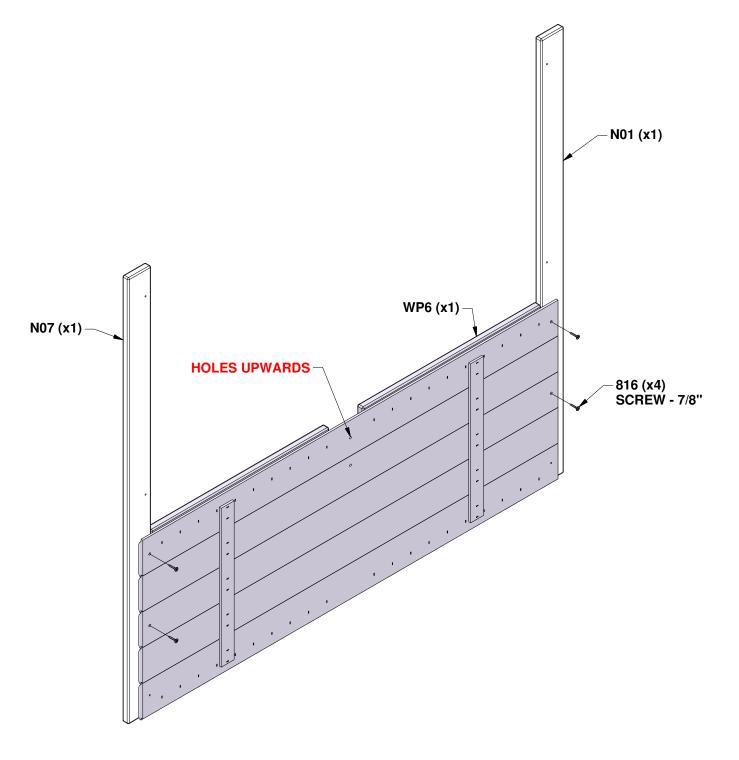

STEP 3 - PLAYHOUSE ASSEMBLY

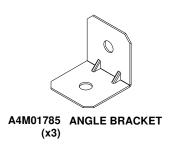

QTY	PART NUMBER	DESCRIPTION
4	H100392	SCREW PWH 8x3/4 BLK
2	H100408	SCREW PWH 8x1/2 BLK

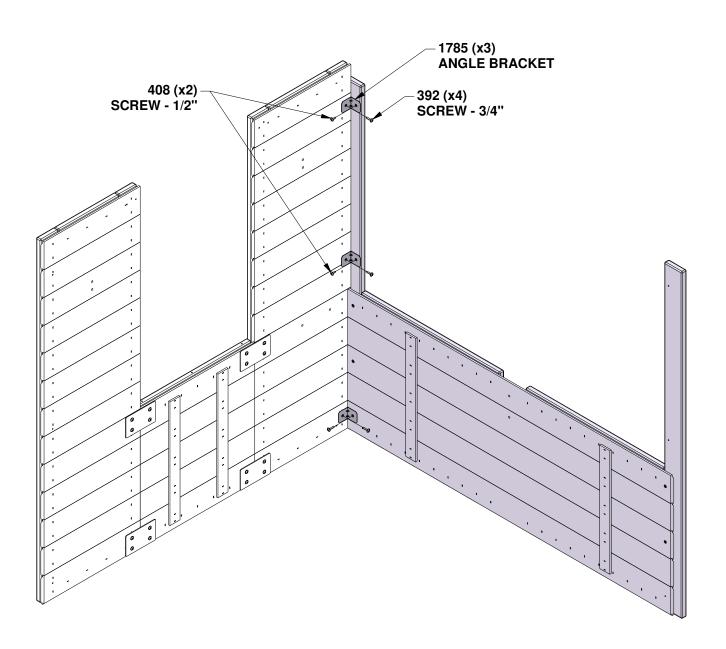


STEP 4 - PLAYHOUSE ASSEMBLY

QTY PART DESCRIPTION

16 H100392 SCREW PWH 8x3/4 BLK

 WP9 WALL PANEL - W2A04264 (x1) 1 1/8"x14"x39 3/4" (27x324x1058)










(x1) 1 1/4"x15 1/4"x16 1/8" (32x386x410)


WP10 WALL PANEL - W2A04266 (x1) 1 1/8"x14"x39 3/4" (27x324x1058)

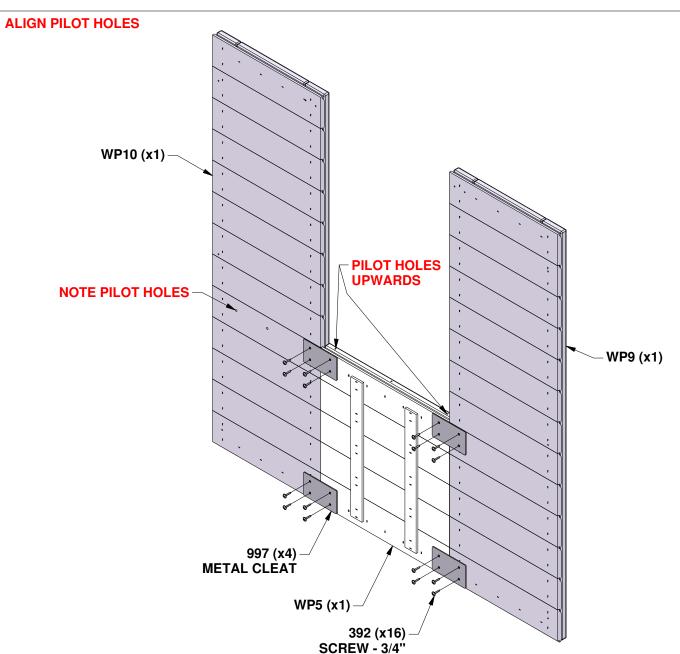

 
STEP 5 - PLAYHOUSE ASSEMBLY



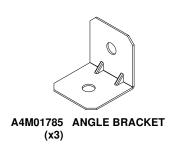

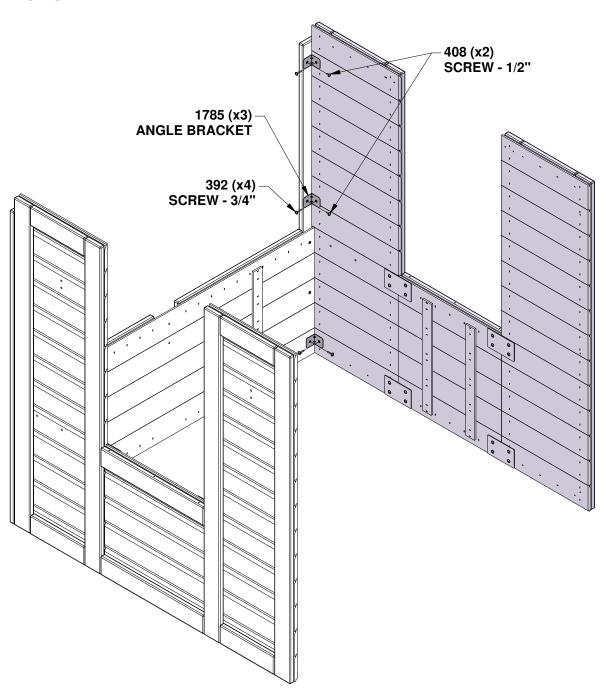

STEP 6 - PLAYHOUSE ASSEMBLY

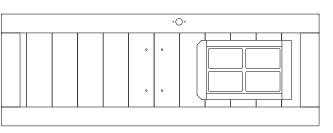


WP2 WALL PANEL - W2A04257 (x1) 1 1/8"x14"x39 3/4" (27x355x1010)


QTY	PART NUMBER	DESCRIPTION
6	H100392	SCREW PWH 8x3/4 BLK



A4M01785 ANGLE BRACKET (x3)

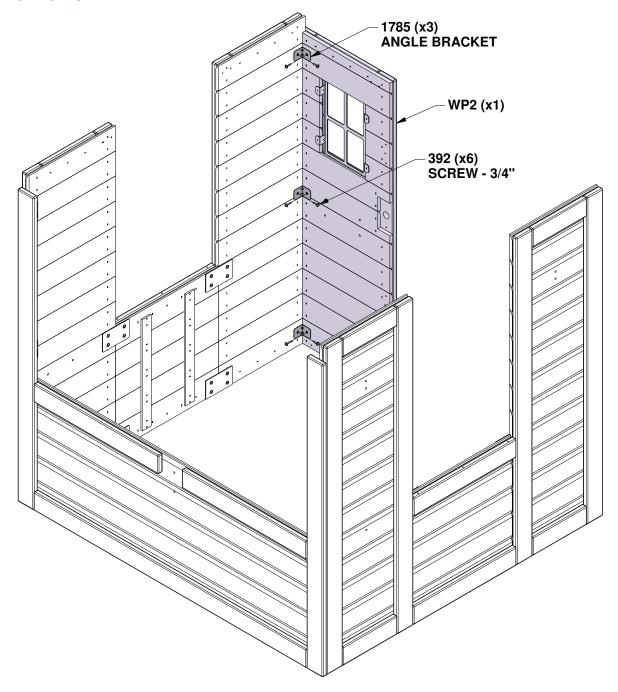


STEP 7 - PLAYHOUSE ASSEMBLY

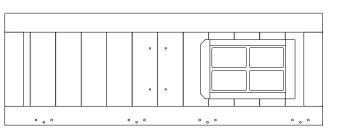


WP1 WALL PANEL - W2A04255 (x1) 1 1/8"x14"x39 3/4" (27x355x1010)

QTY	PART NUMBER	DESCRIPTION
6	H100392	SCREW PWH 8x3/4 BLK

 


A4M01785 ANGLE BRACKET (x3)

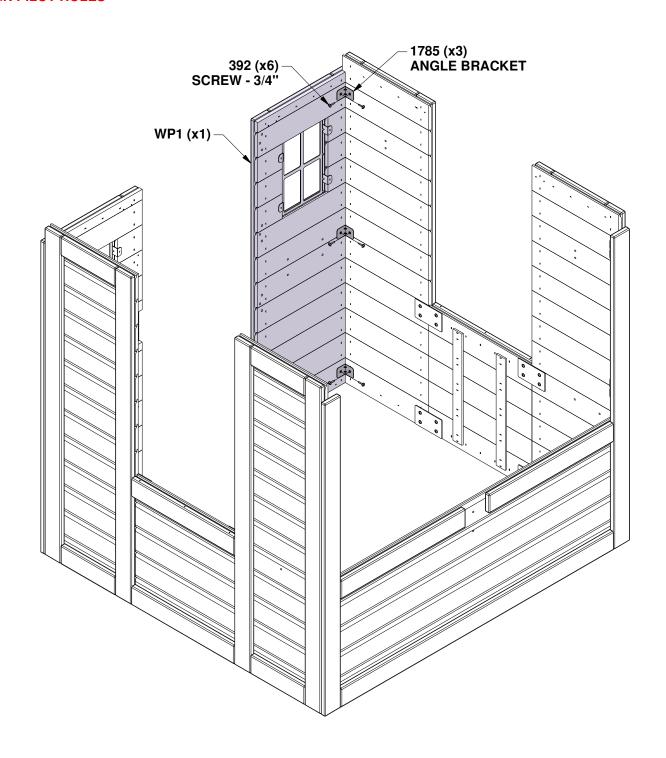


STEP 8 - PLAYHOUSE ASSEMBLY

QTY PART DESCRIPTION

8 H100392 SCREW PWH 8x3/4 BLK

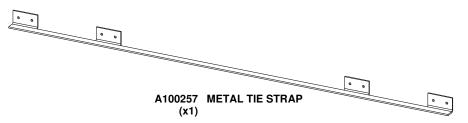

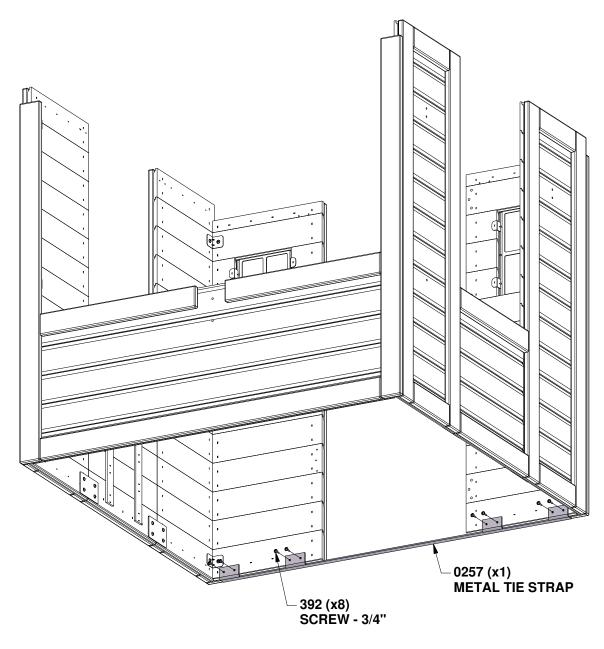

BOTTOM VIEW


STEP 9 - PLAYHOUSE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
16	H100392	SCREW PWH 8x3/4 BLK


HO	ANGLED HEADER - W4I 21044
۰	0
0	0

(x2) 1"x3 1/8"x40 3/4" (24x80x1034)




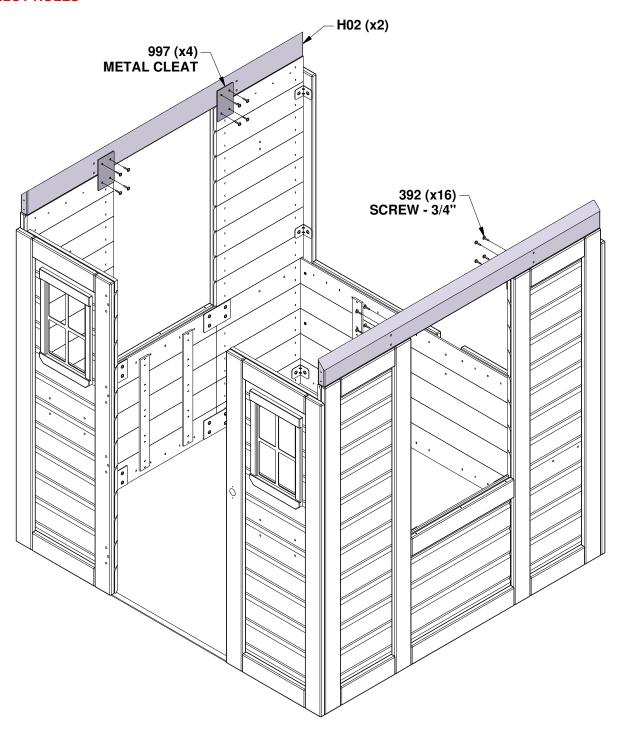


 STEP 10 - PLAYHOUSE ASSEMBLY



QTY	PART NUMBER	DESCRIPTION
4	H100382	SCREW PFH 8x1 3/4 BLK
8	H100392	SCREW PWH 8x3/4 BLK

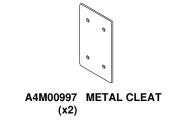

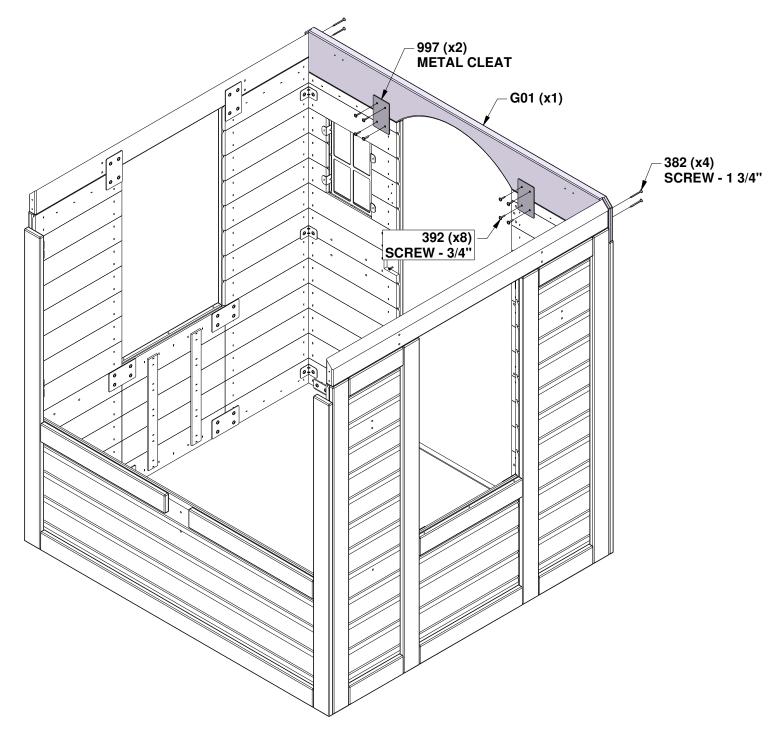


STEP 11 - PLAYHOUSE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100382	SCREW PFH 8x1 3/4 BLK

			/	
١	ĺ.,	• •	.)	
	"		٩I	
	٥		0	
		• •		


G03 REAR HEADER - W4L21045 (x1) 1"x5 1/4"x45" (24x134x1142)

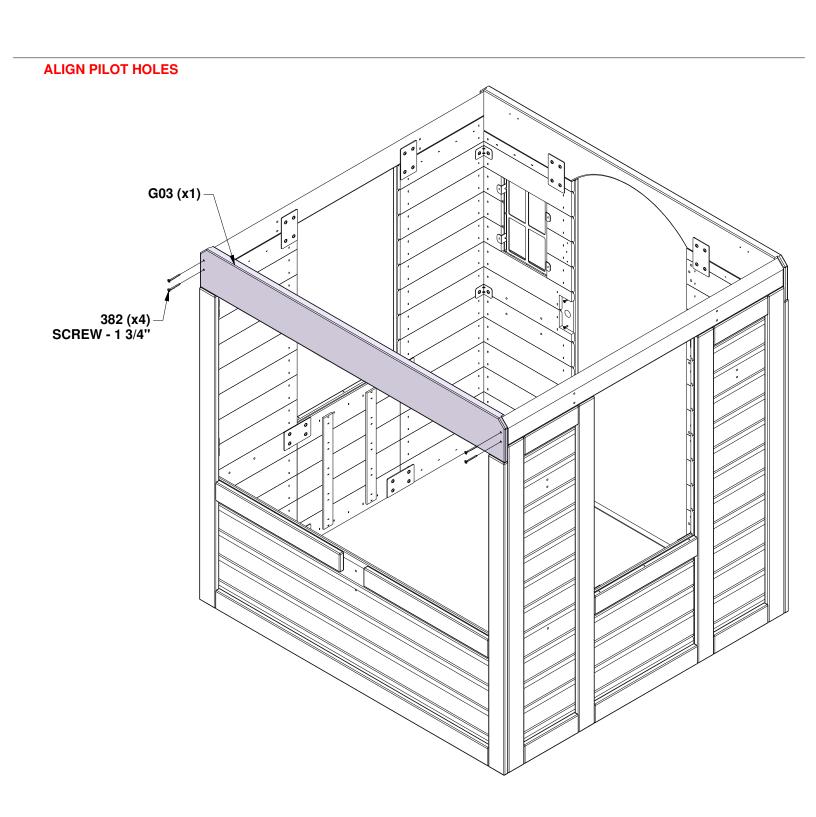


STEP 12 - PLAYHOUSE ASSEMBLY

M01 WALL BOARD - W4L21051 (x1) 5/8"x3 3/8"x26" (16x86x660)

> G02 WALL SUPPORT - W4L21039 (x1) 1"x5 1/4"x6 3/4" (24x134x171)

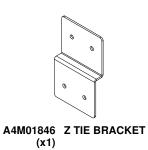

QTY	PART NUMBER	DESCRIPTION
4	H100202	SCREW PWH 8x5/8 BLK
2	H100382	SCREW PFH 8x1 3/4 BLK

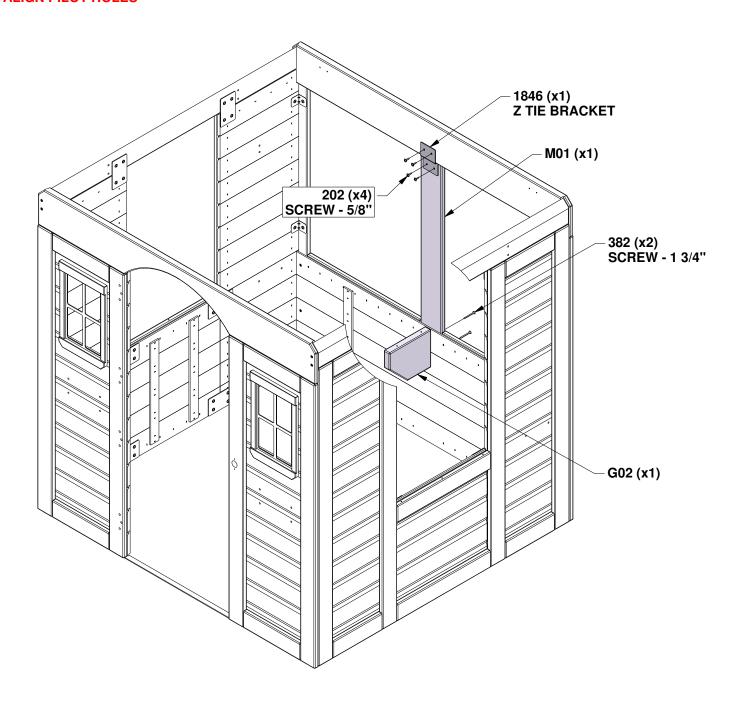


STEP 13 - PLAYHOUSE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100387	SCREW PFH 8x1-1/4 BLK

0 0


J01 SUPPORT BOARD - W4L21040 (x2) 1"x2 3/8"x6 3/4" (24x60x171)

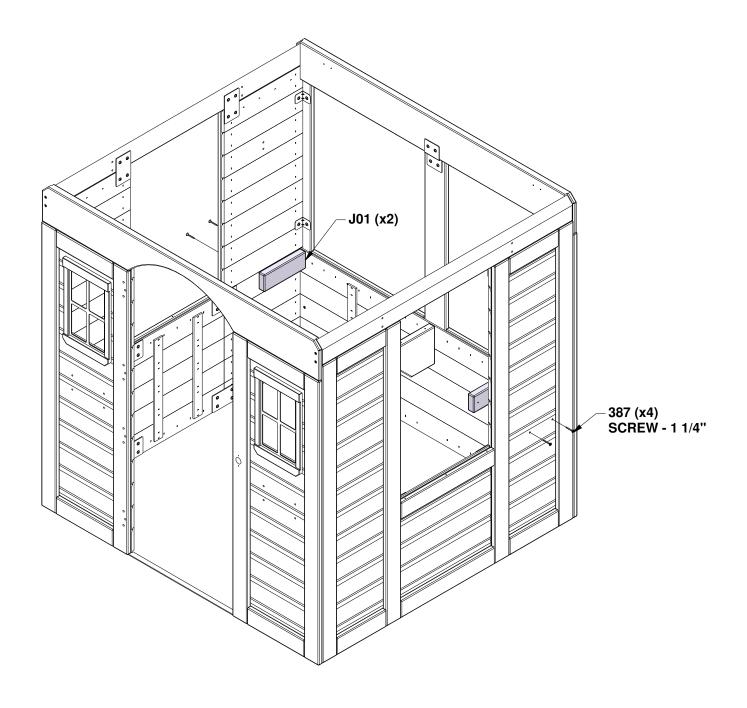

STEP 14 - PLAYHOUSE ASSEMBLY

0	0	0
	M05 FRONT CABINET TOP - W4L21049 (x1) 5/8"x3 3/8"x42 3/4" (16x86x1087)	
° °	0	0

QTY	PART NUMBER	DESCRIPTION
10	H100387	SCREW PFH 8x1-1/4 BLK

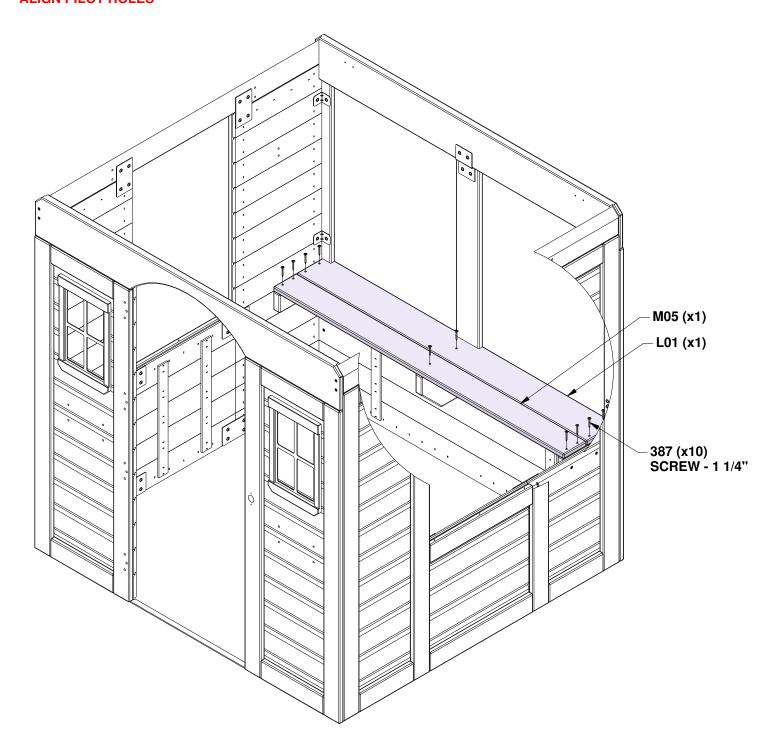

STEP 15 - PLAYHOUSE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100387	SCREW PFH 8x1-1/4 BLK



ALIGN PILOT HOLES N03 (x2) 387 (x6) SCREW - 1 1/4"

STEP 16 - PLAYHOUSE ASSEMBLY












(x2)

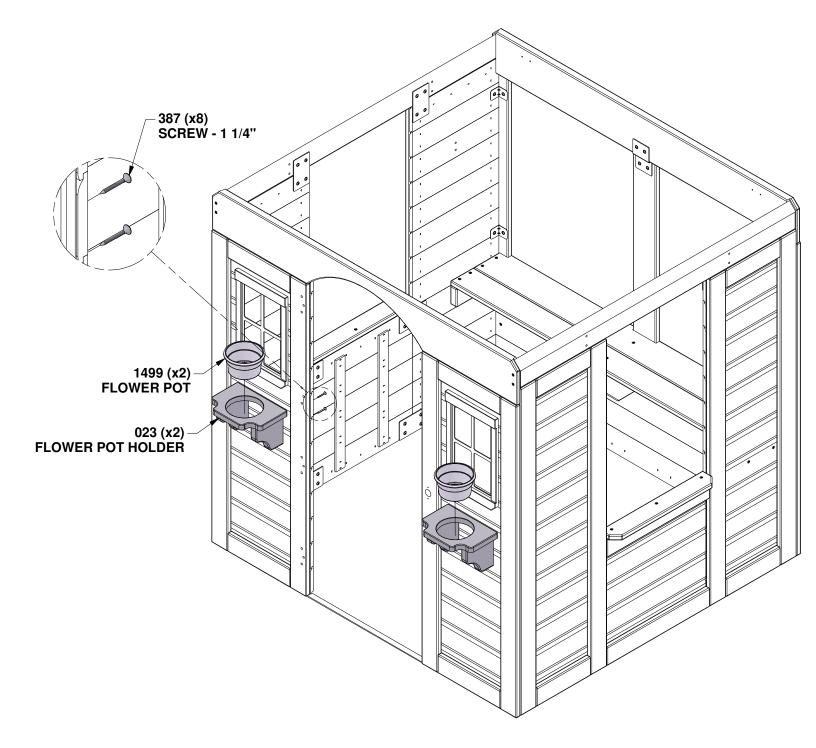

STEP 17 - PLAYHOUSE ASSEMBLY

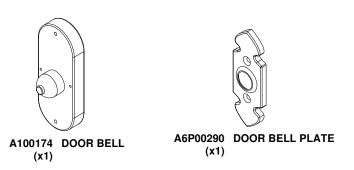


QTY	PART NUMBER	DESCRIPTION
2	H100174	SCREW PFH 6x1
2	H100624	SCREW PFH 6x5/8 BLK

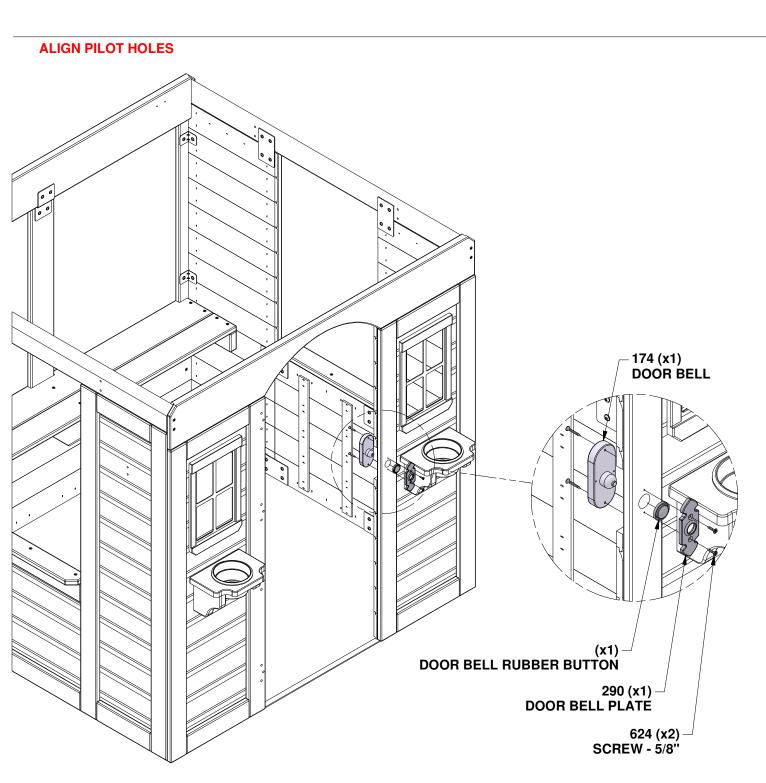


STEP 18 - PLAYHOUSE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100387	SCREW PFH 8x1-1/4 BLK



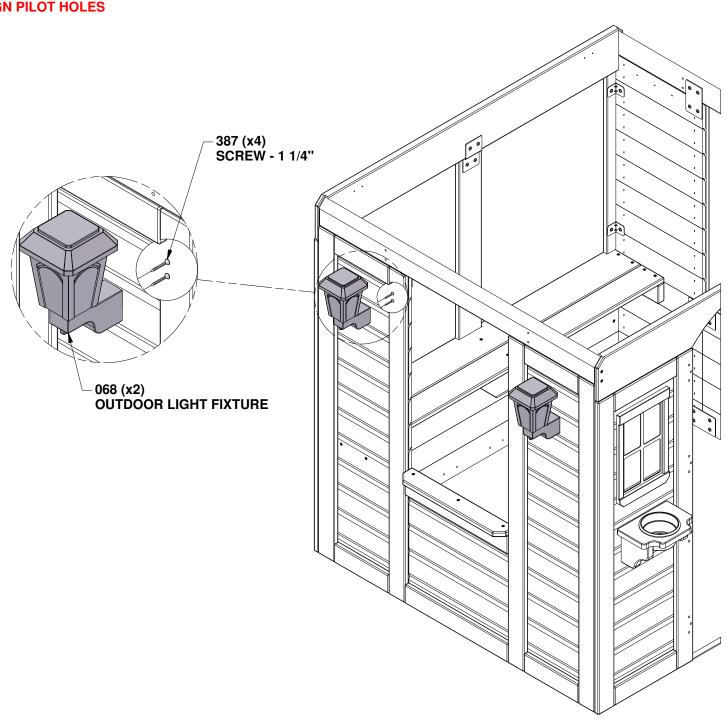


 STEP 19 - PLAYHOUSE ASSEMBLY







PLACE AS DESIRED

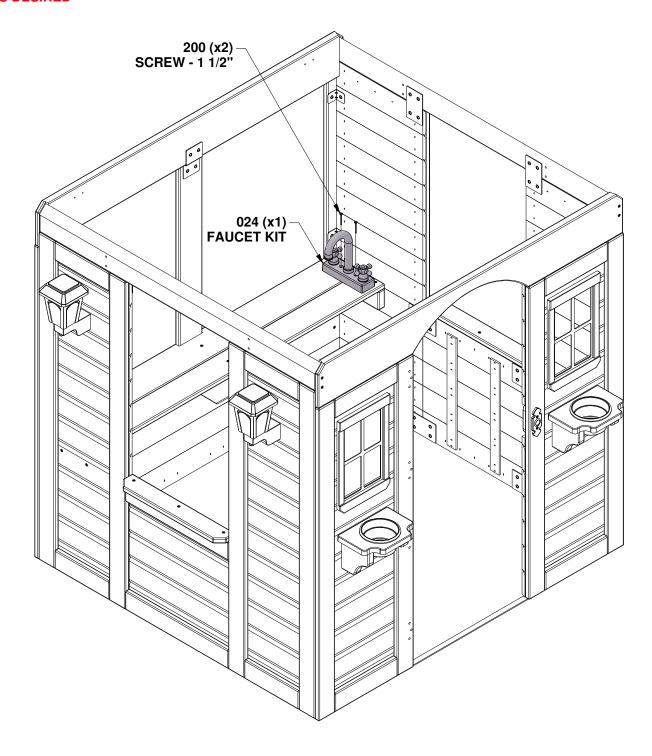


 STEP 20 - PLAYHOUSE ASSEMBLY



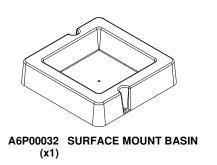


PLACE AS DESIRED

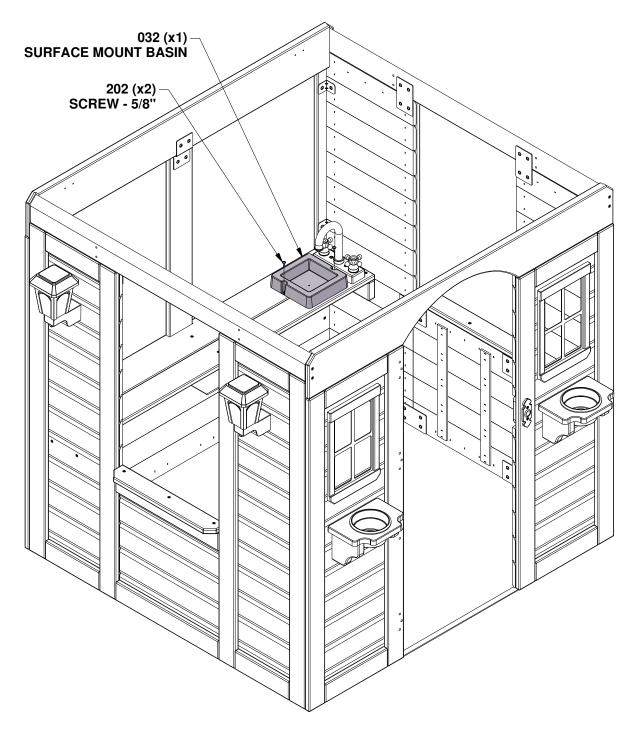


STEP 21 - PLAYHOUSE ASSEMBLY



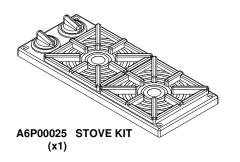

PLACE AS DESIRED

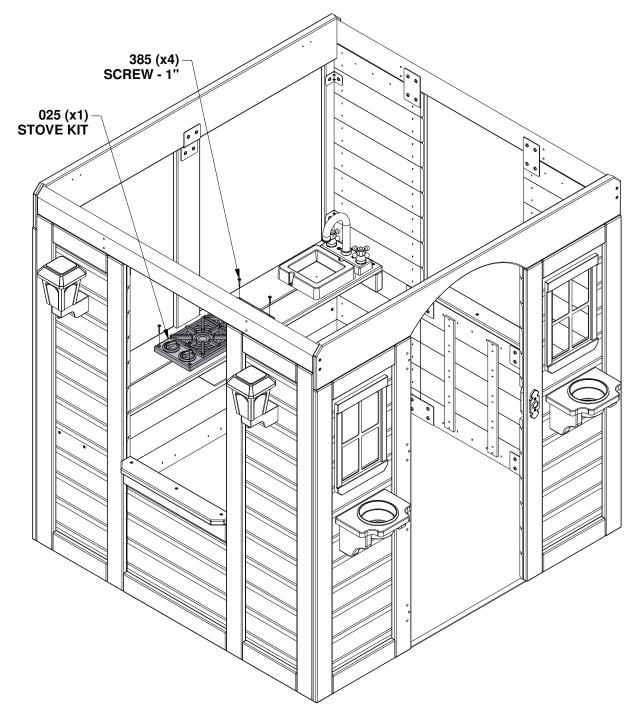


STEP 22 - PLAYHOUSE ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
6	H100387	SCREW PFH 8x1-1/4 BLK




N05 DOOR STOP - W4L21042 (x2) 5/8"x2 3/8"x3 3/8" (16x60x86)

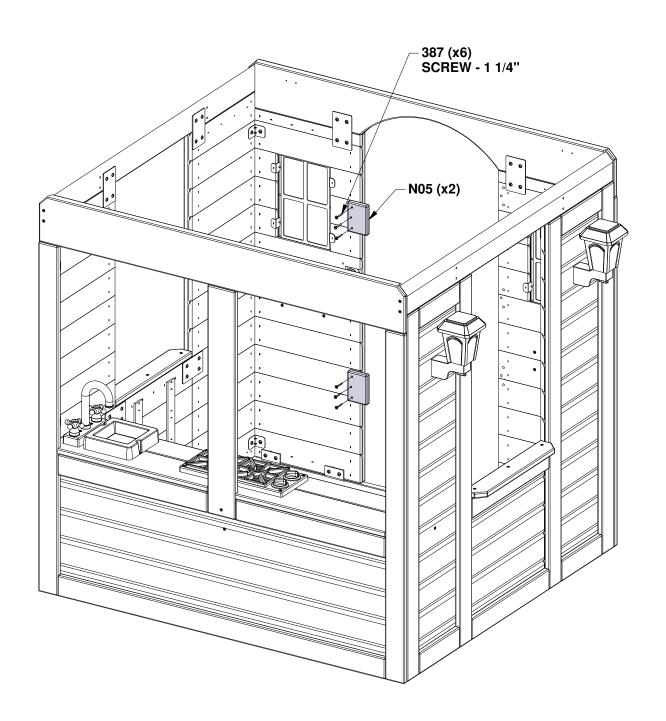

 STEP 23 - PLAYHOUSE ASSEMBLY

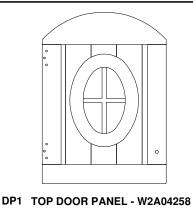



DP2 BOTTOM DOOR PANEL - W2A04259 (x1) 1 1/8"x15 1/2"x19 5/8" (27x394x500)

QTY	PART NUMBER	DESCRIPTION
12	H100804	T-NUT 8/32
12	H100806	SCREW POH-MS 8/32x1 1/8" BLK








A4M00994 HINGE (DOOR, (x2) NON-SPRING LOADED)

INSTALL T-NUTS IN WOOD FIRST ALIGN HOLES


(x1) 1 1/8"x15 1/2"x21 1/4" (27x394x543)

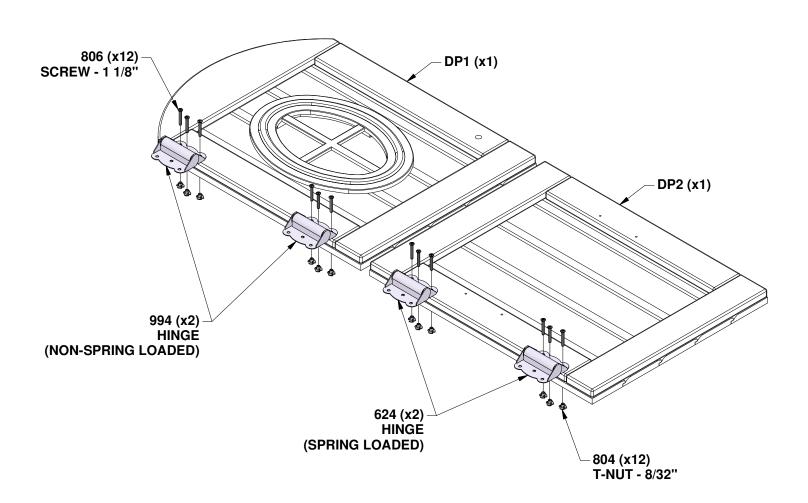


STEP 24 - PLAYHOUSE ASSEMBLY




QTY	PART NUMBER	DESCRIPTION
4	H100392	SCREW PWH 8x3/4 BLK

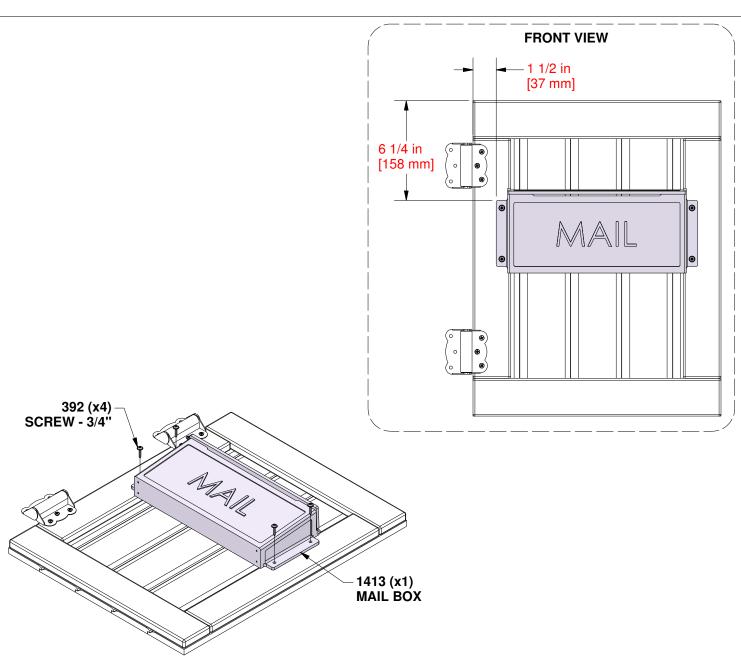


STEP 25 - PLAYHOUSE ASSEMBLY

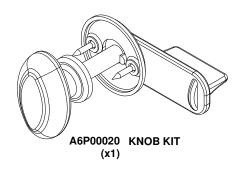

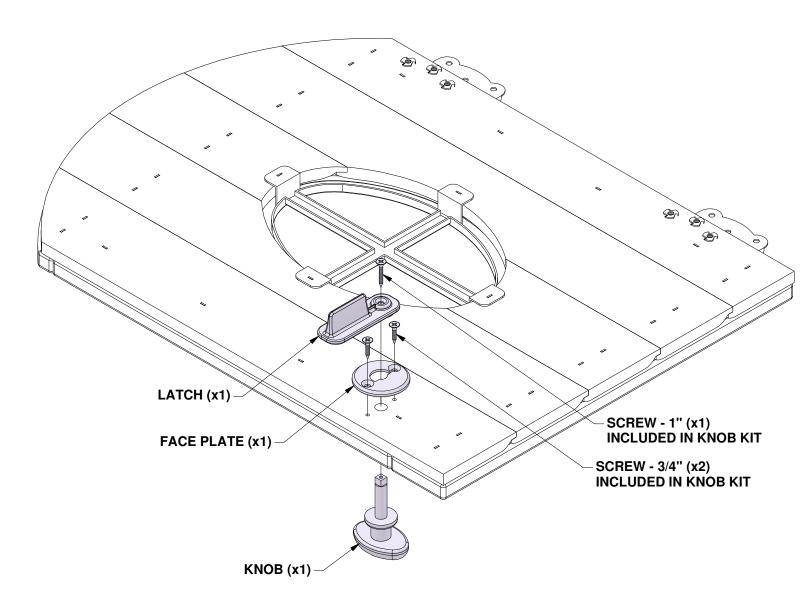


STEP 26 - PLAYHOUSE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100804	T-NUT 8/32
6	H100806	SCREW POH-MS 8/32x1 1/8" BLK

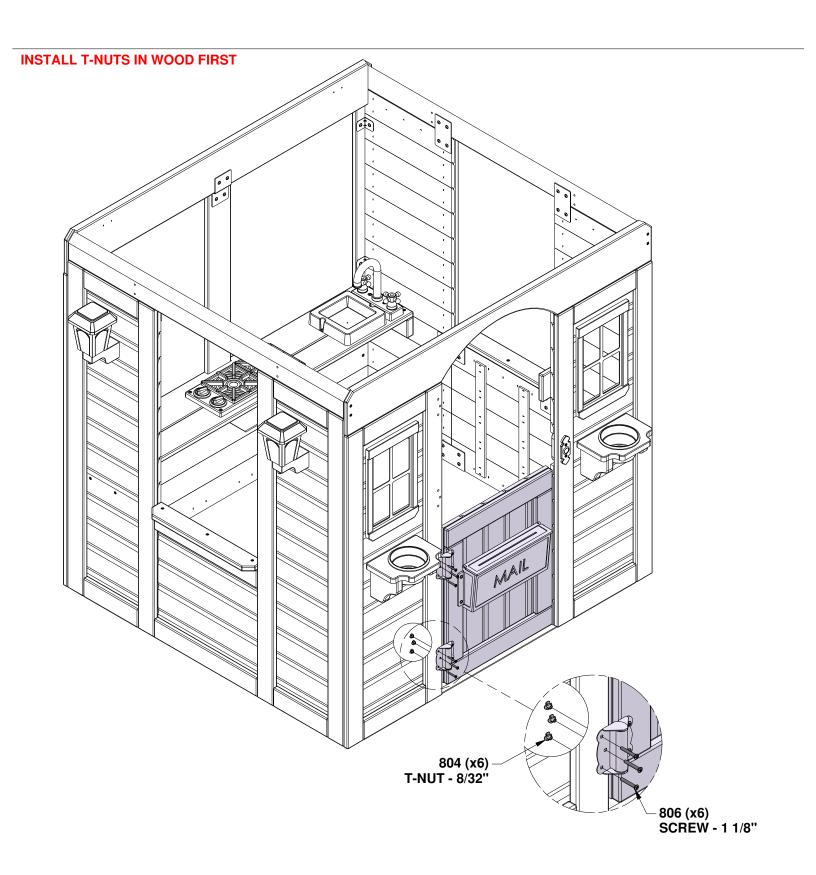


STEP 27 - PLAYHOUSE ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
6	H100804	T-NUT 8/32
6	H100806	SCREW POH-MS 8/32x1 1/8" BLK

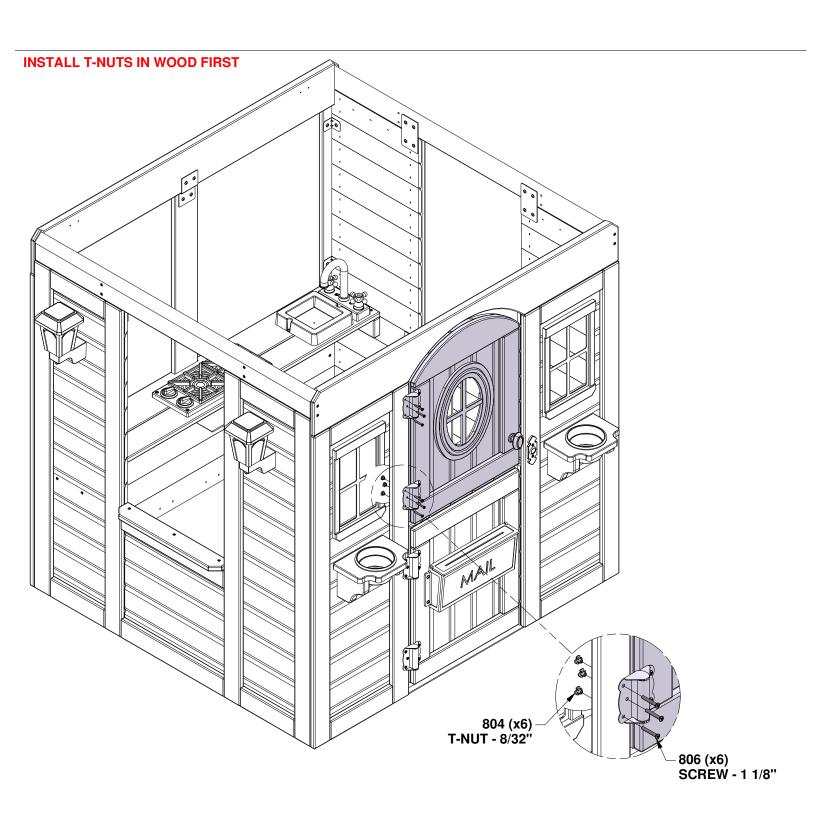

 
STEP 28 - PLAYHOUSE ASSEMBLY






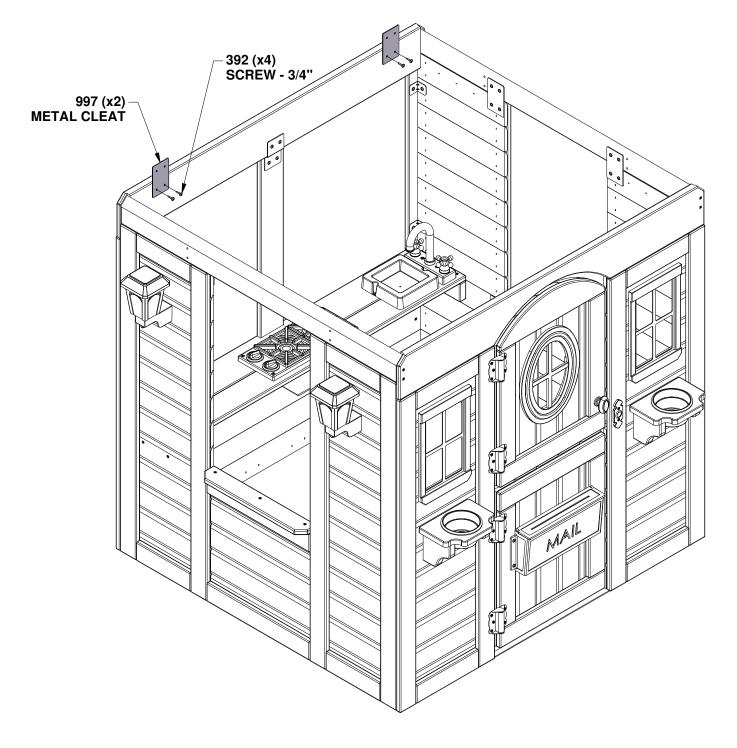

 STEP 29 - PLAYHOUSE ASSEMBLY






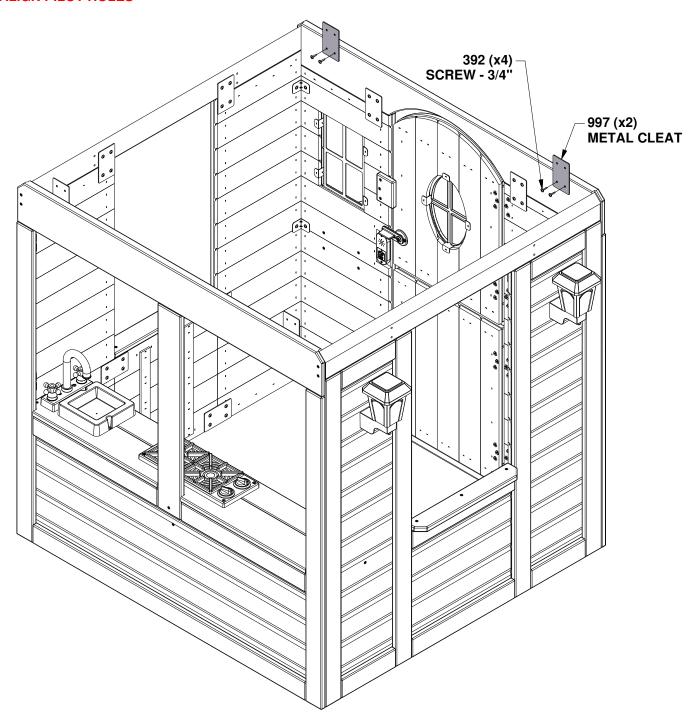


K901 GABLE BOARD - W4L21063 (x2) 3/8"x3 3/8"x17 3/4" (11x86x450) M02 GABLE BOARD - W4L21064 (x2) 5/8"x3 3/8"x30 1/2" (16x86x774)

K903 GABLE BOARD - W4L21061 (x2) 3/8"x3 3/8"x43 1/8" (11x86x1095)


QTY	PART NUMBER	DESCRIPTION
8	H100385	SCREW PFH 8x1 BLK

 

ALIGN PILOT HOLES
COMPLETE THIS STEP TWICE

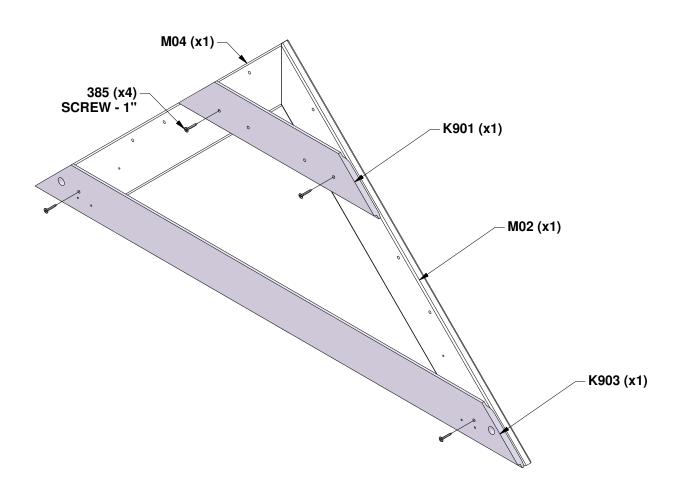

STEP 31 - PLAYHOUSE ASSEMBLY

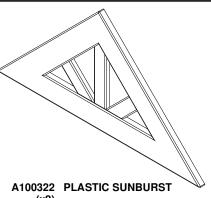


QTY	PART NUMBER	DESCRIPTION
4	H100385	SCREW PFH 8x1 BLK
10	H100395	SCREW PFH 8x3/4 BLK

K902 GABLE BOARD - W4L21062


K902 GABLE BOARD - W4L21062 (x2) 3/8"x3 3/8"x36 3/4" (11x86x933)

ALIGN PILOT HOLES COMPLETE THIS STEP TWICE

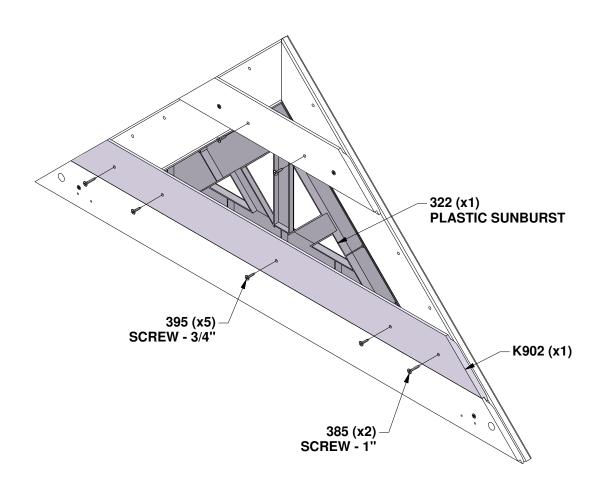


STEP 32 - PLAYHOUSE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H100392	SCREW PWH 8x3/4 BLK

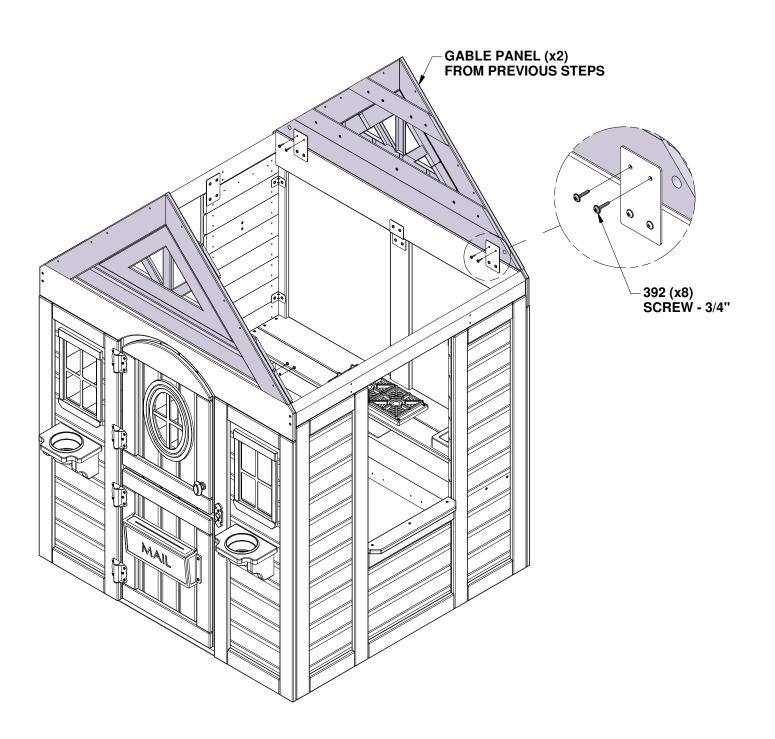


STEP 33 - PLAYHOUSE ASSEMBLY

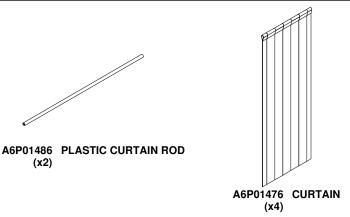

QTY	PART NUMBER	DESCRIPTION
8	H100382	SCREW PFH 8x1 3/4 BLK



J04 CURTAIN ROD HOLDER - W4L21057 (x4) 1"x2 3/8"x2 3/8" (24x60x60)

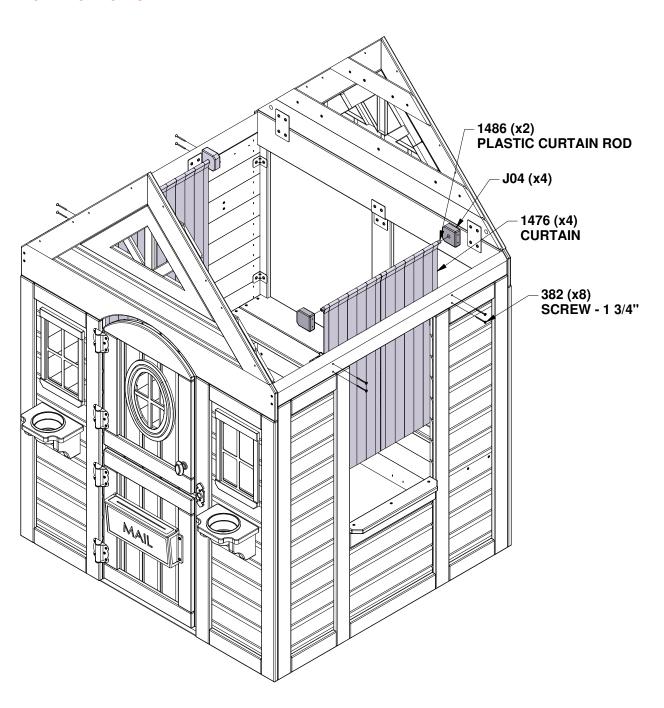


STEP 34 - PLAYHOUSE ASSEMBLY

•	-
-	-
•	-
-	-
-	-
•	-
•	-
•	-
•	-
-	-
-	-

QTY	PART NUMBER	DESCRIPTION
8	H100382	SCREW PFH 8x1 3/4 BLK

RP1 ROOF PANEL - W2A04263 (x2) 1 3/8"x17 1/2"x44 3/4" (35x445x1136)

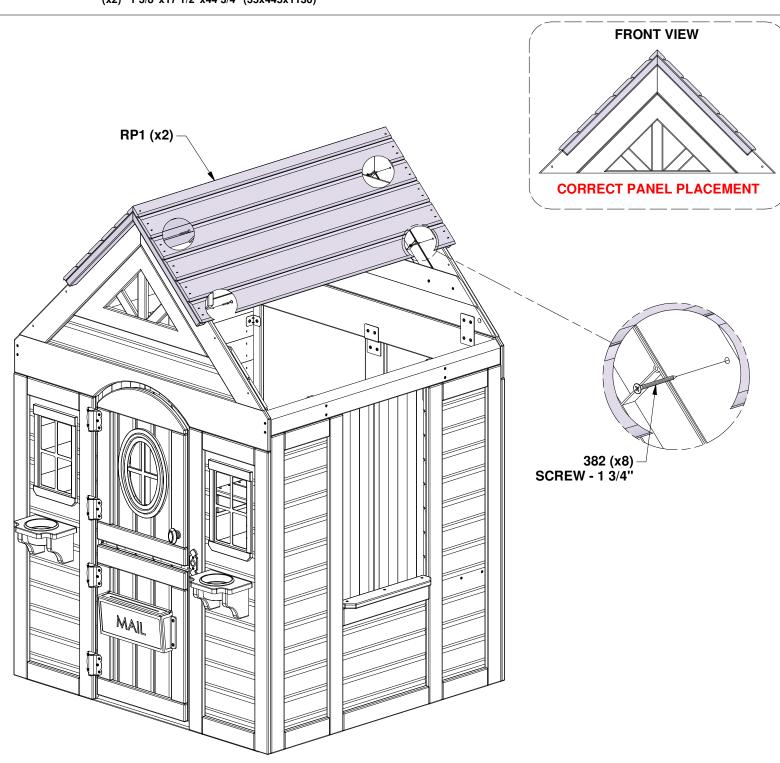


STEP 35 - PLAYHOUSE ASSEMBLY

-	-
-	-
-	-
-	-
-	-
-	_

QTY PART DESCRIPTION


8 H100382 SCREW PFH 8x1 3/4 BLK


RP2 ROOF PANEL - W2A04261 (x2) 1 3/8"x17 7/8"x44 3/4" (35x454x1136)

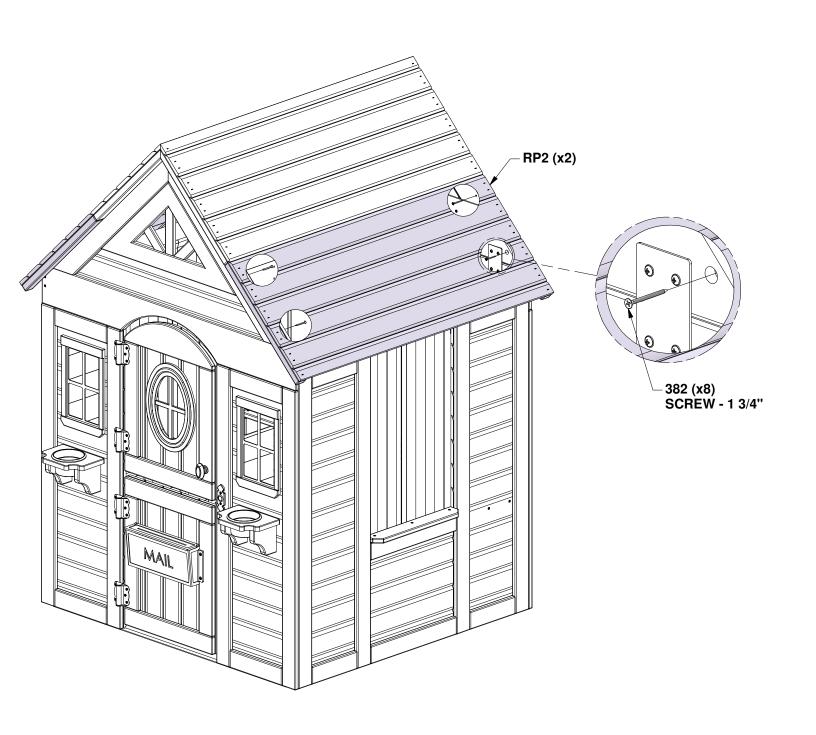

STEP 36 - PLAYHOUSE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
16	H100387	SCREW PFH 8x1-1/4 BLK

 


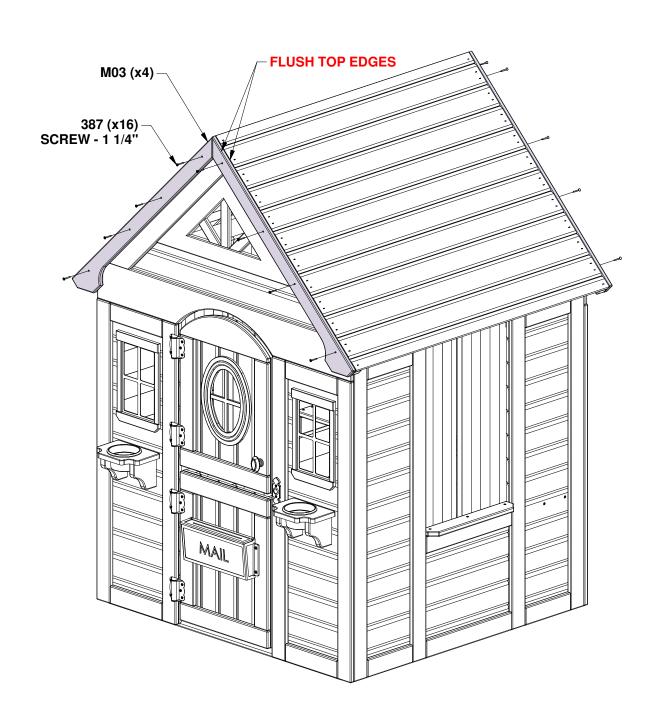


STEP 37 - PLAYHOUSE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100408	SCREW PWH 8x1/2 BLK



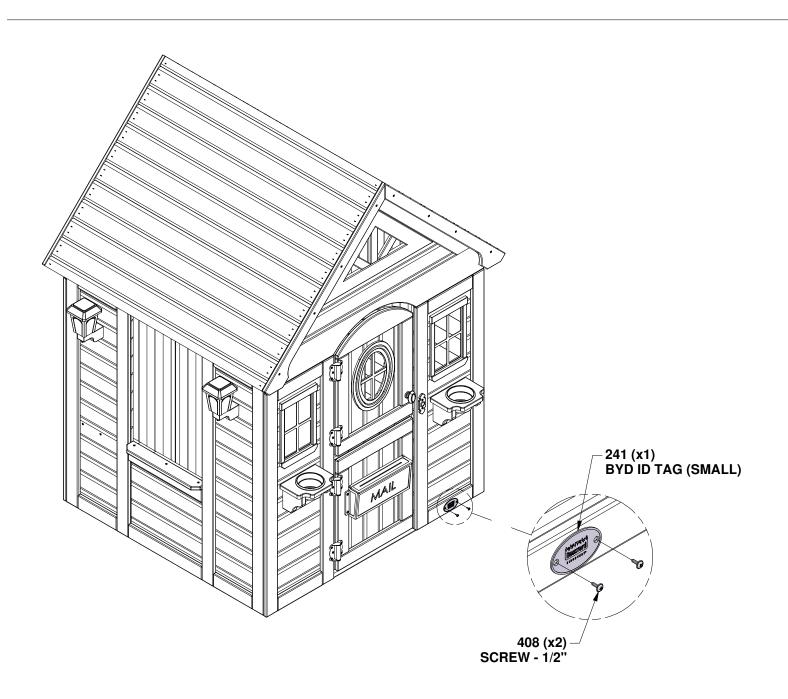

STEP 38 - PLAYHOUSE ASSEMBLY

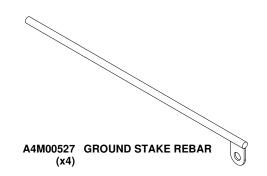

QTY	PART NUMBER	DESCRIPTION
4	H100379	T-NUT 5/16 BLK
4	H100468	BOLT WH 5/16x1 BLK

