



SKYFORT II SWING SET

Model # 1906020

Owner's Manual & Assembly Instructions

MANUFACTURED BY:
Backyard Discovery
3305 Airport Drive
Pittsburg, KS 66762
800-856-4445



average 2 person assembly time



assembly time may vary based on skill level



INSTALLATION SERVICES AVAILABLE!*

Need a helping hand?

Let our team of professionals handle the installation for you!

GOCONFIGURE
888-888-5424

*Installation services are only available to U.S. customers.

Before you begin

FOR QUICK & EASY ASSEMBLY

FIND 3D INSTRUCTIONS FOR THIS PRODUCT IN

BILT.

DOWNLOAD THE FREE APP



For the most up to date assembly manual, to register your set, or to order replacement parts please visit www.backyarddiscovery.com

SAVE THIS ASSEMBLY MANUAL FOR FUTURE REFERENCE IN THE EVENT THAT YOU NEED TO ORDER REPLACEMENT PARTS.

Para obtener instrucciones en español, visite www.backyarddiscovery.com



GOCONFIGURE
Putting it all together for you

INSTALLATION SERVICES AVAILABLE!*

Need a helping hand?

Let our team of professionals handle the installation for you!

GOCONFIGURE
888-888-5424

**Installation services are only available
to U.S. customers.*

With Go Configure, we bring you 18 years of experience right to your doorstep. We service a wide array of indoor and outdoor recreation products that most consumers don't have the time or ability to deliver & install themselves.

We do the heavy lifting, so you don't have to!

- 18+ Years of Experience Servicing Big Box Retailers and Direct Consumers
- Highly Skilled, Specialized, Courteous, Professional Service Technicians
- Over 140,000 Installations Annually
- White Glove Service

- Satisfaction Guarantee
- Flexible Appointments, including weekends
- Coverage across the nation

Visit www.goconfigure.com for more info!

**Installation services are only available to U.S. customers.*



The store where you made your purchase does not stock parts for this item. If you have assembly questions or you are missing or have damaged parts, please call

1-800-856-4445

you can also visit www.backyarddiscovery.com
or e-mail customerservice@backyarddiscovery.com

Please have the following information ready when you make your call:

- Model Number of the product located on the front of the assembly manual
 - The item description and number from the parts list from the manual that was included in your box
-
- Read entire assembly manual, paying special attention to the important tips and safety information.
 - To ensure there are no missing pieces do a complete inventory by first separating and identifying all parts.
 - Make sure to check packing material for small parts that may have fallen out during shipment.
 - Structures are not intended for public use. The Company does not warranty any of its residential structures subjected to commercial use.
 - This manual contains helpful information concerning assembly preparation, installation procedure and required maintenance.
 - Always keep safety in mind as your structure is being built.
 - Keep these instructions for future reference.

Owner's Manual Play Set


Please read entire booklet completely before beginning the assembly process

Please retain these instructions and your receipt for future reference. Keep them in a safe place where you can refer to them as needed. In order to provide you with the most efficient service, it is required that you provide us with the part numbers when ordering parts.

For Your Records:

Please take time and fill out the information below. This information will be needed for warranty issues.

Where Purchased: _____
Date of Purchase: _____
Installation Date: _____
Installed by: _____
Tracking Number: _____

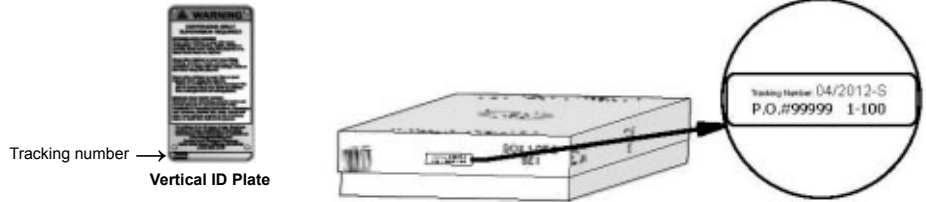

Tracking Number Reference Label

Tracking ID number on the carton and on the bottom of the vertical ID plate are included for tracking purposes associated with warranty claims.

Limited Warranty

This Limited Warranty by Backyard Discovery applies to products manufactured under the Backyard Discovery brand or its other brands including but not limited to Backyard Botanical, Adventure Playsets, and Leisure Time Products.

Backyard Discovery warrants that this product is free from defect in materials and workmanship for a period of one (1) year from the original date of purchase. This one (1) year warranty covers all parts including wood, hardware, and accessories. All wood carries a (5) year pro-rated warranty against rot and decay. Refer to the schedule below for charges associated with replacement of parts under this Limited Warranty. In addition, Backyard Discovery will replace any parts within the first 30 days from date of purchase found to be missing from or damaged in the original packaging.

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to assure maximum life and performance of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty. Maintenance guidelines are provided in the Owner's Manual.

This Limited Warranty does not cover:

- Installation
- Labor for any inspection
- Labor for replacement of any defective item(s)
- Incidental or consequential damages
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use, failure due to loading or use beyond the capacities stated in the applicable Assembly Manual.
- Acts of nature including but not limited to wind, storms, hail, floods, excessive water exposure
- Improper installation including but not limited to installation on uneven, unlevel, or soft ground
- Minor twisting, warping, checking, or any other natural occurring properties of wood that do not affect performance or integrity

Backyard Discovery products have been designed for safety and quality. Any modifications made to the original product could damage the structural integrity of the unit leading to failure and possible injury. Modification voids any and all warranties and Backyard Discovery assumes no liability for any modified products or consequences resulting from failure of a modified product.

This product is warranted for RESIDENTIAL USE ONLY. Under no circumstance should a Backyard Discovery product be used in public settings. Such use may lead to product failure and potential injury. Any and all public use will void this warranty. Backyard Discovery disclaims all other representations and warranties of any kind, express or implied.

Pro Rated Part Replacement Schedule

Product Age

All Parts

0-30 days from date of purchase
31 days to 1 year

Wood Rot and Decay Only

1 year
2 year
3 year
4 year
5 year
Over 5 years

Customer Pays

\$0 and free shipping
\$0 + S&H

\$0 and free shipping
20% + S&H
40% + S&H
60% + S&H
80% + S&H
100% + S&H

Operating Instructions and Safety Warnings



NOTE:

Your Children's Safety Is Our #1 Concern!

Observe the following statements and warnings to reduce the likelihood of serious or fatal injury. Please review these safety rules regularly with your children.



WARNING: BURN HAZARD

- Pay special attention to plastic and metal surfaces as they may be hot enough to cause burns.
- Always check the temperature of the product before letting your children play on it.
- Remember that the product may cause burns if left in direct sunlight.
- Always be aware of the sun and weather conditions, and do not assume that the equipment is safe because the air temperature is not very high.

- Children **MUST NOT** use this playcenter until unit has been completely assembled and inspected by an adult to ensure set has been properly installed and anchored.
- Equipment is recommended for use by children 3 to 10 years of age.
- This Playcenter is designed for a specific number of occupants whose combined weight should not exceed the designated weight on the elevated floor or the swing area. The total unit capacity is outlined in the Basic Setup Dimensions section of instruction manual. The maximum fall height and recommended play area is also available in the Basic Setup Dimensions section of the manual.
- On-site, continuous adult supervision is **REQUIRED. MOST SERIOUS INJURIES AND DEATHS ON PLAYGROUND EQUIPMENT HAVE OCCURRED WHILE CHILDREN WERE UNSUPERVISED!**
- **DO NOT** allow children to walk close to, in front of, behind, or between moving swings or other moving playground equipment.
- **DO NOT** let children stand on swings.
- Children should **NOT** twist the chains and ropes and should not loop them over the top support bar, this could reduce the strength of the chain or rope.
- **DO NOT** let children push empty seats. The seat could hit them and cause serious injury.
- Instruct and teach children to sit in the center of the swings with their full weight on the seats.
- **DO NOT** allow children to use the equipment in a manner other than intended.
- Instruct children **NOT** to get off equipment while it is in motion.
- Instruct children to **ALWAYS** go down slides feetfirst. Never slide headfirst.
- Instruct children to **LOOK** before they slide to make sure no one is at the bottom.
- **DO NOT** allow children to run up a slide, as this increases their chances of falling.
- **DRESS CHILDREN APPROPRIATELY.** (Examples would include wearing well-fitting shoes and the avoidance of ponchos, scarfs, and other loose-fitting clothing that is potentially hazardous while using equipment).
- **DO NOT** allow children to climb when the equipment is wet.
- Children should **NEVER** jump from a fort deck. They should always use the ladder, ramp or slide.
- Children should **NEVER** be allowed to crawl or walk across the top of monkey bars.
- **DO NOT** allow children to crawl on top of a fort roof.
- Verify that any suspended climbing ropes, chain, or cable are secured at both ends and that they cannot be looped back on themselves as to create an entanglement hazard.
- **DO NOT** let children attach items to the playground equipment that aren't specifically designed for use with the equipment. Items such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain can cause a strangulation hazard.
- Children should **NEVER** wrap their legs around swing chain.
- **DO NOT** allow children to slide down the swing chain.
- Instruct children to remove their bike or other sports helmet before playing on playground equipment.
- **NEVER** add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).

Modifications

- Modifications made by the consumer to the original activity toy shall be carried out according to the instructions of the manufacturer. In particular, instructions shall be provided with kit/accessory about the installation of rope/nets concerning the minimum diameter, the need for fixation at both ends, overall length, and positioning in relation to other structures.

Owner's Manual Play Set

Positioning Your Playcenter

- The playcenter is designed to be installed on a level surface by an adult with an adult helper. Place in a flat area of your yard to minimize ground preparation.
- Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose fill surfacing material washing away during heavy rains.
- Place the equipment not less than 6'-7" (2.0 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- Provide enough room so that the children can use the equipment safely. For example, for structures with multiple play activities, a slide should not exit in front of a swing.
- It is a good idea to place your playcenter in an area that is convenient for adults to watch children at play.
- Create a site free of obstacles that could cause injuries – such as low overhanging tree branches, overhead wires, tree stumps and/or roots, large rocks, bricks and concrete. Additional suggestions in the Suggested Playground Surfacing Section.
- Do not build your playset on top of surfacing material.
- Locate bare metal platforms and slides out of direct sunlight to reduce the likelihood of serious burns. A slide that faces north will receive the least direct sunlight.
- Separate active and quiet activities from each other. For example, locate sandboxes away from swings or use a guardrail or barrier to separate the sandbox from the movement of the swings.

Suggested Playground Surfacing

- Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.
- Shredded bark mulch, wood chips, fine sand and gravel, are added as shock absorbing materials after assembly. If used properly these materials can absorb some of the impact of a child's fall.
- All surface material should extend a minimum of 6'-7" (2.0m) feet in all directions around the play area.
- Do not apply playground surfacing until after the unit is completely constructed. Playset should not be built on top of surfacing.
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging.
- Installations of rubber tiles or poured-in-place surfaces (other than loose fill materials) generally require a professional and are not "do-it-yourself" projects.
- Shall use Playground Surfacing Materials (other than loose fill material) which comply with the safety standard ASTM F1292 Standard specification of Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment.
- Anchors shall be placed as instructed to reduce tipping hazards.

The following chart explains the fall height in feet from which a life threatening head injury would not be expected
Critical Heights in feet (m) of Tested Materials

Material	Uncompressed Depth			Compressed Depth to 9" (228mm)
	6" (152mm)	9" (228mm)	12" (304mm)	
Wood Chips	7' (2.13m)	10-12' (3.0-3.6m)	11' (3.35m)	10' (3.05m)
Double-Shredded Bark Mulch	6' (1.83m)	10-12' (3.0-3.6m)	11' (3.35m)	7' (2.13m)
Engineered Wood Fibers	6' (1.83m)	7' (2.13m)	>12' (3.66m)	6' (1.83m)
Fine Sand	5' (1.52m)	5' (1.52m)	9' (2.74m)	5' (1.52m)
Coarse Sand	5' (1.52m)	5' (1.52m)	6' (1.83m)	4' (1.22m)
Fine Gravel	5' (1.52m)	7' (2.13m)	10' (3.05m)	6' (1.83m)
Medium Gravel	5' (1.52m)	5' (1.52m)	6' (1.83m)	5' (1.52m)
Shredded Tires*	10-12' (3.0-3.6m)	N/A	N/A	N/A

*This data is from tests conducted by independent testing laboratories on a 6-inch depth of uncompressed shredded tire samples produced by four manufacturers. The tests reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

APPENDIX A

The following information is from the United States Consumer Product Safety Commission's Information Sheet for playground surfacing material; also see the following website for additional information: www.cpsc.gov

X3. SECTION 4 OF THE CONSUMER PRODUCT SAFETY COMMISSION'S OUTDOOR HOME PLAYGROUND SAFETY HANDBOOK⁹

X3.1 Select Protective Surfacing—One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification F 1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

X3.1.1 Loose-Fill Materials:

X3.1.1.1 Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial 12-inch level of 12 inches will compress to about a 9-inch depth of surfacing overtime. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9-inch depth.

X3.1.2 Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.

X3.1.3 Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.

X3.1.3.1 Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.

X3.1.3.2 Do not install loose-fill surfacing over hard surfaces such as concrete or asphalt.

X3.1.4 Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles — You may be interested in using surfacing other than loose-fill materials – like rubber tiles or poured-in-place surfaces.

X3.1.4.1 Installations of these surfaces generally require a professional and are not “do-it-yourself” projects.

X3.1.4.2 Review surface specification before purchasing this type of surfacing. Ask the installer/manufacture for a report showing that the product has been tested to the following safety standard: ASTM F 1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment

X3.1.4.3 Check the protective surfacing frequently for wear.

X3.1.5 Placement — Proper placement and maintenance of protective surfacing is essential. Be sure to:

X3.1.5.1 Extend surfacing at least 6 feet from the equipment in all directions.

X3.1.5.2 For to-and-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.

⁹This information has been extracted from the CPSC publications “Playground Surfacing — Technical Information Guide” and “Handbook for Public Playground Safety.” Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772.

The American Society for Testing and Materials takes no position respecting the validity of any patent right asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

The standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either approved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, 100 Barr Harbor Drive, West Conshohocken, PA 19428.

Owner's Manual Play Set

Instructions for Proper Maintenance

IT IS IMPORTANT TO CHECK AND TIGHTEN ALL HARDWARE AT THE BEGINNING AND DURING THE SEASON AS THEY MAY LOOSEN DUE TO WOOD EXPANSION AND CONTRACTION.

At the beginning of each play season

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a non lead-based paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Twice a month during play season

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, & corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Once a month during play season.

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

At the end of each season or when the temperature drops below 32° F

- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Additional Maintenance

- Check the swing beam and hardware every two weeks due to wood expansion and contraction. It is particularly important that this procedure be followed at the beginning of each season.
- Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sand may be necessary to maintain a safe playing environment. Treat your playset with stain regularly, to help prevent severe checking/splitting and other weather damage.
- A waterborne transparent stain has been applied to your playset. This is done for color only. Once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any "rough" spots on your playset. Please note this is a requirement of your warranty.
- Assembling and maintaining the playset on a level location is very important. As your children play, your playset will slowly dig its way into the soil, and it is very important that it settles evenly. Make sure the playset is level and true one each year or at the beginning of each play season.

Disposal Instructions

When the Playcenter use is no longer desired, it should be disassembled and disposed of in such a way that no unreasonable hazards will exist at the time the unit is discarded.



Third Party Assembly

- Customer may, in their sole discretion, elect to use a third party person or service to assemble this product. Backyard Discovery assumes no responsibility or liability for any charge incurred by the Customer for any assembly services. Please see our warranty for more information about damaged and missing part replacement coverage. Backyard Discovery will not reimburse Customer for the price of parts purchased.
- Modifications made by the consumer to the original activity toy shall be carried out according to the instructions of the manufacturer. In particular, instructions shall be provided with kit/accessory about the installation of rope/nets concerning the minimum diameter, the need for fixation ends, overall length, and positioning in relation to other at both structures.

OWNERS SHALL BE RESPONSIBLE FOR MAINTAINING THE LEGIBILITY OF THE WARNING LABELS

Owner's Manual Play Set

Instructions for Proper Maintenance

Your Backyard Discovery structure is designed and constructed of quality materials. As with all outdoor products it will weather and wear. To maximize the enjoyment, safety and life of your structure it is important that you properly maintain it.

About Our Wood

Backyard Discovery uses 100% Cedar (C. Lanceolata) wood. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my product?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. Checking is surface cracks in the wood along the grain. A post (4" x 4") will experience more checking than a board (1" x 4") because the surface and interior moisture content will vary more widely than in thinner wood.

2. Warping results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.

3. Fading happens as a natural change in the wood color as it is exposed to sun-light and will turn grey over time.

How can I reduce the amount of weathering to wood product?

1. Your wood product is coated with a water-based stain. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product). You must apply some type of protection (sealant) to the wood of your product. **Please note this is a requirement of your warranty.** Most weathering is just the normal result of nature and will not affect safety. However if you are concerned that a part has experienced a severe weathering problem please call our customer service department for further assistance.


2. Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sanding may be necessary to maintain a safe environment. Treating your Product with protection (sealant) after sanding will help prevent severe checking/ splitting and other weather damage.

Assembly Tips




Protrusion Hazard

Incorrect

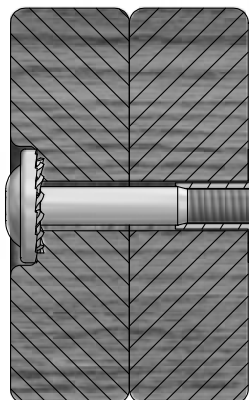

If you see exposed threads and your bolt protrudes beyond the T-Nut you may have over tightened the bolt or used incorrect hardware. If you've overtightened, remove the bolt and add washers to eliminate the protrusion.


Correct

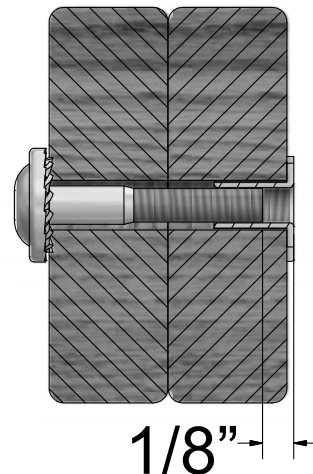

Proper Hardware Assembly


Bolt and T-Nut Assembly

Tap T-nut into the provided hole. Insert your bolt through the lock washer and insert into the provided hole opposite from the T-Nut. Turn clockwise to thread into T-nut. Do not completely tighten until instructed.

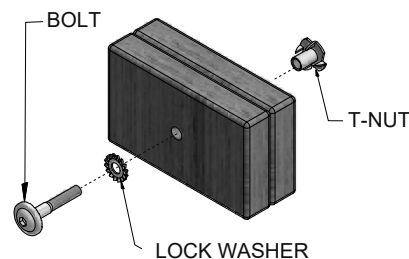


Bolt and Barrel Nut Assembly

Insert barrel nut through the lock washer and press the pair through the provided hole. Insert your bolt through the second lock washer and insert the pair into the provided hole opposite from the barrel nut. Turn clockwise to thread into the barrel nut. Do not completely tighten until instructed.

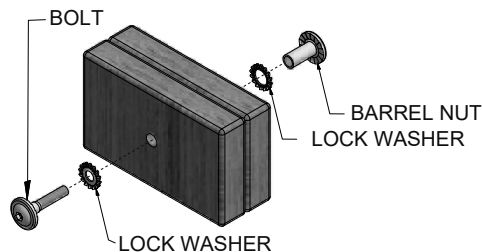

Lag Assembly

Normally there will be a pre-drilled pilot hole on assemblies that require a Lag Screw. If there is no pilot hole, line up the two boards as they are to be attached and use the factory drilled hole as a guide to drill another pilot hole into the adjoining board. This will keep the wood from splitting. Only a lock washer is required for steps with Lag Screws.

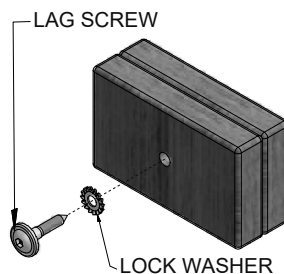

Owner's Manual Play Set

Assembly Tips



ASSEMBLY TIP:

Keep and eye out for these boxes which will contain helpful pictures and information making the assembly process as quick and painless as possible.

Sorting Wood



 
When removing the wood from the boxes we recommend arranging them by part number before you begin assembly. This will allow for faster assembly and easily identify any parts that may be missing or damaged.

Sorting Hardware


NUT BARREL
H100545



SCREW
H100695




T(NUT
H100699

 

WASHER FLAT
H100706



 BOLT HEX
H100716



BOLT
H100718



SCREW PWH
H100742



 
To help with assembly we recommend sorting your hardware bags with the seven digit alpha-numeric number printed on the bags or by hardware type (i.e. bolts, nuts, etc.). Organizing your hardware will make assembly easier.

Modifications


Modifications made by the consumer to the original activity toy shall be carried out according to the instructions of the manufacturer. In particular, instructions shall be provided with kit/accessory about the installation of rope/nets concerning the minimum diameter, the need for fixation at both ends, overall length, and positioning in relation to other structures.

Tools Required for Installation:


(These are the tools that are generally required for assembly of our outdoor products. These tools are not included with the outdoor product purchase.)



(Level 24")

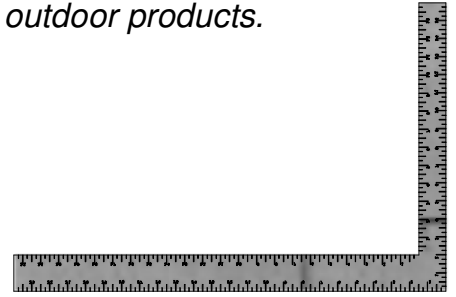

(Square)

 


(Phillips Screw Driver)



(Open End Wrenches 1/2", & 9/16")



 
(Drill Attachments: Phillips Head)




(Tape Measure)



 (Claw Hammer)



(Rubber Mallet - Optional)

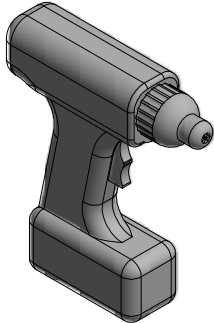

(Cordless Drill or Electric Drill)



(1/8", 3/16", 3/8", & 7/16" Drill Bits)




(3/8" Drive Ratchet, 1/2" & 9/16" STD Sockets 1/2" & 9/16" Deep Sockets)



(An Adult w/ an Adult Helper)




(Ladder)

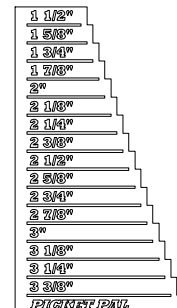

(Picket Pal)


Basic Setup Dimensions

Place the set on level ground, not less than 6 ft 7 in [2 m] from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

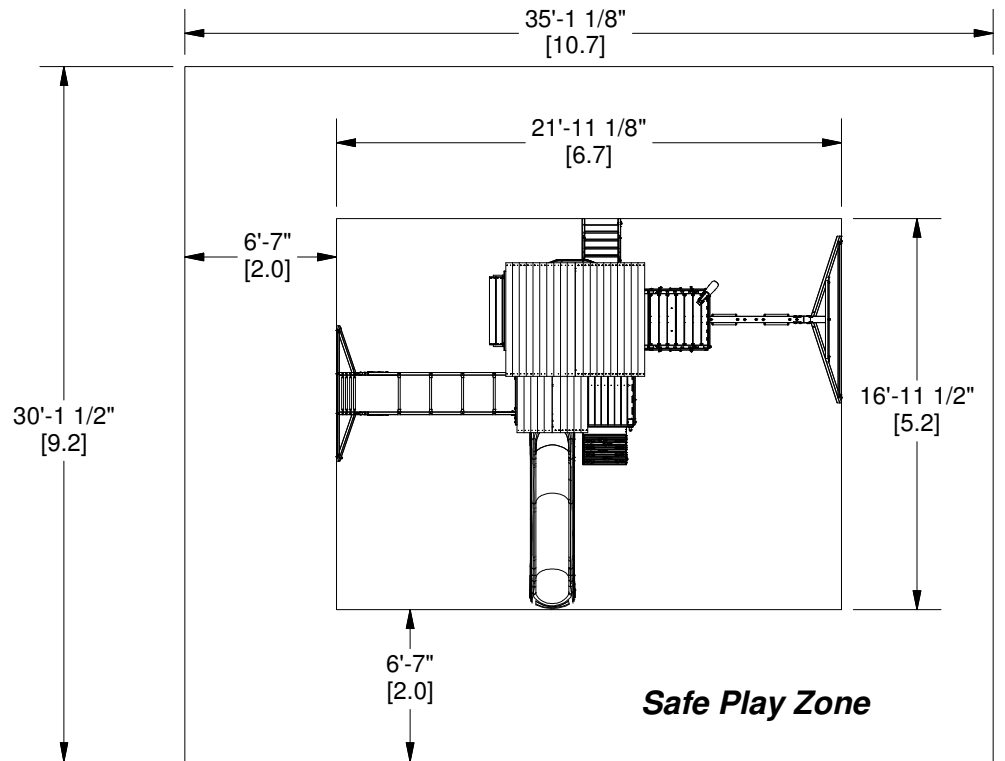

General Information:

Your set has been designed and engineered for children only and for residential use only.
 A maximum of 150 lbs. per child is recommended for play activities designed for individual use.
 A maximum of 120 lbs. per child is recommended for play activities designed for multiple child use.
 A maximum of 9 children is recommended for this swing set.

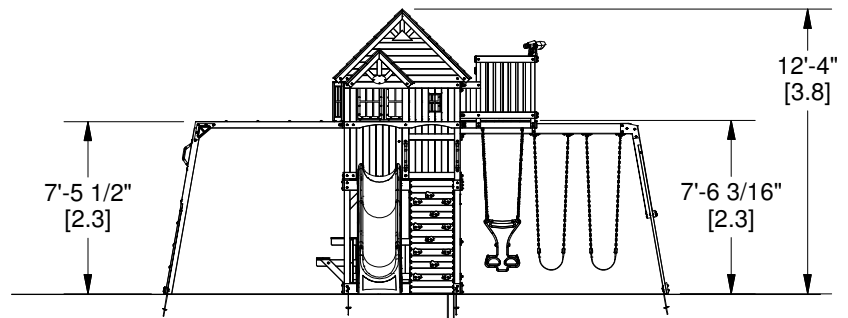

Safe play height: 18'-11" [5.8 m]
 Maximum fall height: 7'-6 3/16" [2.3 m]

Important Assembly Notes

- 1) While assembling unit, take time before and after each phase to make sure fort is level. If fort is not level, assembly will be difficult and improper assembly may result. Extra care must be taken to insure the fort is square.
- 2) Tighten bolts securely, tighten nuts on bolts flush to the tube or member, and place caps over exposed bolts snug to the nut.
- 3) Pay close attention to the ITEMS NEEDED FOR EACH PHASE. They can be a valuable aid when sorting your wood and hardware. Assembly will be made easier if items are sorted by phase.
- 4) Pay close attention to make sure you are using the correct hardware in the correct phases. Using incorrect hardware may result in improper assembly.
- 5) Whenever a T-nut is used, follow these directions. Place T-nut in pre-drilled hole. Tap in with hammer. Place bolt with washers in the opposite side. Hand tighten to make sure the bolt is in the T-nut. DO NOT over tighten.
- 6) Read the steps of each phase thoroughly. The written steps may include important information not shown in the illustrations.

Parts Identification

Wood Components

(NOT TO SCALE)



 
- (1) **A50 - SWING BEAM - W4L04660**
3 3/8"x5 1/4"x89 1/2" (86x134x2274)



- (1) **B1 - TOWER LEG - W4L04562**
3"x3"x89 1/2" (76x76x2274)



- (1) **B2 - TOWER LEG - W4L04561**
3"x3"x89 1/2" (76x76x2274)



- (1) **B3 - TOWER LEG - W4L04564**
3"x3"x59" (76x76x1500)



 
- (1) **B4 - TOWER LEG - W4L04568**
3"x3"x59" (76x76x1500)



- (1) **B5 - BACK LEFT CLUB HOUSE CORNER - W4L04612**
3"x3"x53 7/8" (76x76x1370)



- (1) **B6 - FRONT LEFT CLUB HOUSE CORNER - W4L04615**
3"x3"x53 7/8" (76x76x1370)




- (1) **B7 - FRONT RIGHT CLUB HOUSE CORNER - W4L04617**
3"x3"x53 7/8" (76x76x1370)



- (1) **B8 - BACK RIGHT CLUB HOUSE CORNER - W4L04618**
3"x3"x53 7/8" (76x76x1370)



 
- (1) **E1 - TOWER LEG - W4L04563**
1 3/8"x3 3/8"x59" (36x86x1500)



- (1) **E2 - TOWER LEG - W4L04567**
1 3/8"x3 3/8"x59" (36x86x1500)



 - (2) **E3 - CROWS NEST FLOOR RAIL - W4L11785**
1 3/8"x3 3/8"x38" (36x86x964)



- (2) **E4 - CROWS NEST DECK BRACE - W4L04662**
1 3/8"x3 3/8"x11" (36x86x280)



- (8) **E5 - DECK BRACE - W4L11778**
1 7/16"x3 3/8"x20" (36x86x508)

Parts Identification

Wood Components

(NOT TO SCALE)



 
- (1) **E50 - END SUPPORT - W100949**
1 3/8"x3 3/8"x44 1/8" (36x86x1120)




- (2) **E51 - ANGLE BRACE - W100948**
1 3/8"x3 3/8"x88 3/4" (36x86x2254)




- (2) **E74 - MONKEY BAR RAIL - W102918**
1 3/8"x3 3/8"x77 1/8" (36x86x1959)



 - (1) **E77 - LEFT UPRIGHT - W4L11769**
1 3/8"x3 3/8"x64 3/8" (36x86x1634)



 - (1) **E78 - RIGHT UPRIGHT - W4L11768**
1 3/8"x3 3/8"x64 3/8" (36x86x1634)



- (2) **E79 - MONKEY BAR UPRIGHT - W100995**
1 3/8"x3 3/8"x88 1/8" (36x86x2237)



- (1) **F1 - TELESCOPE MOUNTING BLOCK - W4L04674**
1 3/8"x2 3/8"x3" (36x60x76)



 
- (2) **F3 - CROWS NEST WALL SUPPORT - W4L11779**
1 3/8"x2 3/8"x37 1/2" (36x60x952)




- (2) **F2 - CROWS NEST WALL SUPPORT - W4L11780**
1 3/8"x2 3/8"x37 1/2" (36x60x952)



- (1) **G1 - TOP FLOOR RAIL - W4L04566**
1"x5 1/4"x80" (24x134x2032)



 - (1) **G2 - TOP FLOOR RAIL - W4L04569**
1"x5 1/4"x80" (24x134x2032)



- (1) **G3 - FLOOR RAIL - W4L04571**
1"x5 1/4"x60 1/2" (24x134x1537)



- (1) **G4 - FLOOR RAIL - W4L04675**
1"x5 1/4"x60 1/2" (24x134x1537)



- (4) **G5 - BAY WINDOW HEADER - W4L04659**
1"x5 1/4"x45 1/4" (24x134x1150)

Parts Identification

Wood Components

(NOT TO SCALE)



- (1) **G6 - FLOOR RAIL - W4L11777**
1"x5 1/4"x60 1/2" (24x134x1537)



- (2) **G7 - BOTTOM FLOOR RAIL - W4L11775**
1"x5 1/4"x80" (24x134x2032)



- (1) **G50 - GROUND BOARD - W100947**
1"x5 1/4"x86 3/4" (24x134x2202)



- (1) **H1 - WALL RAIL - W4L04620**
1"x3 3/8"x80" (24x86x2032)



- (1) **H2 - WALL RAIL - W4L04622**
1"x3 3/8"x80" (24x86x2032)



 
- (1) **H3 - PICNIC TABLE RAIL - W4L04578**
1"x3 3/8"x67 1/4" (24x86x1708)




- (2) **H4 - ROOF SUPPORT RAIL - W4L04623**
1"x3 3/8"x67 1/4" (24x86x1709)



- (1) **H5 - FLOOR RAIL - W4L04608**
1"x3 3/8"x60 1/2" (24x86x1537)



 - (1) **H6 - BACK CLUB HOUSE RAIL - W4L04621**
1"x3 3/8"x60 1/2" (24x86x1537)



- (1) **H7 - FRONT CLUB HOUSE WALL RAIL - W4L04625**
1"x3 3/8"x60 1/2" (24x86x1537)



- (1) **H8 - CLUB HOUSE LEG - W4L04637**
1"x3 3/8"x50 1/2" (24x86x1284)



- (2) **H9 - CLUB HOUSE WALL BOARD - W4L11784**
1"x3 3/8"x50 1/2" (24x86x1284)



- (1) **H10 - PORCH LEG - W4L04683**
1"x3 3/8"x50 1/2" (24x86x1282)



- (1) **H11 - PORCH LEG - W4L04610**
1"x3 3/8"x50 1/2" (24x86x1282)

Parts Identification

Wood Components

(NOT TO SCALE)



- (4) **H12 - ROOF RAFTER - W4L04640**
1"x3 3/8"x50 3/8" (24x86x1278)



- (1) **H13 - CLUB HOUSE WALL RAIL - W4L04624**
1"x3 3/8"x50 1/4" (24x86x1277)



 
- (1) **H14 - SWING BEAM MOUNT - W4L04628**
1"x3 3/8"x50 1/4" (24x86x1277)



- (4) **H15 - PICNIC TABLE SEAT - W4L04600**
1"x3 3/8"x35 3/8" (24x86x897)



- (1) **H16 - PICNIC TABLE SEAT RAIL - W4L04597**
1"x3 3/8"x32" (24x86x812)



- (1) **H17 - PICNIC TABLE SEAT RAIL - W4L04599**
1"x3 3/8"x32" (24x86x812)



- (1) **H18 - CLUB HOUSE WALL RAIL - W4L04616**
1"x3 3/8"x29 7/8" (24x86x758)



- (1) **H19 - CROWS NEST FLOOR RAIL - W4L04663**
1"x3 3/8"x27" (24x86x686)



- (4) **H20 - PORCH ROOF RAFTER - W4L04655**
1"x3 3/8"x24 1/2" (24x86x622)



- (1) **H21 - CROWS NEST FLOOR SUPPORT - W4L04665**
1"x3 3/8"x24 1/8" (24x86x614)



- (2) **H23 - PICNIC TABLE BRACE - W4L04598**
1"x3 3/8"x17 1/2" (24x86x444)



- (1) **H24 - PICNIC TABLE TOP SUPPORT - W4L04601**
1"x3 3/8"x16 1/2" (24x86x418)



- (2) **H25 - TOP FLOOR SUPPORT - W4L04606**
1"x3 3/8"x3" (24x86x76)



- (3) **H26 - FLOOR JOIST - W4L04573**
1"x3 3/8"x60 1/2" (24x86x1537)

Parts Identification

Wood Components

(NOT TO SCALE)



- (1) **H27 - PICNIC TABLE SUPPORT - W4L04574**
1"x3 3/8"x28 5/8" (24x86x728)



- (1) **H28 - FRONT WALL RAIL - W4L11774**
1"x3 3/8"x60 1/2" (24x86x1537)



- (2) **H29 - CROWS NEST WALL RAIL - W4L11783**
1"x3 3/8"x30 5/8" (24x86x778)



- (2) **H30 - CROWS NEST WALL RAIL - W4L11782**
1"x3 3/8"x29 7/8" (24x86x758)



- (2) **H31 - CROWS NEST WALL RAIL - W4L11781**
1"x3 3/8"x38 7/8" (24x86x988)



- (2) **H72 - ROCKWALL RAIL - W4L04677**
1"x3 3/8"x61 3/4" (24x86x1570)



- (5) **H76 - LADDER RUNG - W4L11770**
1"x3 3/8"x18 1/8" (24x86x460)



- (1) **H77 - ATTACHMENT BOARD - W4L11766**
1"x3 3/8"x20 1/8" (24x86x512)



- (2) **H81 - MONKEY BAR BRACE - W100993**
1"x3 3/8"x53 1/4" (24x86x1352)



- (1) **H82 - MONKEY BAR GROUND BOARD - W100994**
1"x3 3/8"x70 3/8" (24x86x1786)



- (1) **K2 - FLOOR RAIL - W4L04570**
5/8"x5 1/4"x60 1/2" (16x134x1537)



 
- (1) **K3 - FLOOR RAIL - W4L04572**
5/8"x5 1/4"x60 1/2" (16x134x1537)



- (1) **K5 - CLUB HOUSE WALL RAIL - W4L04626**
5/8"x5 1/4"x50 1/4" (16x134x1277)



- (2) **K6 - TRIANGLE SUNBURST - W4L04827**
5/8"x5 1/4"x10 3/8" (16x134x265)



- (9) **L1 - CROWS NEST FLOOR BOARD - W4L04664**
5/8"x4 3/8"x27" (16x112x686)



- (2) **L2 - SAND BOX SEAT - W4L11776**
5/8"x4 3/8"x24 1/8" (16x112x610)

 
Parts Identification

Wood Components

(NOT TO SCALE)



- (1) **M1 - TOP WALL RAIL - W4L04619**
5/8"x3 3/8"x80" (16x86x2032)



- (2) **M2 - BOTTOM WALL RAIL - W4L04596**
5/8"x3 3/8"x80" (16x86x2032)



- (1) **M3 - BOTTOM WALL RAIL - W4L04579**
5/8"x3 3/8"x60 1/2" (16x86x1537)



- (2) **M4 - CROWS NEST WALL RAIL - W4L11773**
5/8"x3 3/8"x29 7/8" (16x86x758)



- (2) **M5 - GABLE BOARD - W4L04641**
5/8"x3 3/8"x59 1/2" (16x86x1510)



 
- (1) **M6 - CLUB HOUSE WALL BOARD - W4L04635**
5/8"x3 3/8"x53 7/8" (16x86x1370)



- (2) **M7 - GABLE BOARD - W4L04642**
5/8"x3 3/8"x52 5/8" (16x86x1338)



- (7) **M8 - CLUB HOUSE WALL BOARD - W4L04630**
5/8"x3 3/8"x50 1/2" (16x86x1284)



- (2) **M9 - CLUB HOUSE WALL BOARD - W4L04631**
5/8"x3"x50 1/2" (16x76x1284)



- (1) **M10 - CLUB HOUSE WALL RAIL - W4L04614**
5/8"x3 3/8"x50 1/4" (16x86x1277)



- (1) **M11 - SOFFIT CAP - W4L04653**
5/8"x3 3/8"x50 1/4" (16x86x1277)



- (1) **M12 - GABLE BOARD - W4L04650**
5/8"x3 3/8"x45 7/8" (16x86x1166)



- (4) **M13 - PICNIC TABLE TOP - W4L04602**
5/8"x3 3/8"x41 1/4" (16x86x1049)



- (1) **M14 - GABLE BOARD - W4L04651**
5/8"x3 3/8"x39 1/8" (16x86x994)



- (1) **M16 - CENTER PICNIC TABLE TOP - W4L04603**
5/8"x3"x38 1/4" (16x76x973)

Parts Identification

Wood Components

(NOT TO SCALE)



 
- (2) **M17 - FRONT WINDOW WALL BOARD - W4L04639**
5/8"x3 3/8"x35" (16x86x889)



- (1) **M18 - GABLE BOARD - W4L04652**
5/8"x3 3/8"x32 3/8" (16x86x822)



- (1) **M19 - FRONT PORCH ROOF SUPPORT - W4L04658**
5/8"x3 3/8"x30 5/8" (16x86x779)




- (3) **M21 - CLUB HOUSE WALL RAIL - W4L04613**
5/8"x3 3/8"x30 1/4" (16x86x768)



- (4) **M22 - CLUB HOUSE WALL BOARD - W4L04633**
5/8"x3 3/8"x29 7/8" (16x86x758)



 - (2) **M23 - CLUB HOUSE WALL BOARD - W4L04634**
5/8"x3 1/8"x29 7/8" (16x80x758)



- (23) **M24 - WALL BOARD - W4L04632**
5/8"x3 3/8"x29 7/8" (16x86x758)



- (2) **M26 - WALL BOARD - W4L04636**
5/8"x3 3/8"x26 1/8" (16x86x664)



 
- (18) **M27 - BOTTOM WALL BOARD - W4L04580**
5/8"x3 3/8"x21 3/8" (16x86x544)



- (2) **M28 - GABLE WINDOW BOARD - W4L04647**
5/8"x3 3/8"x19 1/2" (16x86x496)



- (2) **M29 - GABLE WINDOW BOARD - W4L04643**
5/8"x3 3/8"x16 1/8" (16x86x410)



- (1) **M30 - PICNIC TABLE TOP CLEAT - W4L04604**
5/8"x3 3/8"x16" (16x86x406)

 


- (2) **M31 - GABLE WINDOW BOARD - W4L04644**
5/8"x3 3/8"x12 3/4" (16x86x324)

Parts Identification

Wood Components

(NOT TO SCALE)



- (2) **M32 - CROWS NEST WALL RAIL - W4L04671**
5/8"x3 3/8"x10" (16x86x254)



- (2) **M33 - FRONT WINDOW WALL BOARD - W4L04638**
5/8"x3 3/8"x6 3/8" (16x86x162)



- (1) **M34 - WALL RAIL - W4L04611**
5/8"x3 3/8"x6 3/8" (16x86x162)



- (1) **M61 - ATTACHMENT BOARD - W4L04681**
5/8"x3 3/8"x22 7/8" (16x86x580)



- (1) **M73 - REAR SUPPORT - W4L11767**
5/8"x3 3/8"x20 1/8" (16x86x512)



- (10) **M74 - ROCK WALL BOARD - W4L04678**
5/8"x3 3/8"x22 7/8" (16x86x580)



 
- (4) **M75 - ROCK WALL BOARD - W4L04829**
5/8"x3 3/8"x22 7/8" (16x86x580)



- (4) **M76 - ROCK WALL BOARD - W4L04830**
5/8"x3 3/8"x22 7/8" (16x86x580)



- (2) **N1 - CLUB HOUSE WALL BOARD - W4L04629**
5/8"x2 3/8"x50 1/2" (16x60x1284)



- (1) **N2 - SOFFIT CAP - W4L04654**
5/8"x2 3/8"x50 1/4" (16x60x1277)



 
- (2) **N3 - ROOF SUPPORT - W103535**
5/8"x2 3/8"x47" (16x60x1193)



- (2) **N4 - CROWS NEST WALL BOARD - W4L04673**
5/8"x2 3/8"x19" (16x60x483)



- (1) **N5 - FRONT PORCH GABLE TRIM - W4L04656**
5/8"x2 3/8"x15" (16x60x381)



- (2) **N6 - WINDOW TRIM - W4L04646**
5/8"x2 3/8"x12 1/4" (16x60x310)

Parts Identification

Wood Components

(NOT TO SCALE)



- (2) **N7 - GABLE TRIM - W4L04648**
5/8"x2 3/8"x11 1/2" (16x60x292)



 
- (2) **N8 - FRONT PORCH GABLE TRIM - W4L04657**
5/8"x2 3/8"x9 1/2" (16x60x241)



- (4) **N9 - GABLE TRIM - W4L04649**
5/8"x2 3/8"x6 1/2" (16x60x165)



- (2) **N10 - GABLE BOARD - W4L04645**
5/8"x2 3/8"x27 5/8" (16x60x702)




- (18) **O1 - CROWS NEST WALL BOARD - W4L04672**
5/8"x1 3/8"x32 1/2" (16x34x825)



- (1) **O2 - SAFETY BOARD - W4L04605**
5/8"x1 3/8"x28 5/8" (16x34x726)



 - (1) **O70 - SLIDE MOUNTING BOARD - W102822**
5/8"x1 3/8"x20 3/8" (16x34x517)



- (1) **SP50 - SWING BEAM SUPPORT - W103545**
3 3/8"x3 3/8"x48 3/8" (86x86x1228)



- (2) **Y1 - TOP FLOOR BOARD - W4L04609**
5/8"x4"x78" (16x102x1980)



- (2) **Y2 - BOTTOM FLOOR BOARD - W4L04577**
5/8"x4"x35 1/4" (16x102x895)



- (1) **Y3 - ROCK WALL END BOARD - W4L04682**
5/8"x4"x22 7/8" (16x102x580)



- (4) **FP1 - BOTTOM FLOOR PANEL - W2A01485**
1 5/8"x13 1/2"x35 3/8" (40x344x897)




- (4) **FP2 - FLOOR PANEL - W2A01486**
1 1/4"x13 1/2"x81 7/8" (32x344x2080)


Parts Identification

Wood Components


(NOT TO SCALE)

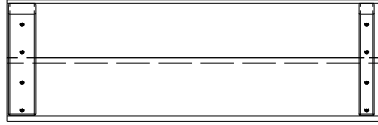


- (1) **RP1 - LEFT PORCH PEAK ROOF PANEL - W2A02630**
1 5/8"x10 1/2"x32 7/8" (42x268x834)

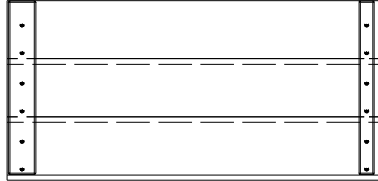


- (1) **RP2 - LEFT PORCH ROOF PANEL - W2A02628**
1 5/8"x15 5/8"x32 7/8" (42x396x834)

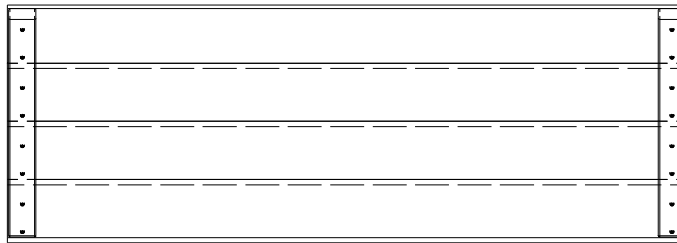


- (2) **RP3 - PEAK ROOF PANEL - W2A02626**
1 5/8"x20 5/8"x59" (42x524x1499)

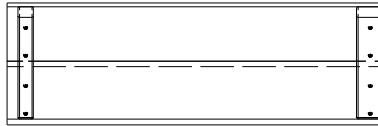


- (1) **RP4 - RIGHT PORCH PEAK ROOF PANEL - W2A02631**
1 5/8"x10 1/2"x32 7/8" (42x268x834)

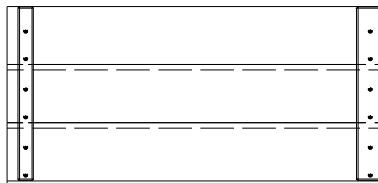

- (1) **RP5 - RIGHT PORCH ROOF PANEL - W2A02629**
1 5/8"x15 5/8"x32 7/8" (42x396x834)

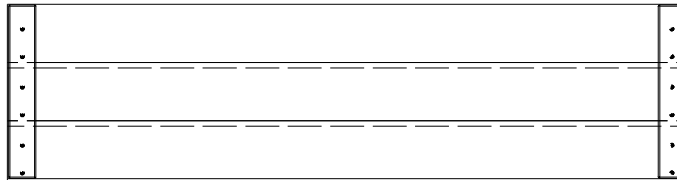


















- (4) **RP6 - ROOF PANEL - W2A02627**
1 5/8"x15 5/8"x59" (42x396x1499)

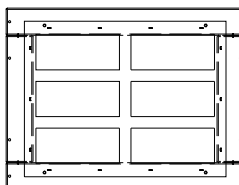

- (6) **WP1 - BAY WINDOW PANEL - W2A01496**
7/8"x15 3/4"x20 3/4" (21x400x526)


Parts Identification

Hardware

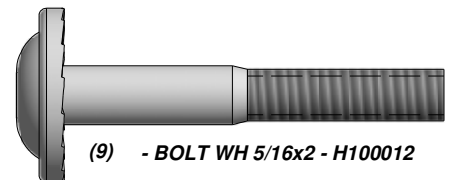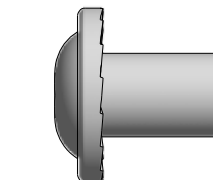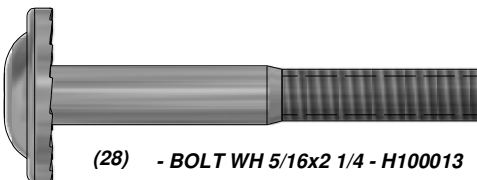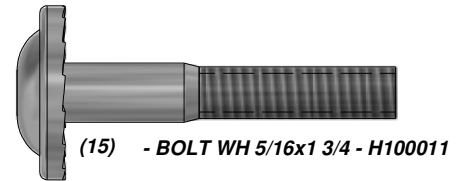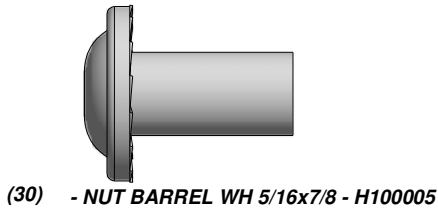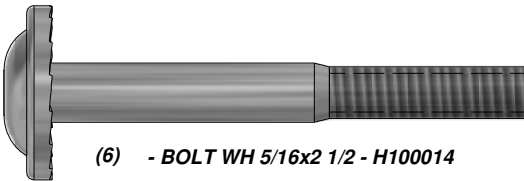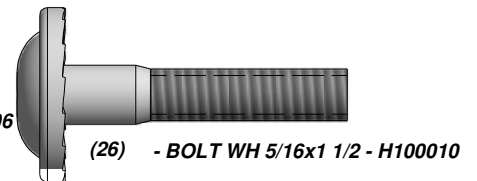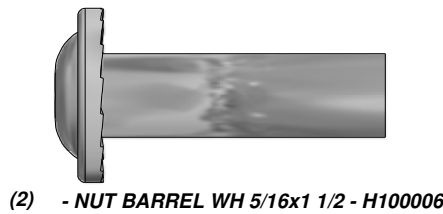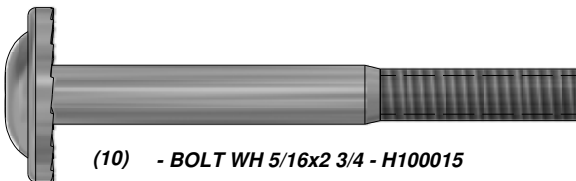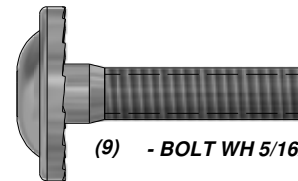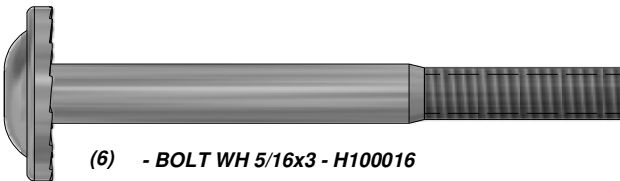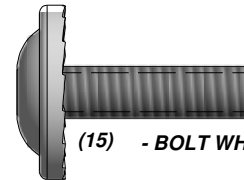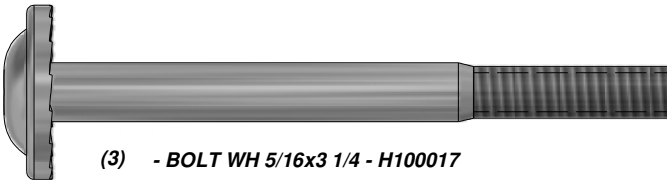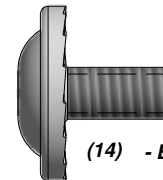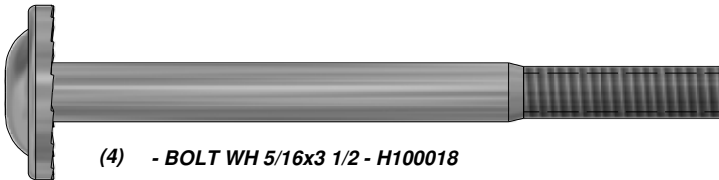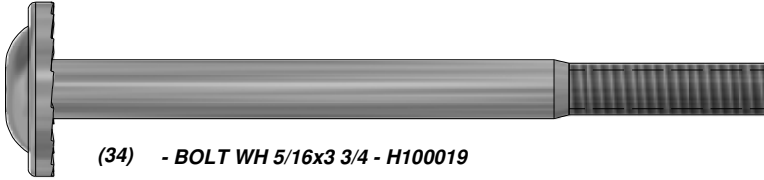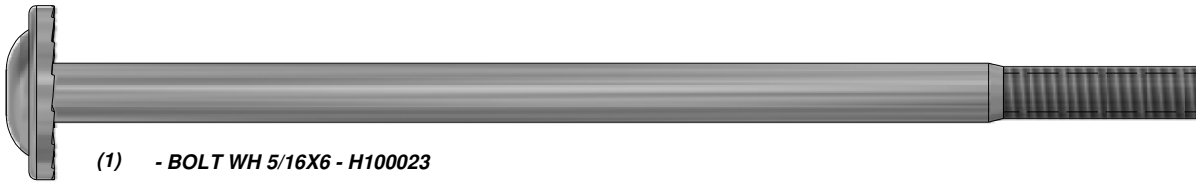

Parts Identification

Hardware

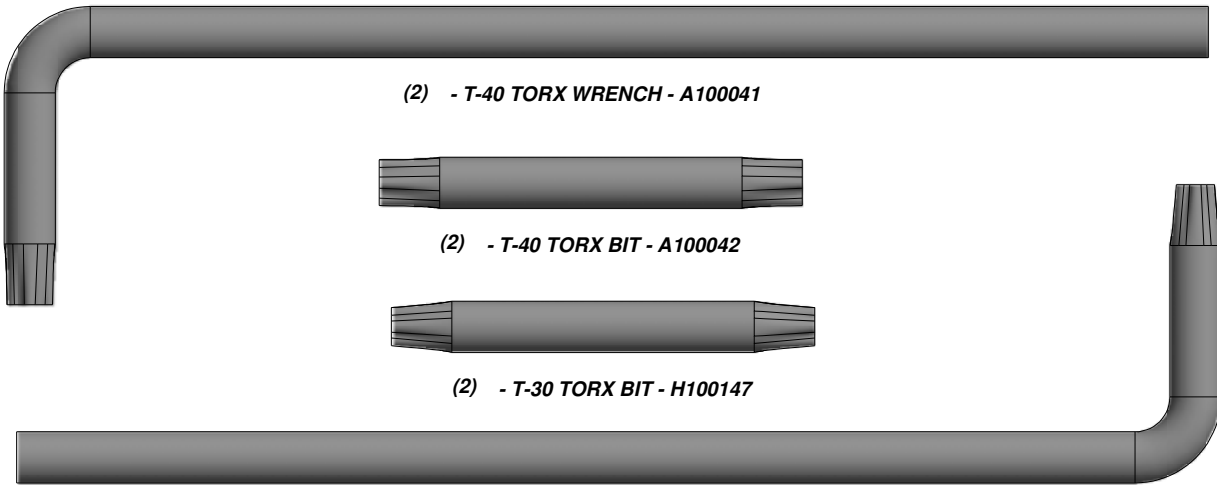

(2) - T-40 TORX WRENCH - A100041




(2) - T-40 TORX BIT - A100042




(2) - T-30 TORX BIT - H100147

(2) - T-30 TORX WRENCH - H100114

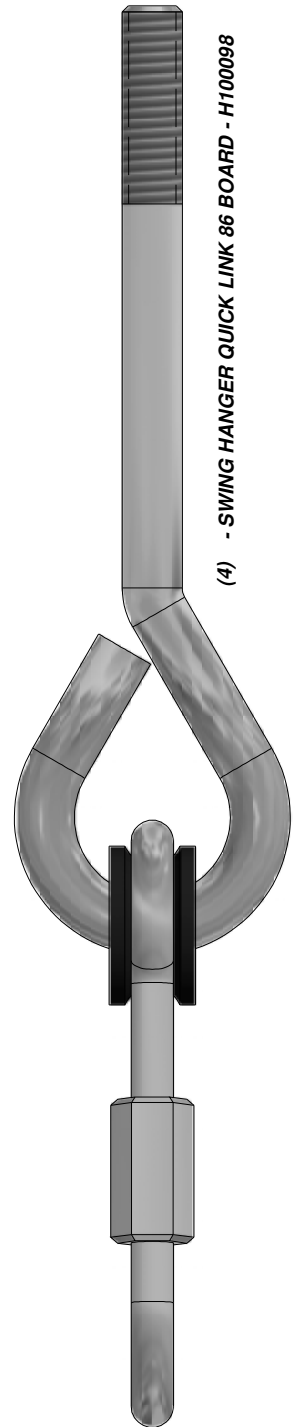

 (4) - SWING HANGER QUICK LINK 86 BOARD - H100098



(9) - BOLT HEX 3/8x5-1/2 - H100654



 
(2) - BOLT HEX 5/16x2-3/4 - H100047




(4) - BOLT HEX 5/16x2 - H100044




(2) - BOLT HEX 5/16x1 3/4 - H100043



(4) - BOLT HEX 5/16x1 1/4 - H100042

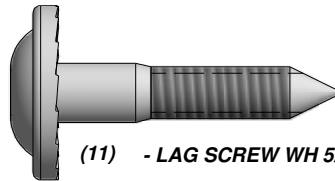


(11) - LAG SCREW WH 5/16x1 1/2 - H100026

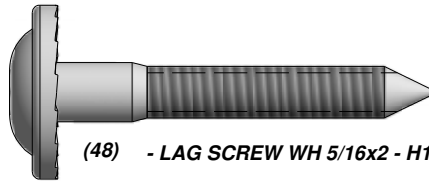

(48) - LAG SCREW WH 5/16x2 - H100027




(42) - LAG SCREW WH 5/16x2 1/2 - H100028

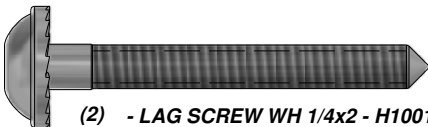

(2) - LAG SCREW WH 1/4x2 - H100146




(17) - SCREW TAPPING 14x1-1/2 - H100109

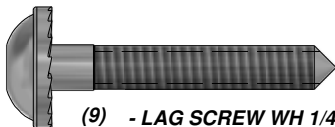

(9) - LAG SCREW WH 1/4x1-1/2 - H100145



 (1) - SCREW TAPPING 14x2-1/2 - H100082




(26) - BOLT PTH 1/4x3/4 - H100063




(2) - LAG SCREW HEX 5/16x2-1/2 - H100068



 (9) - SCREW PWH 8x3/4 - H100070



 (9) - NUT LOCK 5/16 - H100110



(9) - LAG SCREW HEX 5/16x1-1/2 - H100066



(33) - SCREW PWH 8x5/8 - H100128

Parts Identification

Hardware



(17) - SCREW PFH 8x2 1/2 - H100090



(37) - SCREW PFH 8x2 1/4 - H100091



(88) - SCREW PFH 8x2 - H100111



(4) - SCREW PFH 8x1-3/4" - H100089



(326) - SCREW PFH 8x1-1/2" - H100086



 
(2) - SCREW PFH 8x1-1/4" - H100087




(405) - SCREW PFH 8x1-1/8" - H100088




(9) - SCREW PFH 8x1 - H100085




(4) - SCREW PPH 4x1/2 WZ - H100360

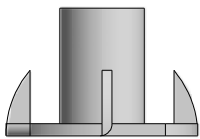


(9) - T-NUT 3/8 - H100073

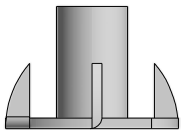

 
(147) - T-NUT 5/16 - H100074




(26) - T-NUT 1/4 - H100072

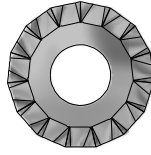


(198) - WASHER LOCK EXT 8x19 - H100030

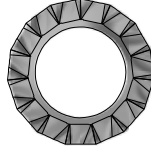

 
(28) - WASHER LOCK EXT 12x19 - H100031




(28) - WASHER LOCK INT 8x15 - H100108

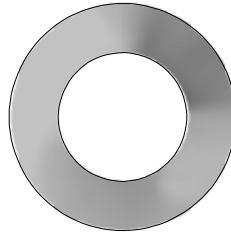


(4) - WASHER SAFETY 17x30 - H100103

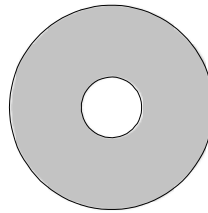


(30) - WASHER FLAT 8x27 - H100105

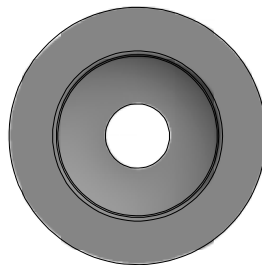


(1) - FLANGE CUP WASHER - H100225

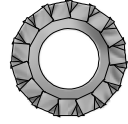

 
(2) - WASHER LOCK EXT 6x15 - H100138




(22) - WASHER SPLIT 5/16 - H100095

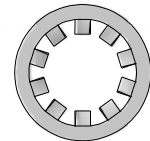

(9) - WASHER LOCK INT 10x18 - H100107

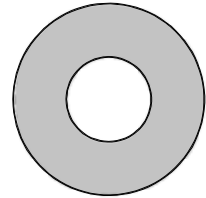


(9) - WASHER FLAT 11x25 - H100102

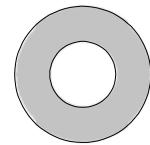


(11) - WASHER FLAT 9x18 - H100106

Parts Identification

Accessories
(NOT TO SCALE)

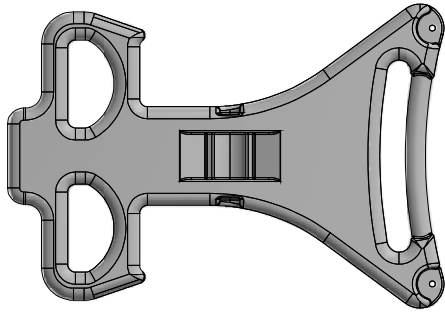

(2) DJ - GLIDER ARM LIGHT GREEN - A100021

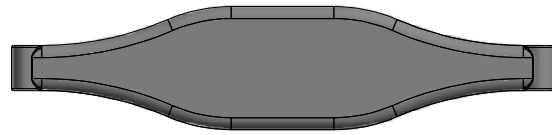


(1) DN - GLIDER SEAT DARK GREEN - A100025




(2) DP - SWING SEAT GREEN - A100027




(1) - VERTICAL ID PLATE - A4M01150

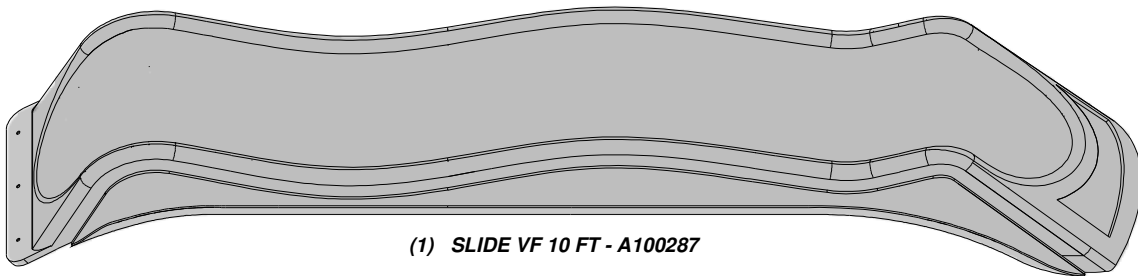

(1) SLIDE VF 10 FT - A100287

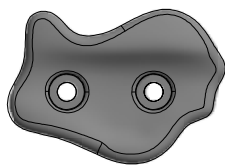

(6) - GREEN HC ROCK #2 - A6P00037

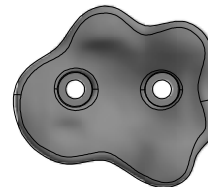

(6) - GREEN HC ROCK #1 - A6P00036



(8) EC - METAL RUNG 559 GREEN - A100045



(1) HC - BYD ID TAG (LARGE) AGES 3-10 - A100164

Parts Identification

Accessories (NOT TO SCALE)



(4) EF - CHAIN GREEN 57" - A100047



(4) HW - CHAIN GREEN 44" - A100048



(2) JV - HAND GRIP GREEN 816 C/C - A100134



(2) TA - LADDER RUNG 629 GREEN - A100324




(6) FX - HAND GRIP METAL GREEN 381 c/c - A100118




(8) FA - QUICK LINK - A100069




(1) - "A" REVISION TAG - A100314

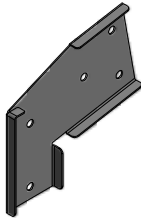


(1) TB - SWING BEAM EXTENSION BRACKET-LEFT - A100325

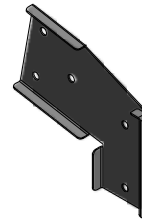


(1) TC - SWING BEAM EXTENSION BRACKET-RIGHT - A100326

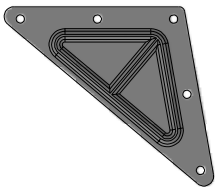


(2) QZ - TRIANGLE PLATE 100° 5 HOLE - A100294

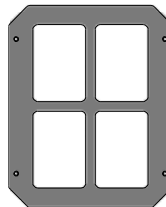

(2) GK - WINDOW 216x267 GREEN - A100146

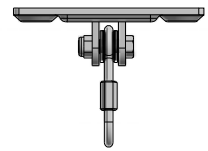


(4) SWING HANGER - A4M00505

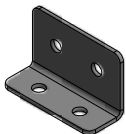

(5) WM - L BRACKET 51x32x82x3.175 - A100396



(8) KC - METAL GROUND STAKE BROWN - A100178

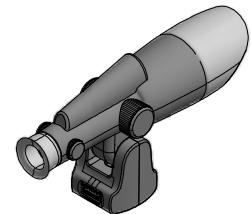


(1) TELESCOPE - A100104



(2) - GROUND STAKE REBAR - A4M00527



 (15) TZ - L BRACKET 2.5x38x50x55 - A100340



(1) **E77 - LEFT UPRIGHT - W4L11769**
 1 3/8"x3 3/8"x64 3/8" (36x86x1634)




 
(5) **H76 - LADDER RUNG - W4L11770**
 1"x3 3/8"x18 1/8" (24x86x460)

**5 FOOT LADDER ASSEMBLY
 STEP 1**



SCREW PFH
 (10) 8x2
 H100111

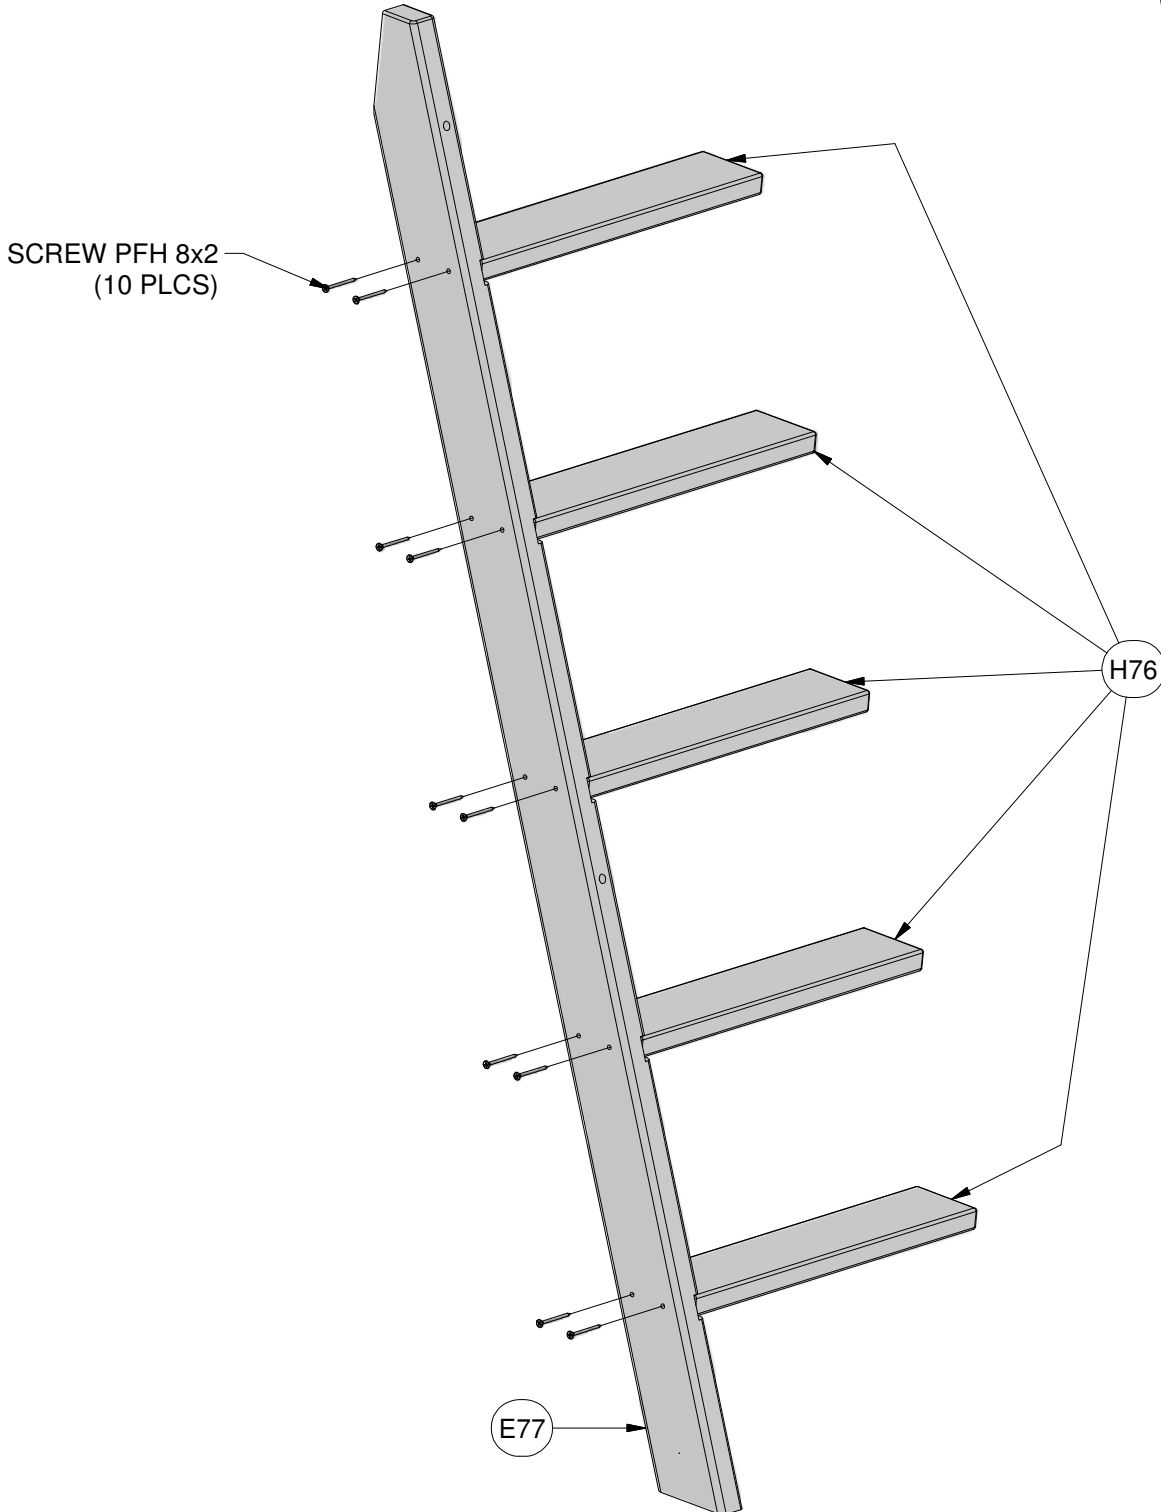




(1) **E78 - RIGHT UPRIGHT - W4L11768**
1 3/8"x3 3/8"x64 3/8" (36x86x1634)

5 FOOT LADDER ASSEMBLY
STEP 2



SCREW PFH
(10) 8x2
H100111

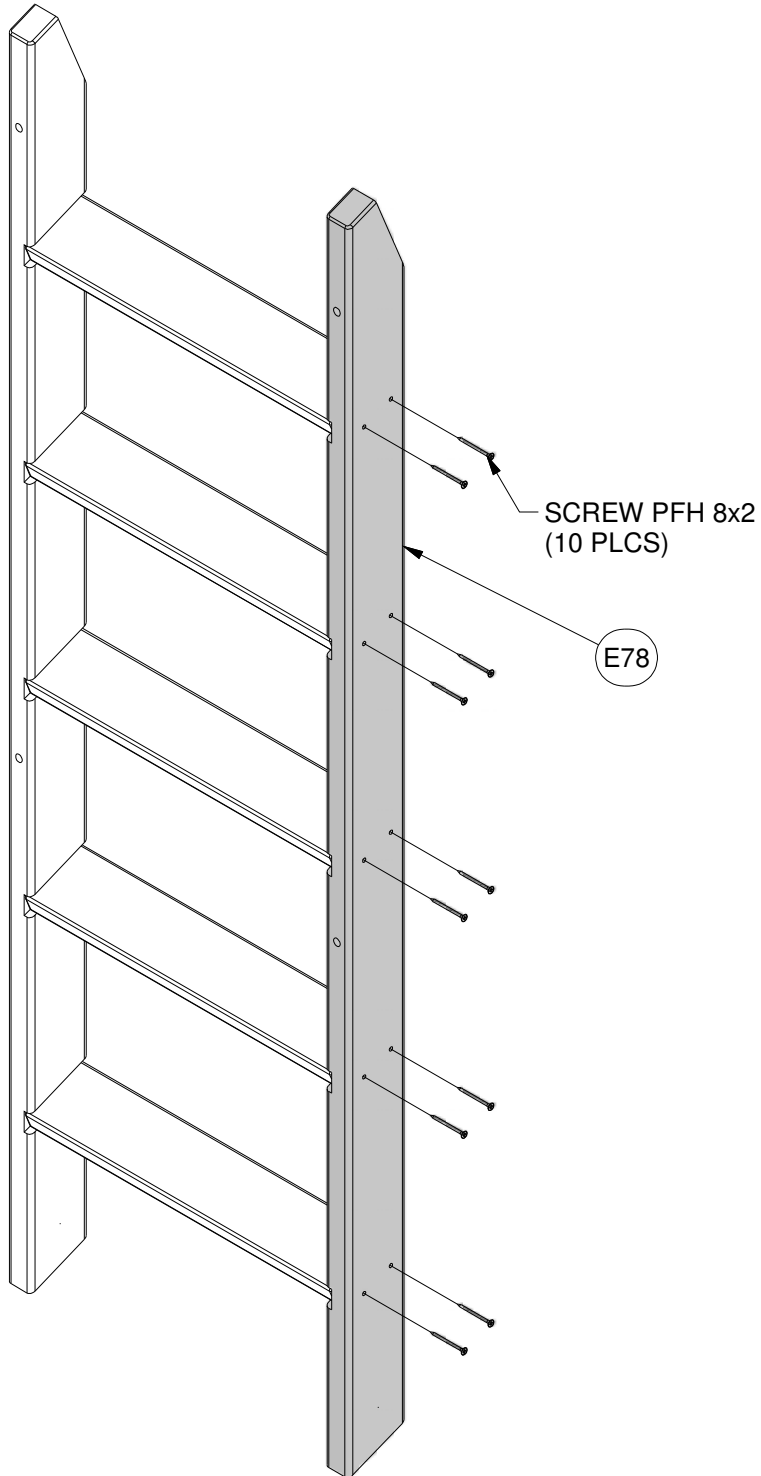



(1) **M73 - REAR SUPPORT - W4L11767**
5/8"x3 3/8"x20 1/8" (16x86x512)




(1) **H77 - ATTACHMENT BOARD - W4L11766**
1"x3 3/8"x20 1/8" (24x86x512)

5 FOOT LADDER ASSEMBLY STEP 3



SCREW PFH
(8) 8x2
H100111

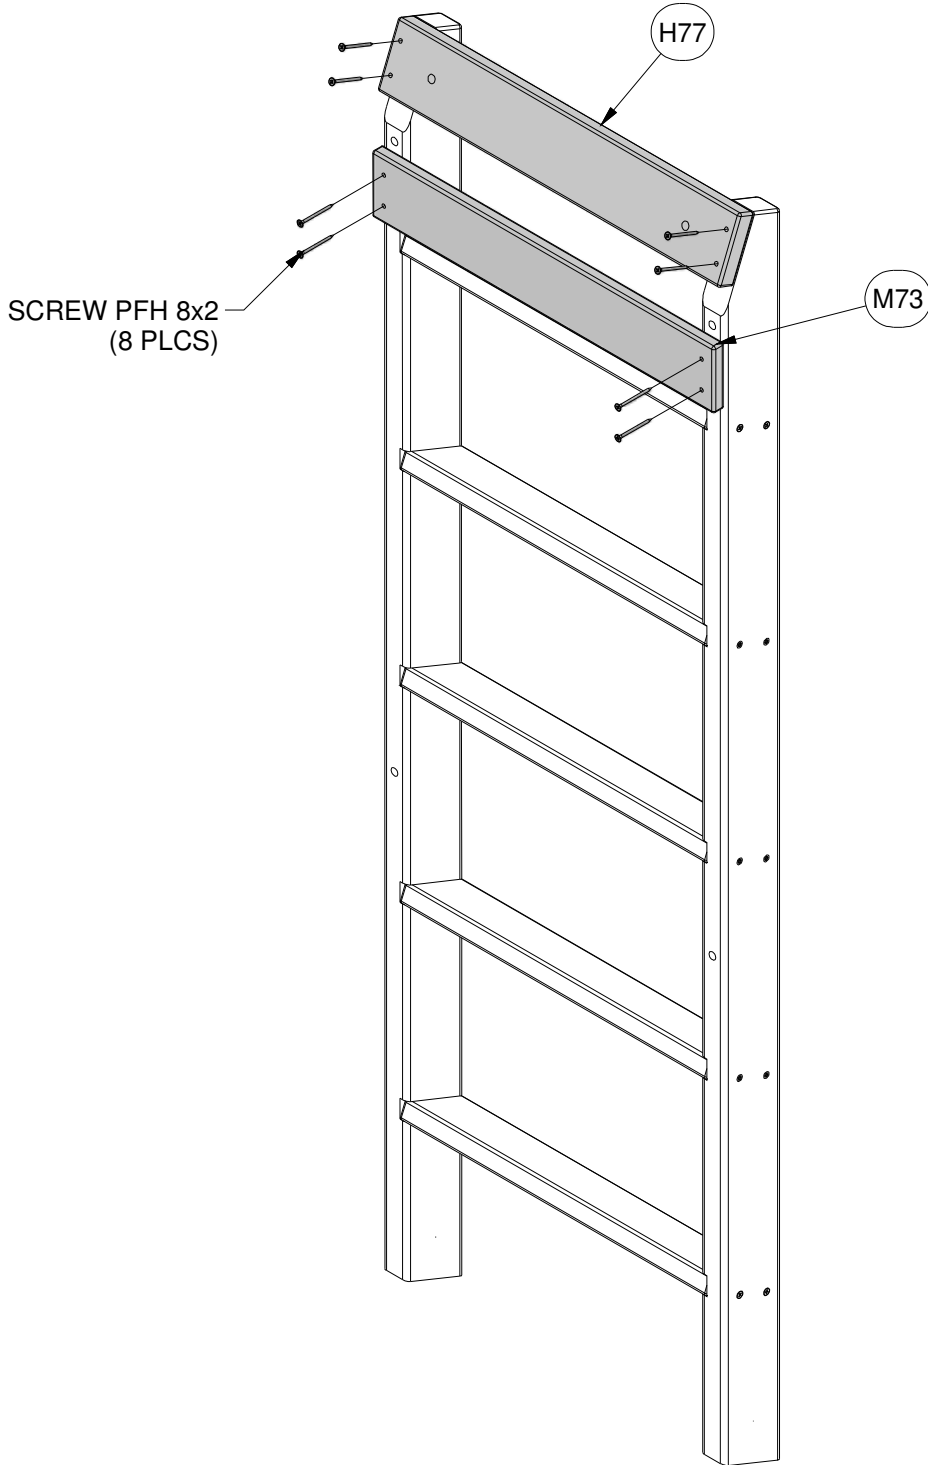




(2) JV - HAND GRIP GREEN 816 C/C - A100134

**5 FOOT LADDER ASSEMBLY
STEP 4**

BOLT WH
(4) 5/16x3 1/2
H100018

T-NUT 5/16
(4) H100074

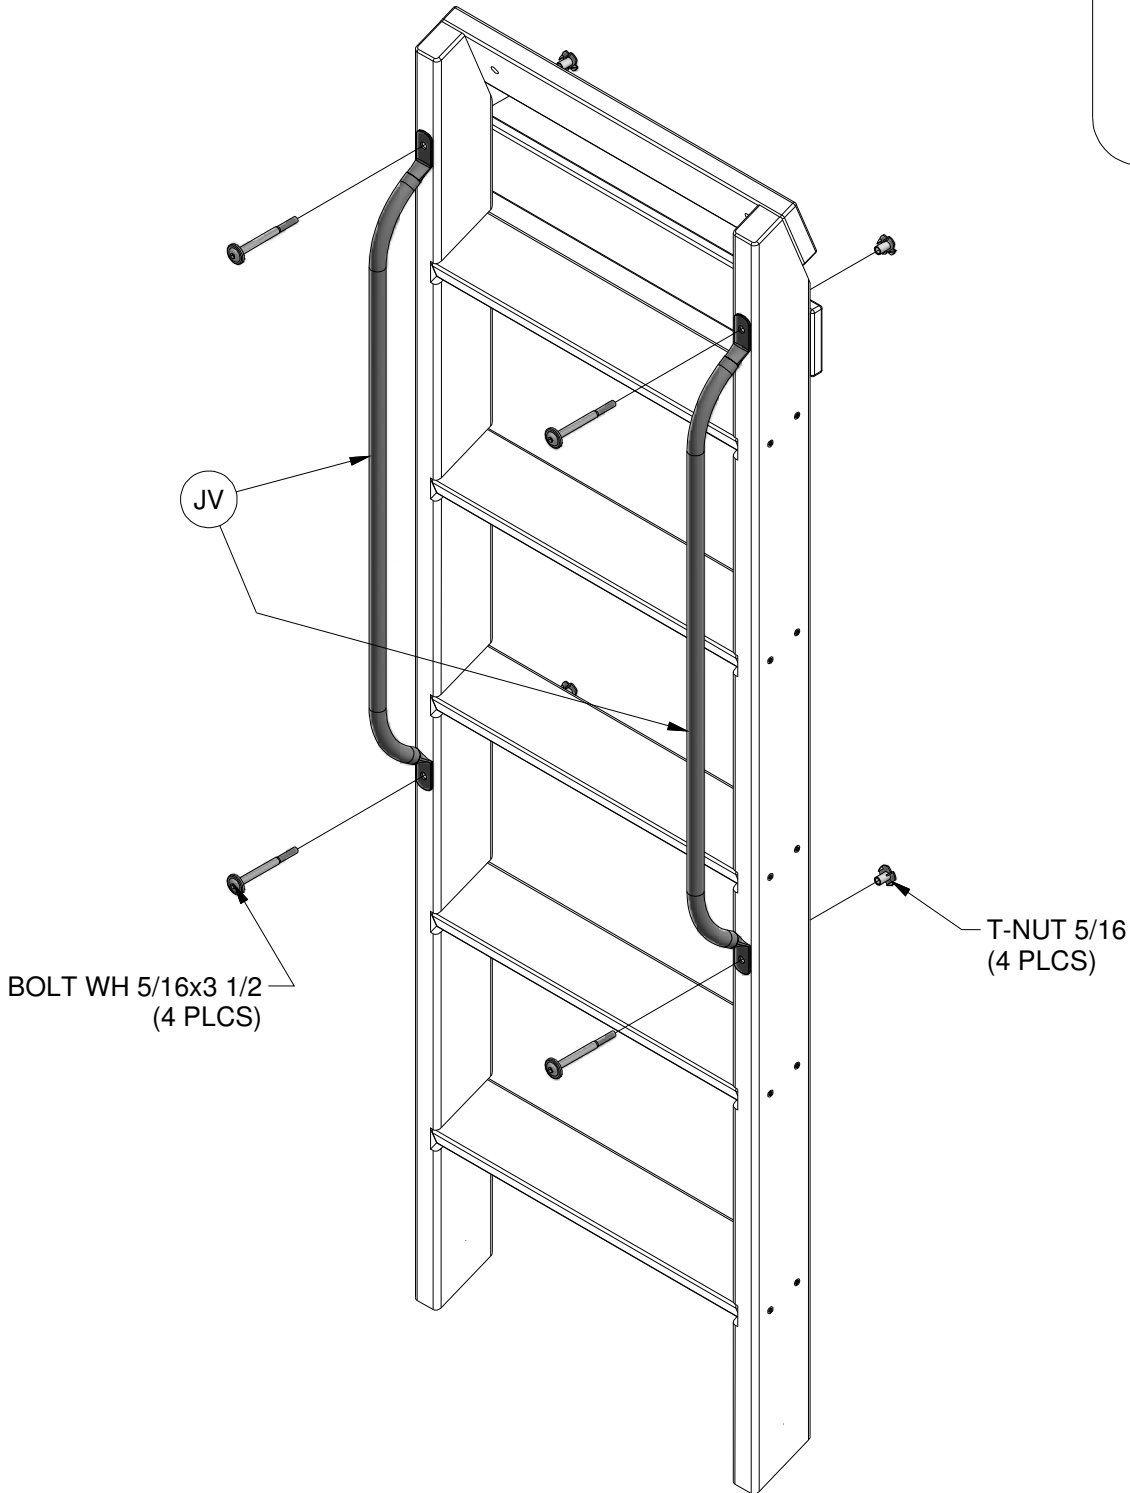





(4) **M76 - ROCK WALL BOARD - W4L04830**
5/8"x3 3/8"x22 7/8" (16x86x580)



(4) **M75 - ROCK WALL BOARD - W4L04829**
5/8"x3 3/8"x22 7/8" (16x86x580)

ROCK WALL ASSEMBLY
STEP 1

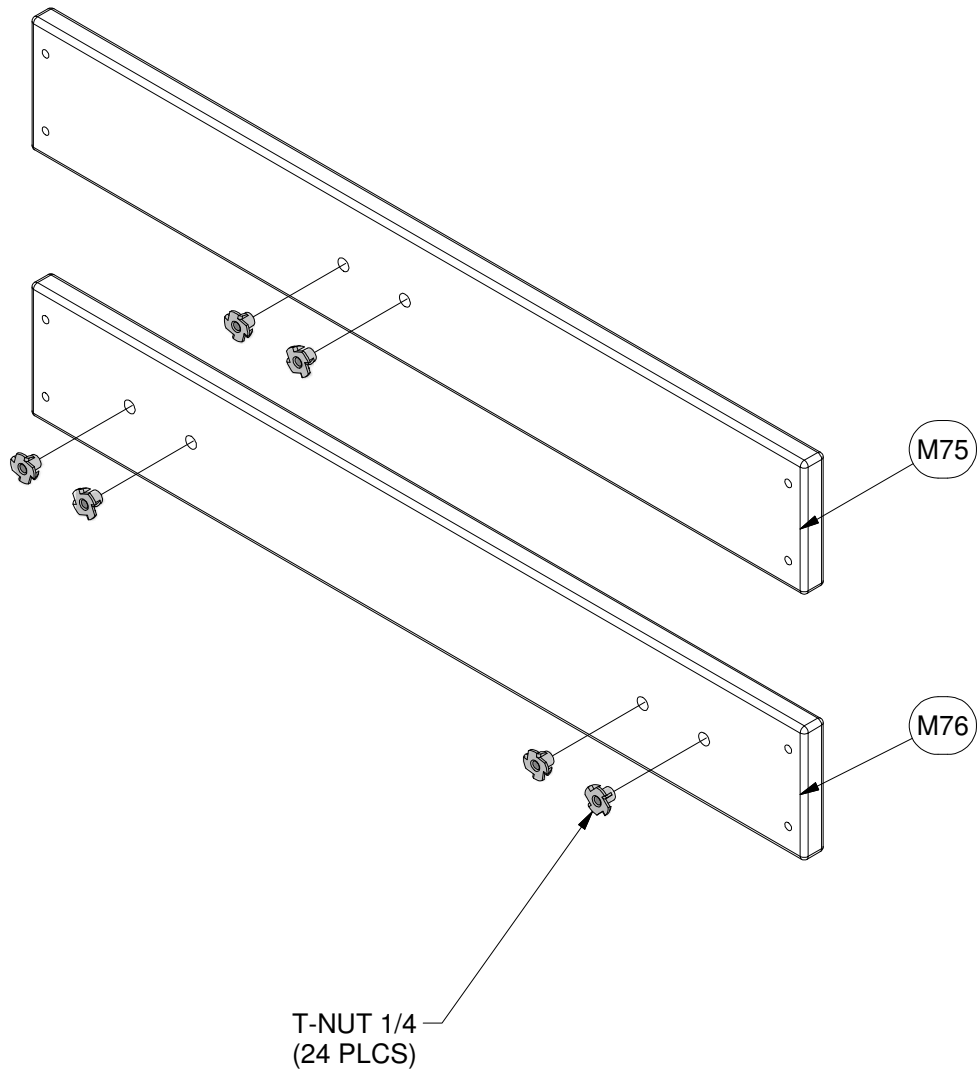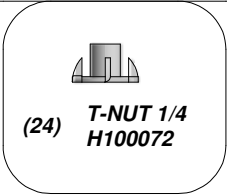




(10) **M74 - ROCK WALL BOARD - W4L04678**
5/8"x3 3/8"x22 7/8" (16x86x580)



(4) **M76 - ROCK WALL BOARD - W4L04830**
5/8"x3 3/8"x22 7/8" (16x86x580)





 (4) **M75 - ROCK WALL BOARD - W4L04829**
5/8"x3 3/8"x22 7/8" (16x86x580)




(2) **H72 - ROCKWALL RAIL - W4L04677**
1"x3 3/8"x61 3/4" (24x86x1570)

ROCK WALL ASSEMBLY STEP 2

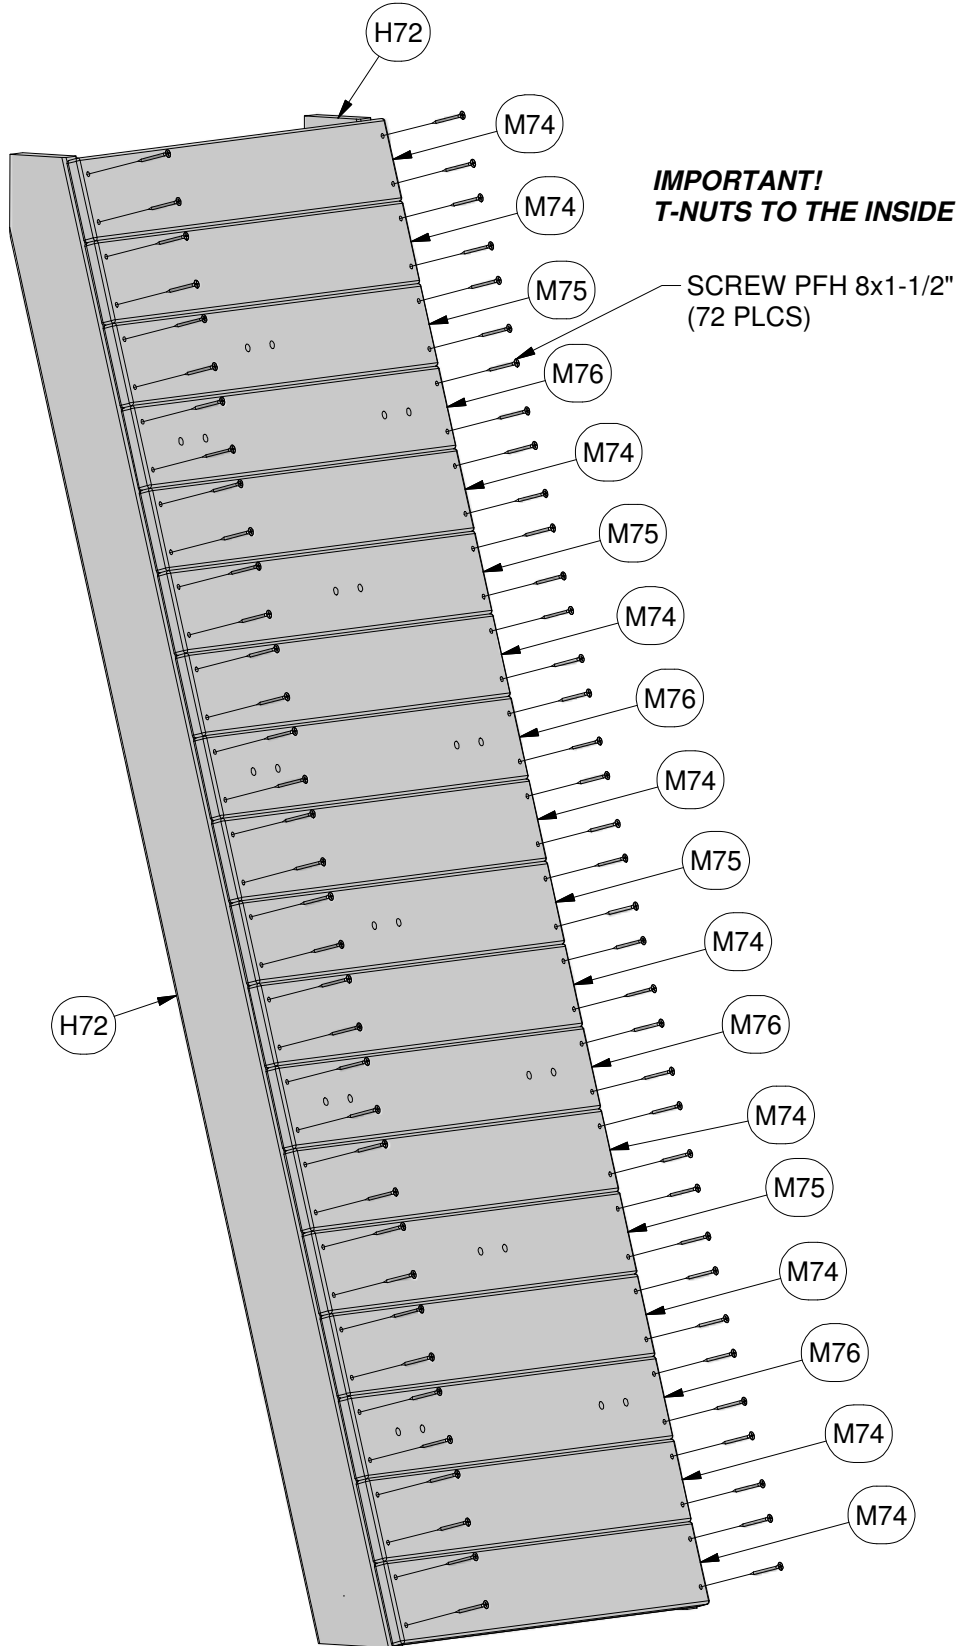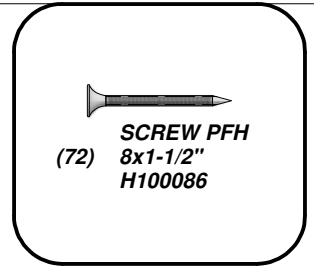




RECOMMENDED BOARD PLACEMENT PATTERN

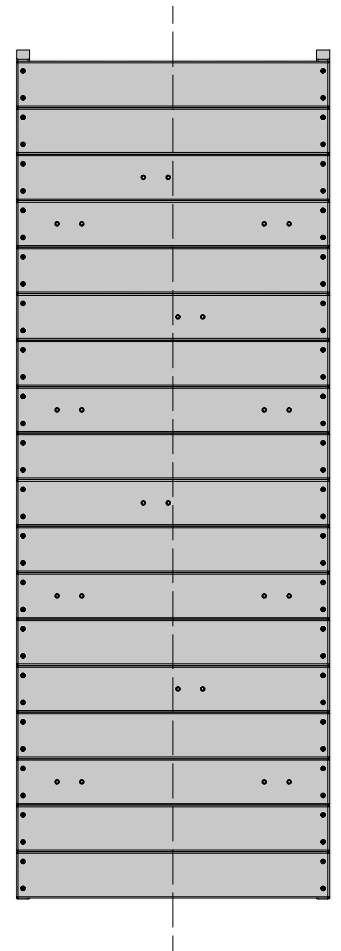




- (1) **Y3 - ROCK WALL END BOARD - W4L04682**
5/8"x4"x22 7/8" (16x102x580)


ROCK WALL ASSEMBLY
STEP 3

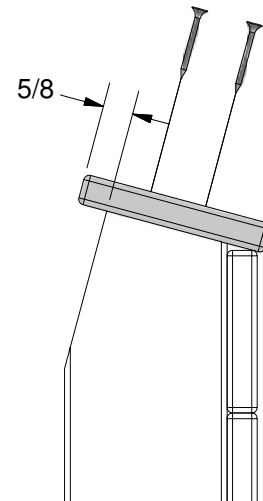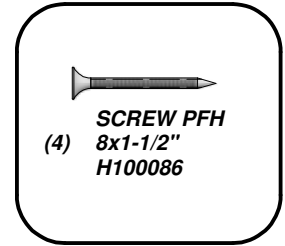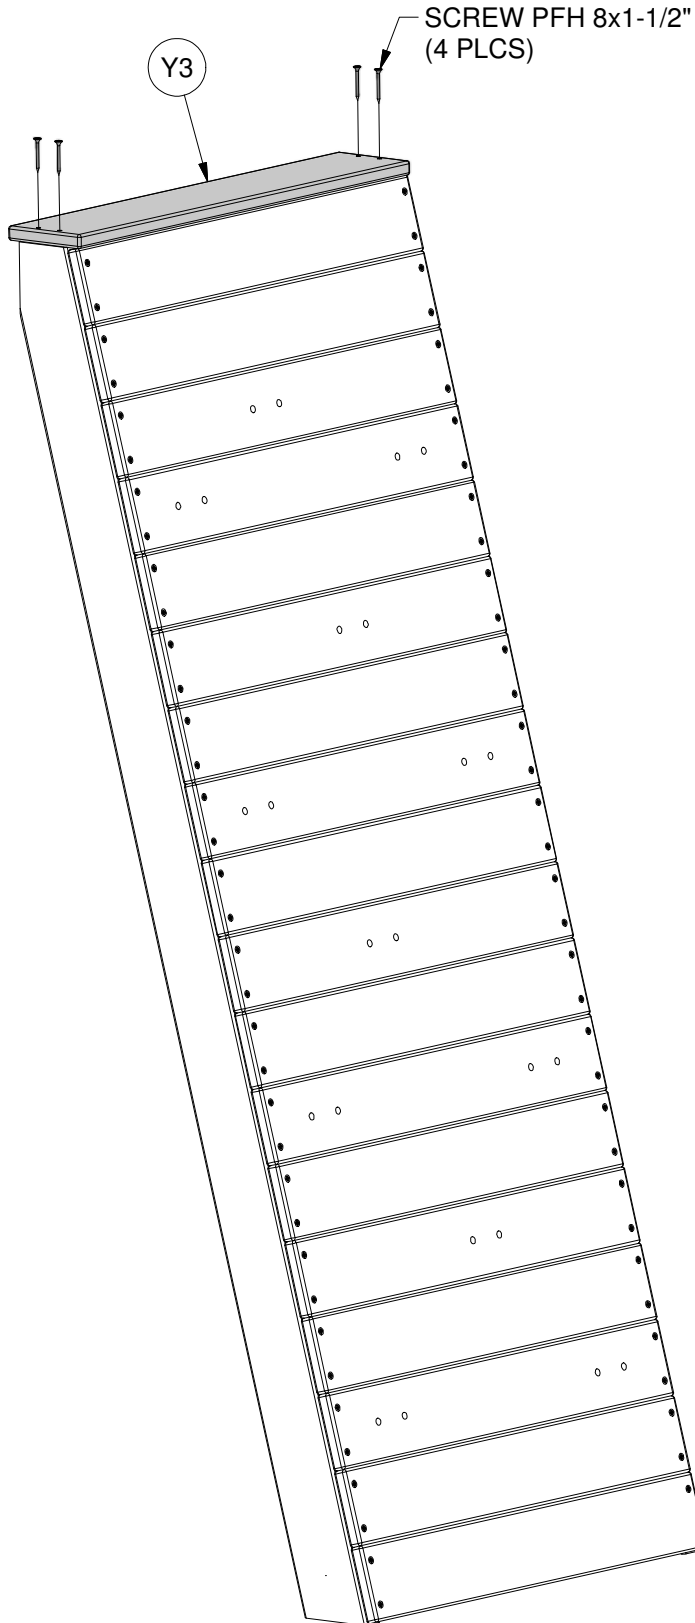

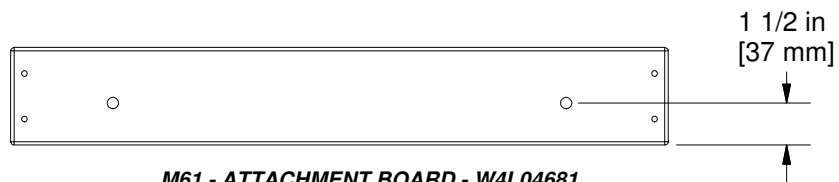


(1) **M61 - ATTACHMENT BOARD - W4L04681**
 5/8"x3 3/8"x22 7/8" (16x86x580)



ROCK WALL ASSEMBLY
STEP 4



 SCREW PFH
 (4) 8x1-1/2"
 H100086



(2) **T-NUT 5/16**
 H100074

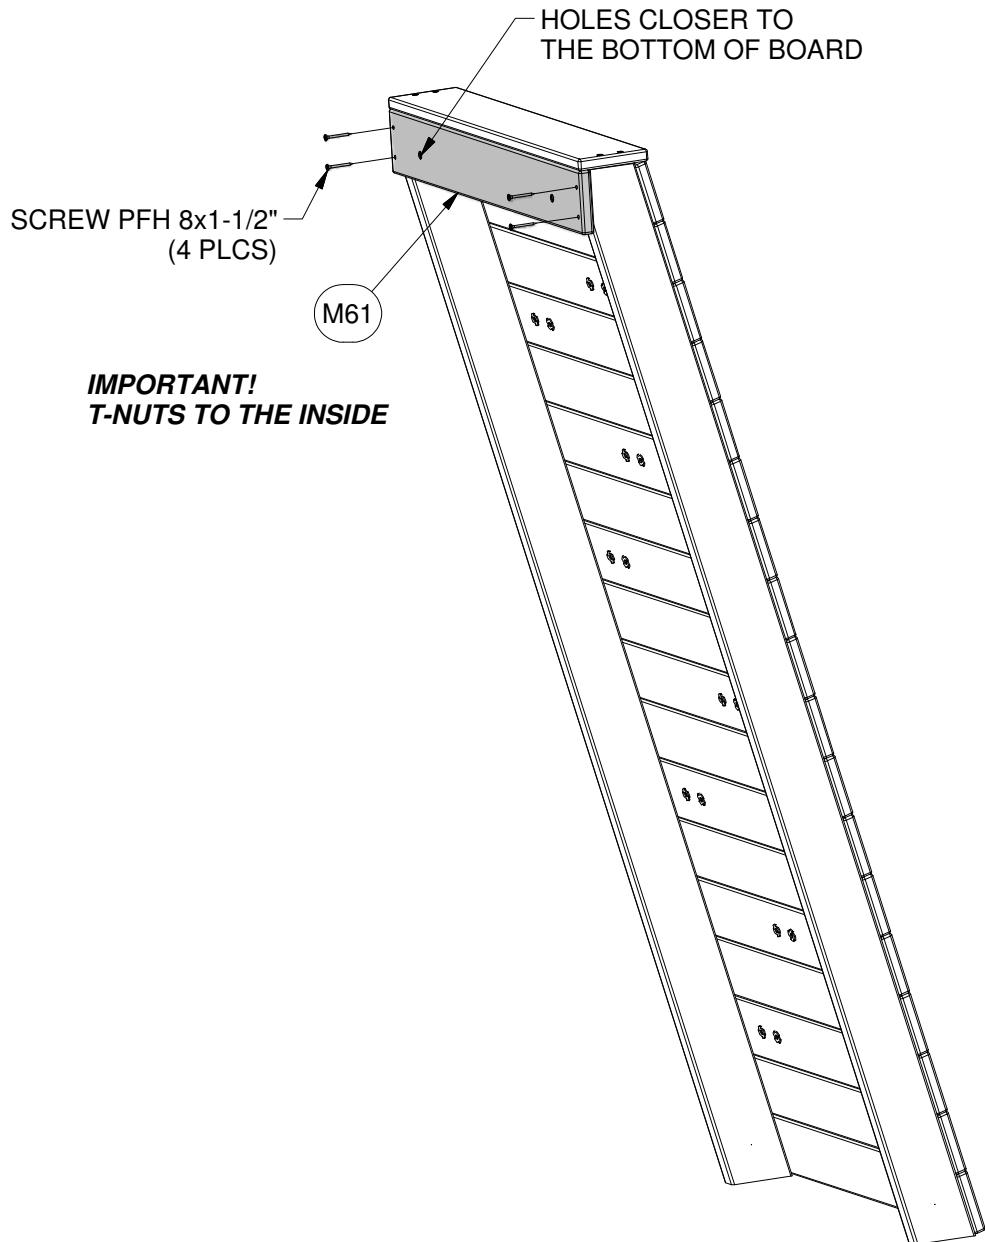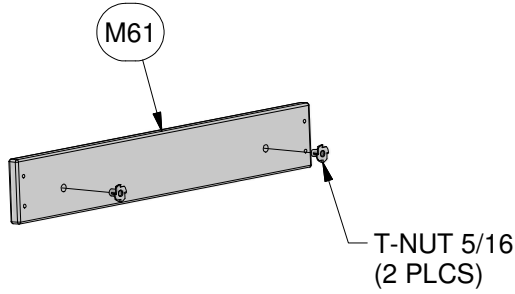

IMPORTANT!
T-NUTS TO THE INSIDE






(6) - GREEN HC ROCK #1 - A6P00036




(6) - GREEN HC ROCK #2 - A6P00037

ROCK WALL ASSEMBLY STEP 5

BOLT PTH (24) 1/4x3/4 H100063	WASHER LOCK INT (24) 8x15 H100108

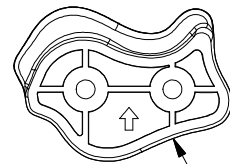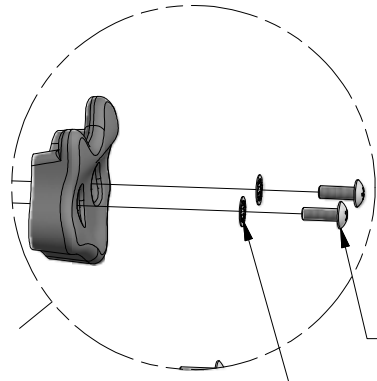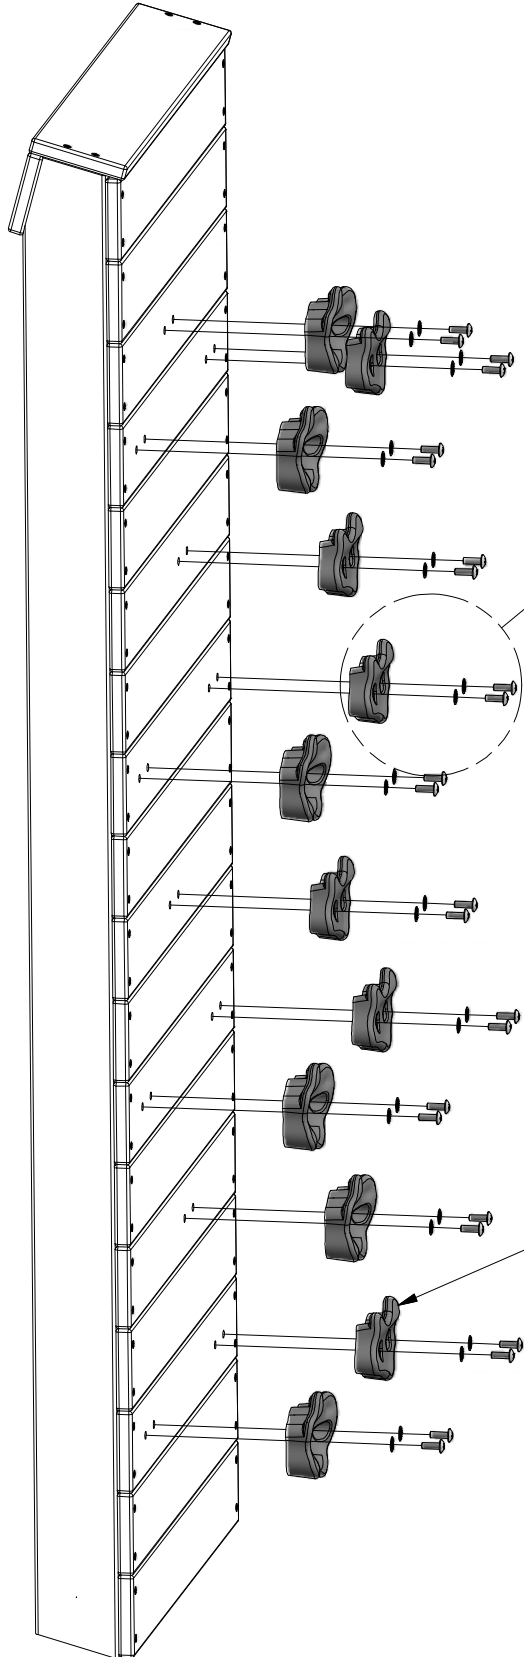

RANDOMLY PLACE
ALL 12 ROCKS
ON ROCK WALL.

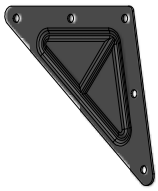

(4) TZ - L BRACKET 2.5x38x50x55 - A100340

(2) QZ - TRIANGLE PLATE 100° 5 HOLE - A100294



(2) E74 - MONKEY BAR RAIL - W102918
1 3/8"x3 3/8"x77 1/8" (36x86x1959)





(4) EC - METAL RUNG 559 GREEN - A100045

MONKEY BAR ASSEMBLY STEP 1

SCREW TAPPING (8) 14x1-1/2 H100109	T-NUT 5/16 (6) H100074	NUT LOCK (2) 5/16 H100110
BOLT WH (6) 5/16x1 1/2 H100010	BOLT WH (2) 5/16x2 H100012	WASHER (2) FLAT 8x27 H100105

 TIP:
SCREW TAPPING 14x1-1/2
USE A #3 PHILLIPS BIT.

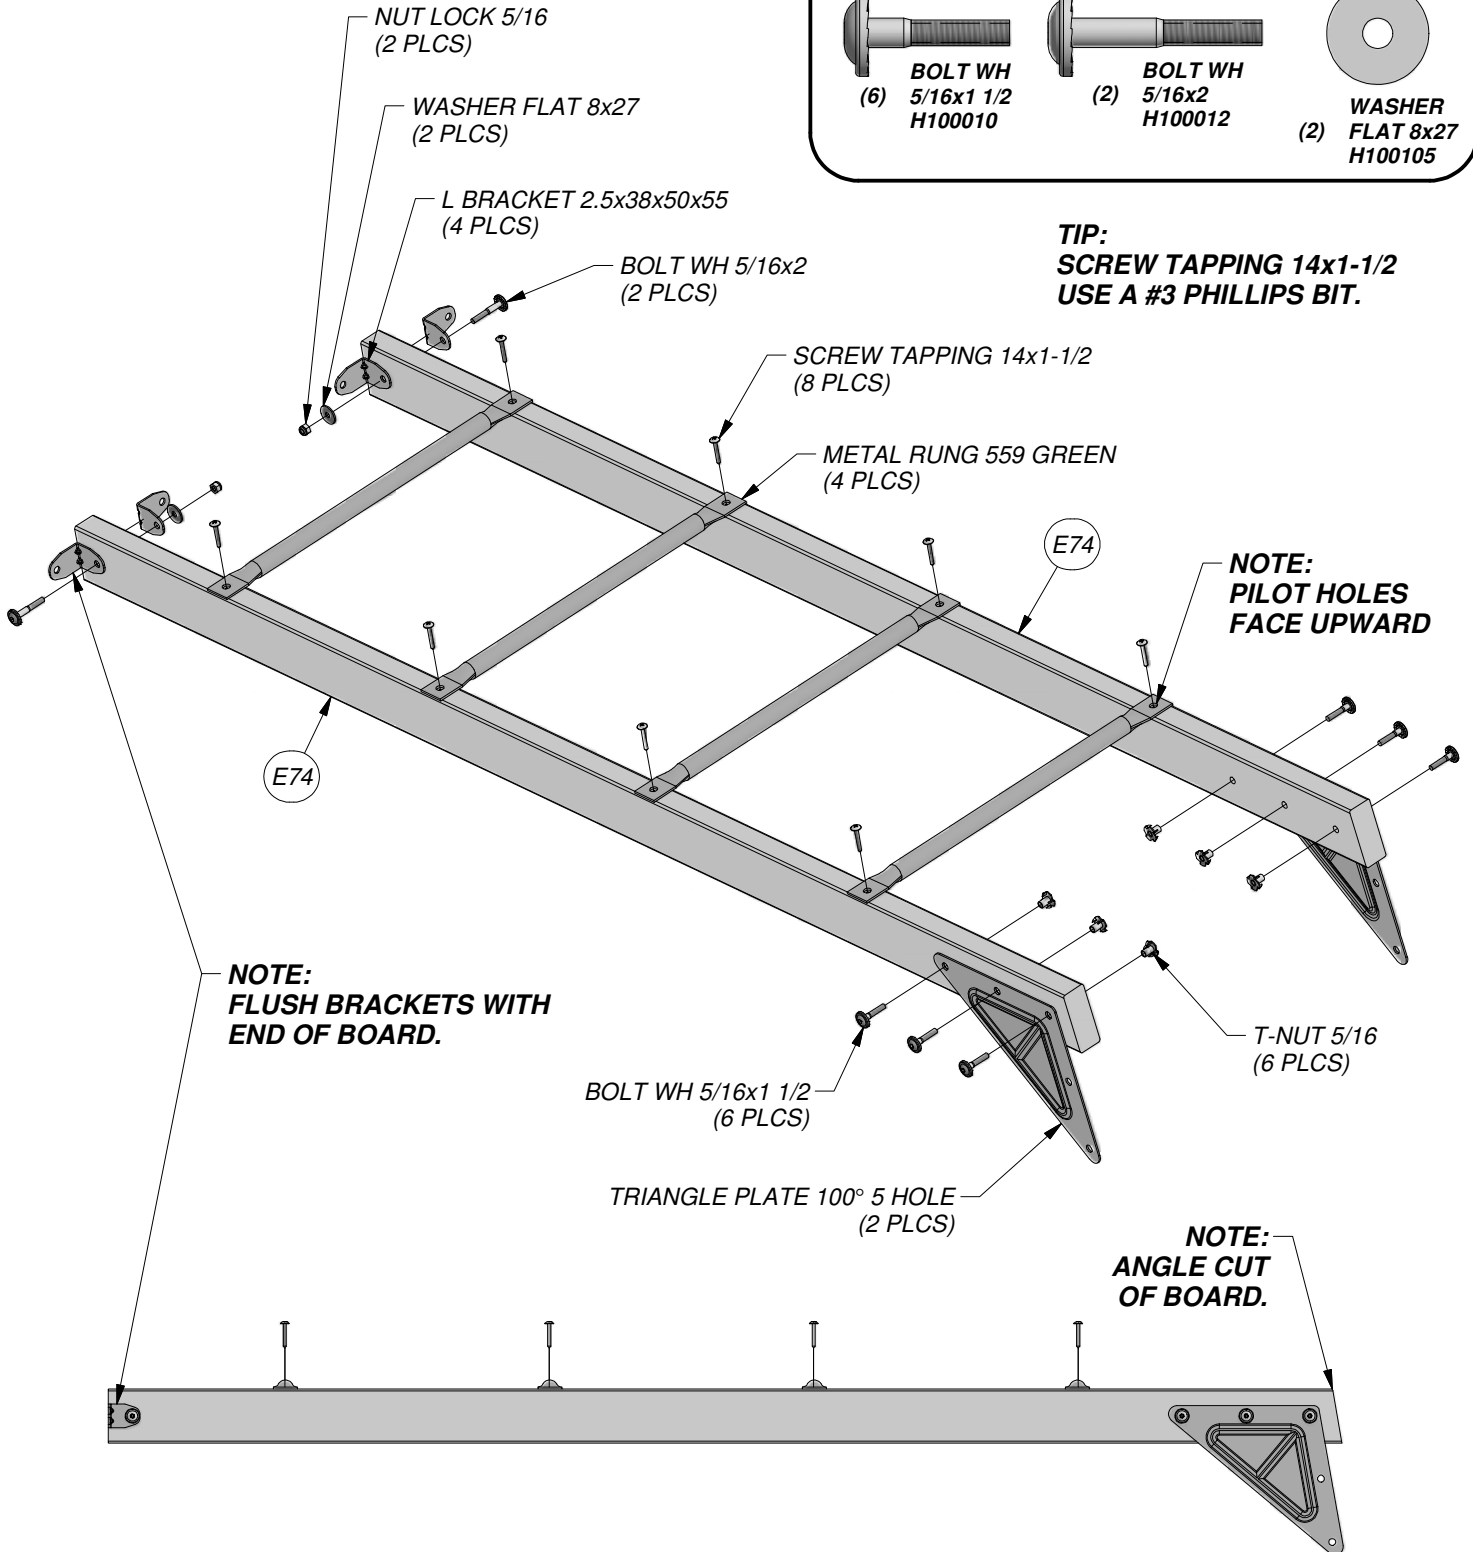



(2) E79 - MONKEY BAR UPRIGHT - W100995
1 3/8"x3 3/8"x88 1/8" (36x86x2237)




(2) FX - HAND GRIP METAL GREEN 381 c/c - A100118



(4) EC - METAL RUNG 559 GREEN - A100045

MONKEY BAR ASSEMBLY STEP 2

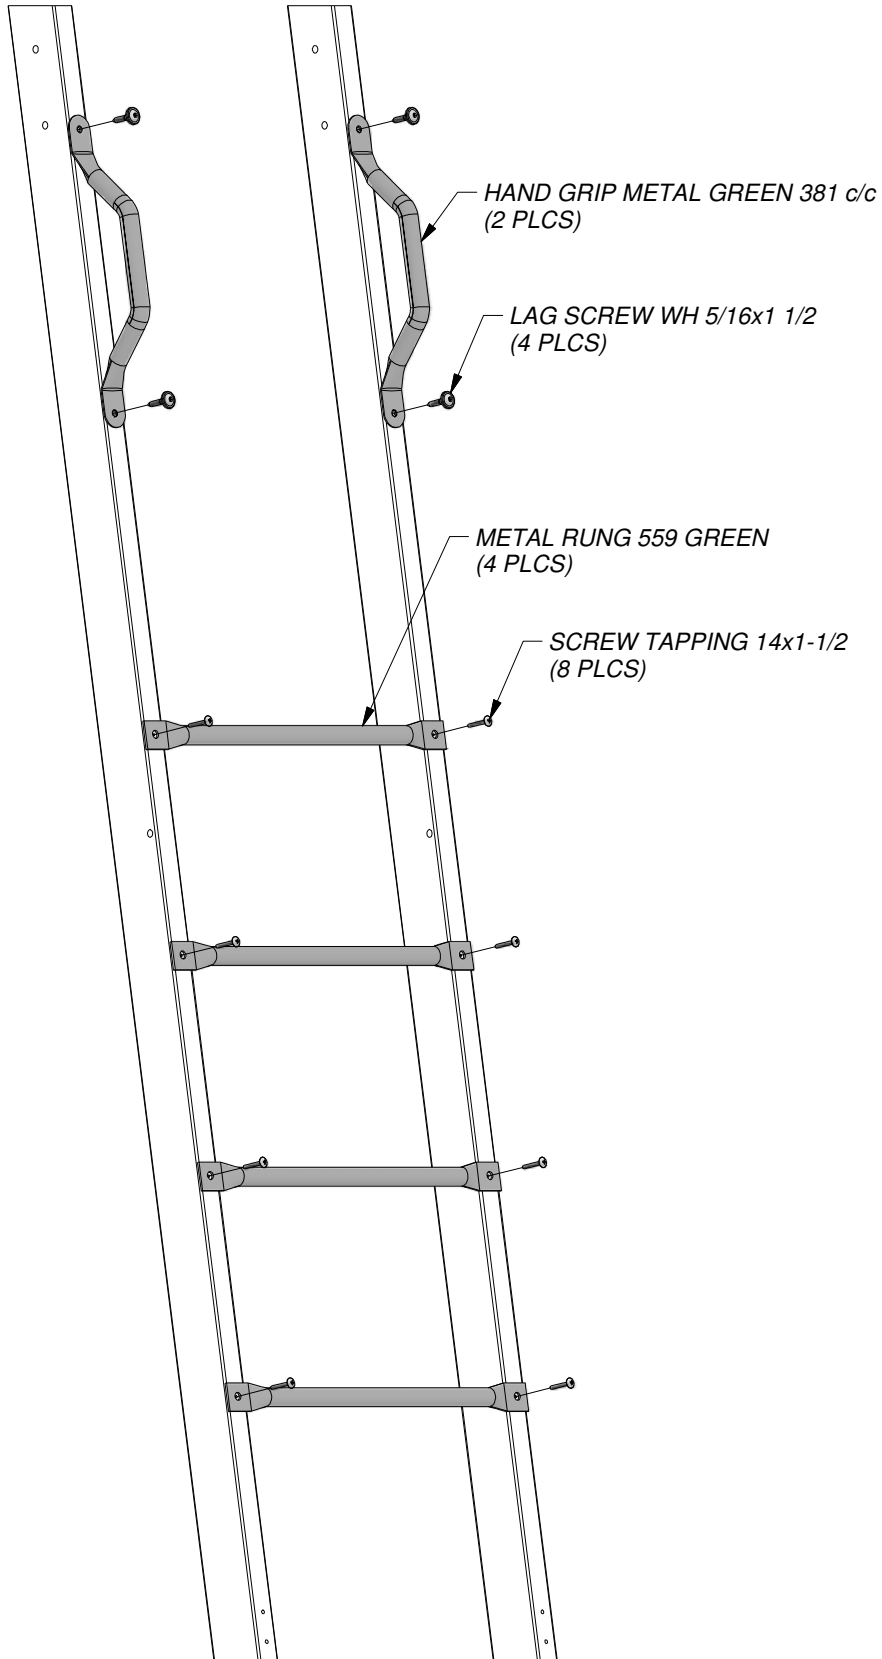

SCREW
TAPPING
(8)
14x1-1/2
H100109



LAG SCREW
(4)
WH 5/16x1 1/2
H100026





(1) **H82 - MONKEY BAR GROUND BOARD - W100994**
1"x3 3/8"x70 3/8" (24x86x1786)




(2) **H81 - MONKEY BAR BRACE - W100993**
1"x3 3/8"x53 1/4" (24x86x1352)


MONKEY BAR ASSEMBLY STEP 3

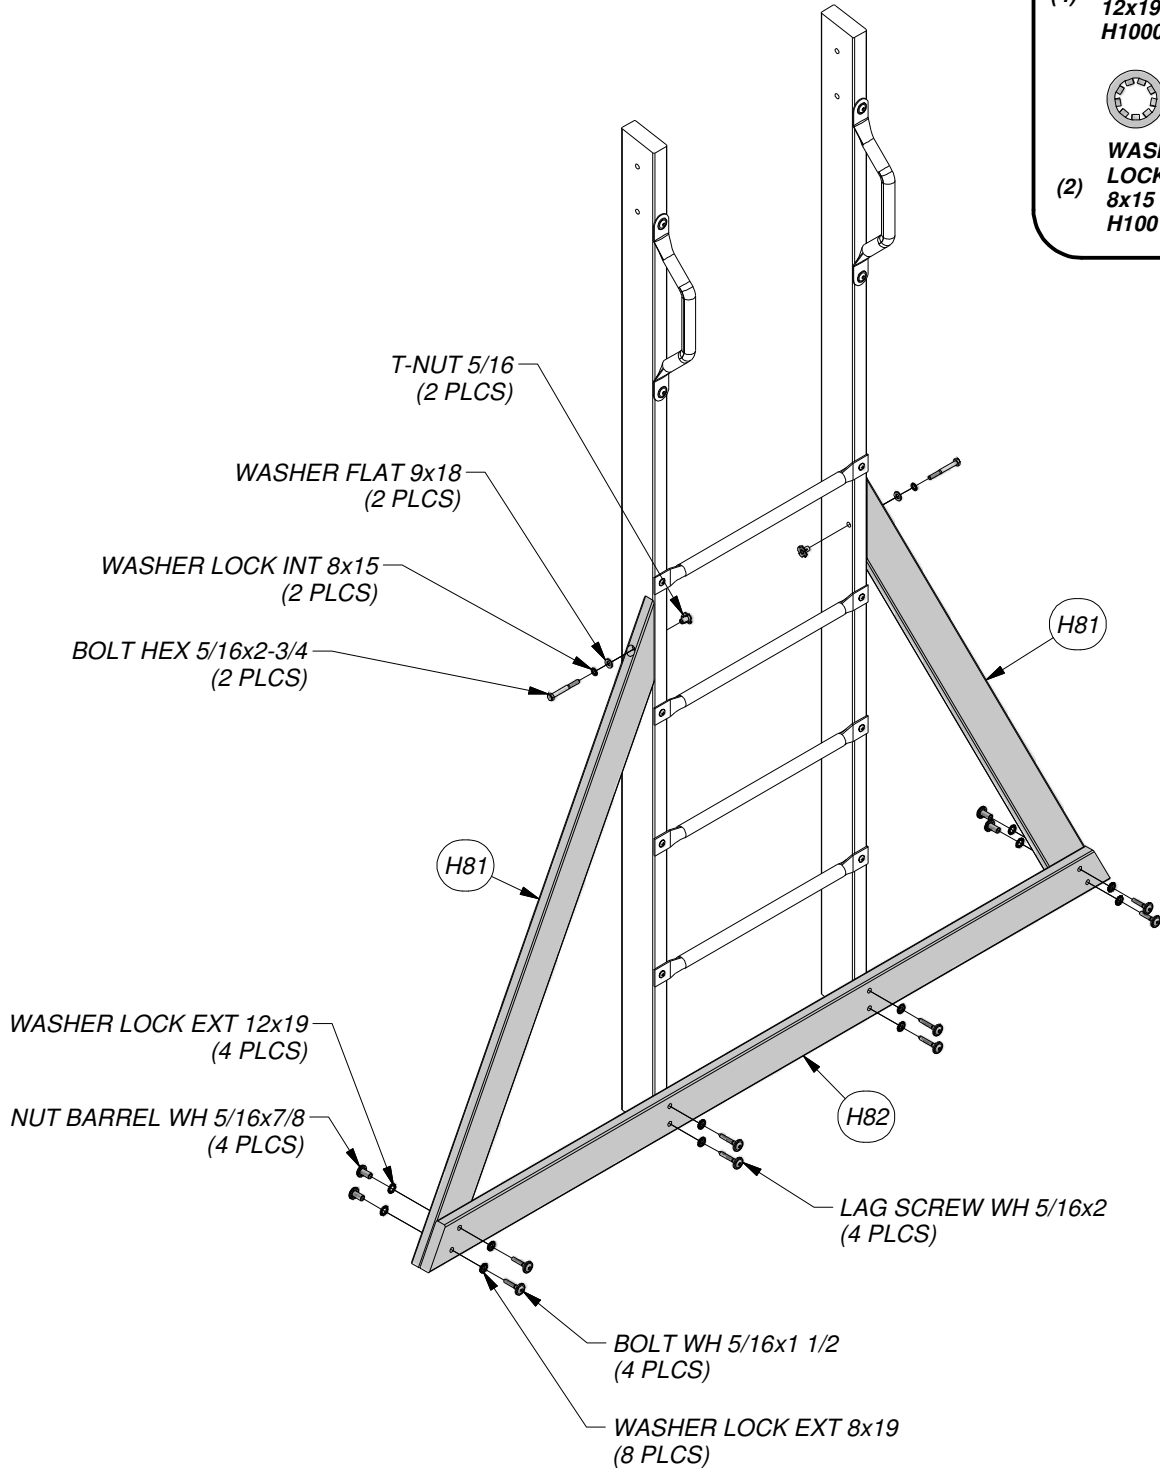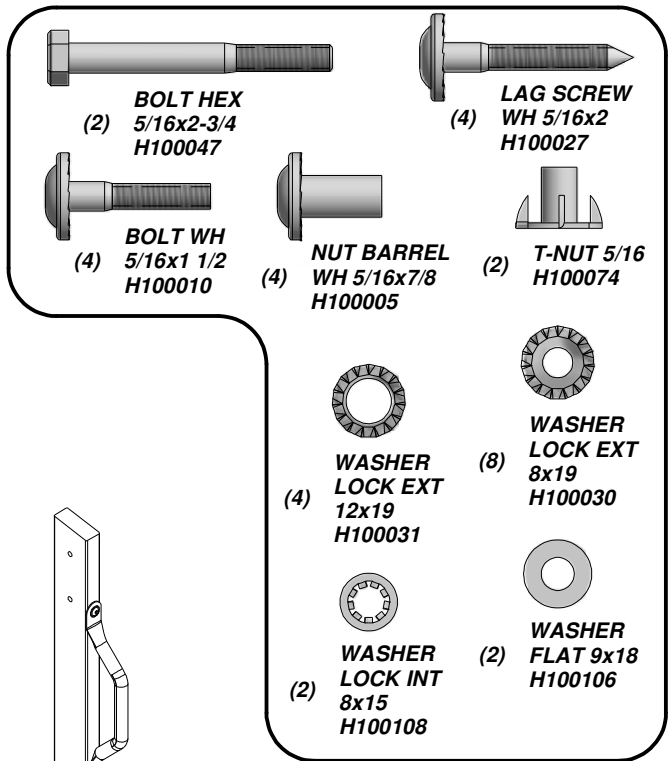


MONKEY BAR ASSEMBLY
STEP 4


 


(4) **T-NUT 5/16**
H100074



 (4) **BOLT WH**
5/16x1 1/2
H100010

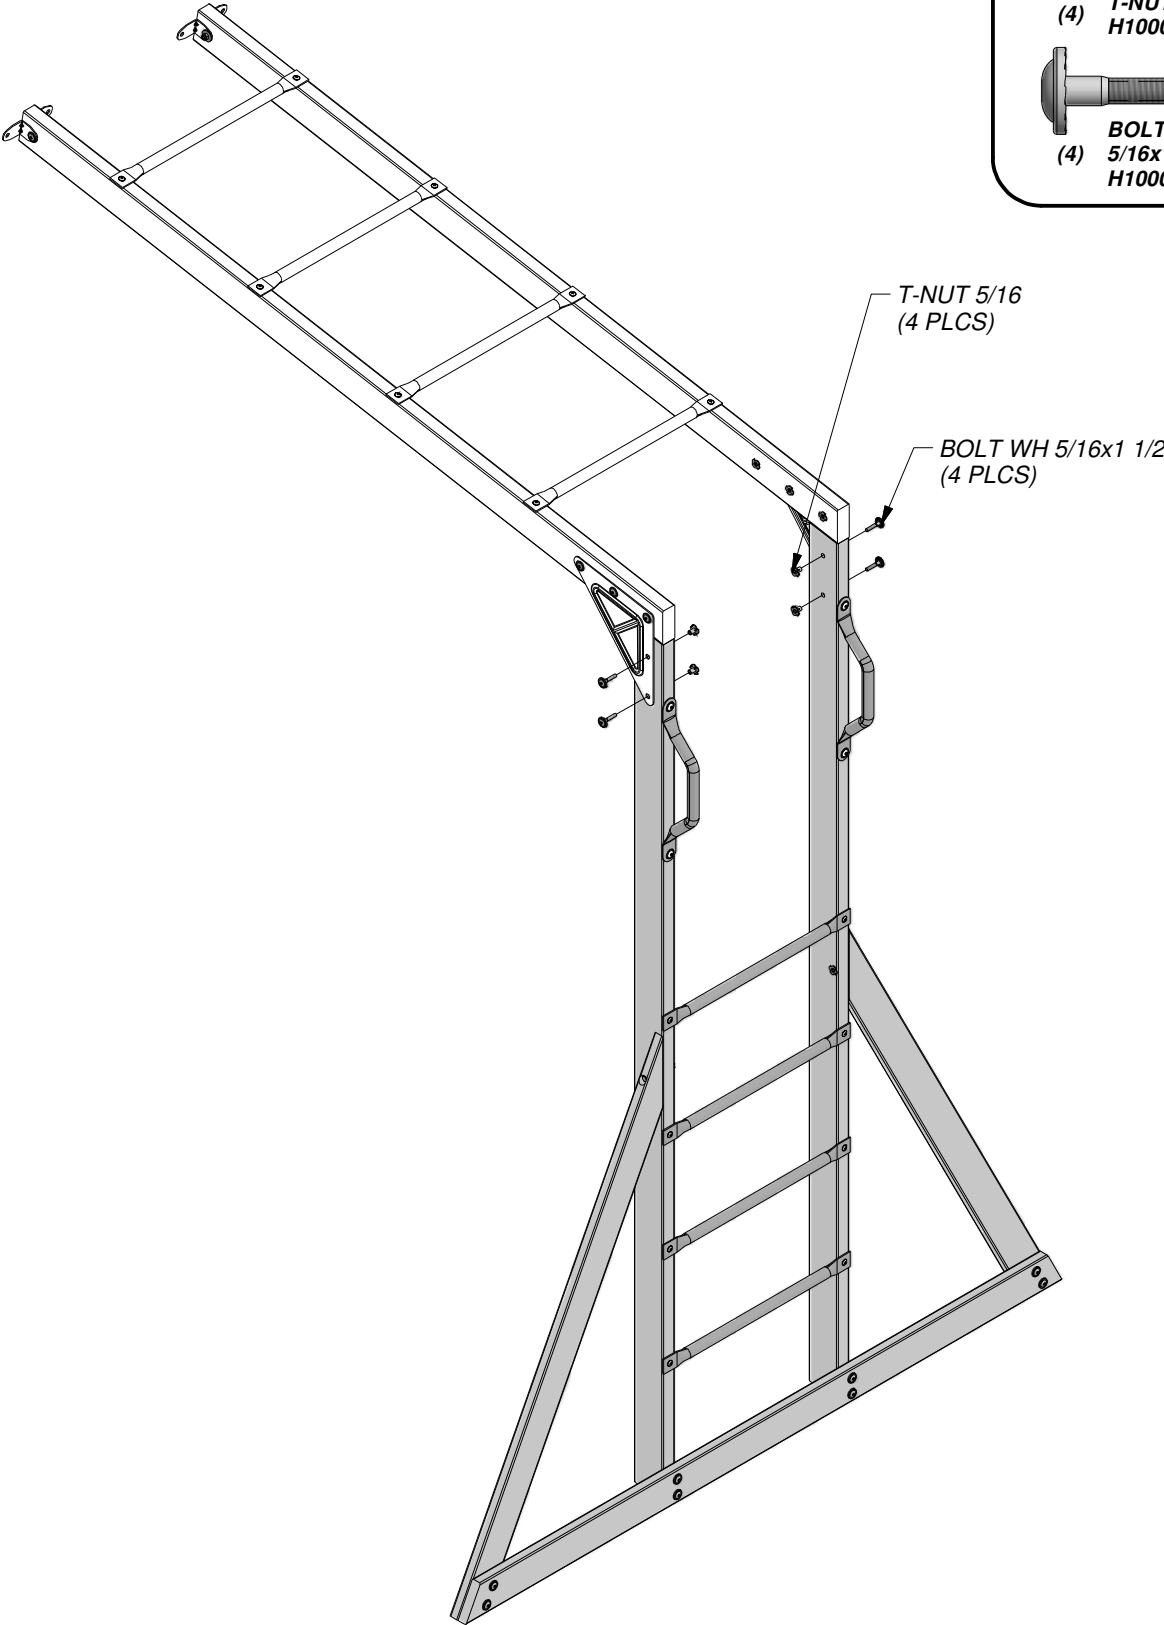


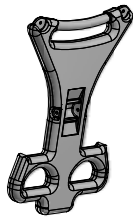

(1) **DN - GLIDER SEAT DARK GREEN - A100025**

(2) **DJ - GLIDER ARM LIGHT GREEN - A100021**


Light Green & Dark Green Glider

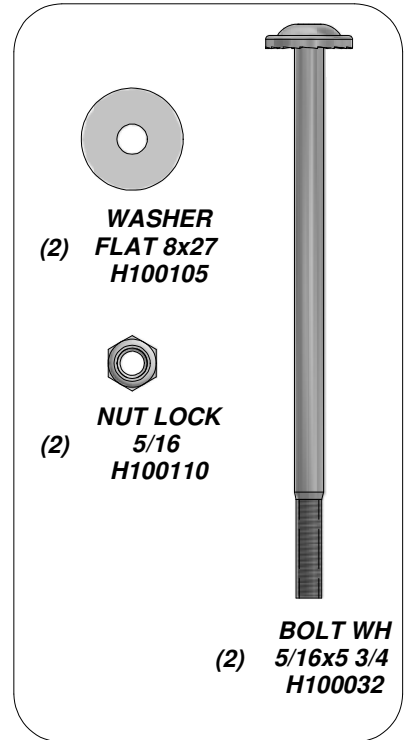


WASHER
(2) **FLAT 8x27**
H100105


NUT LOCK
(2) **5/16**
H100110

 BOLT WH
(2) **5/16x5 3/4**
H100032

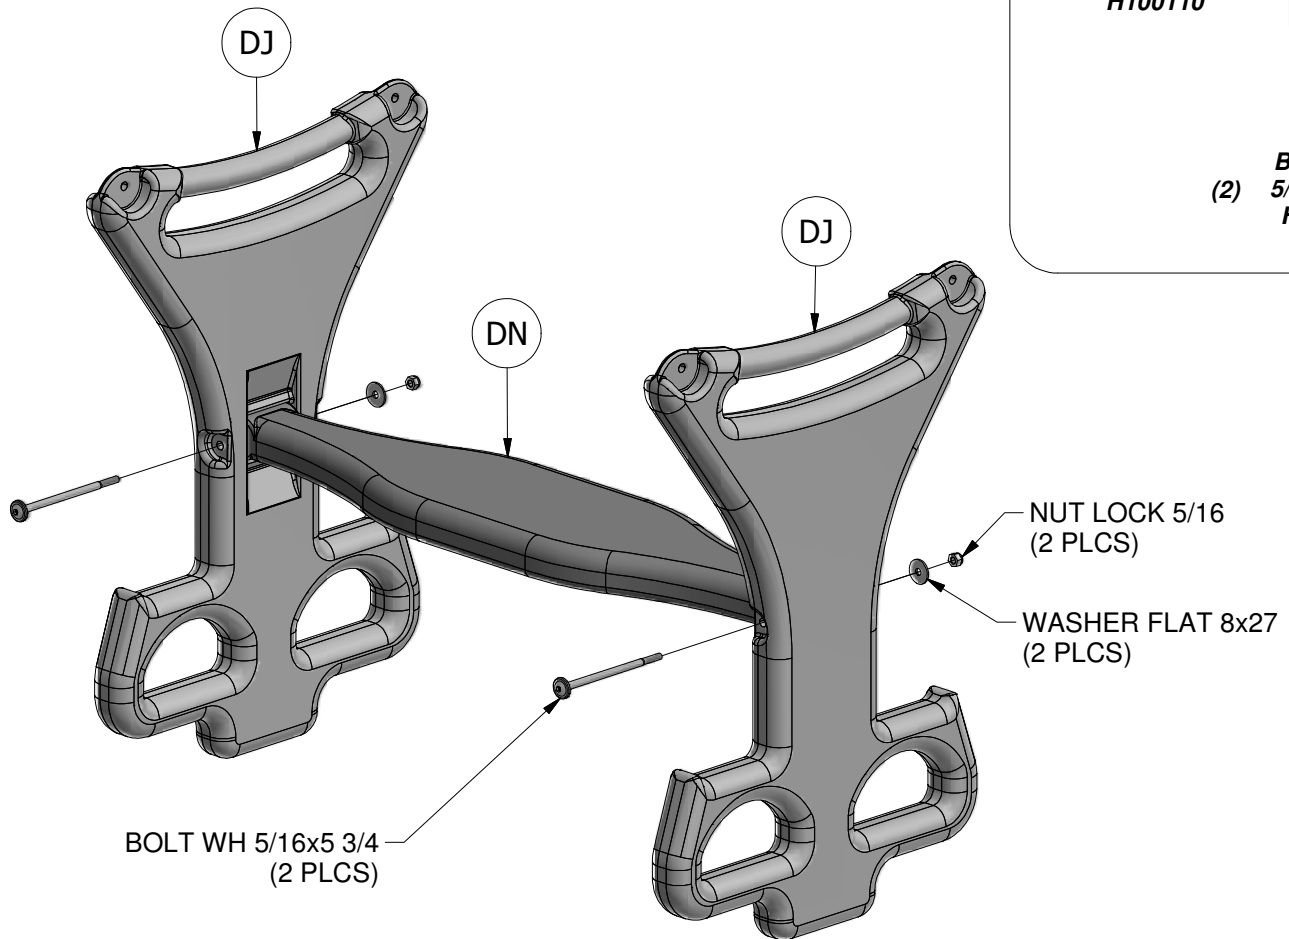




(4) **G5 - BAY WINDOW HEADER - W4L04659**
1"x5 1/4"x45 1/4" (24x134x1150)

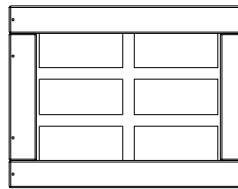

(6) **WP1 - BAY WINDOW PANEL - W2A01496**

BAY WINDOW ASSEMBLY

MAKE 2 WINDOW ASSEMBLIES.

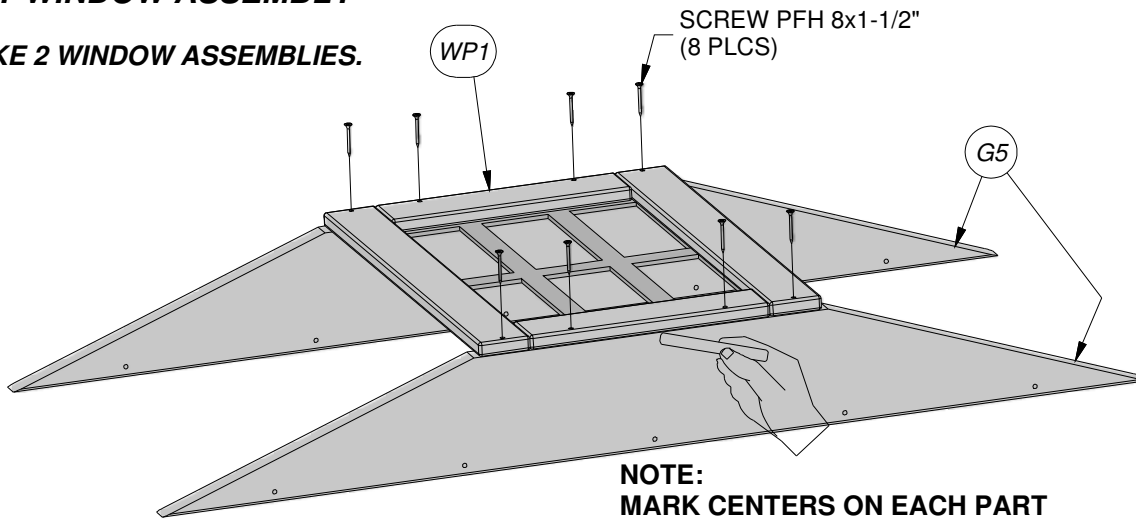



**NOTE:
MARK CENTERS ON EACH PART
THEN ALIGN PARTS ON MARKS.**



SCREW PFH
(40) **8x1-1/2\"**
H100086



SCREW PFH
(8) **8x1**
H100085

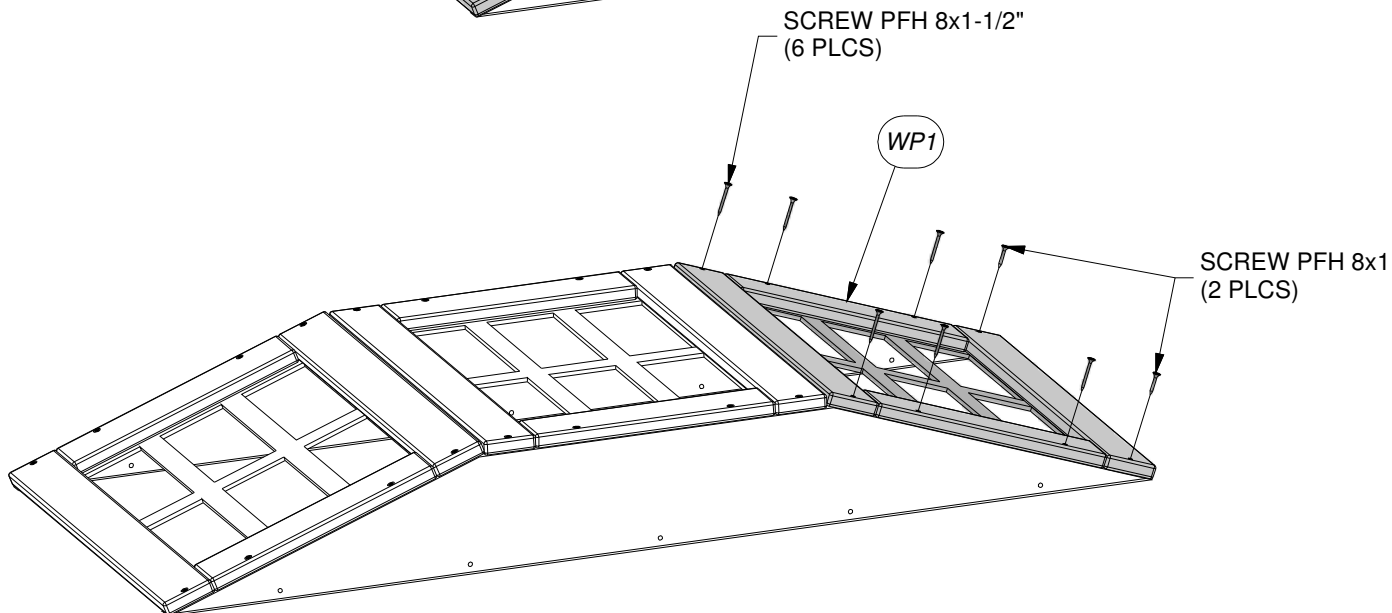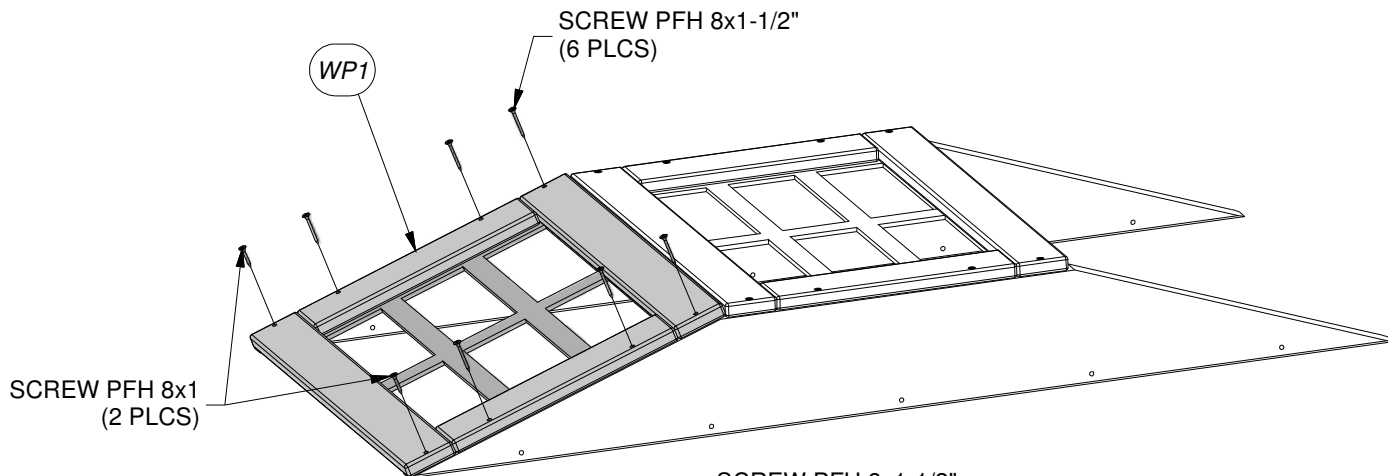




(4) **H20 - PORCH ROOF RAFTER - W4L04655**
1"x3 3/8"x24 1/2" (24x86x622)


PORCH ROOF ASSEMBLY STEP 1



SCREW PFH
(2) **8x2 1/4**
H100091

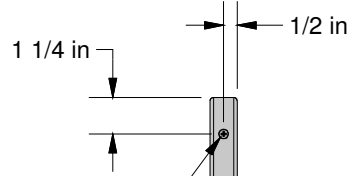

USING A 3/16" DRILL BIT, MARK AND DRILL A PILOT HOLE INTO 'H20' RAFTER TO PREVENT SPLITTING.
ONLY DRILL THROUGH ONE RAFTER NOT BOTH.

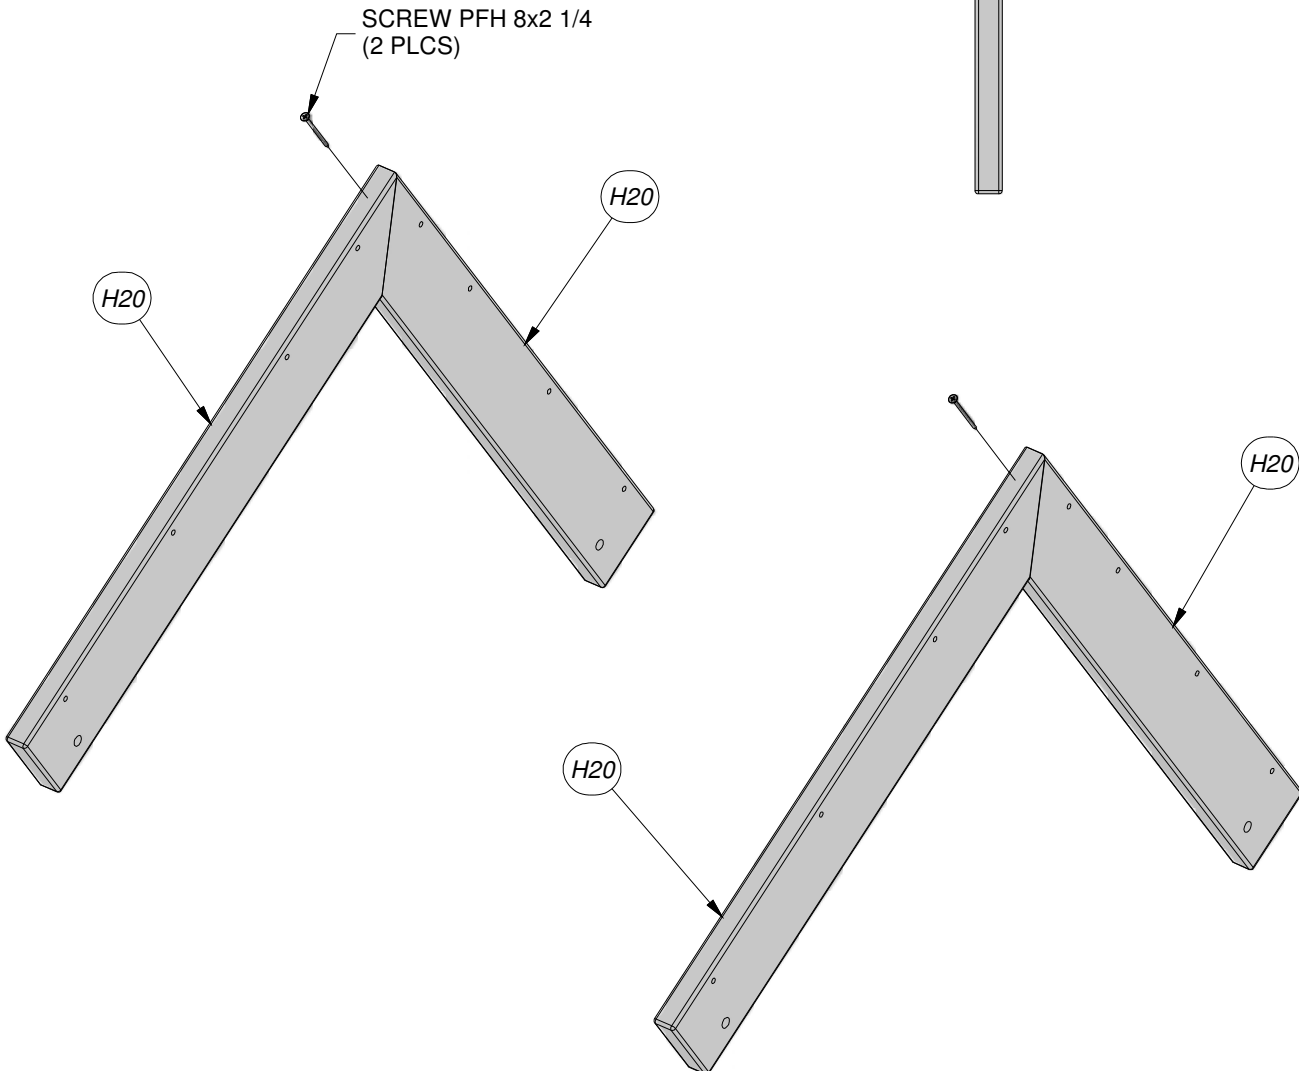

- (1) **M19 - FRONT PORCH ROOF SUPPORT - W4L04658**
5/8"x3 3/8"x30 5/8" (16x86x779)




- (1) **HC - BYD ID TAG (LARGE) AGES 3-10 - A100164**


- (2) **N8 - FRONT PORCH GABLE TRIM - W4L04657**
5/8"x2 3/8"x9 1/2" (16x60x241)

- (1) **N5 - FRONT PORCH GABLE TRIM - W4L04656**
5/8"x2 3/8"x15" (16x60x381)


**PORCH ROOF ASSEMBLY
STEP 2**

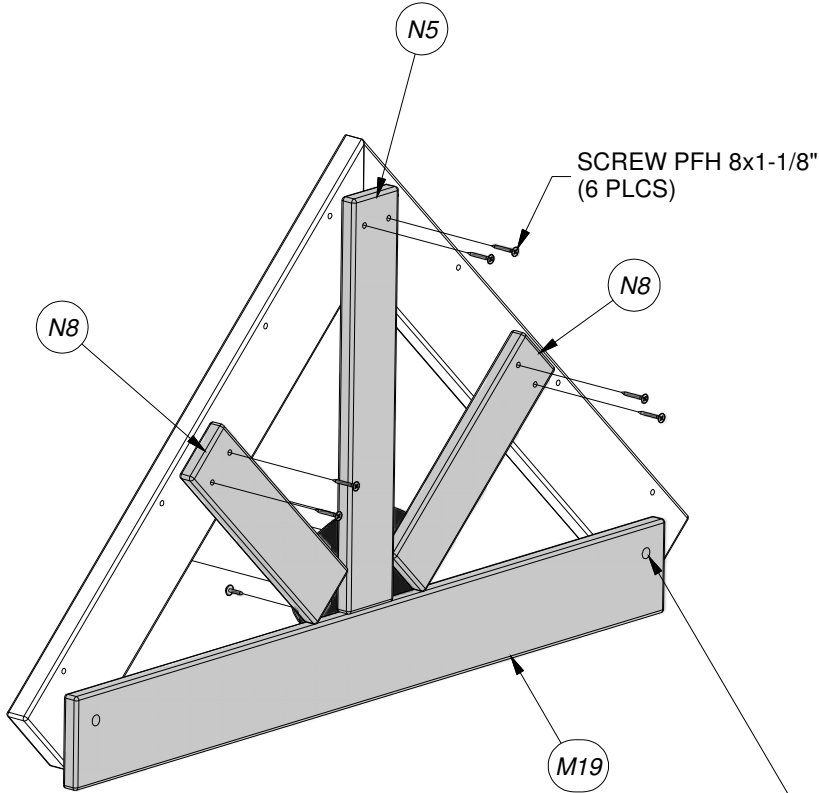


- SCREW PFH**
(6) 8x1-1/8" H100088
- SCREW PWH**
(4) 8x5/8 H100128

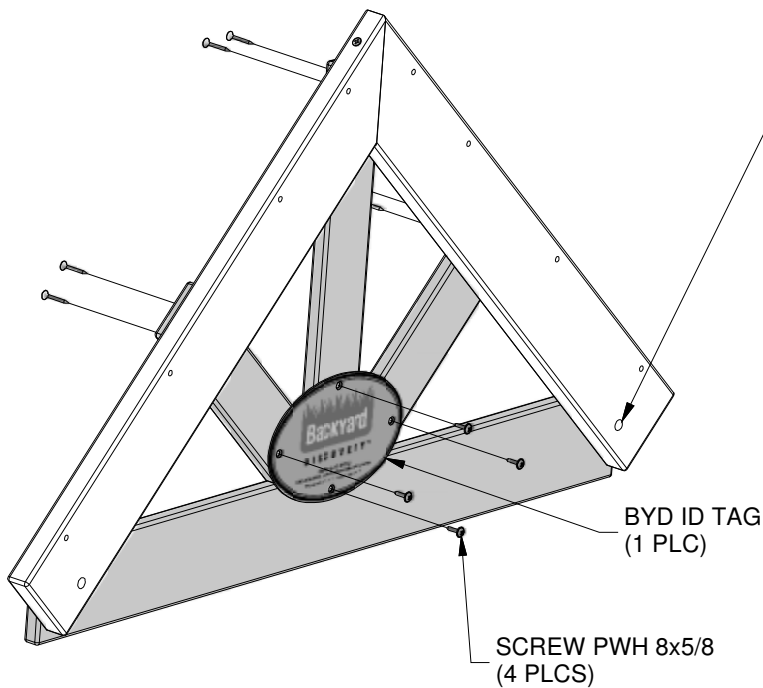

NOTE ENSURE THAT HOLES ARE ALIGNED (BOTH ENDS)

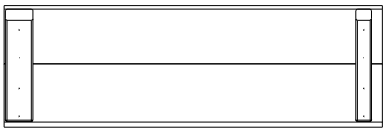

(1) **RP1 - LEFT PORCH PEAK ROOF PANEL - W2A02630**
1 5/8"x10 1/2"x32 7/8" (42x268x834)

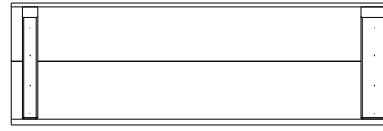



(1) **RP4 - RIGHT PORCH PEAK ROOF PANEL - W2A02631**
1 5/8"x10 1/2"x32 7/8" (42x268x834)

PORCH ROOF ASSEMBLY STEP 3




SCREW PFH
(8) 8x2
H100111

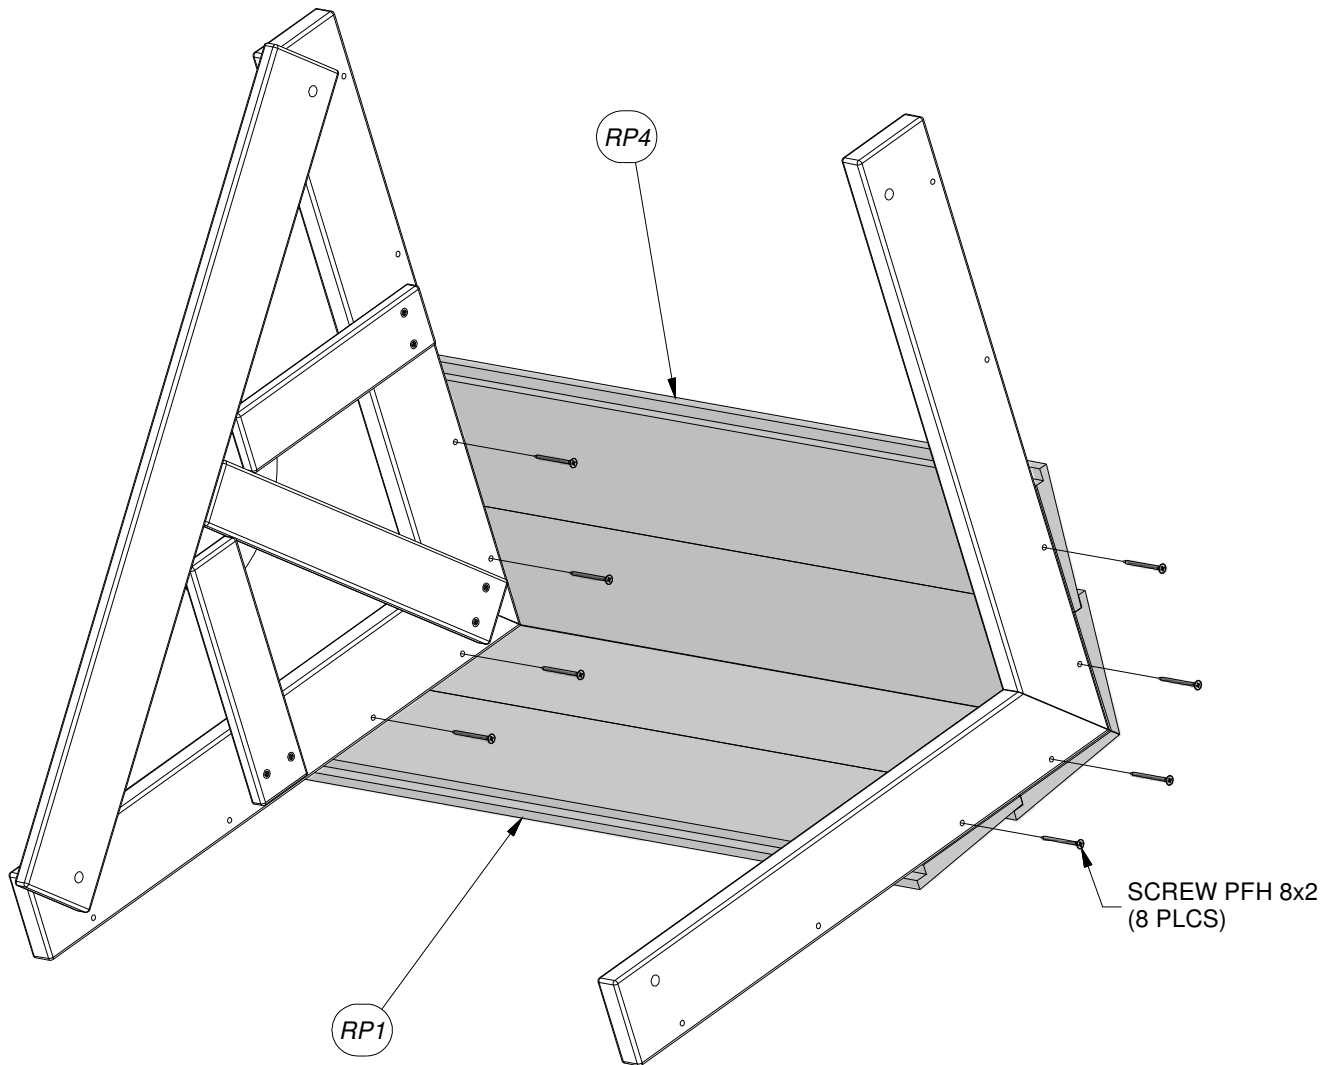

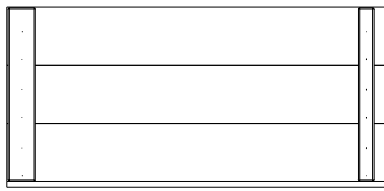

(1) **RP2 - LEFT PORCH ROOF PANEL - W2A02628**
1 5/8"x15 5/8"x32 7/8" (42x396x834)

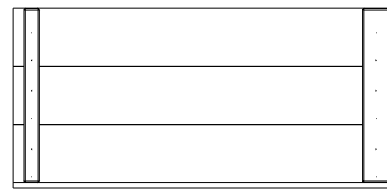



(1) **RP5 - RIGHT PORCH ROOF PANEL - W2A02629**
1 5/8"x15 5/8"x32 7/8" (42x396x834)

PORCH ROOF ASSEMBLY STEP 4




 SCREW PFH
(8) 8x2
H100111

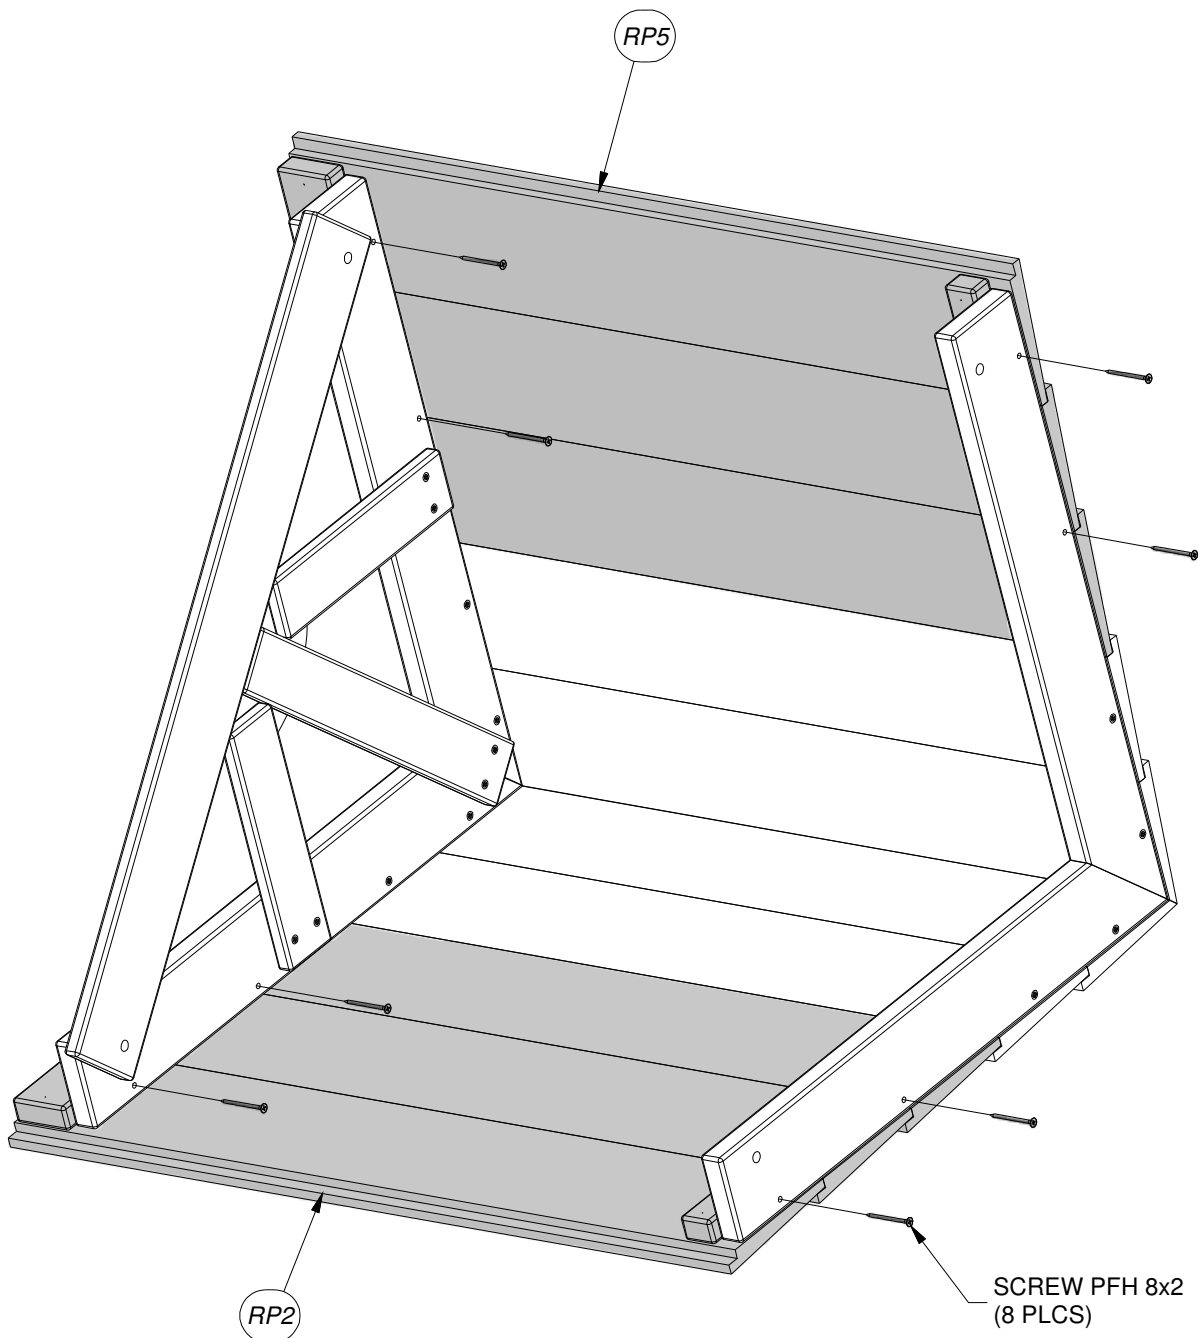




 (1) **A50 - SWING BEAM - W4L04660**
3 3/8"x5 1/4"x89 1/2" (86x134x2274)




 
(1) **TC - SWING BEAM EXTENSION BRACKET-RIGHT - A100326**



(4) **SWING HANGER - A4M00505**


(1) **TB - SWING BEAM EXTENSION BRACKET-LEFT - A100325**

SWING BEAM ASSEMBLY STEP 1

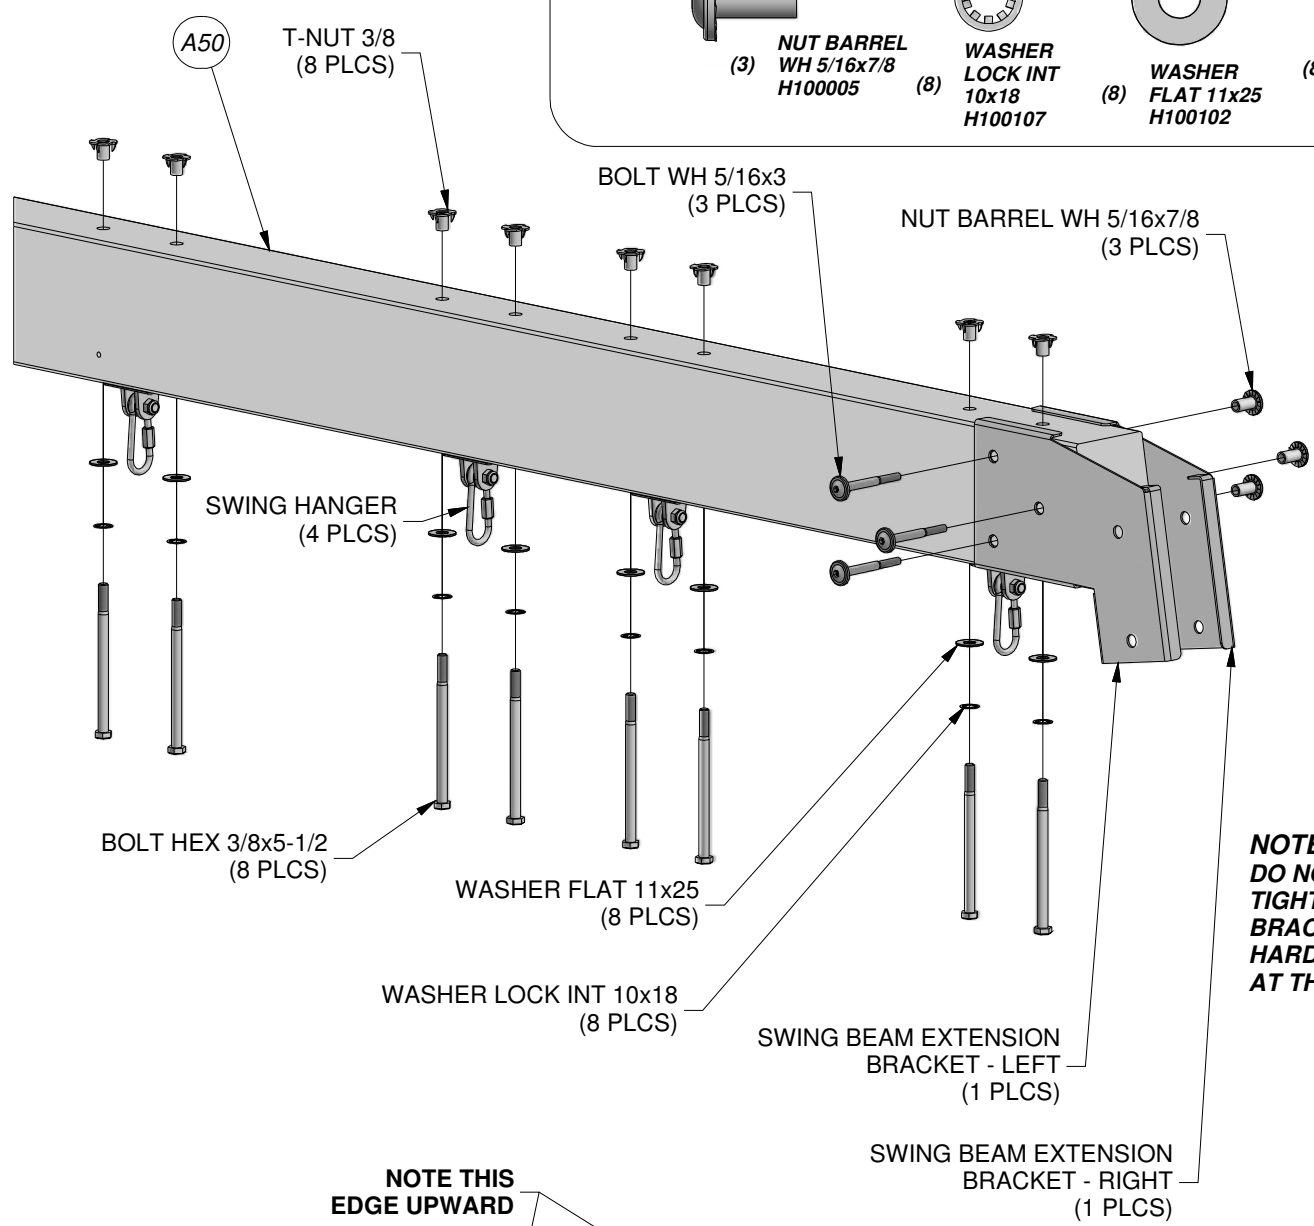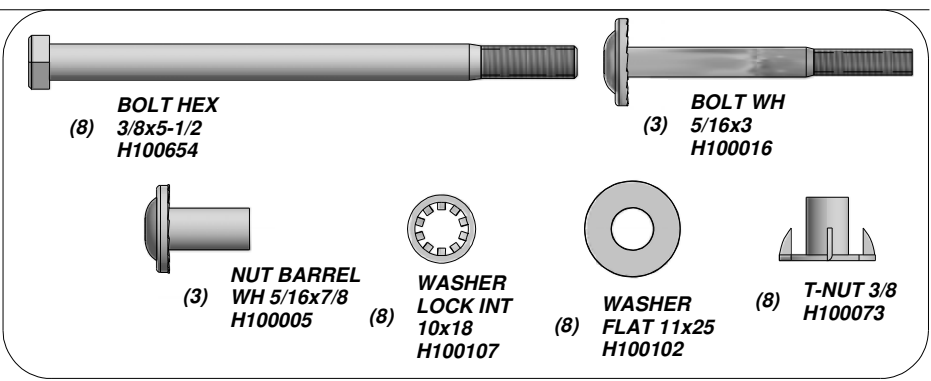

**NOTE:
DO NOT
TIGHTEN
BRACKET
HARDWARE
AT THIS TIME.**

**NOTE THIS
EDGE UPWARD**

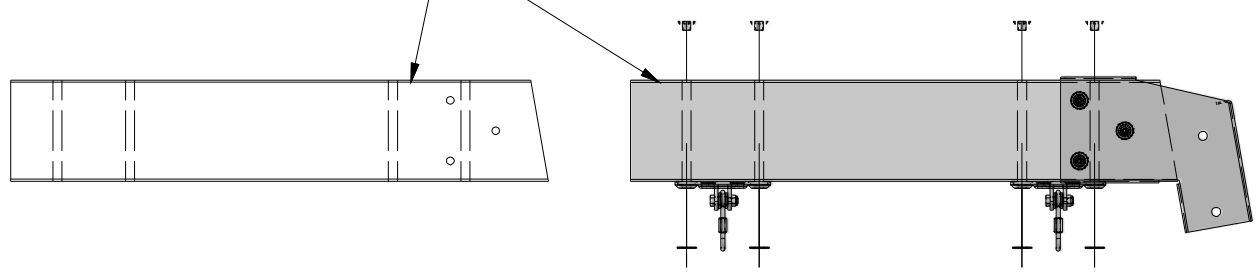



(1) **G50 - GROUND BOARD - W100947**
1"x5 1/4"x86 3/4" (24x134x2202)

(2) **E51 - ANGLE BRACE - W100948**
1 3/8"x3 3/8"x88 3/4" (36x86x2254)



(1) **SP50 - SWING BEAM SUPPORT - W103545**
3 3/8"x3 3/8"x48 3/8" (86x86x1228)

(1) **E50 - END SUPPORT - W100949**
1 3/8"x3 3/8"x44 1/8" (36x86x1120)

SWING BEAM ASSEMBLY STEP 2

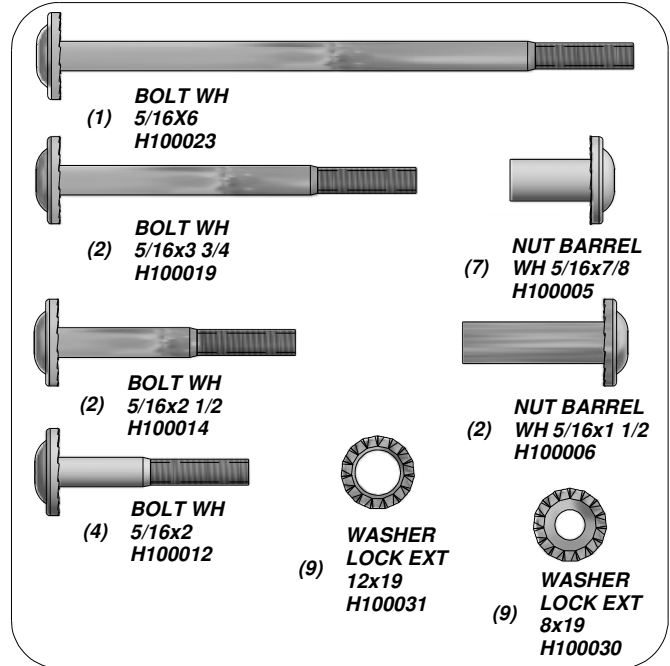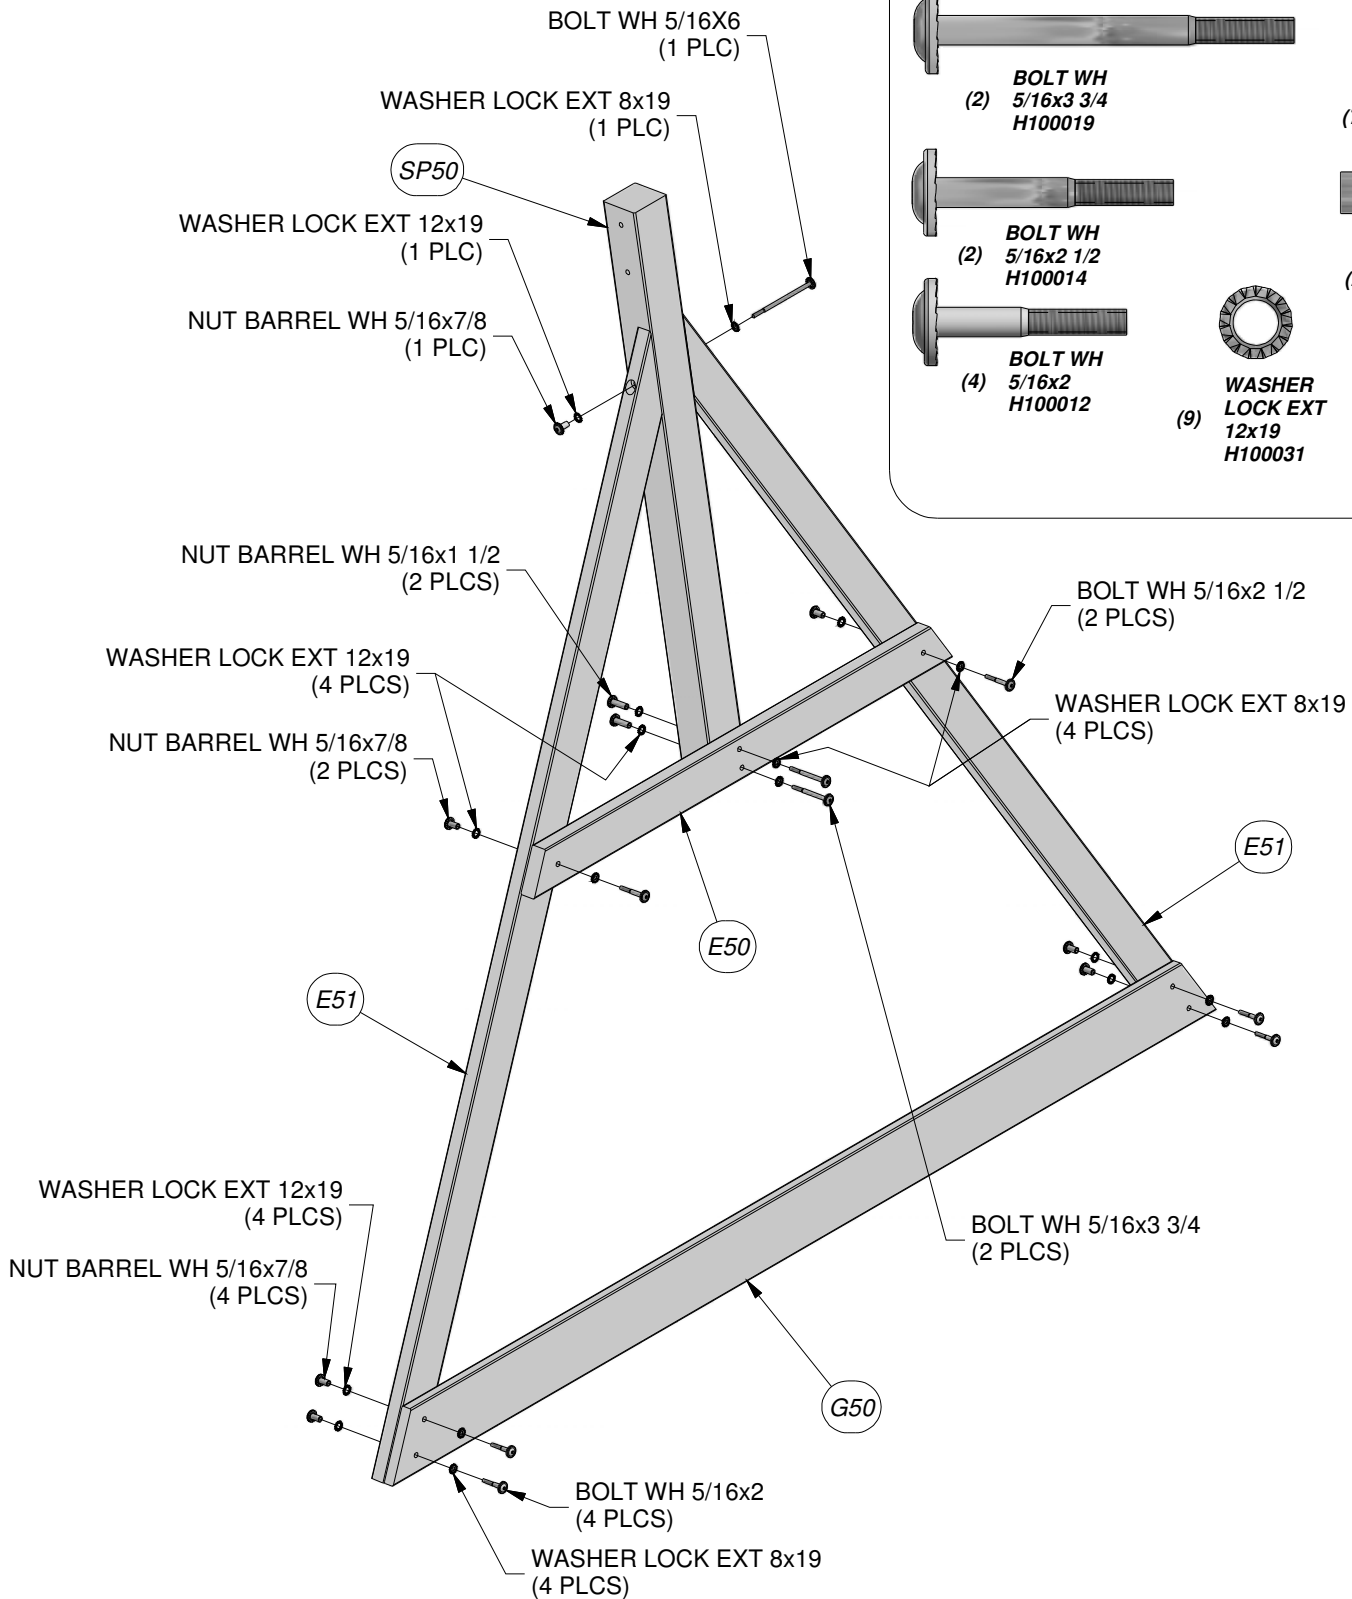

**SWING BEAM ASSEMBLY
STEP 3**

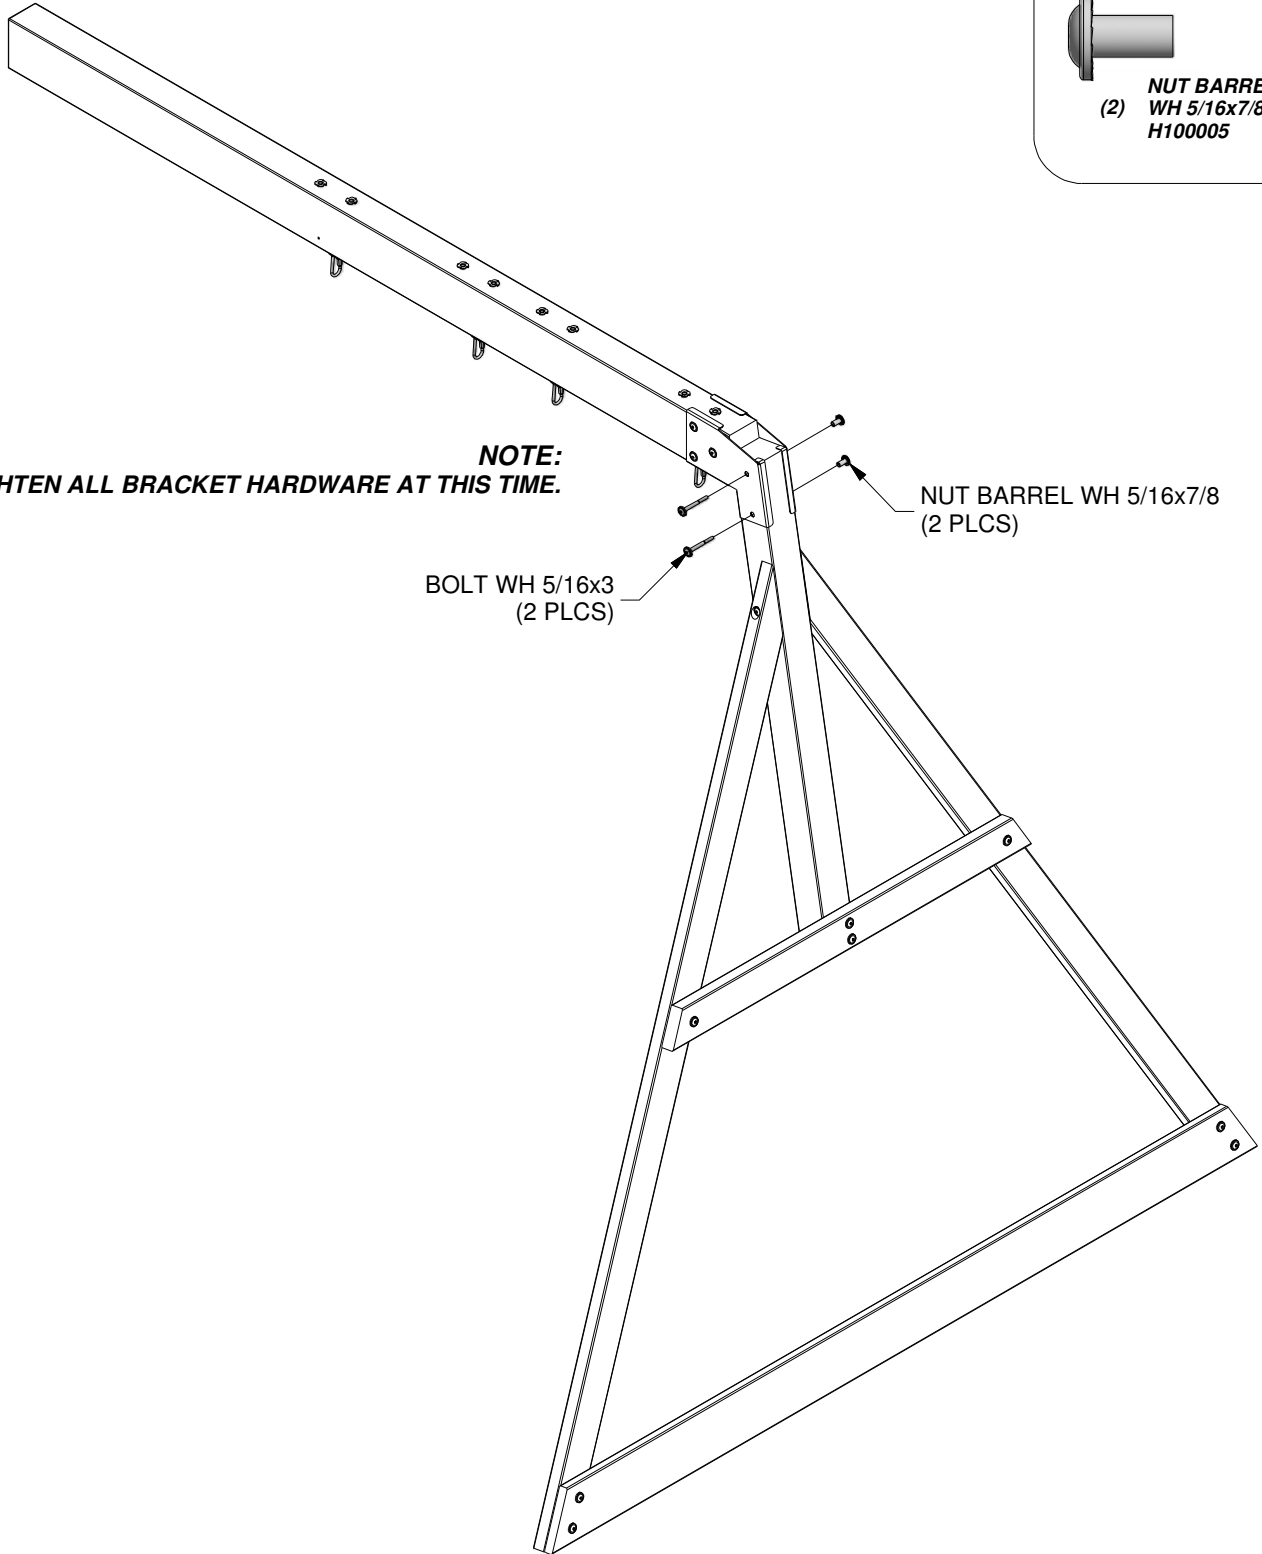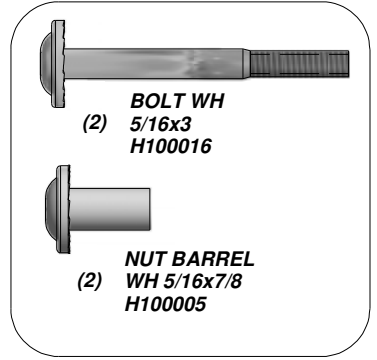



(2) **E3 - CROWS NEST FLOOR RAIL - W4L11785**
1 3/8"x3 3/8"x38" (36x86x964)



(1) **H19 - CROWS NEST FLOOR RAIL - W4L04663**
1"x3 3/8"x27" (24x86x686)


CROWS NEST DECK ASSEMBLY STEP 1




SCREW PFH
(4) 8x2 1/2
H100090



(4) **T-NUT 5/16**
H100074

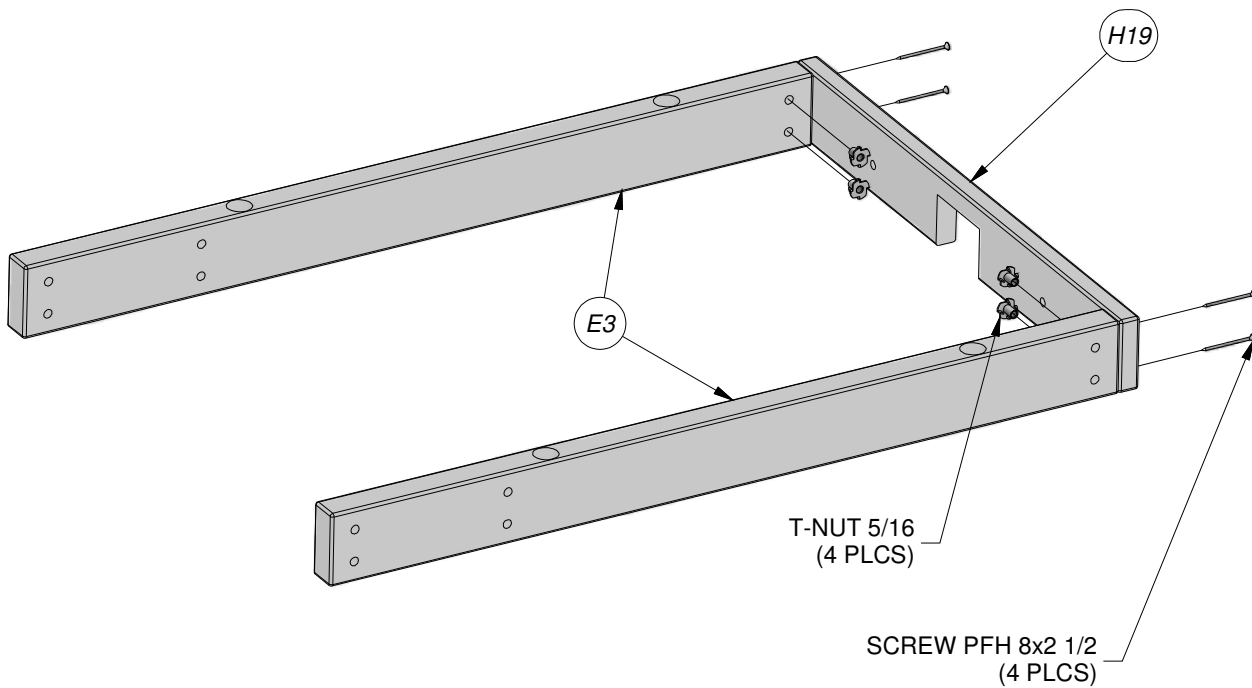


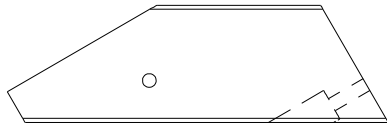


(2) **E4 - CROWS NEST DECK BRACE - W4L04662**
 1 3/8"x3 3/8"x11" (36x86x280)



(4) - **SWING HANGER QUICK LINK 86 BOARD - H100098**

CROWS NEST DECK ASSEMBLY
STEP 2

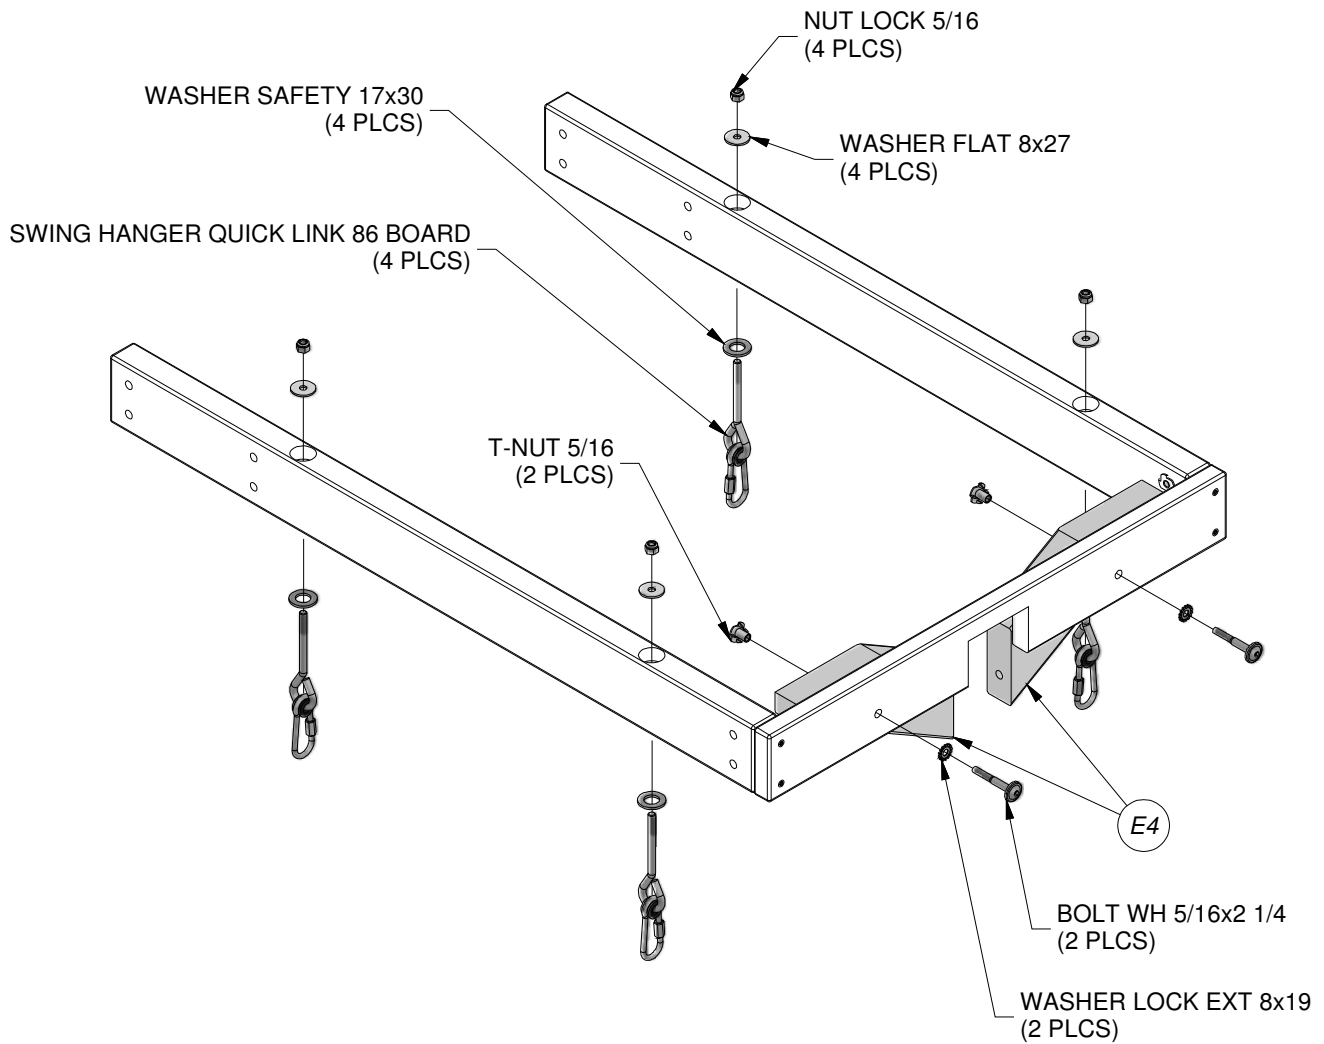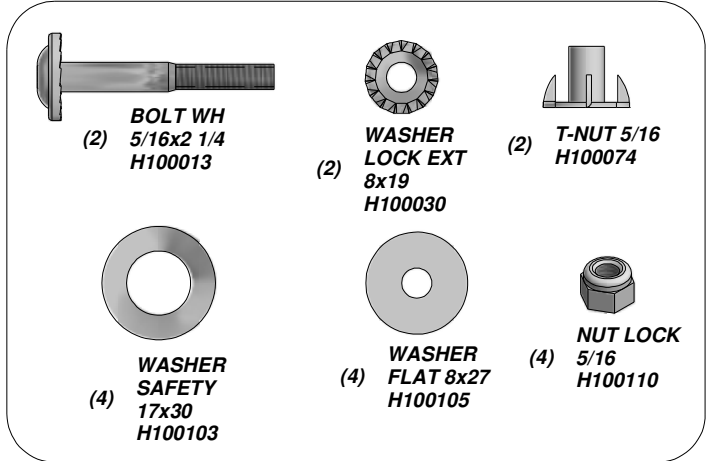





(9) L1 - CROWS NEST FLOOR BOARD - W4L04664
5/8"x4 3/8"x27" (16x112x686)

**CROWS NEST DECK ASSEMBLY
STEP 3**






SCREW PFH
(34) 8x1-1/2"
H100086

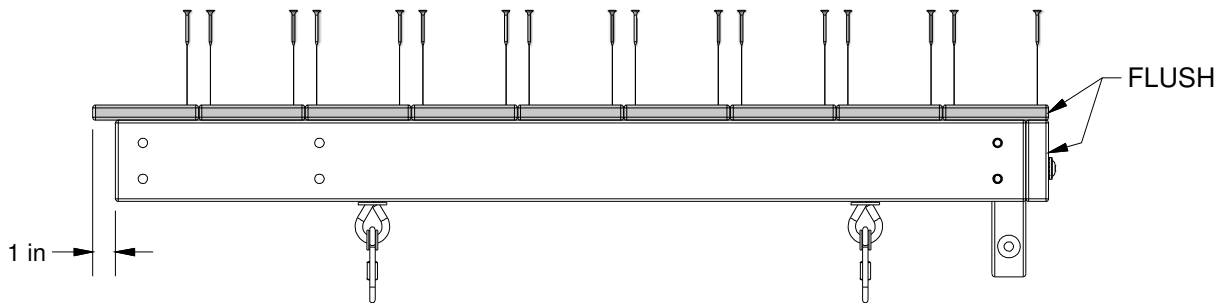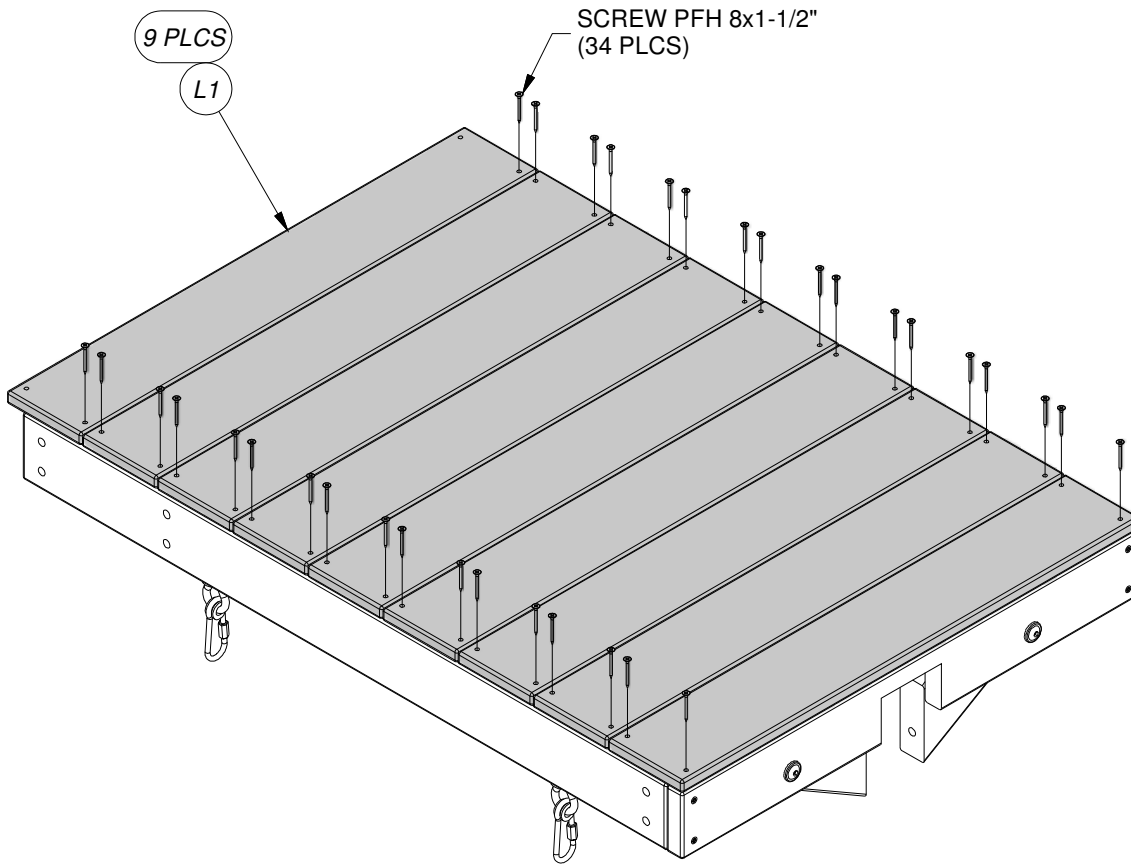





(1) **H21 - CROWS NEST FLOOR SUPPORT - W4L04665**
1"x3 3/8"x24 1/8" (24x86x614)

 CROWS NEST DECK ASSEMBLY STEP 4

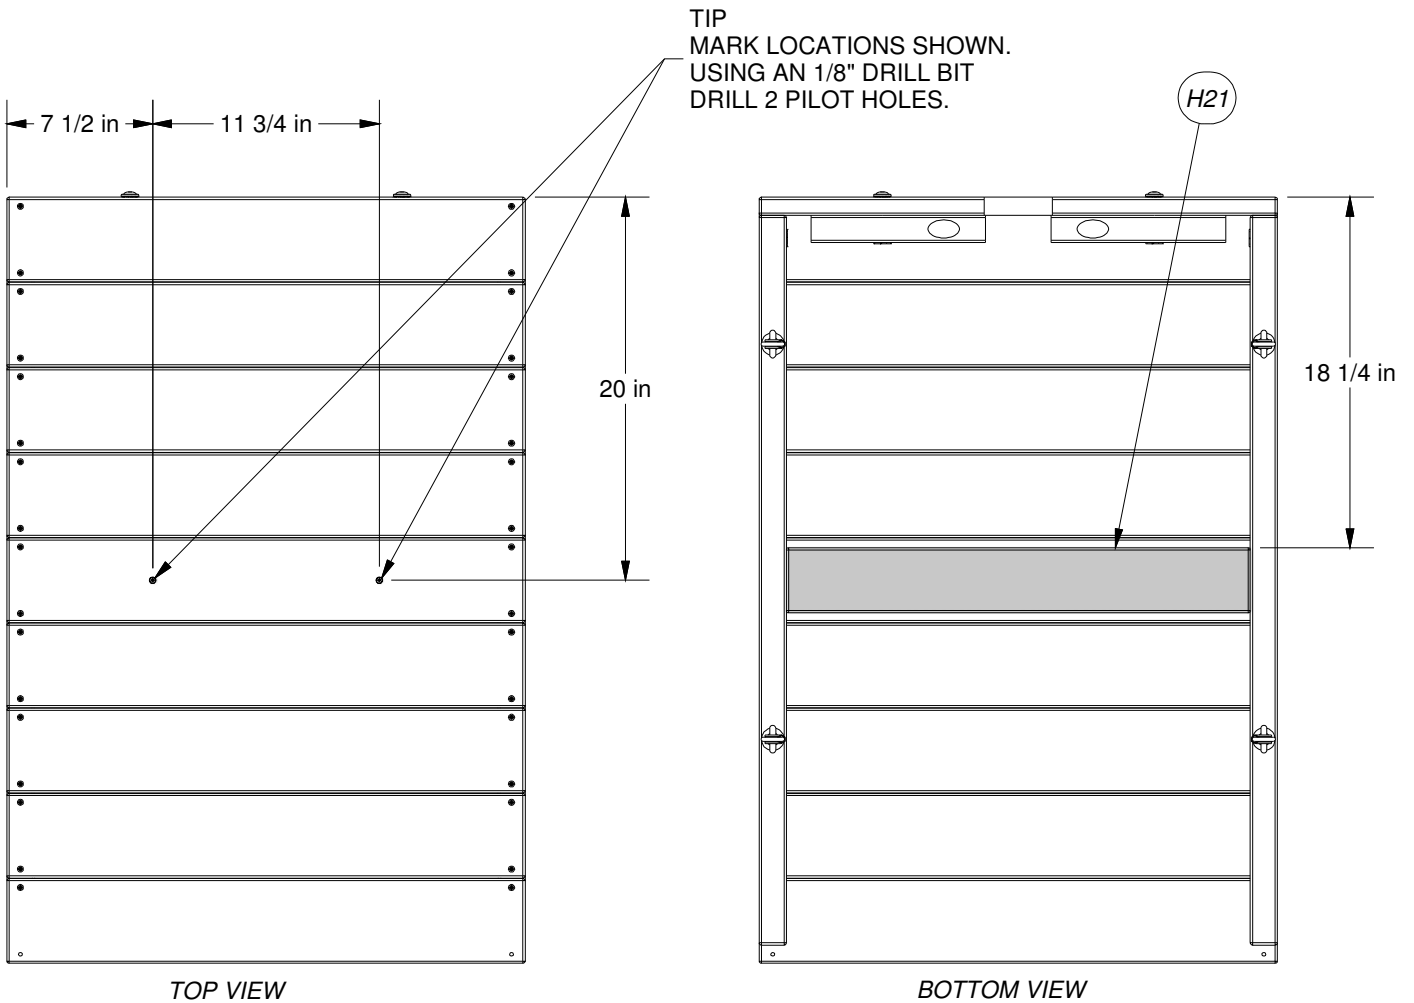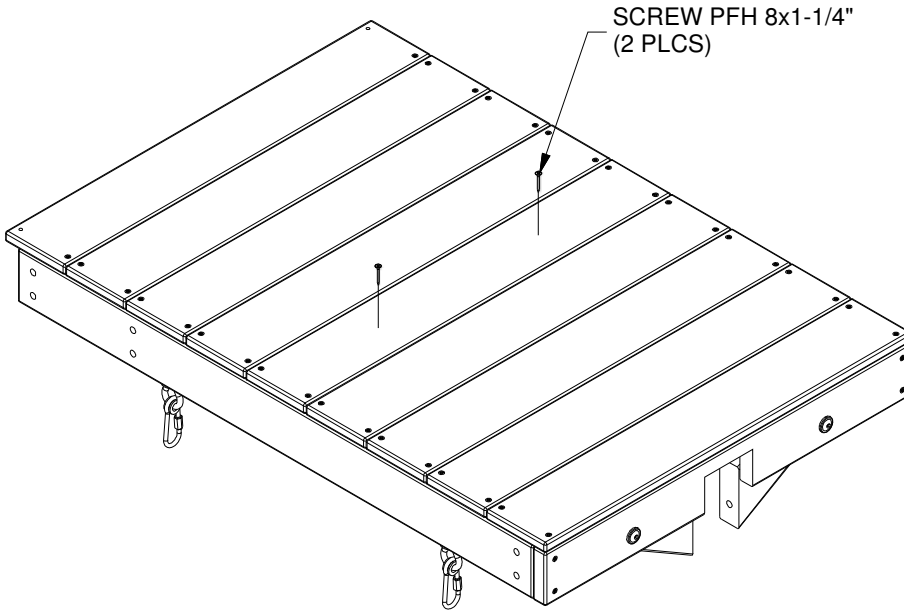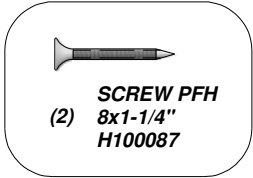




 
(1) **B1 - TOWER LEG - W4L04562**
3"x3"x89 1/2" (76x76x2274)



 
(1) **E1 - TOWER LEG - W4L04563**
1 3/8"x3 3/8"x59" (36x86x1500)



 (1) **B3 - TOWER LEG - W4L04564**
3"x3"x59" (76x76x1500)



 (1) **G7 - BOTTOM FLOOR RAIL - W4L11775**
1"x5 1/4"x80" (24x134x2032)





(1) **G1 - TOP FLOOR RAIL - W4L04566**
1"x5 1/4"x80" (24x134x2032)



(1) - **VERTICAL ID PLATE - A4M01150**



FORT ASSEMBLY STEP 1

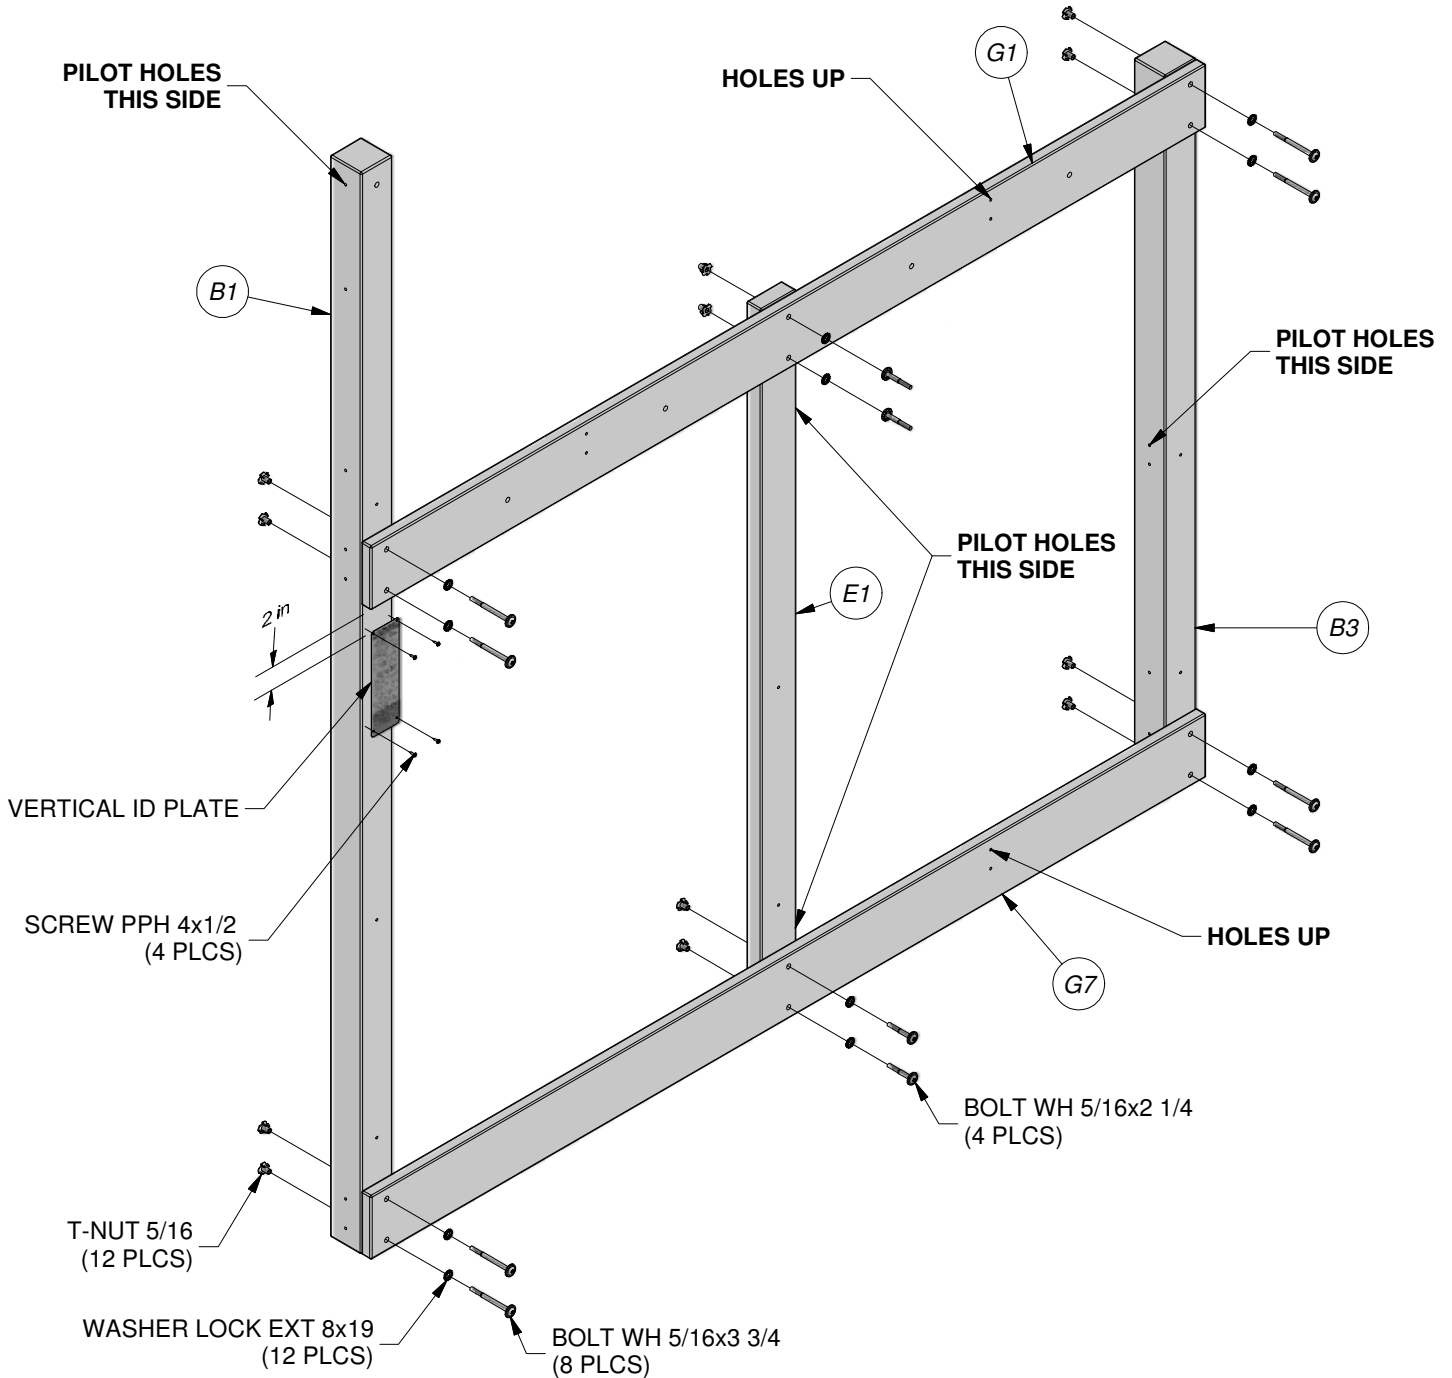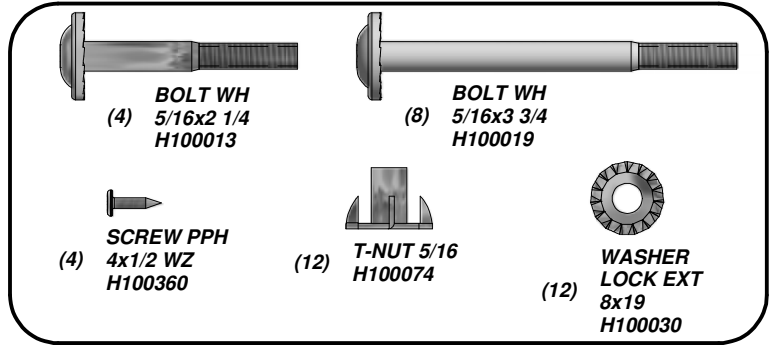


- (1) **B2 - TOWER LEG - W4L04561**
3"x3"x89 1/2" (76x76x2274)
- (1) **E2 - TOWER LEG - W4L04567**
1 3/8"x3 3/8"x59" (36x86x1500)
- (1) **B4 - TOWER LEG - W4L04568**
3"x3"x59" (76x76x1500)

- (1) **G7 - BOTTOM FLOOR RAIL - W4L11775**
1"x5 1/4"x80" (24x134x2032)
- (1) **G2 - TOP FLOOR RAIL - W4L04569**
1"x5 1/4"x80" (24x134x2032)

 **FORT ASSEMBLY
STEP 2**

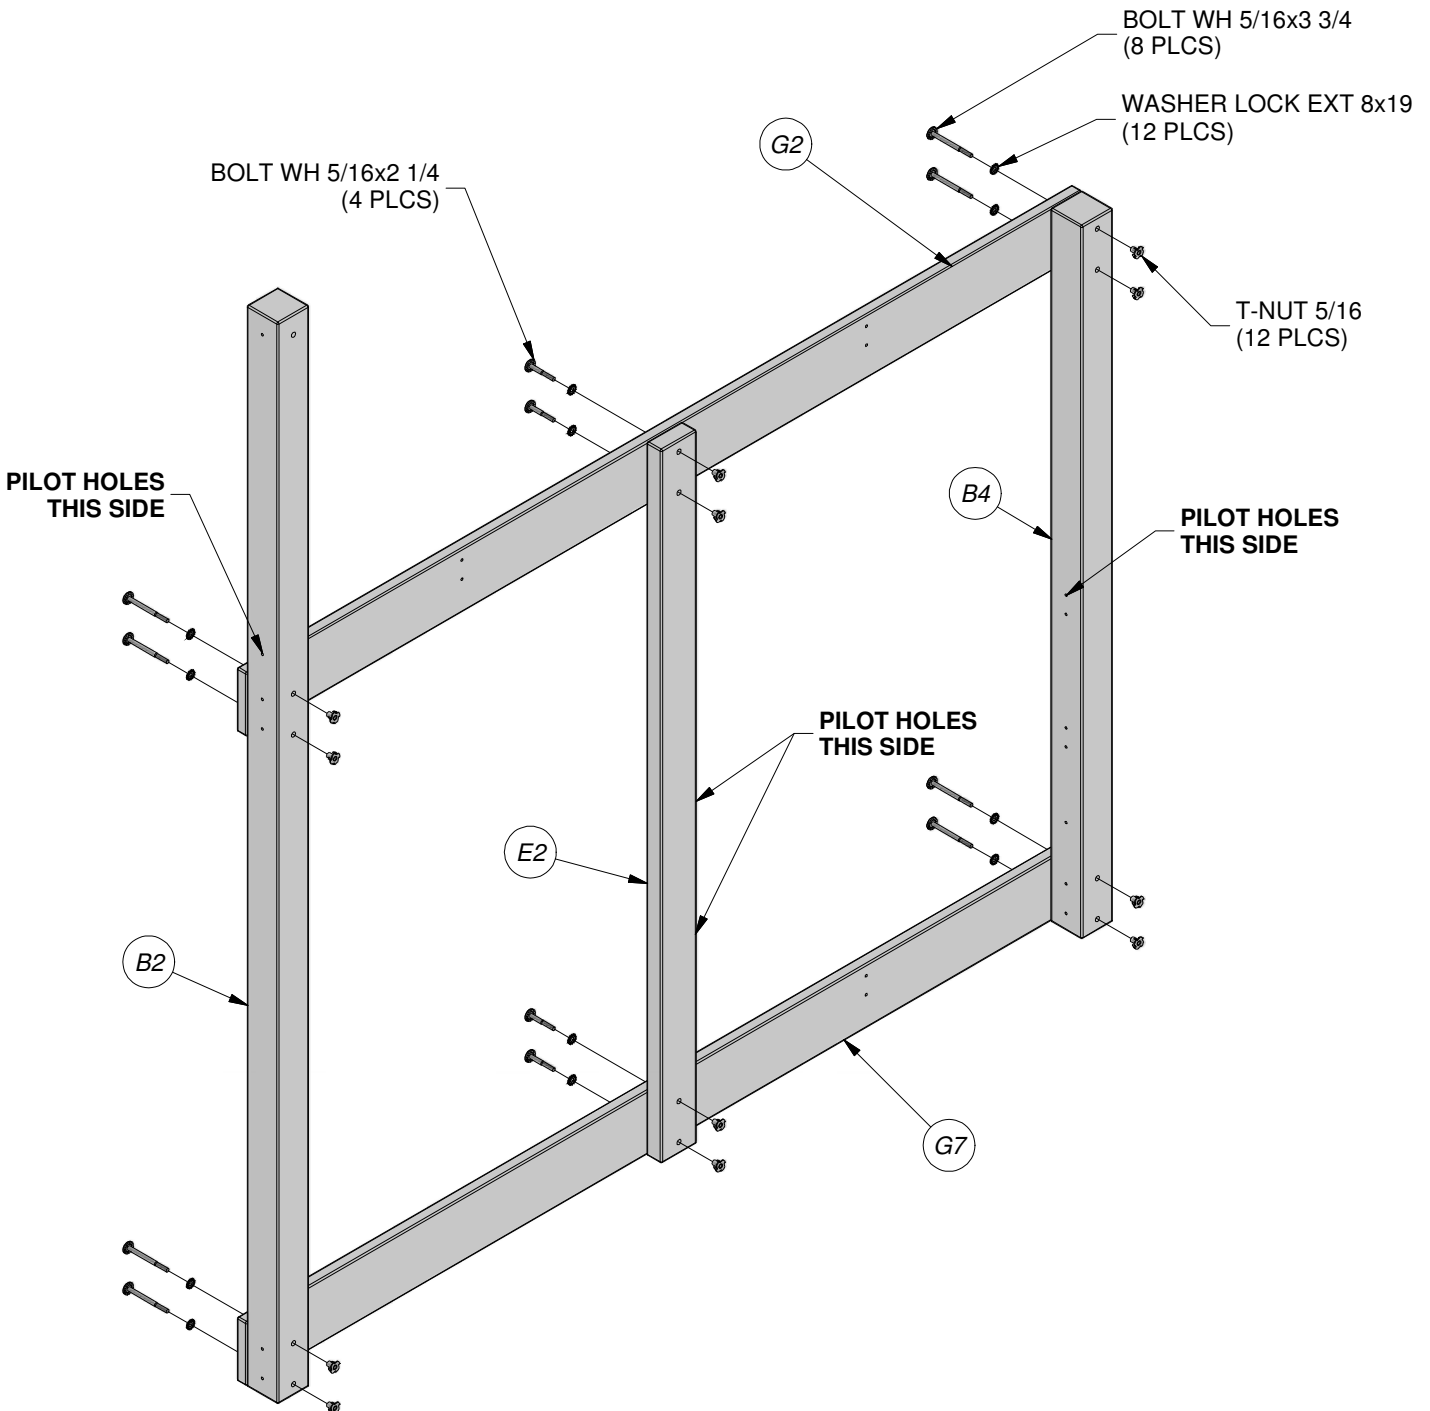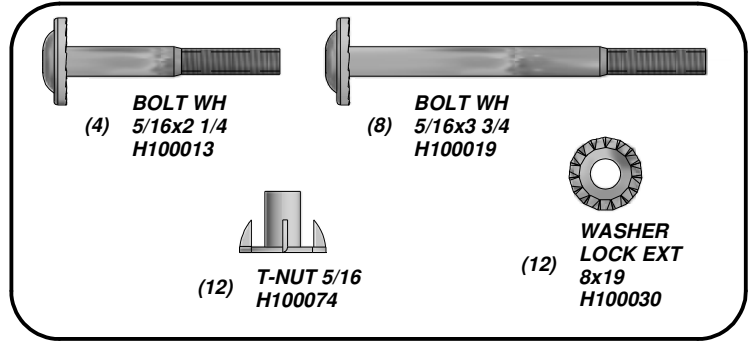



(1) **H28 - FRONT WALL RAIL - W4L11774**
1"x3 3/8"x60 1/2" (24x86x1537)





(1) **G3 - FLOOR RAIL - W4L04571**
1"x5 1/4"x60 1/2" (24x134x1537)



(1) **G6 - FLOOR RAIL - W4L11777**
1"x5 1/4"x60 1/2" (24x134x1537)

FORT ASSEMBLY STEP 3

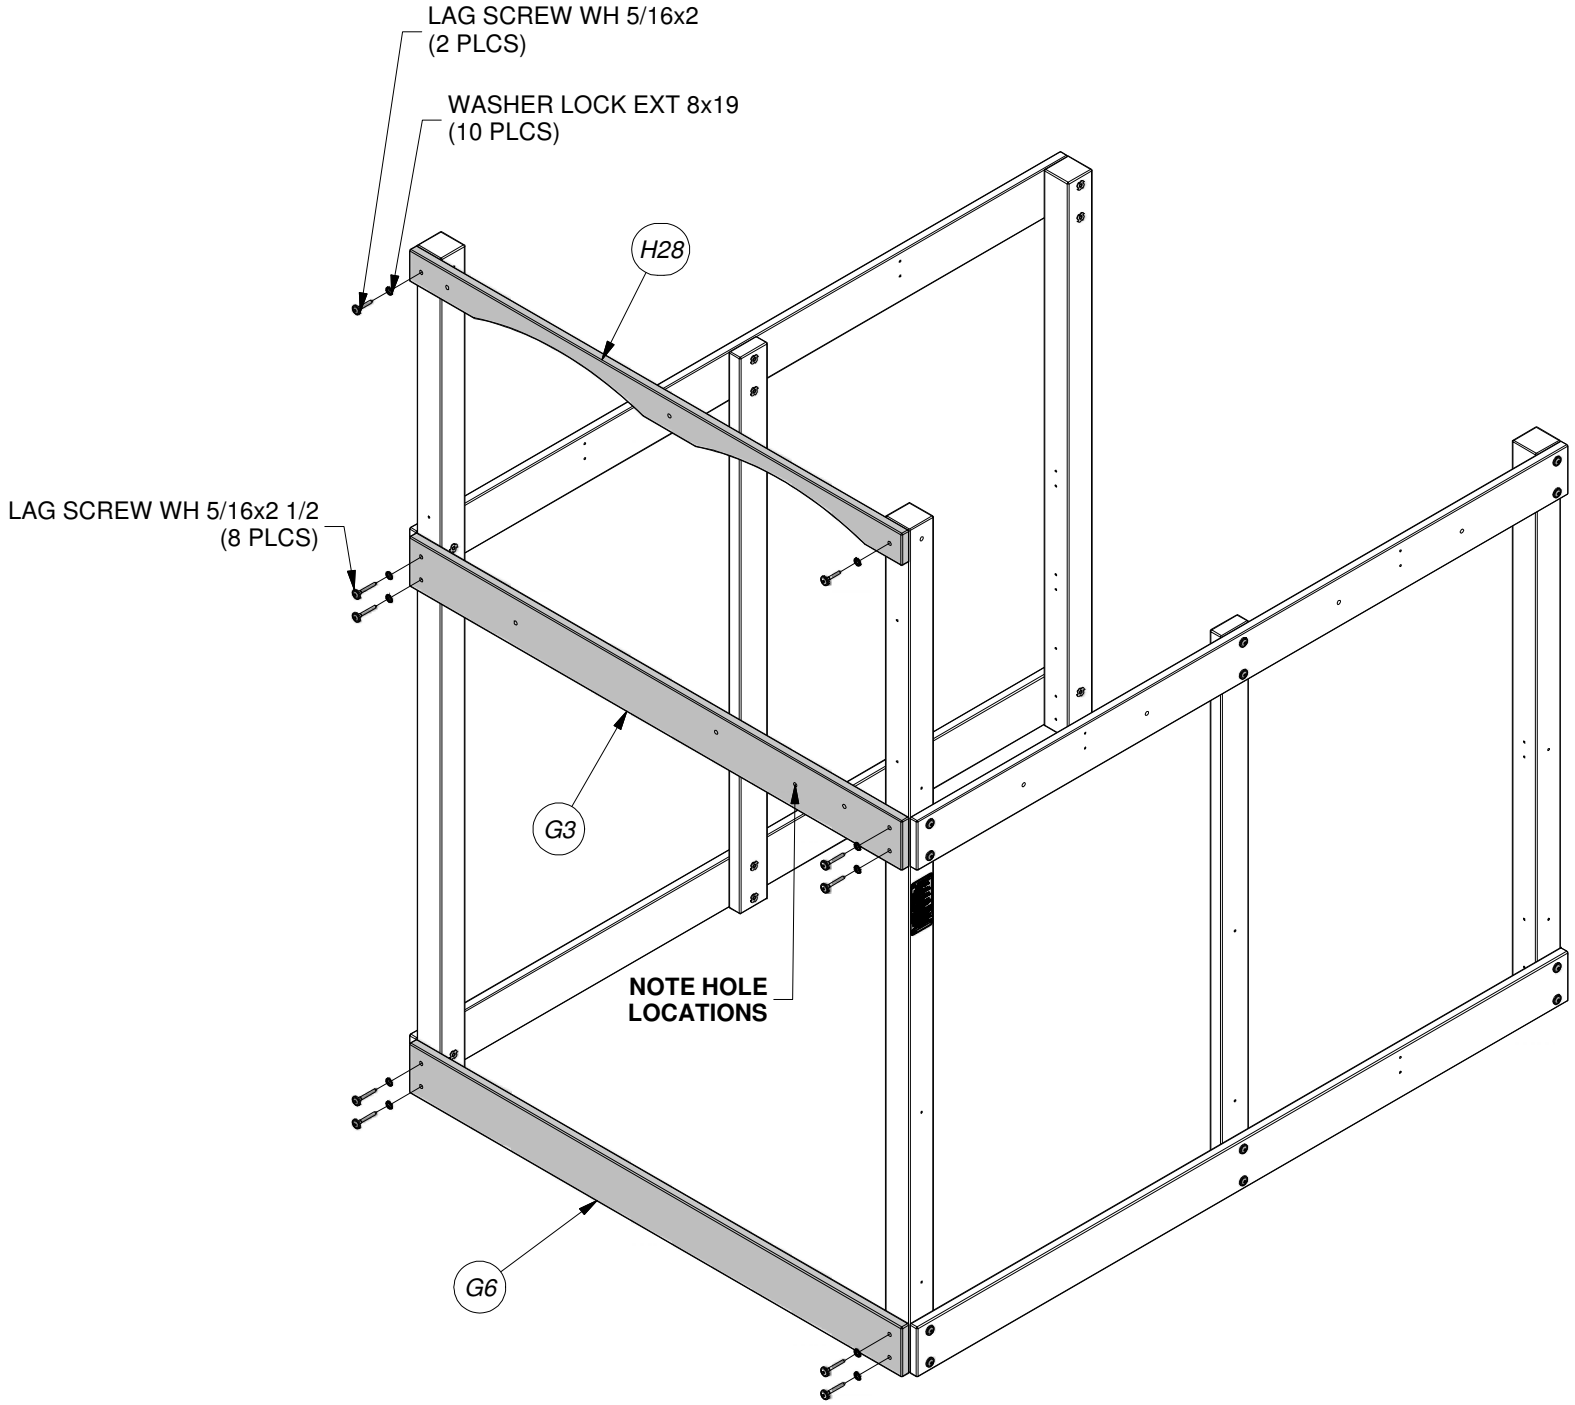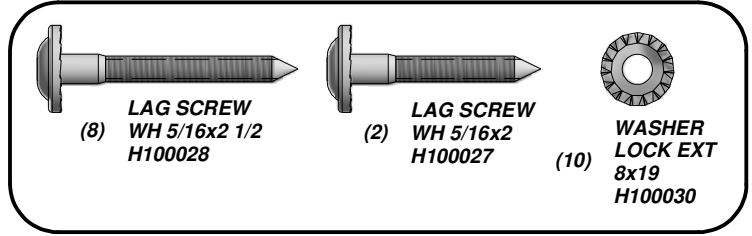





(1) **G4 - FLOOR RAIL - W4L04675**
1"x5 1/4"x60 1/2" (24x134x1537)



(1) **K2 - FLOOR RAIL - W4L04570**
5/8"x5 1/4"x60 1/2" (16x134x1537)

FORT ASSEMBLY STEP 4

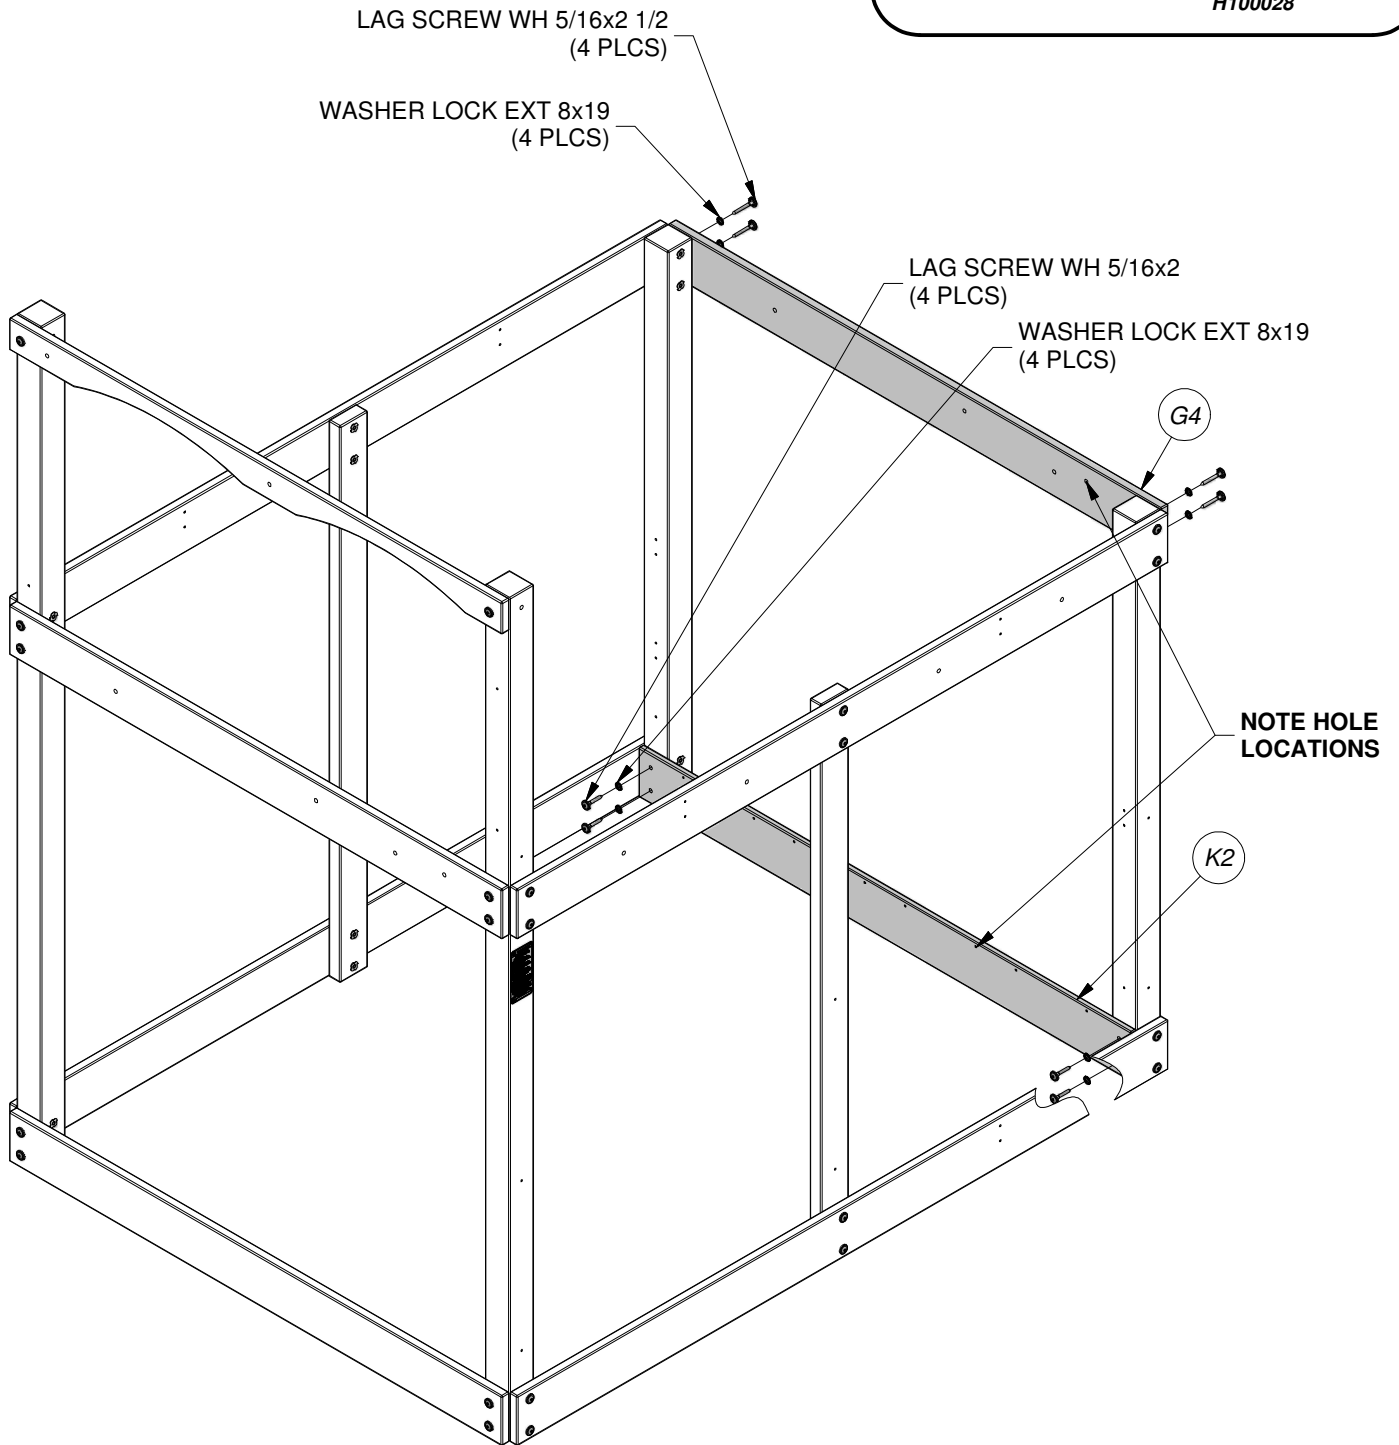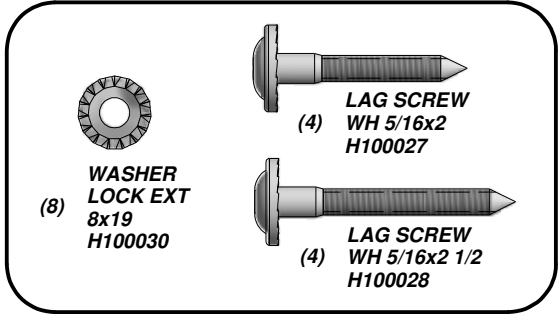





(1) **K3 - FLOOR RAIL - W4L04572**
5/8"x5 1/4"x60 1/2" (16x134x1537)




(1) **H26 - FLOOR JOIST - W4L04573**
1"x3 3/8"x60 1/2" (24x86x1537)

FORT ASSEMBLY STEP 5

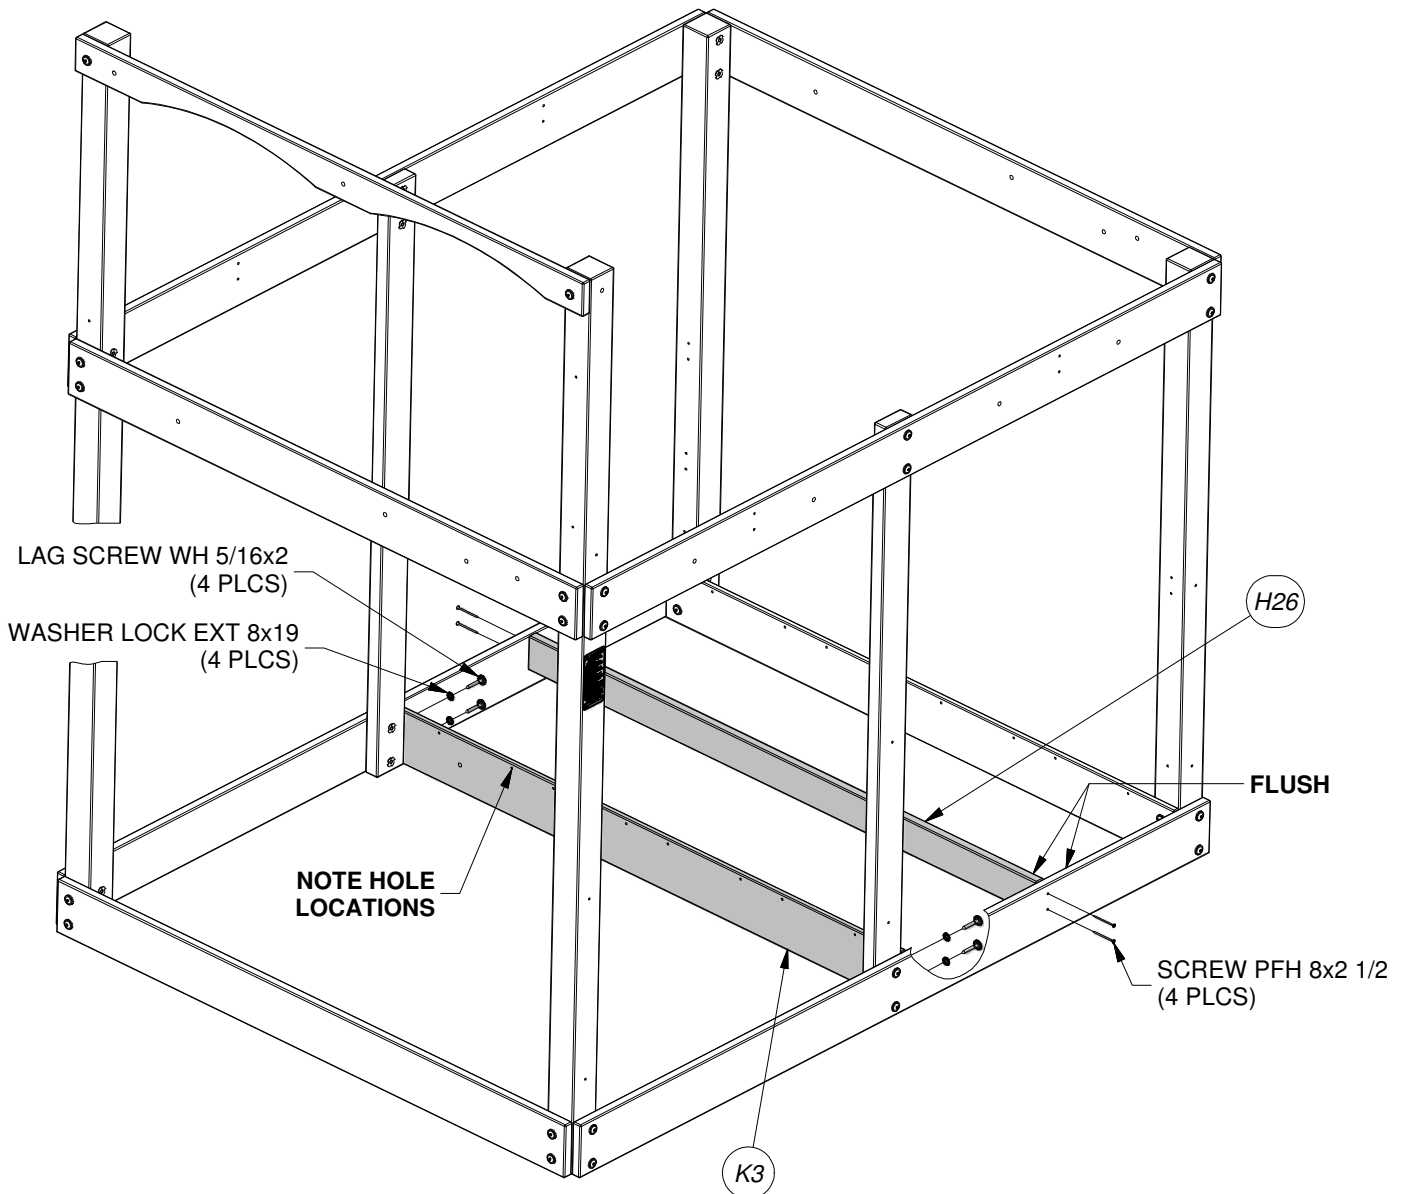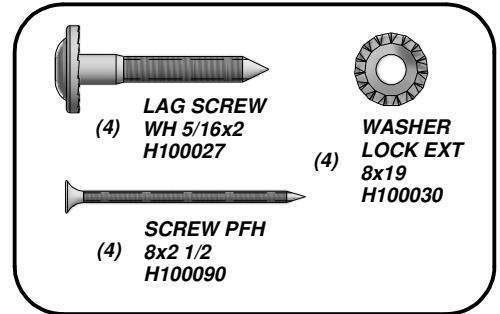


(2) **L2 - SAND BOX SEAT - W4L11776**
 5/8"x4 3/8"x24" (16x112x610)

(1) **H27 - PICNIC TABLE SUPPORT - W4L04574**
 1"x3 3/8"x28 5/8" (24x86x728)

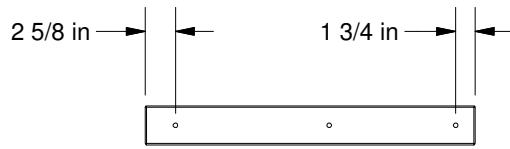


FORT ASSEMBLY
STEP 6

(8) SCREW PFH 8x1-1/2" H100086	(1) BOLT WH 5/16x1 1/2 H100010
(1) WASHER LOCK EXT 8x19 H100030	(1) T-NUT 5/16 H100074

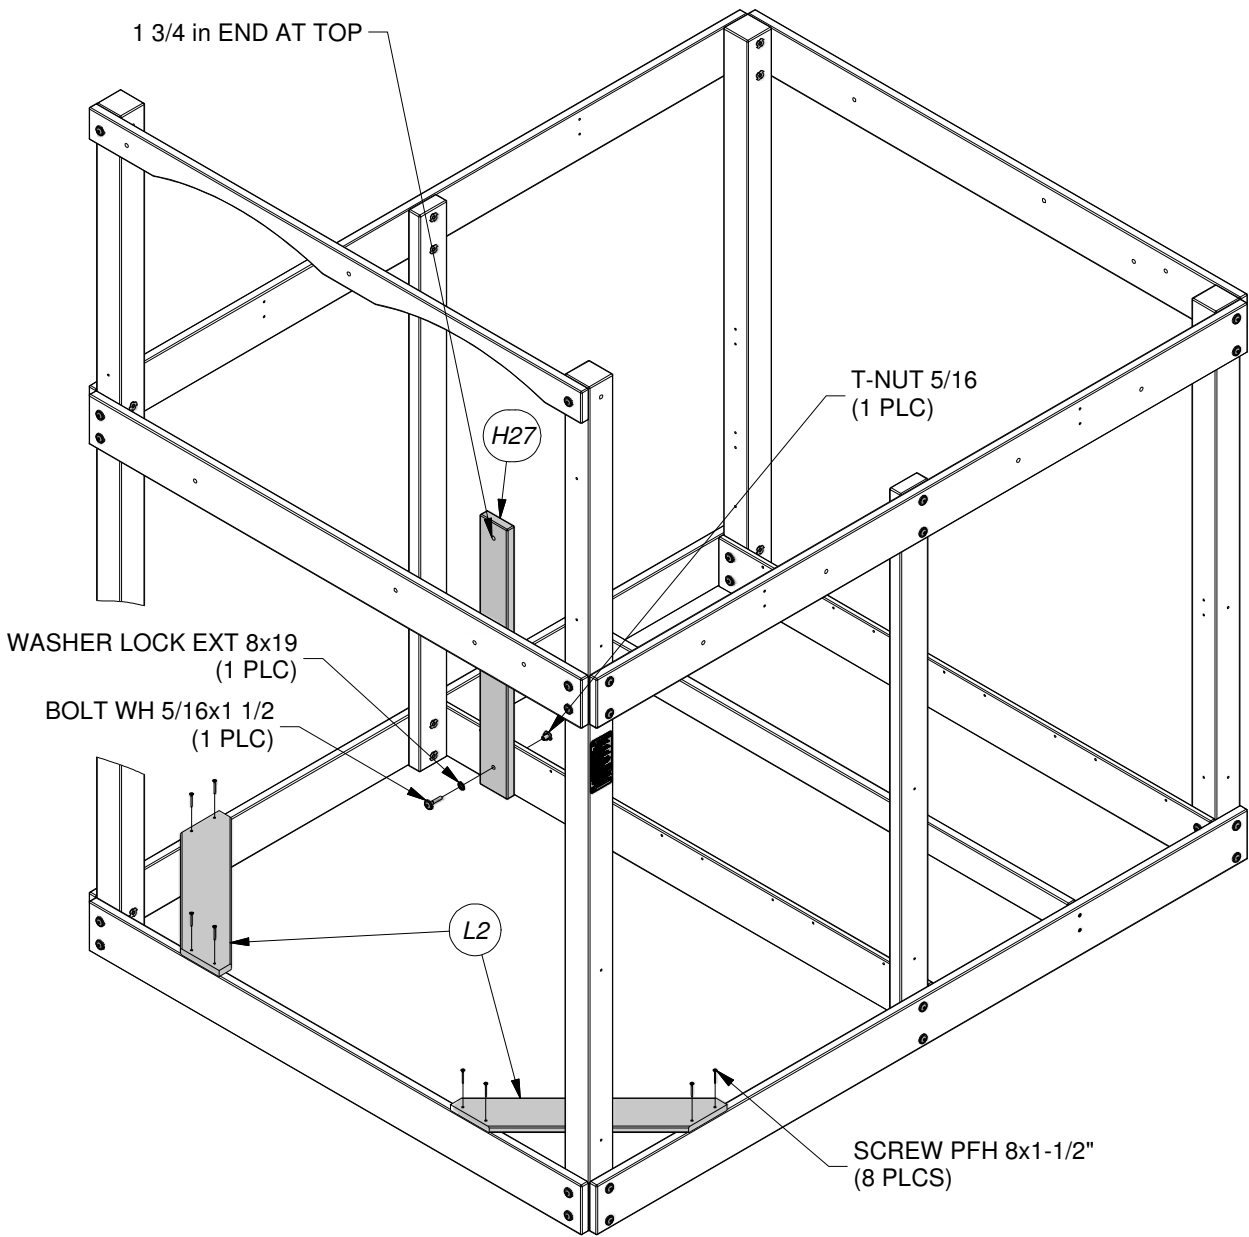





 (4) **FP1 - BOTTOM FLOOR PANEL - W2A01485**
1 5/8"x13 1/2"x35 3/8" (40x344x897)



(2) **Y2 - BOTTOM FLOOR BOARD - W4L04577**
5/8"x4"x35 1/4" (16x102x895)

FORT ASSEMBLY
STEP 7

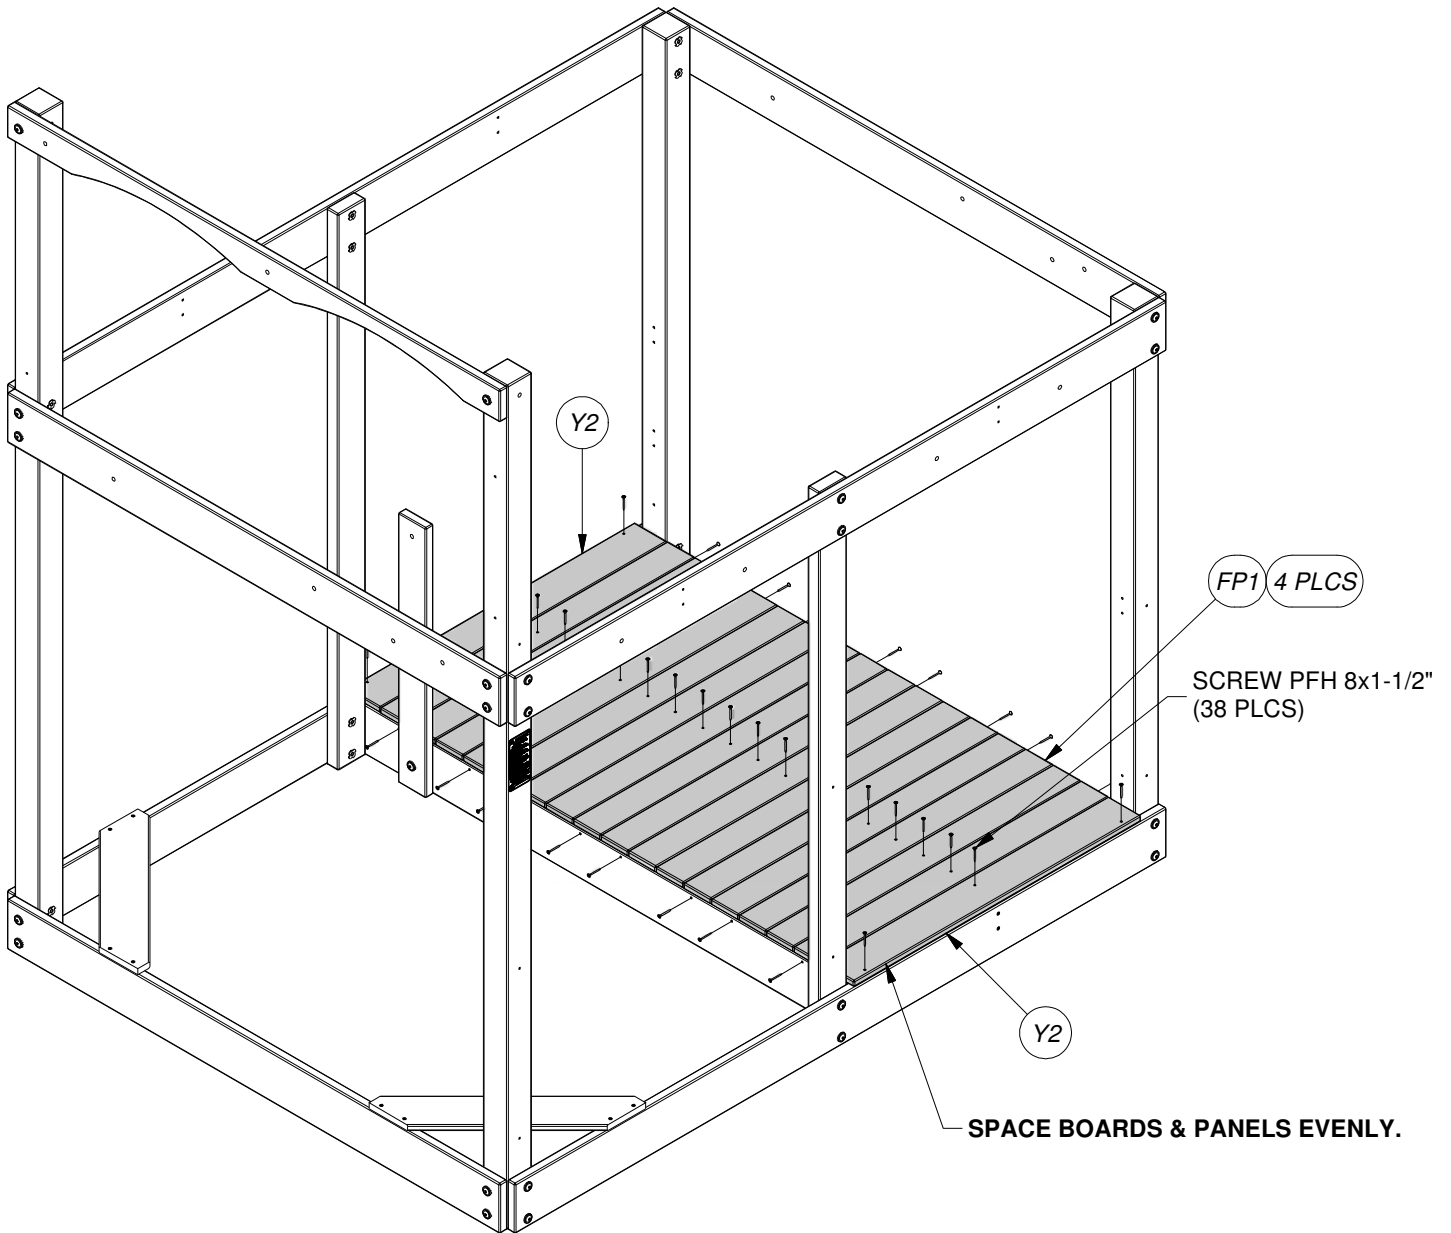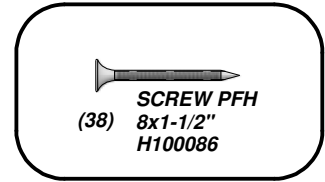




(1) **M3 - BOTTOM WALL RAIL - W4L04579**
5/8"x3 3/8"x60 1/2" (16x86x1537)





(1) **H3 - PICNIC TABLE RAIL - W4L04578**
1"x3 3/8"x67 1/4" (24x86x1708)

FORT ASSEMBLY STEP 8

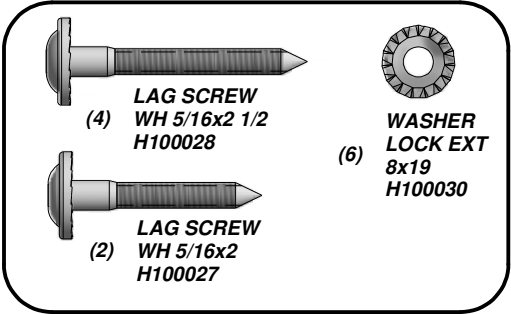



NOTE ANGLE CUT
FACES DOWNWARD

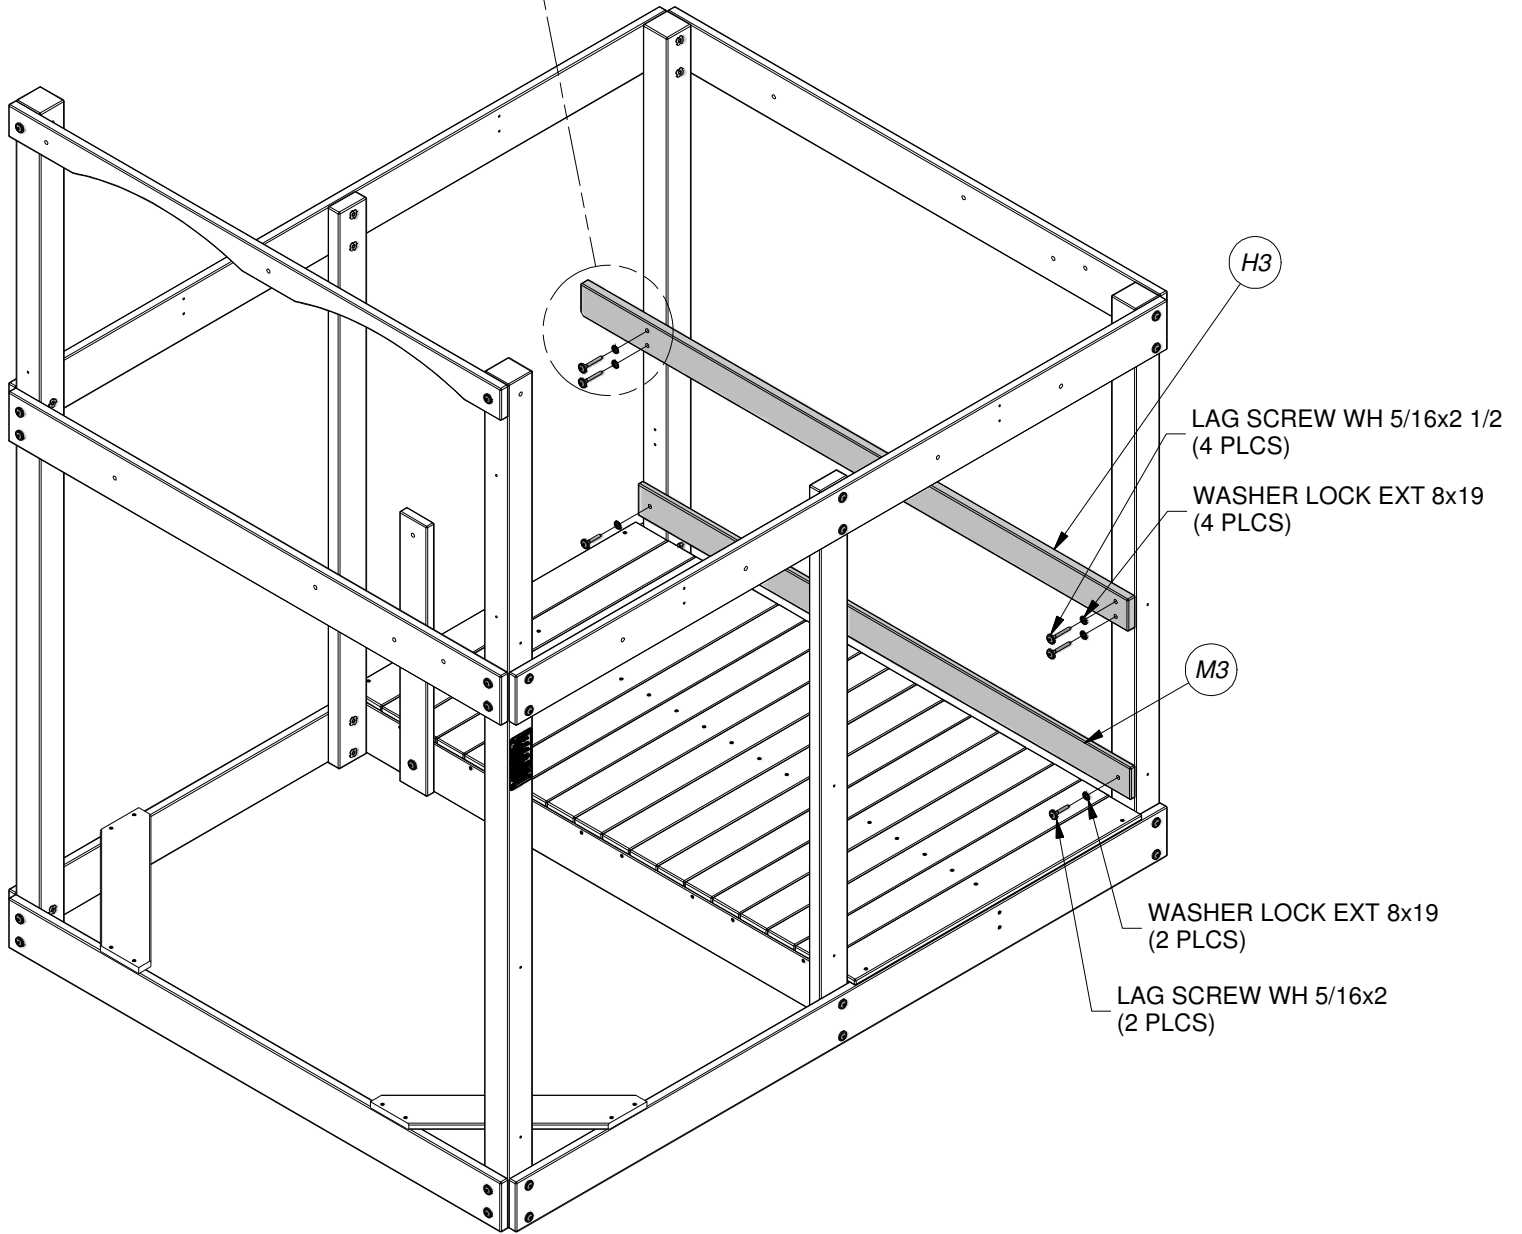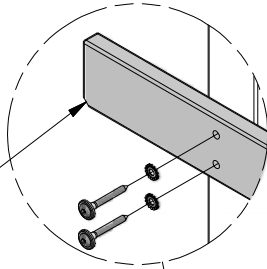




(8) M27 - BOTTOM WALL BOARD - W4L04580
5/8"x3 3/8"x21 3/8" (16x86x544)

FORT ASSEMBLY STEP 9

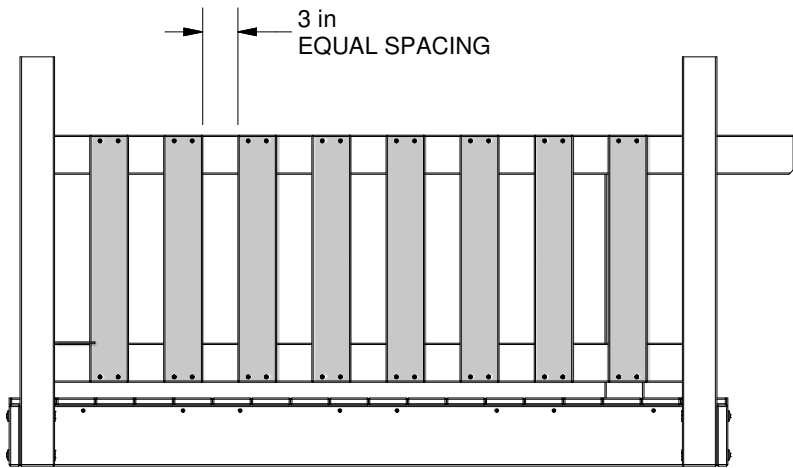



SCREW PFH
(32) 8x1-1/8"
H100088

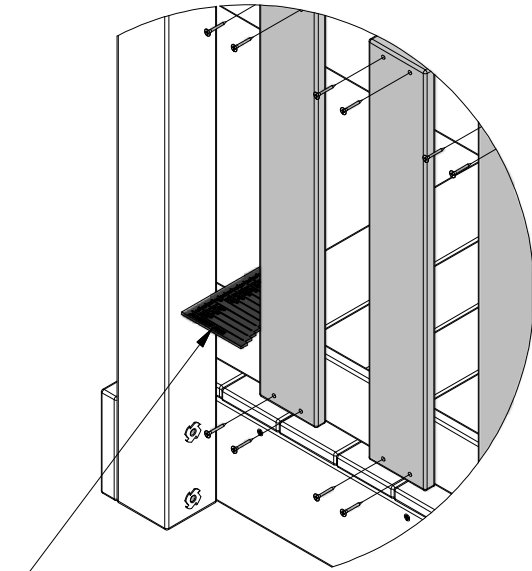

PICKET PAL

⚠ MEASURING TOOL TIP:

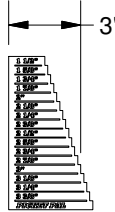


3"

PLACE THE FLAT EDGE OF THE PICKET PAL AGAINST THE EDGE OF AN ALREADY INSTALLED PART. INSTALL THE PICKET AT THE REQUIRED DISTANCE AND REPEAT PROCESS UNTIL COMPLETED.

(Picket Pal)

SCREW PFH 8x1-1/8"
(32 PLCS)

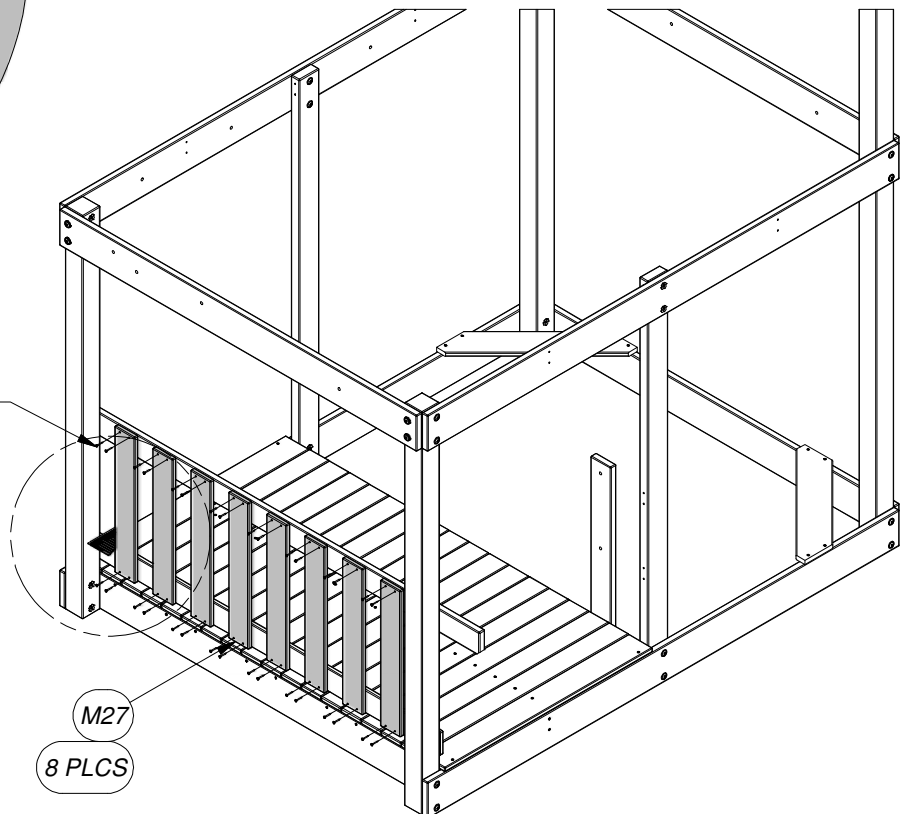




(2) **M2 - BOTTOM WALL RAIL - W4L04596**
5/8"x3 3/8"x80" (16x86x2032)

FORT ASSEMBLY
STEP 10

LAG SCREW
(4) WH 5/16x2
H100027

LAG SCREW
(2) WH 5/16x1 1/2
H100026


WASHER LOCK EXT
(6) 8x19
H100030

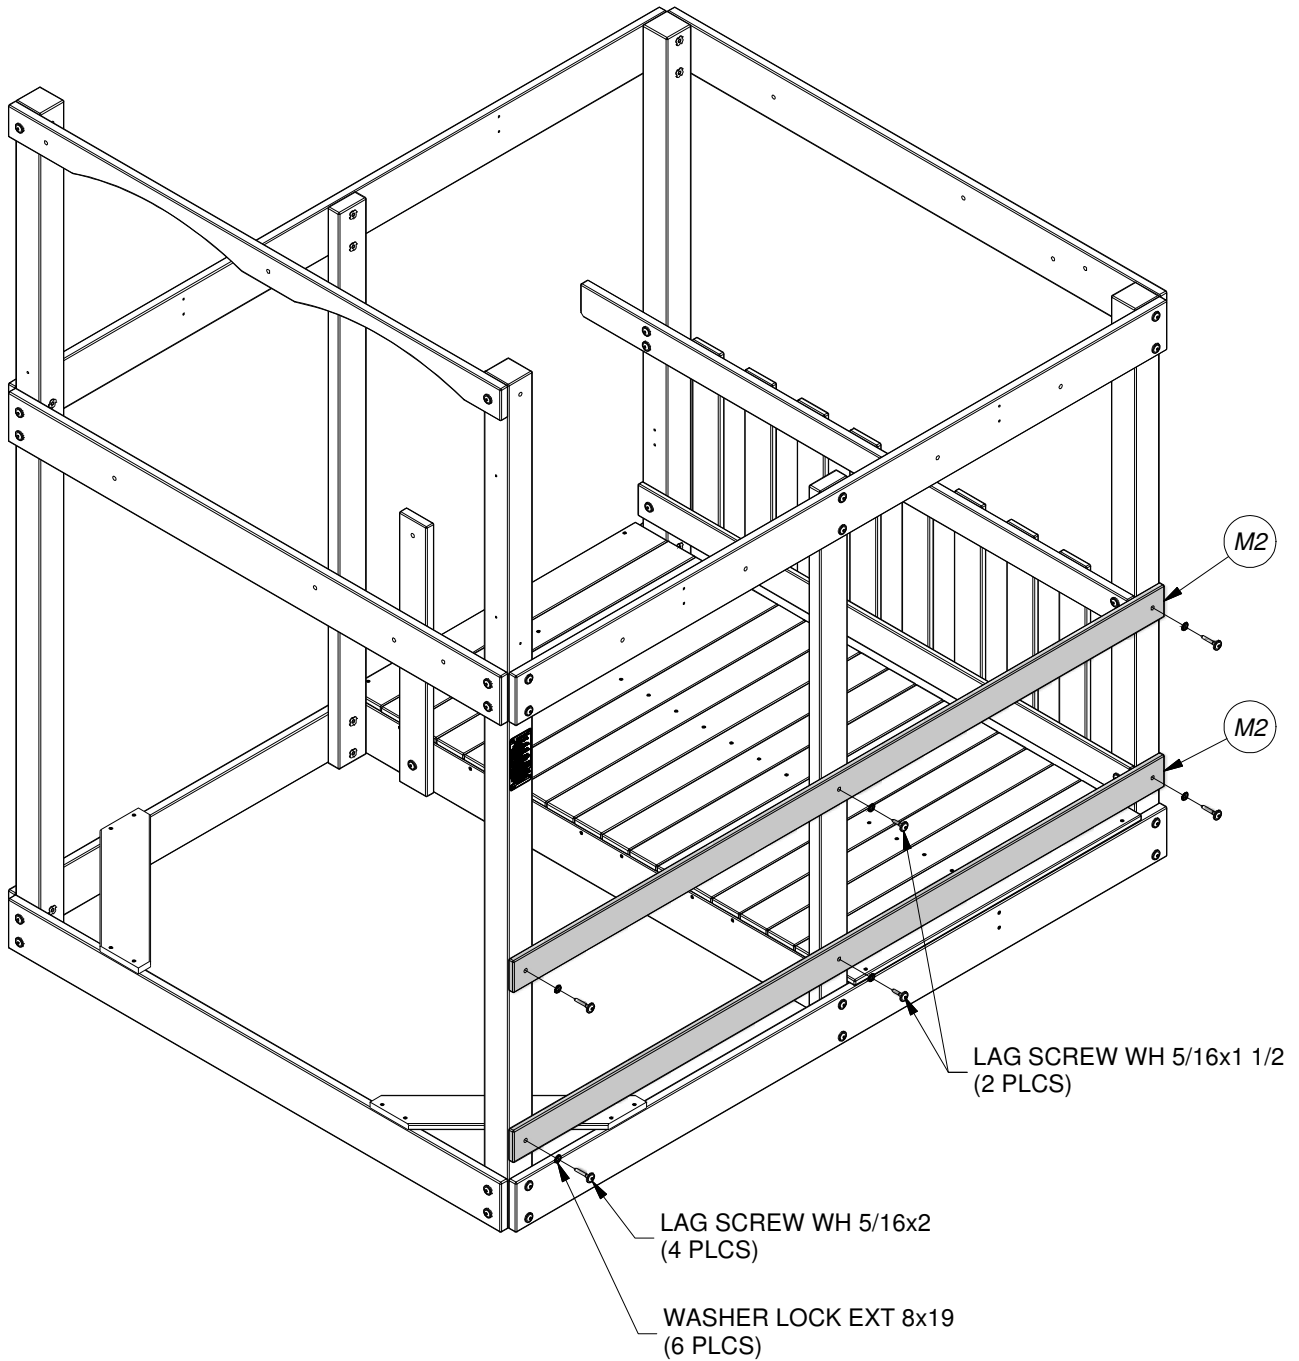



(10) **M27 - BOTTOM WALL BOARD - W4L04580**
5/8"x3 3/8"x21 3/8" (16x86x544)

**FORT ASSEMBLY
STEP 11**

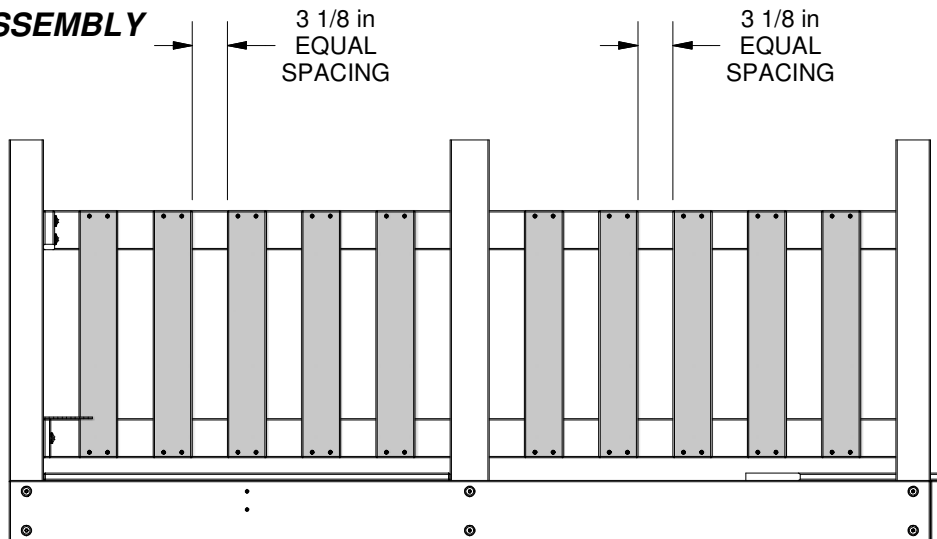


SCREW PFH
(40) 8x1-1/8"
H100088

(Picket Pal)

SCREW PFH 8x1-1/8"
(40 PLCS)


10 PLCS

M27


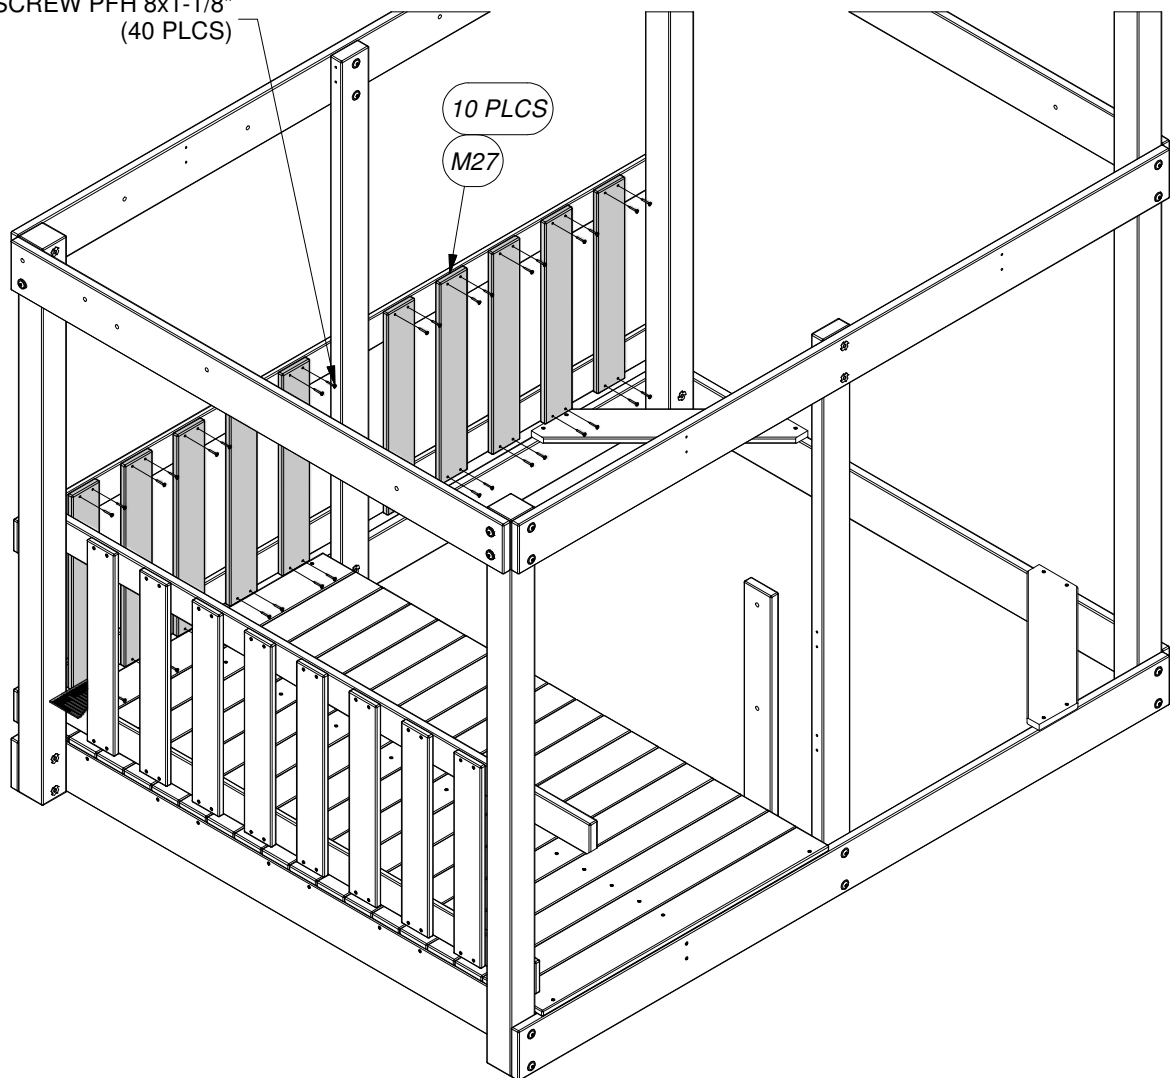



(1) **H16 - PICNIC TABLE SEAT RAIL - W4L04597**
 1"x3 3/8"x32" (24x86x812)

(1) **H23 - PICNIC TABLE BRACE - W4L04598**
 1"x3 3/8"x17 1/2" (24x86x444)

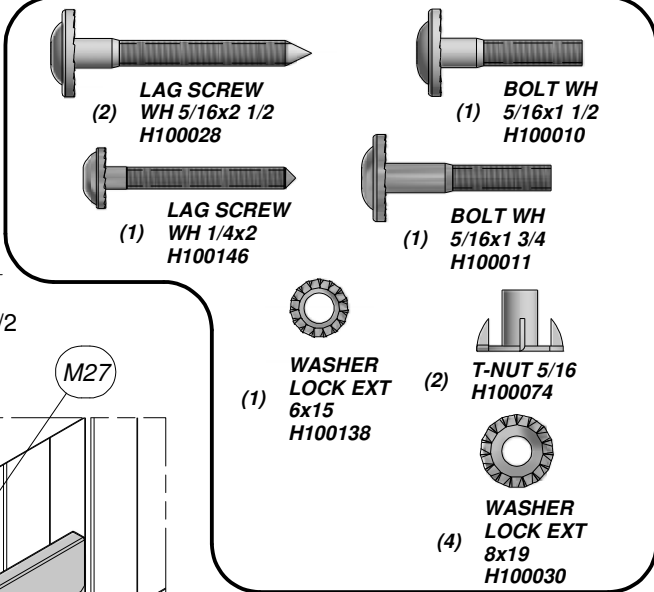

**FORT ASSEMBLY
 STEP 12**

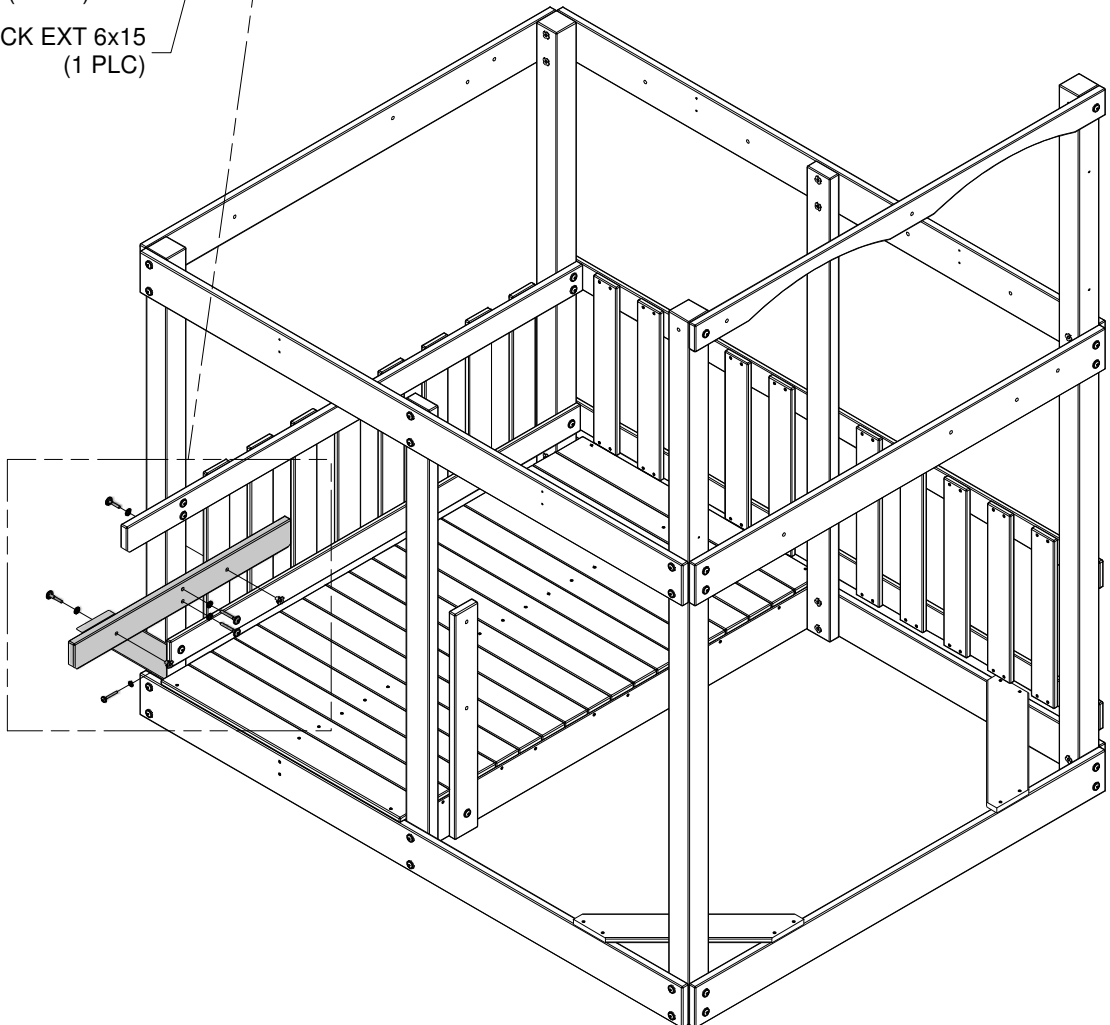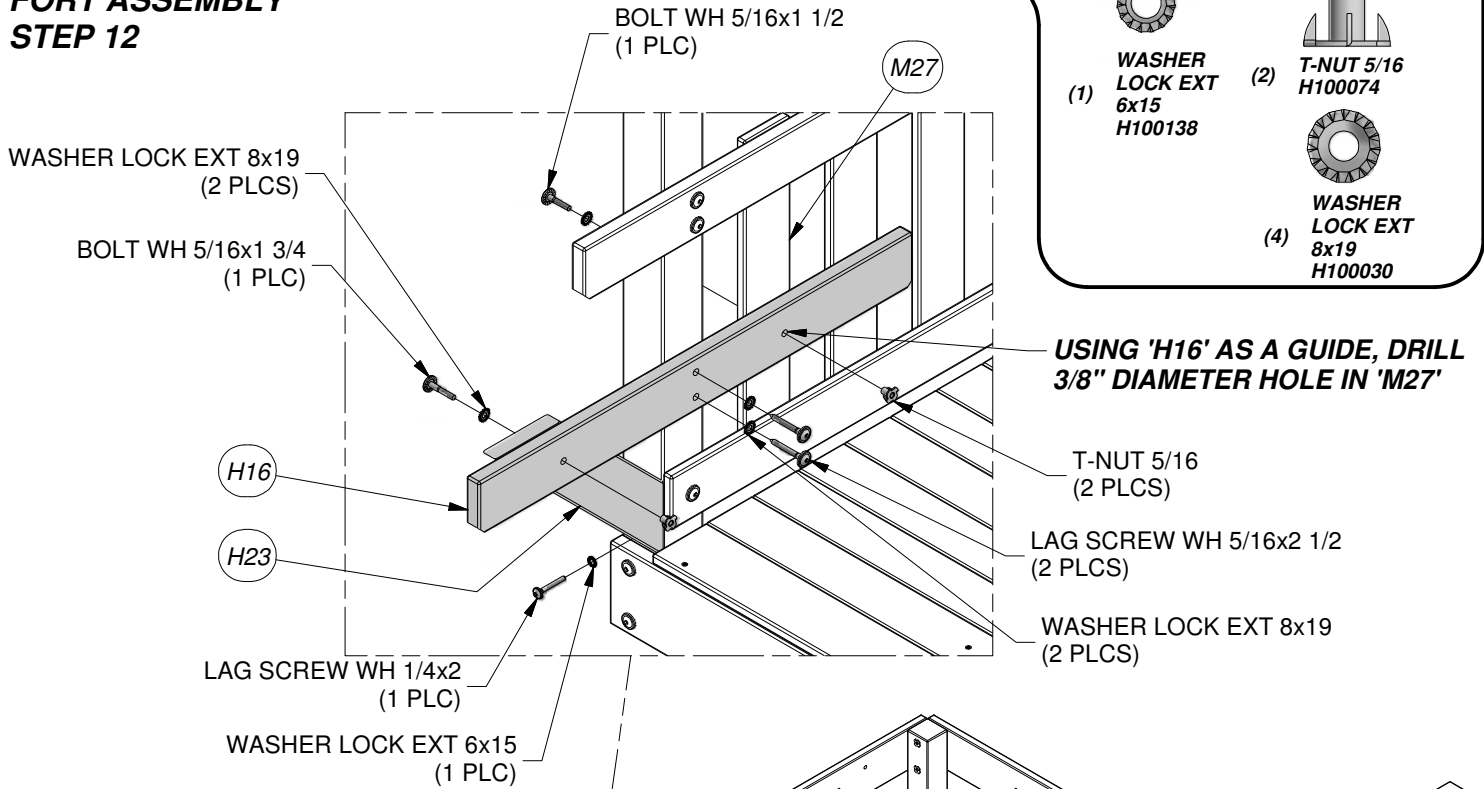

 


(1) H17 - PICNIC TABLE SEAT RAIL - W4L04599
1"x3 3/8"x32" (24x86x812)



(1) H23 - PICNIC TABLE BRACE - W4L04598
1"x3 3/8"x17 1/2" (24x86x444)

FORT ASSEMBLY STEP 13

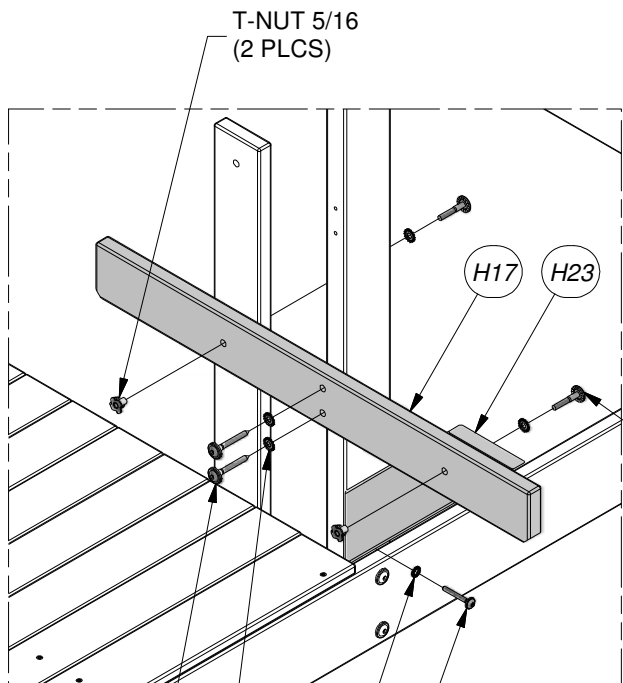

(2) LAG SCREW WH 5/16x2 1/2 H100028	(2) BOLT WH 5/16x1 3/4 H100011	(2) T-NUT 5/16 H100074
(1) LAG SCREW WH 1/4x2 H100146	(4) WASHER LOCK EXT 8x19 H100030	(1) WASHER LOCK EXT 6x15 H100138


LAG SCREW WH 5/16x2 1/2
(2 PLCS)

WASHER LOCK EXT 8x19
(4 PLCS)

WASHER LOCK EXT 6x15
(1 PLC)

LAG SCREW WH 1/4x2
(1 PLC)



BOLT WH 5/16x1 3/4
(2 PLCS)

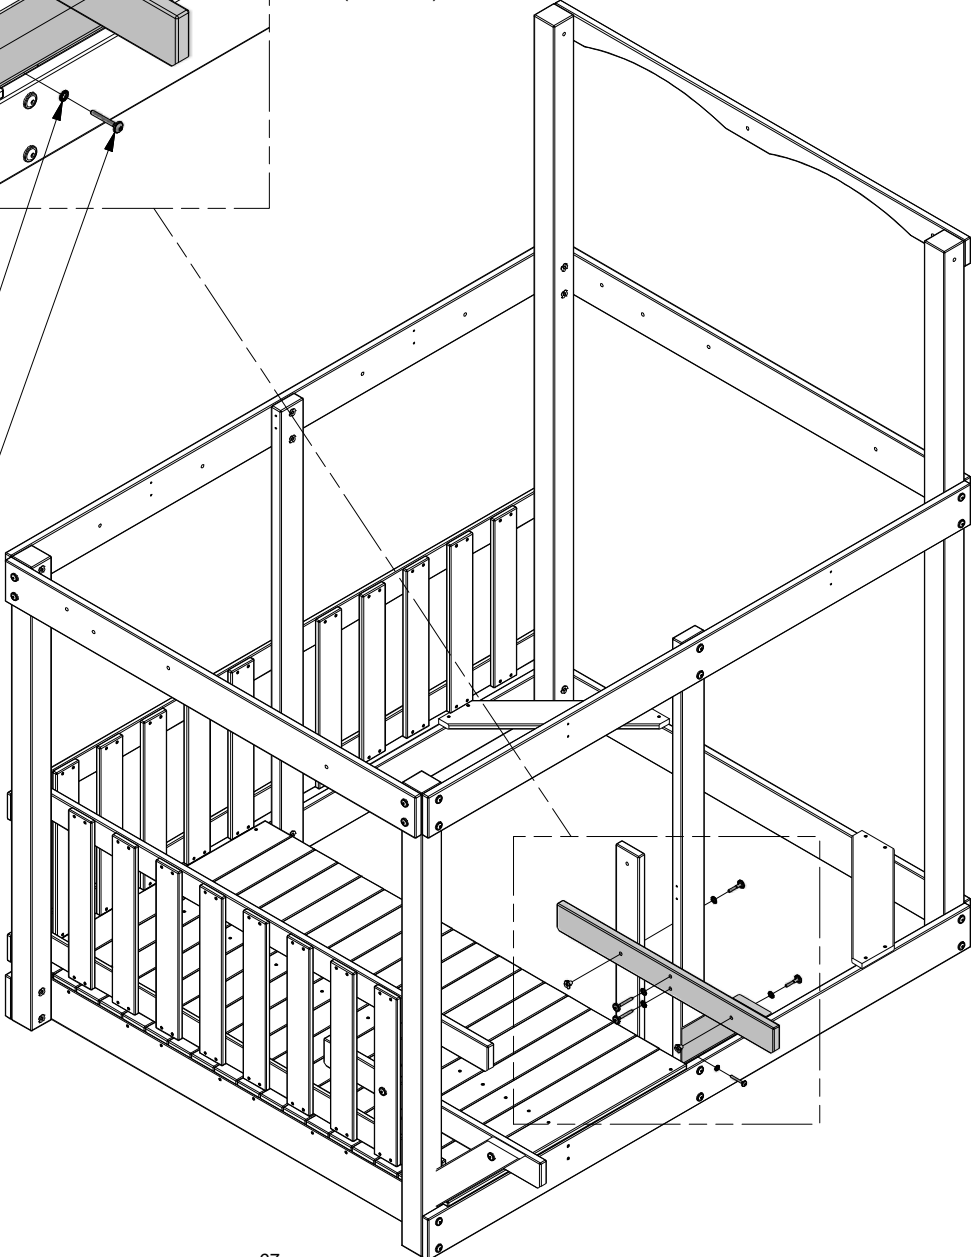




(4) H15 - PICNIC TABLE SEAT - W4L04600
 1"x3 3/8"x35 3/8" (24x86x897)


 
FORT ASSEMBLY
STEP 14

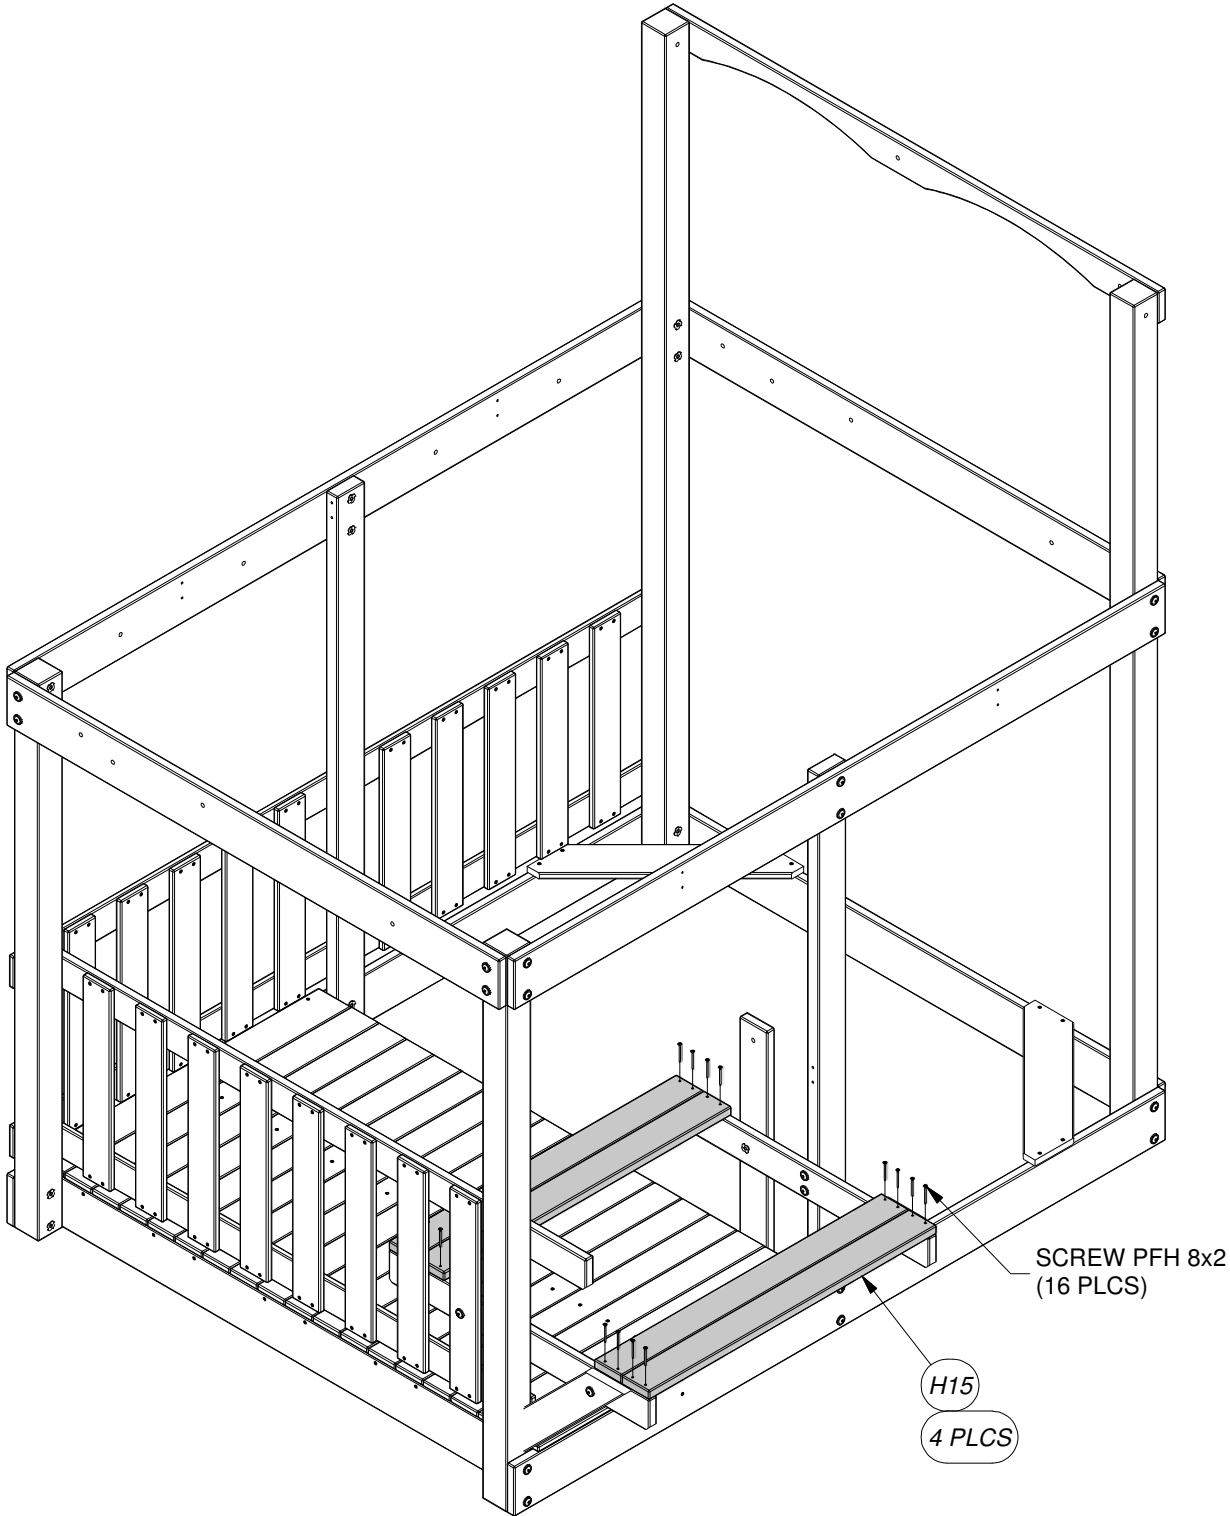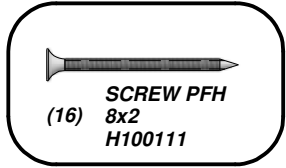



(1) **H24 - PICNIC TABLE TOP SUPPORT - W4L04601**
1"x3 3/8"x16 1/2" (24x86x418)

FORT ASSEMBLY
STEP 15

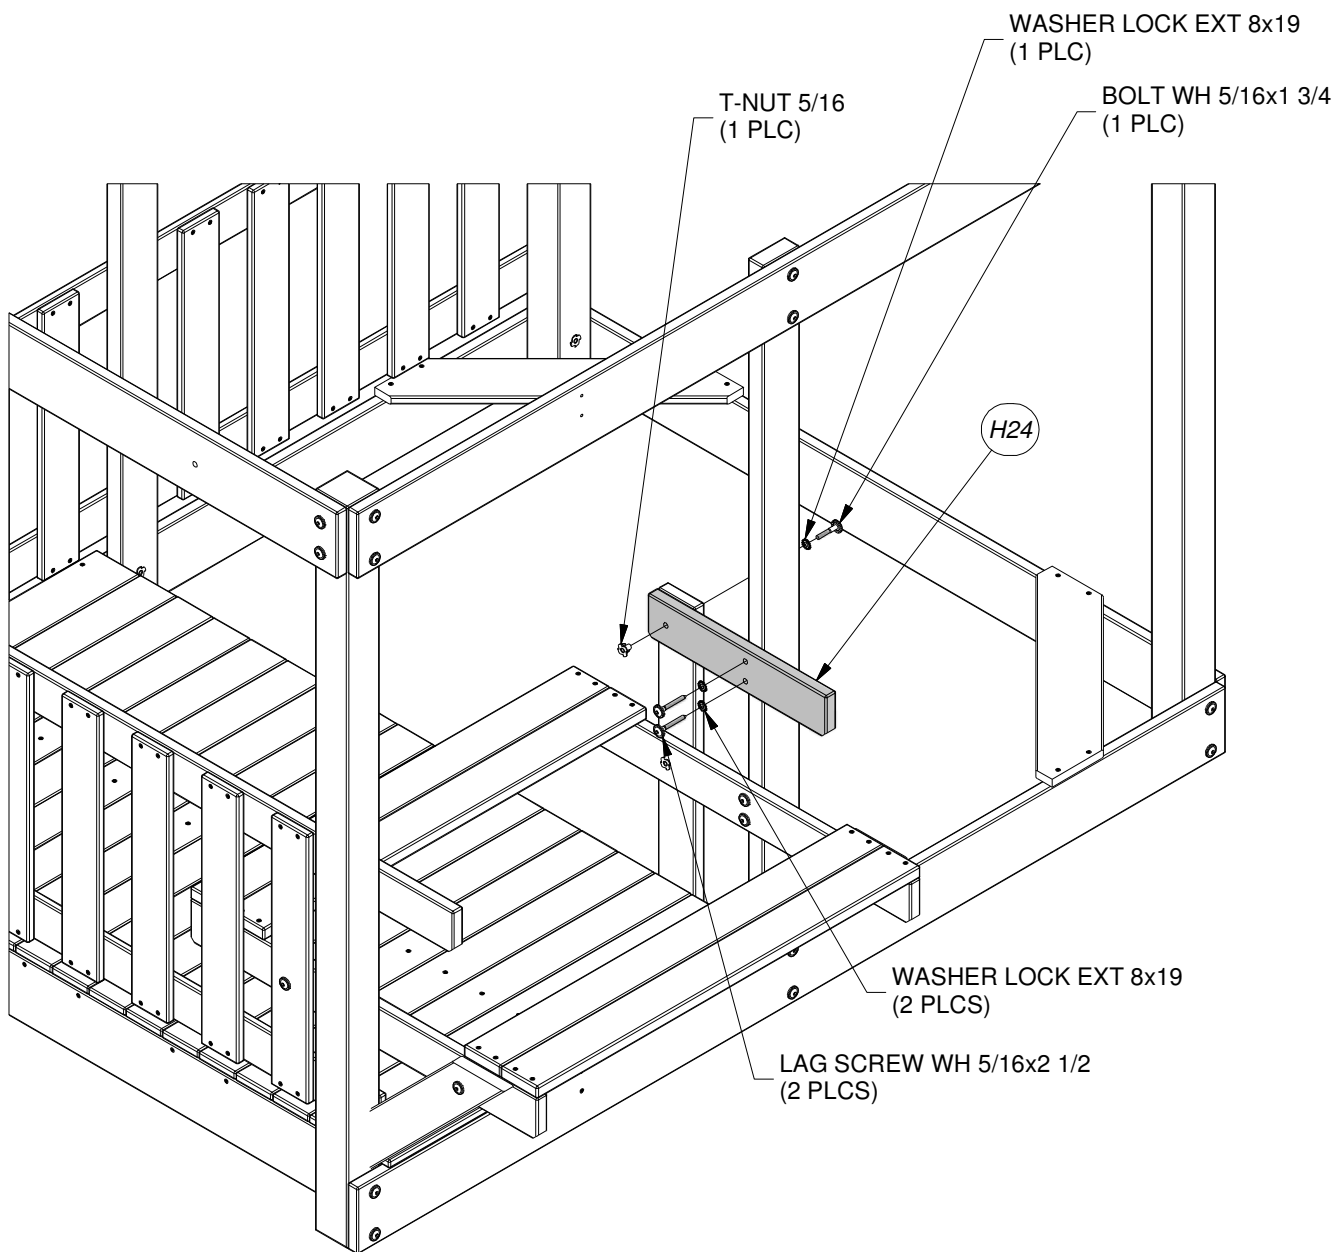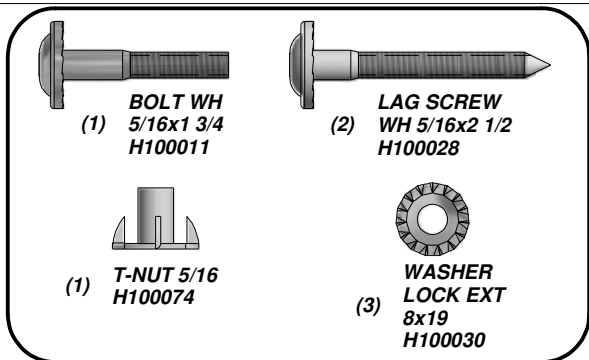




 (1) **M30 - PICNIC TABLE TOP CLEAT - W4L04604**
5/8"x3 3/8"x16" (16x86x406)





(1) **M16 - CENTER PICNIC TABLE TOP - W4L04603**
5/8"x3"x38 1/4" (16x76x973)




(4) **M13 - PICNIC TABLE TOP - W4L04602**
5/8"x3 3/8"x41 1/4" (16x86x1049)

FORT ASSEMBLY
STEP 16

 **SCREW PFH**
(20) 8x1-1/2"
H100086

 **SCREW PFH**
(5) 8x1-1/8"
H100088


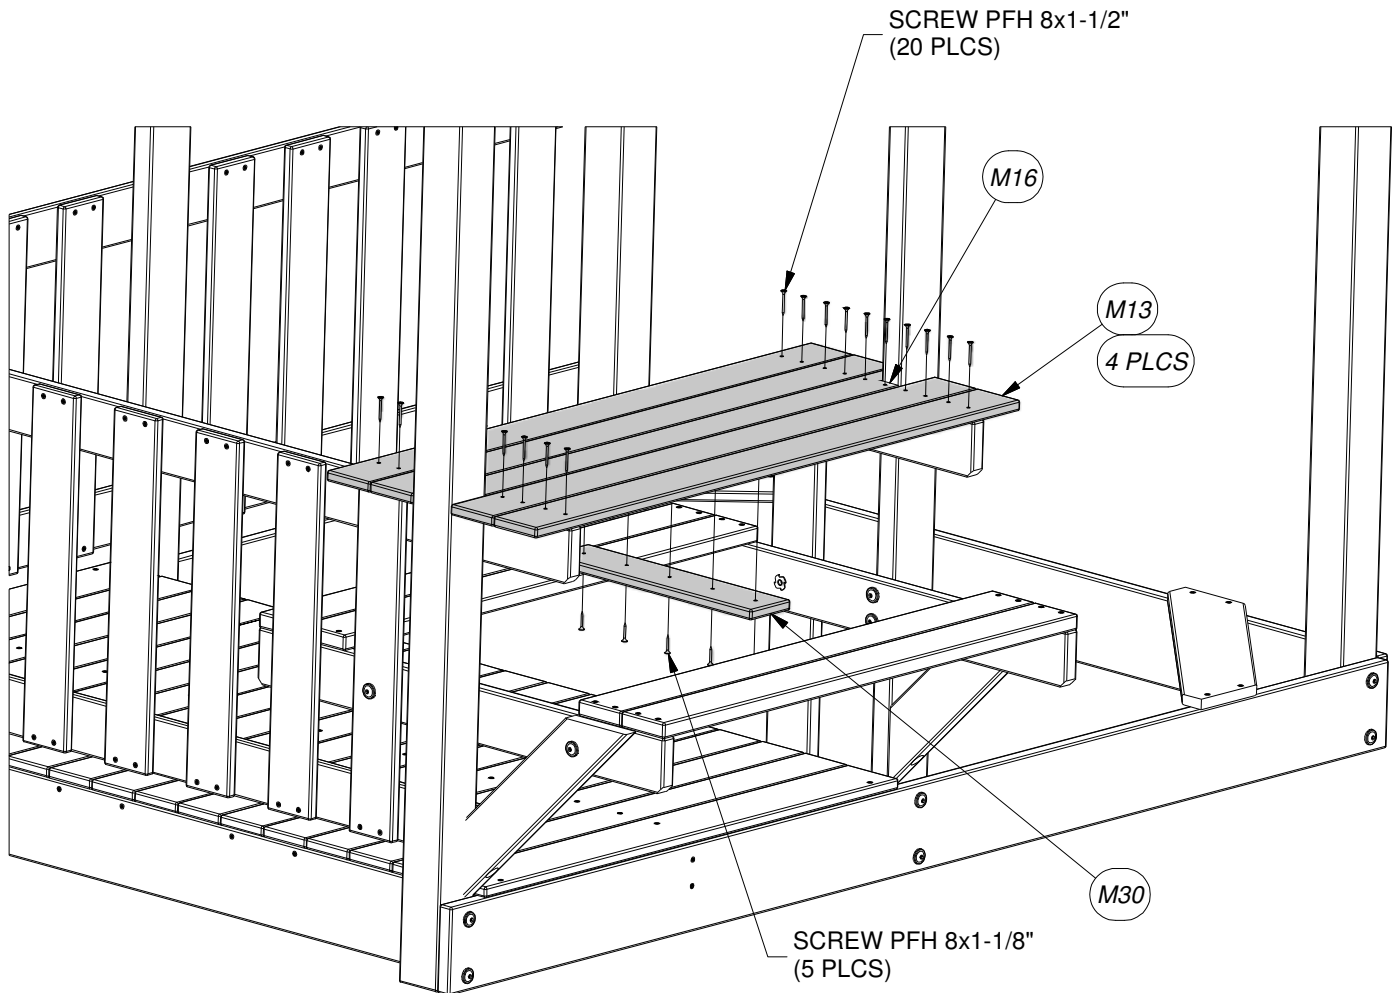



NOTE:
CENTER M30 CLEAT ON BOTTOM
OF TABLE TOP BOARDS.



(2) H25 - TOP FLOOR SUPPORT - W4L04606
1"x3 3/8"x3" (24x86x76)



**FORT ASSEMBLY
STEP 17**

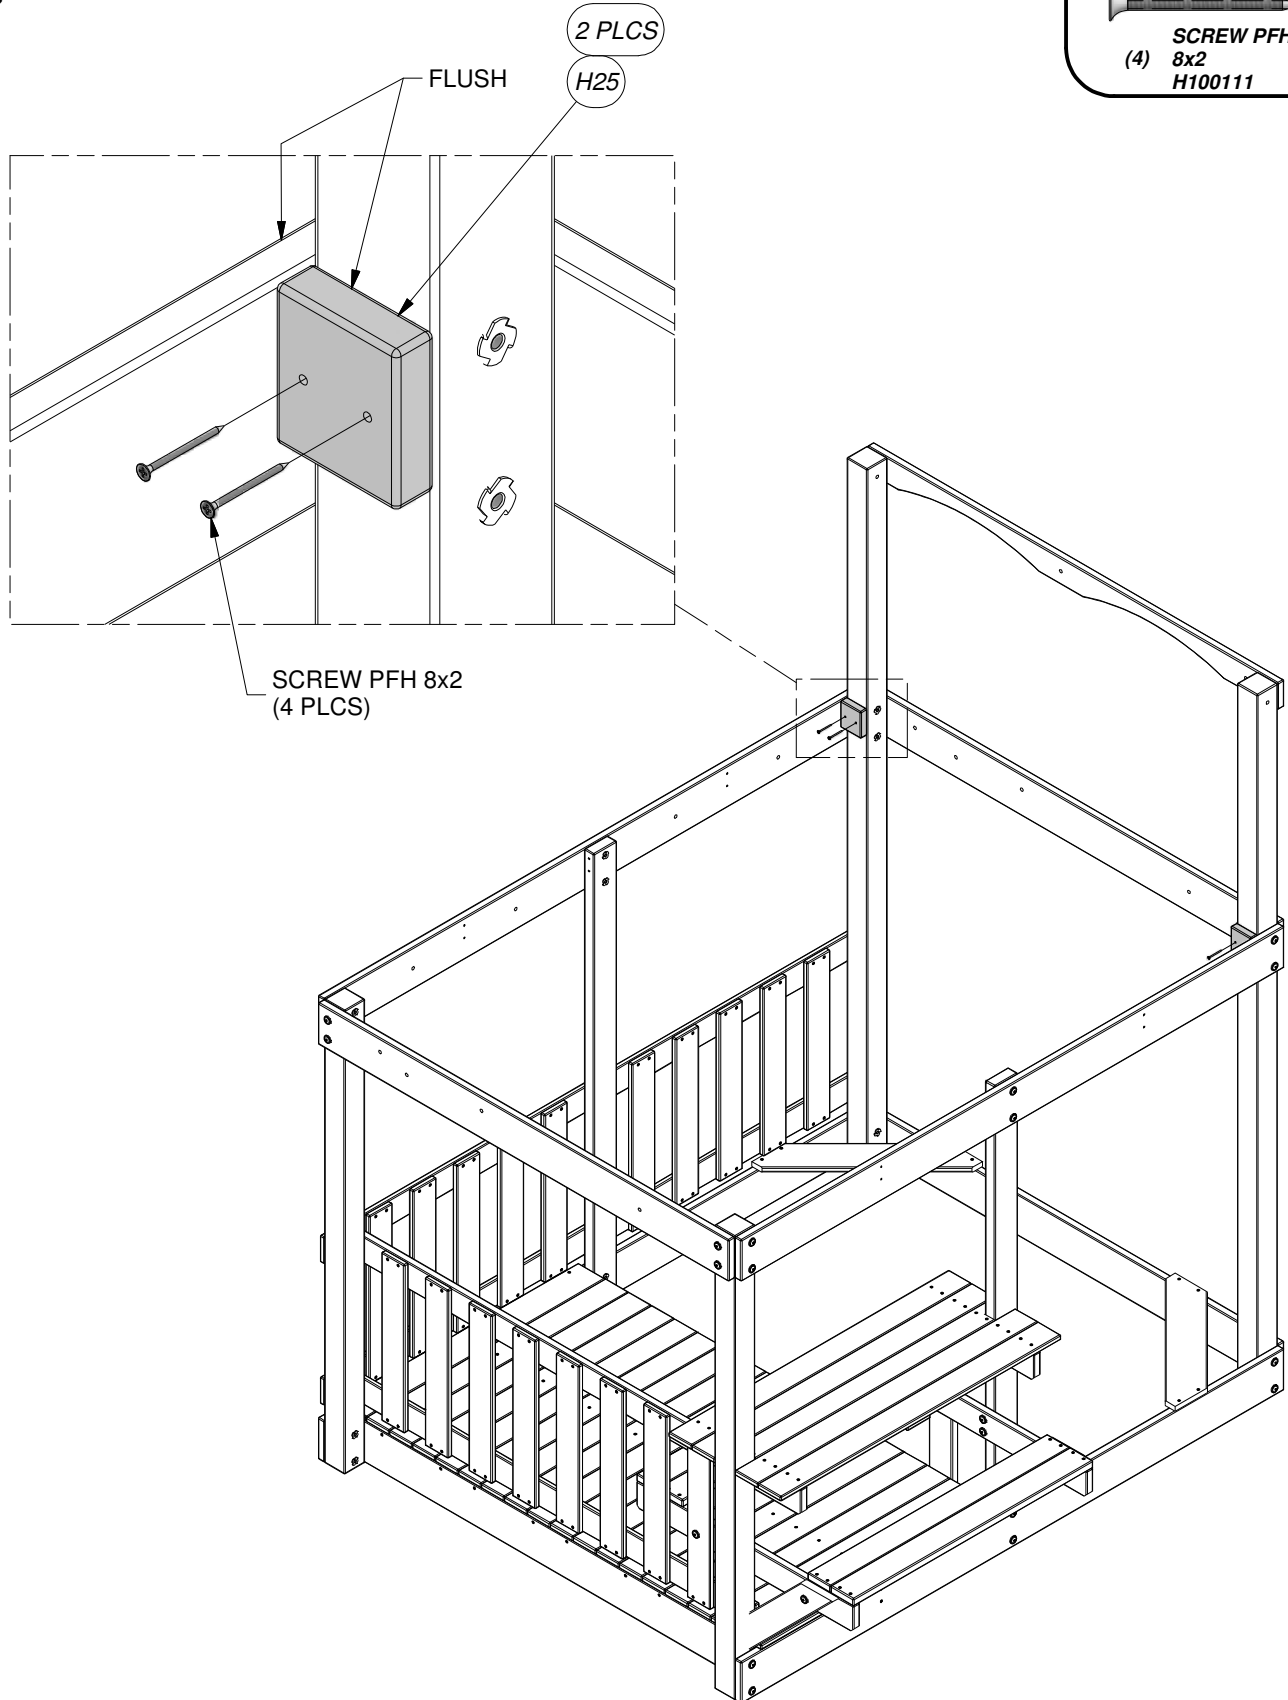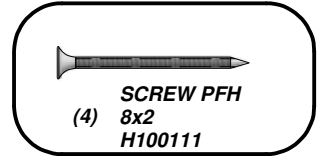


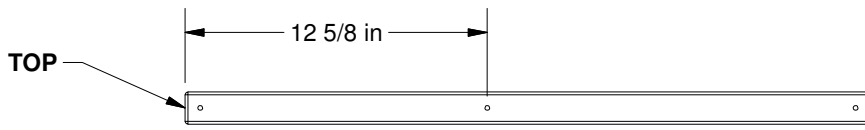


 

 
(1) O2 - SAFETY BOARD - W4L04605
5/8"x1 3/8"x28 5/8" (16x34x726)

**FORT ASSEMBLY
STEP 18**

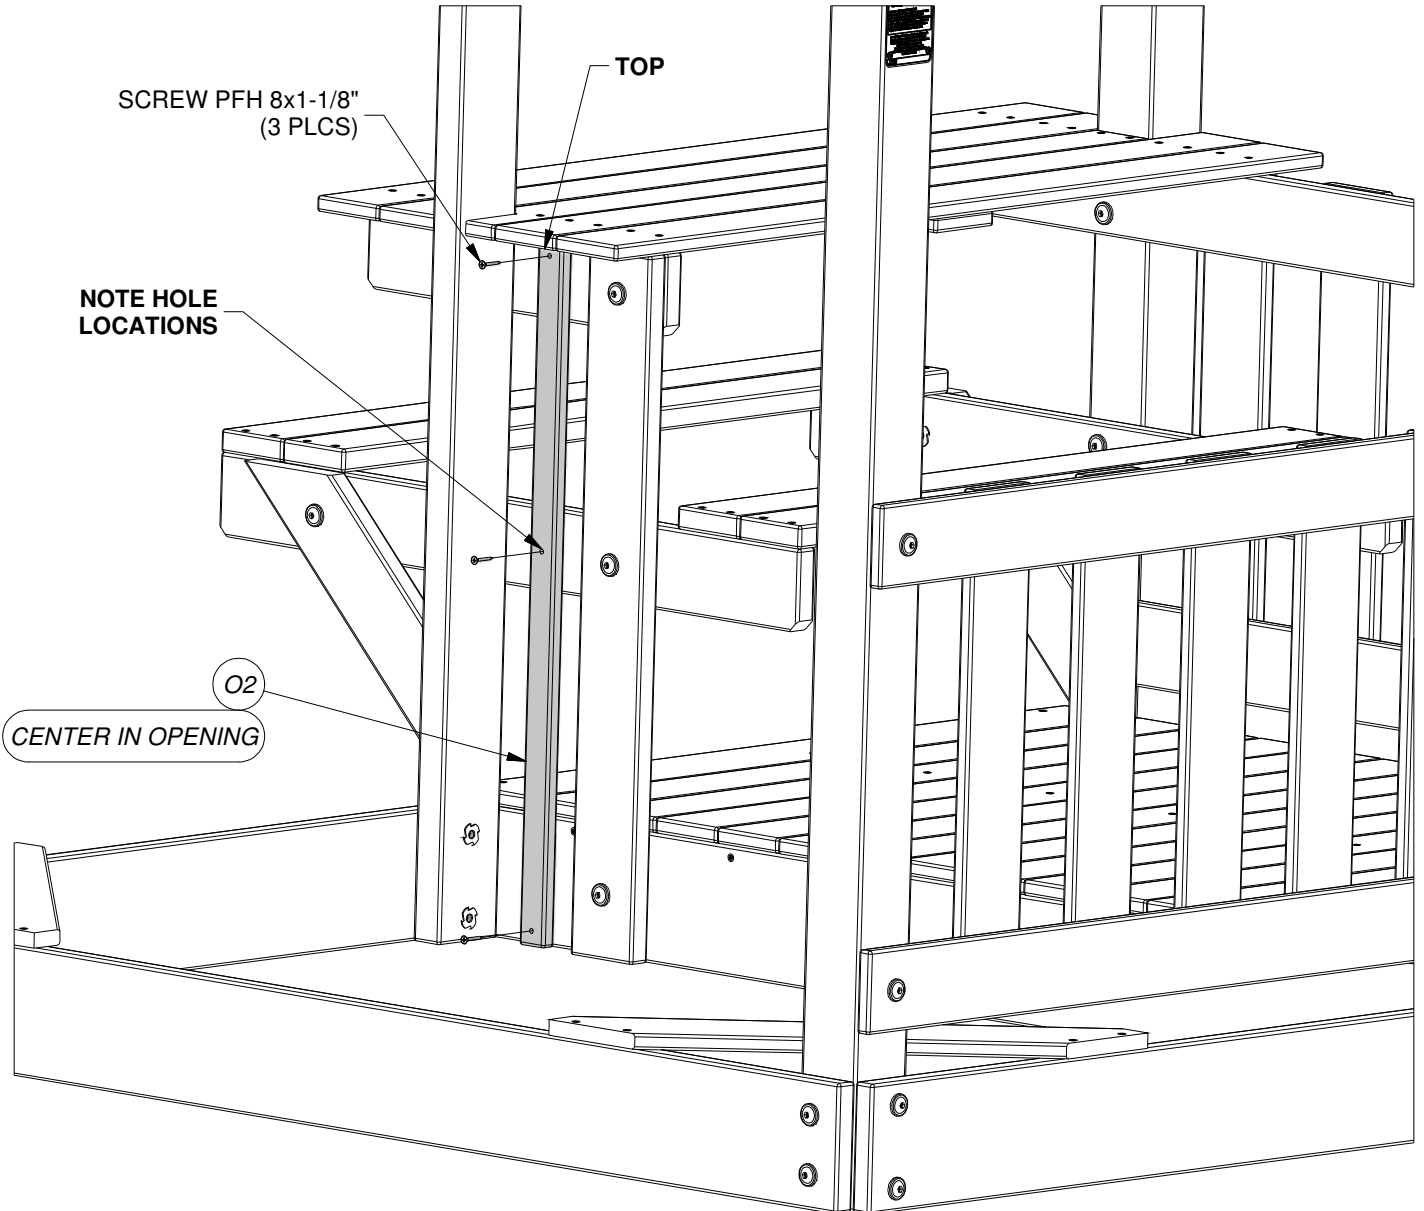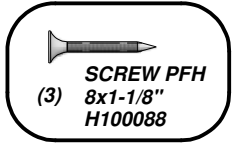

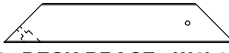
(8) E5 - DECK BRACE - W4L11778
 1 7/16"x3 3/8"x20" (36x86x508)

FORT ASSEMBLY
STEP 19

	
BOLT WH (8) 5/16x2 1/4 H100013	(8) T-NUT 5/16 H100074
	
LAG SCREW (8) WH 5/16x2 1/2 H100028	(16) WASHER LOCK EXT 8x19 H100030



8 PLCS

E5

T-NUT 5/16
(8 PLCS)


WASHER LOCK EXT 8x19
(8 PLCS)

BOLT WH 5/16x2 1/4
(8 PLCS)

WASHER LOCK EXT 8x19
(8 PLCS)

LAG SCREW WH 5/16x2 1/2
(8 PLCS)

**NOTE ORIENTATION
OF T-NUTS**

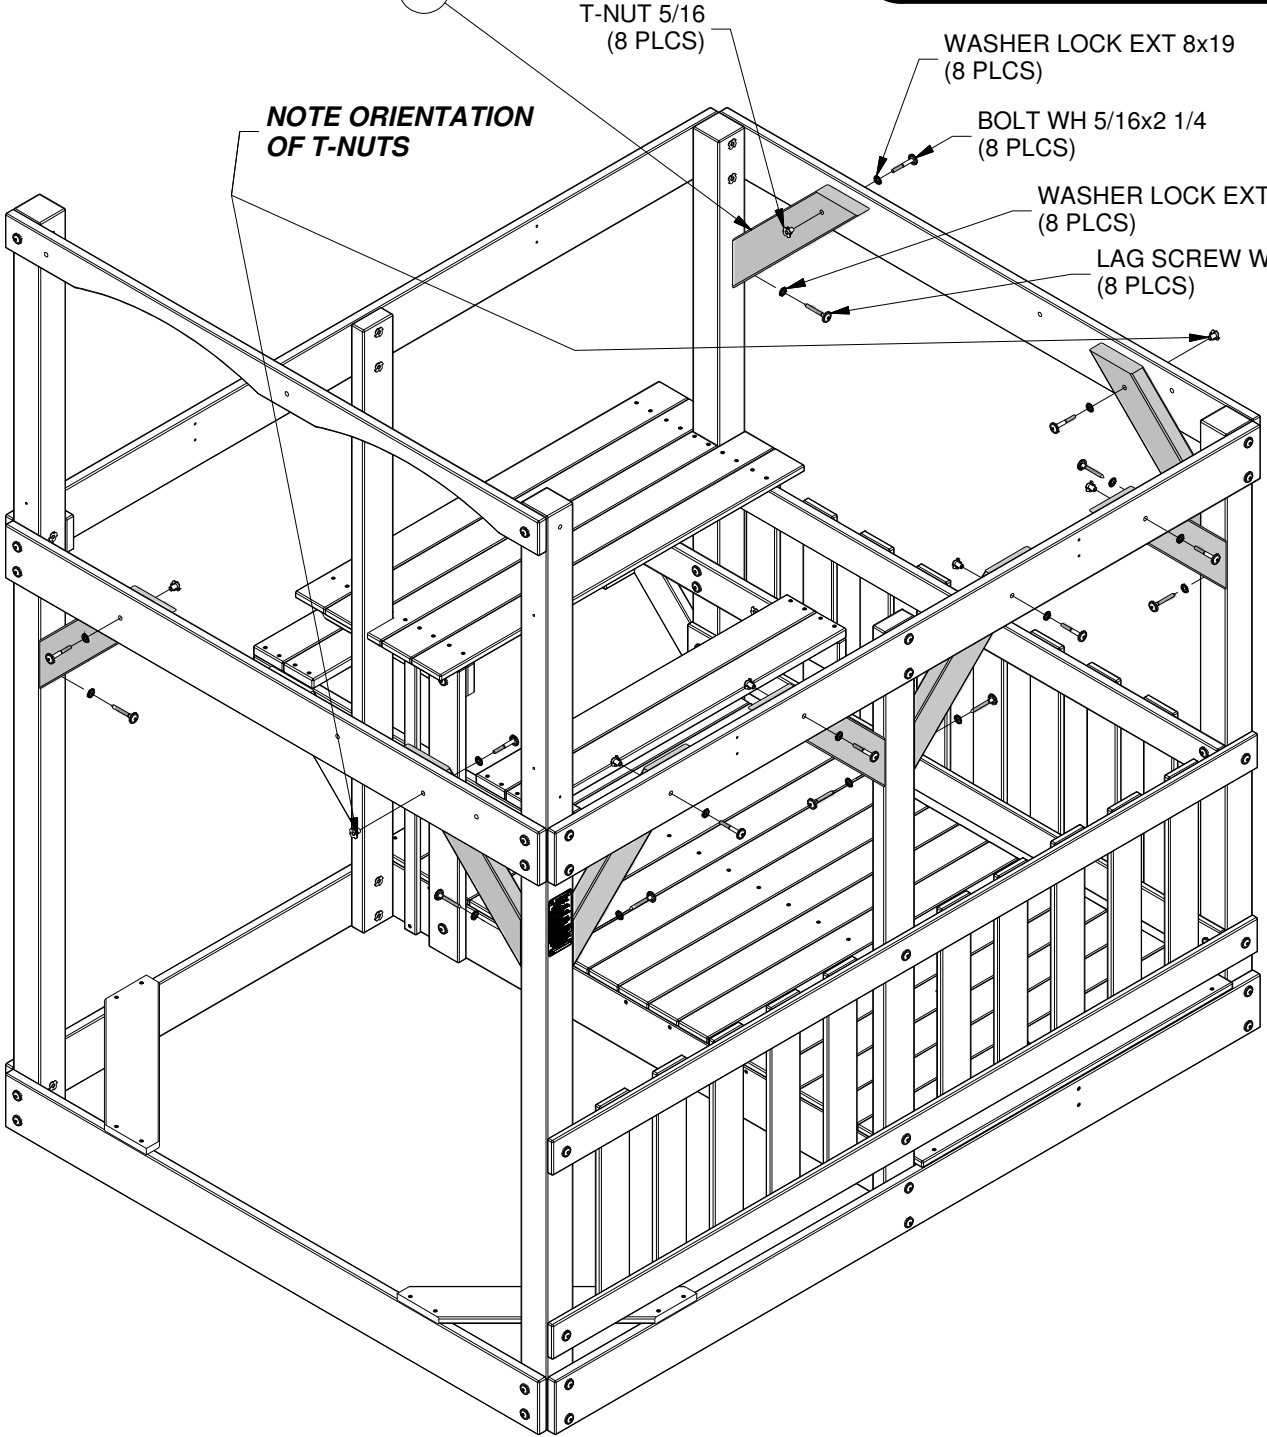




(1) **H5 - FLOOR RAIL - W4L04608**
1"x3 3/8"x60 1/2" (24x86x1537)





(2) **H26 - FLOOR JOIST - W4L04573**
1"x3 3/8"x60 1/2" (24x86x1537)

FORT ASSEMBLY
STEP 20

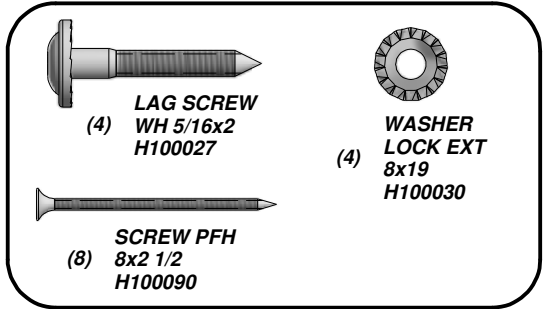


NOTE:
FLUSH TOPS OF BOARDS.
ALL PLACES.

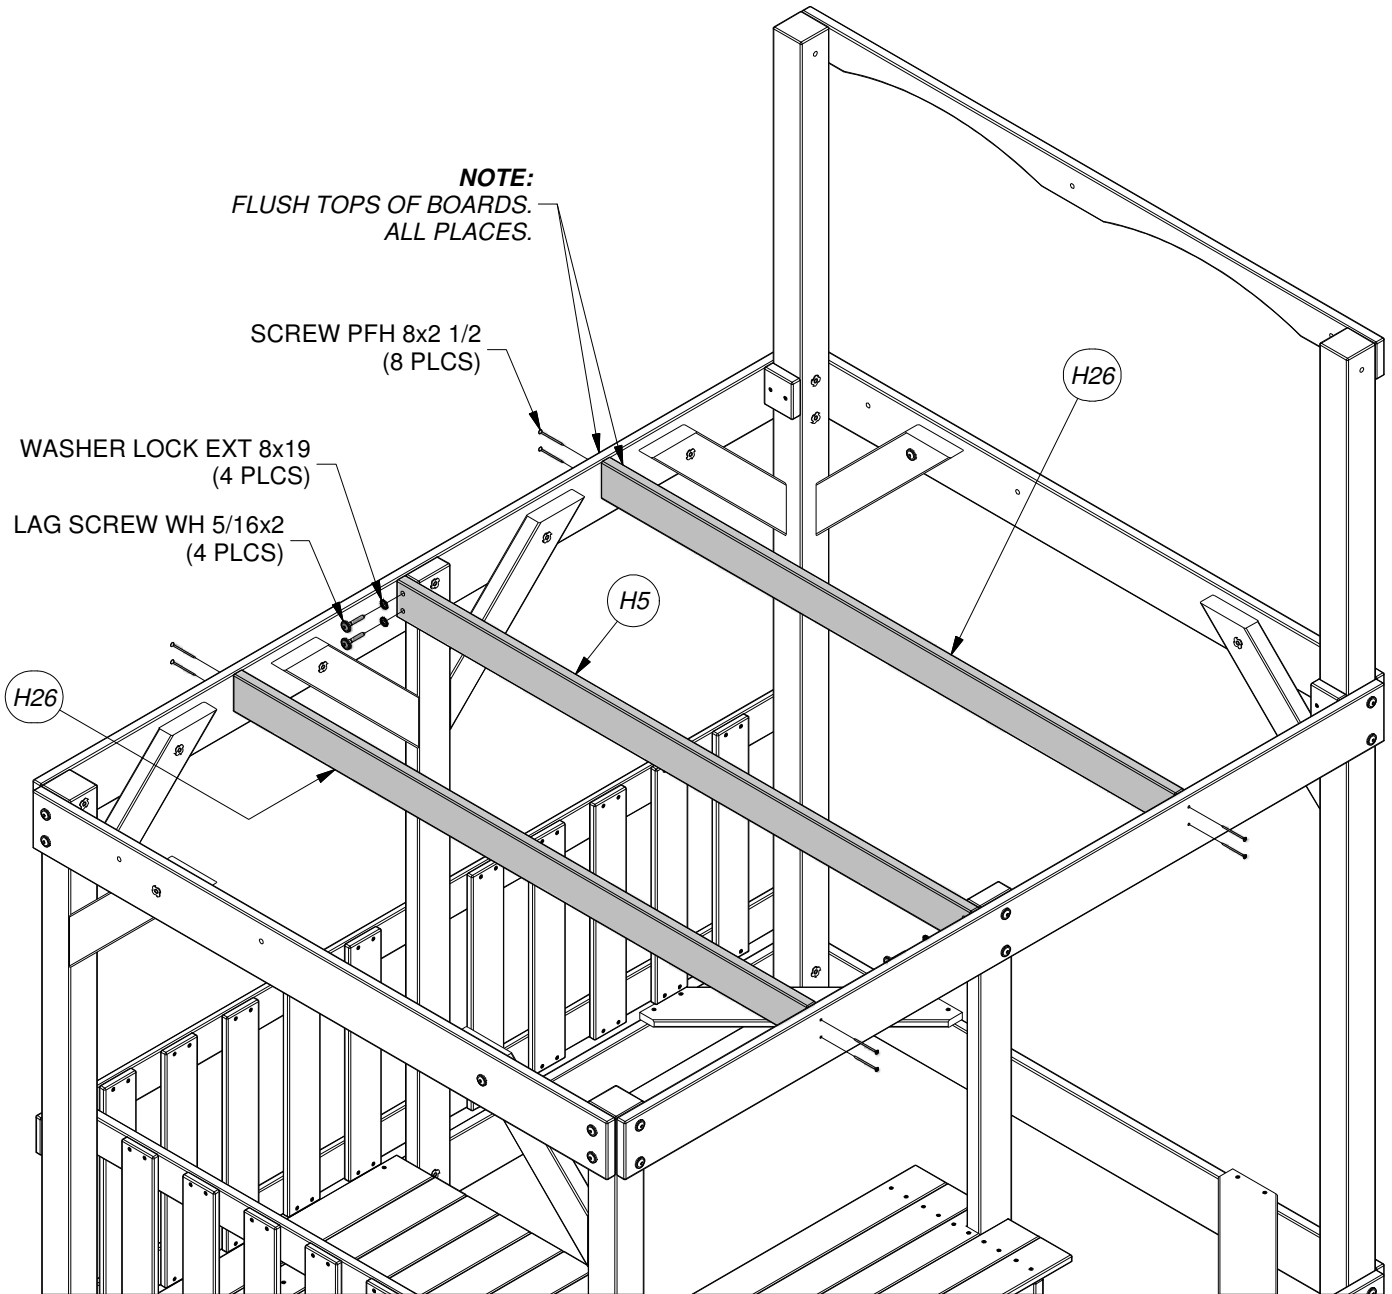

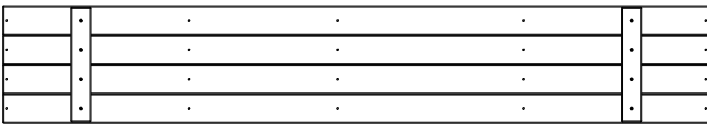


 
 
(4) **FP2 - FLOOR PANEL - W2A01486**
 1 1/4"x13 1/2"x81 7/8" (32x344x2080)




(2) **Y1 - TOP FLOOR BOARD - W4L04609**
 5/8"x4"x78" (16x102x1980)

FORT ASSEMBLY
STEP 21

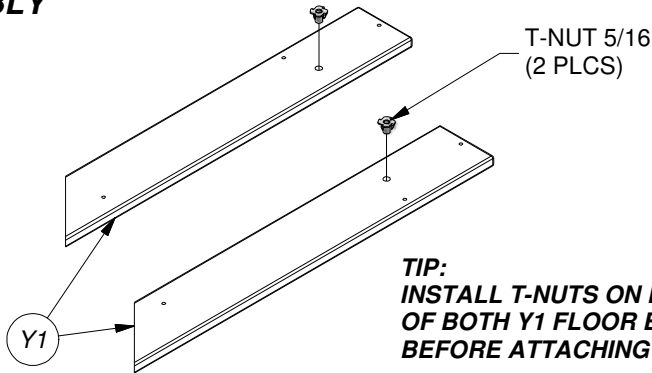

	
SCREW PFH	T-NUT 5/16
(94) 8x1-1/2"	(2) H100074
H100086	


TIP:
INSTALL T-NUTS ON BOTTOM SIDE
OF BOTH Y1 FLOOR BOARDS
BEFORE ATTACHING TO FORT.

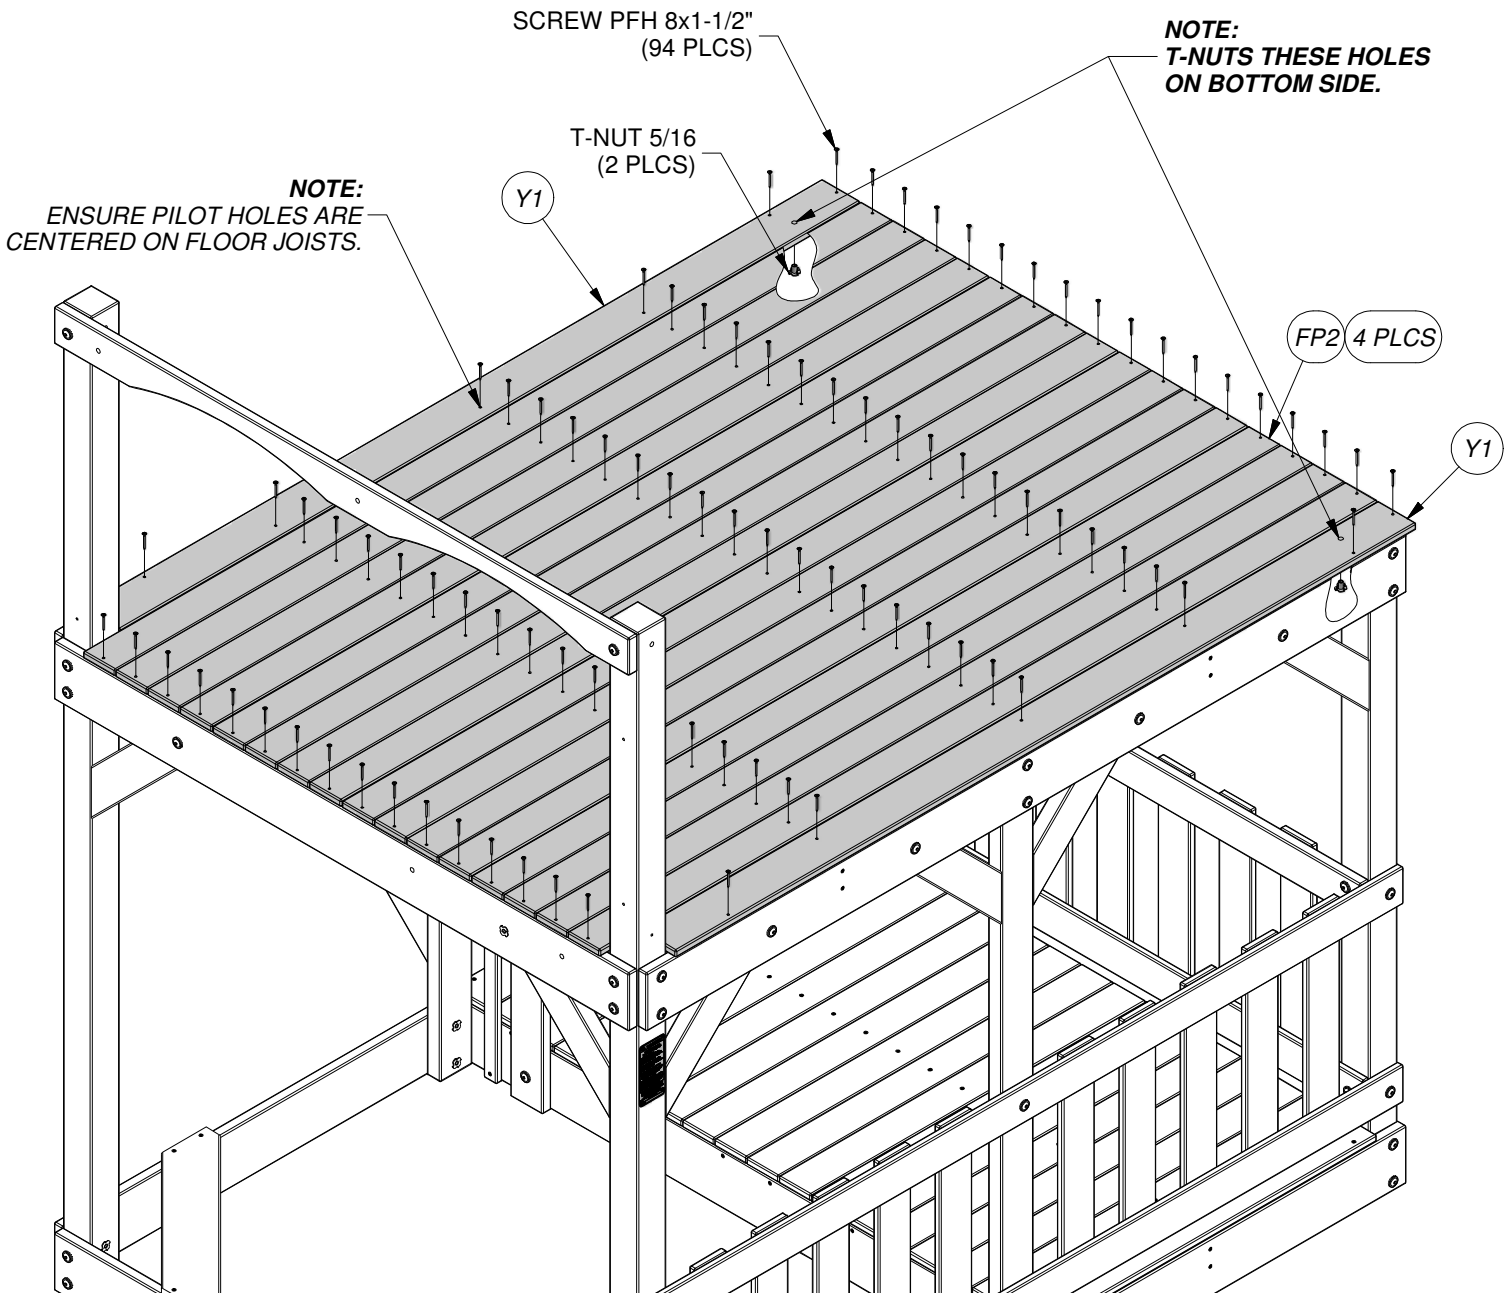

(1) **B8 - BACK RIGHT CLUB HOUSE CORNER - W4L04618**
3"x3"x53 7/8" (76x76x1370)



 L BRACKET
(2) 2.5x38x50x55
A100340




(1) **M21 - CLUB HOUSE WALL RAIL - W4L04613**
5/8"x3 3/8"x30 1/4" (16x86x768)




(1) **H4 - ROOF SUPPORT RAIL - W4L04623**
1"x3 3/8"x67 1/4" (24x86x1709)

 (1) **B5 - BACK LEFT CLUB HOUSE CORNER - W4L04612**
3"x3"x53 7/8" (76x76x1370)





(1) **H6 - BACK CLUB HOUSE RAIL - W4L04621**
1"x3 3/8"x60 1/2" (24x86x1537)

**FORT ASSEMBLY
STEP 22**

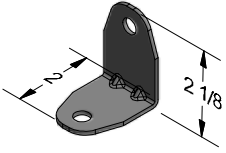

 (1) BOLT WH 5/16x2 1/2 H100014	 (2) BOLT WH 5/16x1/2 H100115	 (2) BOLT WH 5/16x3 3/4 H100019	 (2) T-NUT 5/16 H100074
 (1) BOLT WH 5/16x3 1/4 H100017	 (2) NUT BARREL WH 5/16x7/8 H100005	 (2) LAG SCREW WH 5/16x2 H100027	 (2) WASHER LOCK EXT 12x19 H100031
			 (4) WASHER LOCK EXT 8x19 H100030

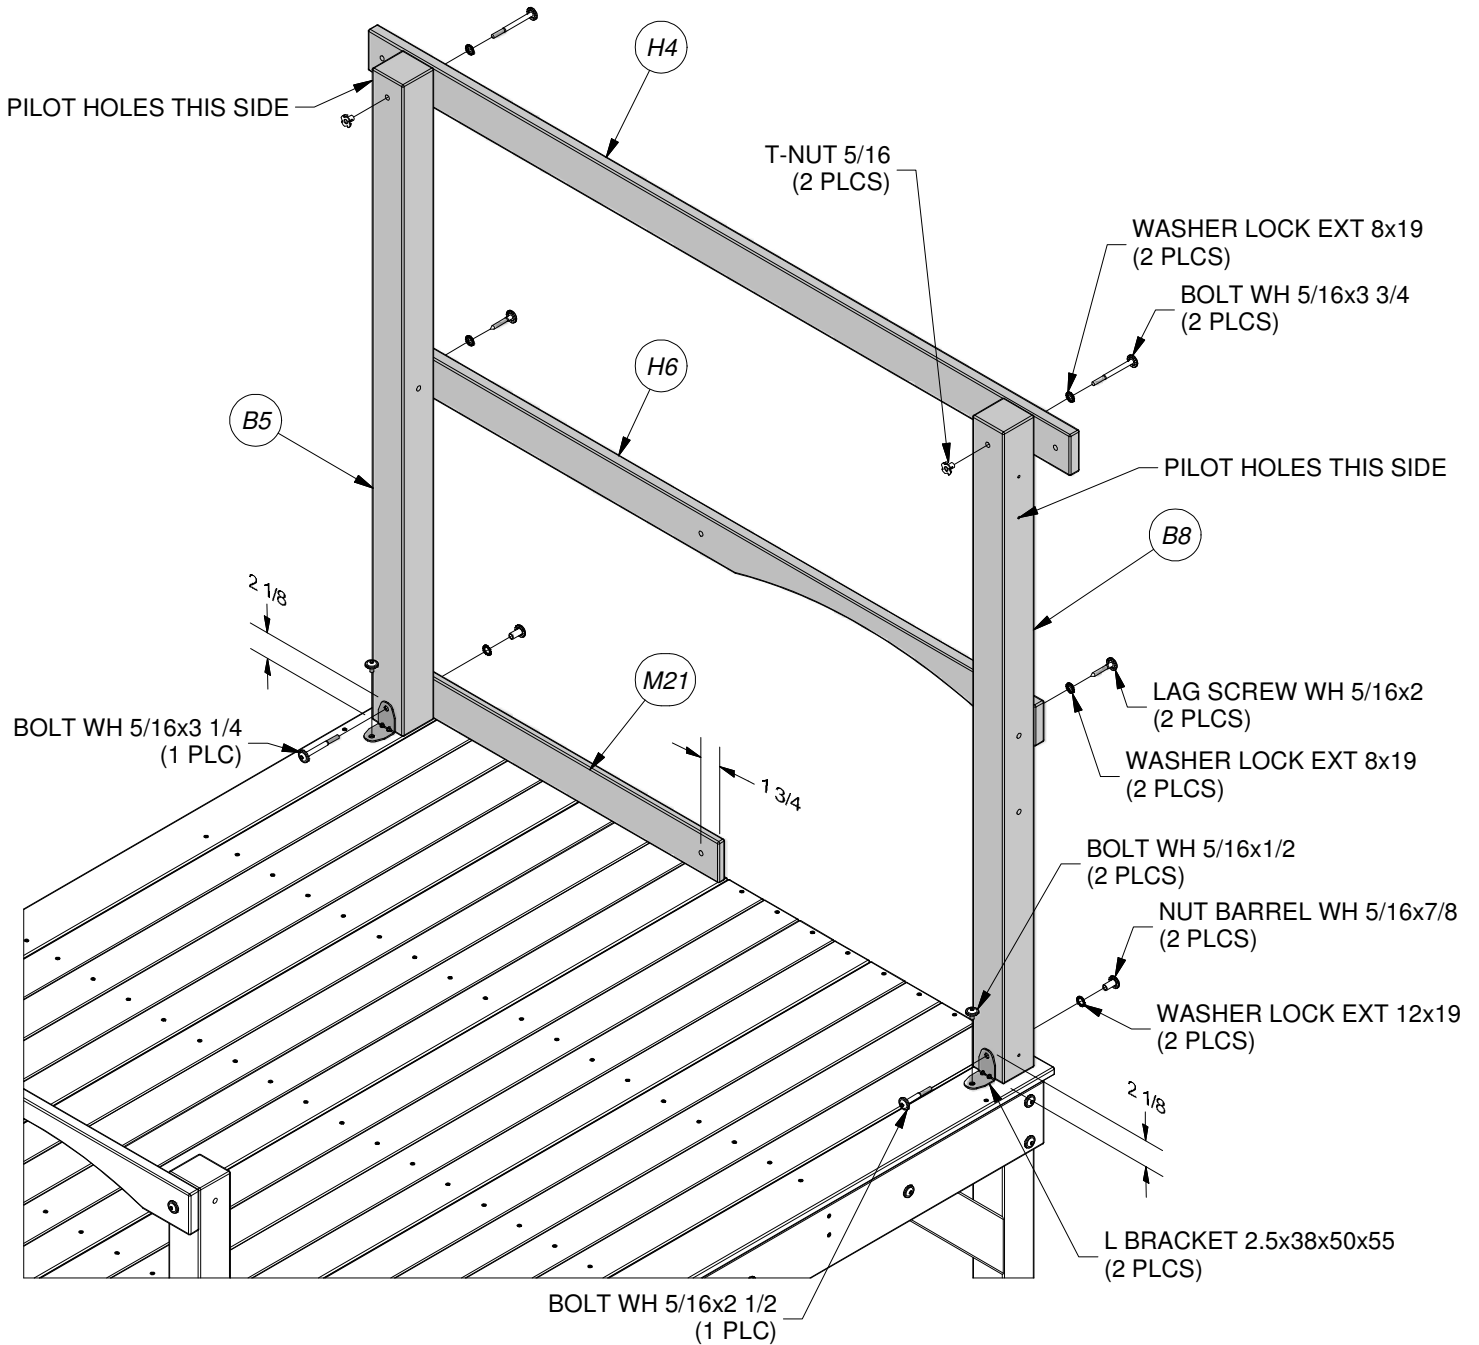

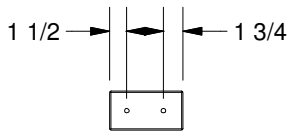

(1) **M34 - WALL RAIL - W4L04611**
 5/8"x3 3/8"x6 3/8" (16x86x162)



(1) **M1 - TOP WALL RAIL - W4L04619**
 5/8"x3 3/8"x80" (16x86x2032)




 
(1) **M10 - CLUB HOUSE WALL RAIL - W4L04614**
 5/8"x3 3/8"x50 1/4" (16x86x1277)

FORT ASSEMBLY
STEP 23

LAG SCREW
 (4) WH 5/16x2
 H100027

WASHER LOCK EXT
 (4) 8x19
 H100030

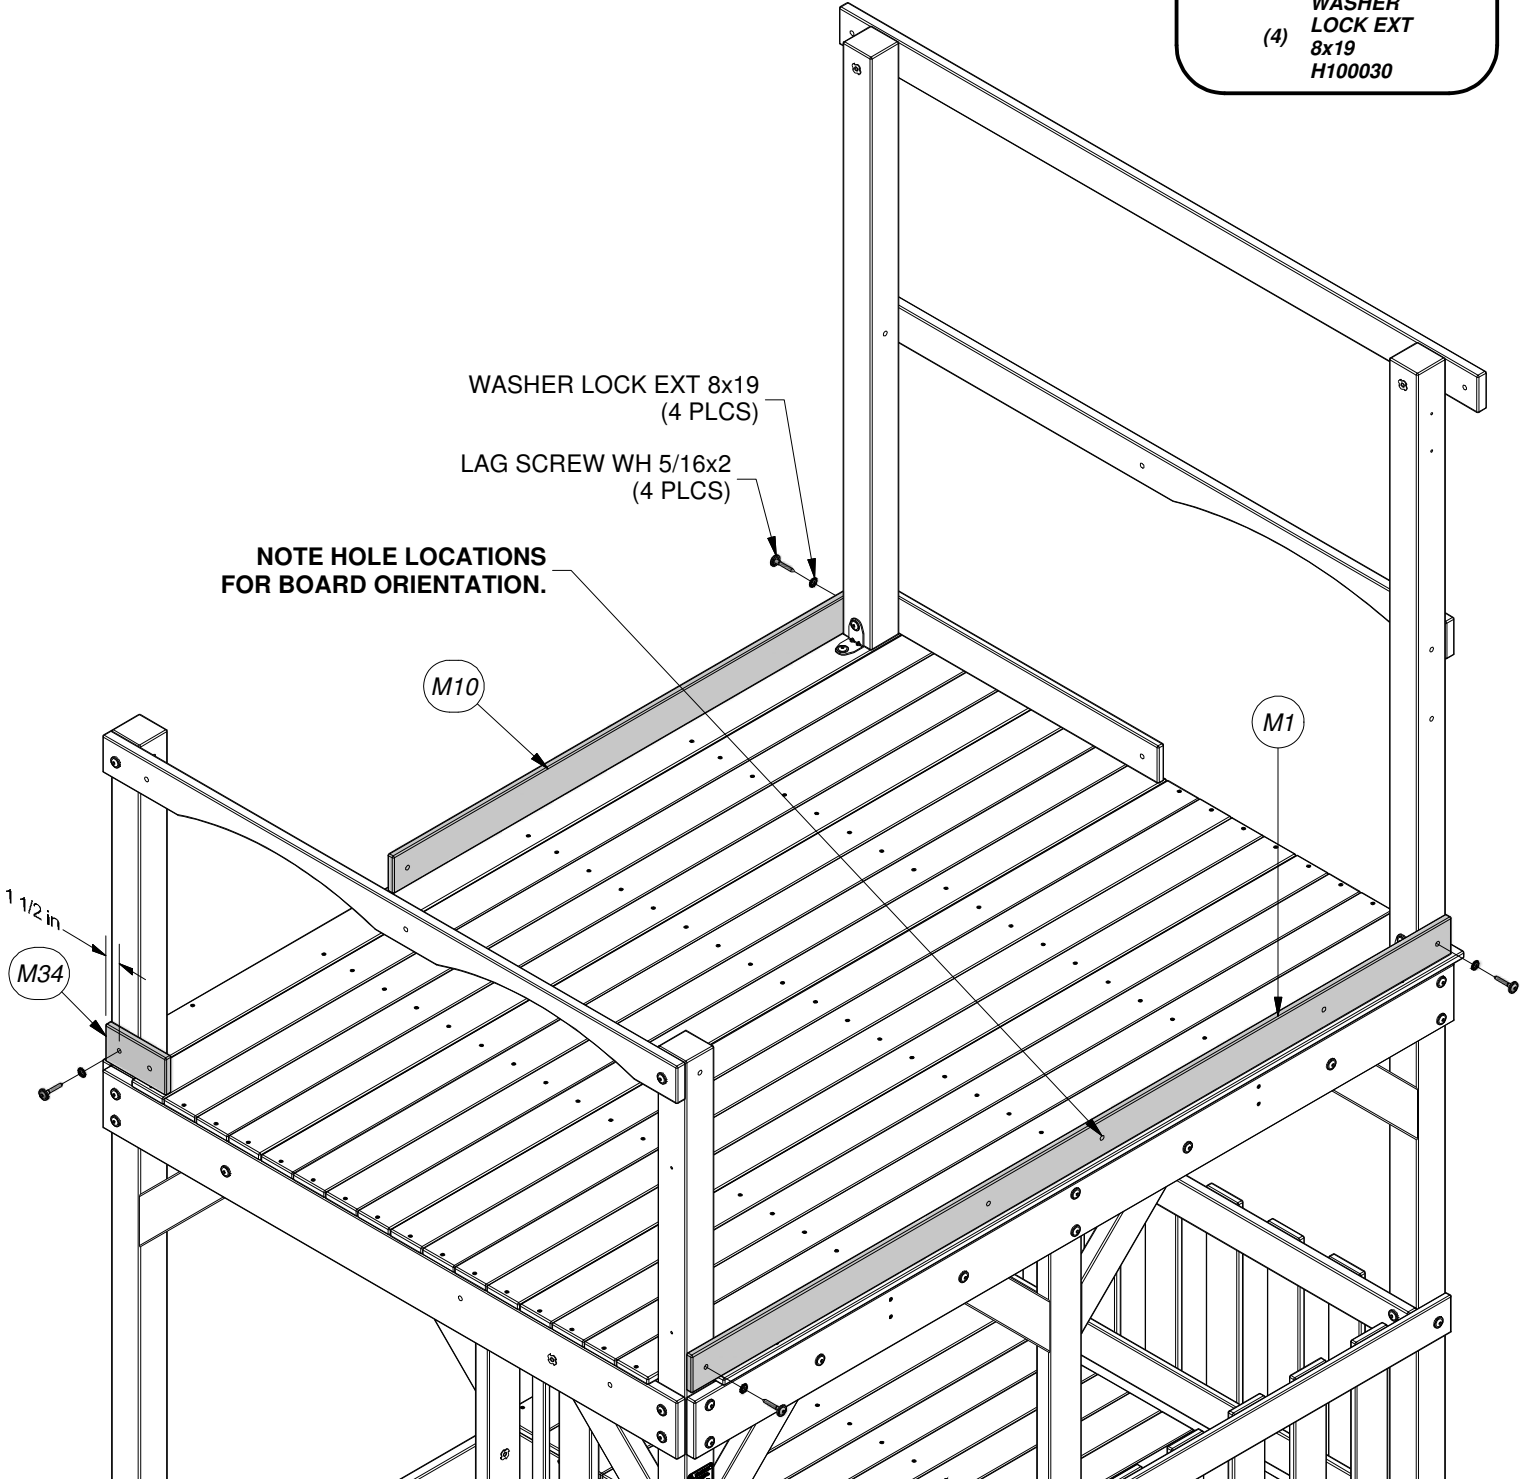





(1) **L BRACKET**
2.5x38x50x55
A100340




(1) **H18 - CLUB HOUSE WALL RAIL - W4L04616**
1"x3 3/8"x29 7/8" (24x86x758)

FORT ASSEMBLY
STEP 24

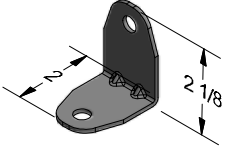





(1) **BOLT WH**
5/16x1 3/4
H100011



 
(1) **BOLT WH**
5/16x1 1/4
H100009




(1) **BOLT WH**
5/16x1/2
H100115




(1) **NUT BARREL**
WH 5/16x7/8
H100005



 
(1) **WASHER LOCK EXT**
12x19
H100031



(2) **T-NUT 5/16**
H100074



(1) **WASHER LOCK EXT**
8x19
H100030

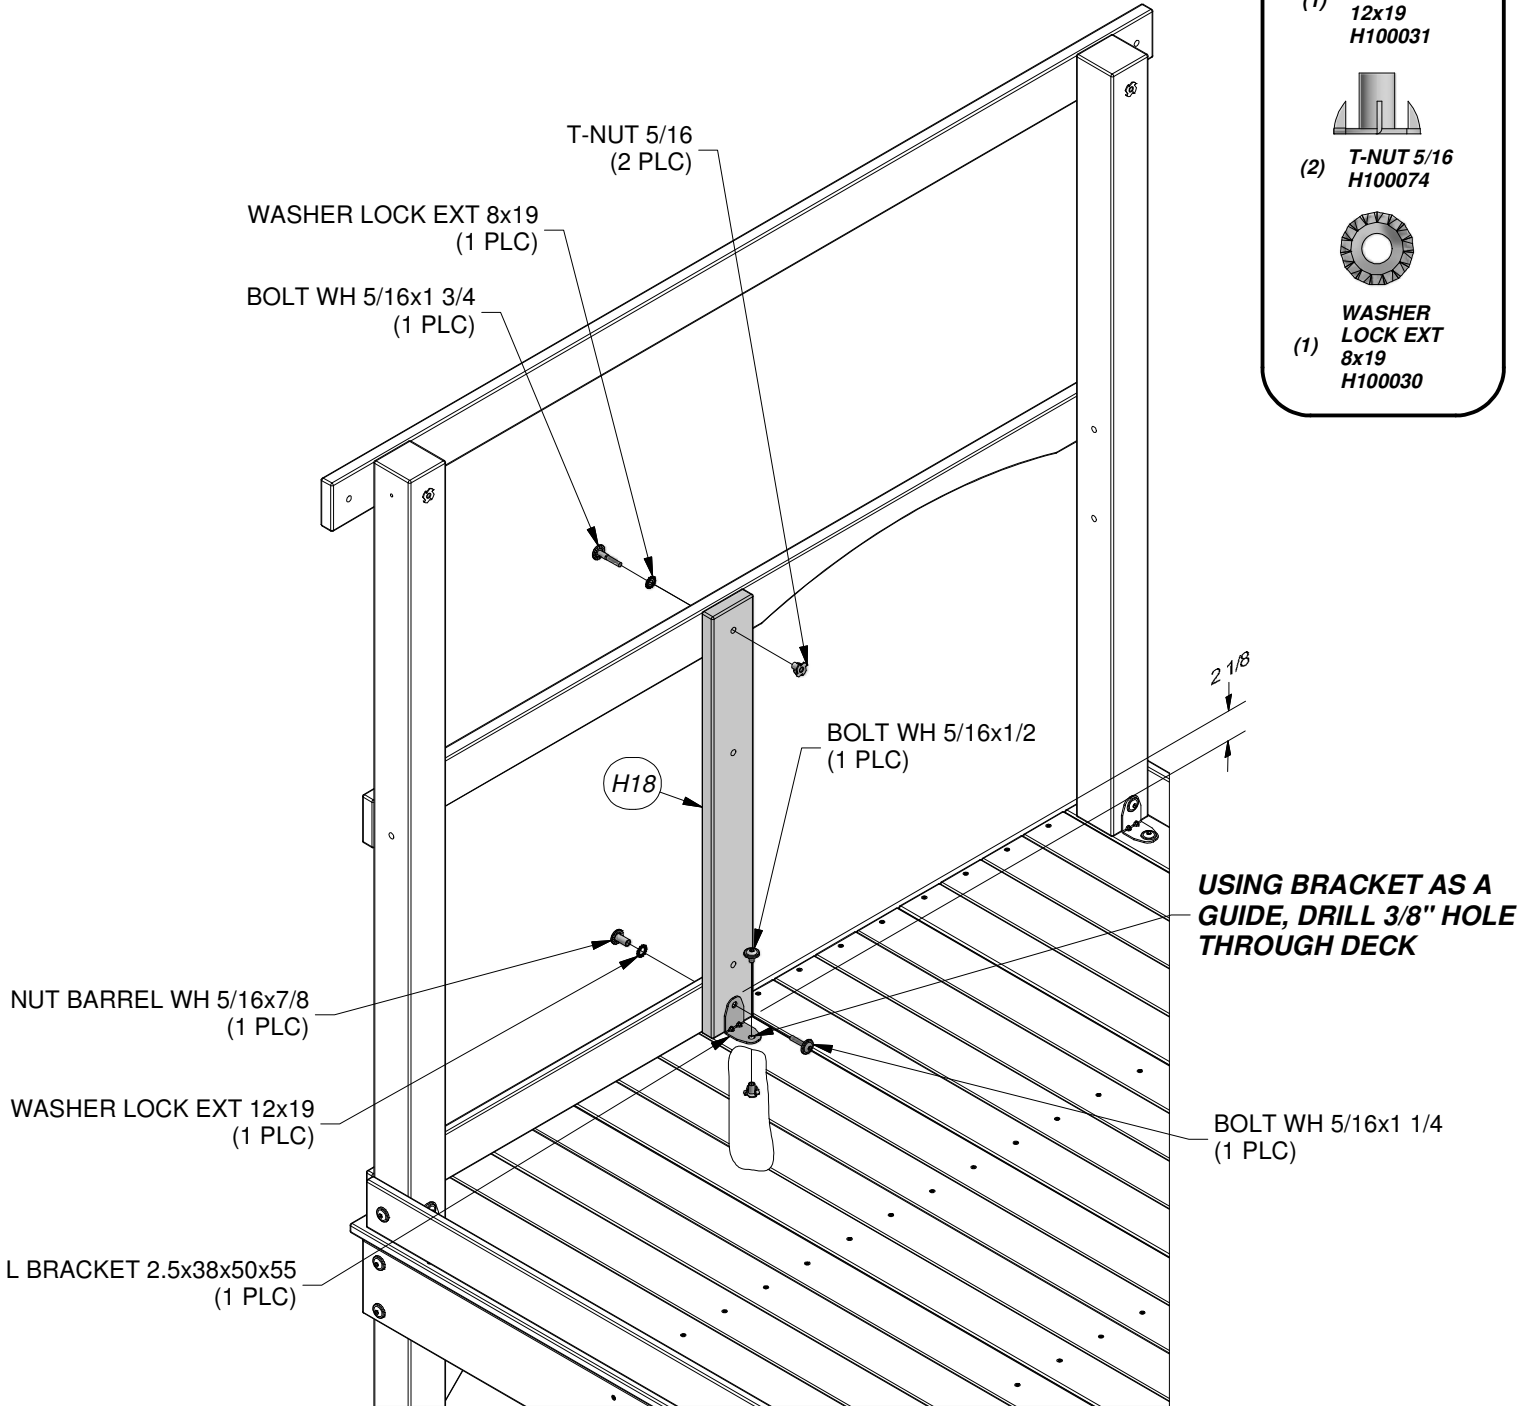




L BRACKET
 (1) 2.5x38x50x55
 A100340





 H1 - WALL RAIL - W4L04620
 (1) 1"x3 3/8"x80" (24x86x2032)



B6 - FRONT LEFT CLUB HOUSE CORNER - W4L04615
 (1) 3"x3"x53 7/8" (76x76x1370)

**FORT ASSEMBLY
 STEP 25**

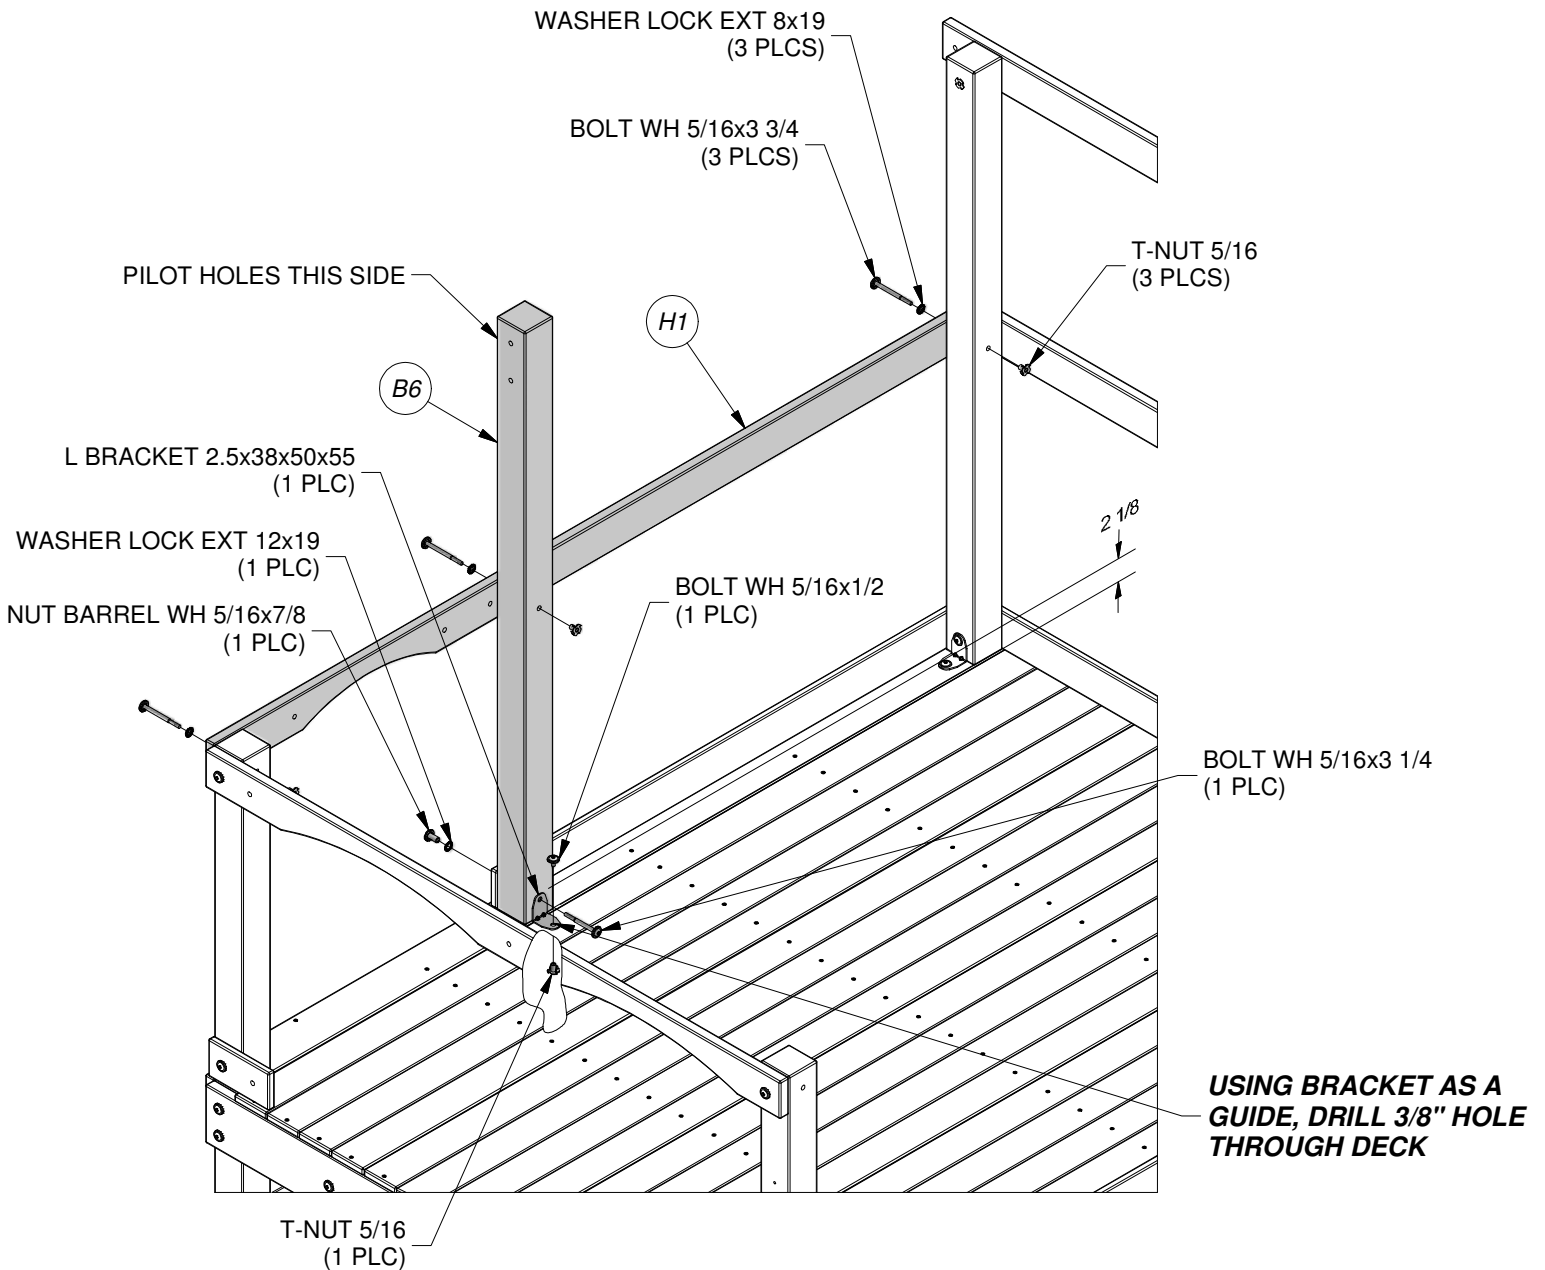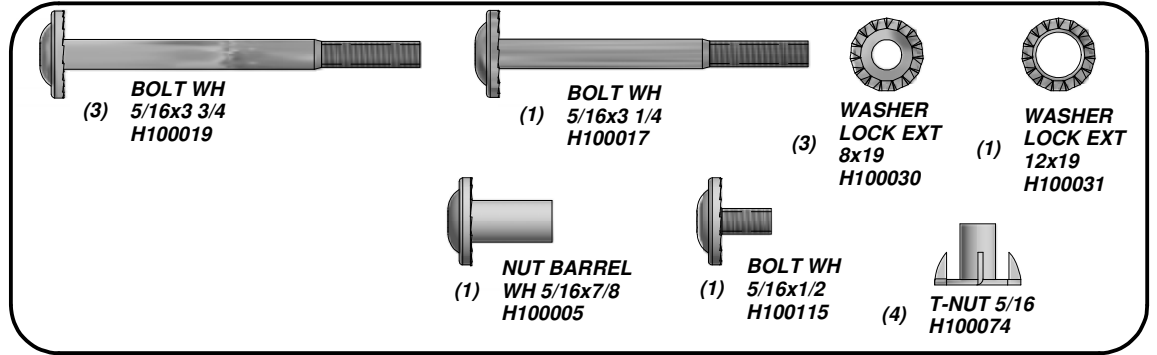




L BRACKET
 (1) 2.5x38x50x55
 A100340





 
(1) **H2 - WALL RAIL - W4L04622**
 1"x3 3/8"x80" (24x86x2032)



(1) **B7 - FRONT RIGHT CLUB HOUSE CORNER - W4L04617**
 3"x3"x53 7/8" (76x76x1370)

FORT ASSEMBLY
STEP 26

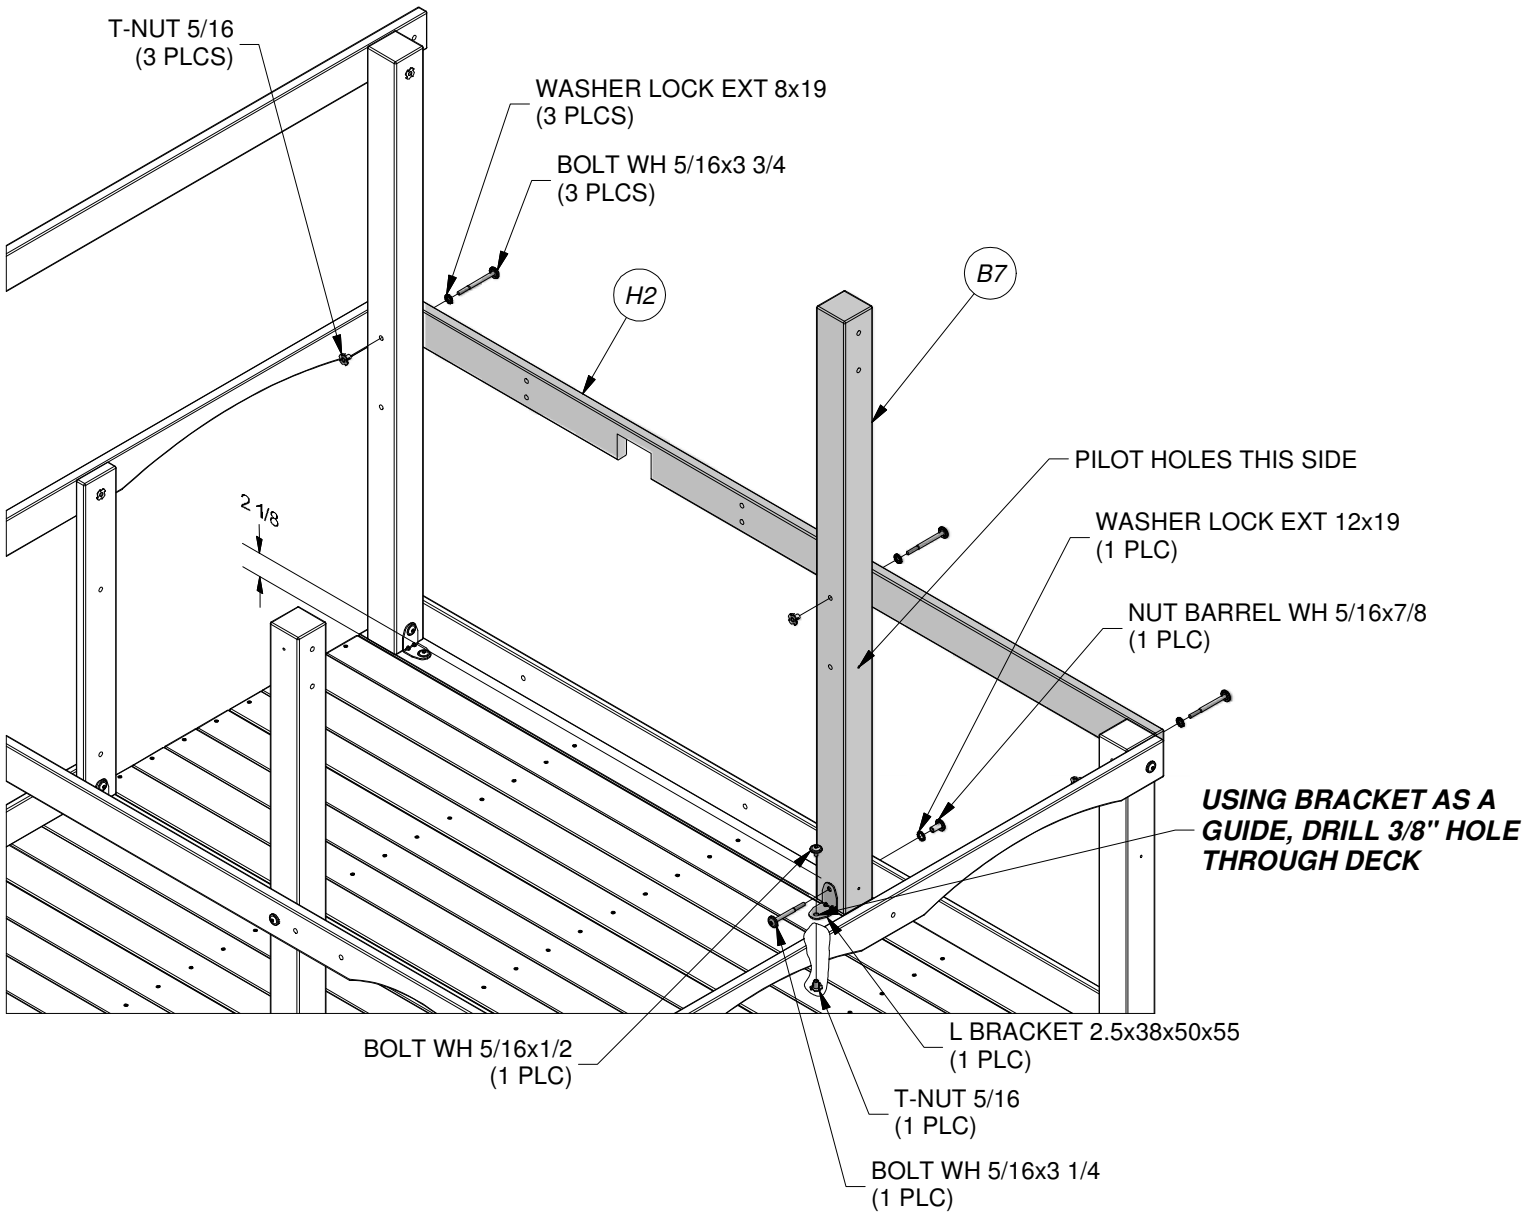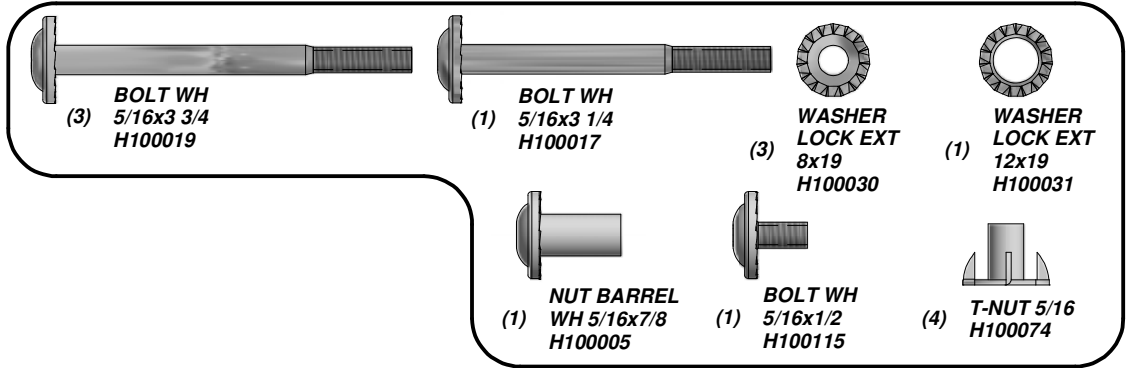

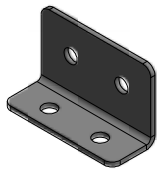


L BRACKET
 (2) 51x32x82x3.175
 A100396




(2) **H9 - CLUB HOUSE WALL BOARD - W4L11784**
 1"x3 3/8"x50 1/2" (24x86x1284)

**FORT ASSEMBLY
 STEP 27**

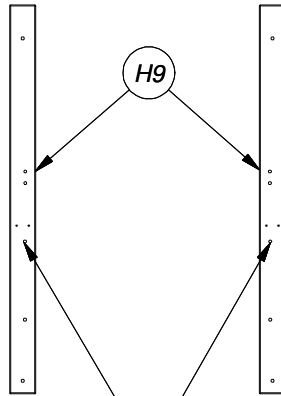


NOTE:
 HOLES ARE CLOSER TO THE INSIDE
 WHEN INSTALLED.

(4) BOLT HEX 5/16x2 H100044	(2) WASHER LOCK EXT 8x19 H100030
(2) BOLT WH 5/16x1 1/2 H100010	(8) T-NUT 5/16 H100074
(4) WASHER SPLIT 5/16 H100095	(4) WASHER FLAT 8x27 H100105

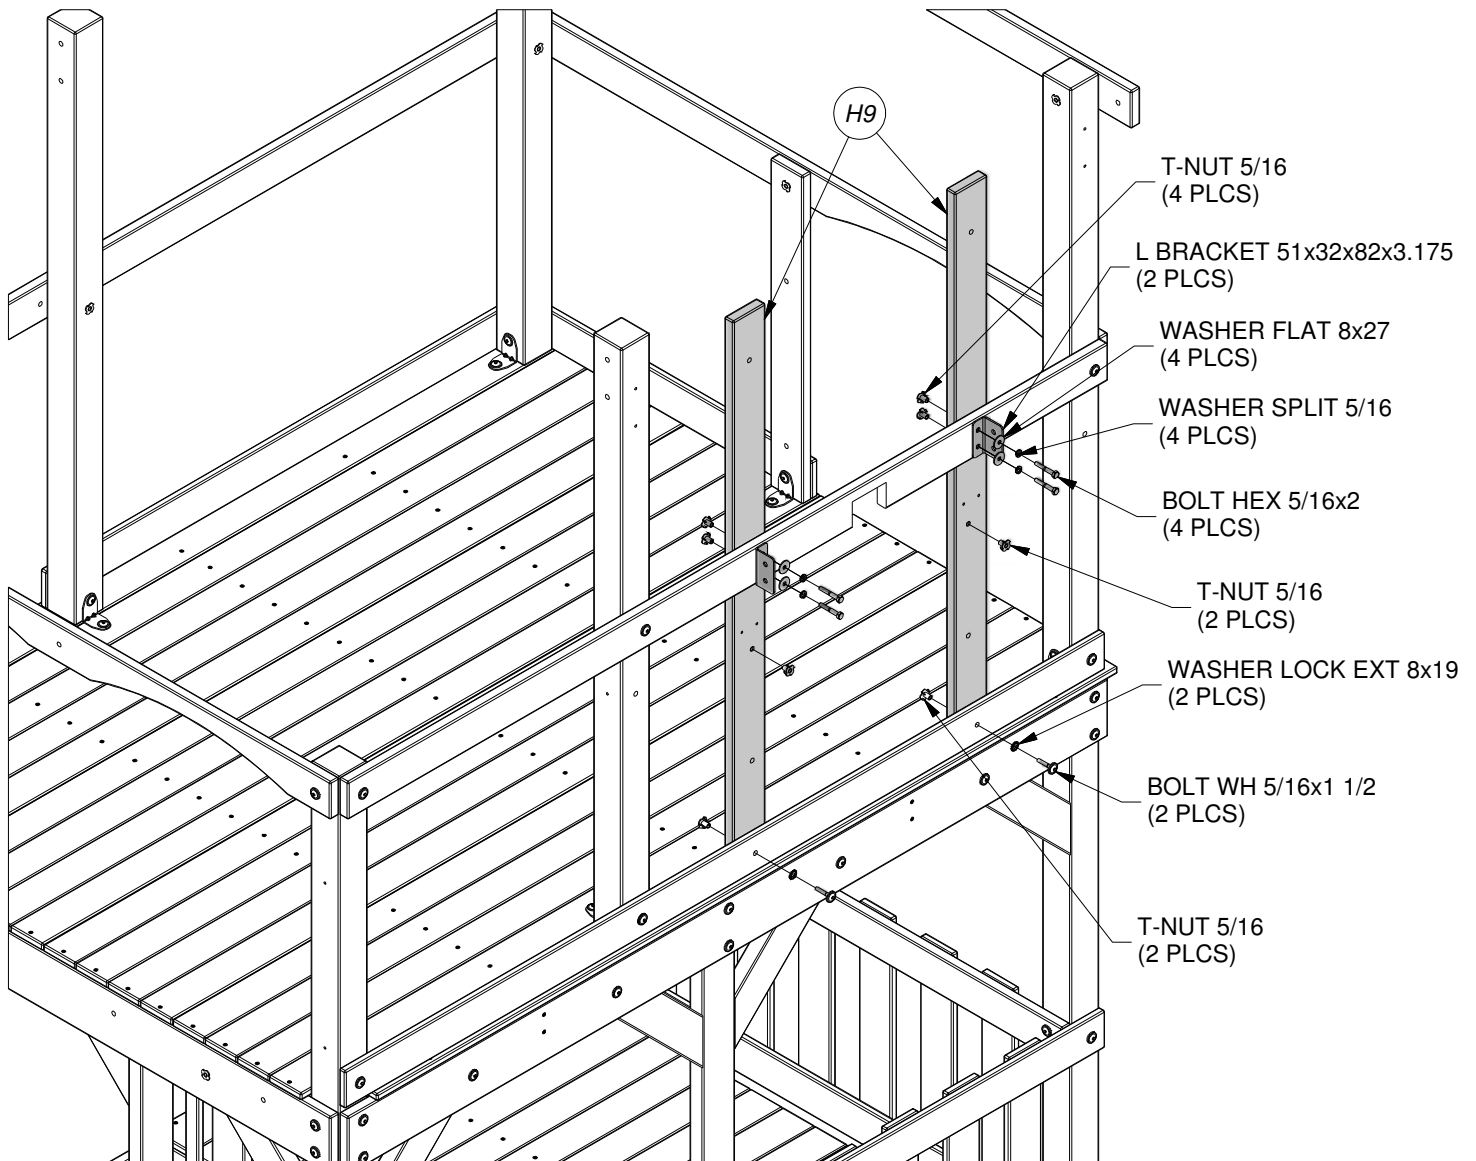





 
(1) **K5 - CLUB HOUSE WALL RAIL - W4L04626**
5/8"x5 1/4"x50 1/4" (16x134x1277)



(1) **H14 - SWING BEAM MOUNT - W4L04628**
1"x3 3/8"x50 1/4" (24x86x1277)



FORT ASSEMBLY STEP 28

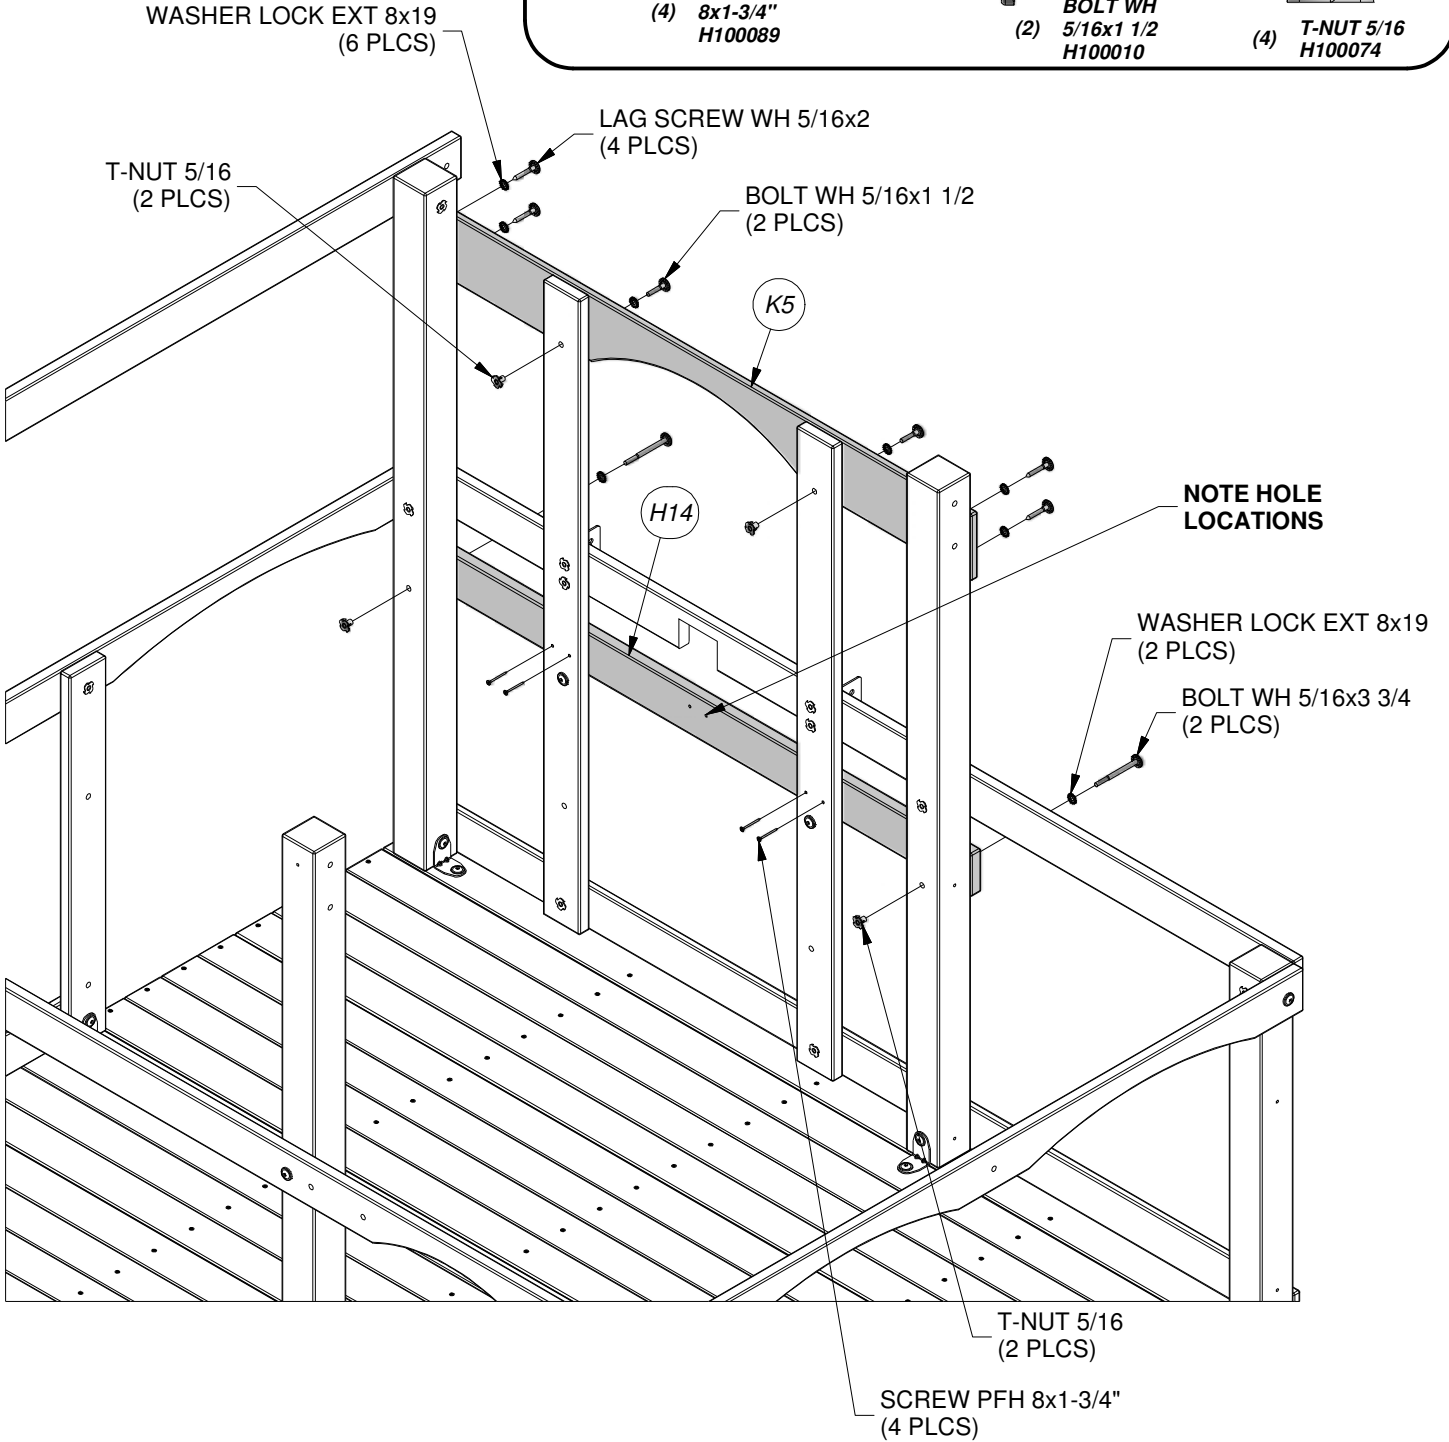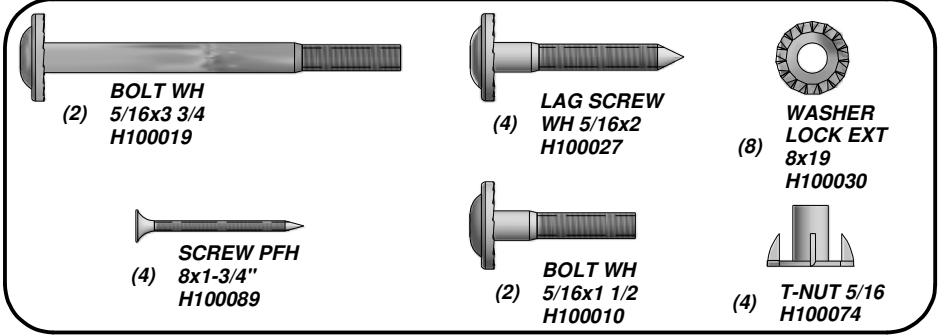

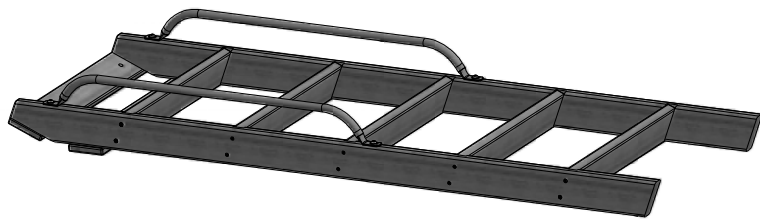

(1) LADDER ASSEMBLY

 **FORT ASSEMBLY
STEP 29**

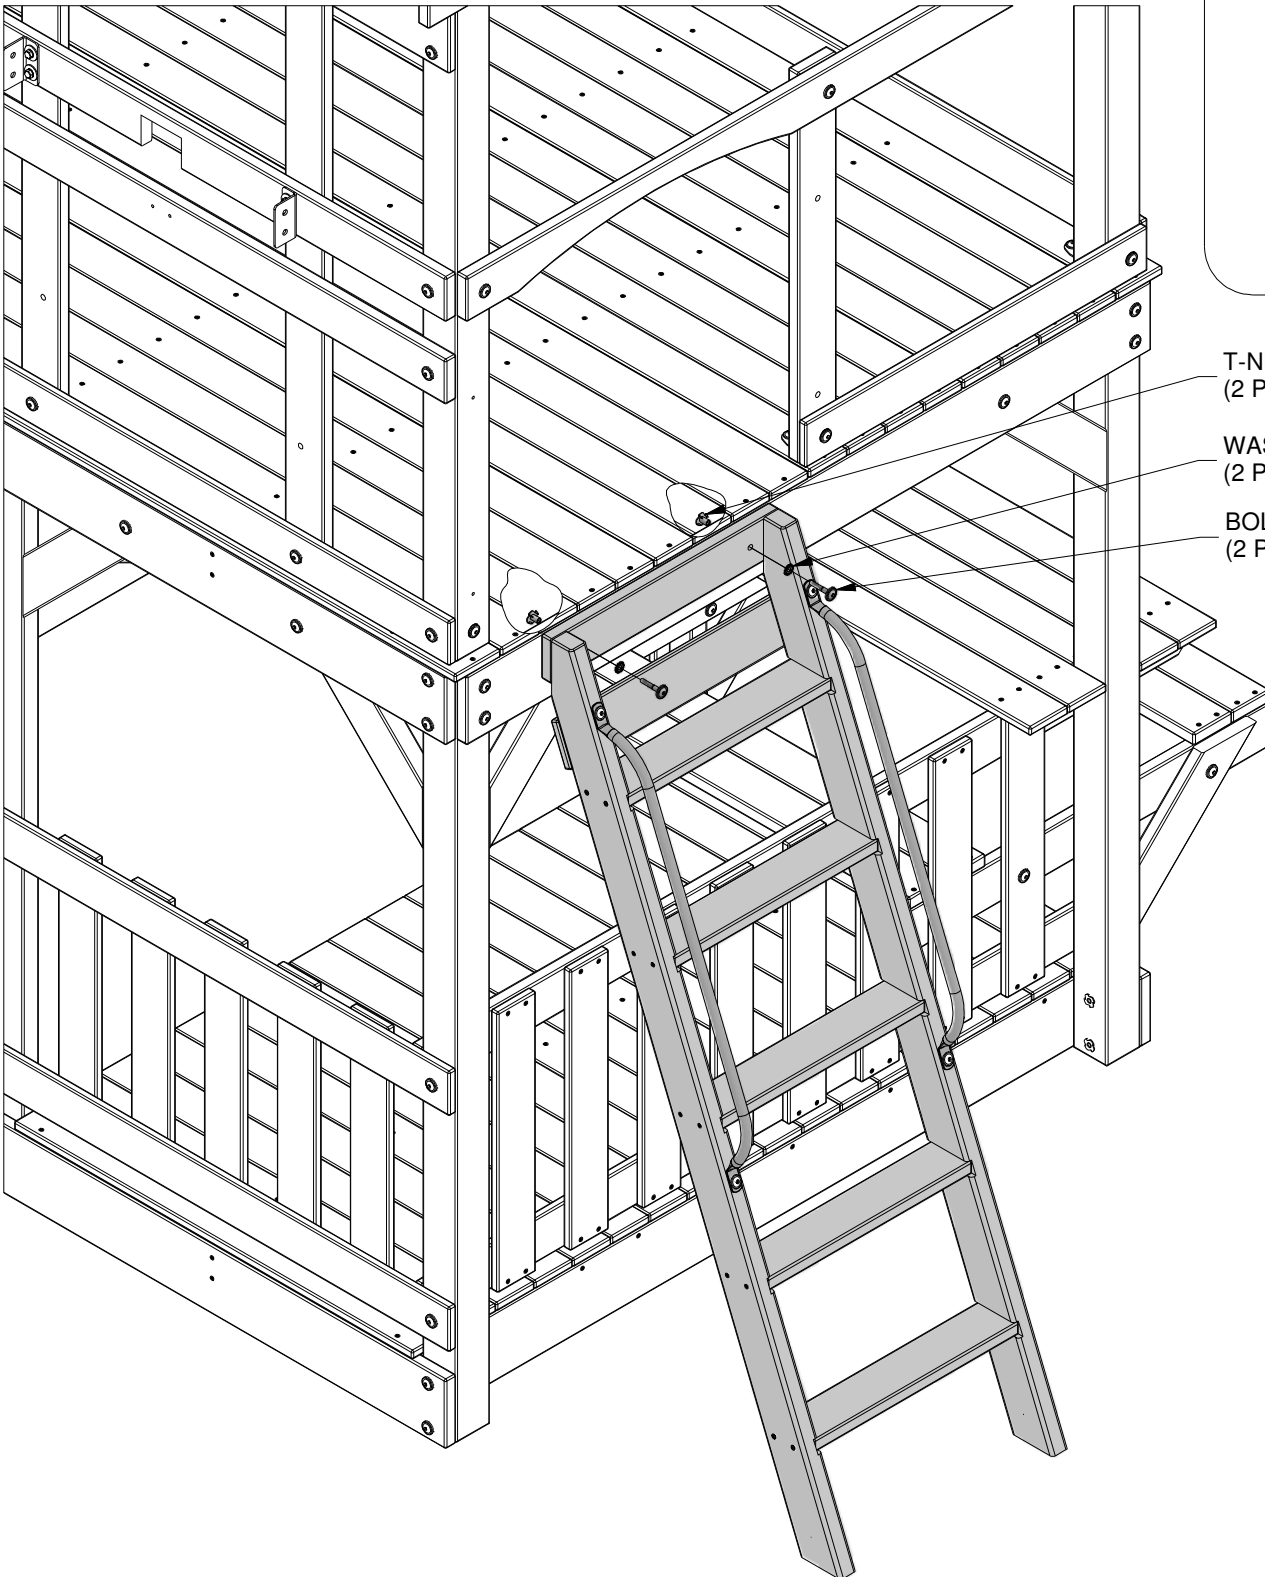

BOLT WH
(2) 5/16x1 3/4
H100011



**WASHER
LOCK EXT**
(2) 8x19
H100030



(2) **T-NUT 5/16**
H100074

T-NUT 5/16
(2 PLCS)

WASHER LOCK EXT 8x19
(2 PLCS)

BOLT WH 5/16x1 3/4
(2 PLCS)



(1) **H4 - ROOF SUPPORT RAIL - W4L04623**
1"x3 3/8"x67 1/4" (24x86x1709)




(1) **H7 - FRONT CLUB HOUSE WALL RAIL - W4L04625**
1"x3 3/8"x60 1/2" (24x86x1537)

 
FORT ASSEMBLY
STEP 30

BOLT WH
(4) 5/16x3 3/4
H100019


(4) **T-NUT 5/16**
H100074

(4) **WASHER LOCK EXT**
8x19
H100030

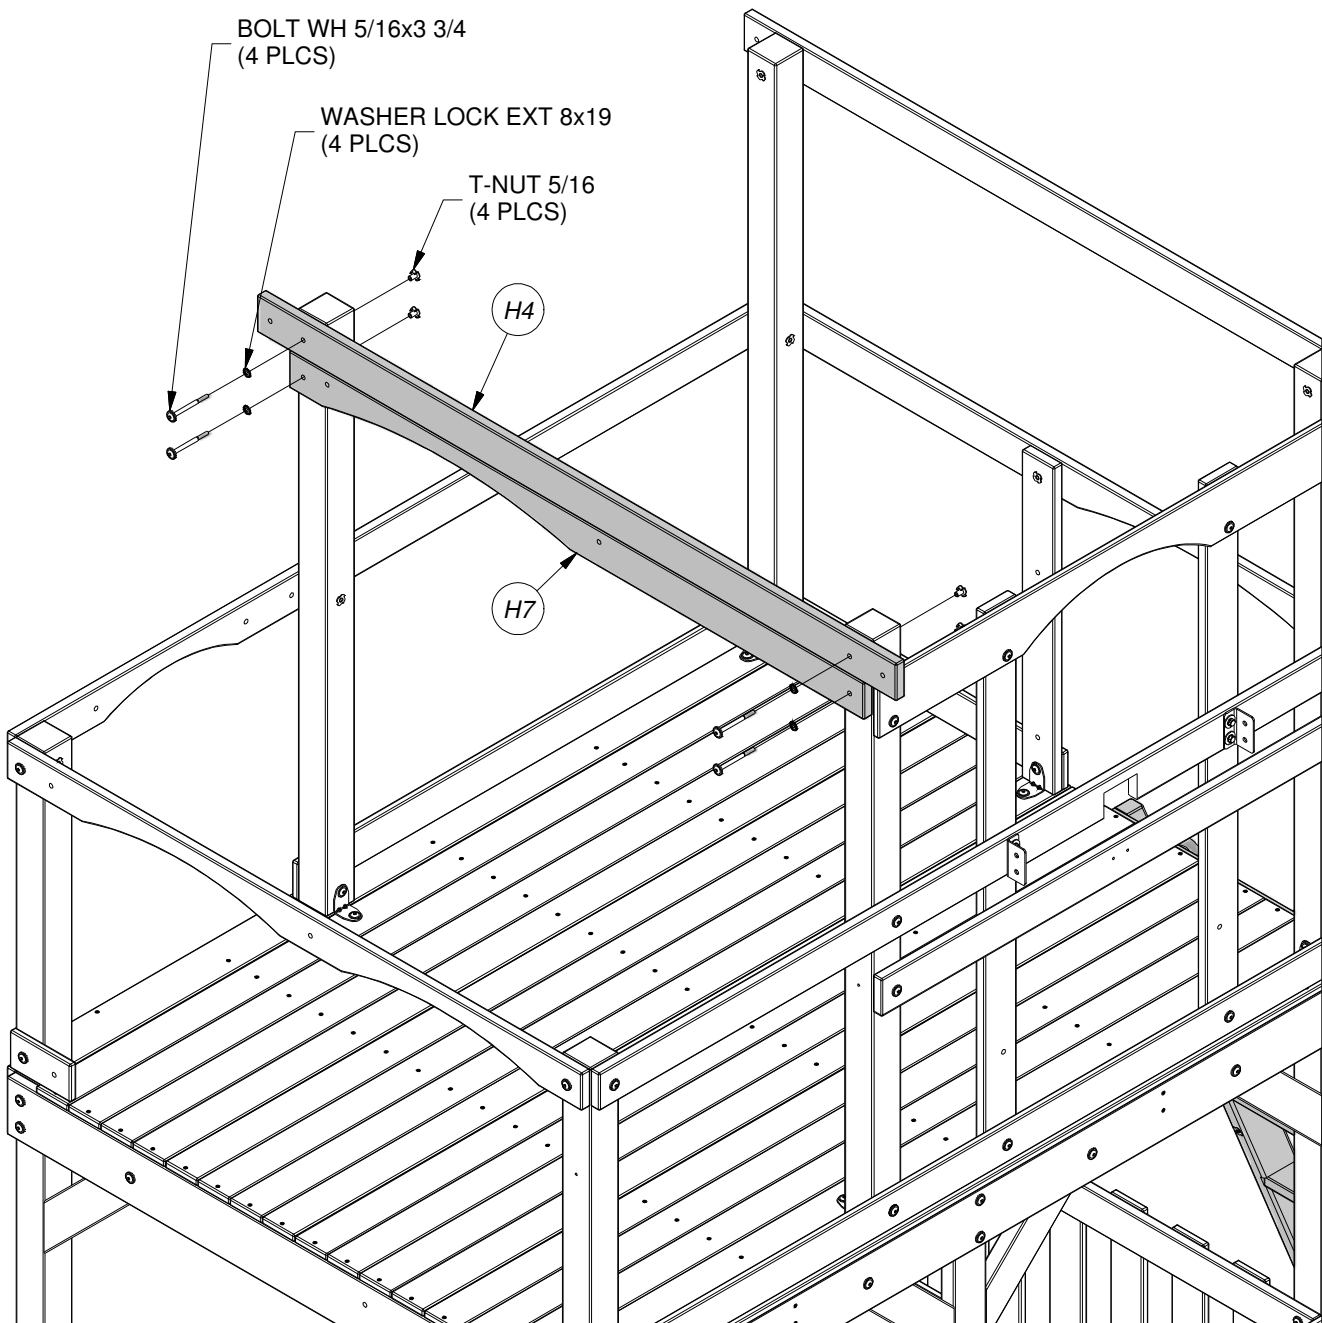




L BRACKET
(1) 2.5x38x50x55
A100340


 


 (1) **H8 - CLUB HOUSE LEG - W4L04637**
1"x3 3/8"x50 1/2" (24x86x1284)



(2) **M21 - CLUB HOUSE WALL RAIL - W4L04613**
5/8"x3 3/8"x30 1/4" (16x86x768)

FORT ASSEMBLY
STEP 31

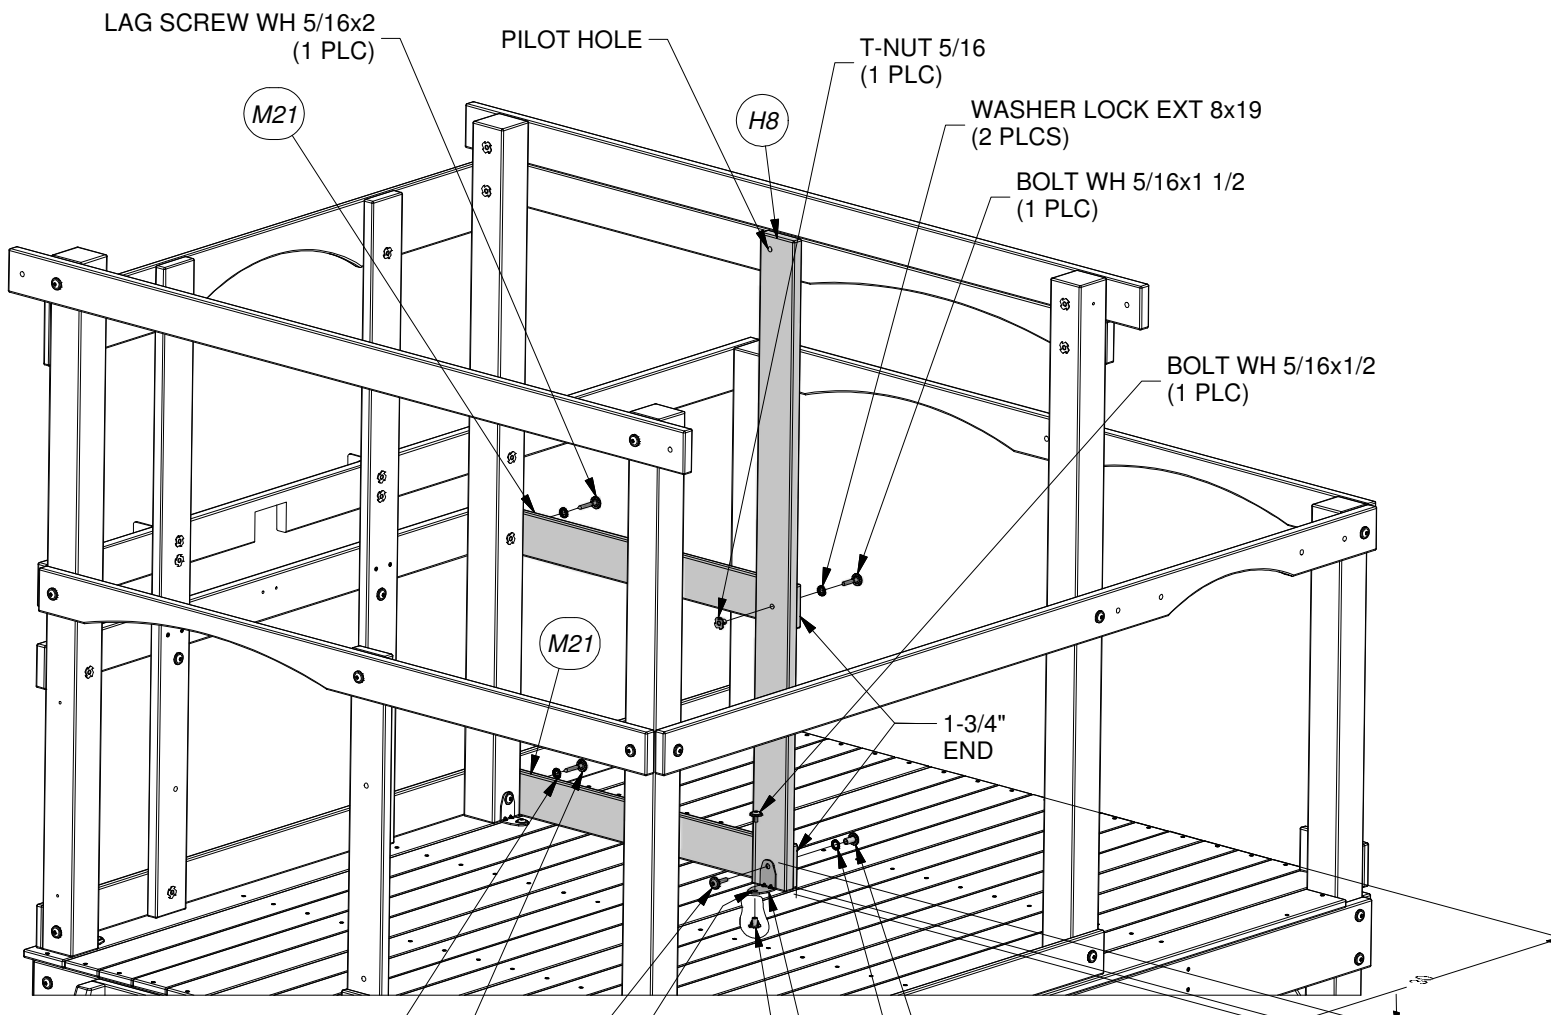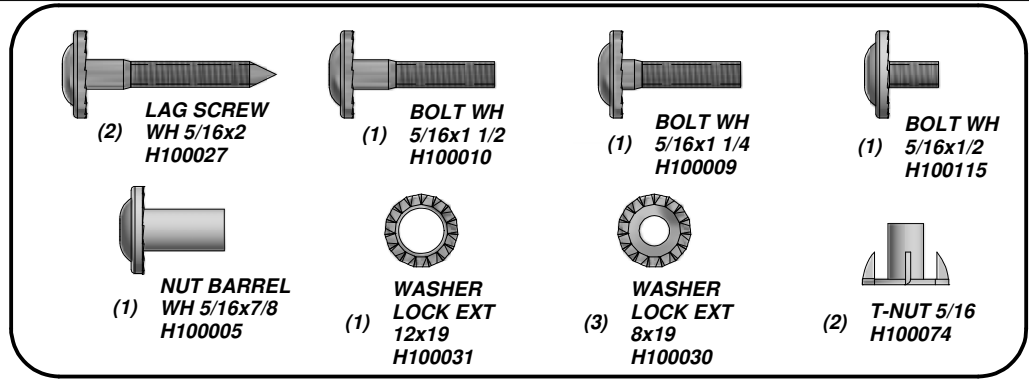



NOTE:
30 in [762mm] FROM
M21 TO EDGE OF FORT

**USING BRACKET AS A
GUIDE, DRILL 3/8" HOLE
THROUGH DECK**




(1) **H13 - CLUB HOUSE WALL RAIL - W4L04624**
1"x3 3/8"x50 1/4" (24x86x1277)

FORT ASSEMBLY
STEP 32

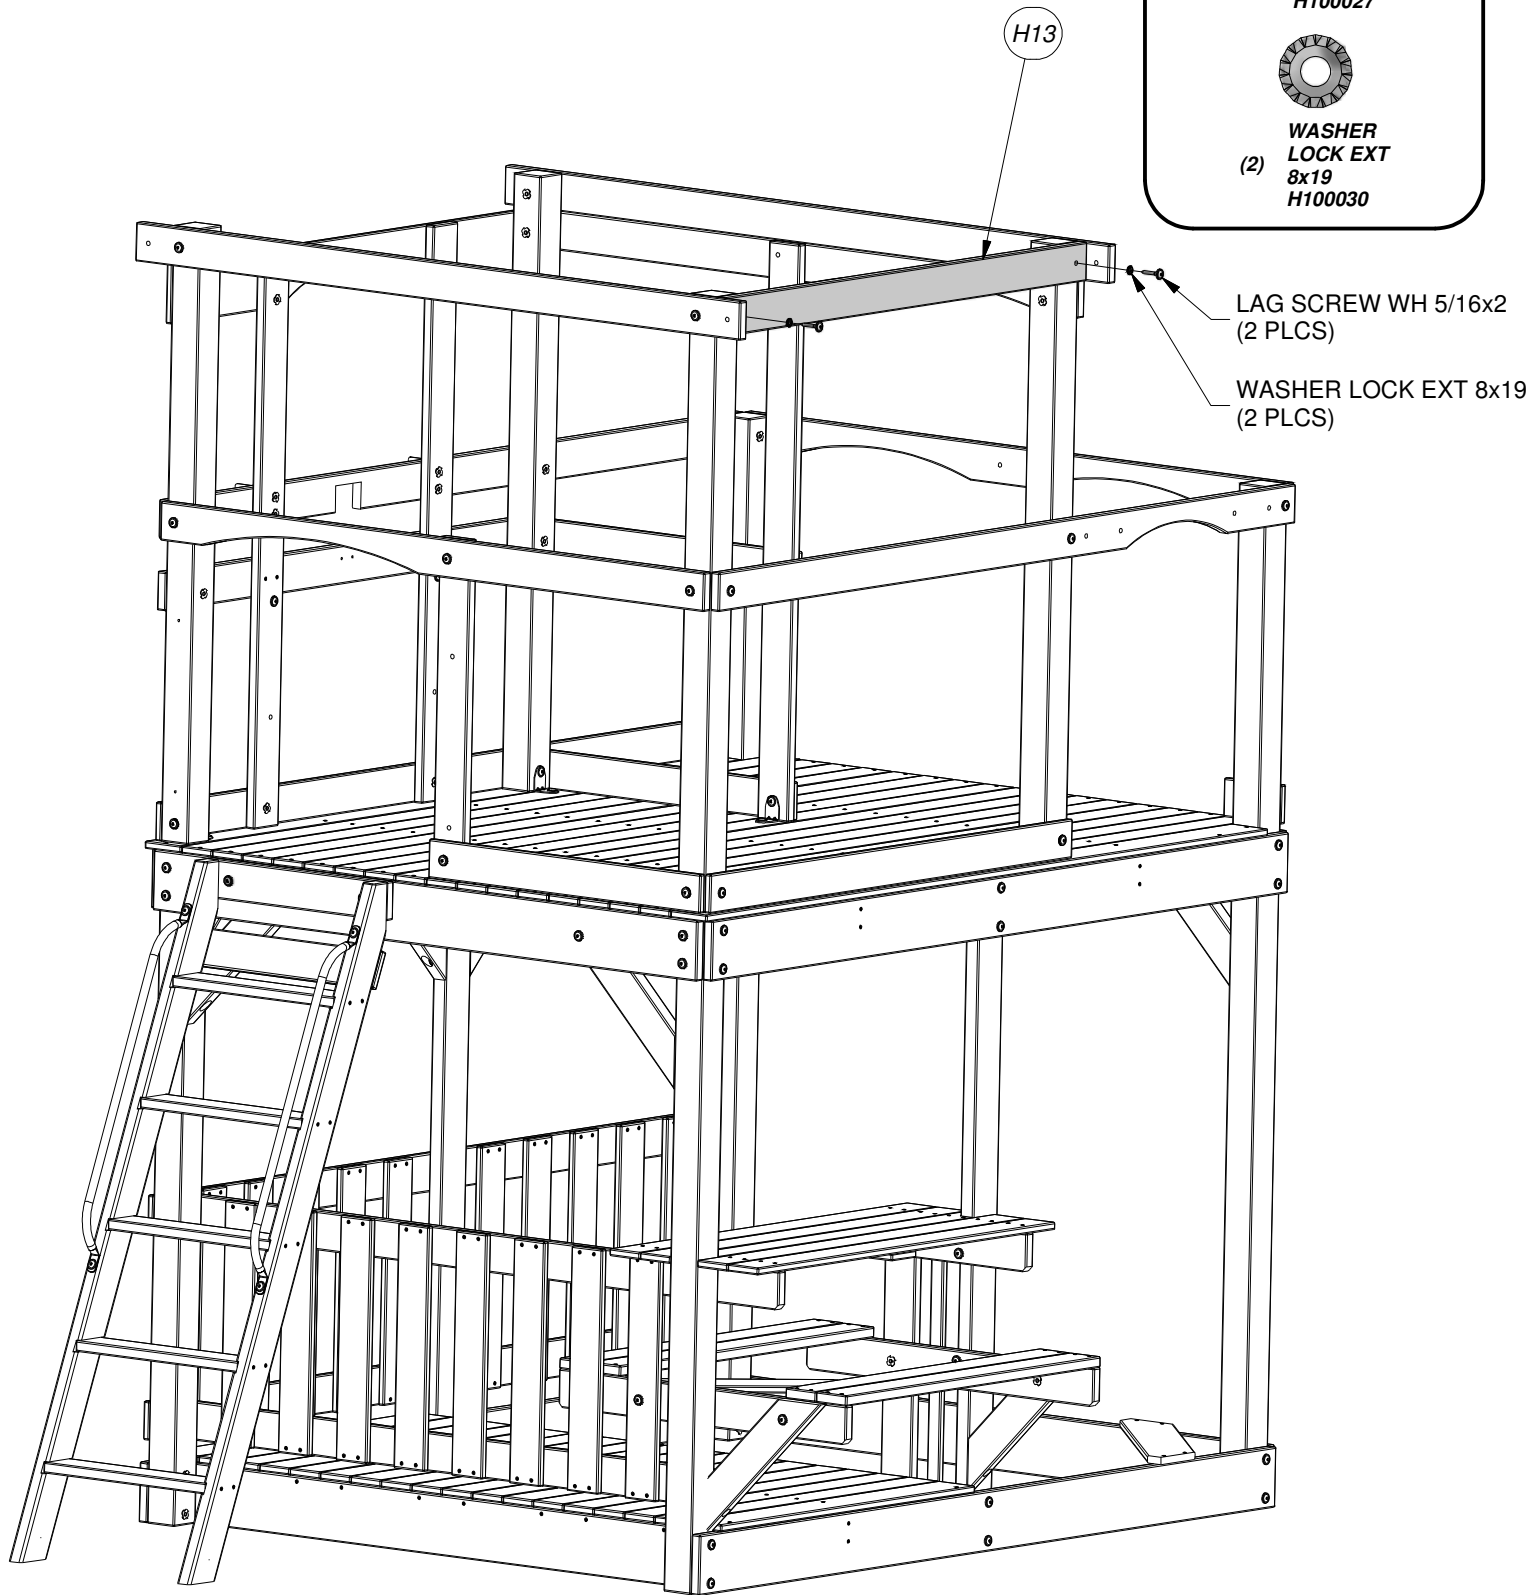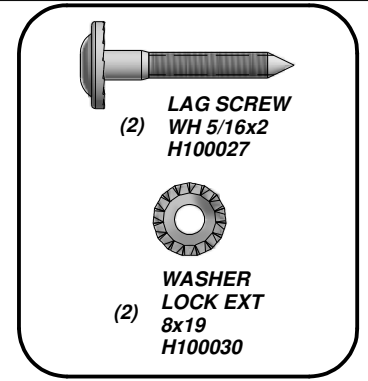



L BRACKET
 (1) 2.5x38x50x55
 A100340

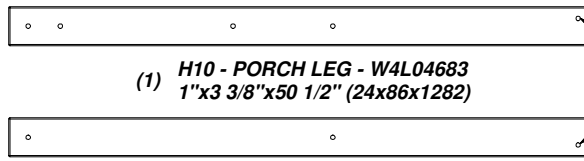


(1) **H10 - PORCH LEG - W4L04683**
 1"x3 3/8"x50 1/2" (24x86x1282)




(1) **H11 - PORCH LEG - W4L04610**
 1"x3 3/8"x50 1/2" (24x86x1282)

NOTE:
HOLES GO OUTWARD
WHEN INSTALLED.

FORT ASSEMBLY
STEP 33

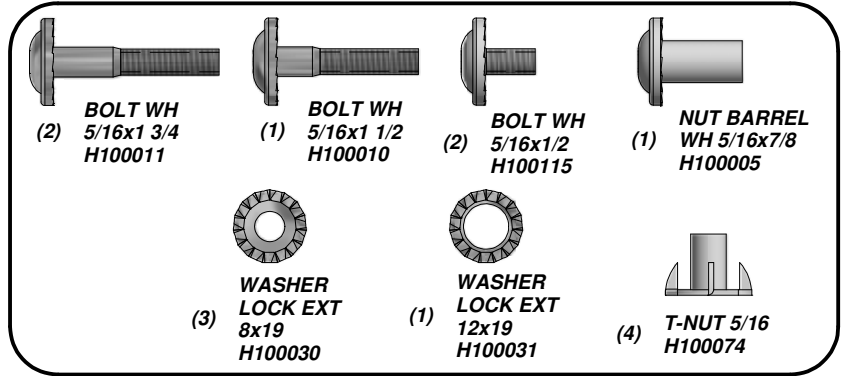


NOTE:
HOLES GO OUTWARD.

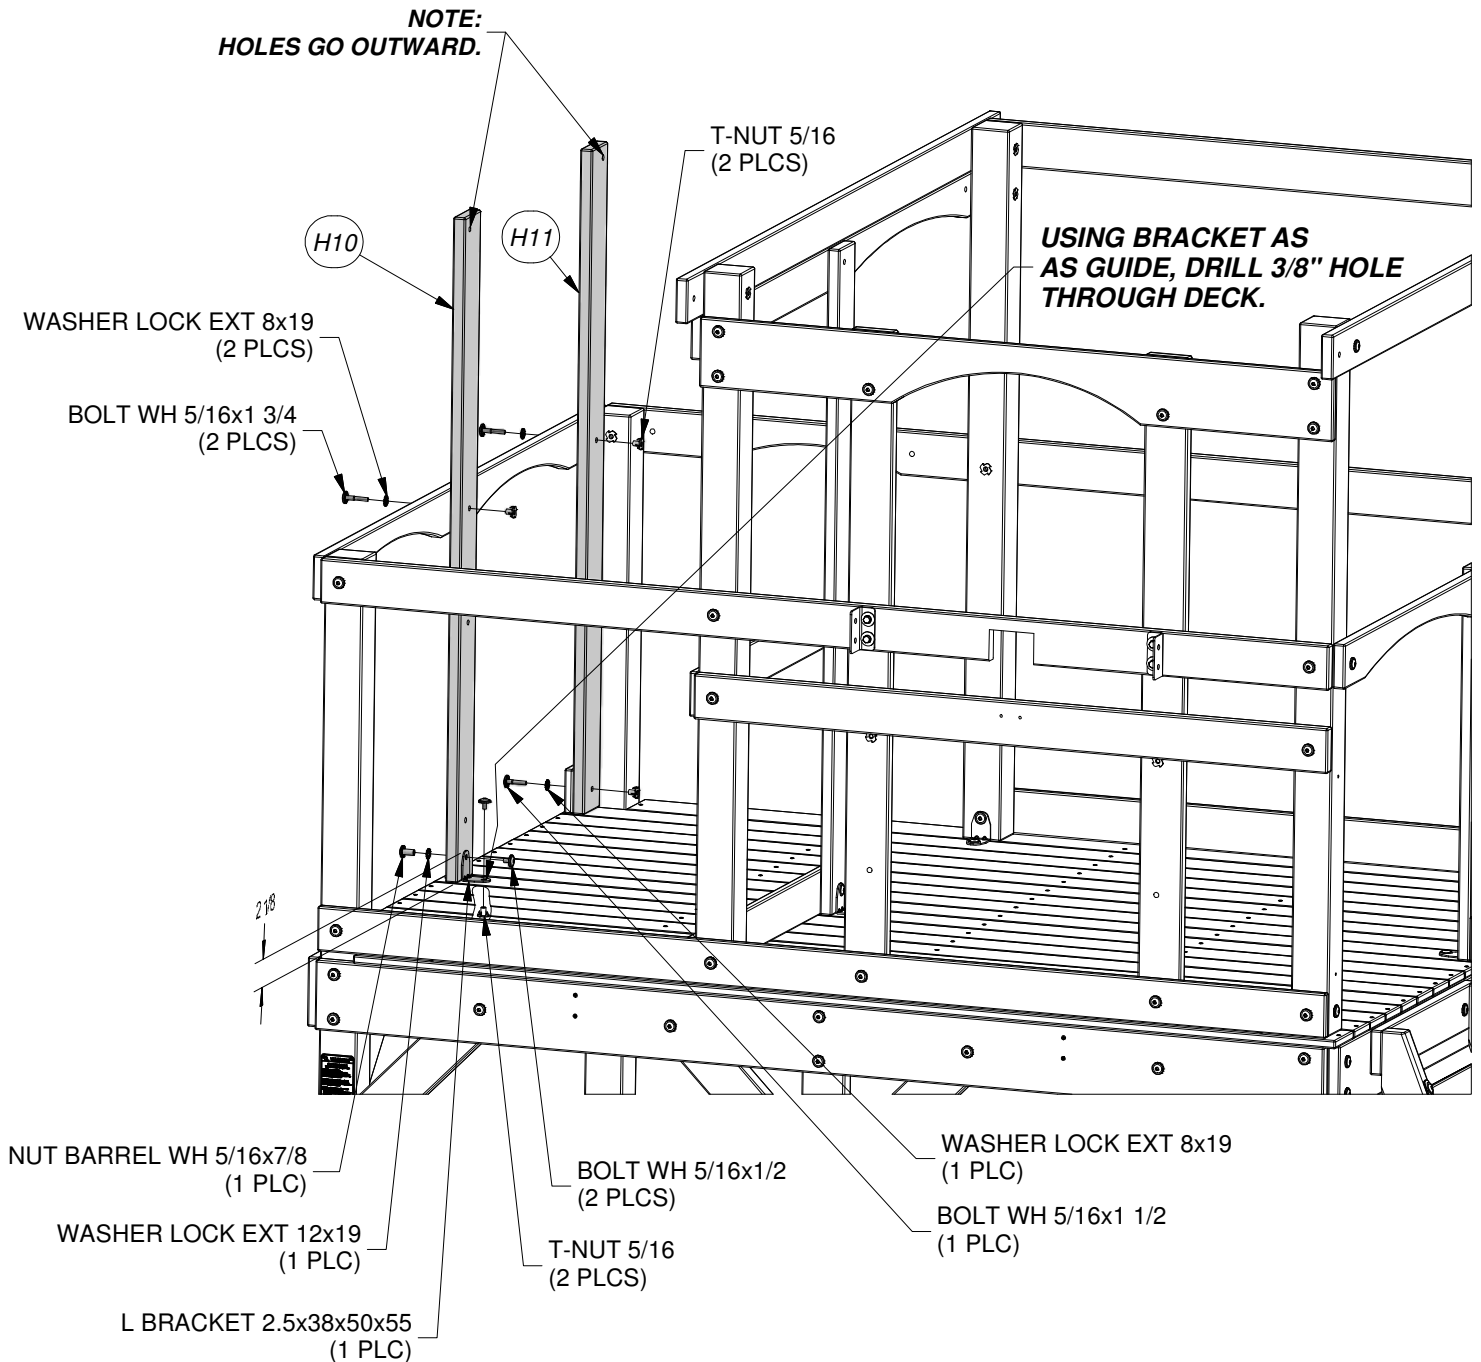




 
(2) M8 - CLUB HOUSE WALL BOARD - W4L04630
5/8"x3 3/8"x50 1/2" (16x86x1284)



 (2) N1 - CLUB HOUSE WALL BOARD - W4L04629
5/8"x2 3/8"x50 1/2" (16x60x1284)



 (2) M9 - CLUB HOUSE WALL BOARD - W4L04631
5/8"x3"x50 1/2" (16x76x1284)





(2) M23 - CLUB HOUSE WALL BOARD - W4L04634
5/8"x3 1/8"x29 7/8" (16x80x758)




(4) M22 - CLUB HOUSE WALL BOARD - W4L04633
5/8"x3 3/8"x29 7/8" (16x86x758)

FORT ASSEMBLY STEP 34

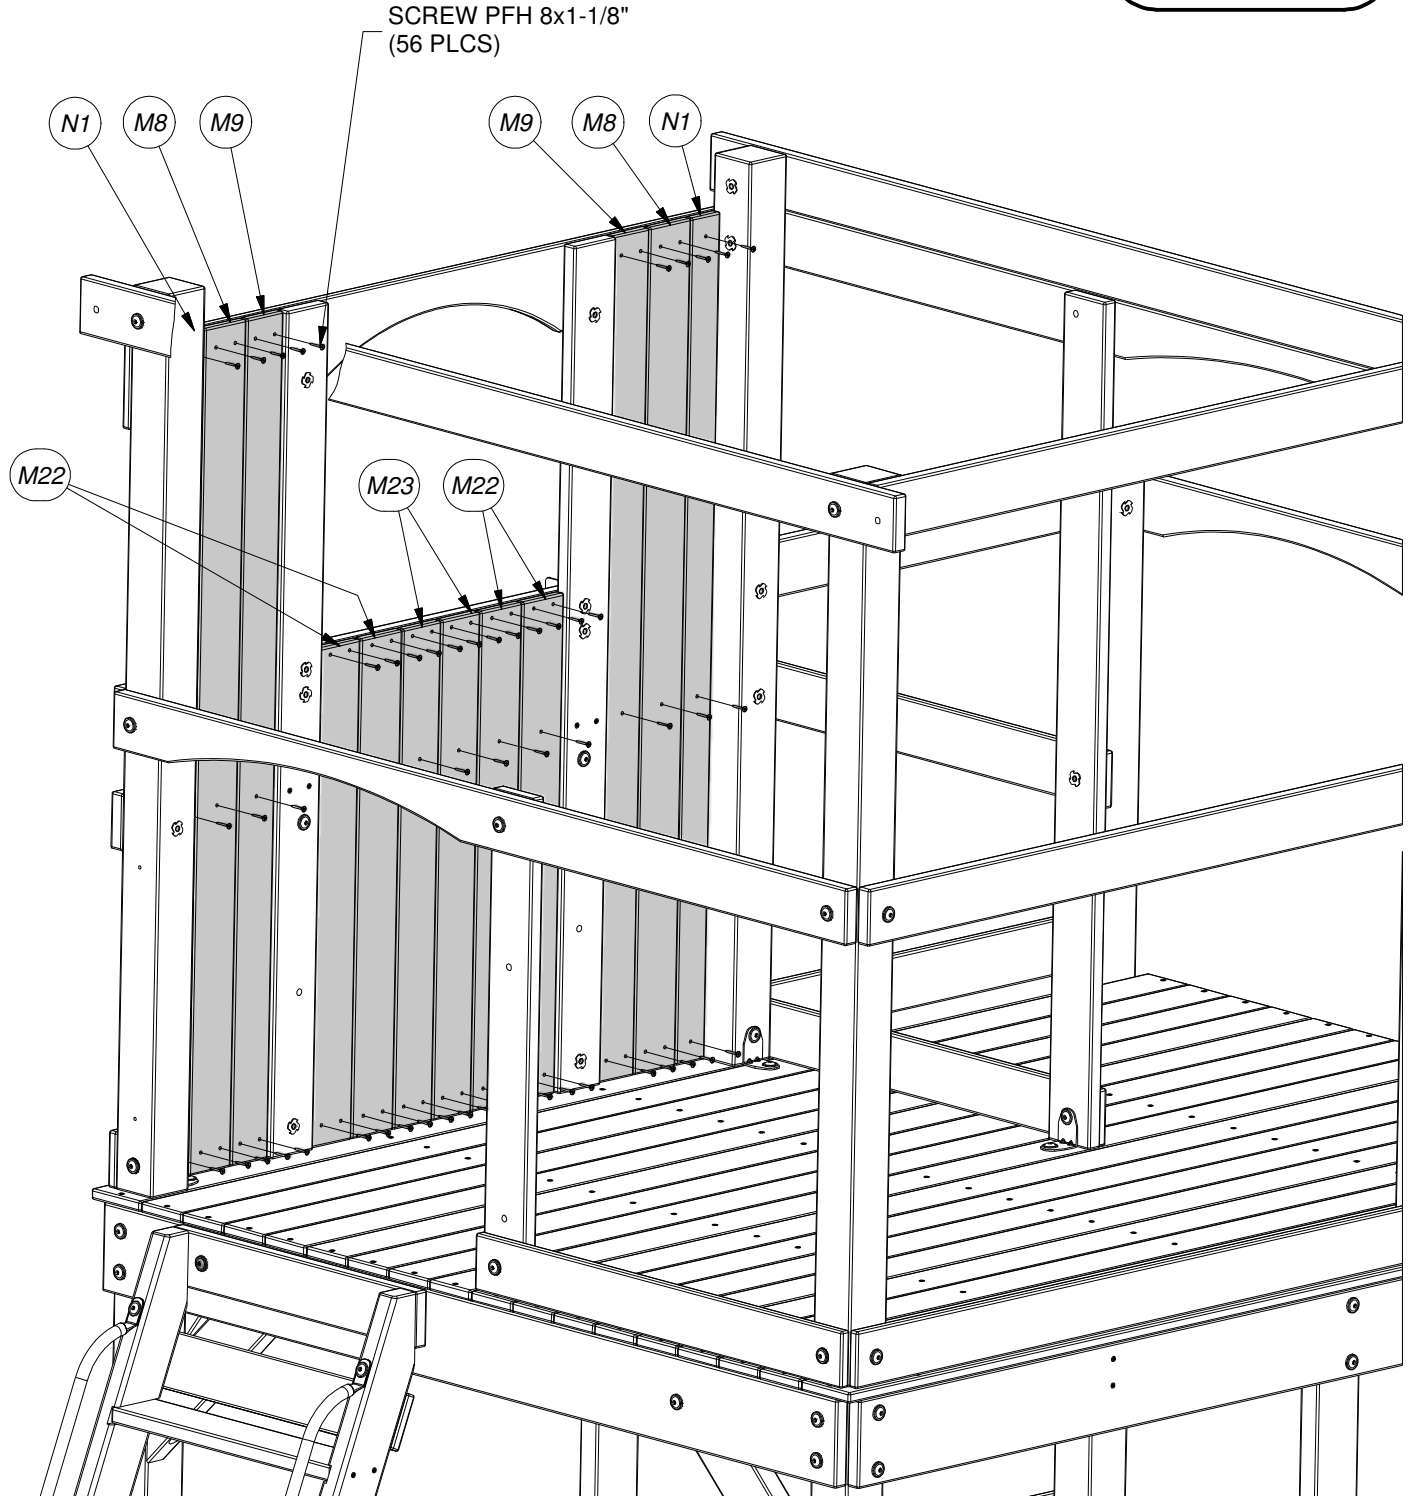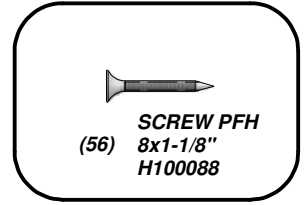



 (2) M26 - WALL BOARD - W4L04636
5/8"x3 3/8"x26 1/8" (16x86x664)





(1) M6 - CLUB HOUSE WALL BOARD - W4L04635
5/8"x3 3/8"x53 7/8" (16x86x1370)



(6) M24 - WALL BOARD - W4L04632
5/8"x3 3/8"x29 7/8" (16x86x758)

**FORT ASSEMBLY
STEP 35**

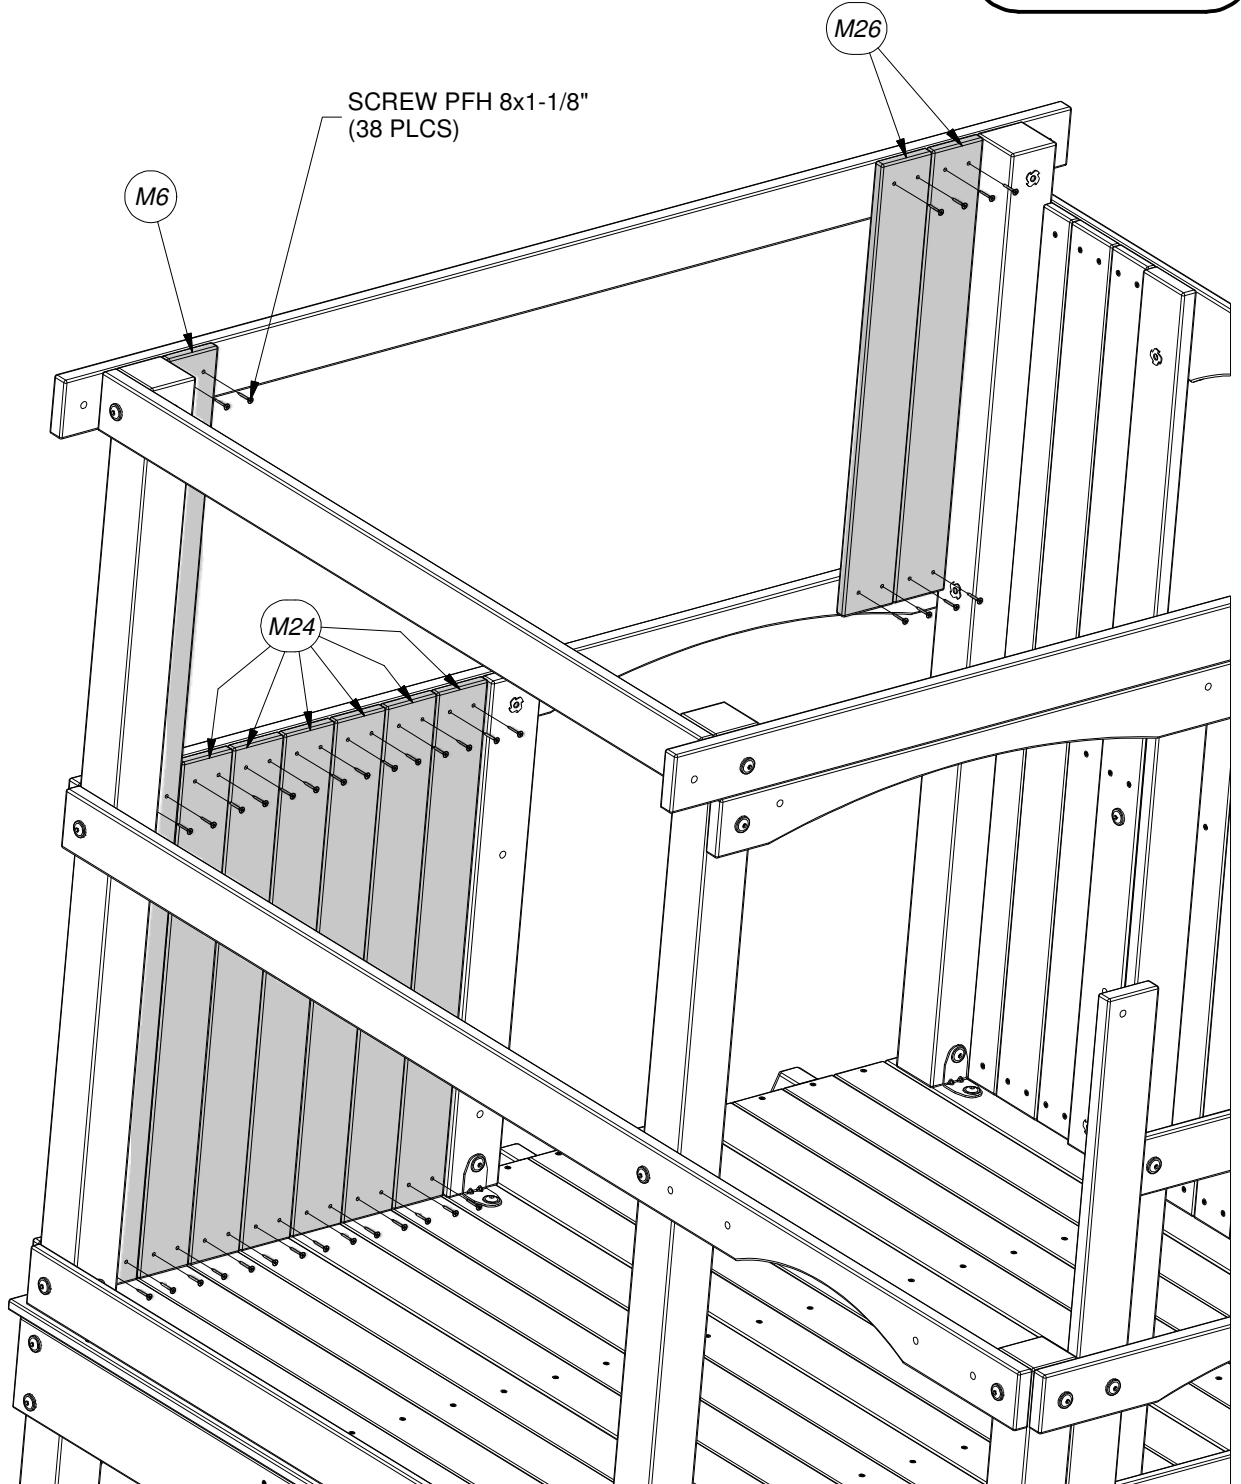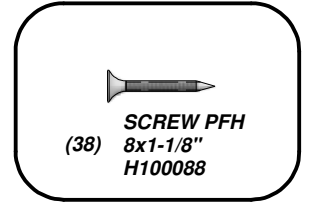



(5) **M8 - CLUB HOUSE WALL BOARD - W4L04630**
 5/8"x3 3/8"x50 1/2" (16x86x1284)




(2) **M33 - FRONT WINDOW WALL BOARD - W4L04638**
 5/8"x3 3/8"x6 3/8" (16x86x162)




(2) **M17 - FRONT WINDOW WALL BOARD - W4L04639**
 5/8"x3 3/8"x35" (16x86x889)

FORT ASSEMBLY
STEP 36

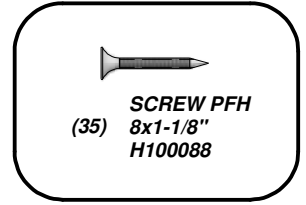



SCREW PFH 8x1-1/8"
 (35 PLCS)

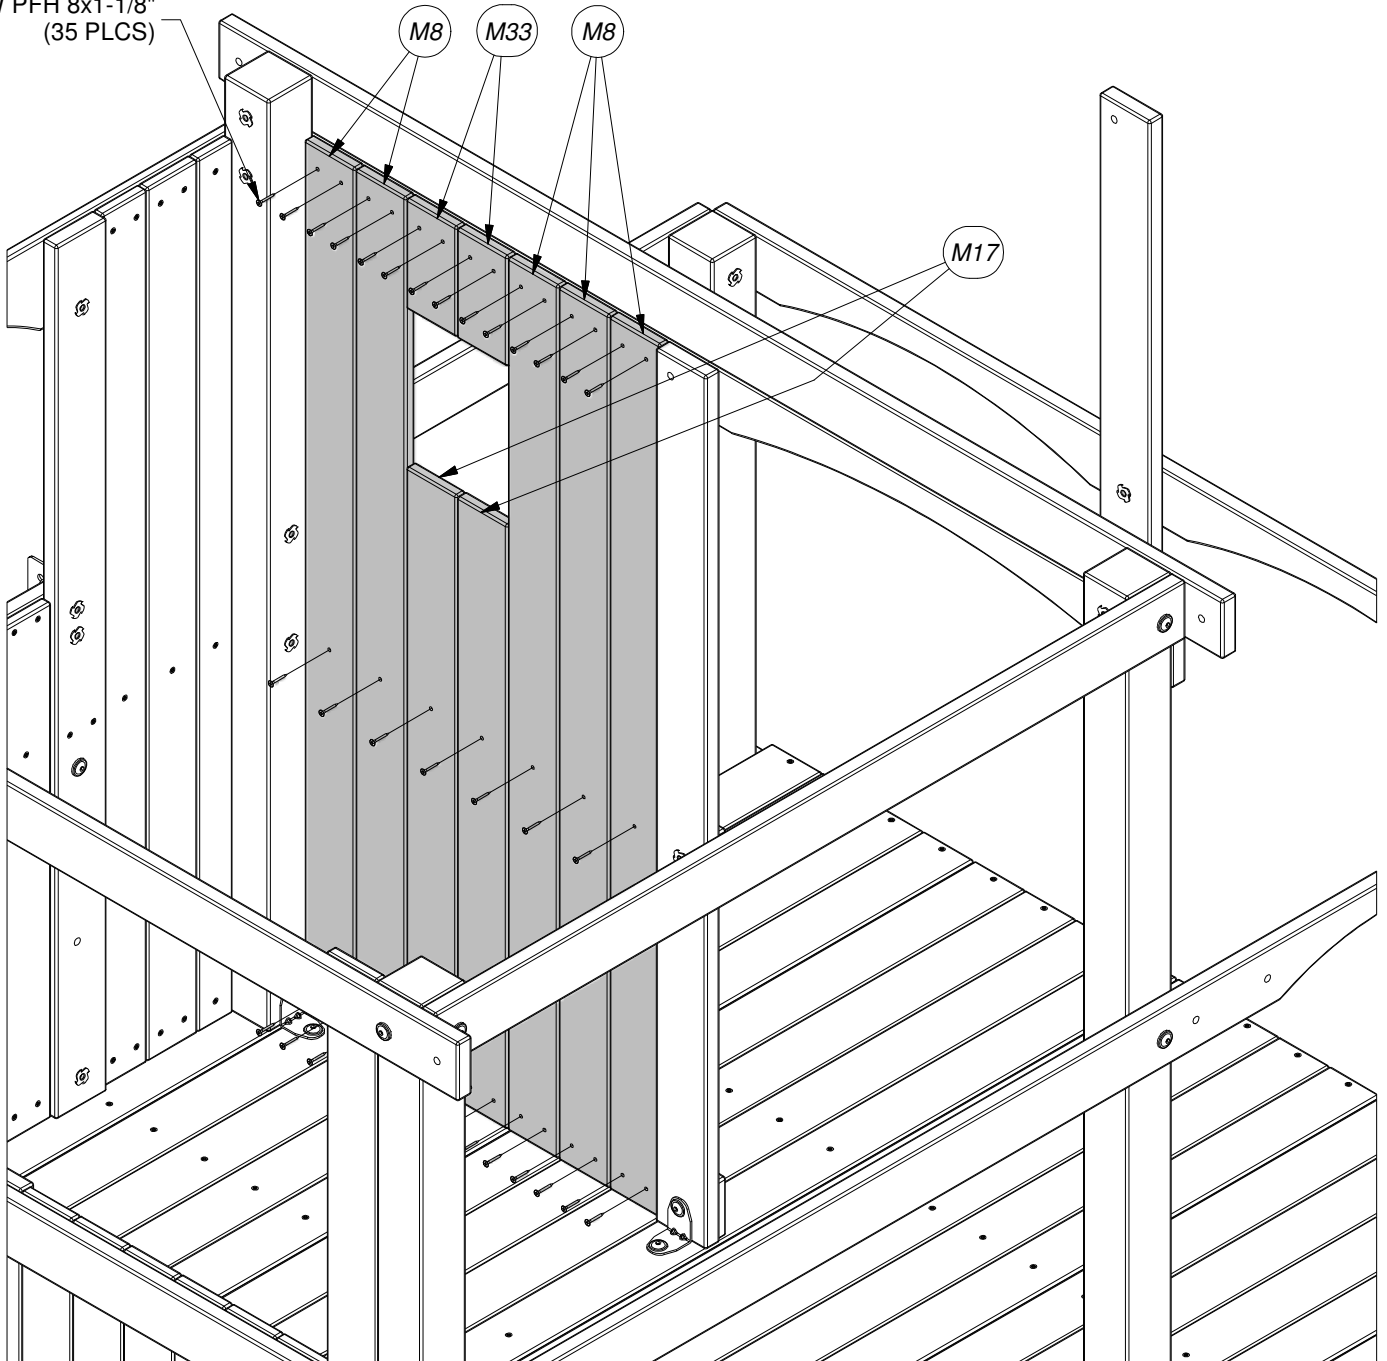



(13) **M24 - WALL BOARD - W4L04632**
5/8"x3 3/8"x29 7/8" (16x86x758)


FORT ASSEMBLY
STEP 37

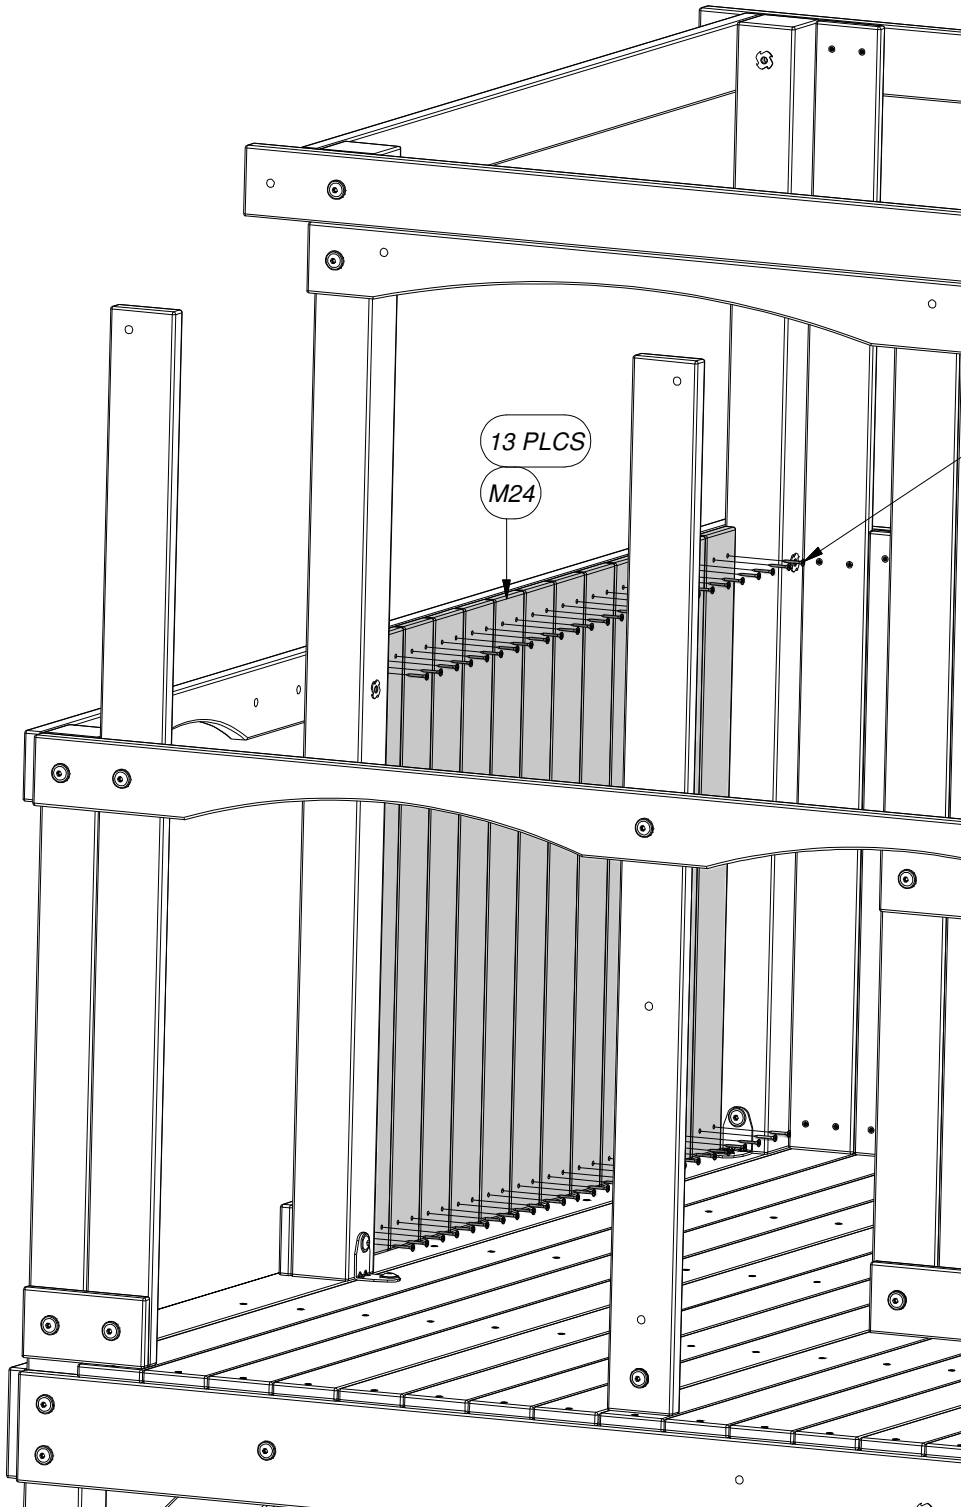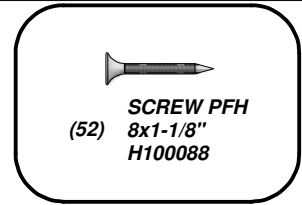







(4) M24 - WALL BOARD - W4L04632
5/8"x3 3/8"x29 7/8" (16x86x758)

**FORT ASSEMBLY
STEP 38**

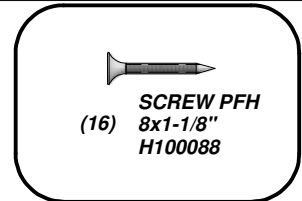


2 5/8 in
EQUAL SPACING

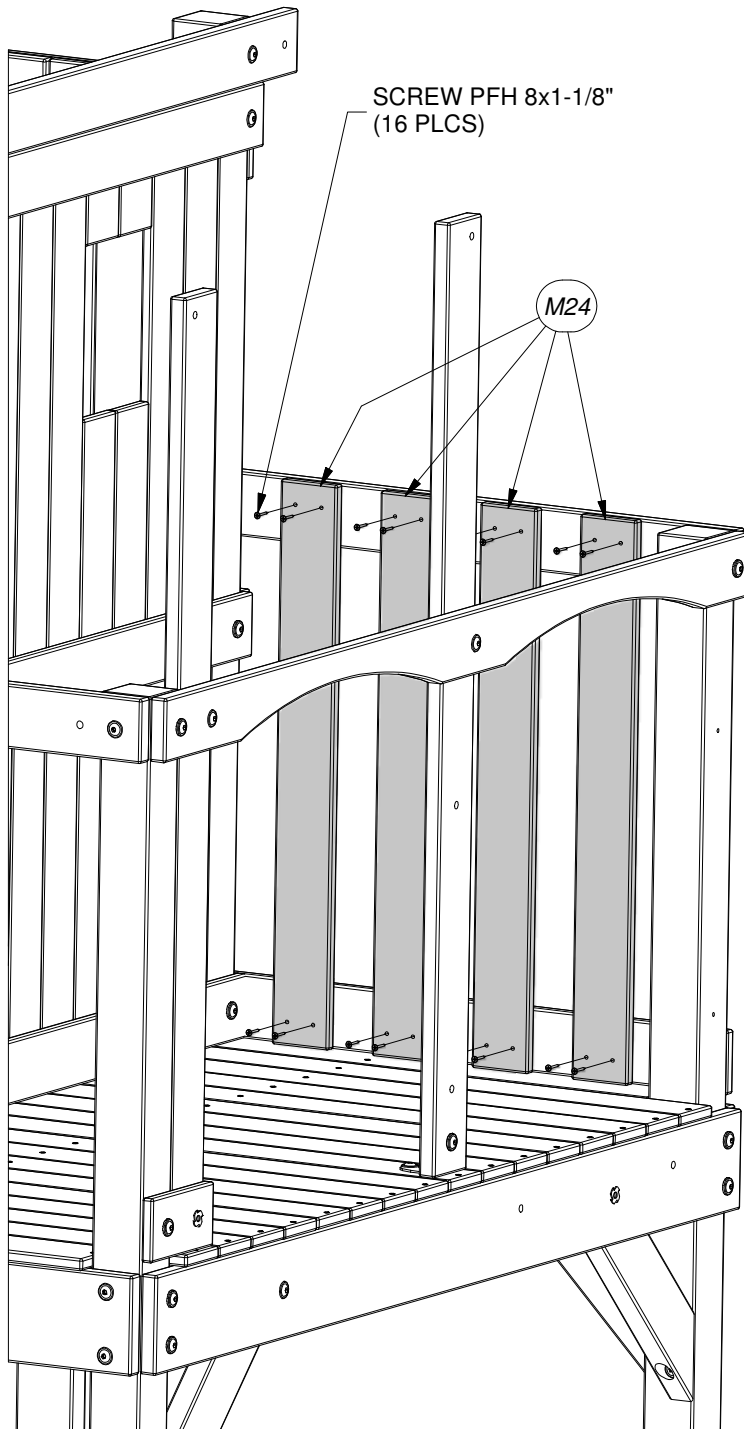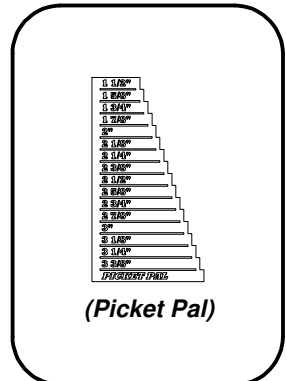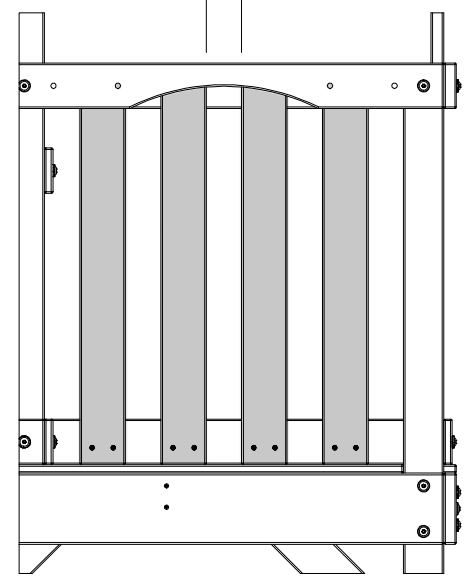


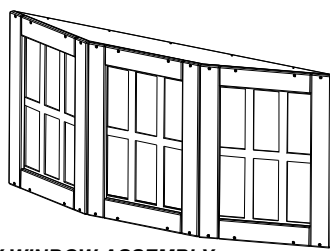



(2) BAY WINDOW ASSEMBLY

**FORT ASSEMBLY
STEP 39**

 **SCREW PFH**
(20) 8x2
H100111

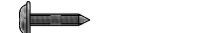 **SCREW PWH**
(24) 8x5/8
H100128

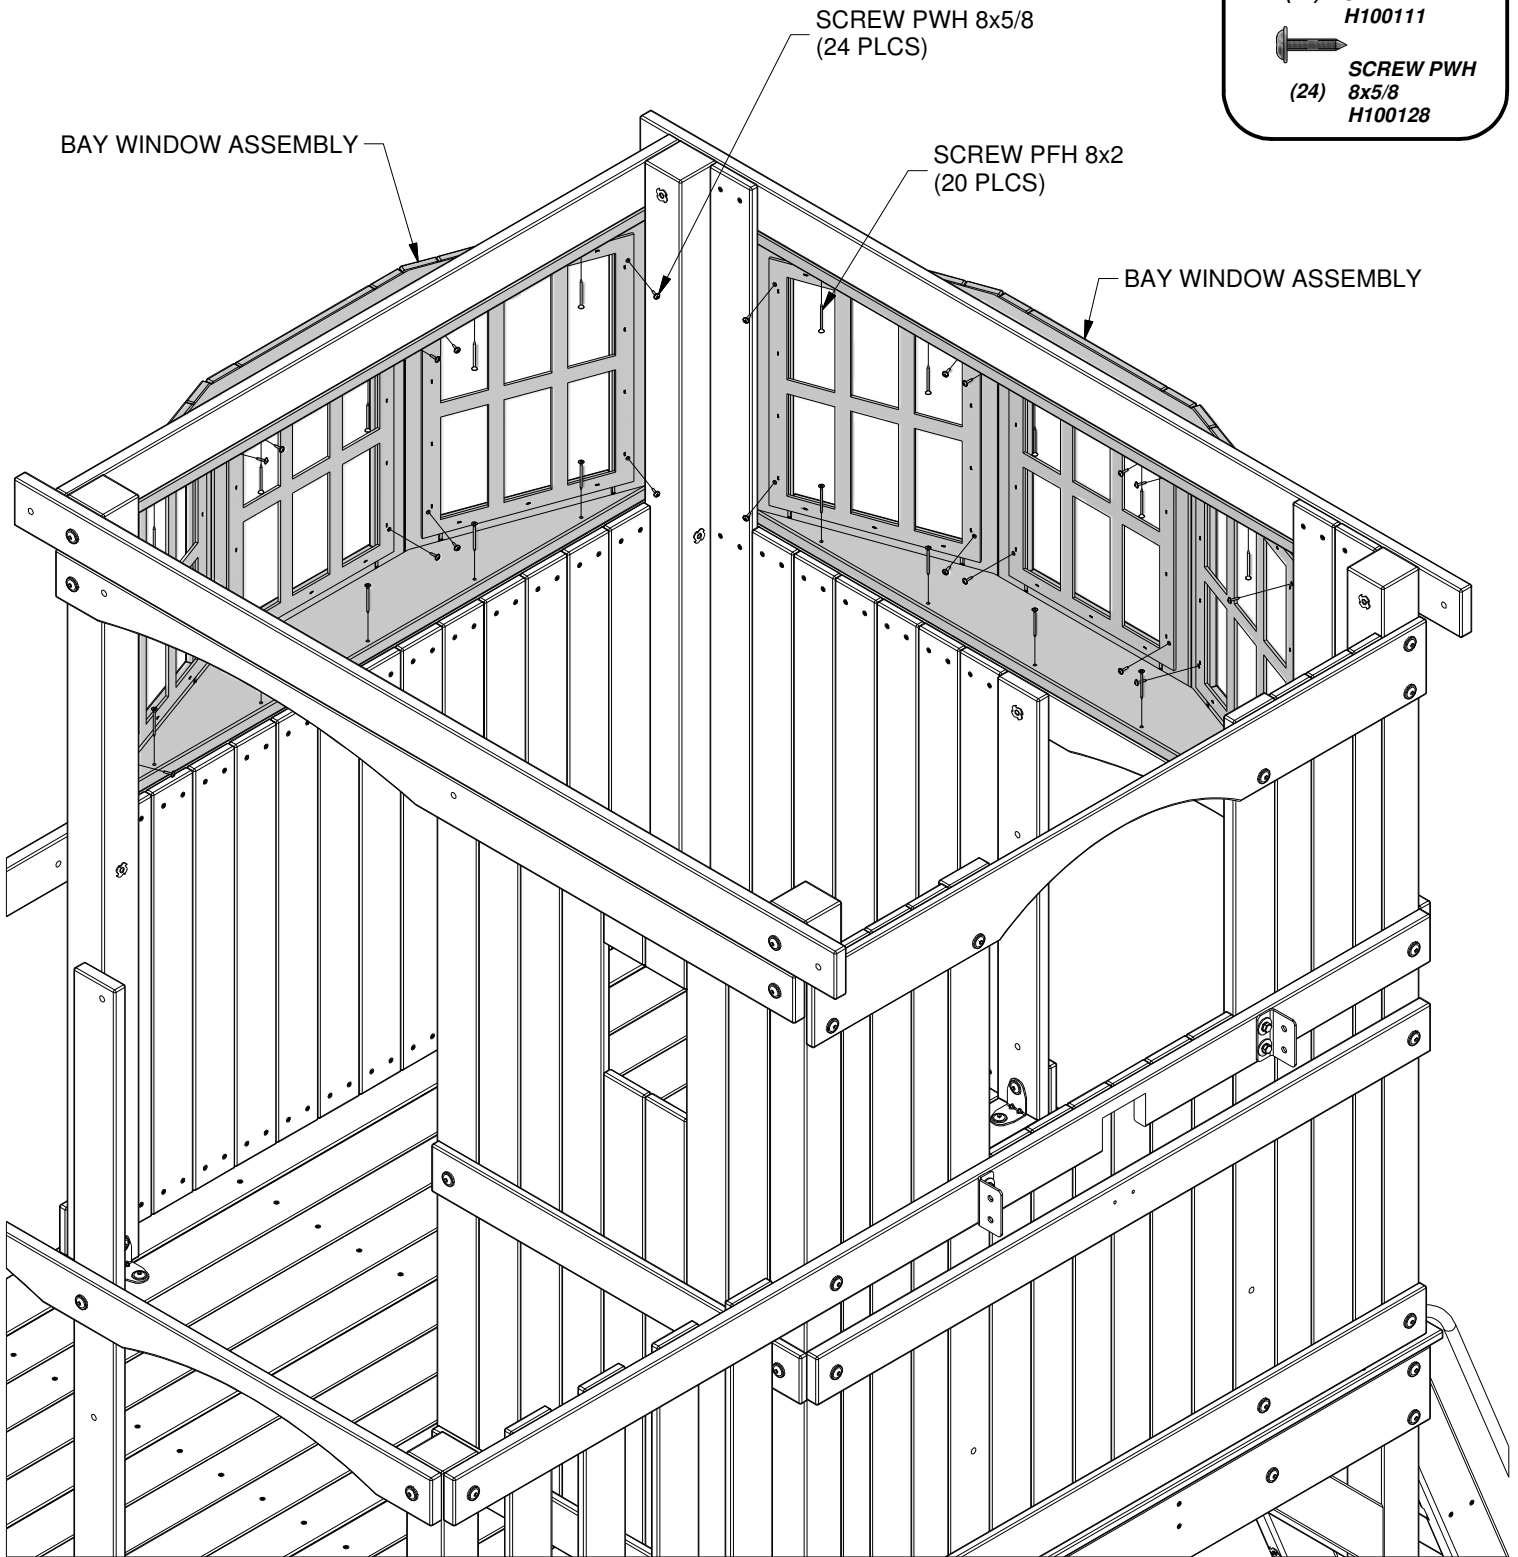


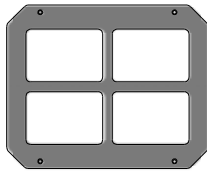


(1) GK - WINDOW 216x267 GREEN - A100146

**FORT ASSEMBLY
STEP 40**

WINDOW 216x267 GREEN
(1 PLC)



SCREW PWH 8x3/4
(4 PLCS)

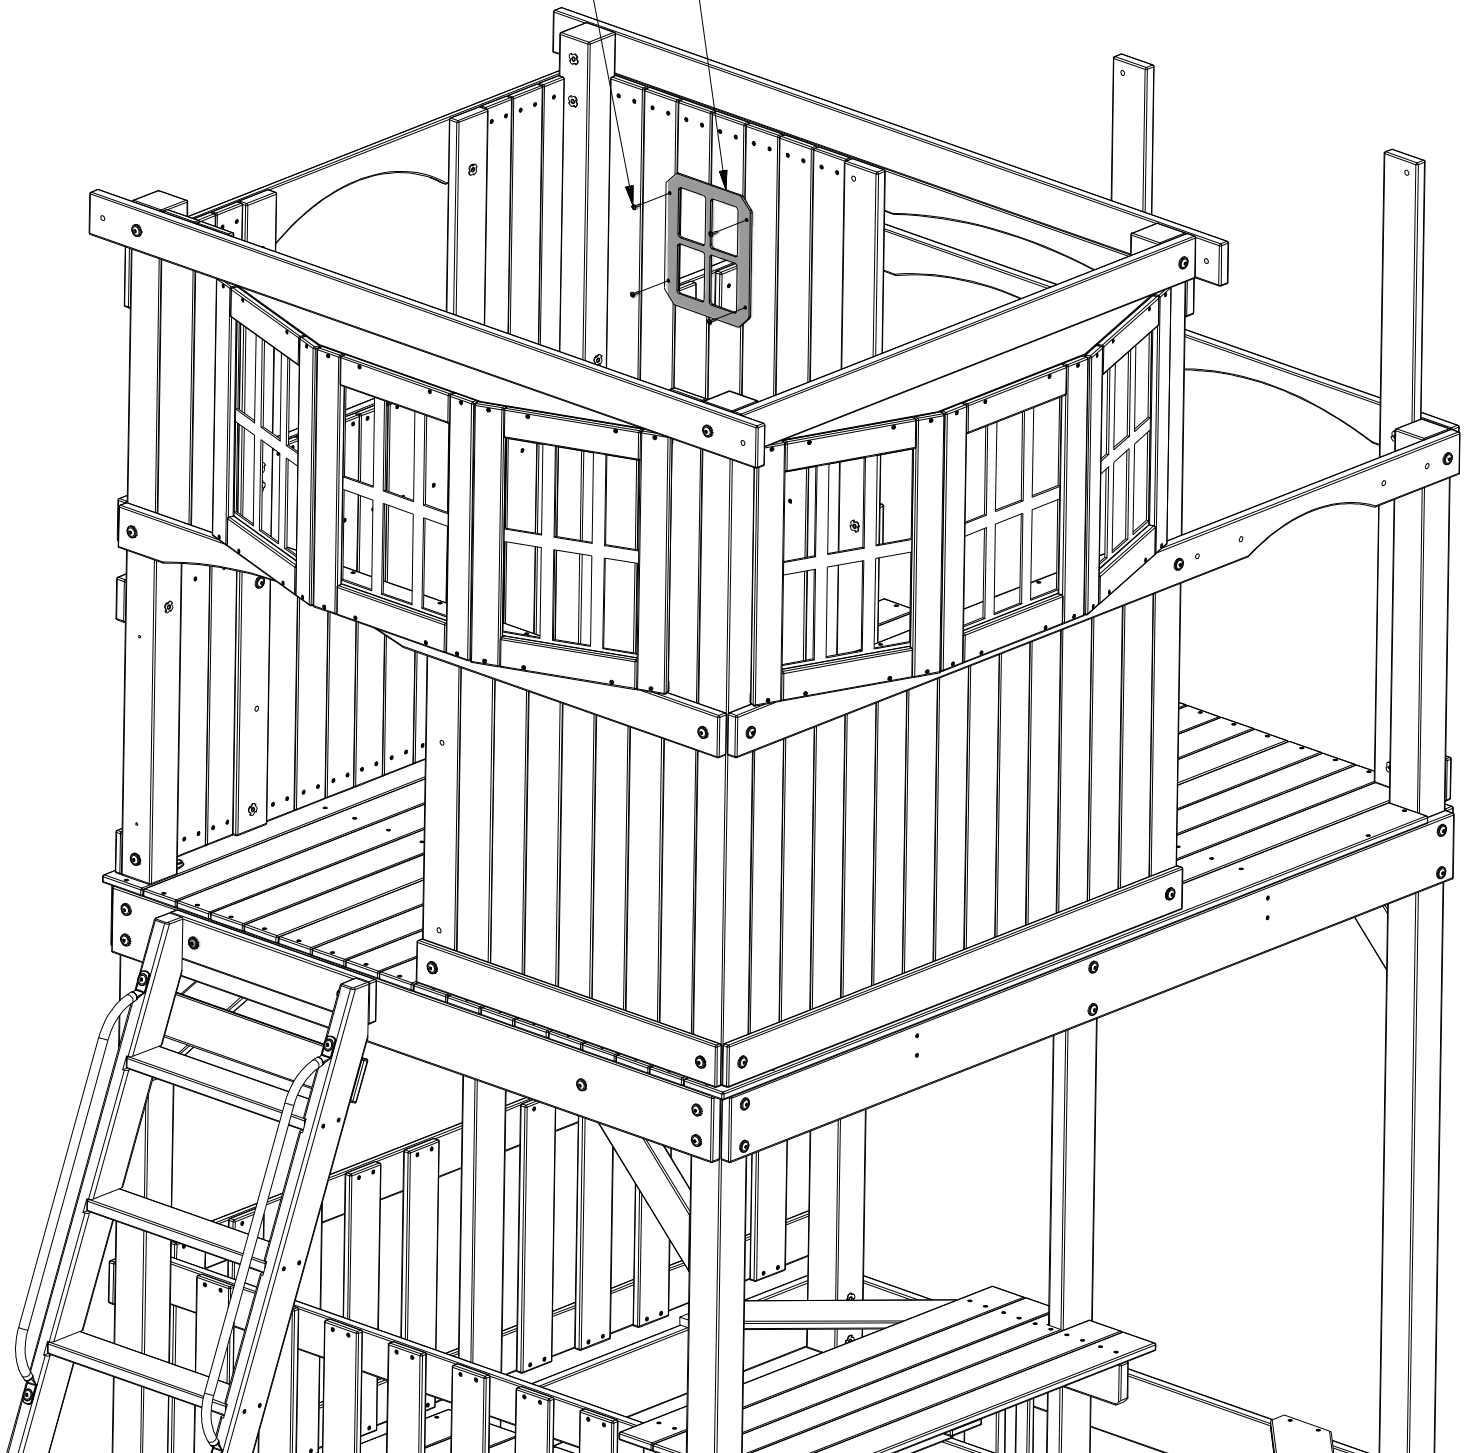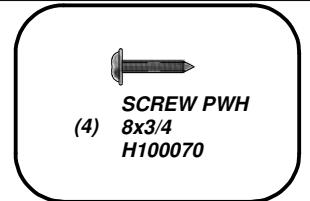



(2) TA - LADDER RUNG 629 GREEN - A100324


**FORT ASSEMBLY
STEP 41**

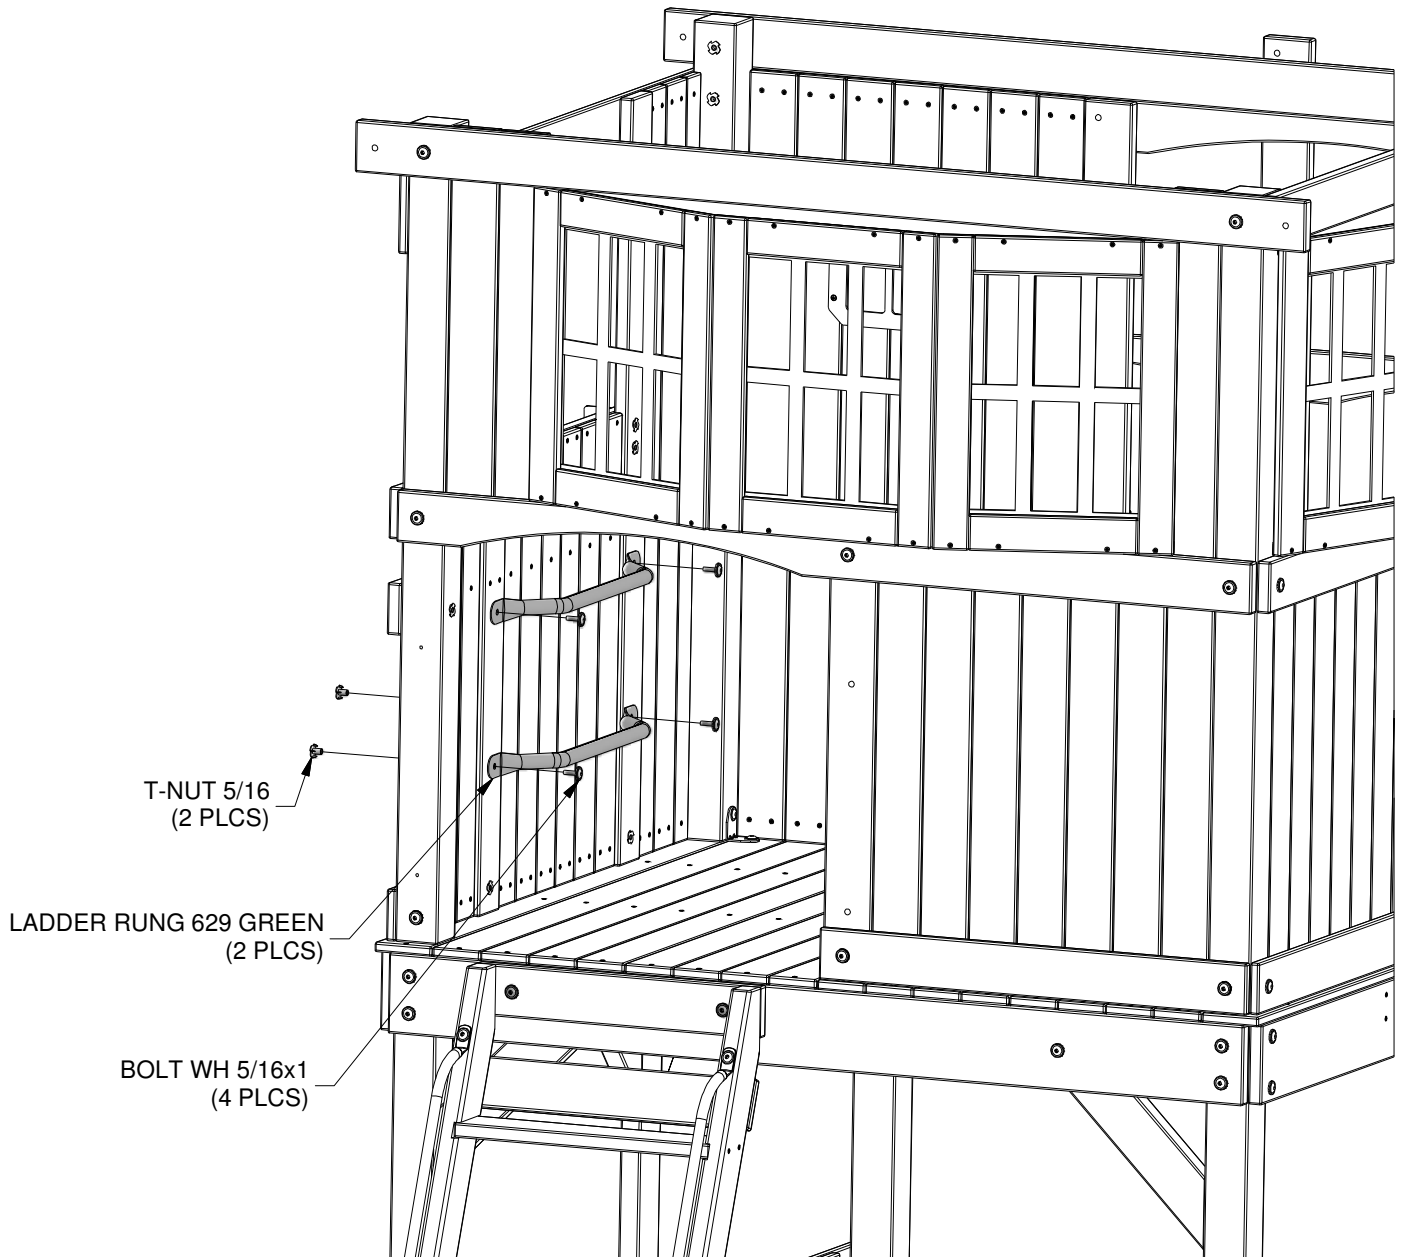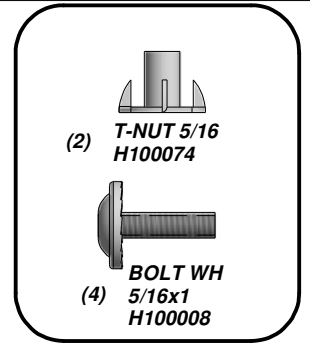




(4) **H12 - ROOF RAFTER - W4L04640**
 1"x3 3/8"x50 3/8" (24x86x1278)

FORT ASSEMBLY
STEP 42

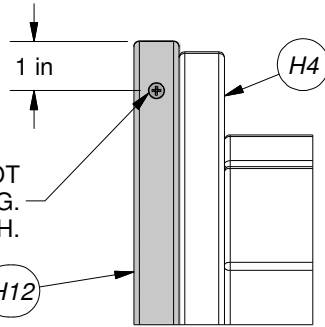

USING A 3/16" DRILL BIT, MARK AND DRILL A PILOT HOLE INTO 'H12' RAFTER TO PREVENT SPLITTING. ONLY DRILL THROUGH ONE RAFTER NOT BOTH.

BOLT WH (4) 5/16x1 3/4 H100011	WASHER LOCK EXT (4) 8x19 H100030
SCREW PFH (2) 8x2 1/4 H100091	T-NUT 5/16 (4) H100074

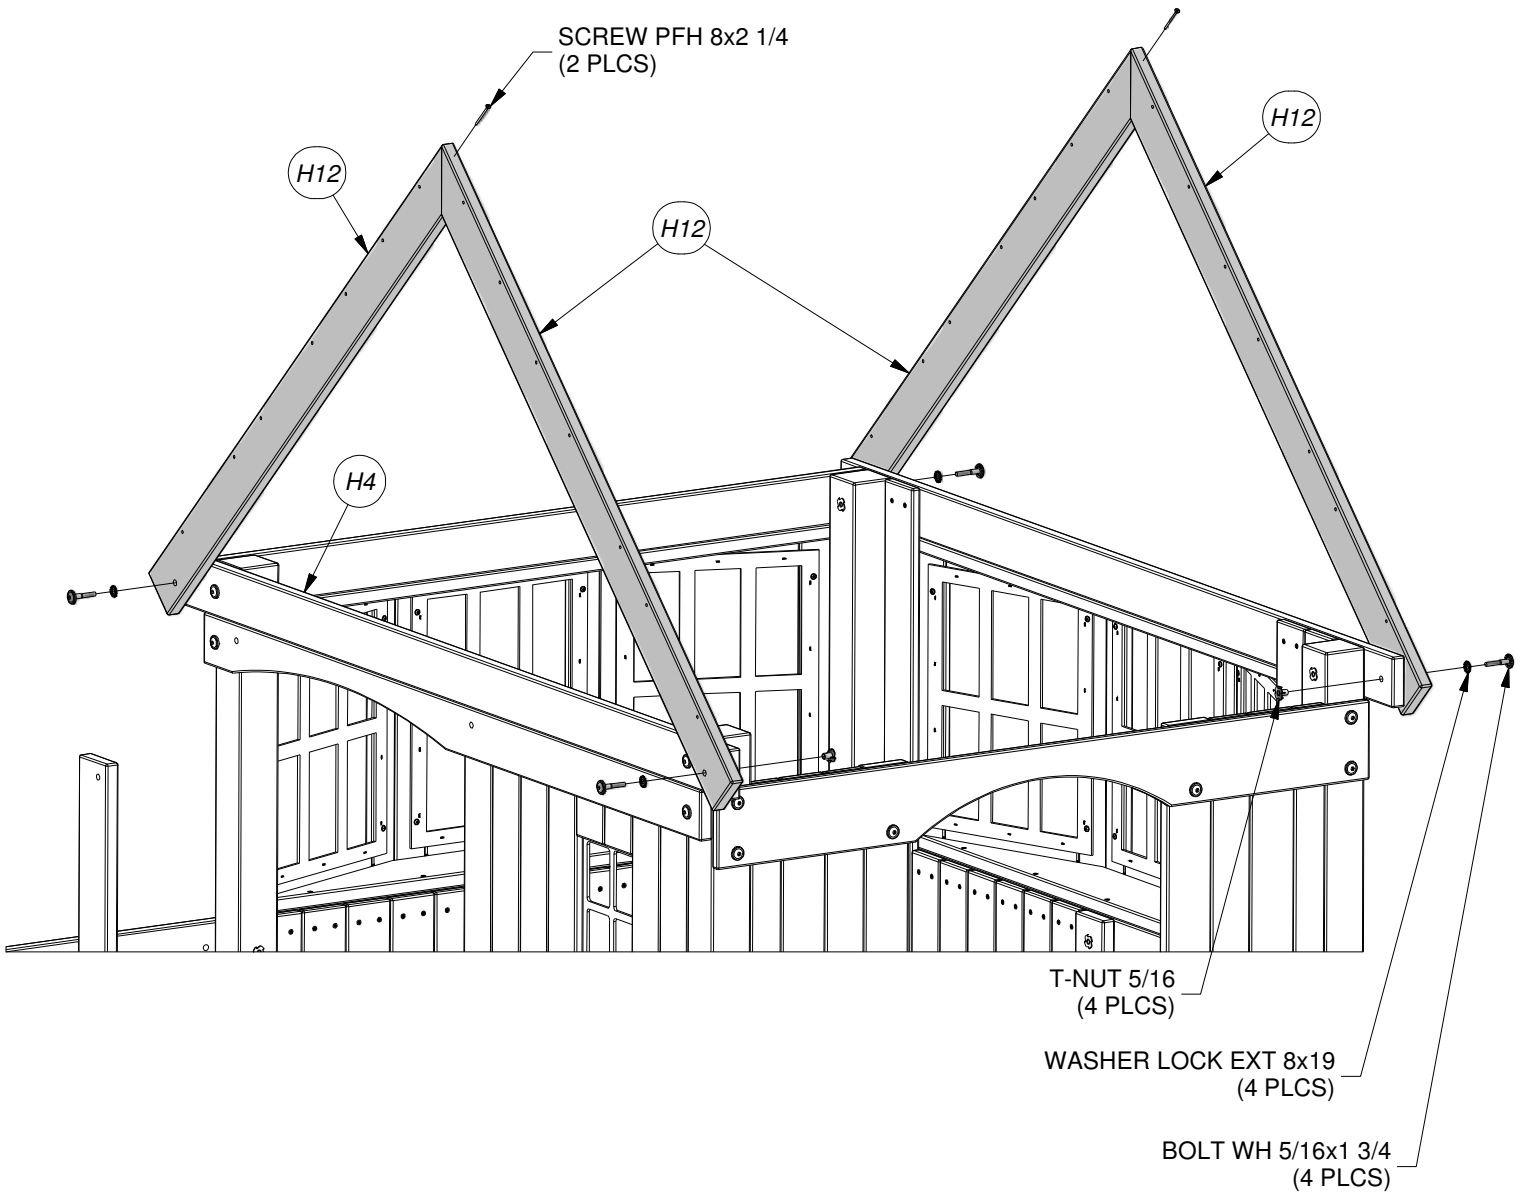





(2) **M5 - GABLE BOARD - W4L04641**
5/8"x3 3/8"x59 1/2" (16x86x1510)



(2) **M7 - GABLE BOARD - W4L04642**
5/8"x3 3/8"x52 5/8" (16x86x1338)

FORT ASSEMBLY
STEP 43

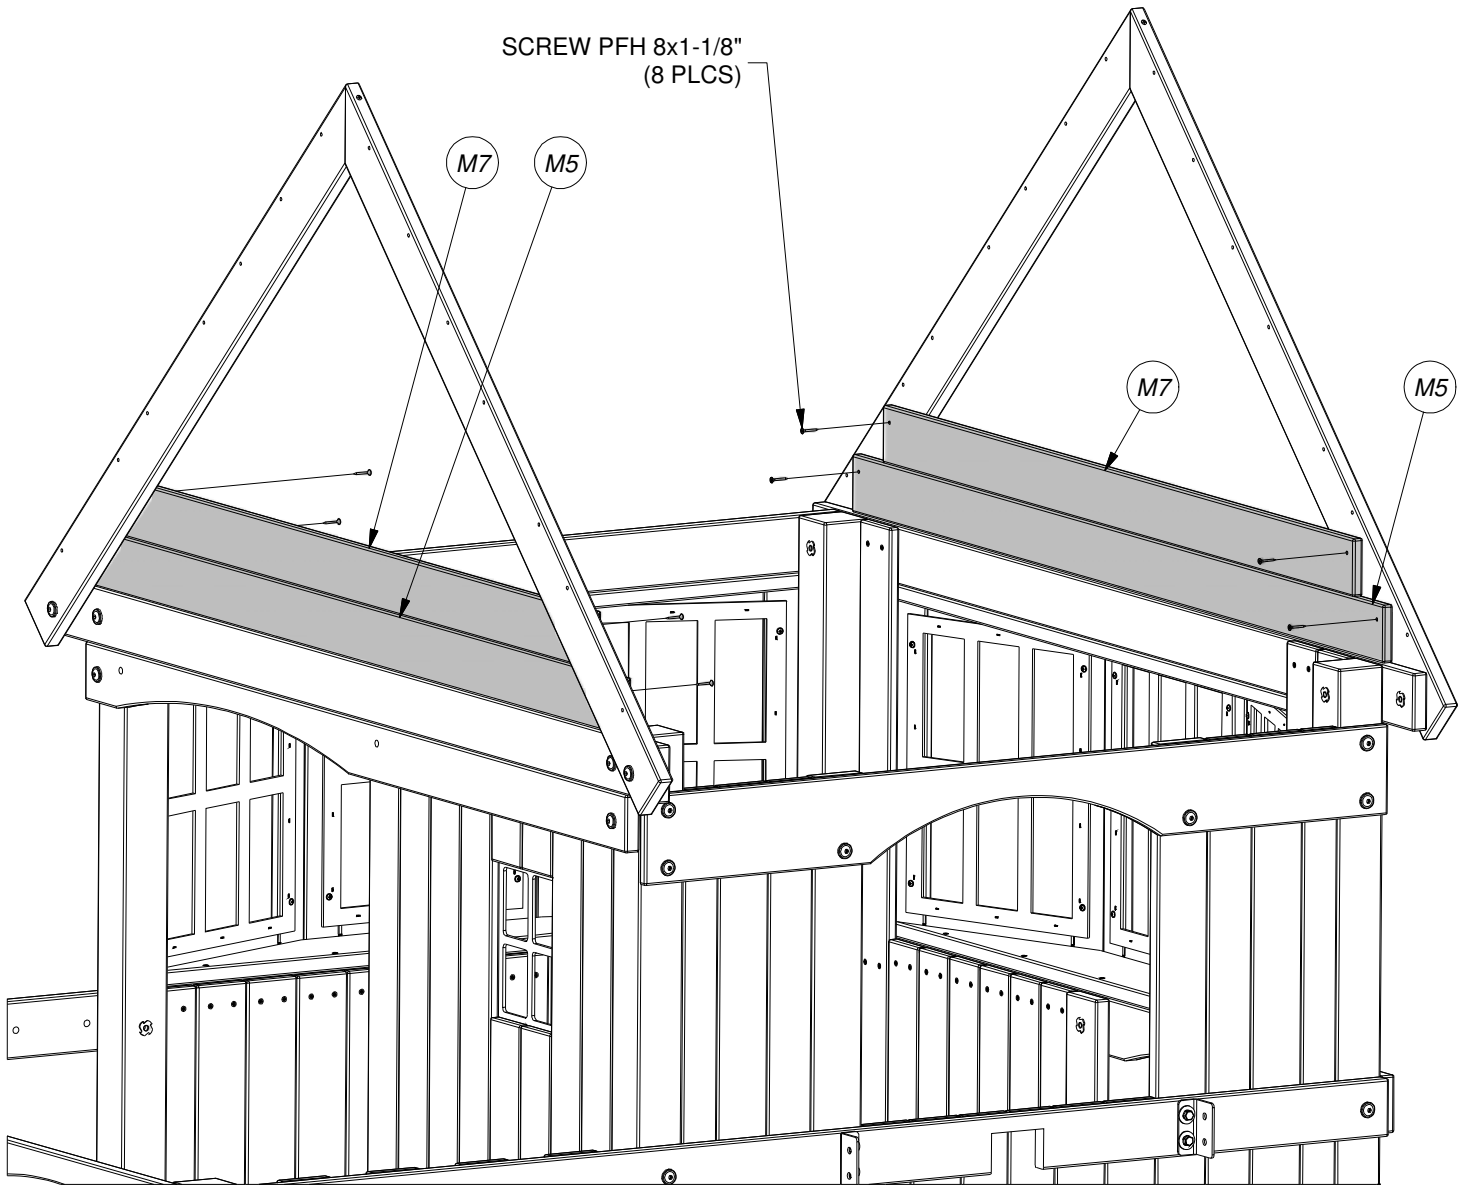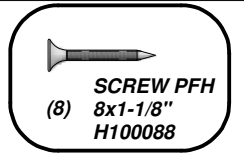

(2) **N6 - WINDOW TRIM - W4L04646**
 5/8"x2 3/8"x12 1/4" (16x60x310)




(1) **N10 - GABLE BOARD - W4L04645**
 5/8"x2 3/8"x27 5/8" (16x60x702)

(2) **M31 - GABLE WINDOW BOARD - W4L04644**
 5/8"x3 3/8"x12 3/4" (16x86x324)

(2) **M29 - GABLE WINDOW BOARD - W4L04643**
 5/8"x3 3/8"x16 1/8" (16x86x410)

(2) **M28 - GABLE WINDOW BOARD - W4L04647**
 5/8"x3 3/8"x19 1/2" (16x86x496)

FORT ASSEMBLY
STEP 44

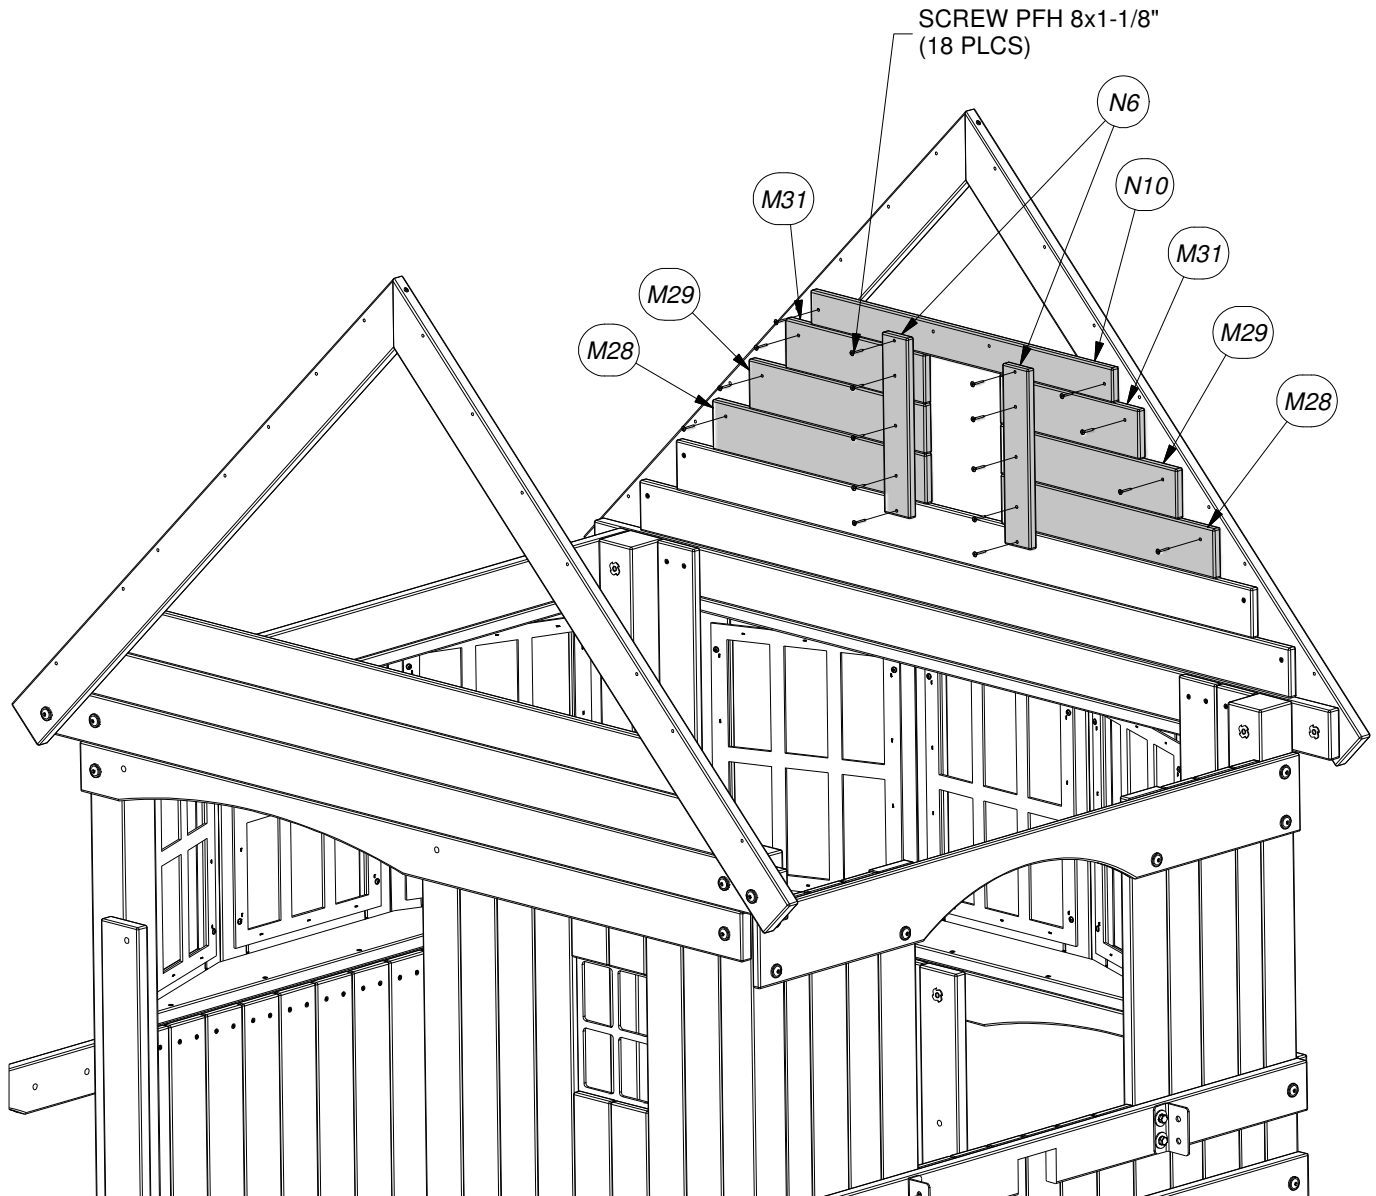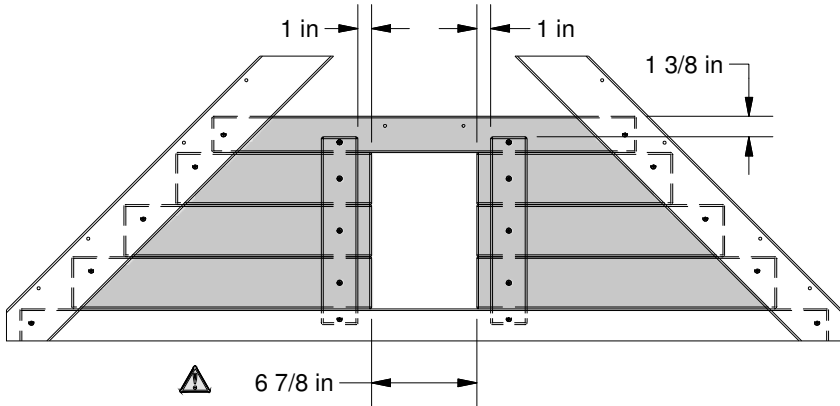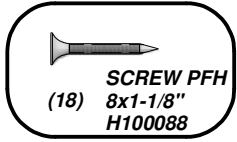



(1) **N10 - GABLE BOARD - W4L04645**
5/8"x2 3/8"x27 5/8" (16x60x702)


(1) **M18 - GABLE BOARD - W4L04652**
5/8"x3 3/8"x32 3/8" (16x86x822)

(1) **M14 - GABLE BOARD - W4L04651**
5/8"x3 3/8"x39 1/8" (16x86x994)


(1) **M12 - GABLE BOARD - W4L04650**
5/8"x3 3/8"x45 7/8" (16x86x1166)

 FORT ASSEMBLY
STEP 45

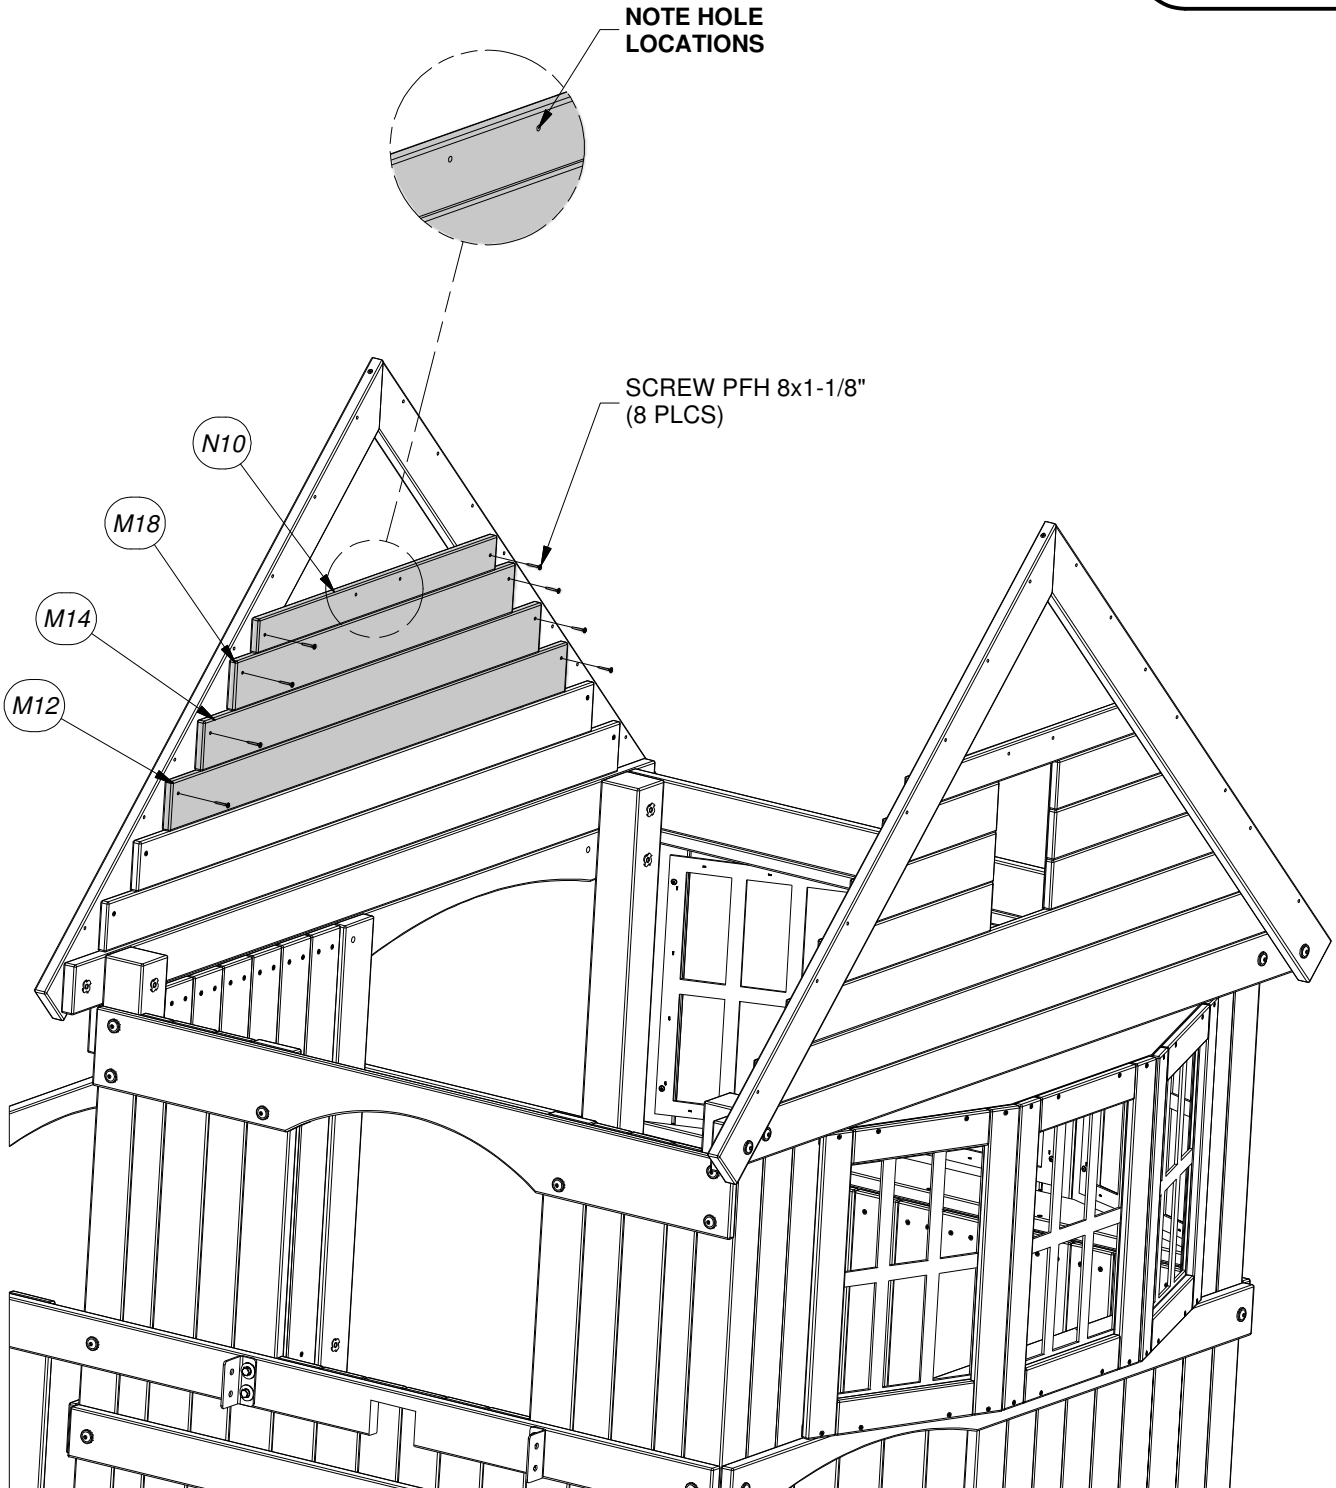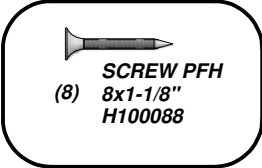




 (2) **N7 - GABLE TRIM - W4L04648**
5/8"x2 3/8"x11 1/2" (16x60x292)






 
(4) **N9 - GABLE TRIM - W4L04649**
5/8"x2 3/8"x6 1/2" (16x60x165)



(2) **K6 - TRIANGLE SUNBURST - W4L04827**
5/8"x5 1/4"x10 3/8" (16x134x265)



FORT ASSEMBLY
STEP 46

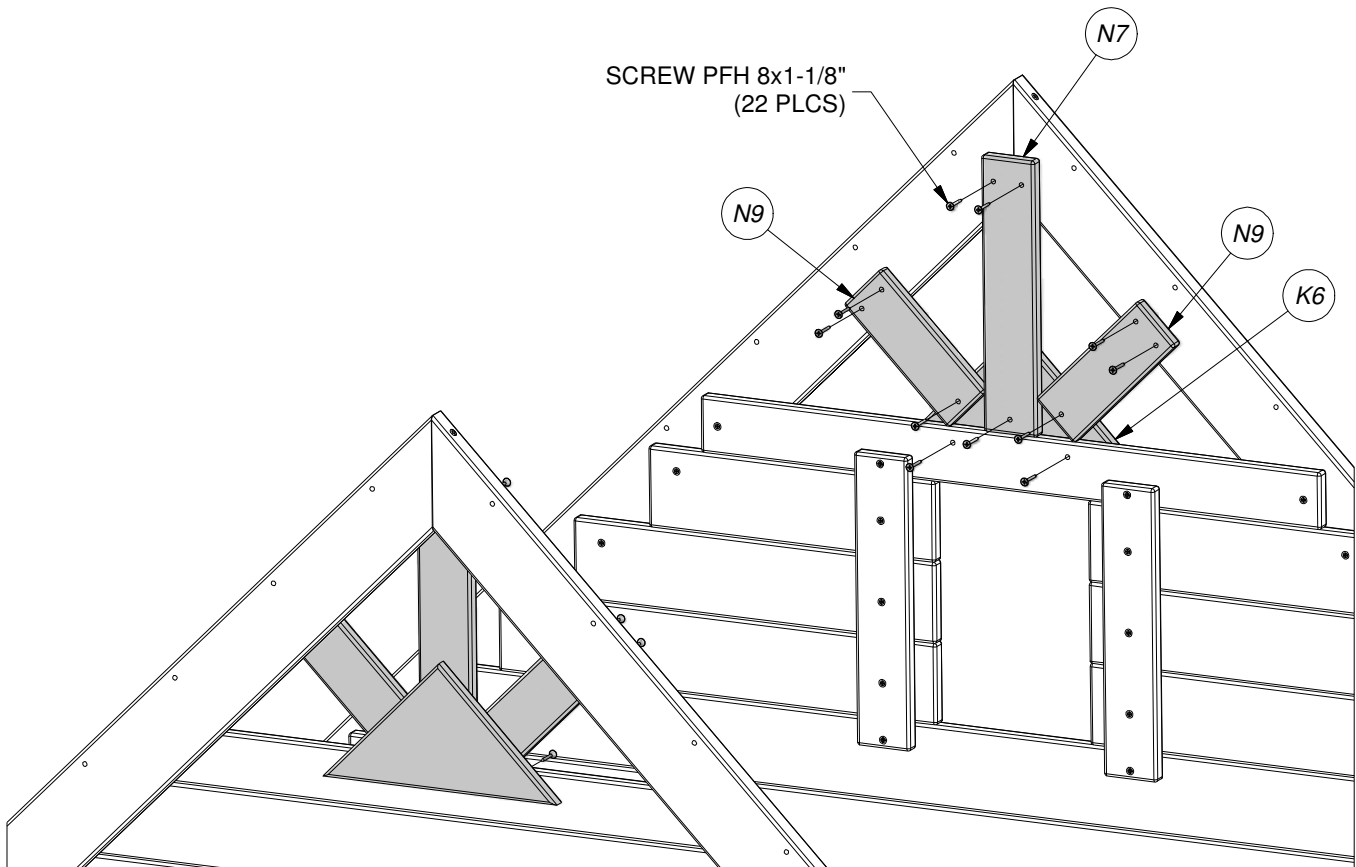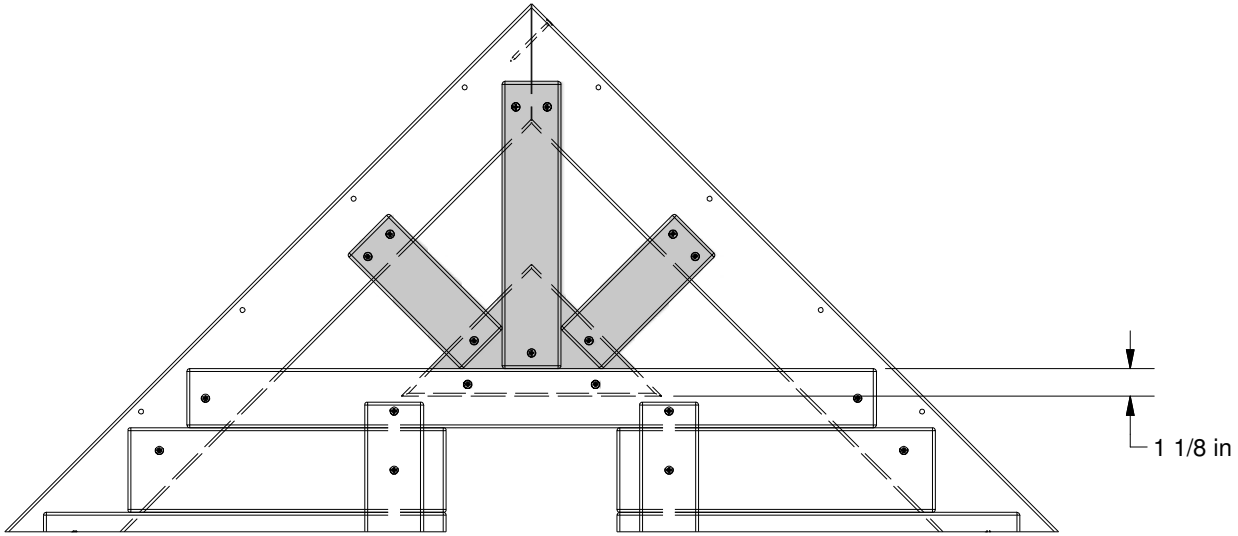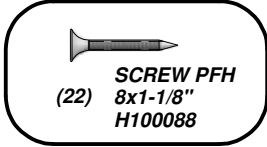

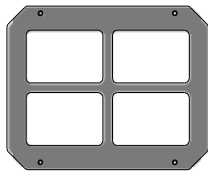

(1) GK - WINDOW 216x267 GREEN - A100146

**FORT ASSEMBLY
STEP 47**

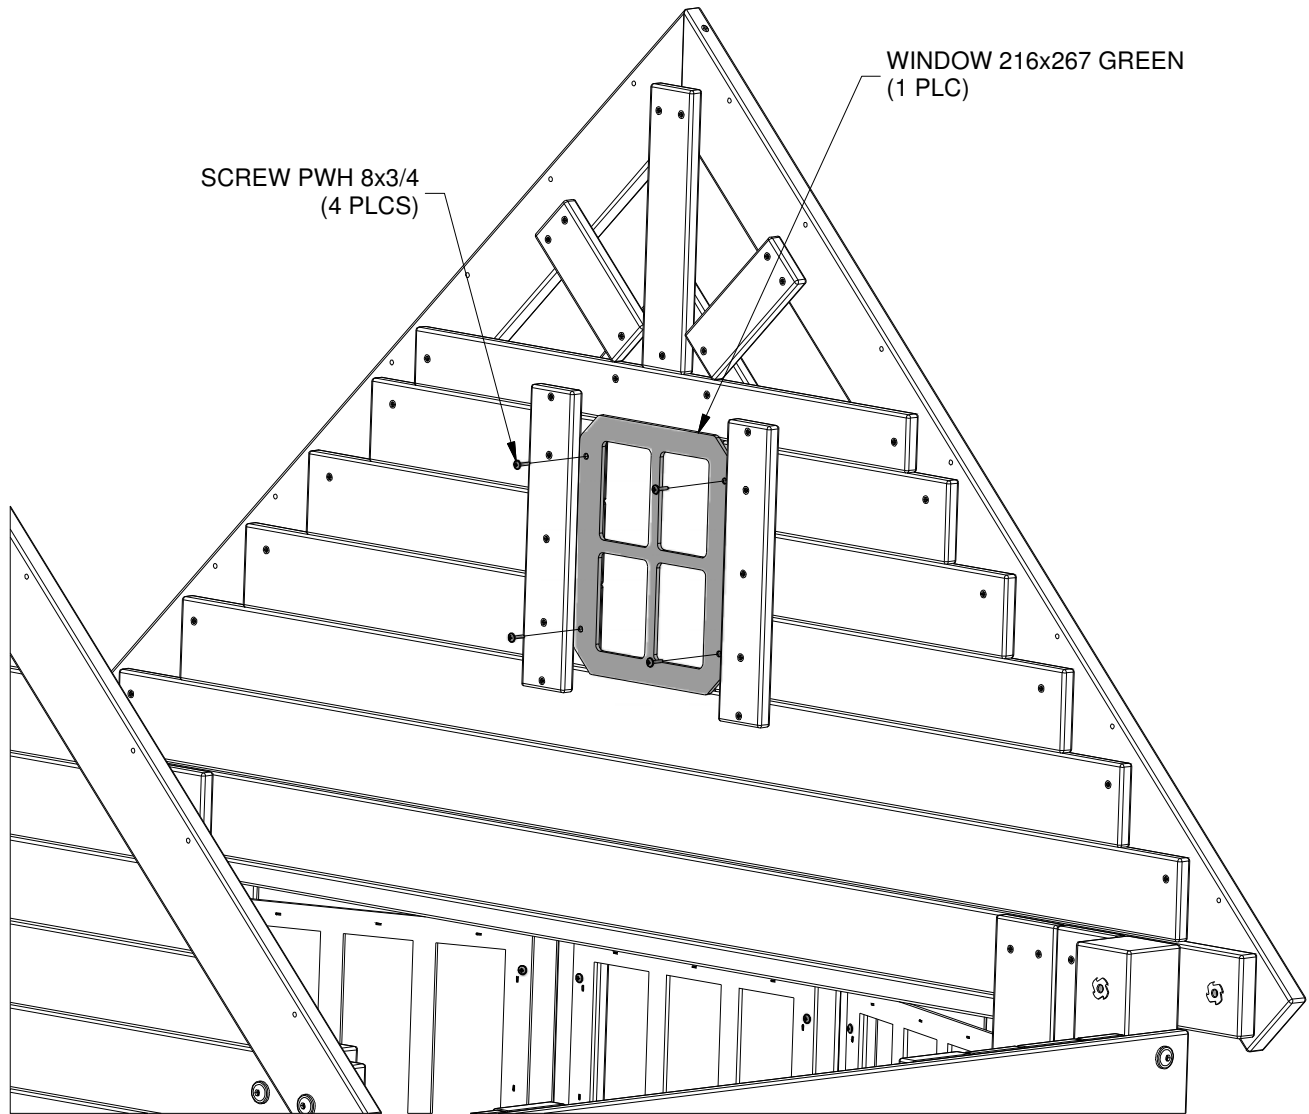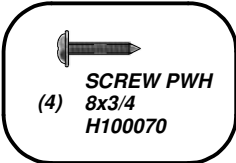






(1) M11 - SOFFIT CAP - W4L04653
5/8"x3 3/8"x50 1/4" (16x86x1277)




(1) N2 - SOFFIT CAP - W4L04654
5/8"x2 3/8"x50 1/4" (16x60x1277)

**FORT ASSEMBLY
STEP 48**

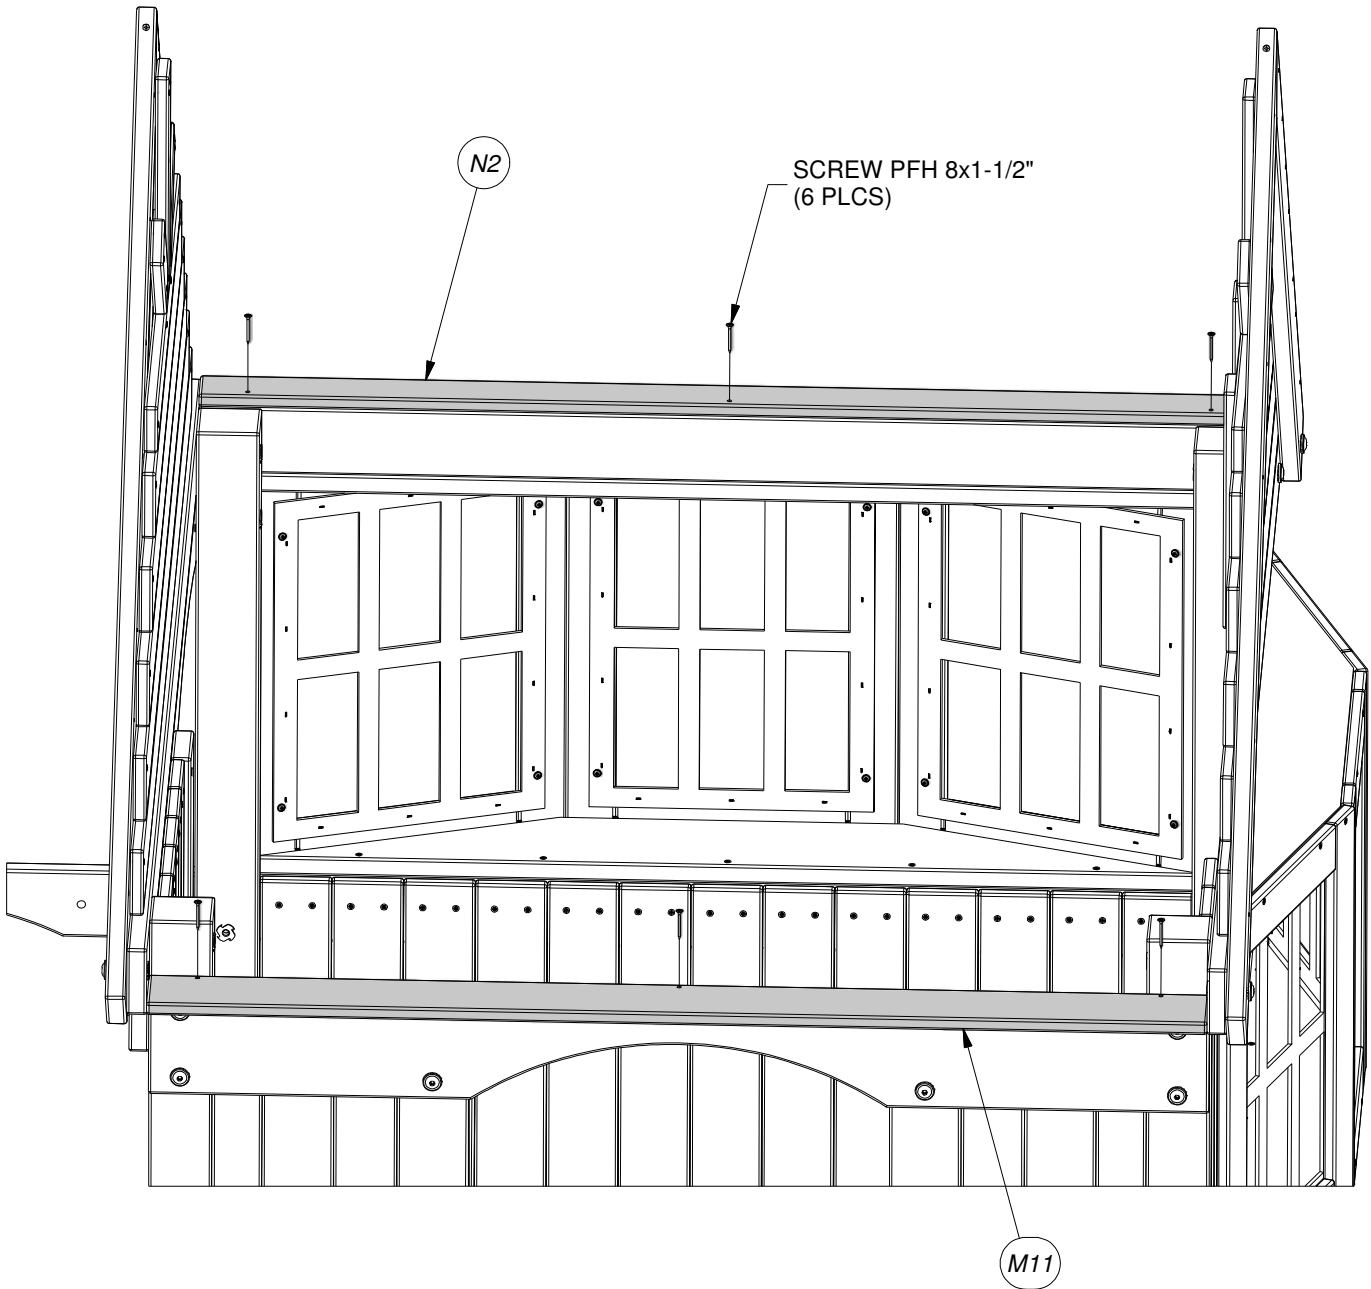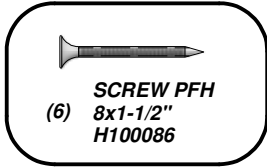

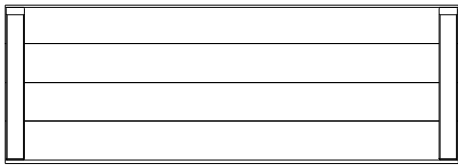


(1) **RP3 - PEAK ROOF PANEL - W2A02626**
1 5/8"x20 5/8"x59" (42x524x1499)

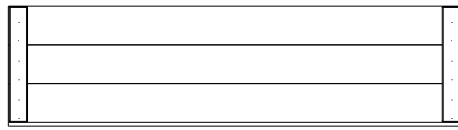


(2) **RP6 - ROOF PANEL - W2A02627**
1 5/8"x15 5/8"x59" (42x396x1499)


FORT ASSEMBLY
STEP 49

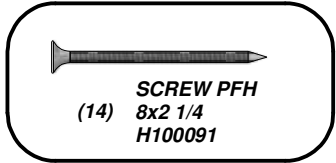




NOTE:
START WITH TOP PANEL FIRST.
FLUSH EDGES.

SCREW PFH 8x2 1/4
(14 PLCS)

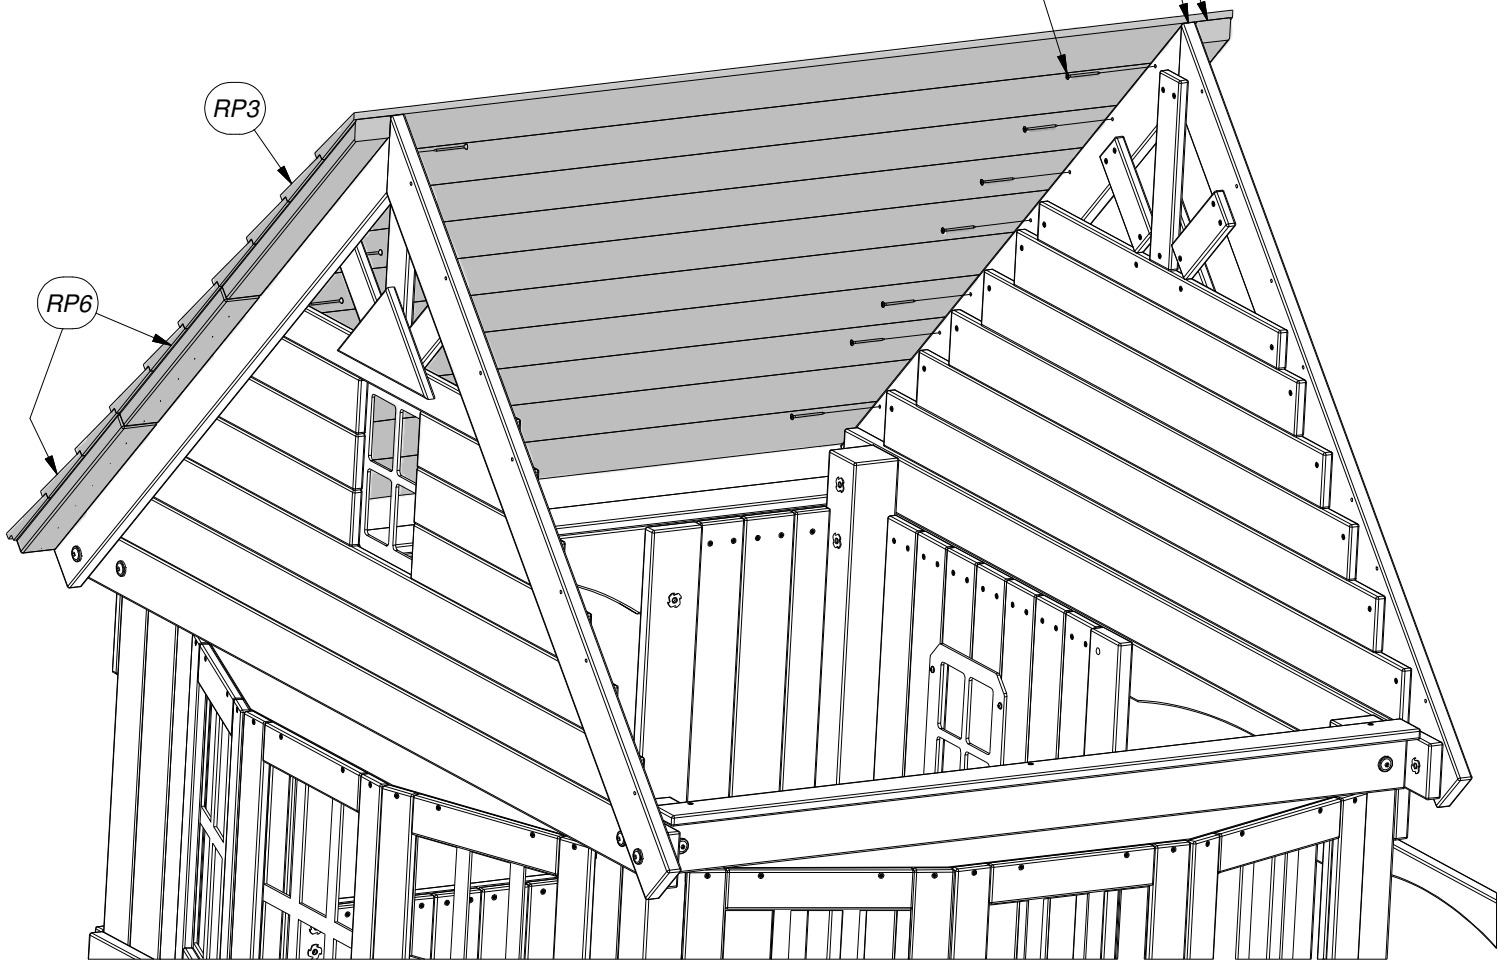

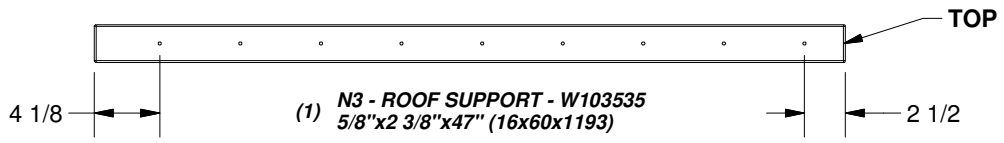



FORT ASSEMBLY
STEP 50

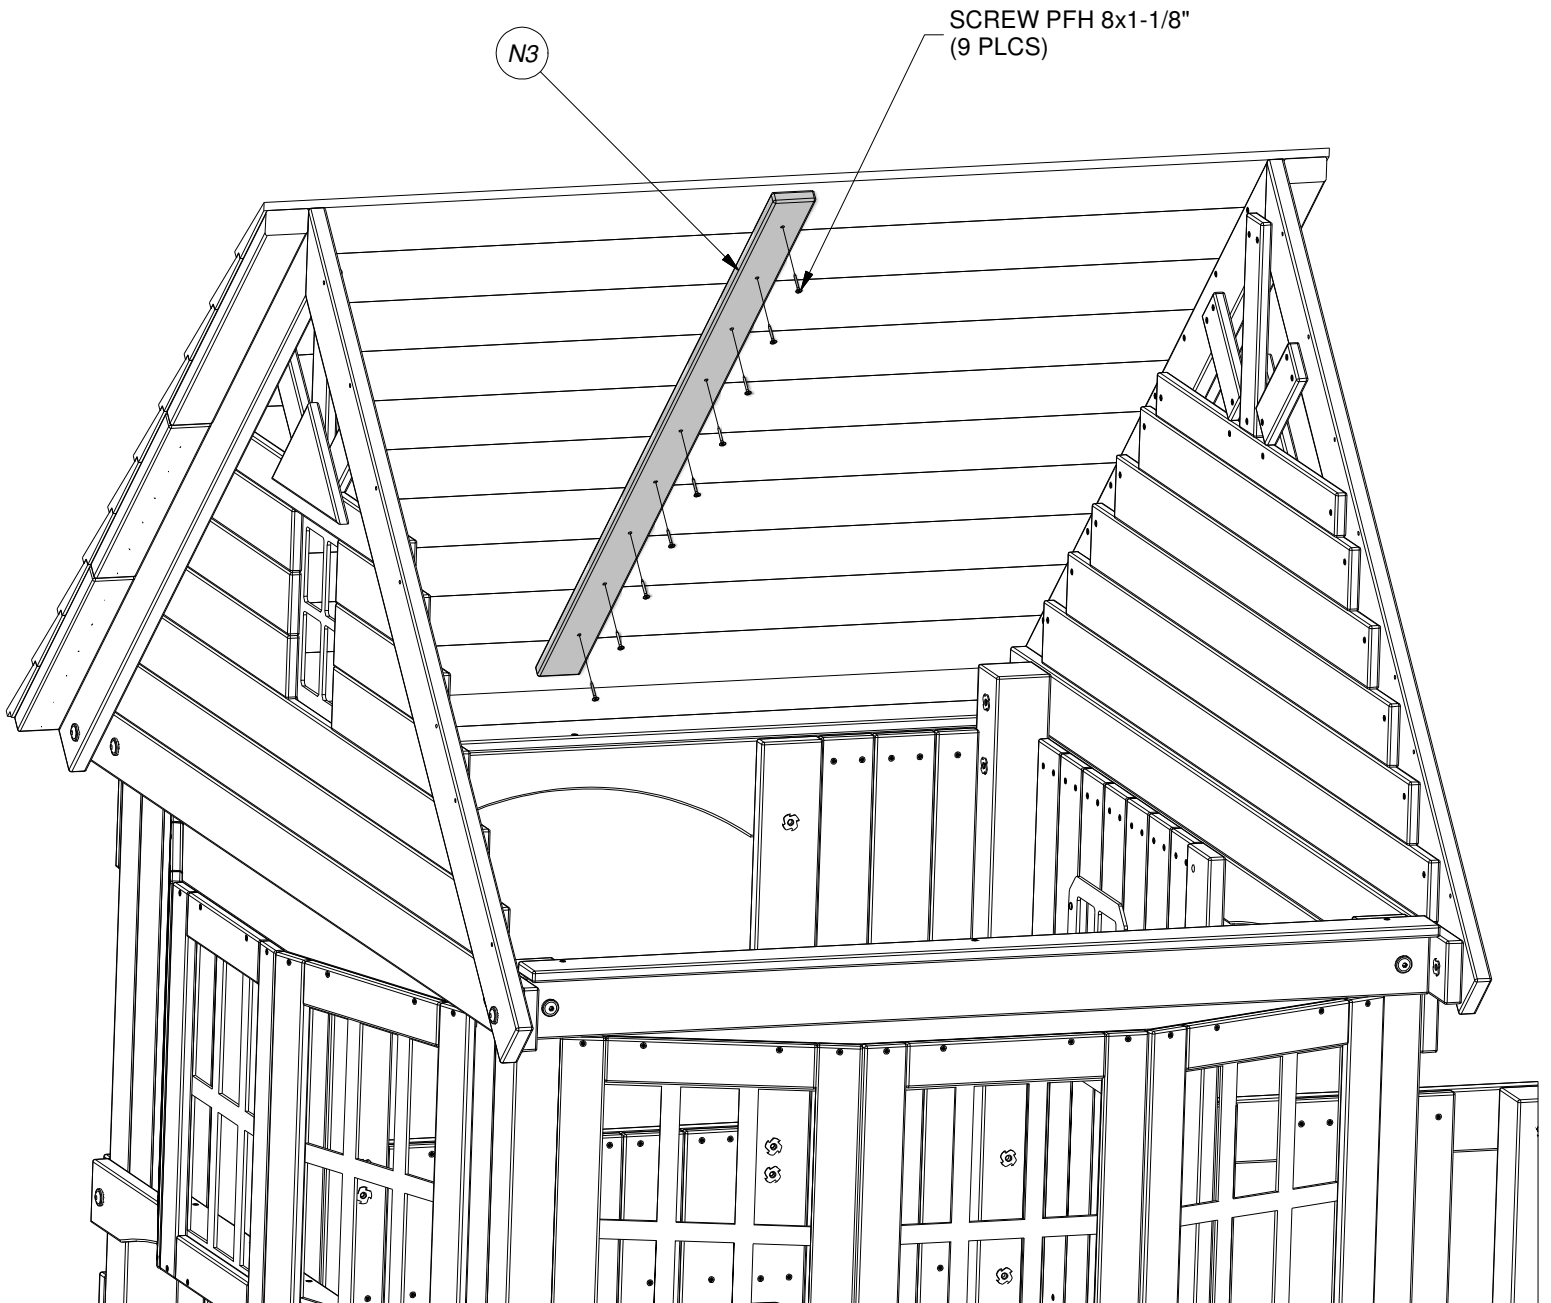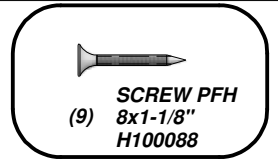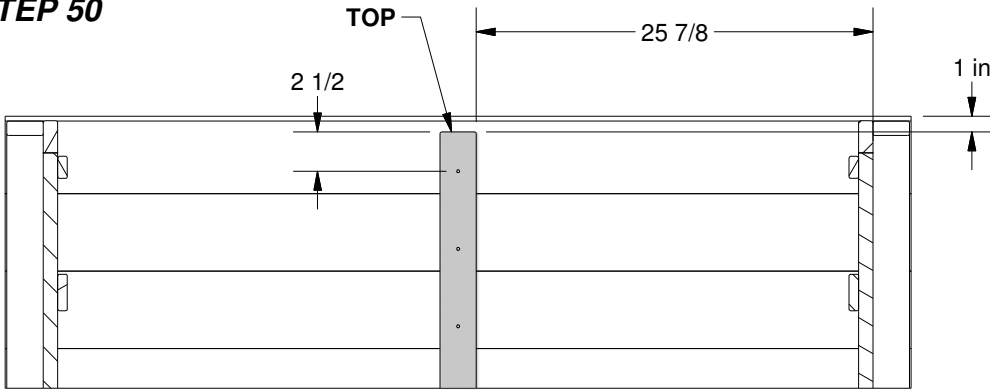

FORT ASSEMBLY
STEP 51



**REPEAT STEPS 49 & 50 TO ATTACH LEFT SIDE
ROOF PANELS.**

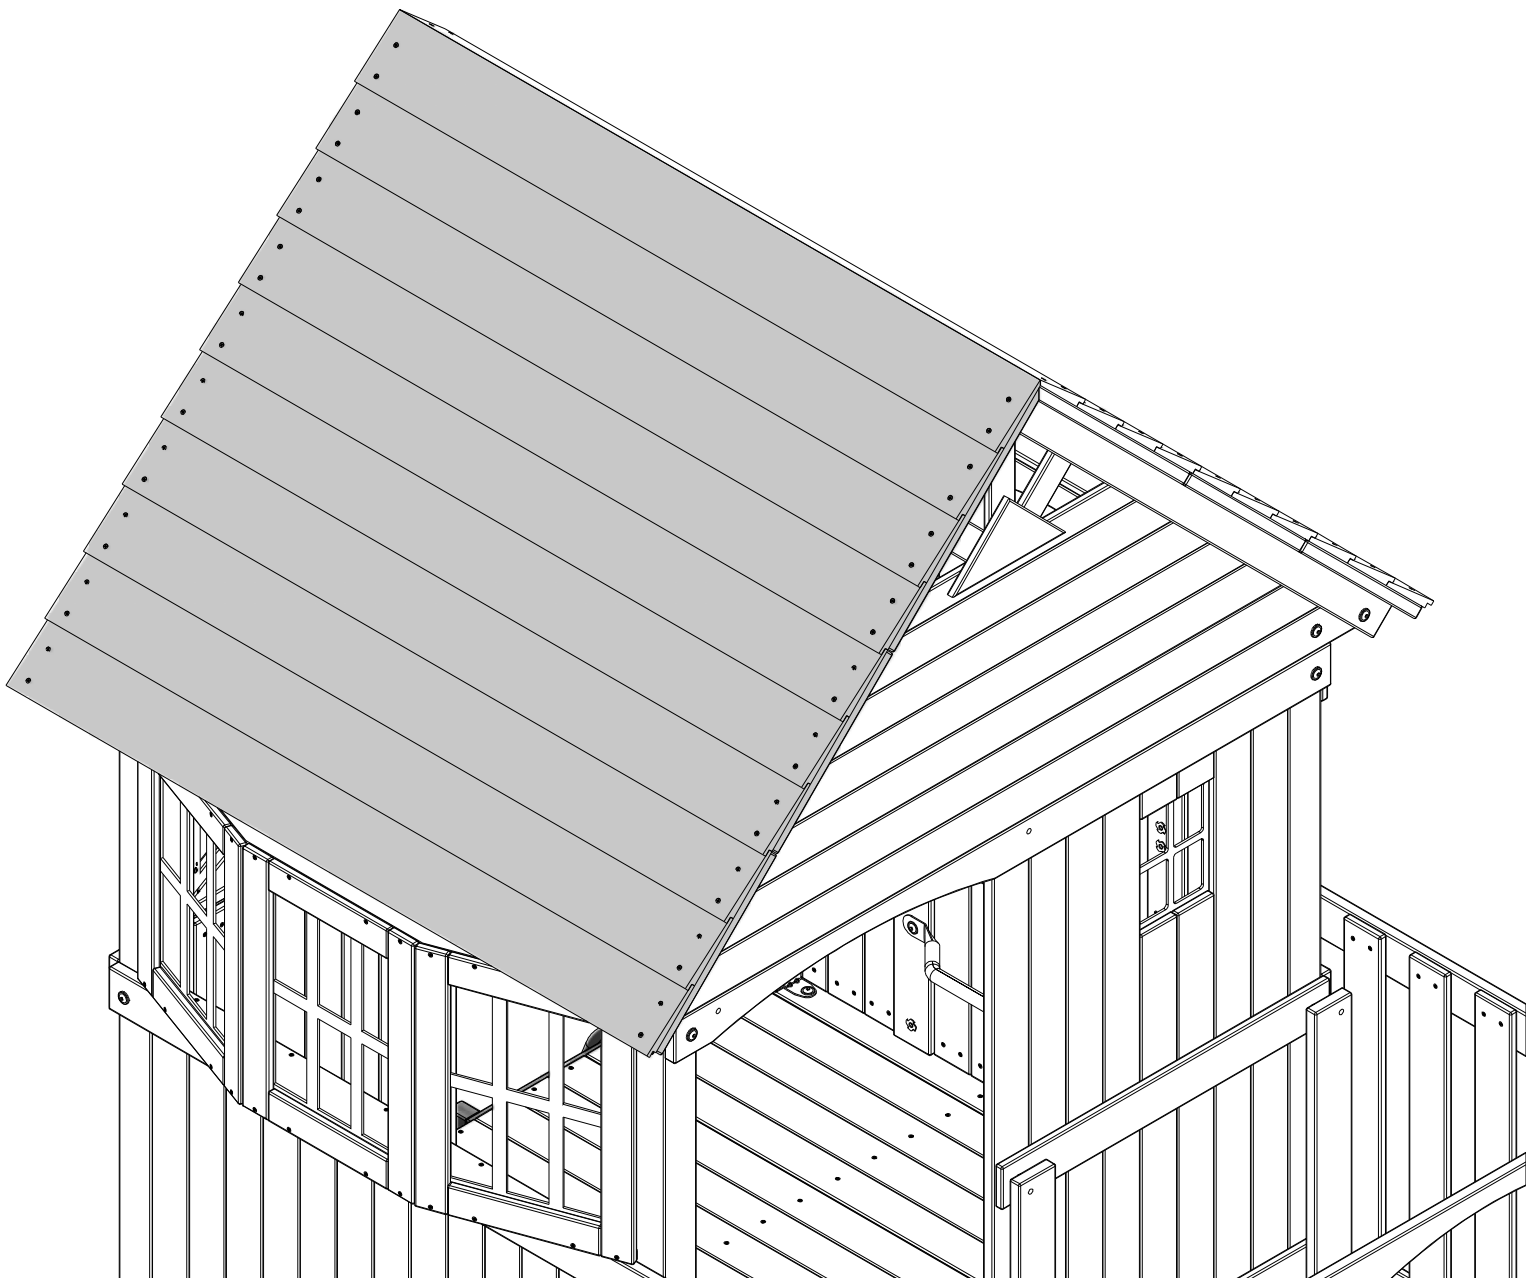

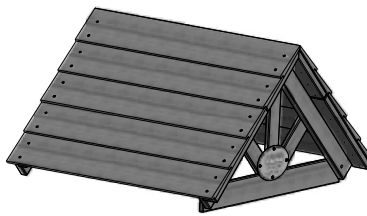

(1) PORCH ROOF ASSEMBLY

**FORT ASSEMBLY
STEP 52**

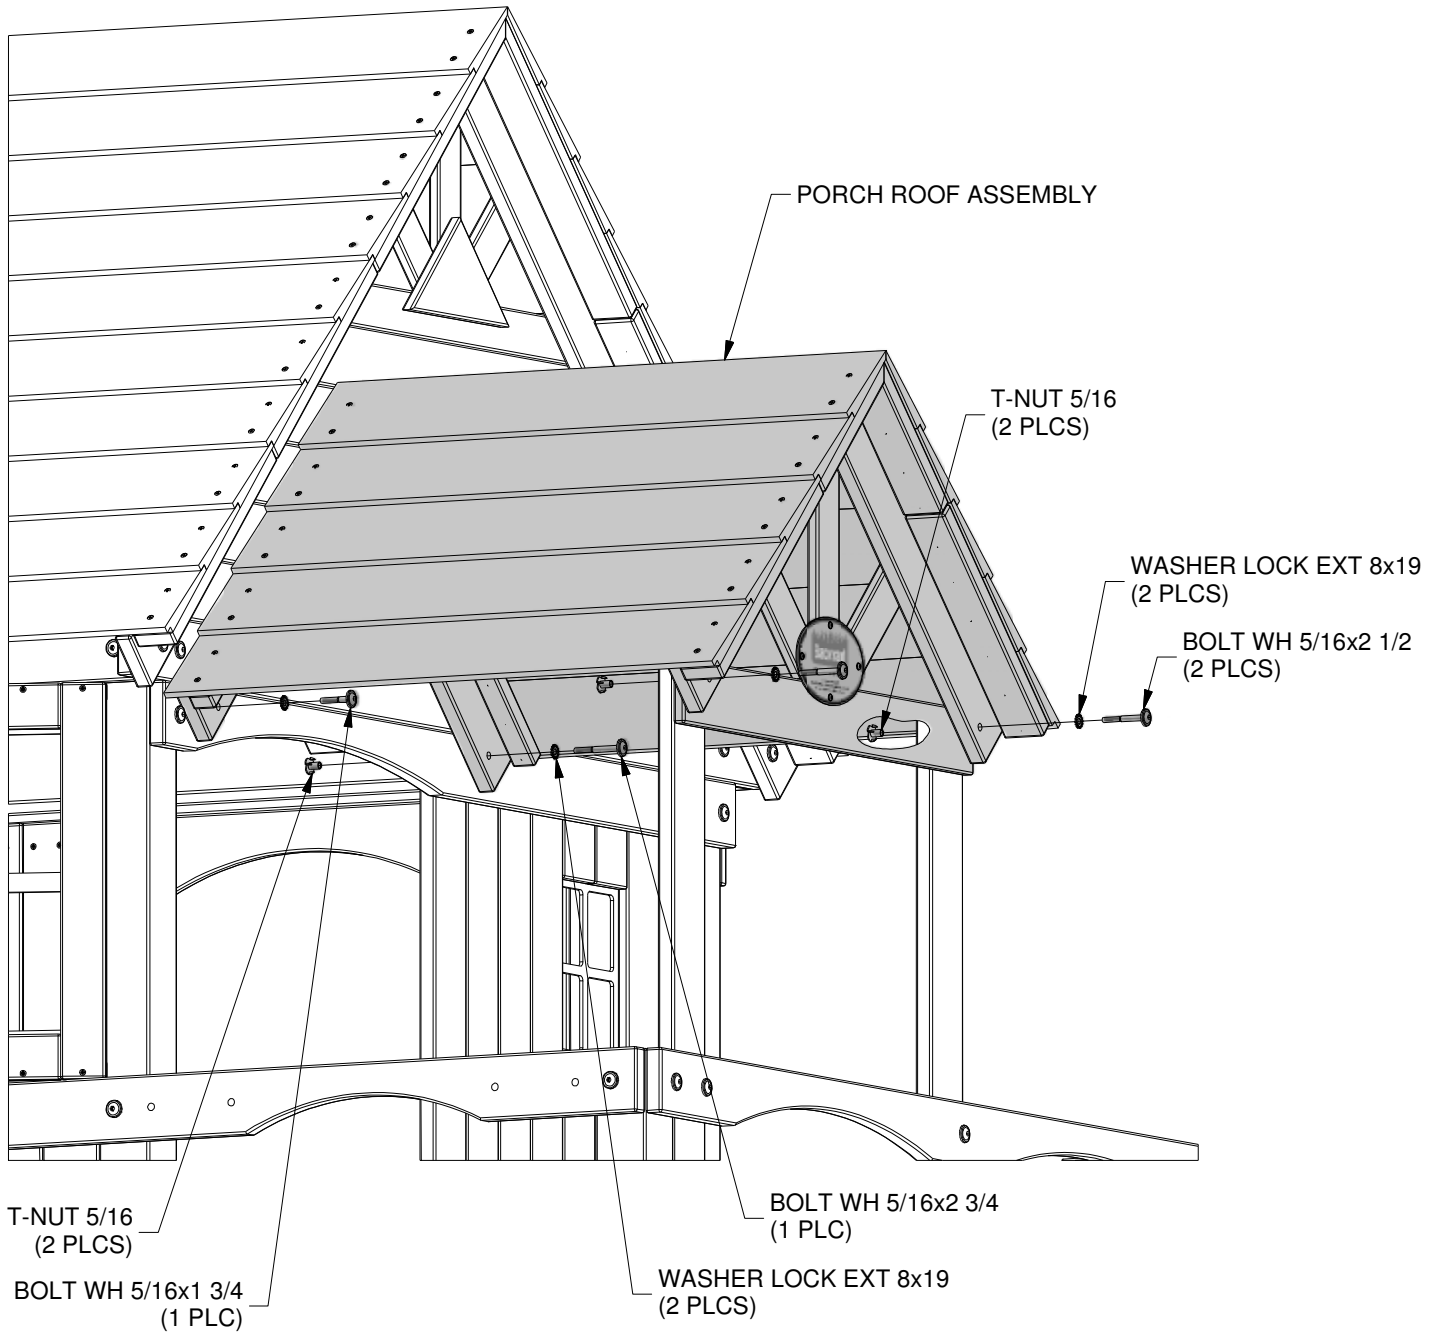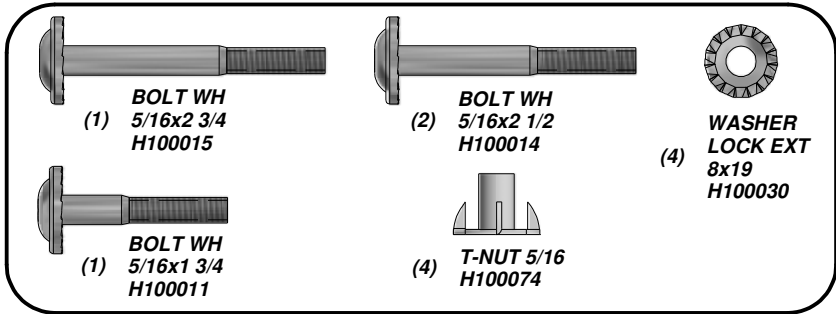




L BRACKET
 (1) 51x32x82x3.175
 A100396





(1) SWING BEAM ASSEMBLY

FORT ASSEMBLY
STEP 53

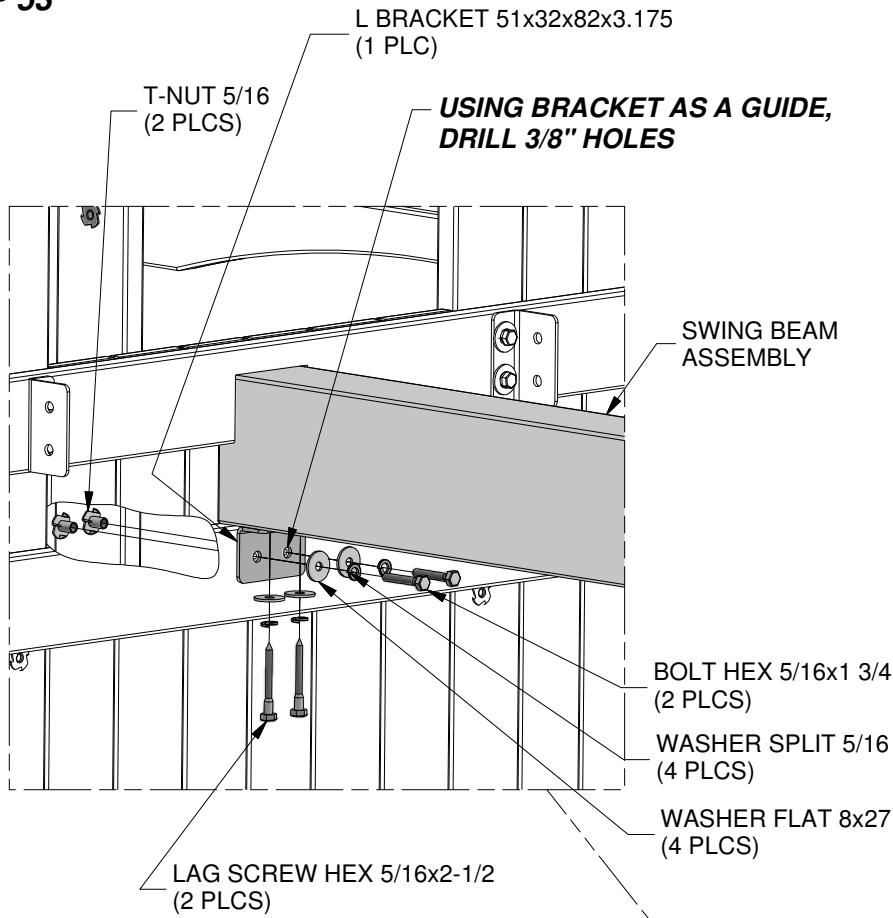



	LAG SCREW HEX 5/16x2-1/2 H100068	(2)		WASHER SPLIT 5/16 H100095	(4)
	BOLT HEX 5/16x1 3/4 H100043	(2)		WASHER FLAT 8x27 H100105	(4)
	T-NUT 5/16 H100074	(2)			

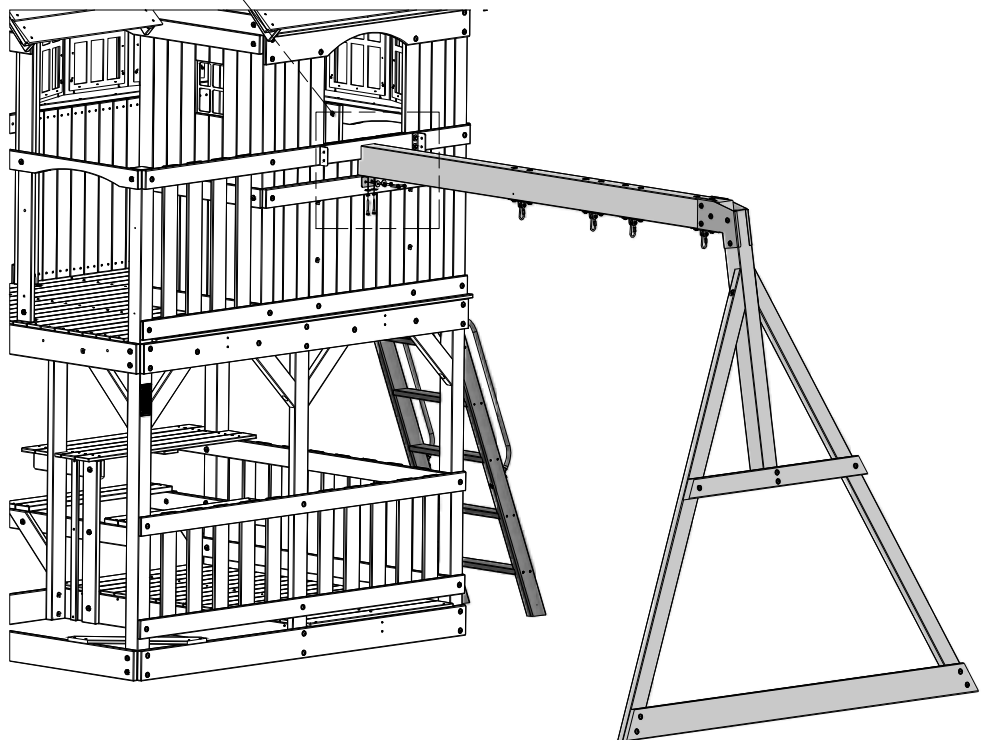


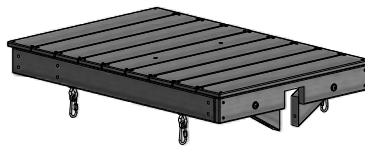

(1) CROW'S NEST DECK ASSEMBLY


**FORT ASSEMBLY
STEP 54**

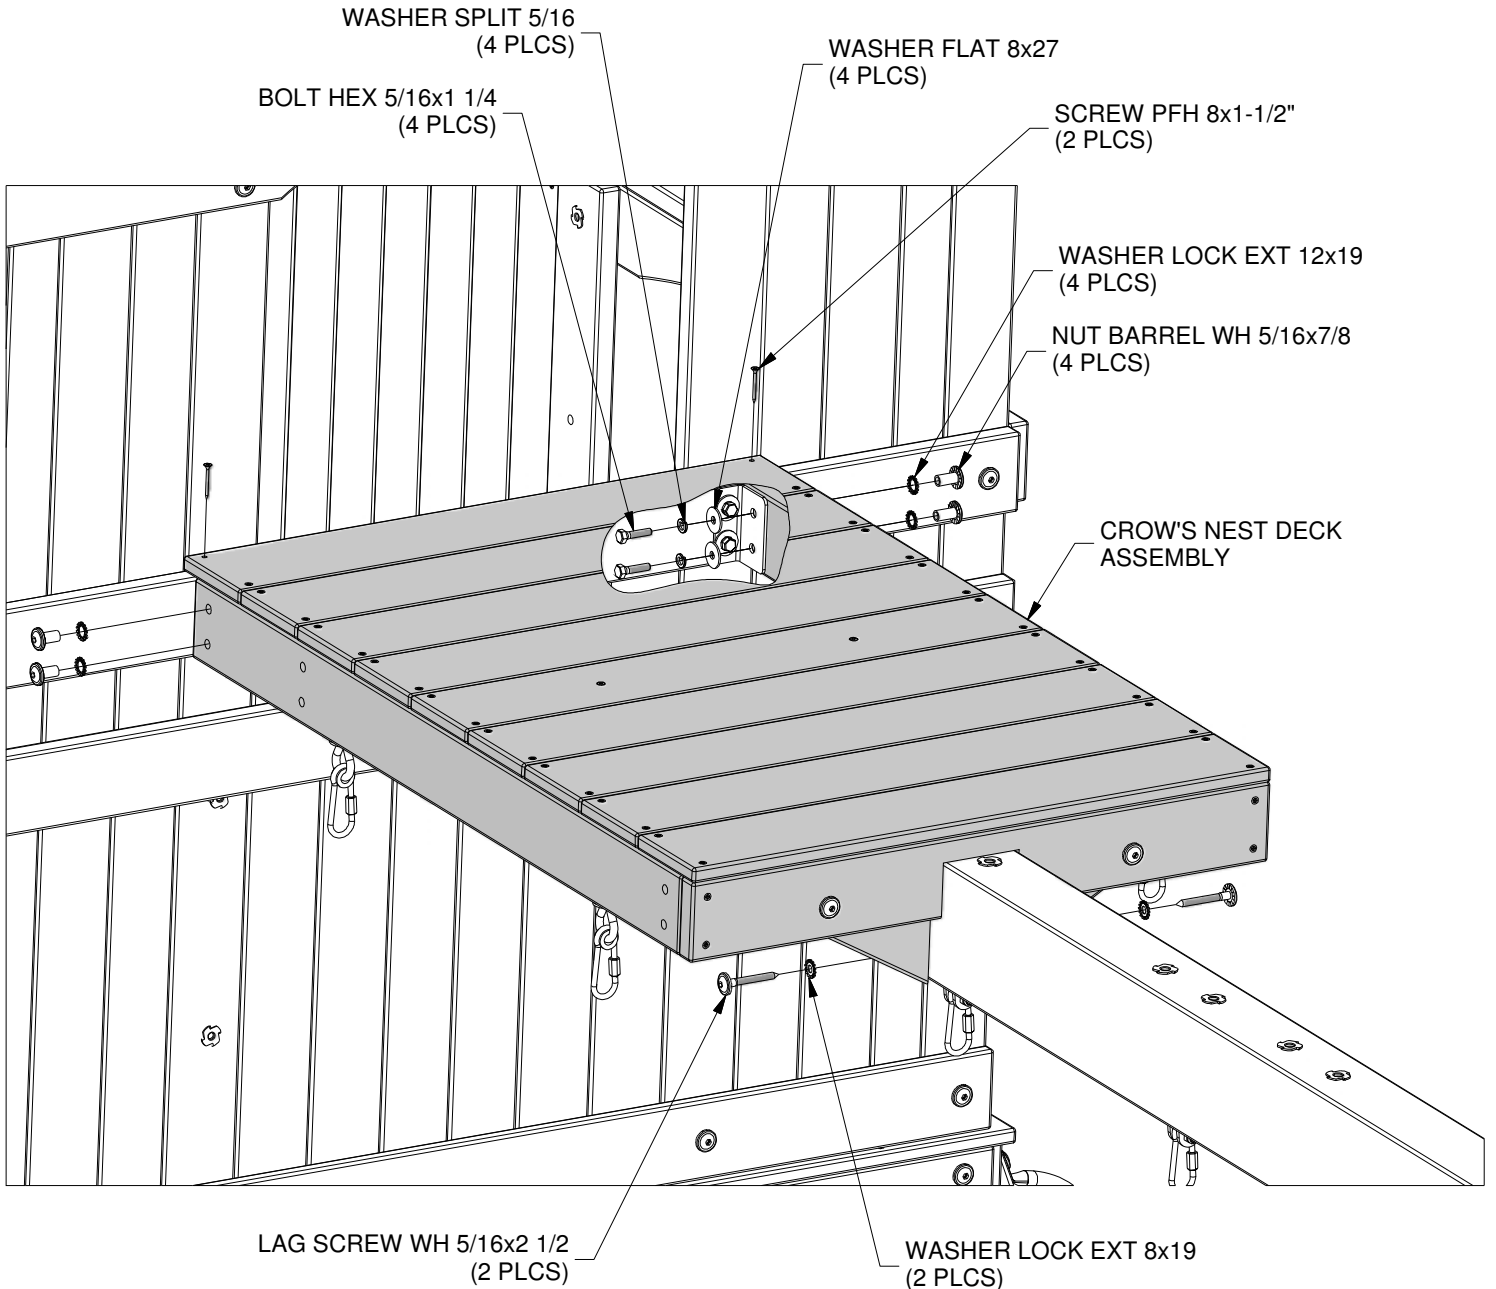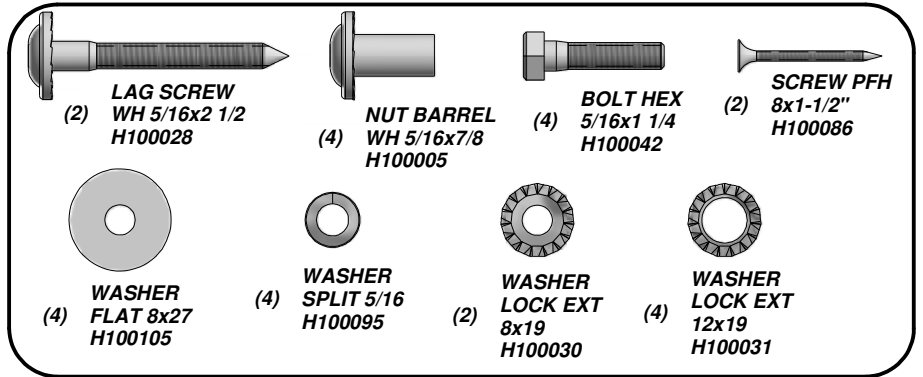

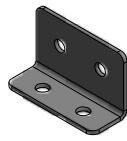


L BRACKET
 (2) 51x32x82x3.175
 A100396


FORT ASSEMBLY
STEP 55



 
**LAG SCREW
 HEX
 (8) 5/16x1-1/2
 H100066**



**WASHER
 SPLIT 5/16
 (8) H100095**



**WASHER
 FLAT 8x27
 (8) H100105**

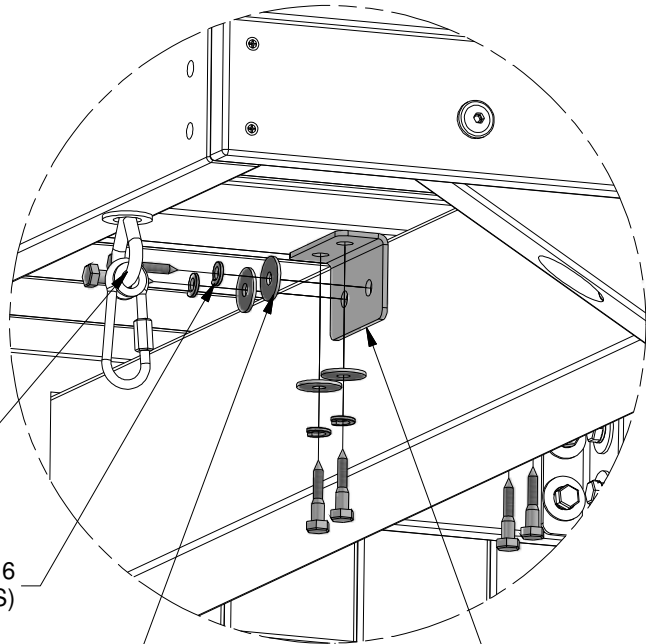


LAG SCREW HEX 5/16x1-1/2
 (8 PLCS)

WASHER SPLIT 5/16
 (8 PLCS)

WASHER FLAT 8x27
 (8 PLCS)

L BRACKET 51x32x82x3.175
 (2 PLCS)

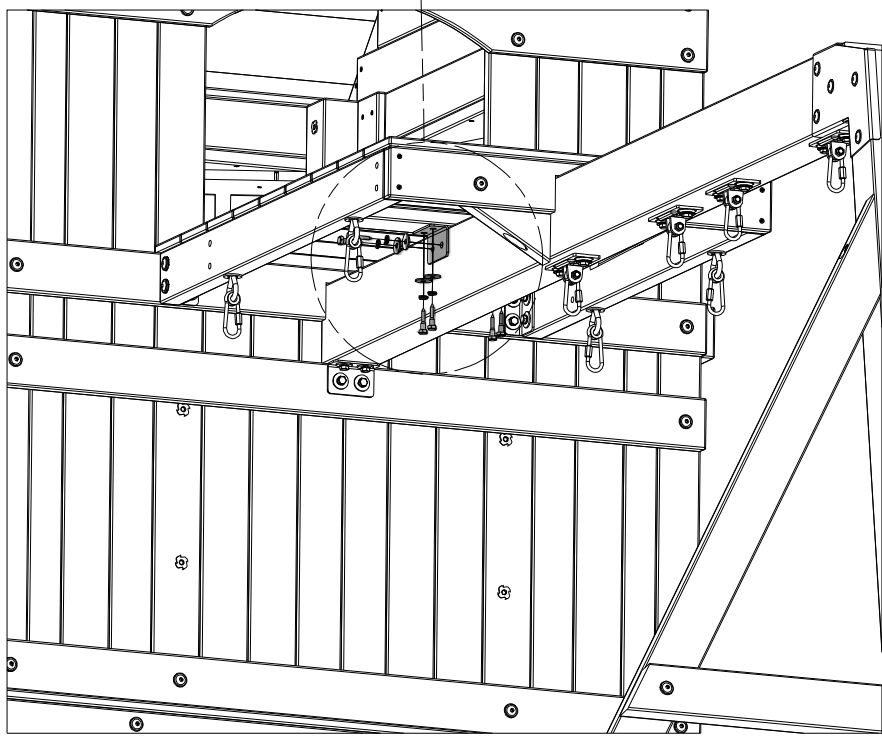





(2) **F3 - CROWS NEST WALL SUPPORT - W4L11779**
 1 3/8"x2 3/8"x37 1/2" (36x60x952)



(2) **F2 - CROWS NEST WALL SUPPORT - W4L11780**
 1 3/8"x2 3/8"x37 1/2" (36x60x952)

FORT ASSEMBLY
STEP 56

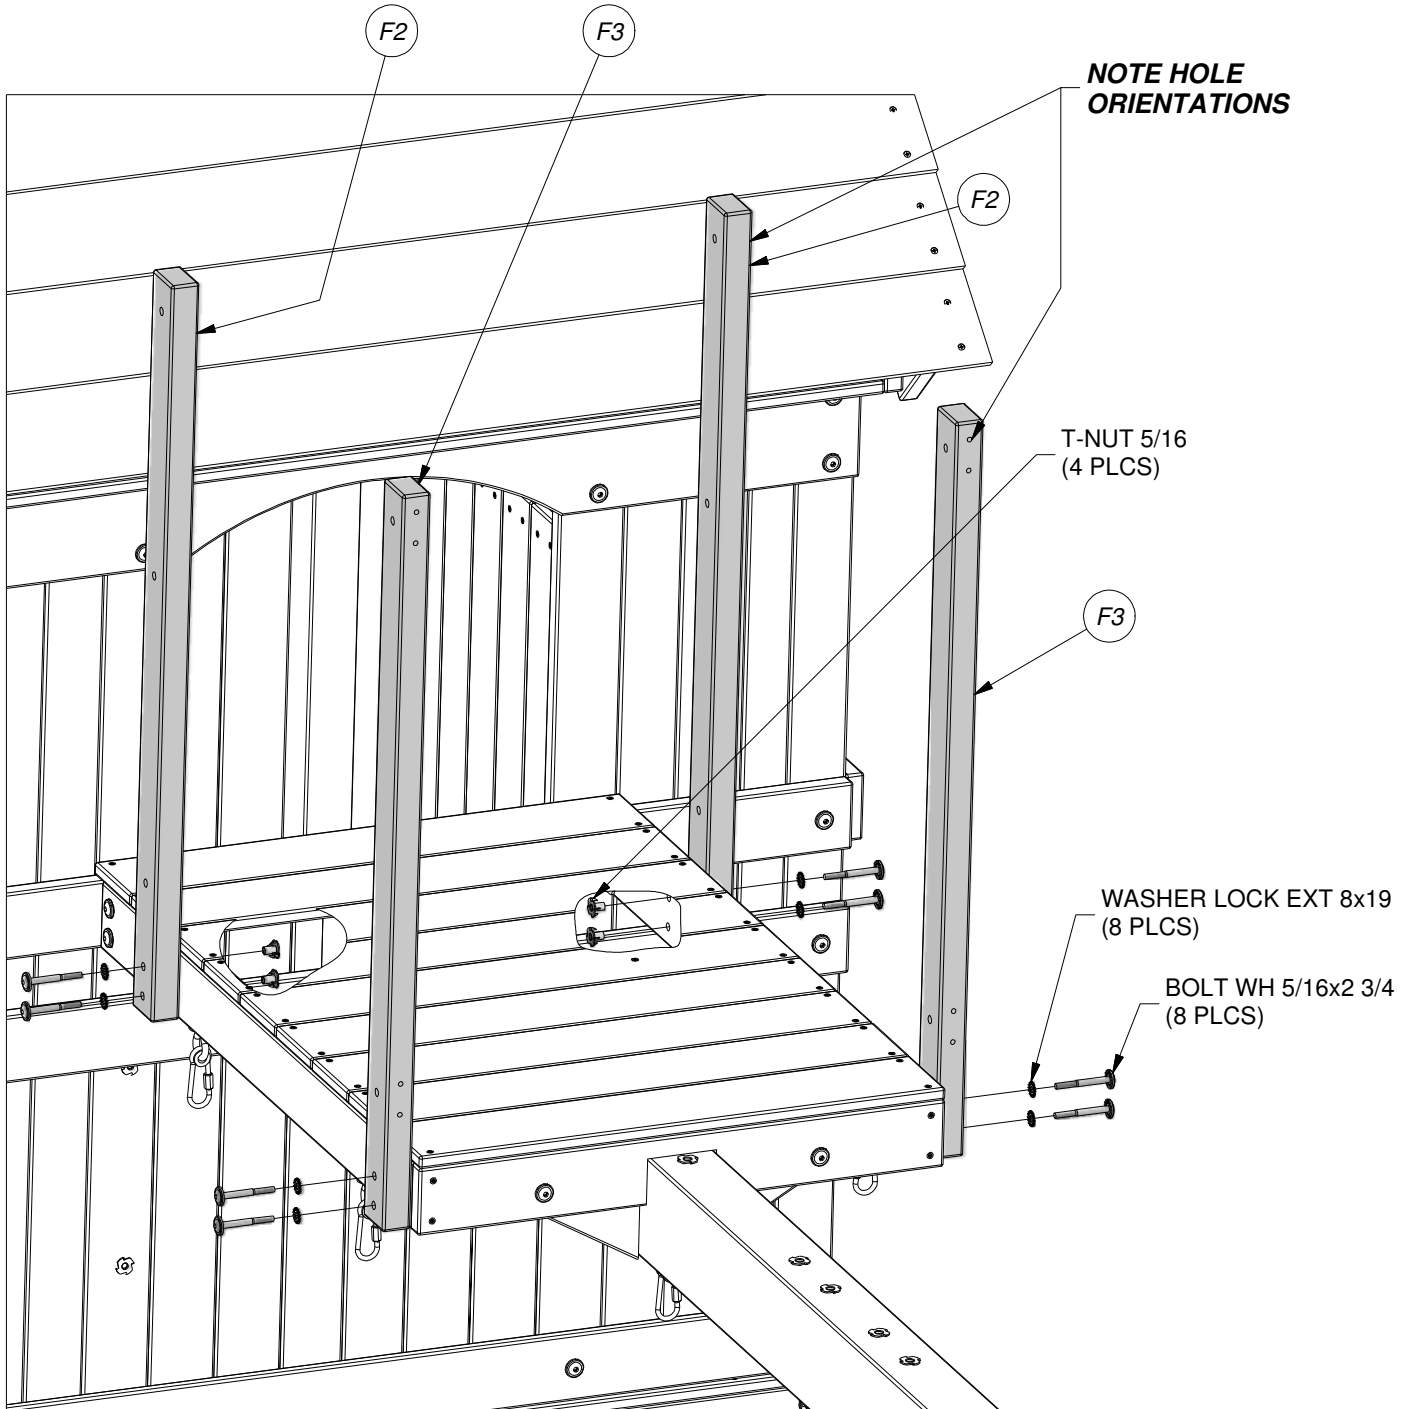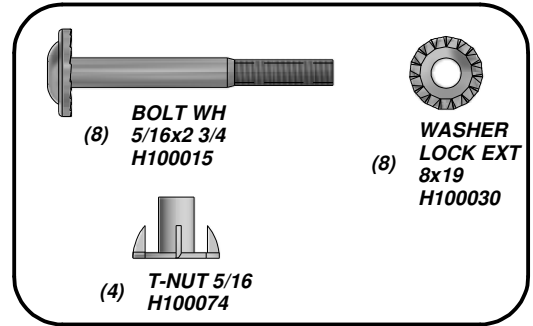






(2) **H31 - CROWS NEST WALL RAIL - W4L11781**
1"x3 3/8"x38 7/8" (24x86x988)



(1) **H30 - CROWS NEST WALL RAIL - W4L11782**
1"x3 3/8"x29 7/8" (24x86x758)



 
FORT ASSEMBLY
STEP 57

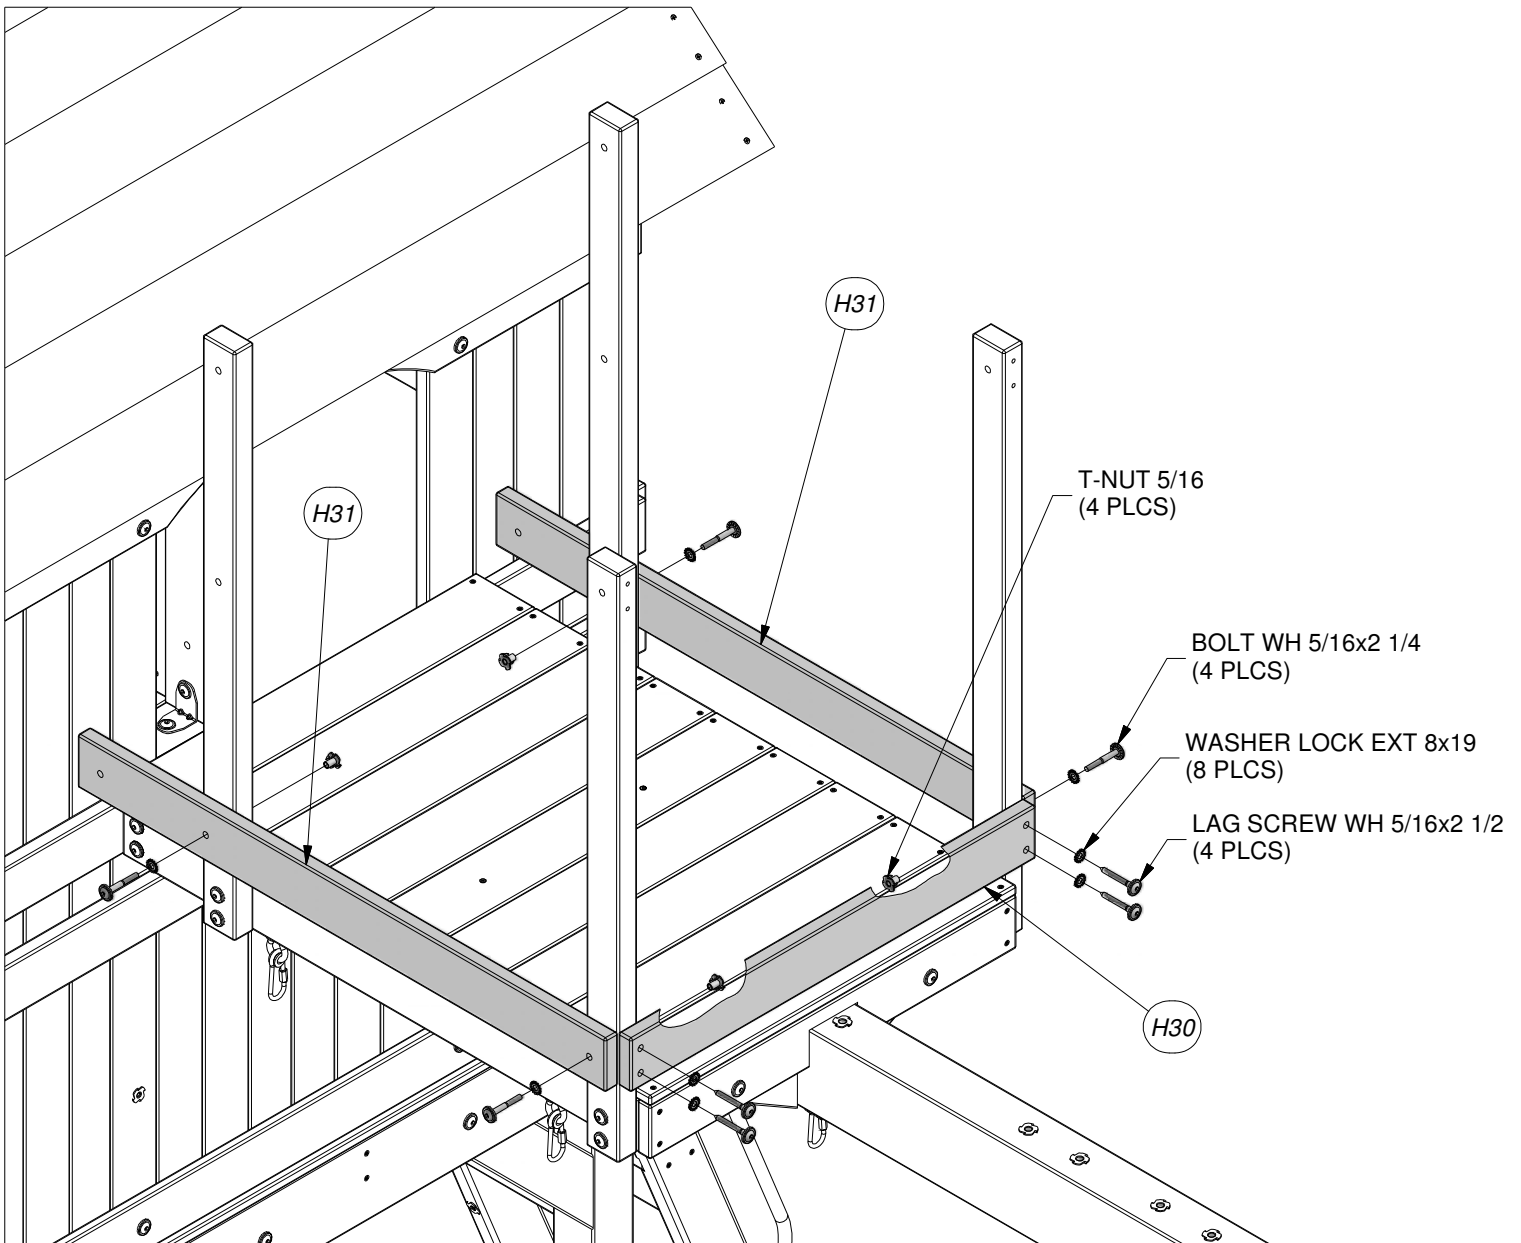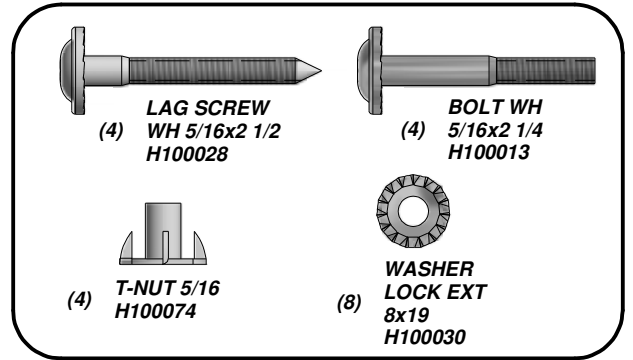



L BRACKET
(2) 2.5x38x50x55
A100340

FORT ASSEMBLY
STEP 58

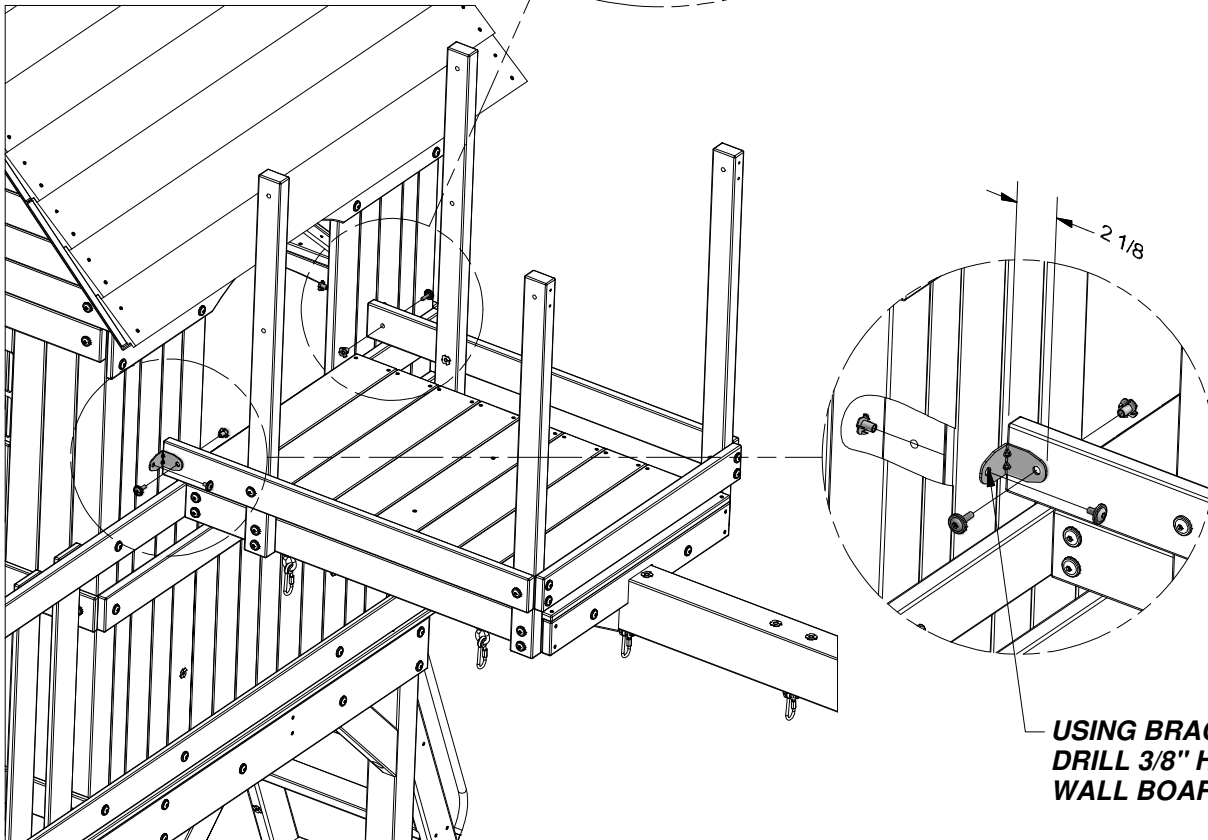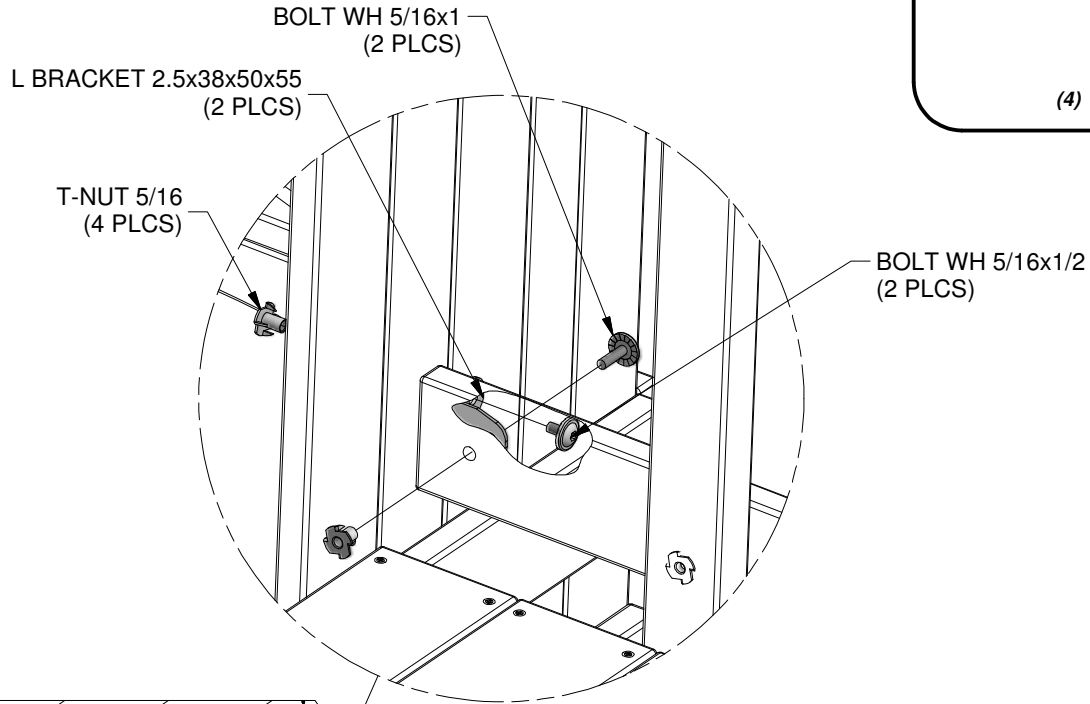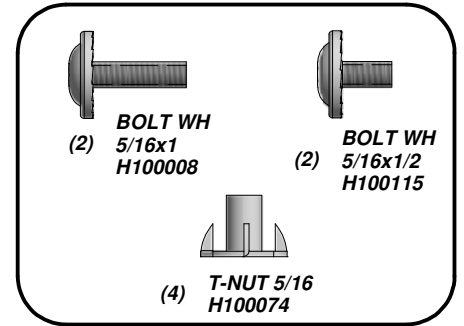



(2) **M4 - CROWS NEST WALL RAIL - W4L11773**
5/8"x3 3/8"x29 7/8" (16x86x758)






(1) **H30 - CROWS NEST WALL RAIL - W4L11782**
1"x3 3/8"x29 7/8" (24x86x758)




(2) **H29 - CROWS NEST WALL RAIL - W4L11783**
1"x3 3/8"x30 5/8" (24x86x778)

FORT ASSEMBLY STEP 59

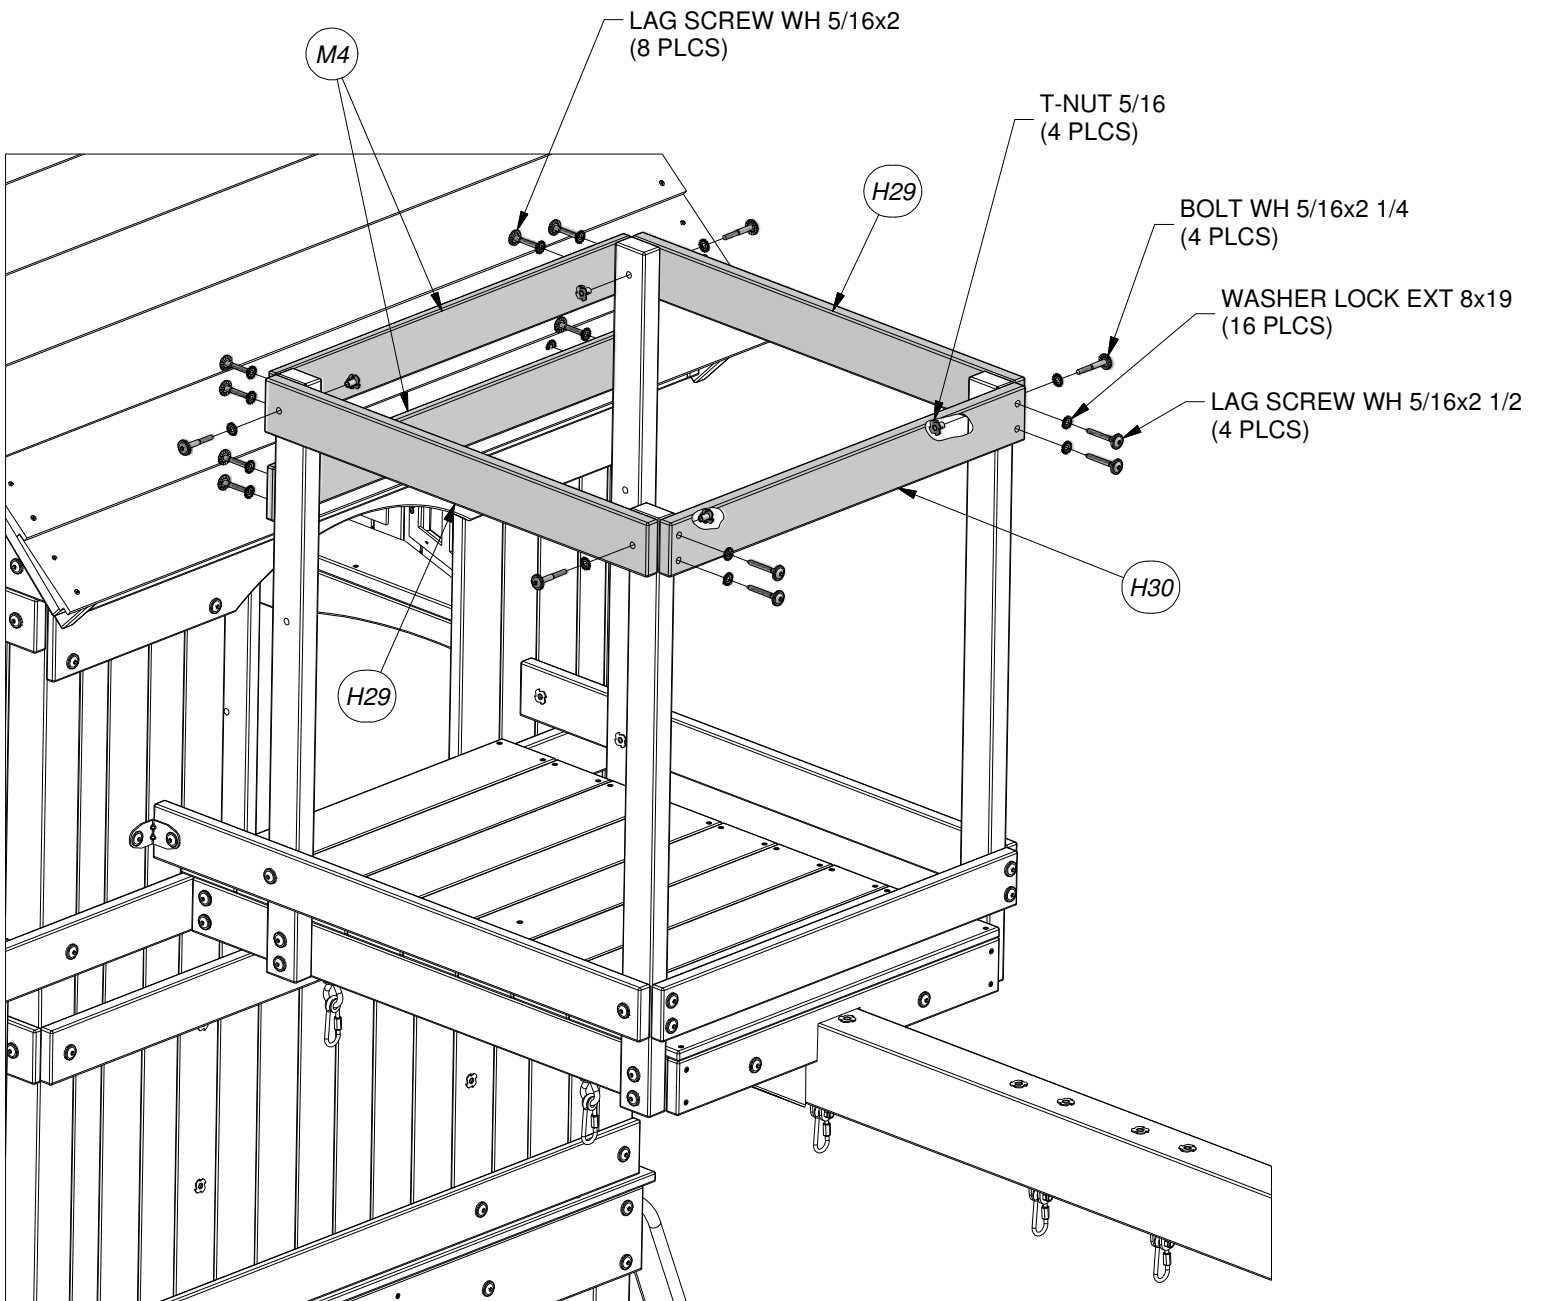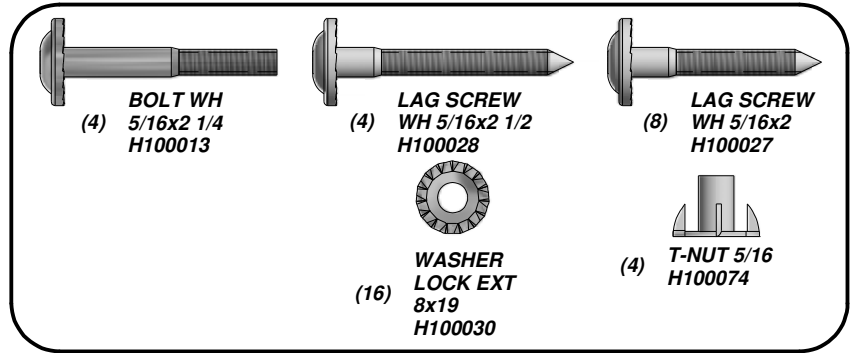

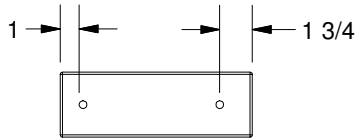

 
(2) **M32 - CROWS NEST WALL RAIL - W4L04671**
 5/8"x3 3/8"x10" (16x86x254)



(2) **L BRACKET**
 2.5x38x50x55
 A100340

FORT ASSEMBLY
STEP 60

USING BRACKETS AS A GUIDE, DRILL 3/8" HOLES THROUGH WALL

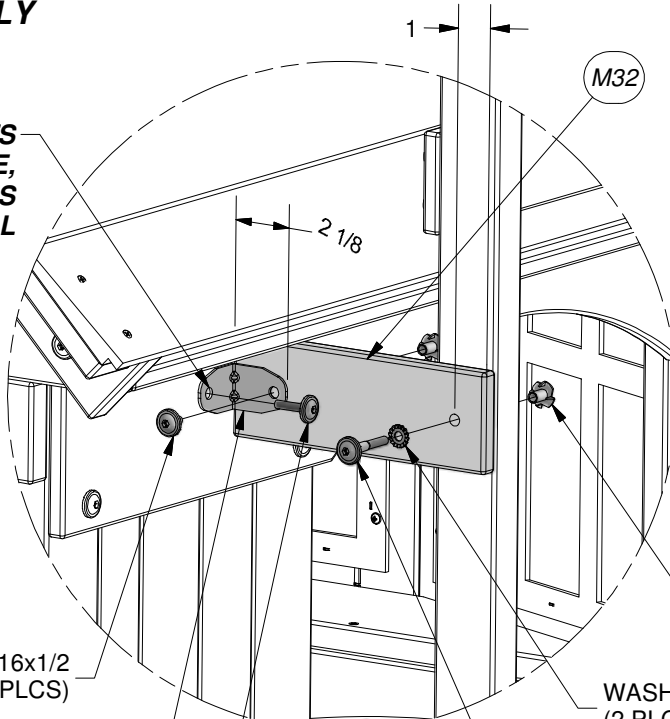

	BOLT WH (2) 5/16x2 H100012		BOLT WH (2) 5/16x1 1/4 H100009
	BOLT WH (2) 5/16x1/2 H100115		WASHER LOCK EXT (2) 8x19 H100030
	T-NUT 5/16 (6) H100074		

BOLT WH 5/16x1/2
 (2 PLCS)


L BRACKET 2.5x38x50x55
 (2 PLCS)

BOLT WH 5/16x1 1/4
 (2 PLCS)

T-NUT 5/16
 (6 PLCS)

WASHER LOCK EXT 8x19
 (2 PLCS)



BOLT WH 5/16x2
 (2 PLCS)

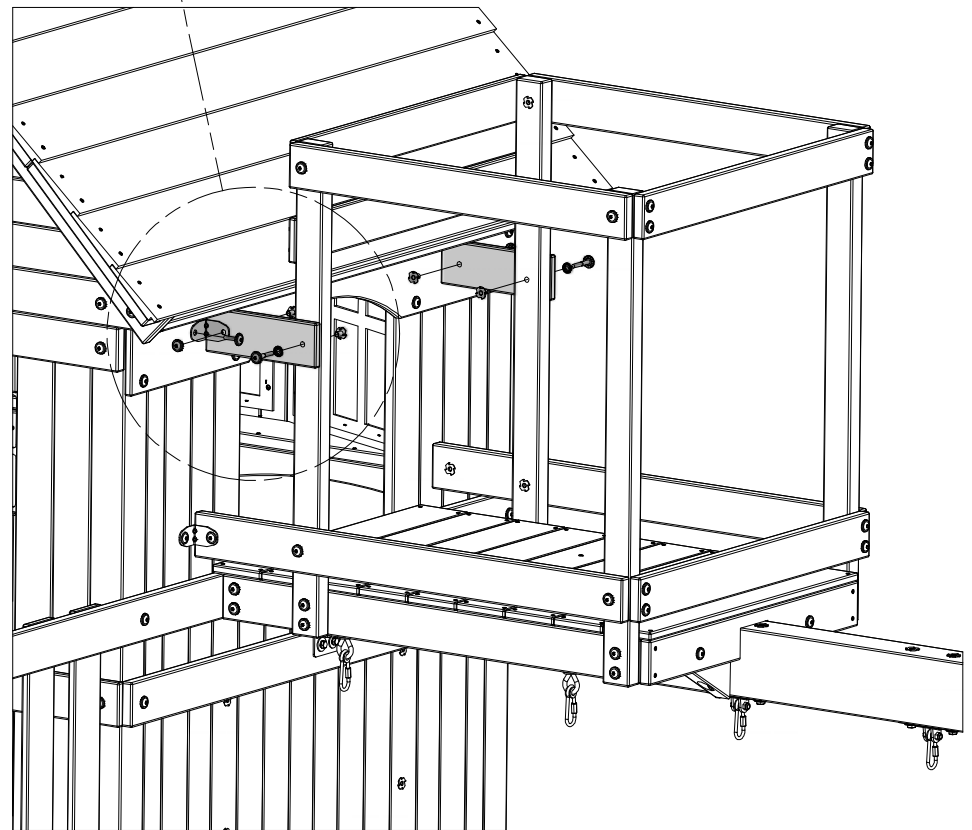




(2) **N4 - CROWS NEST WALL BOARD - W4L04673**
5/8"x2 3/8"x19" (16x60x483)

FORT ASSEMBLY
STEP 61

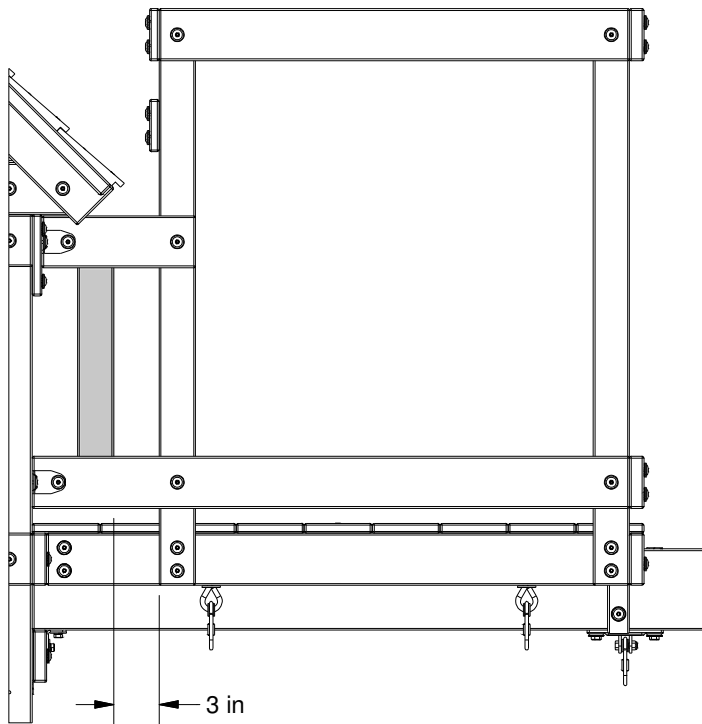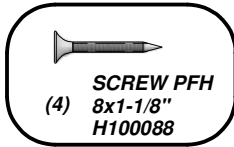





SCREW PFH 8x1-1/8"
(4 PLCS)

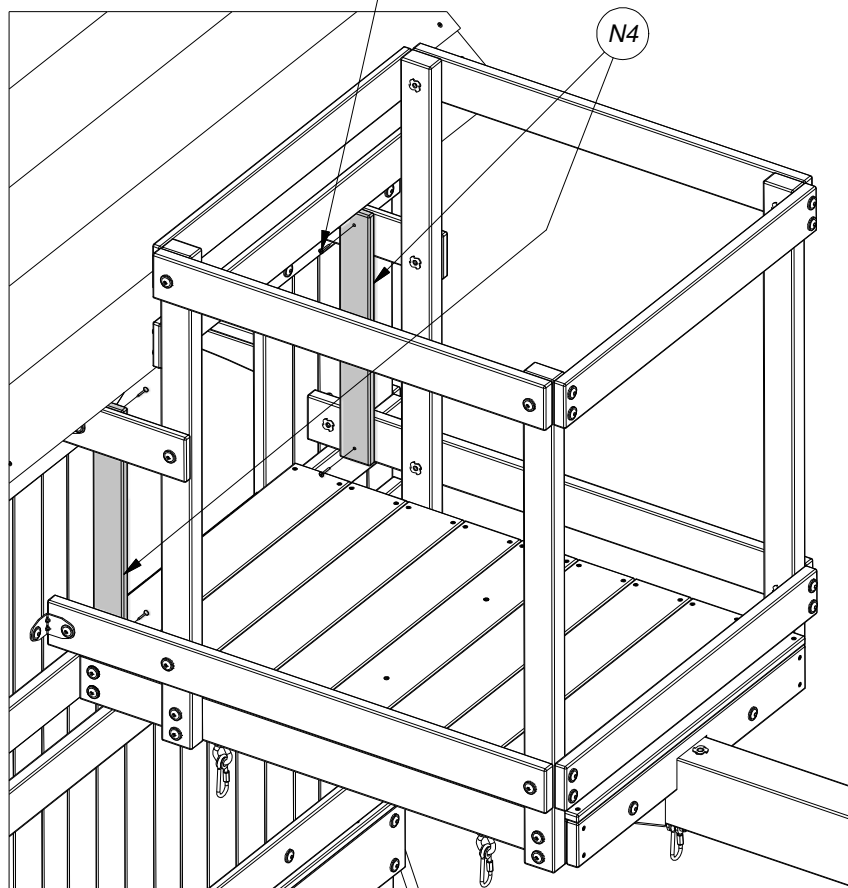



(6) O1 - CROWS NEST WALL BOARD - W4L04672
5/8"x1 3/8"x32 1/2" (16x34x825)

**FORT ASSEMBLY
STEP 62**

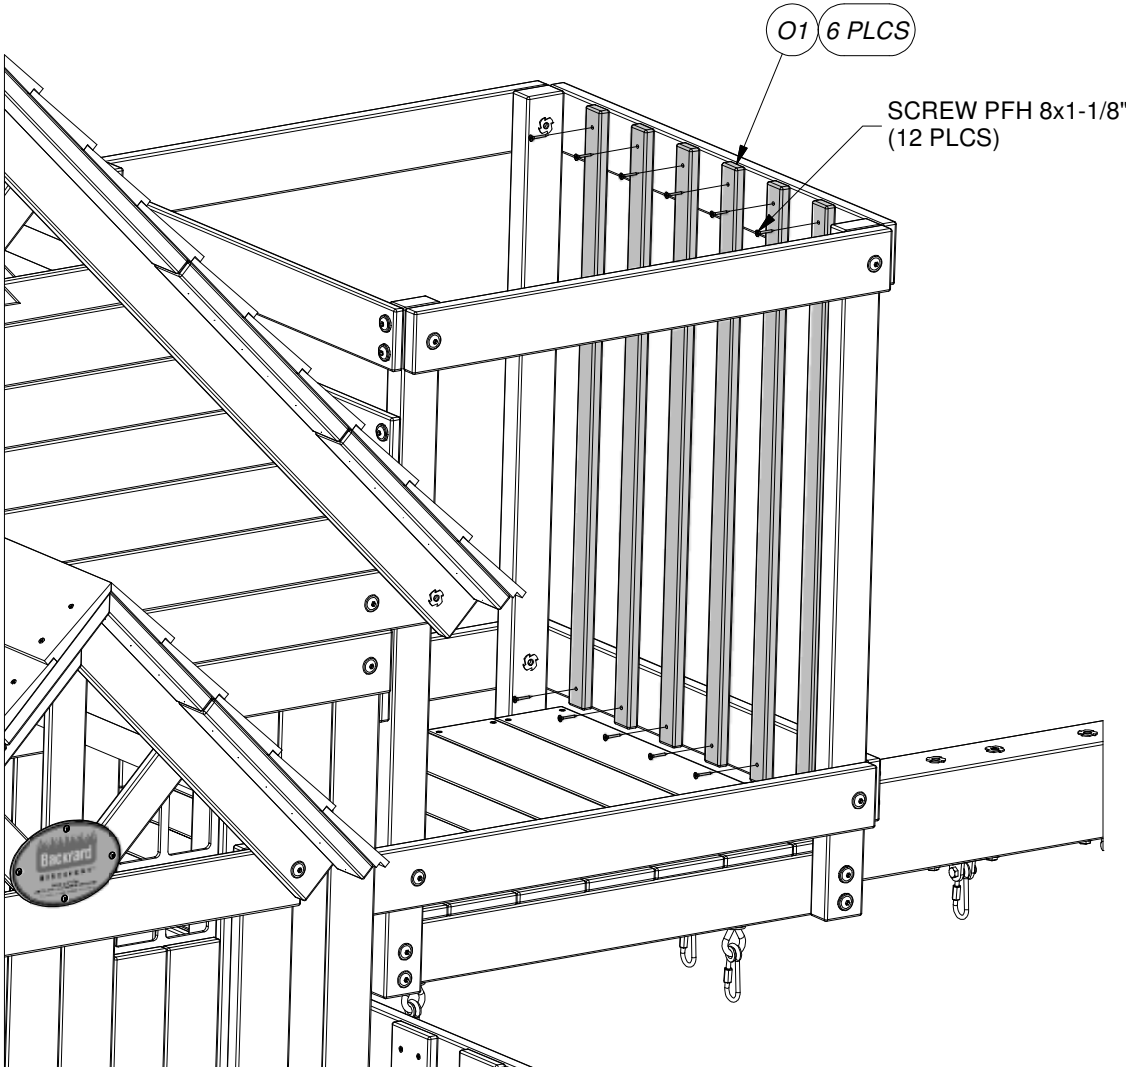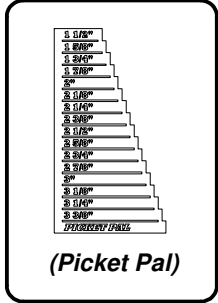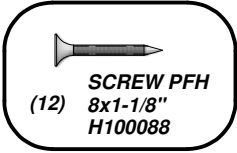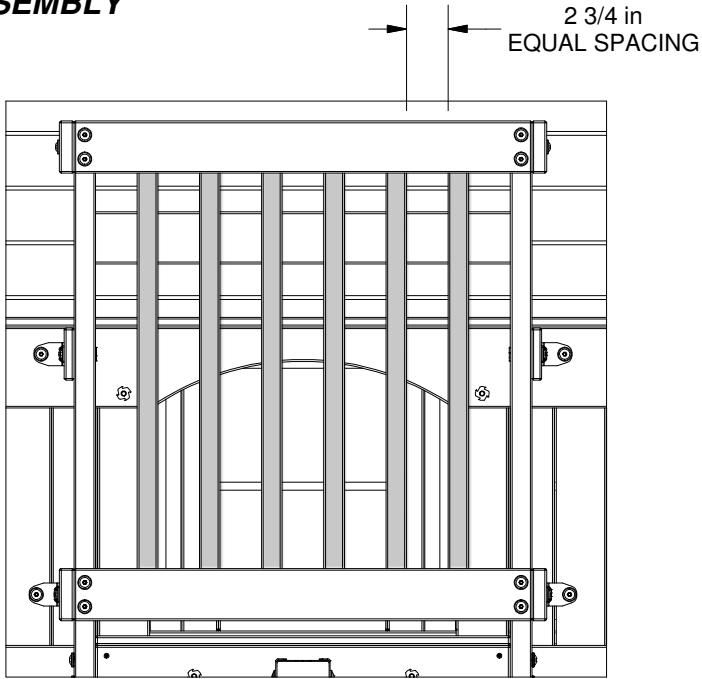





(12) O1 - CROWS NEST WALL BOARD - W4L04672
5/8"x1 3/8"x32 1/2" (16x34x825)

**FORT ASSEMBLY
STEP 63**

2 1/2 in
EQUAL
SPACING

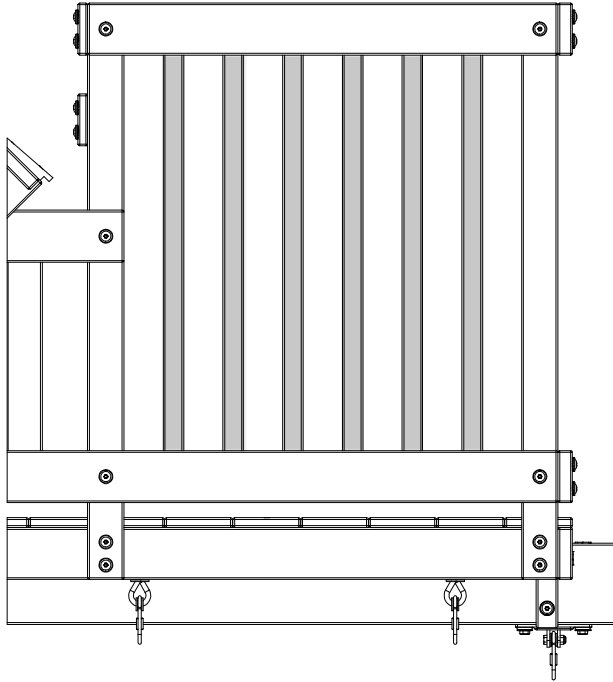


SCREW PFH
(24) 8x1-1/8"
H100088

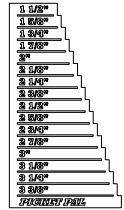


(Picket Pal)

O1 12 PLCS

SCREW PFH 8x1-1/8"
(24 PLCS)

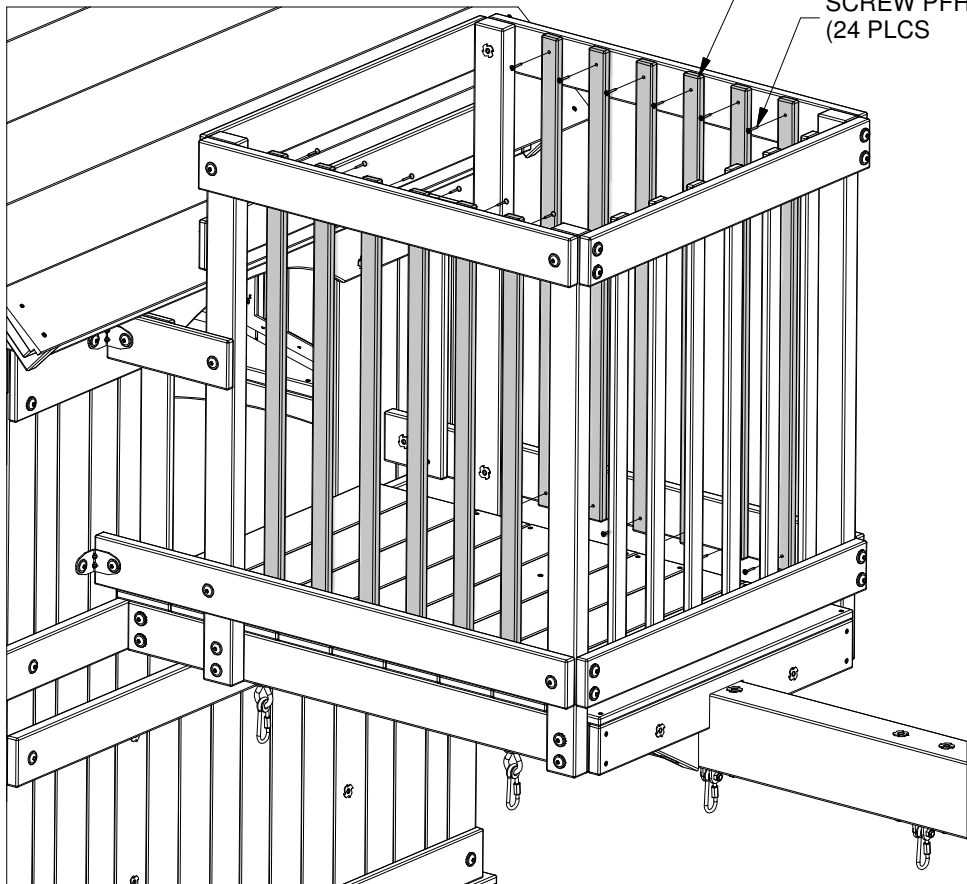


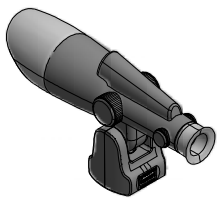



(1) TELESCOPE - A100104



(1) F1 - TELESCOPE MOUNTING BLOCK - W4L04674
1 3/8"x2 3/8"x3" (36x60x76)


FORT ASSEMBLY STEP 64

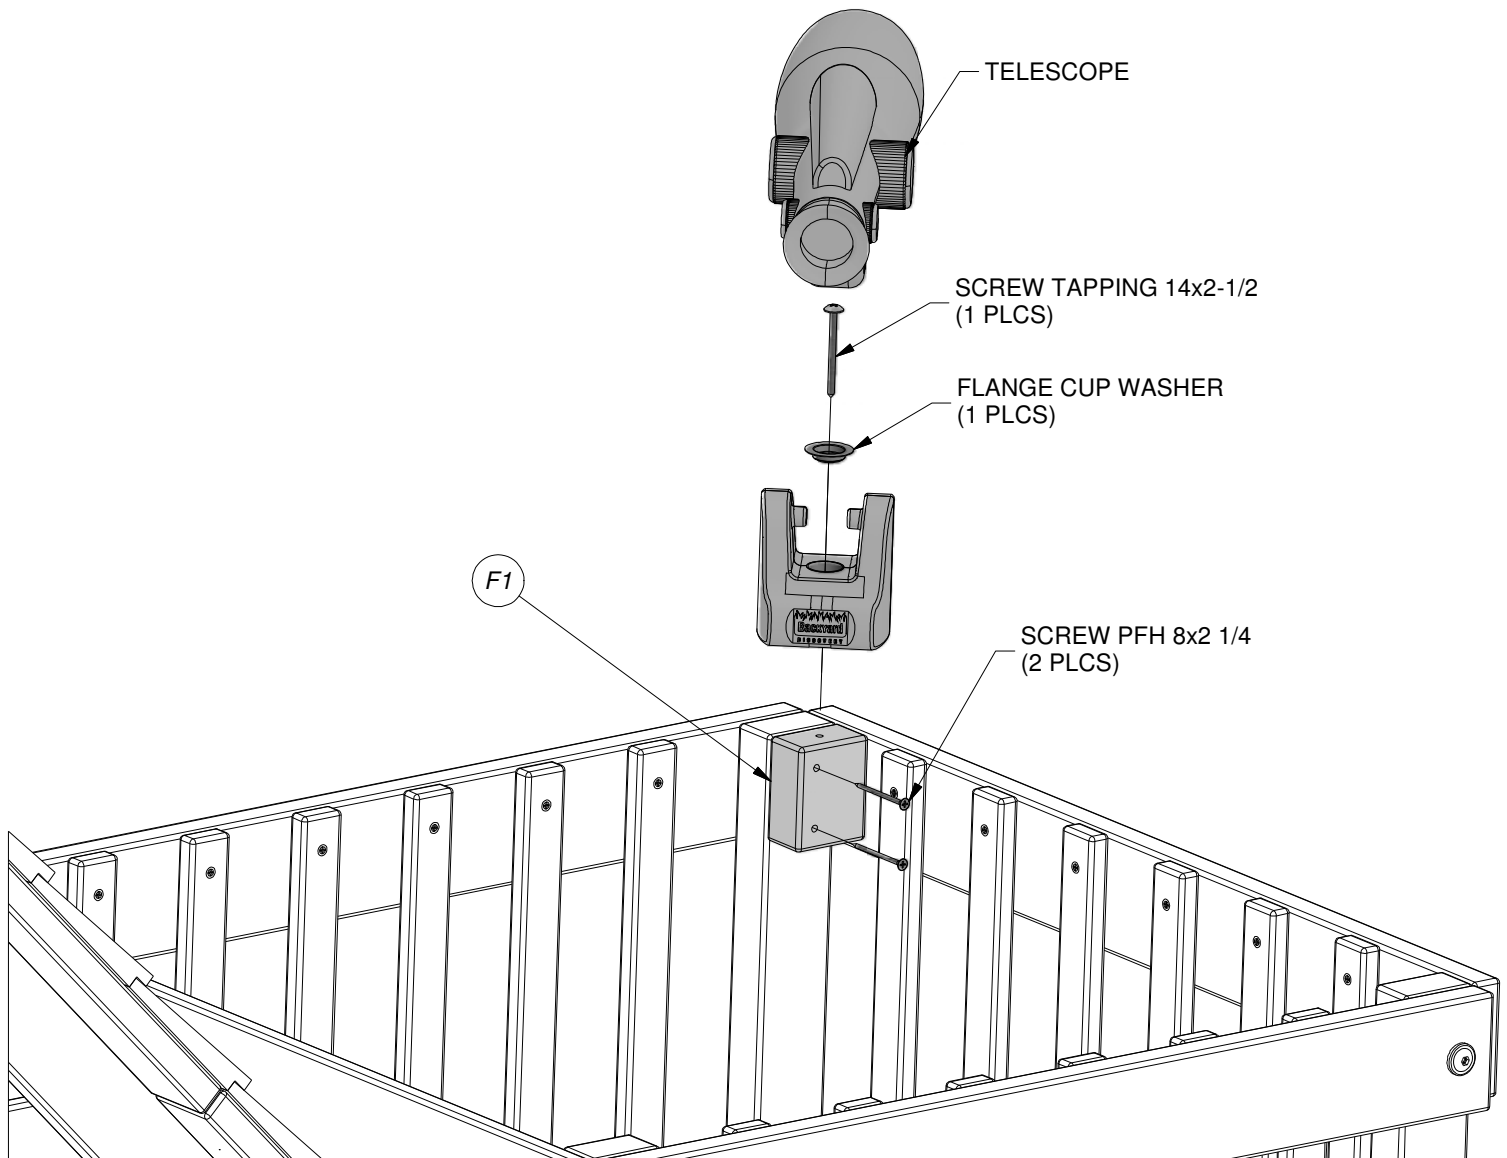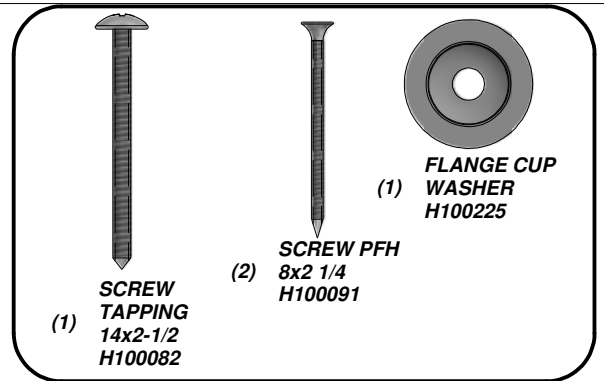

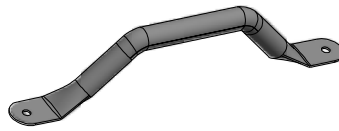


(4) FX - HAND GRIP METAL GREEN 381 c/c - A100118


**FORT ASSEMBLY
STEP 65**




LAG SCREW
(4) WH 5/16x1 1/2
H100026



BOLT WH
(4) 5/16x1
H100008

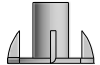

(4) **T-NUT 5/16**
H100074

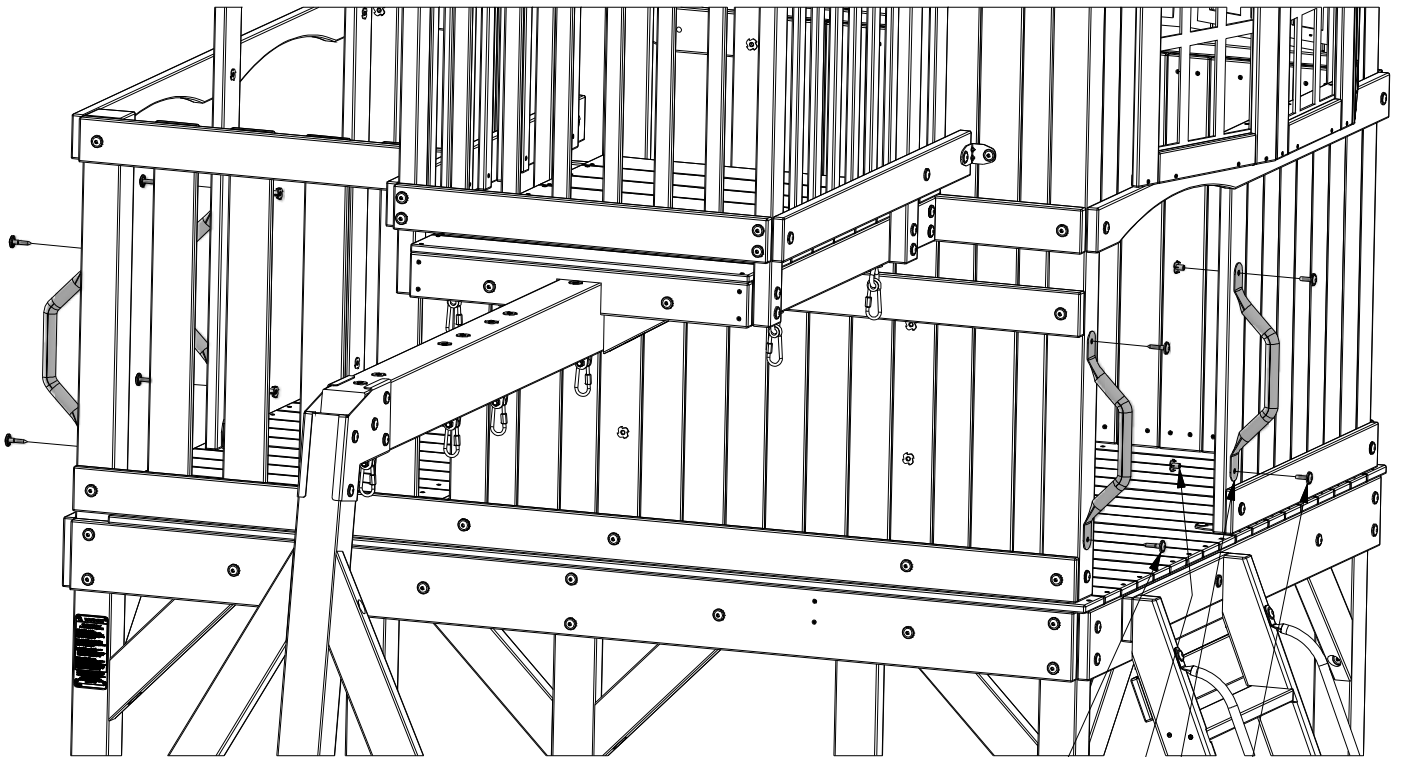


LAG SCREW WH 5/16x1 1/2
(4 PLCS)

T-NUT 5/16
(4 PLCS)


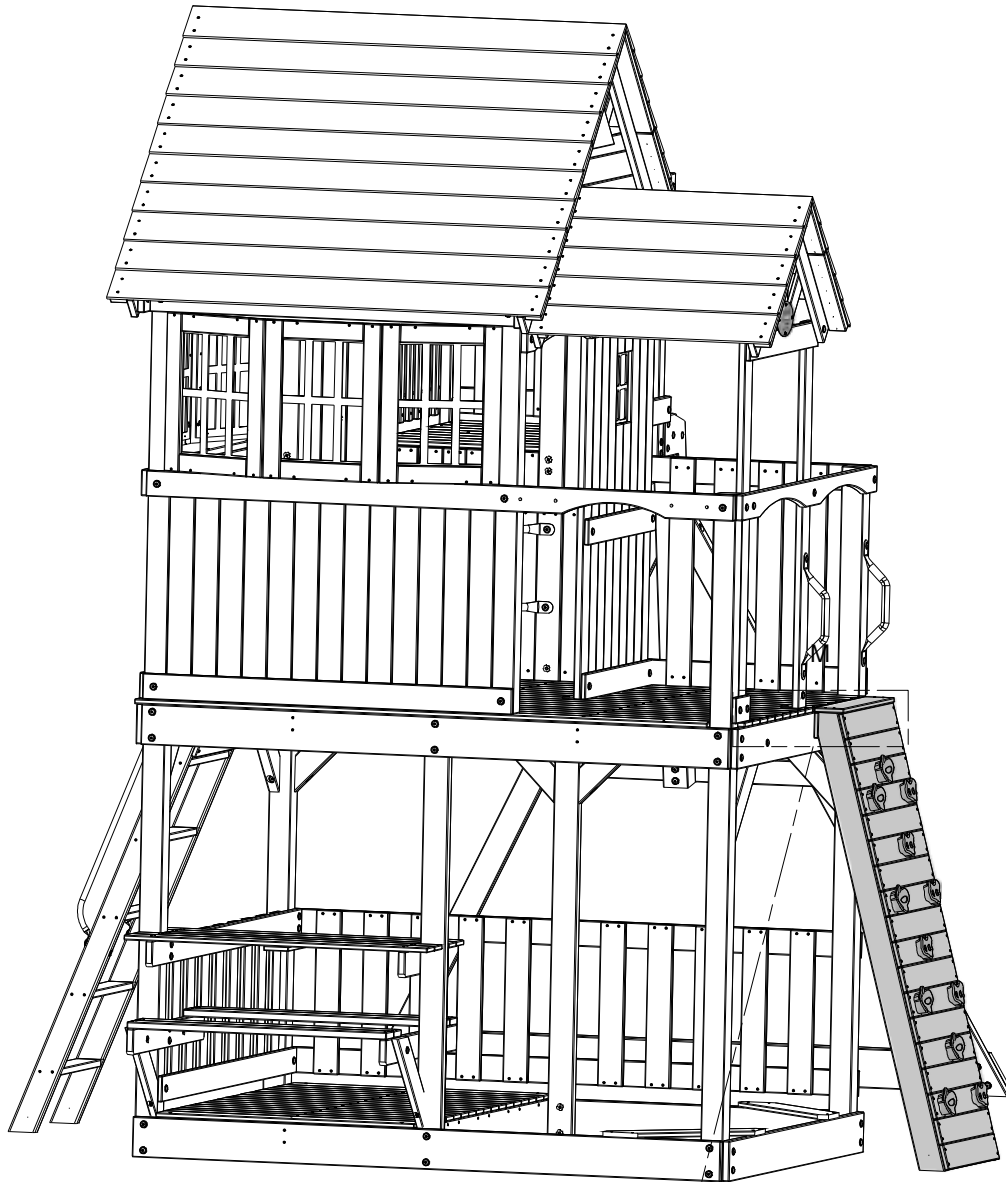
HAND GRIP METAL GREEN 381 c/c
(4 PLCS)

BOLT WH 5/16x1
(4 PLCS)

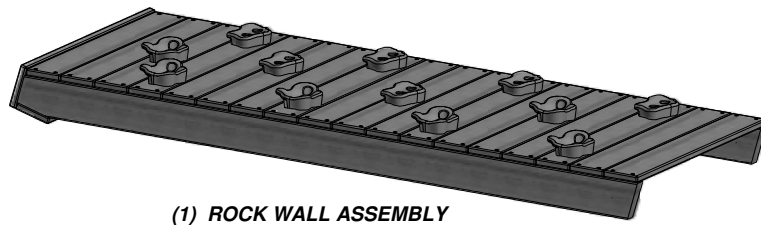


(1) ROCK WALL ASSEMBLY

**FINAL ASSEMBLY
STEP 1**



BOLT WH
(2) 5/16x1 1/2
H100010




**WASHER
LOCK EXT**
(2) 8x19
H100030


WASHER LOCK EXT 8x19
(2 PLCS)

BOLT WH 5/16x1 1/2
(2 PLCS)


ROCK WALL ASSEMBLY

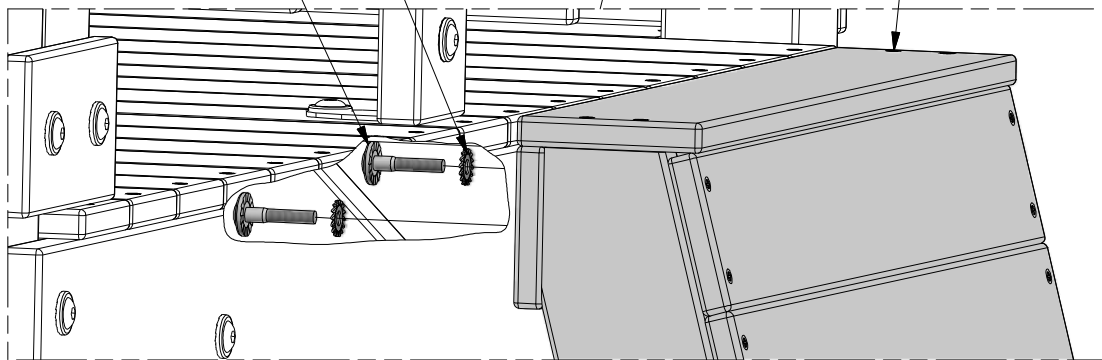


(1) MONKEY BAR ASSEMBLY

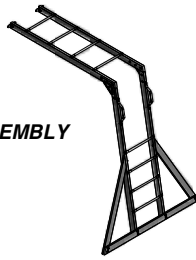


**FINAL ASSEMBLY
STEP 2**



(4) T-NUT 5/16
H100074




BOLT WH
(4) 5/16x1
H100008

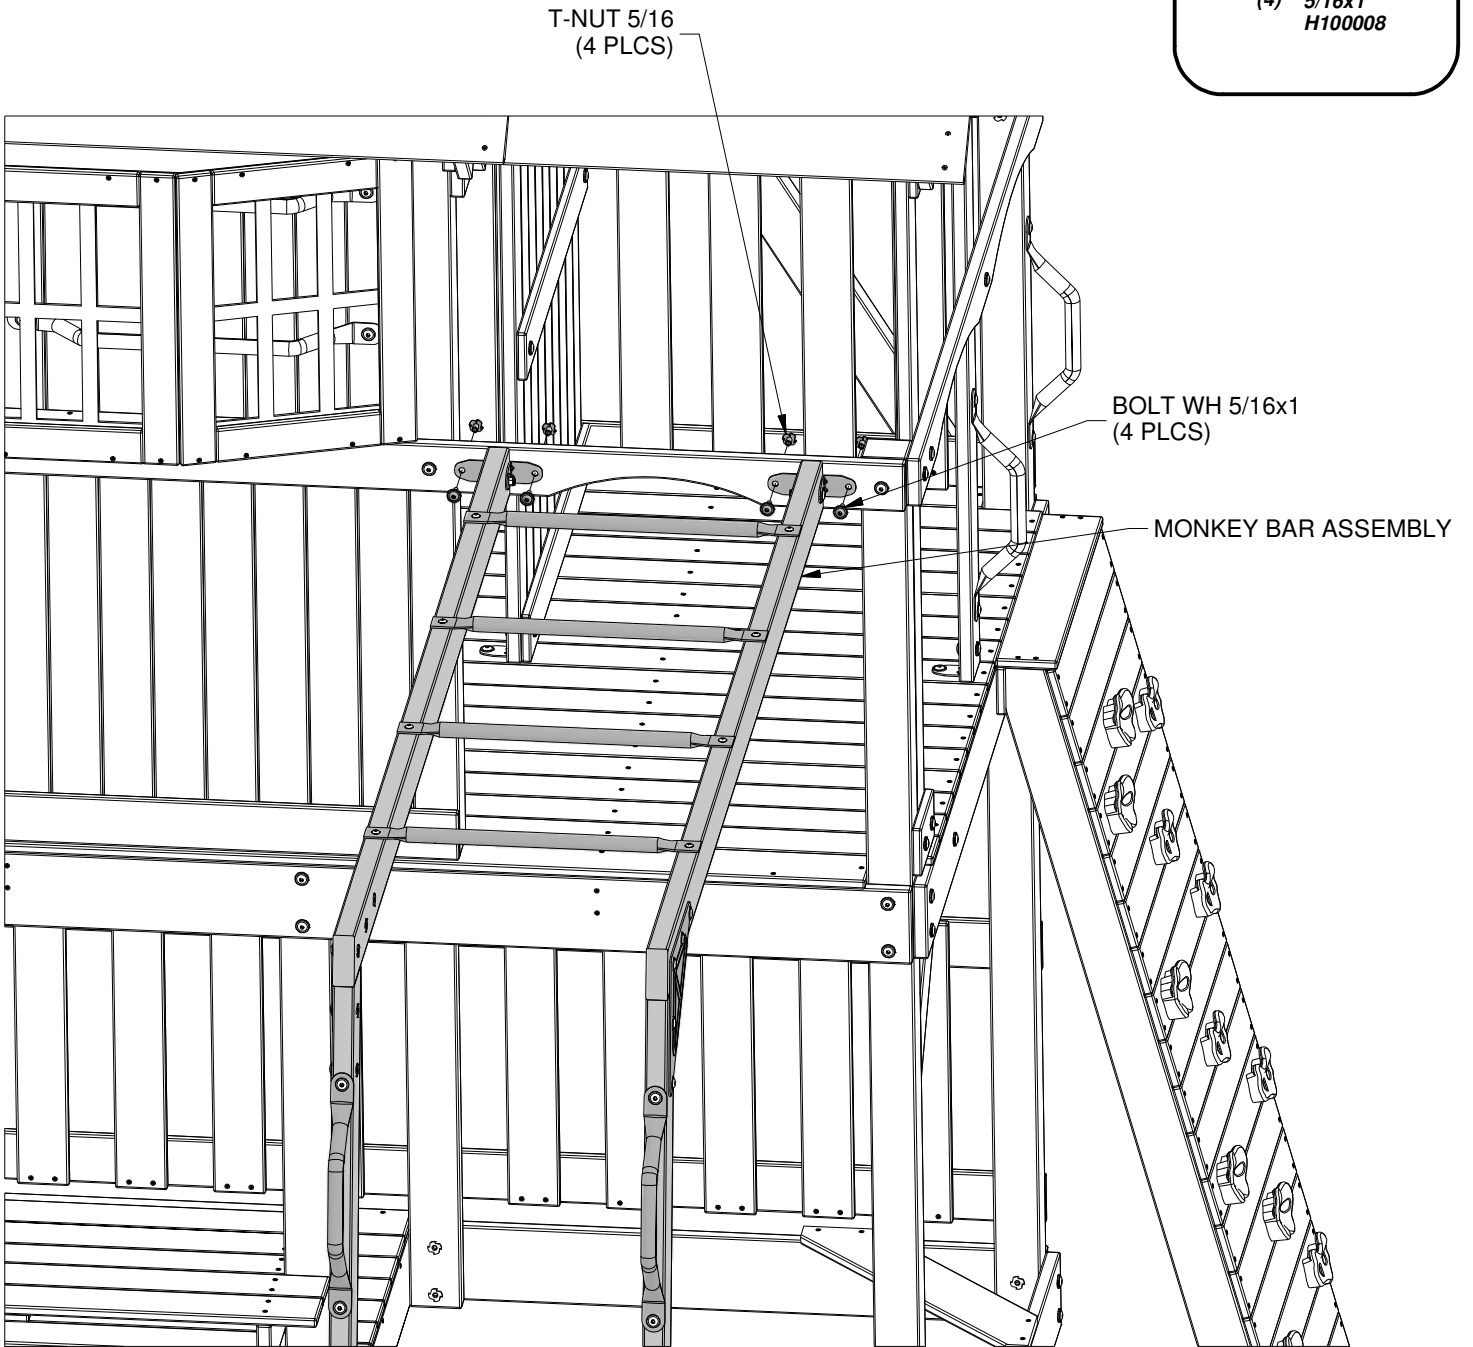




(1) **070 - SLIDE MOUNTING BOARD - W102822**
5/8"x1 3/8"x20 3/8" (16x34x517)

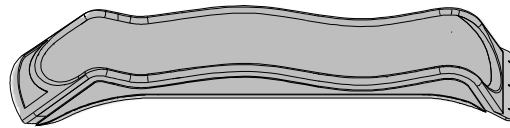

(1) **SLIDE**

**FINAL ASSEMBLY
STEP 3**



NOTE:
MOUNT BOARD 1ST.

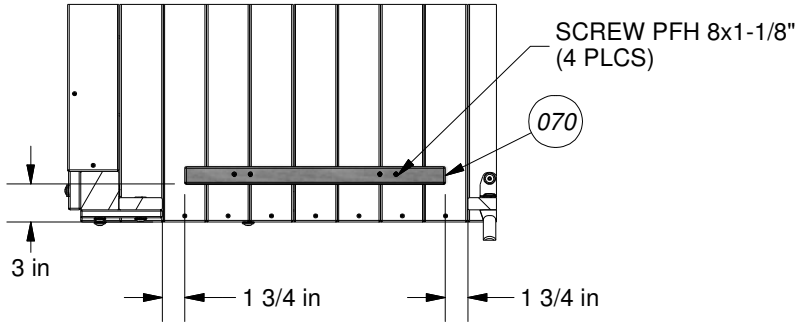


BOLT WH
(3) 5/16x1 1/4
H100009

T-NUT 5/16
(3) H100074



SCREW PFH
(4) 8x1-1/8"
H100088

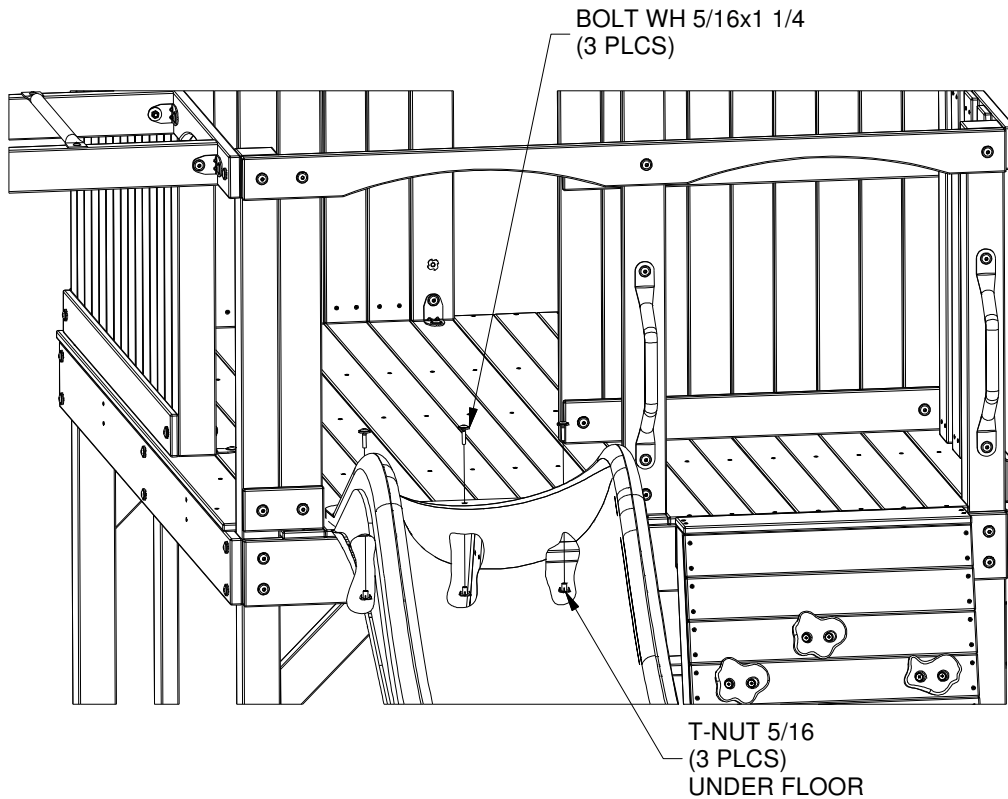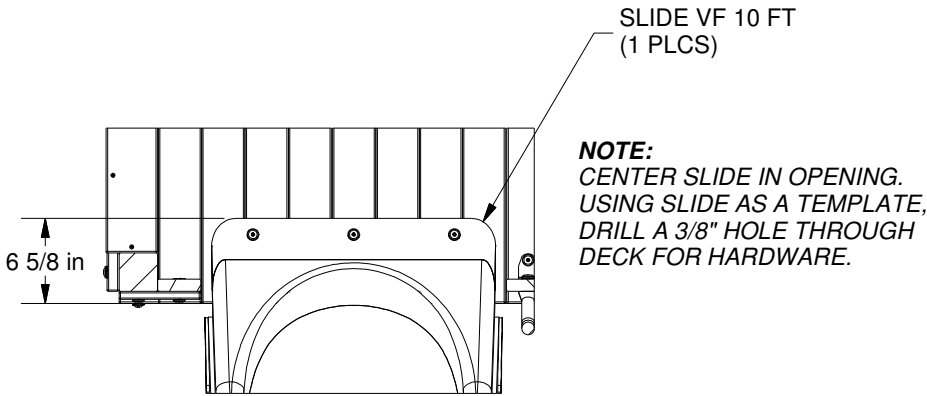

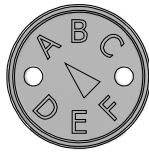

(1) - "A" REVISION TAG - A100314

**FINAL ASSEMBLY
STEP 4**

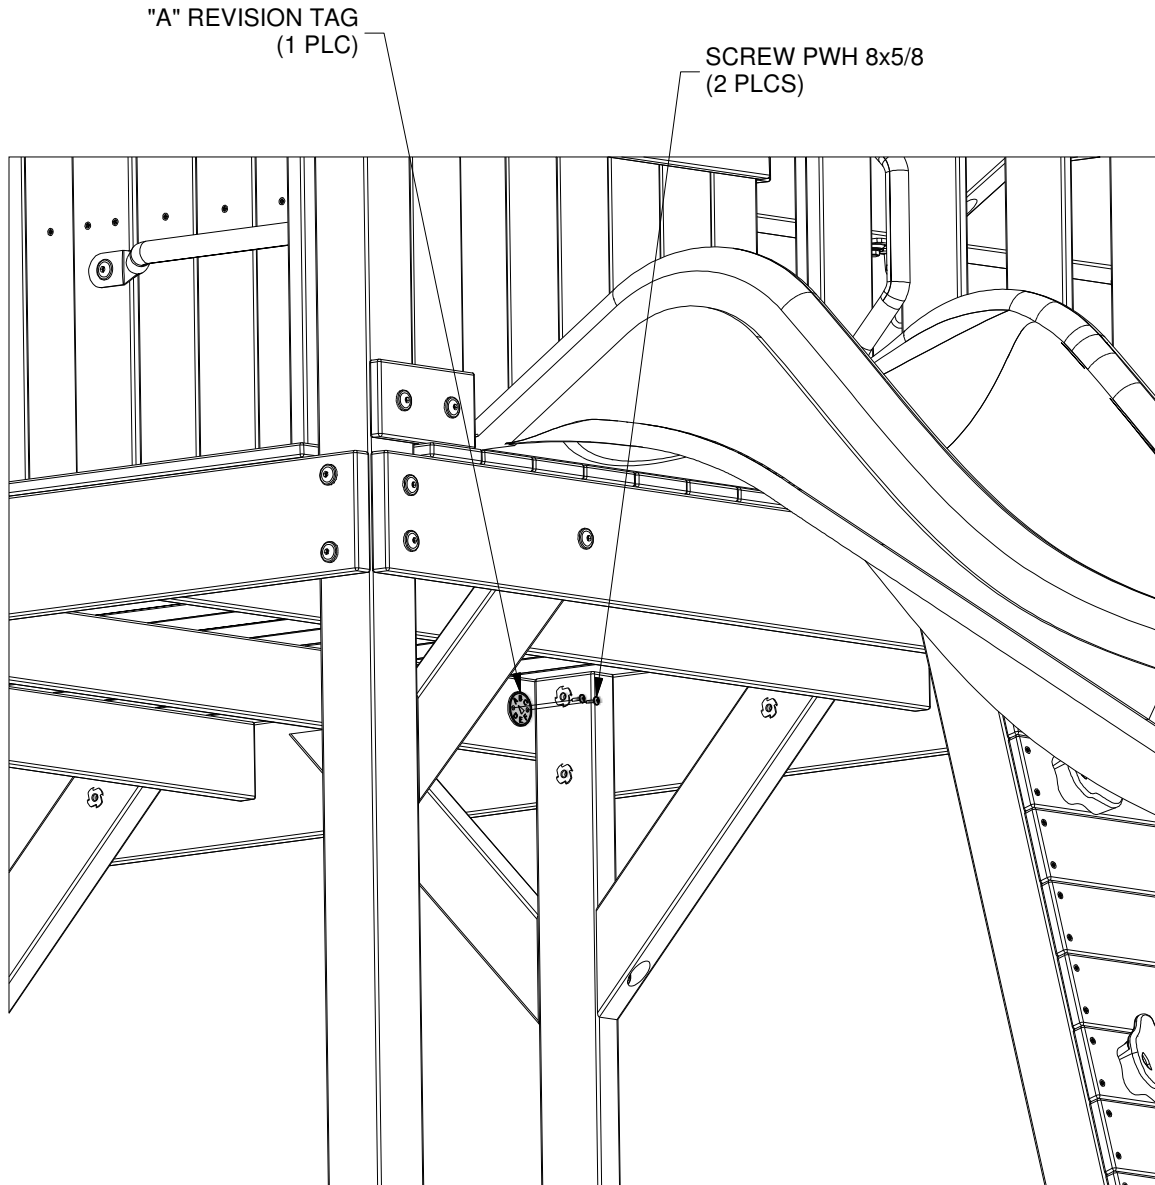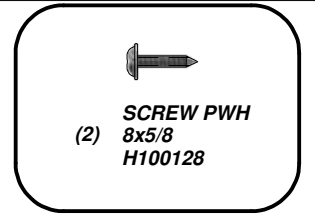




(8) FA - QUICK LINK - A100069



(2) DP - SWING SEAT GREEN - A100027

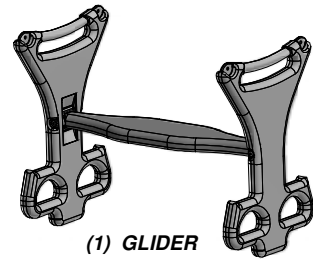

(1) GLIDER





(4) HW - CHAIN GREEN 44" - A100048



(4) EF - CHAIN GREEN 57" - A100047

FINAL ASSEMBLY STEP 5

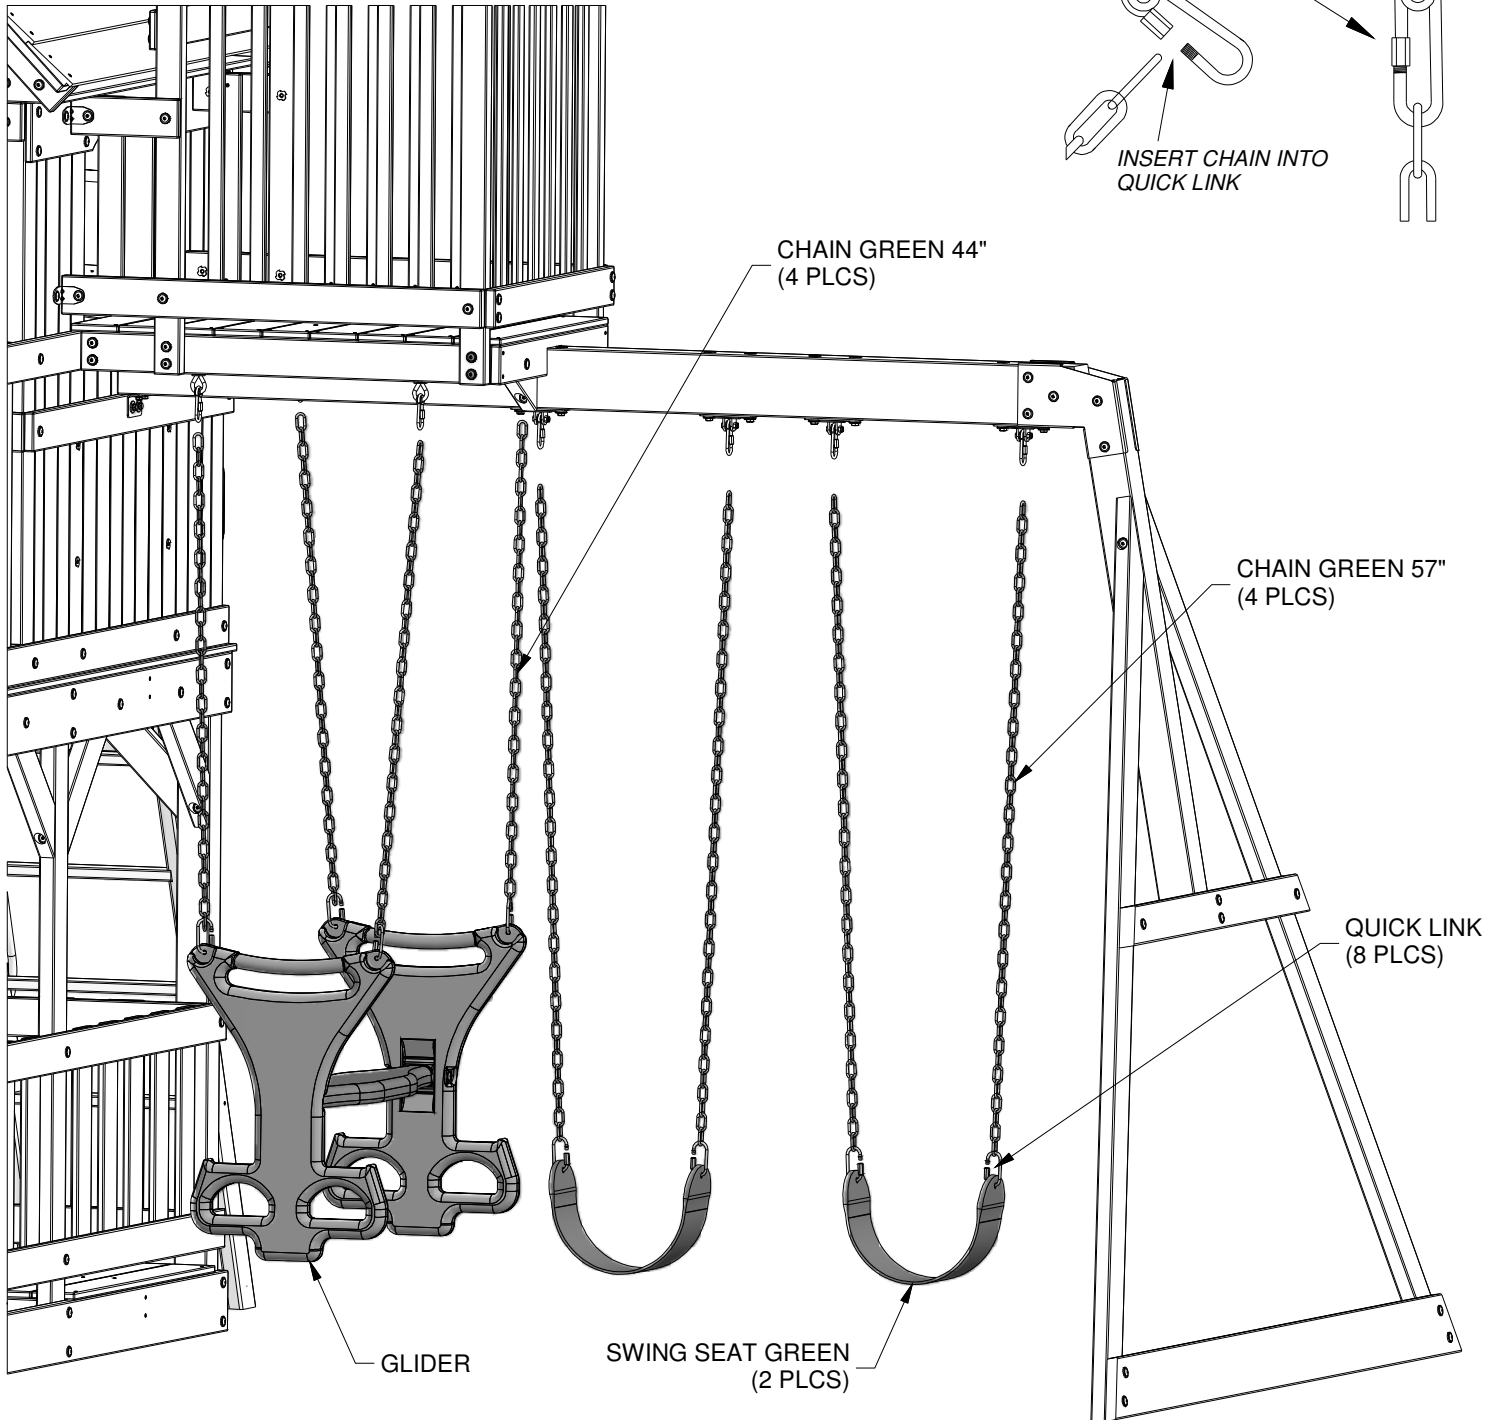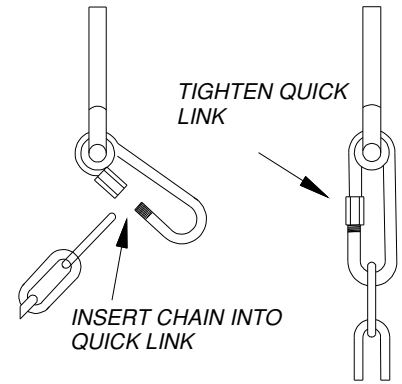



(8) KC - METAL GROUND STAKE BROWN - A100178



(2) - GROUND STAKE REBAR - A4M00527

FINAL ASSEMBLY STEP 6

DETAIL "A" & "B"



TWIST STAKES INTO GROUND AGAINST GROUND BOARDS AND CORNER POSTS IN LOCATIONS SHOWN. USING STAKE AS A TEMPLATE, DRILL A 3/16" HOLE FOR LAGS.

DETAIL "C"

DRIVE STAKE INTO GROUND AT LOCATIONS SHOWN. USING STAKE AS A TEMPLATE, DRILL A 7/16" HOLE FOR HARDWARE.

DETAIL "D"

DRIVE STAKE INTO GROUND AT LOCATIONS SHOWN. USING STAKE AS A TEMPLATE, DRILL A 7/16" HOLE FOR HARDWARE.

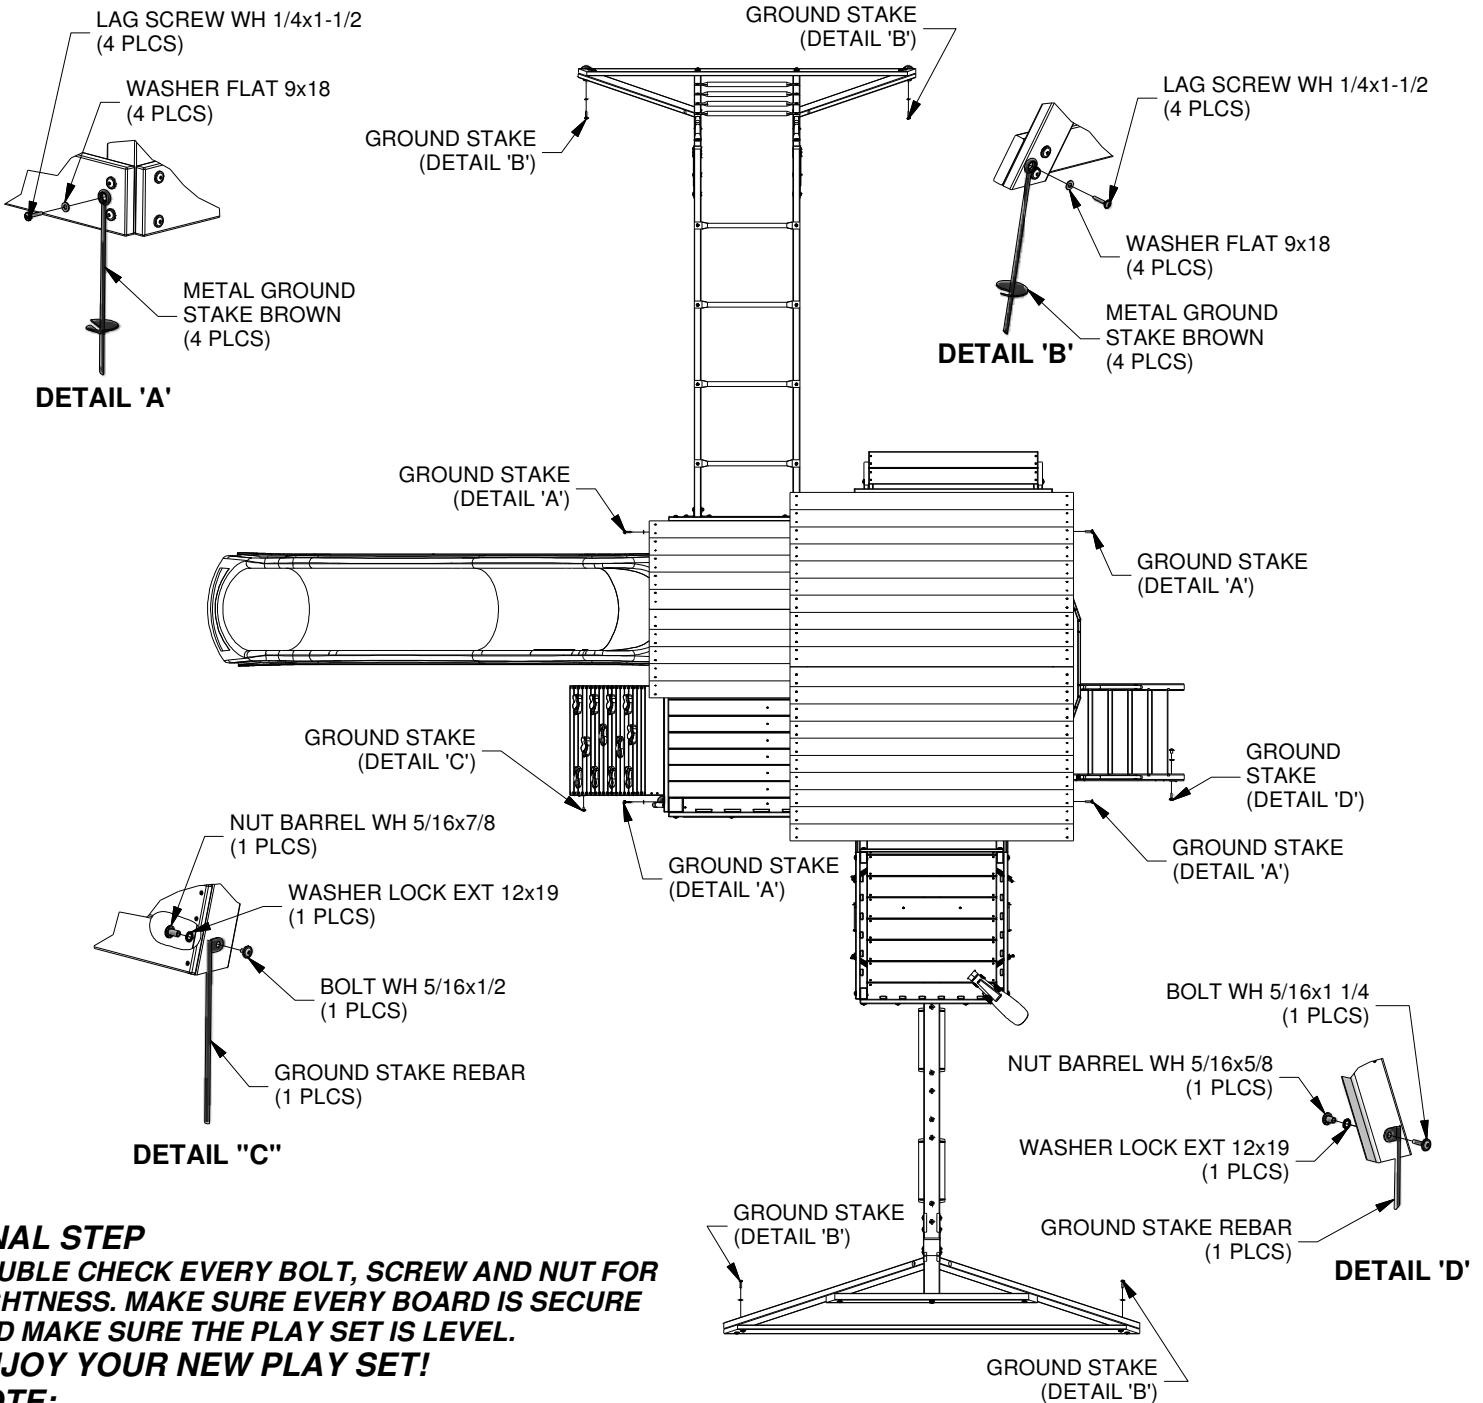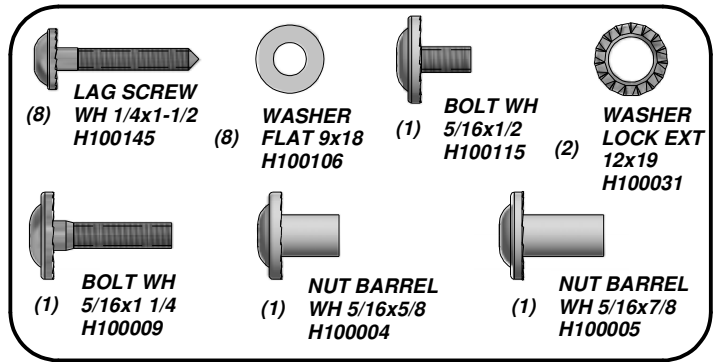

FINAL STEP

DOUBLE CHECK EVERY BOLT, SCREW AND NUT FOR TIGHTNESS. MAKE SURE EVERY BOARD IS SECURE AND MAKE SURE THE PLAY SET IS LEVEL.
ENJOY YOUR NEW PLAY SET!

NOTE:

FAILURE TO ATTACH GROUND STAKES COULD CAUSE INJURY AND WILL VOID WARRANTY!