


ASHLAND 10x14 PERGOLA

Model # 2006515 Owner's Manual & Assembly Instructions

MANUFACTURED BY: Backyard Discovery 3305 Airport Drive Pittsburg, KS 66762 800-856-4445

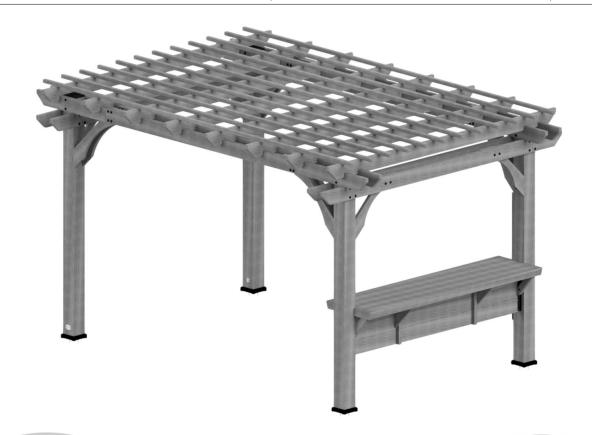



INSTALLATION **SERVICES AVAILABLE!***

Need a helping hand? Let our team of professionals handle the installation for you!

> GOCONFIGURE 888-888-5424

*Installation services are only available to U.S. customers.

average 2 person assembly time



assembly time may vary based on skill level

Before you begin FOR OUICK & EASY ASSEMBLY FIND 3D INSTRUCTIONS FOR THIS PRODUCT IN DOWNLOAD THE FREE APP Google Play

For the most up to date assembly manual, to register your set, or to order replacement parts please visit www.backyarddiscovery.com

SAVE THIS ASSEMBLY MANUAL FOR FUTURE REFERENCE IN THE EVENT THAT YOU NEED TO ORDER REPLACEMENT PARTS.

Para obtener instrucciones en español, visite www.backyarddiscovery.com



INSTALLATION SERVICES AVAILABLE!*

Need a helping hand?

Let our team of professionals handle the installation for you!

GOCONFIGURE 888-888-5424

*Installation services are only available to U.S. customers.

With Go Configure, we bring you 18 years of experience right to your doorstep. We service a wide array of indoor and outdoor recreation products that most consumers don't have the time or ability to deliver & install themselves.

We do the heavy lifting, so you don't have to!

- 18+ Years of Experience Servicing Big Box Retailers and Direct Consumers
- Highly Skilled, Specialized, Courteous, Professional Service Technicians
- Over 140,000 Installations Annually
- White Glove Service

- Satisfaction Guarantee
- Flexible Appointments, including weekends
- Coverage across the nation

Visit www.goconfigure.com for more info!

*Installation services are only available to U.S. customers.





The store where you made your purchase does not stock parts for this item.

If you have assembly questions or you are missing or have damaged parts, please call

1-800-856-4445

you can also visit www.backyarddiscovery.com or e-mail customerservice@backyarddiscovery.com

Please have the following information ready when you make your call:

- Model Number of the product located on the front of the assembly manual
- The item description and number from the parts list from the manual that was included in your box
- Read entire assembly manual, paying special attention to the important tips and safety information.
- To ensure there are no missing pieces do a complete inventory by first separating and identifying all parts.
- Make sure to check packing material for small parts that may have fallen out during shipment.
- Structures are not intended for public use. The Company does not warranty any of its residential structures subjected to commercial use.
- This manual contains helpful information concerning assembly preparation, installation procedure and required maintenance.
- Always keep safety in mind as your structure is being built.
- · Keep these instructions for future reference.



Limited Warranty


Please read entire booklet completely before beginning the assembly process

Please retain these instructions and your receipt for future reference. Keep them in a safe place where you can refer to them as needed. In order to provide you with the most efficient service, it is required that you provide us with the part numbers when ordering parts.

For Your Records:

Please take time and fill out the information below. This information will be needed for warranty issues.

Where Purchased:	
Date of Purchase:	
Installation Date:	
Installed by:	
Tracking Number:	

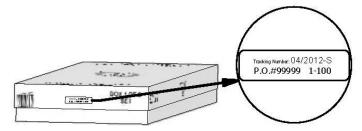

Tracking Number Reference Label

Tracking ID number on the carton and on the bottom of the vertical ID plate are included for tracking purposes associated with warranty claims.

This Limited Warranty by Backyard Discovery applies to products manufactured under the Backyard Discovery brand or its other brands including but not limited to Backyard Botanical, Adventure Playsets, and Leisure Time Products.

Backyard Discovery warrants that this product is free from defect in materials and workmanship for a period of one (1) year from the original date of purchase. This one (1) year warranty covers all parts including wood, hardware, and accessories. All wood carries a five (5) year pro-rated warranty against rot and decay. Refer to the schedule below for charges associated with replacement of parts under this Limited Warranty. In addition, Backyard Discovery will replace any parts within the first 30 days from date of purchase found to be missing from or damaged in the original packaging.

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to assure maximum life and performance of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty. Maintenance guidelines are provided in the Owner's Manual.

This Limited Warranty does not cover:

- · Labor for any inspection
- · Labor for replacement of any defective item(s)
- Incidental or consequential damages
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- · Vandalism, improper use, failure due to loading or use beyond the capacities stated in the applicable Assembly Manual.
- · Acts of nature including but not limited to wind, storms, hail, floods, excessive water exposure
- · Improper installation including but not limited to installation on uneven, unlevel, or soft ground

Product Age

· Minor twisting, warping, checking, or any other natural occurring properties of wood that do not affect performance or integrity

Backyard Discovery products have been designed for safety and quality. Any modifications made to the original product could damage the structural integrity of the unit leading to failure and possible injury. Modification voids any and all warranties and Backyard Discovery assumes no liability for any modified products or consequences resulting from failure of a modified product.

This product is warranted for RESIDENTIAL USE ONLY. Under no circumstance should a Backyard Discovery product be used in public settings. Such use may lead to product failure and potential injury. Any and all public use will void this warranty. Backyard Discovery disclaims all other representations and warranties of any kind, express or implied.

Pro Rated Part Replacement Schedule

Customer Pays

All Parts	
0-30 days from date of purchase	\$0 and free shipping
31 days to 1 year	\$0 + S&H
Wood Rot and Decay Only	
1 year	\$0 and free shipping
2 year	20% + S&H
3 year	40% + S&H
4 year	60% + S&H
5 year	80% + S&H
Over 5 years	100% + S&H





IT IS IMPORTANT TO CHECK AND TIGHTEN ALL HARDWARE AT THE BEGINNING AND DURING THE SEASON AS THEY MAY LOOSEN DUE TO WOOD EXPANSION AND CONTRACTION.

- DO NOT climb or walk on the roof for any reason
- Requires two or more people to assemble safely
- Check for underground utilities before digging or driving stakes into the ground.
- Check carefully for overhead lines and ensure there is at least 6ft (2m) clearance from any overhead electrical wires.
- Permanent structures may require a building permit.
 As the purchaser and or installer of this product you are advised to consult local planning, zoning and building inspection departments for guidance on applicable building codes and/or zoning requirements.
- Wood is NOT flame retardant and will burn. Grills, fire pits and chimineas are a fire hazard if place too close to your structure.
- Wear gloves to avoid injury during installation.
- During installation, follow all safety warnings provided with your tools and use safety glasses.
- Check all nuts and bolts twice monthly during the usage season and tighten as required. (But not so tight that you crack the wood) It is particularly important that this procedure be followed at the beginning of each season.

- Oil all metallic moving parts monthly during the usage period.
 - Check all coverings for bolts and sharp edges twice monthly during usage season to be certain they are in place. Replace when necessary. It is especially important to do this at the beginning of each new season.
- For rusted areas on metallic members such as hinges, brackets, etc. sand and repaint, using a non lead-based paint meeting the requirements of Title 16 CRF Part 1303.
- Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sanding may be necessary to maintain a safe environment. Treating your Product with protection (sealant) after sanding will help prevent severe checking/splitting and other weather damage.
- We have applied a waterborne translucent stain to your unit. This is done for color only. Once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any "rough" spots on your set. Please note this is a requirement of your warranty.

OWNERS SHALL BE RESPONSIBLE FOR MAINTAINING THE LEGIBILITY OF THE WARNING LABELS



Your Backyard Discovery structure is designed and constructed of quality materials. As with all outdoor products it will weather and wear. To maximize the enjoyment, safety and life of your structure it is important that you properly maintain it.

About Our Wood

Backyard Discovery uses 100% Cedar (C. Lanceolata) wood. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my product?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

- **1. Checking** is surface cracks in the wood along the grain. A post (4" x 4") will experience more checking than a board (1" x 4") because the surface and interior moisture content will vary more widely than in thinner wood.
- **2. Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
- **3. Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn grey over time.


How can I reduce the amount of weathering to wood product?

- 1. Your wood product is coated with a water-based stain. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product). You must apply some type of protection (sealant) to the wood of your product. Please note this is a requirement of your warranty. Most weathering is just the normal result of nature and will not affect safety. However if you are concerned that a part has experienced a severe weathering problem please call our customer service department for further assistance.
- 2. Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sanding may be necessary to maintain a safe environment. Treating your Product with protection (sealant) after sanding will help prevent severe checking/splitting and other weather damage.






Protrusion Hazard

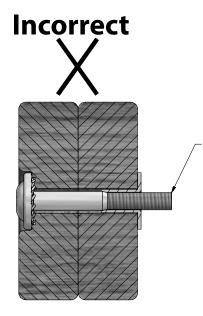


If you see exposed threads and your bolt protrudes beyond the T-Nut you may have over tightened the bolt or used incorrect hardware. If you've overtightened, remove the bolt and add washers to eliminate the protrusion.

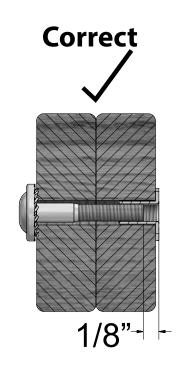

Proper Hardware Assembly


Bolt and T-Nut Assembly

Tap T-nut into the provided hole. Insert your bolt through the lock washer and insert into the provided hole opposite from the T-Nut. Turn clockwise to thread into T-nut. Do not completely tighten until instructed.

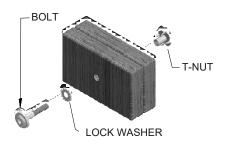

Bolt and Barrel Nut Assembly

Insert barrel nut through the lock washer and press the pair through the provided hole. Insert your bolt through the second lock washer and insert the pair into the provided hole opposite from the barrel nut. Turn clockwise to thread into the barrel nut. Do not completely tighten until instructed.

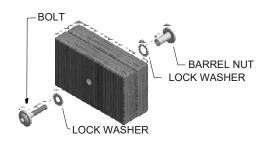

Lag Assembly

Normally there will be a pre-drilled pilot hole on assemblies that require a Lag Screw. If there is no pilot hole, line up the two boards as they are to be attached and use the factory drilled hole as a guide to drill another pilot hole into the adjoining board. This will keep the wood from splitting. Only a lock washer is required for steps with Lag Screws.








ASSEMBLY TIP:

Keep and eye out for these boxes which will contain helpful pictures and information making the assembly process as quick and painless as possible.



When removing the wood from the boxes we recommend arranging them by part number before you begin assembly. This will allow for faster assembly and easily identify any parts that may be missing or damaged.


Sorting Hardware

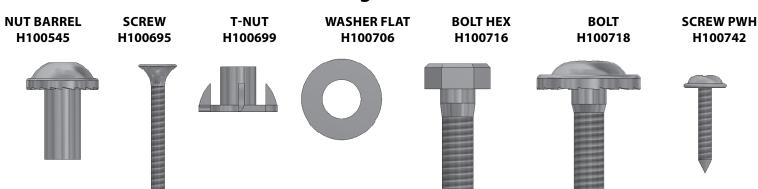


To help with assembly we recommend sorting your hardware bags with the seven digit alpha-numeric number printed on the bags or by hardware type (i.e. bolts, nuts, etc.). Organizing your hardware will make assembly easier.


Hardware bags are printed with a seven digit alpha-numeric part number. During assembly you only need to reference the last three digits of the part number as noted in each step. This will make finding the correct hardware easier.

Hardware Identification

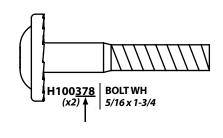

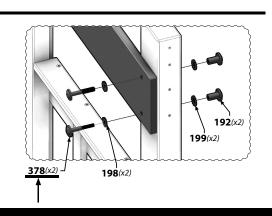

Tools Required for Installation

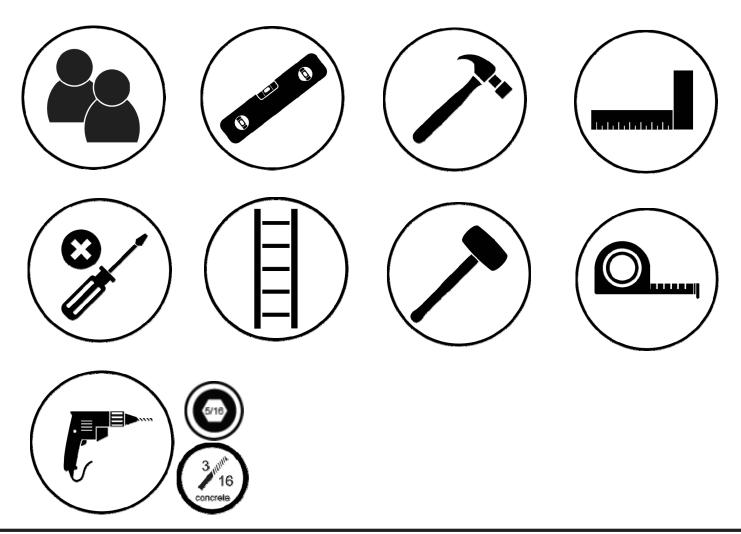

Icons and their uses you will see throughout this manual



You will need to make sure that your assembly is square before tightening your bolts.



For proper assembly you will need to ensure that your structure is level before proceeding to the next step.



Some steps in the assembly process will require an extra set of hands. Make sure you have a helper available.



This icon shows the size of an open ended wrench. Using the wrench as the fraction bar.



When you see this icon you will need a socket wrench. The icons below show the size of attachments needed for assembly 1/2.



This icon warns you to not over tighten your bolts. This is to prevent structural damage and also splintering your wood.



This icon will show you what drill attachments are needed. For this example you will need a Phillips head attachment and 3/8 socket.



Basic Setup Dimensions & Assembly Notes

It is critically important that you start with square and level footings, concrete pad or deck to attach your structure


- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step.
 Using incorrect hardware may result in improper assembly.
- Remember to double check for underground utilities and overhead electrical lines.


Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface.


- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased seperately. You must ensure there is ample structural support under the deck before permanently attaching.

Ground Dimension

EXAMPLE: 14' (4.3m) x 10' (3m) x 7' 11-1/8" (2.4m)

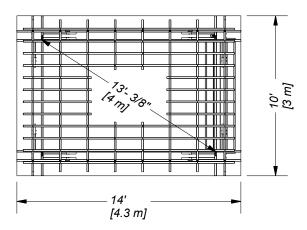

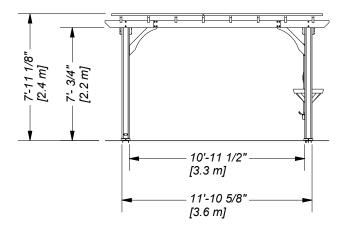

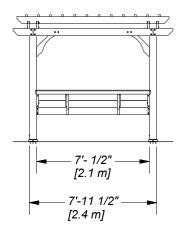


Owner's Manual

Parts Identification

Wood Components (Not to Scale) D01 | JOIST - W4L12974 (x2) | 1 3/8"x5 1/4"x95 1/4" (36x134x2420) **D02** | JOIST - W4L12983 (x2) | 1 3/8"x5 1/4"x95 1/4" (36x134x2420) **D03** | **JOIST END - W4L12994** (x2) | 1 3/8"x5 1/4"x39 3/4" (36x134x1008) **D04** | JOIST END - W4L12973 (x2) | 1 3/8"x5 1/4"x39 3/4" (36x134x1008) **D05** | JOIST END - W4L12982 (x2) 1 3/8"x5 1/4"x39 3/4" (36x134x1008) **D06** | JOIST END - W4L12993 (x2) 1 3/8"x5 1/4"x39 3/4" (36x134x1008) **D07** | **JOIST END - W4L12996** (x4) | 1 7/16"x5 1/4"x17 3/4" (36x134x451) **D08** | **JOIST - W4L12977** (x2) | 1 3/8"x5 1/4"x90" (36x134x2286) **D09** | JOIST - W4L12975 (x2) | 1 3/8"x5 1/4"x90" (36x134x2286) **D10** | JOIST END - W4L12972 (x4) | 1 3/8"x5 1/4"x17 3/4" (36x134x451)

Parts Identification

Wood Components (Not to Scale)

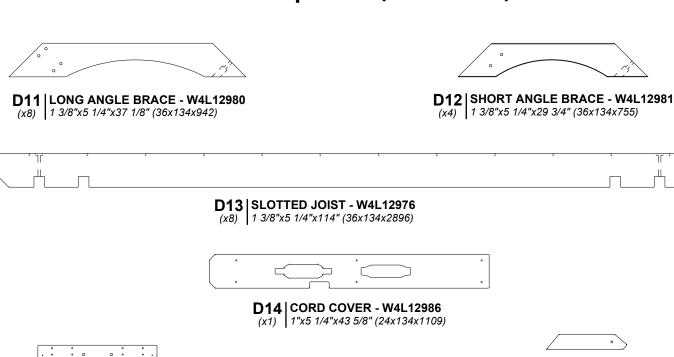

F01 | TABLE TOP RAIL - W4L12989 (x2) | 1 3/8"x2"x18 5/8" (36x50x473)

F03 | ANGLE BRACE - W4L12991 (x1) | 1 3/8"x2 3/8"x12 5/8" (36x60x320)

G02 | ANGLE BRACE - W4L12995 (x4) | 1"x5 1/4"x16 5/8" (24x134x369) H01 | TABLE TOP TRIM - W4L12985 (x4) | 1"x3"x8 1/2" (24x76x216) F02 | ANGLE BRACE - W4L12988 (x1) | 1 3/8"x2 3/8"x12 5/8" (36x60x320)

F04 ANGLE BRACE - W4L12992 (x2) 1 3/8"x2 3/8"x12 5/8" (36x60x320)

J01 | CORD COVER - W4L12987 (x1) | 1"x2 3/8"x7 7/8" (24x60x201)


P01 | PURLIN - W4L12978
(x12) | 1 3/8"x1 3/8"x69 5/8" (36x36x1768)

P02 | PURLIN - W4L12979 (x12) | 1 3/8"x1 3/8"x90 1/4" (36x36x2291)

P03 | CLEAT - W4L12997 (x2) | 1 3/8"x1 3/8"x15 7/8" (36x36x403)

W01 | **TABLE TOP RAIL - W4L12984** (x2) | 2"x3"x84 1/2" (50x76x2146)

Wood Components (Not to Scale)

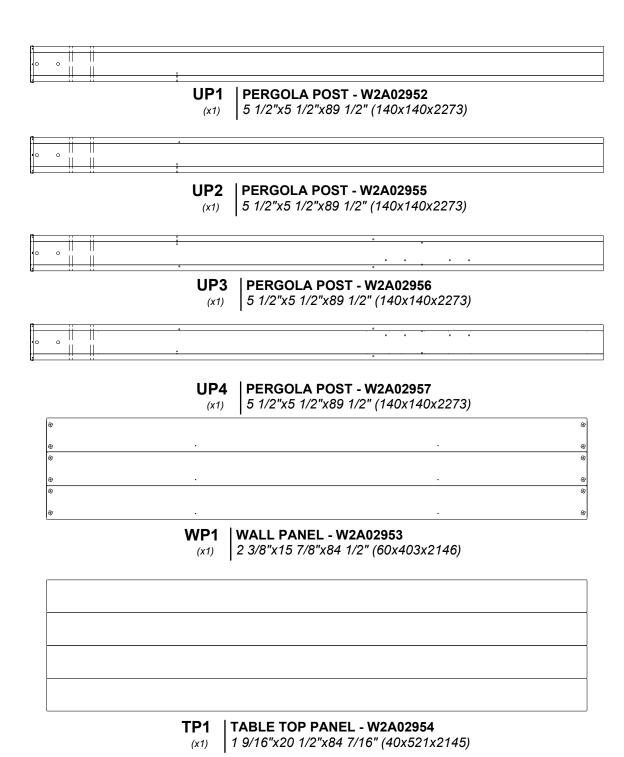




Owner's Manual

Parts Identification

Hardware Components

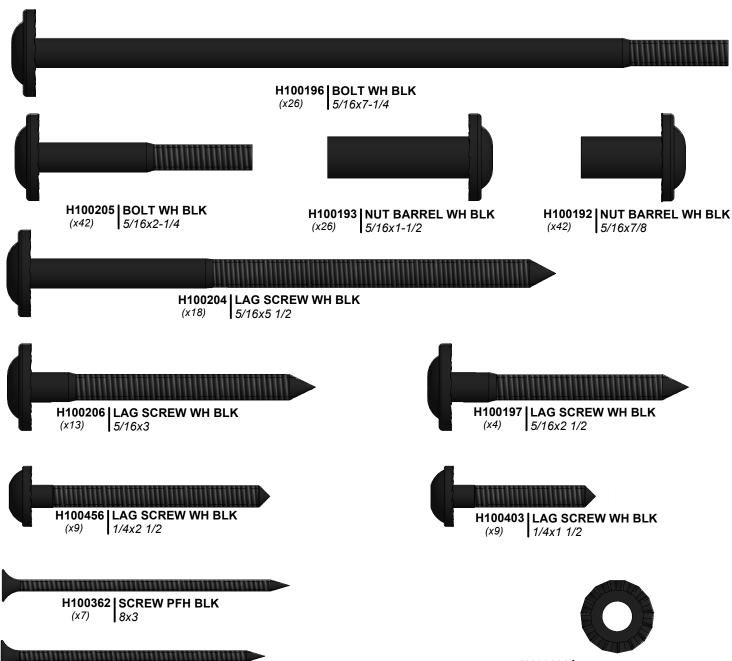

H100821 | SCREW PFH BLK (x28) 8x2-3/4

H100201 | SCREW PFH BLK (x110) 8x2-1/2

H100391 | SCREW PFH BLK (x30) 8x2





(x13) 8x3/4

H100392 | SCREW PWH BLK

H100120 | SCREW CONCRETE ANCHOR 1/4x2



H100198 WASHER LOCK EXT BLK (x100)8x19



H100199 WASHER LOCK EXT BLK (x68) 12x19





H100405 | WASHER LOCK EXT BLK (x9) 6x15



Parts Identification

 
Hardware Components

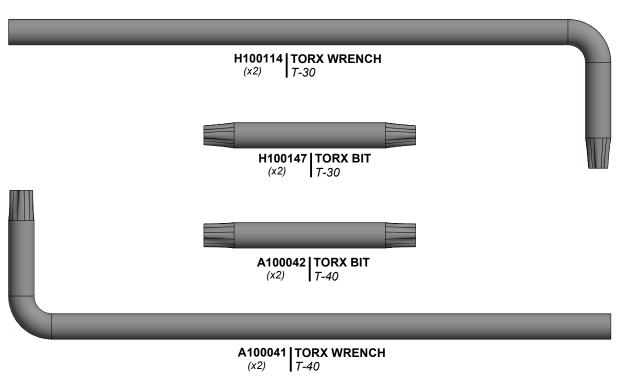






Accessory Components (Not to Scale)

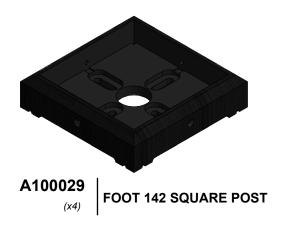

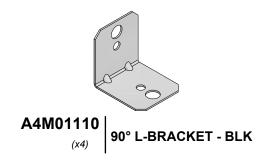






STAIN MARKER









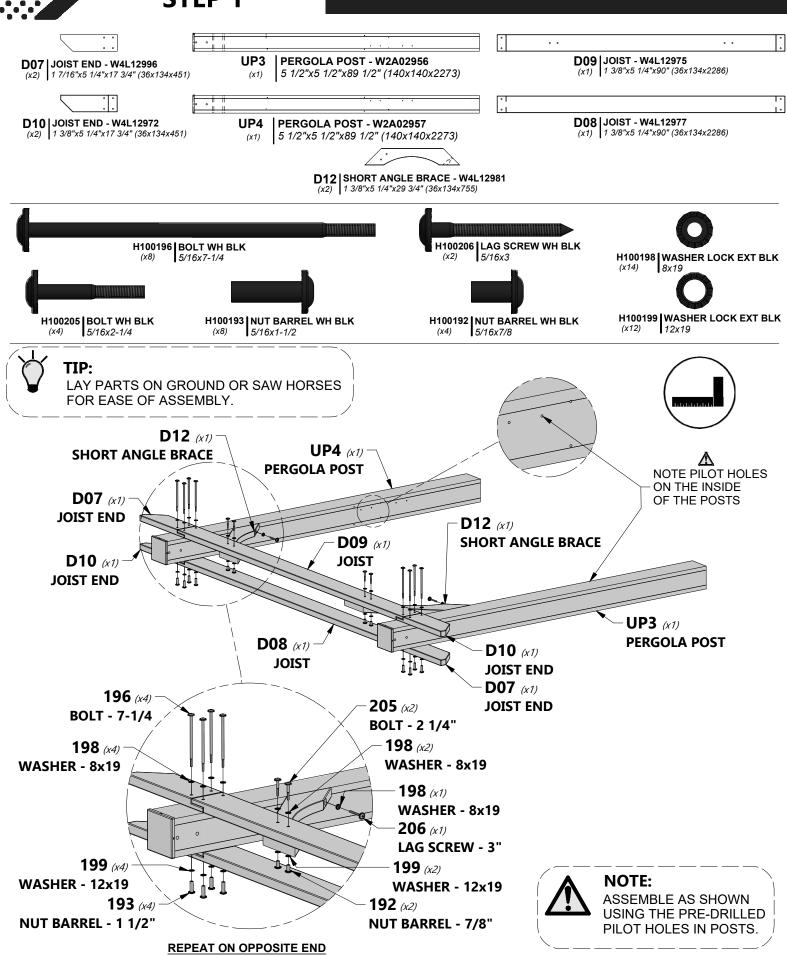



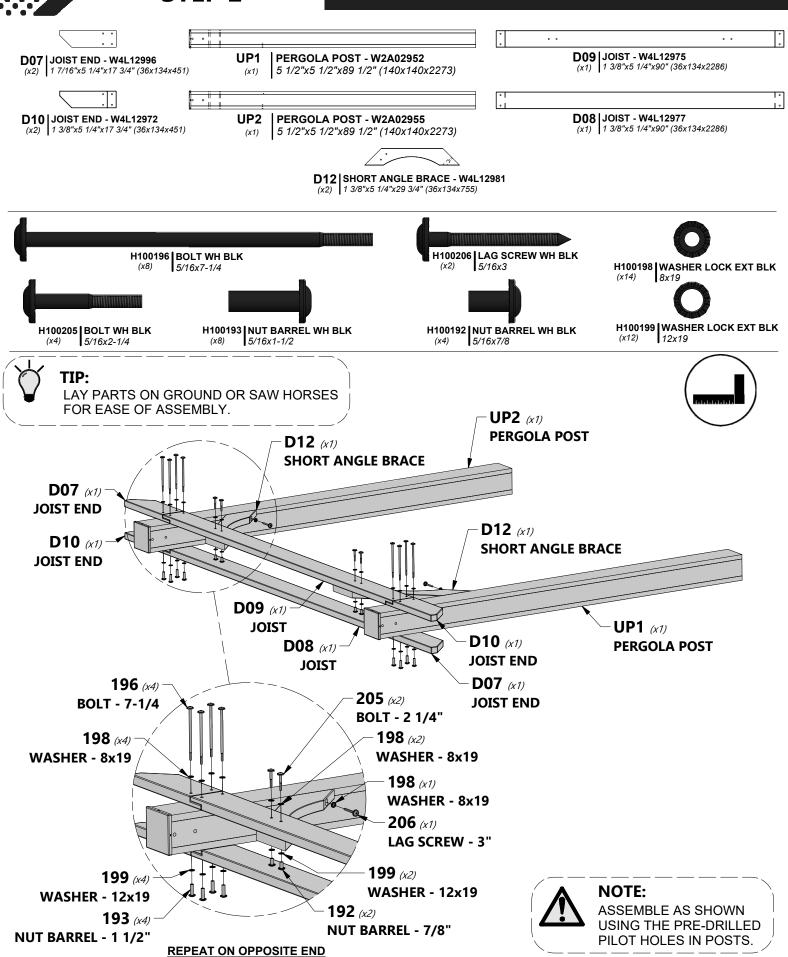



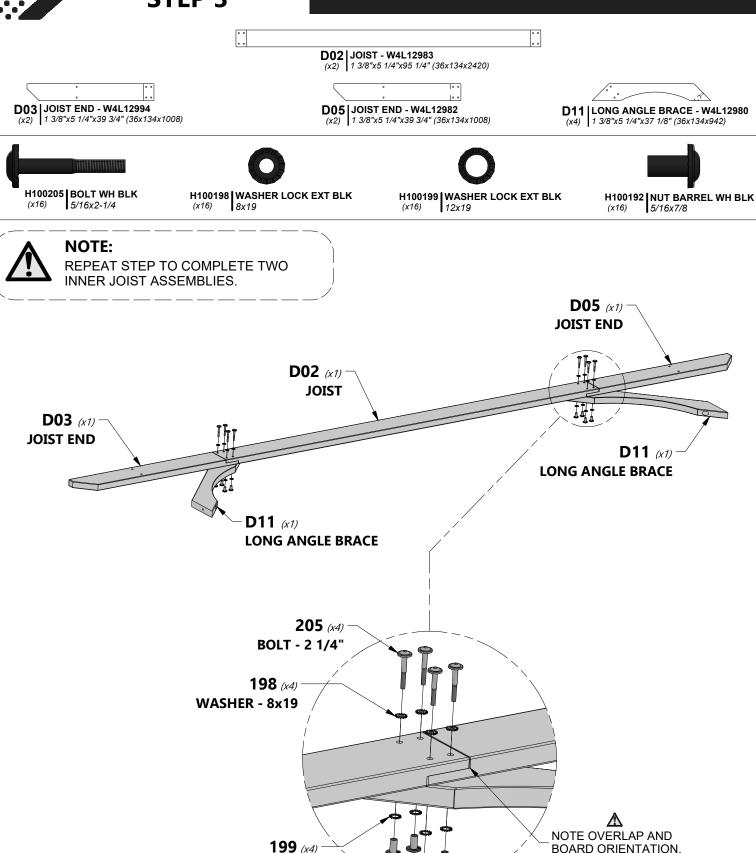

REPEAT ON OPPOSITE END


BOARD ORIENTATION.

192 (x4)

NUT BARREL - 7/8"

WASHER - 12x19



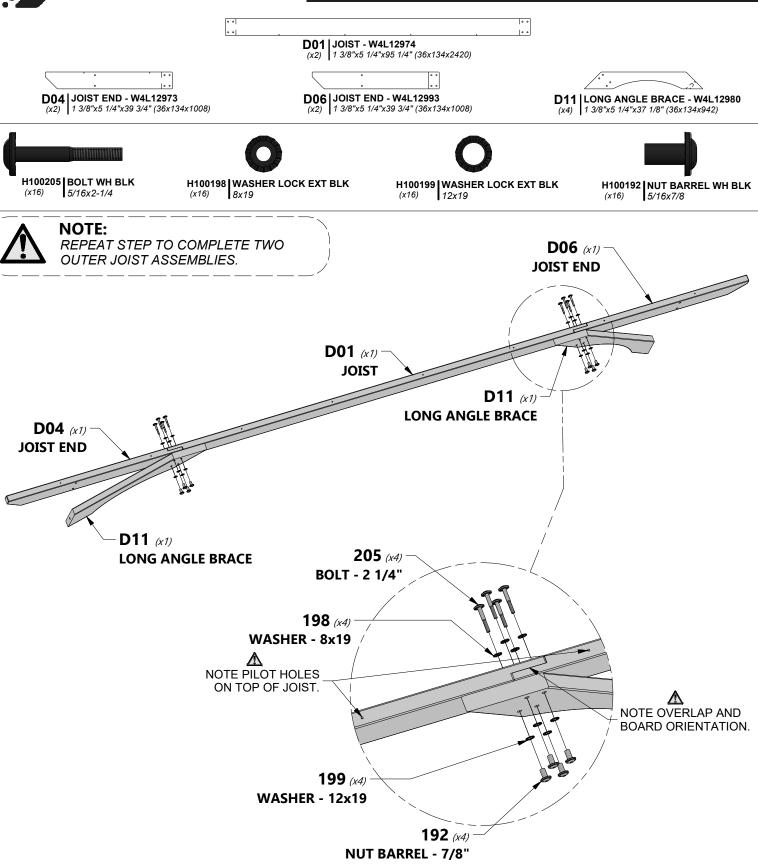

REPEAT ON OPPOSITE END

 




(x1) FRONT UPRIGHT ASSEMBLY FROM PREVIOUS STEPS




(x1) REAR UPRIGHT ASSEMBLY FROM PREVIOUS STEPS



(x2) INNER JOIST ASSEMBLY FROM PREVIOUS STEPS





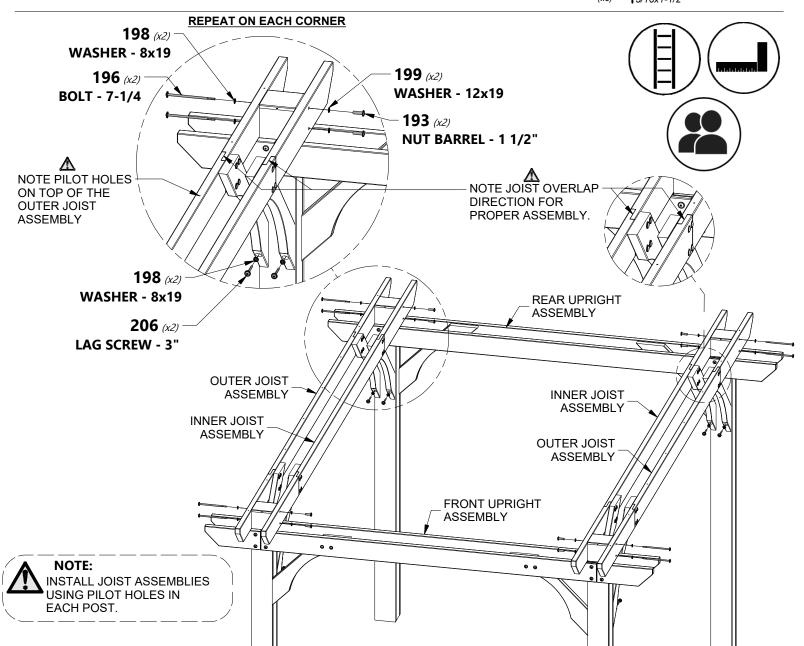




D13 | SLOTTED JOIST - W4L12976 (x8) | 1 3/8"x5 1/4"x114" (36x134x2896)

H100204 LAG SCREW WH BLK (x16) 5/16x5 1/2

H100198 WASHER LOCK EXT BLK
(x16) 8x19

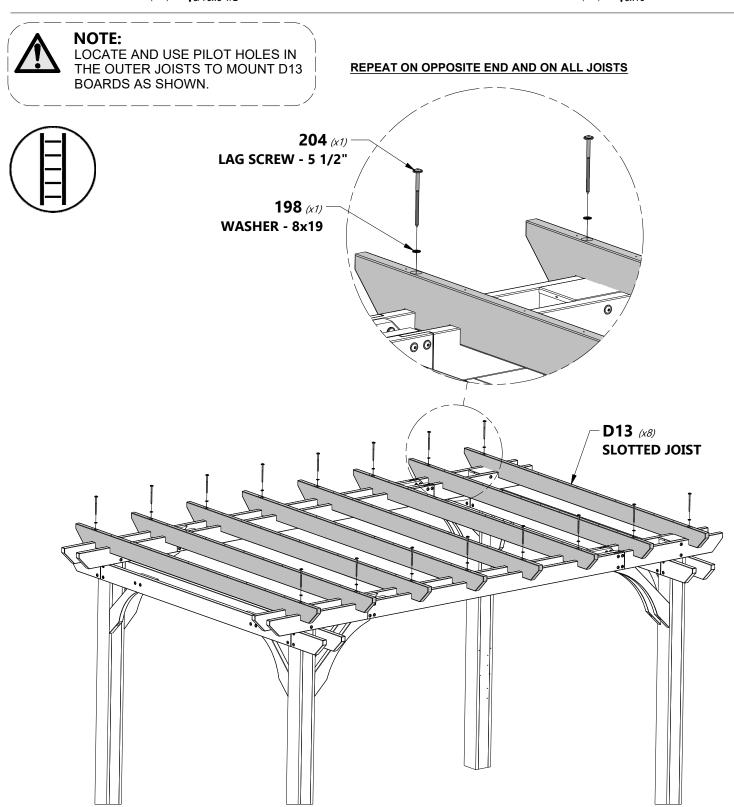



P01


| PURLIN - W4L12978

(x12) 1 3/8"x1 3/8"x69 5/8" (36x36x1768)

H100201 SCREW PFH BLK (x96) 8x2-1/2

P02 (x12) **PURLIN - W4L12979**

1 3/8"x1 3/8"x90 1/4" (36x36x2291)

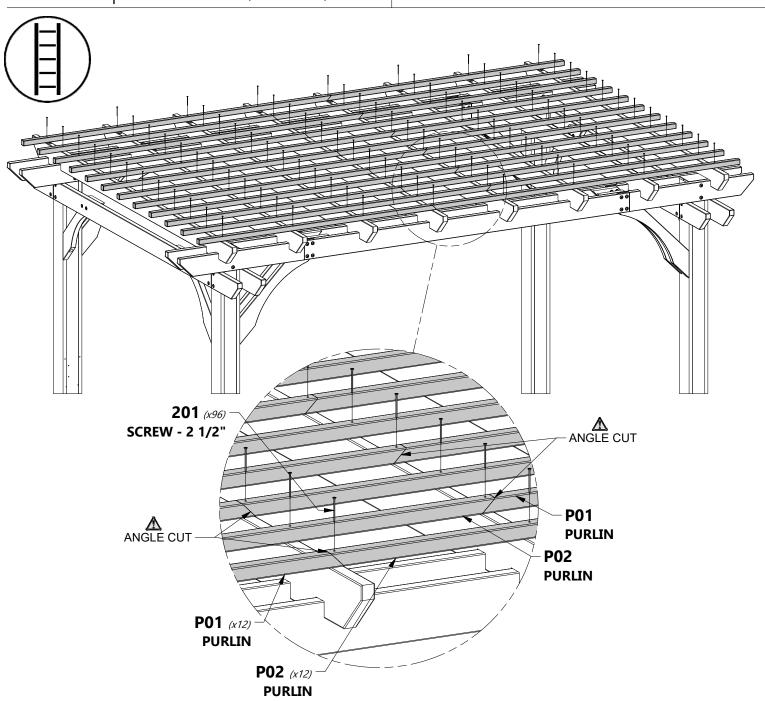



NOTE:


ASSEMBLE P01 & P02 BOARDS BY ALTERNATING THEM AS YOU WORK ACROSS THE JOIST BOARDS. AS SHOWN THE ANGLE CUT IN THE P01 & P02 BOARDS SHOULD ALTERNATE WHICH JOIST THEY LAND ON WHEN ASSEMBLED.





WP1 WALL PANEL - W2A02953 2 3/8"x15 7/8"x84 1/2" (60x403x2146)



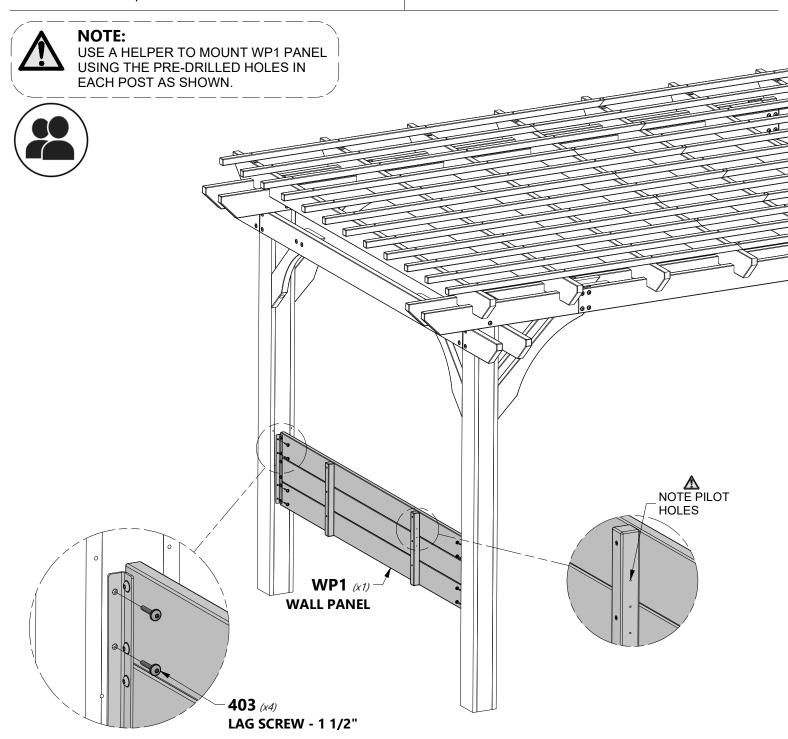

REPEAT ON OPPOSITE END




.::...:.

F01 TABLE TOP RAIL - W4L12989 (x2) 1 3/8"x2"x18 5/8" (36x50x473)





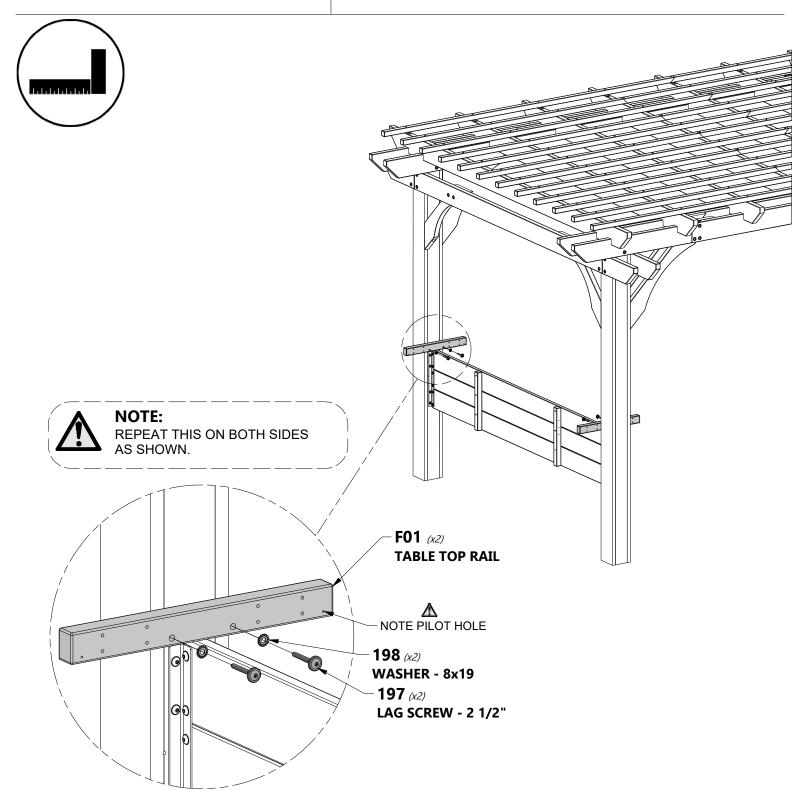




F02 | ANGLE BRACE - W4L12988 (X1) | 1 3/8"x2 3/8"x12 5/8" (36x60x320)

F03 | ANGLE BRACE - W4L12991 (X1) | 1 3/8"x2 3/8"x12 5/8" (36x60x320)


H100456 LAG SCREW WH BLK
(x8) 1/4x2 1/2

H100405 WASHER LOCK EXT BLK
(x8) 6x15

F04 | ANGLE BRACE - W4L12992 (X2) | 1 3/8"x2 3/8"x12 5/8" (36x60x320)

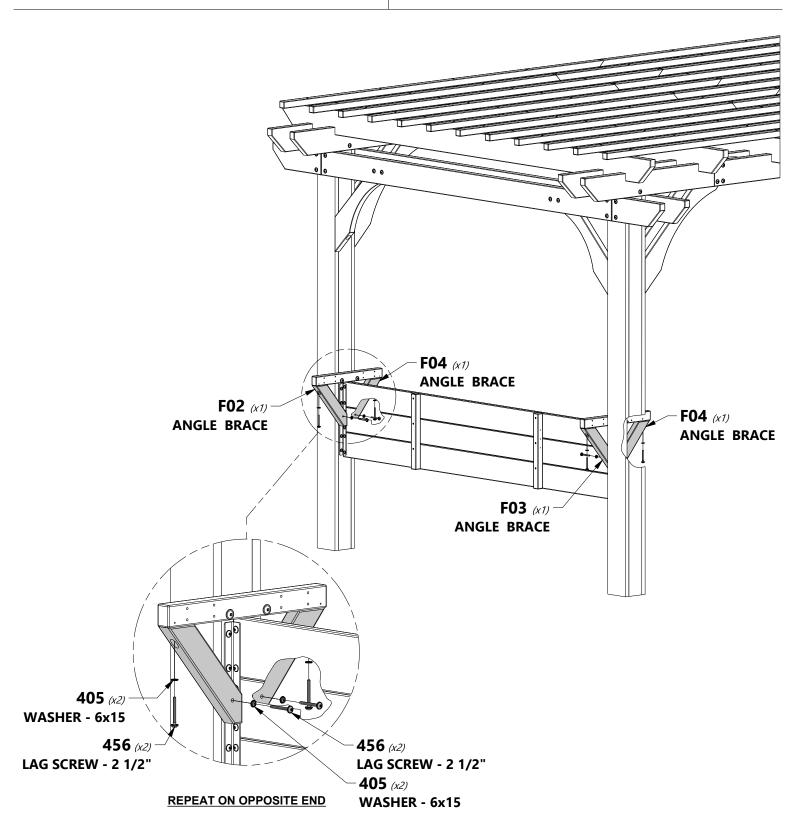




 


TP1 | TABLE TOP PANEL - W2A02954 | 1 9/16"x20 1/2"x84 7/16" (40x521x2145)


H100821 SCREW PFH BLK (x8) 8x2-3/4

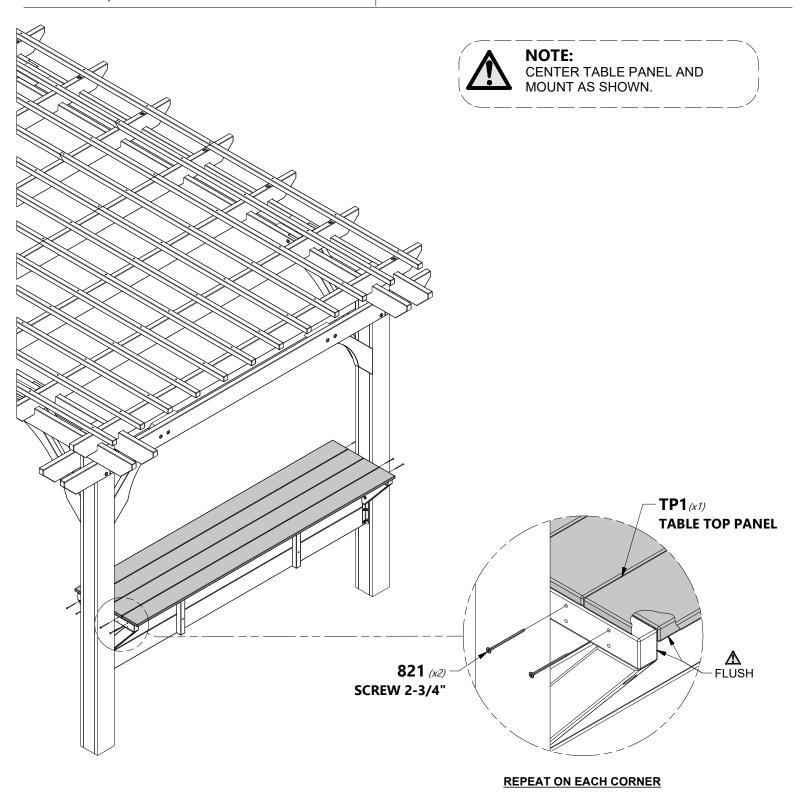




W01 | TABLE TOP RAIL - W4L12984 (x2) | 2"x3"x84 1/2" (50x76x2146)

 

 

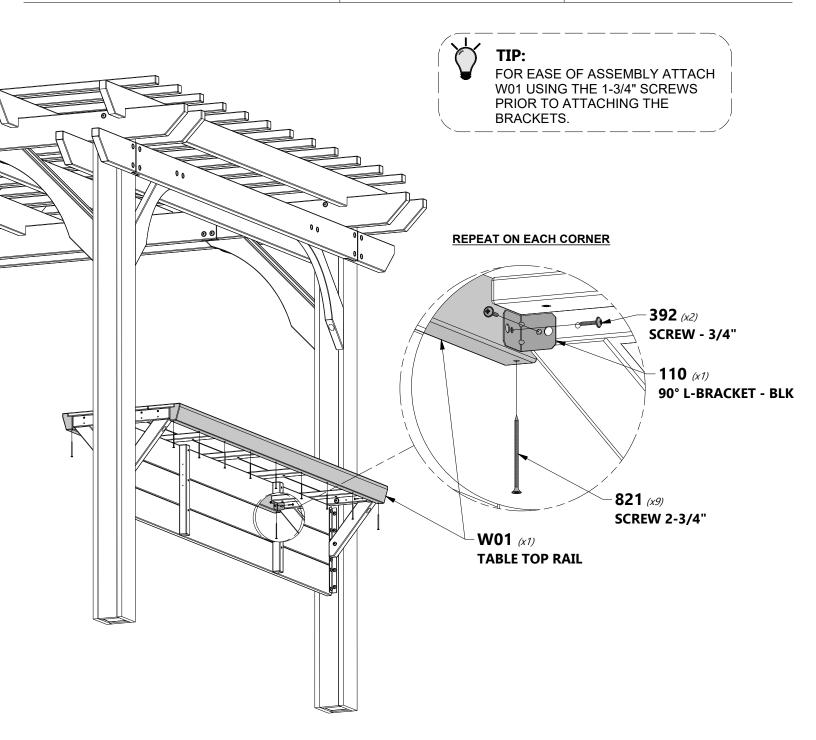






P03 CLEAT - W4L12997
(x2) 1 3/8"x1 3/8"x15 7/8" (36x36x403)

H100362 SCREW PFH BLK 8x3



NOTE:

ATTACH P03 BOARD AS SHOWN. PAY ATTENTION TO THE PILOT HOLE LOCATIONS ON THE CLEAT. FAILURE TO DO THIS WILL RESULT IN MISALIGNMENT FOR THE ANGLE BRACES.

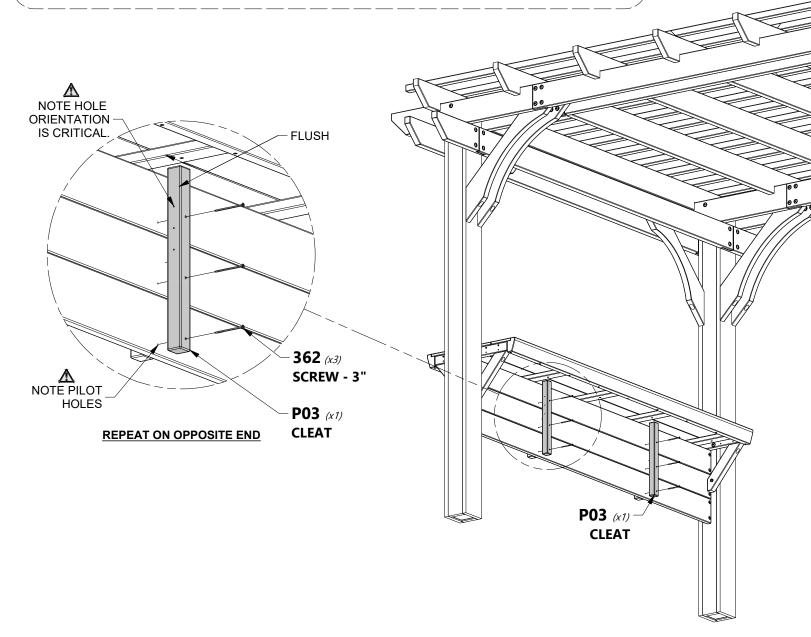











NOTE:


COMPLETE THESE STEPS FOR BOTH SIDES OF THE BAR.

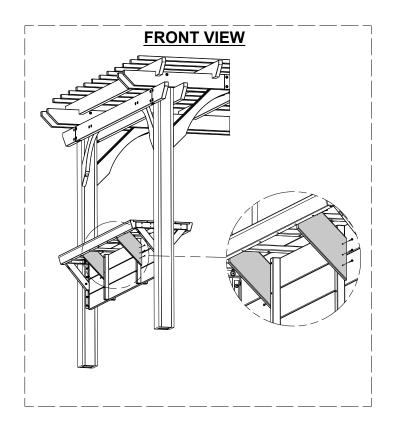

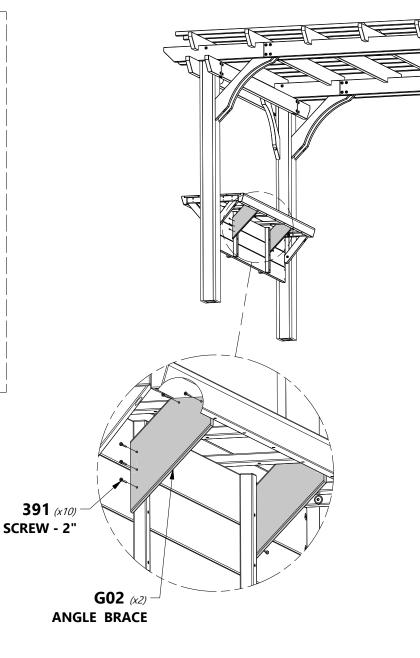



FRIM - W4L12985 (x8) SCREW PFH BLK (x8) 8x2

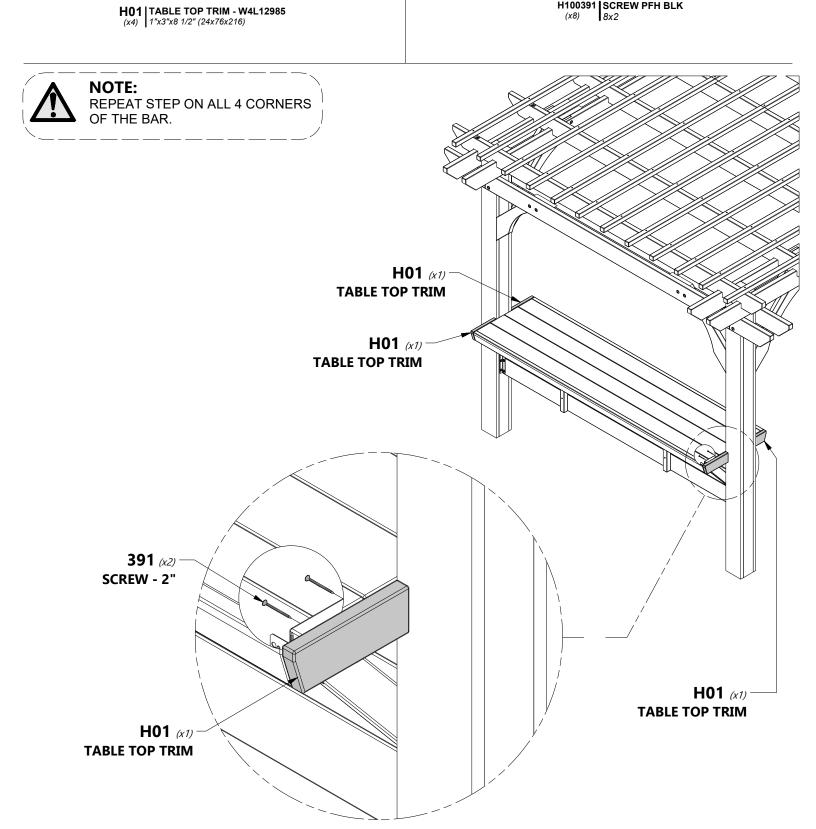





D14 | CORD COVER - W4L12986 (x1) | 1"x5 1/4"x43 5/8" (24x134x1109)

J01 | CORD COVER - W4L12987 (x1) | 1"x2 3/8"x7 7/8" (24x60x201)


 $\left. {
m A6P00265}\atop (\chi 1) \right|$ 5' PERGOLA ELECTRICAL OUTLET ASSEMBLY


H100201 SCREW PFH BLK 8x2-1/2

 \triangle

NOTE:

CENTER D14 ON THE POST AND CENTER SLOT ON D14 ON THE BAR THEN ASSEMBLE AS SHOWN.

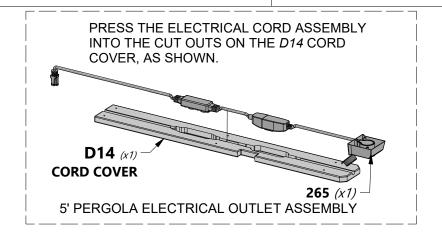

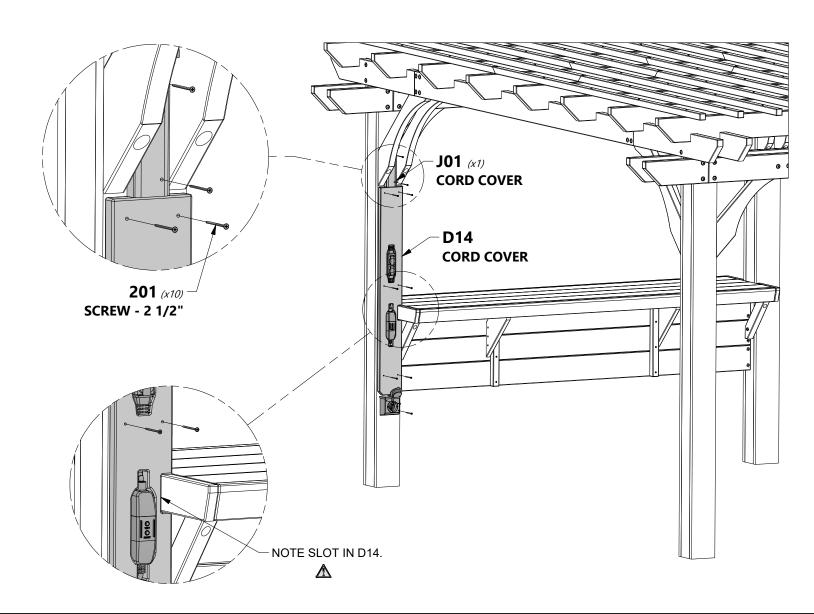








NOTE:

DECIDE WHERE TO PLACE THE PERGOLA. NOTE THIS MOUNTING PROCEDURE IS MEANT TO BE USED ON CONCRETE ONLY.

PLACE THE PERGOLA EXACTLY WHERE IT WILL BE ANCHORED WHEN COMPLETED AND SLIDE A FOOT UNDER EACH POST.

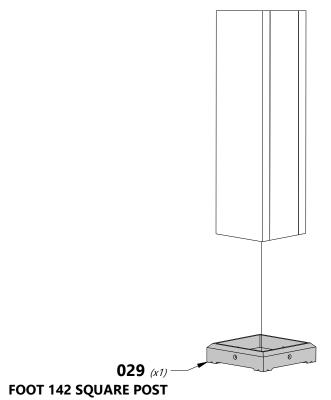

REPEAT ON ALL POSTS





NOTE:


SQUARE POSTS AND TIGHTEN ALL BOLTS AND SCREWS AT THIS TIME.





NOTE:

USE CHALK TO TRACE AROUND THE EDGES OF EACH FOOT TO MARK THE FEET LOCATIONS.

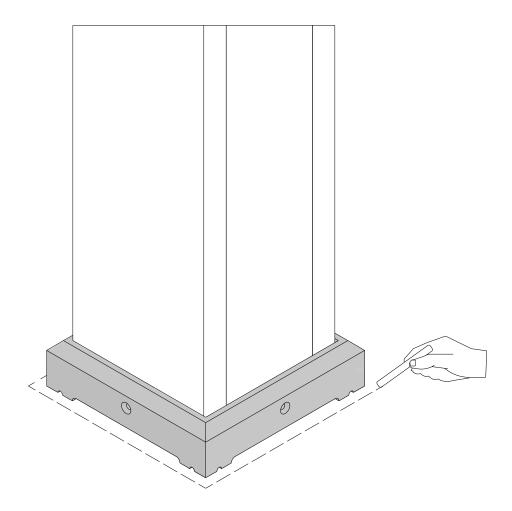










NOTE:

MOVE THE PERGOLA ASIDE AND PLACE EACH FOOT INSIDE THE LINES DRAWN IN THE PREVIOUS STEP. NOW, USE A 3/16" CONCRETE DRILL BIT TO DRILL PILOT HOLES INTO THE CONCRETE PAD.

NEXT, USE THE PROVIDED CONCRETE ANCHORS TO ATTACH EACH FOOT TO THE CONCRETE SURFACE.

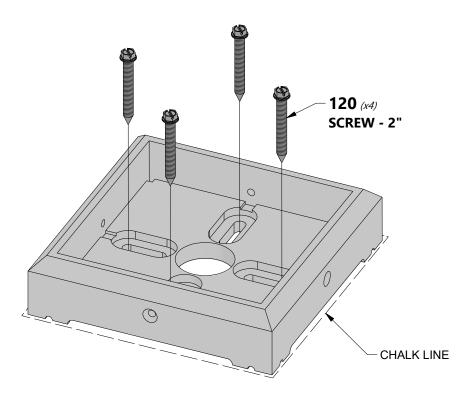

REPEAT ON ALL FEET






H100200 SCREW PFH BLK (x16) 8x1 1/2



NOTE:

MOVE THE PERGOLA BACK INTO PLACE, SETTING EACH POST INSIDE A FOOT AND MOUNT AS SHOWN USING THE PROVIDED HARDWARE.



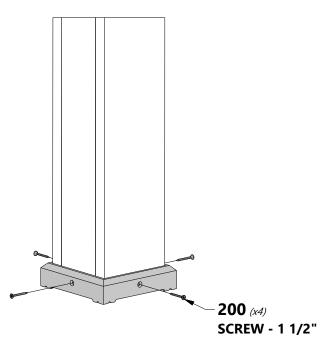

REPEAT ON ALL POSTS









