



Manufactured by: Backyard
Discovery
3305 Airport Drive, Pittsburg,
KS 66762 800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone:
0800-118-2476 J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

SWEETWATER CHICKEN COOP

MODEL # : 2308022



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order
replacement parts *Para obtener instrucciones en español, visite*
www.backyarddiscovery.com



EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP




OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings or concrete pad to attach your structure.


- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. using incorrecdt hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included
- The hardware to mount the sctructure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.

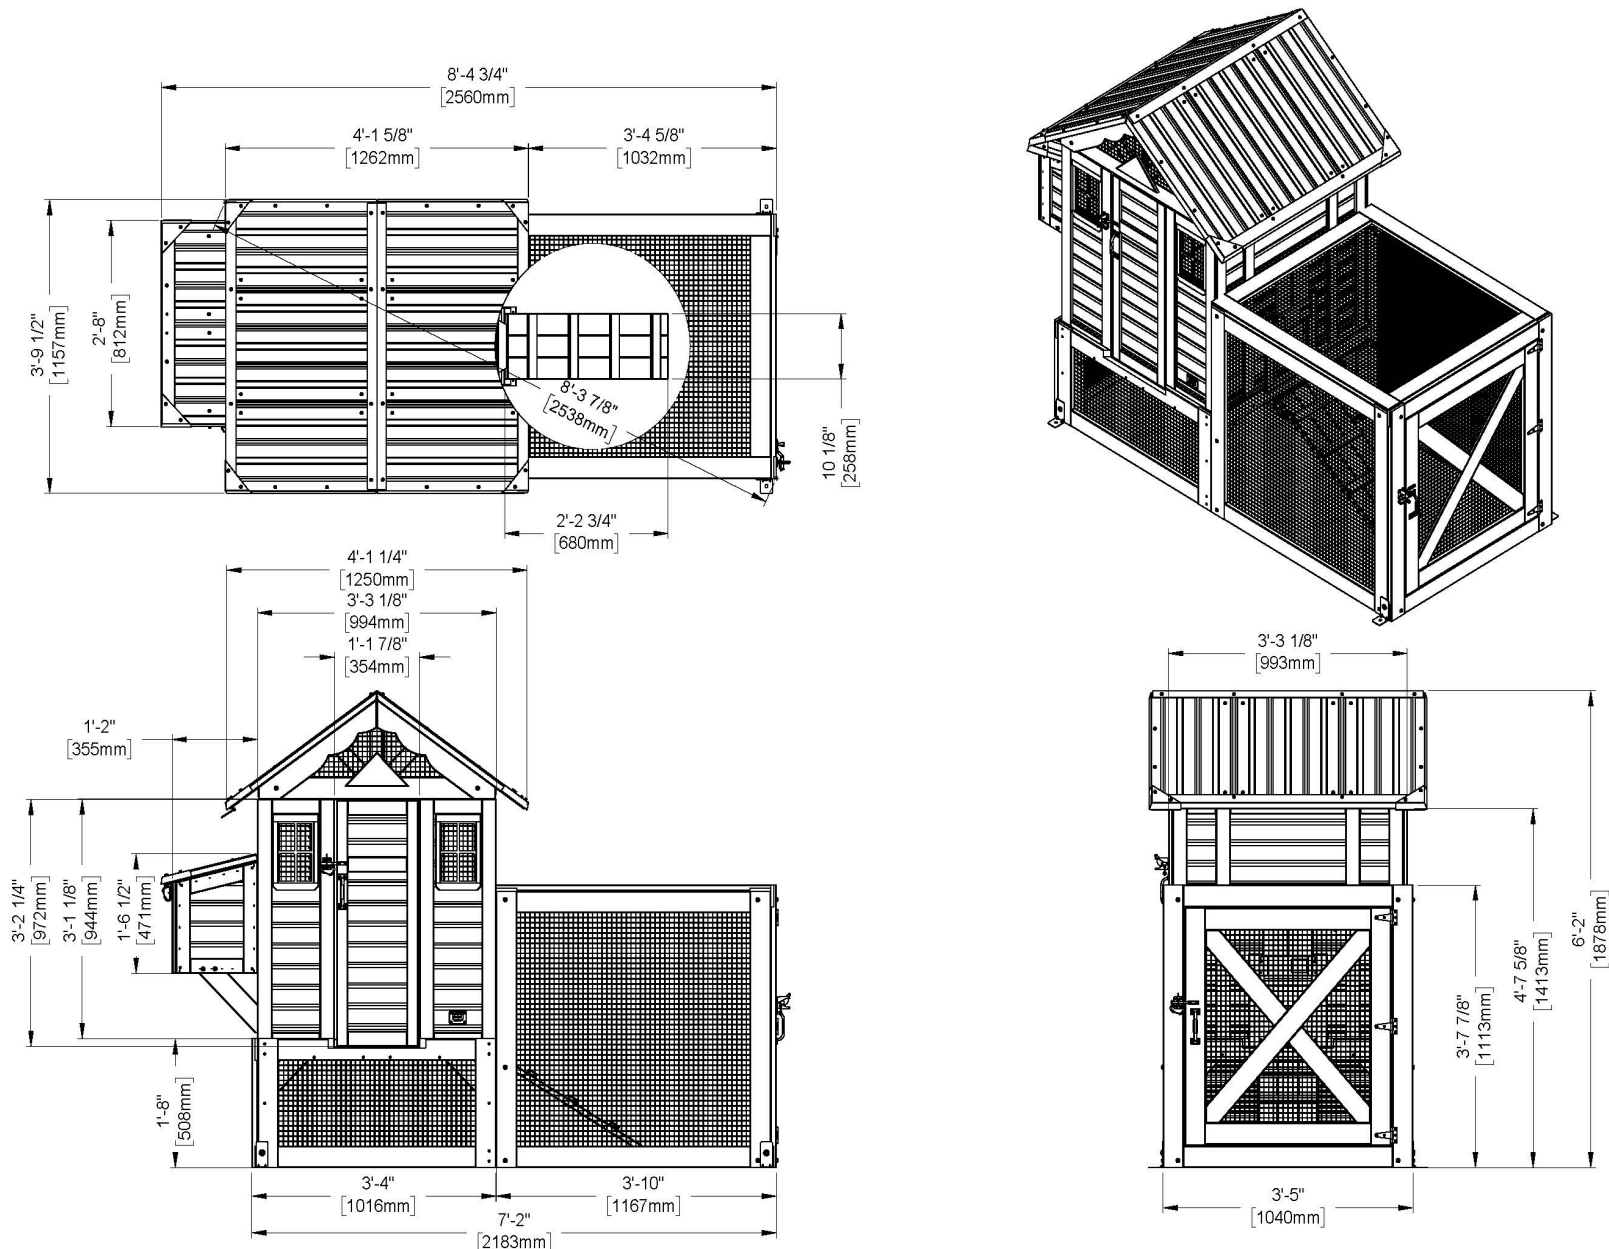

OWNER'S MANUAL - ANCHORING LAYOUT

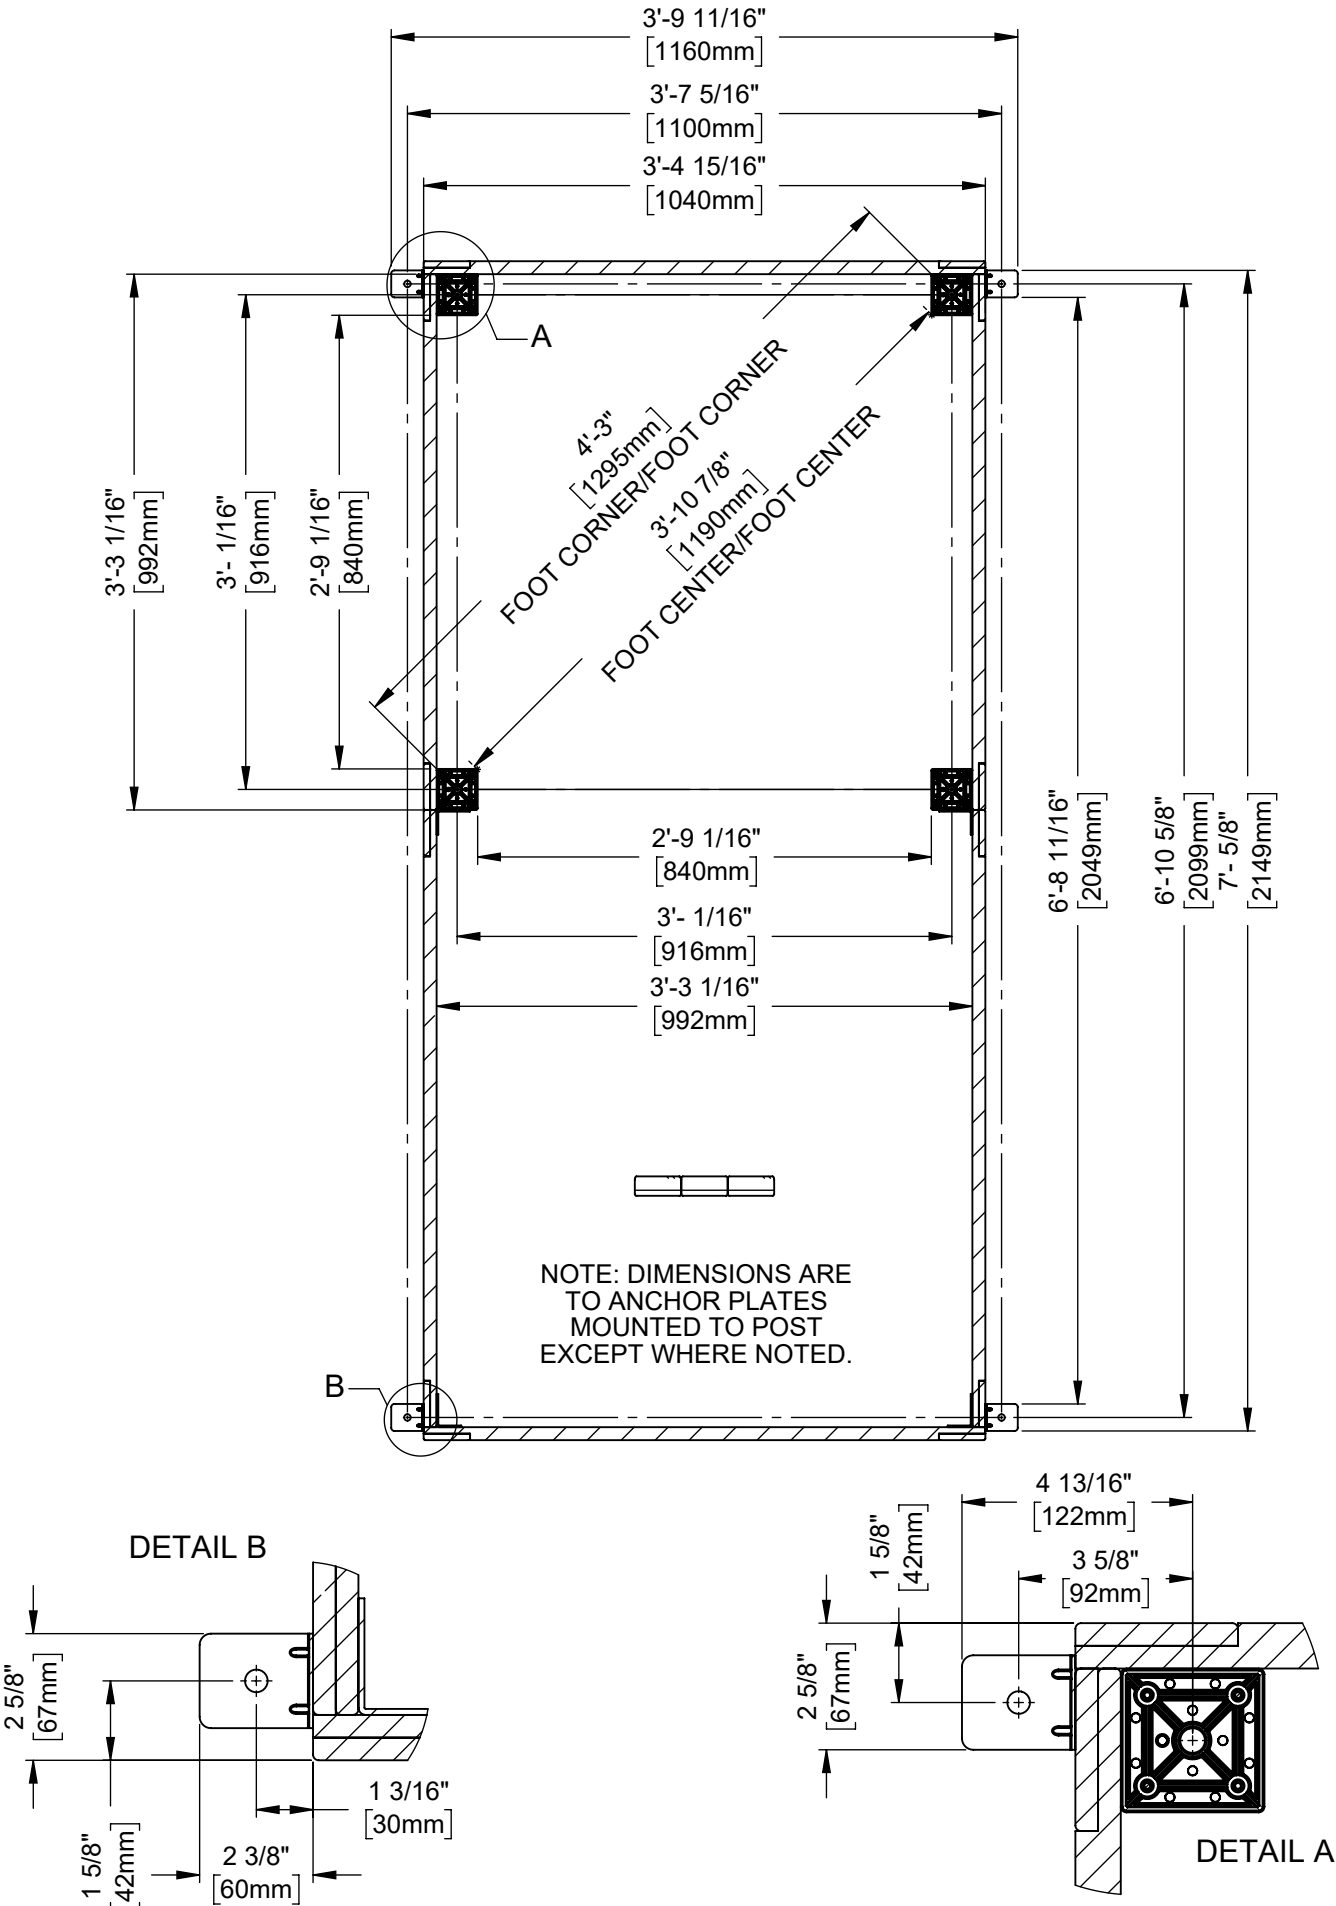

OWNER'S MANUAL - PARTS IDENTIFICATION

WOOD COMPONENTS (NOT TO SCALE)



B1 BASE SUPPORT - W4L20492
(x1) 3"x3"x17 15/16" (76x76x456)



B2 BASE SUPPORT - W4L20525
(x1) 3"x3"x17 15/16" (76x76x456)




B3 BASE SUPPORT - W4L21439
(x1) 3"x3"x17 15/16" (76x76x456)




B4 SUPPORT BOARD - W4L21440
(x1) 3"x3"x17 15/16" (76x76x456)



D1 BASE RAMP - W4L20498
(x1) 1 7/16"x4 5/16"x12 1/8" (36x109x308)

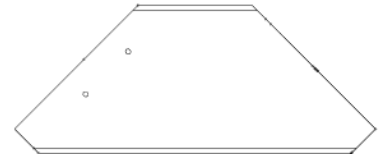

E1 CORBEL - W4L20496
(x4) 1 7/16"x3 3/8"x8 1/4" (36x86x210)

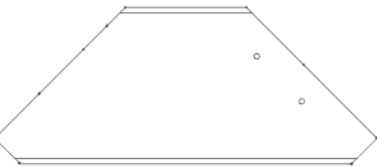

E2 CORBEL - W4L20771
(x4) 1 7/16"x3 3/8"x8 1/4" (36x86x210)



E3 CORBEL - W4L21297
(x2) 1 7/16"x3 3/8"x15" (36x86x380)




H1 ROOF CLEAT - W4L20499
(x2) 15/16"x3 3/8"x38 13/16" (24x86x986)




H2 ROOF CLEAT W4L20510
(x1) 15/16"x3 3/8"x28 1/2" (24x86x724)



H3 ROOF CLEAT - W4L20515
(x2) 15/16"x3 3/8"x40 1/16" (24x86x1018)



H4 RUN FRAME BOARD - W4L21441
(x2) 15/16"x3 3/8"x40 15/16" (24x86x1040)



H5 RUN FRAME BOARD - W4L21443
(x1) 15/16"x3 3/8"x43 13/16" (24x86x1113)



H6 RUN FRAME BOARD - W4L21444
(x1) 15/16"x3 3/8"x43 13/16" (24x86x1113)



J1 RAMP SPACER - W4L20497
(x1) 15/16"x2 3/8"x12 1/8" (24x60x308)



J2 ROOF CLEAT - W4L20512
(x4) 15/16"x2 3/8"x30 1/16" (24x60x764)




J3 ROOF CLEAT - W4L20516
(x2) 15/16"x2 3/8"x40 1/16" (24x60x1018)




J4 FLOOR BRACE - W4L20773
(x1) 15/16"x2 3/8"x37 3/16" (24x60x944)



L1 GABLE BOARD - W4L20514
(x2) 5/8"x4 7/16"x25 5/16" (16x112x643)



L2 GABLE BOARD - W4L20774
(x2) 5/8"x4 7/16"x25 5/16" (16x112x643)

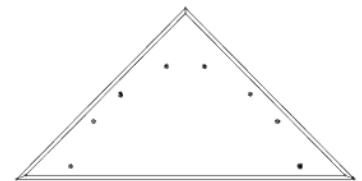

G1 TRIANGLE SUNBURST - W4L21437
(x2) 15/16"x5 1/4"x10 7/16" (24x134x265)



L3 END FLOOR BOARD - W4L20494
(x2) 5/8"x4 3/16"x39 1/16" (16x106x992)



M1 FLOOR BOARD - W4L20493
(x9) 5/8"x3 3/8"x39 1/16" (16x86x992)




H7 X FRAME BOARD - W4L21834
(x1) 15/16"x3 3/8"x44 13/16" (24x86x1138)



H8 X FRAME BOARD - W4L21835
(x1) 15/16"x3 3/8"x44 13/16" (24x86x1138)


OWNER'S MANUAL - PARTS IDENTIFICATION

WOOD COMPONENTS (NOT TO SCALE)

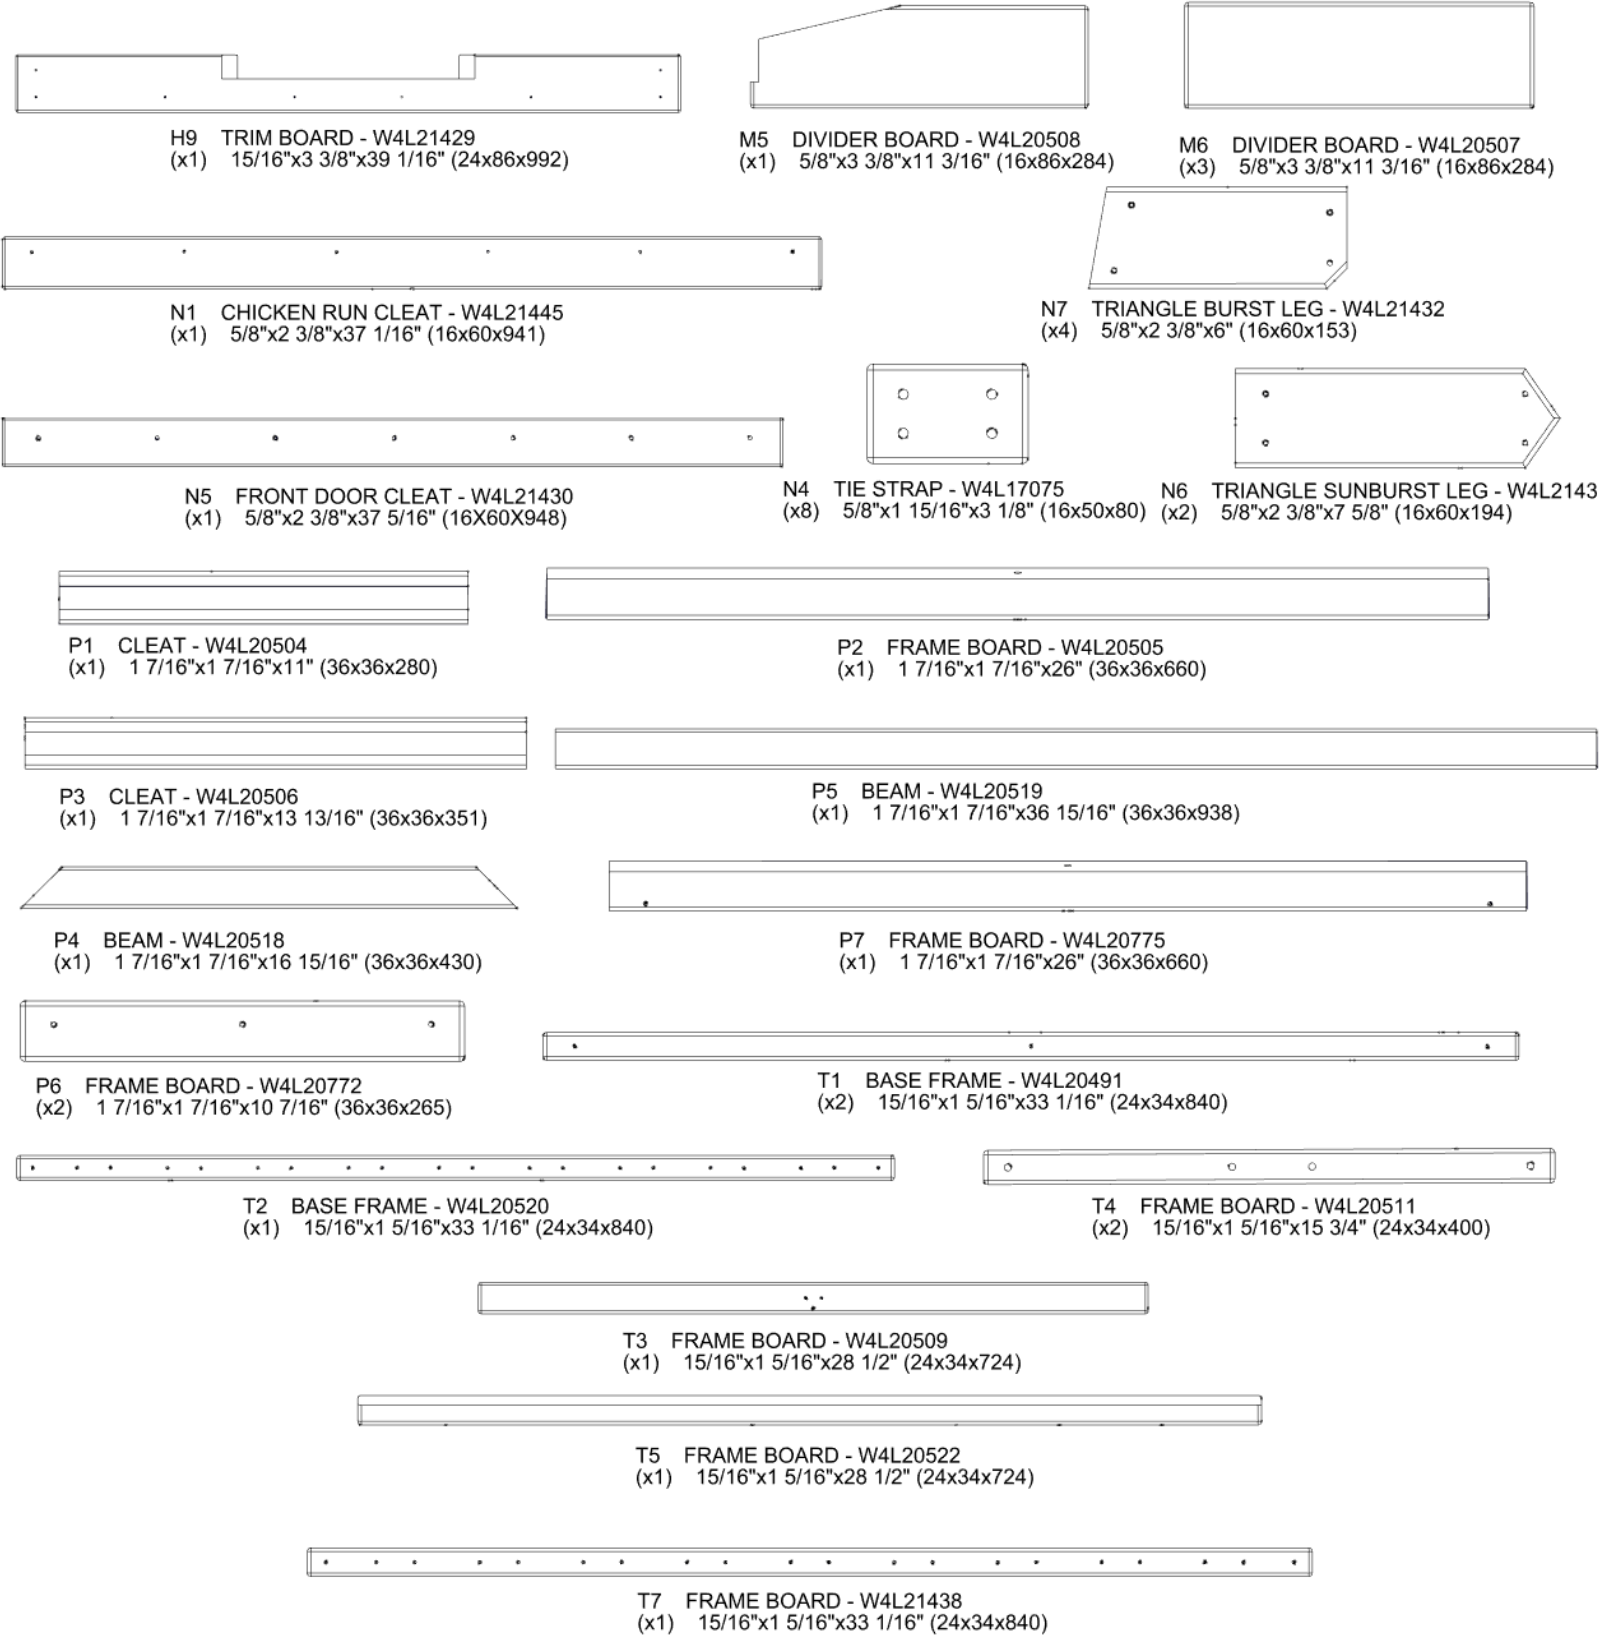


OWNER'S MANUAL - PARTS IDENTIFICATION


WOOD COMPONENTS (NOT TO SCALE)

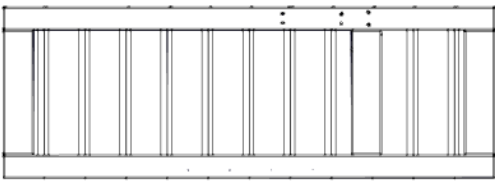


FR01 FRONT DOOR - W2A04405
(x1) 1 1/16"x13 5/16"x38 3/16" (27x338x970)

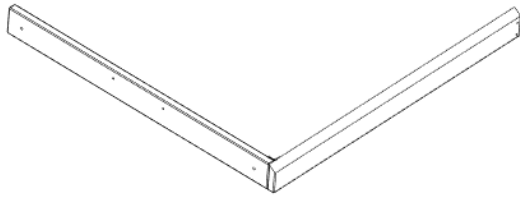


HA01 HEADER ASSEMBLY - W2A04406
(x2) 3 3/8"x37 7/8"x38 13/16" (86x962x986)

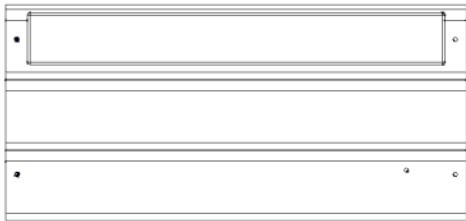


RP01 RIGHT CENTER PANEL - W2A04412
(x1) 1 1/2"x9 3/4"x21 5/8" (38x248x530)

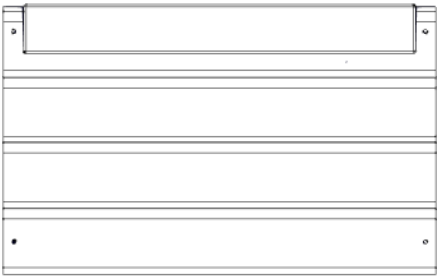


RP02 RIGHT TOP PANEL - W2A04413
(x1) 1 1/2"x13 1/16"x20 7/8" (38x332x530)

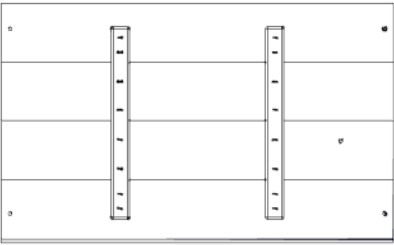


BP02 BACK MIDDLE PANEL - W2A04414
(x1) 7/8"x12 15/16"x21 1/8" (22x329x536)

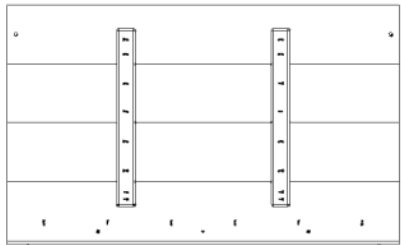


BP01 BACK BOTTOM PANEL - W2A04415
(x1) 1 1/2"x12 15/16"x21 1/8" (38x329x536)

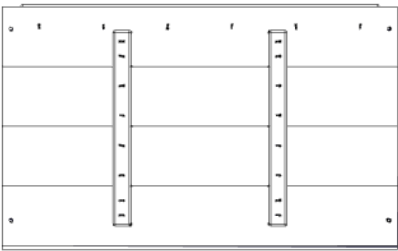


BP03 BACK TOP PANEL - W2A04416
(x1) 1 1/2"x13 1/16"x21 1/8" (38x332x536)

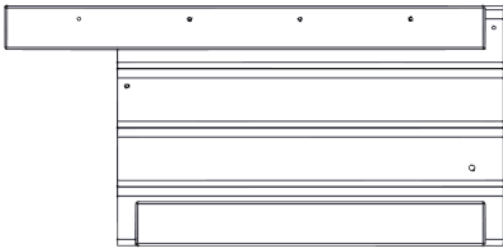


LP01 LEFT BOTTOM PANEL - W2A04419
(x1) 1 1/2"x12 15/16"x26 15/16" (38x329x685)

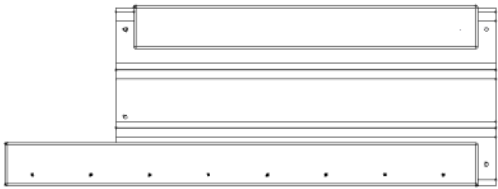

LP02 LEFT TOP PANEL - W2A04420
(x1) 1 1/2"x9 7/8"x26 15/16" (38x251x685)

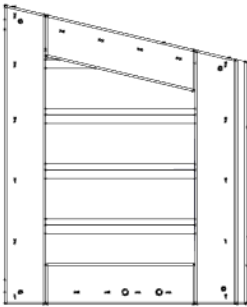

NP01 LEFT BOX PANEL - W2A04421
(x1) 2 1/2"x14"x17 5/16" (63x356x440)

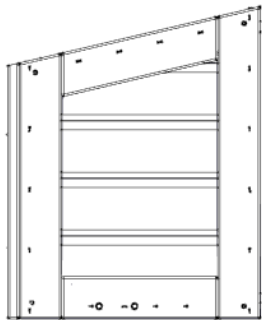


NP02 RIGHT BOX PANEL - W2A04422
(x1) 2 1/2"x14"x16 1/4" (63x356x440)




BB01 BOX BASE - W2A04423
(x1) 2 1/16"x14 1/8"x27 15/16" (60x356x710)



CR01 CHICKEN RAMP - W2A04425
(x1) 1 9/16"x10 3/16"x30 3/4" (40x258x781)

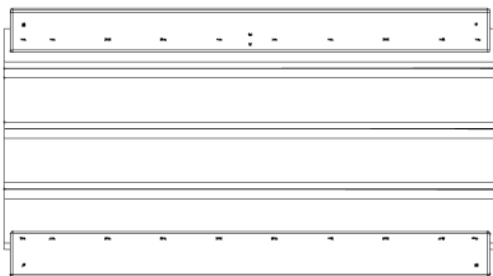


NP03 NESTING BOX BACK PANEL - W2A04477
(x1) 1 1/4"x14 3/16"x25 31/32" (32x360x660)

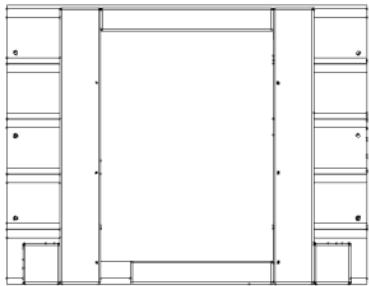


RP03 CHICKEN DOOR WALL PANEL - W2A04625
(x1) 1 1/16"x16 1/8"x20 7/8" (27x410x530)

OWNER'S MANUAL - PARTS IDENTIFICATION


WOOD COMPONENTS (NOT TO SCALE)

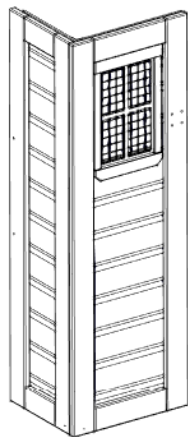


CP01 FRONT LEFT CORNER PANEL - W2A04426
(x1) 10 1/16"x12 5/8"x38 9/16" (256x320x980)

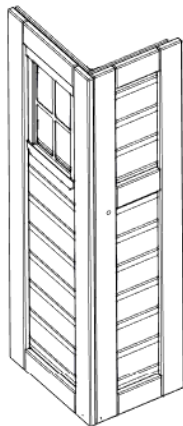


CP02 FRONT RIGHT CORNER PANEL - W2A04427
(x1) 10 1/16"x12 5/8"x38 9/16" (256x320x980)

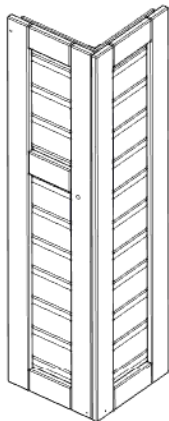


CP03 BACK RIGHT CORNER PANEL - W2A04428
(x1) 10"x10 1/16"x38 9/16" (254x256x980)

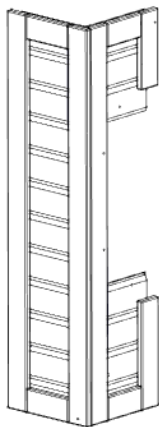


CP04 BACK LEFT CORNER PANEL - W2A04429
(x1) 10"x10 1/16"x38 9/16" (254x256x980)

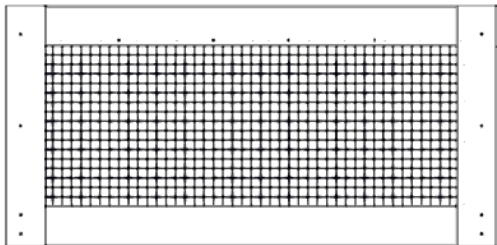


MP01 MESH PANEL - W2A04626
(x1) 15/16"x20"x40 15/16" (24x508x1040)

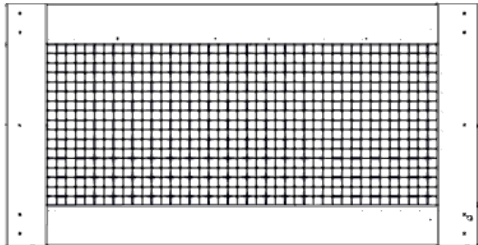


MP02 MESH PANEL - W2A04627
(x1) 15/16"x20"x39 1/16" (24x508x992)

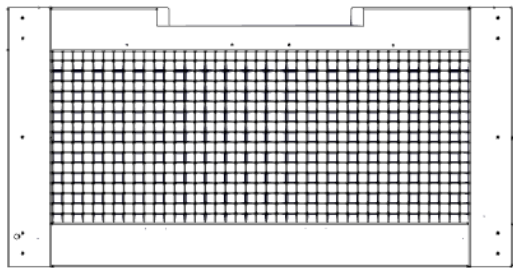

MP03 MESH PANEL - W2A04628
(x1) 15/16"x20"x39 1/16" (24x508x992)

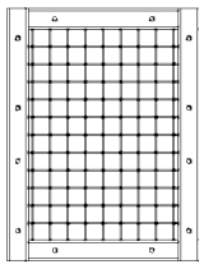


WM01 WINDOW MESH - W2A04622
(x2) 9/16"x8 9/16"x11 1/4" (14x218x286)

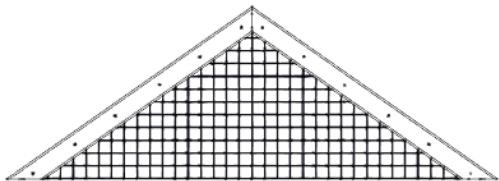


WM02 TRIANGLE WINDOW MESH - W2A04623
(x2) 13/16"x10 5/8"x30 5/16" (19x270x770)

OWNER'S MANUAL - PARTS IDENTIFICATION


WOOD COMPONENTS (NOT TO SCALE)

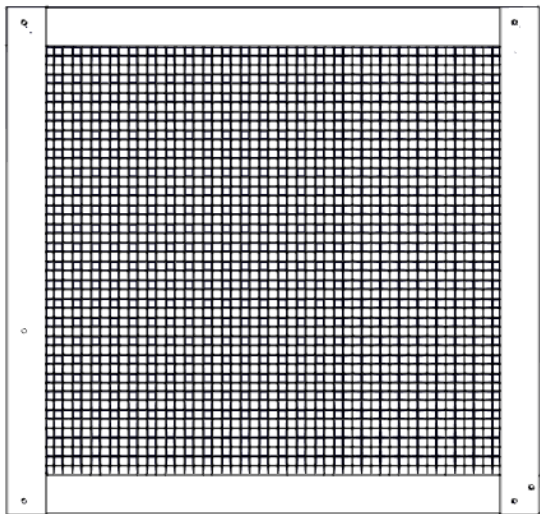


MP04 MESH PANEL - W2A04629
(x1) 15/16"x42 7/8"x45" (24.0x1089x1143)

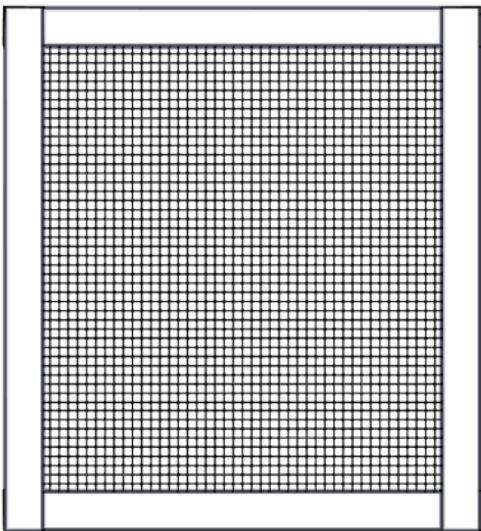

MP05 MESH PANEL - W2A04630
(x1) 15/16"x40 15/16"x45" (24x1040x1143)

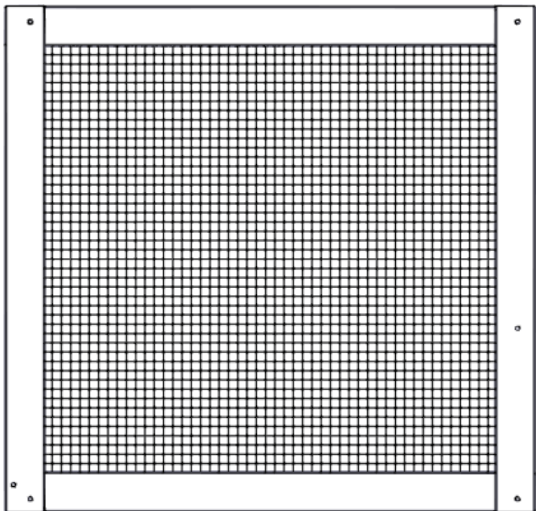


MP06 MESH PANEL - W2A04631
(x1) 15/16"x42 7/8"x45" (24.0x1089x1143)

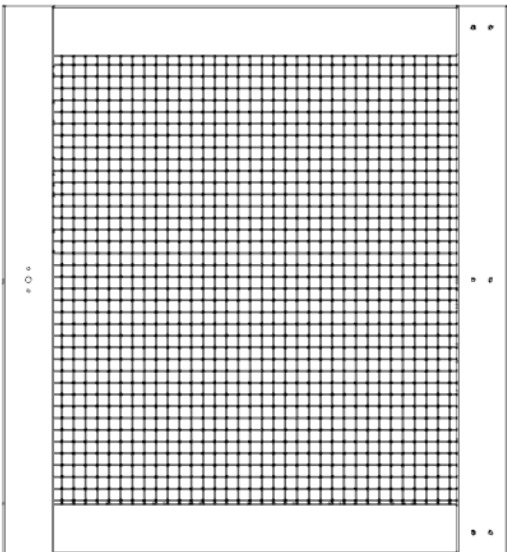


MP07 MESH DOOR PANEL - W2A04633
(x1) 15/16"x33 3/4"x36 5/8" (24x858x931)

OWNER'S MANUAL - PARTS IDENTIFICATION


ACCESSORY COMPONENTS (NOT TO SCALE)

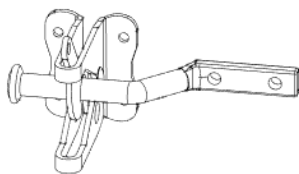


A100264 BOLT LATCH
(x1)




A4M00559 PULL HANDLE
(x1)




A4M02627 SCREW ON HASP LOCK
(x1)

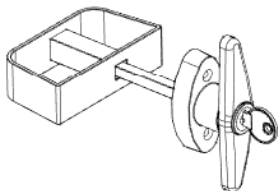

A4M00839 HANDLE W/LOCK
(x1)

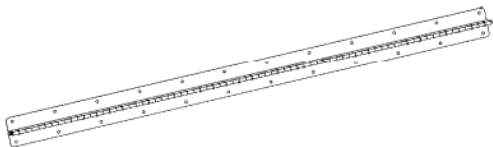

A4M04578 PIANO HINGE 925mm
(x1)

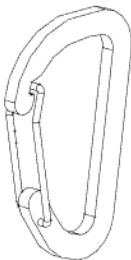


A4M02971 CARABINER
(x2)




A4M04004 29 GA SHEETING
(x4)




A4M04005 29 GA SHEETING
(x2)

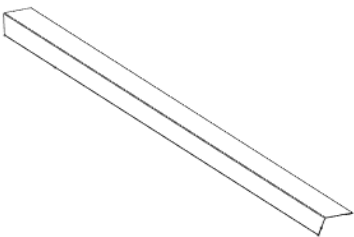


A4M04006 ROOF EDGE TRIM
(x2)

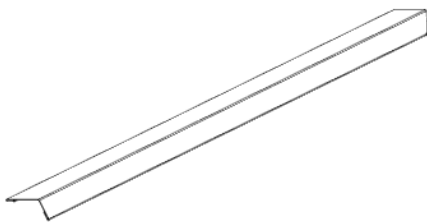


A4M04007 ROOF EDGE TRIM
(x2)

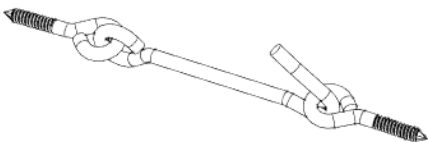


A4M03459 SWING HOOK LATCH
(x1)

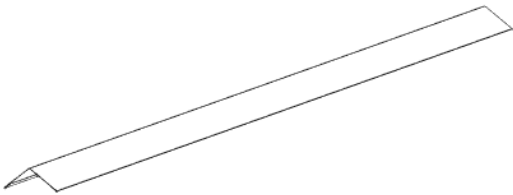


A4M04009 RIDGE CAP
(x1)

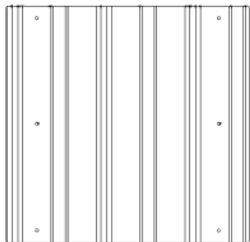

A4M04010 29 GA SHEETING
(x2)

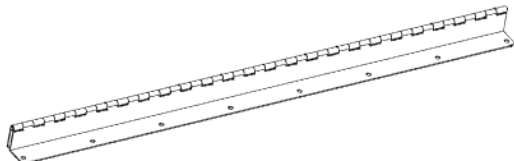














A4M04011 PIANO HINGE 586mm
(x1)

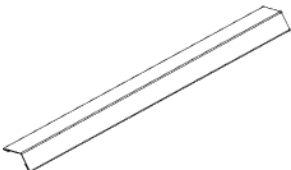

A4M04012 ROOF EDGE TRIM
(x2)


OWNER'S MANUAL - PARTS IDENTIFICATION

ACCESSORY COMPONENTS (NOT TO SCALE)

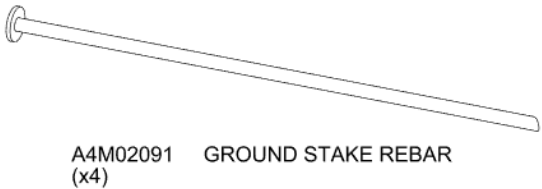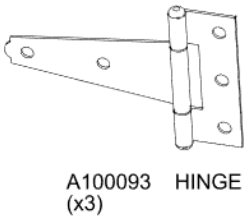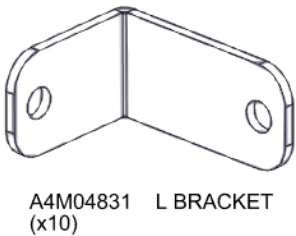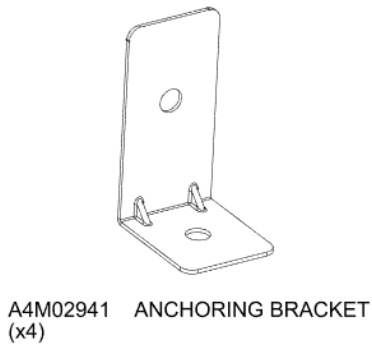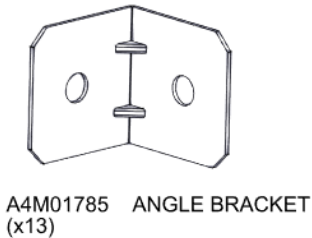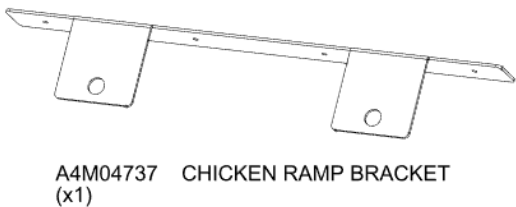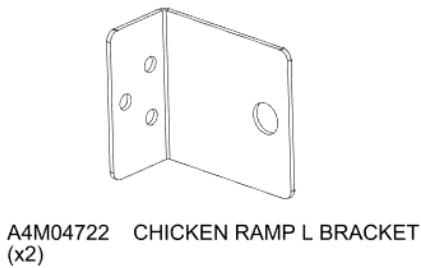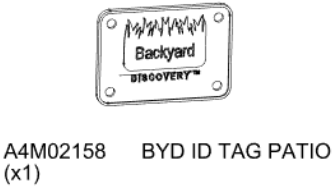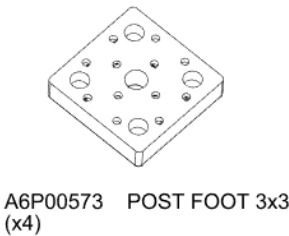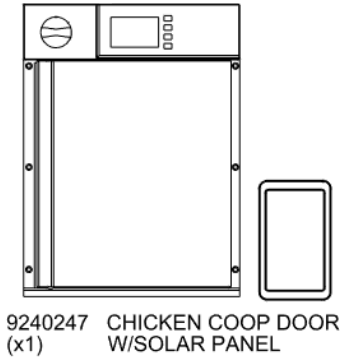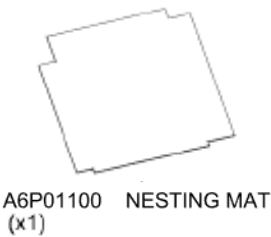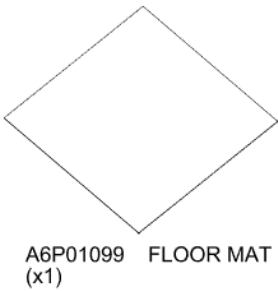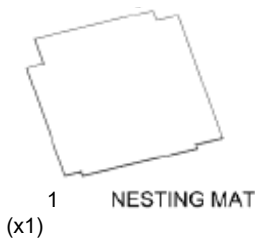


OWNER'S MANUAL - PARTS IDENTIFICATION


Hardware Components




H100147 | TORX BIT
(x1) | T-30




H101100 | MAGNETIC DRIVER
(x1)

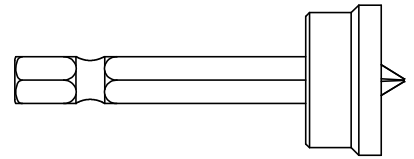


H100764 | SCREW SETTER
(x1)




H100411 | SCREW PFH BLK
(x5) | 8 x 5/8




H100395 | SCREW PFH BLK
(x10) | 8 x 3/4




H100816 | SCREW PFH BLK
(x8) | 8 x 7/8




H100385 | SCREW PFH BLK
(x6) | 8 x 1




H100380 | SCREW PFH BLK
(x20) | 8 x 1 1/8




H100387 | SCREW PFH BLK
(x13) | 8 x 1 1/4



H100200 | SCREW PFH BLK
(x147) | 8 x 1 1/2




H100382 | SCREW PFH BLK
(x27) | 8 x 1 3/4



H100391 | SCREW PFH BLK
(x29) | 8 x 2



H100821 | SCREW PFH BLK
(x2) | 8 x 2 3/4




H100201 | SCREW PFH BLK
(x17) | 8 x 2 1/2




H100362 | SCREW PFH BLK
(x24) | 8 x 3



H101109 | SCREW PFH BLK
(x4) | 8 x 3 1/2




H100627 | SCREW PFH BLK
(x40) | 6 x 3/4

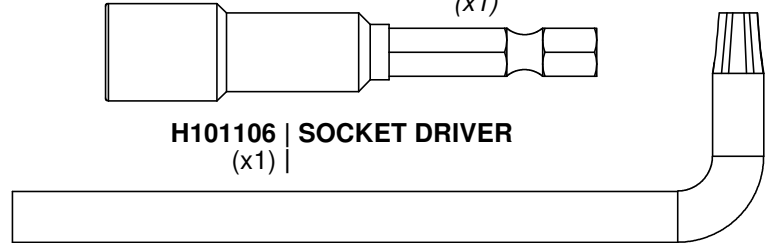


H101106 | SOCKET DRIVER
(x1)




H100804 | T-NUT BLK
(x27) | 8/32



H100398 | T-NUT BLK
(x14) | 1/4

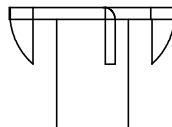


H100379 | T-NUT BLK
(x4) | 5/16




H100408 | SCREW PWH BLK
(x4) | 8 x 1/2




H100202 | SCREW PWH BLK
(x26) | 8 x 5/8




H100797 | SCREW PWH BLK
(x44) | 8 x 1




H100536 | SCREW PWH BLK
(x88) | 8 x 1




H100823 | SCREW PWH BLK
(x7) | 8 x 1 1/2

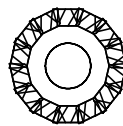


H100405 | WASHER LOCK EXT BLK
(x36) | 6 x 15

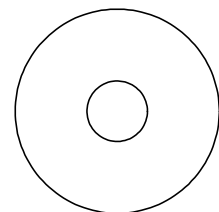

H100478 | WASHER FLAT BLK
(x2) | 8 x 27




H101117 | SCREW WOODGRIP
(x44) | 10 - 16 x 3/4

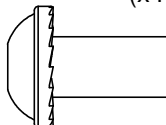


H100404 | NUT BARREL WH BLK
(x16) | 1/4 x 5/8

OWNER'S MANUAL - PARTS IDENTIFICATION


Hardware Components

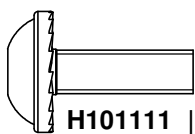


H101111 | BOLT WH BLK
(x14) | 1/4 x 3/4

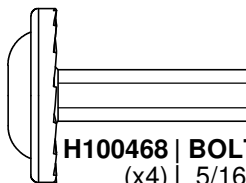

H100468 | BOLT WH BLK
(x4) | 5/16 x 1

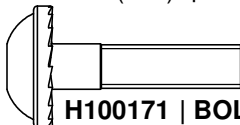


H100171 | BOLT WH BLK
(x2) | 1/4 x 1

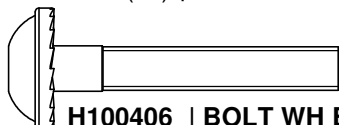

H100406 | BOLT WH BLK
(x4) | 1/4 x 1 1/2




H100999 | BOLT WH BLK
(x4) | 1/4 x 2 1/2

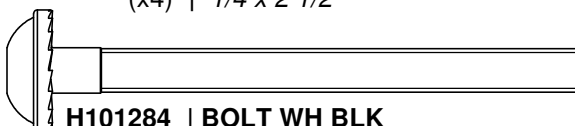


H101284 | BOLT WH BLK
(x2) | 1/4 x 2 3/4




H101127 | BOLT WH BLK
(x4) | 1/4 x 3 1/2

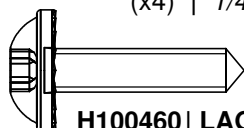


H100460 | LAG SCREW WH BLK
(x4) | 1/4 x 1

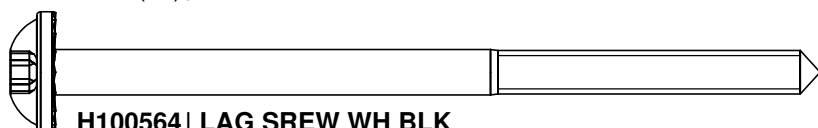

H100564 | LAG SREW WH BLK
(x8) | 1/4 x 4

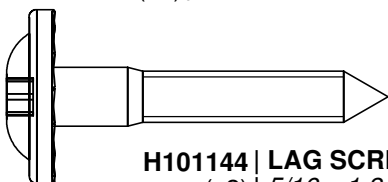


H101144 | LAG SCREW WH BLK
(x2) | 5/16 x 1 3/4




H100807 | SCREW POH-MS BLK
(x15) | 8/32 x 1 1/8




H100806 | SCREW POH-MS BLK
(x8) | 8/32 x 1 1/8



H101076 | SCREW POH-MS BLK
(x2) | 8/32 x 1 1/4



H101077 | SCREW POH-MS BLK
(x2) | 8/32 x 1 3/8

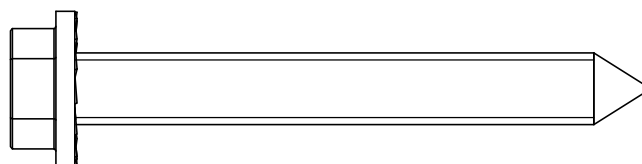

H101165 | CONCRETE ANCHOR BLK
(x4) | 3/8 x 3

STEP 1 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
16	H100200	SCREW PFH 8x1 1/2 BLK



B1 BASE SUPPORT - W4L20492
(x1) 3"x3"x17 15/16" (76x76x456)




B3 BASE SUPPORT - W4L21439
(x1) 3"x3"x17 15/16" (76x76x456)



B2 BASE SUPPORT - W4L20525
(x1) 3"x3"x17 15/16" (76x76x456)




B4 SUPPORT BOARD - W4L21440
(x1) 3"x3"x17 15/16" (76x76x456)

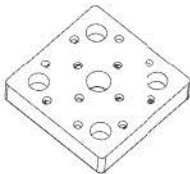


A6P00573 POST FOOT 3x3
(x4)

USING AN 1/8" [3mm] DRILL BIT,
USE A6P00573 AS A GUIDE TO
DRILL PILOT HOLES.

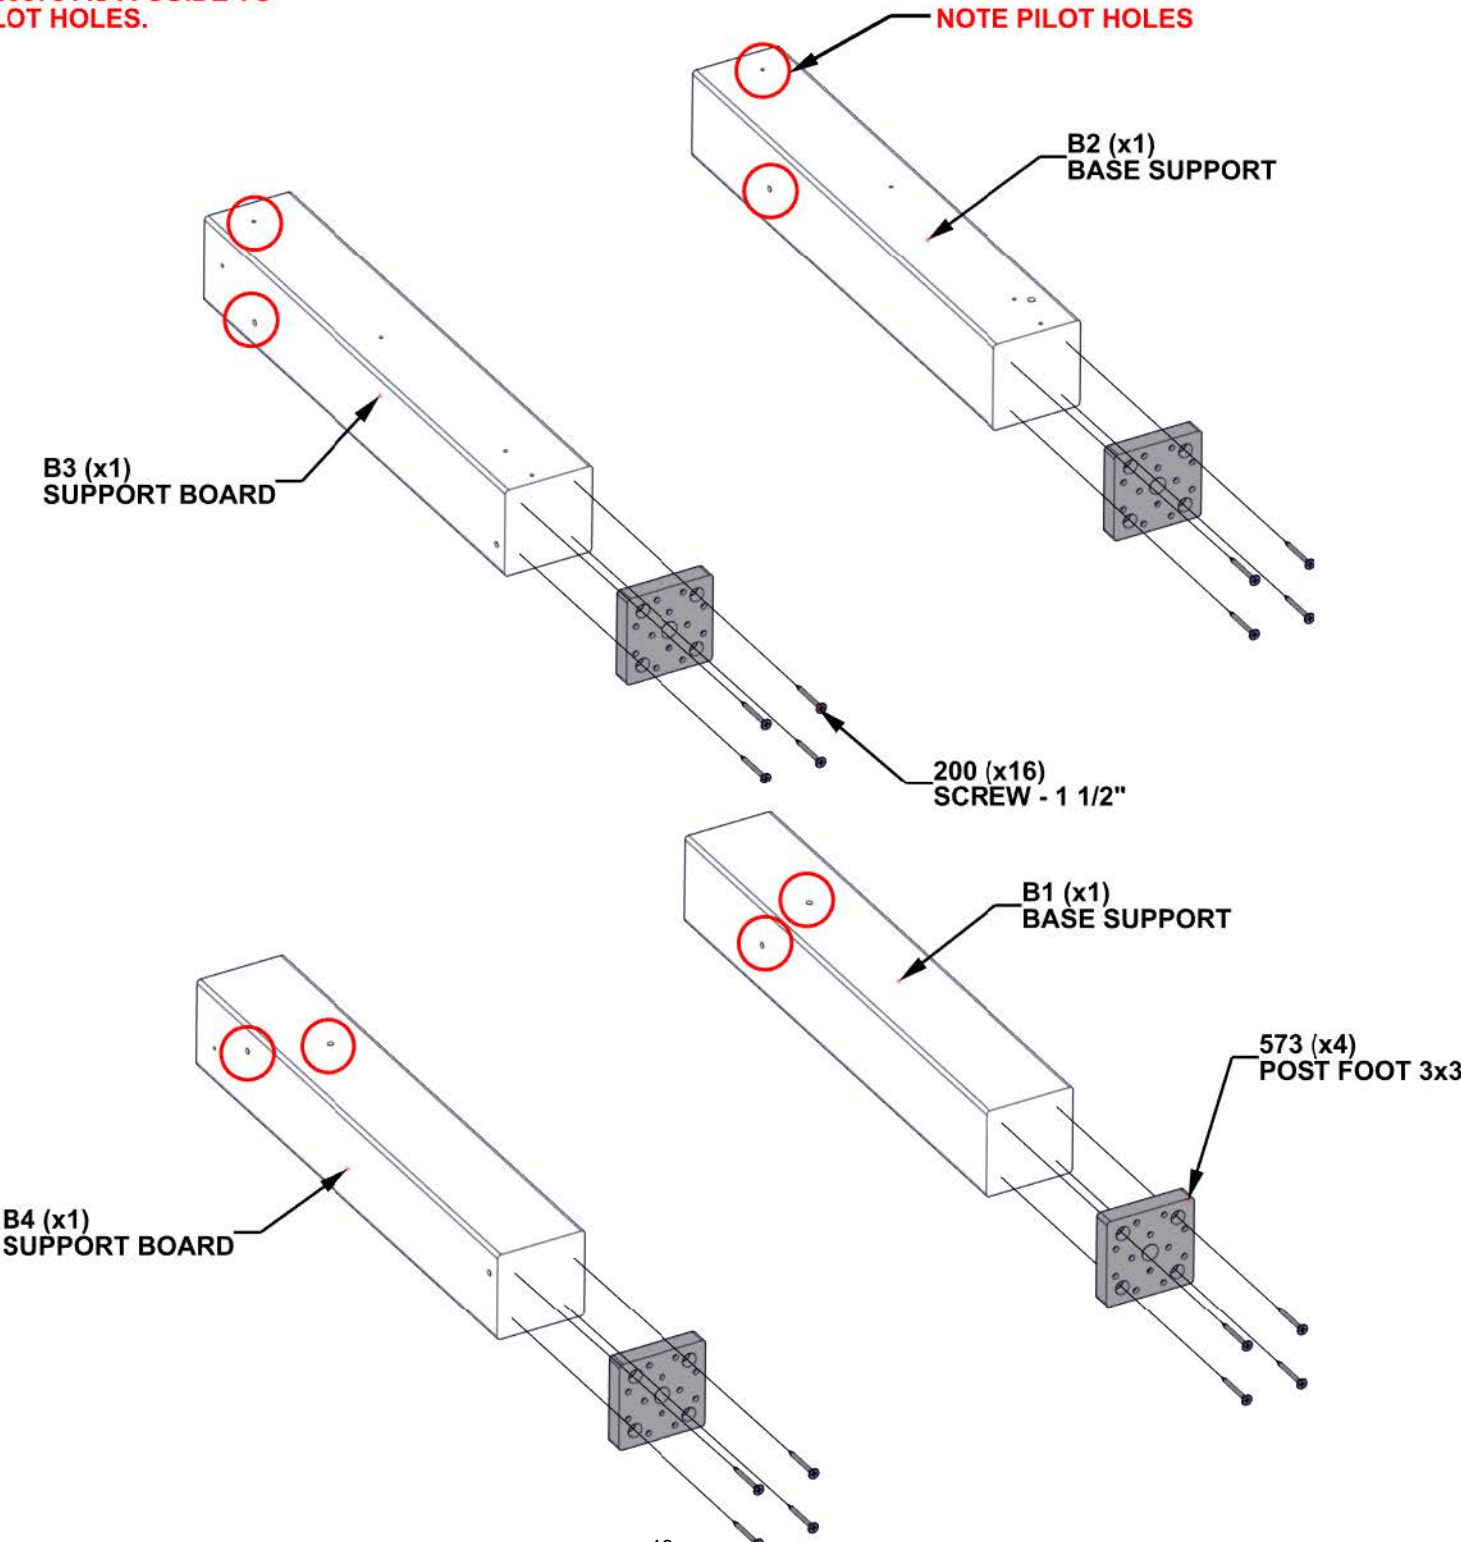


STEP 2 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100405	WASHER LOCK EXT 6x15
4	H100564	LAG SCREW WH 1/4x4 BLK

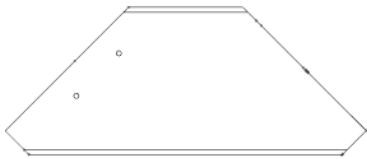


E1 CORBEL - W4L20496
(x2) 1 7/16"x3 3/8"x8 1/4" (36x86x210)

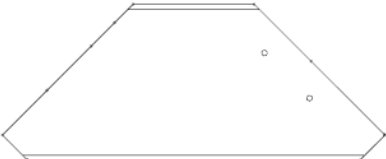


E2 CORBEL - W4L20771
(x2) 1 7/16"x3 3/8"x8 1/4" (36x86x210)

- ALIGN PILOT HOLES.

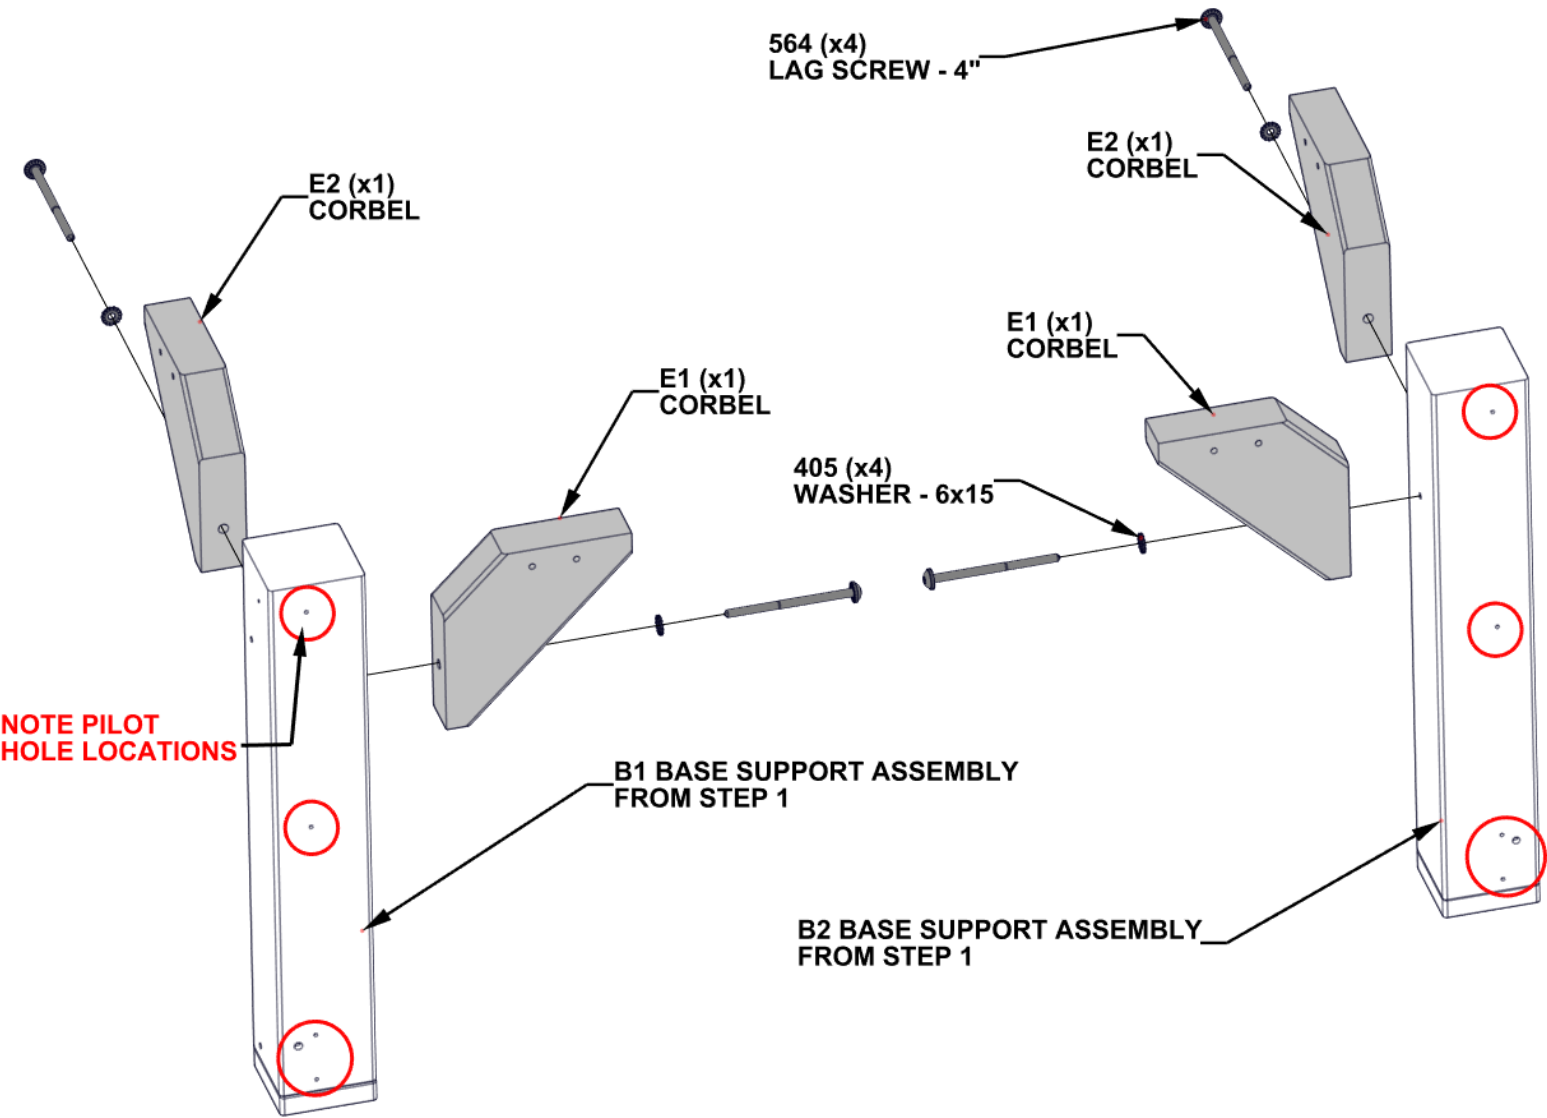


STEP 3 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100405	WASHER LOCK EXT 6x15
4	H100564	LAG SCREW WH 1/4x4 BLK

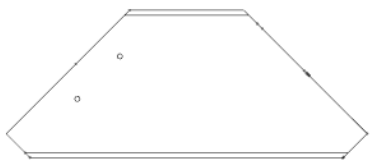


E1 CORBEL - W4L20496
(x2) 1 7/16"x3 3/8"x8 1/4" (36x86x210)

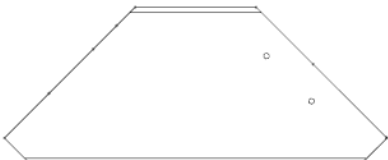


E2 CORBEL - W4L20771
(x2) 1 7/16"x3 3/8"x8 1/4" (36x86x210)

- ALIGN PILOT HOLES.

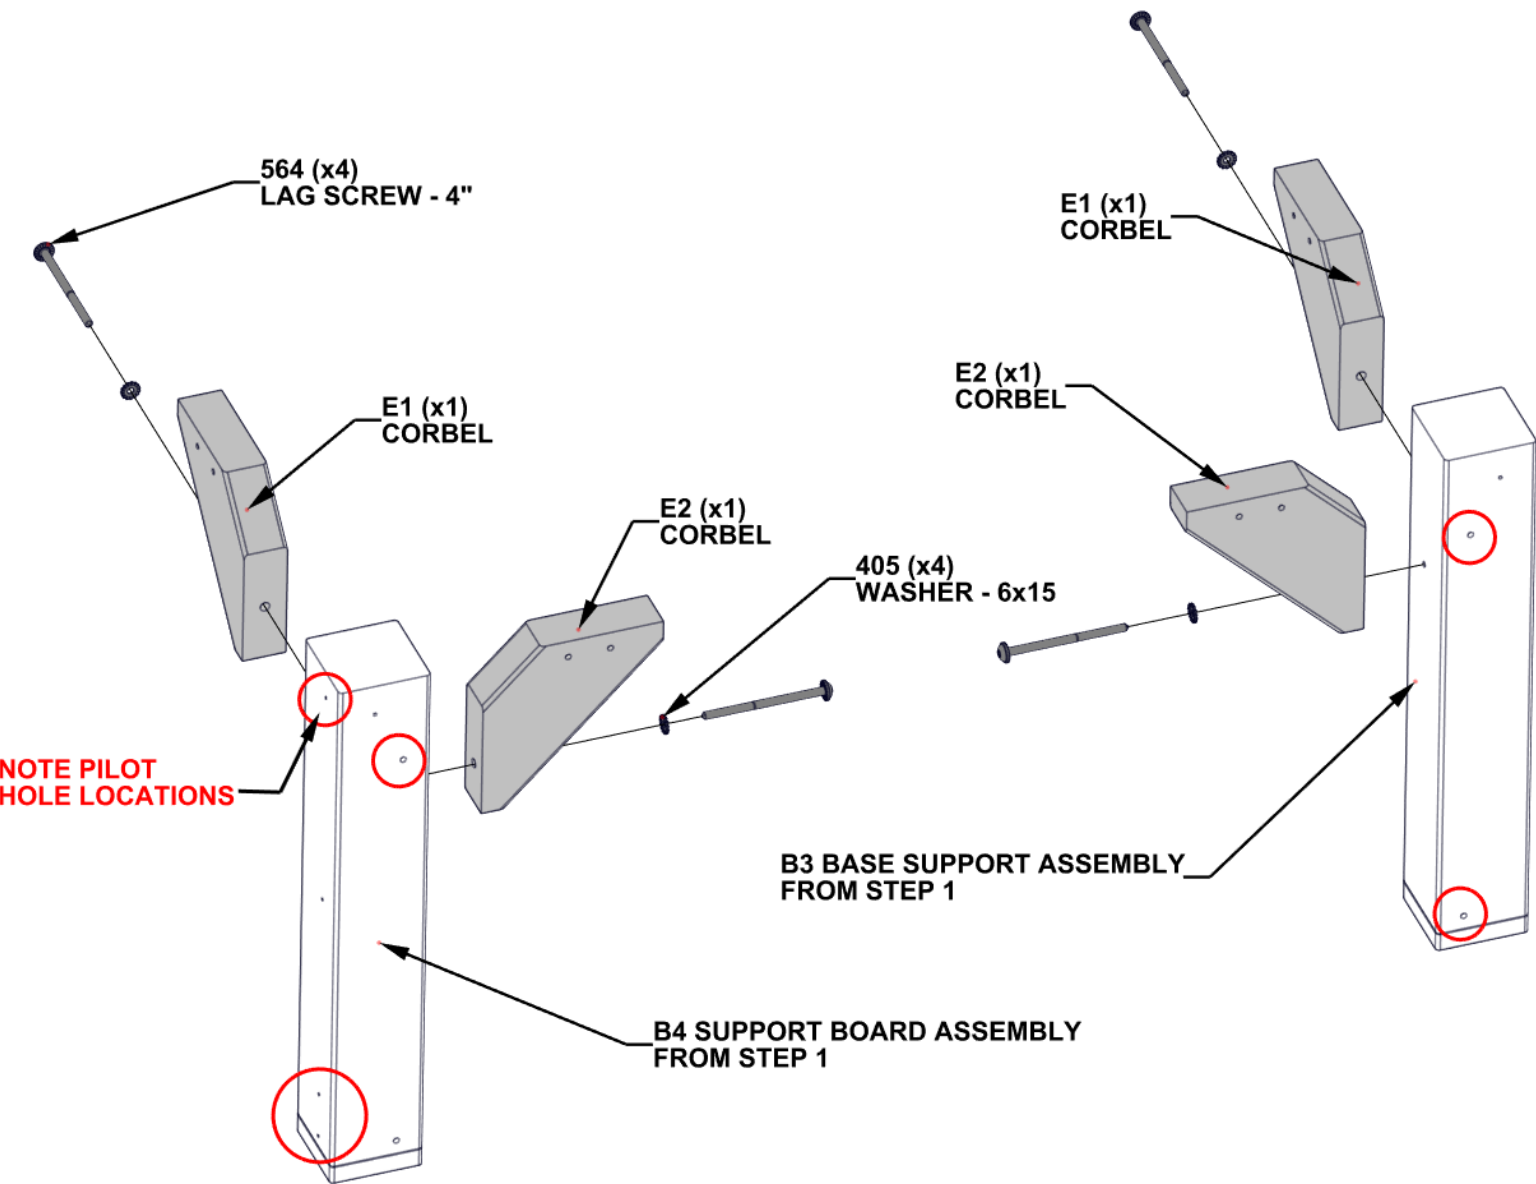

STEP 4 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100382	SCREW PFH 8x1 3/4 BLK




T1 BASE FRAME - W4L20491
(x2) 15/16"x1 5/16"x33 1/16" (24x34x840)



J4 FLOOR BRACE - W4L20773
(x1) 15/16"x2 3/8"x37 3/16" (24x60x944)

- ALIGN PILOT HOLES.

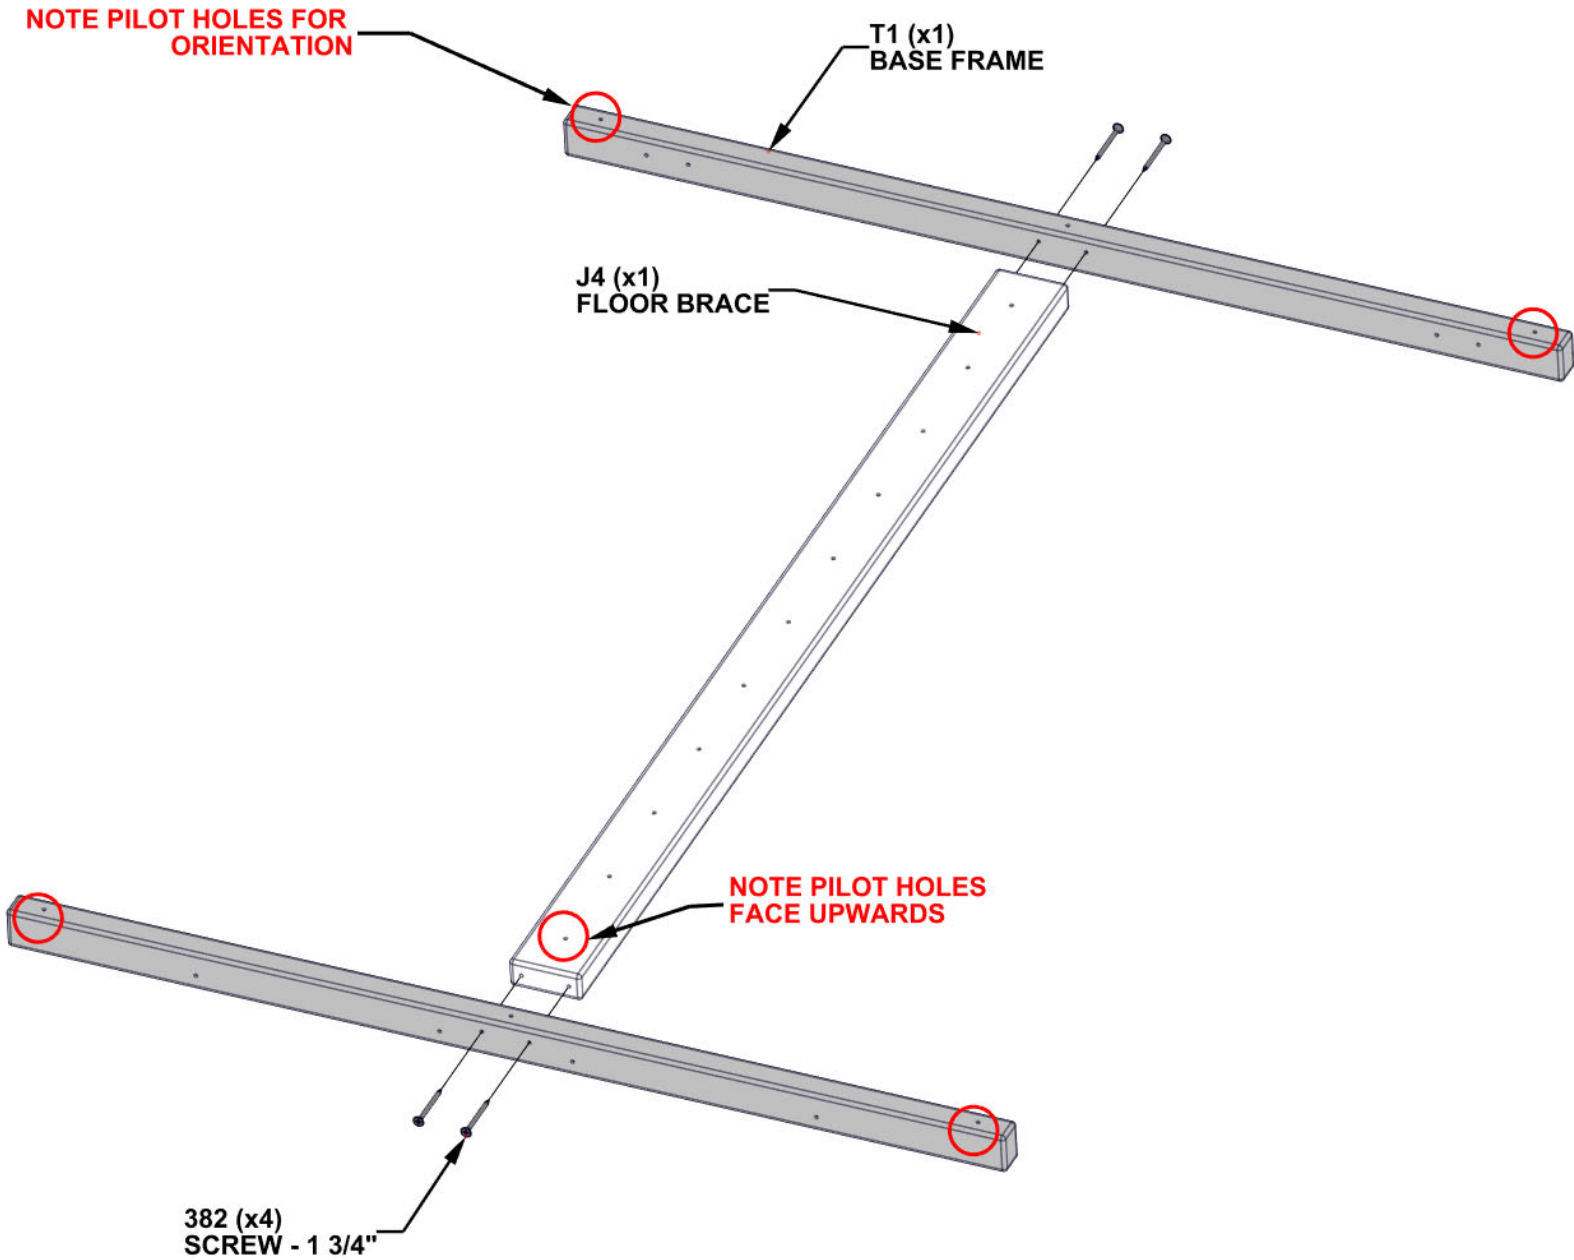

STEP 5 - CHICKEN COOP ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
16	H100391	SCREW PFH 8x2 BLK



T7 FRAME BOARD - W4L21438
(x1) 15/16"x1 5/16"x33 1/16" (24x34x840)




T2 BASE FRAME - W4L20520
(x1) 15/16"x1 5/16"x33 1/16" (24x34x840)

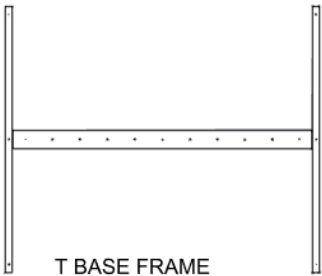

T BASE FRAME
(x1) FROM STEP 4

- ALIGN PILOT HOLES.

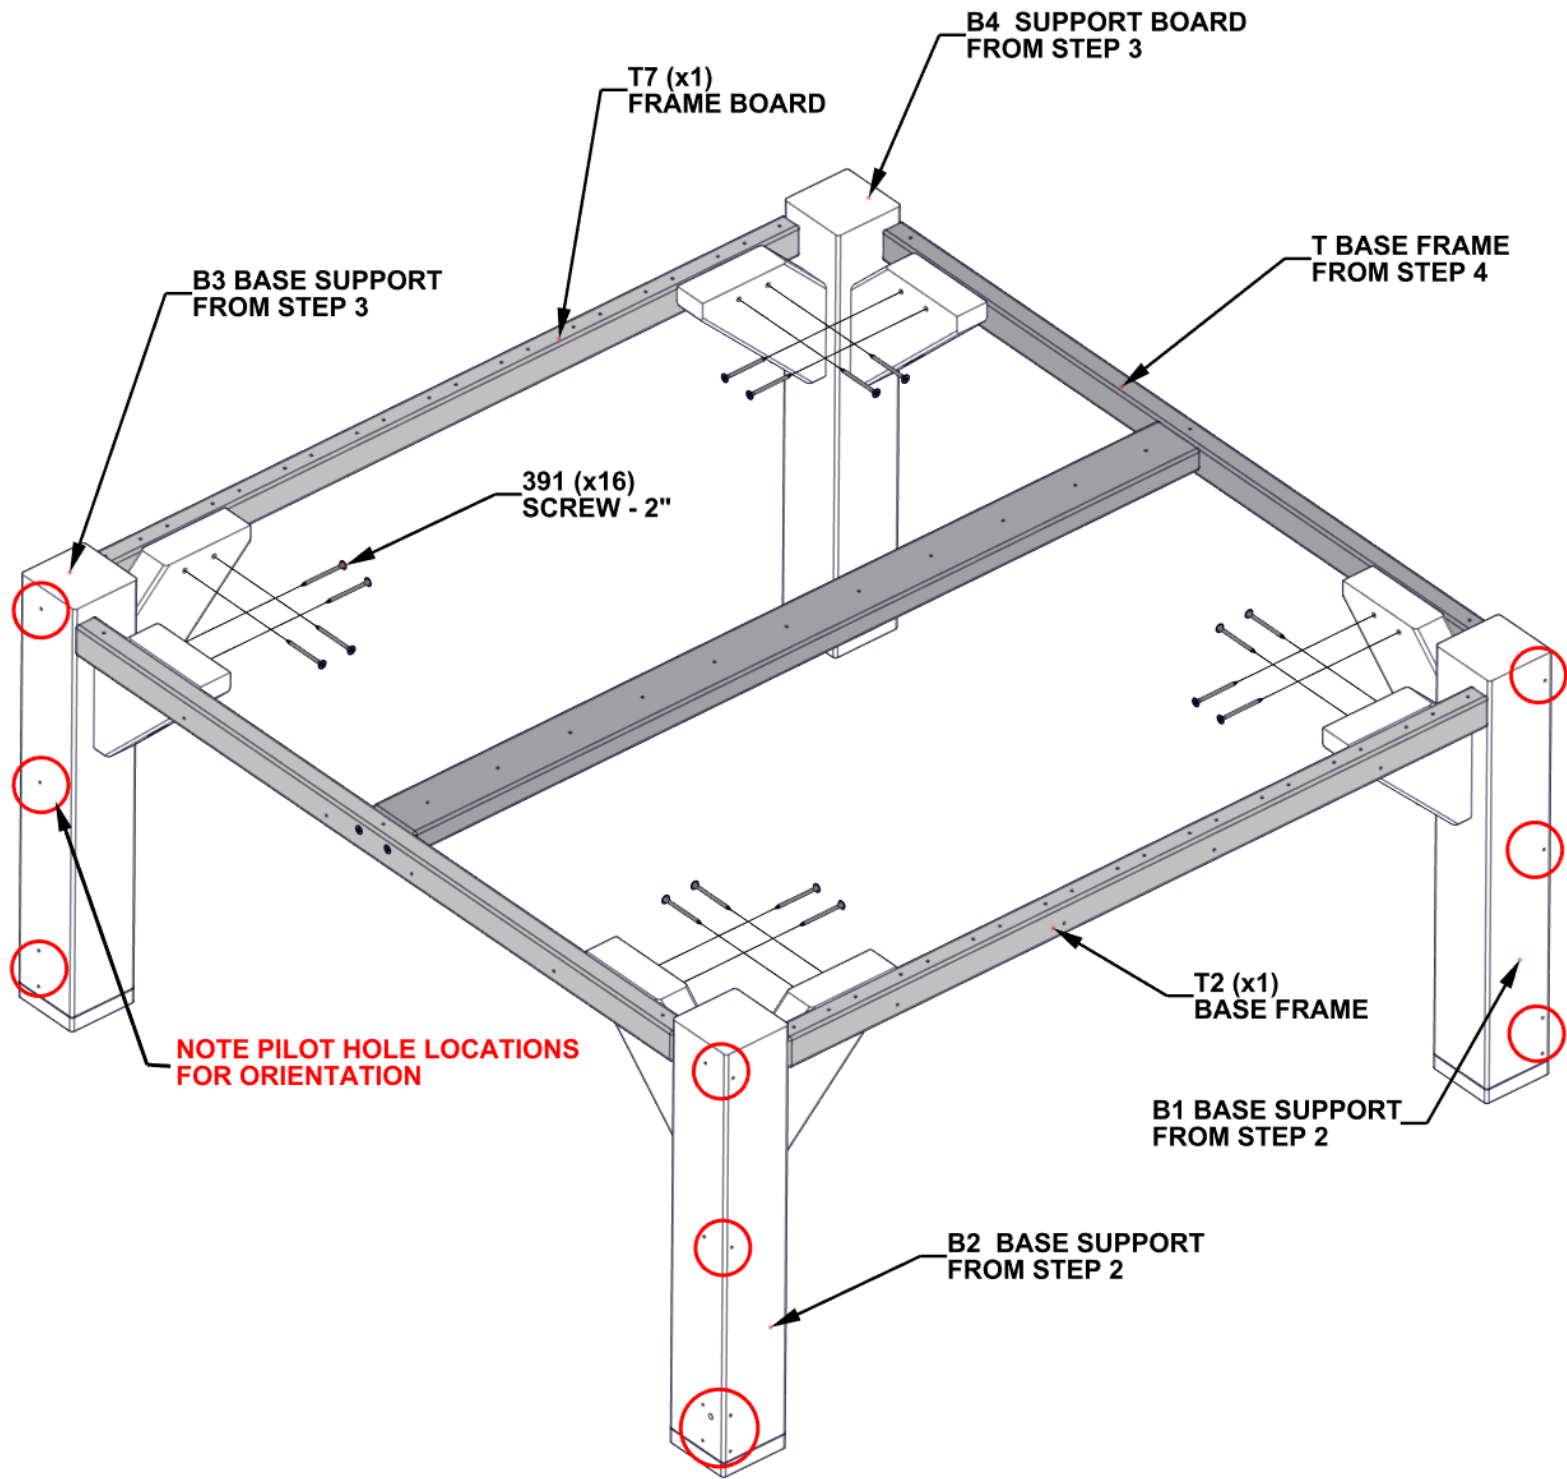


STEP 6 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
46	H100200	SCREW PFH 8x1 1/2 BLK
11	H100387	SCREW PFH 8x1 1/4 BLK

L3 END FLOOR BOARD - W4L20494
(x2) 5/8"x4 3/16"x39 1/16" (16x106x992)


M1 FLOOR BOARD - W4L20493
(x9) 5/8"x3 3/8"x39 1/16" (16x86x992)

- ALIGN PILOT HOLES.
- H100200 SCREWS AROUND THE OUTSIDE OF THE FLOOR.
- EVENLY SPACE FLOOR BOARDS.

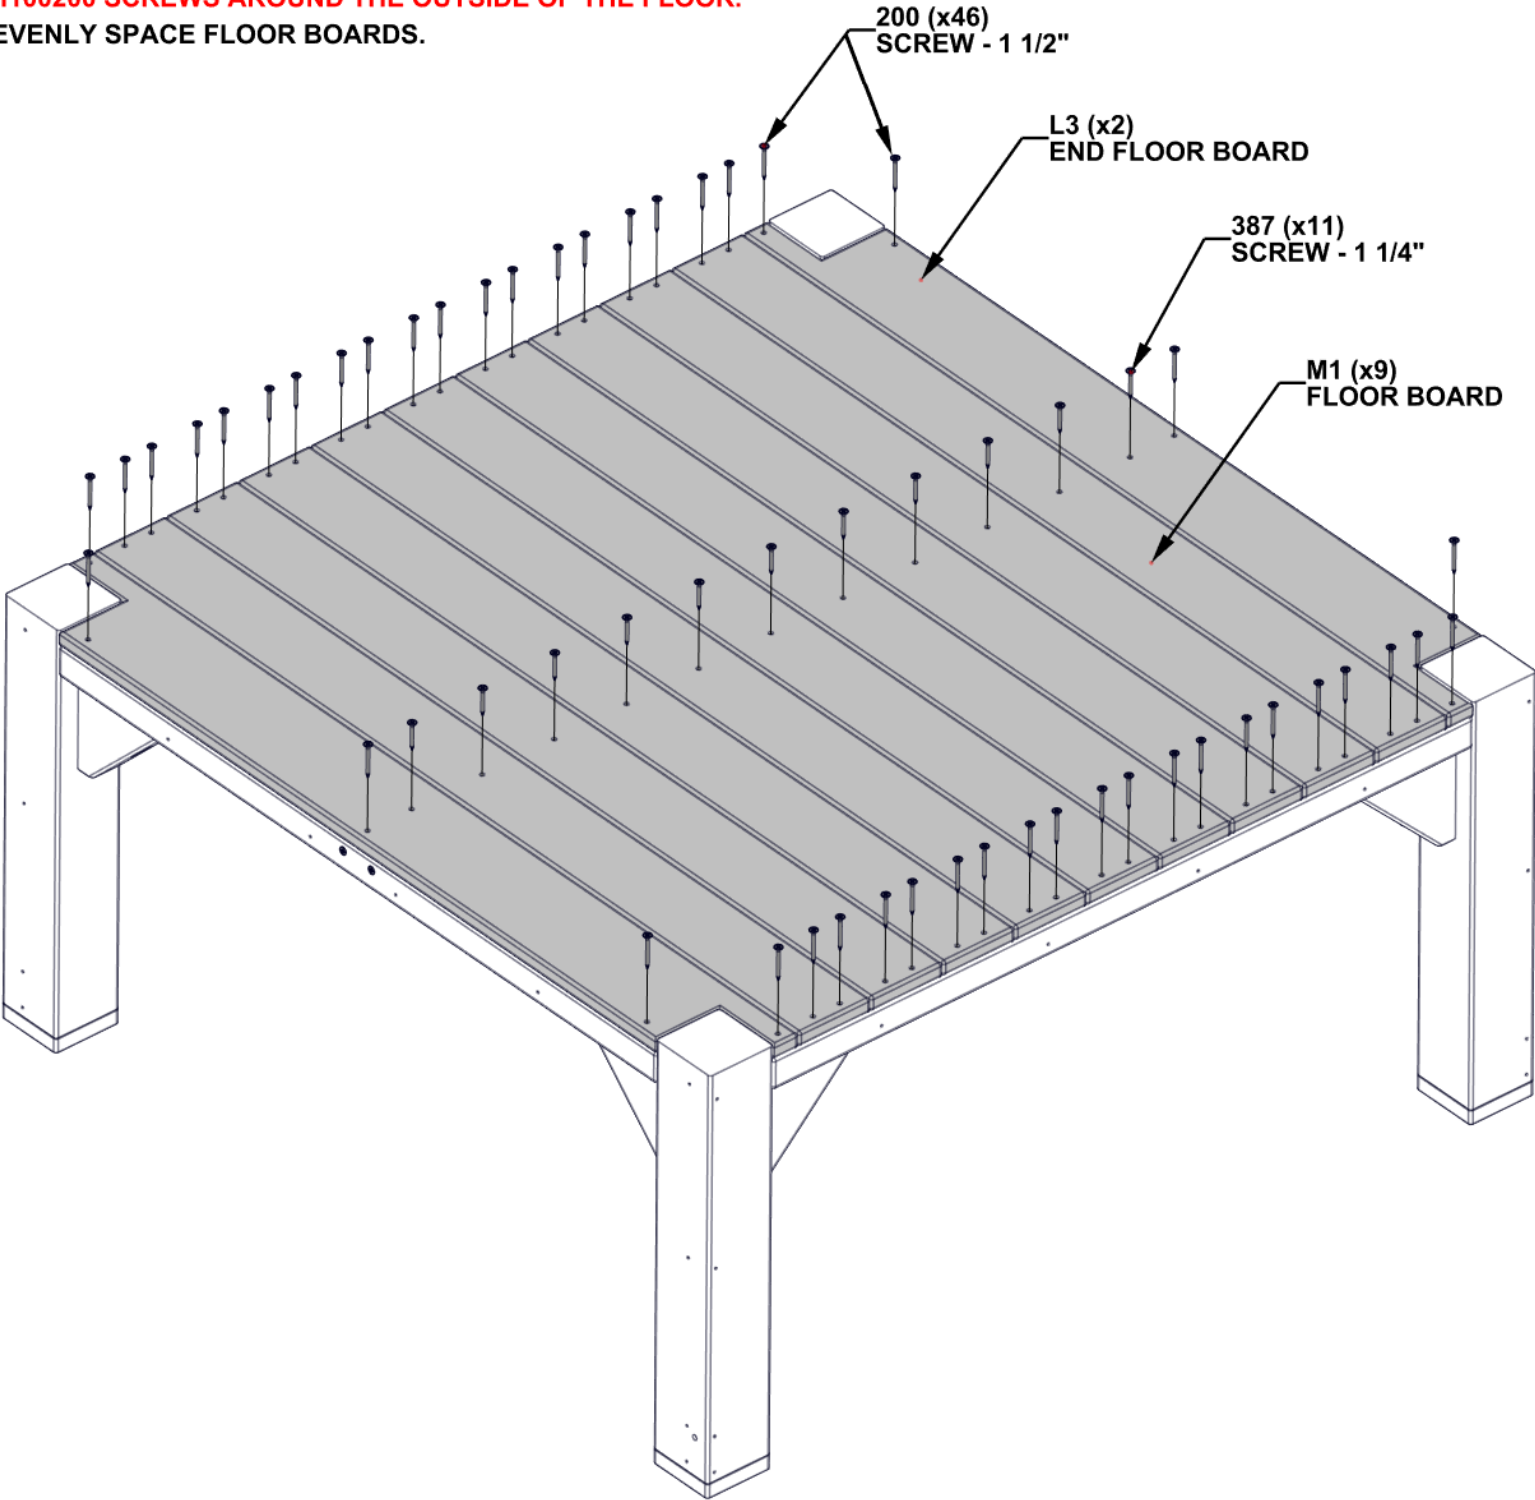


STEP 7 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
12	H100200	SCREW PFH 8x1 1/2 BLK

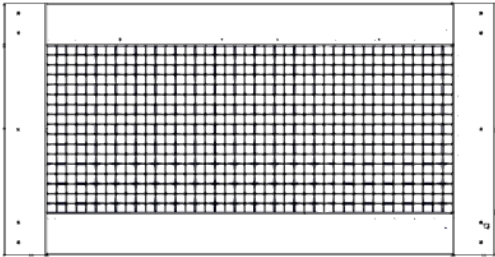


MP02 MESH PANEL - W2A04627
(x1) 15/16"x20"x39 1/16" (24x508x992)

- ALIGN PILOT HOLES.

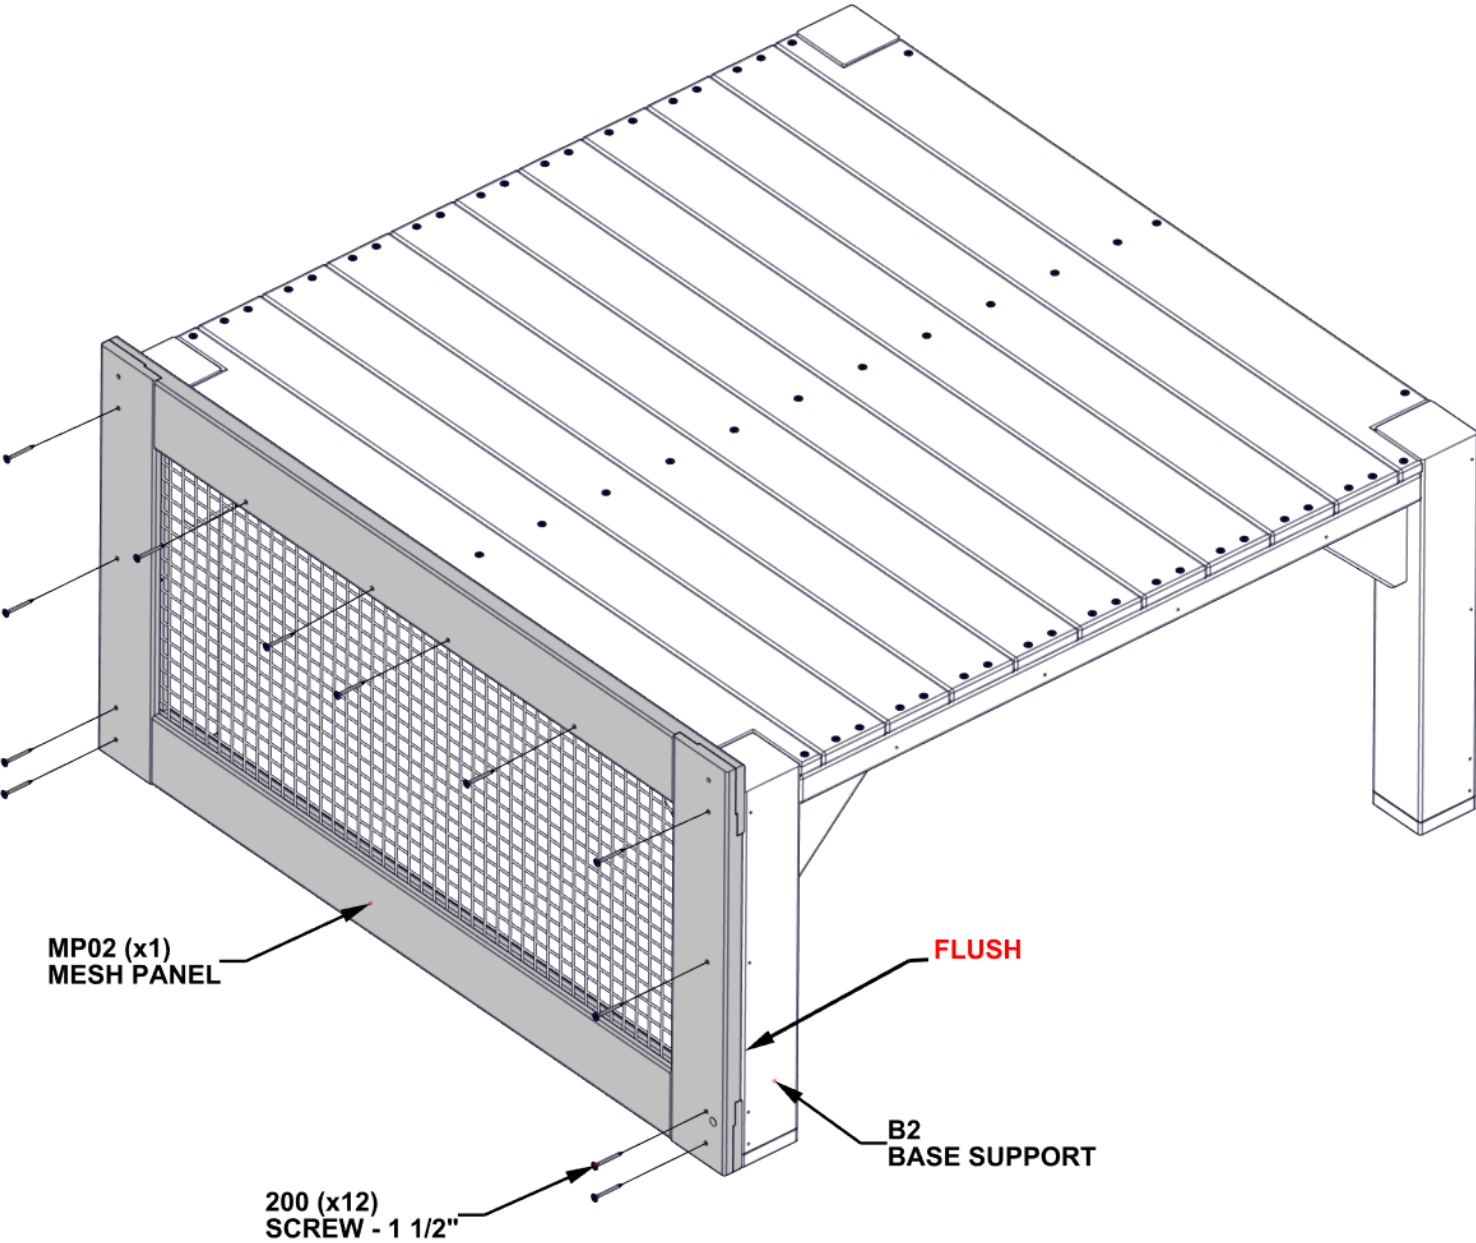


STEP 8 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
12	H100200	SCREW PFH 8x1 1/2 BLK

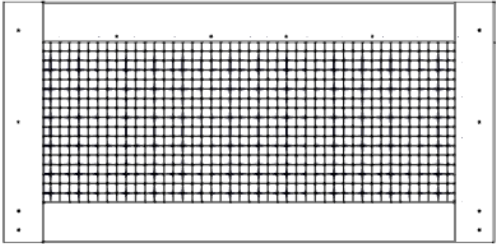


MP01 MESH PANEL - W2A04626
(x1) 15/16"x20"x40 15/16" (24x508x1040)

- ALIGN PILOT HOLES.

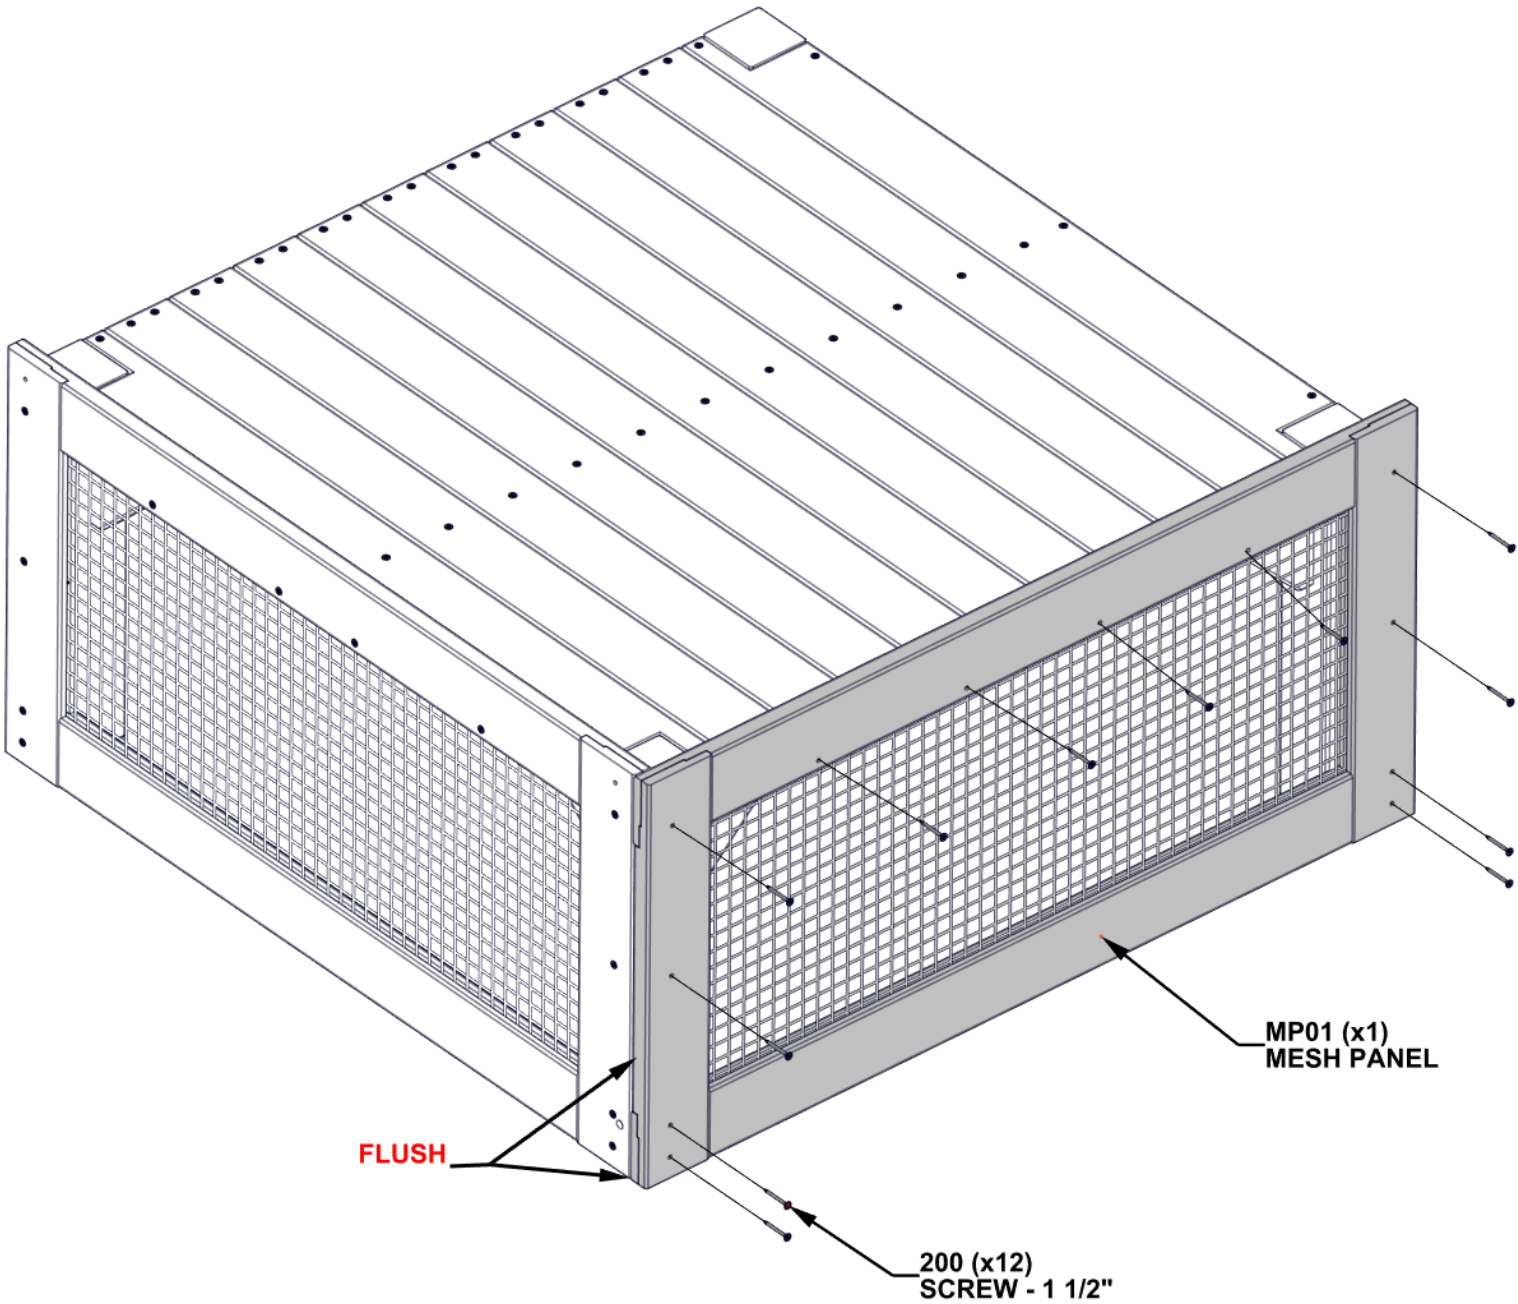


STEP 9 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
12	H100200	SCREW PFH 8x1 1/2 BLK

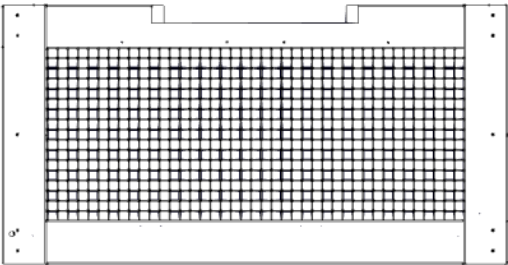

MP03 MESH PANEL - W2A04628
(x1) 15/16"x20"x39 1/16" (24x508x992)

- ALIGN PILOT HOLES.

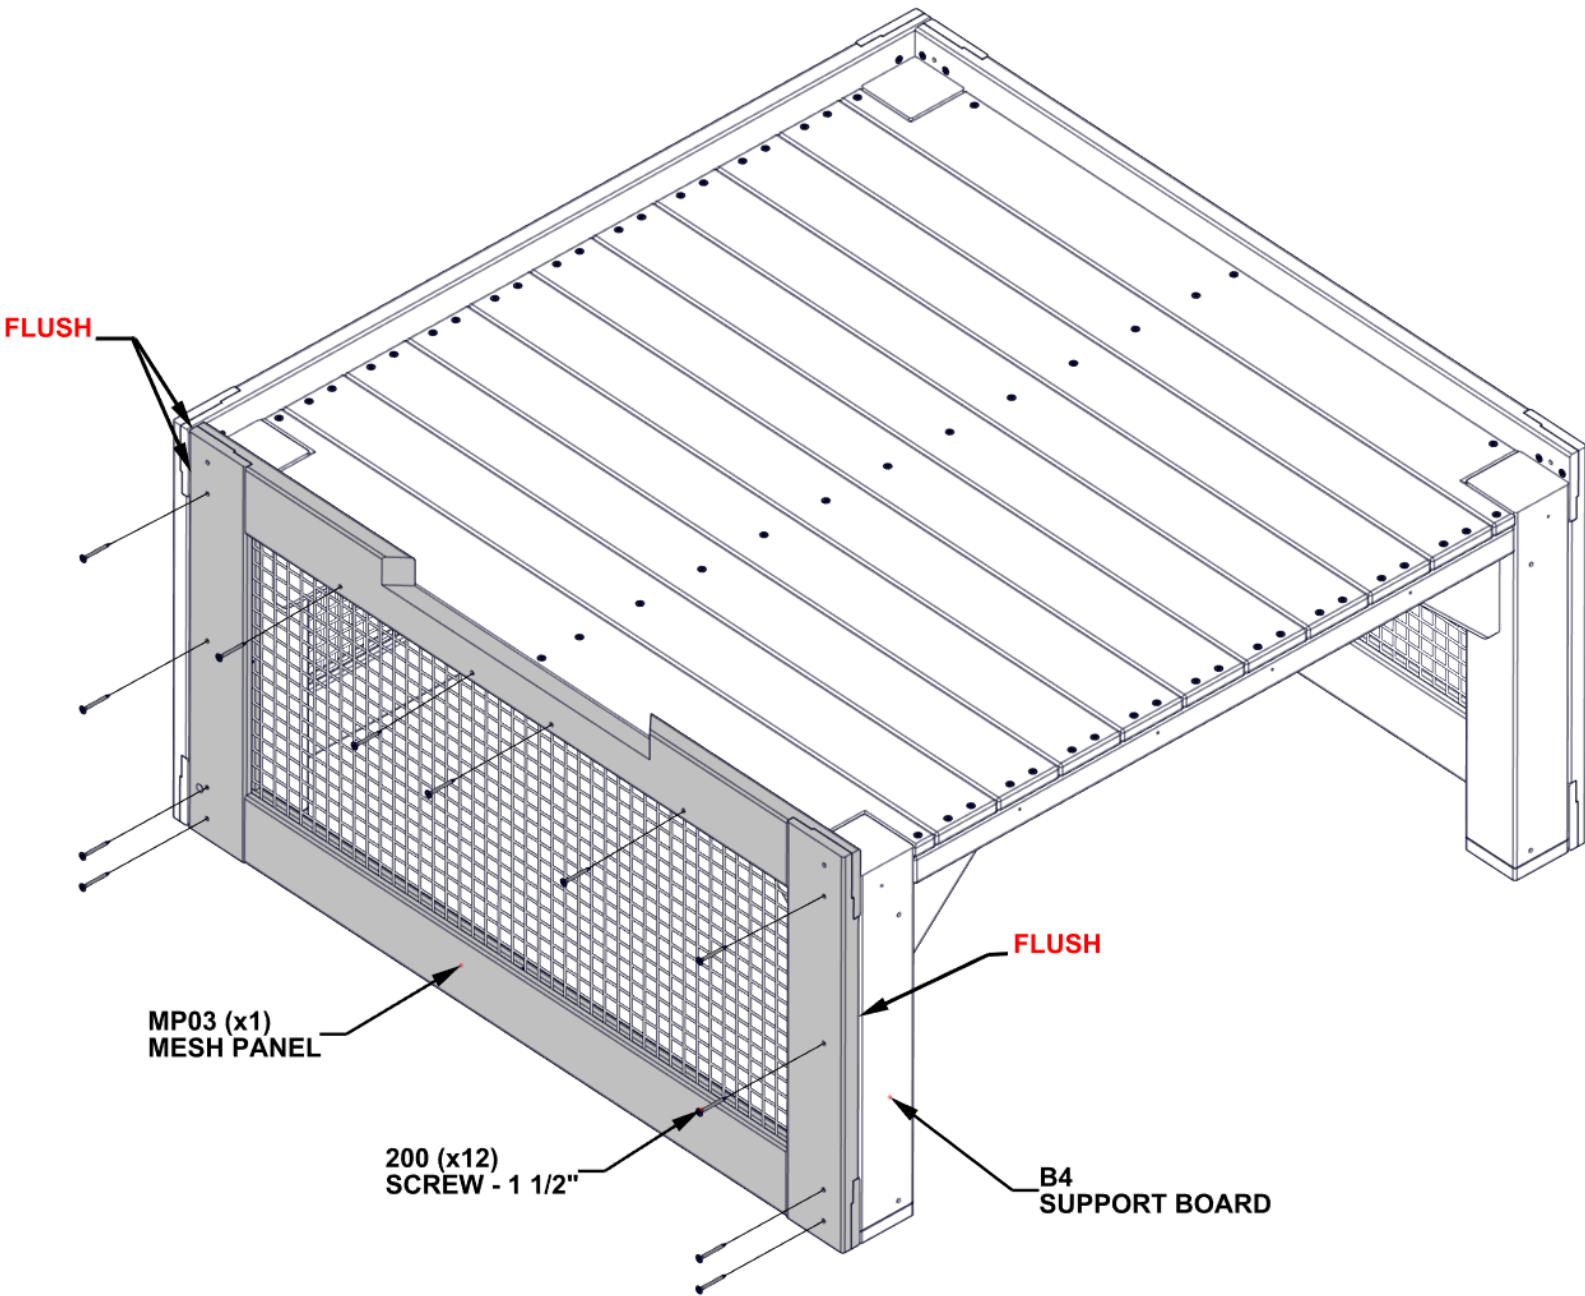


STEP 10 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100200	SCREW PFH 8x1 1/2 BLK




H9 TRIM BOARD - W4L21429
(x1) 15/16"x3 3/8"x39 1/16" (24x86x992)

- ALIGN PILOT HOLES.

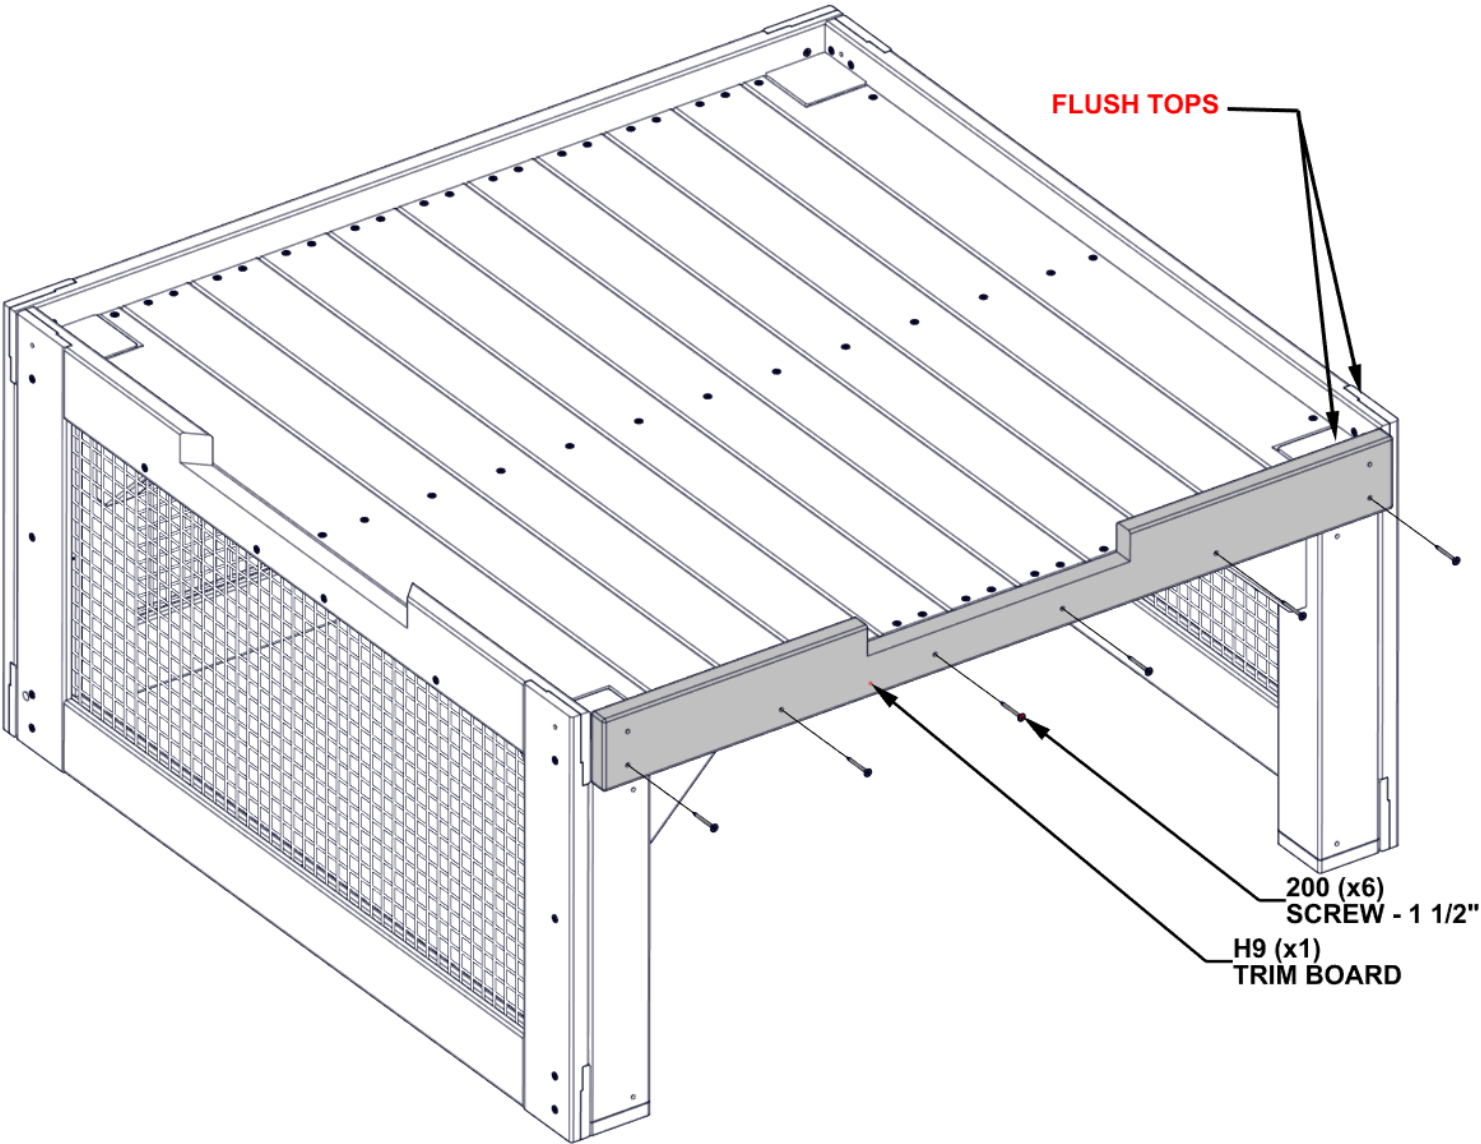


STEP 11 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100382	SCREW PFH 8x1 3/4 BLK
1	H100200	SCREW PFH 8x1 1/2 BLK




CP04 BACK LEFT CORNER PANEL - W2A04429
(x1) 10"x10 1/16"x38 9/16" (254x256x980)

- ALIGN PILOT HOLES.

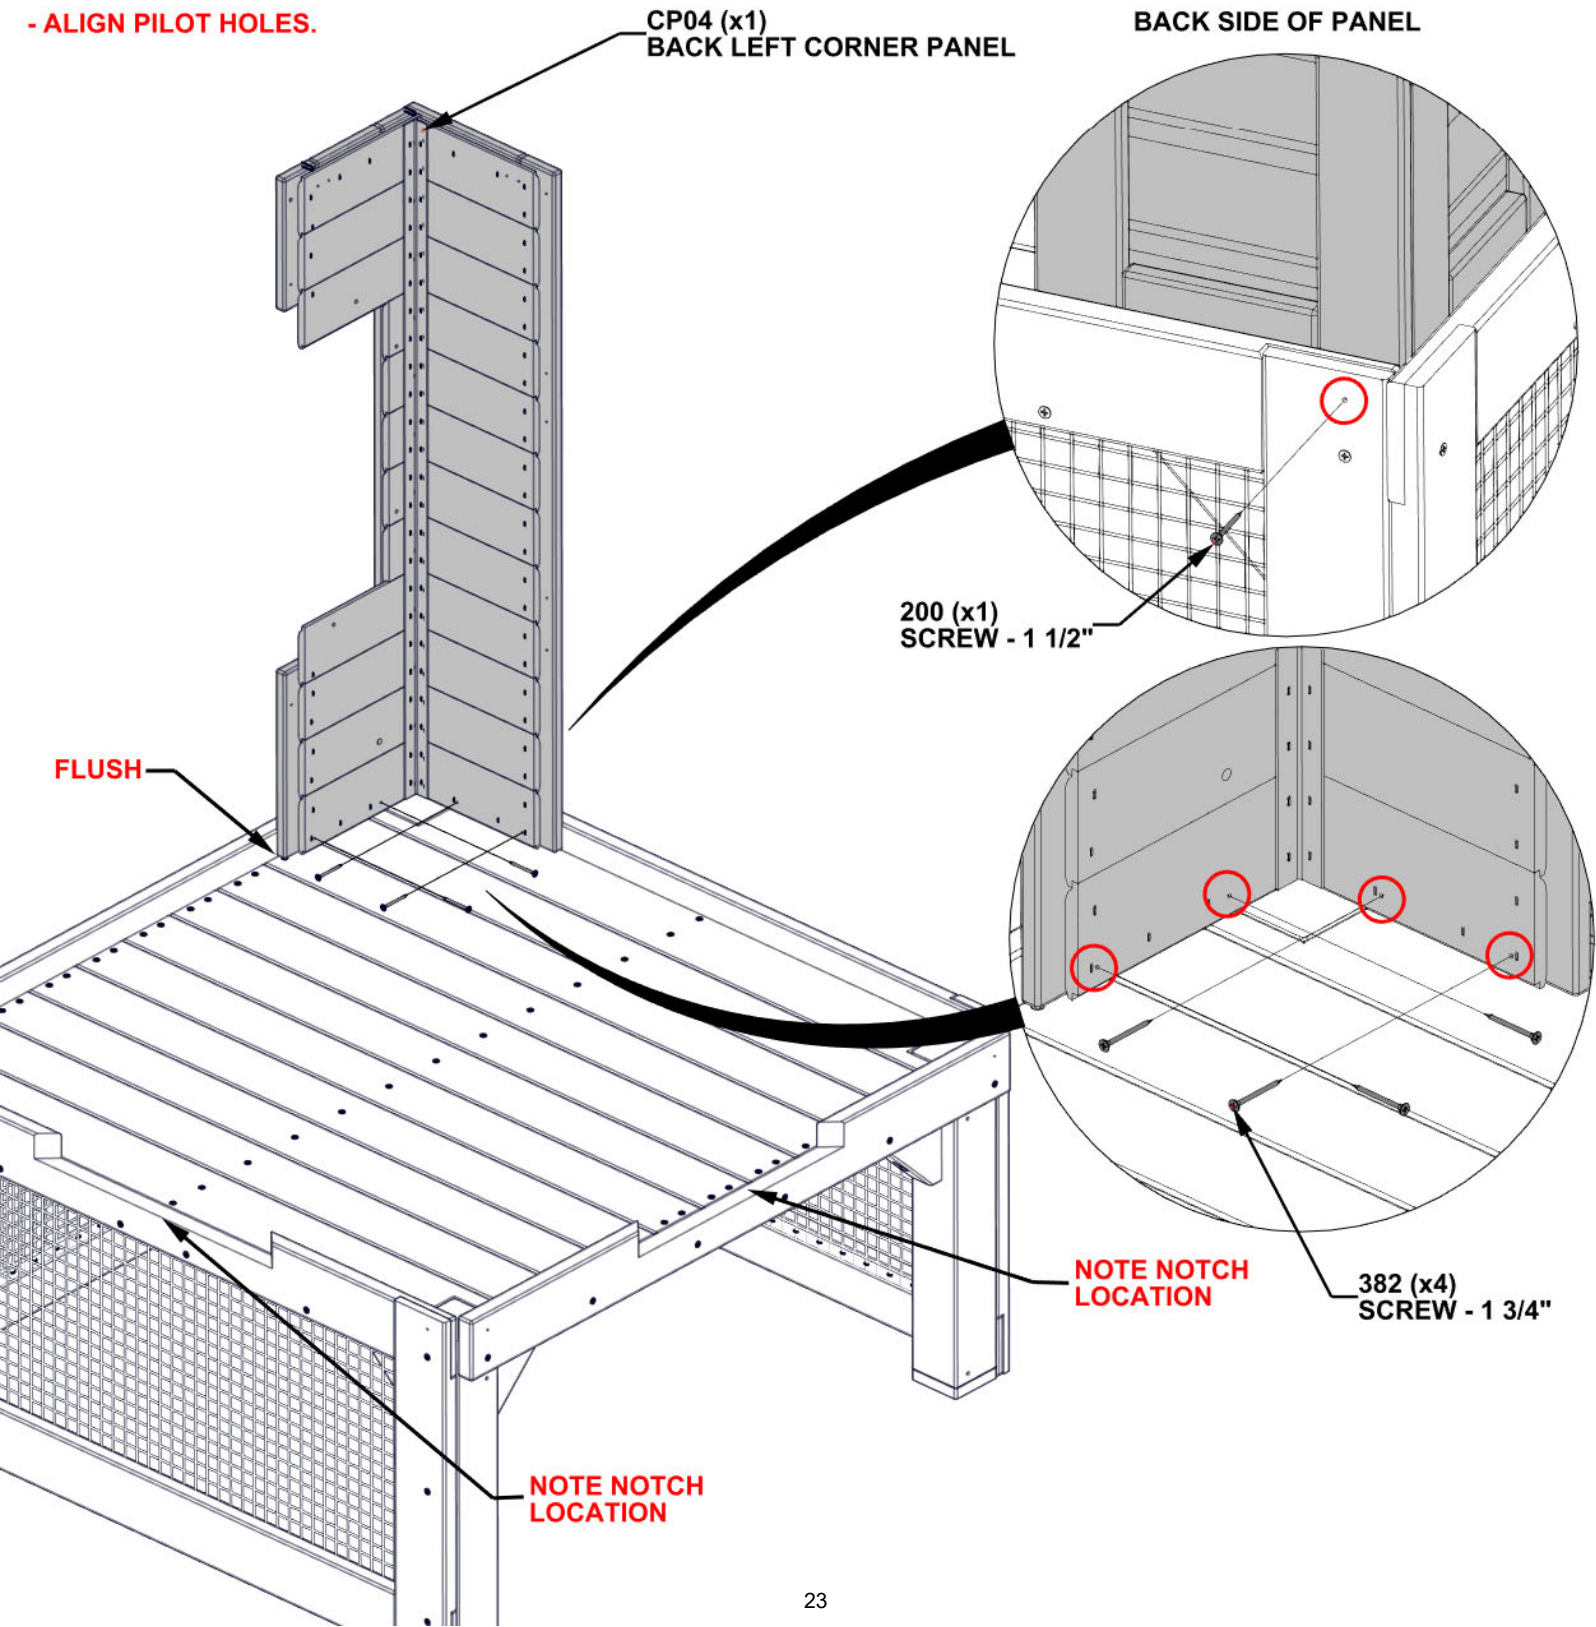


STEP 12 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100200	SCREW PFH 8x1 1/2 BLK

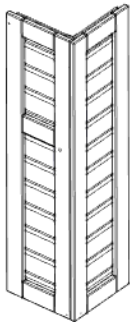


CP03 BACK RIGHT CORNER PANEL - W2A04428
(x1) 10"x10 1/16"x38 9/16" (254x256x980)

- ALIGN PILOT HOLES.

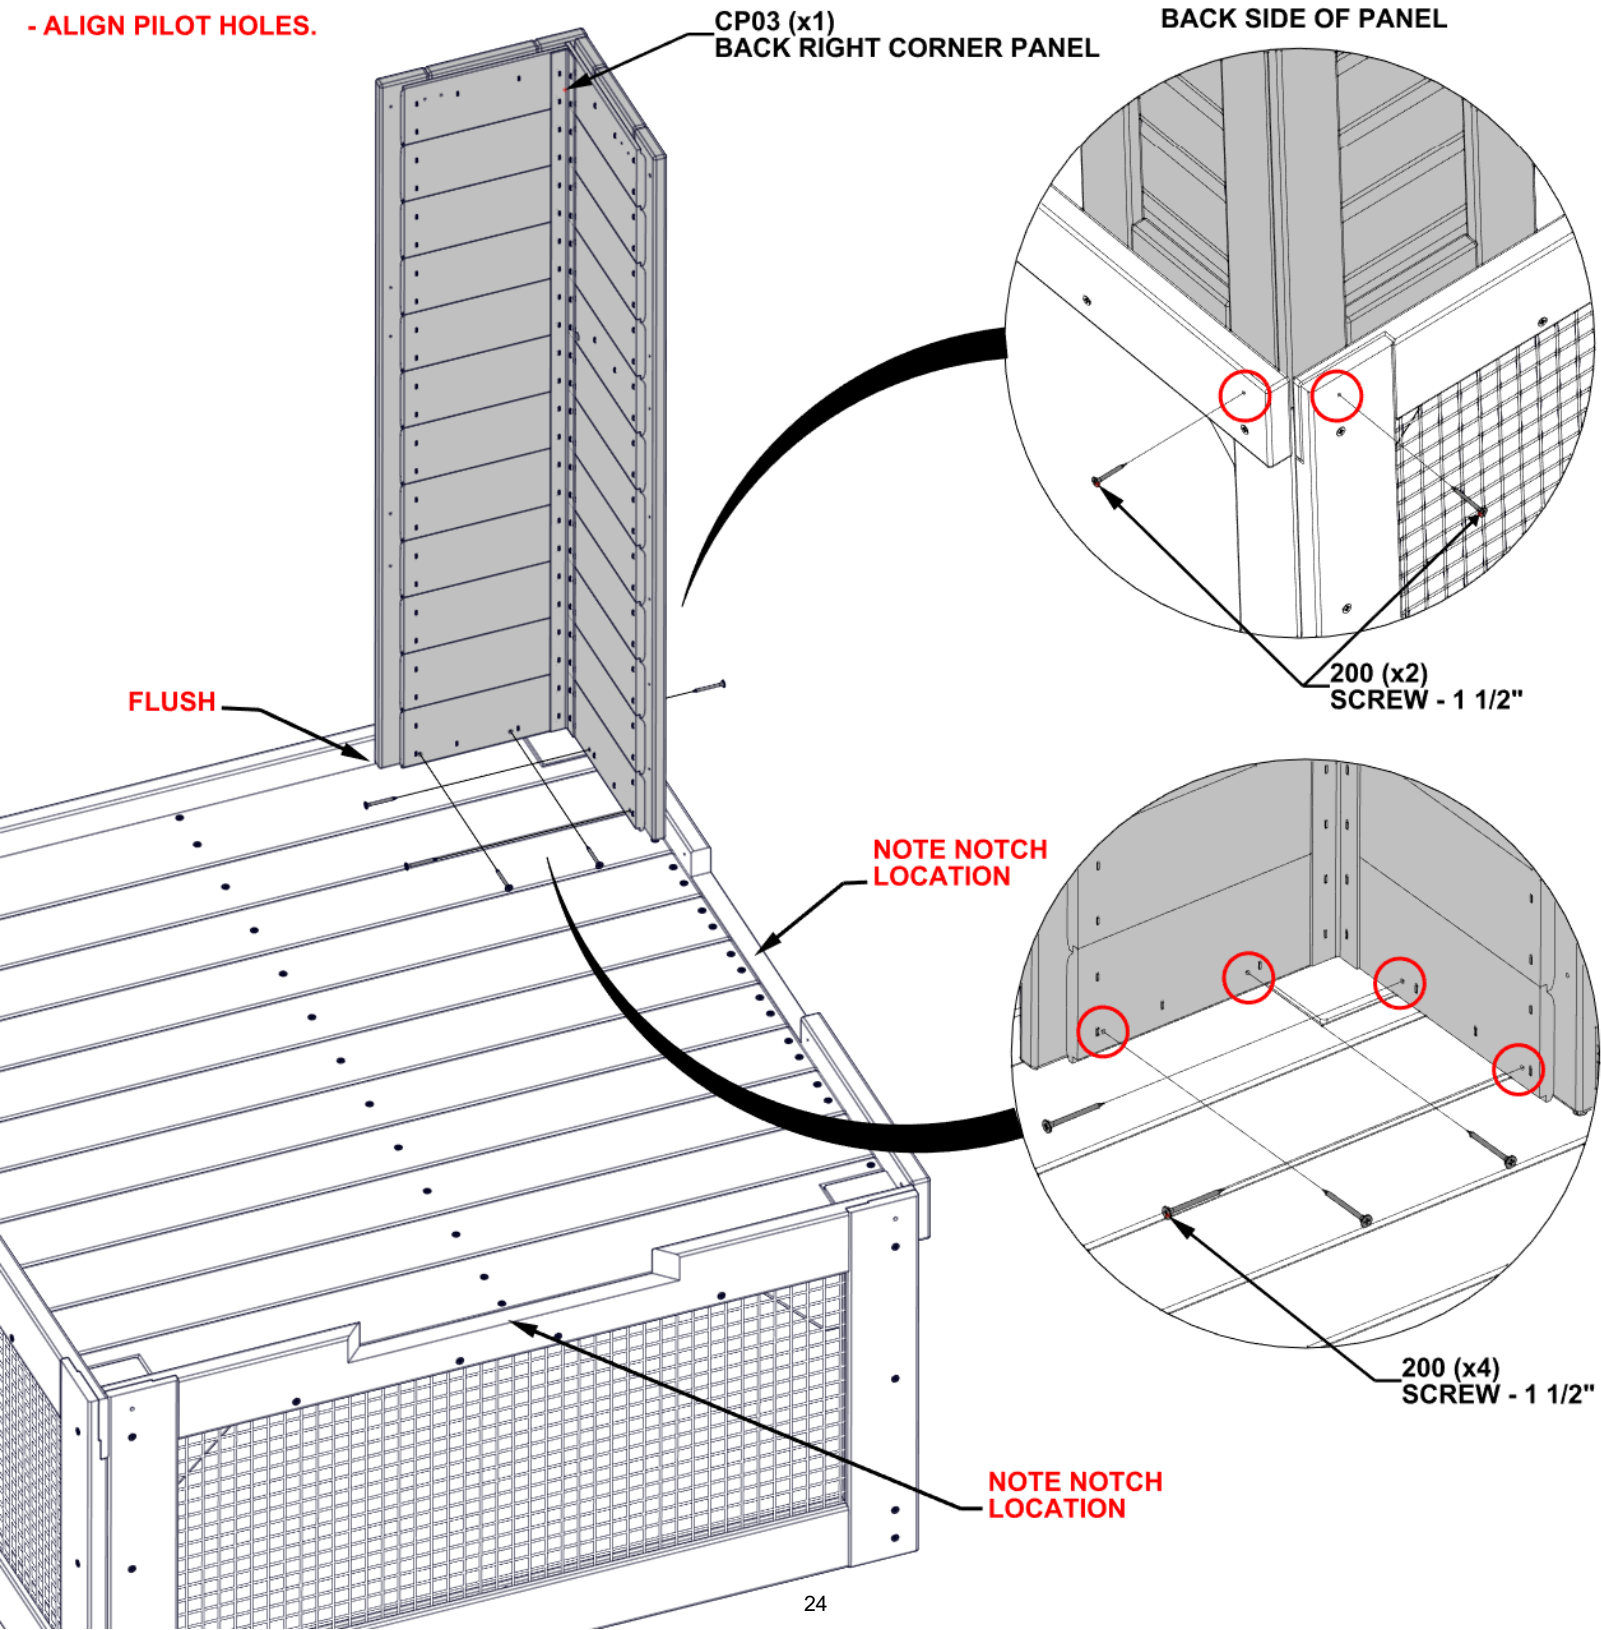


STEP 13 - CHICKEN COOP ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
10	H100797	SCREW PWH 8x1 BLK
3	H100823	SCREW PWH 8x1 1/2 BLK

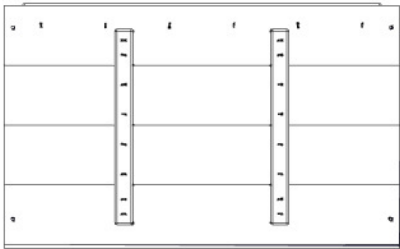

BP03 BACK TOP PANEL - W2A04416
(x1) 1 1/2"x13 1/16"x21 1/8" (38x332x536)

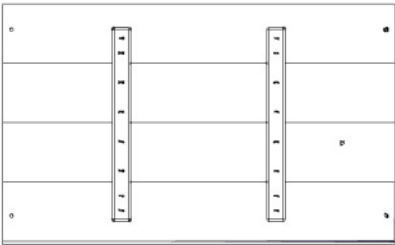


BP02 BACK MIDDLE PANEL - W2A04414
(x1) 7/8"x12 15/16"x21 1/8" (22x329x536)

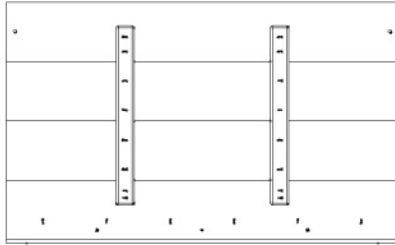

BP01 BACK BOTTOM PANEL - W2A04415
(x1) 1 1/2"x12 15/16"x21 1/8" (38x329x536)



- ALIGN PILOT HOLES.

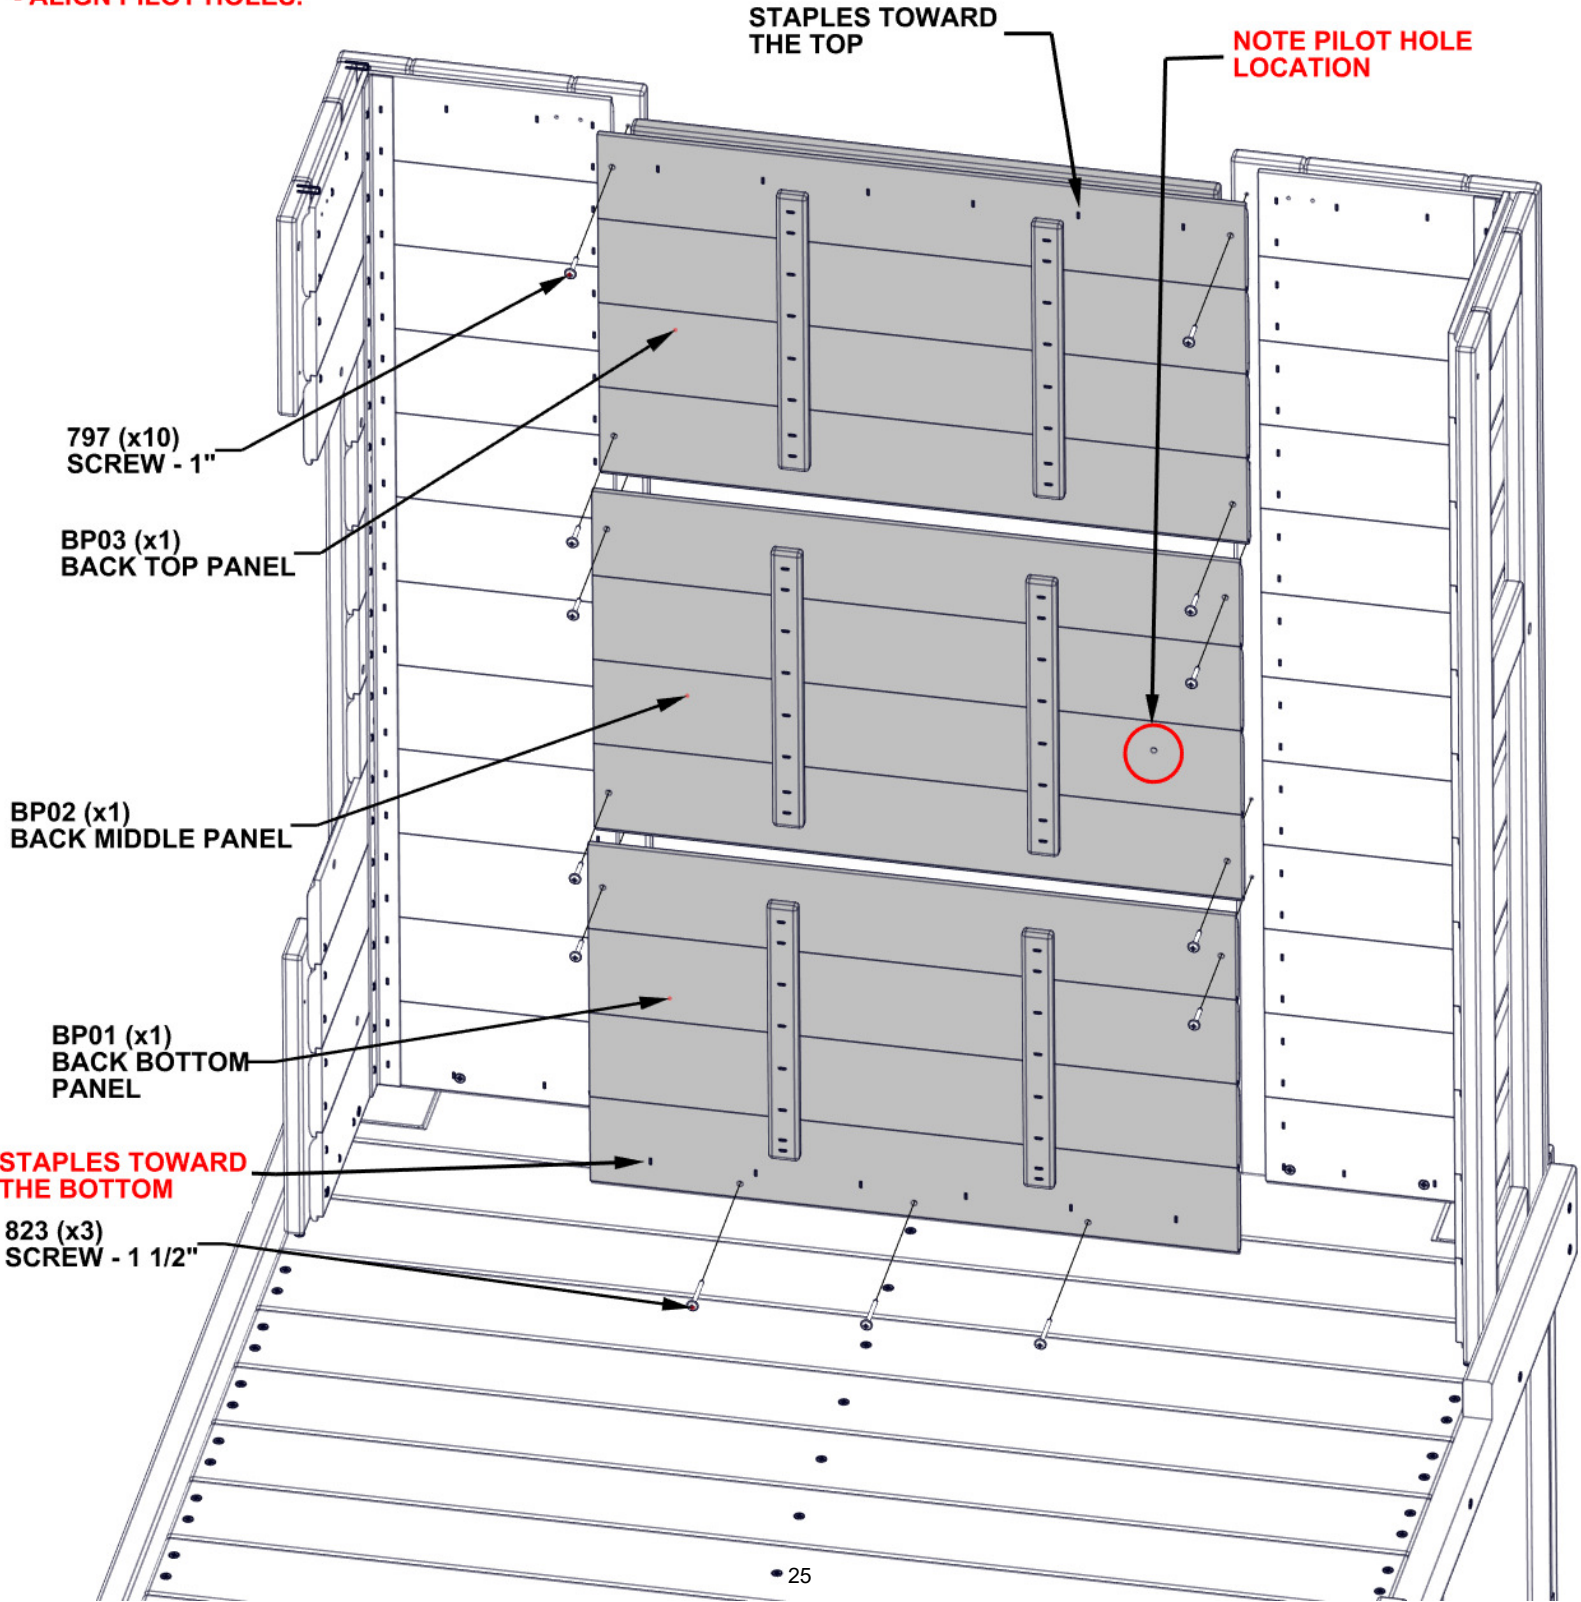

SET CHICKEN COOP ASSEMBLY TO THE SIDE


STEP 14 - FRONT LEFT CORNER PANEL

QTY	PART NUMBER	DESCRIPTION
8	H100797	SCREW PWH 8x1 BLK

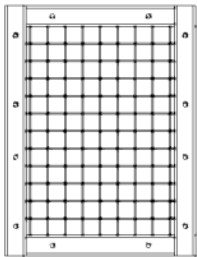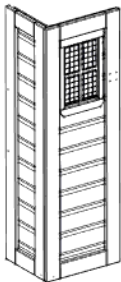

CP01 FRONT LEFT CORNER PANEL - W2A04426
(x1) 10 1/16"x12 5/8"x38 9/16" (256x320x980)



WM01 WINDOW MESH - W2A04622
(x1) 9/16"x8 9/16"x11 1/4" (14x218x286)

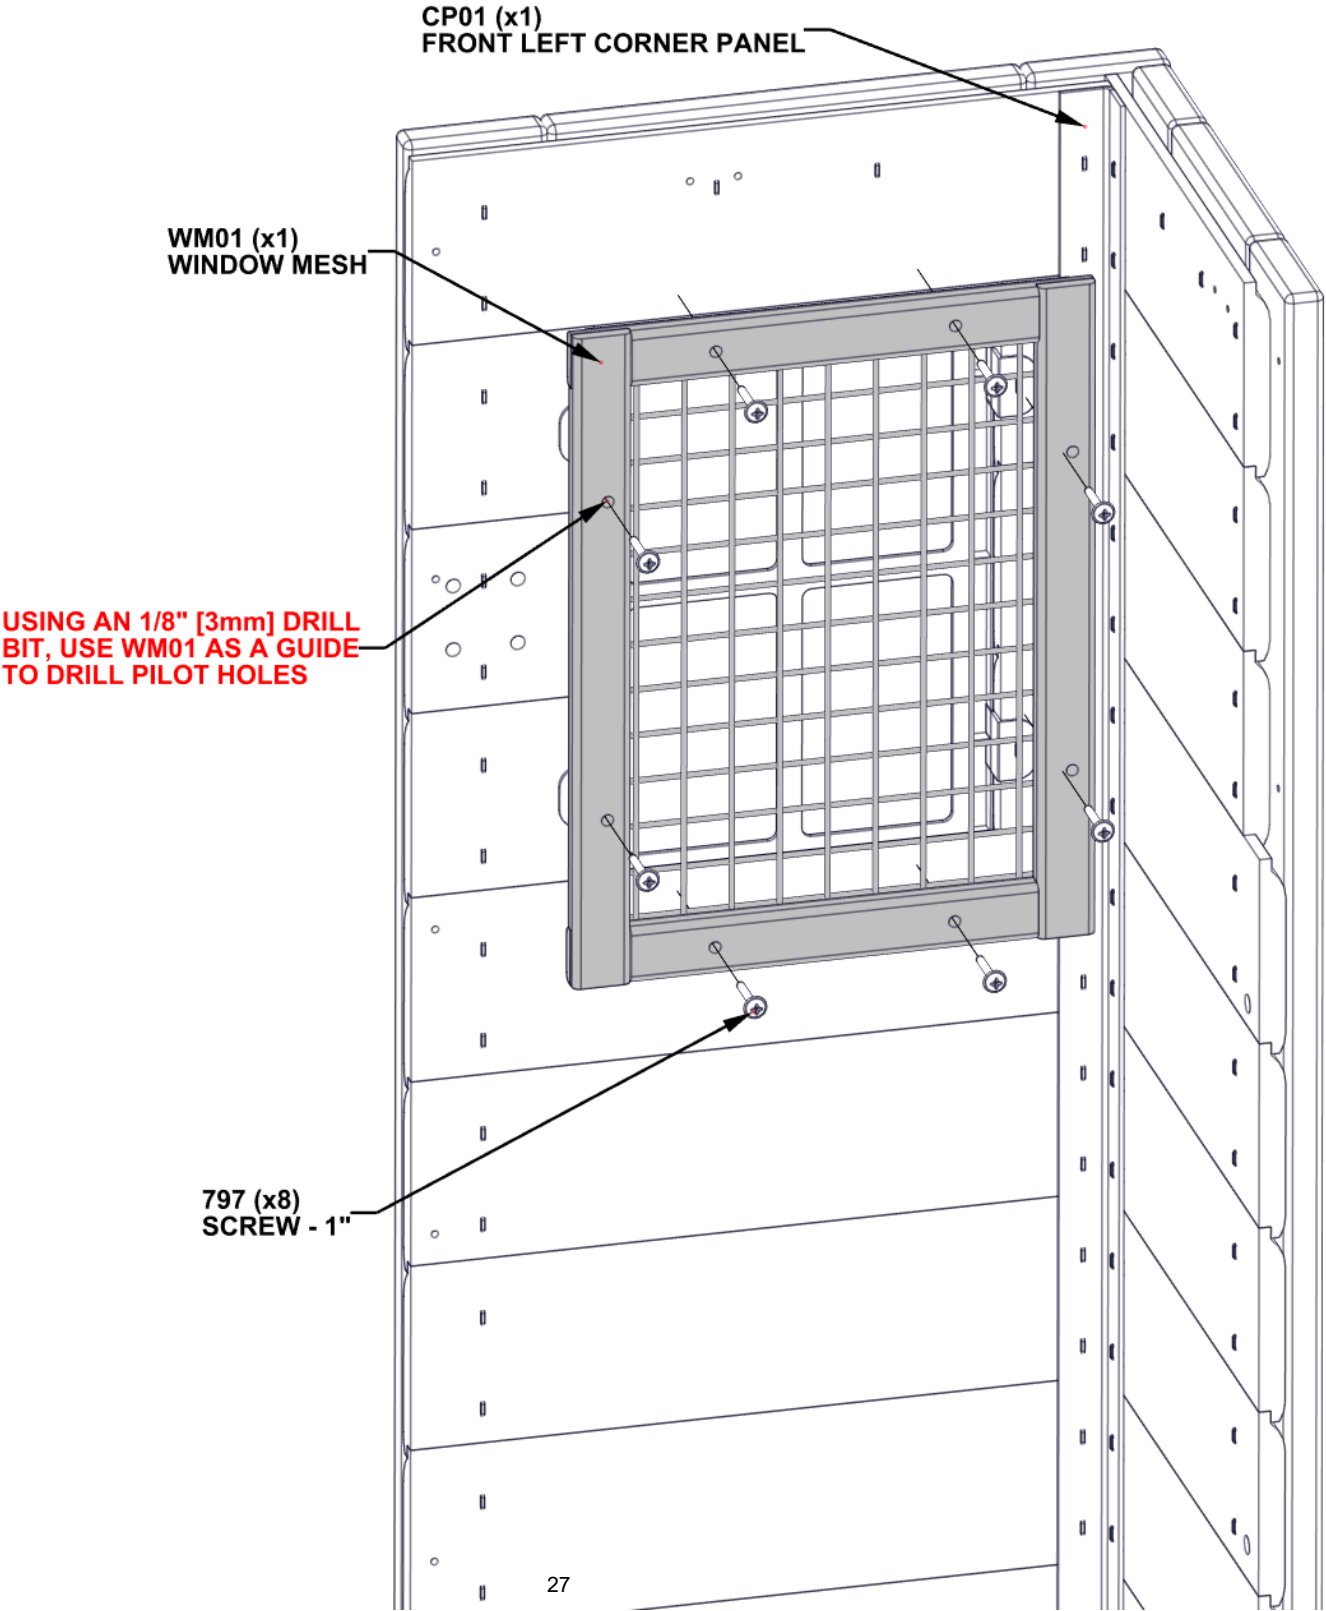

**SET FRONT LEFT CORNER PANEL
ASSEMBLY TO THE SIDE**


STEP 15 - FRONT RIGHT CORNER PANEL

QTY	PART NUMBER	DESCRIPTION
8	H100797	SCREW PWH 8x1 BLK

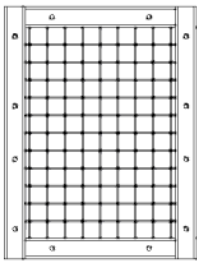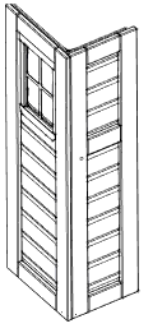

CP02 FRONT RIGHT CORNER PANEL - W2A04427
(x1) 10 1/16"x12 5/8"x38 9/16" (256x320x980)


WM01 WINDOW MESH - W2A04622
(x1) 9/16"x8 9/16"x11 1/4" (14x218x286)

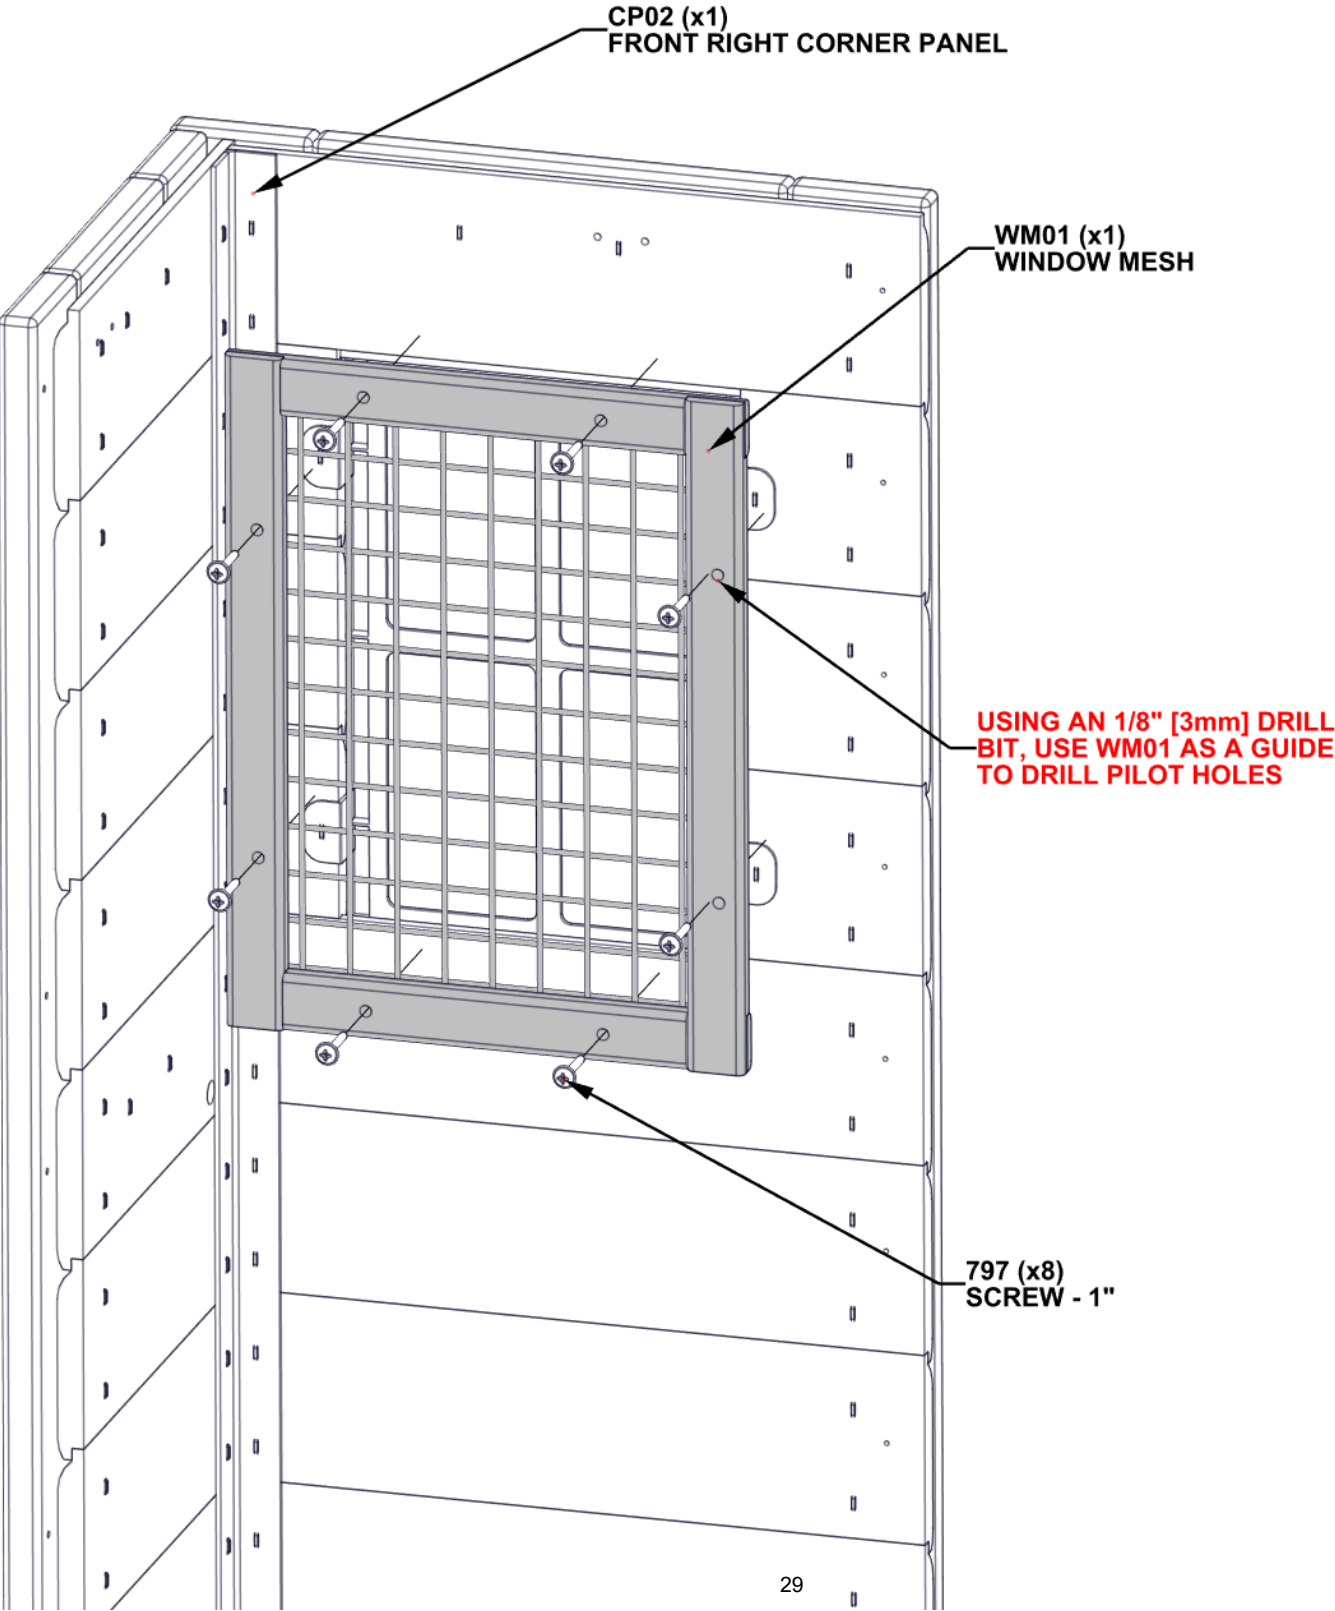

**SET FRONT RIGHT CORNER PANEL
ASSEMBLY TO THE SIDE**


STEP 16 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100382	SCREW PFH 8x1 3/4 BLK
2	H100200	SCREW PFH 8x1 1/2 BLK


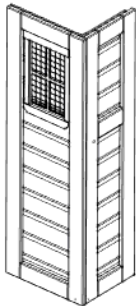


FRONT RIGHT CORNER PANEL
(x1) FROM STEP 15

- ALIGN PILOT HOLES.

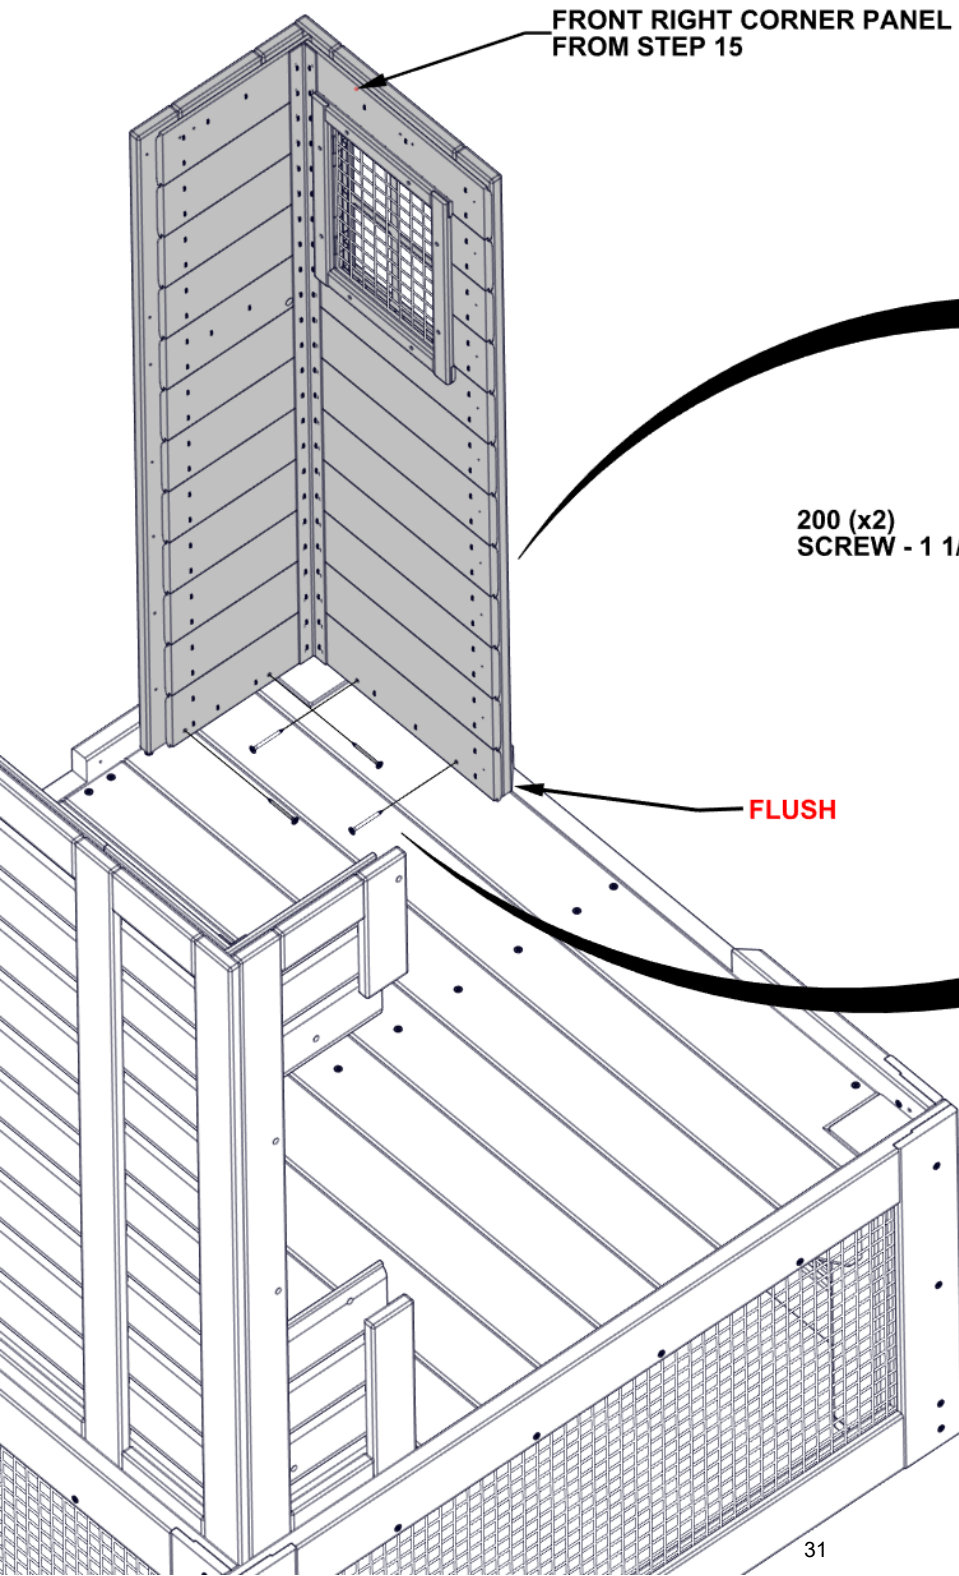


BACK SIDE OF PANEL

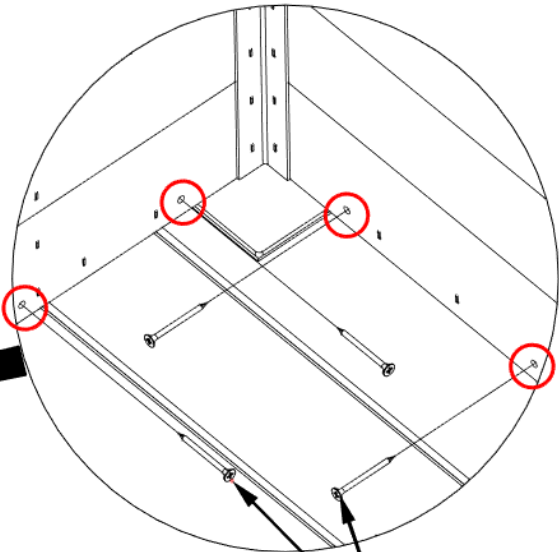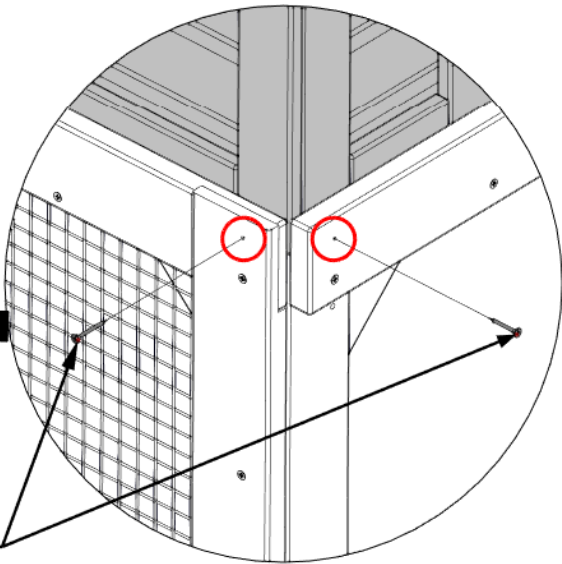


STEP 17 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100797	SCREW PWH 8x1 BLK
2	H100382	SCREW PFH 8x1 3/4 BLK

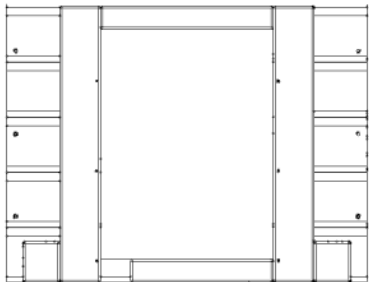


RP03 CHICKEN DOOR WALL PANEL - W2A04625
(x1) 1 1/16"x16 1/8"x20 7/8" (27x410x530)

- ALIGN PILOT HOLES.

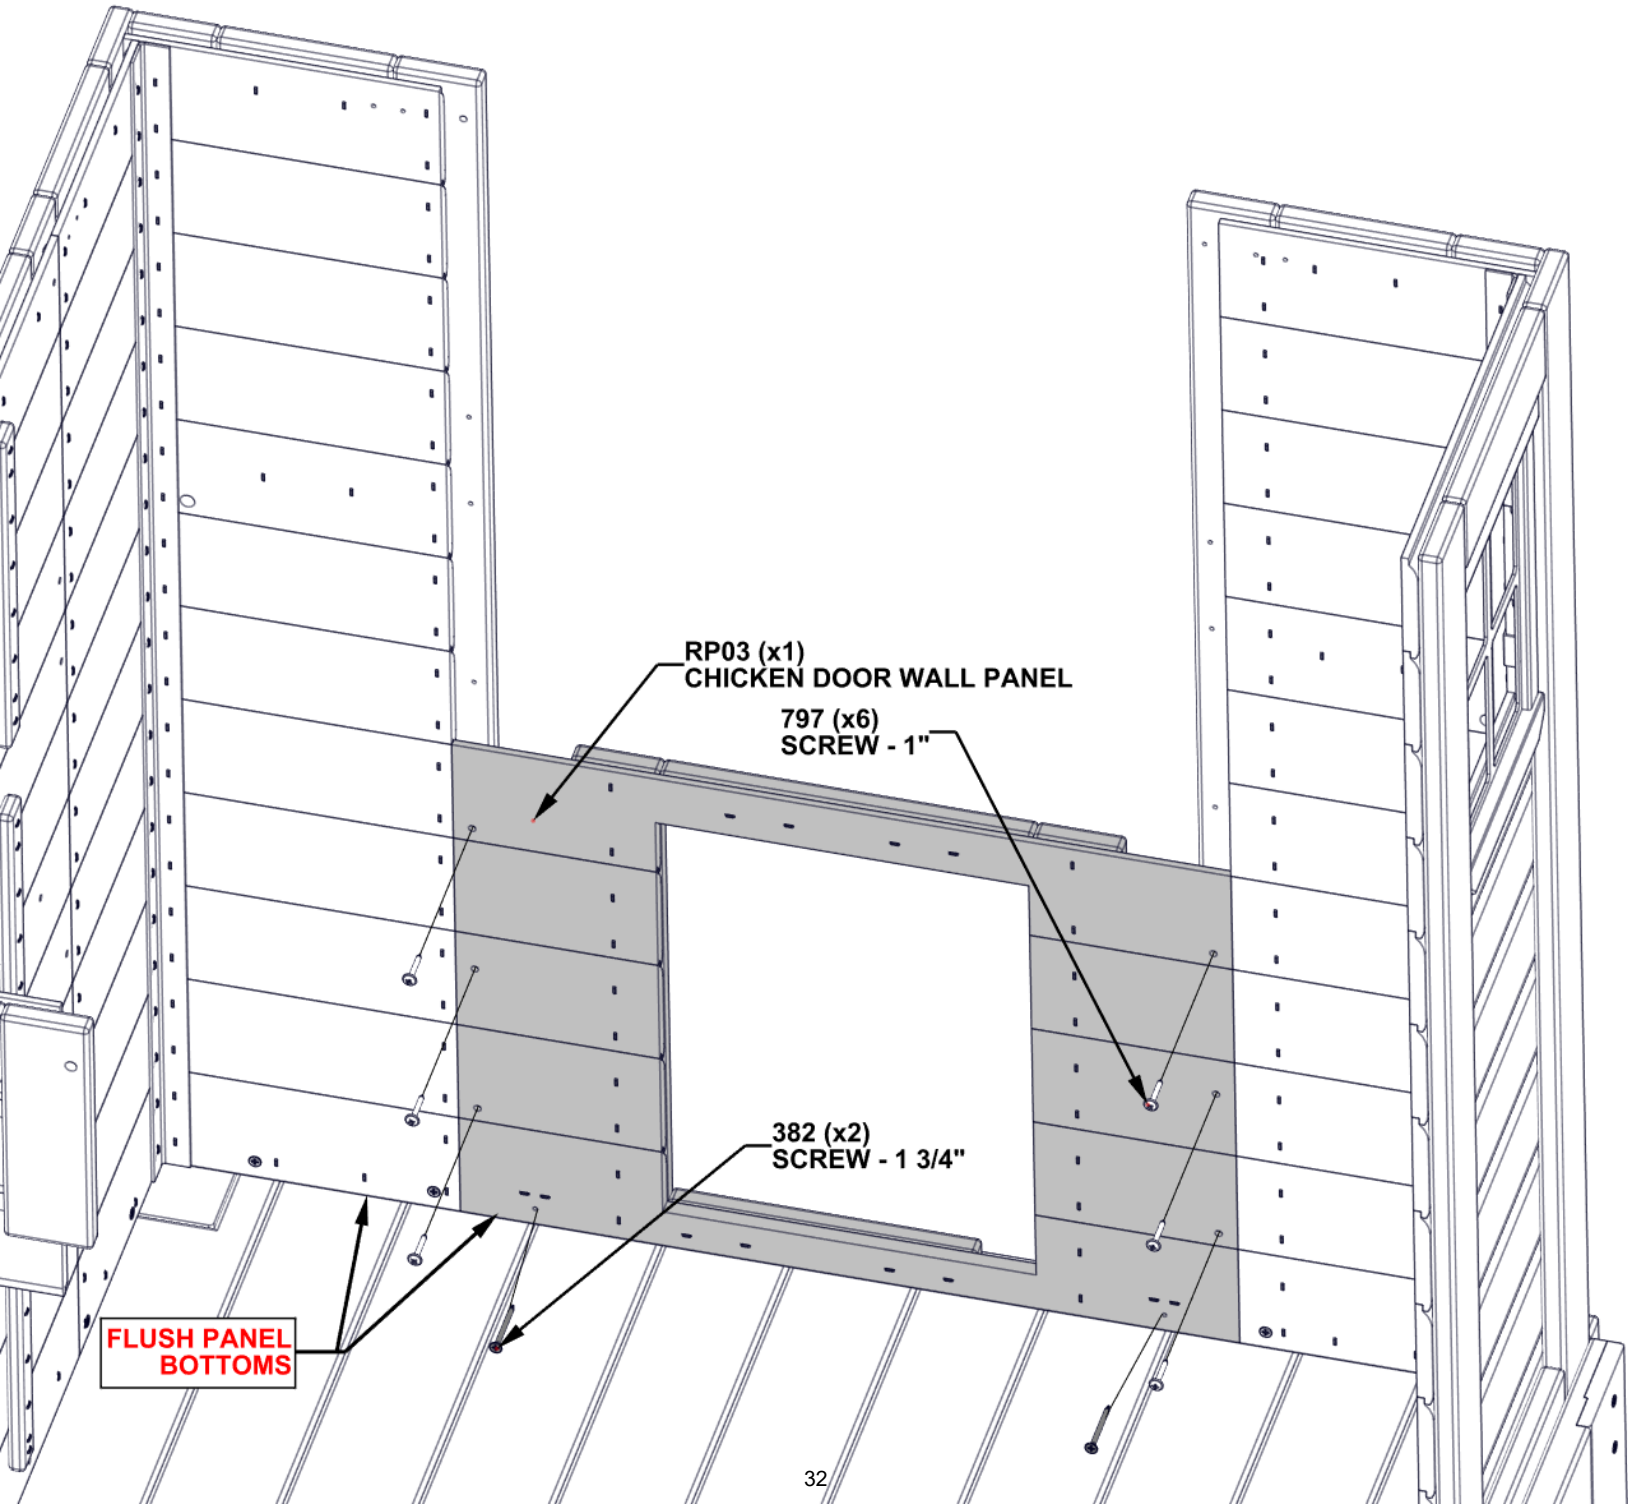


STEP 18 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
7	H100797	SCREW PWH 8x1 BLK

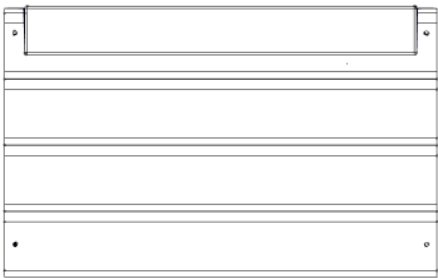


RP02 RIGHT TOP PANEL - W2A04413
(x1) 1 1/2"x13 1/16"x20 7/8" (38x332x530)

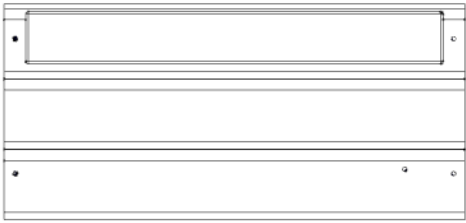


RP01 RIGHT CENTER PANEL - W2A04412
(1x) 1 1/2"x9 3/4"x21 5/8" (38x248x530)

- ALIGN PILOT HOLES.

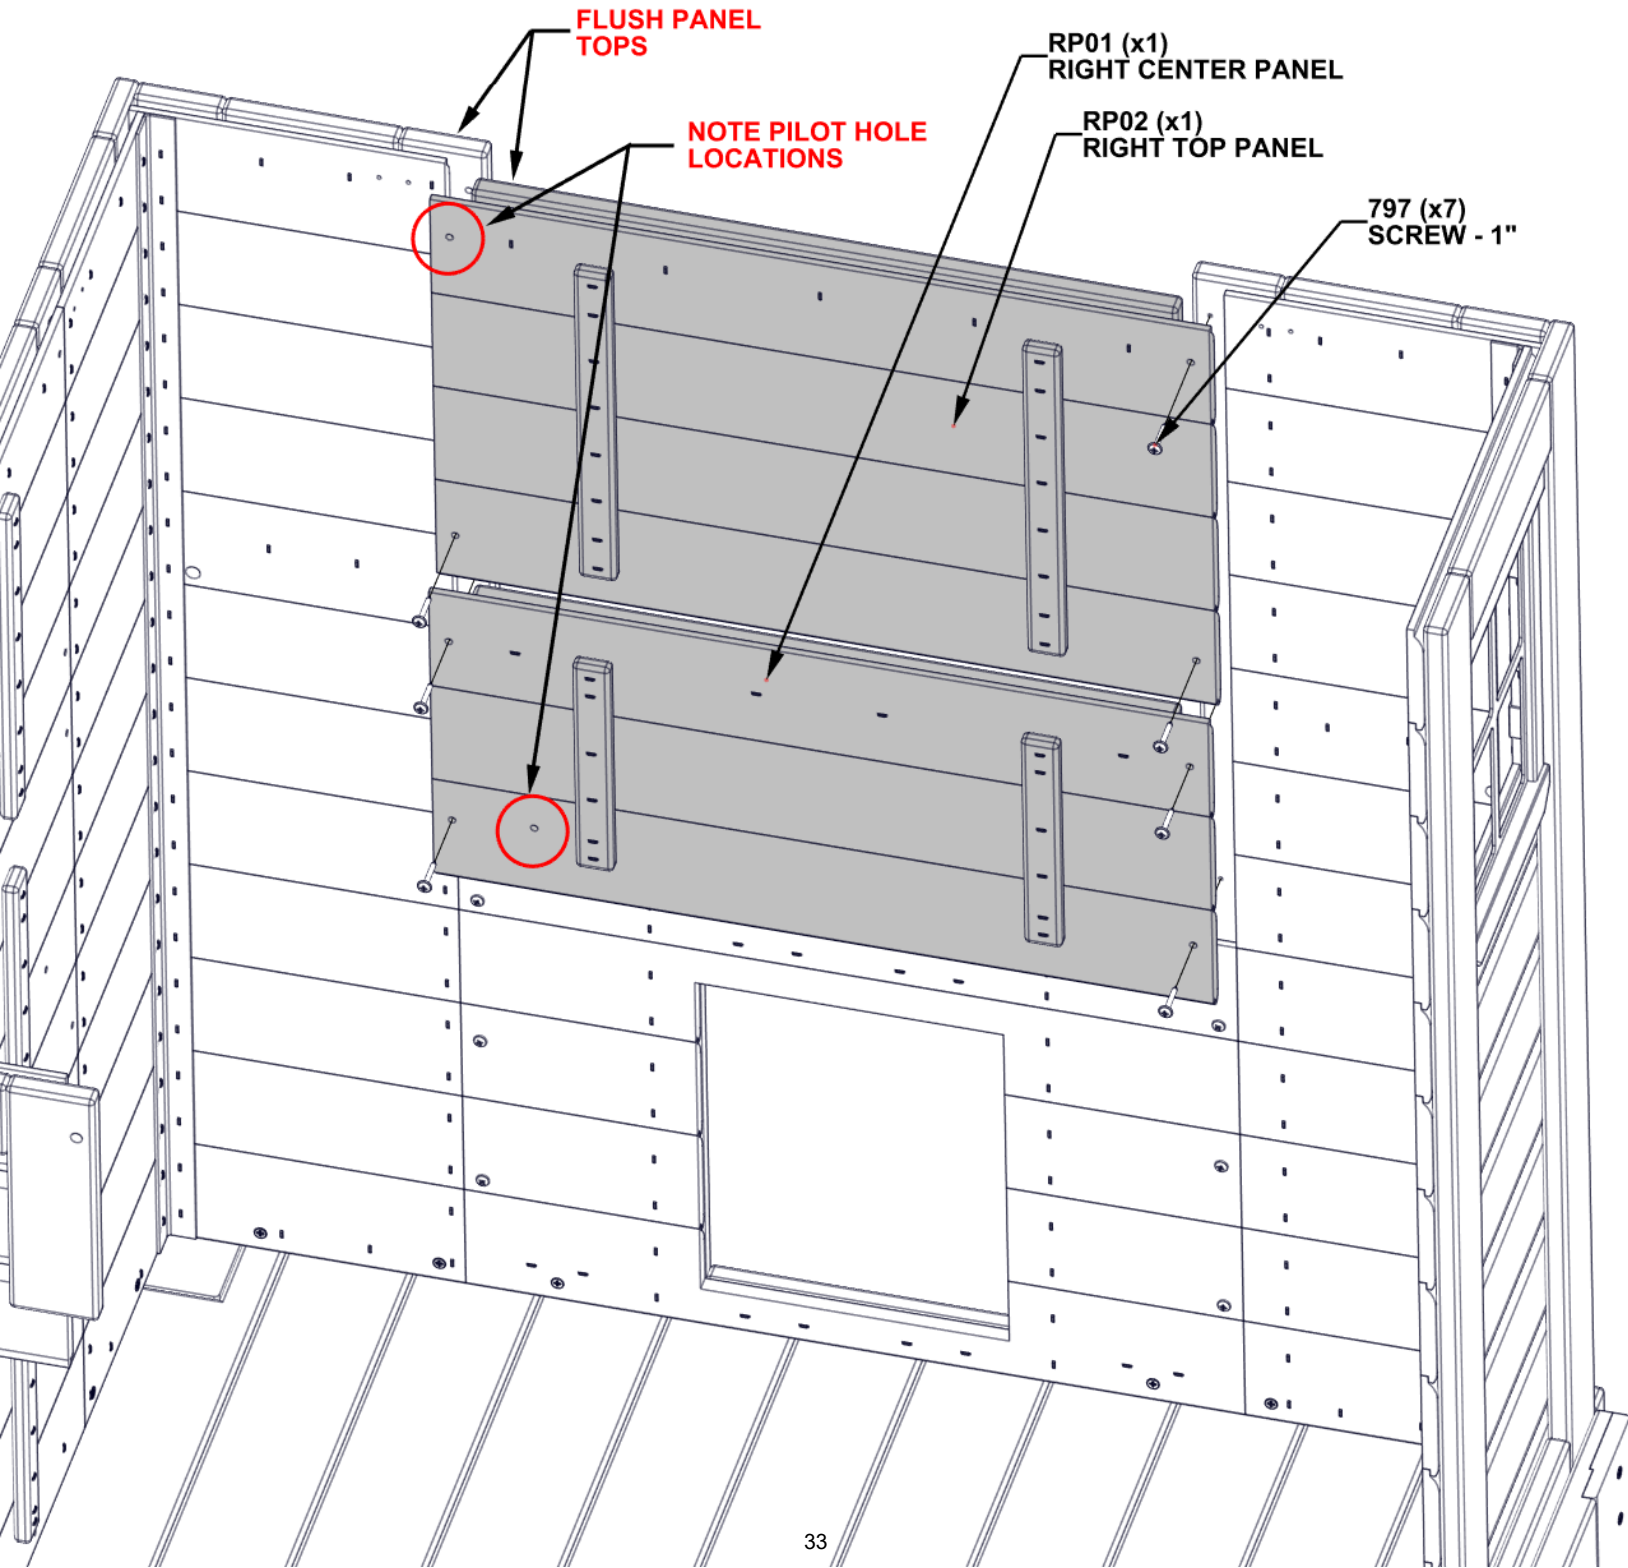

STEP 19 - CHICKEN COOP ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
4	H100382	SCREW PFH 8x1 3/4 BLK
1	H100200	SCREW PFH 8x1 1/2 BLK

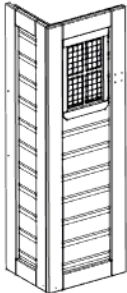

FRONT LEFT CORNER PANEL
(x1) FROM STEP 14

- ALIGN PILOT HOLES.

FRONT LEFT CORNER PANEL
FROM STEP 14

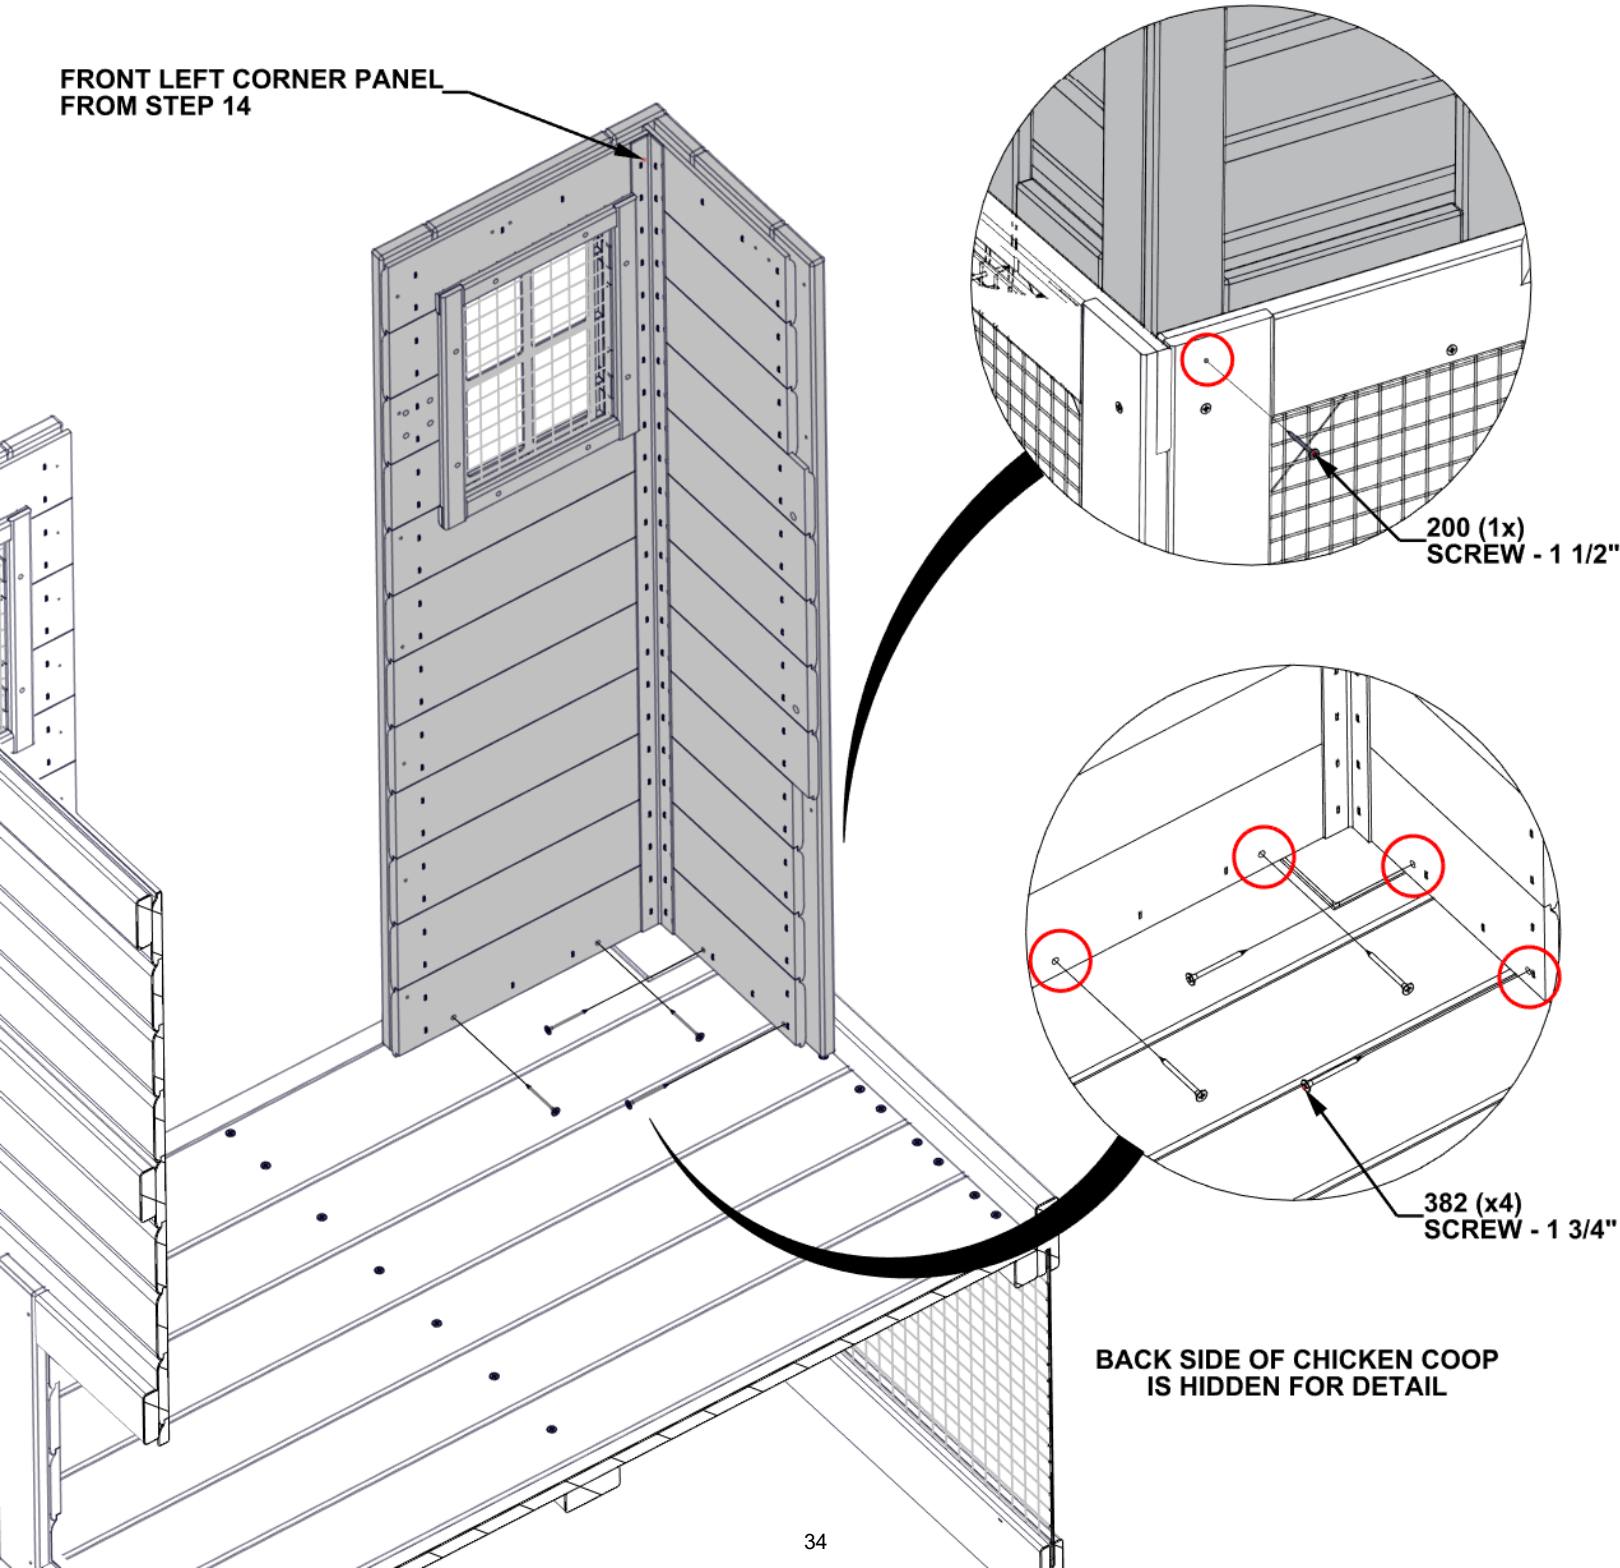


200 (1x)
SCREW - 1 1/2"

382 (x4)
SCREW - 1 3/4"

BACK SIDE OF CHICKEN COOP
IS HIDDEN FOR DETAIL


STEP 20 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
3	H100382	SCREW PFH 8x1 3/4 BLK
1	H100797	SCREW PWH 8x1 BLK

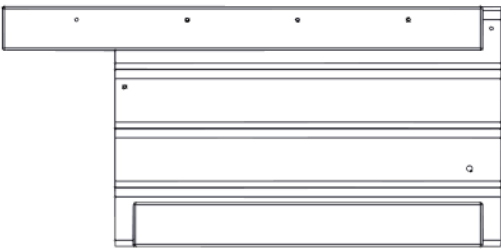

LP01 LEFT BOTTOM PANEL - W2A04419
(x1) 1 1/2"x12 15/16"x26 15/16" (38x329x685)


- ALIGN PILOT HOLES.

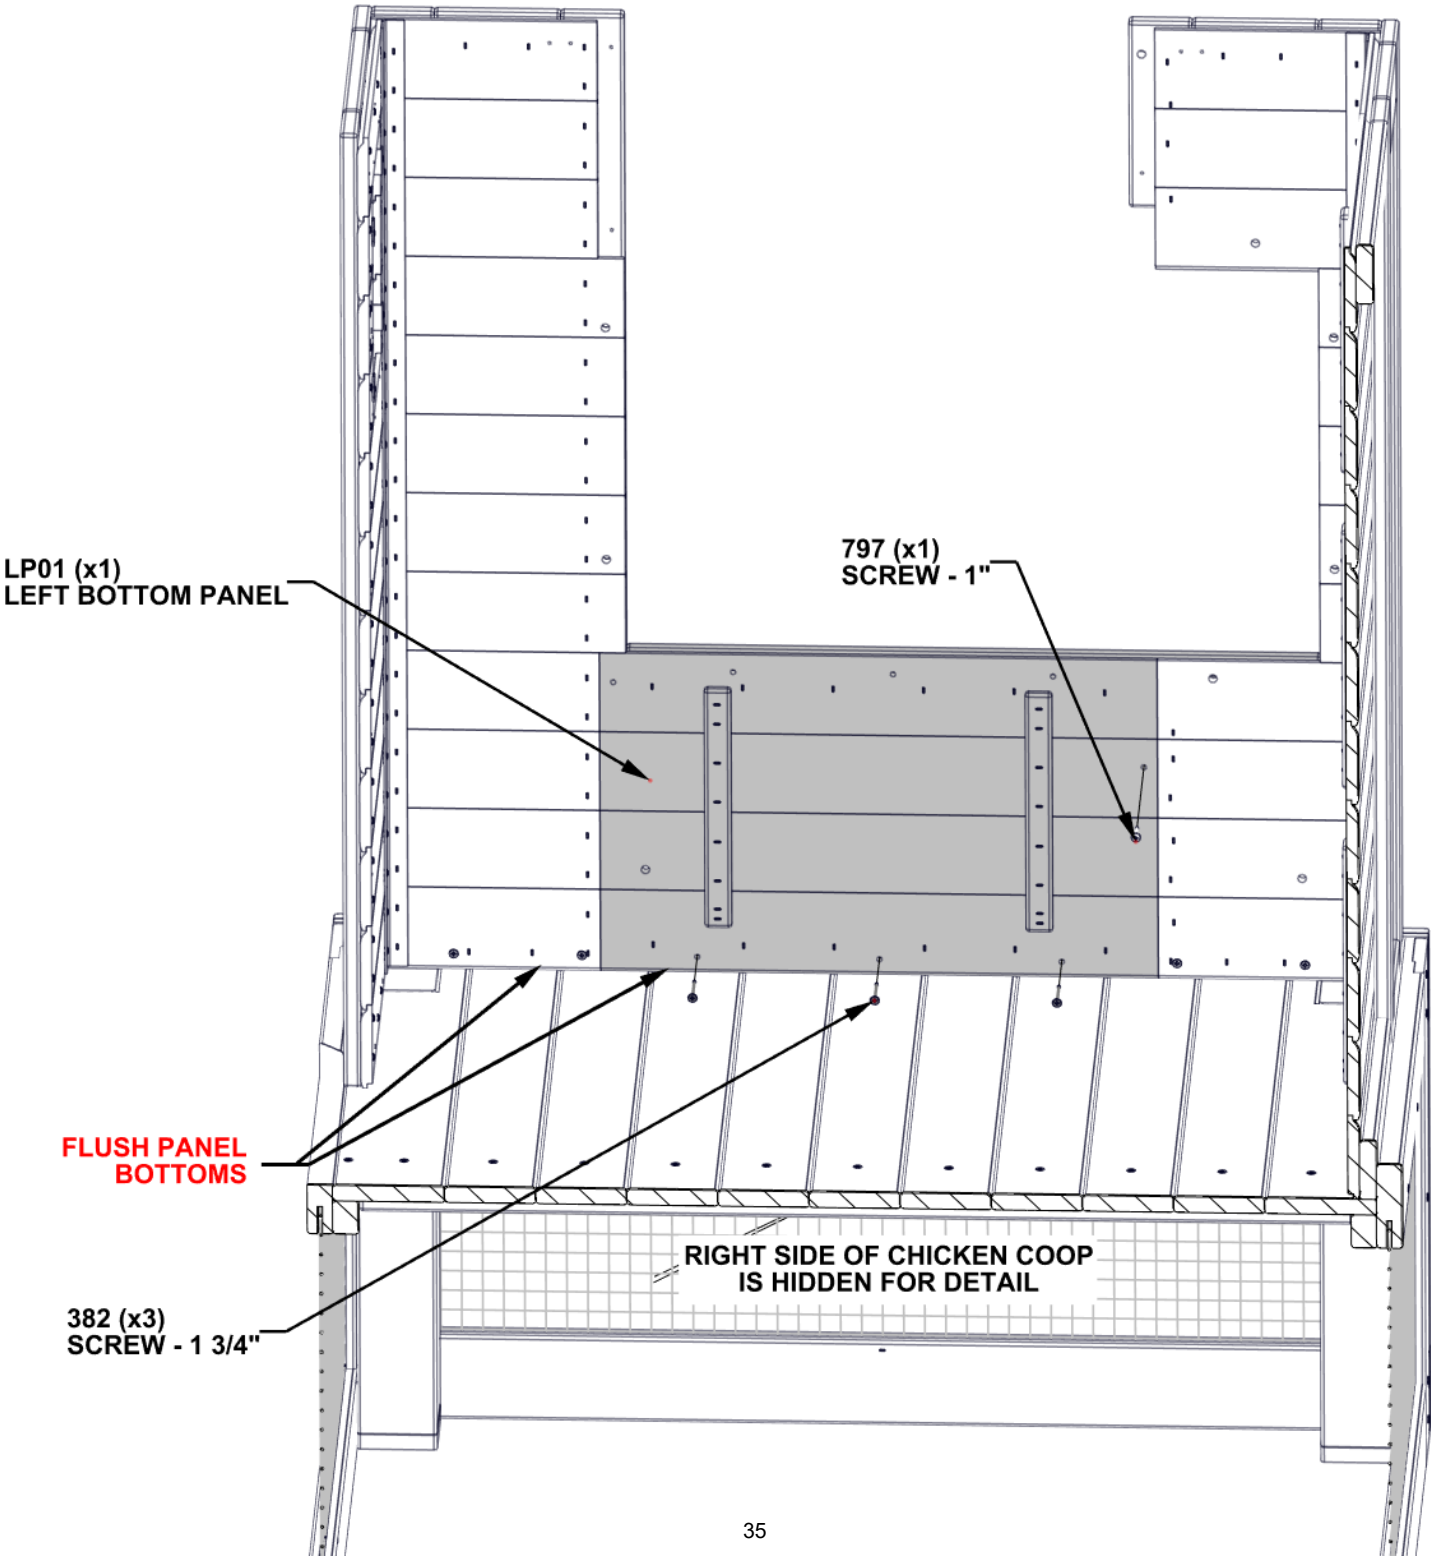


SET CHICKEN COOP ASSEMBLY TO THE SIDE

STEP 21 - NESTING BOX ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100201	SCREW PFH 8x2 1/2 BLK

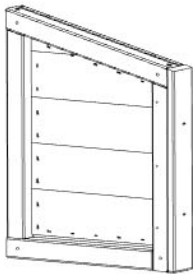

NP01 LEFT BOX PANEL - W2A04421
(x1) 2 1/2"x14"x17 5/16" (63x356x440)


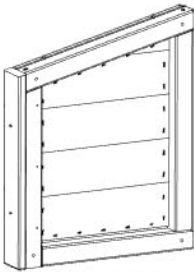


NP02 RIGHT BOX PANEL - W2A04422
(x1) 2 1/2"x14"x17 5/16" (63x356x440)




P6 FRAME BOARD - W4L20772
(x2) 1 7/16"x1 7/16"x10 7/16" (36x36x256)

- ALIGN PILOT HOLES.

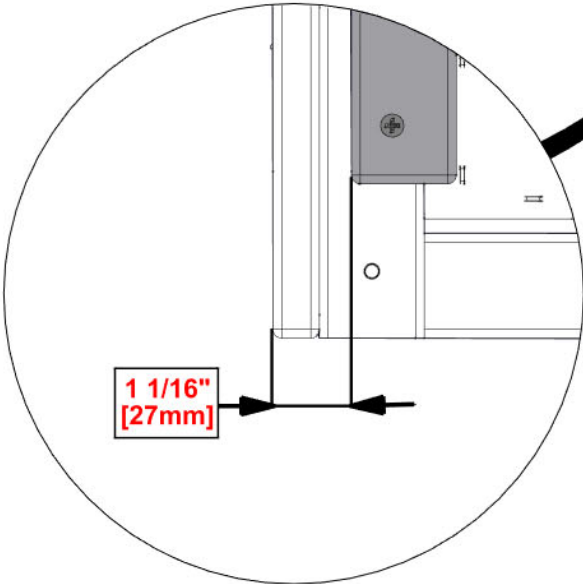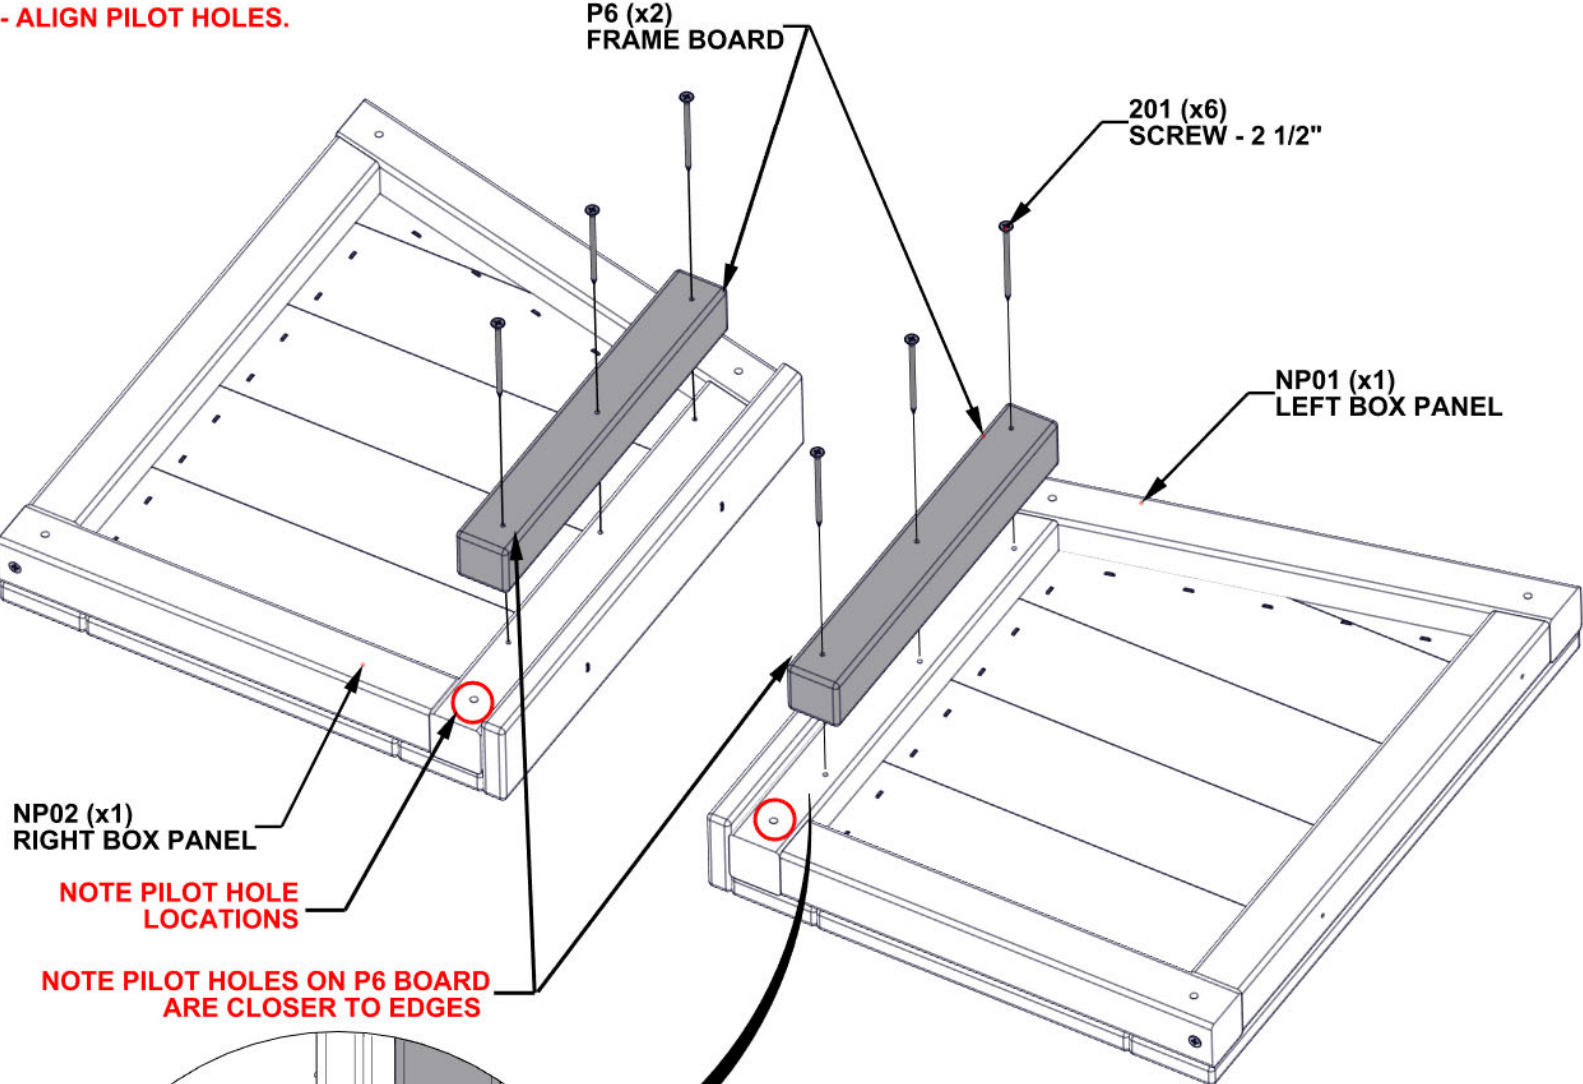


STEP 22 - NESTING BOX ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100821	SCREW PFH 8x2 3/4 BLK

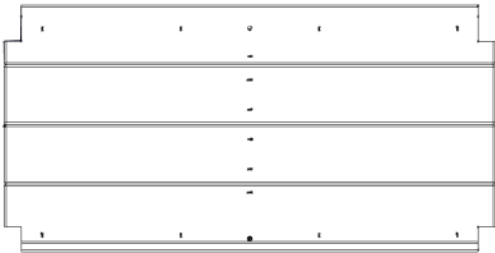

BB01 BOX BASE - W2A04423
(x1) 2 3/8"x14"x27 15/16" (60x356x710)




P3 CLEAT - W4L20506
(x1) 1 7/16"x1 7/16"x13 13/16" (36x36x351)




P1 CLEAT - W4L20504
(x1) 1 7/16"x1 7/16"x11" (36x36x280)

- ALIGN PILOT HOLES

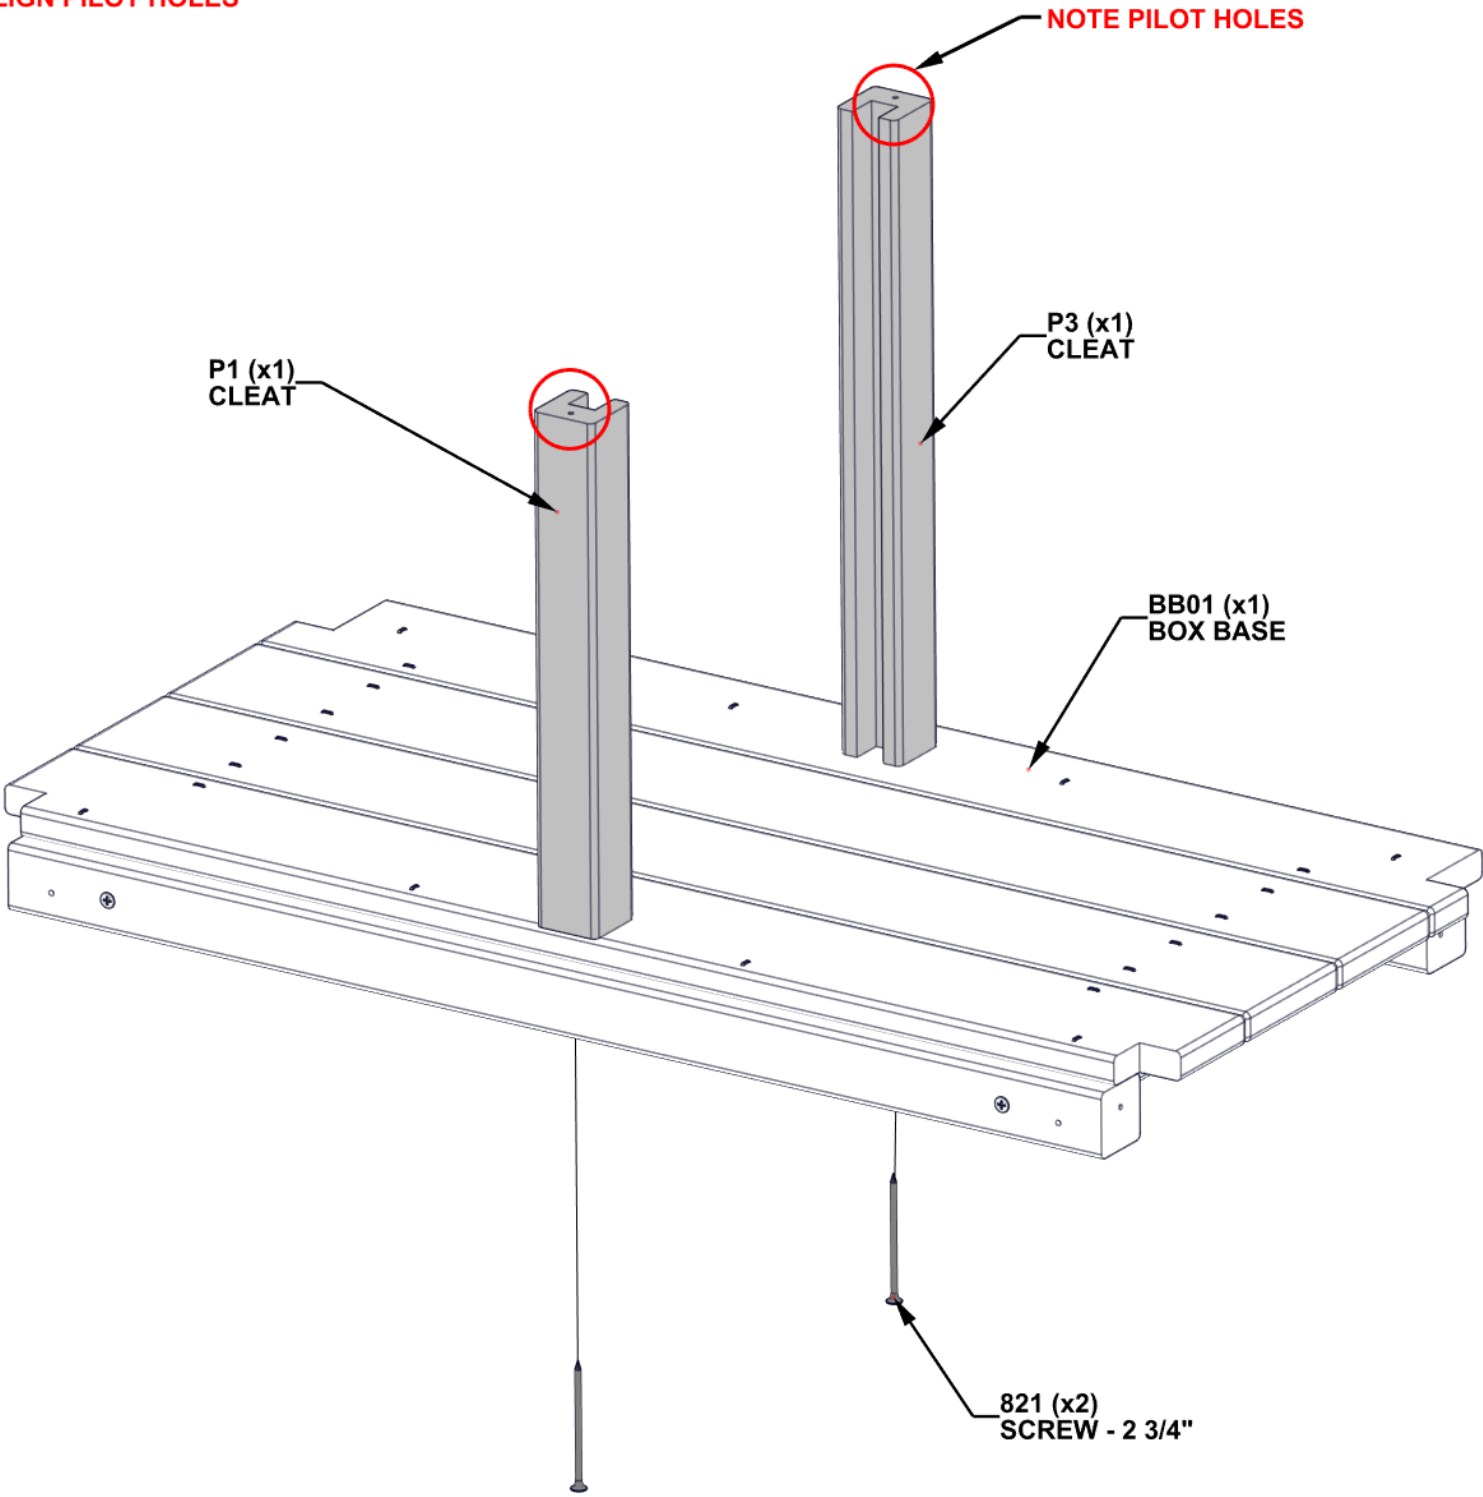

STEP 23 - NESTING BOX ASSEMBLY

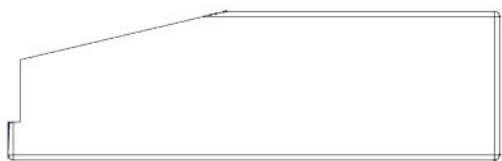


M5 DIVIDER BOARD - W4L20508
(x1) 5/8"x3 3/8"x11 3/16" (16x86x284)




M6 DIVIDER BOARD - W4L20507
(x3) 5/8"x3 3/8"x11 3/16" (16x86x284)

- NO HARDWARE REQUIRED FOR THIS STEP.
- SLIDE BOARDS INTO CHANNEL IN ORDER SHOWN BELOW.

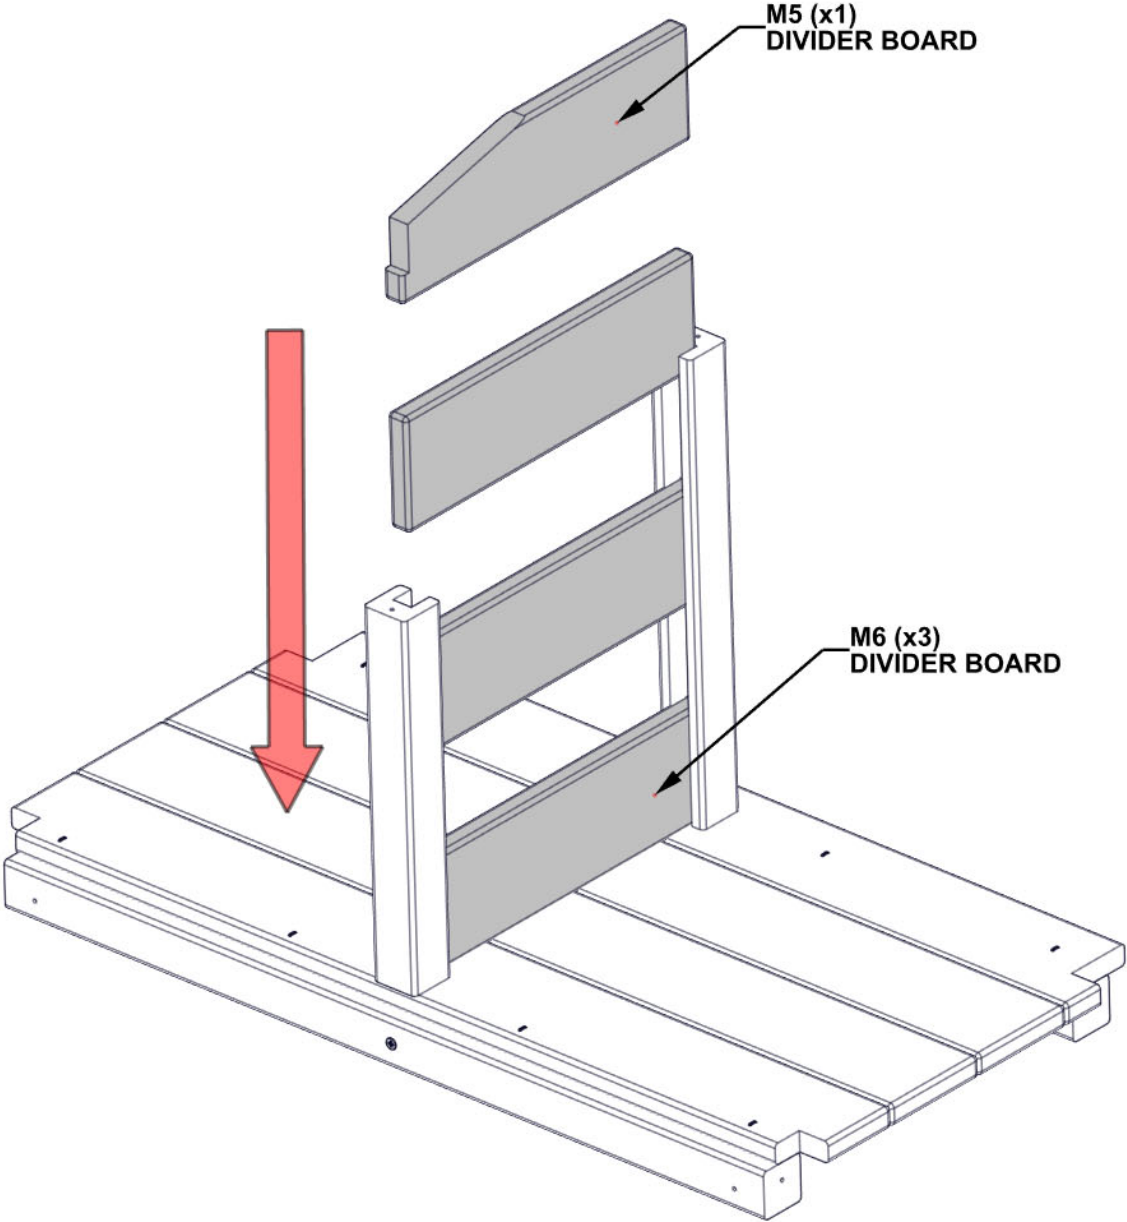

STEP 24 - NESTING BOX ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100382	SCREW PFH 8x1 3/4 BLK
2	H100201	SCREW PFH 8x2 1/2 BLK

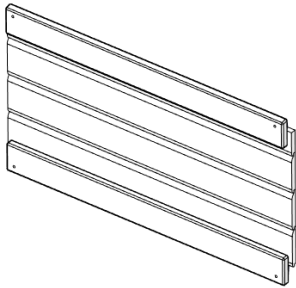

NP03 NESTING BOX BACK PANEL - W2A04477
(x1) 1 1/4"x14 1/8"x26" (32x360x660)




P2 FRAME BOARD - W4L20505
(x1) 1 7/16"x1 7/16"x26" (36x36x660)



P7 FRAME BOARD - W4L20775
(x1) 1 7/16"x1 7/16"x26" (36x36x660)

- ALIGN PILOT HOLES

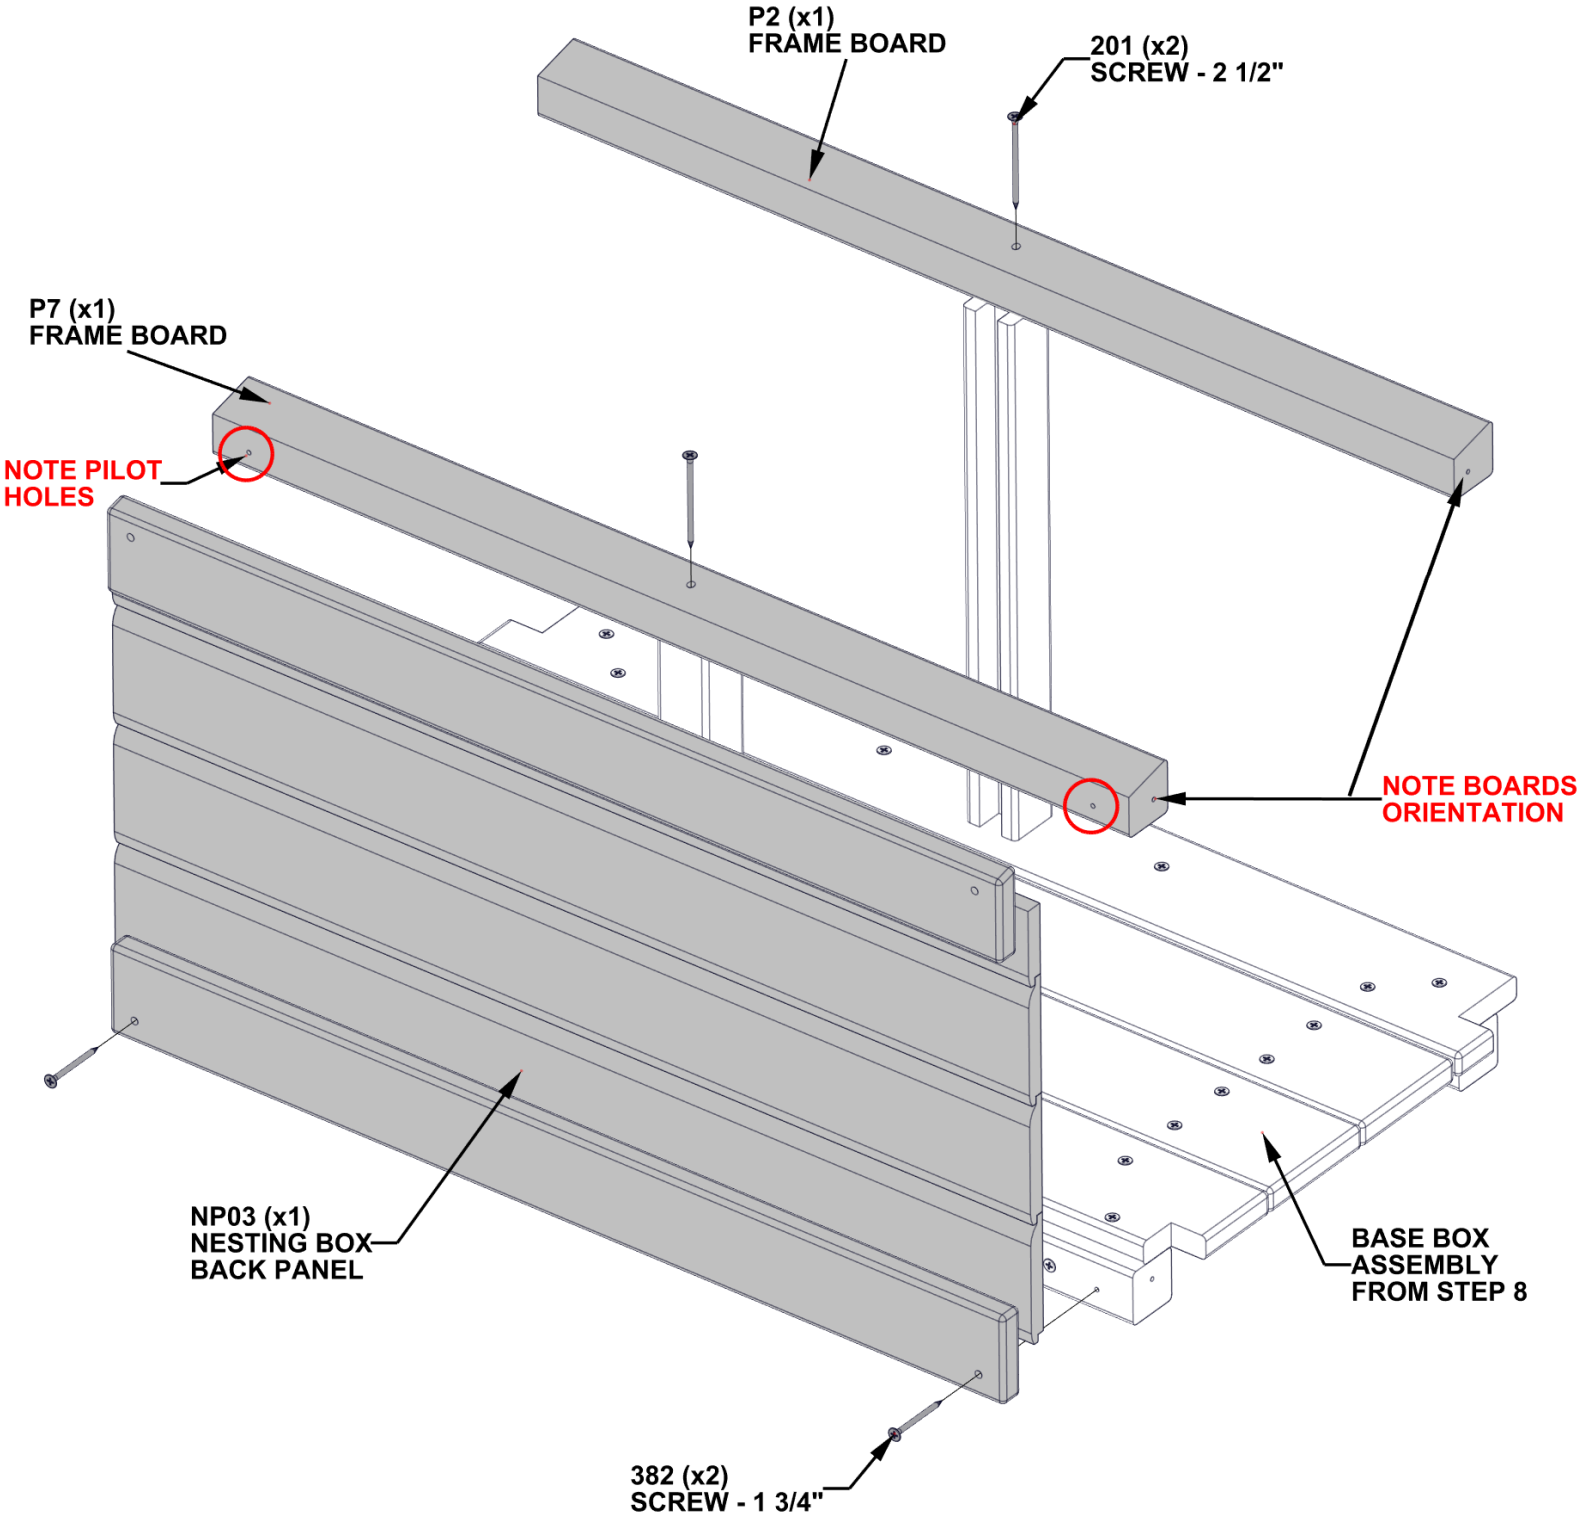


STEP 25 - NESTING BOX ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100382	SCREW PFH 8x1 3/4 BLK
8	H100362	SCREW PFH 8x3 BLK




NP01 LEFT BOX PANEL ASSEMBLY
(x1) FROM STEP 21

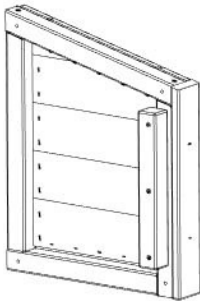

NP02 RIGHT BOX PANEL ASSEMBLY
(x1) FROM STEP 21

- ALIGN PILOT HOLES.

TIP INSTALL NP01 & NP02 PANELS BEFORE FASTENING 382 SCREW


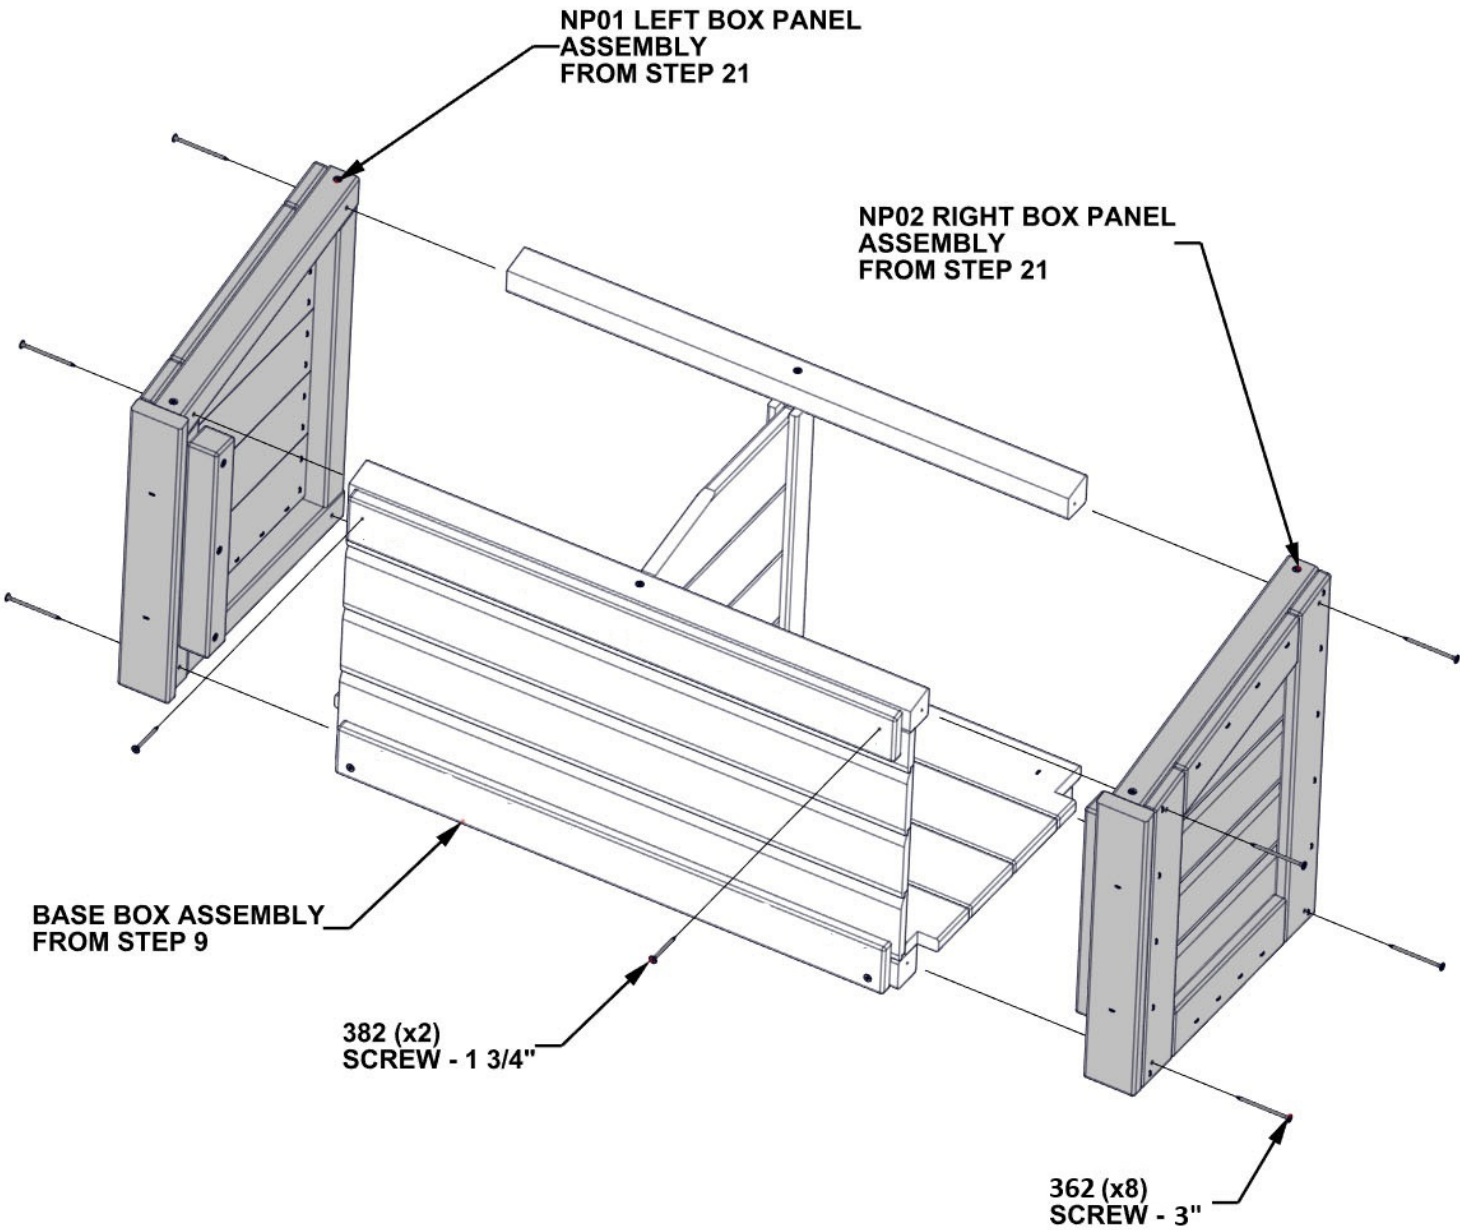


STEP 26A - NESTING BOX ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100398	T-NUT 1/4 BLK



E3 CORBEL - W4L21297
(x2) 1 7/16"x3 3/8"x15" (36x86x380)

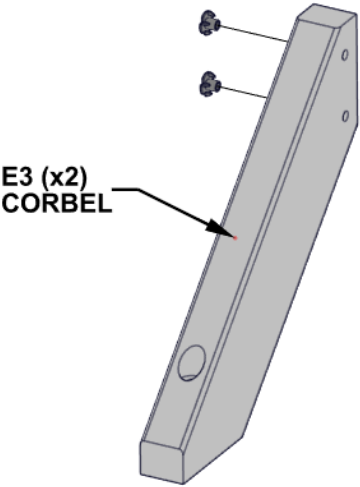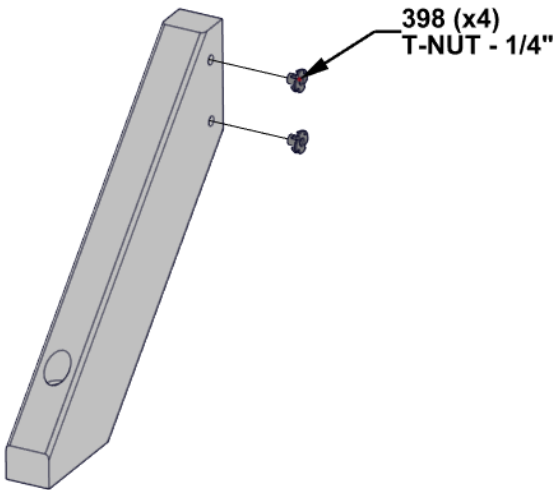


STEP 26B - NESTING BOX ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100405	WASHER LOCK EXT 6x15
4	H101127	BOLT WH 1/4x3-1/2 BLK




CORBEL W/ T-NUTS
FROM STEP 26A

- HAND TIGHTEN ONLY

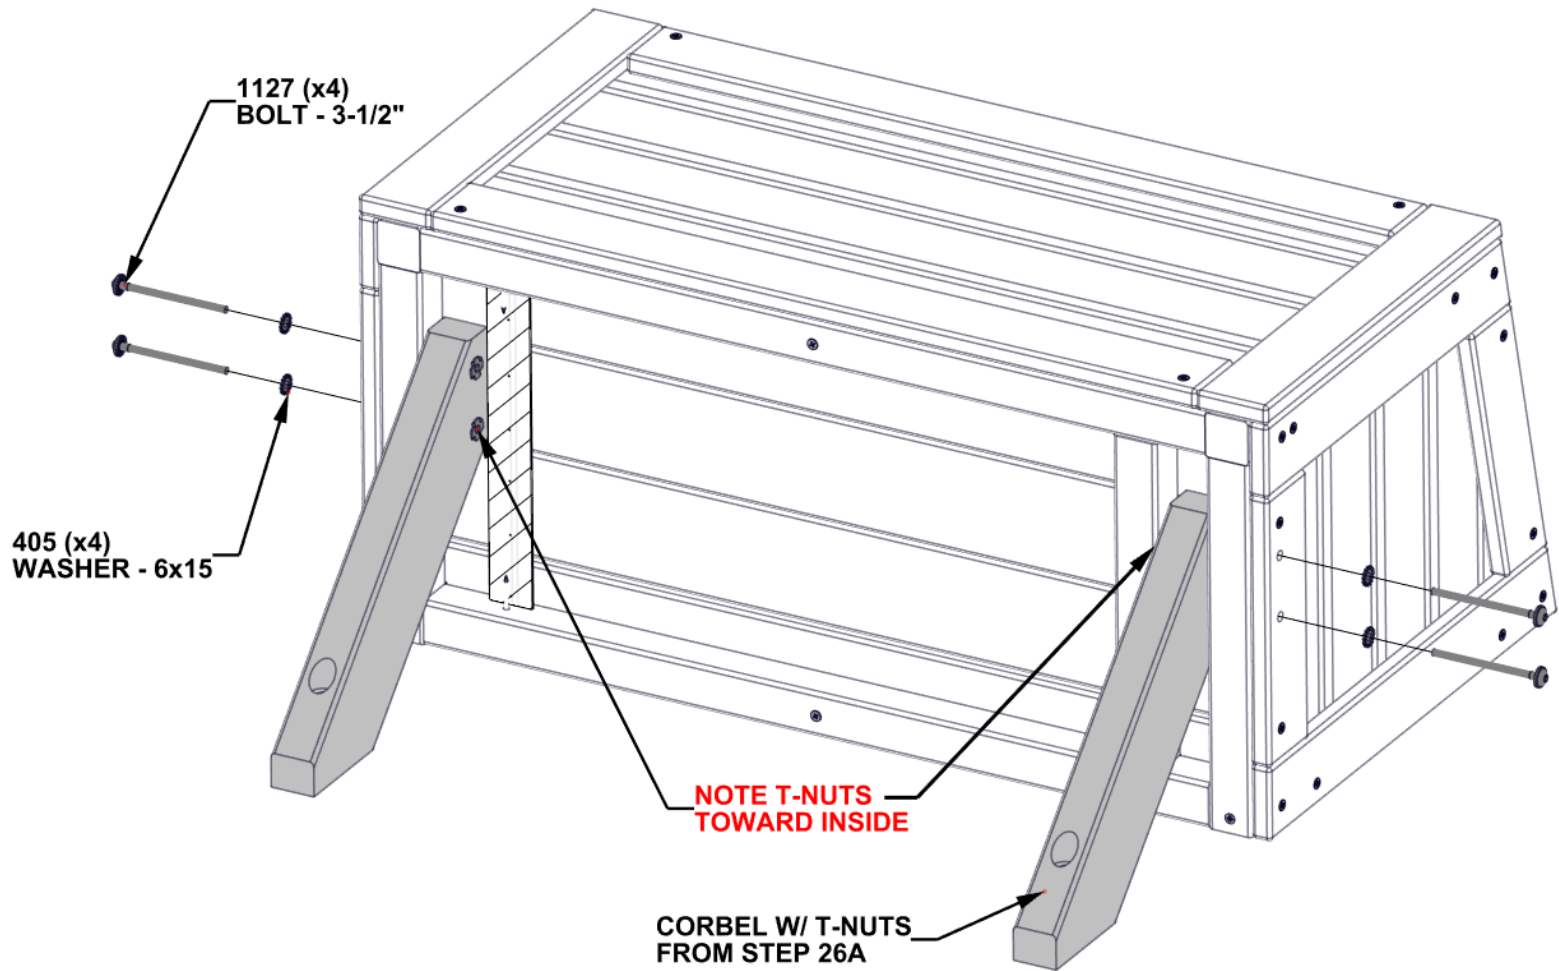


STEP 26C - NESTING BOX ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100398	TNUT-1/4" BLK

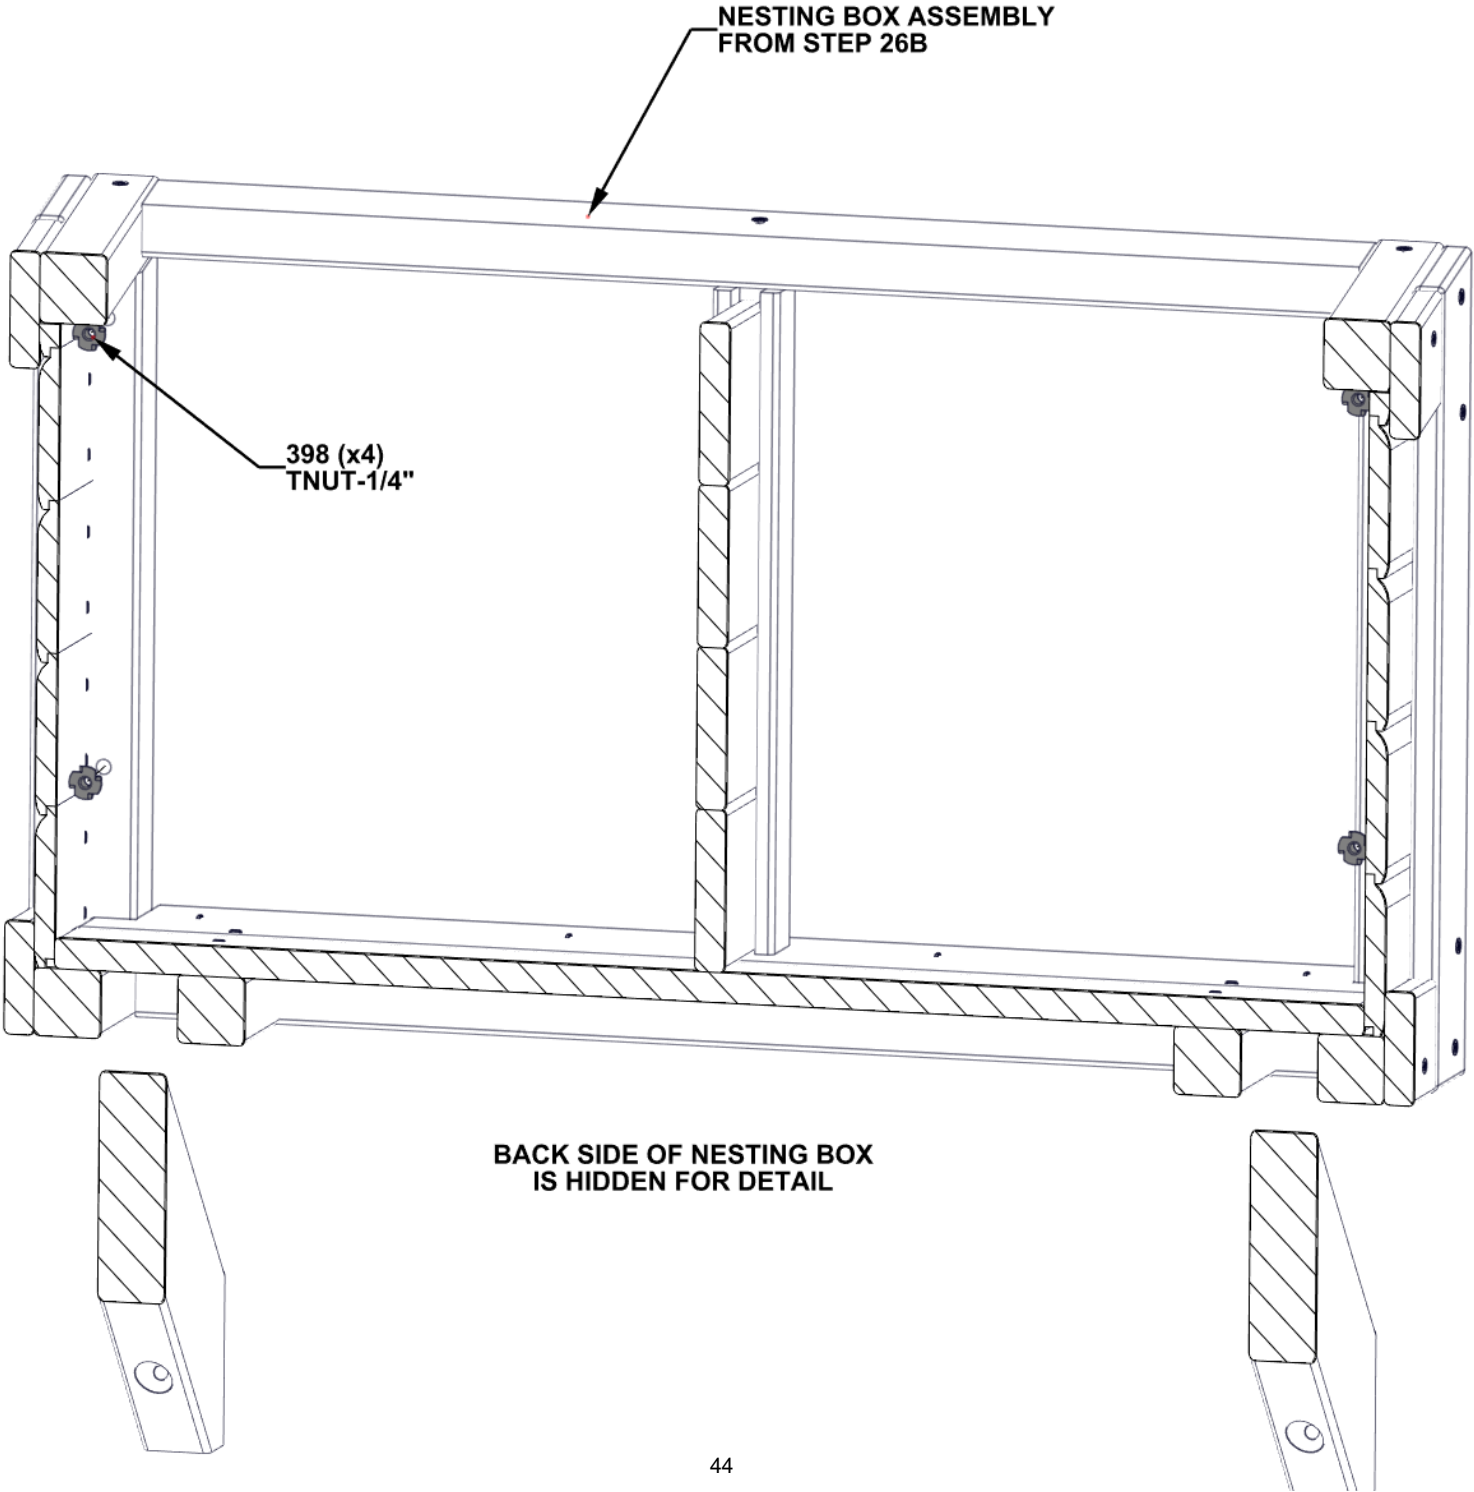


STEP 27 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100405	WASHER LOCK EXT 6x15
5	H100391	SCREW PFH 8x2 BLK
4	H100999	BOLT WH 1/4x2 1/2 BLK
2	H101284	BOLT WH 1/4x2 3/4 BLK
2	H100398	T-NUT 1/4 BLK

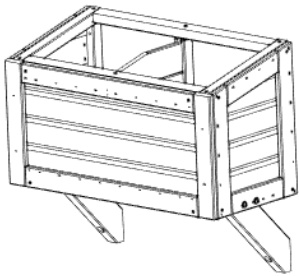


NESTEING BOX ASSEMBLY
(x1) FROM STEP 26

- EXTRA PEOPLE ARE HELPFUL FOR THIS STEP.
- **INSTALL T-NUTS FIRST.**
- **ALIGN PILOT HOLES.**

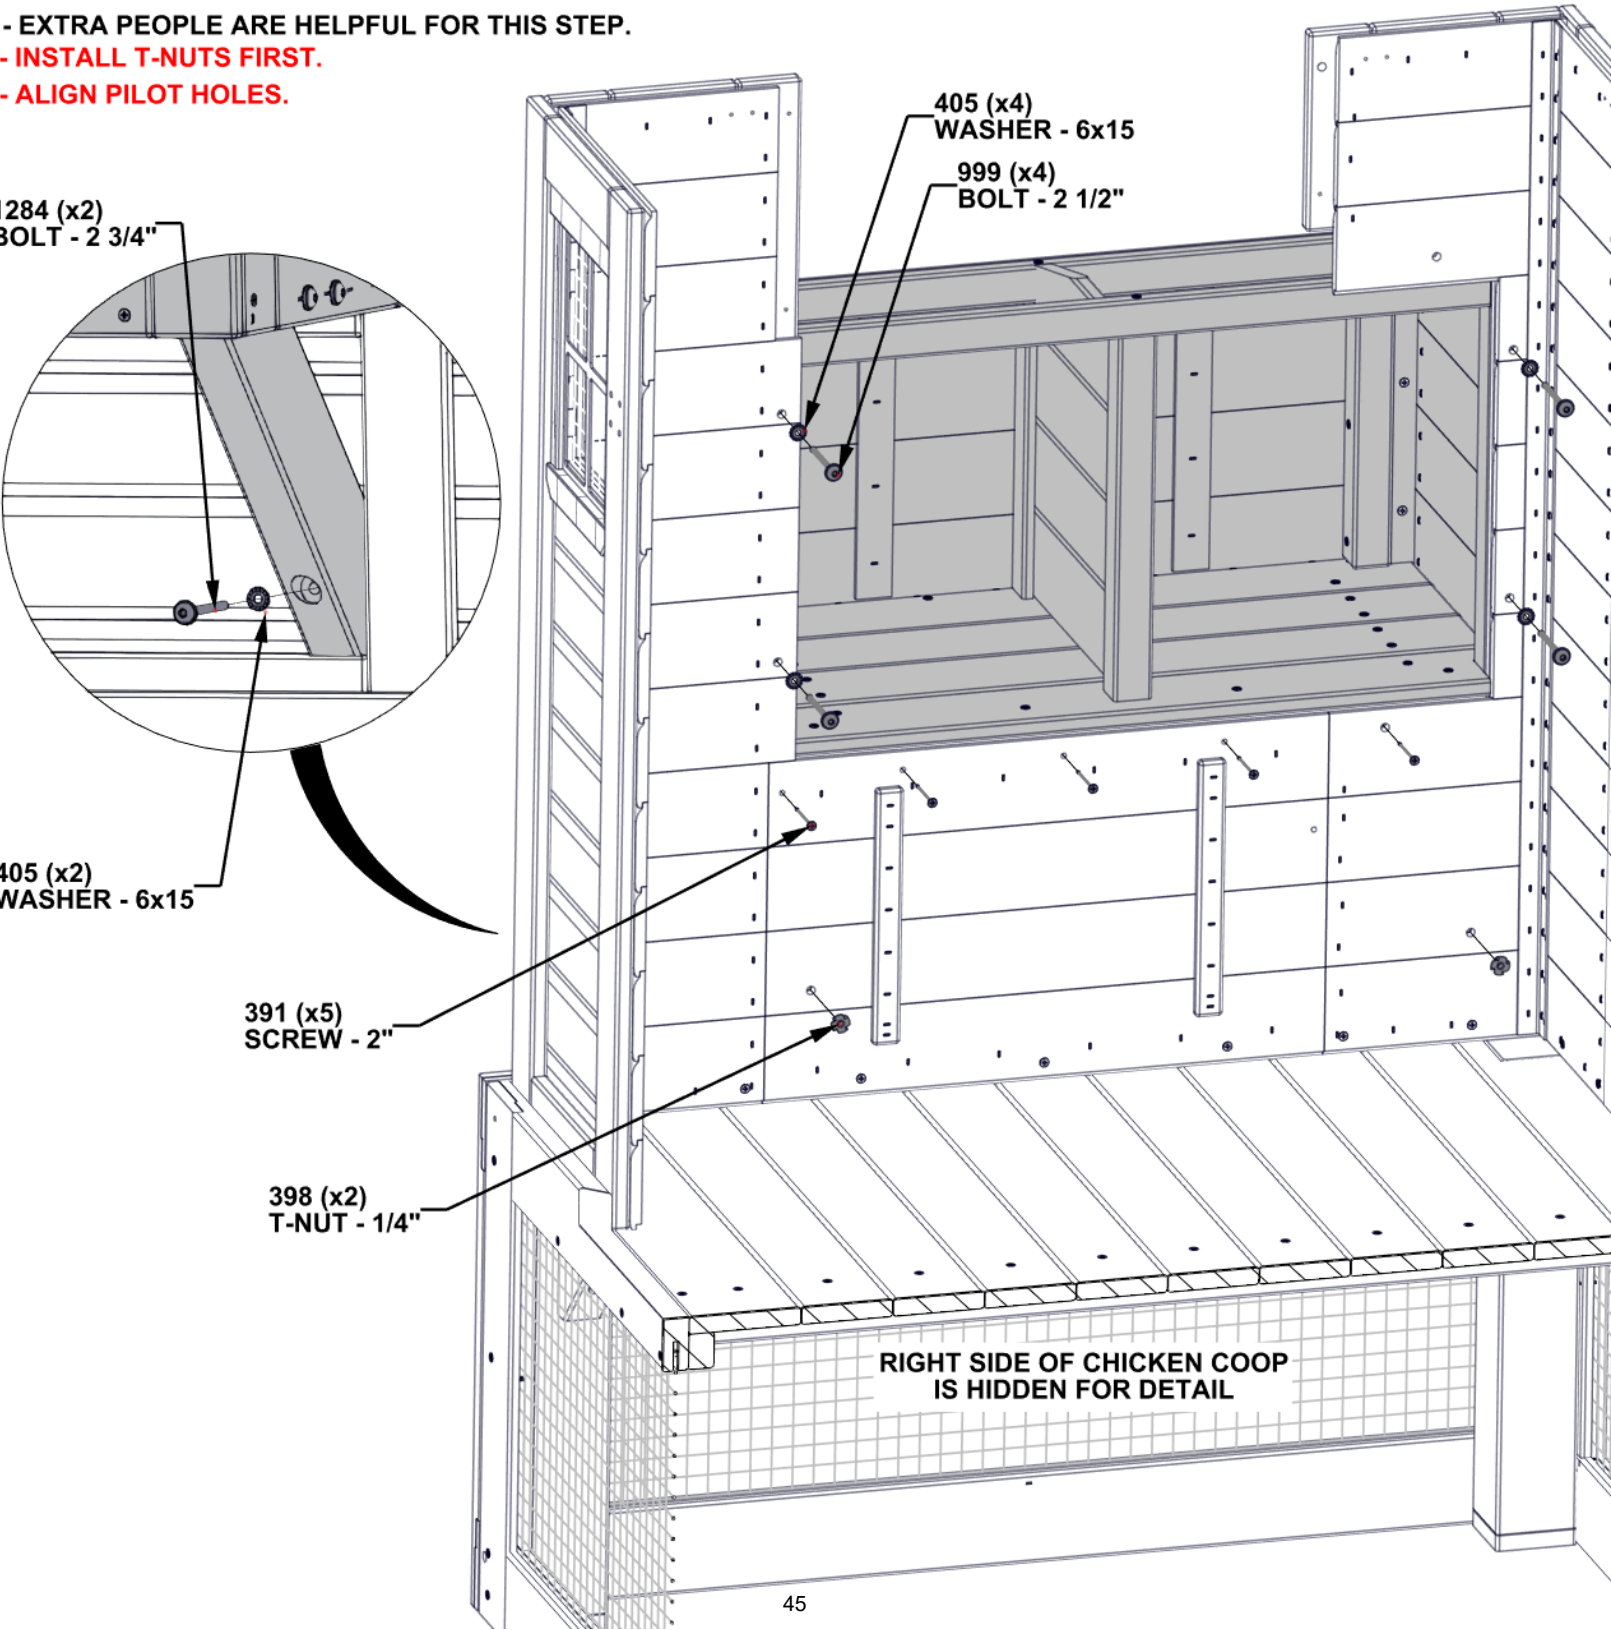


STEP 28 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100797	SCREW PWH 8x1 BLK

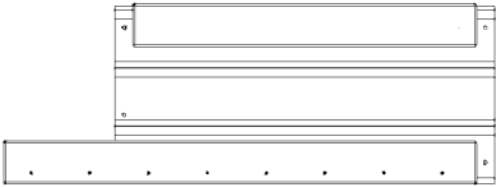

LP02 LEFT TOP PANEL - W2A04420
(x1) 1 1/2"x9 7/8"x26 15/16" (38x251x685)

- ALIGN PILOT HOLES.

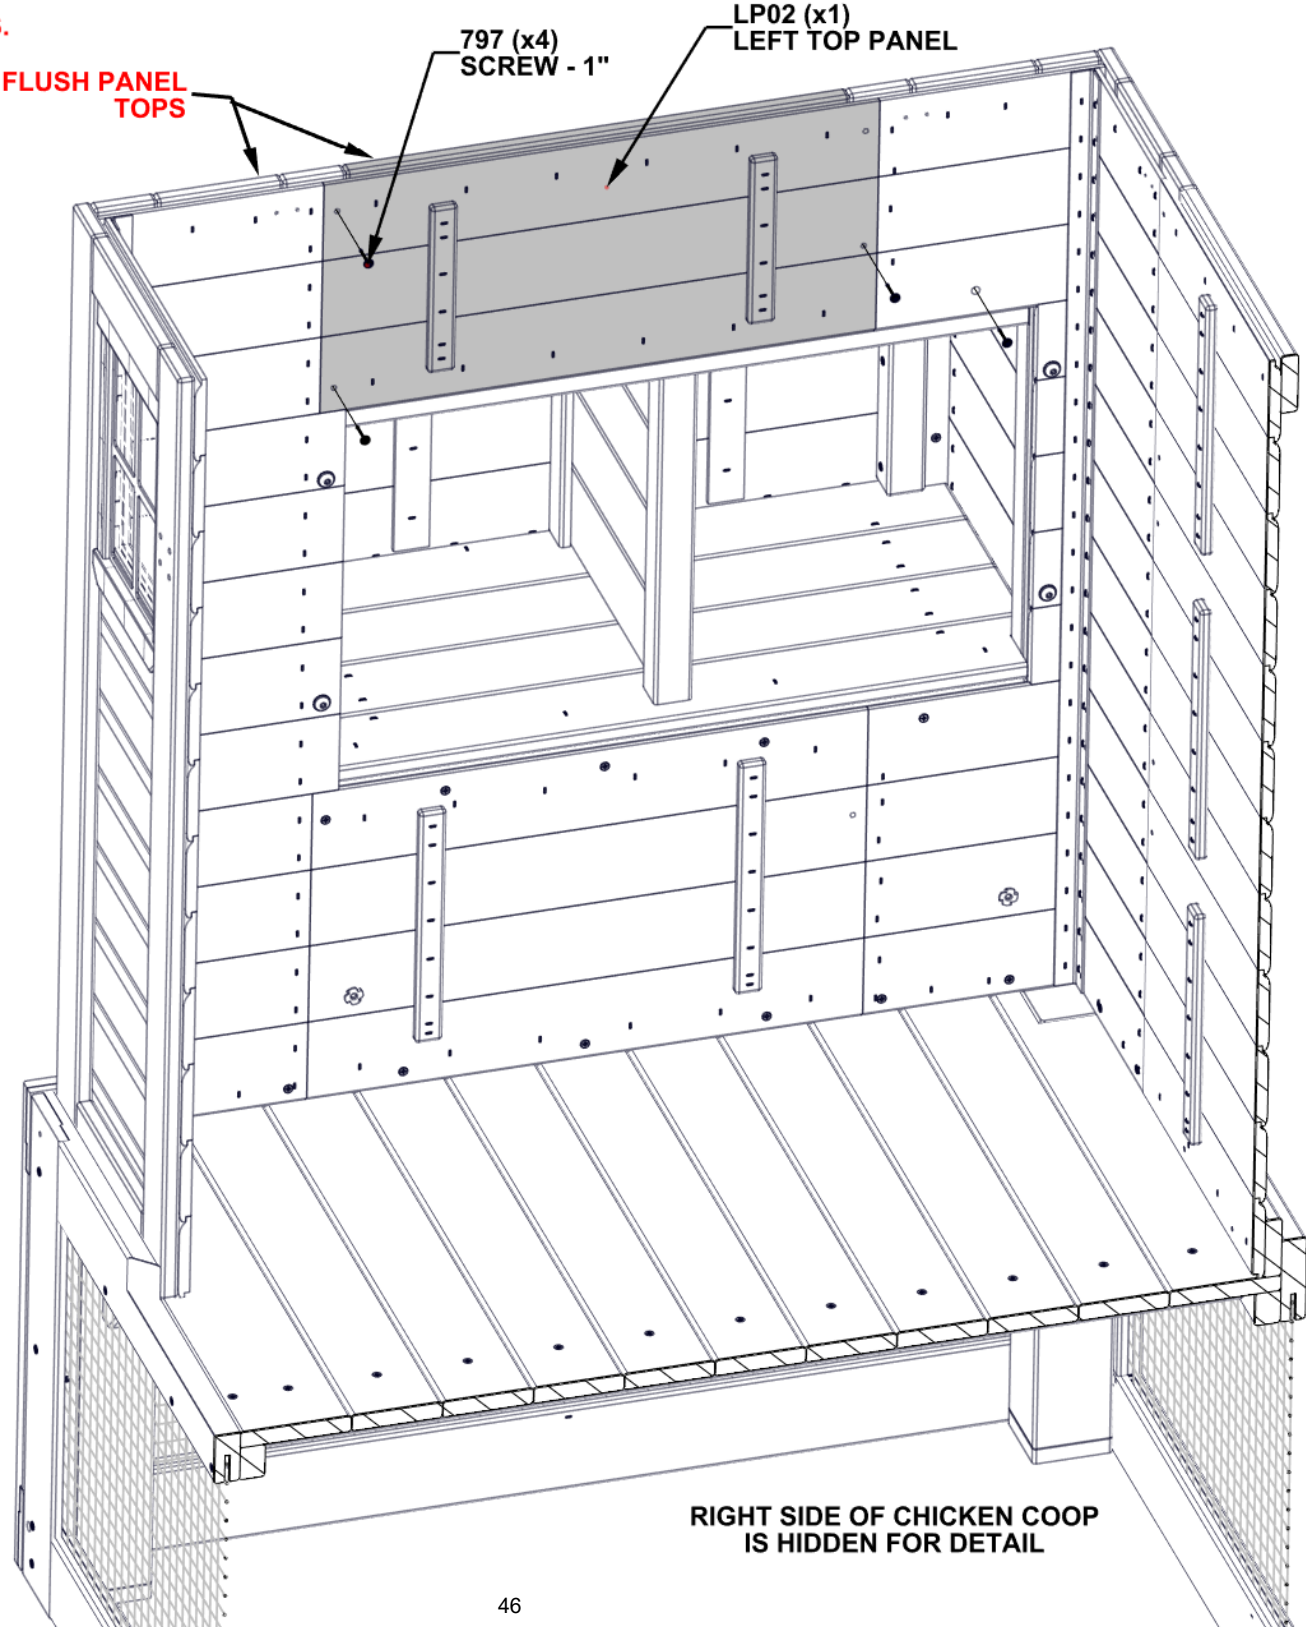


STEP 29 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100387	SCREW PFH 8x1 1/4 BLK




P4 BEAM - W4L20518
(x1) 1 7/16"x1 7/16"x16 15/16" (36x36x430)


- EXTRA PEOPLE ARE HELPFUL FOR THIS STEP.
- ALIGN PILOT HOLES.

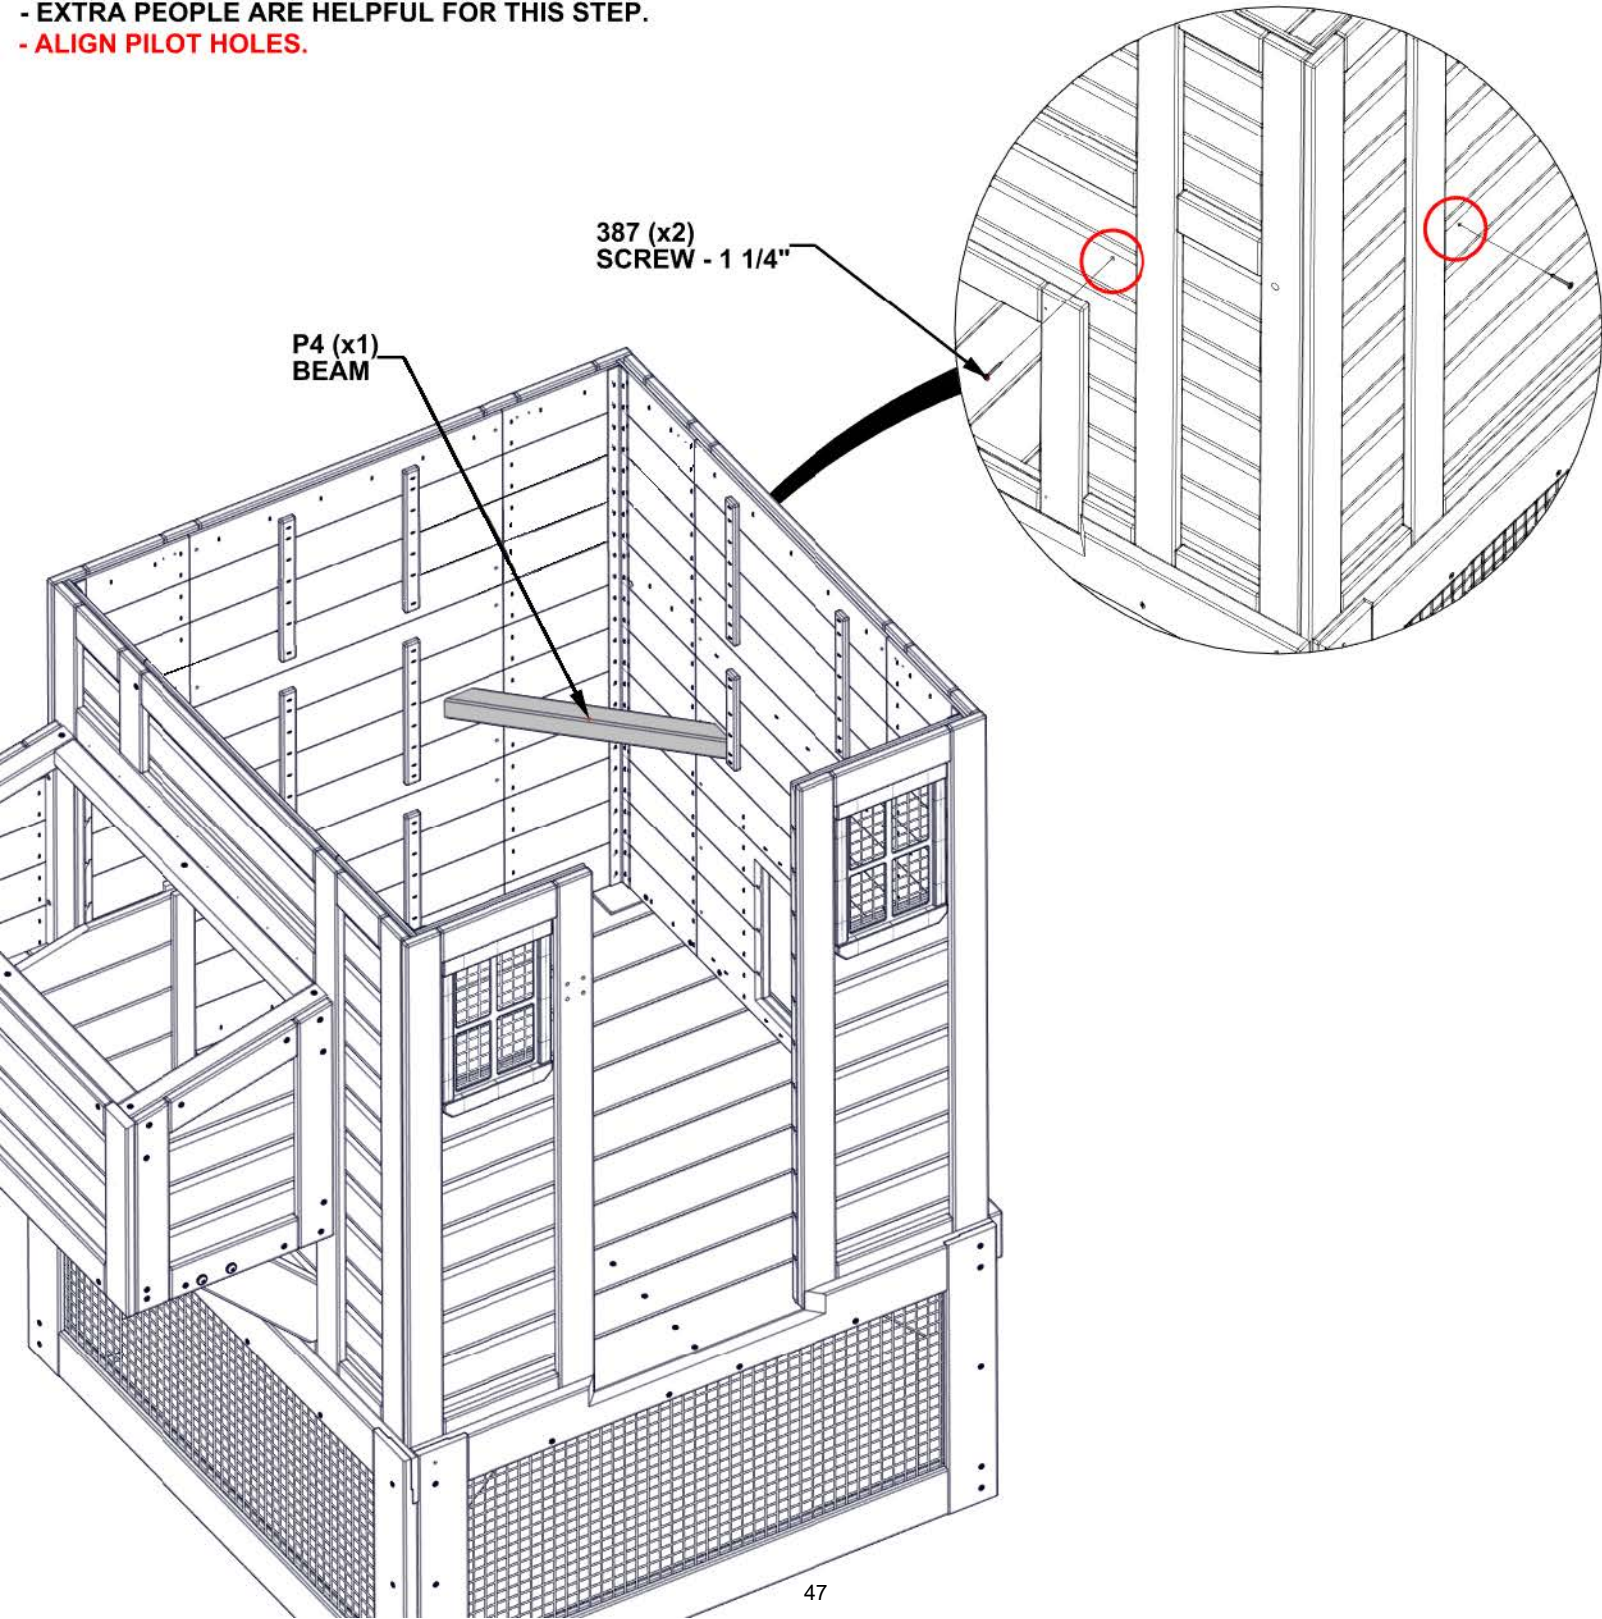


STEP 30 - CHICKEN COOP ASSEMBLY

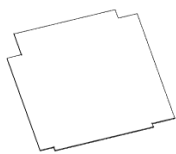

A6P01100 NESTING MAT
(x1)

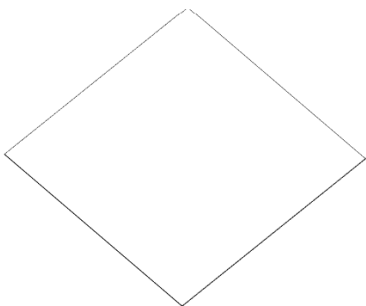


A6P01099 FLOOR MAT
(x1)

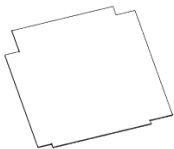


A6P01578 NESTING MAT
(x1)

- FLOOR MATS HAVE BEEN PROVIDED.
- INSTALL MATS AS SHOWN BELOW.

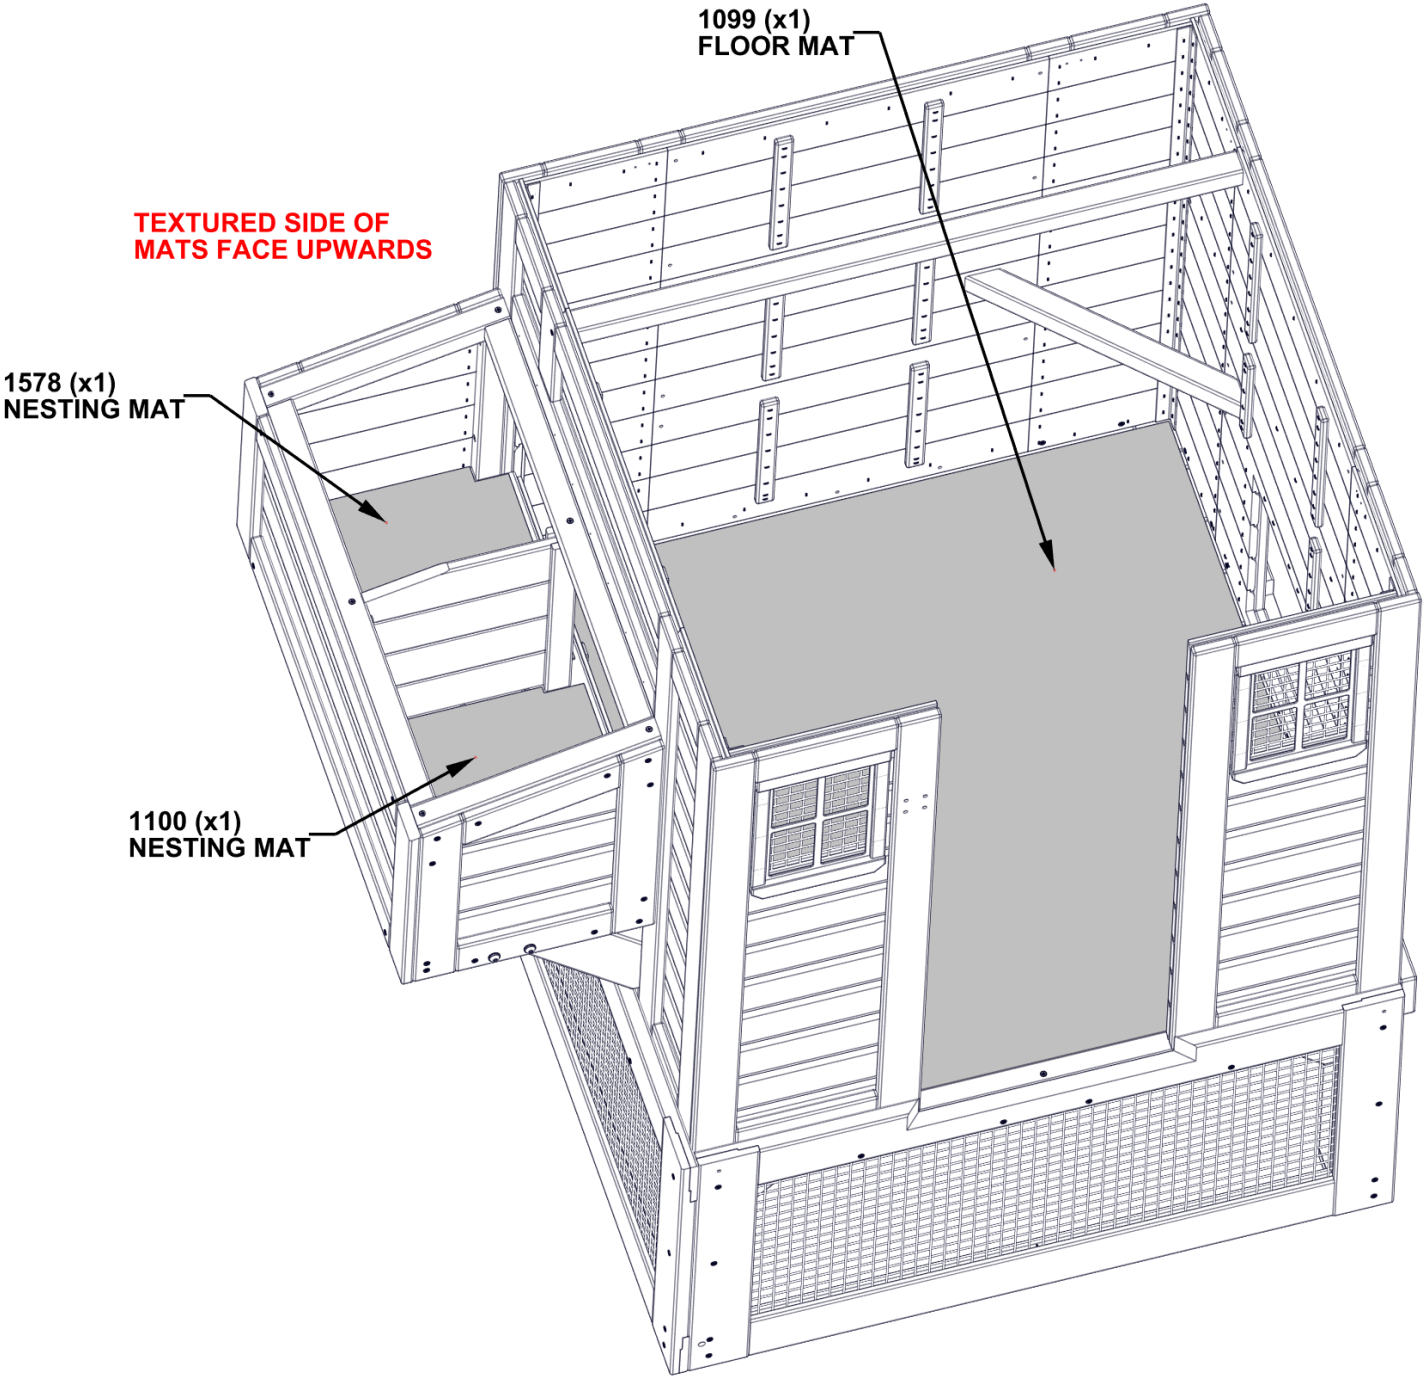


STEP 31 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
16	H100536	SCREW PWH 8x1 1/4 BLK

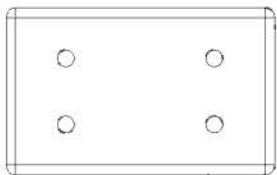

N4 TIE STRAP - W4L17075
(x8) 5/8"x1 15/16"x3 1/8" (16x50x80)


- ALIGN PILOT HOLES.

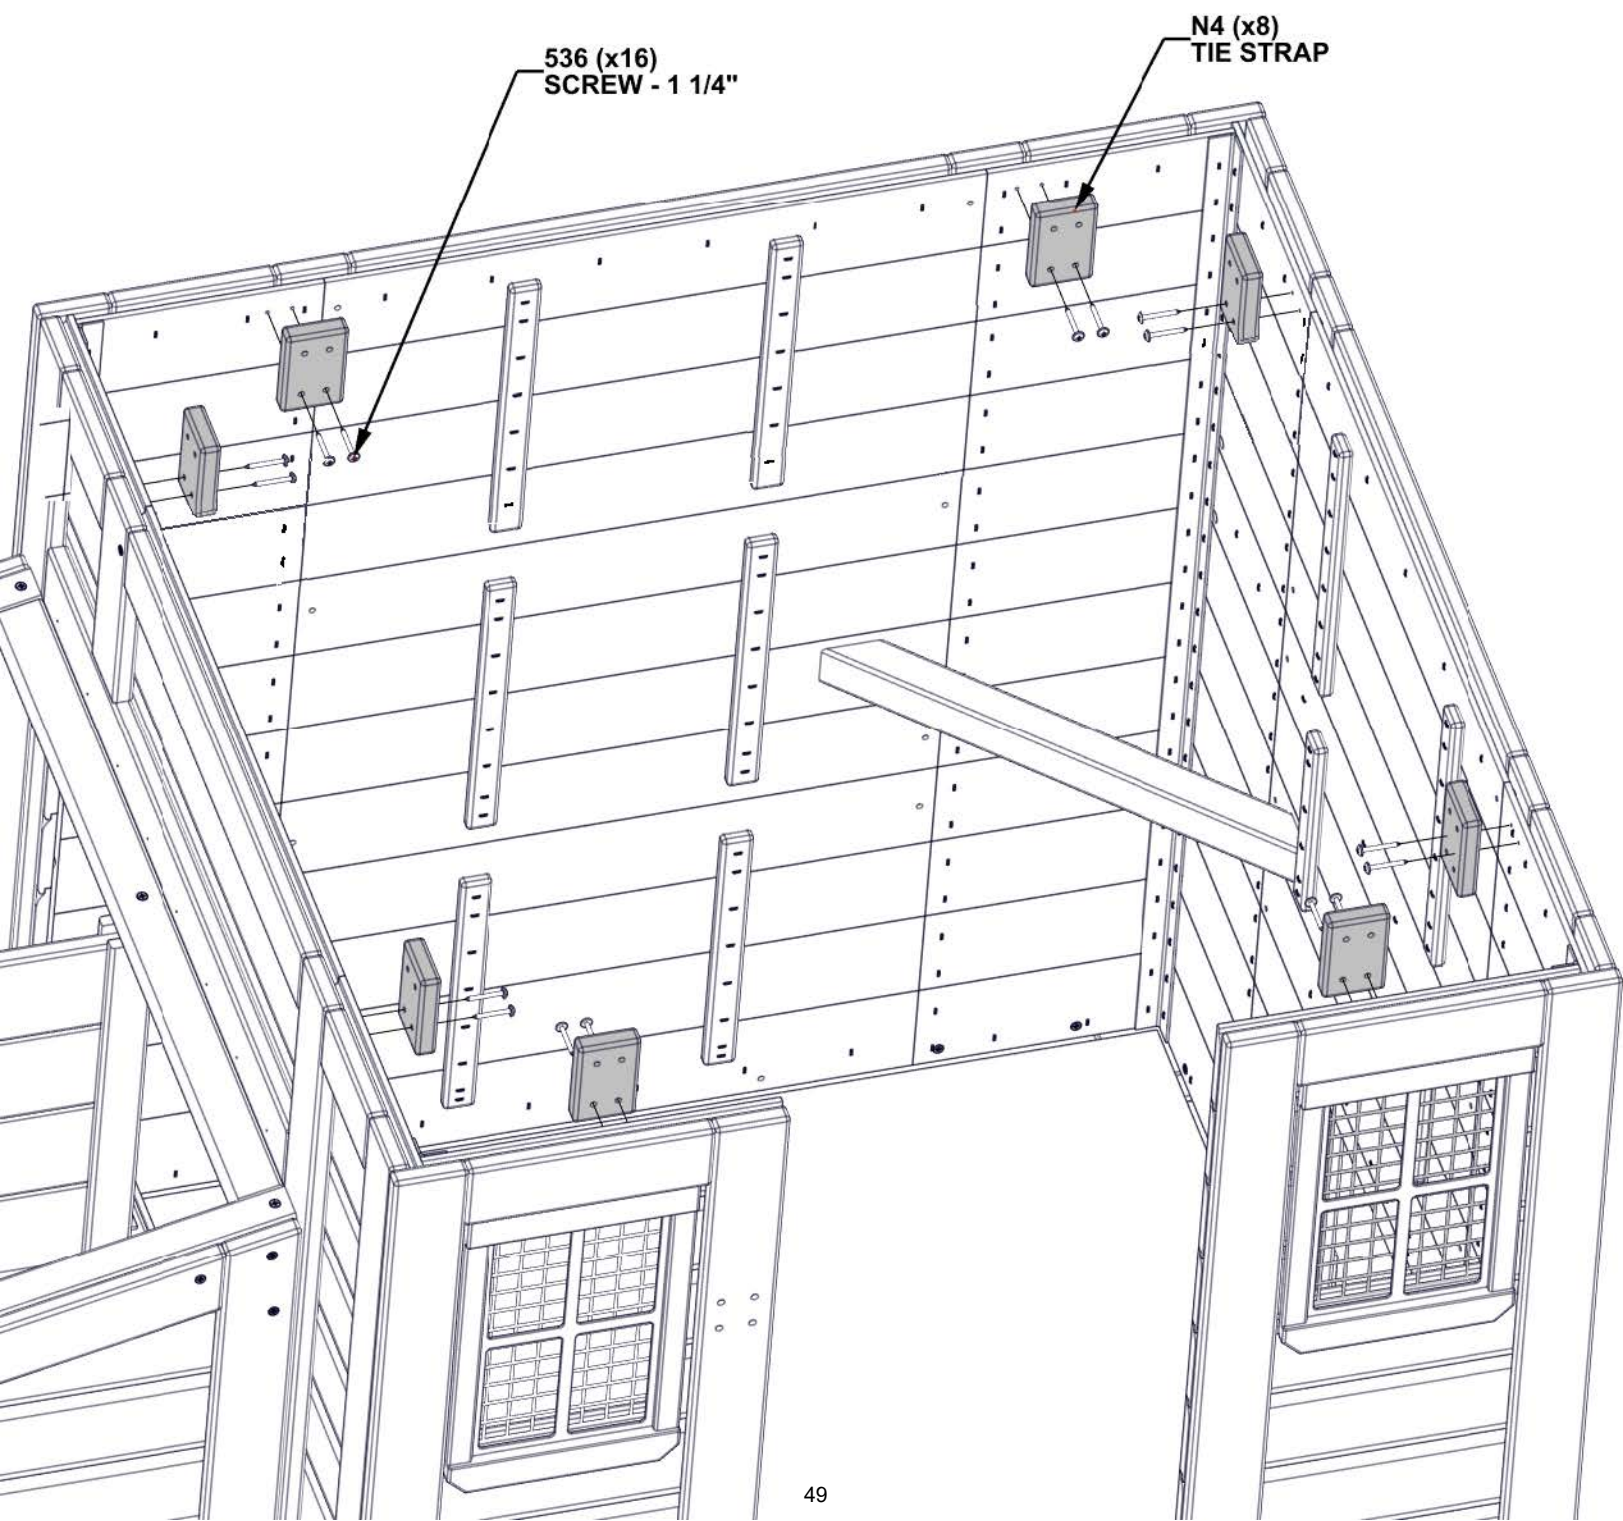

**SET CHICKEN COOP
ASSEMBLY TO THE SIDE**


STEP 32 - HEADER ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100201	SCREW PFH 8x2 1/2 BLK

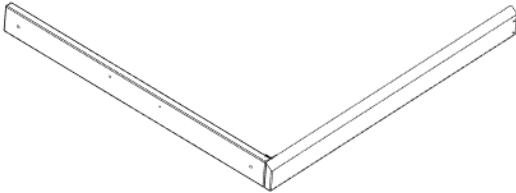


HA01 HEADER ASSEMBLY - W2A04406
(x2) 3 3/8"x37 7/8"x38 13/16" (86x962x986)

- ALIGN PILOT HOLES.

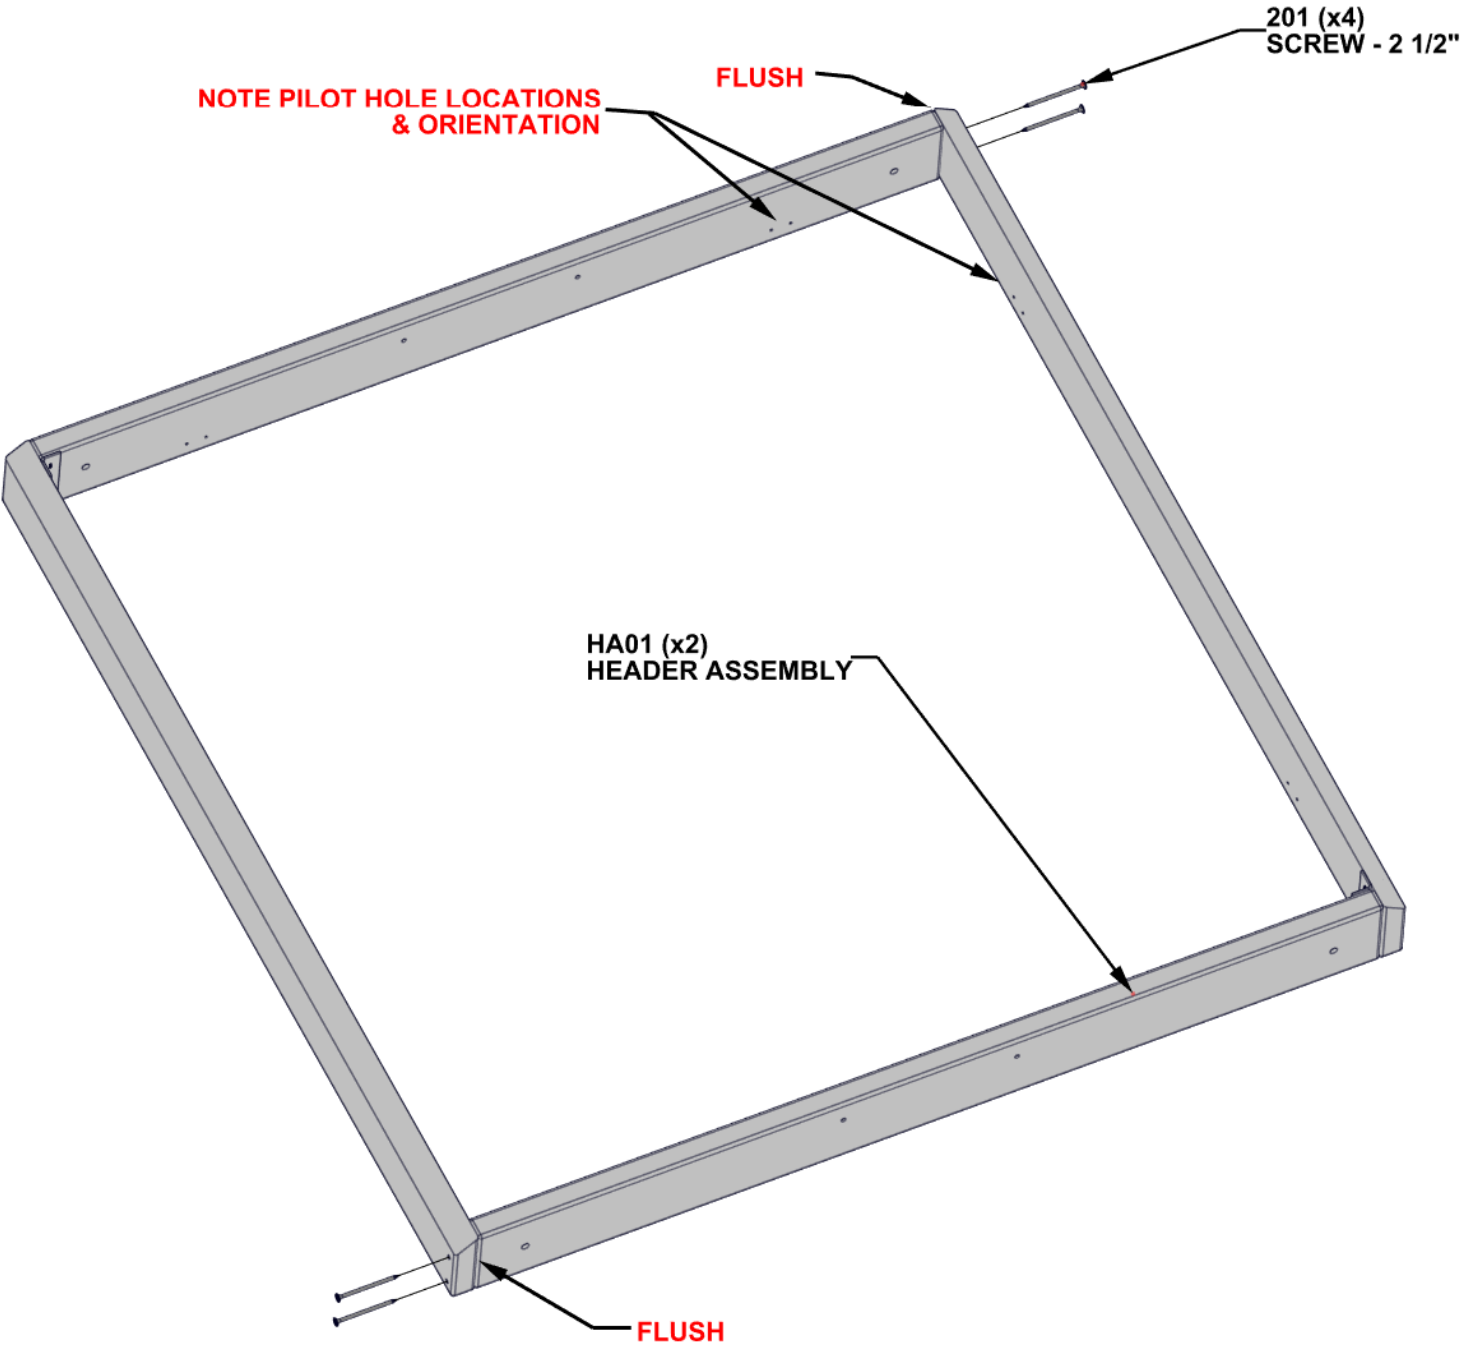


STEP 33 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
16	H100536	SCREW PWH 8x1 1/4 BLK

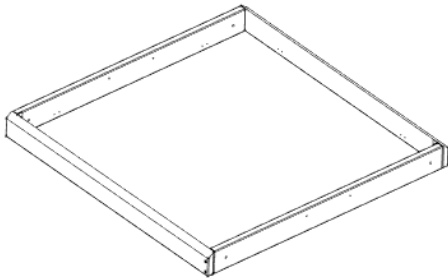

HEADER ASSEMBLY
(x1) FROM STEP 32

- ALIGN PILOT HOLES.

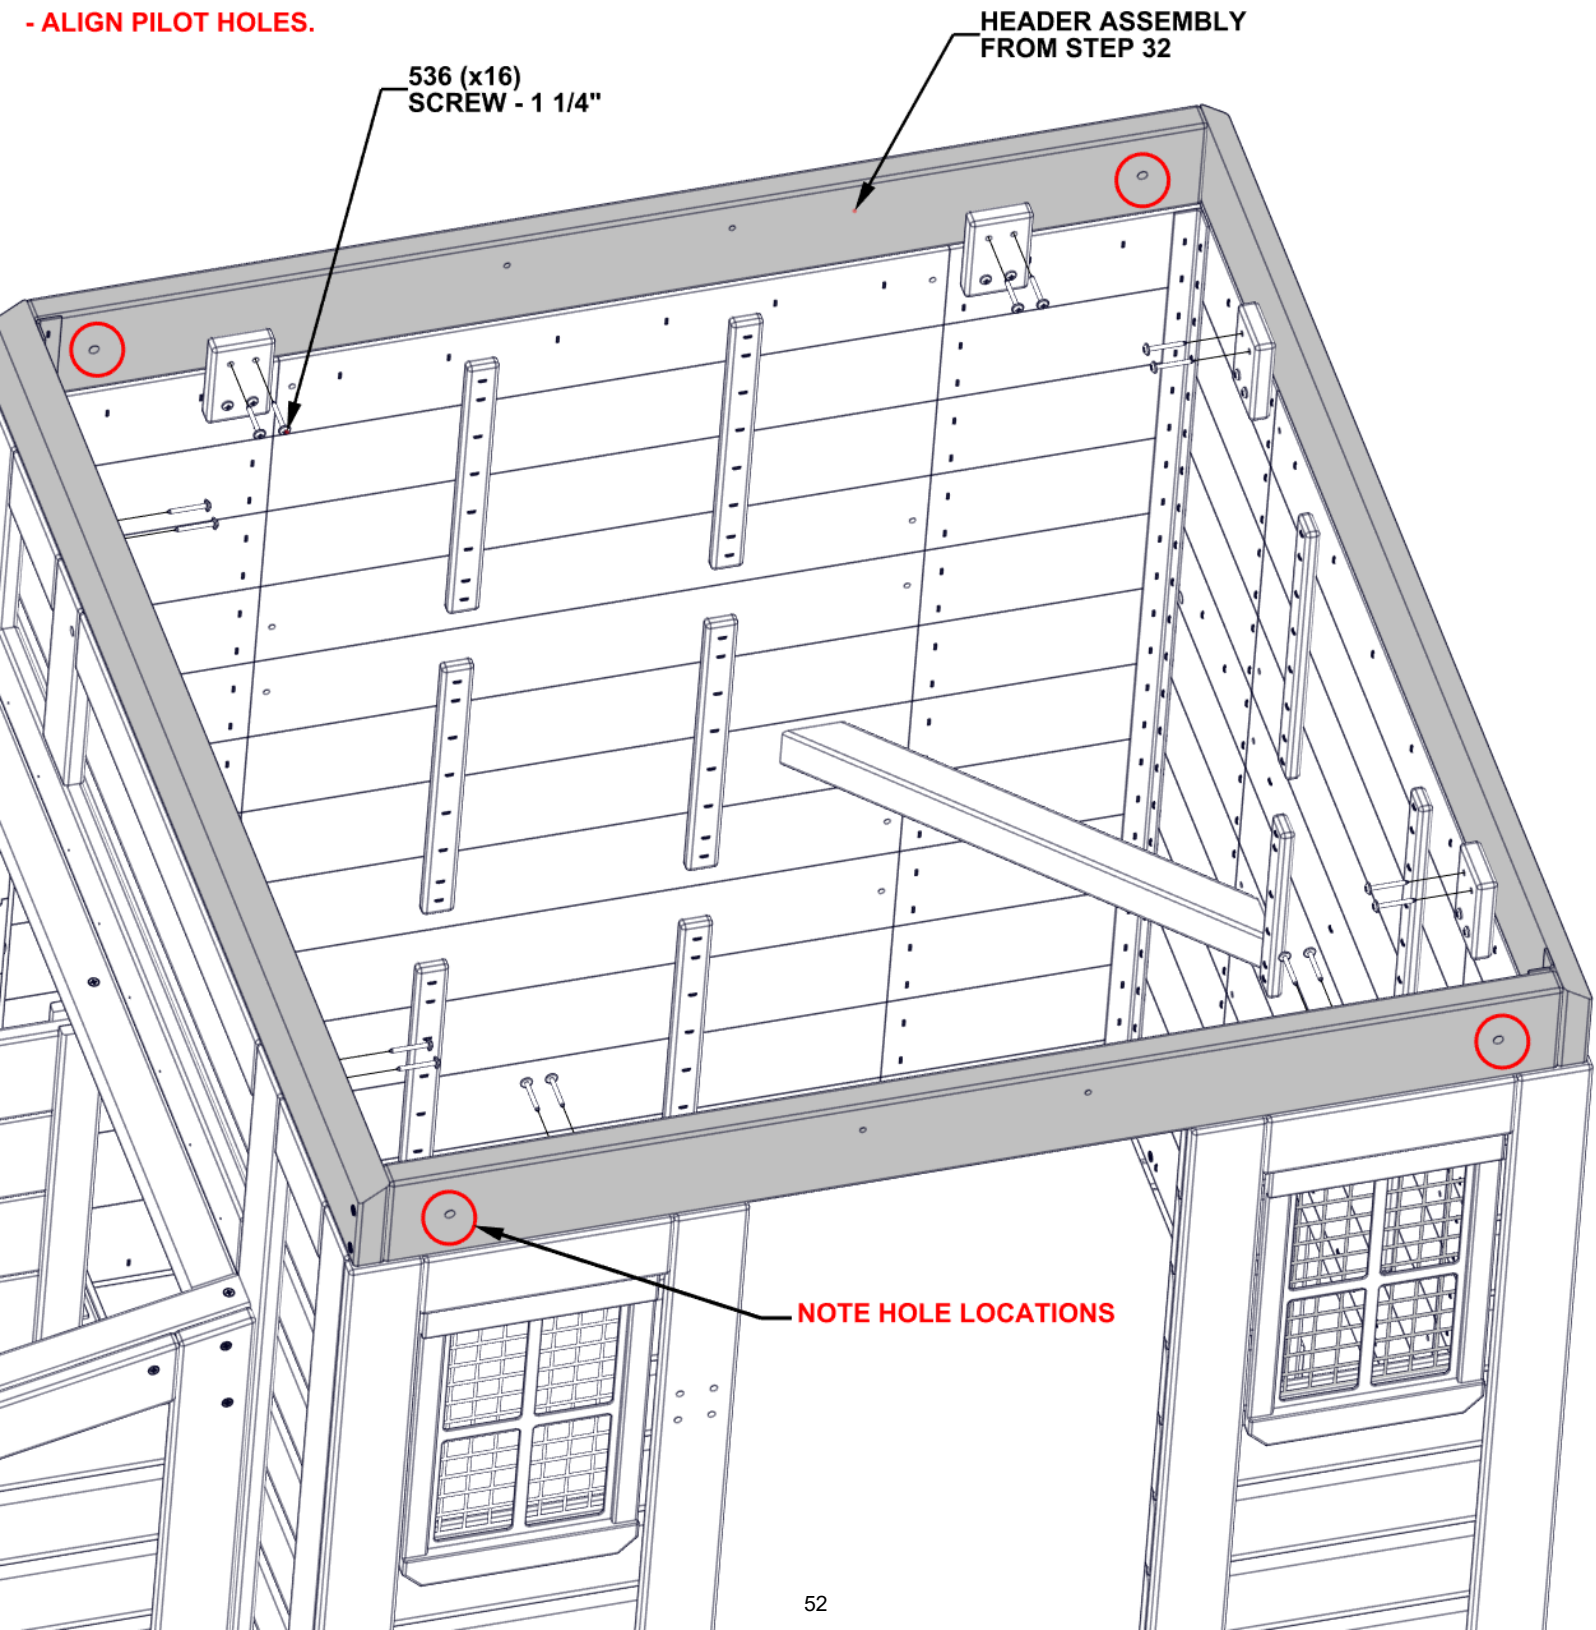


STEP 34 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100382	SCREW PFH 8x1 3/4 BLK




P5 BEAM - W4L20519
(x1) 1 7/16"x1 7/16"x36 15/16" (36x36x938)

- ALIGN PILOT HOLES.

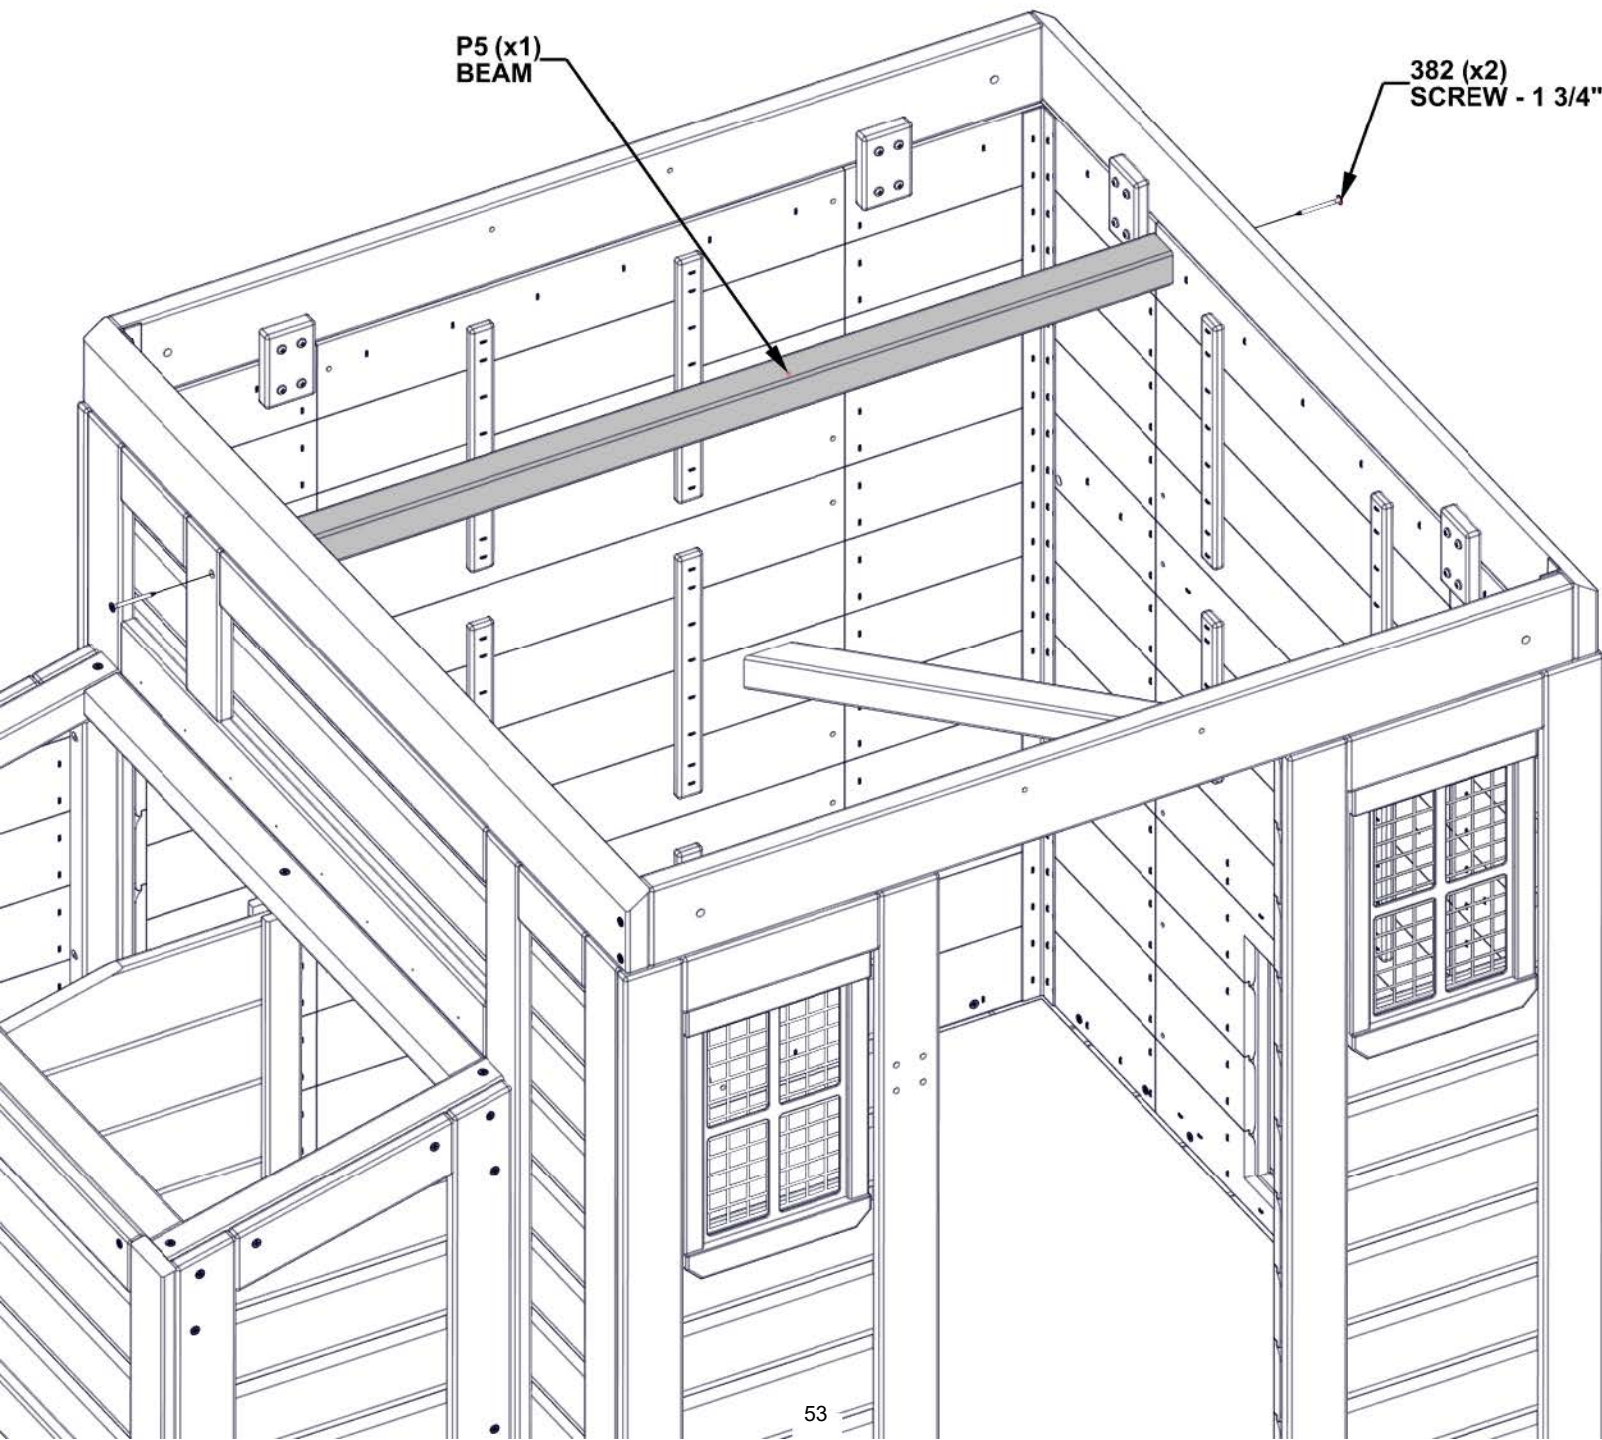


STEP 35 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
7	H100200	SCREW PFH 8x1 1/2 BLK
4	H100804	T-NUT 8/32 BLK

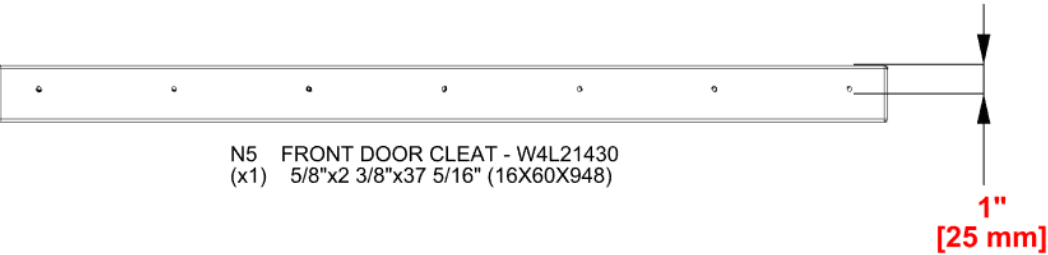


- INSTALL T-NUTS FIRST.
- ALIGN PILOT HOLES.

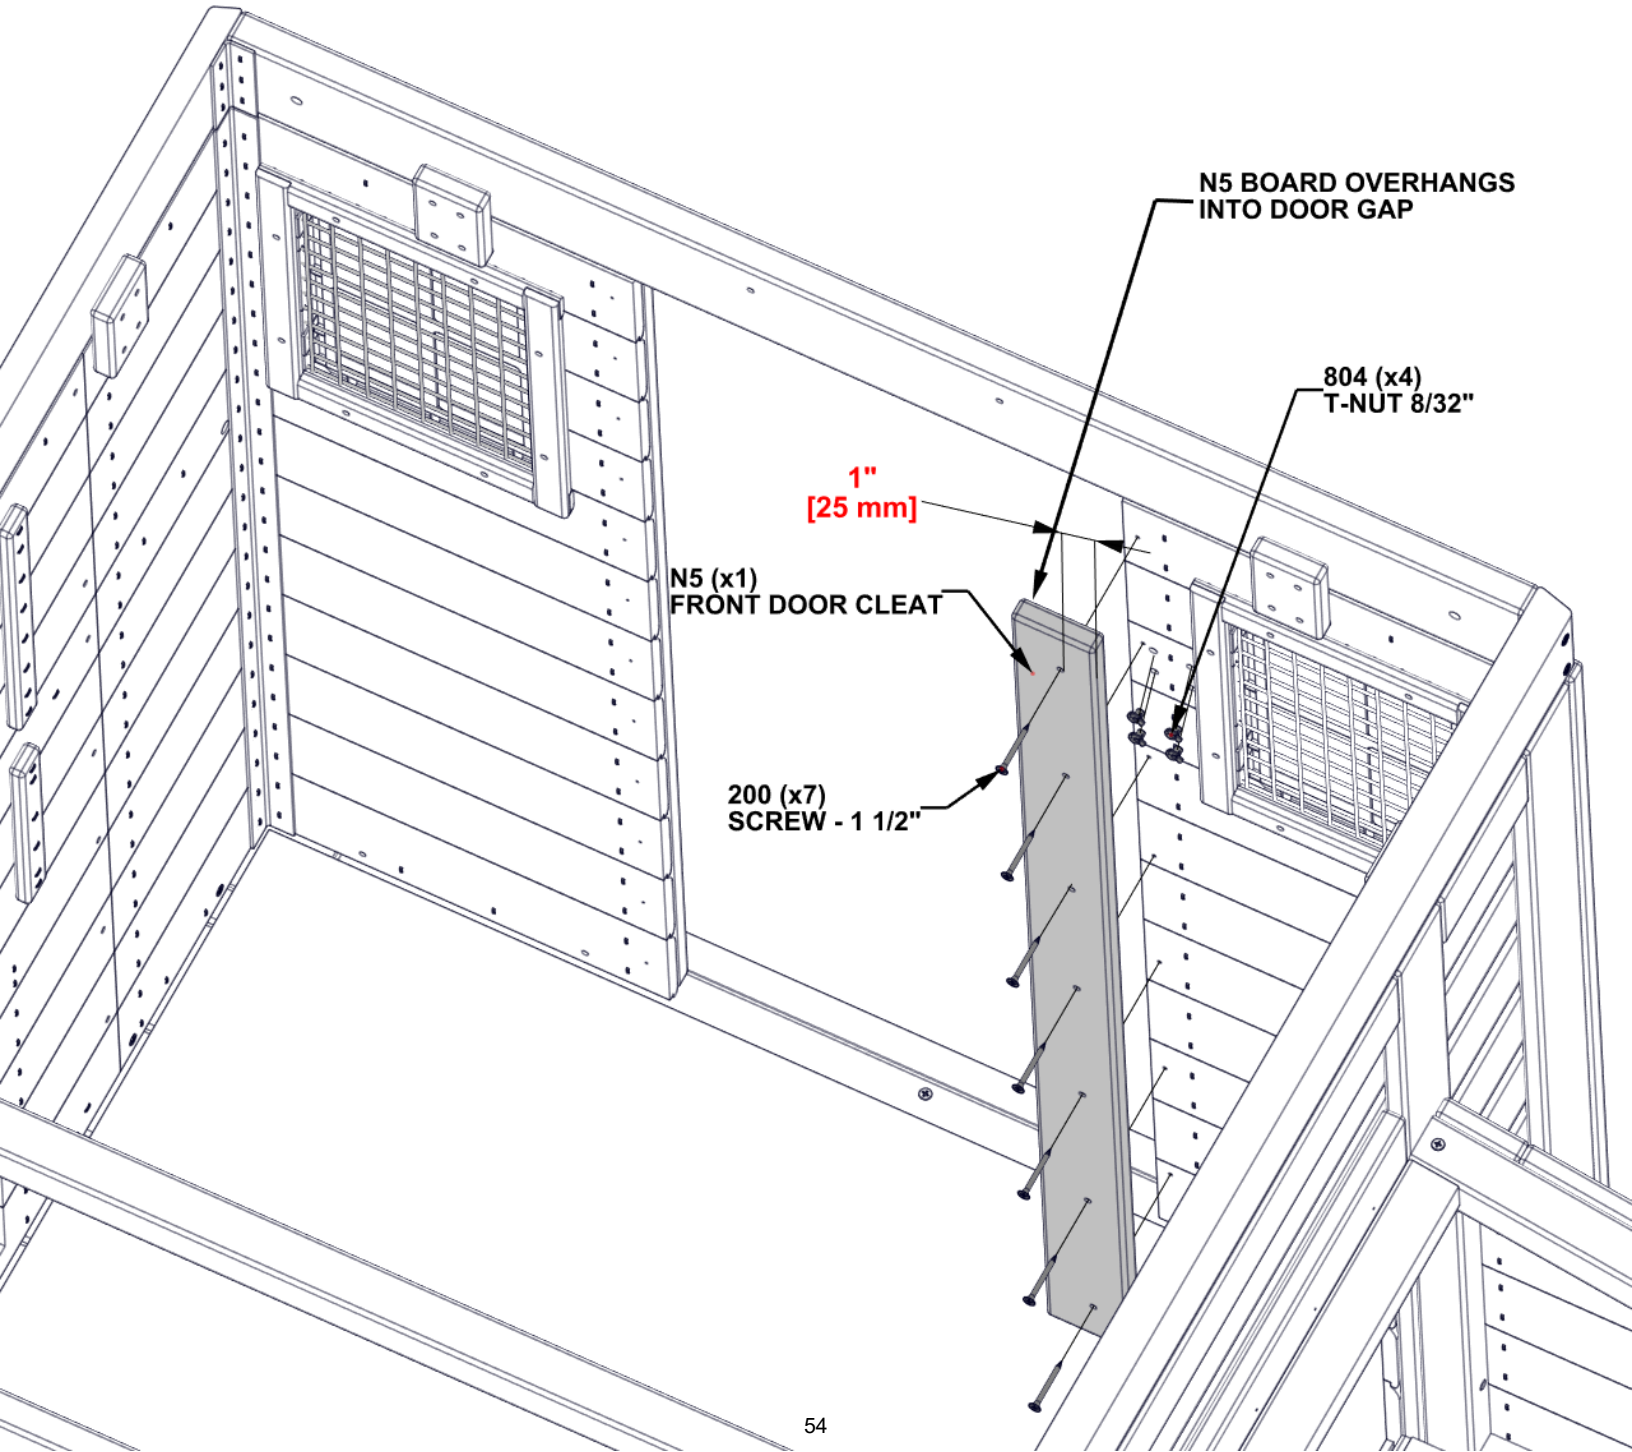


STEP 36 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100405	WASHER LOCK EXT 6x15
4	H100406	BOLT WH 1/4x1 1/2 BLK
4	H100398	T-NUT 1/4 BLK




L1 GABLE BOARD - W4L20514
(x2) 5/8"x4 7/16"x25 5/16" (16x112x643)




L2 GABLE BOARD - W4L20774
(x2) 5/8"x4 7/16"x25 5/16" (16x112x643)

- INSTALL T-NUTS FIRST.

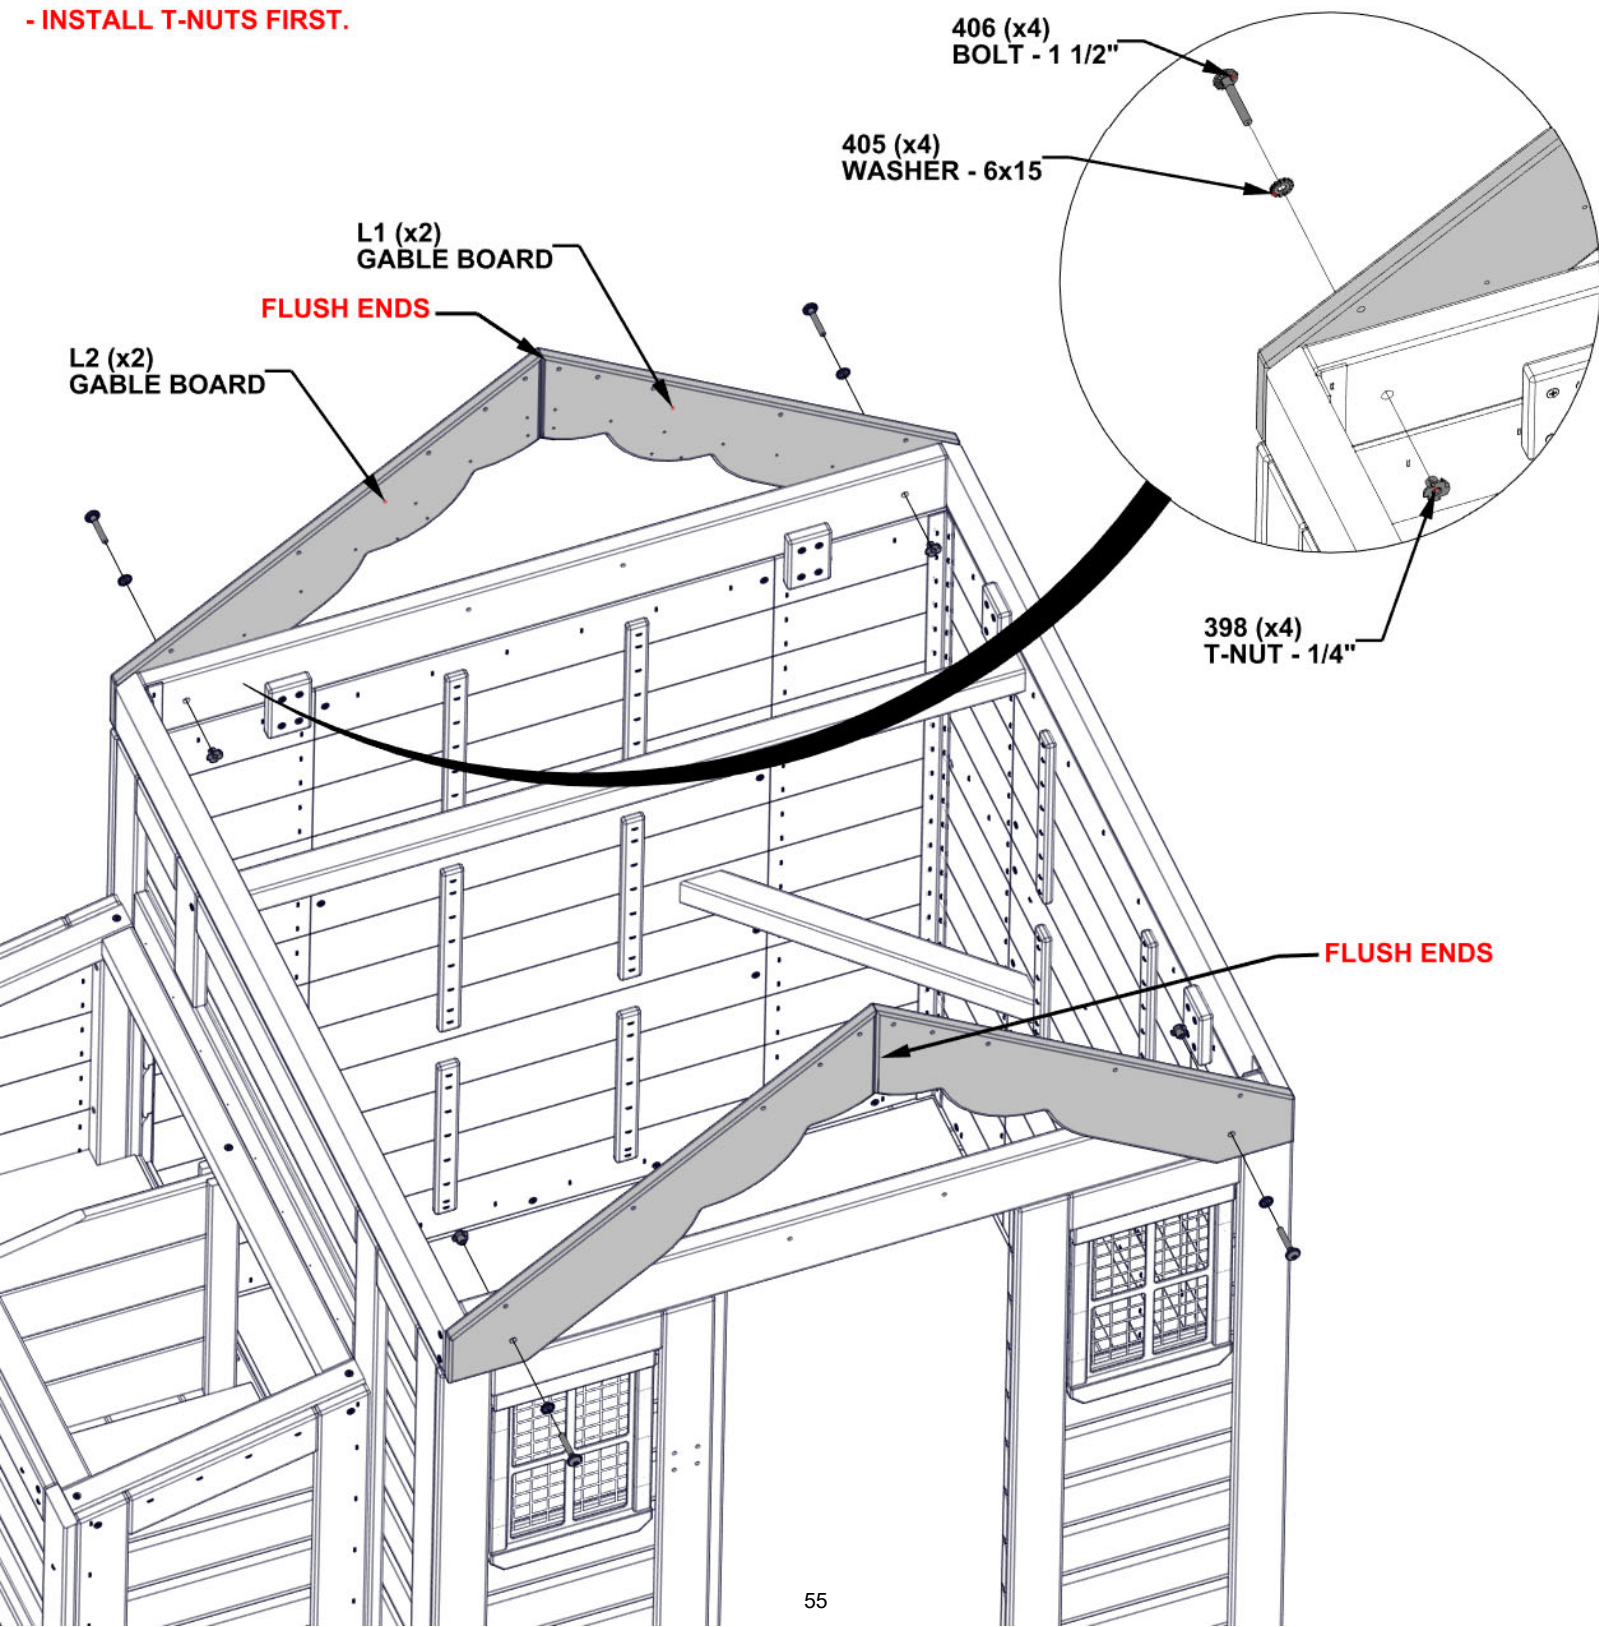


STEP 37 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
24	H100536	SCREW PWH 8x1 1/4 BLK

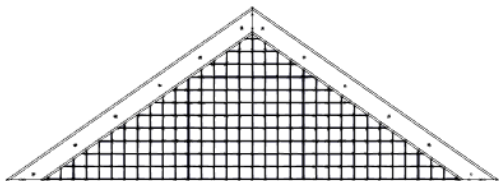


WM02 TRIANGLE WINDOW MESH - W2A04623
(x2) 13/16"x10 5/8"x30 5/16" (19x270x770)

- ALIGN PILOT HOLES.
- AFTER COMPLETION OF STEP 37, REPEAT STEP ON OPPOSITE BACK WALL

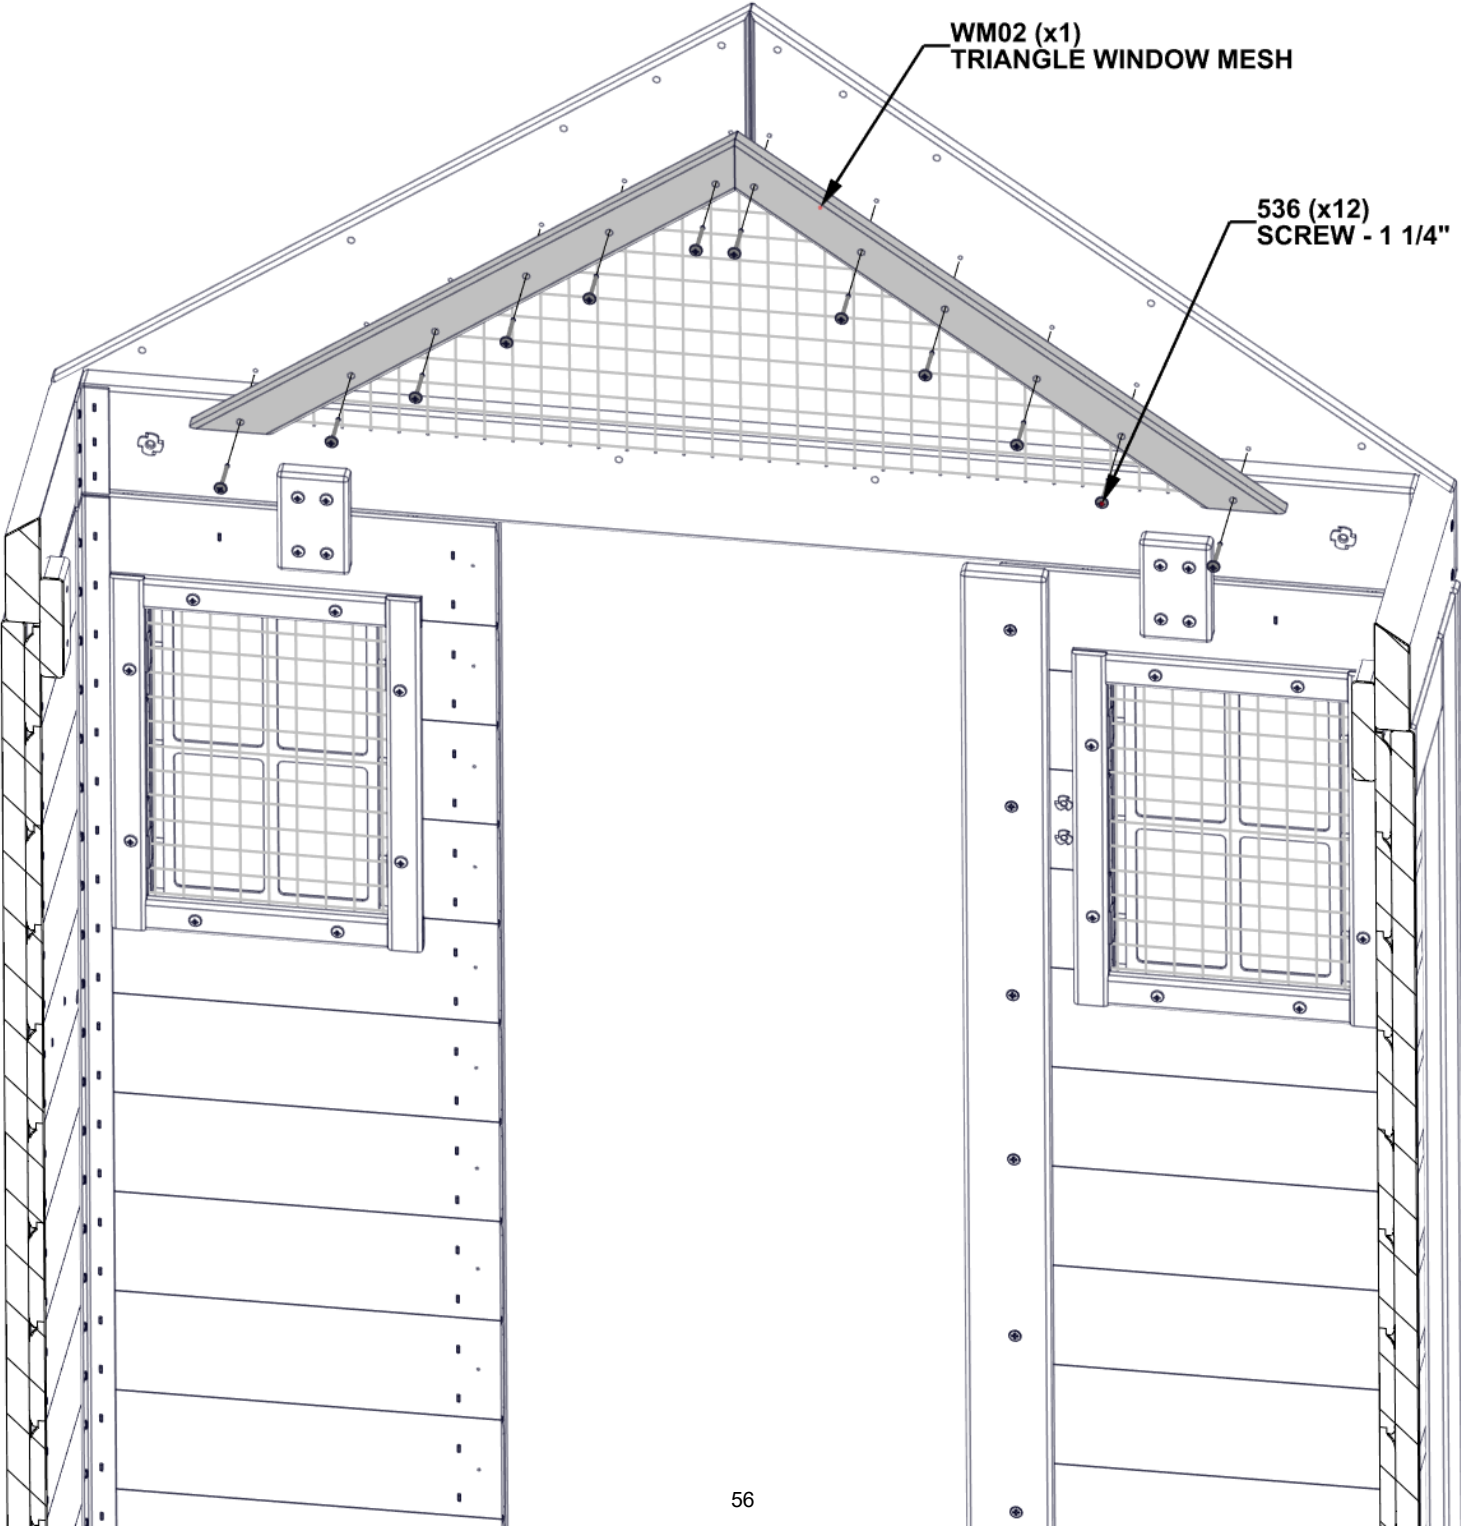

STEP 38 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
24	H100536	SCREW PWH 8x1 1/4 BLK
4	H100823	SCREW PWH 8x1 1/2 BLK

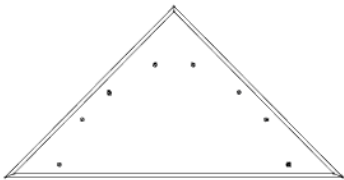

G1 TRIANGLE SUNBURST - W4L21437
(x2) 15/16"x5 1/4"x10 7/16" (24x134x265)




N7 TRIANGLE BURST LEG - W4L21432
(x4) 5/8"x2 3/8"x6" (16x60x153)



N6 TRIANGLE SUNBURST LEG - W4L21431
(x2) 5/8"x2 3/8"x7 5/8" (16x60x194)

- TRIANGLE SUNBURST IS ON THE OUTSIDE OF THE WIRE MESH.
- AFTER COMPLETION OF STEP 38, REPEAT STEP ON OPPOSITE BACK WALL.

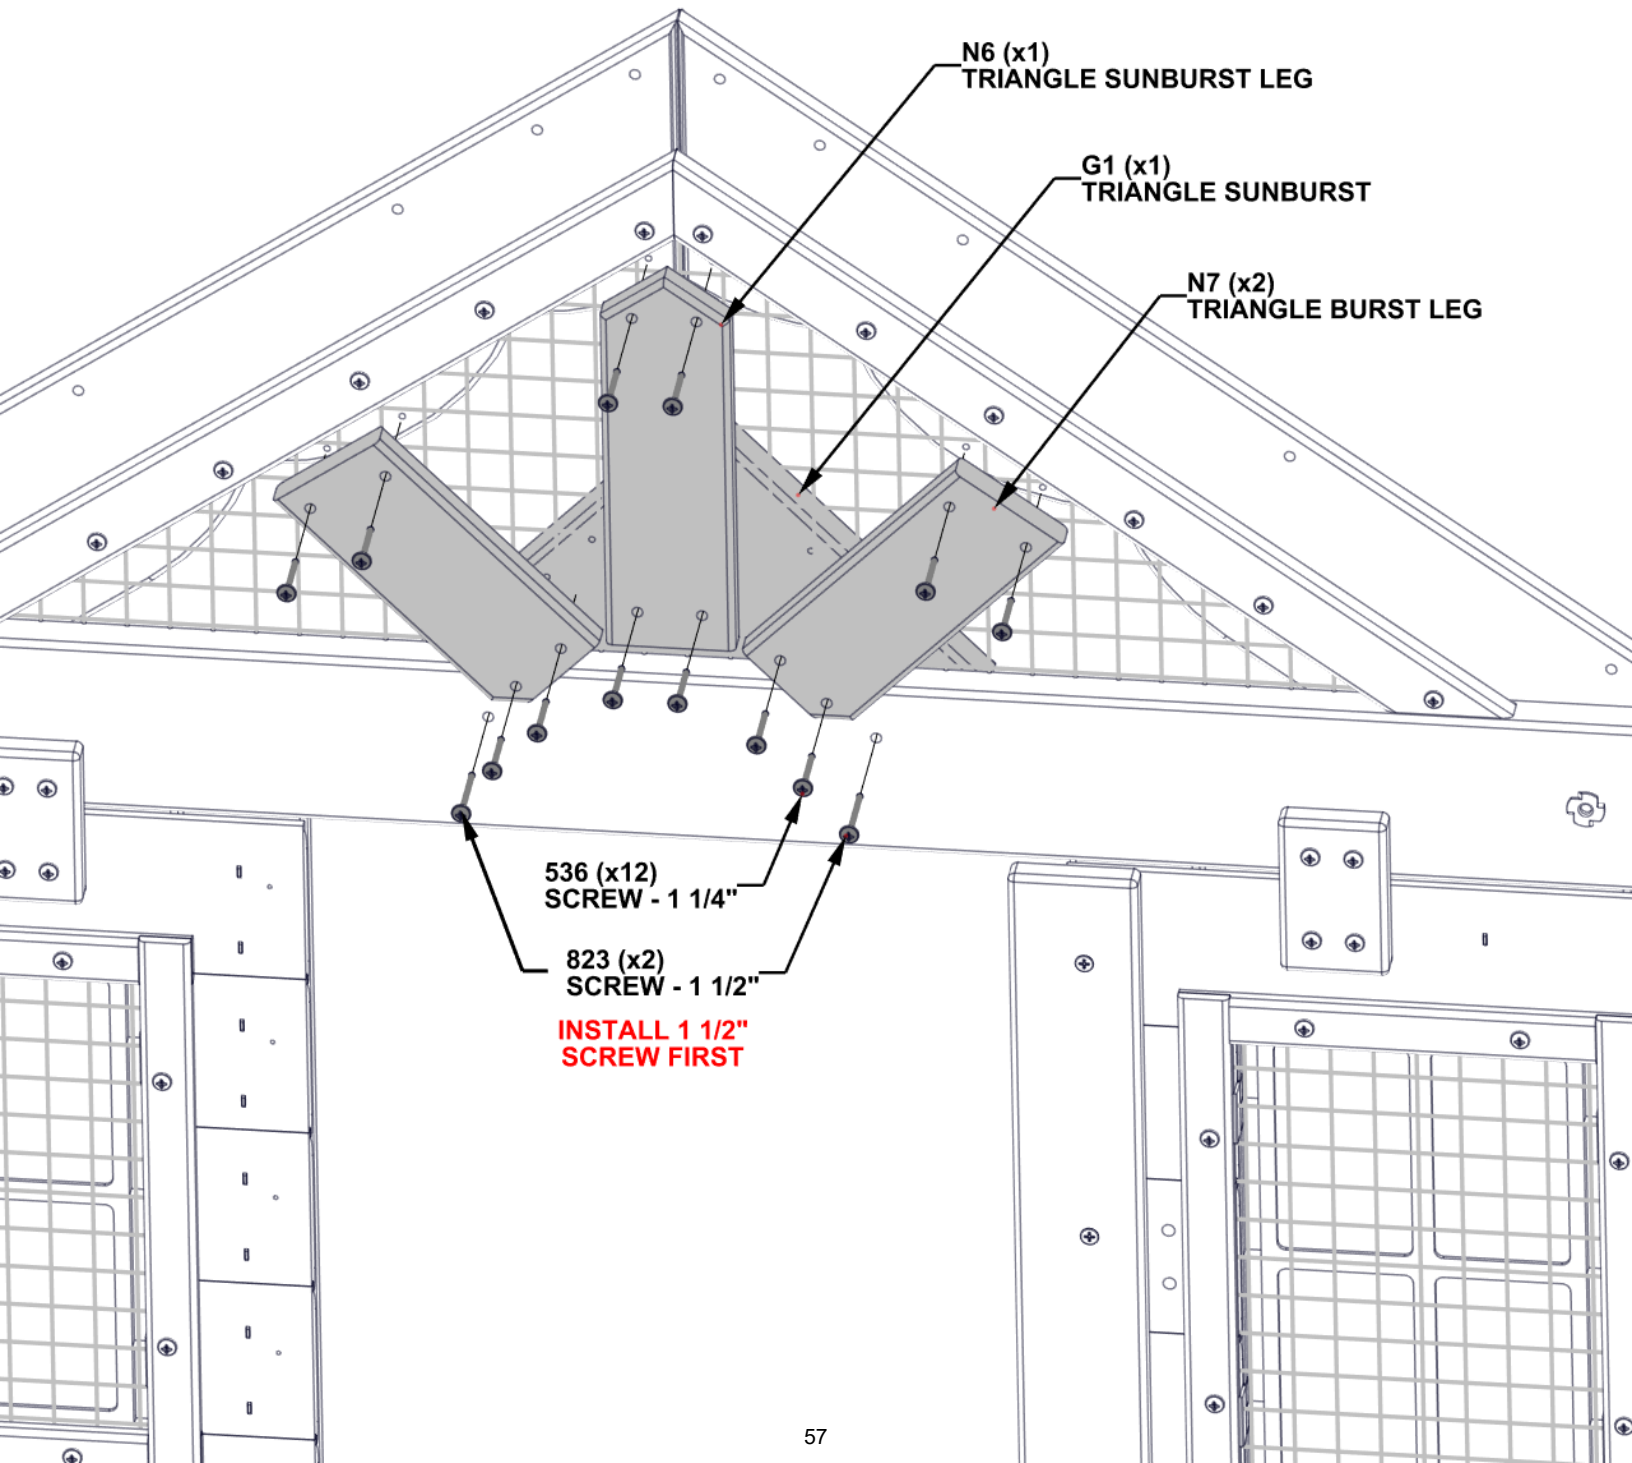


STEP 39 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H100200	SCREW PFH 8x1 1/2 BLK



H1 ROOF CLEAT - W4L20499
(x2) 15/16"x3 3/8"x38 13/16" (24x86x986)

- EXTRA PEOPLE ARE HELPFUL FOR THIS STEP.
- ALIGN PILOT HOLES.

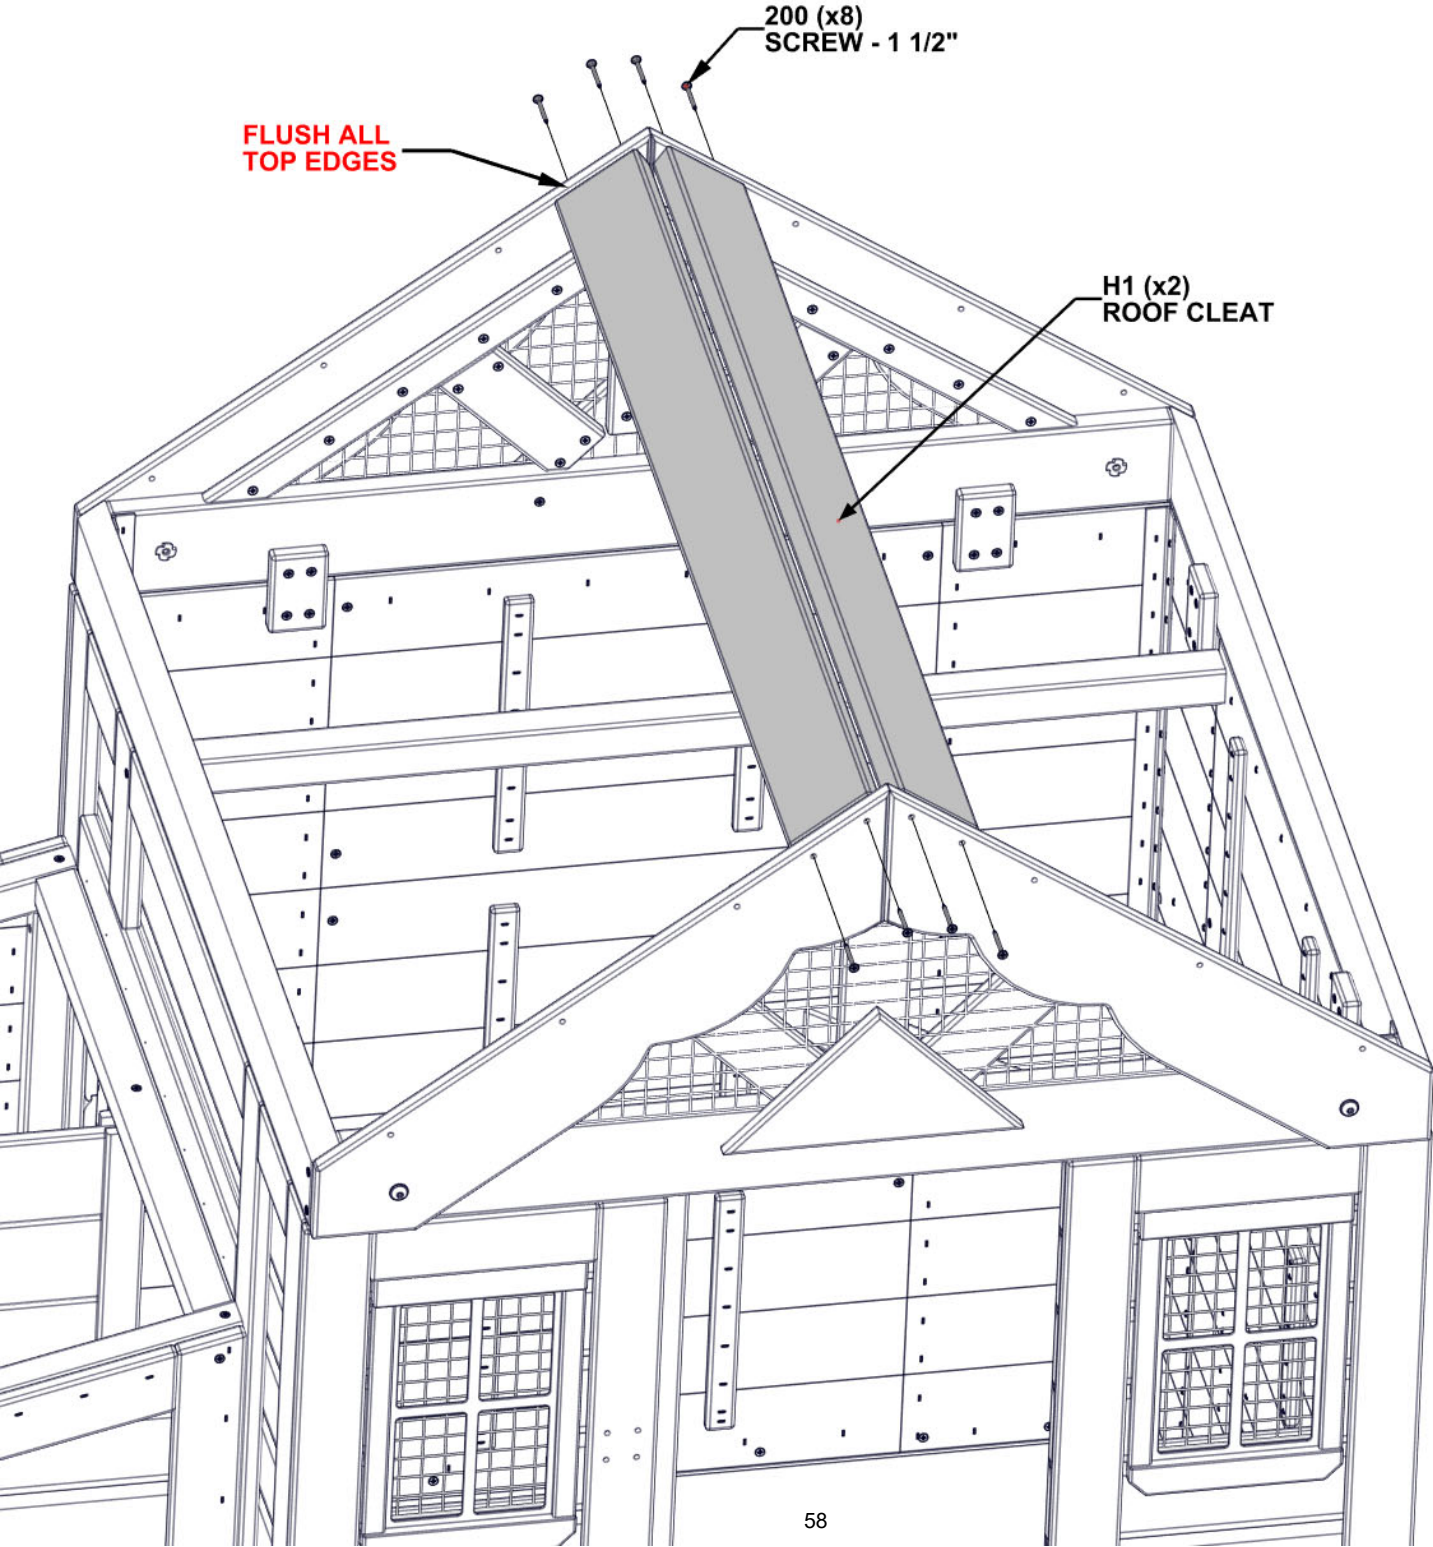


STEP 40 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
12	H100200	SCREW PFH 8x1 1/2 BLK



J2 ROOF CLEAT - W4L20512
(x4) 15/16"x2 3/8"x30 1/16" (24x60x764)

- EXTRA PEOPLE ARE HELPFUL FOR THIS STEP.
- **PREDRILL PILOT HOLES USING 1/8" [3mm] DRILL BIT.**

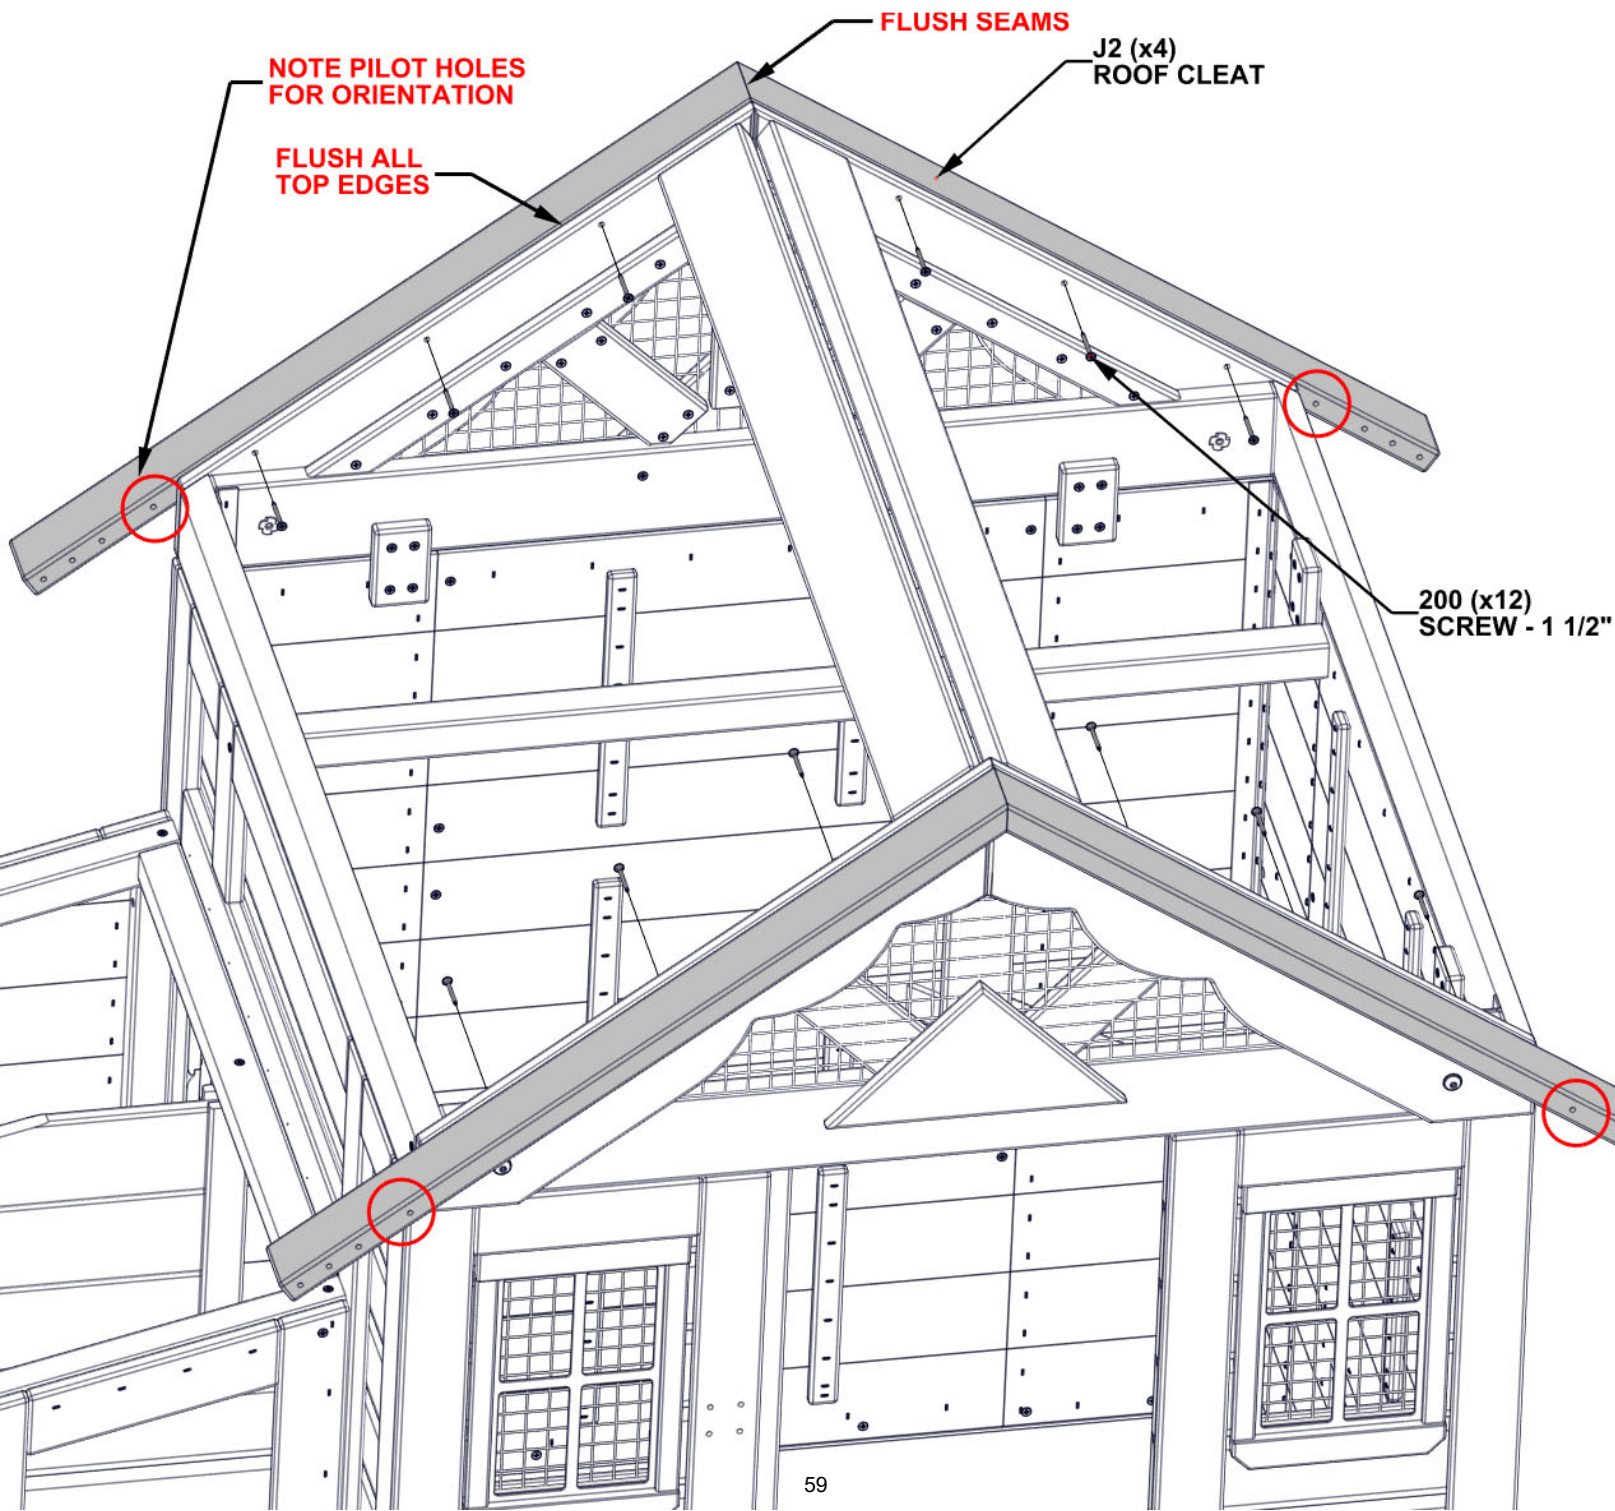


STEP 41 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
16	H100362	SCREW PFH 8x3 BLK


H3 ROOF CLEAT - W4L20515
(x2) 15/16"x3 3/8"x40 1/16" (24x86X1018)

J3 ROOF CLEAT - W4L20516
(x2) 15/16"x2 3/8"x40 1/16" (24x60x1018)

- ALIGN PILOT HOLES.

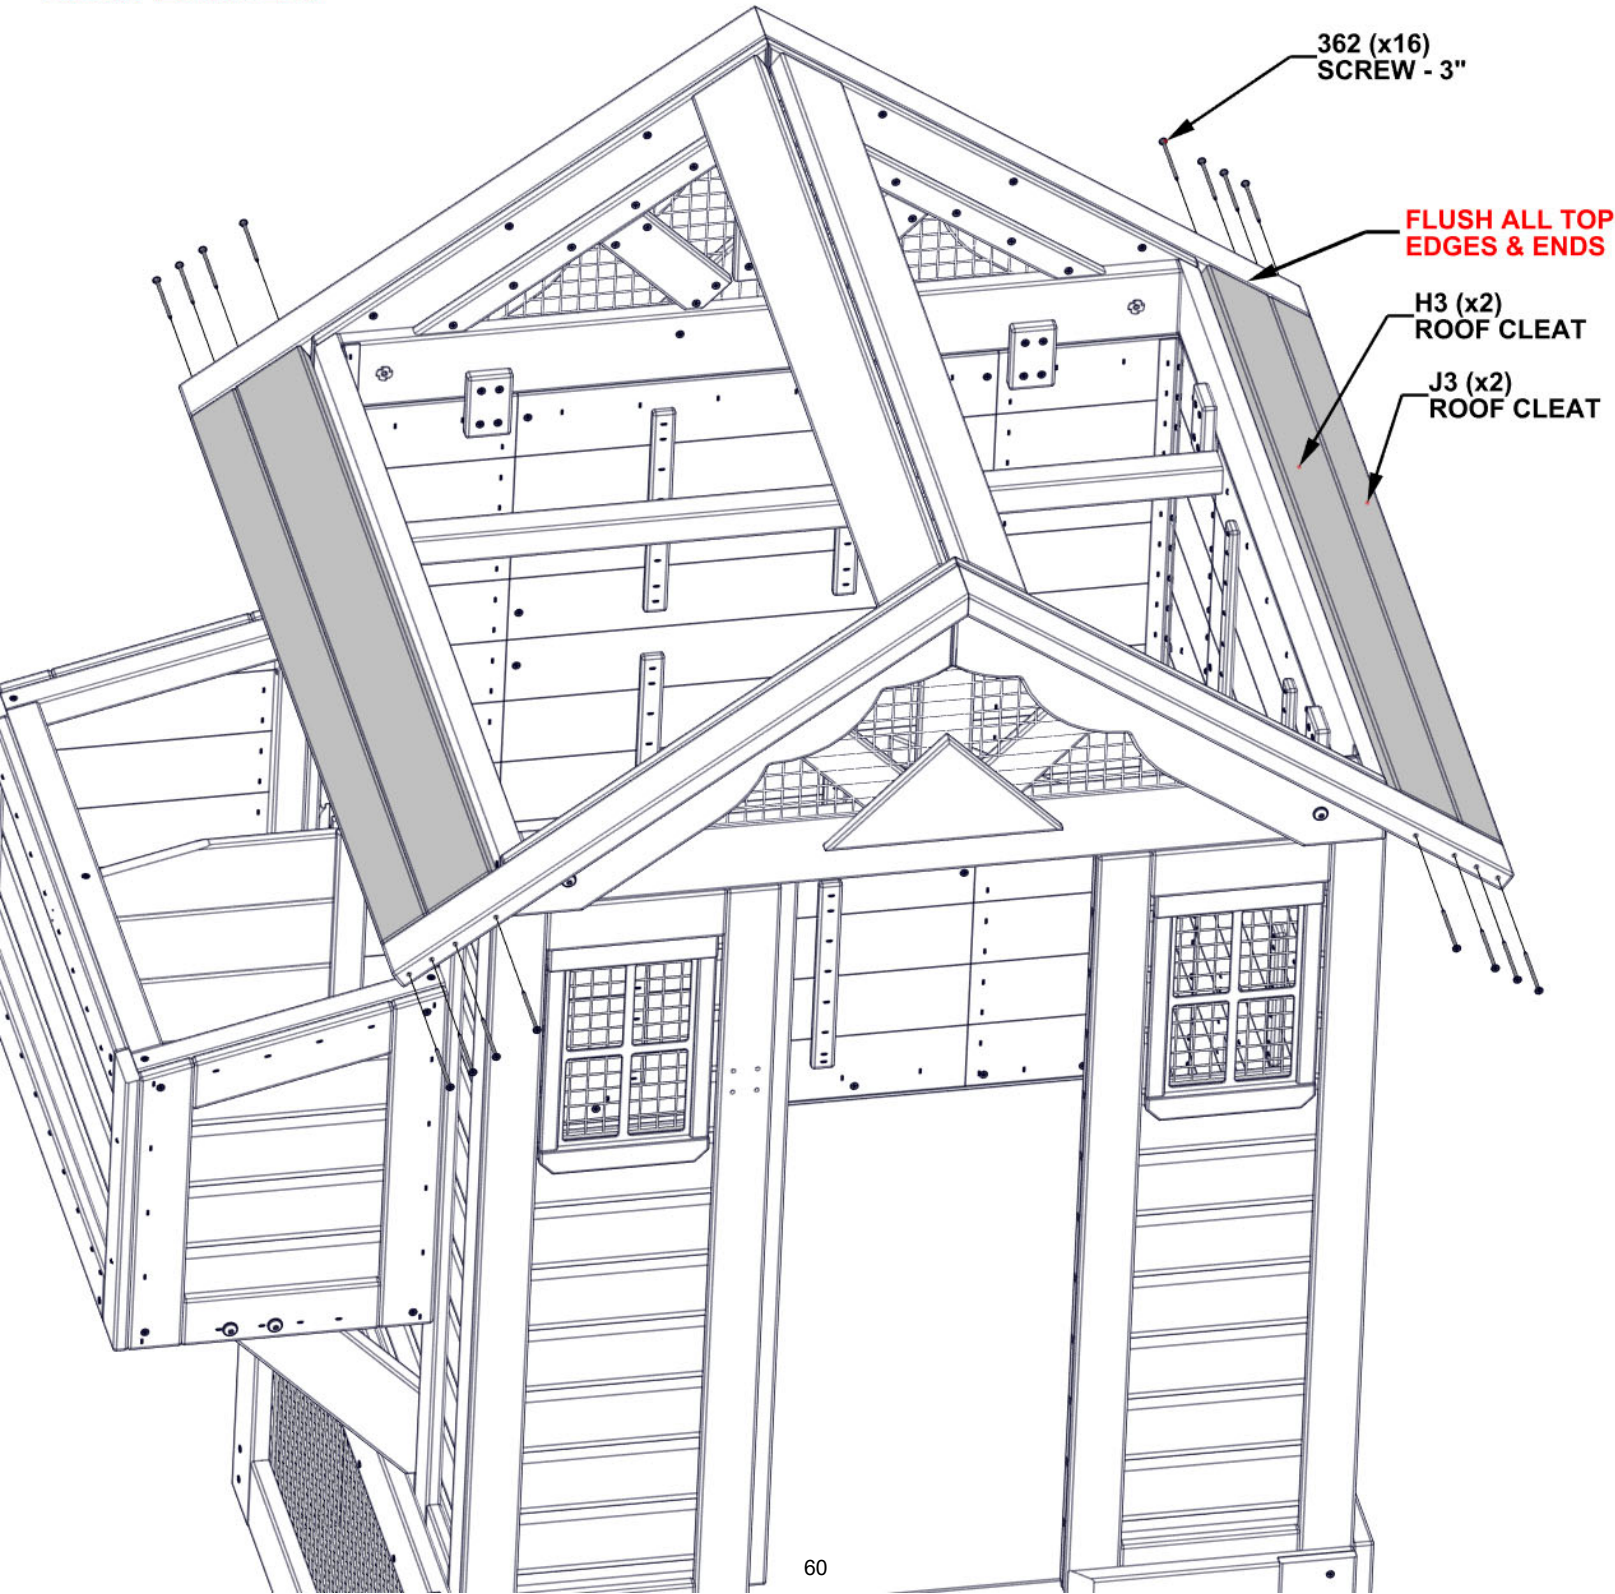

STEP 42A - CHICKEN COOP ASSEMBLY

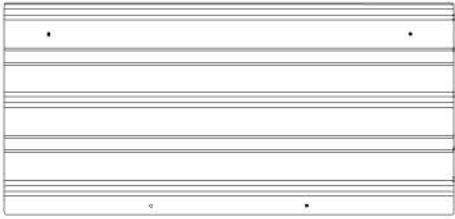


A4M04004 29 GA SHEETING
(x2)



A4M04005 29 GA SHEETING
(x1)


- WARNING:**
- GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF SHEETS.
 - REMOVE BLUE FILM FROM ROOF PANELS.
 - ORIENT ROOF PANELS AS SHOWN.
 - START BY FLUSHING THE FIRST SHEET WITH THE SIDE OF J2 ROOF CLEAT. THEN MARK WHERE NEXT SHEET WILL LAND AS SHOWN BELOW. TO ENSURE THE PANELS WILL ALIGN CORRECTLY. THE LAST SHEET SHOULD ALIGN CLOSE TO THE EDGE OF THE J2 ROOF CLEAT ON THE OPPOSITE SIDE.
 - SEE NEXT STEP FOR FASTENING REQUIREMENTS.

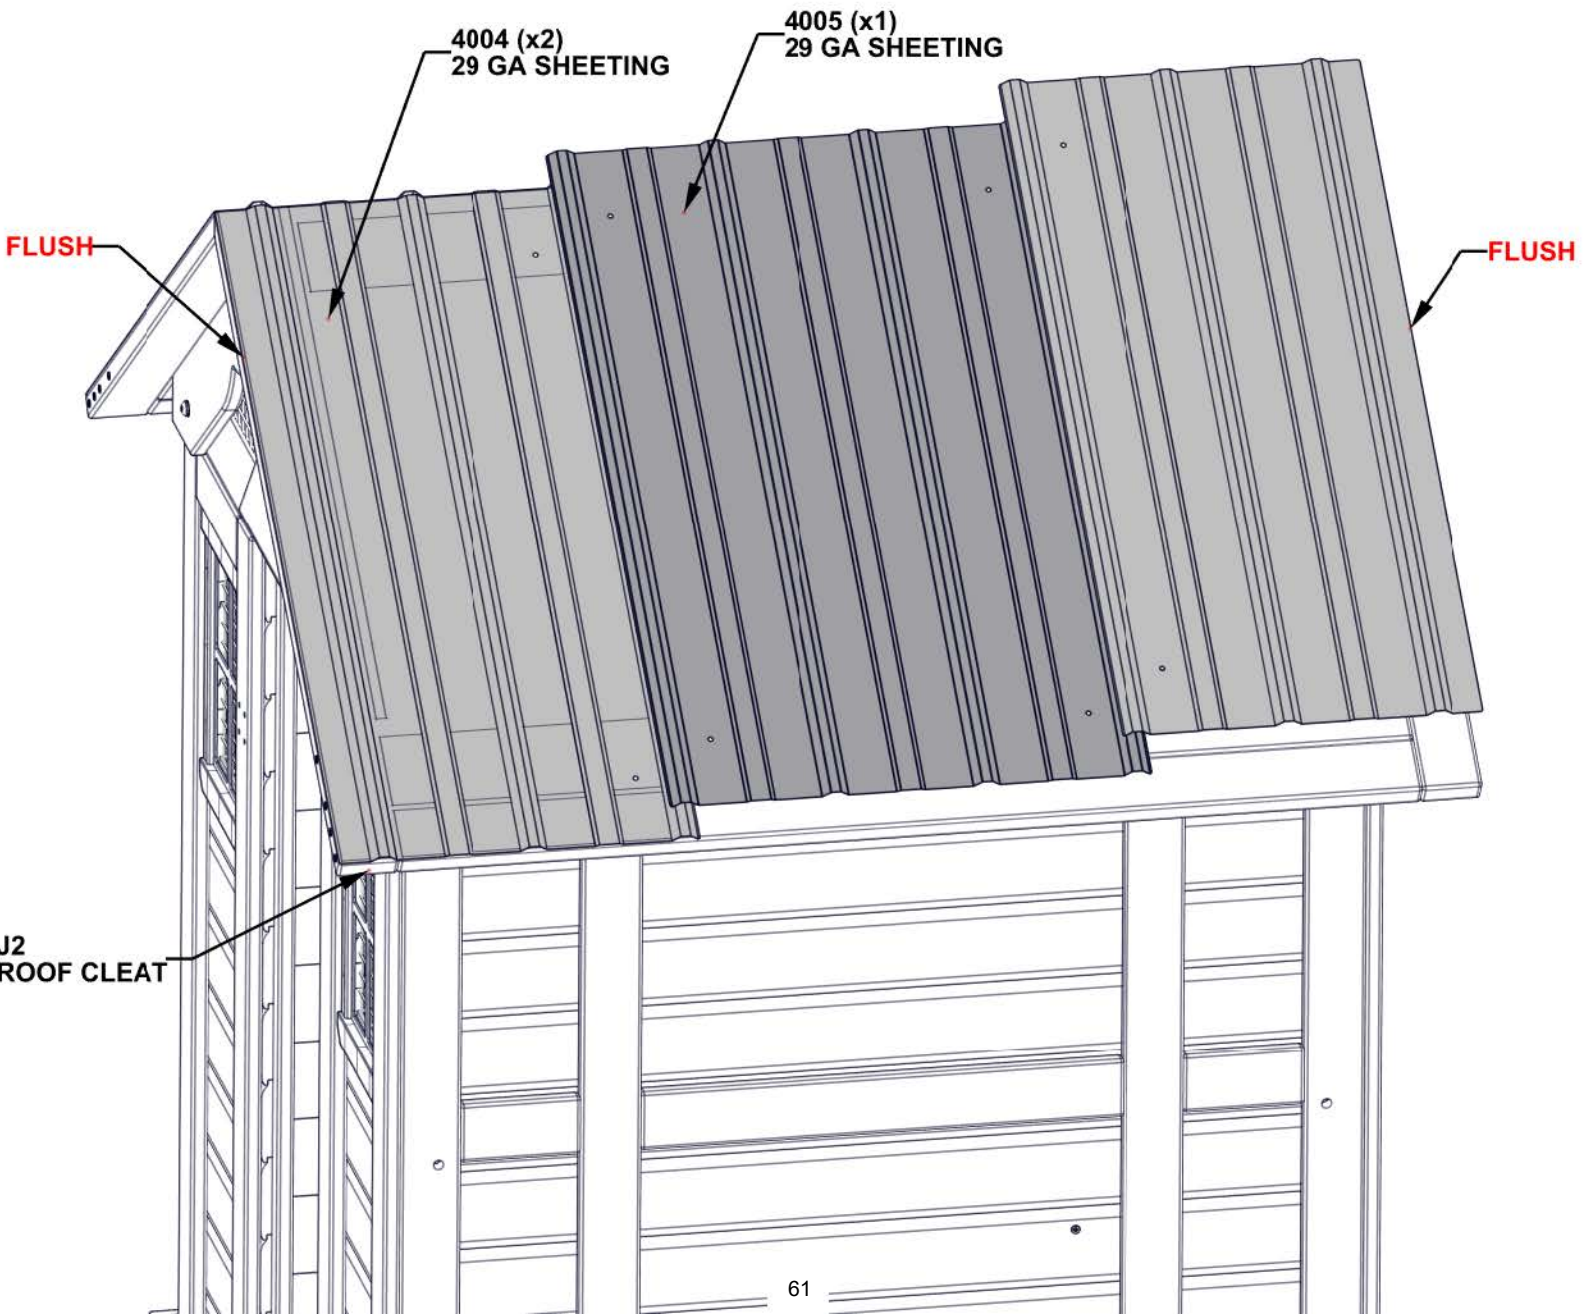

STEP 42B - CHICKEN COOP ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
16	H101117	SCREW WOODGRIP 10-16x3/4" BLK

- WARNING:**
- GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF SHEETS.
 - DO NOT GET ON THE ROOD TO ATTACH SCREWS.
 - ATTACH USING HOLES IN SHEETING.
 - REPEAT STEPS 42 A & 42 B FOR OPPOSITE SIDE OF ROOF.

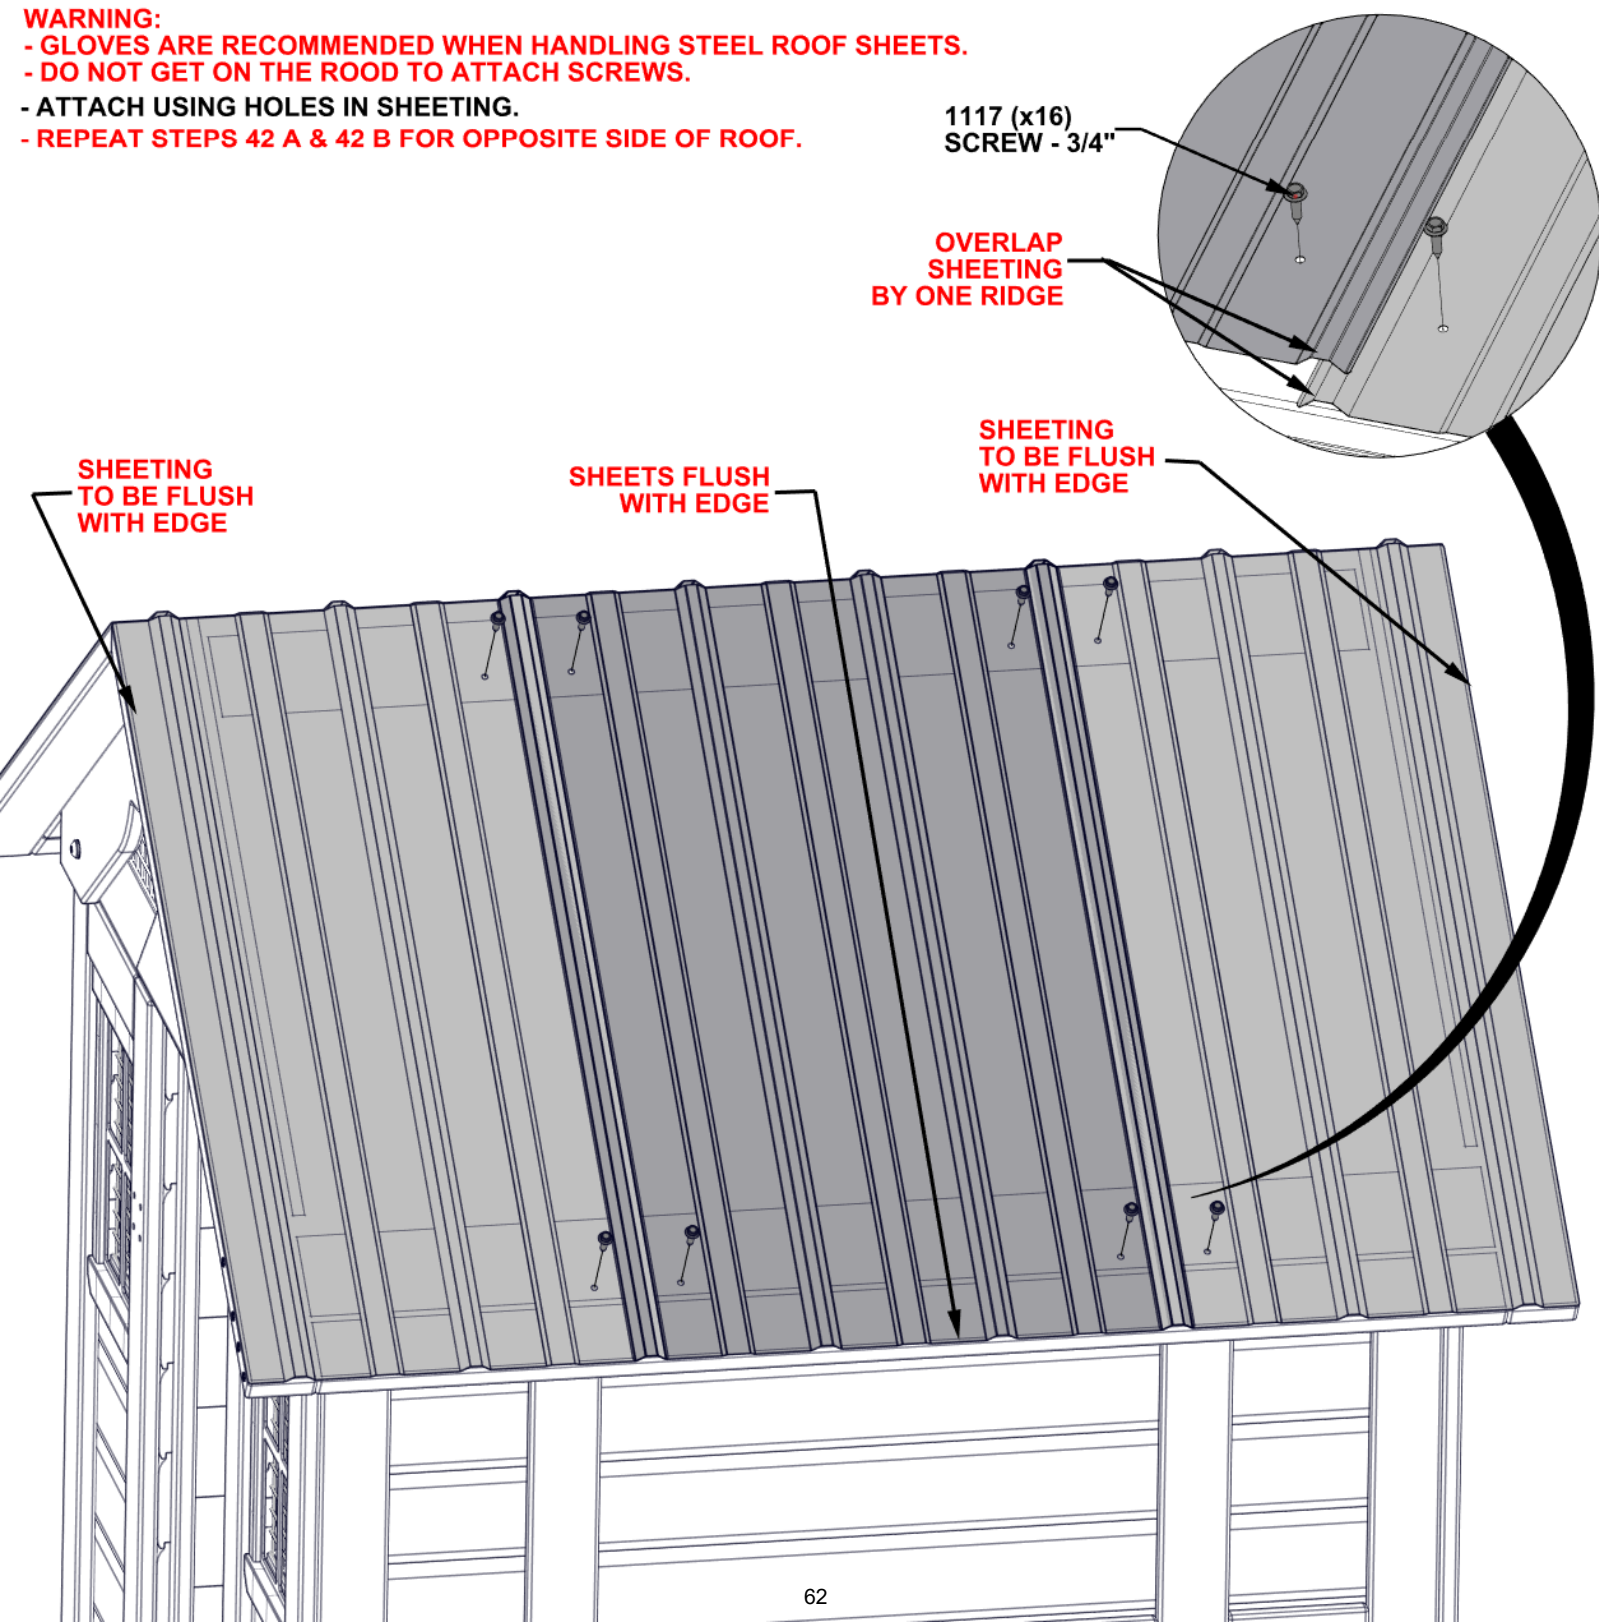

STEP 43 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H101117	SCREW WOODGRIP 10-16x3/4" BLK

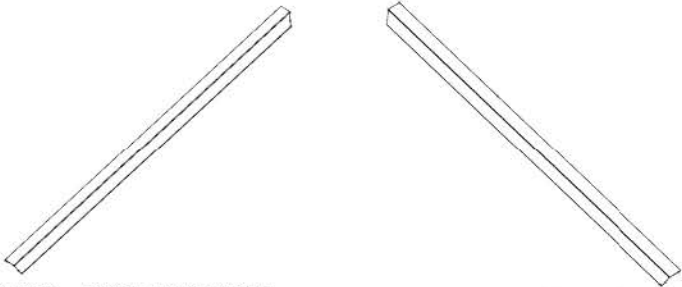


A4M04007 ROOF EDGE TRIM (x2)

A4M04006 ROOF EDGE TRIM (x2)

WARNING:
- GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF SHEETS.

- REMOVE BLUE FILM FROM EDGE TRIM. ORIENT TRIM AS SHOWN BELOW.
- DUE TO MULTIPLE LAYERS OF METAL ON THE EDGE TRIM, IT IS RECOMMENDED THAT A 1/8" [3mm] DRILL BIT IS USED TO CREATE STARTER HOLES

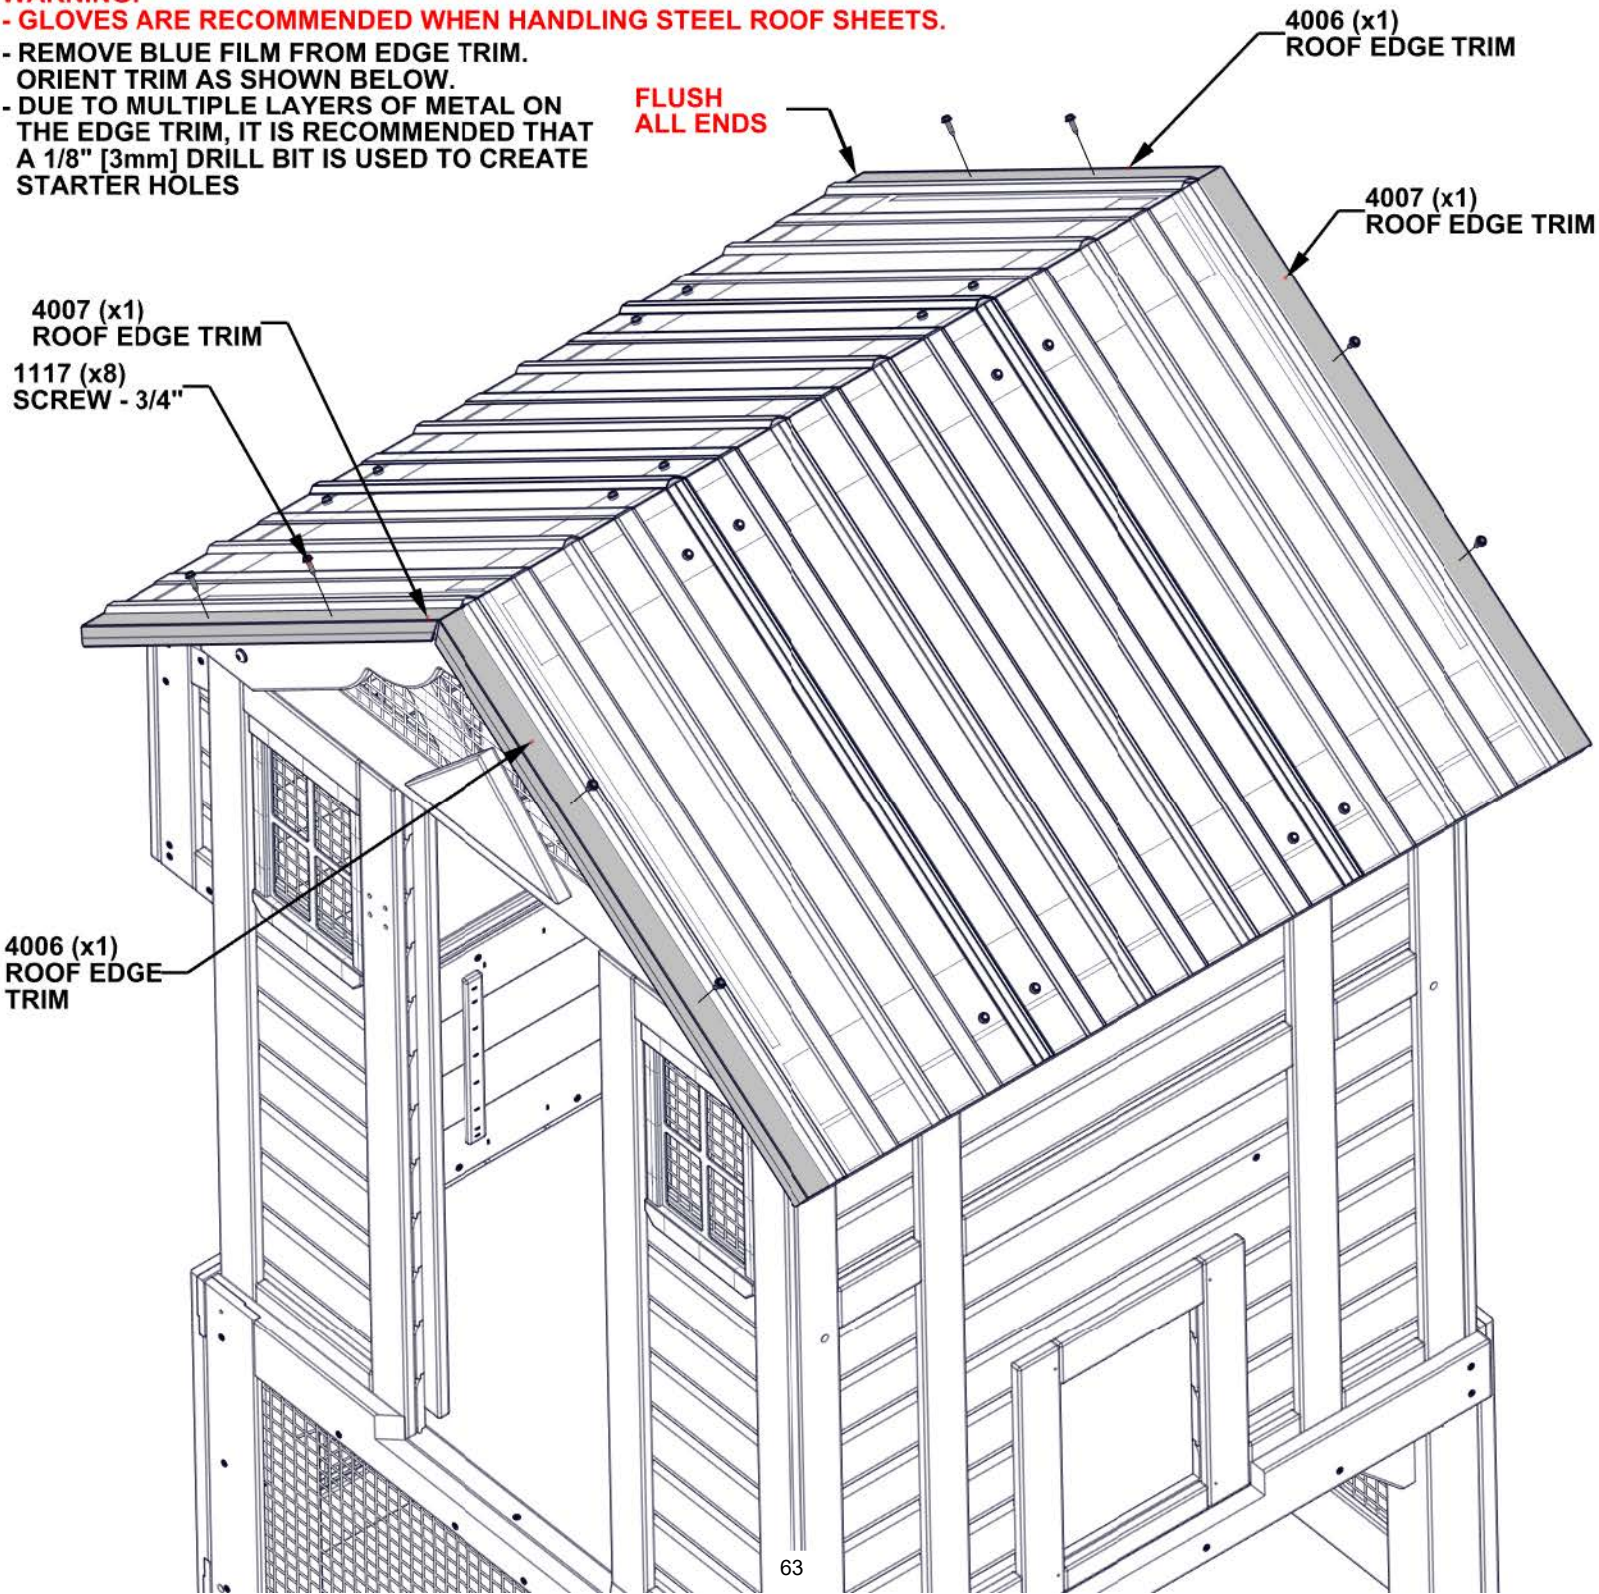

STEP 44 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H101117	SCREW WOODGRIP 10-16x3/4" BLK



WARNING:
- GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF SHEETS.


- REMOVE BLUE FILM FROM RIDGE CAP. ORIENT RIDGE CAP AS SHOWN BELOW.
- DUE TO MULTIPLE LAYERS OF METAL ON THE EDGE TRIM, IT IS RECOMMENDED THAT A 1/8" [3mm] DRILL BIT IS USED TO CREATE STARTER HOLES

ATTACH THESE SCREWS THROUGH THE TRIM AND INTO THE RIB OF THE SHEETING.

1117 (x8)
SCREW - 3/4"

5/16"
[8mm]


4009 (x1)
RIDGE CAP

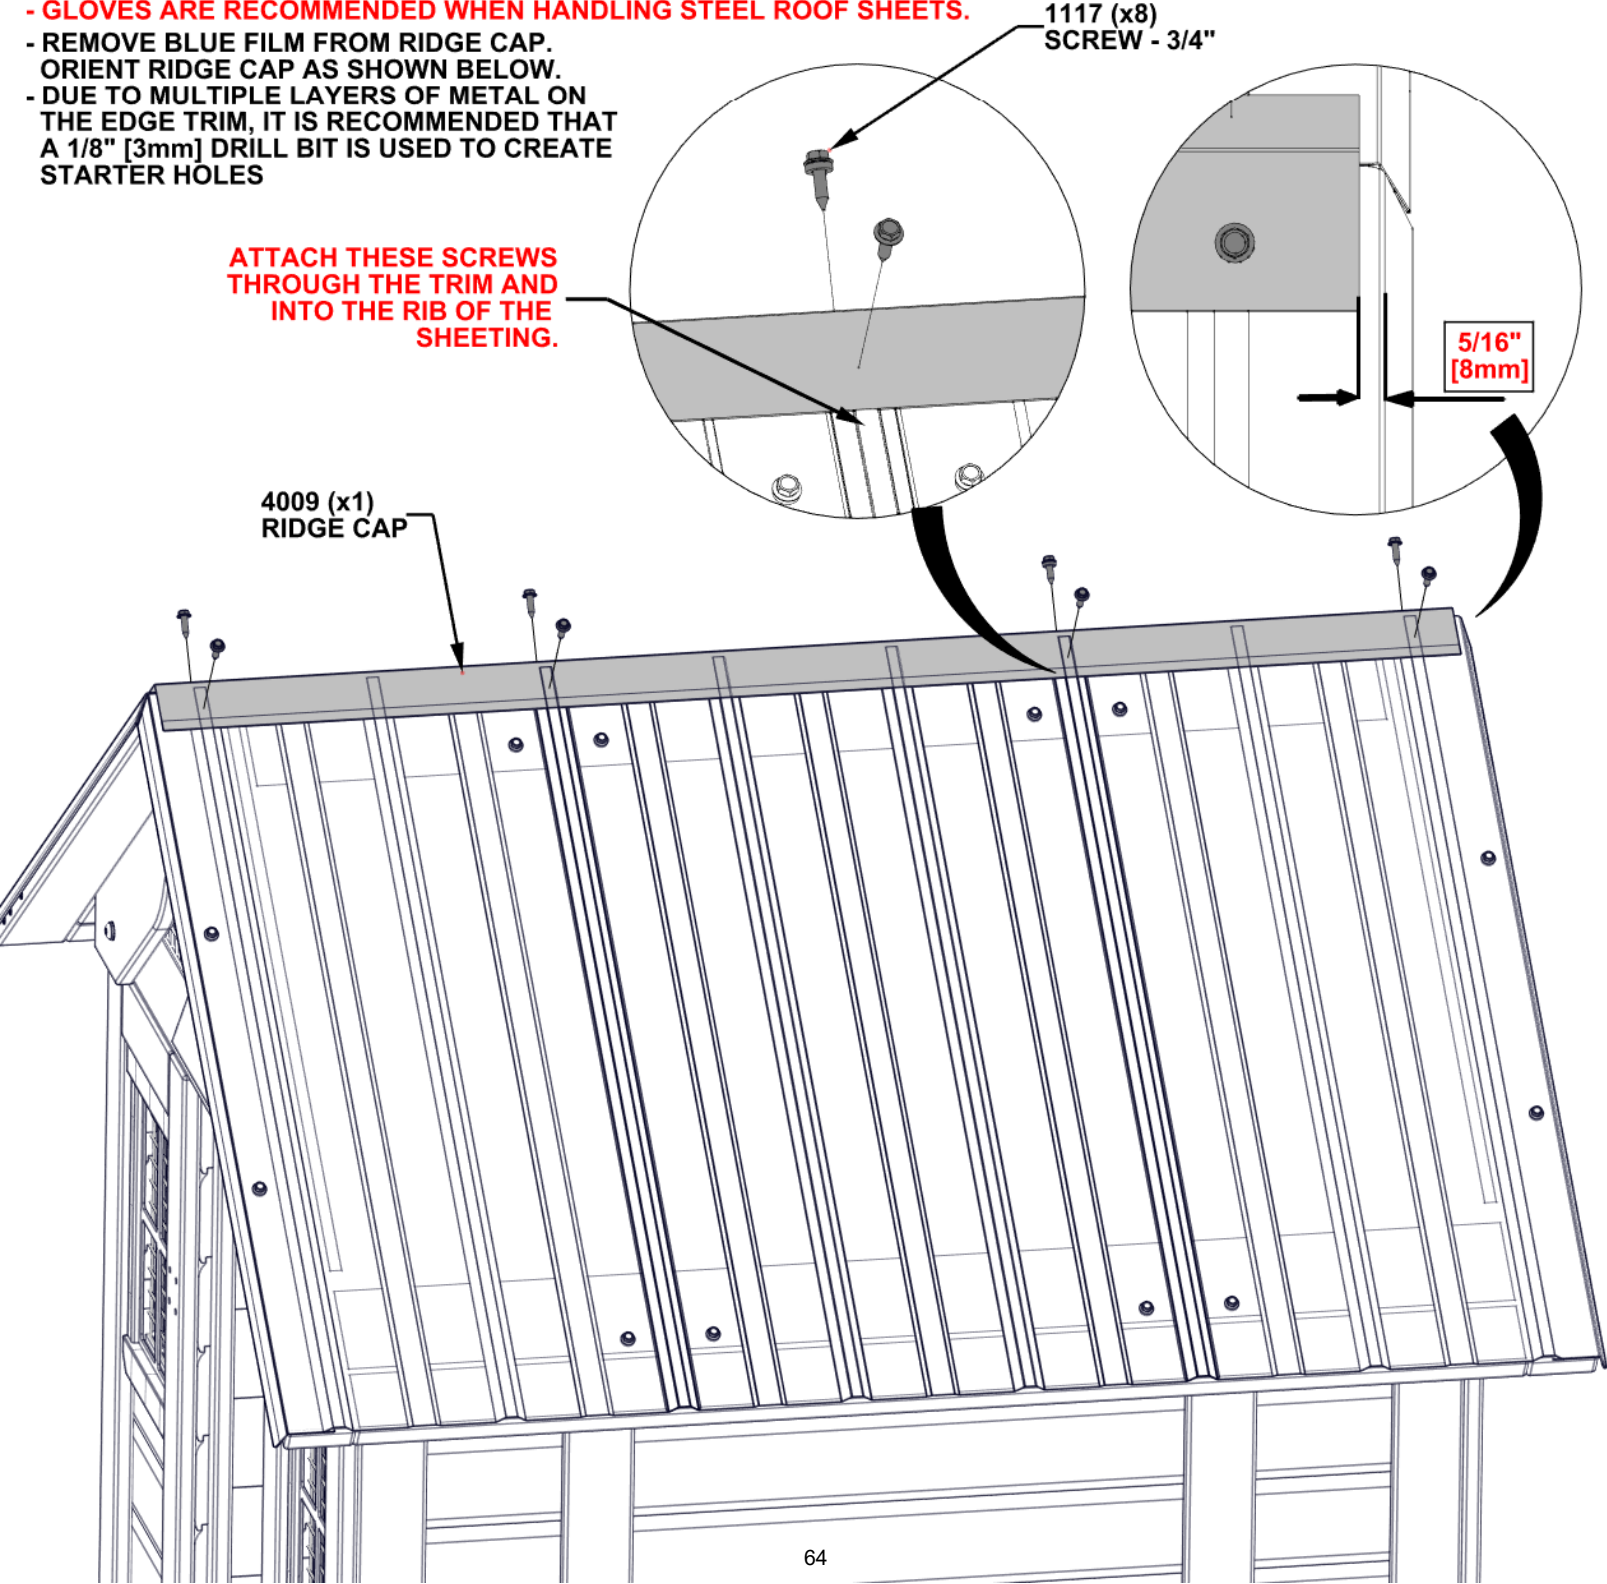

**SET CHICKEN COOP
ASSEMBLY TO THE SIDE**

STEP 45 - CHICKEN RAMP BASE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100395	SCREW PFH 8x3/4 BLK

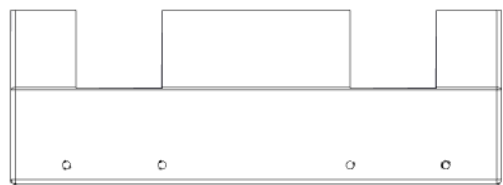


D1 BASE RAMP - W4L20498
(x1) 1 7/16"x4 5/16"x12 1/8" (36x109x308)




A4M04737 CHICKEN RAMP BRACKET
(x1)

- ALIGN PILOT HOLES.

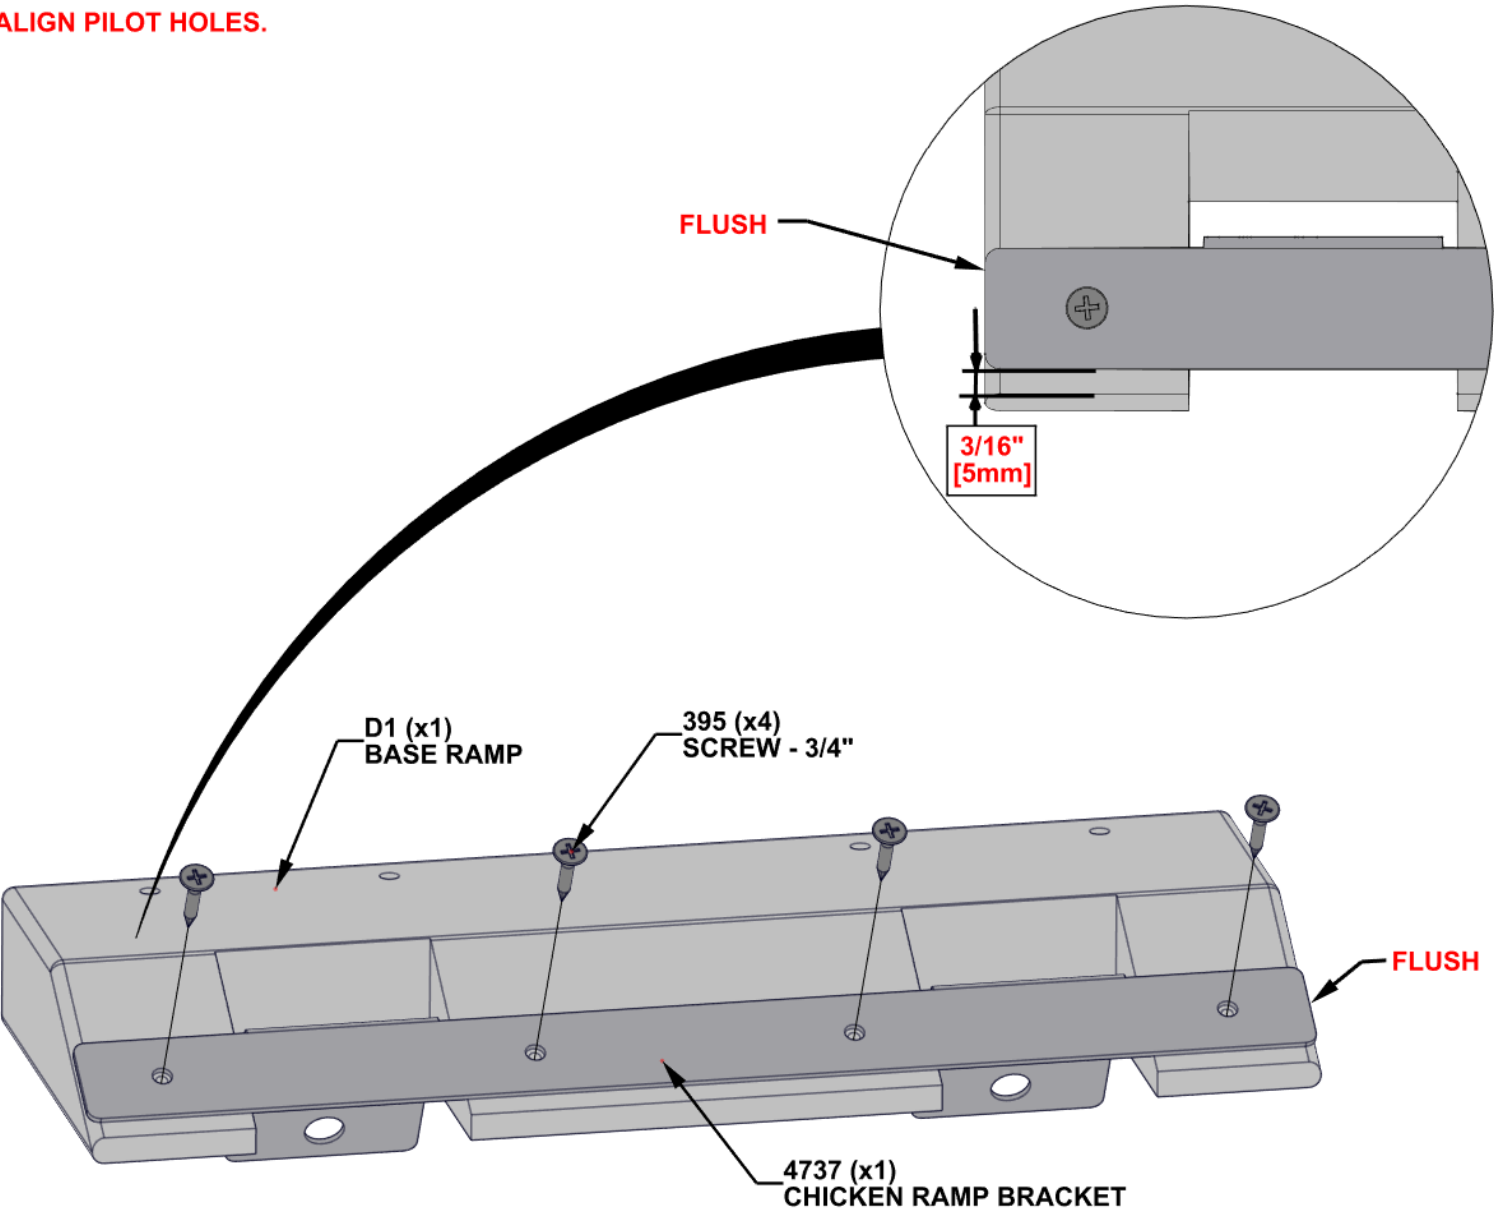

STEP 46 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101109	SCREW PFH 8x3-1/2 BLK

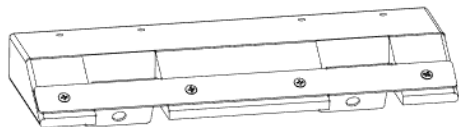


D1 BASE RAMP ASSEMBLY
(x1) FROM STEP 45




J1 RAMP SPACER - W4L20497
(x1) 15/16"x2 3/8"x12 1/8" (24x60x308)

- ALIGN PILOT HOLES.

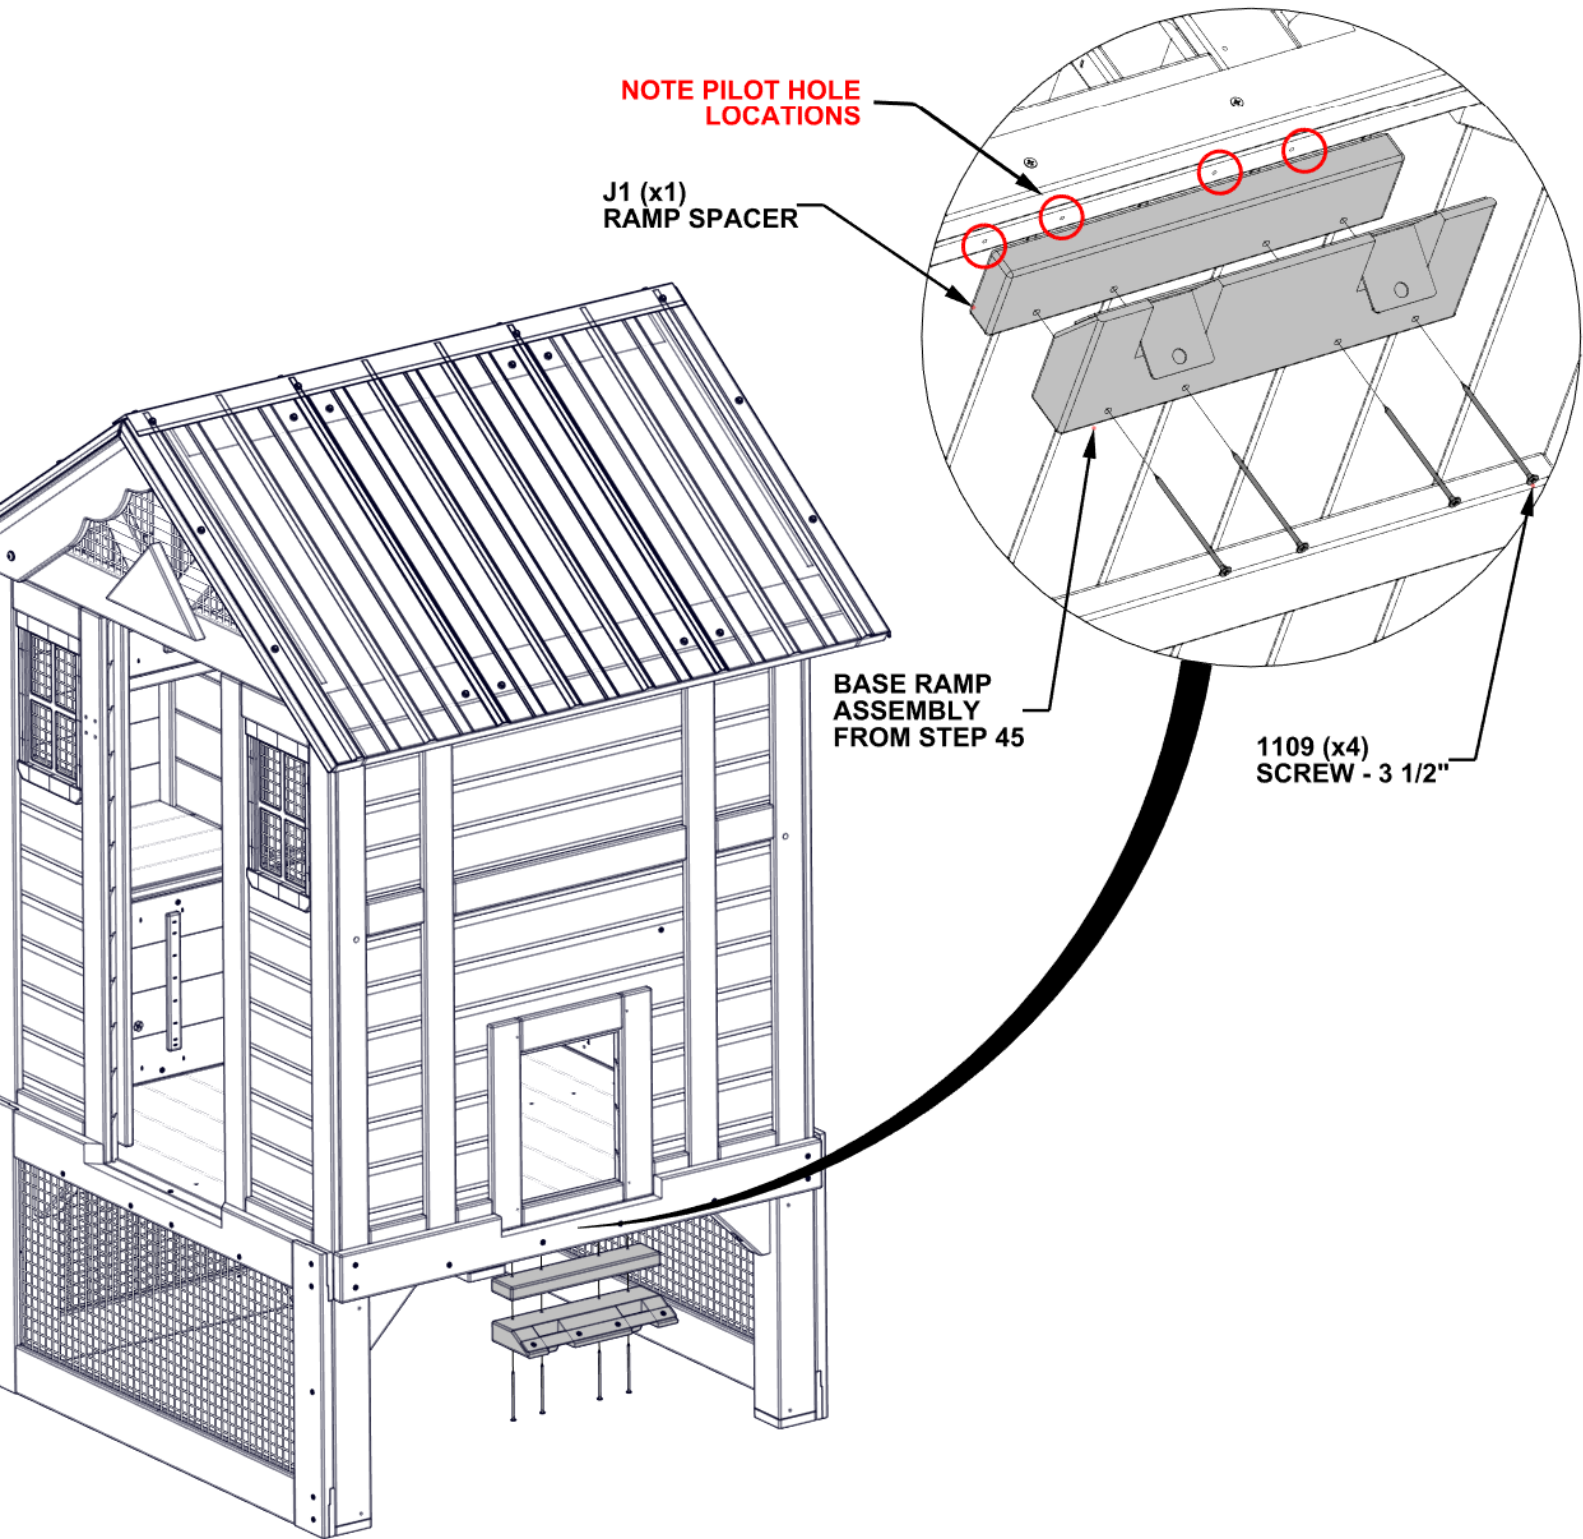

STEP 47 - CHICKEN COOP ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
6	H100385	SCREW PFH 8x1 BLK

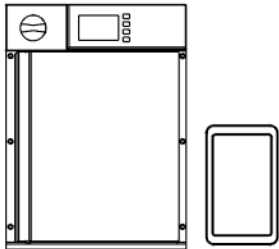


9240247 CHICKEN COOP DOOR
(x1) W/SOLAR PANEL

- ALIGN PILOT HOLES.
- DO NOT OVERTIGHTEN SCREWS.
- INSTRUCTIONS FOR DOOR OPERATION CAN BE FOUND WITHIN THE BOX IT COMES IN.
- INSTALL DOOR SOLAR PANEL IN DESIRED LOCATION AFTER THE CHICKEN COOP IS COMPLETE USING AN EXTRA PFH SCREW.

247 (x1)
CHICKEN COOP DOOR

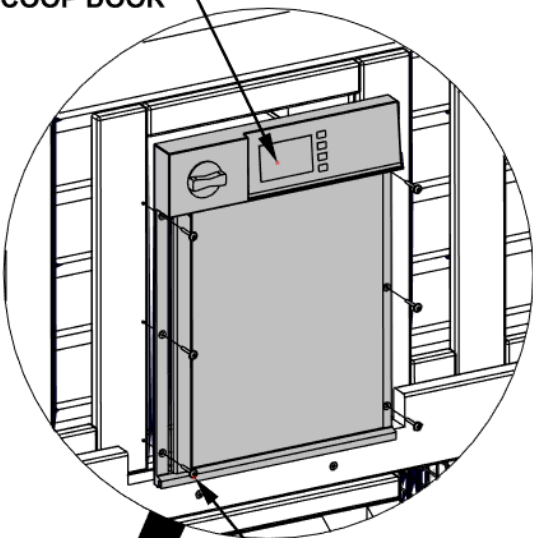


385 (x6)
SCREW - 1"

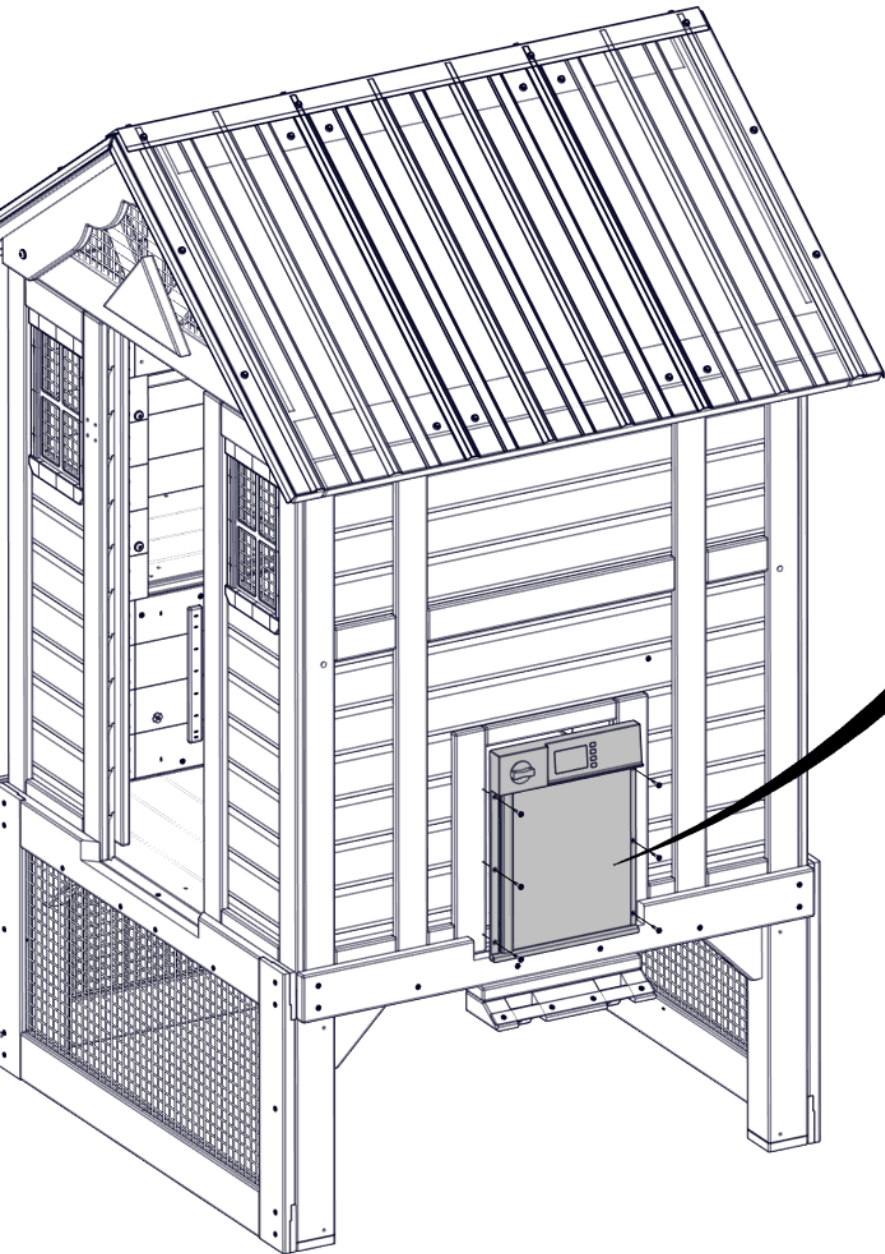

SET CHICKEN COOP ASSEMBLY TO THE SIDE

STEP 48A - FRONT DOOR ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
12	H100627	SCREW PFH 6x3/4 BLK

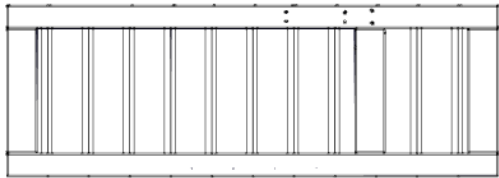


FR01 FRONT DOOR - W2A04405
(x1) 1 1/16"x13 5/16"x38 3/16" (27x338x970)




A4M04578 PIANO HINGE 925mm
(x1)

- ALIGN PILOT HOLES.
- HINGE IS FASTENED TO BACK SIDE OF FRONT DOOR.

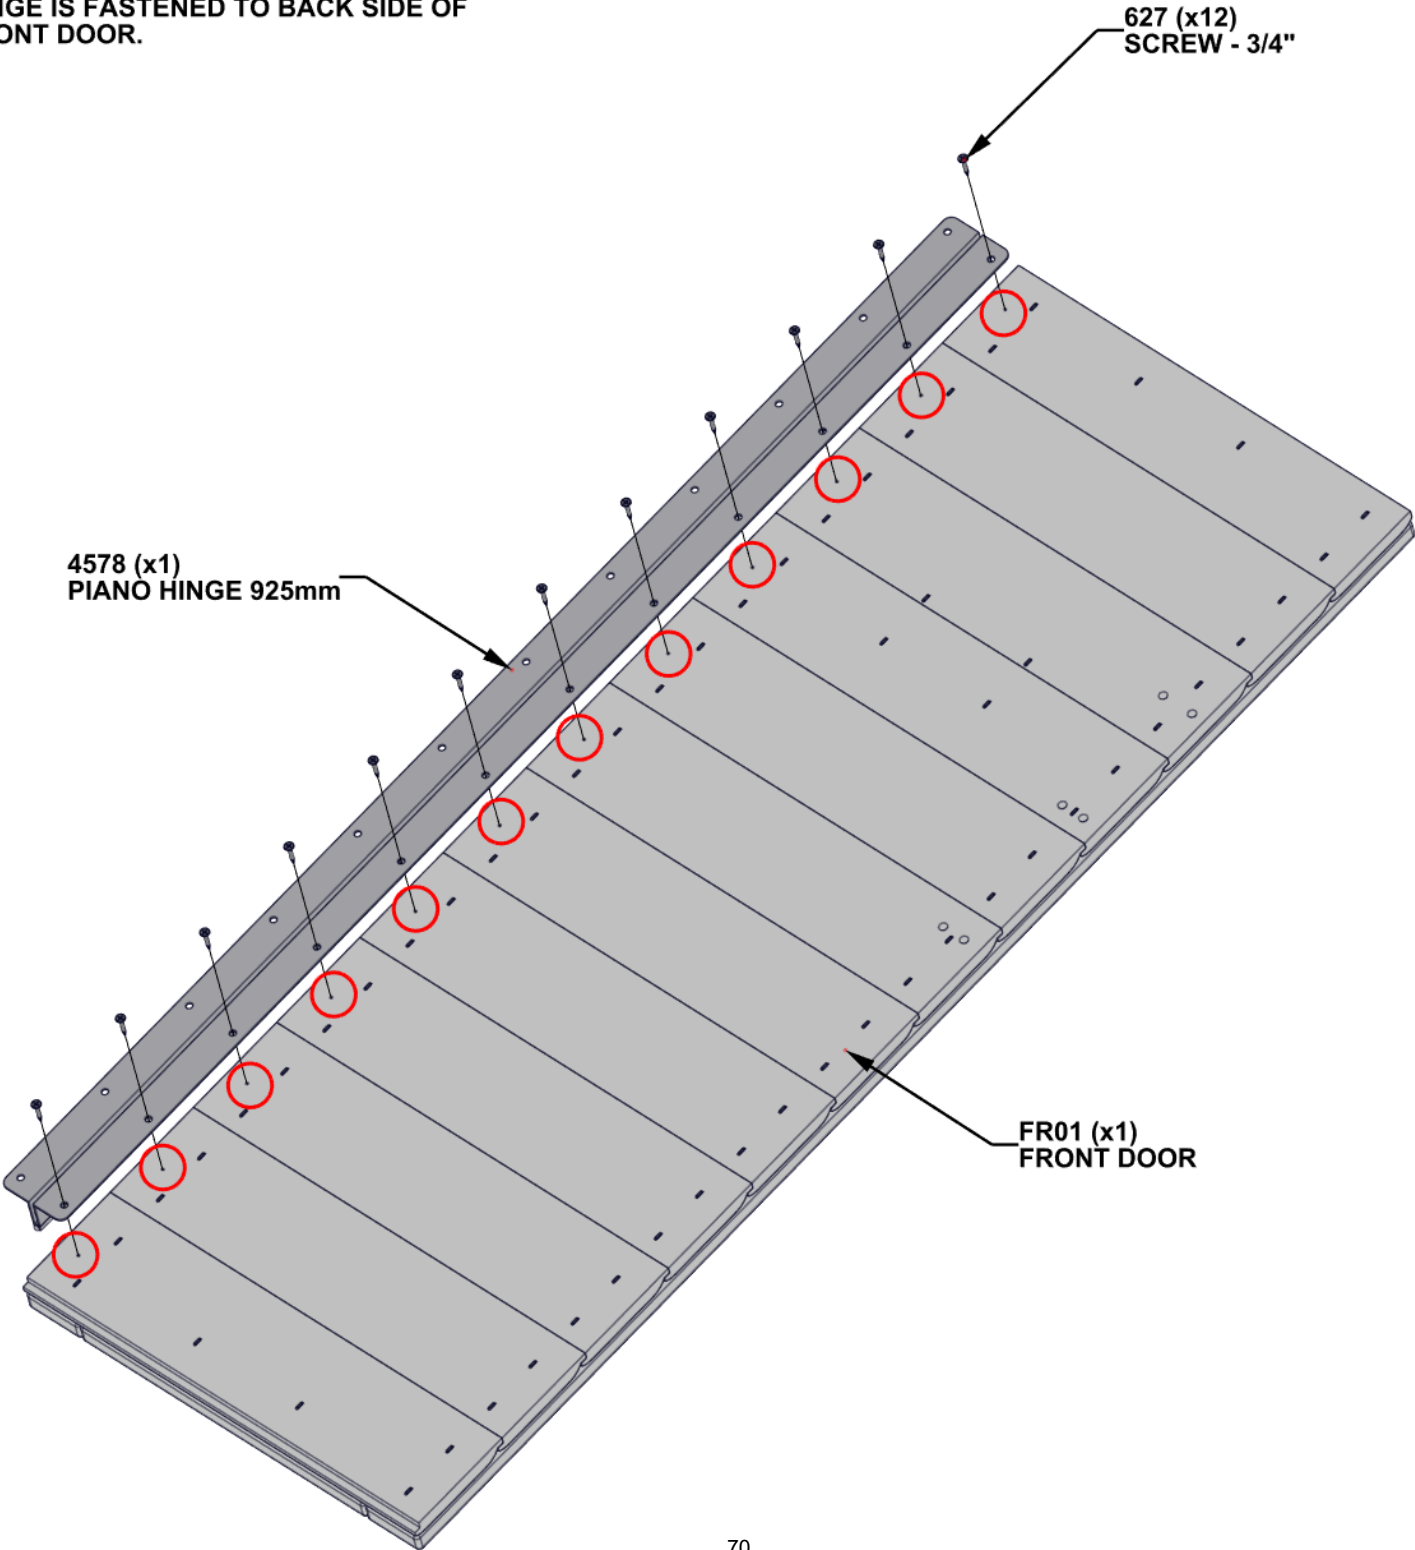


STEP 48B - FRONT DOOR ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100804	T-NUT 8/32 BLK
4	H100806	SCREW POH 8/32x1 1/8" BLK




A4M00559 PULL HANDLE
(x1)

- INSTALL T-NUTS FIRST.
- ALIGN PILOT HOLES.

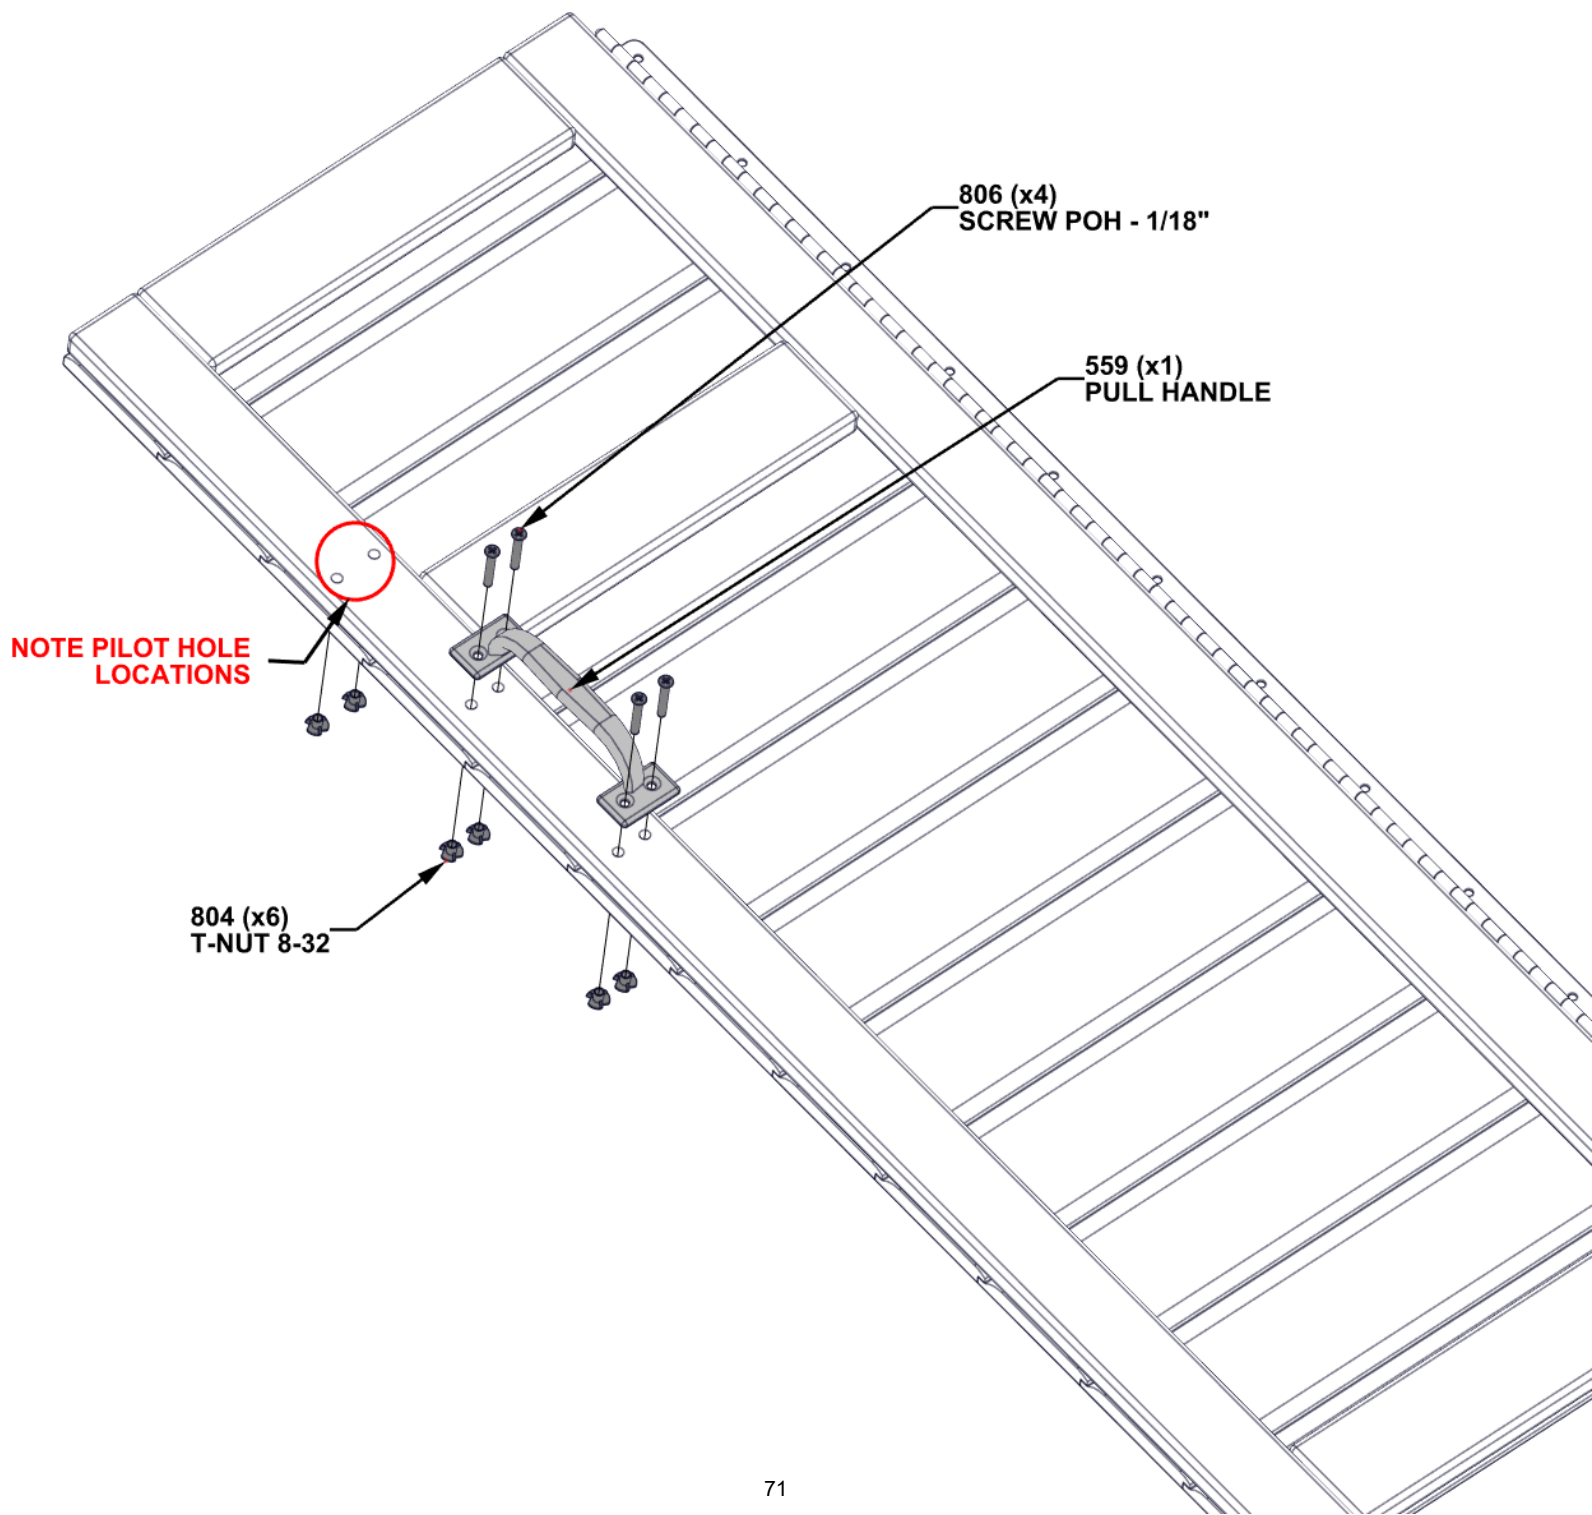

STEP 49 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
12	H100627	SCREW PFH 6x3/4 BLK

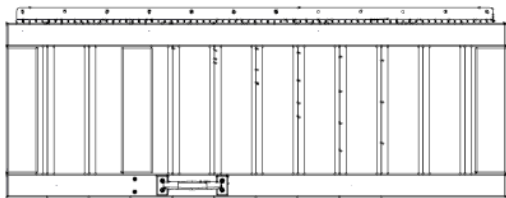


FRONT DOOR ASSEMBLY
FROM STEP 48A - B

- EXTRA PEOPLE ARE HELPFUL FOR THIS STEP.
- **ALIGN PILOT HOLES.**
- YOU MAY HAVE TO LEAN INTO DOOR GAP TO FASTEN HARDWARE

FRONT DOOR ASSEMBLY
FROM STEP 48A - B


627 (x12)
SCREW - 3/4"

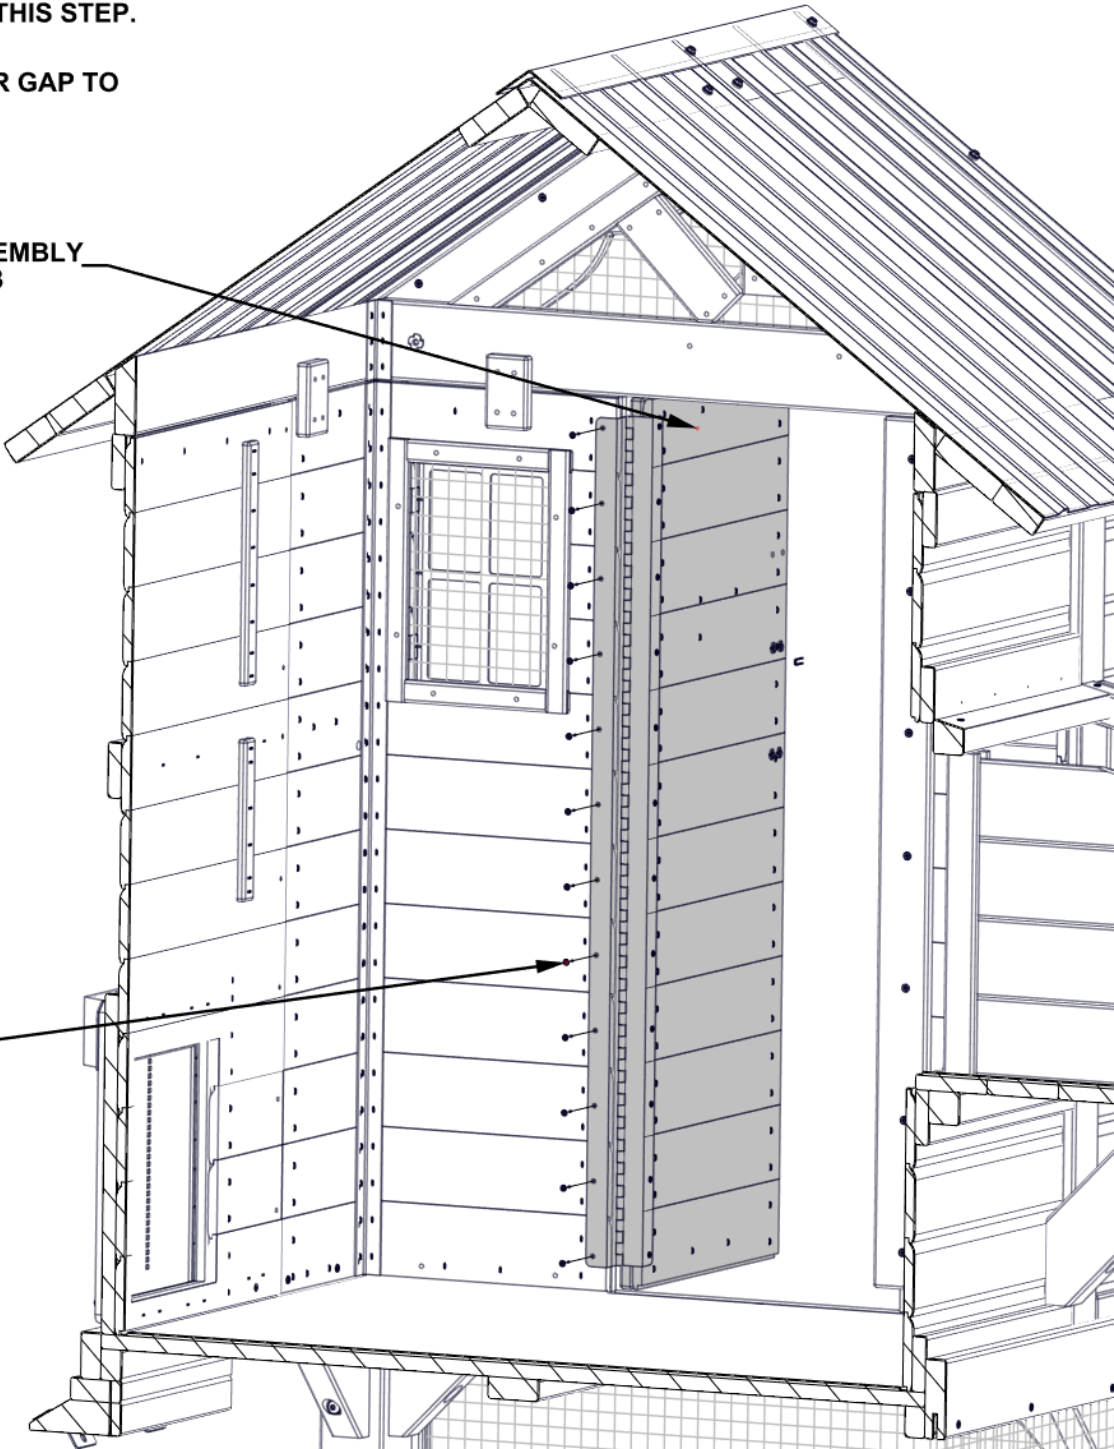

LEFT & BACK WALL
HIDDEN FOR DETAIL


STEP 50 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100806	SCREW POH 8/32x1 1/8" BLK
2	H101076	SCREW POH 8-32 x 1 1/4 BLK

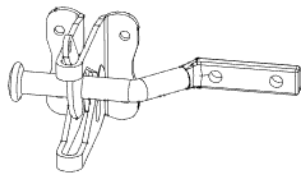


A100264 BOLT LATCH
(x1)

0264 (x1)
BOLT LATCH

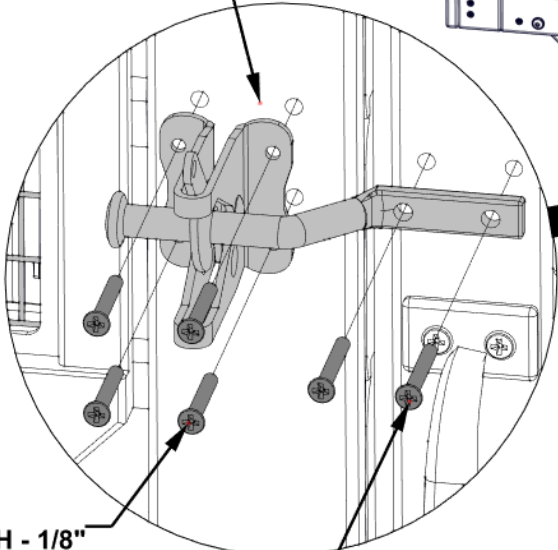

806 (x4)
SCREW POH - 1/8"

1076 (x2)
SCREW POH - 1 1/4"

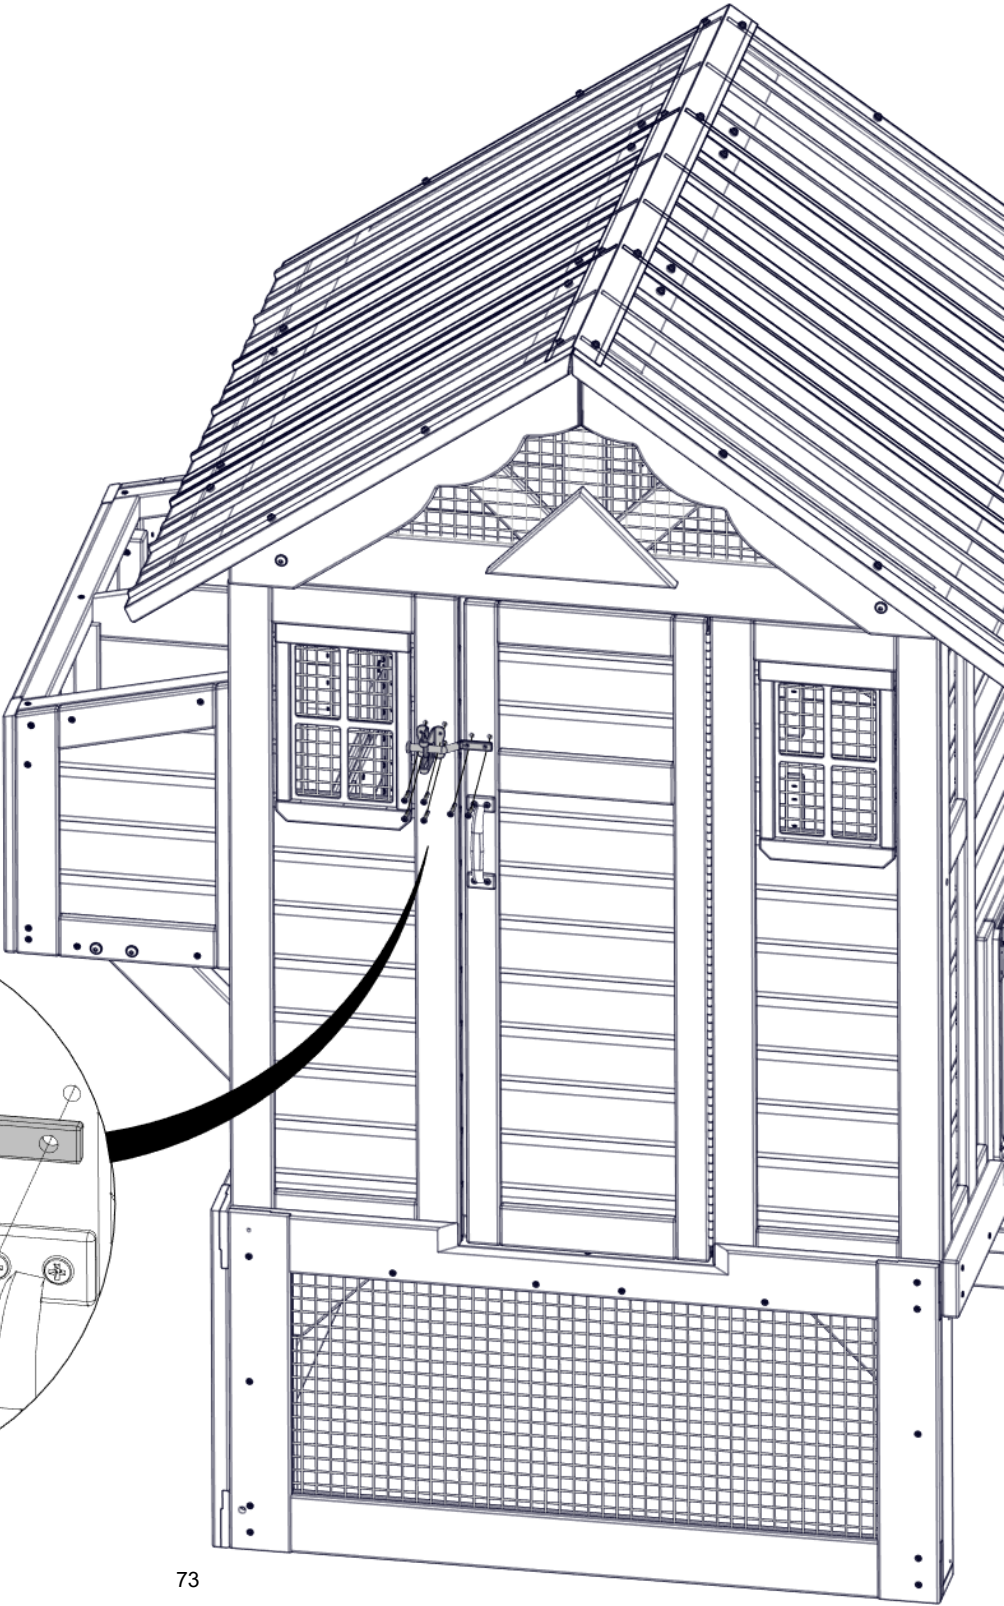

**SET CHICKEN COOP
ASSEMBLY TO THE SIDE**

STEP 51 - NESTING BOX LID

QTY	PART NUMBER	DESCRIPTION
8	H100391	SCREW PFH 8x2 BLK



T3 FRAME BOARD - W4L20509
(x1) 15/16"x1 5/16"x28 1/2" (24x34x724)



T4 FRAME BOARD - W4L20511
(x2) 15/16"x1 5/16"x15 3/4" (24x34x400)




T5 FRAME BOARD - W4L20522
(x1) 15/16"x1 5/16"x28 1/2" (24x34x724)




H2 ROOF CLEAT - W4L20499
(x1) 15/16"x3 3/8"x28 1/2" (24x86x724)

- ALIGN PILOT HOLES.

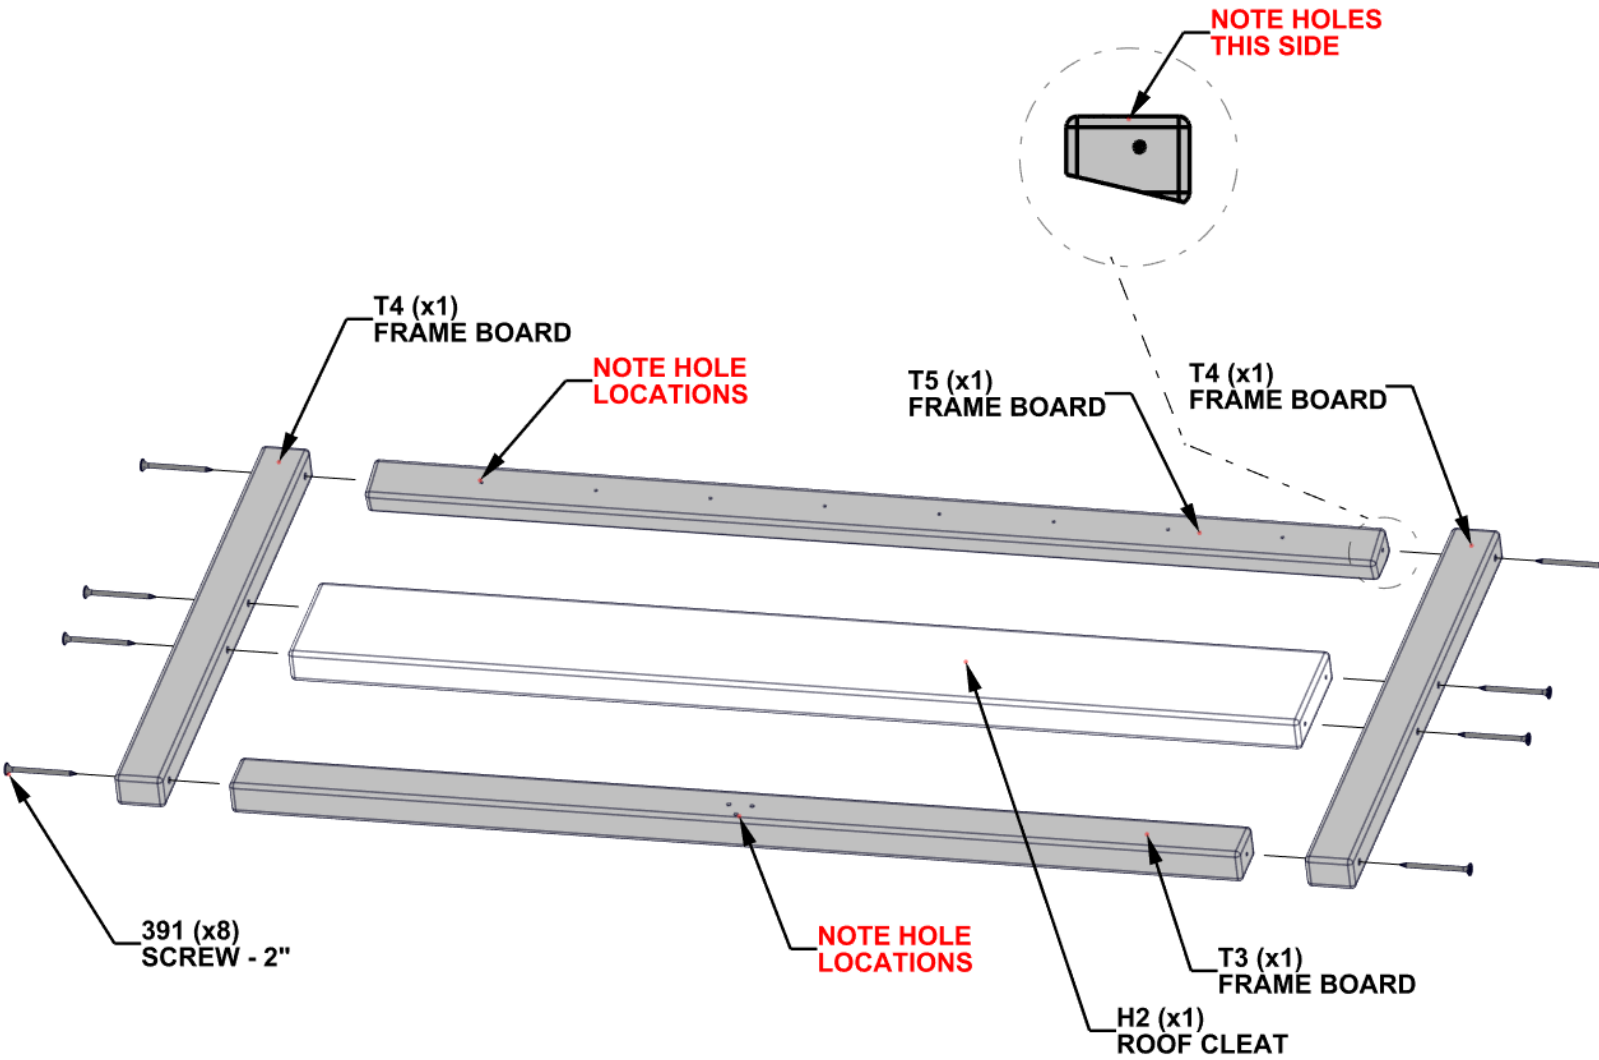


STEP 52 - NESTING BOX LID

QTY	PART NUMBER	DESCRIPTION
8	H101117	SCREW WOODGRIP 10-16x3/4" BLK

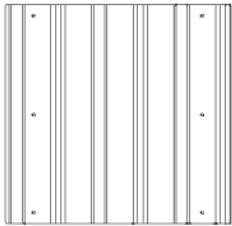


A4M04010 29 GA SHEETING
(x2)

- WARNING:**
- GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF SHEETS.
 - REMOVE BLUE FILM FROM ROOF PANELS. ORIENT ROOF PANELS AS SHOWN BELOW.
 - START BY FLUSHING THE FIRST SHEET WITH THE SIDE OF THE BOARD THEN MARK WHERE THE SHEETS WILL LAND AS SHOWN BELOW TO ENSURE THE PANELS WILL ALIGN CORRECTLY. THE LAST SHEET SHOULD ALIGN CLOSE TO THE EDGE OF THE BOARD.
 - PREDRILL 1/8" [3mm] PILOT HOLES USING SHEET METAL HOLES AS A GUIDE.

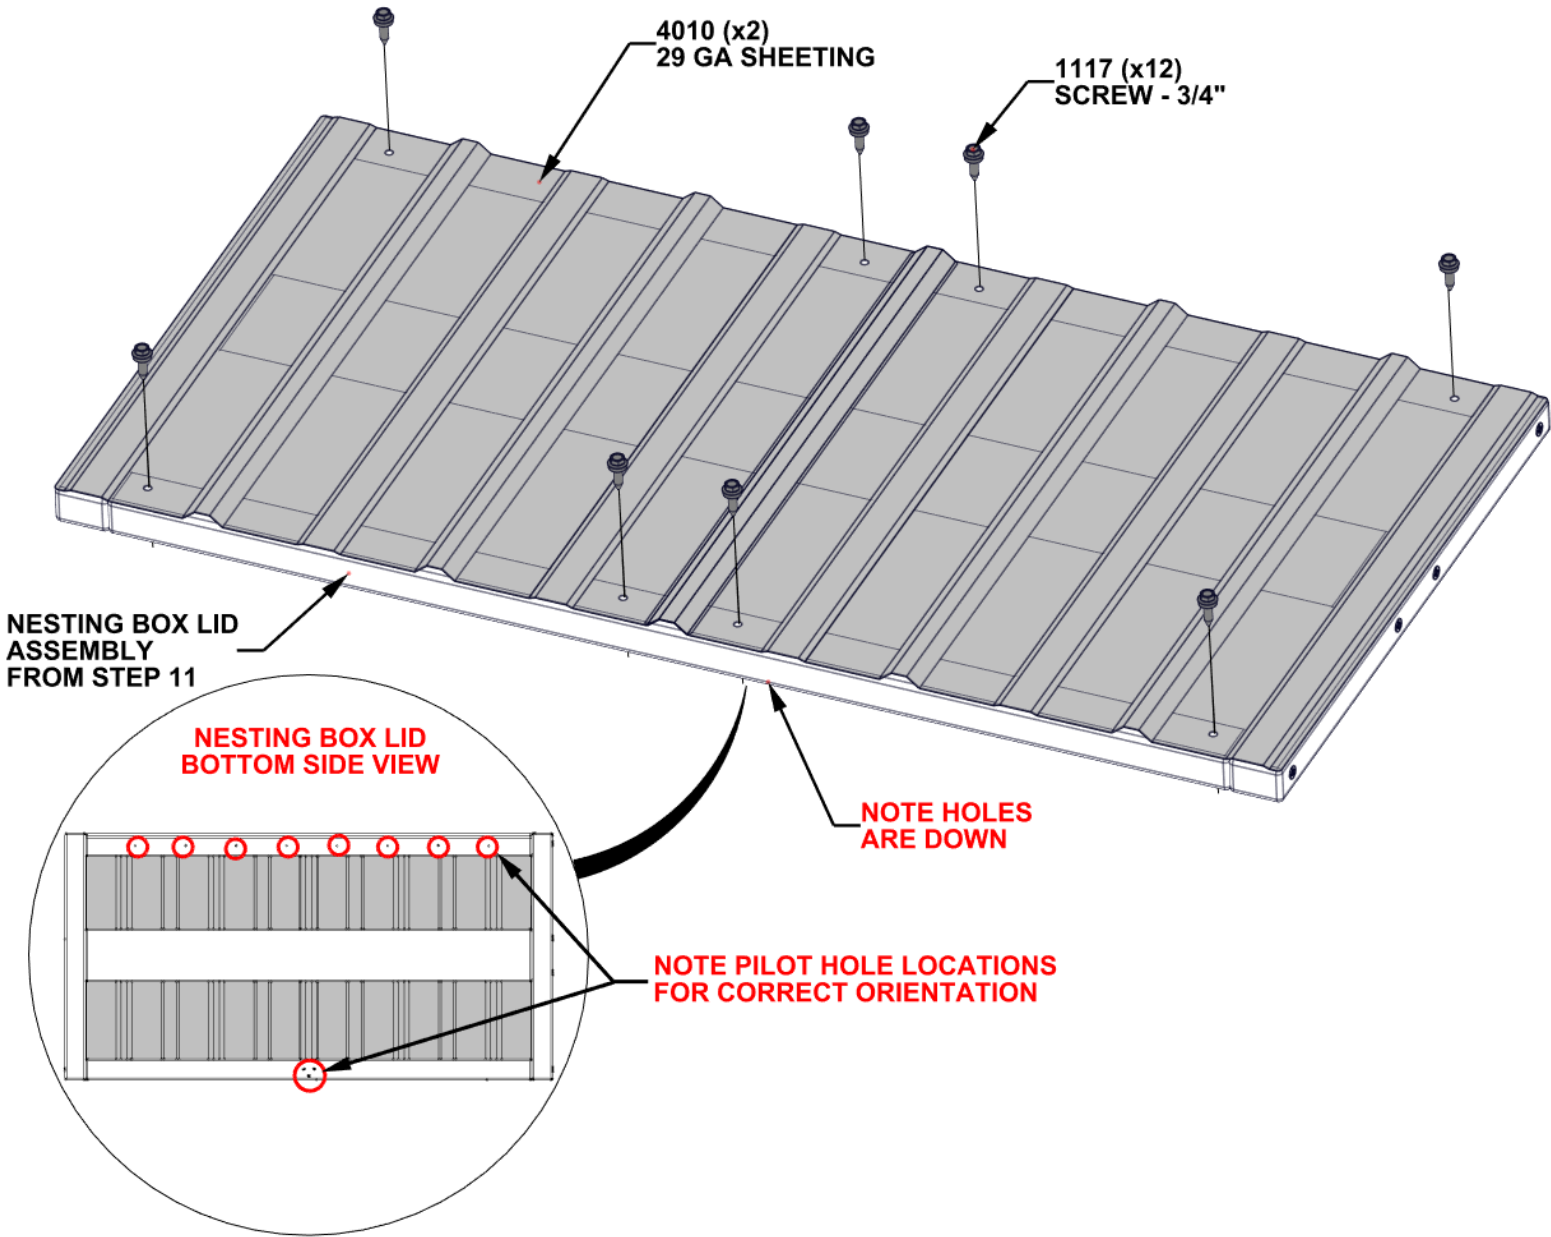


STEP 53 - NESTING BOX LID

QTY	PART NUMBER	DESCRIPTION
4	H101117	SCREW WOODGRIP 10-16x3/4" BLK

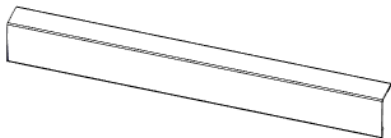


A4M04012 ROOF EDGE TRIM
(x2)

WARNING:
- GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.
- REMOVE BLUE FILM FROM EDGE TRIM.
- DUE TO MULTIPLE LAYERS OF METAL ON THE EDGE TRIM, IT IS RECOMMENDED THAT A 1/8" [3mm] DRILL BIT IS USED TO CREATE STARTER HOLES.

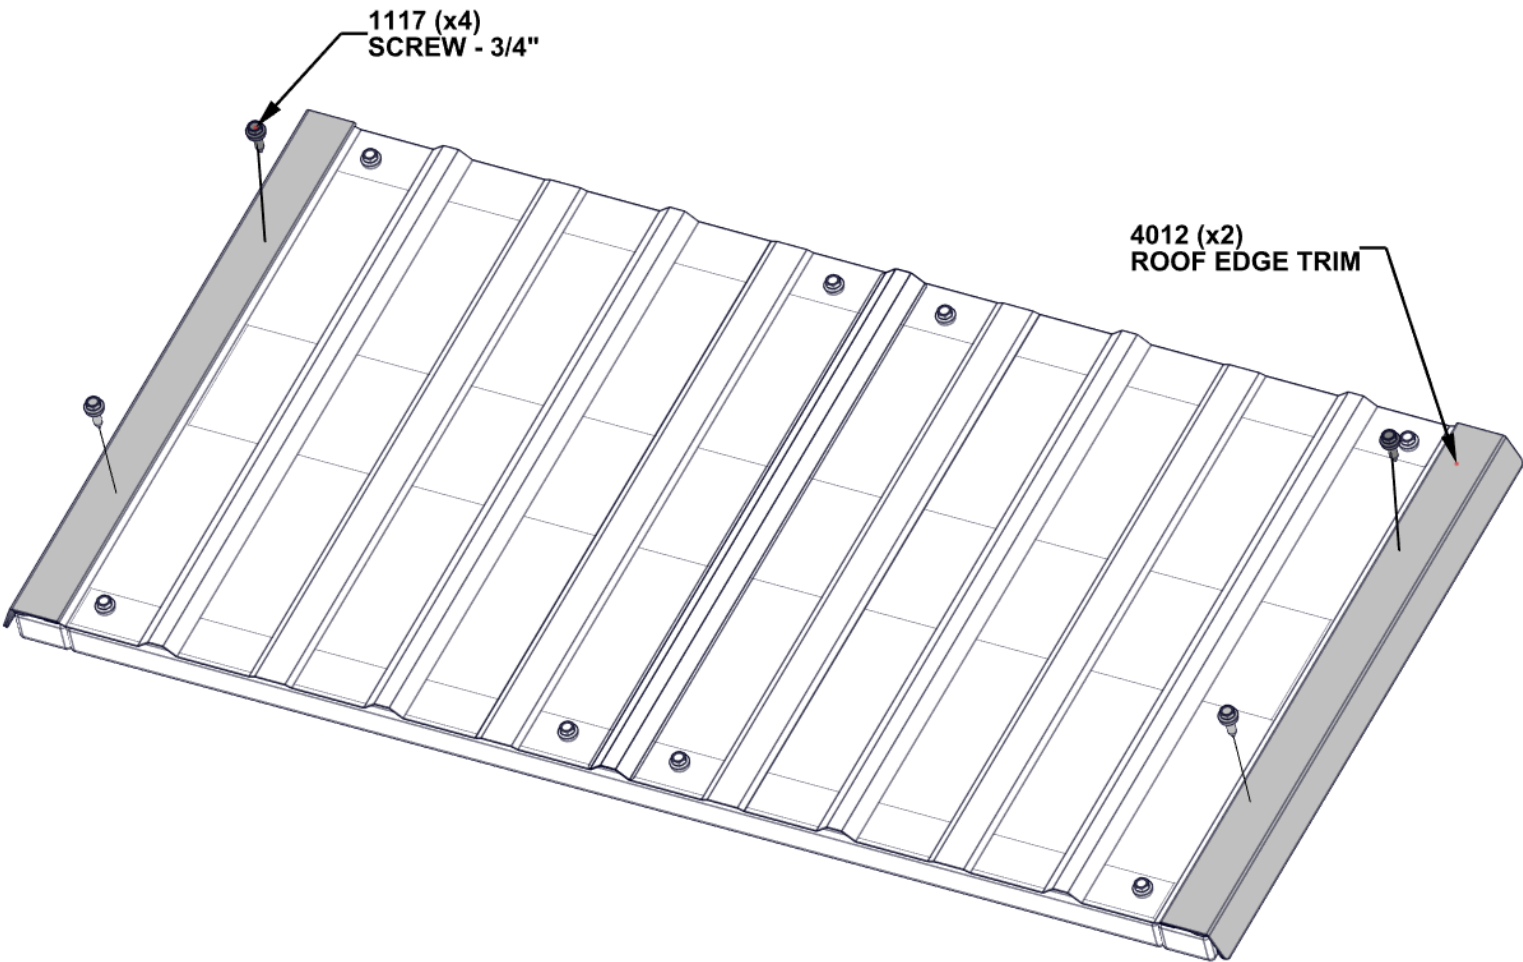


STEP 54 - NESTING BOX LID

QTY	PART NUMBER	DESCRIPTION
8	H100627	SCREW PFH 6x3/4 BLK

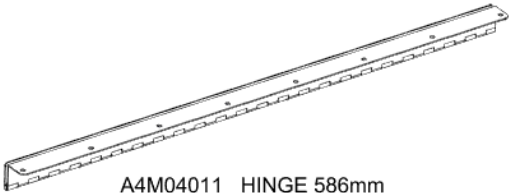


A4M04011 HINGE 586mm
(x1)

- WARNING:**
- GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF SHEETS.
 - FLIP NESTING BOX LID OVER FOR FASTENING HINGE.
 - ALIGN PILOT HOLES.
 - DO NOT OVERTIGHTEN SCREWS.

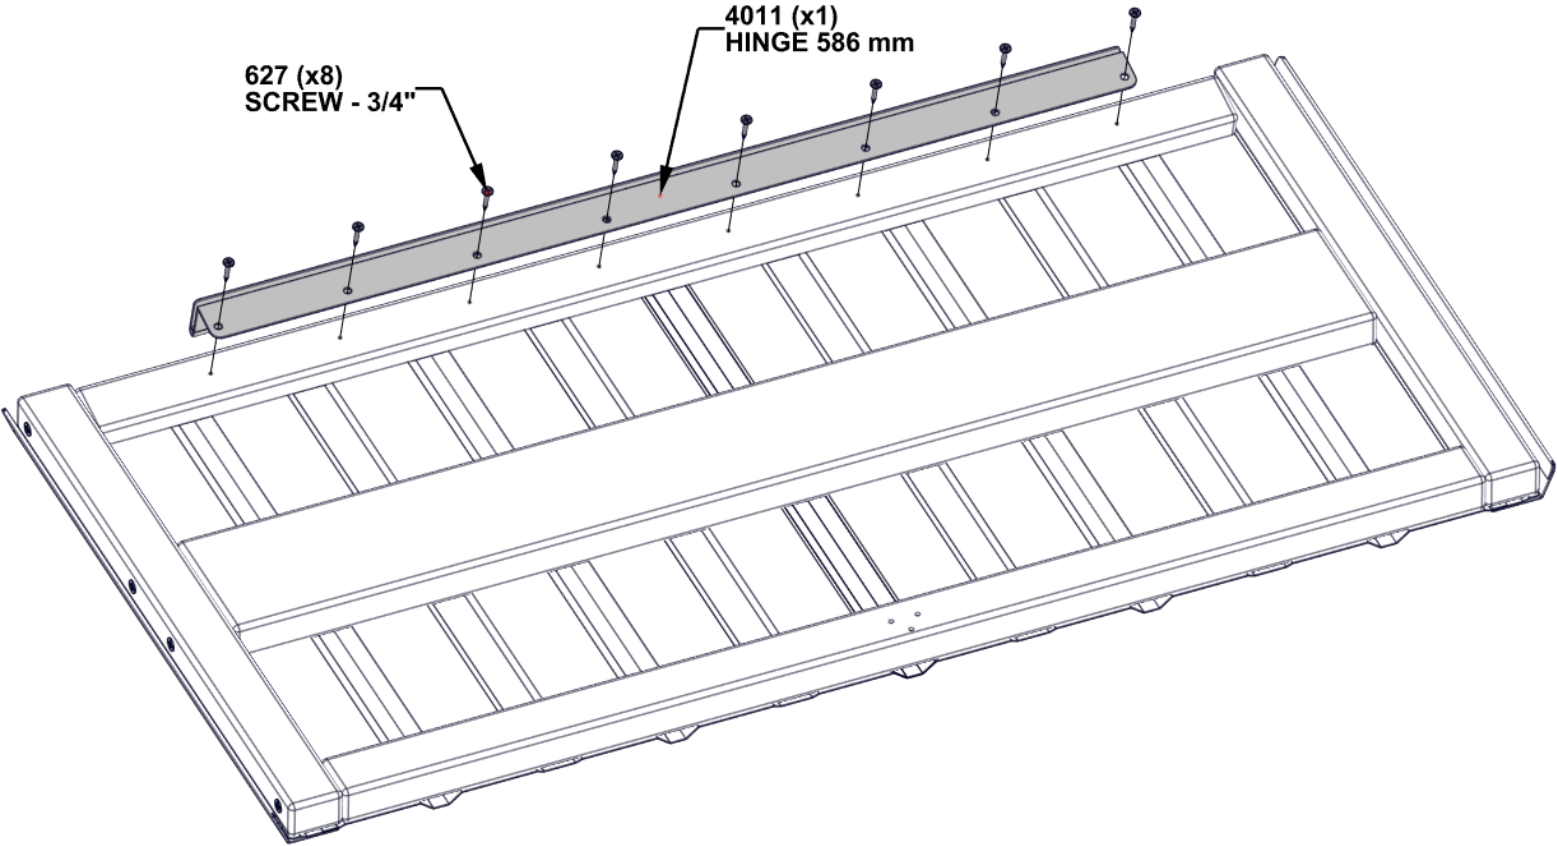


STEP 55 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H100627	SCREW PFH 6x3/4 BLK

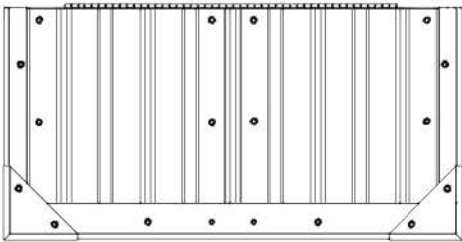

NESTING BOX LID WITH HINGE ASSEMBLY
FROM STEP 54


- EXTRA PEOPLE ARE HELPFUL FOR THIS STEP.
- ALIGN PILOT HOLES.
- DO NOT OVERTIGHTEN SCREWS.

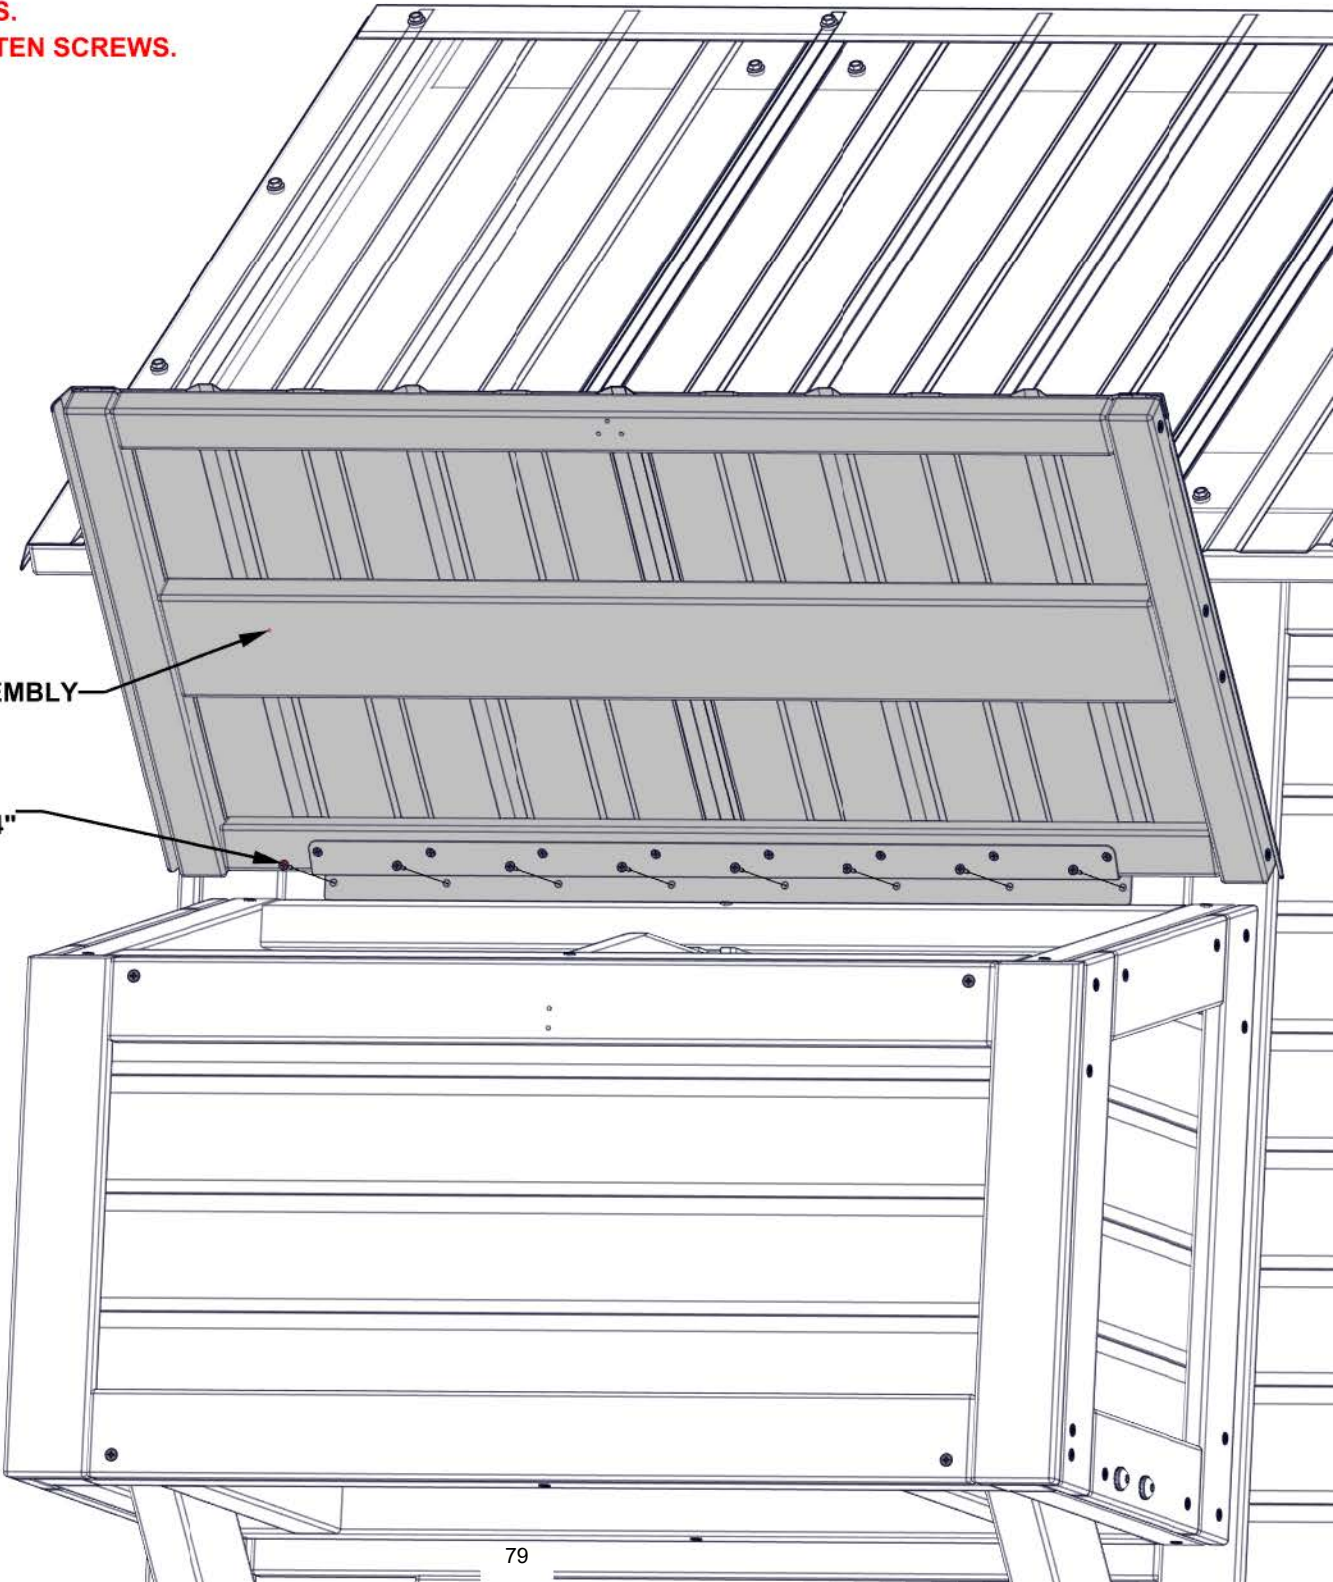

NESTING BOX LID
WITH HINGE ASSEMBLY
FROM STEP 54


627 (x8)
SCREW - 3/4"

STEP 56A - CHICKEN COOP ASSEMBLY

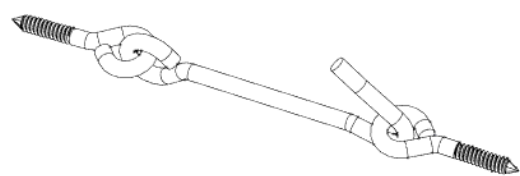


A4M03459 SWING HOOK LATCH
(x1)

- PREDRILL 3/32" [2mm] PILOT HOLES FOR THE ATTACHMENT OF SWING HOOK LATCH.
- ATTACH HOOK & SAVE EYELET SCREW FOR NEXT STEP.

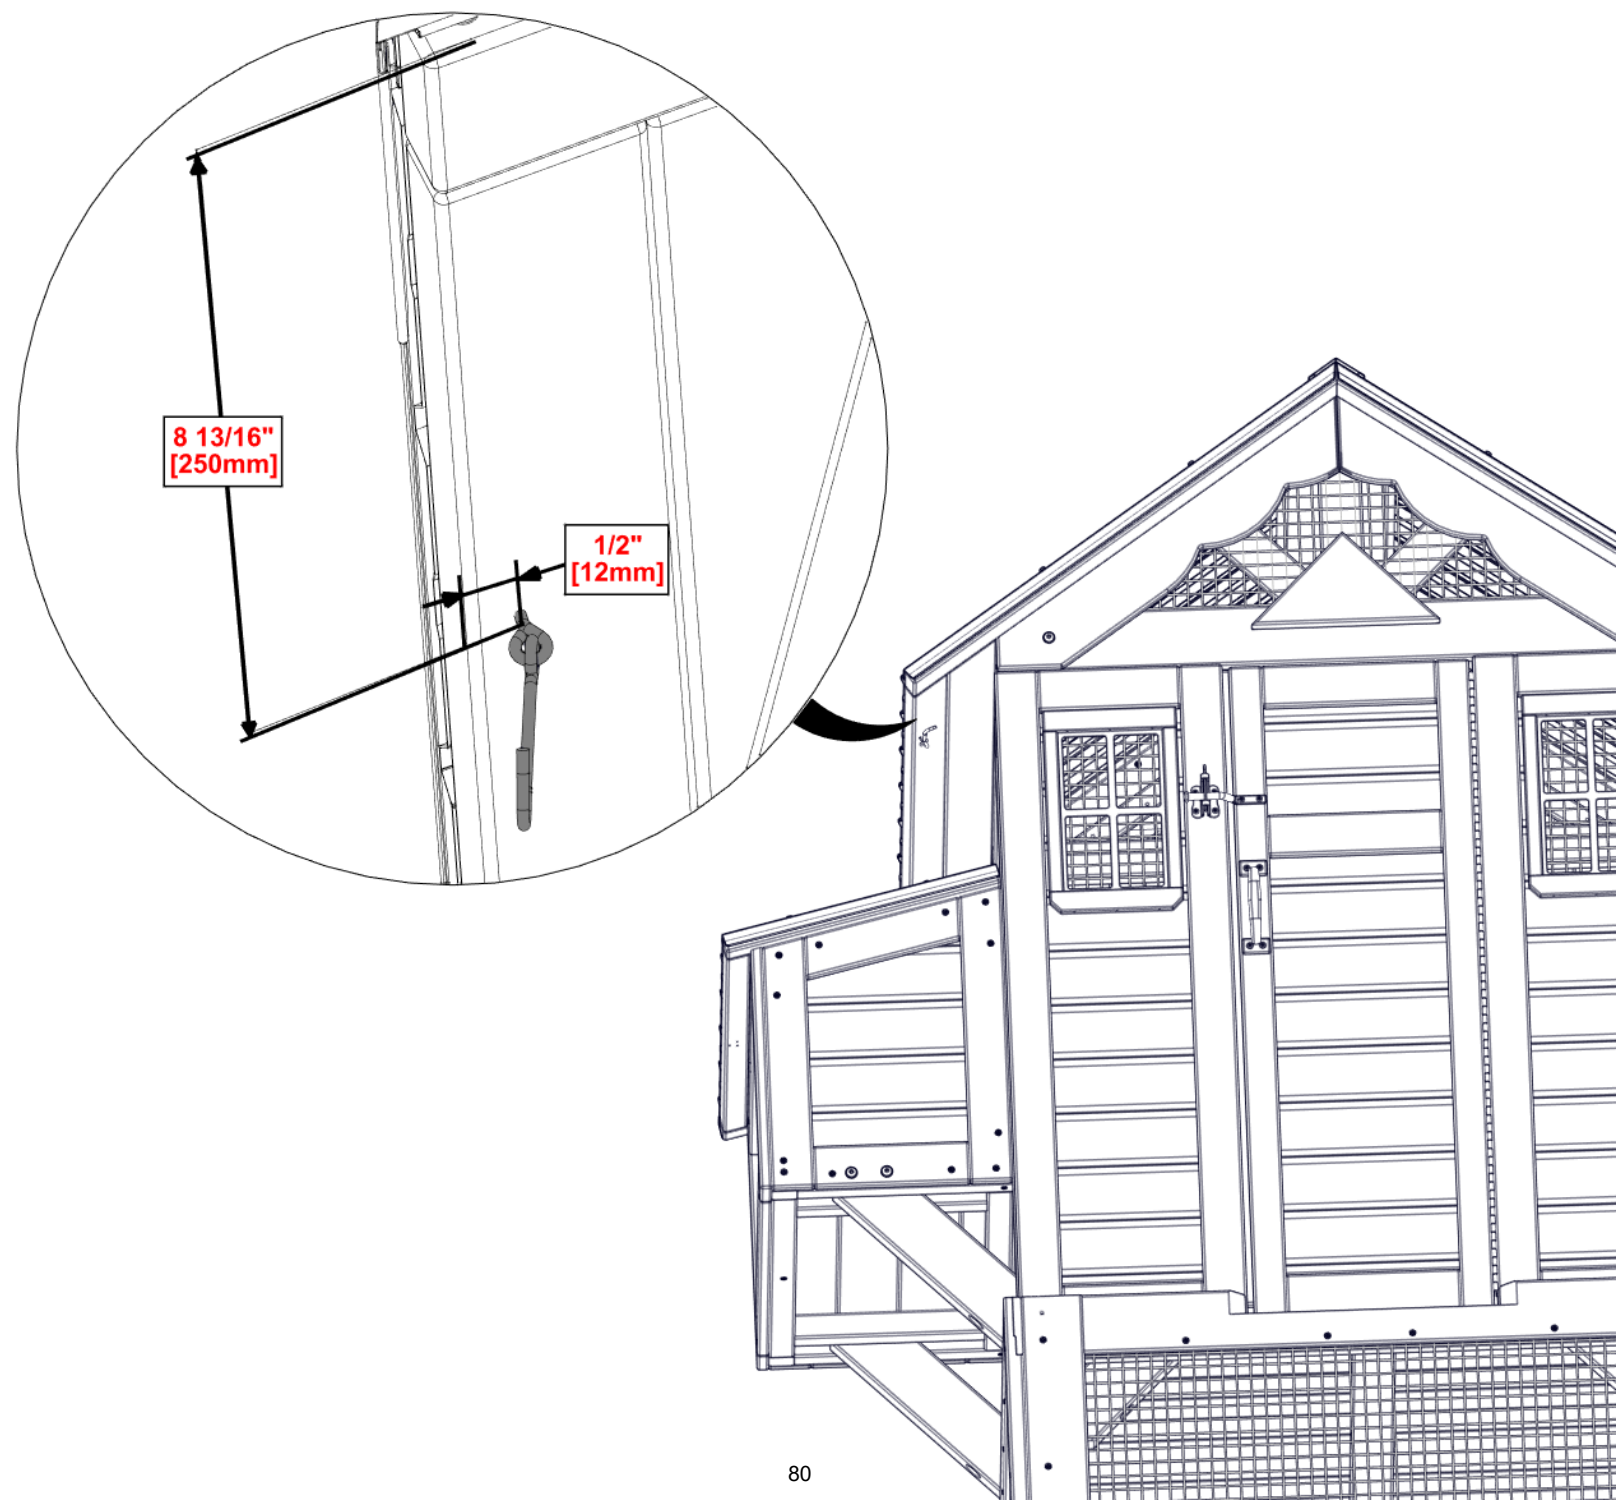


STEP 56B - CHICKEN COOP ASSEMBLY

- **USE EYELET SCREW FROM STEP 56A.**
- **LIFT THE LID AND MARK THE LOCATION OWHERE THE EYELET SCREW WILL GO. YOU WILL HAVE TO ANGLE THE EYELET SCREW UNDER THE NESTING BOX LID TRIM SHOWN BELOW**
- **PREDRILL 3/32" [2mm] PILOT HOLES FOR ATTACHMENT OF SWING HOOK LATCH**

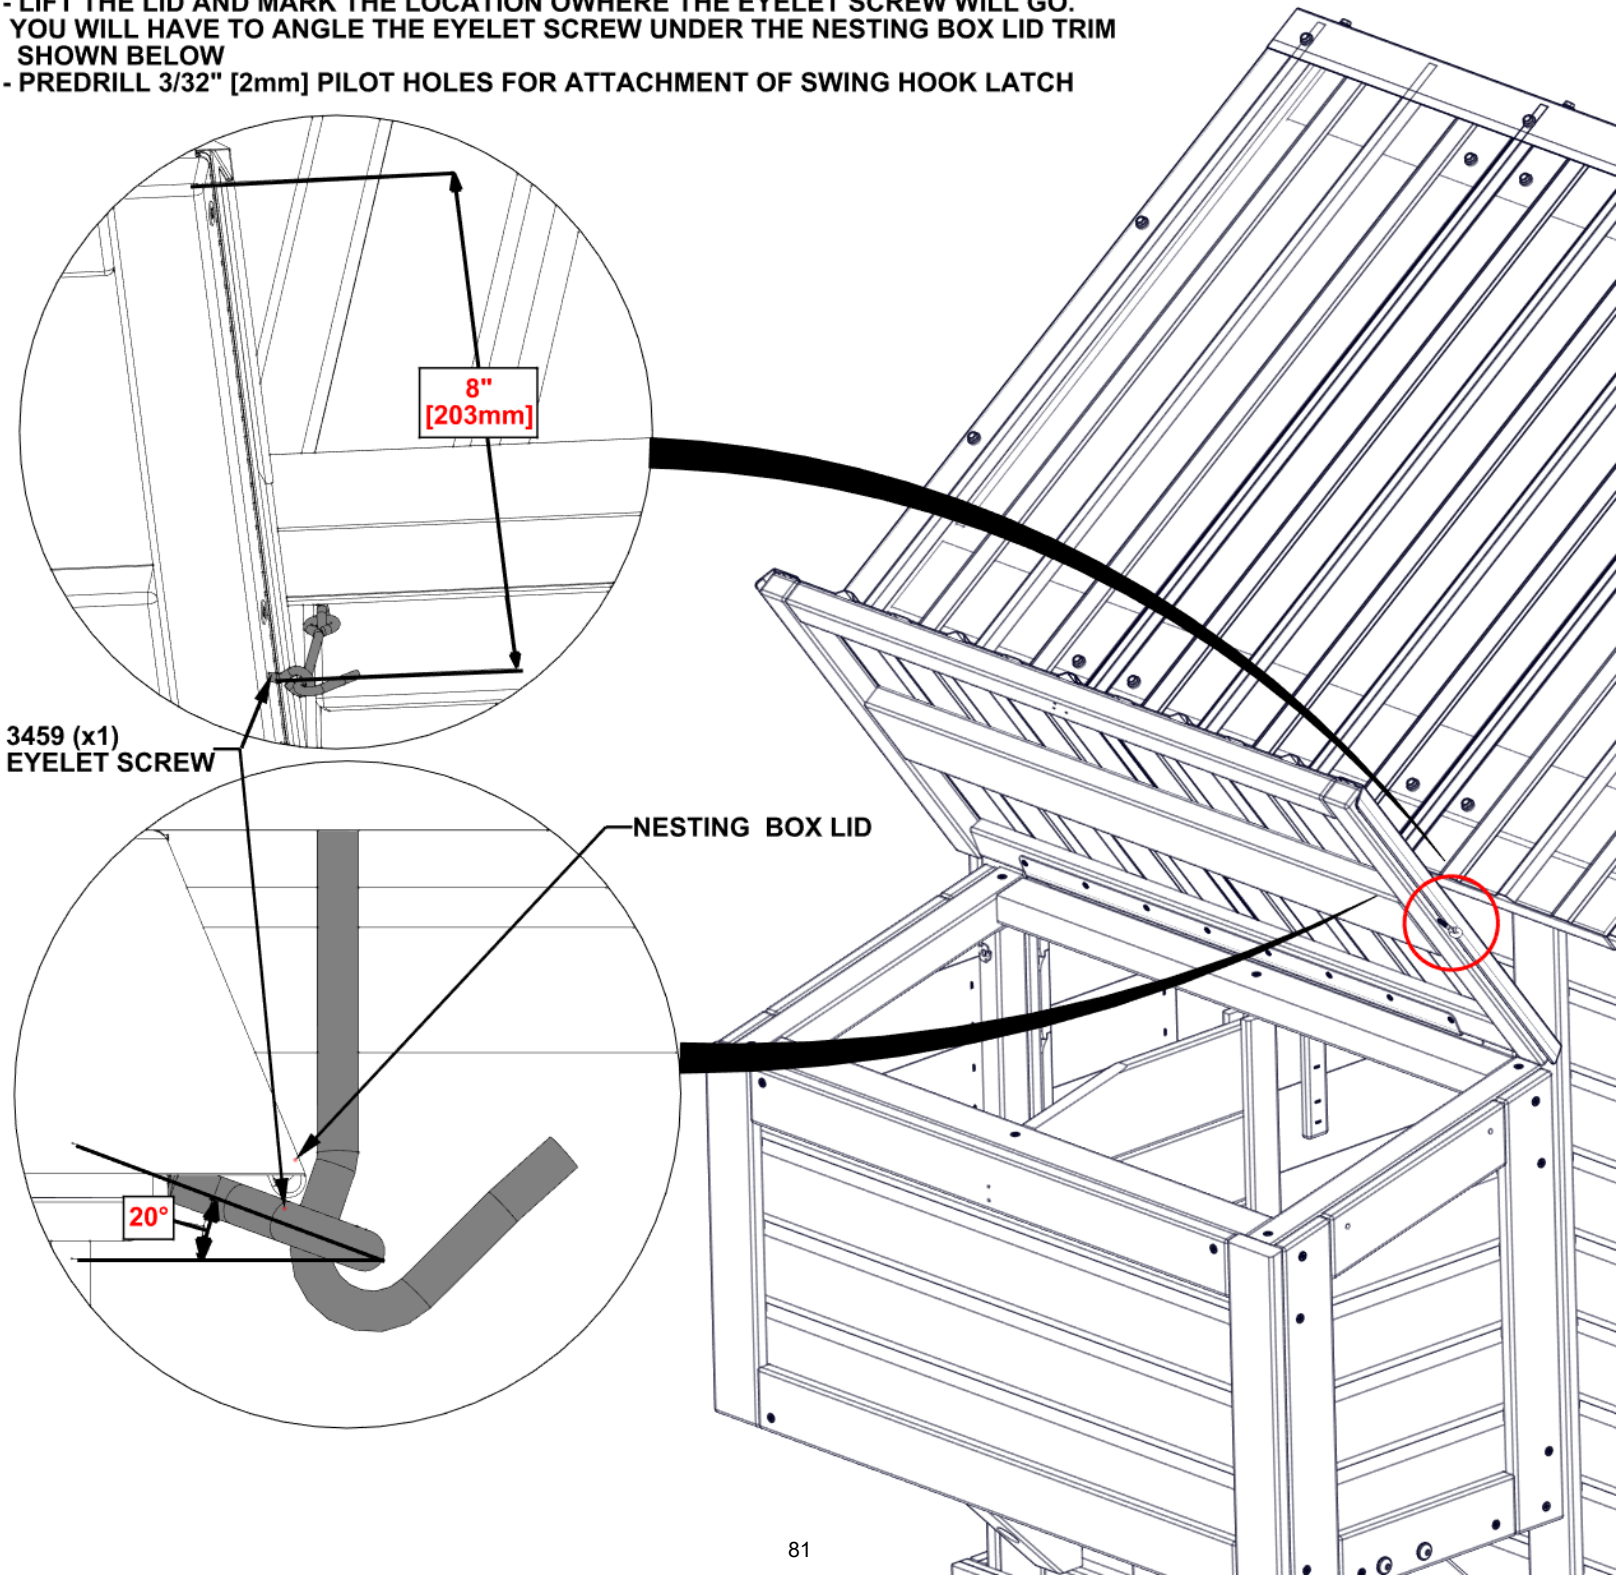


STEP 57 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
5	H100411	SCREW PFH 8x5/8 BLK



A4M02627 SCREW ON HASP LOCK
(x1)


- ALIGN PILOT HOLES.
- USING AN 1/8" [3mm] DRILL BIT, USE HASP LOCK ASSEMBLY AS A GUIDE TO DRILL PILOT HOLES.

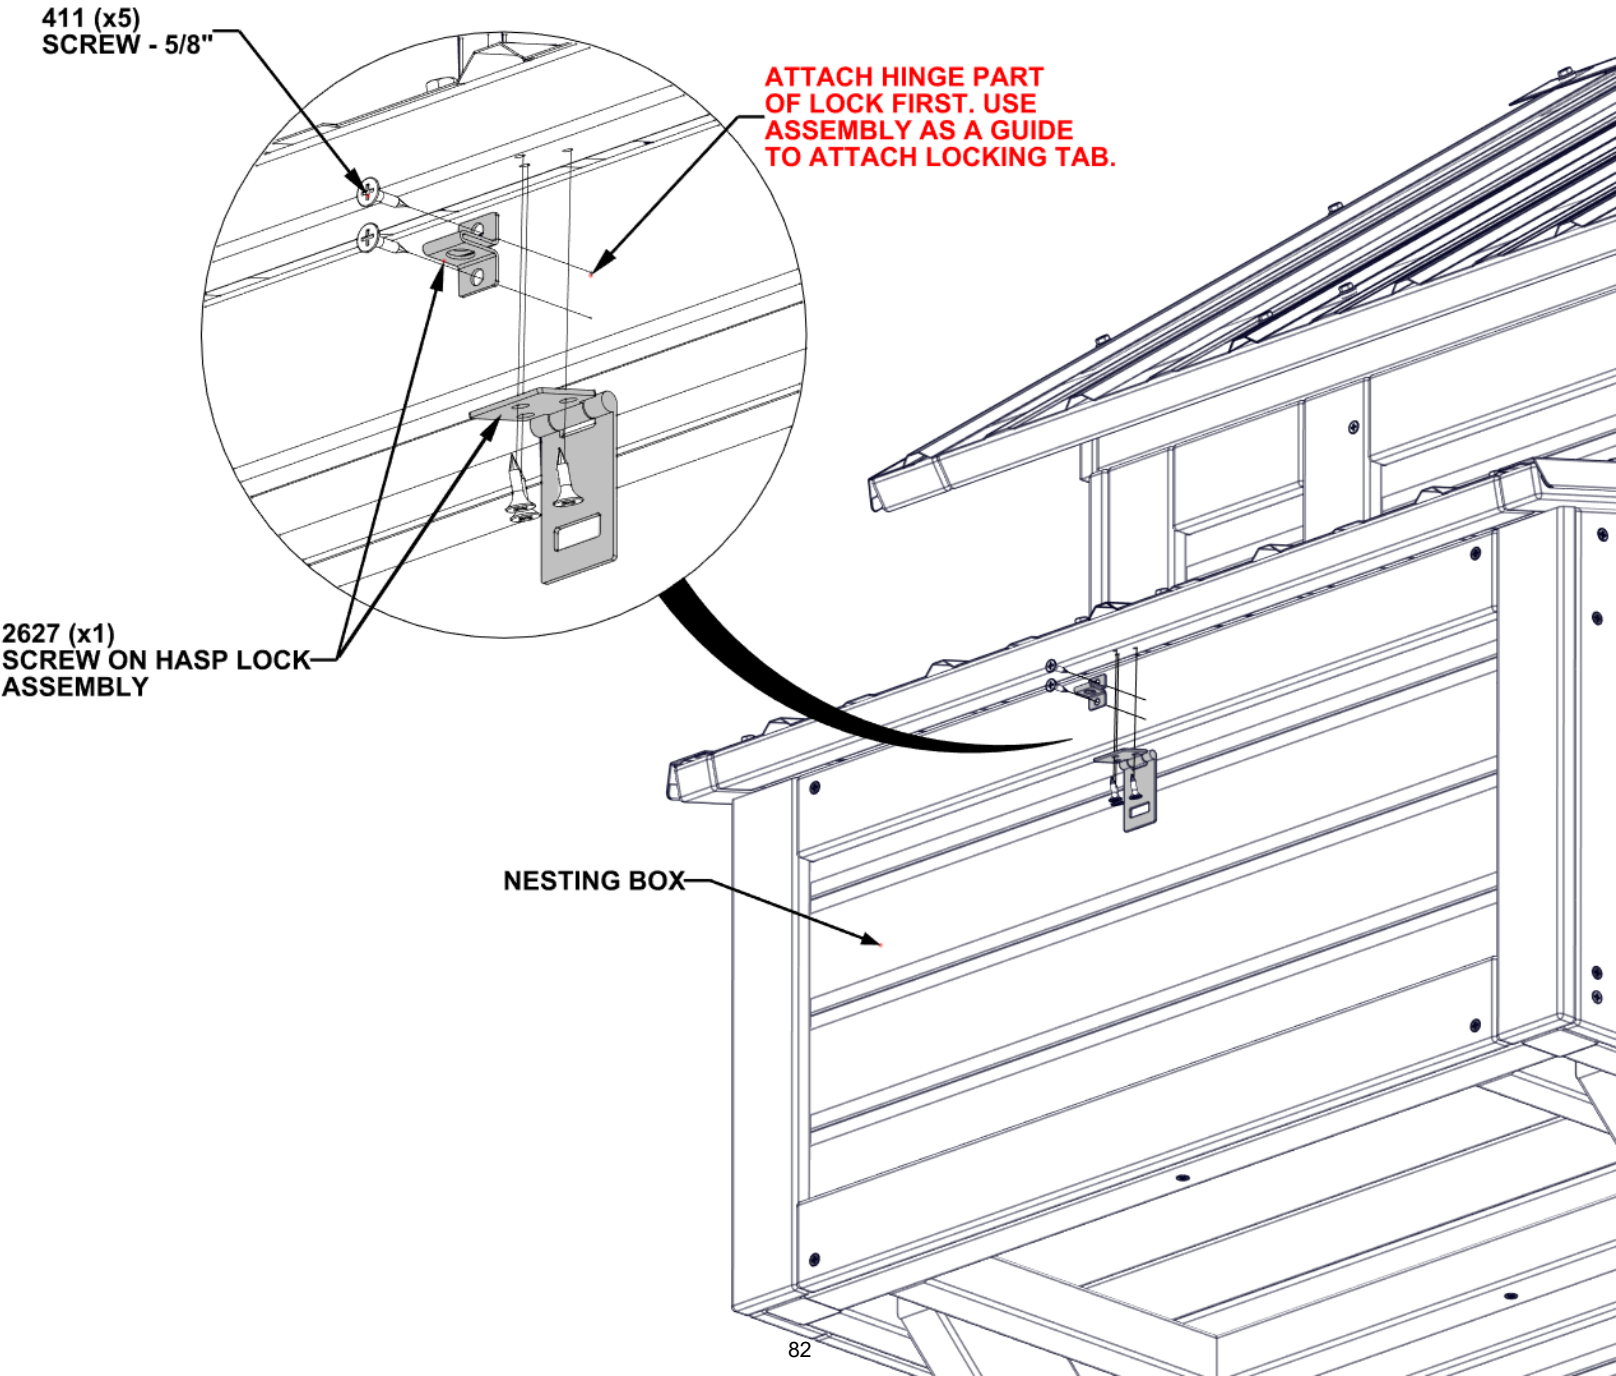


SET CHICKEN COOP ASSEMBLY TO THE SIDE

STEP 58A - CHICKEN RAMP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100395	SCREW PFH 8x3/4 BLK

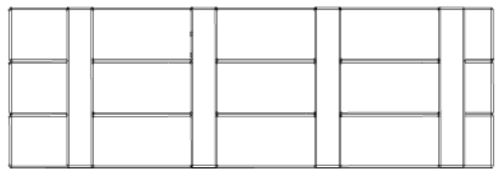

CR01 CHICKEN RAMP - W2A04425
(x1) 1 9/16"x10 3/16"x30 3/4" (40x258x781)

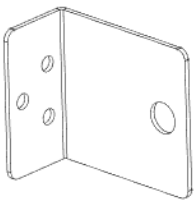


A4M04722 CHICKEN RAMP L BRACKET
(x2)

- ALIGN PILOT HOLES.
- FLIP CHICKEN RAMP OVER FOR FASTENING.


4722 (x2)
CHICKEN RAMP L BRACKET

395 (x6)
SCREW - 3/4"

CR01 (x1)
CHICKEN RAMP

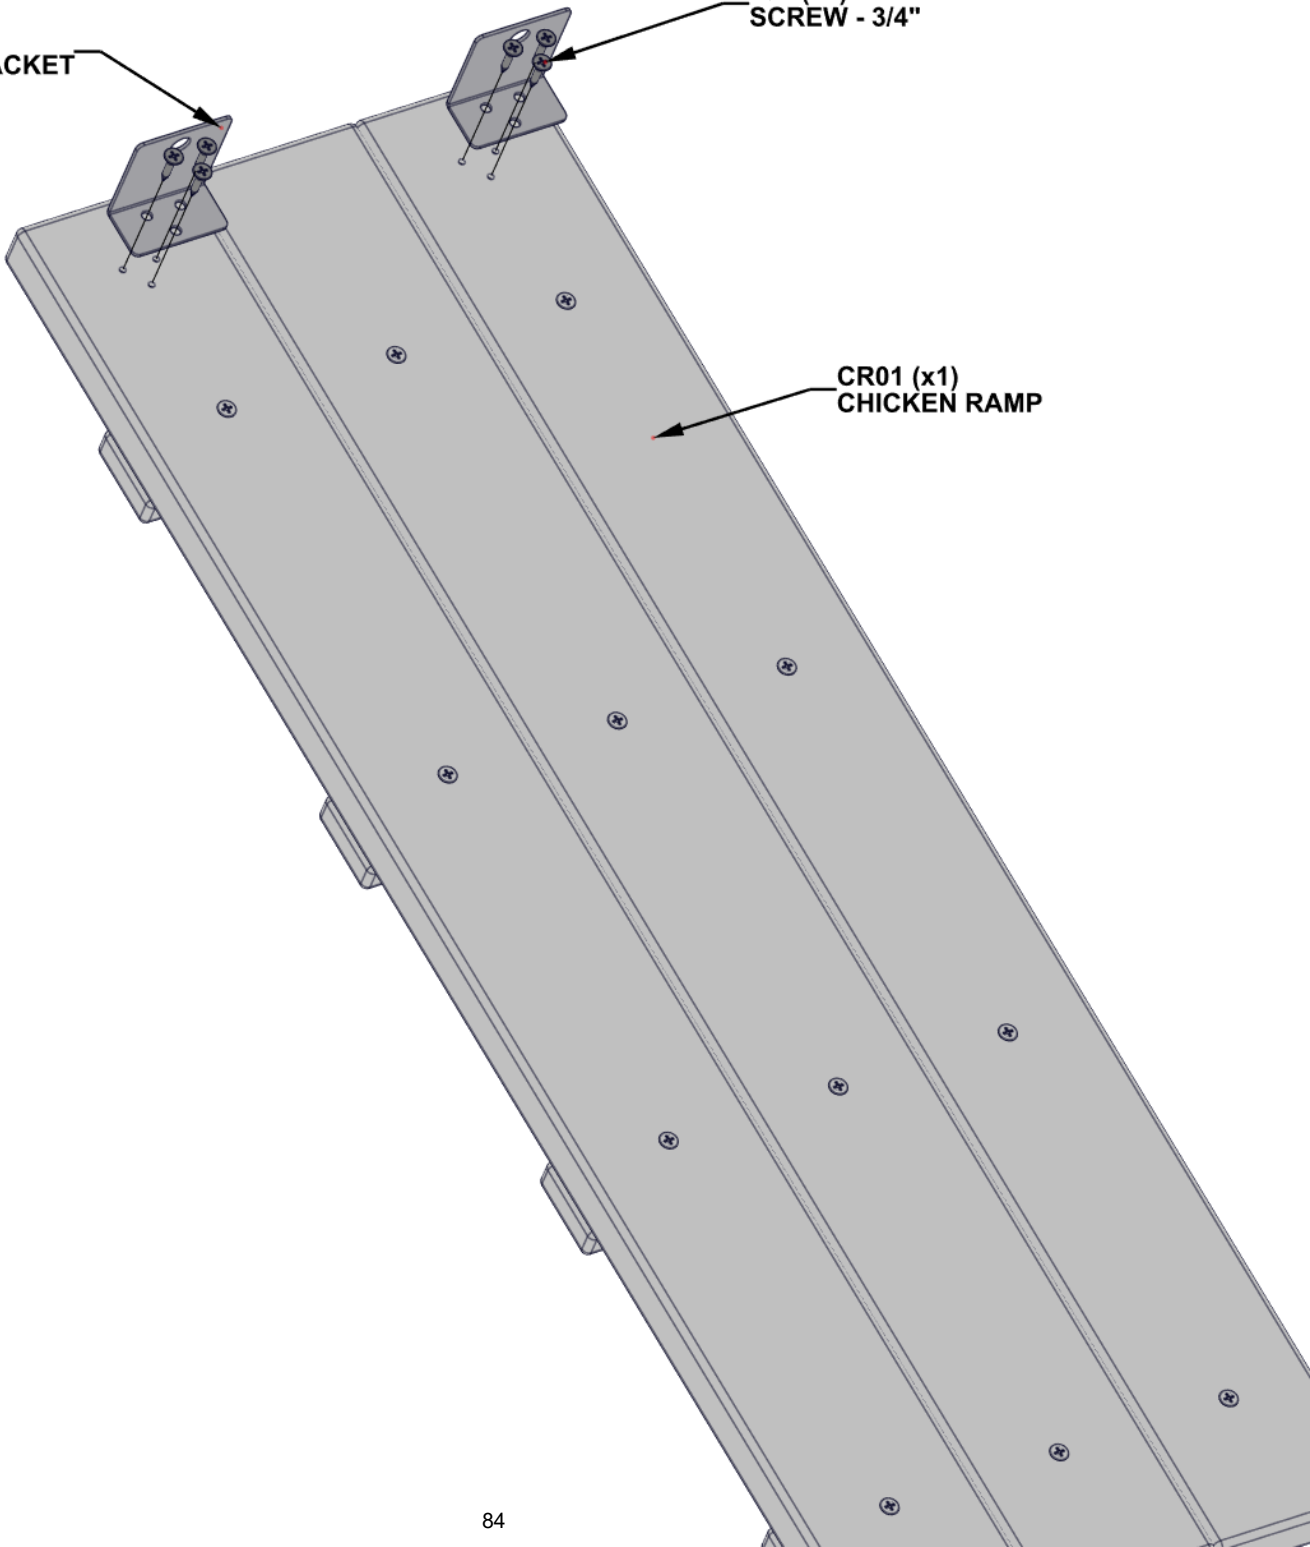


STEP 58B - CHICKEN COOP ASSEMBLY

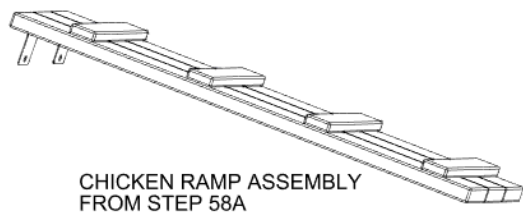


CHICKEN RAMP ASSEMBLY
FROM STEP 58A

- HOOK CHICKEN RAMP ASSEMBLY ONTO COOP BY SLIDING "CHICKEN RAMP L BRACKET" ONTO "CHICKEN RAMP BRACKET" INTO PLACE.

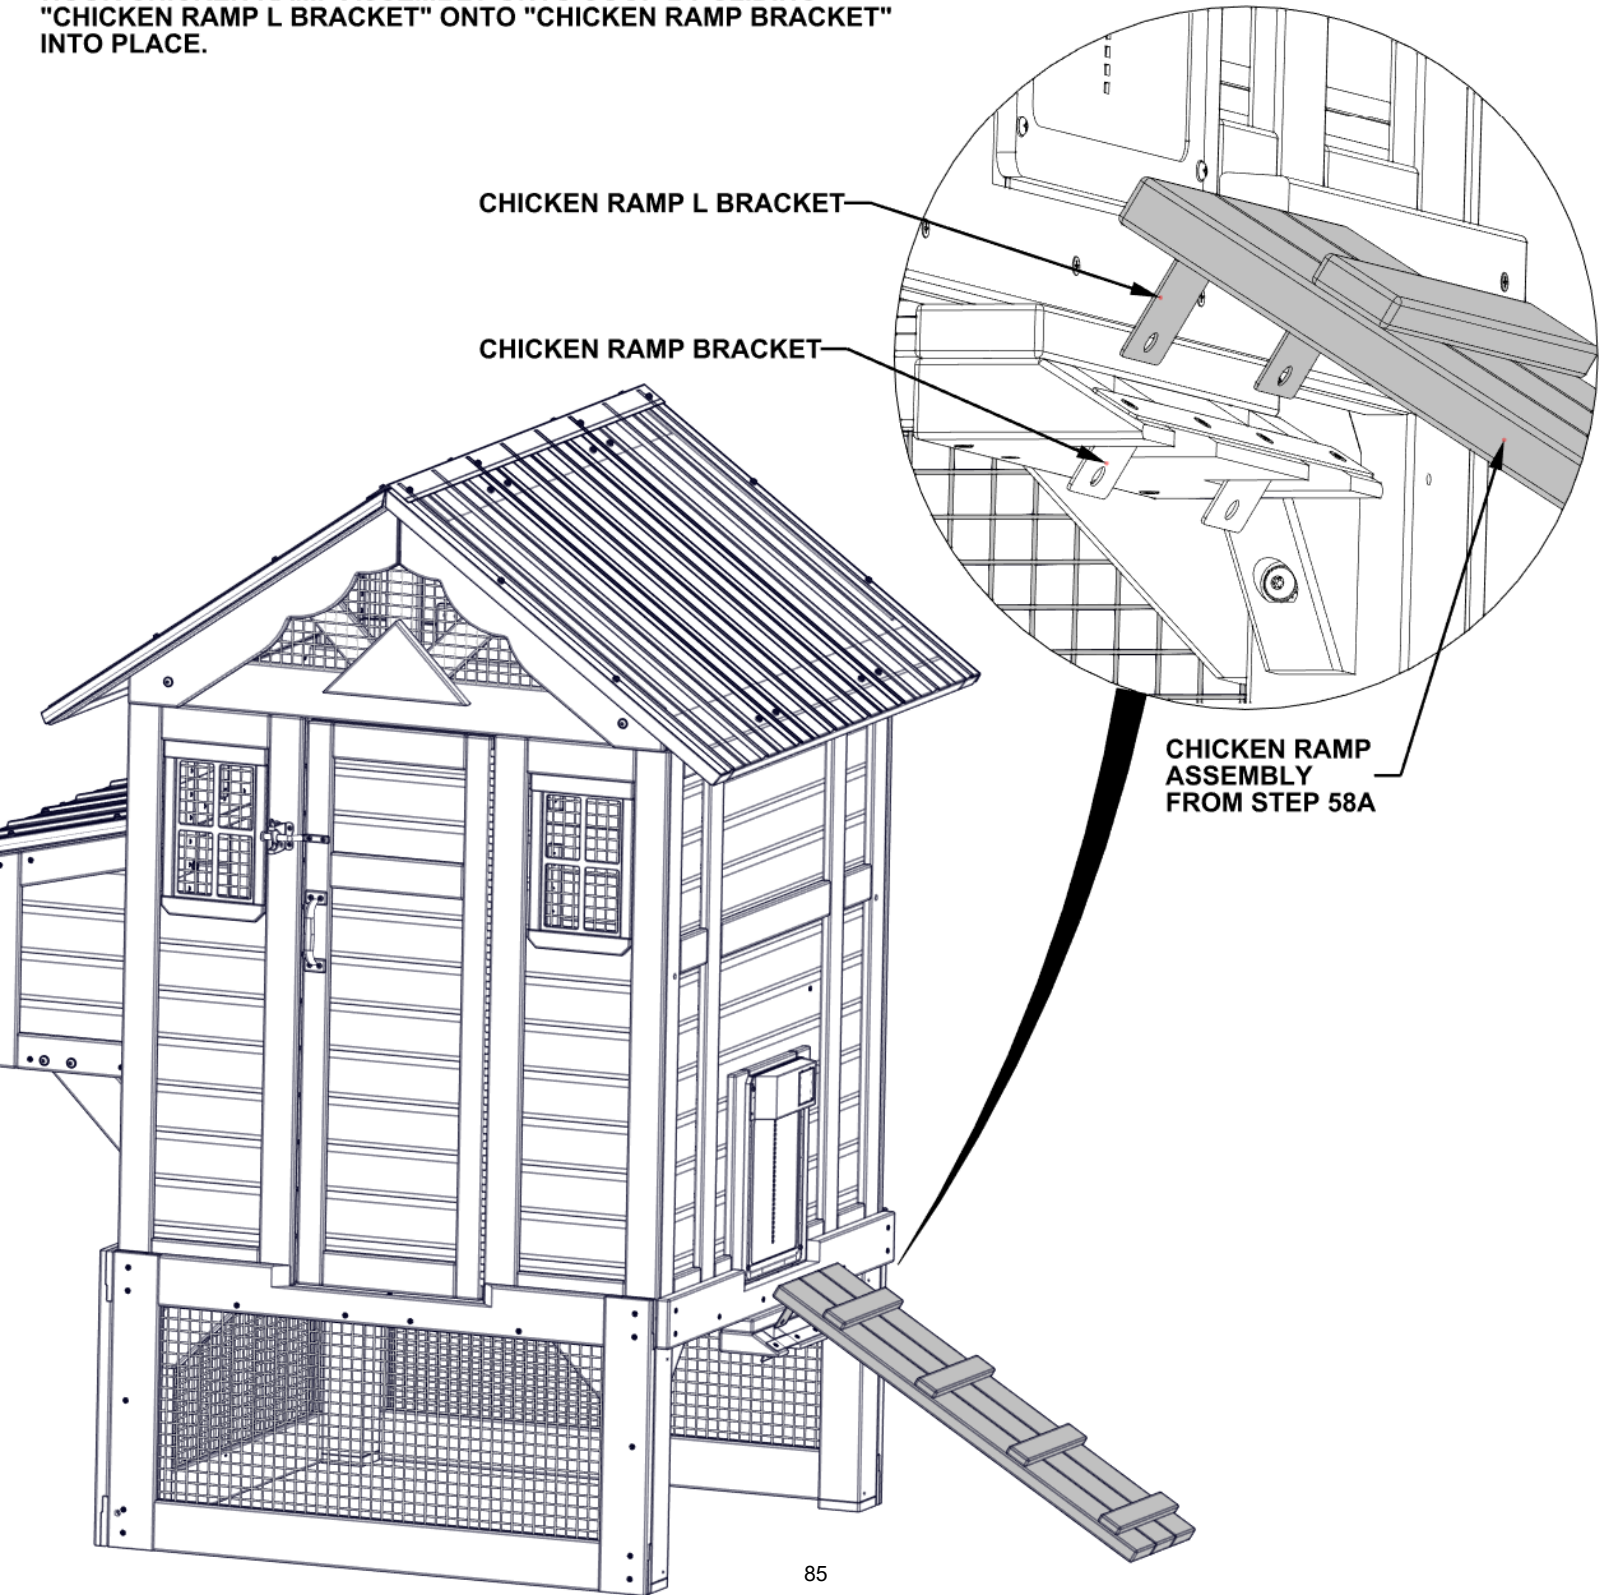


**NOW REMOVE THE CHICKEN
RAMP TO HAVE SPACE
FOR FURTHER ASSEMBLY**

STEP 59 - CHICKEN COOP ASSEMBLY

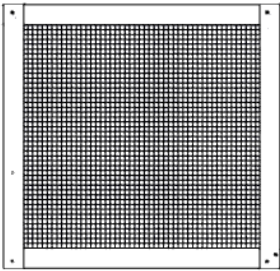

MP04 MESH PANEL - W2A04629
(x1) 15/16"x42 7/8"x45" (24.0x1089x1143)

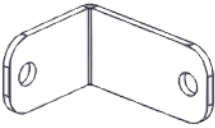


A4M04831 L BRACKET
(x3)


QTY	PART NUMBER	DESCRIPTION
4	H100404	NUT BARREL WH 1/4X5/8 BLK
3	H101111	BOLT WH 1/4x3/4 BLK
3	H100405	WASHER LOCK EXT 6x15
2	H100460	LAG SCREW WH 1/4x1 BLK
1	H100171	BOLT WH 1/4x1 BLK

- EXTRA PEOPLE ARE HELPFUL FOR THIS STEP.
- ALIGN PILOT HOLES.


INSIDE COOP

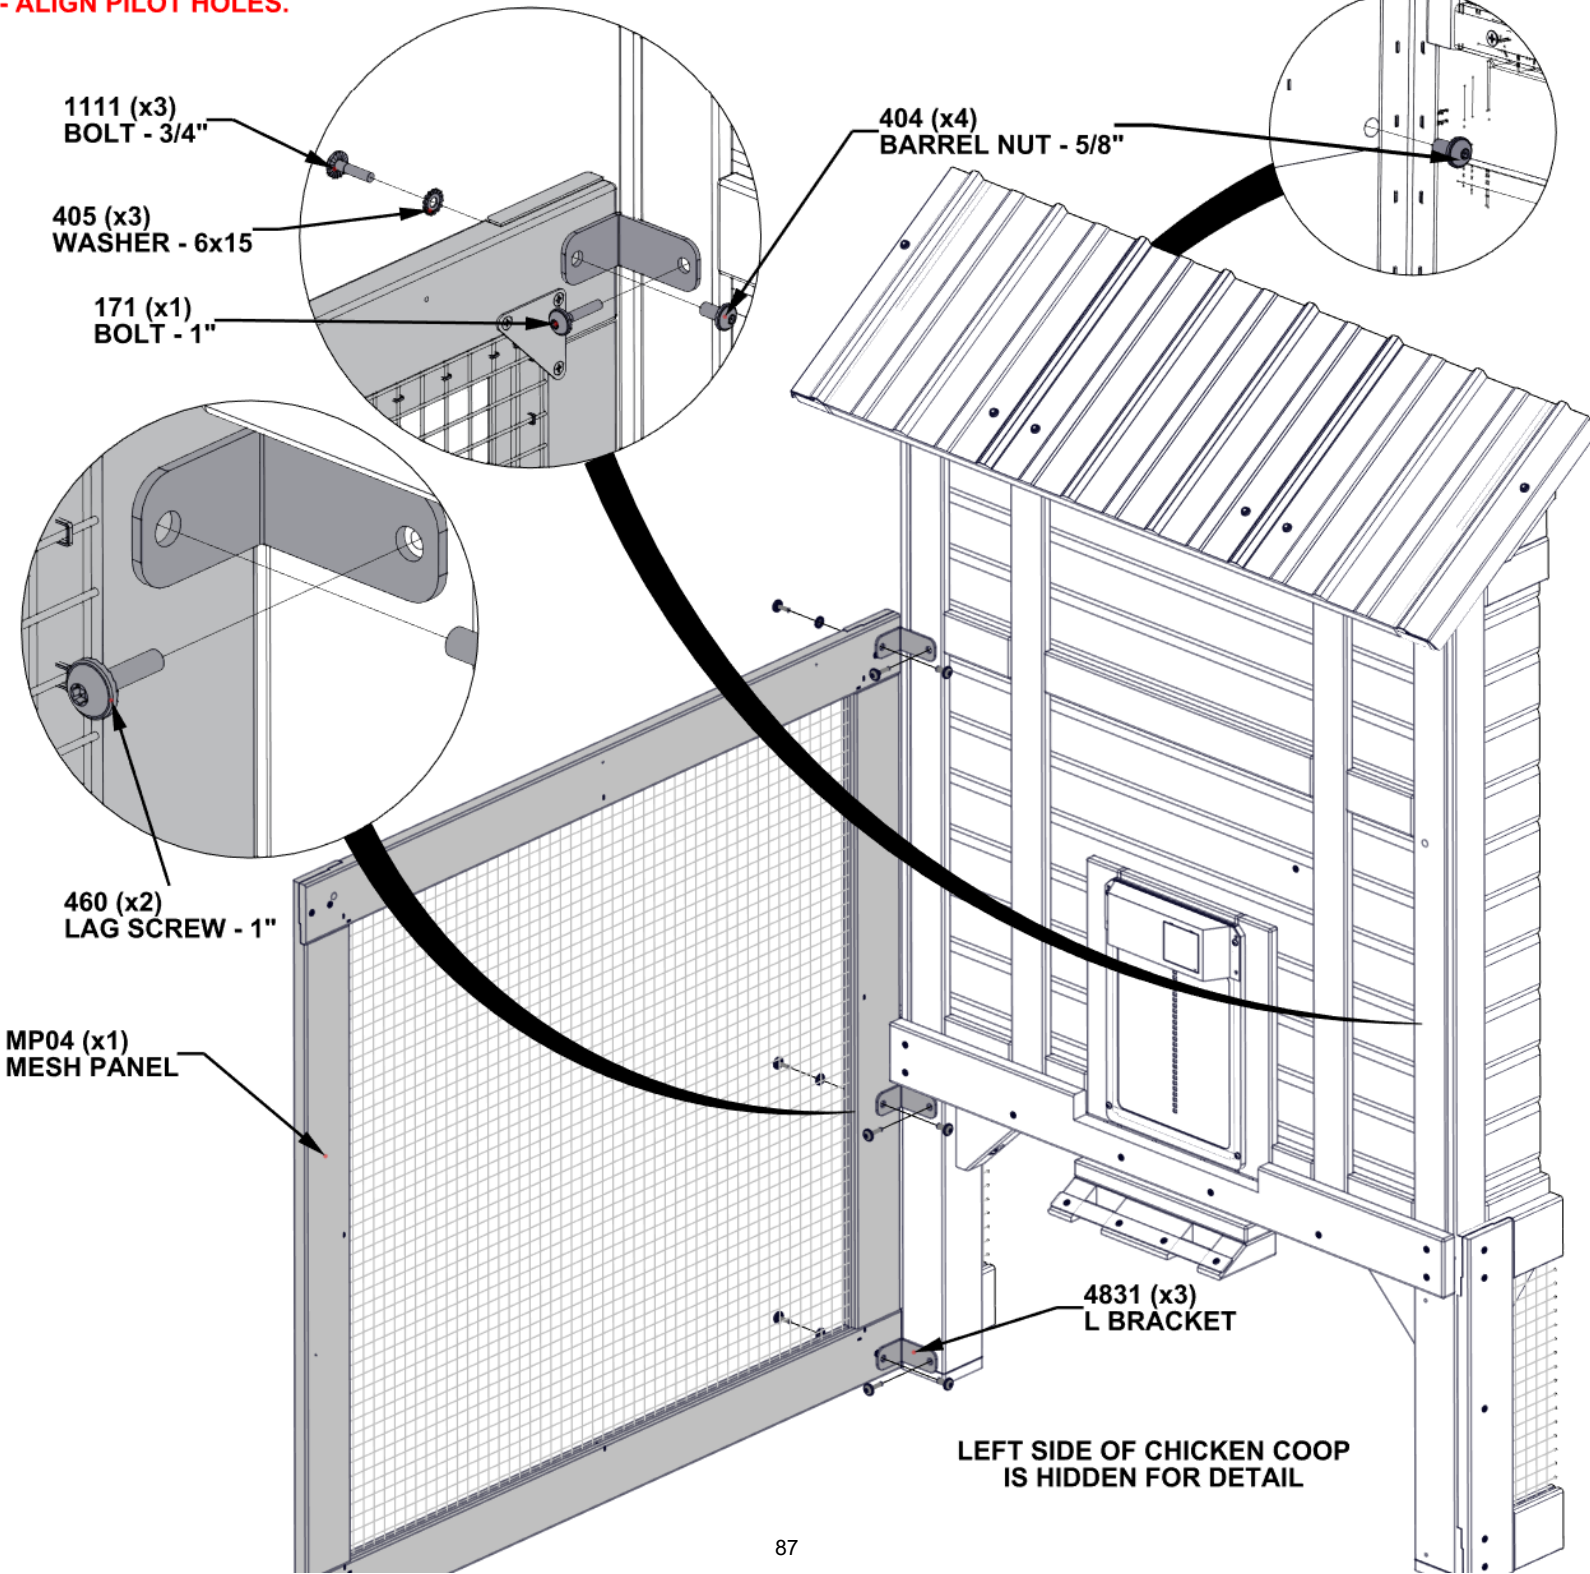

STEP 60 - CHICKEN COOP ASSEMBLY

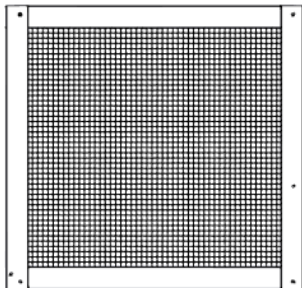


MP06 MESH PANEL - W2A04631
(x1) 15/16"x42 7/8"x45" (24.0x1089x1143)



A4M04831 L BRACKET
(x3)

QTY	PART NUMBER	DESCRIPTION
4	H100404	NUT BARREL WH 1/4X5/8 BLK
3	H101111	BOLT WH 1/4x3/4 BLK
3	H100405	WASHER LOCK EXT 6x15
2	H100460	LAG SCREW WH 1/4x1 BLK
1	H100171	BOLT WH 1/4x1 BLK


- EXTRA PEOPLE ARE HELPFUL FOR THIS STEP.
- **ALIGN PILOT HOLES.**
- A SECOND PERSON MAY HAVE TO CRAWL INTO COOP TO HELP WITH 404 BARREL NUT ON INSIDE OF COOP.

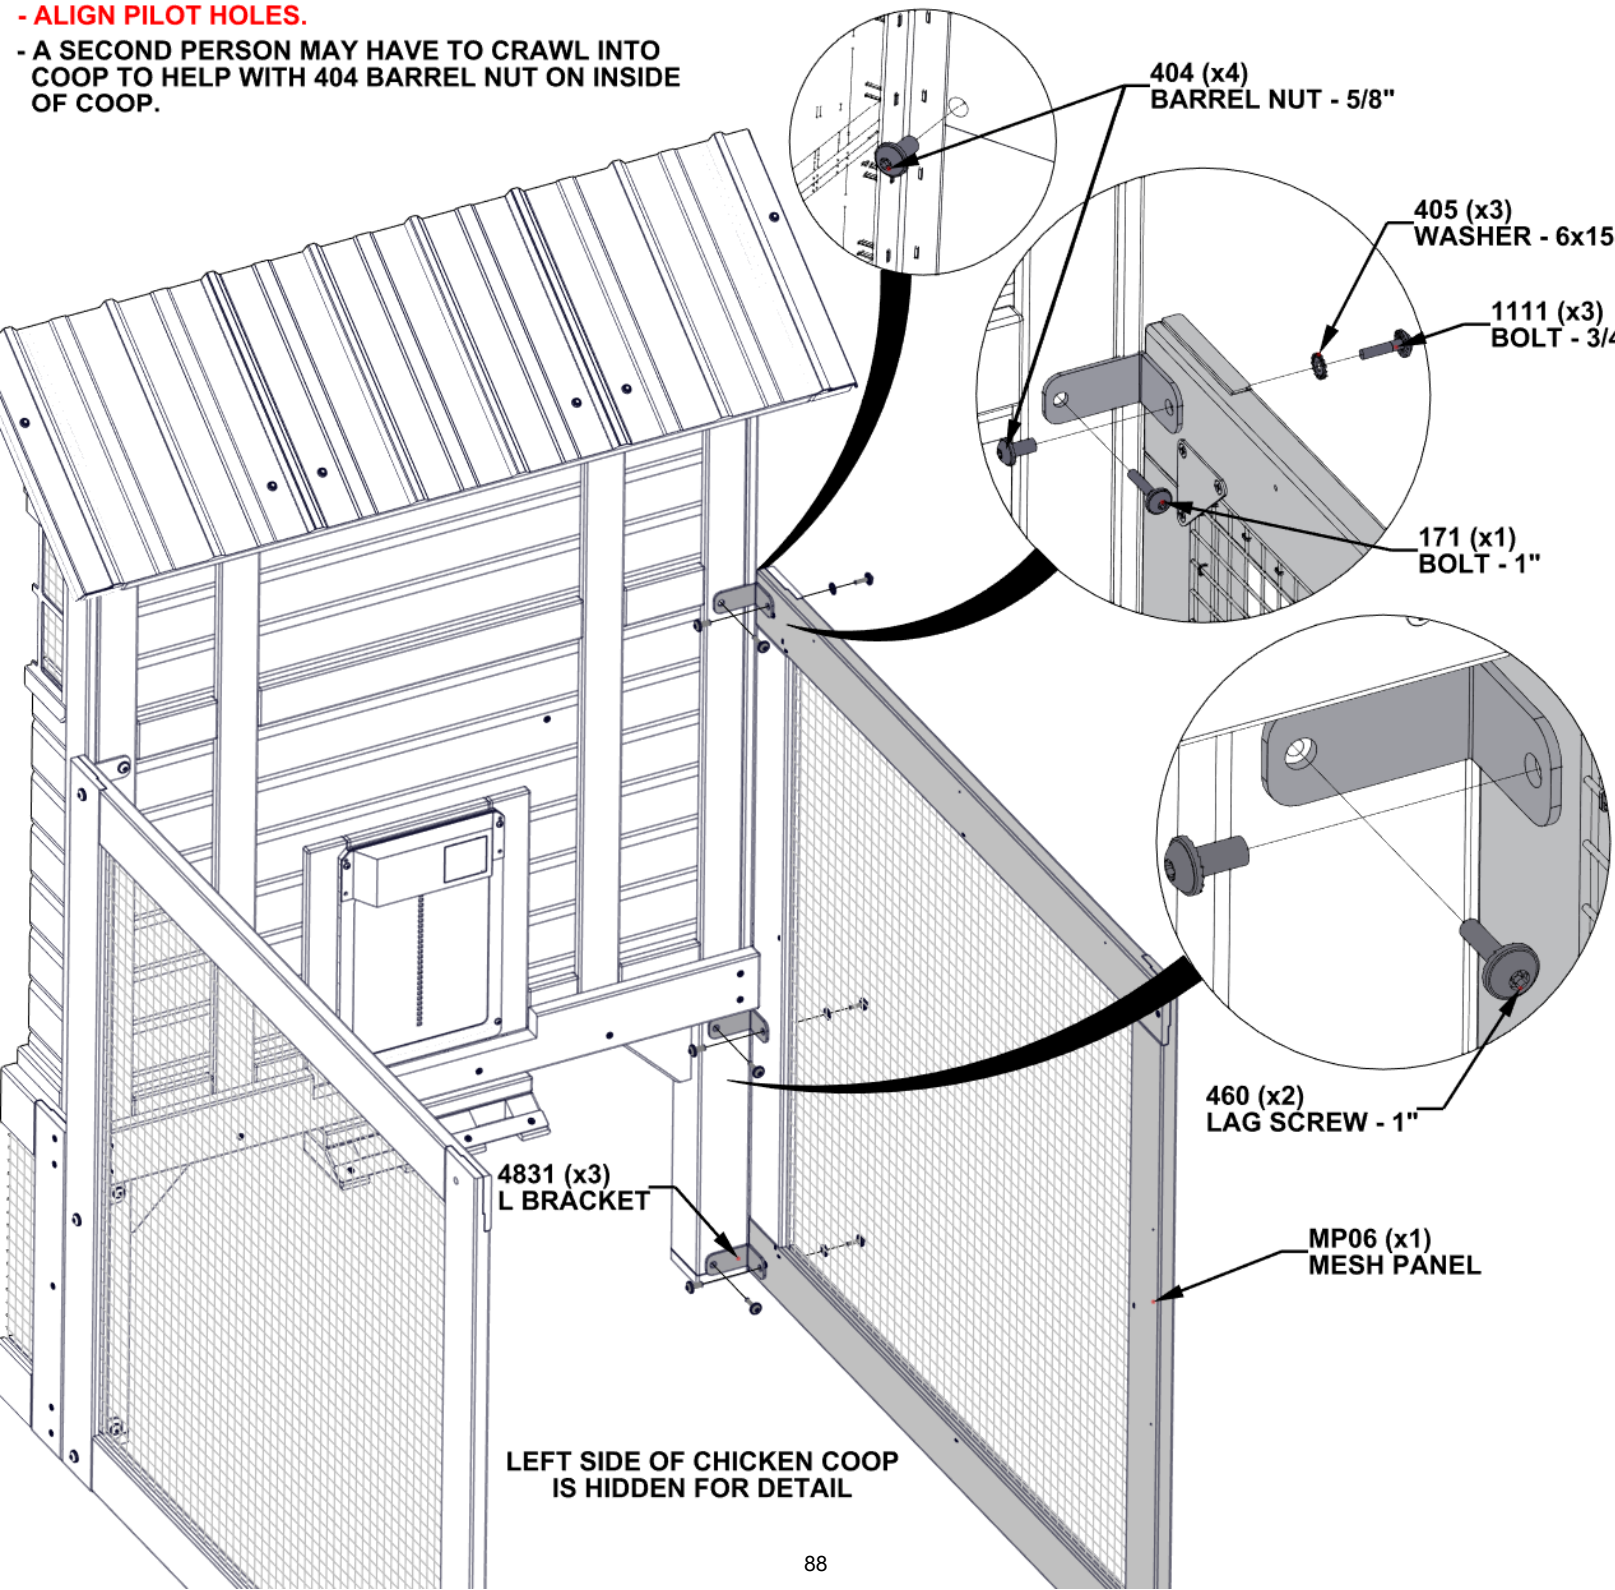

SET CHICKEN COOP ASSEMBLY TO THE SIDE

STEP 61 - CHICKEN RUN DOOR ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
8	H100816	SCREW PFH 8x7/8 BLK



H4 RUN FRAME BOARD - W4L21441
(x2) 15/16"x3 3/8"x40 15/16" (24x86x1040)




H5 RUN FRAME BOARD - W4L21443
(x1) 15/16"x3 3/8"x43 13/16" (24x86x1113)




H6 RUN FRAME BOARD - W4L21444
(x1) 15/16"x3 3/8"x43 13/16" (24x86x1113)


- ALIGN PILOT HOLES.

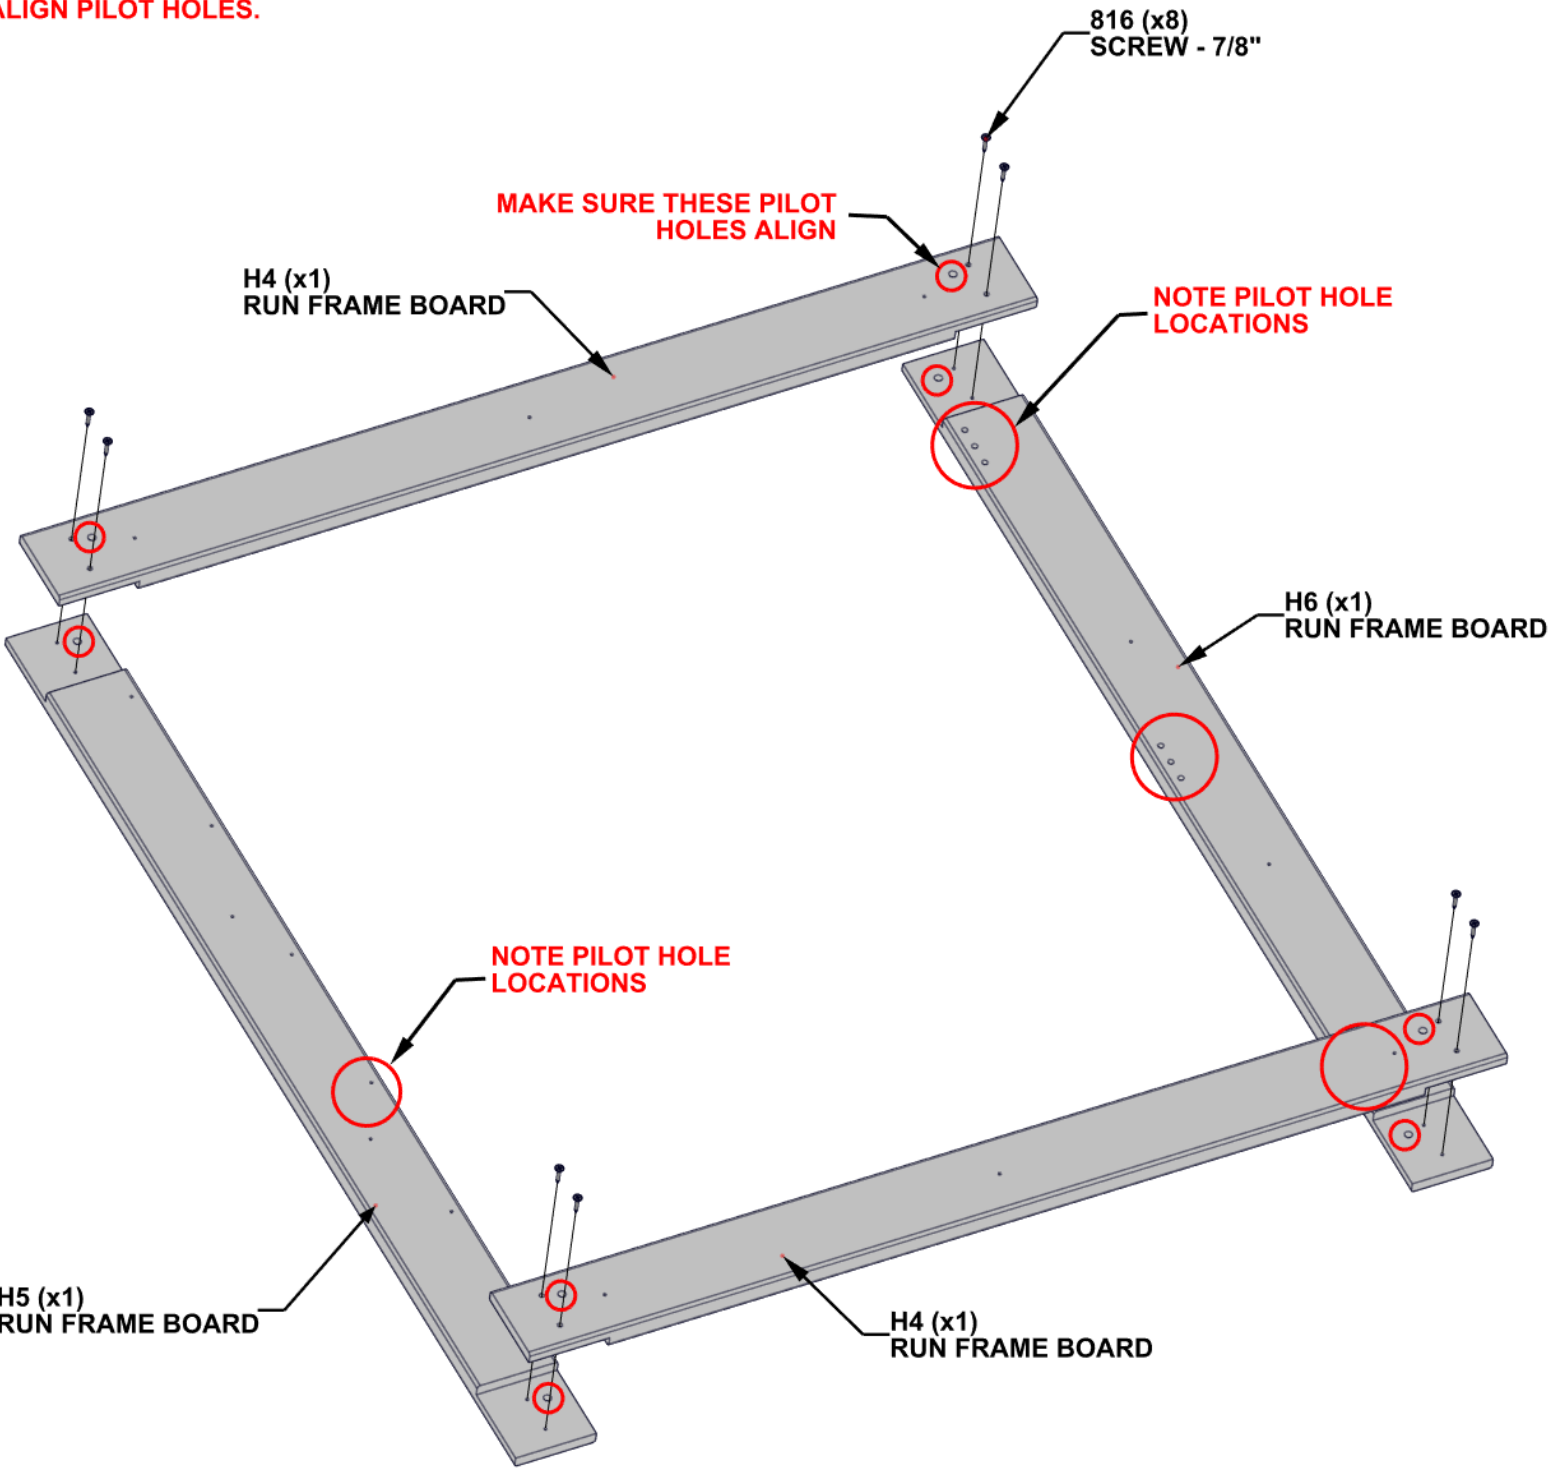

STEP 62 - CHICKEN COOP ASSEMBLY

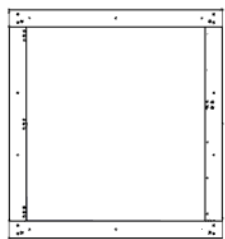


ASSEMBLY FROM
STEP 61

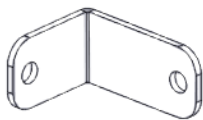


A4M04831 L BRACKET
(x4)

QTY	PART NUMBER	DESCRIPTION
8	H100404	NUT BARREL WH 1/4X5/8 BLK
8	H101111	BOLT WH 1/4X3/4 BLK
8	H100405	WASHER LOCK EXT 6x15


- ALIGN PILOT HOLES.

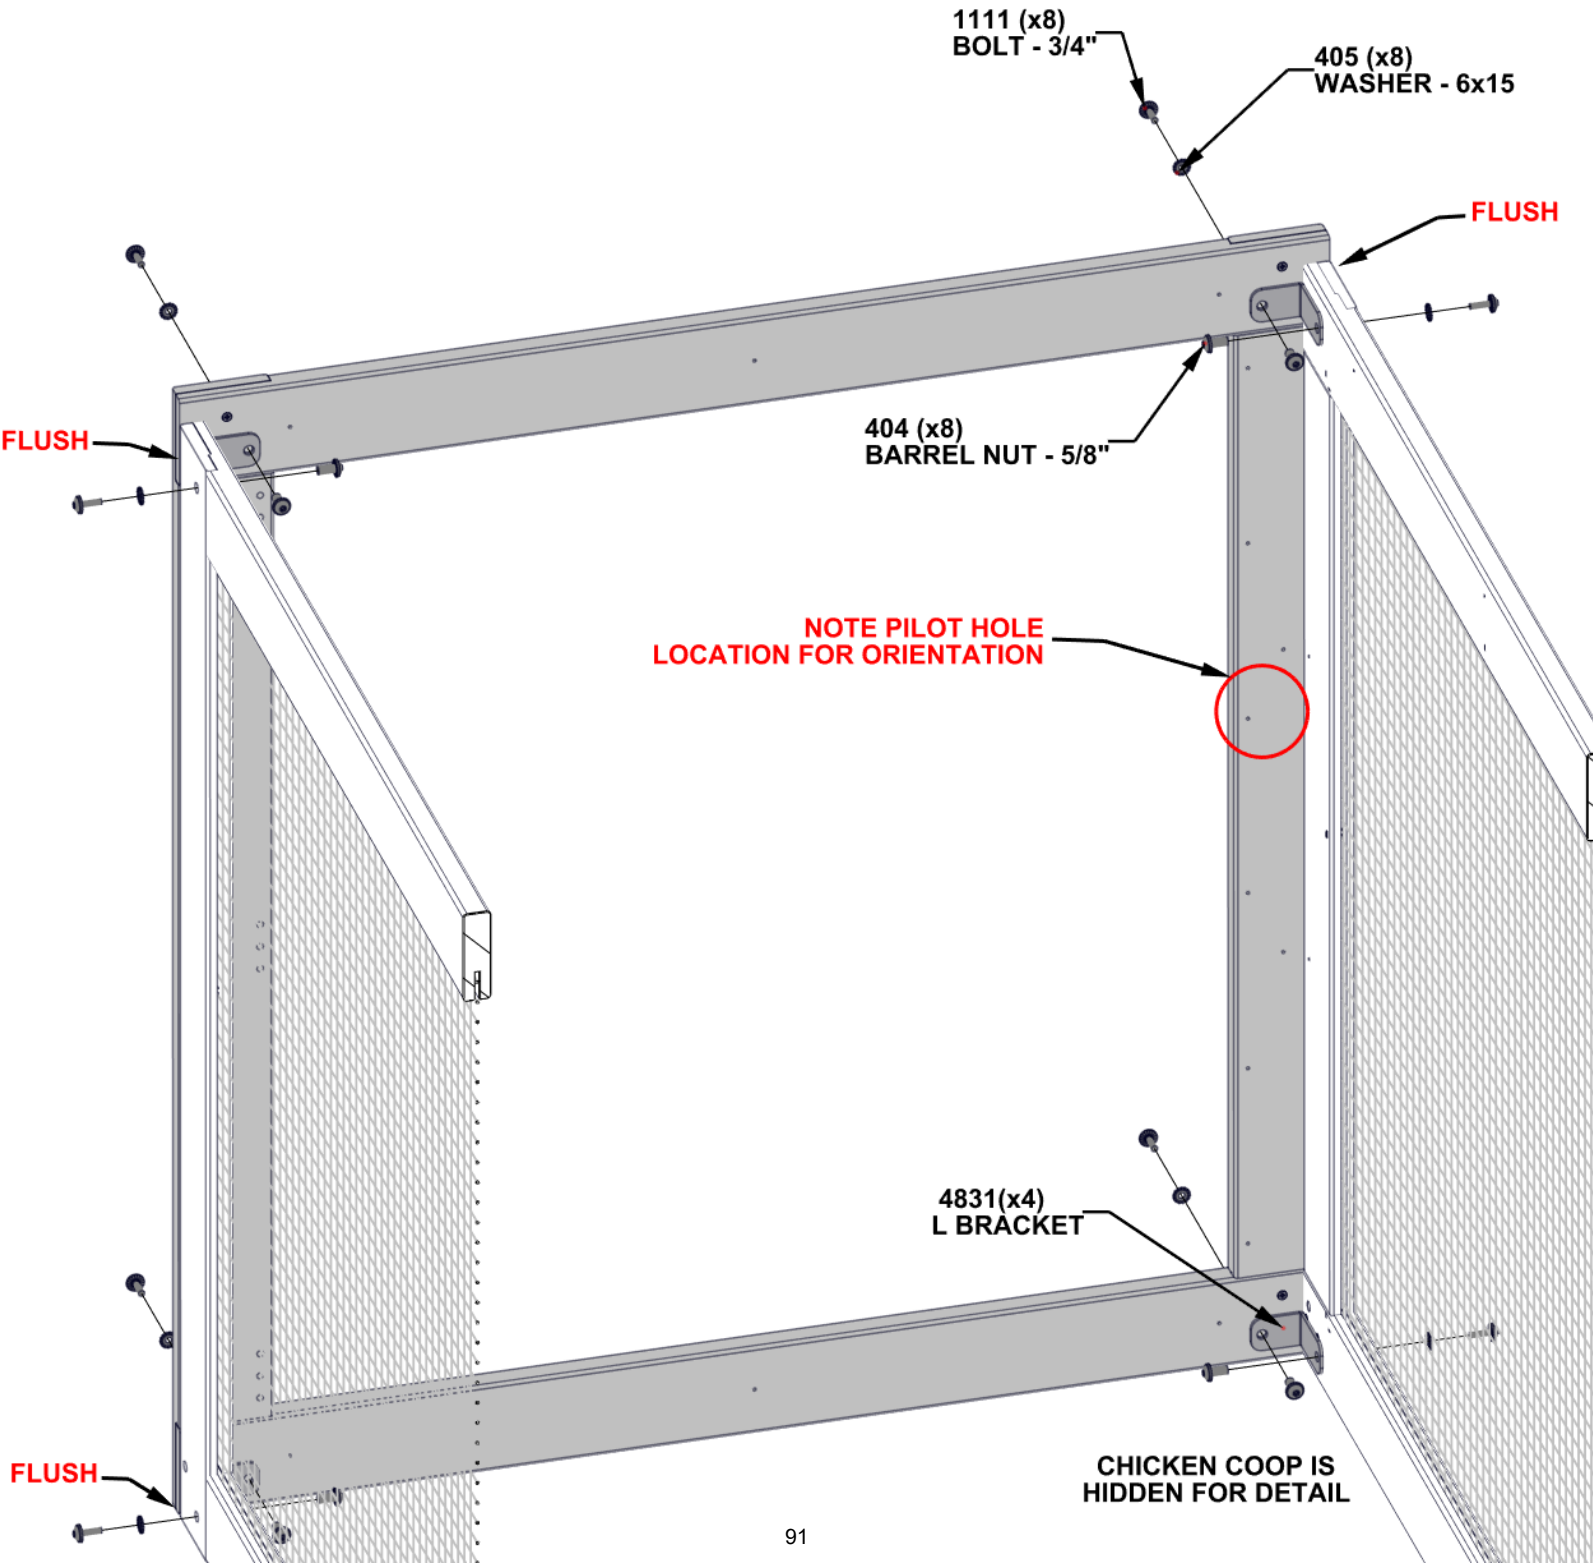

STEP 63A - CHICKEN COOP ASSEMBLY

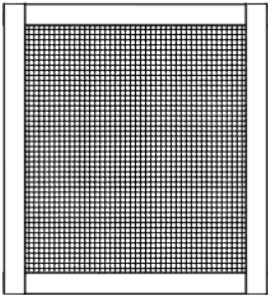


MP05 MESH PANEL - W2A04630
(x1) 15/16"x40 15/16"x45" (24x1040x1143)

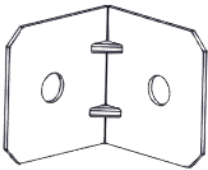

A4M01785 ANGLE BRACKET
(x9)

- FASTENING IN STEP 63B


COOP HIDDEN FOR DETAIL

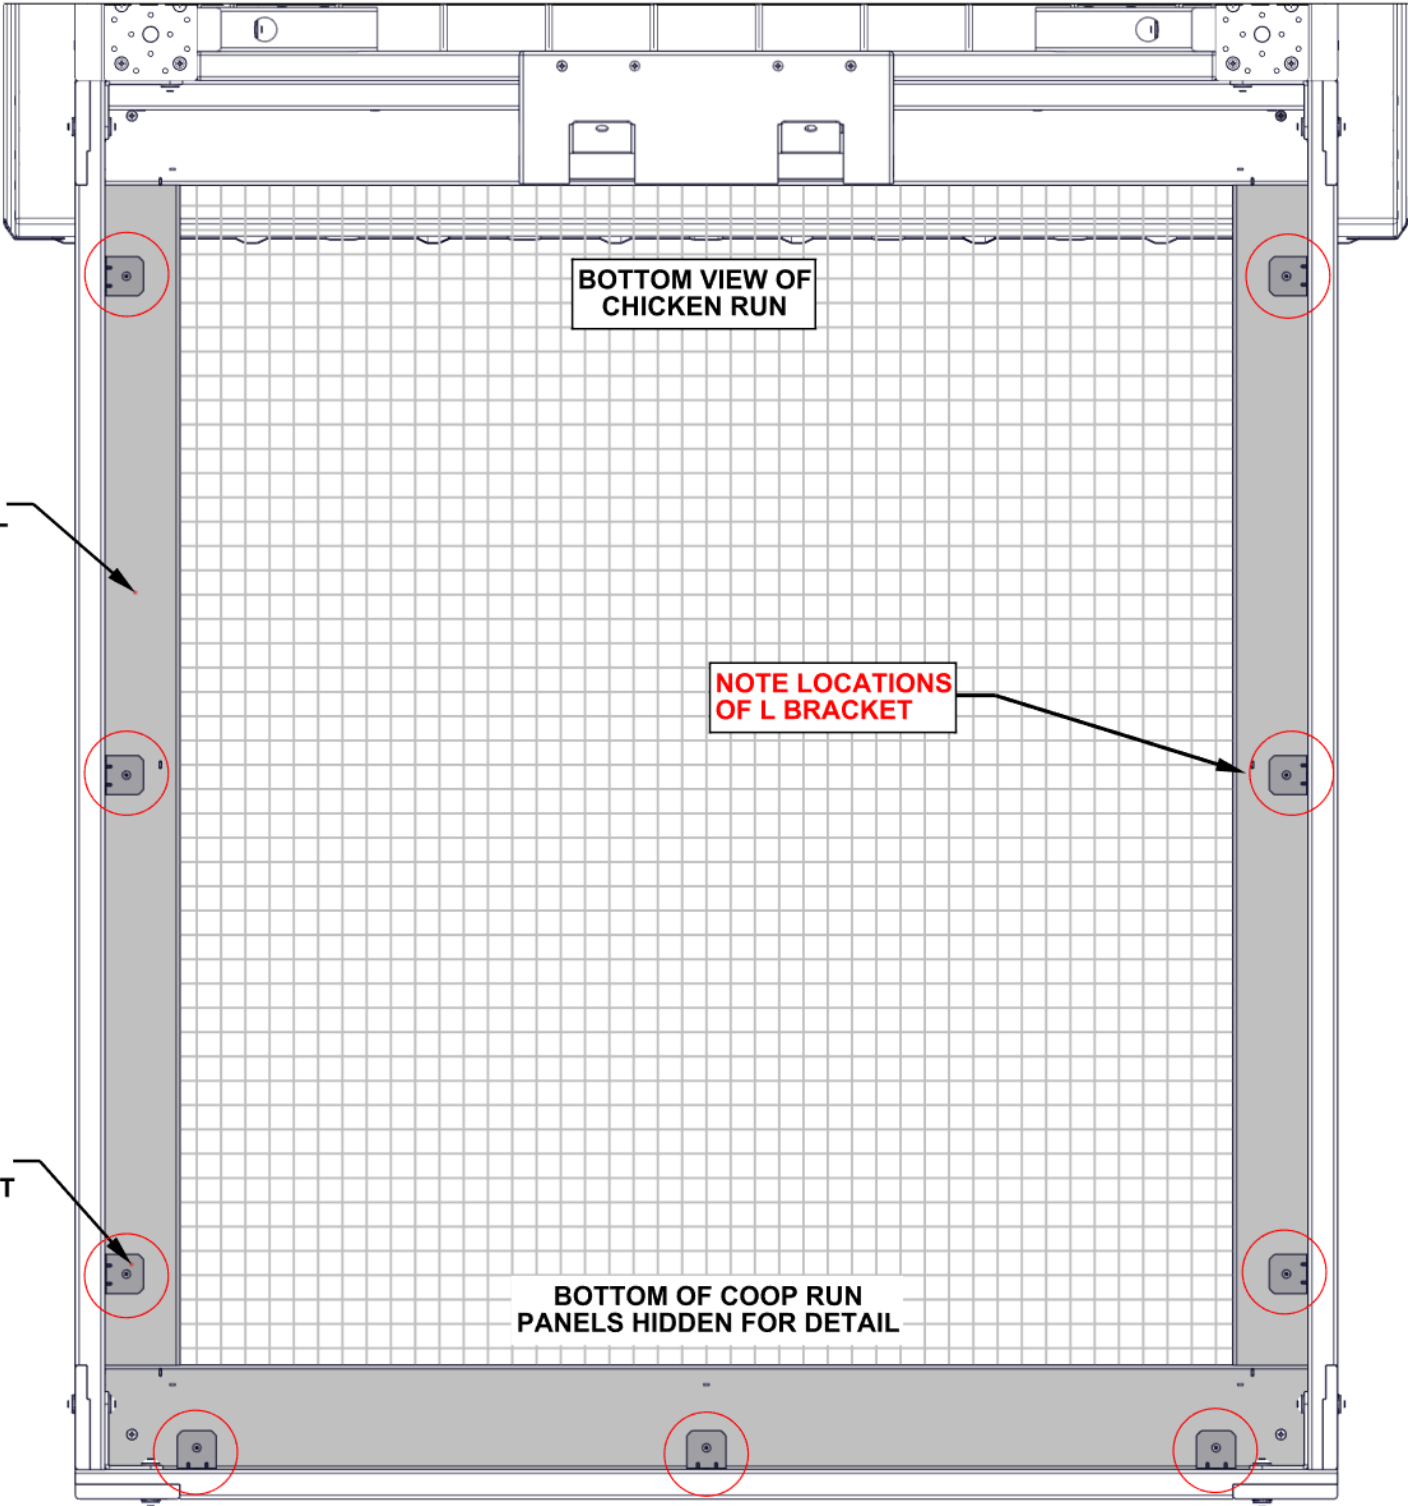

STEP 63B - CHICKEN COOP ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
18	H100202	SCREW PWH 8x5/8 BLK

- EXTRA PEOPLE ARE HELPFUL FOR THIS STEP.
- ALIGN PILOT HOLES.

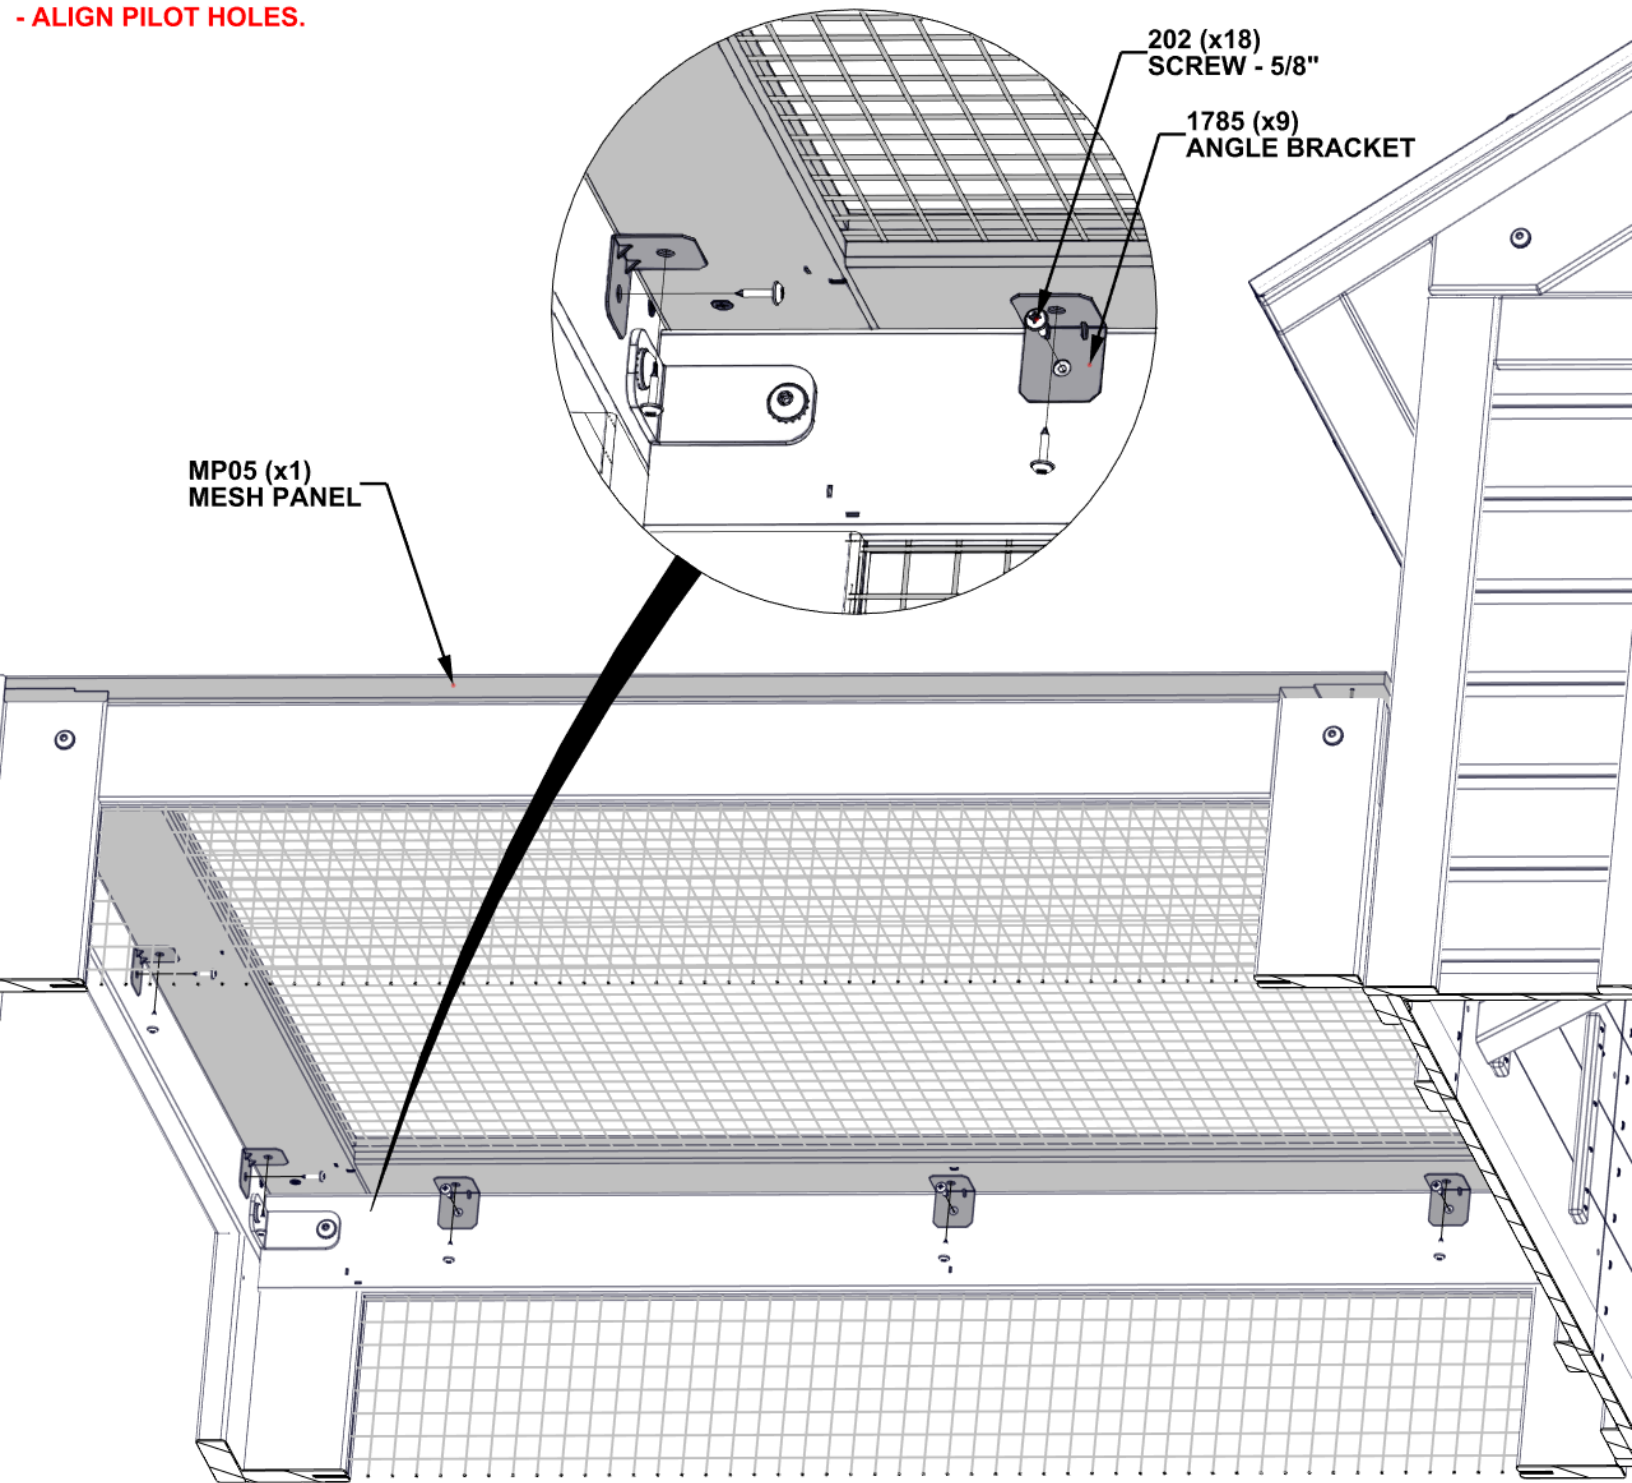


STEP 64 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H100202	SCREW PWH 8x5/8 BLK

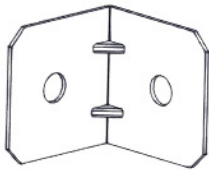

A4M01785 ANGLE BRACKET
(x4)

- ALIGN PILOT HOLES.

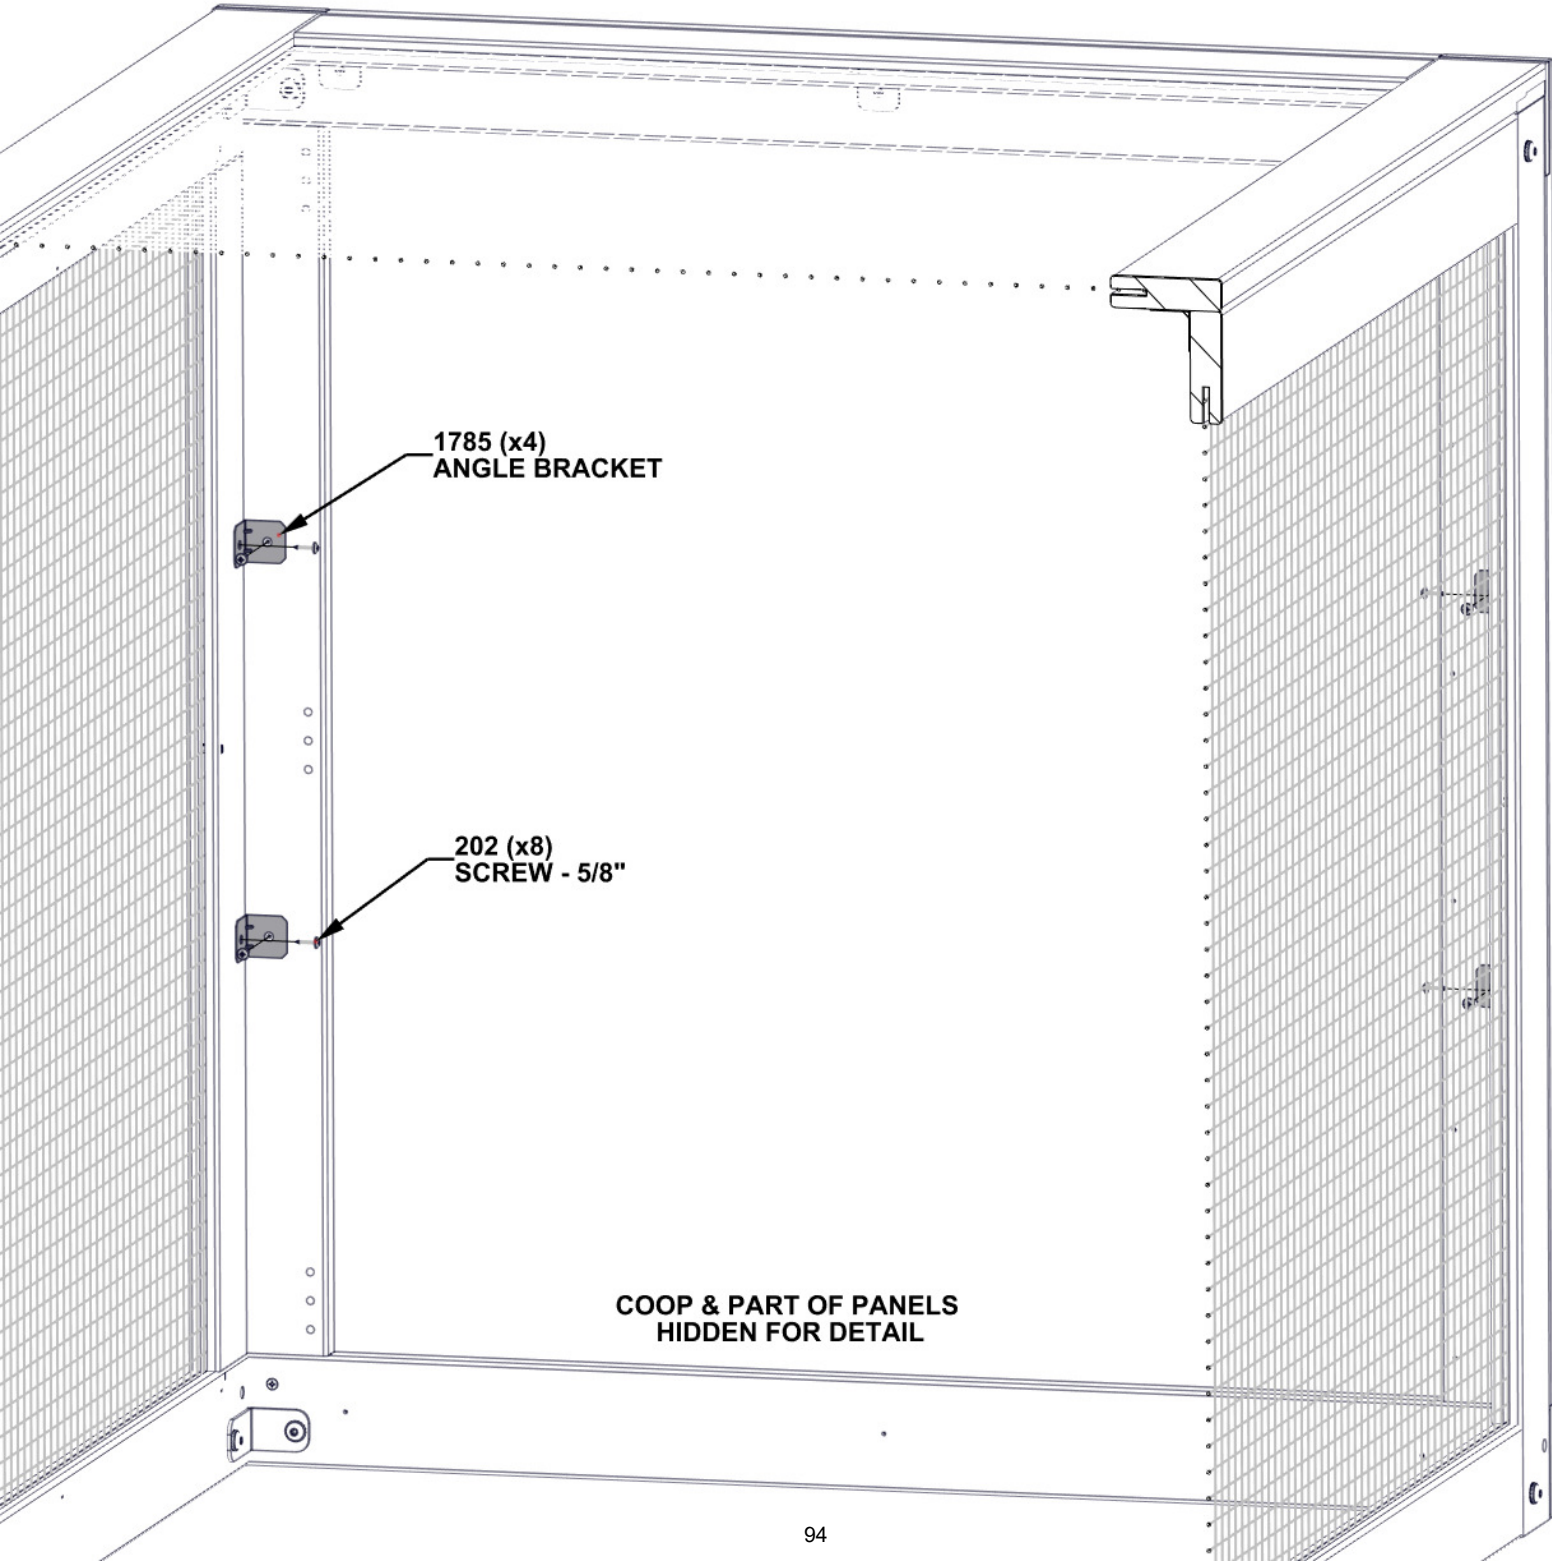


STEP 65 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100200	SCREW PFH 8x1 1/2 BLK



N1 CHICKEN RUN CLEAT - W4L21445
(x1) 5/8"x2 3/8"x37 1/16" (16x60x941)


- ALIGN PILOT HOLES.

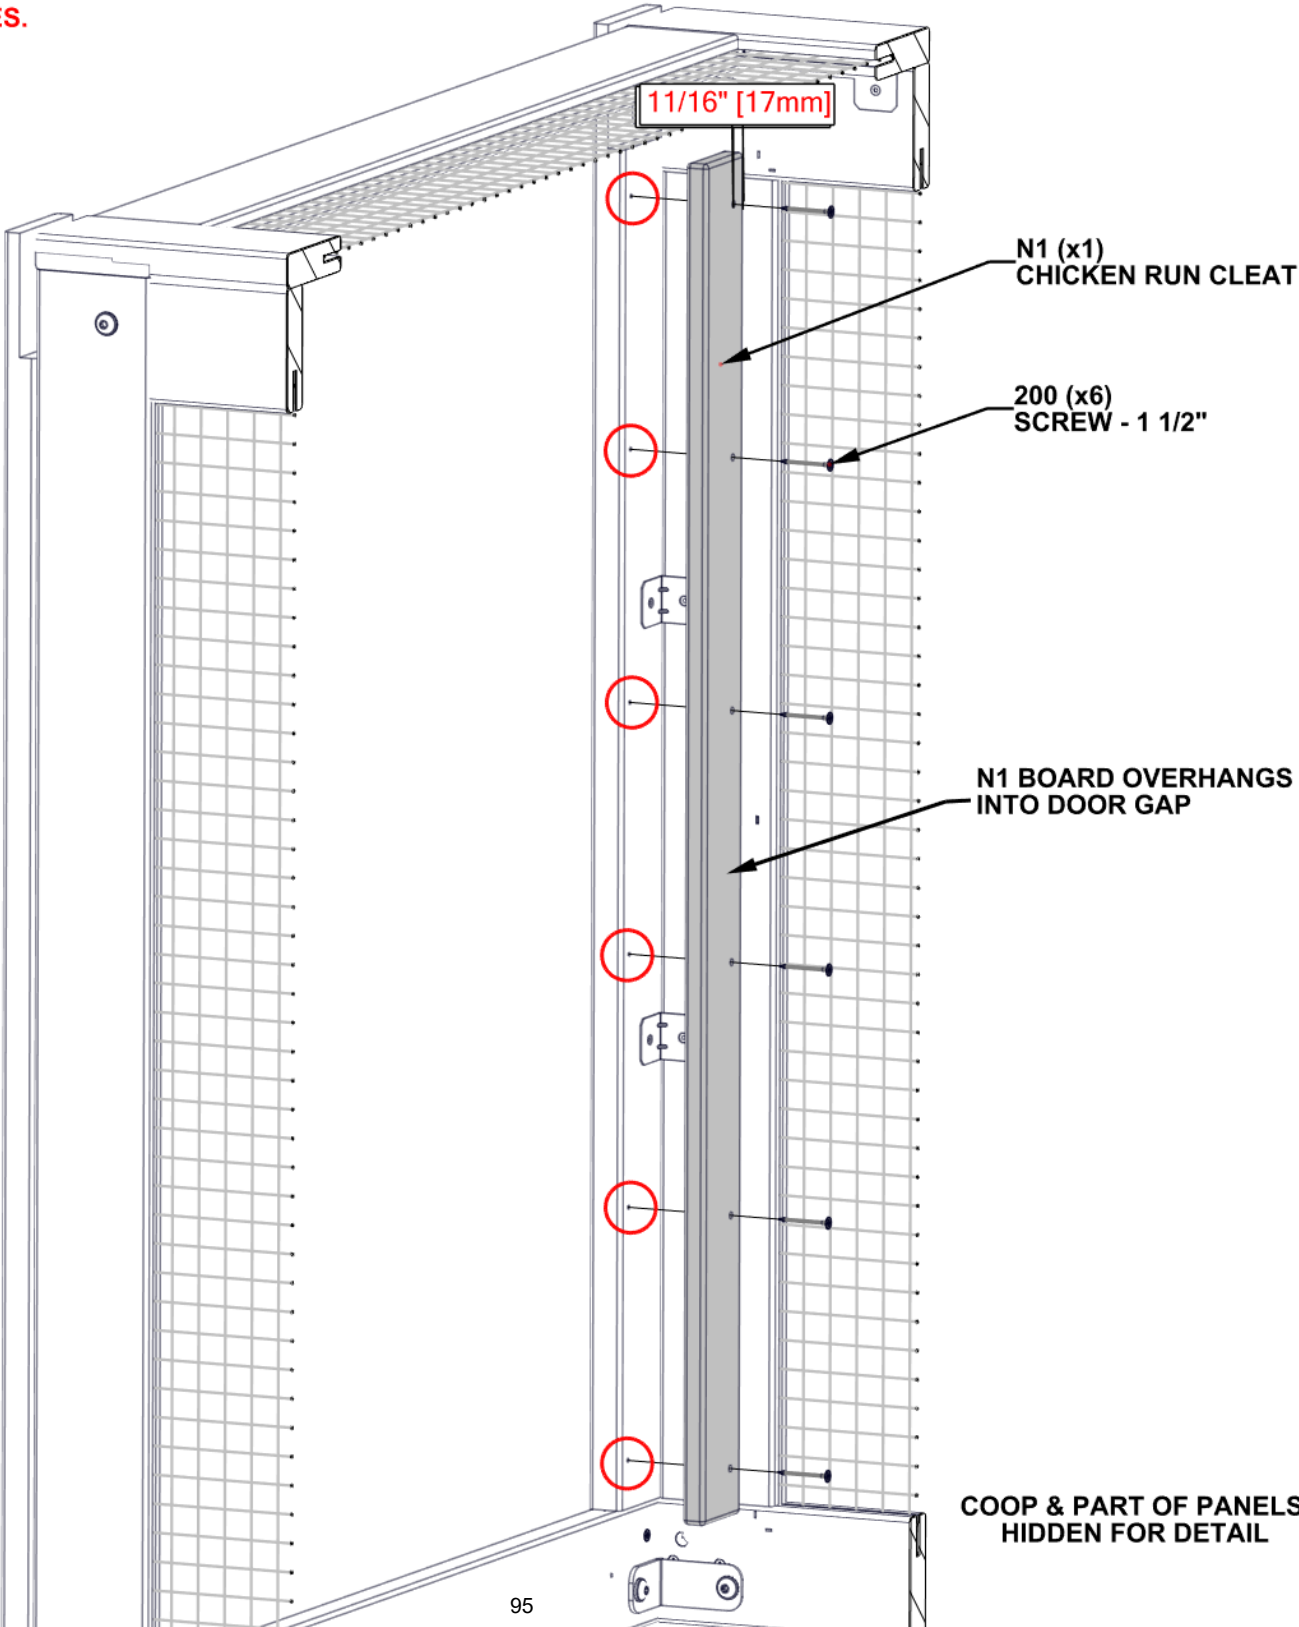


**SET CHICKEN COOP
ASSEMBLY TO THE SIDE**

STEP 66 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H100536	SCREW PWH 8x1 1/4 BLK
2	H100379	T-NUT 5/16 BLK
2	H100468	BOLT WH 5/16x1 BLK
2	H100478	WASHER FLAT 8x27 BLK

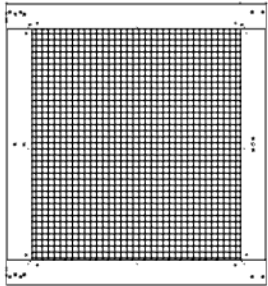

MP07 MESH DOOR PANEL - W2A04633
(x1) 1 9/16"x36 5/8"x33 3/4" (40x931x858)




H7 X FRAME BOARD - W4L21834
(x1) 15/16"x3 3/8"x44 13/16" (24x86x1138)




H8 X FRAME BOARD - W4I21835
(x1) 15/16"x3 3/8"x44 13/16" (24x86x1138)


- INSTALL T-NUTS FIRST.
- ALIGN PILOT HOLES.

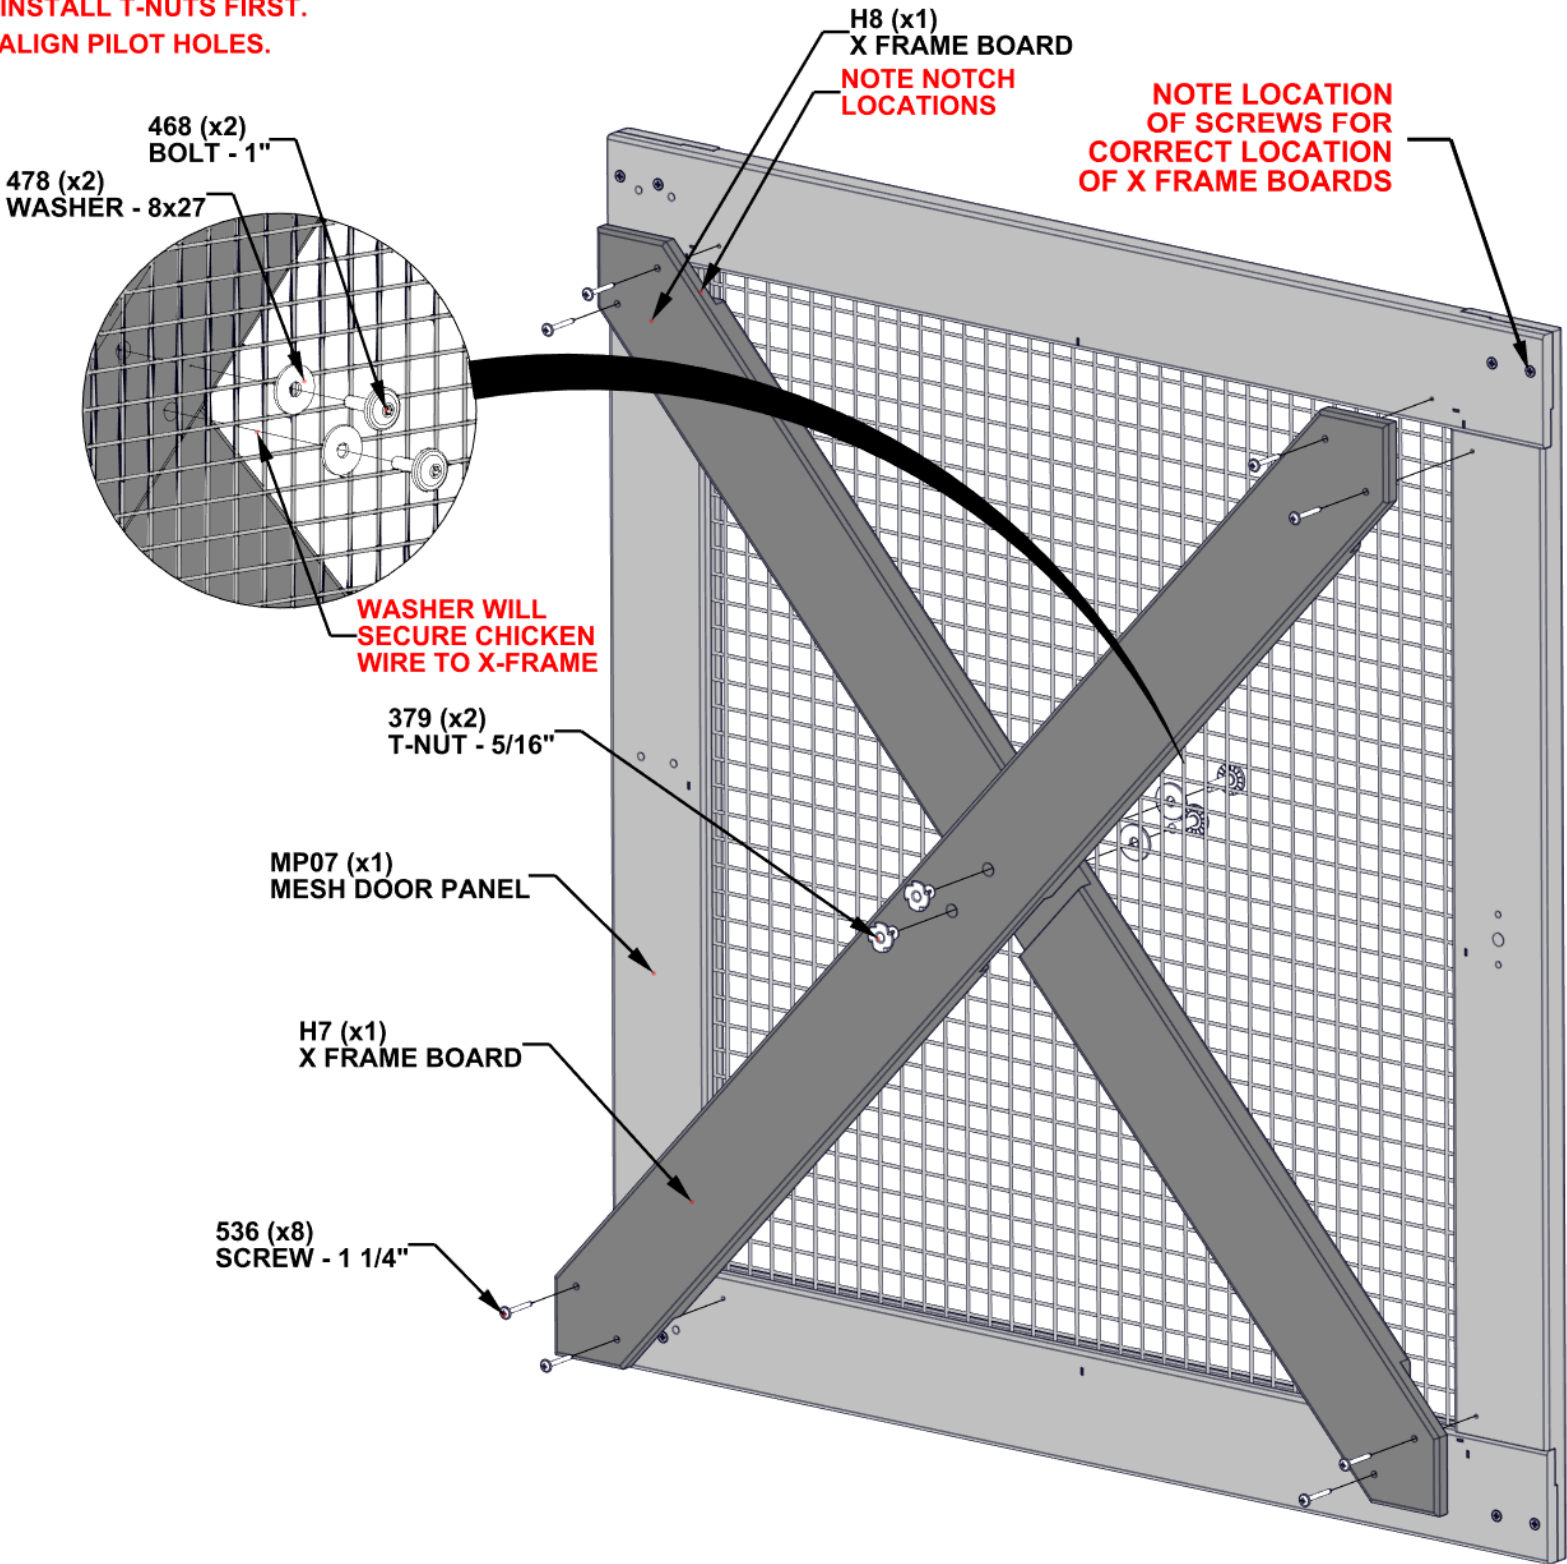

STEP 67A - CHICKEN COOP ASSEMBLY

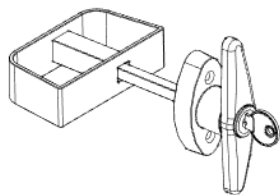

A4M00839 HANDLE W/LOCK
(x1)

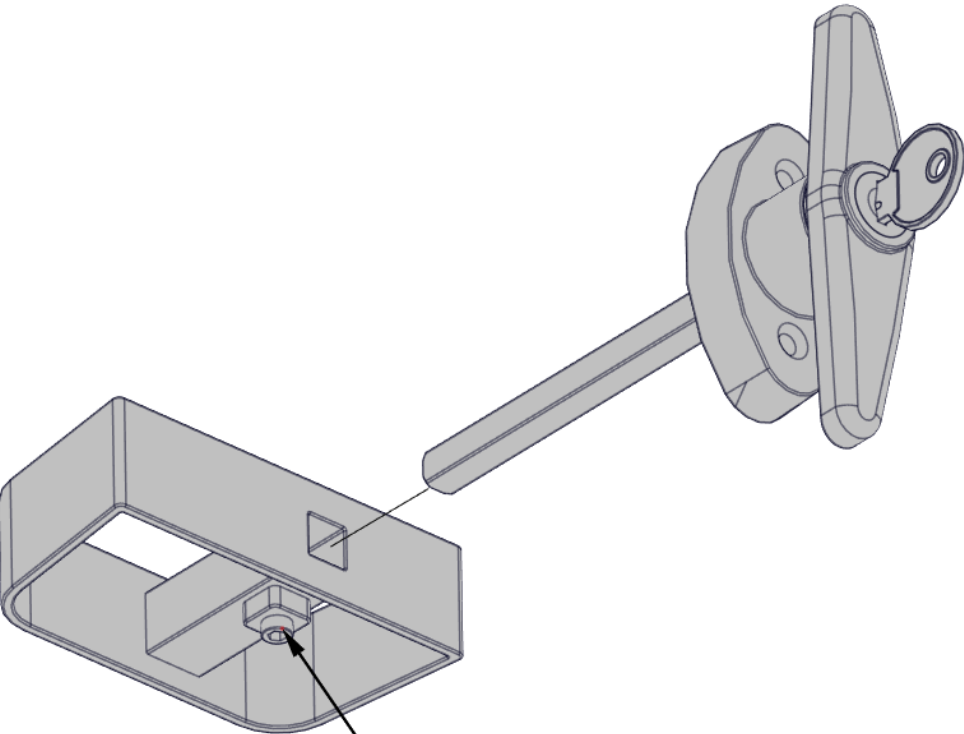


LOOSEN SET SCREW
TO REMOVE DOOR
LOCK FROM SHAFT


STEP 67B - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100804	T-NUT 8/32 BLK
2	H101077	SCREW POH 8/32x1 3/8 BLK

- INSTALL T-NUTS FIRST.

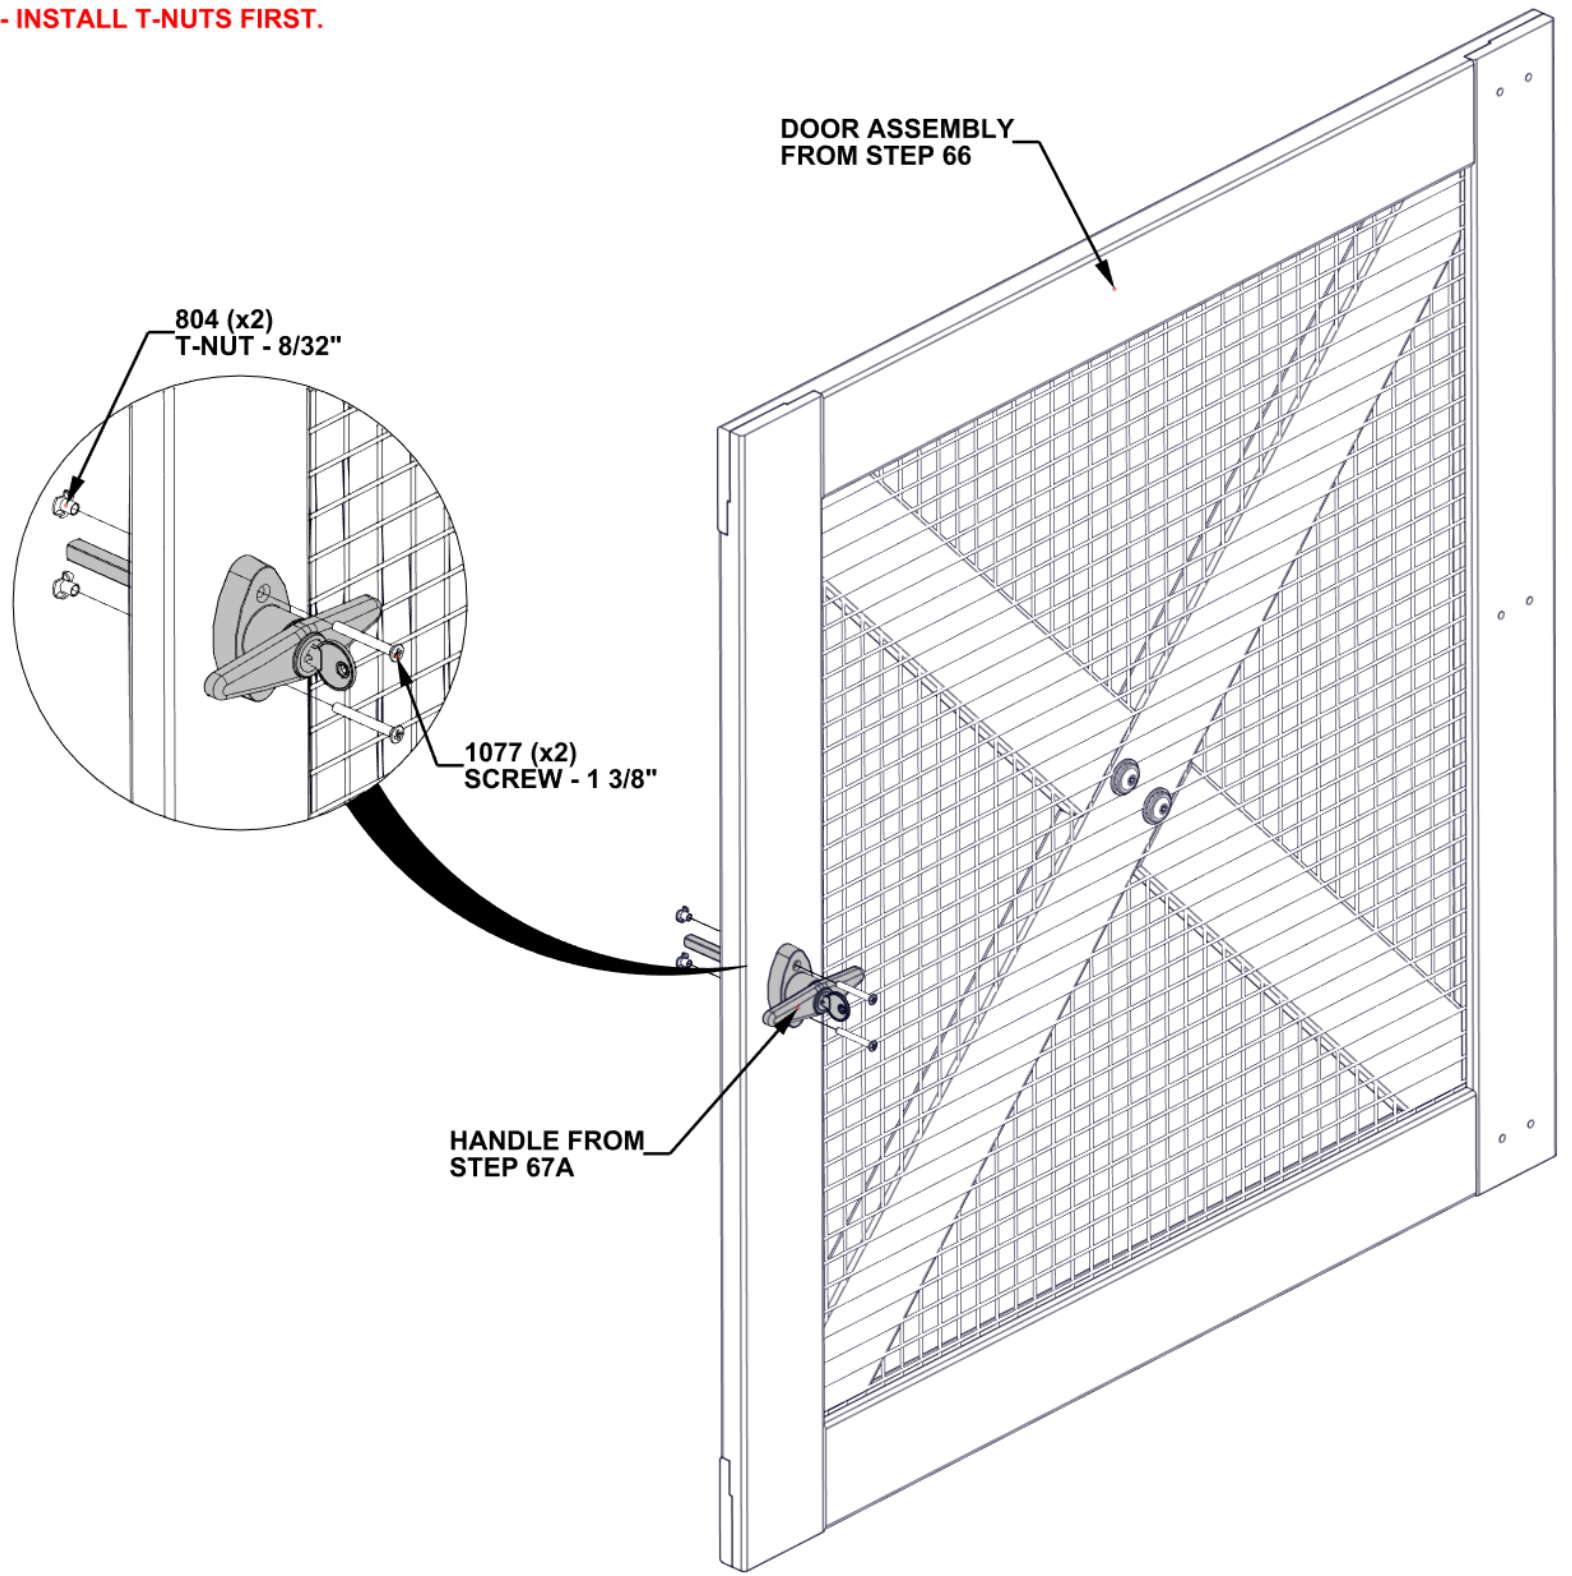


STEP 67C - CHICKEN COOP ASSEMBLY

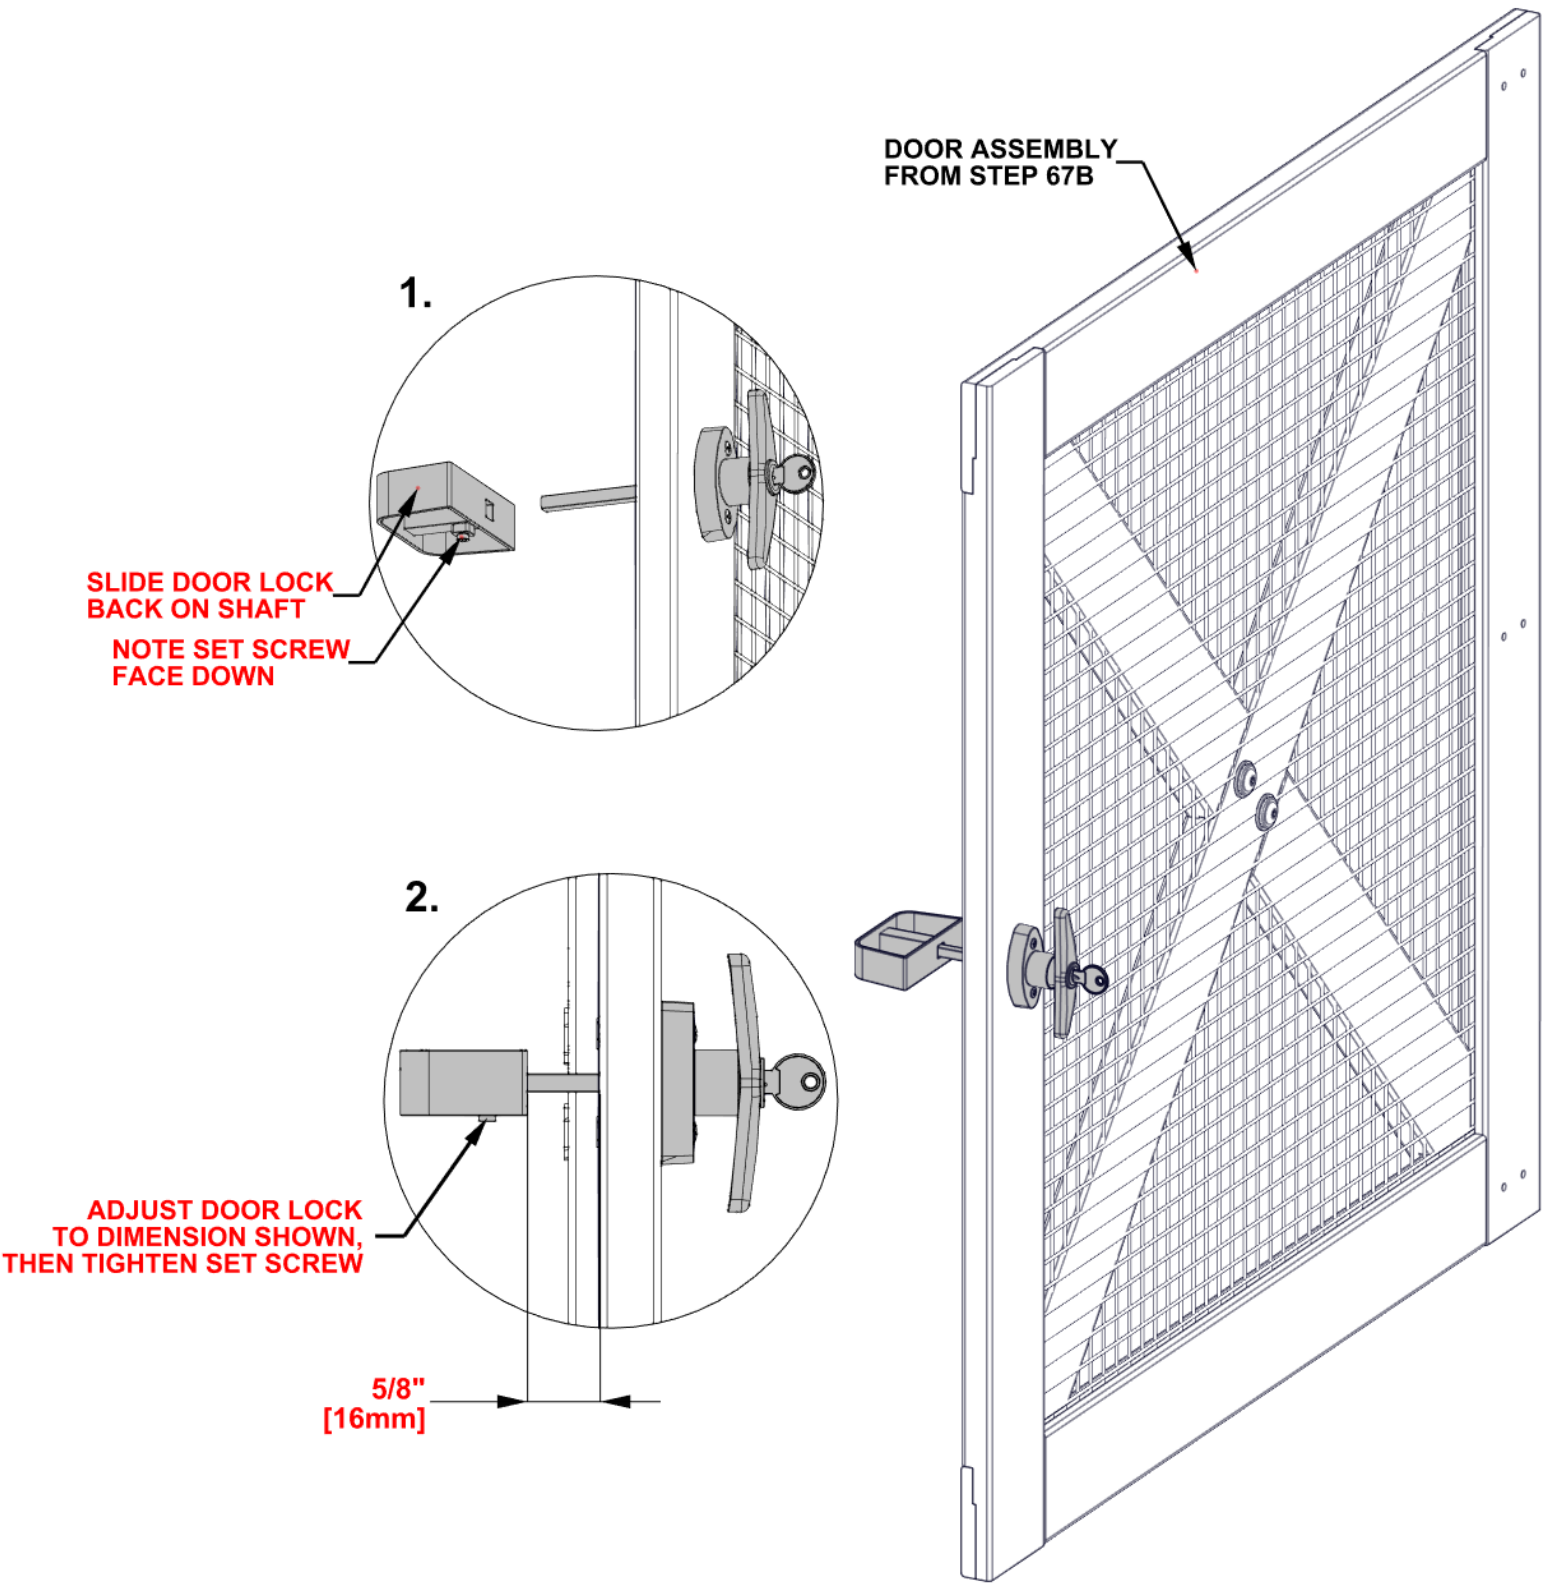


STEP 68 - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H100807	SCREW POH-MS 8/32x1 BLK
6	H100804	T-NUT 8/32 BLK

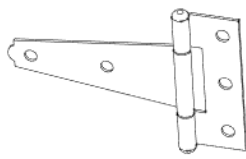


A100093 HINGE
(x3)

- ALIGN PILOT HOLES.

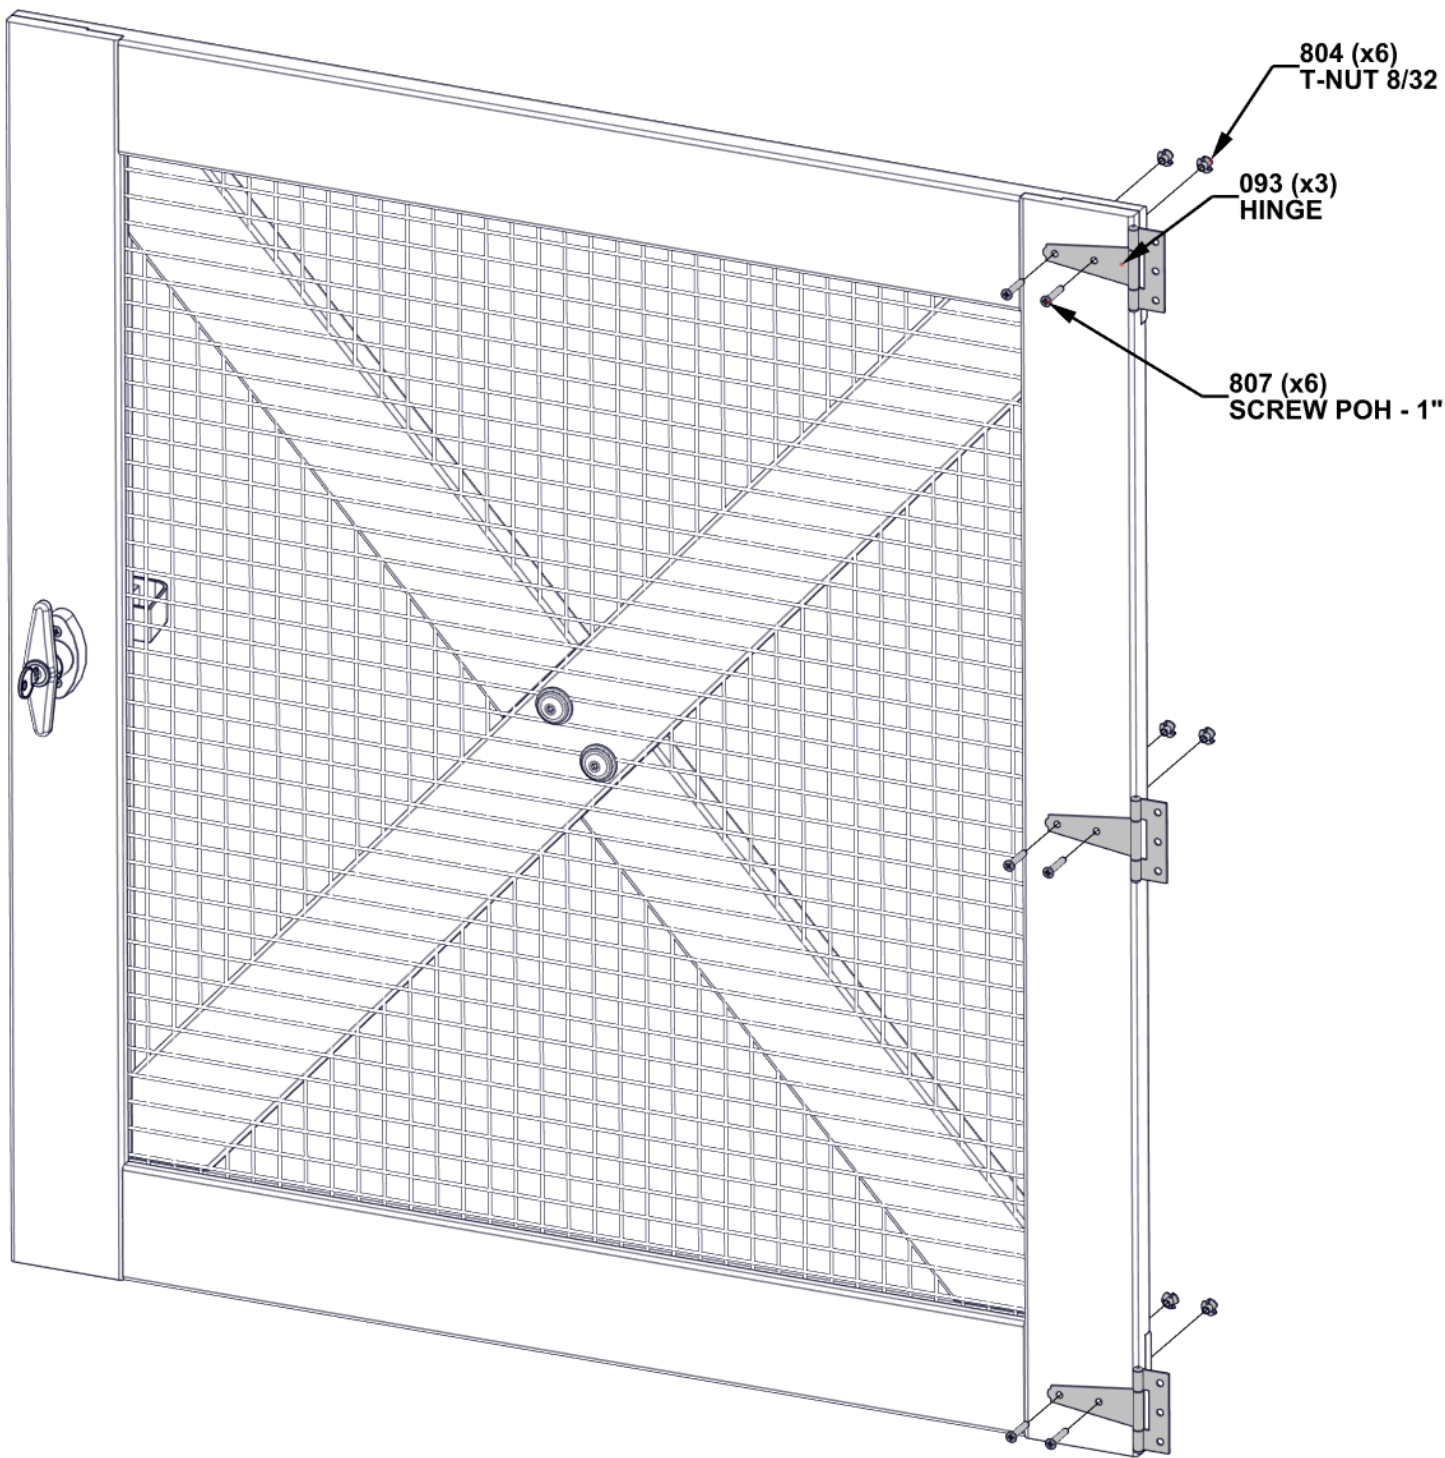


STEP 69 - CHICKEN COOP ASSEMBLY

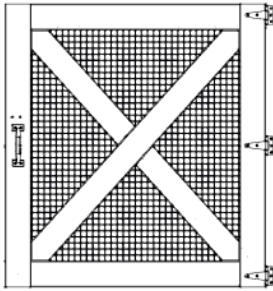

DOOR ASSEMBLY
FROM STEP 68

QTY	PART NUMBER	DESCRIPTION
9	H100807	SCREW POH-MS 8/32X1 BLK
9	H100804	T-NUT 8/32 BLK

- ALIGN PILOT HOLES.

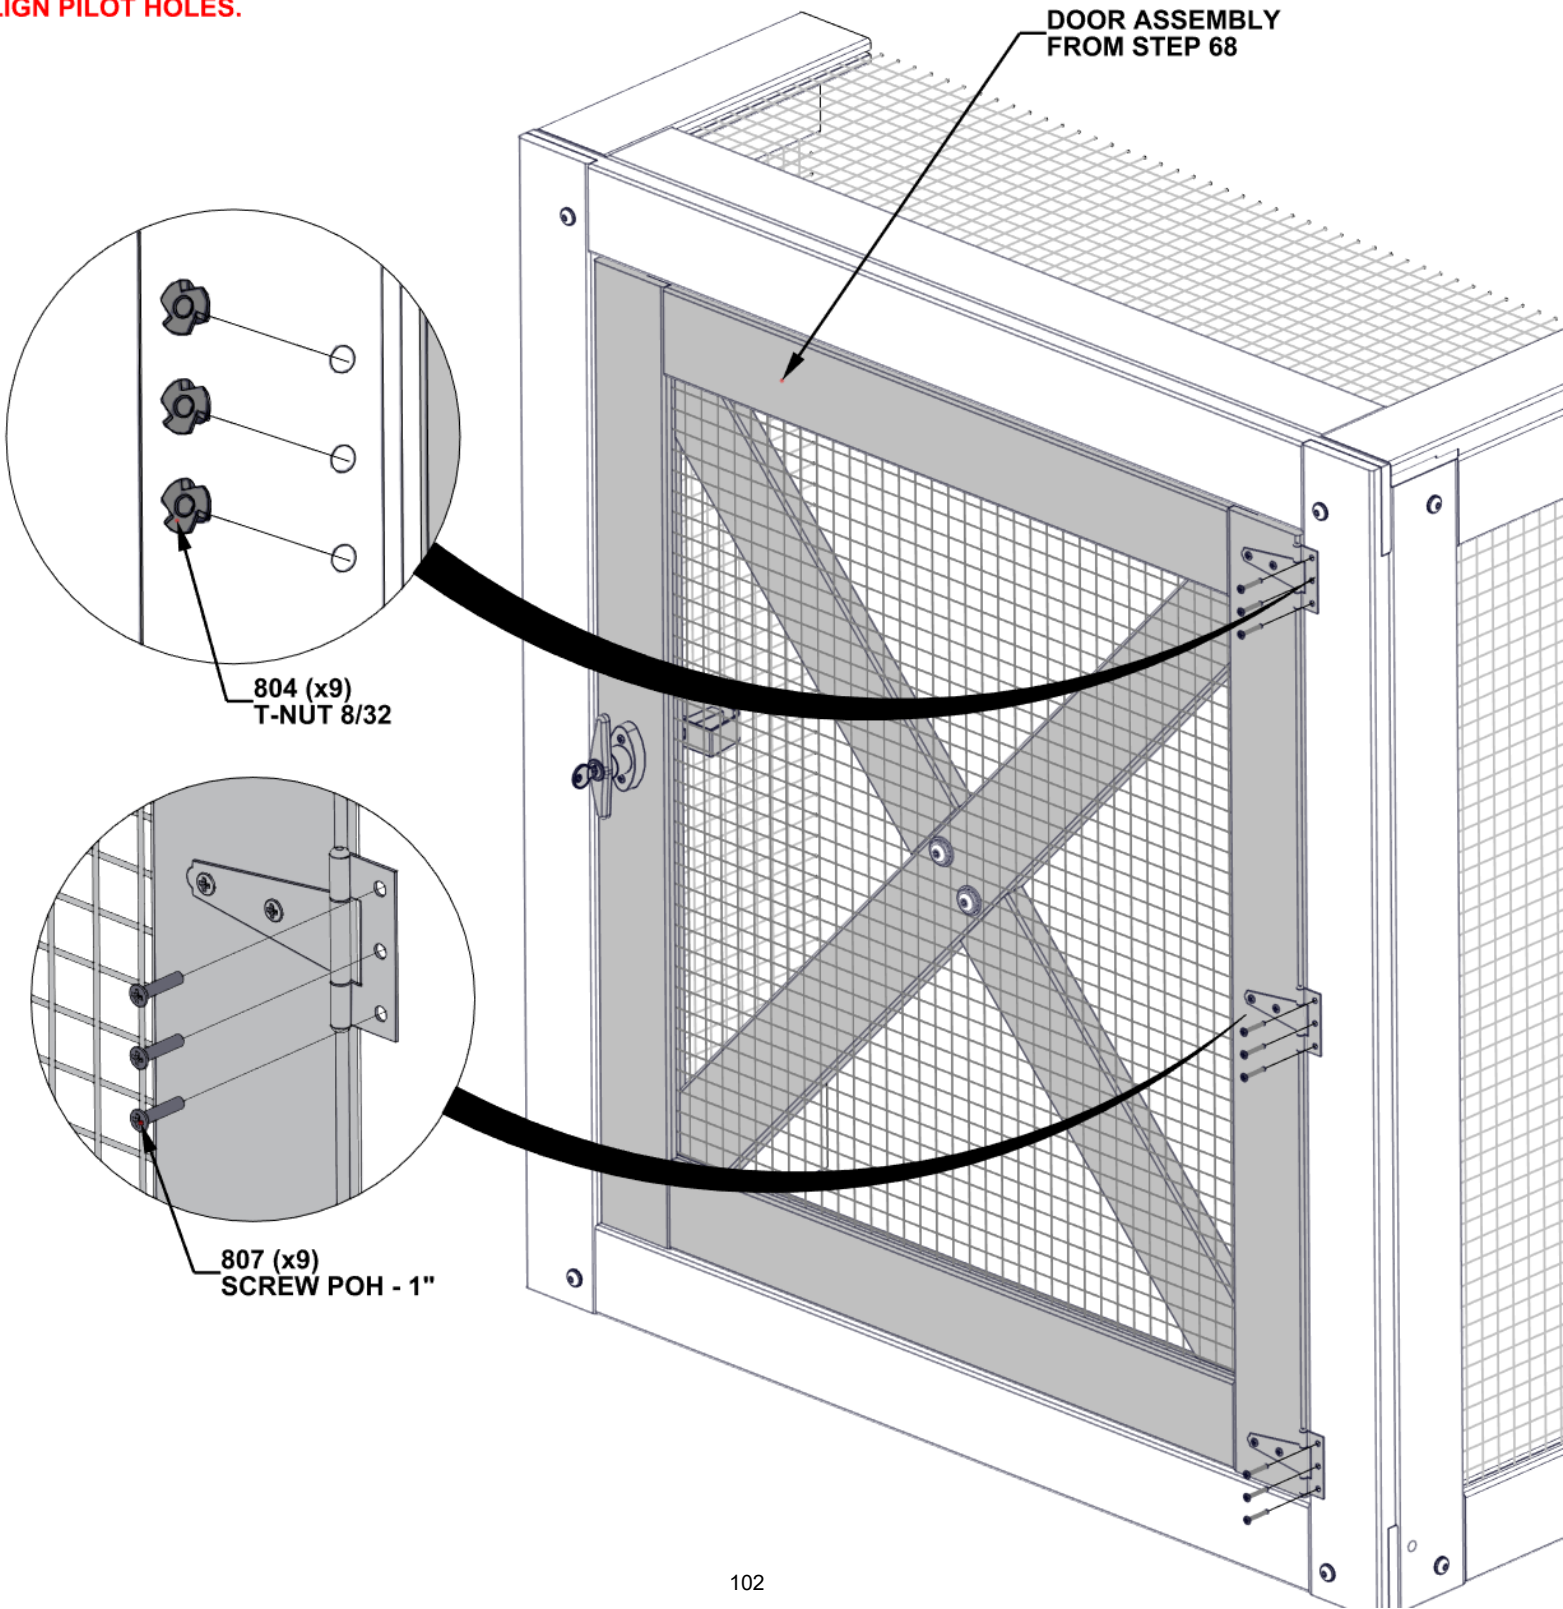


DOOR ASSEMBLY
FROM STEP 68

804 (x9)
T-NUT 8/32

807 (x9)
SCREW POH - 1"


**NOW REINSTALL THE
CHICKEN RAMP**

STEP 70 - CHICKEN COOP ASSEMBLY

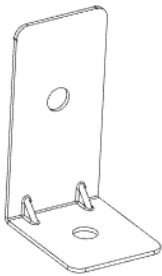


A4M02941 ANCHORING BRACKET
(x4)

QTY	PART NUMBER	DESCRIPTION
2	H101144	LAG SCREW WH 5/16x1 3/4 BLK
2	H100379	T-NUT 5/16 BLK
2	H100468	BOLT WH 5/16x1 BLK

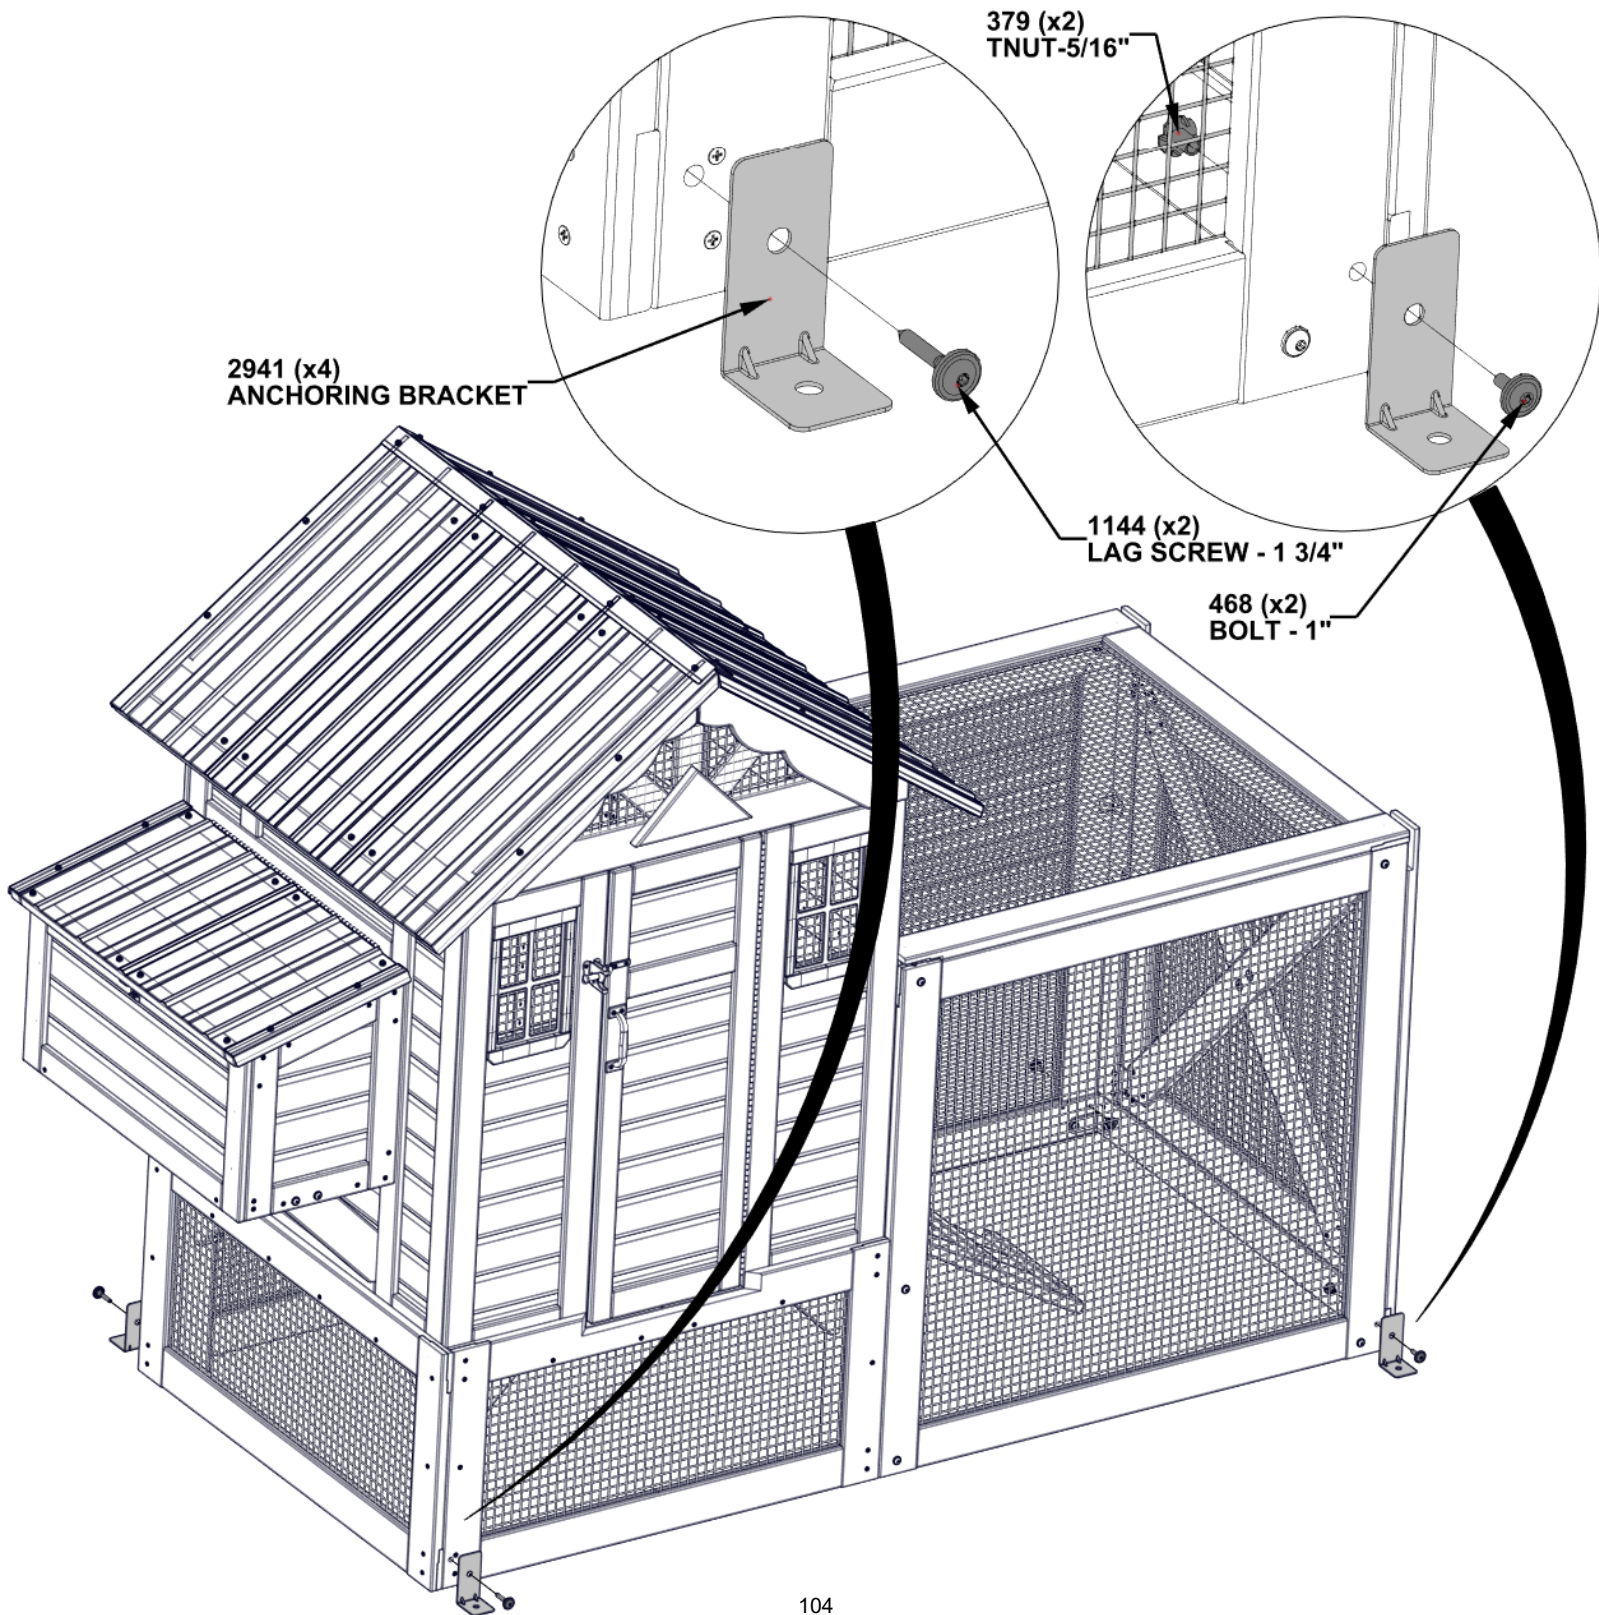


STEP 71 - CHICKEN COOP ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
4	H100408	SCREW PWH 8x1/2 BLK

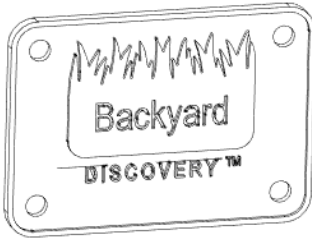

A4M02158 BYD ID TAG PATIO
(x1)

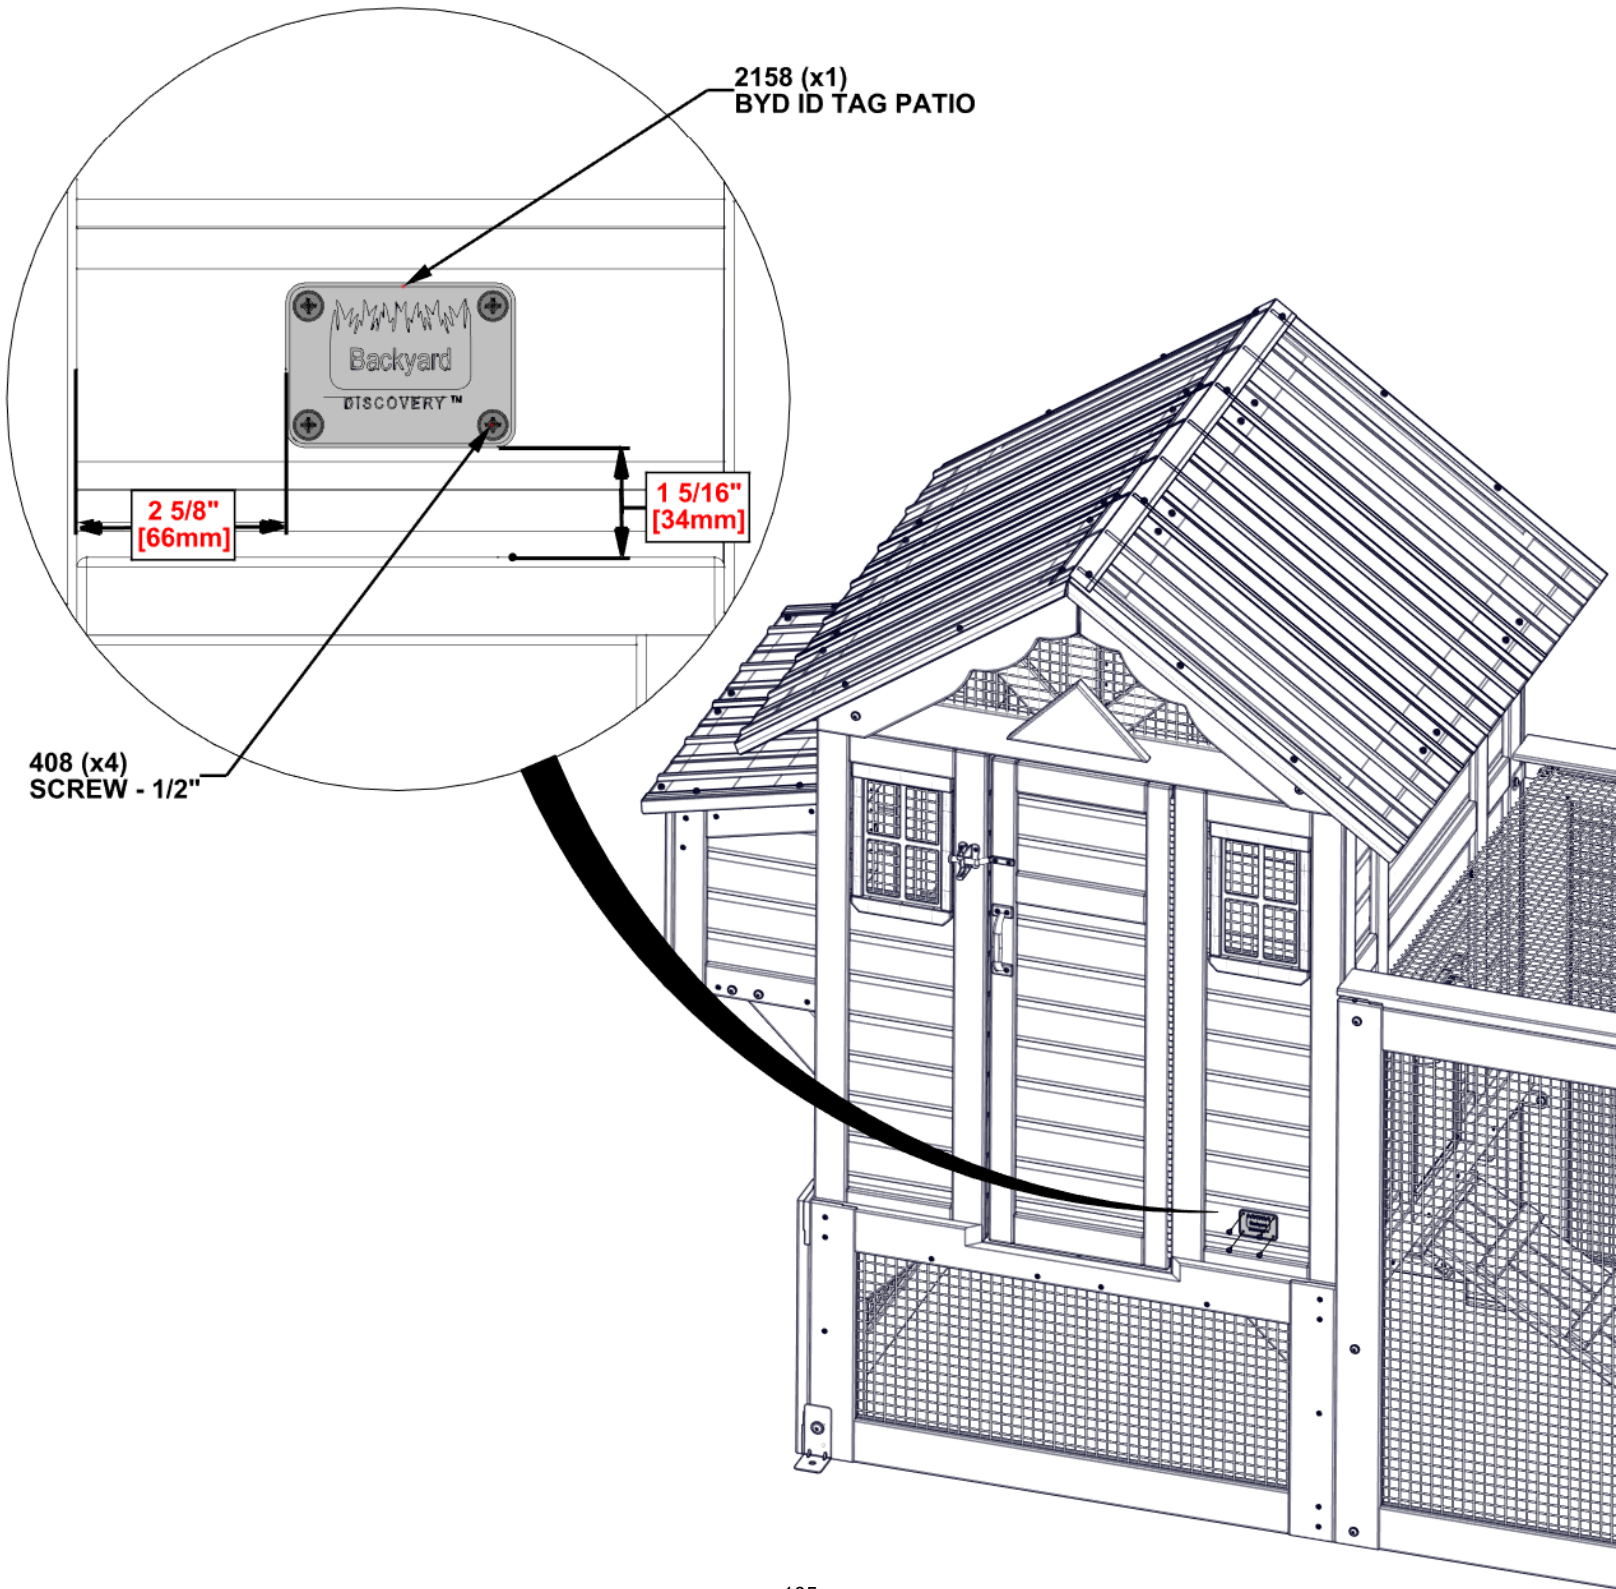


STEP 72 - CHICKEN COOP ASSEMBLY

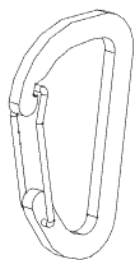

A4M02971 CARABINER
(x2)

- CARABINERS HAVE BEEN PROVIDED
FOR OPTIONAL USE OF SECURING
DOOR LATCHES & CHICKEN RAMP.


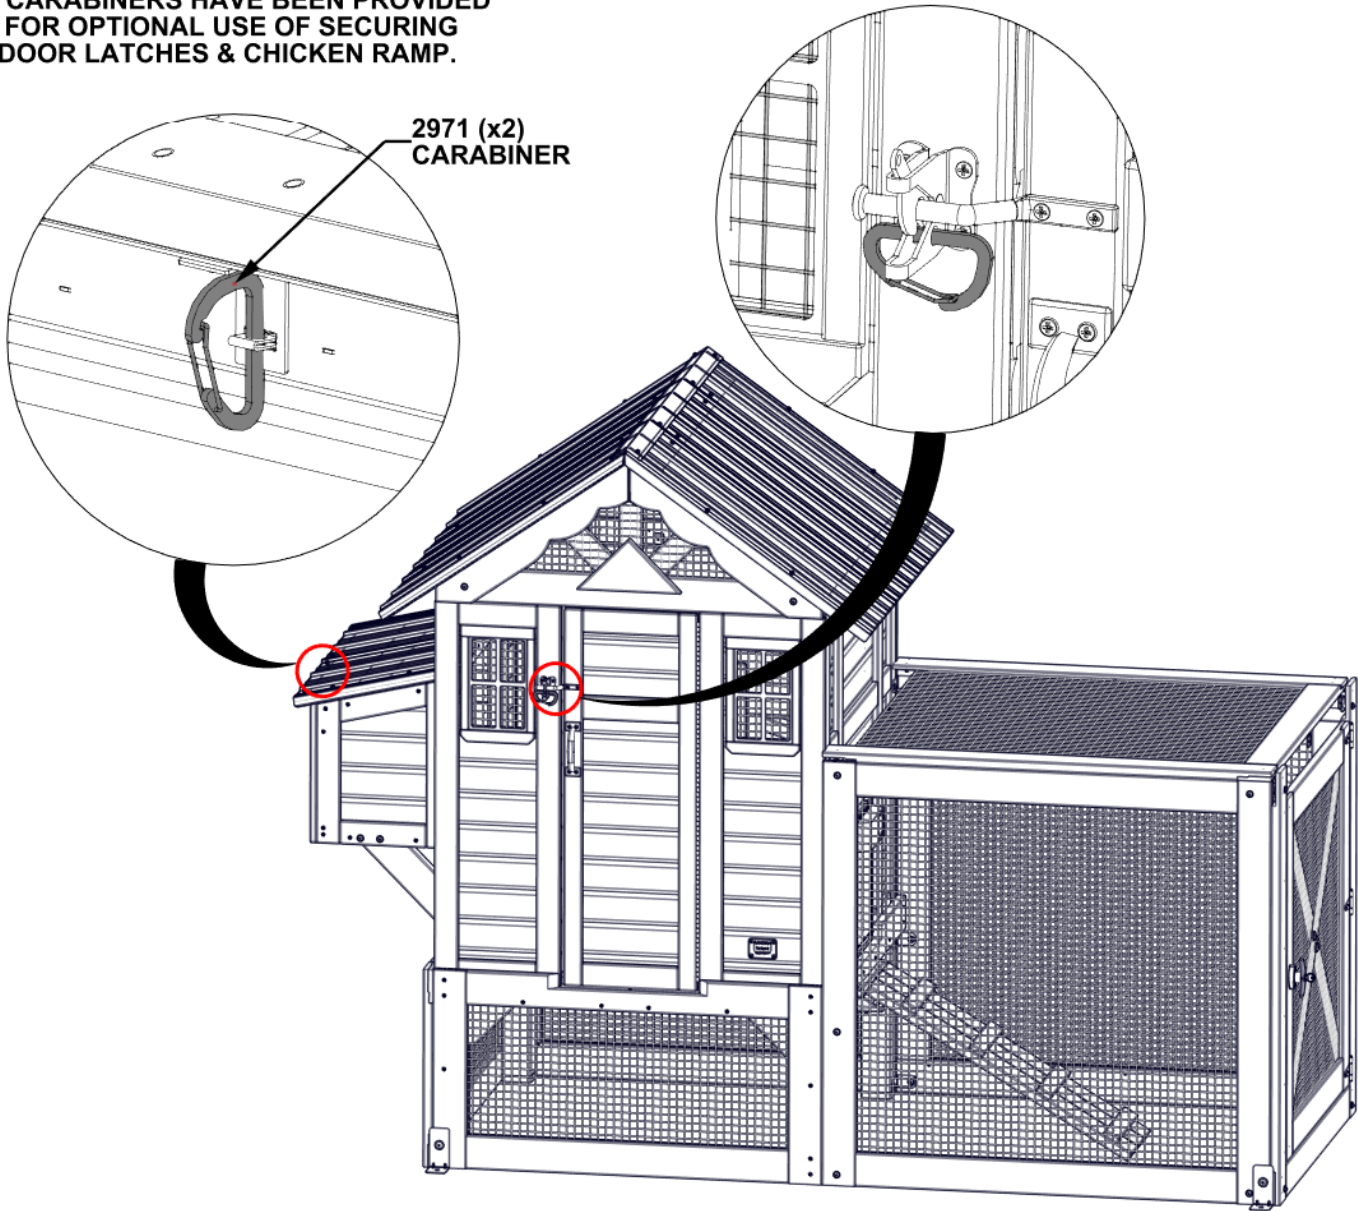


STEP 73A - CHICKEN COOP ASSEMBLY



A4M02091 GROUND STAKE REBAR
(x4)

IF CHICKEN COOP IS ON A CONCRETE SURFACE, SEE STEP 73B FOR ANCHORING STRUCTURE.
IT IS RECOMMENDED TO ANCHOR YOUR CHICKEN COOP ON LEVEL GROUND OR CONCRETE PAD.

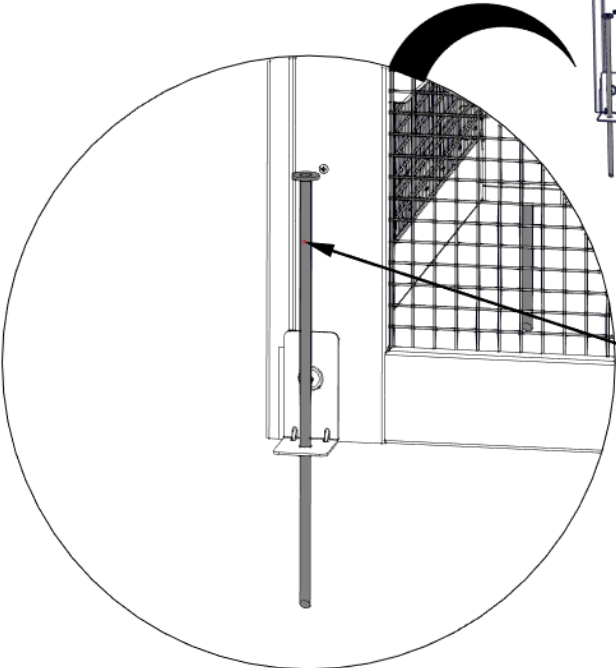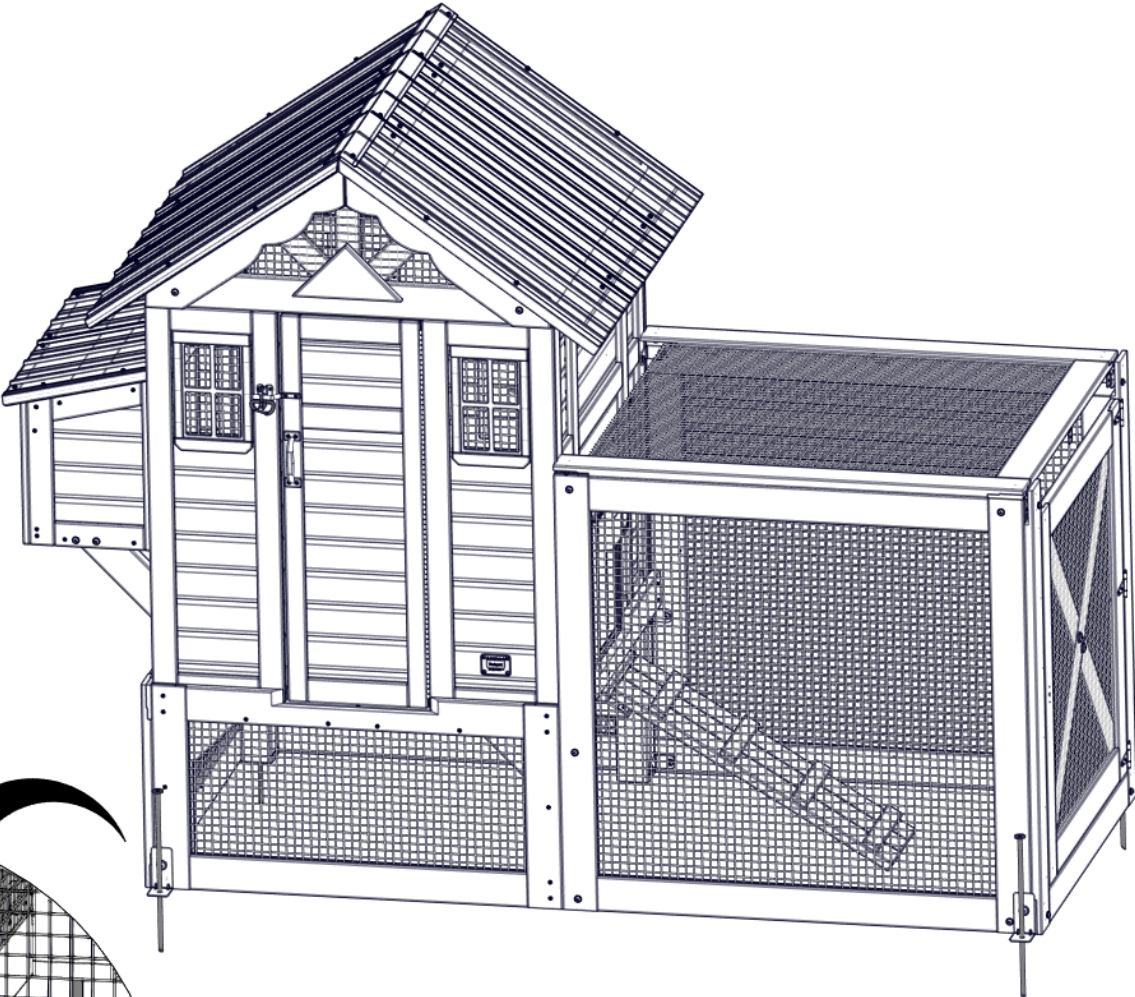

2091 (x4)
GROUND STAKE REBAR

STEP 73B - CHICKEN COOP ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101165	CONCRETE ANCHOR 3/8x3" BLK

IF CHICKEN COOP IS NOT ON A CONCRETE SURFACE, SEE STEP 73A FOR ANCHORING STRUCTURE.
IT IS RECOMMENDED TO ANCHOR YOUR CHICKEN COOP ON LEVEL GROUND OR CONCRETE PAD.

