



MANUFACTURED BY:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 0800-567-8990

SPRUCE HOLLOW

Swing Set Model # 2400351

The assembly manual must be retained
since it contains important information



WARNING

Adult Assembly Required.

Not suitable for children under 36 months due to small parts.

FOR DOMESTIC USE ONLY. INTENDED FOR OUTDOOR USE.

CAN ICES-003 (B)/NMB-003(B)



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your set, or to order replacement parts

Para obtener instrucciones en español, visite www.backyarddiscovery.com



**EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS**

DOWNLOAD THE FREE APP




Owner's Manual - Basic Setup Dimensions & Assembly Notes

Place the set on level ground, not less than 6'-7" [2007 mm] from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

- While assembling unit, take time before and after each phase to make sure fort is level. If fort is not level, assembly will be difficult and improper assembly may result. Extra care must be taken to insure the fort is square.
- The safe play area refers to a zone extending 6'-7" (2007 mm) beyond the play product on all sides, including the space above the play product.

SAFE PLAY AREA DIAGRAM

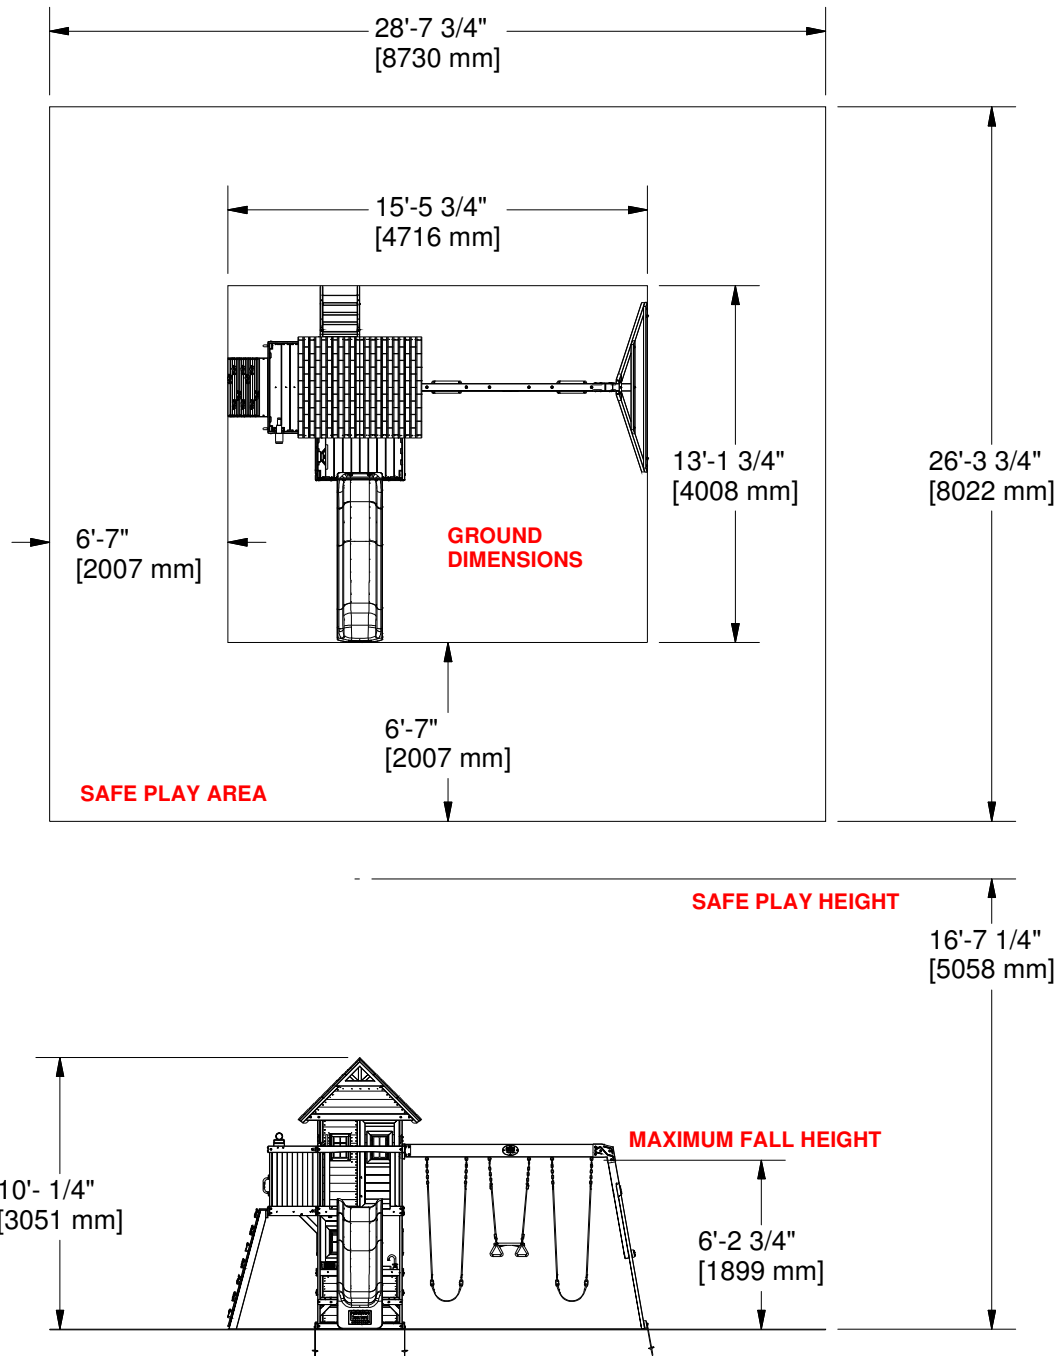

General Information:


Your set has been designed and engineered for children only and for residential use only.
A maximum of 150 lbs. per child is recommended for play activities designed for individual use.
A maximum of 120 lbs. per child is recommended for play activities designed for multiple child use.
A maximum of 11 children is recommended for this swing set.

OWNER'S MANUAL - PARTS IDENTIFICATION

Wood Components (Not to Scale)



EB10 MOUNTING BLOCK - W4L21007
(x2) 1 3/8"x3"x4 3/4" (36x76x120)



EG77 ANGLE BRACE - W4L21023
(x2) 1 3/8"x3 1/4"x74 3/8" (36x84x1890)



GG71 SWING BEAM SUPPORT - W4L21021
(x1) 3 1/4"x3 1/4"x49 5/8" (84x84x1260)



GJ74 SWING BEAM EXTENDED - W4L21025
(x1) 3 1/4"x5 5/8"x89 1/2" (84x144x2274)



HB01 GROUND BOARD - W4L19917
(x1) 1"x2 7/8"x61 1/2" (24x72x1563)




HB02 GROUND BOARD - W4L19918
(x1) 1"x2 7/8"x37 1/2" (24x72x952)



HB04 GROUND BOARD - W4L19916
(x1) 1"x2 7/8"x61 1/2" (24x72x1563)



HB07 SEAT SUPPORT - W4L19930
(x1) 1"x2 7/8"x37 1/2" (24x72x952)



HG03 TABLE SUPPORT - W4L20976
(x1) 1"x3 1/4"x12 3/8" (24x84x313)




HG06 BENCH BOARD - W4L20985
(x4) 1"x3 1/4"x21 5/8" (24x84x548)



HG71 LADDER RUNG - W4L21012
(x4) 1"x3 1/4"x16" (24x84x405)




HJ01 TABLE BOARD - W4L20986
(x1) 1"x5 5/8"x21 5/8" (24x144x548)




HR02 GROUND BOARD - W4L19919
(x1) 1"x2 3/8"x37 1/2" (24x60x952)



HR07 SUPPORT BLOCK - W4L20987
(x1) 1"x2 3/8"x3 1/4" (24x60x84)



HC04 SUPPORT BOARD - W4L21005
(x1) 1"x1 1/8"x35 1/8" (24x28x891)



HG05 BENCH BOARD - W4L20983
(x2) 1"x3 1/4"x21 5/8" (24x84x548)




HG70 ATTACHMENT BOARD - W4L21013
(x1) 1"x3 1/4"x17 1/2" (24x84x445)




HG75 ATTACHMENT BOARD - W4L21020
(x1) 1"x3 1/4"x26" (24x84x659)



HR01 BENCH BOARD - W4L20984
(x2) 1"x2 3/8"x21 5/8" (24x60x548)




HR03 BENCH SUPPORT - W4L20978
(x2) 1"x2 3/8"x9" (24x60x230)



HR08 PORCH GROUND BOARD - W4L19932
(x1) 1"x2 3/8"x37 1/2" (24x60x952)

OWNER'S MANUAL - PARTS IDENTIFICATION

Wood Components (Not to Scale)



MB70 REAR SUPPORT - W4L21011
(x1) 5/8"x2 7/8"x17 1/2" (16x72x445)



MG06 COUNTER TOP - W4L20997
(x1) 5/8"x3 1/4"x35 1/8" (16x84x891)



MJ01 FLOOR BOARD - W4L20988
(x2) 5/8"x5"x21 1/2" (16x126x547)



MR02 PICKET - W4L21004
(x18) 5/8"x2 3/8"x26" (16x60x660)




MS08 FLOOR BOARD - W4L20999
(x2) 5/8"x3 1/2"x19 3/4" (16x89x503)




MS11 FLOOR BOARD - W4L21002
(x12) 5/8"x3 3/4"x39" (16x96x990)



MS20 ROCK WALL BOARD - W4L21016
(x7) 5/8"x3 3/4"x26" (16x96x659)



MS22 ROCK WALL BOARD - W4L21018
(x3) 5/8"x3 3/4"x26" (16x96x659)



NB01 ARCHED WALL RAIL - W4L20969
(x1) 3/4"x2 7/8"x42" (20x72x1066)



NB03 WALL RAIL - W4L20973
(x2) 3/4"x2 7/8"x47 3/8" (20x72x1202)



NB05 WALL RAIL - W4L20970
(x1) 3/4"x2 7/8"x39" (20x72x991)



NB12 WALL RAIL - W4L20971
(x2) 3/4"x3 1/4"x39" (20x84x991)



MG05 FLOOR BOARD - W4L20990
(x2) 5/8"x3 1/4"x21 1/2" (16x84x547)



MG07 COUNTER TOP - W4L20998
(x1) 5/8"x3 1/4"x35 1/2" (16x84x903)




MJ10 FLOOR BOARD - W4L21001
(x1) 5/8"x5 1/4"x39" (16x133x990)



MS04 FLOOR BOARD - W4L20989
(x6) 5/8"x3 3/4"x21 1/2" (16x96x547)




MS09 FLOOR BOARD - W4L21000
(x8) 5/8"x3 3/4"x19 3/4" (16x96x503)



MS12 FLOOR BOARD - W4L21003
(x2) 5/8"x3 1/2"x39" (16x89x990)



MS21 TOP BOARD - W4L21017
(x1) 5/8"x3 3/4"x26" (16x96x659)




MS23 ROCK WALL BOARD - W4L21019
(x4) 5/8"x3 3/4"x26" (16x96x659)




NB02 WALL RAIL - W4L20966
(x1) 3/4"x2 7/8"x37 1/2" (20x72x952)



NB04 WALL RAIL - W4L20967
(x1) 3/4"x2 7/8"x23 1/4" (20x72x590)




NB06 WALL RAIL - W4L20968
(x1) 3/4"x2 7/8"x20 5/8" (20x72x524)



NB16 WALL RAIL - W4L20982
(x1) 3/4"x2 7/8"x37 1/2" (20x72x952)

OWNER'S MANUAL - PARTS IDENTIFICATION


Wood Components (Not to Scale)




NJ01 FLOOR RAIL - W4L19924
(x1) 3/4"x4 1/8"x58 3/4" (20x106x1492)



NJ02 FLOOR RAIL - W4L19923
(x1) 3/4"x4 1/8"x61 1/4" (20x106x1555)




NJ03 FLOOR RAIL - W4L19926
(x1) 3/4"x4 1/8"x39" (20x106x991)




NJ04 FLOOR RAIL - W4L19925
(x1) 3/4"x4 1/8"x58 3/4" (20x106x1492)




NJ05 FLOOR RAIL - W4L19927
(x1) 3/4"x4 1/8"x20 5/8" (20x106x524)



NJ06 FLOOR RAIL - W4L19928
(x1) 3/4"x4 1/8"x37 1/2" (20x106x952)




NJ07 FLOOR RAIL - W4L19935
(x1) 3/4"x4 1/8"x40 5/8" (20x106x1031)




OB02 SWING BEAM MOUNT - W4L20964
(x1) 1 1/8"x2 7/8"x59 5/8" (30x72x1515)




OB04 BALCONY UPRIGHT - W4L19933
(x2) 1 1/8"x2 3/8"x30 3/4" (30x60x782)



OG01 UPRIGHT ASSEMBLY - W2A04237
(x1) 1 1/8"x3 1/4"x85 5/8" (30x84x2174)



OG02 UPRIGHT - W4L19920
(x1) 1 1/8"x3 1/4"x85 5/8" (30x84x2174)




OG03 UPRIGHT - W4L19921
(x1) 1 1/8"x3 1/4"x85 5/8" (30x84x2174)



OG04 UPRIGHT - W4L19922
(x1) 1 1/8"x3 1/4"x85 5/8" (30x84x2174)

OWNER'S MANUAL - PARTS IDENTIFICATION


Wood Components (Not to Scale)



OG05 UPRIGHT - W4L21027
(x1) 1 1/8"x3 1/4"x80 3/4" (30x84x2052)



OG06 UPRIGHT - W4L19929
(x1) 1 1/8"x3 1/4"x80 3/4" (30x84x2052)



OG07 END SUPPORT - W4L21024
(x1) 1"x3 1/2"x41" (30x84x1045)



OG08 GROUND BOARD - W4L21022
(x1) 1 1/8"x3 1/4"x75" (30x84x1905)



OG09 UPRIGHT - W4L20961
(x4) 1 1/8"x3 1/4"x12 3/4" (30x84x325)



OG12 TABLE SUPPORT - W4L20975
(x1) 1 1/8"x3 1/4"x22 3/8" (30x84x567)



OG13 LEFT RAIL - W4L21014
(x1) 1 1/8"x3 1/4"x54 3/4" (30x84x1392)



OG14 RIGHT RAIL - W4L21015
(x1) 1 1/8"x3 1/4"x54 3/4" (30x84x1392)



OG15 LEFT UPRIGHT - W4L21009
(x1) 1 1/8"x3 1/4"x58" (30x84x1474)



OG16 RIGHT UPRIGHT - W4L21010
(x1) 1"x3 3/8"x58" (30x84x1474)



OO04 TABLE SUPPORT - W4L20977
(x1) 1 1/8"x1 1/8"x12 3/8" (30x30x313)



OR01 DECK BRACE - W4L21008
(x4) 1 1/8"x2 3/8"x13 1/8" (30x60x332)



OR02 FLOOR JOIST - W4L20994
(x1) 1 1/8"x2 3/8"x37 1/2" (30x60x952)



OR05 FLOOR JOIST - W4L20995
(x1) 1 1/8"x2 3/8"x20 1/2" (30x60x520)



OR07 ANGLE BRACE - W4L20979
(x2) 1 1/8"x2 3/8"x10" (30x60x254)



OR08 SUPPORT BLOCK - W4L20996
(x1) 1 1/8"x2 3/8"x5 3/4" (30x60x145)



OR09 SUPPORT BLOCK - W4L21006
(x1) 1 1/8"x2 3/8"x5 3/4" (30x60x145)



OS01 SWING BEAM MOUNT - W4L20965
(x1) 1 1/8"x3 3/4"x60 3/8" (30x96x1535)



PP01 SUPPORT BOARD - W4L20991
(x3) 1 1/4"x1 1/4"x35 1/8" (32x32x891)




PP02 SUPPORT BOARD - W4L20993
(x2) 1 1/4"x1 1/4"x19 1/4" (32x32x489)




PP03 SUPPORT BOARD - W4L20992
(x1) 1 1/4"x1 1/4"x35" (32x32x890)

OWNER'S MANUAL - PARTS IDENTIFICATION


Wood Components (Not to Scale)

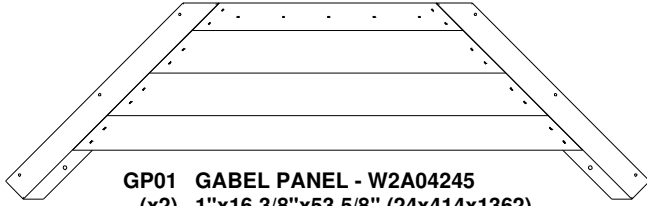


GP01 GABEL PANEL - W2A04245
(x2) 1"x16 3/8"x53 5/8" (24x414x1362)

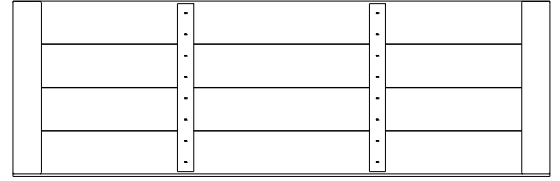


RP01 ROOF PANEL - W2A04246
(x4) 1 3/8"x19 3/8"x46 3/4" (35x370x1137)

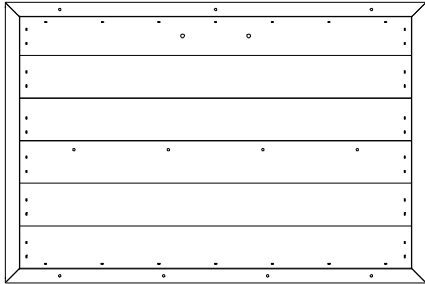


WP01 WALL PANEL - W2A04238
(x1) 1"x20 3/8"x37 3/4" (24x593x891)

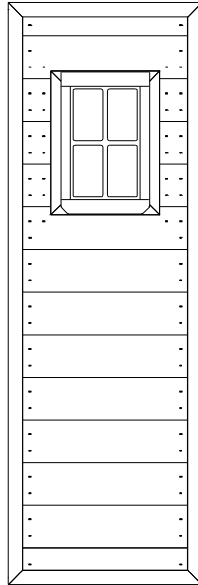


WP02 WALL PANEL - W2A04239
(x4) 1 5/8"x18 3/4"x40" (36x410x1230)

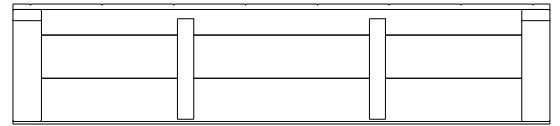


RP02 ROOF PANEL - W2A04247
(x2) 1 3/8"x10"x44 3/4" (35x253x1137)

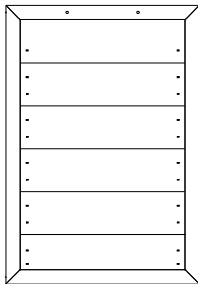


WP04 WALL PANEL - W2A04242
(x2) 1"x16 1/8"x23 1/4" (24x410x589)

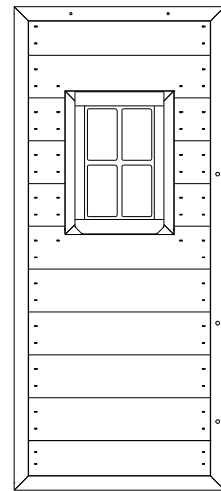


WP03 WALL PANEL - W2A04241
(x1) 1 3/8"x17 1/2"x40 1/4" (36x446x1022)

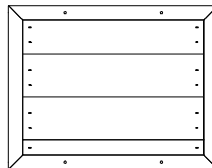


WP06 WALL PANEL - W2A04244
(x1) 1"x11 3/8"x17 1/2" (24x346x444)

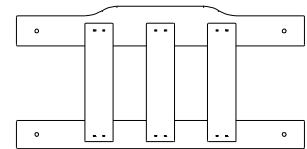

WP07 BENCH BACK - W2A04240
(x2) 1 1/8"x11 7/8"x24 1/4" (28x301x610)

























WP05 WALL PANEL - W2A04243
(x2) 1"x8 3/8"x39 1/8" (24x214x1022)

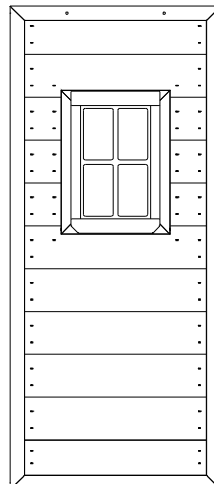

WP08 WALL PANEL - W2A04248
(x1) 1 5/8"x18 3/4"x40" (36x446x1022)

OWNER'S MANUAL - PARTS IDENTIFICATION

Hardware Components

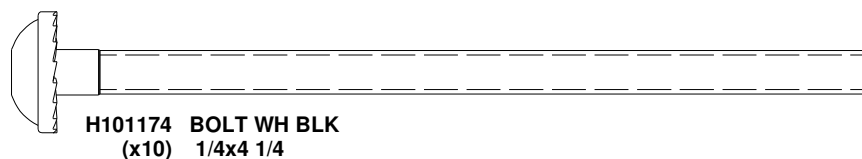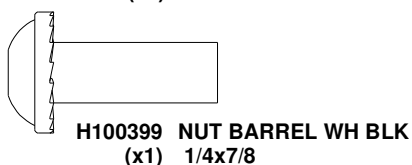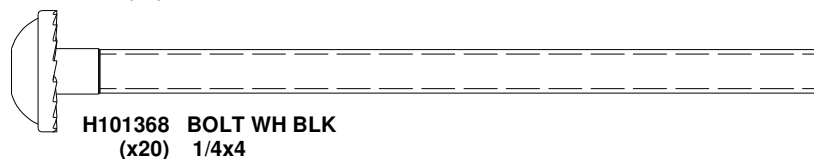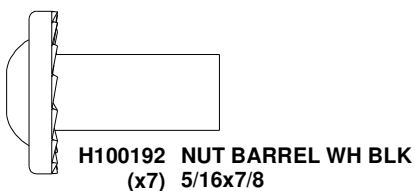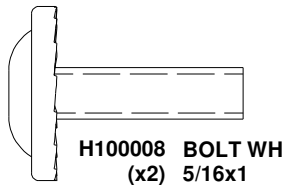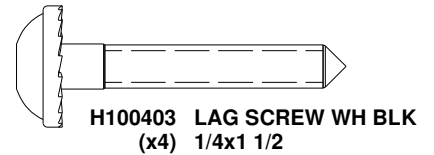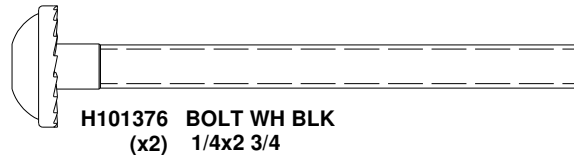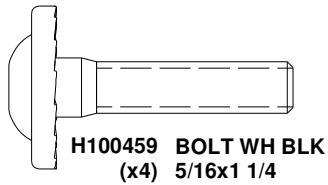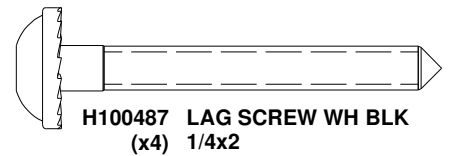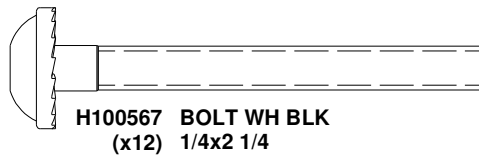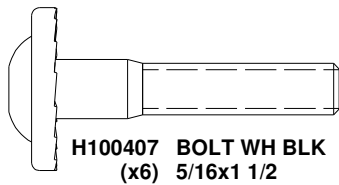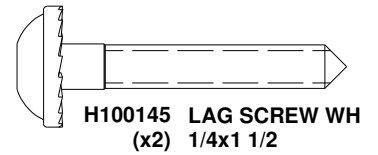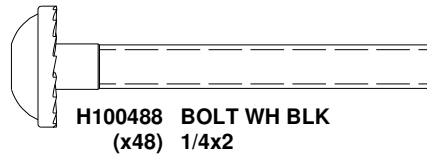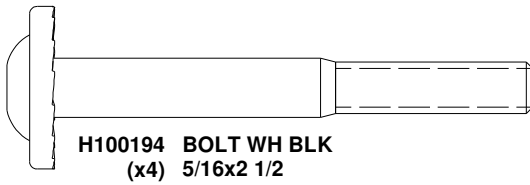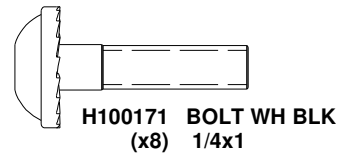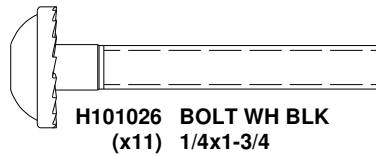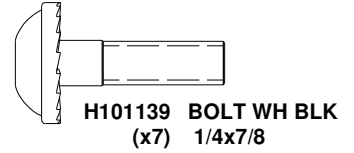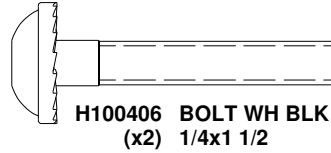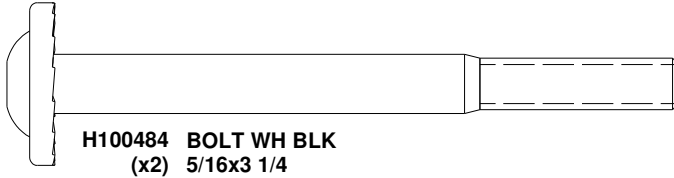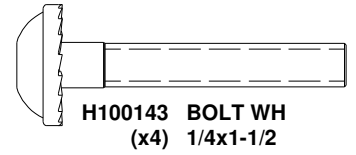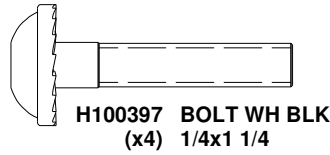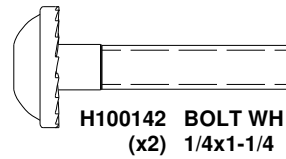


OWNER'S MANUAL - PARTS IDENTIFICATION


Hardware Components




H100498 BOLT HEX - BLK
(x4) 5/16x1 1/2




H100063 BOLT PTH
(x20) 1/4x3/4

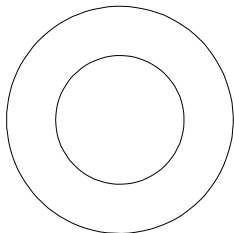


H100103 WASHER SAFETY
(x6) 17x30

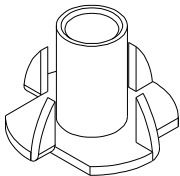


H100379 T-NUT BLK
(x26) 5/16




H100391 SCREW PFH BLK
(x42) 8x2



H100111 SCREW PFH
(x34) 8x2




H100089 SCREW PFH
(x12) 8x1 3/4



H100382 SCREW PFH BLK
(x37) 8x1 3/4



H100086 SCREW PFH
(x215) 8x1 1/2



H100200 SCREW PFH BLK
(x36) 8x1 1/2



H100087 SCREW PFH
(x2) 8x1 1/4




H100088 SCREW PFH
(x80) 8x1 1/8




H100124 SCREW PFH
(x4) 8 x 1/2




H100202 SCREW PWH BLK
(x36) 8x5/8




H100128 SCREW PWH
(x22) 8x5/8




H100138 WASHER LOCK EXT
(x8) 6x15




H100405 WASHER LOCK EXT BLK
(x132) 6x15




H100108 WASHER LOCK INT
(x20) 8x15




H100477 WASHER SPLIT BLK
(x4) 5/16

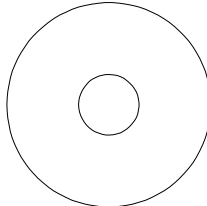


H100478 WASHER FLAT BLK
(x4) 8x27

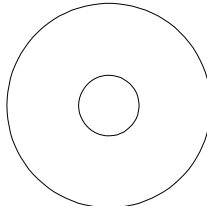


H100105 WASHER FLAT
(x6) 8x27

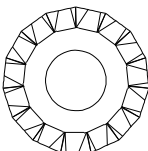


H100198 WASHER LOCK EXT BLK
(x6) 8x19

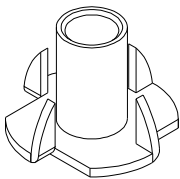

H100074 T-NUT
(x2) 5/16

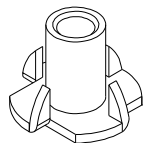


H100398 T-NUT BLK
(x130) 1/4

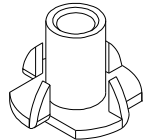


H100072 T-NUT
(x26) 1/4




H100110 NUT LOCK
(x6) 5/16




H101100 MAGNETIC DRIVER
(x1)



H100764 SCREW SETTER
(x1)




H100147 TORX BIT
(x1) T-30

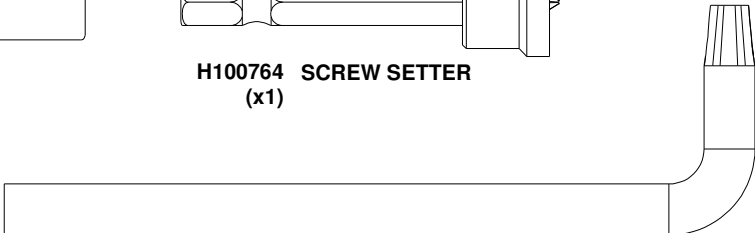


H100114 TORX WRENCH
(x1) T-30

OWNER'S MANUAL - PARTS IDENTIFICATION

Accessory Components (Not to Scale)



A100087 ROPE-CHAIN
(x4) GREEN 51.25"




A100083 ROPE-CHAIN
(x2) GREEN 33"




A4M02894 SWING HANGER
(x6) QUICK LINK




A6P00054 SWING SEAT
(x2) GREEN 22"




A100069 QUICK LINK
(x6)

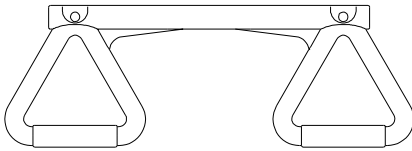


A6P00034 TRAPEZE YELLOW
(x1)

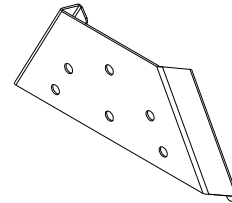


A4M01169 A-FRAME
(x1) BRACKET

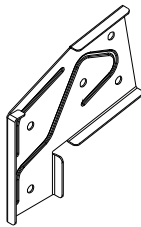

A4M02890 SWING BEAM
(x1) BRACKET-LEFT

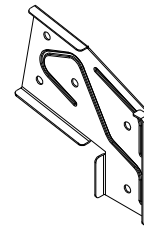


A4M02891 SWING BEAM
(x1) BRACKET-RIGHT

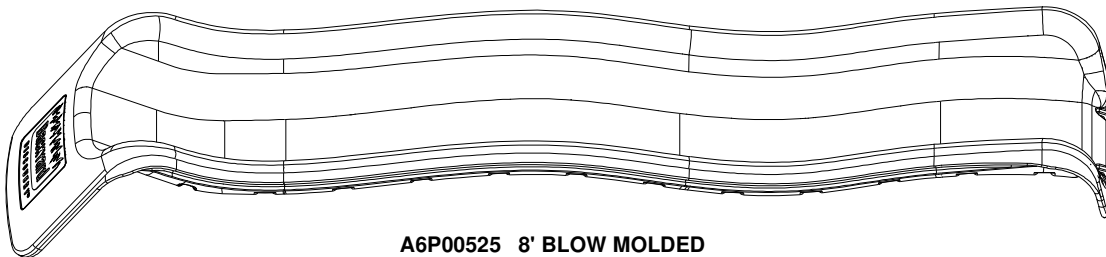


A6P00525 8' BLOW MOLDED
(x1) SLIDE - GREEN




A100134 HAND GRIP GREEN
(x2) 816 C/C

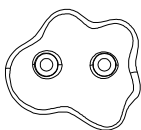


A6P00038 RED HC ROCK #1
(x2)

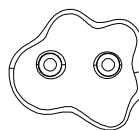

A6P00042 YELLOW HC ROCK
(x2) #1

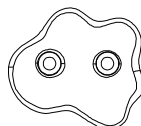


A6P00040 BLUE HC ROCK #1
(x3)

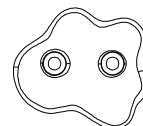

A6P00036 GREEN HC ROCK
(x3) #1

OWNER'S MANUAL - PARTS IDENTIFICATION


Accessory Components (Not to Scale)




A4M04303 L BRACKET
(x4) 2.5x38x38x49




A100164 BYD ID TAG
(x1) (LARGE)

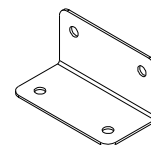

A100140 L BRACKET
(x2) 66x66x127




A6P00303 HAND GRIP
(x4) YELLOW

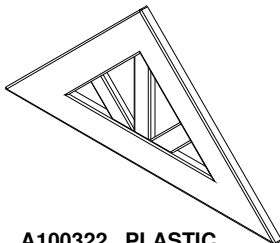


A100322 PLASTIC
(x2) SUNBURST




A100178 AUGER GROUND
(x6) STAKE

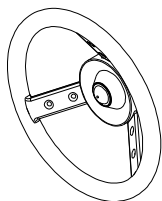


A100107 STEERING WHEEL
(x1)

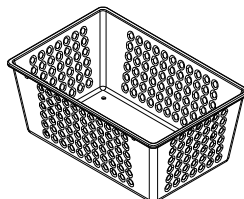


A6P00069 FRUIT BASKET KIT
(x1)

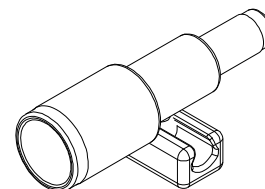


A6P00096 TELESCOPE
(x1)

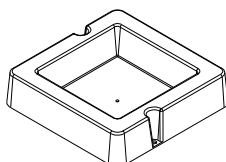

A6P00032 SURFACE MOUNT
(x1) BASIN

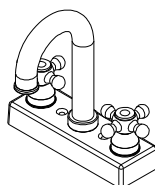

A6P00024 FAUCET KIT
(x1)

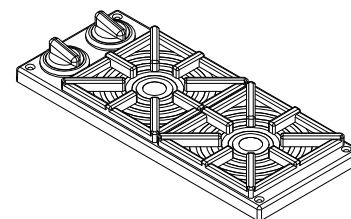

A6P00025 STOVE KIT
(x1)




A6P00336 BOIL POT
(x1)



A6P00338 FRY PAN
(x1)




A6P00337 POT/PAN LID
(x2)




A6P00410 PICKET PAL
(x1)



A6P00339 SPATULA
(x1)



A6P00340 LADLE
(x1)



A4M04561 BRACKET
(x8)


PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

WOOD PARTS:


- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.

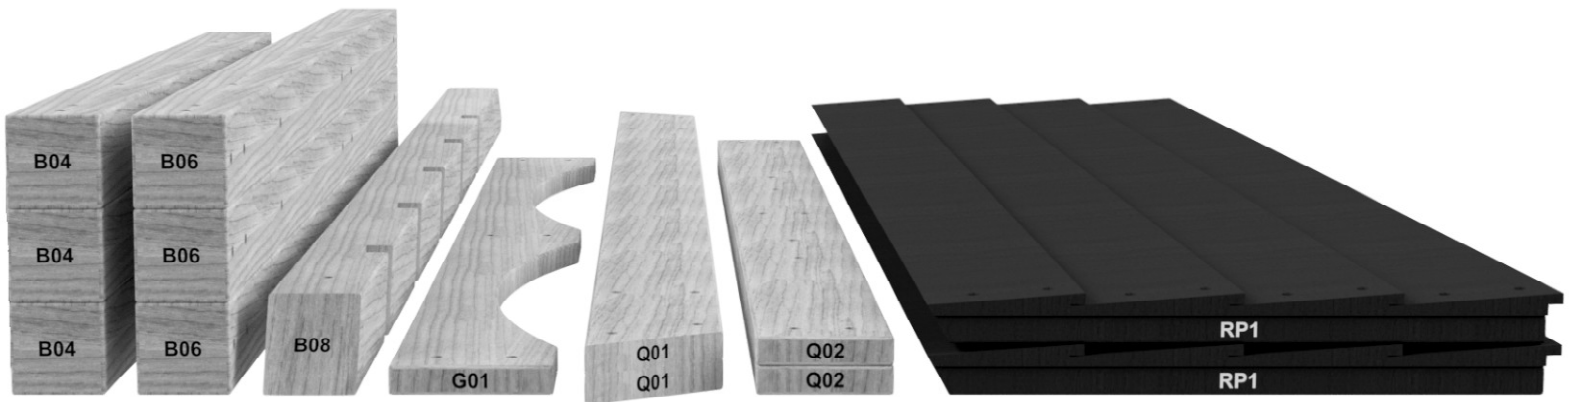

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

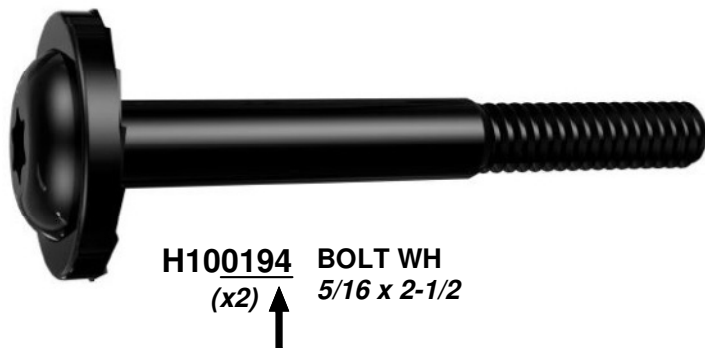

PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



**Cordless Drill or
Electric Drill**



**Drill Attachments:
Phillips Head**



**1/8", 3/16", 3/8" & 7/16"
Drill Bits**



Phillips Screw Driver



Open End Wrenches 1/2" & 9/16"



**3/8" Drive Ratchet, 1/2" &
9/16" STD Sockets 1/2" & 9/16" Deep
Sockets**




Claw Hammer



Rubber Mallet - Optional



Tape Measure

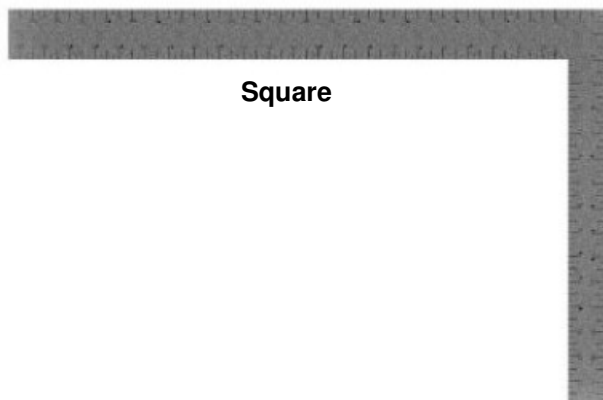

Square



Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.


1. **Printed Assembly Manual** included with your set
2. **BILT APP** - 3D interactive instructions
3. **Combination of the Printed Manual and BILT APP** (Note: Step numbers can differ between the two methods)



Scan for easy 3D instructions

Download the BILT app before you begin



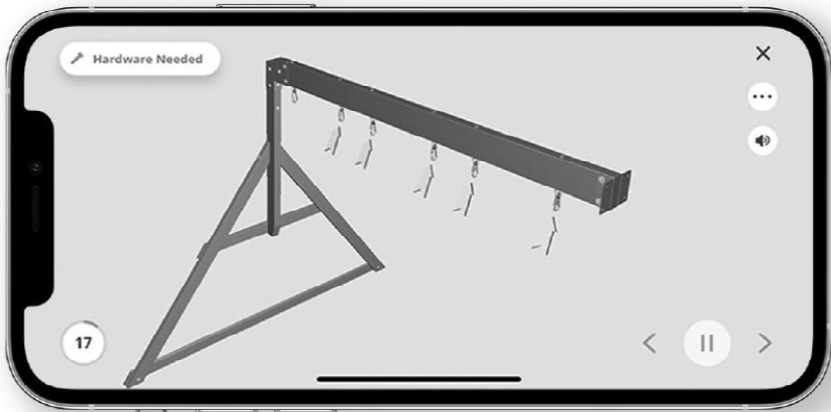

STEP 1 - LADDER

QTY	PART NUMBER	DESCRIPTION
8	H100391	SCREW PFH 8x2 BLK




HG71 LADDER RUNG - W4L21012
(x4) 1"x3 1/4"x16" (24x84x405)




OG15 LEFT UPRIGHT - W4L21009
(x1) 1 1/8"x3 1/4"x58" (30x84x1474)

ALIGN PILOT HOLES

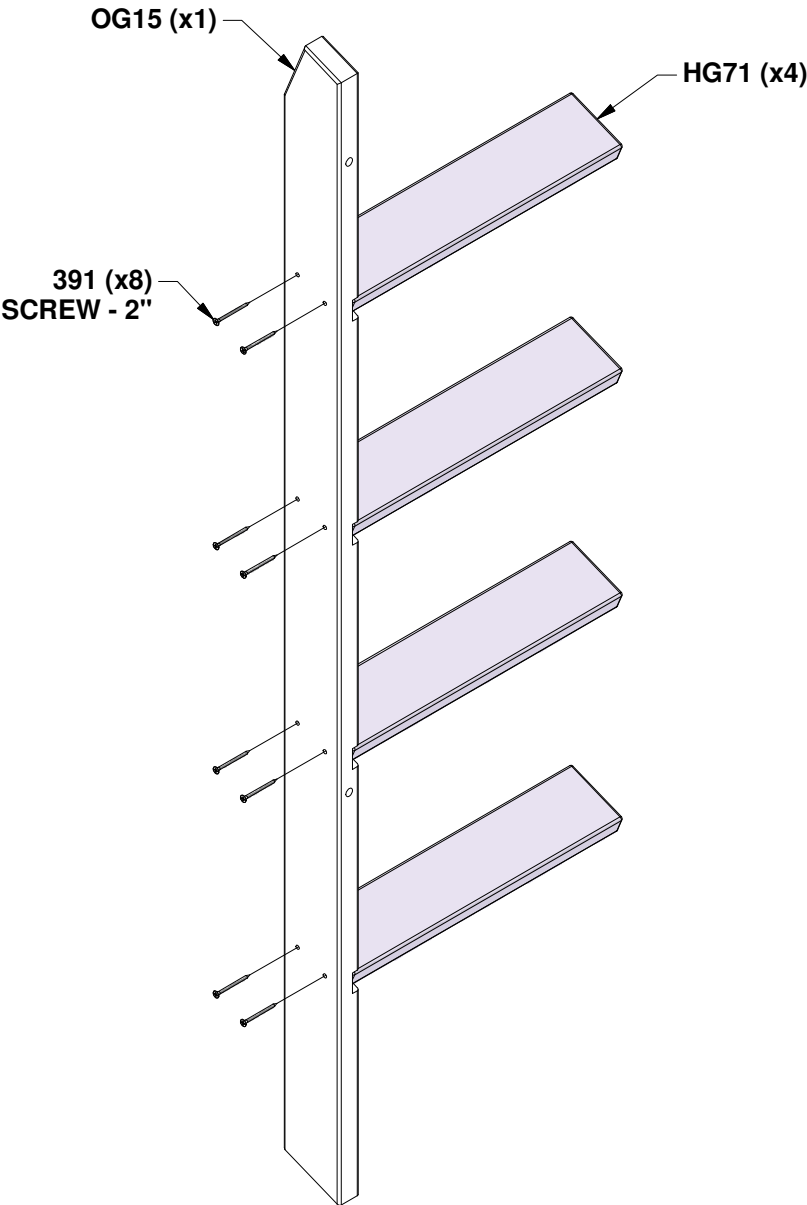


STEP 2 - LADDER

QTY	PART NUMBER	DESCRIPTION
8	H100391	SCREW PFH 8x2 BLK



OG16 RIGHT UPRIGHT - W4L21010
(x1) 1"x3 3/8"x58" (30x84x1474)

ALIGN PILOT HOLES

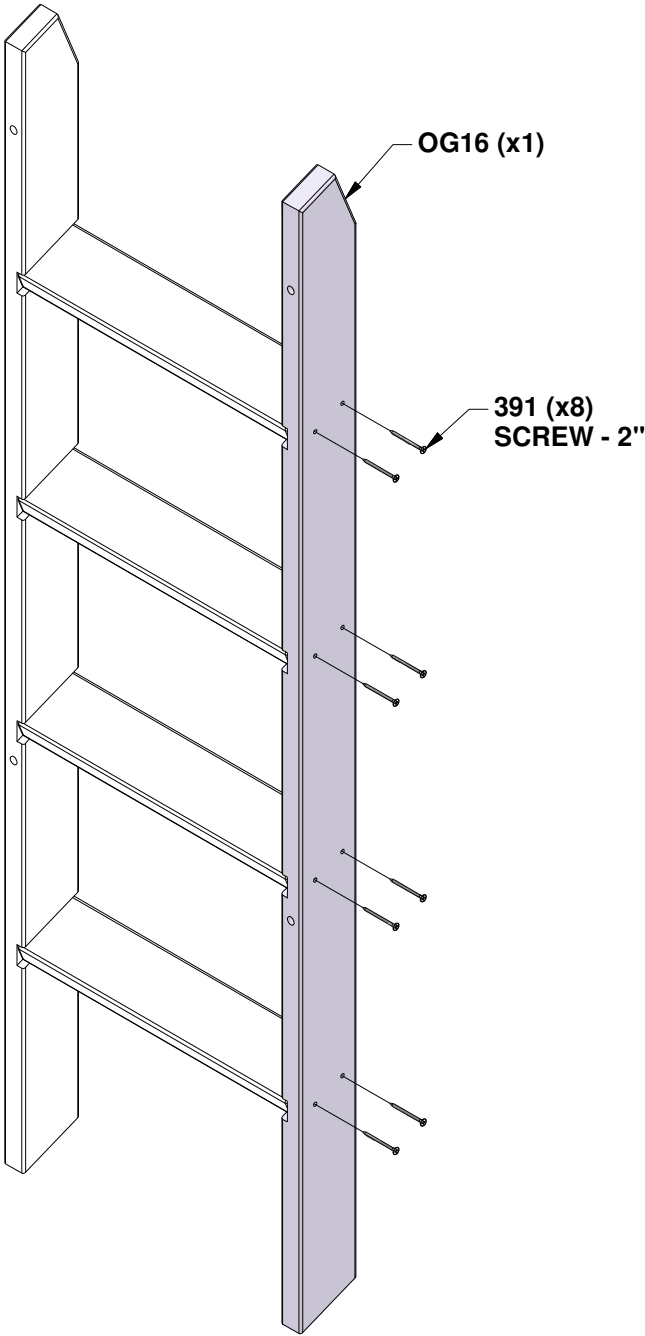


STEP 3 - LADDER

QTY	PART NUMBER	DESCRIPTION
4	H100391	SCREW PFH 8x2 BLK



MB70 REAR SUPPORT - W4L21011
(x1) 5/8"x2 7/8"x17 1/2" (16x72x445)

ALIGN PILOT HOLES

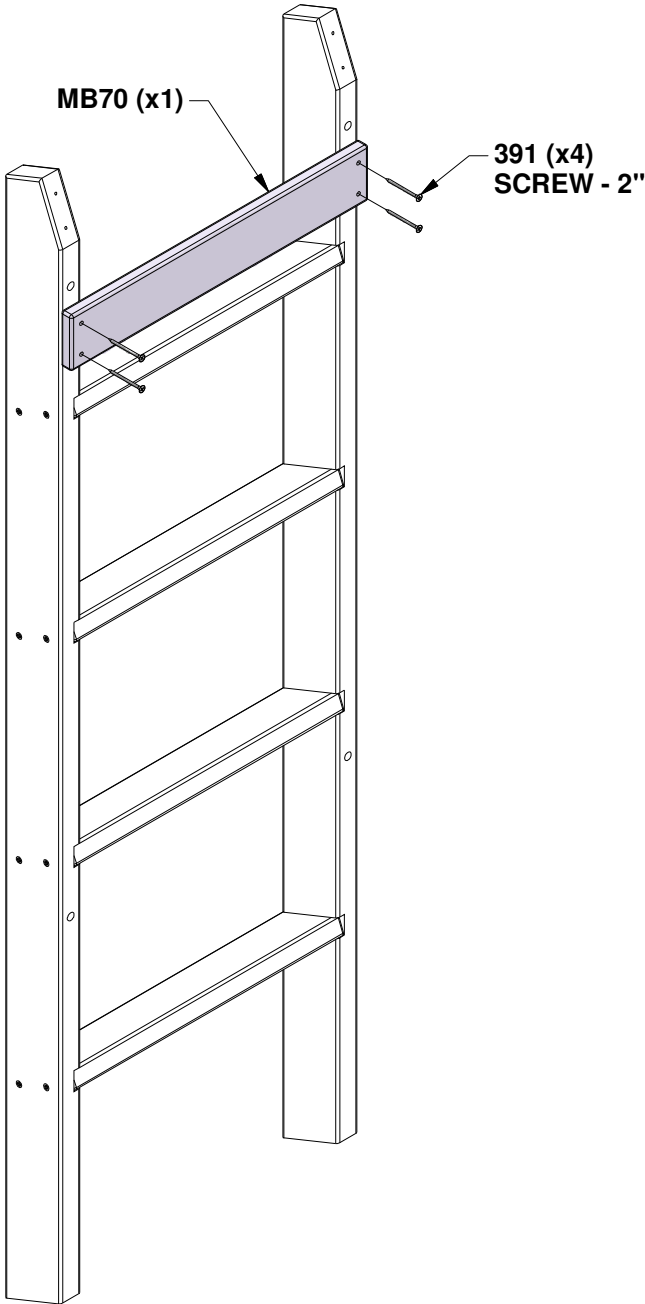


STEP 4 - LADDER

QTY	PART NUMBER	DESCRIPTION
4	H100391	SCREW PFH 8x2 BLK





HG70 ATTACHMENT BOARD - W4L21013
(x1) 1"x3 1/4"x17 1/2" (24x84x445)

ALIGN PILOT HOLES

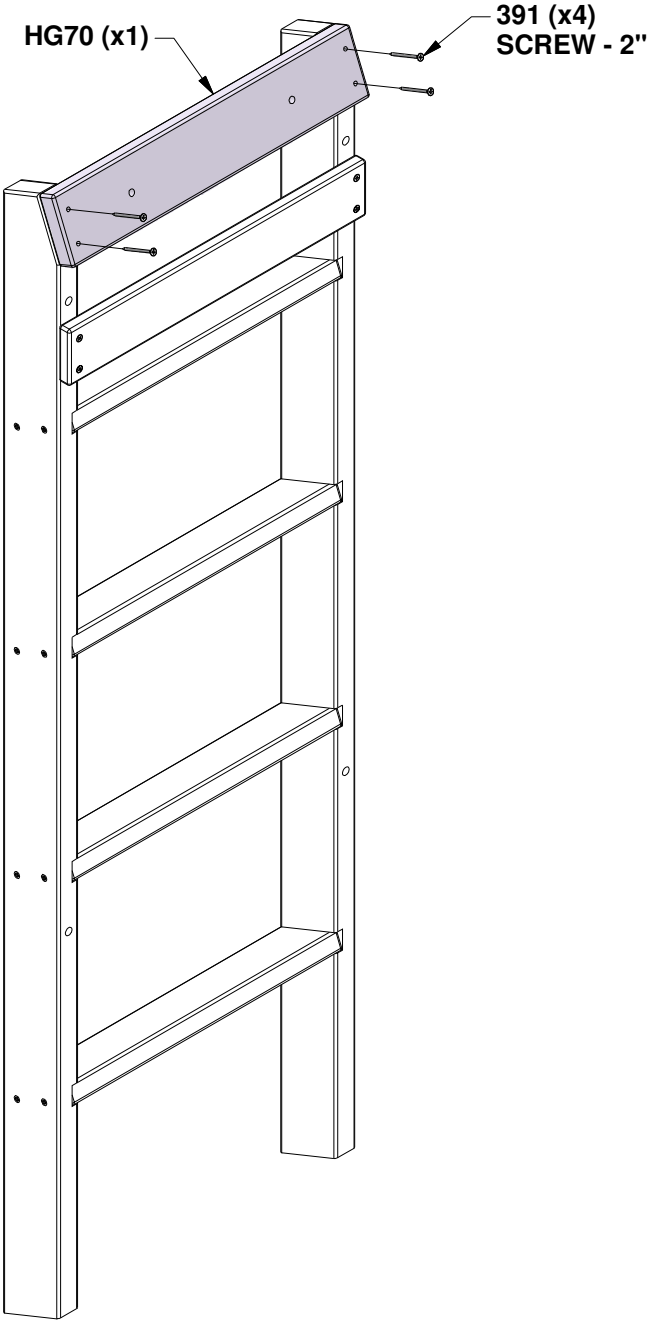

STEP 5 - LADDER

QTY	PART NUMBER	DESCRIPTION
4	H100379	T-NUT 5/16 BLK
4	H100503	BOLT WH 5/16x3-1/2 BLK

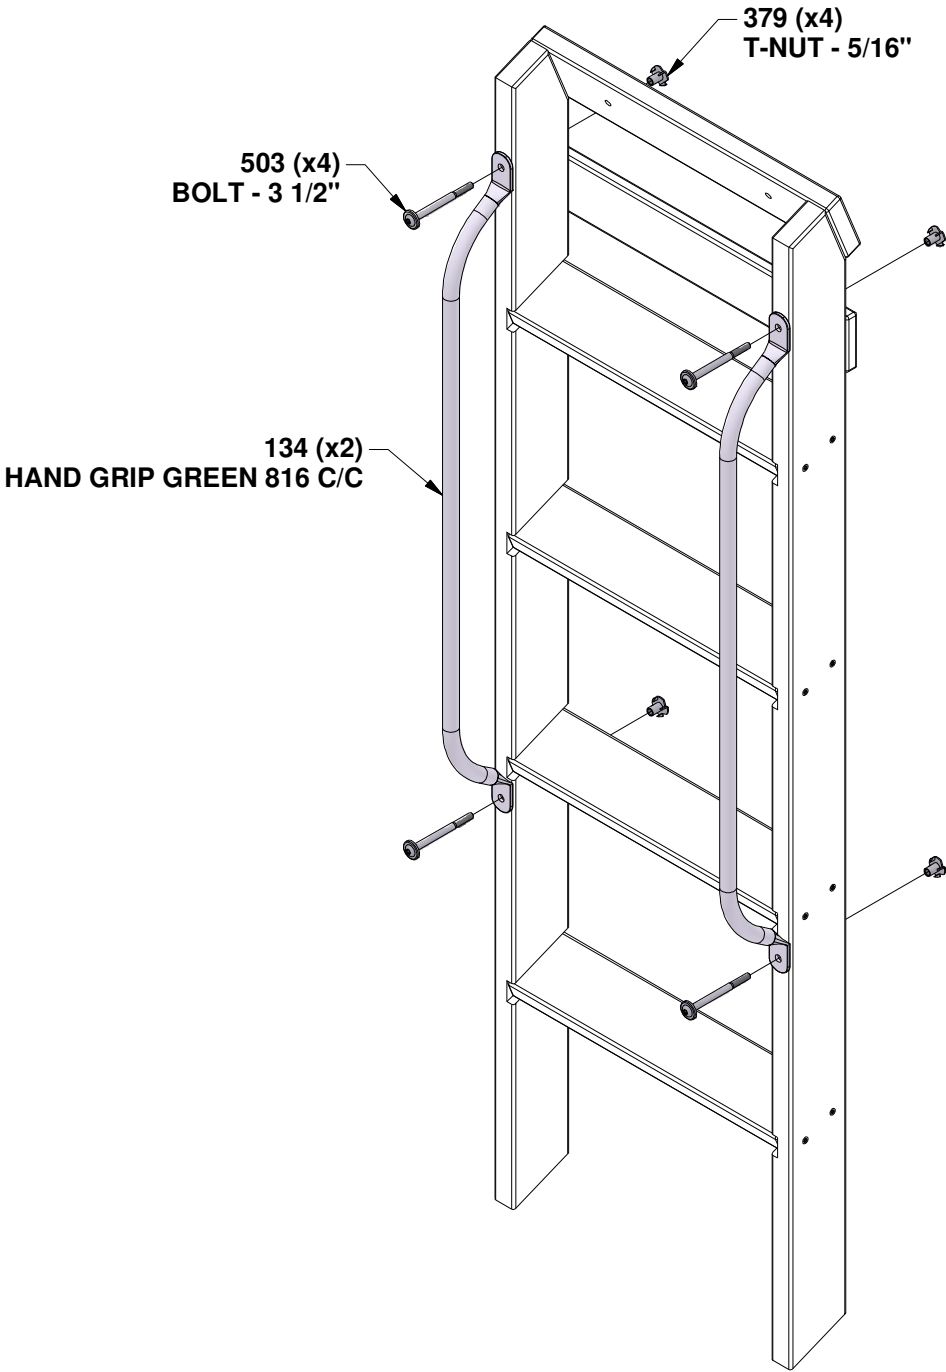


STEP 1 - ROCK WALL




MS22 ROCK WALL BOARD - W4L21018
(x3) 5/8"x3 3/4"x26" (16x96x659)




MS23 ROCK WALL BOARD - W4L21019
(x4) 5/8"x3 3/4"x26" (16x96x659)




A6P00036 GREEN HC ROCK
(x3) #1



A6P00042 YELLOW HC ROCK
(x2) #1





A6P00040 BLUE HC ROCK #1
(x3)



A6P00038 RED HC ROCK #1
(x2)


QTY	PART NUMBER	DESCRIPTION
20	H100063	BOLT WH 1/4x3/4
20	H100072	T-NUT 1/4
20	H100108	WASHER LOCK INT 8x15

INSTALL T-NUTS IN WOOD FIRST

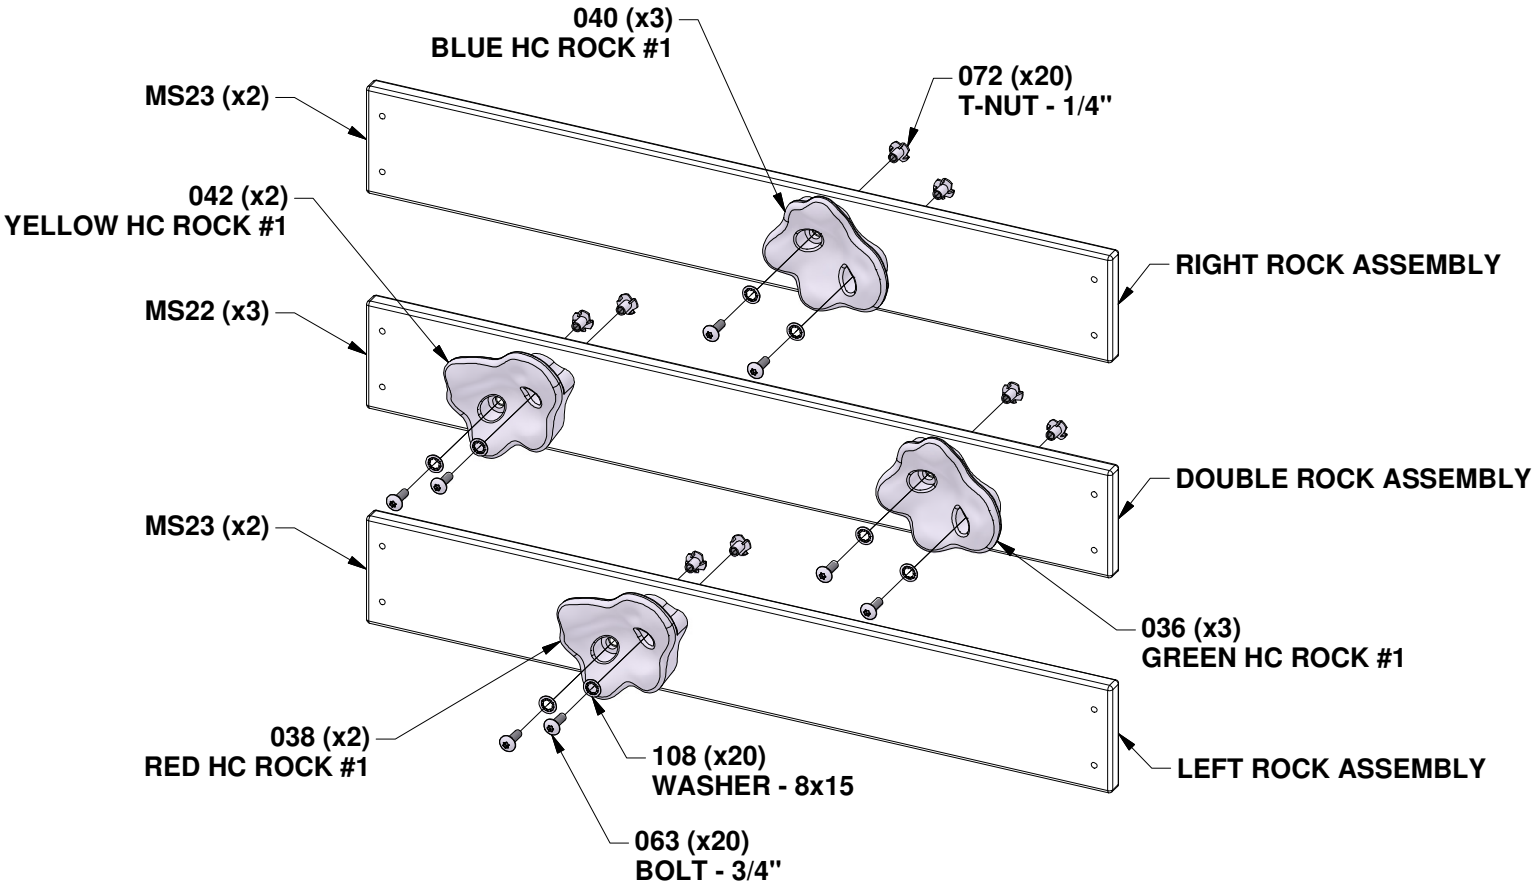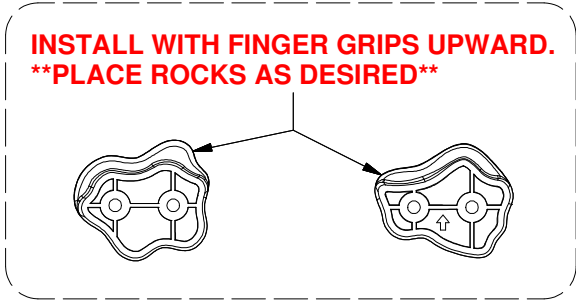

STEP 2 - ROCK WALL




QTY	PART NUMBER	DESCRIPTION
56	H100086	SCREW PFH 8x1-1/2

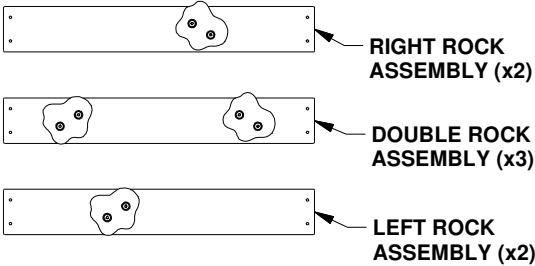

MS20 ROCK WALL BOARD - W4L21016
(x7) 5/8"x3 3/4"x26" (16x96x659)

OG13 LEFT RAIL - W4L21014
(x1) 1 1/8"x3 1/4"x54 3/4" (30x84x1392)

OG14 RIGHT RAIL - W4L21015
(x1) 1 1/8"x3 1/4"x54 3/4" (30x84x1392)

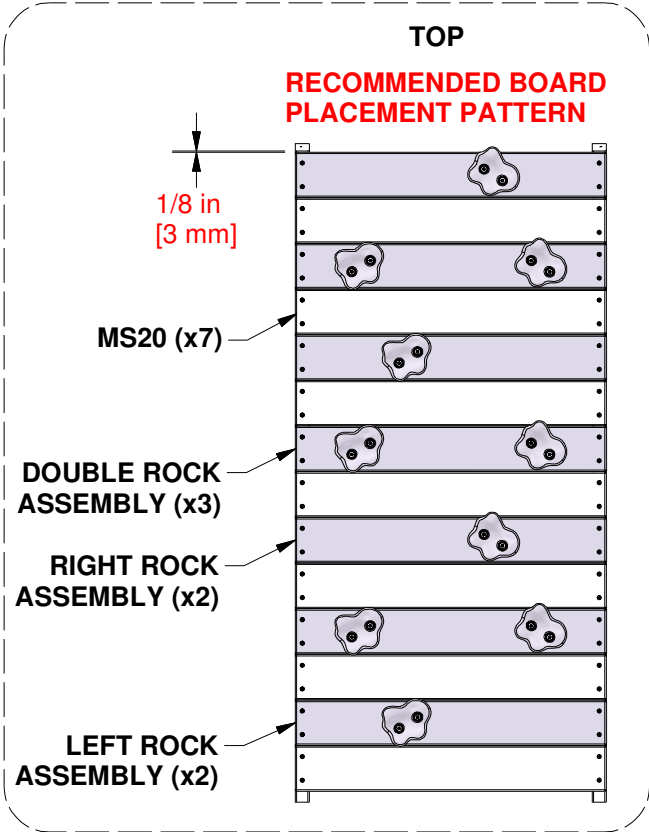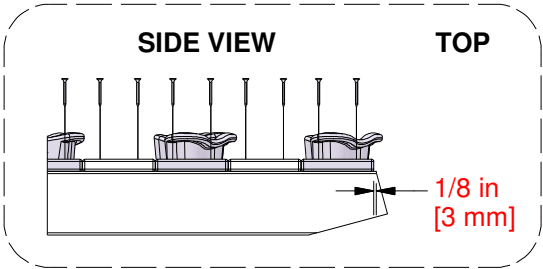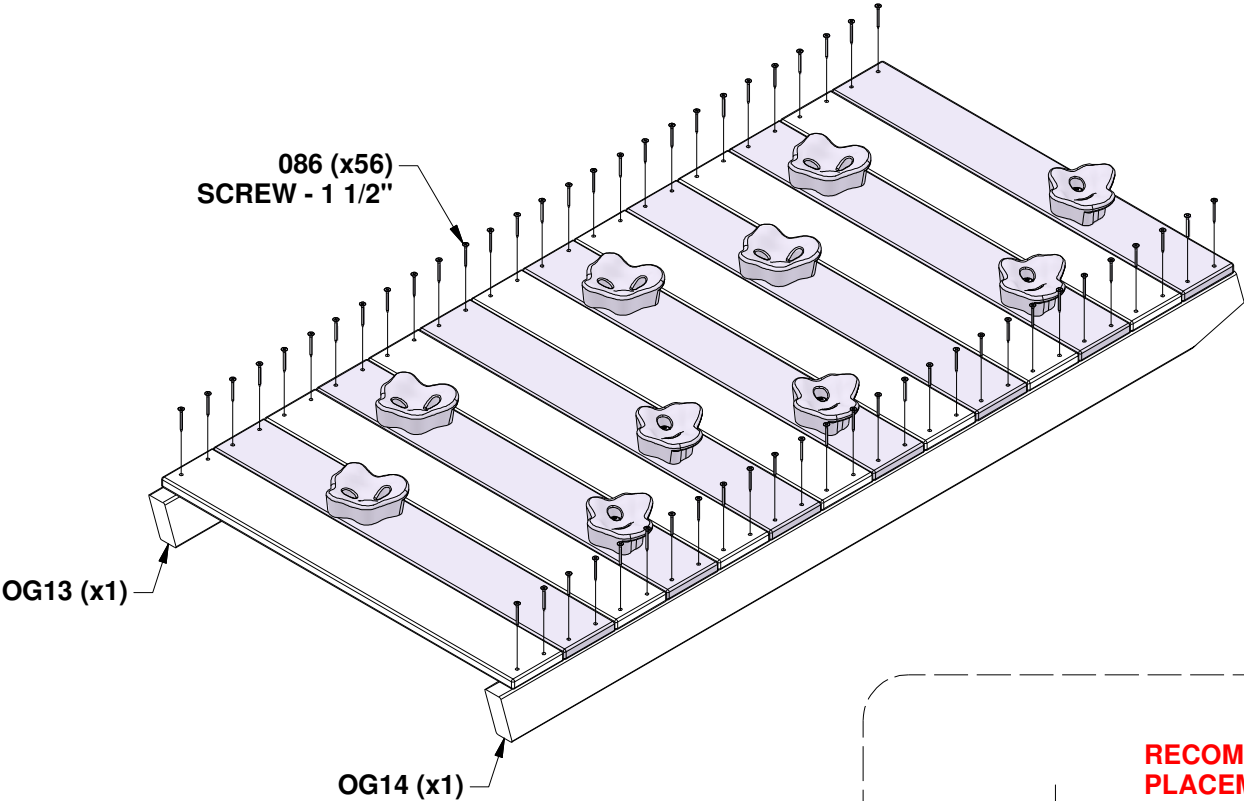



STEP 3 - ROCK WALL

QTY	PART NUMBER	DESCRIPTION
2	H100200	SCREW PFH 8x1-1/2 BLK



MS21 TOP BOARD - W4L21017
(x1) 5/8"x3 3/4"x26" (16x96x659)

ALIGN PILOT HOLES

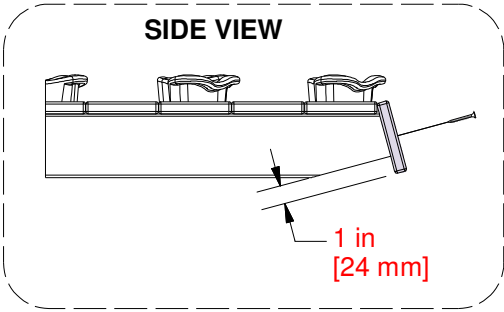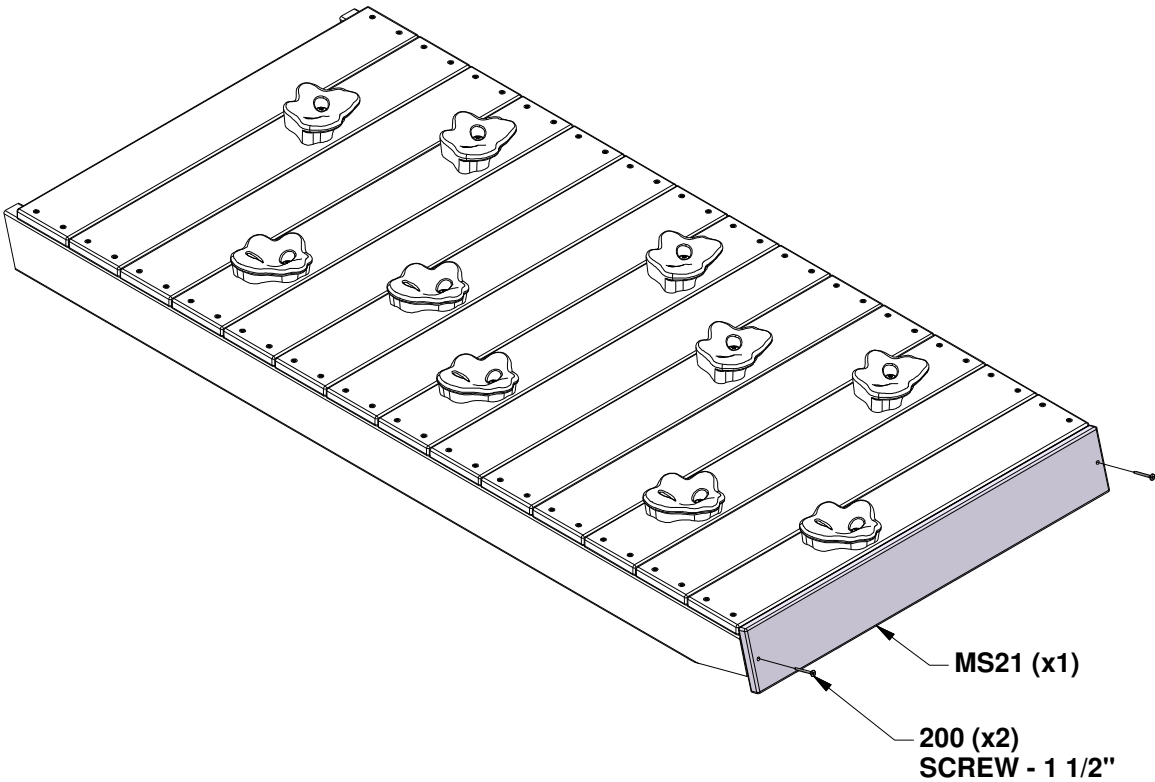




STEP 4 - ROCK WALL



HG75 ATTACHMENT BOARD - W4L21020
(x1) 1"x3 1/4"x26" (24x84x659)




QTY	PART NUMBER	DESCRIPTION
4	H100391	SCREW PFH 8x2 BLK
2	H100398	T-NUT 1/4 BLK

INSTALL T-NUTS IN WOOD FIRST
ALIGN PILOT HOLES

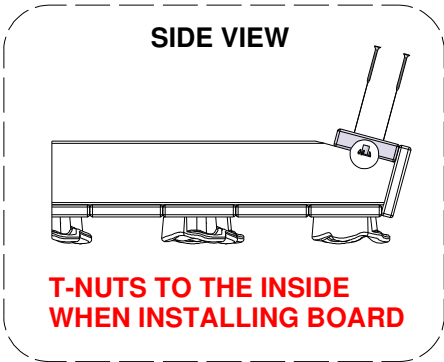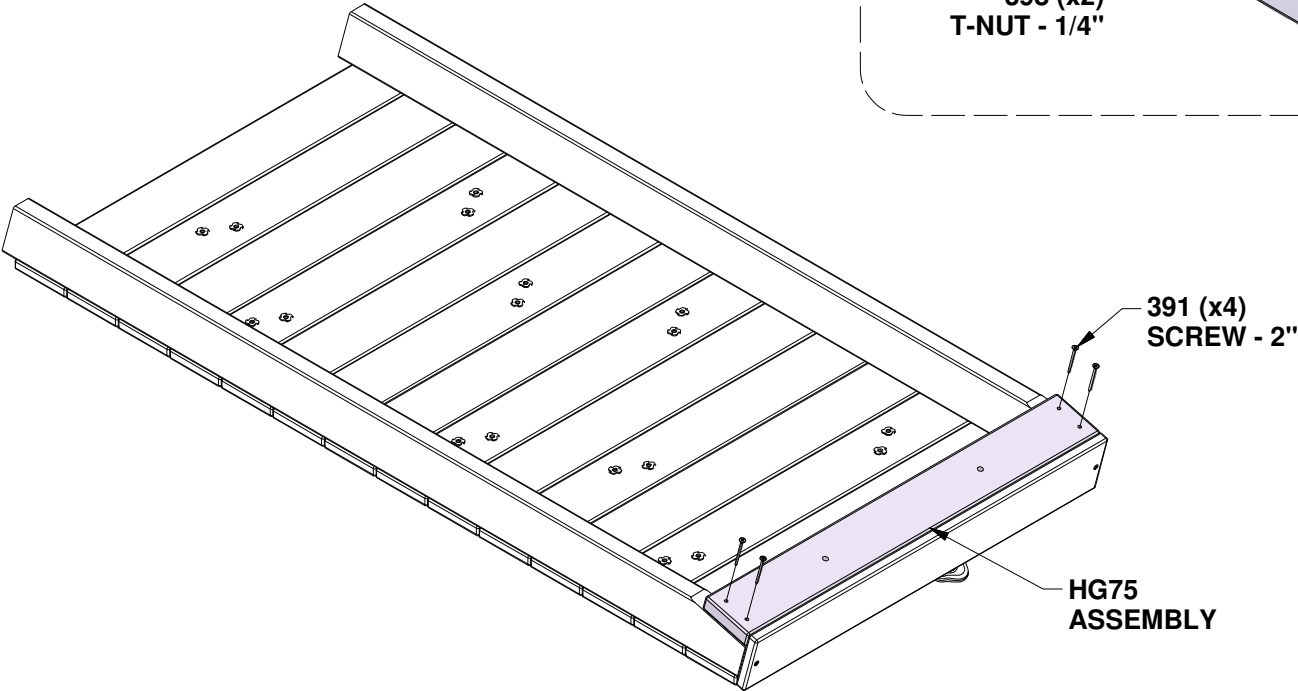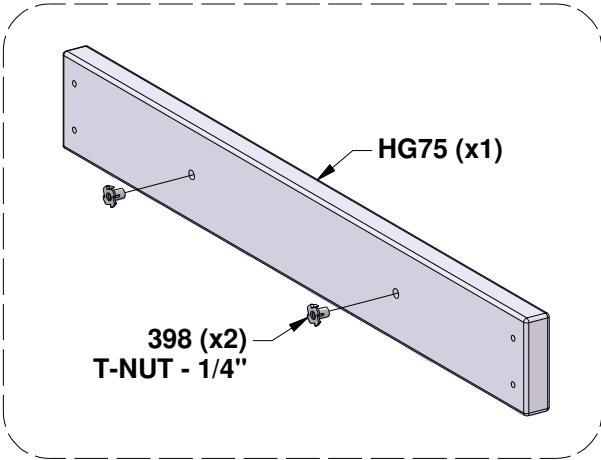


STEP 1 - SWING BEAM

QTY	PART NUMBER	DESCRIPTION
5	H100192	NUT BARREL WH 5/16x7/8 BLK
5	H100416	BOLT WH 5/16x3 BLK

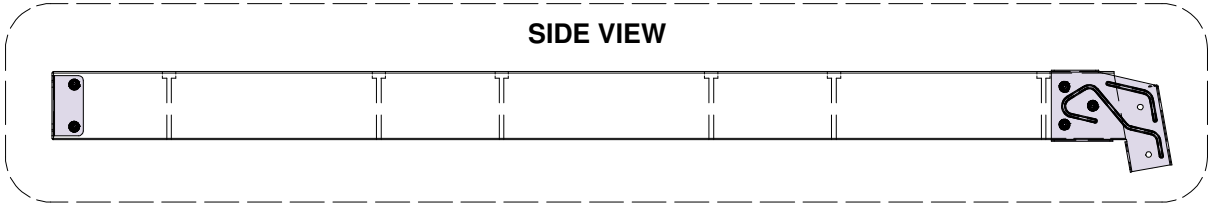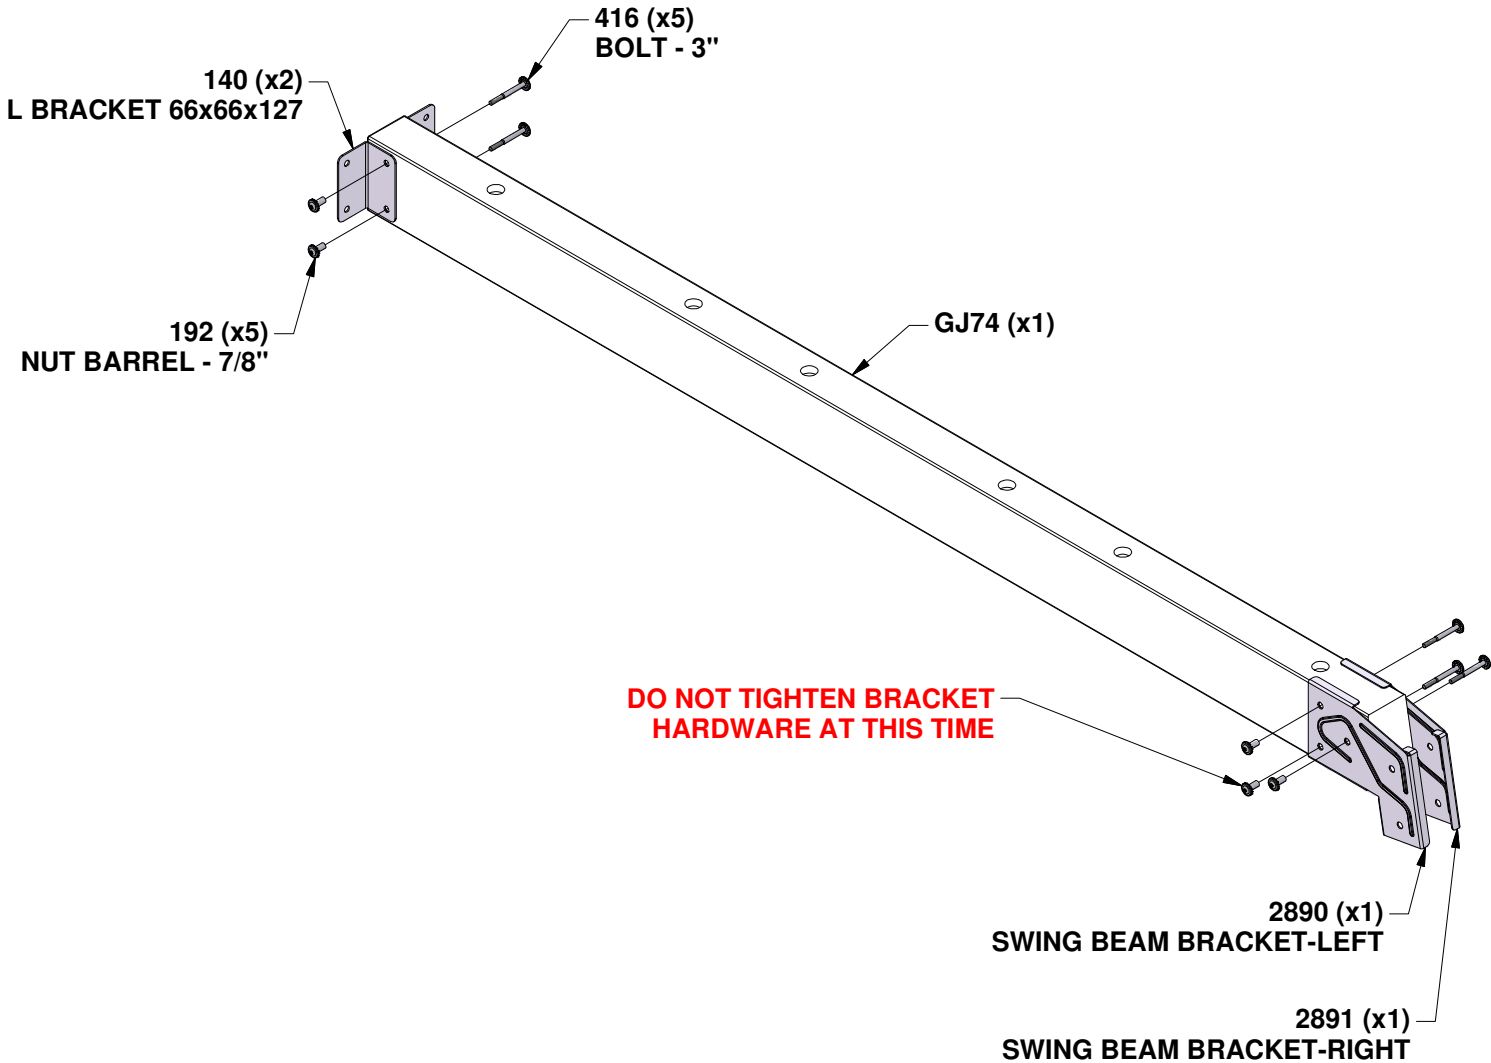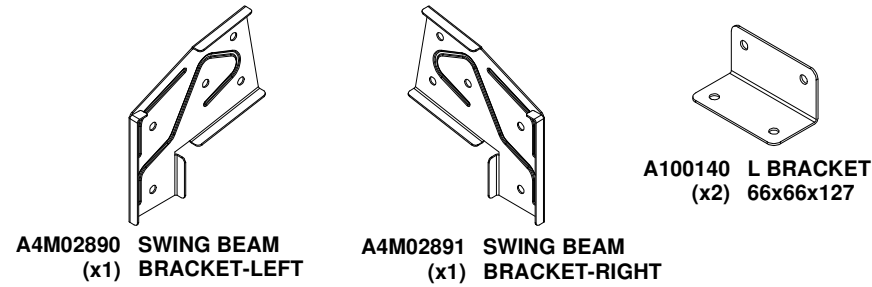


STEP 2 - SWING BEAM



A4M02894 SWING HANGER
(x6) QUICK LINK


QTY	PART NUMBER	DESCRIPTION
6	H100103	WASHER SAFETY 17x30
6	H100105	WASHER FLAT 8x27
6	H100110	NUT LOCK 5/16

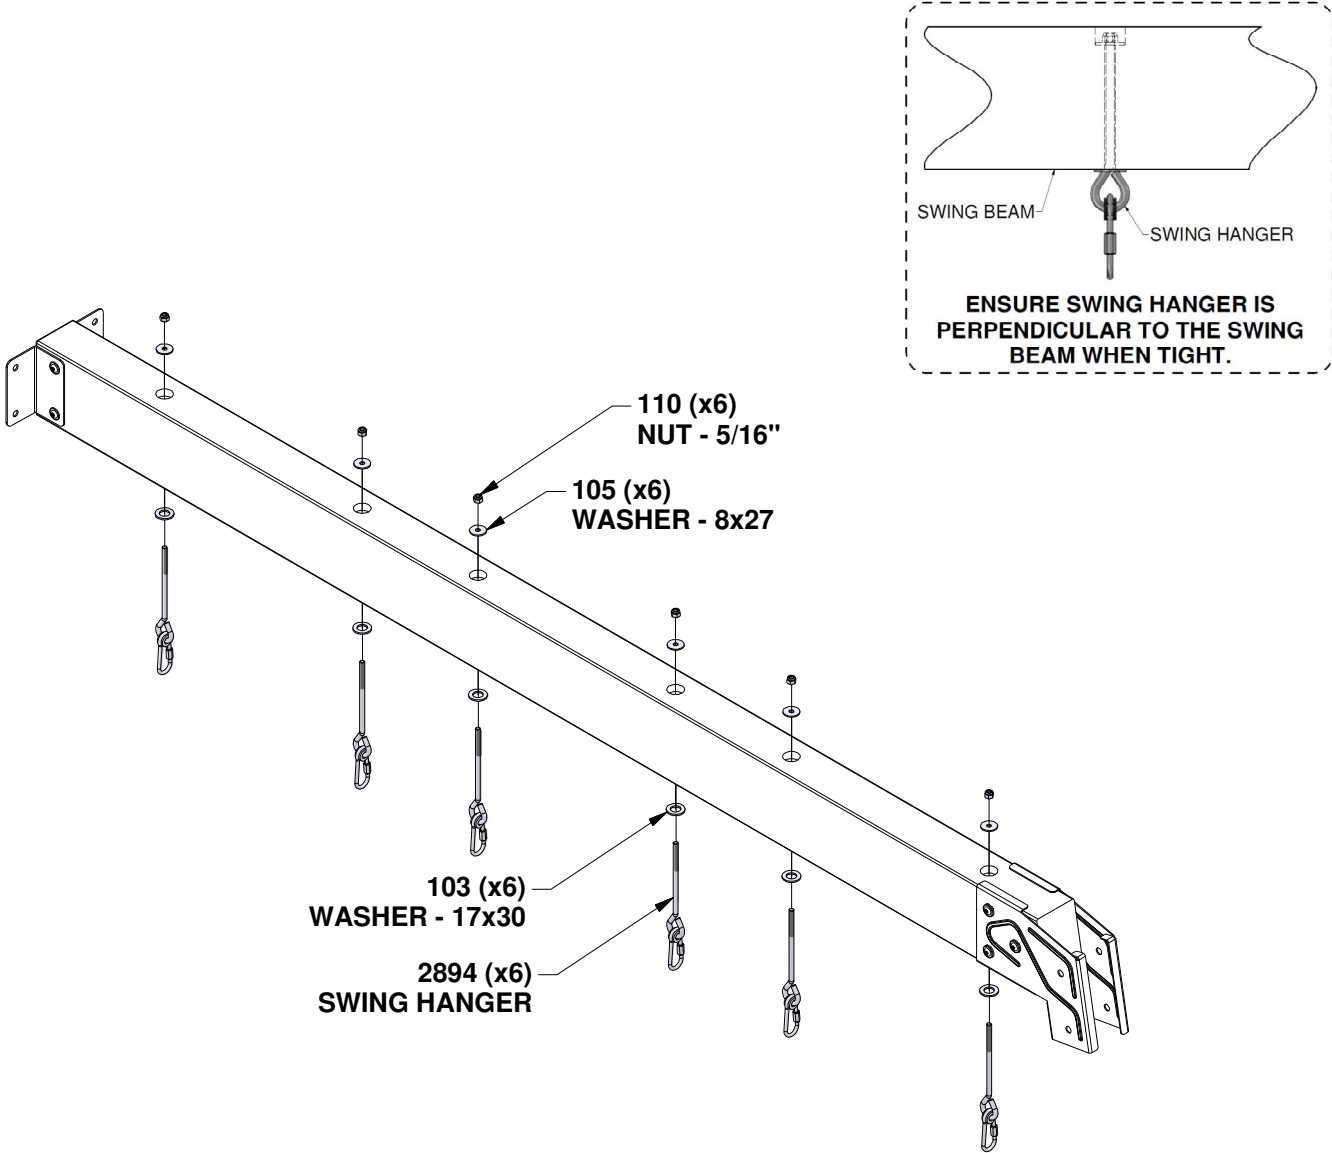


STEP 3 - SWING BEAM



GG71 SWING BEAM SUPPORT - W4L21021
(x1) 3 1/4"x3 1/4"x49 5/8" (84x84x1260)

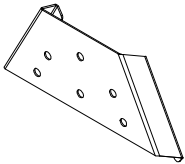


A4M01169 A-FRAME
(x1) BRACKET



EG77 ANGLE BRACE - W4L21023
(x2) 1 3/8"x3 1/4"x74 3/8" (36x84x1890)


QTY	PART NUMBER	DESCRIPTION
6	H100379	T-NUT 5/16 BLK
4	H100407	BOLT WH 5/16x1 1/2 BLK
2	H100484	BOLT WH 5/16x3 1/4 BLK

INSTALL T-NUTS IN WOOD FIRST

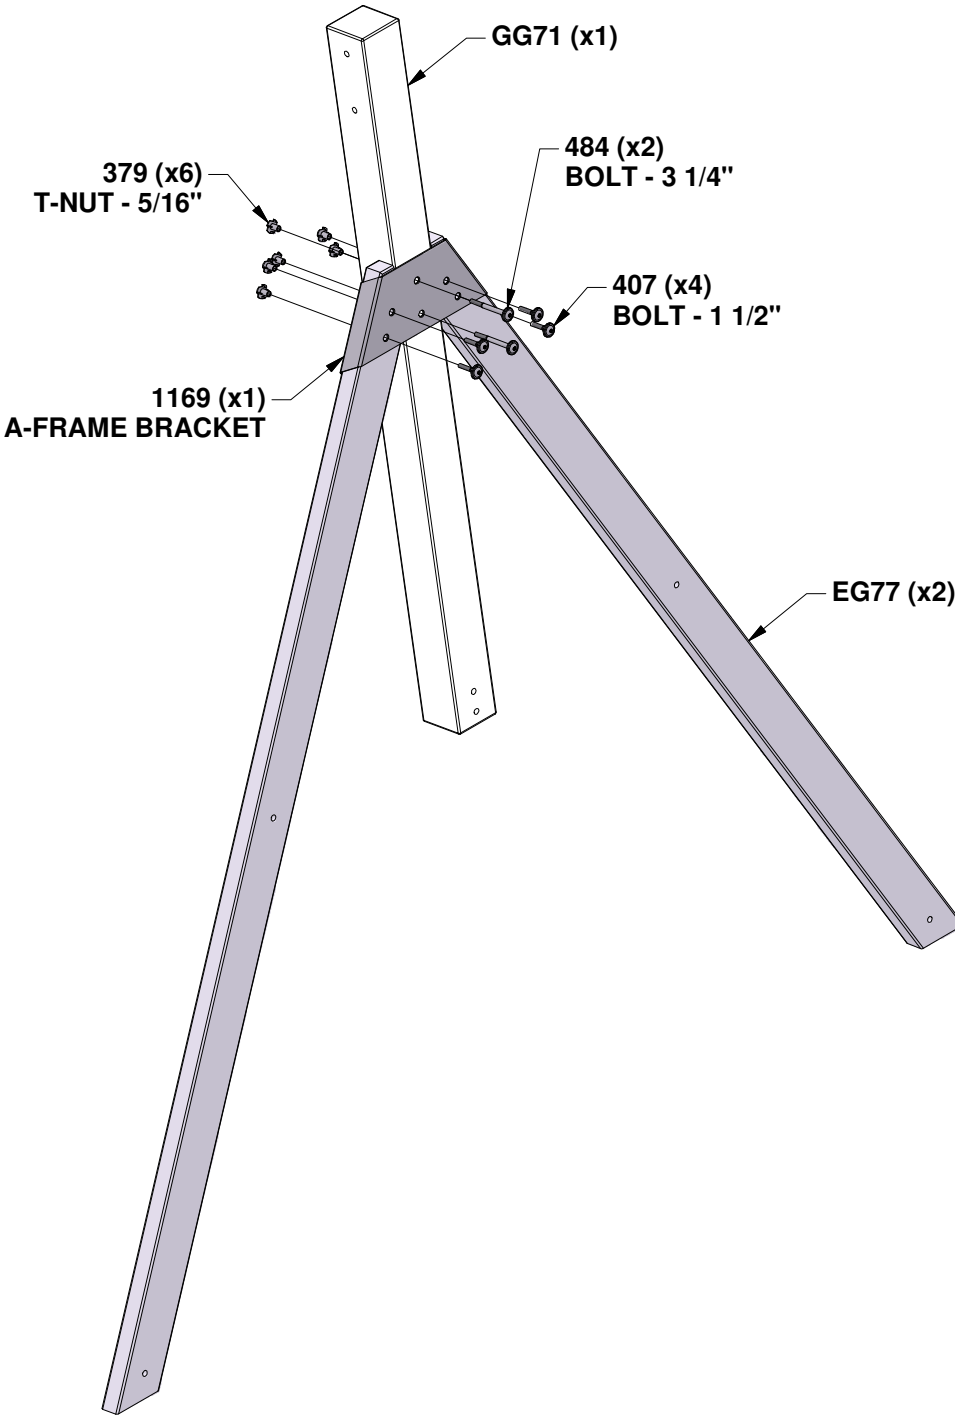

STEP 4 - SWING BEAM

QTY	PART NUMBER	DESCRIPTION
4	H100194	BOLT WH 5/16x2-1/2 BLK
6	H100198	WASHER LOCK EXT 8x19 BLK
6	H100379	T-NUT 5/16 BLK
2	H100534	BOLT WH 5/16x4 1/2 BLK




OG07 END SUPPORT - W4L21024
(x1) 1"x3 1/2"x41" (30x84x1045)




OG08 GROUND BOARD - W4L21022
(x1) 1 1/8"x3 1/4"x75" (30x84x1905)

INSTALL T-NUTS IN WOOD FIRST

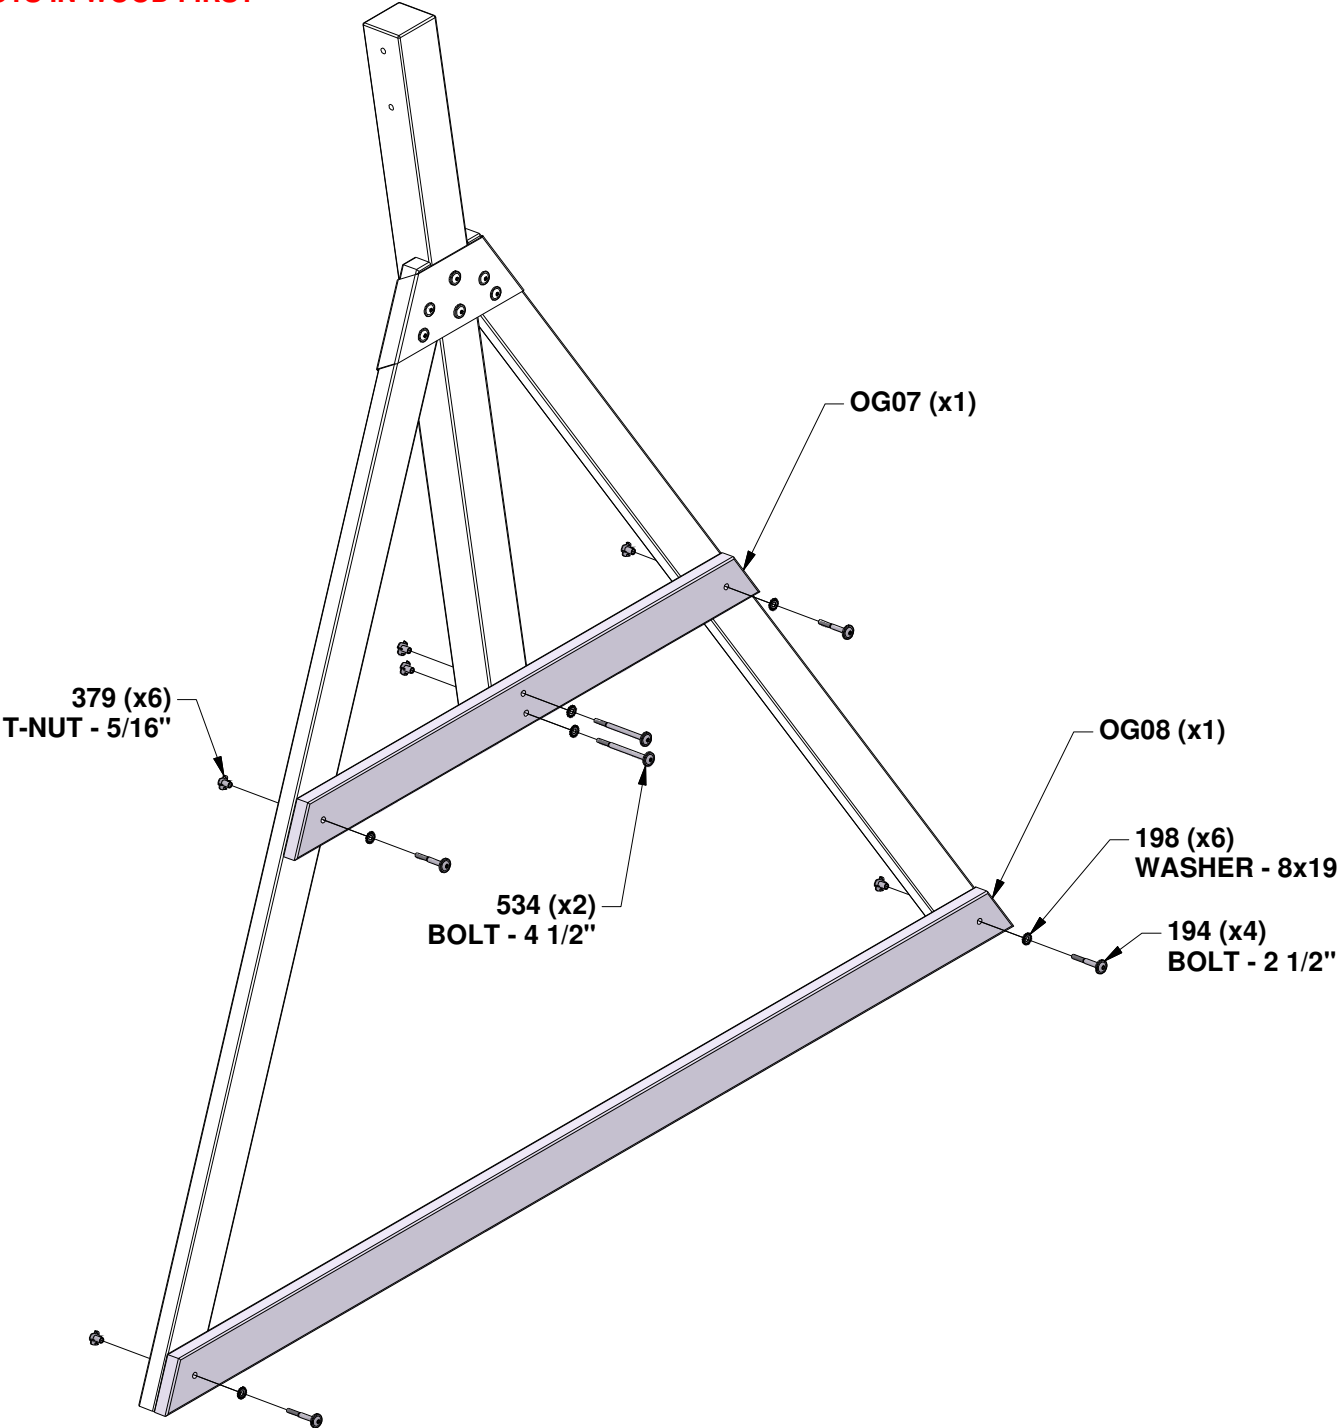


STEP 5 - SWING BEAM


QTY	PART NUMBER	DESCRIPTION
2	H100192	NUT BARREL WH 5/16x7/8 BLK
2	H100416	BOLT WH 5/16x3 BLK

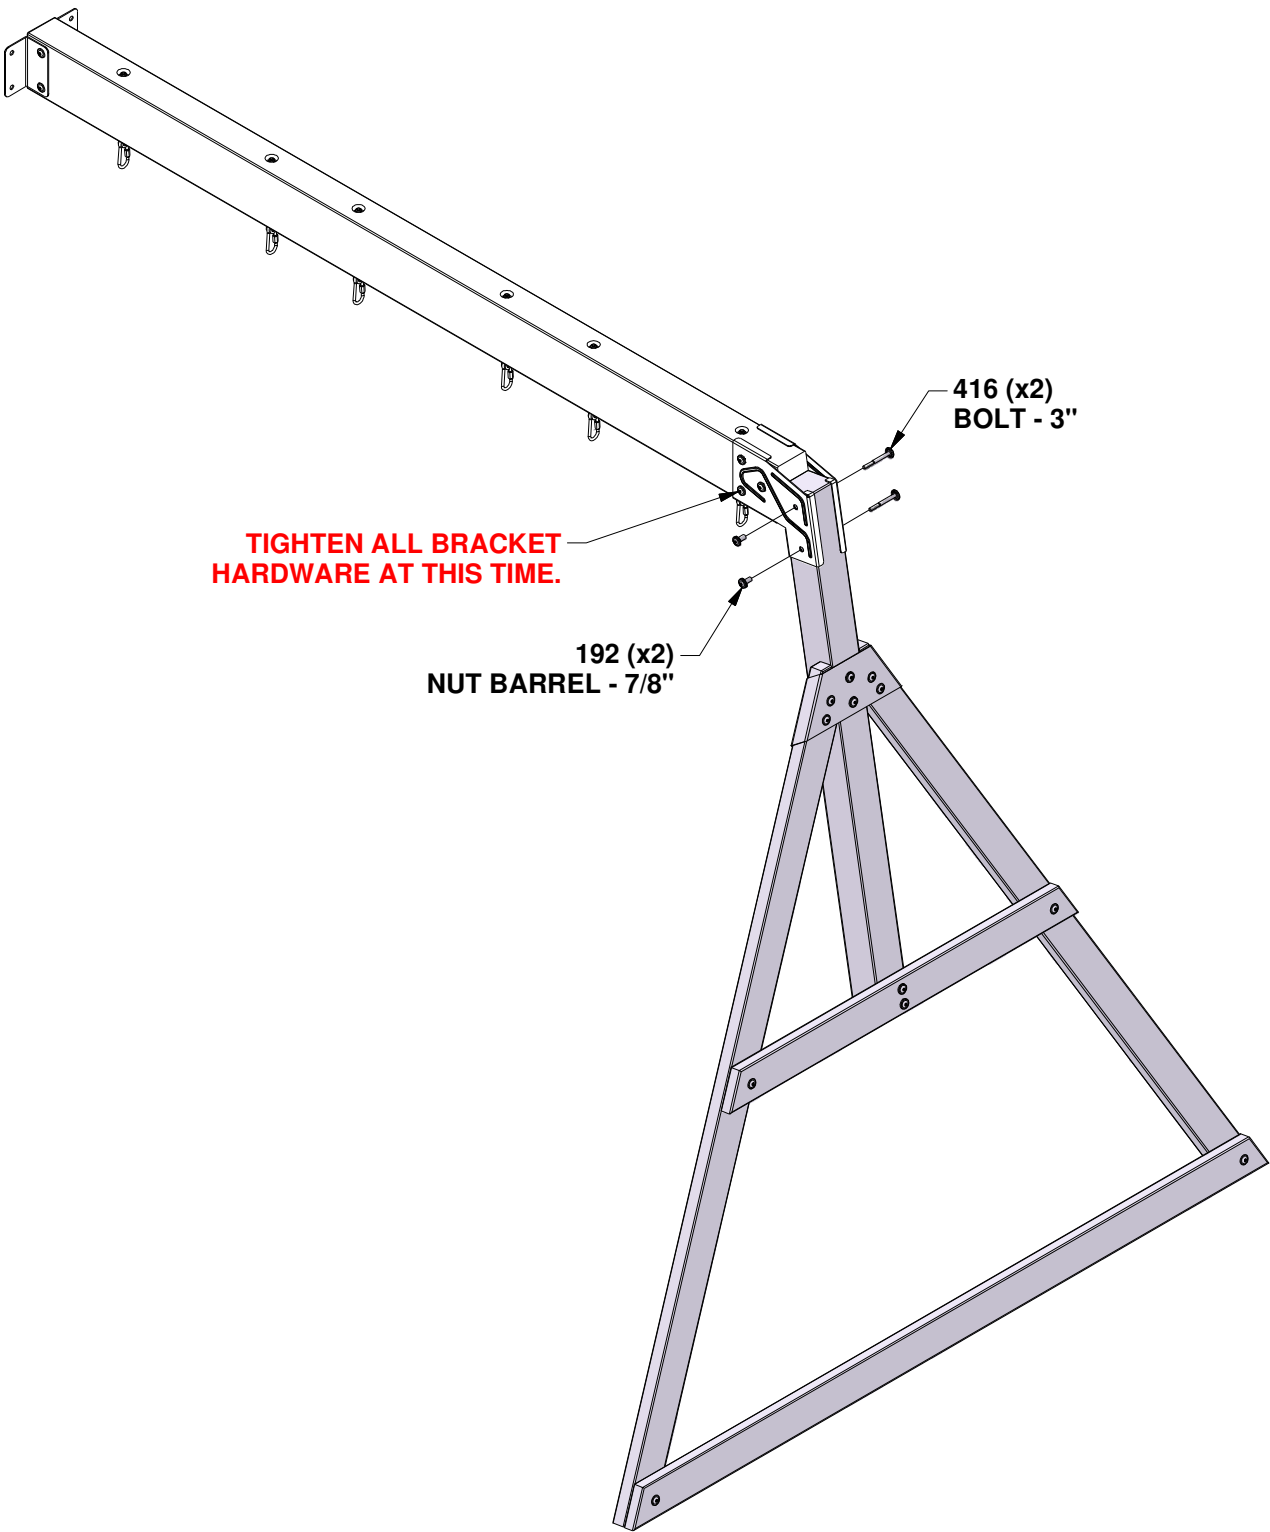

STEP 1 - FORT ASSEMBLY



OG01 UPRIGHT ASSEMBLY - W2A04237
(x1) 1 1/8"x3 1/4"x85 5/8" (30x84x2174)




OG04 UPRIGHT - W4L19922
(x1) 1 1/8"x3 1/4"x85 5/8" (30x84x2174)


QTY	PART NUMBER	DESCRIPTION
16	H100398	T-NUT 1/4 BLK
16	H100405	WASHER LOCK EXT 6x15 BLK
8	H100488	BOLT WH 1/4x2 BLK
8	H100567	BOLT WH 1/4x2-1/4 BLK




OS01 SWING BEAM MOUNT - W4L20965
(x1) 1 1/8"x3 3/4"x60 3/8" (30x96x1535)



OB02 SWING BEAM MOUNT - W4L20964
(x1) 1 1/8"x2 7/8"x59 5/8" (30x72x1515)




NJ02 FLOOR RAIL - W4L19923
(x1) 3/4"x4 1/8"x61 1/4" (20x106x1555)



HB04 GROUND BOARD - W4L19916
(x1) 1"x2 7/8"x61 1/2" (24x72x1563)

INSTALL T-NUTS IN WOOD FIRST

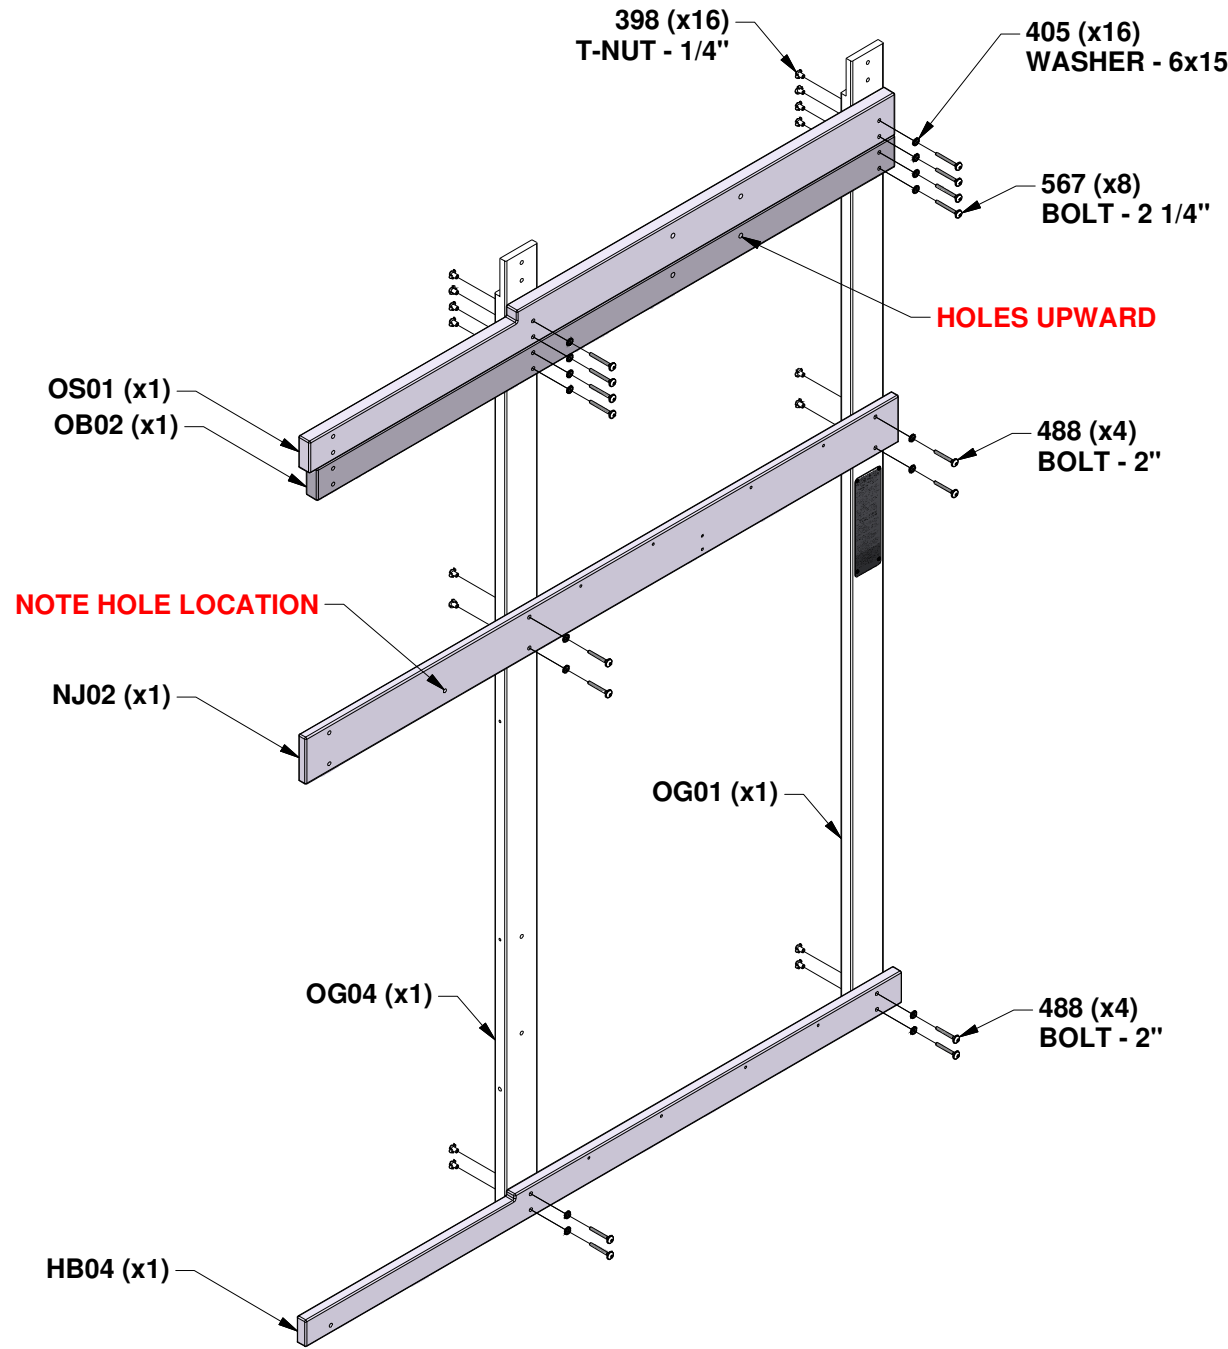

STEP 2 - FORT ASSEMBLY




OG09 UPRIGHT - W4L20961
(x2) 1 1/8"x3 1/4"x12 3/4" (30x84x325)



NB12 WALL RAIL - W4L20971
(x1) 3/4"x3 1/4"x39" (20x84x991)

QTY	PART NUMBER	DESCRIPTION
4	H100171	BOLT WH 1/4x1 BLK
8	H100398	T-NUT 1/4 BLK
8	H100405	WASHER LOCK EXT 6x15 BLK
4	H100488	BOLT WH 1/4x2 BLK


INSTALL T-NUTS IN WOOD FIRST

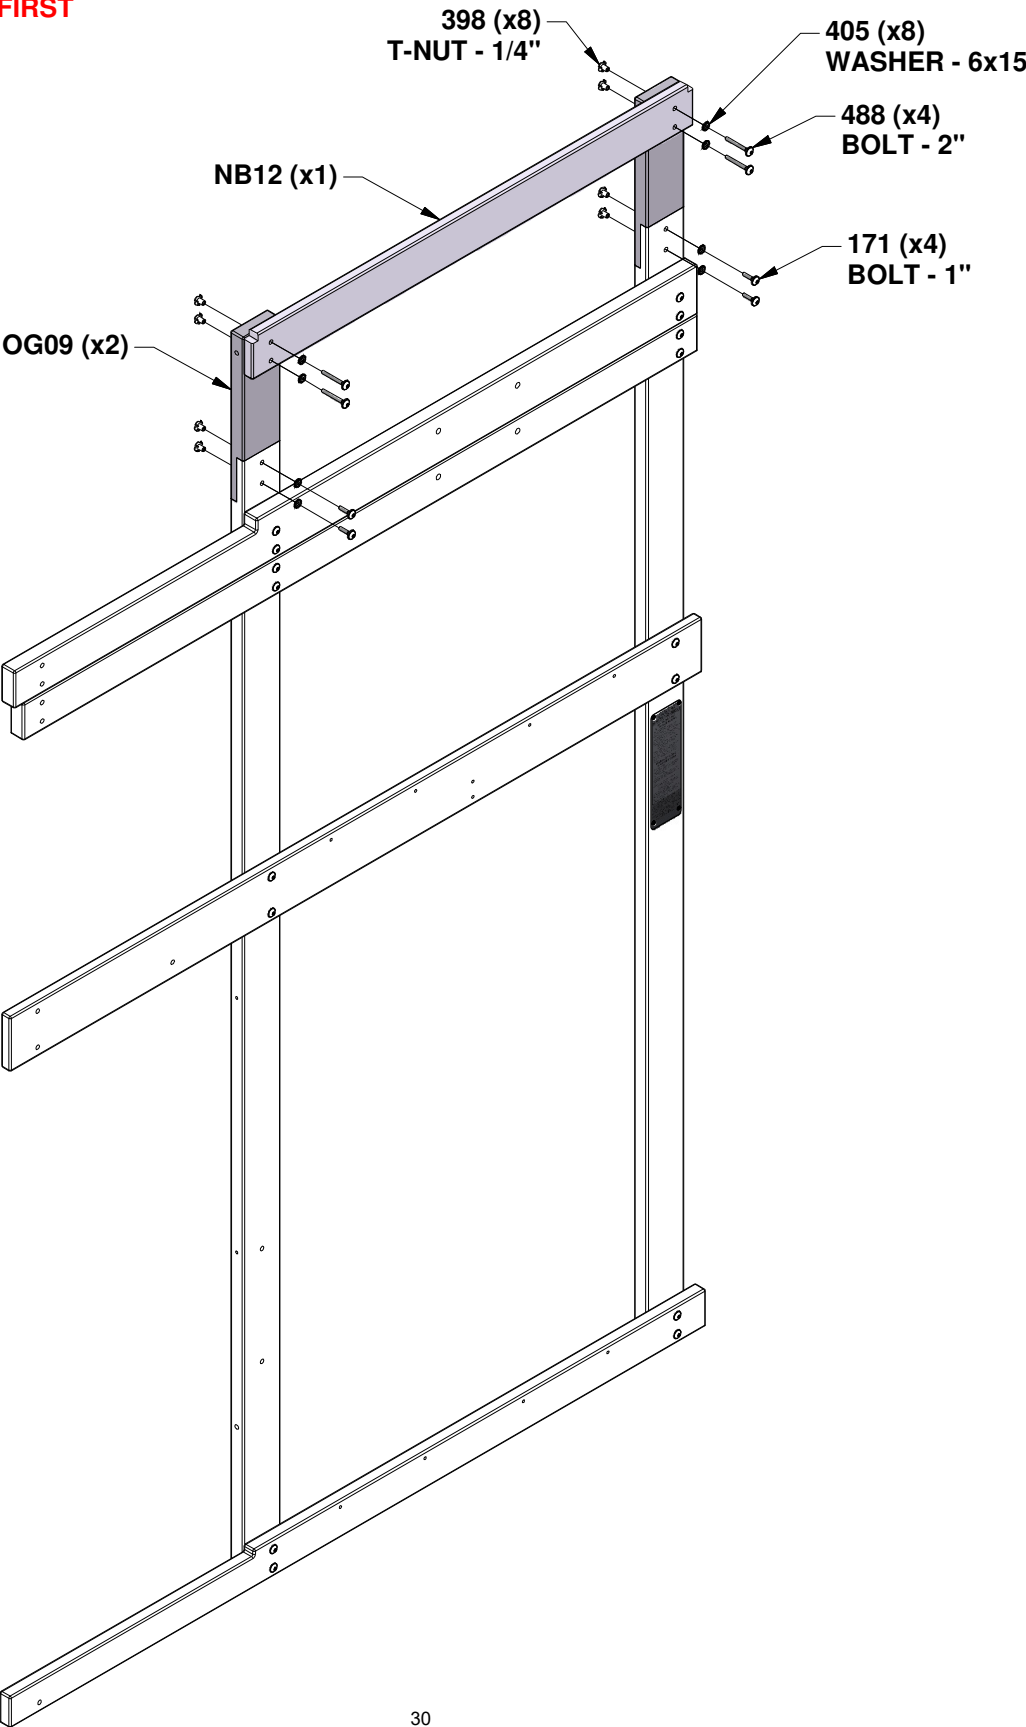

STEP 3 - FORT ASSEMBLY



OG02 UPRIGHT - W4L19920
(x1) 1 1/8"x3 1/4"x85 5/8" (30x84x2174)



OG03 UPRIGHT - W4L19921
(x1) 1 1/8"x3 1/4"x85 5/8" (30x84x2174)




NJ03 FLOOR RAIL - W4L19926
(x1) 3/4"x4 1/8"x39" (20x106x991)



HB01 GROUND BOARD - W4L19917
(x1) 1"x2 7/8"x61 1/2" (24x72x1563)

QTY	PART NUMBER	DESCRIPTION
8	H100398	T-NUT 1/4 BLK
8	H100405	WASHER LOCK EXT 6x15 BLK
8	H100488	BOLT WH 1/4x2 BLK

INSTALL T-NUTS IN WOOD FIRST

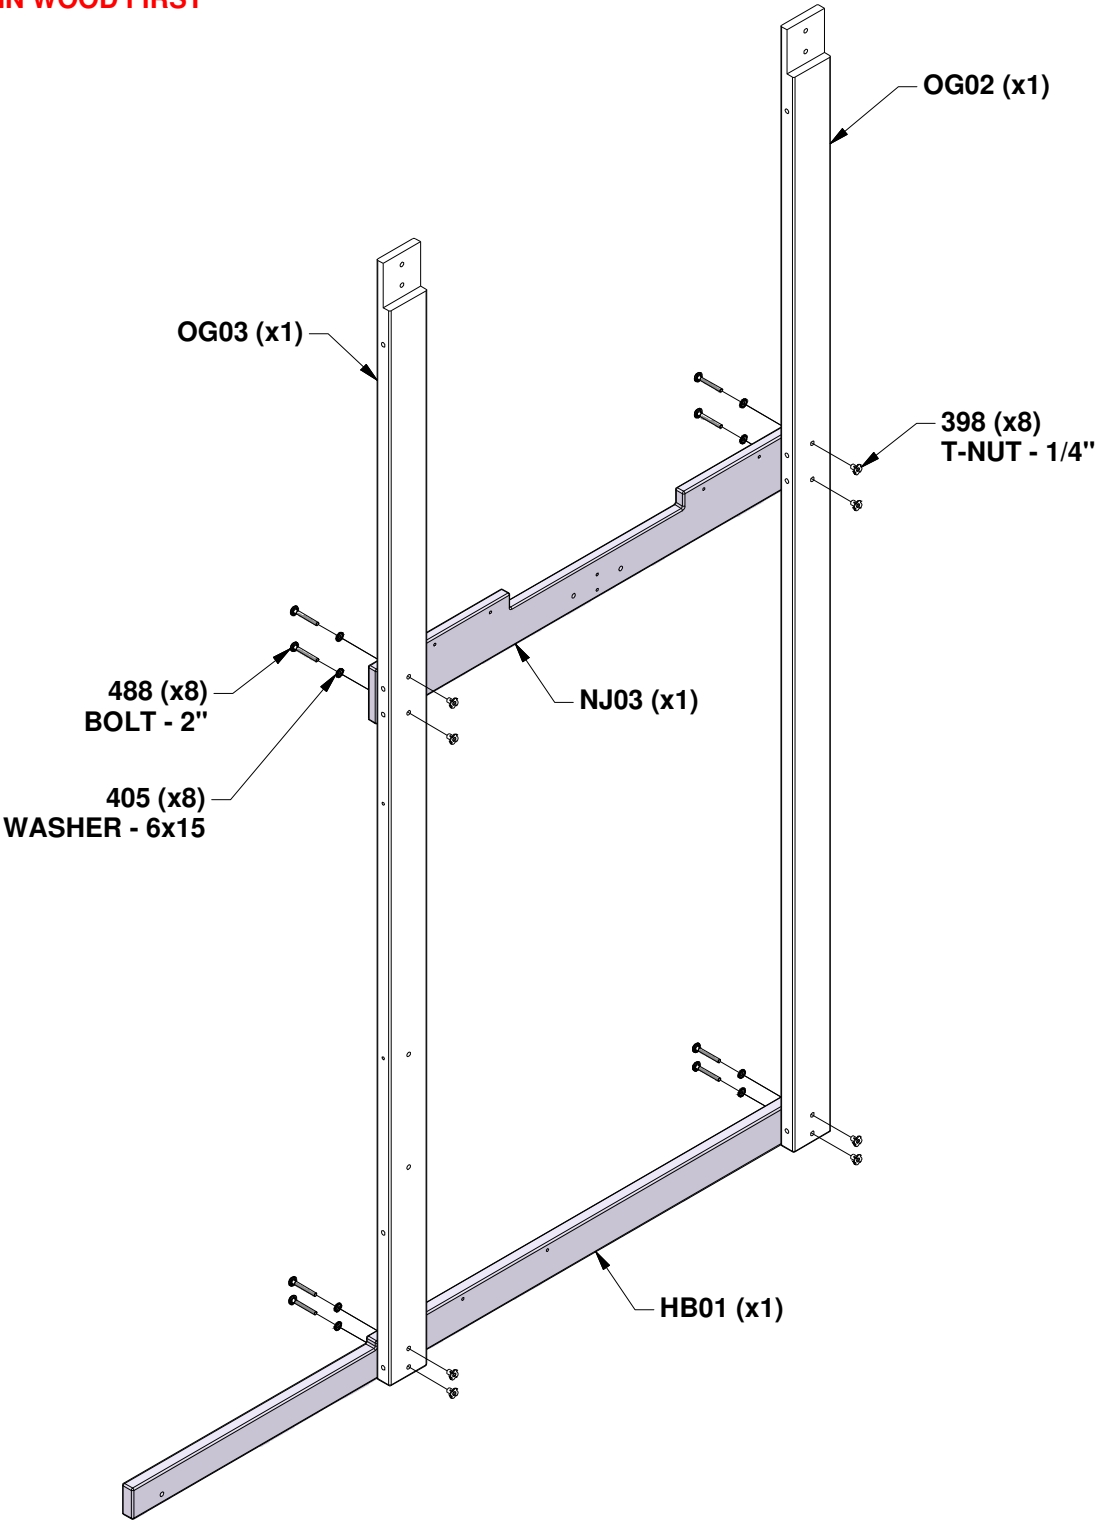

STEP 4 - FORT ASSEMBLY




OG09 UPRIGHT - W4L20961
(x2) 1 1/8"x3 1/4"x12 3/4" (30x84x325)



NB12 WALL RAIL - W4L20971
(x1) 3/4"x3 1/4"x39" (20x84x991)

QTY	PART NUMBER	DESCRIPTION
4	H100171	BOLT WH 1/4x1 BLK
8	H100398	T-NUT 1/4 BLK
8	H100405	WASHER LOCK EXT 6x15 BLK
4	H100488	BOLT WH 1/4x2 BLK


INSTALL T-NUTS IN WOOD FIRST

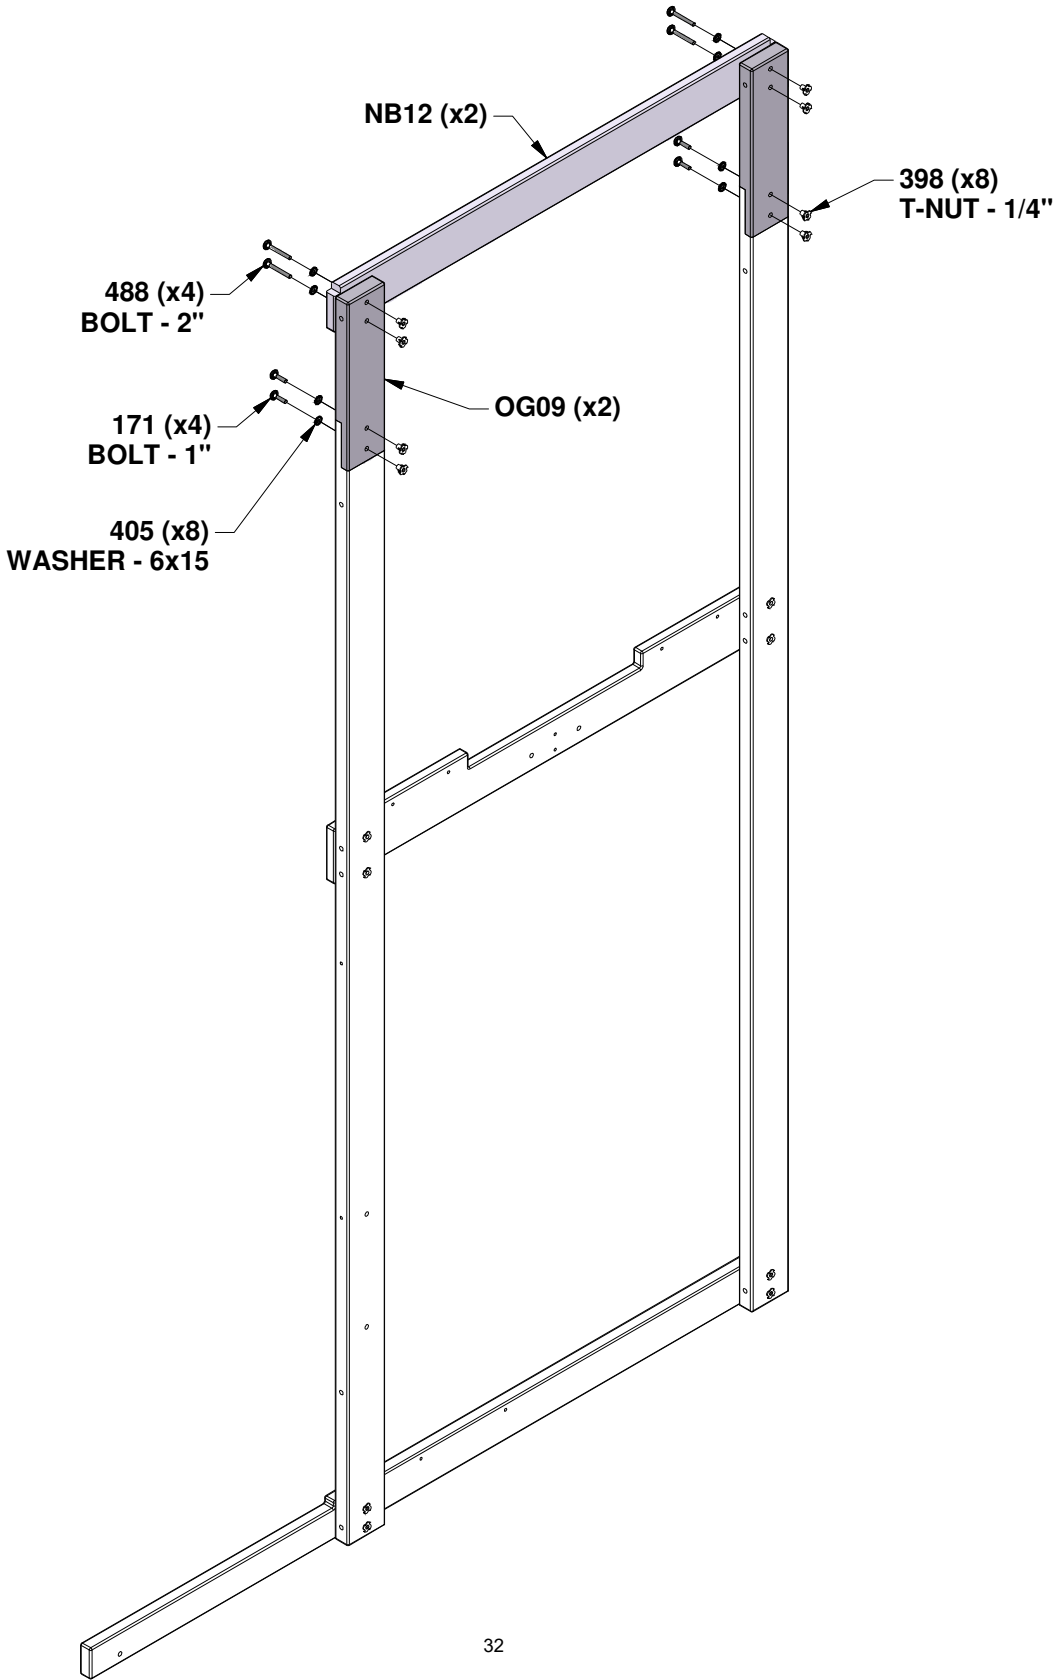

STEP 5 - FORT ASSEMBLY




NB03 WALL RAIL - W4L20973
(x1) 3/4"x2 7/8"x47 3/8" (20x72x1202)



NB16 WALL RAIL - W4L20982
(x1) 3/4"x2 7/8"x37 1/2" (20x72x952)



HR02 GROUND BOARD - W4L19919
(x1) 1"x2 3/8"x37 1/2" (24x60x952)




A4M04303 L BRACKET
(x1) 2.5x38x38x49



NJ01 FLOOR RAIL - W4L19924
(x1) 3/4"x4 1/8"x58 3/4" (20x106x1492)

QTY	PART NUMBER	DESCRIPTION
9	H100398	T-NUT 1/4 BLK
10	H100405	WASHER LOCK EXT 6x15 BLK
2	H100487	LAG SCREW WH 1/4x2 BLK
1	H101139	BOLT WH 1/4x7/8 BLK
2	H101174	BOLT WH 1/4x4 1/4 BLK
6	H101368	BOLT WH 1/4x4 BLK

INSTALL T-NUTS IN WOOD FIRST

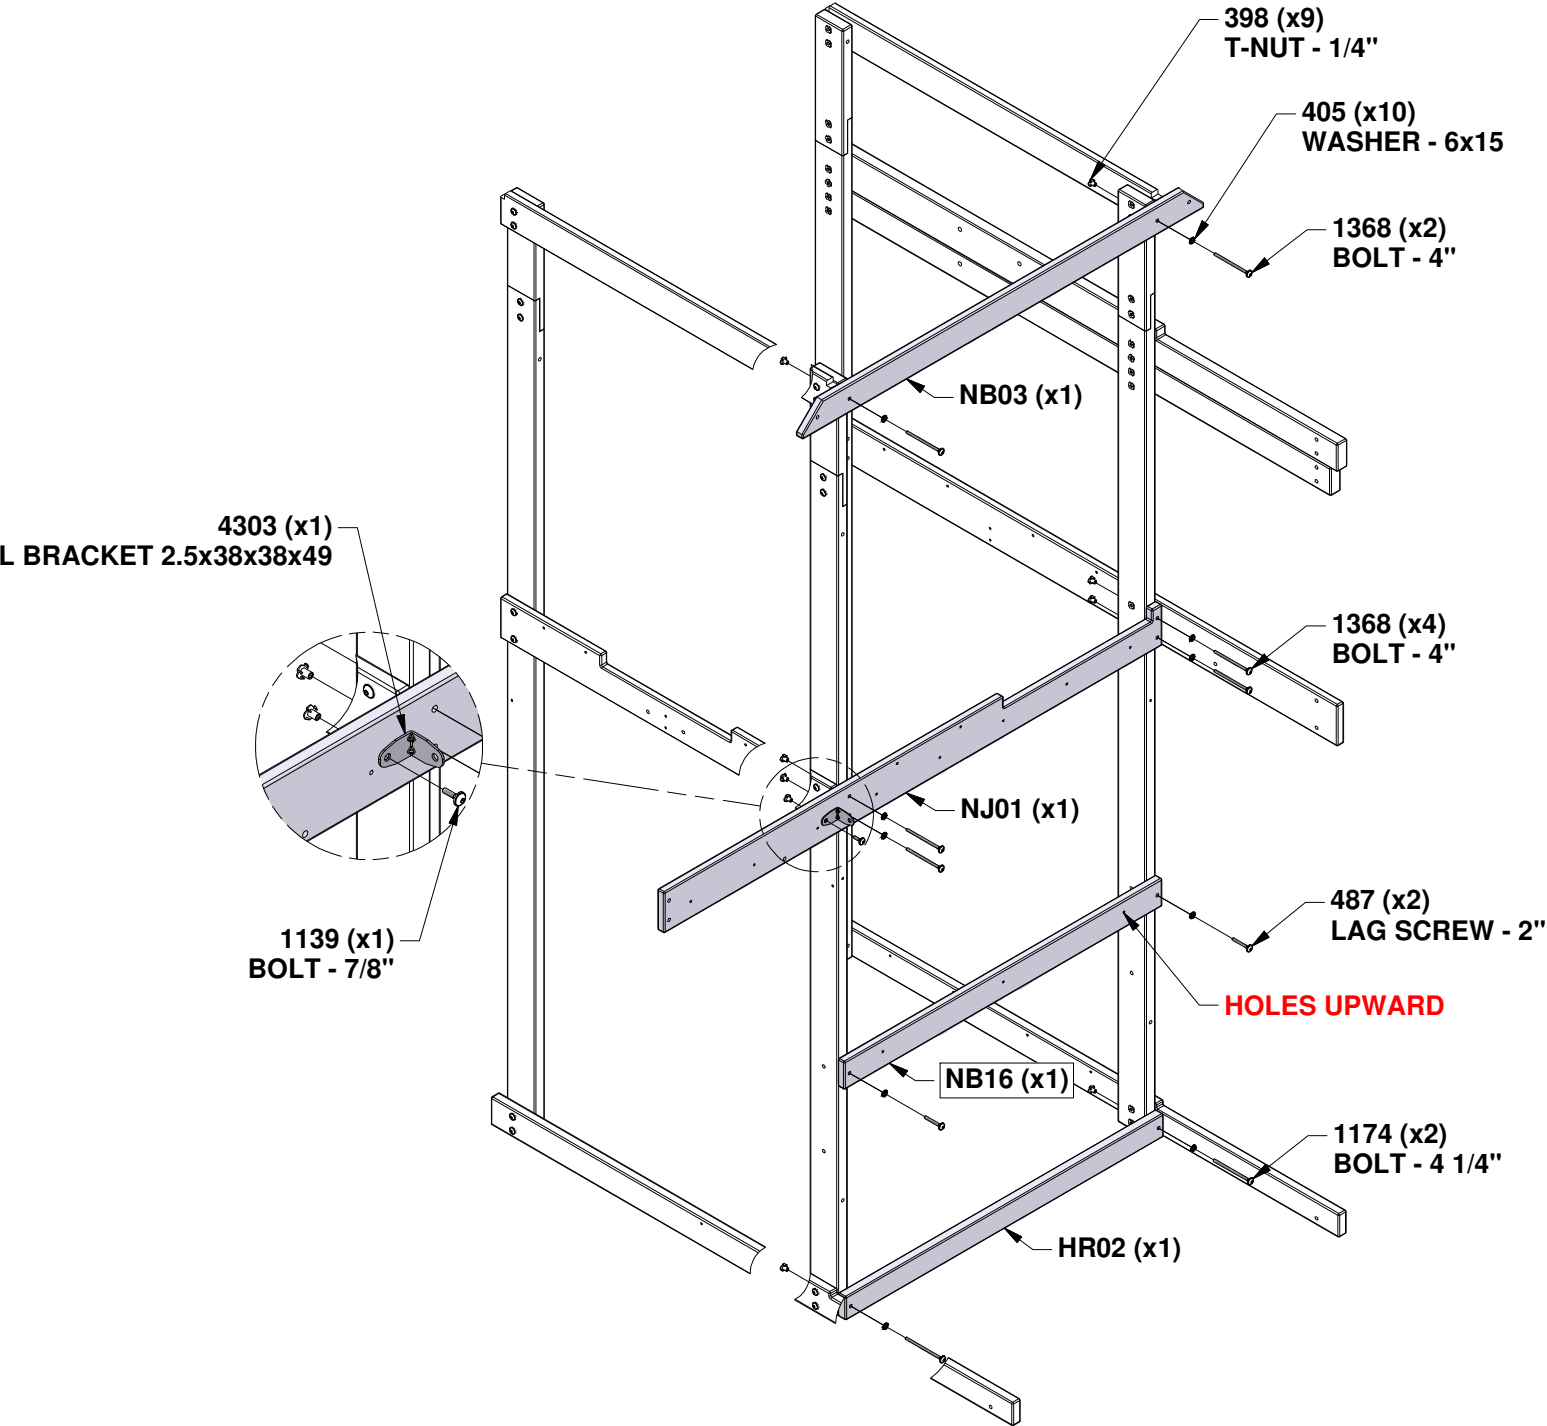


STEP 6 - FORT ASSEMBLY



NB03 WALL RAIL - W4L20973
(x1) 3/4"x2 7/8"x47 3/8" (20x72x1202)




HB02 GROUND BOARD - W4L19918
(x1) 1"x2 7/8"x37 1/2" (24x72x952)



NJ04 FLOOR RAIL - W4L19925
(x1) 3/4"x4 1/8"x58 3/4" (20x106x1492)

QTY	PART NUMBER	DESCRIPTION
8	H100398	T-NUT 1/4 BLK
8	H100405	WASHER LOCK EXT 6x15 BLK
2	H101174	BOLT WH 1/4x4 1/4 BLK
6	H101368	BOLT WH 1/4x4 BLK

INSTALL T-NUTS IN WOOD FIRST

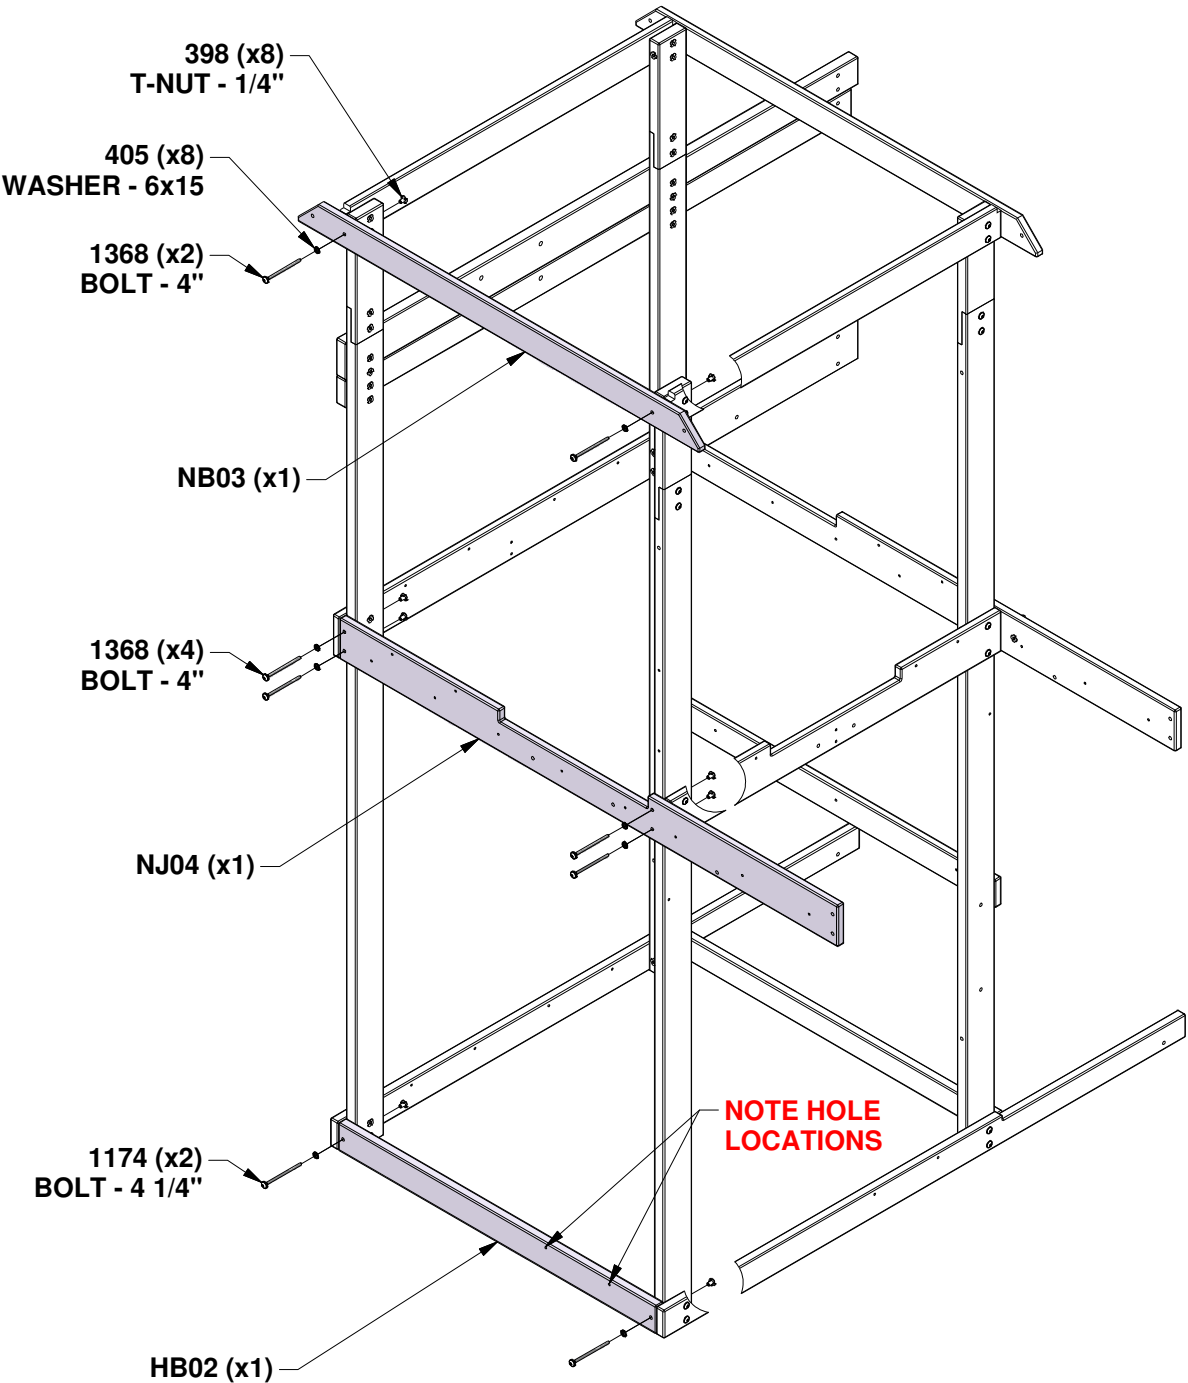


STEP 7 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
3	H100398	T-NUT 1/4 BLK
2	H100405	WASHER LOCK EXT 6x15 BLK
1	H101139	BOLT WH 1/4x7/8 BLK
2	H101368	BOLT WH 1/4x4 BLK



NB01 **ARCHED WALL RAIL - W4L20969**
(x1) 3/4"x2 7/8"x42" (20x72x1066)




A4M04303 **L BRACKET**
(x1) 2.5x38x38x49




NB04 **WALL RAIL - W4L20967**
(x1) 3/4"x2 7/8"x23 1/4" (20x72x590)


INSTALL T-NUTS IN WOOD FIRST

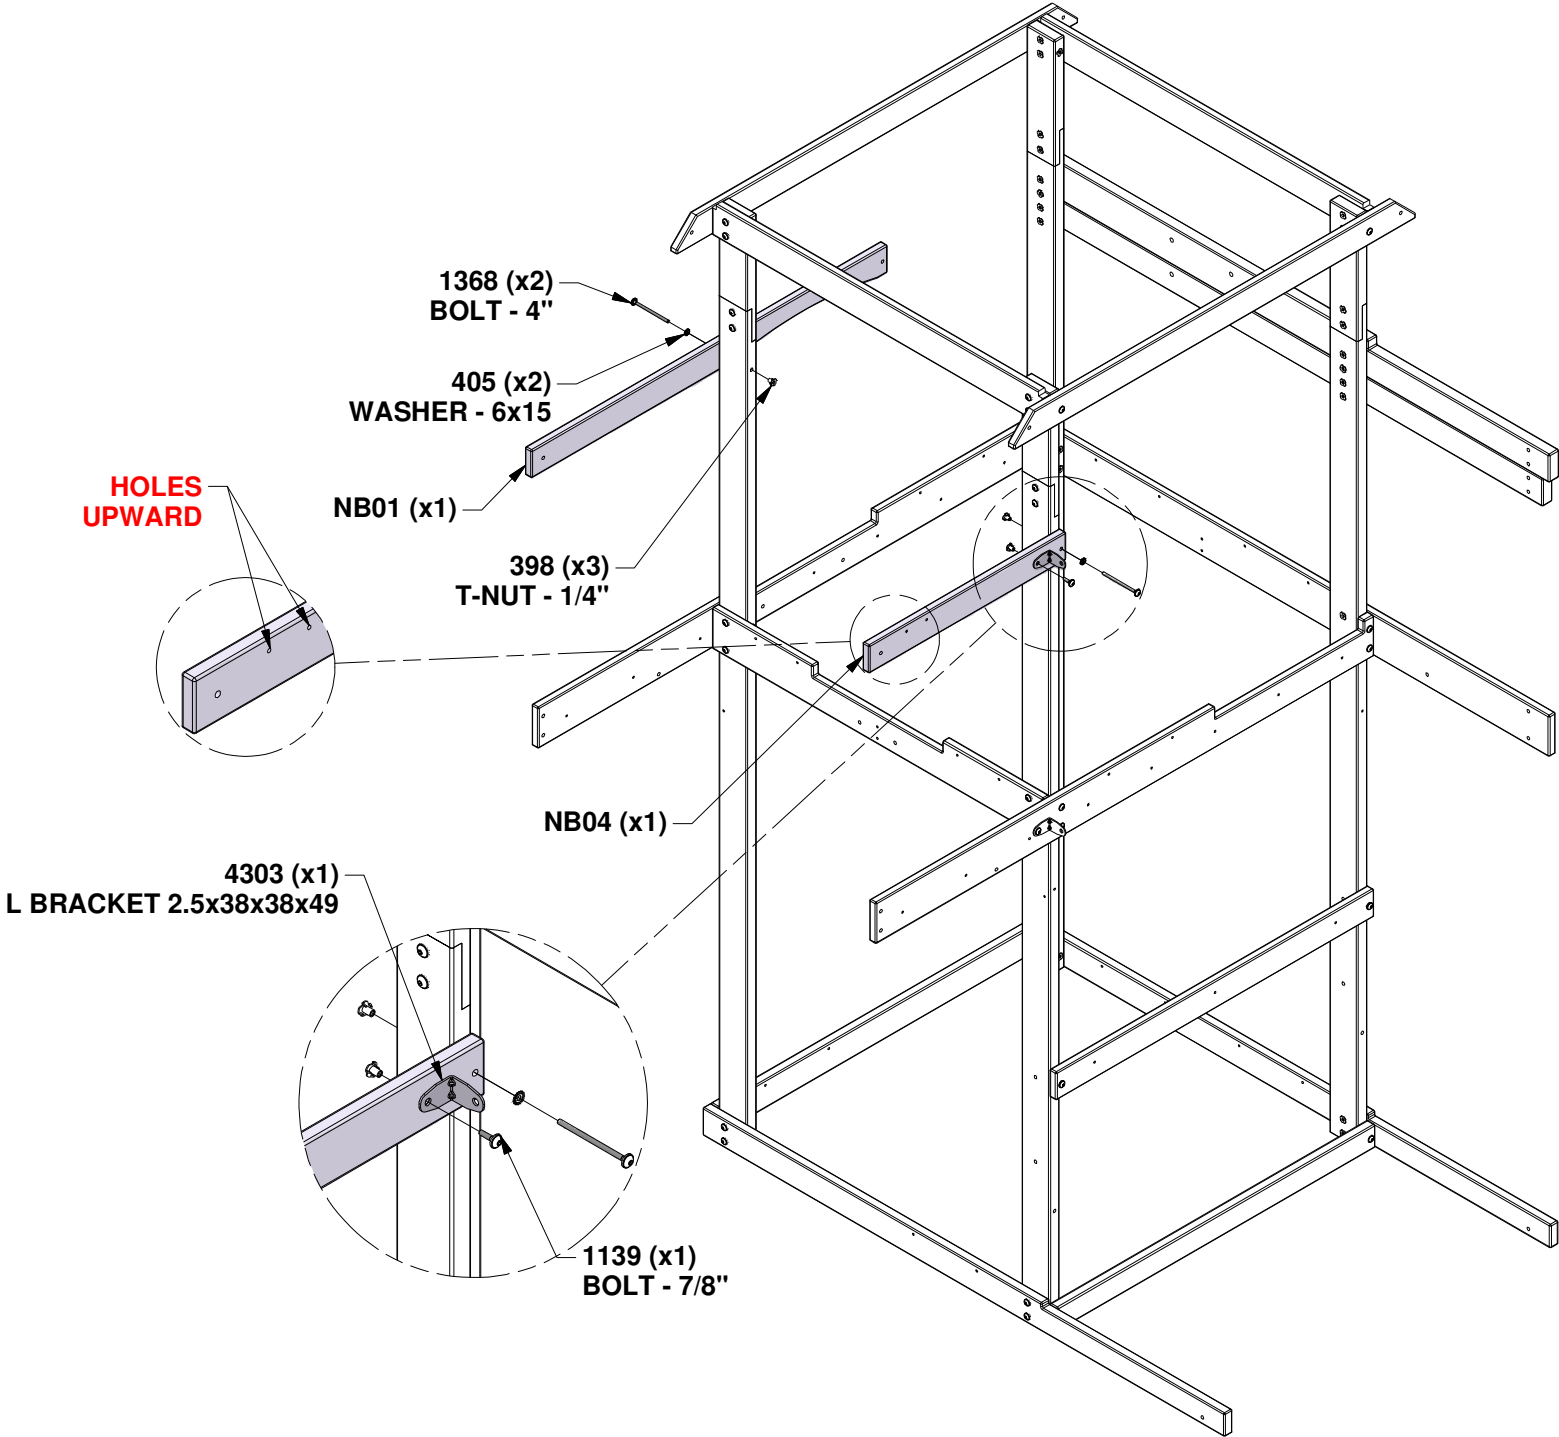


STEP 8 - FORT ASSEMBLY



NB05 WALL RAIL - W4L20970
(x1) 3/4"x2 7/8"x39" (20x72x991)




NJ07 FLOOR RAIL - W4L19935
(x1) 3/4"x4 1/8"x40 5/8" (20x106x1031)



OB04 BALCONY UPRIGHT - W4L19933
(x2) 1 1/8"x2 3/8"x30 3/4" (30x60x782)

QTY	PART NUMBER	DESCRIPTION
14	H100398	T-NUT 1/4 BLK
14	H100405	WASHER LOCK EXT 6x15 BLK
8	H100488	BOLT WH 1/4x2 BLK
6	H100800	BOLT WH 1/4x3 BLK

INSTALL T-NUTS IN WOOD FIRST

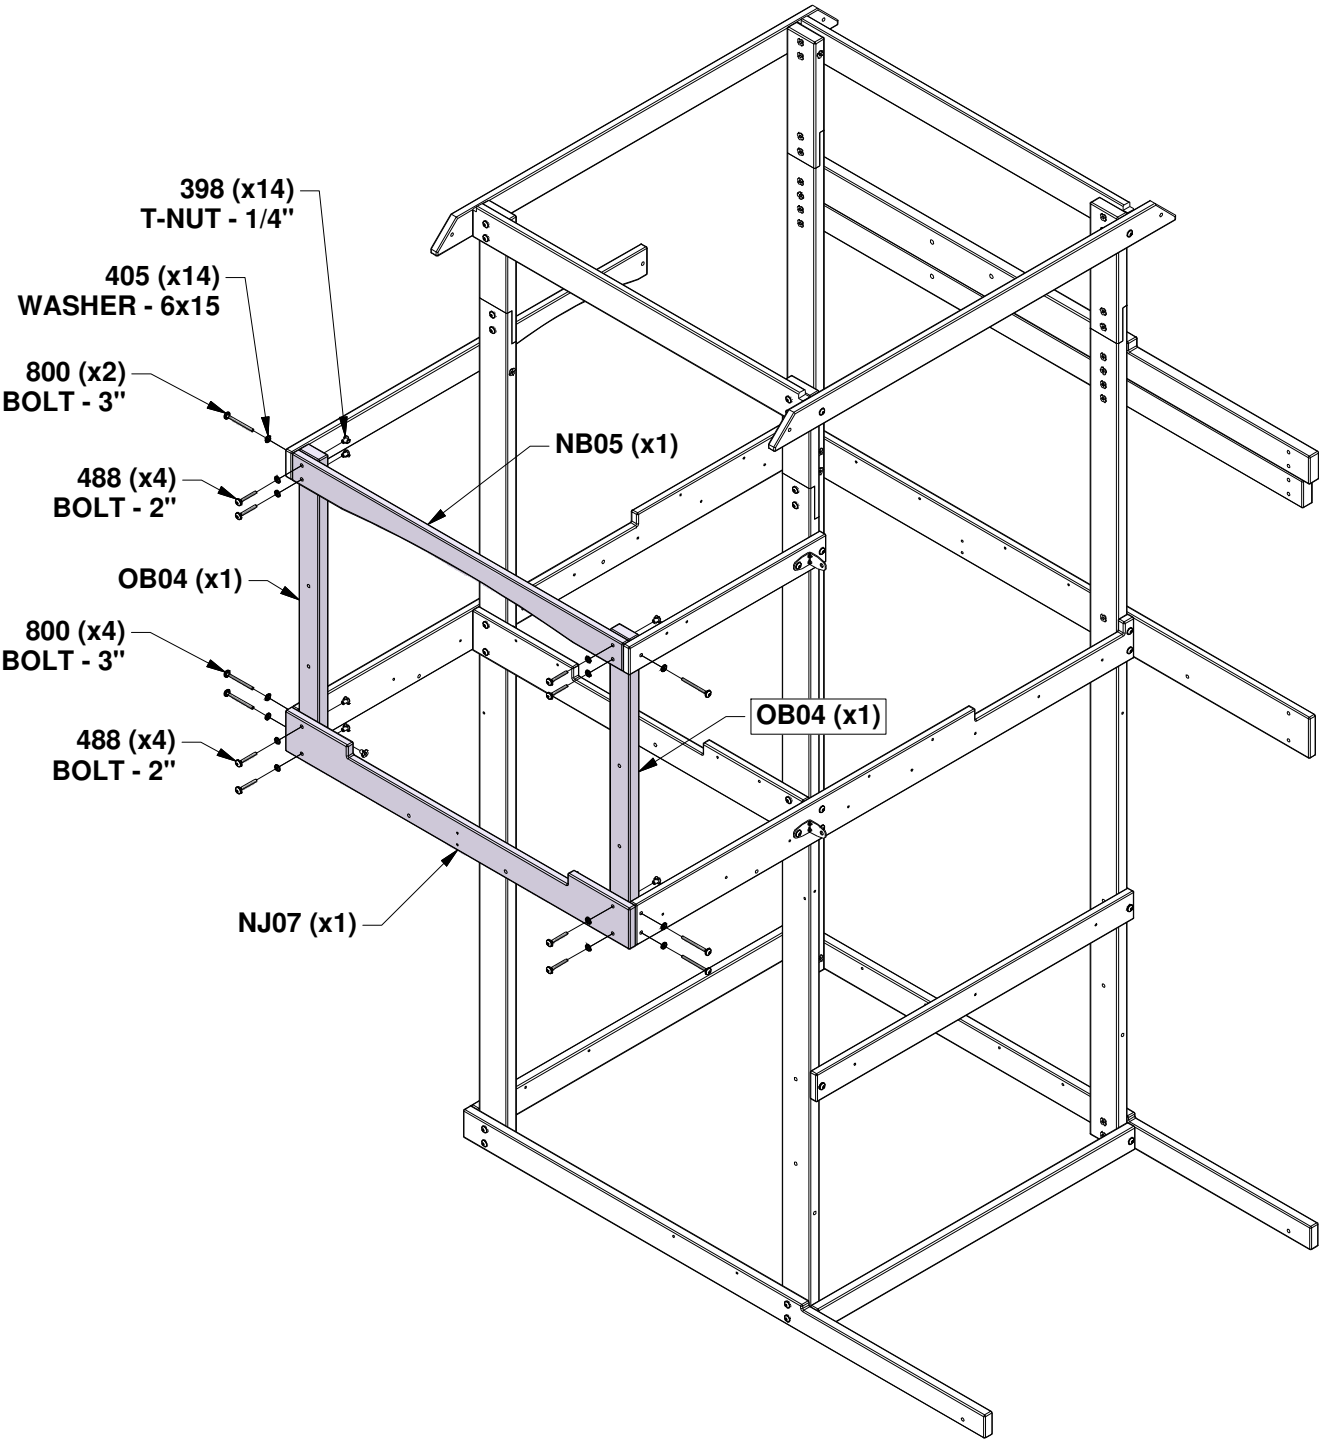


STEP 9 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100398	T-NUT 1/4 BLK
2	H100403	LAG SCREW WH 1/4x1-1/2 BLK
4	H100405	WASHER LOCK EXT 6x15 BLK
2	H100488	BOLT WH 1/4x2 BLK



OR01 DECK BRACE - W4L21008
(x2) 1 1/8"x2 3/8"x13 1/8" (30x60x332)

INSTALL T-NUTS IN WOOD FIRST

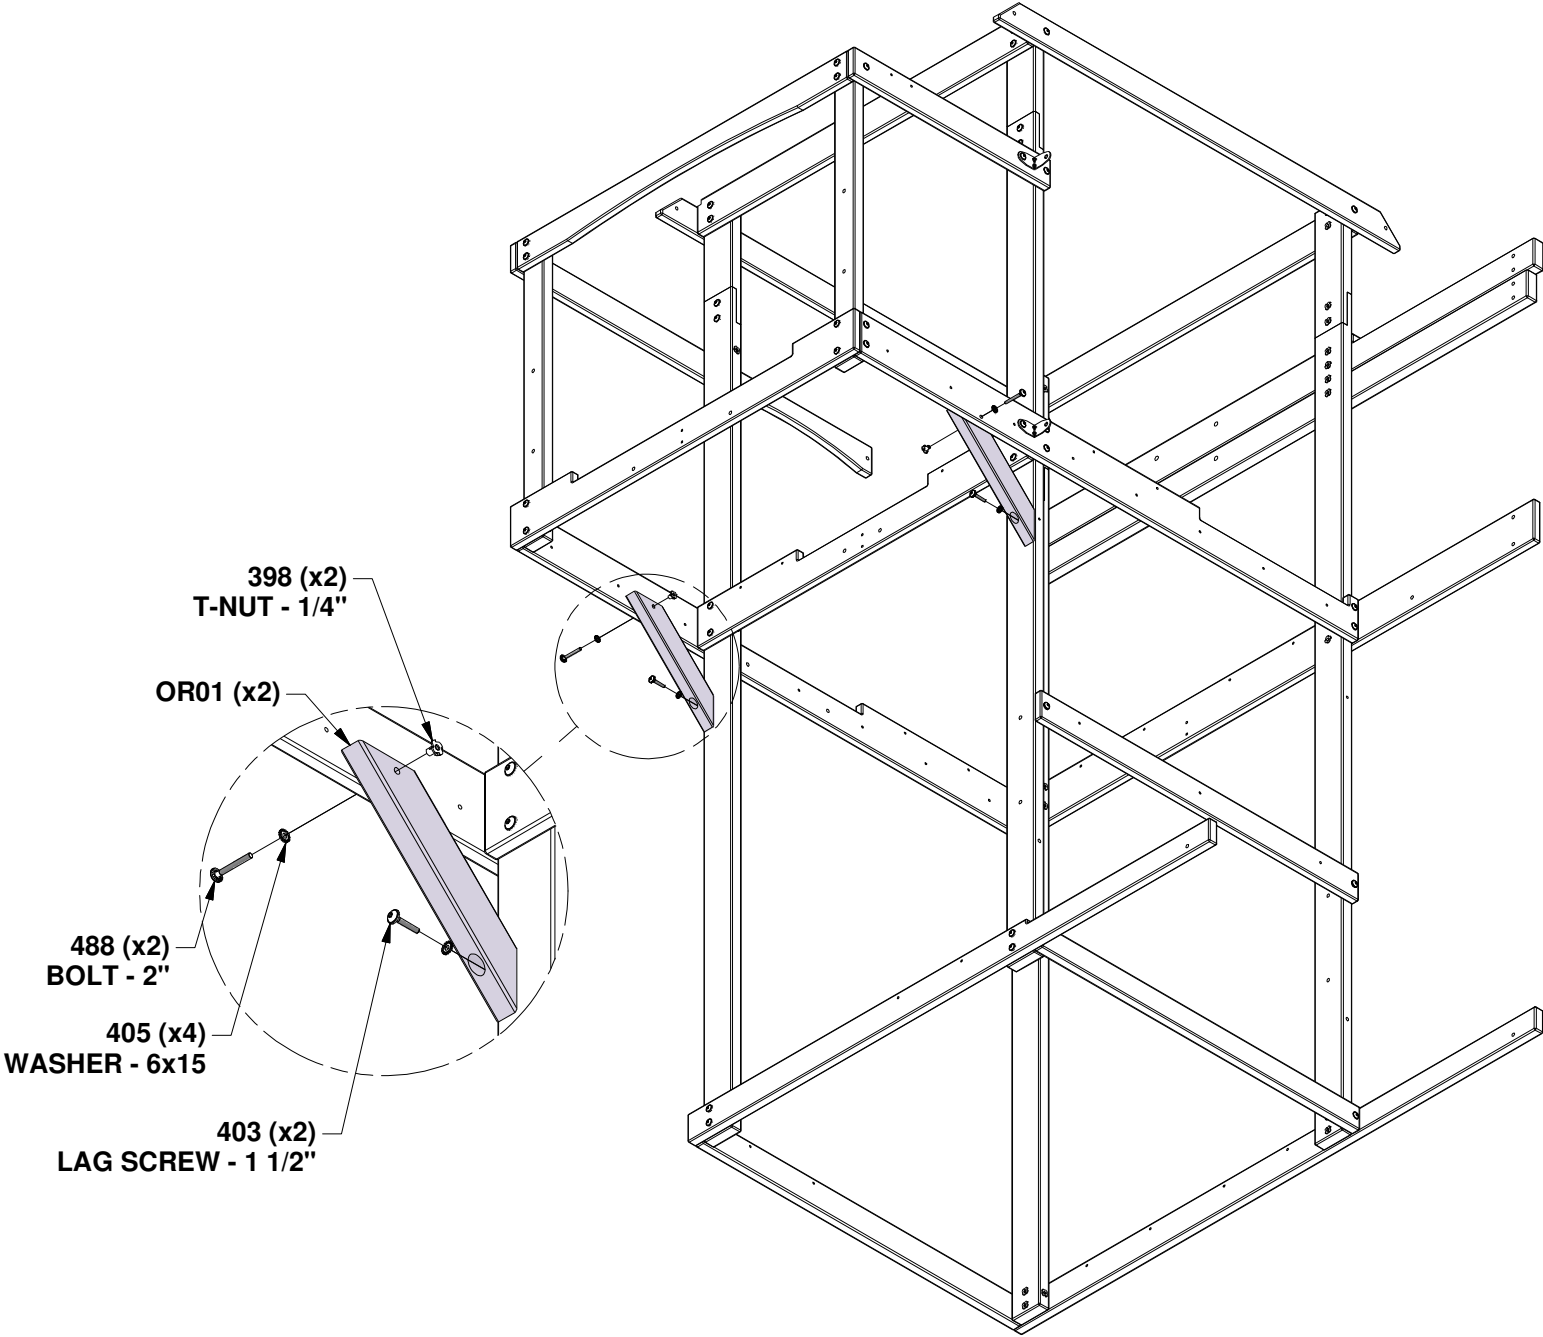

STEP 10 - FORT ASSEMBLY




NB06 WALL RAIL - W4L20968
(x1) 3/4"x2 7/8"x20 5/8" (20x72x524)



NJ05 FLOOR RAIL - W4L19927
(x1) 3/4"x4 1/8"x20 5/8" (20x106x524)

QTY	PART NUMBER	DESCRIPTION
2	H100398	T-NUT 1/4 BLK
2	H101139	BOLT WH 1/4x7/8 BLK

INSTALL T-NUTS IN WOOD FIRST

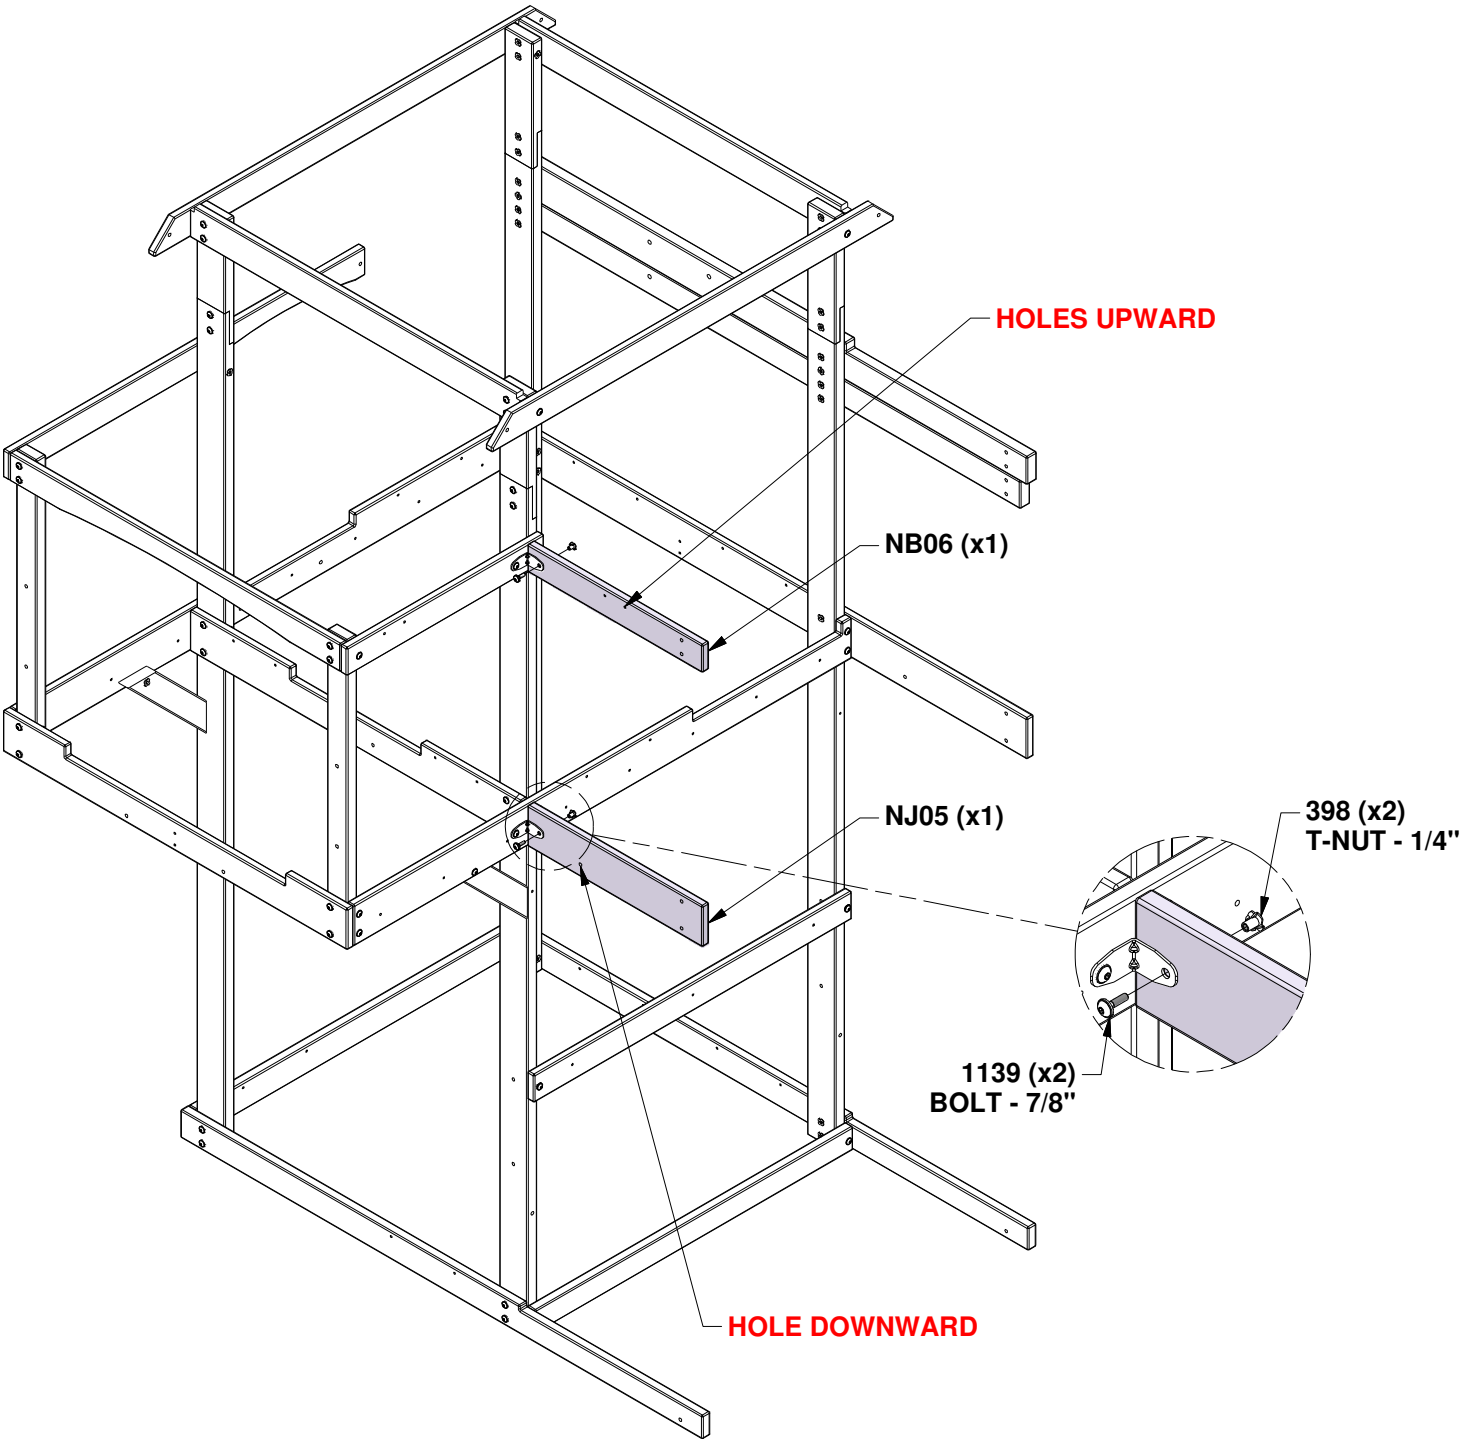

STEP 11 - FORT ASSEMBLY




OG05 UPRIGHT - W4L21027
(x1) 1 1/8"x3 1/4"x80 3/4" (30x84x2052)



OG06 UPRIGHT - W4L19929
(x1) 1 1/8"x3 1/4"x80 3/4" (30x84x2052)

QTY	PART NUMBER	DESCRIPTION
12	H100398	T-NUT 1/4 BLK
12	H100405	WASHER LOCK EXT 6x15 BLK
8	H100488	BOLT WH 1/4x2 BLK
4	H100567	BOLT WH 1/4x2-1/4 BLK

INSTALL T-NUTS IN WOOD FIRST

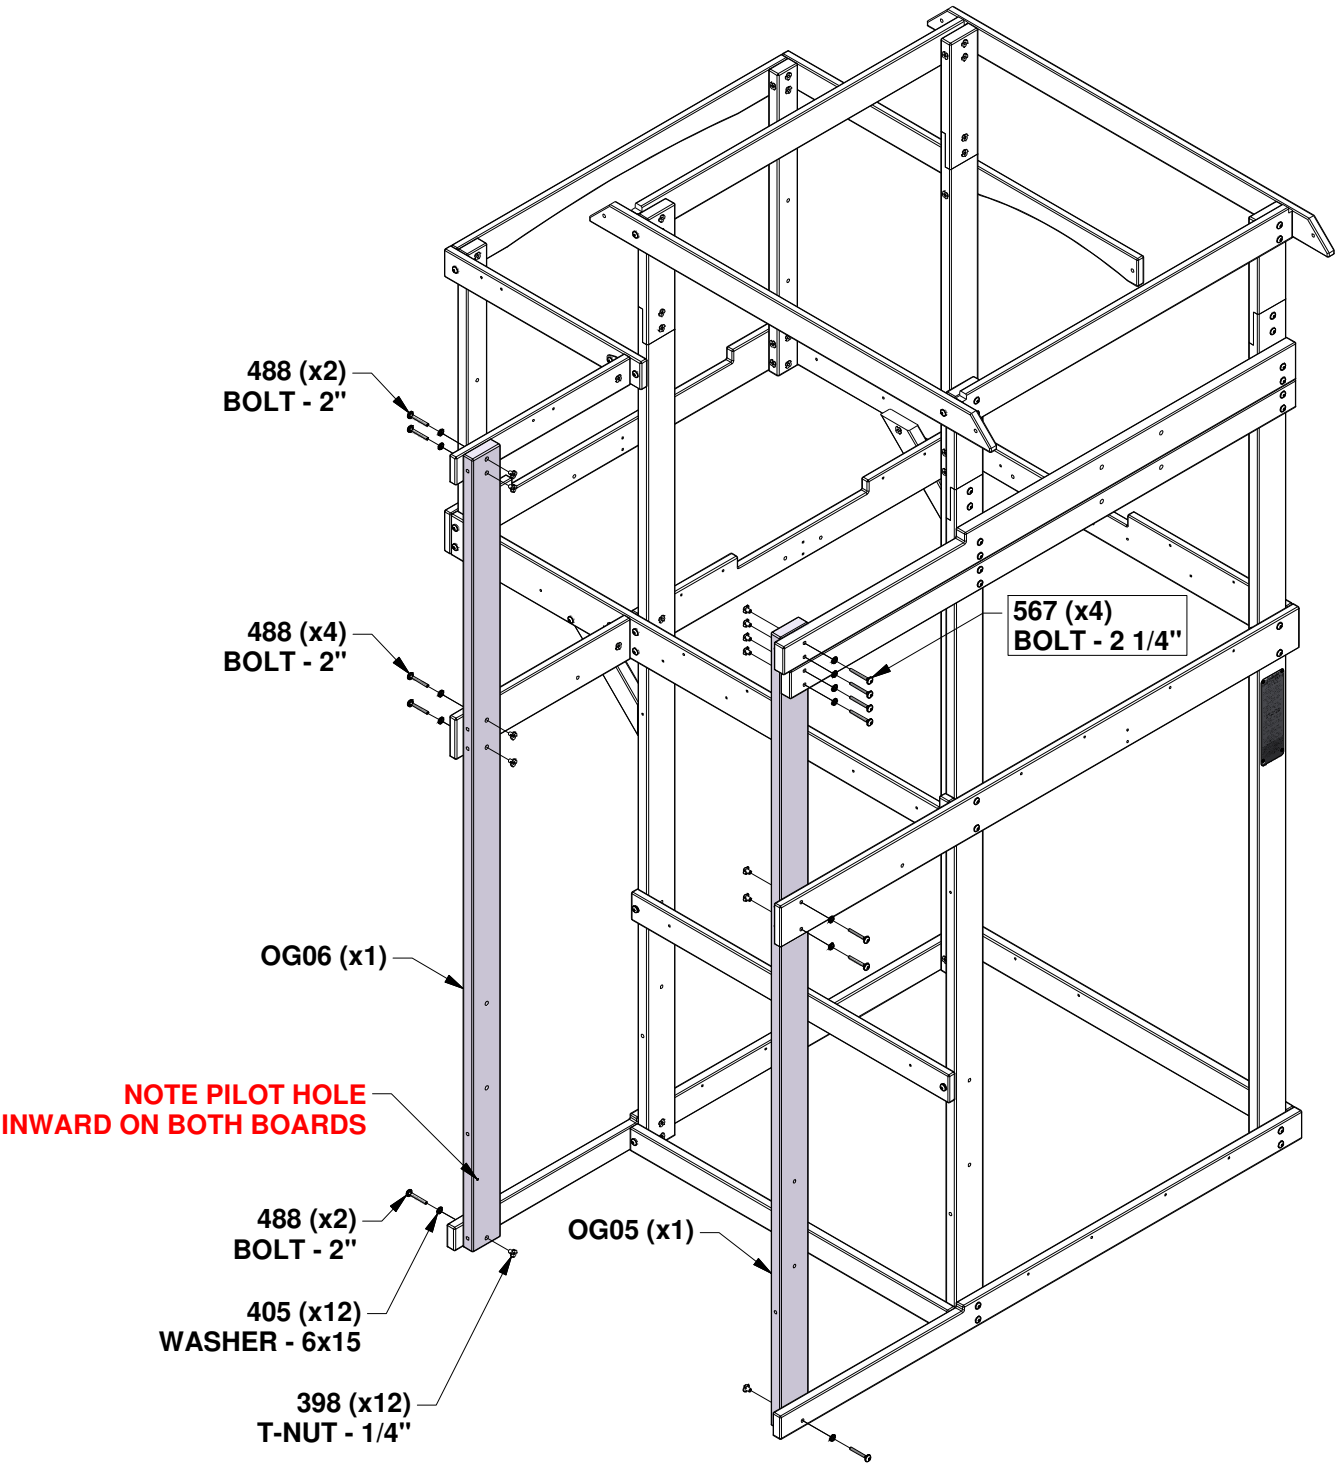


STEP 12 - FORT ASSEMBLY



NB02 WALL RAIL - W4L20966
(x1) 3/4"x2 7/8"x37 1/2" (20x72x952)




NJ06 FLOOR RAIL - W4L19928
(x1) 3/4"x4 1/8"x37 1/2" (20x106x952)



HR08 PORCH GROUND BOARD - W4L19932
(x1) 1"x2 3/8"x37 1/2" (24x60x952)

QTY	PART NUMBER	DESCRIPTION
8	H100398	T-NUT 1/4 BLK
8	H100405	WASHER LOCK EXT 6x15 BLK
2	H101174	BOLT WH 1/4x4 1/4 BLK
6	H101368	BOLT WH 1/4x4 BLK

INSTALL T-NUTS IN WOOD FIRST

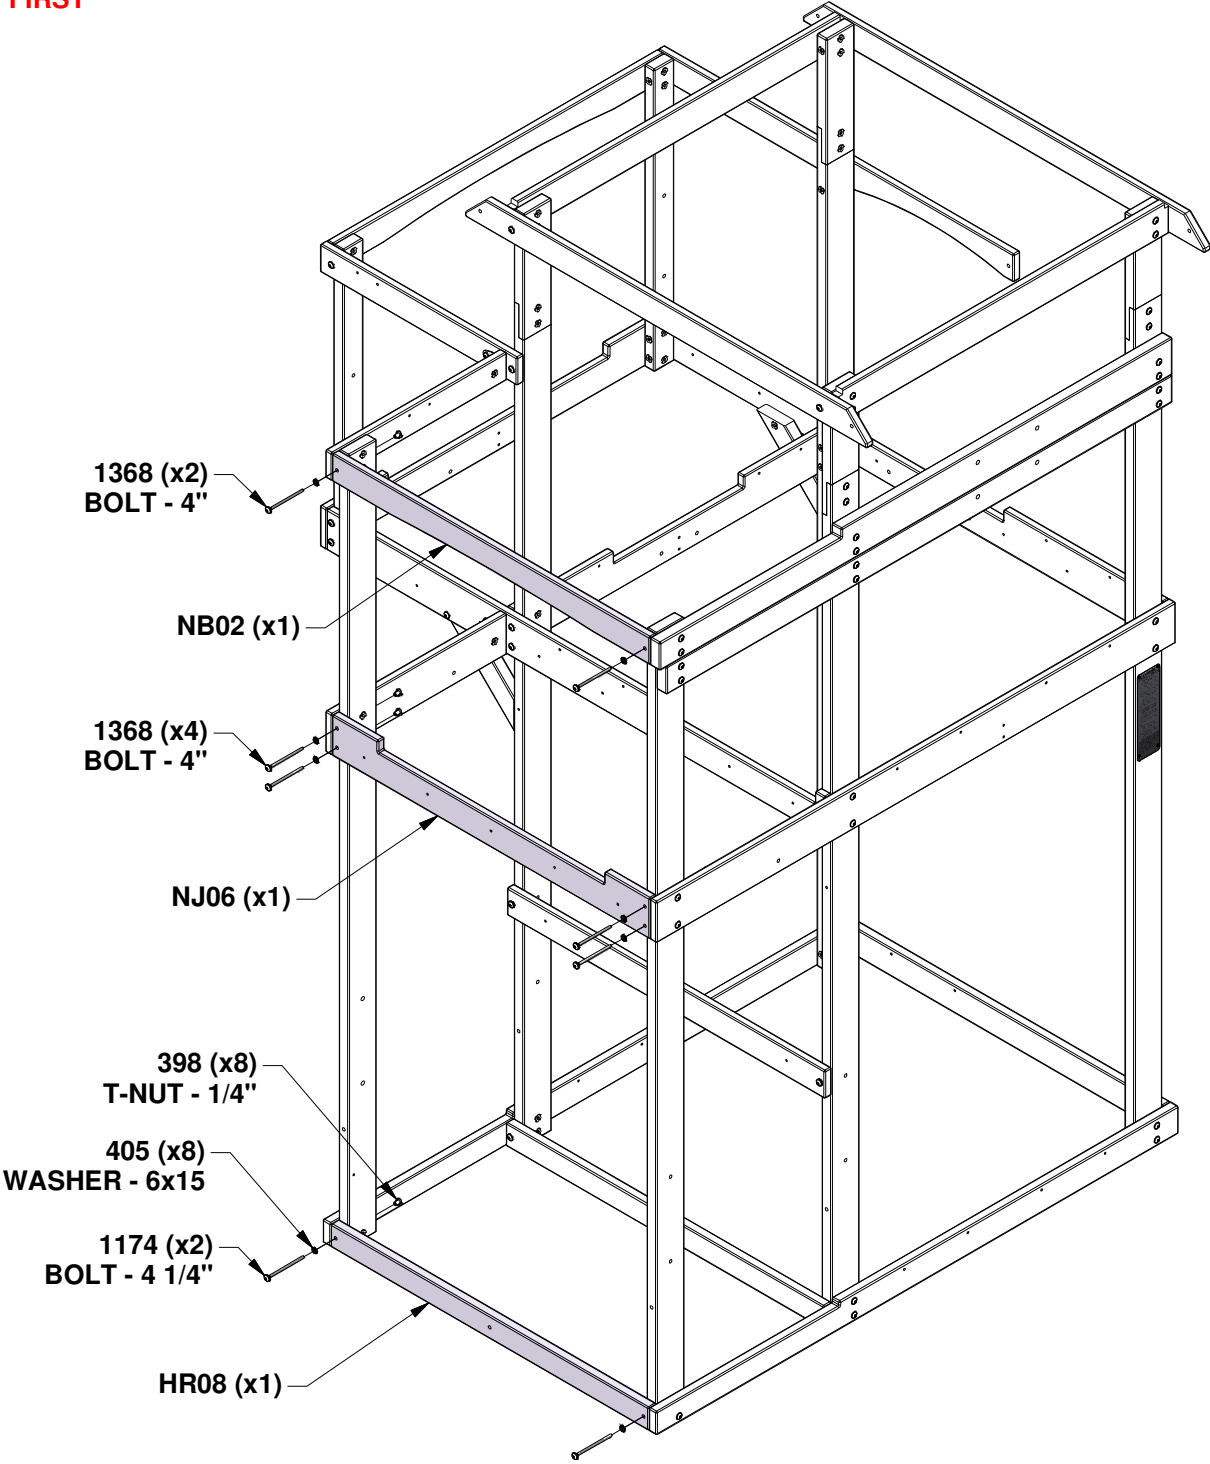


STEP 13 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100398	T-NUT 1/4 BLK
2	H100403	LAG SCREW WH 1/4x1-1/2 BLK
4	H100405	WASHER LOCK EXT 6x15 BLK
2	H100488	BOLT WH 1/4x2 BLK



OR01 DECK BRACE - W4L21008
(x2) 1 1/8"x2 3/8"x13 1/8" (30x60x332)

INSTALL T-NUTS IN WOOD FIRST

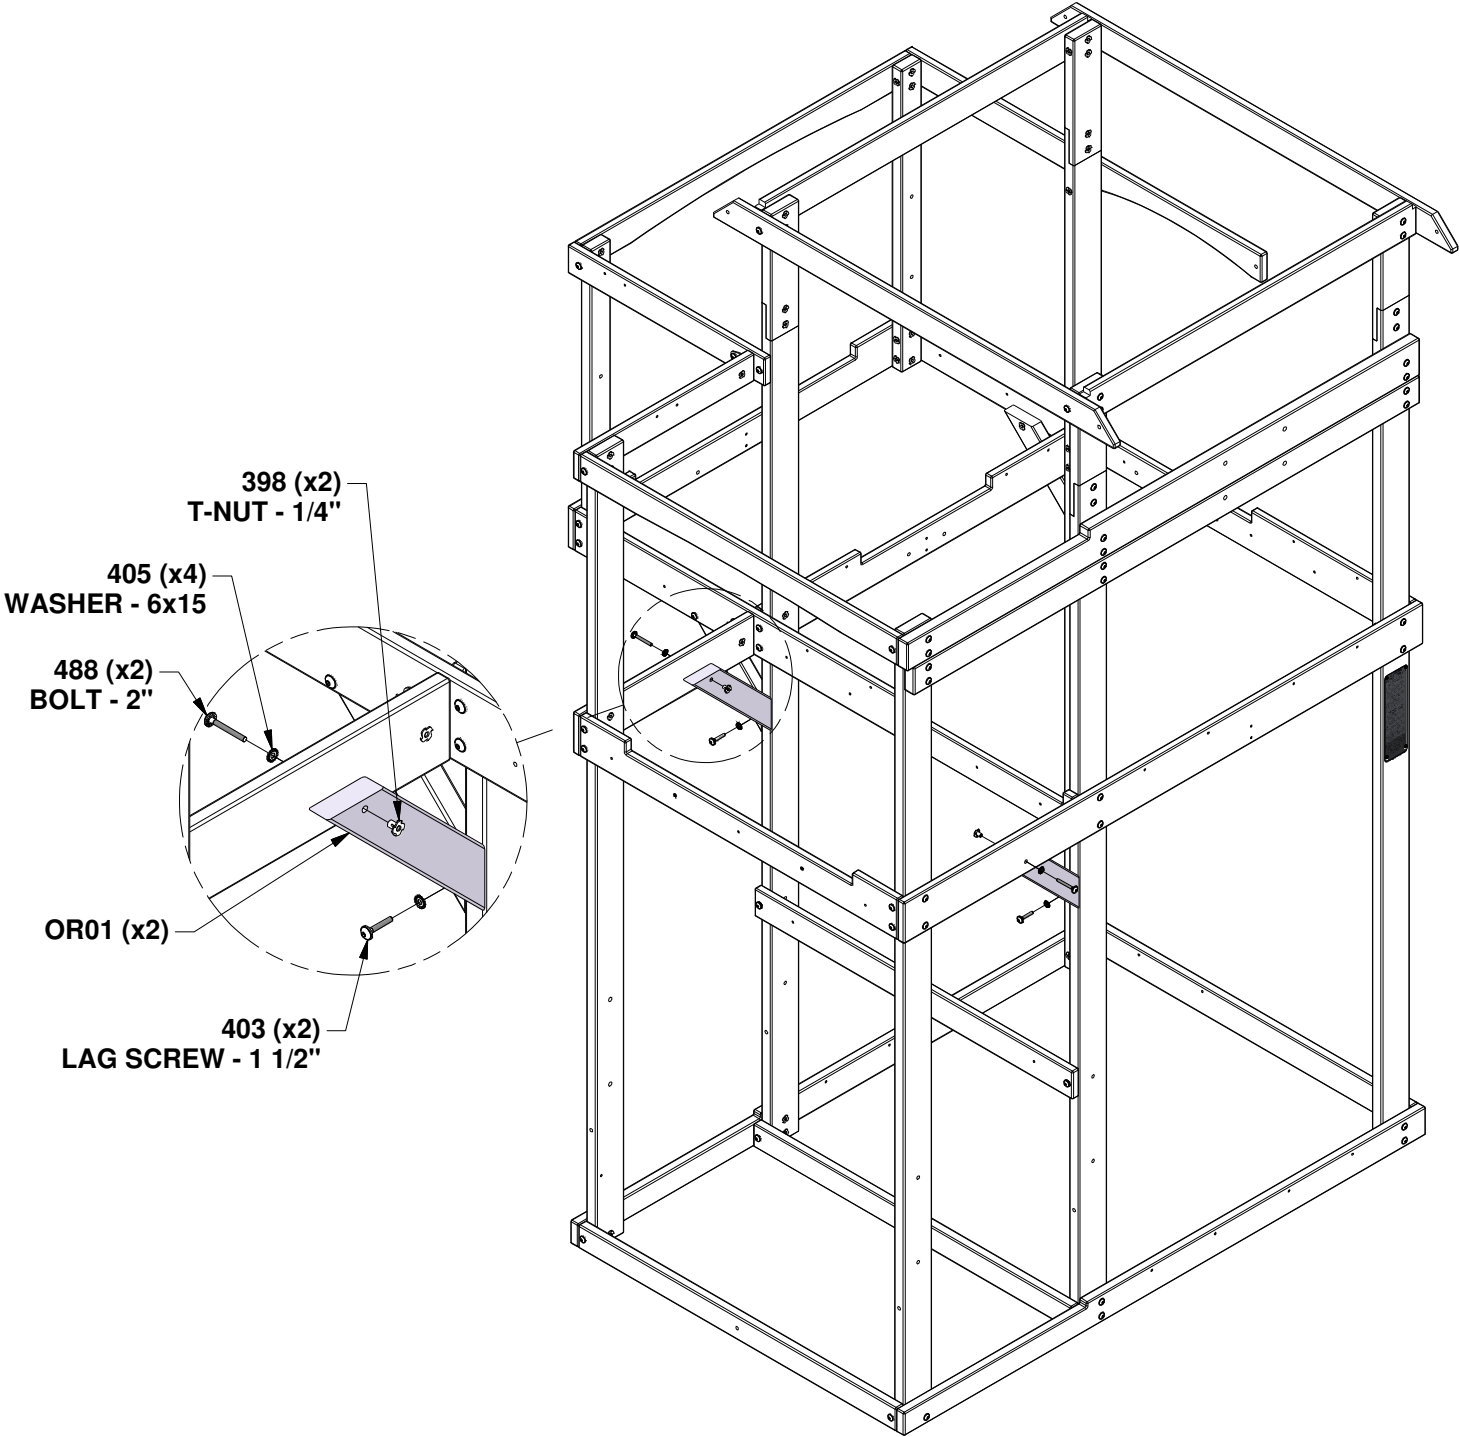

STEP 14 - FORT ASSEMBLY






OR02 FLOOR JOIST - W4L20994
(x1) 1 1/8"x2 3/8"x37 1/2" (30x60x952)

QTY	PART NUMBER	DESCRIPTION
10	H100382	SCREW PFH 8x1 3/4 BLK
4	H100391	SCREW PFH 8x2 BLK
2	H100398	T-NUT 1/4 BLK



PP01 SUPPORT BOARD - W4L20991
(x2) 1 1/4"x1 1/4"x35 1/8" (32x32x891)

INSTALL T-NUTS IN WOOD FIRST
ALIGN PILOT HOLES IN FLOOR JOIST

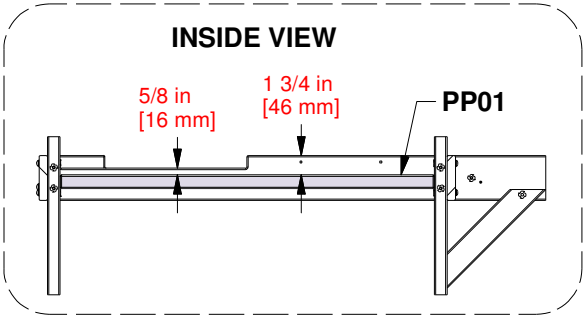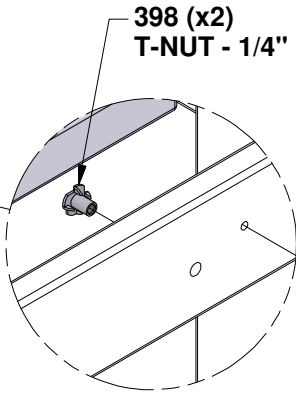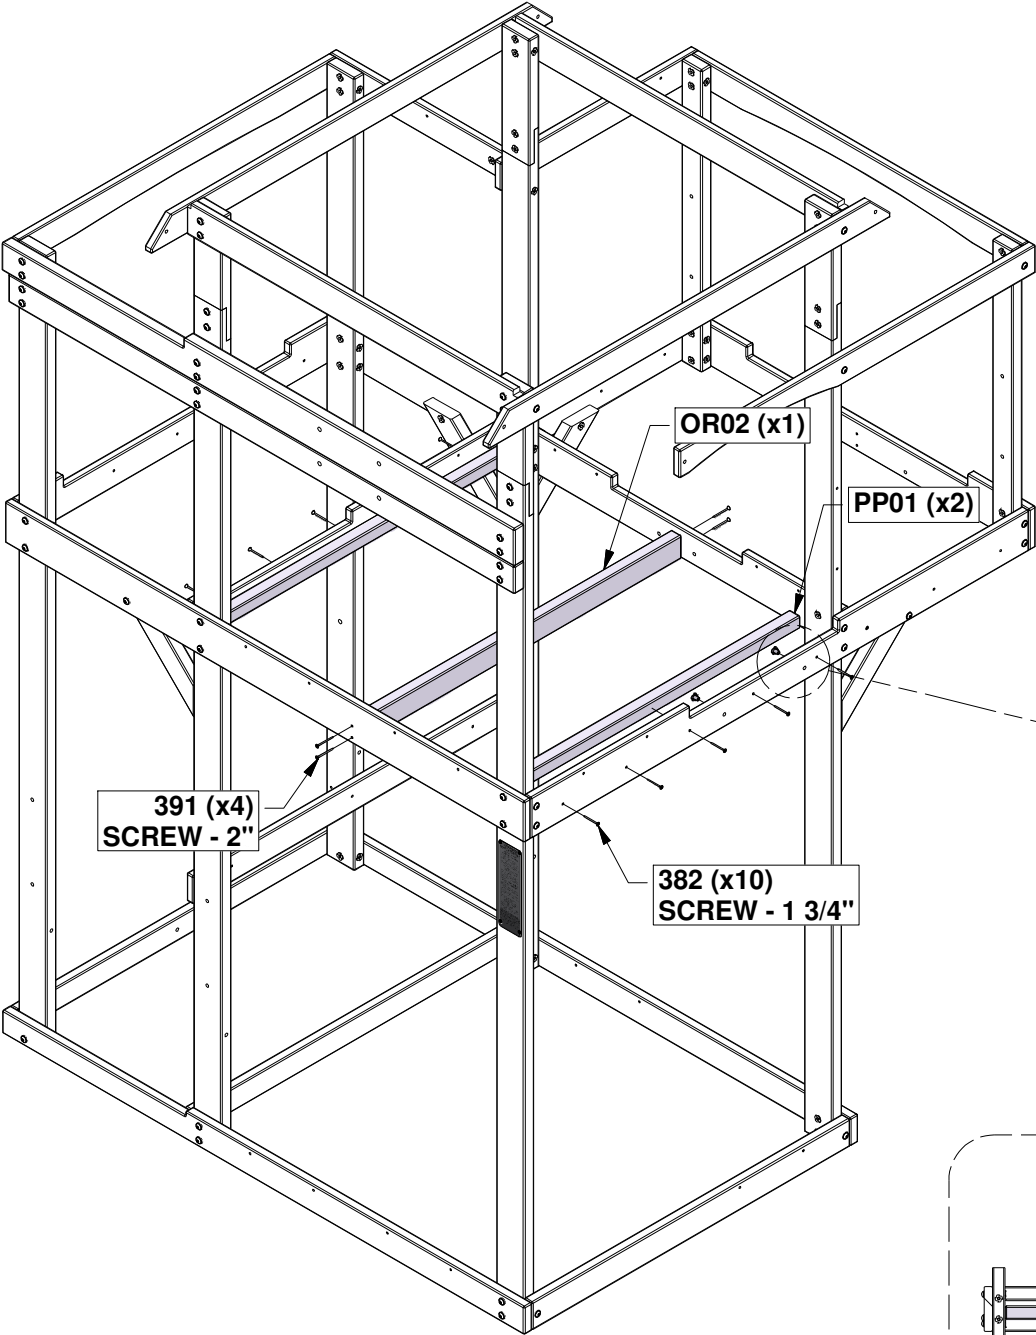


STEP 15 - FORT ASSEMBLY



OR05 FLOOR JOIST - W4L20995
(x1) 1 1/8"x2 3/8"x20 1/2" (30x60x520)




PP02 SUPPORT BOARD - W4L20993
(x2) 1 1/4"x1 1/4"x19 1/4" (32x32x489)



A4M04303 L BRACKET
(x2) 2.5x38x38x49


QTY	PART NUMBER	DESCRIPTION
6	H100382	SCREW PFH 8x1 3/4 BLK
2	H100391	SCREW PFH 8x2 BLK
2	H100398	T-NUT 1/4 BLK
1	H100399	NUT BARREL WH 1/4x7/8 BLK
3	H101139	BOLT WH 1/4x7/8 BLK

INSTALL T-NUTS IN WOOD FIRST

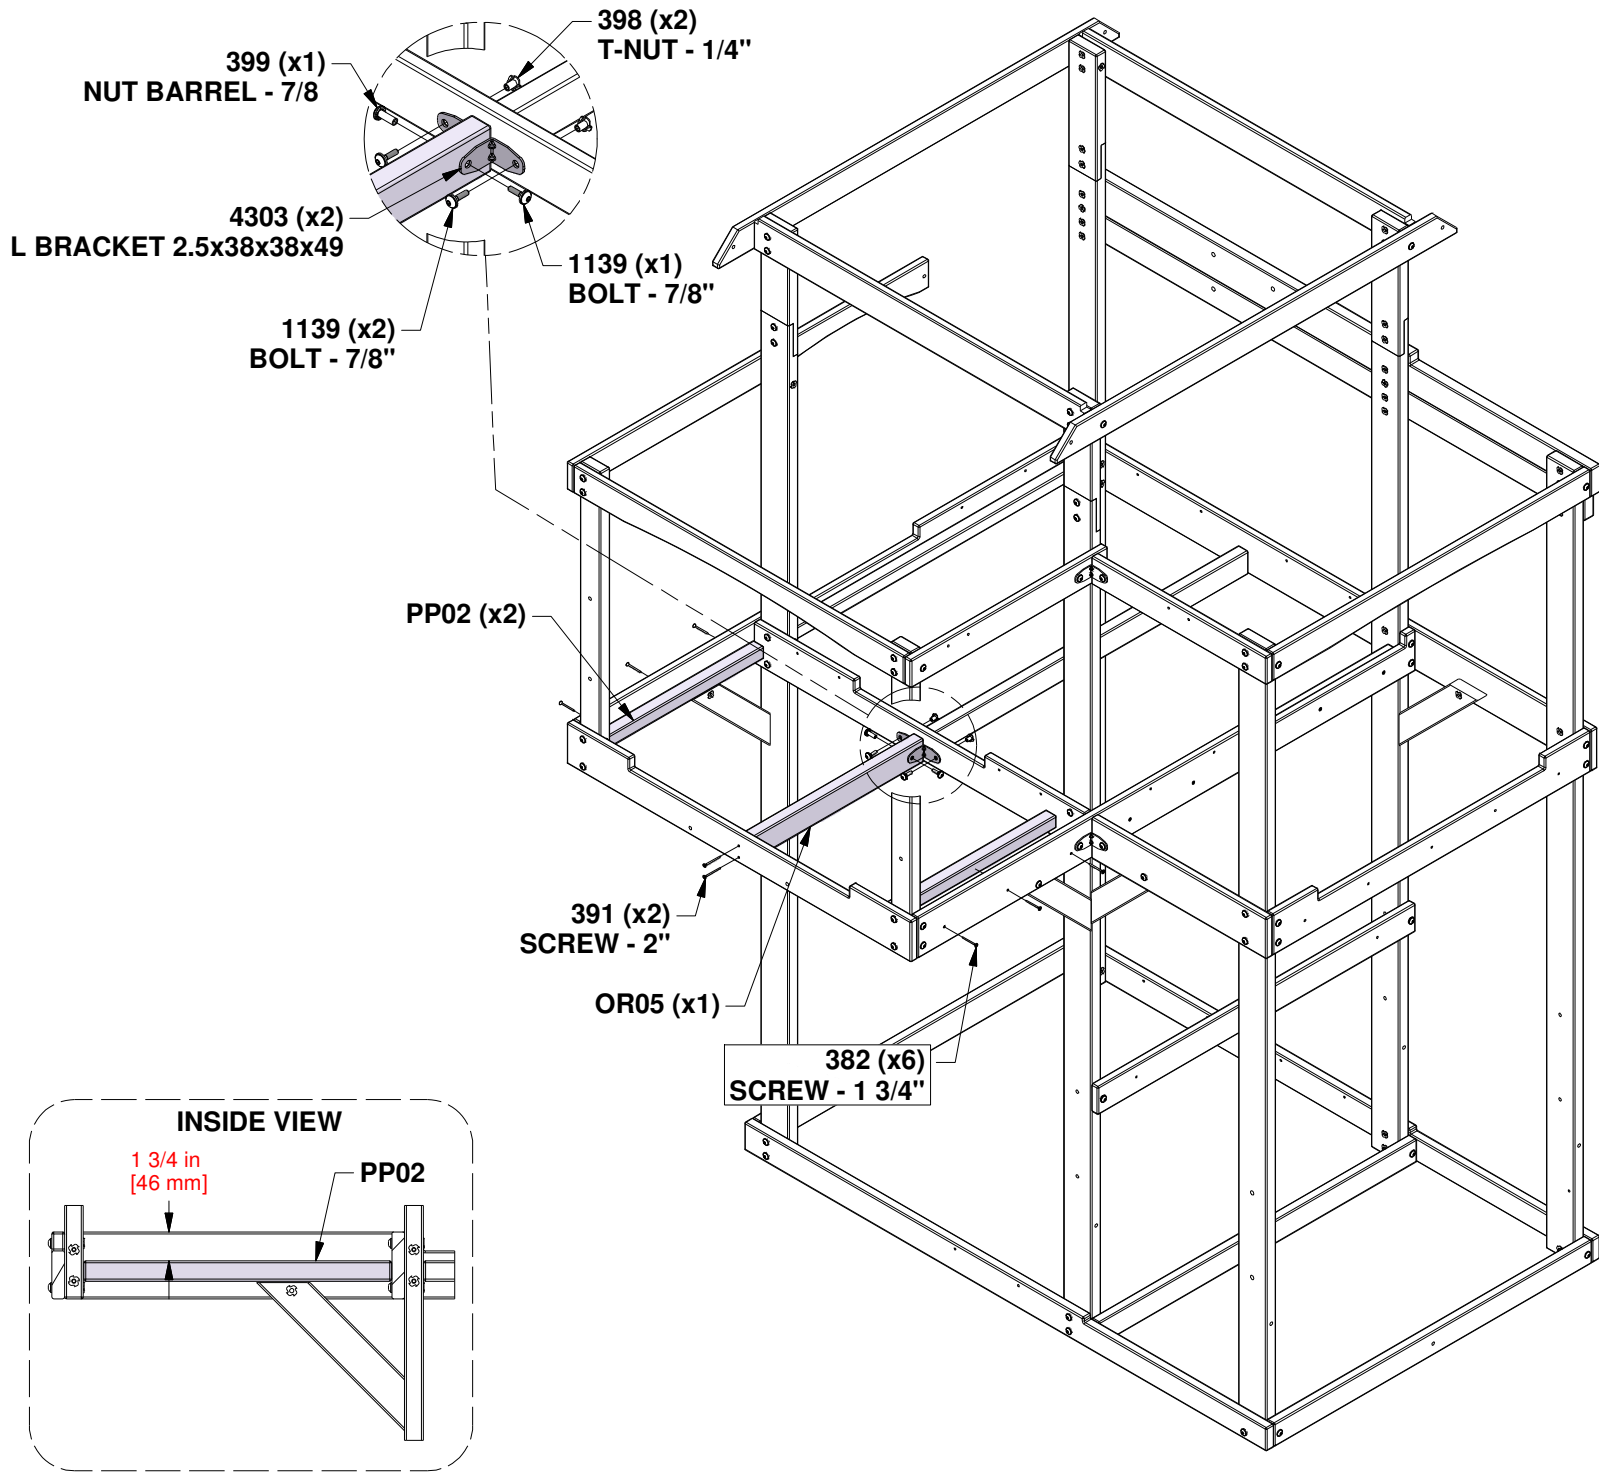

STEP 16 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
46	H100086	SCREW PFH 8x1-1/2




MS11 FLOOR BOARD - W4L21002
(x8) 5/8"x3 3/4"x39" (16x96x990)



MS12 FLOOR BOARD - W4L21003
(x2) 5/8"x3 1/2"x39" (16x89x990)

SPACE BOARDS EVENLY

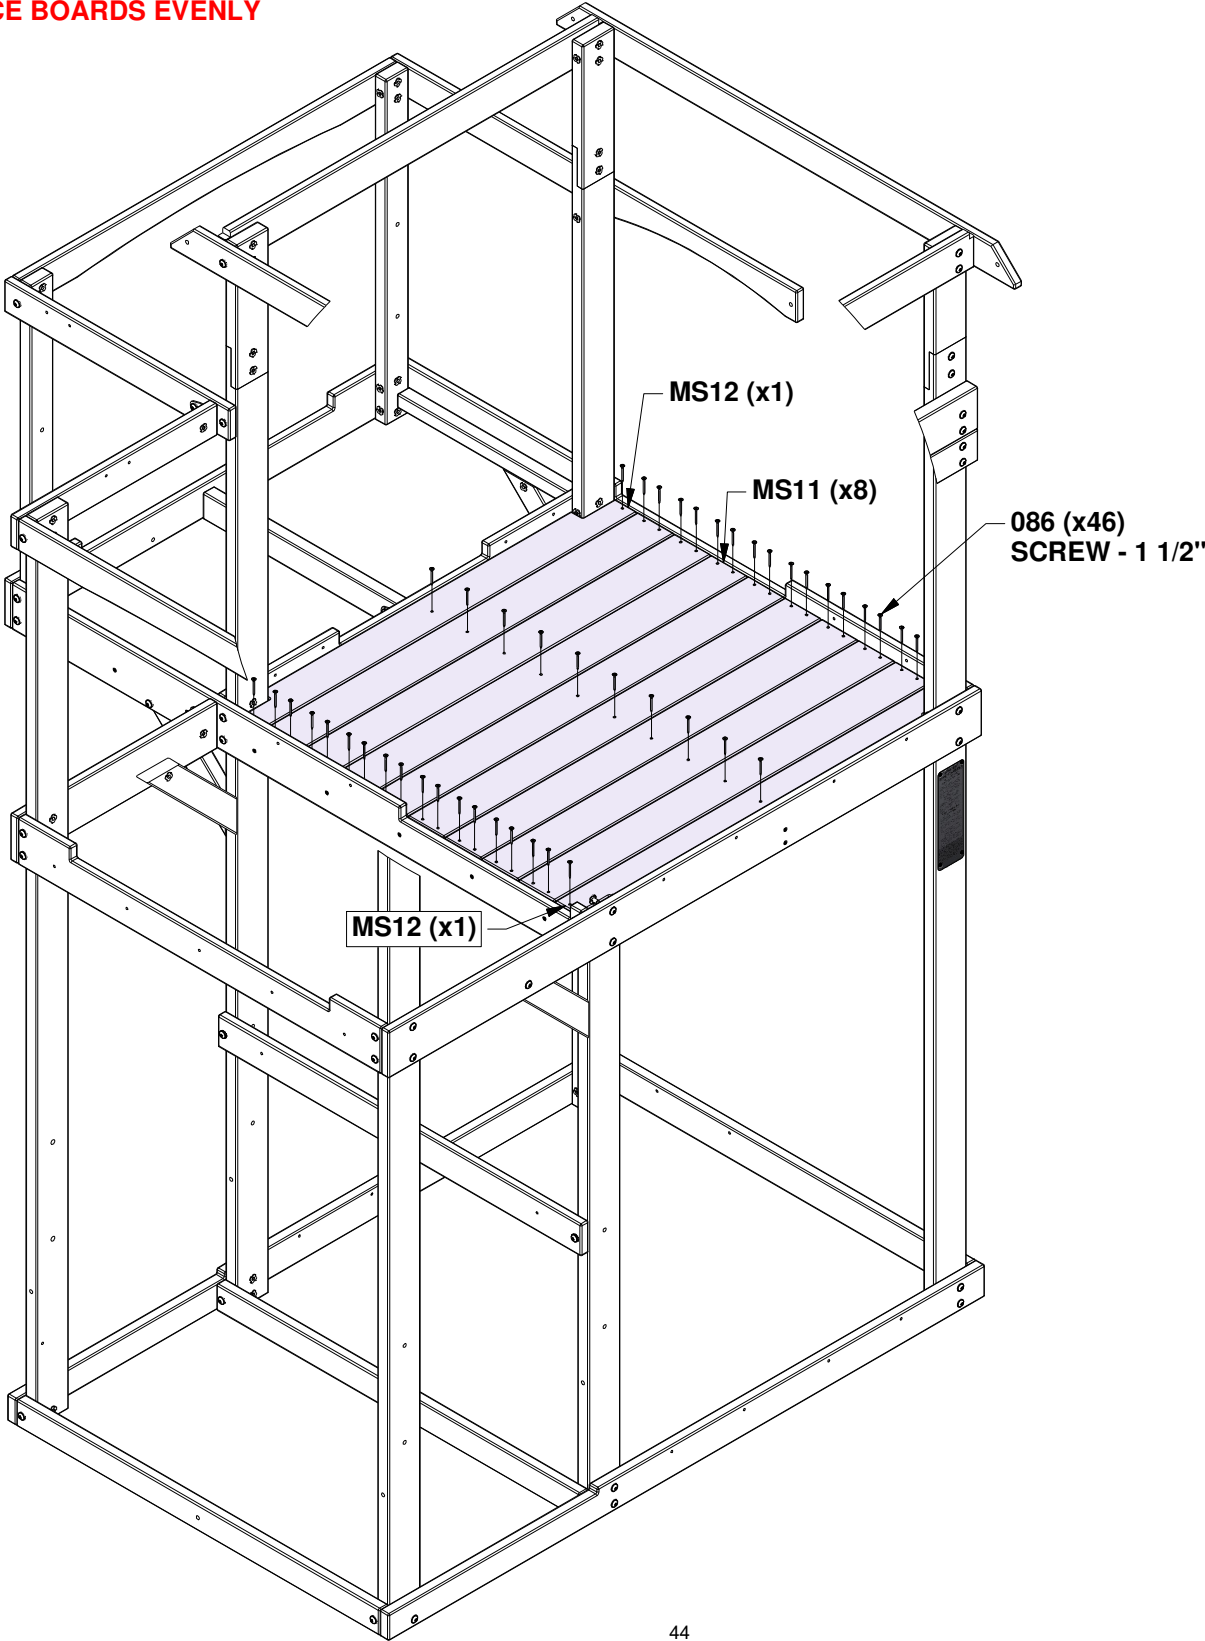

STEP 17 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
25	H100086	SCREW PFH 8x1-1/2




MJ10 FLOOR BOARD - W4L21001
(x1) 5/8"x5 1/4"x39" (16x133x990)



MS11 FLOOR BOARD - W4L21002
(x4) 5/8"x3 3/4"x39" (16x96x990)

SPACE BOARDS EVENLY

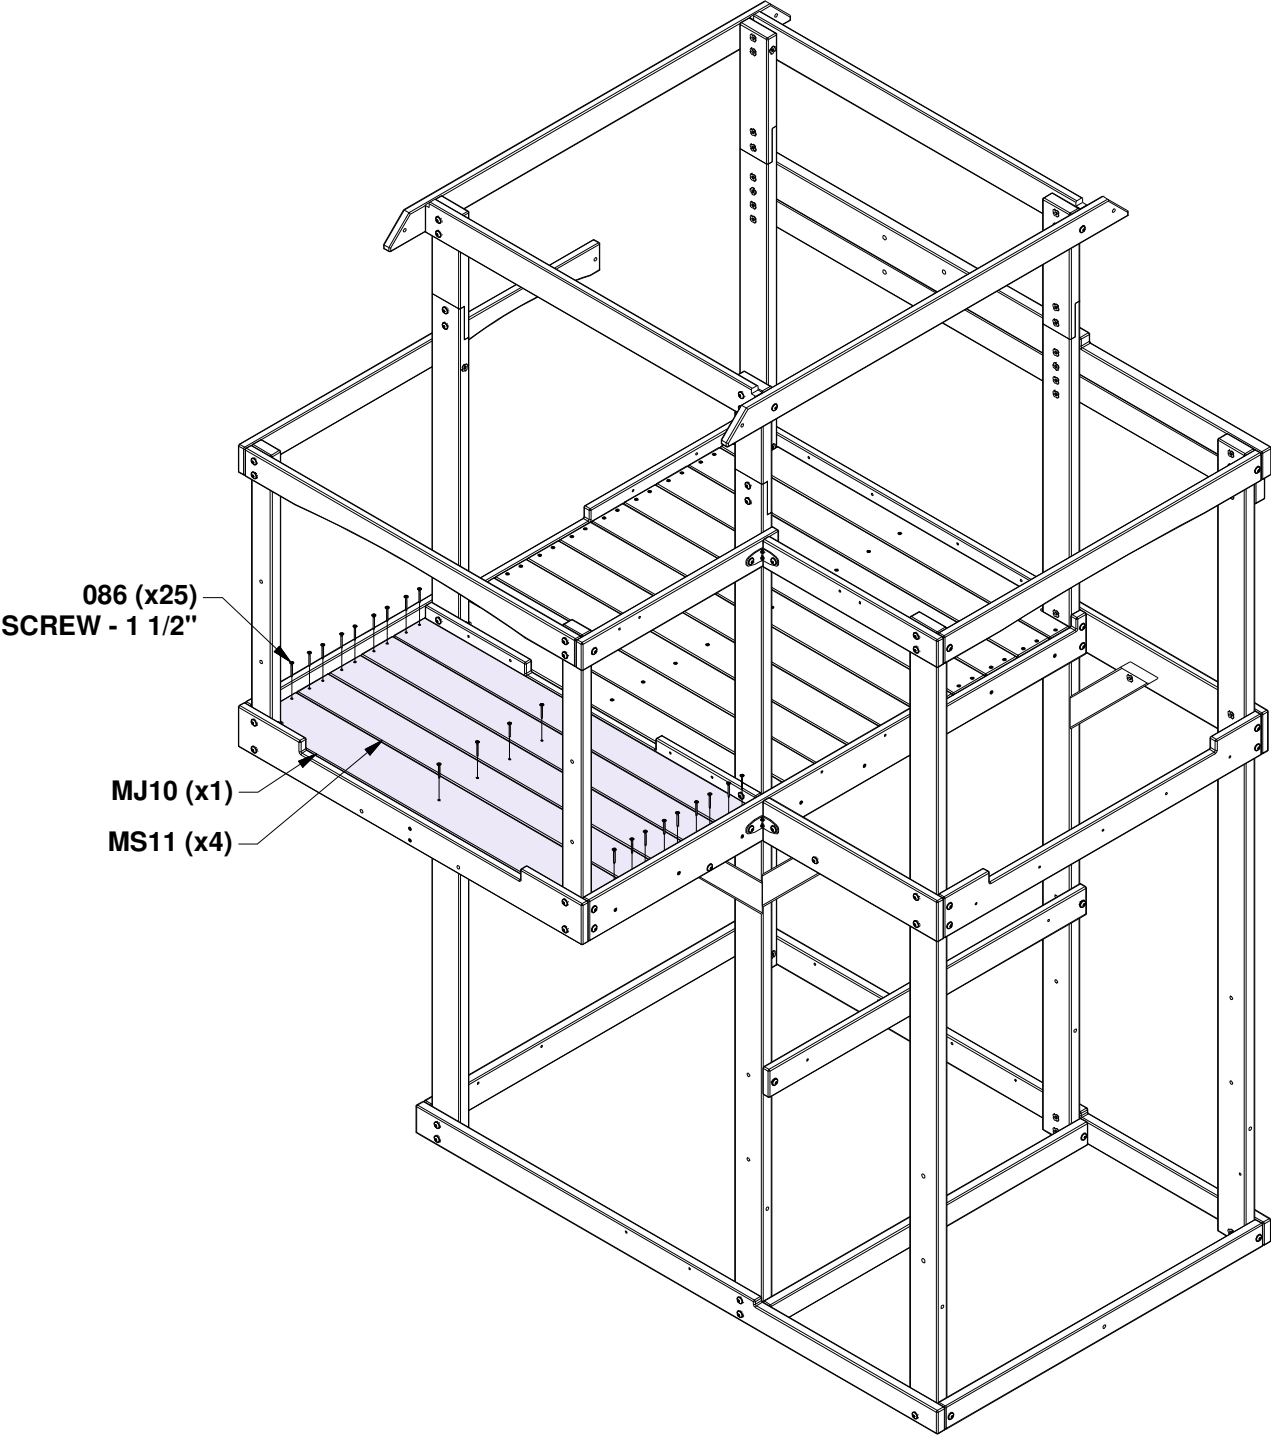

STEP 18 - FORT ASSEMBLY




PP01 SUPPORT BOARD - W4L20991
(x1) 1 1/4"x1 1/4"x35 1/8" (32x32x891)


QTY	PART NUMBER	DESCRIPTION
5	H100382	SCREW PFH 8x1 3/4 BLK
6	H100391	SCREW PFH 8x2 BLK



PP03 SUPPORT BOARD - W4L20992
(x1) 1 1/4"x1 1/4"x35" (32x32x890)

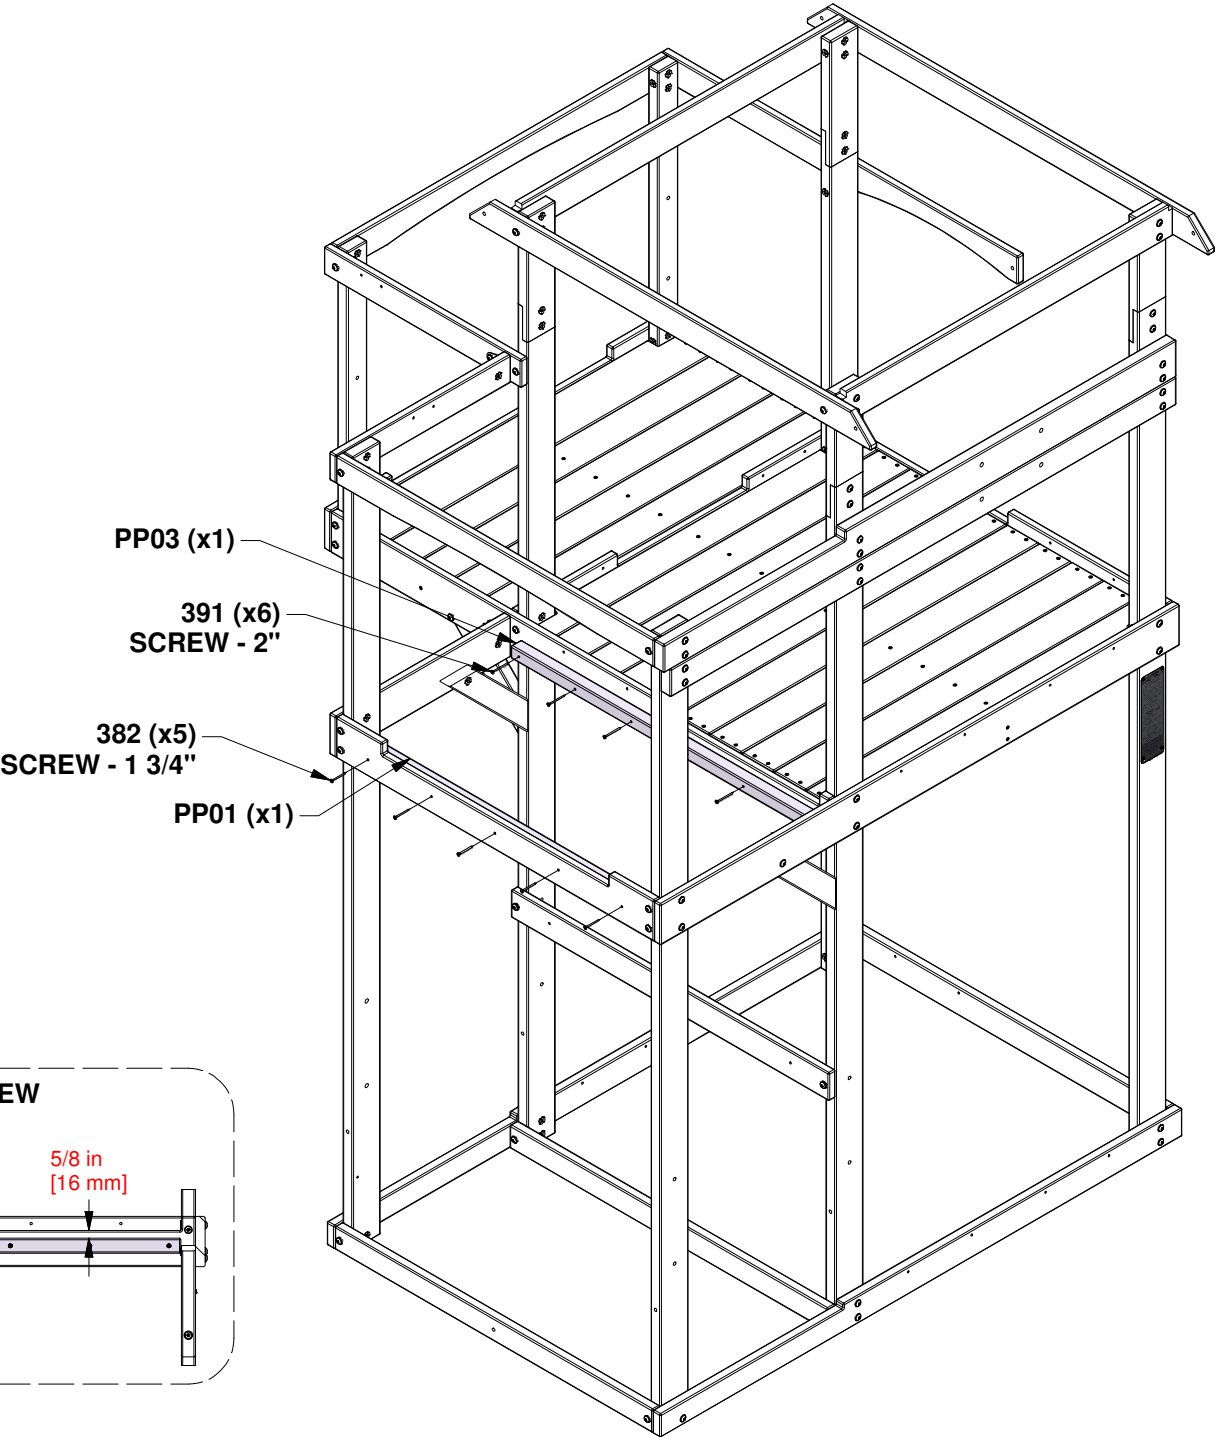

INSIDE VIEW

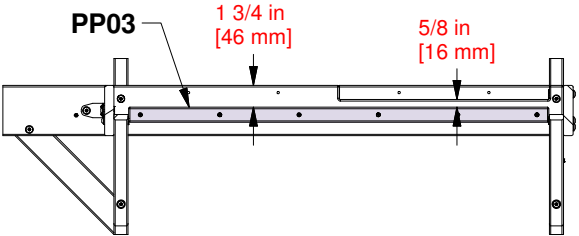

STEP 19 - FORT ASSEMBLY




MS08 FLOOR BOARD - W4L20999
(x2) 5/8"x3 1/2"x19 3/4" (16x89x503)



MS09 FLOOR BOARD - W4L21000
(x8) 5/8"x3 3/4"x19 3/4" (16x96x503)


QTY	PART NUMBER	DESCRIPTION
36	H100086	SCREW PFH 8x1-1/2

SPACE BOARDS EVENLY

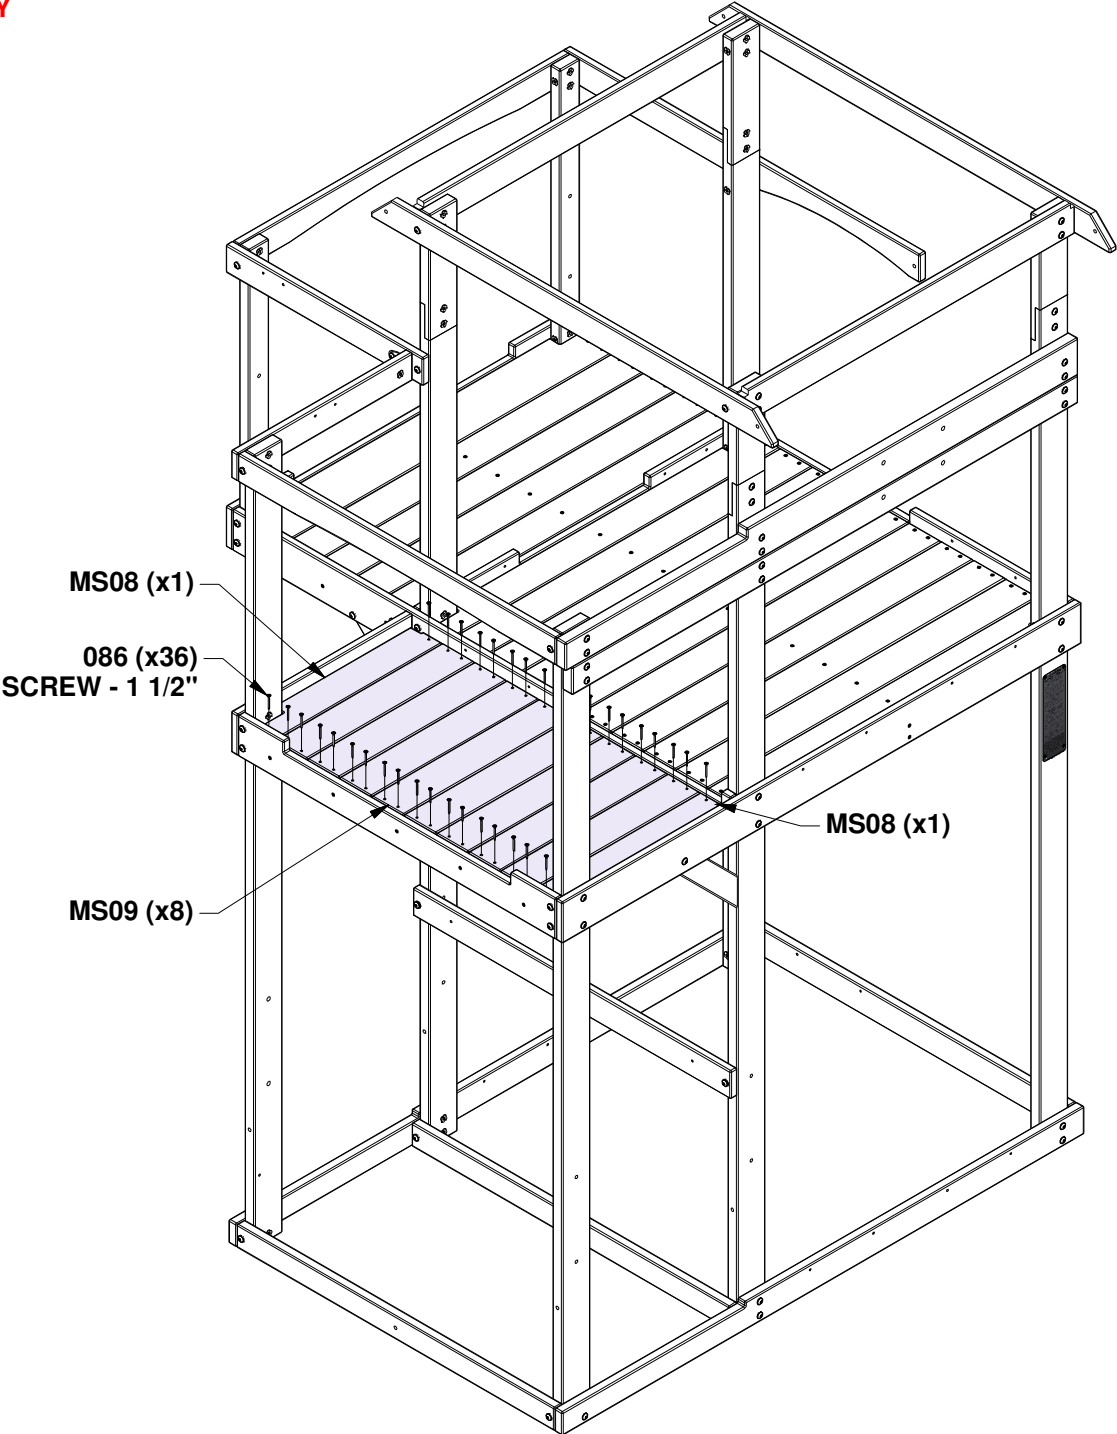


STEP 20 - FORT ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
2	H100405	WASHER LOCK EXT 6x15 BLK
2	H101026	BOLT WH 1/4x1-3/4 BLK

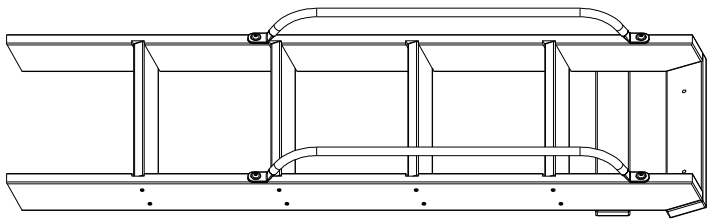

LADDER ASSEMBLY

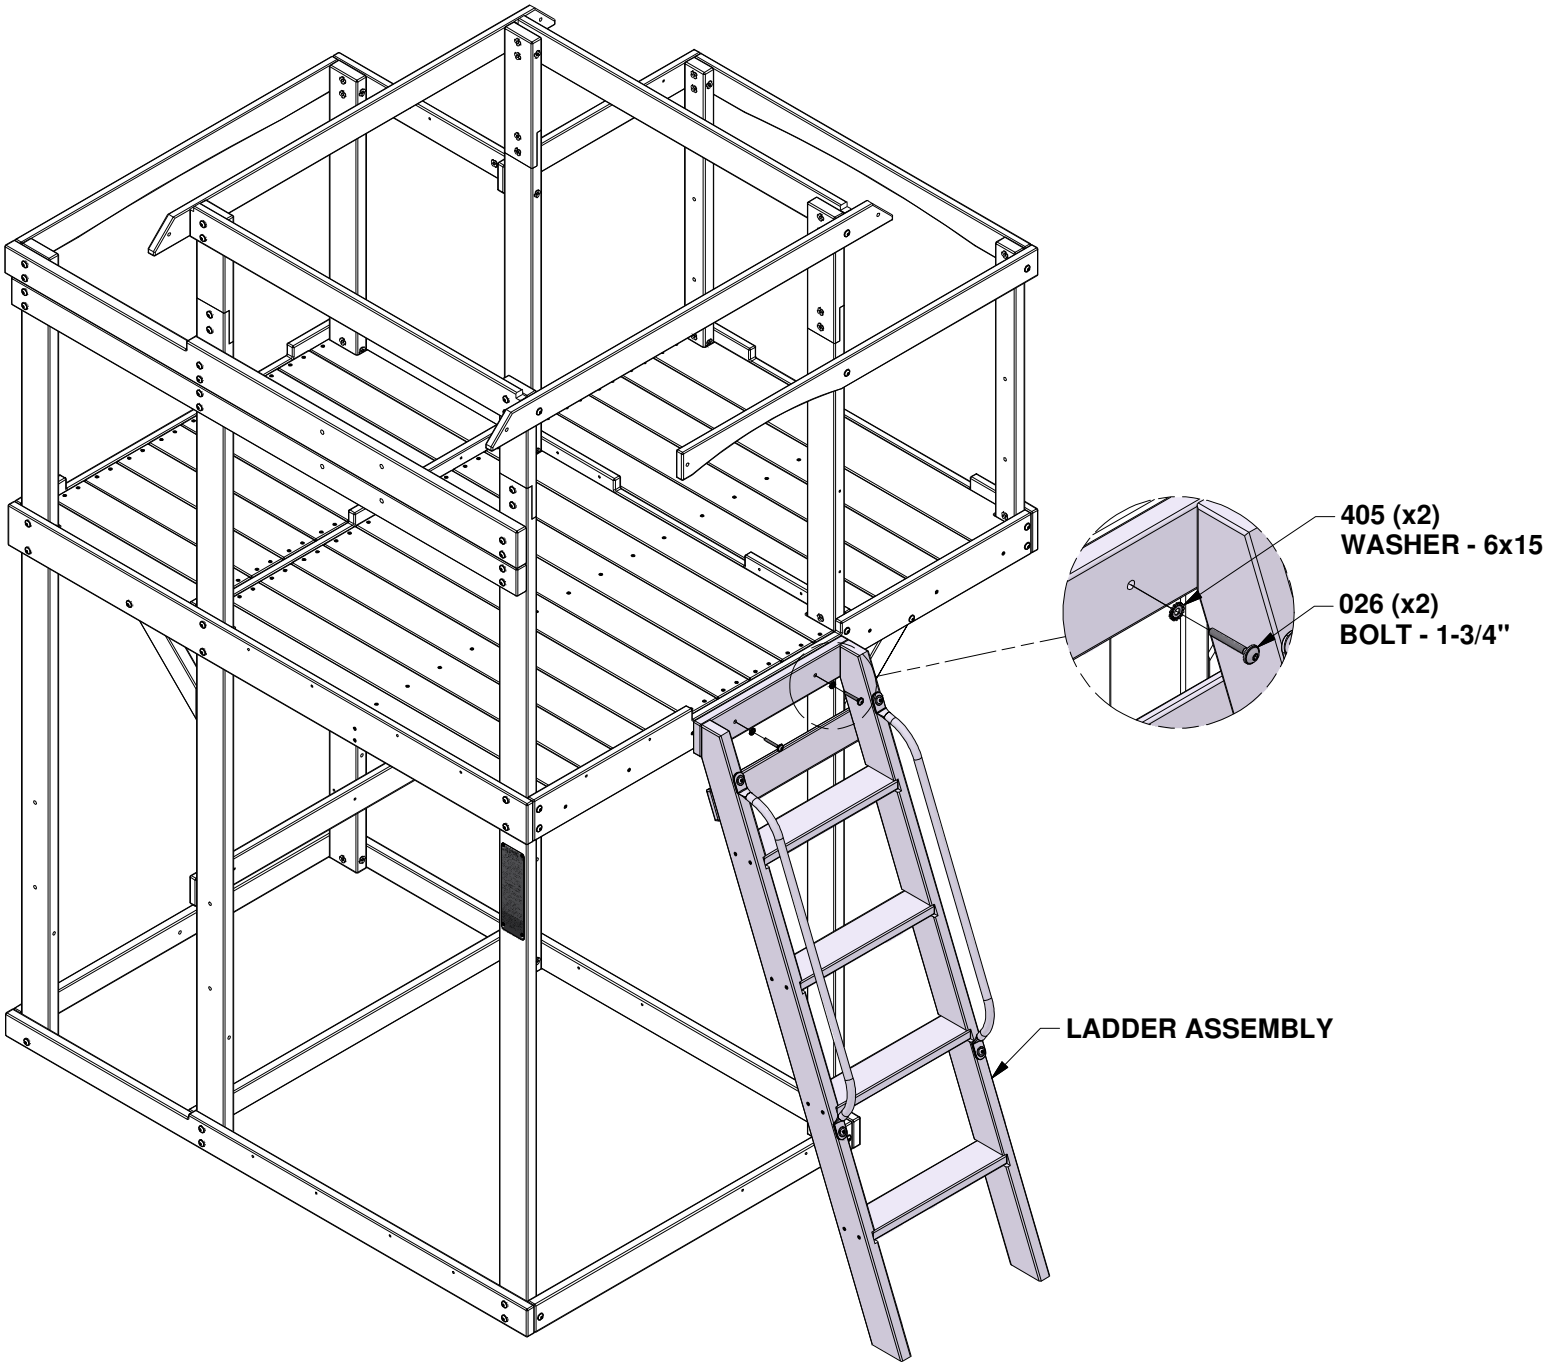


STEP 21 - FORT ASSEMBLY

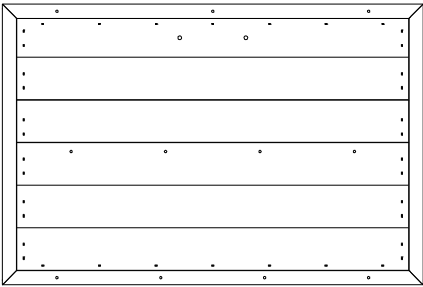

WP01 WALL PANEL - W2A04238
(x1) 1"x20 3/8"x37 3/4" (24x593x891)

QTY	PART NUMBER	DESCRIPTION
3	H100200	SCREW PFH 8x1-1/2 BLK
4	H100382	SCREW PFH 8x1 3/4 BLK

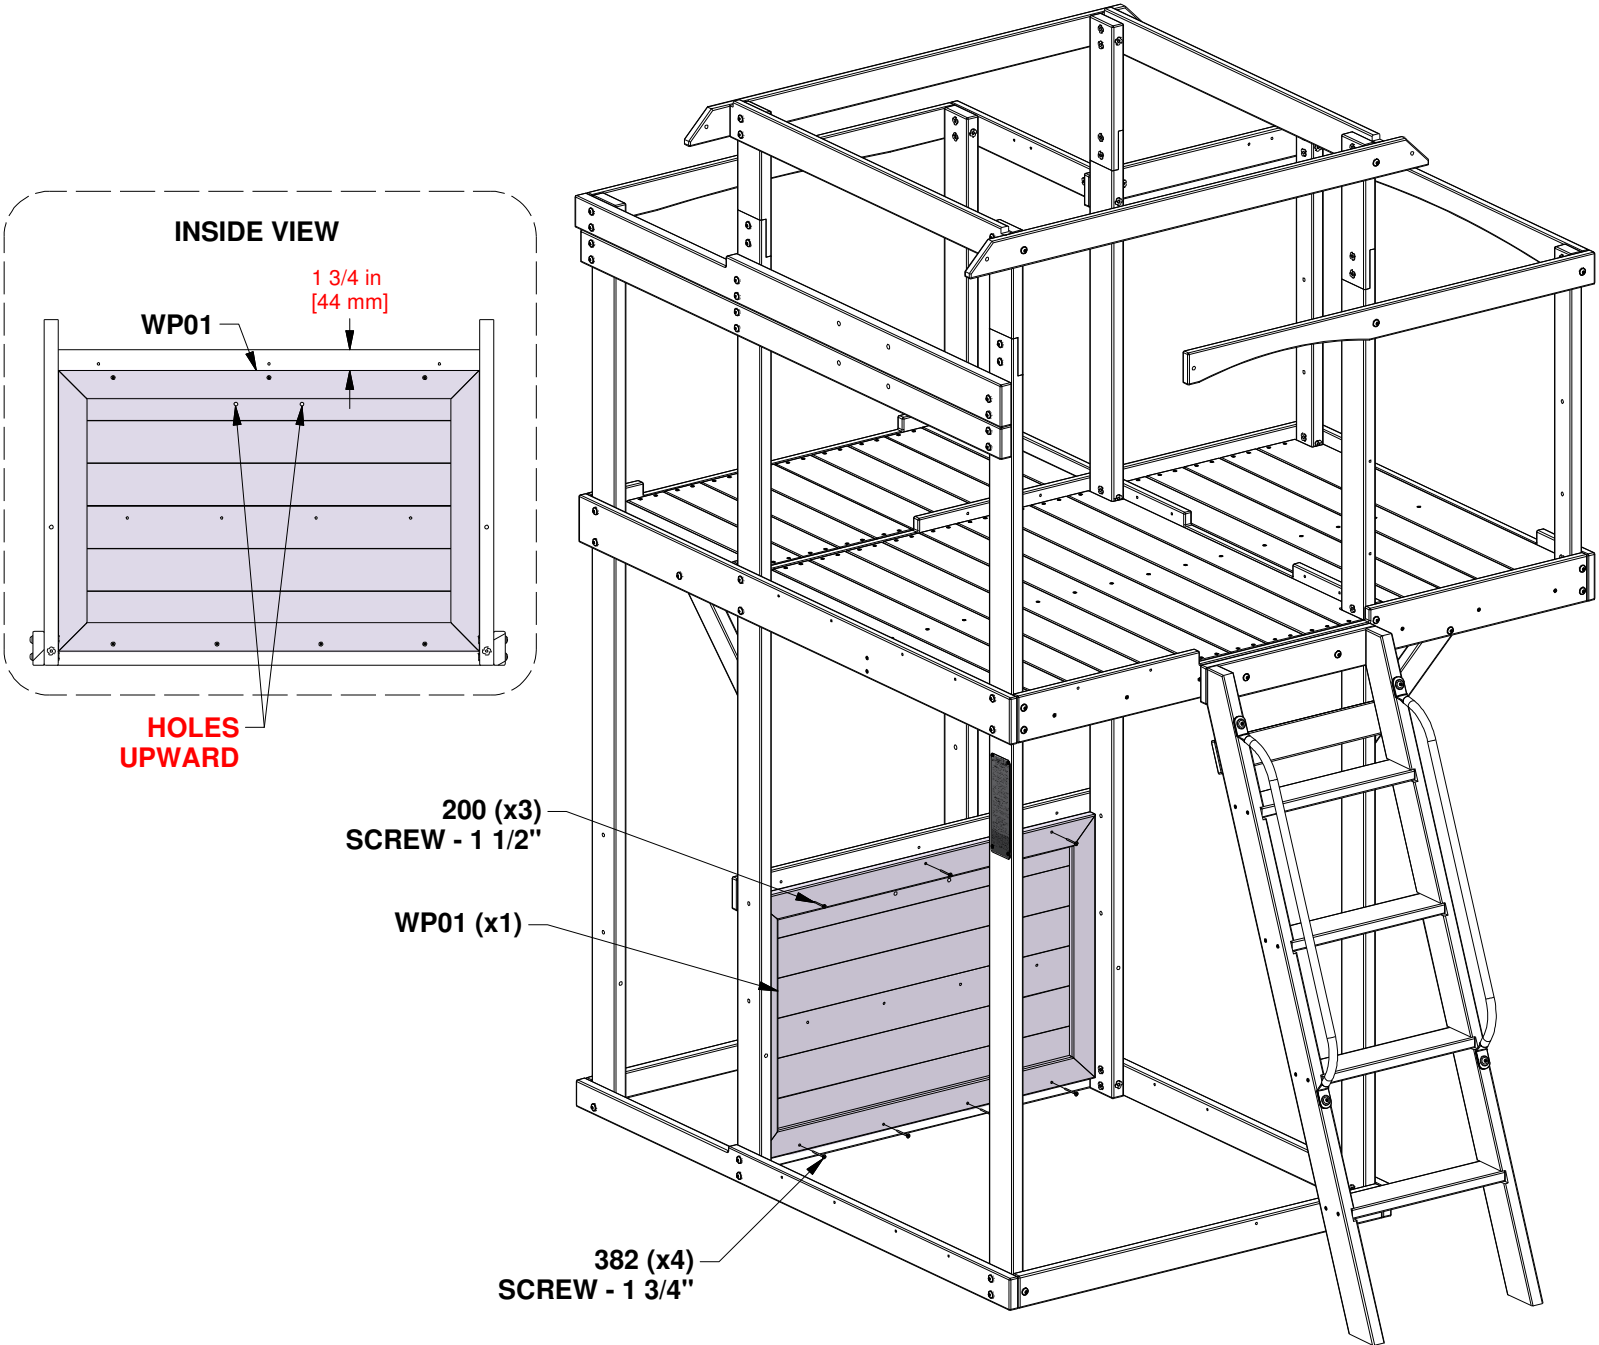


STEP 22 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
3	H100200	SCREW PFH 8x1-1/2 BLK



HC04 SUPPORT BOARD - W4L21005
(x1) 1"x1 1/8"x35 1/8" (24x28x891)

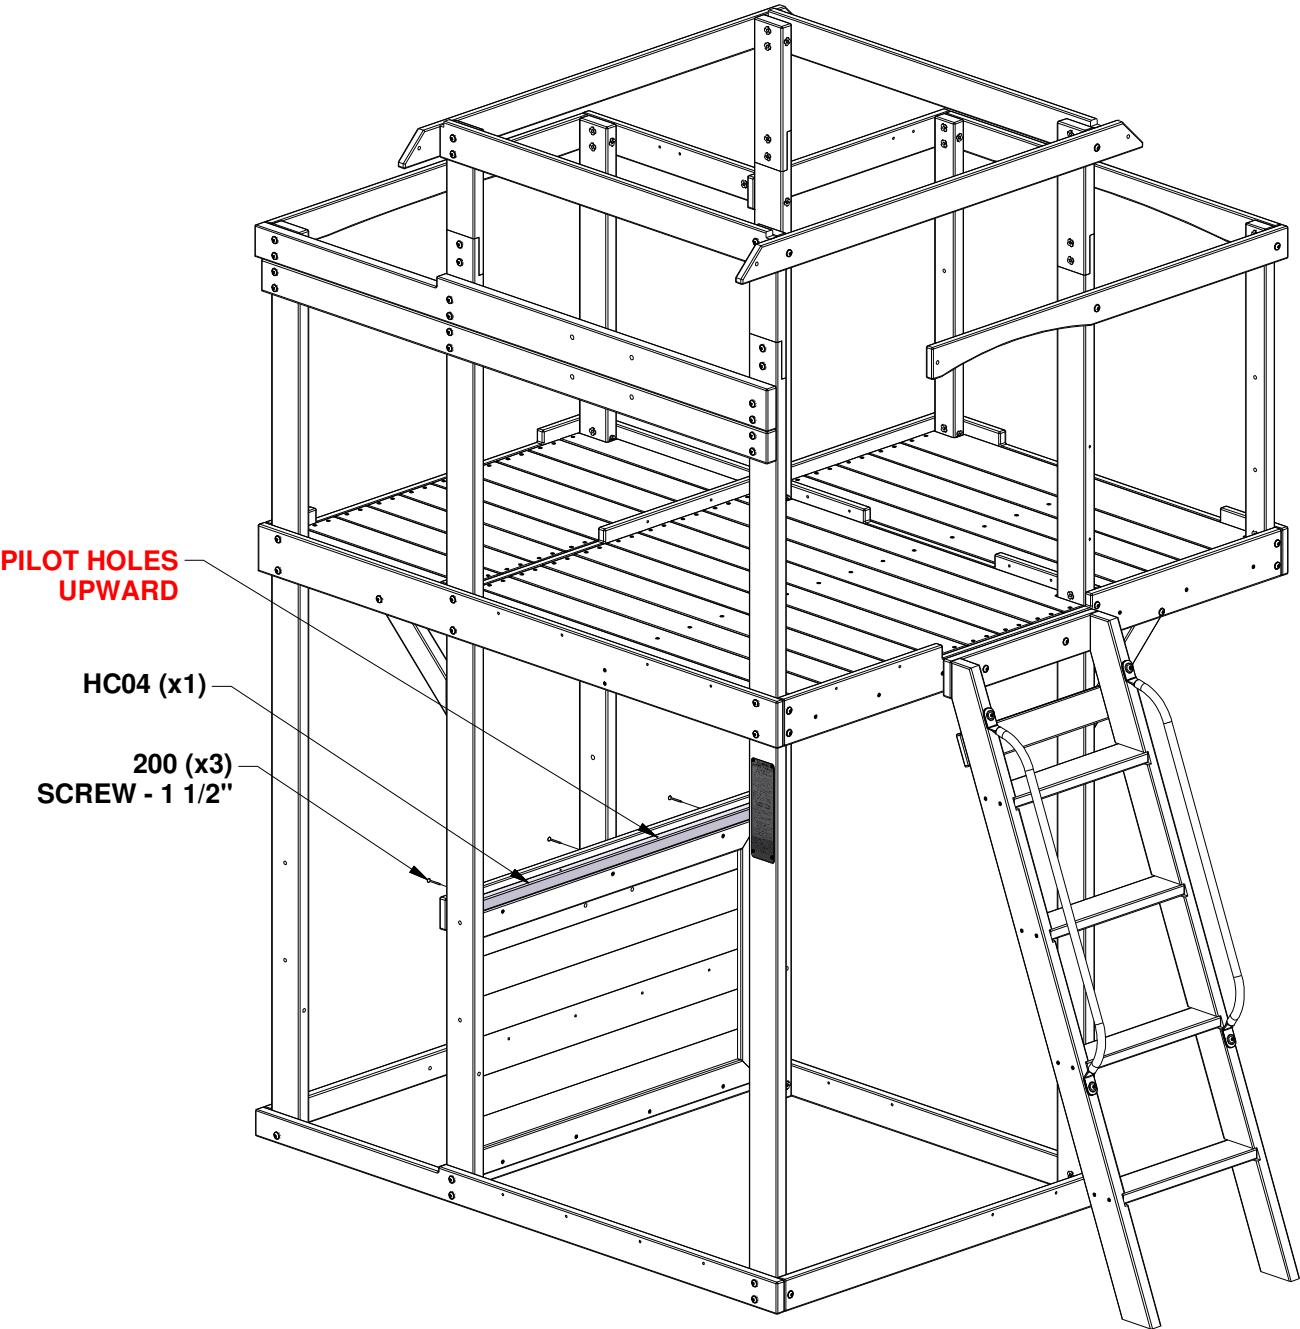


STEP 23 - FORT ASSEMBLY



HB07 SEAT SUPPORT - W4L19930
(x1) 1"x2 7/8"x37 1/2" (24x72x952)

QTY	PART NUMBER	DESCRIPTION
4	H100088	SCREW PFH 8x1-1/8
2	H100398	T-NUT 1/4 BLK
2	H100405	WASHER LOCK EXT 6x15 BLK
2	H101174	BOLT WH 1/4x4 1/4 BLK

INSTALL T-NUTS IN WOOD FIRST

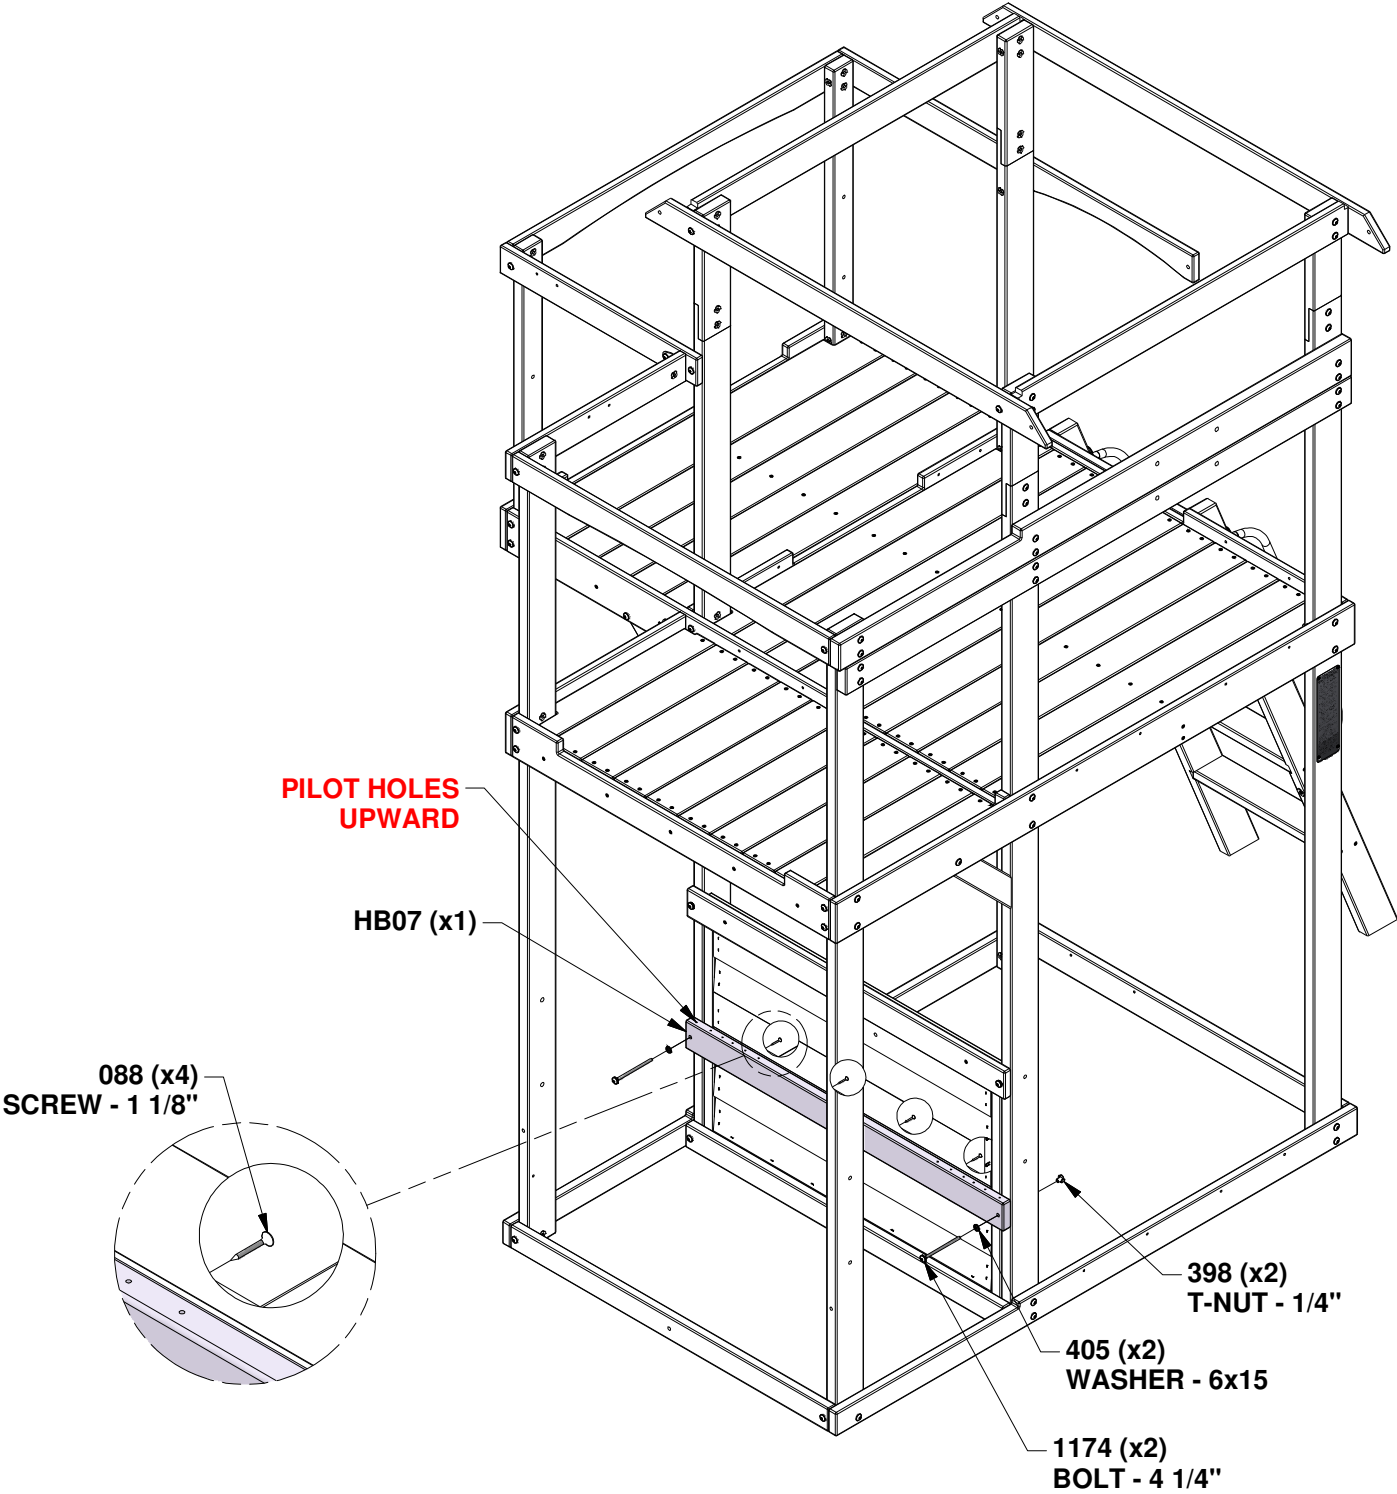

STEP 24 - FORT ASSEMBLY




OG12 TABLE SUPPORT - W4L20975
(x1) 1 1/8"x3 1/4"x22 3/8" (30x84x567)



HR07 SUPPORT BLOCK - W4L20987
(x1) 1"x2 3/8"x3 1/4" (24x60x84)

QTY	PART NUMBER	DESCRIPTION
1	H100398	T-NUT 1/4 BLK
1	H100405	WASHER LOCK EXT 6x15 BLK
1	H100800	BOLT WH 1/4x3 BLK

INSTALL T-NUTS IN WOOD FIRST

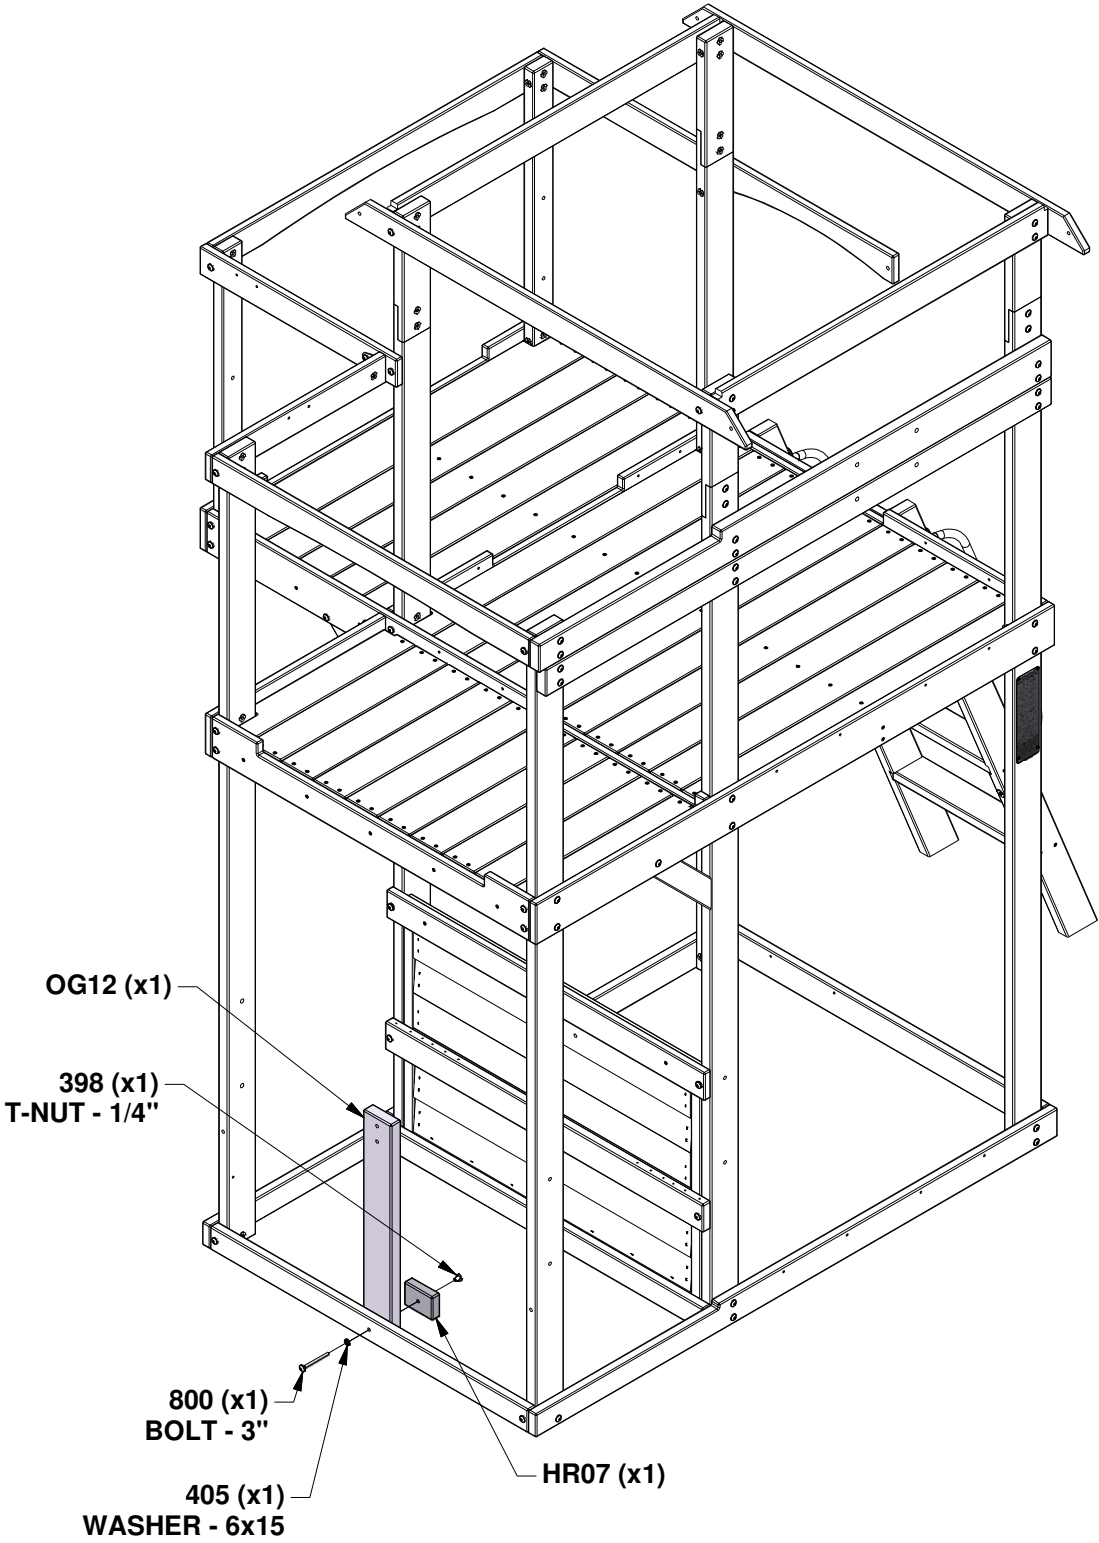

STEP 25 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
40	H100086	SCREW PFH 8x1-1/2



MJ01 FLOOR BOARD - W4L20988
(x2) 5/8"x5"x21 1/2" (16x126x547)




MG05 FLOOR BOARD - W4L20990
(x2) 5/8"x3 1/4"x21 1/2" (16x84x547)




MS04 FLOOR BOARD - W4L20989
(x6) 5/8"x3 3/4"x21 1/2" (16x96x547)

SPACE BOARDS EVENLY

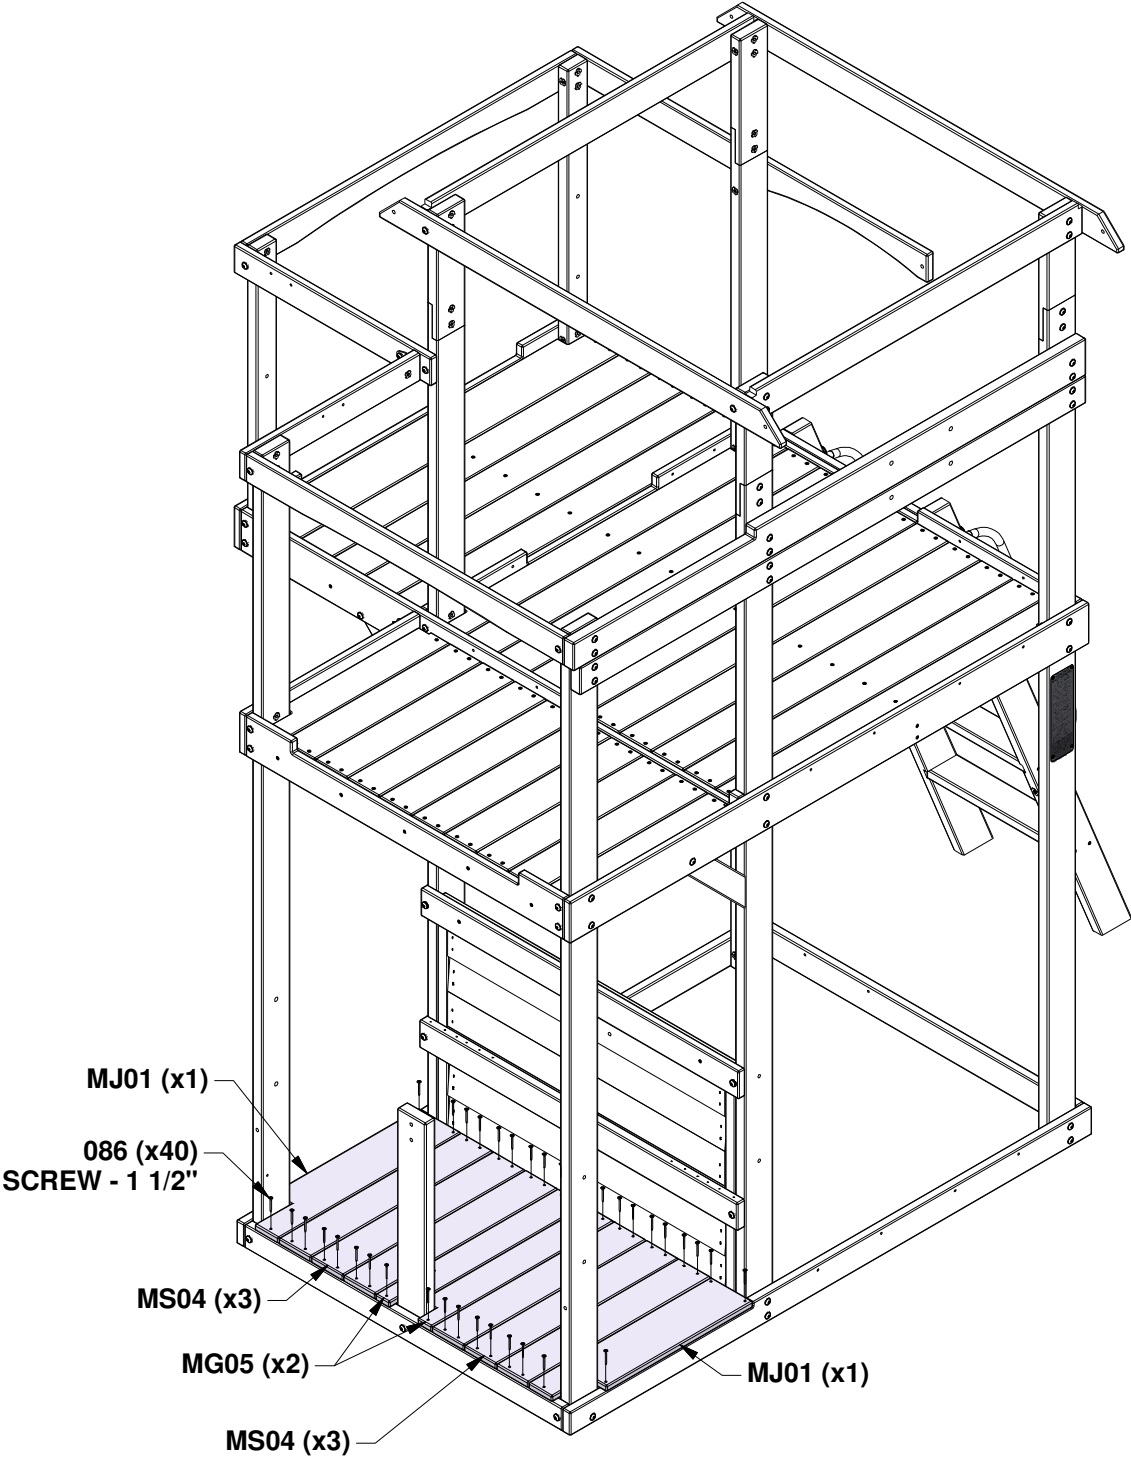

STEP 26 - FORT ASSEMBLY





HR03 BENCH SUPPORT - W4L20978
(x2) 1"x2 3/8"x9" (24x60x230)



OR07 ANGLE BRACE - W4L20979
(x2) 1 1/8"x2 3/8"x10" (30x60x254)

QTY	PART NUMBER	DESCRIPTION
4	H100398	T-NUT 1/4 BLK
6	H100405	WASHER LOCK EXT 6x15 BLK
2	H100487	LAG SCREW WH 1/4x2 BLK
2	H100488	BOLT WH 1/4x2 BLK
2	H101174	BOLT WH 1/4x4 1/4 BLK

INSTALL T-NUTS IN WOOD FIRST

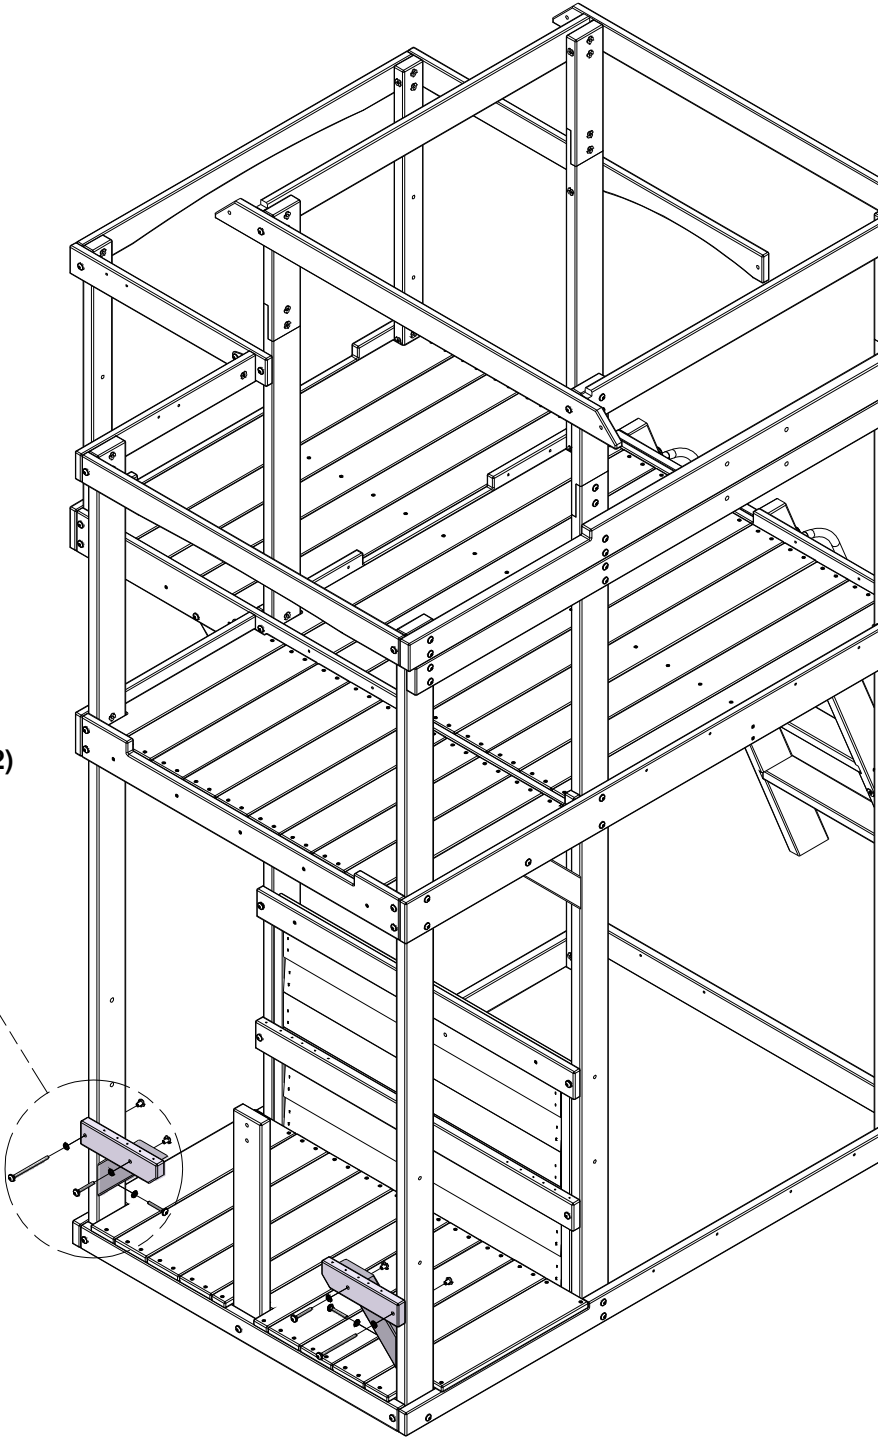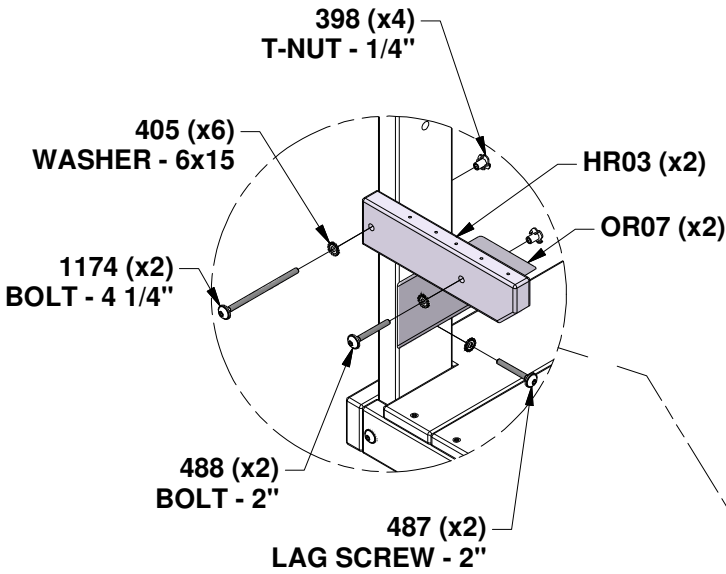

STEP 27 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
22	H100111	SCREW PFH 8x2



HG05 BENCH BOARD - W4L20983
(x2) 1"x3 1/4"x21 5/8" (24x84x548)




HR01 BENCH BOARD - W4L20984
(x2) 1"x2 3/8"x21 5/8" (24x60x548)



HG06 BENCH BOARD - W4L20985
(x2) 1"x3 1/4"x21 5/8" (24x84x548)

SPACE BOARDS EVENLY

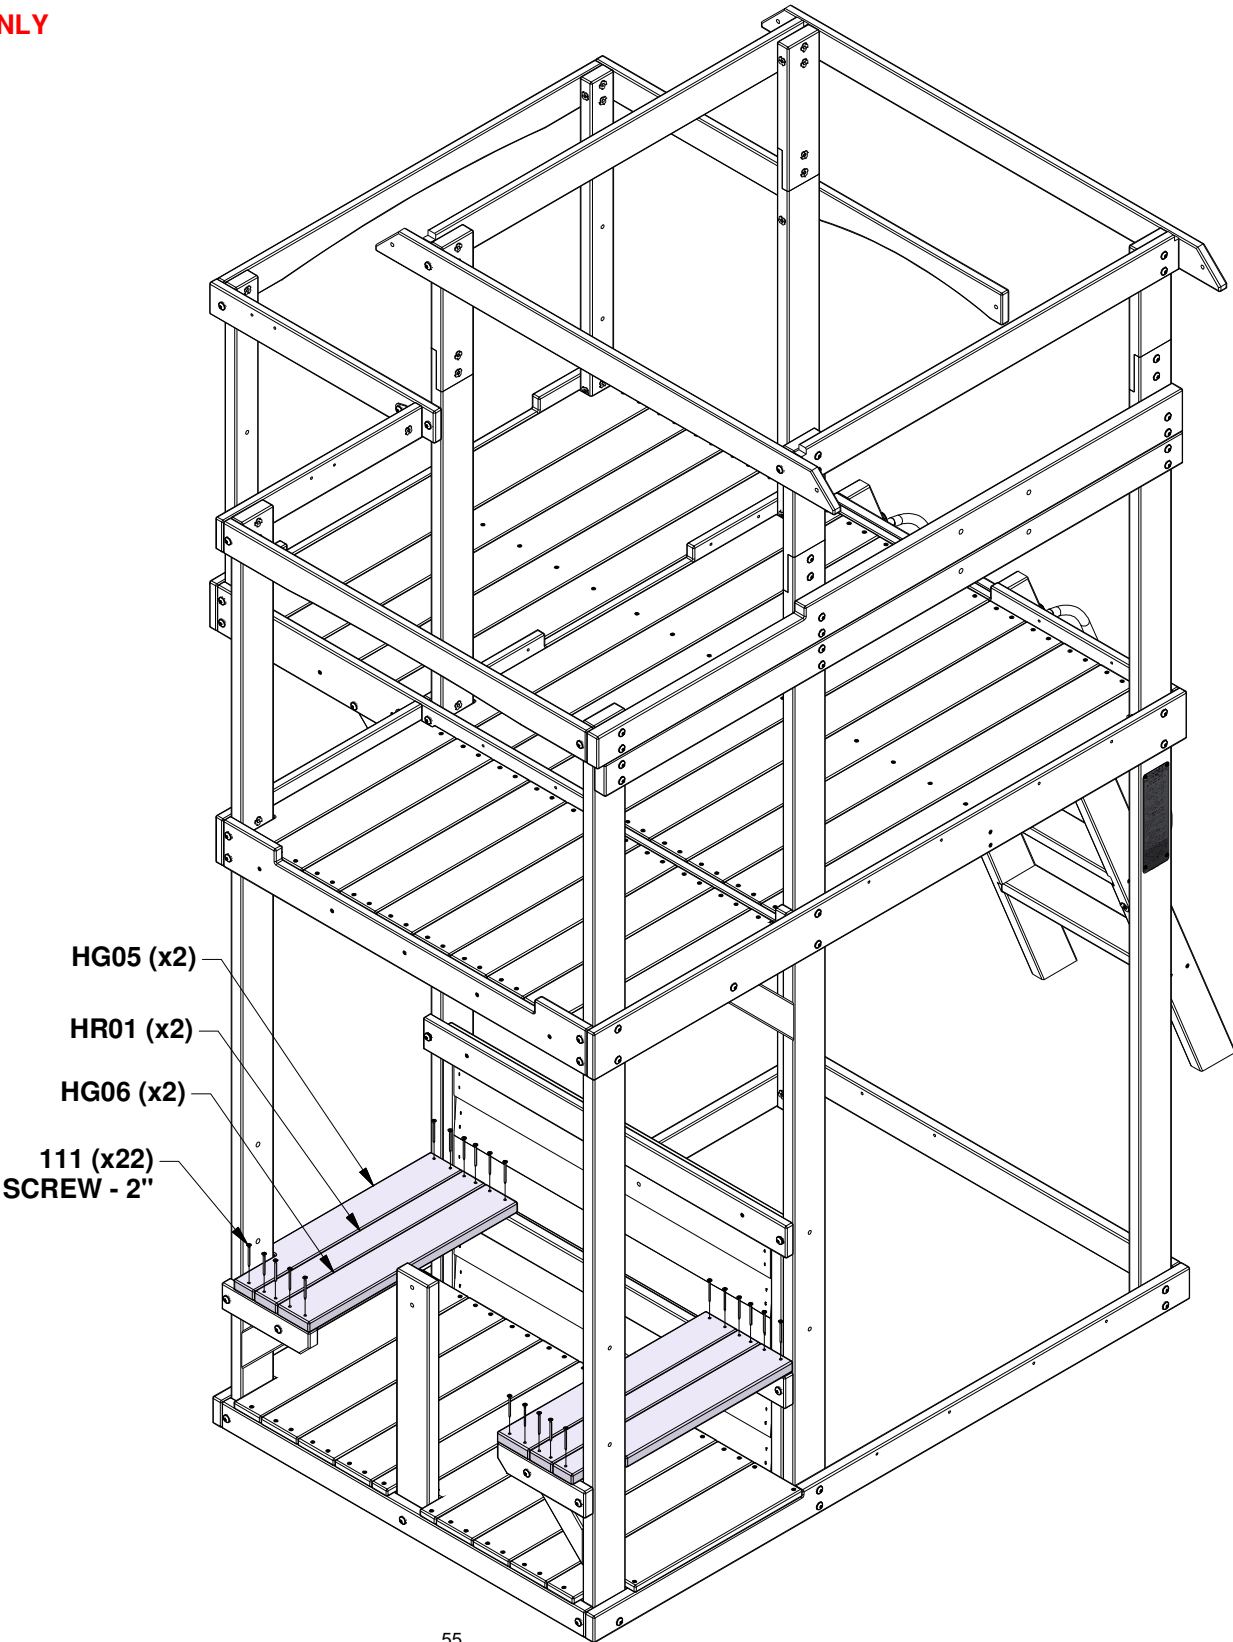

STEP 28 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
12	H100111	SCREW PFH 8x2
4	H100398	T-NUT 1/4 BLK
4	H100405	WASHER LOCK EXT 6x15 BLK
2	H100406	BOLT WH 1/4x1 1/2 BLK
2	H100488	BOLT WH 1/4x2 BLK





HG03 TABLE SUPPORT - W4L20976
(x1) 1"x3 1/4"x12 3/8" (24x84x313)

HJ01 TABLE BOARD - W4L20986
(x1) 1"x5 5/8"x21 5/8" (24x144x548)


HG06 BENCH BOARD - W4L20985
(x2) 1"x3 1/4"x21 5/8" (24x84x548)

OO04 TABLE SUPPORT - W4L20977
(x1) 1 1/8"x1 1/8"x12 3/8" (30x30x313)


INSTALL T-NUTS IN WOOD FIRST

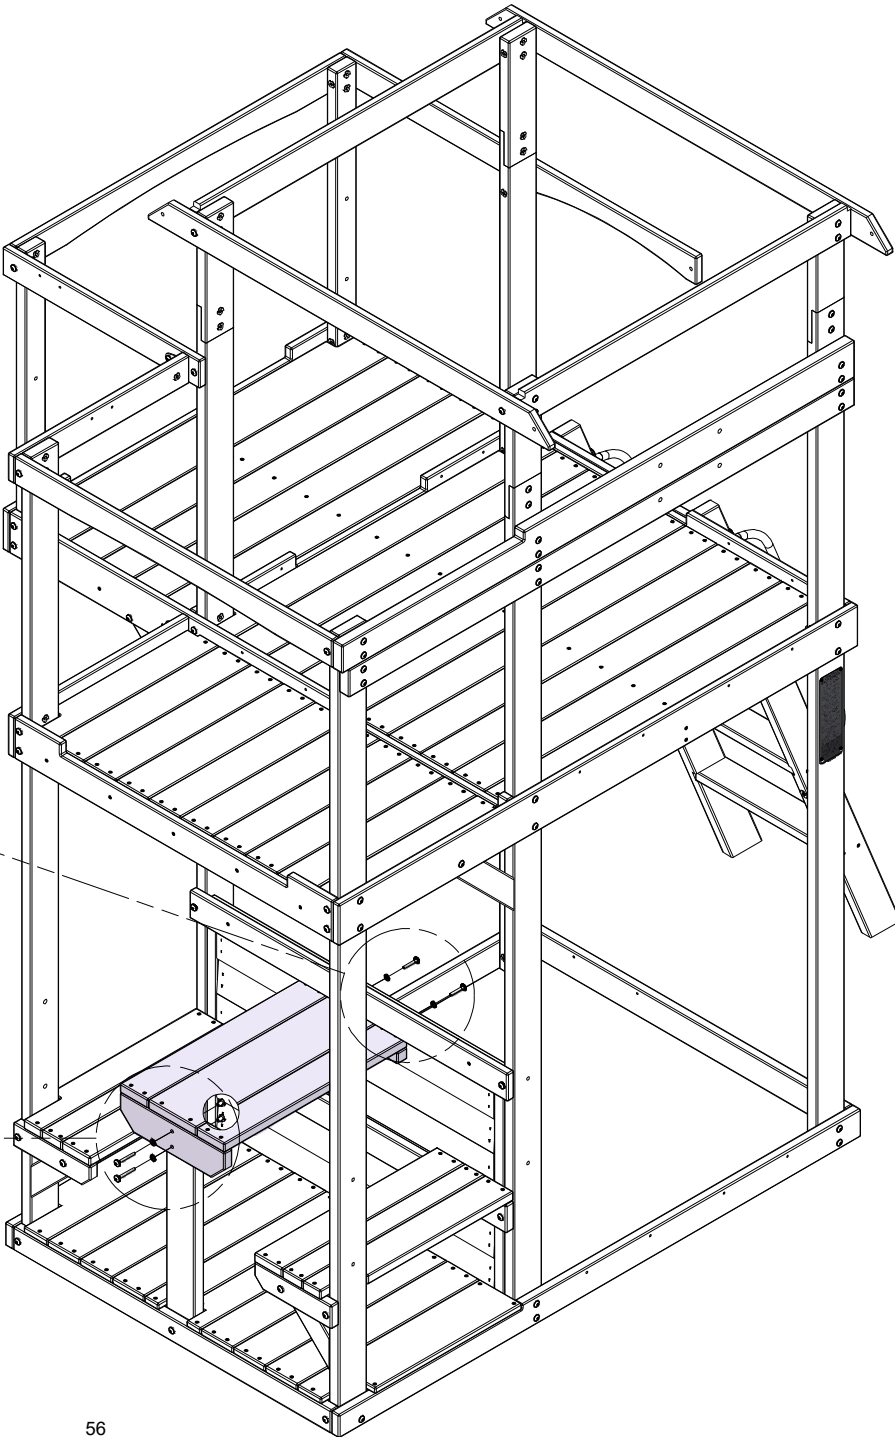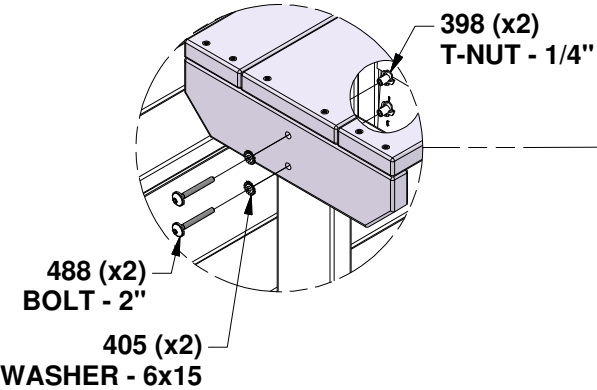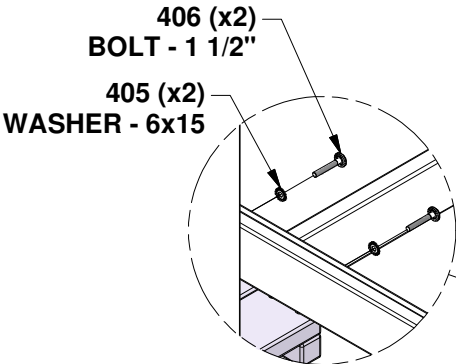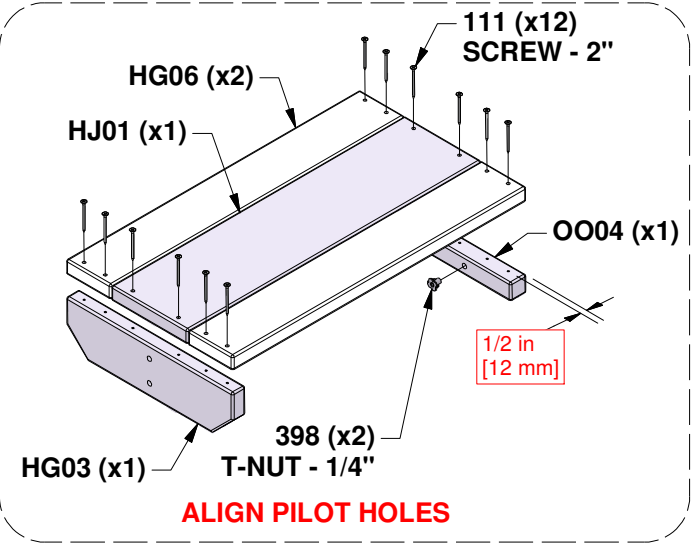

STEP 29 - FORT ASSEMBLY




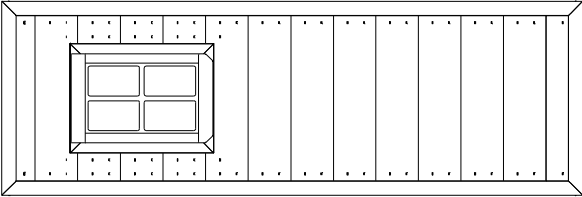


WP02 WALL PANEL - W2A04239
(x2) 1 5/8"x18 3/4"x40" (36x410x1230)




A4M04561 BRACKET
(x4)

QTY	PART NUMBER	DESCRIPTION
16	H100202	SCREW PWH 8x5/8 BLK
4	H100382	SCREW PFH 8x1 3/4 BLK

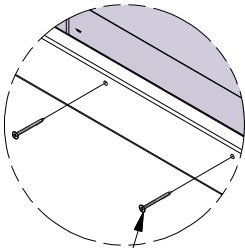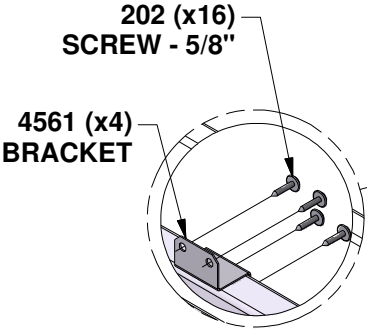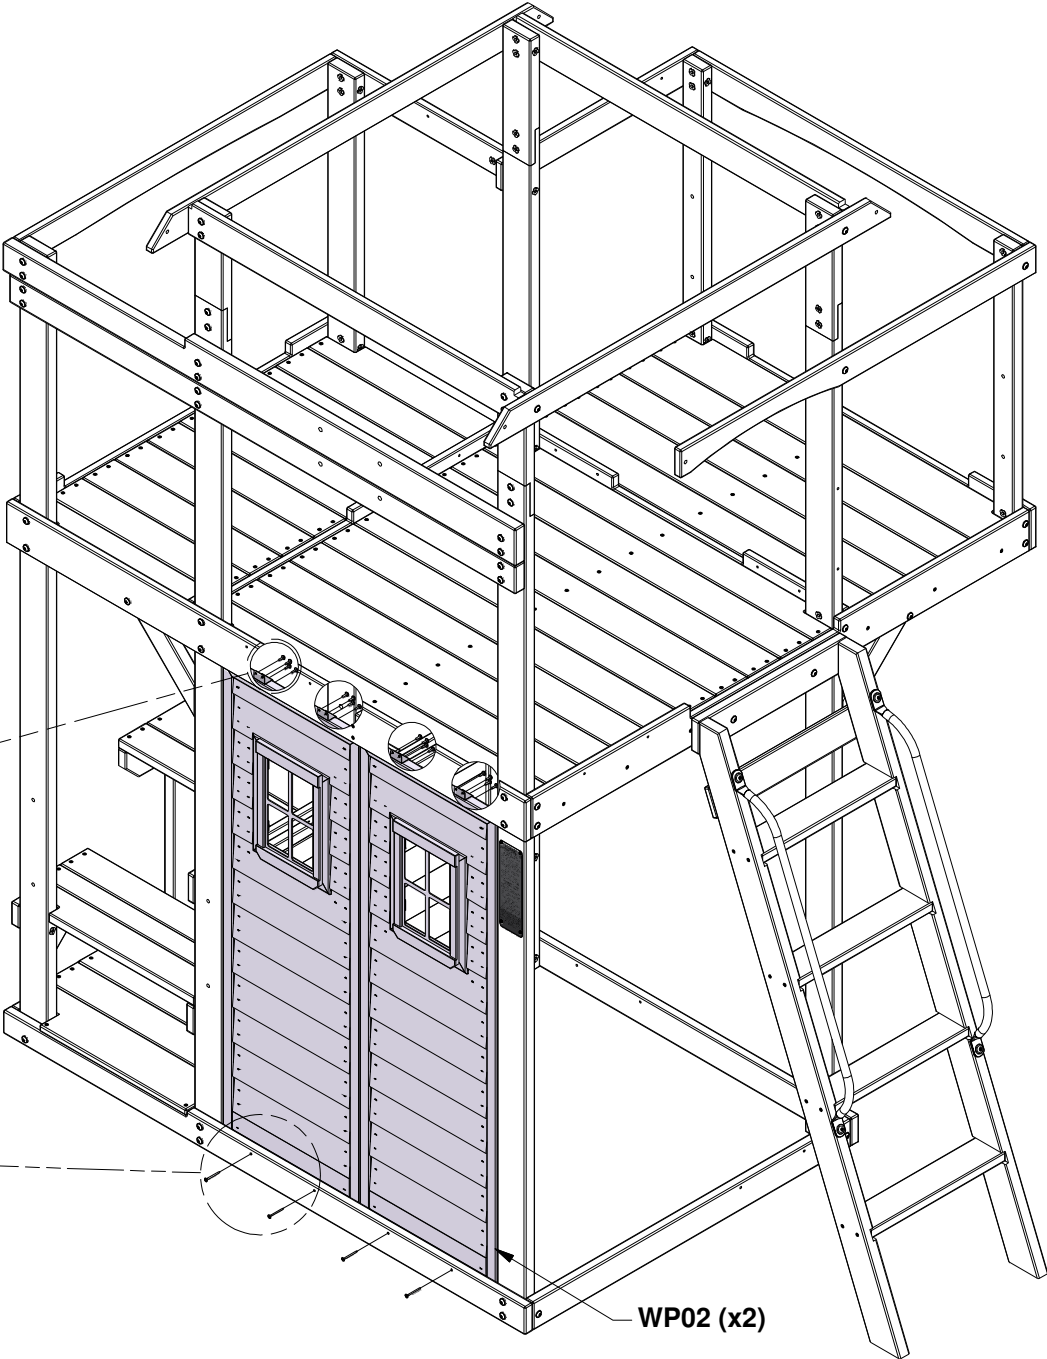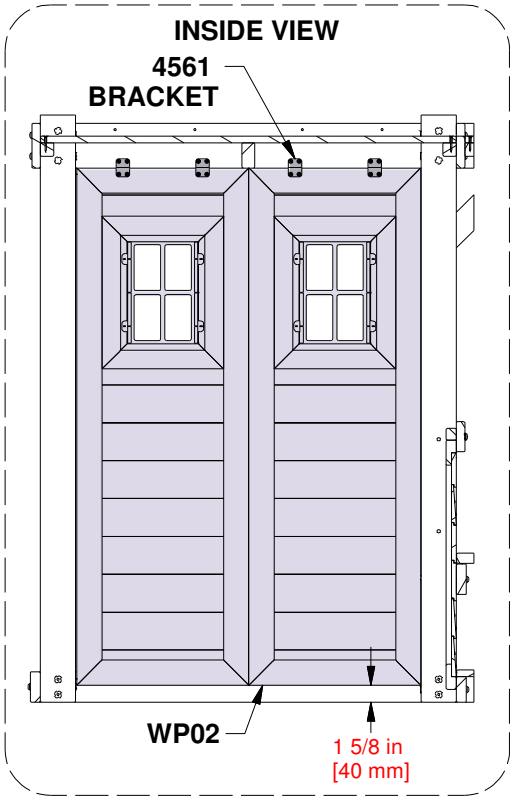

382 (x4)
SCREW - 1 3/4"

STEP 30 - FORT ASSEMBLY

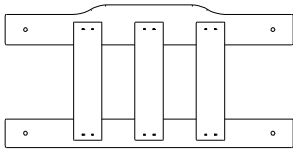


WP07 BENCH BACK - W2A04240
(x1) 1 1/8"x11 7/8"x24 1/4" (28x301x610)




OR08 SUPPORT BLOCK - W4L20996
(x1) 1 1/8"x2 3/8"x5 3/4" (30x60x145)

QTY	PART NUMBER	DESCRIPTION
1	H100391	SCREW PFH 8x2 BLK
4	H100398	T-NUT 1/4 BLK
4	H100405	WASHER LOCK EXT 6x15 BLK
3	H101026	BOLT WH 1/4x1-3/4 BLK
1	H101376	BOLT WH 1/4x2 3/4 BLK


INSTALL T-NUTS IN WOOD FIRST

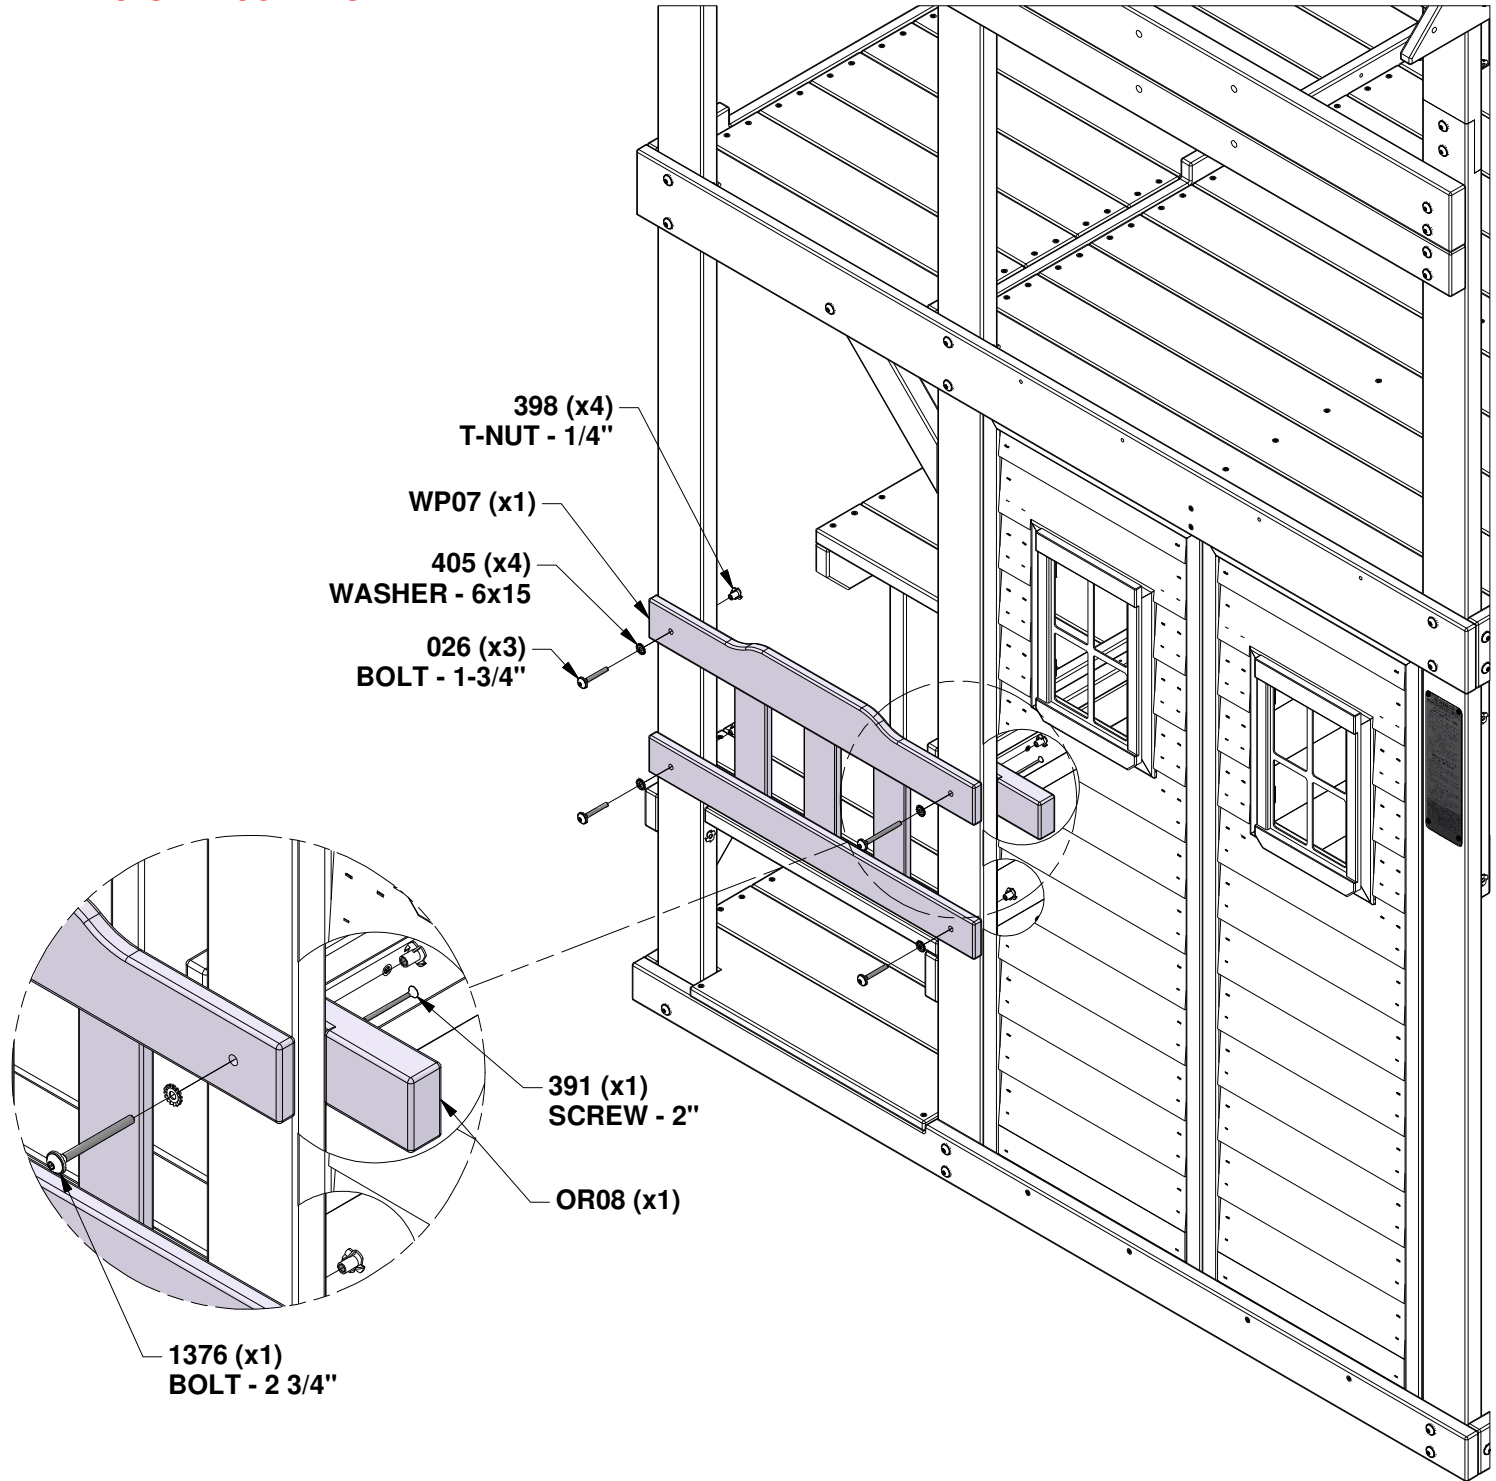

STEP 31 - FORT ASSEMBLY

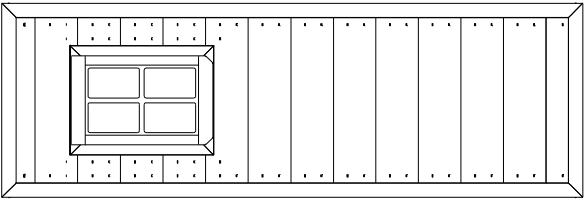


WP02 WALL PANEL - W2A04239
(x1) 1 5/8"x18 3/4"x40" (36x410x1230)



A4M04561 BRACKET
(x2)

QTY	PART NUMBER	DESCRIPTION
8	H100202	SCREW PWH 8x5/8 BLK
2	H100382	SCREW PFH 8x1 3/4 BLK

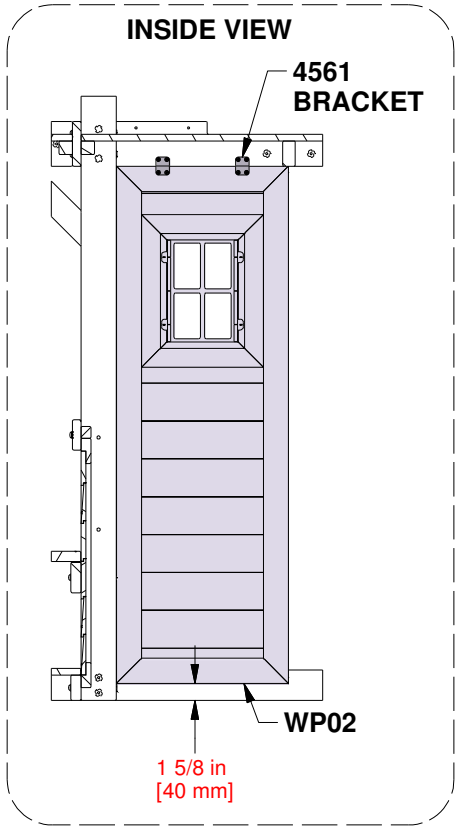

INSIDE VIEW



4561
BRACKET

WP02


1 5/8 in
[40 mm]

202 (x8)
SCREW - 5/8"

4561 (x2)
BRACKET

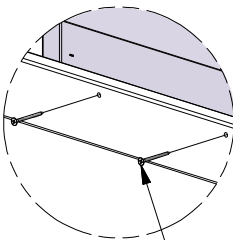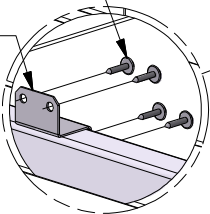


382 (x2)
SCREW - 1 3/4"

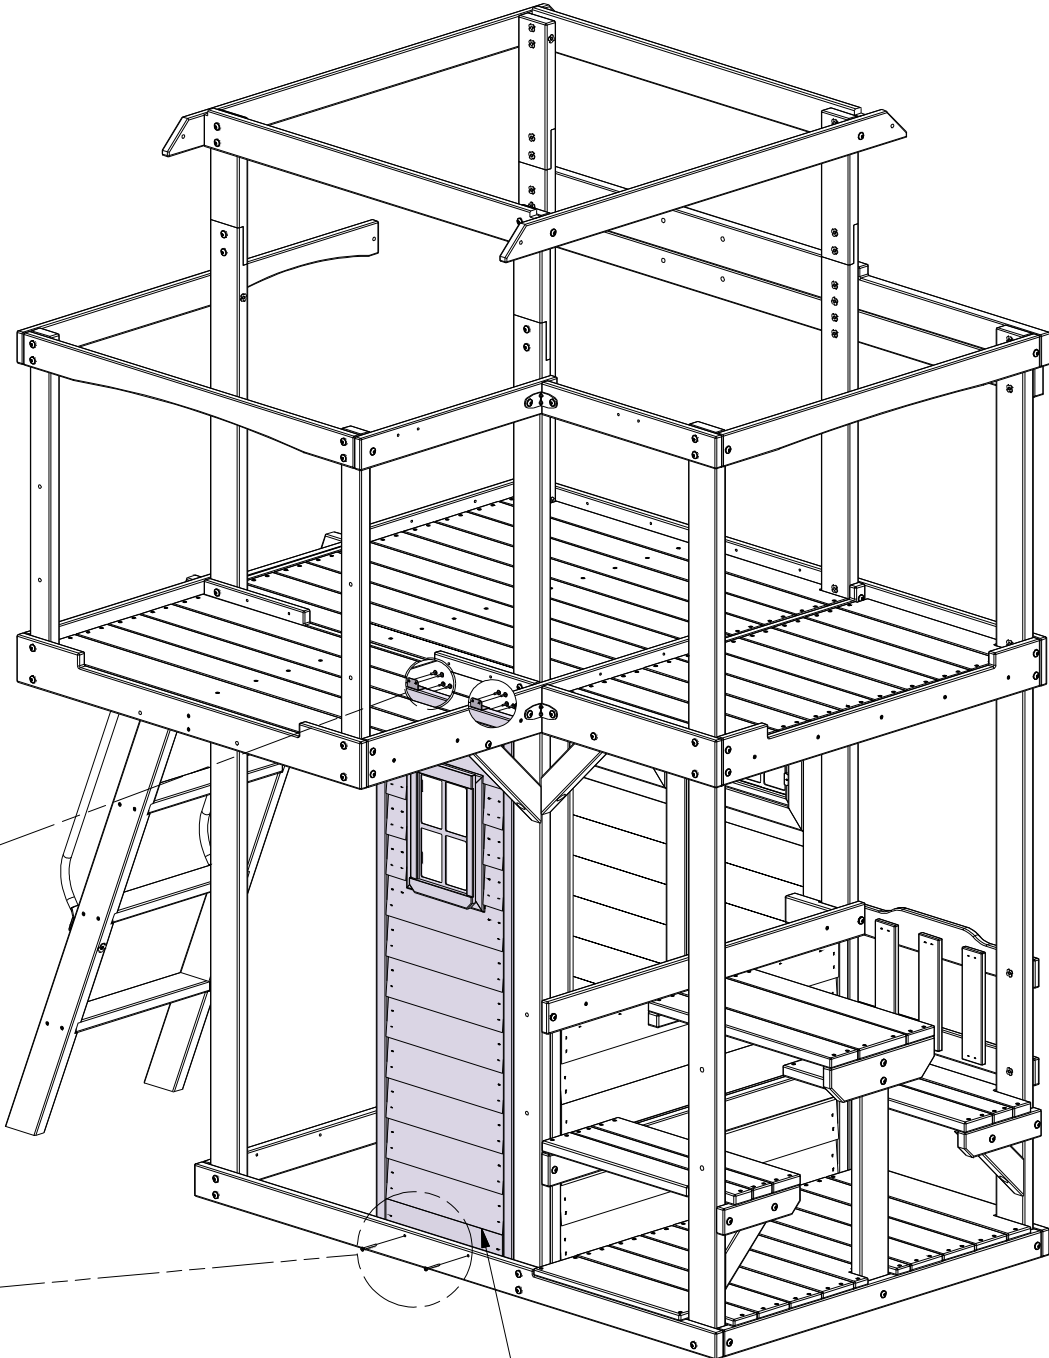

WP02 (x1)

STEP 32 - FORT ASSEMBLY

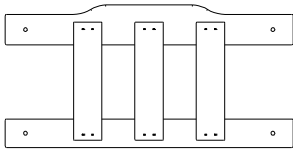


WP07 BENCH BACK - W2A04240
(x1) 1 1/8"x11 7/8"x24 1/4" (28x301x610)



OR09 SUPPORT BLOCK - W4L21006
(x1) 1 1/8"x2 3/8"x5 3/4" (30x60x145)

QTY	PART NUMBER	DESCRIPTION
1	H100391	SCREW PFH 8x2 BLK
4	H100398	T-NUT 1/4 BLK
4	H100405	WASHER LOCK EXT 6x15 BLK
3	H101026	BOLT WH 1/4x1-3/4 BLK
1	H101376	BOLT WH 1/4x2 3/4 BLK

INSTALL T-NUTS IN WOOD FIRST

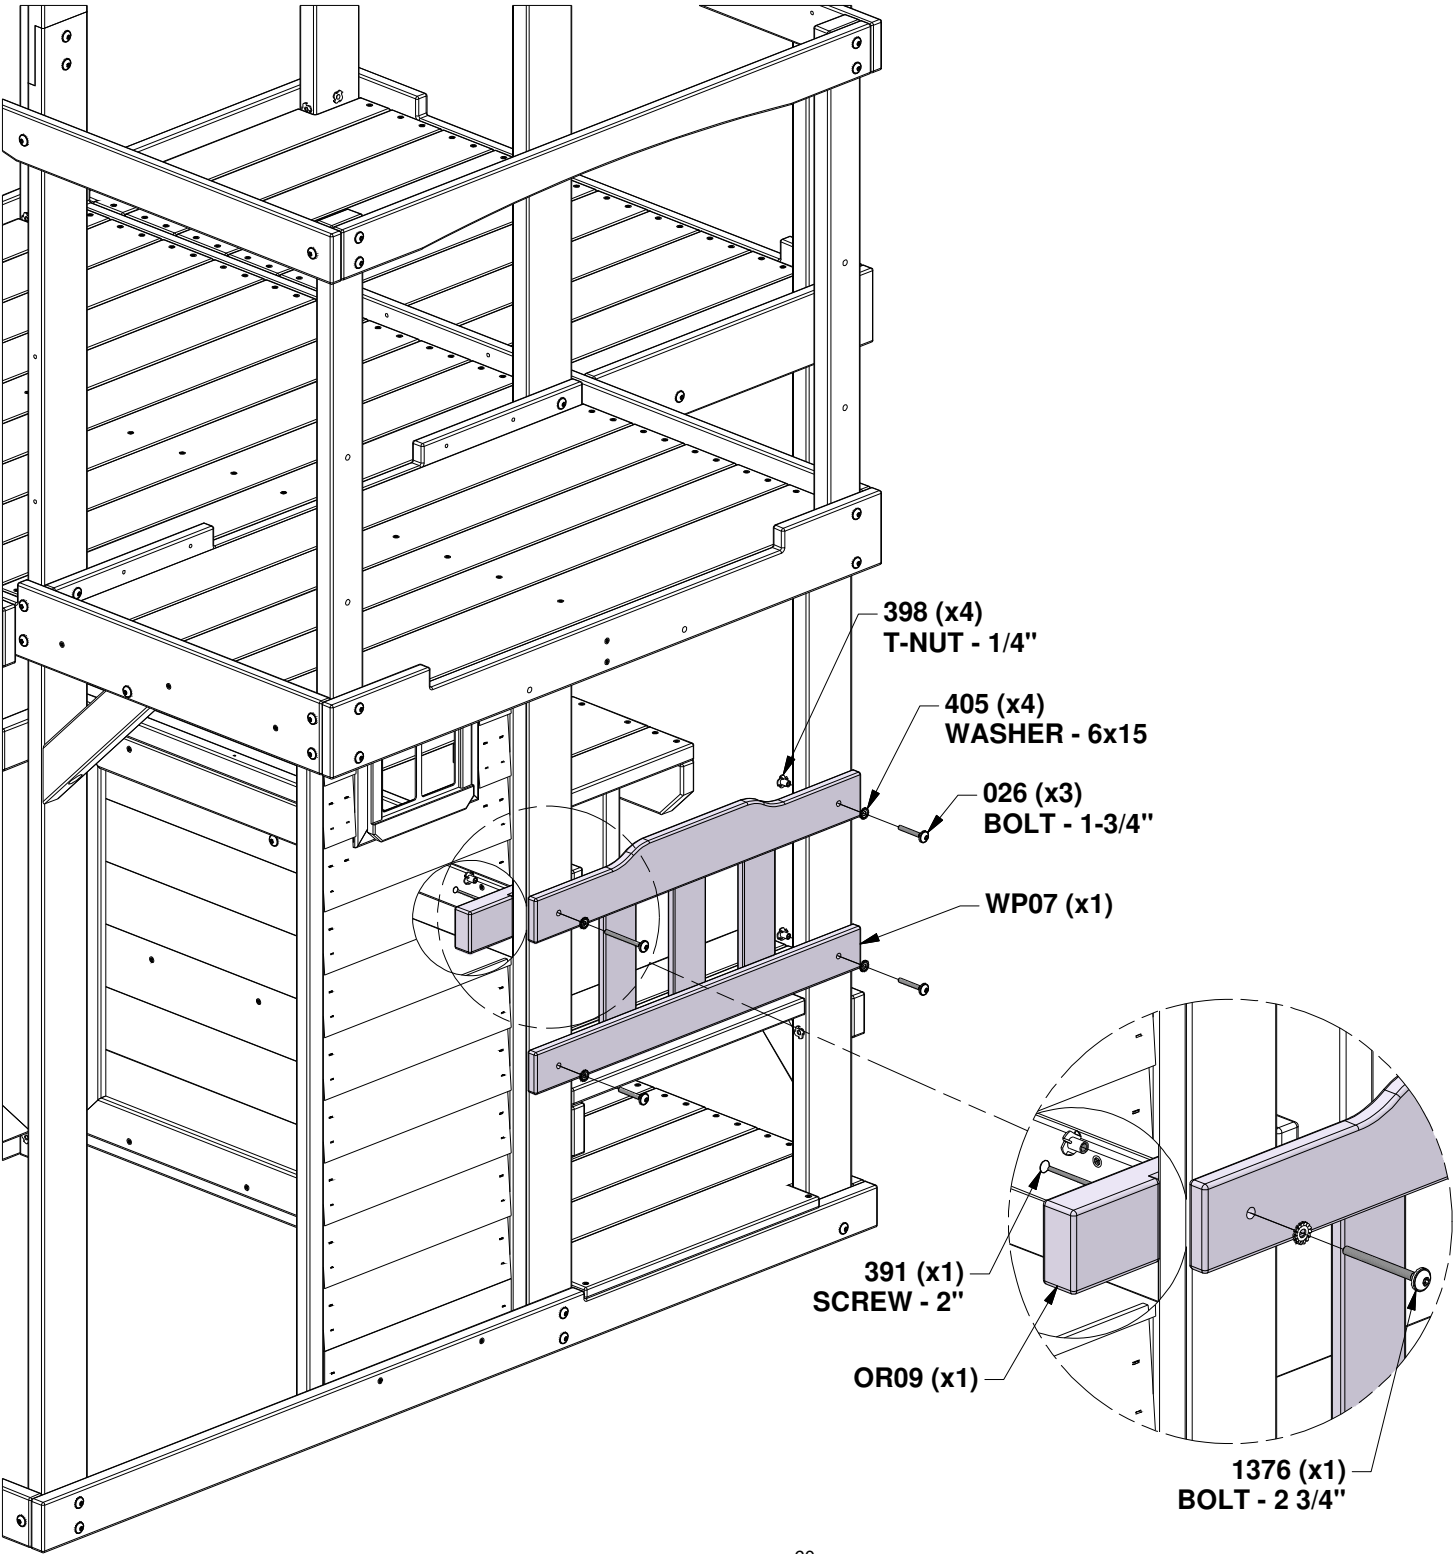

STEP 33 - FORT ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
10	H100086	SCREW PFH 8x1-1/2




MG06 COUNTER TOP - W4L20997
(x1) 5/8"x3 1/4"x35 1/8" (16x84x891)




MG07 COUNTER TOP - W4L20998
(x1) 5/8"x3 1/4"x35 1/2" (16x84x903)

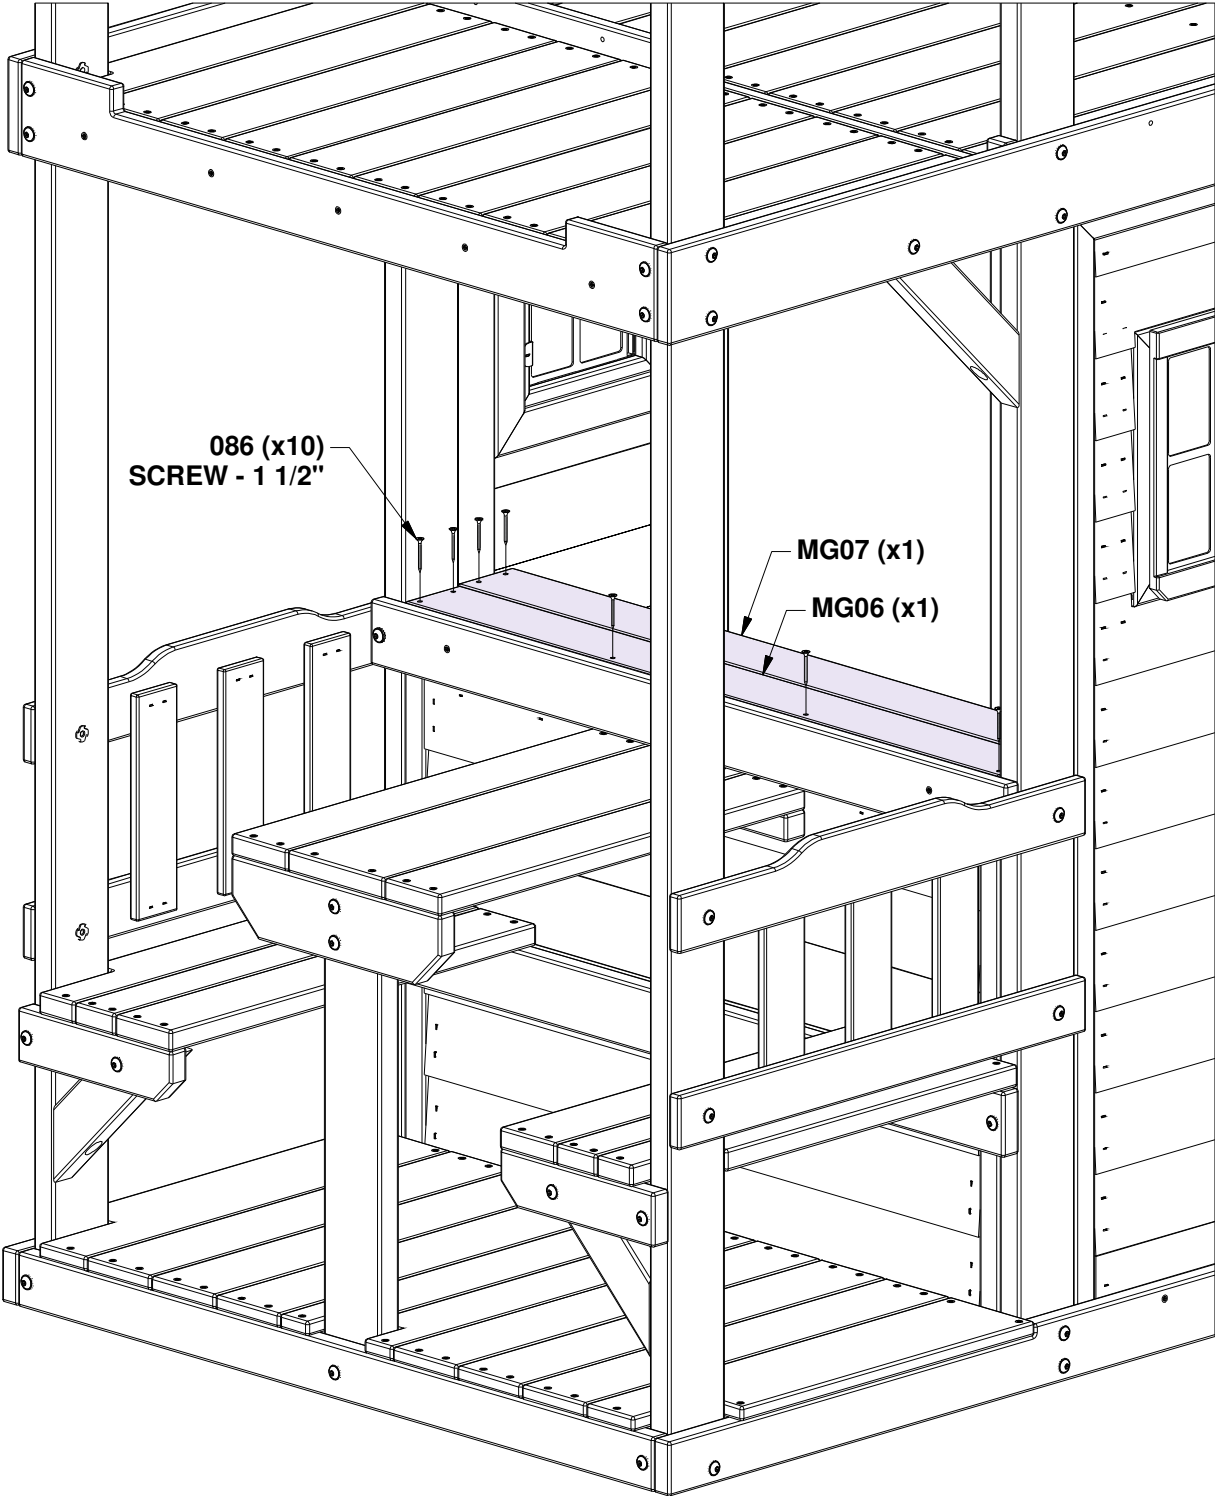

STEP 34 - FORT ASSEMBLY

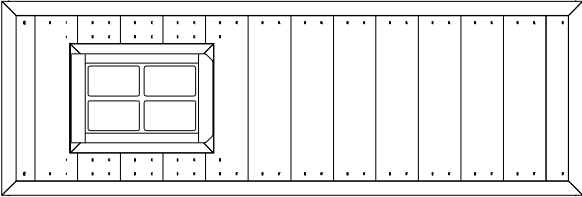

WP02 WALL PANEL - W2A04239
(x1) 1 5/8"x18 3/4"x40" (36x410x1230)



A4M04561 BRACKET
(x2)

QTY	PART NUMBER	DESCRIPTION
8	H100202	SCREW PWH 8x5/8 BLK
2	H100382	SCREW PFH 8x1 3/4 BLK


INSIDE VIEW

4561 (x2)
BRACKET

202 (x8)
SCREW - 5/8"

WP02 (x1)


1 5/8 in
[40 mm]

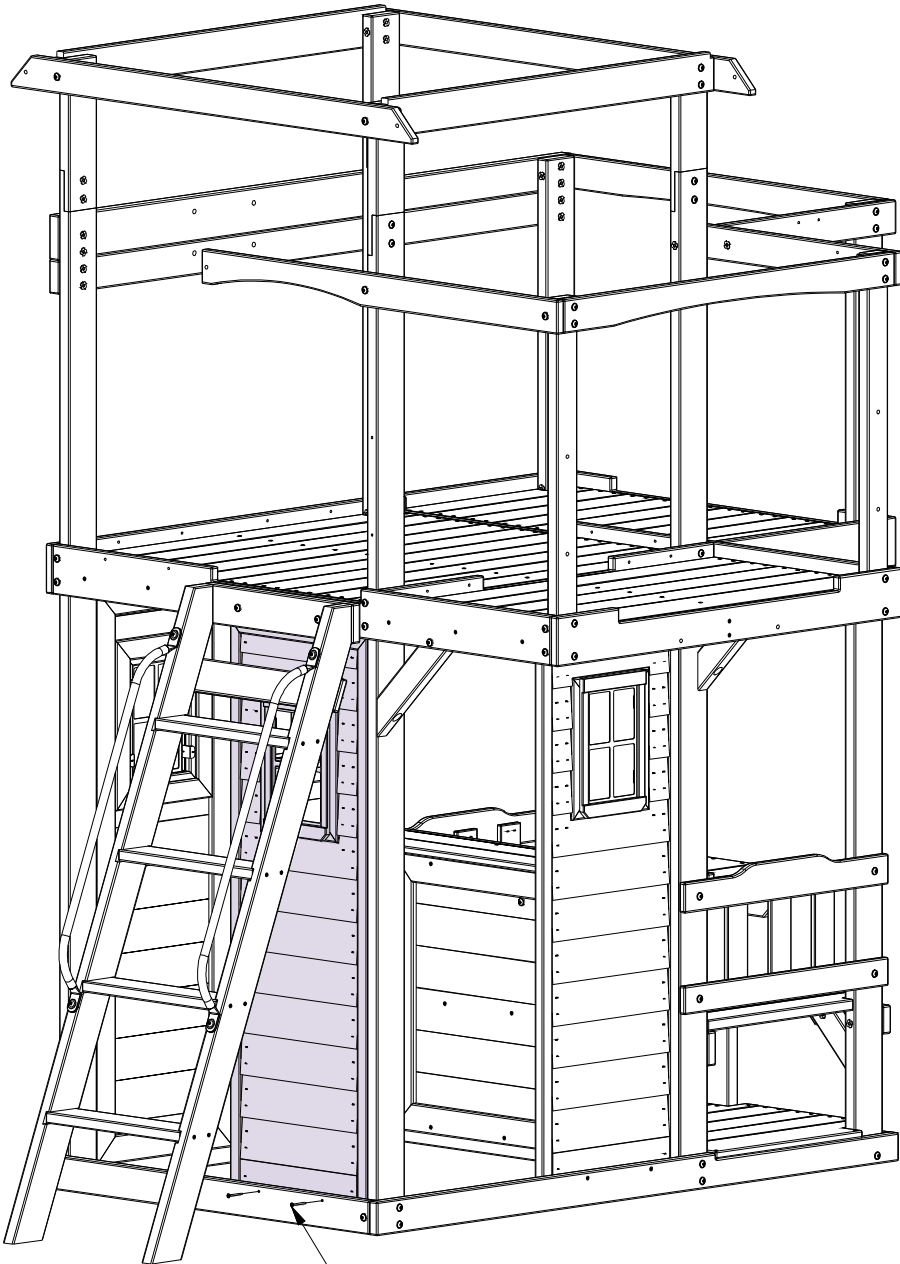

382 (x2)
SCREW - 1 3/4"



STEP 35 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100086	SCREW PFH 8x1-1/2

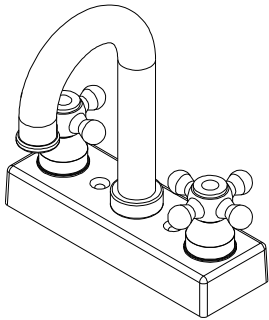


A6P00024 FAUCET KIT
(x1)

PLACE AS DESIRED

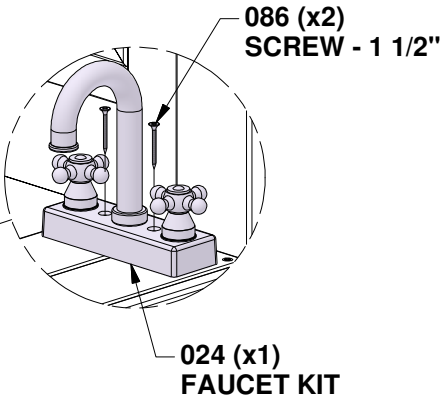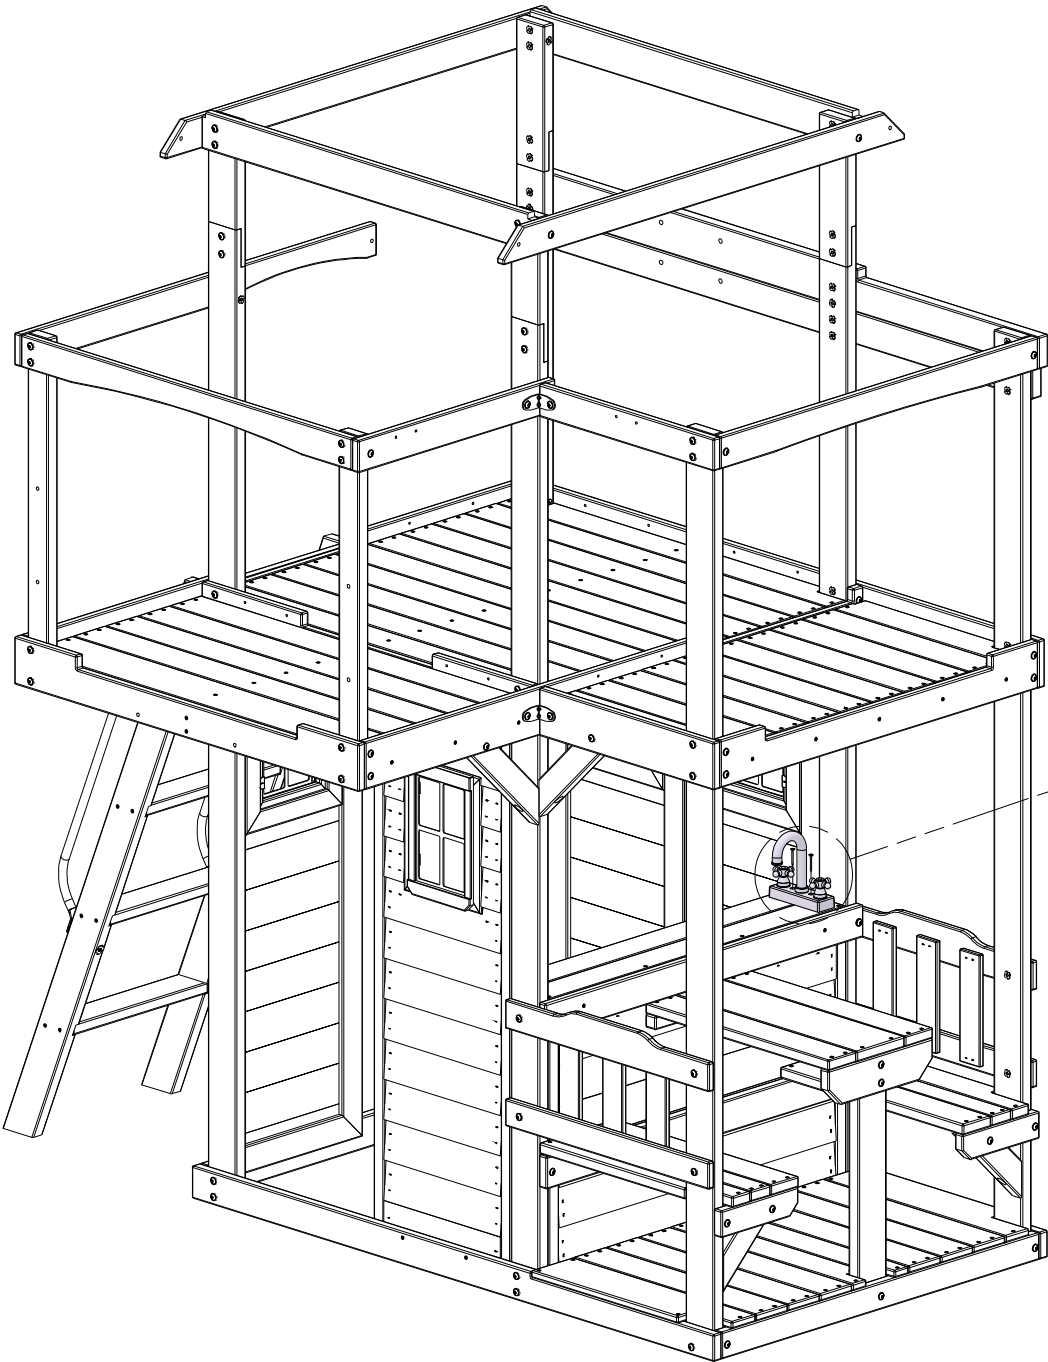



STEP 36 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100128	SCREW PWH 8x5/8

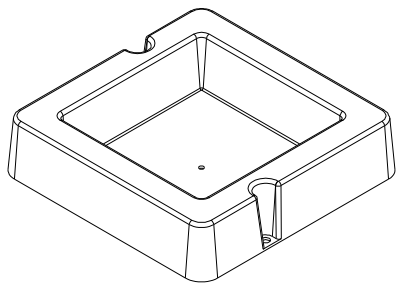


A6P00032 SURFACE MOUNT
(x1) BASIN

PLACE AS DESIRED

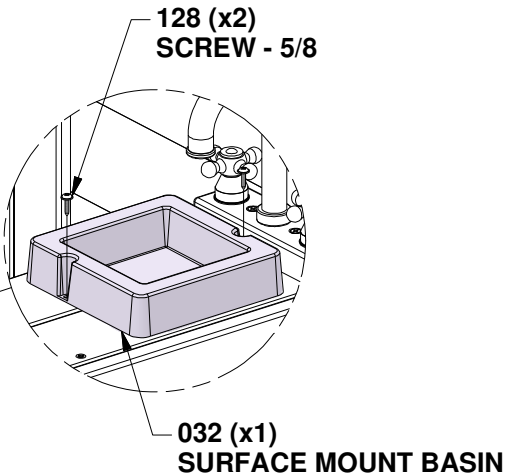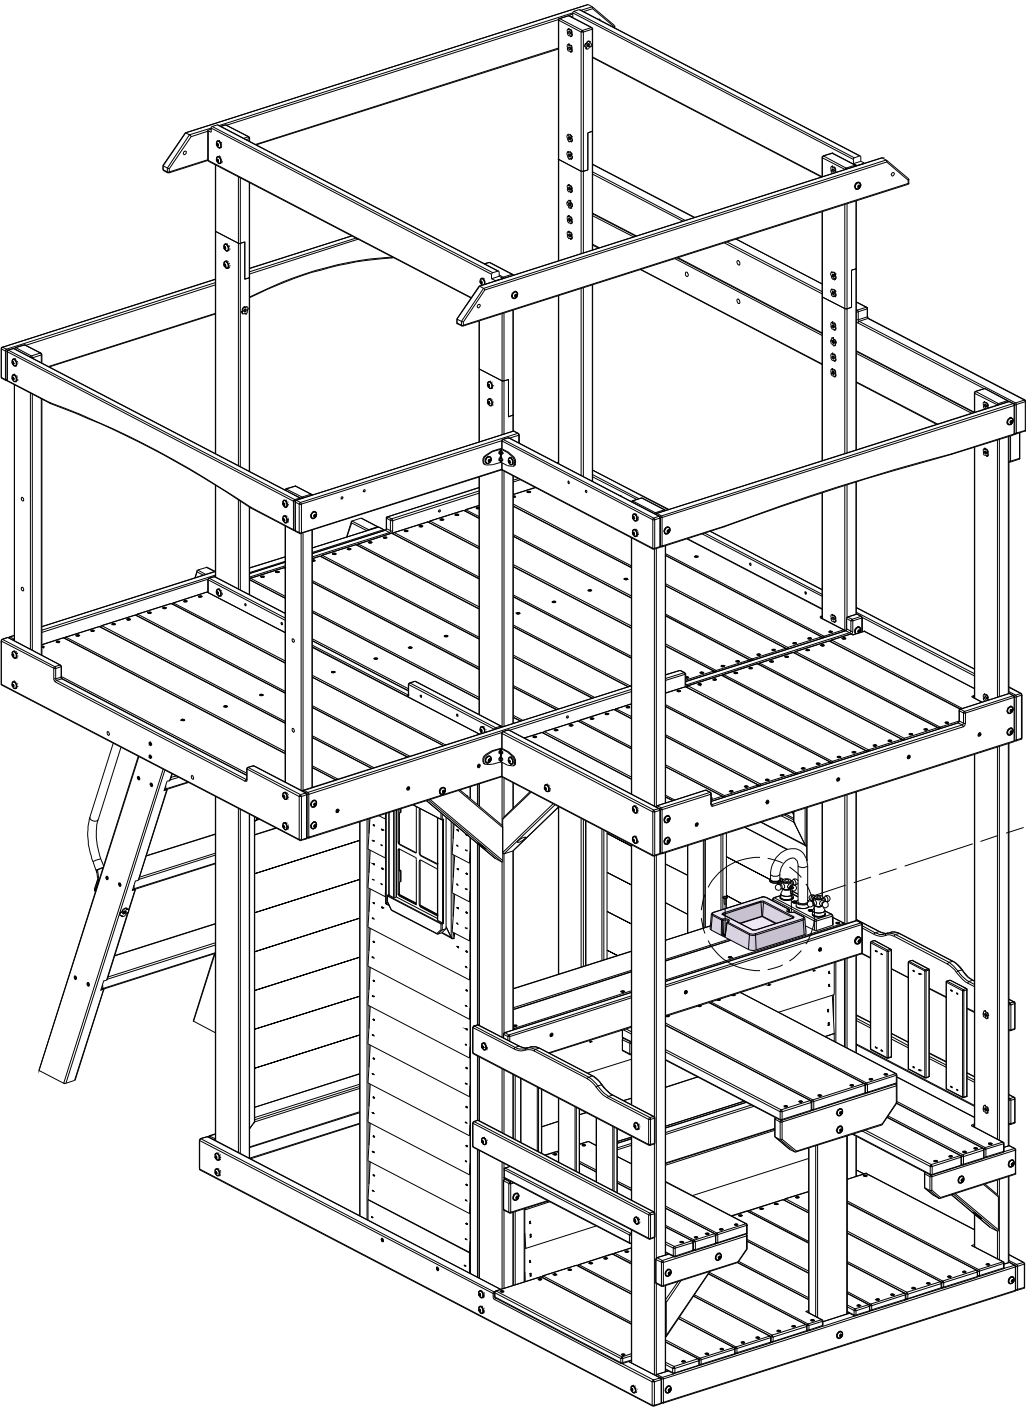


STEP 37 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100088	SCREW PFH 8x1-1/8

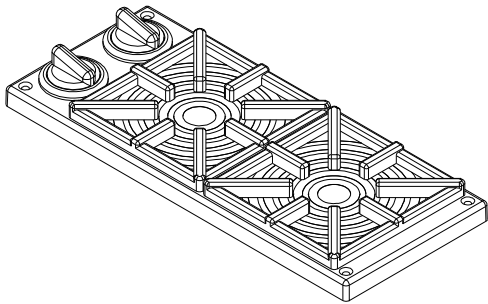


A6P00025 STOVE KIT
(x1)

PLACE AS DESIRED

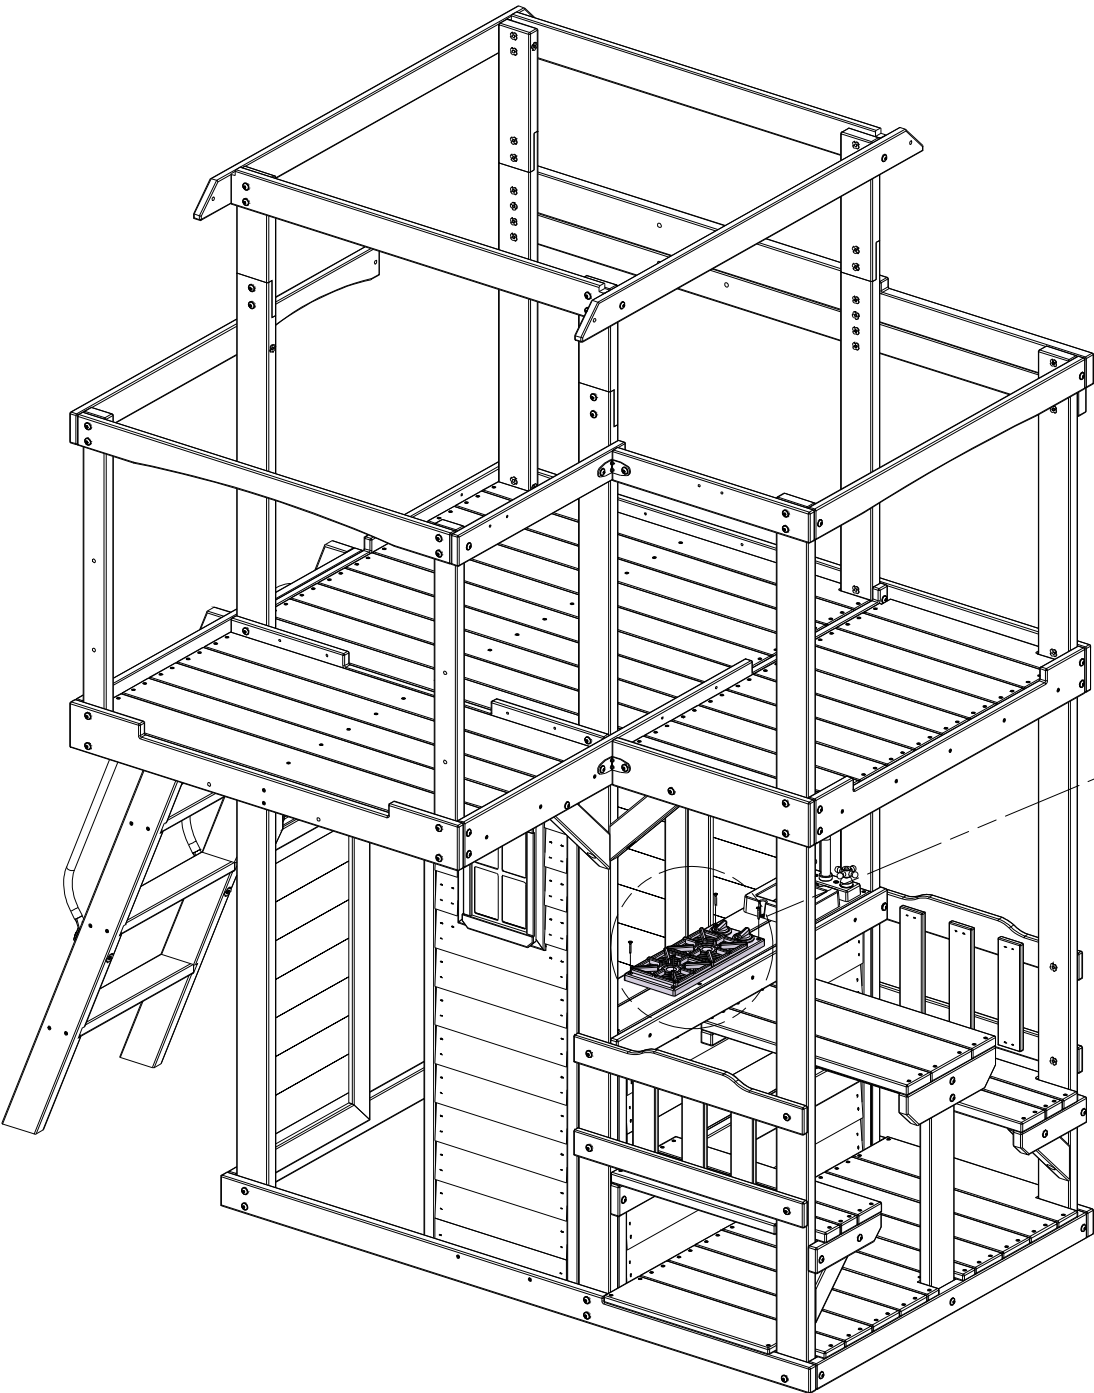


088 (x4)
SCREW - 1 1/8"

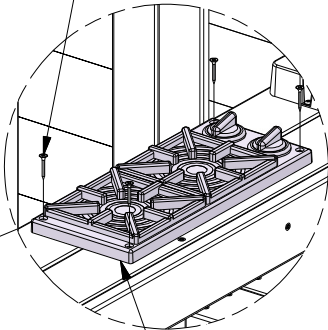

025 (x1)
STOVE KIT


STEP 38 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100124	SCREW PFH 8x1/2

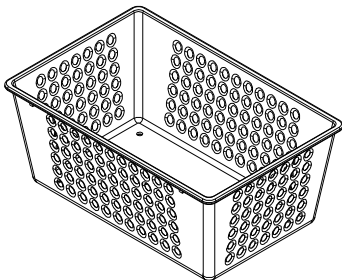


A6P00069 FRUIT BASKET KIT
(x1)

PLACE AS DESIRED

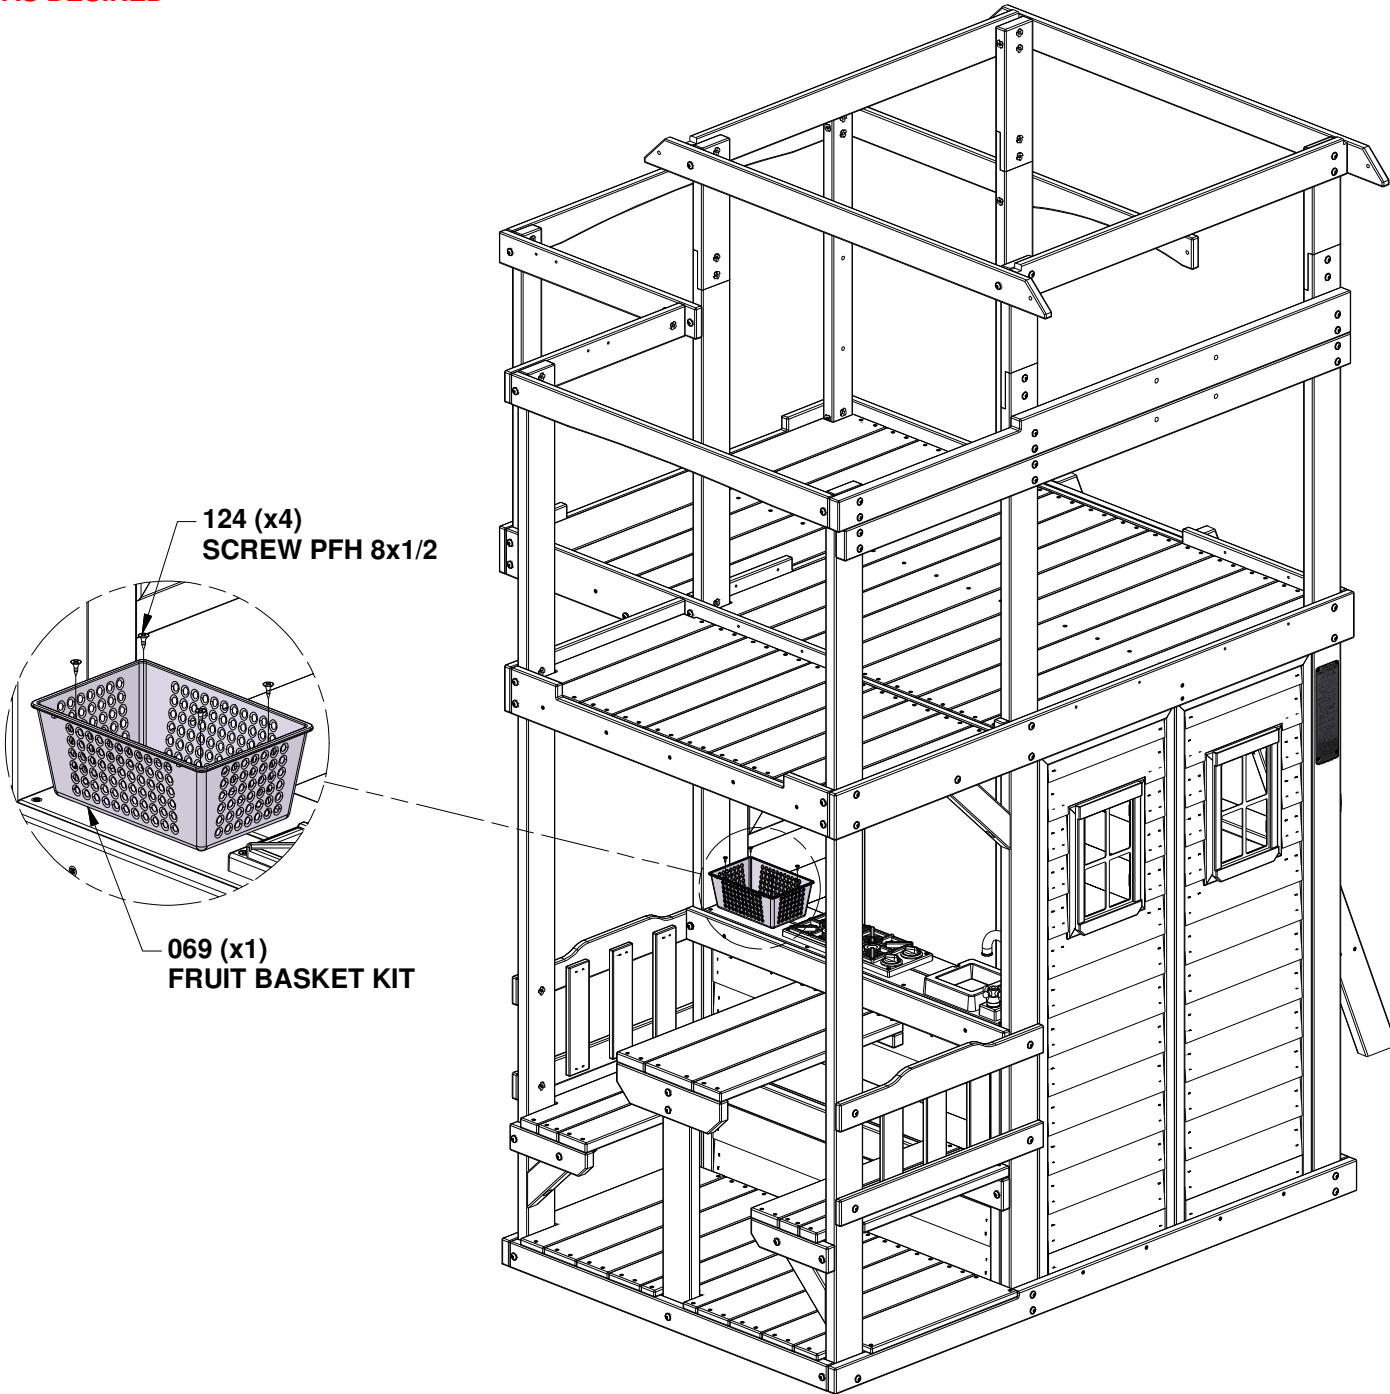


STEP 39 - FORT ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
4	H100200	SCREW PFH 8x1-1/2 BLK

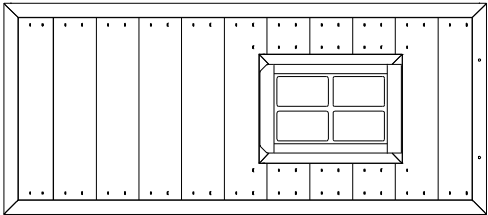

WP08 WALL PANEL - W2A04248
(x1) 1 5/8"x18 3/4"x40" (36x446x1022)

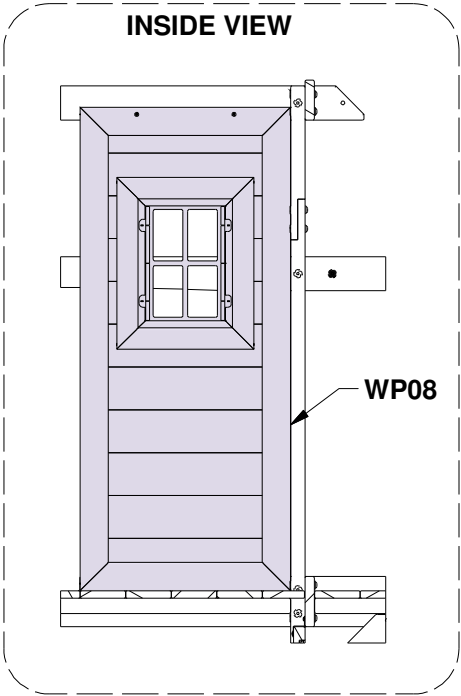

WP08 (x1)

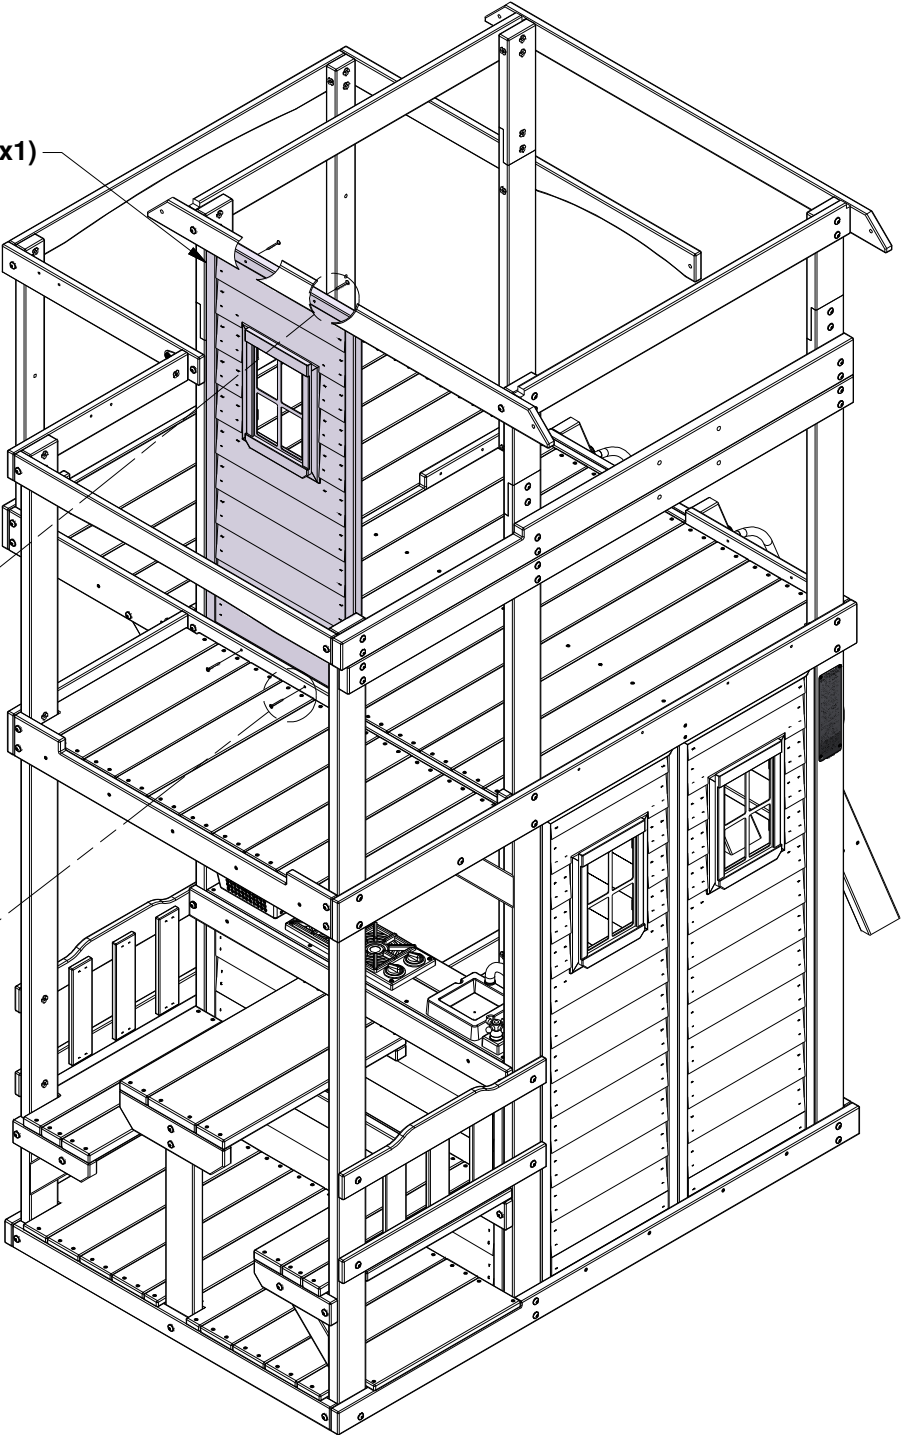


200 (x2)
SCREW - 1 1/2"

200 (x2)
SCREW - 1 1/2"


STEP 40 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H100200	SCREW PFH 8x1-1/2 BLK

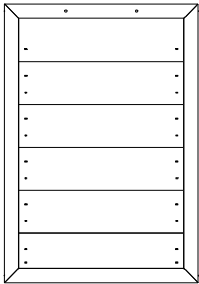


WP04 WALL PANEL - W2A04242
(x2) 1"x16 1/8"x23 1/4" (24x410x589)

INSIDE VIEW


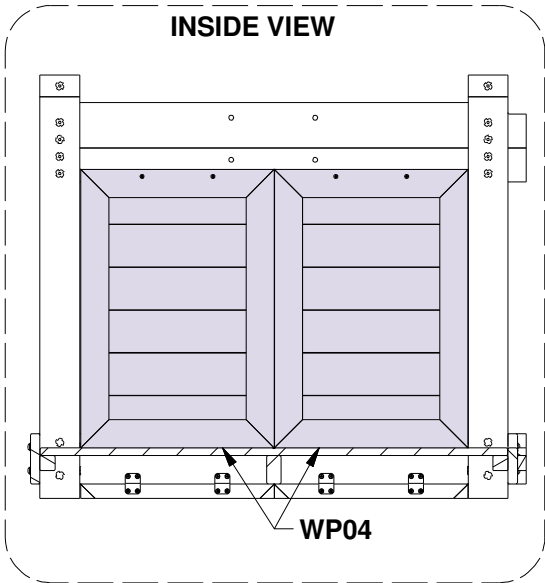


WP04 (x2)

200 (x4)
SCREW - 1 1/2"

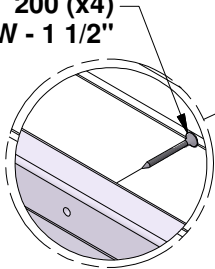


200 (x4)
SCREW - 1 1/2"

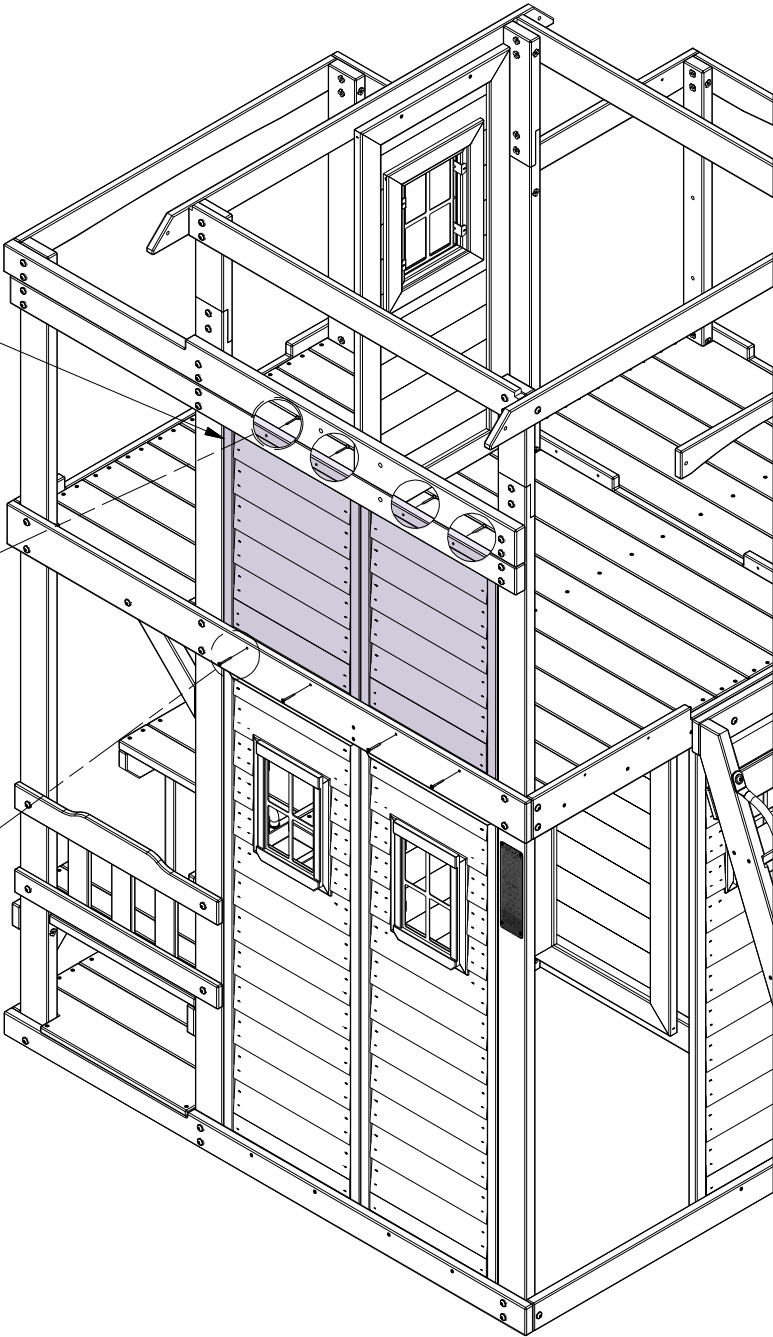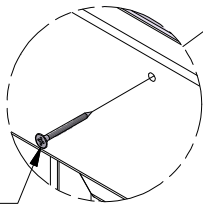


STEP 41 - FORT ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
8	H100200	SCREW PFH 8x1-1/2 BLK




WP05 WALL PANEL - W2A04243
(x2) 1"x8 3/8"x39 1/8" (24x214x1022)

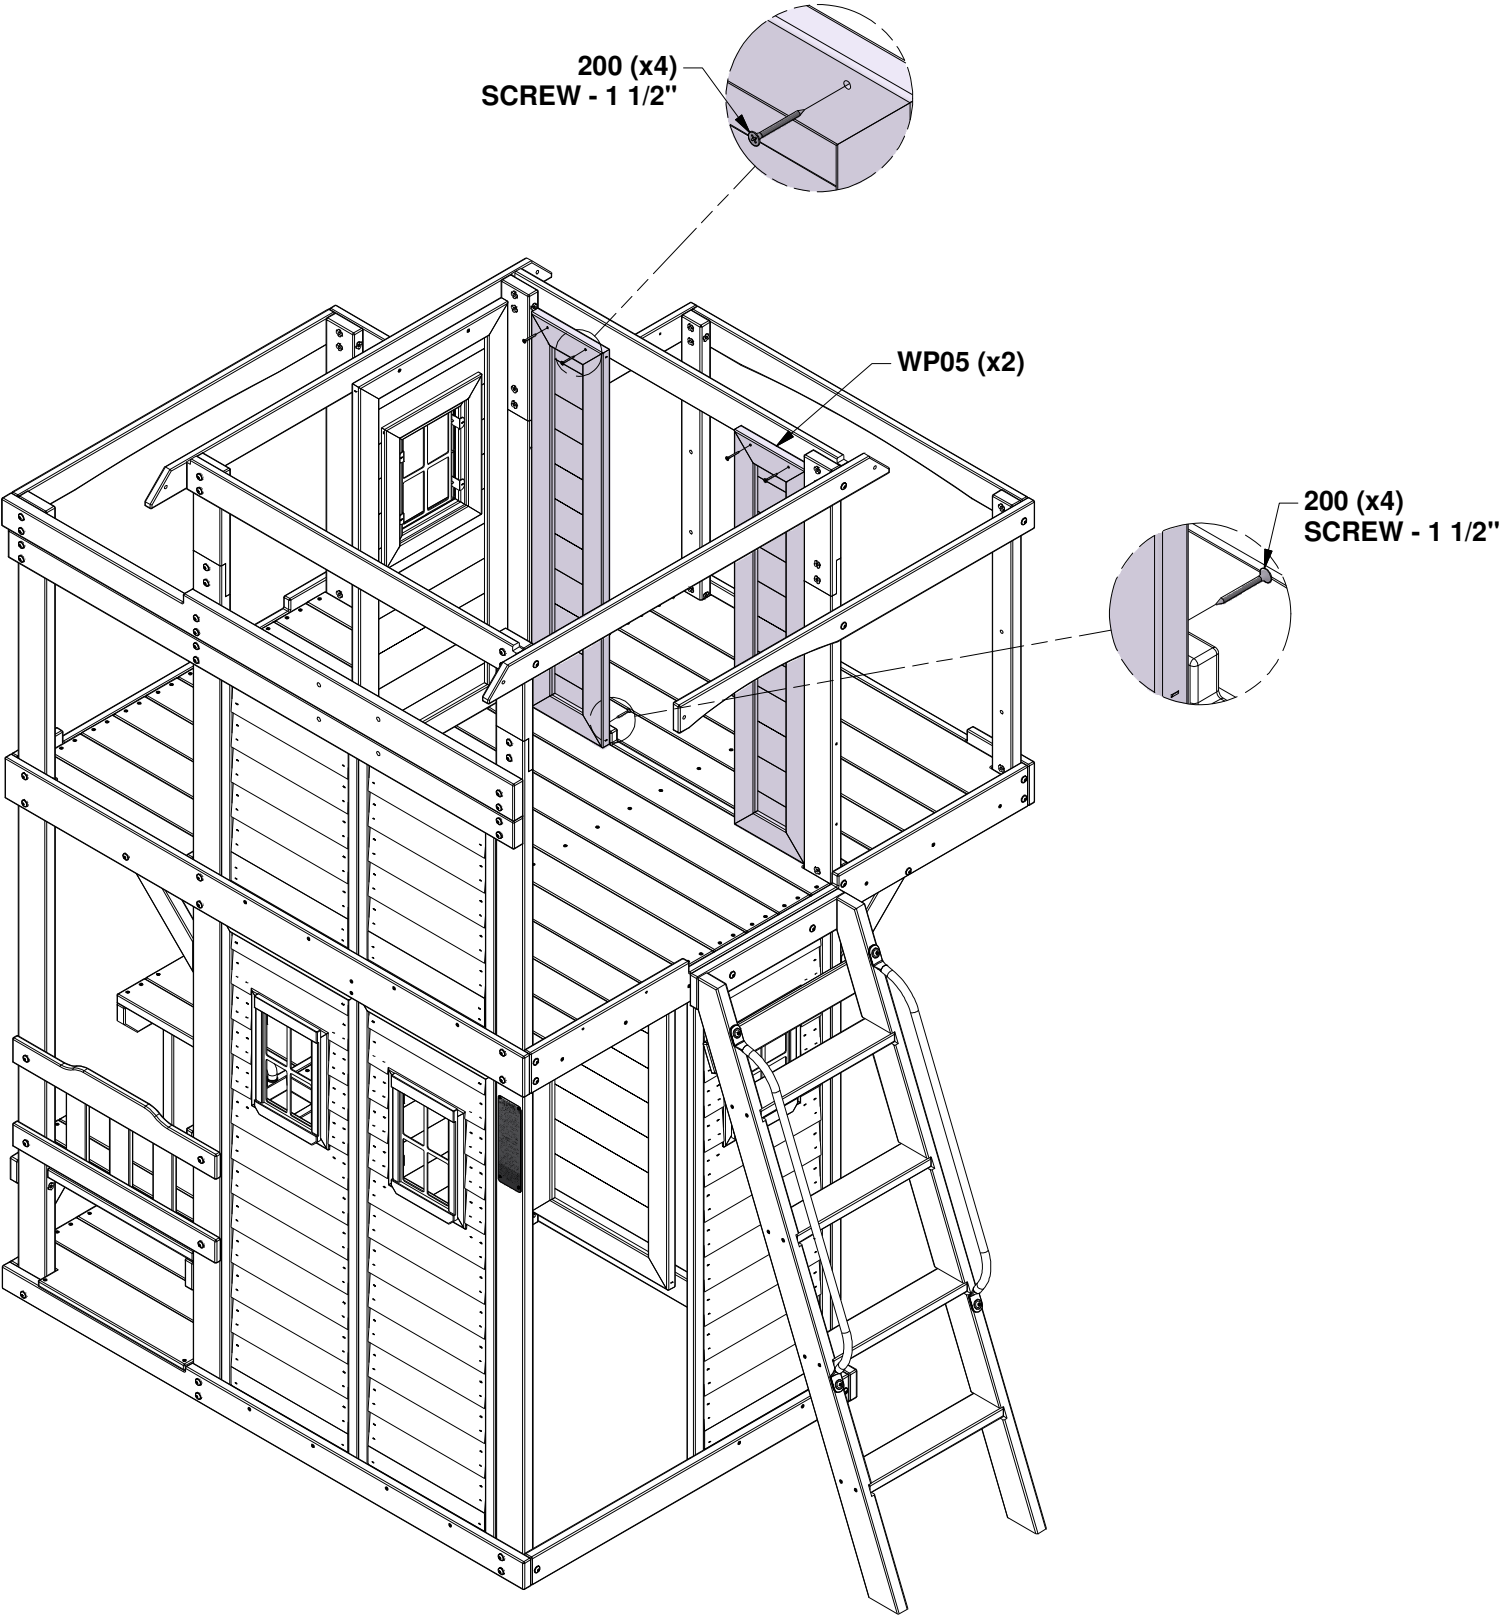

STEP 42 - FORT ASSEMBLY

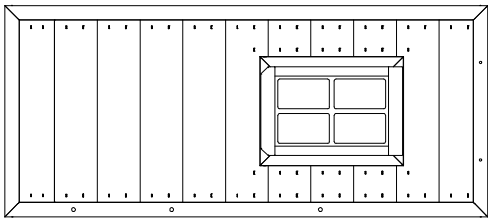


WP03 WALL PANEL - W2A04241
(x1) 1 3/8"x17 1/2"x40 1/4" (36x446x1022)

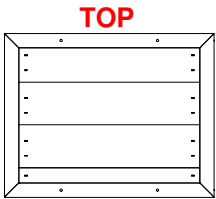

WP06 WALL PANEL - W2A04244
(x1) 1"x11 3/8"x17 1/2" (24x346x444)

QTY	PART NUMBER	DESCRIPTION
8	H100200	SCREW PFH 8x1-1/2 BLK
1	H100398	T-NUT 1/4 BLK
1	H100405	WASHER LOCK EXT 6x15 BLK
1	H101026	BOLT WH 1/4x1-3/4 BLK

INSTALL T-NUT IN WOOD FIRST

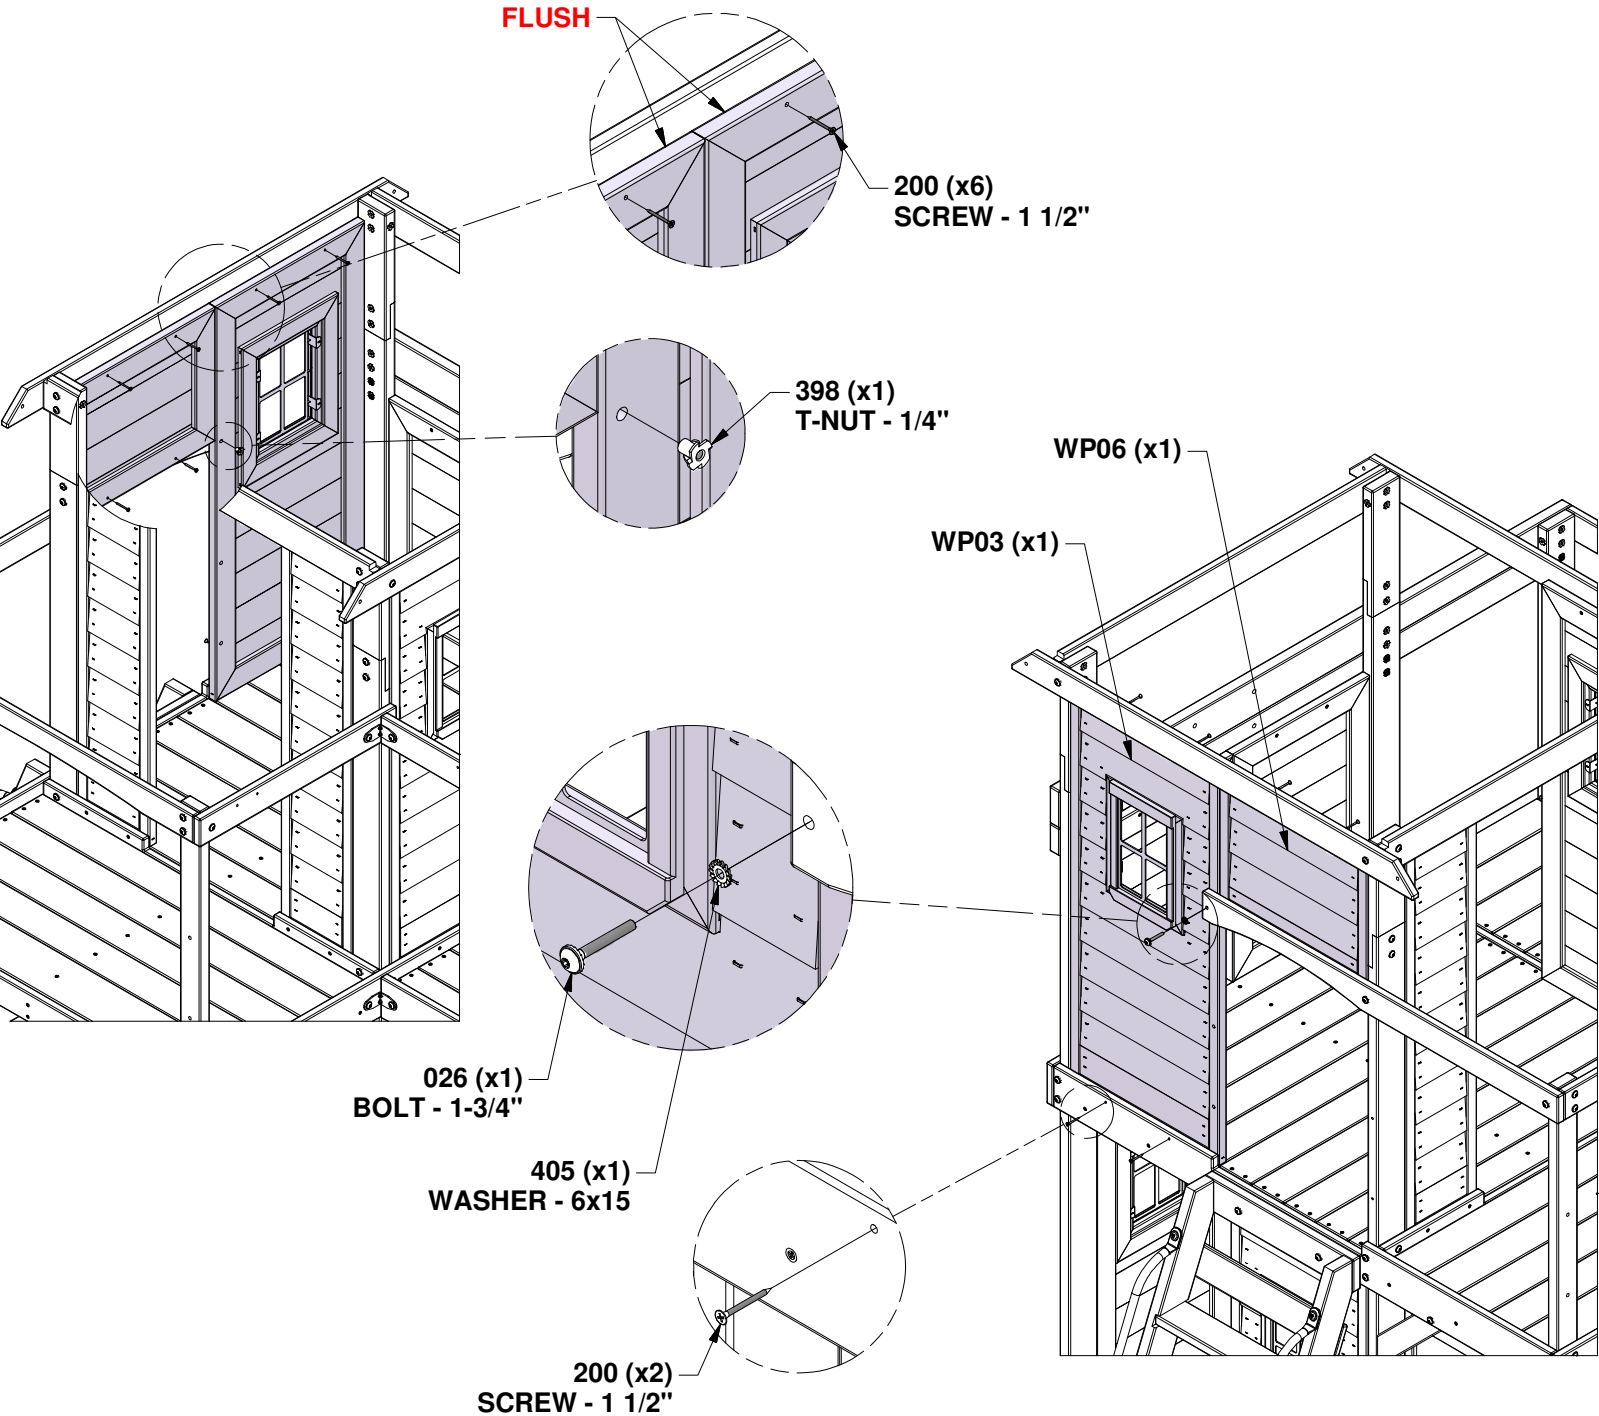

STEP 43 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
32	H100088	SCREW PFH 8x1-1/8




MR02 PICKET - W4L21004
(x8) 5/8"x2 3/8"x26" (16x60x660)



A6P00410 PICKET PAL
(x1)


USE A6P00410 PICKET PAL
FOR SPACING

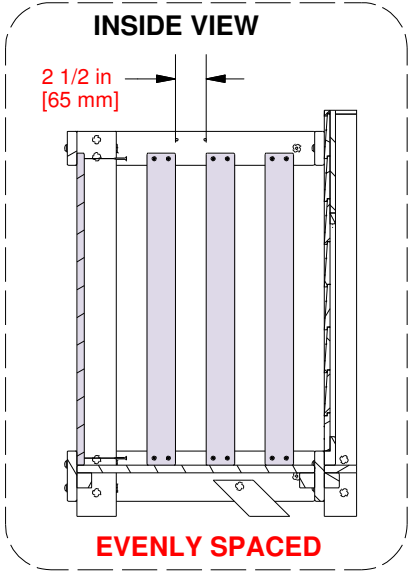

MR02 (x8)

088 (x32)
SCREW - 1 1/8"



FLUSH
BOTH SIDES

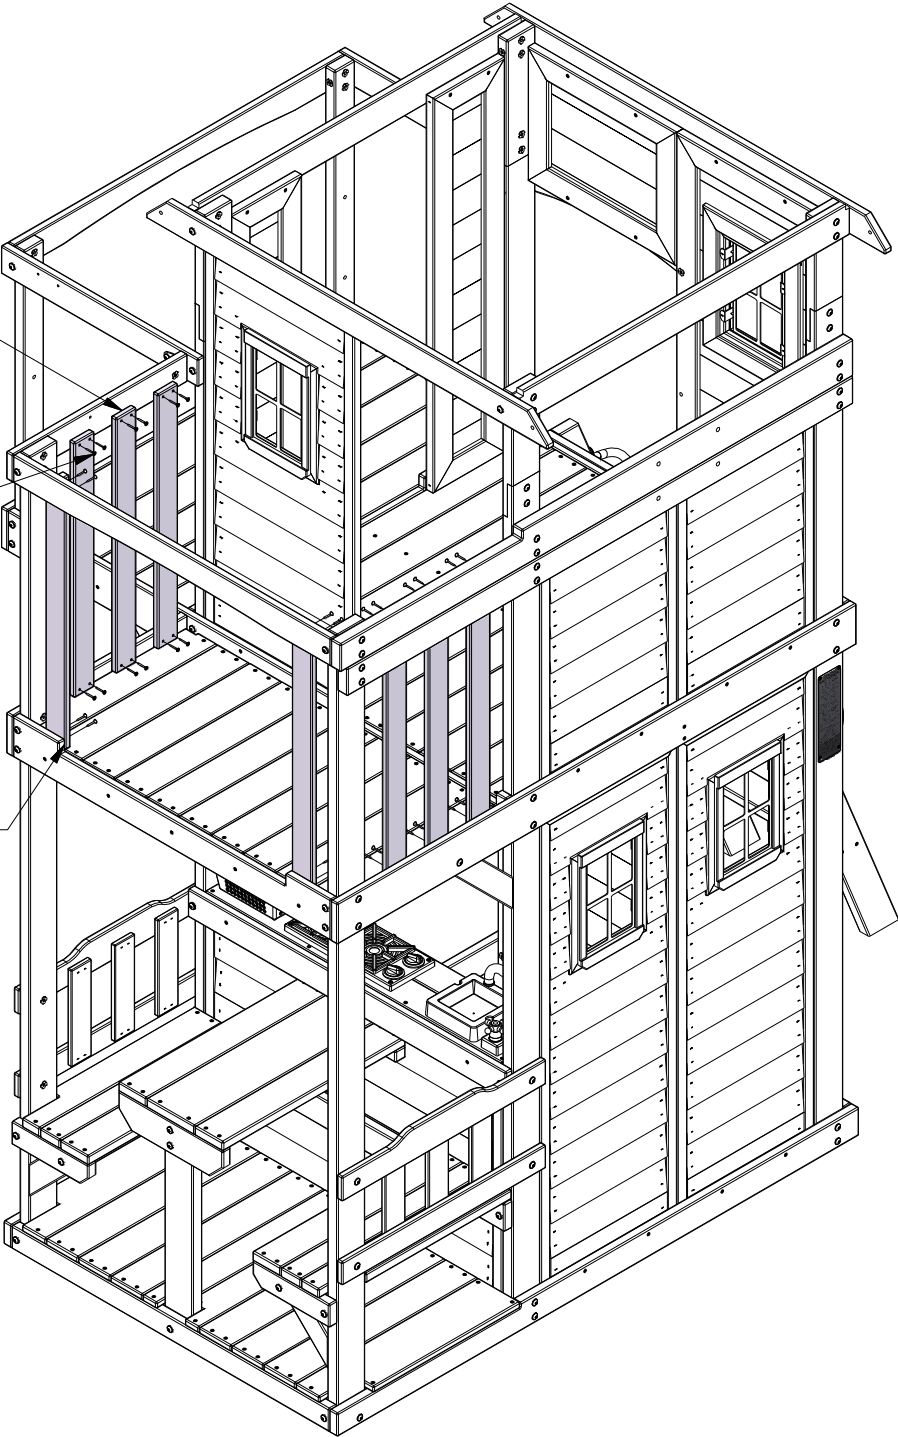



STEP 44 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
40	H100088	SCREW PFH 8x1-1/8

MR02 PICKET - W4L21004
(x10) 5/8"x2 3/8"x26" (16x60x660)

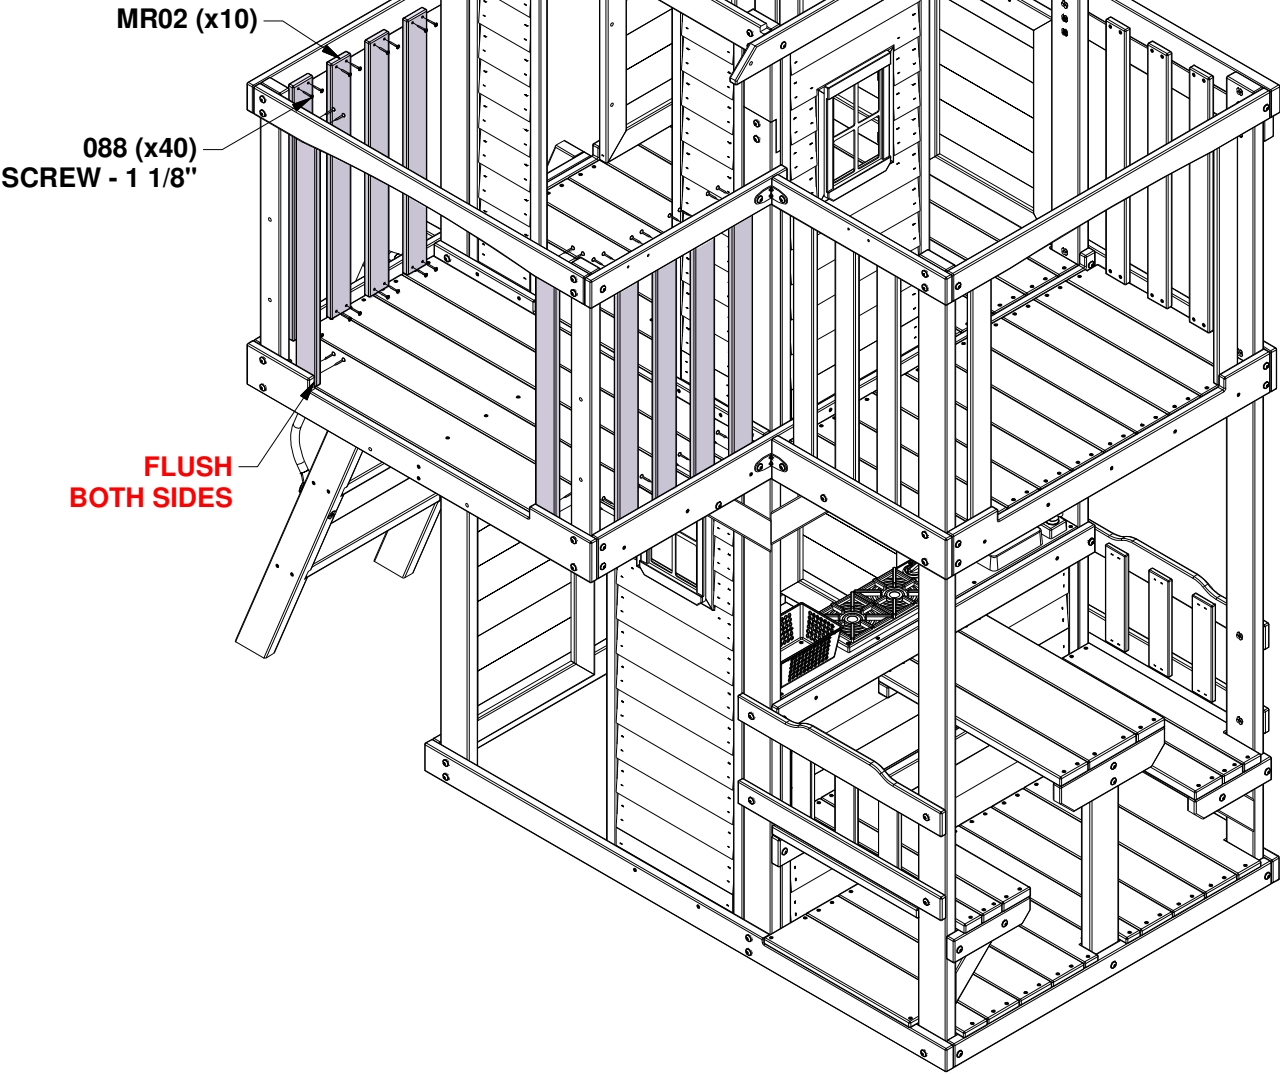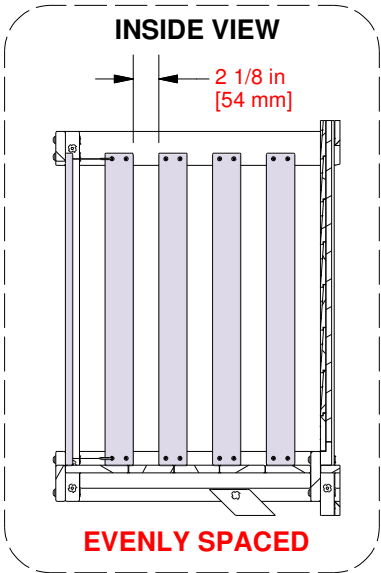


STEP 45 - FORT ASSEMBLY

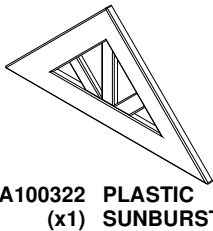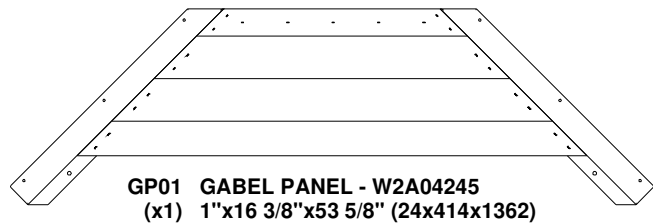



QTY	PART NUMBER	DESCRIPTION
4	H100128	SCREW PWH 8x5/8
2	H100397	BOLT WH 1/4x1-1/4 BLK
2	H100398	T-NUT 1/4 BLK
2	H100405	WASHER LOCK EXT 6x15 BLK

INSTALL T-NUTS IN WOOD FIRST

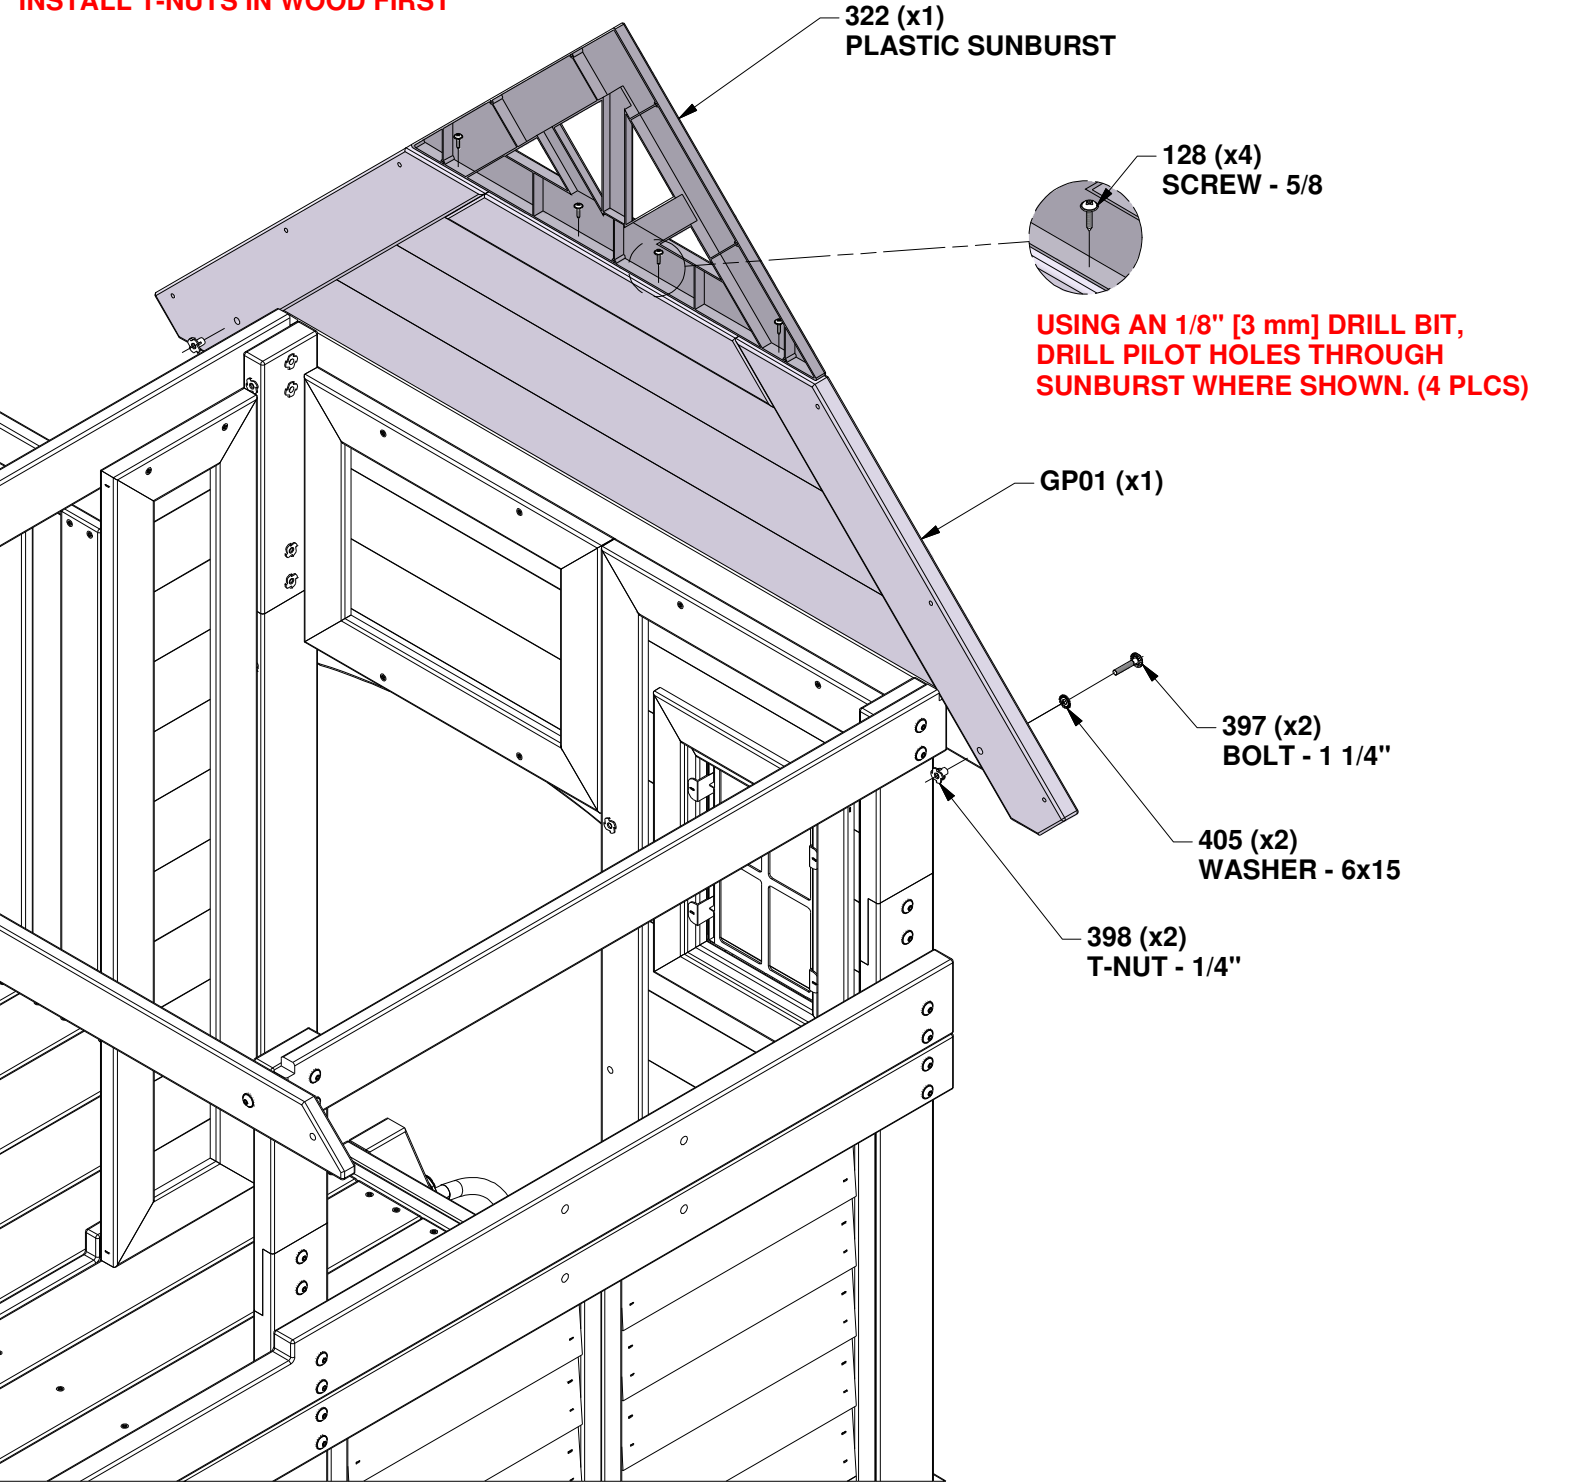


STEP 46 - FORT ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
4	H100128	SCREW PWH 8x5/8
2	H100397	BOLT WH 1/4x1-1/4 BLK
2	H100398	T-NUT 1/4 BLK
2	H100405	WASHER LOCK EXT 6x15 BLK

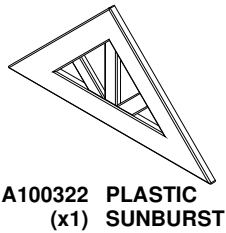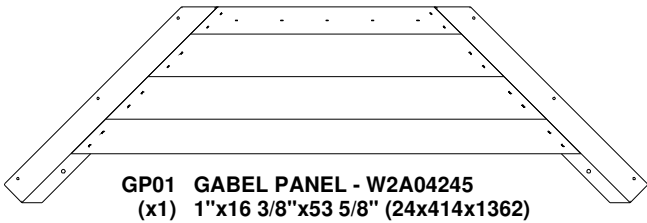

INSTALL T-NUTS IN WOOD FIRST

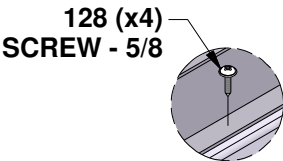


USING AN 1/8" [3 mm] DRILL BIT,
DRILL PILOT HOLES THROUGH
SUNBURST WHERE SHOWN. (4 PLCS)

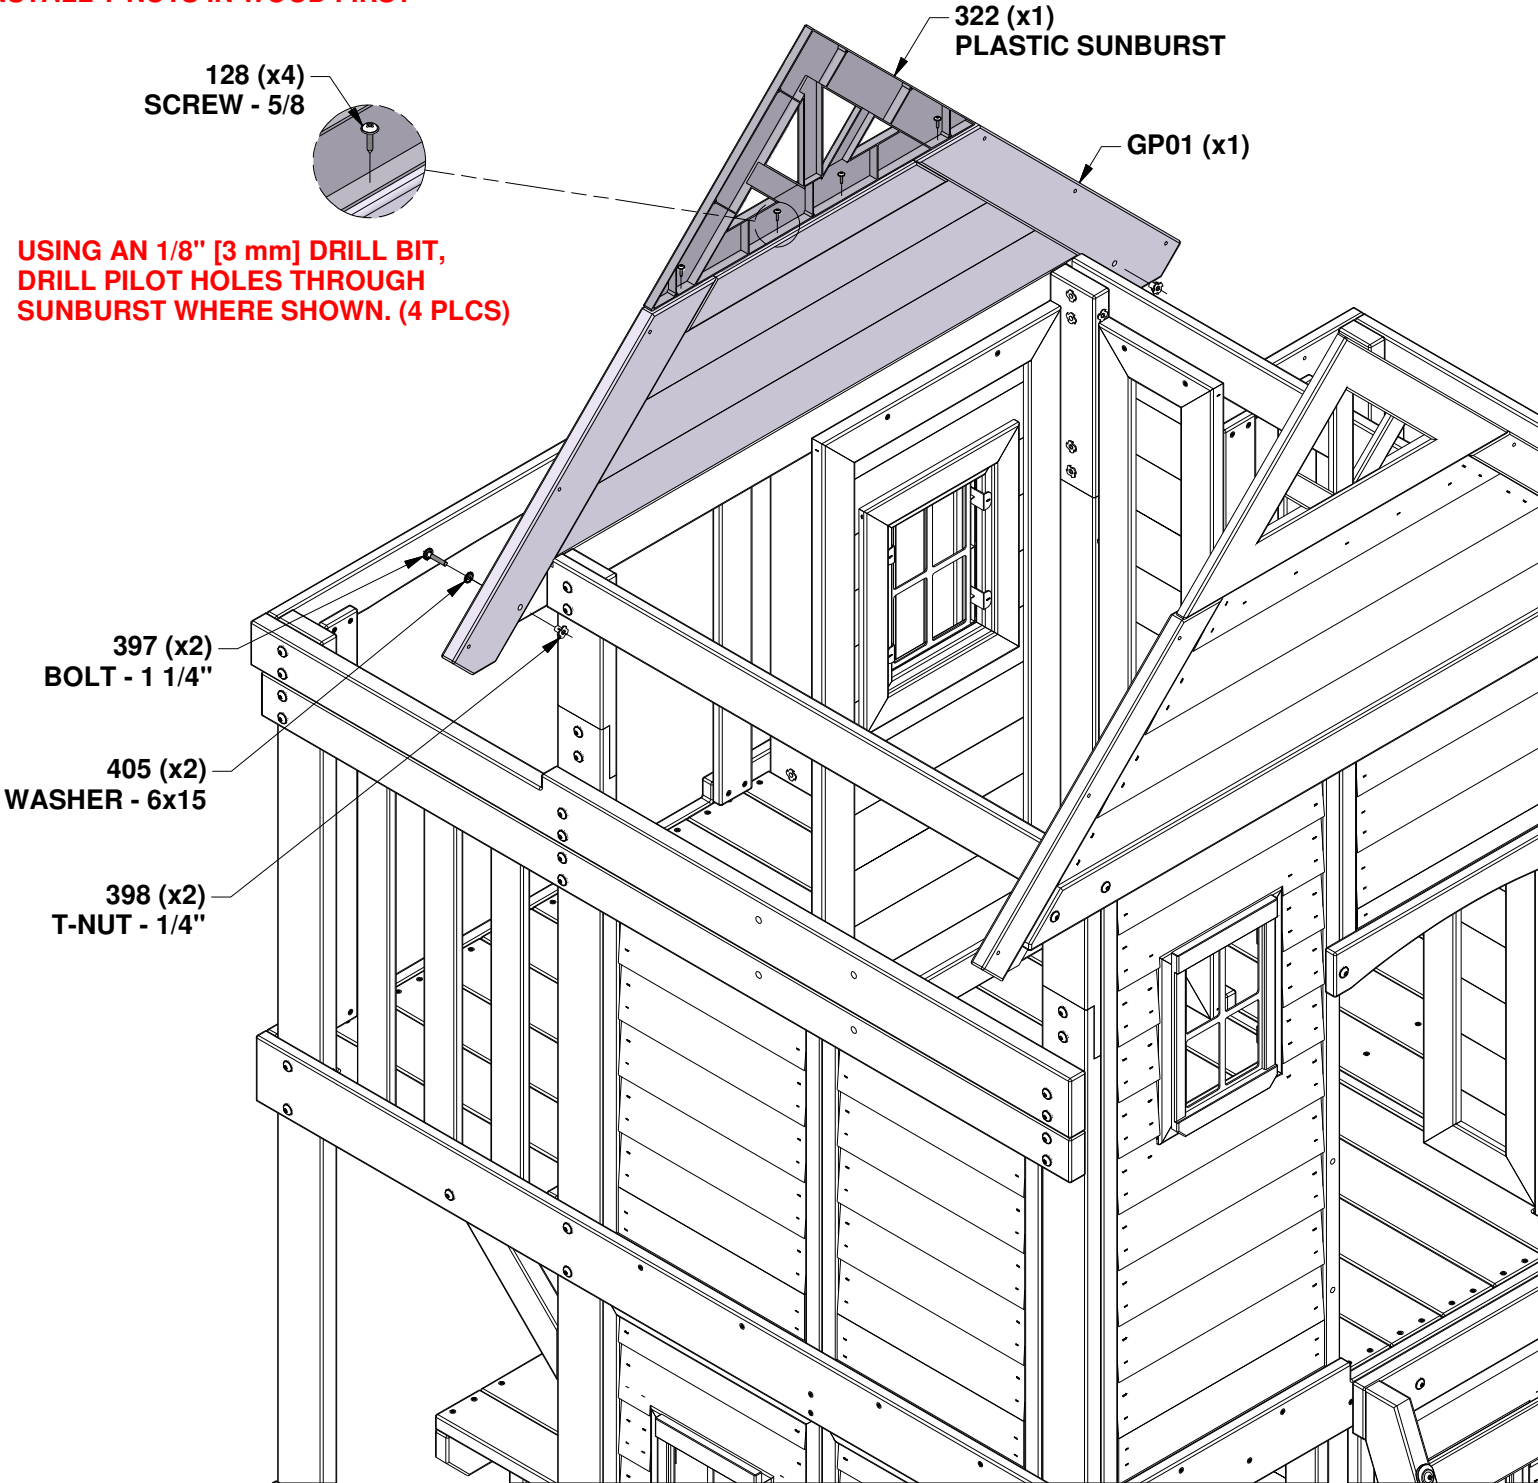


STEP 47 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H100128	SCREW PWH 8x5/8

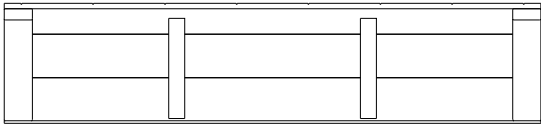

RP02 ROOF PANEL - W2A04247
(x2) 1 3/8"x10"x44 3/4" (35x253x1137)


SIDE VIEW

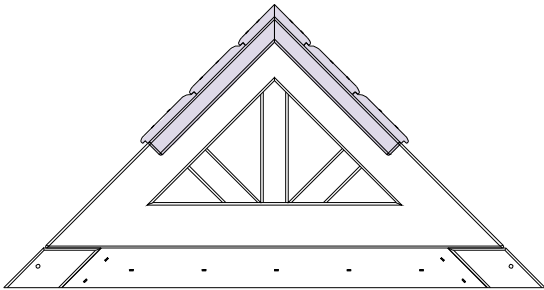


CORRECT PANEL PLACEMENT

USING AN 1/8" [3 mm] DRILL BIT,
DRILL PILOT HOLES THROUGH
SUNBURST WHERE SHOWN. (8 PLCS)

128 (x8)
SCREW - 5/8

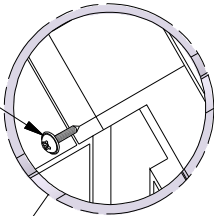

RP02 (x2)

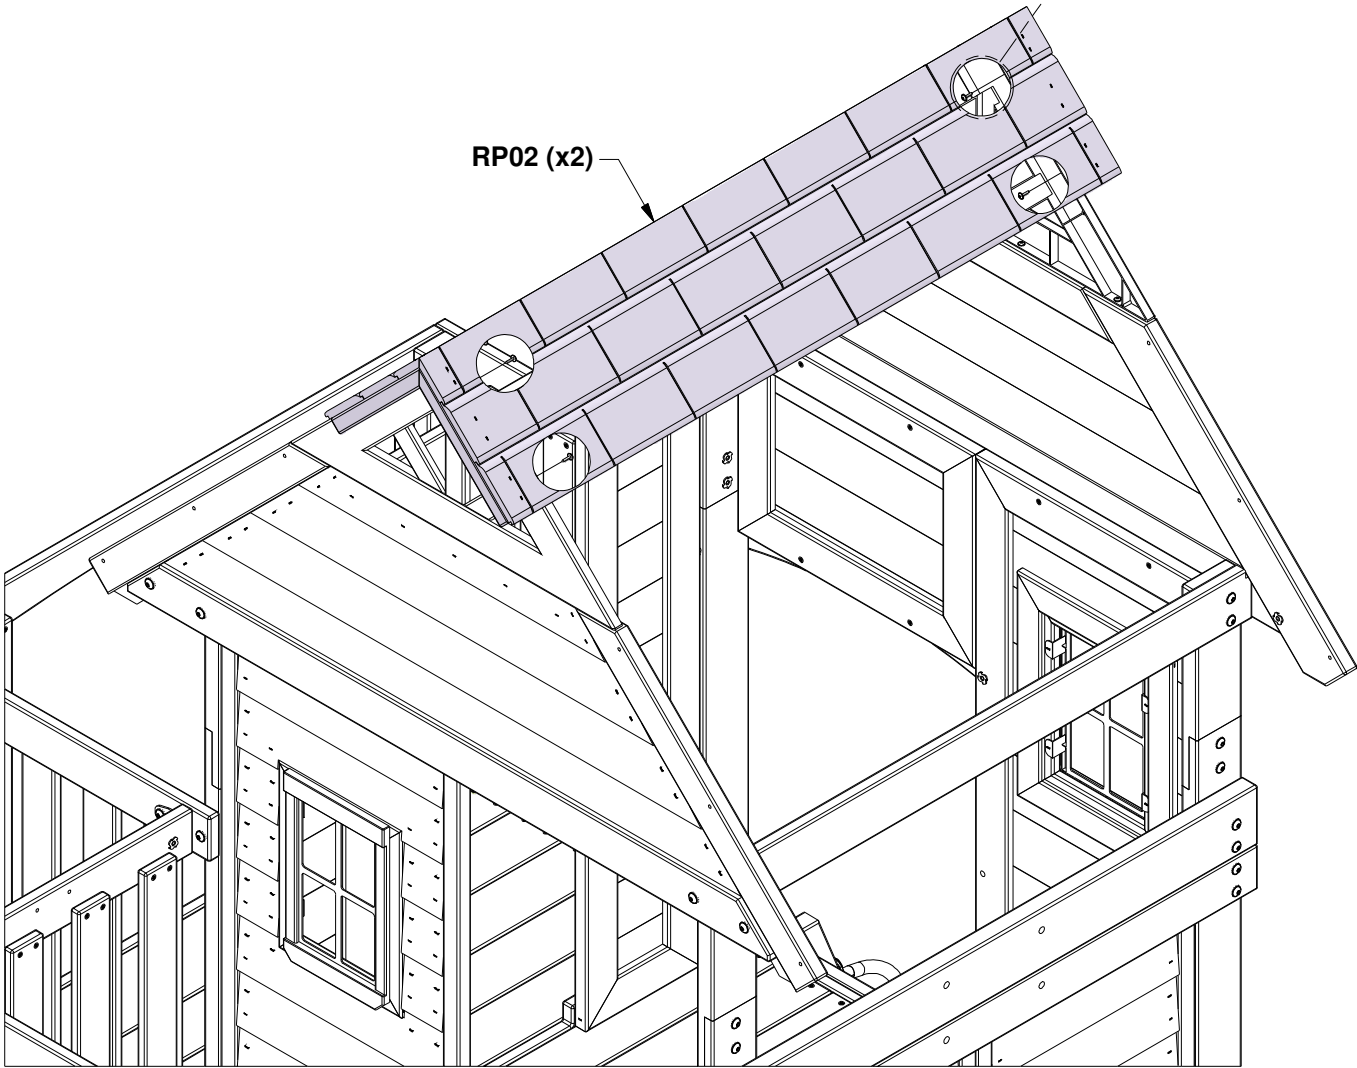


STEP 48 - FORT ASSEMBLY



RP01 ROOF PANEL - W2A04246
(x4) 1 3/8"x19 3/8"x46 3/4" (35x370x1137)



QTY	PART NUMBER	DESCRIPTION
12	H100089	SCREW PFH 8x1-3/4
4	H100128	SCREW PWH 8x5/8

USING AN 1/8" [3 mm] DRILL BIT,
DRILL PILOT HOLES THROUGH
SUNBURST WHERE SHOWN. (4 PLCS)

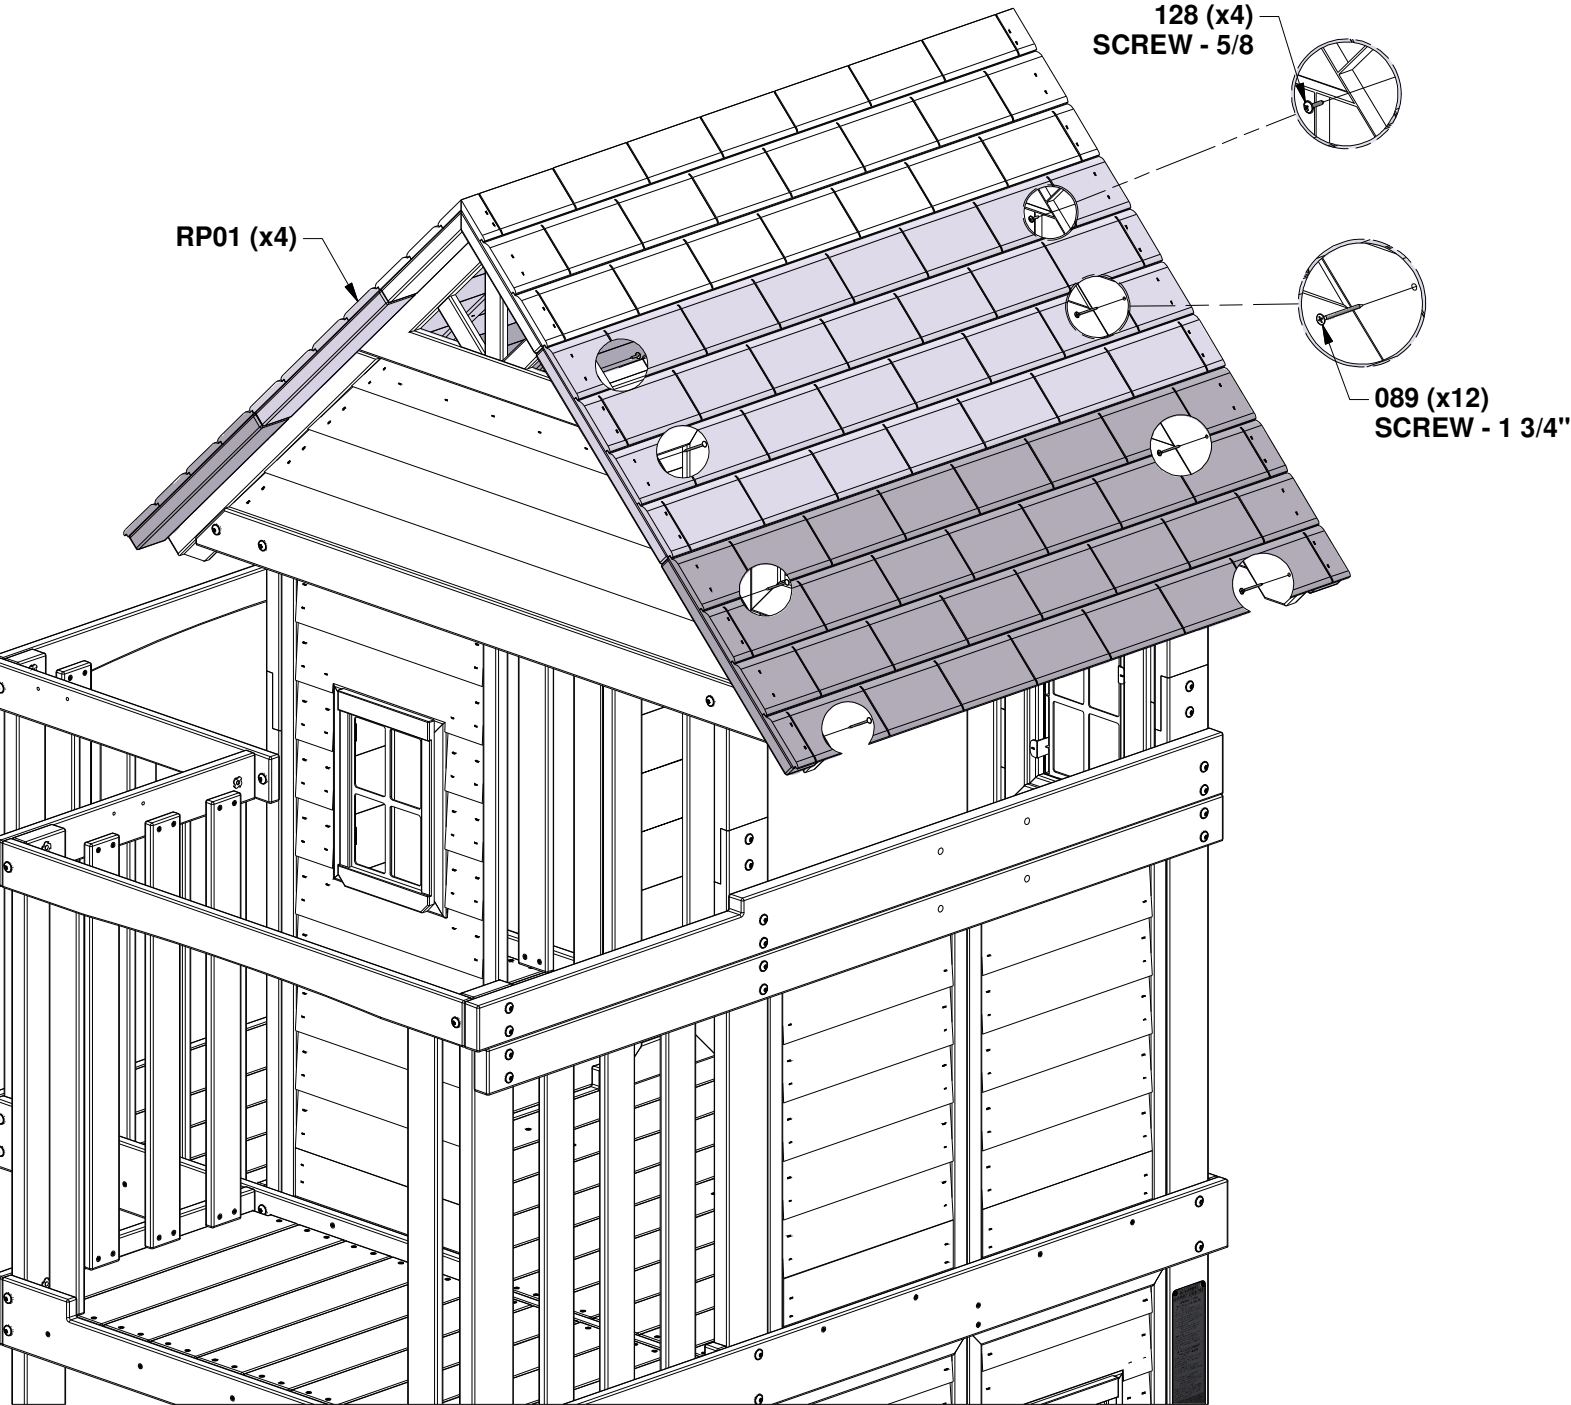



STEP 49 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100382	SCREW PFH 8x1 3/4 BLK

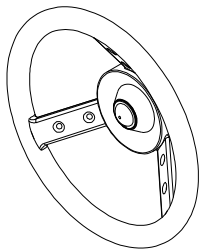


EB10 MOUNTING BLOCK - W4L21007
(x1) 1 3/8"x3"x4 3/4" (36x76x120)

A100107 STEERING WHEEL
(x1)

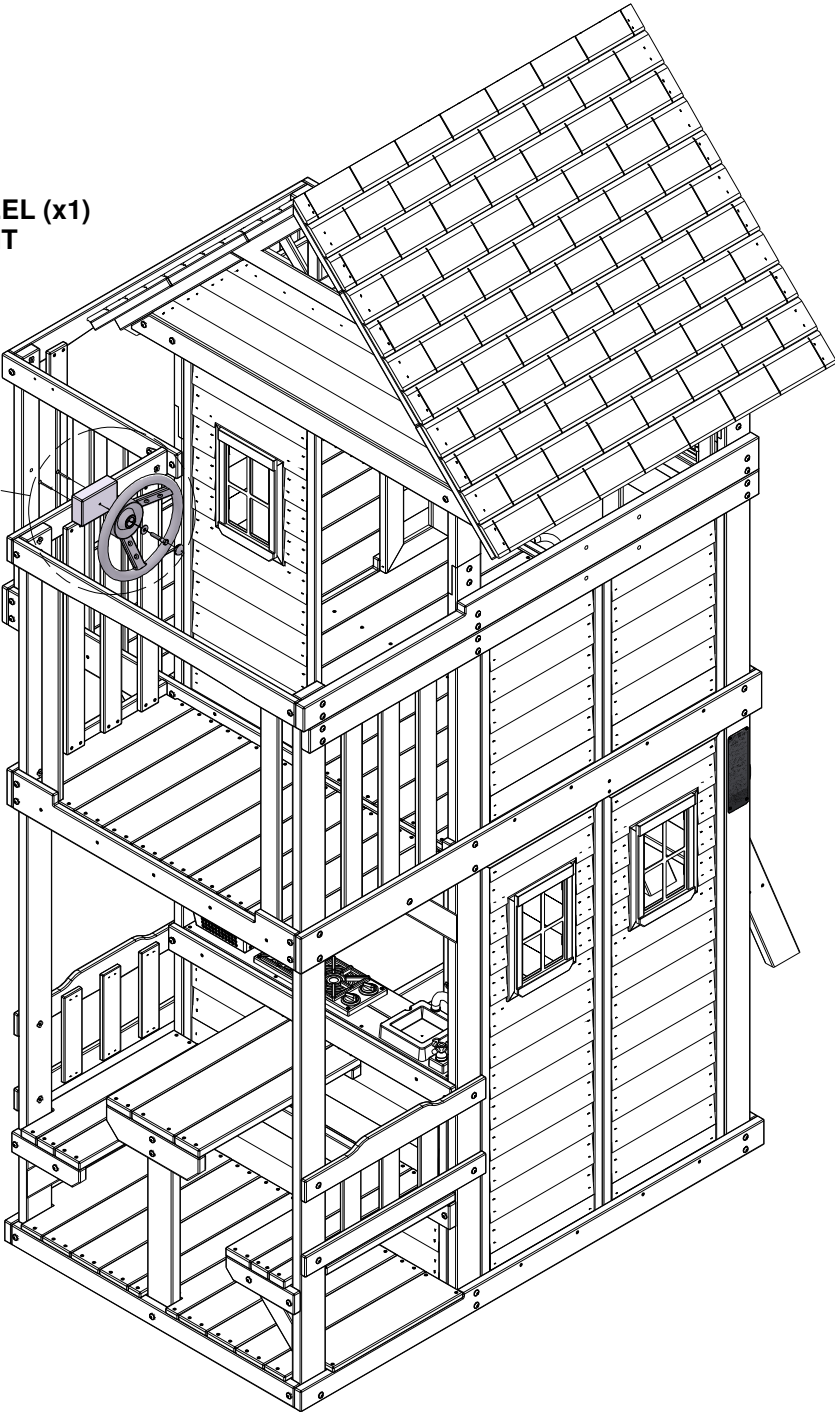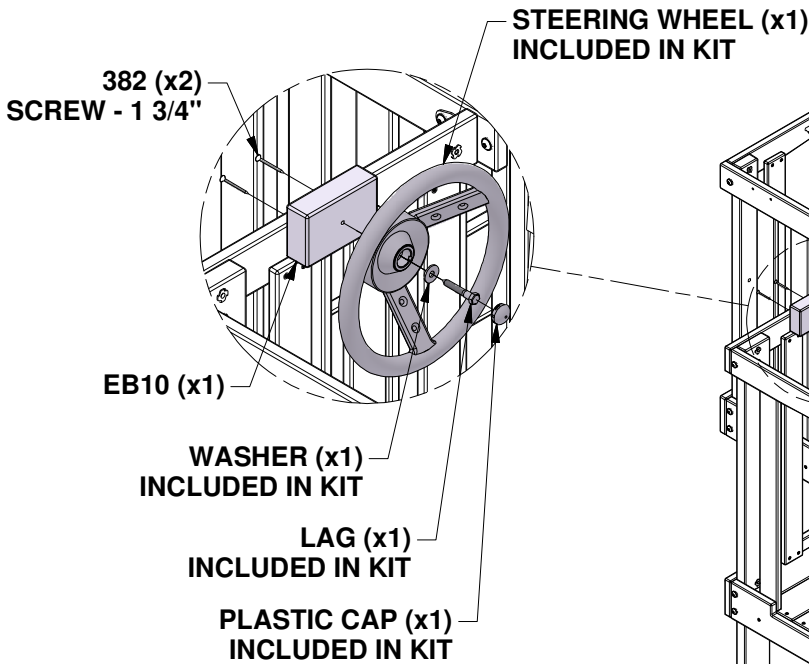

STEP 50 - FORT ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
2	H100382	SCREW PFH 8x1 3/4 BLK
2	H100087	SCREW PFH 8x1-1/4

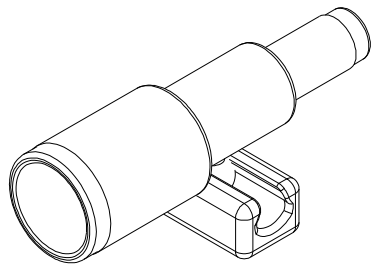


A6P00096 TELESCOPE
(x1)



EB10 MOUNTING BLOCK - W4L21007
(x1) 1 3/8"x3"x4 3/4" (36x76x120)

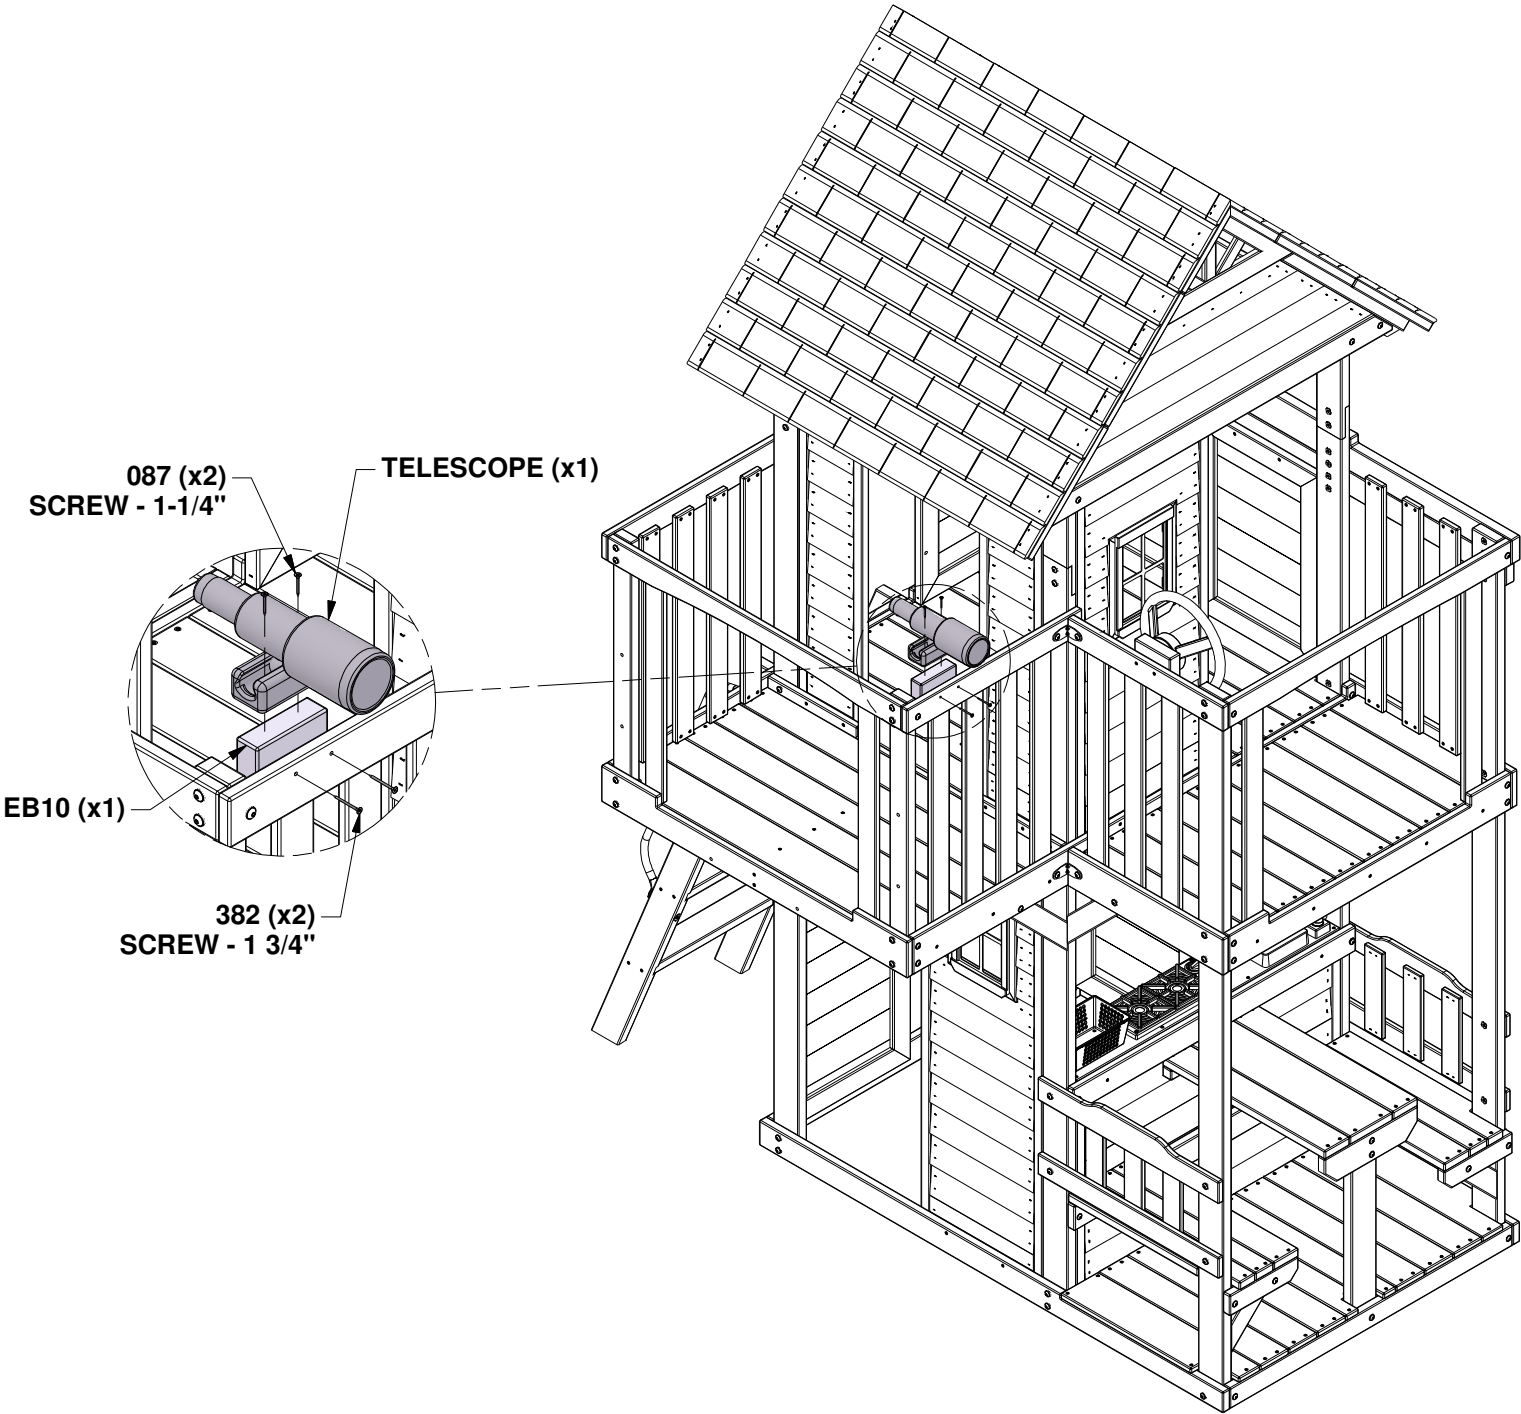


STEP 51 - FORT ASSEMBLY

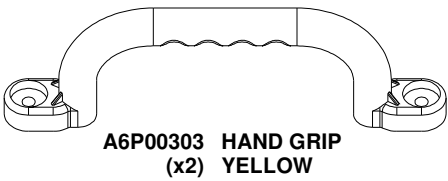


QTY	PART NUMBER	DESCRIPTION
2	H100072	T-NUT 1/4
4	H100138	WASHER LOCK EXT 6x15
2	H100142	BOLT WH 1/4x1-1/4
2	H100145	LAG SCREW WH 1/4x1-1/2

INSTALL T-NUTS IN WOOD FIRST


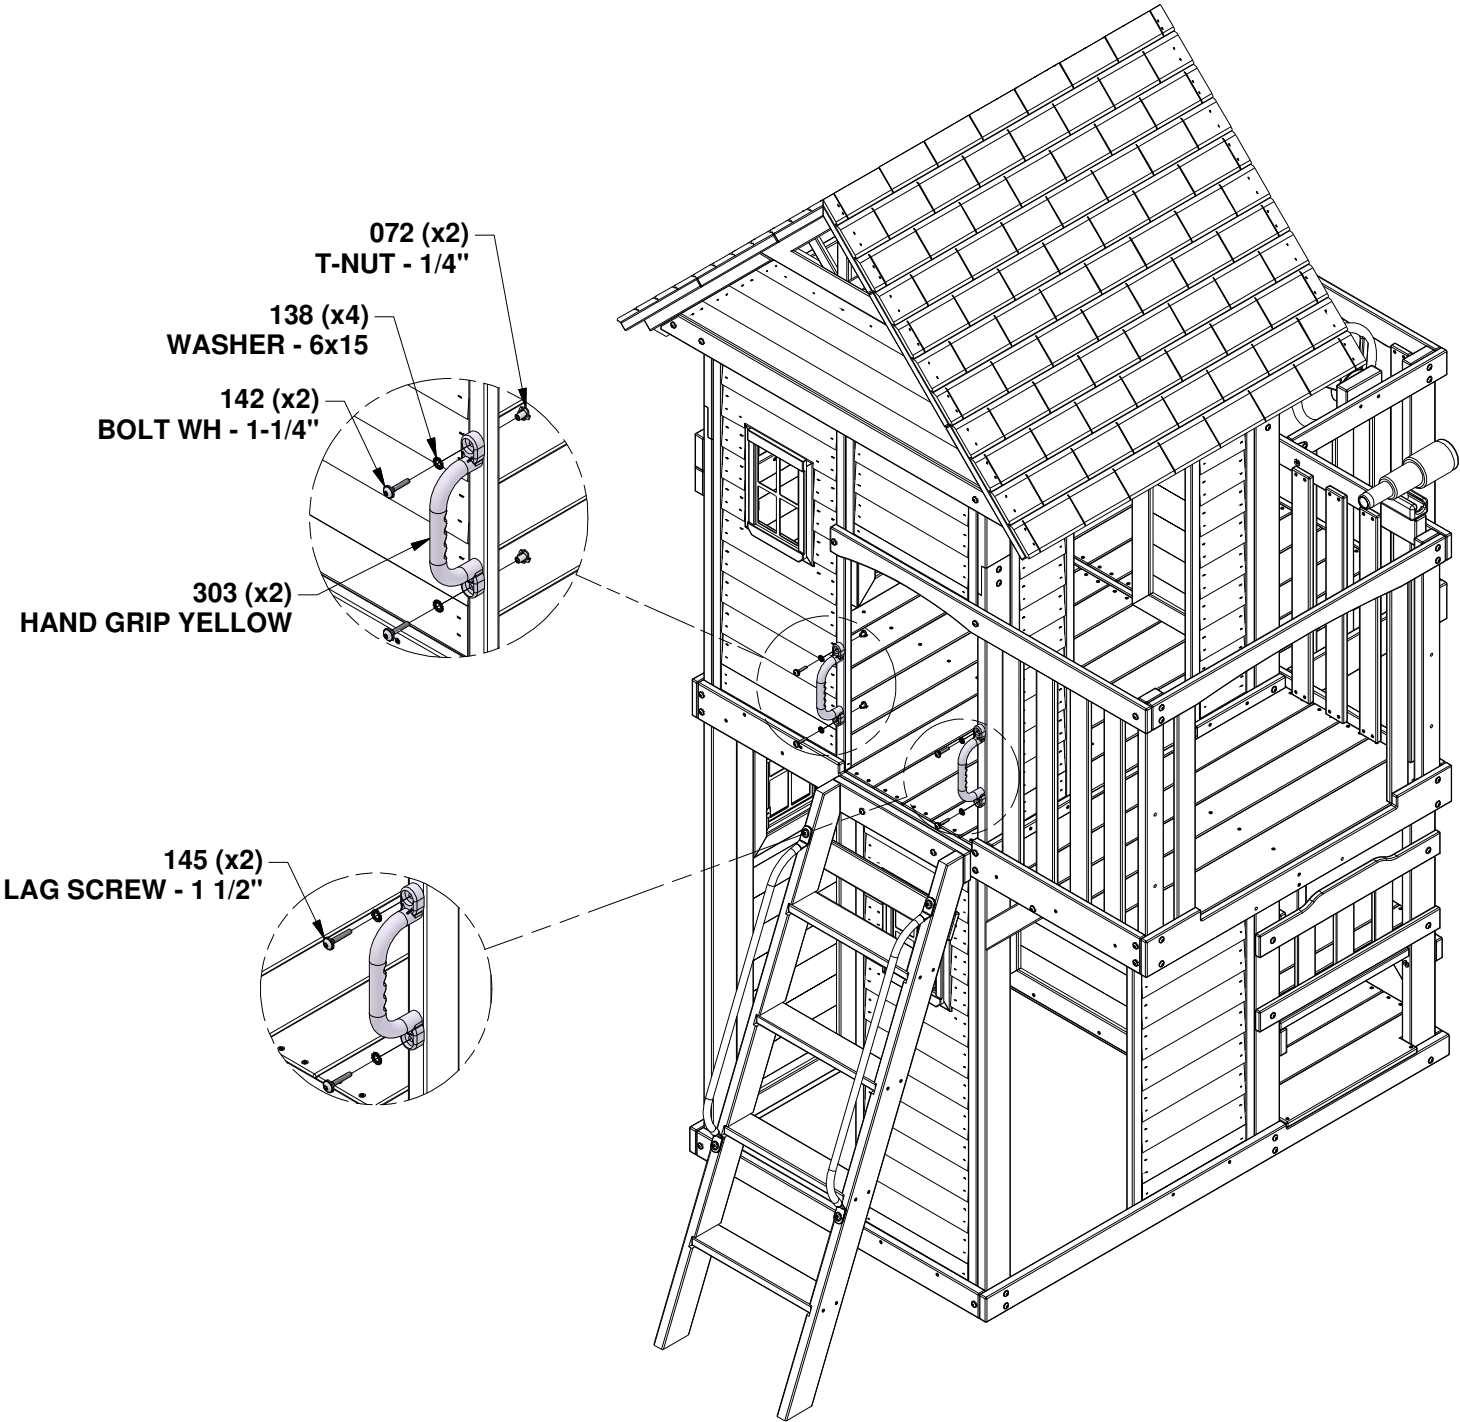


STEP 52 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100072	T-NUT 1/4
4	H100138	WASHER LOCK EXT 6x15
4	H100143	BOLT WH 1/4x1-1/2

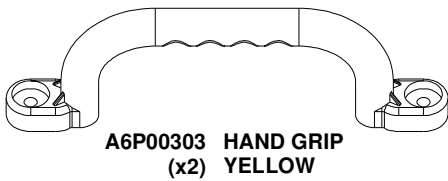


INSTALL T-NUTS IN WOOD FIRST

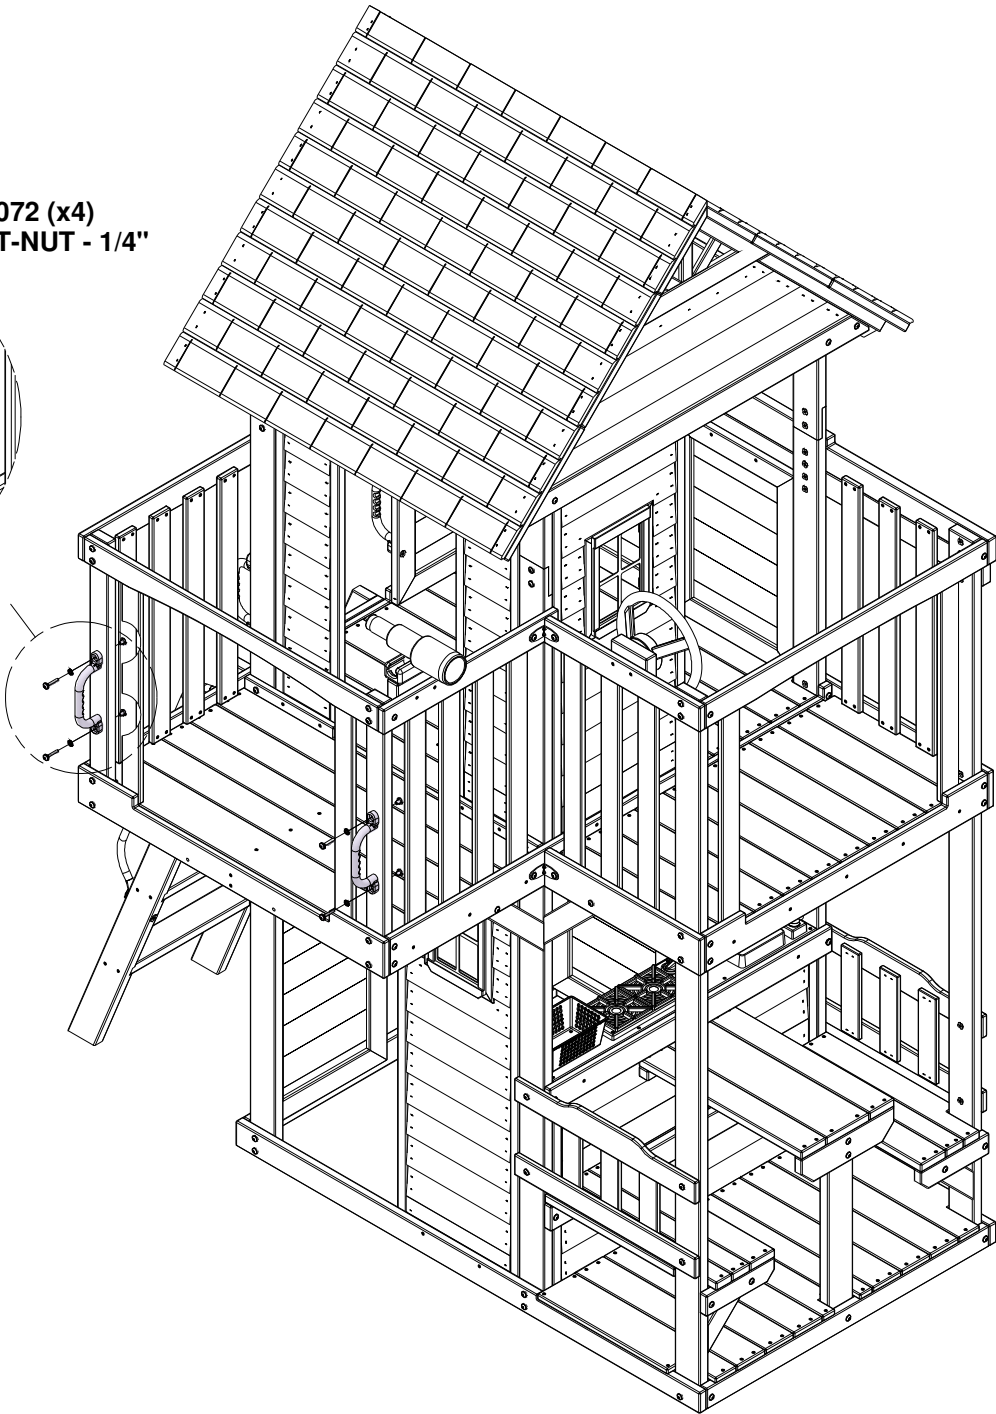
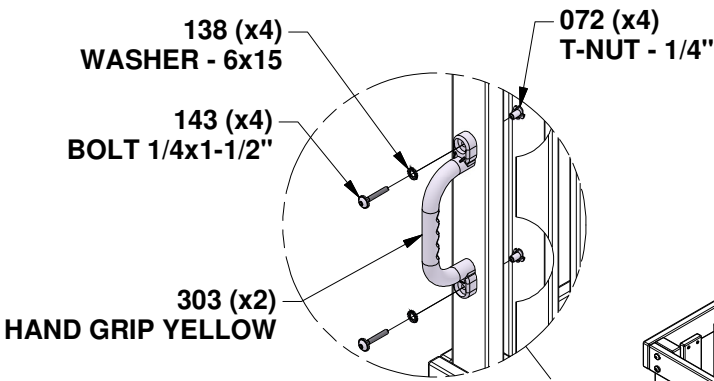


STEP 53 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100405	WASHER LOCK EXT 6x15 BLK
2	H101026	BOLT WH 1/4x1-3/4 BLK

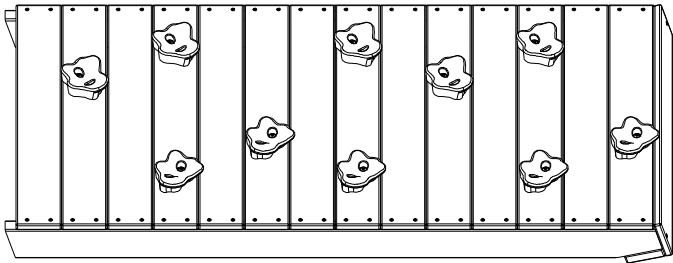


ROCKWALL ASSEMBLY

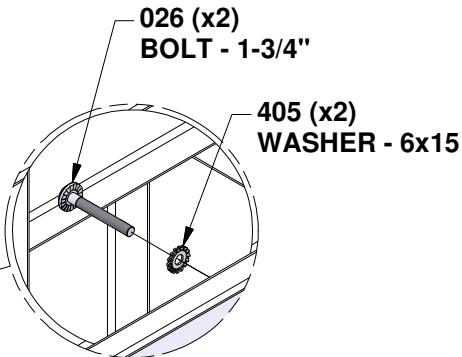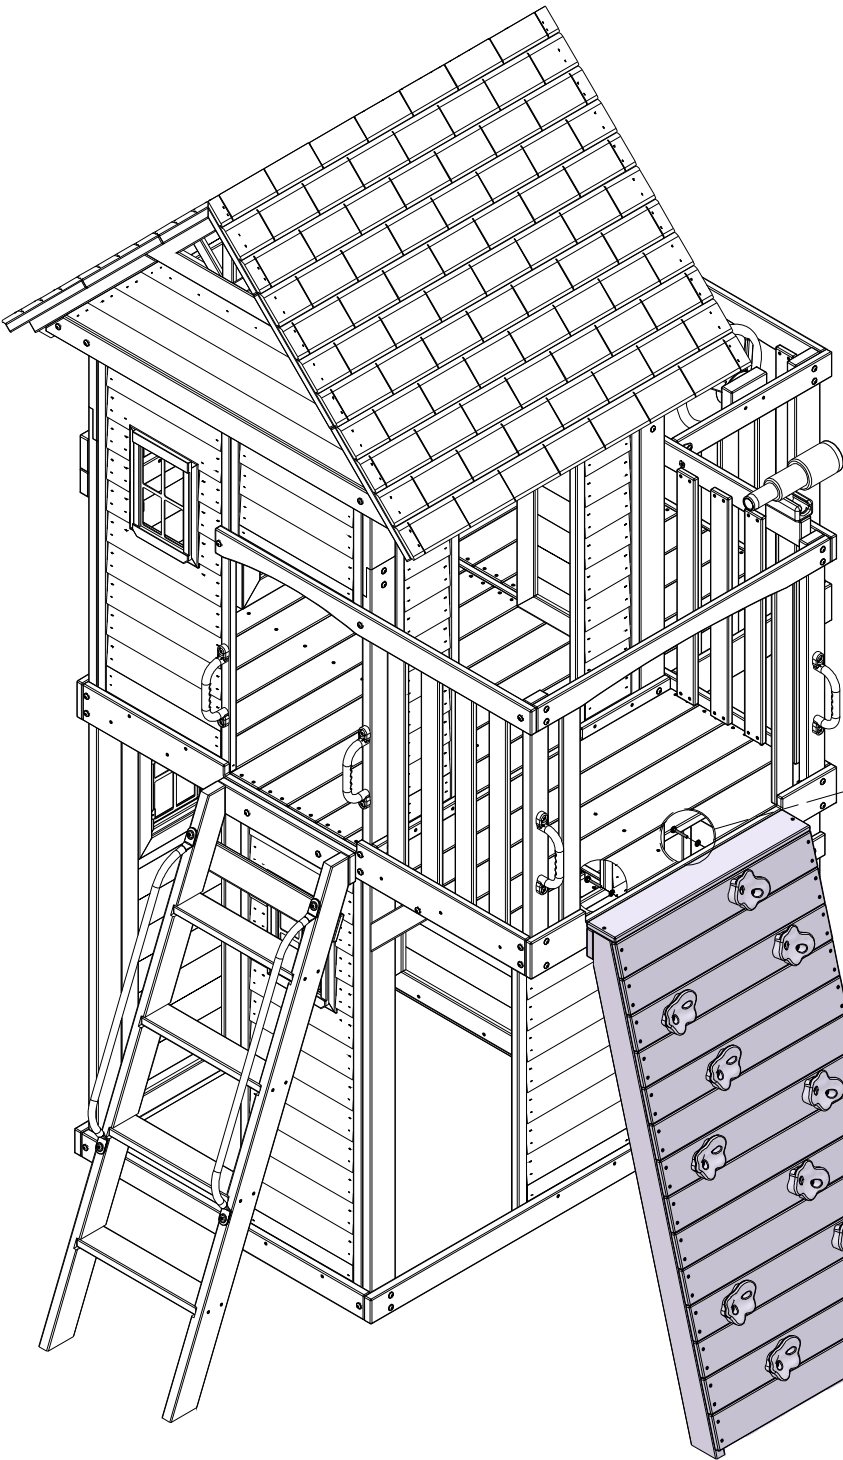

ROCKWALL ASSEMBLY


STEP 54 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100008	BOLT WH 5/16x1
2	H100074	T-NUT 5/16

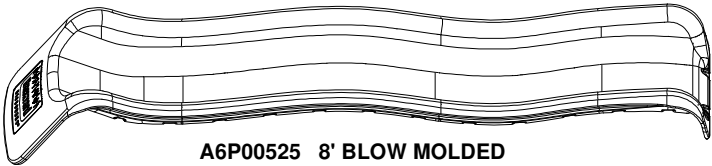



A6P00525 8' BLOW MOLDED
(x1) SLIDE - GREEN

CENTER SLIDE IN OPENING USING DIMENSIONS SHOWN.
USING SLIDE AS A TEMPLATE, DRILL (2) 3/8" [10mm] HOLES
THRU DECK FOR HARDWARE.

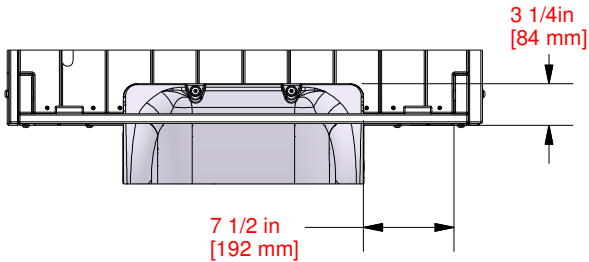


008 (x2)
BOLT - 5/16x1"

074 (x2)
T-NUT - 5/16"

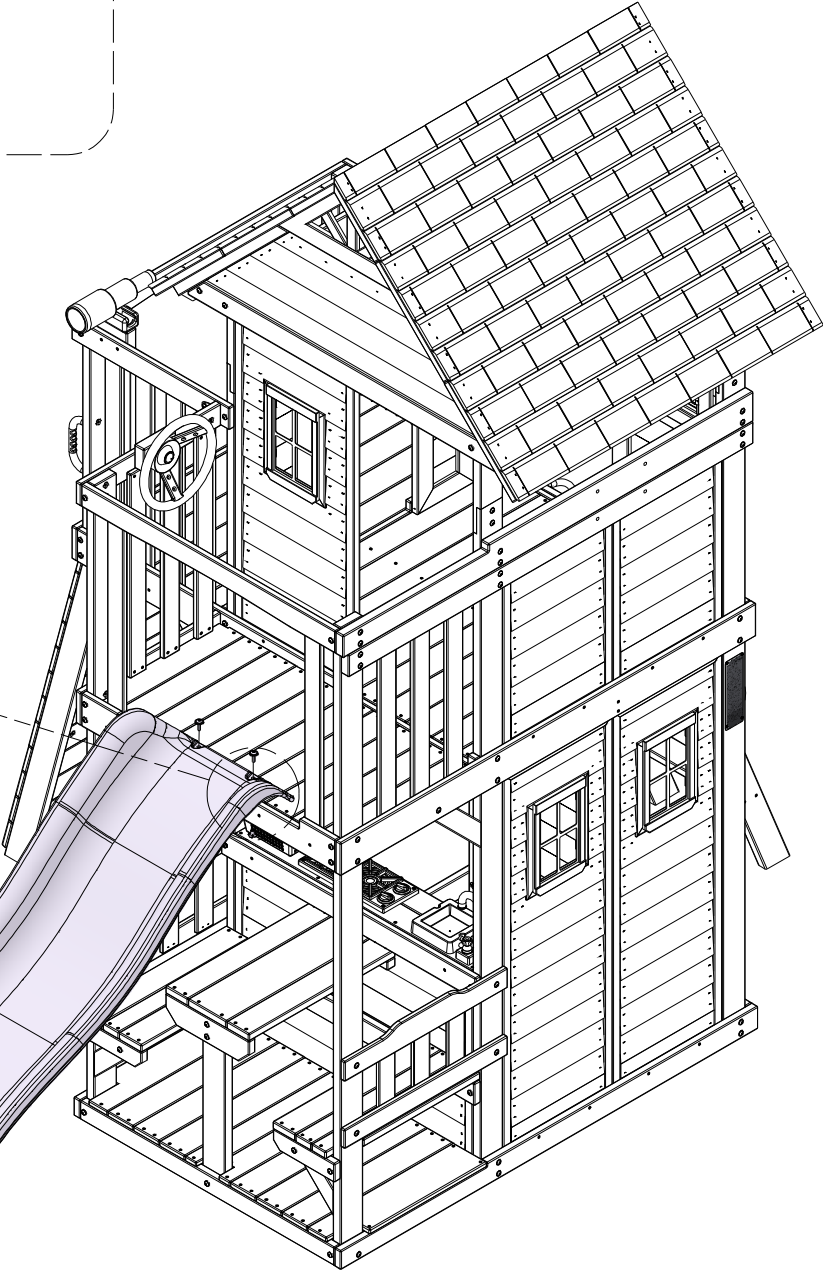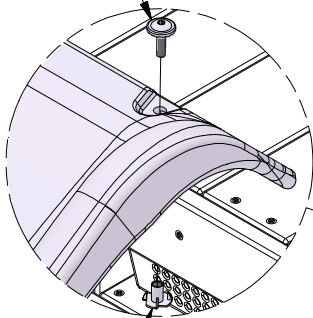

525 (x1)
8' BLOW MOLDED SLIDE - GREEN


STEP 55 - FORT ASSEMBLY

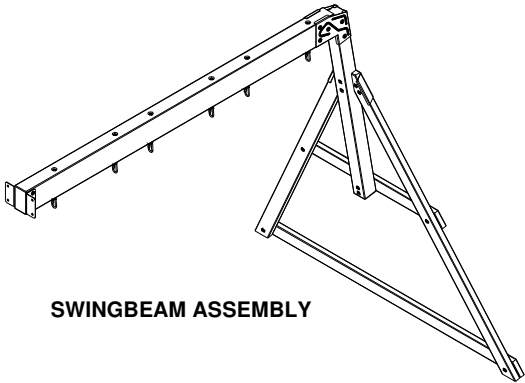

SWINGBEAM ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100379	T-NUT 5/16 BLK
4	H100477	WASHER SPLIT 5/16 BLK
4	H100478	WASHER FLAT 8x27 BLK
4	H100498	BOLT HEX 5/16x1-1/2 - BLK


INSTALL T-NUTS IN WOOD FIRST

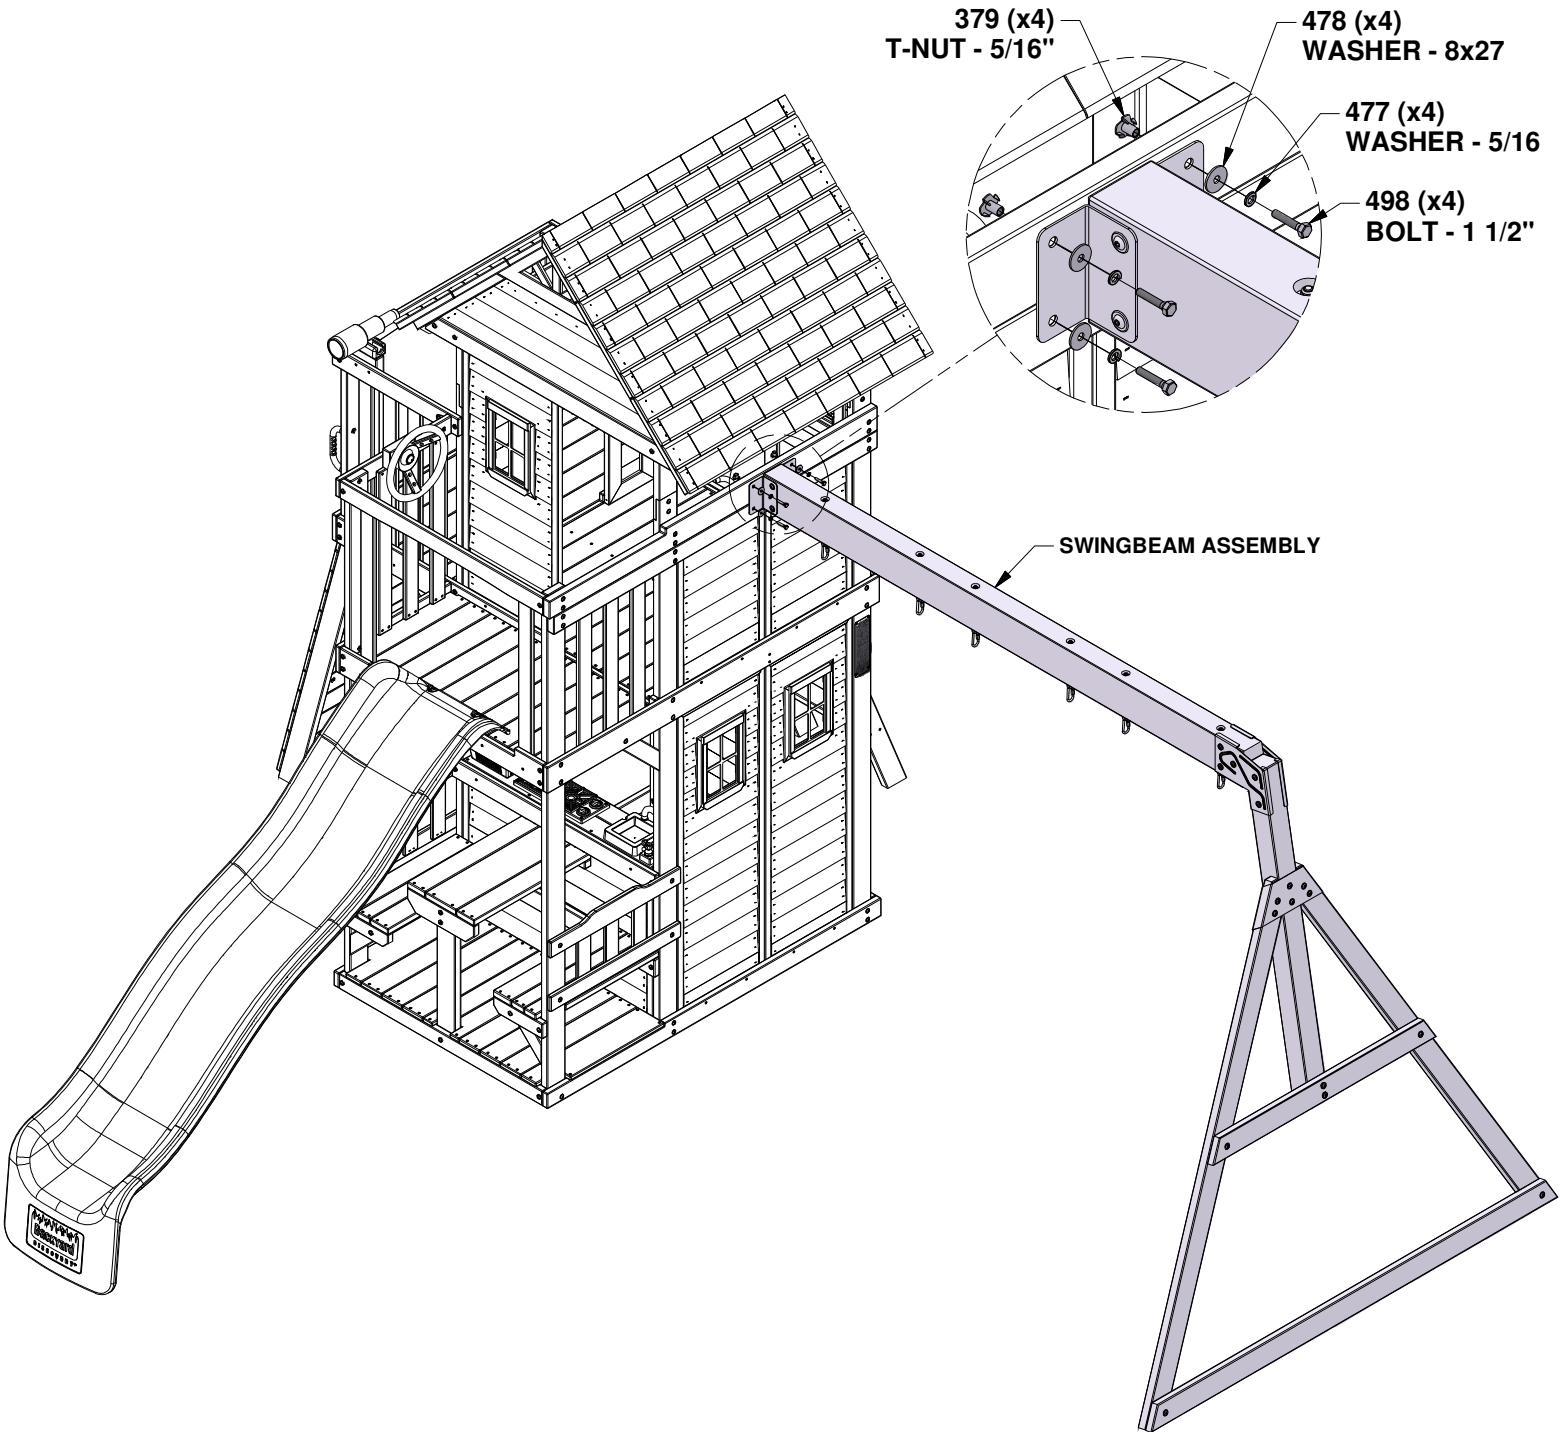

STEP 56 - FORT ASSEMBLY




A6P00054 SWING SEAT
(x2) GREEN 22"




A6P00034 TRAPEZE YELLOW
(x1)



A100069 QUICK LINK
(x6)





A100083 ROPE-CHAIN
(x2) GREEN 33"



A100087 ROPE-CHAIN
(x4) GREEN 51.25"

WHEN HANGING YOUR SWINGS, IT IS REQUIRED TO ONLY TRIM AROUND THE SPECIFIC CHAIN LOOP THAT ALLOWS THE BOTTOM OF THE SWING SEAT, (WHEN SITTING ON IT) TO BE NO LOWER THEN (35cm) 13 7/8 INCHES FROM THE GROUND.

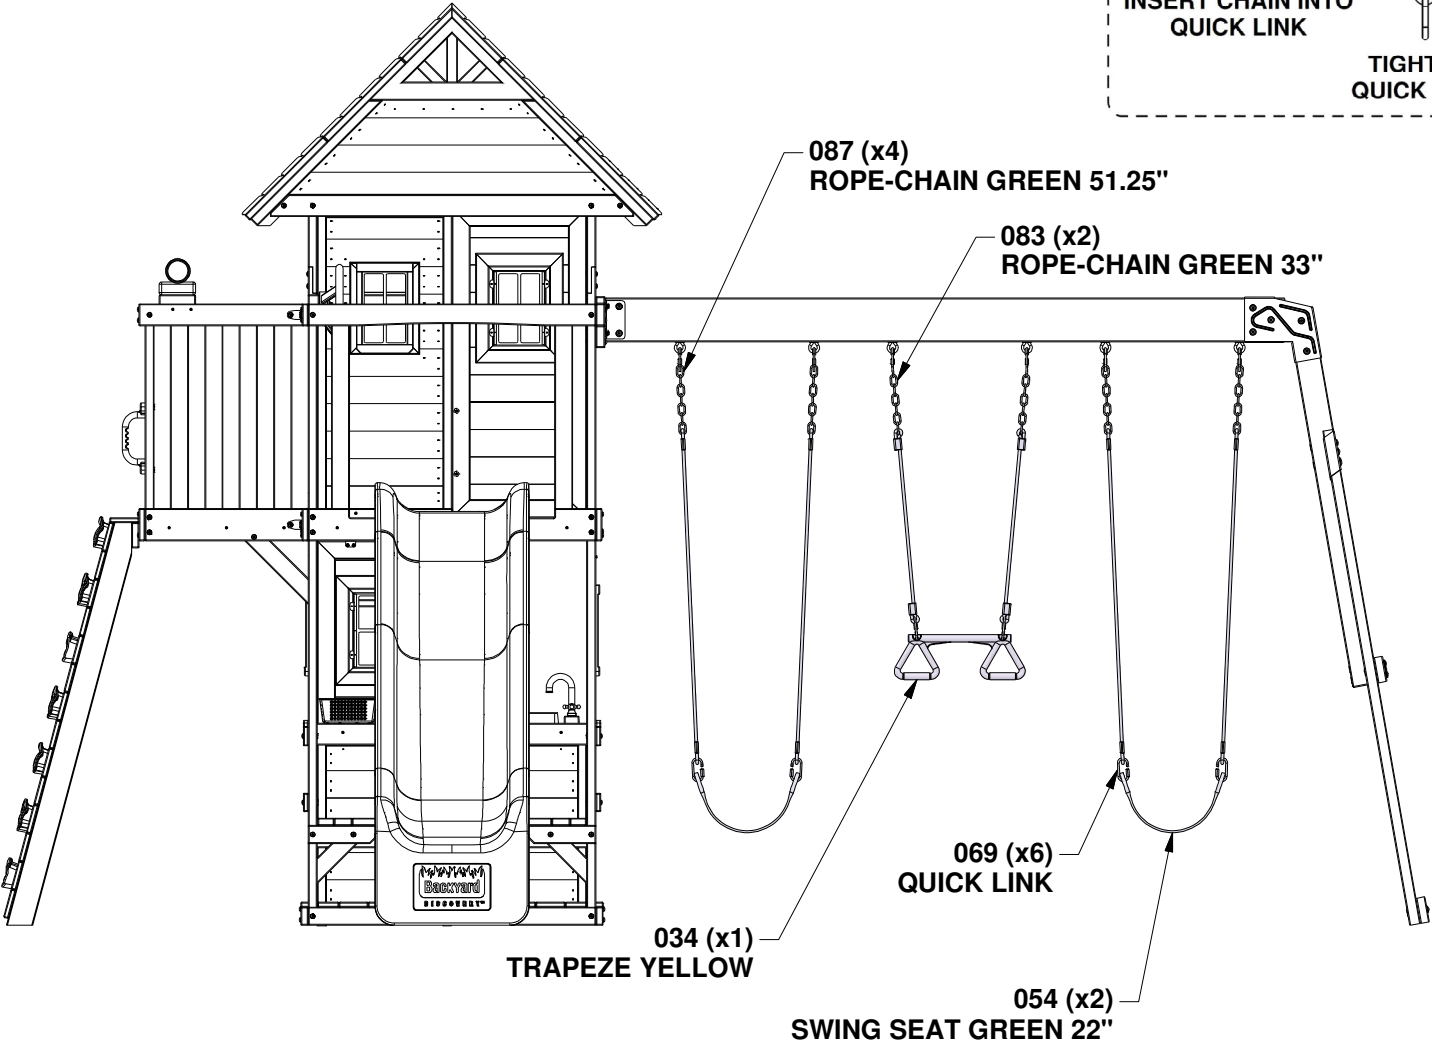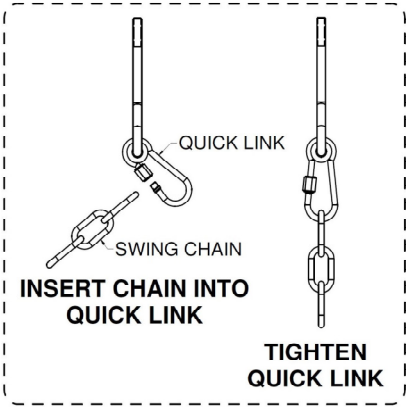


STEP 57 - FORT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H100202	SCREW PWH 8x5/8 BLK



A100164 BYD ID TAG
(x1) (LARGE)

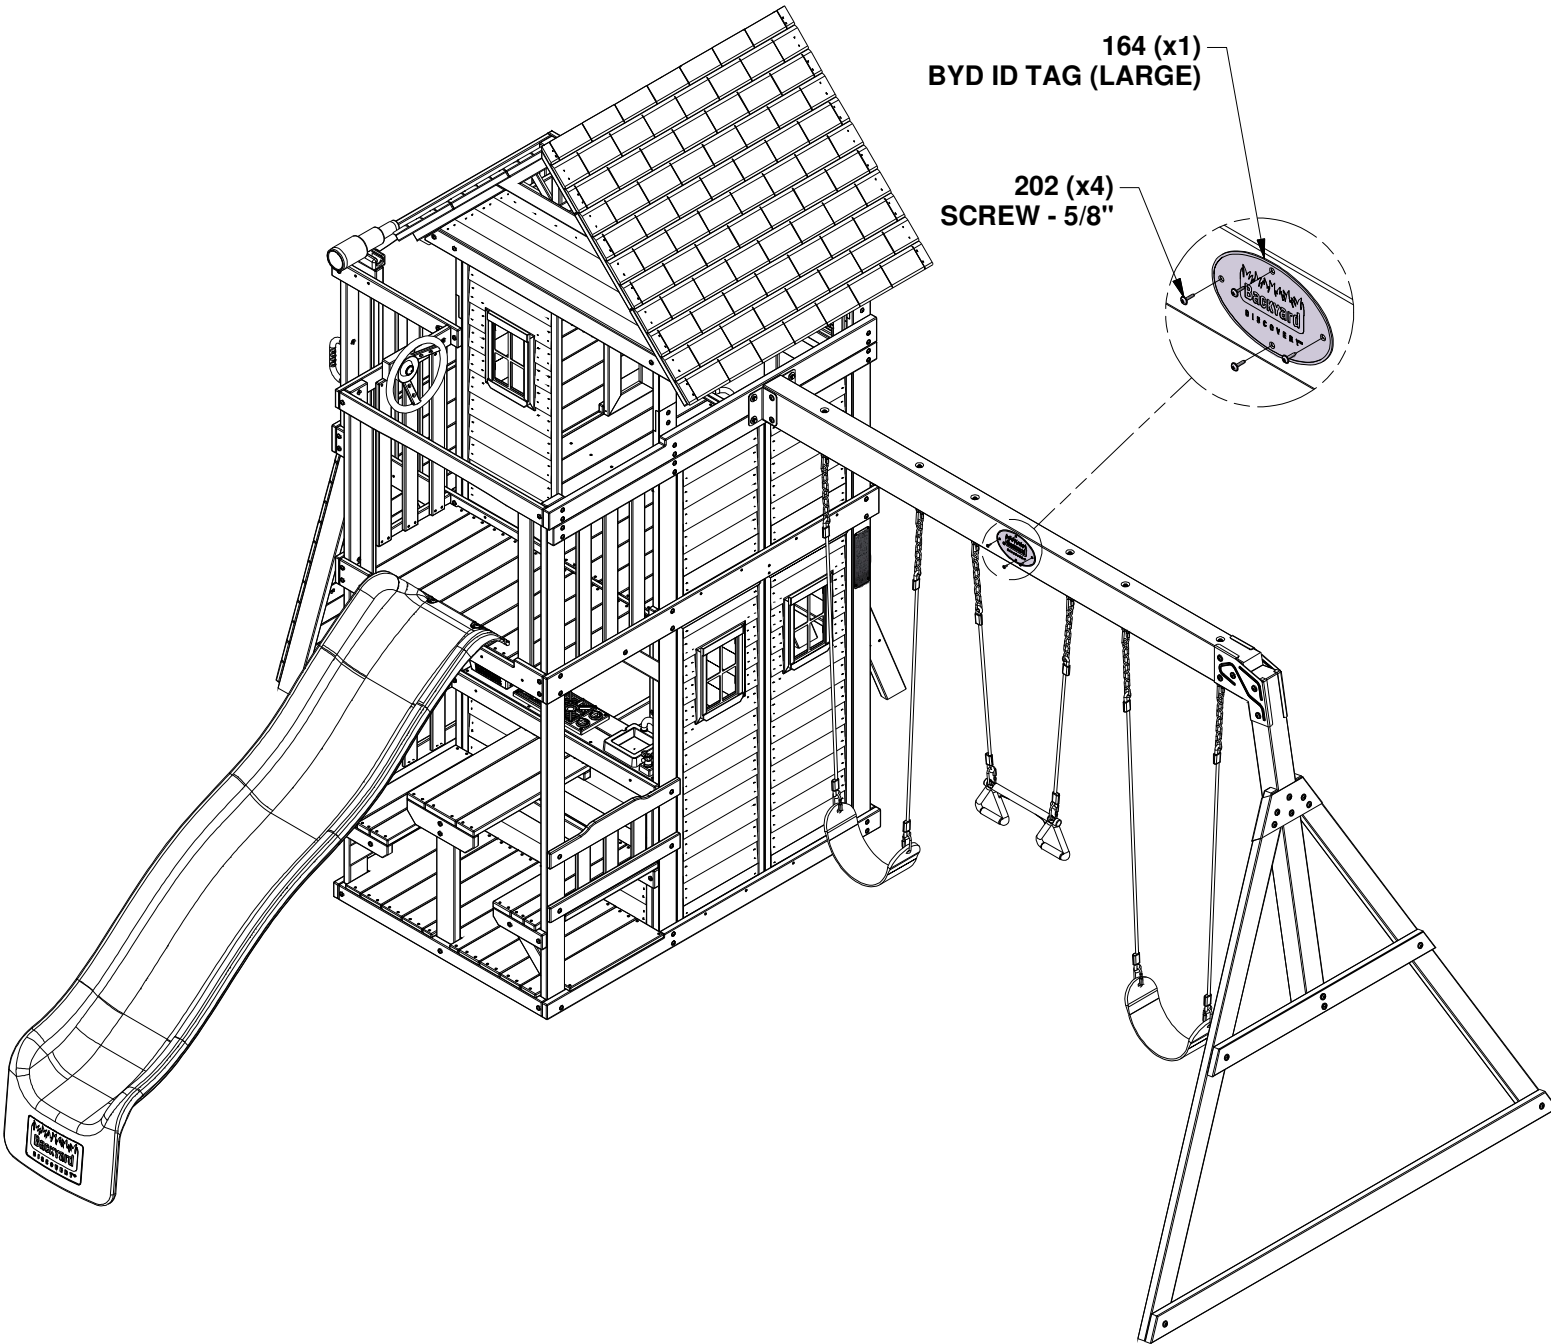

STEP 58 - FORT ASSEMBLY



QTY	PART NUMBER	DESCRIPTION
6	H100379	T-NUT 5/16 BLK
2	H100407	BOLT WH 5/16x1 1/2 BLK
4	H100459	BOLT WH 5/16x1 1/4 BLK

TWIST GROUND STAKE INTO GROUND WHERE SHOWN.

USING GROUND STAKE AS A GUIDE, DRILL (1) 3/8" [10 mm] HOLE FOR HARDWARE.

