



MANUFACTURED BY:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Hague, 2595 WP, Netherlands Phone: 0800-567-8990

MAPLE LEAF PLAYHOUSE

Model # 2403048

The assembly manual must be retained
since it contains important information



WARNING
Adult Assembly Required.

*Not suitable for children under 36 months due to small parts.
FOR DOMESTIC USE ONLY. INTENDED FOR OUTDOOR USE.*

CAN ICES-003 (B)/NMB-003(B)



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your set, or to order replacement parts
Para obtener instrucciones en español, visite www.backyarddiscovery.com



Selecting the correct location for your play product is important for your children's safety and the product's longevity

- The safe play area refers to a zone extending 6'-7" (2006 mm) beyond the play product on all sides, including the space above the play product.


SAFE PLAY AREA DIAGRAM

Ground Dimension

3'-5 7/8" (1065 mm) x 3'-10 5/8" (1186 mm) x 4'-7 3/8" (1405 mm)

Safe Play Area

16'-7 7/8" (5078 mm) x 17'-5/8" (5199 mm)

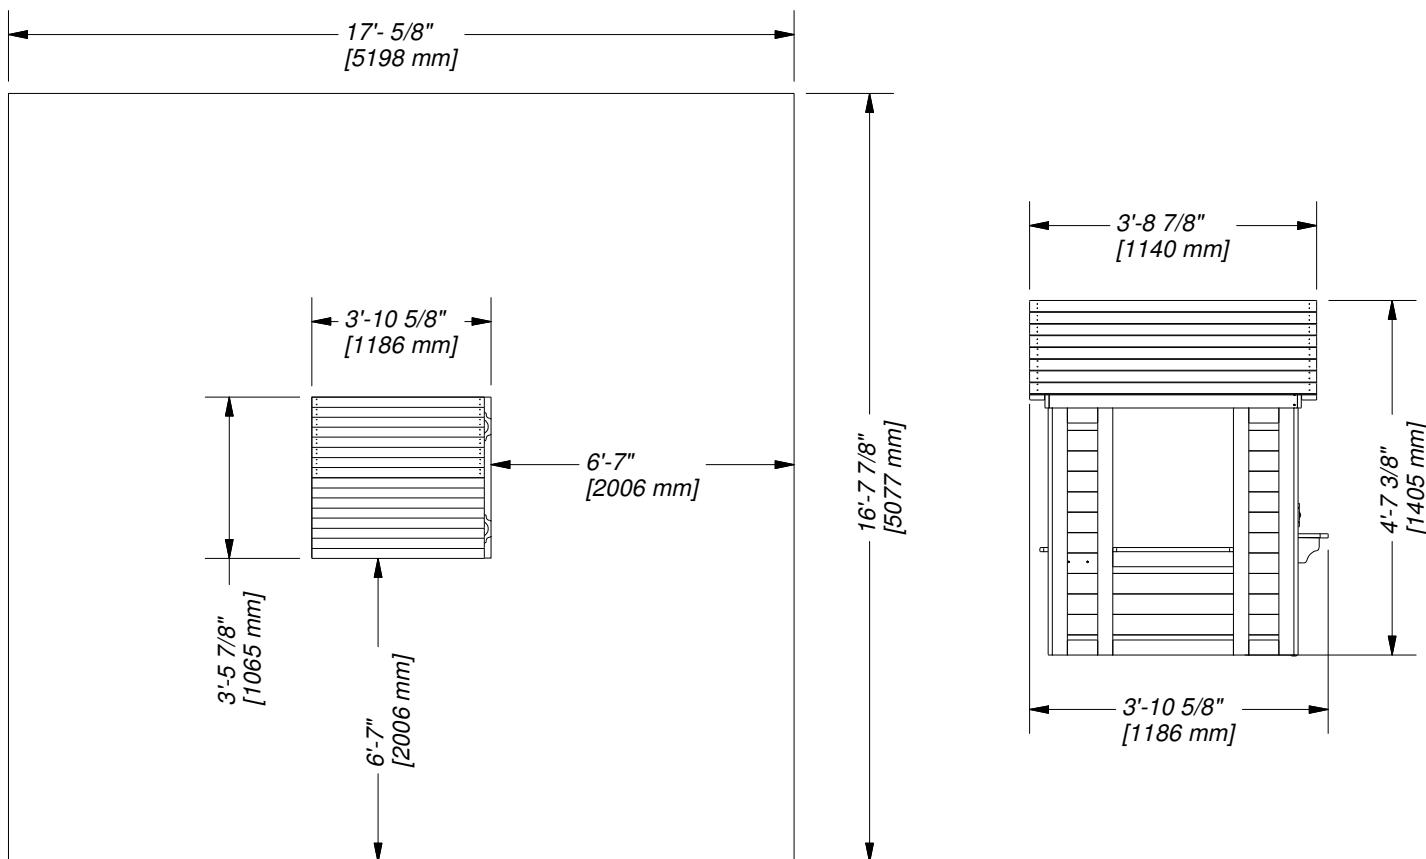

SAFE PLAY HEIGHT: 11'-2 3/8" [3400 mm]
MAXIMUM FALL HEIGHT: 4' 7-3/8" [1400 mm]

General Information:

Your set has been designed and engineered for children only and for residential use only. A maximum of 5 children is recommended for this playhouse.



Wood Components (Not to Scale)



D1 | COUNTER TOP SUPPORT - W4L13444
(x1) | 1 3/8" x 4 3/8" x 5 7/8" (36x112x150)




N01 | SIDE WINDOW SHELF - W4L19914
(x2) | 5/8" x 2 3/8" x 18 7/8" (16x60x479)



J1 | COUNTER TOP SUPPORT - W4L13445
(x2) | 1" x 2 3/8" x 5 7/8" (24x60x150)



N02 | REAR WINDOW SHELF - W4L19915
(x1) | 5/8" x 2 3/8" x 19 1/8" (16x60x485)

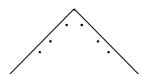

K1 | TRIANGLE SUNBURST - W4L19911
(x2) | 5/8" x 5 1/4" x 10 3/8" (16x134x265)



N3 | DOOR STOP - W4L13449
(x1) | 5/8" x 2 3/8" x 3 7/8" (16x60x100)



L1 | GABLE BOARD - W4L13447
(x4) | 5/8" x 4 3/8" x 25 3/8" (16x112x643)



N4 | TIE STRAP - W4L13443
(x8) | 5/8" x 2" x 3 1/8" (16x50x80)




M1 | COUNTER TOP - W4L13446
(x4) | 5/8" x 3 3/8" x 18 1/2" (16x86x469)




N5 | SUNBURST LEG - W4L19912
(x2) | 5/8" x 2 3/8" x 10 1/4" (16x60x260)




N6 | SUNBURST LEG - W4L19913
(x4) | 5/8" x 2 3/8" x 8 1/4" (16x60x210)

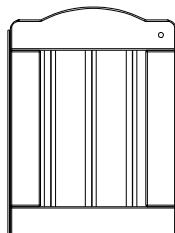

DP1 | DOOR ASSEMBLY - W2A04233
(x1) | 1 1/4" x 17 15/16" x 13 1/8" (32x456x334)

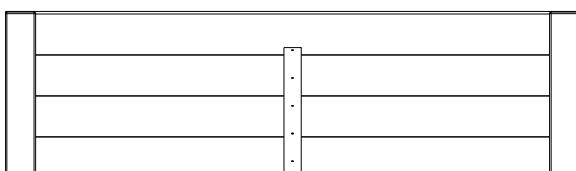


RP1 | LOWER ROOF PANEL - W2A04234
(x2) | 1 3/8" x 13" x 44 7/8" (35x329x1140)

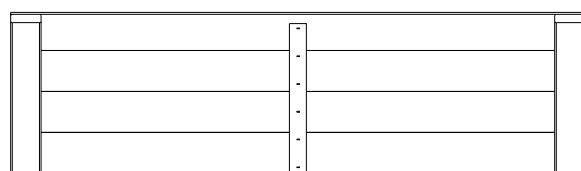


RP2 | UPPER ROOF PANEL - W2A04230
(x2) | 1 3/8" x 12 3/4" x 44 7/8" (35x324x1140)




Wood Components (Not to Scale)

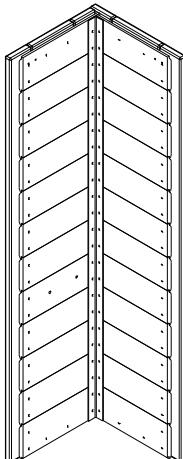


WP3 | LEFT REAR CORNER PANEL - W2A02993
(x1) | 10" x 38 9/16" x 10 1/16" (254x980x256)

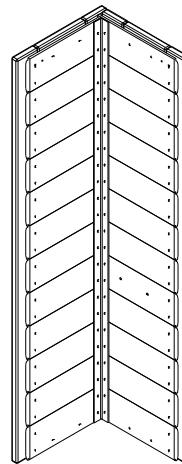

WP4 | RIGHT REAR CORNER PANEL - W2A02994
(x1) | 10" x 38 9/16" x 10 1/16" (254x980x256)

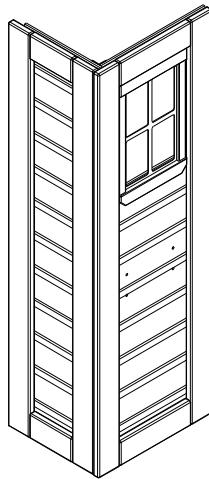


WP1 | LEFT FRONT CORNER PANEL - W2A04231
(x1) | 10 1/16" x 38 9/16" x 12 5/8" (256x980x320)

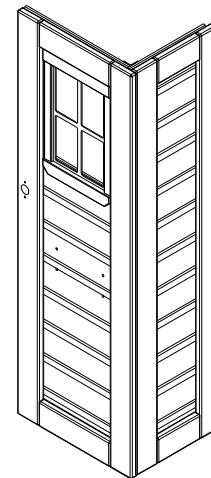


WP2 | RIGHT FRONT CORNER PANEL - W2A04232
(x1) | 10 1/16" x 38 9/16" x 12 5/8" (256x980x320)



WP5 | LOWER CENTER WALL - W2A02978
(x2) | 1 1/2" x 6 5/8" x 20 7/8" (38x167x530)

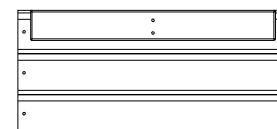


WP7 | UPPER REAR CENTER WALL - W2A02989
(x1) | 1 1/2" x 21 1/8" x 9 3/4" (38x536x248)

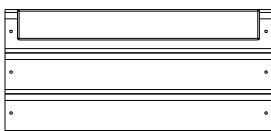

WP6 | UPPER CENTER WALL - W2A02979
(x2) | 1 1/2" x 9 3/4" x 20 7/8" (38x248x530)




WP8 | LOWER REAR CENTER WALL - W2A02990
(x1) | 1 1/2" x 6 5/8" x 21 1/8" (38x167x536)

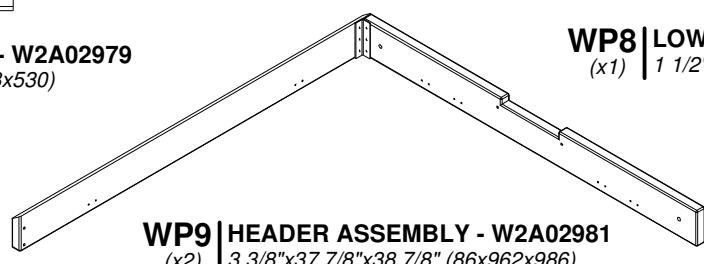


WP9 | HEADER ASSEMBLY - W2A02981
(x2) | 3 3/8" x 37 7/8" x 38 7/8" (86x962x986)




Hardware Components

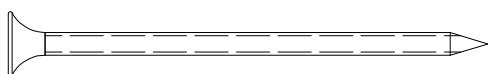

H100090 | SCREW PFH
(x6) | 8x2 1/2"

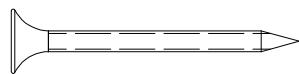


H100086 | SCREW PFH
(x22) | 8x1 1/2

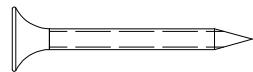

H100087 | SCREW PFH
(x53) | 8x1 1/4




H100088 | SCREW PFH
(x30) | 8x1 1/8

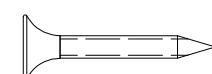


H100085 | SCREW PFH
(x38) | 8x1




H100124 | SCREW PFH
(x2) | 8 x 1/2

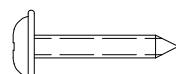


H100070 | SCREW PWH
(x8) | 8x3/4

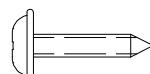


H100128 | SCREW PWH
(x2) | 8x5/8

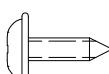


H100361 | SCREW PWH
(x2) | 8x7/16

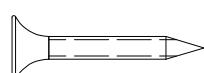


H100537 | SCREW PFH SD
(x2) | 8x1

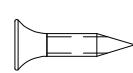


H100624 | SCREW PFH BLK
(x2) | 6x5/8

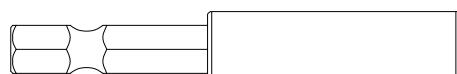


H101100 | MAGNETIC DRIVER
(x1)

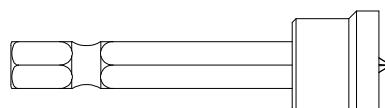

H100764 | SCREW SETTER
(x1)

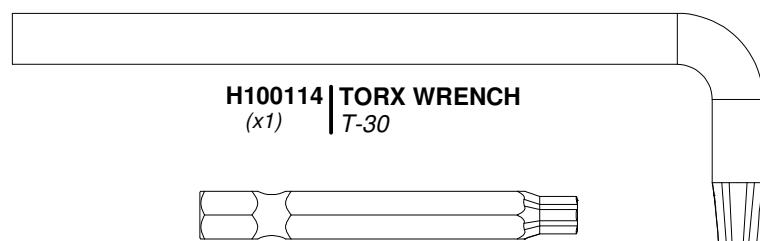


H100114 | TORX WRENCH
(x1) | T-30

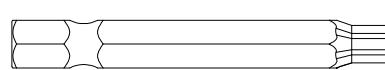


H100147 | TORX BIT
(x1) | T-30




Accessory Components (Not to Scale)

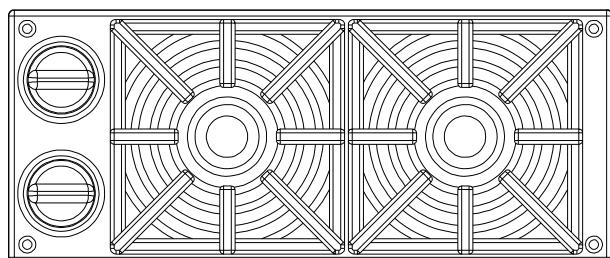


A6P00025 | STOVE KIT
(x1)

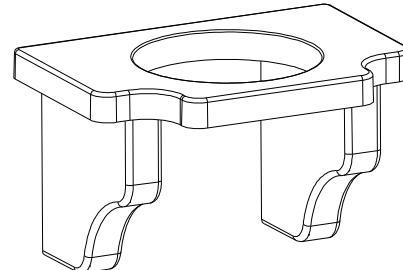


A6P00023 | FLOWER POT HOLDER
(x2)

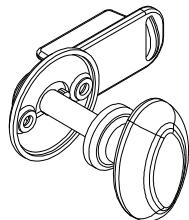

A6P00020 | KNOB KIT
(x1)

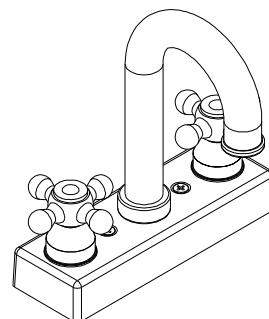


A6P00024 | FAUCET KIT
(x1)

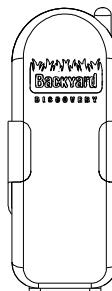


A100132 | PHONE KIT
(x1)




BE SURE TO WASH ALL PLASTIC TOYS BEFORE USE.

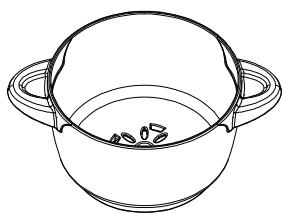


A6P00336 | BOIL POT
(x1)

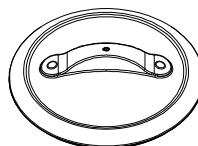


A6P00337 | POT/PAN LID
(x1)

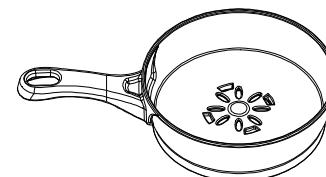

A6P00338 | FRY PAN
(x1)

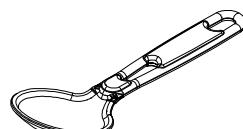

A6P00340 | LADLE
(x1)

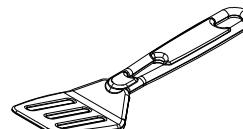


A6P00339 | SPATULA
(x1)



Accessory Components (Not to Scale)




A4M00517 | **METAL TIE STRAP**
(x1)

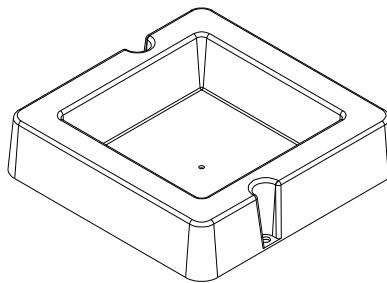


A6P00032 | **SURFACE MOUNT BASIN**
(x1)




A4M00528 | **BYD ID TAG (MEDIUM) AGES 2-10**
(x1)

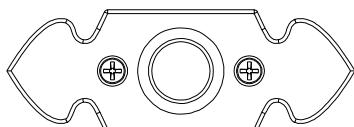

A6P00290 | **DOOR BELL PLATE**
(x1)

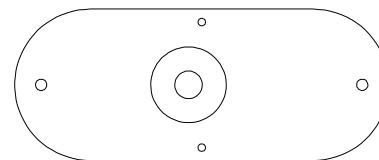

A100174 | **DOOR BELL**
(x1)

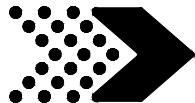

STEP 1


PRE-ASSEMBLY - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

WOOD PARTS:

- *Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).*
- *If there are multiple boards with the same stamped number, stack those pieces together.*
- *Stamps can be found on the flat surface of the boards or on the end of the boards.*
- *Allow yourself plenty of room - the wood pieces can take up a significant amount of space.*


NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.

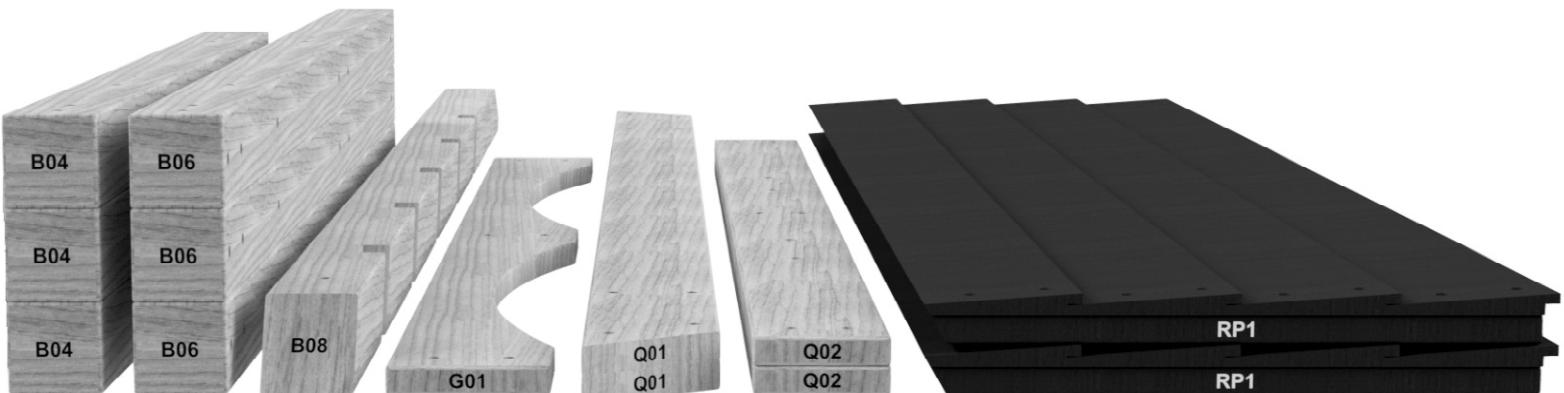

HARDWARE PARTS:

- *We recommend that you have a separate table to organize the hardware.*
- *Hardware bags are printed with a seven-digit, alpha-numeric part number.*
- *You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).*
- *During assembly you only need to reference the last four digits of the number.*



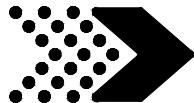

STEP 2

PRE-ASSEMBLY - TOOLS REQUIRED



Cordless Drill or
Electric Drill



1/8", 3/16", 3/8" & 7/16" Drill Bits



Phillips Screw Driver



Open End Wrenches 1/2" & 9/16"




3/8" Drive Ratchet, 1/2" &
9/16" STD Sockets 1/2" & 9/16" Deep Sockets




Claw Hammer



Rubber Mallet - Optional

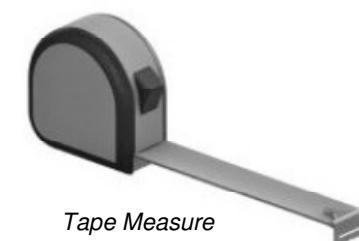

Tape Measure

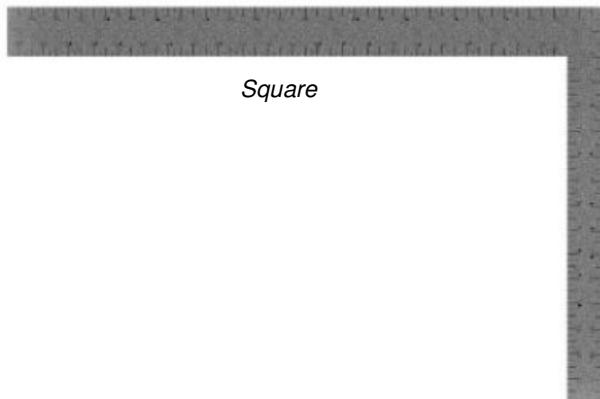


Square




Level 24"




STEP 1

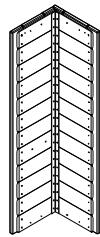


WP3 | LEFT REAR CORNER PANEL - W2A02993
(x1) | 10"x38 9/16"x10 1/16" (254x980x256)

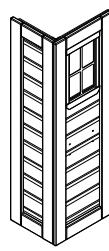

WP1 | LEFT FRONT CORNER PANEL - W2A04231
(x1) | 10 1/16"x38 9/16"x12 5/8" (256x980x320)

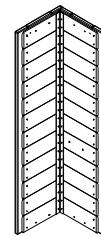

WP4 | RIGHT REAR CORNER PANEL - W2A02994
(x1) | 10"x38 9/16"x10 1/16" (254x980x256)

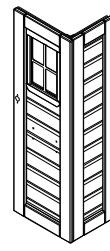


WP2 | RIGHT FRONT CORNER PANEL - W2A04232
(x1) | 10 1/16"x38 9/16"x12 5/8" (256x980x320)




NOTE:

POSITION WALL PANELS AS SHOWN BELOW. VERIFY THE CORRECT PANEL PLACEMENT BY CHECKING THE HOLE LOCATIONS AS SHOWN BELOW.

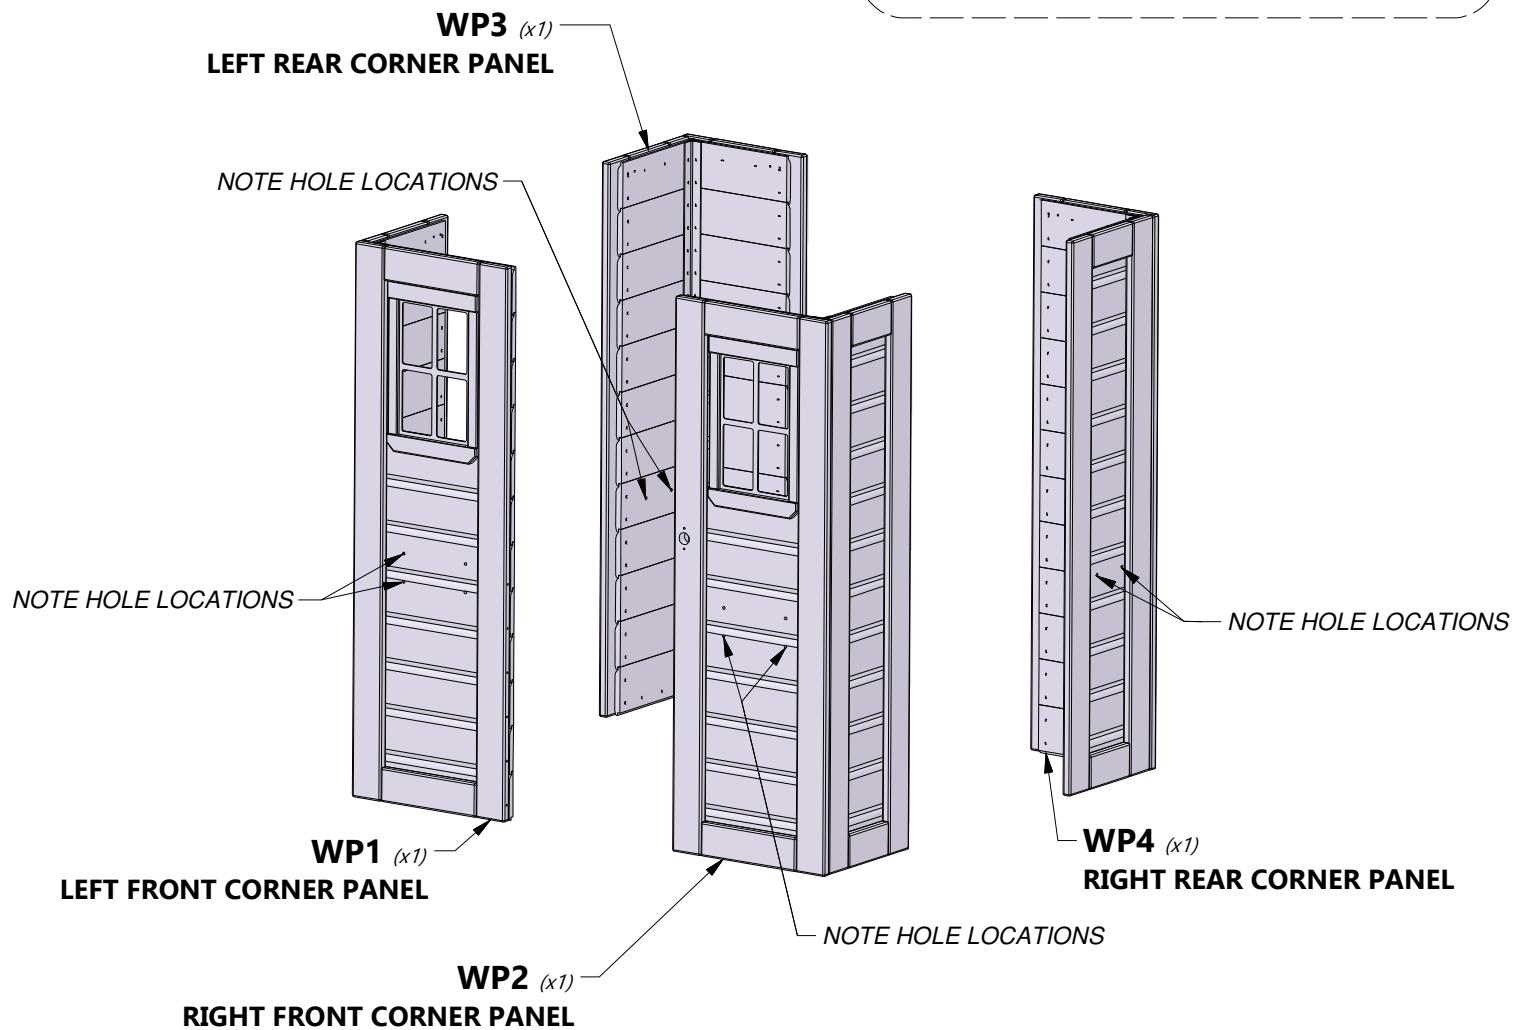





STEP 2

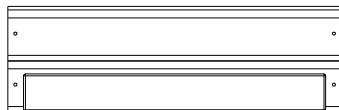


WP5 | LOWER CENTER WALL - W2A02978
(x1) | 1 1/2" x 6 5/8" x 20 7/8" (38x167x530)

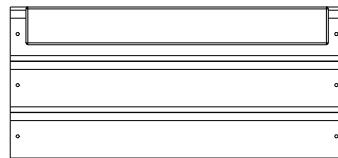


WP6 | UPPER CENTER WALL - W2A02979
(x1) | 1 1/2" x 9 3/4" x 20 7/8" (38x248x530)

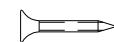

H100085 | SCREW PFH
(x10) | 8x1

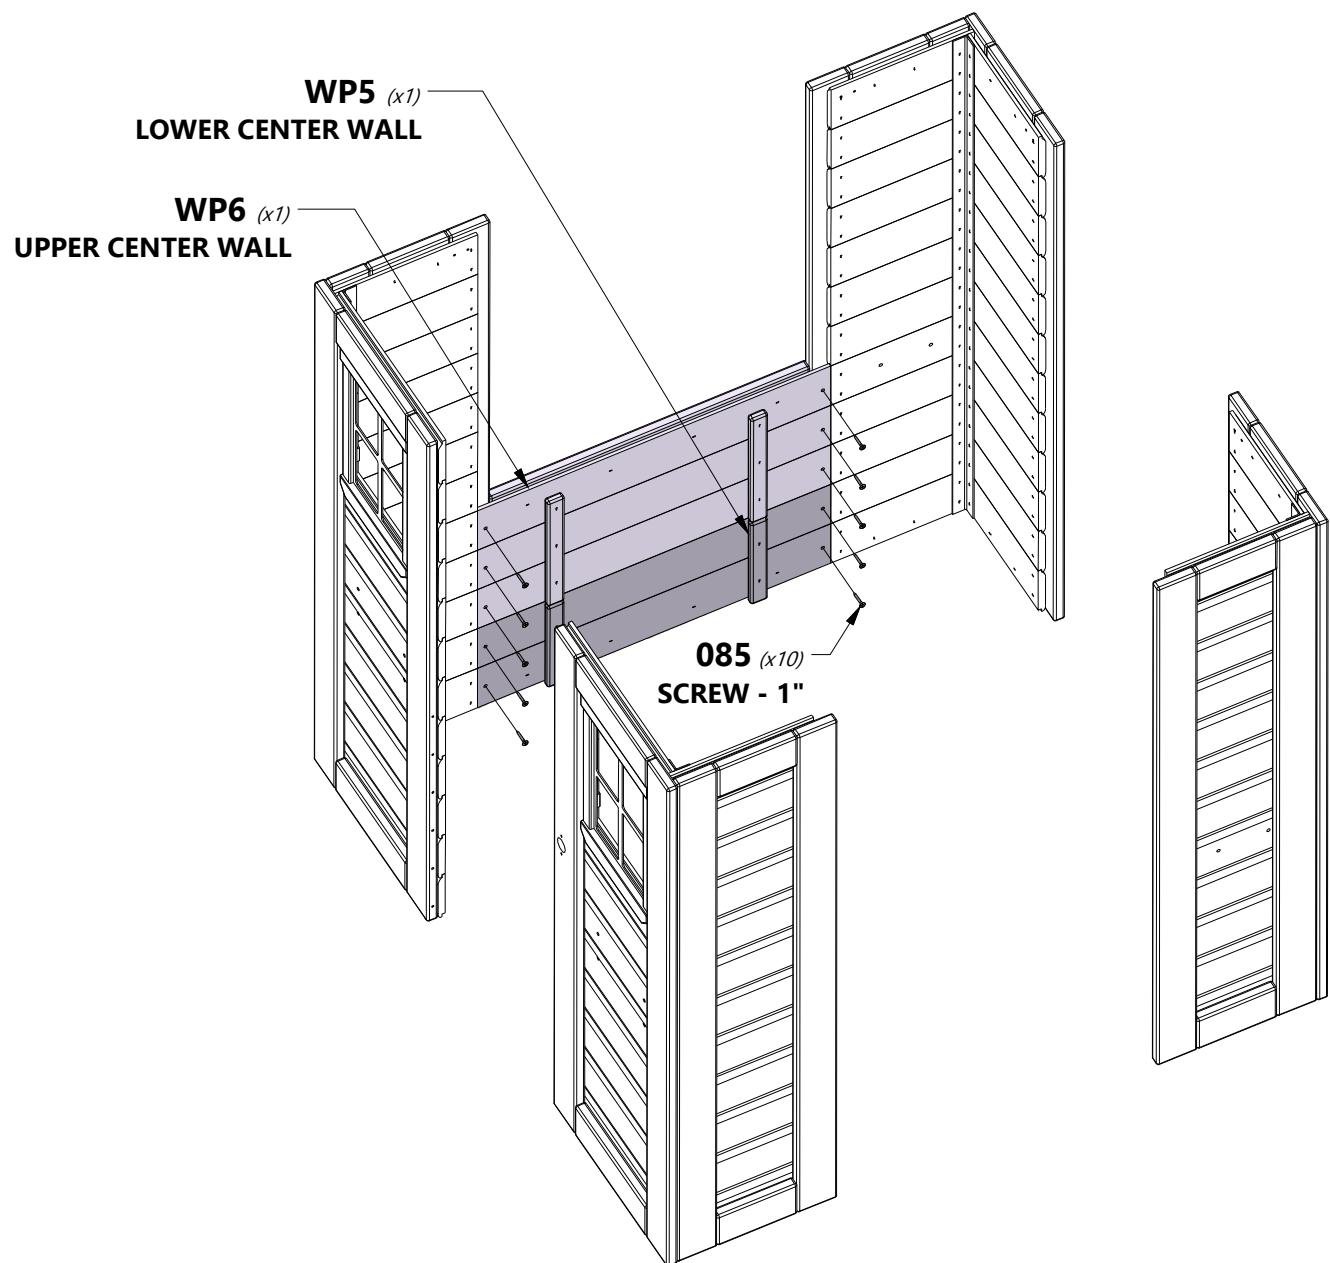

STEP 3

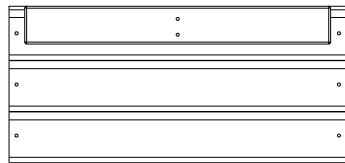


WP7 | **UPPER REAR CENTER WALL - W2A02989**
(x1) | 1 1/2" x 21 1/8" x 9 3/4" (38x536x248)



WP8 | **LOWER REAR CENTER WALL - W2A02990**
(x1) | 1 1/2" x 6 5/8" x 21 1/8" (38x167x536)




H100085 | **SCREW PFH**
(x10) | 8x1

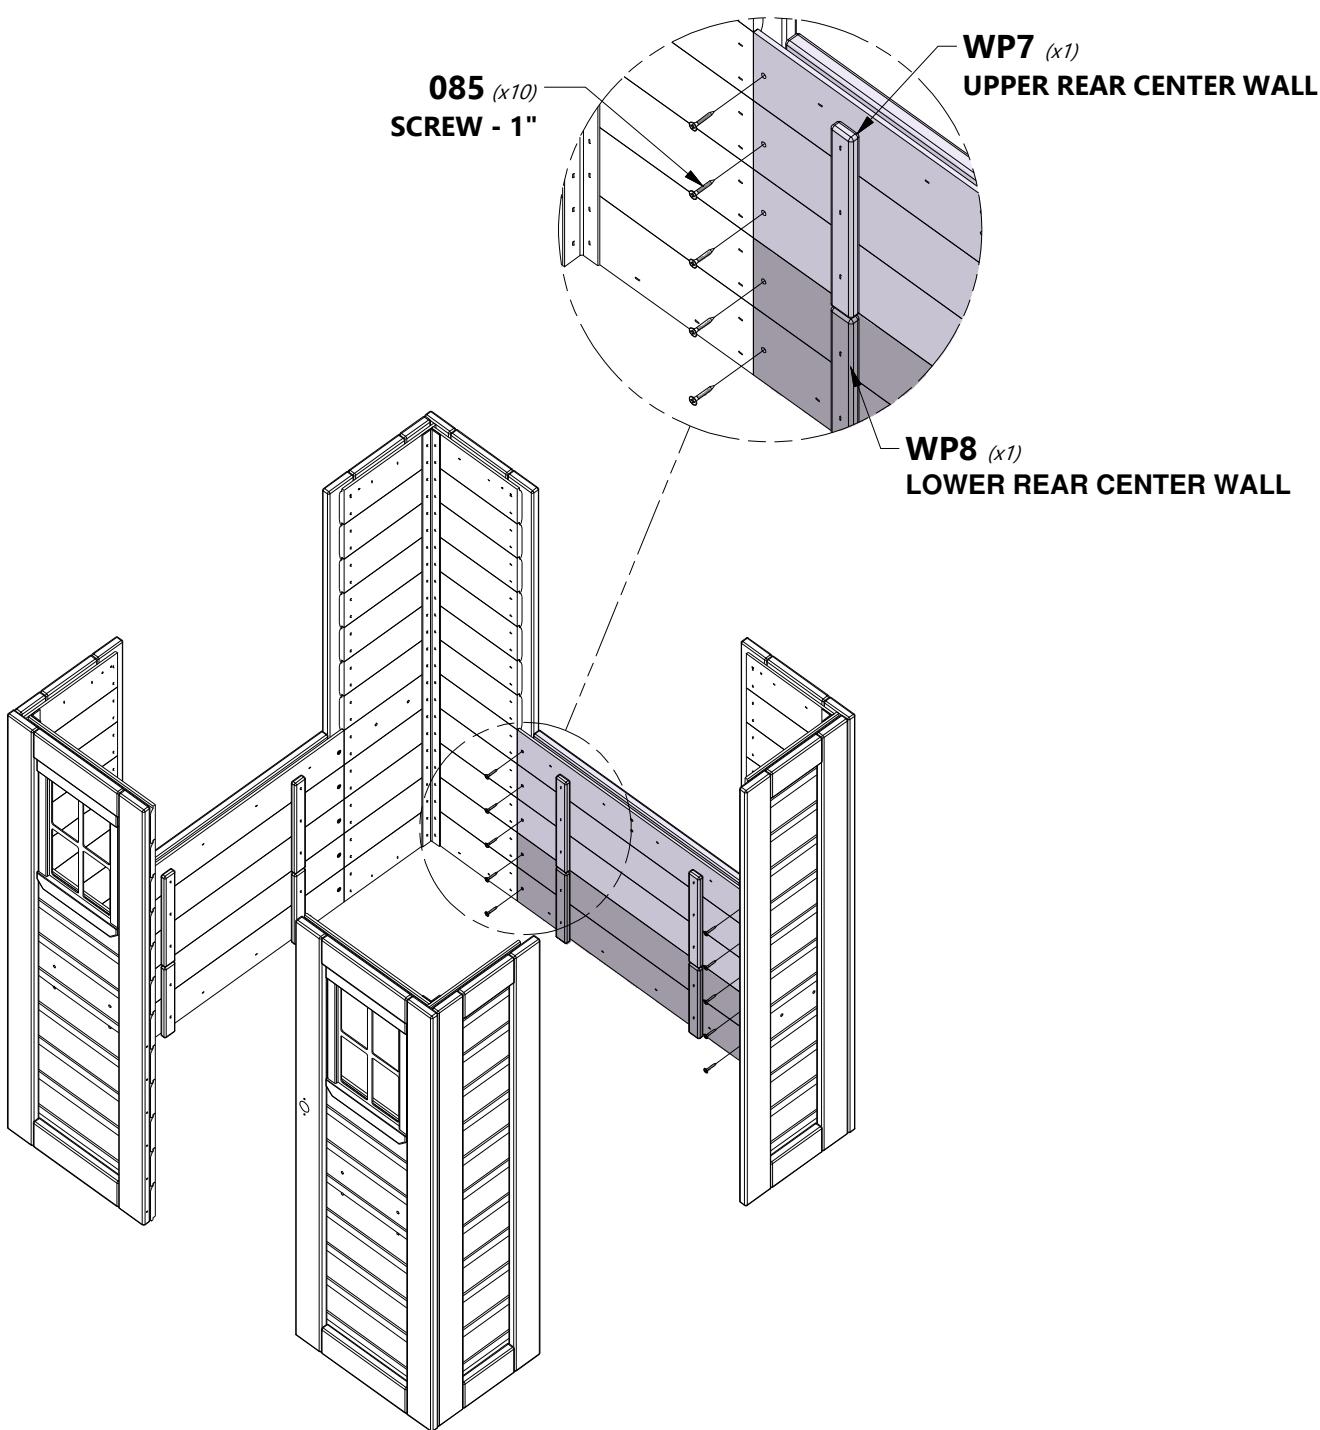




STEP 4

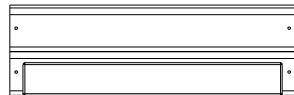


WP5 | LOWER CENTER WALL - W2A02978
(x1) | 1 1/2" x 6 5/8" x 20 7/8" (38x167x530)

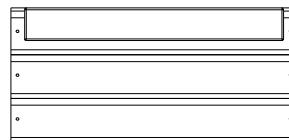

WP6 | UPPER CENTER WALL - W2A02979
(x1) | 1 1/2" x 9 3/4" x 20 7/8" (38x248x530)




H100085 | SCREW PFH
(x10) | 8x1

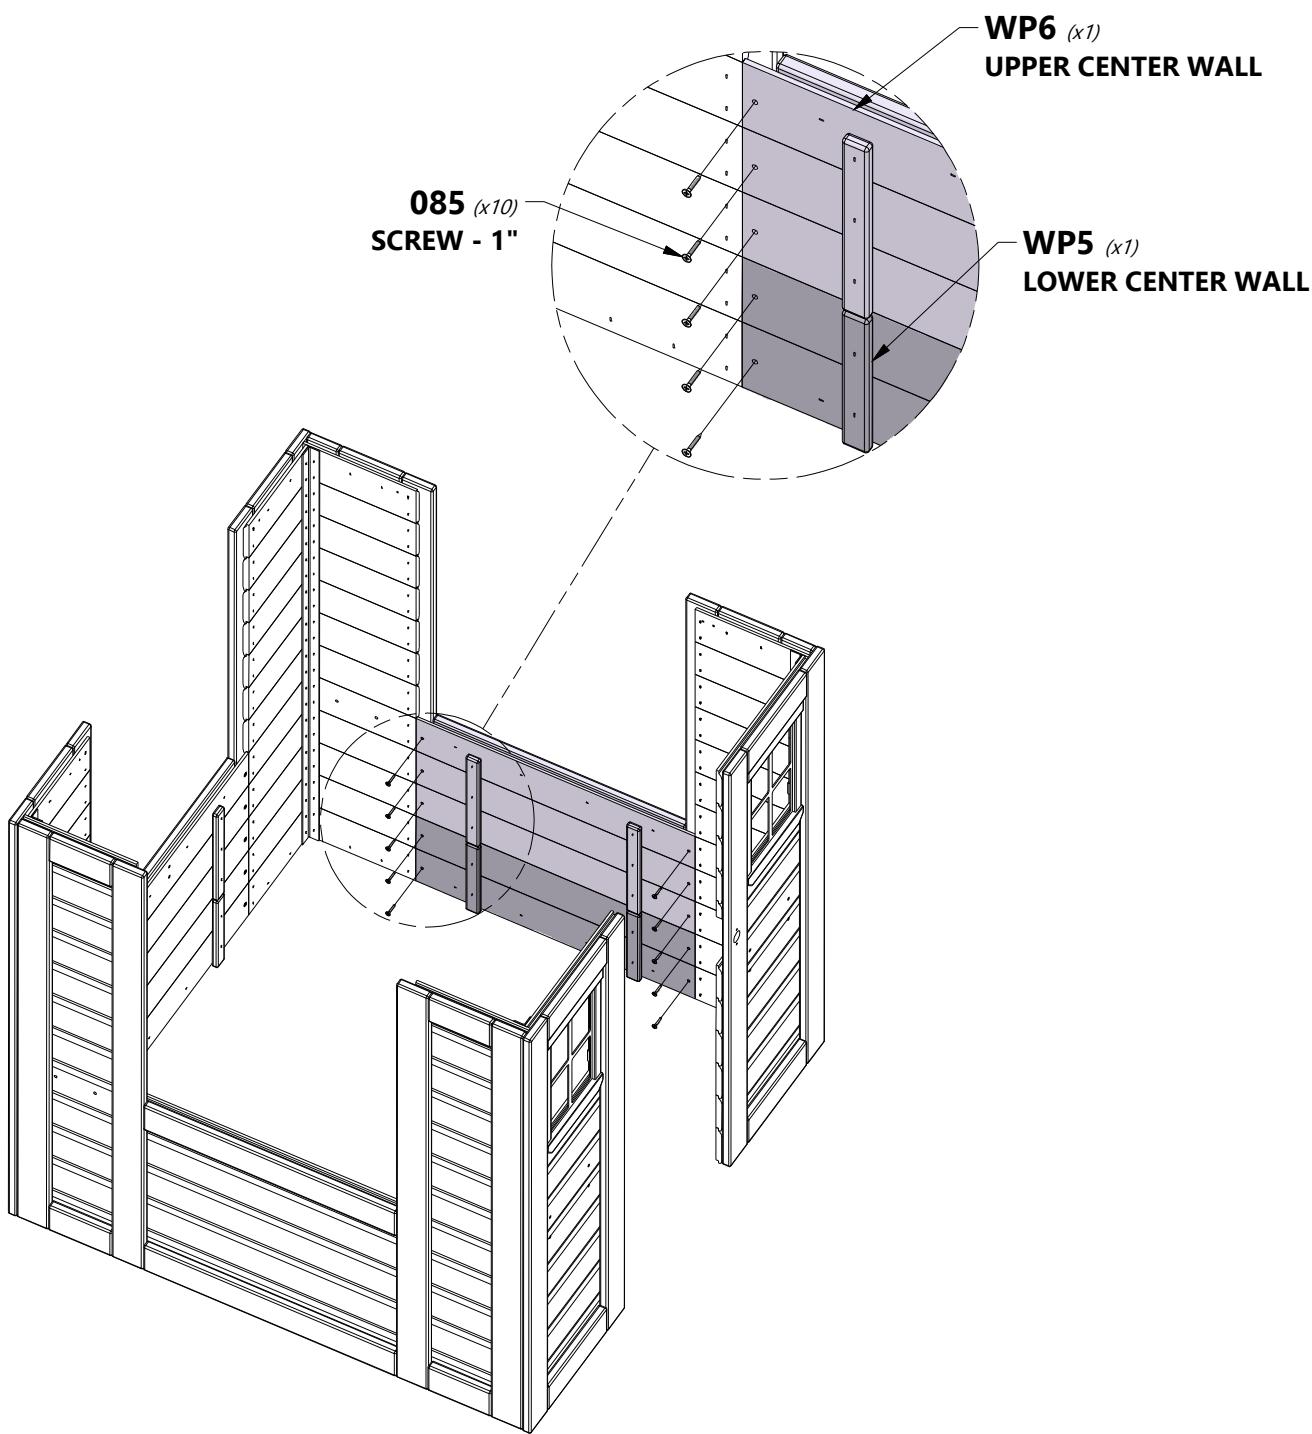






STEP 5

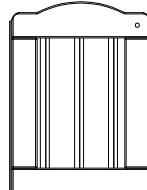

DP1 | DOOR ASSEMBLY - W2A04233
(x1) | 1 1/4" x 17 15/16" x 13 1/8" (32x456x334)



H100088 | SCREW PFH
(x6) | 8x1 1/8"

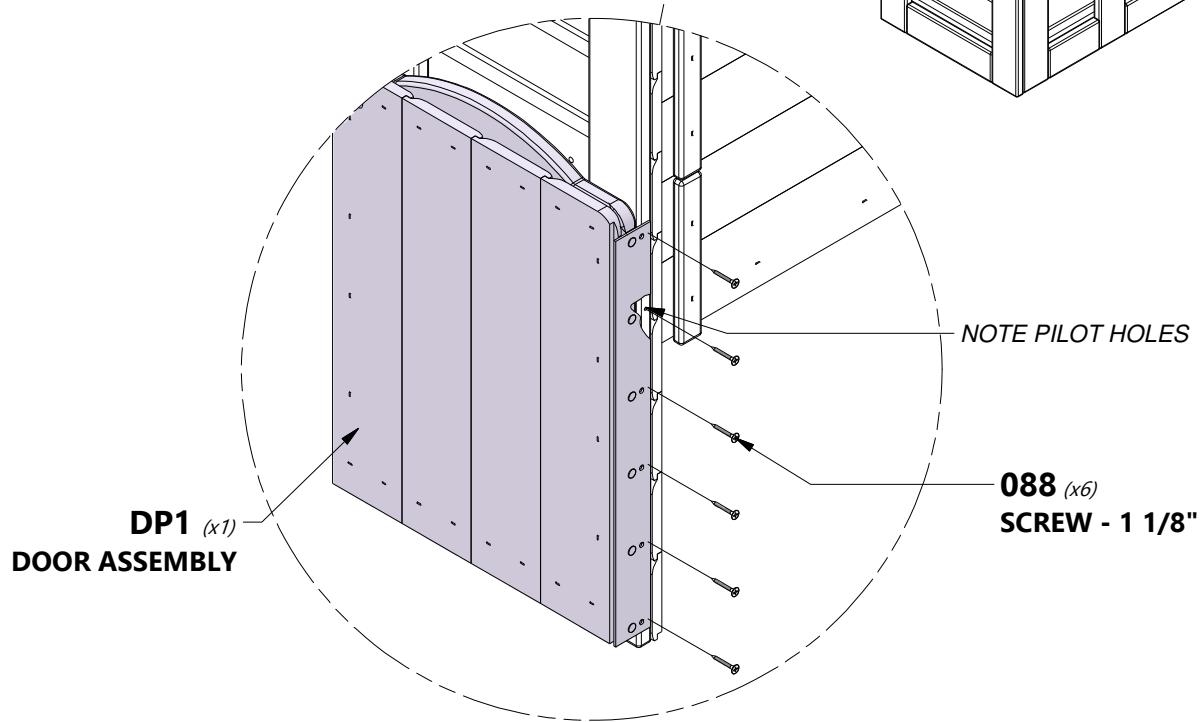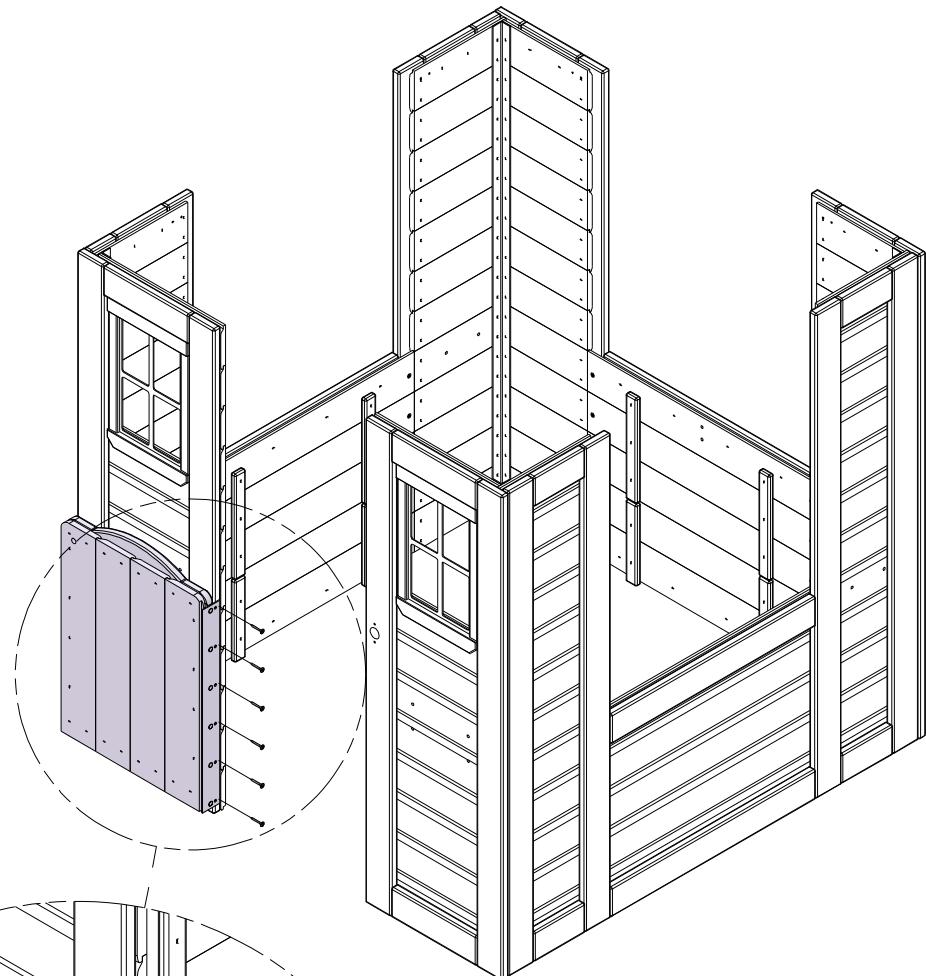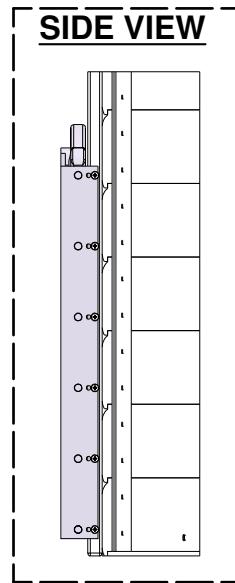




STEP 6



A4M00517 | METAL TIE STRAP
(x1)





H100070 | SCREW PWH
(x8) 8x3/4

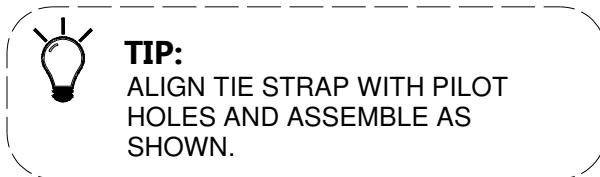


TIP:

ALIGN TIE STRAP WITH PILOT
HOLES AND ASSEMBLE AS
SHOWN.

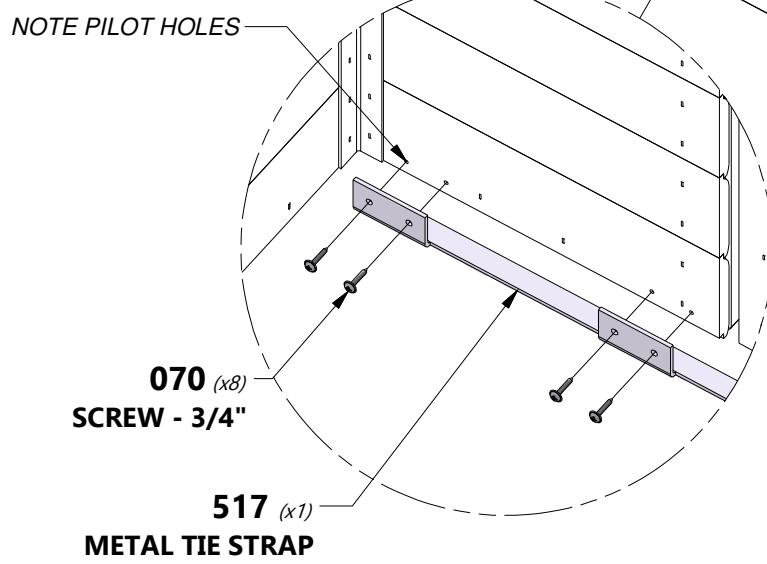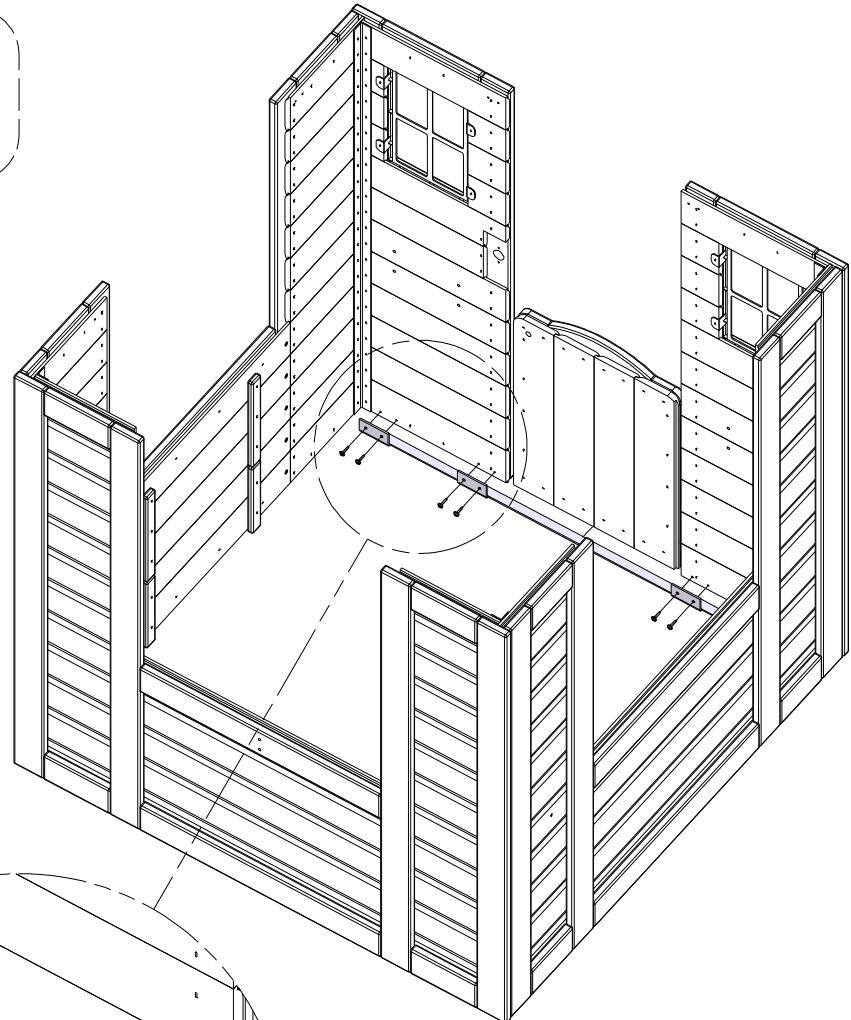




STEP 7

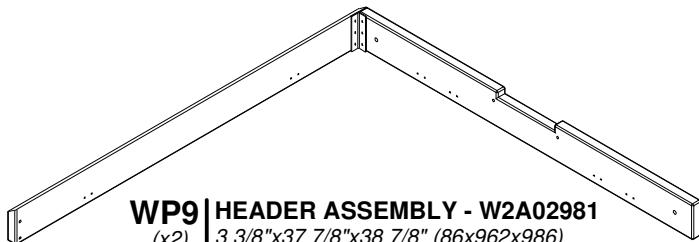


WP9 | HEADER ASSEMBLY - W2A02981
(x2) 3 3/8" x 37 7/8" x 38 7/8" (86x962x986)

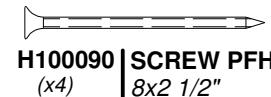


NOTE:

REST HEADER ASSEMBLIES ON THE WALL PANELS AND ASSEMBLY AS SHOWN.

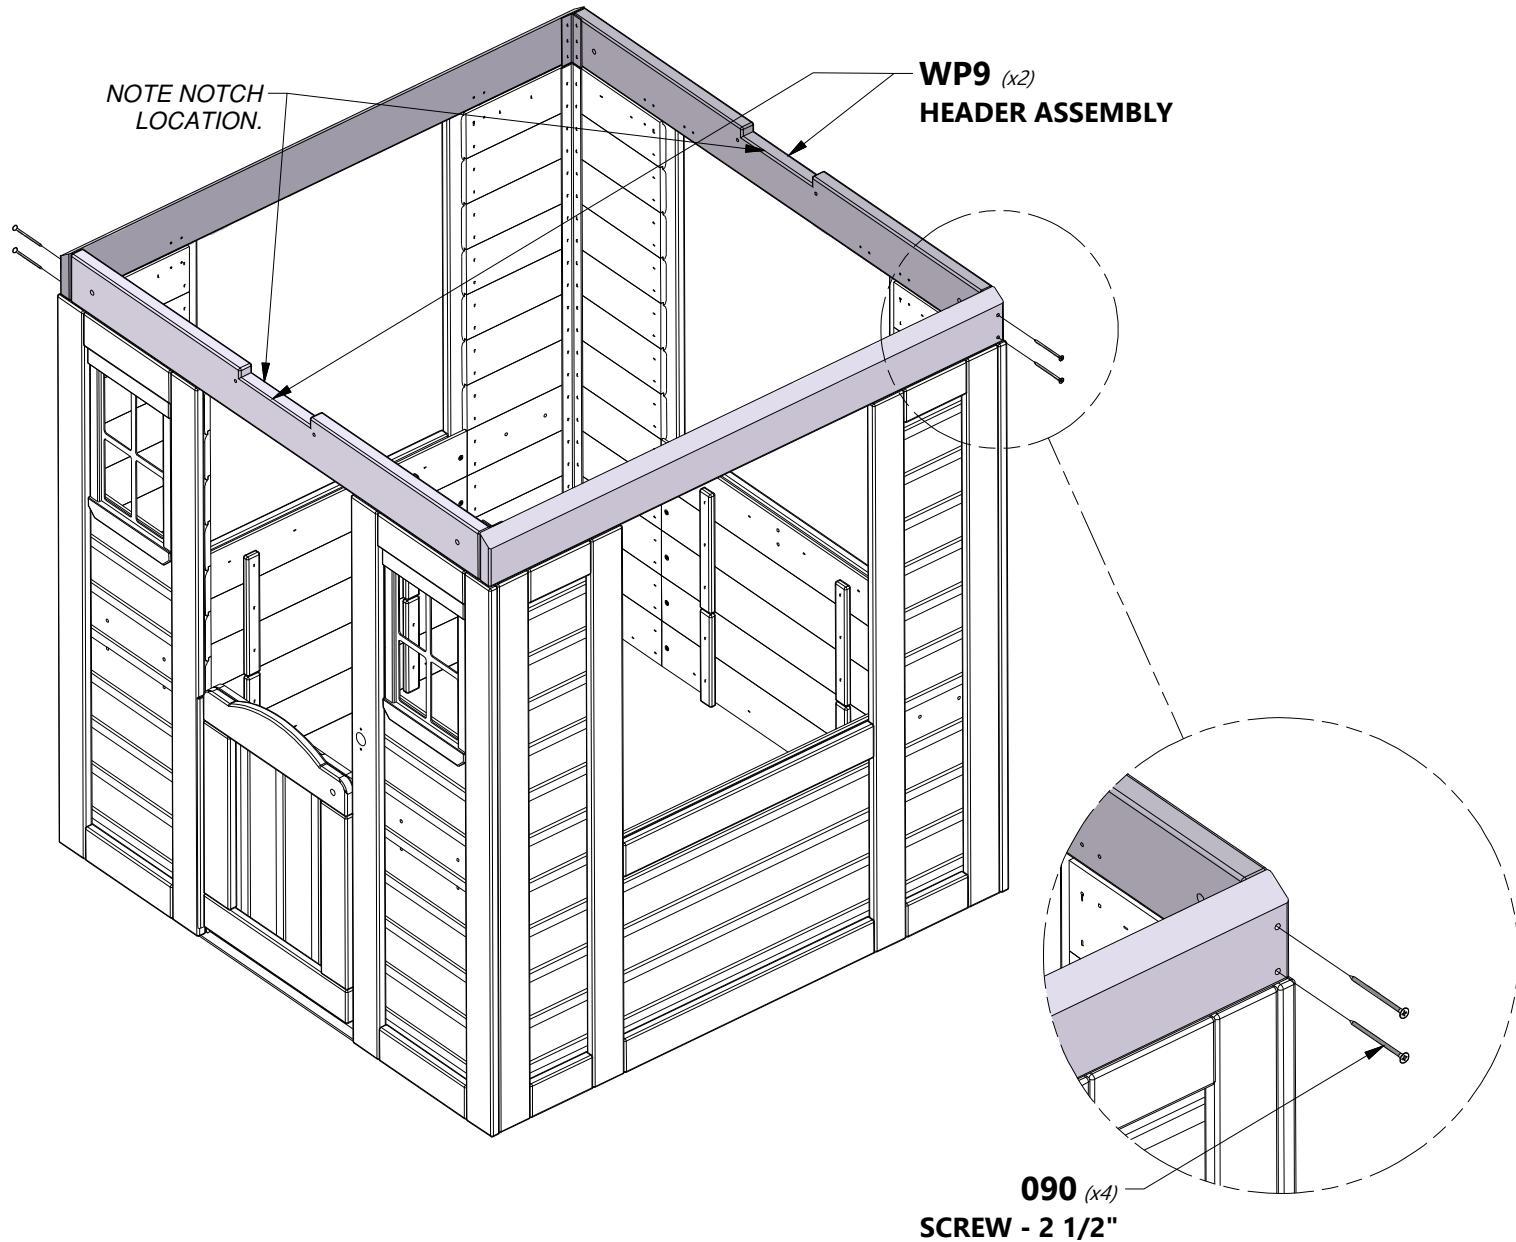




STEP 8

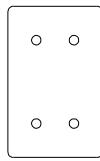


N4 | TIE STRAP - W4L13443
(x8) | 5/8" x 2" x 3 1/8" (16x50x80)

H100087 | SCREW PFH
(x32) | 8x1 1/4

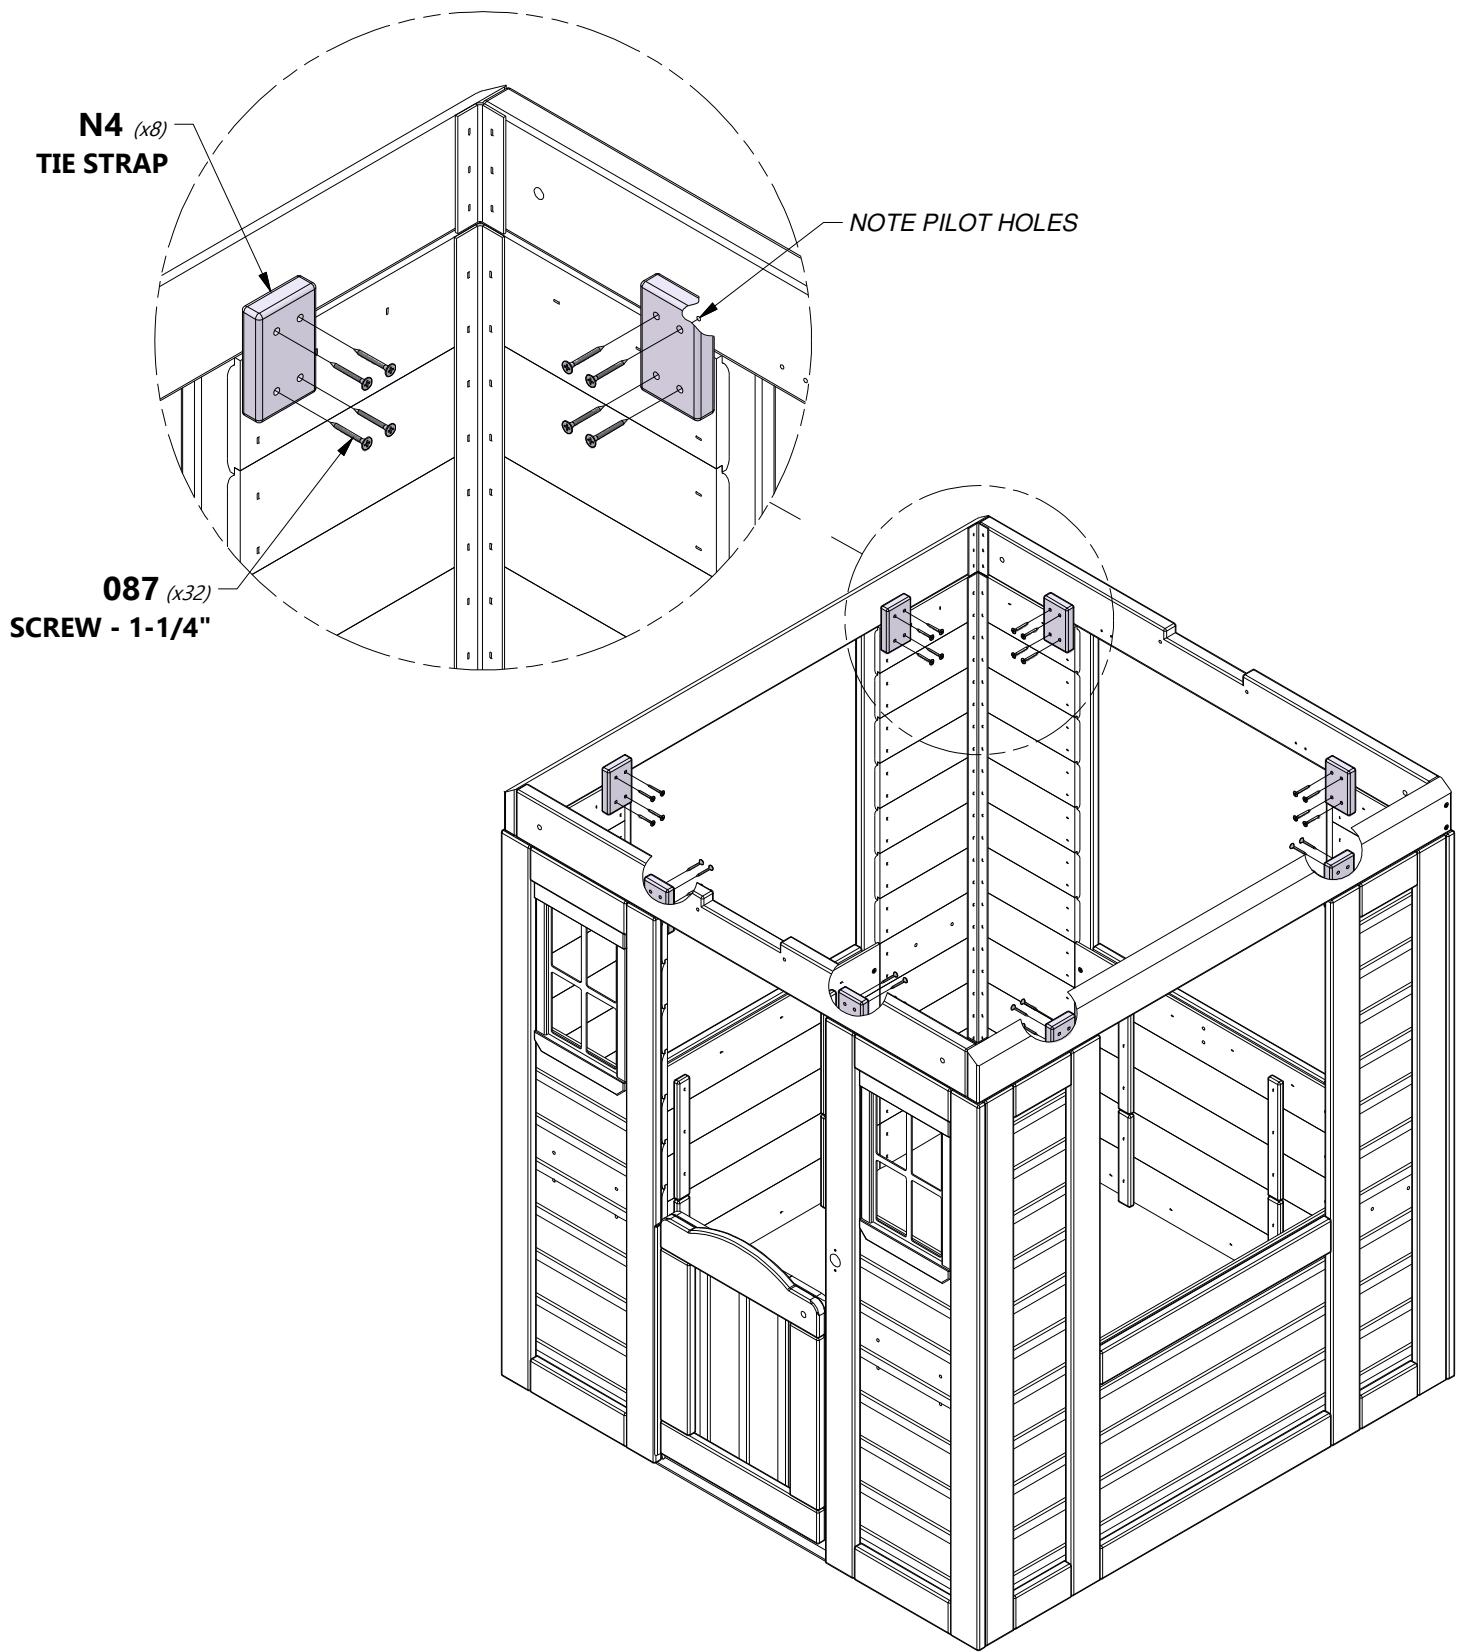




STEP 9

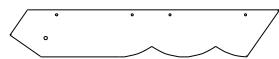

L1 | GABLE BOARD - W4L13447
(x4) 5/8"x4 3/8"x25 3/8" (16x112x643)

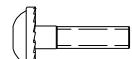

H100137 | BOLT WH
(x4) 1/4x1




H100138 | WASHER LOCK EXT
(x4) 6x15



H100139 | WASHER LOCK EXT
(x4) 8x15



H100140 | NUT BARREL WH
(x4) 1/4x7/8

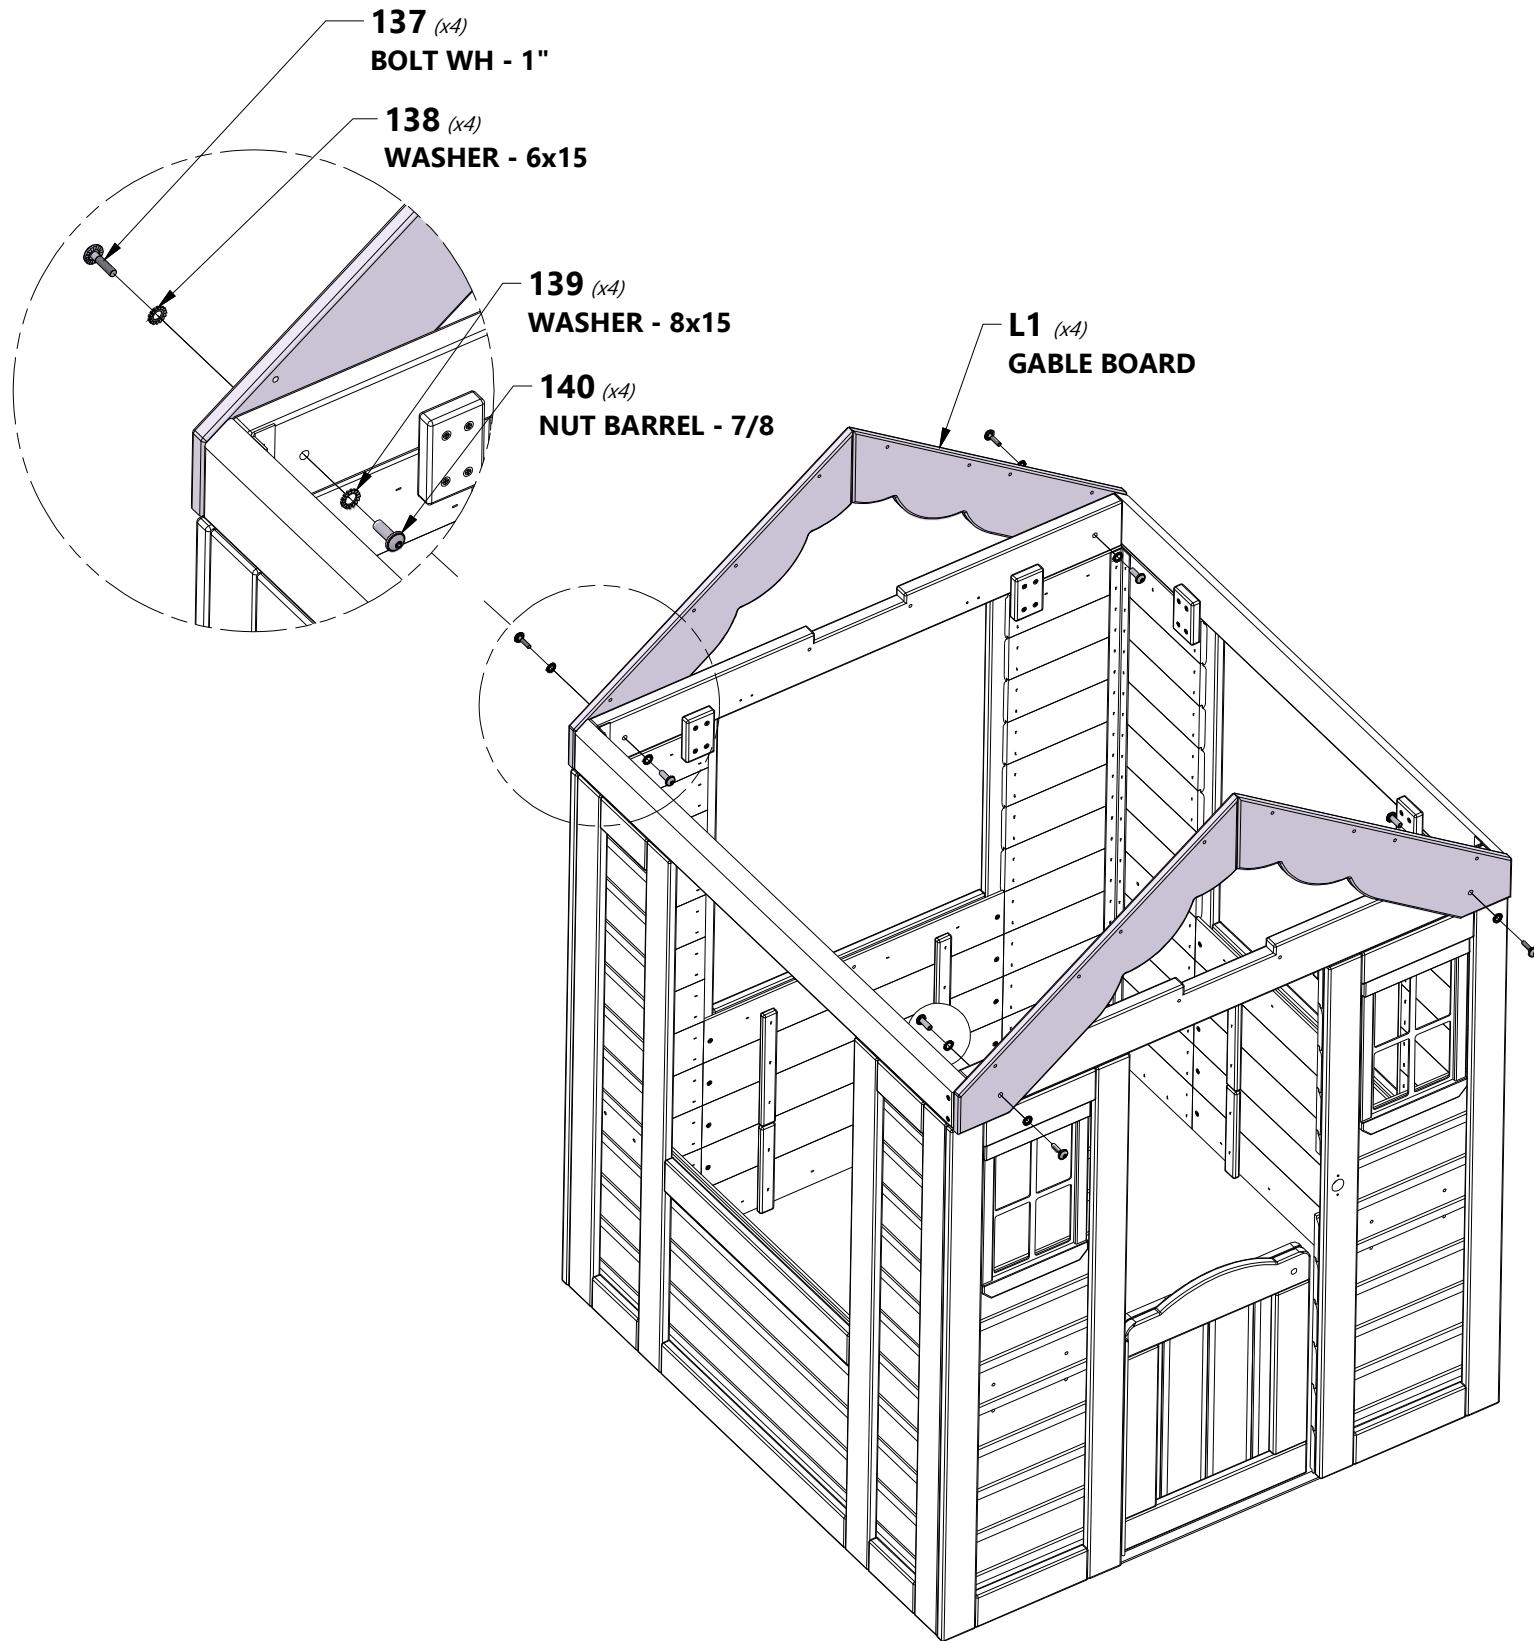

STEP 10



K1 | TRIANGLE SUNBURST - W4L19911
(x2) | 5/8" x 5 1/4" x 10 3/8" (16x134x265)

 H100088 | SCREW PFH
(x20) | 8x1 1/8

 H100086 | SCREW PFH
(x4) | 8x1 1/2


N5 | SUNBURST LEG - W4L19912
(x2) | 5/8" x 2 3/8" x 10 1/4" (16x60x260)

N6 | SUNBURST LEG - W4L19913
(x4) | 5/8" x 2 3/8" x 8 1/4" (16x60x210)

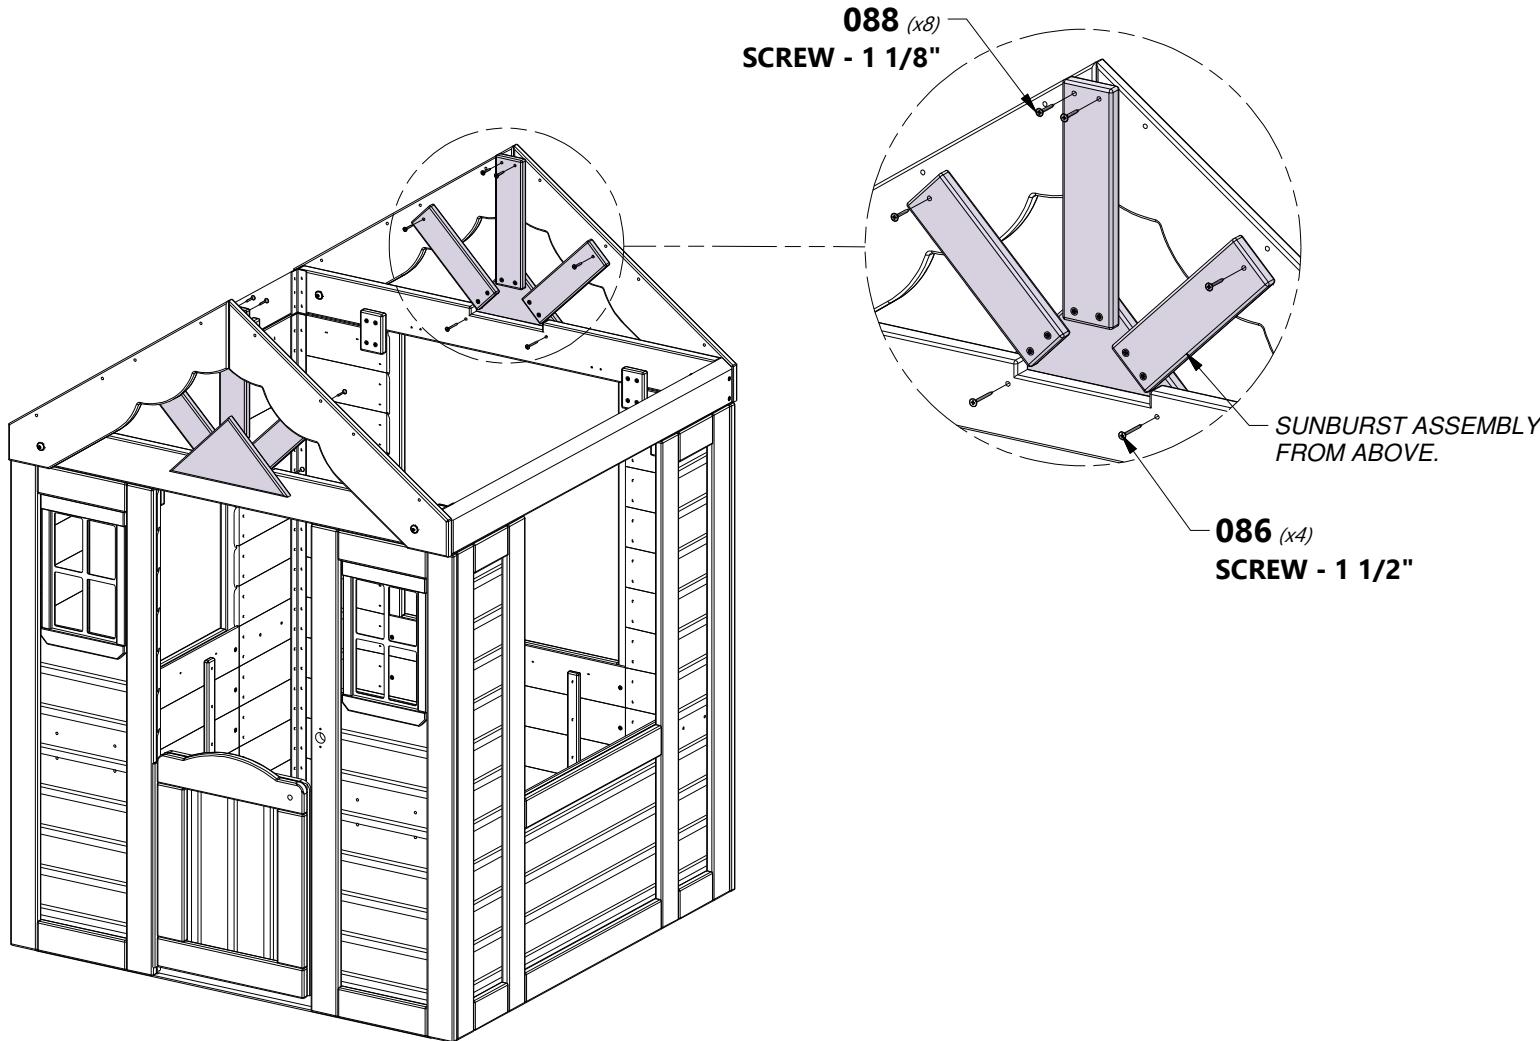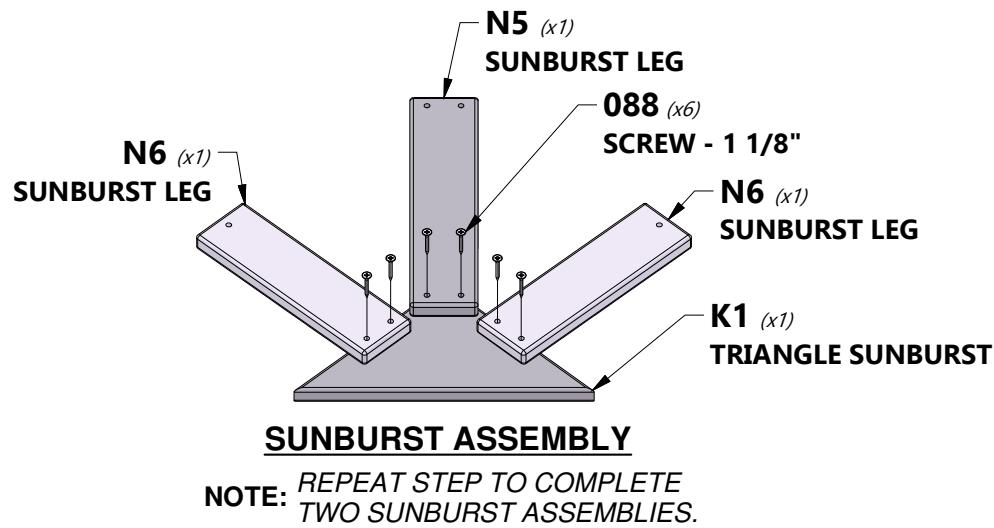



STEP 11

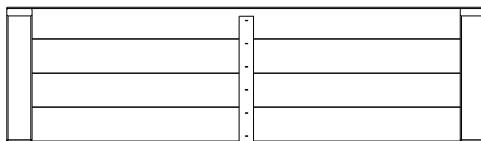


RP2 | **UPPER ROOF PANEL PANEL - W2A04230**
(x2) | 1 3/8" x 12 3/4" x 44 7/8" (35x324x1140)




H100086 | **SCREW PFH**
(x8) | **8x1 1/2**

REPEAT ON OPPOSITE END

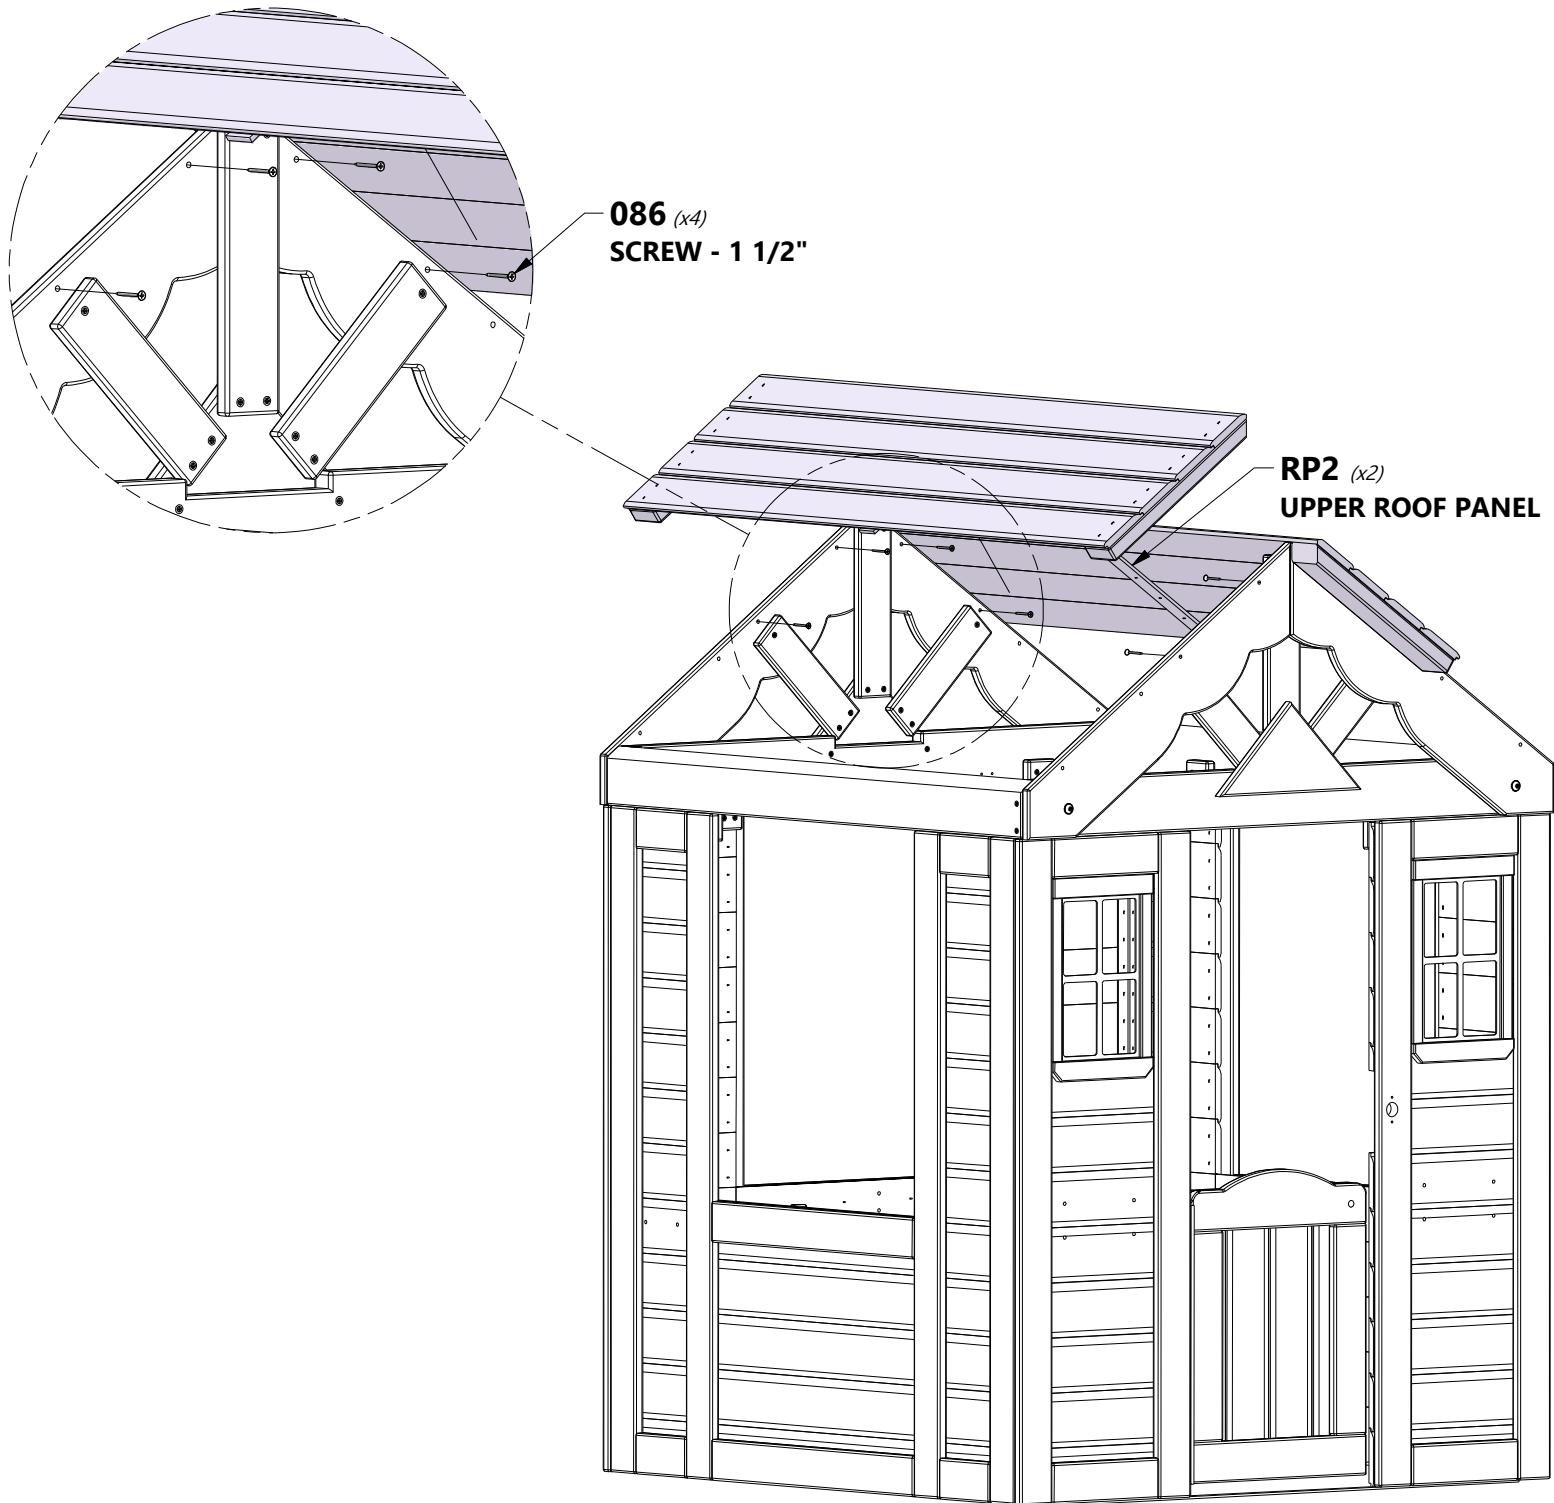



STEP 12

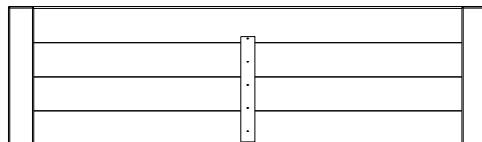


RP1 | LOWER ROOF PANEL - W2A04234
(x2) | 1 3/8" x 13" x 44 7/8" (35x329x1140)



H100086 | SCREW PFH
(x8) | 8x1 1/2"

REPEAT ON OPPOSITE END

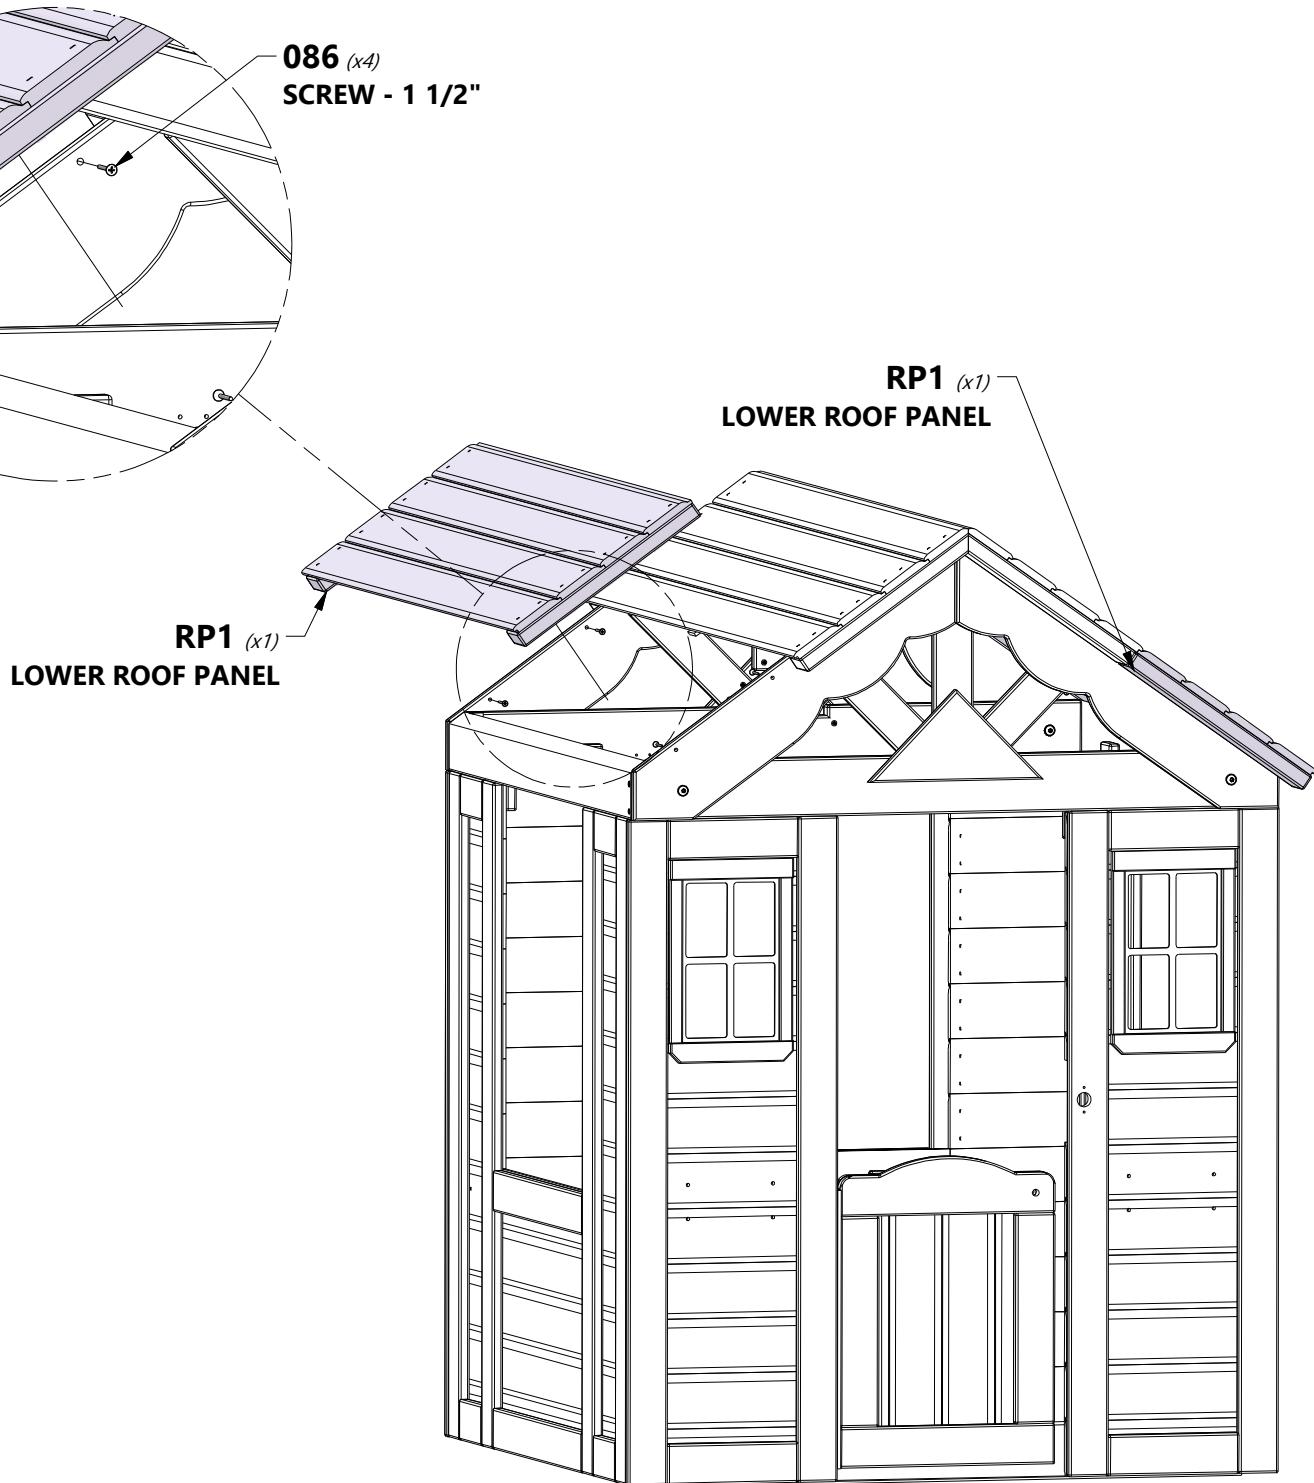






STEP 13

N01 | SIDE WINDOW SHELF - W4L19914
(x1) | 5/8" x 2 3/8" x 18 7/8" (16x60x479)


H100087 | SCREW PFH
(x2) | 8x1 1/4

INSIDE VIEW

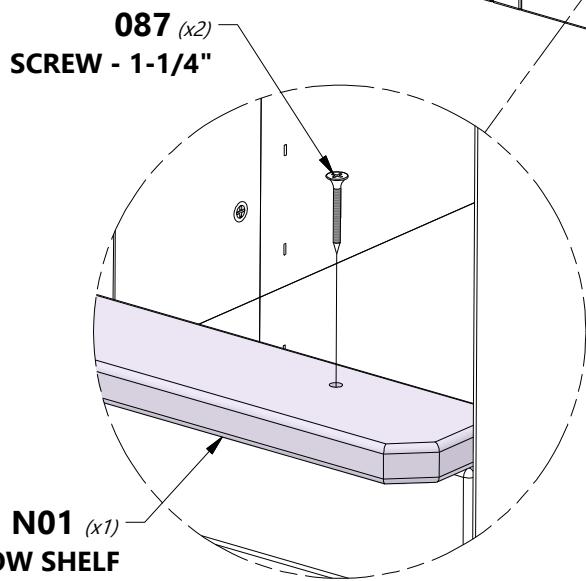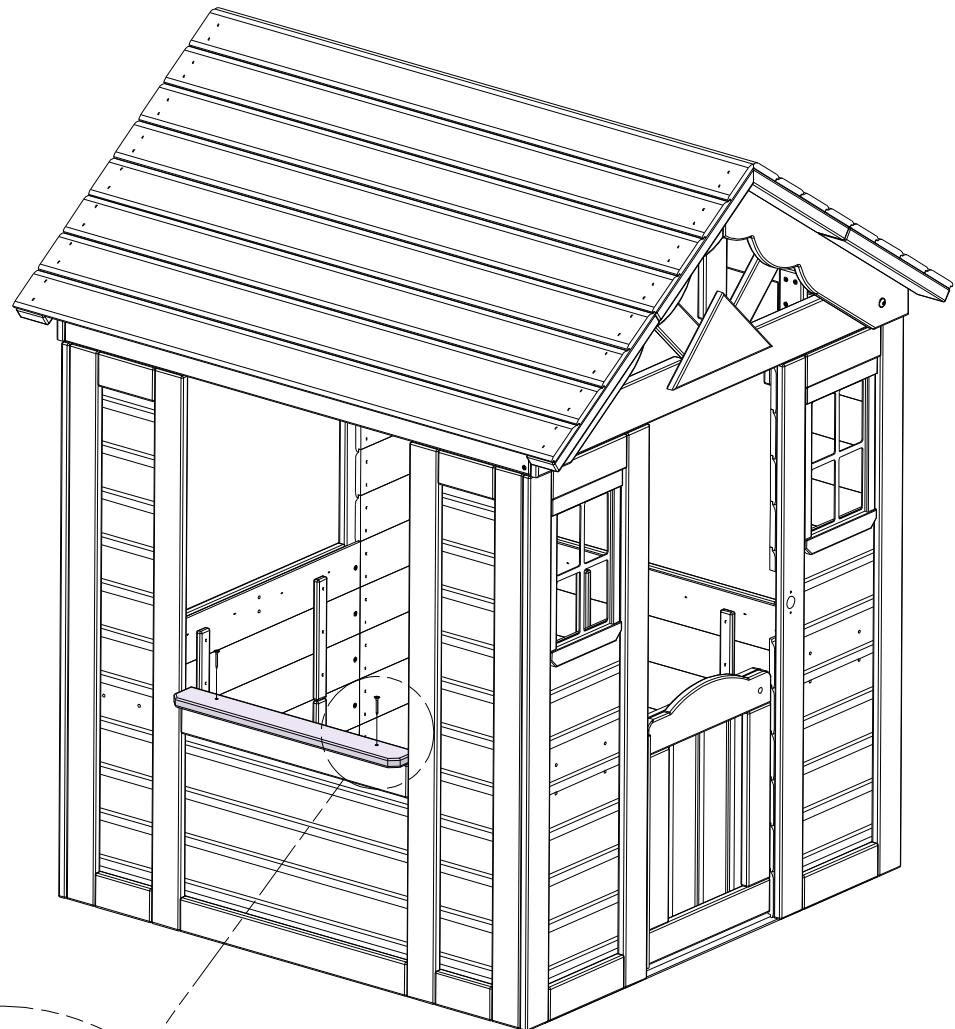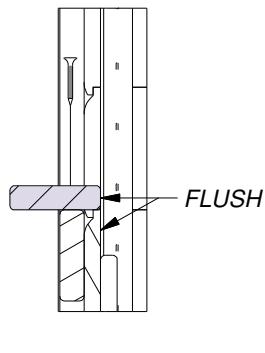






STEP 14

N02 | REAR WINDOW SHELF - W4L19915
(x1) | 5/8" x 2 3/8" x 19 1/8" (16x60x485)



H100087 | SCREW PFH
(x2) | 8x1 1/4

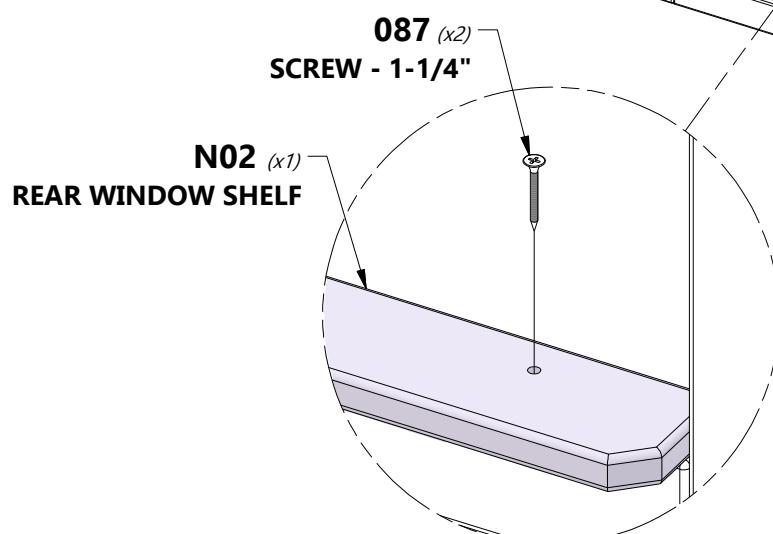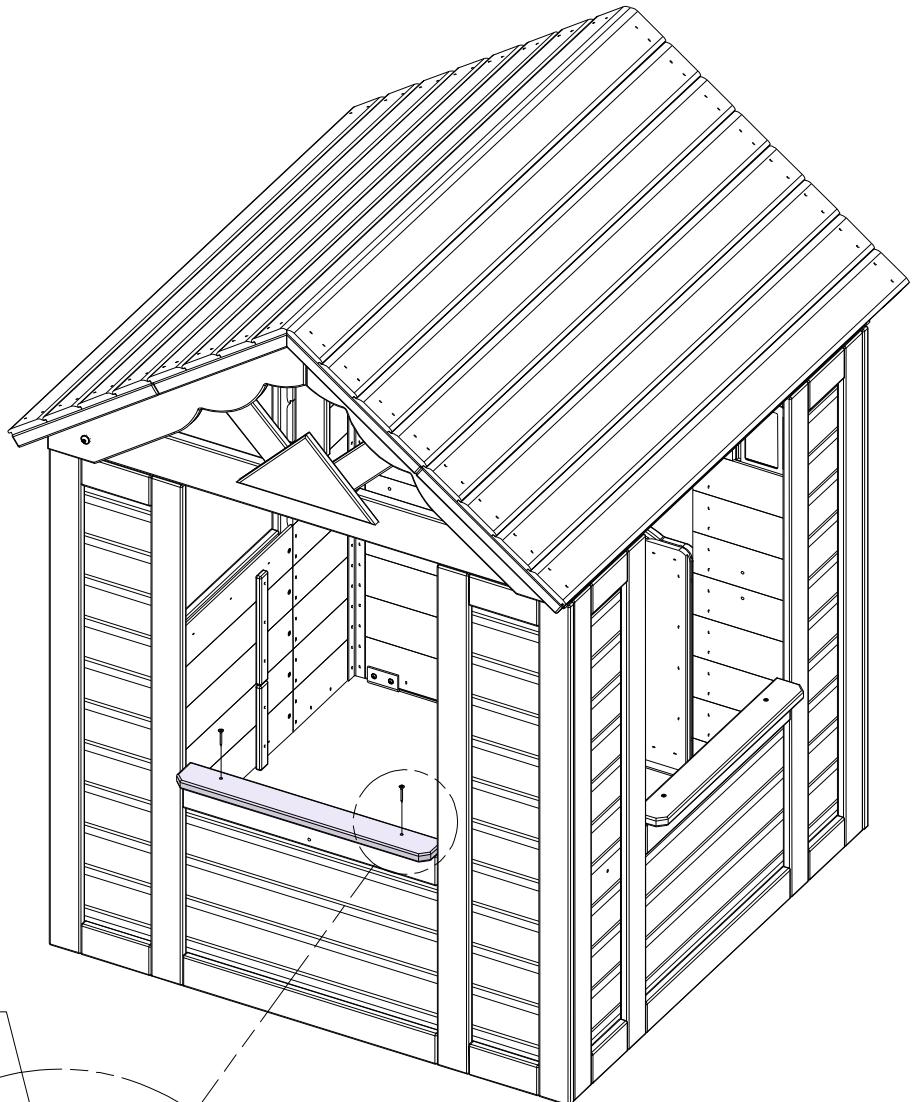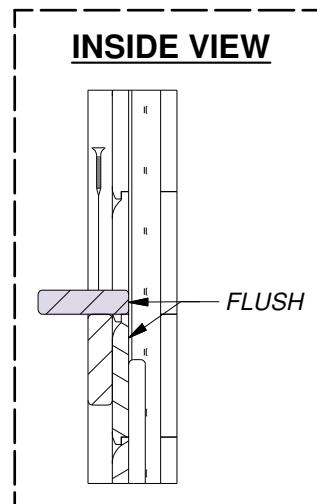




STEP 15





N01 | SIDE WINDOW SHELF - W4L19914
(x1) | 5/8" x 2 3/8" x 18 7/8" (16x60x479)



H100087 | SCREW PFH
(x2) | 8x1 1/4

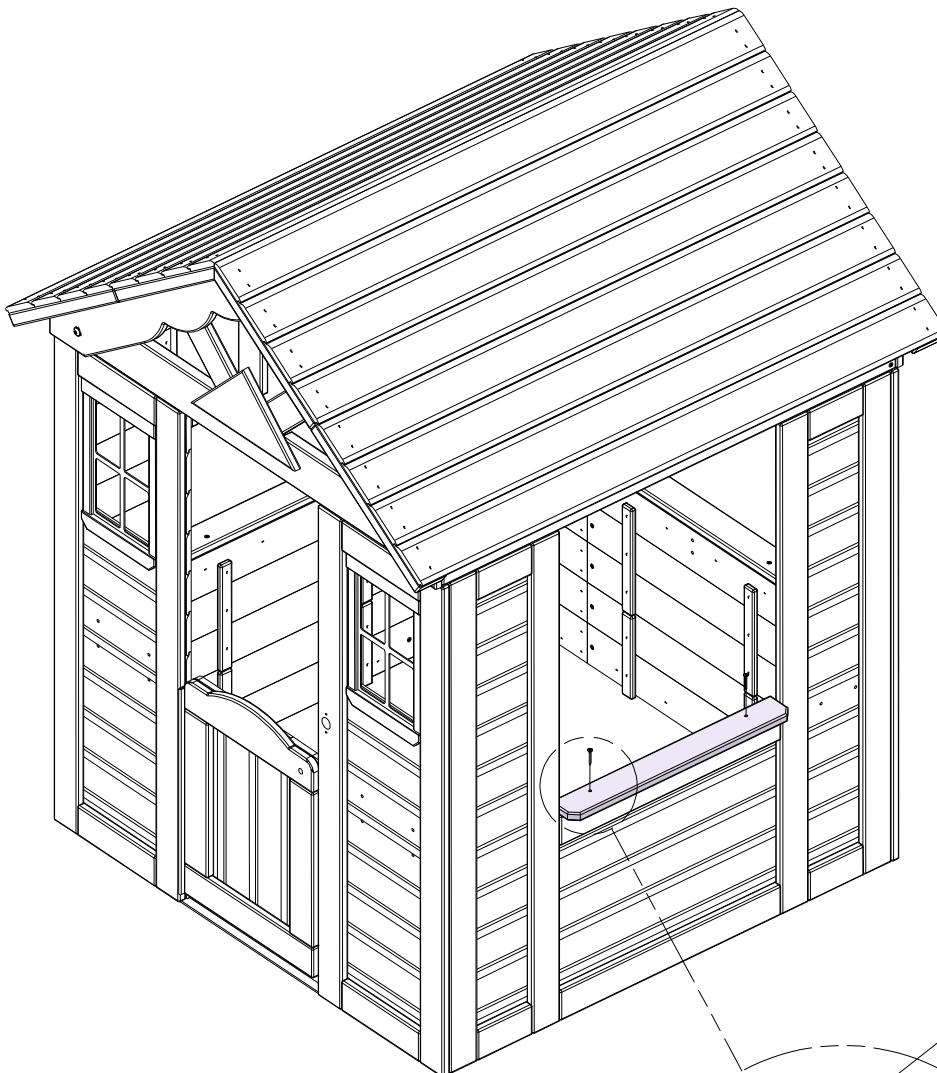


INSIDE VIEW

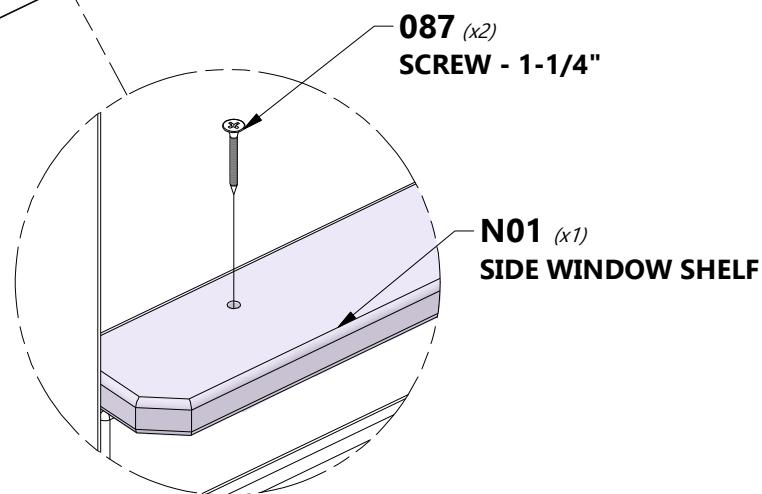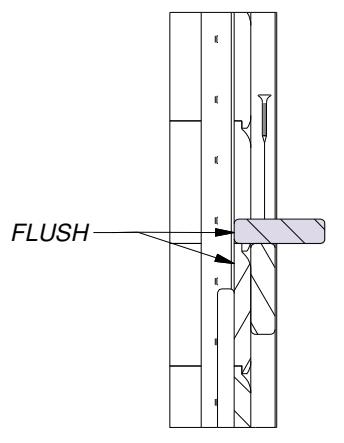





STEP 16

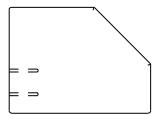

D1 | COUNTER TOP SUPPORT - W4L13444
(x1) | 1 3/8" x 4 3/8" x 5 7/8" (36x112x150)

H100090 | SCREW PFH
(x2) | 8x2 1/2"

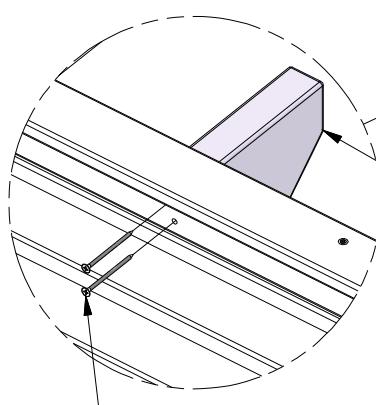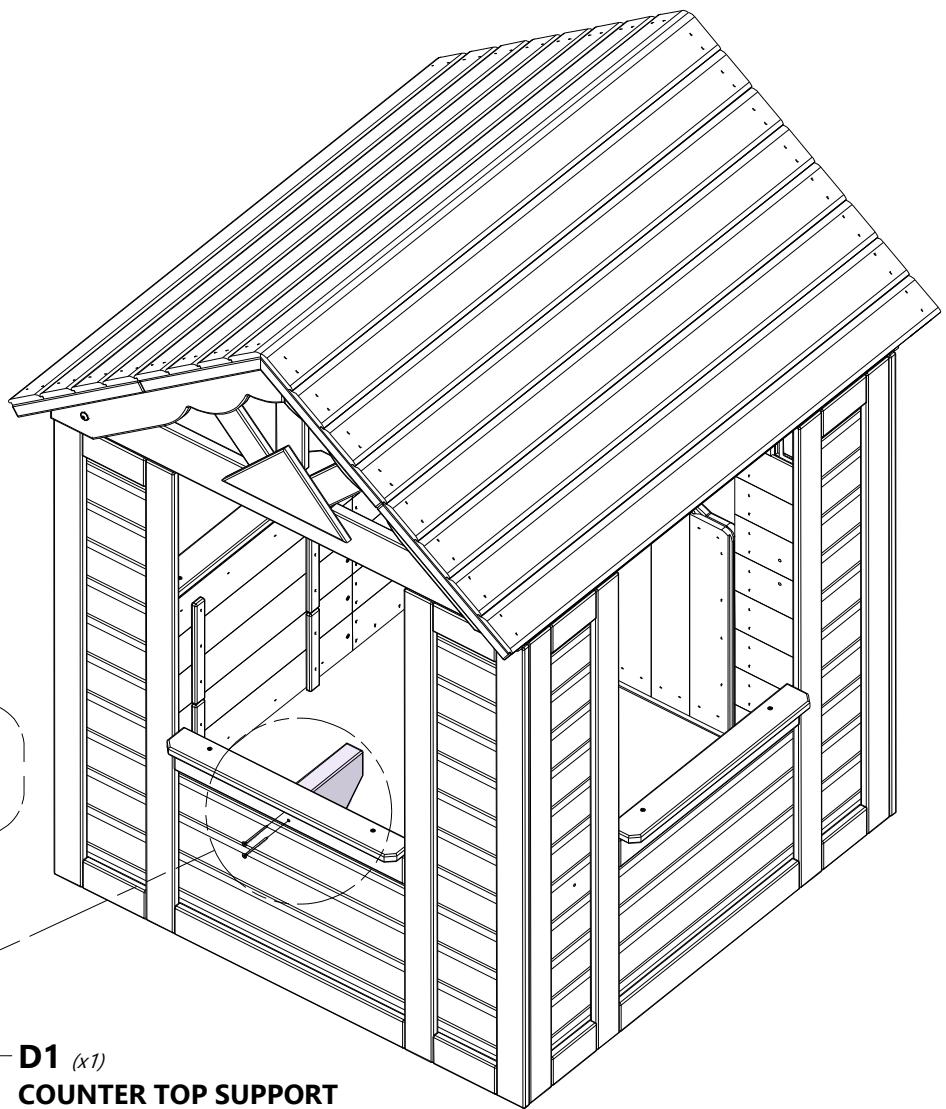

D1 (x1)
COUNTER TOP SUPPORT

090 (x2)
SCREW - 2 1/2"




STEP 17


J1 | COUNTER TOP SUPPORT - W4L13445
(x2) 1" x 2 3/8" x 5 7/8" (24x60x150)




H100087 | SCREW PFH
(x4) 8x1 1/4

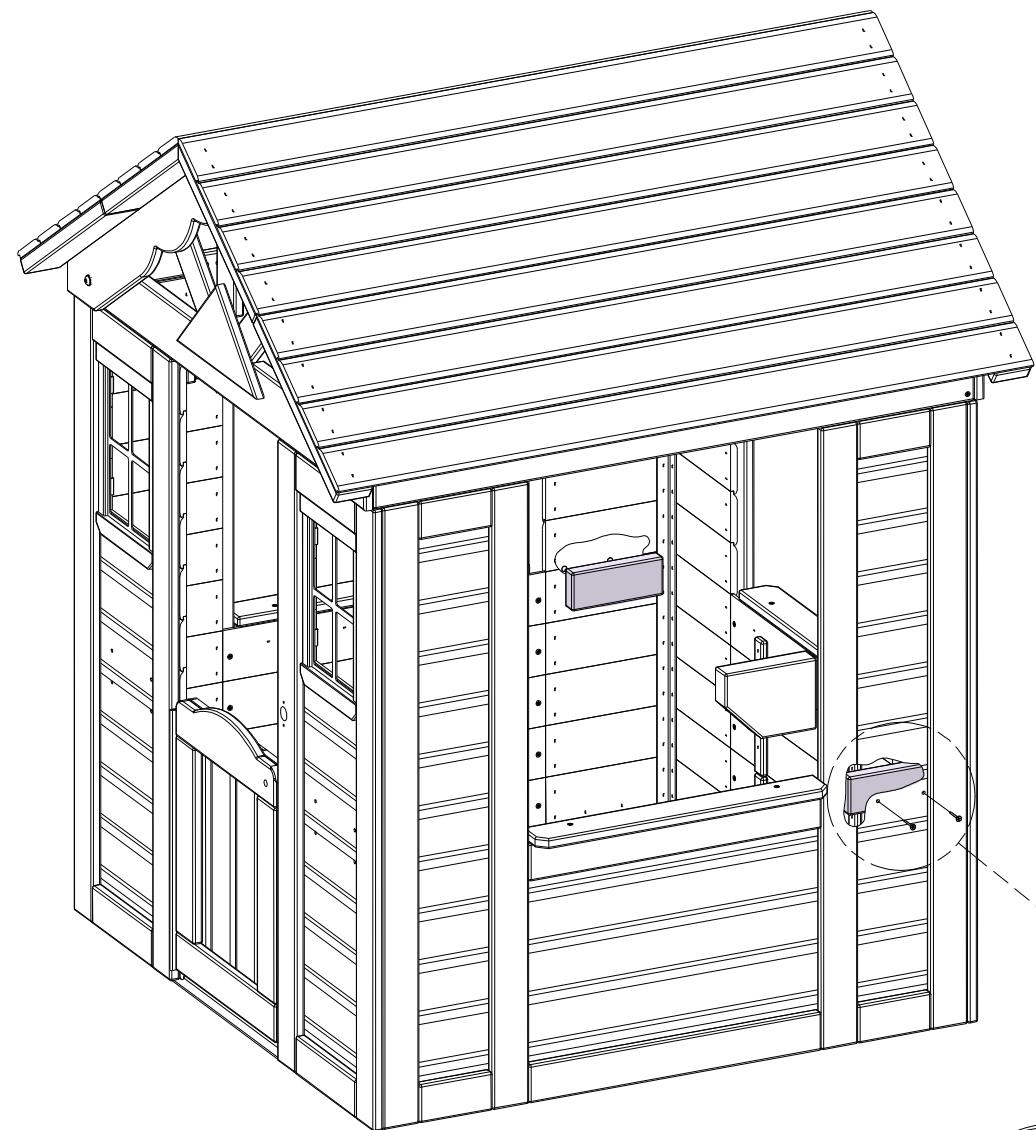

INSIDE VIEW

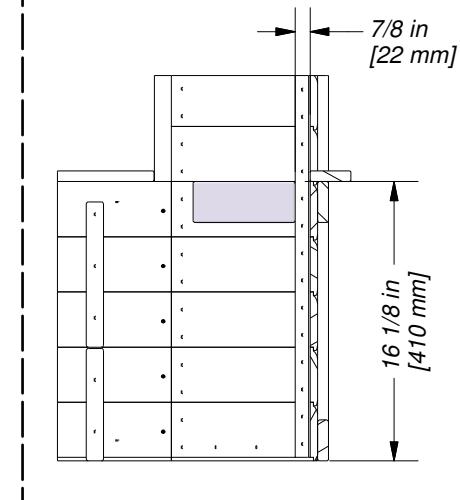

J1 (x1)
COUNTER TOP SUPPORT

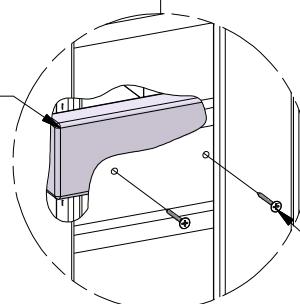

087 (x2)
SCREW - 1-1/4"

REPEAT ON OPPOSITE WALL






STEP 18



M1 COUNTER TOP - W4L13446
(x4) 5/8" x 3 3/8" x 18 1/2" (16x86x469)




H100087 SCREW PFH
(x8) 8x1 1/4

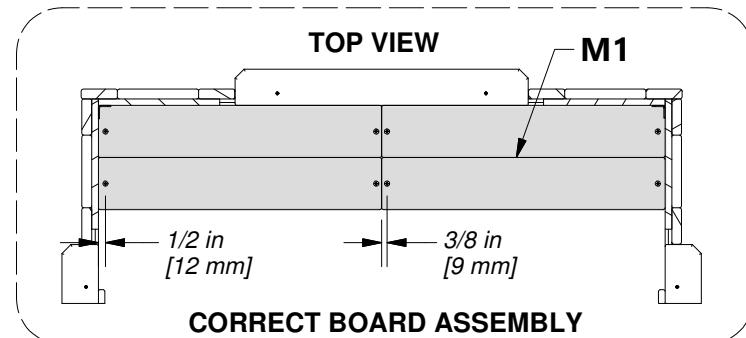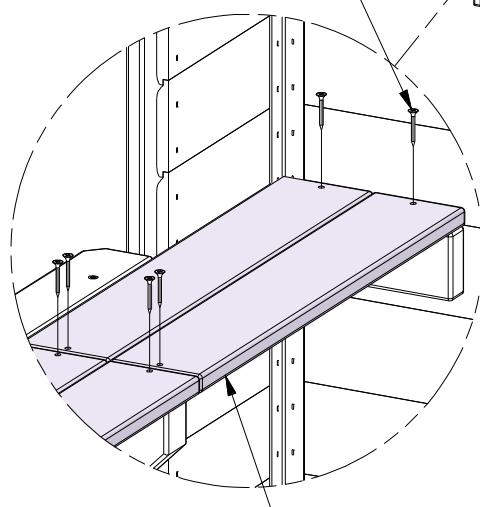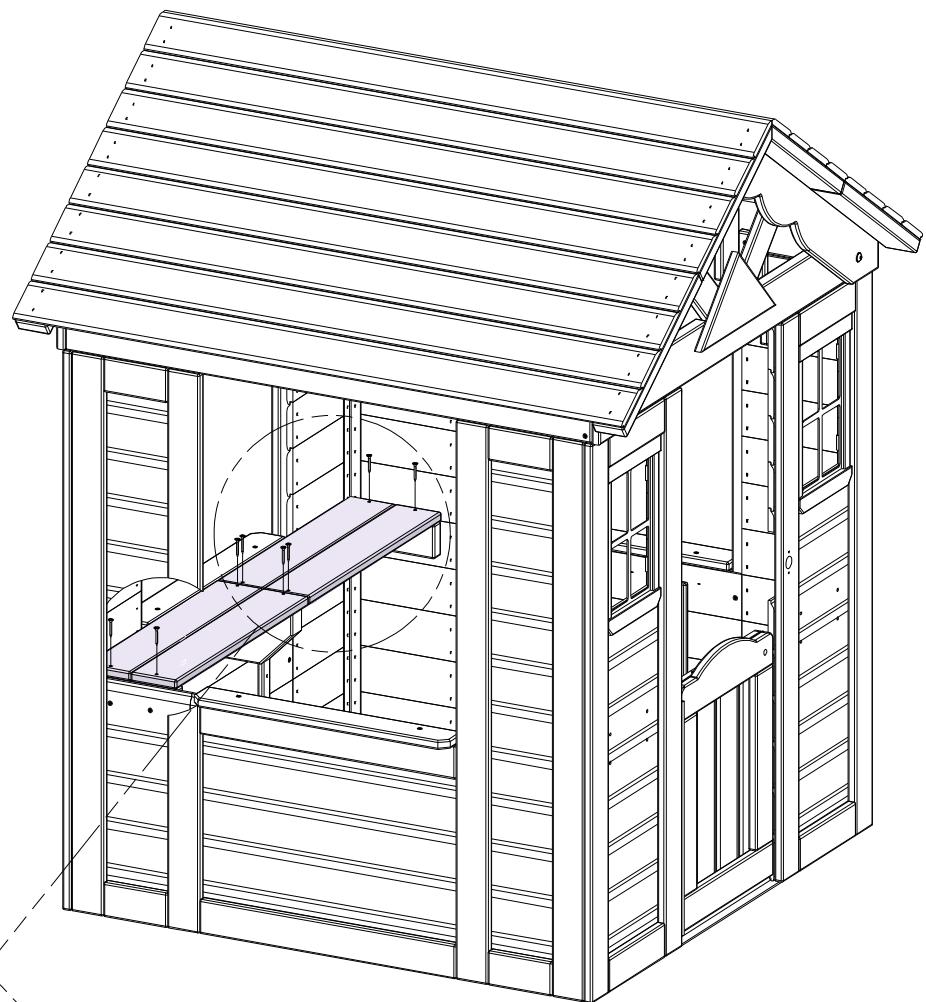




STEP 19

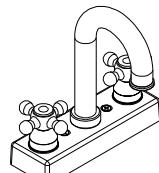



A6P00024 | FAUCET KIT
(x1)



H100086 | SCREW PFH
(x2) | 8x1 1/2

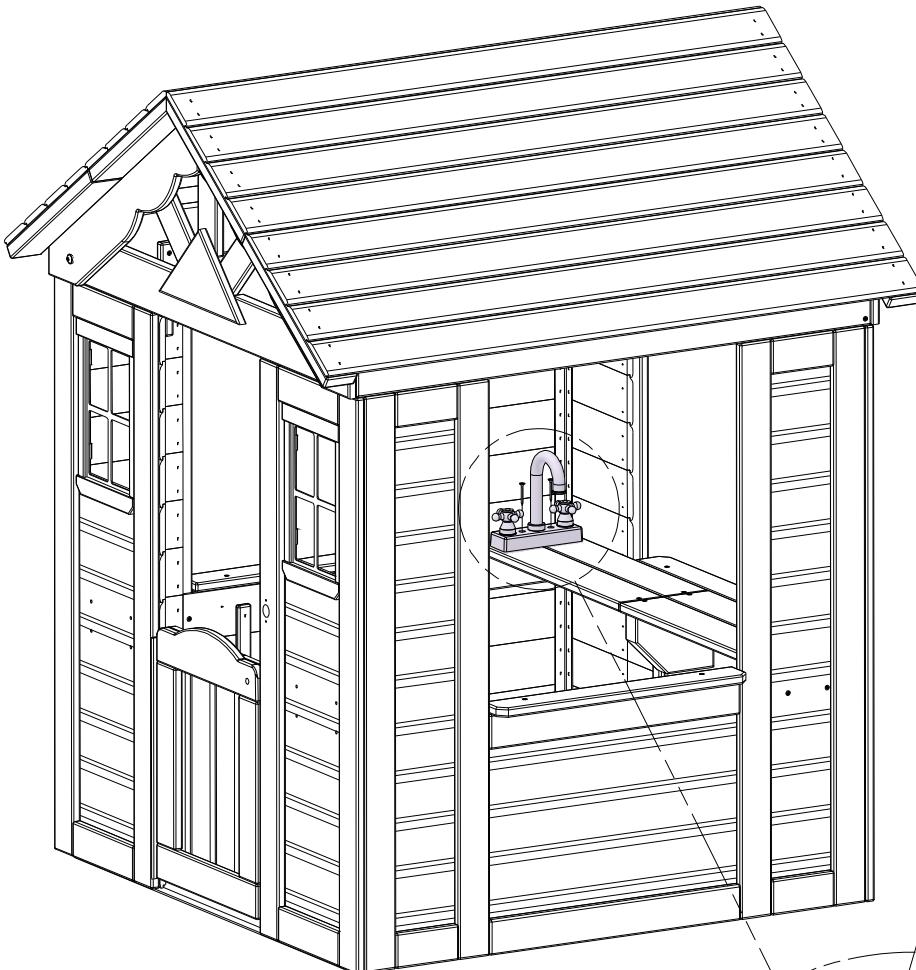


FRONT VIEW

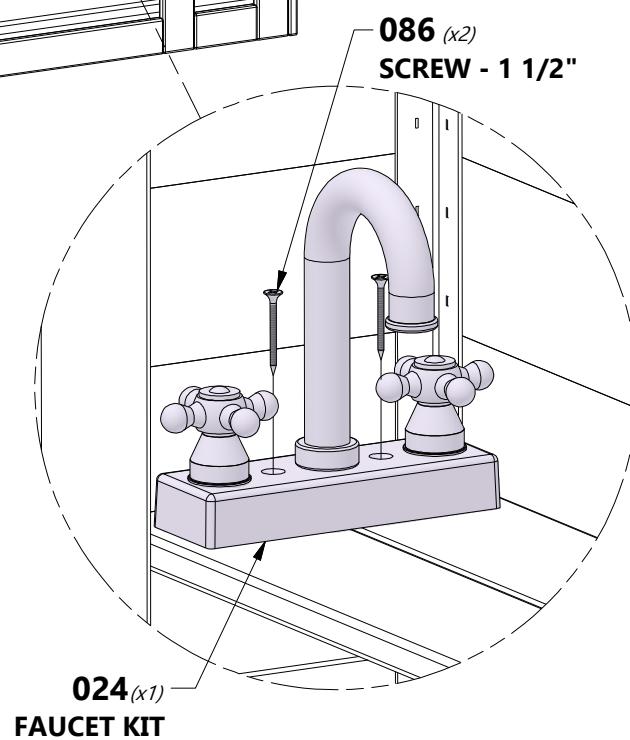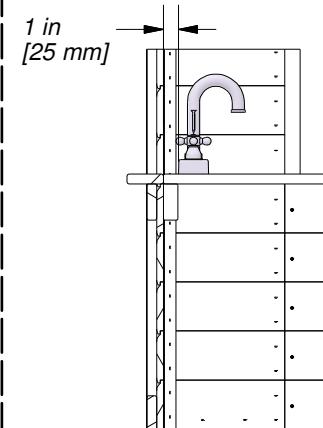

024 (x1)
FAUCET KIT




STEP 20

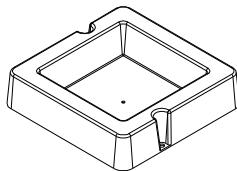



A6P00032 | SURFACE MOUNT BASIN



H100128 | SCREW PWH
(x2) | 8x5/8

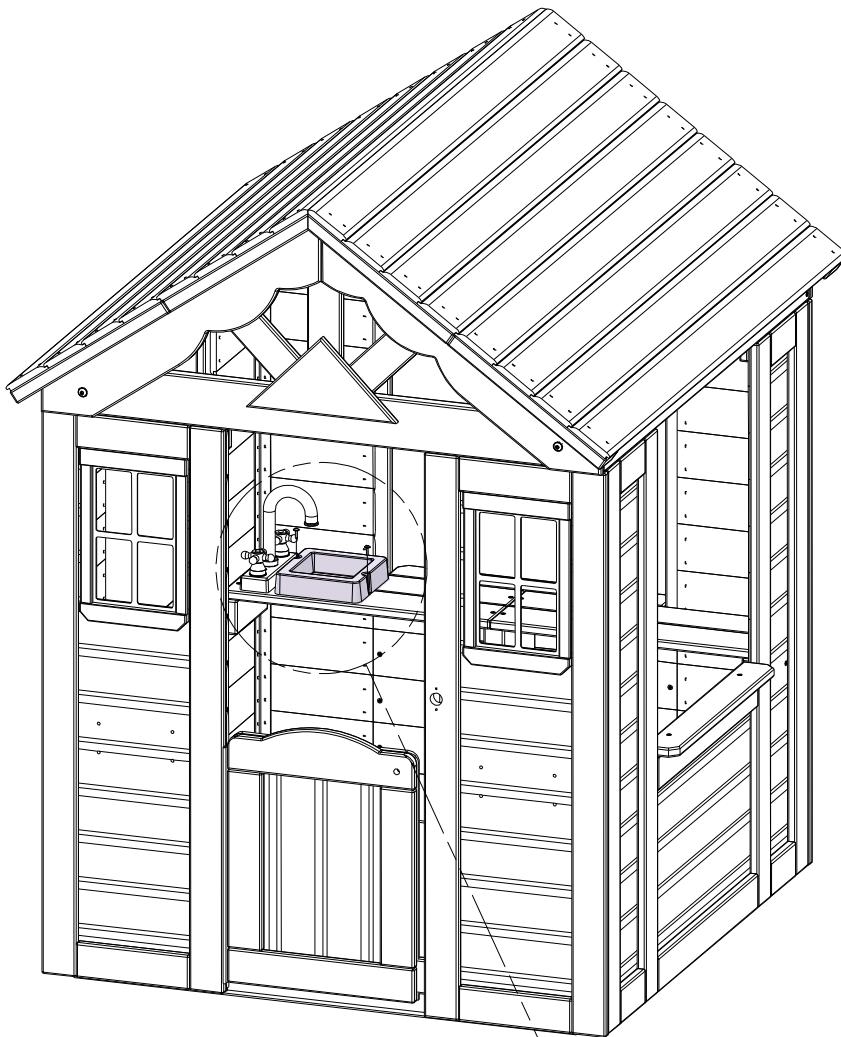

FRONT VIEW

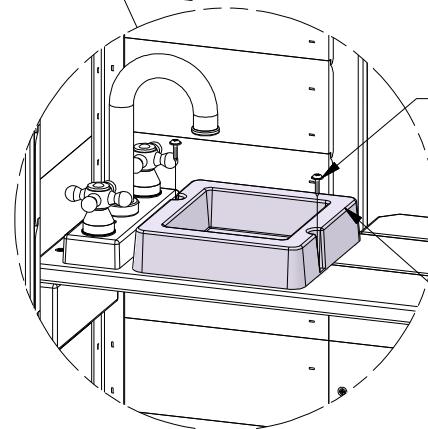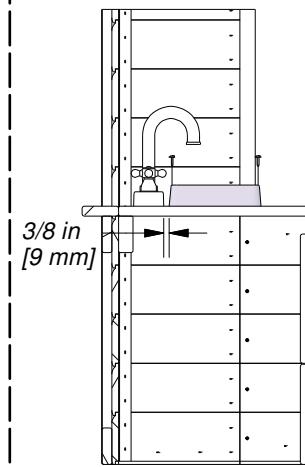


128 (x2)
SCREW - 5/8

032 (x1)
SURFACE MOUNT BASIN





STEP 21

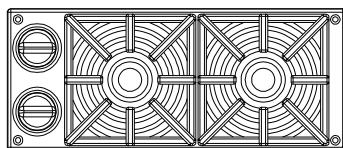

A6P00025 | STOVE KIT
(x1)




H100088 | SCREW PFH
(x4) 8x1 1/8

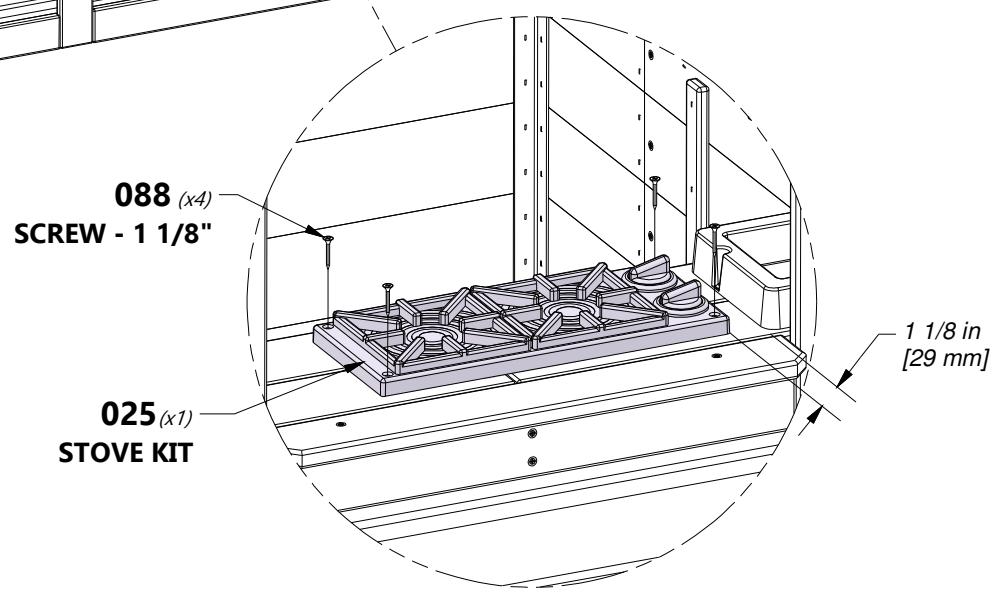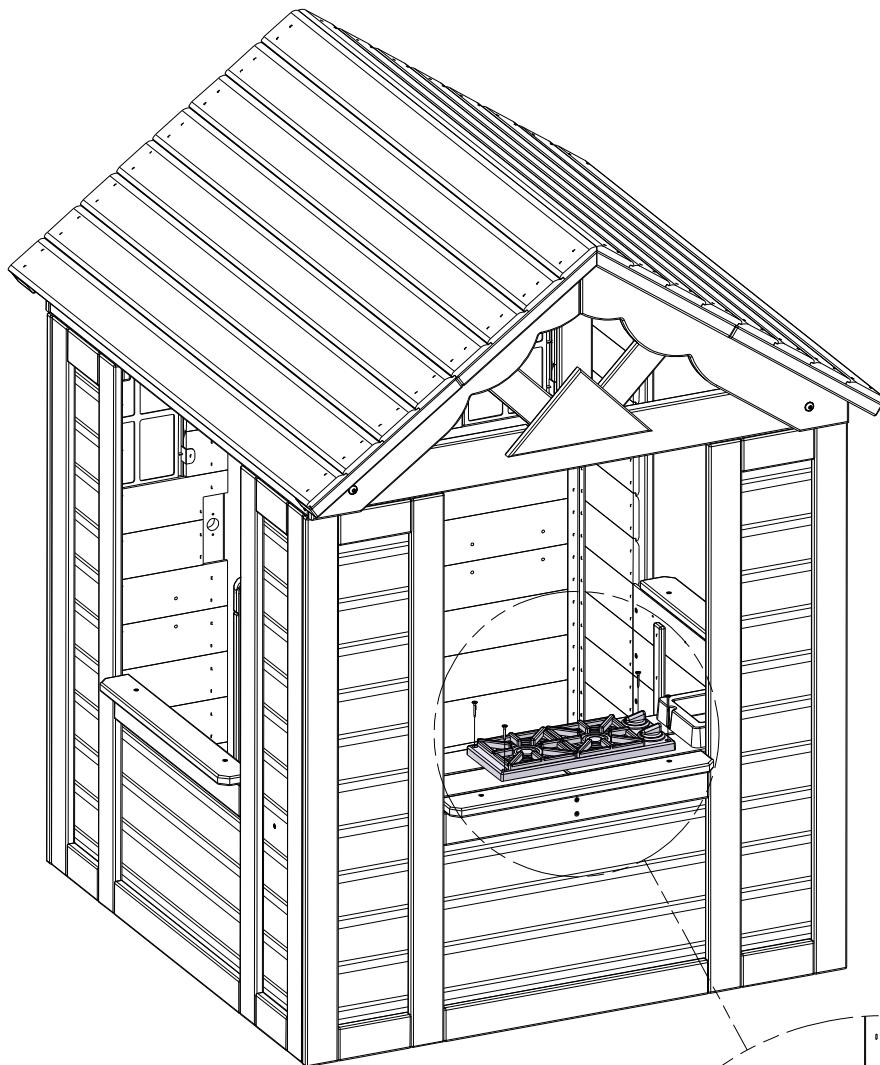





STEP 22

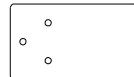

N3 | DOOR STOP - W4L13449
(x1) | 5/8" x 2 3/8" x 3 7/8" (16x60x100)




H100087 | SCREW PFH
(x3) | 8x1 1/4

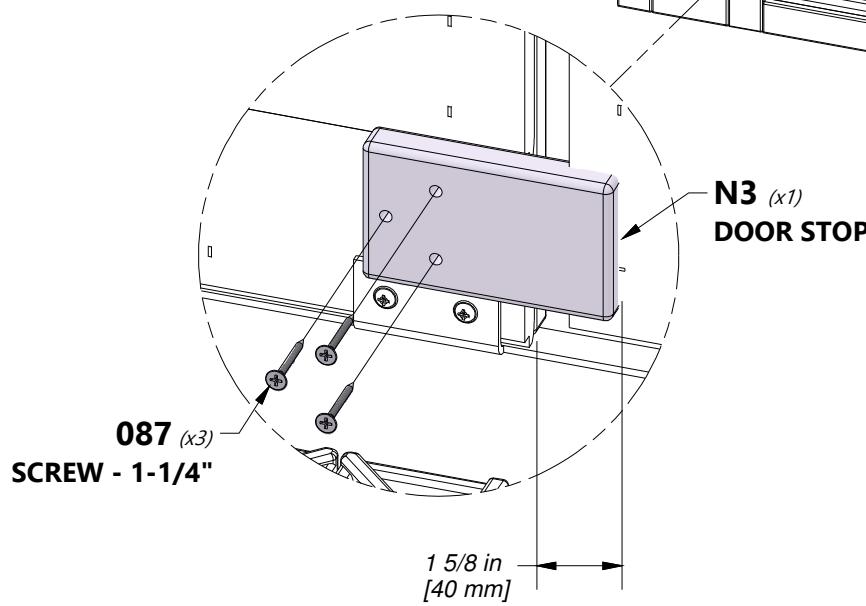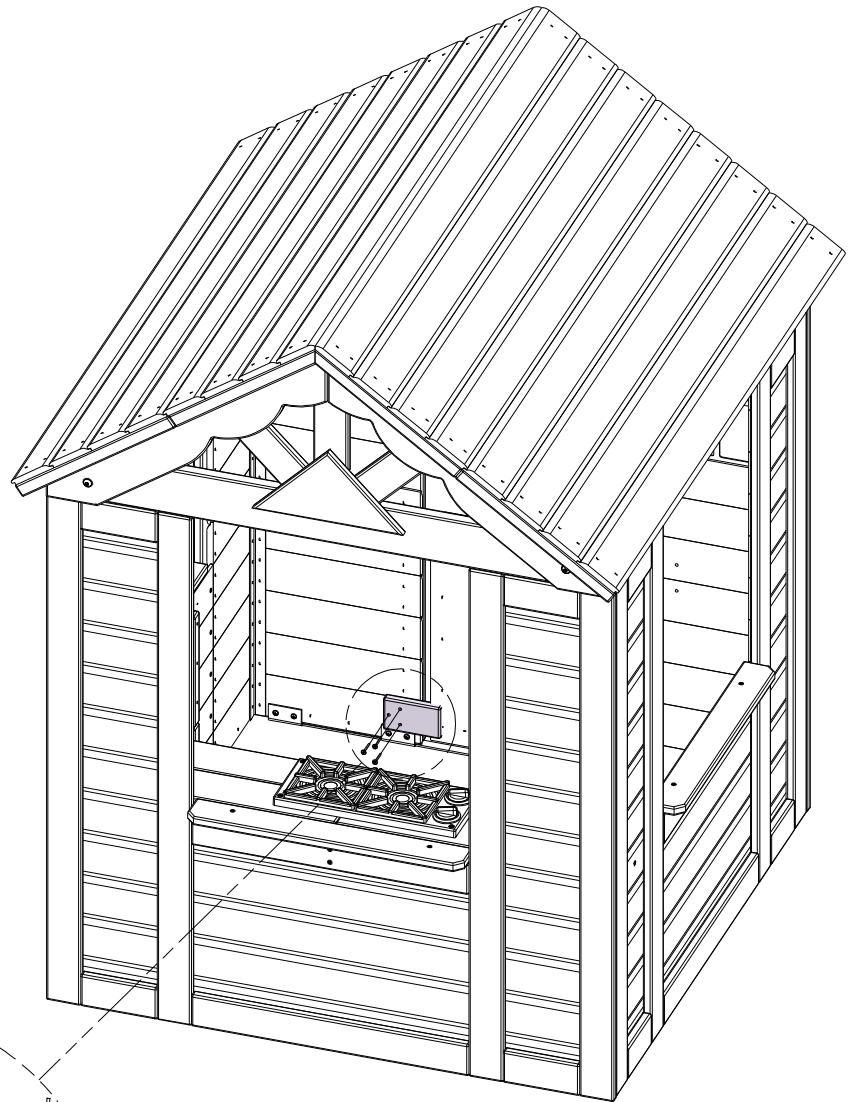




STEP 23


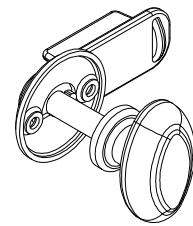


A6P00020 | KNOB KIT
(x1)

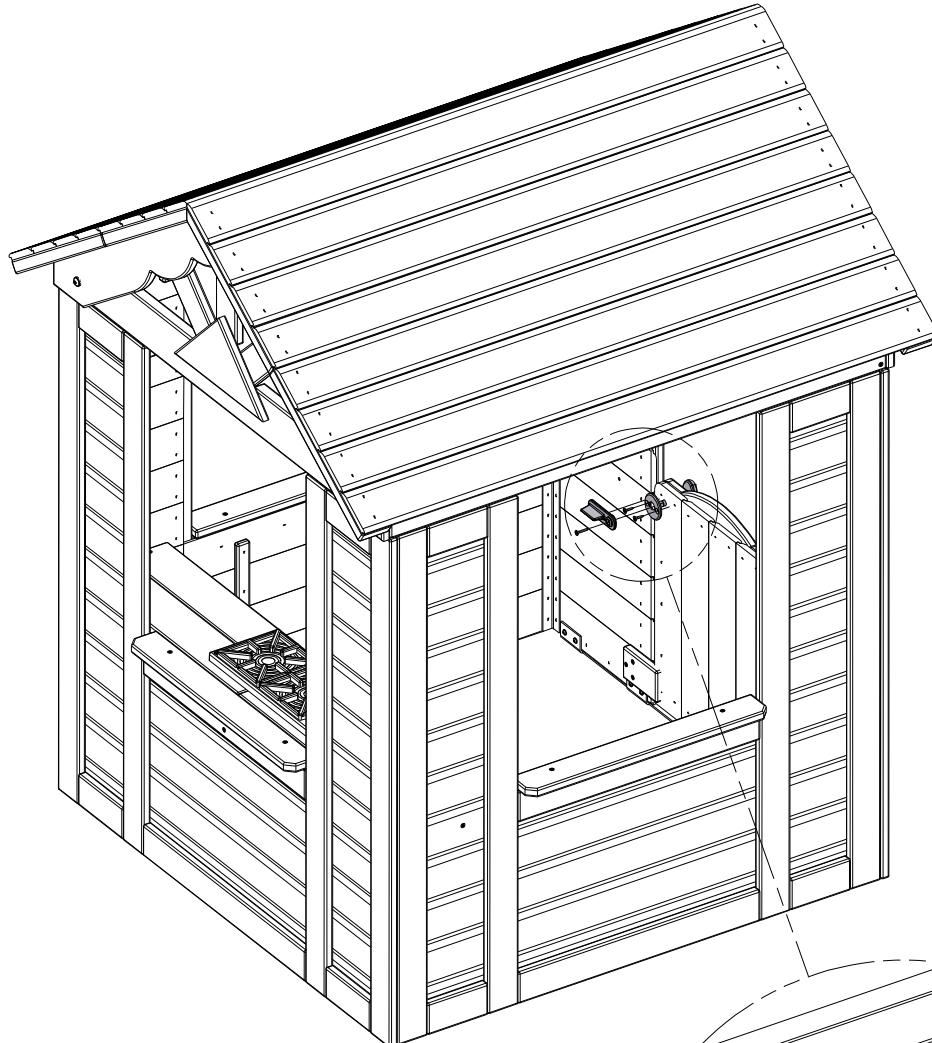


TIP:

WHEN DOOR LATCH IS IN THE UNLOCKED POSITION IT SHOULD FACE IN THE UPWARD DIRECTION.

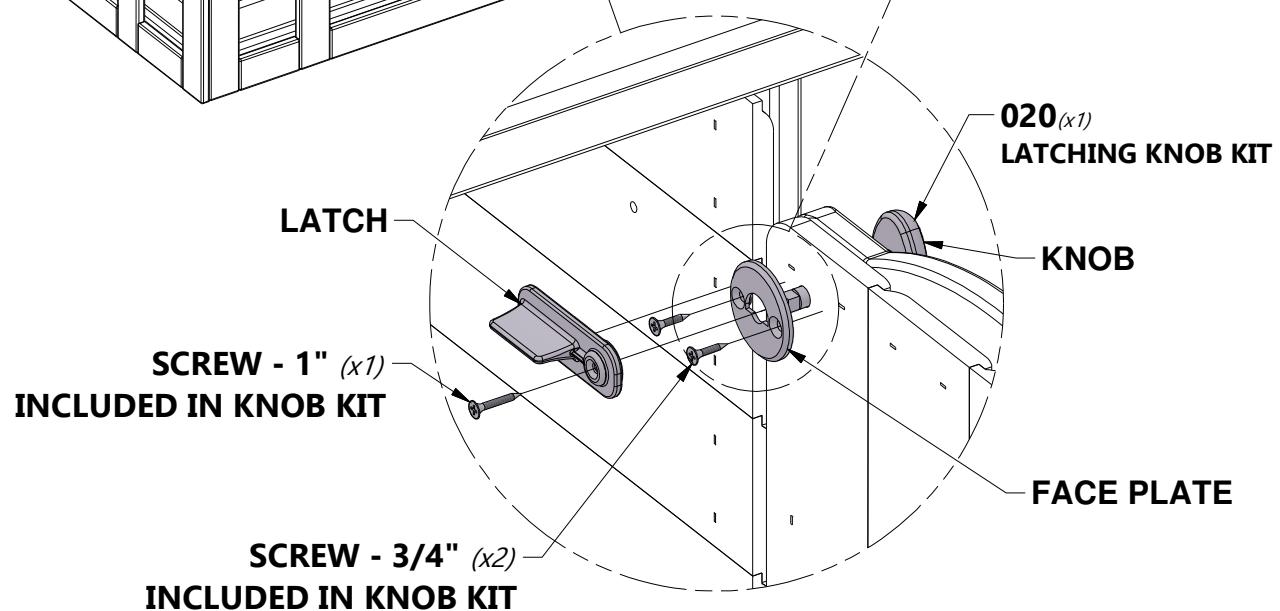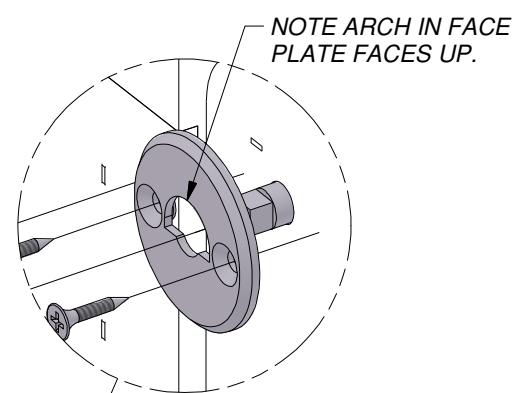


STEP 24

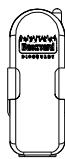

A1100132 (x1) PHONE KIT




H100124 (x2) SCREW PFH
8 x 1/2

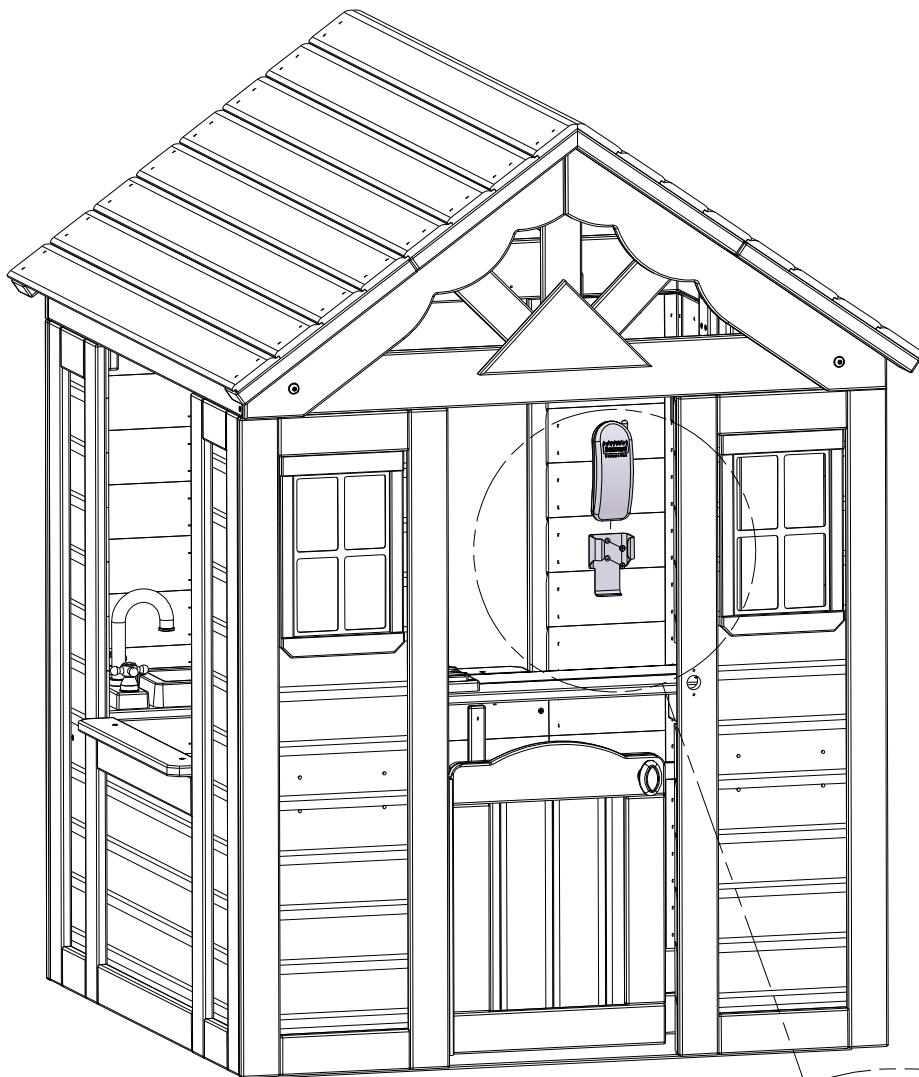


TIP:

CENTER PHONE AND MOUNT
USING THE DIMENSION BELOW
OR YOUR DESIRED LOCATION.

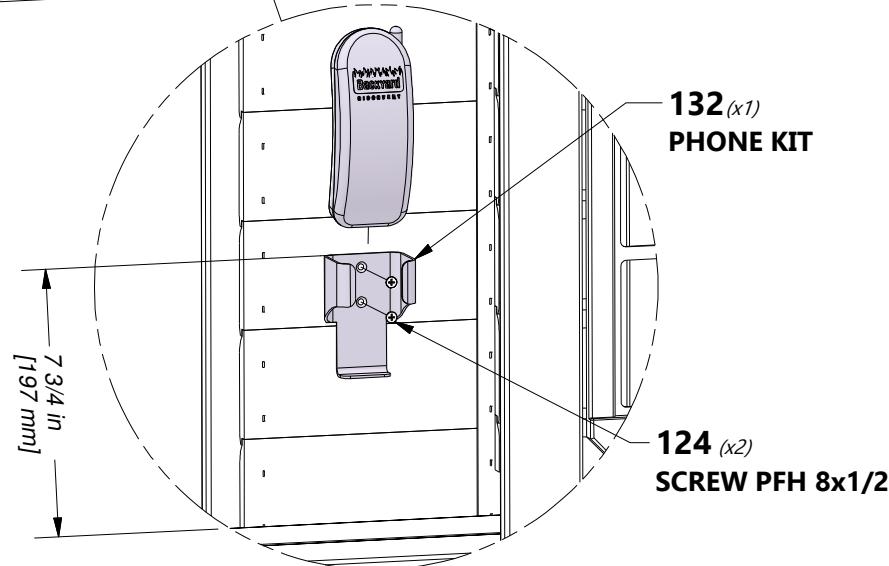







STEP 25

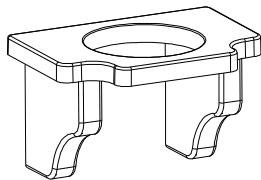

A6P00023 | FLOWER POT HOLDER
(x2)



H100085 | SCREW PFH
(x8) 8x1

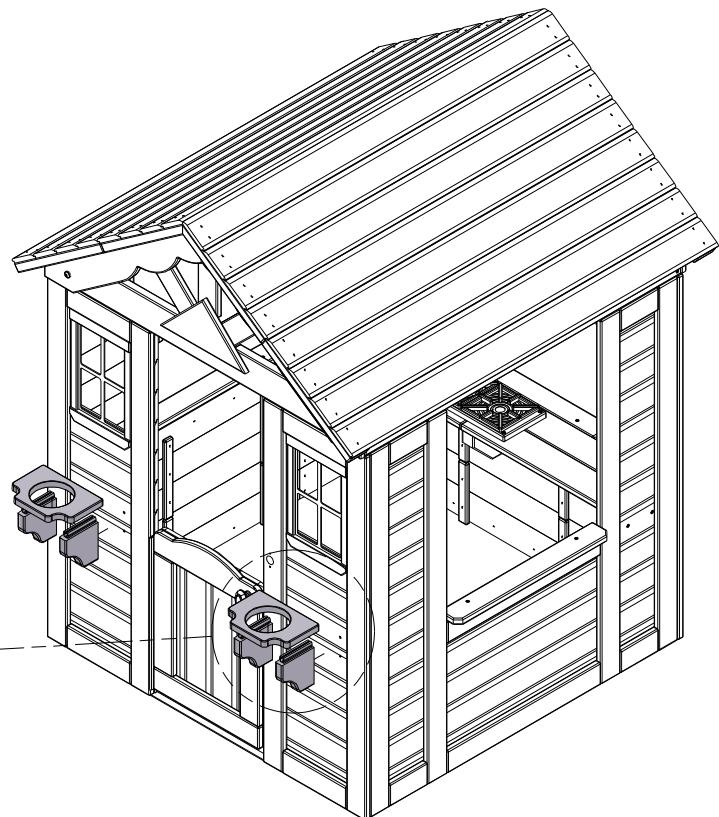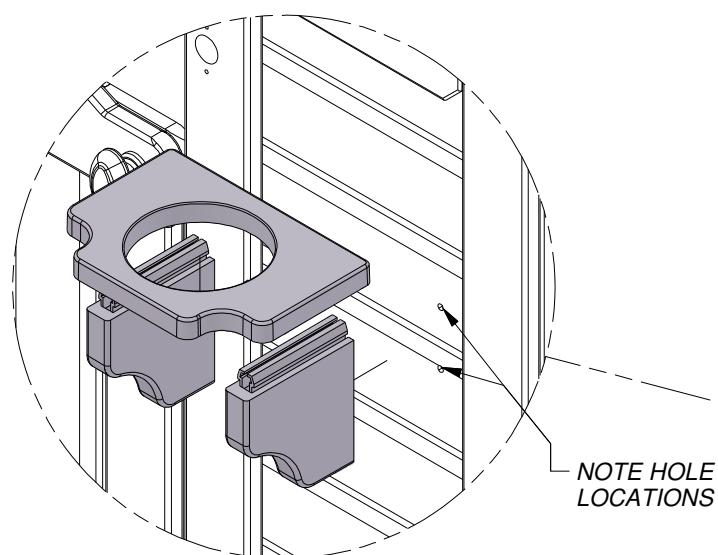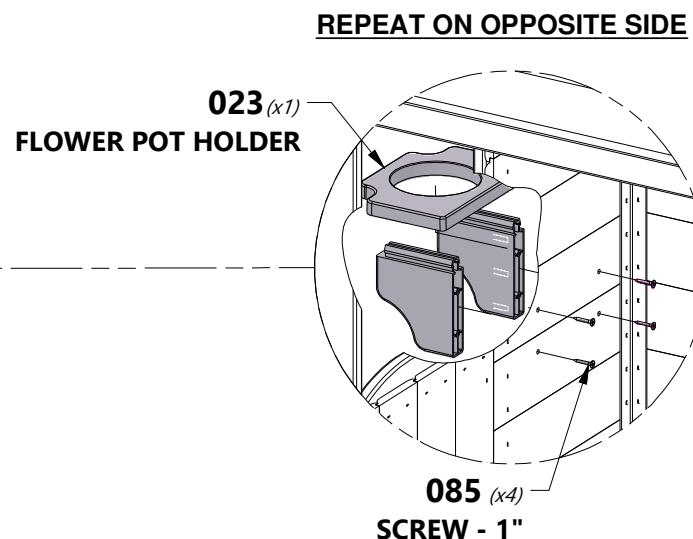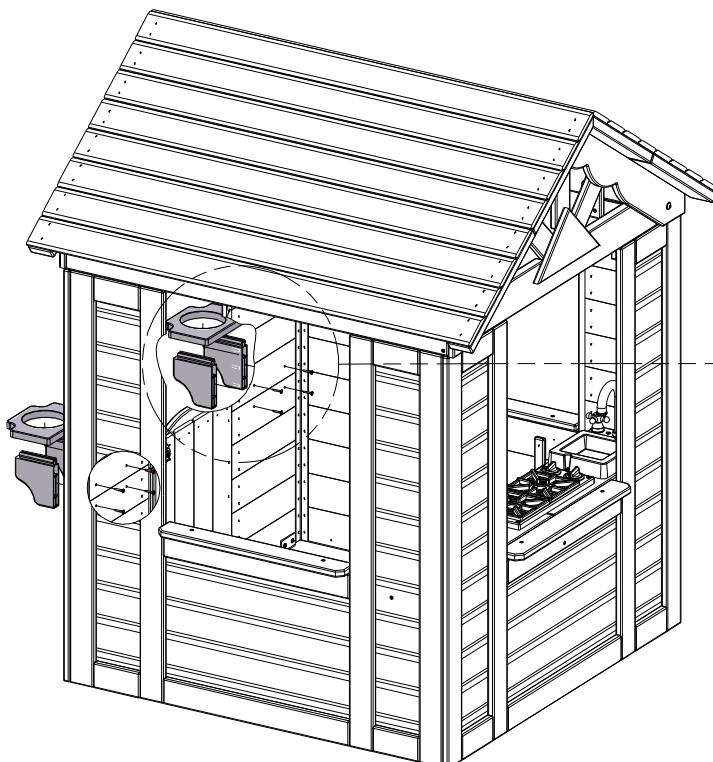




STEP 26



A4M00528 | BYD ID TAG (MEDIUM) AGES 2-10
(x1)

H100361 | SCREW PWH
(x2) 8x7/16"

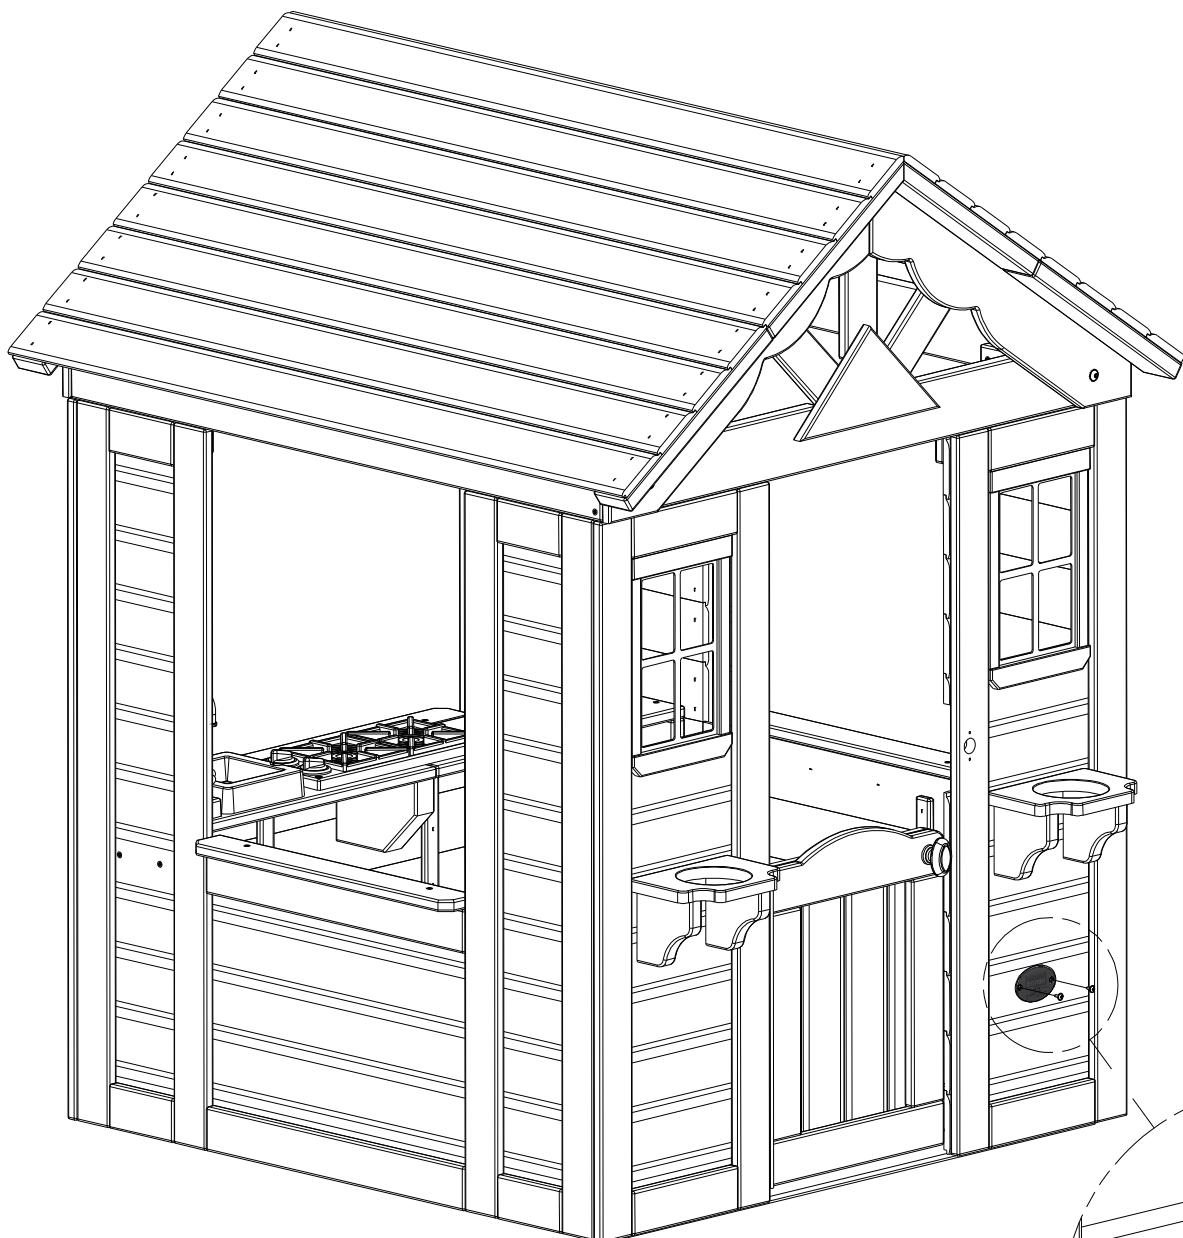


528 (x1)
BYD ID TAG (MEDIUM) AGES 2-10


361 (x2)
SCREW - 7/16"



STEP 27

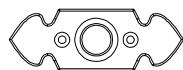

A6P00290 | DOOR BELL PLATE
(x1)

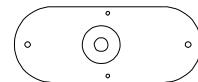



A100174 | DOOR BELL
(x1)



H100537 | SCREW PFH SD
(x2) 8x1




H100624 | SCREW PFH BLK
(x2) 6x5/8

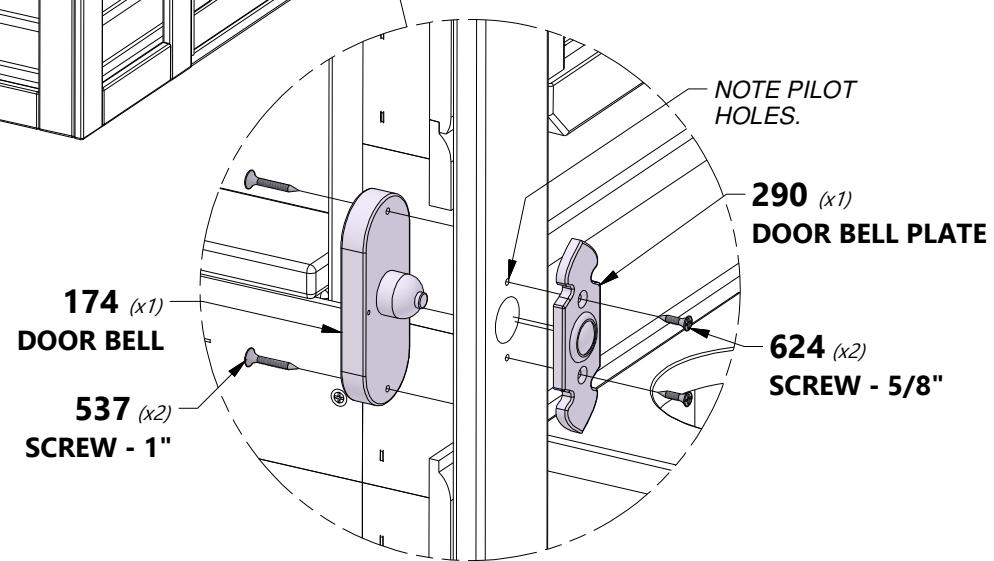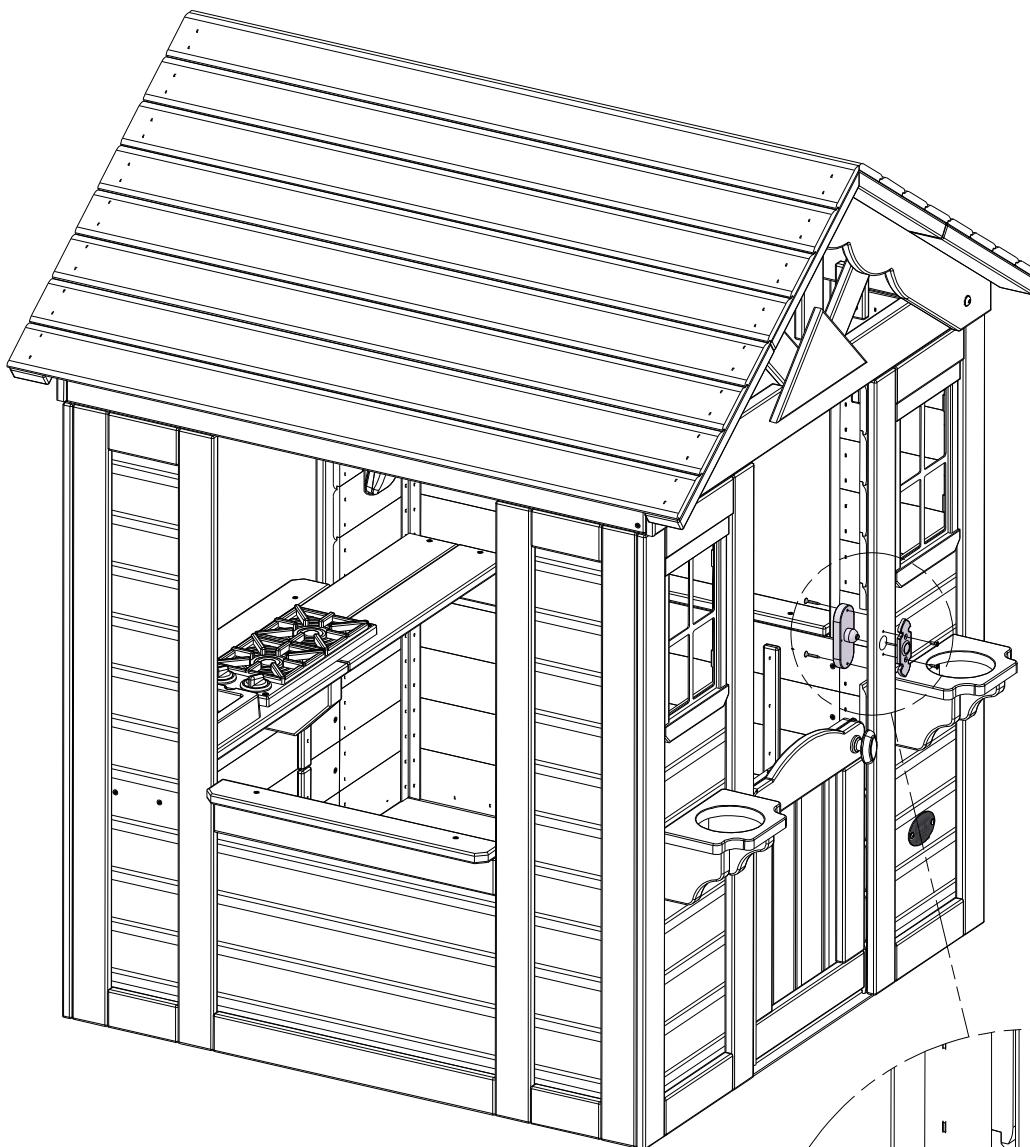



STEP 28

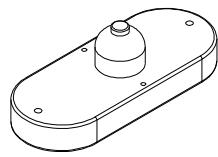

A100174 | DOOR BELL
(x1)


NOTE:

- DO NOT MIX OLD AND NEW BATTERIES.
- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NI-CAD, NI-MH, ETC.) BATTERIES.
- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
- ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
- BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY OR IF THE TOY IS TO BE LEFT UNUSED FOR A LONG TIME.
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.



NOTE:

USING A SCREW DRIVER, REPLACE BATTERIES BY REMOVING SCREW IN BATTERY COVER, REMOVING BATTERY COVER AND FOLLOWING DIRECTIONS FOR BATTERY REPLACEMENT LOCATED ON THE BATTERY COVER.

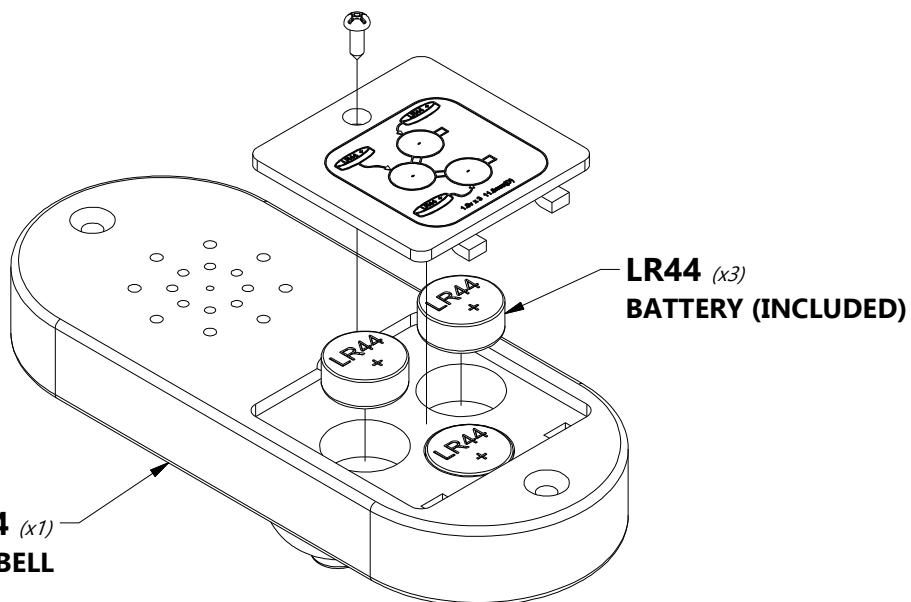

WARNING:

1. KEEP BATTERIES OUT OF THE REACH OF CHILDREN.
2. SWALLOWING MAY LEAD TO SERIOUS INJURY OR DEATH IN AS LITTLE AS 2 HOURS, DUE TO CHEMICAL BURNS AND POTENTIAL PERFORATION OF THE ESOPHAGUS.
3. IF YOU SUSPECT YOUR CHILD HAS SWALLOWED A BUTTON BATTERY, IMMEDIATELY SEEK URGENT MEDICAL ASSISTANCE.
4. EXAMINE DEVICES AND MAKE SURE THE BATTERY COMPARTMENT IS CORRECTLY SECURED, E.G. THAT THE SCREW OR OTHER MECHANICAL FASTENER IS TIGHTENED. DO NOT USE IF COMPARTMENT IS NOT SECURE.
5. DISPOSE OF USED BUTTON BATTERIES IMMEDIATELY AND SAFELY. FLAT BATTERIES CAN STILL BE DANGEROUS.
6. TELL OTHER OF THE RISK ASSOCIATED WITH BUTTON BATTERIES AND HOW TO KEEP THEIR CHILDREN SAFE.