



Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

TIMBER ROCK OUTDOOR GRILL OR GRIDDLE COOK STATION

MODEL #: 2504271, 2504264



WARNING

Cancer and Reproductive Harm
www.P65Warnings.ca.gov



Please visit www.backyarddiscovery.com
For the most up to date assembly manual, to register your product, or to order
replacement parts Para obtener instrucciones en español, visite
www.backyarddiscovery.com



EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP







OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings or concrete pad to attach your structure.


- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.

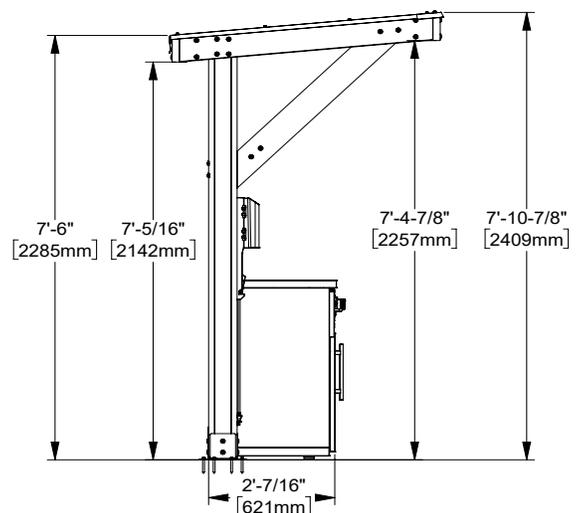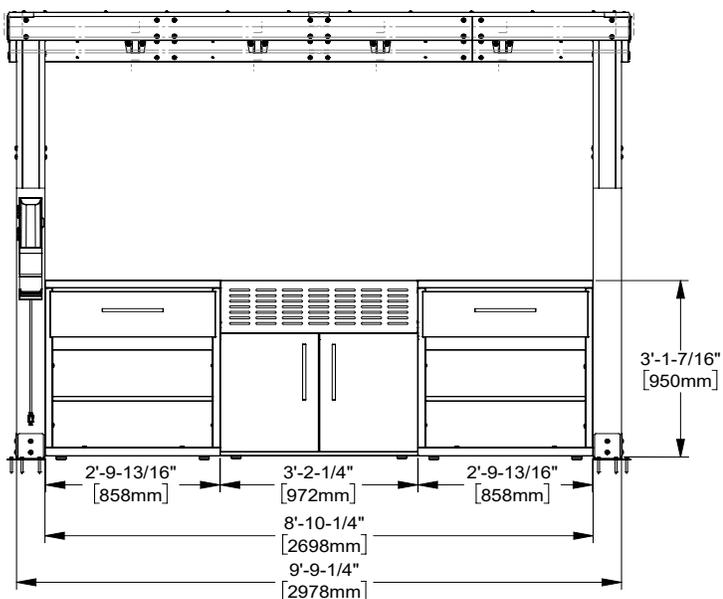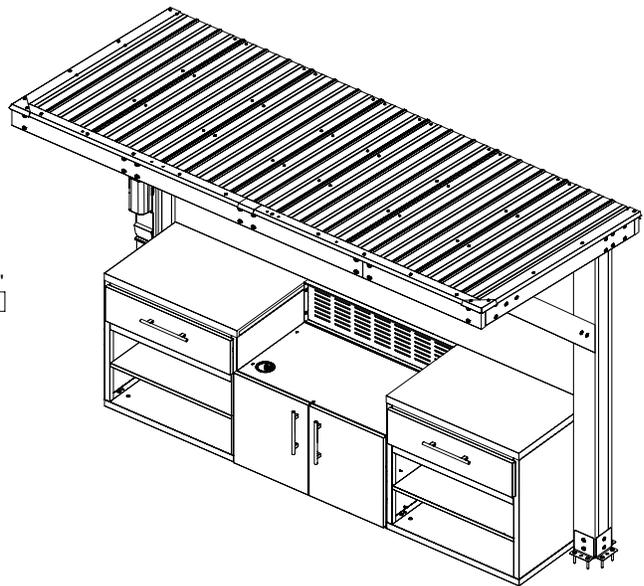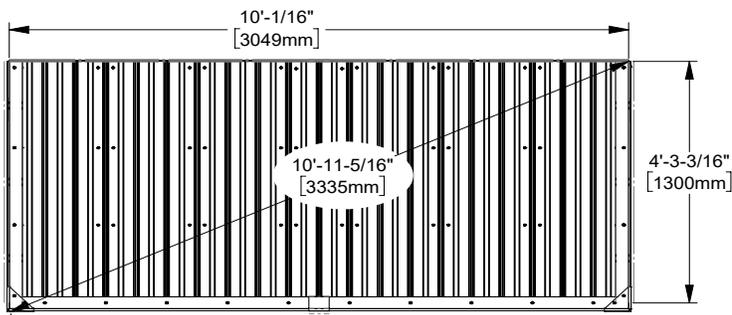


OWNER'S MANUAL - ANCHORING LAYOUT

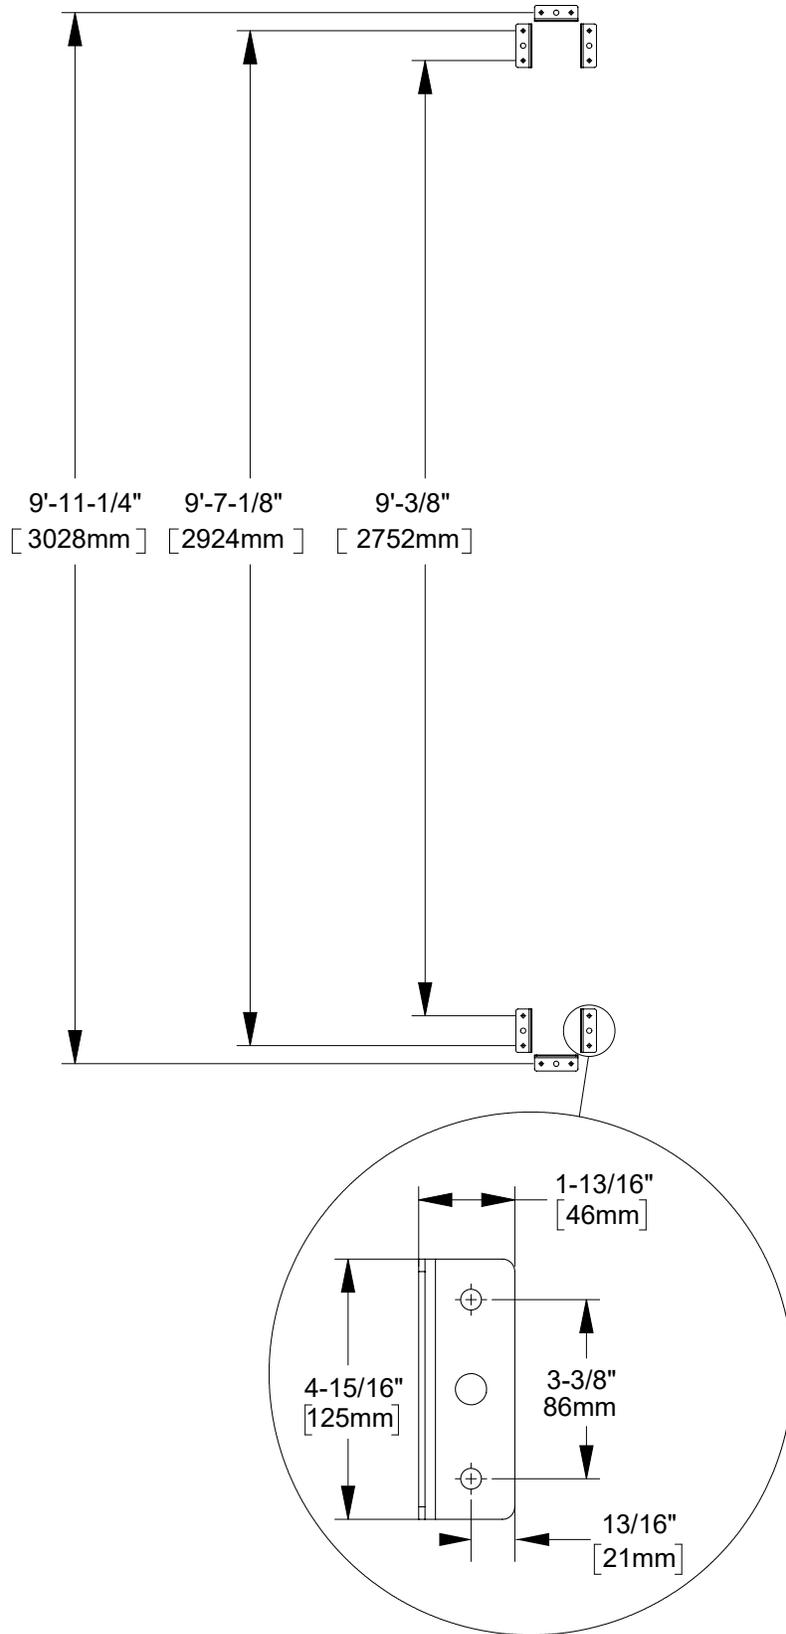


NOTE: DIMENSIONS ARE TO ANCHOR PLATES MOUNTED TO POSTS EXCEPT WHERE NOTED.

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

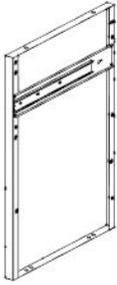

SP01 SIDE PANEL ASSEMBLY - A4M04390
(x1) 33 3/8"x23 3/8"x1 15/16" (49x594x848)

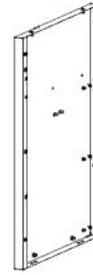


SP02 SIDE PANEL ASSEMBLY - A4M04650
(x1) 33 3/8"x23 3/8"x2 5/8" (67x594x848)




SP03 SIDE PANEL ASSEMBLY - A4M04651
(x1) 33 3/4"x23 3/8"x2 5/8" (67x594x858)




SP04 SIDE PANEL - A4M04406
(x1) 33 3/8"x23 3/8"x1 15/16" (49x594x848)

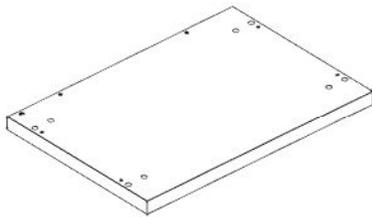


F1 BOTTOM PANEL - A4M04399
(x2) 33 7/8"x23 3/8"x1 3/4" (45x594x860)

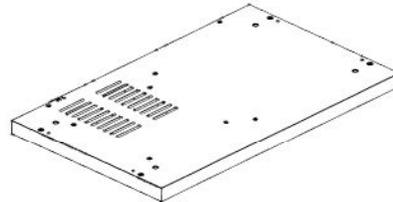


F2 CABINET FLOOR PANEL ASSEMBLY - A4M05581
(x1) 1 3/4"x23 3/8"x38 1/4" (44x594x972)

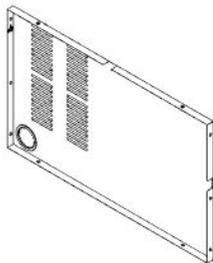


G10 CABINET BACK PANEL ASSEMBLY - A4M03055
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

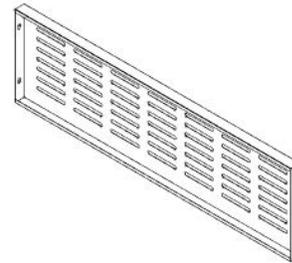

G11 VENTILATION PANEL - A4M03056
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)

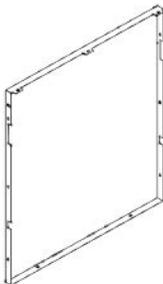


G1 BACK PANEL - A4M04392
(x2) 1 3/4"x31"x33 3/8" (45x788x848)

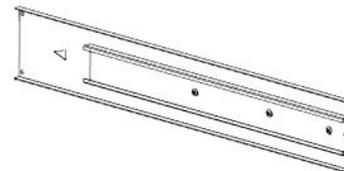


A10 SLIDE BRACKET ASSEMBLY - A4M03083
(x2) 15/16"x3 3/8"x22 5/8" (23x85x575)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

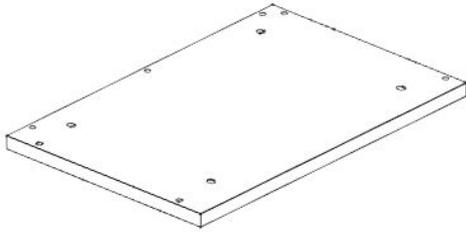


T1 TOP PANEL - A4M05578
(x1) 33 1/8"x23 5/16"x1 1/4" (32x593x842)

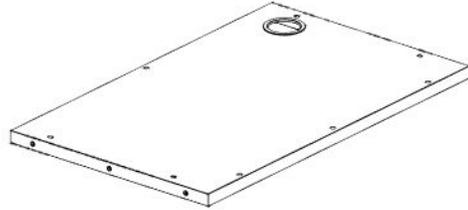


T2 TABLETOP ASSEMBLY - A4M03057
(x1) 1 1/4"x23 3/8"x38 3/16" (32x594x970)

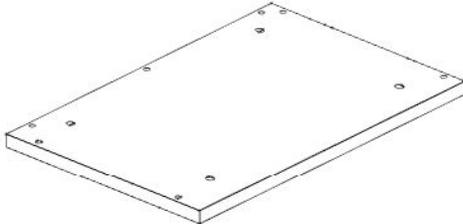


T3 TOP PANEL - A4M05579
(x1) 33 1/8"x23 5/16"x1 1/4" (32x593x842)

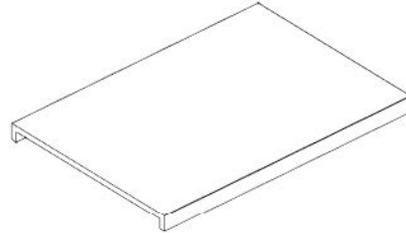

M1 COUNTERTOP - A4M05580
(x2) 33 15/16"x24 15/16"x1 15/16" (50x633x862)

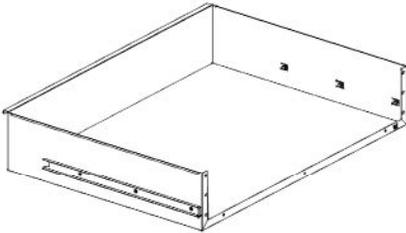


DW01 DRAWER - A4M04397
(x2) 30 9/16"x22 9/16"x5 3/4" (146x573x777)

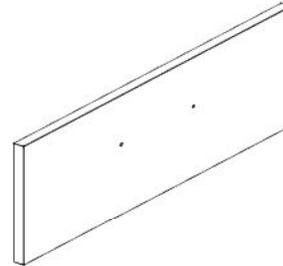


DW02 DRAWER FRONT PANEL - A4M04398
(x2) 32"x9 5/8"x15/16" (24.00x245.00x813.50)




D7 CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

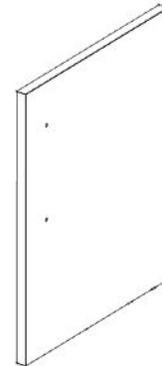

D8 CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

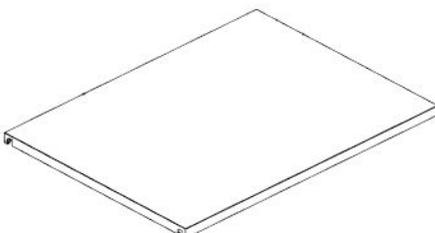


L1 SHELF - A4M04403
(x2) 30 15/16"x23 3/16"x1" (25.00x589.00x786.00)

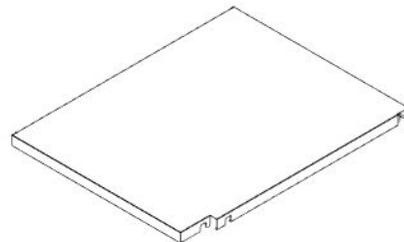

L2 CABINET SHELF - A4M03589
(x1) 23 1/4"x18 3/8"x1" (25.00x467.00x591.00)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

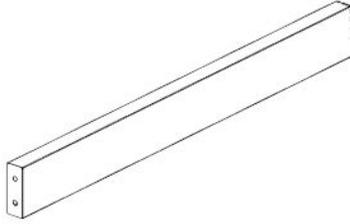


ST1 SUPPORT PANEL - A4M04394
(x4) 1 3/16"x3 3/8"x31" (30x85x788)




S6 CABINET SIDE PANEL ASSEMBLY M - A4M03586
(x1) 23 3/8"x22 7/8"x1 3/8" (35x581x593)



A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

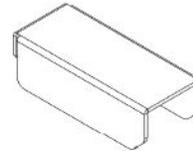


A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

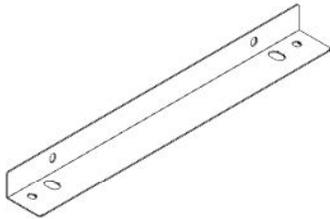


A6 ANGLED BRACKET - A4M03053
(x2) 1 3/8"x1 15/16"x17 1/8" (35x50x435)




A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

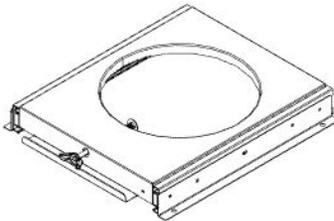


A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

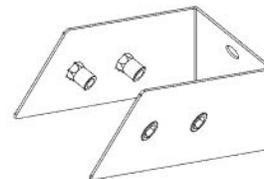

B02 POST BRACKET - A4M04306
(x2) 1/16"x2 11/16"x9 1/2" (1.50x71x241)

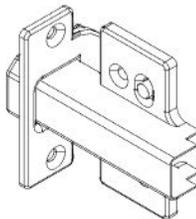


A4M03025 FULL OVERLAY HINGE
(x4)

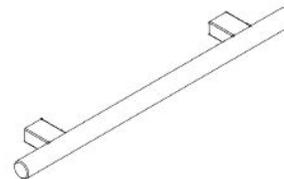


H2 STAINLESS STEEL HANDLE - A4M03024
(x4) 5/8"x1 9/16"x11 13/16" (16x40x300)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

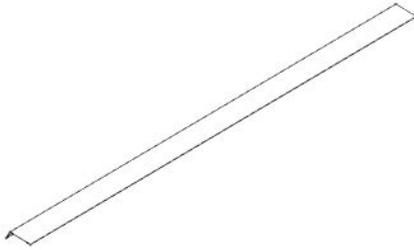


4383 ROOF EDGE TRIM - A4M04383
(x2) 1/64"x2 7/8"x51 7/16" (1x74x1306)

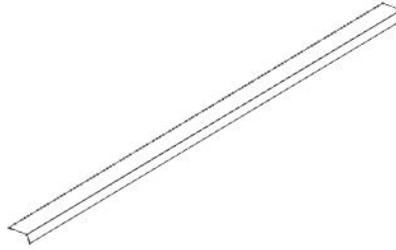


4384 ROOF EDGE TRIM - A4M04384
(x2) 1/64"x2 7/8"x58 1/16" (1x74x1474)

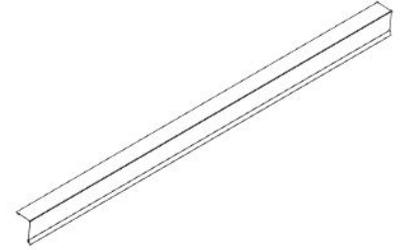


4386 DRIP EDGE - A4M04386
(x2) 1 3/4"x2 1/16"x59 13/16" (44x52x1520)

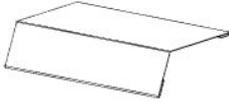


4385 ROOF EDGE TRIM SPLICE - A4M04385
(x1) 1/64"x3"x3 15/16" (1x76x100)

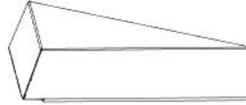


696 CORNER SPLICE TRIM - A4M02696
(x2) 1 1/8"x1 1/8"x5 1/8" (28x28x131)

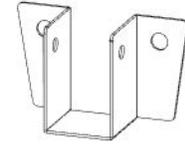


1787 RAFTER BRACKET - A4M01787
(x8) 1 5/8"x2 7/16"x4" (42x62x101)

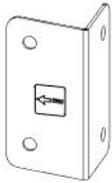

5399 L BRACKET RIGHT - A4M05399
(x2) 2 5/8"x2 5/8"x5" (66x66x127)

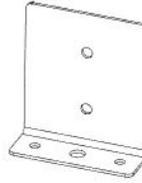


977 POST ANCHORING PLATE
WITH FLANGE - A4M00977
(x6) 1/8"x4 15/16" (3x125x141)

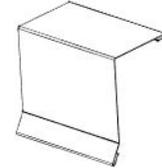

5428 DRIP EDGE SPLICE - A4M05428
(x1) 1 7/8"x2 3/16"x3 15/16" (48x55x100)



4315 29GA SHEETING - A4M04315
(x6) 0.02x18 7/8"x52 1/2" (0.5x480x1334)

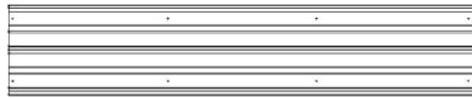


4649 29GA SHEETING - A4M04649
(x1) 1/4"x13"x52 1/2" (0.5x330x1334)




2158 BYD ID TAG PATIO - A4M02158
(x1) 1/8"x2"x2 13/16" (3.1x51x71)



4147 BEAM METAL BRACKET - A4M04147
(x2) 1/16"x5 1/8"x64 13/16" (1.5x130x1646)

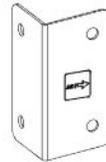


5401 L BRACKET LEFT - A4M05401
(x2) 2 5/8"x2 5/8"x5" (66x66x127)

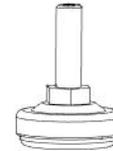


3150 ADJUSTABLE FOOT - A4M03150
(x12) 1 15/16"x2 5/8" (x49x66)

OWNER'S MANUAL - PARTS IDENTIFICATION

PLASTIC COMPONENTS (NOT TO SCALE)

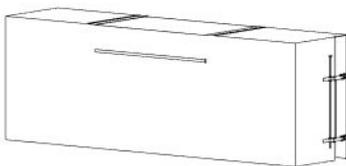

A6P01523 GRILL COVER
(x1)

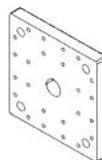


1226 5.5x5.5 POST FOOT - A6P01226
(x2) 5/8"x5 1/2"x5 1/2" (16x140x140)




9205413 ELECTRICAL ENCLOSURE
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


WOOD COMPONENTS (NOT TO SCALE)

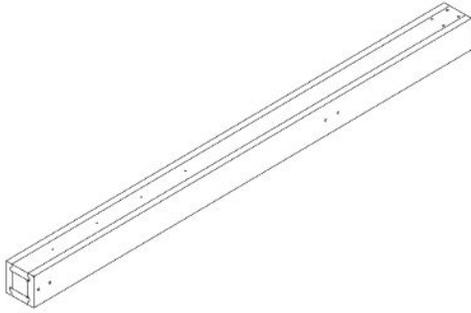


P01 POST - W2A04543
(x2) 5 1/2"x5 1/2"x89 1/2" (140x140x2274)

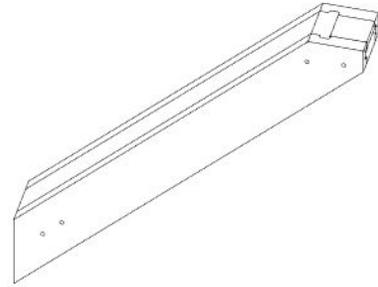


P02 45 POST - W2A04553
(x2) 5 1/2"x5 1/2"x48" (140x140x1220)

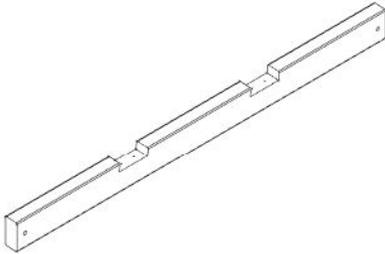

E1 RAFTER - W4L20960
(x4) 1 7/16"x3 3/8"x46 9/16" (36x86x1183)

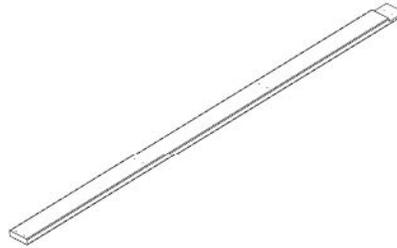

H03 PURLIN - W4L21185
(x2) 15/16"x3 3/8"x71 13/16" (24x86x1824)

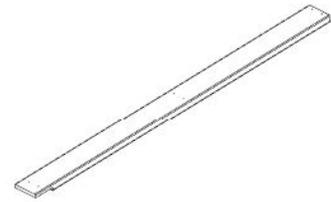

H05 PURLIN - W4L21186
(x2) 15/16"x3 3/8"x48 1/8" (24x86x1222)




D1 BEAM - W4L20951
(x1) 1 7/16"x5 1/4"x30 5/16" (36x134x770)



D2 BEAM - W4L20952
(x1) 1 7/16"x5 1/4"x89 3/4" (36x134x2280)



D3 BEAM - W4L20953
(x1) 1 7/16"x5 1/4"x28 7/8" (36x134x734)

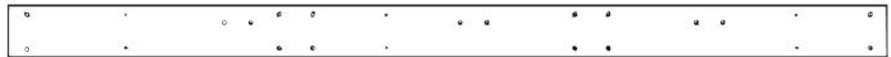

D4 BEAM - W4L20954
(x1) 1 7/16"x5 1/4"x88 3/8" (36x134x2244)



D5 BEAM - W4L20955
(x1) 1 7/16"x5 1/4"x30 5/16" (36x134x770)



D6 BEAM - W4L20956
(x1) 1 7/16"x5 1/4"x89 3/4" (36x134x2280)



D7 BEAM - W4L20957
(x1) 1 7/16"x5 1/4"x28 7/8" (36x134x734)



D8 BEAM - W4L20958
(x1) 1 7/16"x5 1/4"x88 3/8" (36x134x2244)



D9 SIDE BEAM - W4L20959
(x1) 1 7/16"x5 1/4"x49 7/8" (36x134x1266)



D10 SIDE BEAM - W4L21184
(x1) 1 7/16"x5 1/4"x49 7/8" (36x134x1266)




J1 CLEAT - W4L21183
(x2) 15/16"x2 3/8"x23 15/16" (24x60x680)

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS




H100653 | NUT LOCK
(x8) | 1/4 BLK

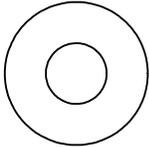

H100630 | WASHER FLAT
(x12) | 8x19 BLK

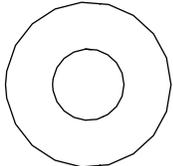


H100770 | WASHER FLAT
(x16) | 9.5x22 BLK

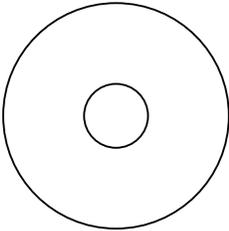

H101316 | WASHER FLAT
(x8) | 8.5x30 BLK




H100195 | BOLT WH
(x24) | 5/16x2 3/4 BLK

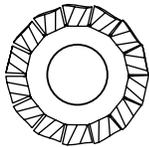


H100198 | WASHER LOCK EXT
(x64) | 8x19 BLK




H100200 | SCREW PFH
(x8) | 8x1 1/2 BLK

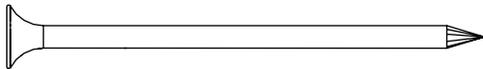


H100201 | SCREW PFH
(x16) | 8x2 1/2 BLK

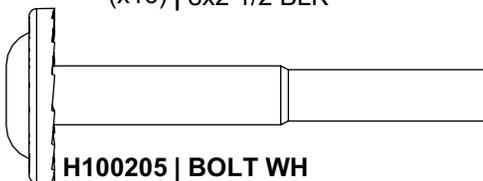


H100205 | BOLT WH
(x8) | 5/16x2 1/4 BLK

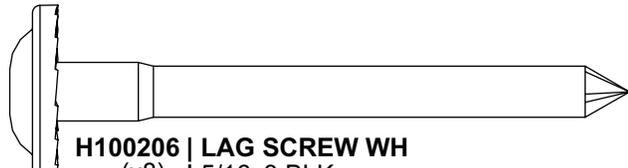


H100206 | LAG SCREW WH
(x8) | 5/16x3 BLK

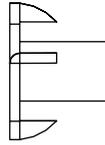

H100379 | T-NUT
(x52) | 5/16 BLK

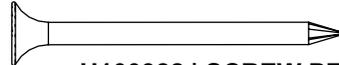


H100382 | SCREW PFH
(x24) | 8x1 3/4 BLK

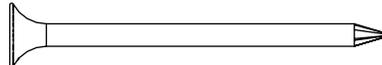


H100391 | SCREW PFH
(x6) | 8x2 BLK




H100415 | BOLT WH
(x8) | 5/16x3 3/4

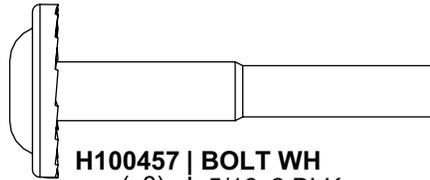


H100457 | BOLT WH
(x8) | 5/16x2 BLK

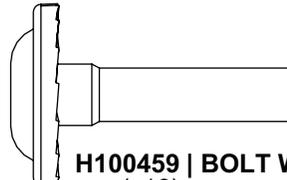

H100459 | BOLT WH
(x16) | 5/16x1 1/4 BLK

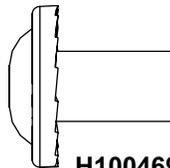

H100469 | NUT BARREL WH
(x4) | 5/16x5/8 BLK

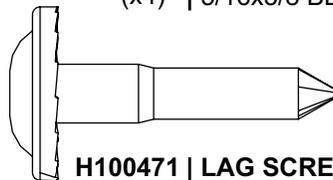

H100471 | LAG SCREW WH
(x4) | 5/16x1 1/2 BLK




H100479 | NUT LOCK
(x20) | 5/16 BLK

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS




H101185 | PHILLIPS FLAT HEAD
(x24) | 8-32x.5

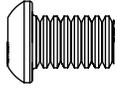

H101292 | TORX PAN HEAD
(x12) | 1/4-20x13/32"

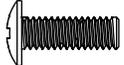


H101289 | PAN HEAD SCREW
(x33) | 8-32x1/2" SS

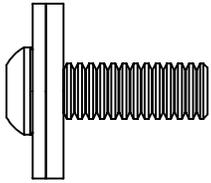


H101202 | TORX PAN HEAD
(x70) | 1/4-20x3/4 ASSY




H101307 | SHOULDER BOLT
(x8) | 8-32x30mm SS

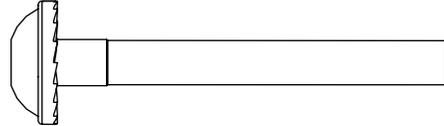


H100488 | BOLT WH
(x8) | 1/4x2 BLK

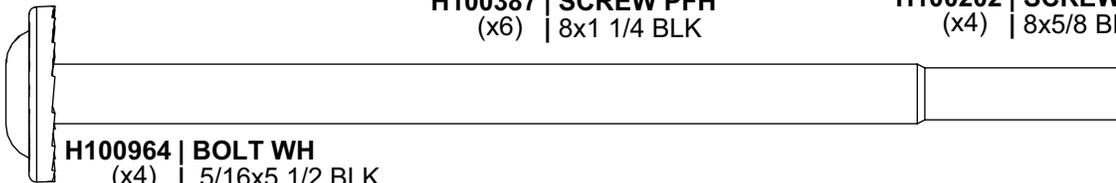


H100964 | BOLT WH
(x4) | 5/16x5 1/2 BLK

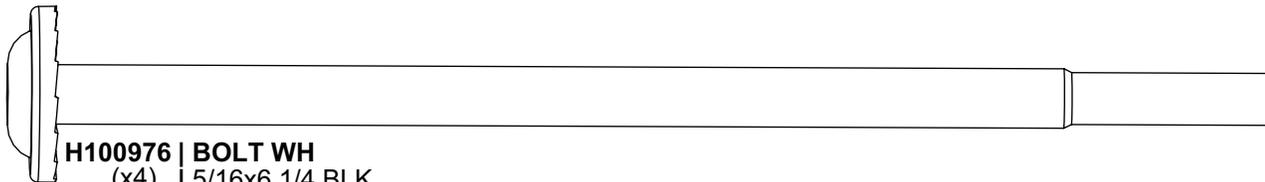


H100976 | BOLT WH
(x4) | 5/16x6 1/4 BLK

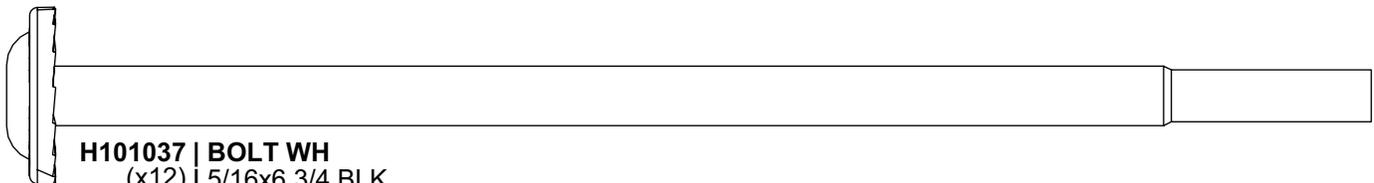


H101037 | BOLT WH
(x12) | 5/16x6 3/4 BLK

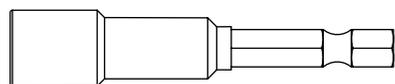


H101106 | SOCKET DRIVER
(x1) |

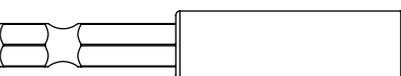


H101100 | MAGNETIC DRIVER
(x1) |

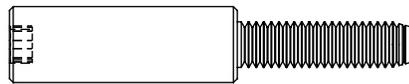


H101103 | TORX SOCKET SCREW
(x18) |

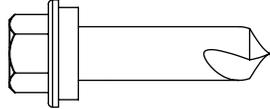


H101116 | SCREW SELF TAPPING
(x20) | 1/4x1

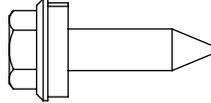


H101117 | SCREW WOODGRIP
(x56) | 10-16 x 3/4

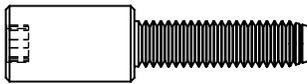


H101132 | TORX SOCKET SCREW
(x8) |

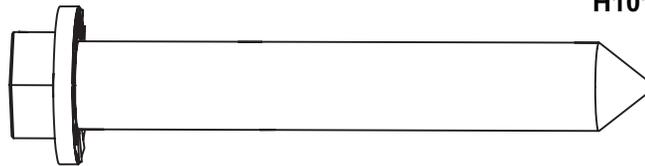


H101165 | CONCRETE ANCHOR
(x12) | 3/8x3" BLK

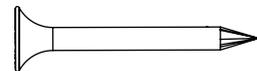


H100387 | SCREW PFH
(x6) | 8x1 1/4 BLK

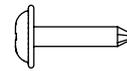


H100202 | SCREW PWH
(x4) | 8x5/8 BLK

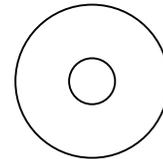


H101053 | STEEL WASHER
(x8) | 6x20

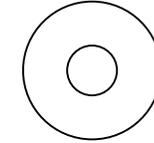


H101054 | SEALANT WASHER
(x8) | 6.5x18

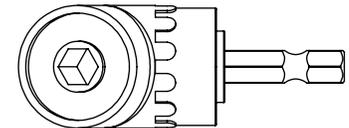


**H101114 | RIGHT ANGLE
DRILL ADAPTER**
(x1) |

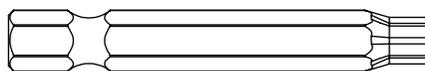

H100147 | TORX BIT
(x1) | T-30

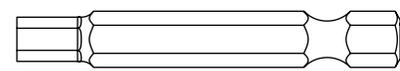

H101294 | HEX DRIVER
(x1) |

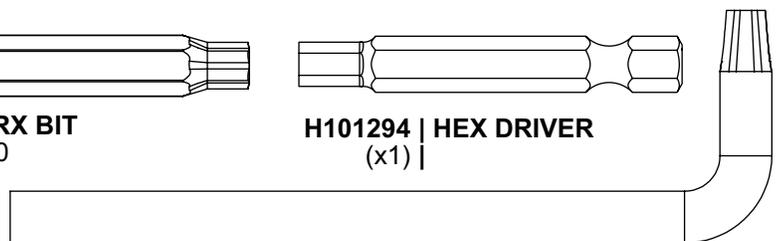

H100114 | TORX BIT
(x1) | T-30

PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the parts and hardware.


METAL PARTS:

- Organize metal parts by the three-digit, alpha-numeric number stamped on each part (ex. P01).
- If there are multiple parts with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the parts or on the end of the parts.
- Allow yourself plenty of room - the parts can take up a significant amount of space.

WOOD PARTS:


- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY PART OR STEP NUMBER.

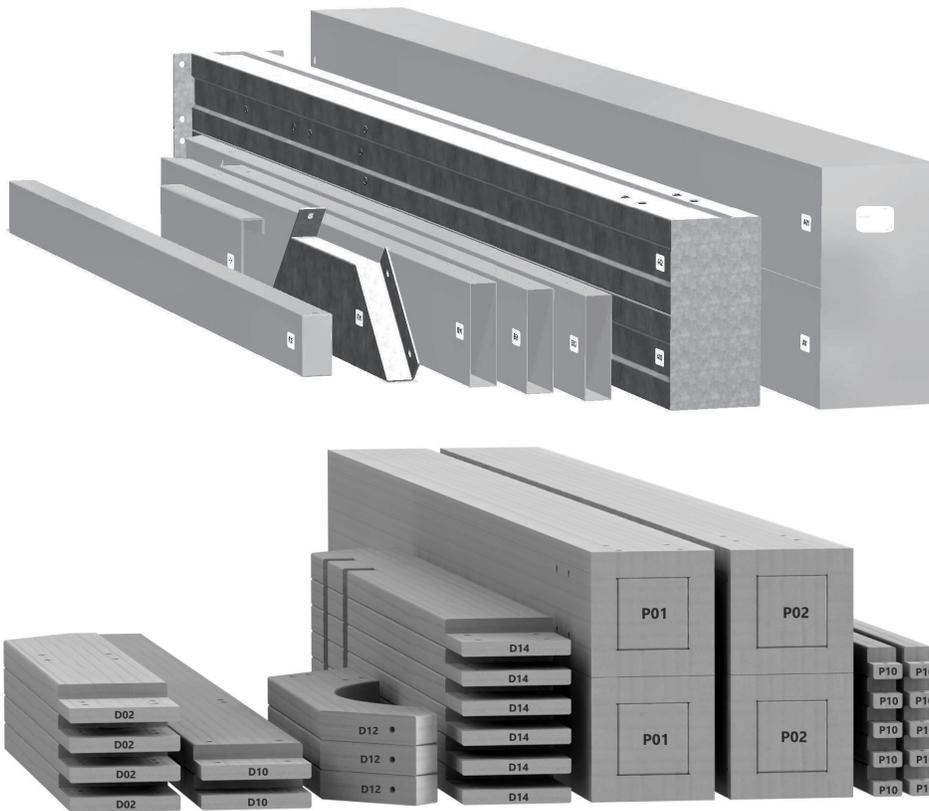

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (e.g. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

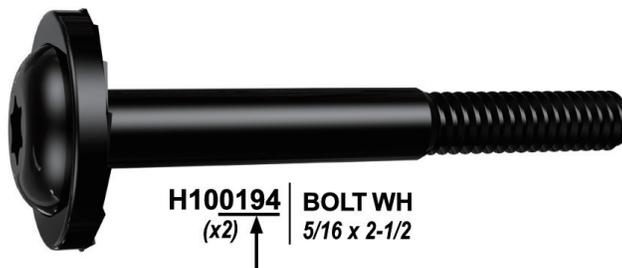

PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or
Electric Drill




Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" &
7/16" Drill Bits



Phillips Screw Driver

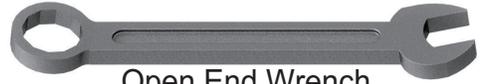

Open End Wrench
7/16"



3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets 1/2" & 7/16"
Deep Sockets




Claw Hammer



Rubber Mallet -
Optional



Tape Measure

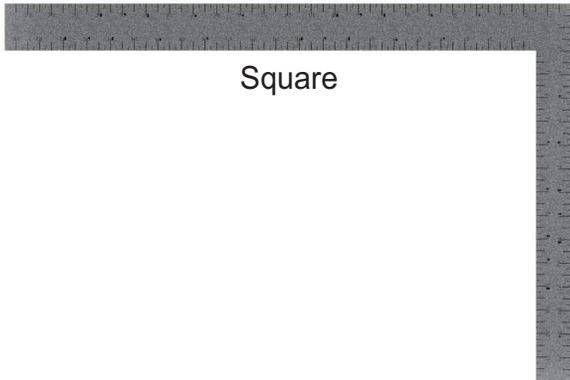

Square




Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD


There are several types of assembly instructions available to you.

1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)

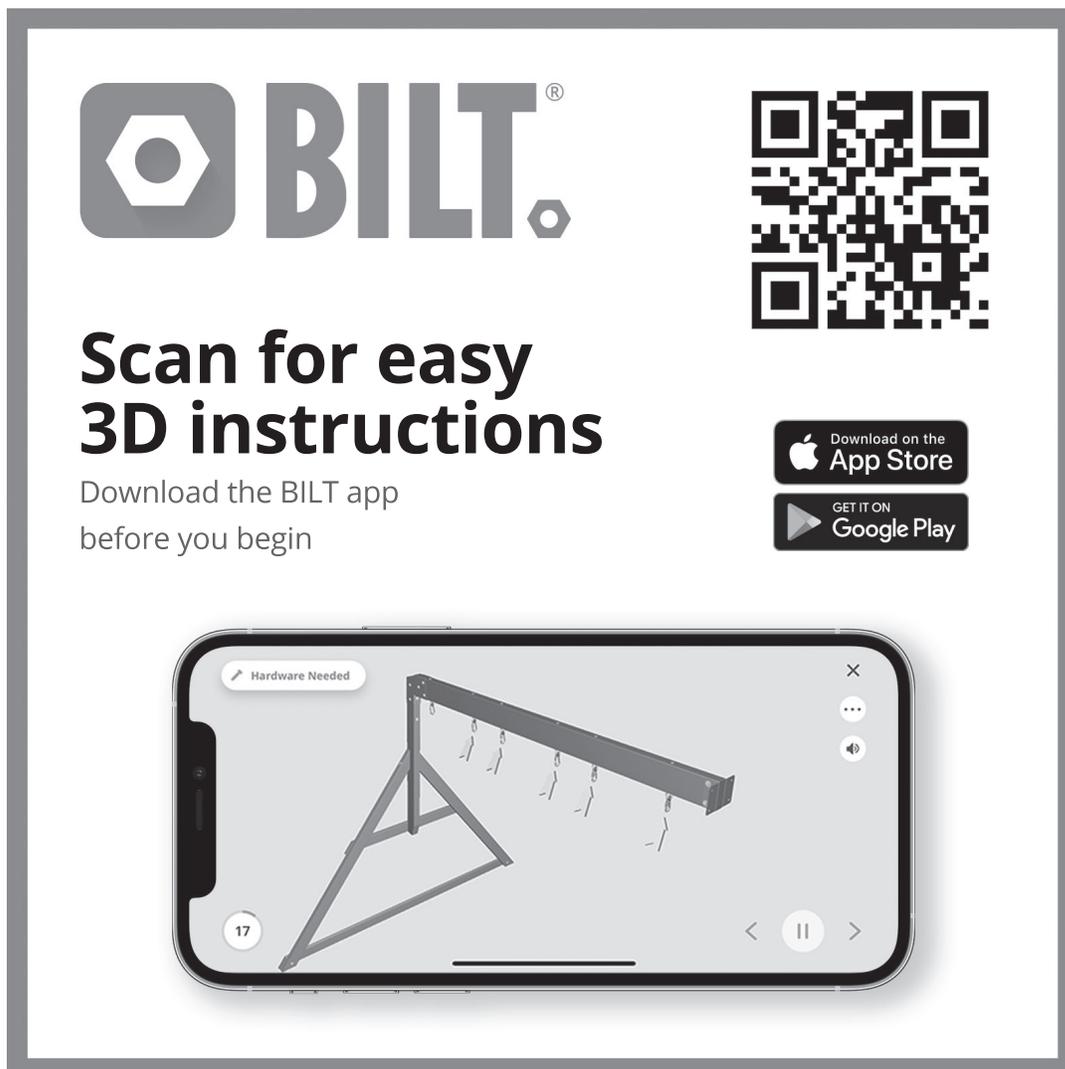

The graphic is a promotional banner for the BILT app. It features the BILT logo on the left, which consists of a hexagonal icon with a smaller hexagon inside, followed by the word "BILT." in a bold, sans-serif font with a registered trademark symbol. To the right of the logo is a large QR code. Below the logo and QR code, the text "Scan for easy 3D instructions" is written in a large, bold font. Underneath this, it says "Download the BILT app before you begin". To the right of this text are two buttons: "Download on the App Store" and "GET IT ON Google Play". At the bottom of the graphic is a smartphone displaying the BILT app interface. The app screen shows a 3D model of a metal frame with a horizontal bar and several hanging components. The interface includes a "Hardware Needed" button at the top left, a close button (X) at the top right, a menu button (three dots) and a volume icon below it, and navigation buttons (back, play/pause, forward) at the bottom. A page number "17" is visible in the bottom left corner of the app screen.

STEP 1A - BOTTOM PANEL ASSEMBLY

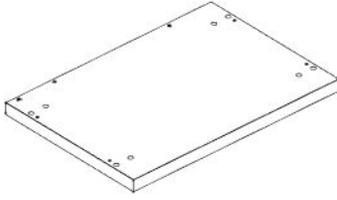


F1 BOTTOM PANEL - A4M04399
(x2) 33 7/8"x23 3/8"x1 3/4" (45x594x860)




3150 ADJUSTABLE FOOT - A4M03150
(x8) 1 15/16"x2 5/8" (x49x66)

- ATTACH ADJUSTABLE FOOT TO BOTTOM PANEL.
- USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.
- REPEAT THIS STEP 2 TIMES.

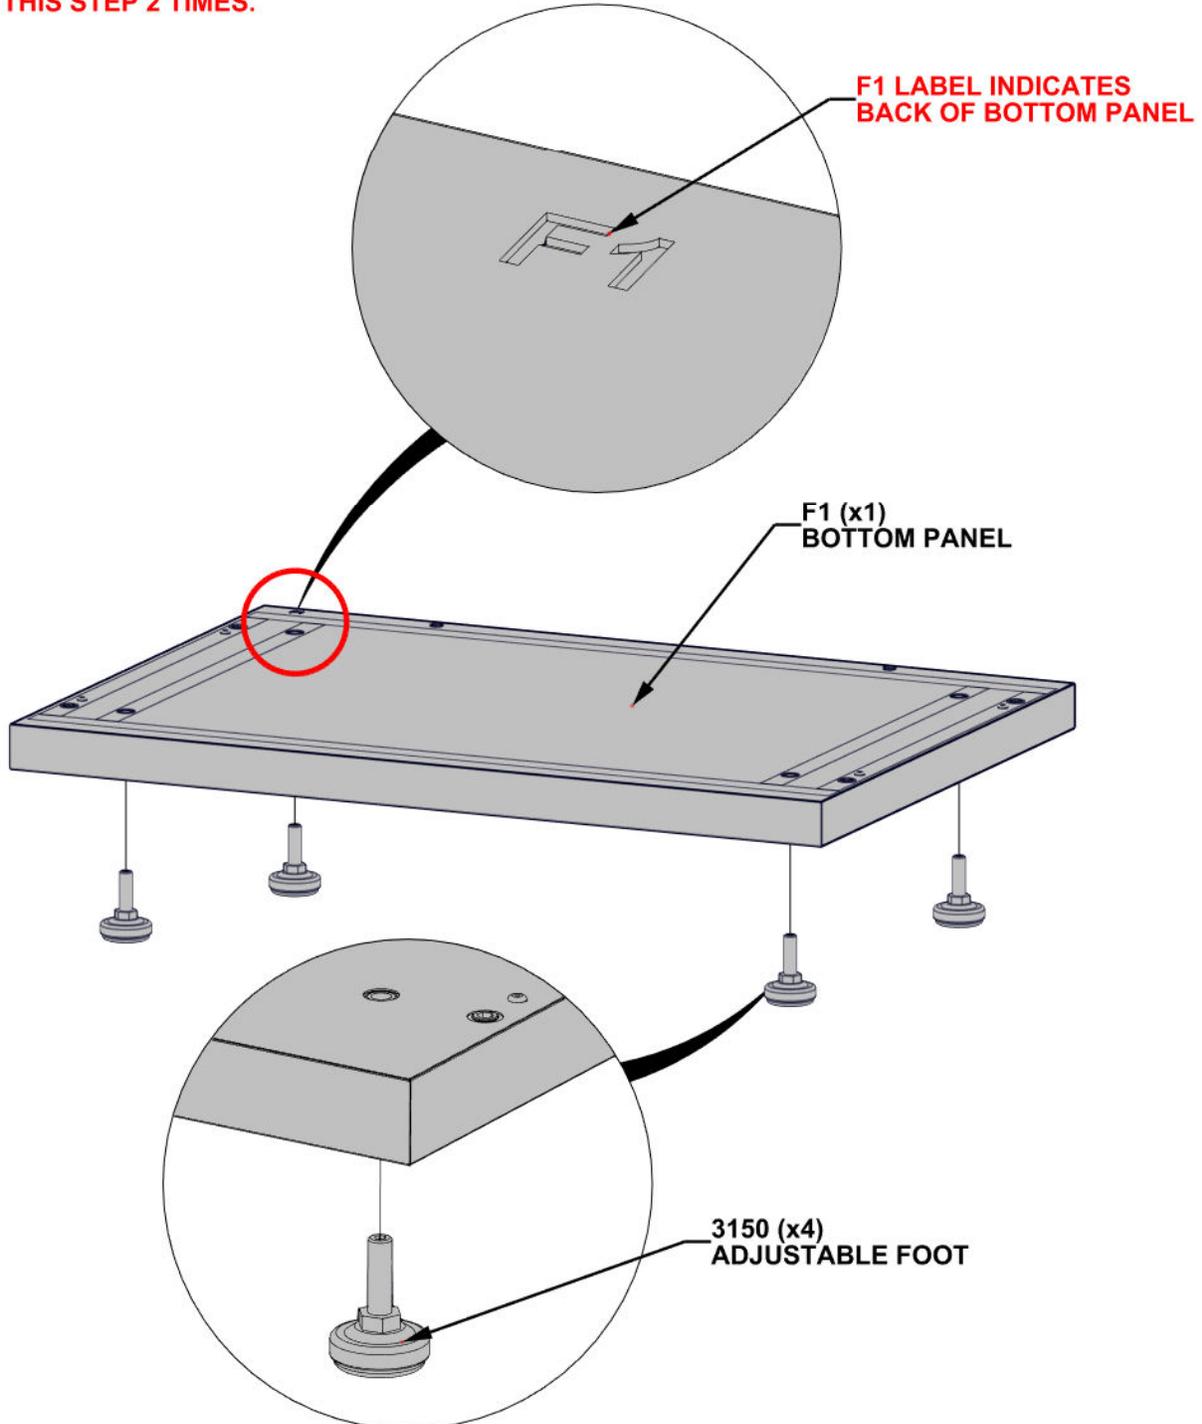


STEP 1B - LEFT CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

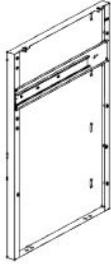


SP01 SIDE PANEL ASSEMBLY - A4M04390
(x1) 33 3/8"x23 3/8"x1 15/16" (49x594x848)

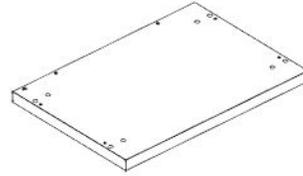



BOTTOM PANEL ASSEMBLY FROM STEP 1A

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR COOKING STATION WILL BE.

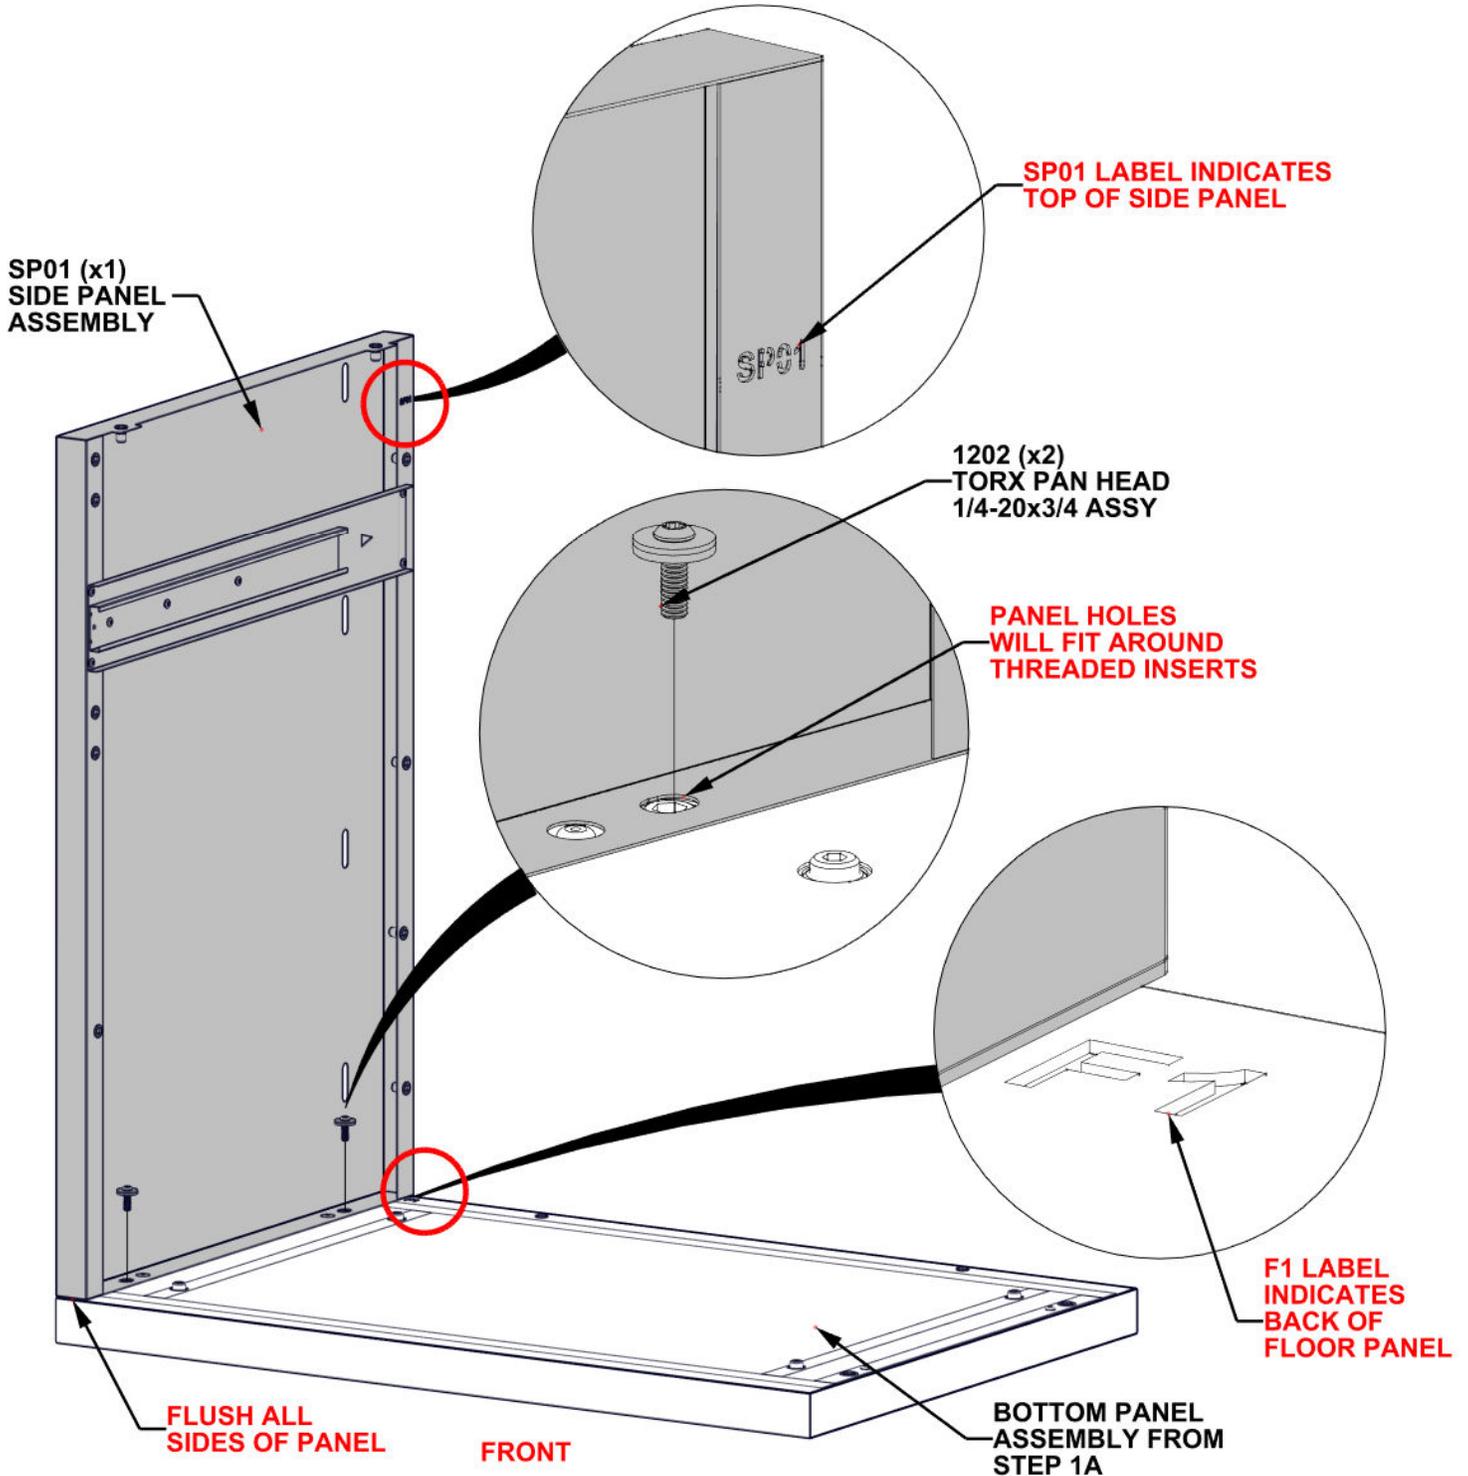


STEP 2A - LEFT CABINET ASSEMBLY

Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

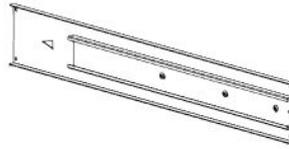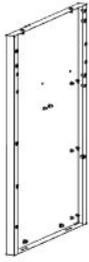


SP02 SIDE PANEL ASSEMBLY - A4M04650
 (x1) 33 3/8"x23 3/8"x2 5/8" (67x594x848)

A10 SLIDE BRACKET ASSEMBLY - A4M03083
 (x1) 15/16"x3 3/8"x22 5/8" (23x85x575)

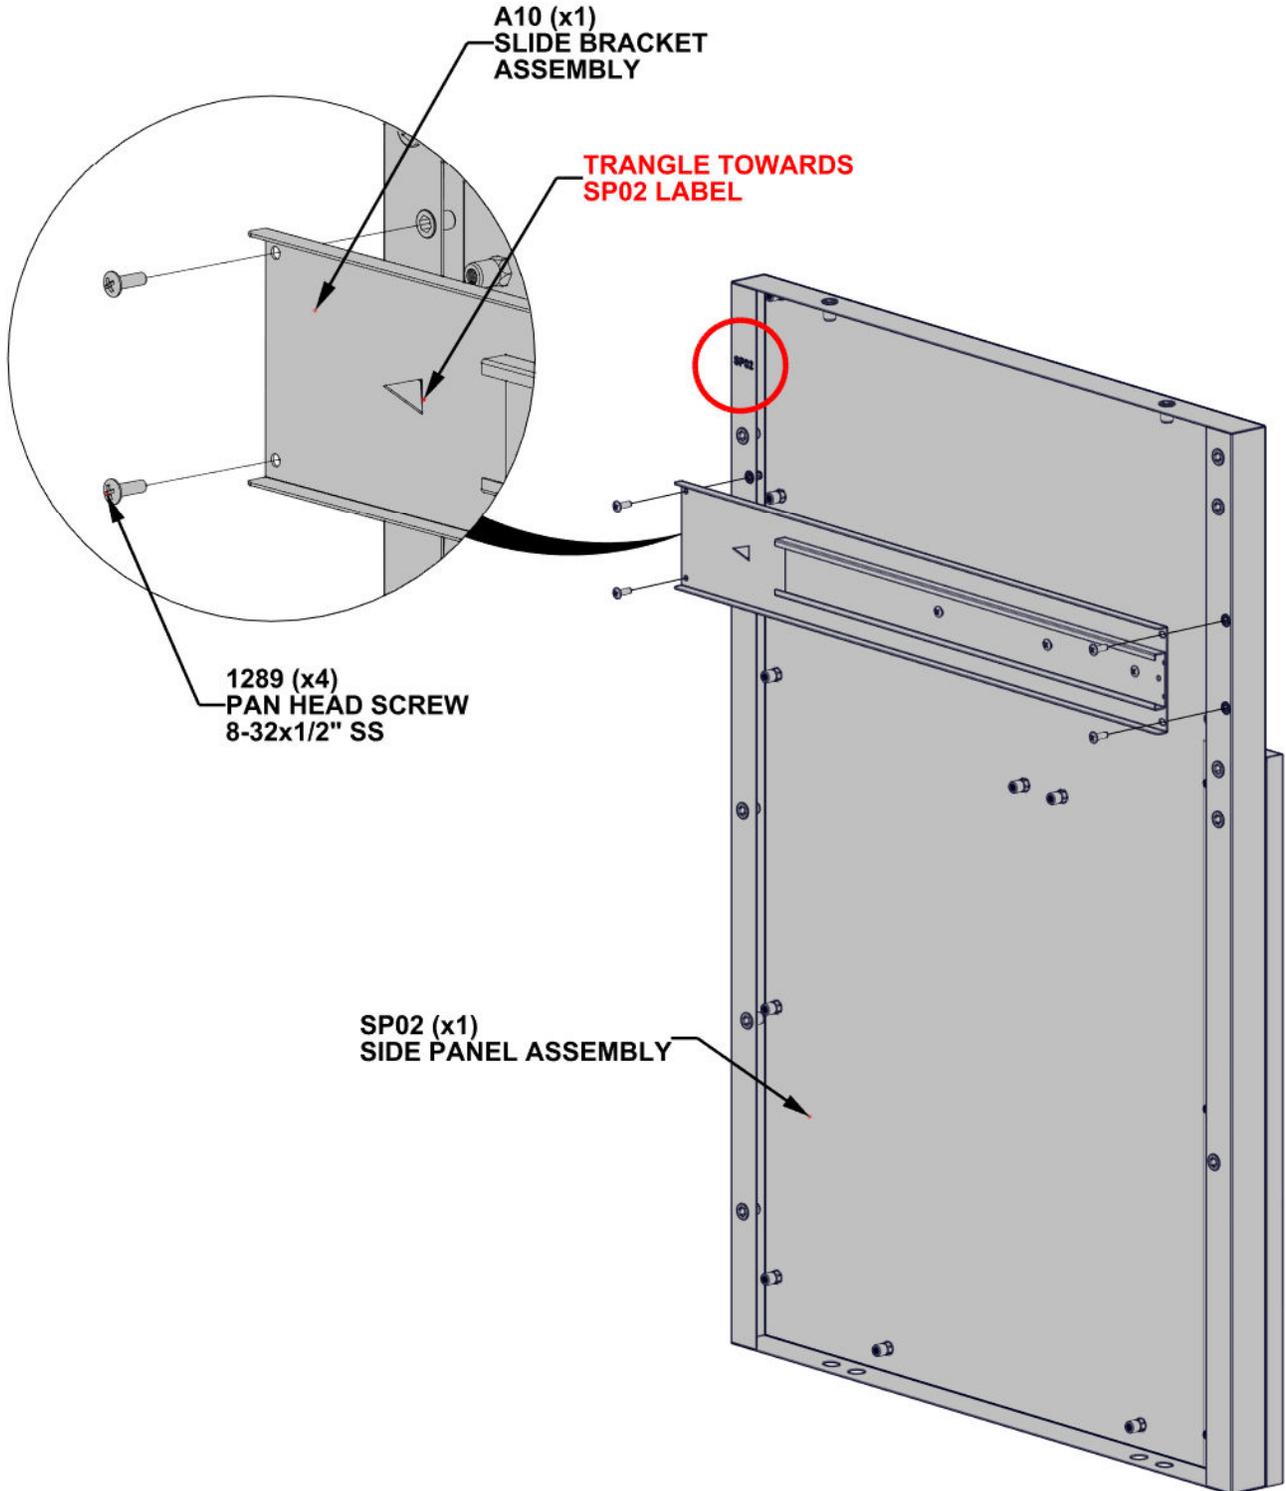


STEP 2B - LEFT CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

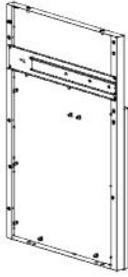


LEFT CABINET ASSEMBLY FROM STEP 2A

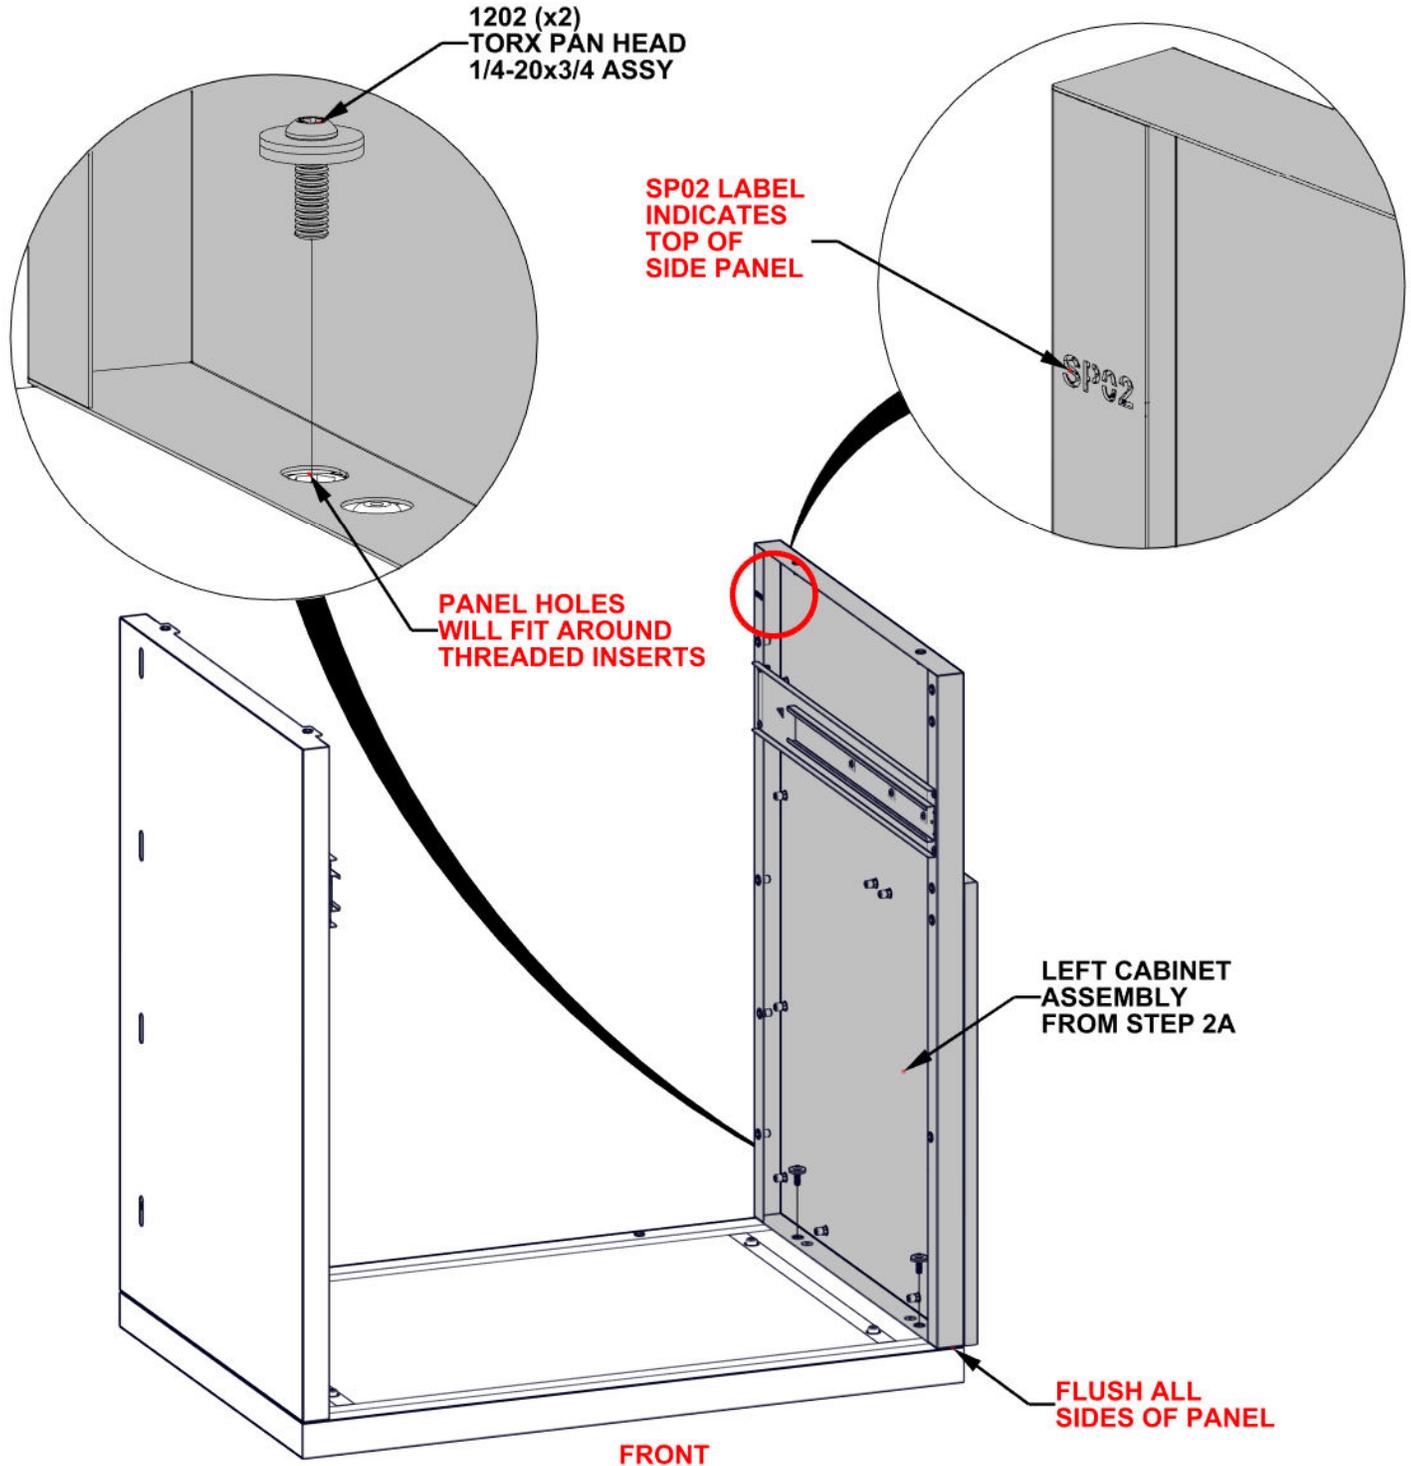


STEP 3 - LEFT CABINET ASSEMBLY


Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

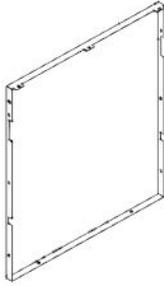


G1 BACK PANEL - A4M04392
(x1) 1 3/4"x31"x33 3/8" (45x788x848)

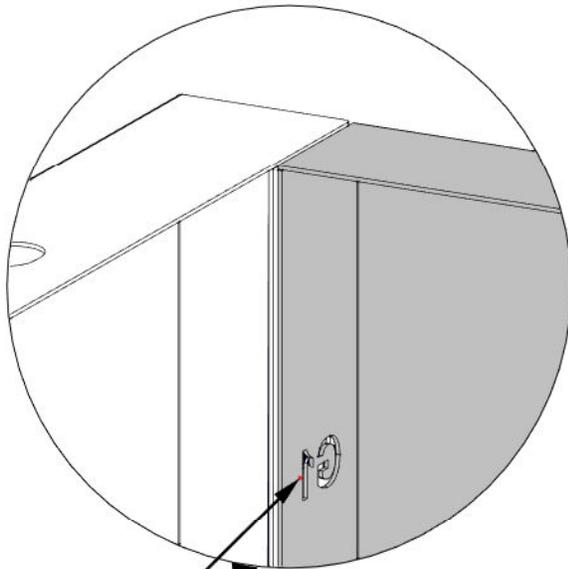

G1 LABEL INDICATES TOP OF BACK PANEL

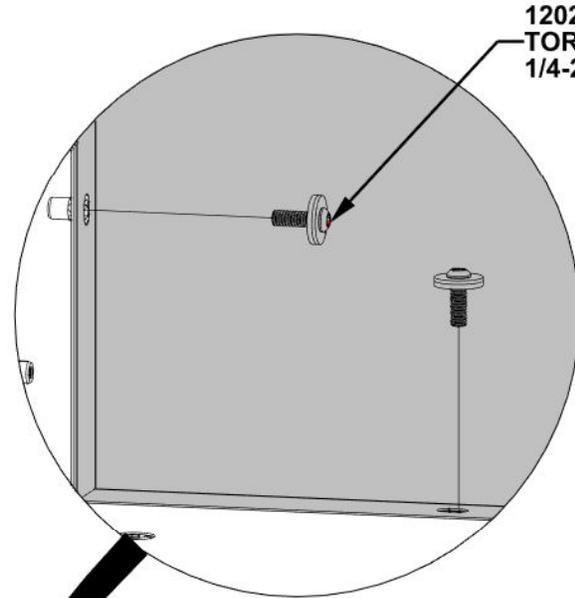


1202 (x8)
TORX PAN HEAD
1/4-20x3/4 ASSY

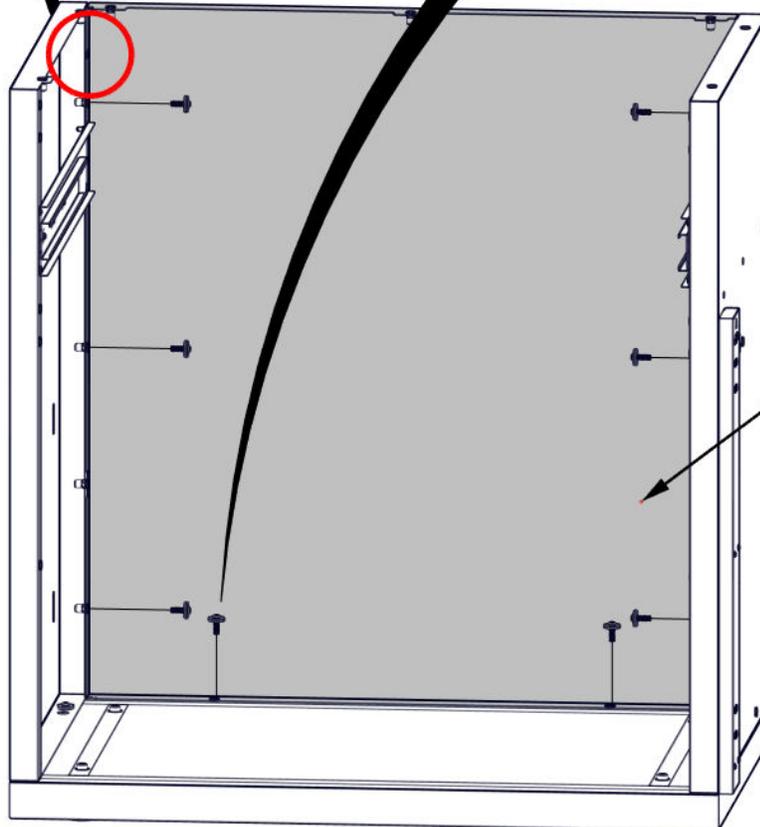

G1 (x1)
BACK PANEL



STEP 4 - LEFT CABINET ASSEMBLY

Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

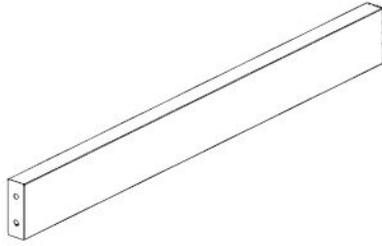


ST1 SUPPORT PANEL - A4M04394
(x2) 1 3/16"x3 3/8"x31" (30x85x788)

- HARDWARE ATTACHES ON INSIDE OF CABINET.

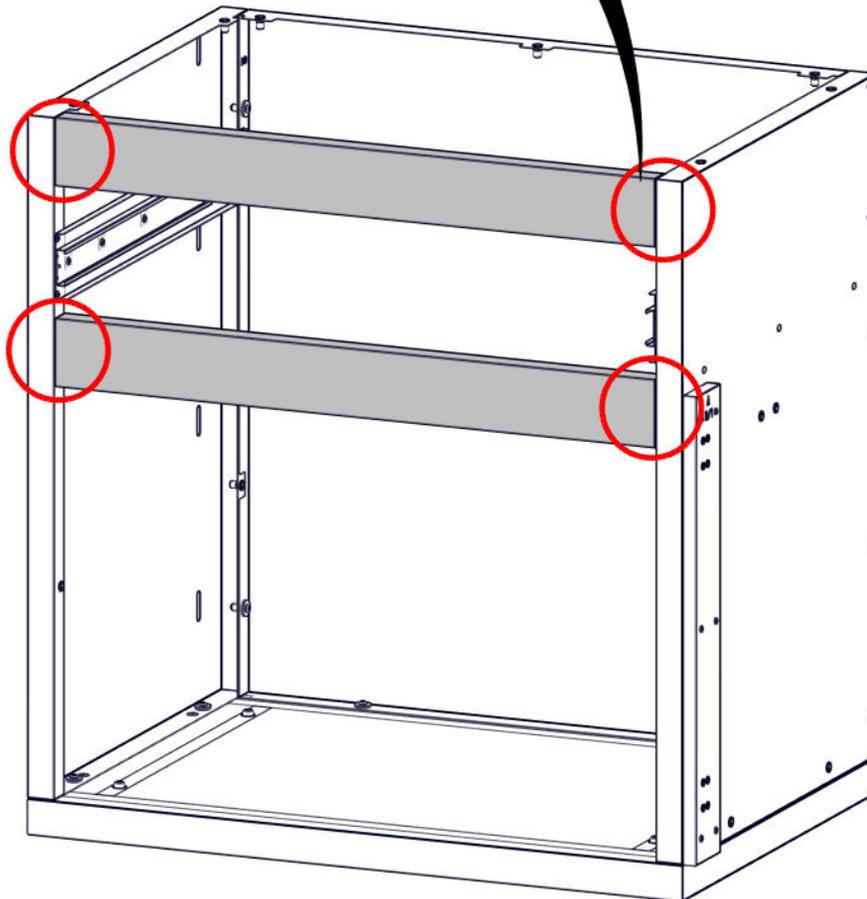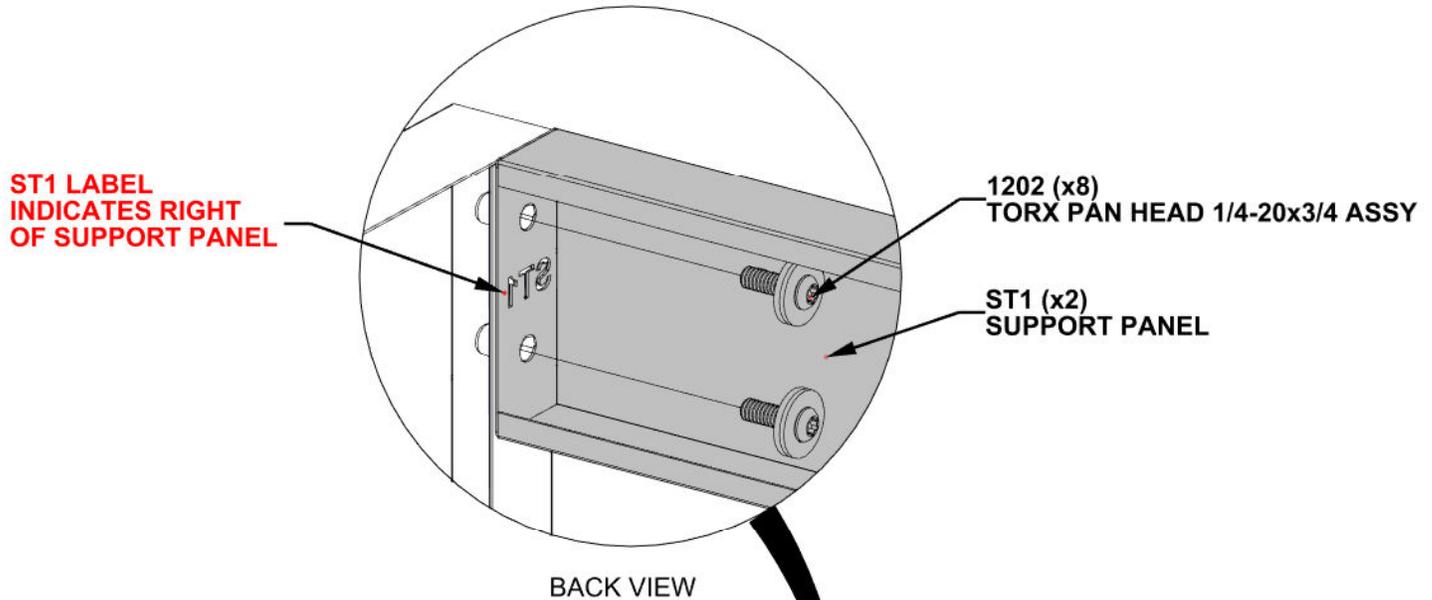


STEP 5 - LEFT CABINET ASSEMBLY

Qty	PartNo	Description
7	H101103	TORX SOCKET SCREW 1/4-20

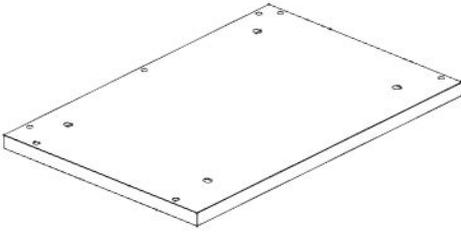


T1 TOP PANEL - A4M05578
(x1) 33 1/8"x23 5/16"x1 1/4" (32x593x842)

- ALIGN HOLES IN TOP PANEL WITH THREADED INSERTS IN SIDE AND BACK PANELS.

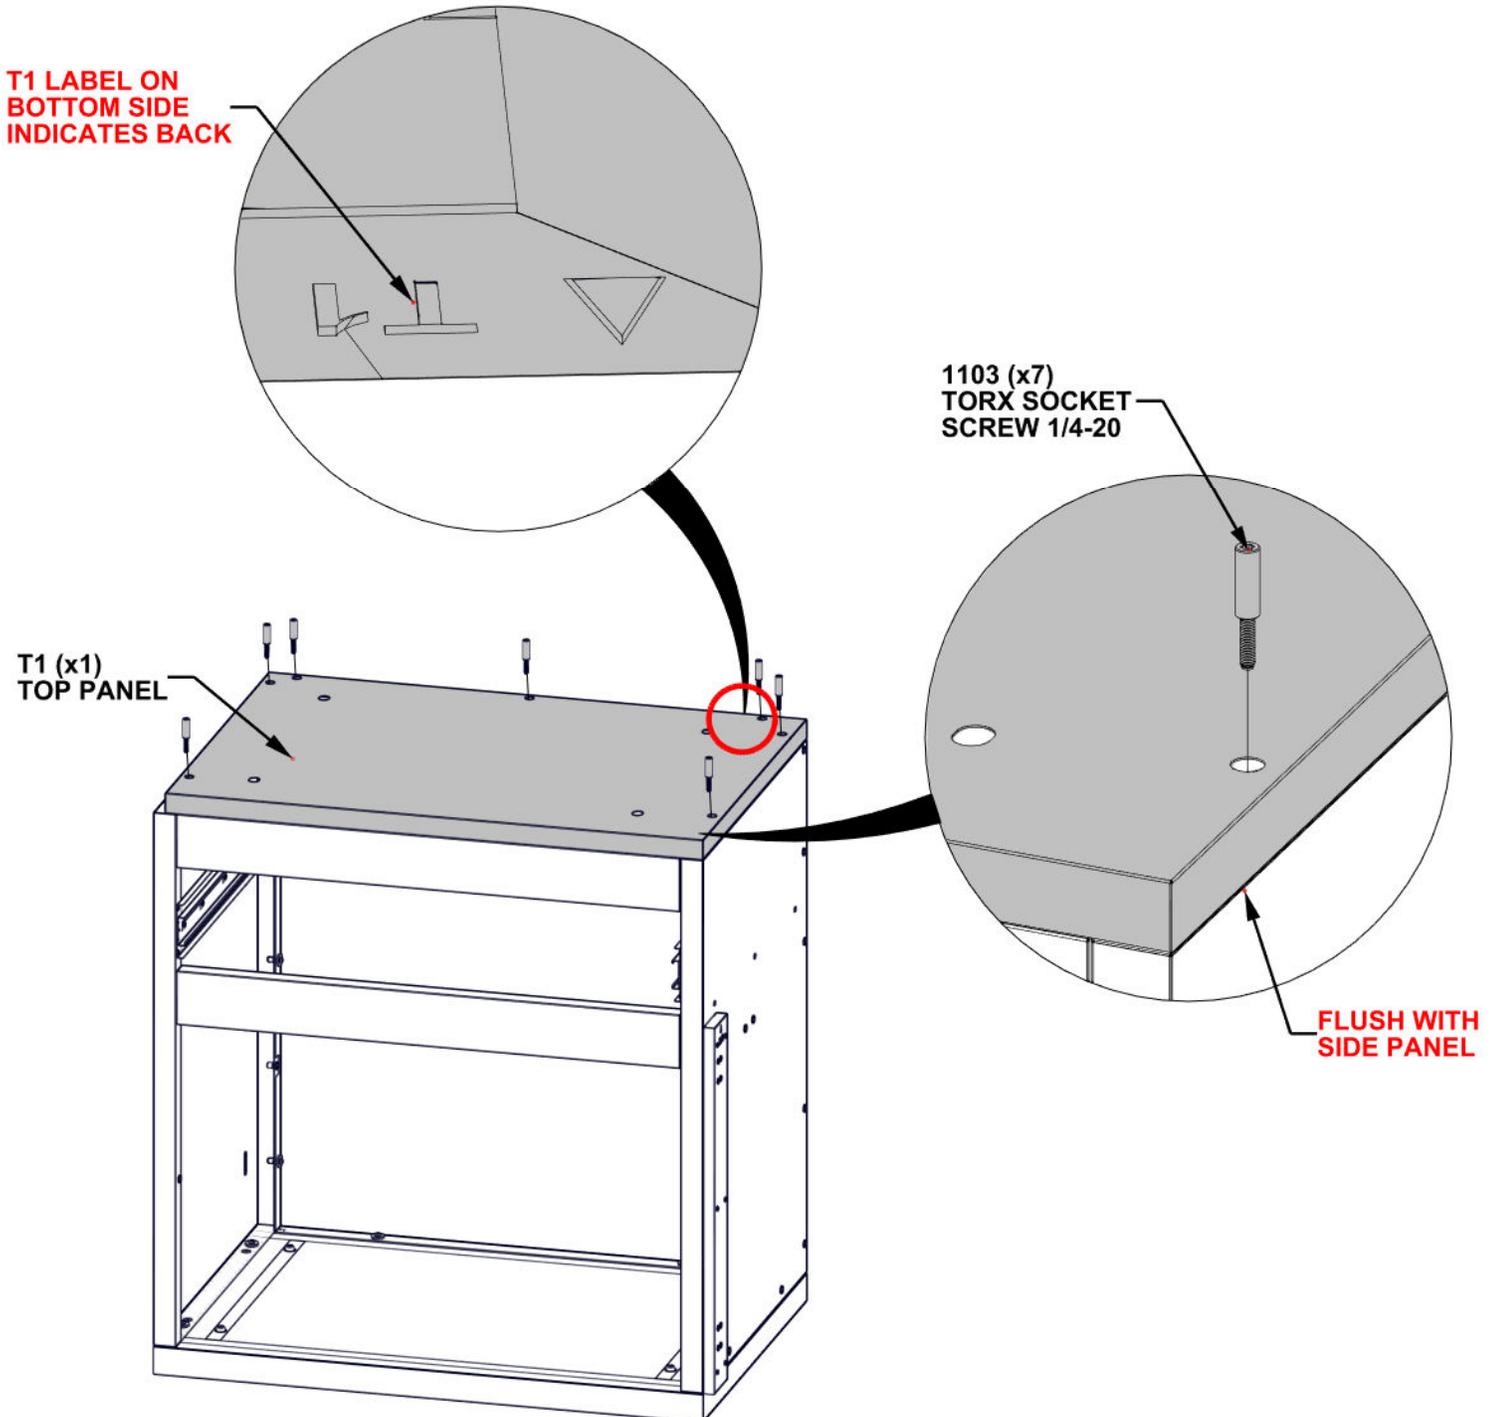


STEP 6A - LEFT CABINET ASSEMBLY

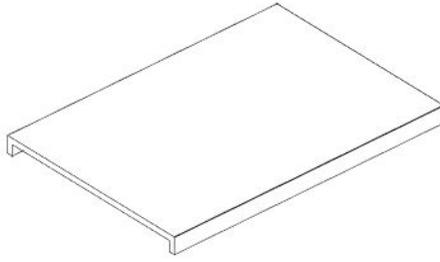

M1 COUNTERTOP - A4M05580
(x1) 33 15/16"x24 15/16"x1 15/16" (50x633x862)


- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL HOLES IN COUNTERTOP ALIGN WITH THE HOLES IN SUPPORT FRAME.
- **WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH COUNTERTOP.**

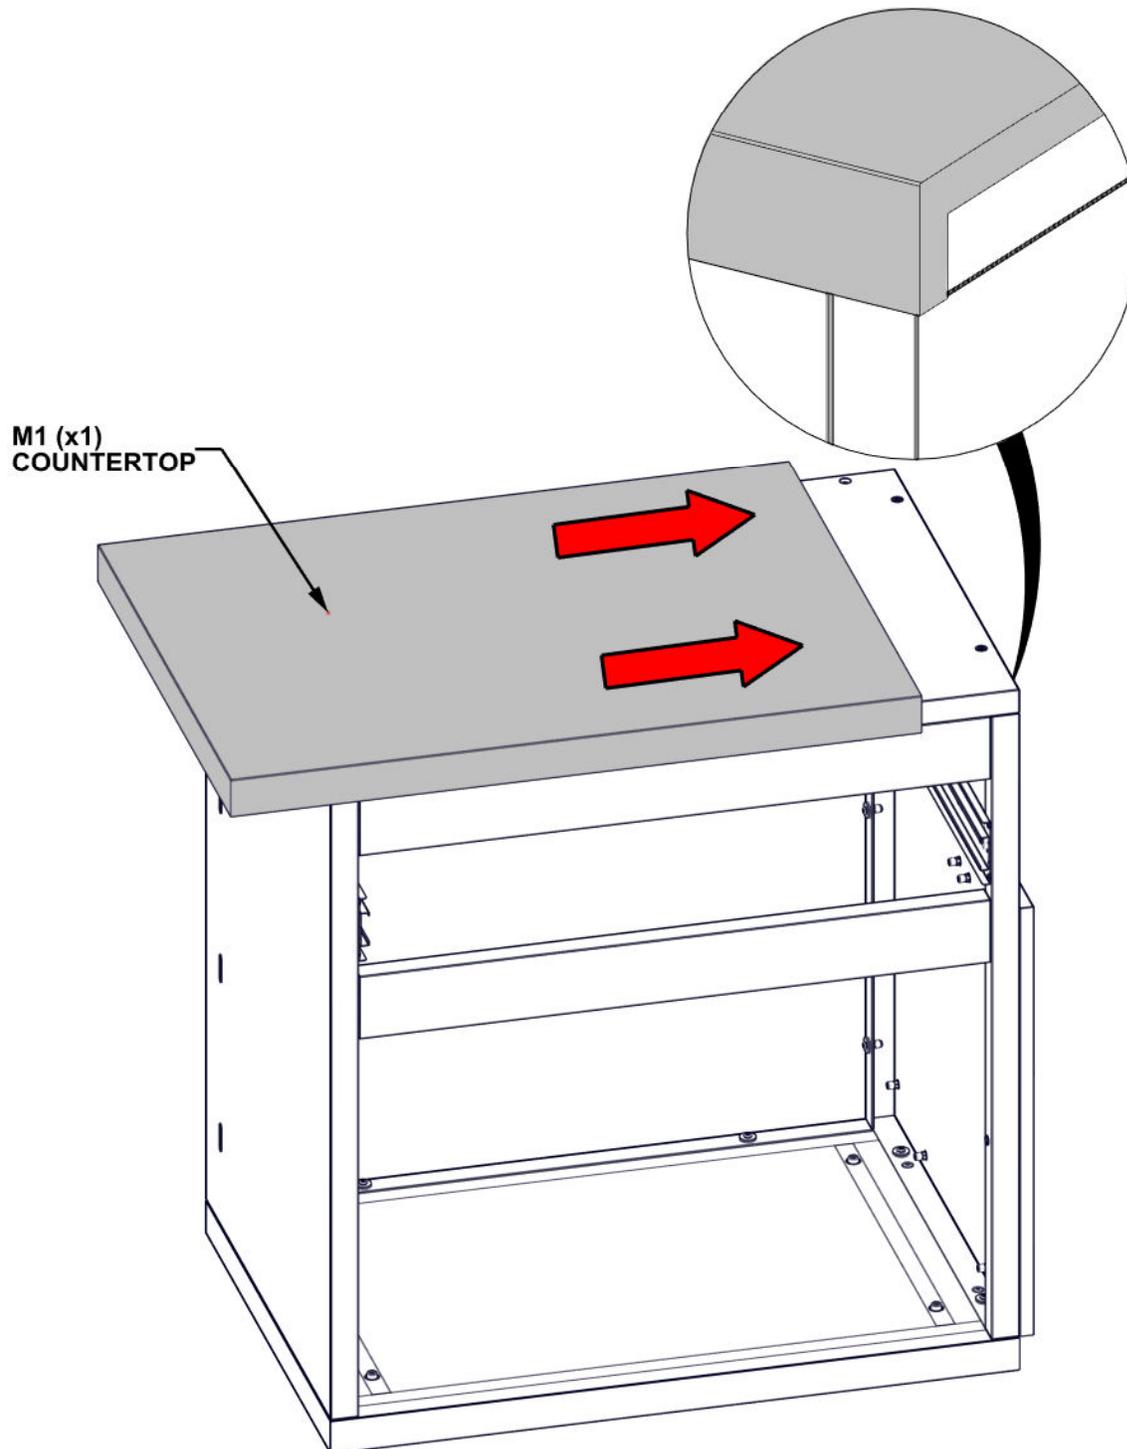


STEP 6B - LEFT CABINET ASSEMBLY

Qty	PartNo	Description
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER
4	H101292	TORX PAN HEAD 1/4-20x13/32"


- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE COUNTERTOP IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE COUNTERTOP SURFACE AS A WORK BENCH.

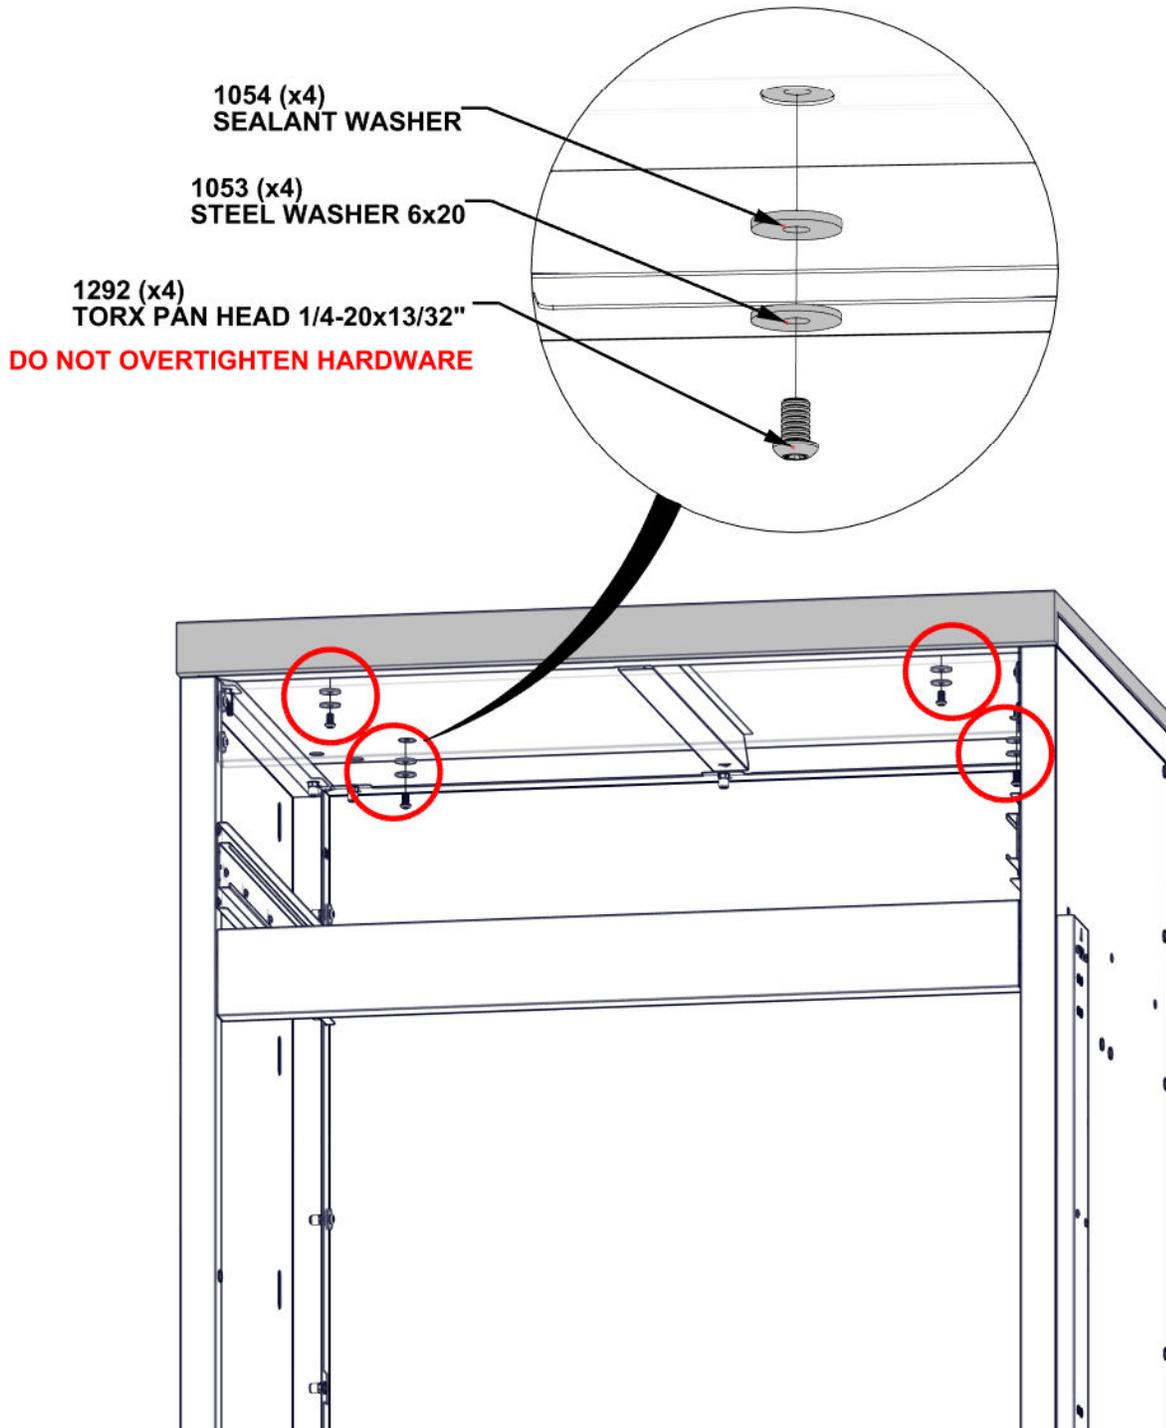

STEP 7A - RIGHT CABINET ASSEMBLY

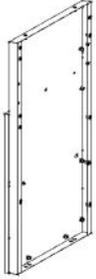


SP03 SIDE PANEL ASSEMBLY - A4M04651
 (x1) 33 3/4"x23 3/8"x2 5/8" (67x594x858)

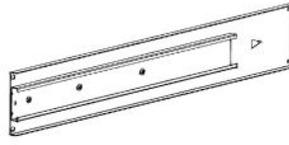


A10 SLIDE BRACKET ASSEMBLY - A4M03083
 (x1) 15 1/16"x3 3/8"x22 5/8" (23x85x575)

Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

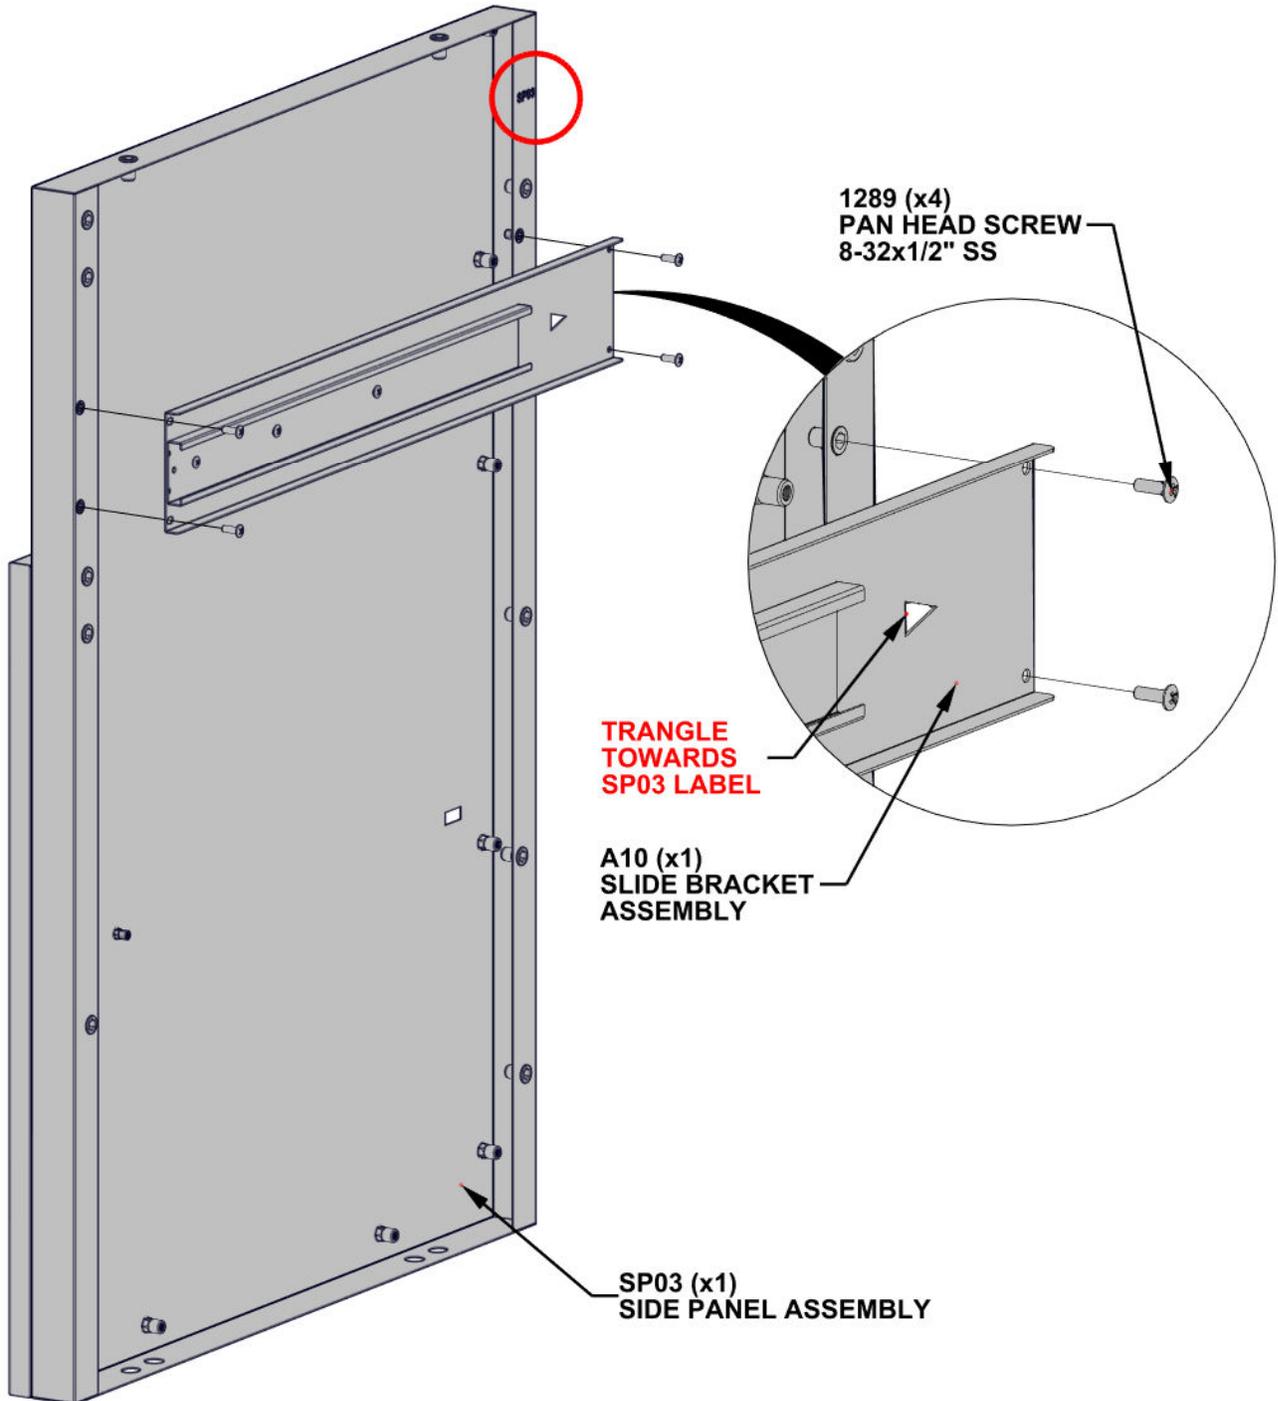


STEP 7B - RIGHT CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

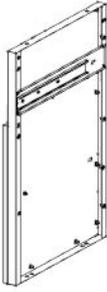


RIGHT CABINET ASSEMBLY FROM 7A

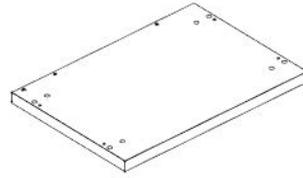


BOTTOM PANEL ASSEMBLY FROM STEP 1A

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR COOKING STATION WILL BE.

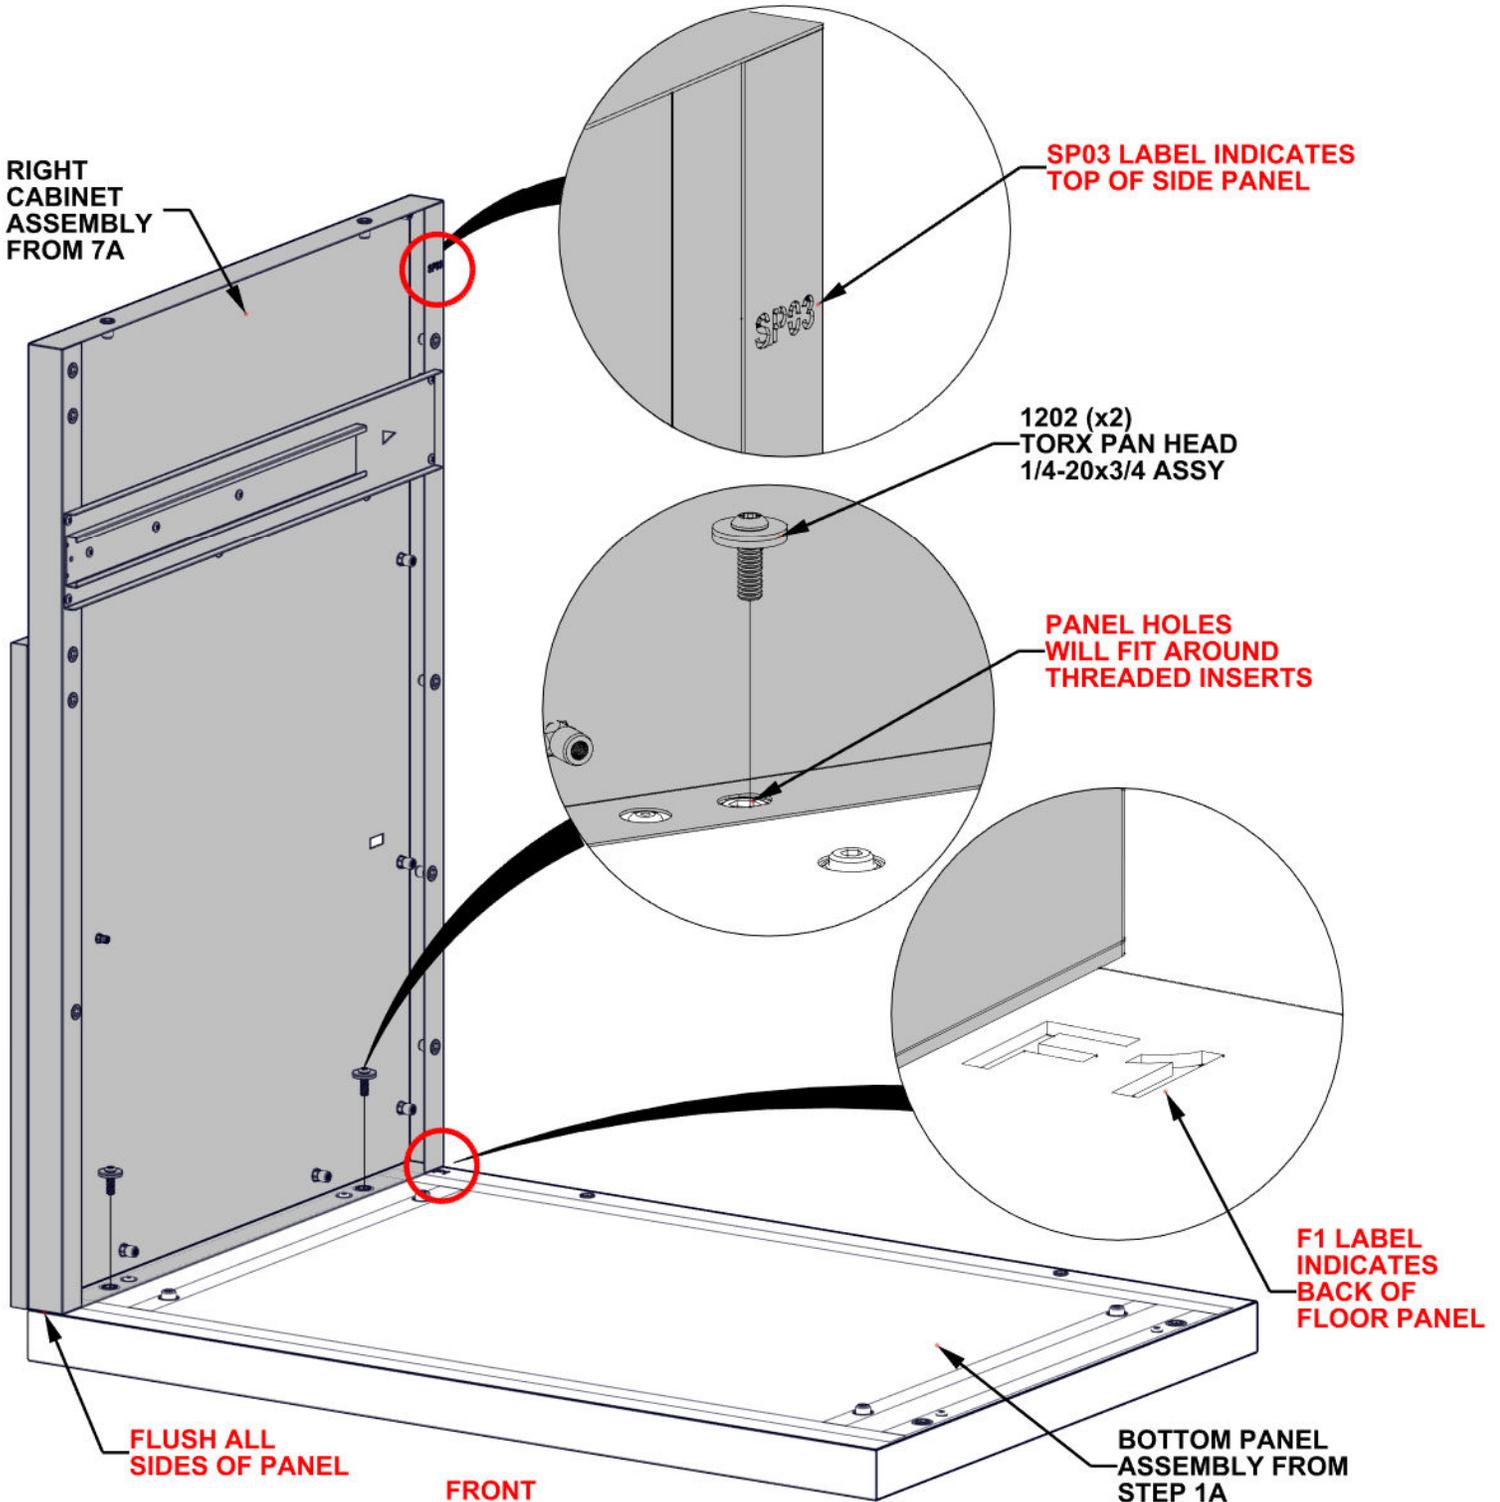


STEP 8 - RIGHT CABINET ASSEMBLY

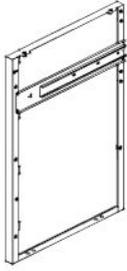


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

SP04 SIDE PANEL - A4M04406
(x1) 33 3/8"x23 3/8"x1 15/16" (49x594x848)

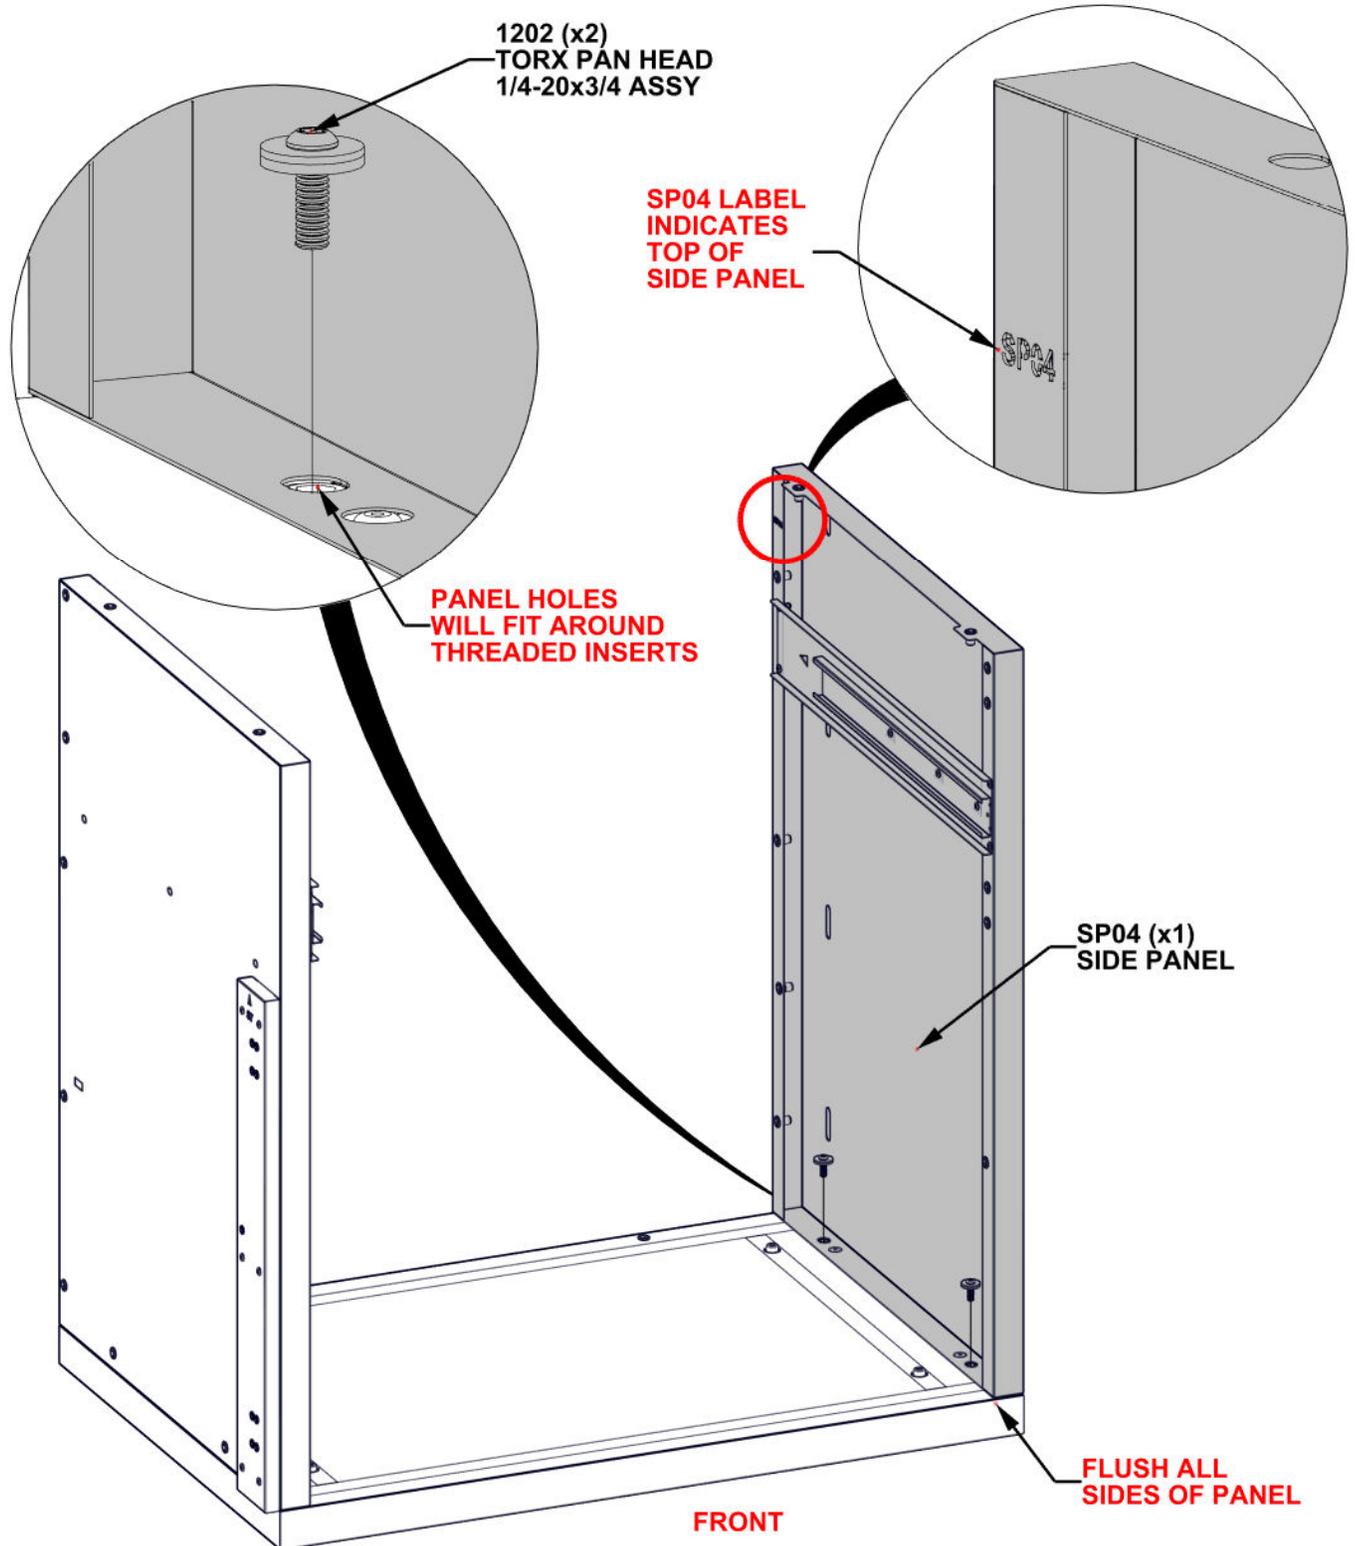


STEP 9 - RIGHT CABINET ASSEMBLY

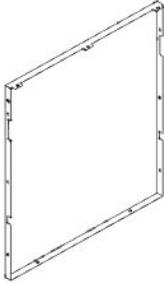


Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G1 BACK PANEL - A4M04392
(x1) 1 3/4"x31"x33 3/8" (45x788x848)

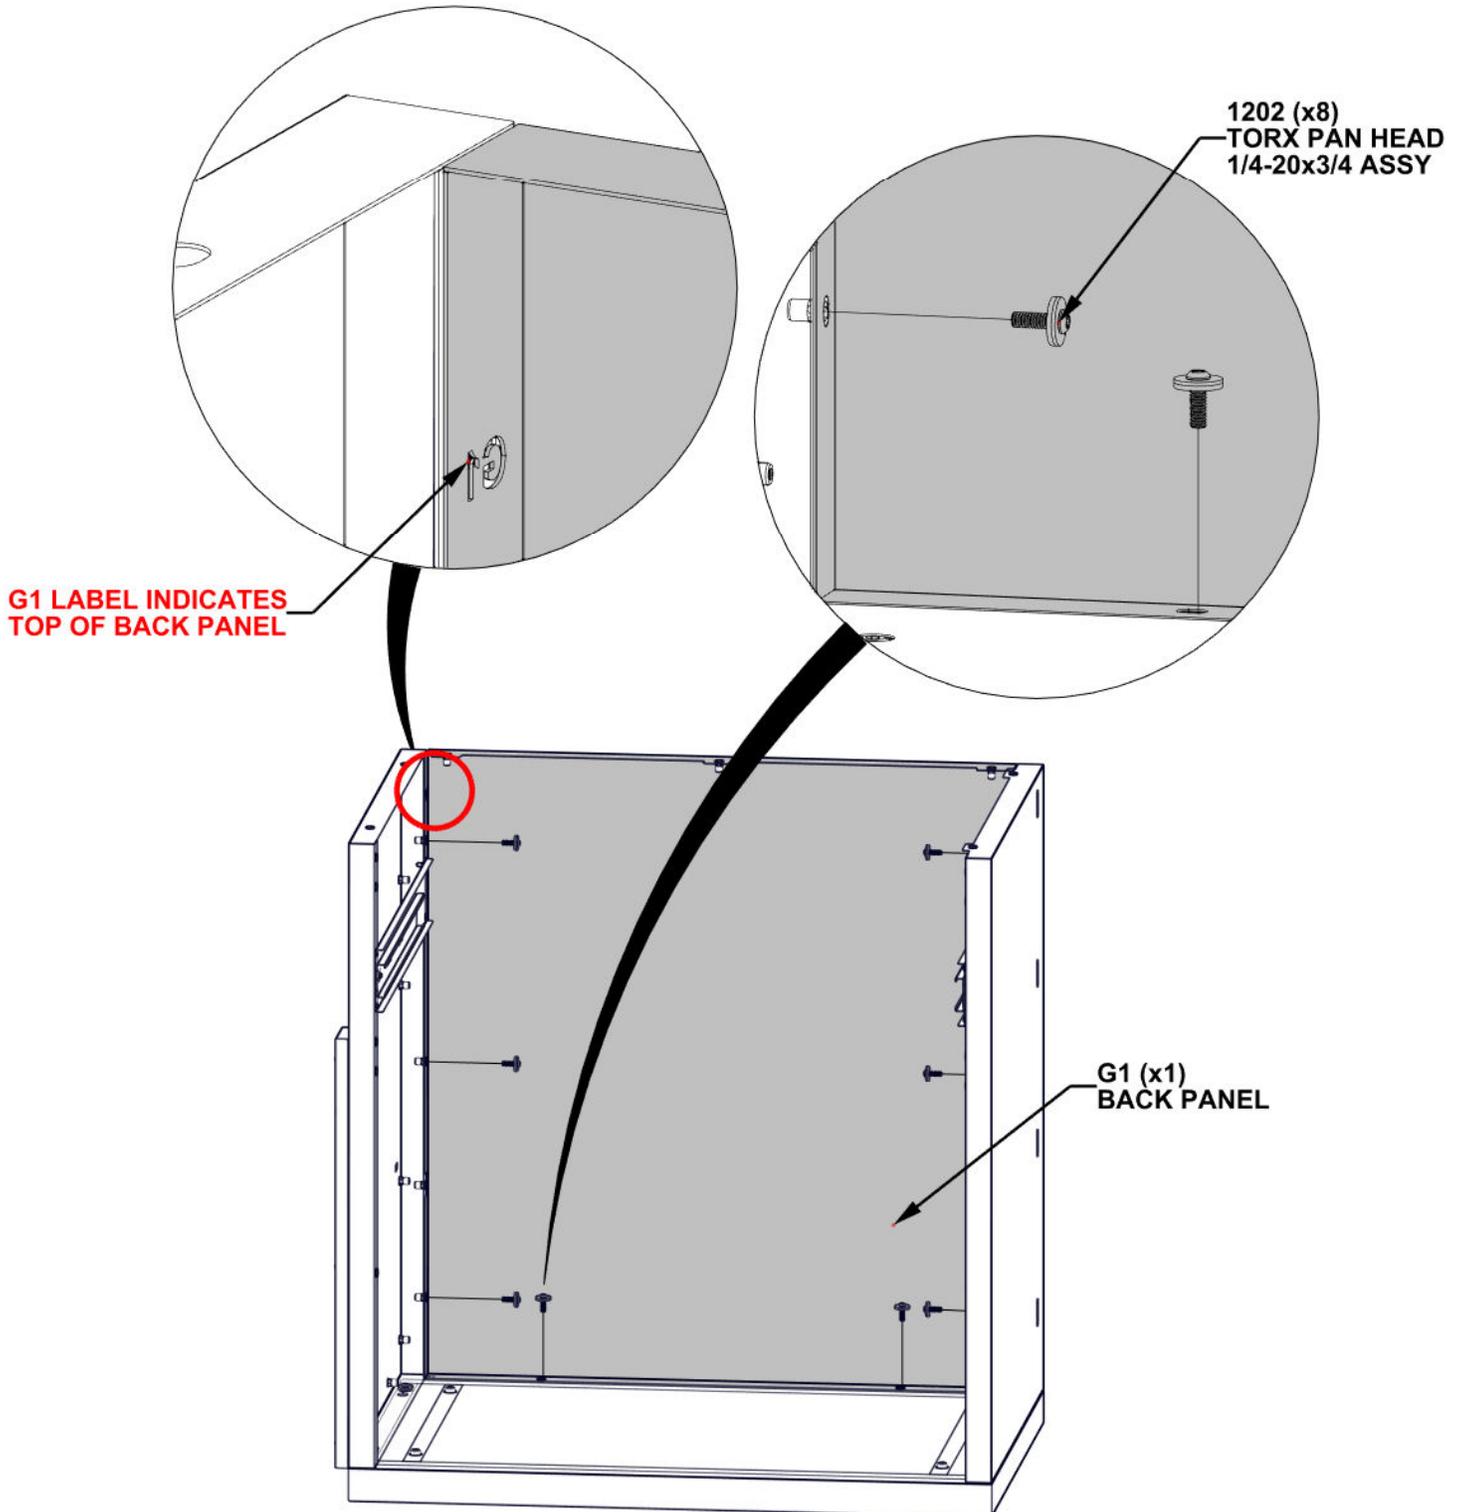


STEP 10 - RIGHT CABINET ASSEMBLY

Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

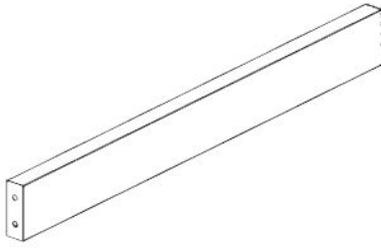


ST1 SUPPORT PANEL - A4M04394
(x2) 1 3/16"x3 3/8"x31" (30x85x788)

- HARDWARE ATTACHES ON INSIDE OF CABINET.

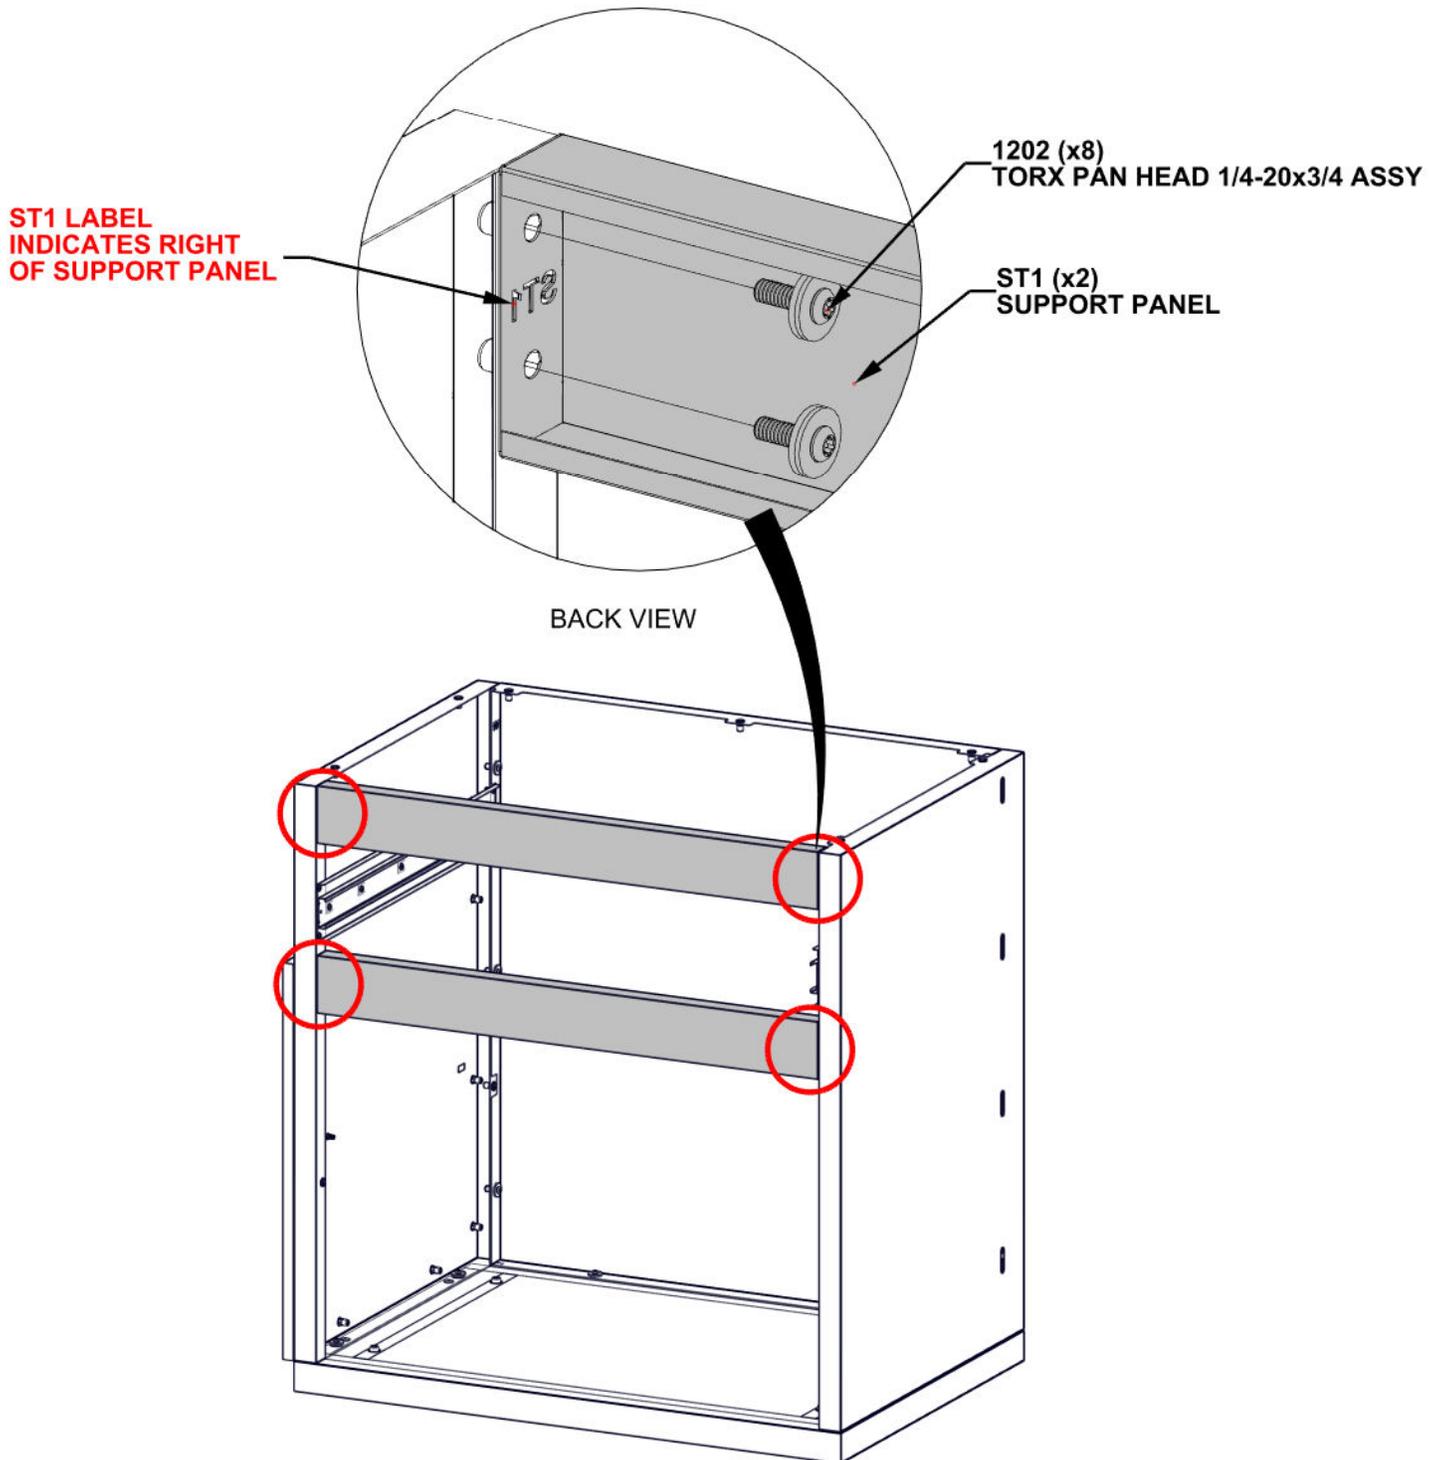


STEP 11 - RIGHT CABINET ASSEMBLY

Qty	PartNo	Description
7	H101103	TORX SOCKET SCREW 1/4-20

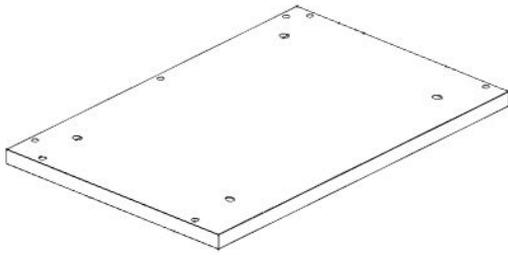


T3 TOP PANEL - A4M05579
(x1) 33 1/8"x23 5/16"x1 1/4" (32x593x842)

- ALIGN HOLES IN TOP PANEL WITH THREADED INSERTS IN SIDE AND BACK PANELS.

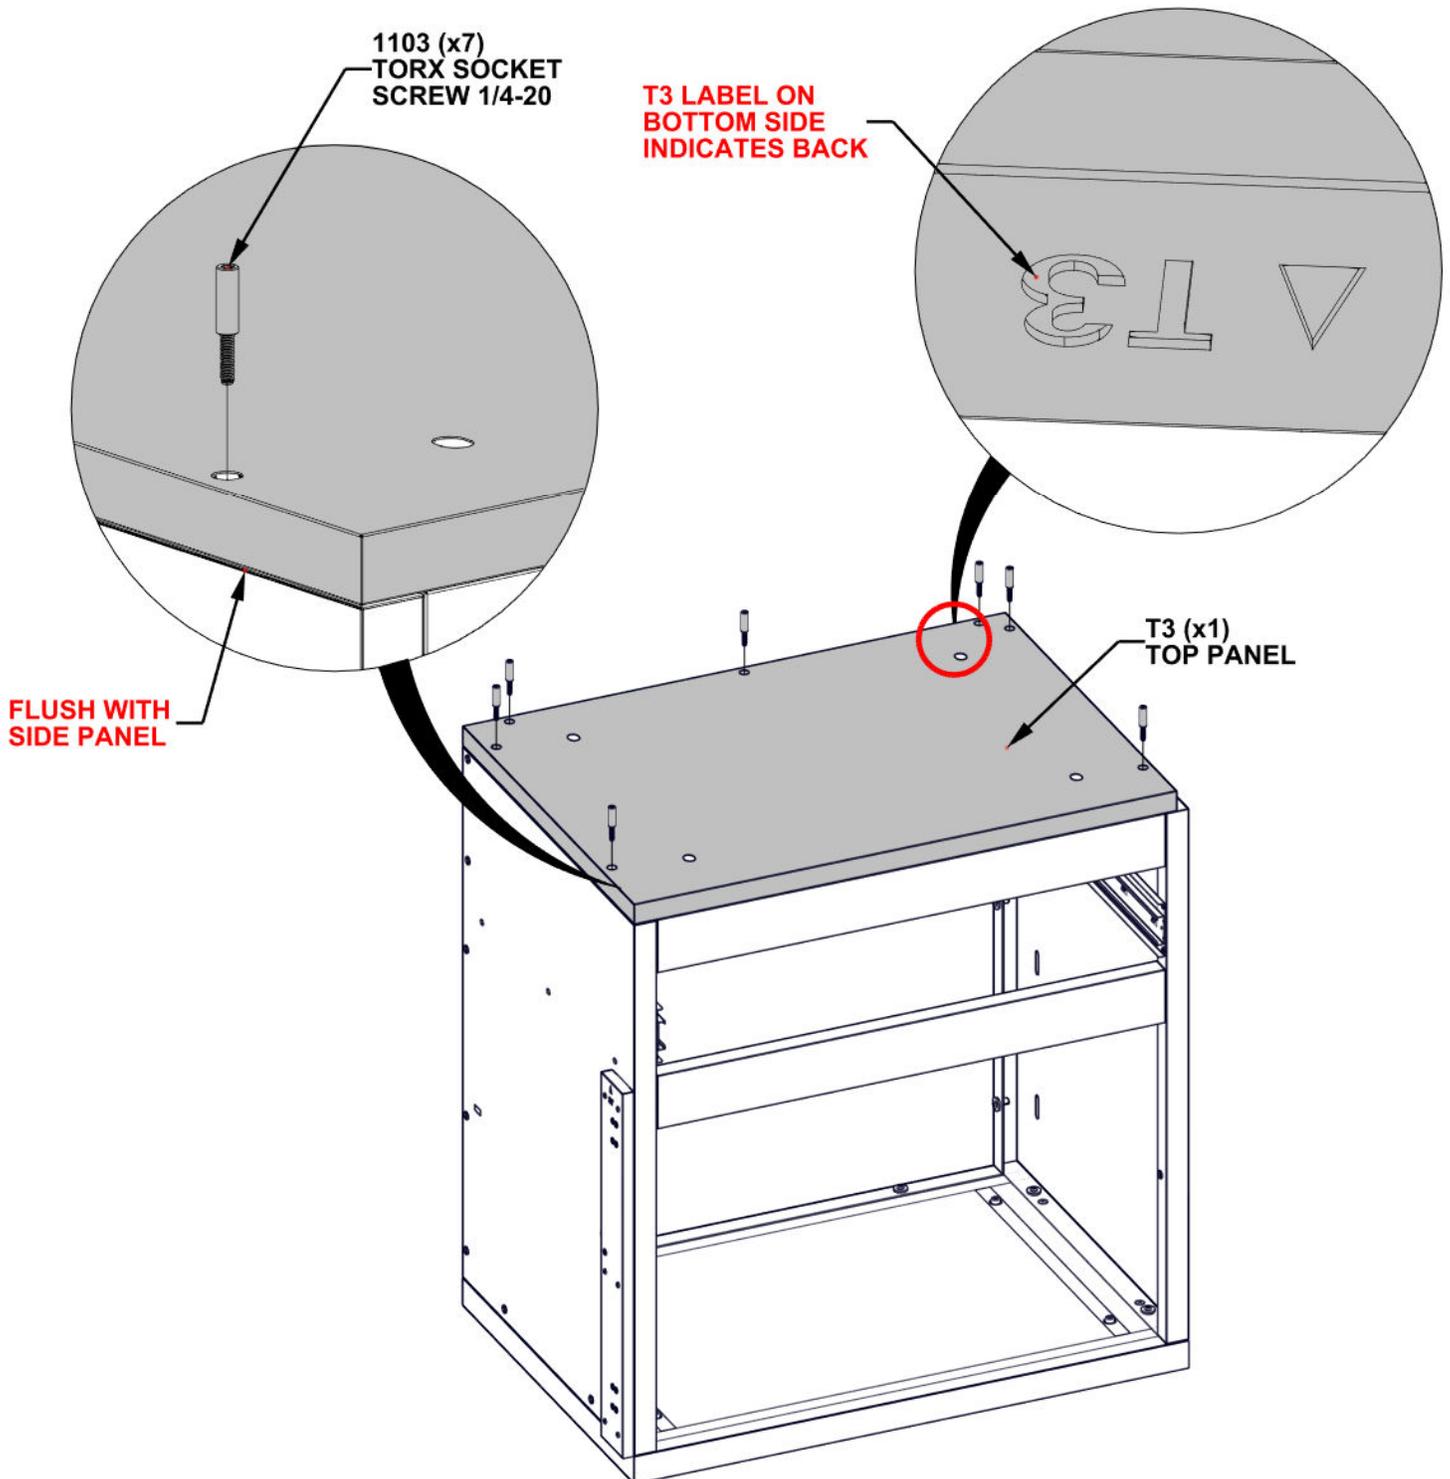


STEP 12A - RIGHT CABINET ASSEMBLY

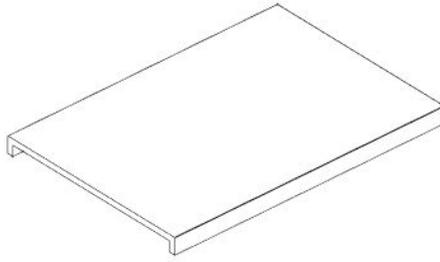

M1 COUNTERTOP - A4M05580
(x1) 33 15/16"x24 15/16"x1 15/16" (50x633x862)


- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL HOLES IN COUNTERTOP ALIGN WITH THE HOLES IN SUPPORT FRAME.
- **WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH COUNTERTOP.**

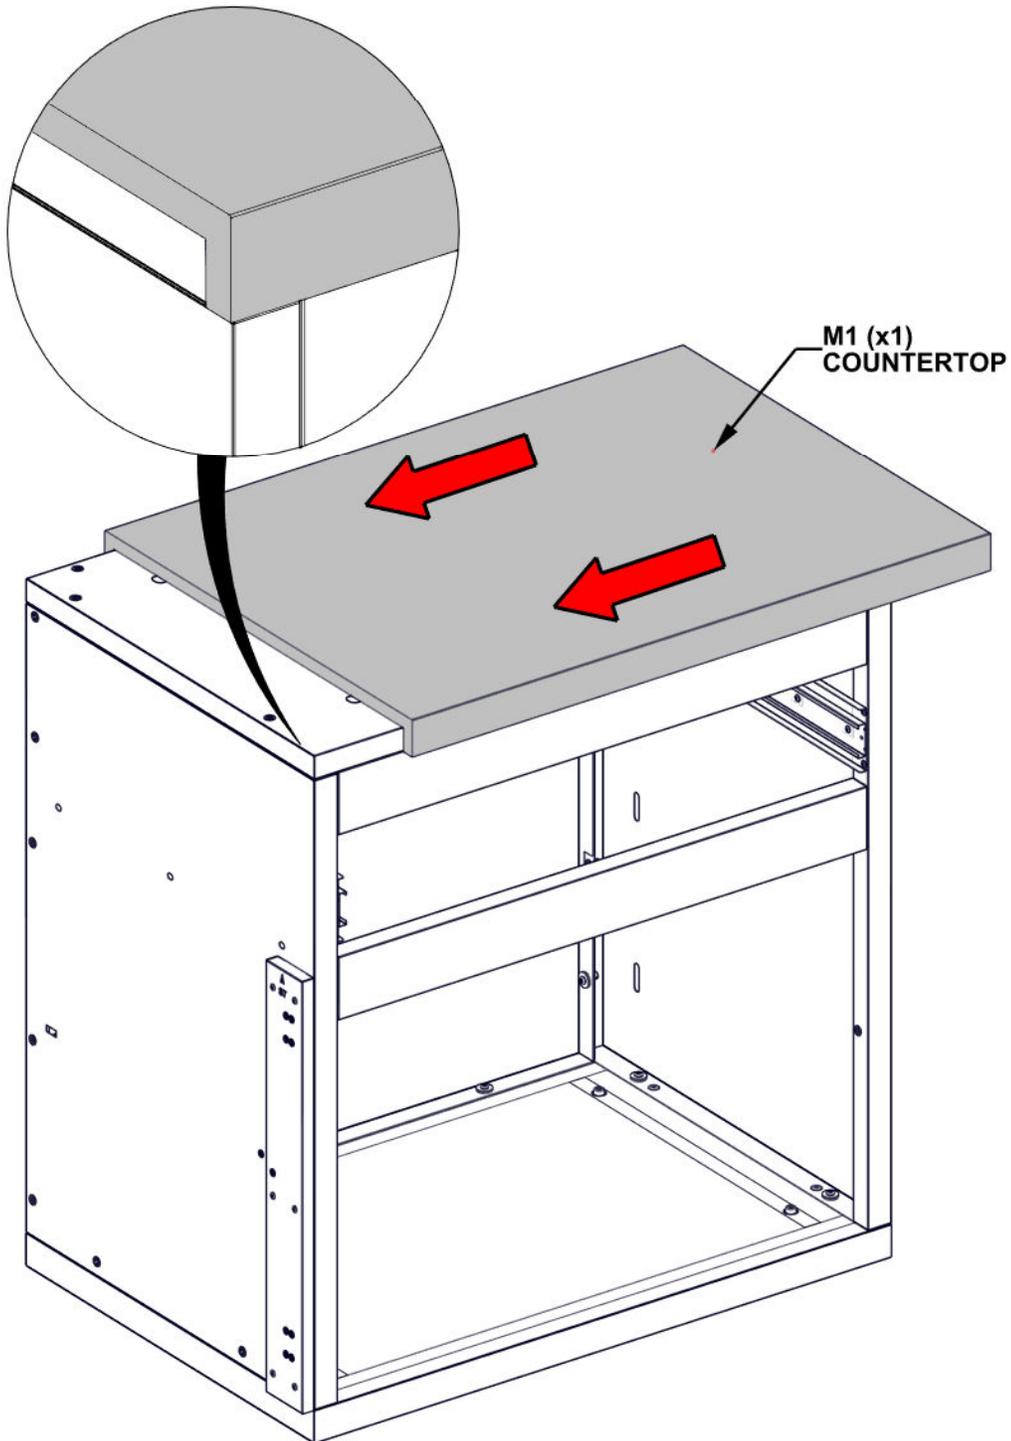


STEP 12B - RIGHT CABINET ASSEMBLY

Qty	PartNo	Description
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER
4	H101292	TORX PAN HEAD 1/4-20x13/32"

- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE COUNTERTOP IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE COUNTERTOP SURFACE AS A WORK BENCH.

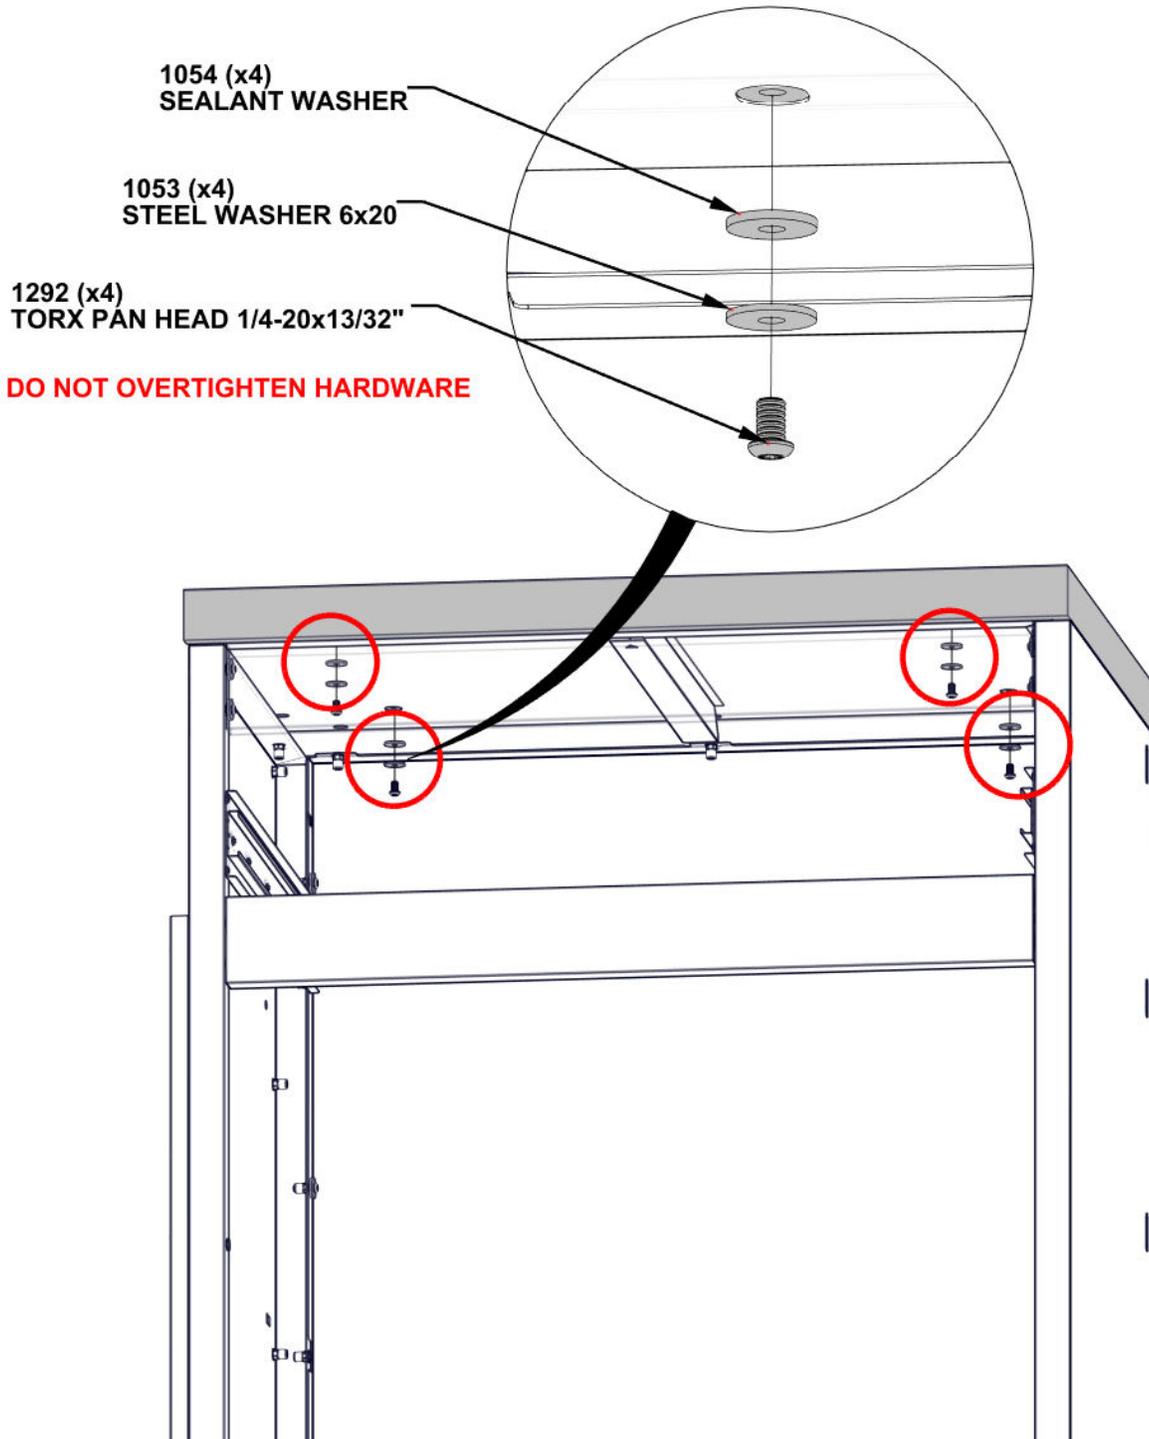

STEP 13 - BOTTOM PANEL ASSEMBLY

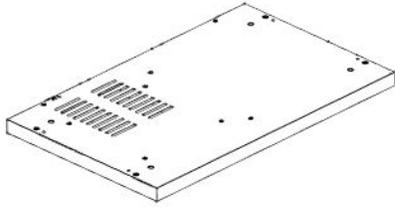


F2 CABINET FLOOR PANEL ASSEMBLY - A4M05581
(x1) 1 3/4"x23 3/8"x38 1/4" (44x594x972)




3150 ADJUSTABLE FOOT - A4M03150
(x4) 1 15/16"x2 5/8" (x49x66)

- ATTACH ADJUSTABLE FOOT TO BOTTOM PANEL.
- USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

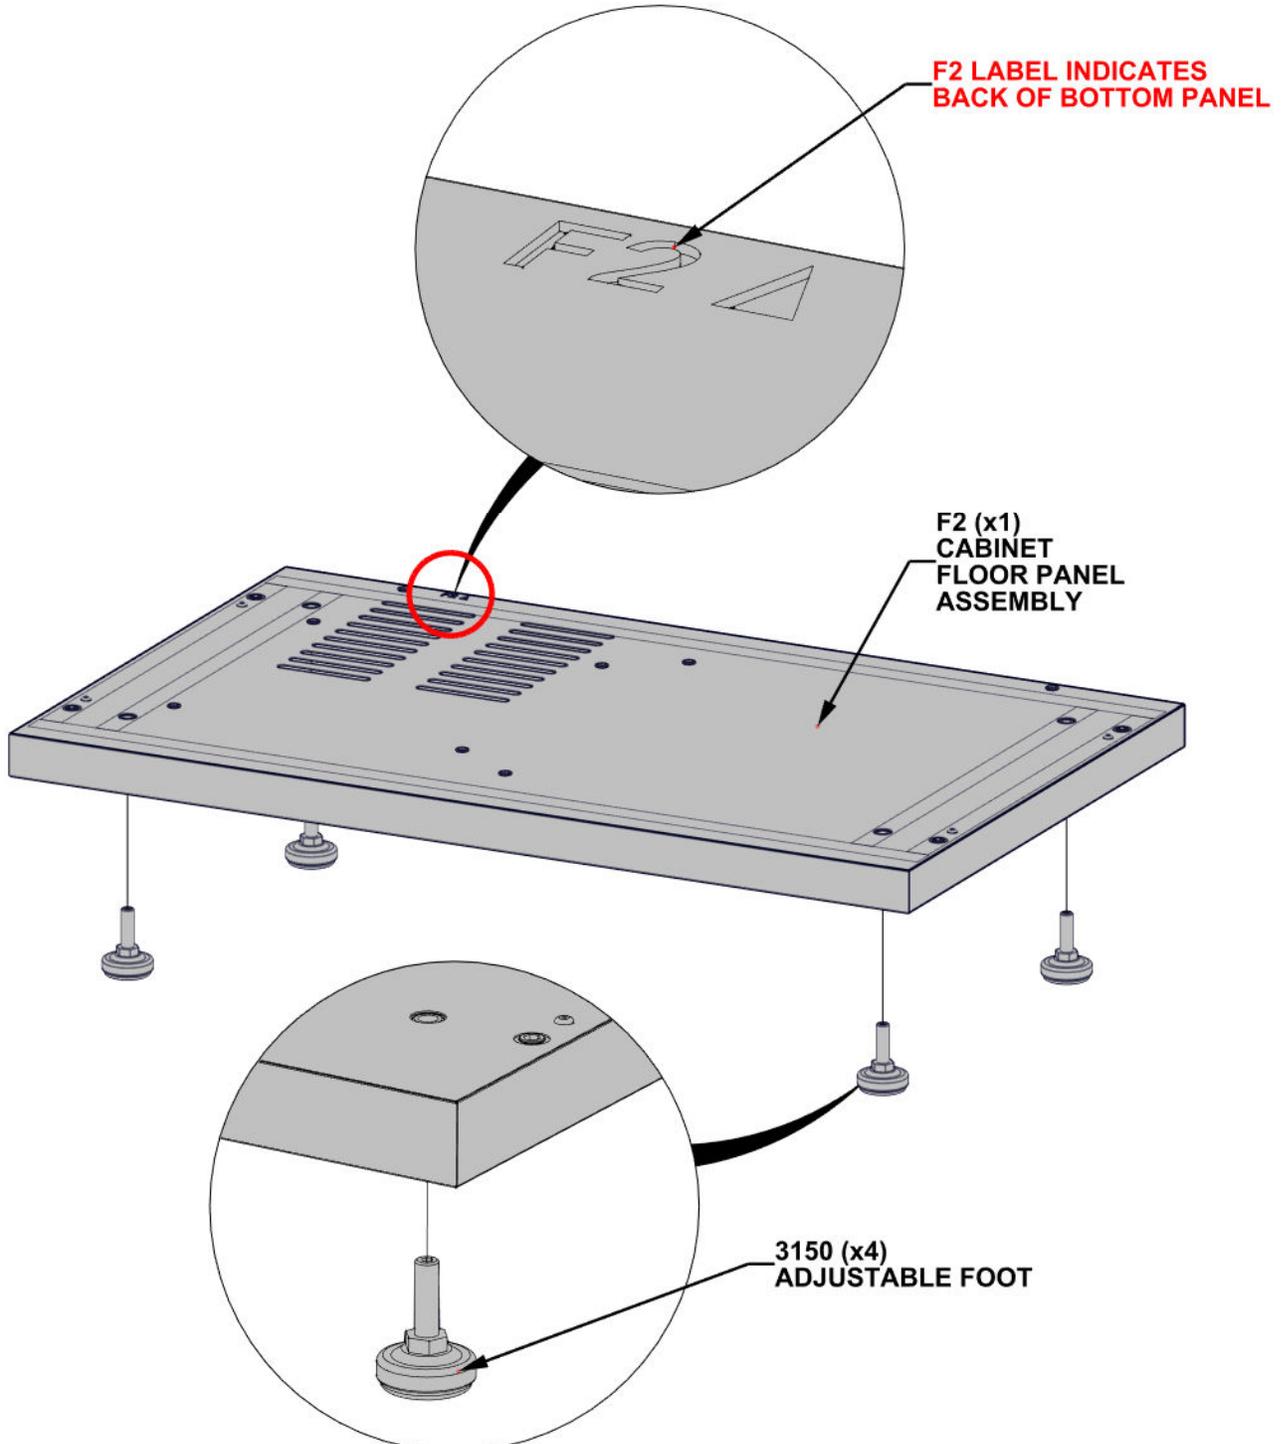


STEP 14 - CABINET ASSEMBLY

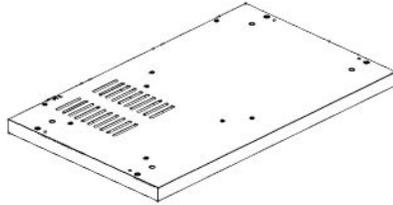


BOTTOM PANEL ASSEMBLY FROM STEP 13

- **LOOKING AT THE FRONT SIDE OF THE CABINETS, SLIDE FLOOR PANEL IN BETWEEN LEFT AND RIGHT CABINETS.**
- POSITION FLOOR PANEL AS SHOWN BELOW.
- ADJUST LEFT AND RIGHT CABINET TO ELIMINATE ANY GAPS BETWEEN FLOOR PANEL AND CABINETS.

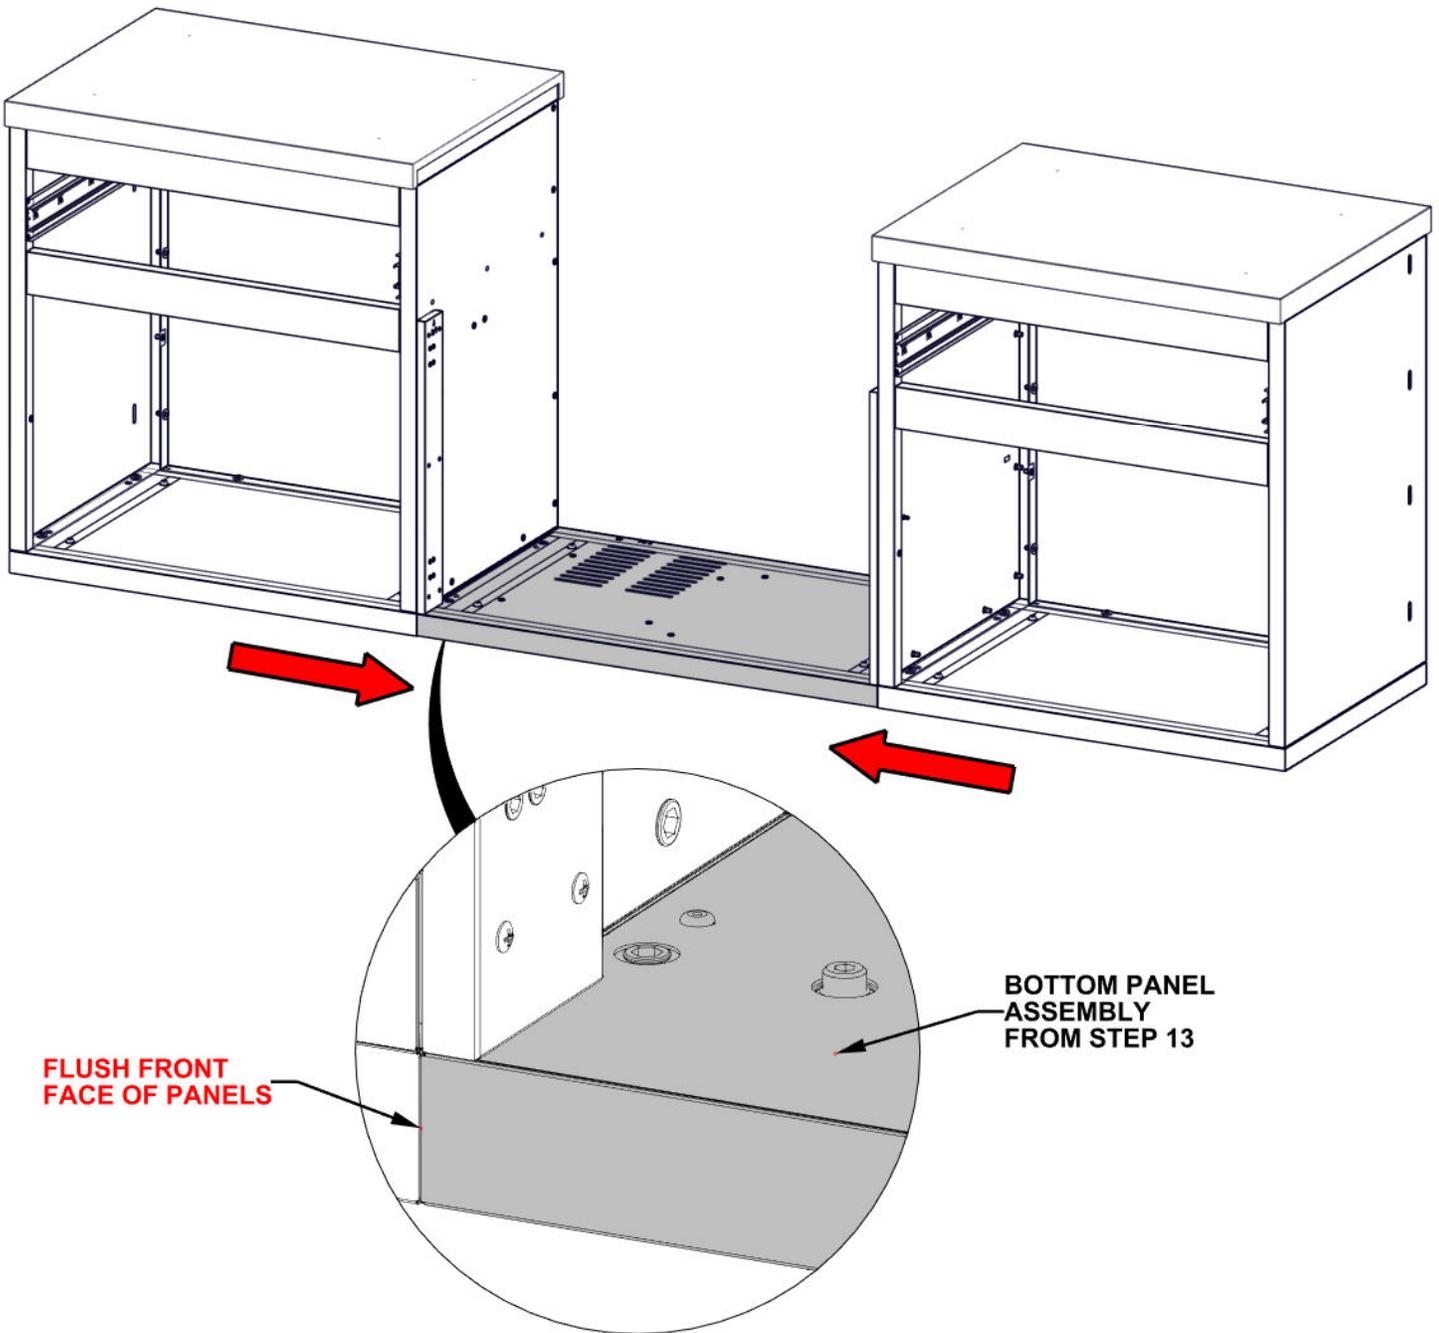


STEP 15 - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

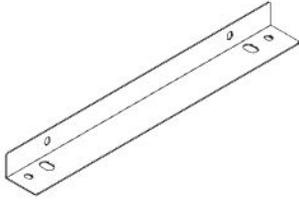


A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

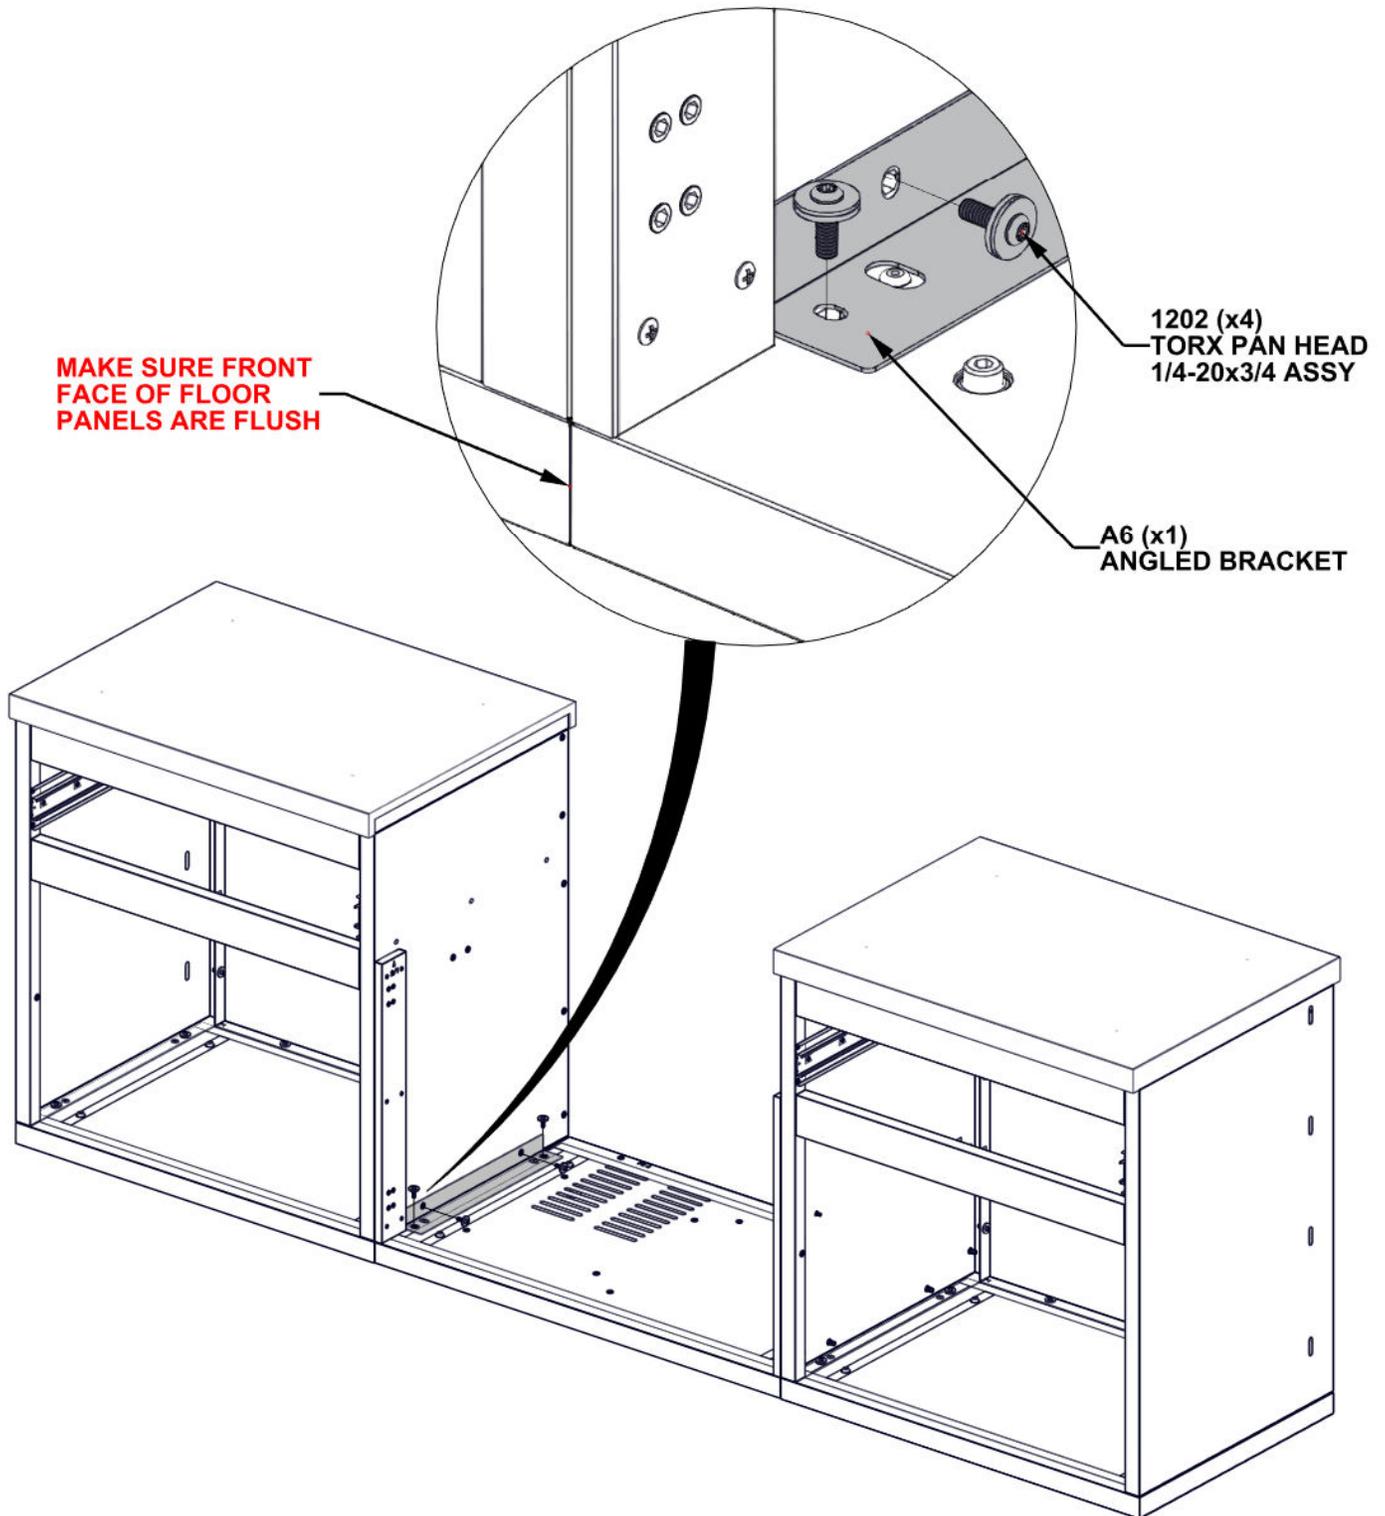


STEP 16 - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

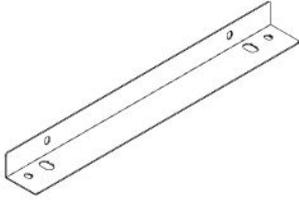


A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)


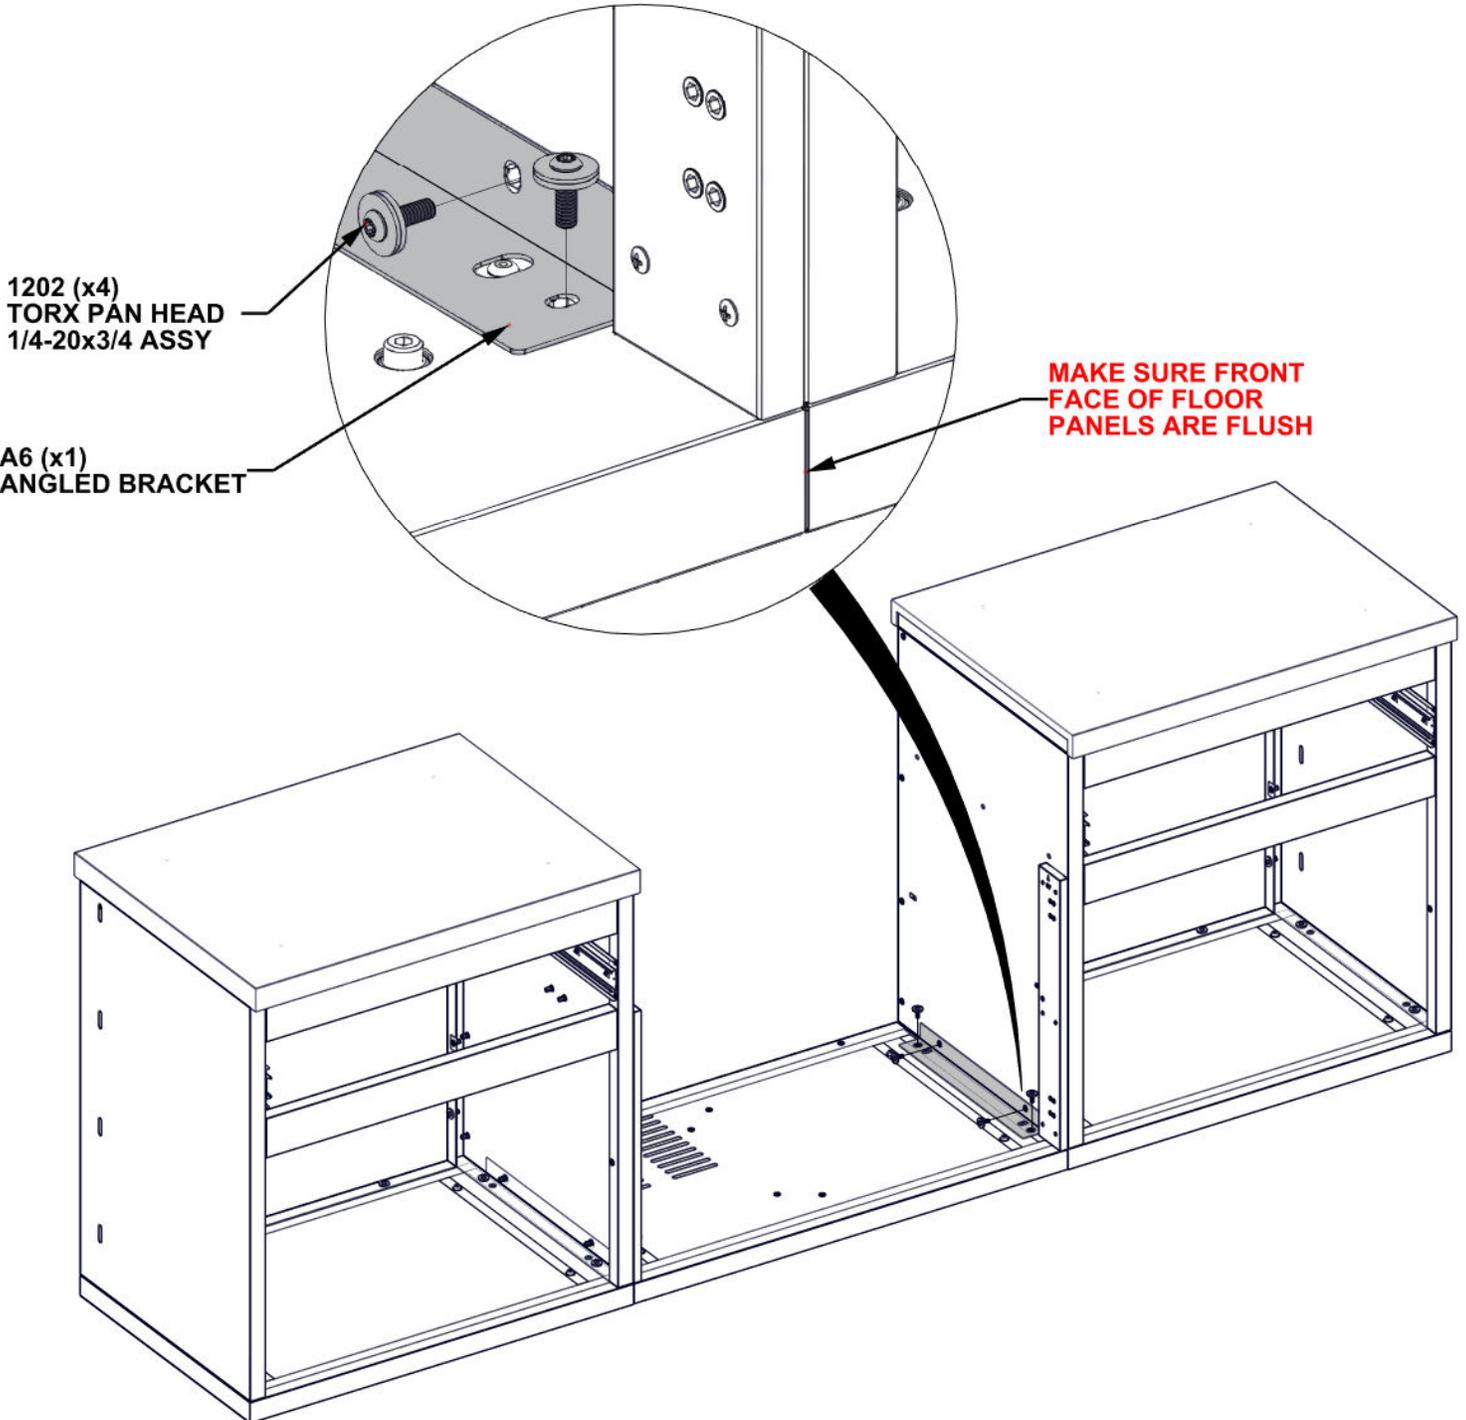


STEP 17 - CABINET ASSEMBLY


Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

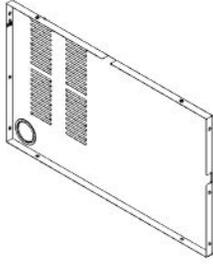

G10 CABINET BACK PANEL ASSEMBLY - A4M03055
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

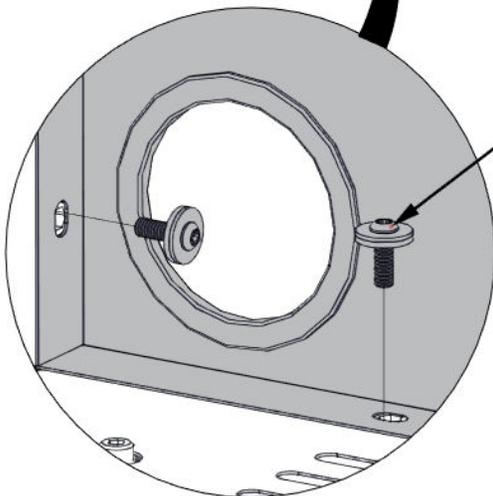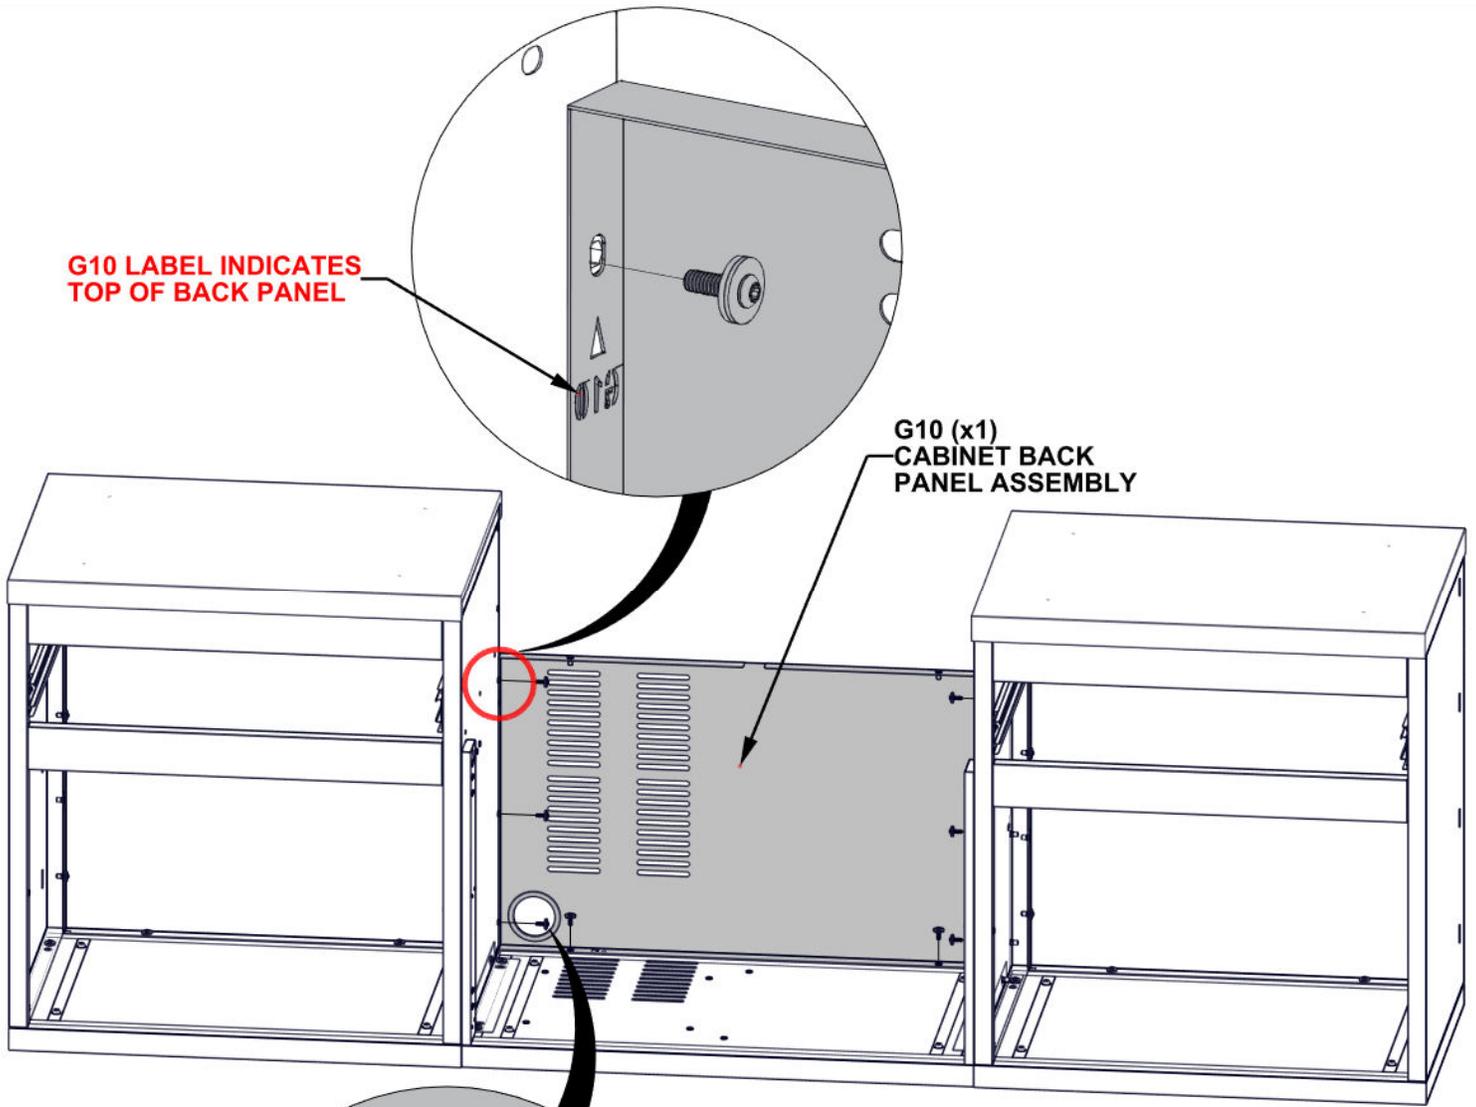


STEP 18 - CABINET ASSEMBLY

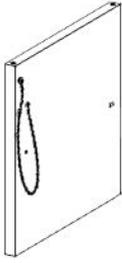


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S6 CABINET SIDE PANEL ASSEMBLY M - A4M03586
 (x1) 23 3/8"x22 7/8"x1 3/8" (35x581x593)


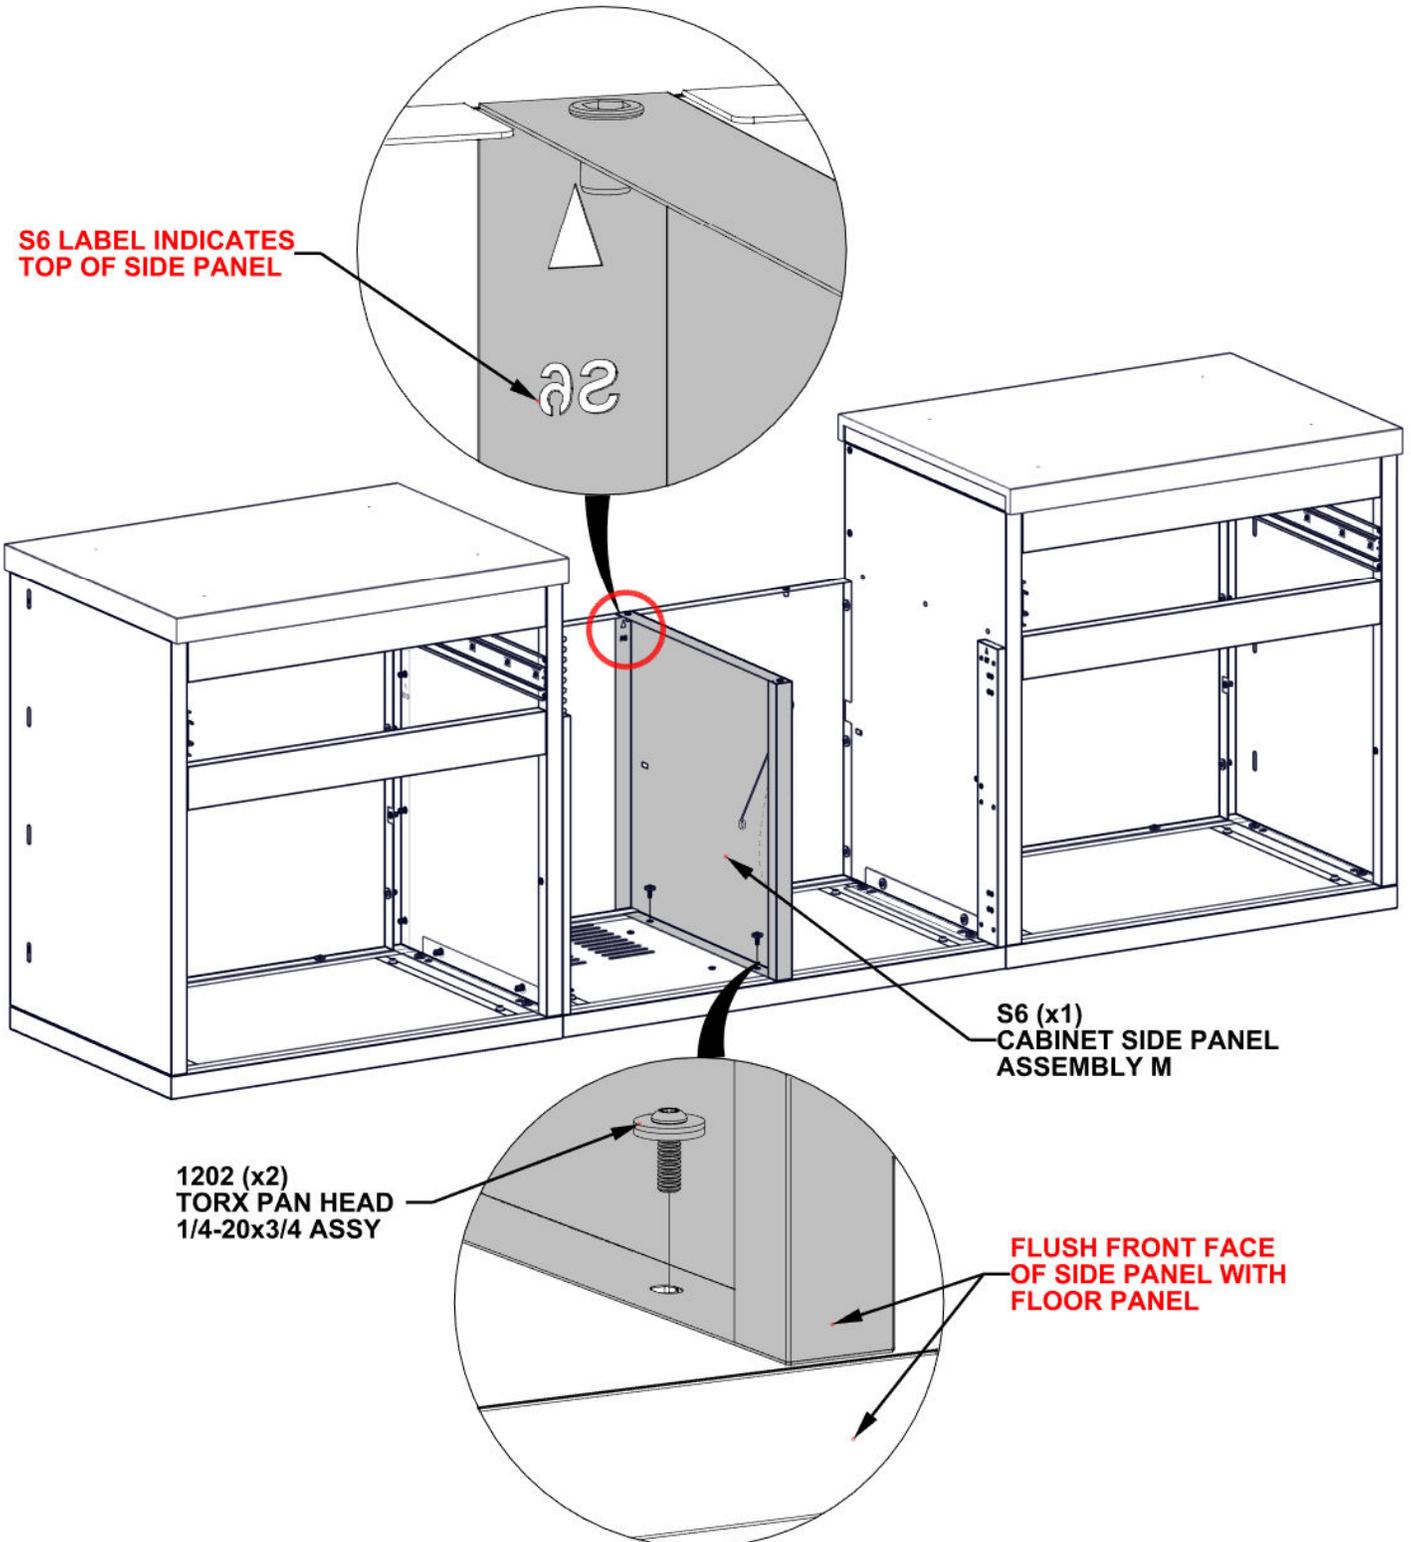


STEP 19 - CABINET ASSEMBLY

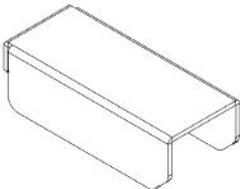


A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER CABINET.

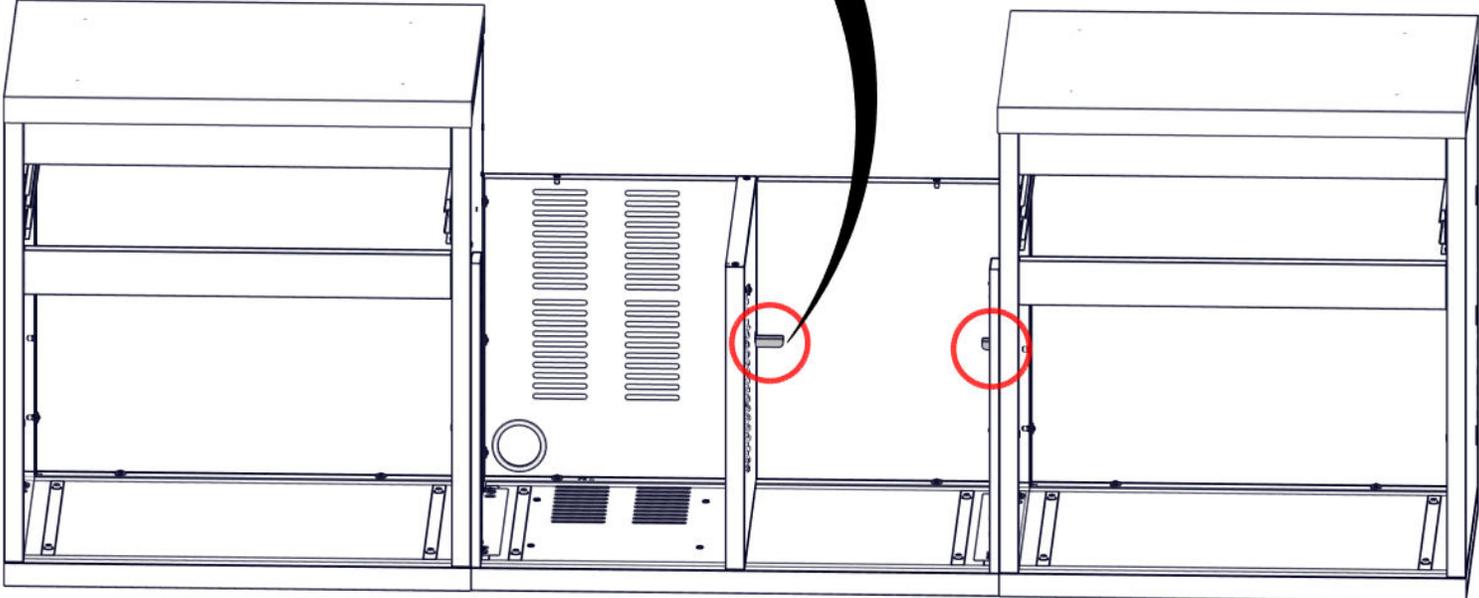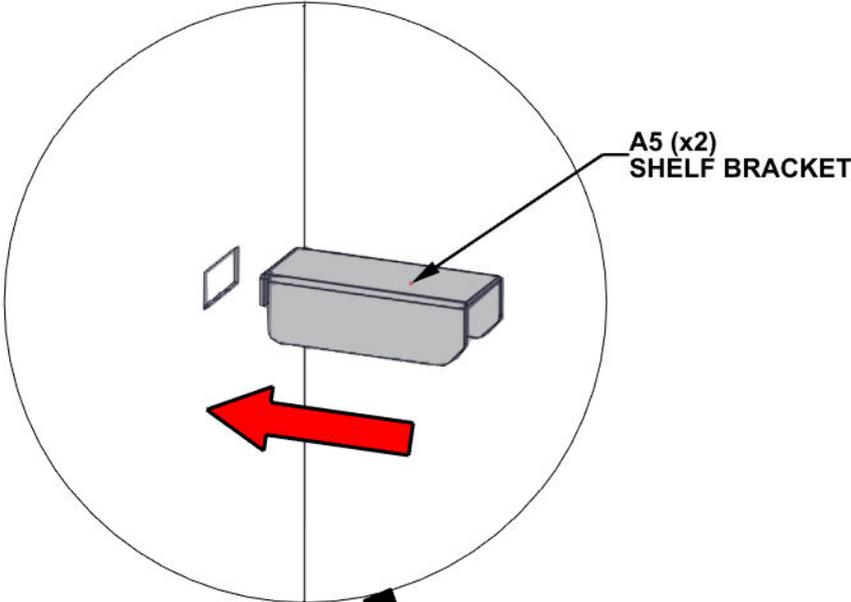


STEP 20 - CABINET ASSEMBLY

Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS

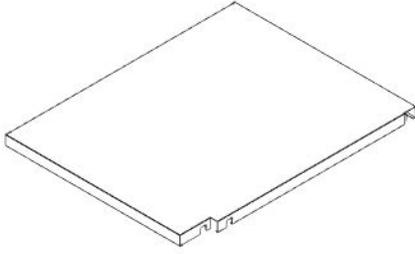


L2 CABINET SHELF - A4M03589
(x1) 23 1/4"x18 3/8"x1" (25.00x467.00x591.00)

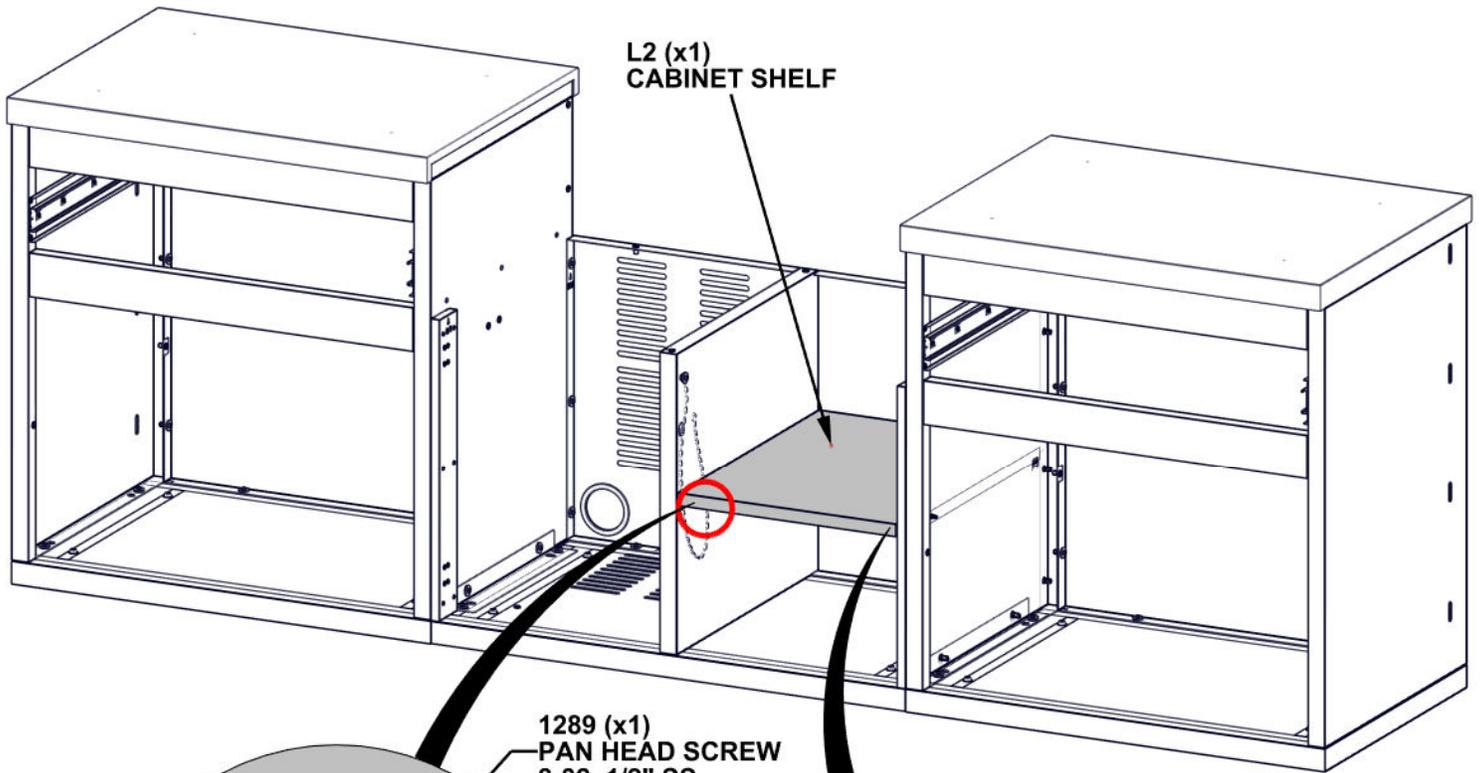


L2 (x1)
CABINET SHELF

1289 (x1)
PAN HEAD SCREW
8-32x1/2" SS

1289 (x2)
PAN HEAD SCREW
8-32x1/2" SS

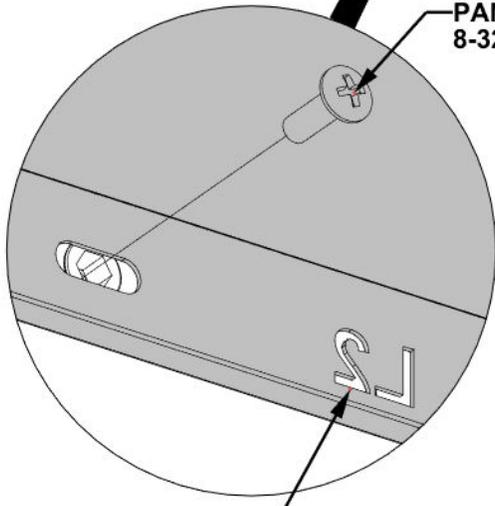


L2 LABEL INDICATES
FRONT OF SHELF


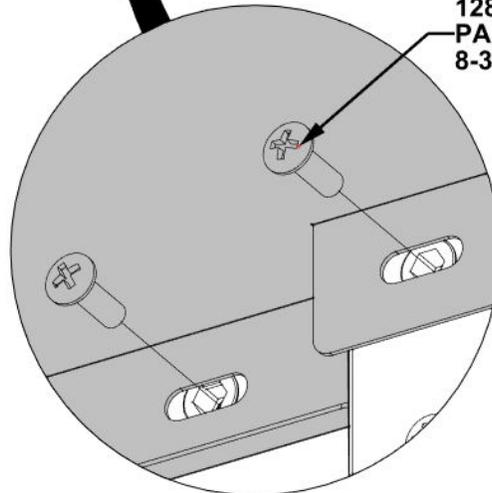


STEP 21 - CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

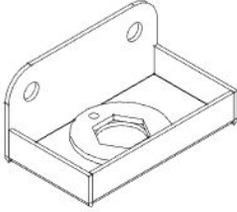


A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

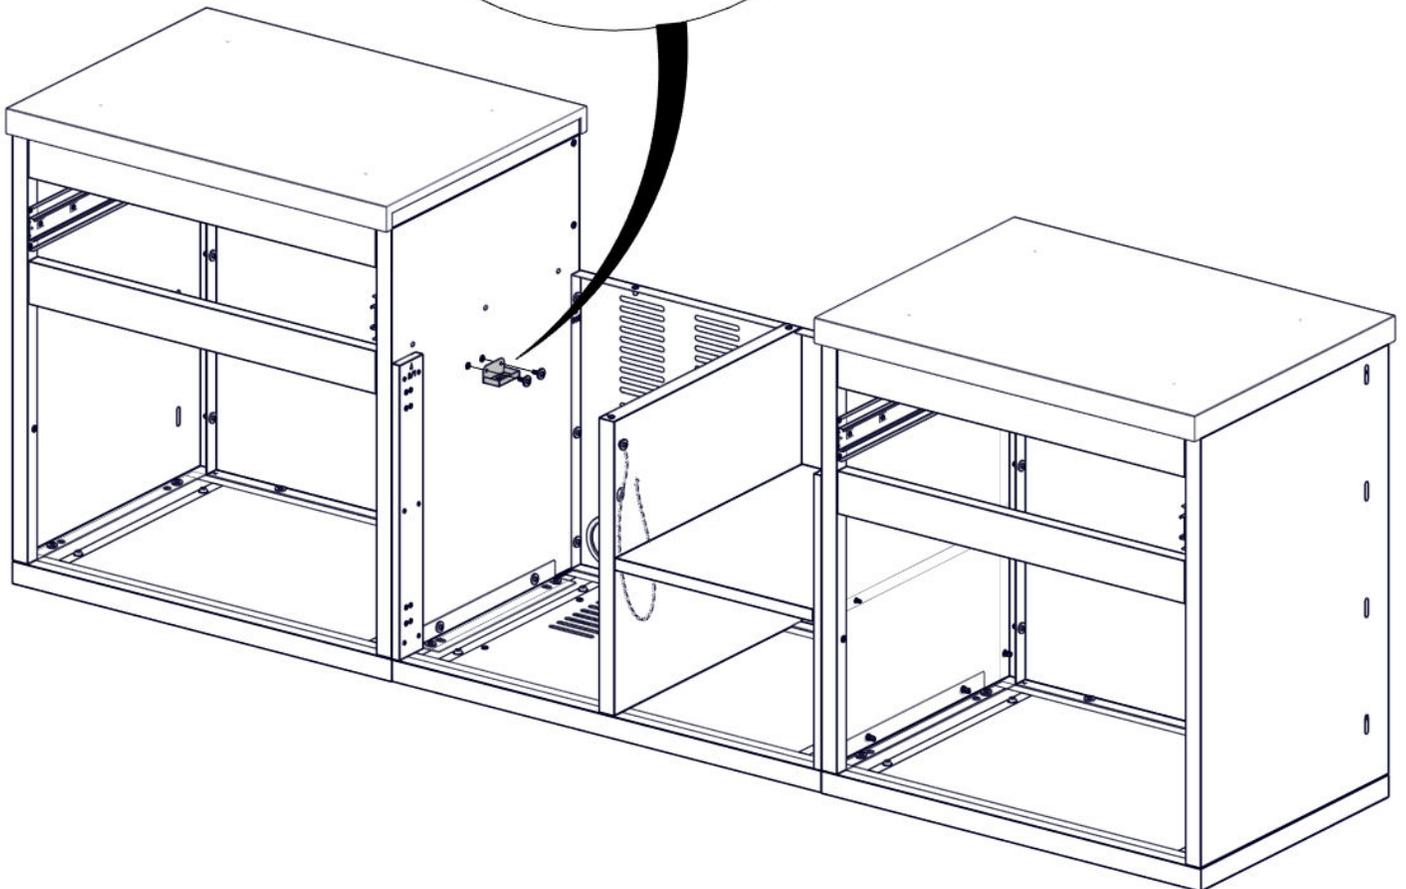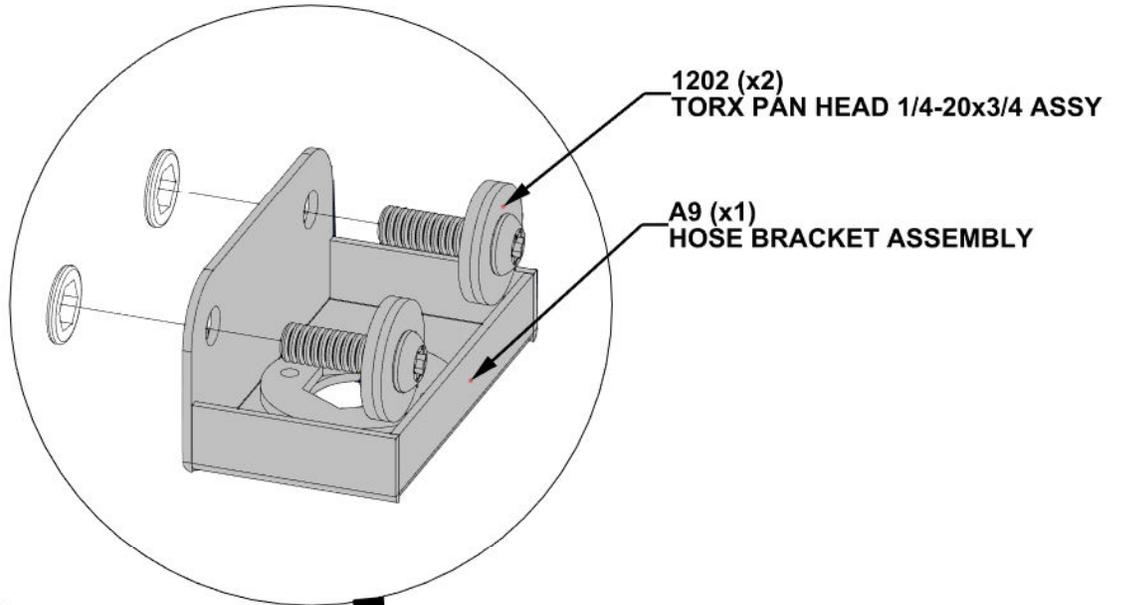


STEP 22 - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"


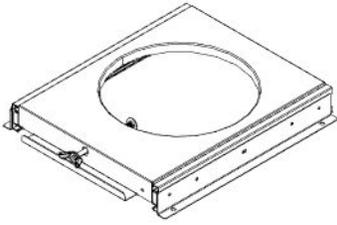


A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

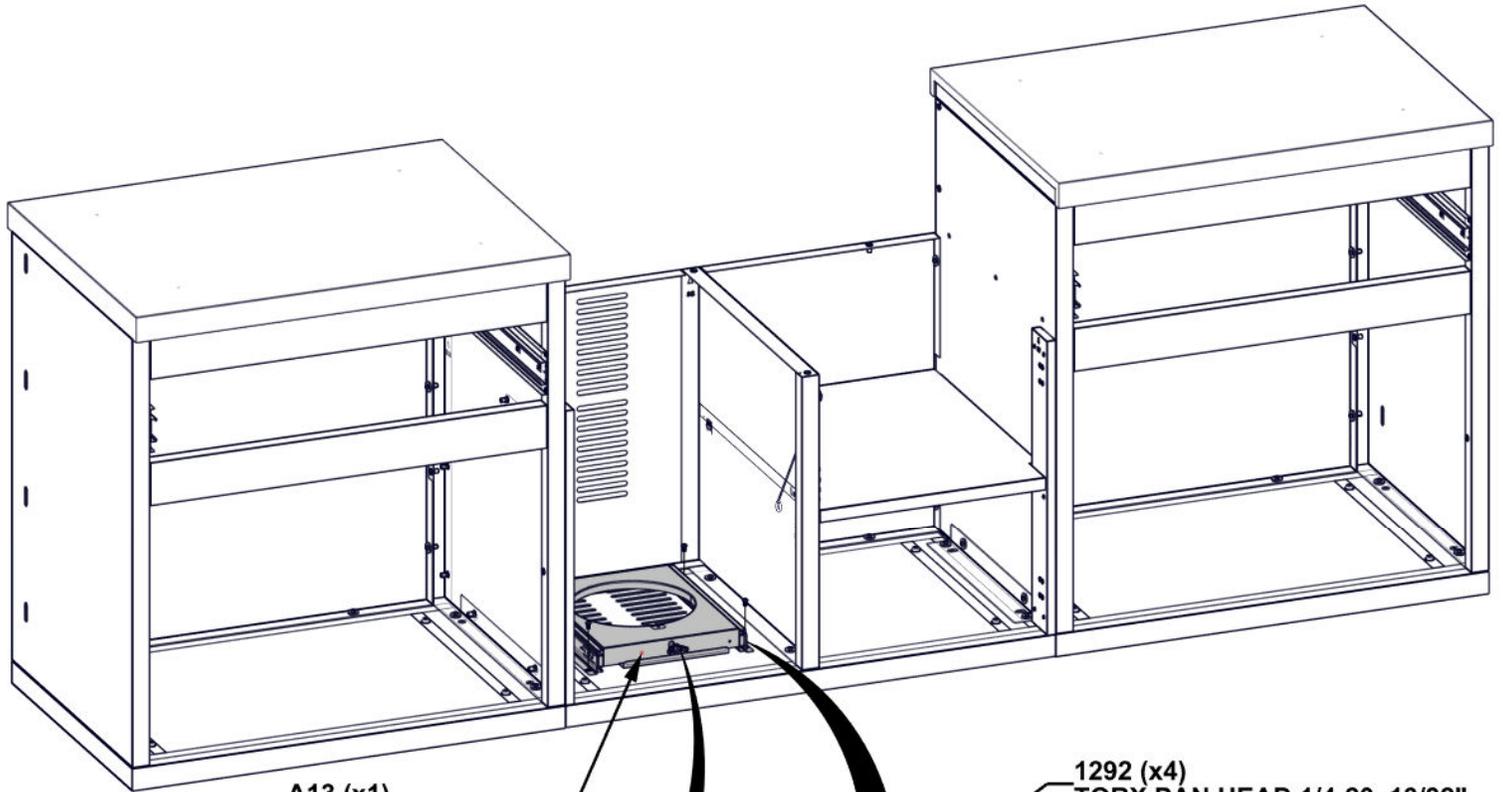

**A13 (x1)
GAS TANK HOLDER
ASSEMBLY**


**1292 (x4)
TORX PAN HEAD 1/4-20x13/32"**

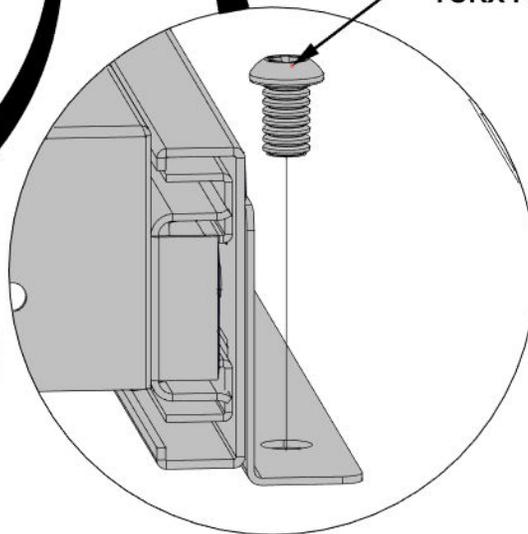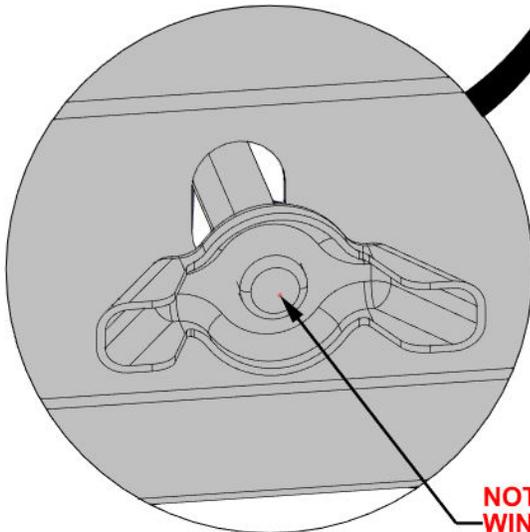

**NOTE ORIENTATION OF
WING NUT TOWARDS FRONT**

STEP 23A - CABINET ASSEMBLY


Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

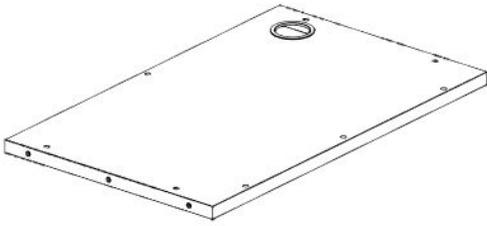


T2 TABLETOP ASSEMBLY - A4M03057
 (x1) 1 1/4"x23 3/8"x38 3/16" (32x594x970)



A2 MAGNET BRACKET - A4M03026
 (x2) 1"x1 1/4"x3 1/8" (25x31x80)

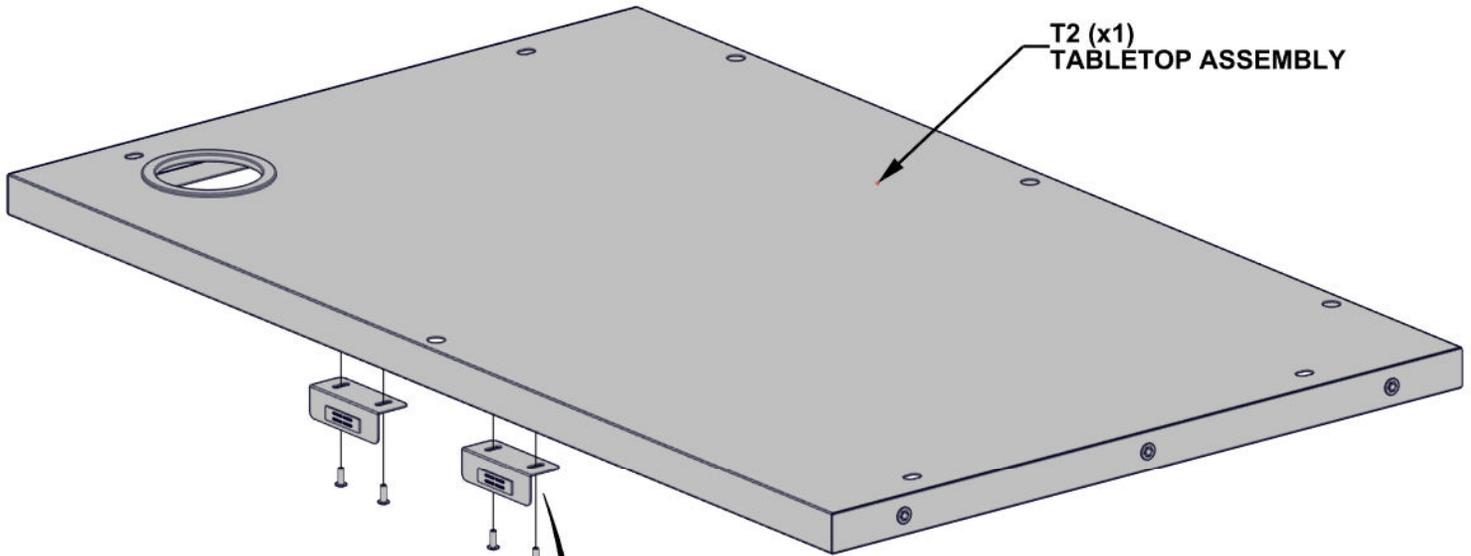

T2 (x1)
TABLETOP ASSEMBLY

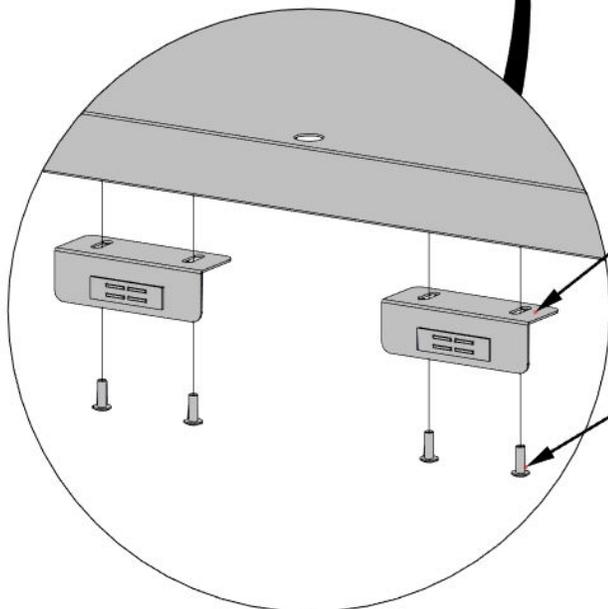


A2 (x2)
MAGNET BRACKET

1289 (x4)
PAN HEAD SCREW 8-32x1/2" SS


STEP 23B - CABINET ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

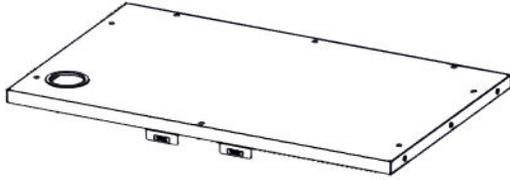


CABINET ASSEMBLY FROM STEP 23A

- HARDWARE ATTACHES ON INSIDE OF CABINET.

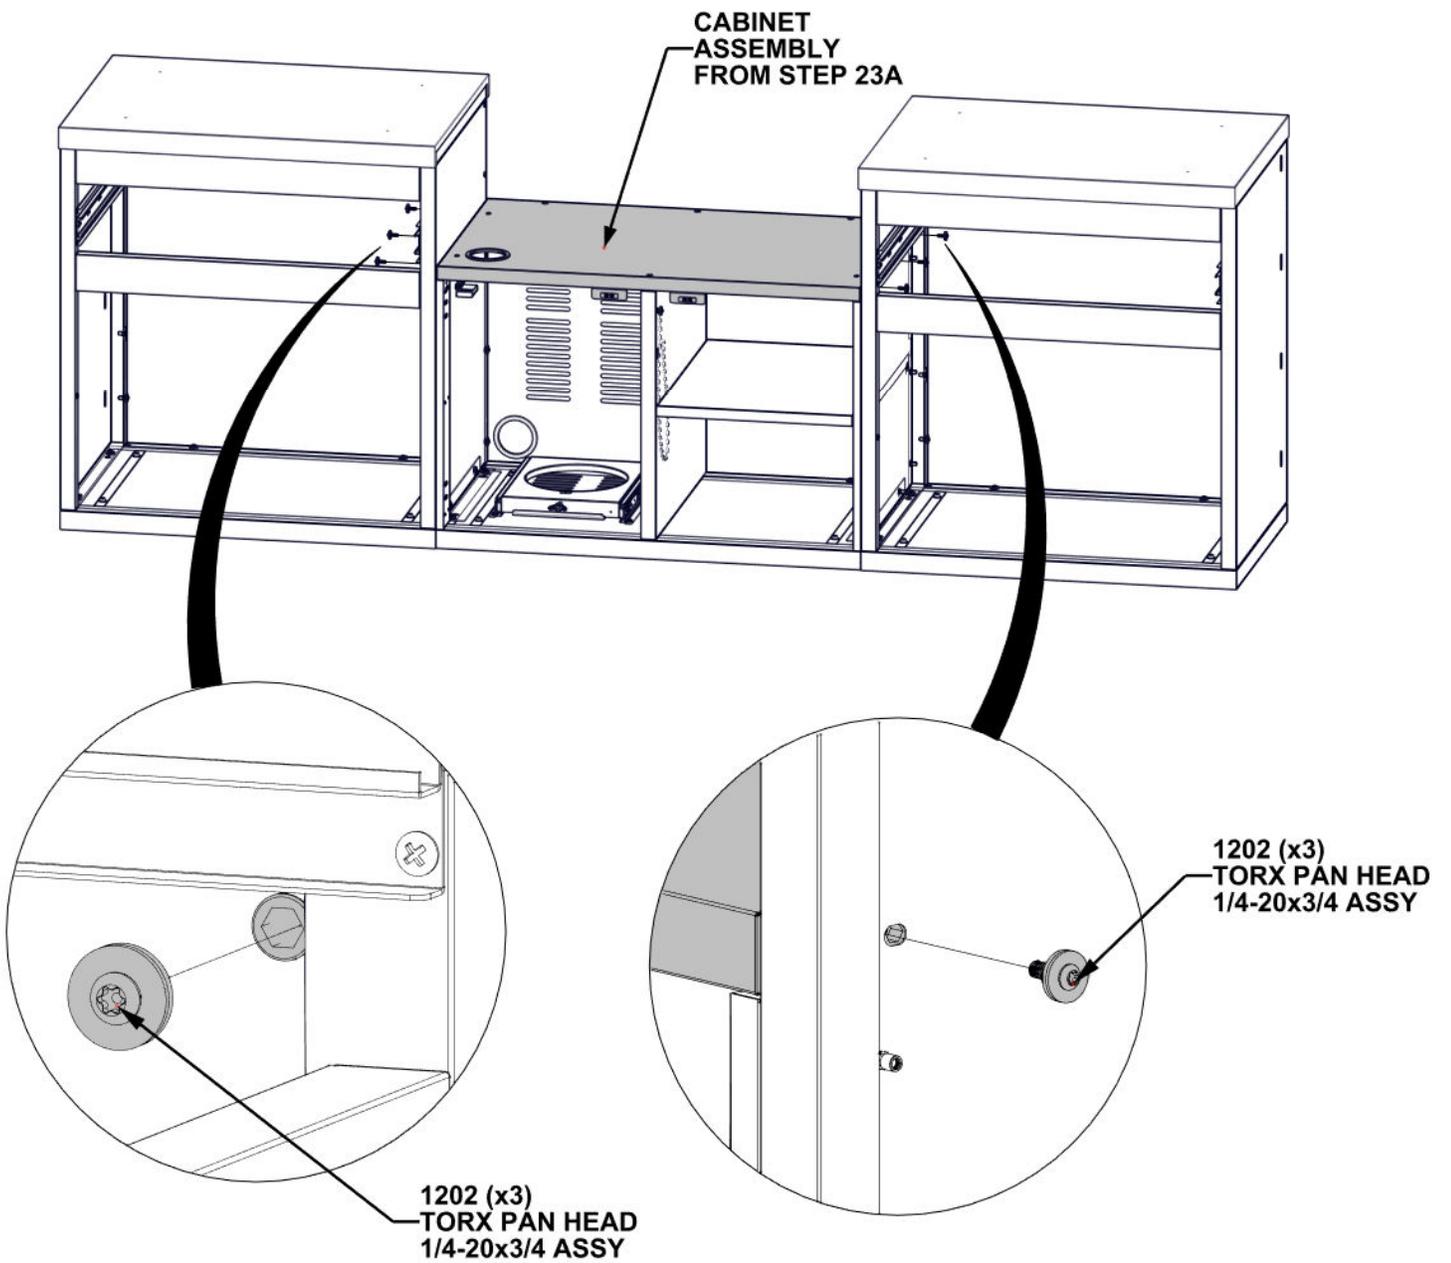


STEP 23C - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20

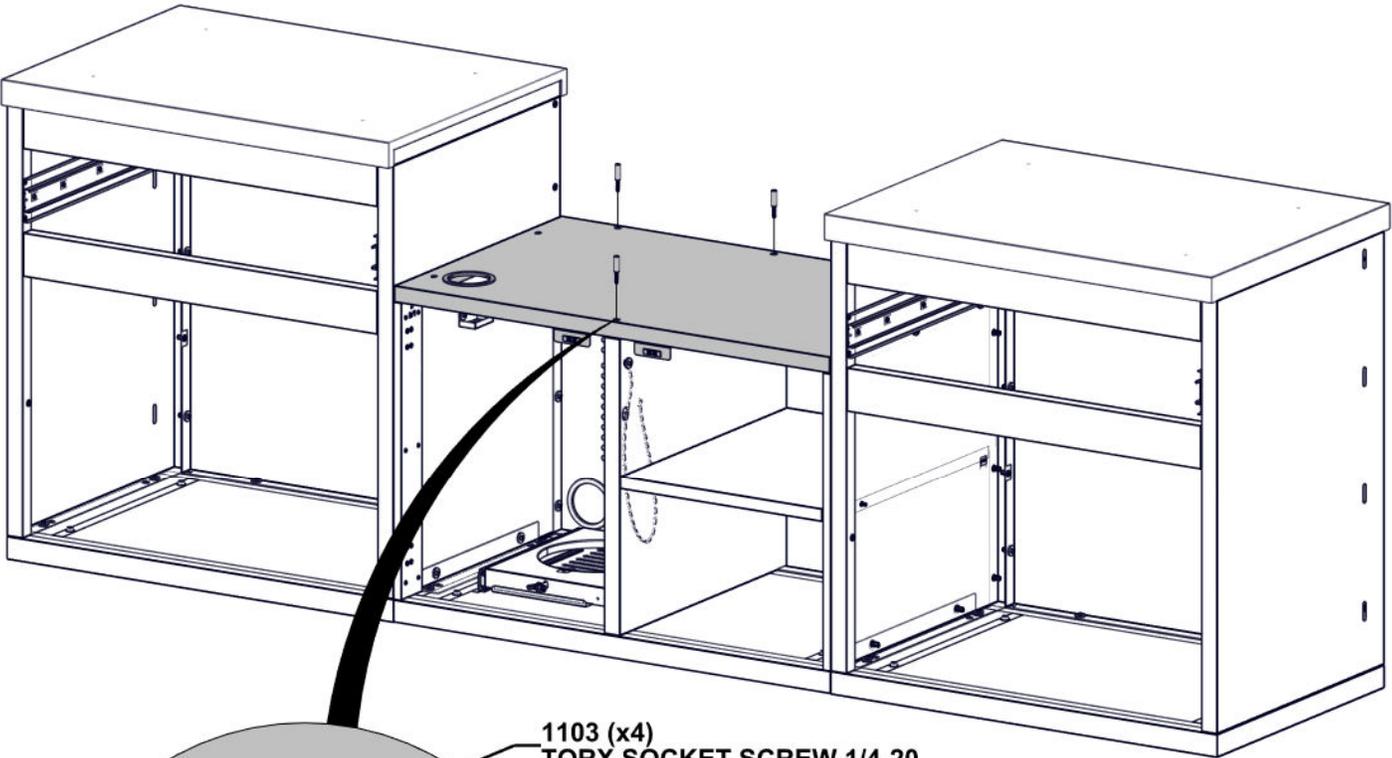


1103 (x4)
TORX SOCKET SCREW 1/4-20

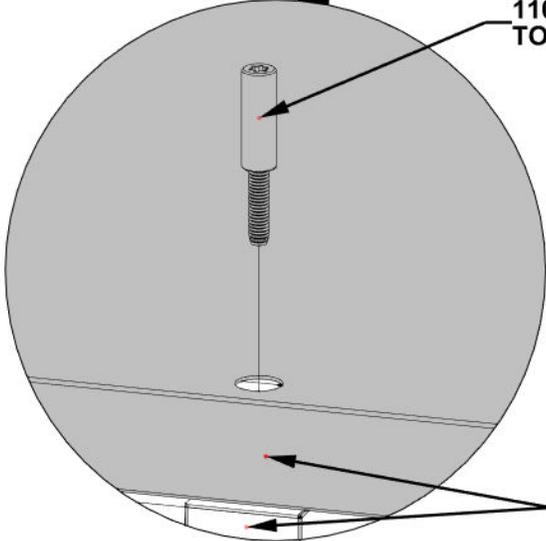



**MAKE SURE FRONT
FACE OF TABLETOP
IS FLUSH WITH
UPRIGHT PANEL**

STEP 24 - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

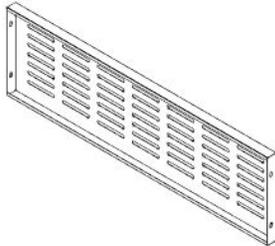


G11 VENTILATION PANEL - A4M03056
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)

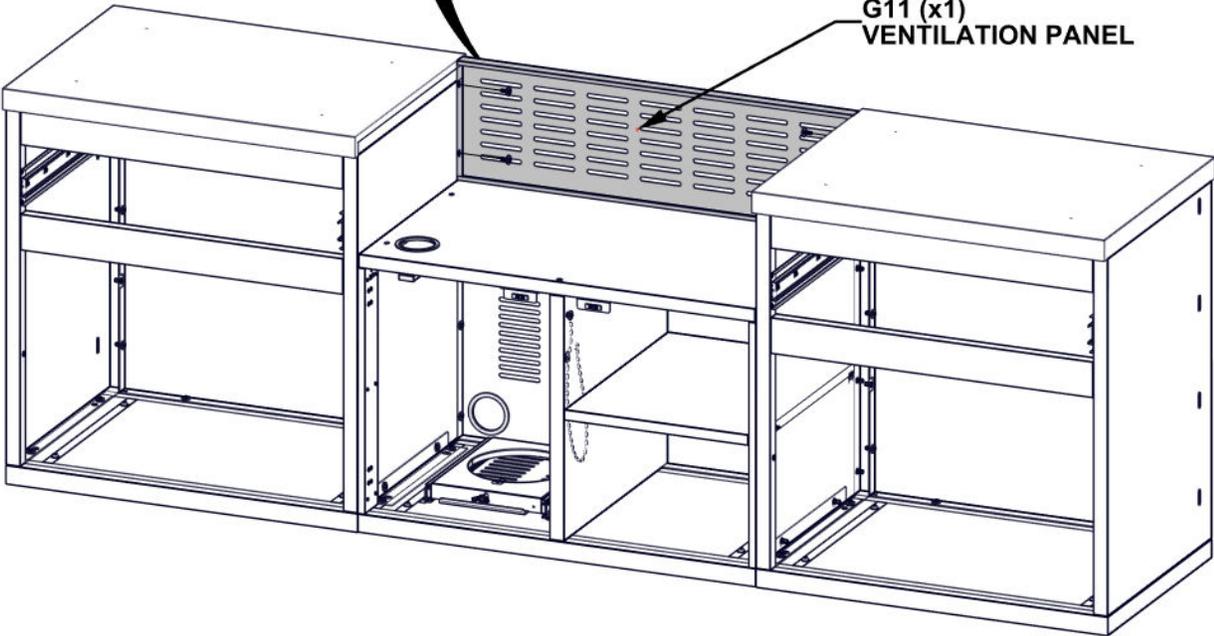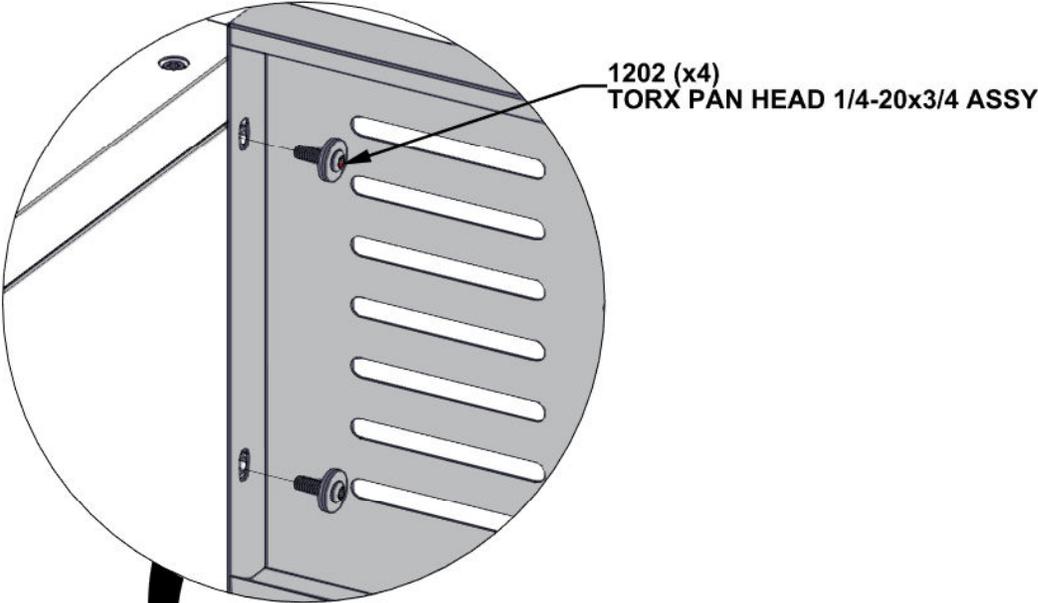


STEP 25A - POST ASSEMBLY

Qty	PartNo	Description
8	H100200	SCREW PFH 8x1 1/2 BLK

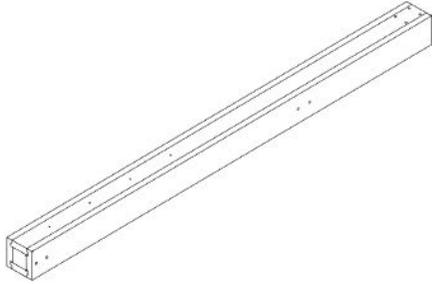


P01 POST - W2A04543
(x2) 5 1/2"x5 1/2"x89 1/2" (140x140x2274)

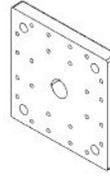


1226 5.5x5.5 POST FOOT - A6P01226
(x2) 5/8"x5 1/2"x5 1/2" (16x140x140)

- ALIGN POST FOOT AND DRILL 1/8" [3mm] PILOT HOLES FOR THE ATTACHMENT OF HARDWARE.
- REPEAT THIS STEP 2 TIMES.

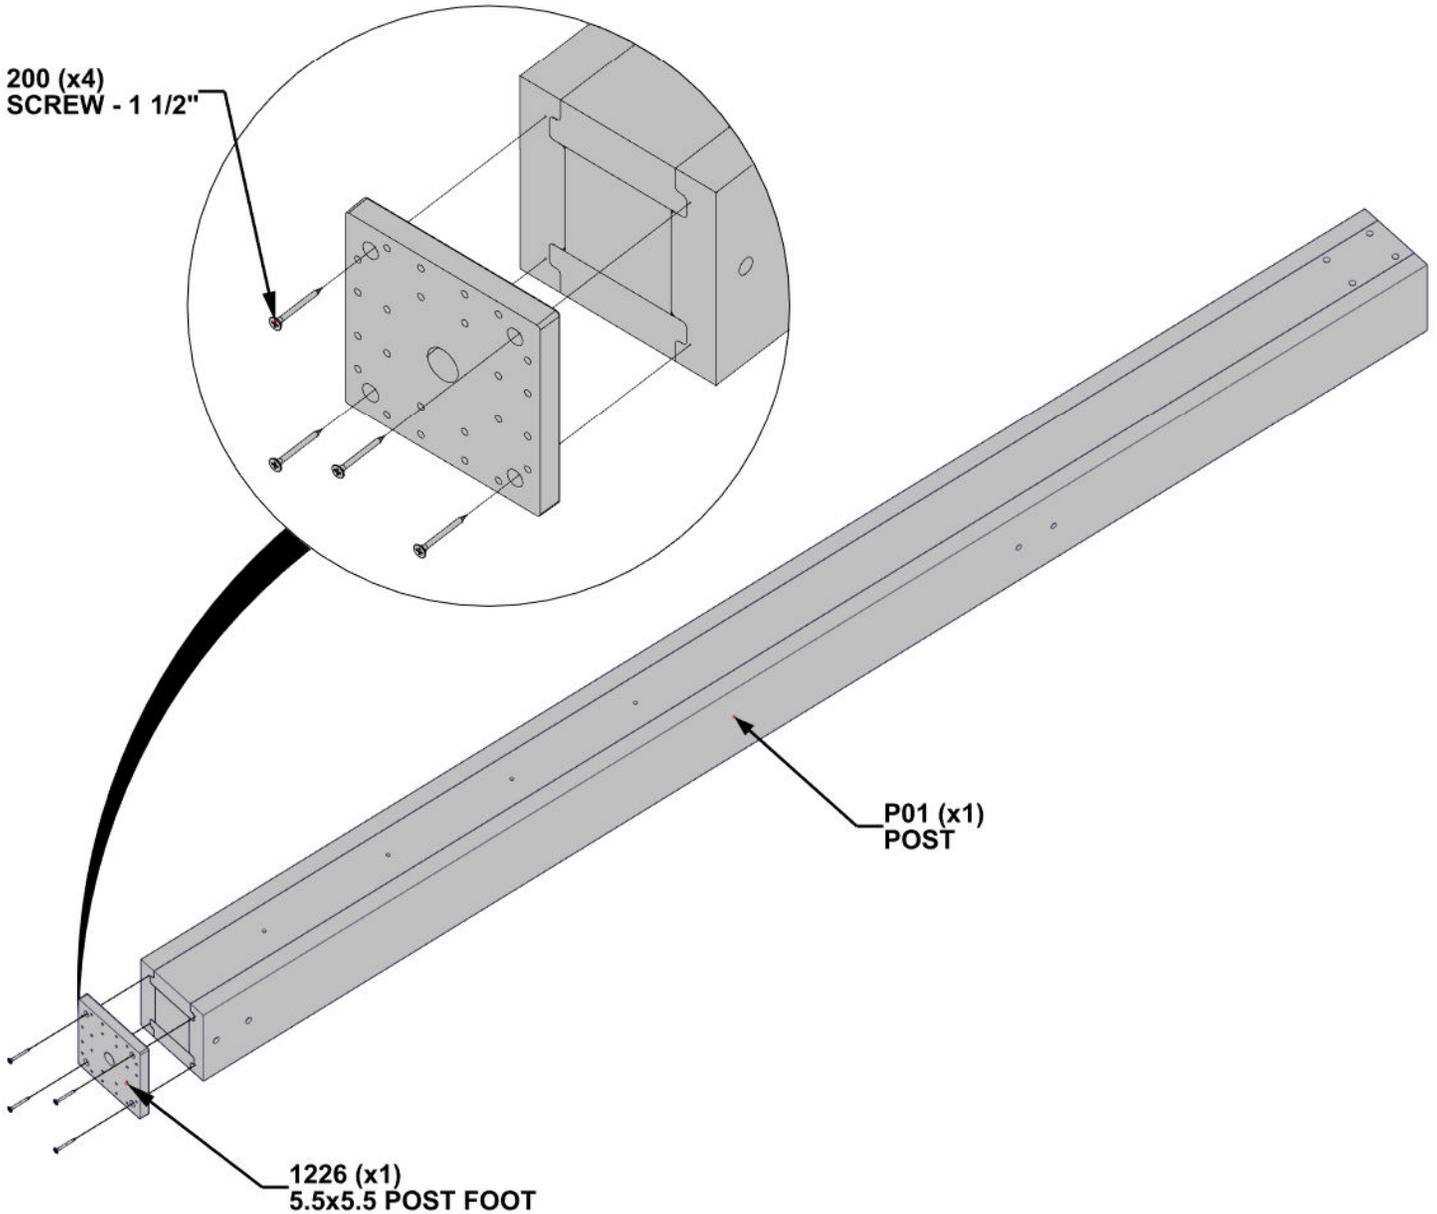


STEP 25B - POST ASSEMBLY

Qty	PartNo	Description
4	H100202	SCREW PWH 8x5/8 BLK

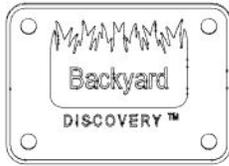


2158 BYD ID TAG PATIO - A4M02158
(x1) 1/8"x2"x2 13/16" (3.1x51x71)

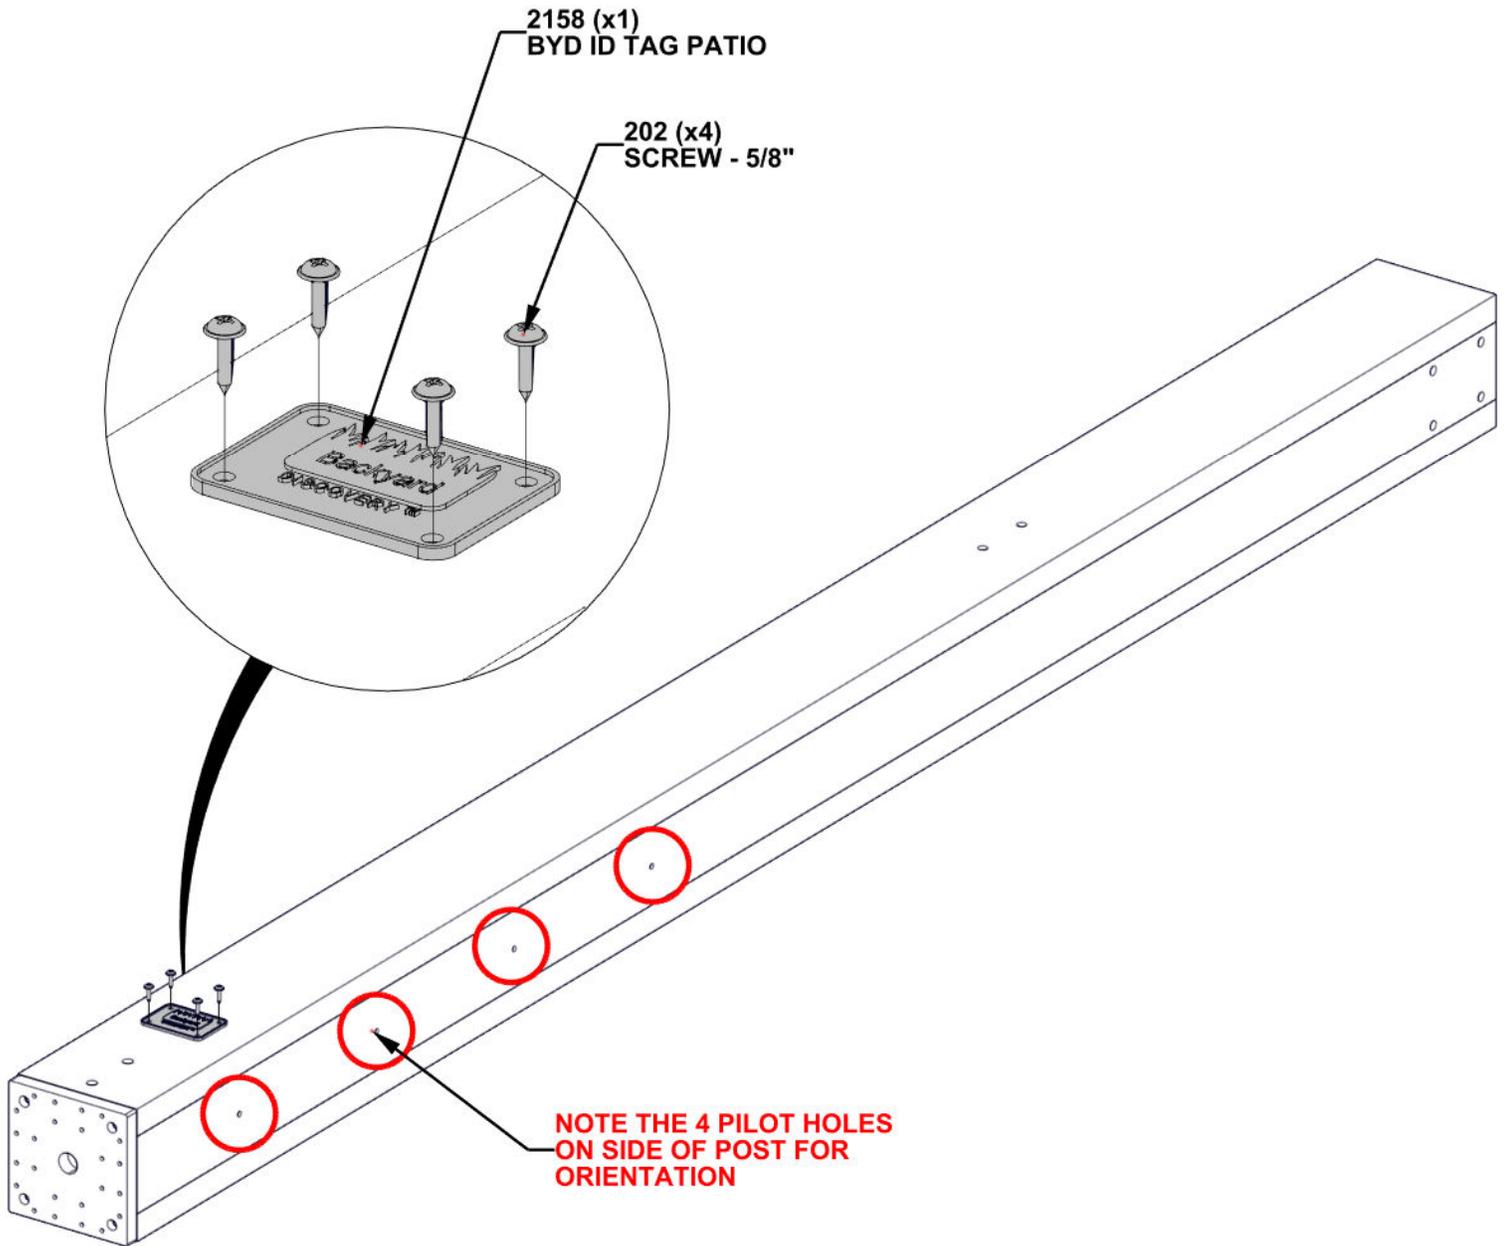


STEP 26A - POST ASSEMBLY

Qty	PartNo	Description
4	H100206	LAG SCREW WH 5/16x3 BLK
4	H101316	WASHER FLAT 8.5x30 BLK

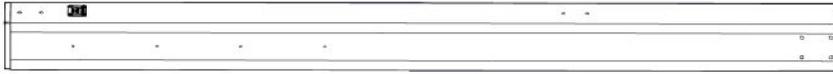

POST ASSEMBLY FROM STEP 25B

- ATTACH POST TO LEFT CABINET.
- THE INSIDE OF THE BACK LEFT POST WILL SIT AGAINST SIDE OF LEFT CABINET.
- BACKSIDE OF POST WILL SIT FLUSH WITH BACKSIDE OF LEFT CABINET.
- BEFORE TIGHTENING HARDWARE, ADJUST CABINET FEET AS NEEDED UNTIL CABINETS ARE LEVEL.
- ALIGN PILOT HOLES IN POST WITH SLOTS IN CABINET.

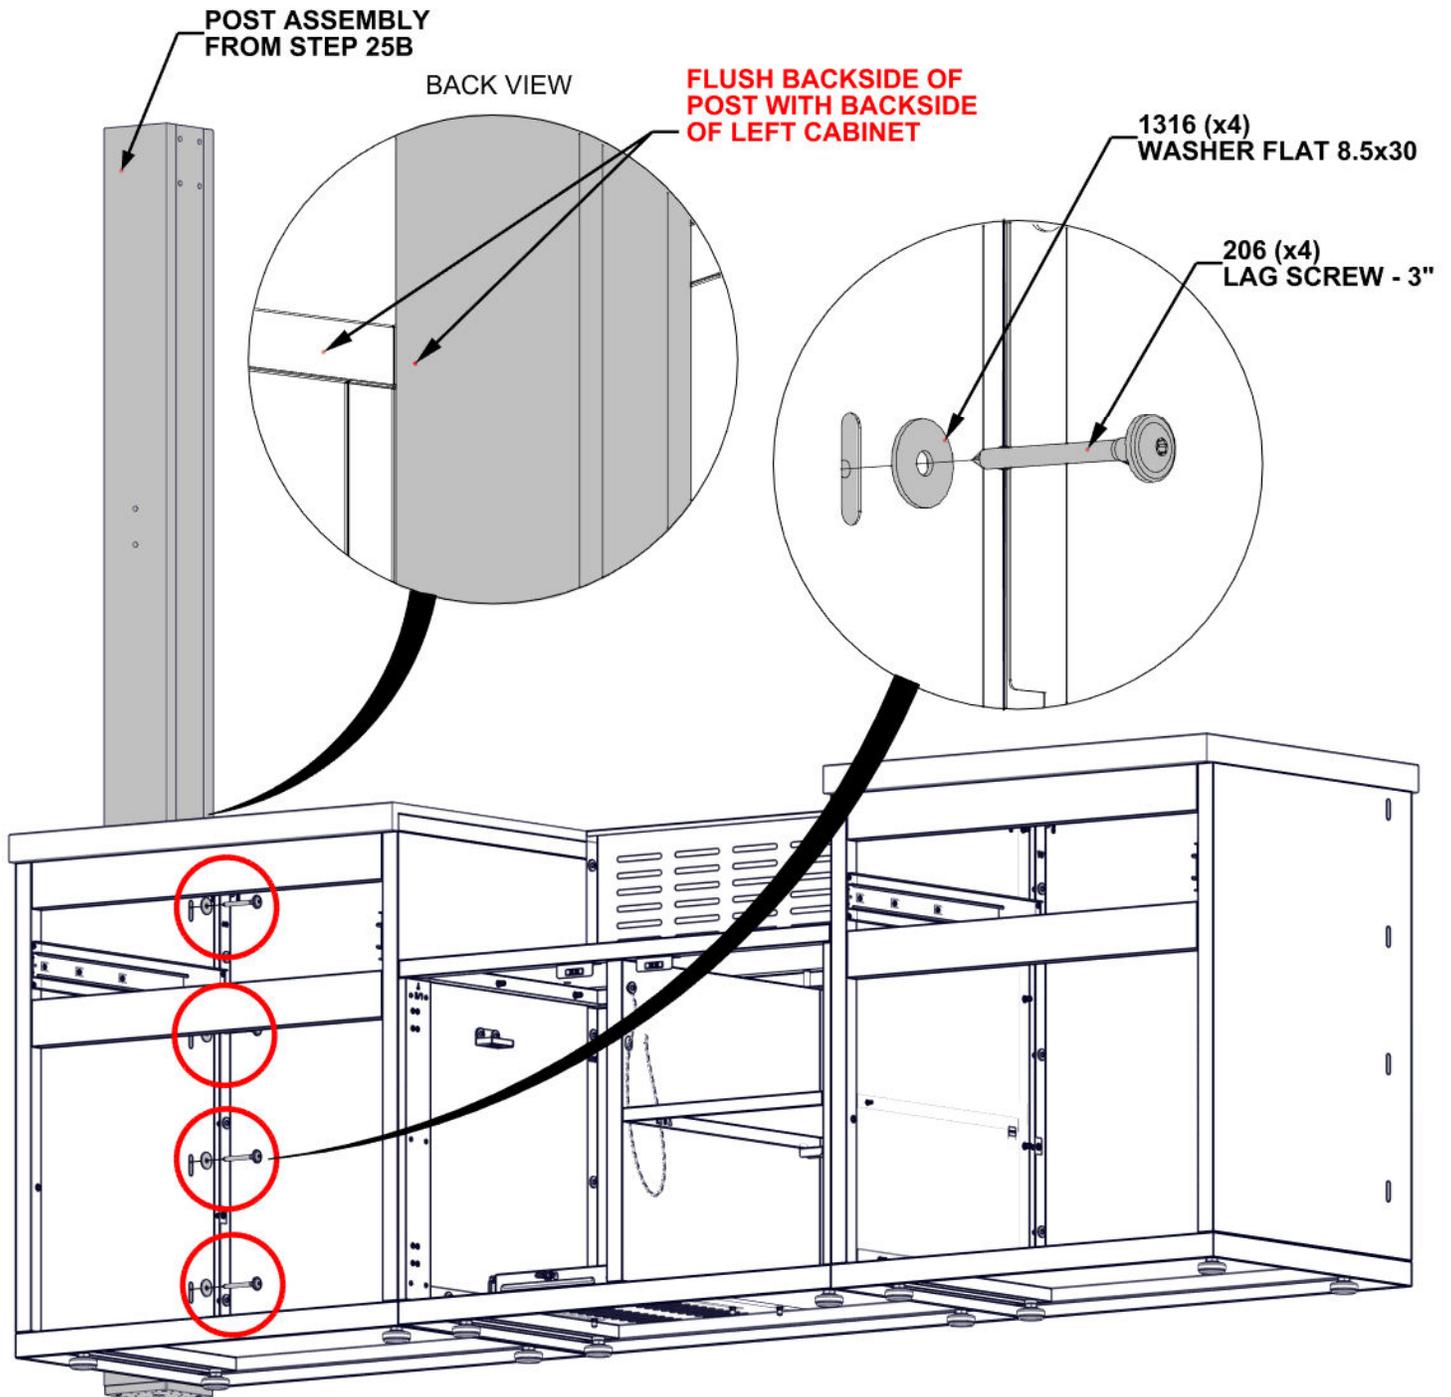


STEP 26B - POST ASSEMBLY

Qty	PartNo	Description
4	H100206	LAG SCREW WH 5/16x3 BLK
4	H101316	WASHER FLAT 8.5x30 BLK




POST ASSEMBLY FROM STEP 25A

- ATTACH POST TO RIGHT CABINET.
- THE INSIDE OF THE BACK RIGHT POST WILL SIT AGAINST SIDE OF RIGHT CABINET.
- BACKSIDE OF POST WILL SIT FLUSH WITH BACKSIDE OF RIGHT CABINET.
- BEFORE TIGHTENING HARDWARE, ADJUST CABINET FEET AS NEEDED UNTIL CABINETS ARE LEVEL.
- ALIGN PILOT HOLES IN POST WITH SLOTS IN CABINET.

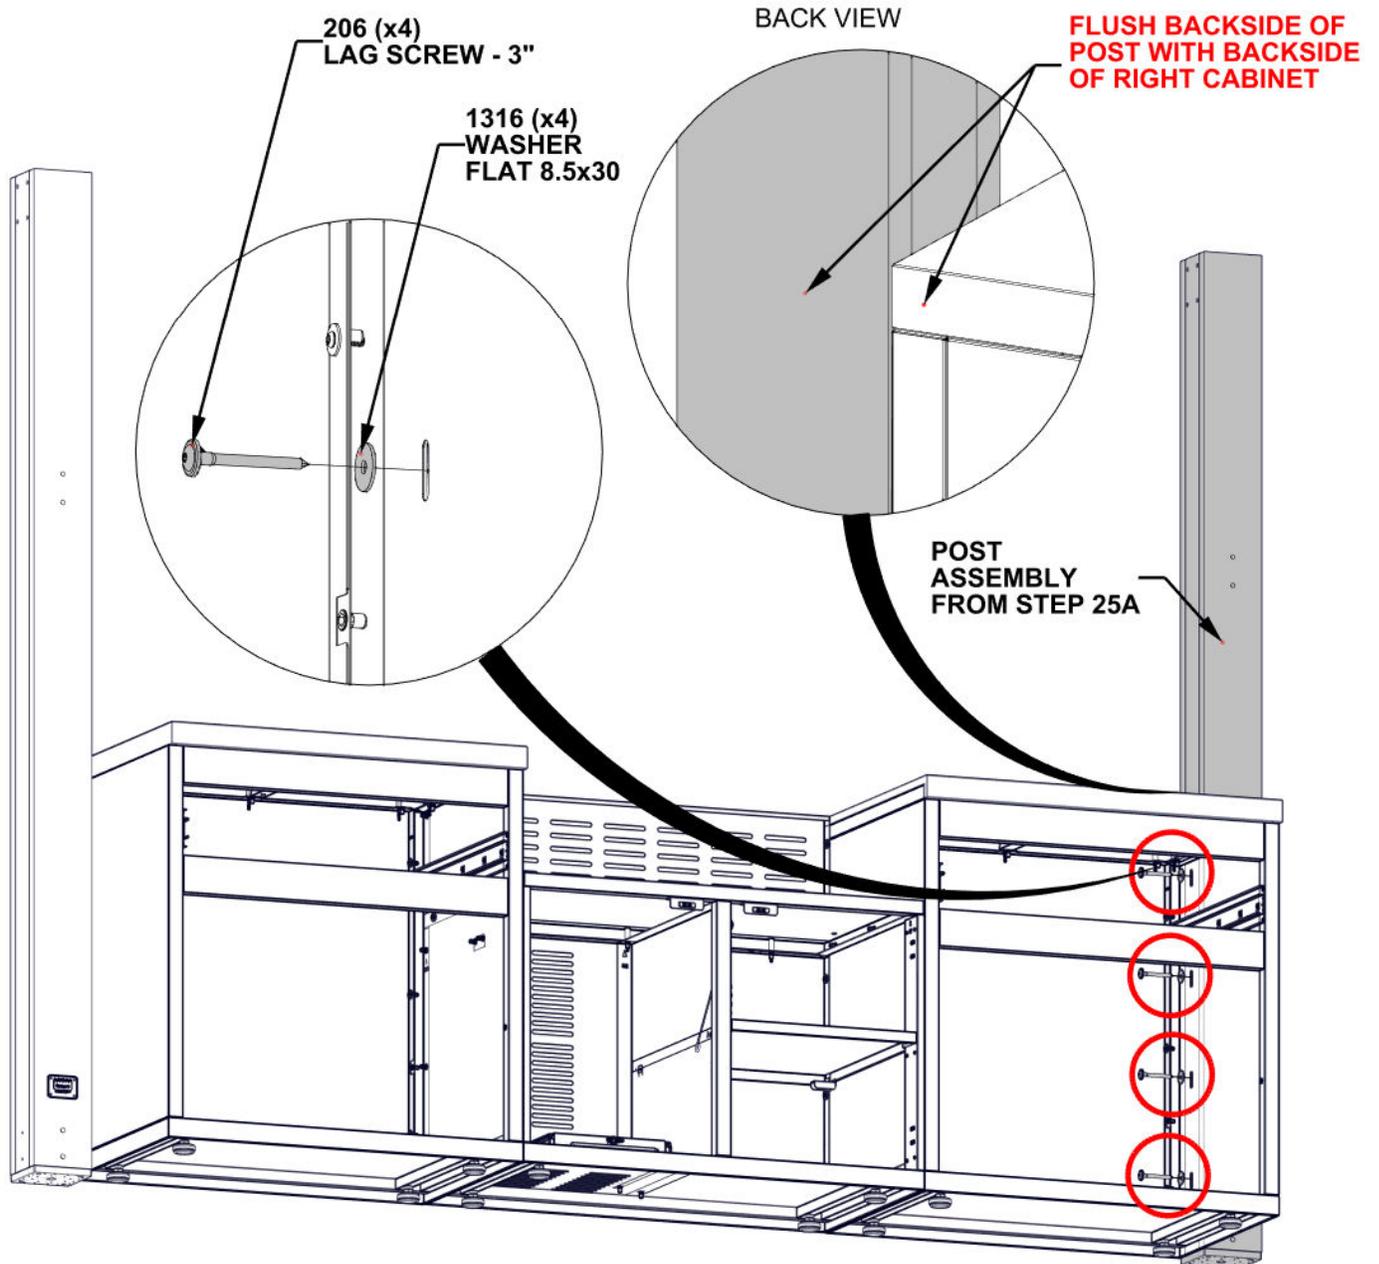


STEP 27A - ANCHORING

Qty	PartNo	Description
4	H100469	NUT BARREL WH 5/16X5/8 BLK
4	H100964	BOLT WH 5/16x5 1/2 BLK
4	H100471	LAG SCREW WH 5/16x1 1/2 BLK

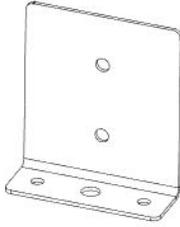

977 POST ANCHORING PLATE WITH FLANGE - A4M00977
(x6) 1/8"x4 15/16" (3x125x141)

- ALIGN ANCHOR PLATES WITH PILOT HOLES IN EACH POST.

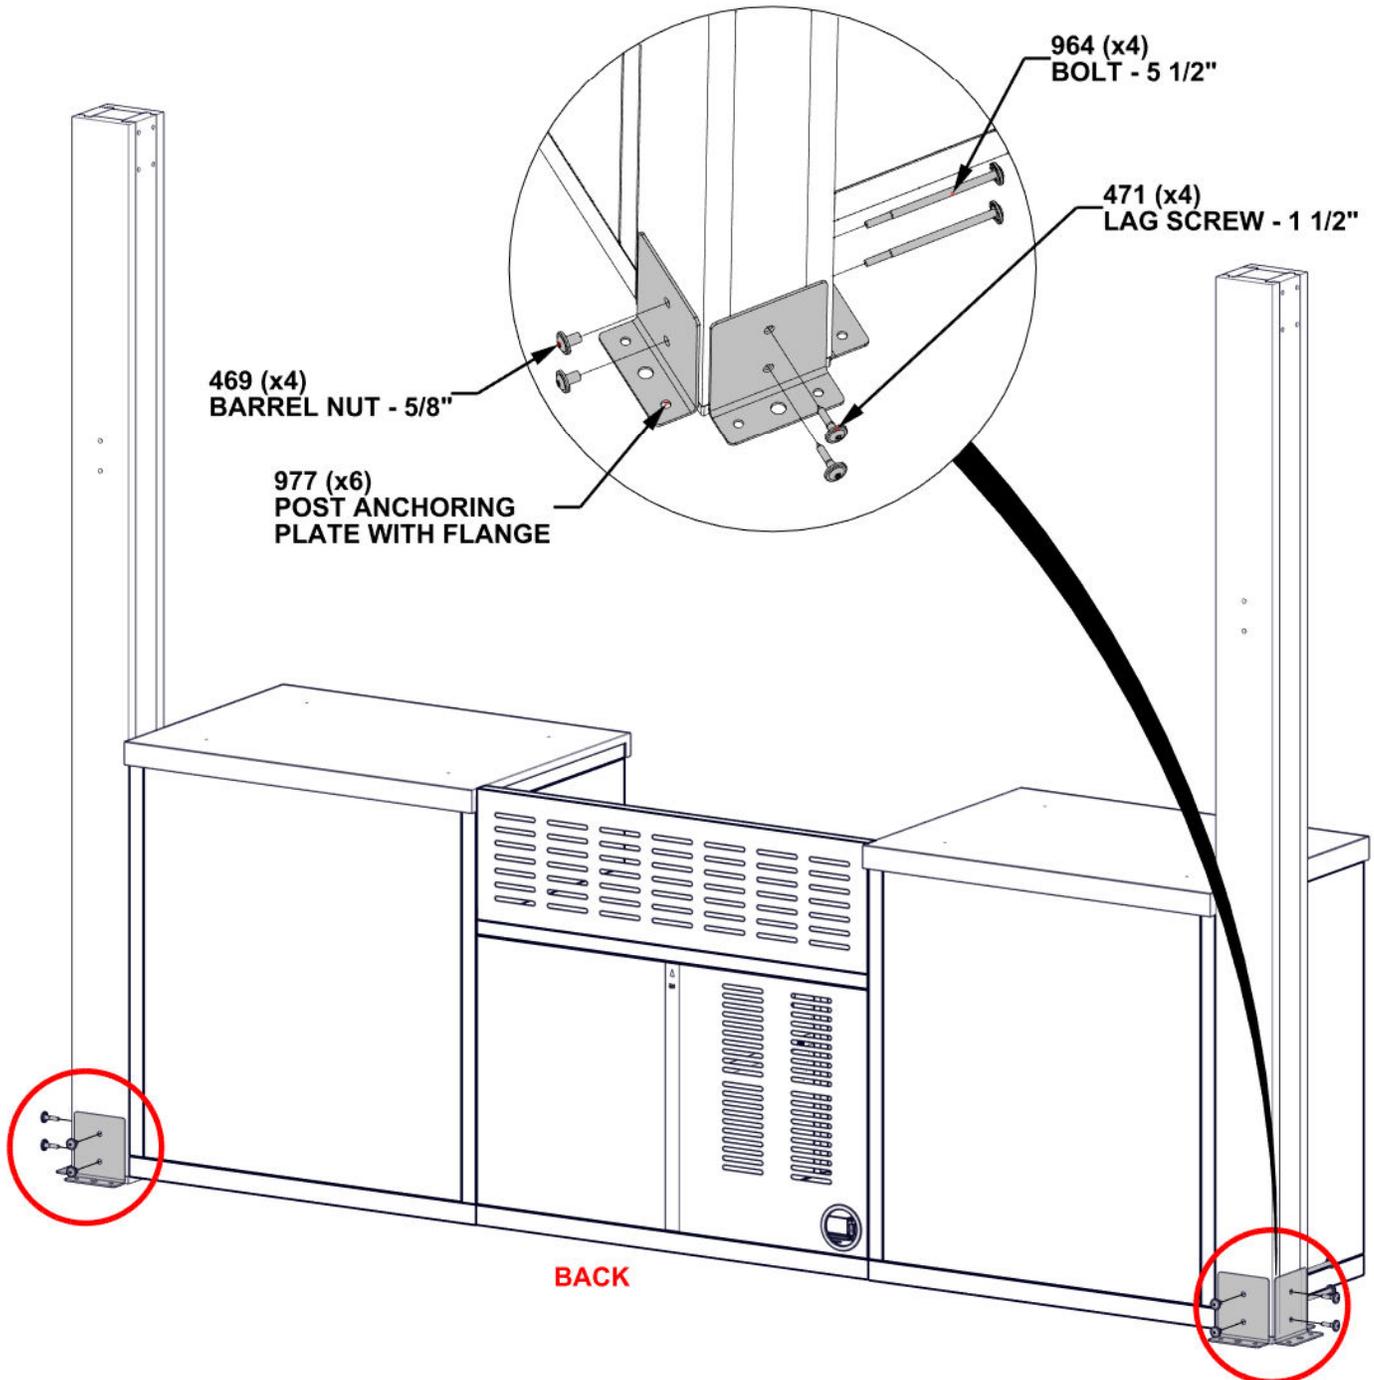


STEP 27B - ANCHORING


Qty	PartNo	Description
12	H101165	CONCRETE ANCHOR 3/8"x3" BLK

- MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE SURFACE OR CONCRETE POST PADS AS SHOWN BELOW.
- FOR INSTALLATION ON WOOD DECK, YOU MUST ENSURE THERE IS AMPLE STRUCTURAL SUPPORT UNDER THE DECK. HARDWARE NOT INCLUDED FOR DECK ATTACHMENT.

- PRE-DRILL HOLES FOR CONCRETE ANCHORS USING A 5/16" [8mm] CONCRETE BIT.

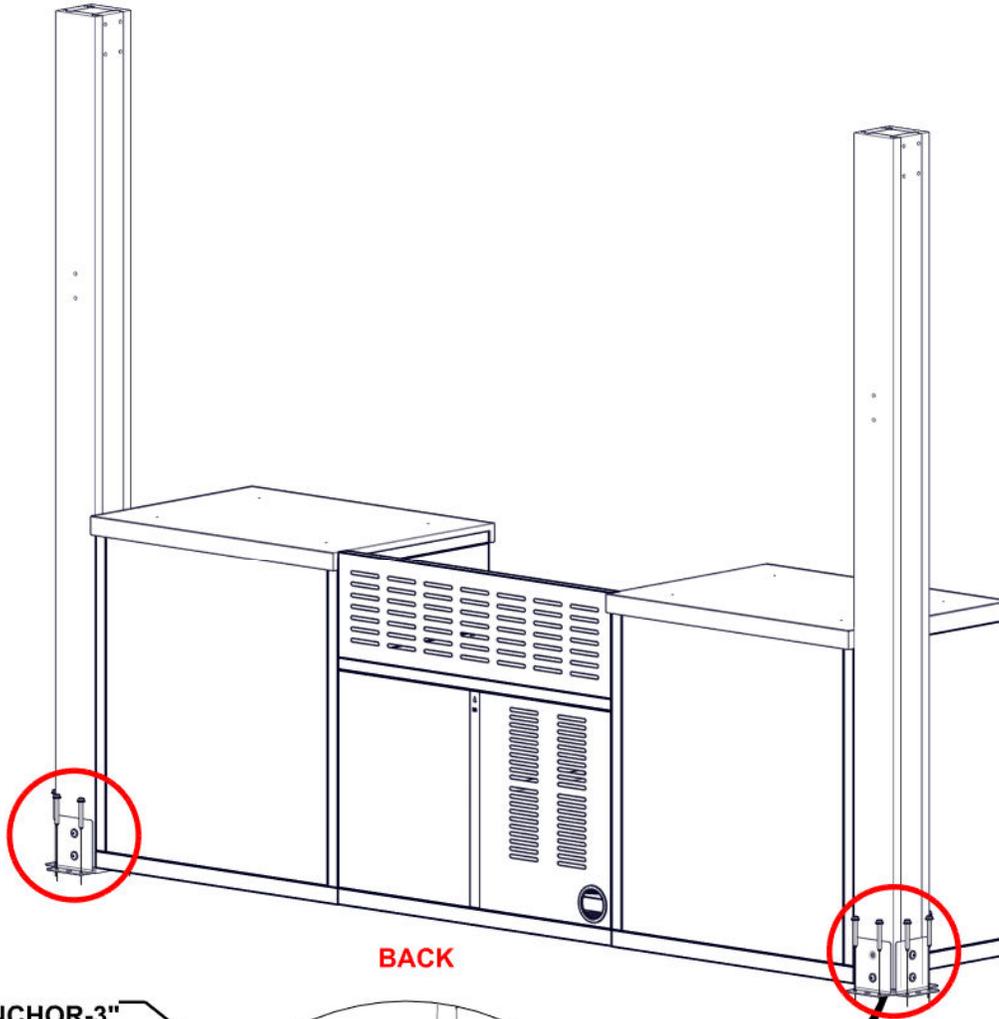


1165 (x12)
CONCRETE ANCHOR-3"

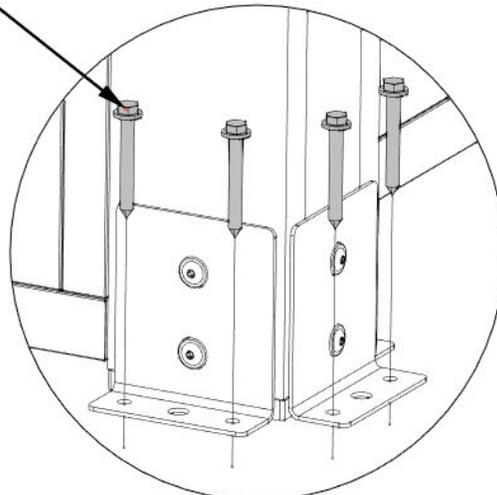


STEP 28 - SHELF ASSEMBLY

Qty	PartNo	Description
8	H101132	TORX SOCKET SCREW SHORT 1/4-20

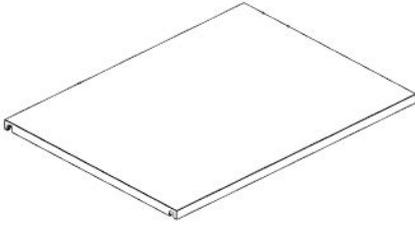


L1 SHELF - A4M04403
(x2) 30 15/16"x23 3/16"x1" (25.00x589.00x786.00)

- THREAD SCREWS INTO THREADED INSERTS.
- SET SHELVES ONTO SCREWS IN PLACE.

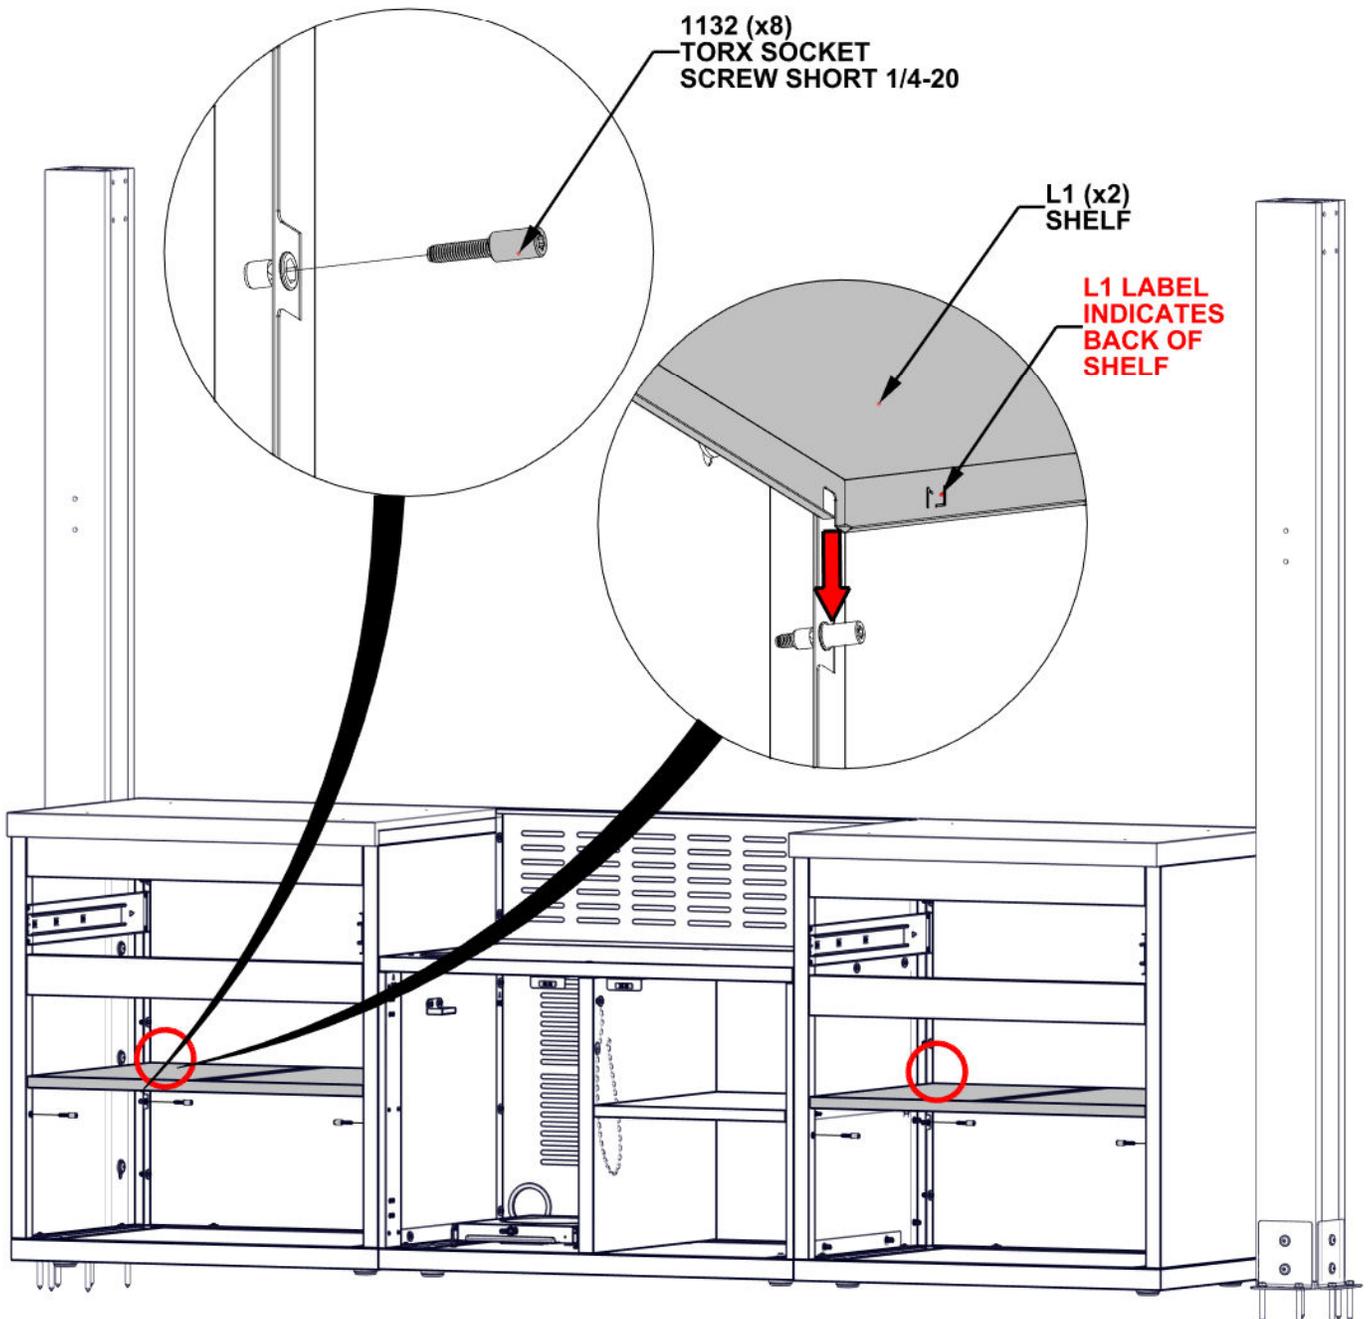


STEP 29 - DRAWER ASSEMBLY

Qty	PartNo	Description
18	H101289	PAN HEAD SCREW 8-32x1/2" SS

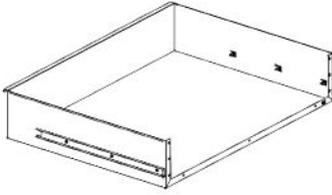

DW01 DRAWER - A4M04397
(x2) 30 9/16"x22 9/16"x5 3/4" (146x573x777)

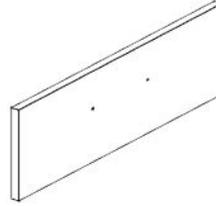

DW02 DRAWER FRONT PANEL - A4M04398
(x2) 32"x9 5/8"x15/16" (24.00x245.00x813.50)


- ALIGN THRU HOLES IN DRAWER WITH THREADED INSERTS IN DRAWER FRONT PANEL.

- REPEAT THIS STEP 2 TIMES.

1289 (x9)
PAN HEAD SCREW 8-32x1/2" SS


DW01 (x1)
DRAWER

DW02 (x1)
DRAWER FRONT
PANEL

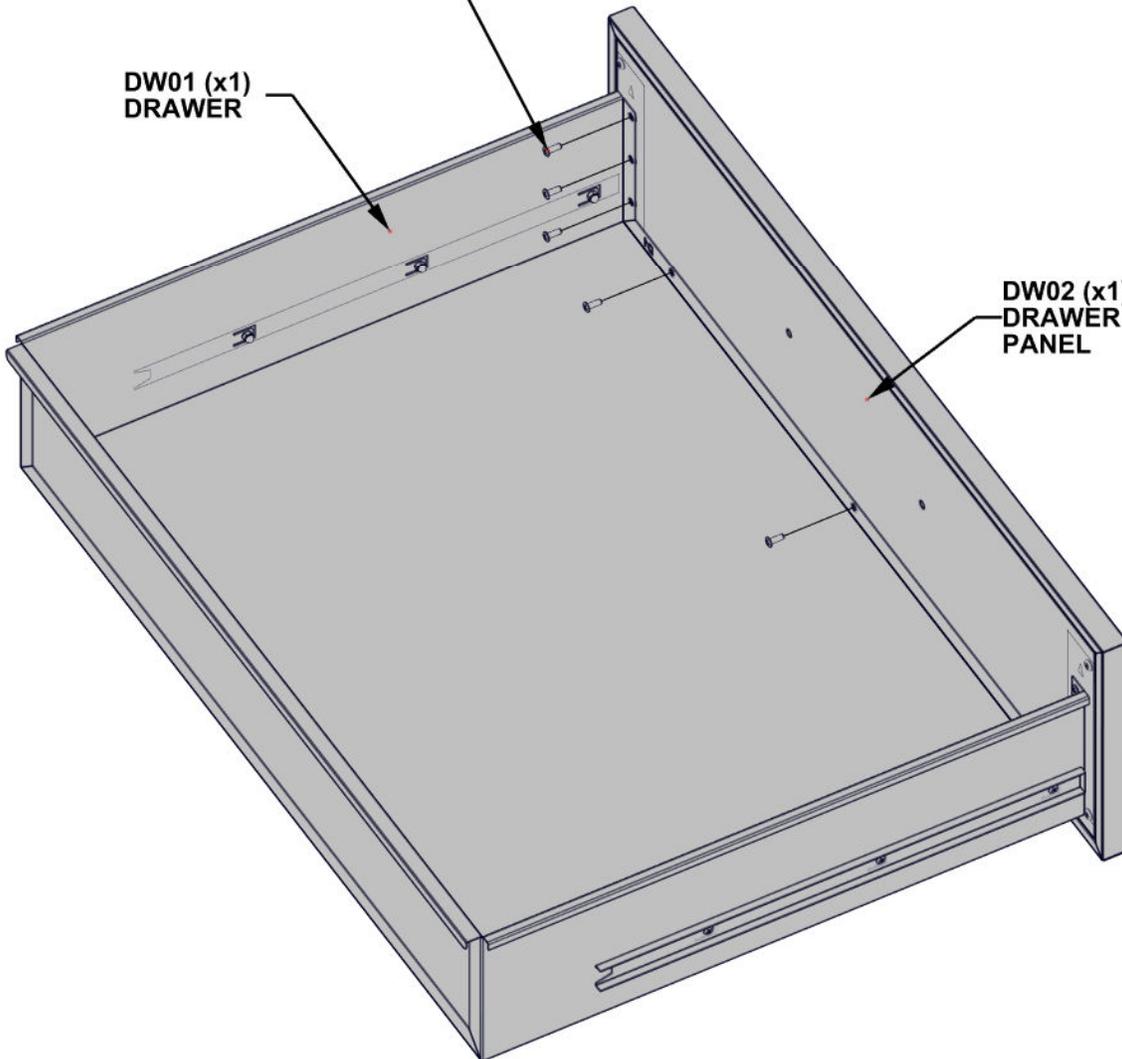


STEP 30 - DRAWER ASSEMBLY

Qty	PartNo	Description
4	H101307	SHOULDER BOLT 8-32x30mm SS

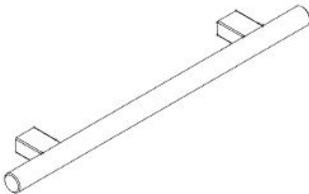


H2 STAINLESS STEEL HANDLE - A4M03024
(x2) 5/8"x1 9/16"x11 13/16" (16x40x300)

- INSTALL HANDLES TO ALL DRAWERS.
- REPEAT THIS STEP 2 TIMES.

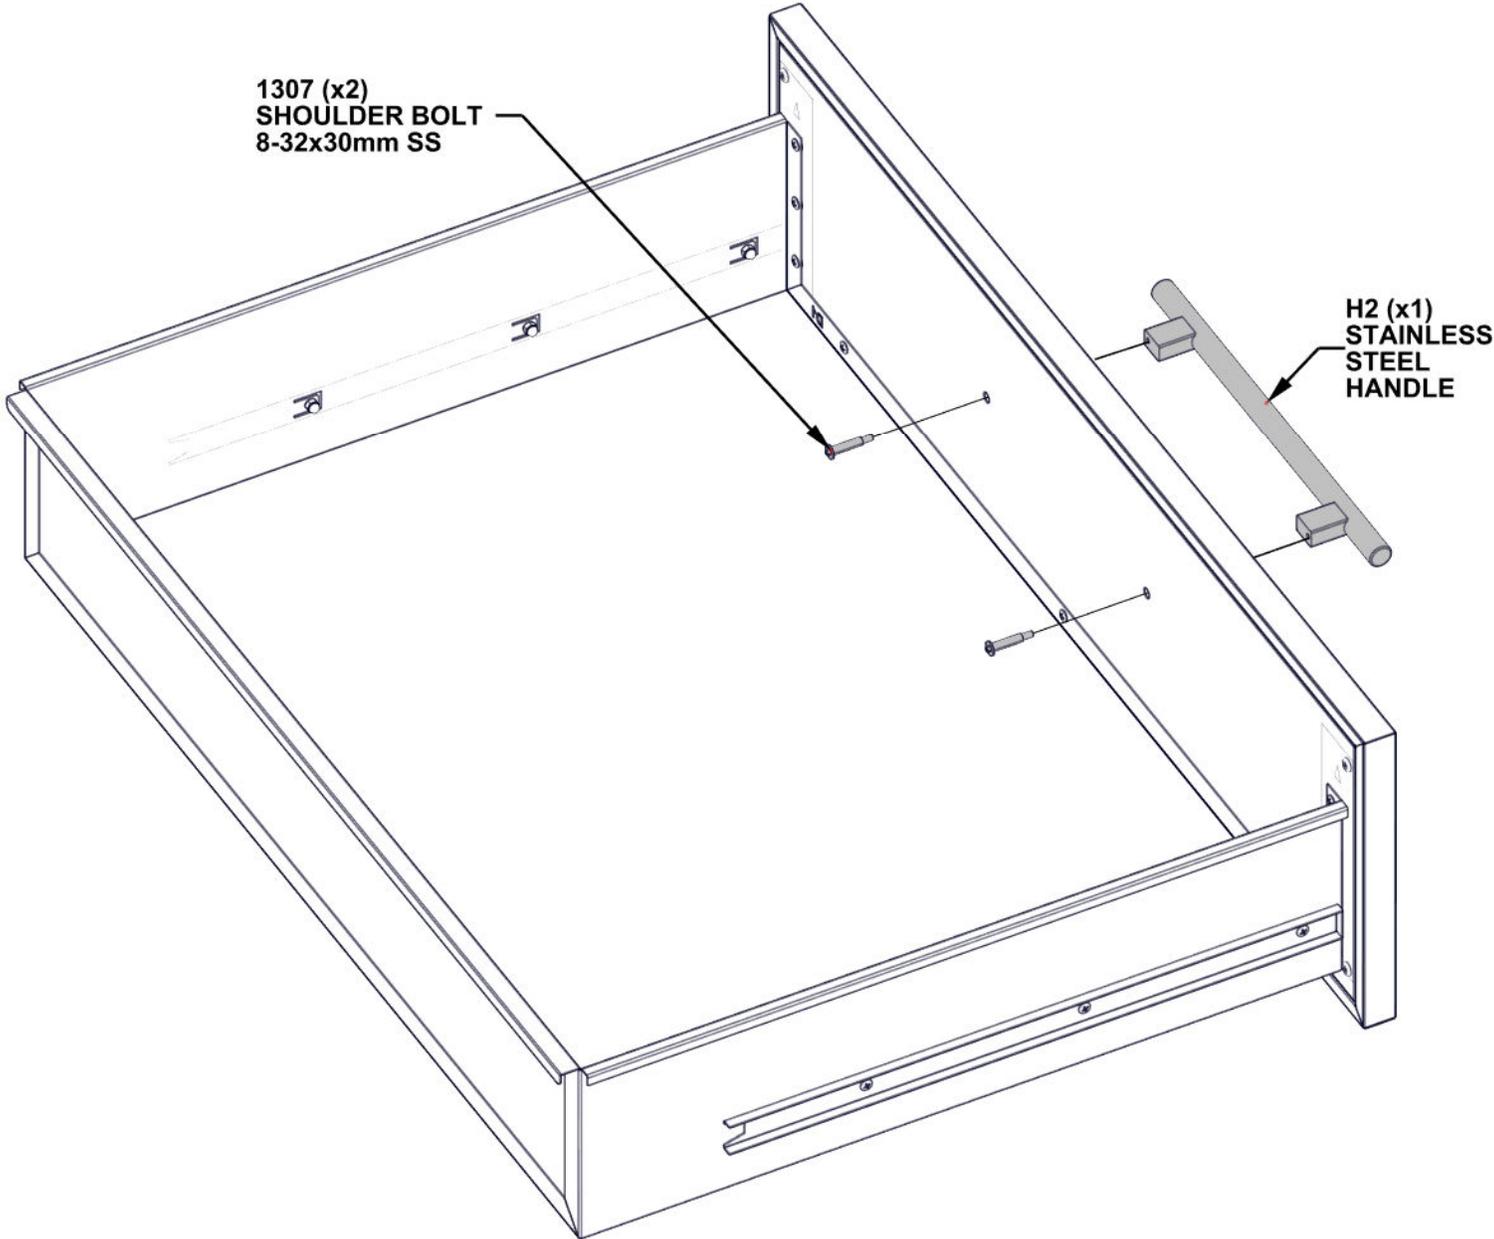


STEP 31 - DRAWER ASSEMBLY

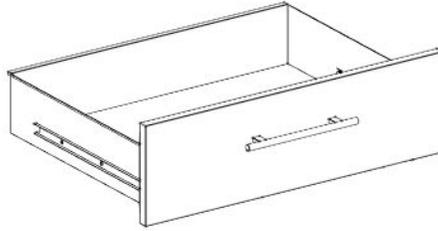

DRAWER ASSEMBLY FROM STEPS 29 - 30


- ATTACH DRAWER ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

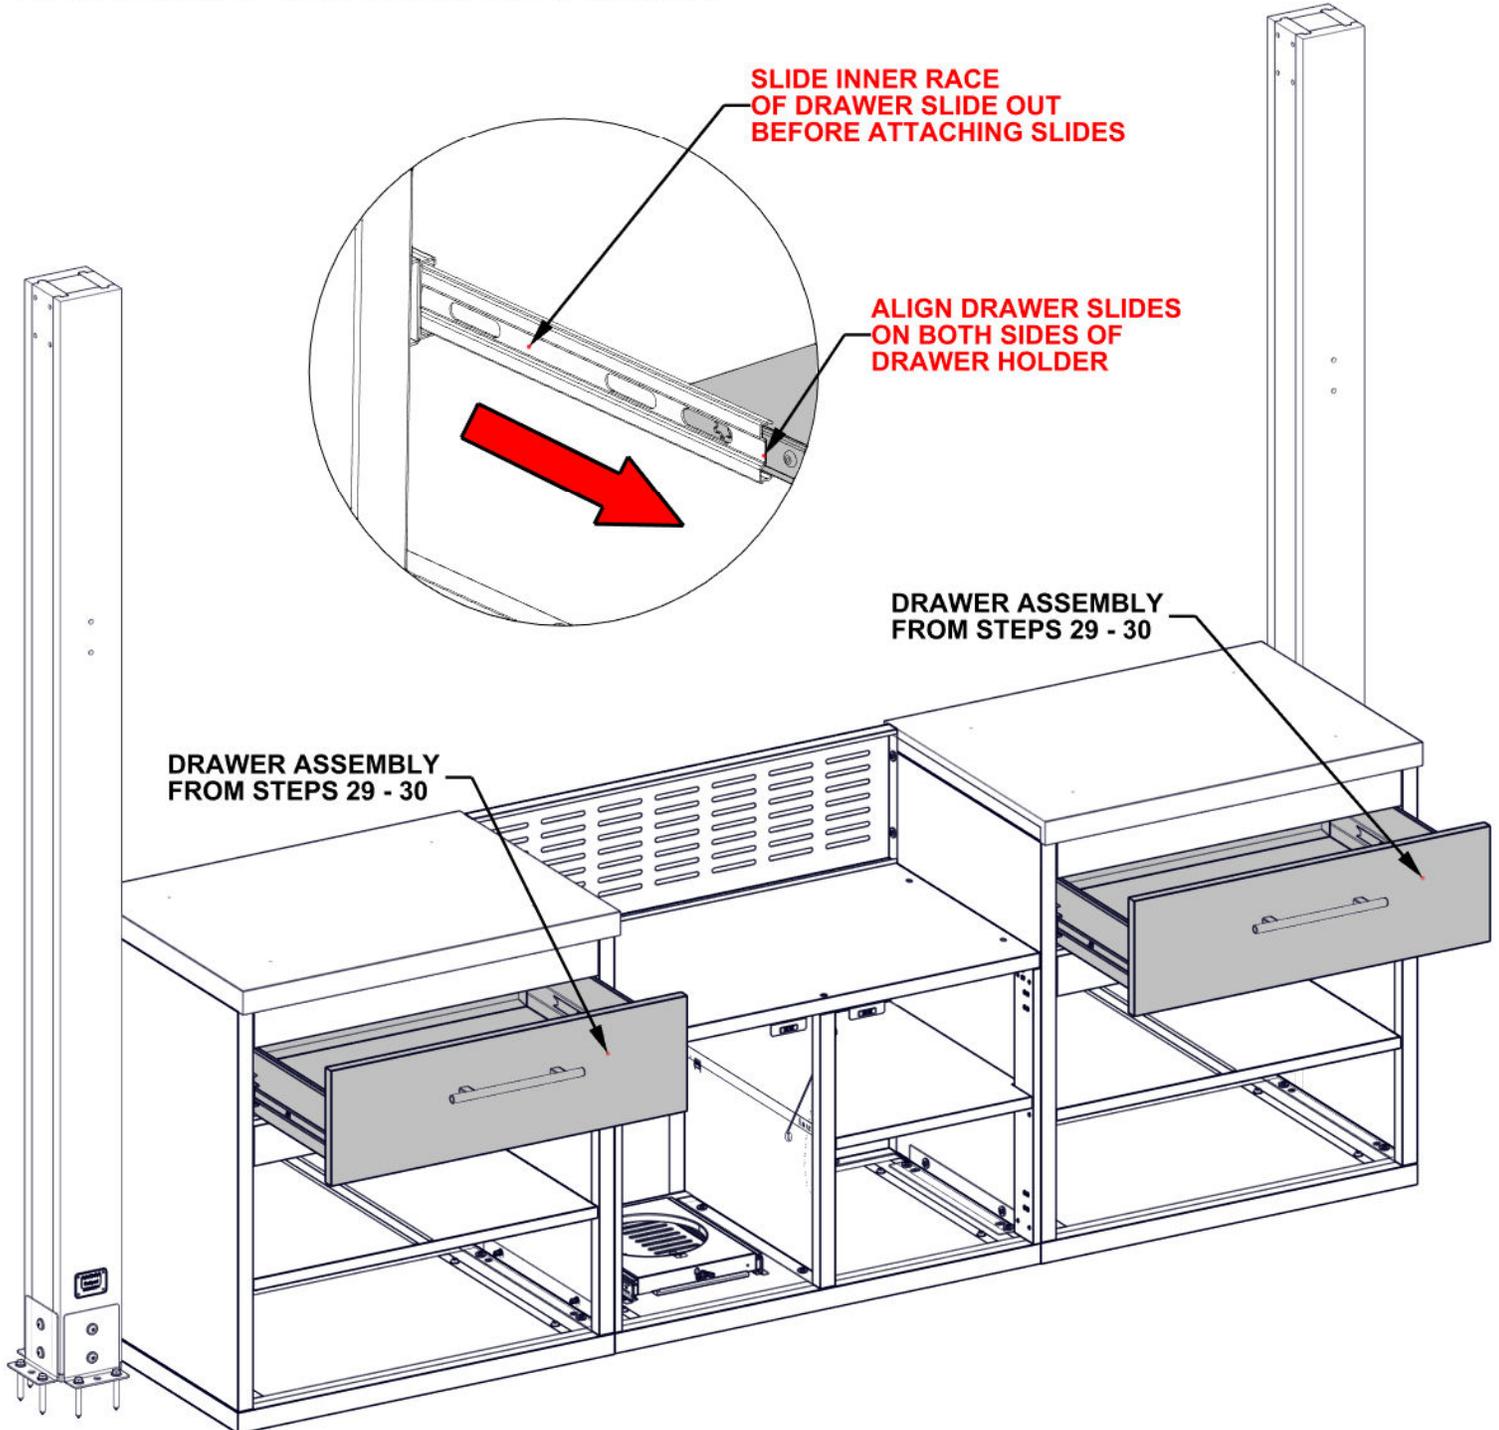

STEP 32A - DOOR ASSEMBLY




D7 CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

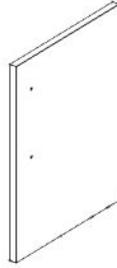


D8 CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

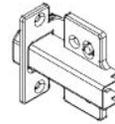


A4M03025 FULL OVERLAY HINGE
(x4)

- INSTALL CABINET HINGES TO ALL DOORS.
- DO NOT OVERTIGHTEN HARDWARE.
- REPEAT FOR ALL DOOR ASSEMBLIES IN THIS STEP.

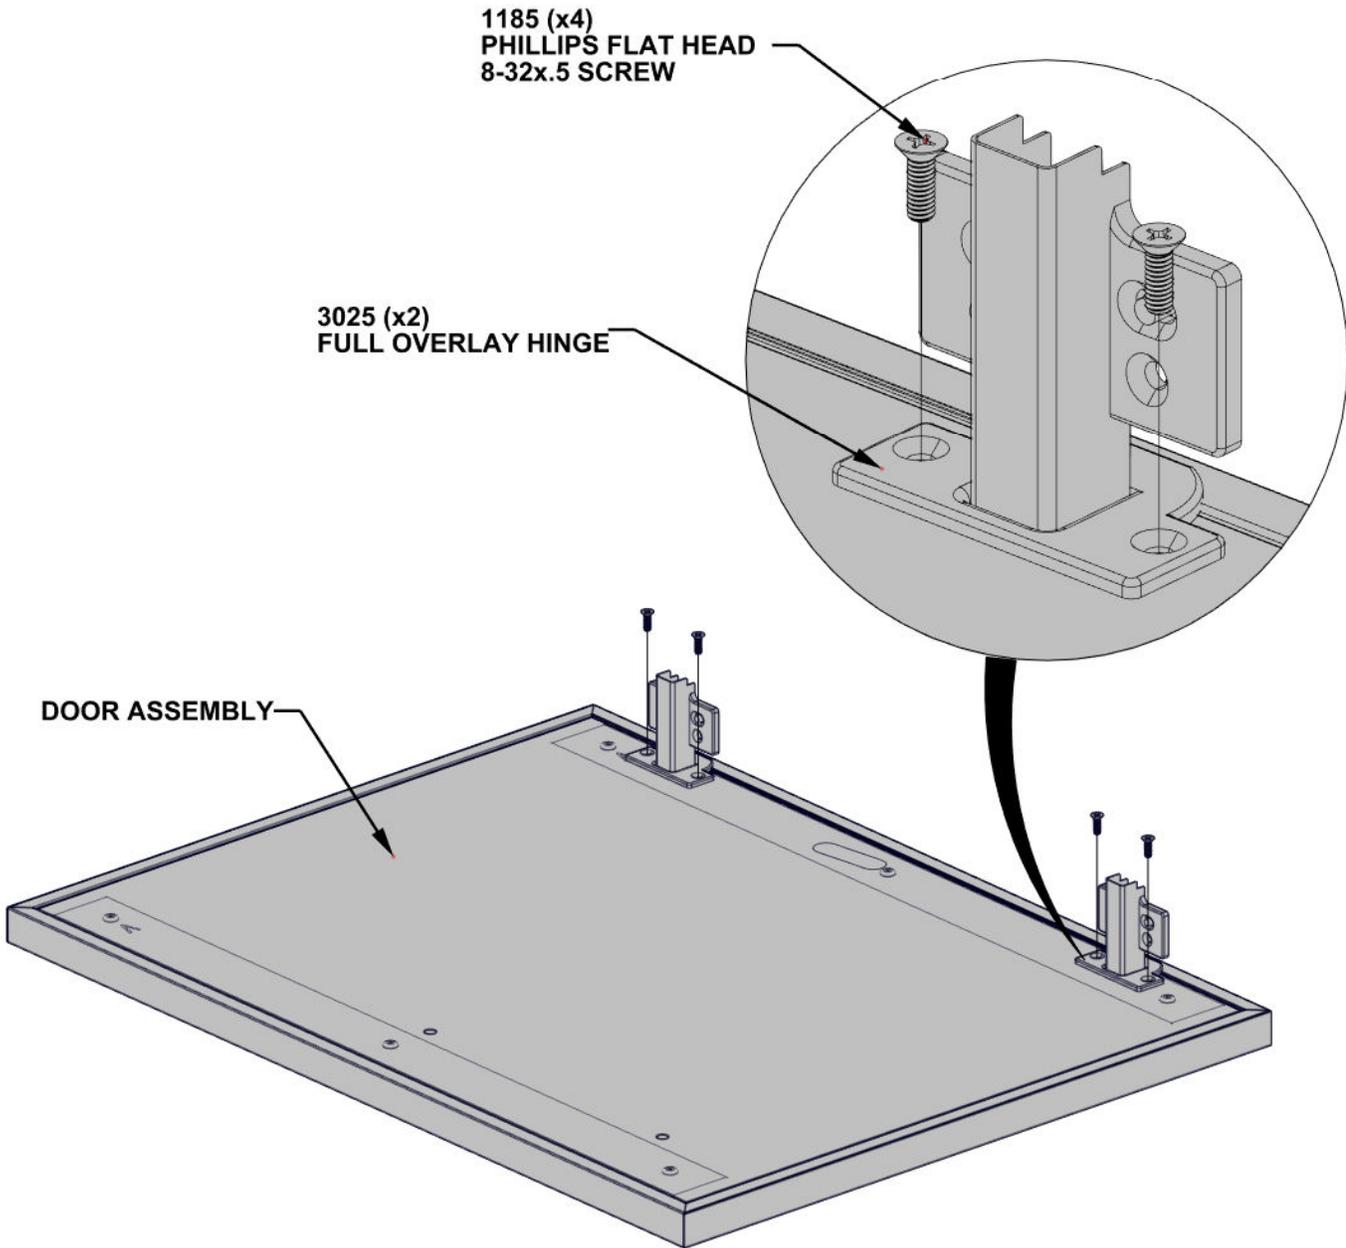


STEP 32B - DOOR ASSEMBLY

Qty	PartNo	Description
4	H101307	SHOULDER BOLT 8-32x30mm SS

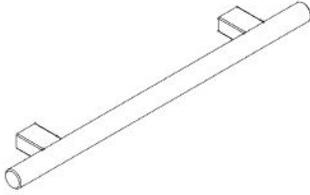

H2 STAINLESS STEEL HANDLE - A4M03024
(x2) 5/8"x1 9/16"x11 13/16" (16x40x300)

- INSTALL CABINET HANDLES TO ALL DOORS.
- REPEAT THIS STEP 2 TIMES.

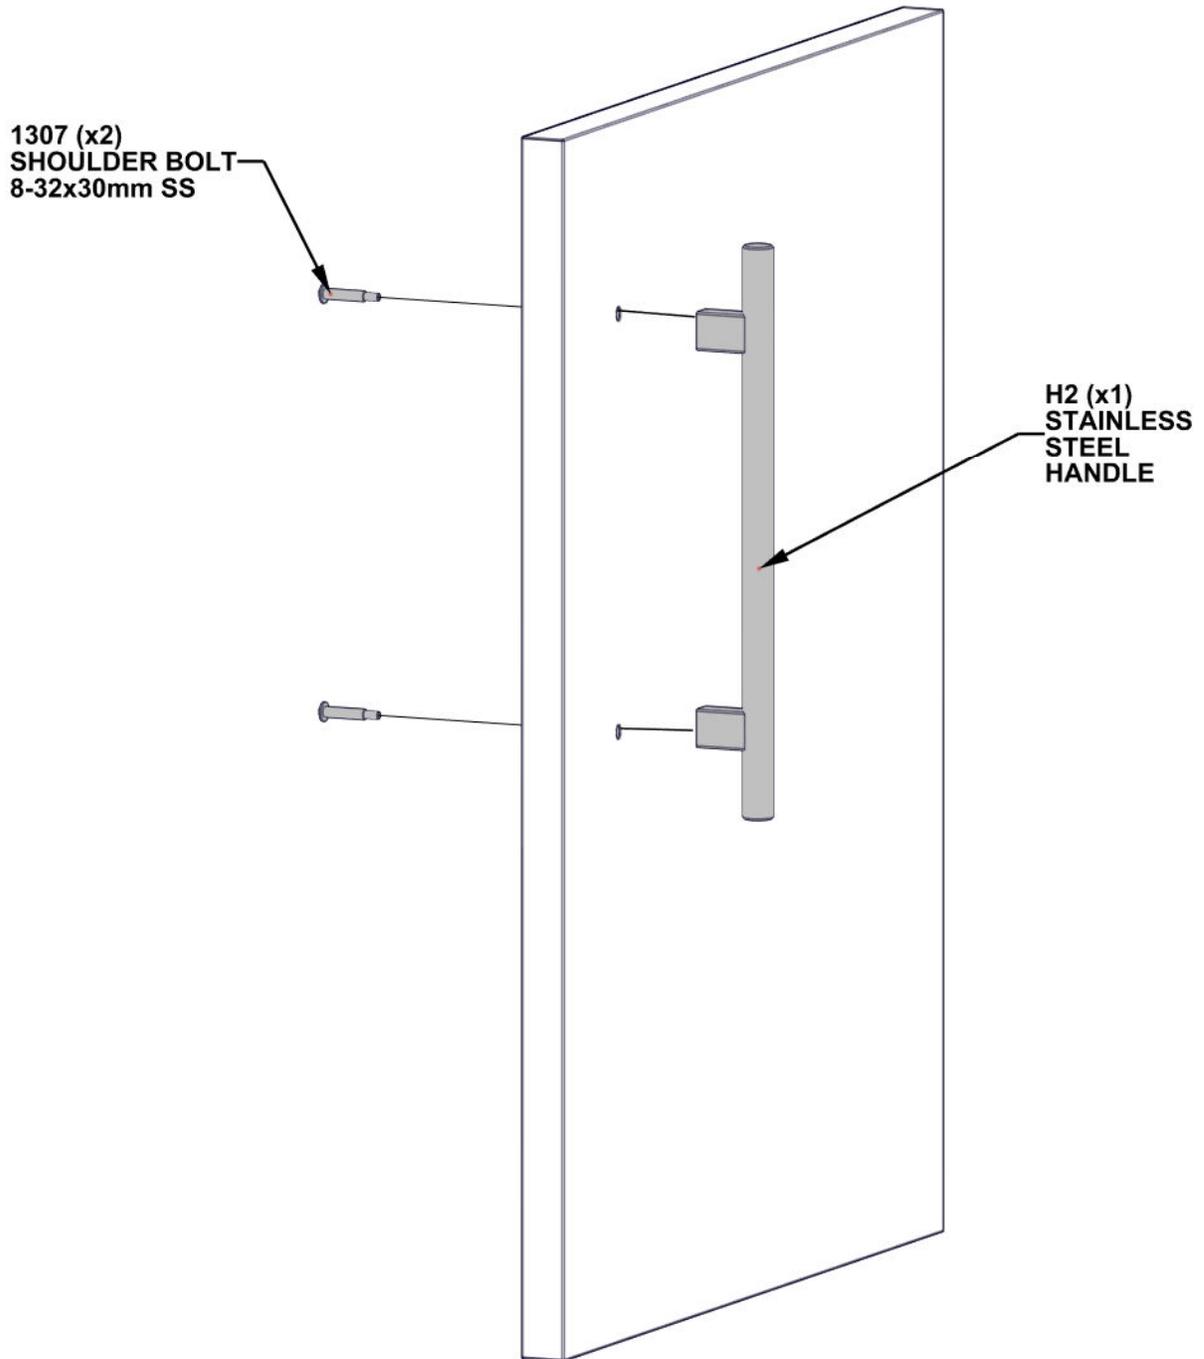


STEP 33A - DOOR ASSEMBLY



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D7 CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

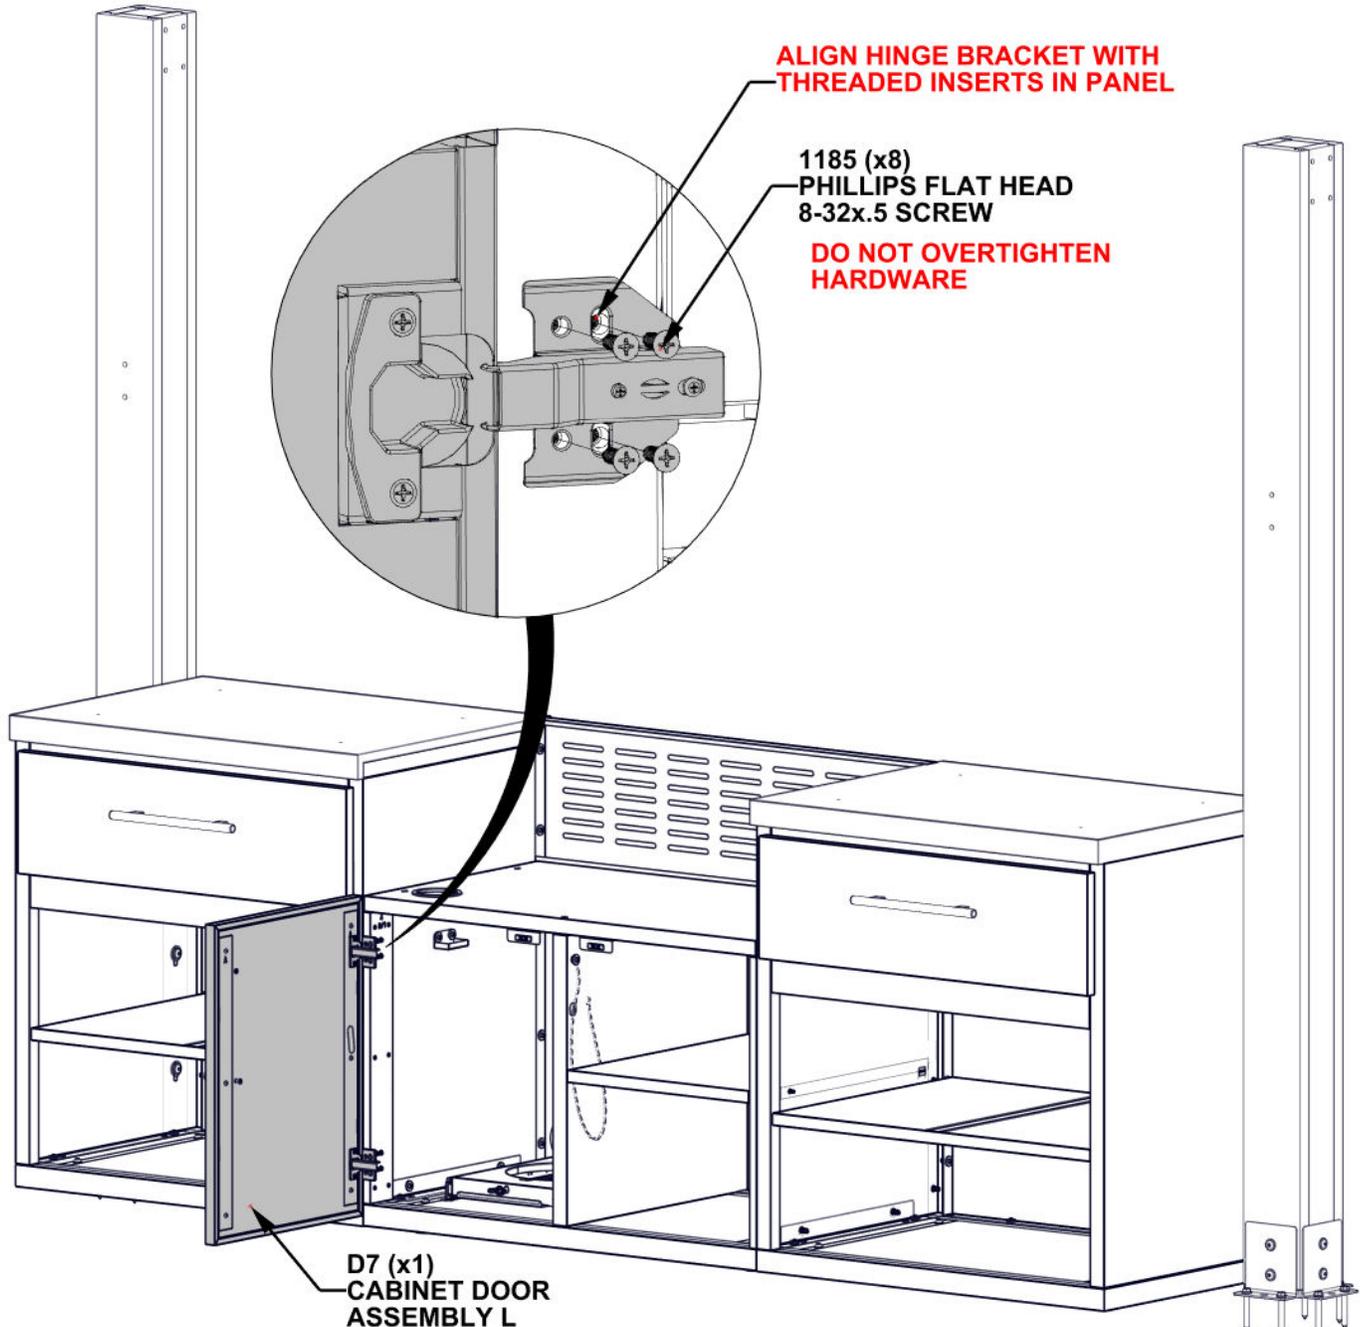


STEP 33B - DOOR ASSEMBLY



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW


D8 CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

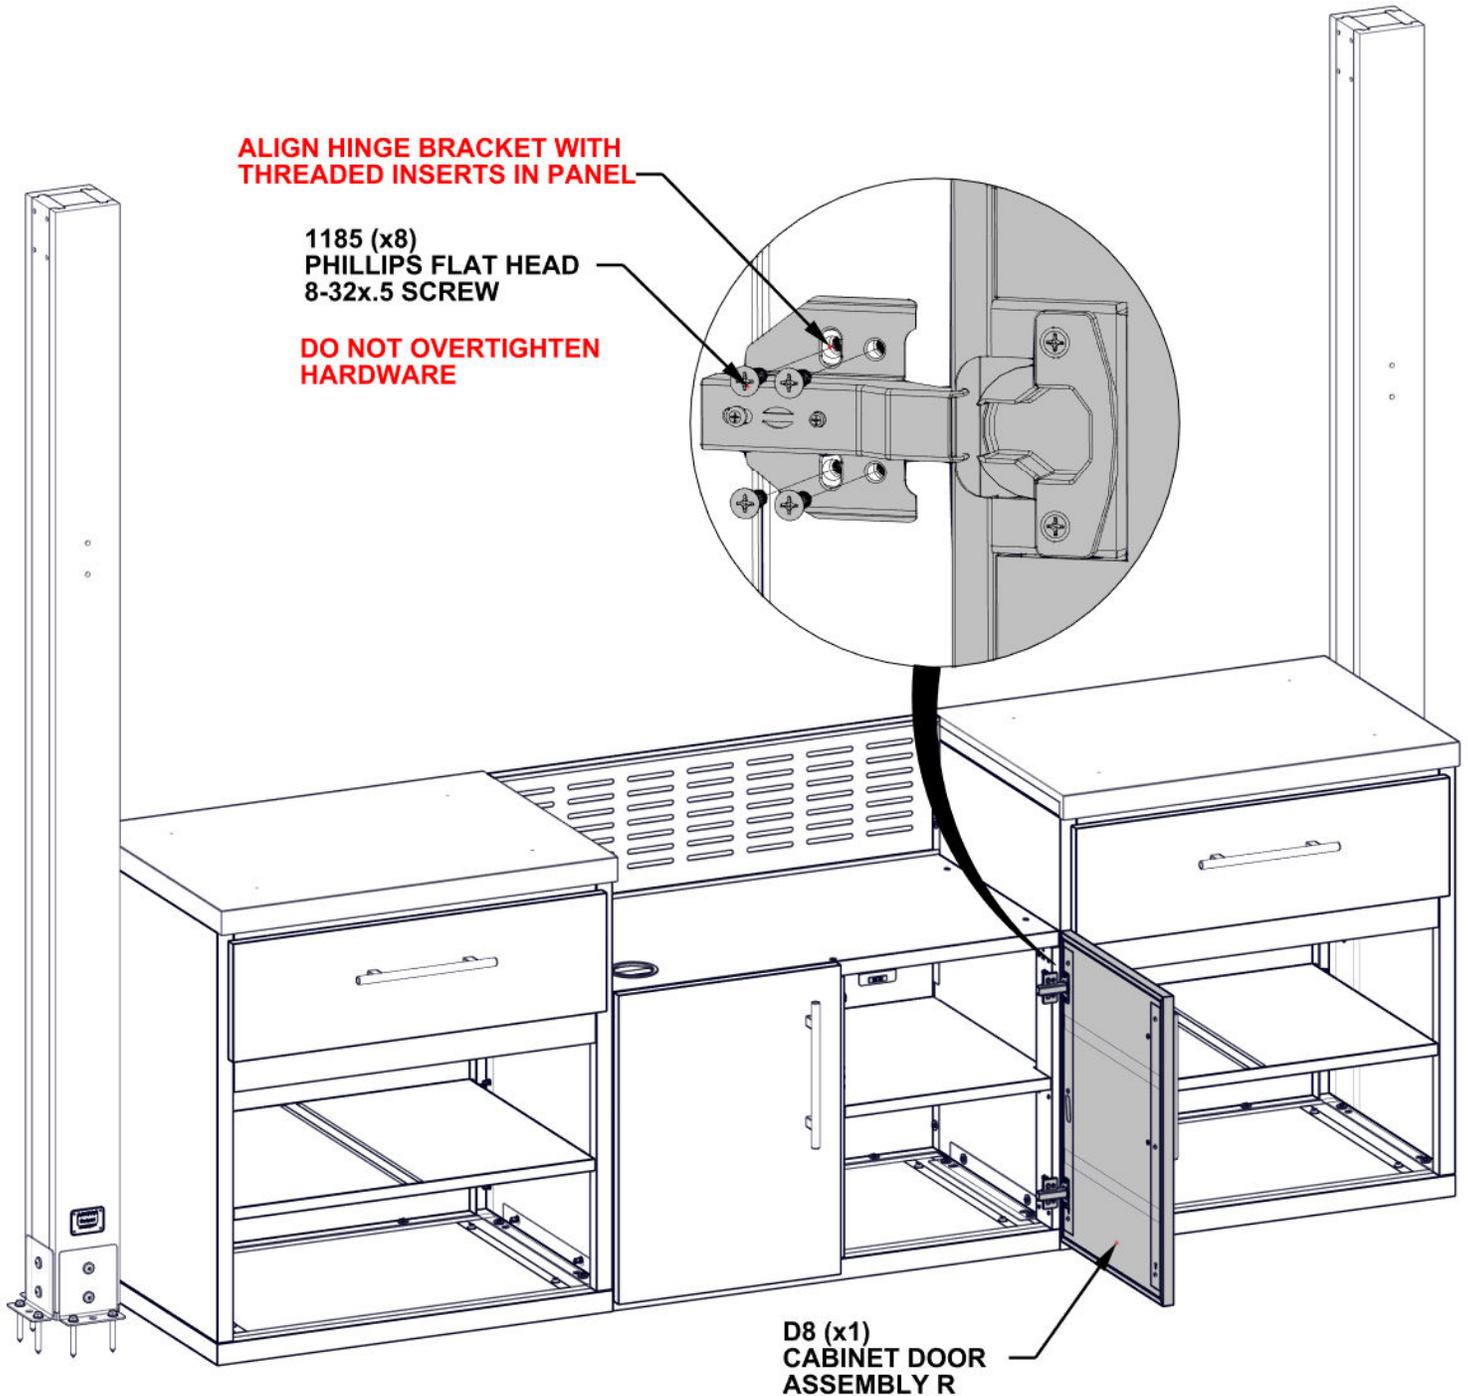

STEP 33C - CABINET DOOR ADJUSTMENT (AS NEEDED)

- ADJUST HINGES (AS NEEDED) SO THAT THE GAP AROUND ALL DOORS IS THE SAME AND THERE IS NO INTERFERENCE BETWEEN DOORS AND CABINETS.
- ADJUST MAGNET CATCH BRACKETS AS NEEDED.

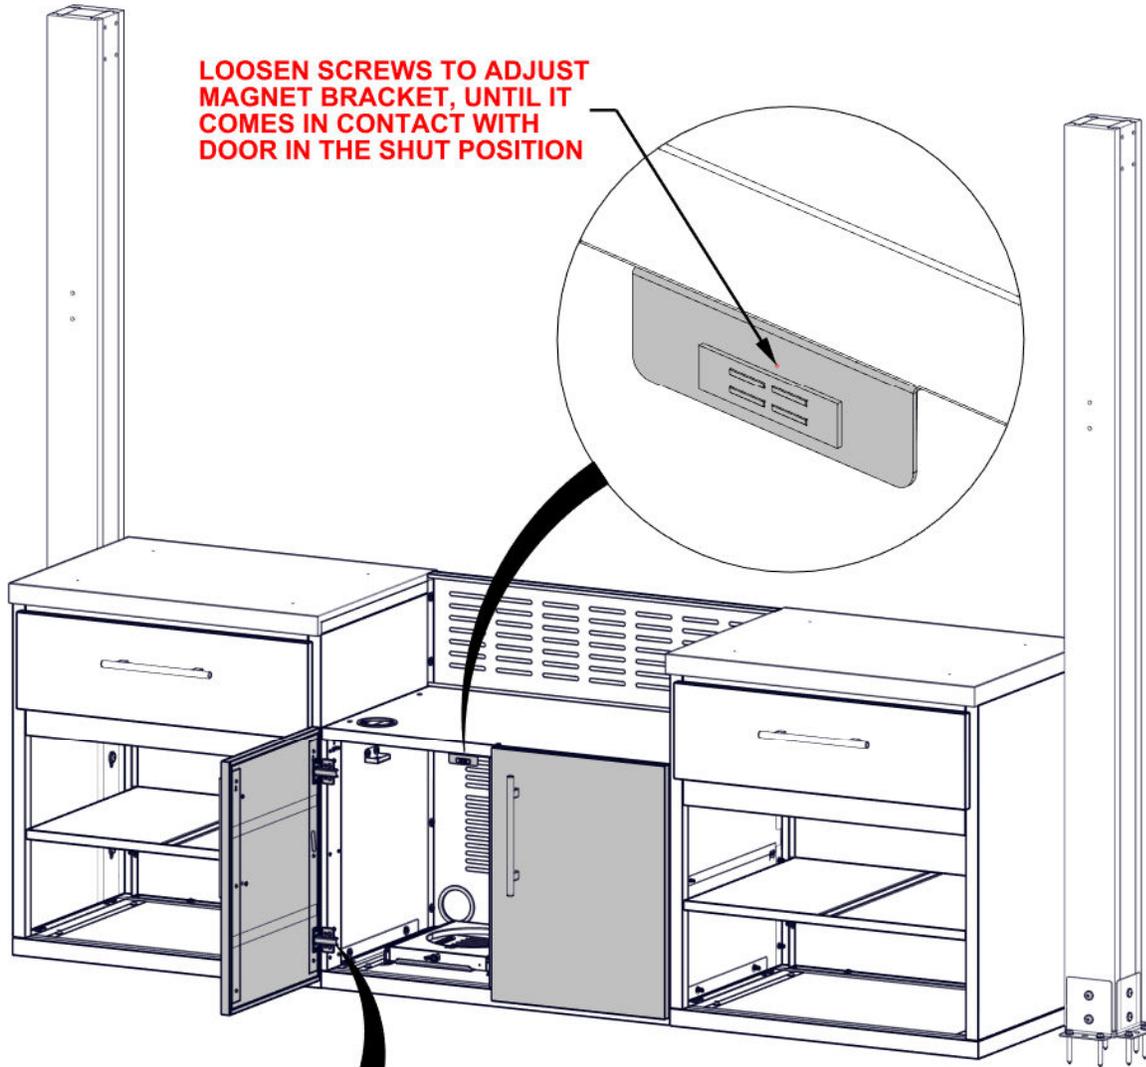


**LOOSEN SCREWS TO ADJUST
MAGNET BRACKET, UNTIL IT
COMES IN CONTACT WITH
DOOR IN THE SHUT POSITION**

**SCREW #2:
LOOSEN THESE SCREWS TO
SLIDE DOOR TOWARD CABINET
OR AWAY FROM CABINET**

**SCREW #1:
SCREW CLOCKWISE TO BRING
EDGE OF DOOR AWAY FROM
CABINET. SCREW COUNTER
CLOCKWISE TO BRING EDGE OF
DOOR CLOSER TO CABINET**


STEP 34 - ATTACH POST BRACKET

Qty	PartNo	Description
4	H100479	NUT LOCK 5/16 BLK
4	H100976	BOLT WH 5/16x6 1/4 BLK
4	H100198	WASHER LOCK EXT BLK
4	H100630	WASHER FLAT 8x19 BLK

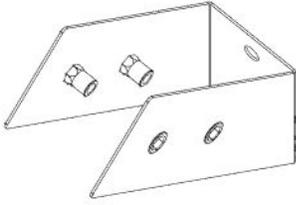


B02 POST BRACKET - A4M04306
(x2) 1/16"x2 11/16"x9 1/2" (1.50x71x241)

- ALIGN HOLES IN POST BRACKET WITH THRU HOLES IN EACH POST.
- ATTACH POST BRACKETS TO POSTS.
- **CENTER POST BRACKET ON EACH POST BEFORE TIGHTENING HARDWARE.**

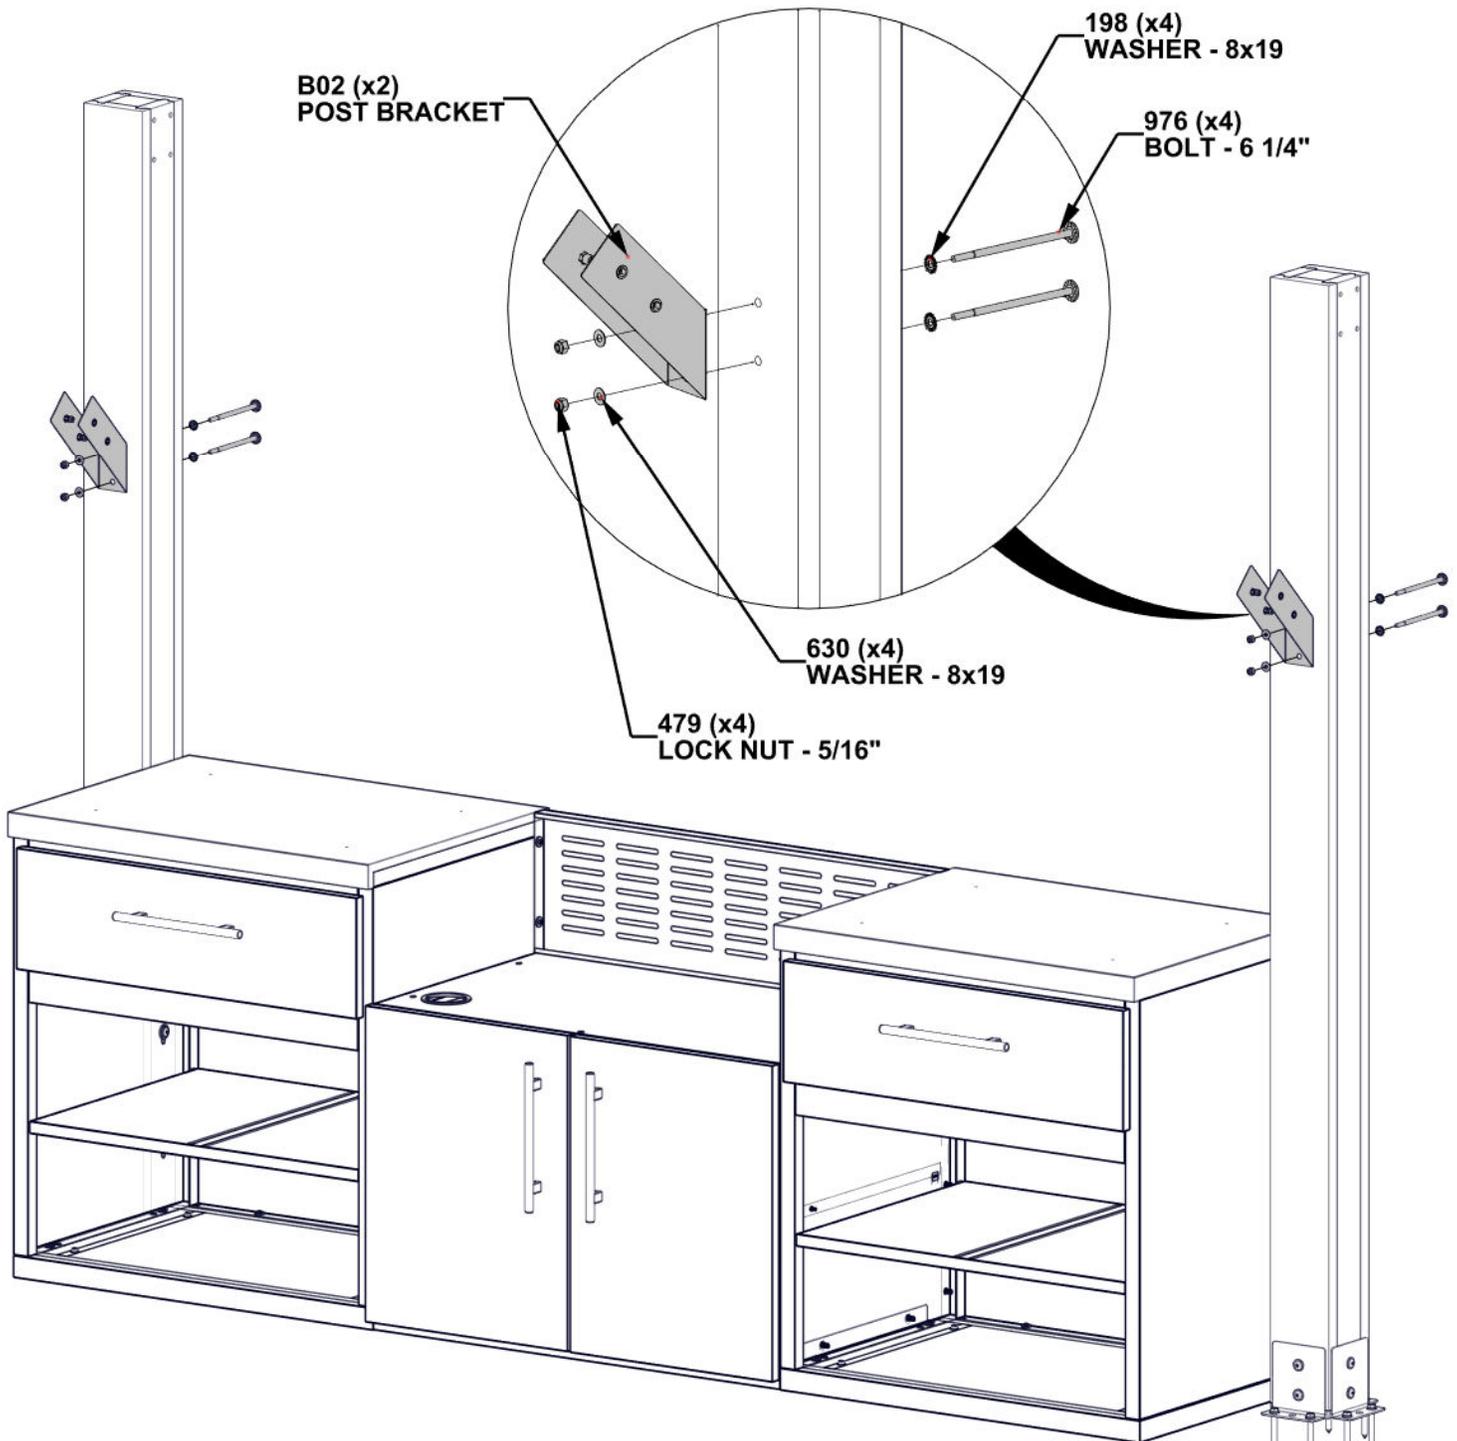


STEP 35 - ATTACH 45 POST

Qty	PartNo	Description
8	H100457	BOLT WH 5/16x2 BLK
8	H100198	WASHER LOCK EXT BLK

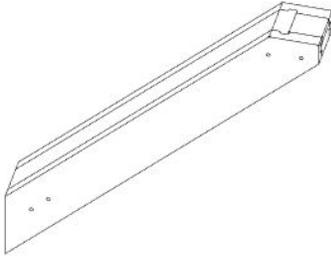

P02 45 POST - W2A04553
 (x2) 5 1/2"x5 1/2"x48" (140x140x1220)

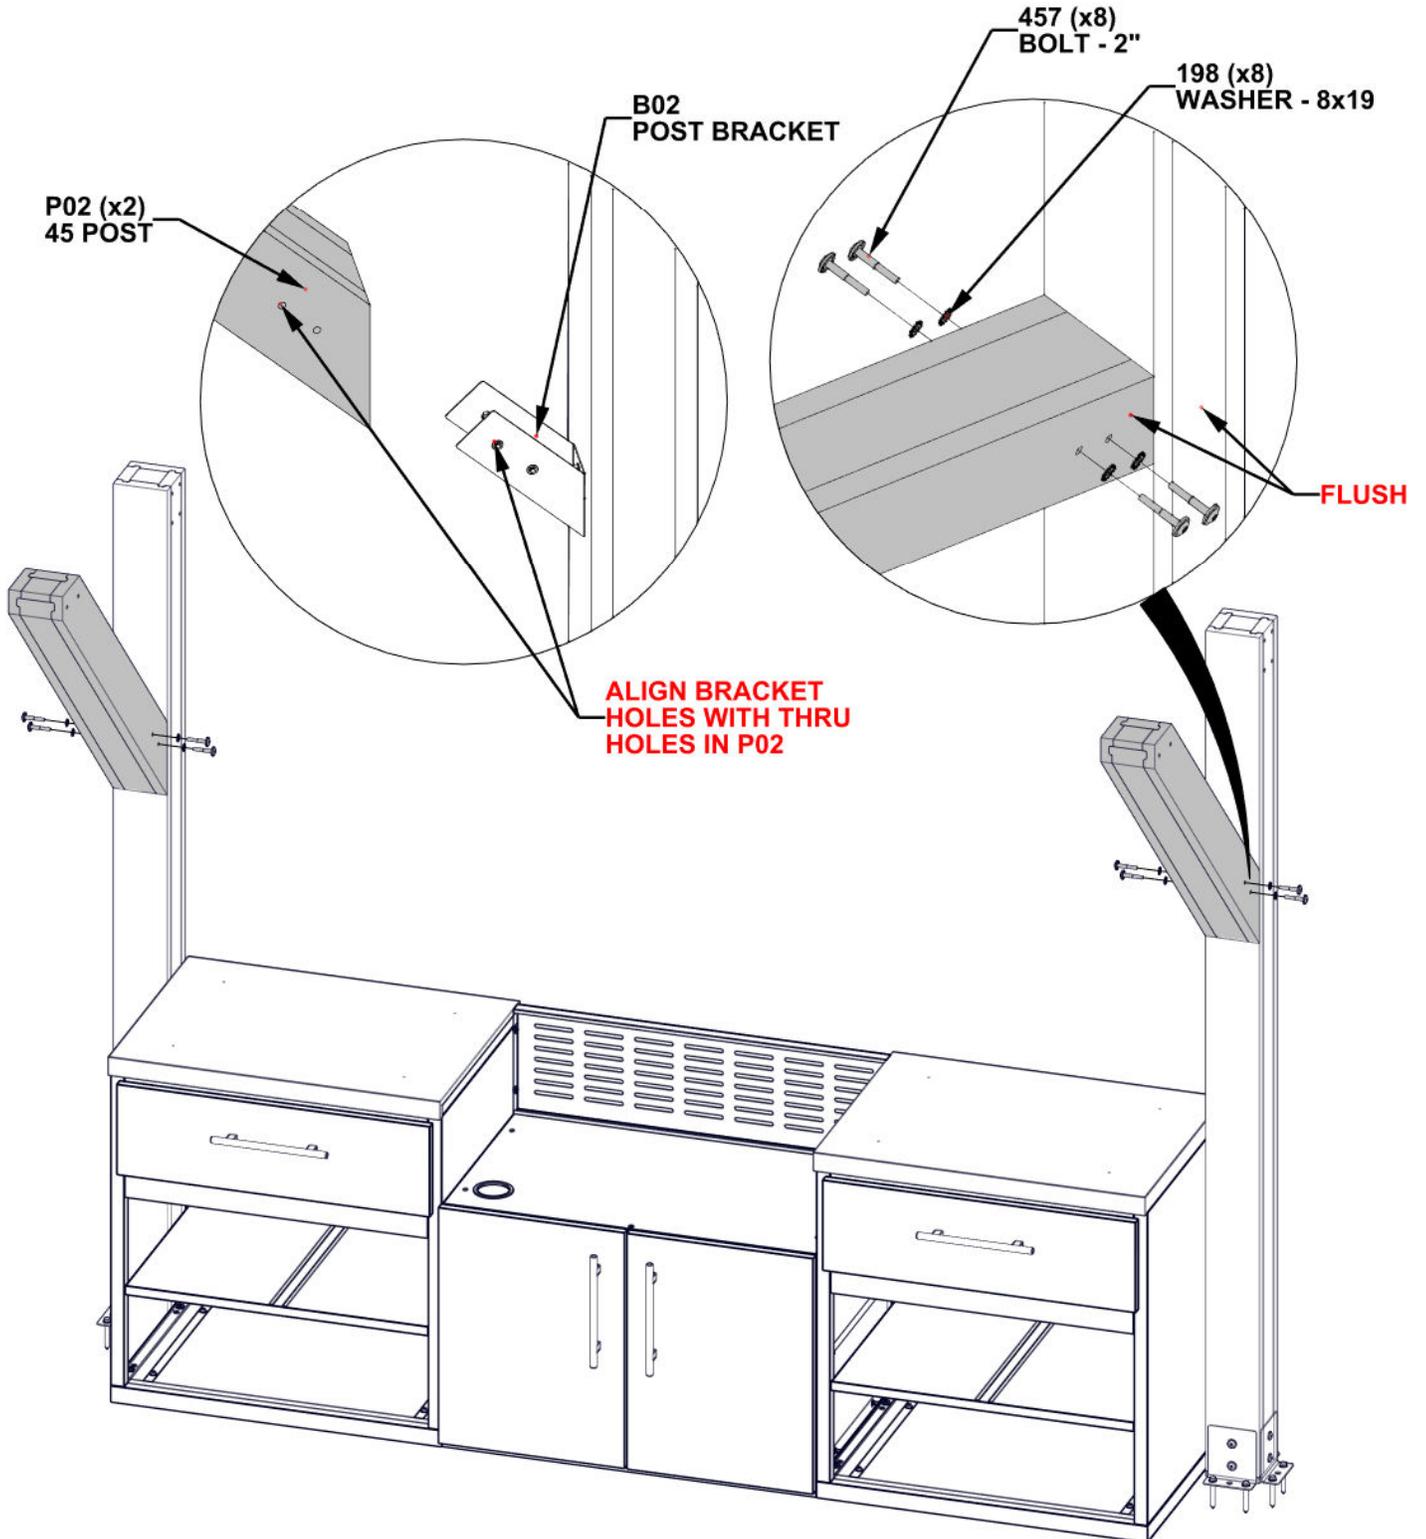

STEP 36A - LEFT SIDE BEAM ASSEMBLY

Qty	PartNo	Description
3	H100391	SCREW PFH 8x2 BLK




D9 SIDE BEAM - W4L20959
(x1) 1 7/16"x5 1/4"x49 7/8" (36x134x1266)



J1 CLEAT - W4L21183
(x1) 15/16"x2 3/8"x23 15/16" (24x60x680)

- ALIGN THRU HOLES IN J1 WITH PILOT HOLES IN D9.

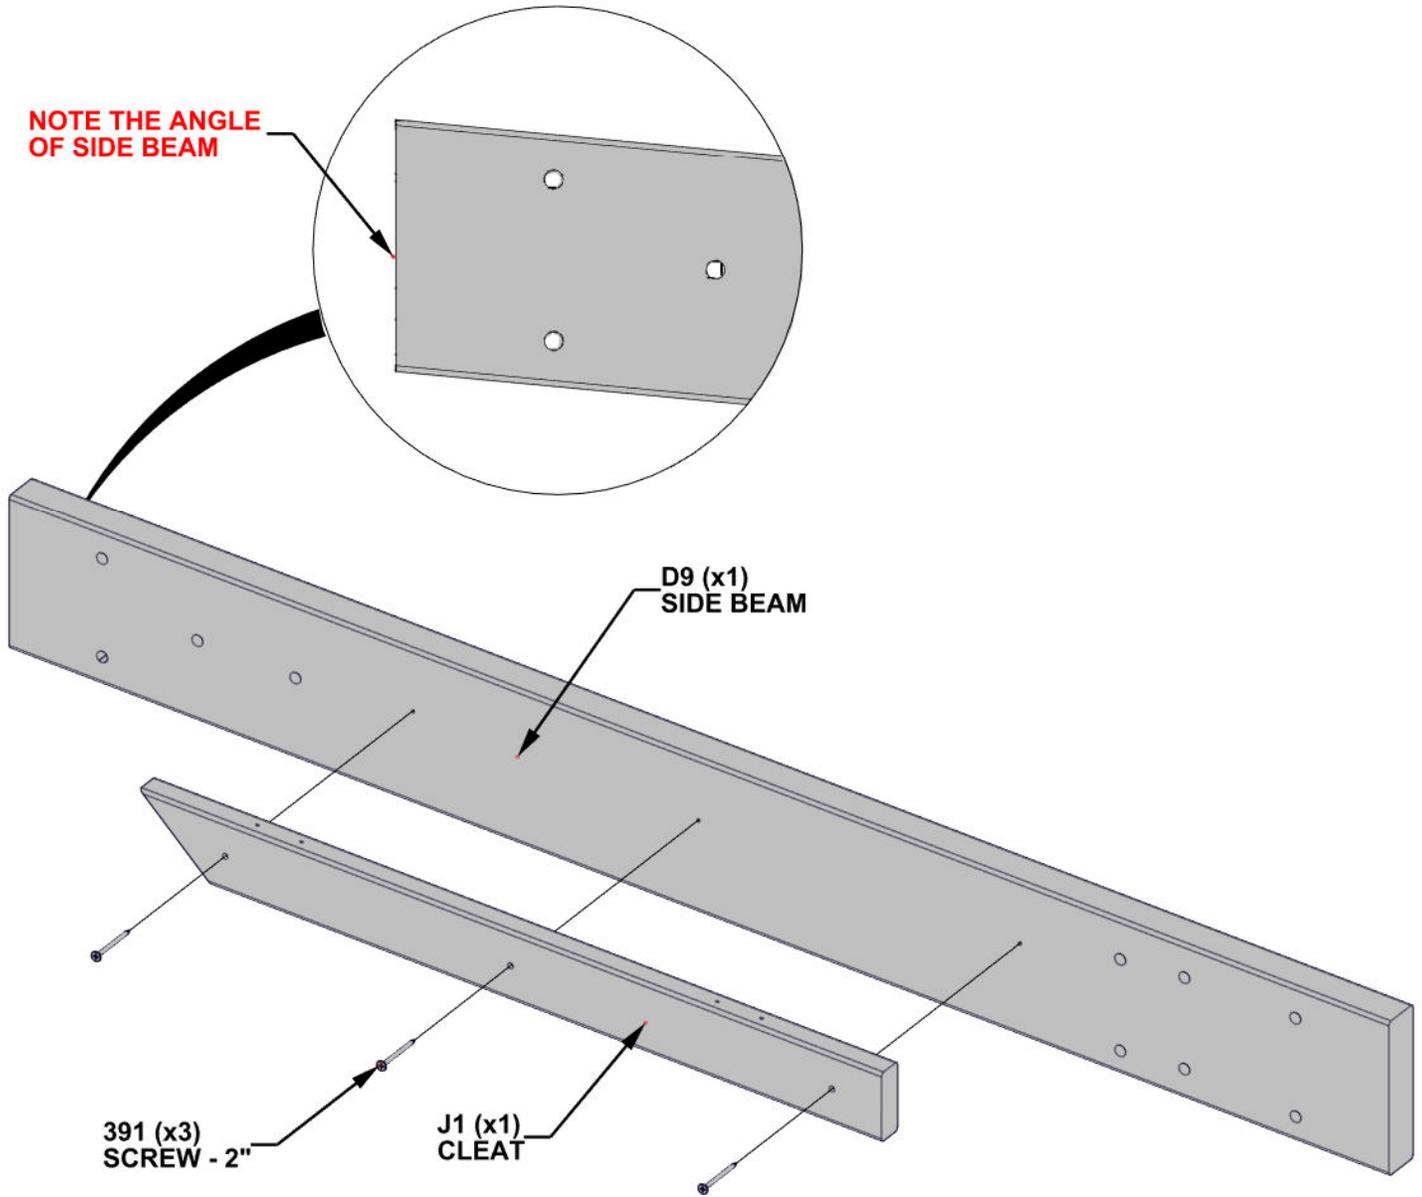


STEP 36B - RIGHT SIDE BEAM ASSEMBLY




D10 SIDE BEAM - W4L21184
 (x1) 1 7/16"x5 1/4"x49 7/8" (36x134x1266)

Qty	PartNo	Description
3	H100391	SCREW PFH 8x2 BLK

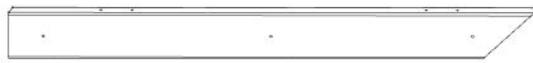

J1 CLEAT - W4L21183
 (x1) 15/16"x2 3/8"x23 15/16" (24x60x680)

- ALIGN THRU HOLES IN J1 WITH PILOT HOLES IN D10.

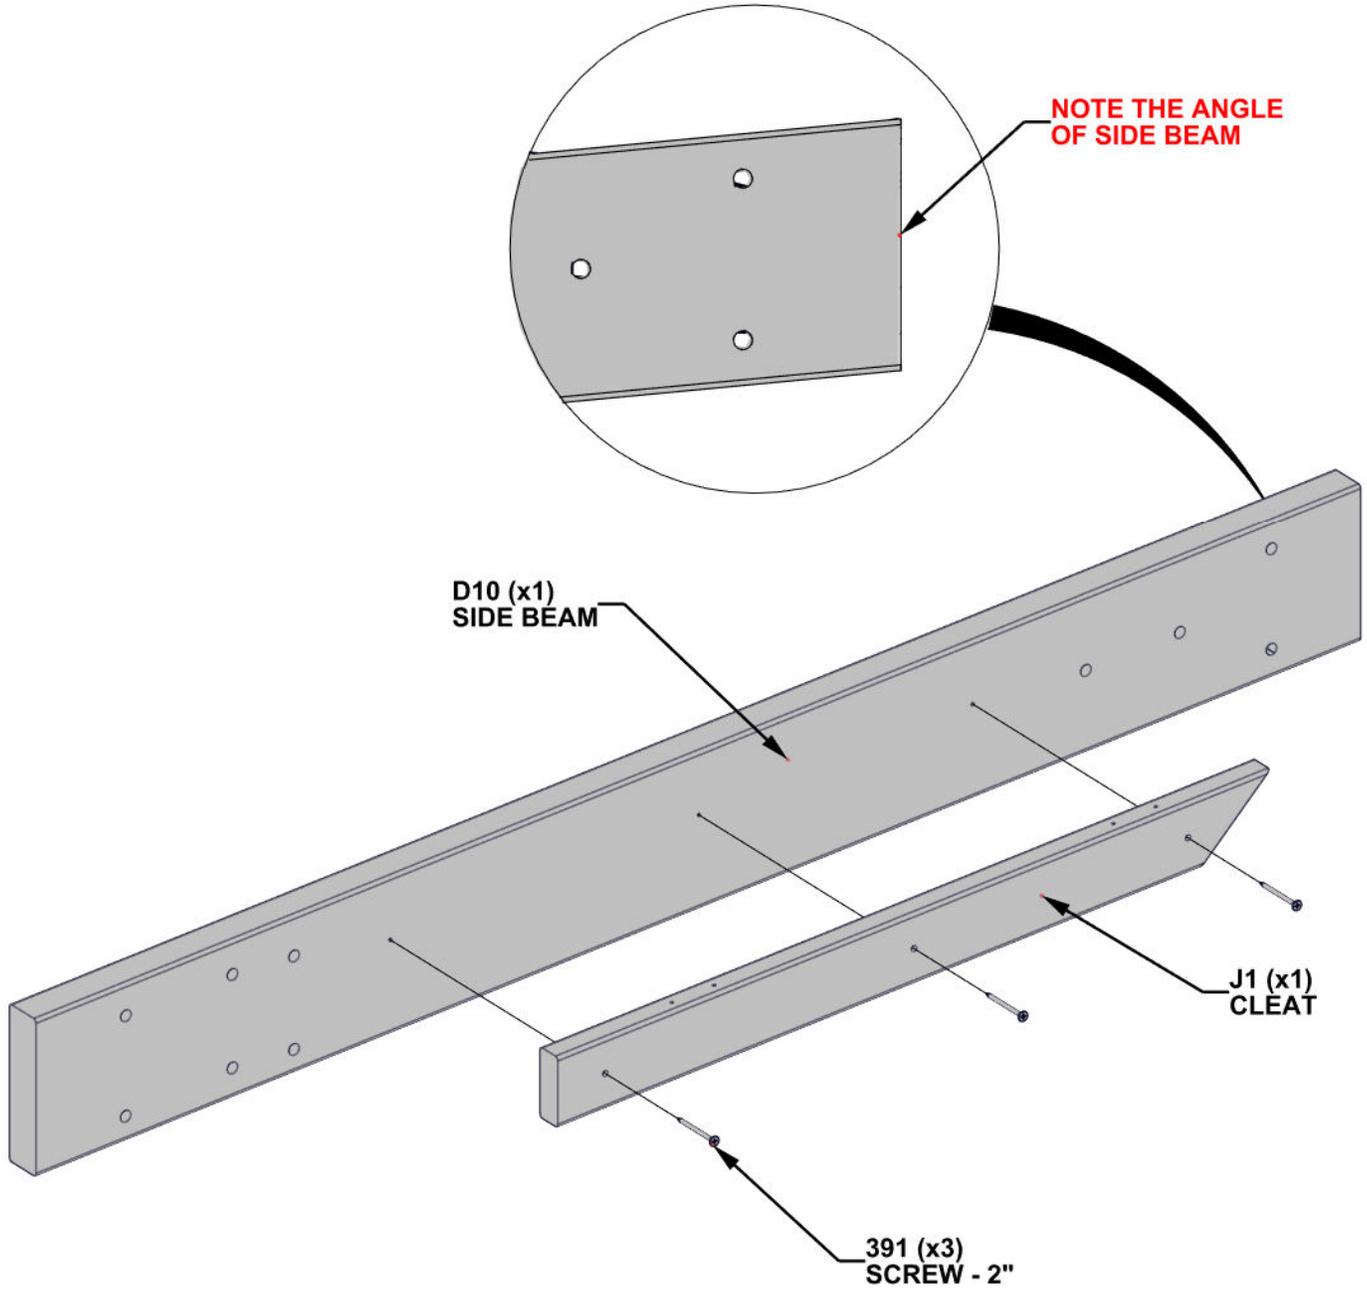


STEP 37 - ATTACH SIDE BEAM

Qty	PartNo	Description
12	H100379	TNUT-5/16" BLK
12	H101037	BOLT WH 5/16x6 3/4 BLK
12	H100198	WASHER LOCK EXT BLK




LEFT SIDE BEAM ASSEMBLY FROM STEP 36A

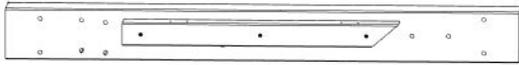

RIGHT SIDE BEAM ASSEMBLY FROM STEP 36B

- INSERT T-NUTS FIRST.
- ATTACH SIDE BEAMS TO POSTS.

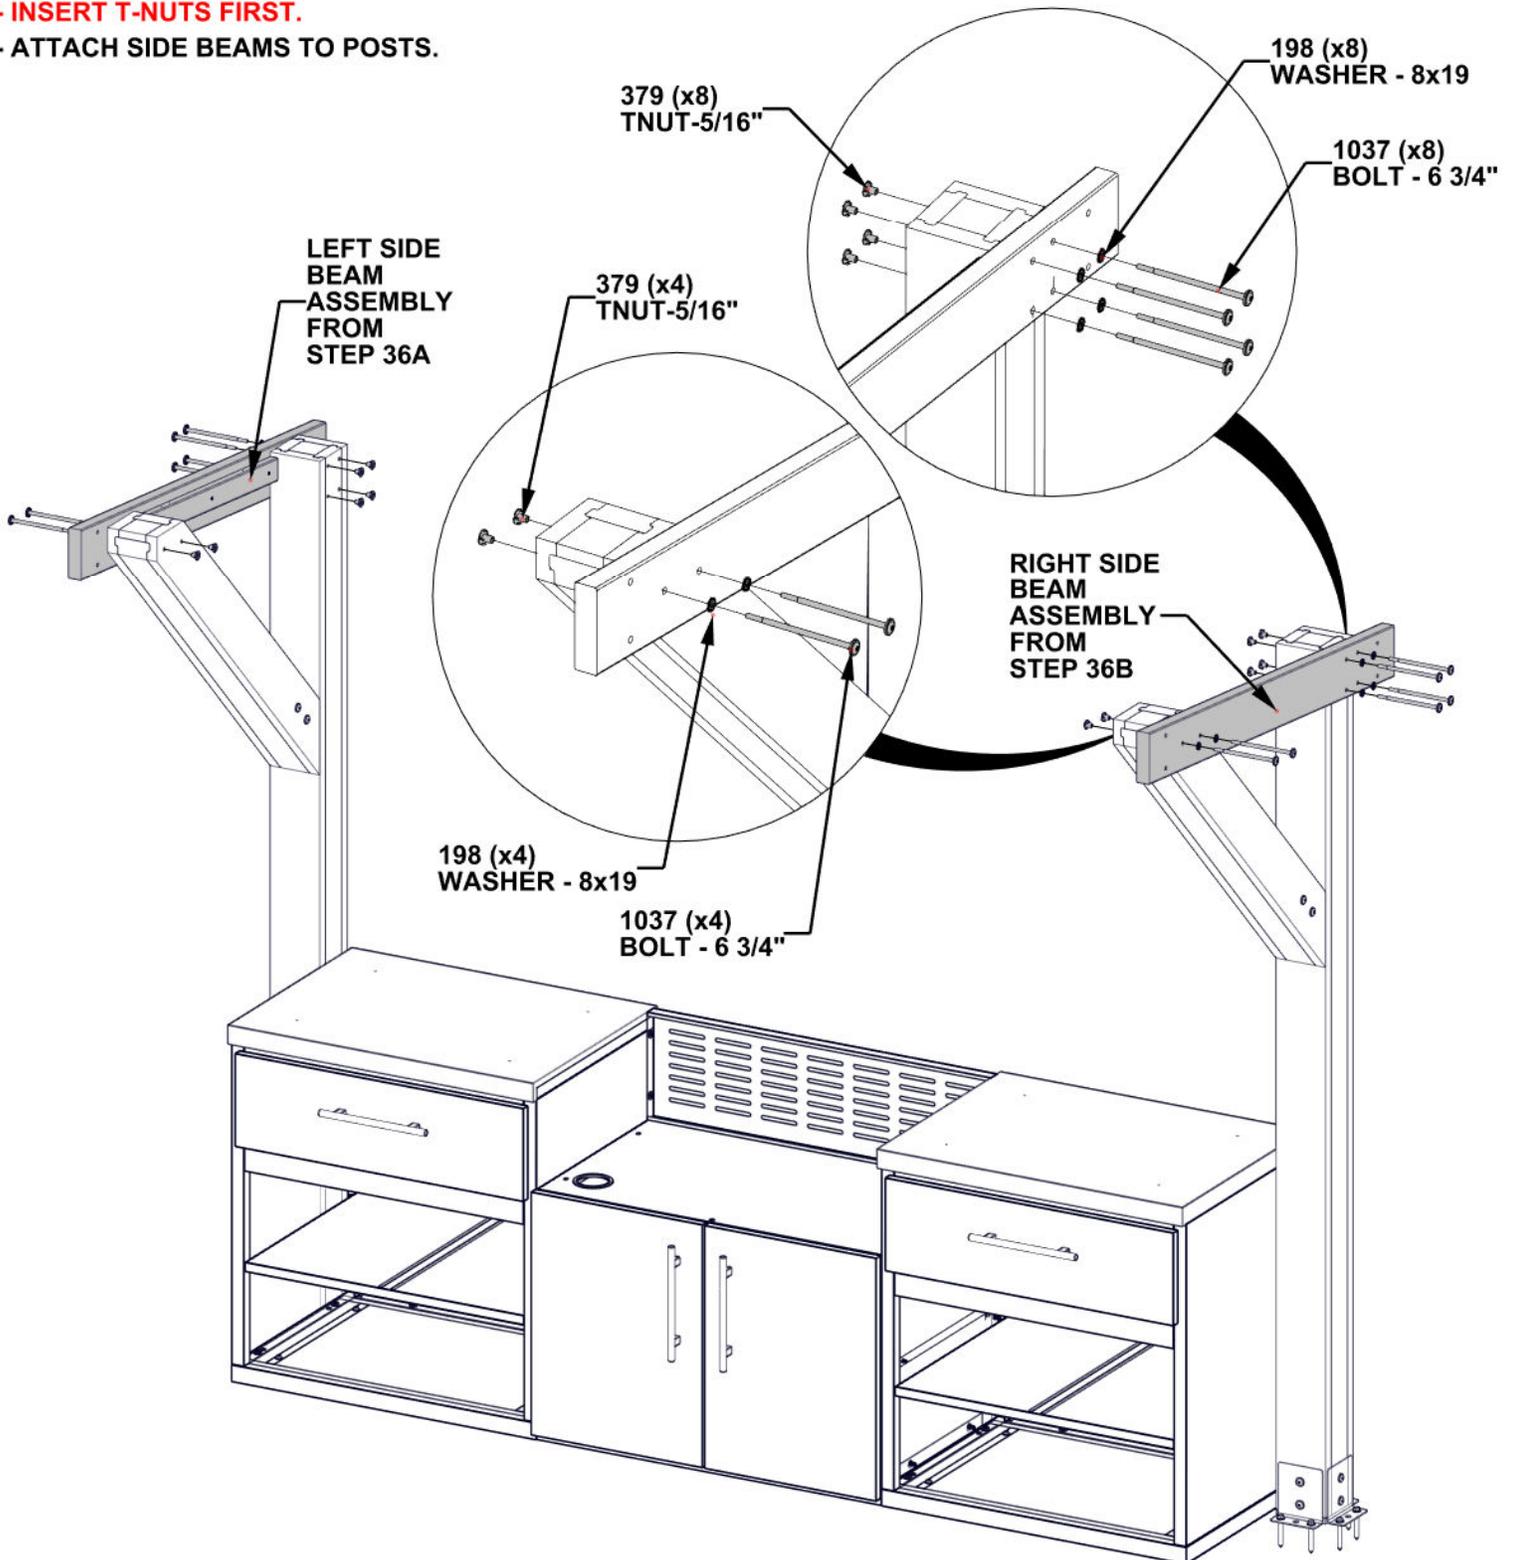

STEP 38A - BACK BEAM ASSEMBLY

Qty	PartNo	Description
8	H100379	T-NUT 5/16 BLK




D7 BEAM - W4L20957
 (x1) 1 7/16"x5 1/4"x28 7/8" (36x134x734)



D8 BEAM - W4L20958
 (x1) 1 7/16"x5 1/4"x88 3/8" (36x134x2244)

- INSERT T-NUTS FIRST.
- T-NUTS INSTALLED IN THIS STEP WILL BE SANDWICHED BETWEEN BEAMS IN THE NEXT STEPS.
- FOR EASE OF ASSEMBLY, WE RECOMMEND USING SAW HORSES FOR STEPS 38A-38E.

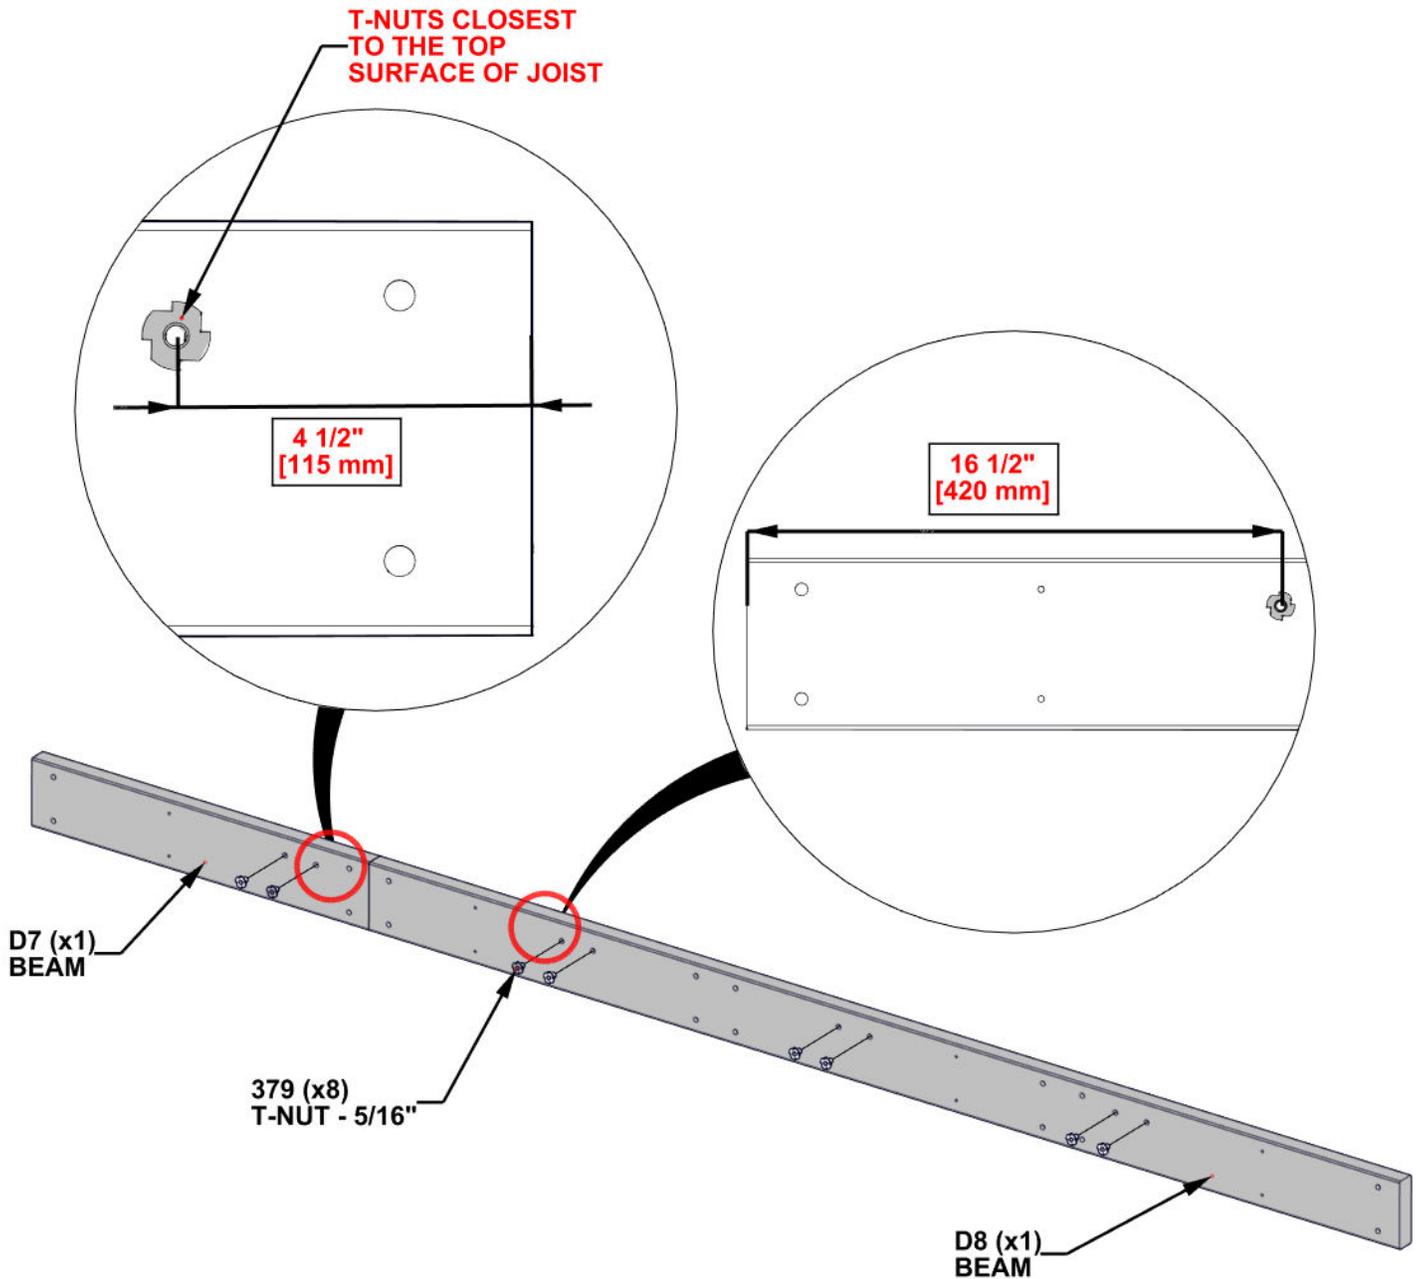


STEP 38B - BACK BEAM ASSEMBLY

Qty	PartNo	Description
3	H100387	SCREW PFH 8x1 1/4 BLK



4147 BEAM METAL BRACKET - A4M04147
(x1) 1/16"x5 1/8"x64 13/16" (1.5x130x1646)

- ALIGN THRU HOLES IN BEAM BRACKET WITH THE HOLES IN EACH BEAM.
- T-NUTS INSTALLED IN PREVIOUS STEP WILL BE SANDWICHED BETWEEN JOIST PARTS AND FASCIA.

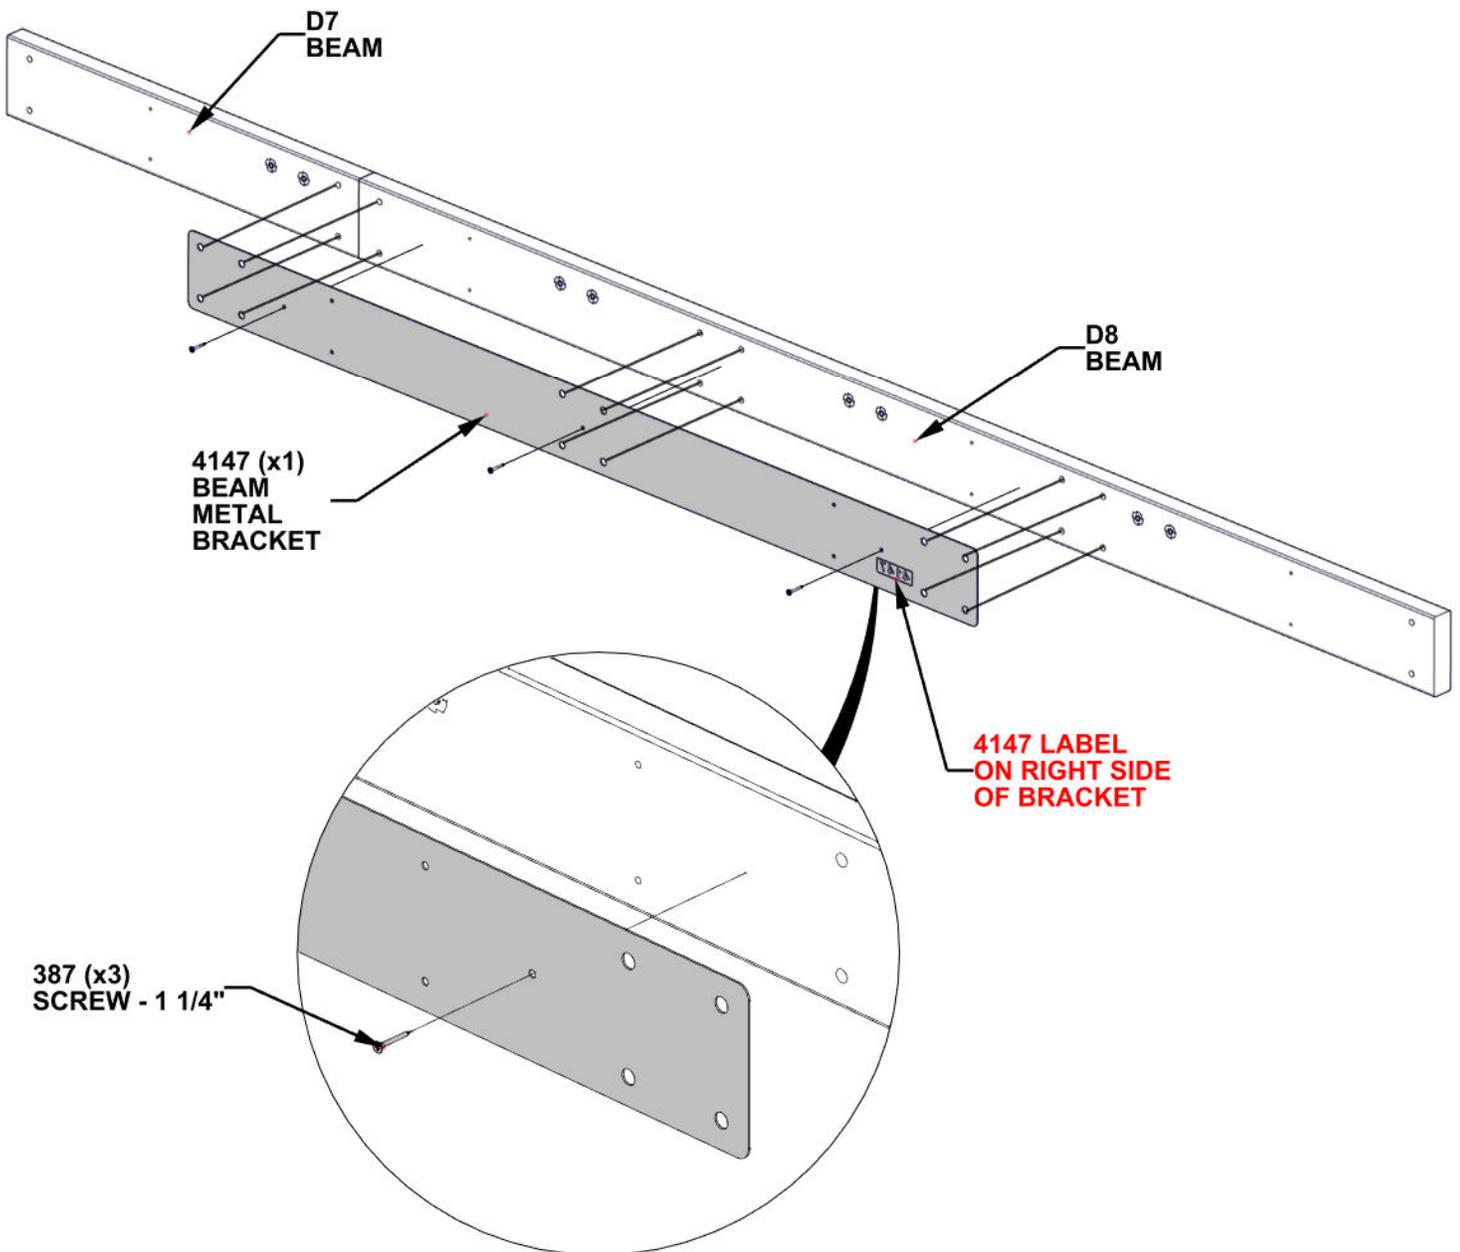

STEP 38C - BACK BEAM ASSEMBLY




D5 BEAM - W4L20955
(x1) 1 7/16"x5 1/4"x30 5/16" (36x134x770)



D6 BEAM - W4L20956
(x1) 1 7/16"x5 1/4"x89 3/4" (36x134x2280)


- ALIGN HOLES IN D5 AND D6 BEAM WITH THRU HOLES IN BEAM BRACKET AS BELOW SHOWN.
- T-NUTS INSTALLED IN PREVIOUS STEP WILL BE SANDWICHED BETWEEN JOIST PARTS AND FASCIA.

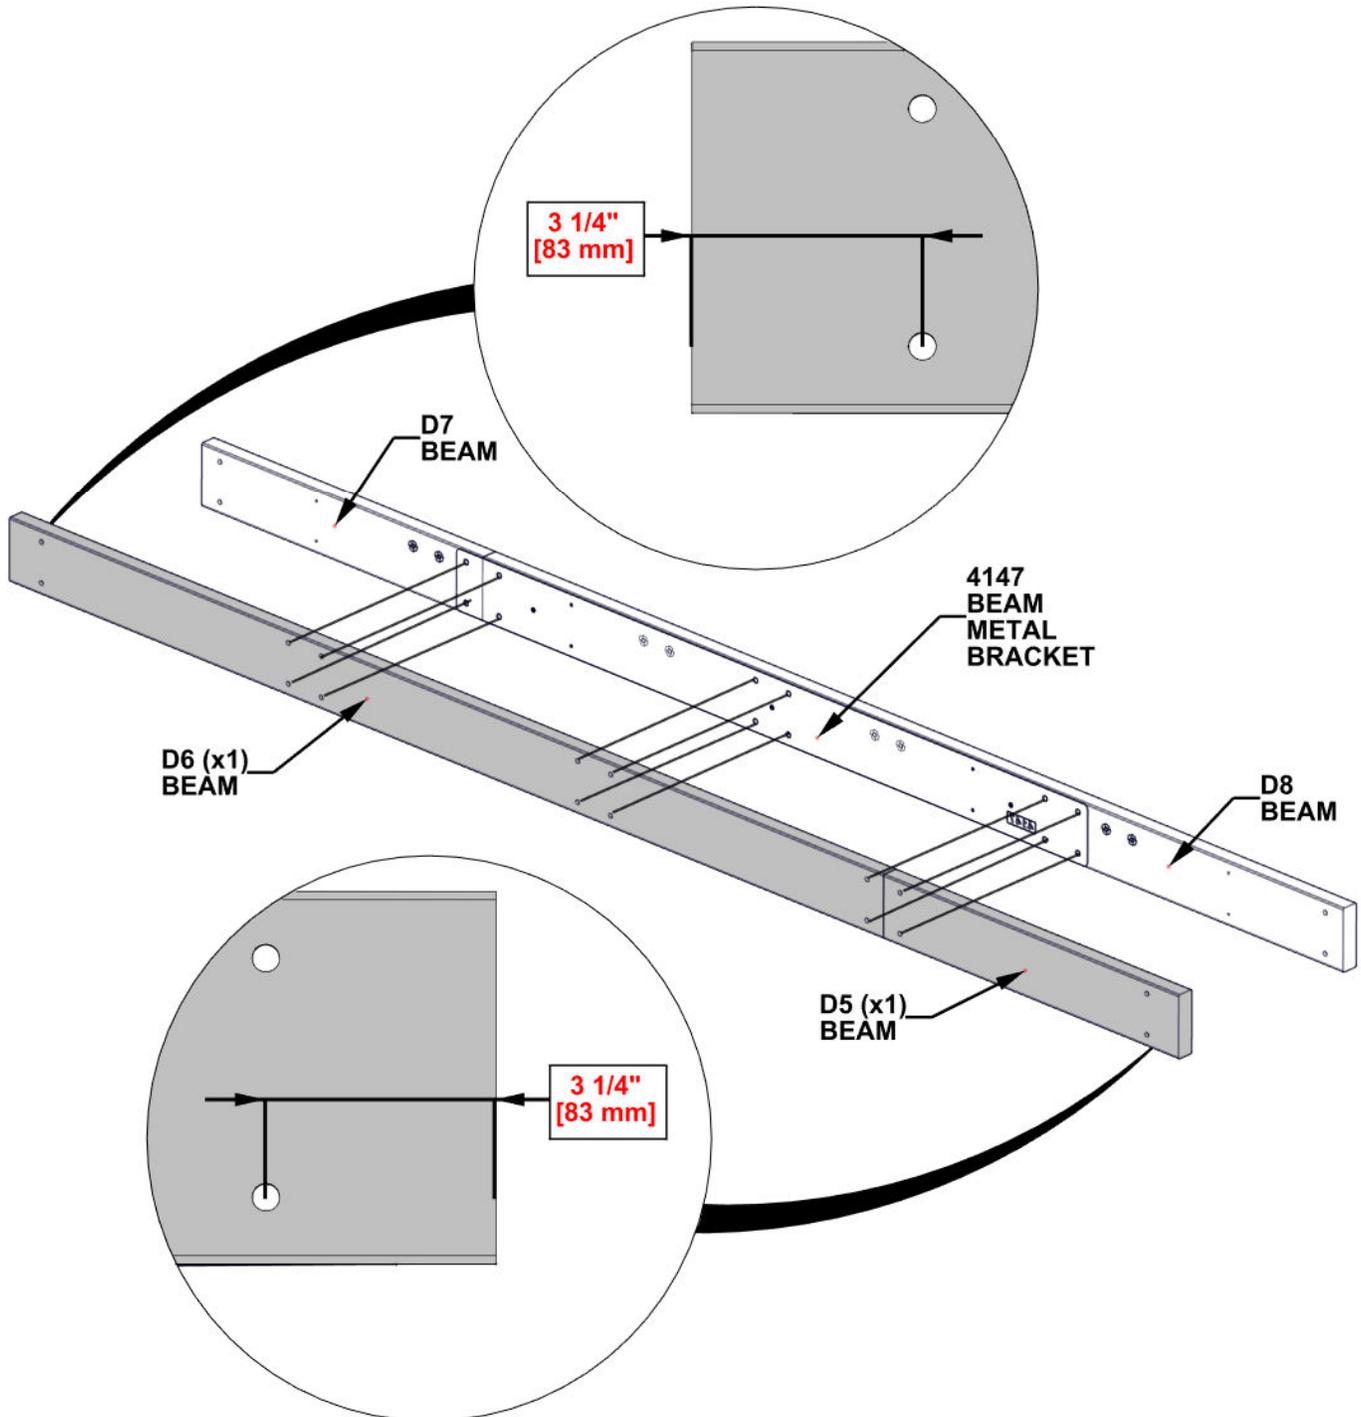

STEP 38D - BACK BEAM ASSEMBLY



Qty	PartNo	Description
12	H100379	TNUT-5/16" BLK
12	H100195	BOLT WH 5/16x2 3/4 BLK
12	H100198	WASHER LOCK EXT 8x19
8	H100201	SCREW PFH 8x2 1/2 BLK

- INSERT T-NUTS FIRST.

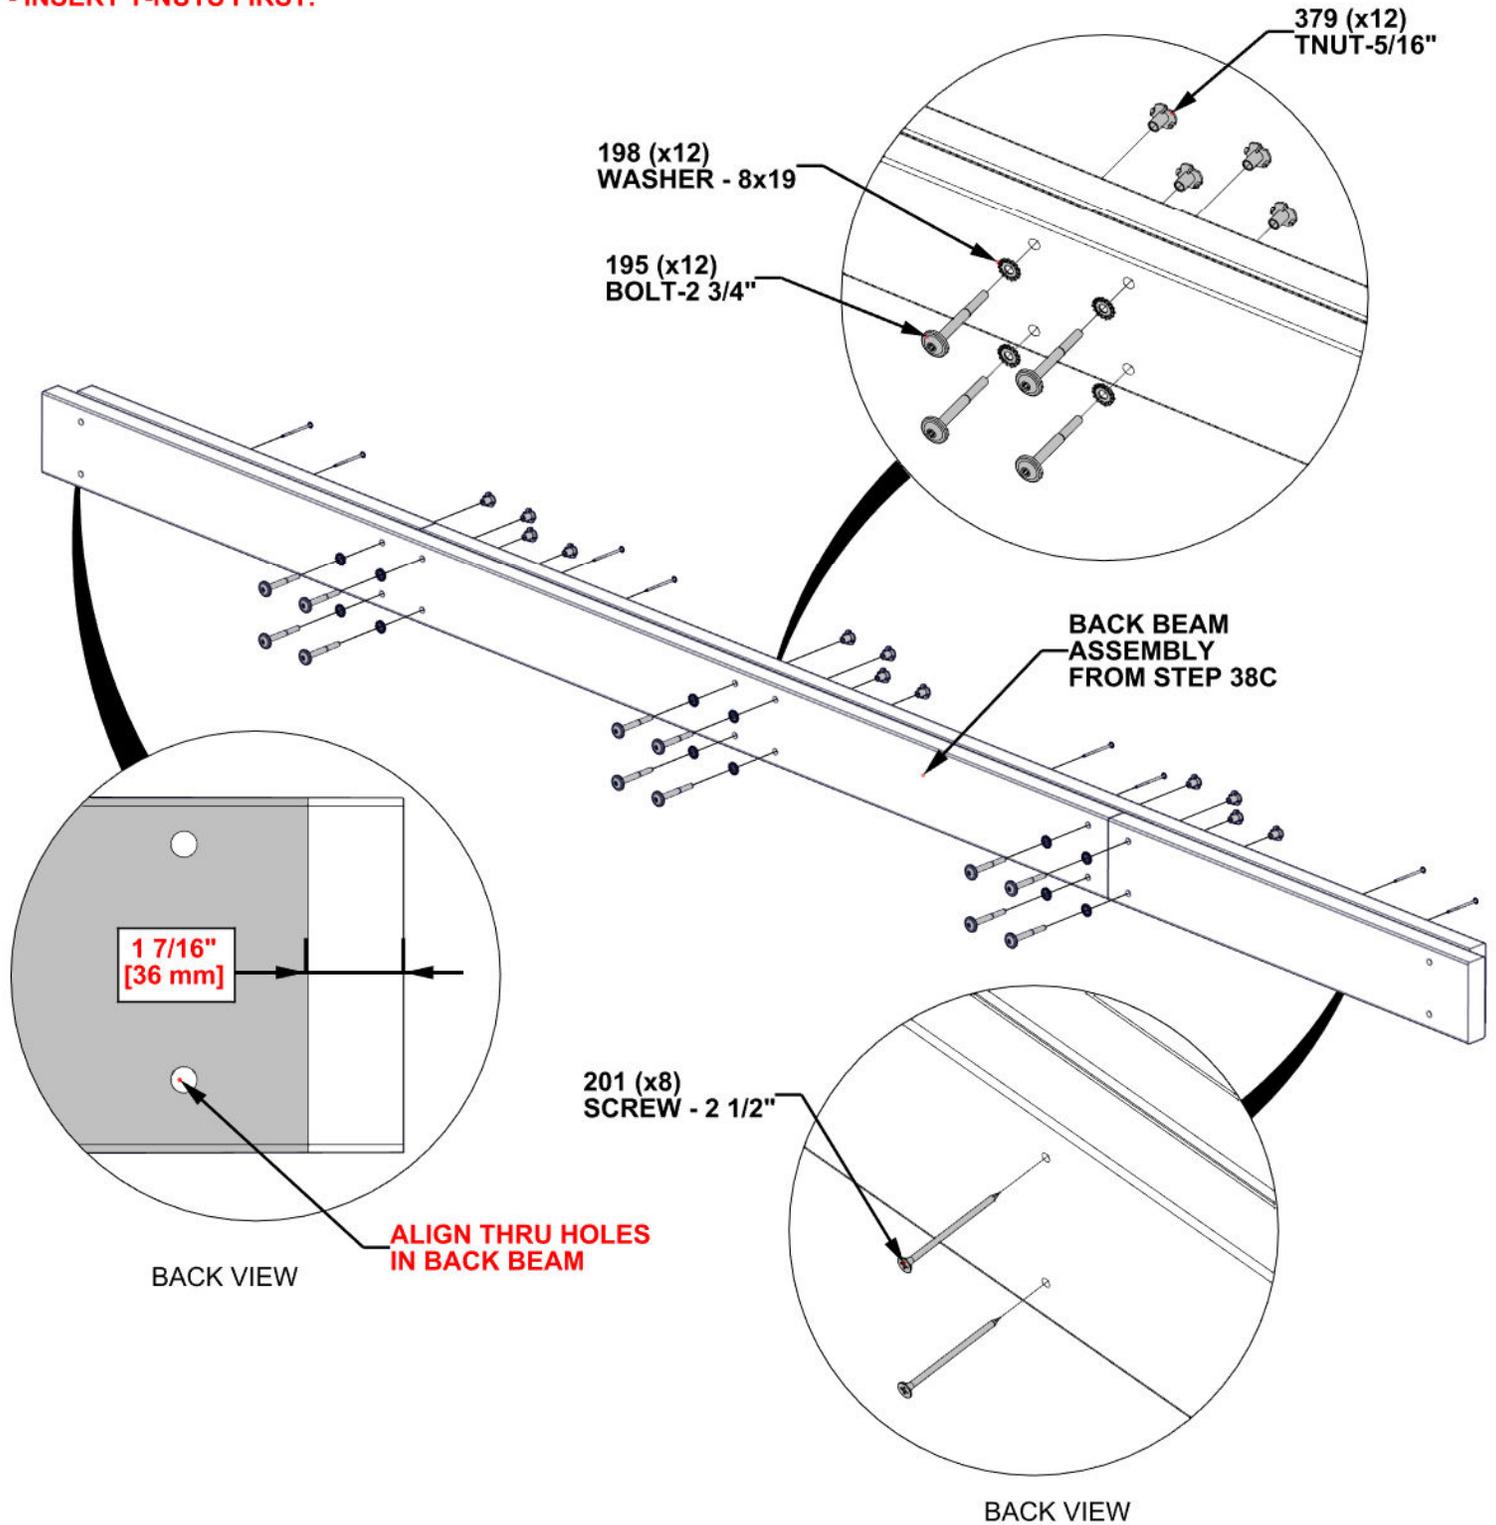

STEP 38E - BACK BEAM ASSEMBLY

Qty	PartNo	Description
4	H100479	NUT LOCK 5/16 BLK
8	H100459	BOLT WH 5/16x1 1/4 BLK
4	H100415	BOLT WH 5/16x3 3/4 BLK
4	H100198	WASHER LOCK EXT 8x19
4	H100770	WASHER FLAT 5/16 BLK

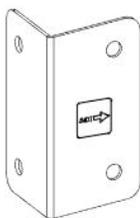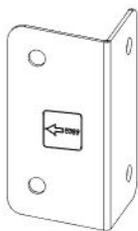


5399 L BRACKET RIGHT - A4M05399
(x1) 2 5/8"x2 5/8"x5" (66x66x127)

5401 L BRACKET LEFT - A4M05401
(x1) 2 5/8"x2 5/8"x5" (66x66x127)

1787 RAFTER BRACKET - A4M01787
(x4) 1 5/8"x2 7/16"x4" (42x62x101)

- ROTATE BEAM ASSEMBLY 180 DEGREES AS SHOWN BELOW.

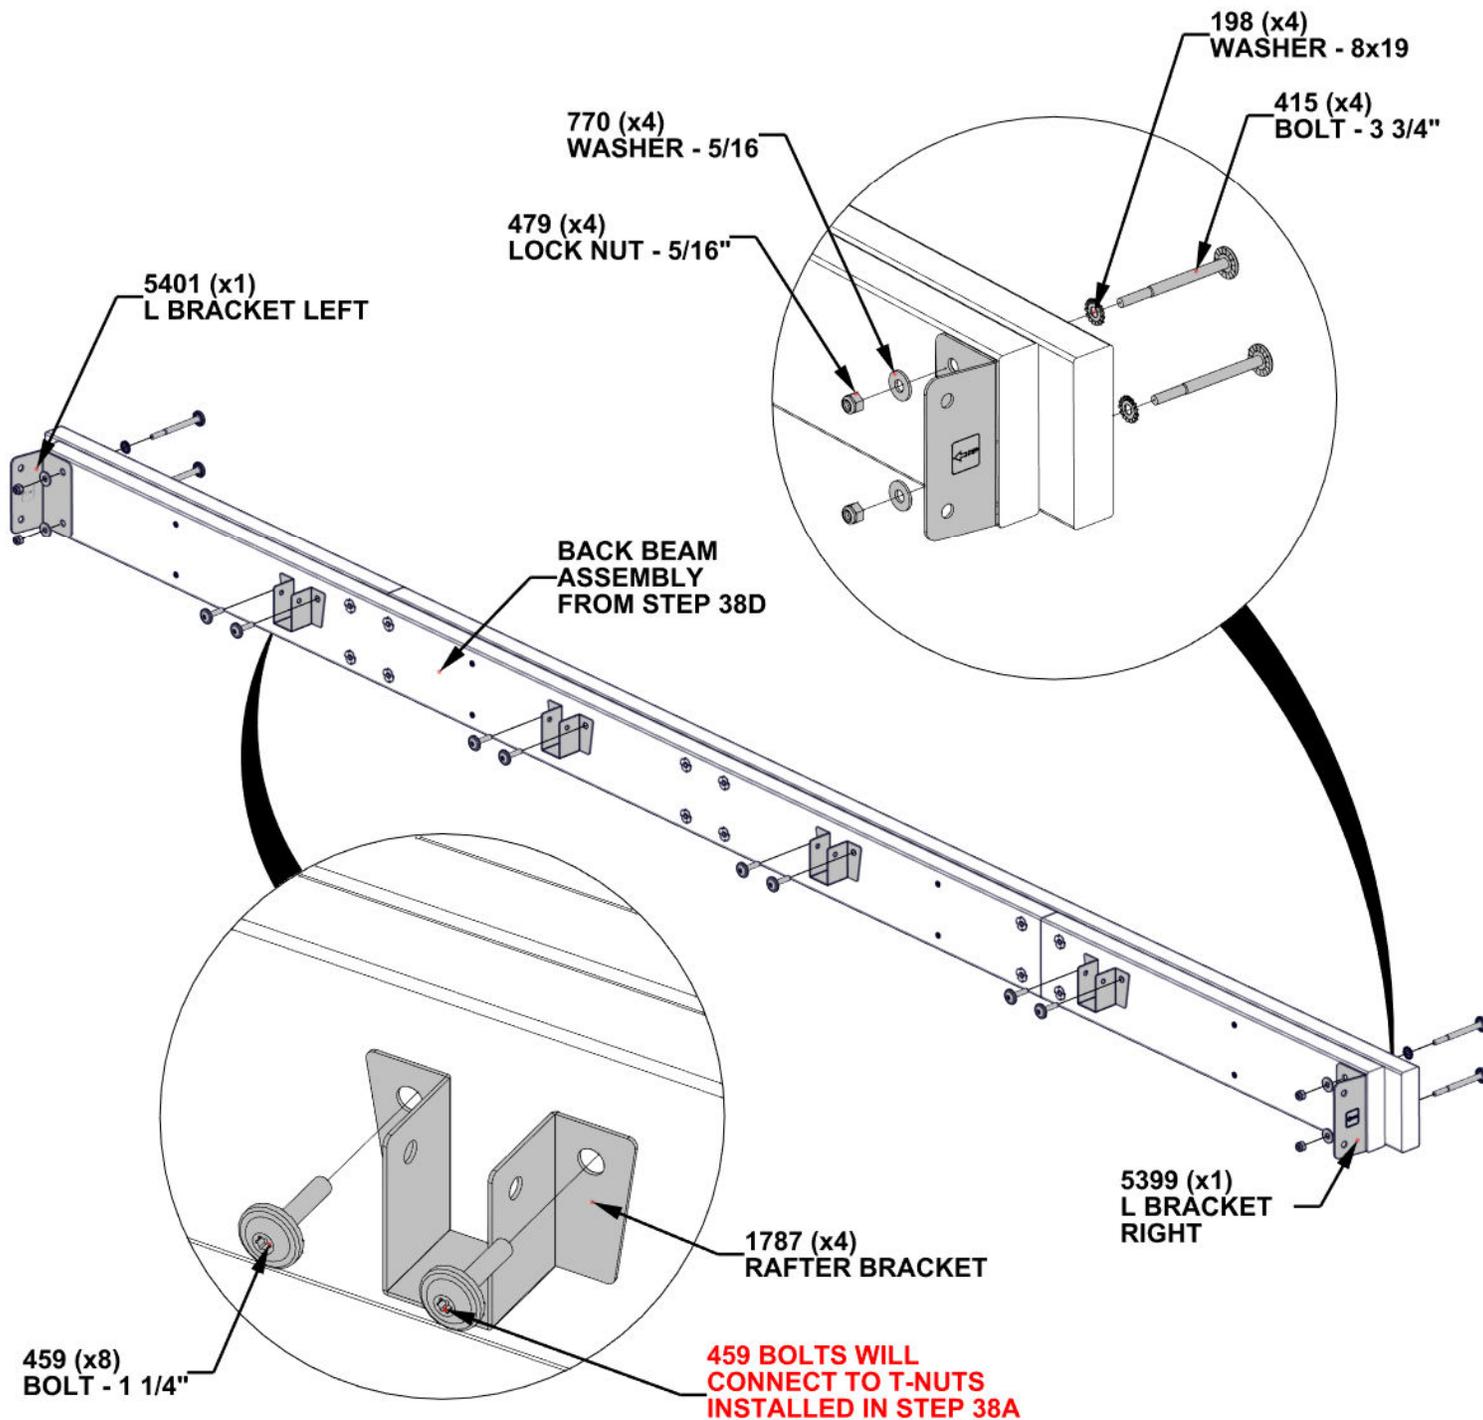

STEP 39A - FRONT BEAM ASSEMBLY

Qty	PartNo	Description
8	H100379	T-NUT 5/16 BLK




D3 BEAM - W4L20953
(x1) 1 7/16"x5 1/4"x28 7/8" (36x134x734)




D4 BEAM - W4L20954
(x1) 1 7/16"x5 1/4"x88 3/8" (36x134x2244)

- INSERT T-NUTS FIRST.
- T-NUTS INSTALLED IN THIS STEP WILL BE SANDWICHED BETWEEN BEAMS IN THE NEXT STEPS.
- FOR EASE OF ASSEMBLY, WE RECOMMEND USING SAW HORSES FOR STEPS 39A-39E.

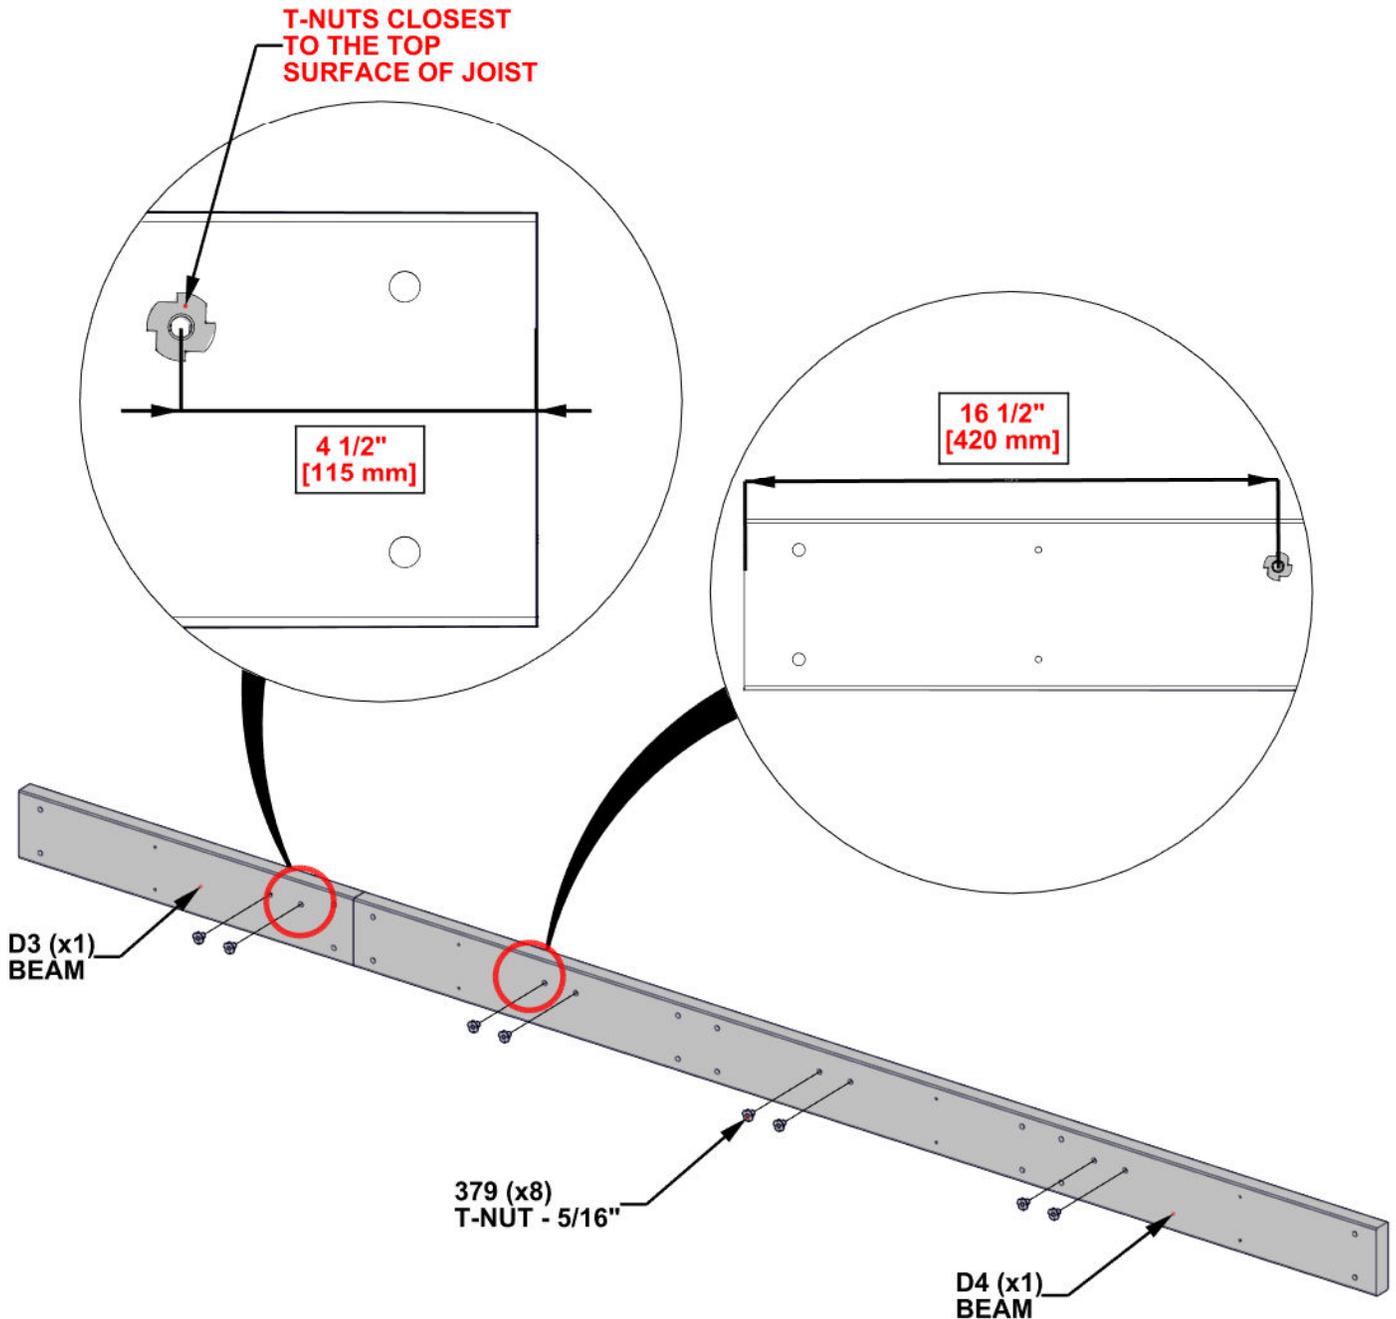

STEP 39B - FRONT BEAM ASSEMBLY


Qty	PartNo	Description
3	H100387	SCREW PFH 8x1 1/4 BLK

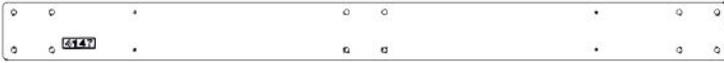

4147 BEAM METAL BRACKET - A4M04147
(x1) 1/16"x5 1/8"x64 13/16" (1.5x130x1646)

- ALIGN THRU HOLES IN BEAM BRACKET WITH THE HOLES IN EACH BEAM.

- T-NUTS INSTALLED IN PREVIOUS STEP WILL BE SANDWICHED BETWEEN JOIST PARTS AND FASCIA.

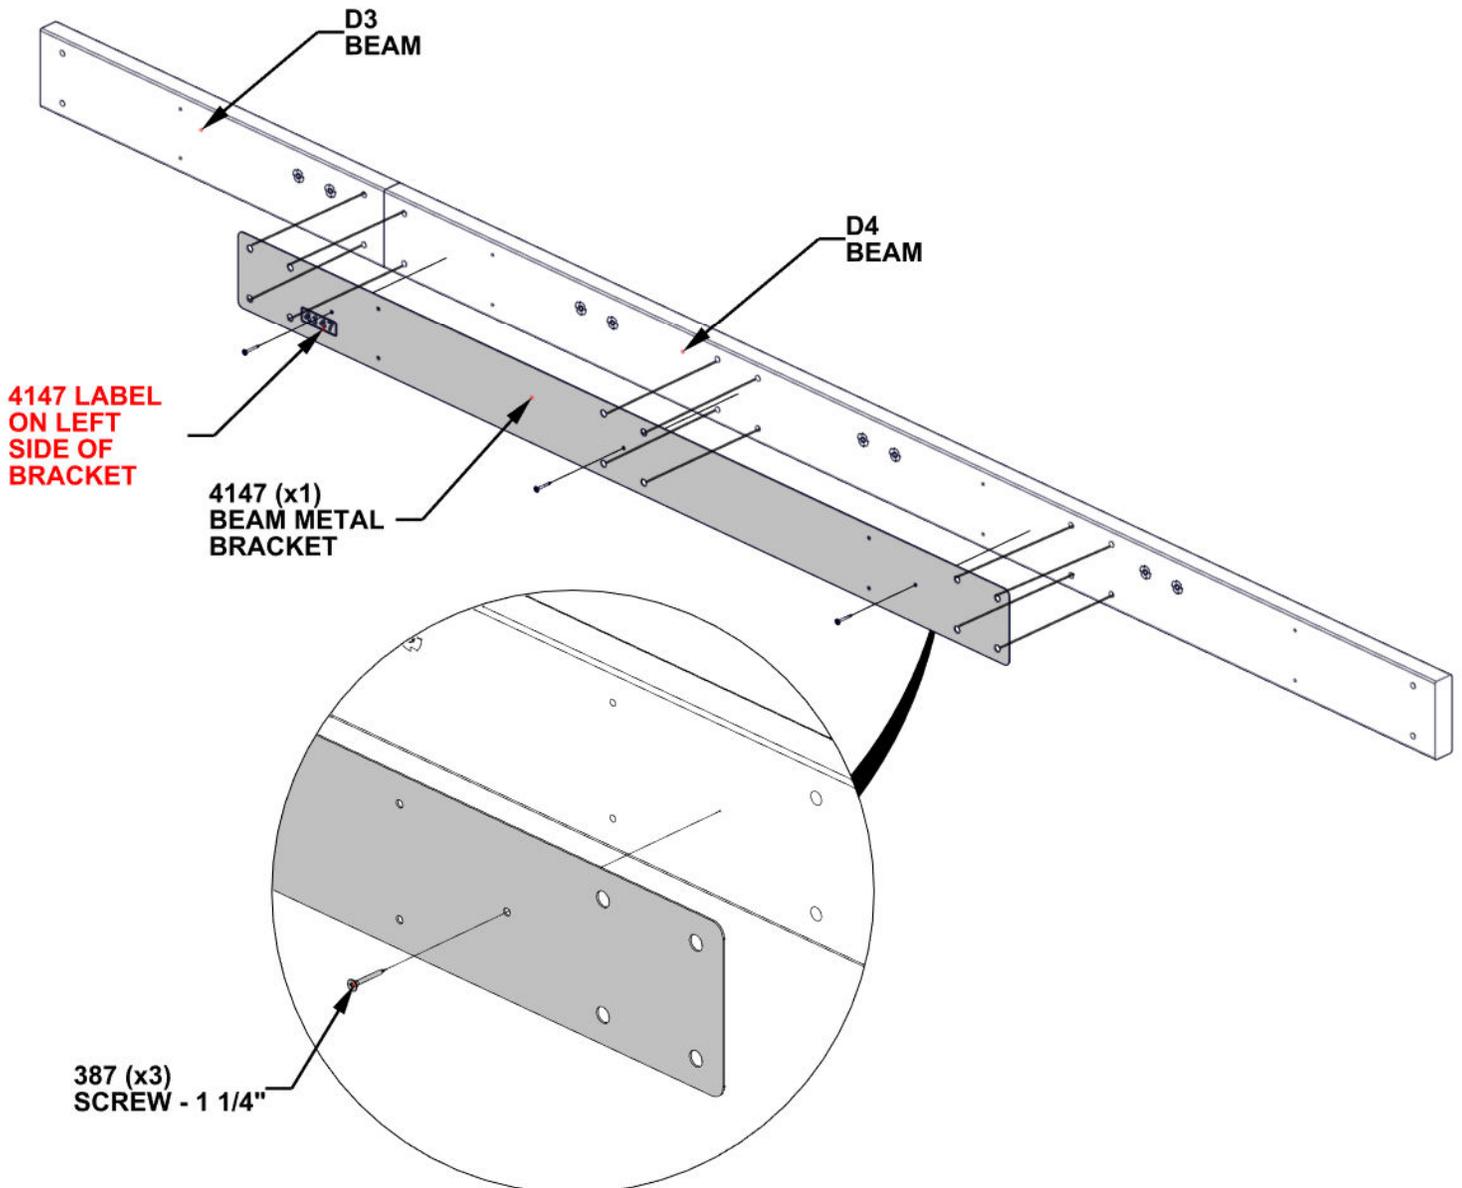

STEP 39C - FRONT BEAM ASSEMBLY




D1 BEAM - W4L20951
(x1) 1 7/16"x5 1/4"x30 5/16" (36x134x770)



D2 BEAM - W4L20952
(x1) 1 7/16"x5 1/4"x89 3/4" (36x134x2280)


- ALIGN HOLES IN D1 AND D2 BEAM WITH THRU HOLES IN BEAM BRACKET AS BELOW SHOWN.
- T-NUTS INSTALLED IN PREVIOUS STEP WILL BE SANDWICHED BETWEEN JOIST PARTS AND FASCIA.

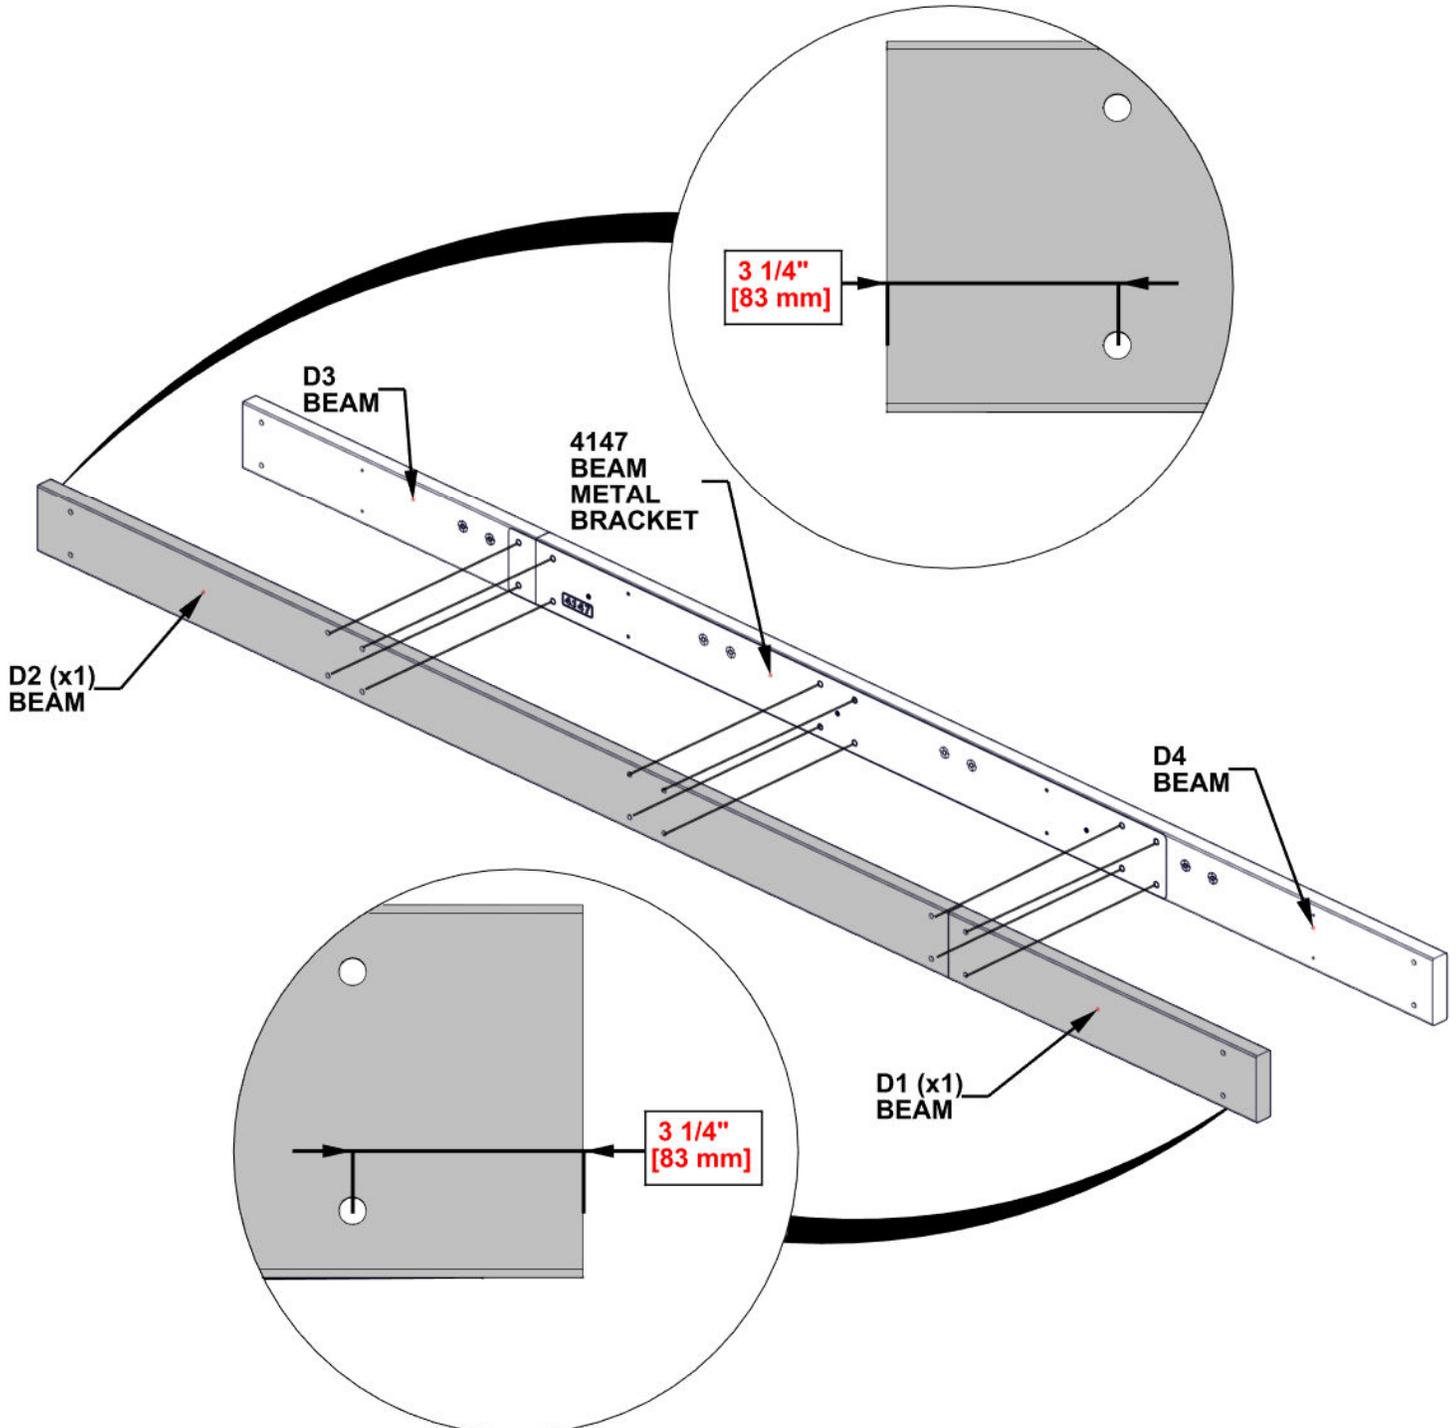

STEP 39D - FRONT BEAM ASSEMBLY



Qty	PartNo	Description
12	H100379	TNUT-5/16" BLK
12	H100195	BOLT WH 5/16x2 3/4 BLK
12	H100198	WASHER LOCK EXT 8x19
8	H100201	SCREW PFH 8x2 1/2 BLK

- INSERT T-NUTS FIRST.

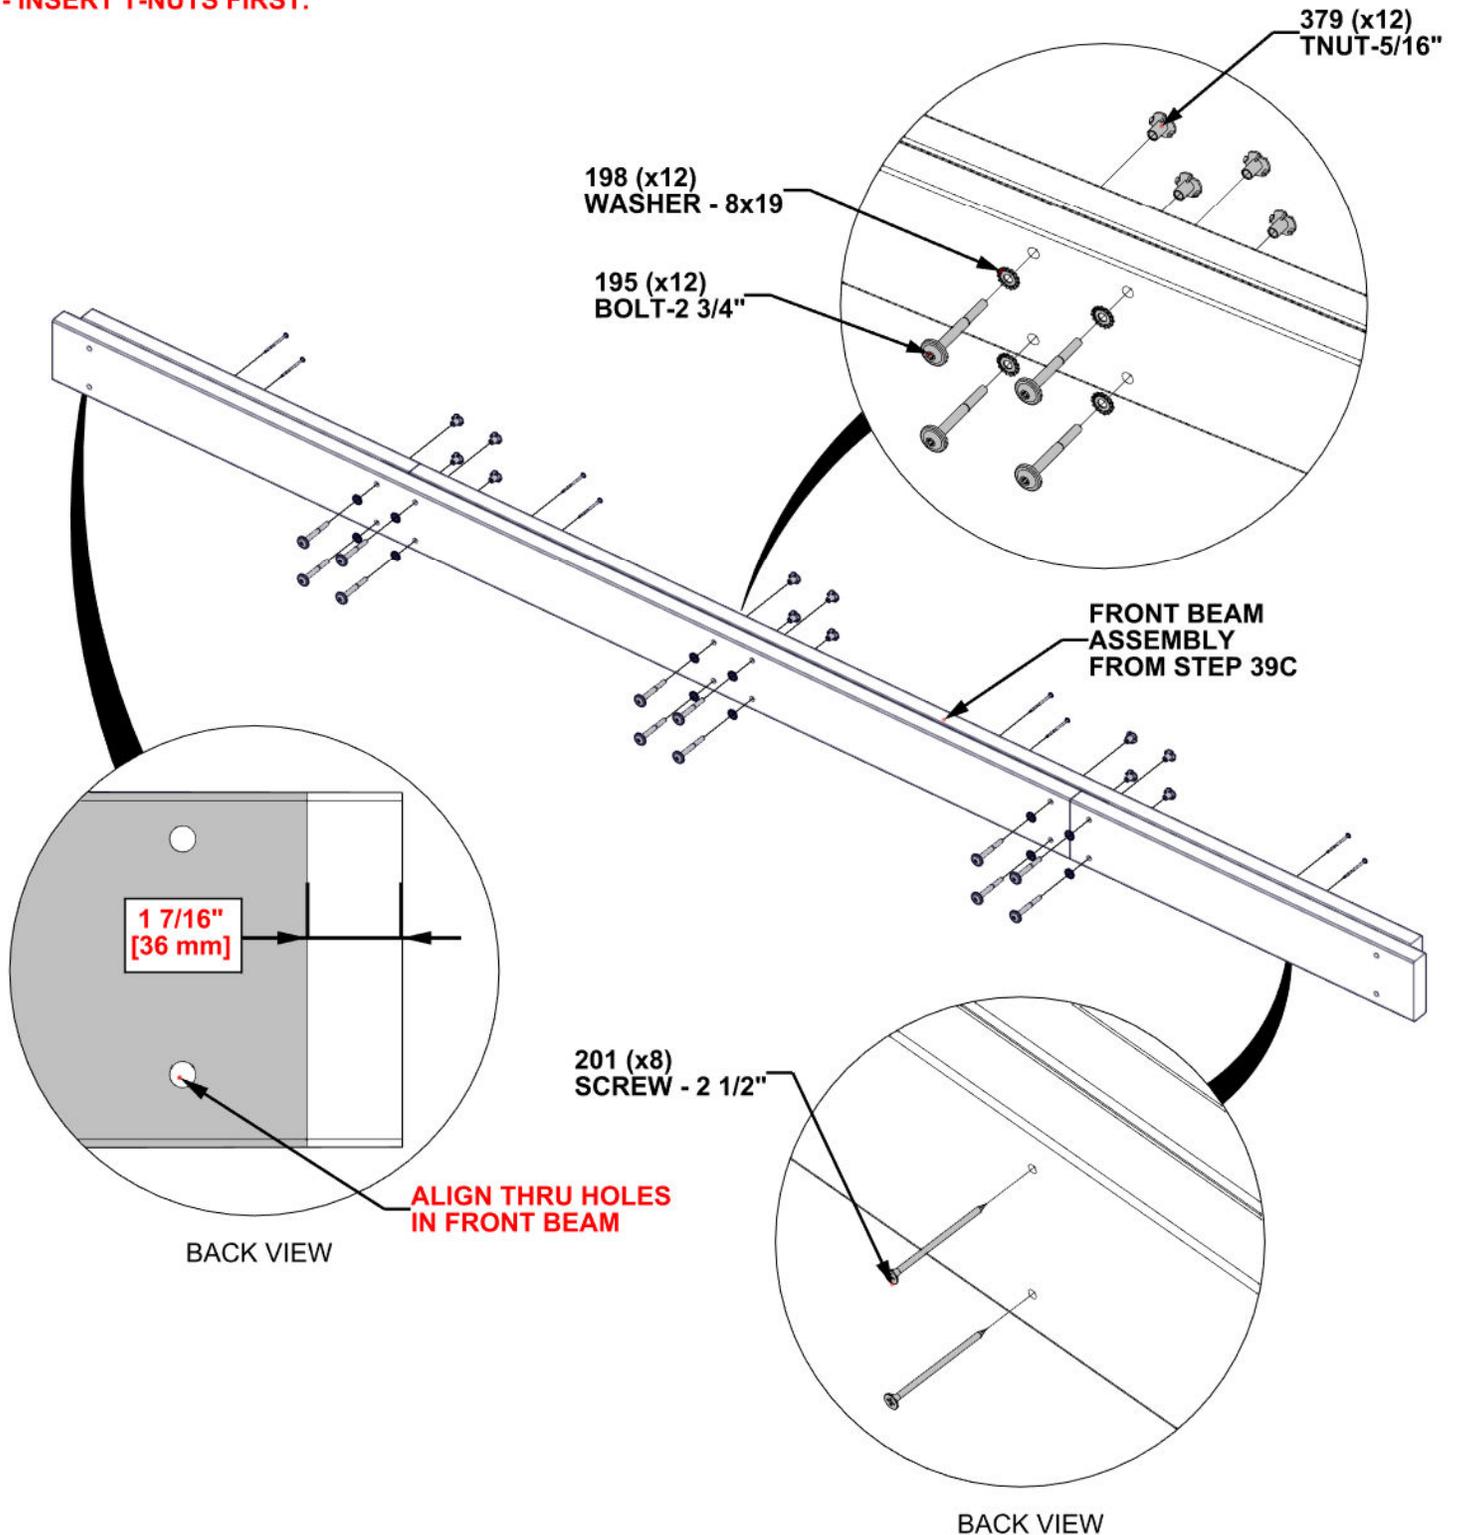

STEP 39E - FRONT BEAM ASSEMBLY

Qty	PartNo	Description
4	H100479	NUT LOCK 5/16 BLK
4	H100415	BOLT WH 5/16x3 3/4 BLK
8	H100459	BOLT WH 5/16x1 1/4 BLK
4	H100198	WASHER LOCK EXT 8x19
4	H100770	WASHER FLAT 5/16 BLK

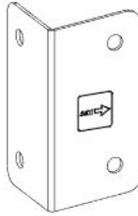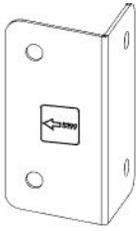


5399 L BRACKET RIGHT - A4M05399
(x1) 2 5/8"x2 5/8"x5" (66x66x127)

5401 L BRACKET LEFT - A4M05401
(x1) 2 5/8"x2 5/8"x5" (66x66x127)


1787 RAFTER BRACKET - A4M01787
(x4) 1 5/8"x2 7/16"x4" (42x62x101)

- ROTATE BEAM ASSEMBLY 180 DEGREES AS SHOWN BELOW.

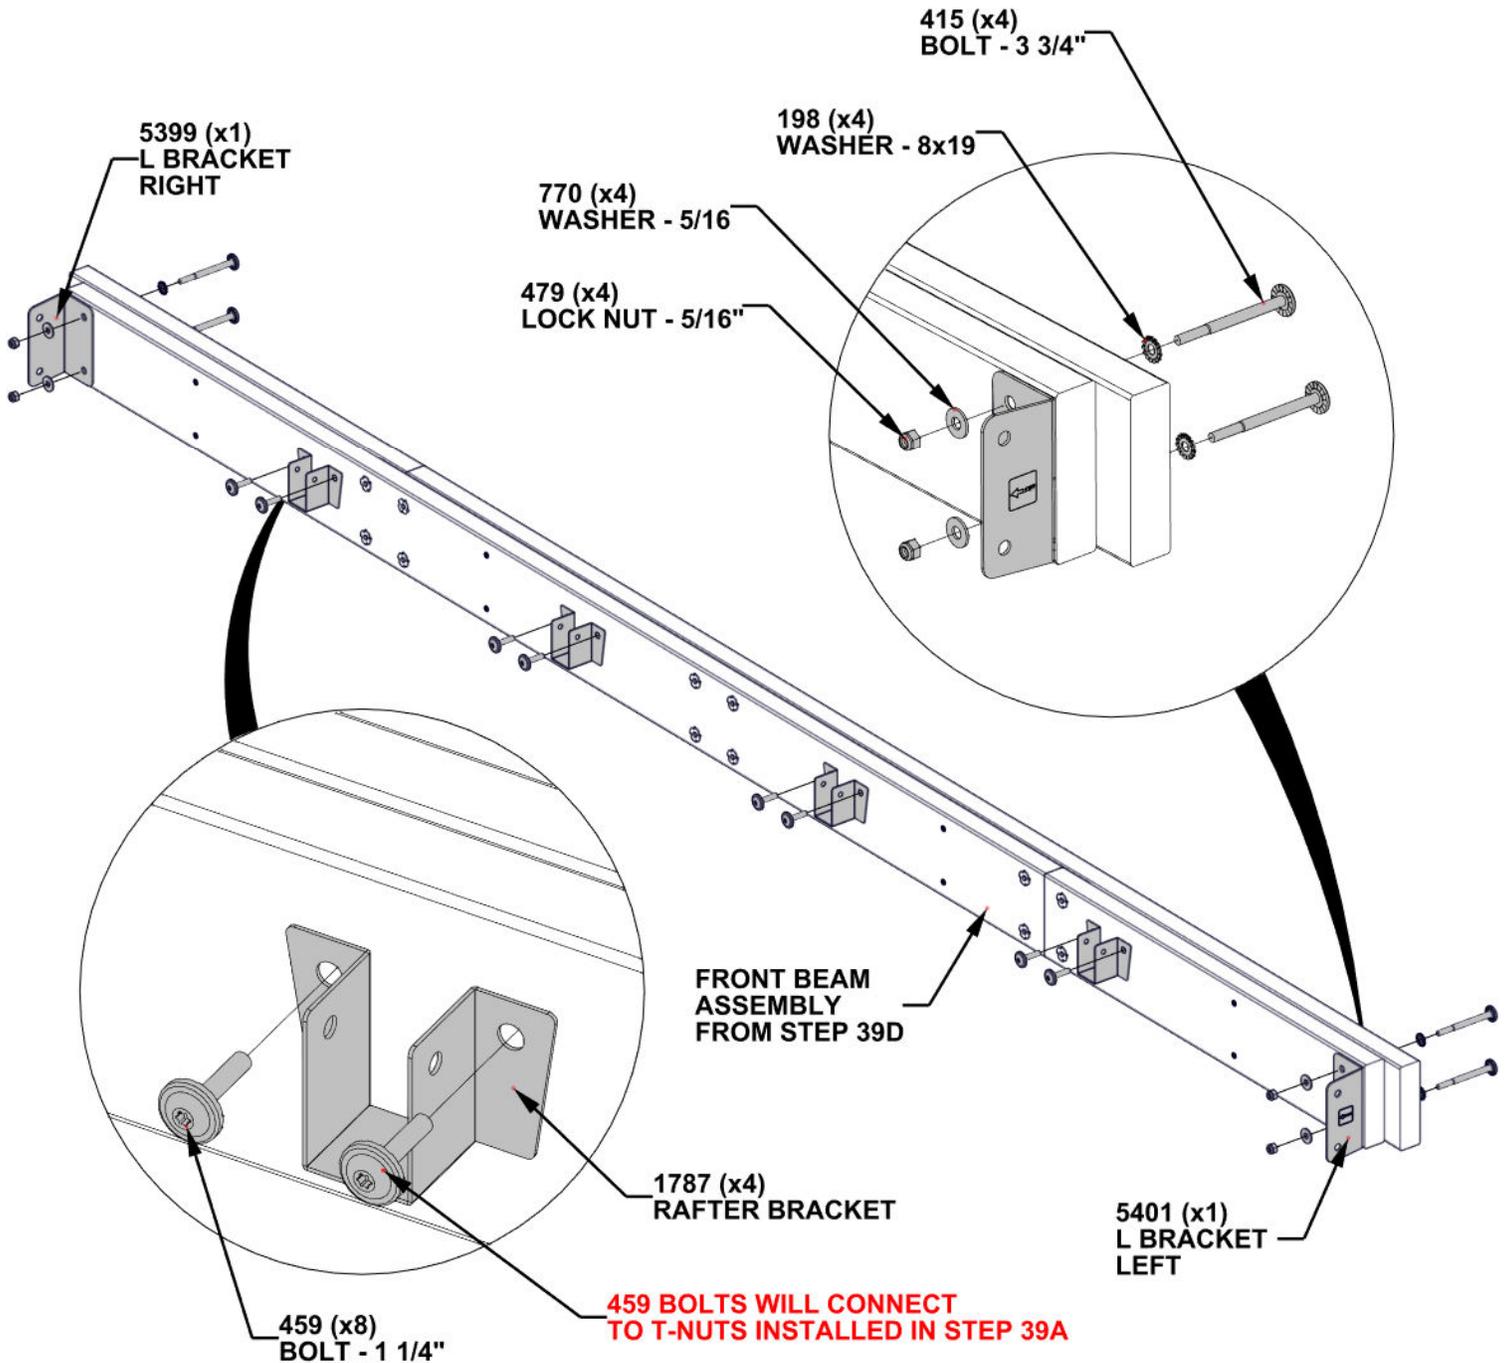


STEP 40 - ATTACH BACK BEAM

Qty	PartNo	Description
4	H100479	NUT LOCK 5/16 BLK
4	H100205	BOLT WH 5/16x2 1/4 BLK
4	H100198	WASHER LOCK EXT BLK
4	H100770	WASHER FLAT 5/16 BLK

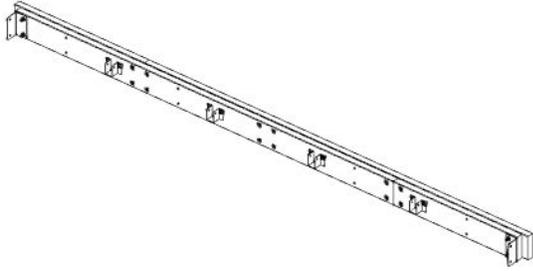


BACK BEAM ASSEMBLY FROM STEPS 38A-38E

- ALIGN BACK BEAM TO SIDE BEAMS BY ALIGNING HOLES IN BRACKET WITH THRU HOLES IN SIDE BEAMS.
- ATTACH BACK BEAM TO SIDE BEAMS.

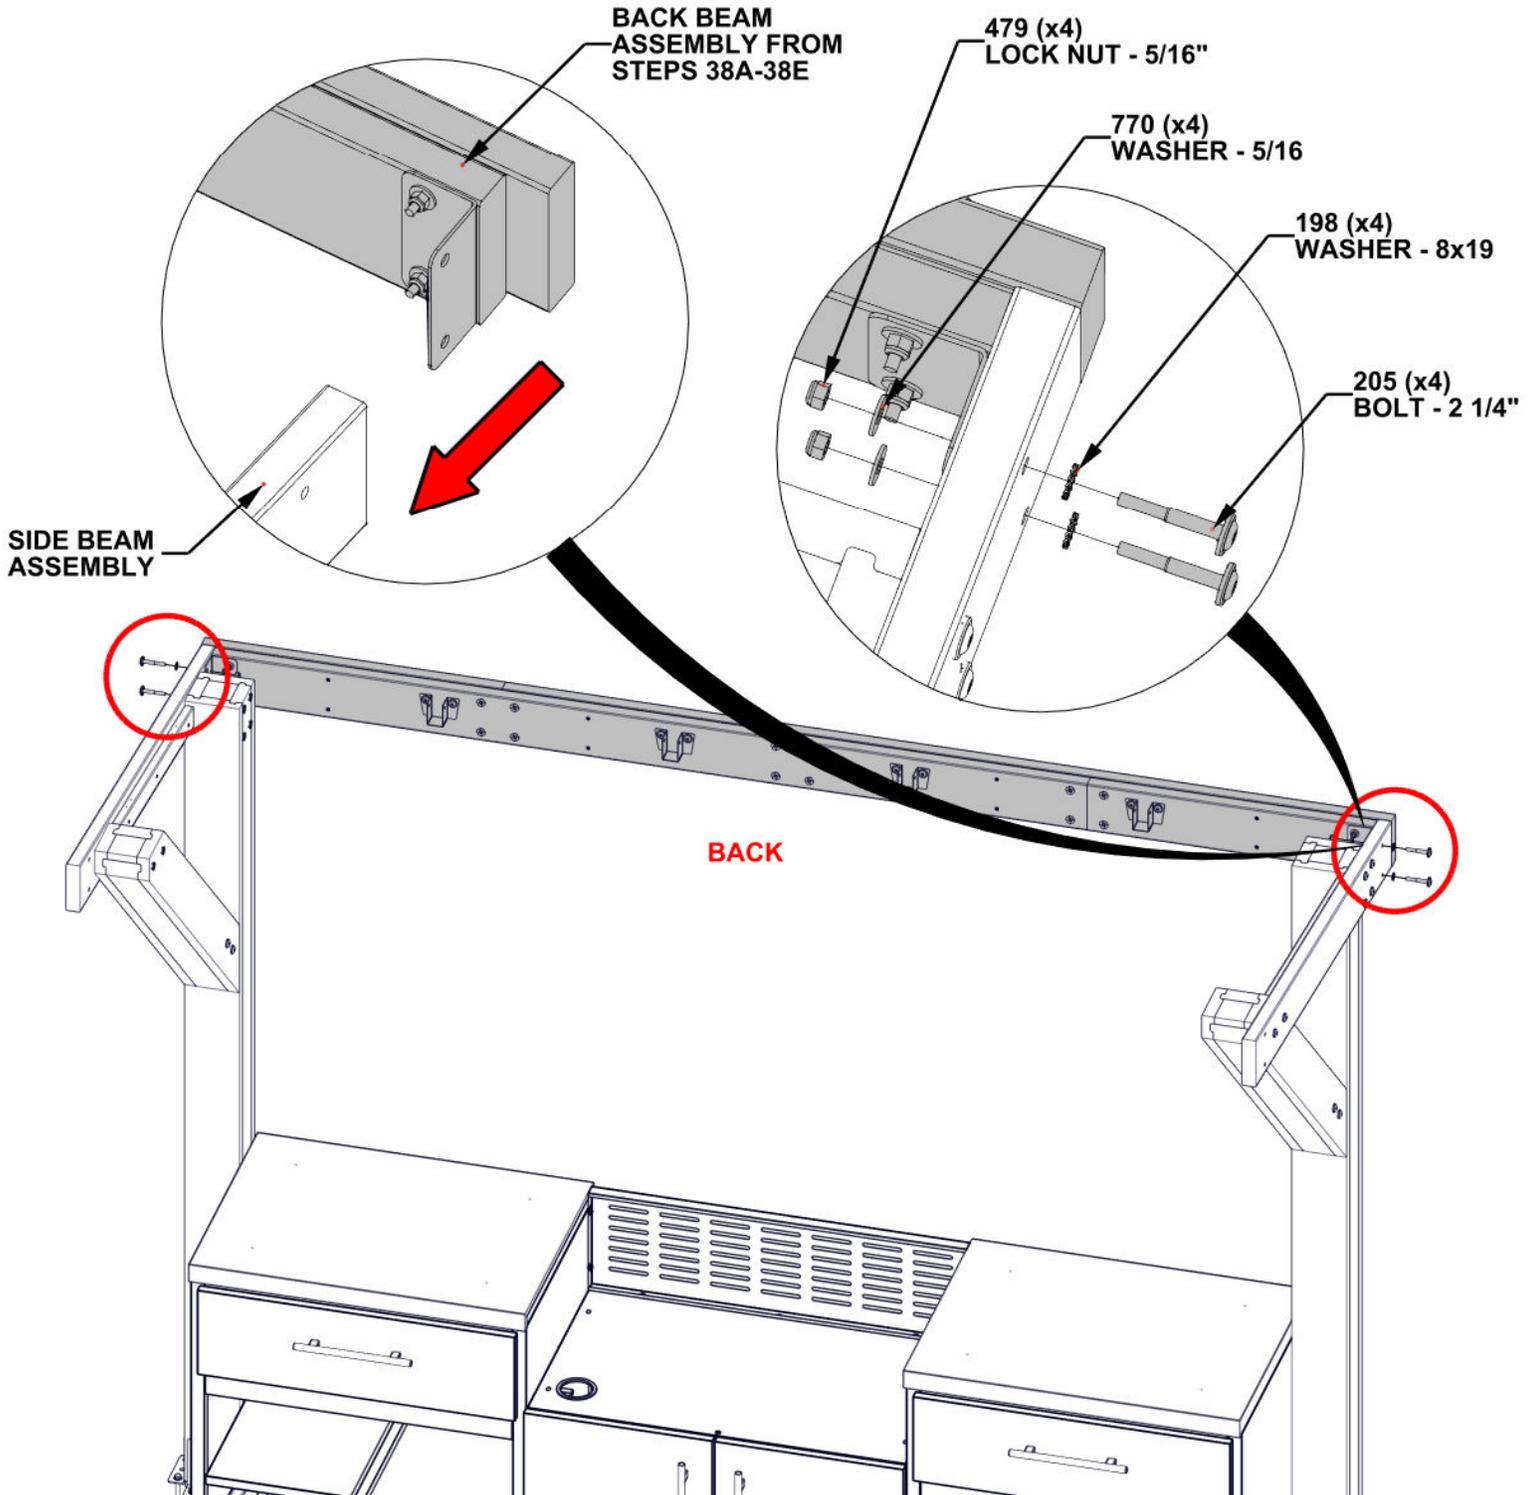


STEP 41 - ATTACH FRONT BEAM

Qty	PartNo	Description
4	H100479	NUT LOCK 5/16 BLK
4	H100205	BOLT WH 5/16x2 1/4 BLK
4	H100198	WASHER LOCK EXT BLK
4	H100770	WASHER FLAT 5/16 BLK

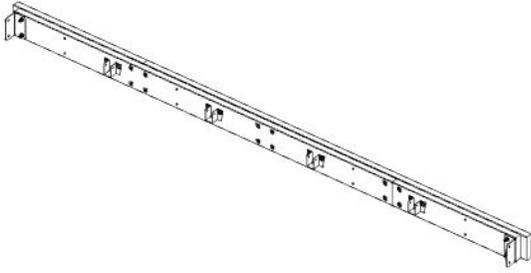


FRONT BEAM ASSEMBLY FROM STEPS 39A-39E

- ALIGN FRONT BEAM TO SIDE BEAMS BY ALIGNING HOLES IN BRACKET WITH THRU HOLES IN SIDE BEAMS.
- ATTACH FRONT BEAM TO SIDE BEAMS.

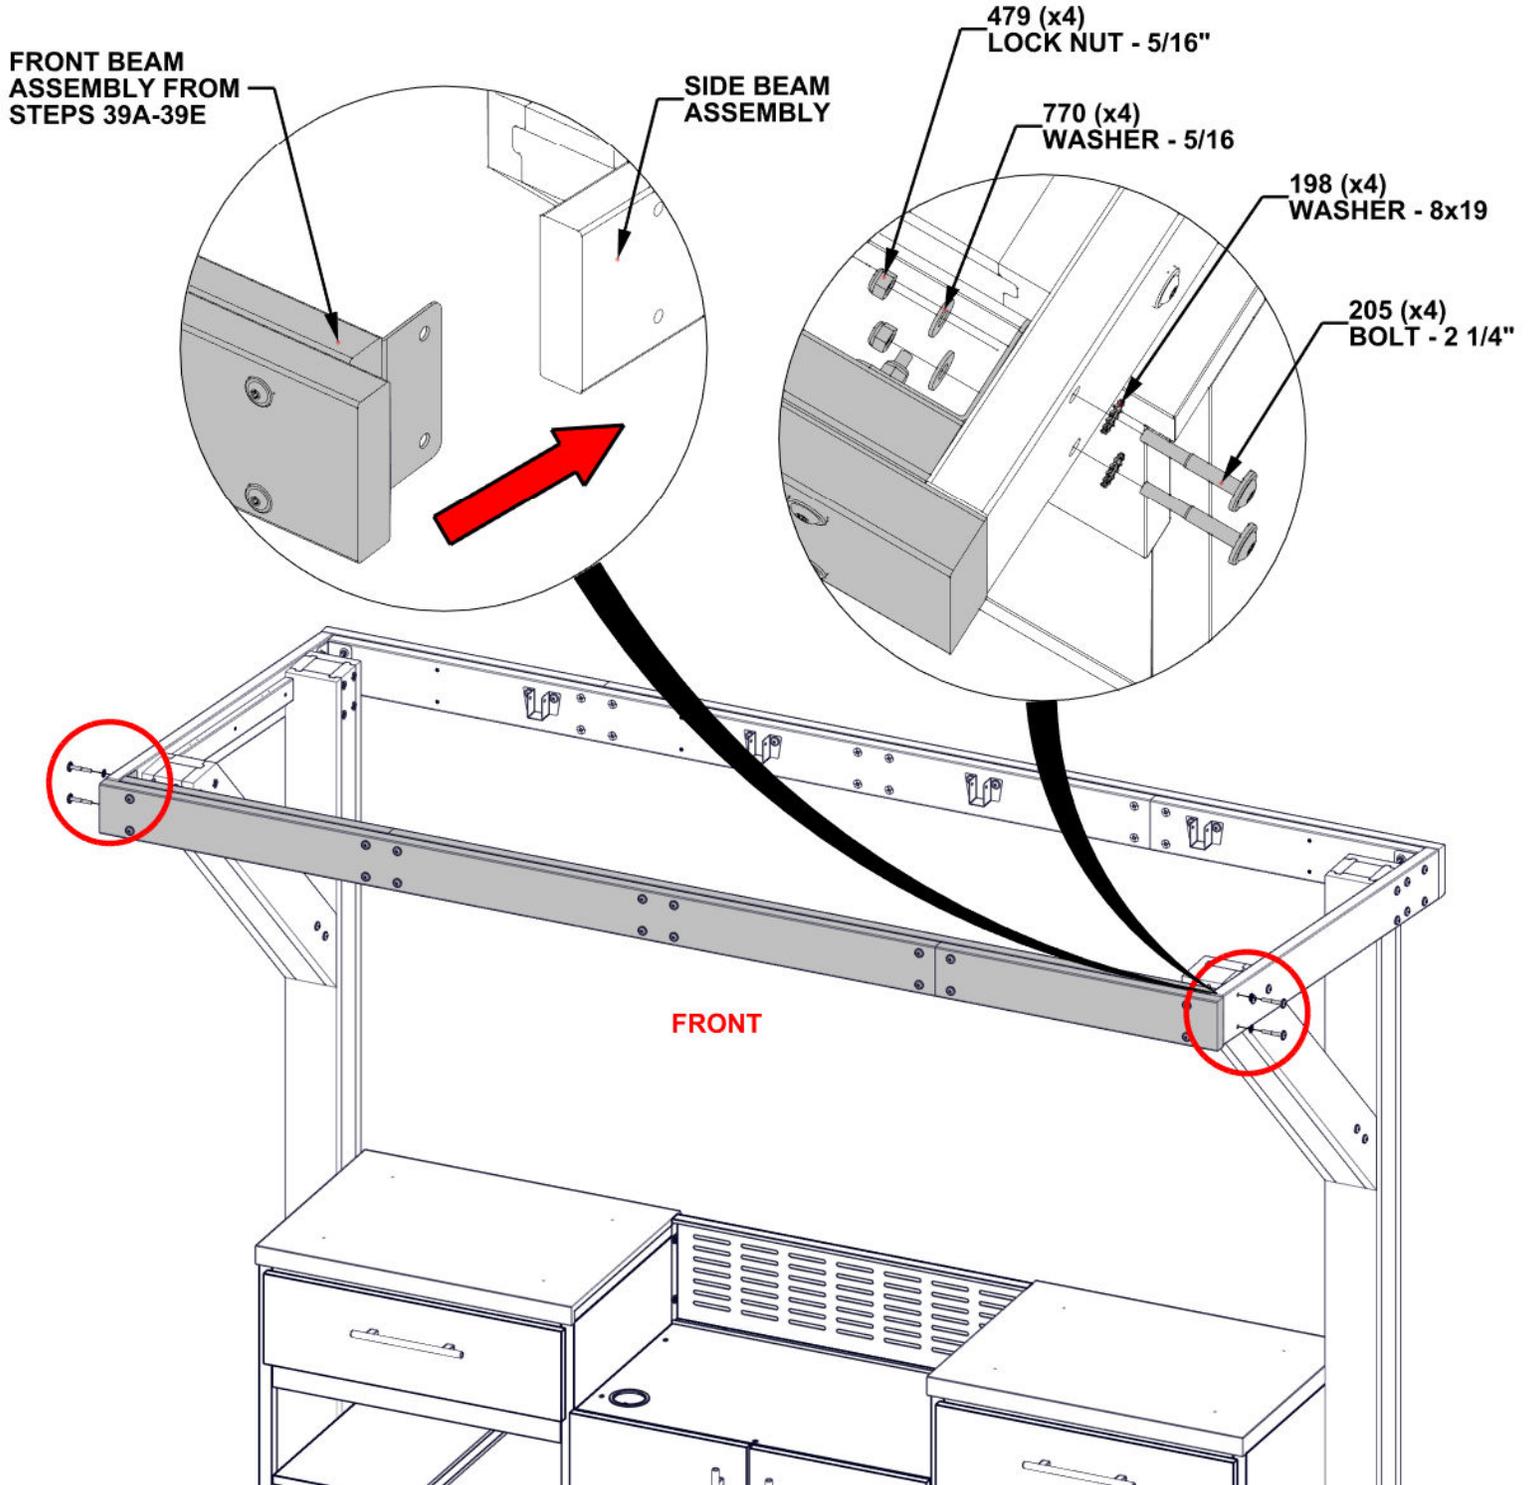


STEP 42 - ROOF ASSEMBLY

Qty	PartNo	Description
8	H100653	NUT LOCK 1/4 BLK
8	H100488	BOLT WH 1/4x1 1/2 BLK LT
8	H100630	WASHER FLAT 8x19 BLK

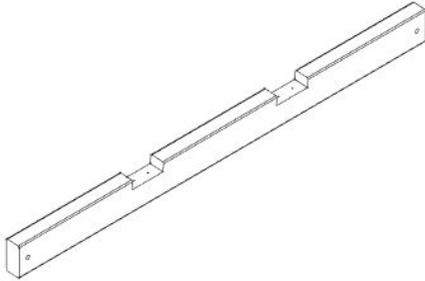



E1 RAFTER - W4L20960
(x4) 1 7/16"x3 3/8"x46 9/16" (36x86x1183)

- ALIGN THRU HOLES IN RAFTER WITH RAFTER BRACKETS.
- ATTACH RAFTERS TO RAFTER BRACKETS.

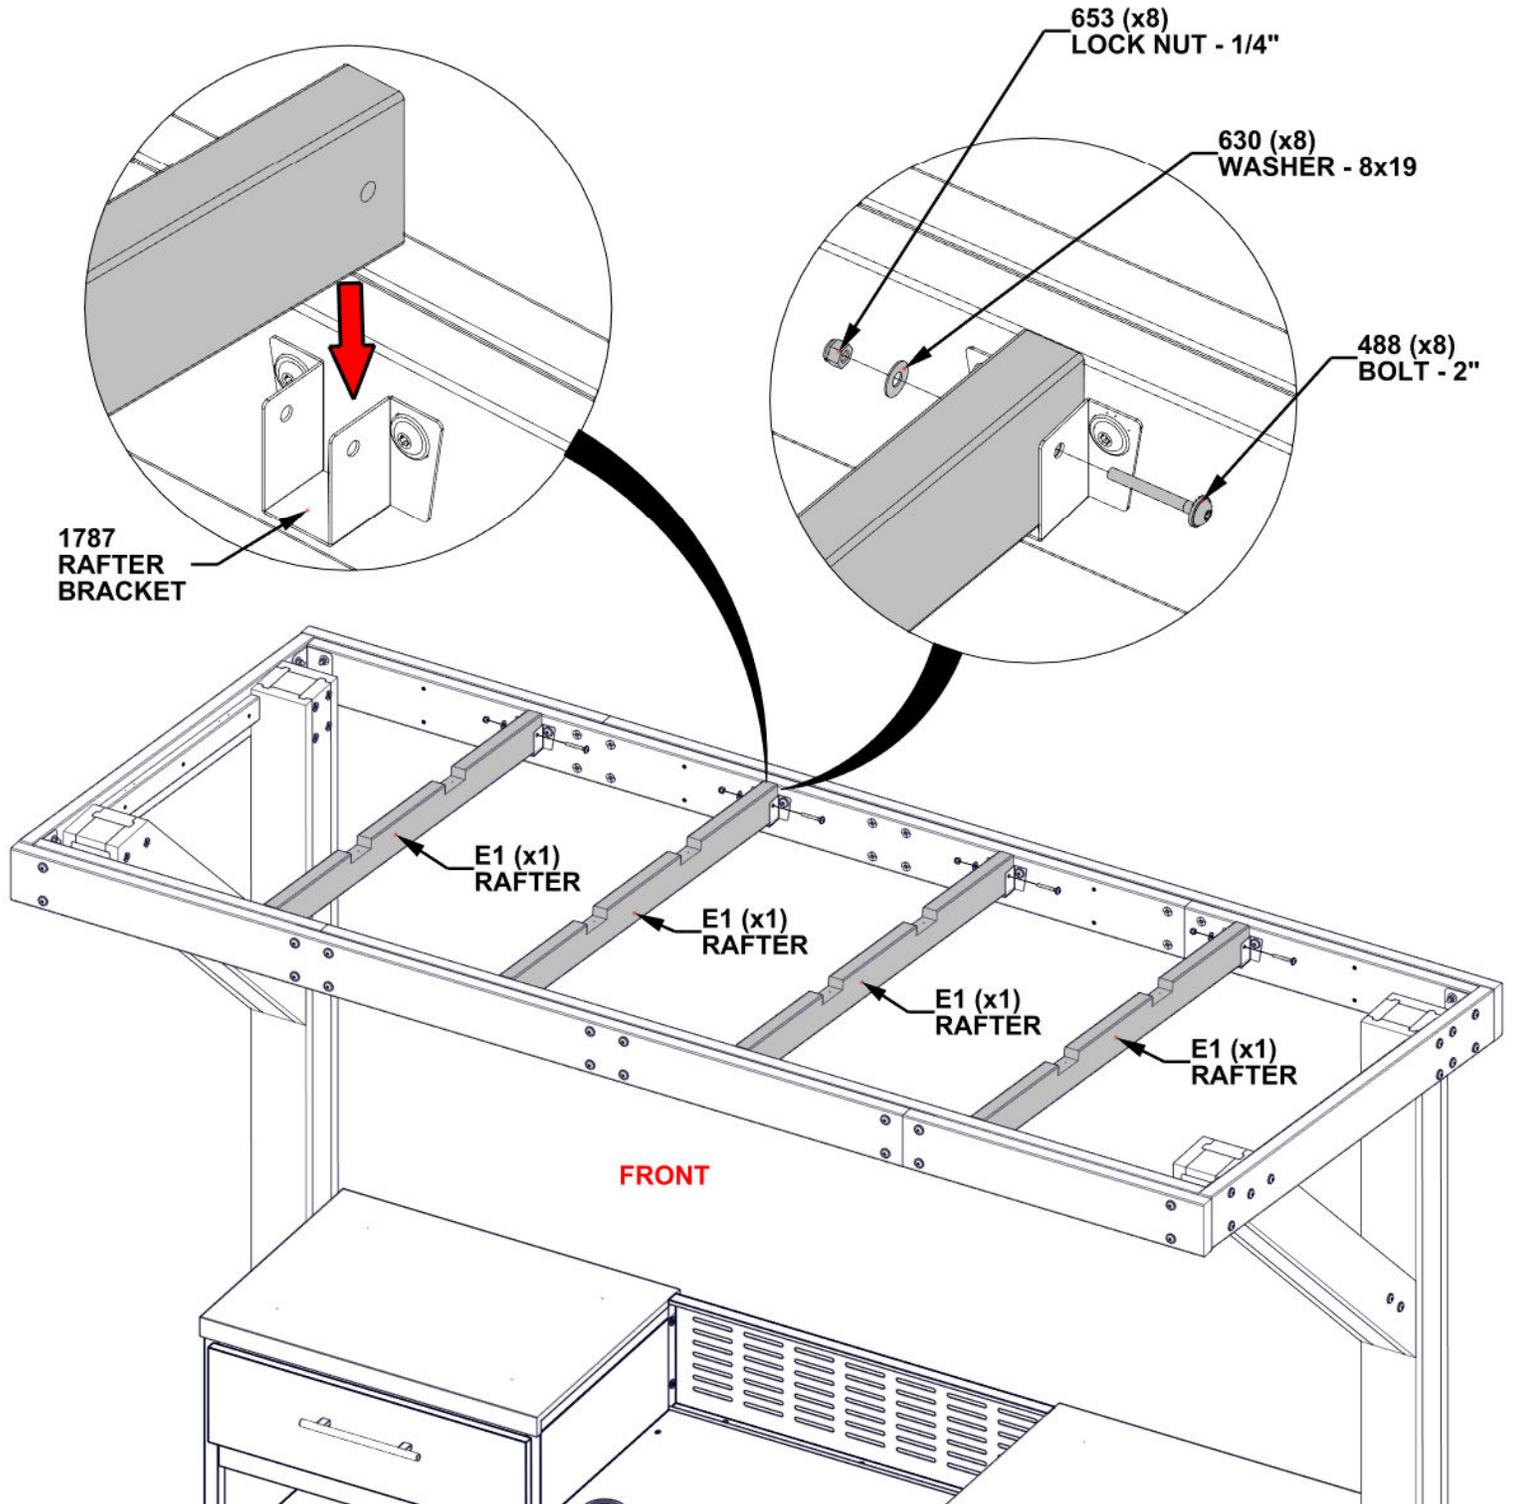


STEP 43 - ROOF ASSEMBLY

Qty	PartNo	Description
24	H100382	SCREW PFH 8x1 3/4 BLK

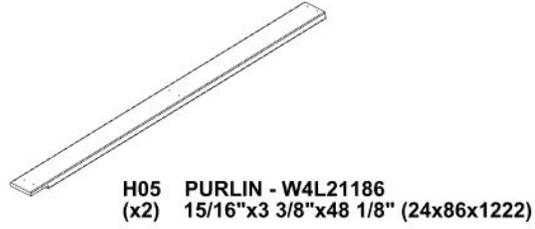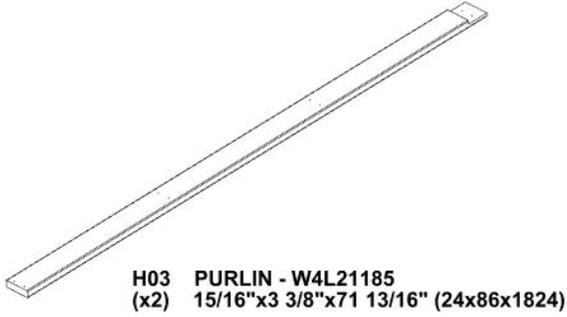

- ALIGN PILOT HOLES.
- ATTACH PURLINS TO RAFTERS.

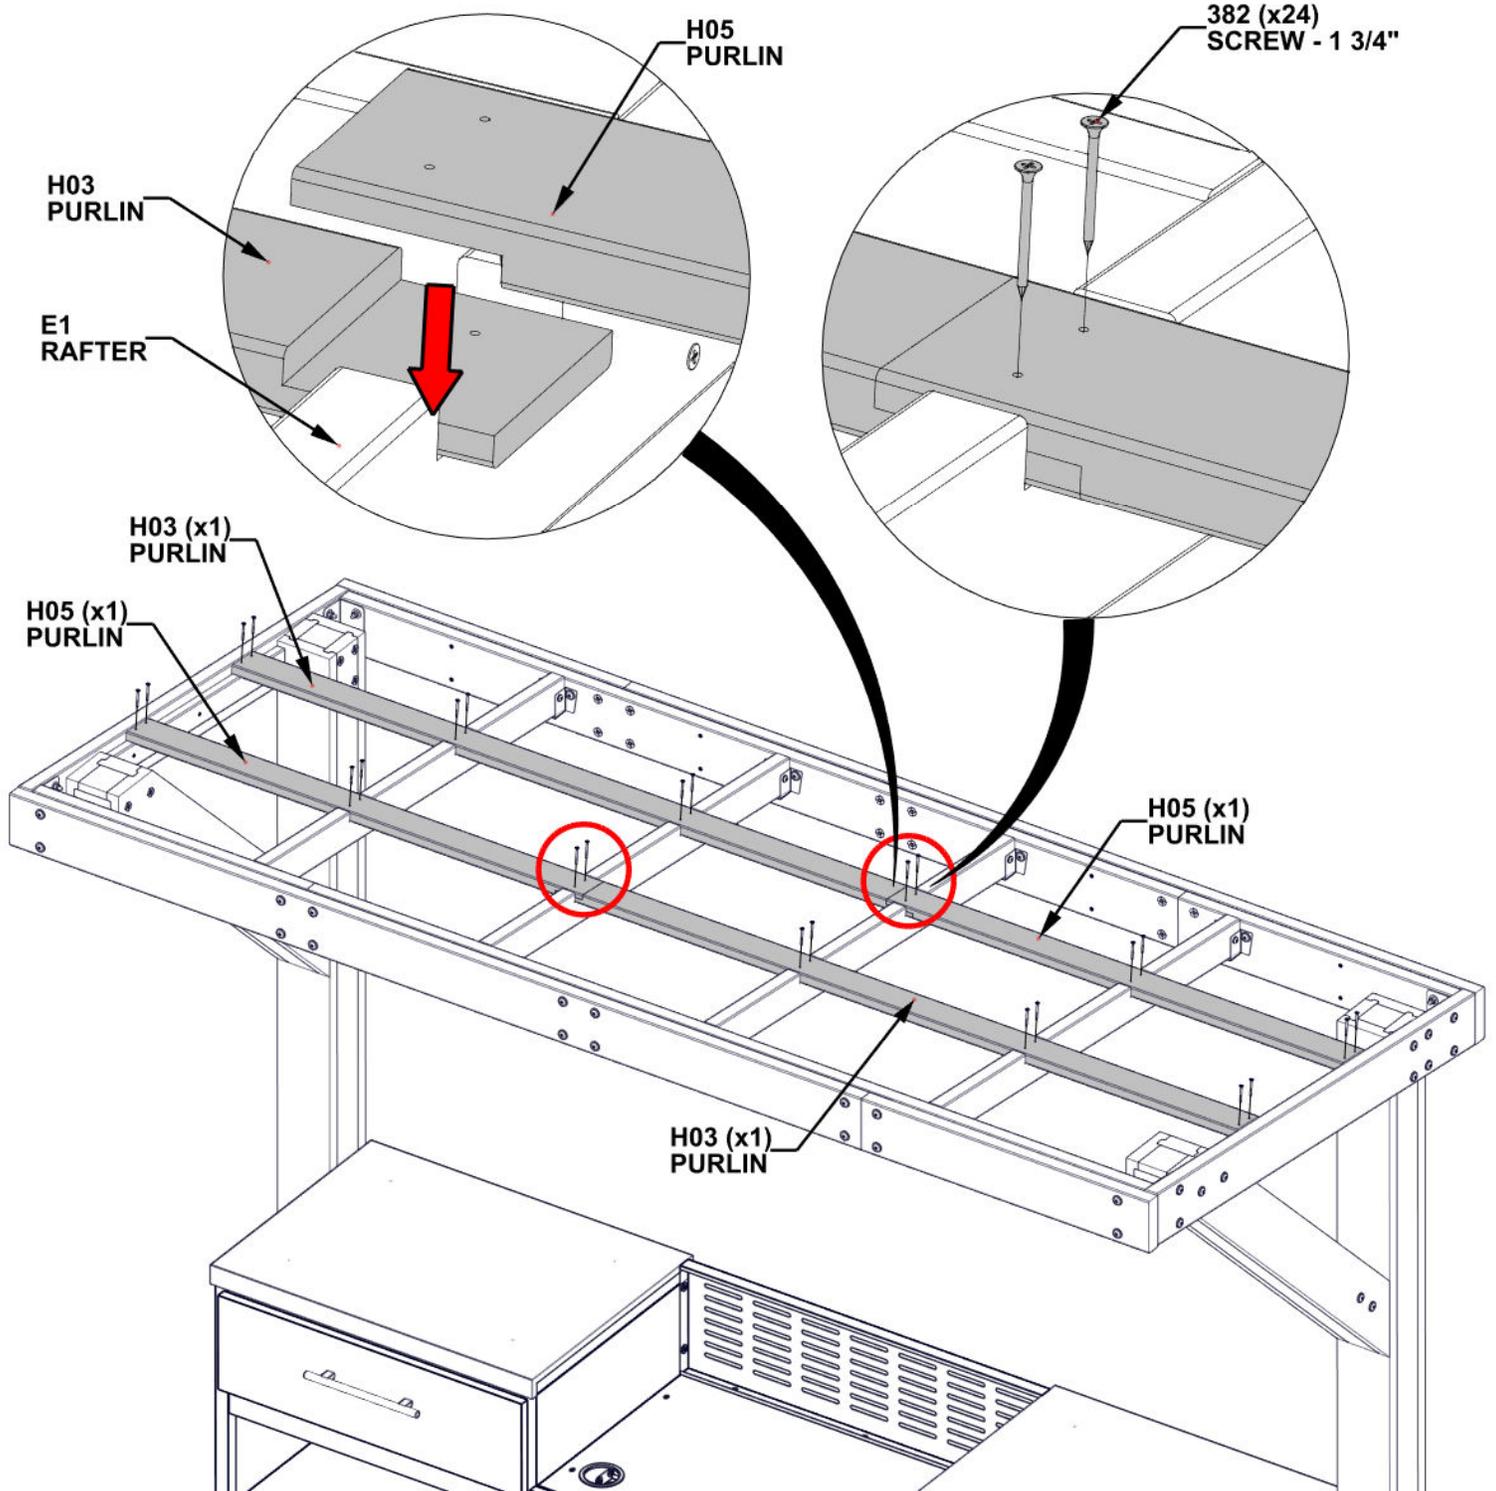


STEP 44 - ROOF ASSEMBLY

Qty	PartNo	Description
6	H101117	SCREW WOODGRIP 10-16x3/4" BLK



4315 29GA SHEETING - A4M04315
(x1) 0.02x18 7/8"x52 1/2" (0.5x480x1334)

- REMOVE PROTECTIVE FILM.
- STARTING AT THE RIGHT SIDE AND WORKING TO THE LEFT.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

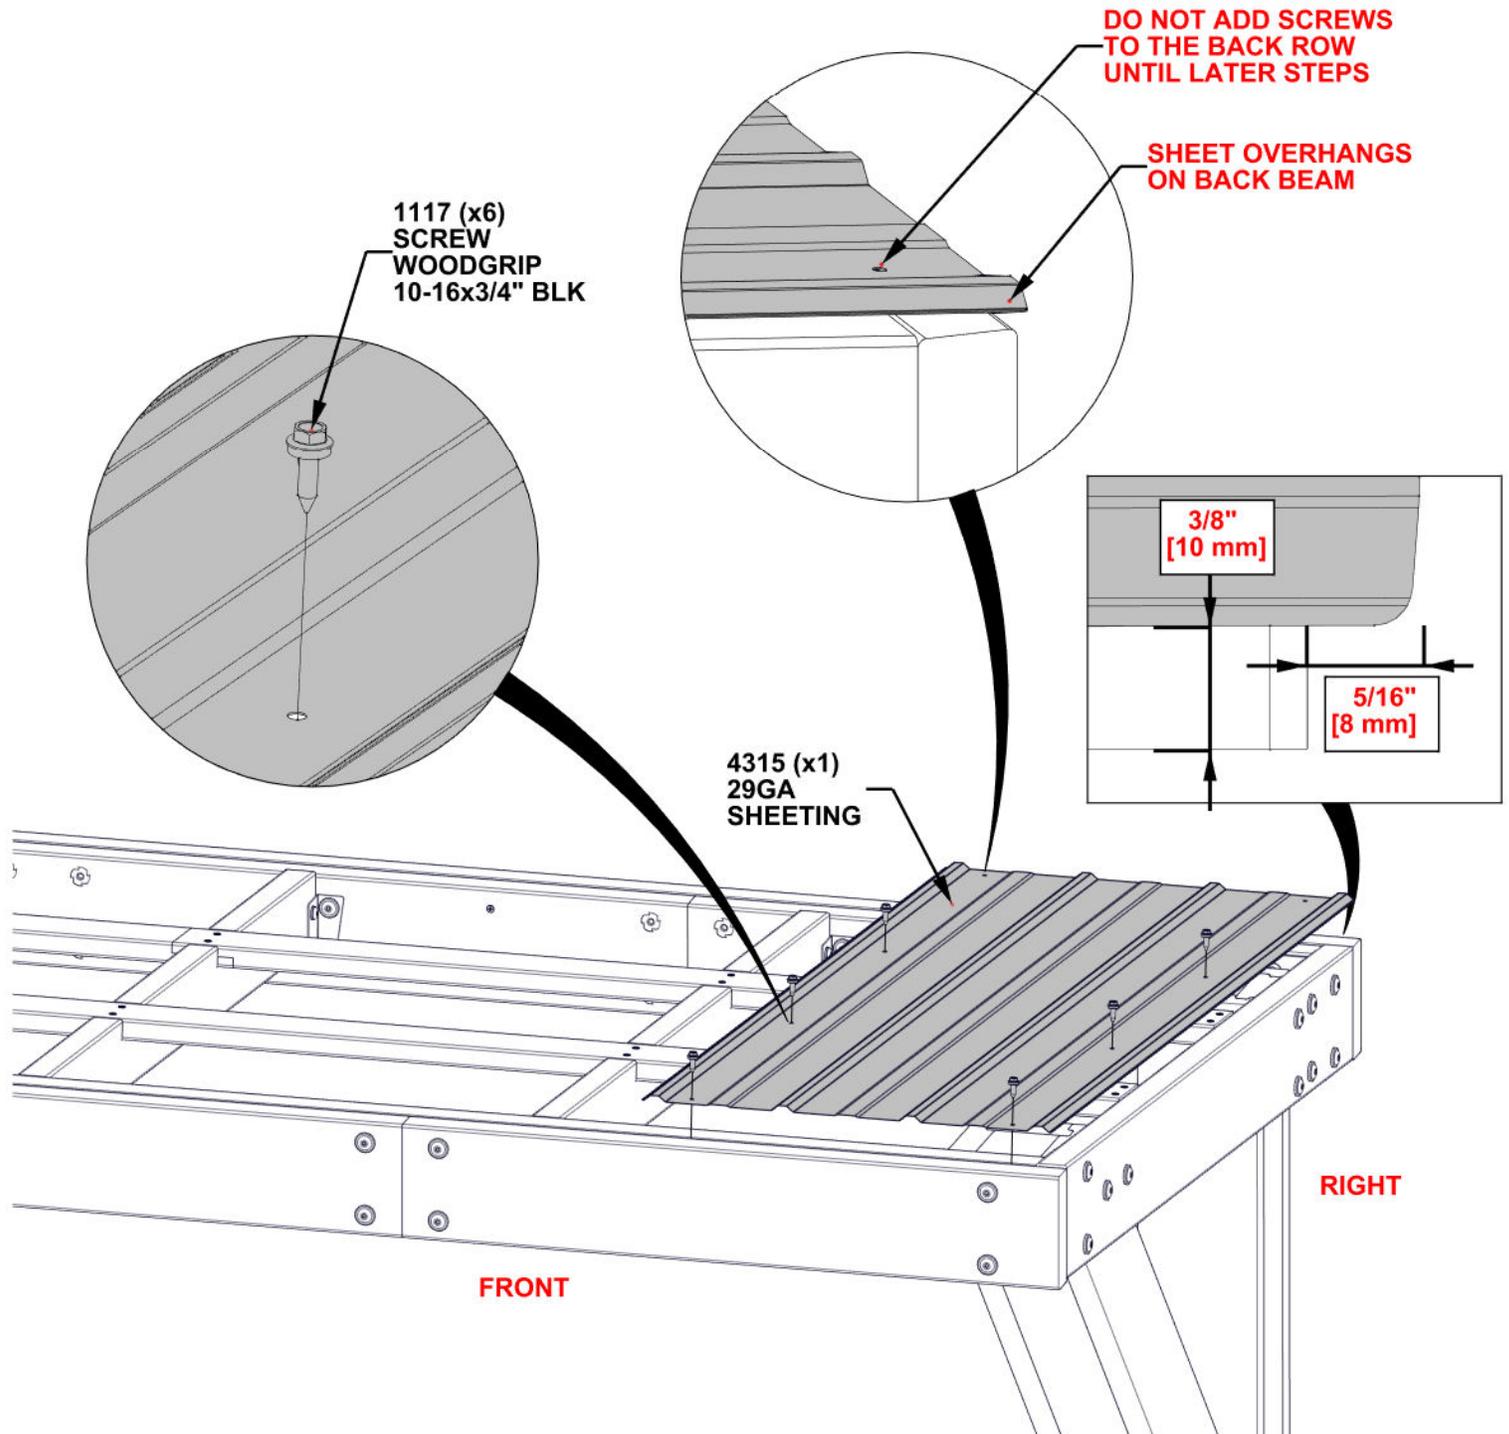


STEP 45 - ROOF ASSEMBLY

Qty	PartNo	Description
6	H101117	SCREW WOODGRIP 10-16x3/4" BLK



4315 29GA SHEETING - A4M04315
(x1) 0.02x18 7/8"x52 1/2" (0.5x480x1334)

- REMOVE PROTECTIVE FILM.
- STARTING AT THE RIGHT SIDE AND WORKING TO THE LEFT.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

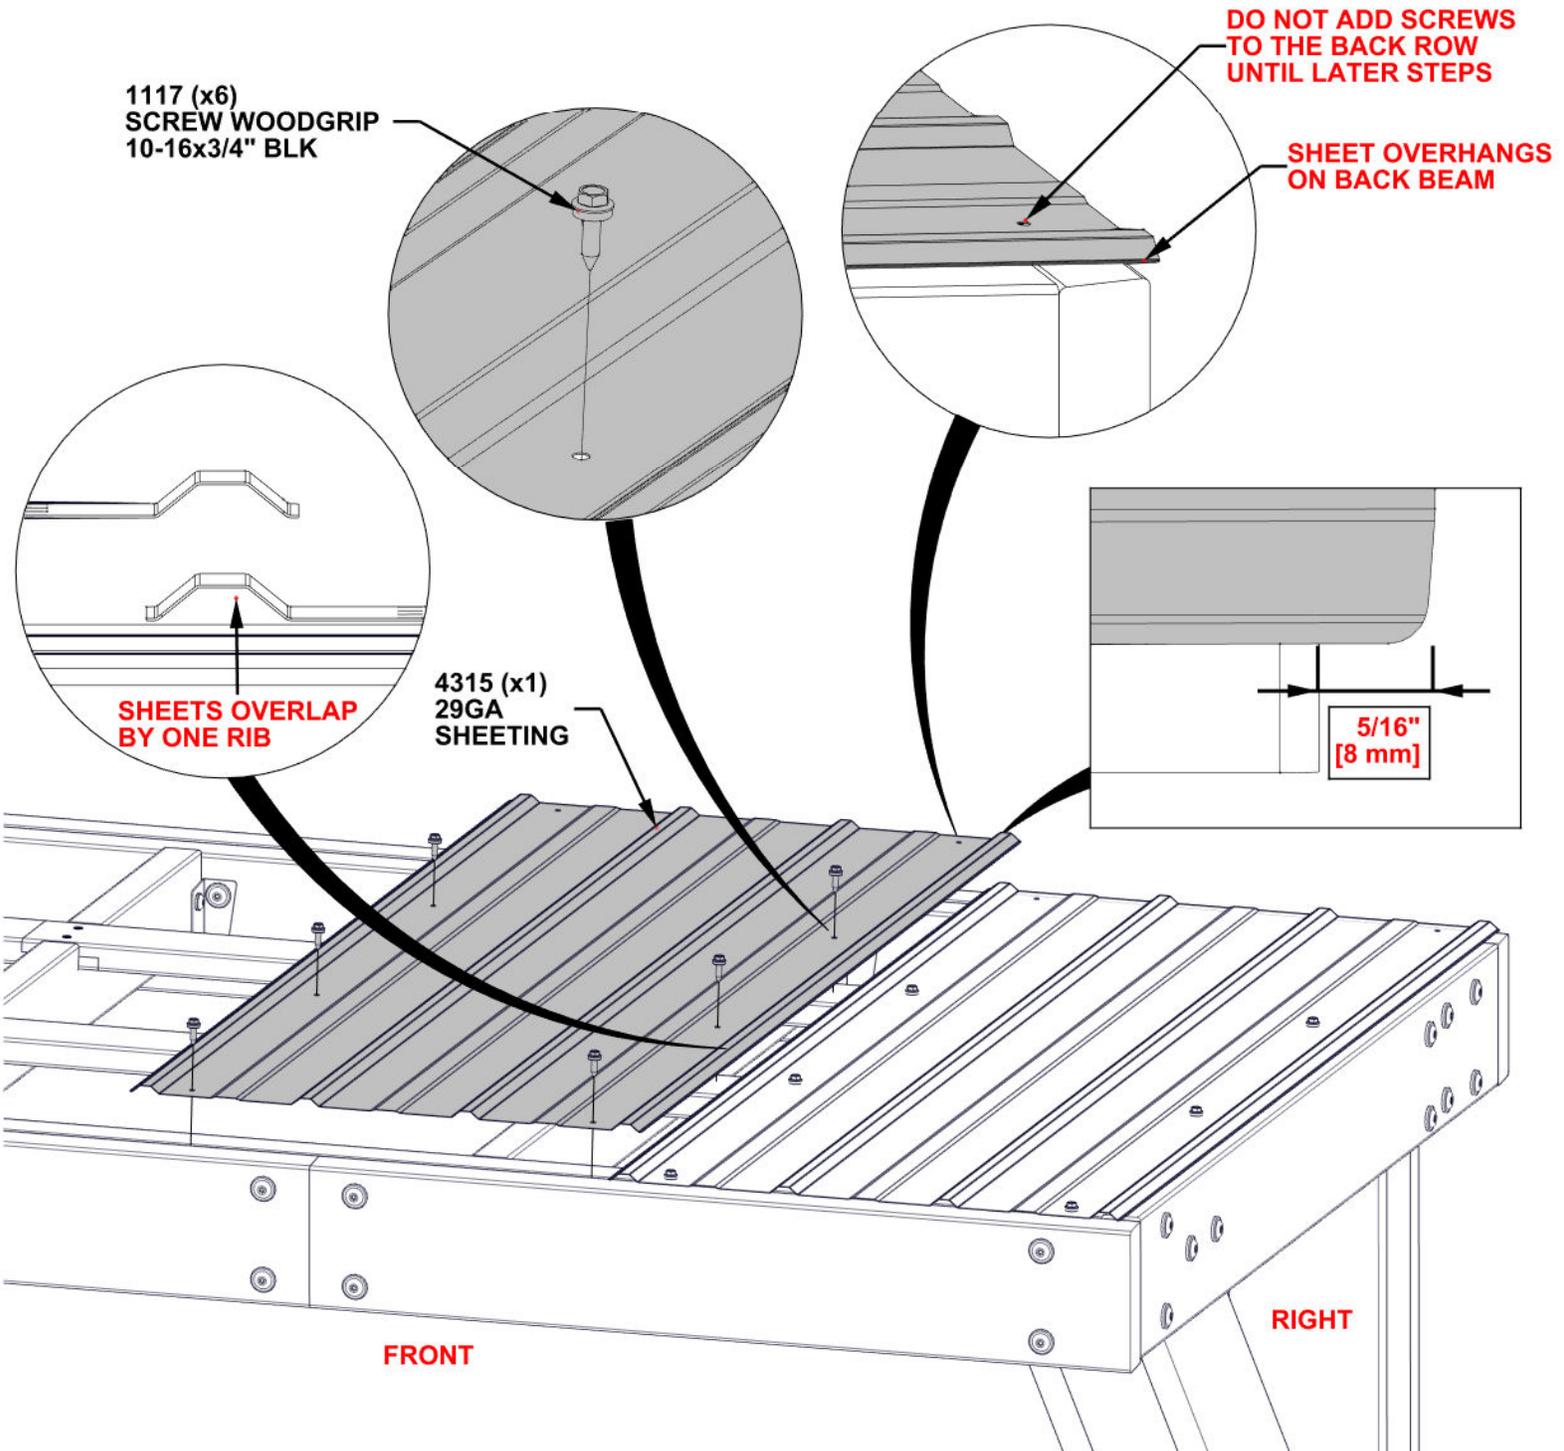


STEP 46 - ROOF ASSEMBLY

Qty	PartNo	Description
12	H101117	SCREW WOODGRIP 10-16x3/4" BLK



4315 29GA SHEETING - A4M04315
(x1) 0.02x18 7/8"x52 1/2" (0.5x480x1334)


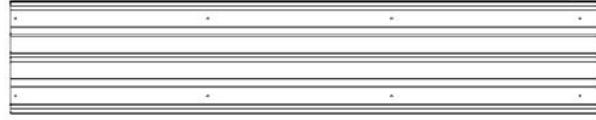


4649 29GA SHEETING - A4M04649
(x1) 1/4"x13"x52 1/2" (0.5x330x1334)

- REMOVE PROTECTIVE FILM.
- STARTING AT THE RIGHT SIDE AND WORKING TO THE LEFT.
- ATTACH AND FULLY TIGHTEN ALL SCREWS ON EACH ROOF SHEET BEFORE ATTACHING THE NEXT ONE. THIS MAKES IT POSSIBLE TO REACH ALL THE SCREWS WITHOUT GETTING ON THE ROOF.


- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

1117 (x12)
SCREW WOODGRIP
10-16x3/4" BLK

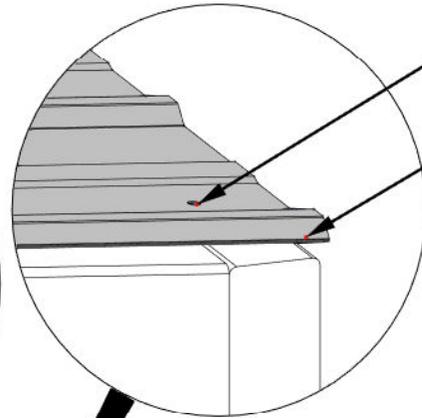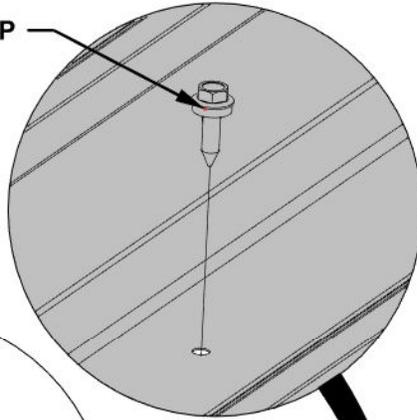

DO NOT ADD SCREWS TO THE BACK ROW UNTIL LATER STEPS


SHEET OVERHANGS ON BACK BEAM

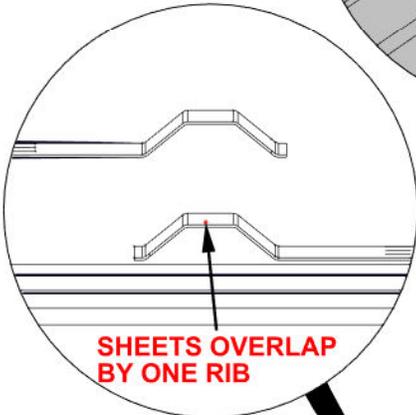


SHEETS OVERLAP BY ONE RIB

4649 (x1)
29GA
SHEETING

4315 (x1)
29GA
SHEETING

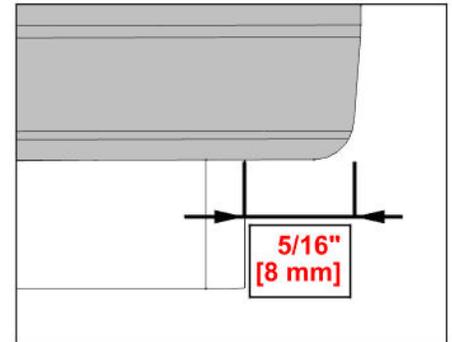

5/16"
[8 mm]

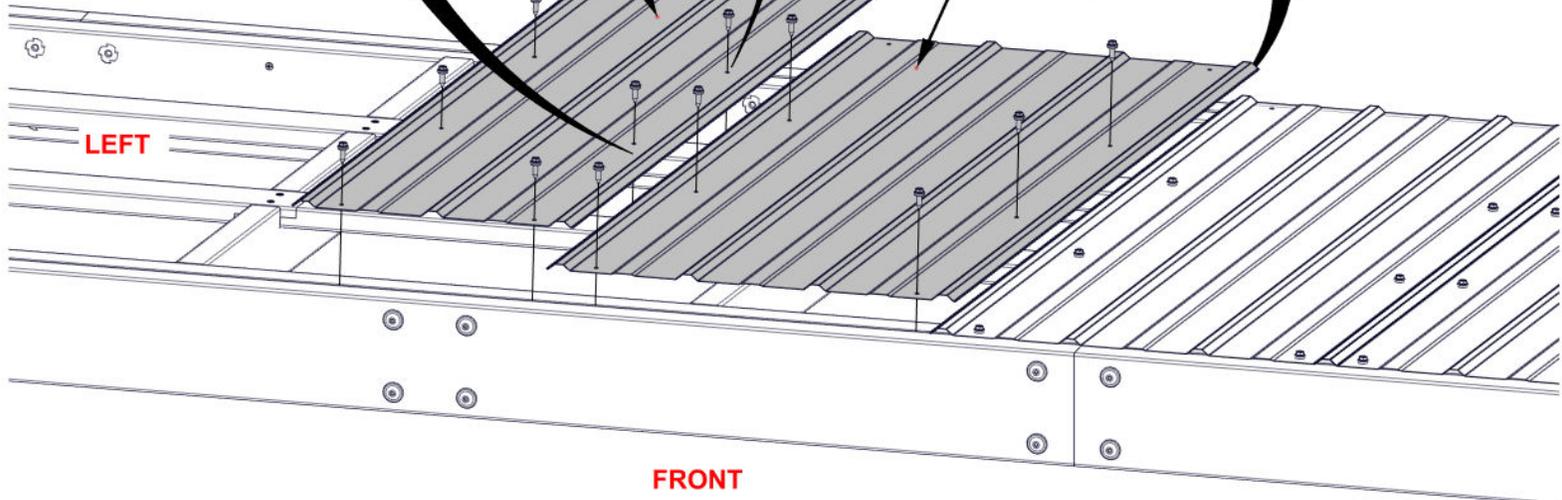


STEP 47 - ROOF ASSEMBLY

Qty	PartNo	Description
18	H101117	SCREW WOODGRIP 10-16x3/4" BLK




4315 29GA SHEETING - A4M04315
(x3) 0.02x18 7/8"x52 1/2" (0.5x480x1334)

- REMOVE PROTECTIVE FILM.
- STARTING AT THE RIGHT SIDE AND WORKING TO THE LEFT.
- ATTACH AND FULLY TIGHTEN ALL SCREWS ON EACH ROOF SHEET BEFORE ATTACHING THE NEXT ONE. THIS MAKES IT POSSIBLE TO REACH ALL THE SCREWS WITHOUT GETTING ON THE ROOF.
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

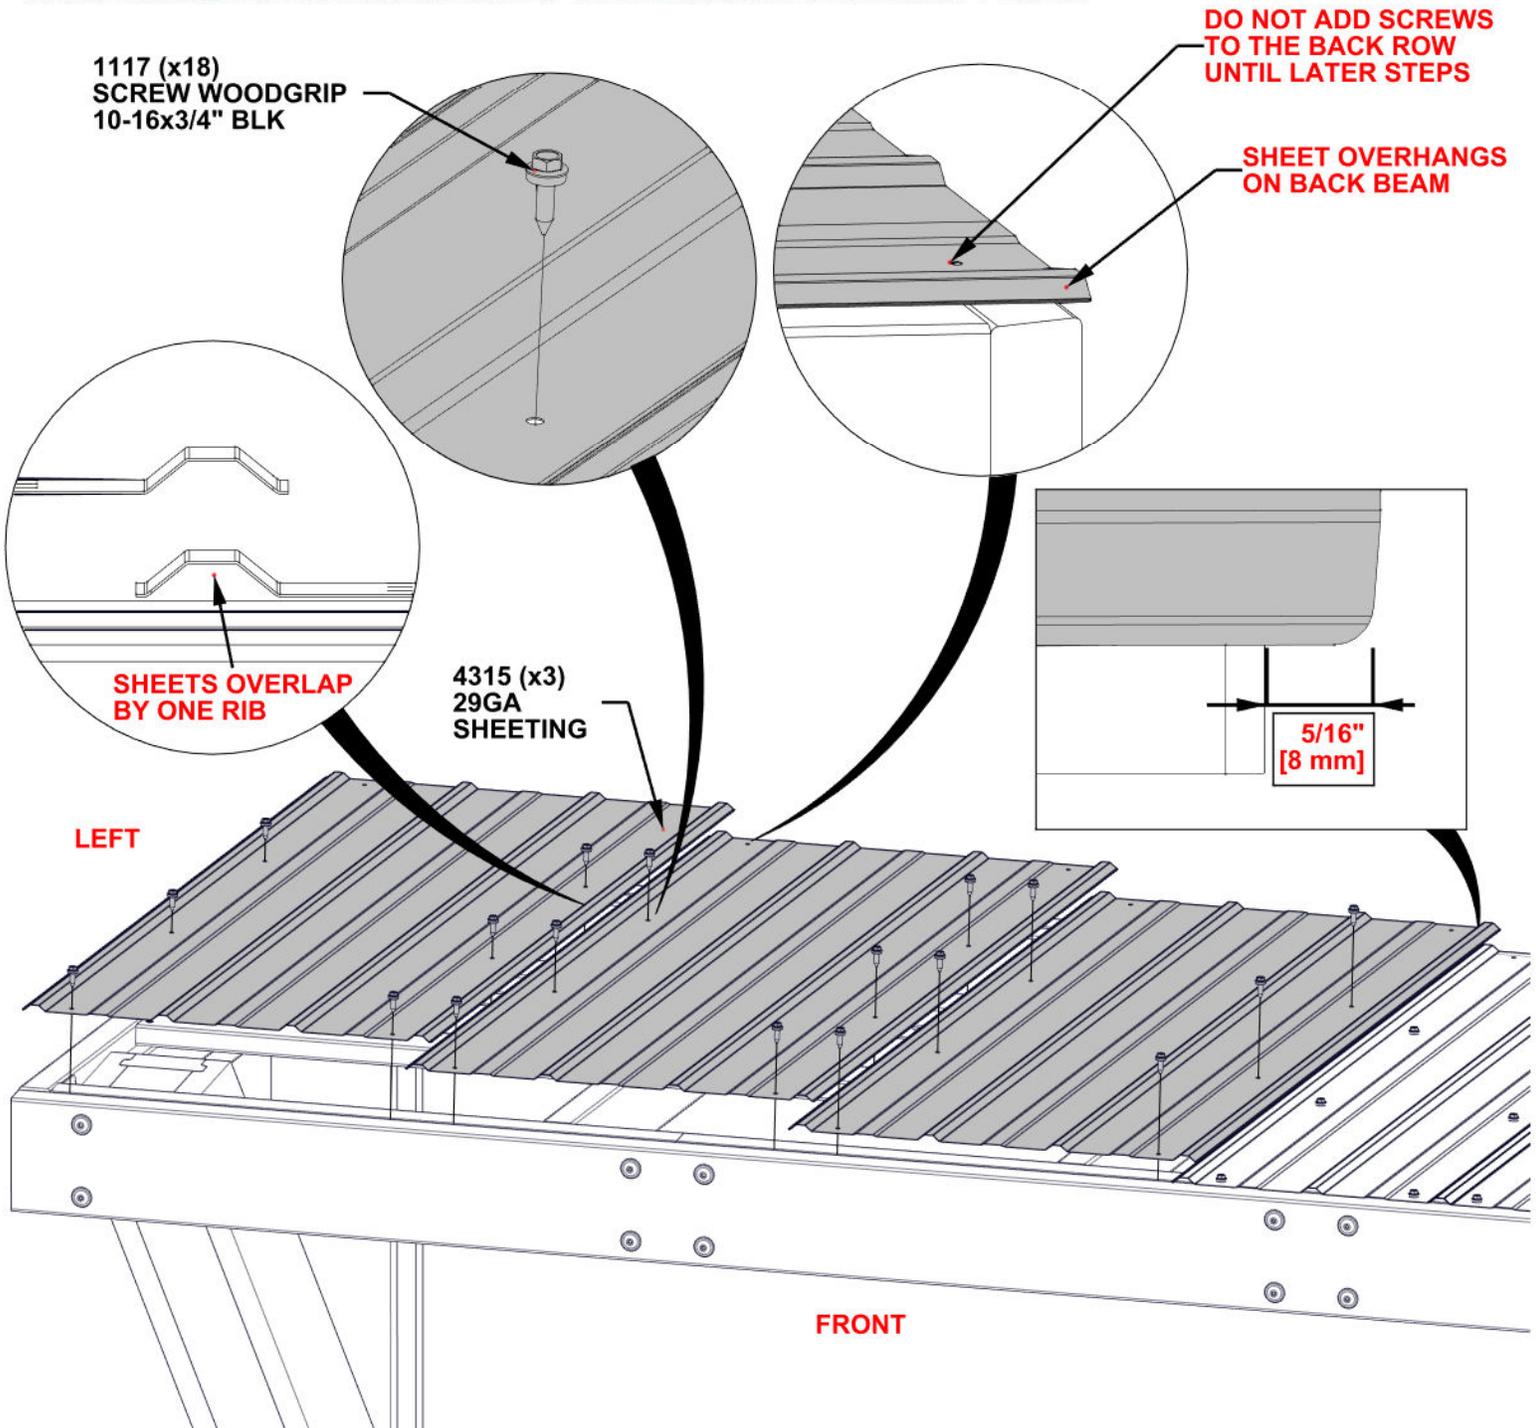

STEP 48A - ROOF ASSEMBLY

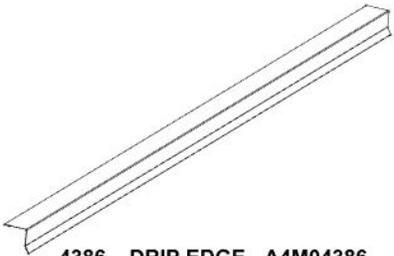


4386 DRIP EDGE - A4M04386
(x2) 1 3/4"x2 1/16"x59 13/16" (44x52x1520)




5428 DRIP EDGE SPLICE - A4M05428
(x1) 1 7/8"x2 3/16"x3 15/16" (48x55x100)

- REMOVE PROTECTIVE FILM.
- ATTACH DRIP EDGE TRIM (5428) ONTO DRIP EDGE (4386) AS SHOWN BELOW.

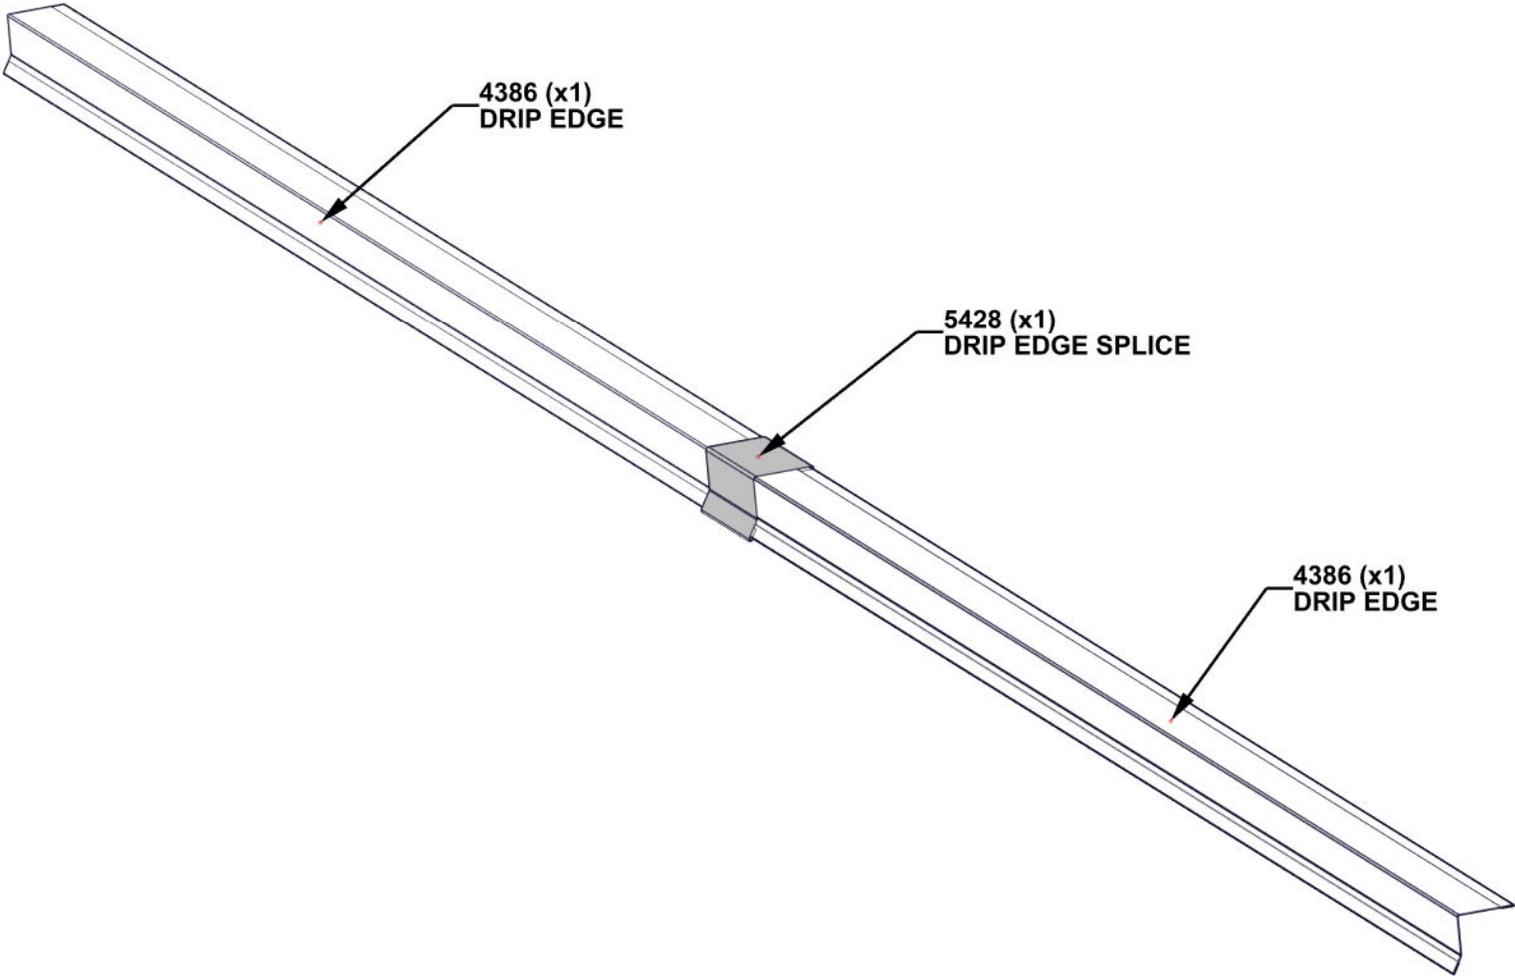

STEP 48B - ROOF ASSEMBLY


Qty	PartNo	Description
14	H101117	SCREW WOODGRIP 10-16x3/4" BLK

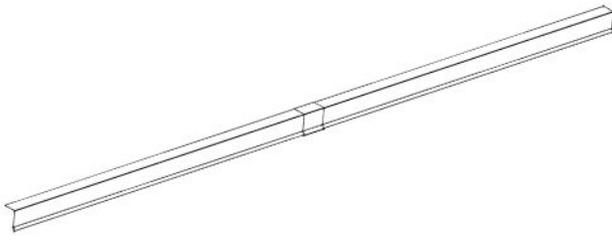

ROOF ASSEMBLY FROM STEP 48A


- ORIENT DRIP EDGE AS SHOWN BELOW.

- DUE TO MULTIPLE LAYERS OF METAL ON THE DRIP EDGE, IT IS RECOMMENDED THAT A 1/8" (3mm) DRILL BIT BE USED TO CREATE STARTER HOLES.
- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

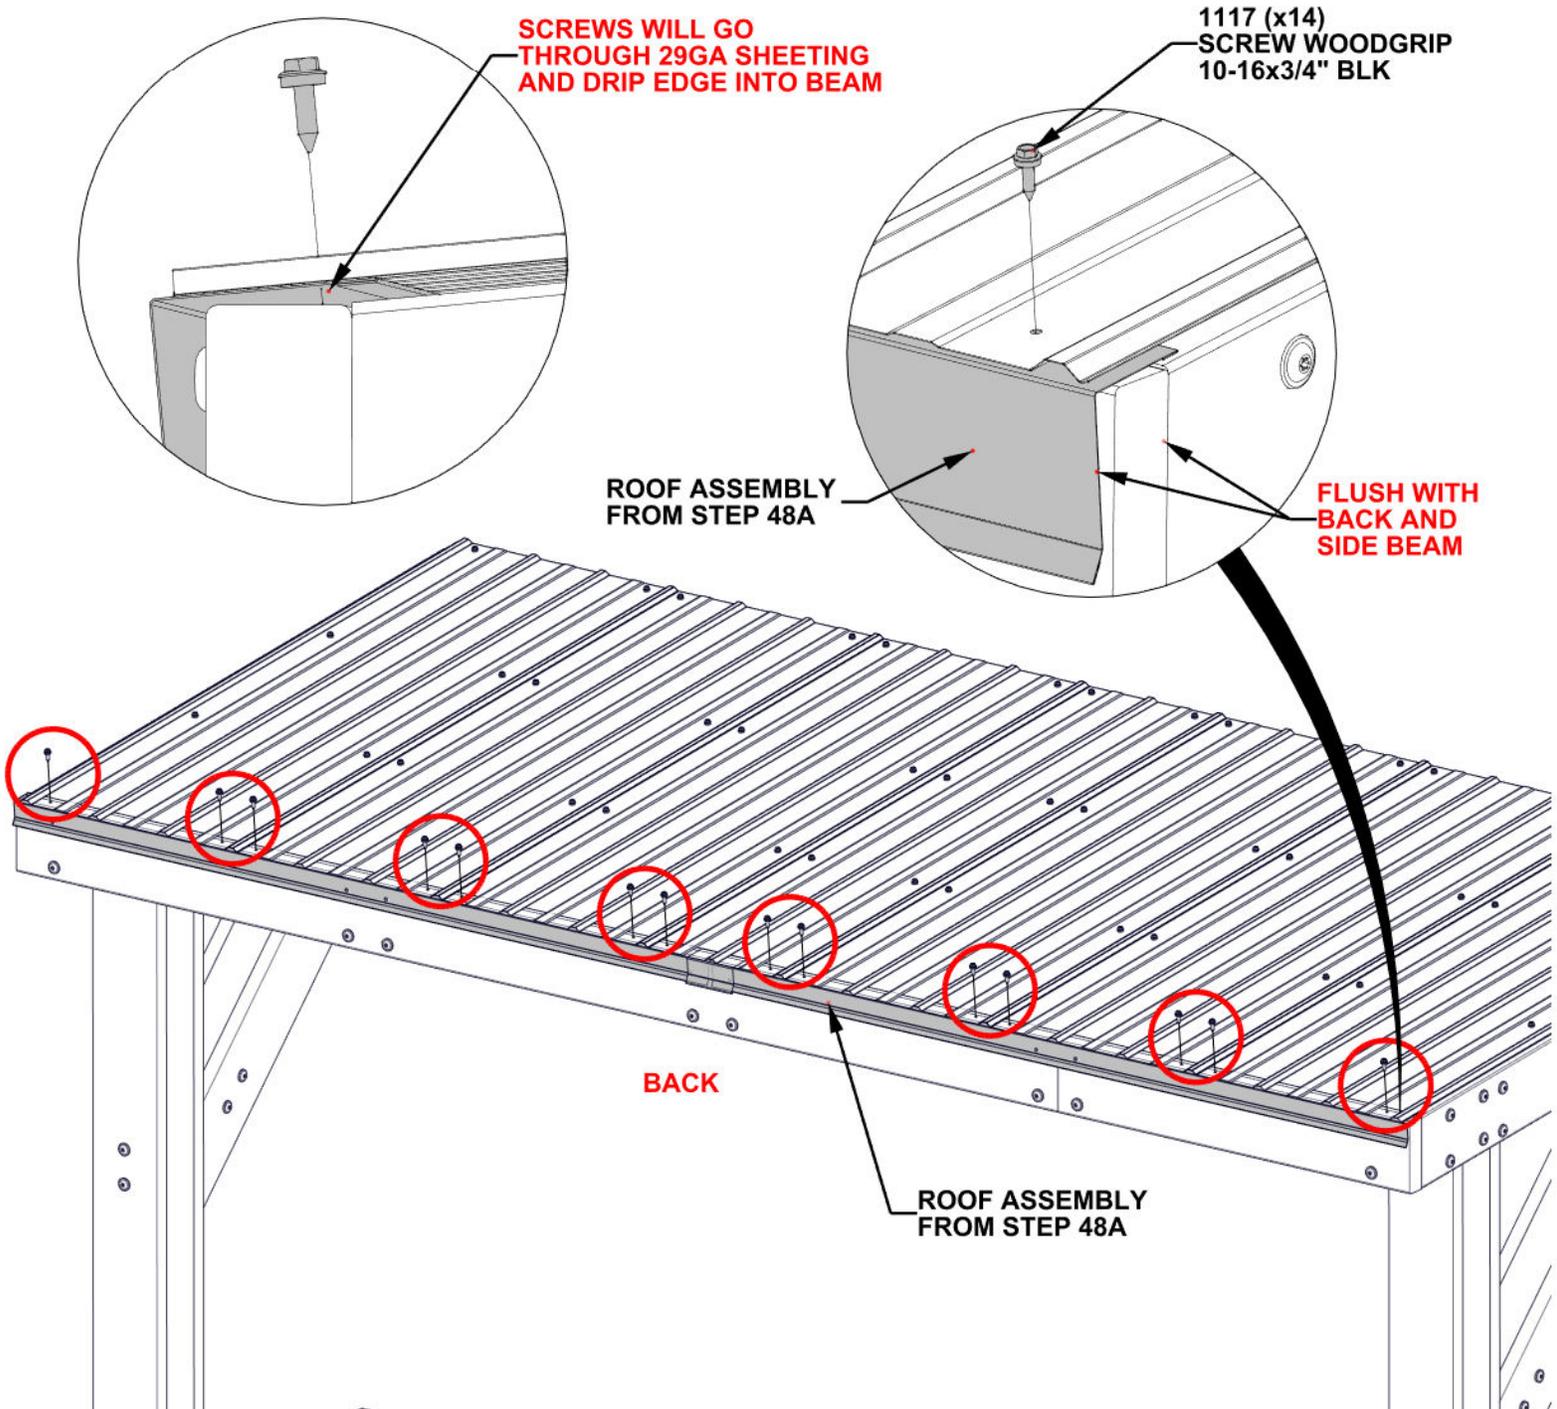


STEP 49 - ROOF ASSEMBLY

Qty	PartNo	Description
6	H101116	SCREW SELF TAPPING 1/4x1 BLK

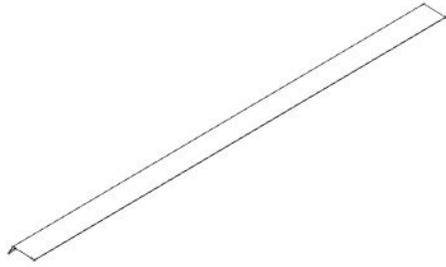


4383 ROOF EDGE TRIM - A4M04383
(x2) 1/64"x2 7/8"x51 7/16" (0.34x74x1306)


- REMOVE PROTECTIVE FILM.
- ATTACH ROOF EDGE TRIM (4383) ONTO 29GA SHEETING AS SHOWN BELOW.
- STARTING AT THE TOP, ALIGN SCREWS WITH SHEET SCREWS.
- **DUE TO MULTIPLE LAYERS OF METAL ON THE ROOF EDGE TRIM, IT IS RECOMMENDED THAT A 1/8" (3mm) DRILL BIT BE USED TO CREATE STARTER HOLES.**
- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**

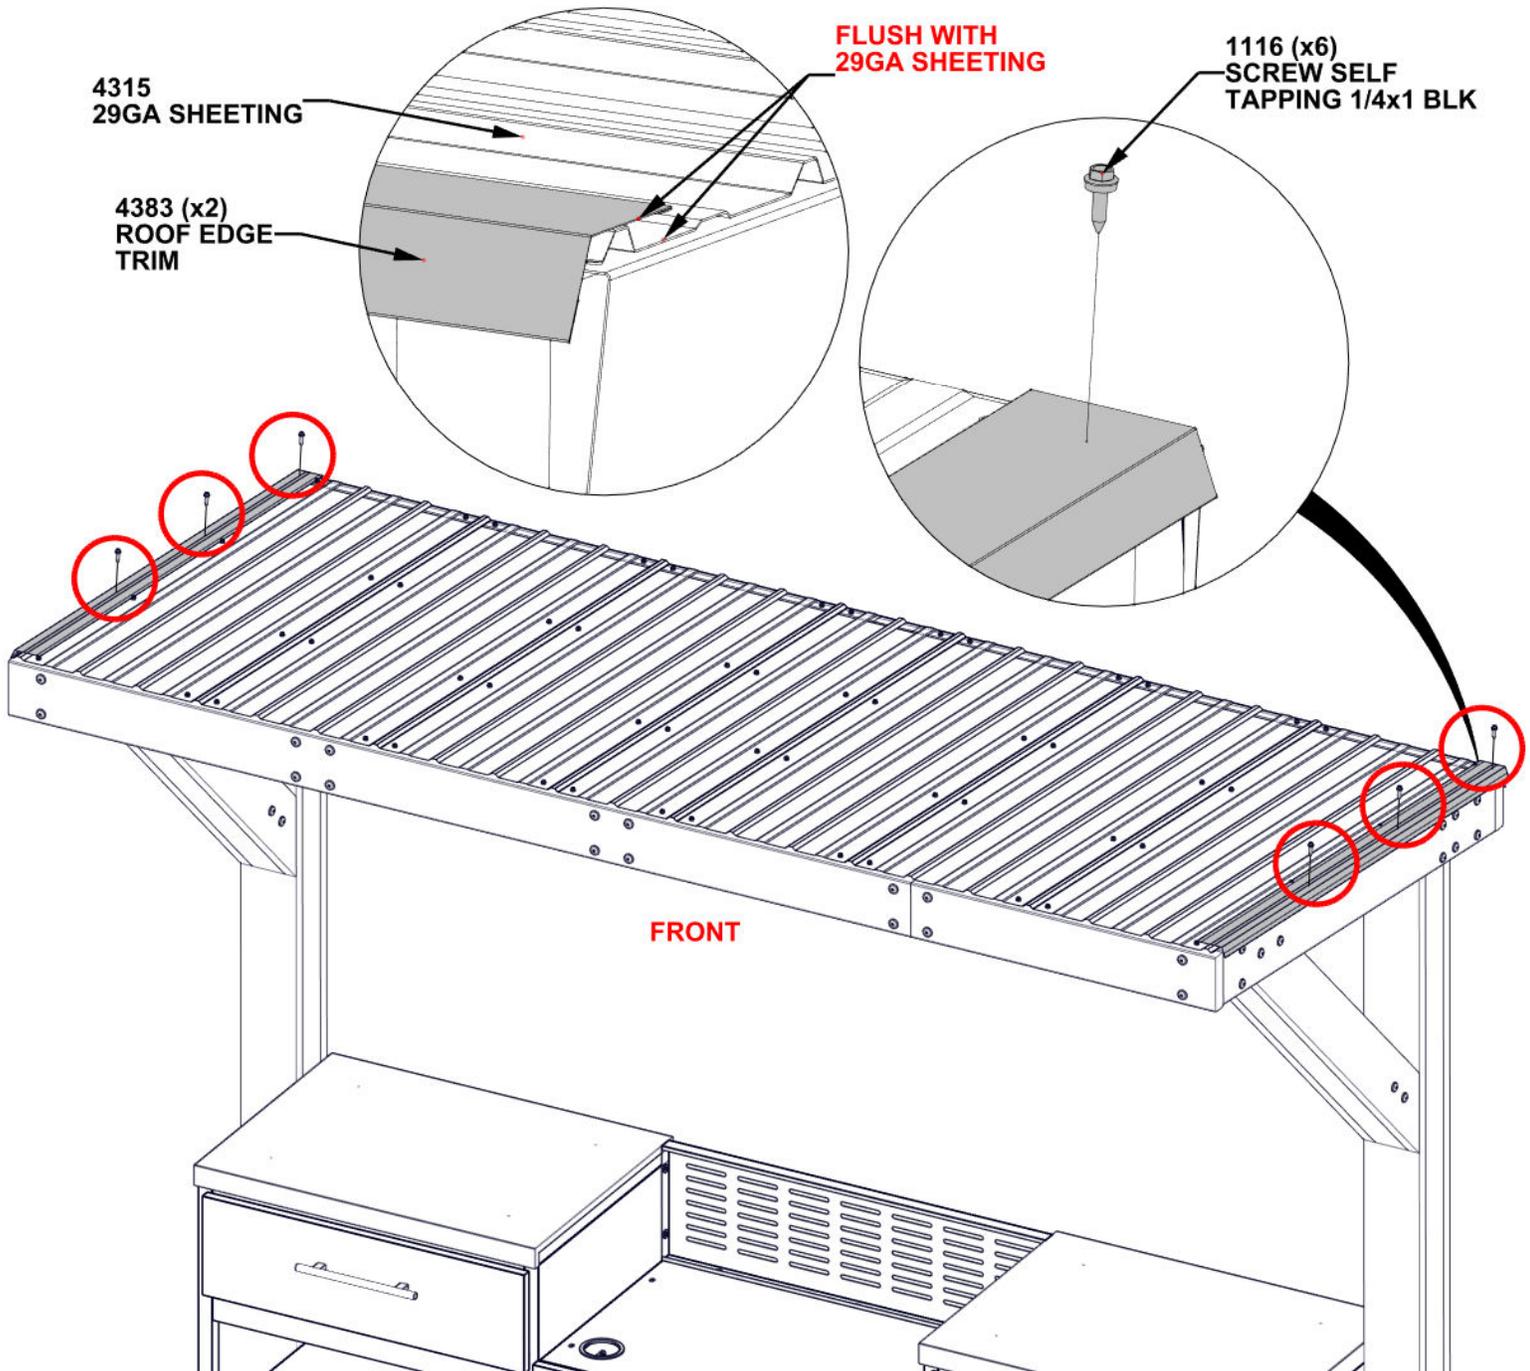


STEP 50A - ROOF ASSEMBLY

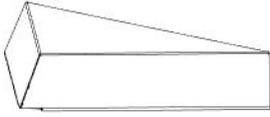

696 CORNER SPLICE TRIM - A4M02696
(x2) 1 1/8"x1 1/8"x5 1/8" (28x28x131)

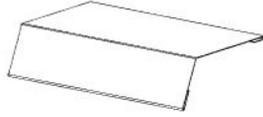


4385 ROOF EDGE TRIM SPLICE - A4M04385
(x1) 1/64"x3"x3 15/16" (1x76x100)

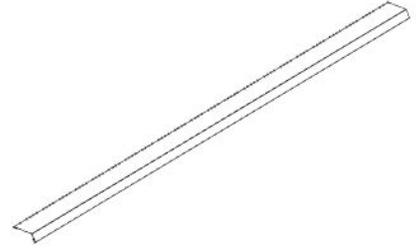

4384 ROOF EDGE TRIM - A4M04384
(x2) 1/64"x2 7/8"x58 1/16" (1x74x1474)


- REMOVE PROTECTIVE FILM.
- WITH ONE EXTRA PERSON, ORIENT 696, 4384 AND 4385 AS BELOW SHOWN.

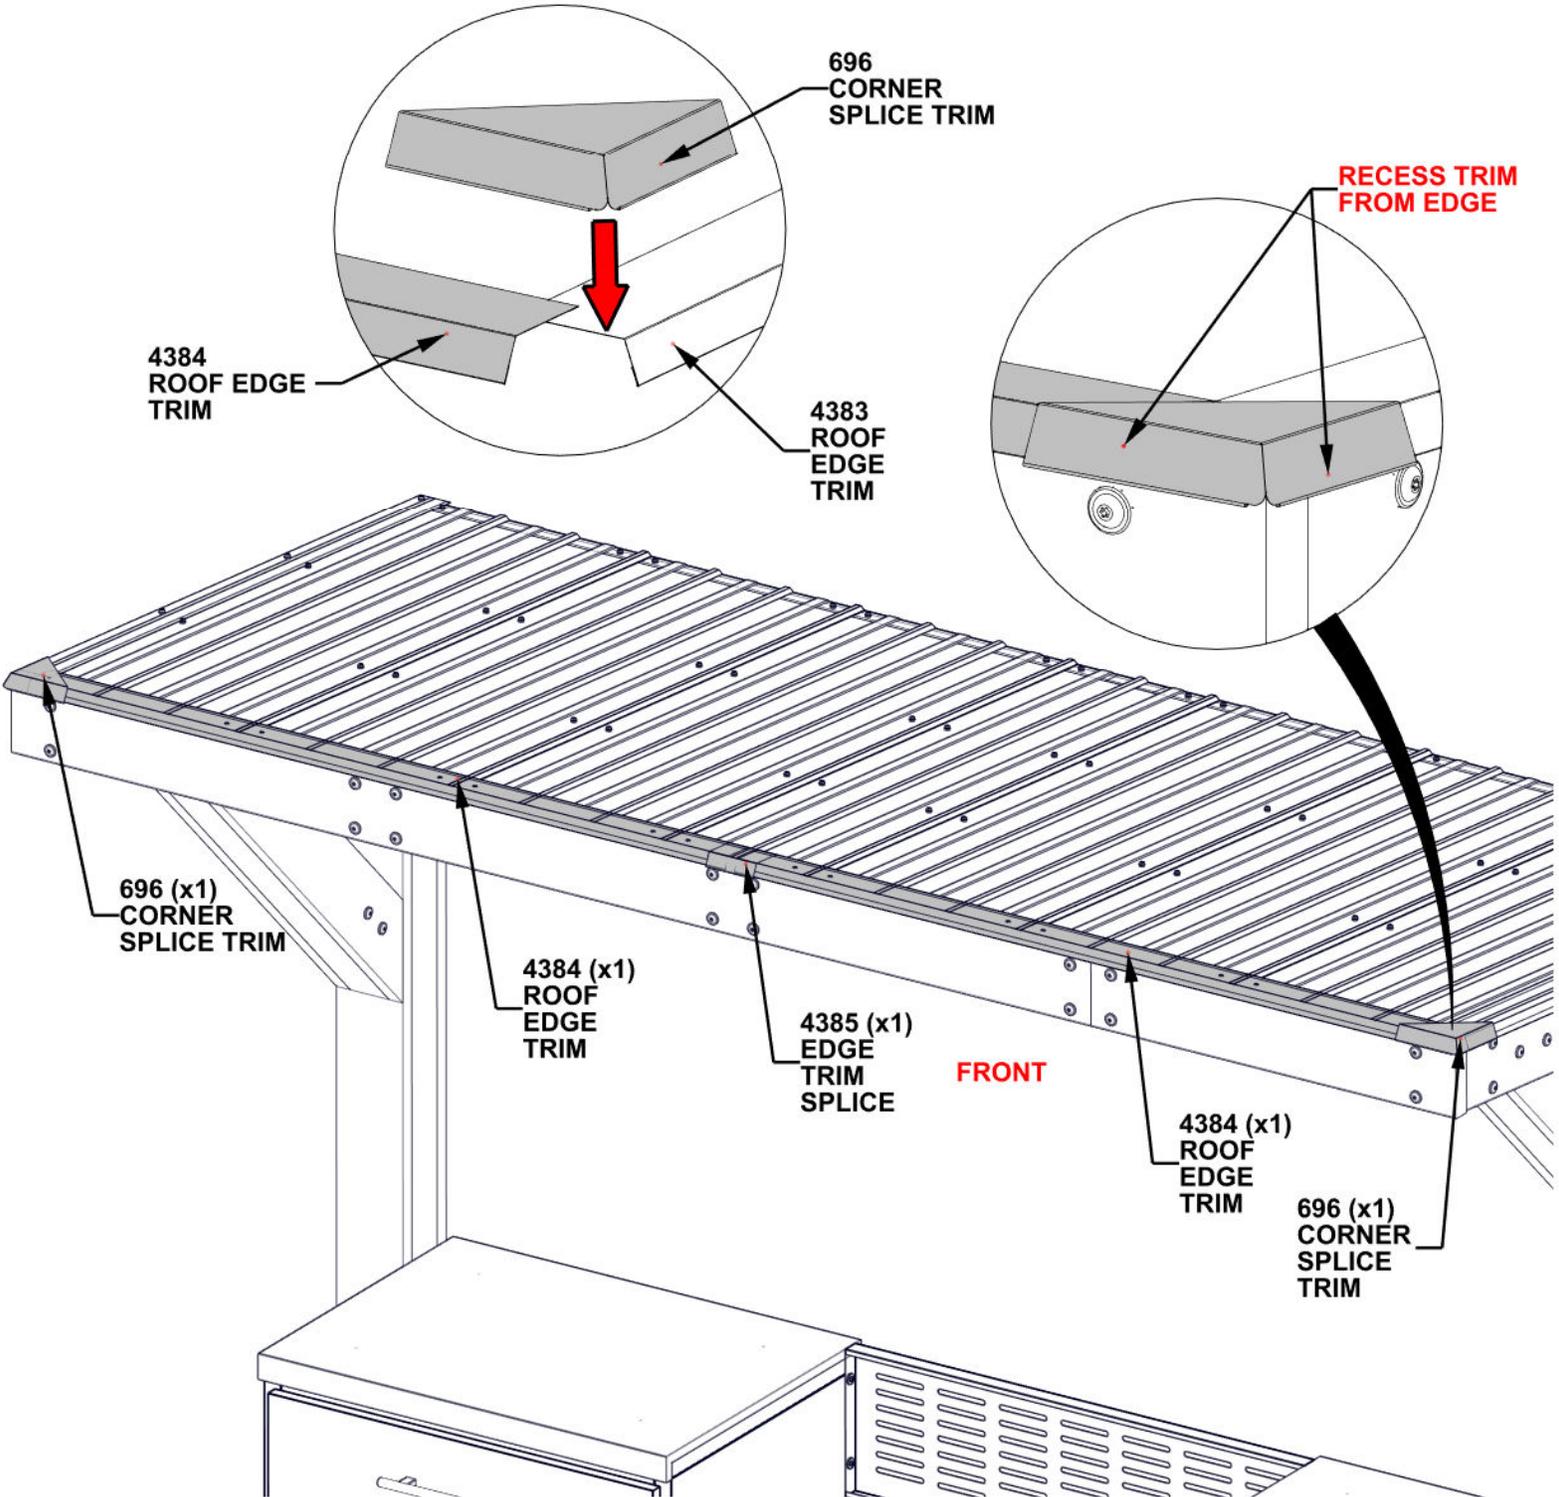


STEP 50B - ROOF ASSEMBLY

Qty	PartNo	Description
14	H101116	SCREW SELF TAPPING 1/4x1 BLK

- STARTING IN THE FRONT CORNER, ATTACH SCREWS SPACING EVERY OTHER RIB.
- DUE TO MULTIPLE LAYERS OF METAL ON THE TRIM SPLICE, IT IS RECOMMENDED THAT A 1/8" (3mm) DRILL BIT BE USED TO CREATE STARTER HOLES.
- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

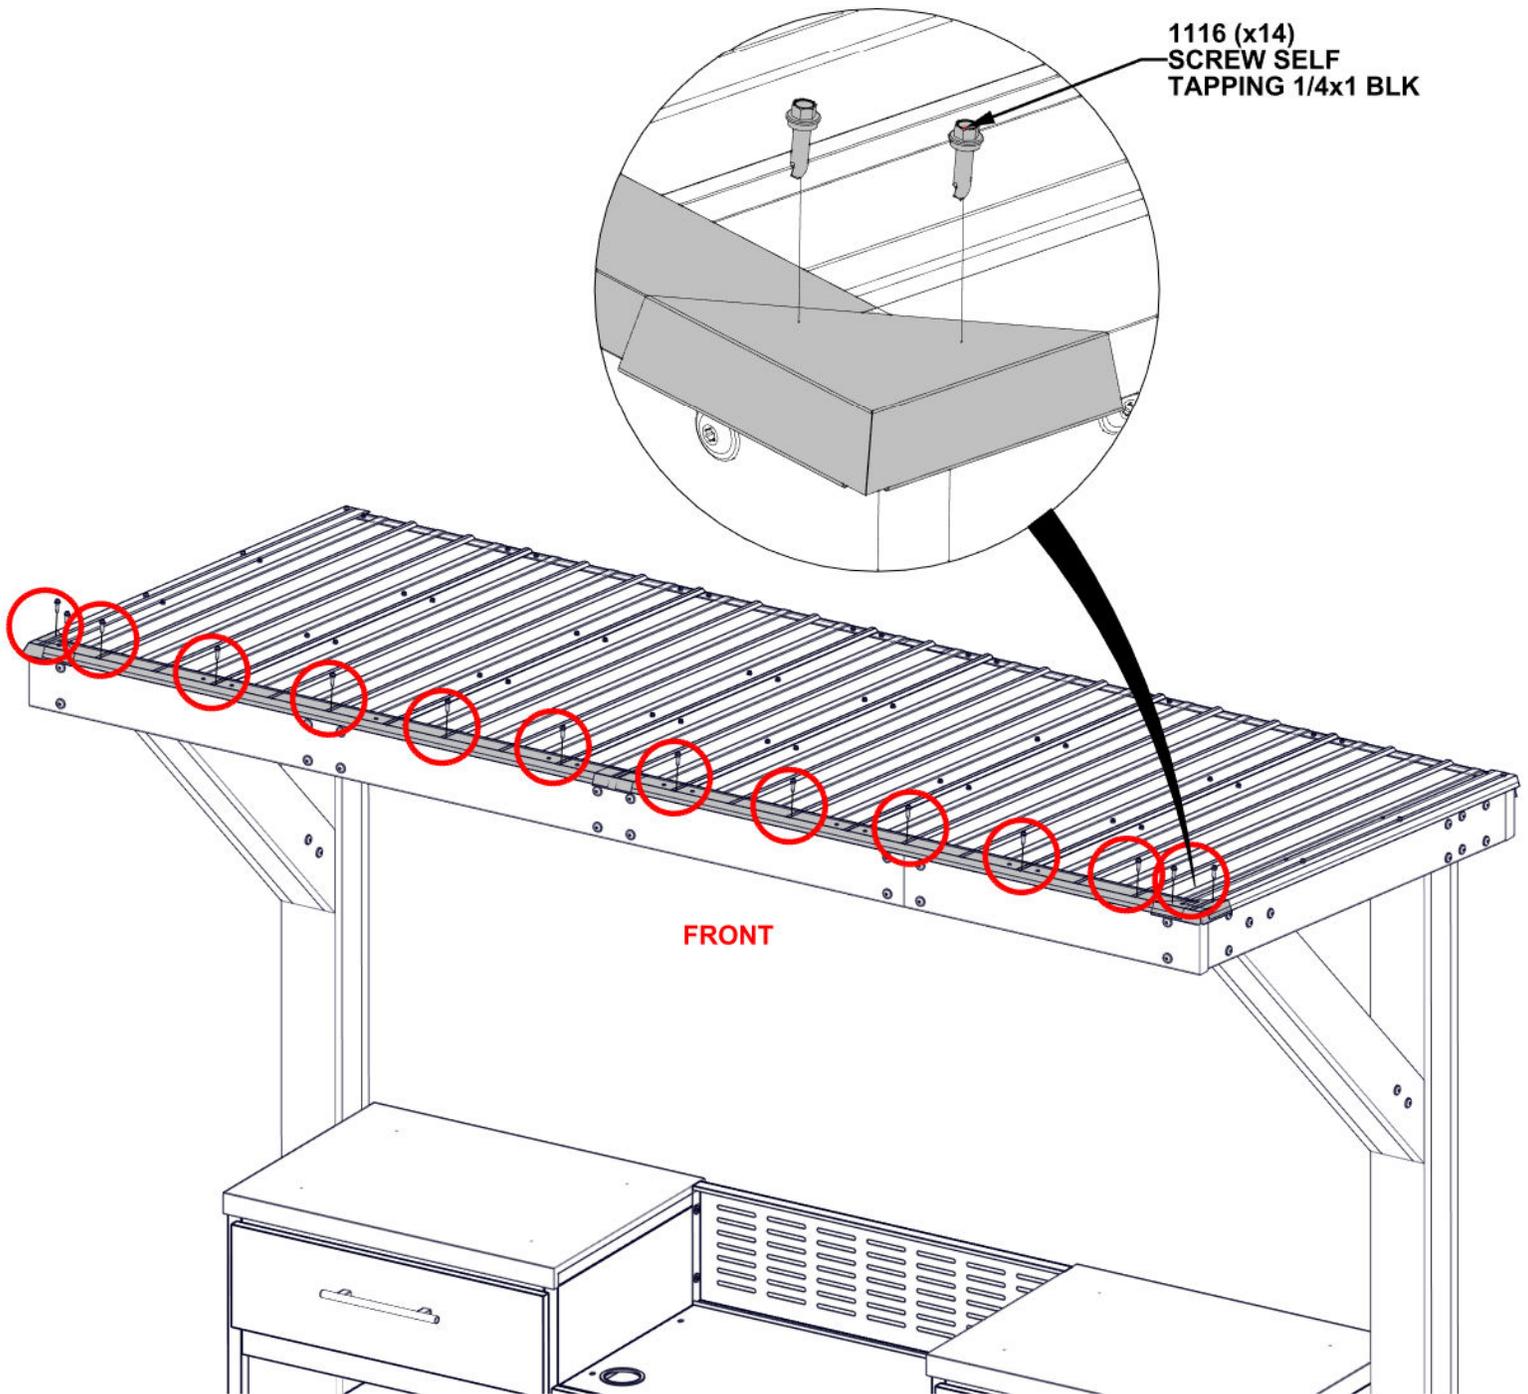


COOK STATION APPLIANCE INSTALLATION

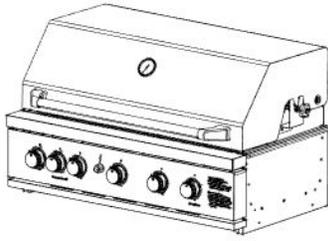


9240025 OUTDOOR KITCHEN GRILL KIT
(x1)

OR

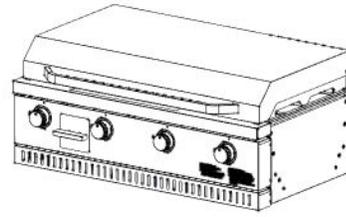


9240742 OUTDOOR KITCHEN GRIDDLE KIT
(x1)

- FOR INSTALLATION AND DETAILED INFORMATION OF THE GRILL KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE GRILL KIT.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

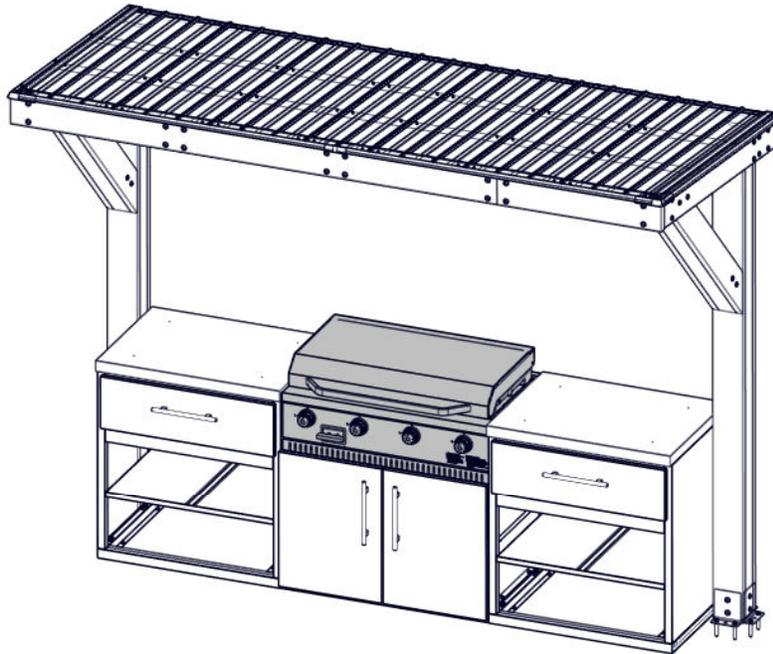

- FOR INSTALLATION AND DETAILED INFORMATION OF THE GRIDDLE KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE GRIDDLE KIT.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

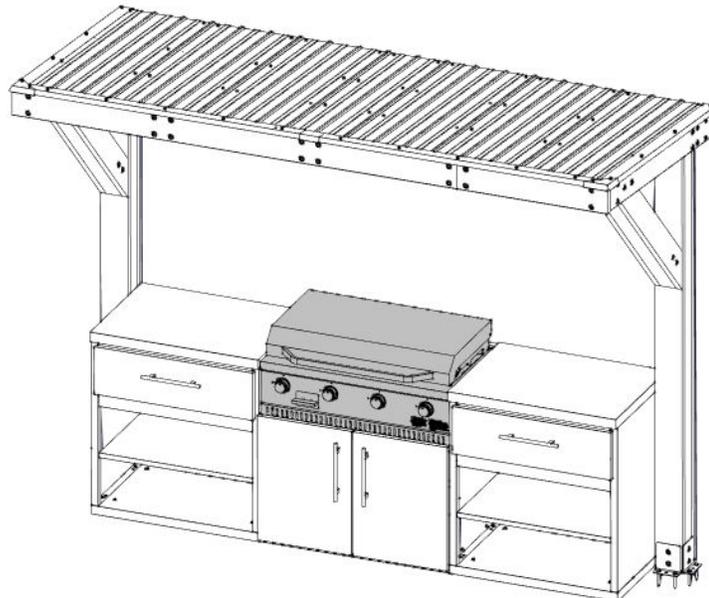


**NATURAL GAS CONVERSION KIT AVAILABLE BY CONTACTING BACKYARD DISCOVERY AT
www.backyarddiscovery.com 1-800-856-4445**

GRILL COVER INSTALLATION

- APPLIANCE COVERS WILL COME PACKAGED WITH EACH RESPECTIVE APPLIANCE.
- CABINET COVER WILL HAVE CUTOUTS FOR EACH APPLIANCE LOCATION.





- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- INSTALL CABINET COVER OVER FULLY ASSEMBLED KITCHEN PACKAGE.
NOTE: COVER SHOULD GO ON AFTER APPLIANCES ARE INSTALLED.
- INSTALL INDIVIDUAL APPLIANCE COVERS OVER EACH APPLIANCE, MAKING SURE FLAPS ARE ON THE OUTSIDE OF THE CABINET COVER, AND VELCRO STRIPS ARE FIRMLY CONNECTED.

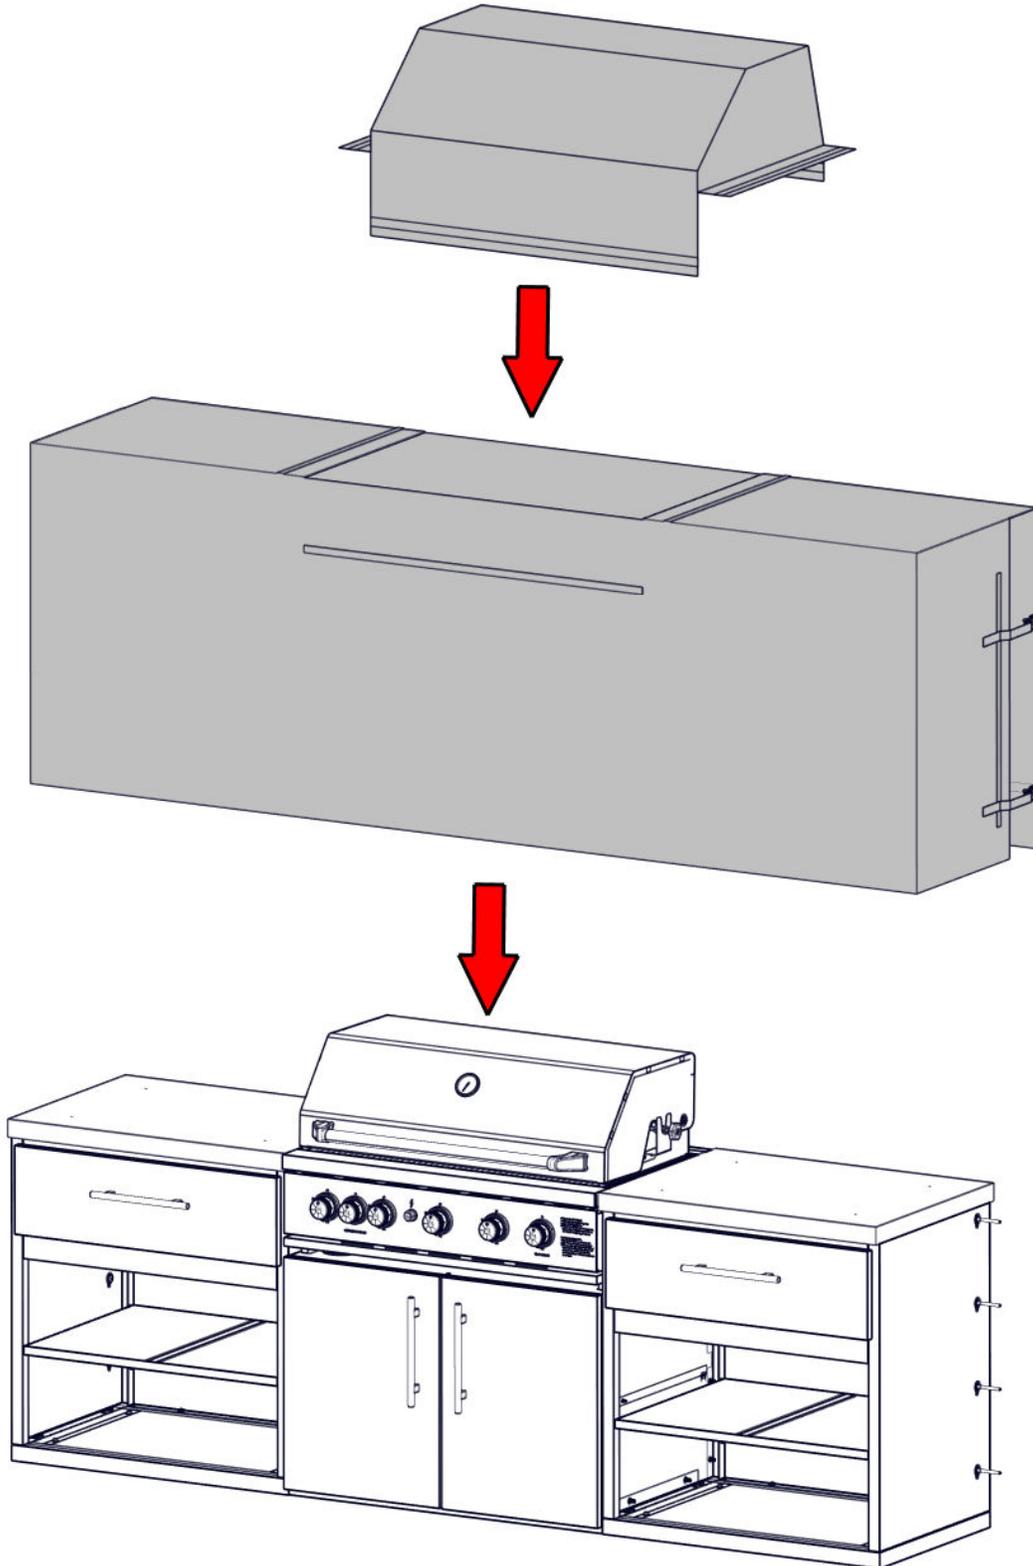


GRIDDLE COVER INSTALLATION

- APPLIANCE COVERS WILL COME PACKAGED WITH EACH RESPECTIVE APPLIANCE.
- CABINET COVER WILL HAVE CUTOUTS FOR EACH APPLIANCE LOCATION.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- INSTALL CABINET COVER OVER FULLY ASSEMBLED KITCHEN PACKAGE.
NOTE: COVER SHOULD GO ON AFTER APPLIANCES ARE INSTALLED.
- INSTALL INDIVIDUAL APPLIANCE COVERS OVER EACH APPLIANCE, MAKING SURE FLAPS ARE ON THE OUTSIDE OF THE CABINET COVER, AND VELCRO STRIPS ARE FIRMLY CONNECTED.

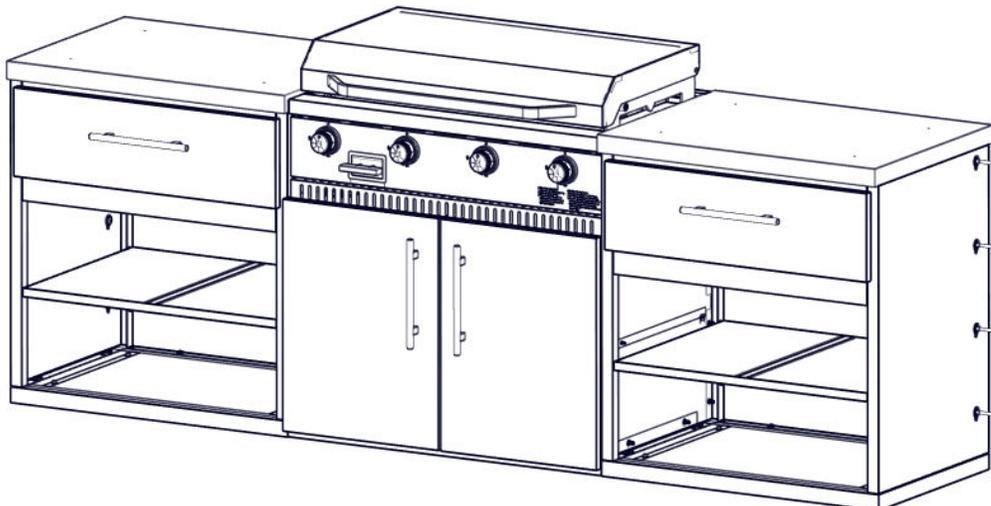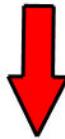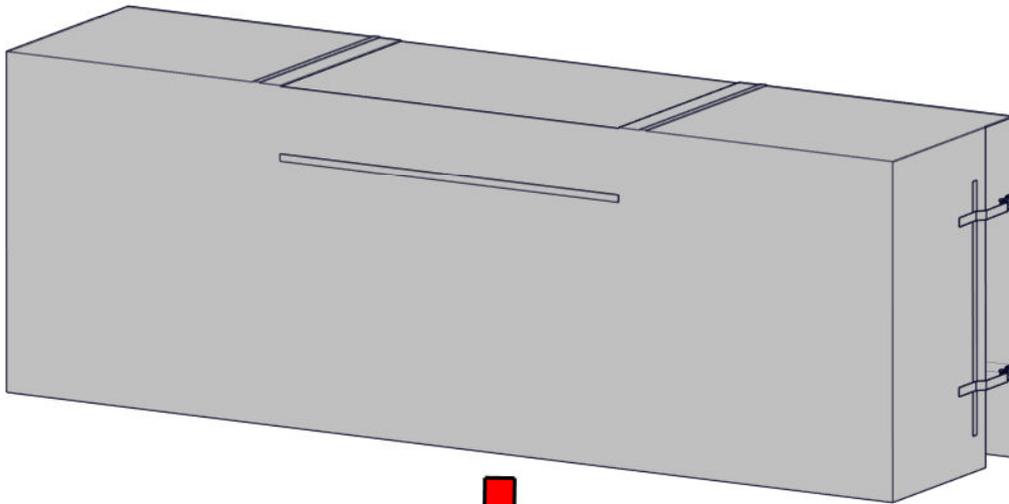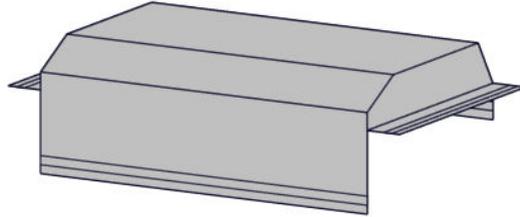

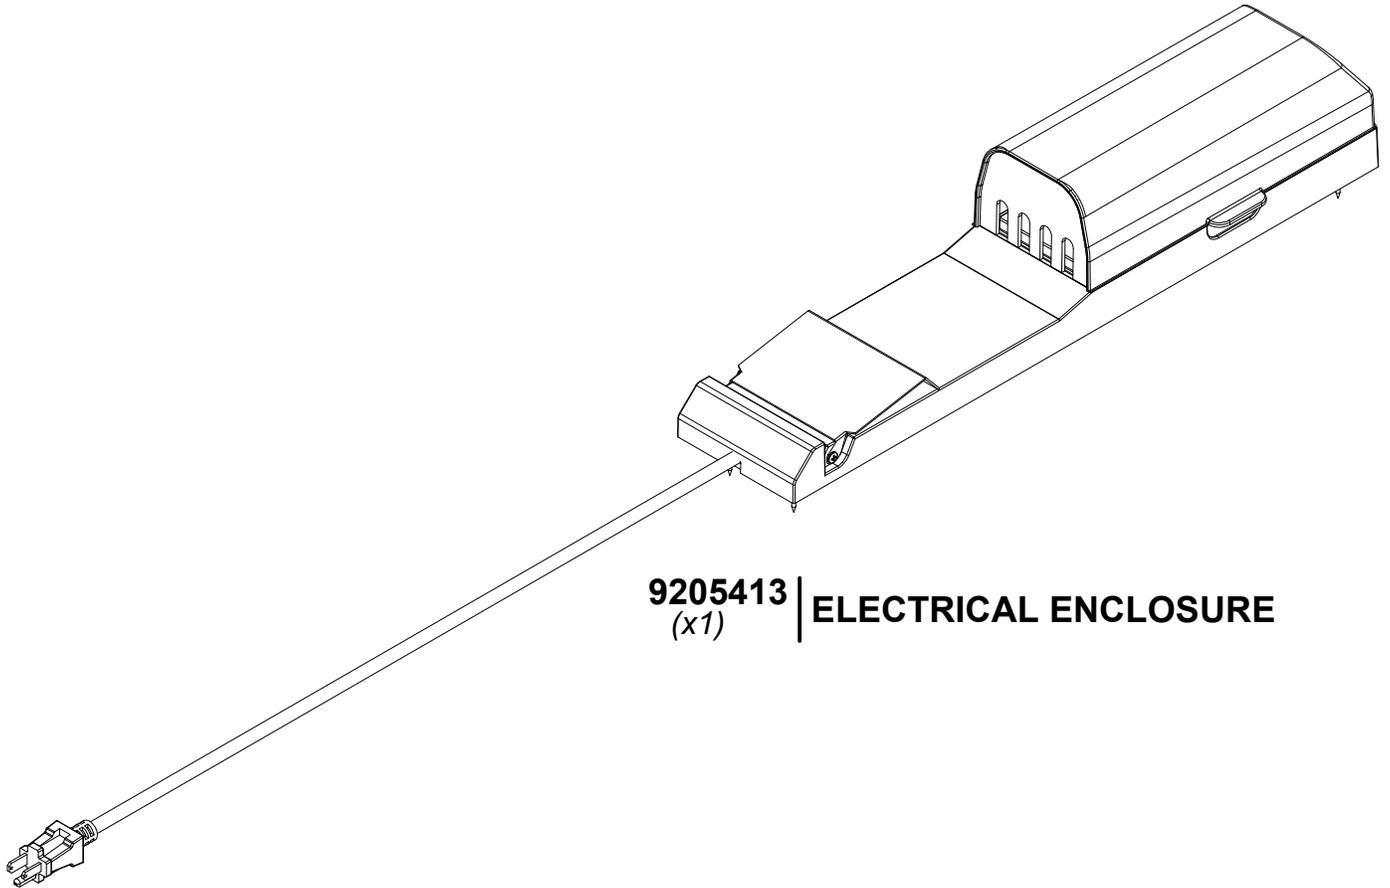

9205413 | **ELECTRICAL ENCLOSURE**
(x1)

FOR POWERPORT INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE POWERPORT KIT. INSTALL ON ANY EXTERIOR POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.