



Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990


TWO APPLIANCES FUSION FLAME OUTDOOR KITCHEN

MODEL #: 2507036



WARNING

Cancer and Reproductive Harm
www.P65Warnings.ca.gov

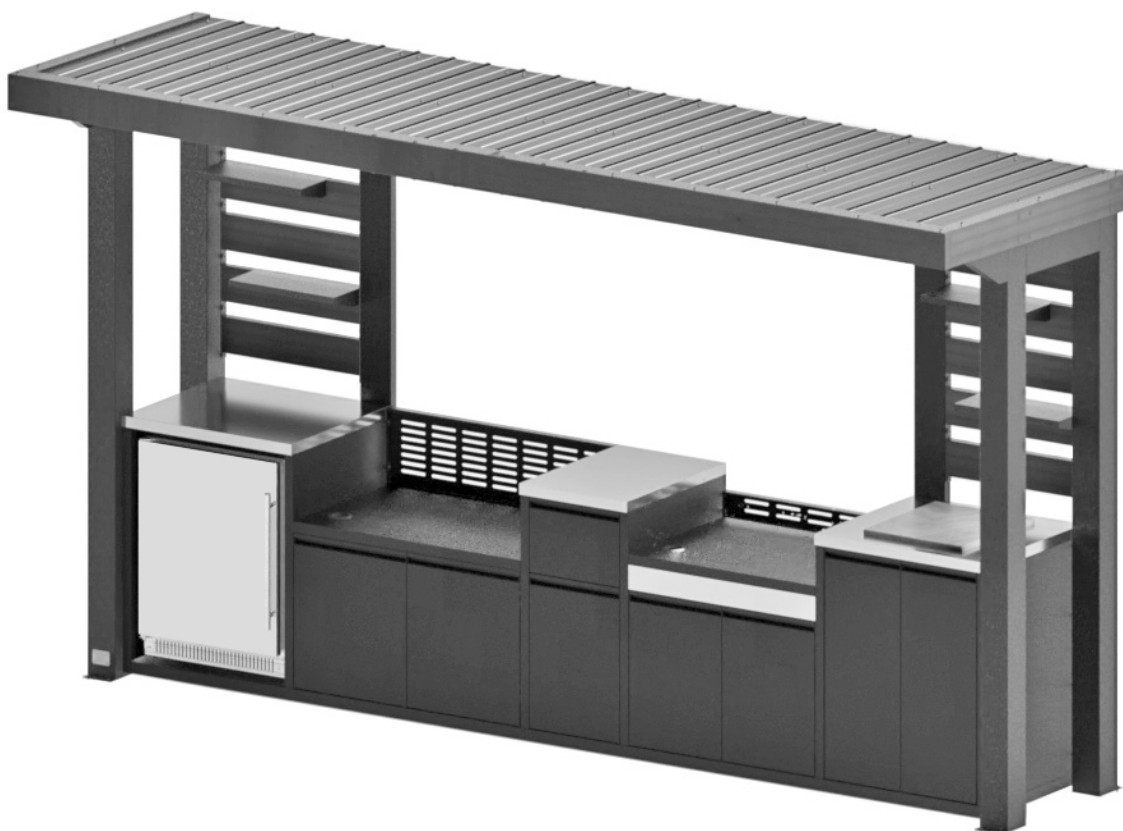

Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order
replacement parts Para obtener instrucciones en español, visite
www.backyarddiscovery.com



EASY STEP-BY-STEP

3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP




OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings or concrete pad to attach your structure.


- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.


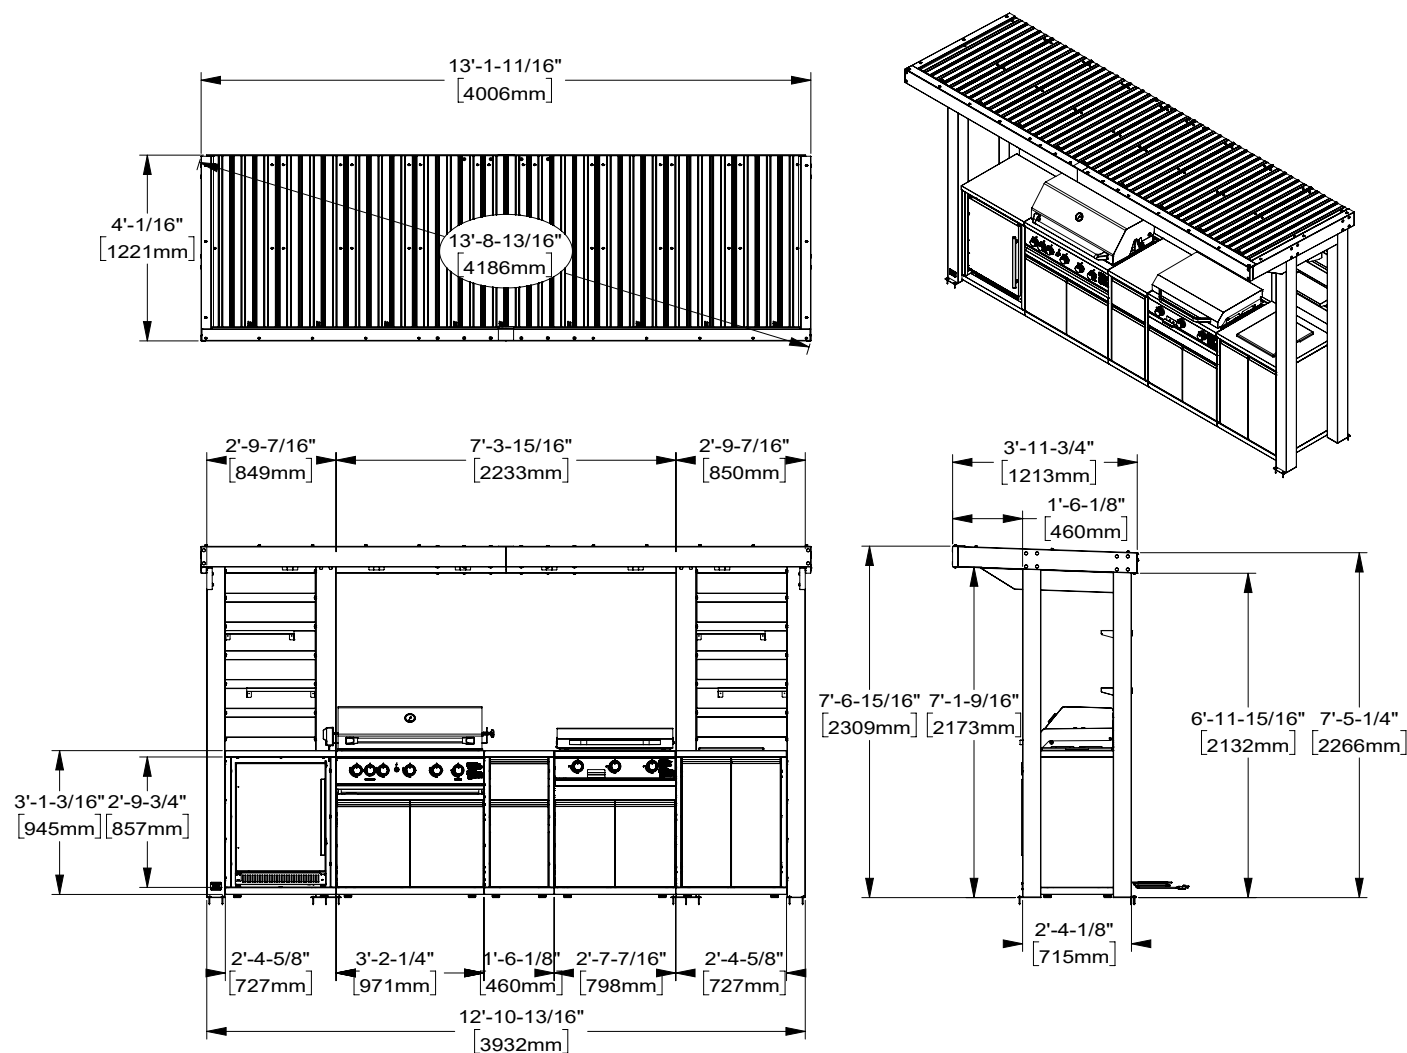


OWNER'S MANUAL - ANCHORING LAYOUT

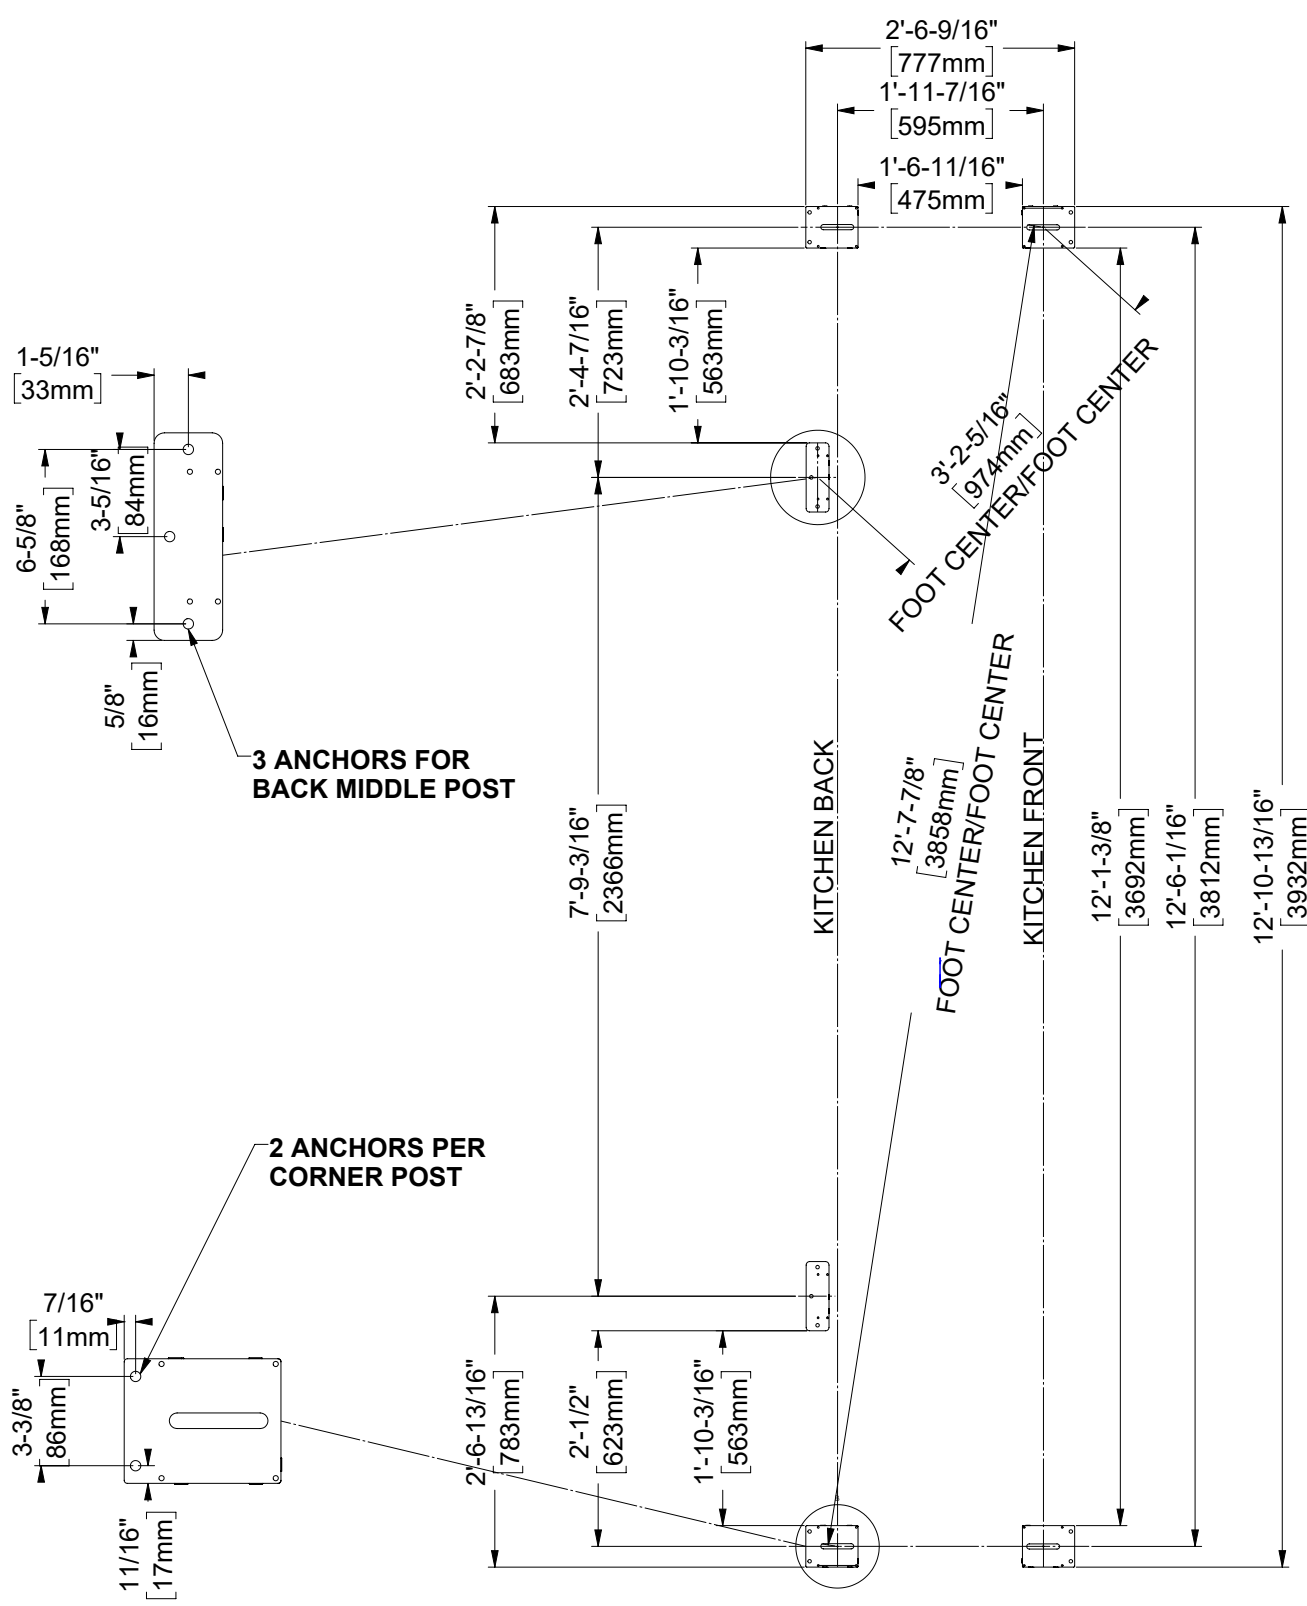


NOTE: DIMENSIONS ARE TO ANCHOR PLATES MOUNTED TO POSTS EXCEPT WHERE NOTED.

OWNER'S MANUAL - UTILITY LAYOUT

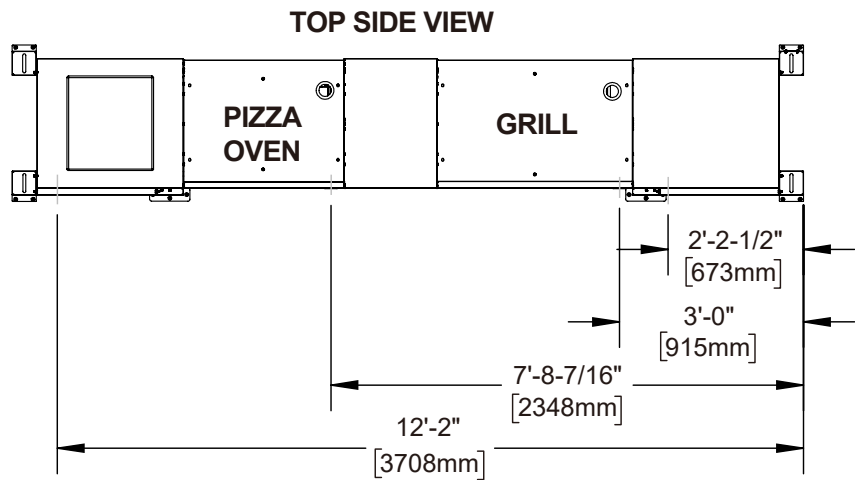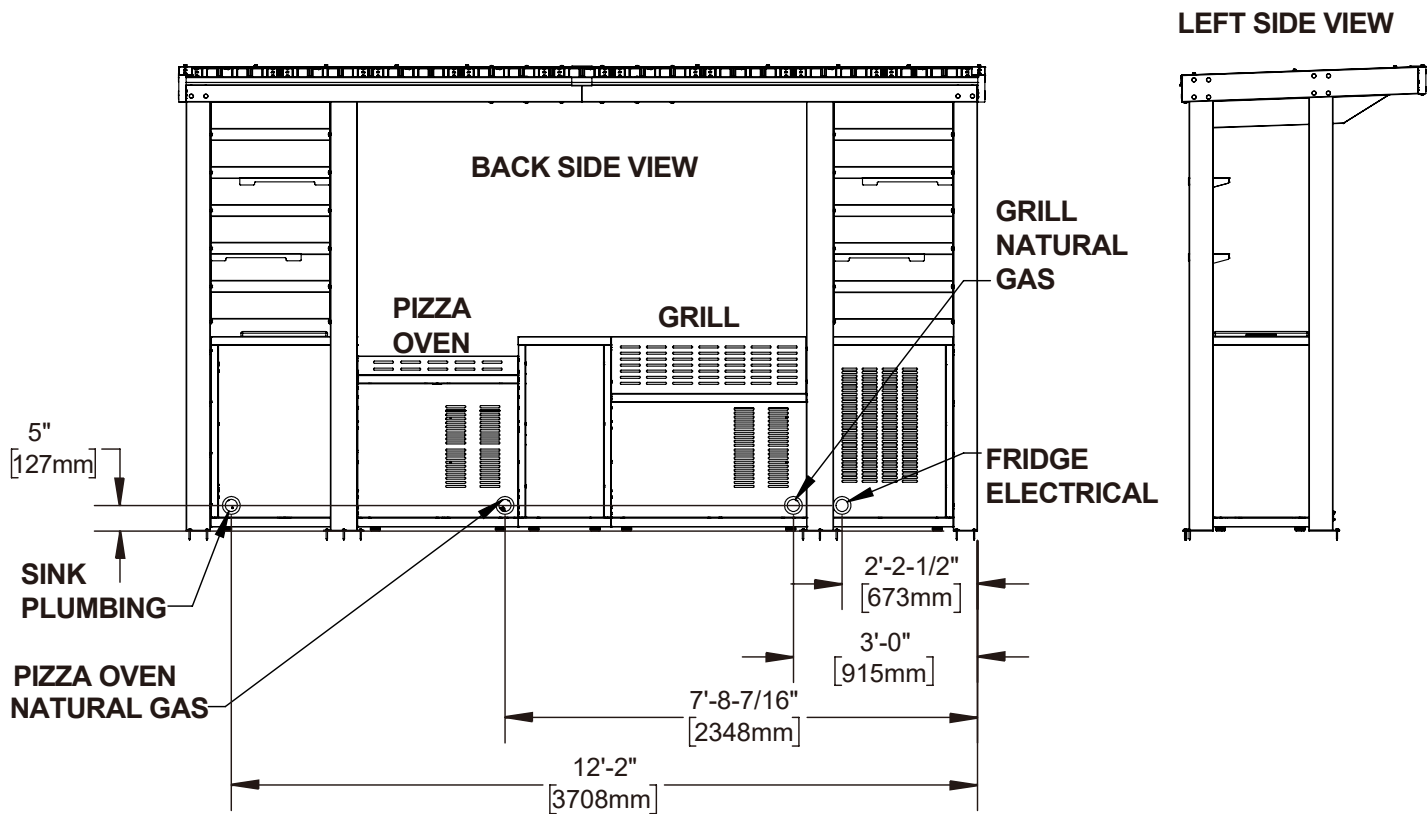


OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

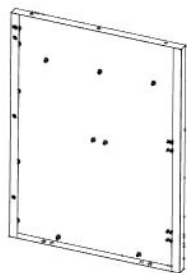

S1 SIDE PANEL ASSEMBLY - A4M05448
(x1) 33 3/4"x25"x1 3/8" (35x635.0x857)

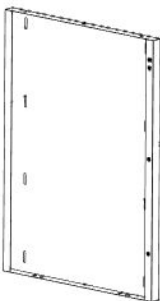

S2 SIDE PANEL ASSEMBLY - A4M05449
(x1) 33 3/4"x25"x1 3/8" (35x635x857)

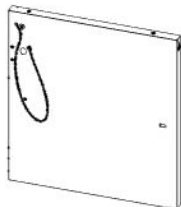


S3 SIDE PANEL ASSEMBLY M - A4M05485
(x1) 24"x22 5/8"x1 3/8" (35x574x610)




S4 SIDE PANEL ASSEMBLY - A4M05458
(x1) 33 3/4"x25"x2 11/16" (68x635x857)




S5 SIDE PANEL ASSEMBLY - A4M05460
(x1) 33 3/4"x25"x1 3/8" (35x635.0x857)

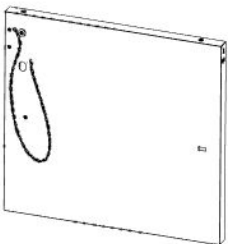

S6 SIDE PANEL ASSEMBLY M - A4M05483
(x1) 26 3/16"x24"x1 3/8" (35x609x665)

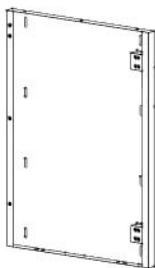


S7 SIDE PANEL ASSEMBLY - A4M05475
(x1) 33 3/4"x25"x1 3/8" (35x635x857)

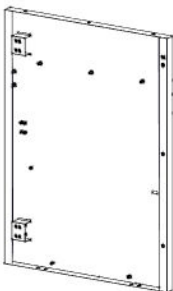


S8 SIDE PANEL ASSEMBLY - A4M05476
(x1) 33 3/4"x25"x1 3/8" (35x635x857)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

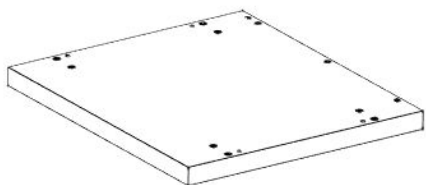


F1 FLOOR PANEL ASSEMBLY - A4M05447
(x1) 28 5/8"x25"x1 3/4" (45x635x727)

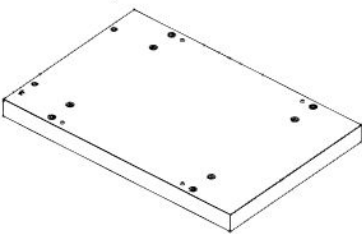


F3 FLOOR PANEL ASSEMBLY - A4M05457
(x1) 18 1/8"x25"x1 3/4" (45x635x460)

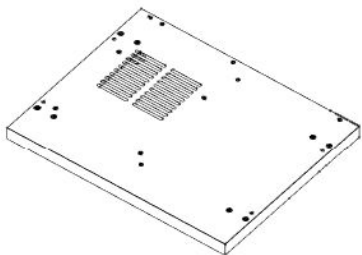


F4 FLOOR PANEL ASSEMBLY - A4M05466
(x1) 31 7/16"x25"x1 3/4" (45x635x798)

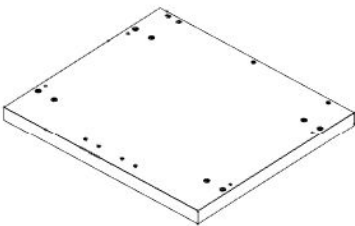


F5 FLOOR PANEL ASSEMBLY - A4M05473
(x1) 28 5/8"x25"x1 3/4" (45x635x727)

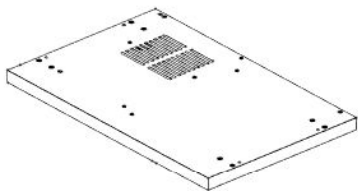


F8 FLOOR PANEL ASSEMBLY - A4M05758
(x1) 38 1/4"x25"x1 3/4" (45x635x971)

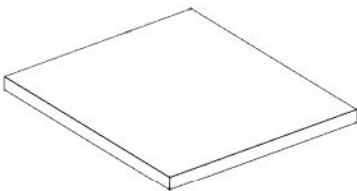


T1 TABLETOP PANEL ASSEMBLY - A4M05451
(x1) 28 5/8"x25 5/16"x1 5/8" (41x643x727)

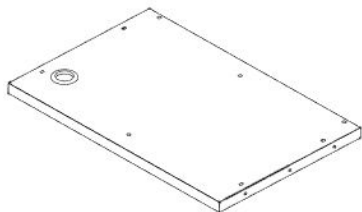


T2 TABLETOP PANEL ASSEMBLY - A4M05455
(x1) 38 1/4"x25"x1 9/16" (40x635x971)

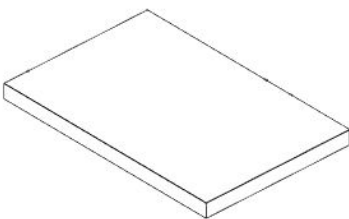

T3 TABLETOP PANEL ASSEMBLY - A4M05463
(x1) 25 5/16"x18 1/8"x1 5/8" (41x460x643)

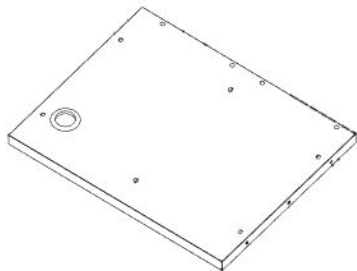


T4 TABLETOP PANEL ASSEMBLY - A4M05470
(x1) 31 7/16"x25"x1 9/16" (40x635x798)

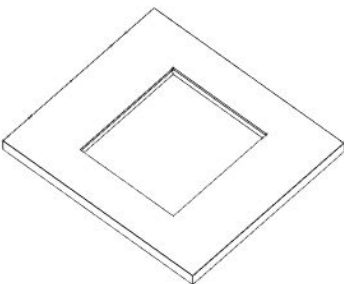


T5 TABLETOP PANEL ASSEMBLY - A4M05479
(x1) 28 5/8"x25 5/16"x1 5/8" (41x643x727)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

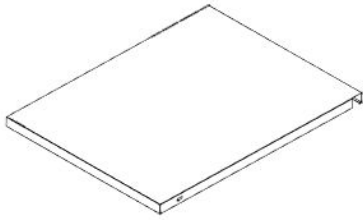


L1 SHELF - A4M05486
(x1) 24"x18 3/8"x1" (25x467x610)

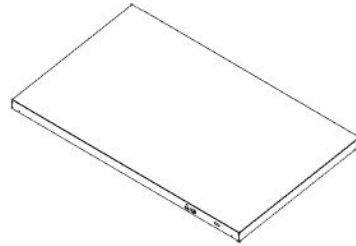

L2 SHELF - A4M05484
(x1) 24"x14 13/16"x1" (25x376x610)

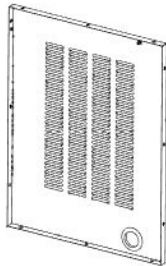


G1 BACK PANEL ASSEMBLY - A4M05452
(x1) 33 3/4"x25 3/4"x1 3/16" (30x655x857)

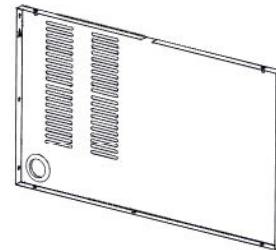


G2 BACK PANEL ASSEMBLY - A4M05456
(x1) 38 1/4"x22 5/8"x1 3/16" (30x574x971)




G3 BACK PANEL - A4M05461
(x1) 1 1/6"x15 1/4"x33 3/4" (30x388x857)

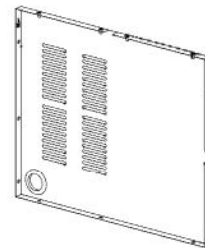


G4 BACK PANEL ASSEMBLY - A4M05468
(x1) 31 7/16"x26 3/16"x1 3/16" (30x666x798)

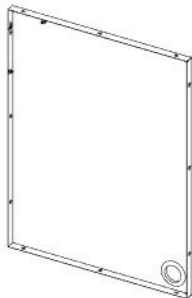

G5 BACK PANEL ASSEMBLY - A4M05477
(x1) 33 3/4"x25 13/16"x1 3/16" (30x655x857)

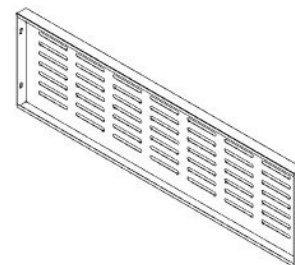


G11 VENTILATION PANEL - A4M03056
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)

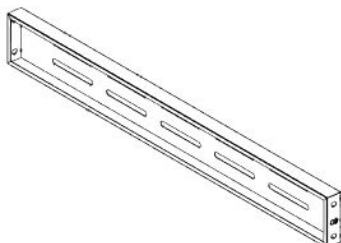


O8 VENTILATION PANEL - A4M03078
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

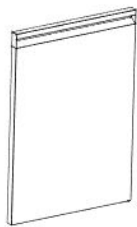


D1 DOOR ASSEMBLY - A4M05487
(x1) 22 3/8"x18 7/8"x7/8" (22x480x568)

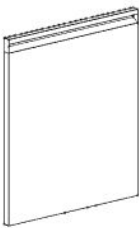


D2 DOOR ASSEMBLY - A4M05488
(x1) 22 3/8"x18 7/8"x7/8" (22x480x568)

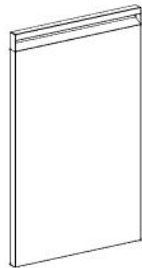

D3 DRAWER PANEL ASSEMBLY - A4M05464
(x1) 22 7/16"x15 1/8"x7/8" (22x384x569)

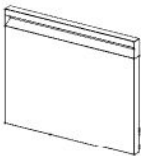


D4 DRAWER PANEL ASSEMBLY - A4M05465
(x1) 15 1/8"x10 15/16"x7/8" (22x278x384)

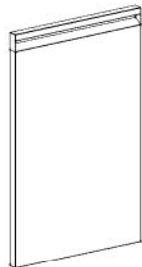

D5 DOOR ASSEMBLY - A4M05472
(x1) 22 3/8"x15 1/2"x7/8" (22x393.5x569)



D6 DOOR ASSEMBLY - A4M05471
(x1) 22 3/8"x15 1/2"x7/8" (22x393.5x569)

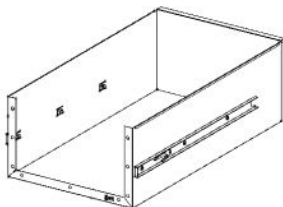

D7 DRAWER BODY ASSEMBLY - A4M05489
(x1) 22 9/16"x13 1/4"x7 1/8" (181x337x573)




D8 DOOR ASSEMBLY - A4M05480
(x1) 33 1/2"x12 11/16"x7/8" (22x324.1x851)




D9 DOOR ASSEMBLY - A4M05481
(x1) 33 1/2"x12 11/16"x7/8" (22x322x851)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

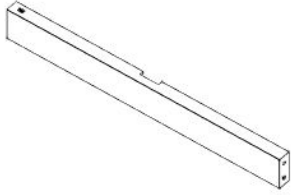

H4 BEAM - A4M05469
(x1) 31 7/16"x3 9/16"x1 3/8" (35x90x798)

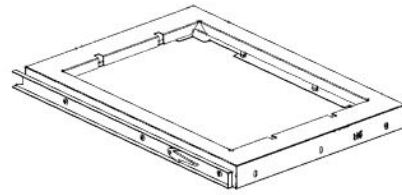


H3 TRASH CAN BRACKET ASSEMBLY - A4M05490
(x1) 18"x13 5/16"x1 3/8" (35x337x458)



A01 BRACKET - A4M02018
(x6) 1"x1 5/16"x5 1/16" (25x33.2x128)




A2 MAGNET BRACKET - A4M03026
(x6) 1"x1 1/4"x3 1/8" (25x31x80)




A4 RESTRICTIVE BRACKET - A4M06228
(x1) 2 3/4"x7/8"x7/16"x7/16" (11.5x21.5x70)




A5 SHELF BRACKET - A4M03141
(x4) 5/8"x7/8"x2 1/16" (16x22x53)

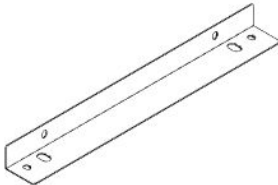

A6 ANGLED BRACKET - A4M03053
(x4) 1 3/8"x 1 15/16"x17 1/8" (35x50x435)

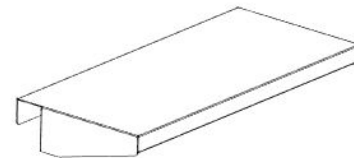


A7 BACK SHELF - A4M06229
(x4) 2 7/16"x7 15/16"x17 11/16" (61x201x450)

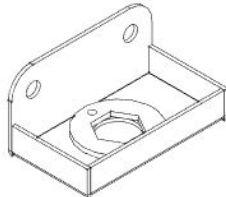


A9 HOSE BRACKET ASSEMBLY - A4M03060
(x2) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)



A11 TRIANGLE PANEL - A4M03086
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)

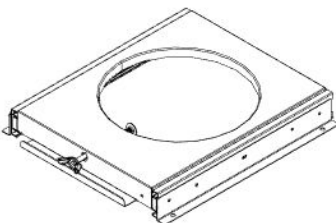


A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x2) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

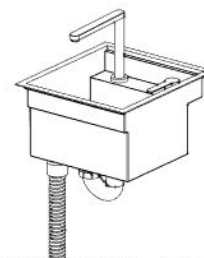


A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

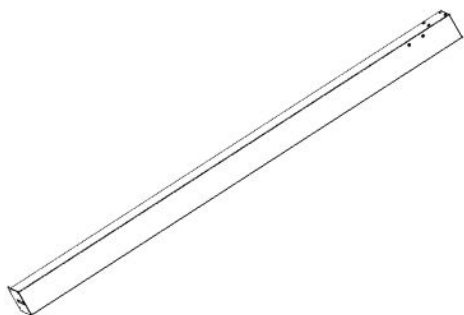


P01 FRONT POST ASSEMBLY - A4M05508
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)

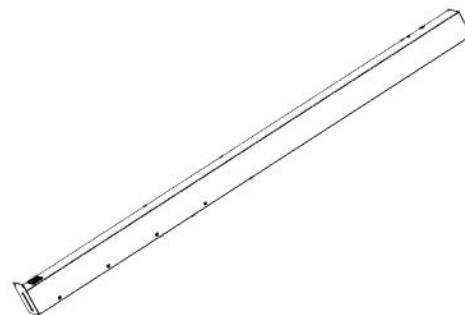


P02 FRONT POST ASSEMBLY - A4M05509
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)

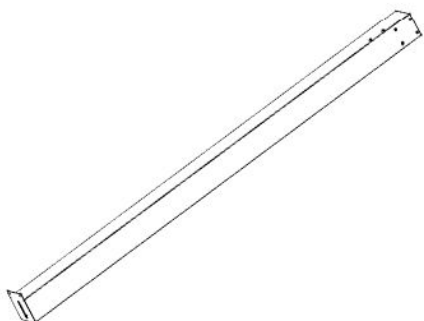


P03 BACK POST ASSEMBLY - A4M05510
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)

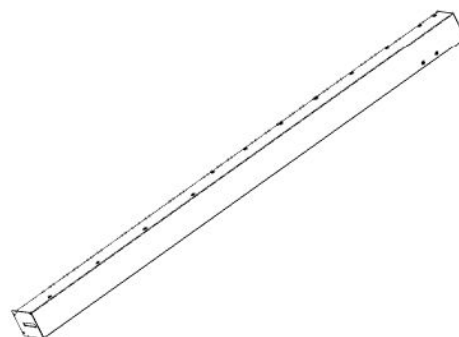


P04 BACK POST ASSEMBLY - A4M05499
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)

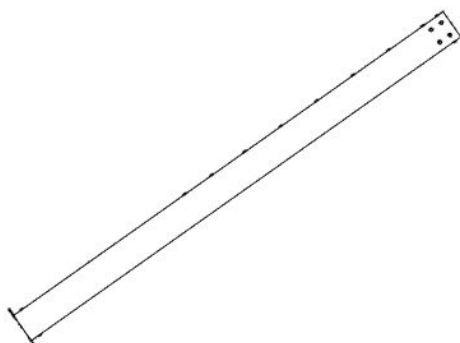

P05 BACK POST ASSEMBLY - A4M05507
(x1) 2 5/8"x7 7/8"x88 3/4" (66x200x2254)

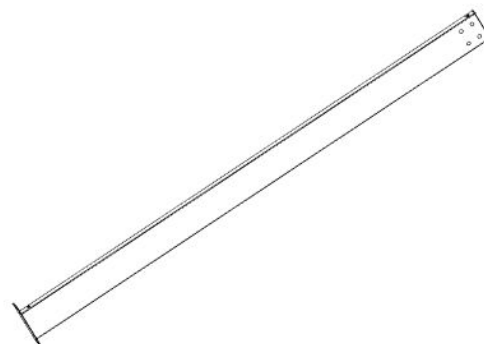


P06 BACK POST ASSEMBLY - A4M05497
(x1) 2 5/8"x7 7/8"x88 3/4" (66x200x2254)



B01 SIDE BEAM - A4M02012
(x1) 36x5 1/4"x46 1/2" (36x134x1181)



B04 SIDE BEAM - A4M02019
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)




B05 SIDE BEAM - A4M02022
(x1) 1 7/16"x5 1/4"x46 1/2" (36x134x1181)




B11 SIDE BEAM - A4M02106
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

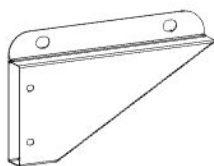

B08 CORBEL - A4M02041
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)

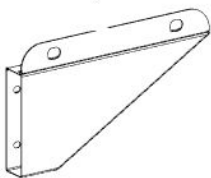

B09 CORBEL - A4M02042
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)



B10 BACK WALL ASSEMBLY - A4M05491
(x4) 1 7/16"x22 11/16"x23 3/8" (36x576.5x594)



B02 BEAM ASSEMBLY - A4M05493
(x2) 1 7/16"x4 13/16"x77 3/8" (36x122x1965)



B03 BEAM ASSEMBLY - A4M05494
(x1) 1 7/16"x5 1/4"x78 13/16" (36x134x2003)




B07 BEAM ASSEMBLY - A4M05496
(x1) 1 7/16"x5 1/4"x78 13/16" (36x134x2003)



J1 SPLICE BRACKET - A4M02230
(x1) 1 5/16"x5 3/16"x39 3/8" (33.2x131.2x1000)



J2 SPLICE BRACKET - A4M05761
(x1) 1 5/16"x4 11/16"x39 3/8" (33.2x119.2x1000)



R01 RAFTER - A4M02020
(x6) 3 1/8"x3 15/16"x45 1/16" (80x100x1144)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)



E01 PURLIN ASSEMBLY - A4M05502
(x2) 1 9/16"x8 7/8"x66 3/16" (40x45x1681.25)



E02 PURLIN ASSEMBLY - A4M05503
(x2) 1 9/16"x19 15/16"x88 1/2" (40x45x2248.3)



E03 PURLIN ASSEMBLY - A4M05495
(x2) 1 9/16"x1 3/4"x23 3/8" (40x45x594)






E04 PURLIN ASSEMBLY - A4M05501
(x1) 1 9/16"x1 3/4"x87 13/16" (40x45x2230)



3113 29GA STEEL SHEETING - A4M03113
(x8) 1/4"x18 7/8"x46 7/16" (7x480x1179)


5500 29GA STEEL SHEETING - A4M05500
(x1) 1/4"x13"x46 7/16" (7x330x1179)

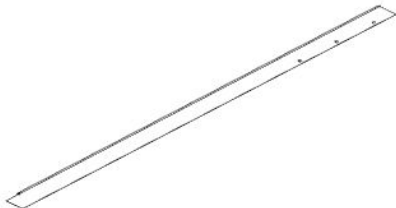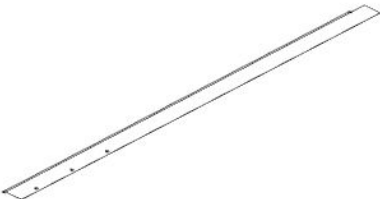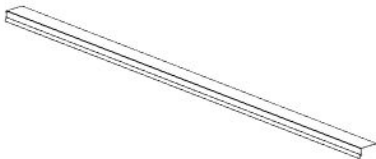

5504 DRIP EDGE - A4M05504
(x2) 1 1/2"x3 5/16"x76 11/16"
(0.5x84x1948)

5505 DRIP EDGE - A4M05505
(x1) 3/16"x3 7/16"x78 1/4" (6x88x1987)

5506 DRIP EDGE - A4M05506(x1)
3/16"x3 7/16"x78 1/4" (6x88x1987)

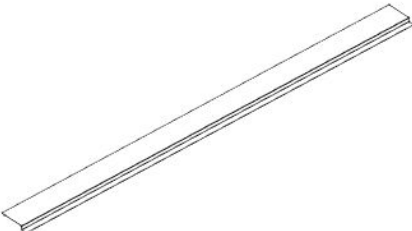


3118 DRIP EDGE SPLICE - A4M03118
(x1) 1 11/16"x3 7/16"x3 15/16" (0.5x88x100)

3114 DRIP EDGE - A4M03114
(x2) 7/16"x3 1/8"x46 1/4" (11x79x1175)


3122 DRIP EDGE SPLICE
- A4M03122(x1)
3/16"x3 1/2"x3 15/16" (6x90x100)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

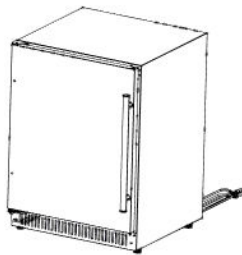

9230132 OUTDOOR KITCHEN FRIDGE - LEFT OPEN
(x1)

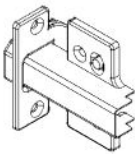

A4M05760 HINGE ASSEMBLY
(x12)

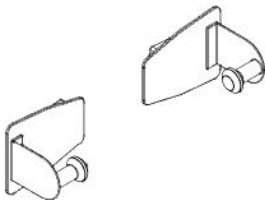

A4M02290 MAGNETIC PAPER TOWEL HOLDER
(x1)




H1 HOLE COVER - A4M01352
(x8)



3151 GARDEN HOSE ADAPTER - A4M03151
(x1)



H2 WOOD GRAIN HOLE COVER
A4M02078(x28)

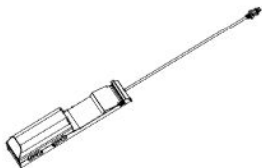


9205413 ELECTRICAL ENCLOSURE
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION

WOOD AND PLASTIC COMPONENTS (NOT TO SCALE)



CB1 W4L22000 CUTTING BOARD
(x1)

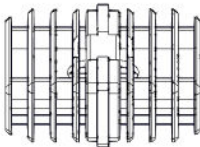

530 2-WAY SQUARE PLUG - A6P00530
(x2)




A6P00679 EVA TAPE
(x16)




A6P00796 SILCONE SEALANT
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS

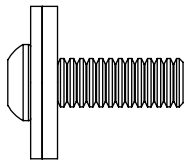


H101202 | TORX PAN HEAD
(x268) | 1/4-20x3/4 ASSY



H101117 | SCREW WOODGRIP
(x54) | 10-16 x 3/4




H101116 | SCREW SELF TAPPING
(x16) | 1/4x1 BLK




H101132 | TORX SOCKET SCREW SHORT
(x18) | 1/4-20




H101103 | TORX SOCKET SCREW
(x46) | 1/4-20




H100147 | TORX BIT
(x1) | T-30




H101100 | MAGNETIC DRIVER
(x1) |




H100114 | TORX BIT
(x1) | T-30




H101292 | TORX PAN HEAD
(x8) | 1/4-20x13/32"




H101185 | PHILLIPS FLAT HEAD
(x72) | 8-32x.5




H101289 | PAN HEAD SCREW
(x42) | 8-32x1/2" SS




H100120 | CONCRETE ANCHOR
(x14) | 1/4"x2"

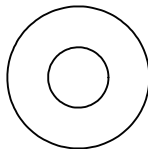


H100630 | WASHER FLAT
(x14) | 8x19 BLK



H101106 | SOCKET DRIVER
(x1) |



H101294 | HEX DRIVER
(x1) |

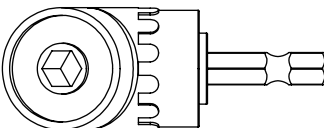

**H101114 | RIGHT ANGLE
DRILL ADAPTER**
(x1) |


PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the parts and hardware.

METAL PARTS:


- Organize metal parts by the three-digit, alpha-numeric number stamped on each part (ex. P01).
- If there are multiple parts with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the parts or on the end of the parts.
- Allow yourself plenty of room - the parts can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY PART OR STEP NUMBER.

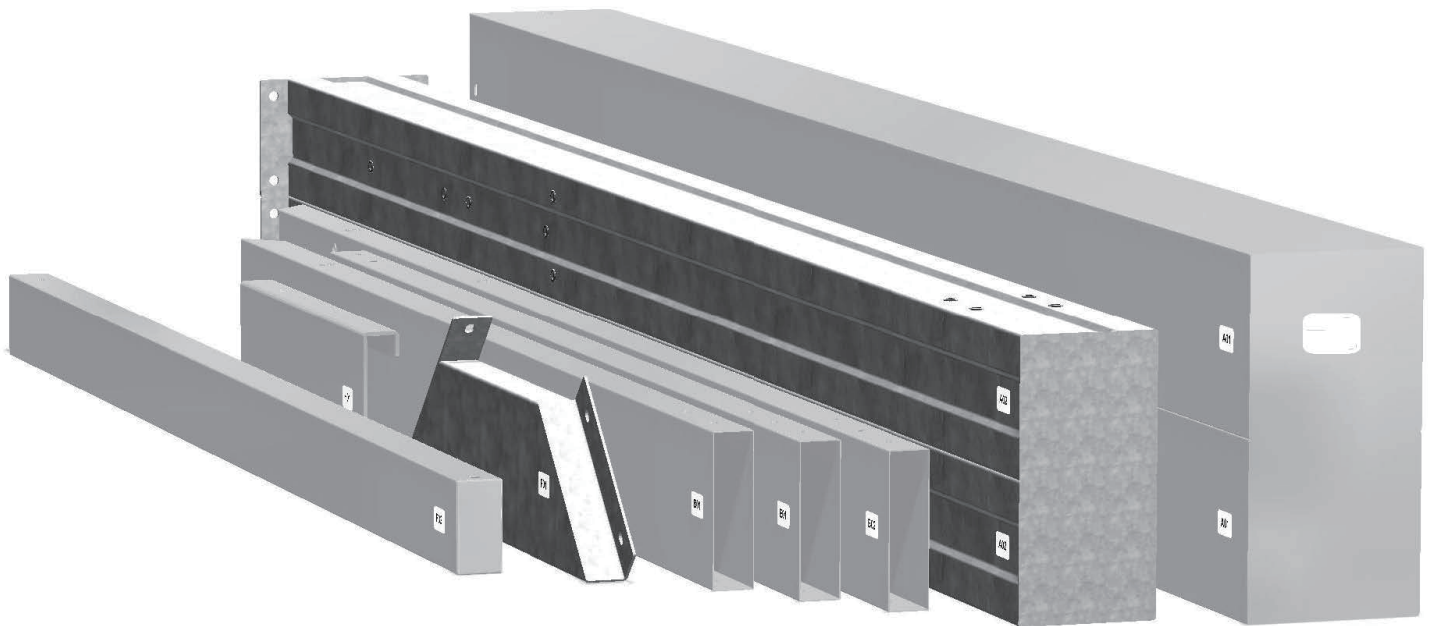

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (e.g. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

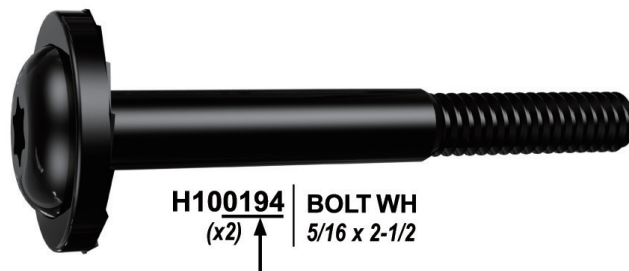

PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or
Electric Drill



Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" &
7/16" Drill Bits



Phillips Screw Driver




Open End Wrench
7/16"




3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets 1/2" & 7/16"
Deep Sockets




Claw Hammer

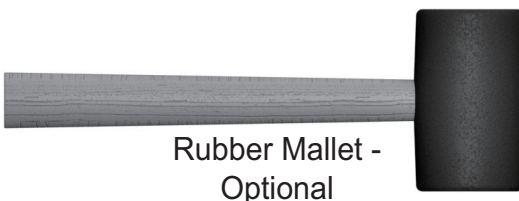

Rubber Mallet -
Optional

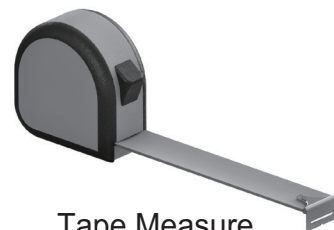

Tape Measure

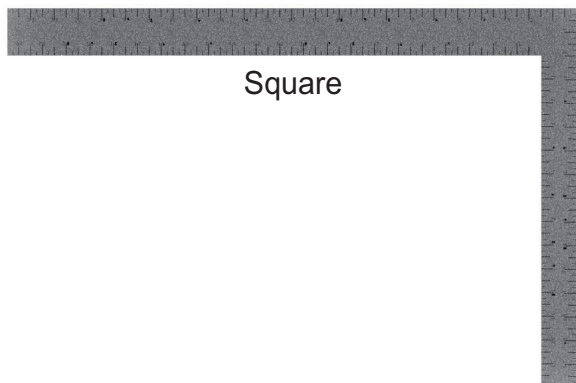

Square





Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD



There are several types of assembly instructions available to you.


1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)




Scan for easy 3D instructions

Download the BILT app
before you begin



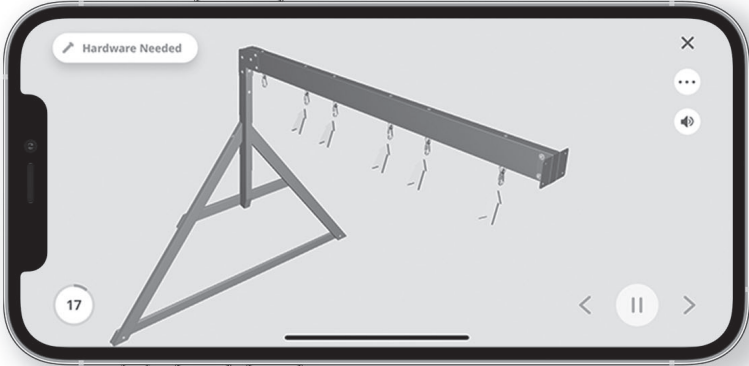


STEP 1- CABINET ASSEMBLY

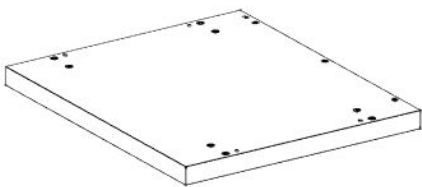

F1 FLOOR PANEL ASSEMBLY - A4M05447
(x1) 28 5/8"x25"x1 3/4" (45x635x727)

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR COOKING STATION WILL BE.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

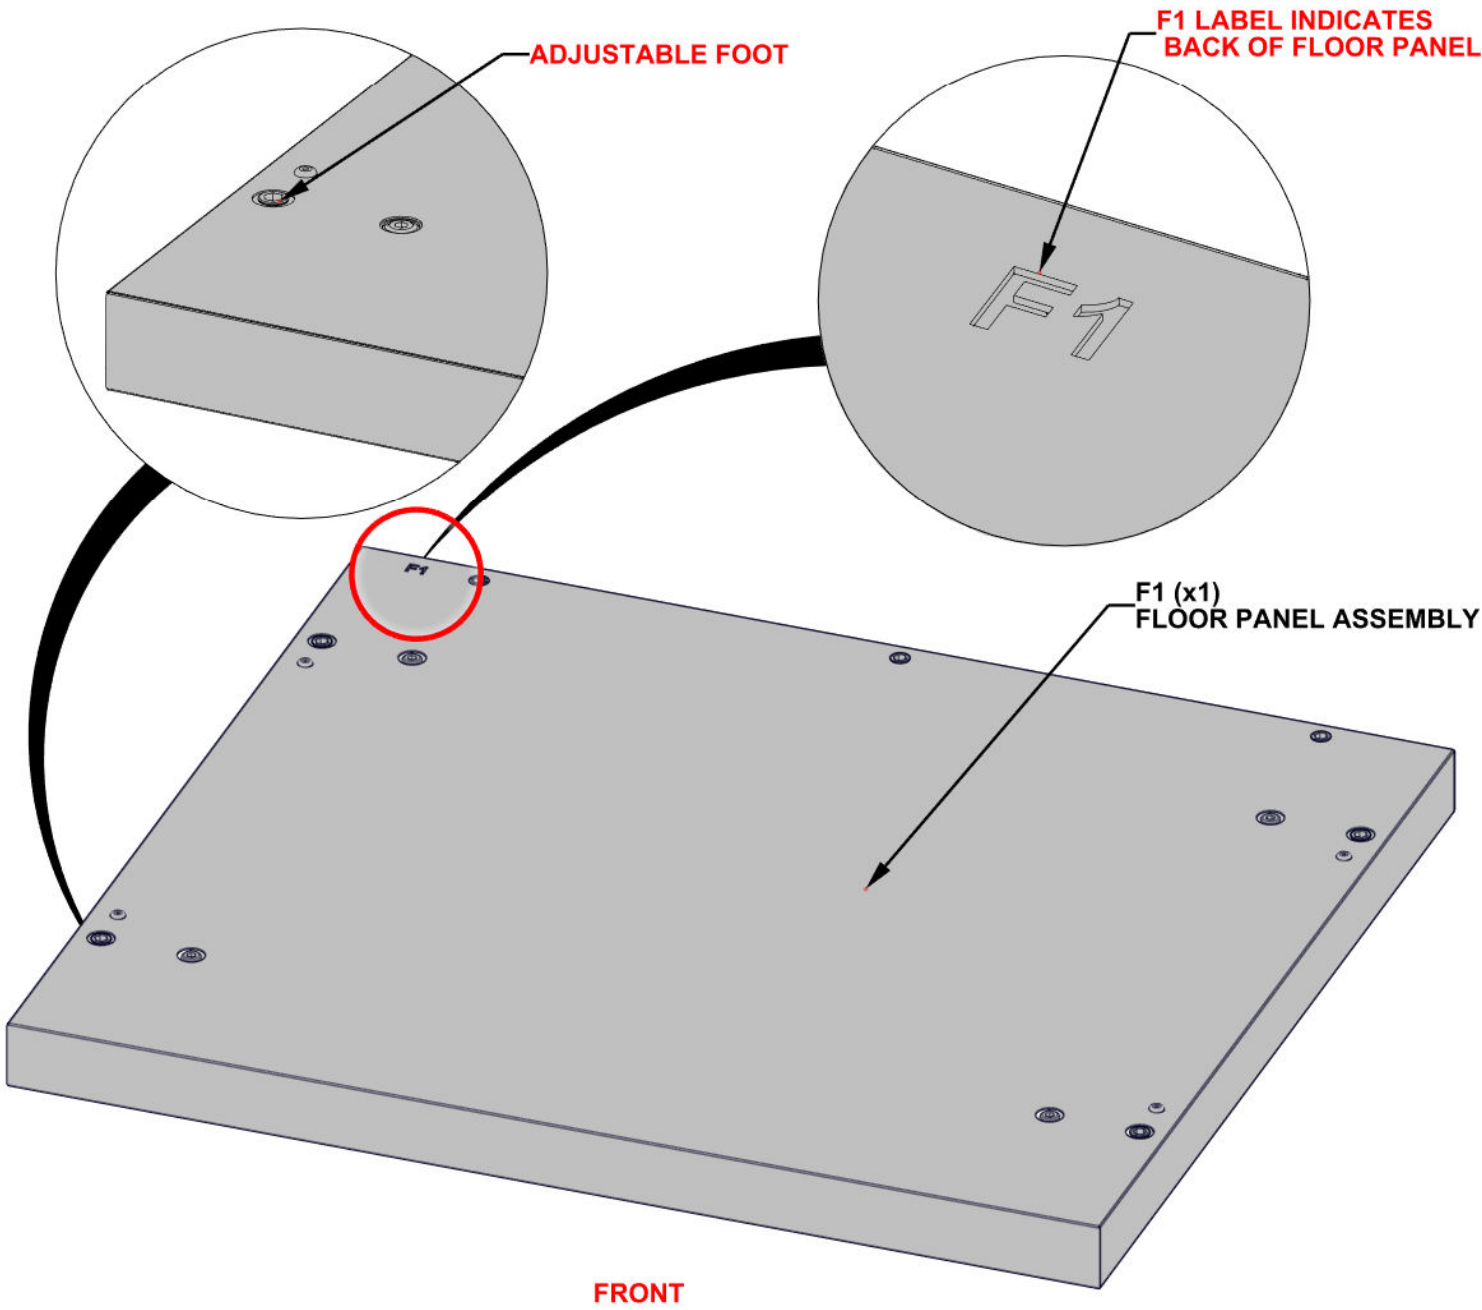


STEP 2- CABINET ASSEMBLY




Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S2 SIDE PANEL ASSEMBLY - A4M05449
(x1) 33 3/4"X25"X1 3/8"(35x635x857)

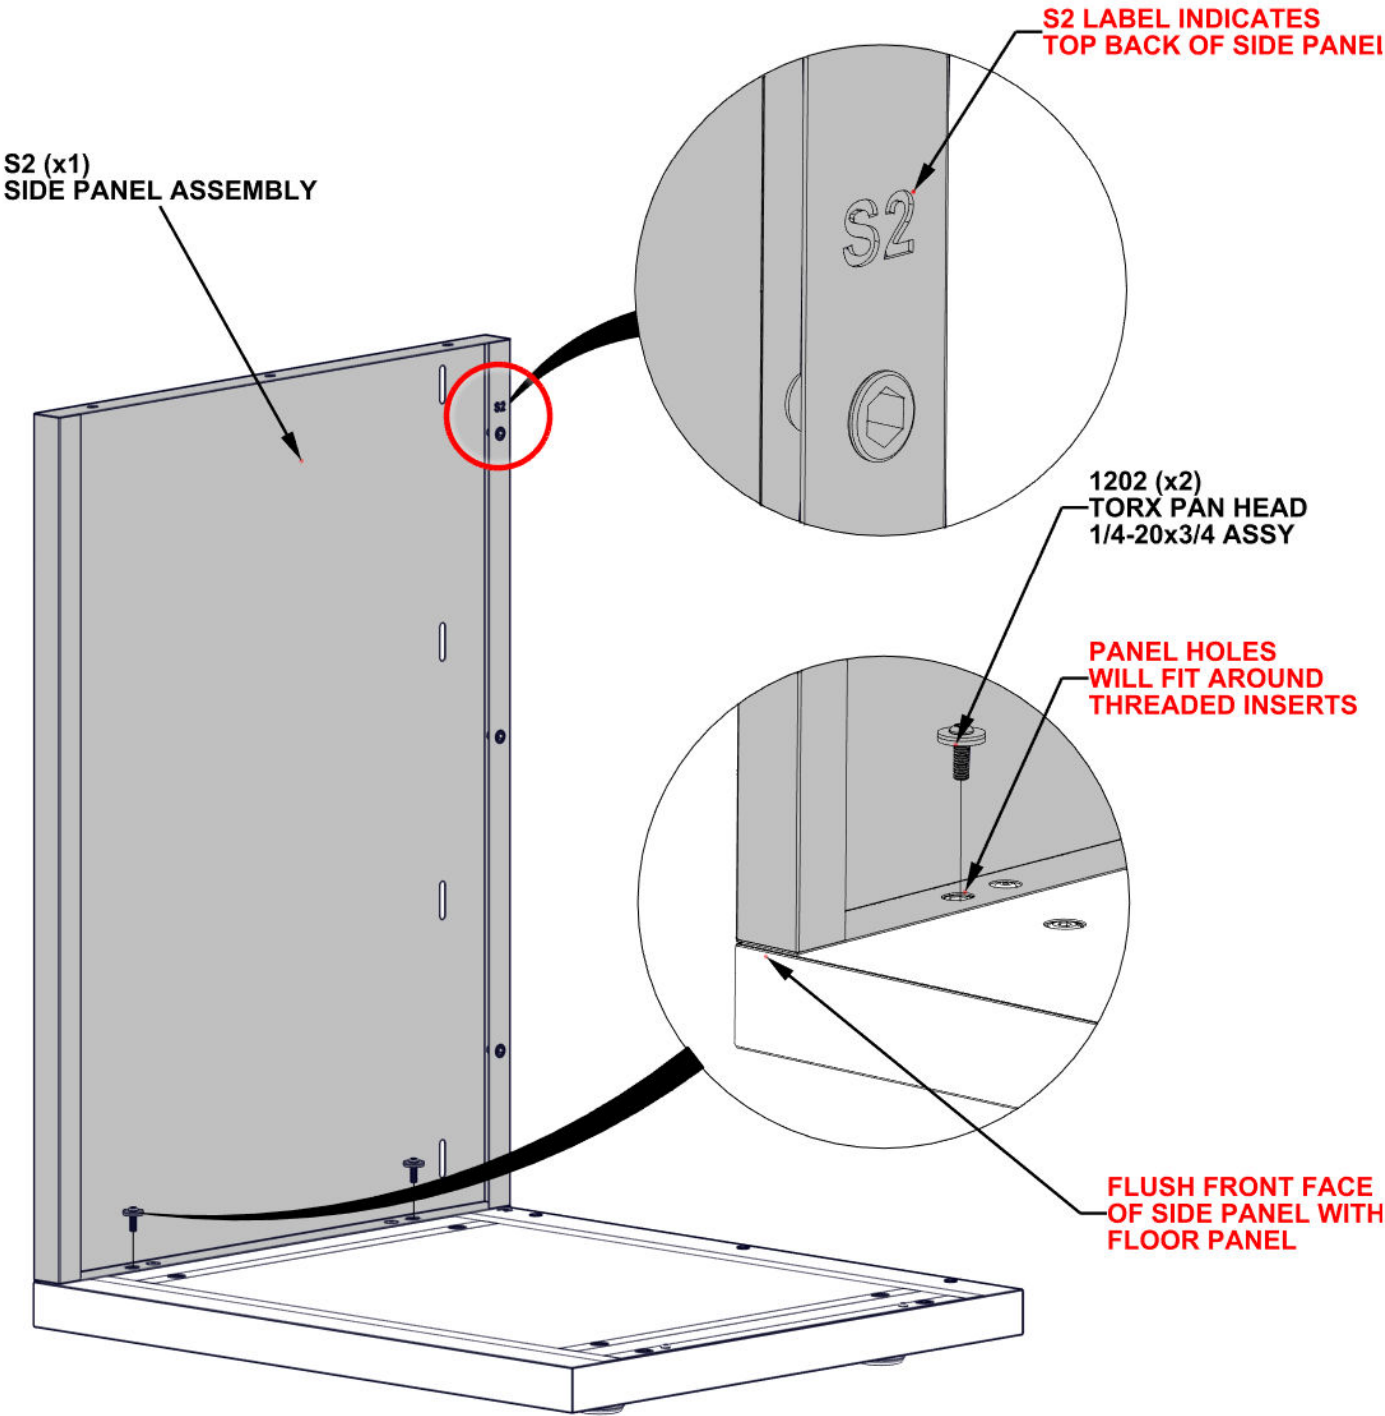


STEP 3- CABINET ASSEMBLY

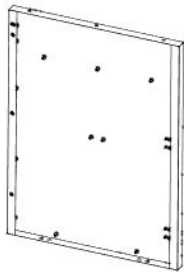


S1 SIDE PANEL ASSEMBLY - A4M05448
(x1) 33 3/4"x25"x1 3/8" (35x635.0x857)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


S1 LABEL INDICATES
TOP BACK OF SIDE PANEL

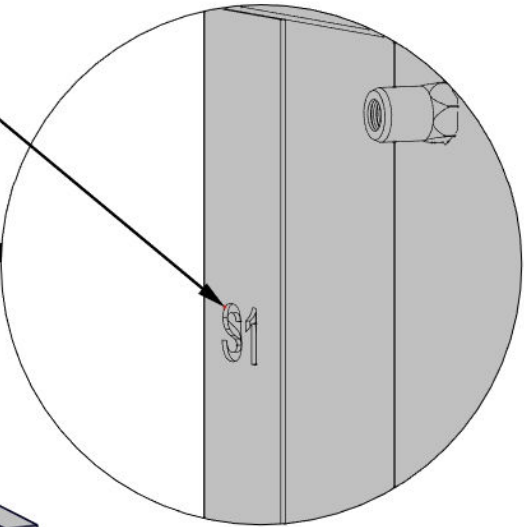

S1 (x1)
SIDE PANEL ASSEMBLY

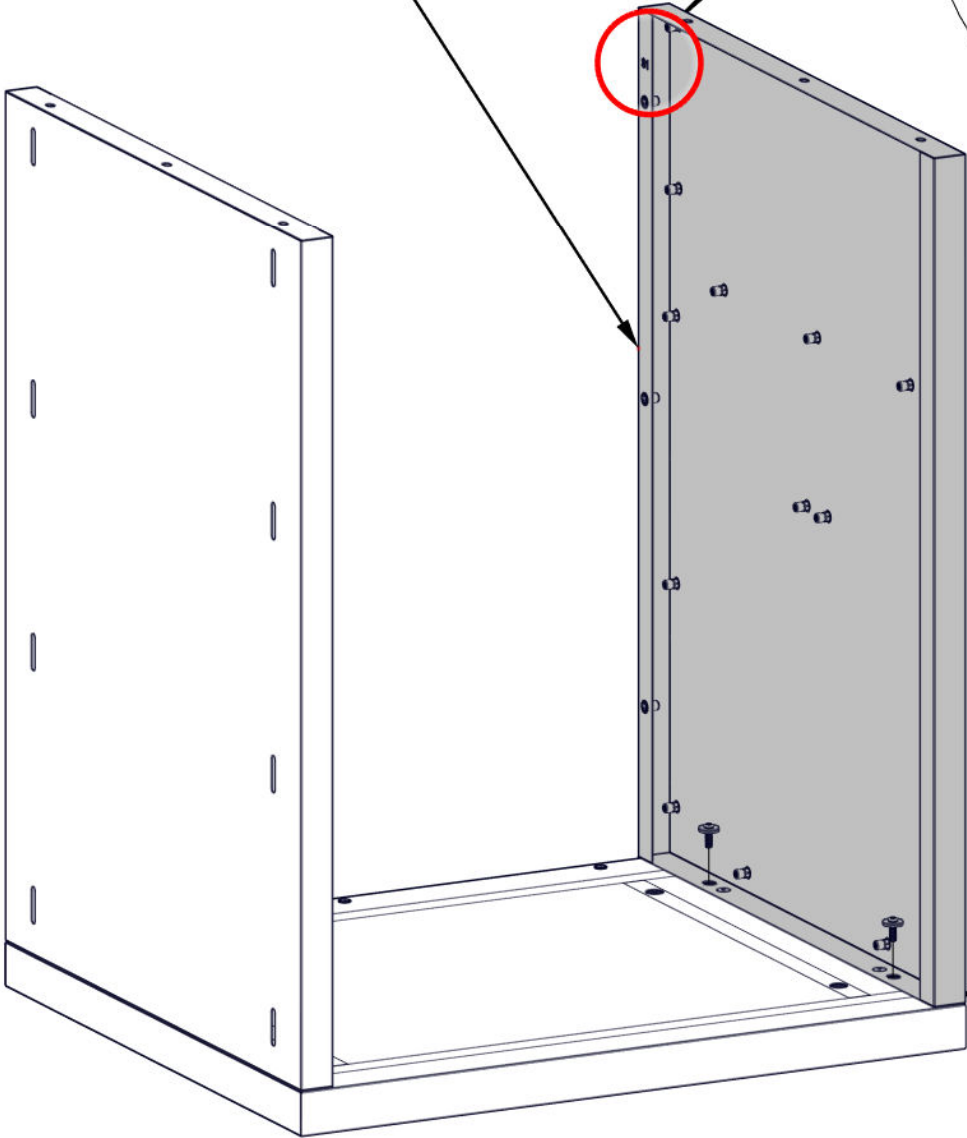


1202 (x2)
TORX PAN HEAD
1/4-20x3/4 ASSY

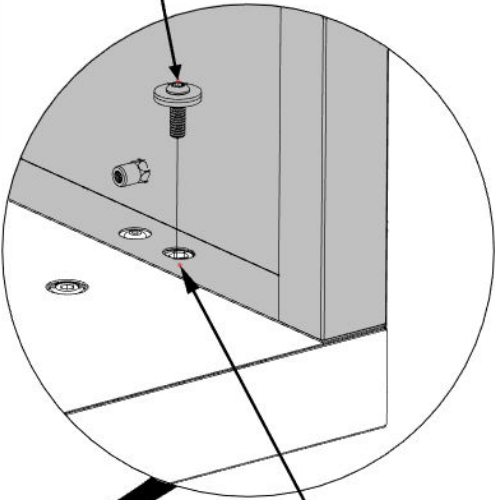

PANEL HOLES
WILL FIT AROUND
THREADED INSERTS

STEP 4- CABINET ASSEMBLY

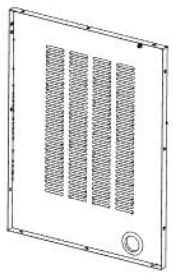


Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


G1 BACK PANEL ASSEMBLY - A4M05452
(x1) 33 3/4"x25 3/4"x1 3/16" (30x655x857)

G1 LABEL INDICATES
TOP OF BACK PANEL

1202 (x9)
TORX PAN HEAD
1/4-20x3/4 ASSY

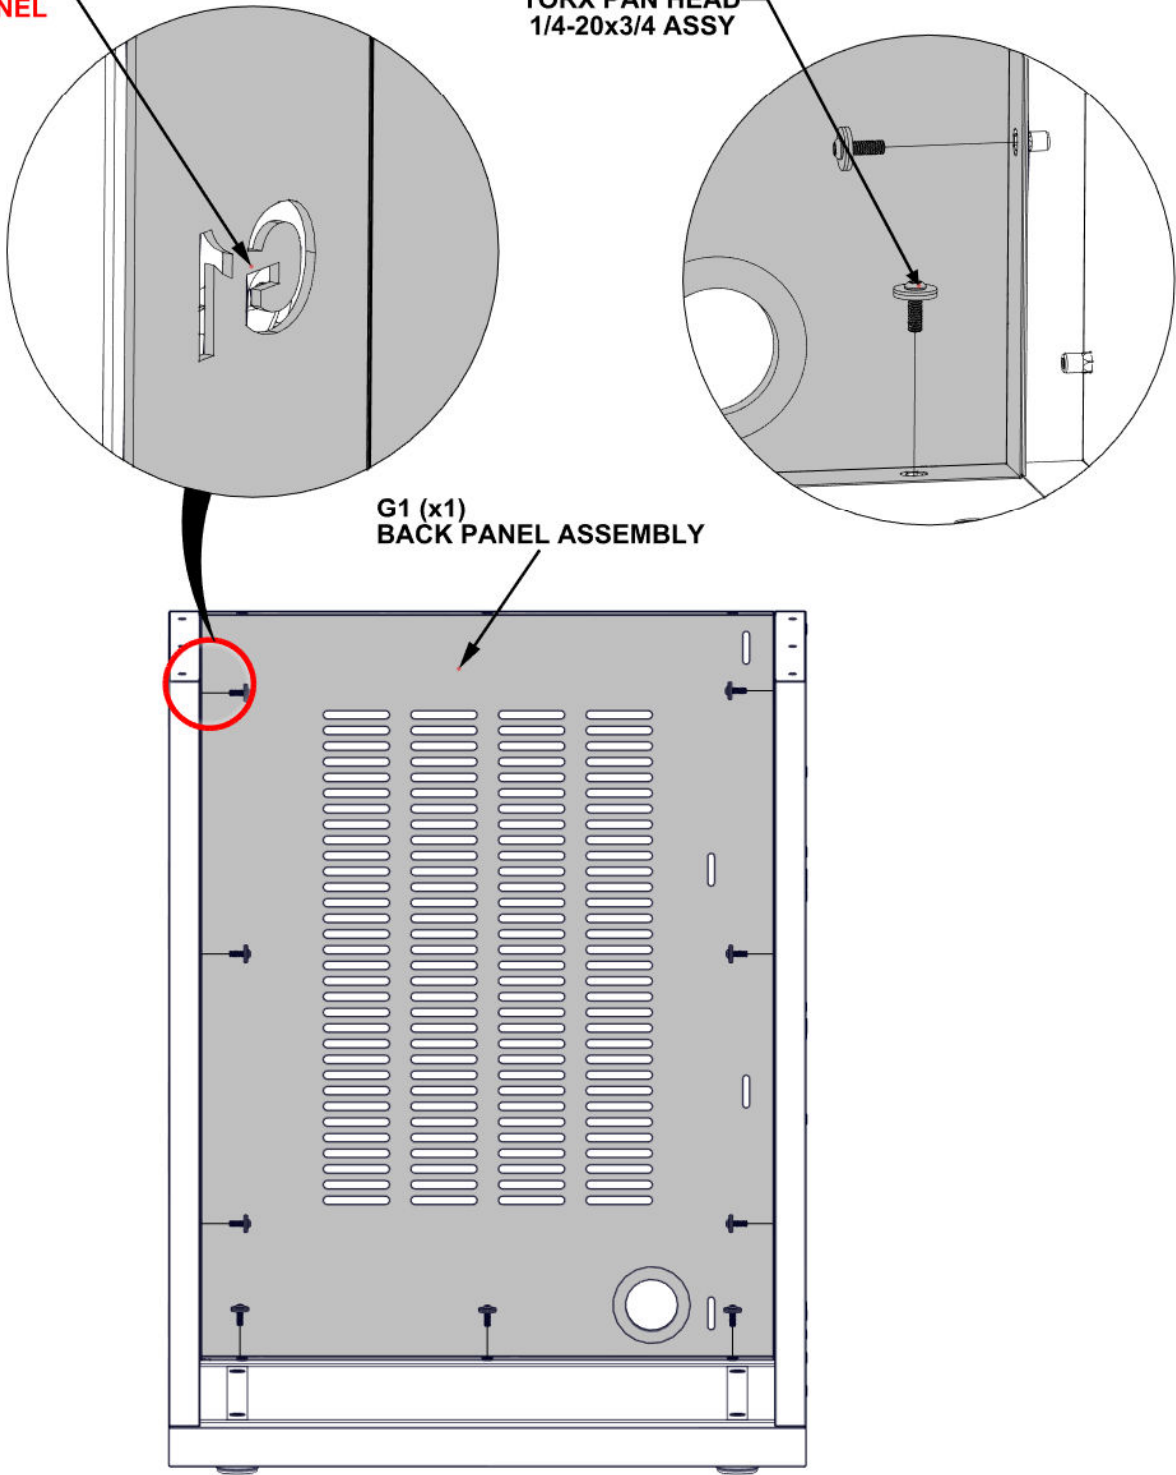


STEP 5- CABINET ASSEMBLY

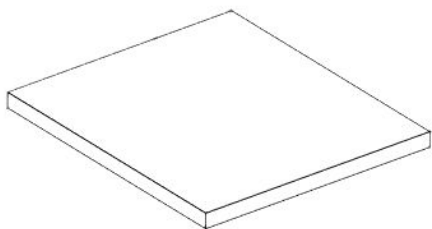


Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

T1 TABLETOP PANEL ASSEMBLY - A4M05451
(x1) 28 5/8"x25 5/16"x1 5/8" (41x643x727)

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.
- IT IS RECOMMENDED TO USE PROVIDED ANGLE DRIVER TO INSTALL HARDWARE IN THIS STEP.
- **ALIGN THREADED INSERTS IN TABLETOP WITH SLOTS IN SIDE AND BACK PANELS.**
- **SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.**
- **DO NOT USE TABLETOP SURFACE AS A WORK BENCH.**

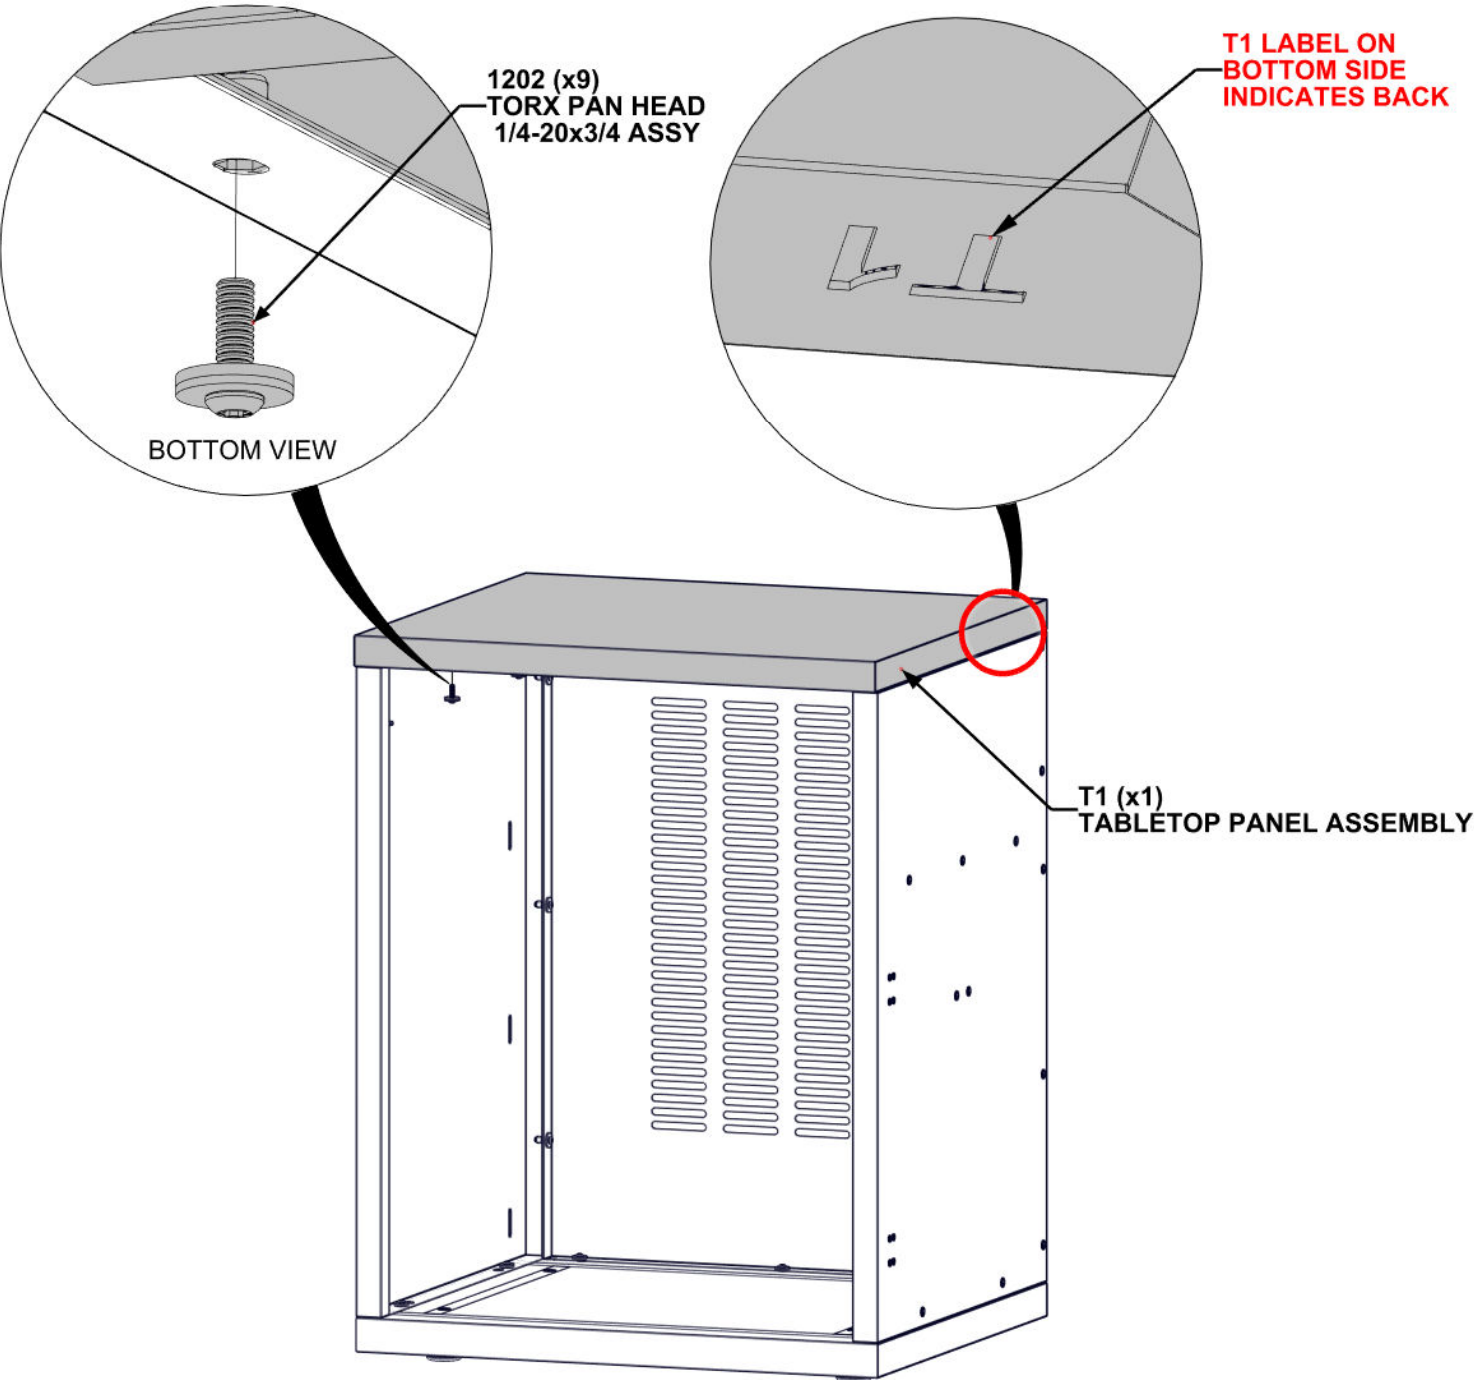


STEP 6- CABINET ASSEMBLY

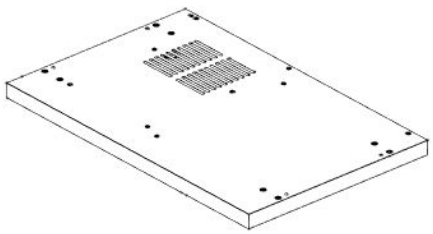


F8 FLOOR PANEL ASSEMBLY - A4M05758
(x1) 38 1/4"x25"x1 3/4" (45x635x971)

- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

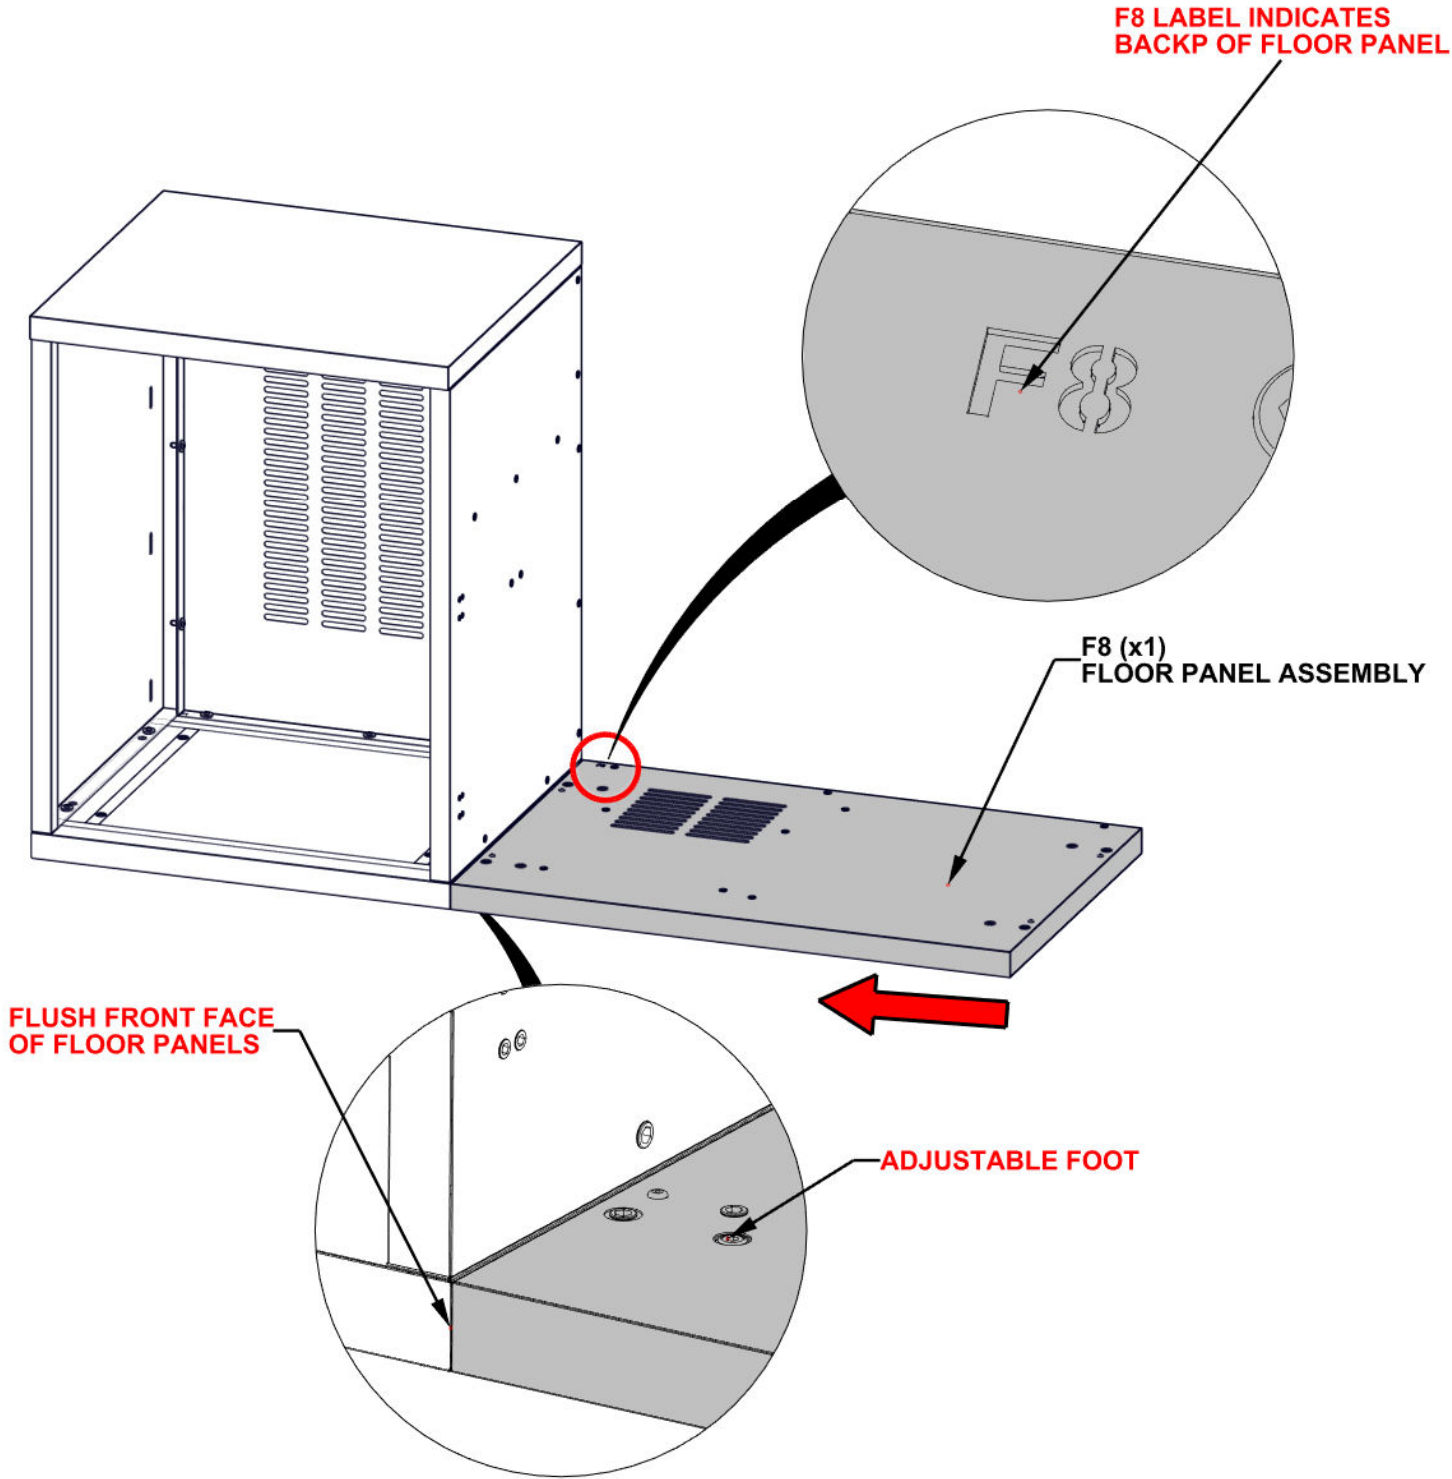


STEP 7- CABINET ASSEMBLY

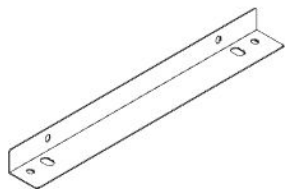


A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x 1 15/16"x17 1/8" (35x50x435)

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

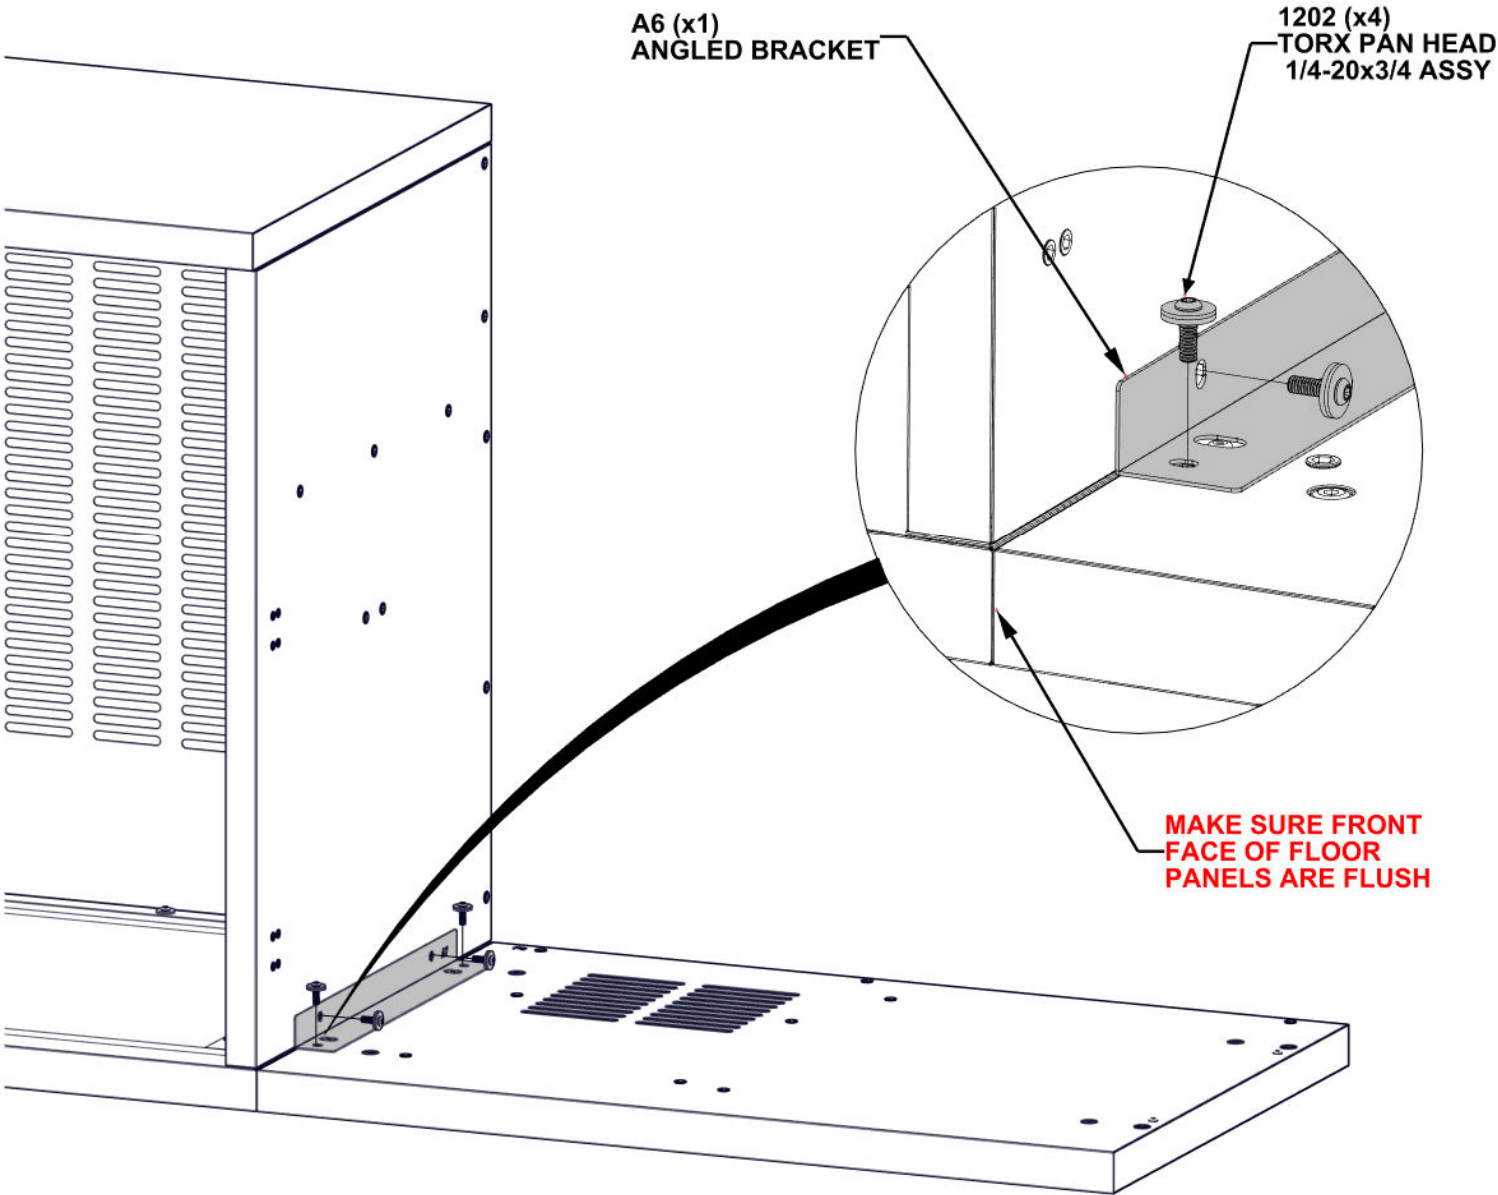


STEP 8 - CABINET ASSEMBLY

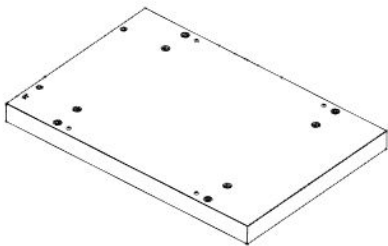


F3 FLOOR PANEL ASSEMBLY - A4M05457
(x1) 18 1/8"x25"x1 3/4" (45x635x460)

- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

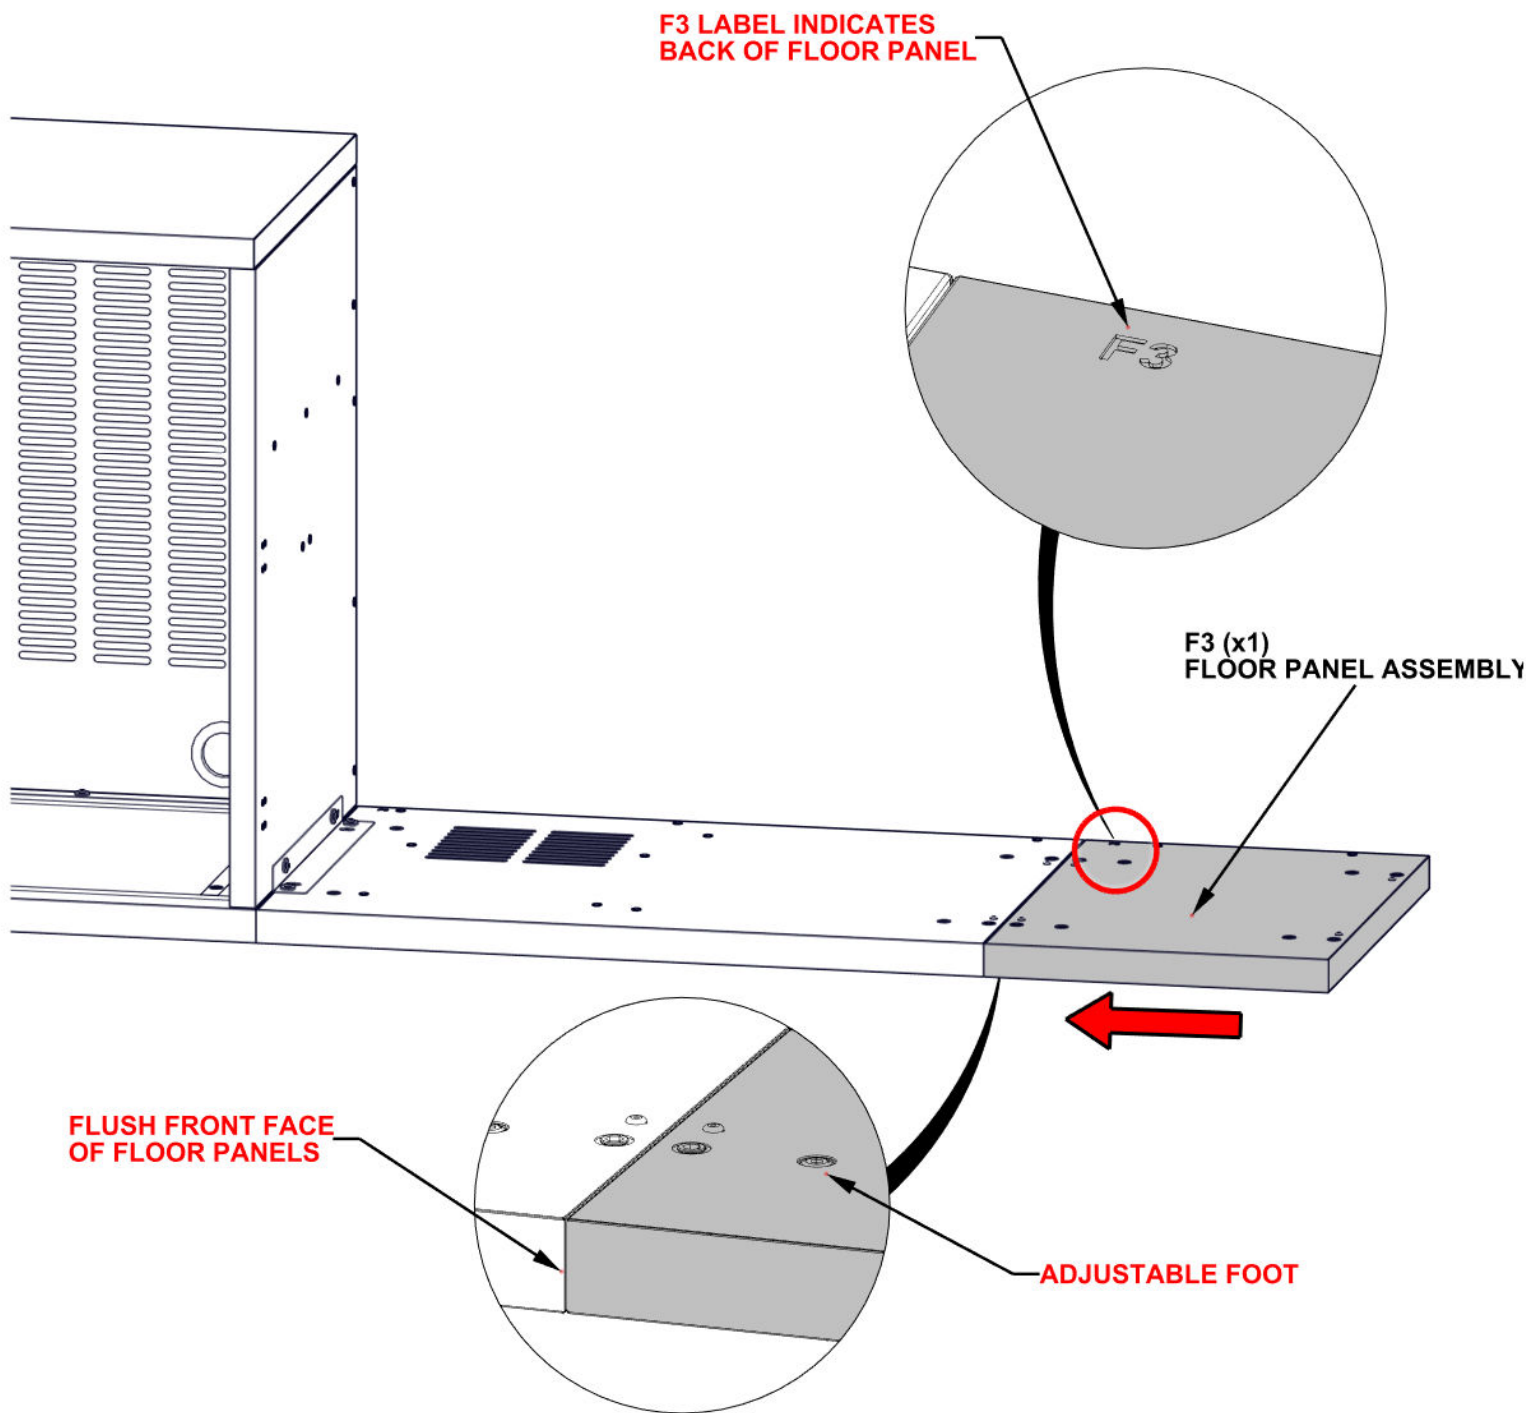


STEP 9- CABINET ASSEMBLY

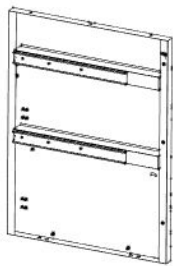


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S4 SIDE PANEL ASSEMBLY - A4M05458
(x1) 33 3/4"x25"x2 11/16" (68x635x857)

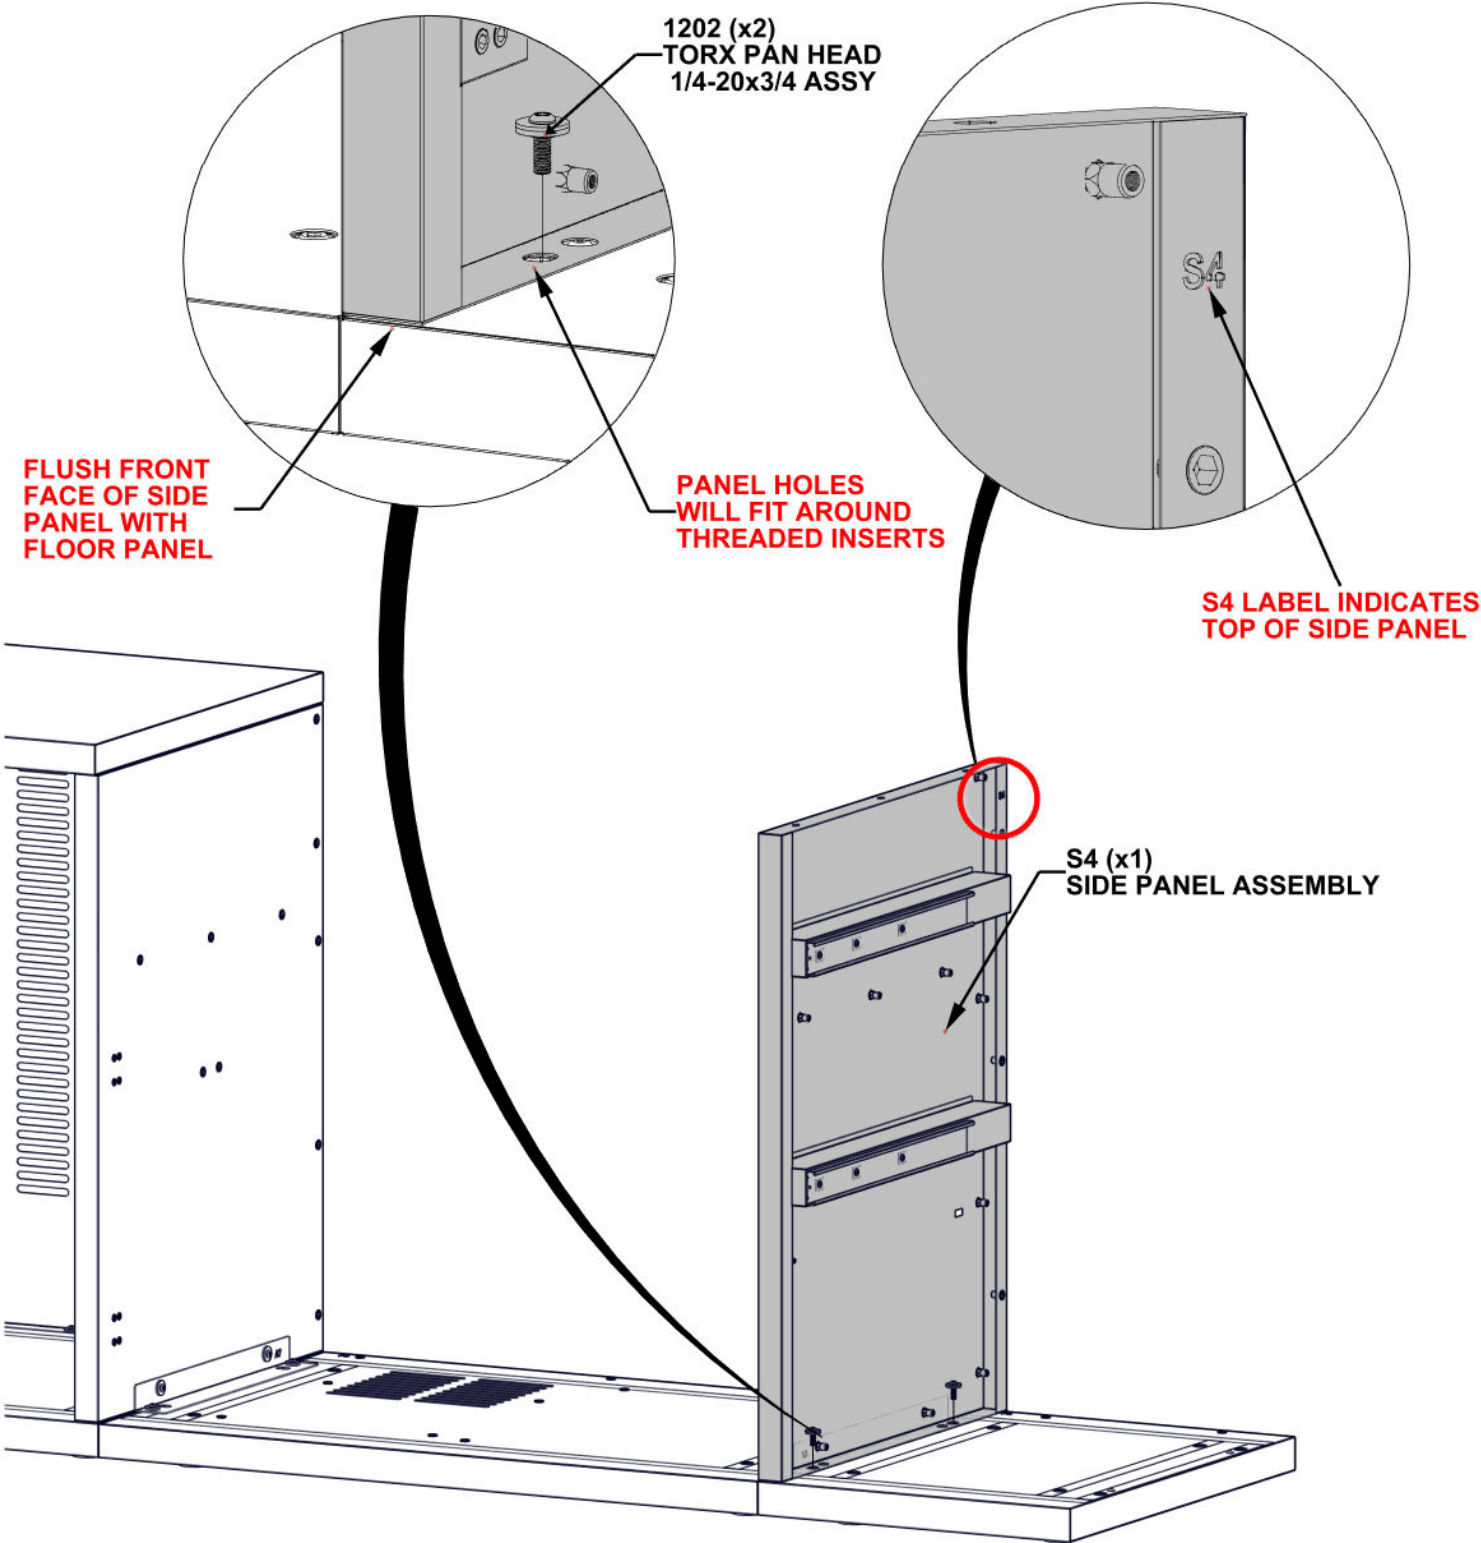


STEP 10- CABINET ASSEMBLY

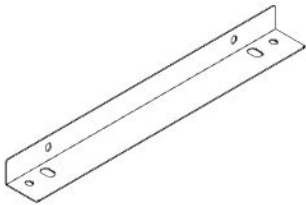


A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x 1 15/16"x17 1/8" (35x50x435)

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

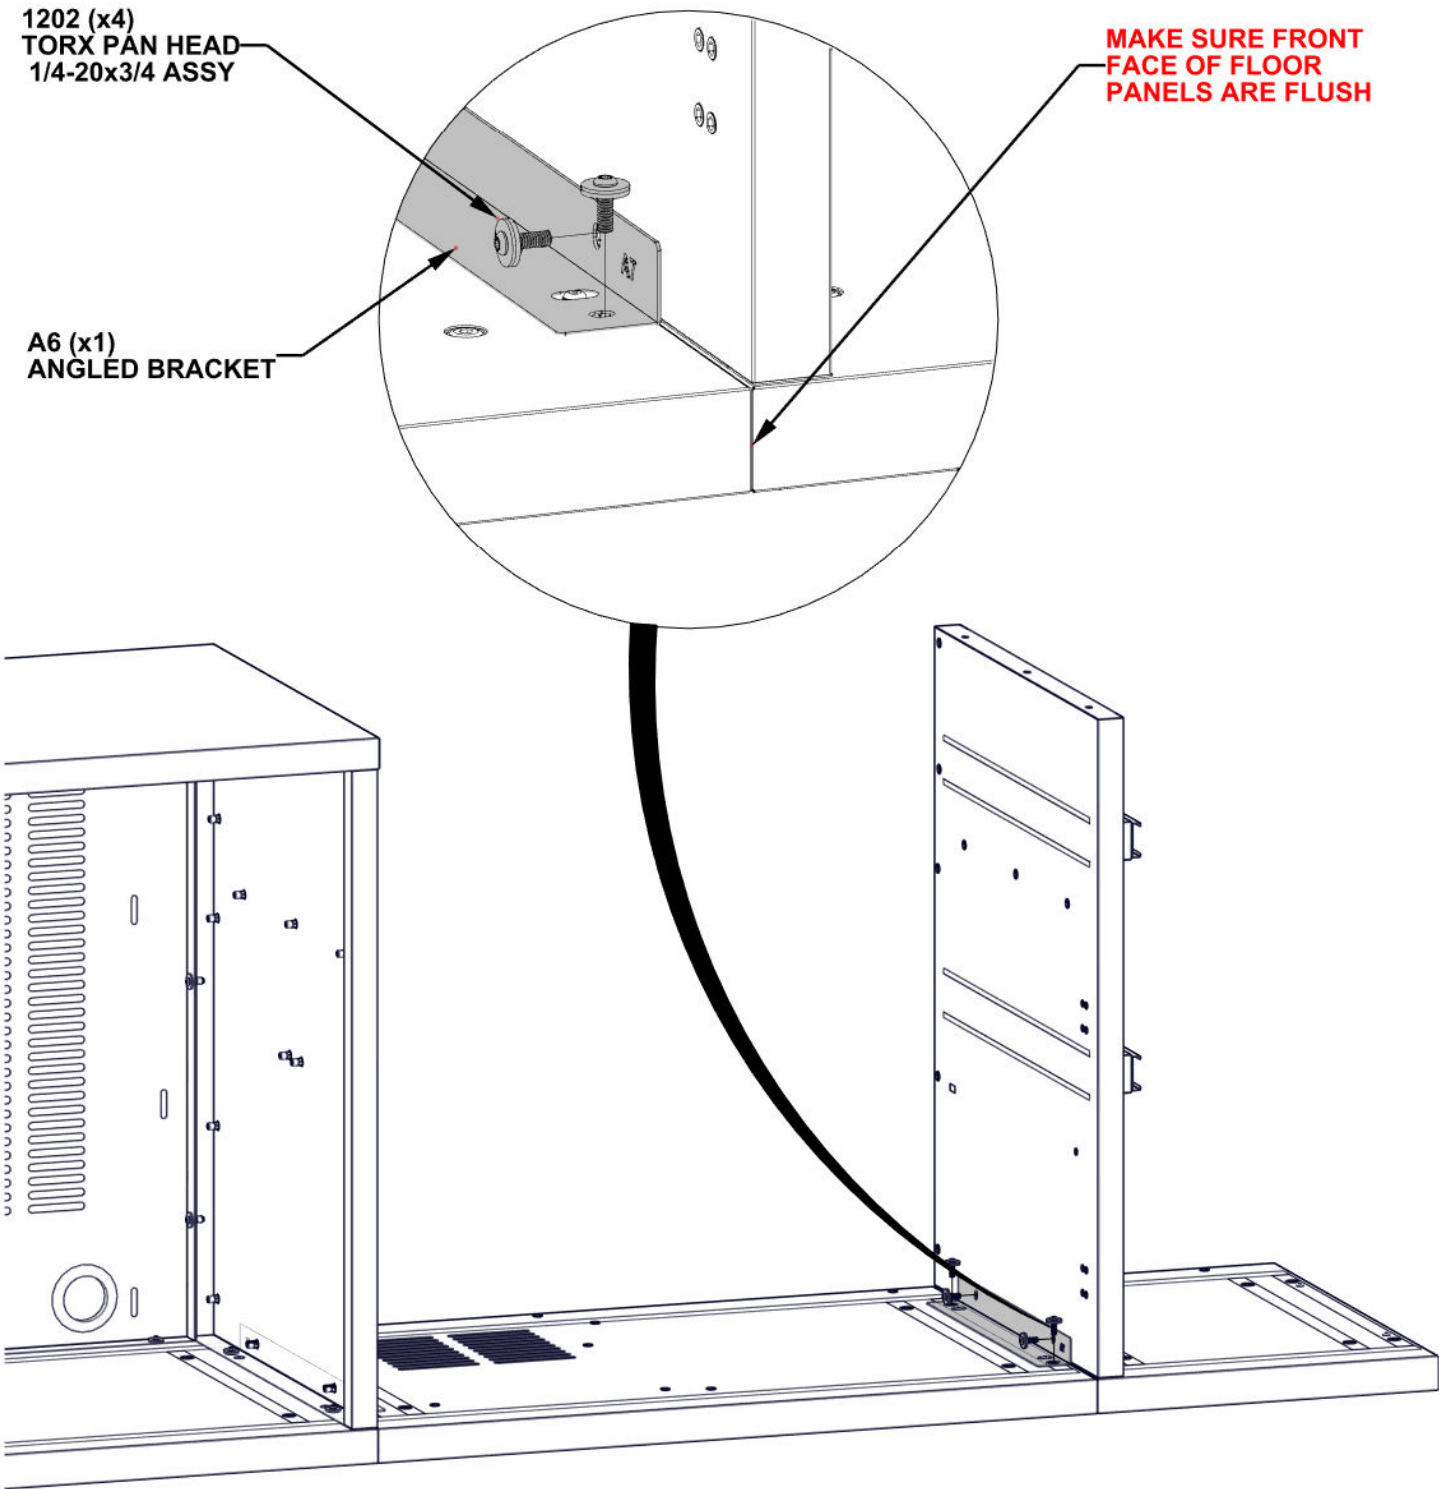


STEP 11- CABINET ASSEMBLY

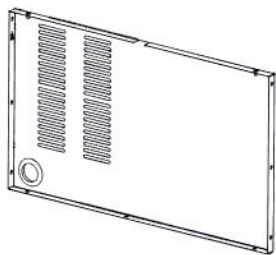


Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G2 BACK PANEL ASSEMBLY - A4M05456
(x1) 38 1/4"x22 5/8"x1 3/16" (30x574x971)

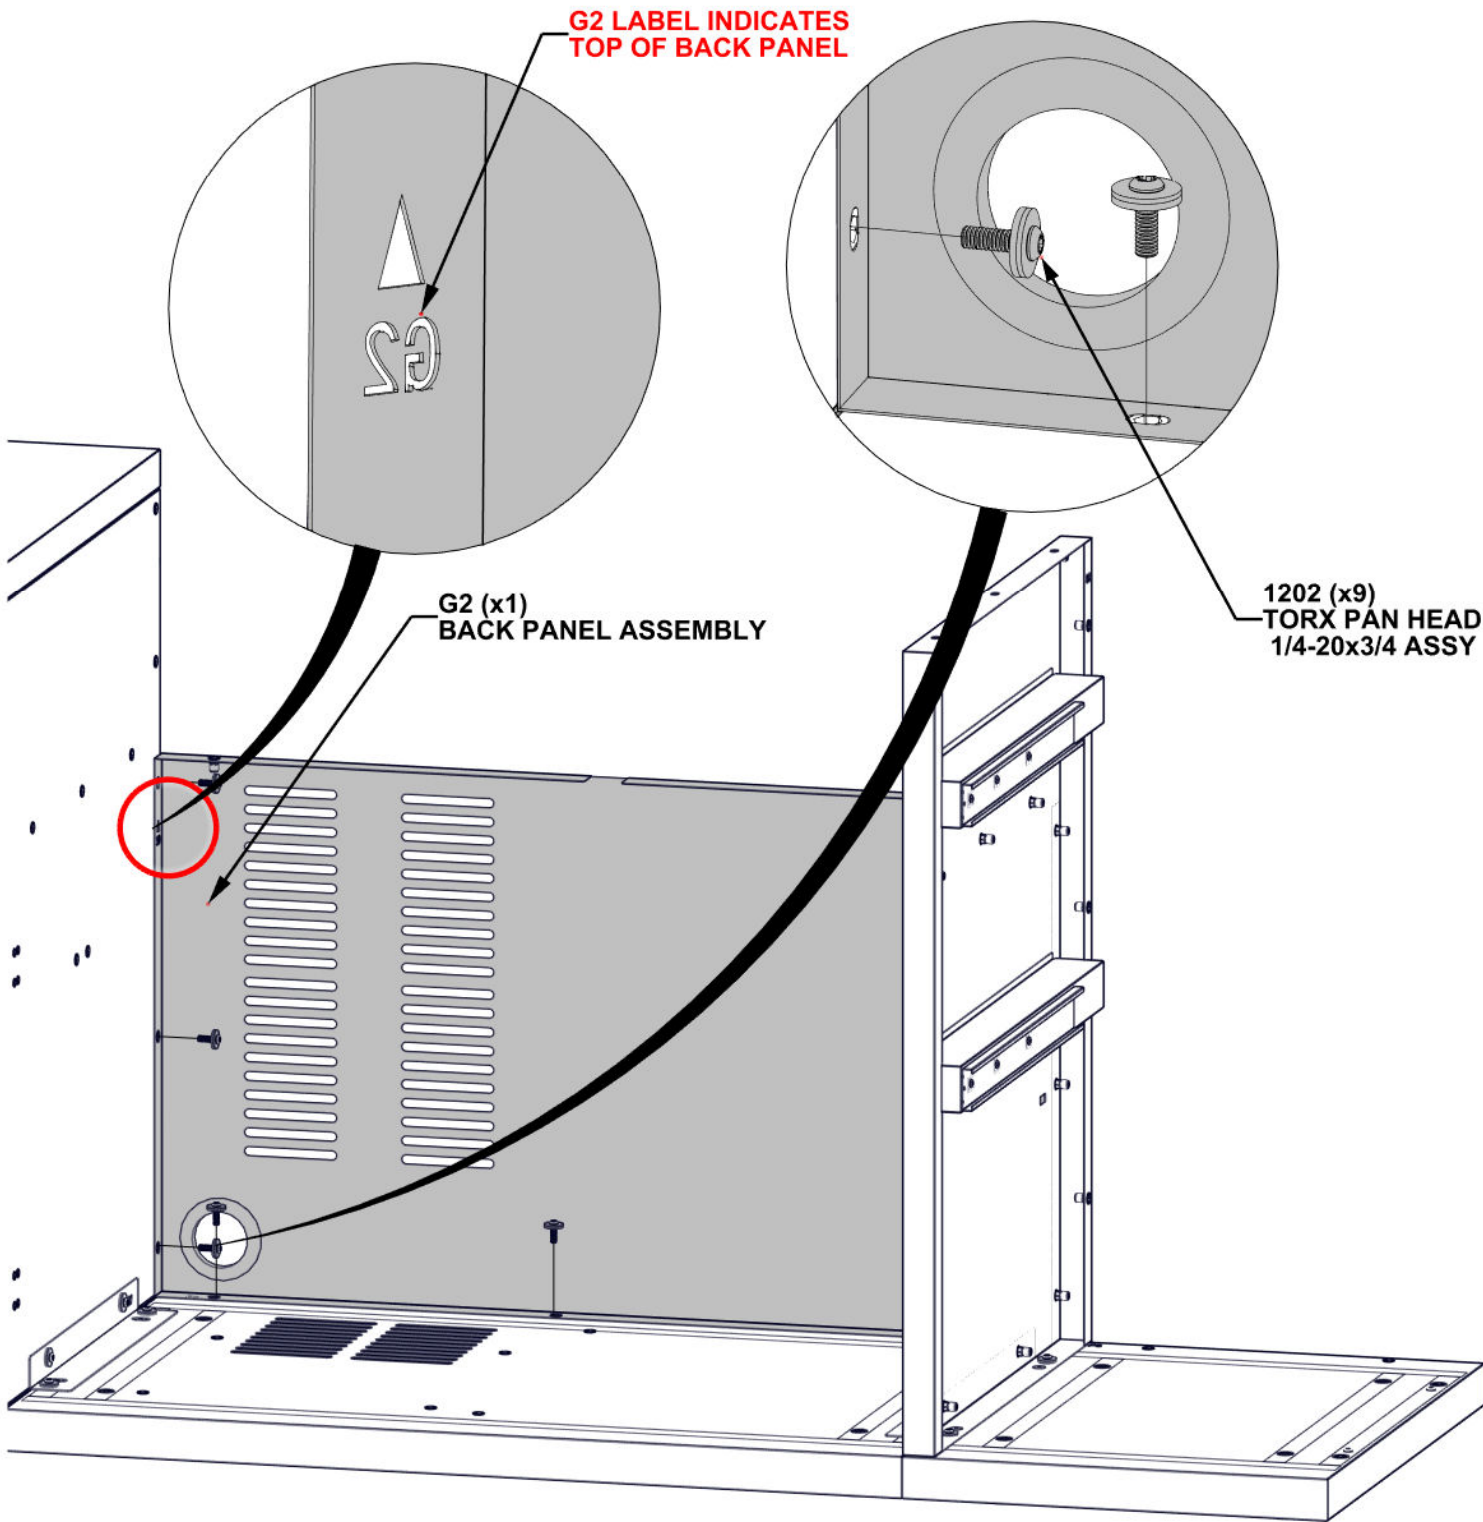


STEP 12- CABINET ASSEMBLY

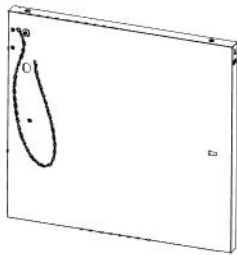


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S3 SIDE PANEL ASSEMBLY M - A4M05485
(x1) 24"x22 5/8"x1 3/8" (35x574x610)

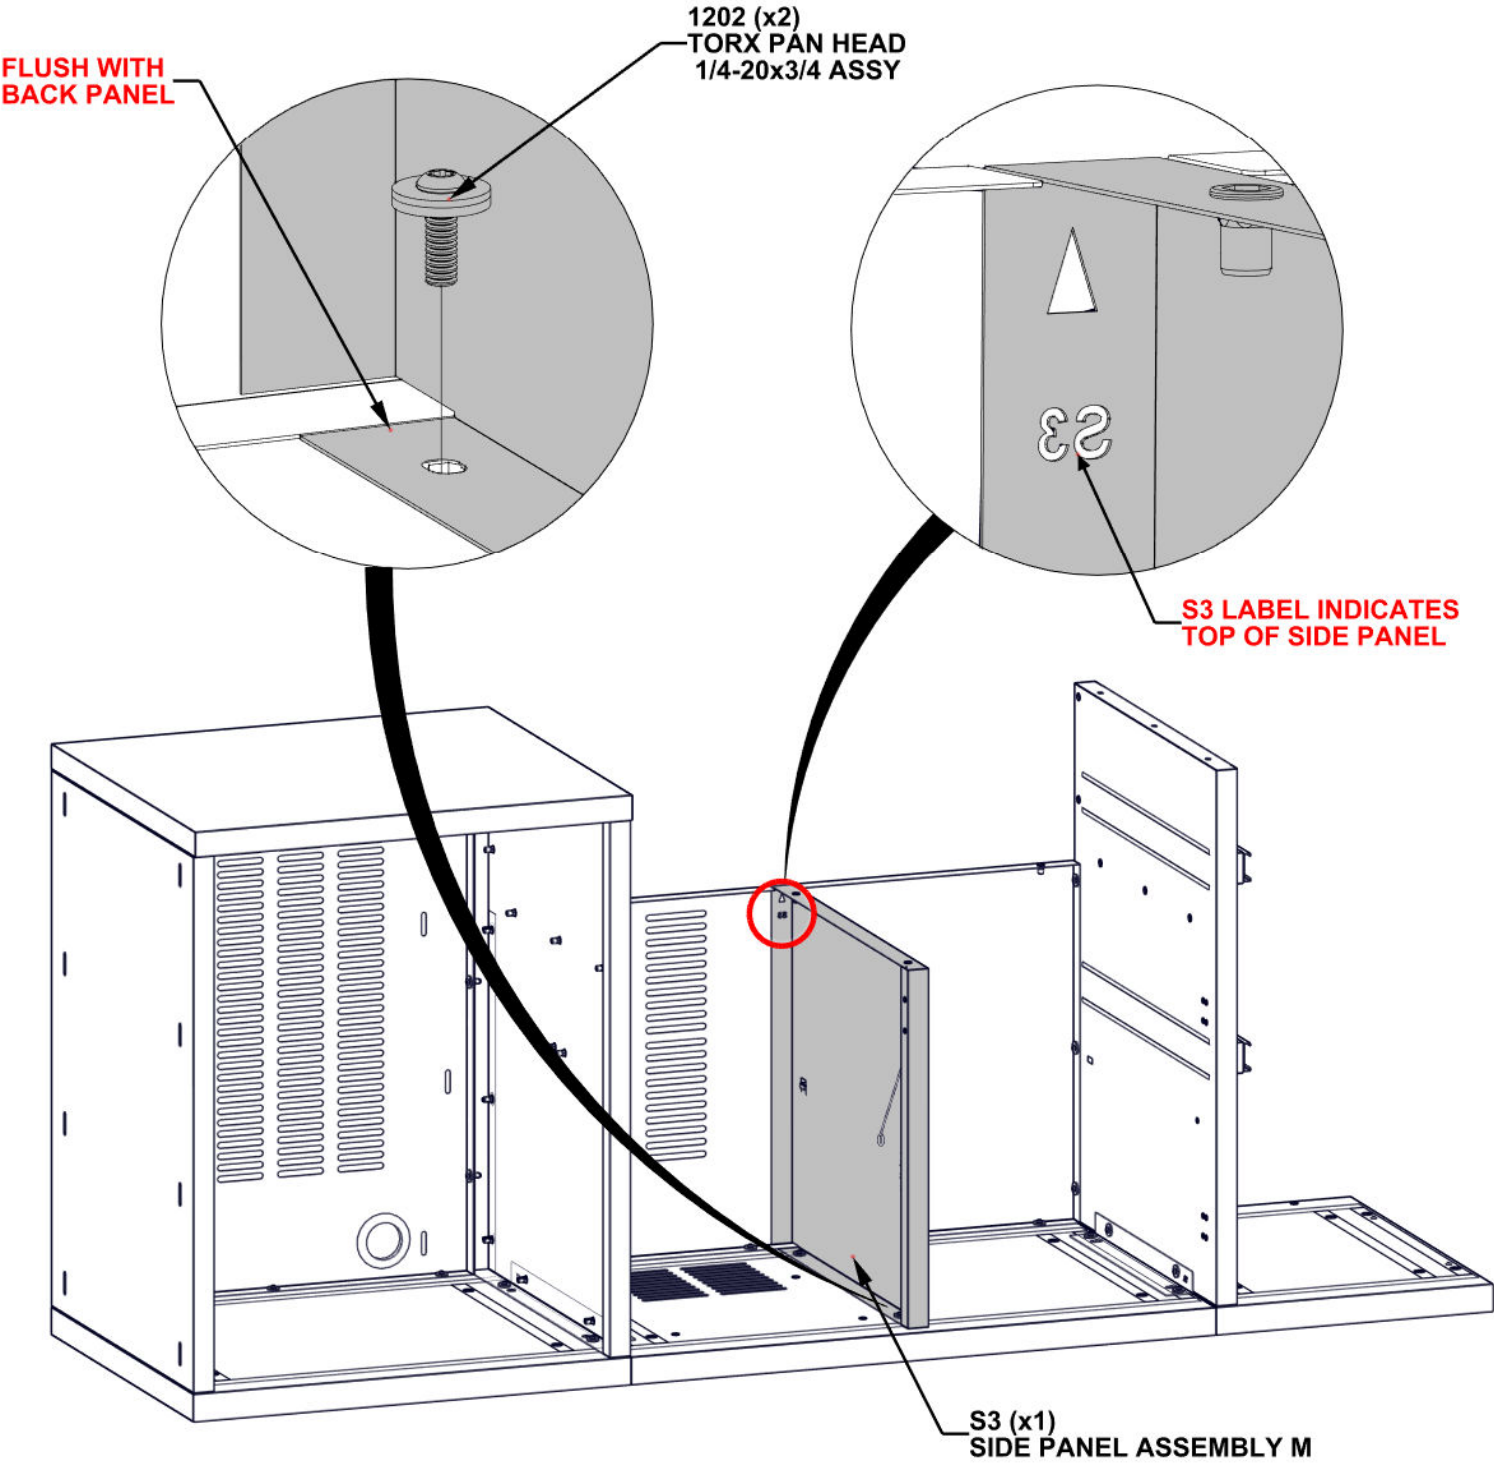


STEP 13- CABINET ASSEMBLY

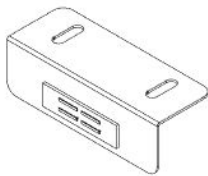

Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS


A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

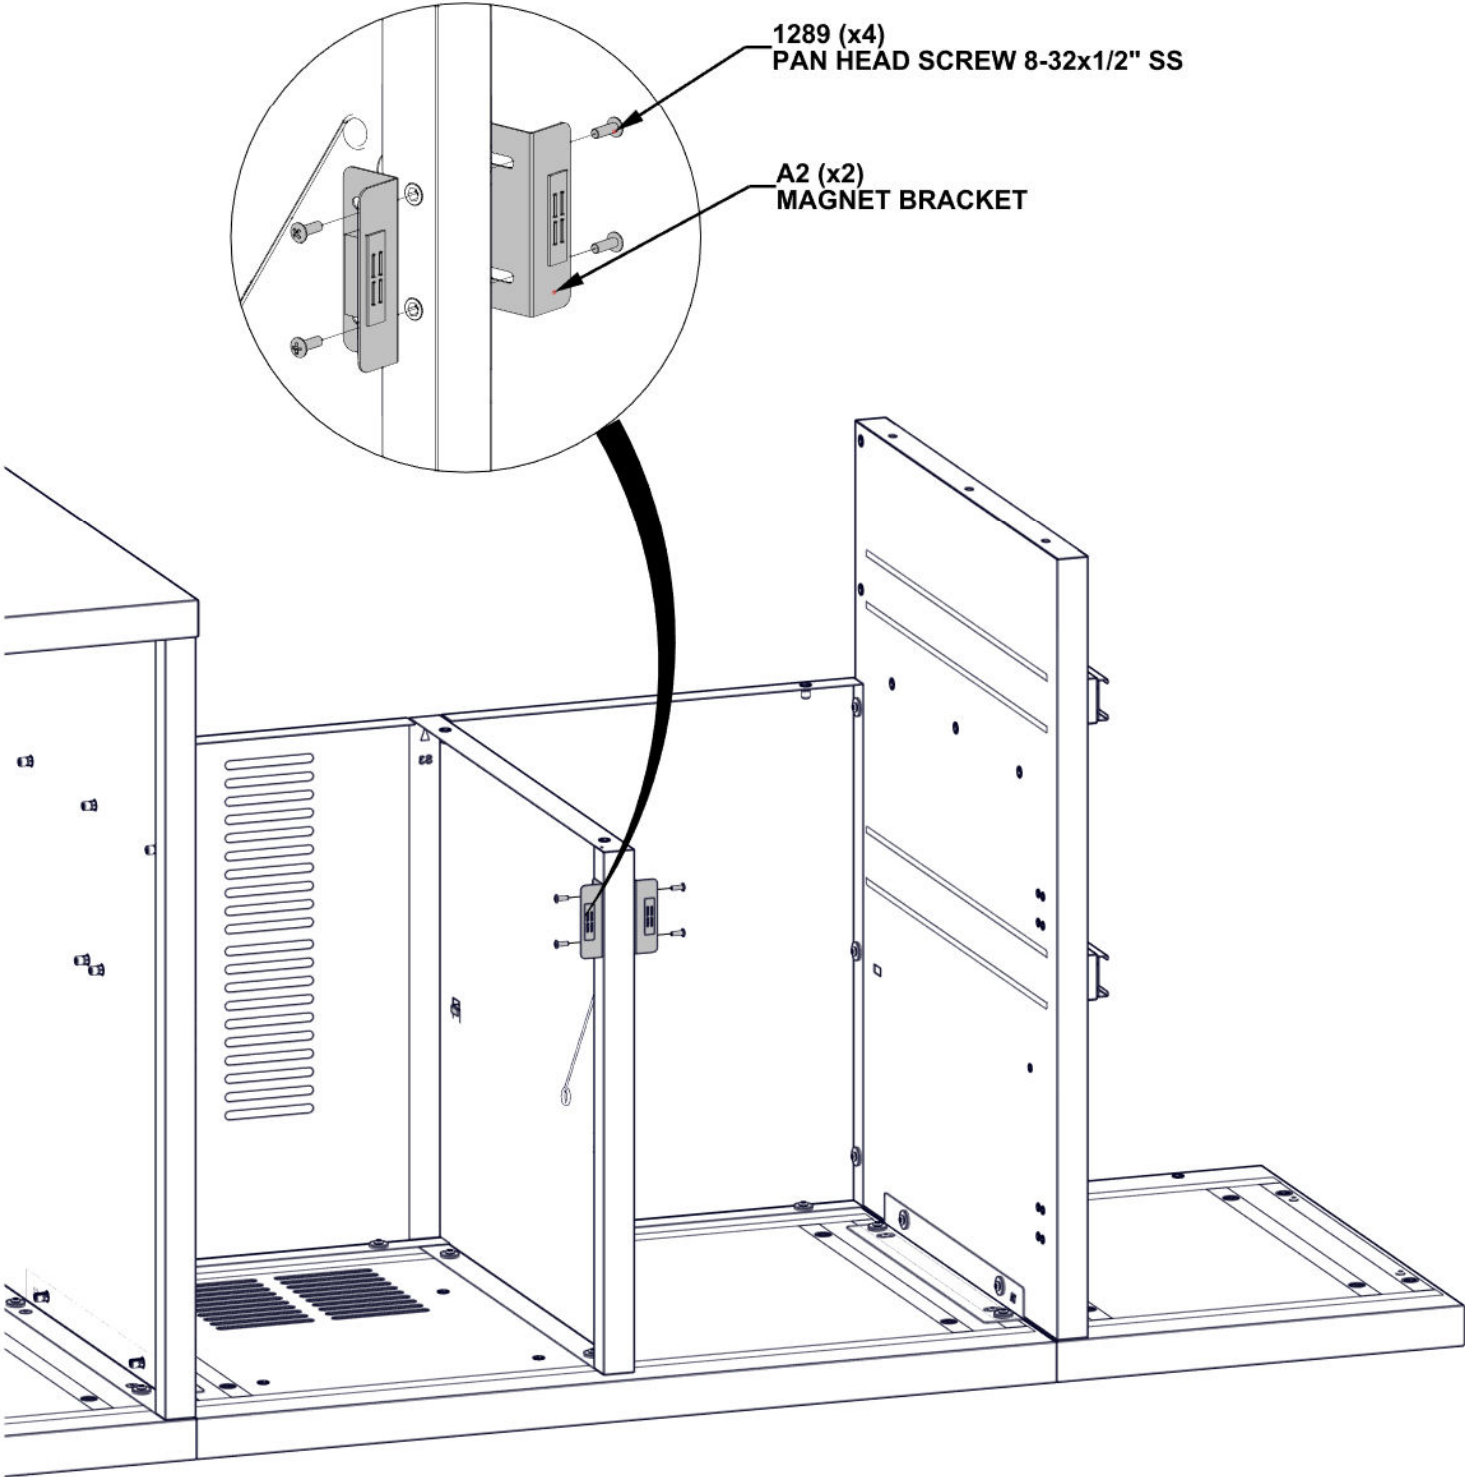

1289 (x4)
PAN HEAD SCREW 8-32x1/2" SS


A2 (x2)
MAGNET BRACKET

STEP 14- CABINET ASSEMBLY

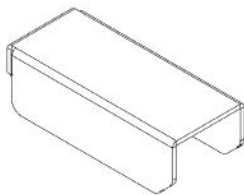


A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER CABINET.

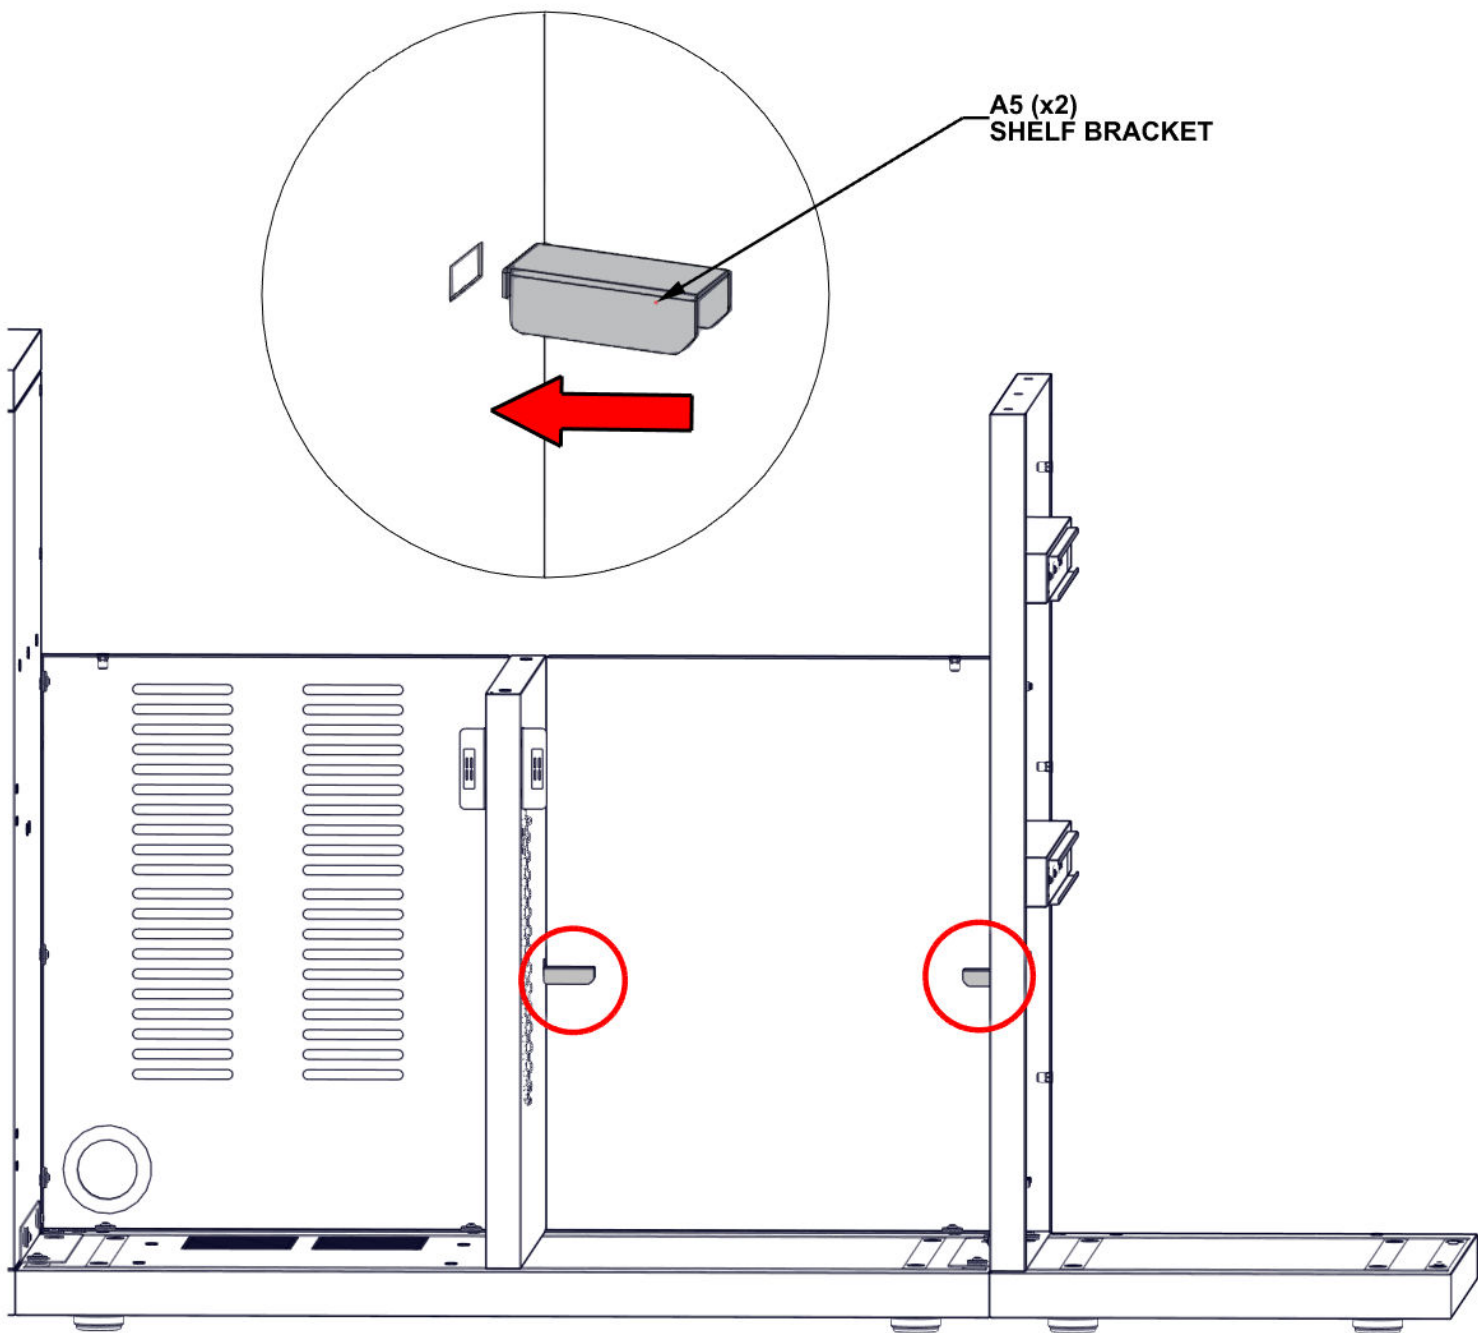


STEP 15- CABINET ASSEMBLY

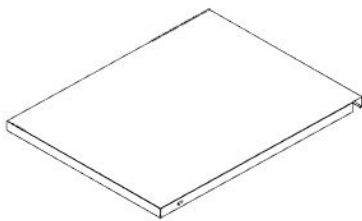

L1 SHELFF - A4M05486
(x1) 24"x18 3/8"x1" (25x467x610)

Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS


L1 (x1)
SHELF

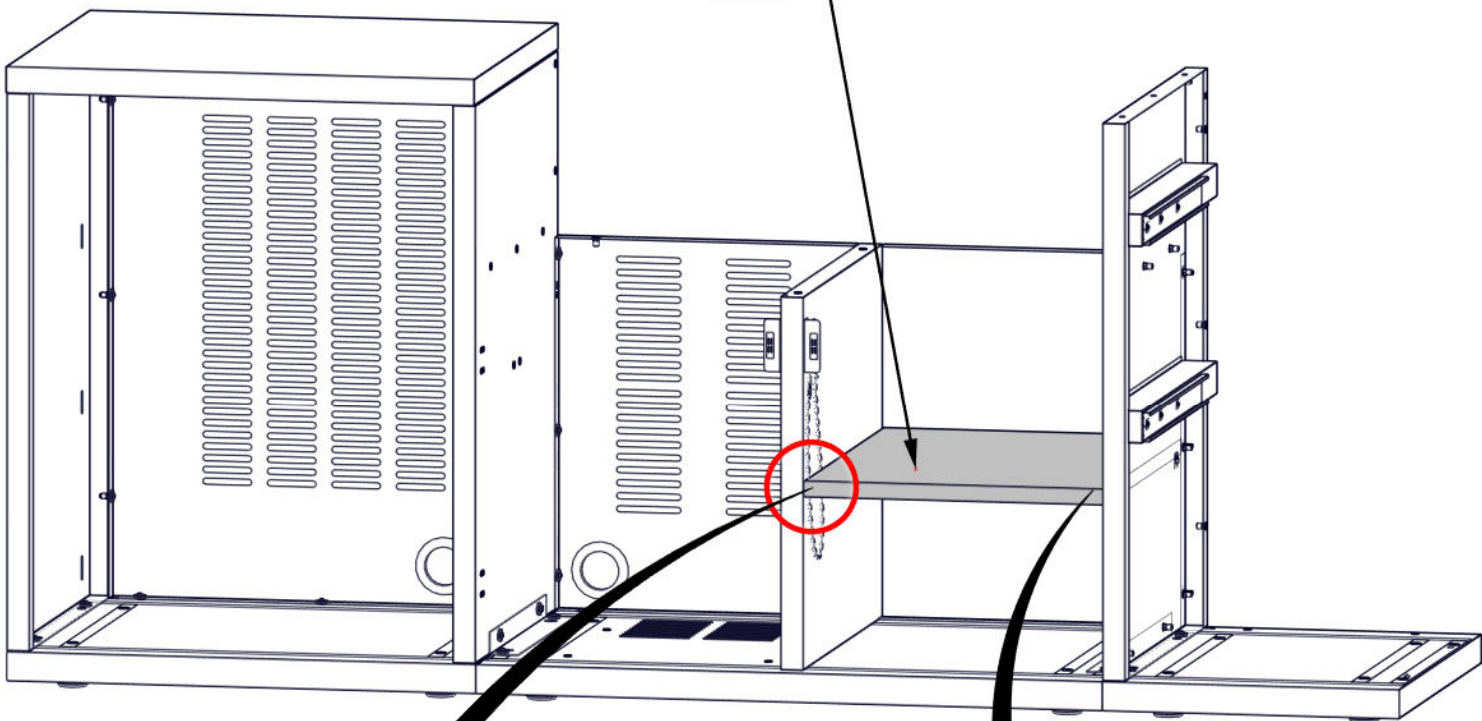

L1 LABEL INDICATES
TOP OF FRONT SHELF



1289 (x2)
PAN HEAD SCREW 8-32x1/2" SS

STEP 16- CABINET ASSEMBLY

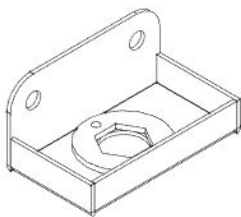


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16"(31.5x36.5x65)

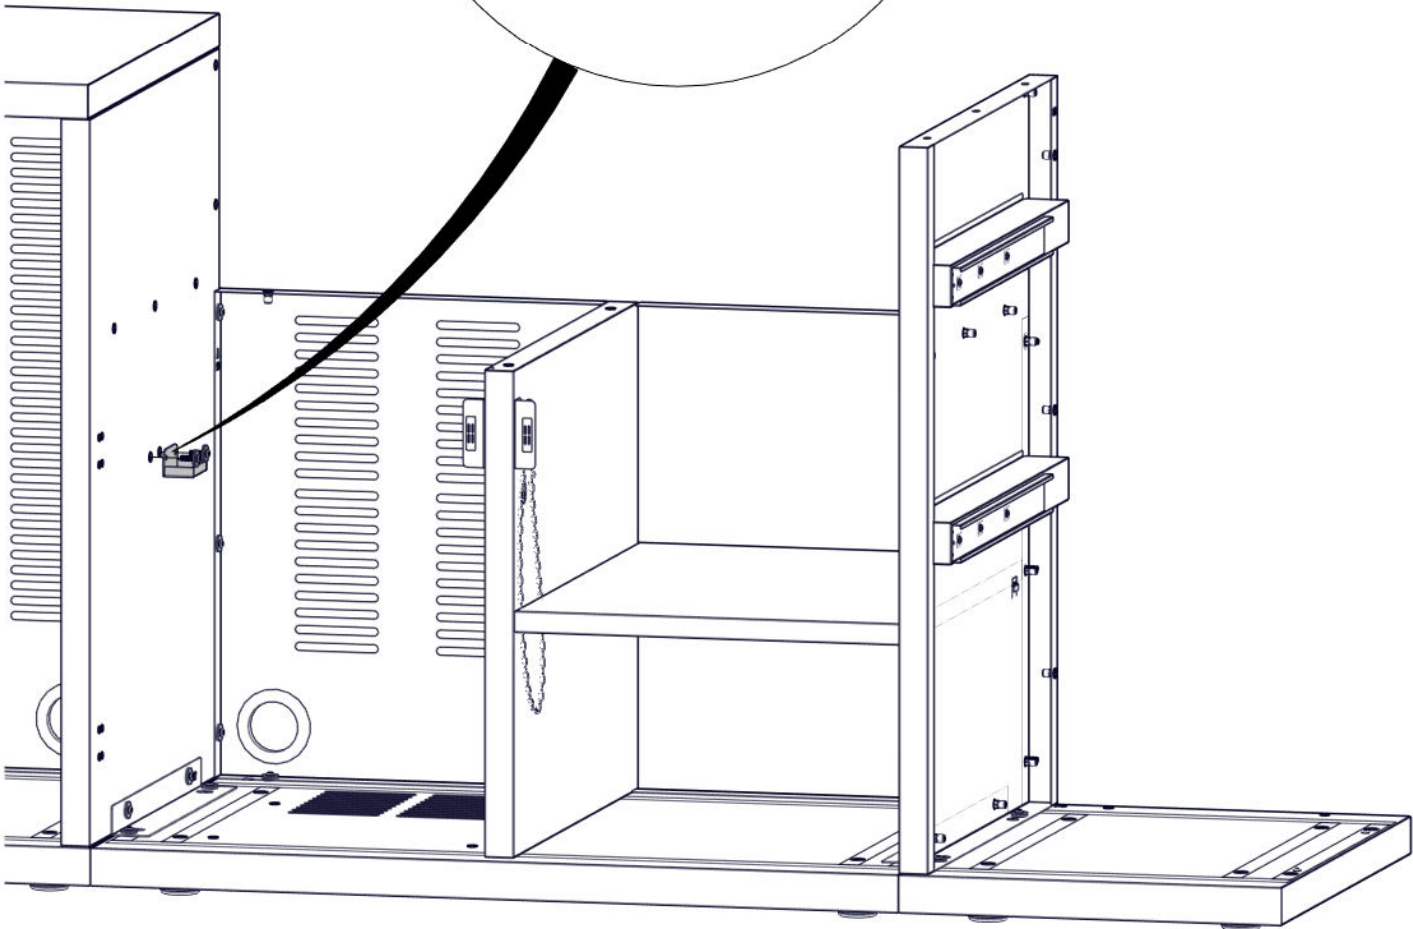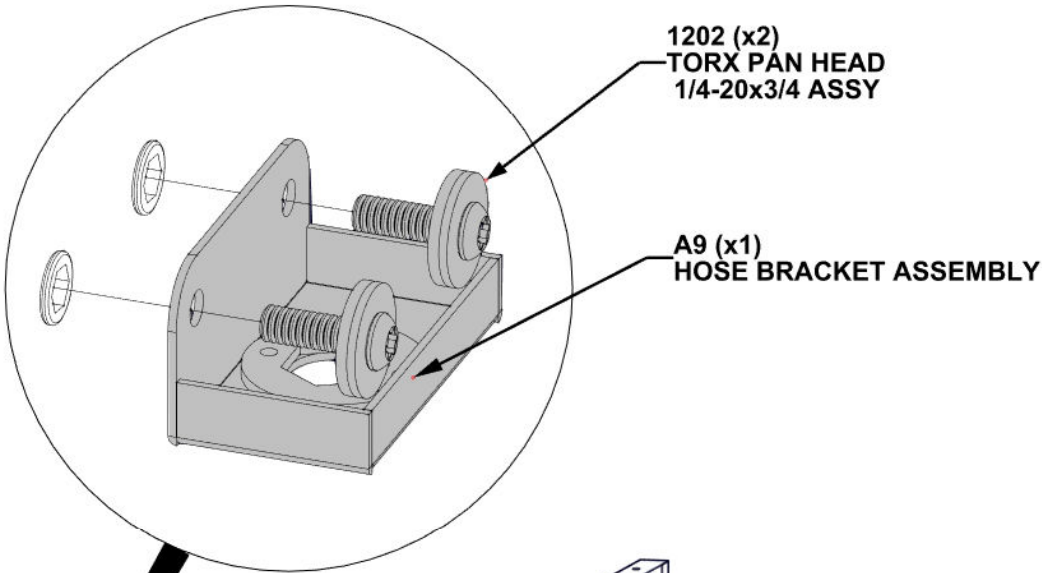


STEP 17- CABINET ASSEMBLY

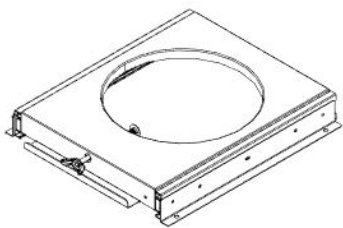

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"



A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

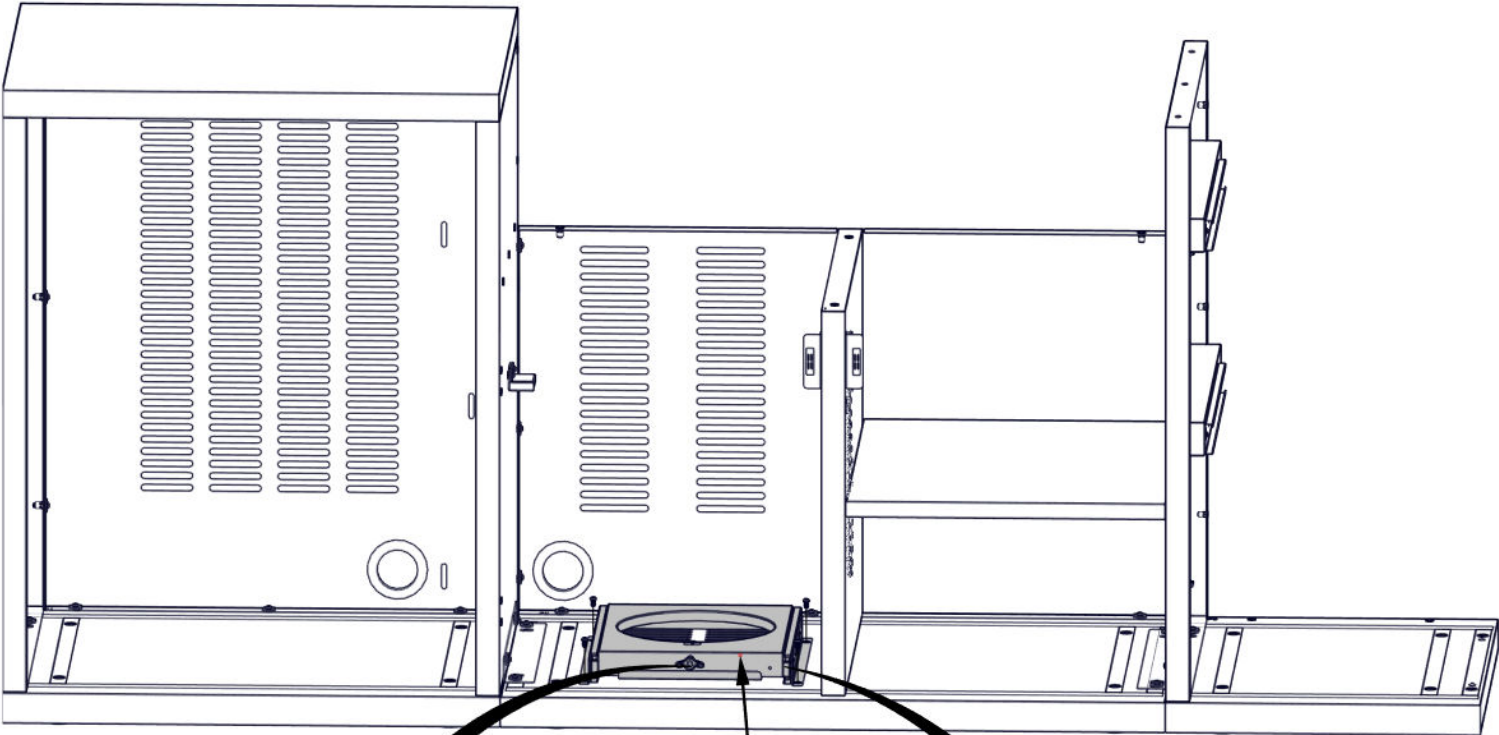


A13 (x1)
GAS TANK HOLDER ASSEMBLY

1292 (x4)
TORX PAN HEAD
1/4-20x13/32"

NOTE ORIENTATION
OF WING NUT
TOWARDS FRONT

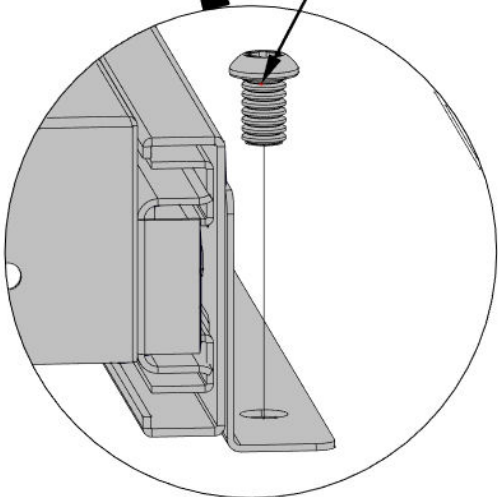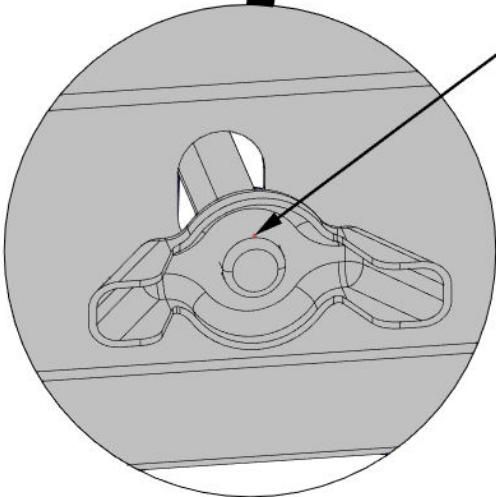

STEP 18- CABINET ASSEMBLY

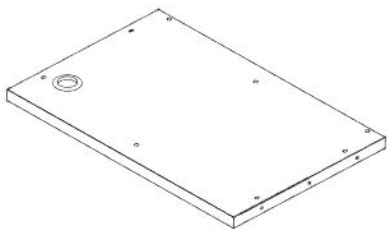


Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

T2 TABLETOP PANEL ASSEMBLY - A4M05455
(x1) 38 1/4"x25"x1 9/16" (40x635x971)


FLUSH BACK AND SIDES OF PANEL ASSEMBLY.

- ALIGN SLOTS IN TABLETOP WITH THREADED INSERTS IN SIDE AND BACK PANELS.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.
- DO NOT USE TABLETOP SURFACE AS A WORK BENCH.

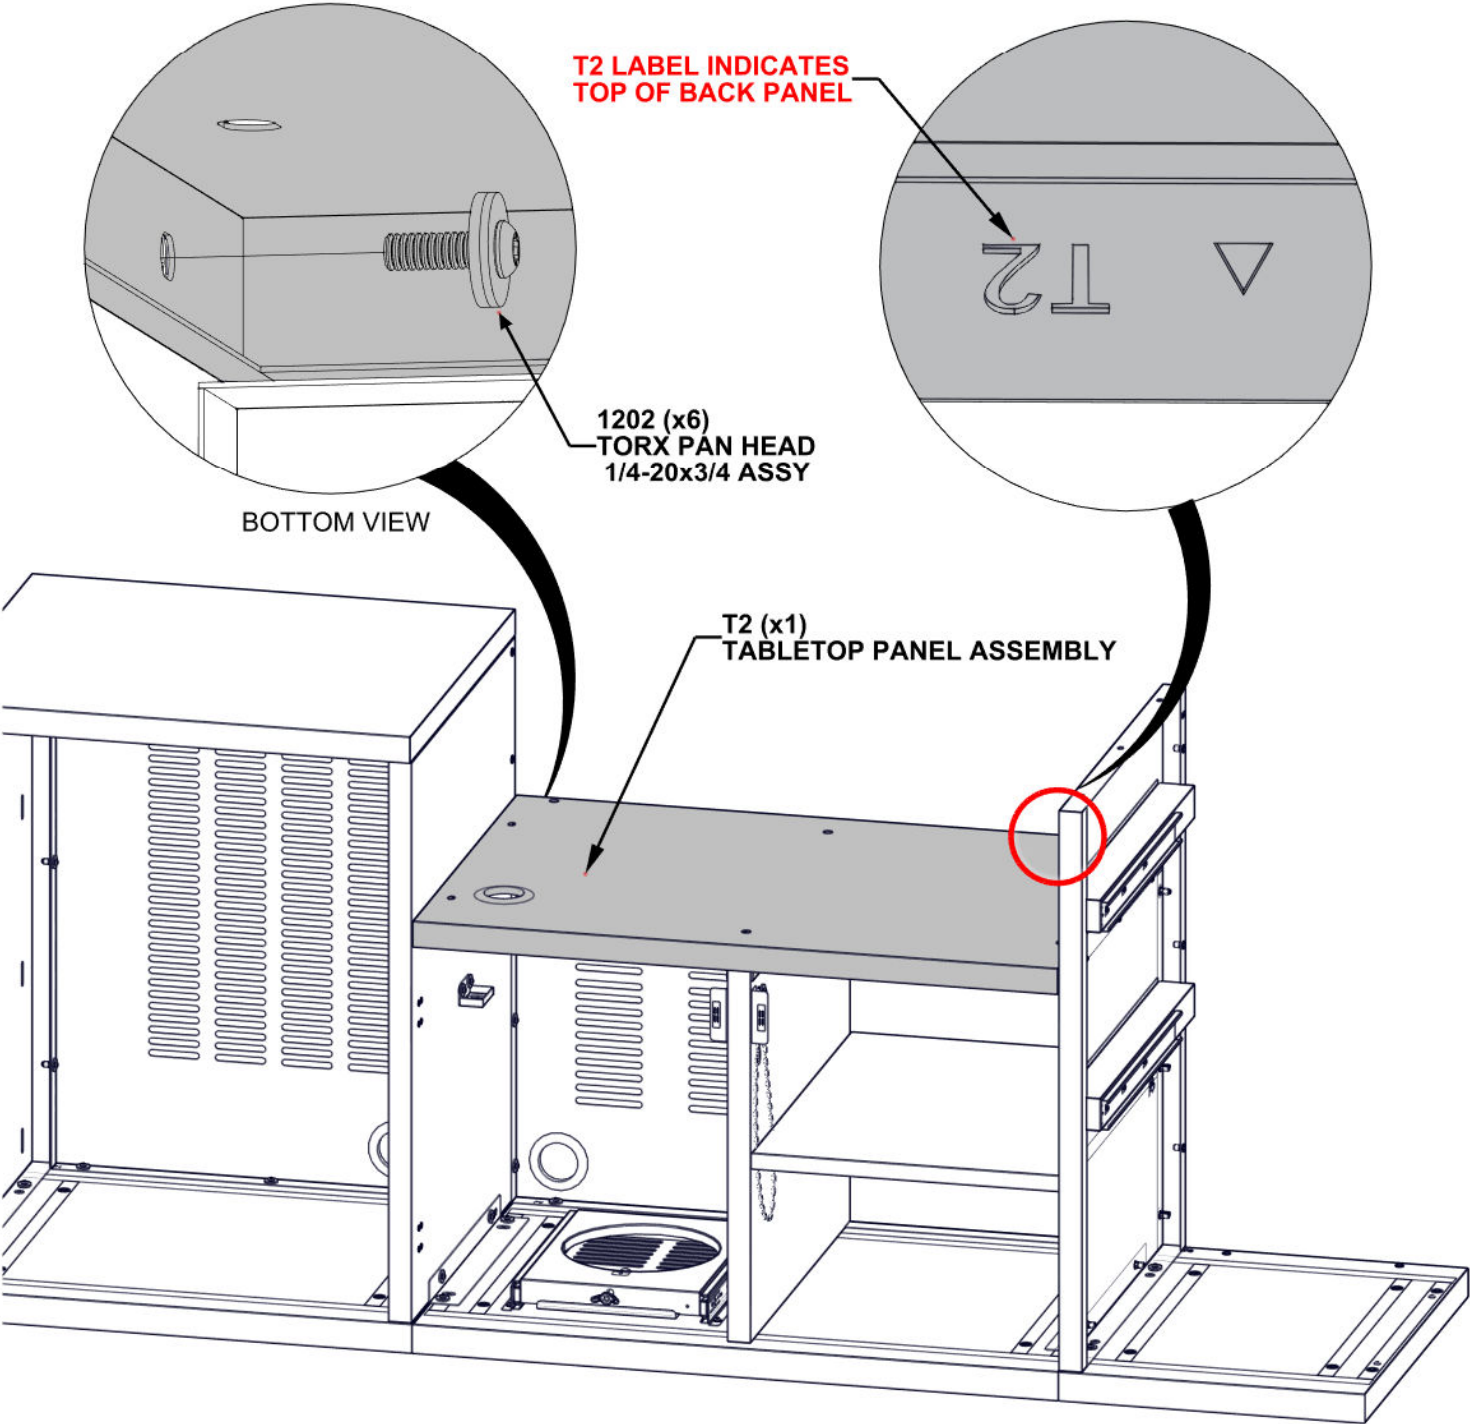

STEP 19 - CABINET ASSEMBLY


Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20

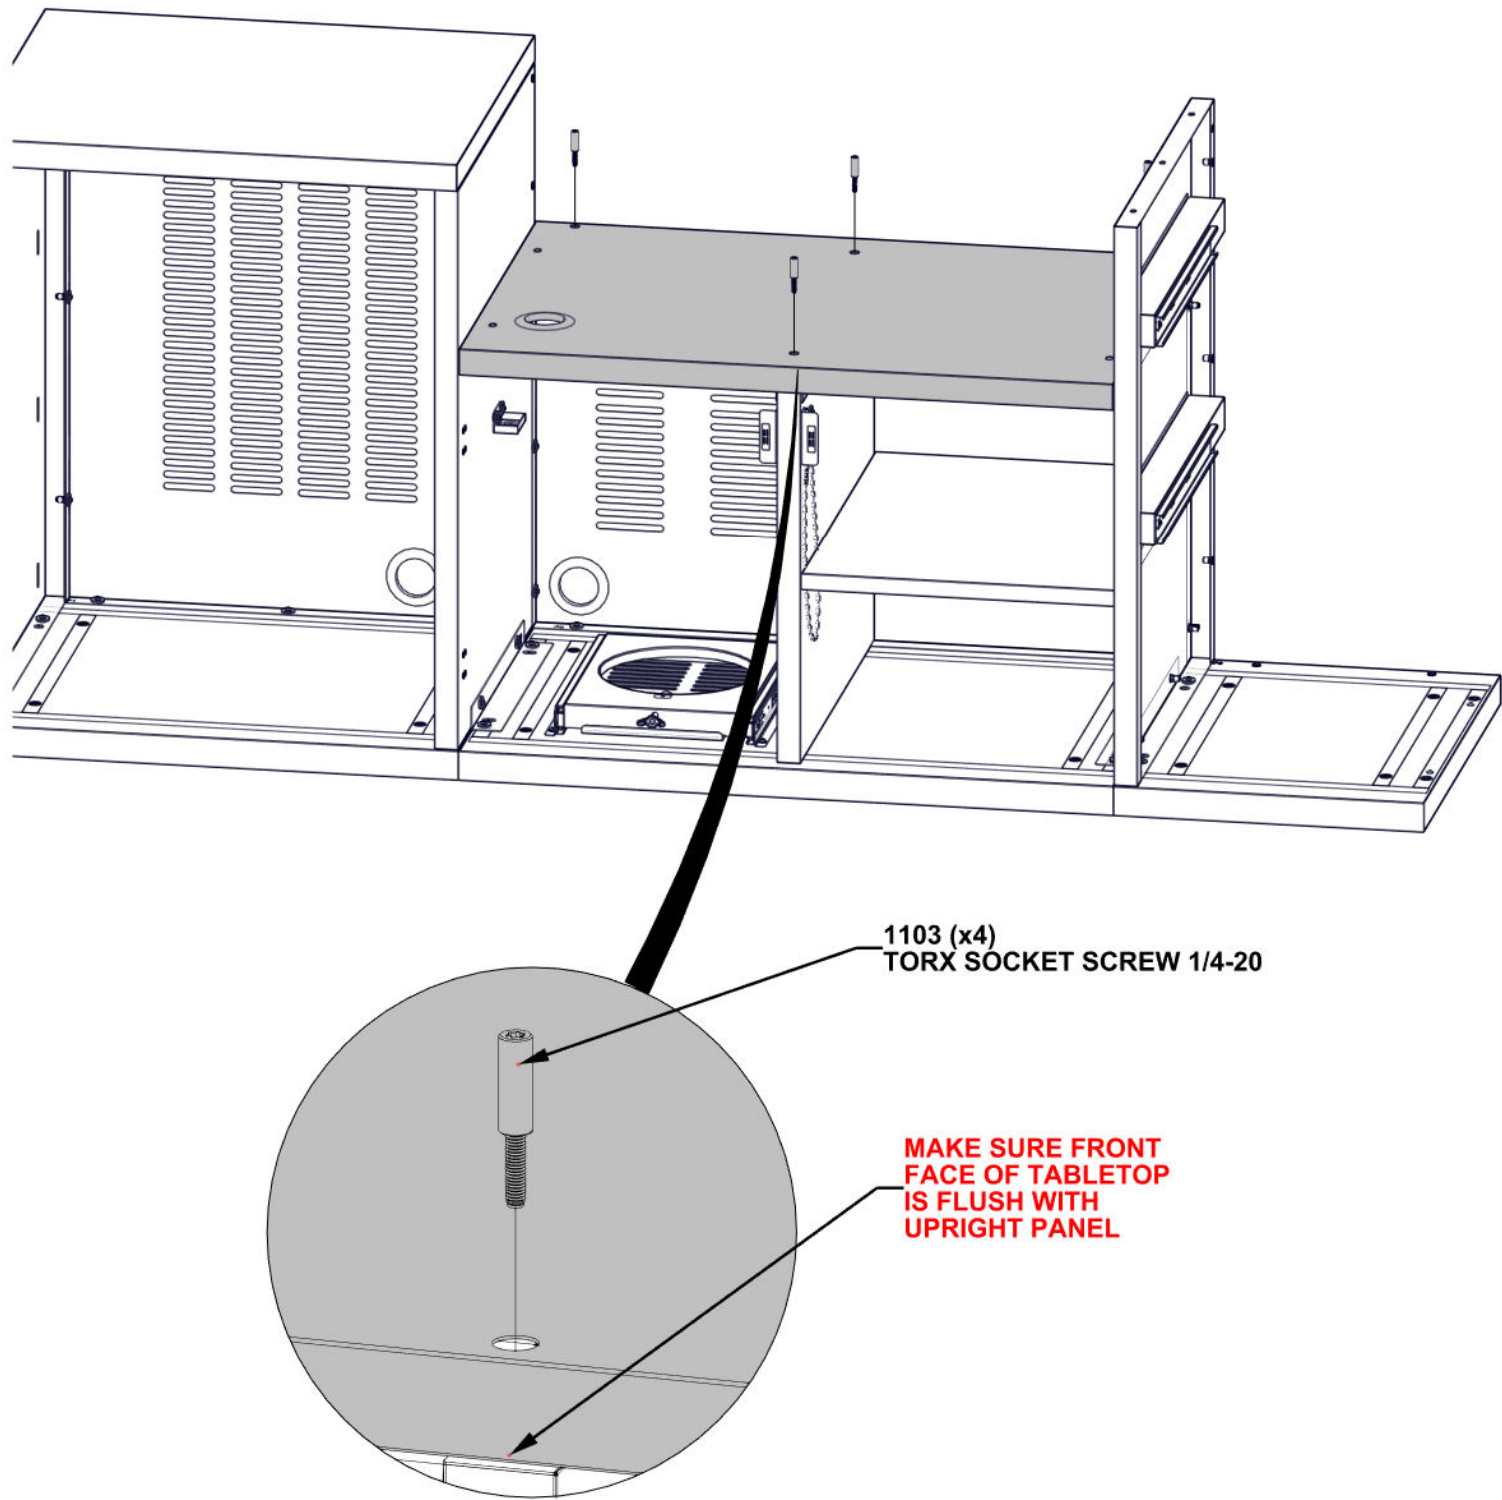

1103 (x4)
TORX SOCKET SCREW 1/4-20


MAKE SURE FRONT
FACE OF TABLETOP
IS FLUSH WITH
UPRIGHT PANEL

STEP 20- CABINET ASSEMBLY

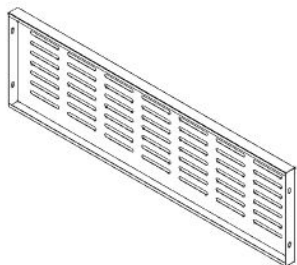

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G11 VENTILATION PANEL - A4M03056
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)

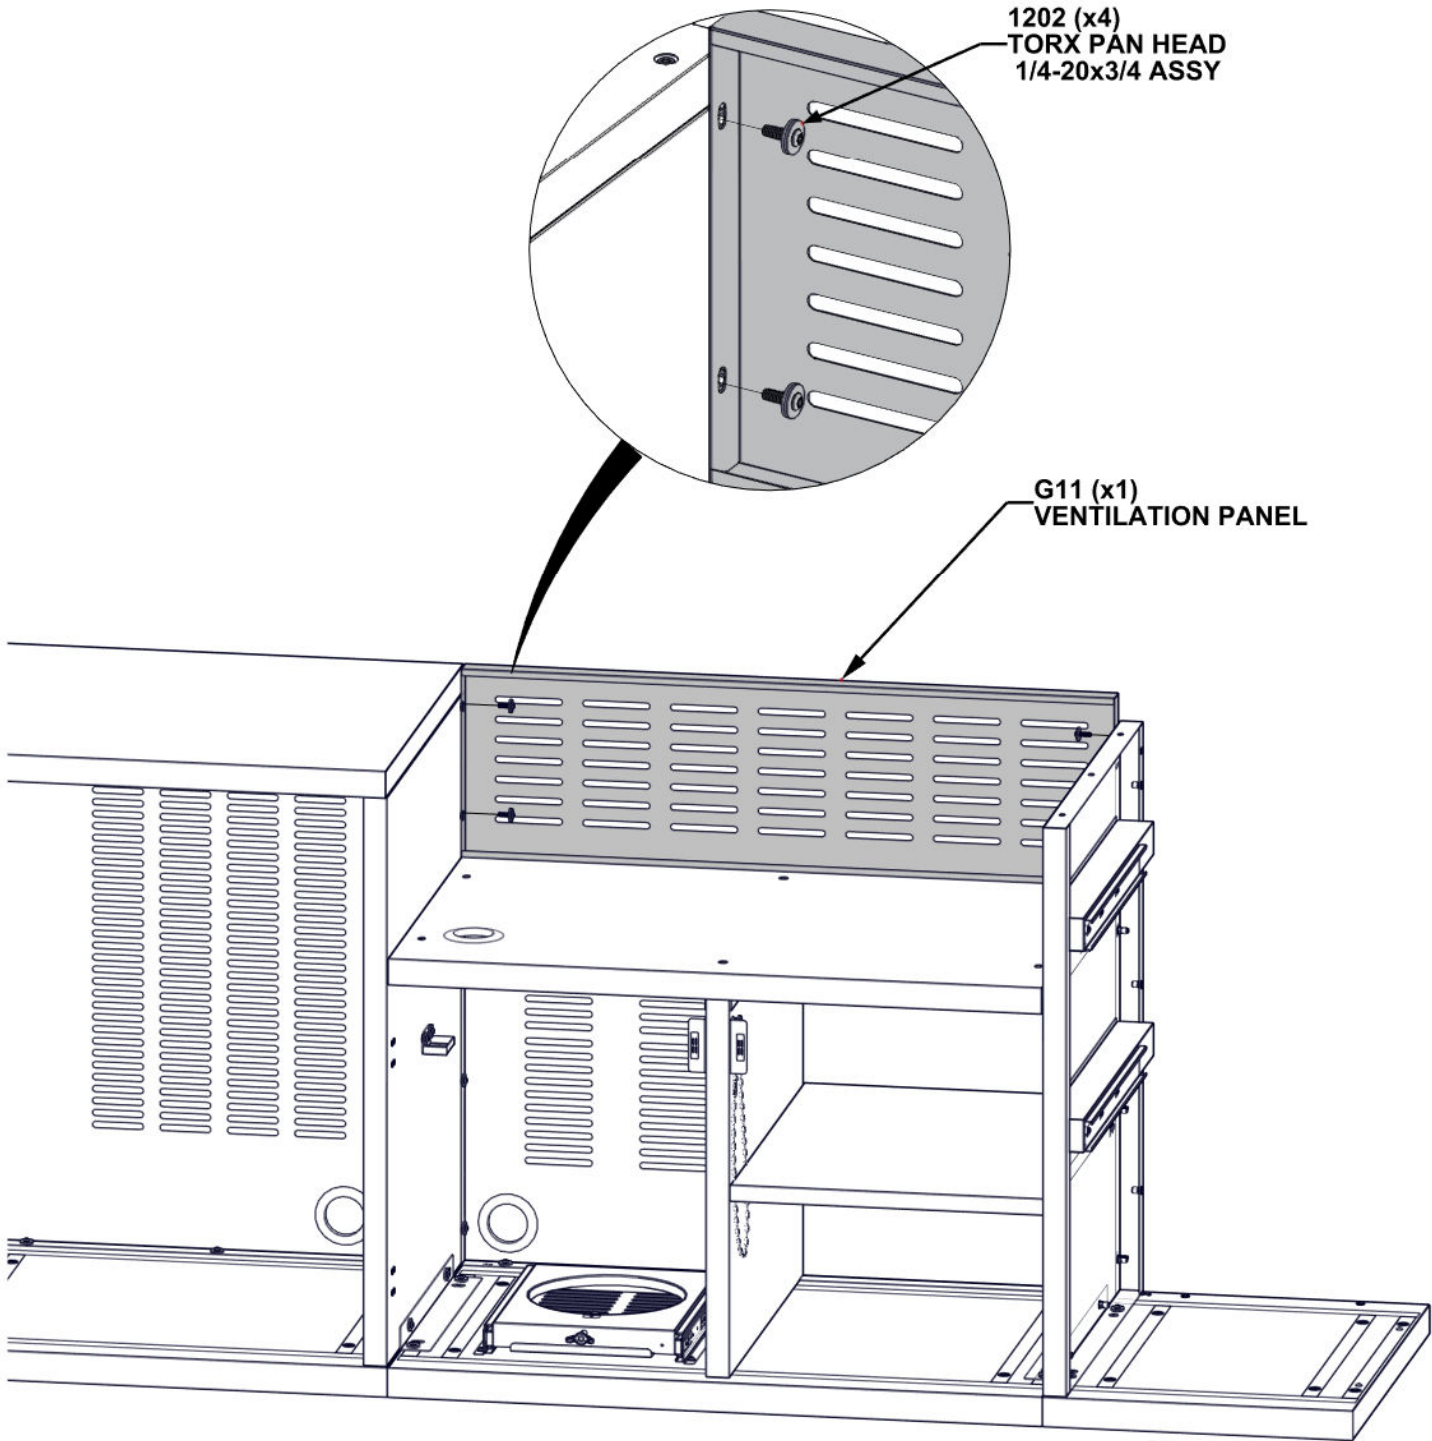


STEP 21- CABINET ASSEMBLY



Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S5 SIDE PANEL ASSEMBLY - A4M05460
(x1) 33 3/4"x25"x1 3/8" (35x635.0x857)

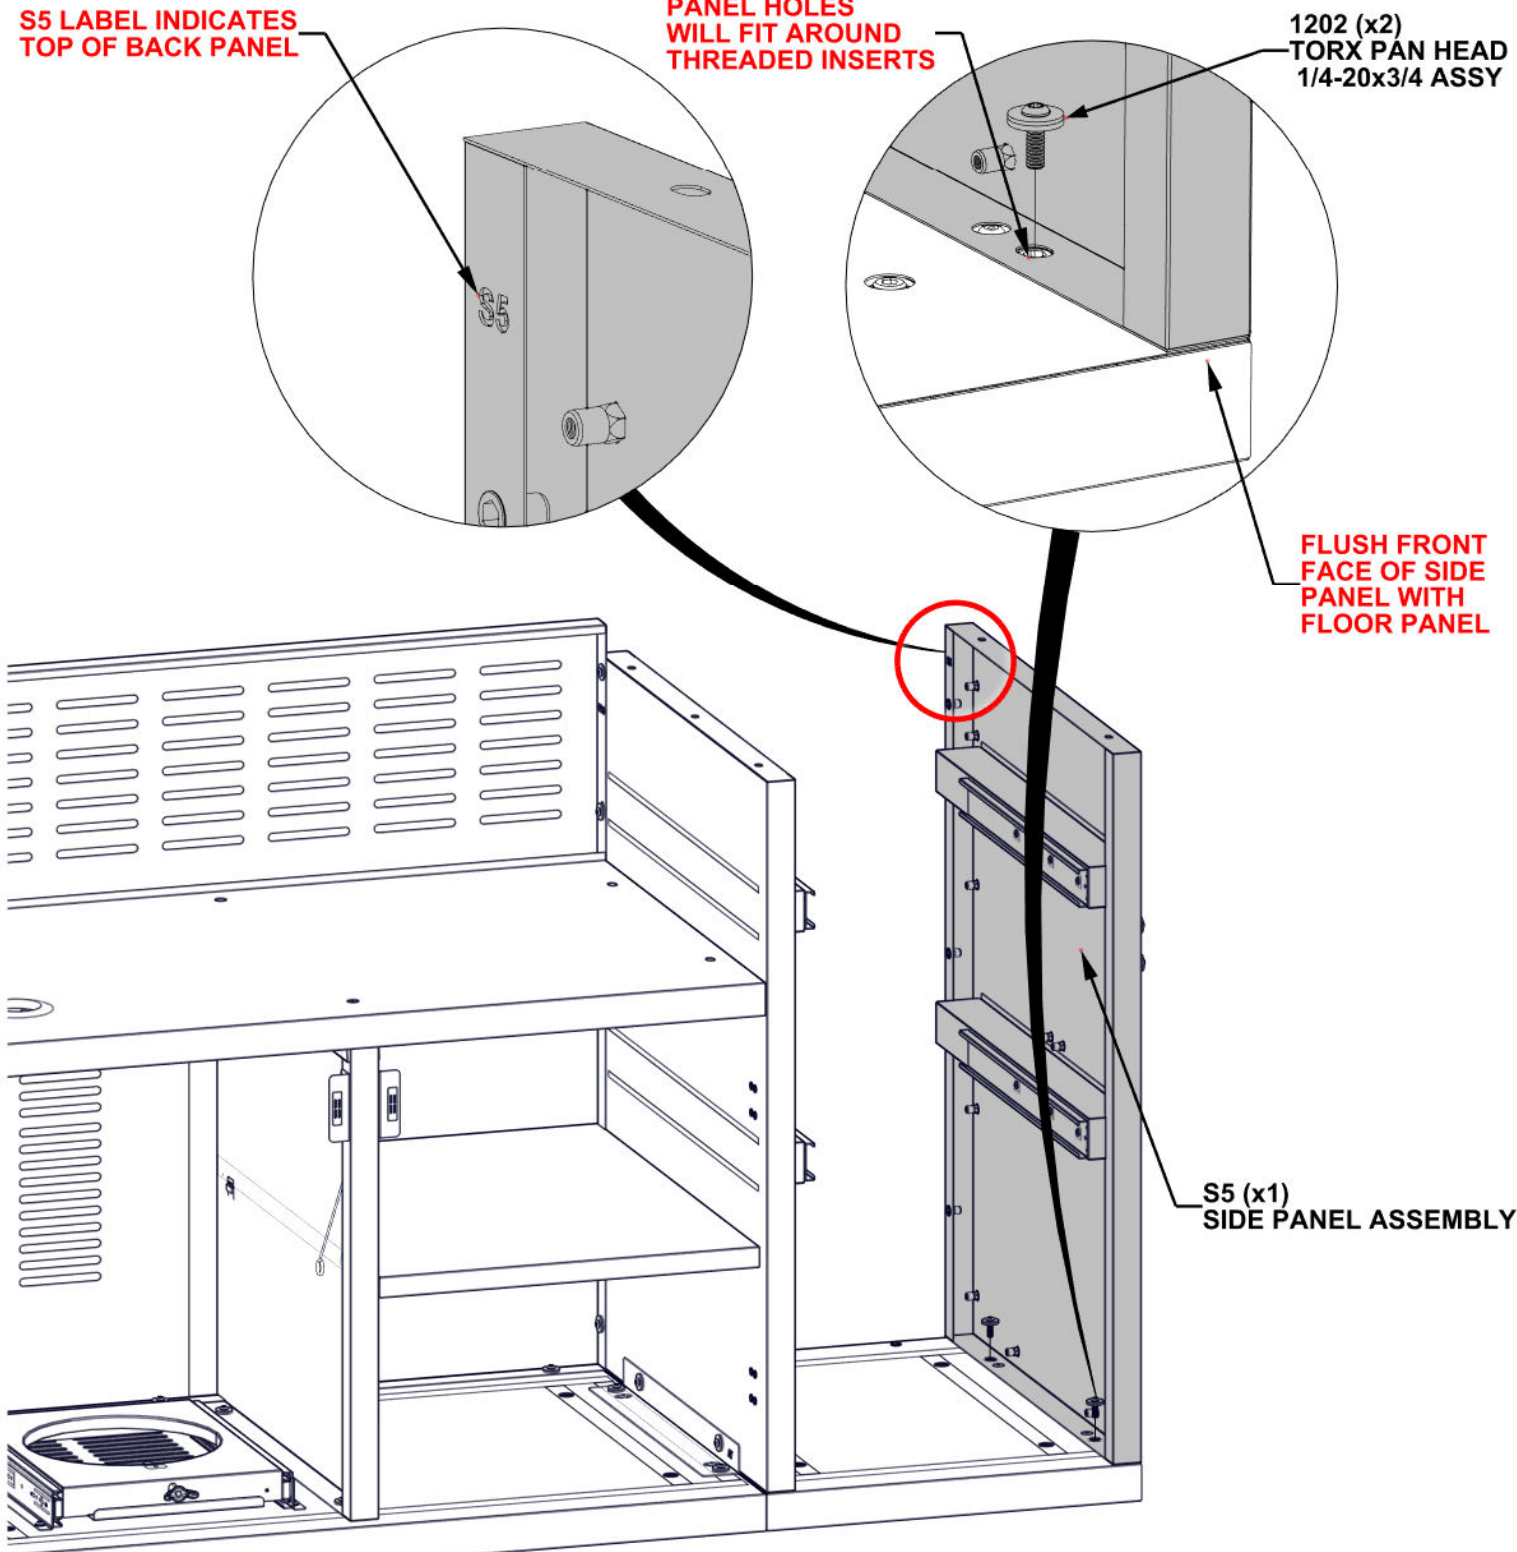

STEP 22- CABINET ASSEMBLY




Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


G3 BACK PANEL - A4M05461
(x1) (30x388x857)

1202 (x8)
TORX PAN HEAD
1/4-20x3/4 ASSY


G3 LABEL INDICATES
TOP OF BACK PANEL

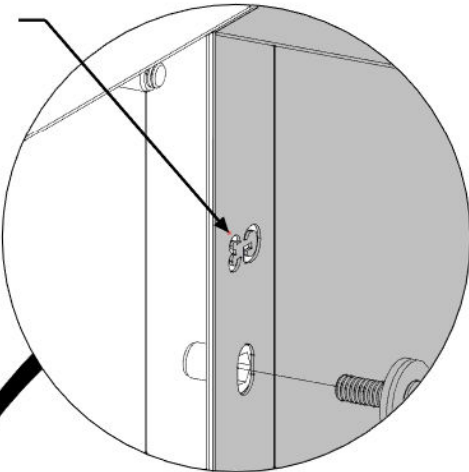

G3 (x1)
BACK PANEL

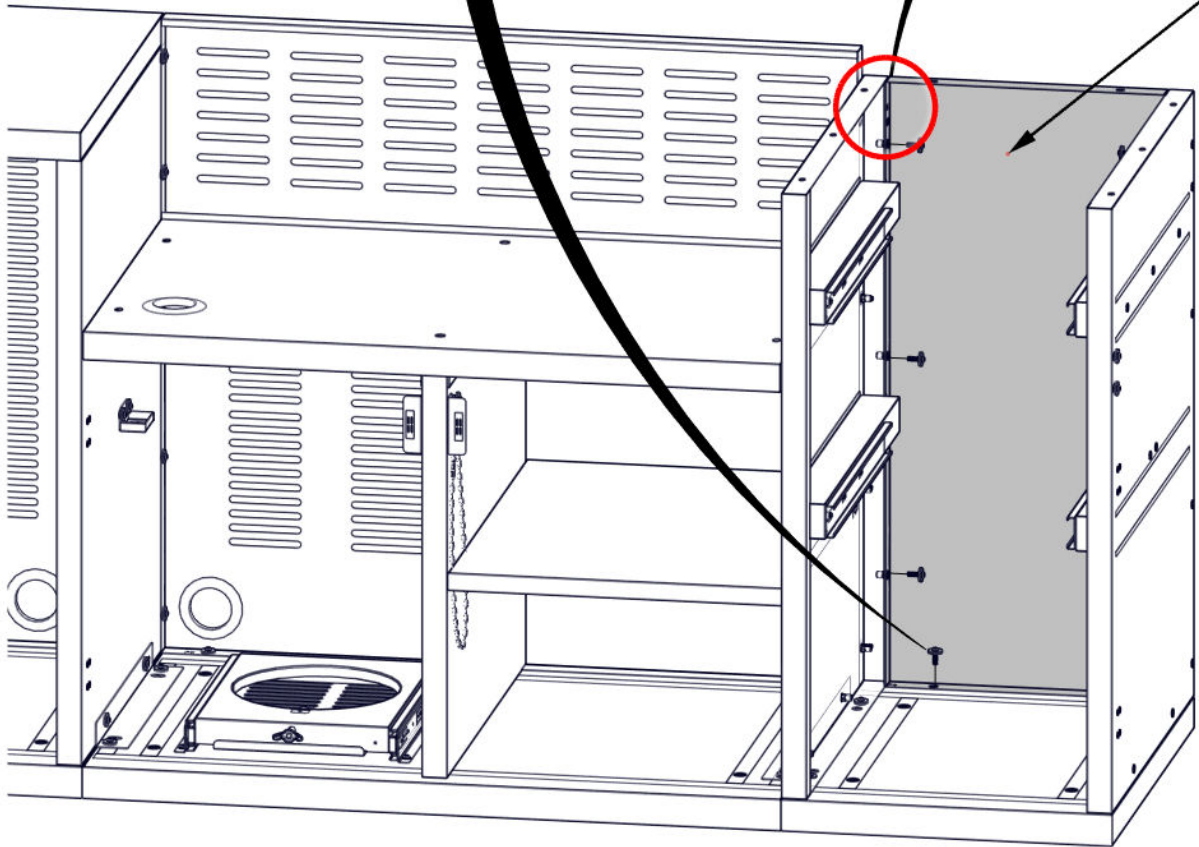

STEP 23- CABINET ASSEMBLY

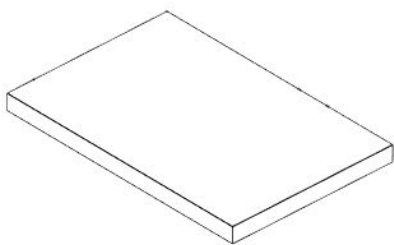


Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

T3 TABLETOP PANEL ASSEMBLY - A4M05463
(x1) 25 5/16"x18 1/8"x1 5/8" (41x460x643)


- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.
- IT IS RECOMMENDED TO USE PROVIDED ANGLE DRIVER TO INSTALL HARDWARE IN THIS STEP.
- **ALIGN THREADED INSERTS IN TABLETOP WITH SLOTS IN SIDE AND BACK PANELS.**
- **SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.**
- **DO NOT USE TABLETOP SURFACE AS A WORK BENCH.**

T3 LABEL ON
BOTTOM SIDE
INDICATES BACK

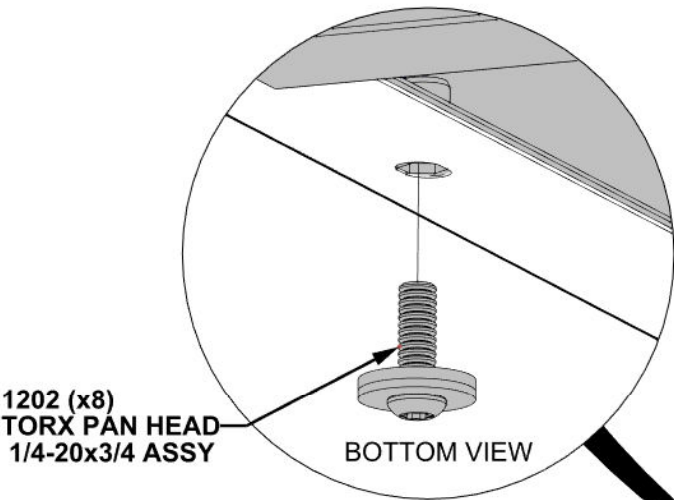


1202 (x8)
TORX PAN HEAD
1/4-20x3/4 ASSY

BOTTOM VIEW

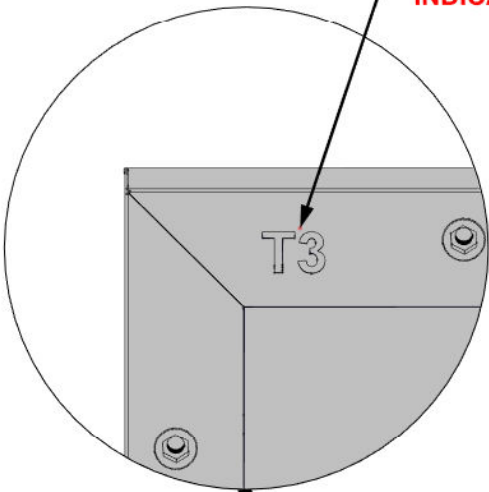


T3

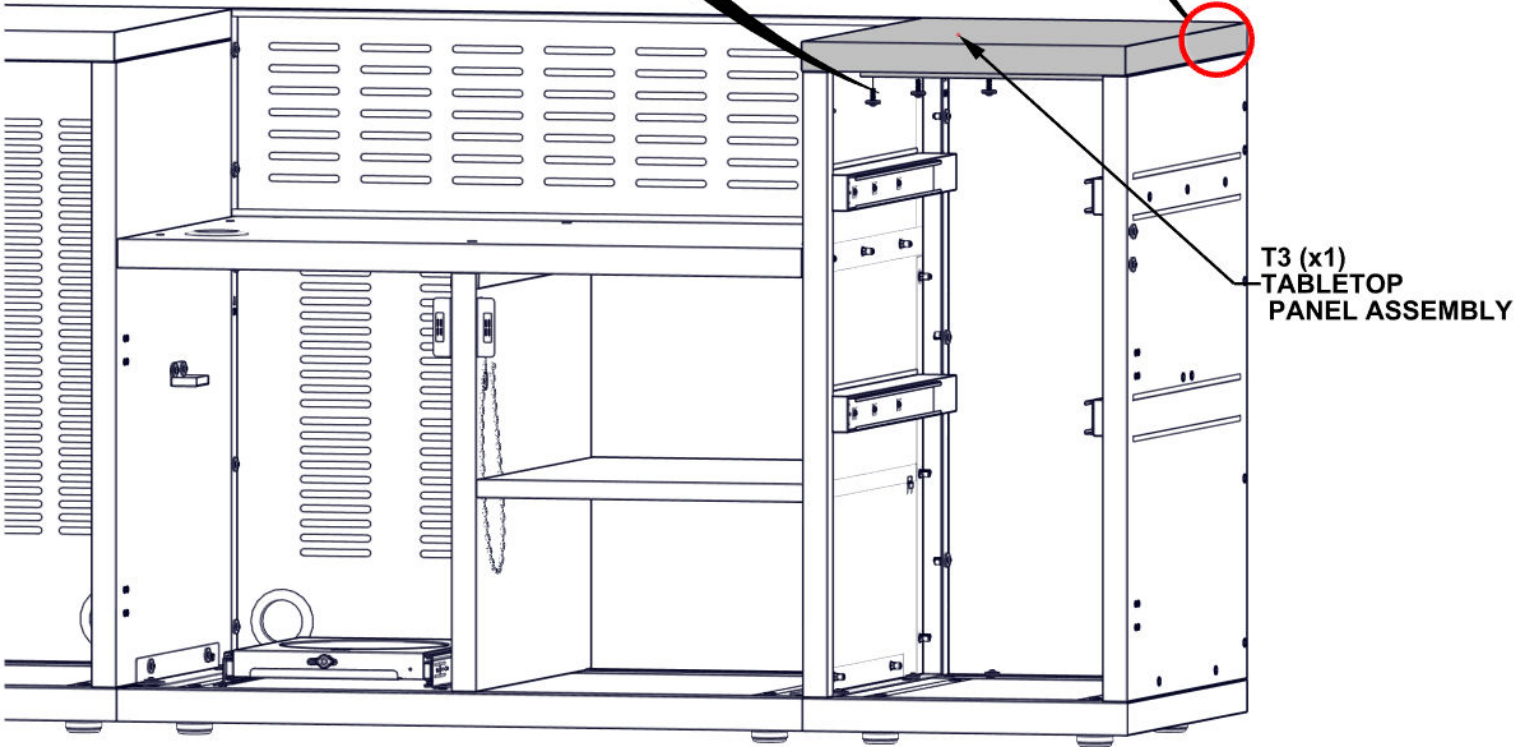


T3 (x1)
TABLETOP
PANEL ASSEMBLY

STEP 24- CABINET ASSEMBLY

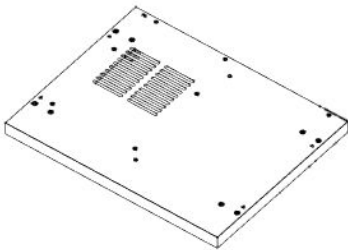


F4 FLOOR PANEL ASSEMBLY - A4M05466
(x1) 31 7/16"x25"x1 3/4" (45x635x798)

- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

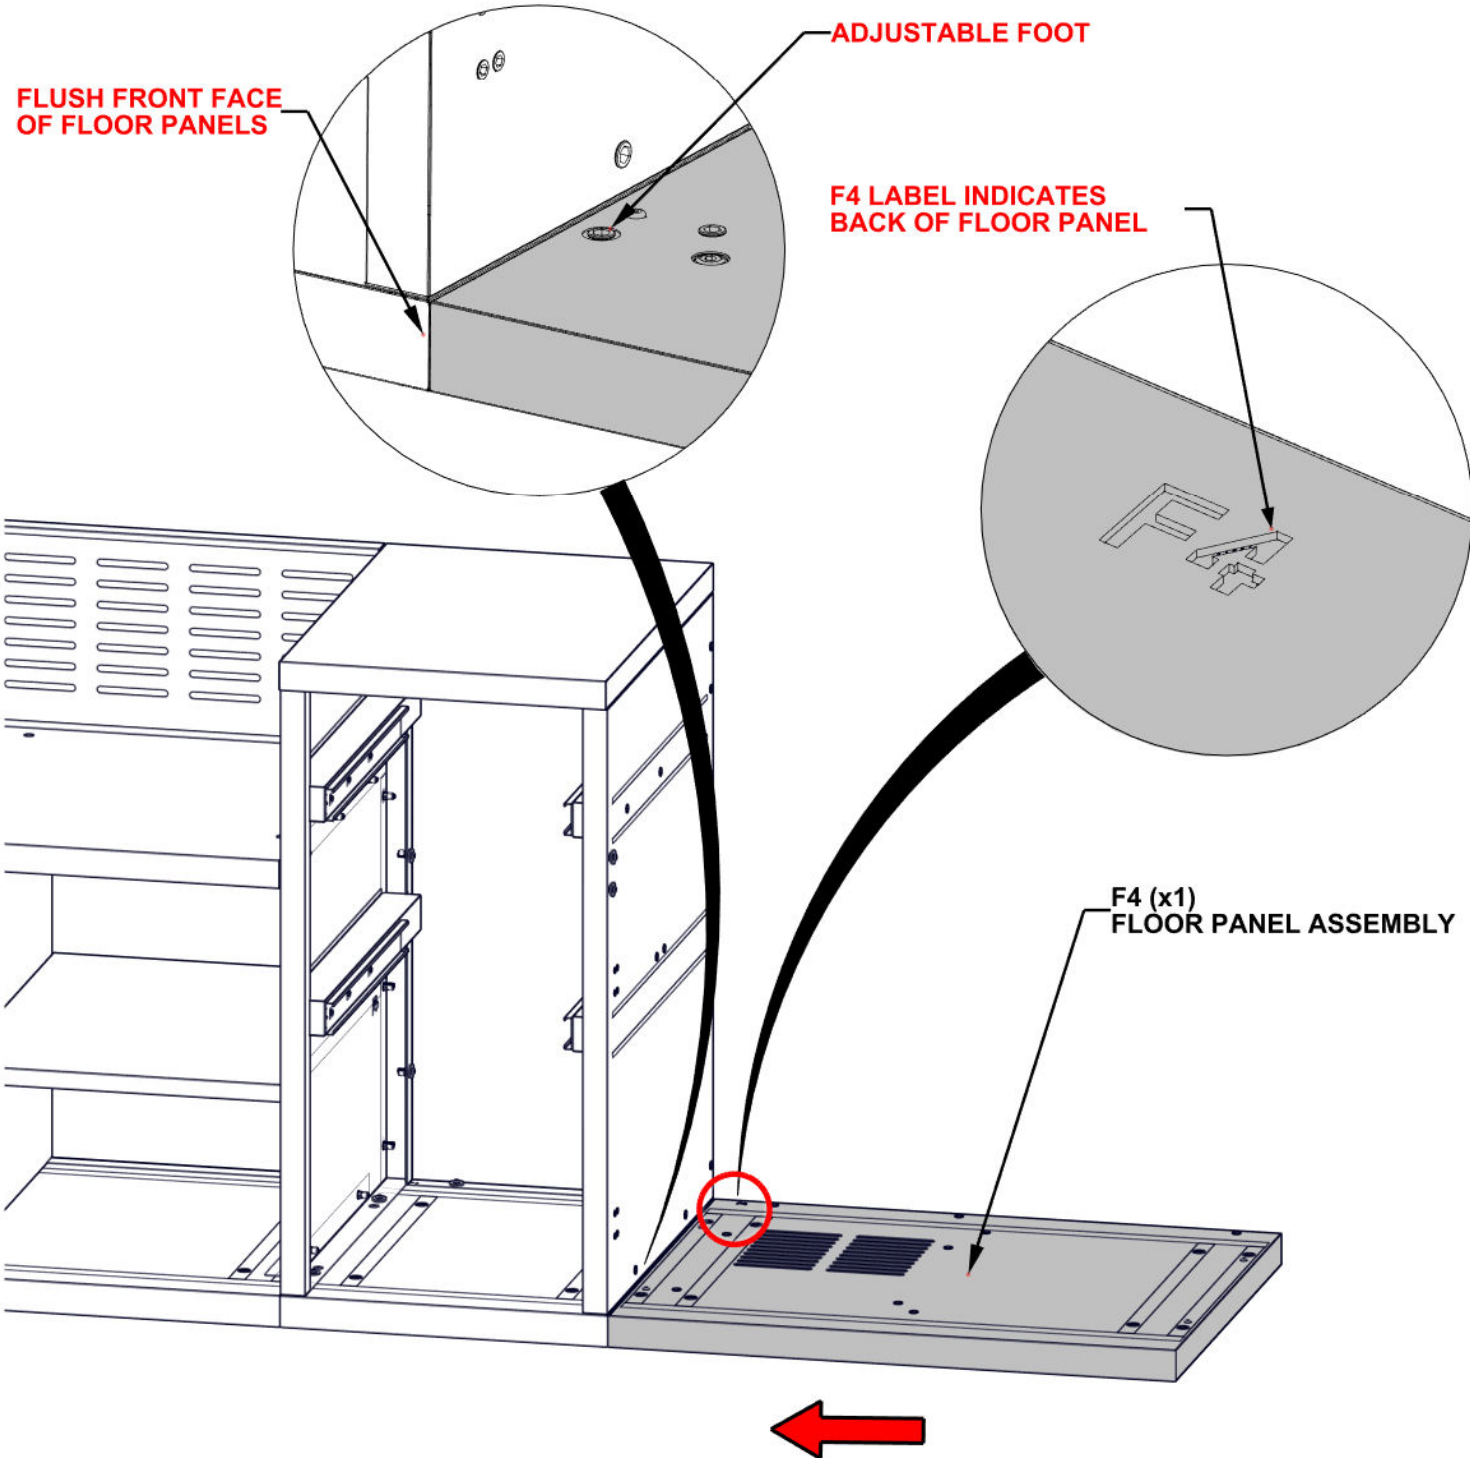

STEP 25- CABINET ASSEMBLY

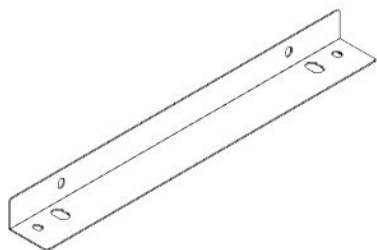


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x 1 15/16"x17 1/8" (35x50x435)


1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

MAKE SURE FRONT
FACE OF FLOOR
PANELS ARE FLUSH

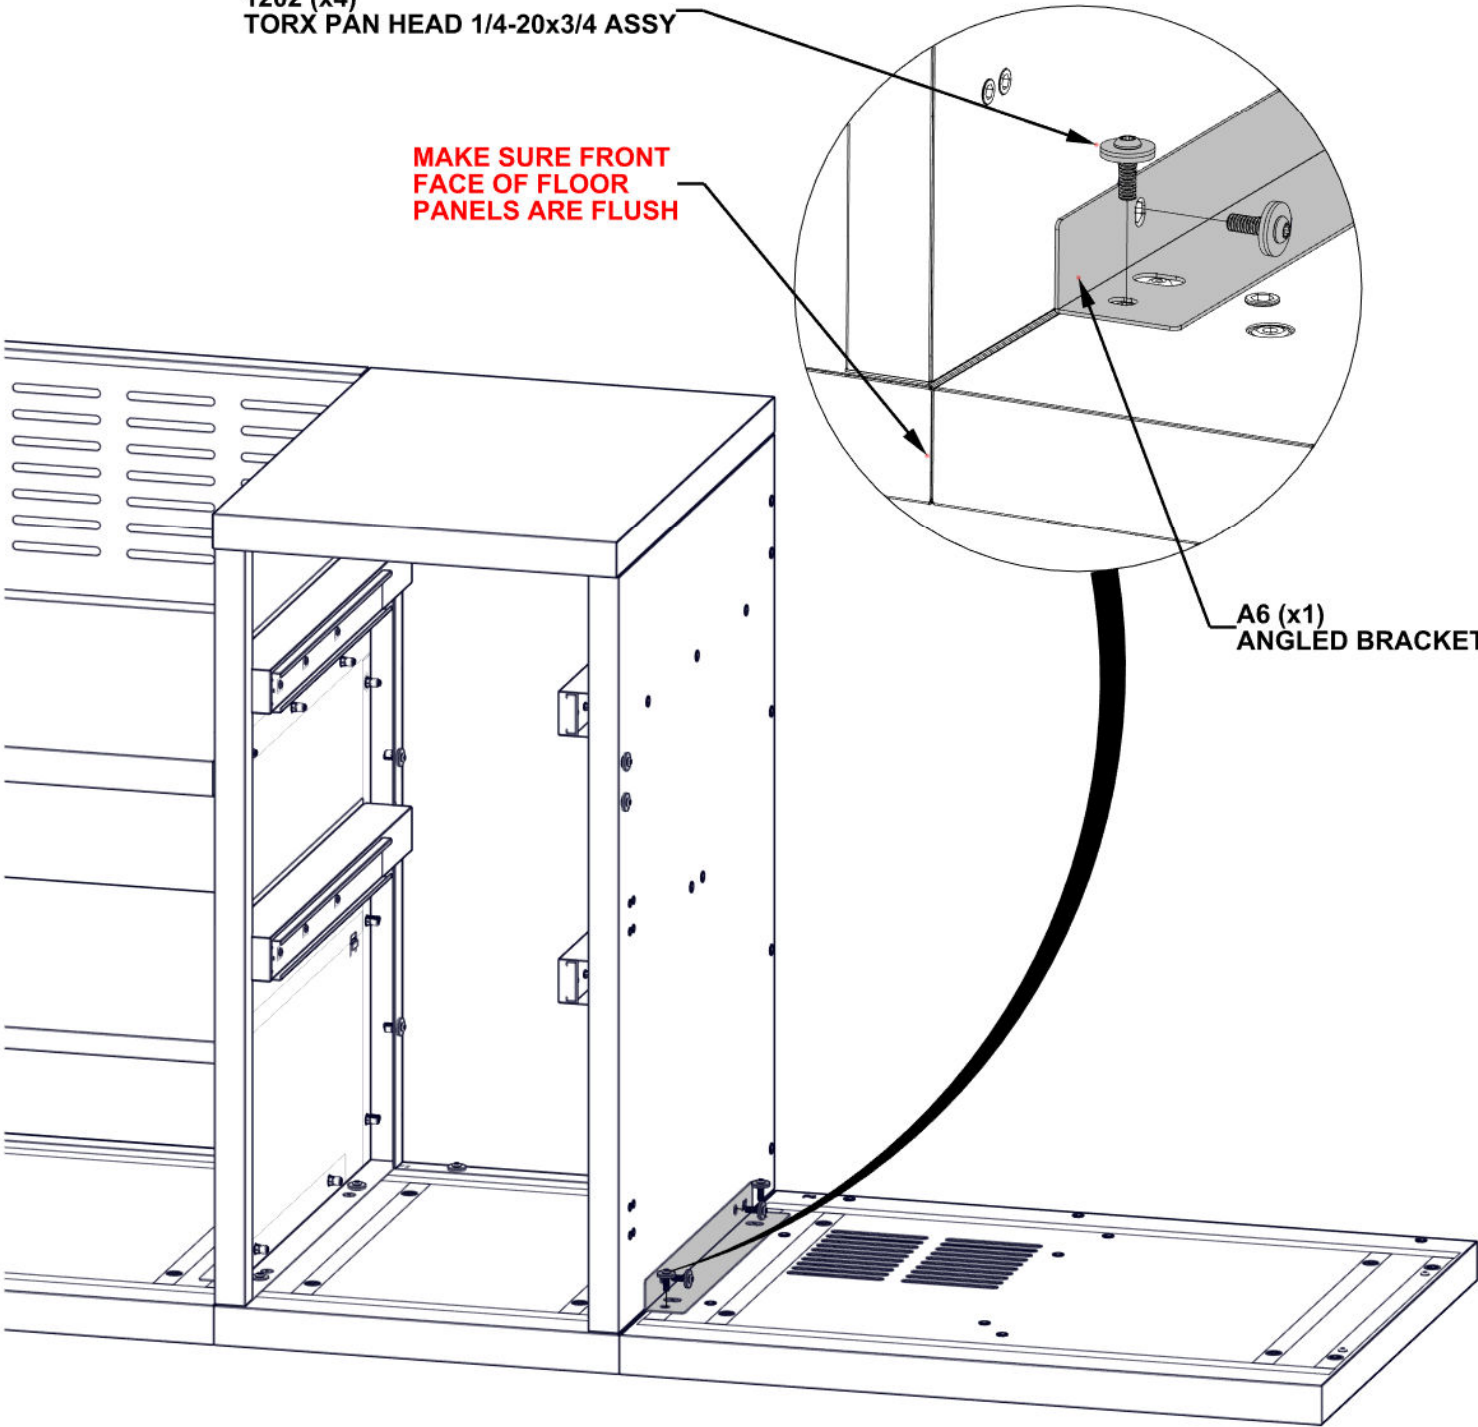


A6 (x1)
ANGLED BRACKET

STEP 26- CABINET ASSEMBLY

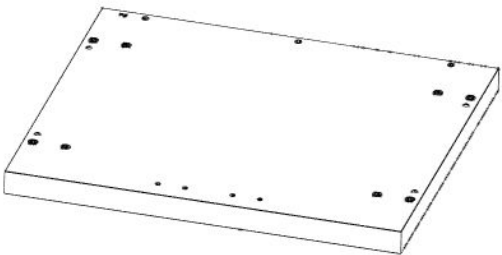


F5 FLOOR PANEL ASSEMBLY - A4M05473
(x1) 28 5/8"x25"x1 3/4" (45x635x727)

- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

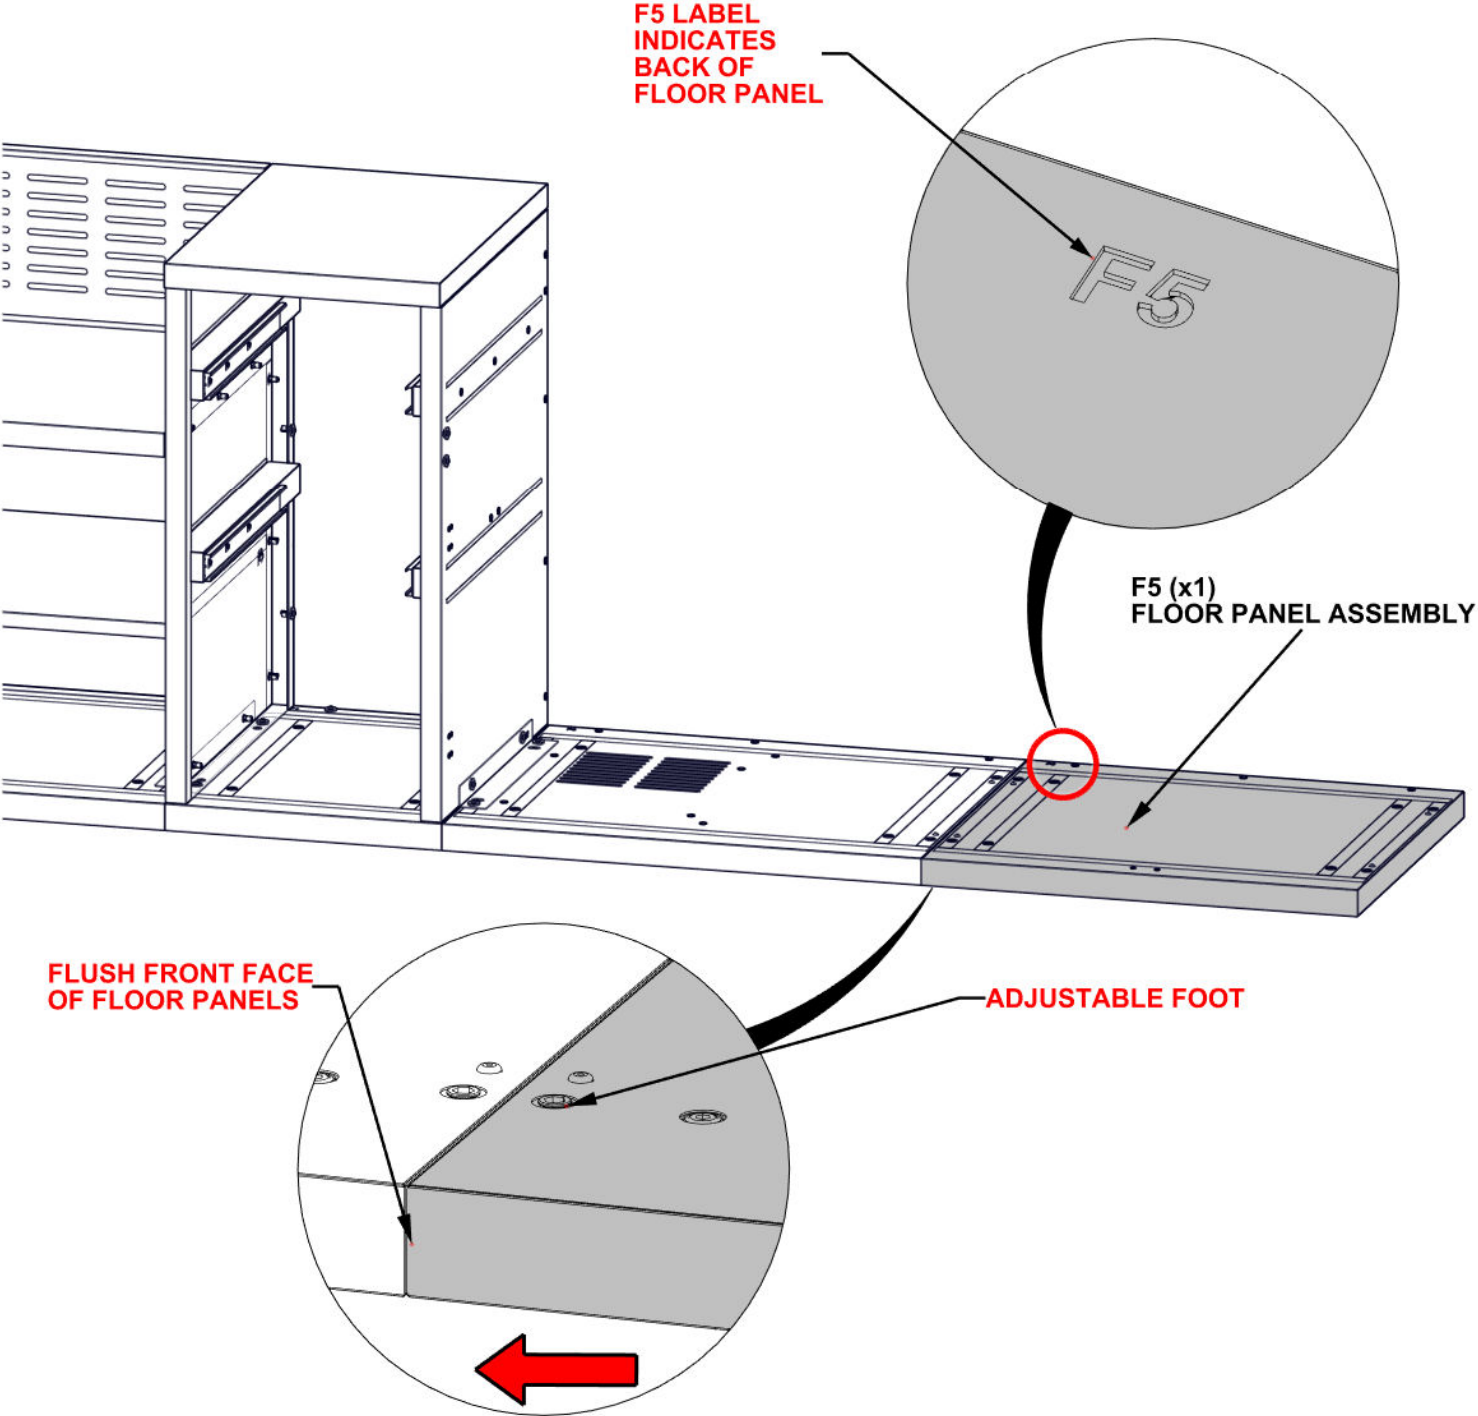


STEP 27- CABINET ASSEMBLY

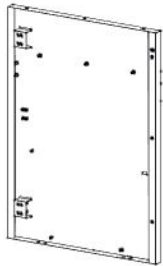


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S8 SIDE PANEL ASSEMBLY - A4M05476
(x1) 33 3/4"x25"x1 3/8" (35x635x857)

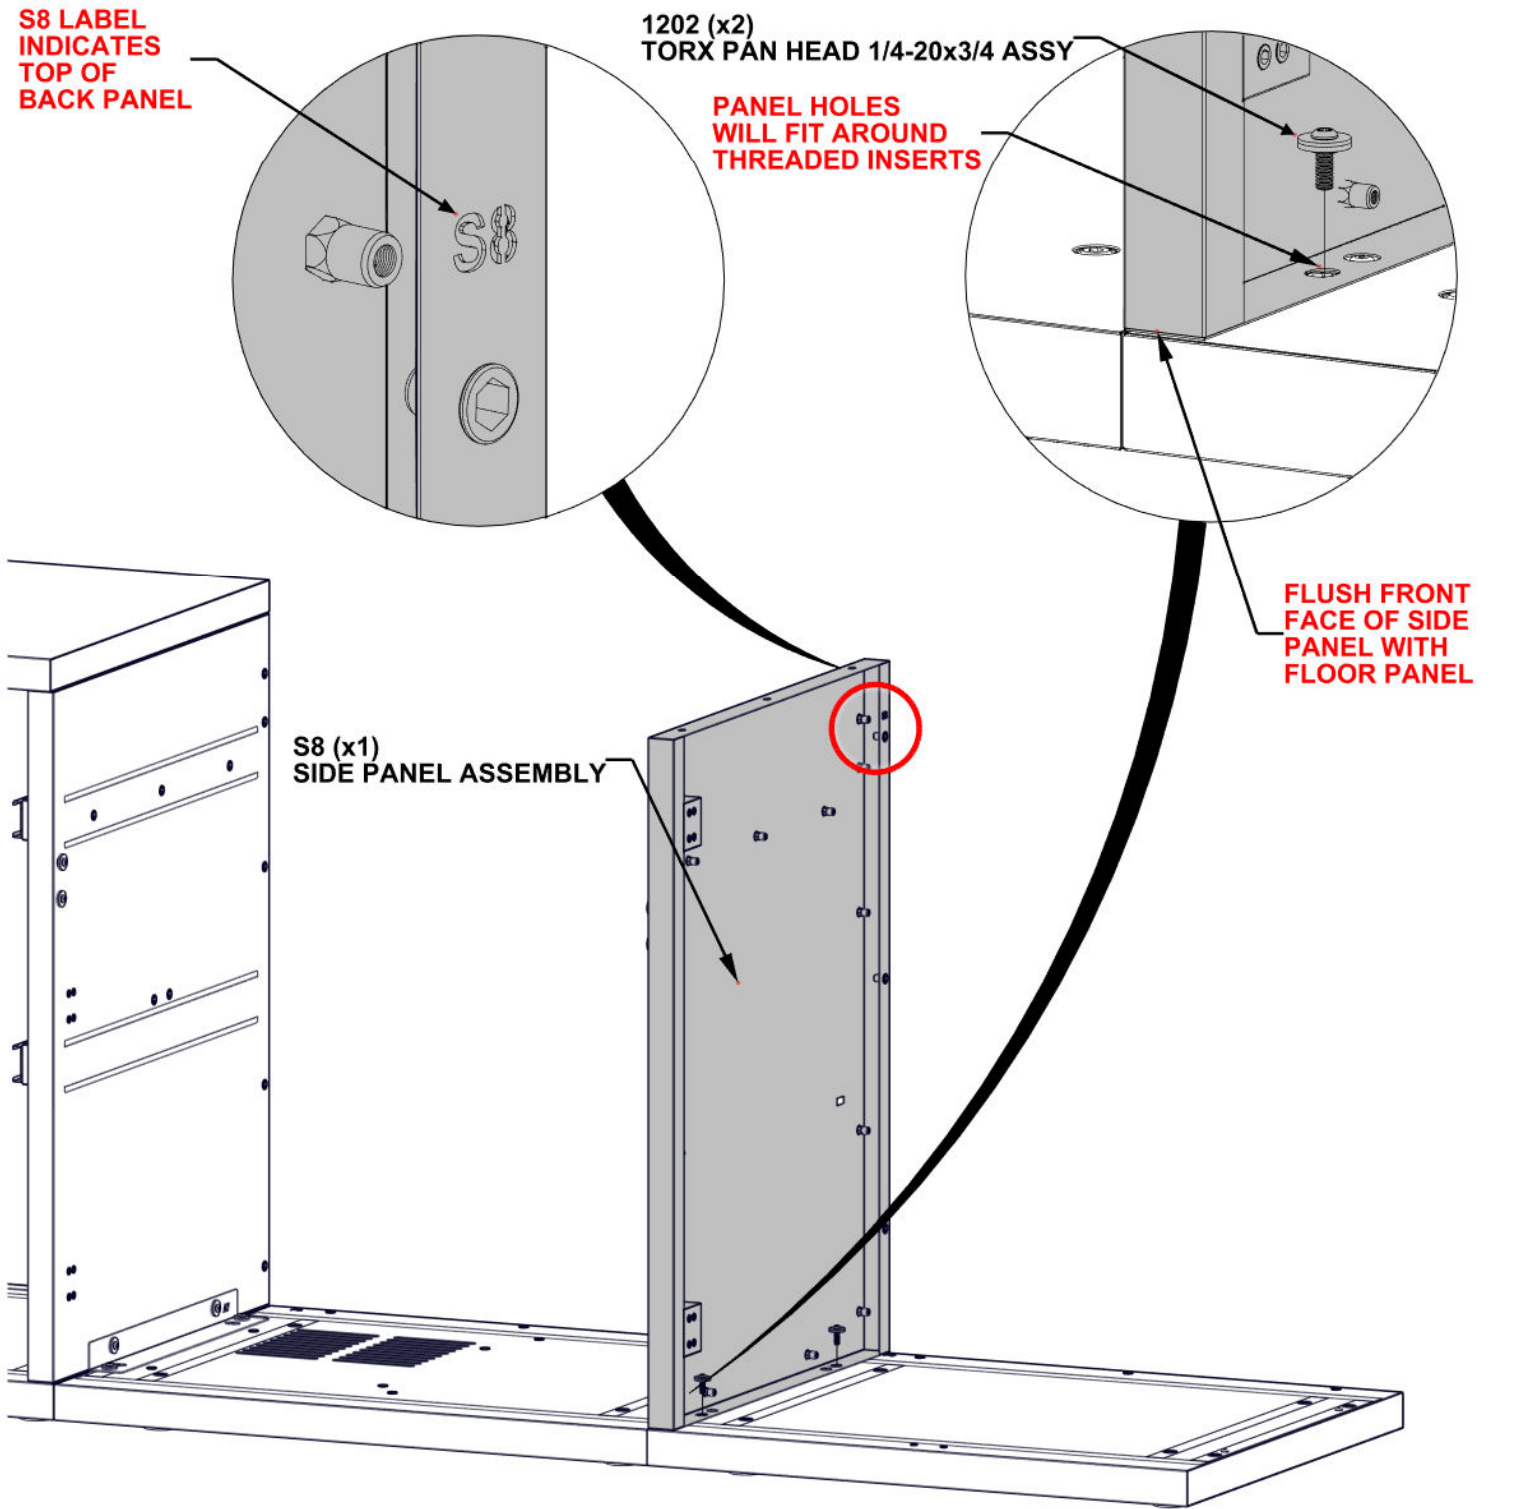


STEP 28- CABINET ASSEMBLY

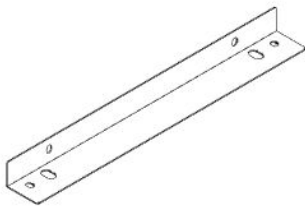


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x 1 15/16"x17 1/8" (35x50x435)

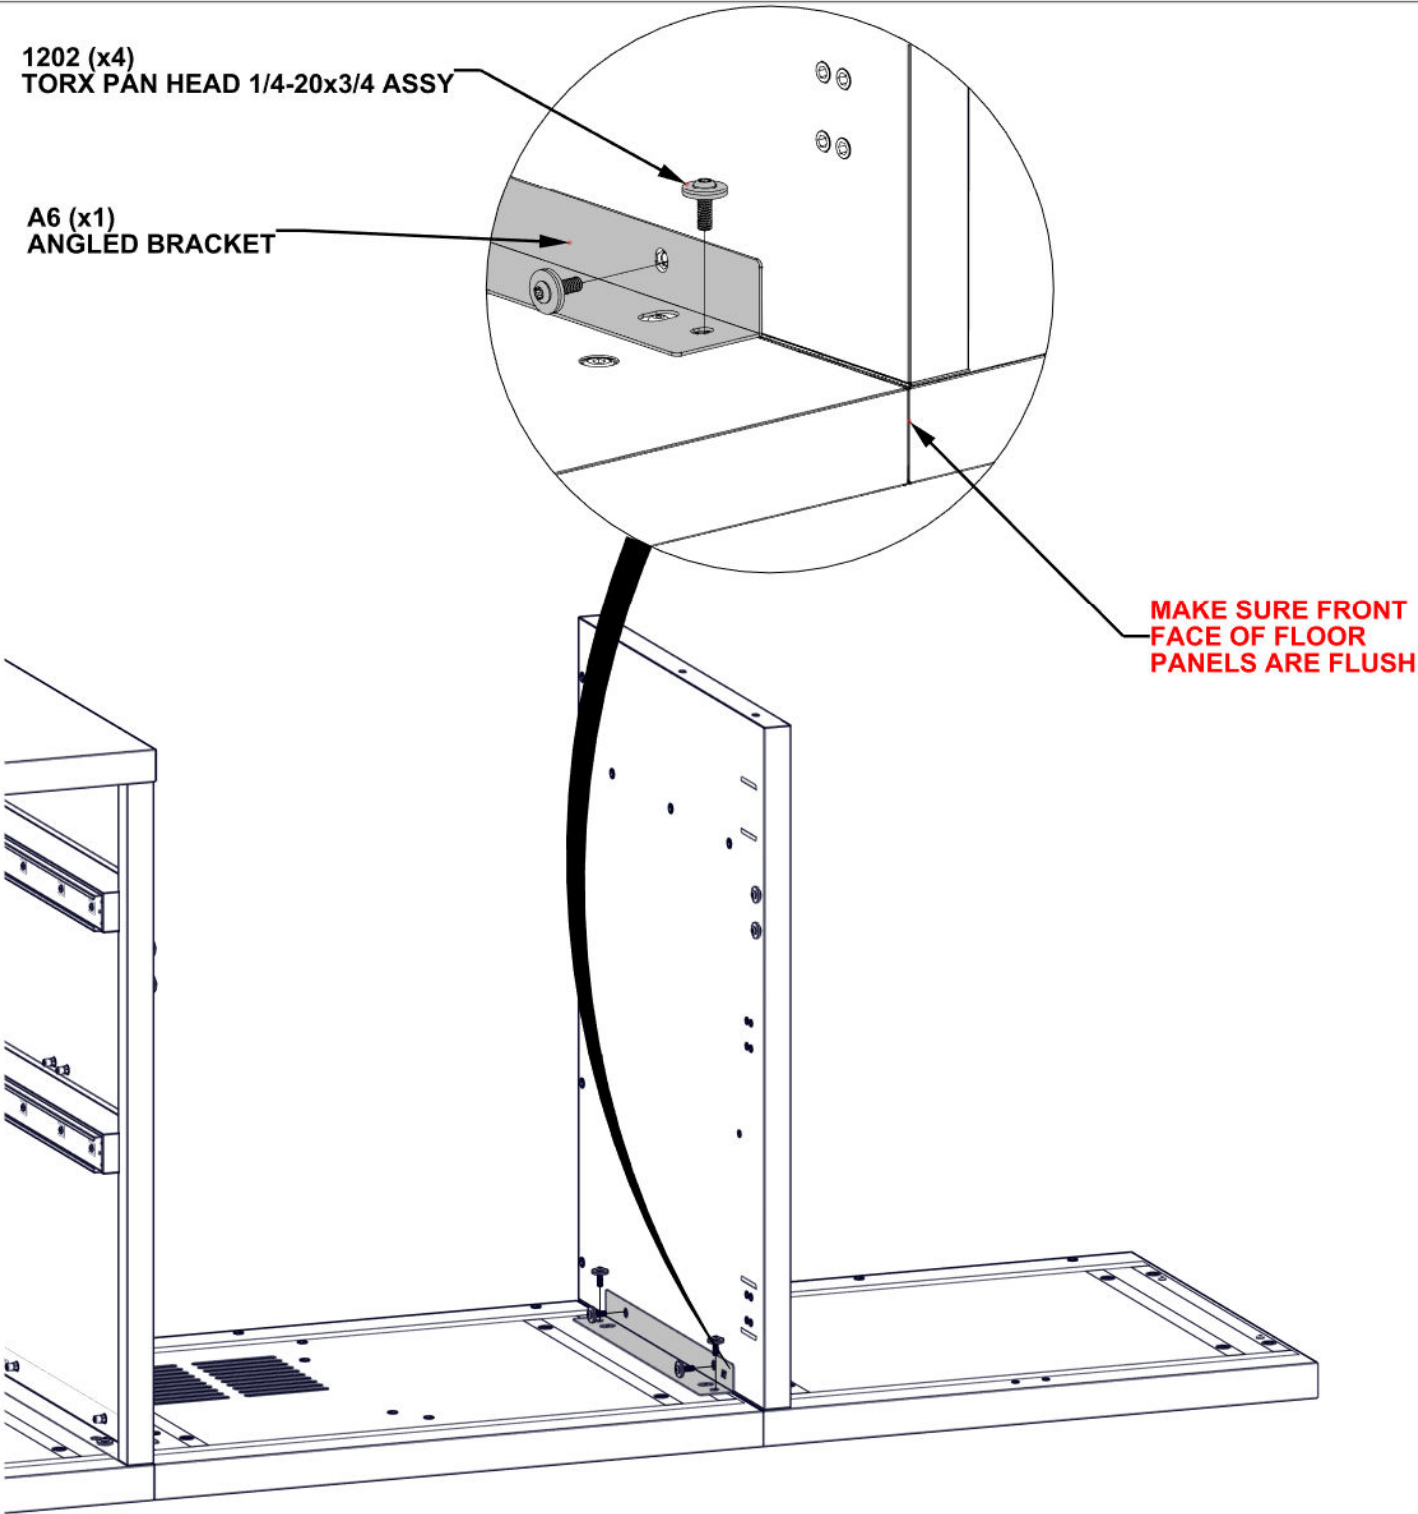


STEP 29- CABINET ASSEMBLY

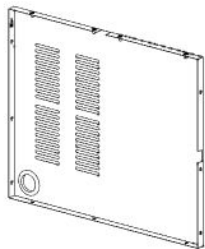


Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G4 BACK PANEL ASSEMBLY - A4M05468
(x1) 31 7/16"x26 3/16"x1 3/16" (30x666x798)

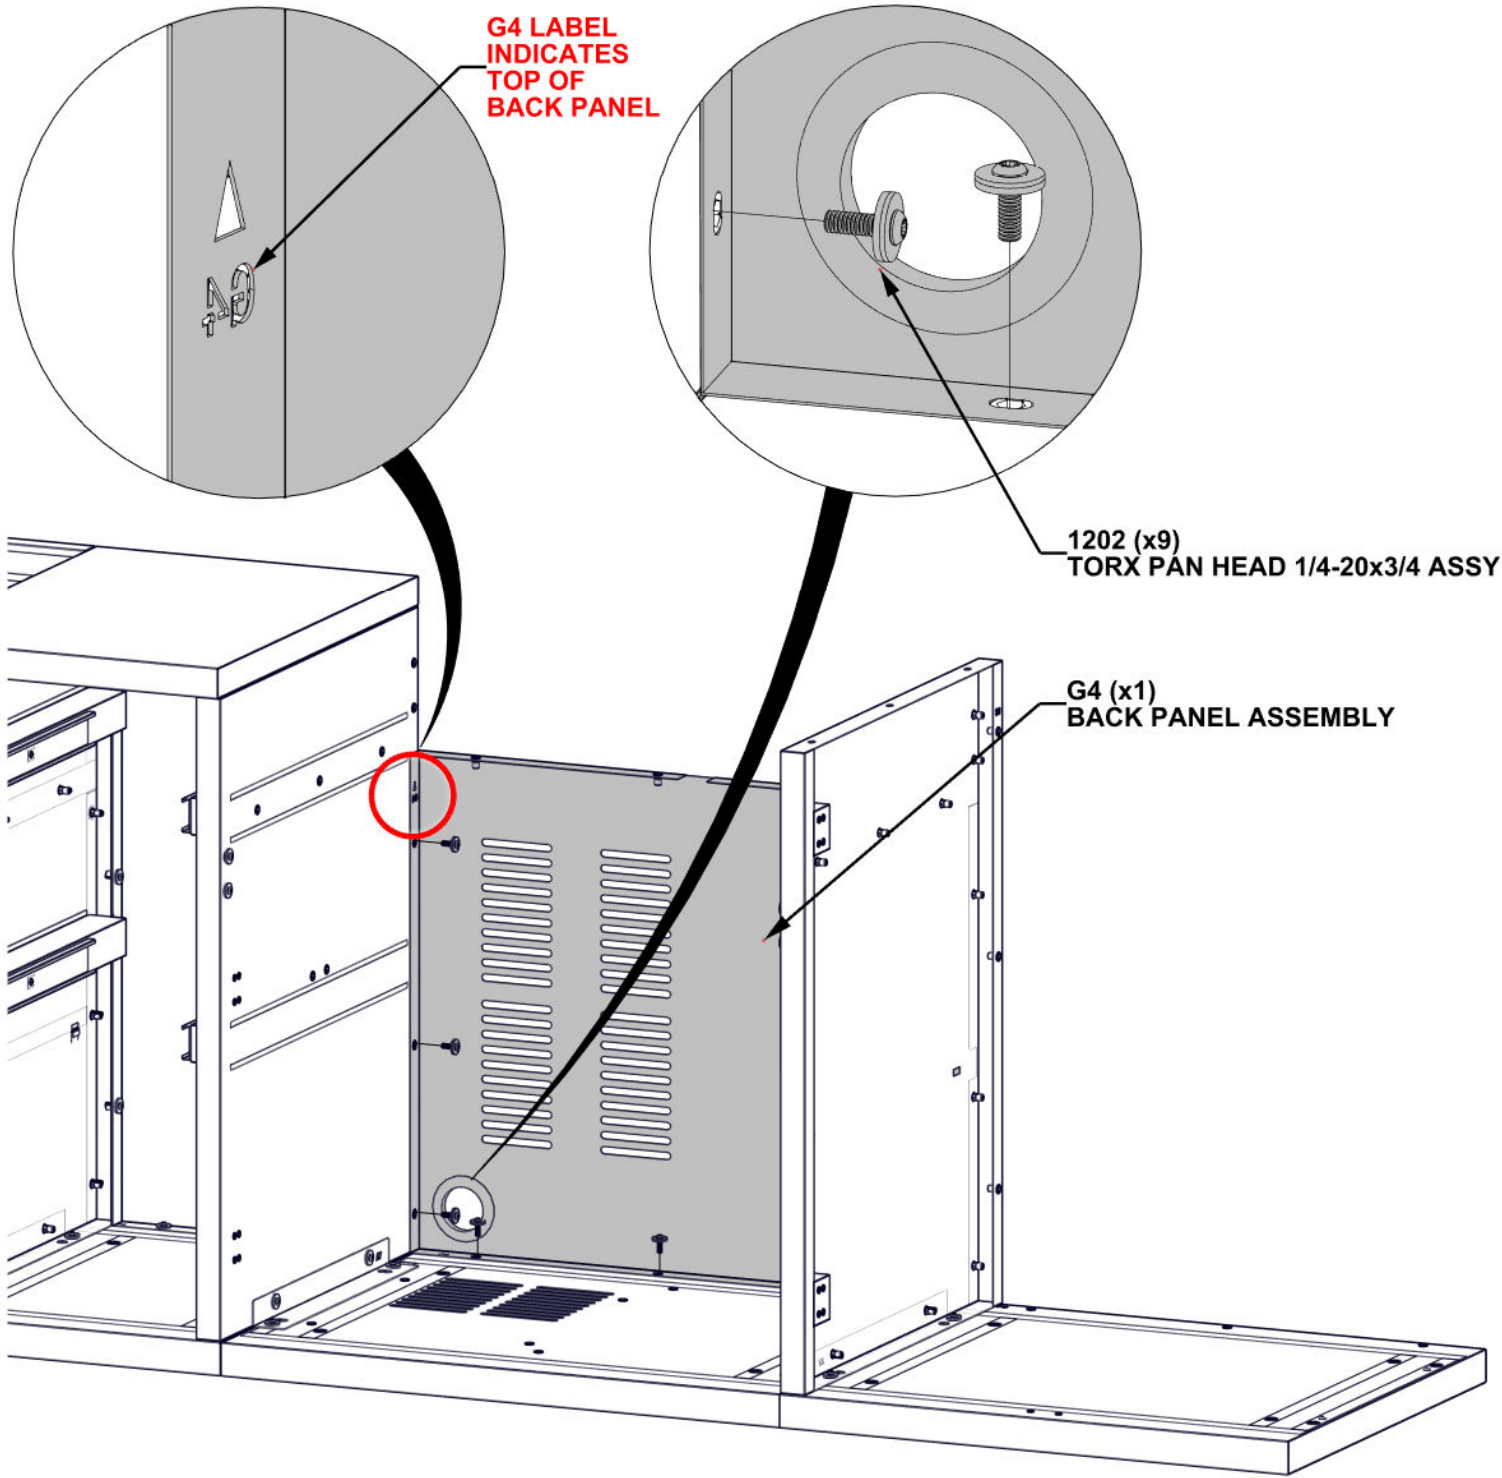


STEP 30- CABINET ASSEMBLY

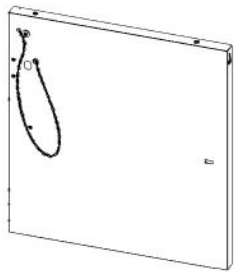

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S6 SIDE PANEL ASSEMBLY M - A4M05483
(x1) 26 3/16"x24"x1 3/8" (35x609x665)

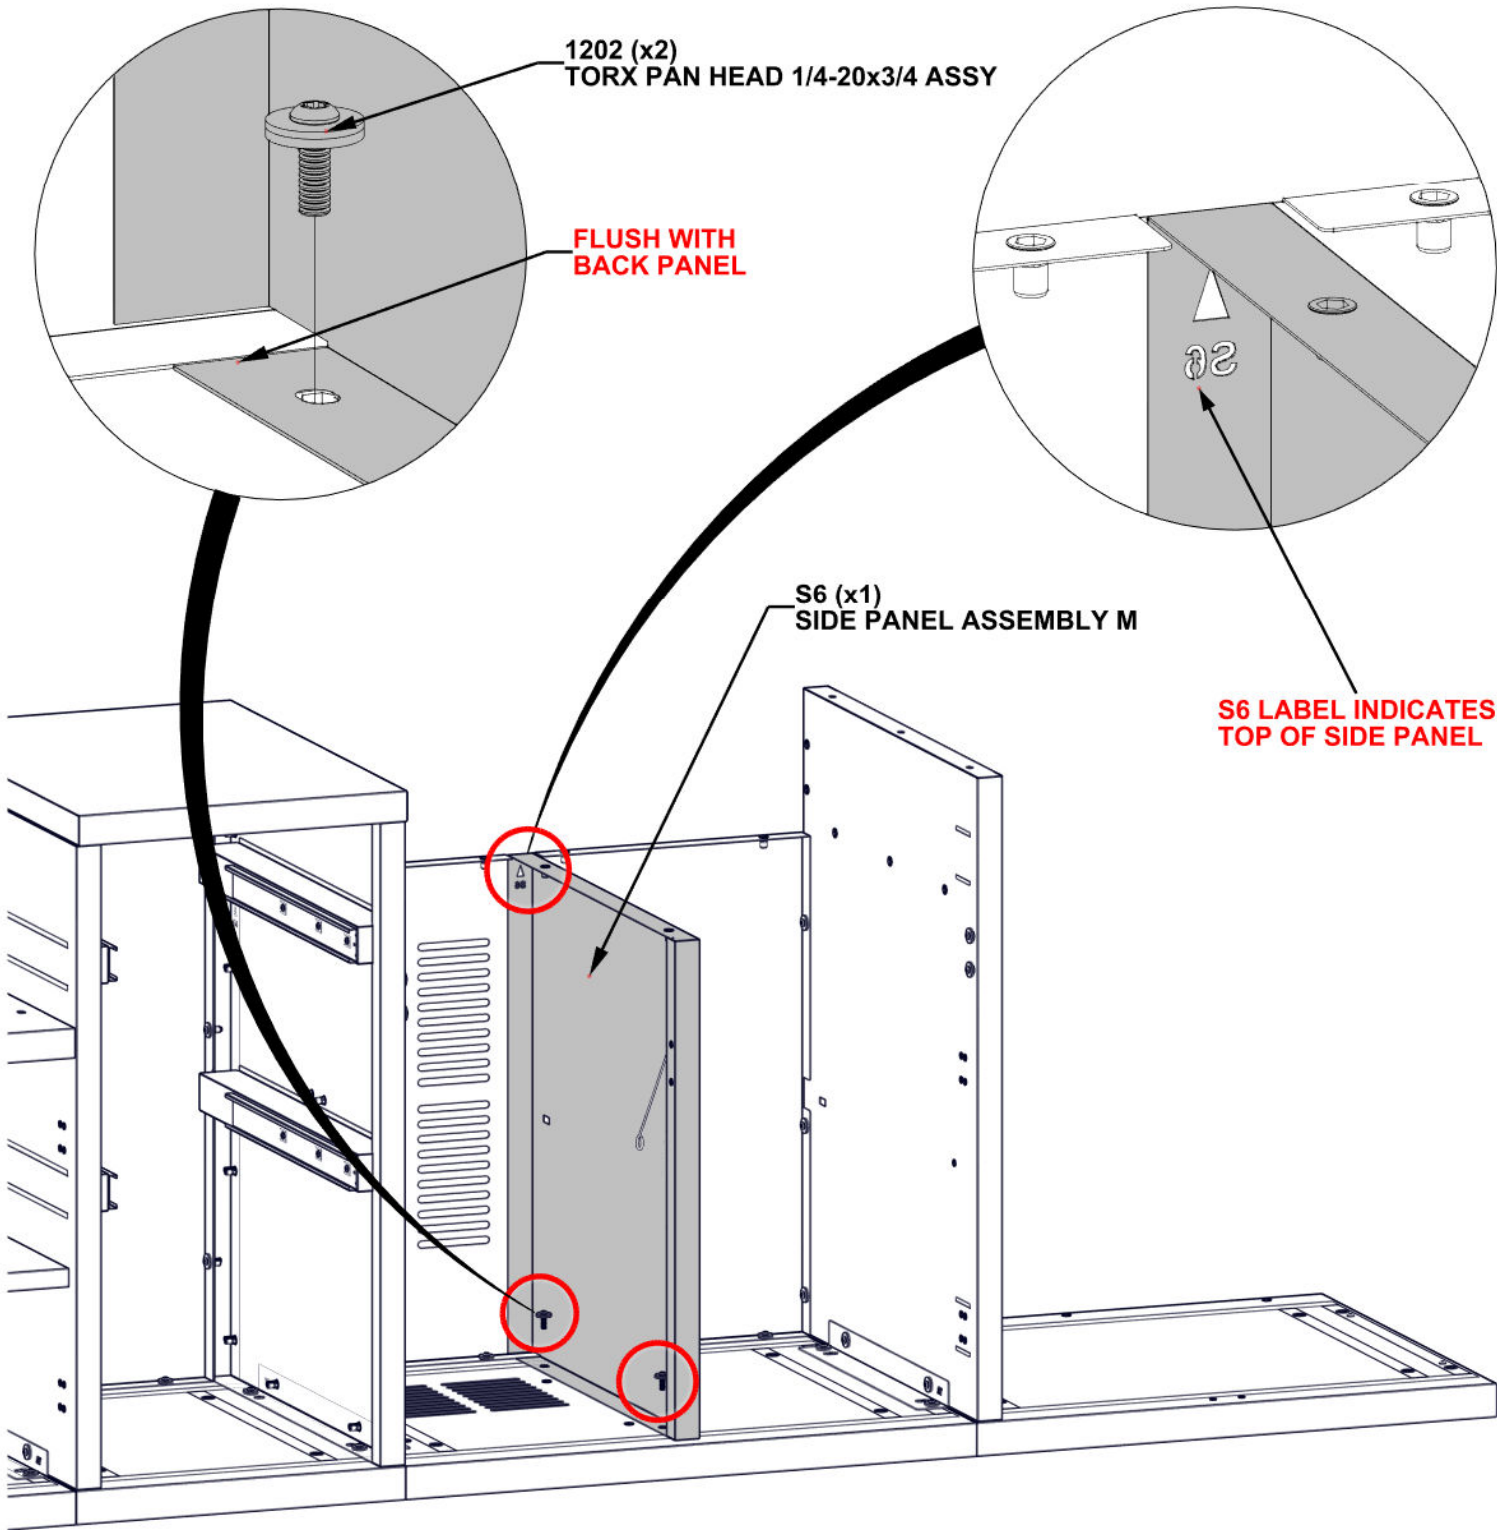


STEP 31- CABINET ASSEMBLY



Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS


A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

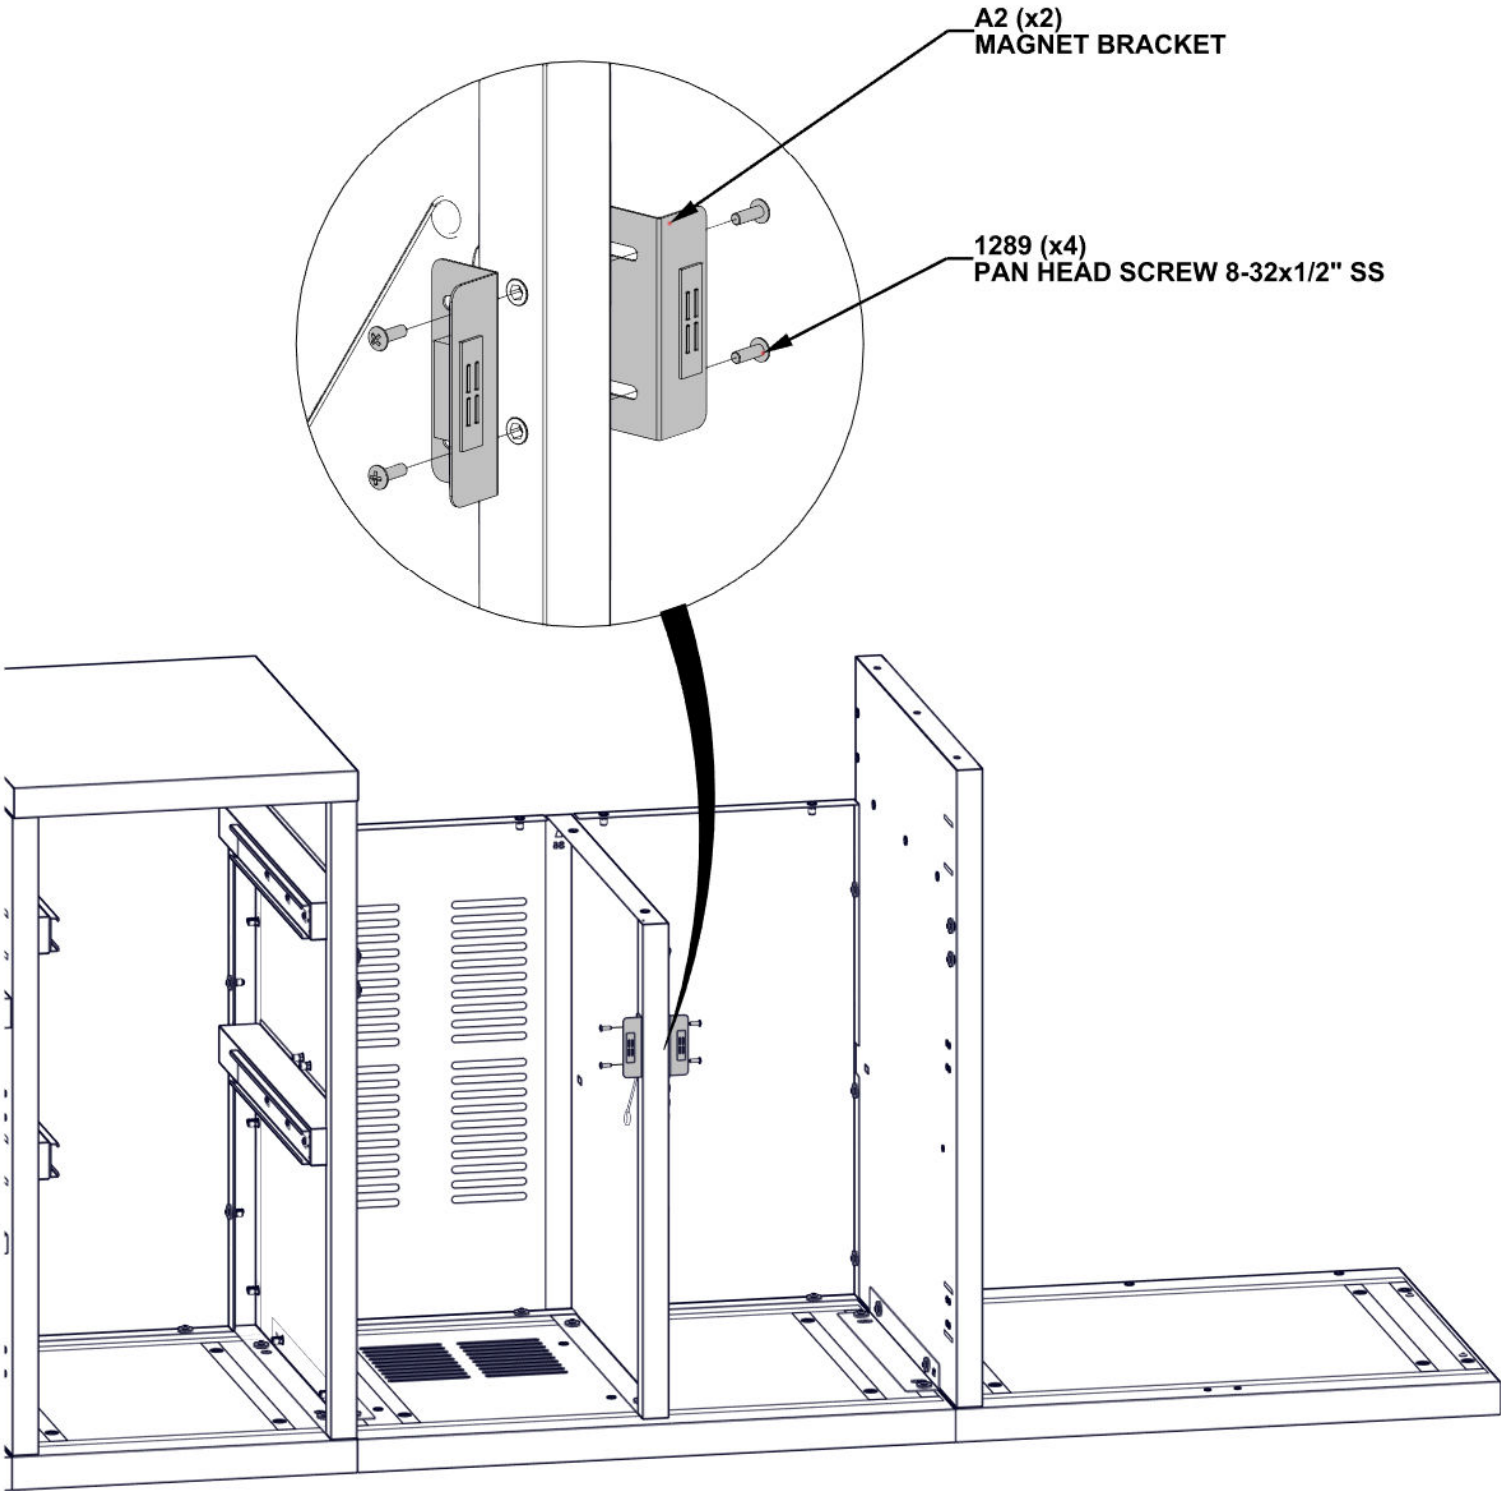

A2 (x2)
MAGNET BRACKET


1289 (x4)
PAN HEAD SCREW 8-32x1/2" SS

STEP 32- CABINET ASSEMBLY

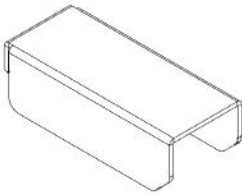


A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER CABINET.

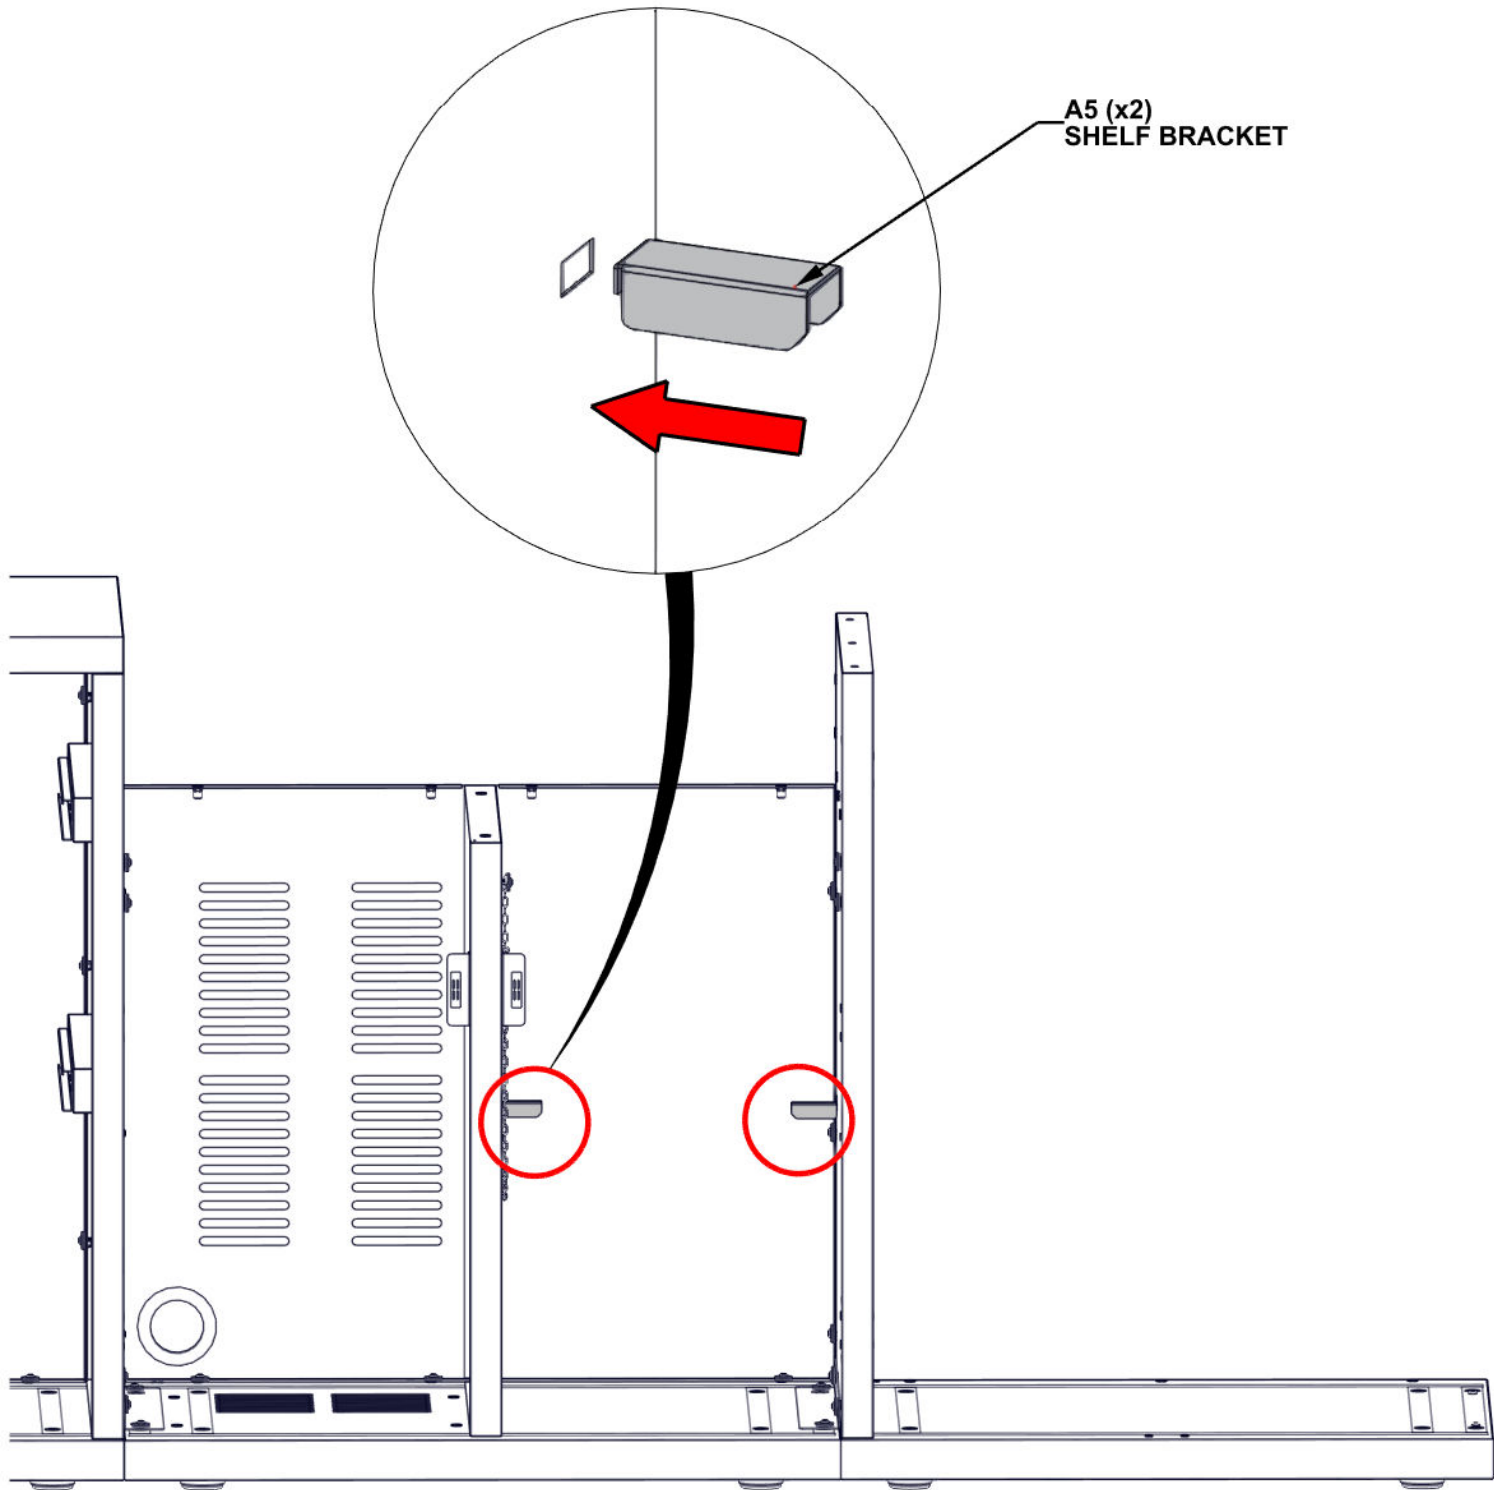


STEP 33- CABINET ASSEMBLY

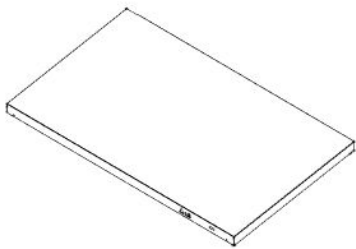


Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

L2 SHELF - A4M05484
(x1) 24"x14 13/16"x1" (25x376x610)

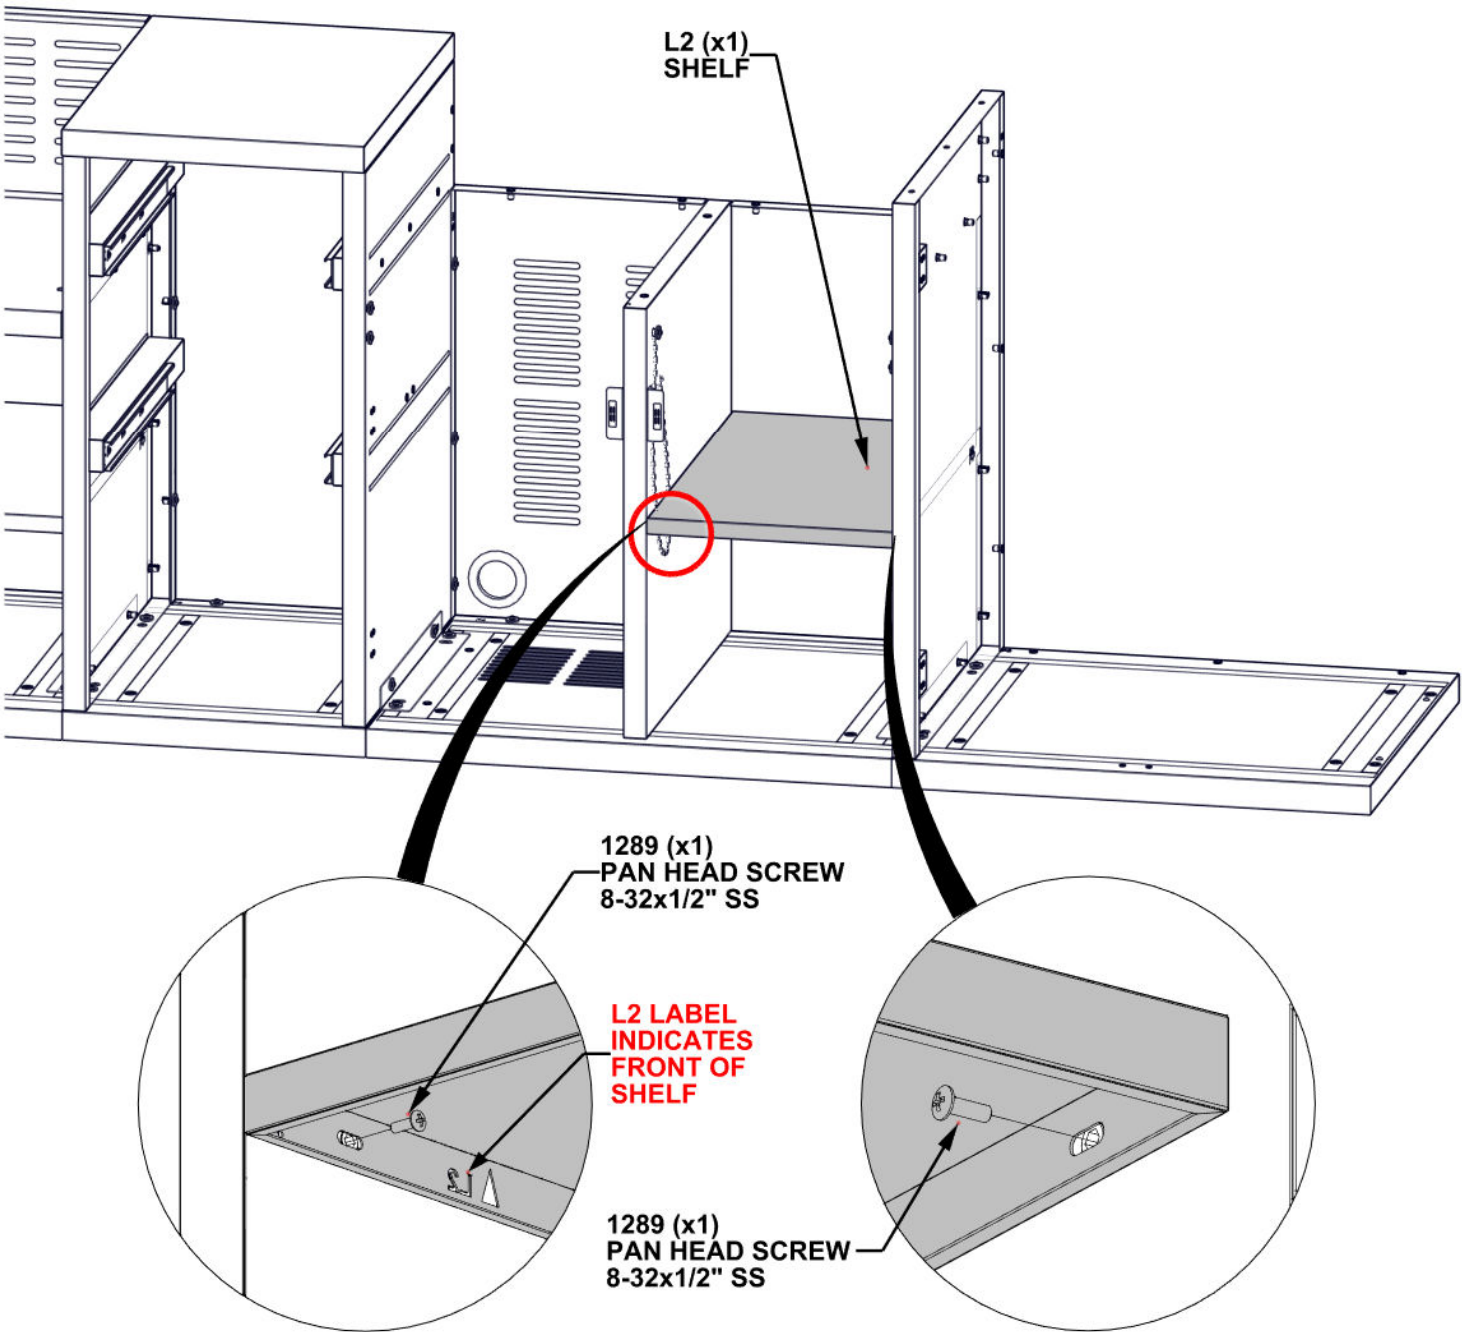


STEP 34- CABINET ASSEMBLY

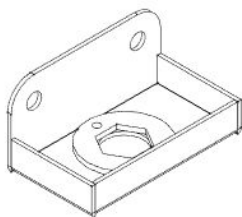


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

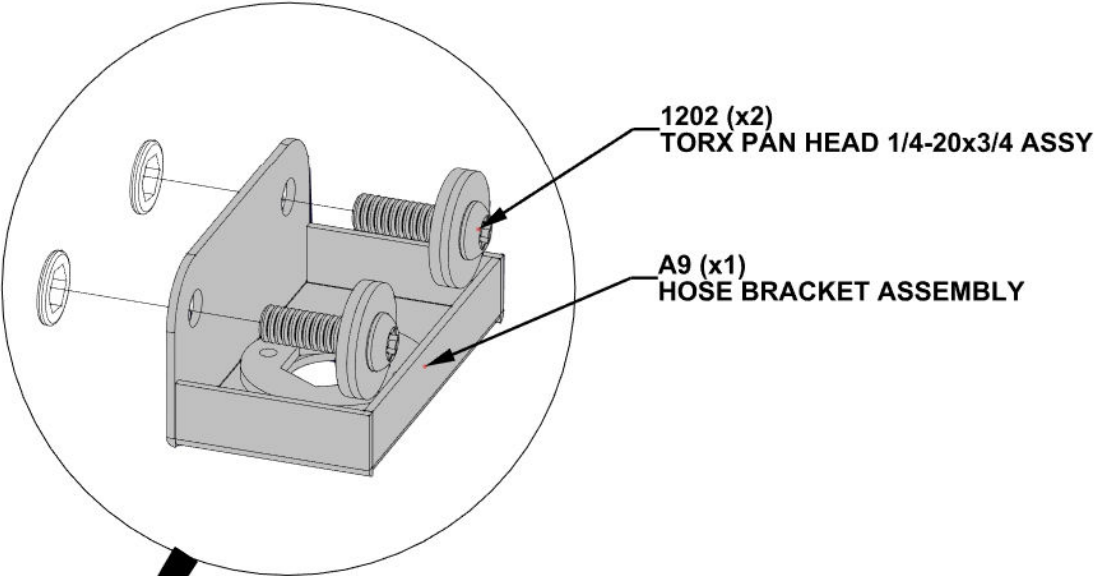


1202 (x2)
TORX PAN HEAD 1/4-20x3/4 ASSY

A9 (x1)
HOSE BRACKET ASSEMBLY

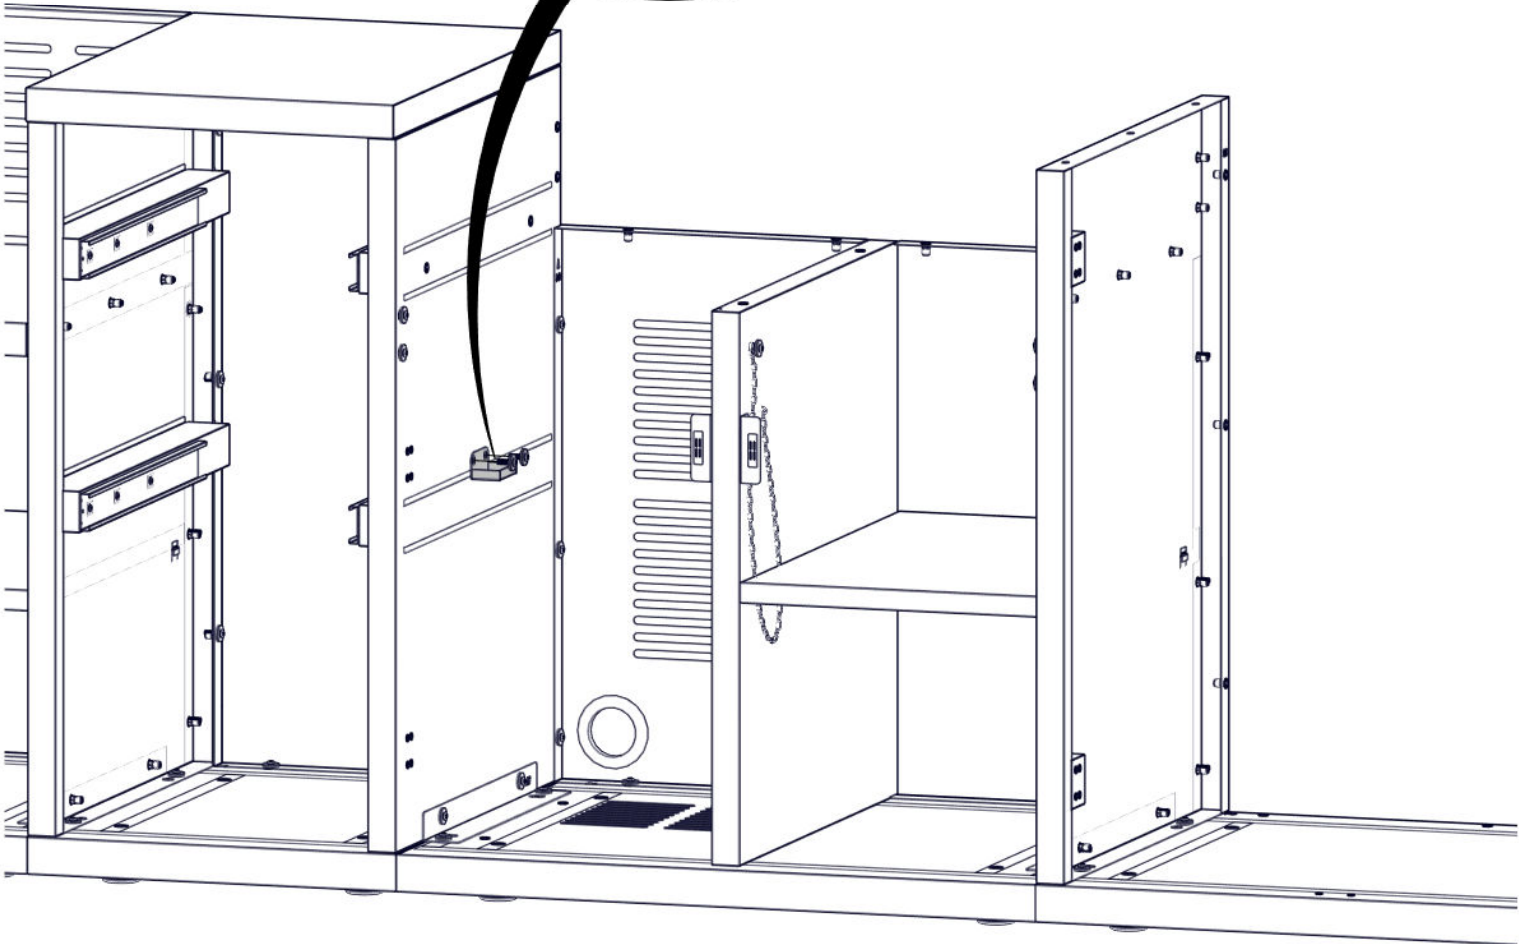


STEP 35- CABINET ASSEMBLY

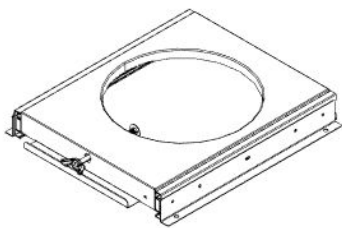


Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"

A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

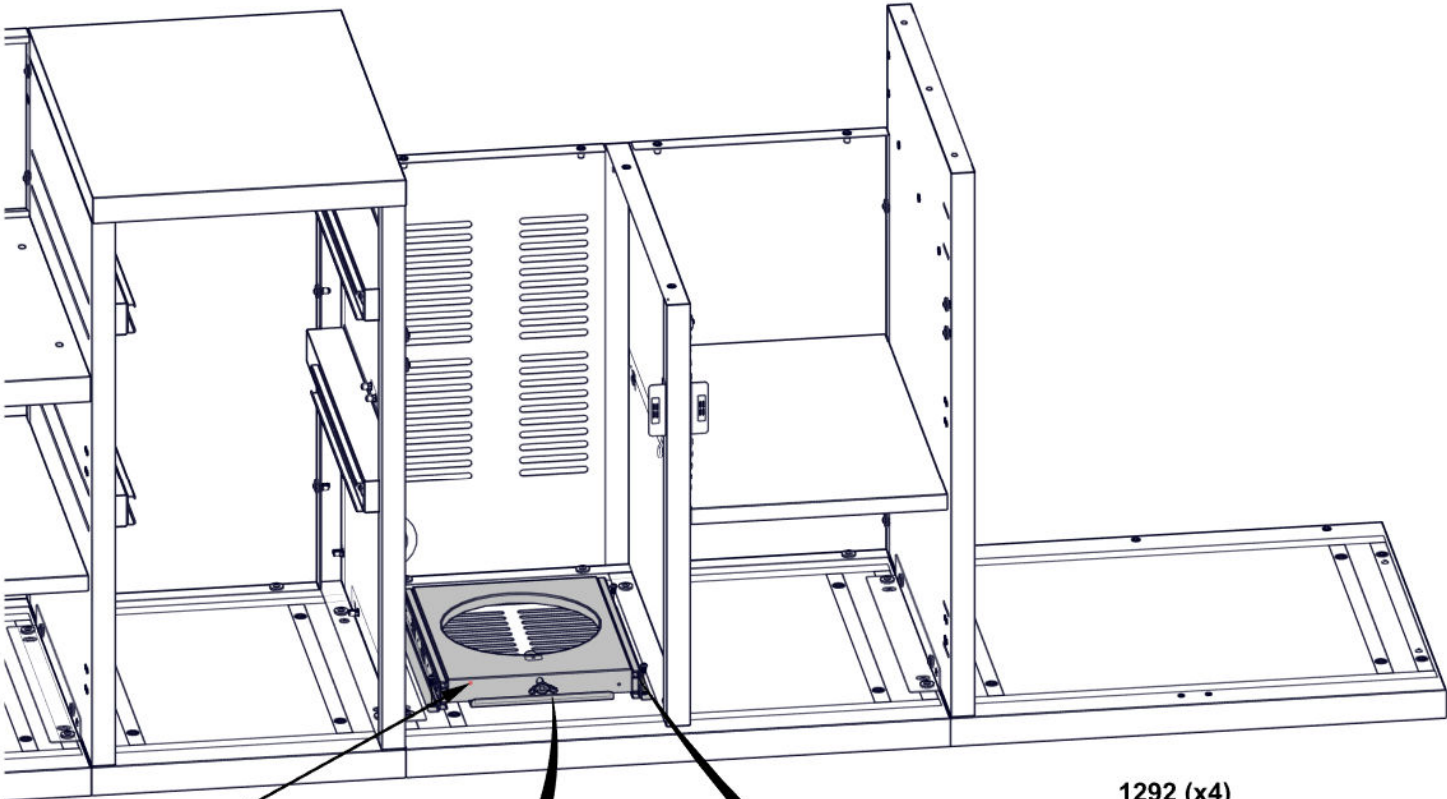


A13 (x1)
GAS TANK HOLDER ASSEMBLY


1292 (x4)
TORX PAN HEAD 1/4-20x13/32"

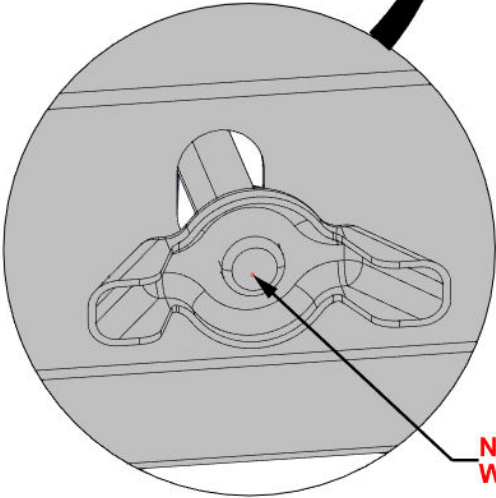

NOTE ORIENTATION OF
WING NUT TOWARDS FRONT

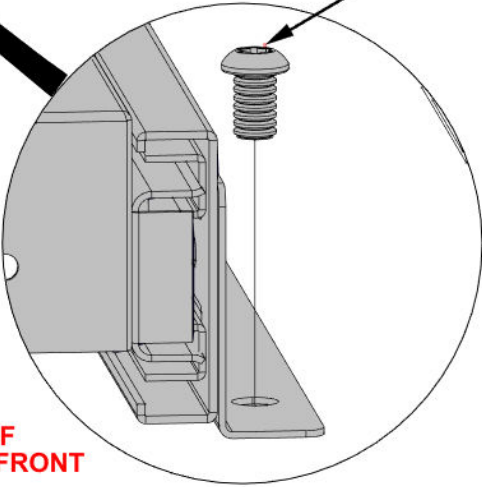


STEP 36- CABINET ASSEMBLY

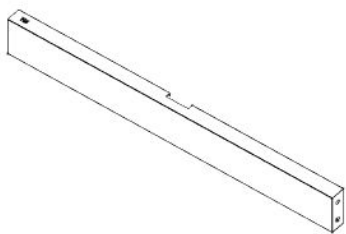


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

H4 BEAM - A4M05469
(x1) 31 7/16"x3 9/16"x1 3/8" (35x90x798)

- **HARDWARE ATTACHES ON INSIDE OF CABINET**
- **IT IS RECOMMENDED TO USE PROVIDED ANGLE DRIVER TO INSTALL HARDWARE IN THIS STEP.**

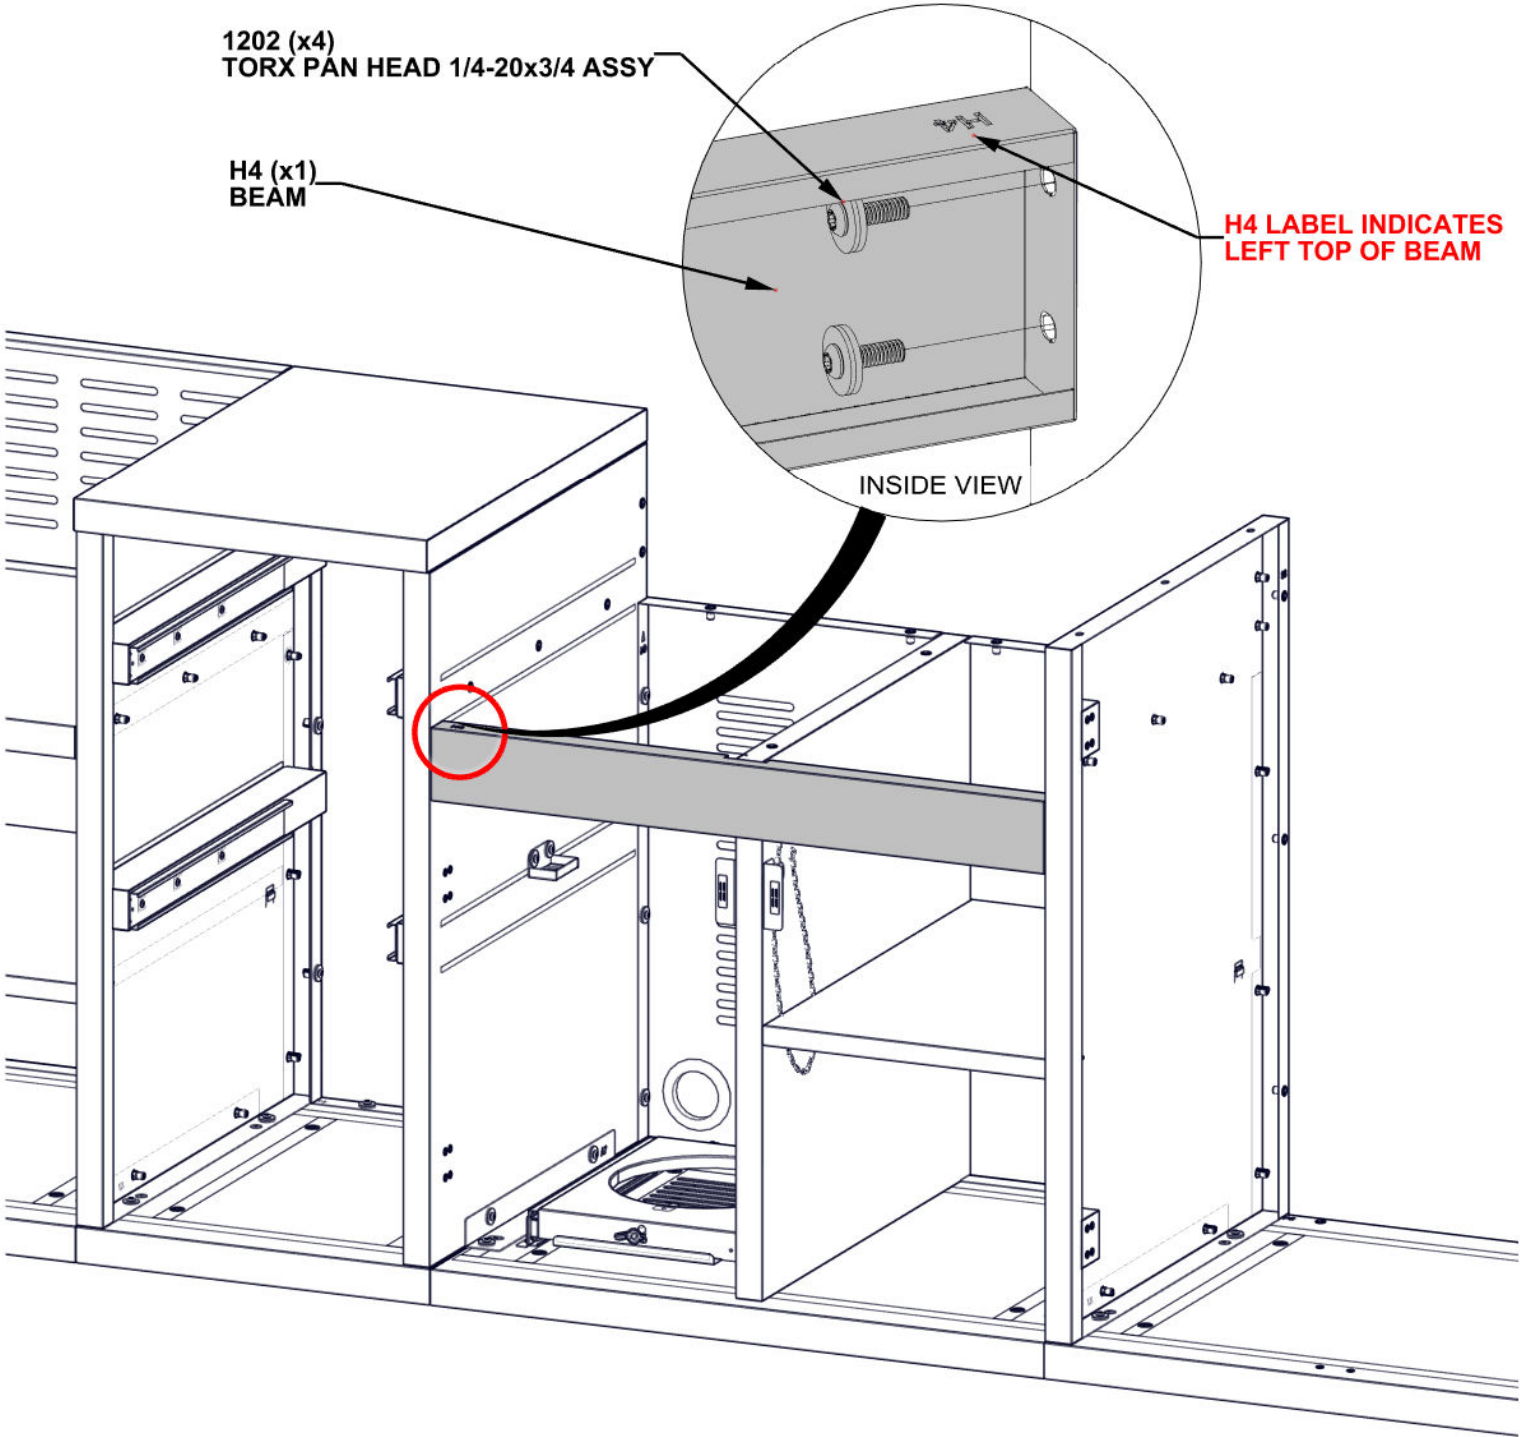


STEP 37- CABINET ASSEMBLY

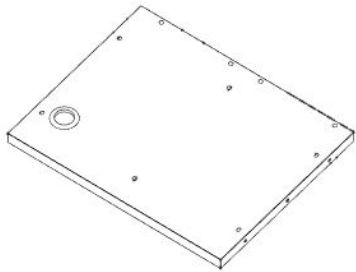

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


T4 TABLETOP PANEL ASSEMBLY - A4M05470
(x1) 31 7/16"x25"x1 9/16" (40x635x798)

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.
- ALIGN SLOTS IN TABLETOP WITH THREADED INSERTS IN SIDE AND BACK PANELS.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.
- DO NOT USE TABLETOP SURFACE AS A WORK BENCH.

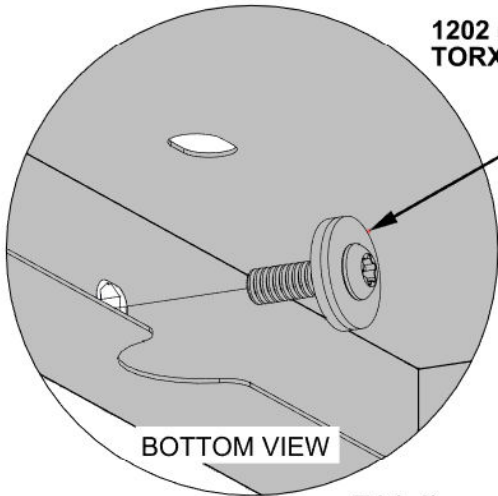


1202 (x6)
TORX PAN HEAD 1/4-20x3/4 ASSY

BOTTOM VIEW

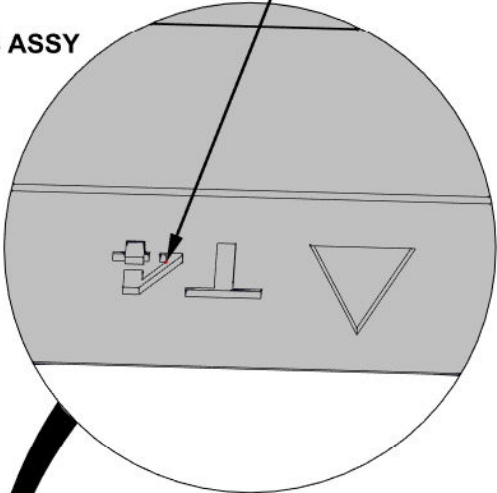


T4 LABEL ON BOTTOM
SIDE INDICATES BACK

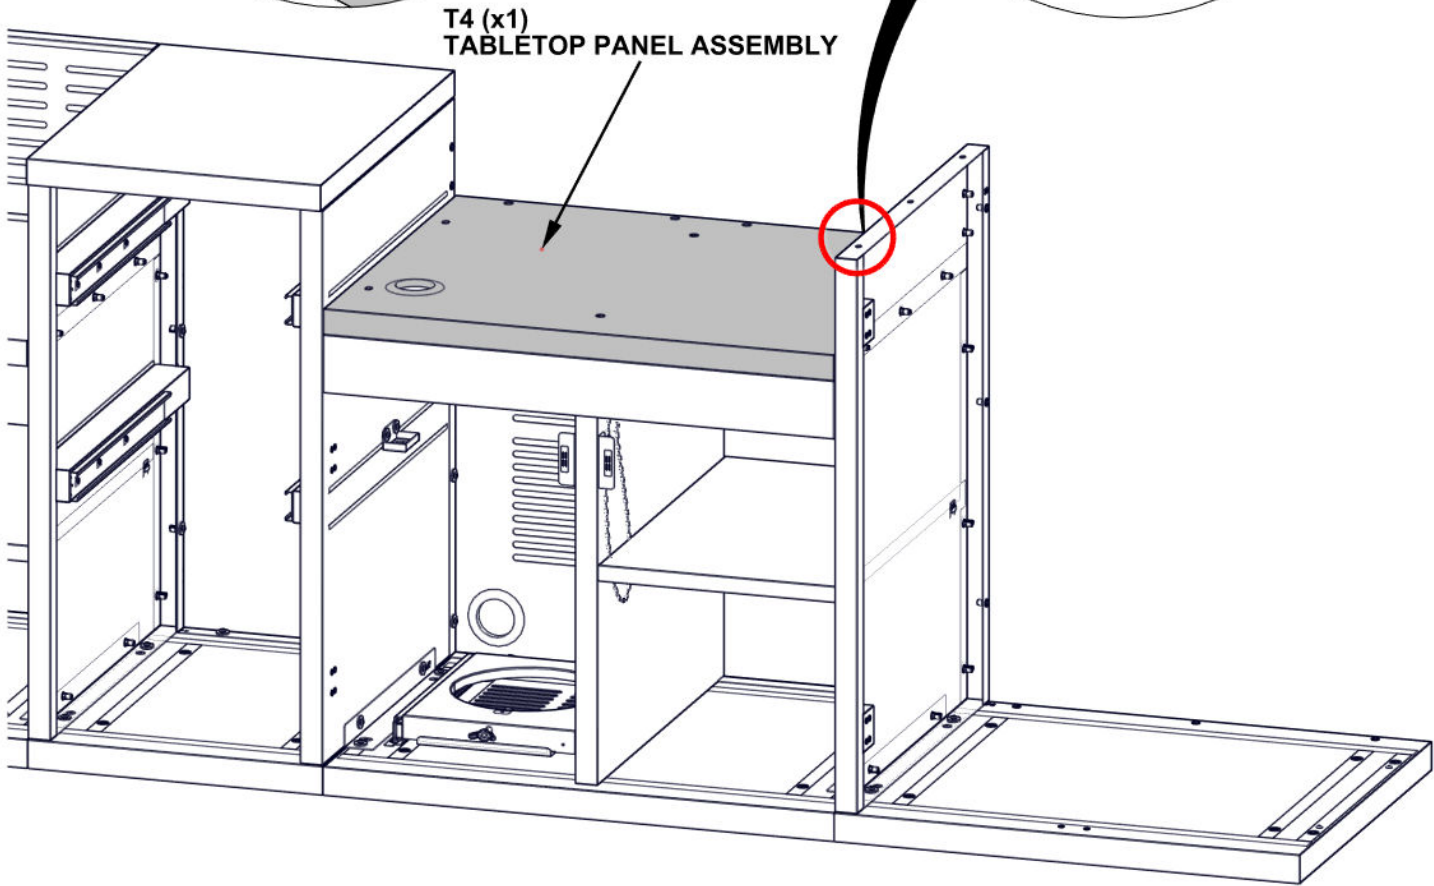


T4 (x1)
TABLETOP PANEL ASSEMBLY

STEP 38- CABINET ASSEMBLY

Qty	PartNo	Description
6	H101103	TORX SOCKET SCREW 1/4-20

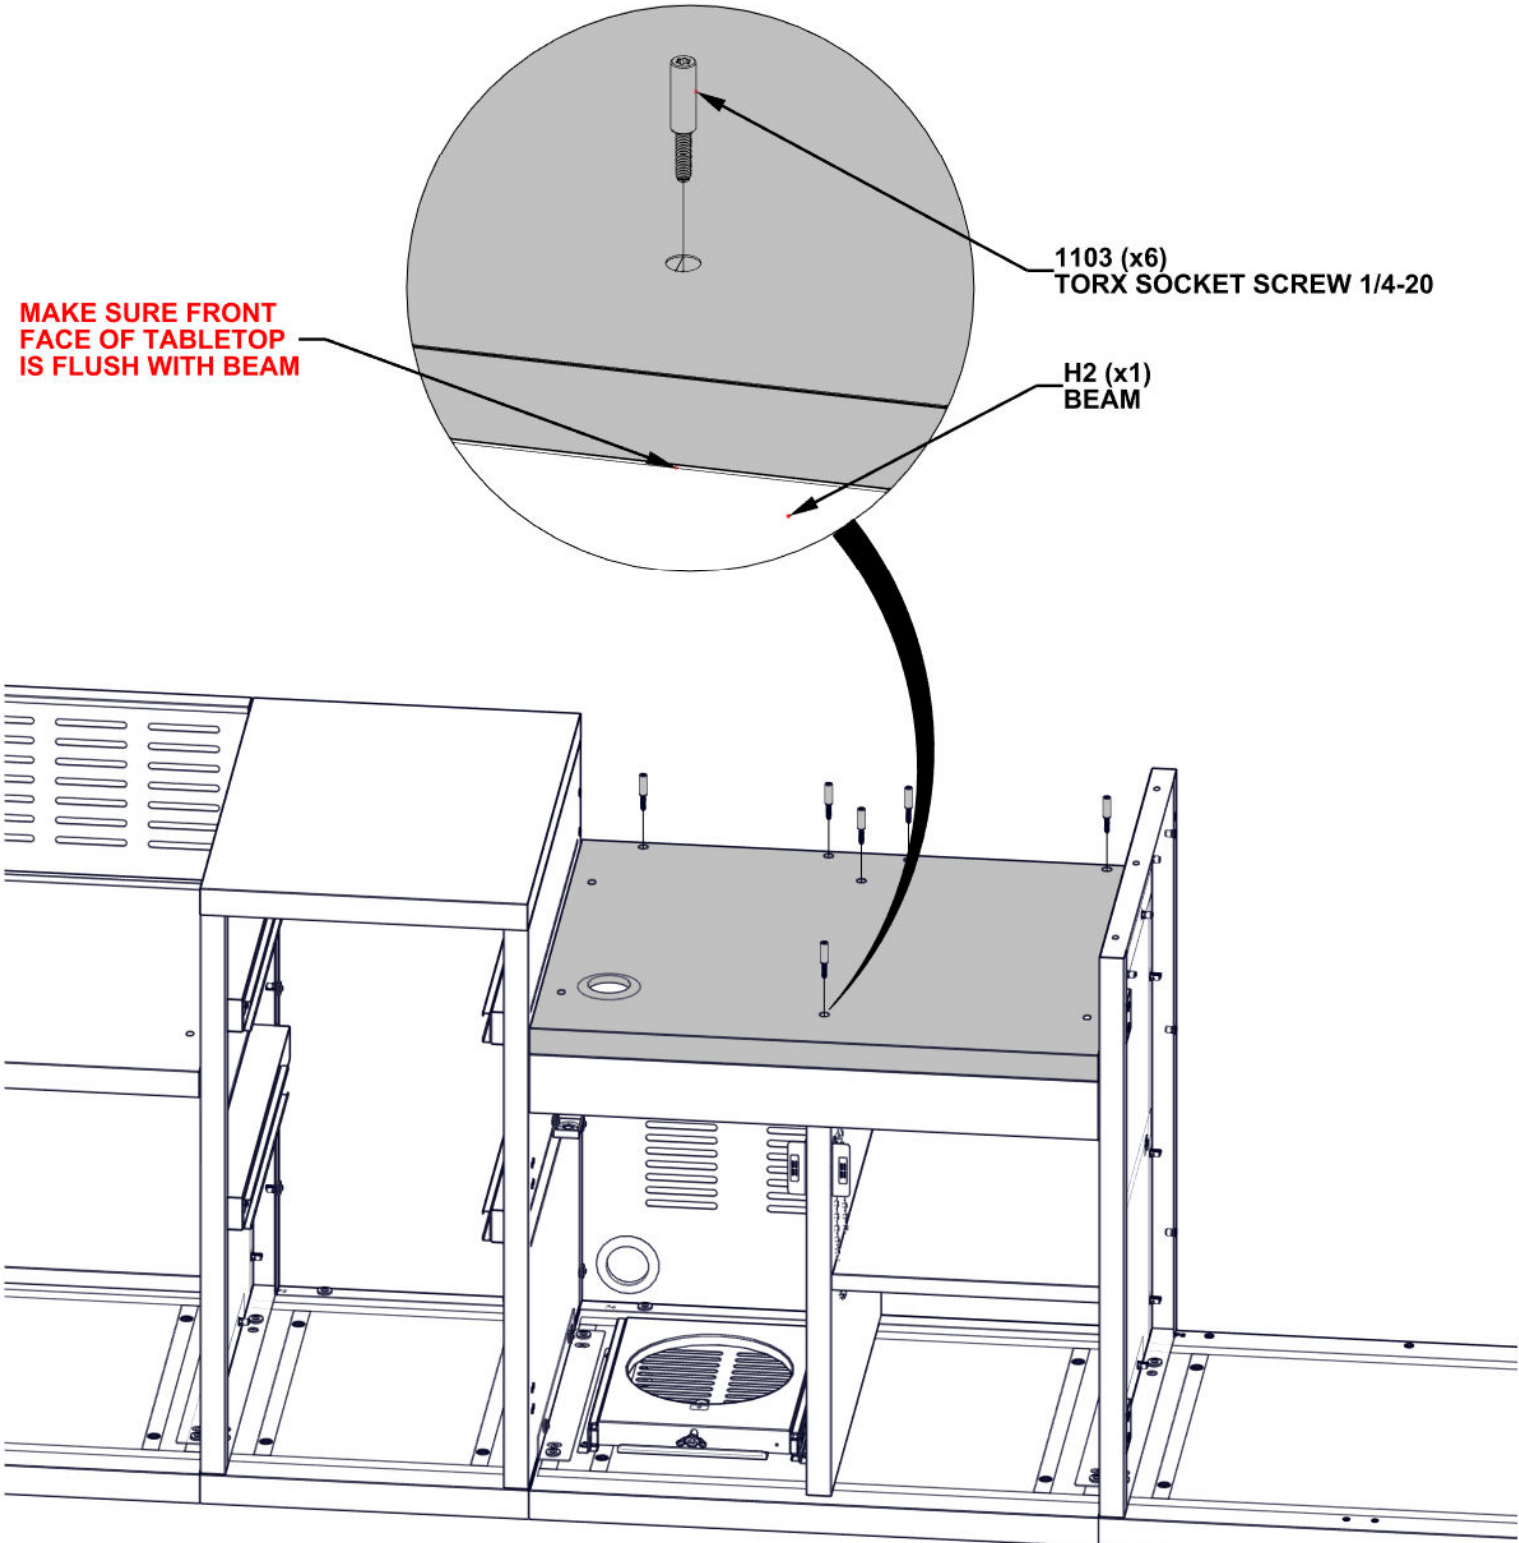


STEP 39- FRIDGE CABINET ASSEMBLY

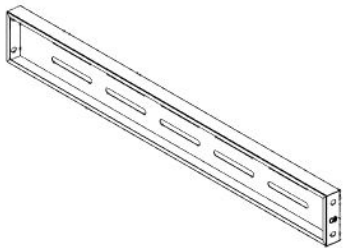


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

O8 VENTILATION PANEL - A4M03078
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)

- IT IS RECOMMENDED TO USE PROVIDED ANGLE DRIVER TO INSTALL HARDWARE IN THIS STEP.

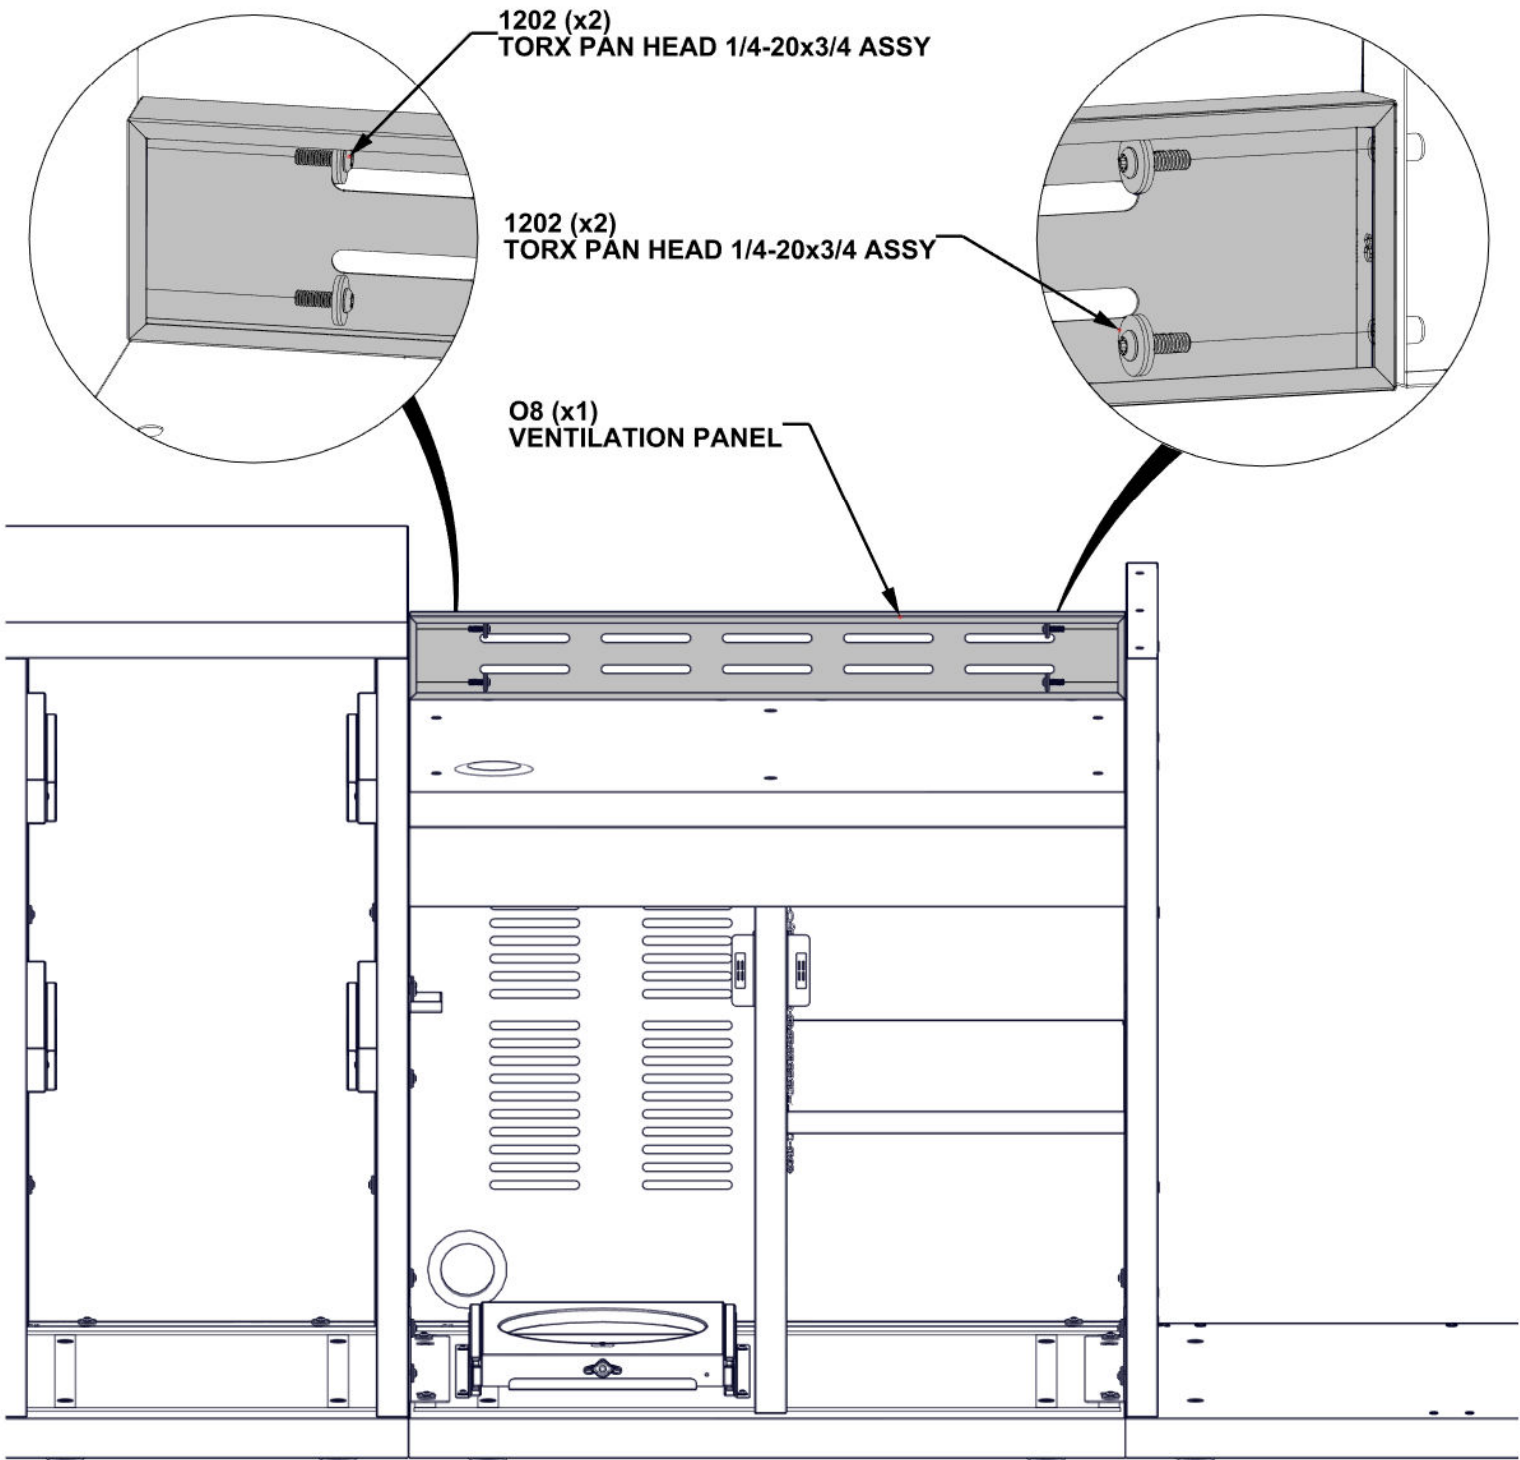


STEP 41- FRIDGE CABINET ASSEMBLY

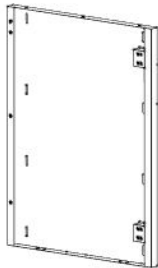


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S7 SIDE PANEL ASSEMBLY - A4M05475
(x1) 33 3/4"x25"x1 3/8" (35x635x857)

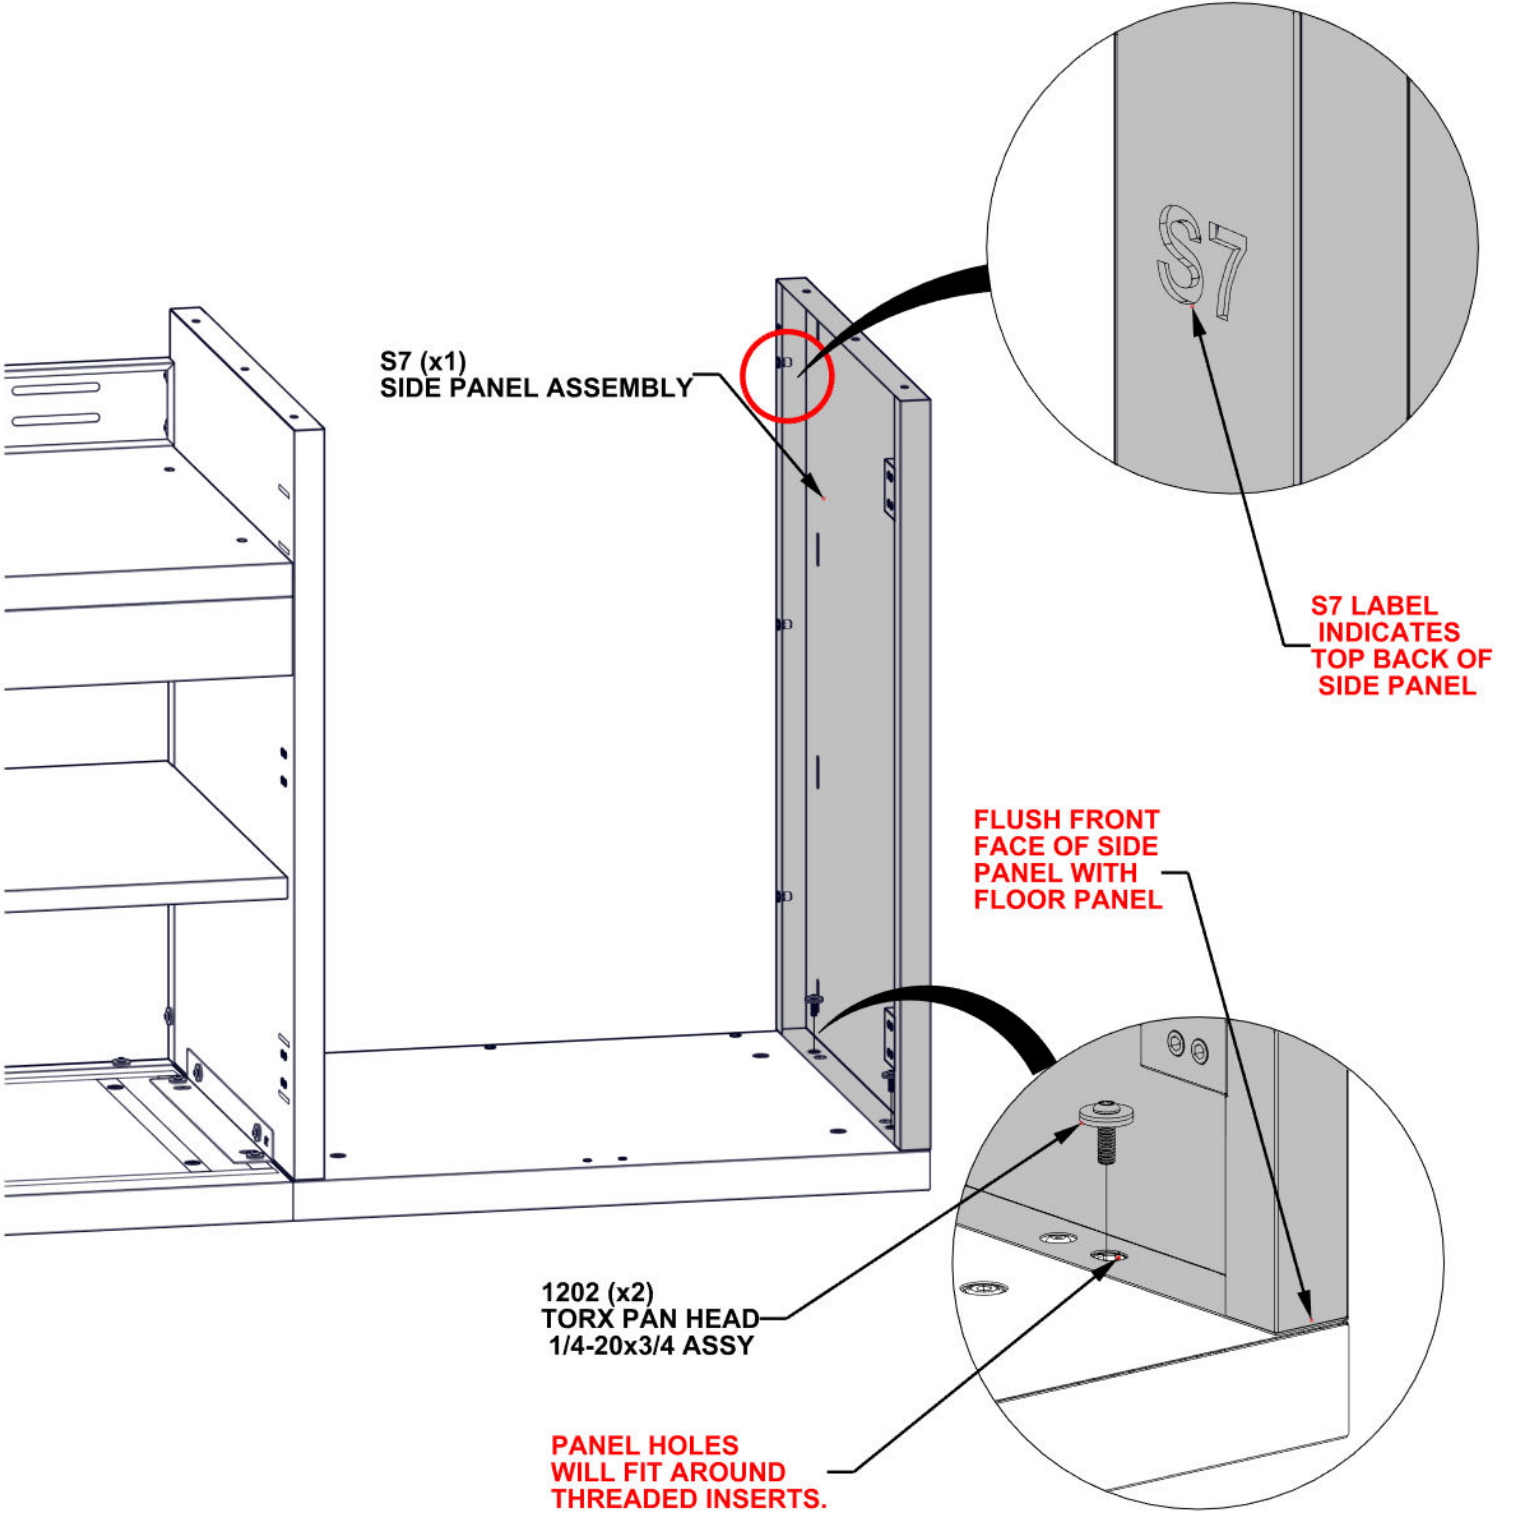


STEP 41- FRIDGE CABINET ASSEMBLY

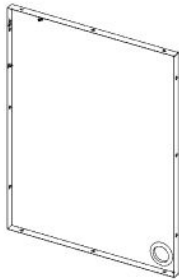


Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

G5 BACK PANEL ASSEMBLY - A4M05477
(x1) 33 3/4"x25 13/16"x1 3/16" (30x655x857)

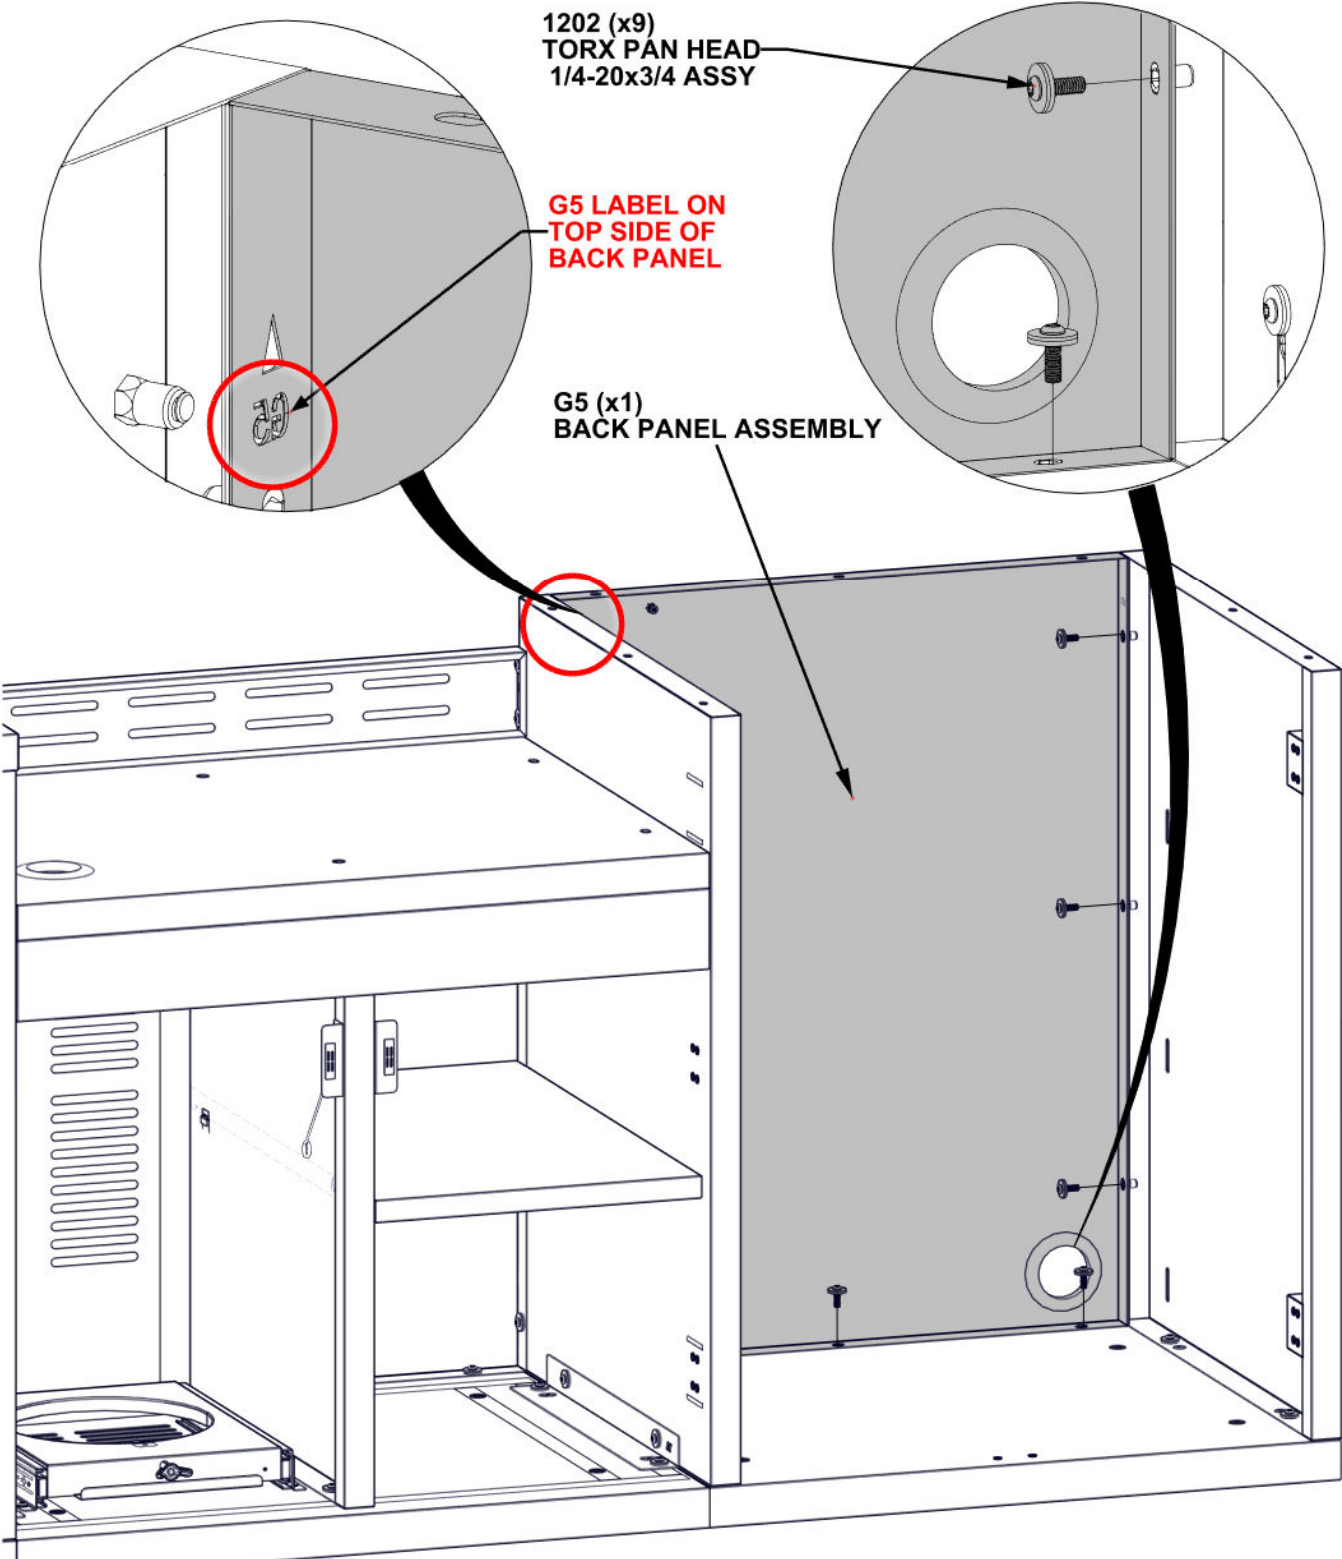


STEP 42- FRIDGE CABINET ASSEMBLY

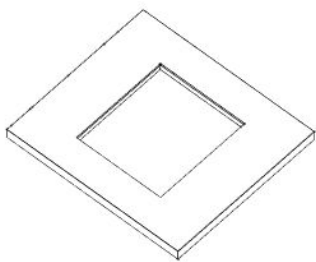


Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

T5 TABLETOP PANEL ASSEMBLY - A4M05479
(x1) 28 5/8"x25 5/16"x1 5/8" (41x643x727)

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.
- IT IS RECOMMENDED TO USE PROVIDED ANGLE DRIVER TO INSTALL HARDWARE IN THIS STEP.
- **ALIGN THREADED INSERTS ON TABLETOP WITH SLOTS IN SIDE AND BACK PANELS.**
- **SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.**
- **DO NOT USE TABLETOP SURFACE AS A WORK BENCH.**

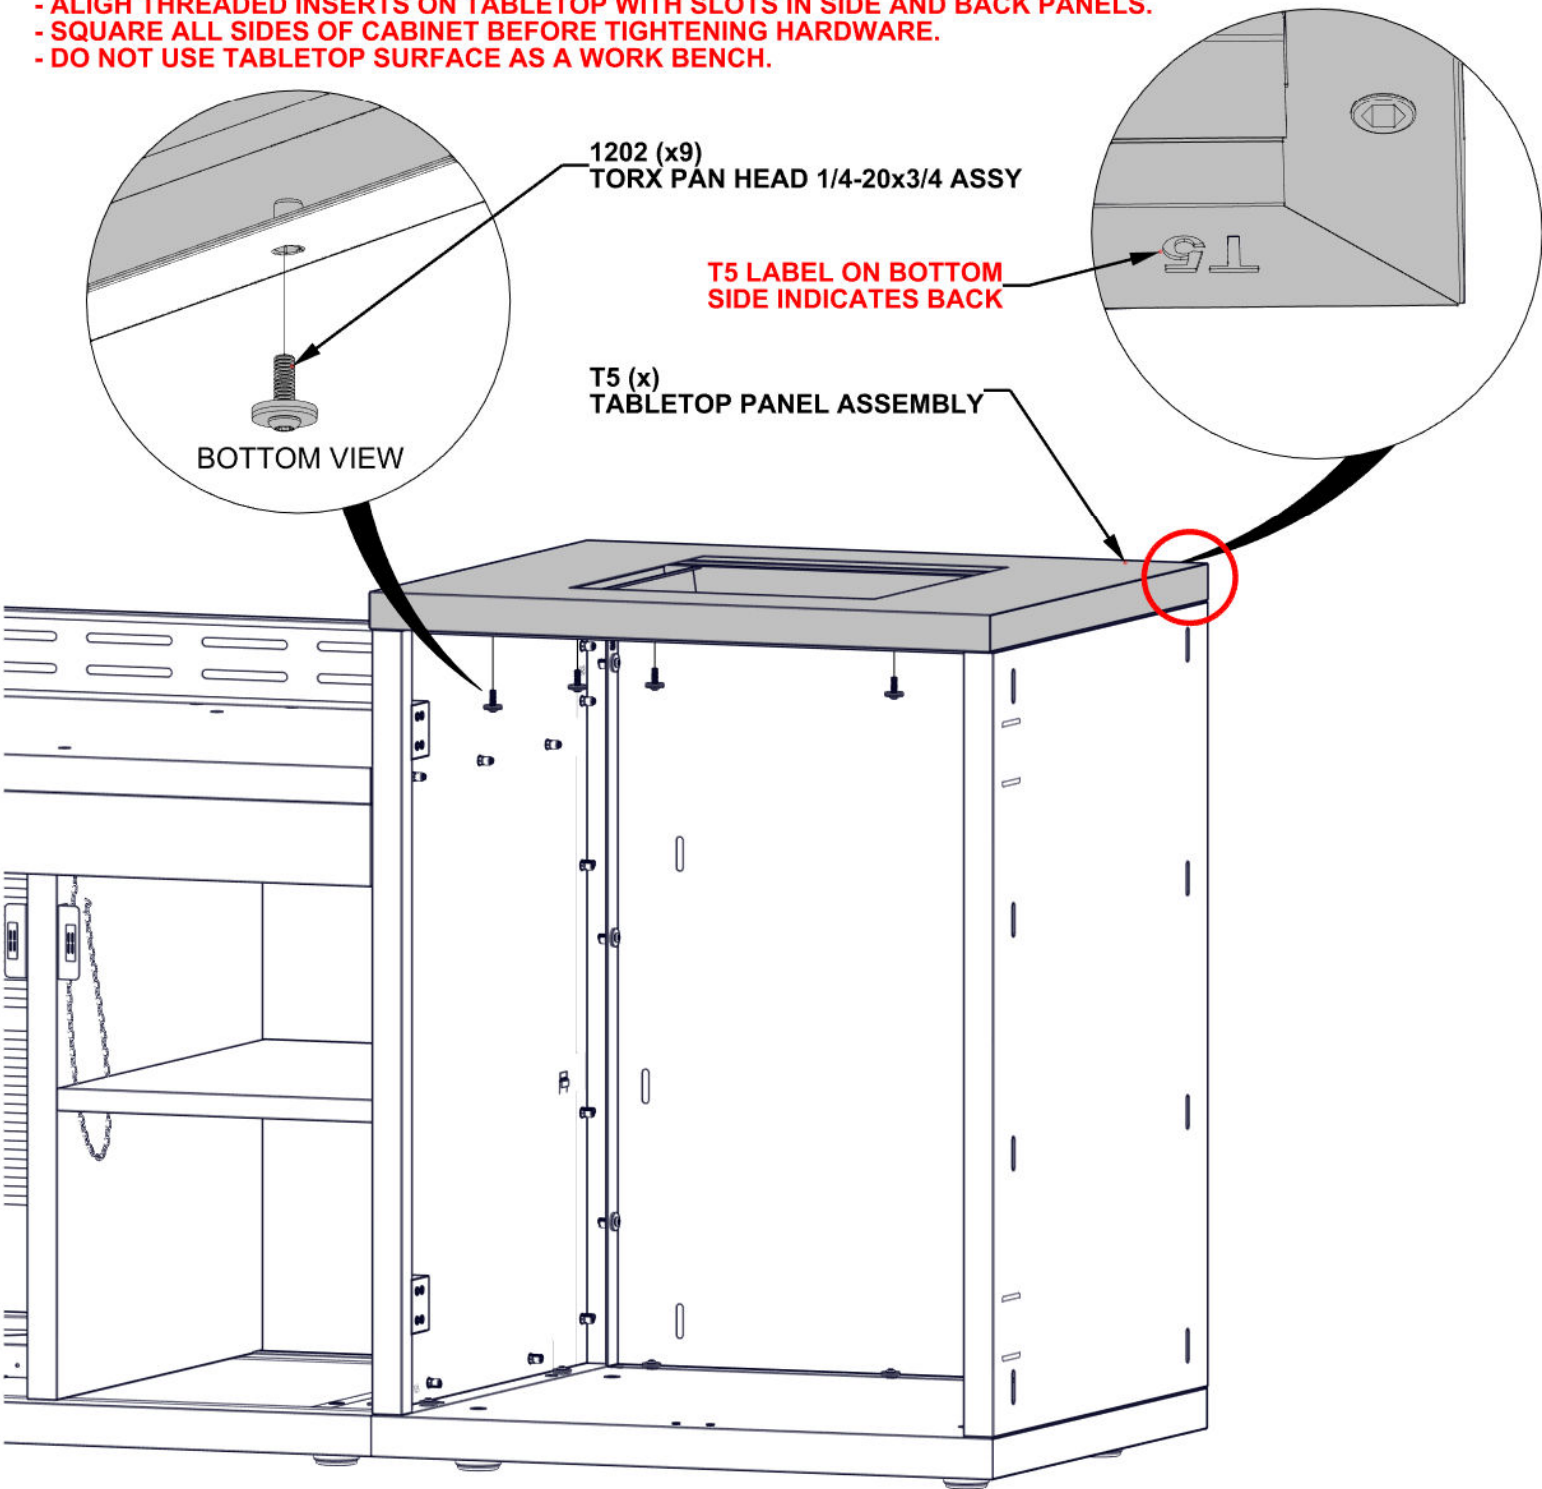

STEP 43- CABINET DOOR ATTACHMENT




A4 RESTRICTIVE BRACKET - A4M06228
(x1) 2 3/4"x7/8"x7/16"x7/16" (11.5x21.5x70)




A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS

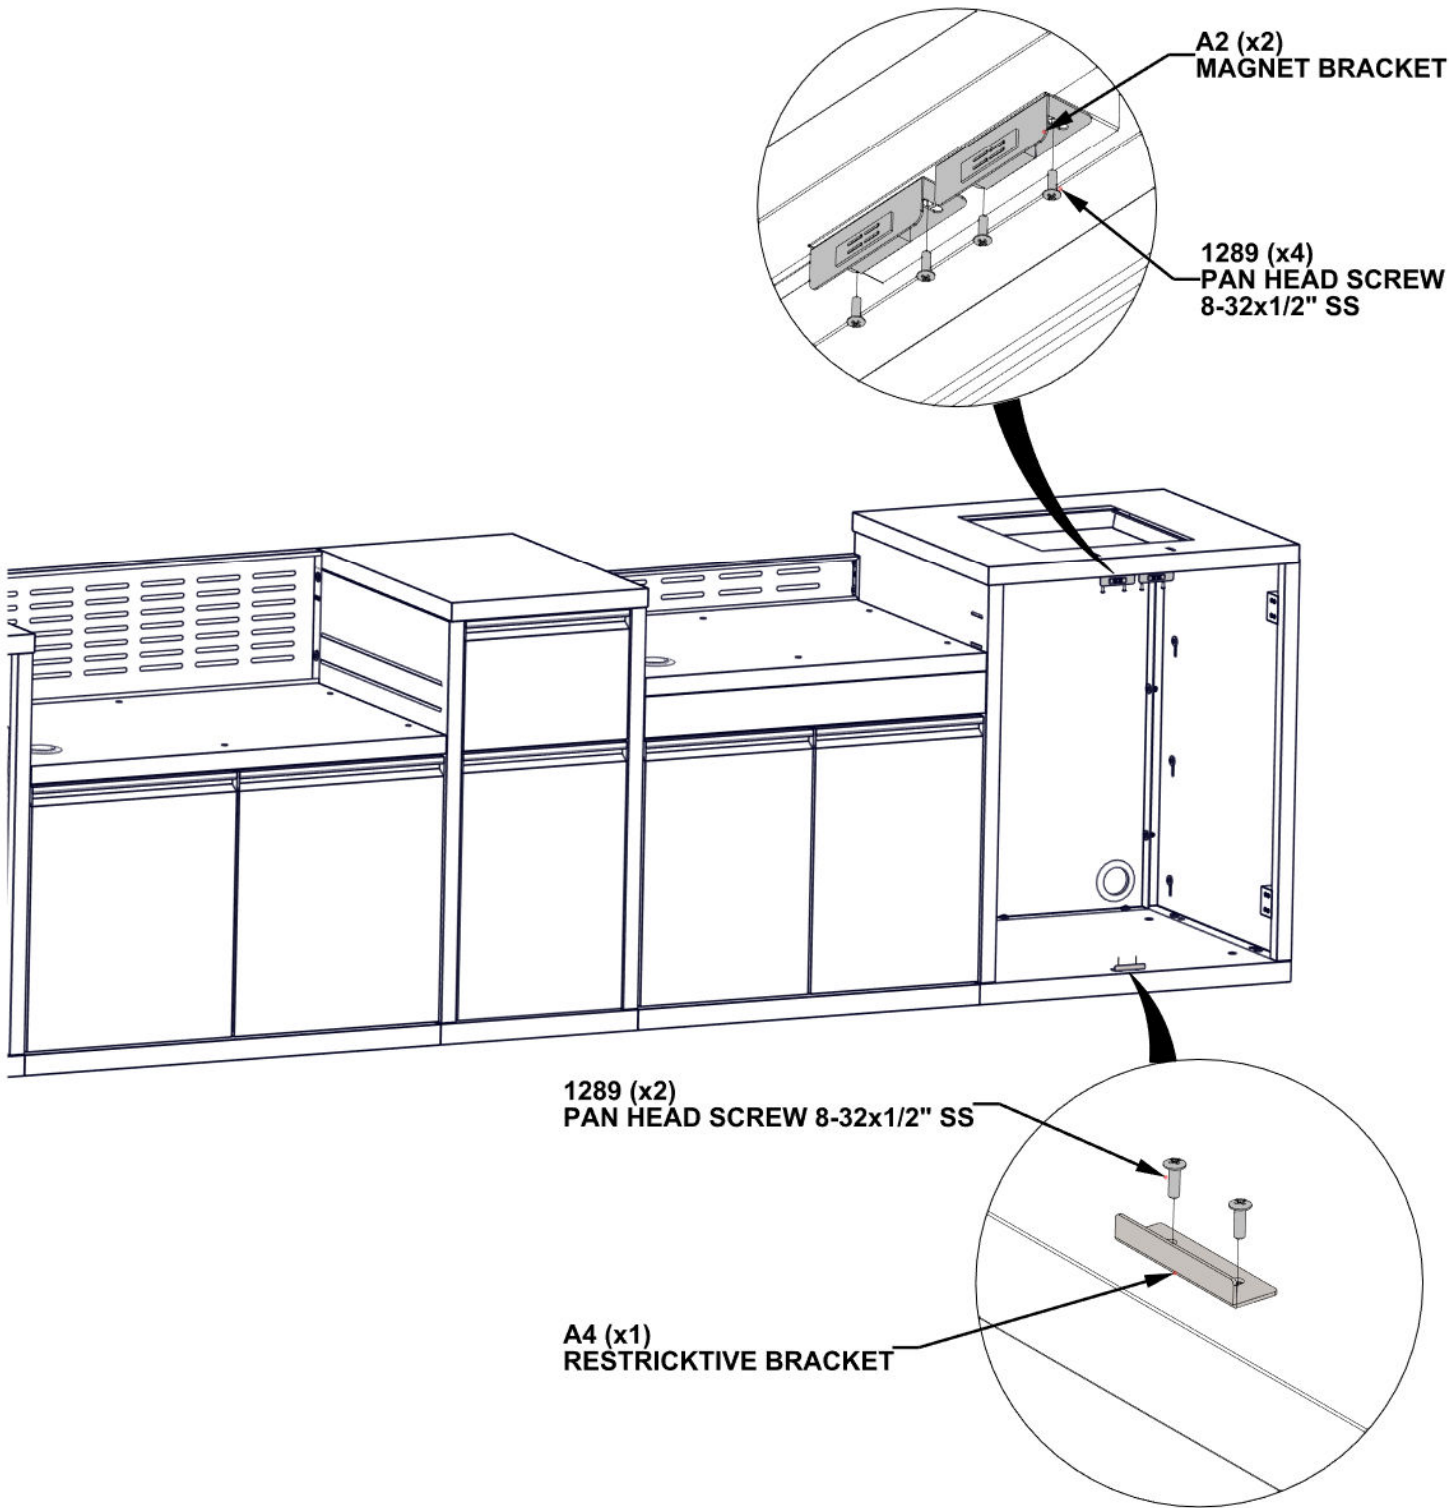


STEP 44- POST ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

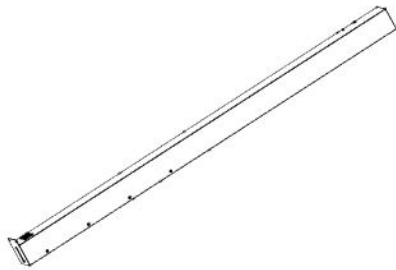


P02 FRONT POST ASSEMBLY - A4M05509
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)



A01 BRACKET - A4M02018
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

1202 (x4)
TORX PAN HEAD
1/4-20x3/4 ASSY

BRACKET HOLES
WILL FIT AROUND
THREADED INSERTS

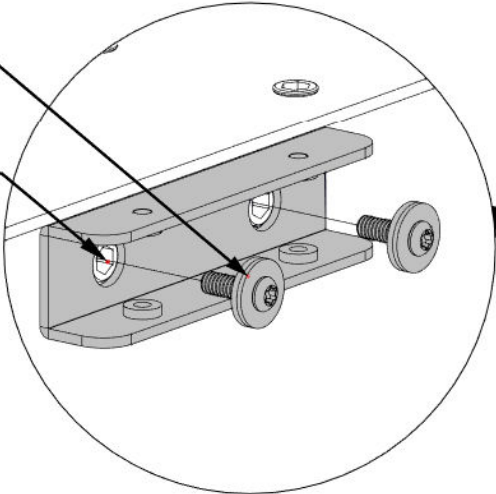

NOTE THE 4
THREADED
INSERTS FOR
ORIENTATION


A01 (x1)
BRACKET

A01 (x1)
BRACKET

P02 (x1)
FRONT POST ASSEMBLY

STEP 45- POST ASSEMBLY


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

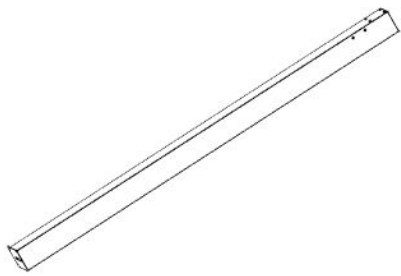

P01 FRONT POST ASEMBLY - A4M05508
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)




A01 BRACKET - A4M02018
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

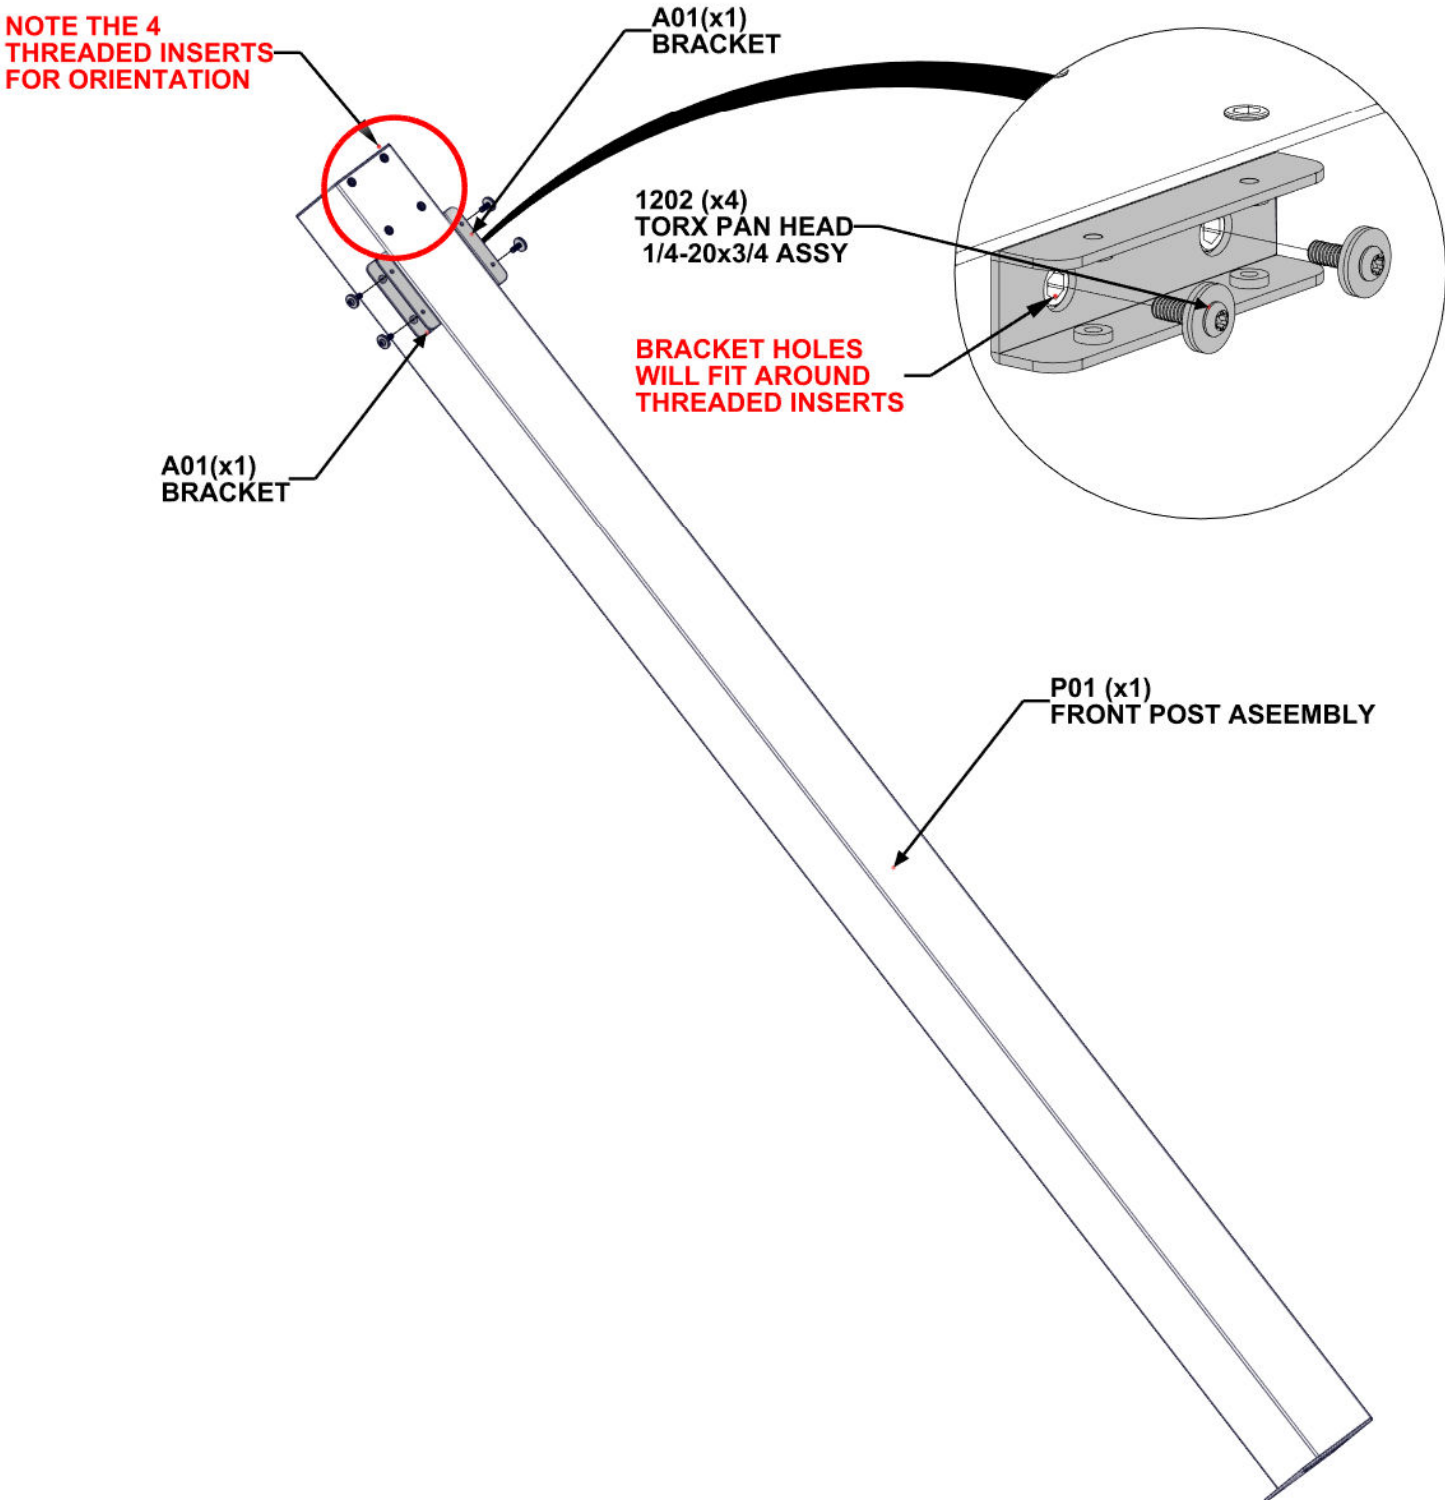

STEP 46- POST ASSEMBLY


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

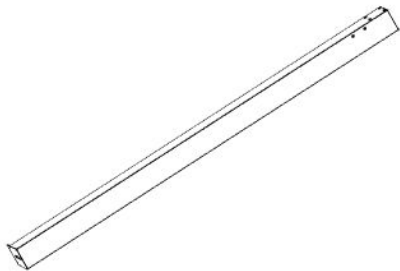

P03 BACK POST ASSEMBLY - A4M05510
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)




A01 BRACKET - A4M02018
(x1) 1"x1 5/16"x5 1/16" (25x33.2x128)

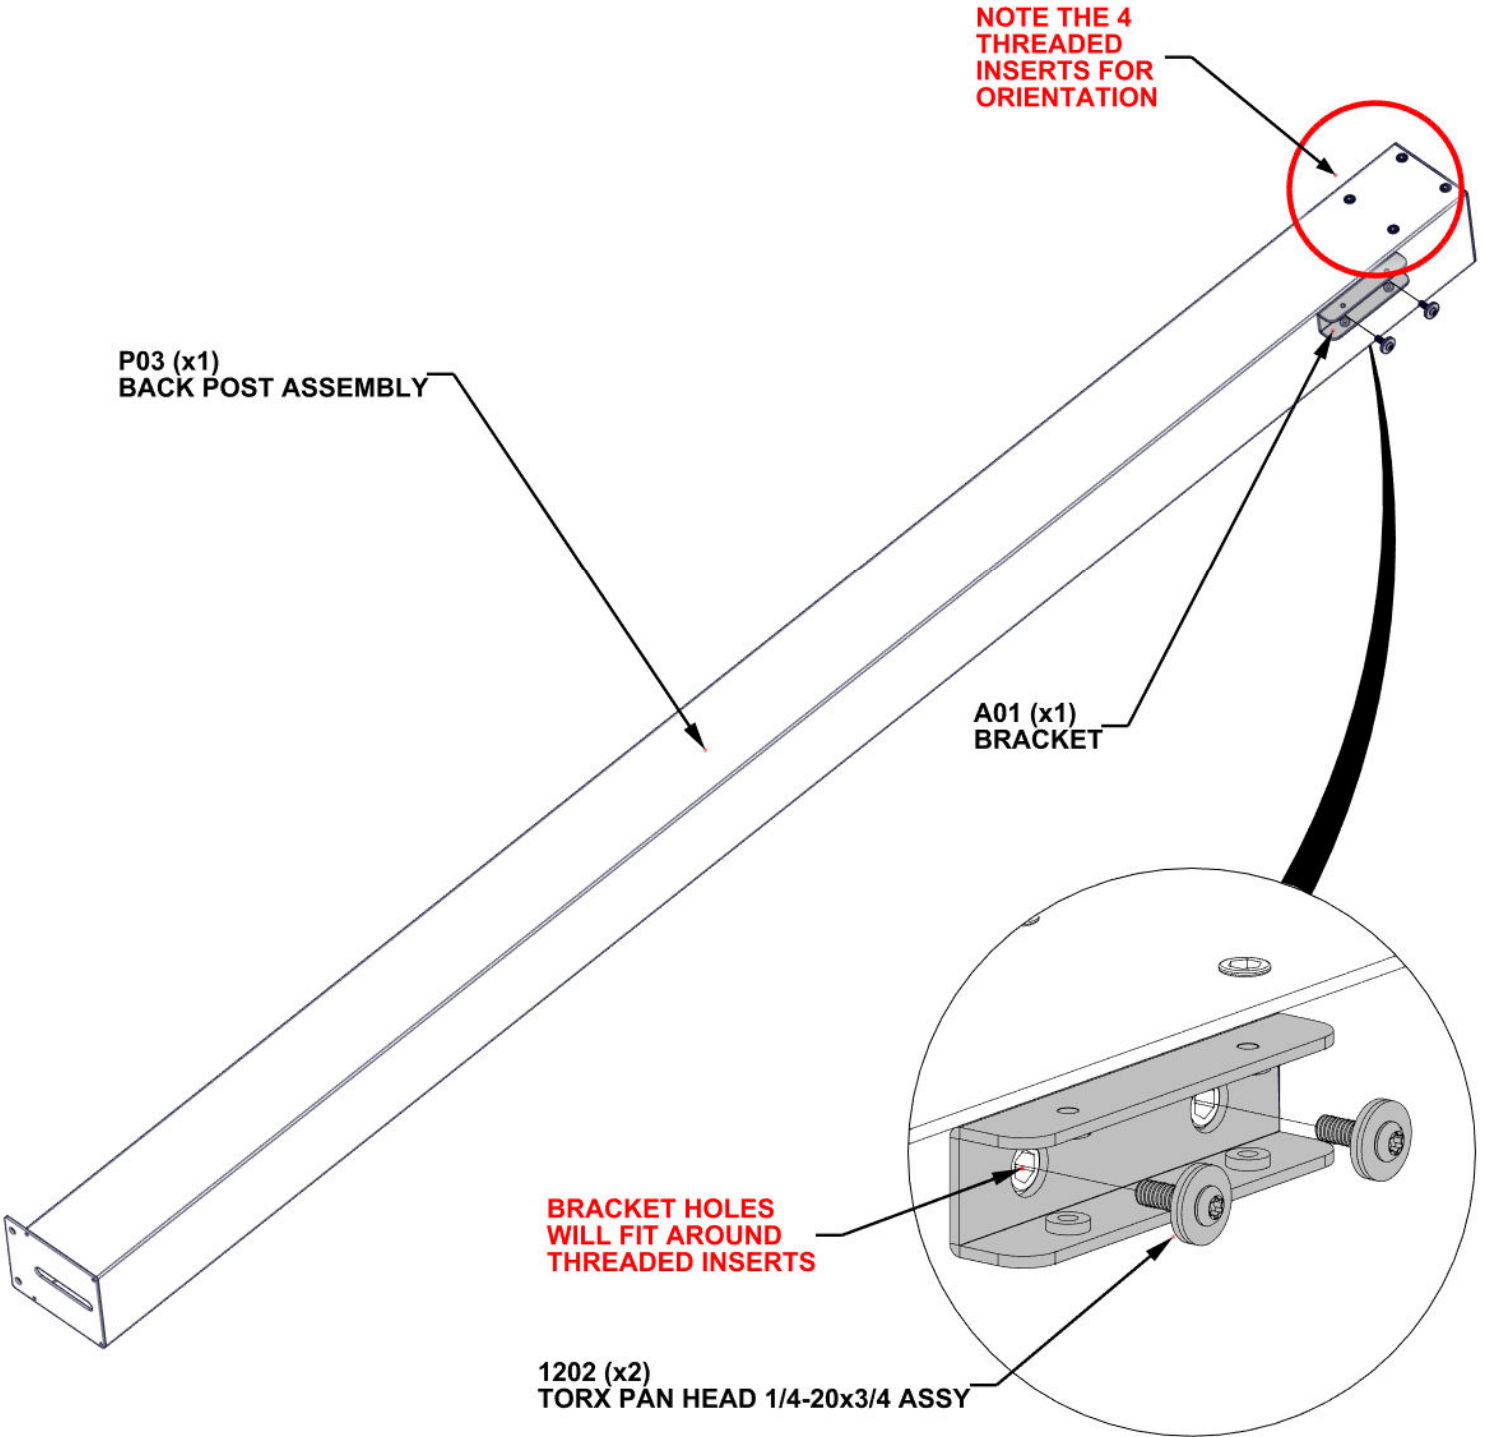

STEP 47- POST ASSEMBLY


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

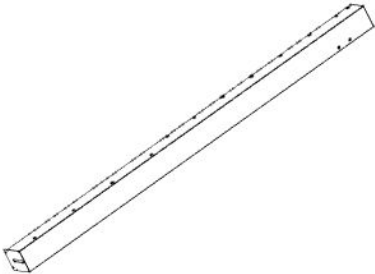


P04 BACK POST ASSEMBLY - A4M05499
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)



A01 BRACKET - A4M02018
(x1) 1"x1 5/16"x5 1/16" (25x33.2x128)

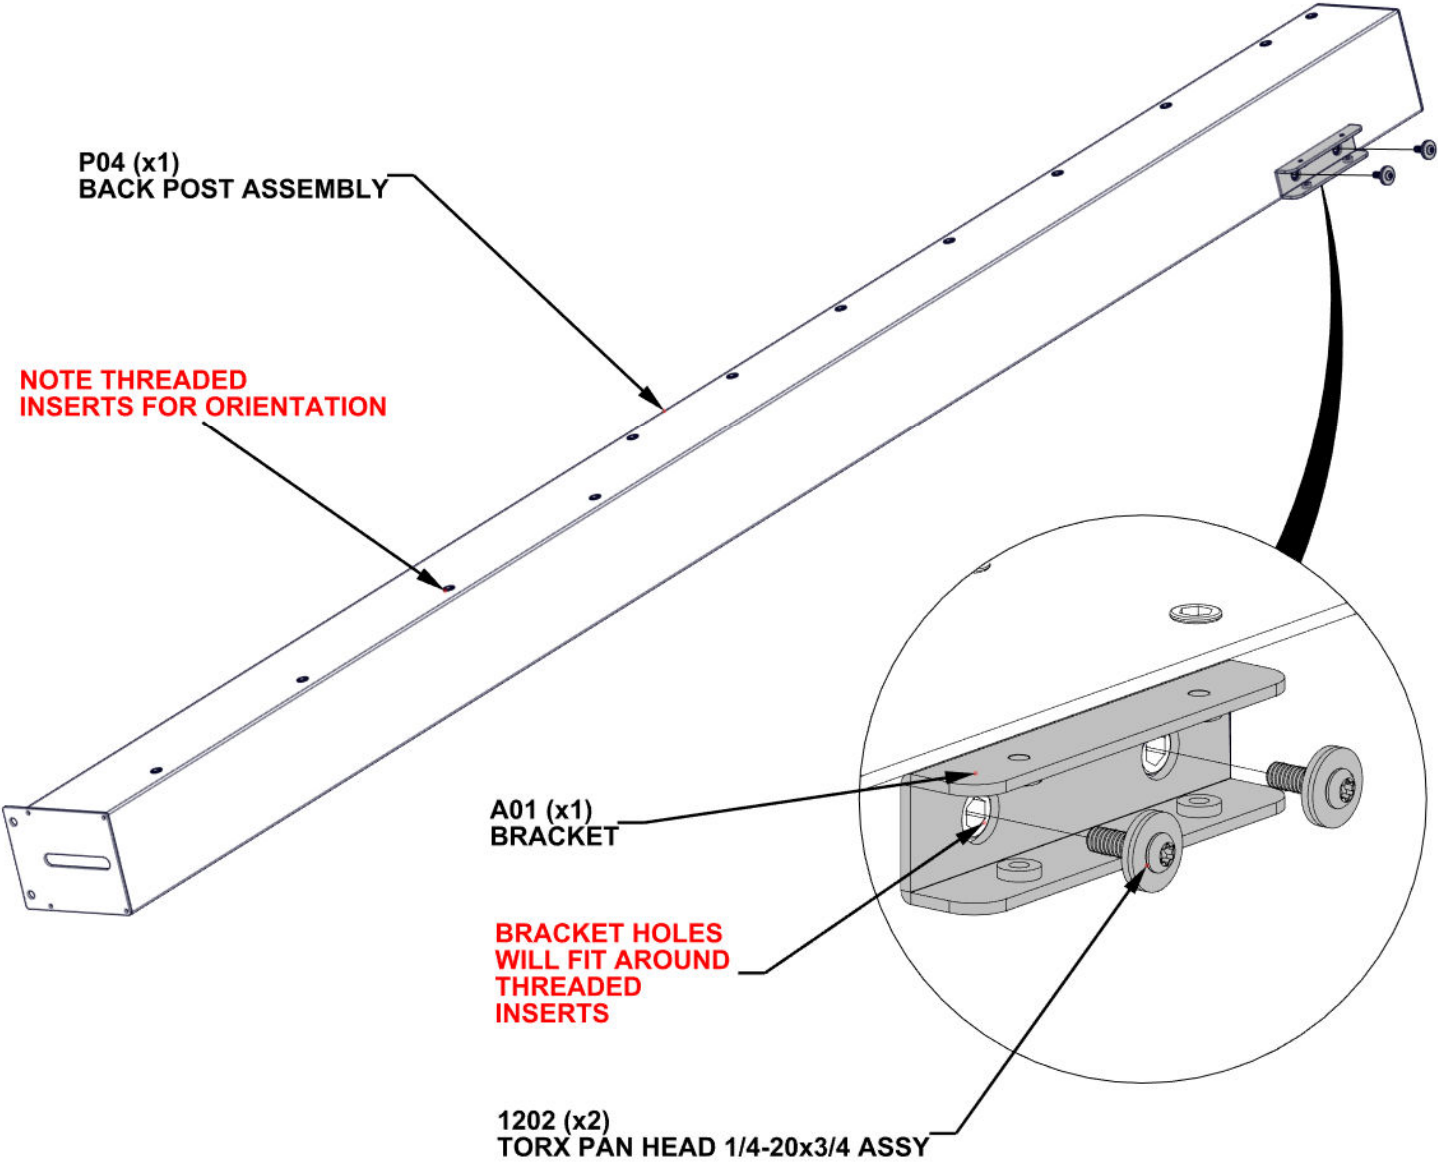


STEP 48- FRAME ASSEMBLY

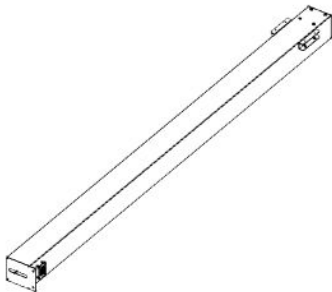

POST ASSEMBLY FROM STEP 44

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- WITH AT LEAST TWO OTHER PEOPLE, ATTACH FRONT POST ASSEMBLY TO CABINET.

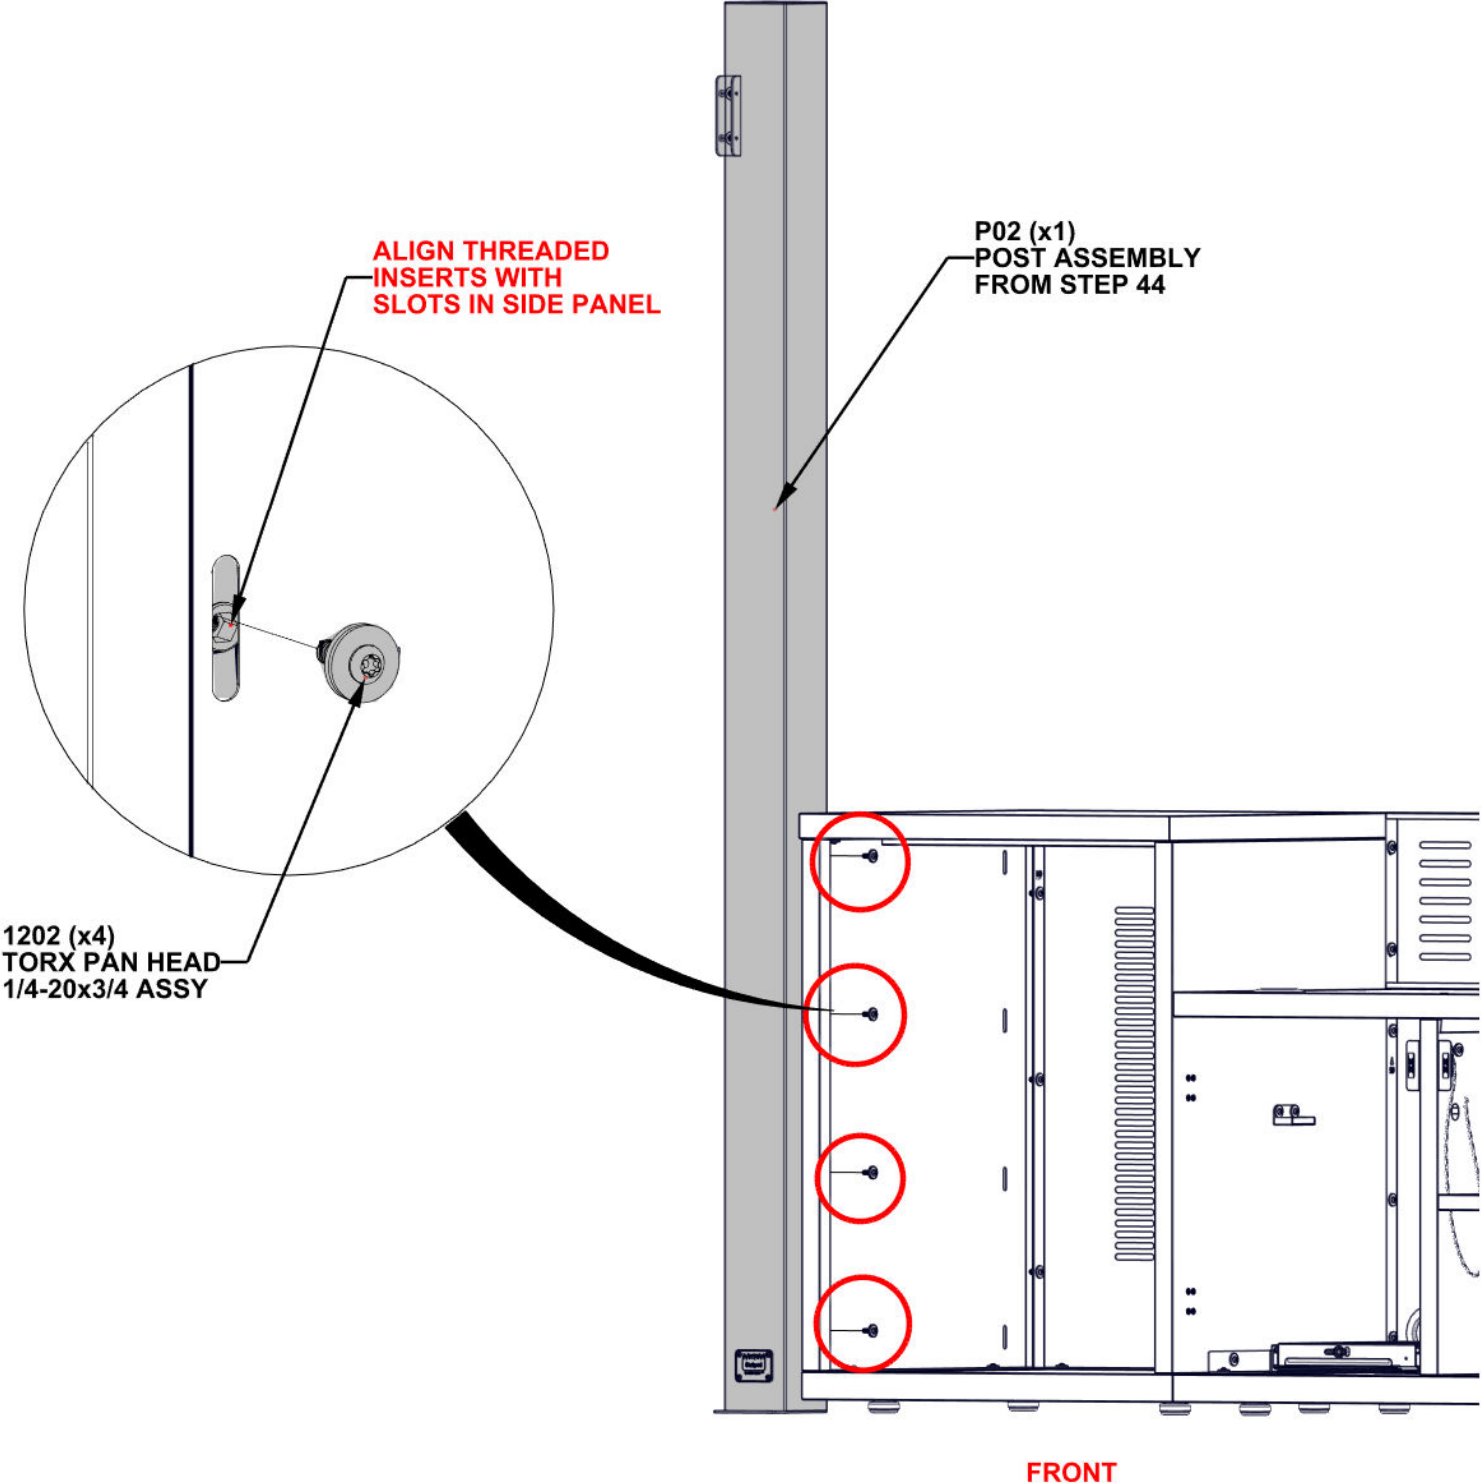


STEP 49- FRAME ASSEMBLY




B04 SIDE BEAM - A4M02019
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

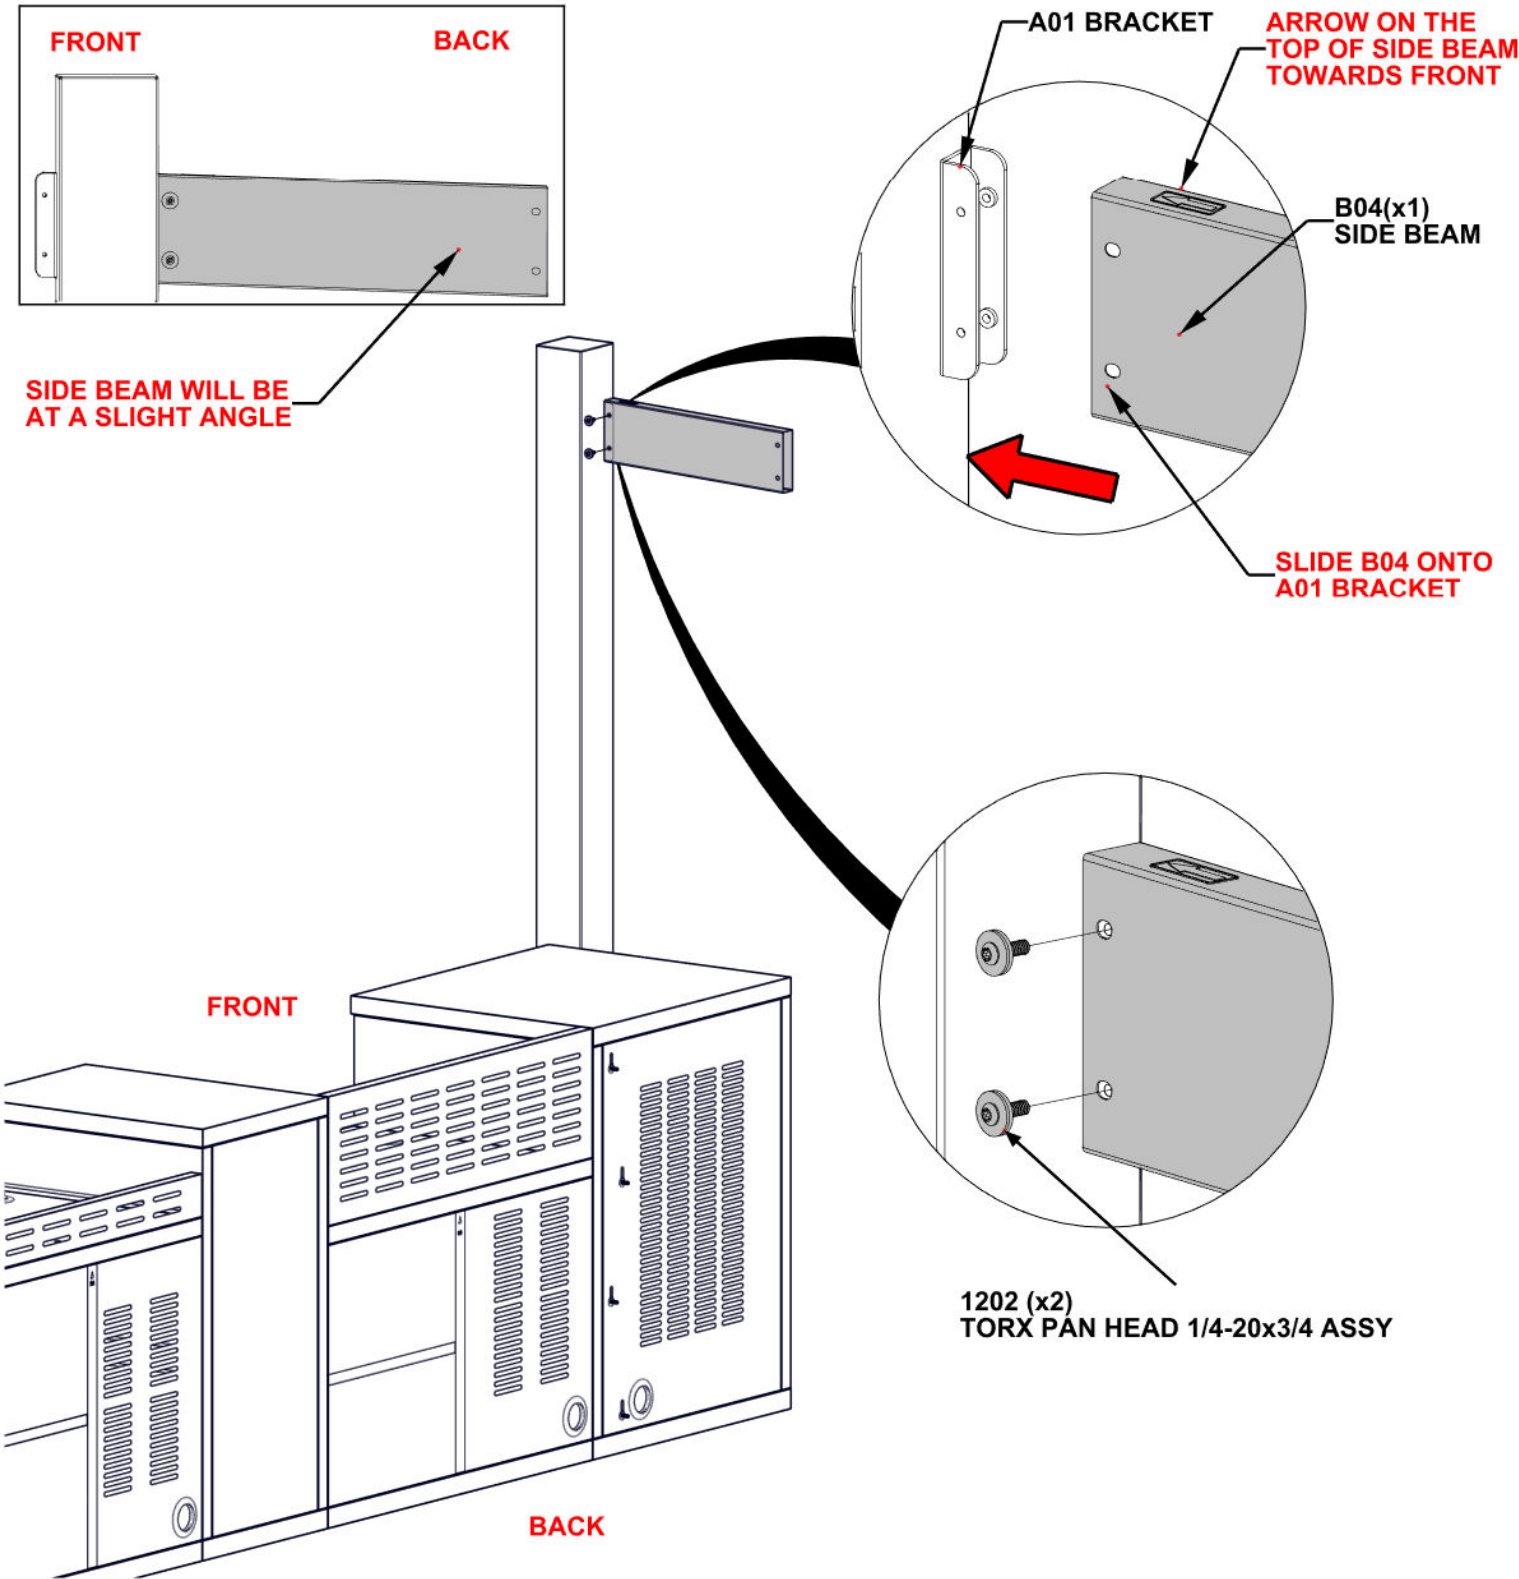


STEP 50- FRAME ASSEMBLY

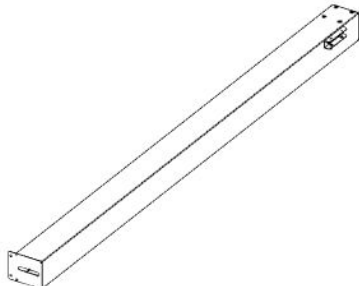


POST ASSEMBLY FROM STEP 46

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- WITH AT LEAST TWO OTHER PEOPLE, ATTACH BACK POST ASSEMBLY TO SIDE BEAM AND CABINET.

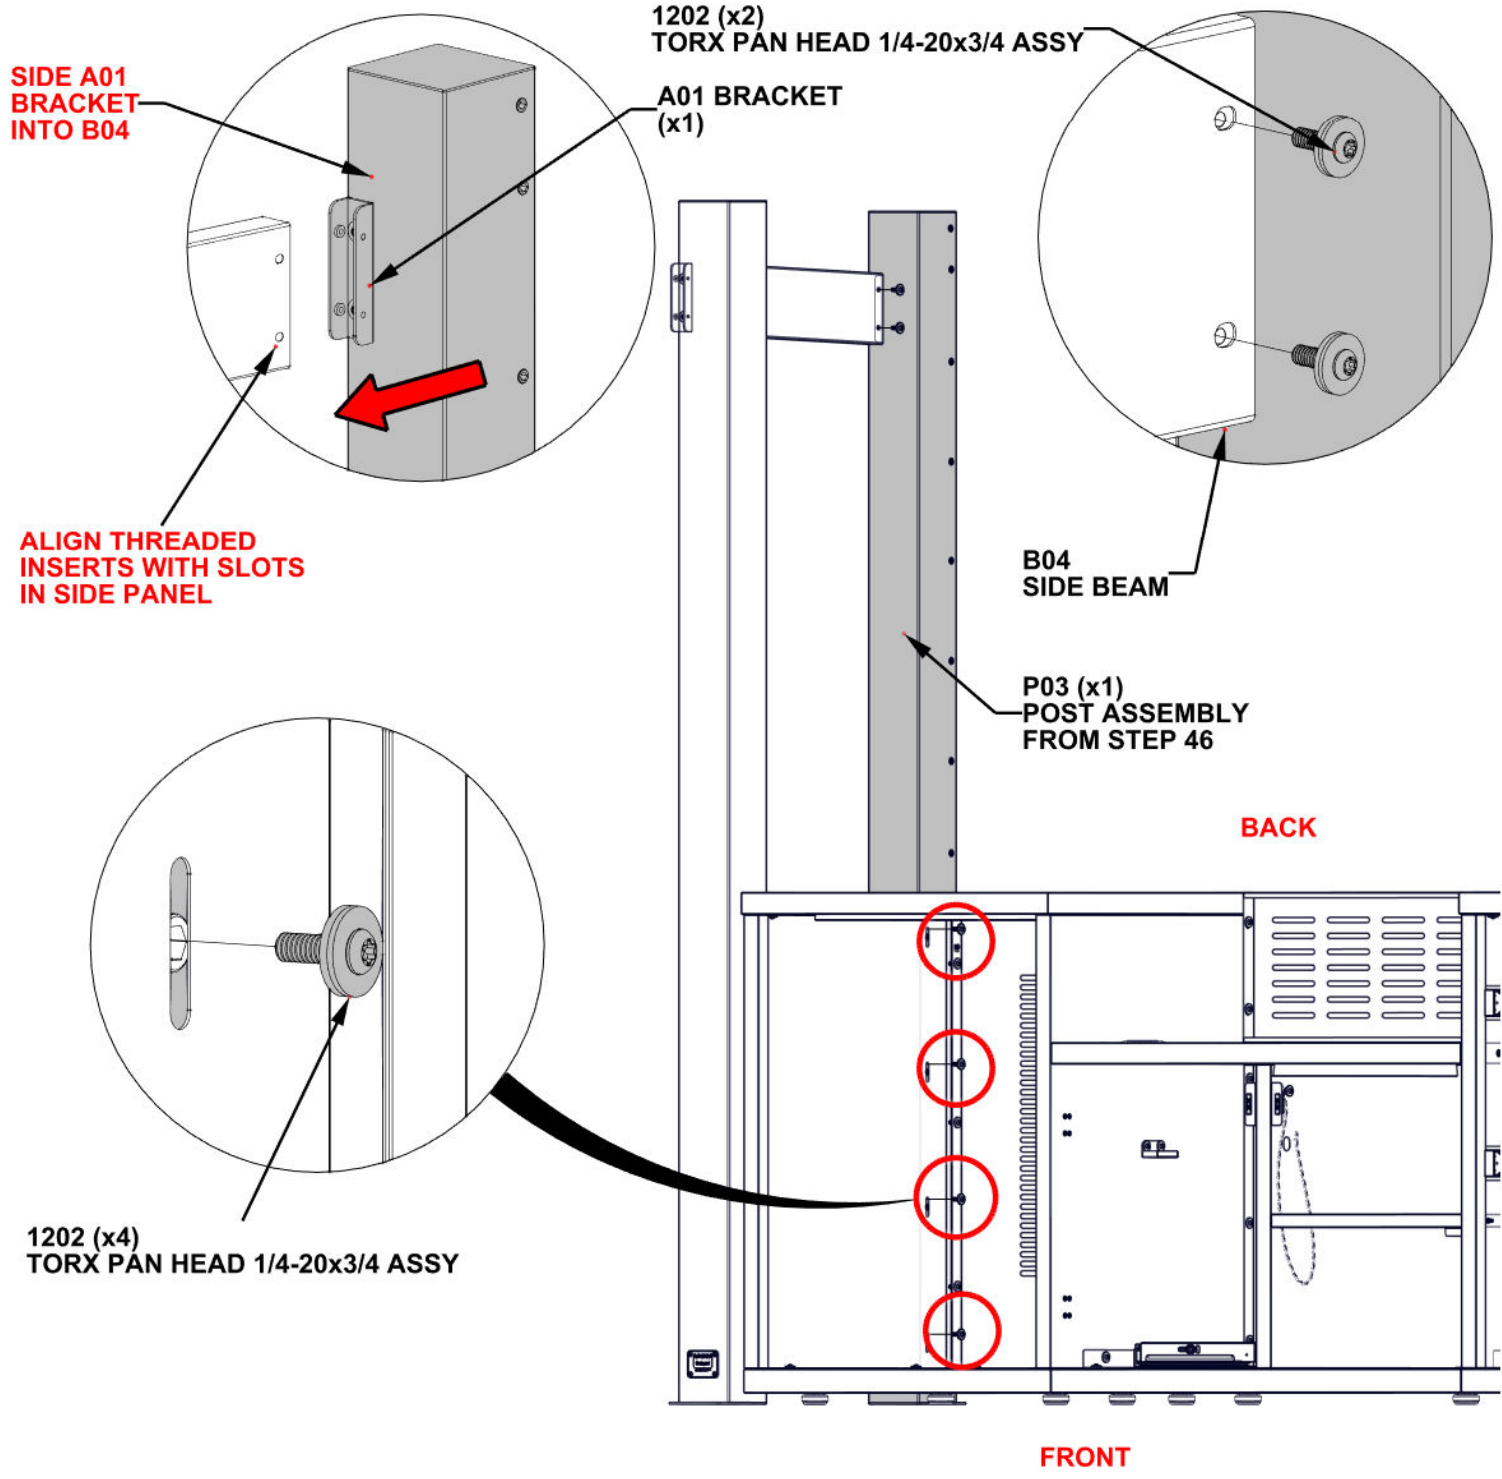


STEP 52- FRAME ASSEMBLY

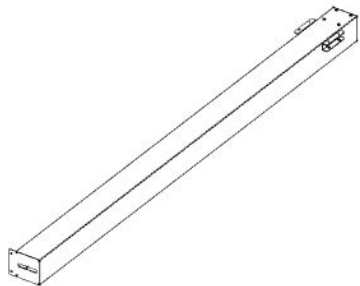

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

POST ASSEMBLY FROM STEP 45

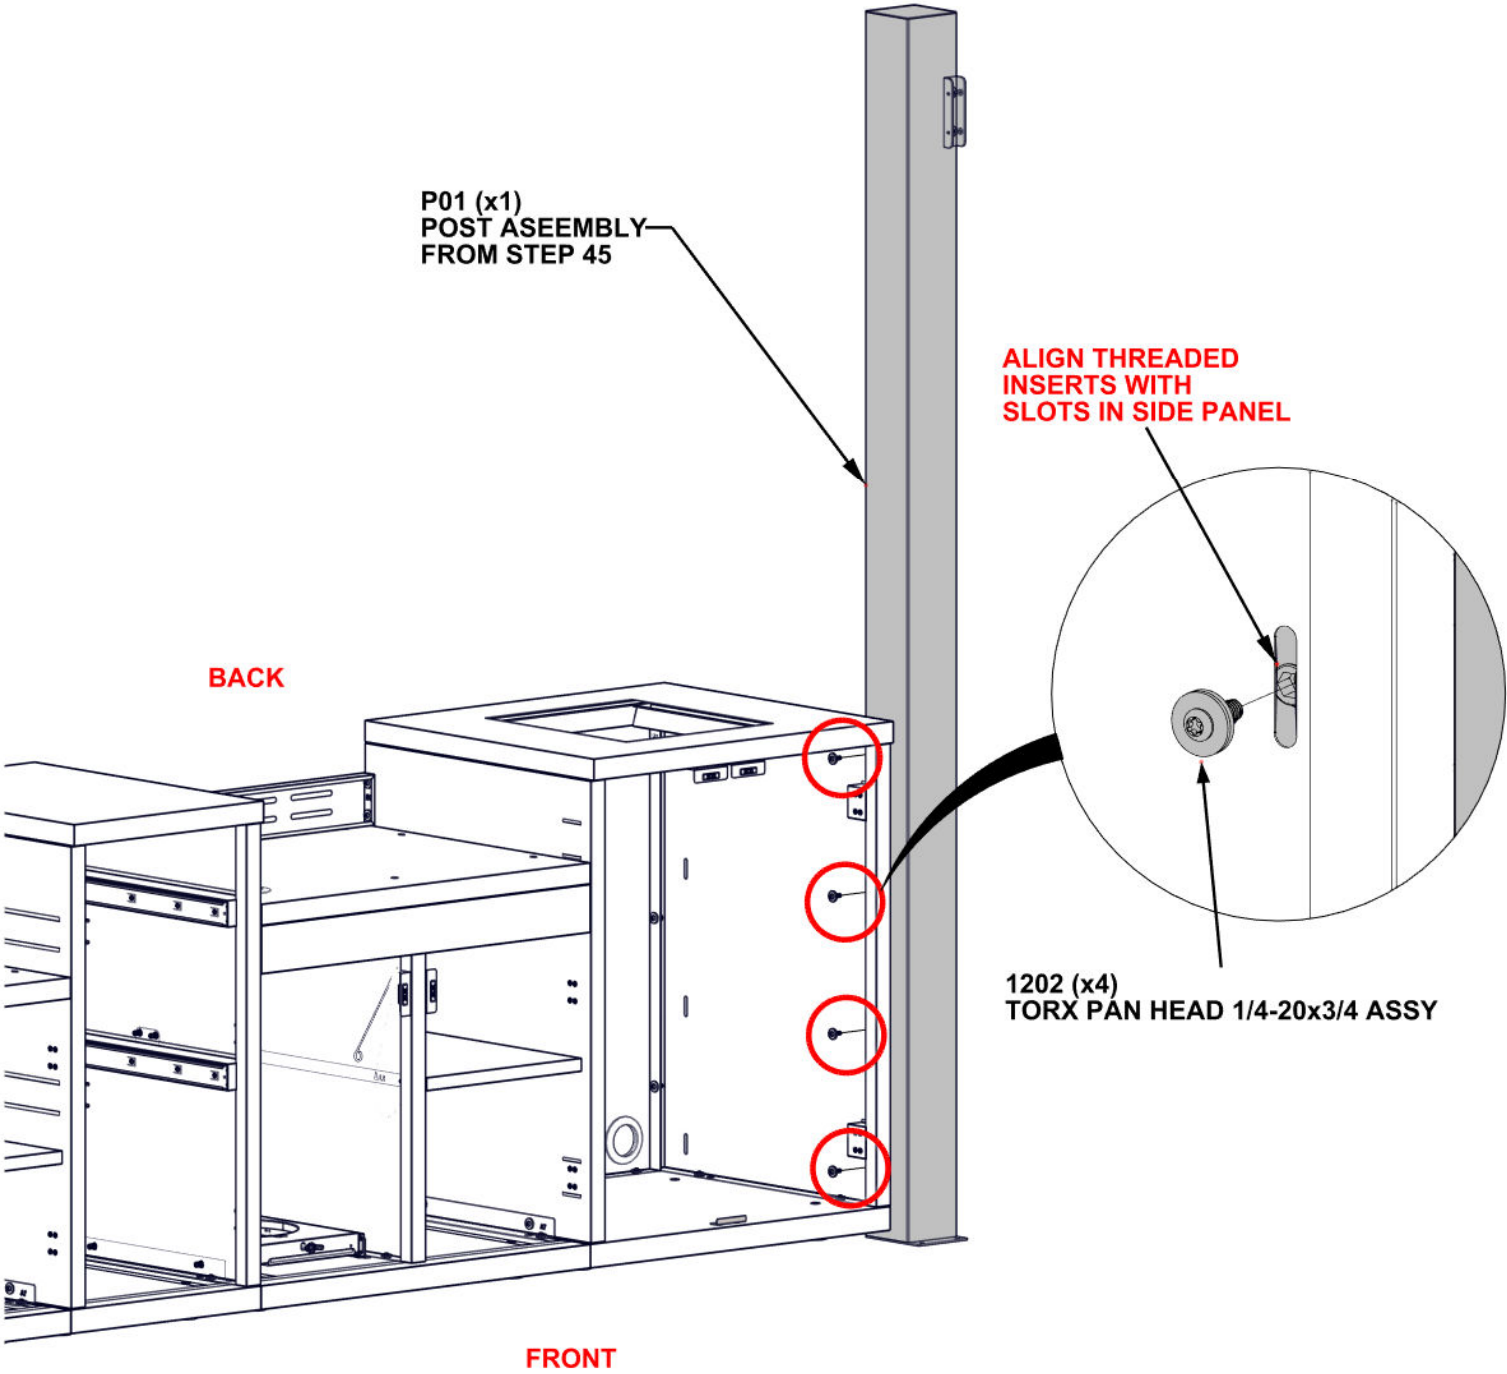


STEP 52- FRAME ASSEMBLY




Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

B11 SIDE BEAM - A4M02106
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)

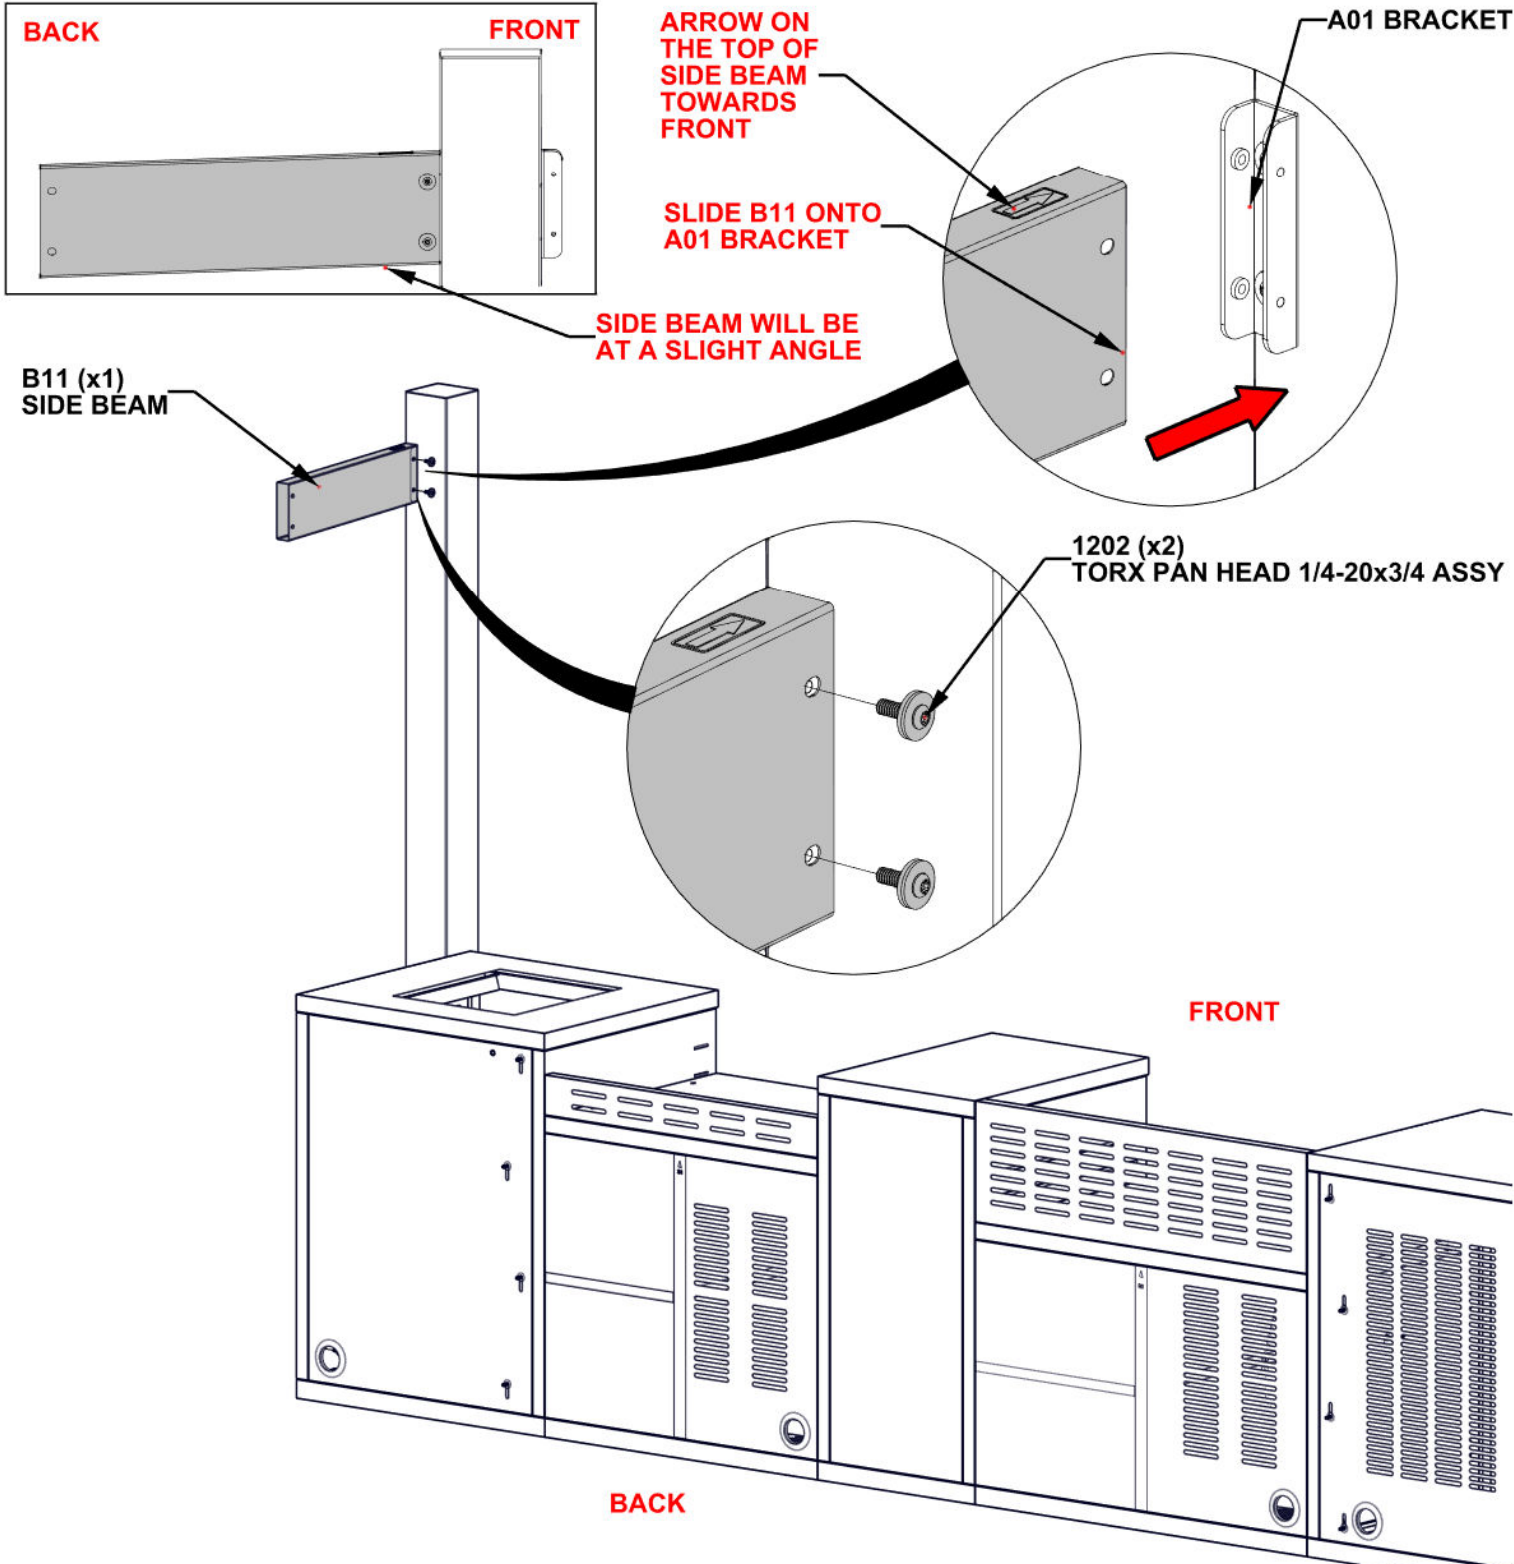


STEP 53- FRAME ASSEMBLY

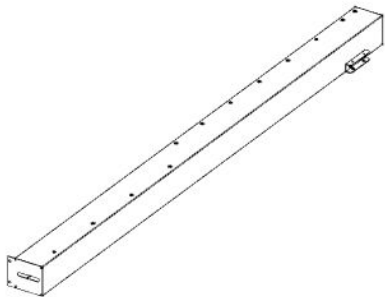


POST ASSEMBLY FROM STEP 47

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- WITH AT LEAST TWO OTHER PEOPLE, ATTACH BACK POST ASSEMBLY TO SIDE BEAM AND CABINET.

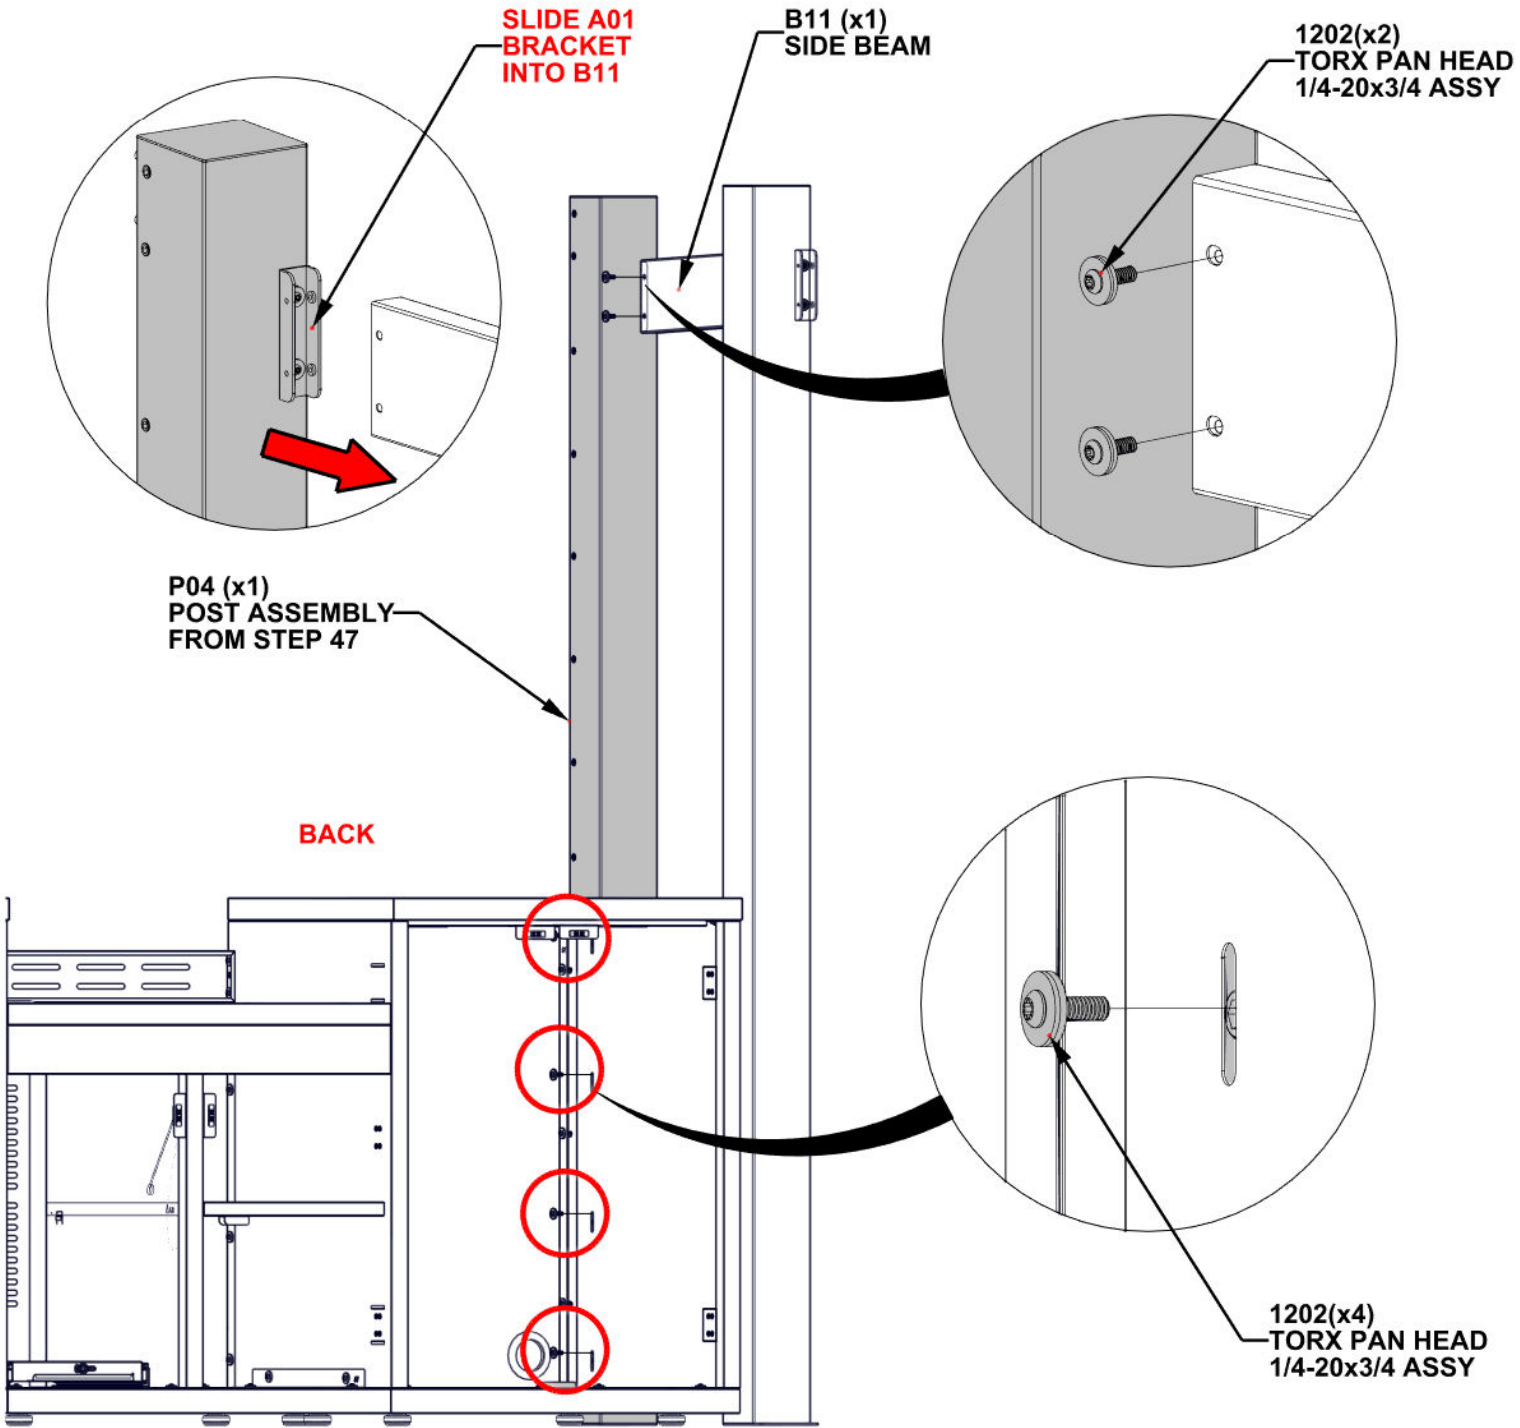


STEP 54A - SINK INSTALLATION

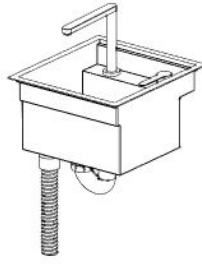

A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)


1. INSTALLING THE SINK DRAIN

- SET DRAIN INSIDE OF SINK BODY, PLACING FOAM GASKET BETWEEN SURFACES.
- FASTEN IN PLACE USING RUBBER GASKET AND DRAIN NUT FROM BOTTOM SIDE.

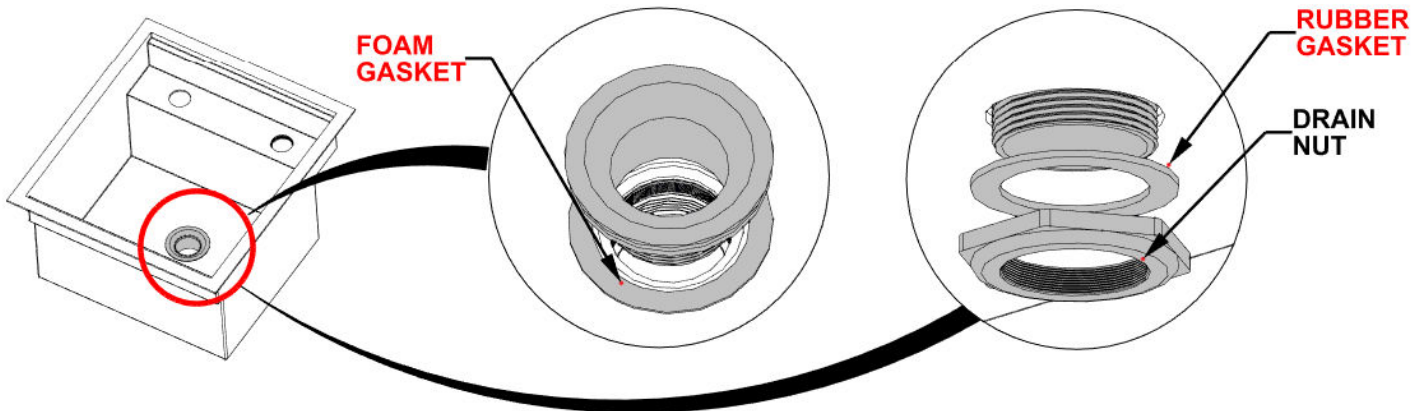


2. INSTALLING THE FAUCET

- INSTALL FAUCET BY PLACING HANDLE AND SPOUT INTO SINK OPENINGS AND SECURING IN PLACE VIA NUT.
- INSERT SCREWS TO LOCK.
- CONNECT WATER FAUCET LINES TOGETHER.

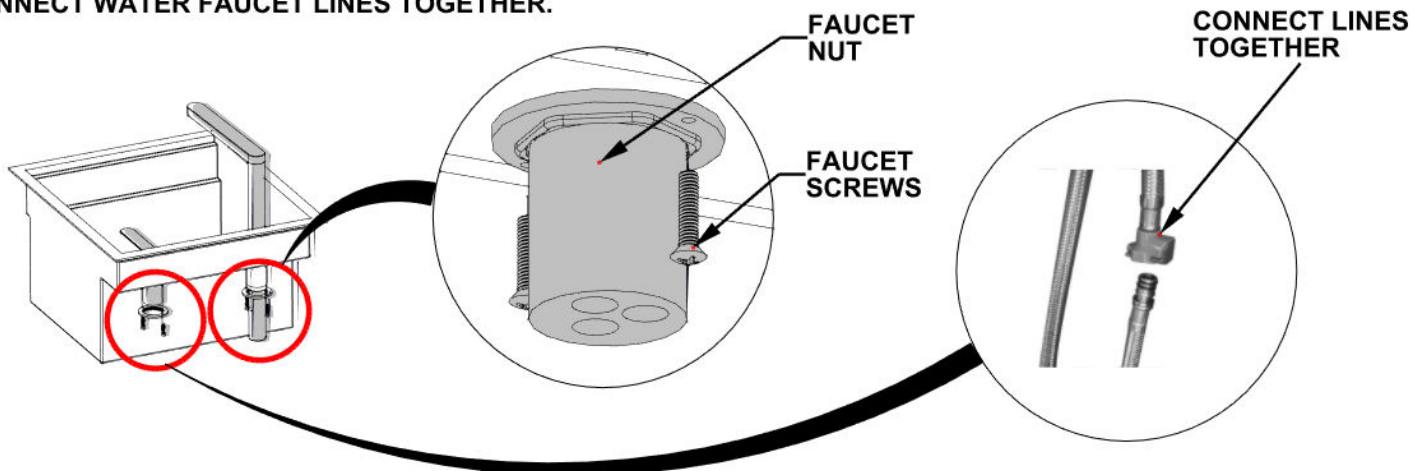


3. INSTALLING THE DRAIN FITTING

- ATTACH DRAIN FITTING TO SINK DRAIN.

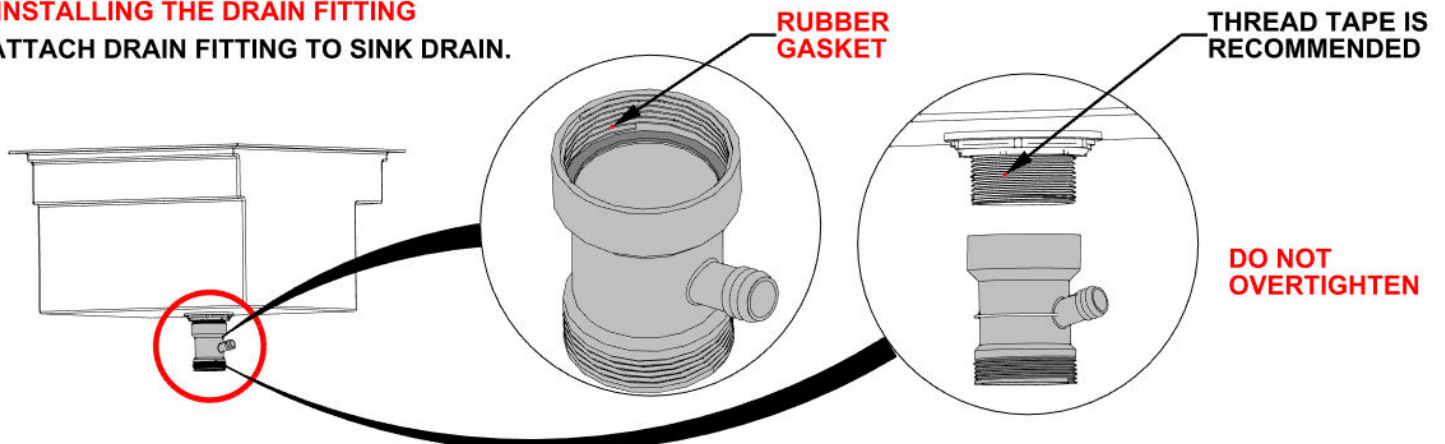


STEP 54B- SINK INSTALLATION

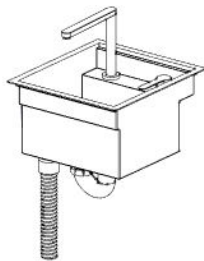

A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)


4. INSTALLING THE OVERFLOW DRAIN

- MAKE SURE RUBBER GASKET IS INSTALLED IN OVERFLOW DRAIN.
- INSERT DRAIN SCREW TO HOLD IN PLACE.

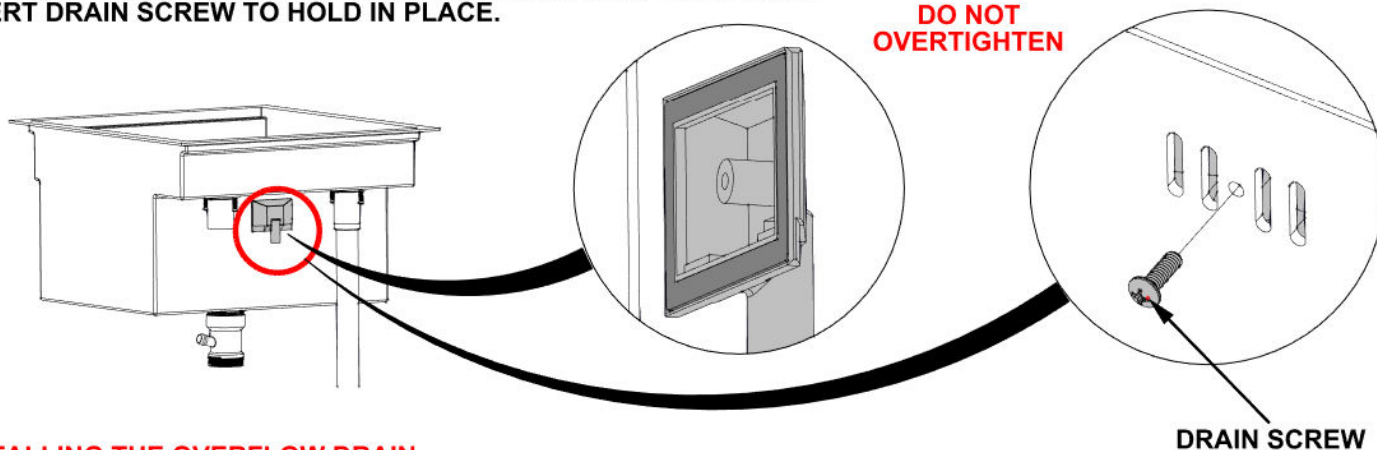


5. INSTALLING THE OVERFLOW DRAIN

- ATTACH OVERFLOW DRAIN BY CONNECTING EACH END AS SHOWN.

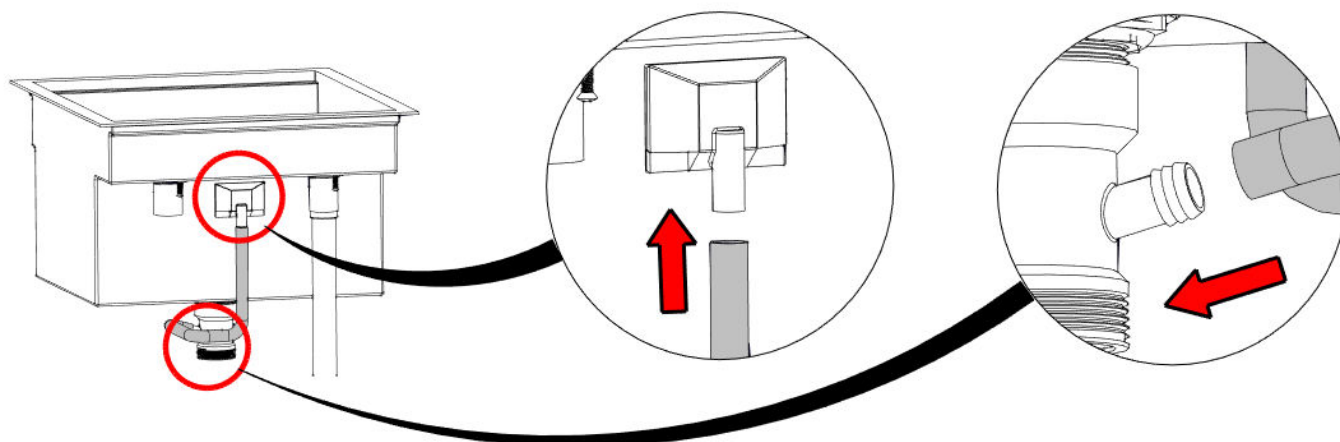


6. INSTALLING THE MAIN DRAIN AND TRAP

- ATTACH TRAP AND CORRUGATED DRAIN HOSE TO DRAIN FITTING.

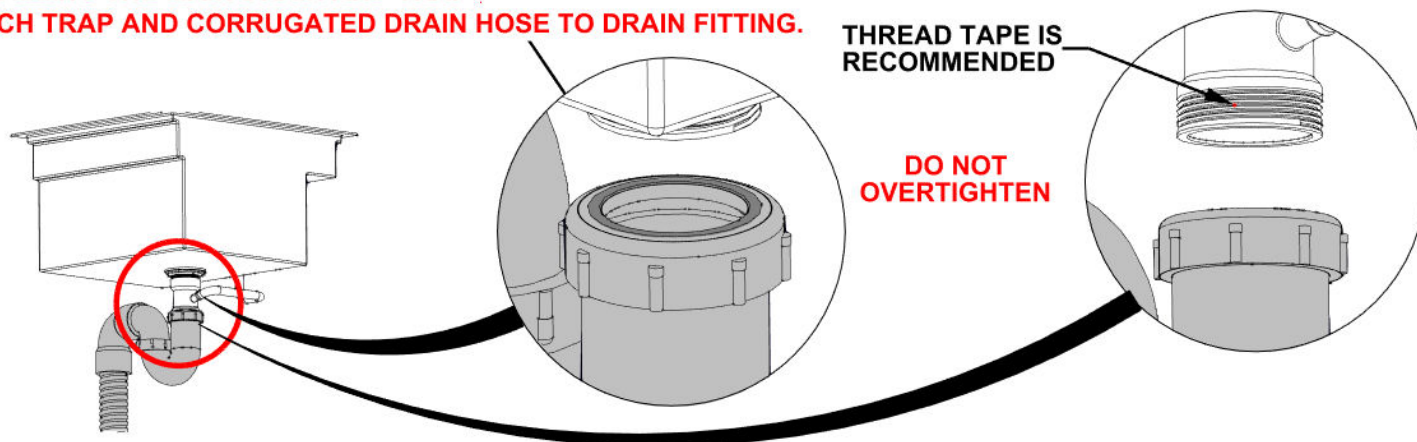


STEP 54C- SINK INSTALLATION

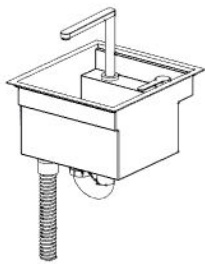

A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)



3151 GARDEN HOSE ADAPTER - A4M03151
(x1)

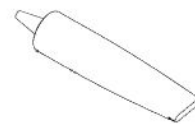

A6P00796 SILCONE SEALANT
(x1)


- DRAIN STRAINER MUST BE USED WHEN DISCARDING FOOD INSIDE OF SINK.
- DO NOT LET SOLID MATERIAL ENTER SINK BASIN.

OPTIONS FOR WATER INLET SUPPLY HOOKUP:


- GARDEN HOSE ATTACHMENT USING PROVIDED ADAPTER
- WATER INLET SUPPLY LINE

OPTIONS FOR DRAIN DISCHARGE:

- BUCKET OR GREY WATER CONTAINER
- FRENCH DRAIN OR DRY BASIN
- INTEGRATED SEWER SYSTEM
- CHECK YOUR LOCAL REQUIRMENTS.

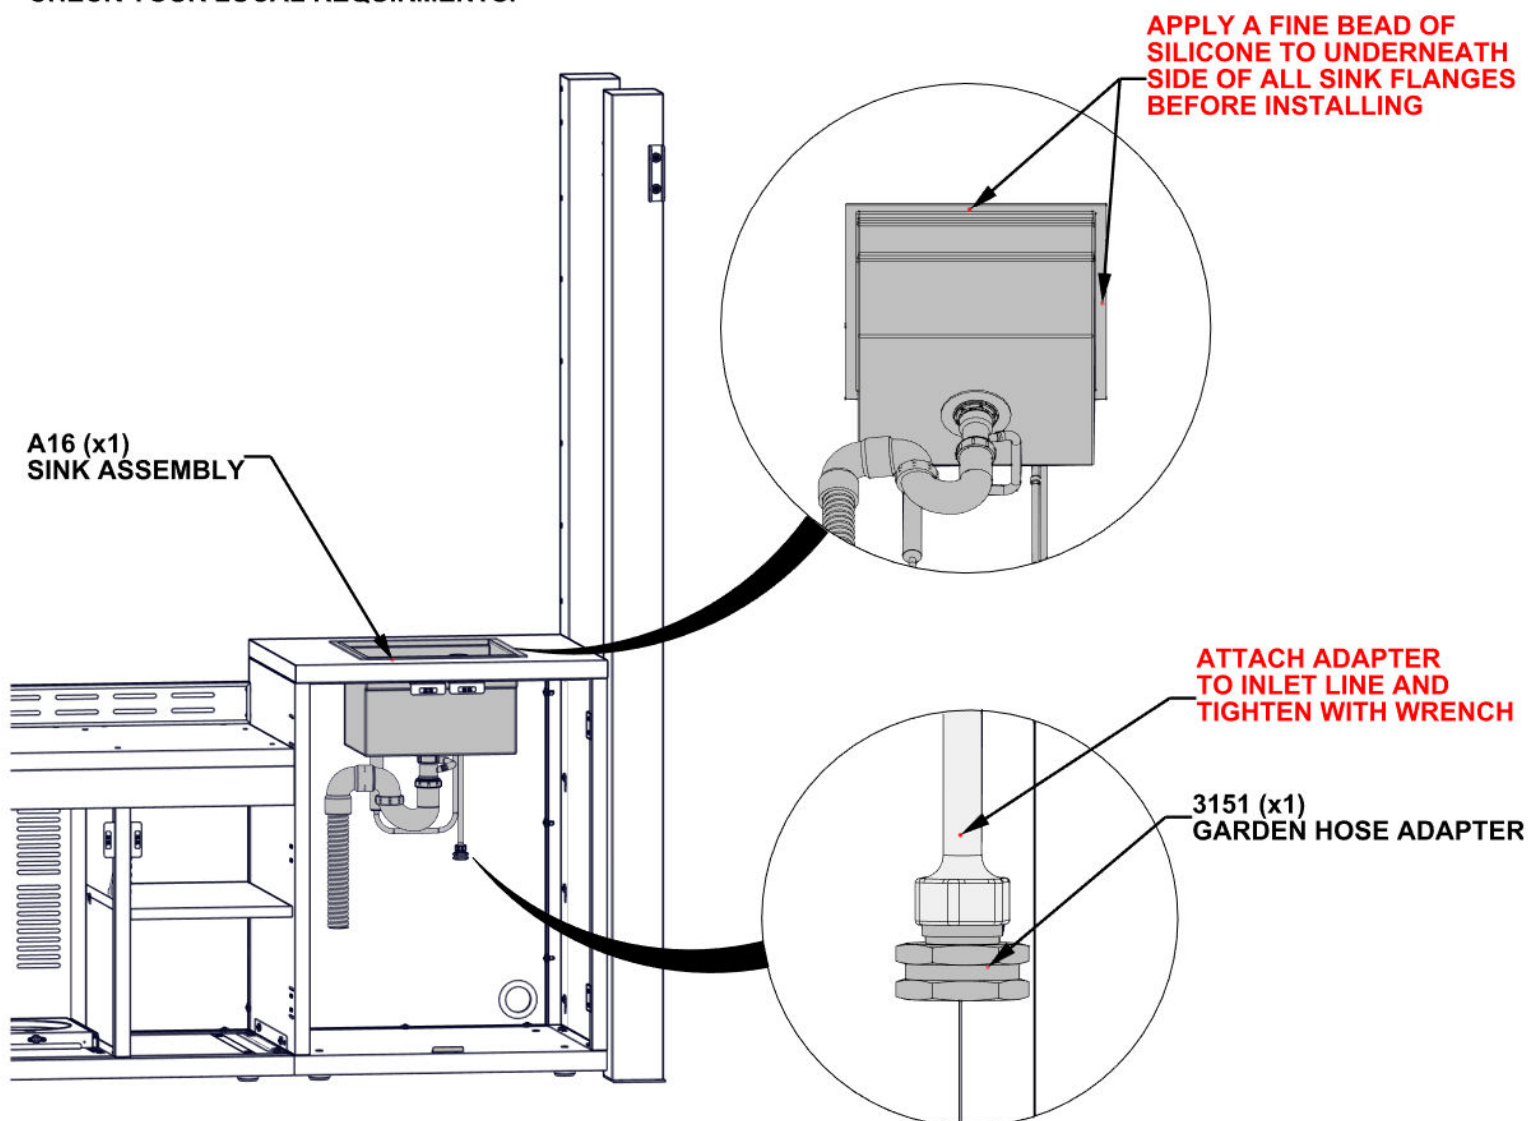


STEP 55- FRAME ASSEMBLY

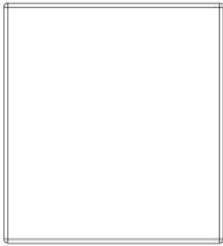


CB1 W4L22000 CUTTING BOARD (x1)

CB1 W4L22000
CUTTING BOARD
(x1)

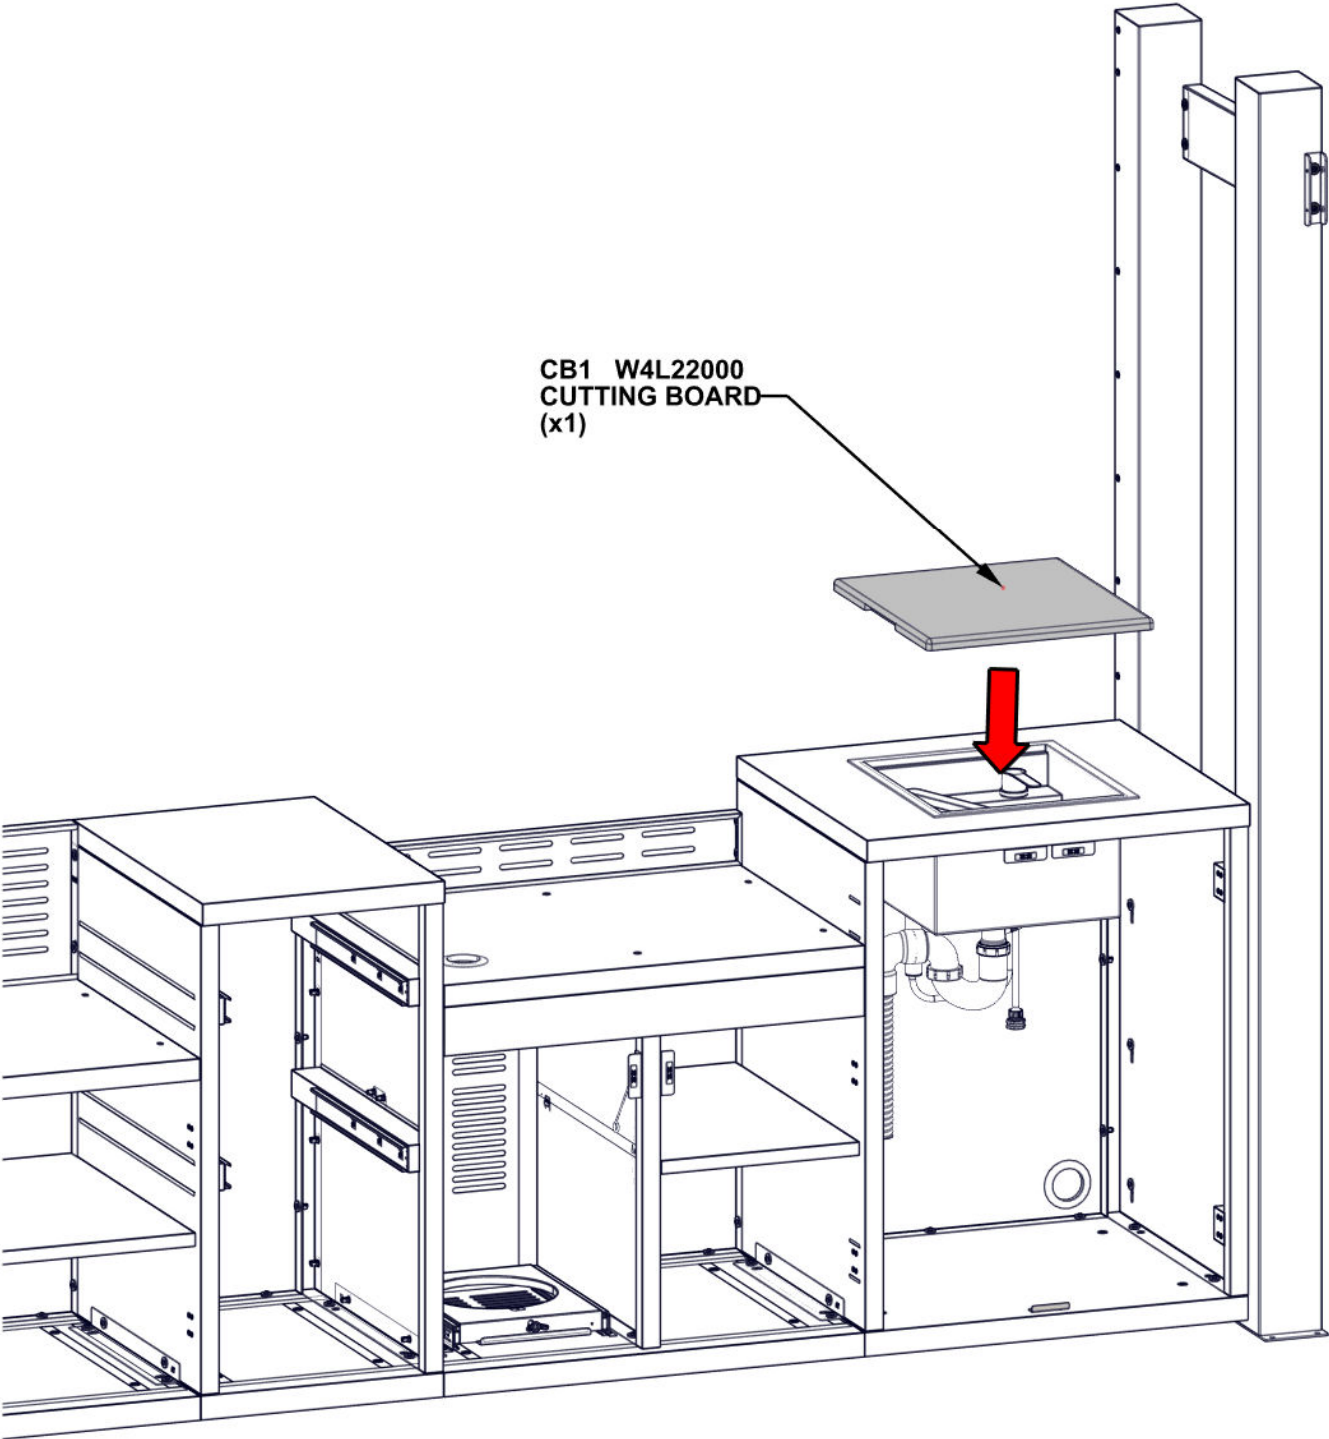


STEP 56- FRAME ASSEMBLY



Qty	PartNo	Description
8	H101103	TORX SOCKET SCREW 1/4-20


B01 SIDE BEAM - A4M02012
(x1) 36x5 1/4"x46 1/2" (36x134x1181)

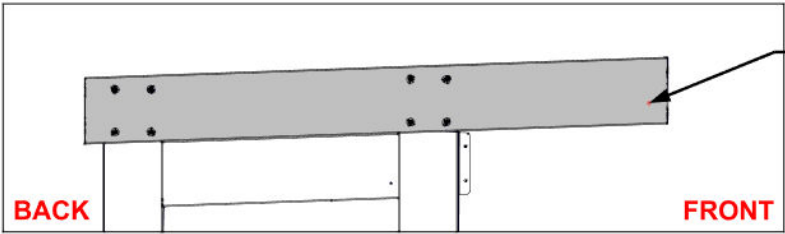

SIDE BEAM WILL BE
AT A SLIGHT ANGLE

BACK

FRONT

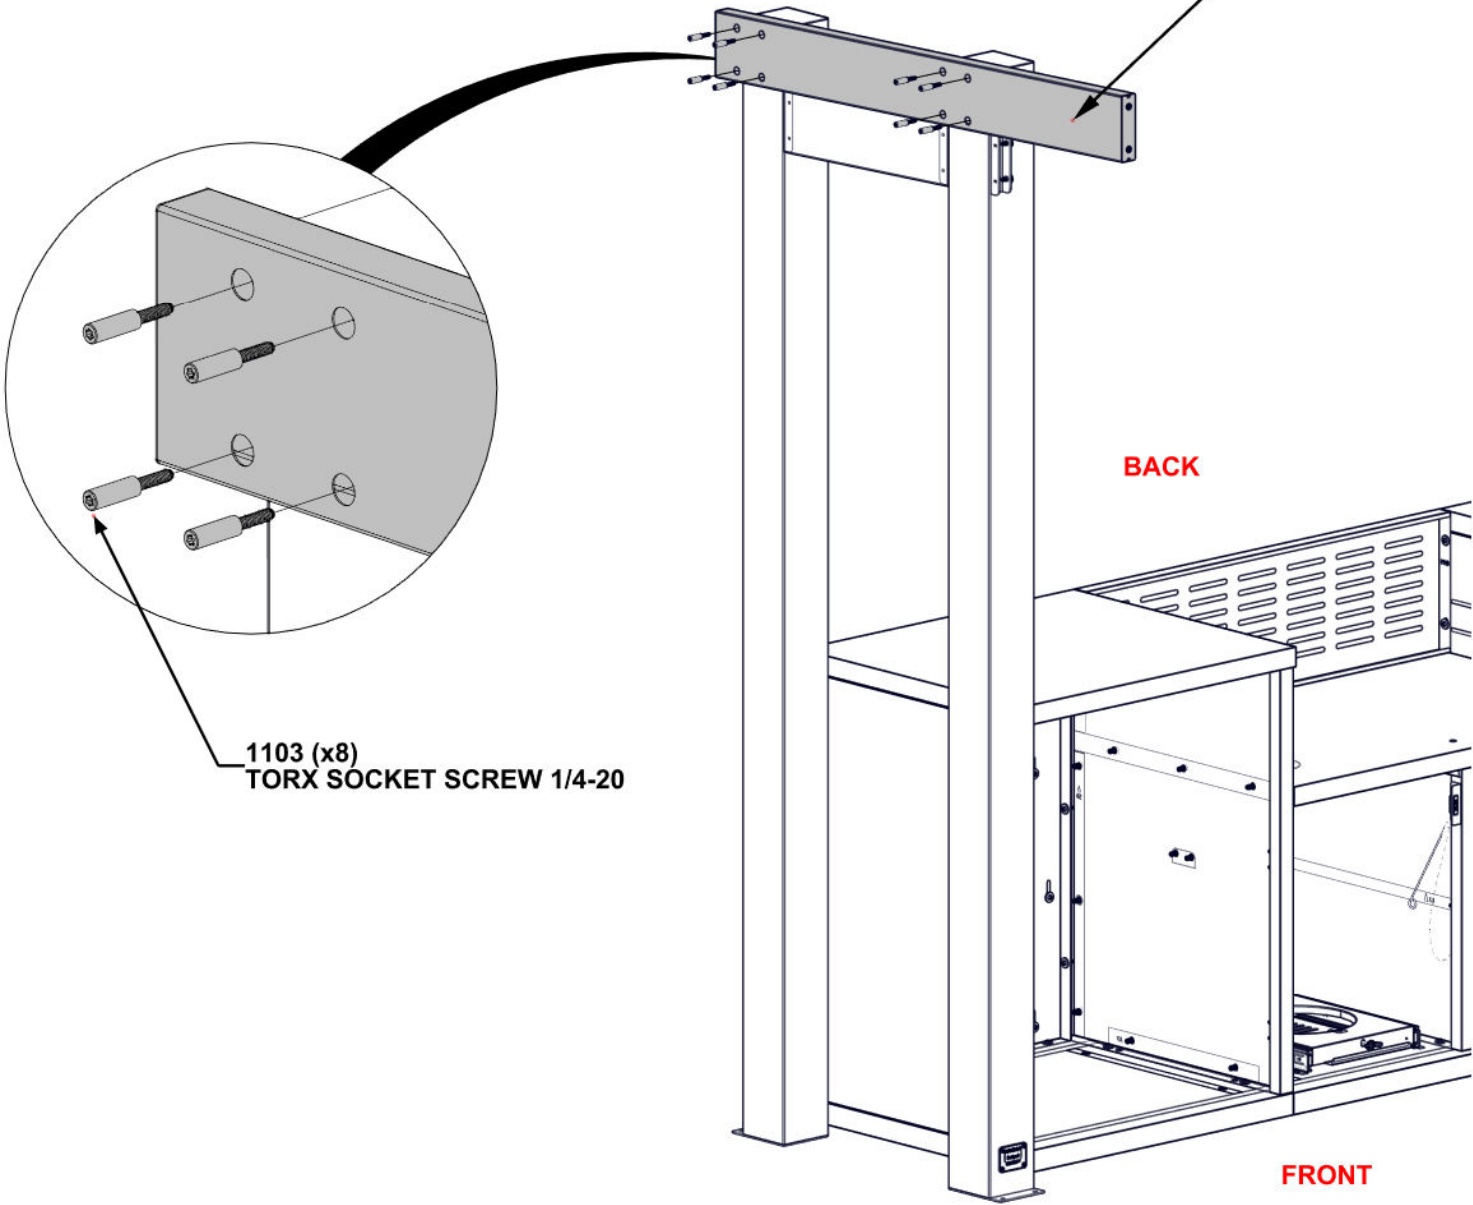


B01 (x1)
SIDE BEAM

BACK

FRONT

1103 (x8)
TORX SOCKET SCREW 1/4-20

STEP 57- FRAME ASSEMBLY

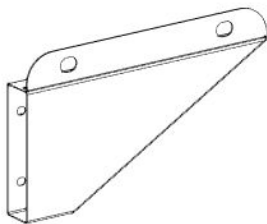

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


B09 CORBEL - A4M02042
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)

SLIDE B09 ONTO
A01 BRACKET


B09 (x1)
CORBEL

A01 (x1)
BRACKET

1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY


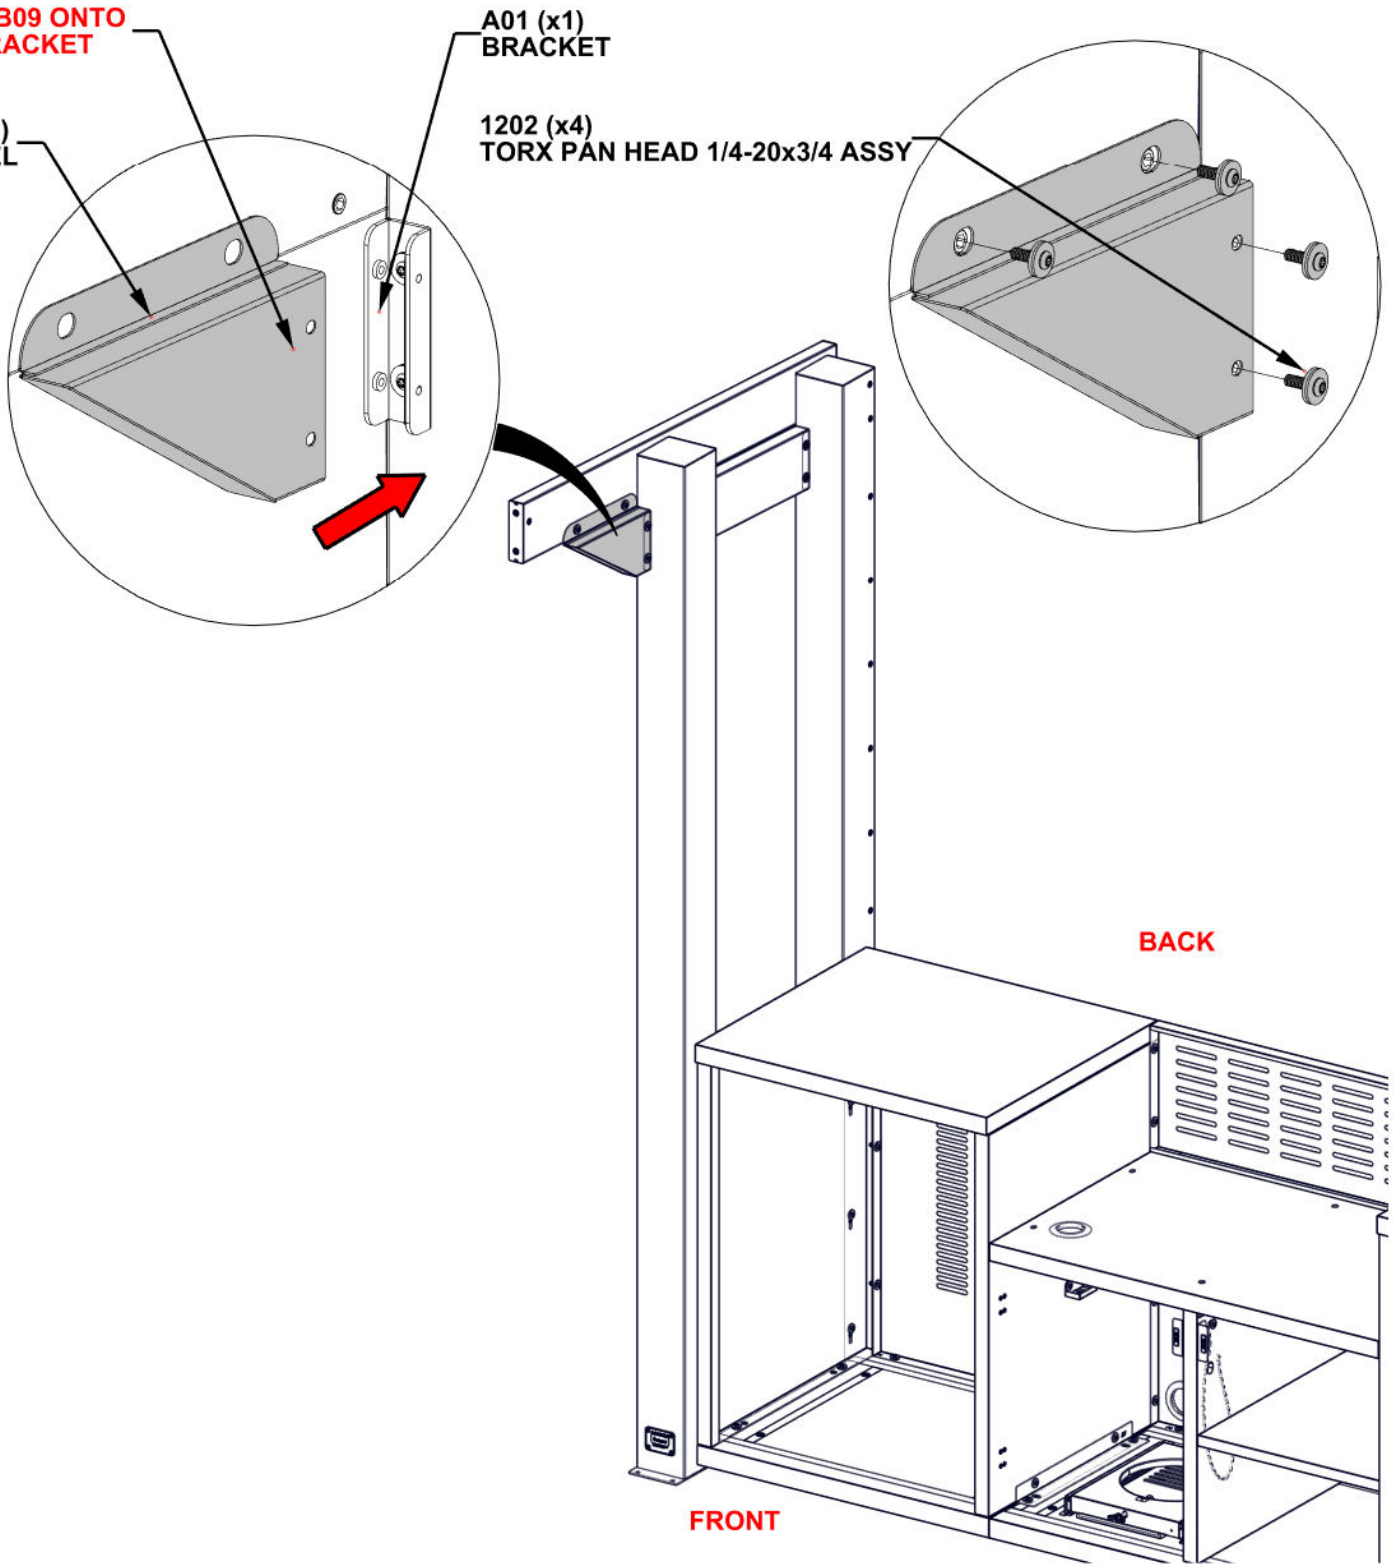


STEP 58- FRAME ASSEMBLY




Qty	PartNo	Description
8	H101103	TORX SOCKET SCREW 1/4-20

B05 SIDE BEAM - A4M02022
(x1) 1 7/16"x5 1/4"x46 1/2" (36x134x1181)

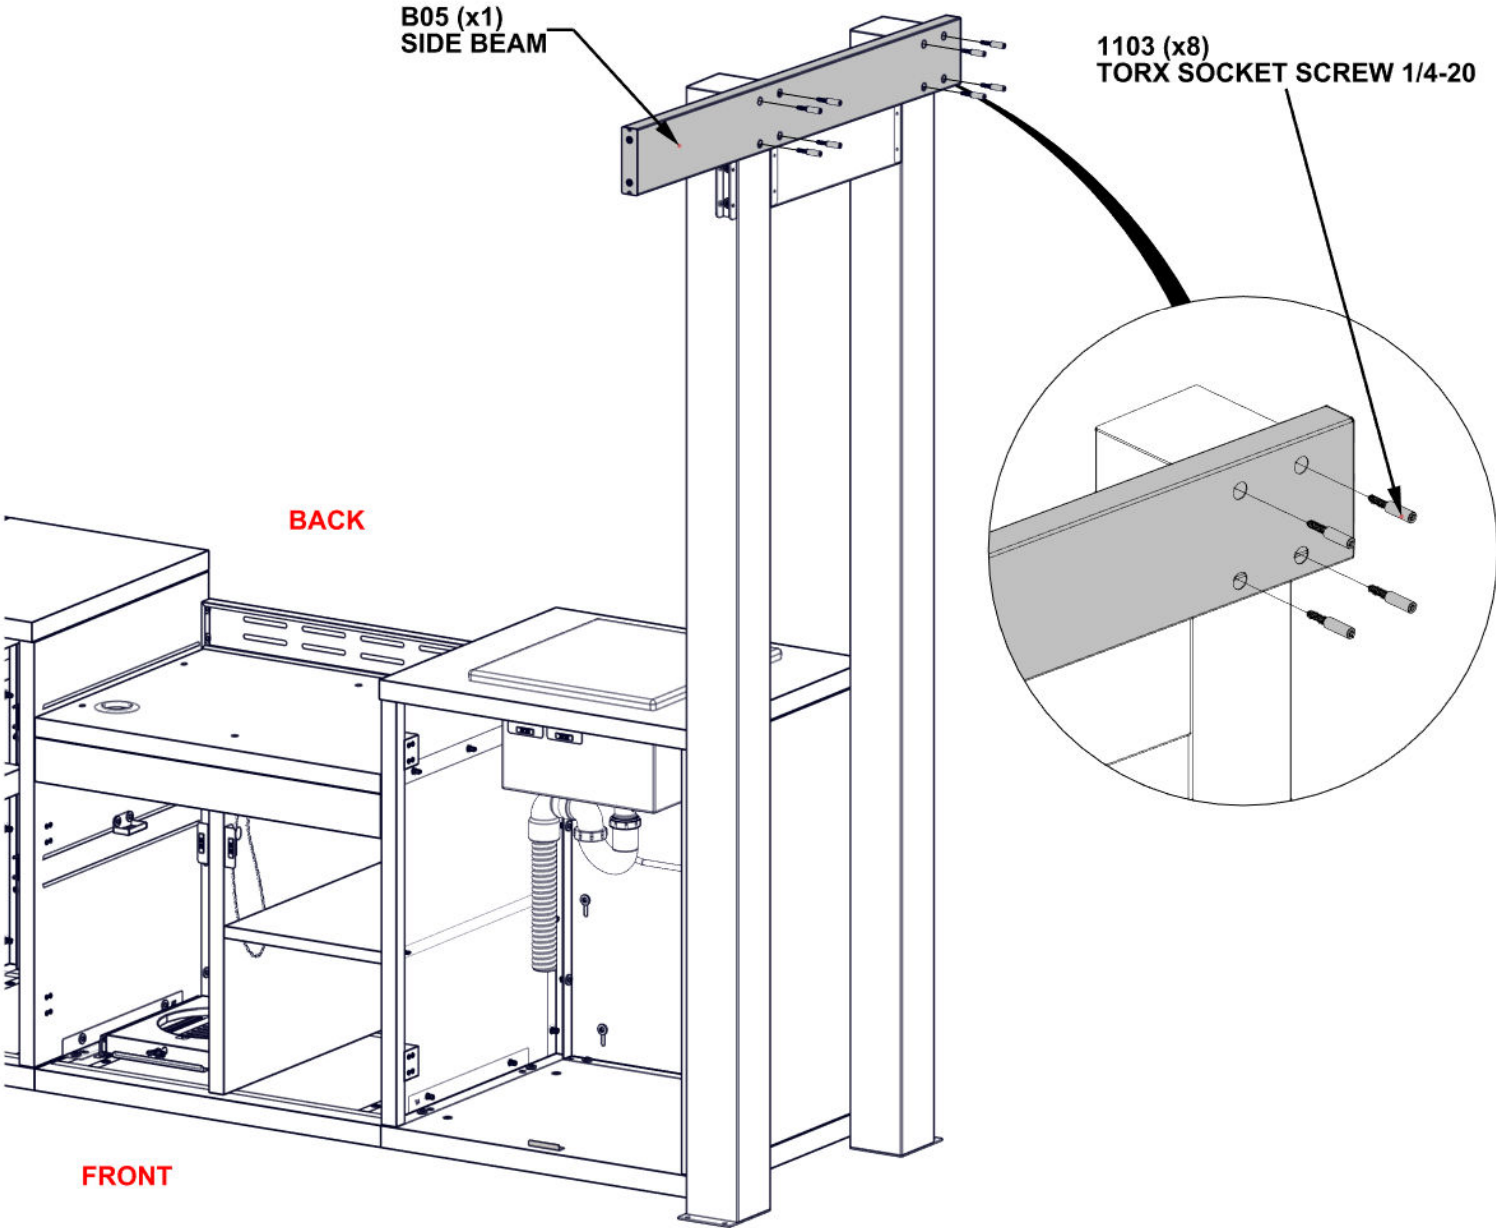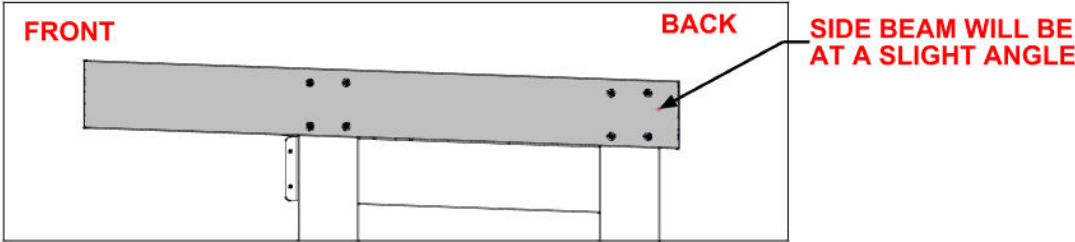


STEP 59- FRAME ASSEMBLY

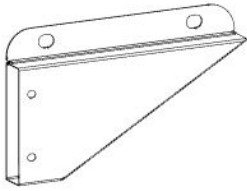

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

B08 CORBEL - A4M02041
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)

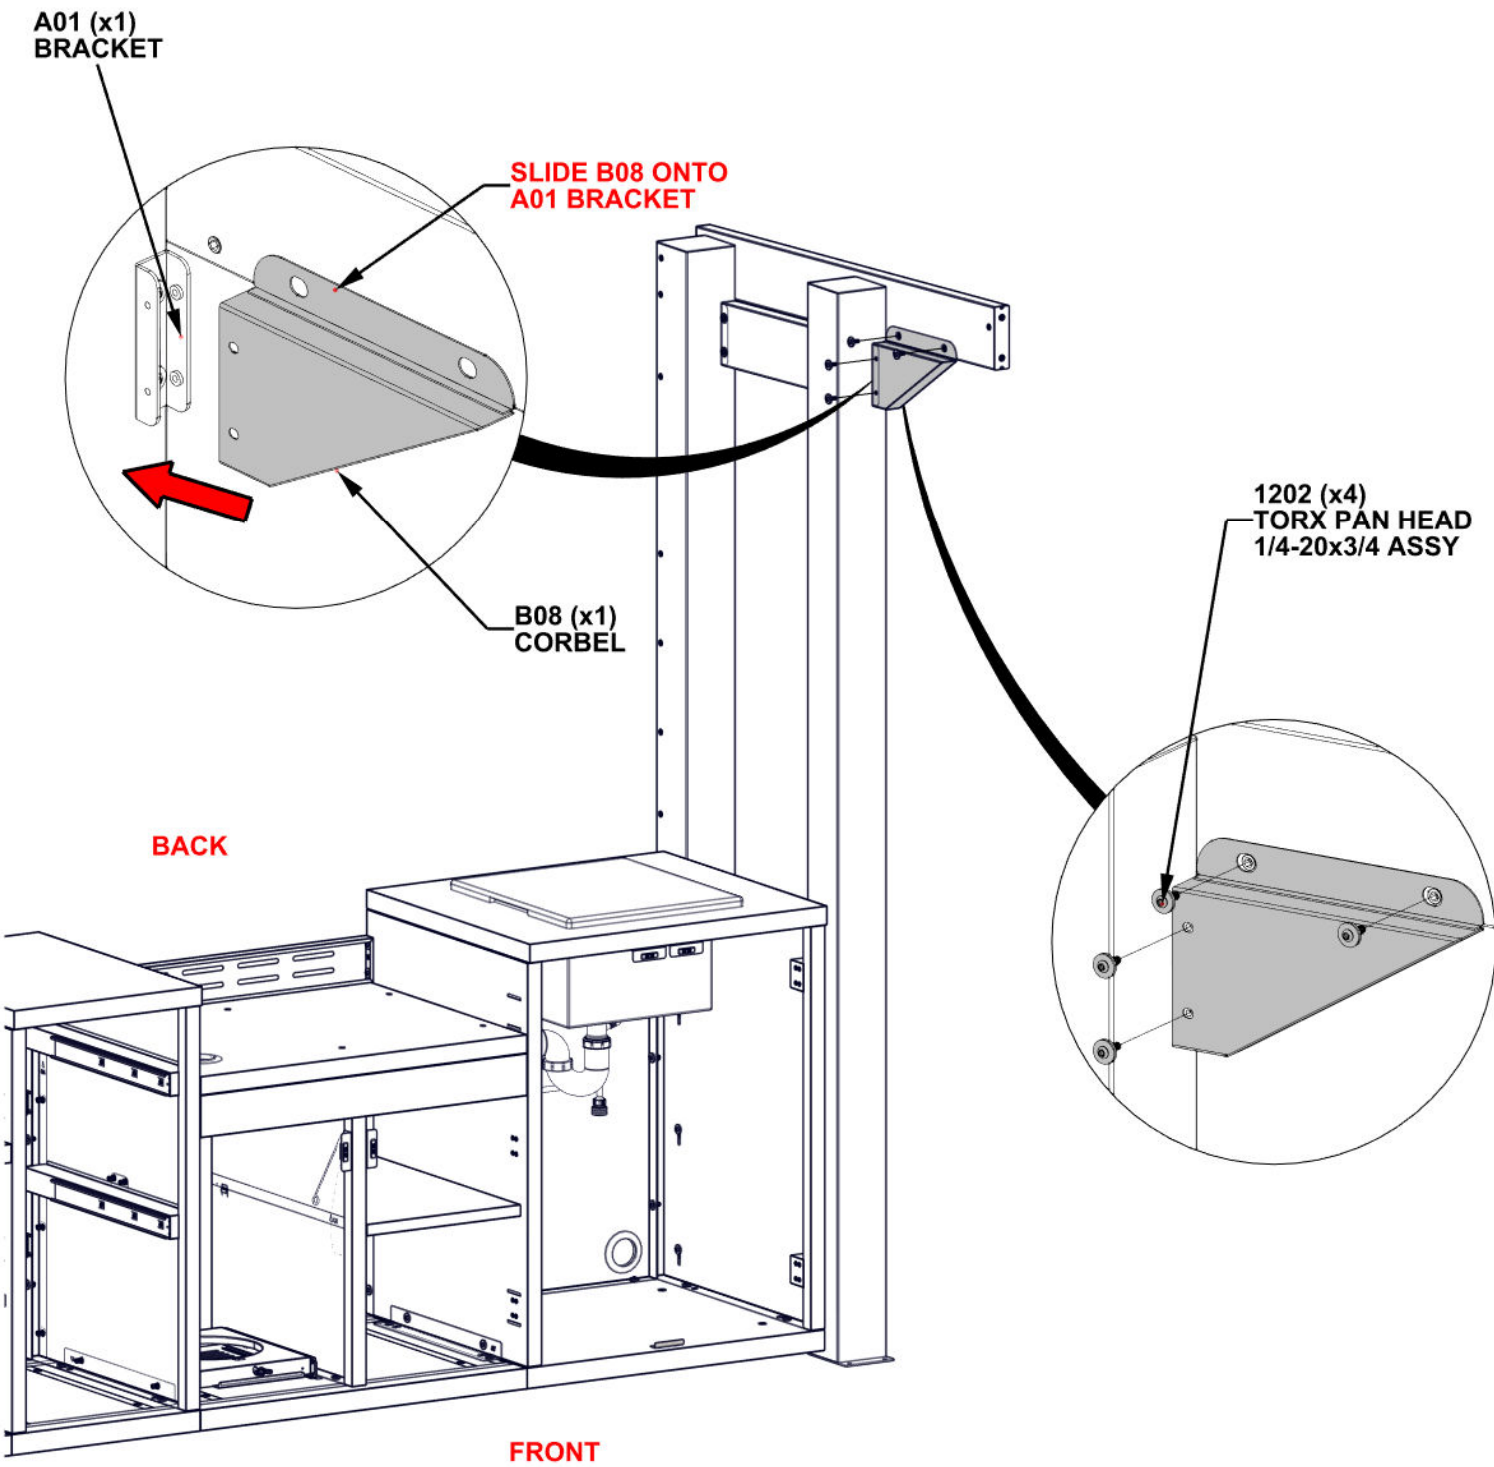

STEP 60A- BACK BEAM ASSEMBLY



J2 SPLICE BRACKET - A4M05761
(x1) 1 5/16"x4 11/16"x39 3/8" (33.2x119.2x1000)



Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



B02 BEAM ASSEMBLY - A4M05493
(x1) 1 7/16"x4 13/16"x77 3/8" (36x122x1965)

- BEAM AND SPLICE MUST BE ORIENTED AS SHOWN BELOW.
- SLIDE J2 INTO B02 AND LINE UP THREE HOLES TOP AND BOTTOM.
- FOR EASE OF ASSEMBLY, WE RECOMMEND USING SAW HORSES FOR STEP 60A-60B.

1202 (x6)
TORX PAN HEAD 1/4-20x3/4 ASSY
HAND TIGHTEN ONLY

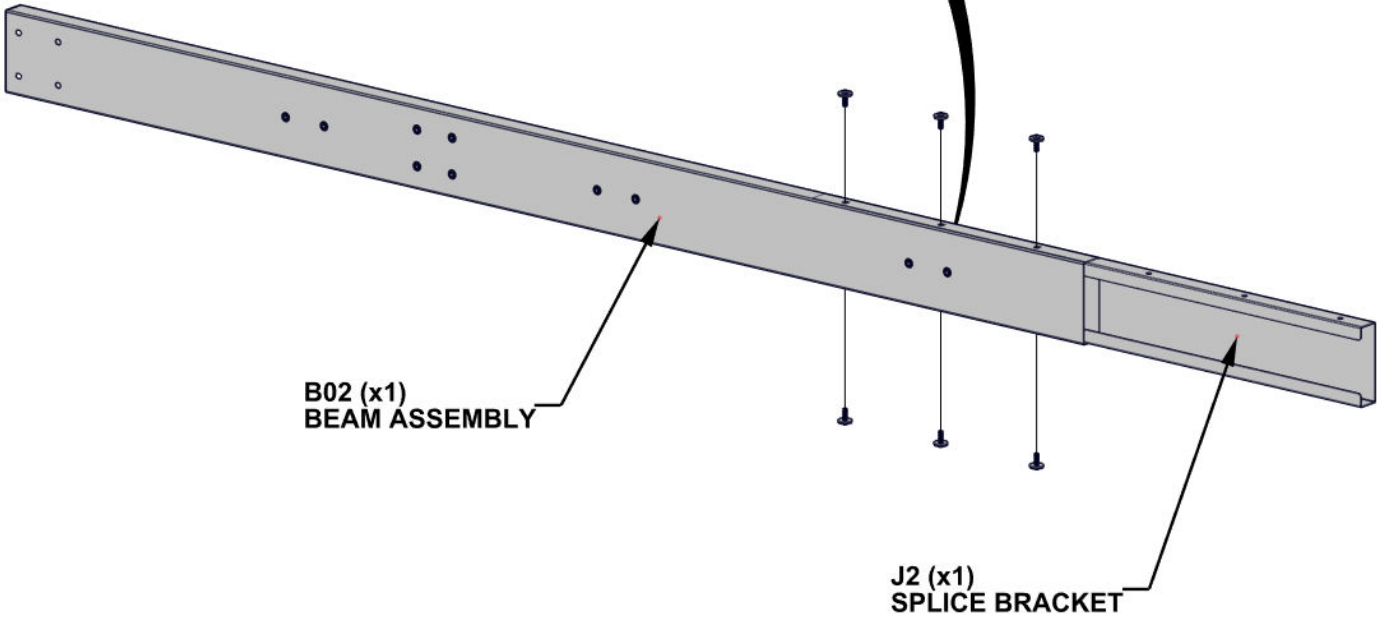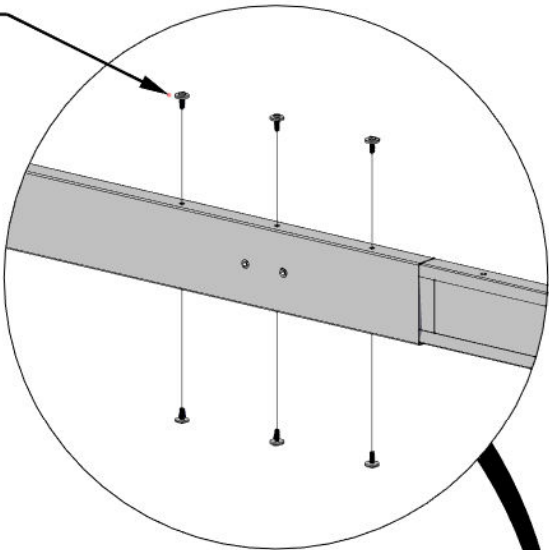

B02 (x1)
BEAM ASSEMBLY

J2 (x1)
SPLICE BRACKET


STEP 60B- BACK BEAM ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



B02 BEAM ASSEMBLY - A4M05493
(x1) 1 7/16"x4 13/16"x77 3/8" (36x122x1965)

- SLIDE B02 ONTO SPLICE BRACKET.
- GENTLY TAP ENDS OF ASSEMBLY WITH RUBBER Mallet UNTIL GAP CLOSES, THEN TIGHTEN ALL BOLTS ON BEAM.

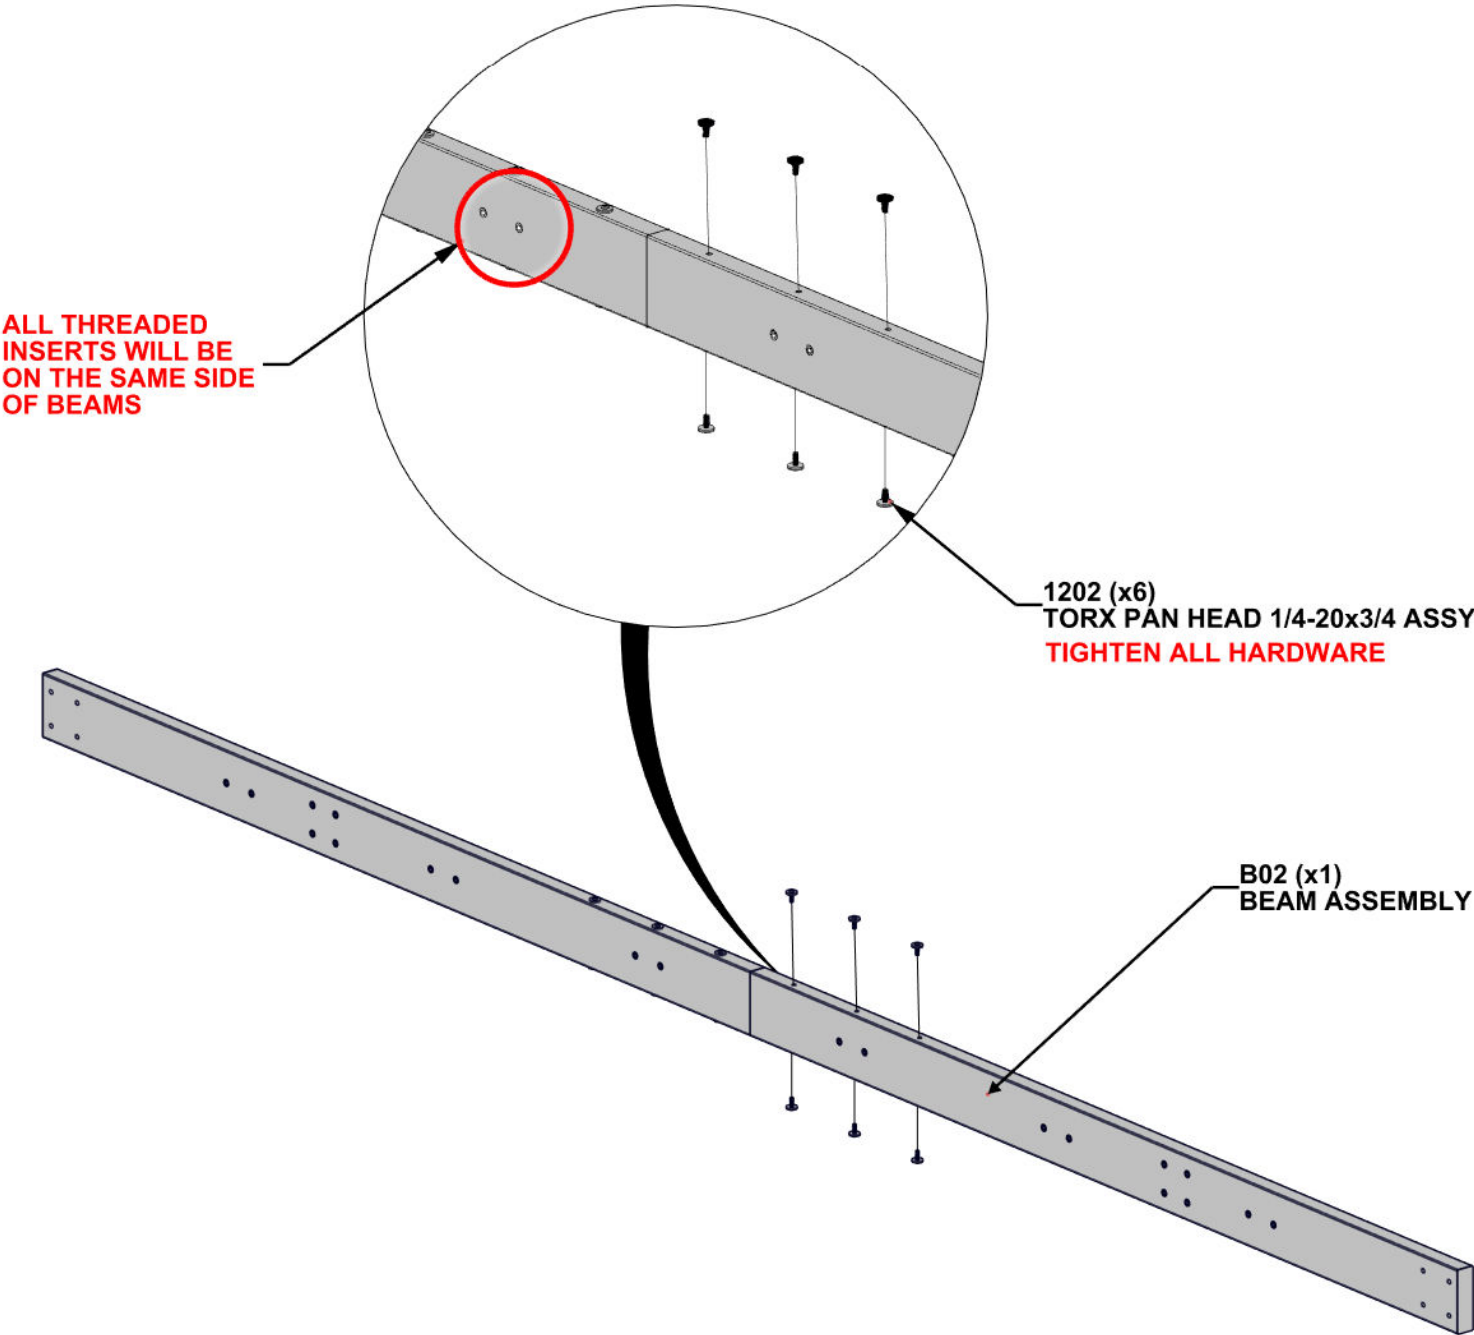


STEP 61- FRAME ASSEMBLY

Qty	PartNo	Description
8	H101103	TORX SOCKET SCREW 1/4-20



BACK BEAM ASSEMBLY FROM STEP 60A-60B

- ALIGN THRU HOLES IN BACK BEAM WITH THREADED INSERTS IN POSTS.
- ATTACH BACK BEAM TO POSTS.

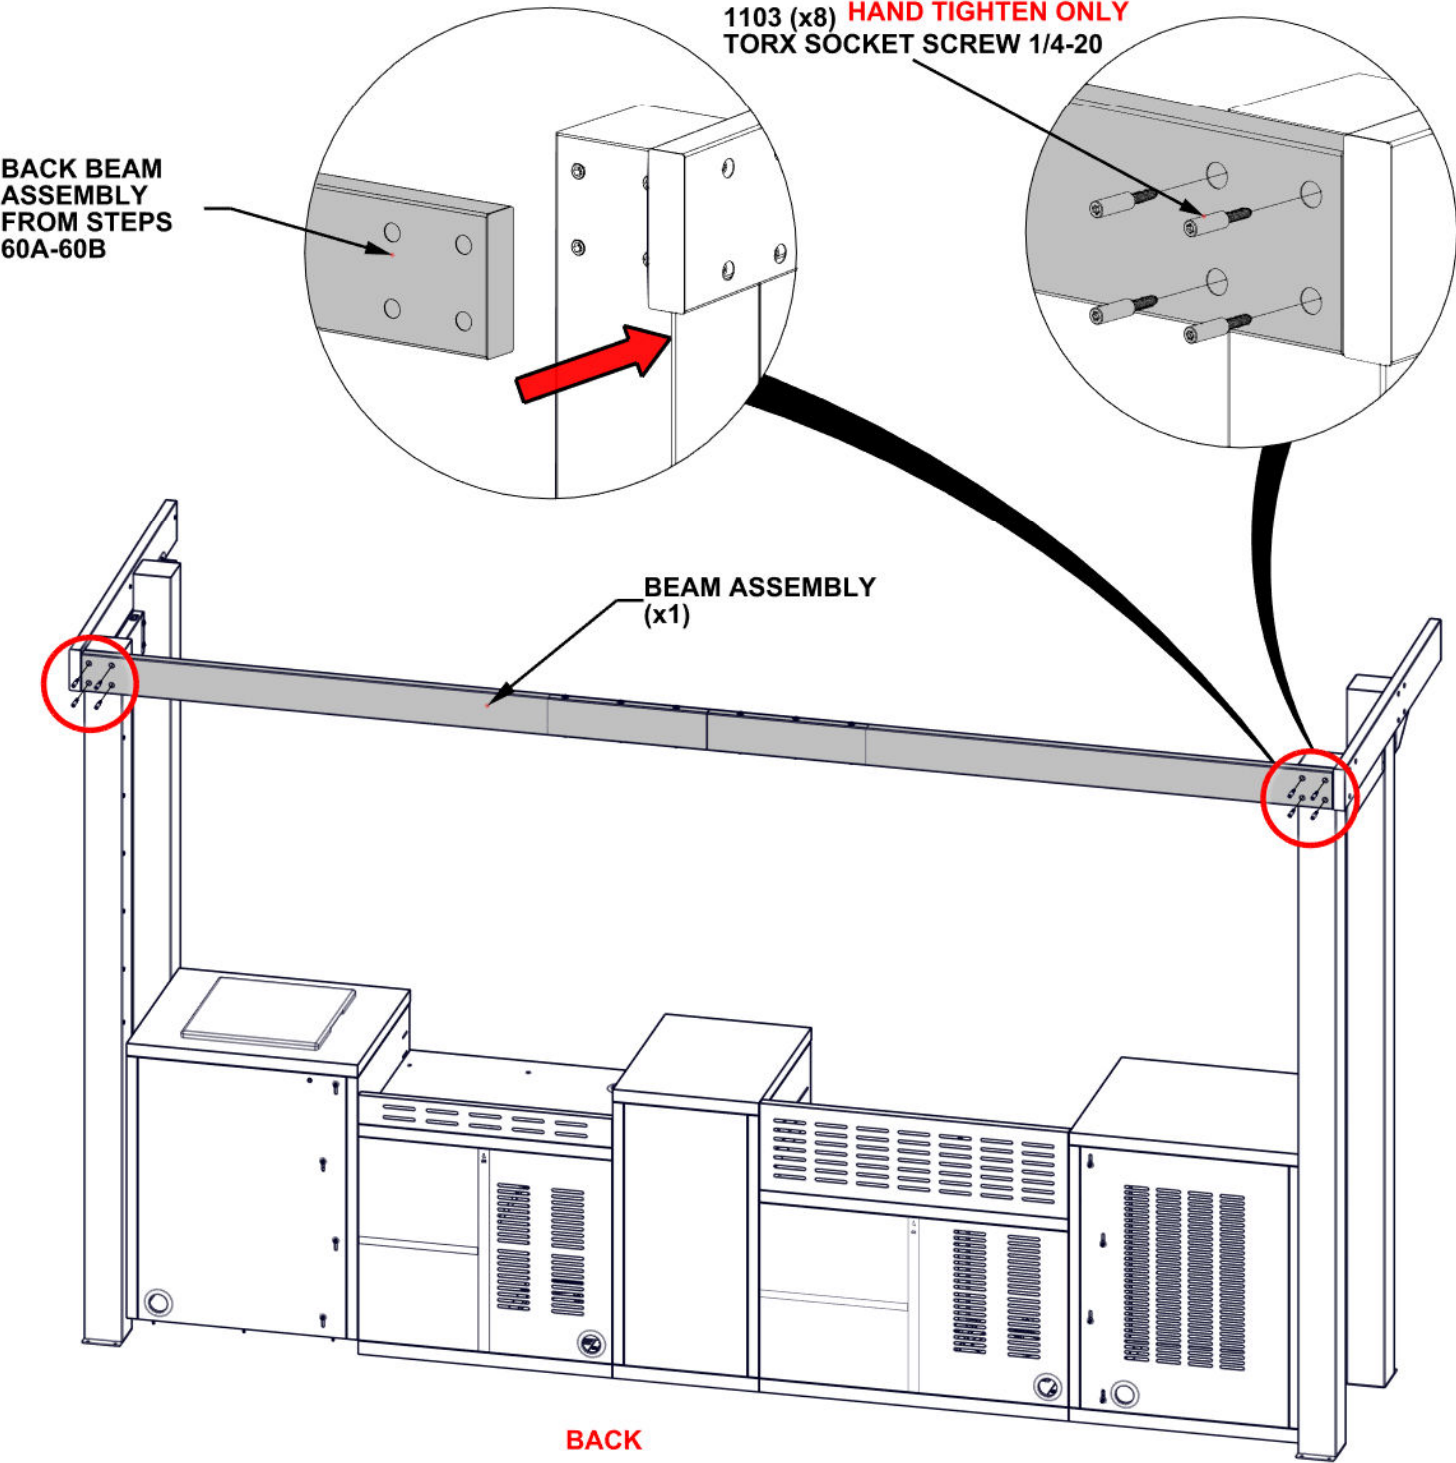

STEP 62A- FRONT BEAM ASSEMBLY



J1 SPLICE BRACKET - A4M02230
(x1) 1 5/16"x5 3/16"x39 3/8" (33.2x131.2x1000)


Qty	PartNo	Description
3	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



B03 BEAM ASSEMBLY - A4M05494
(x1) 1 7/16"x5 1/4"x78 13/16" (36x134x2003)

- BEAM AND SPLICE MUST BE ORIENTED AS SHOWN BELOW.
- SLIDE J1 INTO B03 AND LINE UP THREE HOLES TOP AND BOTTOM.
- FOR EASE OF ASSEMBLY, WE RECOMMEND USING SAW HORSES FOR STEP 62A-62B.


DO NOT ASSEMBLE BOLTS
TO THE TOP SIDE OF BEAM,
THESE BOLTS WILL BE
ASSEMBLED IN LATER STEP

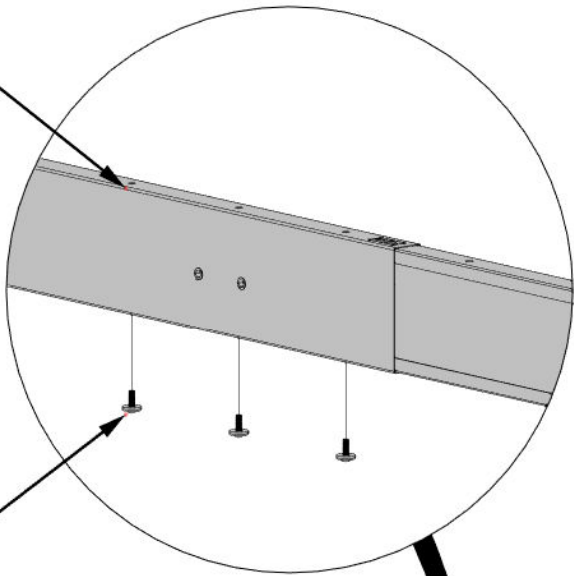

1202 (x3)
TORX PAN HEAD 1/4-20x3/4 ASSY
HAND TIGHTEN ONLY

B03 (x1)
BEAM ASSEMBLY

J1 (x1)
SPLICE BRACKET

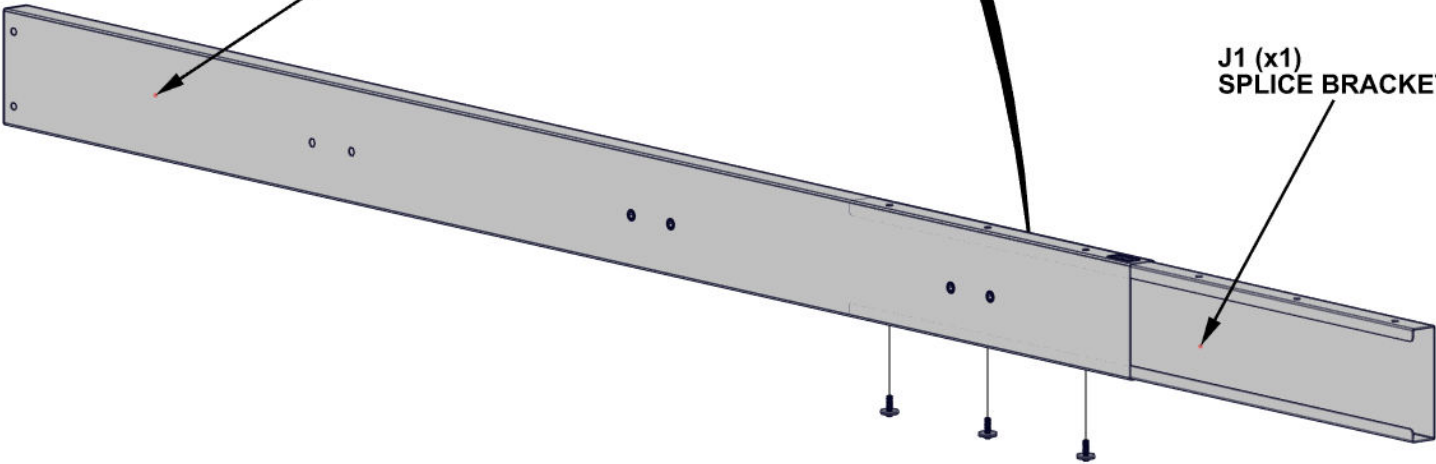

STEP 62B- FRONT BEAM ASSEMBLY

Qty	PartNo	Description
3	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




B07 BEAM ASSEMBLY - A4M05496
(x1) 1 7/16"x5 1/4"x78 13/16" (36x134x2003)

- SLIDE B07 ONTO SPLICE BRACKET.
- GENTLY TAP ENDS OF ASSEMBLY WITH RUBBER Mallet UNTIL GAP CLOSES, THEN TIGHTEN ALL BOLTS ON BEAM.

ARROWS INDICATE TOP SURFACE OF BEAM. BOTH ARROWS WILL FACE EACH OTHER ON BEAM ASSEMBLY

DO NOT ASSEMBLE BOLTS TO THE TOP SIDE OF BEAM, THESE BOLTS WILL BE ASSEMBLED IN LATER STEP

ALL THREADED INSERTS WILL BE ON THE SAME SIDE OF BEAMS

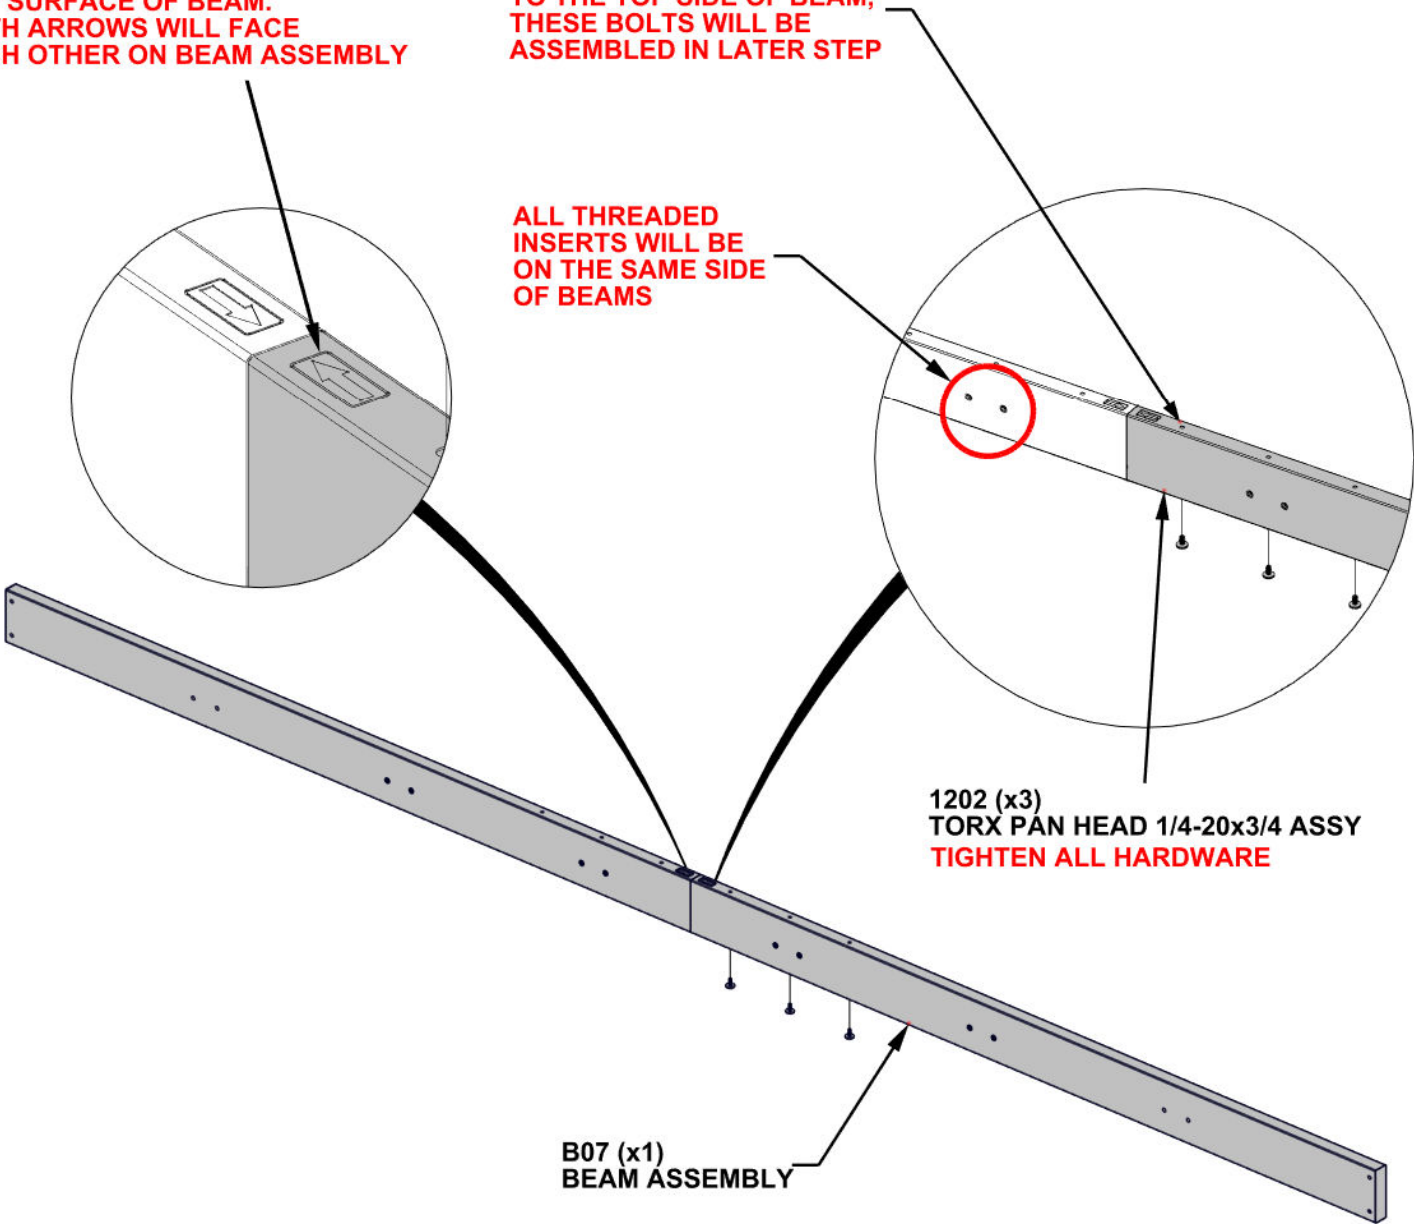


STEP 63- FRAME ASSEMBLY

Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20




FRONT BEAM ASSEMBLY FROM STEPS 62A-62B

- ALIGN THRU HOLES IN FRONT BEAM WITH THREADED INSERTS IN SIDE BEAMS.
- ATTACH FRONT BEAM TO SIDE BEAMS WITH SCREWS.

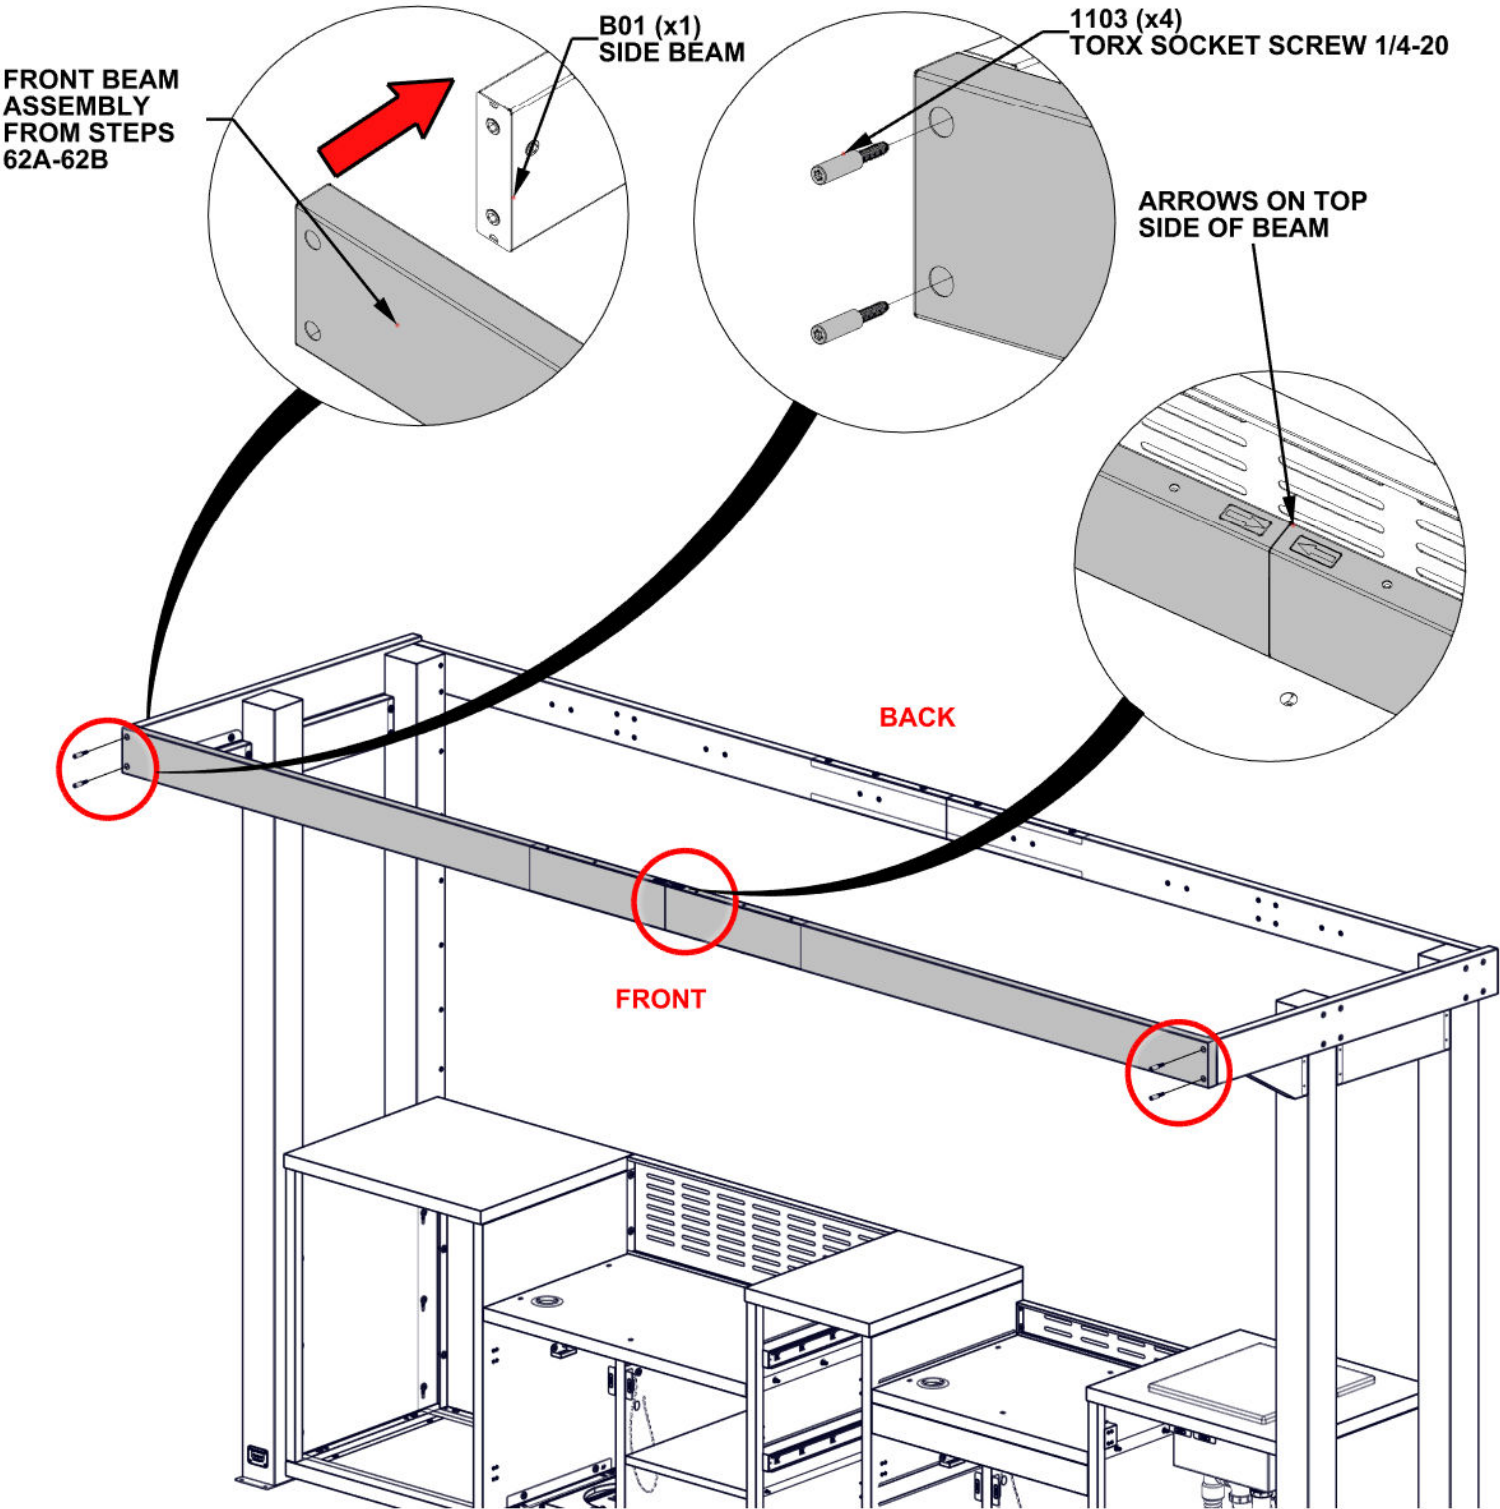


STEP 64- FRAME ASSEMBLY

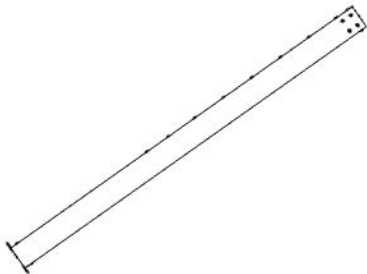

Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20

P05 BACK POST ASSEMBLY - A4M05507
(x1) 2 5/8"x7 7/8"x88 3/4" (66x200x2254)

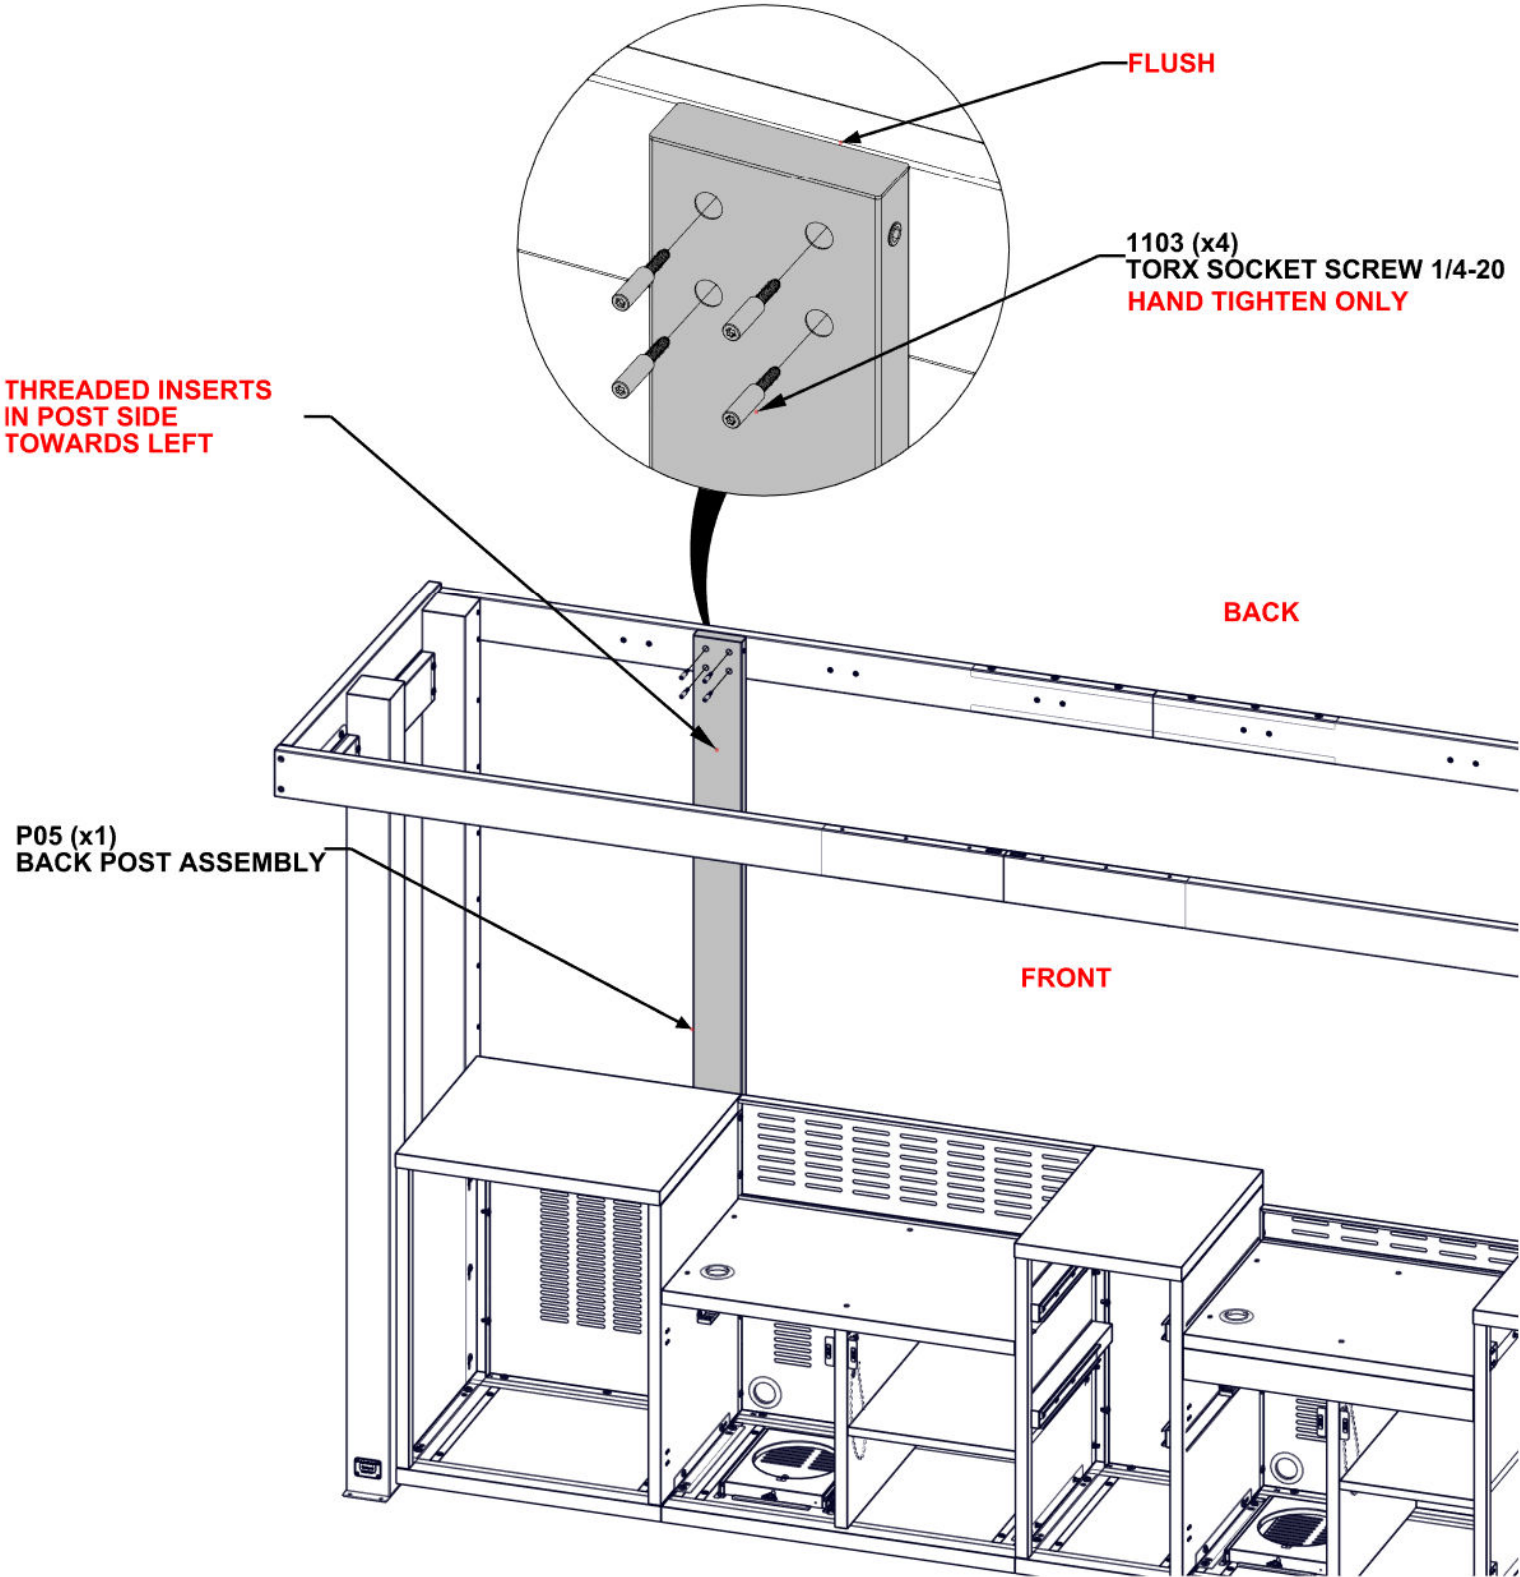


STEP 65- FRAME ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

1202 (x4) **HAND TIGHTEN ONLY**
TORX PAN HEAD 1/4-20x3/4 ASSY


**ALIGN THREADED
INSERTS WITH
SLOTS IN SIDE PANEL**

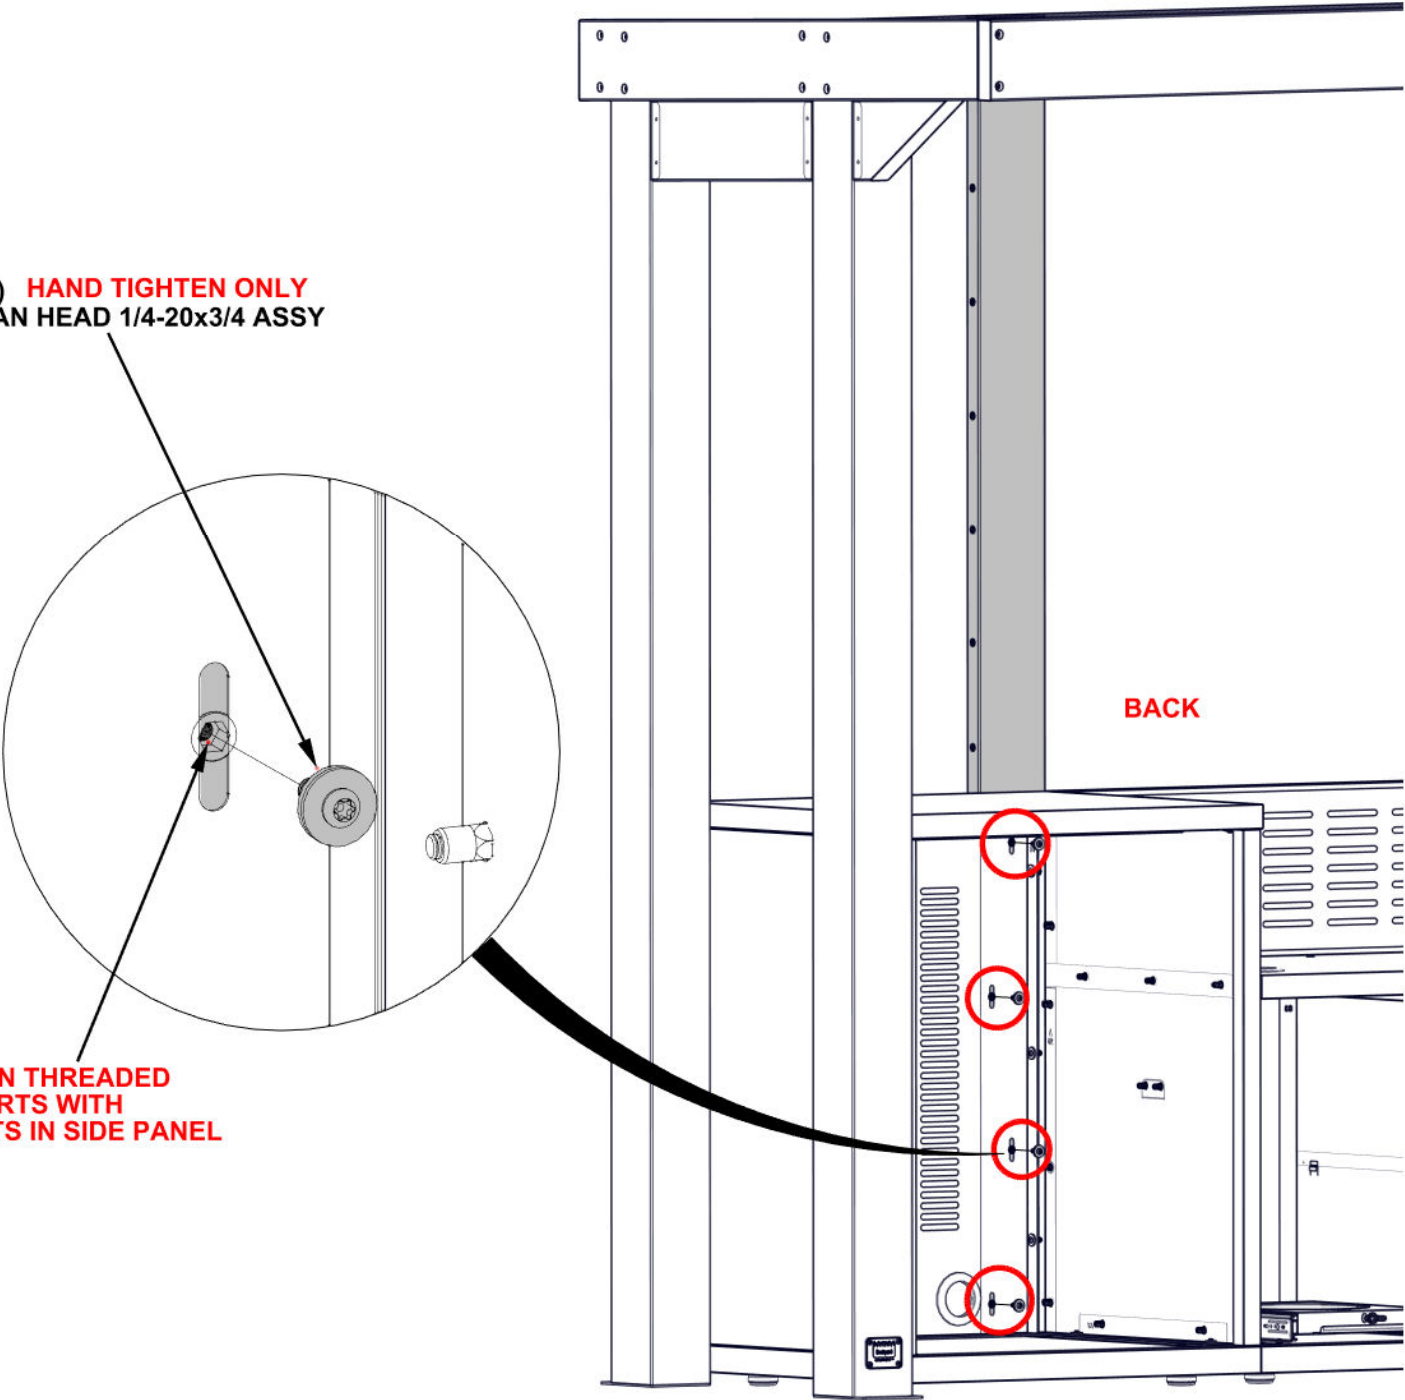

BACK


FRONT

STEP 66- FRAME ASSEMBLY

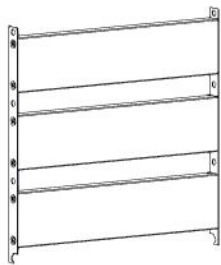


Qty	PartNo	Description
14	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

B10 BACK WALL ASSEMBLY - A4M05491
(x2) 1 7/16"x22 11/16"x23 3/8" (36x576.5x594)

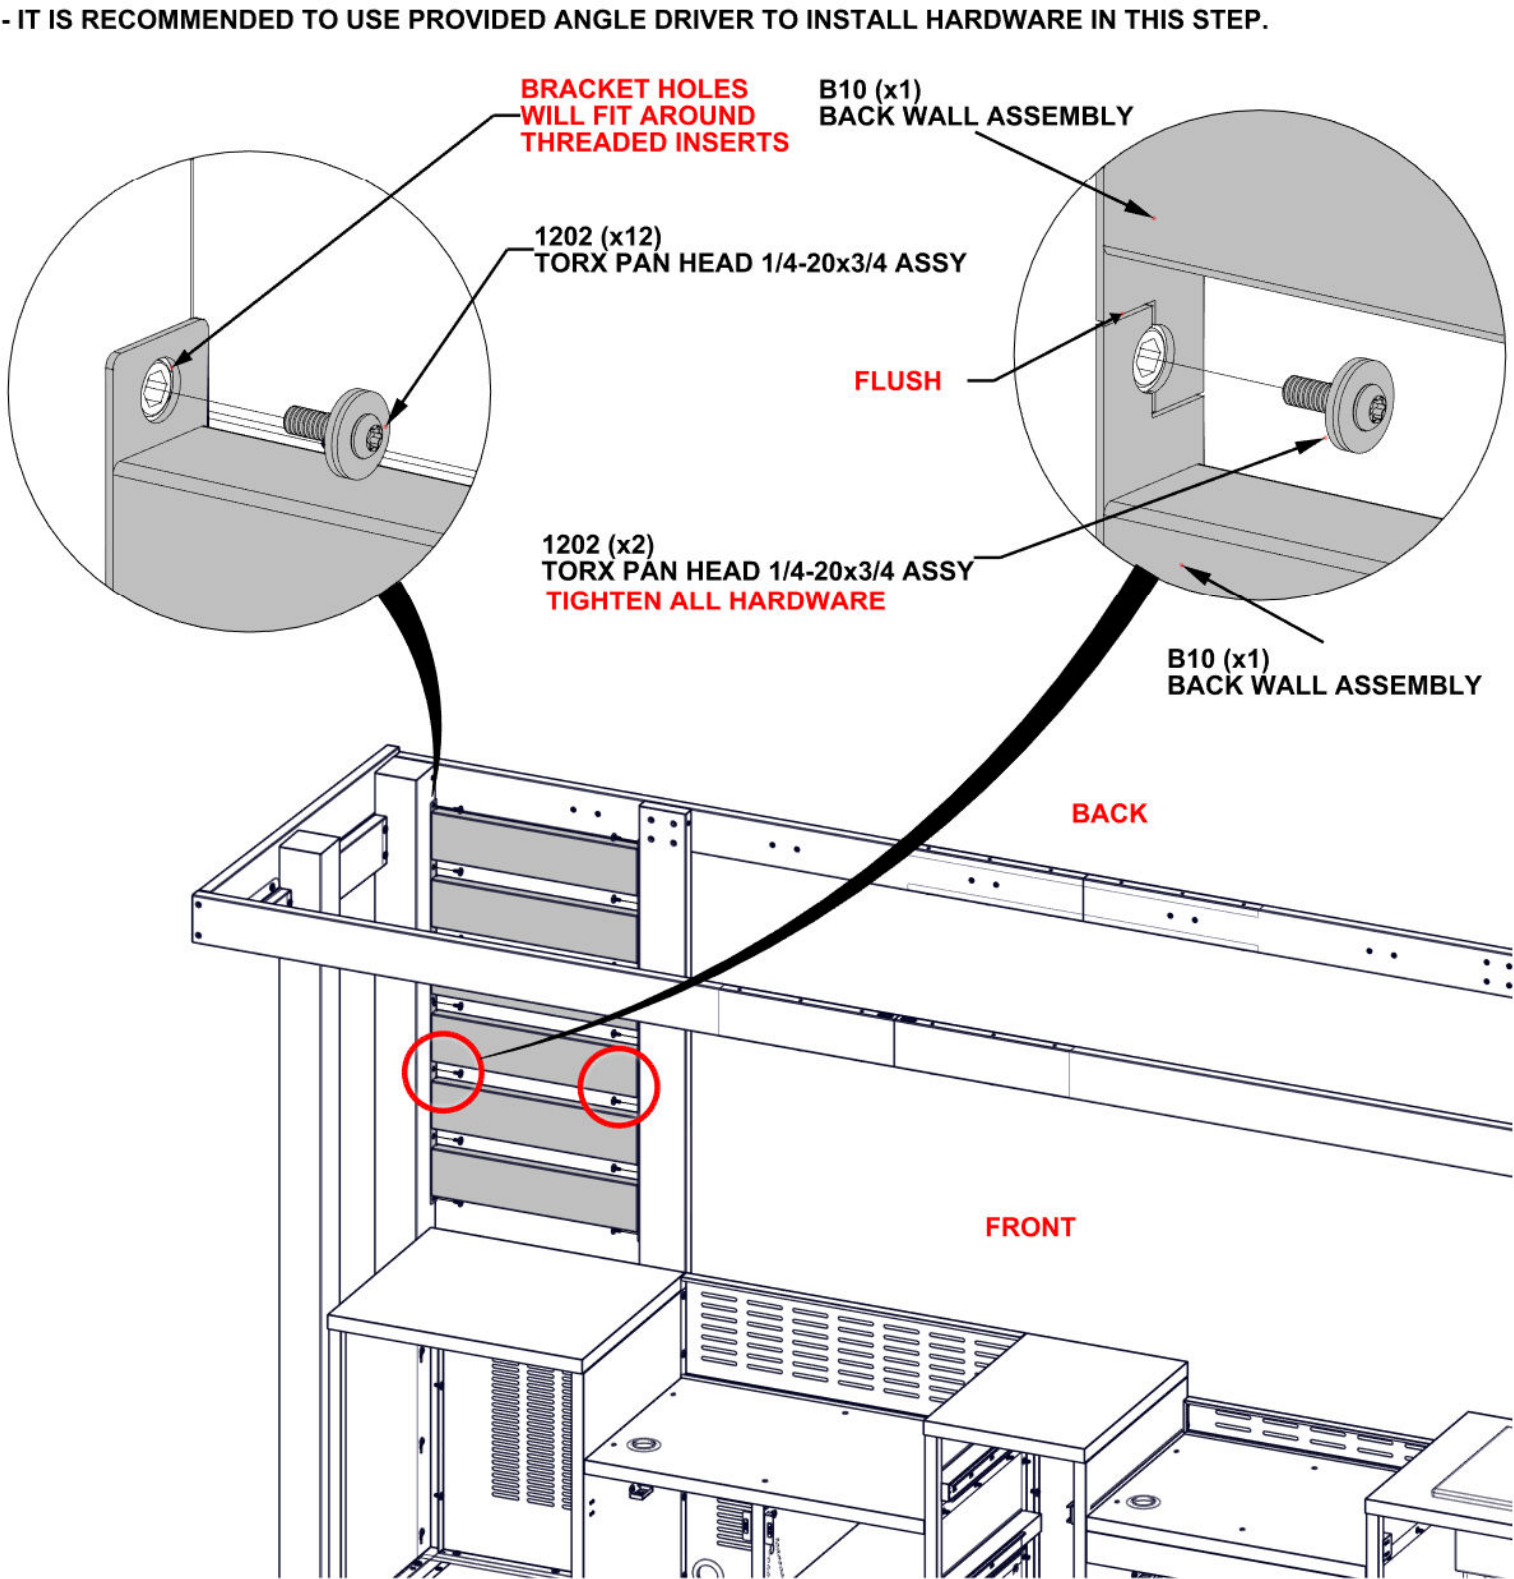

STEP 67- FRAME ASSEMBLY

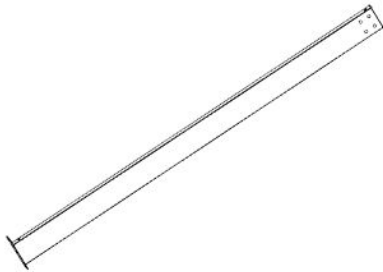

Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20

P06 BACK POST ASSEMBLY - A4M05497
(x1) 2 5/8"x7 7/8"x88 3/4" (66x200x2254)

FLUSH


1103 (x4)
TORX SOCKET SCREW 1/4-20
HAND TIGHTEN ONLY

THREADED INSERTS
IN POST SIDE
TOWARDS RIGHT

P06 (x1)
BACK POST ASSEMBLY


BACK

FRONT

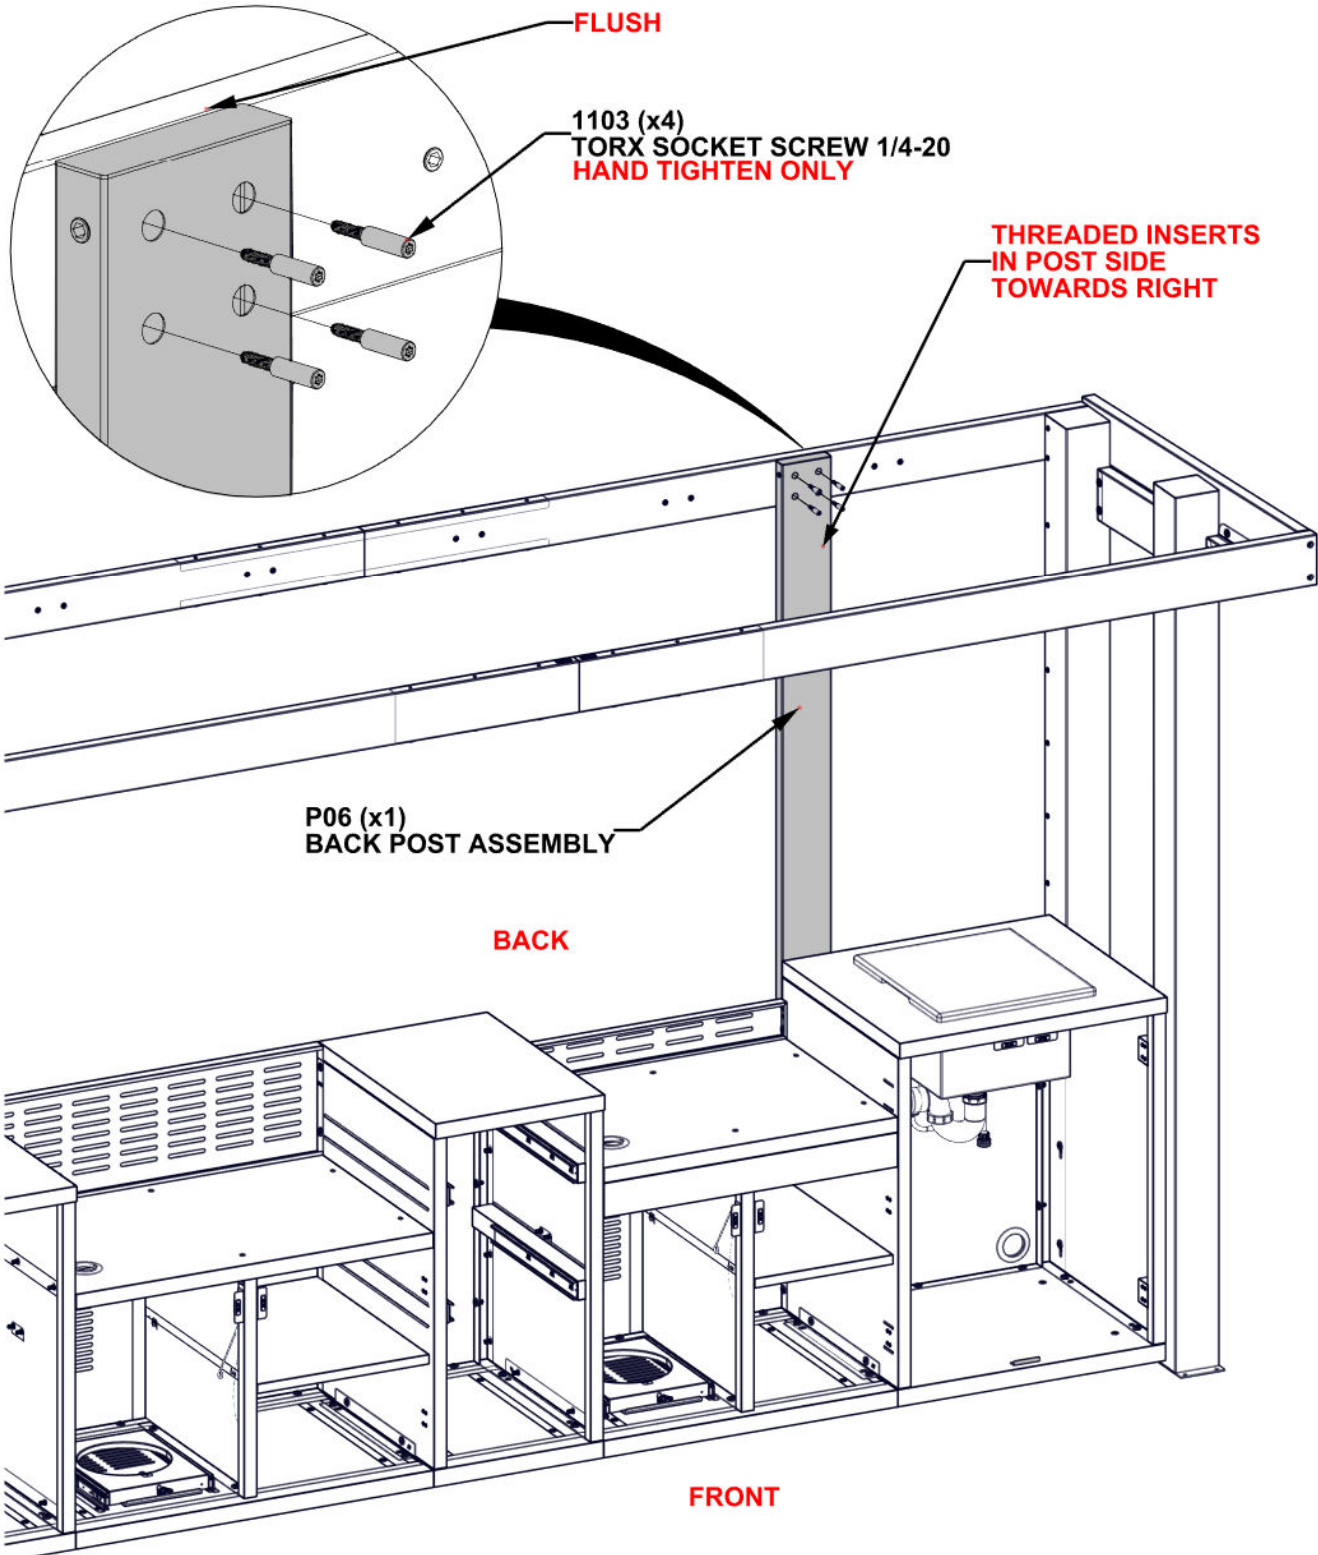


STEP 68- FRAME ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

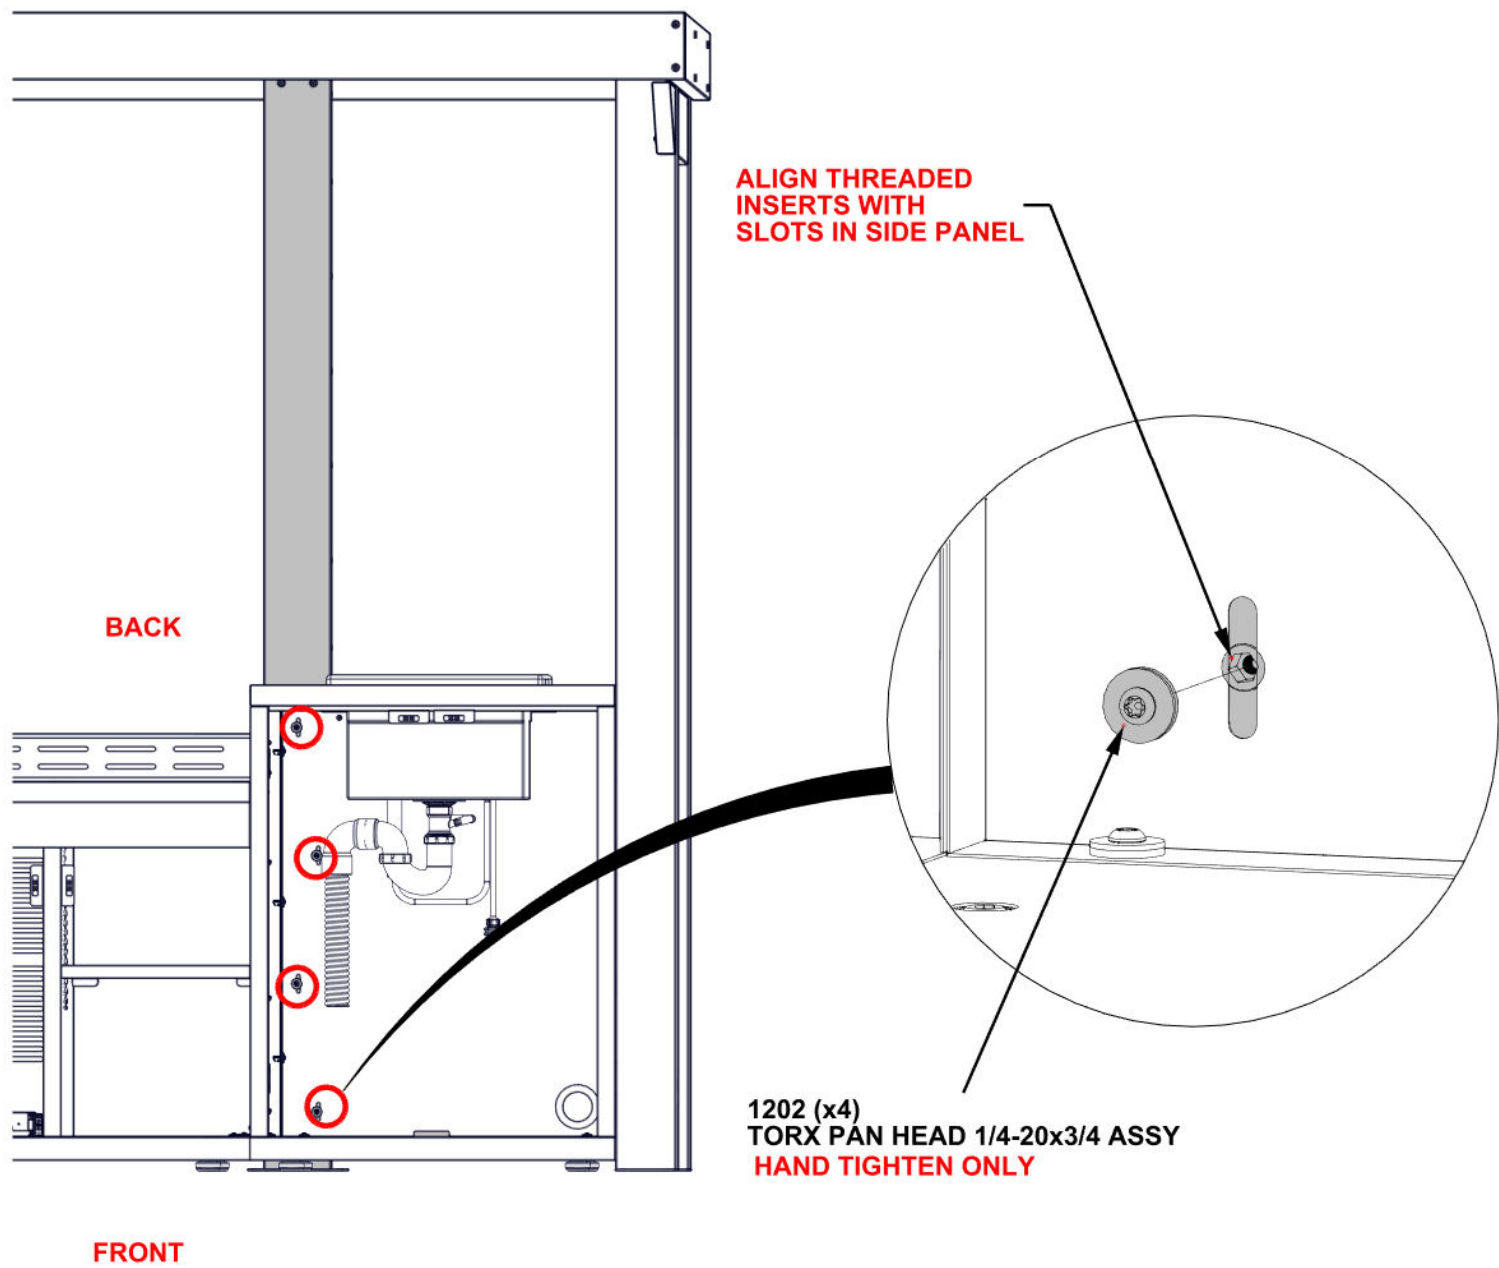

STEP 69- FRAME ASSEMBLY

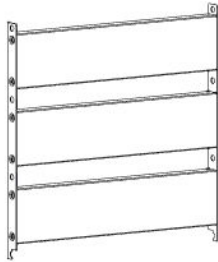

Qty	PartNo	Description
14	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

B10 BACK WALL ASSEMBLY - A4M05491
(x2) 1 7/16"x22 11/16"x23 3/8" (36x576.5x594)

- IT IS RECOMMENDED TO USE PROVIDED ANGLE DRIVER TO INSTALL HARDWARE IN THIS STEP.

**BRACKET HOLES
WILL FIT AROUND
THREADED INSERTS**

**1202 (x12)
TORX PAN
HEAD 1/4-20x3/4 ASSY
TIGHTEN ALL HARDWARE**

BACK


**B10 (x1)
BACK WALL ASSEMBLY**

FLUSH

**B10 (x1)
BACK WALL ASSEMBLY**


**1202 (x2)
TORX PAN
HEAD 1/4-20x3/4 ASSY**

FRONT

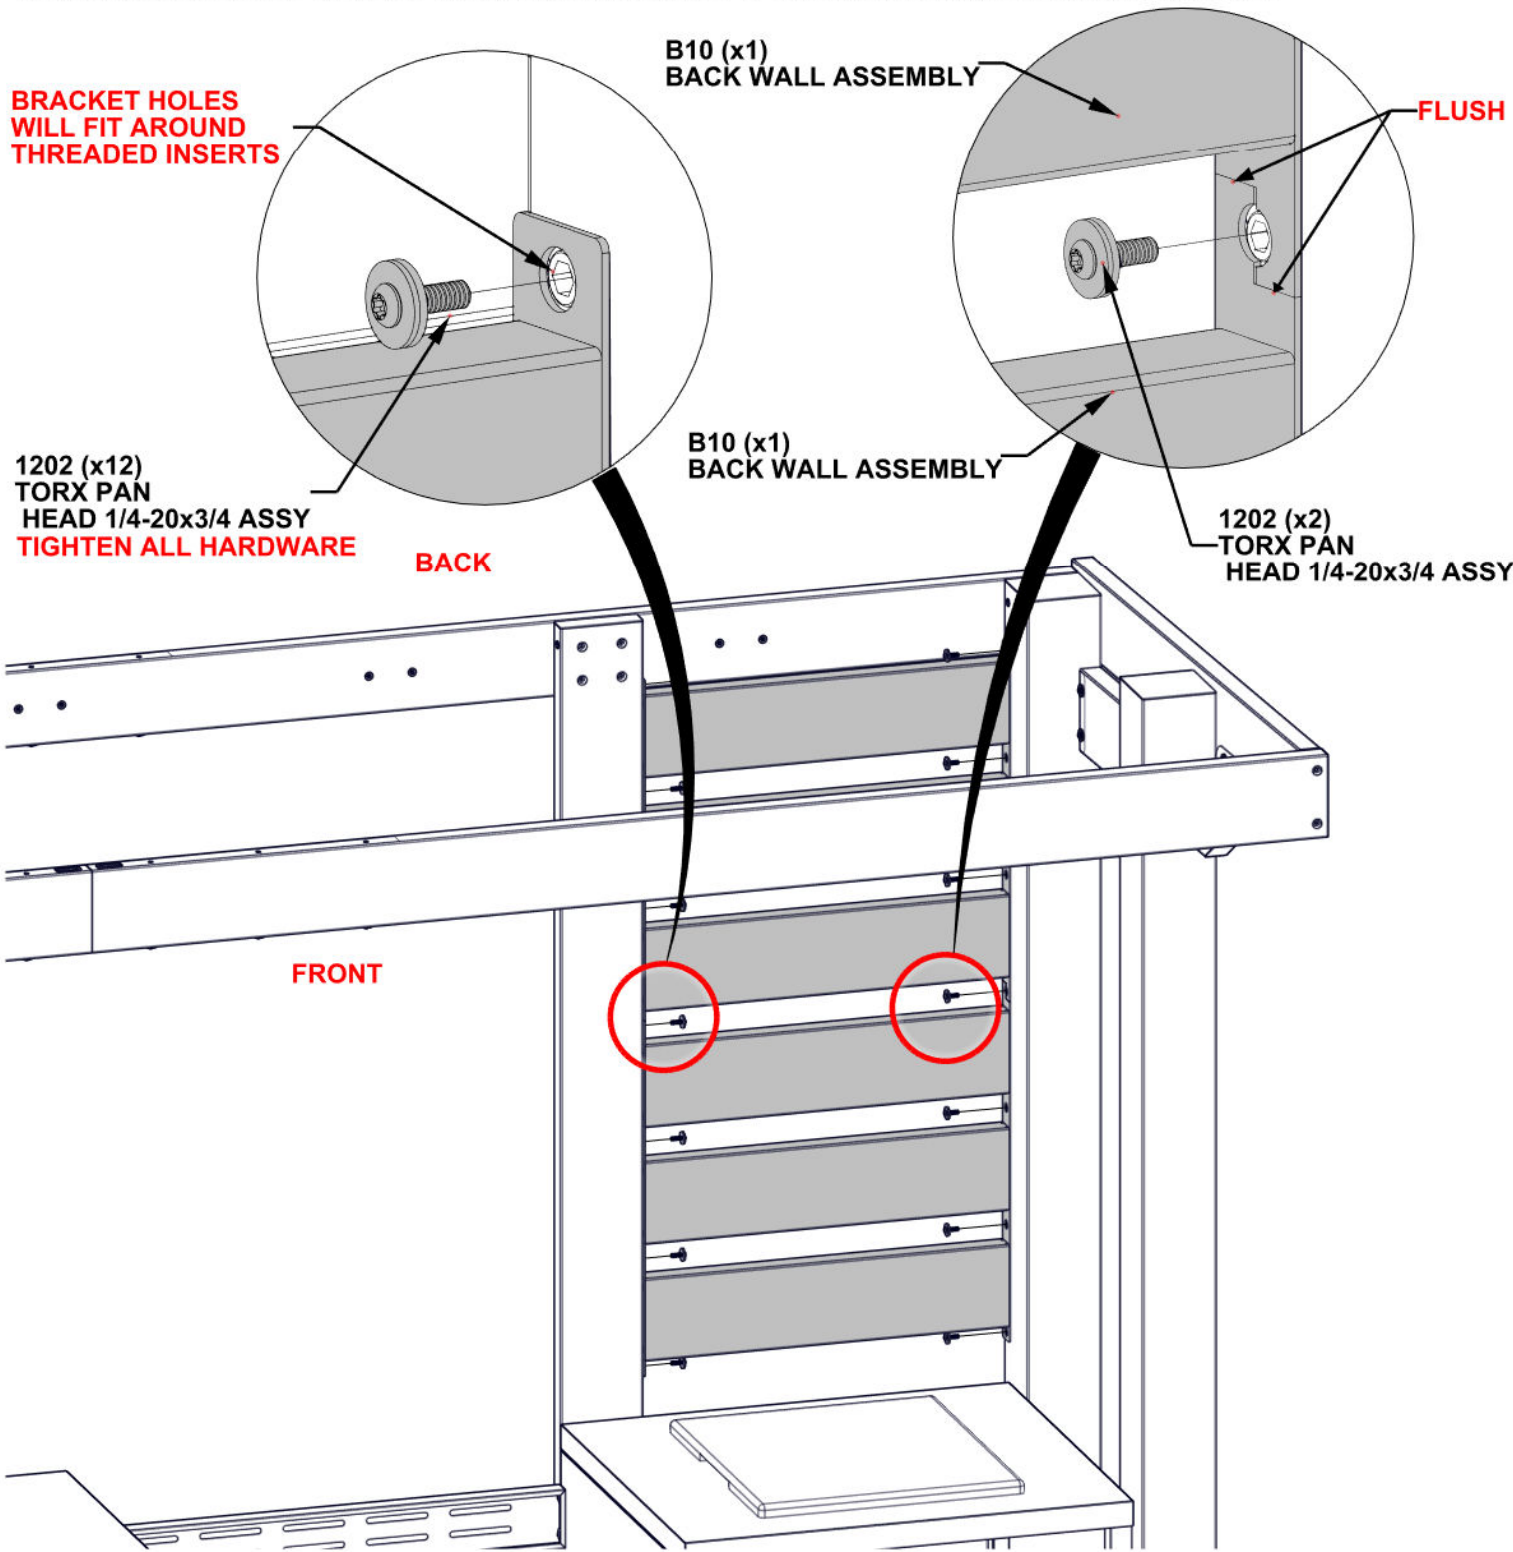

STEP 70- ROOF ASSEMBLY

Qty	PartNo	Description
24	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



R01 RAFTER - A4M02020
(x6) 3 1/8"x3 15/16"x45 1/16" (80x100x1144)


-ATTACH EACH RAFTER AS SHOWN BELOW

1202 (x24)
TORX PAN HEAD 1/4-20x3/4 ASSY

ARROW FACE UP
AND TOWARDS
FRONT OF GAZEBO

BRACKET HOLES
WILL FIT AROUND
THREADED INSERTS

R01 (x6)
RAFTER

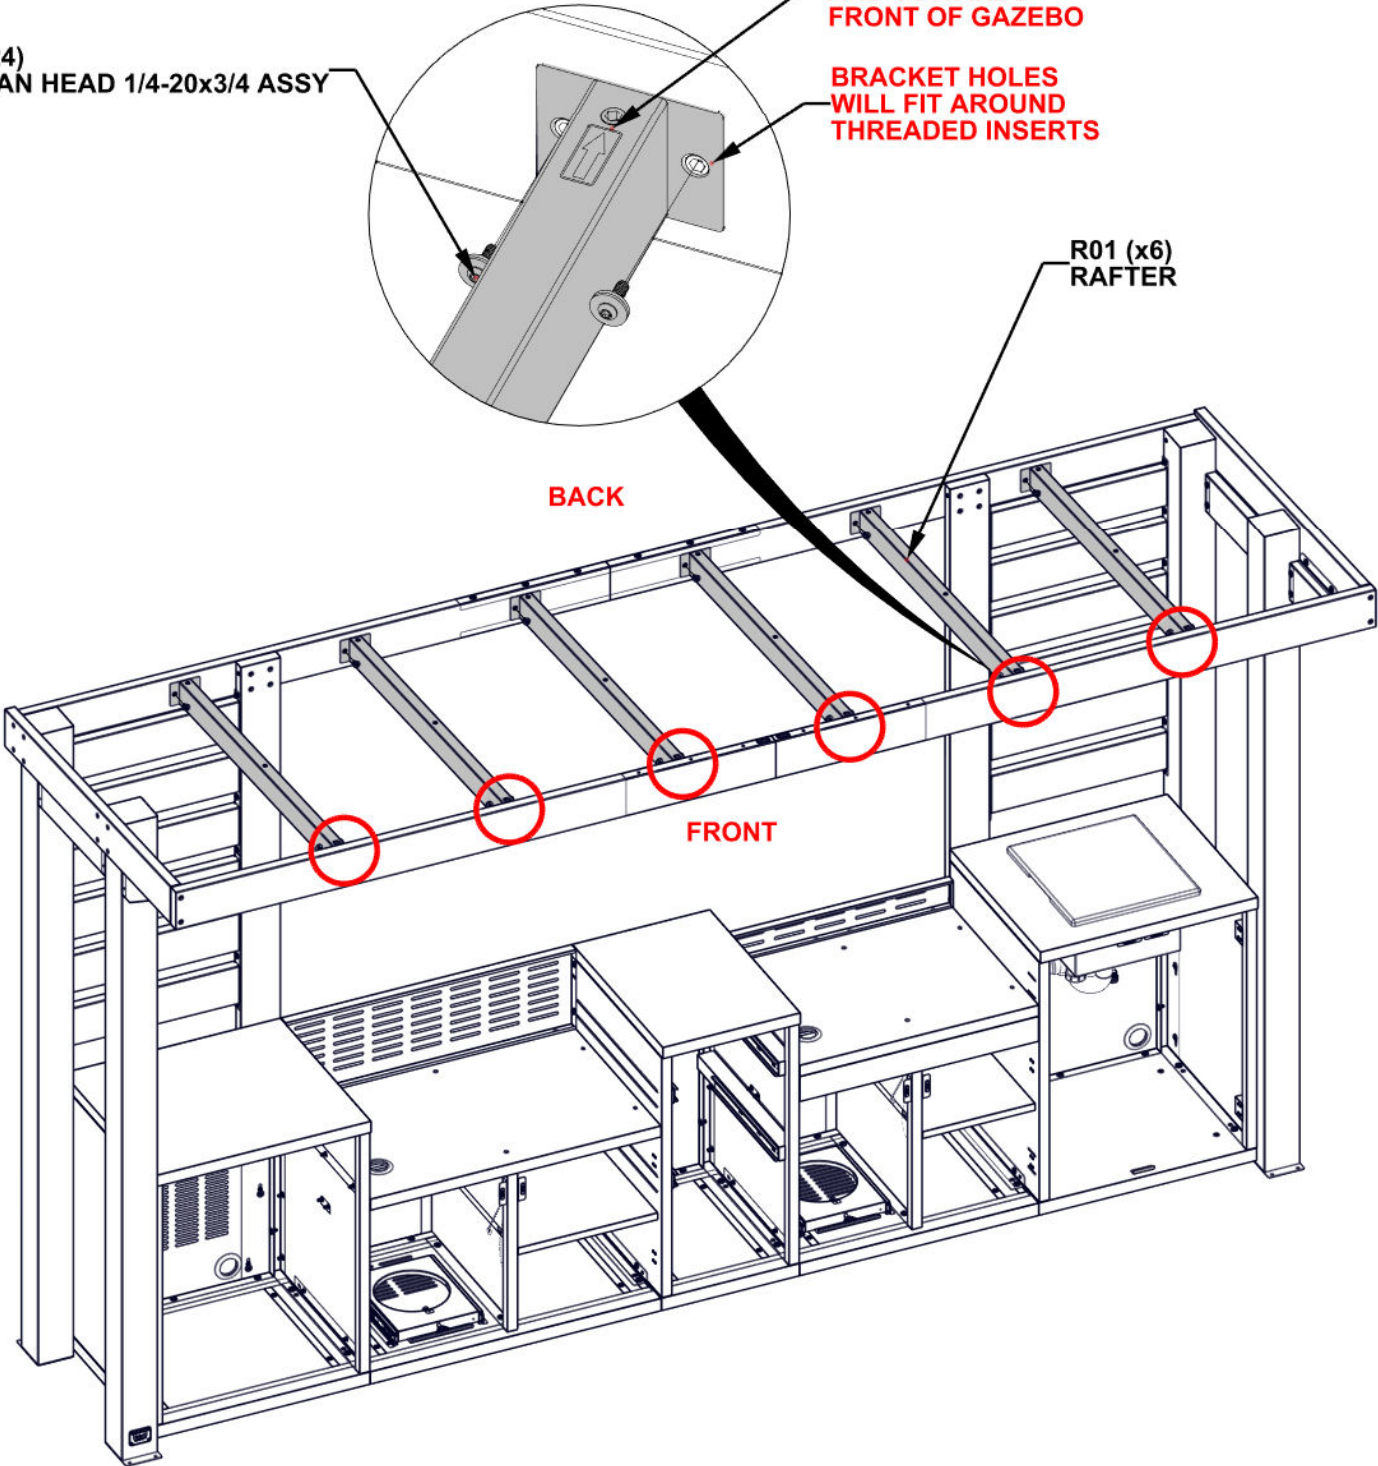

STEP 71- ROOF ASSEMBLY

Qty	PartNo	Description
4	H101132	TORX SOCKET SCREW SHORT 1/4-20
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



E04 PURLIN ASSEMBLY - A4M05501
(x1) 1 9/16"x1 3/4"x87 13/16" (40x45x2230)

- DO NOT STAND ON CABINET FRAME TO INSTALL PURLIN.
- WITH ONE EXTRA PERSON, ATTACH E04 PURLIN.

1132 (x4)
TORX SOCKET
SCREW SHORT 1/4-20


PILOT HOLES
FACE UP

BRACKET HOLES
WILL FIT AROUND
THREADED INSERTS

1202 (x2)
TORX PAN HEAD
1/4-20x3/4 ASSY

BACK

FRONT

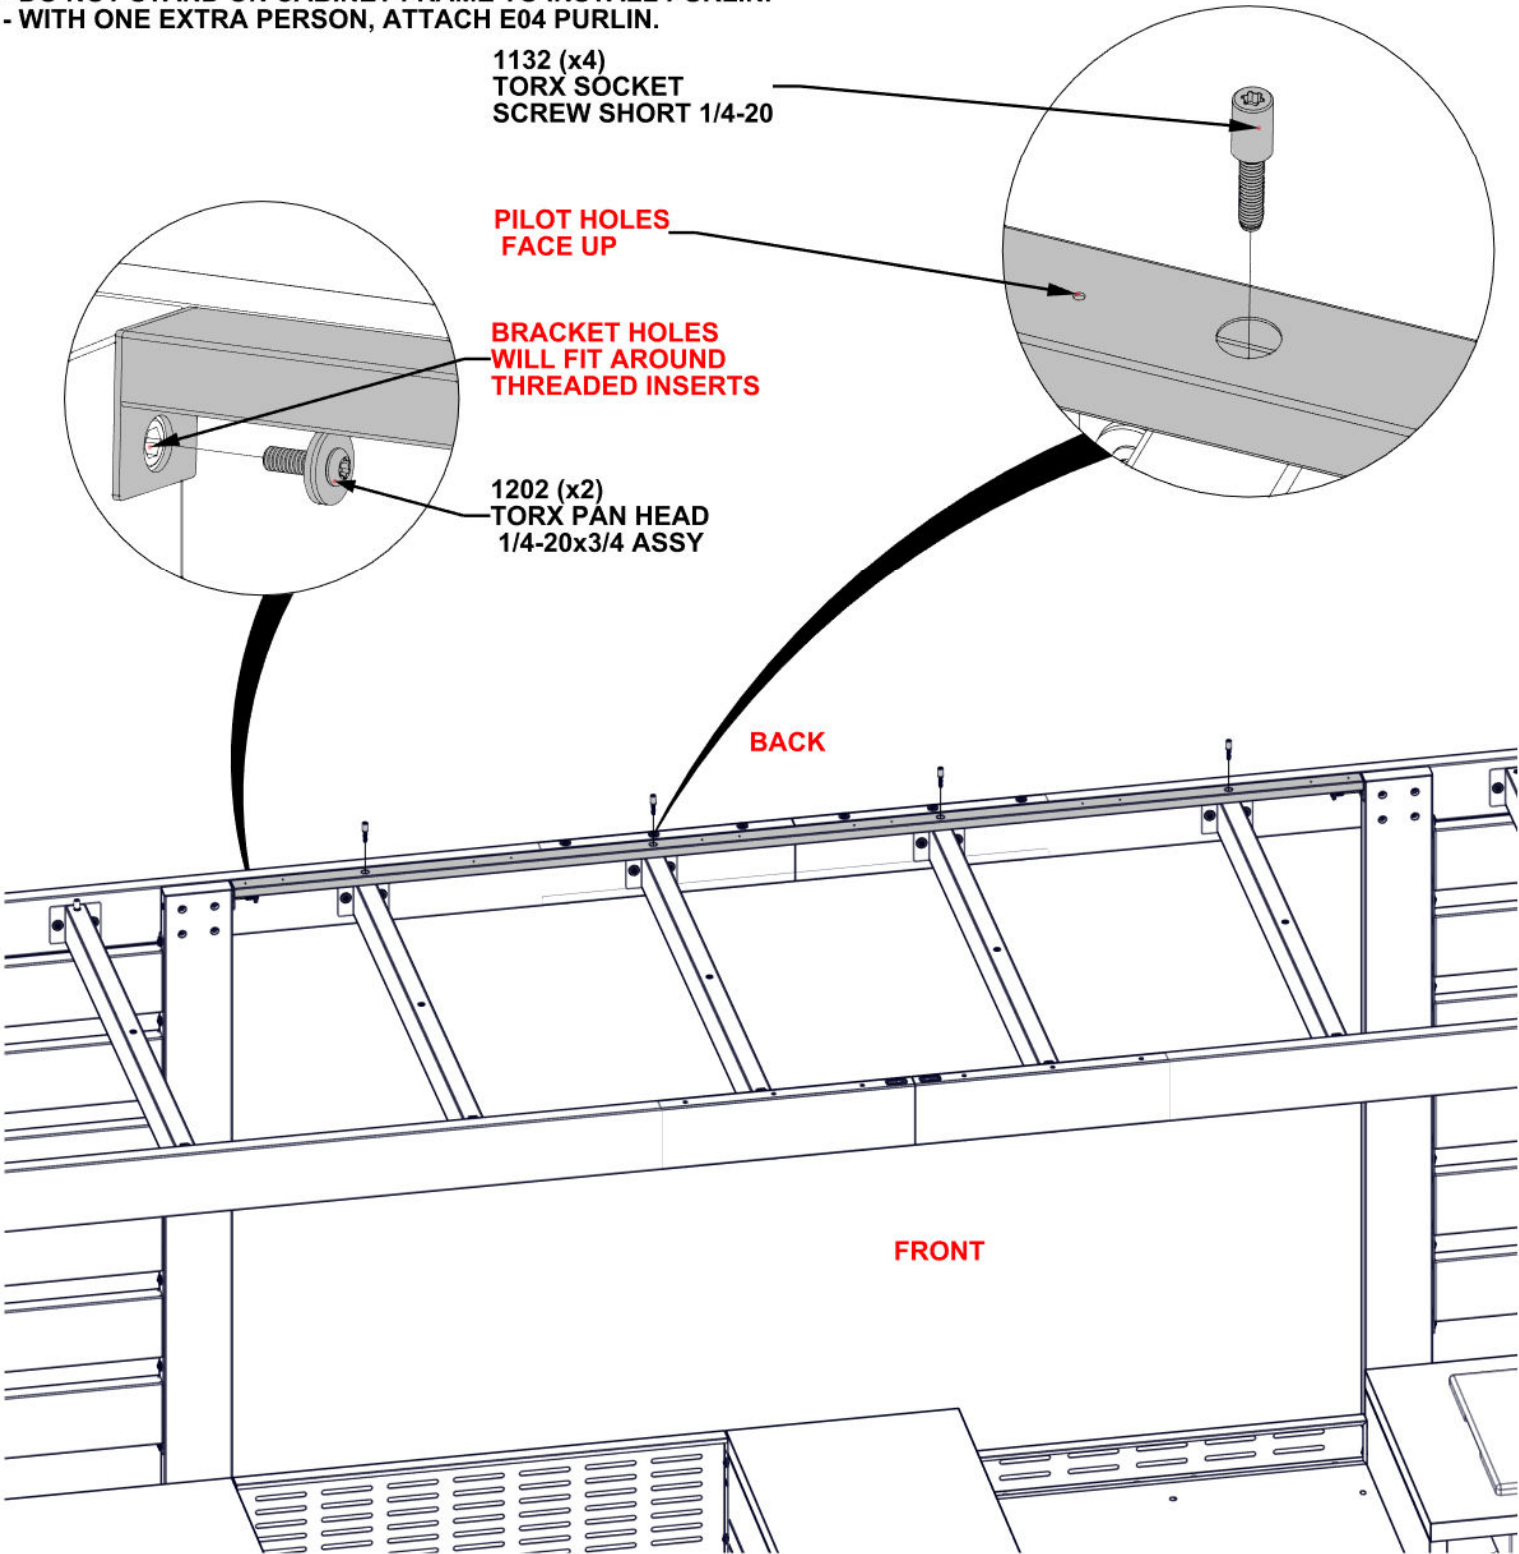


STEP 72- ROOF ASSEMBLY

Qty	PartNo	Description
1	H101132	TORX SOCKET SCREW SHORT 1/4-20
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



E03 PURLIN ASSEMBLY - A4M05495
(x1) 1 9/16"x1 3/4"x23 3/8" (40x45x594)

- IT IS RECOMMENDED TO USE PROVIDED ANGLE DRIVER TO INSTALL HARDWARE IN THIS STEP.

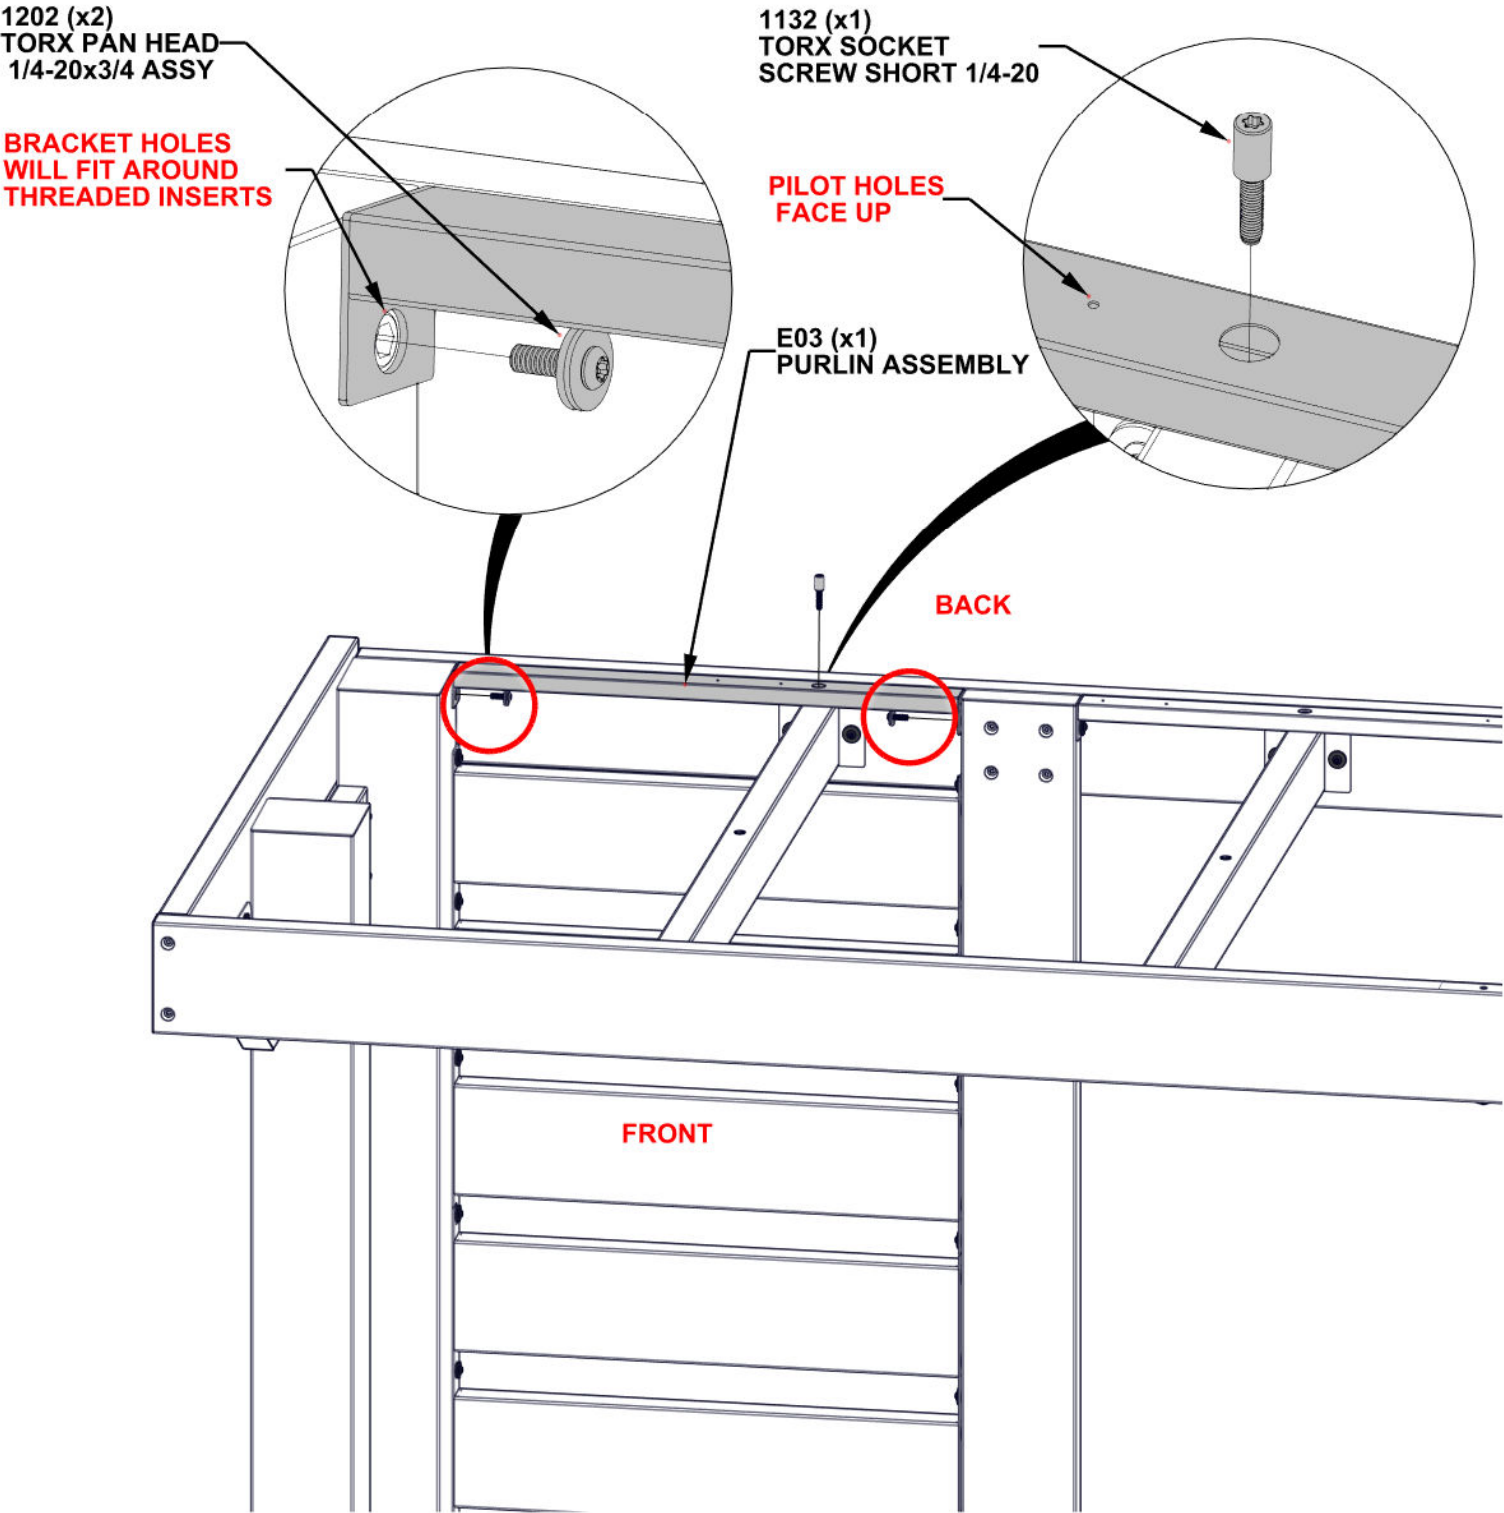


STEP 73- ROOF ASSEMBLY




E03 PURLIN ASSEMBLY - A4M05495
(x1) 1 9/16"x1 3/4"x23 3/8" (40x45x594)

Qty	PartNo	Description
1	H101132	TORX SOCKET SCREW SHORT 1/4-20
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- IT IS RECOMMENDED TO USE PROVIDED ANGLE DRIVER TO INSTALL HARDWARE IN THIS STEP.

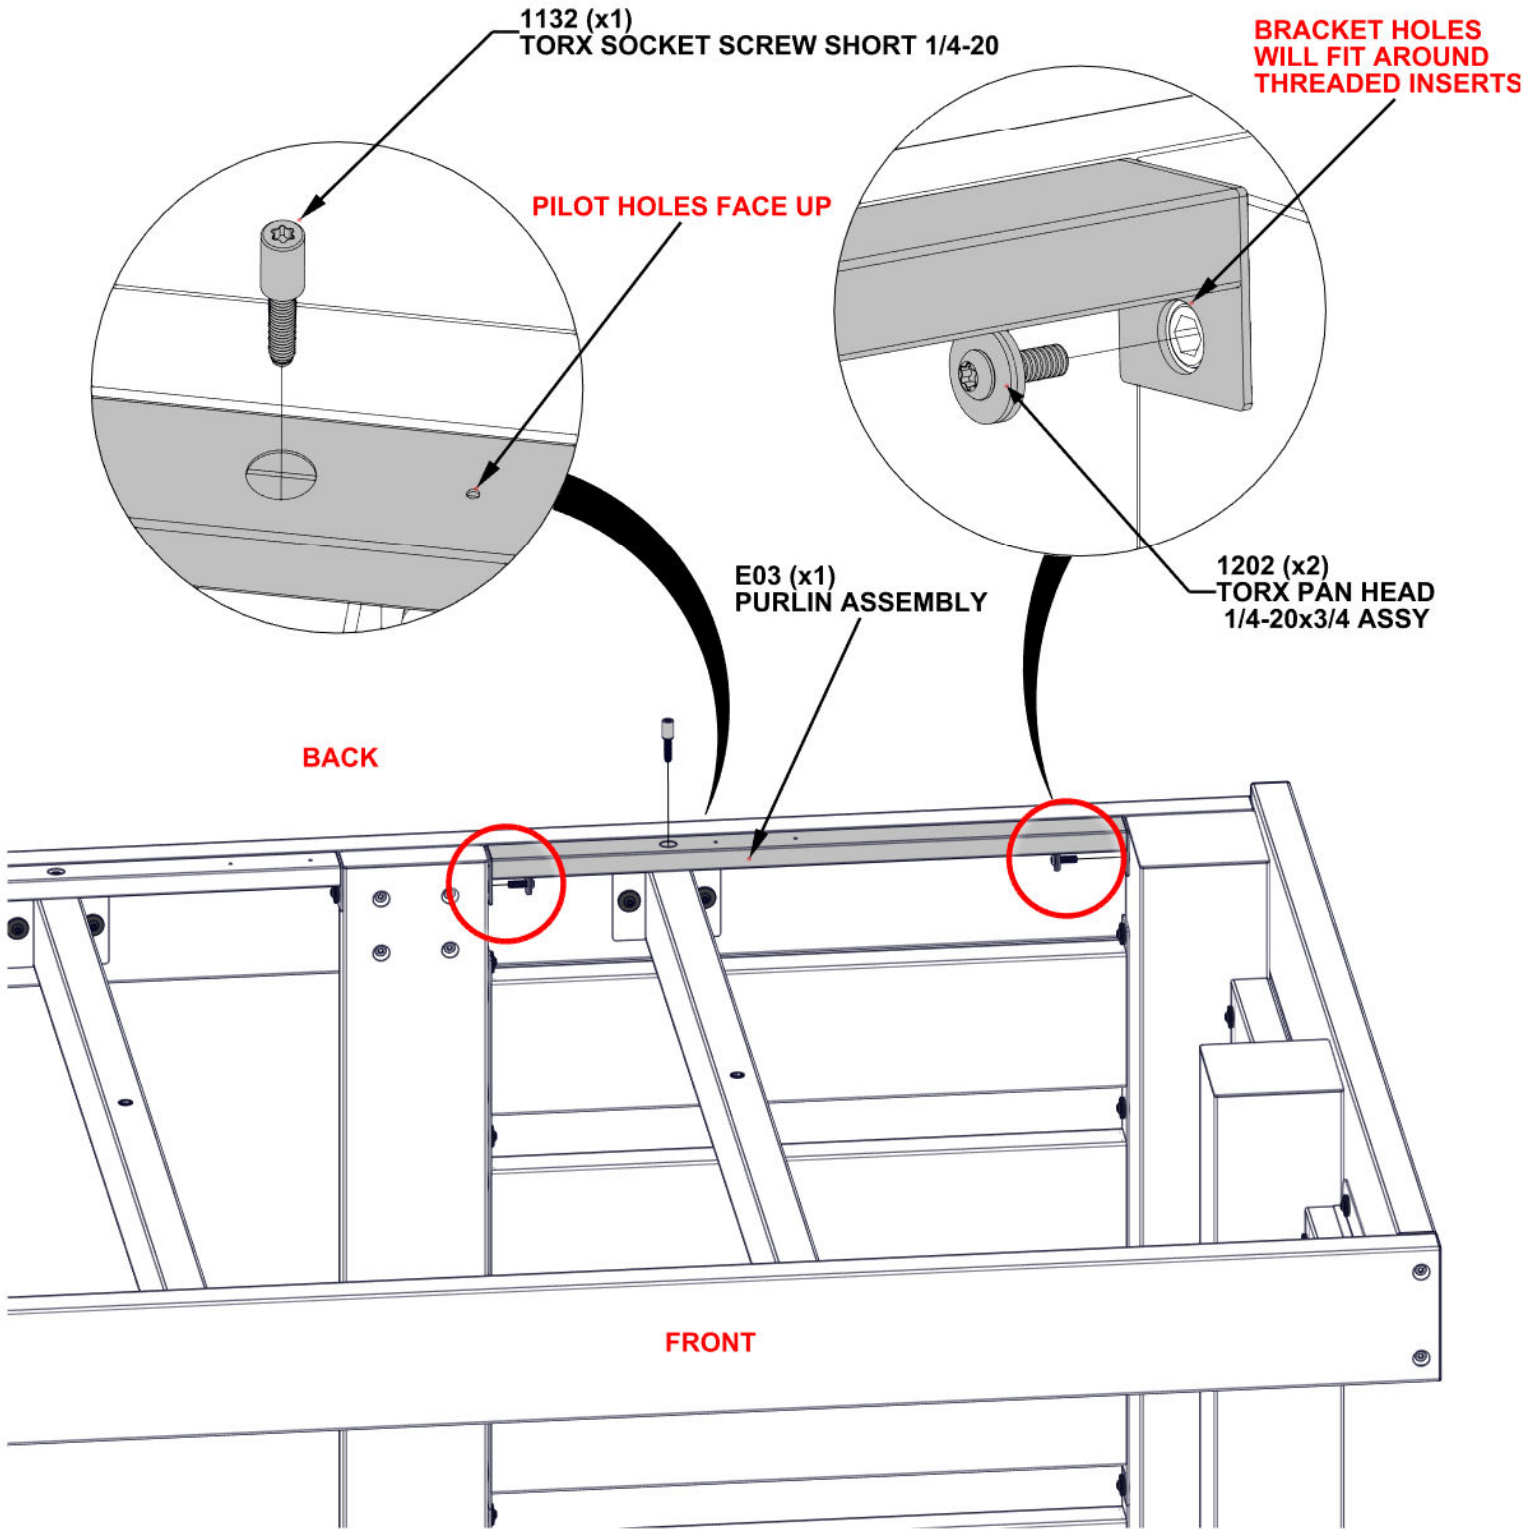

STEP 74- ROOF ASSEMBLY




530 2-WAY SQUARE PLUG - A6P00530
(x2)




E01 PURLIN ASSEMBLY - A4M05502
(x2) 1 9/16"x8 7/8"x66 3/16" (40x45x1681.25)

- ATTACH 2-WAY PLUG(530) TO ENDS OF E01 PURLIN.
- USE A RUBBER Mallet TO TAP 2-WAY SQUARE PLUG INTO ENDS OF PURLINS.

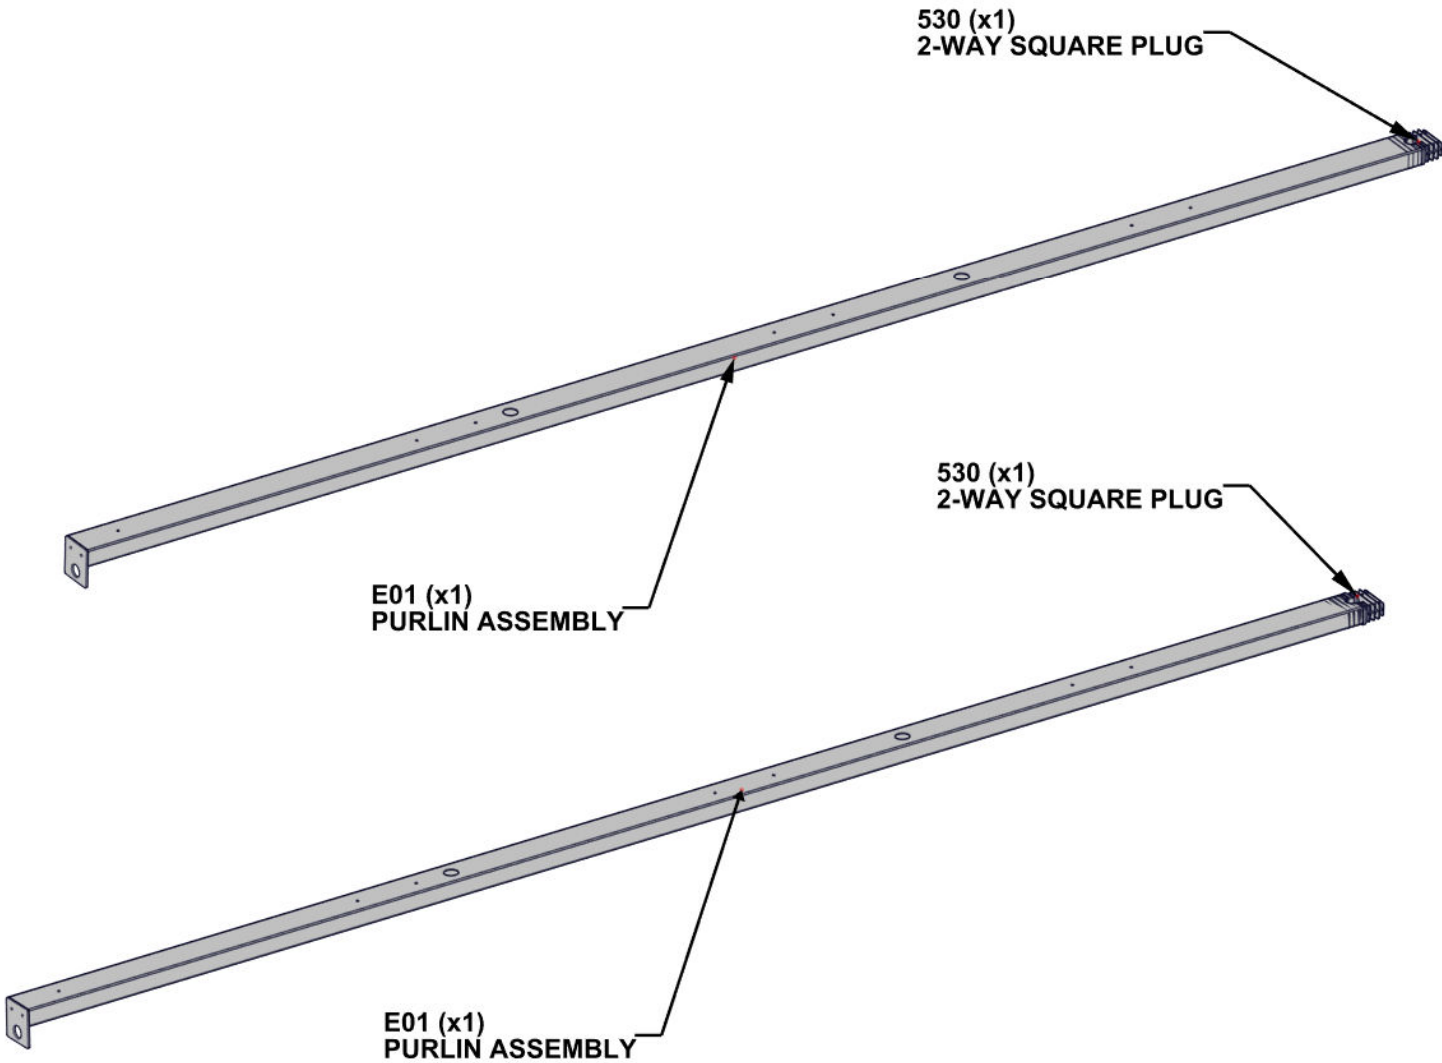


STEP 75A- ROOF ASSEMBLY

Qty	PartNo	Description
4	H101132	TORX SOCKET SCREW SHORT 1/4-20
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



PURLIN ASSEMBLY(x2)
FROM STEP74

-STARTING AT FRONT WORKING TO BACK WILL MAKE IT EASIER TO INSTALL PURLIN ASSEMBLIES

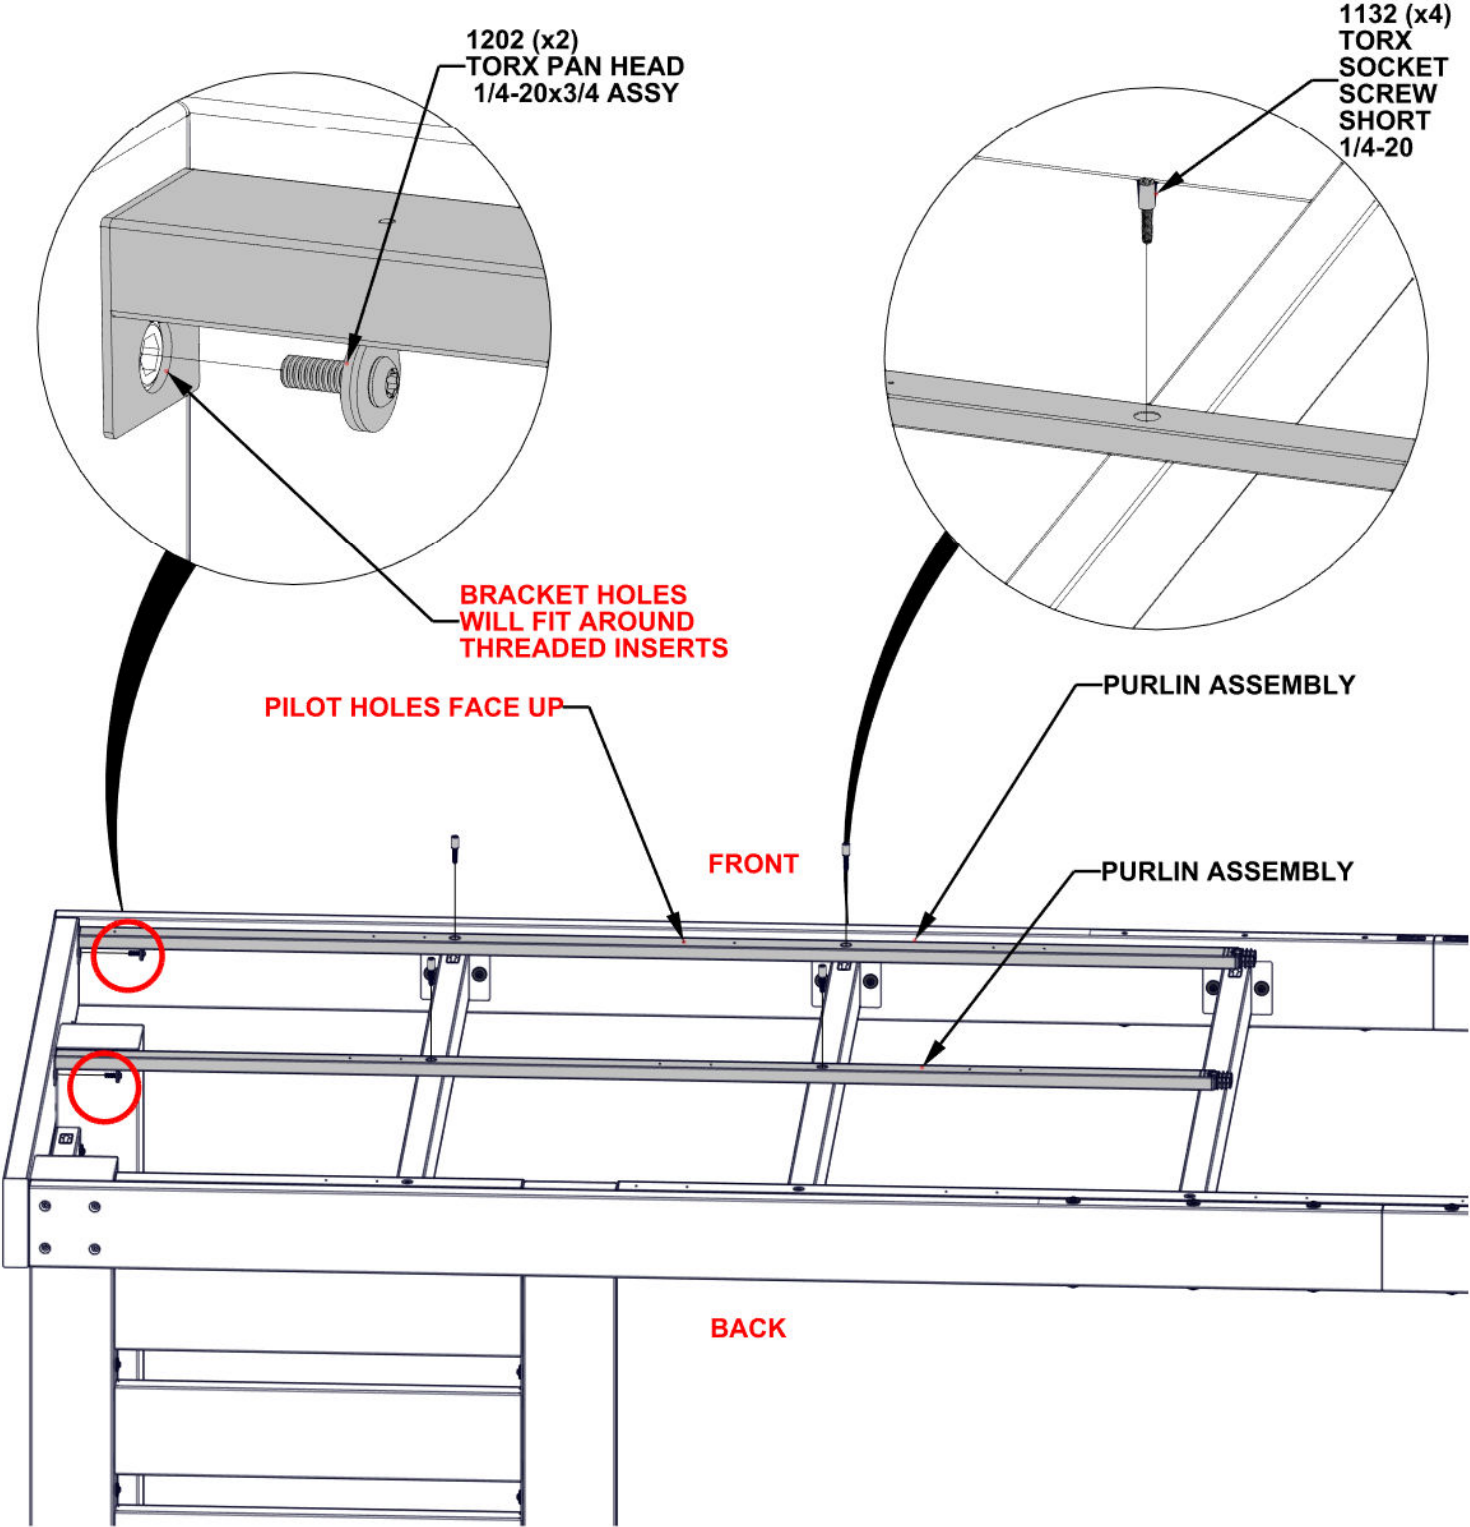


STEP 75B -ROOF ASSEMBLY

Qty	PartNo	Description
8	H101132	TORX SOCKET SCREW SHORT 1/4-20
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




E02 PURLIN ASSEMBLY - A4M05503
(x2) 1 9/16"x19 15/16"x88 1/2" (40x45x2248.3)

- WITH ONE EXTRA PERSON, ATTACH E01 PURLINS TO THE 2-WAY PLUGS.
- STARTING AT FRONT AND WORKING TO BACK WILL MAKE IT EASIER TO INSTALL PURLIN ASSEMBLIES.

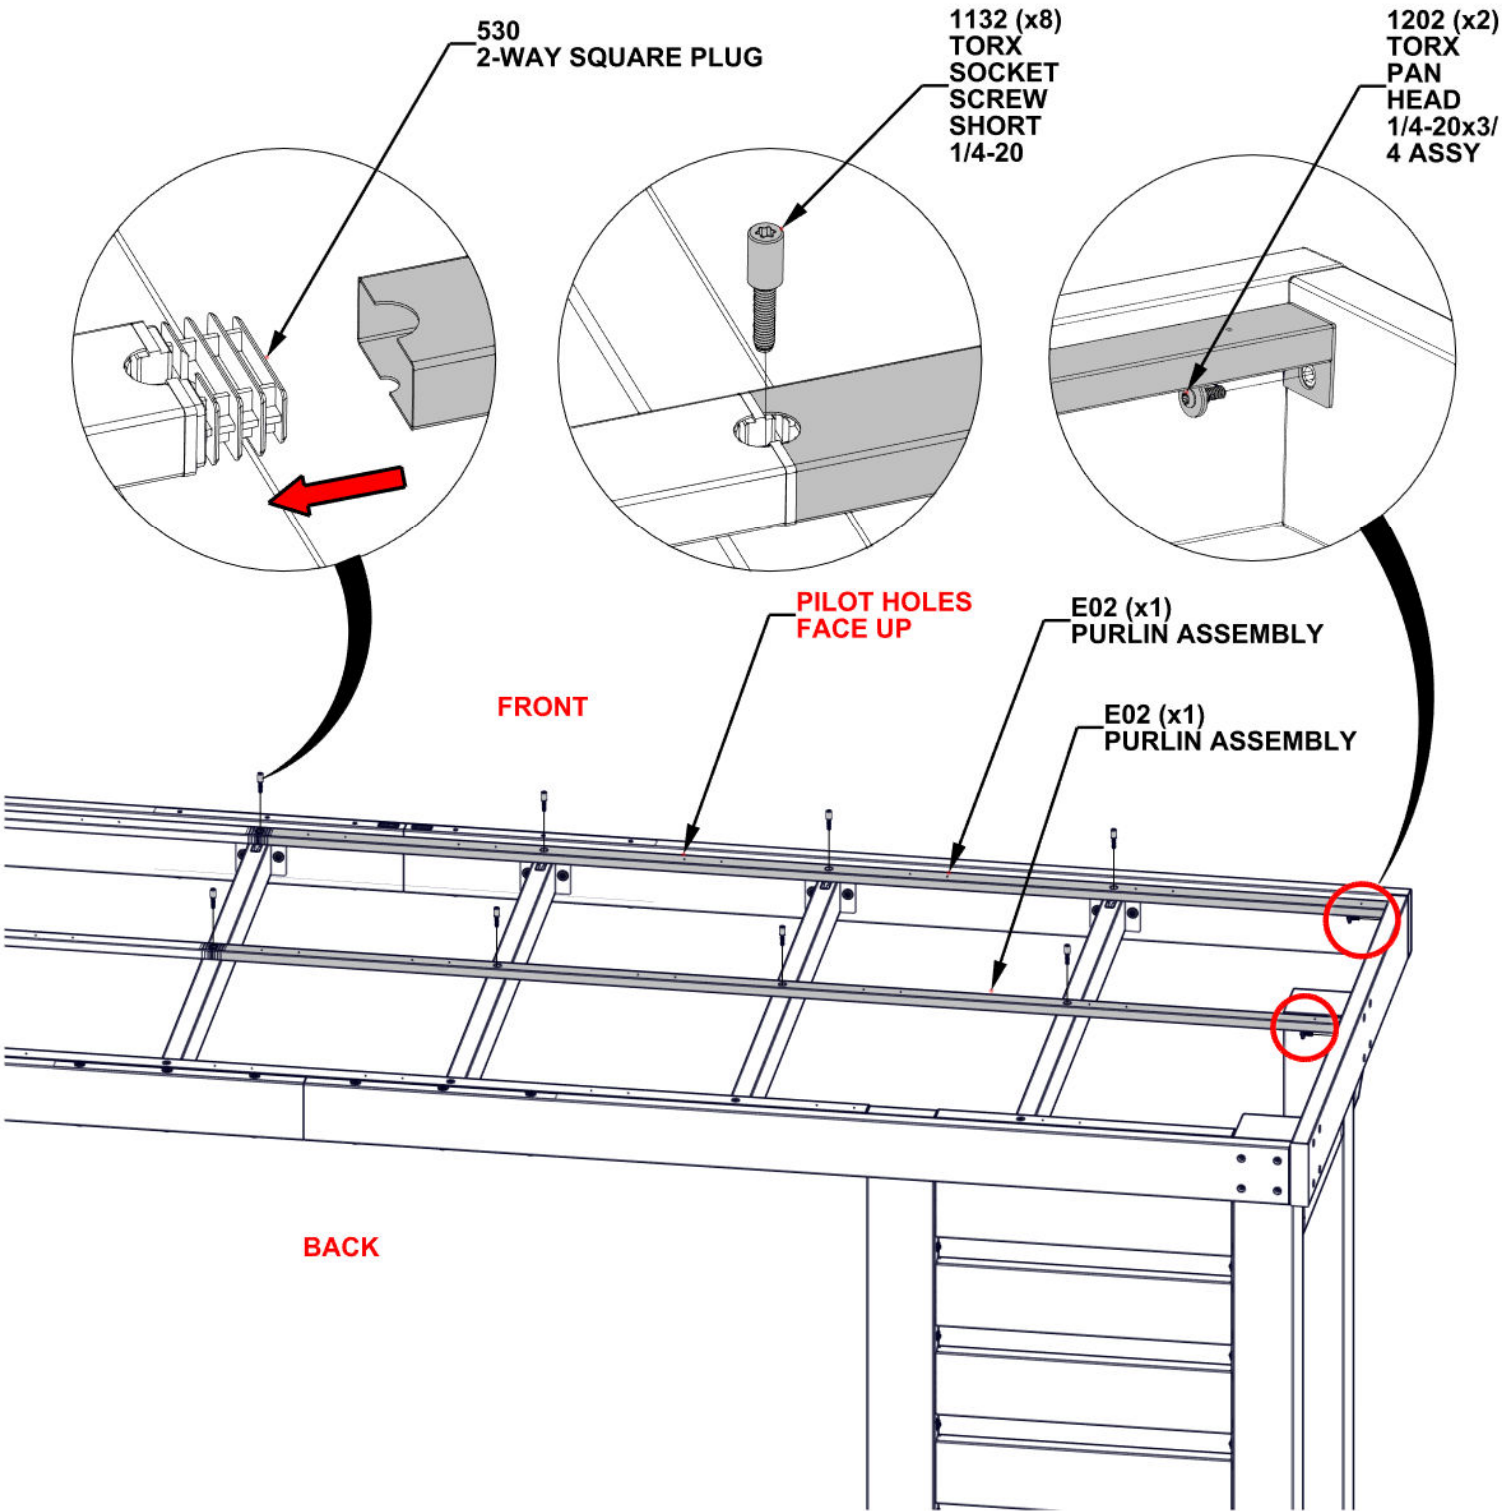


STEP 76- ROOF ASSEMBLY

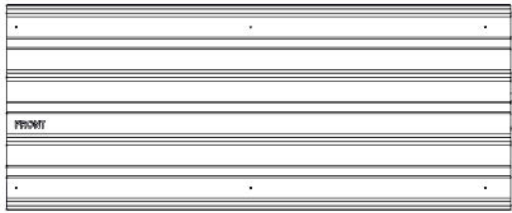

3113 29GA STEEL SHEETING - A4M03113
(x3) 1/4"x18 7/8"x46 7/16" (7x480x1179)


Qty	PartNo	Description
12	H101117	SCREW WOODGRIP 10-16x3/4" BLK

- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

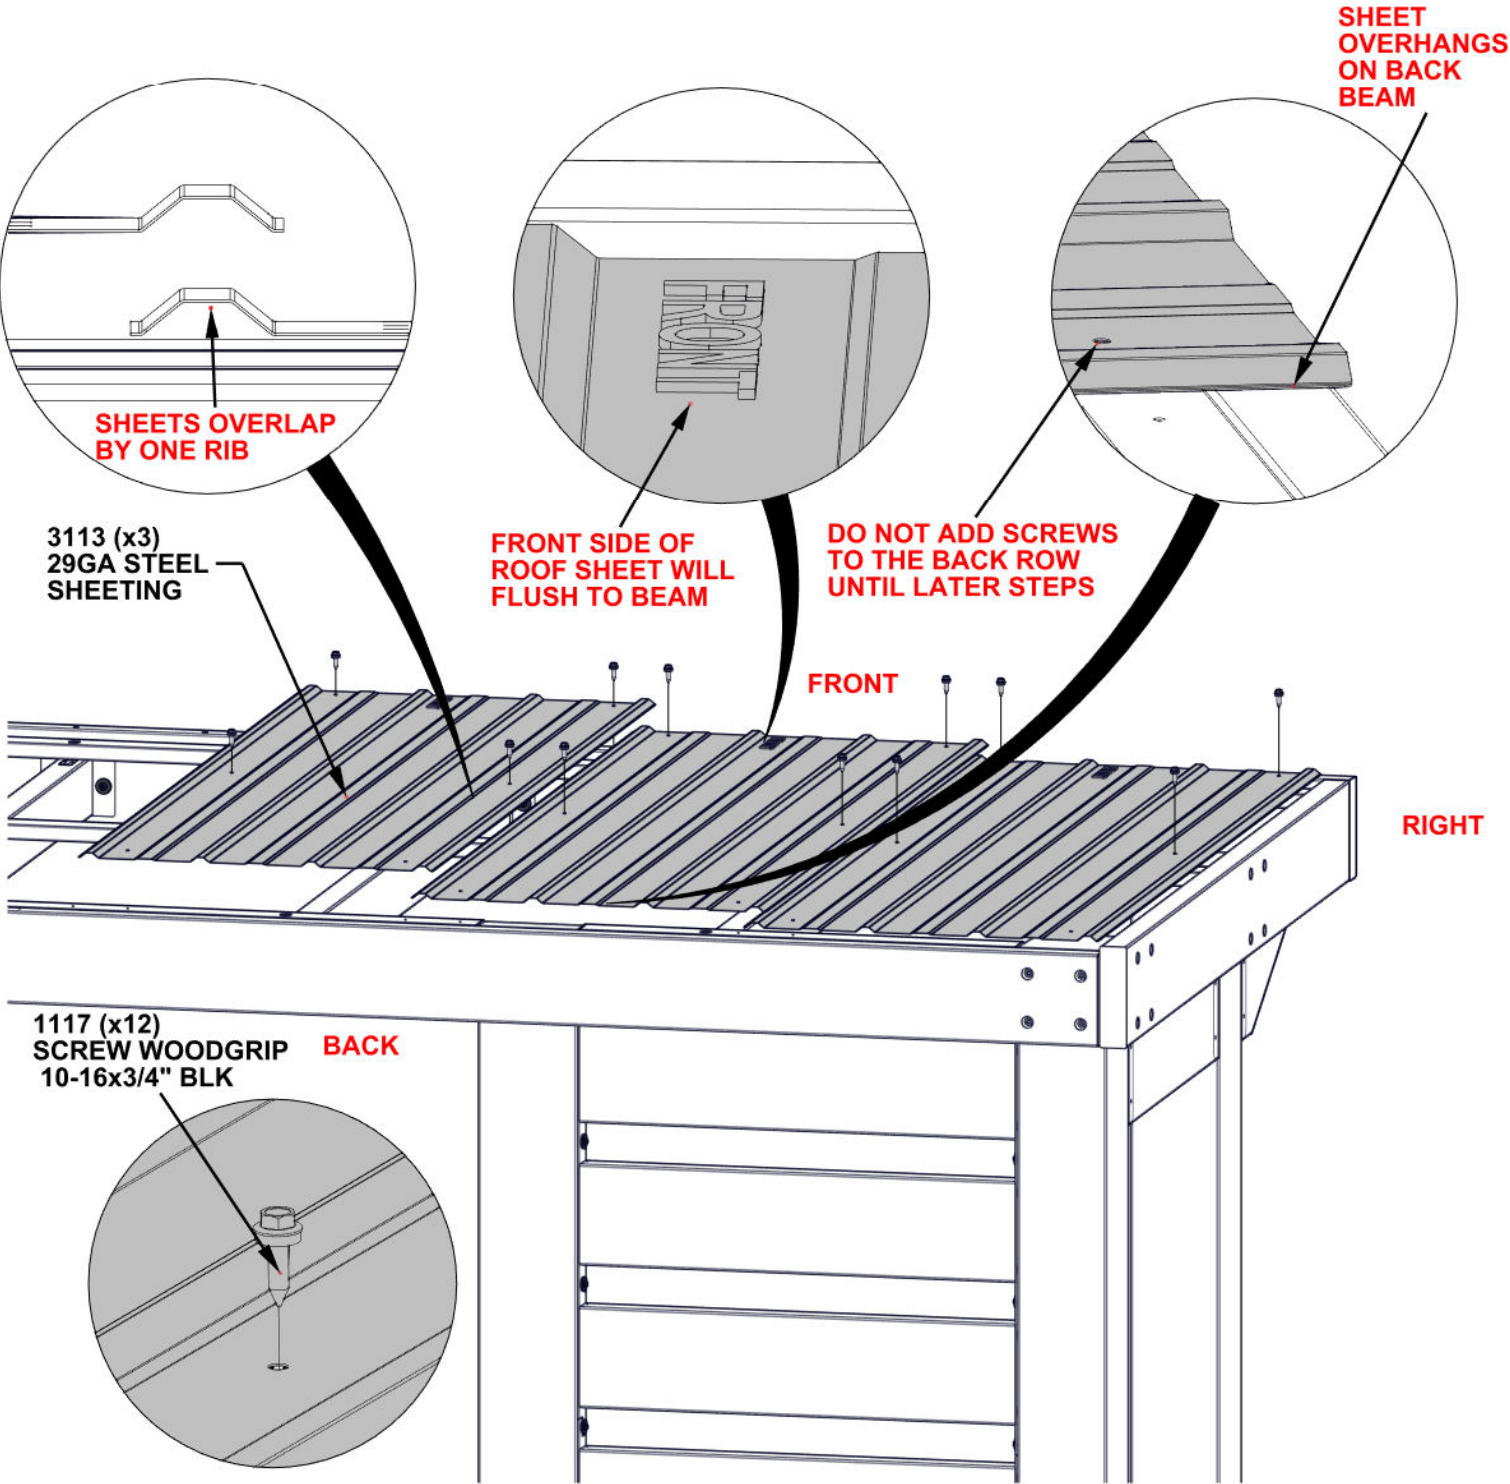


STEP 77- ROOF ASSEMBLY

Qty	PartNo	Description
12	H101117	SCREW WOODGRIP 10-16x3/4" BLK

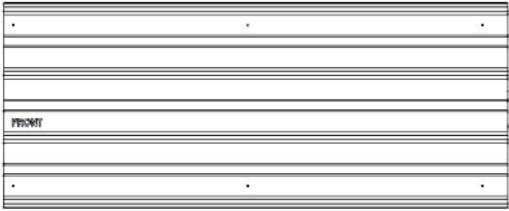

3113 29GA STEEL SHEETING - A4M03113
(x2) 1/4"x18 7/8"x46 7/16" (7x480x1179)

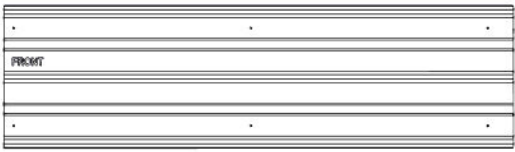

5500 29GA STEEL SHEETING - A4M05500
(x1) 1/4"x13"x46 7/16" (7x330x1179)

- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

FRONT SIDE OF
ROOF SHEET WILL
FLUSH TO BEAM

DO NOT ADD SCREWS
TO THE BACK ROW
UNTIL LATER STEPS

SHEET
OVERHANGS
ON BACK
BEAM

SHEETS OVERLAP
BY ONE RIB

3113 (x2)
29GA STEEL
SHEETING

FRONT


LEFT

BACK

5500 (x1)
29GA STEEL SHEETING

1117 (x12)
SCREW WOODGRIP
10-16x3/4" BLK


STEP 78- ROOF ASSEMBLY

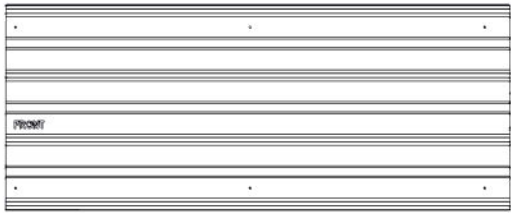

29GA STEEL SHEETING - A4M03113
(x3) 1/4"x18 7/8"x46 7/16" (7x480x1179)

Qty	PartNo	Description
12	H101117	SCREW WOODGRIP 10-16x3/4" BLK

- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

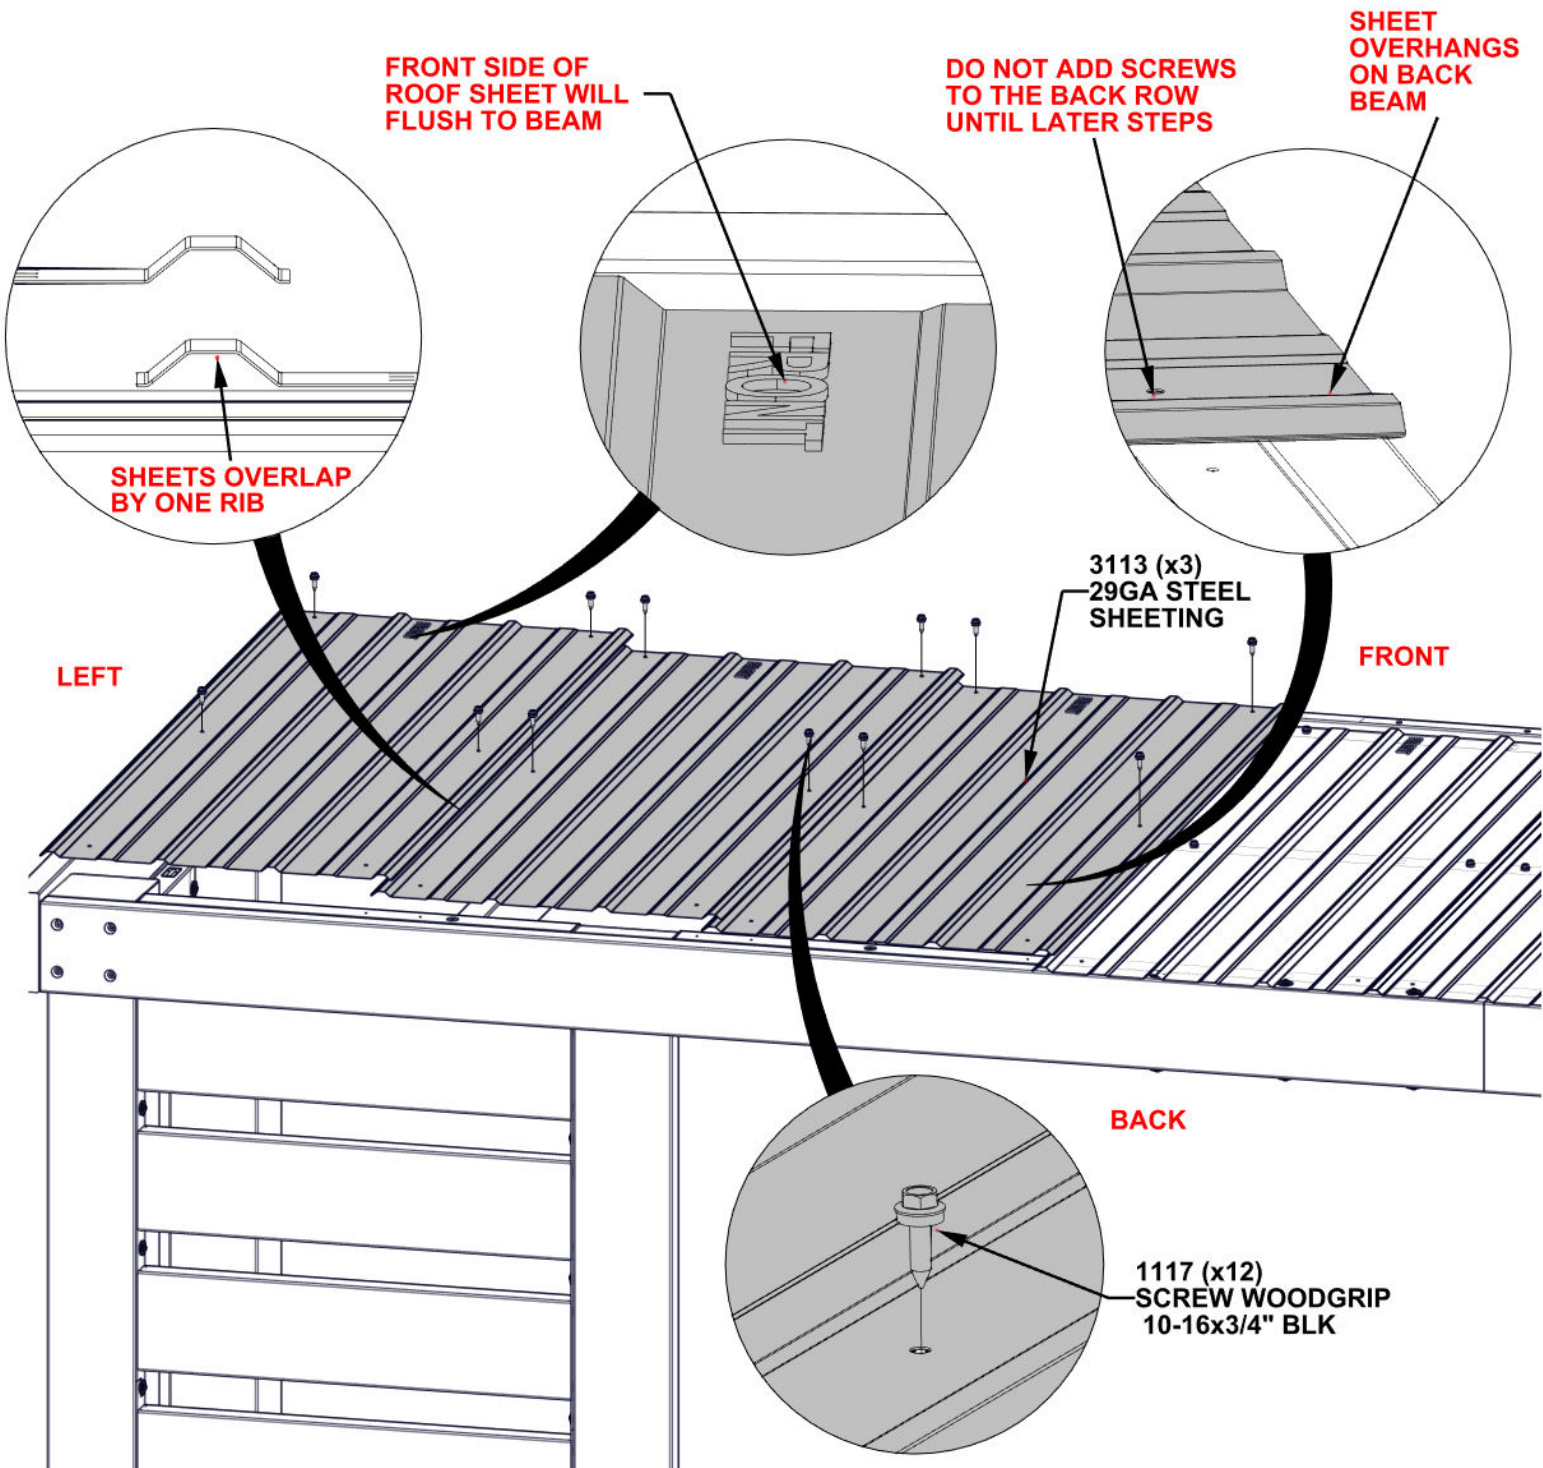

STEP 79- HOLE COVER ASSEMBLY




1352 HOLE COVER - A4M01352
(x8)




H2 WOOD GRAIN HOLE COVER - A4M02078
(x28)


- USE A SMALL PIECE OF WOOD AND RUBBER Mallet TO TAP HOLE COVERS IN.
- DO NOT TAP DIRECTLY WITH A HAMMER AS YOU MAY DAMAGE THE POWDER COAT FINISH ON PRODUCT.

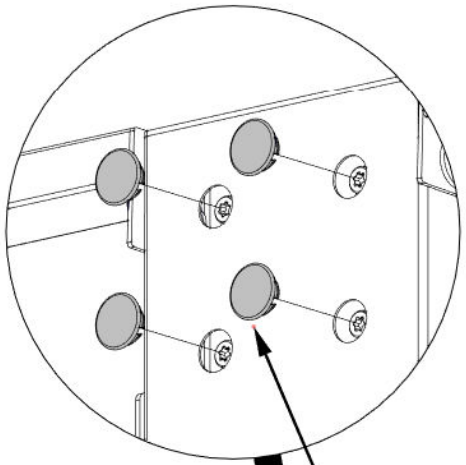


1352 (x8)
HOLE COVER

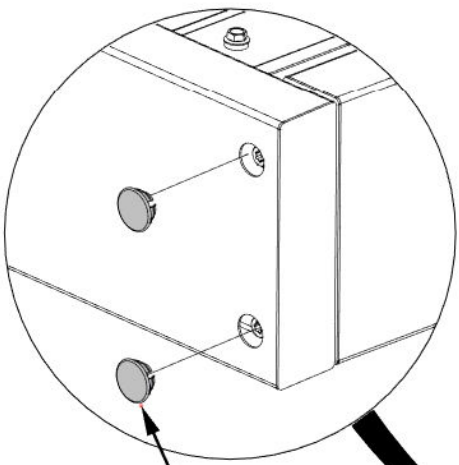


H2 (x4)
WOOD
GRAIN
HOLE
COVER

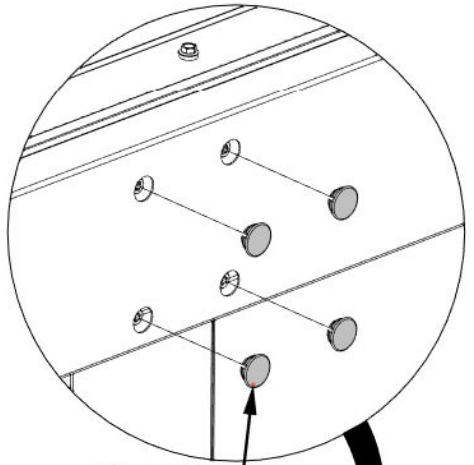

H2 (x24)
WOOD
GRAIN
HOLE
COVER

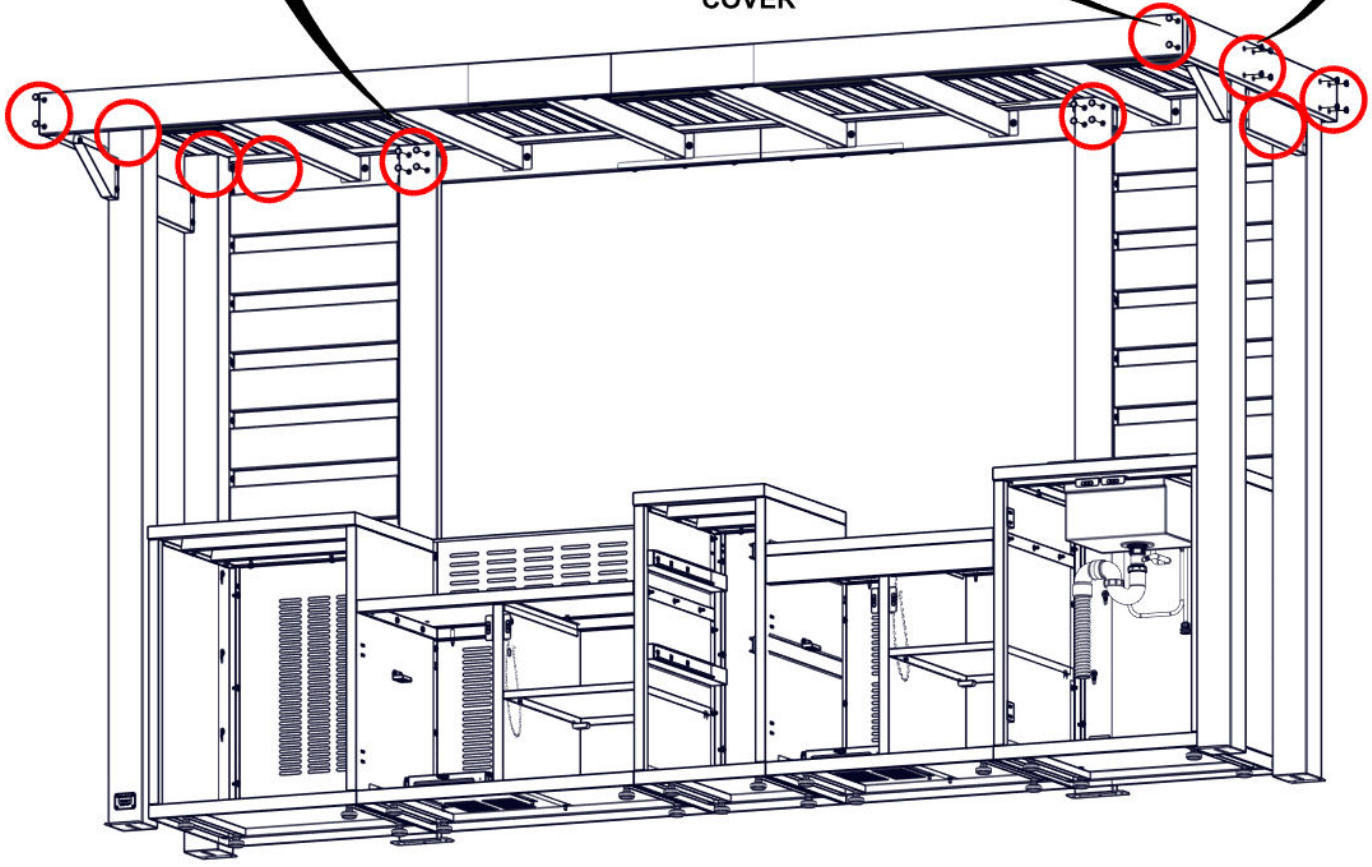

STEP 80A- ROOF ASSEMBLY

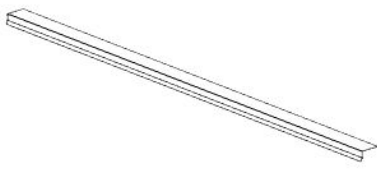


5504 DRIP EDGE - A4M05504
(x2) 1 1/2"x3 5/16"x76 11/16" (0.5x84x1948)



3118 DRIP EDGE SPLICE - A4M03118
(x1) 1 11/16"x3 7/16"x3 15/16" (0.5x88x100)


- REMOVE PROTECTIVE FILM.
- WITH ONE EXTRA PERSON, ORIENT 5504, 3118 UNDER THE SHEETS AS BELOW SHOWN.

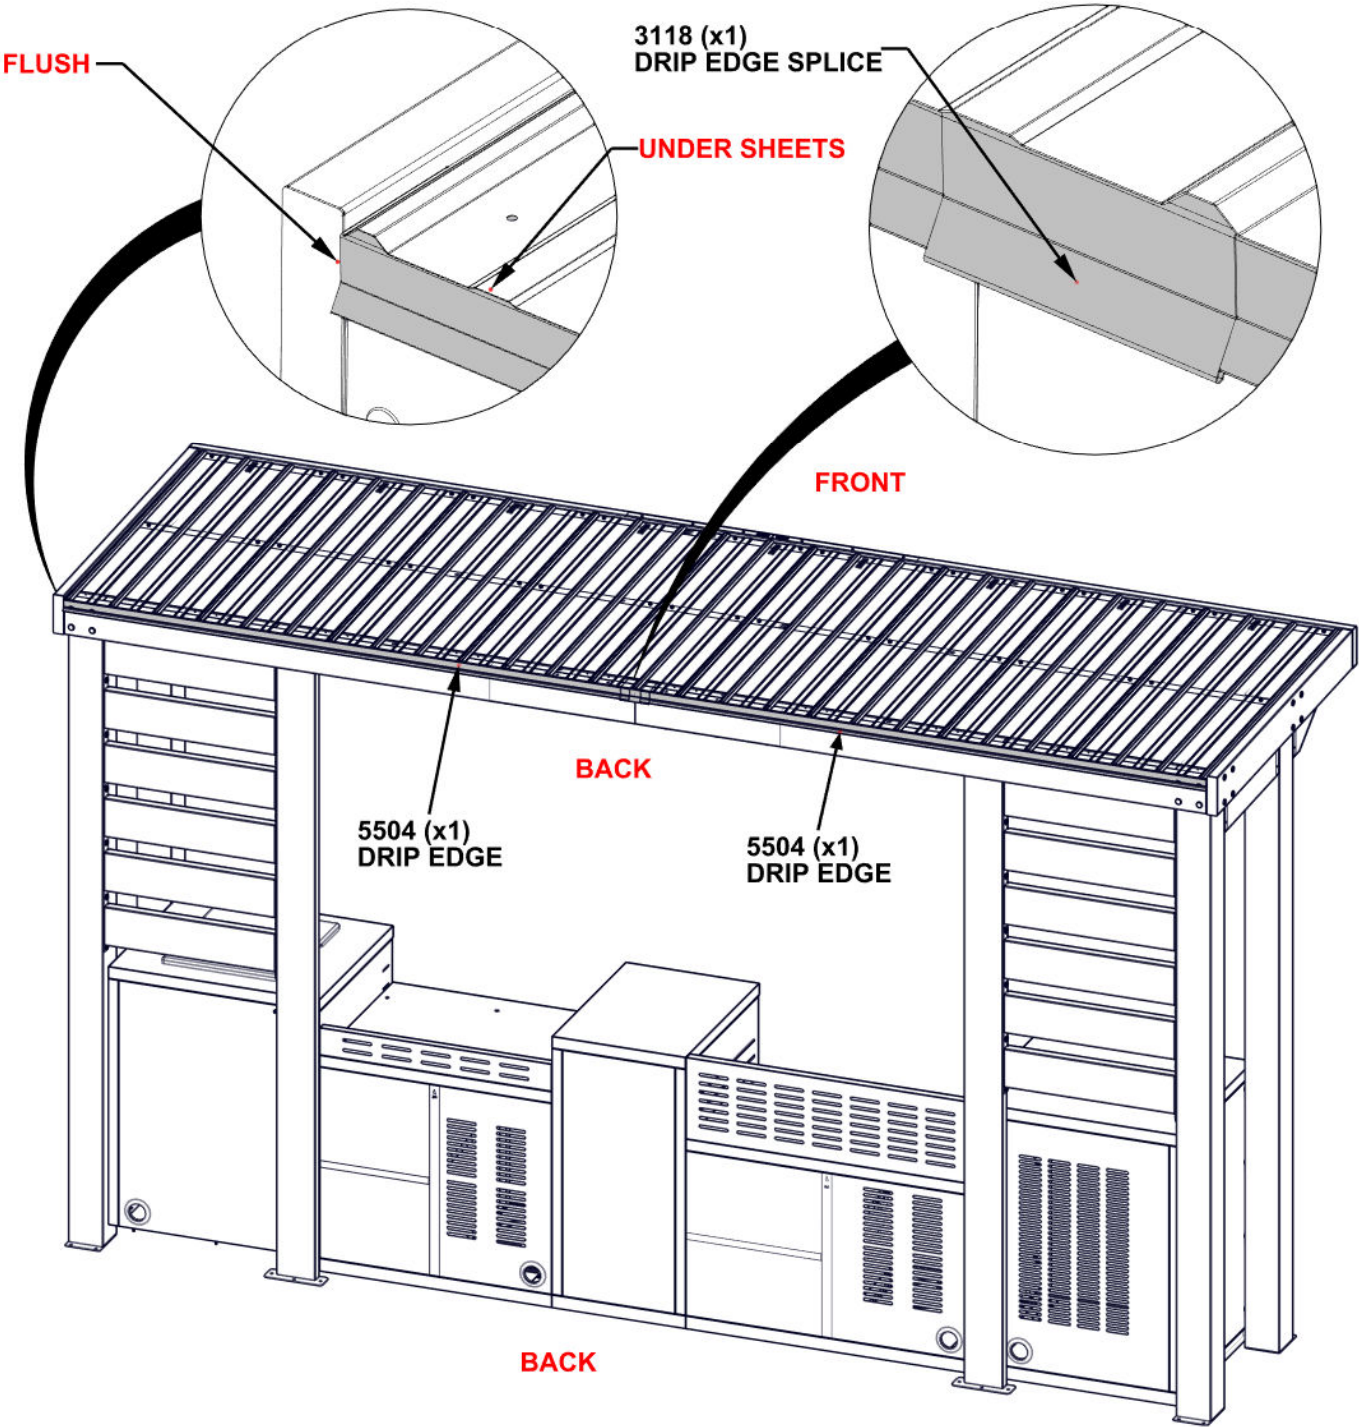


STEP 80B- ROOF ASSEMBLY

Qty	PartNo	Description
18	H101117	SCREW WOODGRIP 10-16x3/4" BLK

- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

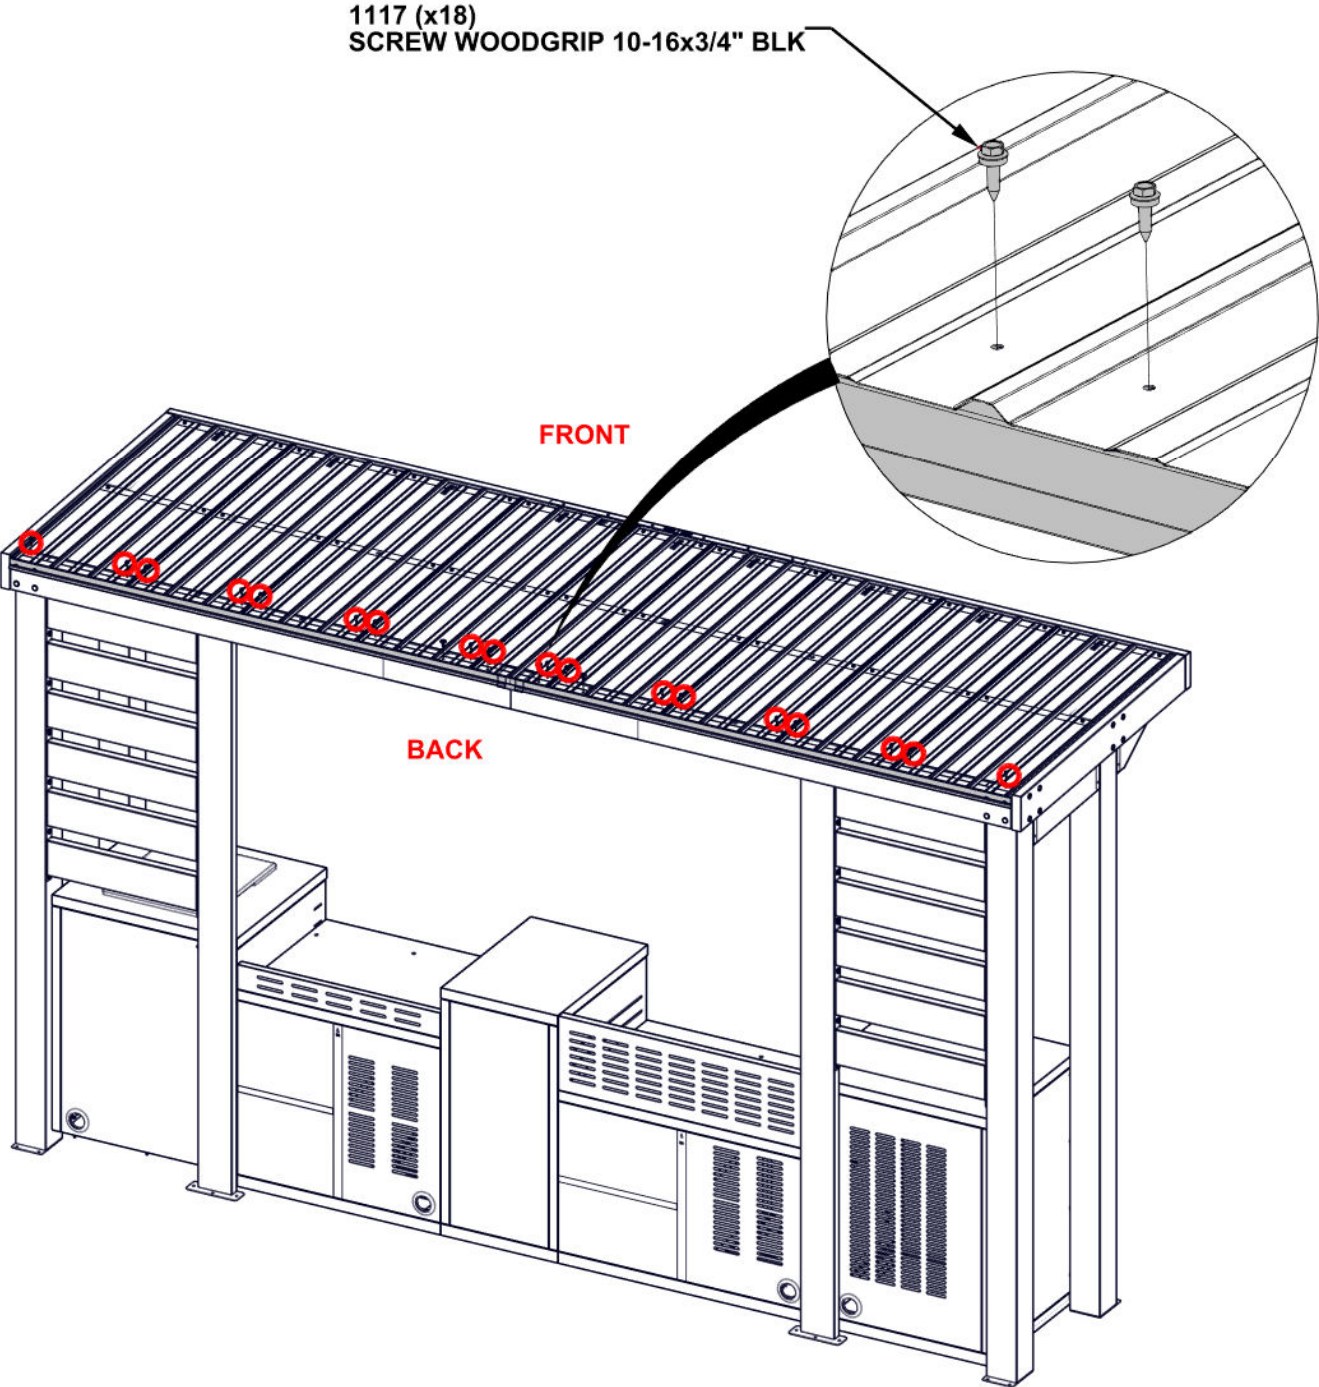


STEP 81- ROOF ASSEMBLY

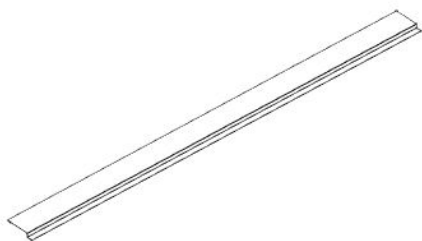

3114 DRIP EDGE - A4M03114
(x2) 7/16"x3 1/8"x46 1/4" (11x79x1175)

Qty	PartNo	Description
6	H101116	SCREW SELF TAPPING 1/4x1 BLK

- REMOVE PROTECTIVE FILM.
- DUE TO MULTIPLE LAYERS OF METAL ON THE DRIP EDGE, IT IS RECOMMENDED THAT A 1/8" (3mm) DRILL BIT BE USED TO CREATE STARTER HOLES.
- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

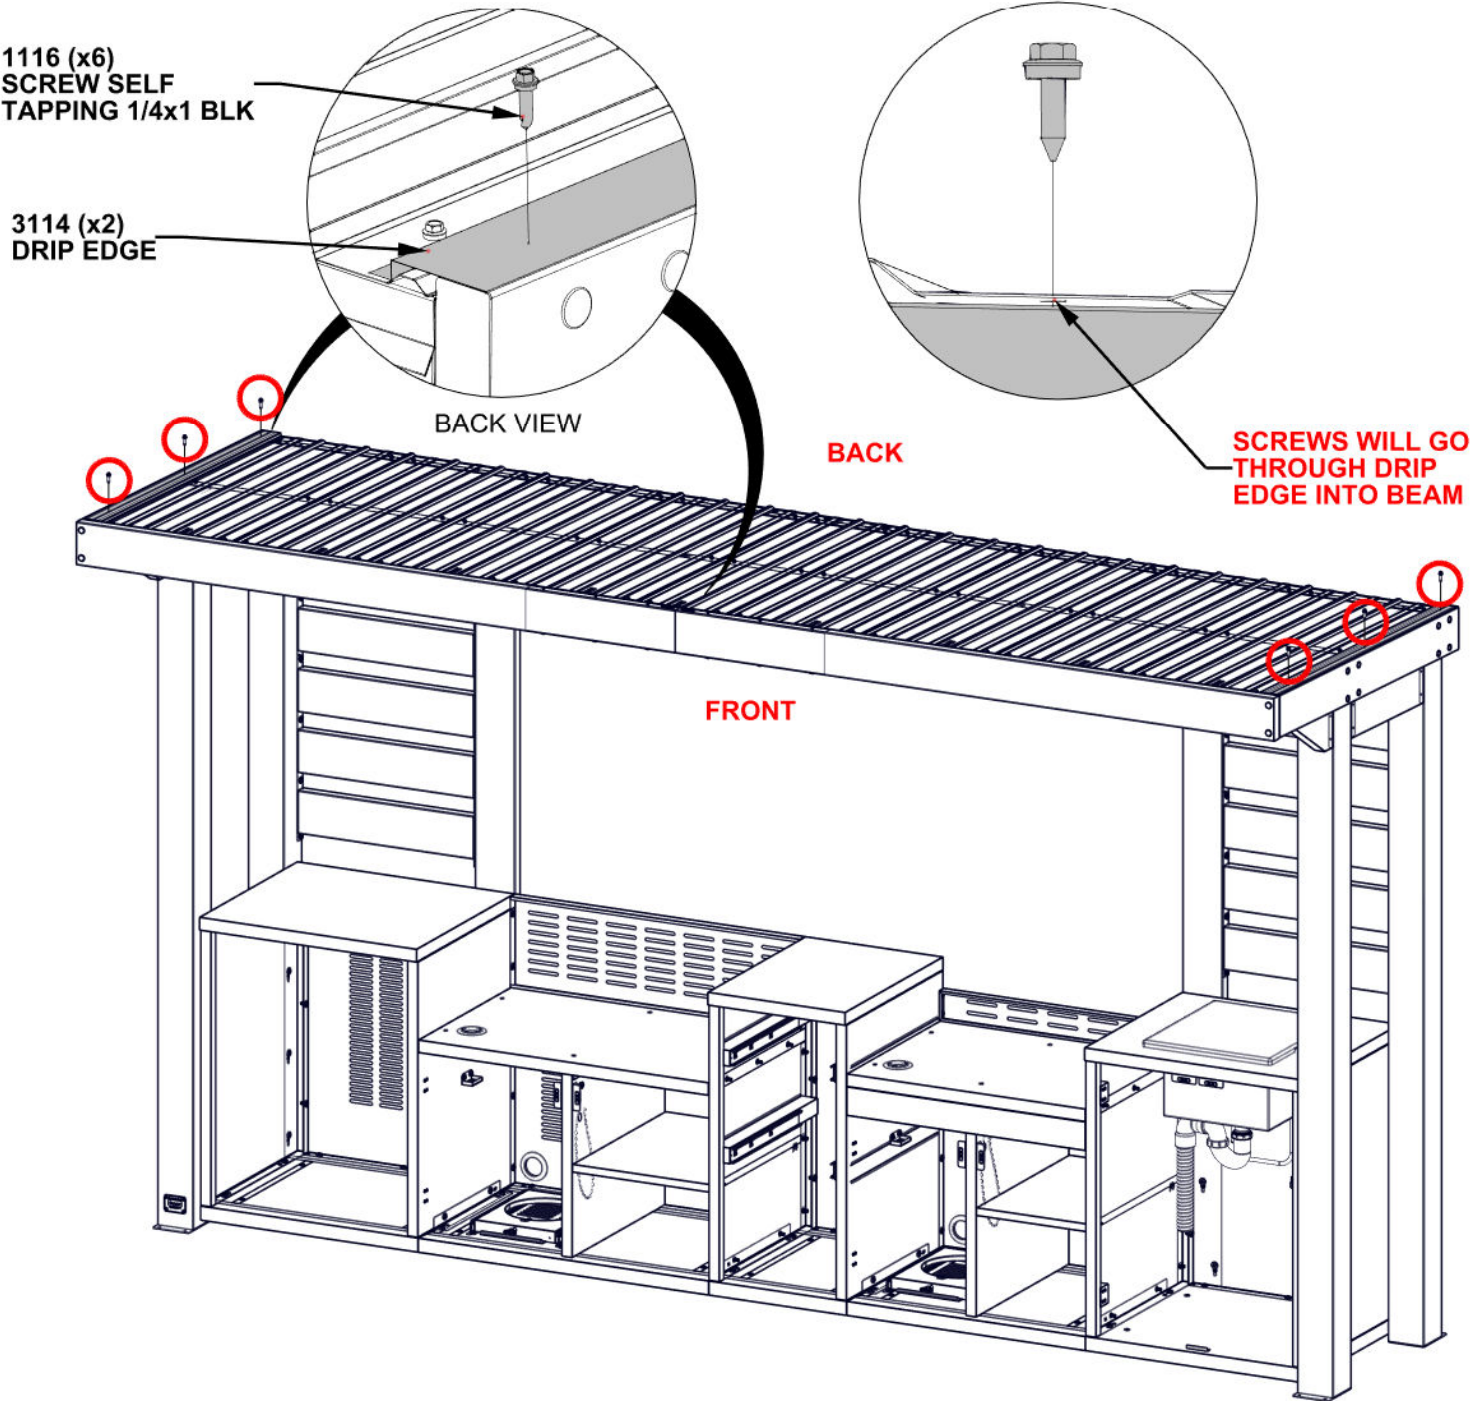

STEP 82A - ROOF ASSEMBLY




5505 DRIP EDGE - A4M05505
(x1) 3/16"x3 7/16"x78 1/4" (6x88x1987)

3122 DRIP EDGE SPLICE - A4M03122
(x1) 3/16"x3 1/2"x3 15/16" (6x90x100)

5506 DRIP EDGE - A4M05506
(x1) 3/16"x3 7/16"x78 1/4" (6x88x1987)


- REMOVE PROTECTIVE FILM.
- WITH ONE EXTRA PERSON, ORIENT 3122, 5505 AND 5506 AS BELOW SHOWN.

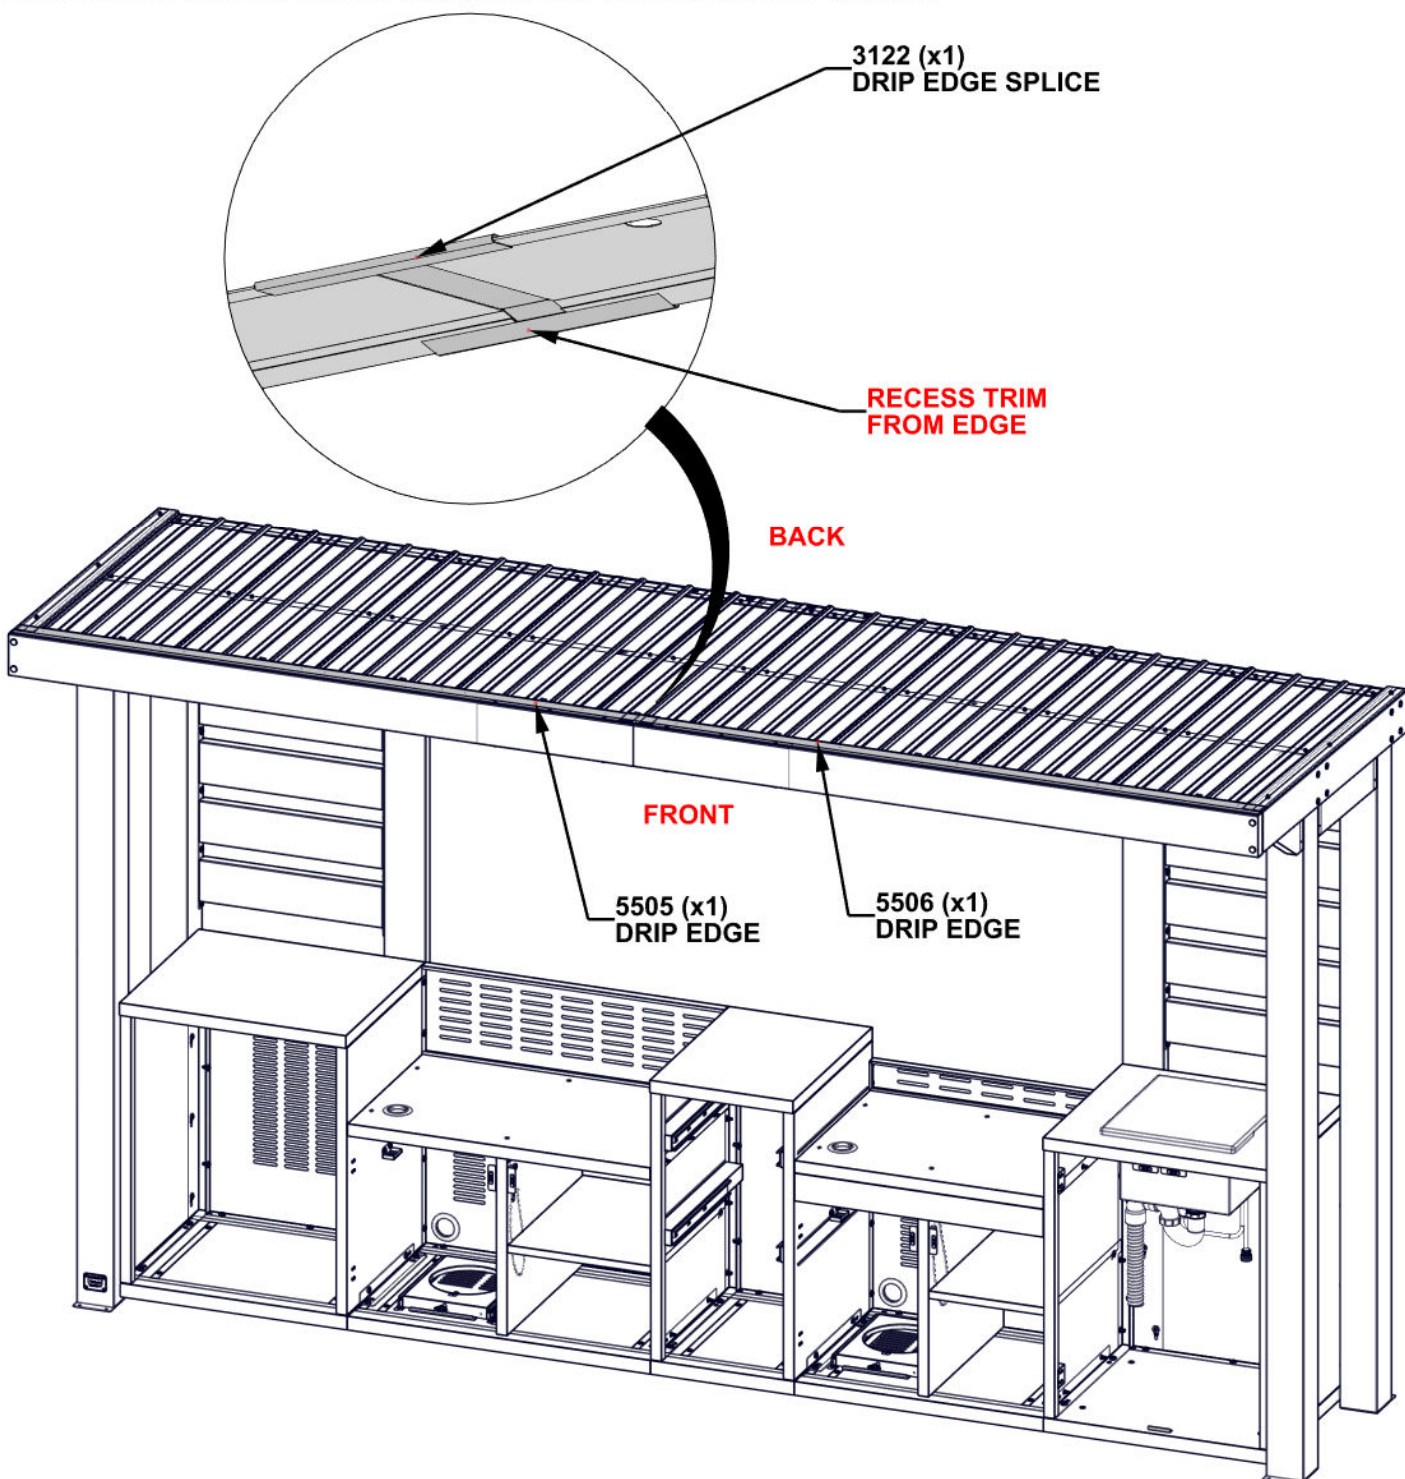

STEP 82B- ROOF ASSEMBLY


Qty	PartNo	Description
10	H101116	SCREW SELF TAPPING 1/4x1 BLK
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- ATTACH SCREWS TO DRIP TRIM AND TIGHTEN ALL HARDWARE.
- DUE TO MULTIPLE LAYERS OF METAL ON THE TRIM SPLICE, IT IS RECOMMENDED THAT A 1/8" (3mm) DRILL BIT BE USED TO CREATE STARTER HOLES.
- WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

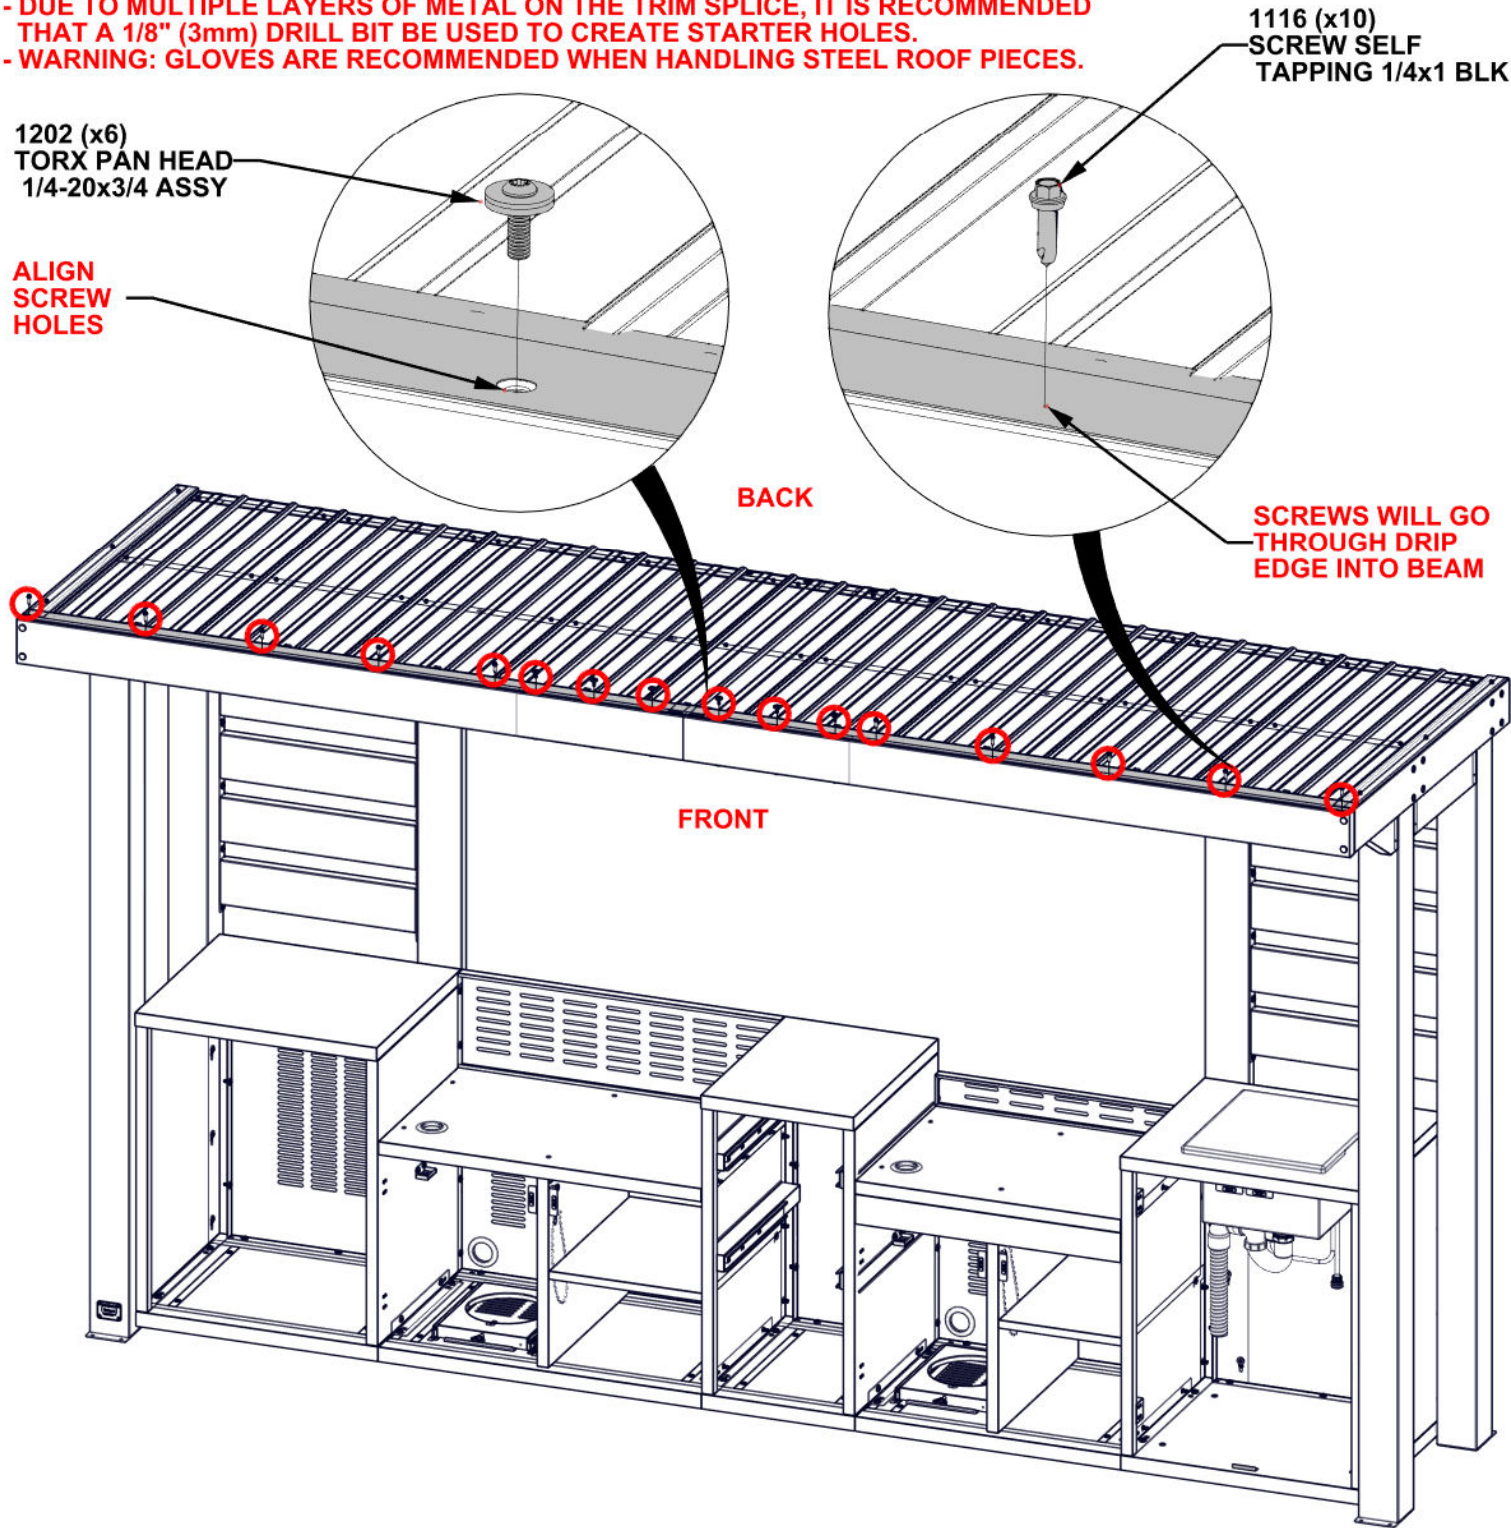

STEP 83A- TRASH CAN INSTALLATION

Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS

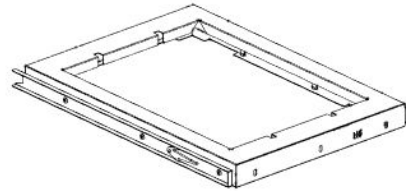


H3 TRASH CAN BRACKET ASSEMBLY - A4M05490
(x1) 18"x13 5/16"x1 3/8" (35x337x458)



A11 TRIANGLE PANEL - A4M03086
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)

- IT IS RECOMMENDED TO USE THE 6" MAGNETIC DRIVER EXTENSION PROVIDED IN YOUR HARDWARE KIT FOR THIS STEP.

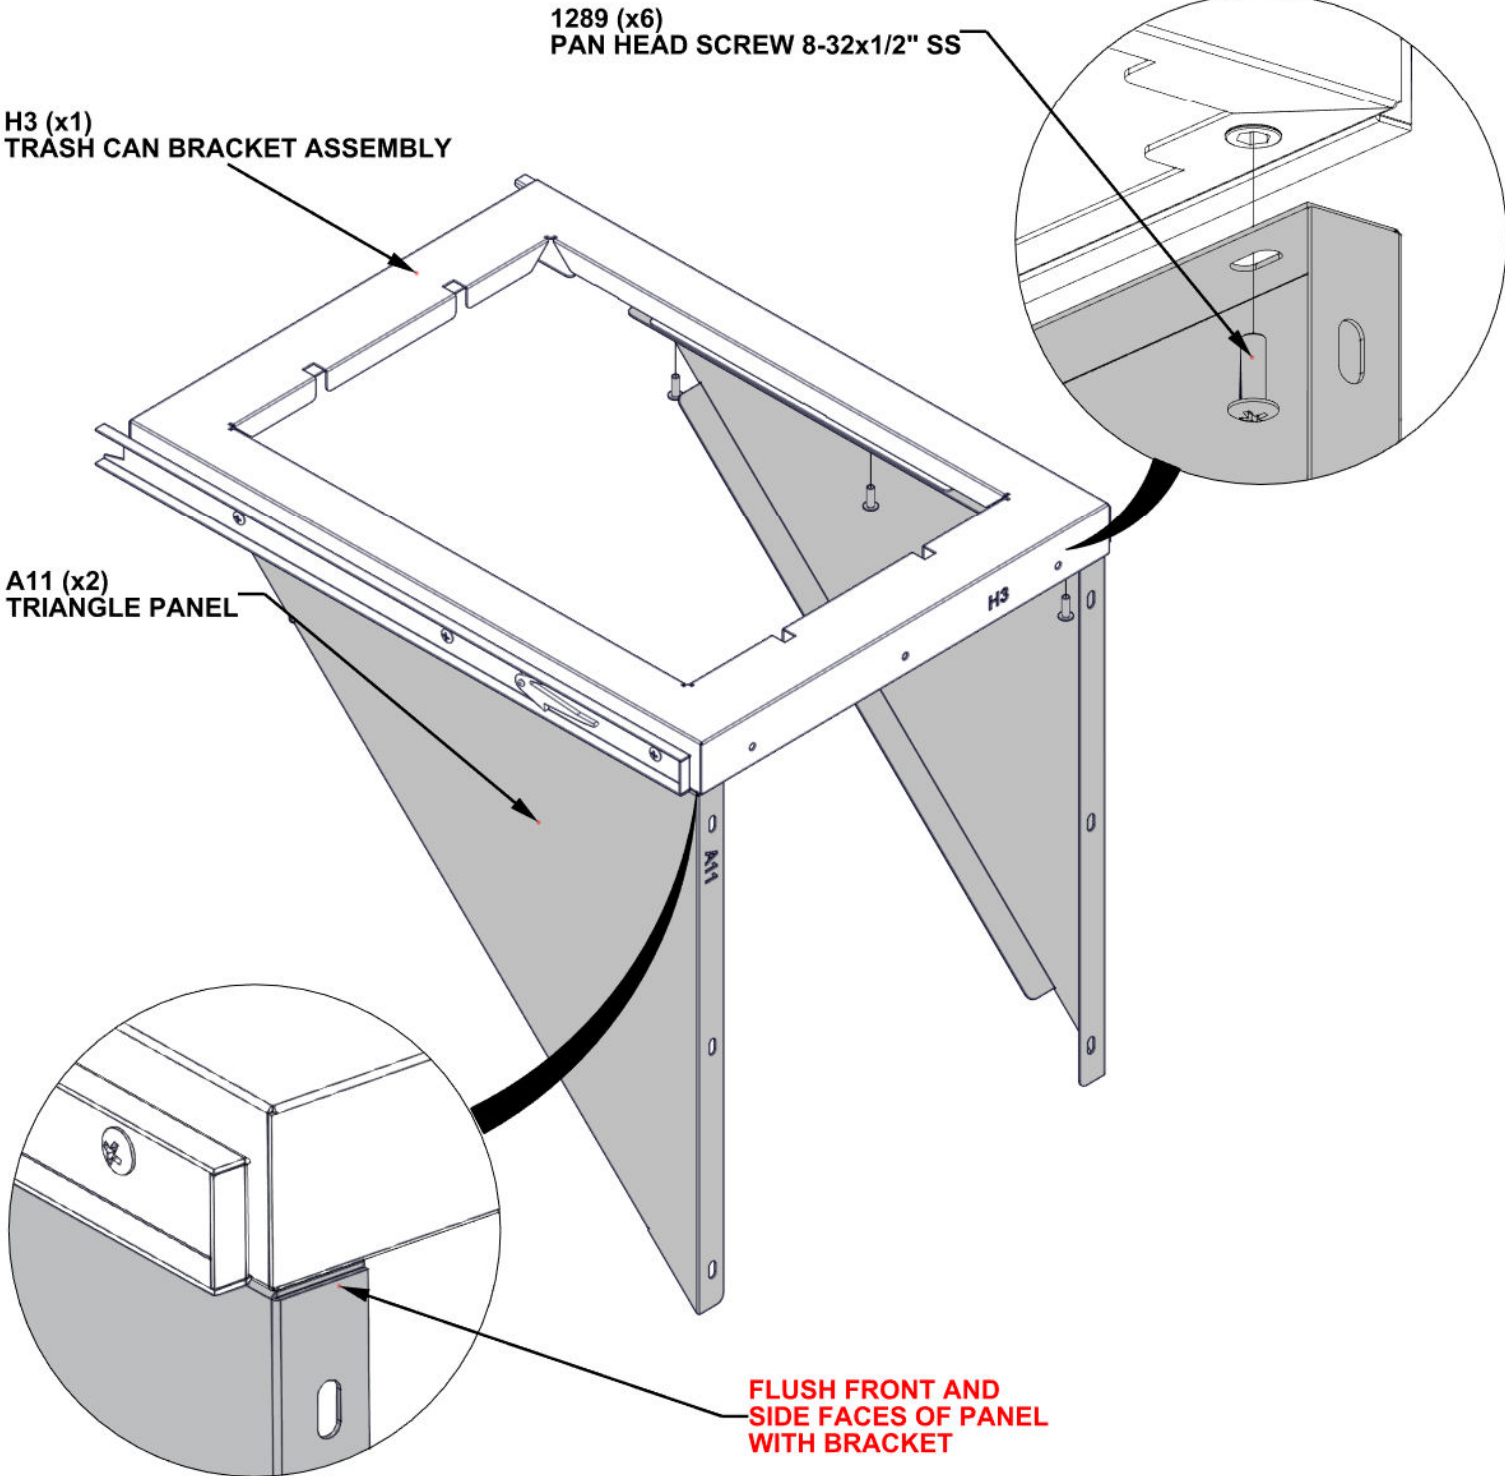

STEP 83B - TRASH CAN INSTALLATION




Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS

D3 DRAWER PANEL ASSEMBLY - A4M05464
(x1) 22 7/16"x15 1/8"x7/8" (22x384x570)


- IT IS RECOMMENDED TO USE THE 6" MAGNETIC DRIVER EXTENSION PROVIDED IN YOUR HARDWARE KIT FOR THIS STEP.

D3 (x1)
DRAWER PANEL ASSEMBLY

1289 (x9)
PAN HEAD SCREW
8-32x1/2" SS


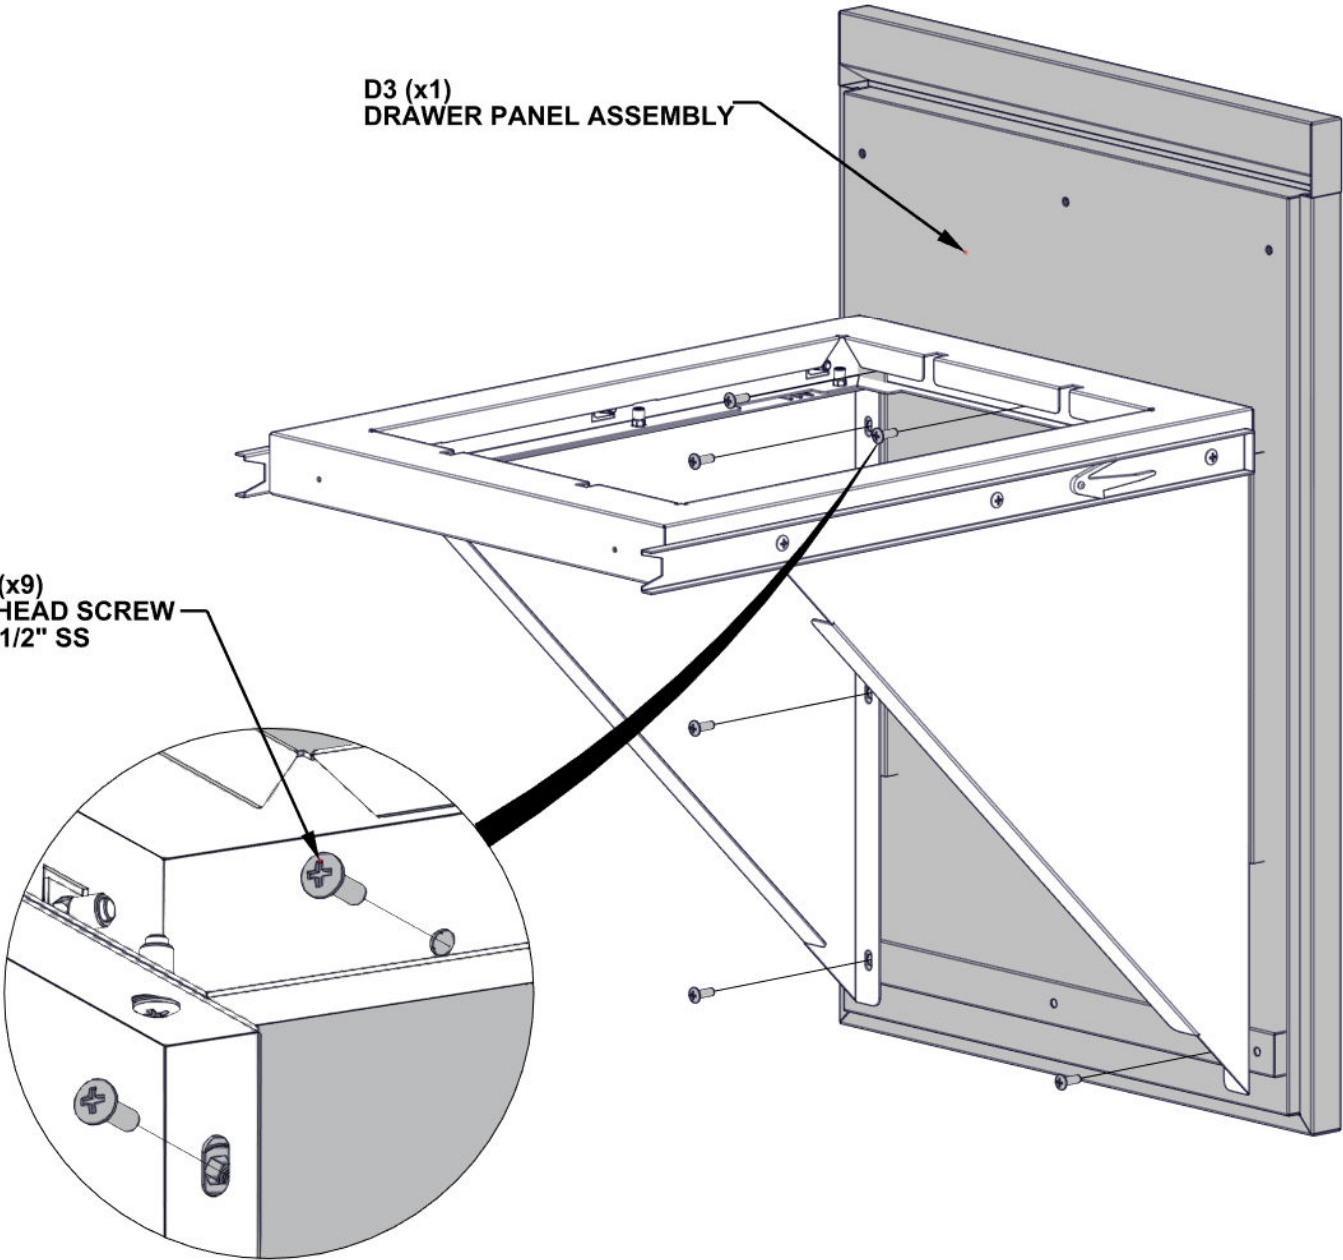


STEP 84- TRASH CAN INSTALLATION

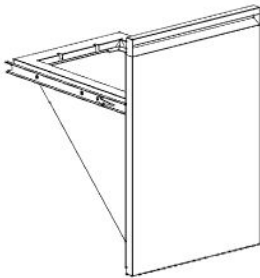


TRASH CAN ASSEMBLY STEPS FROM 83A-83B

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH TRASH CAN ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

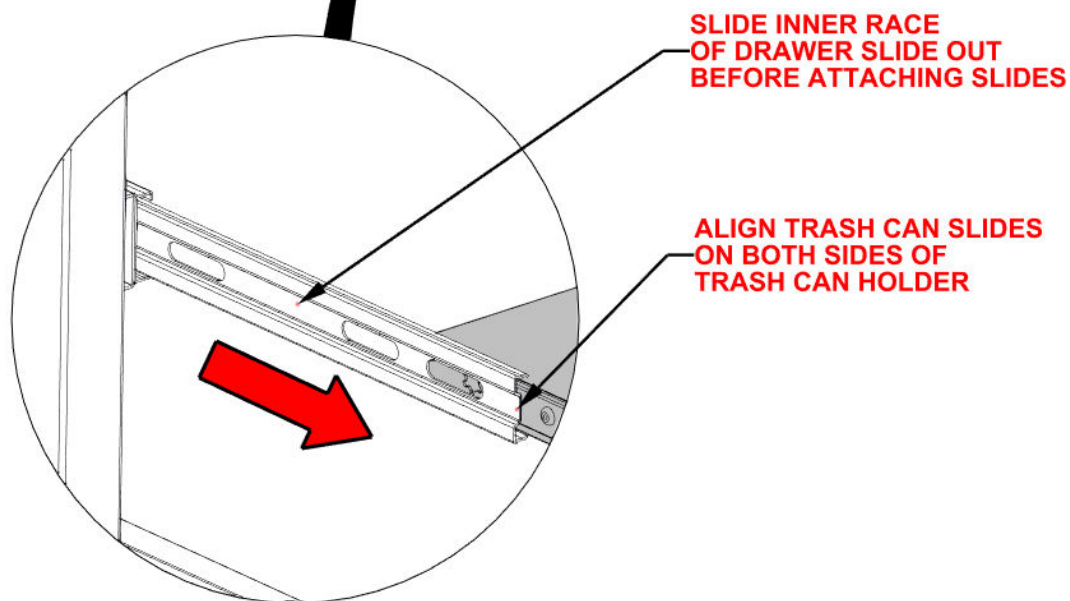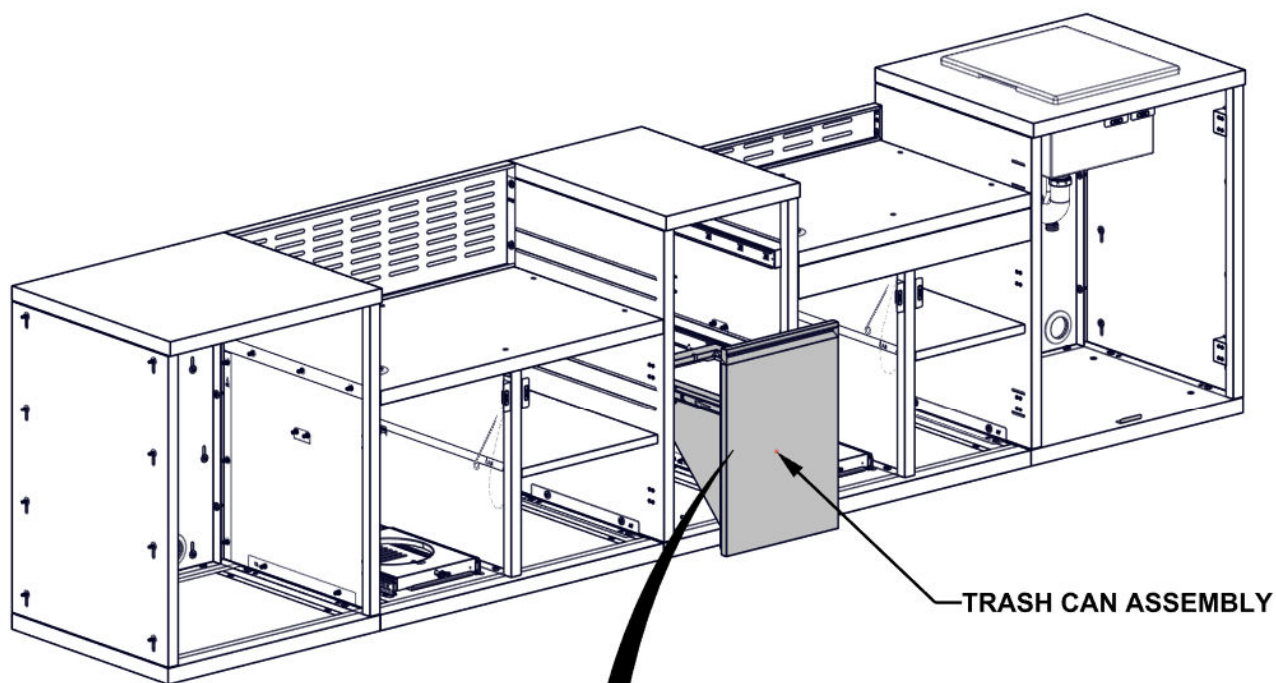


STEP 85- DRAWER ASSEMBLY

Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS

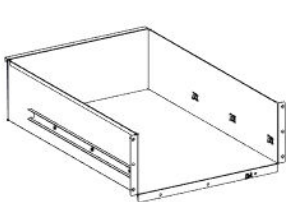


D7 DRAWER BODY ASSEMBLY - A4M05489
(x1) 22 9/16"x13 1/4"x7 1/8" (181x337x573)

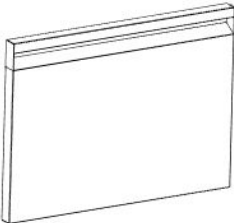


D4 DRAWER PANEL ASSEMBLY - A4M05465
(x1) 15 1/8"x10 15/16"x7/8" (22x278x384)

- ALIGN THROUGH HOLES IN DRAER BODY WITH THREADED INSERTS IN DRAWER PANEL.

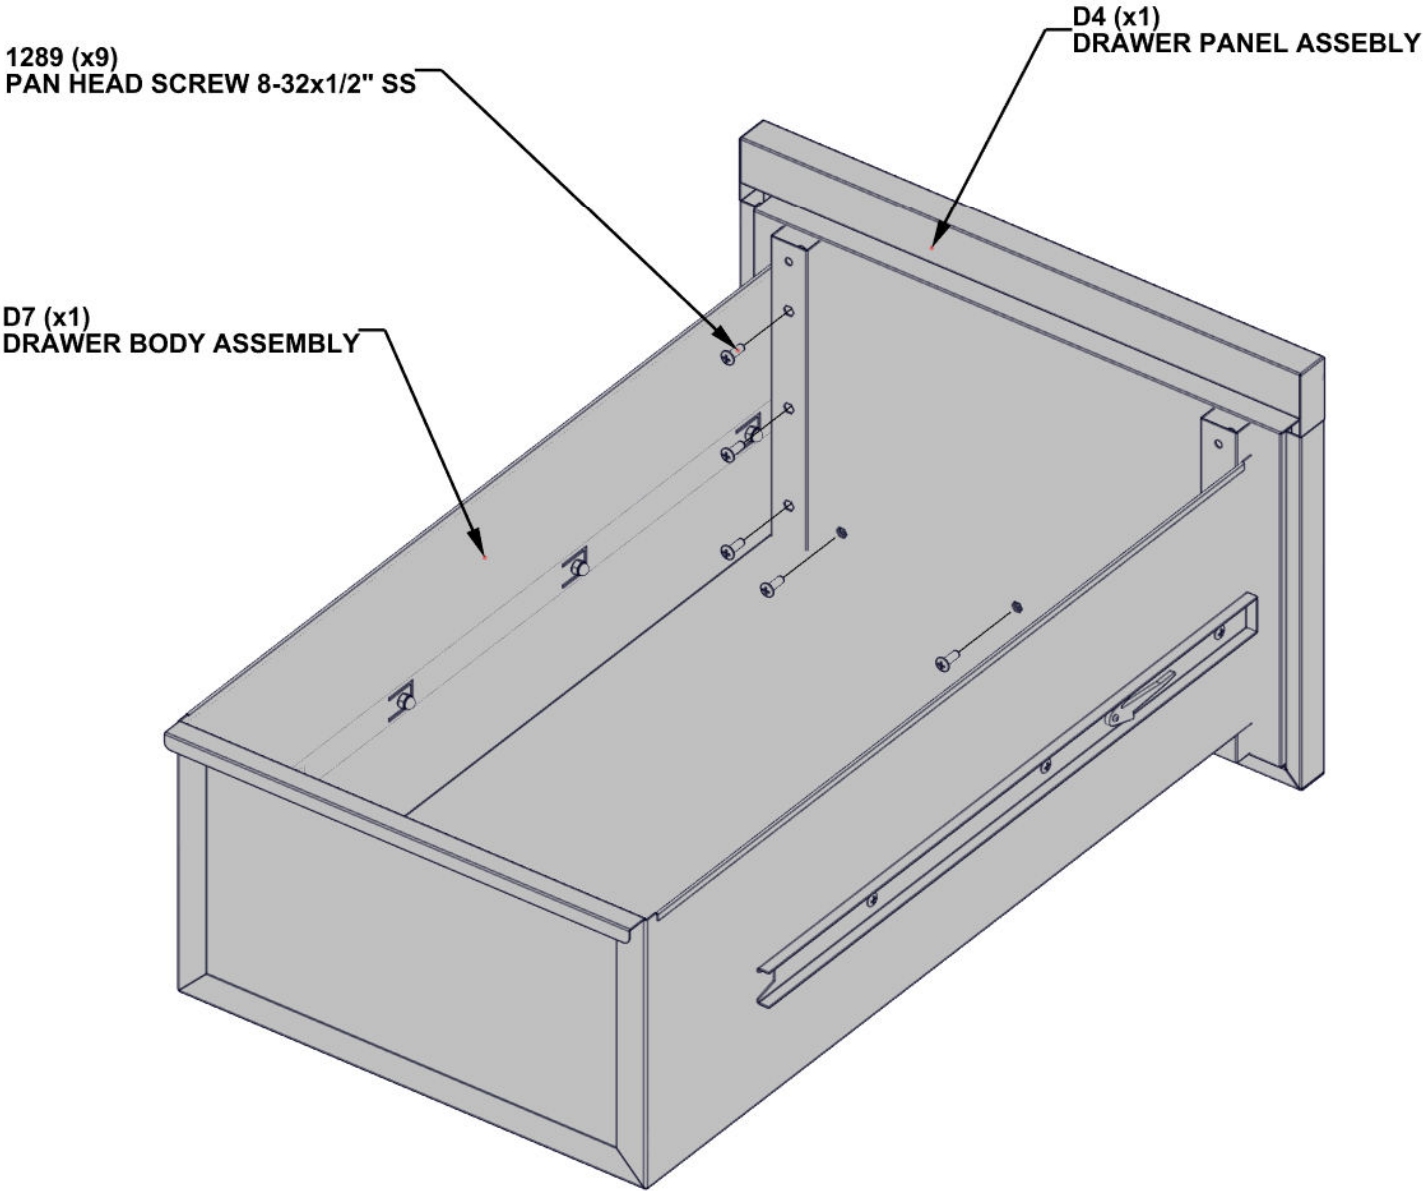


STEP 86- DRAWER ASSEMBLY

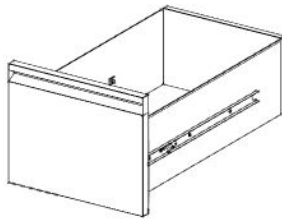


DRAWER ASSEMBLY FROM STEP 85

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH DRAWER ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

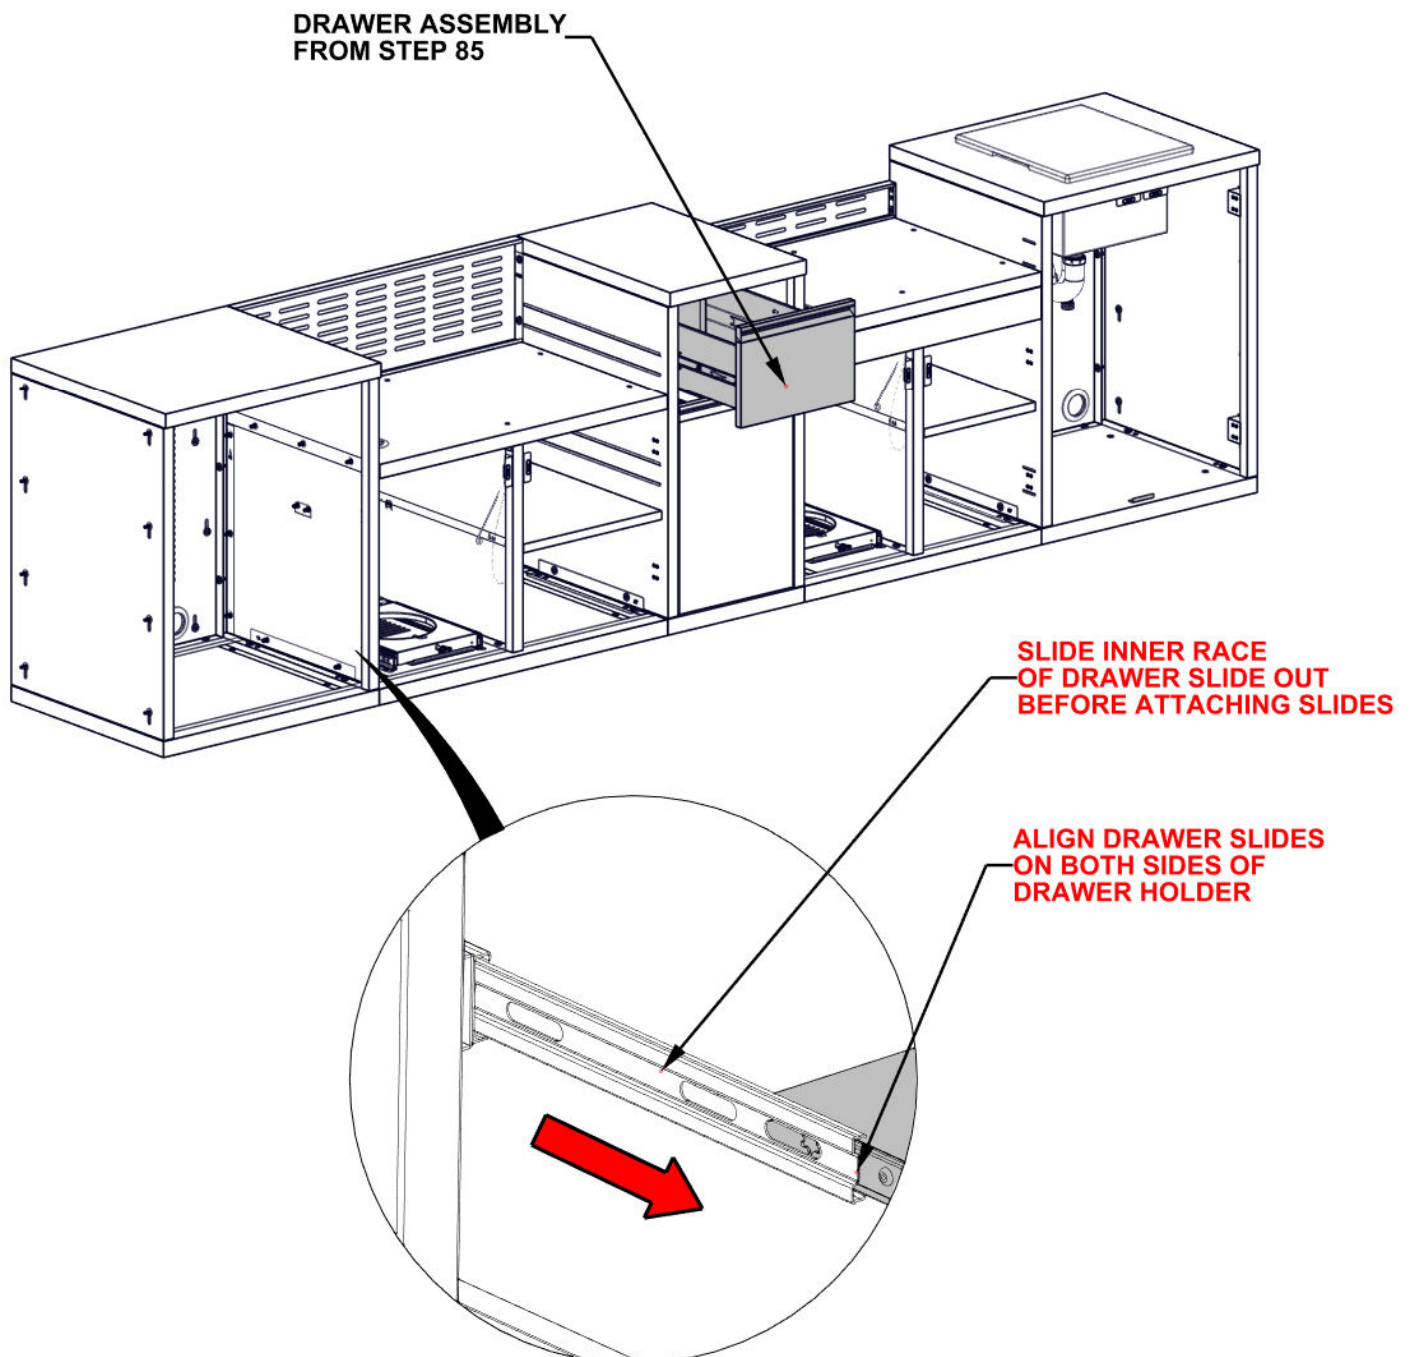

STEP 87- DOOR ASSEMBLY

Qty	PartNo	Description
24	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

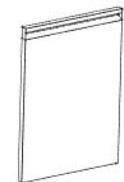

D1 DOOR ASSEMBLY - A4M05487
(x1) 22 3/8"x18 7/8"x7/8" (22x480x568)



D2 DOOR ASSEMBLY - A4M05488
(x1) 22 3/8"x18 7/8"x7/8" (22x480x568)



D5 DOOR ASSEMBLY - A4M05472
(x1) 22 3/8"x15 1/2"x7/8" (22x393.5x569)




D6 DOOR ASSEMBLY - A4M05471
(x1) 22 3/8"x15 1/2"x7/8" (22x393.5x569)



D8 DOOR ASSEMBLY - A4M05480
(x1) 33 1/2"x12 11/16"x7/8" (22x324.1x851)




D9 DOOR ASSEMBLY - A4M05481
(x1) 33 1/2"x12 11/16"x7/8" (22x322x851)




A4M05760 HINGE ASSEMBLY
(x12)

- INSTALL CABINET HINGES TO ALL DOORS.
- DO NOT OVERTIGHTEN HARDWARE.
- REPEAT FOR ALL DOOR ASSEMBLIES IN THIS STEP.

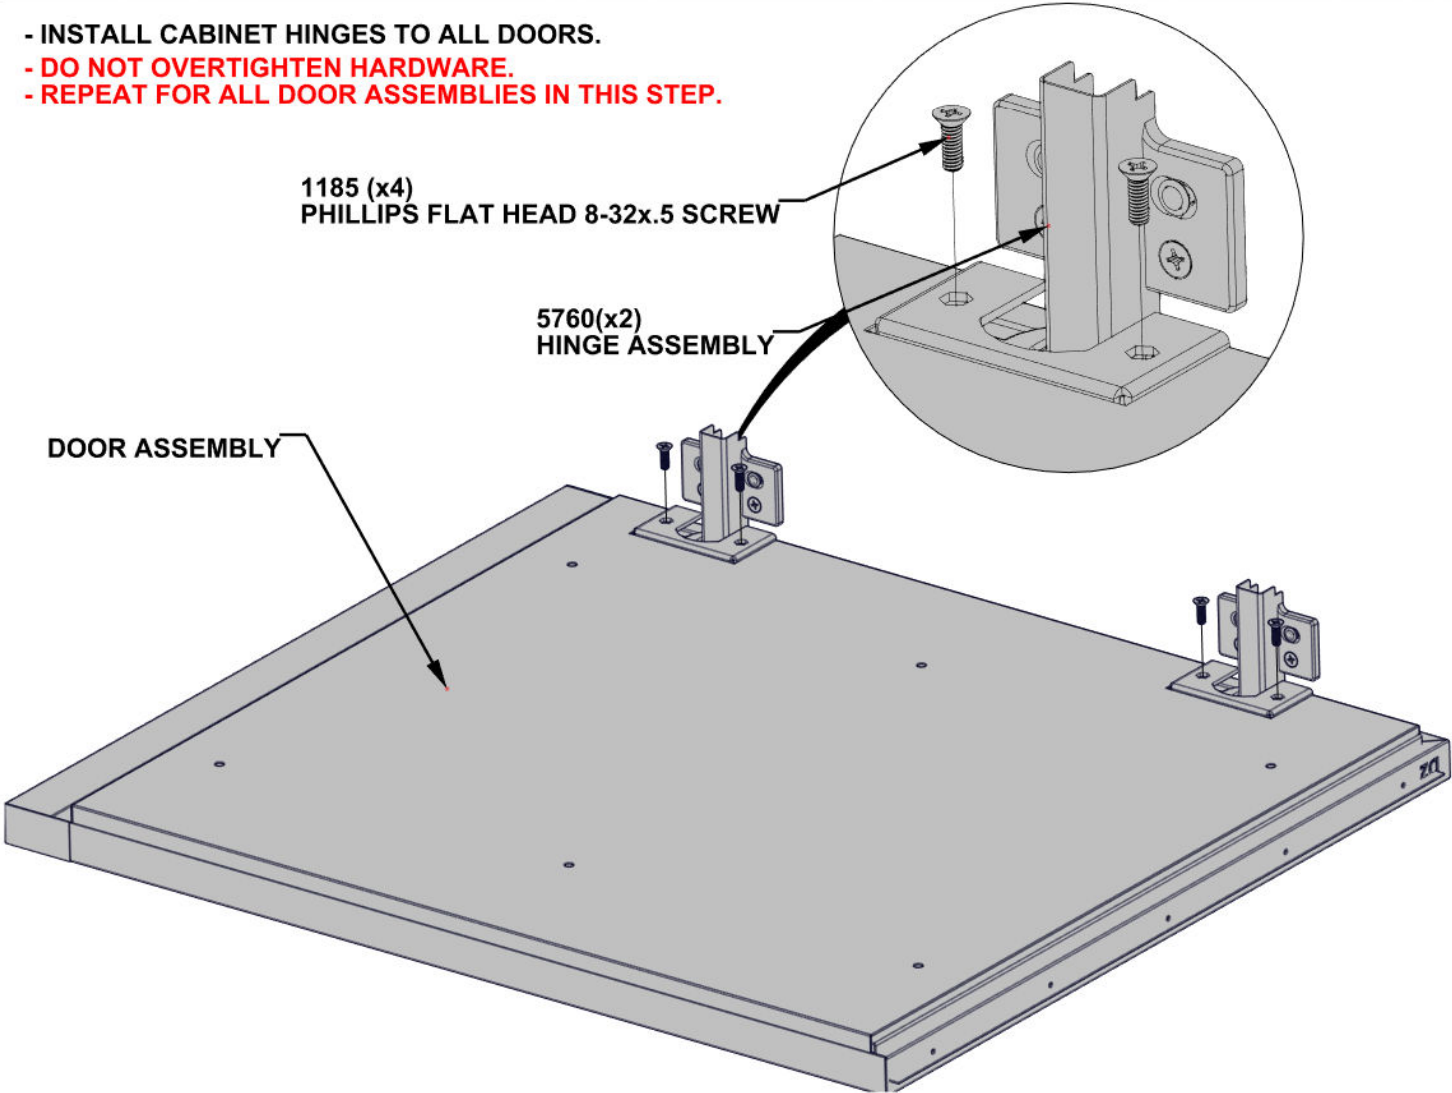


STEP 88- CABINET DOOR ATTACHMENT

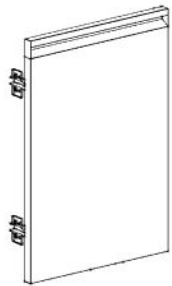


Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D2 DOOR ASSEMBLY - A4M05488
(x1) 22 3/8"x18 7/8"x7/8" (22x480x568)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

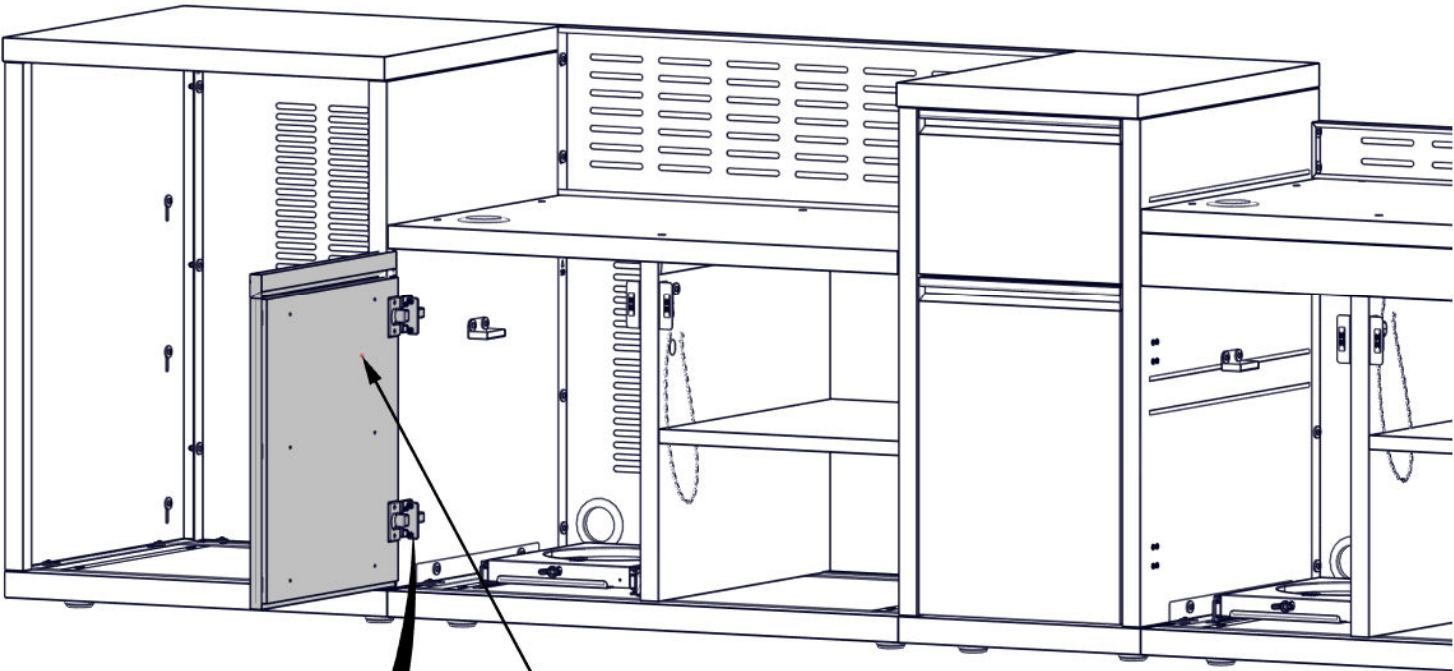


D2 (x1)
DOOR ASSEMBLY

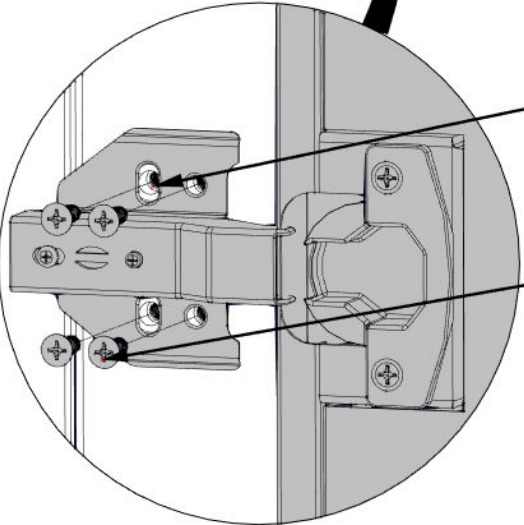

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

1185 (x8)
PHILLIPS FLAT HEAD 8-32x.5 SCREW
DO NOT OVERTIGHTEN HARDWARE



STEP 89- CABINET DOOR ATTACHMENT

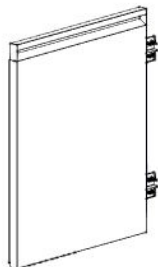

D1 DOOR ASSEMBLY - A4M05487
(x1) 22 3/8"x18 7/8"x7/8" (22x480x568)

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

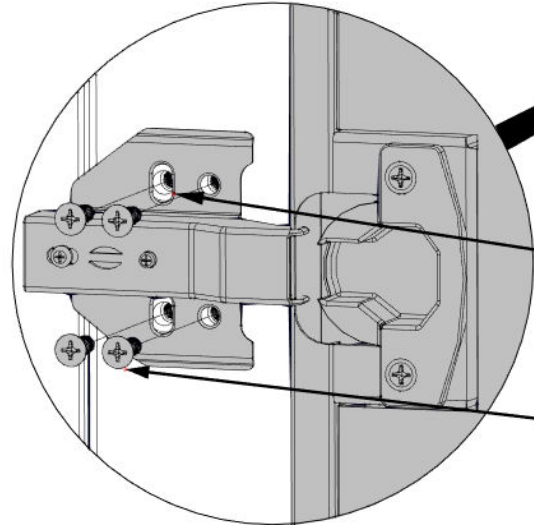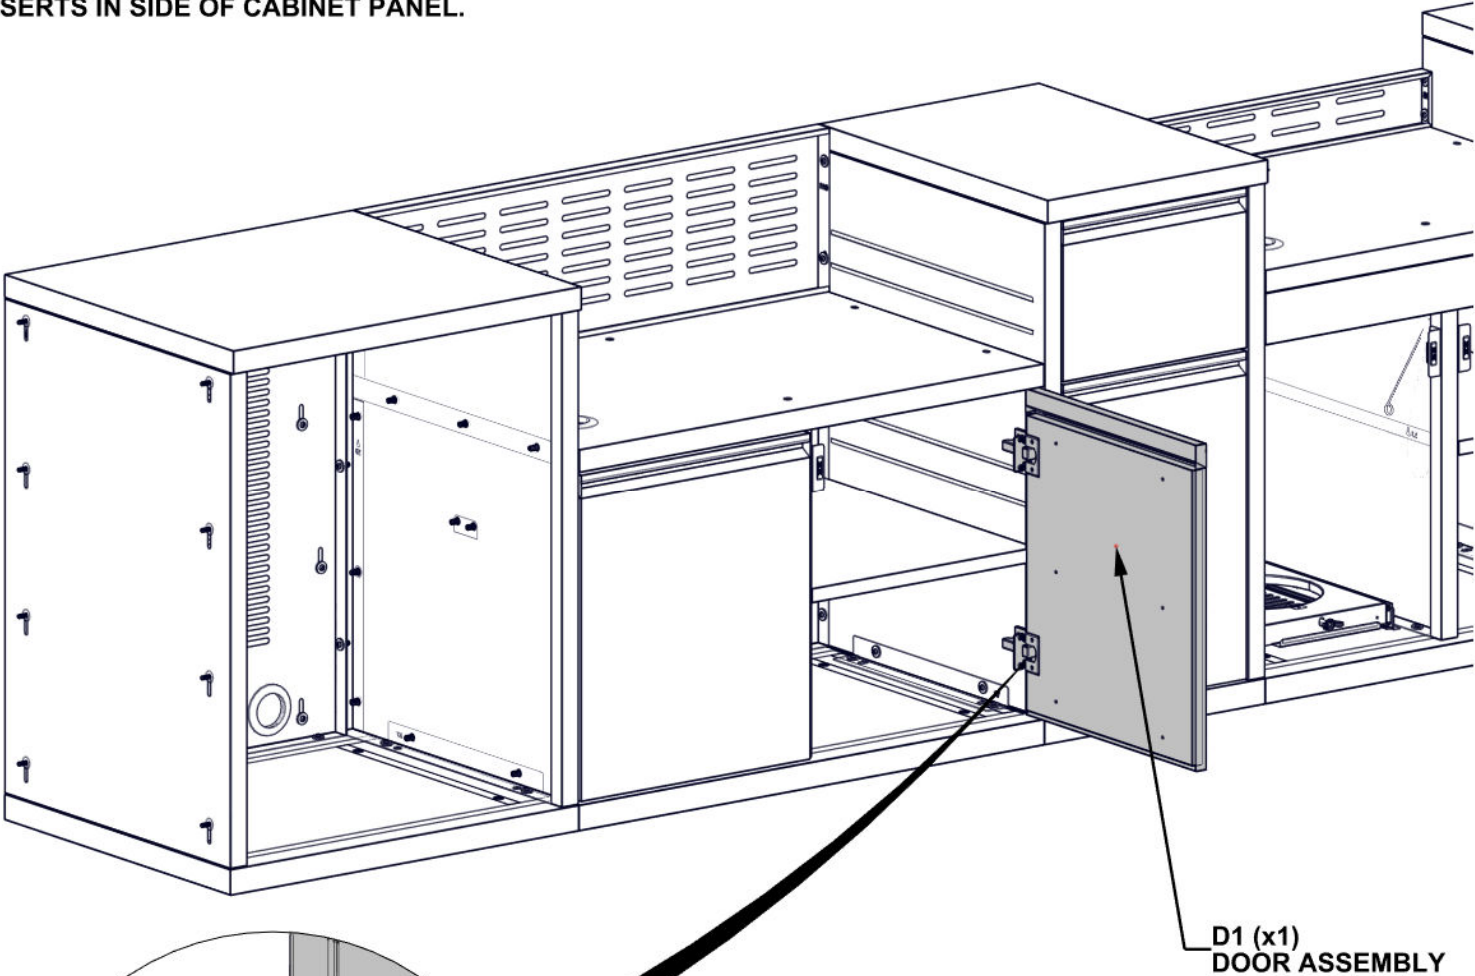

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

1185 (x8)
PHILLIPS FLAT HEAD 8-32x.5 SCREW
DO NOT OVERTIGHTEN HARDWARE


STEP 90- CABINET DOOR ATTACHMENT

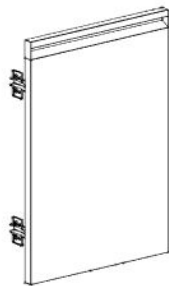


Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D5 DOOR ASSEMBLY - A4M05472
(x1) 22 3/8"x15 1/2"x7/8" (22x393.5x569)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

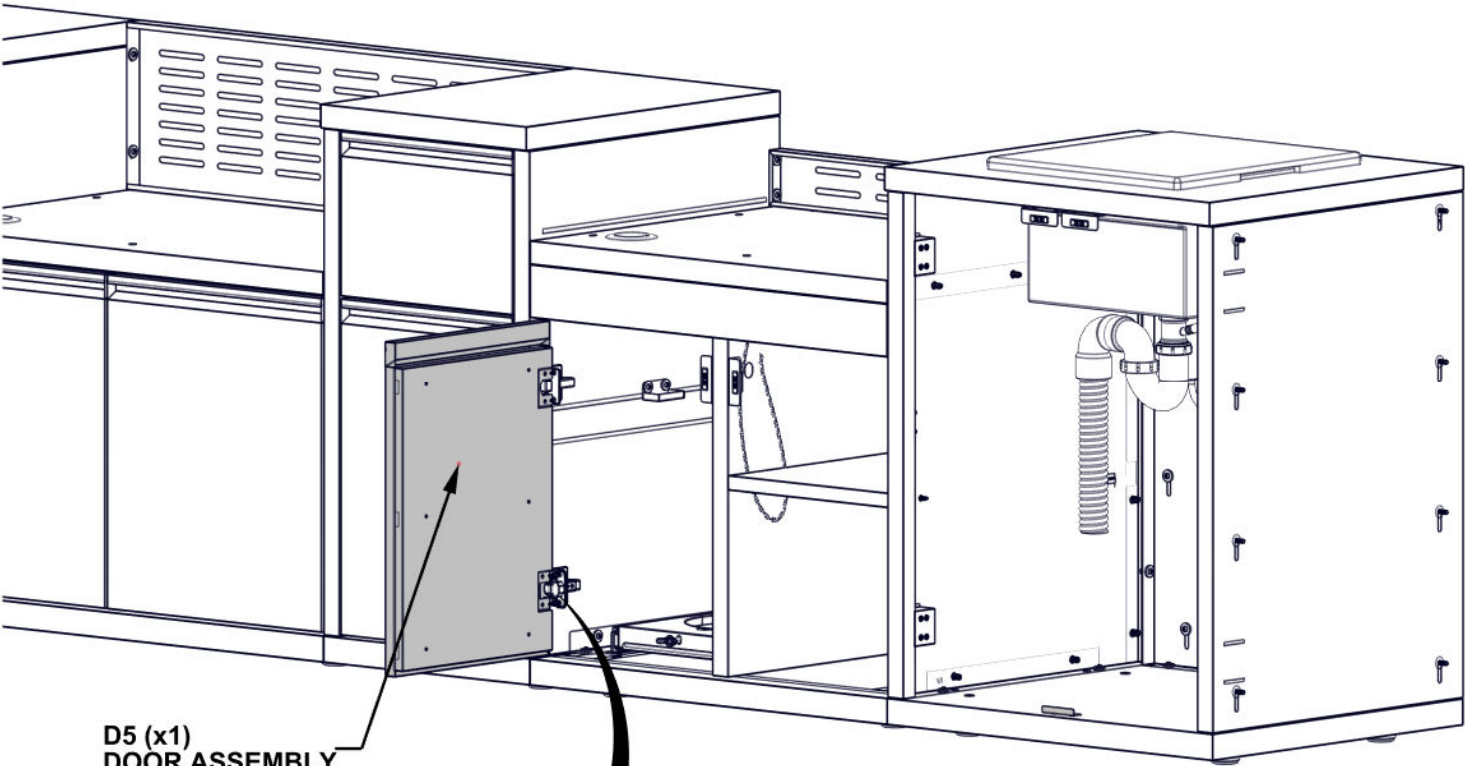


D5 (x1)
DOOR ASSEMBLY

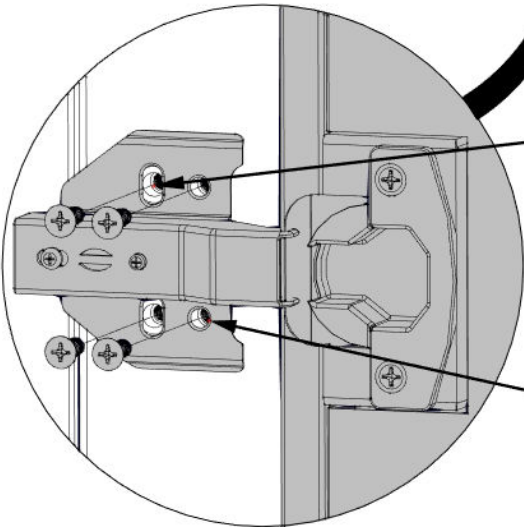

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

1185 (x8)
PHILLIPS FLAT HEAD 8-32x.5 SCREW
DO NOT OVERTIGHTEN HARDWARE


STEP 91- CABINET DOOR ATTACHMENT

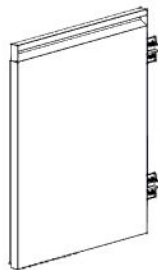

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D6 DOOR ASSEMBLY - A4M05471
(x1) 22 3/8"x15 1/2"x7/8" (22x393.5x569)


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

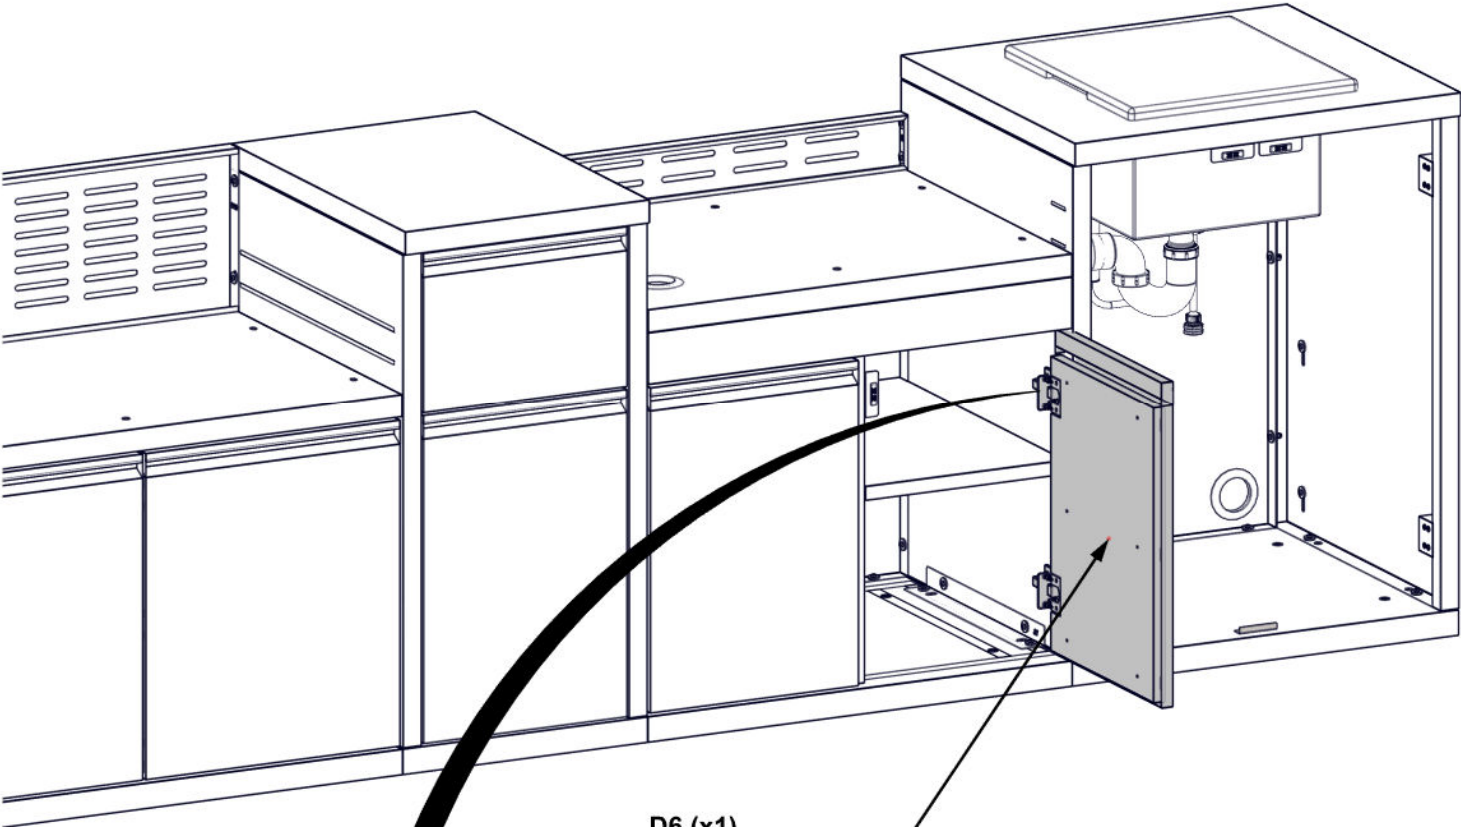

D6 (x1)
DOOR ASSEMBLY

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

1185 (x8)
PHILLIPS FLAT HEAD 8-32x.5 SCREW
DO NOT OVERTIGHTEN HARDWARE

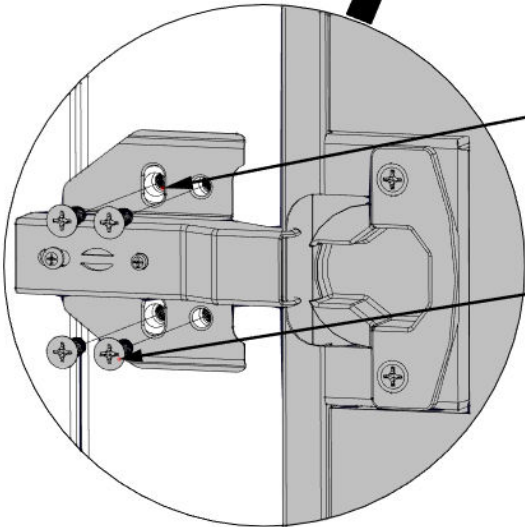



STEP 92- CABINET DOOR ATTACHMENT



D9 DOOR ASSEMBLY - A4M05481
(x1) 33 1/2"x12 11/16"x7/8" (22x322x851)

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

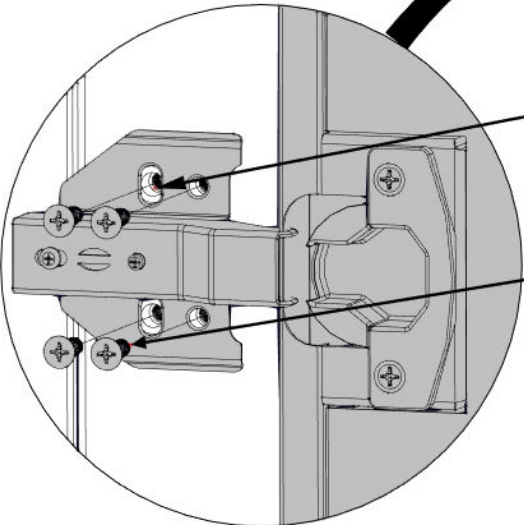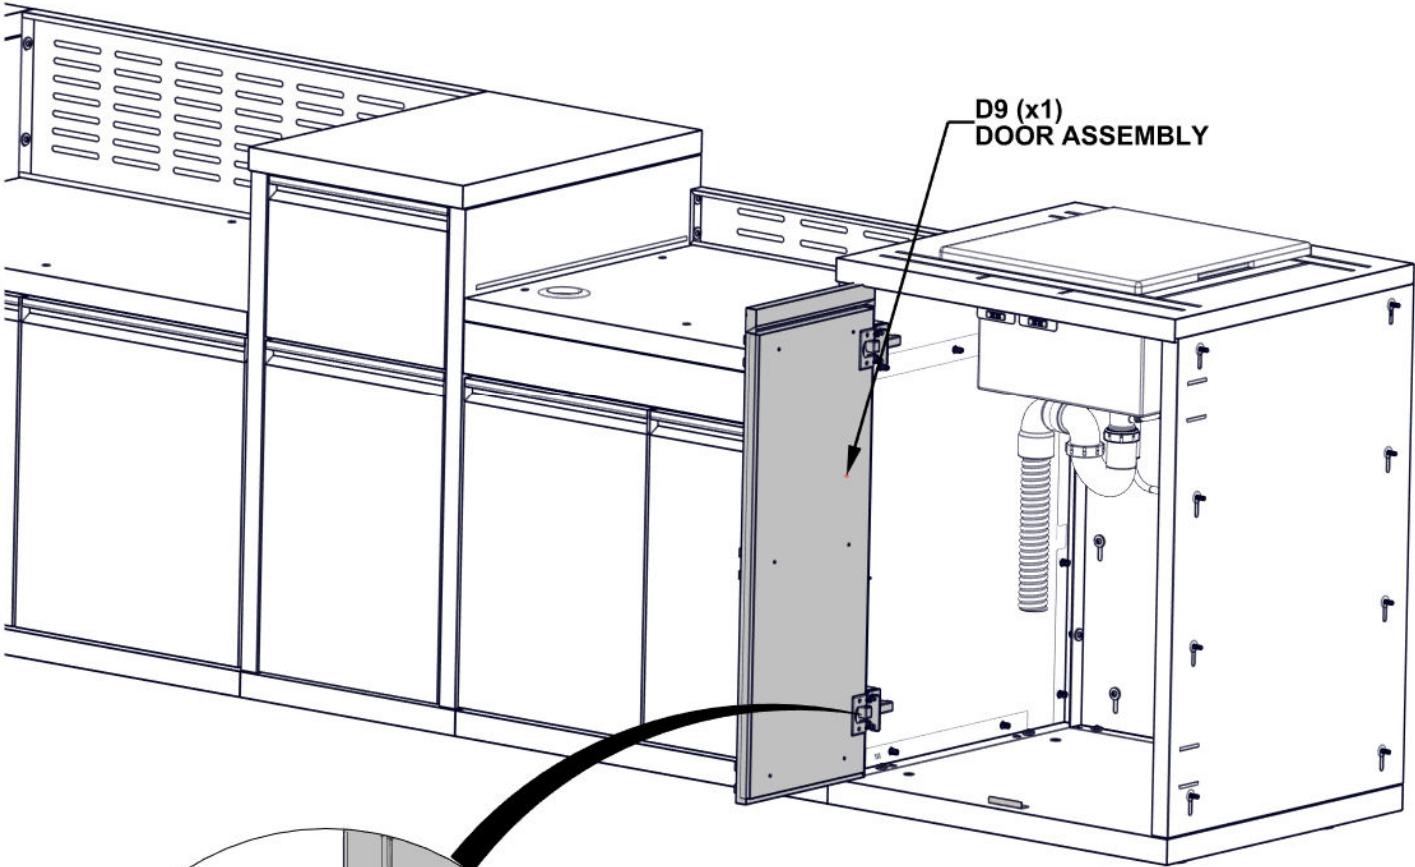

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

1185 (x8)
PHILLIPS FLAT HEAD 8-32x.5 SCREW
DO NOT OVERTIGHTEN HARDWARE


STEP 93- CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D8 DOOR ASSEMBLY - A4M05480
(x1) 33 1/2"x12 11/16"x7/8" (22x324.1x851)


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

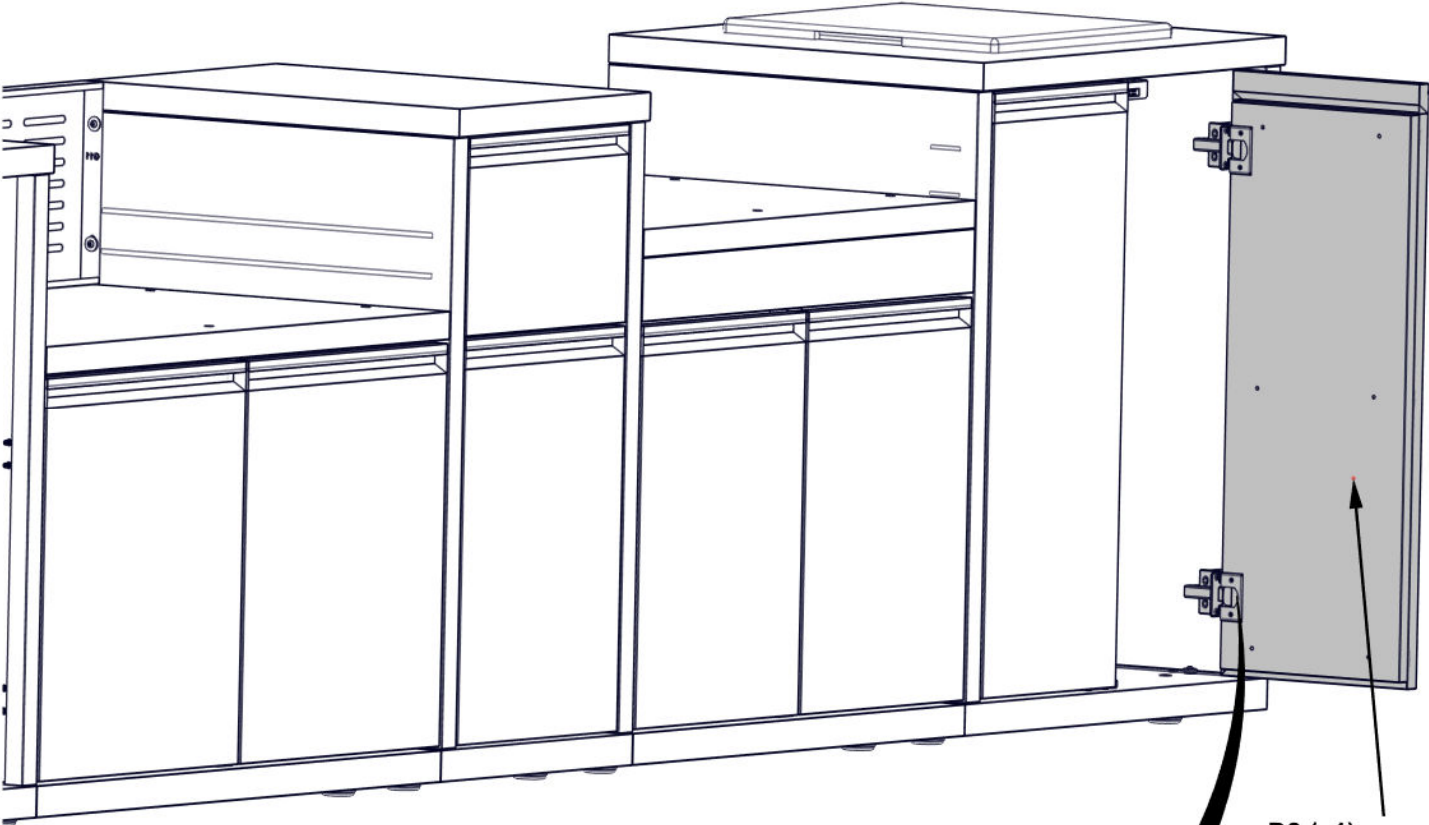

D8 (x1)
DOOR ASSEMBLY

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL




1185 (x8)
PHILLIPS FLAT HEAD 8-32x.5 SCREW
DO NOT OVERTIGHTEN HARDWARE

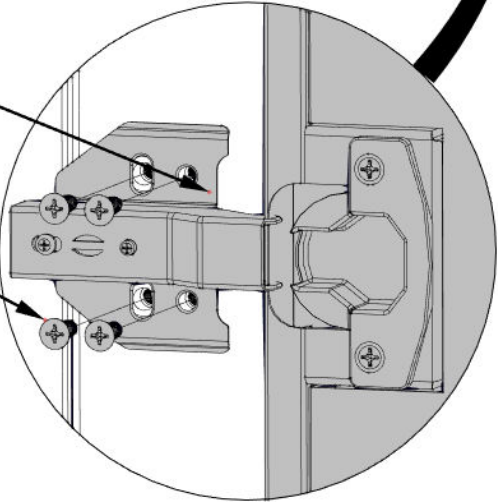

STEP 94- CABINET DOOR ADJUSTMENT(AS NEEDED)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ADJUST HINGES (AS NEEDED) SO THAT THE GAP AROUND ALL DOORS IS THE SAME AND THERE IS NO INTERFERENCE BETWEEN DOORS AND CABINETS.
- ADJUST MAGNET CATCH BRACKETS AS NEEDED.


**LOOSEN SCREWS TO ADJUST
MAGNET BRACKET, UNTIL IT
COMES IN CONTACT WITH
DOOR IN THE SHUT POSITION**

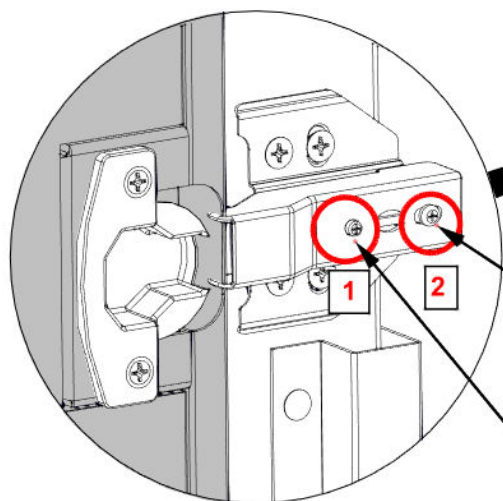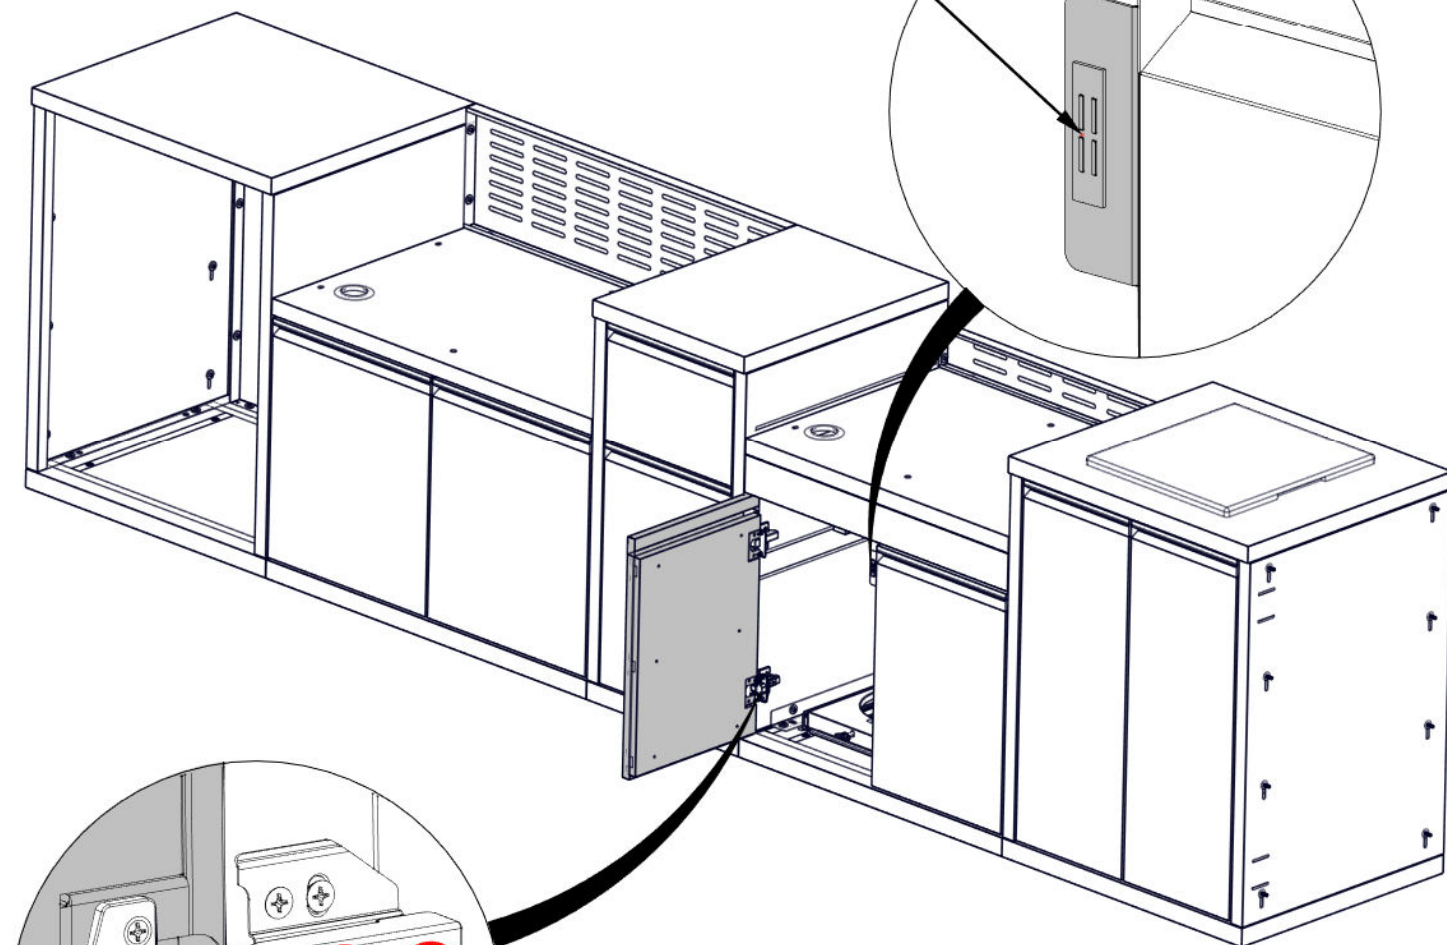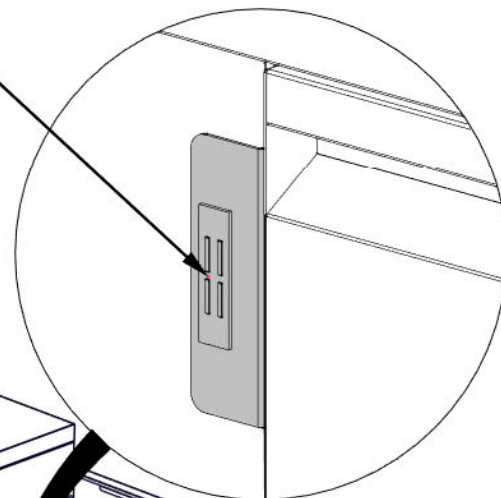

**SCREW #2:
LOOSEN THESE SCREWS TO
SLIDE DOOR TOWARD CABINET
OR AWAY FROM CABINET**


**SCREW #1:
SCREW CLOCKWISE TO BRING
EDGE OF DOOR AWAY FROM
CABINET. SCREW COUNTER
CLOCKWISE TO BRING EDGE OF
DOOR CLOSER TO CABINET**

STEP 95- KITCHEN ACCESSORY

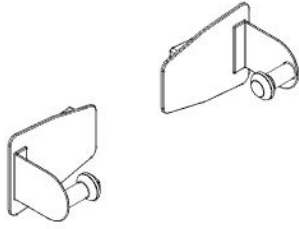


A4M02290 MAGNETIC PAPER TOWEL HOLDER
(x1)

- MAGNETIC PAPER TOWEL HOLDER CAN BE ATTACHED TO ANY METAL SURFACE ON KITCHEN.
- WE RECOMMEND ATTACHING TO THE INSIDE OF CABINET DOOR.
- **MAKE SURE TO KEEP PAPER TOWEL HOLDER AT A SAFE DISTANCE FROM GRILLING SURFACE.**

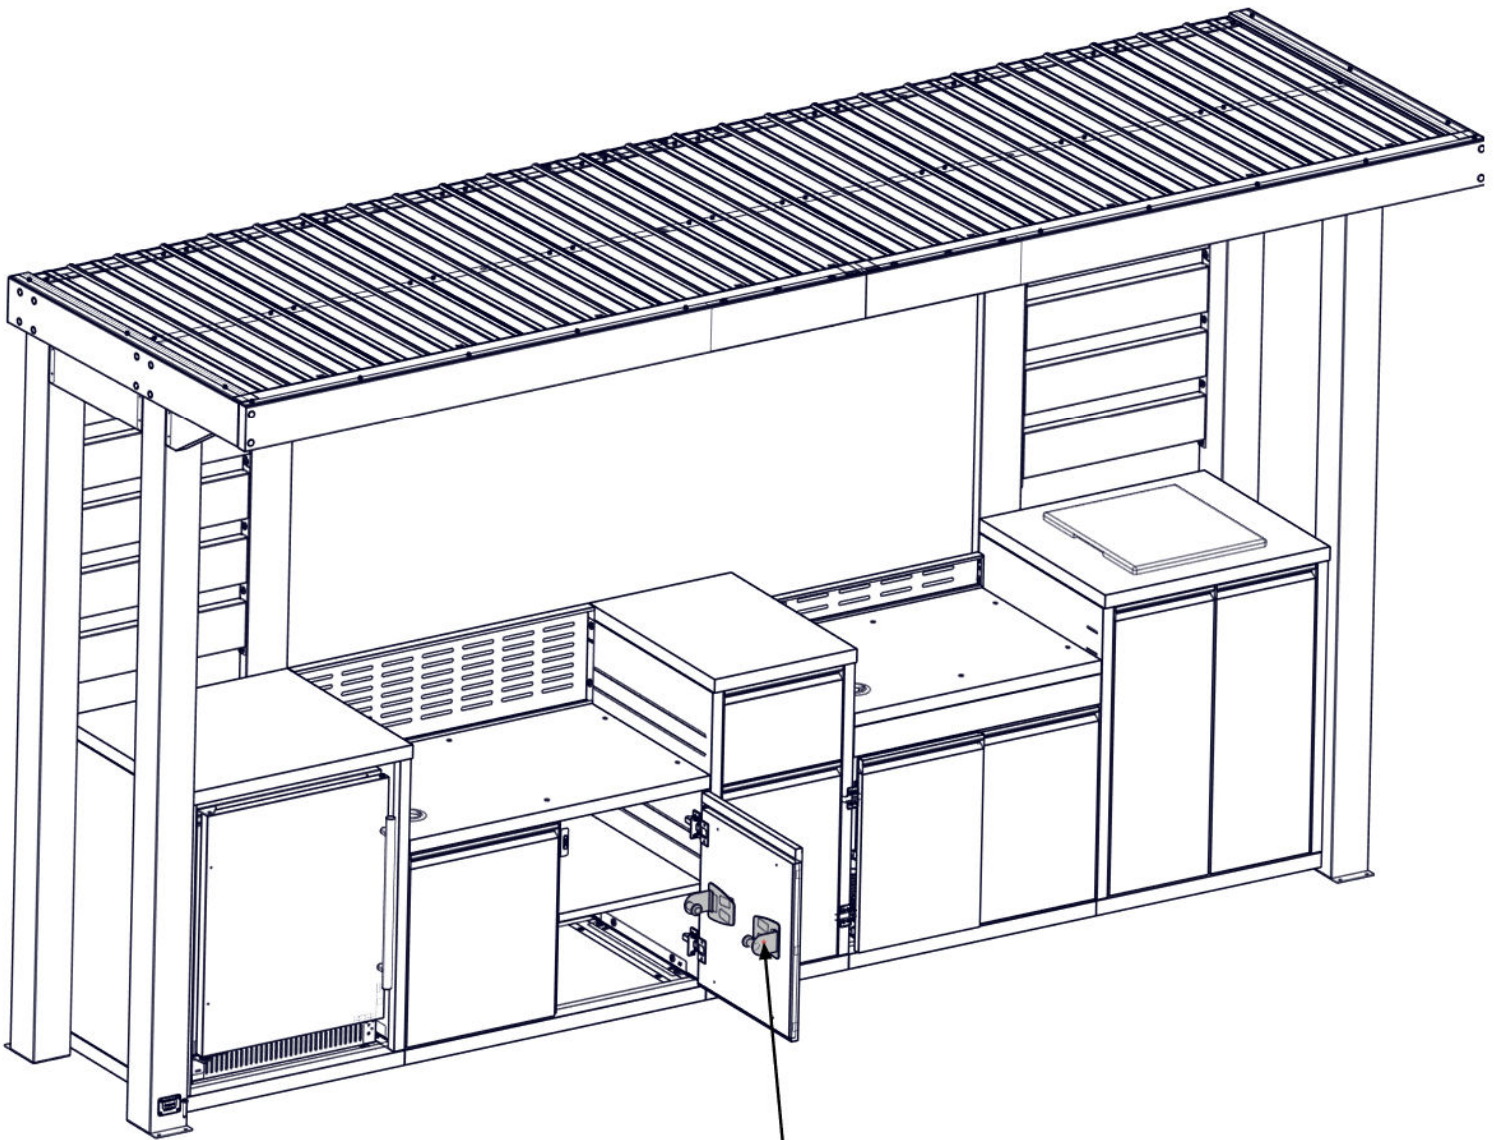

2290 (x1)
MAGNETIC PAPER
TOWEL HOLDER

STEP 96- KITCHEN ACCESSORY


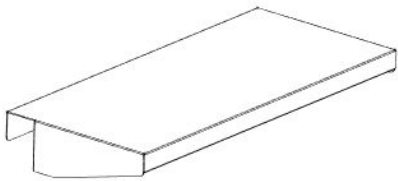


A7 BACK SHELF - A4M06229
(x4) 2 7/16"x7 15/16"x17 11/16" (61x201x450)




A6P00679 EVA TAPE
(x16)

APPLY EVA TAPE IN THE APPROXIMATE LOCATIONS SHOWN
REPEAT FOR ALL A7 SHELVES

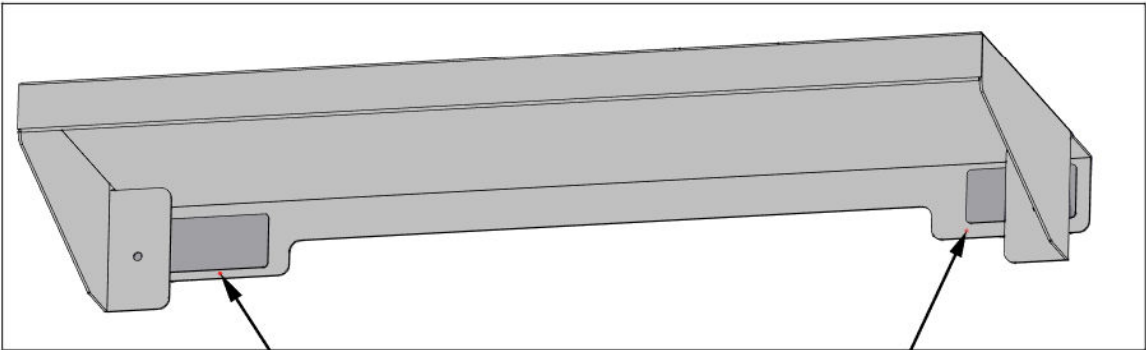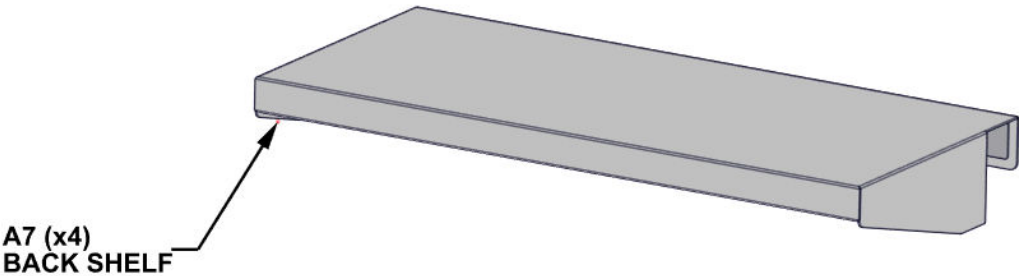


APPLY EVA TAPE ALONG
BACK FLANGE OF SHELF

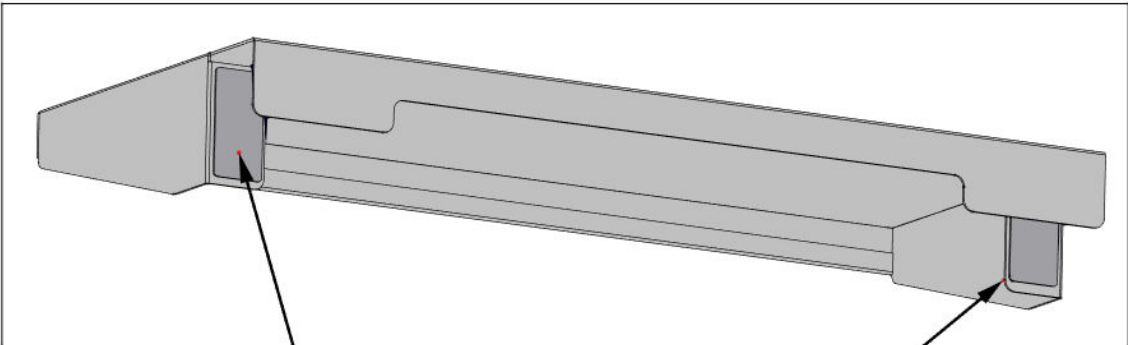


APPLY EVA TAPE
ALONG BACK SIDE
OF FRONT FALNGE

STEP 97- KITCHEN ACCESSORY

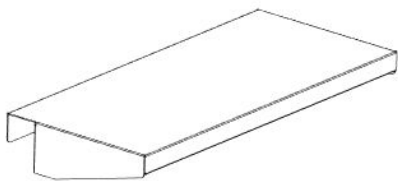

A7 BACK SHELF - A4M06229
(x4) 2 7/16"x7 15/16"x17 11/16" (61x201x450)


SLIDE BACK SHELF OVER ANY TUBE ALONG B10 BACK PANEL. SHELVES CAN BE POSITIONED ANYWHERE DESIRED.

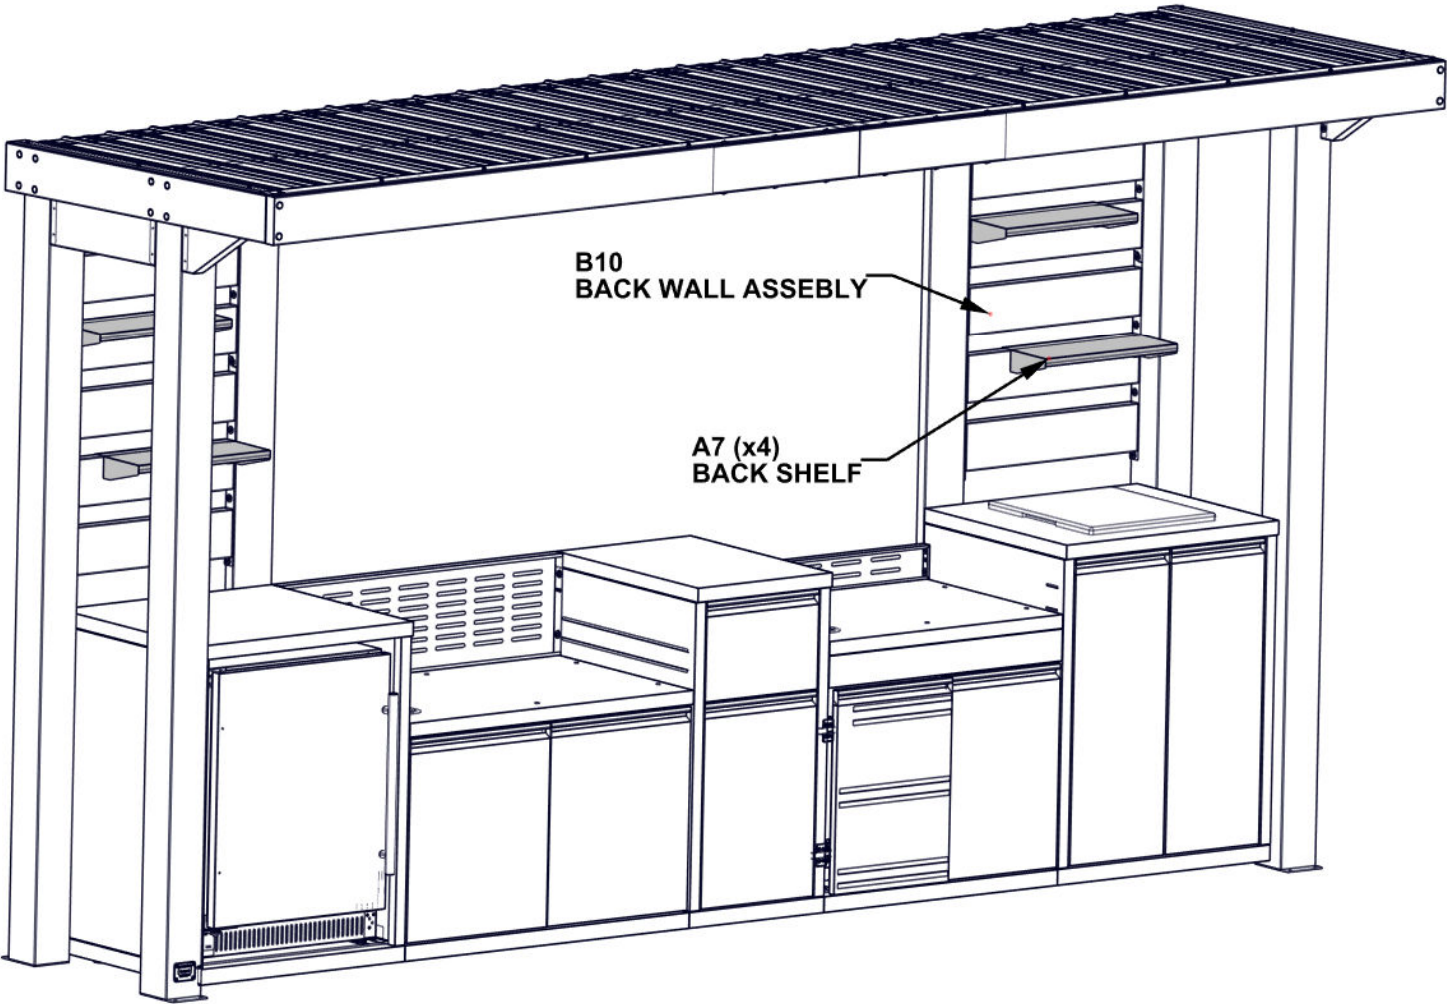


STEP 98- KITCHEN ANCHORING

Qty	PartNo	Description
14	H100120	CONCRETE ANCHOR
14	H100630	WASHER FLAT 8x19 BLK

- MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE SURFACE OR CONCRETE POST PADS AS SHOWN BELOW.
- FOR INSTALLATION ON WOOD DECK, YOU MUST ENSURE THERE IS AMPLE STRUCTURAL SUPPORT UNDER THE DECK. HARDWARE NOT INCLUDED FOR DECK ATTACHMENT.
- PRE-DRILL HOLES FOR CONCRETE ANCHORS USING A 3/16" (5mm) CONCRETE DRILL BIT.

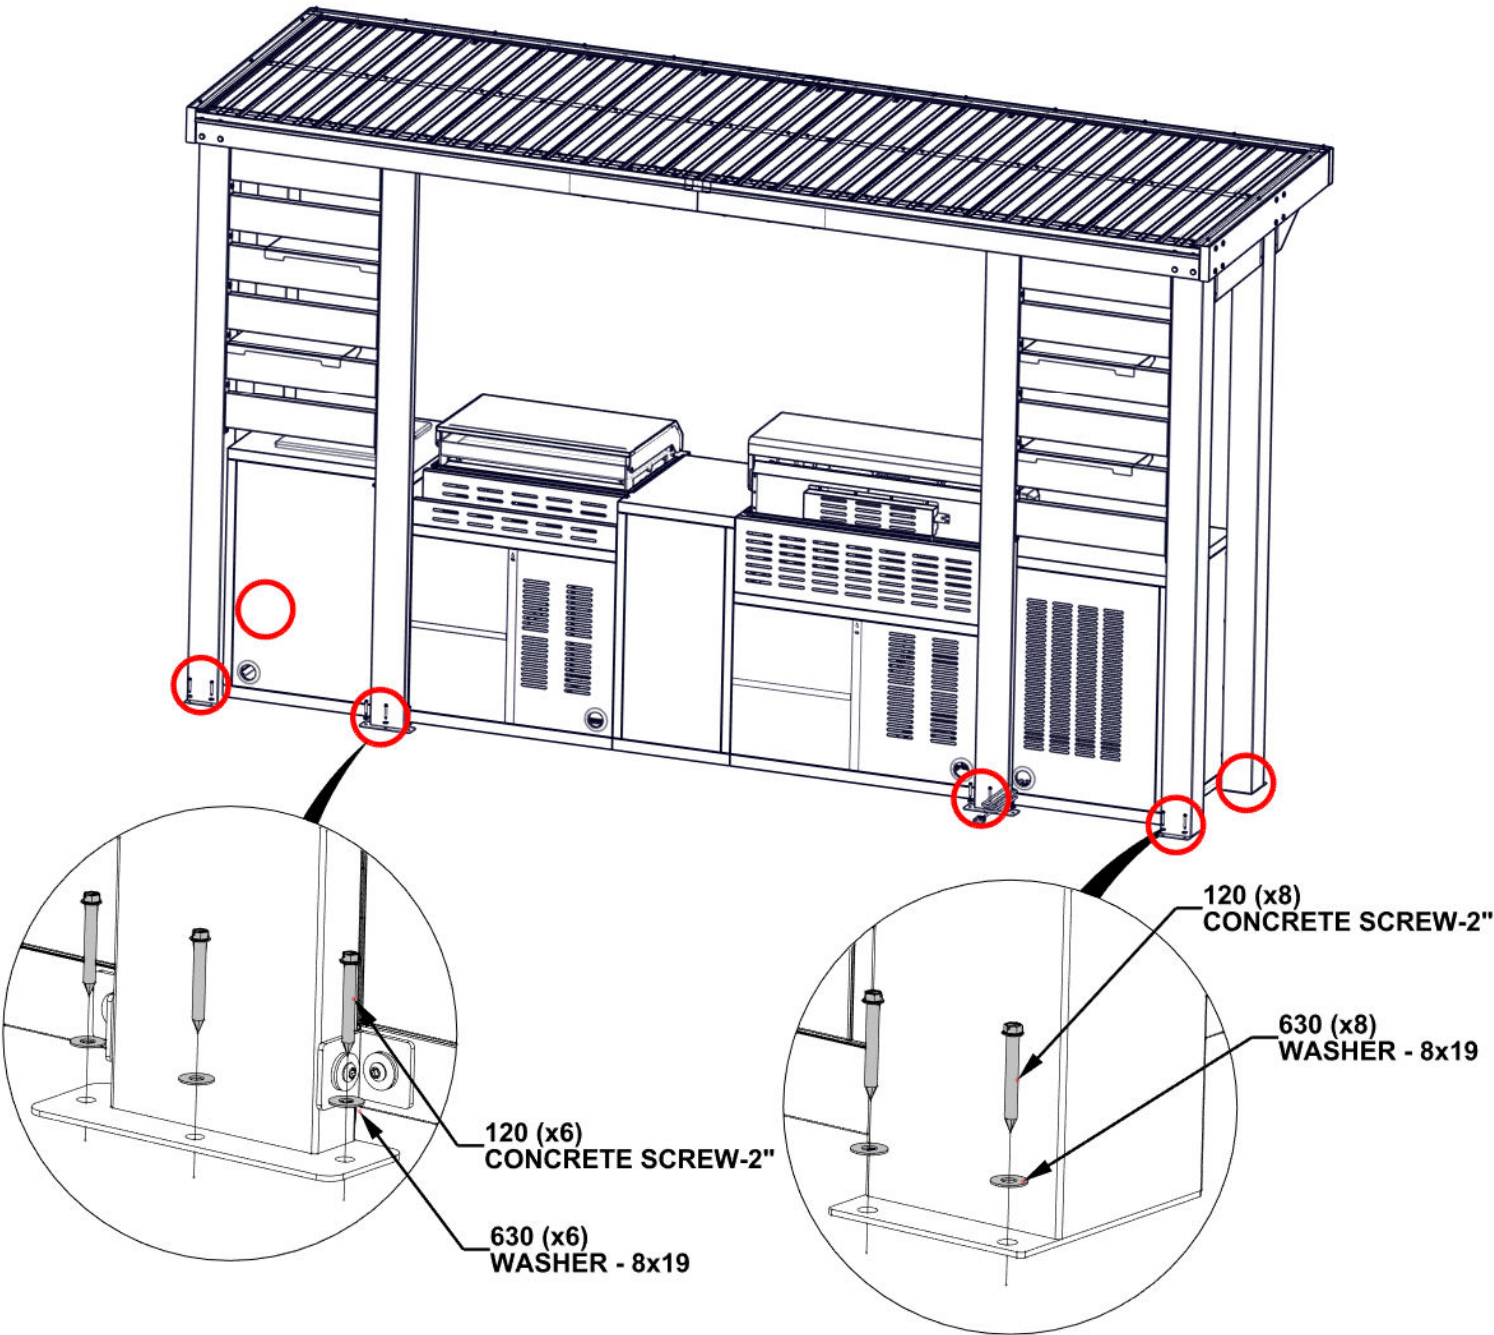


OUTDOOR KITCHEN FRIDGE

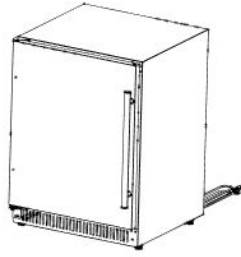




9230132 OUTDOOR KITCHEN FRIDGE - LEFT OPEN
(x1)

- FOR INSTALLATION OF OUTDOOR KITCHEN FRIDGE, REFER TO PAGES IN THIS INSTRUCTION MANUAL.
- FOR DETAILED INFORMATION OF OUTDOOR KITCHEN FRIDGE, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN FRIDGE.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

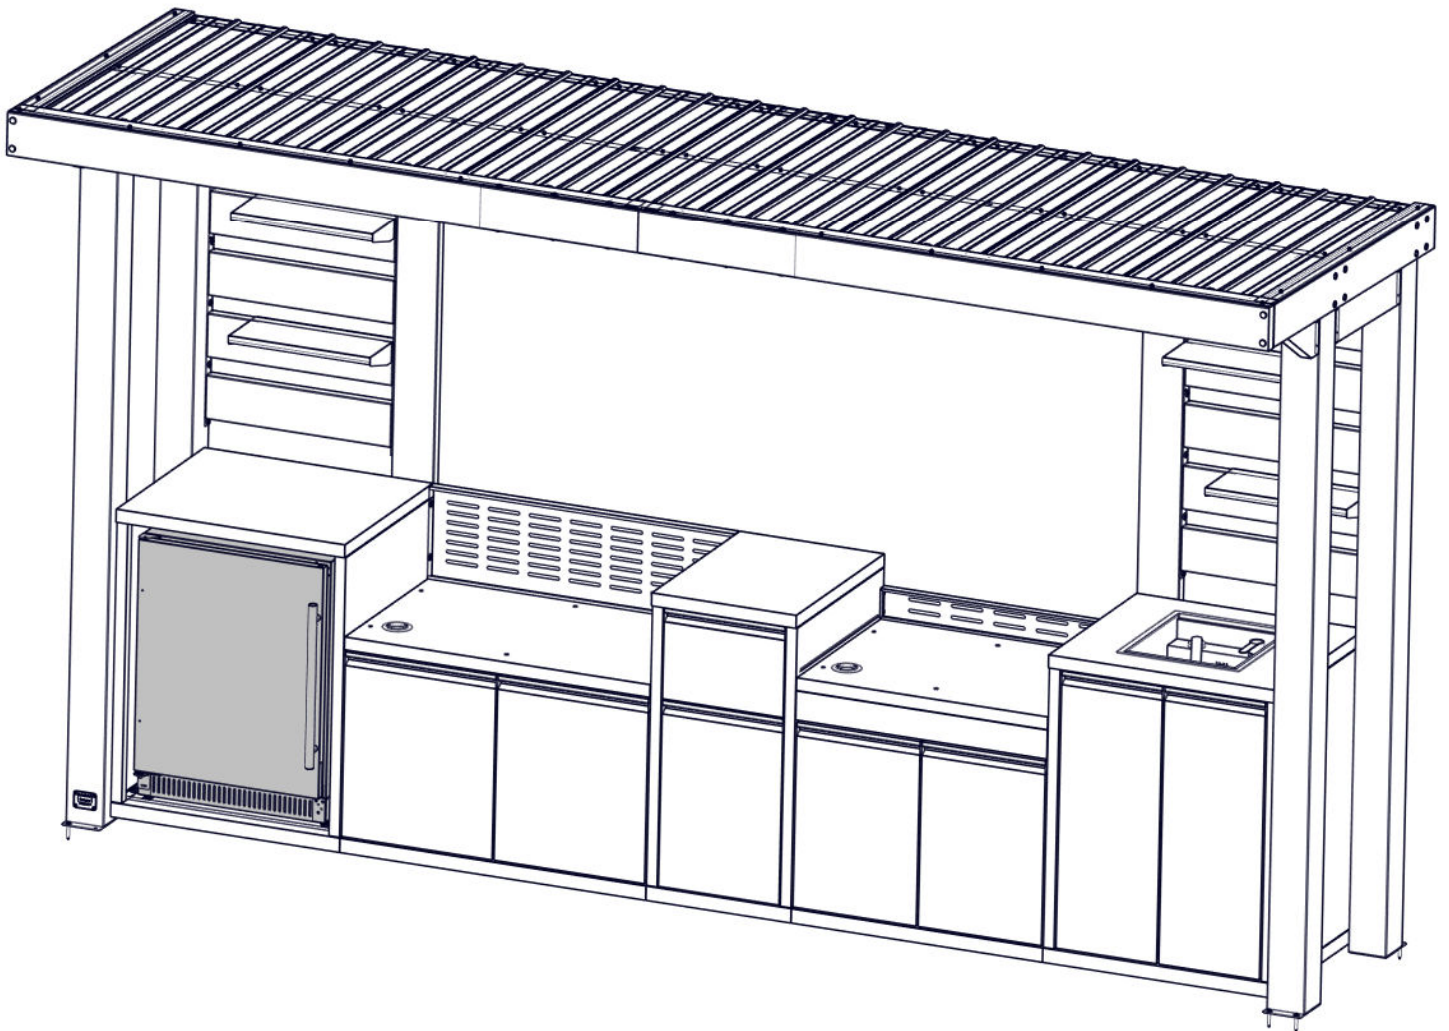



OUTDOOR KITCHEN FRIDGE

- CAREFULLY SLIDE FRIDGE INTO CABINET OPENING MAKING SURE THAT THE ELECTRICAL CORD IS ROUTED THROUGH THE HOLES IN THE SIDE PANELS OF THE CABINET.
- IF FRIDGE IS NOT IN UPRIGHT POSITION, PLEASE LET SIT FOR 24 HRS BEFORE PLUGGING INTO RECEPTACLE.
- FRIDGE CANNOT BE CONNECTED TO ELECTRICAL ENCLOSURE ATTACHED TO OUTDOOR STRUCTURE.

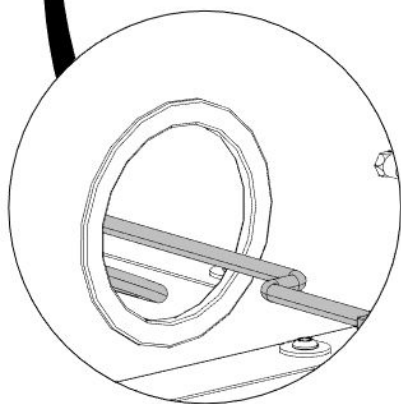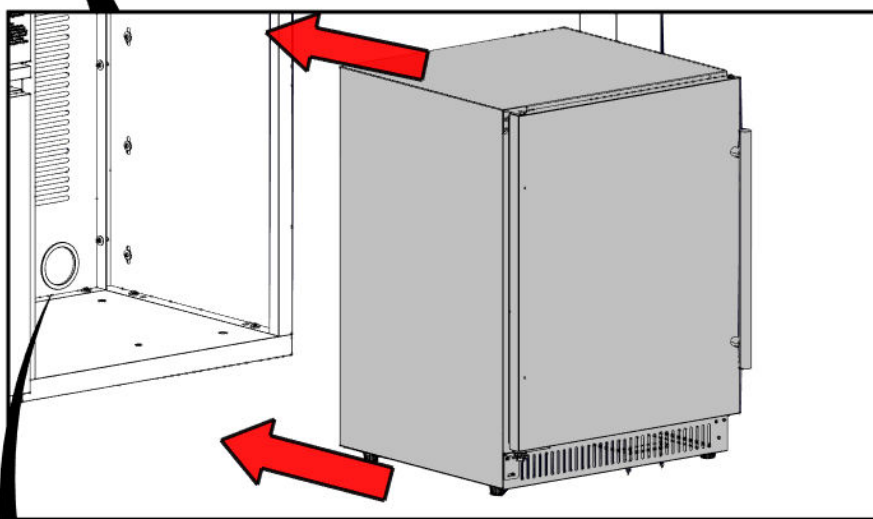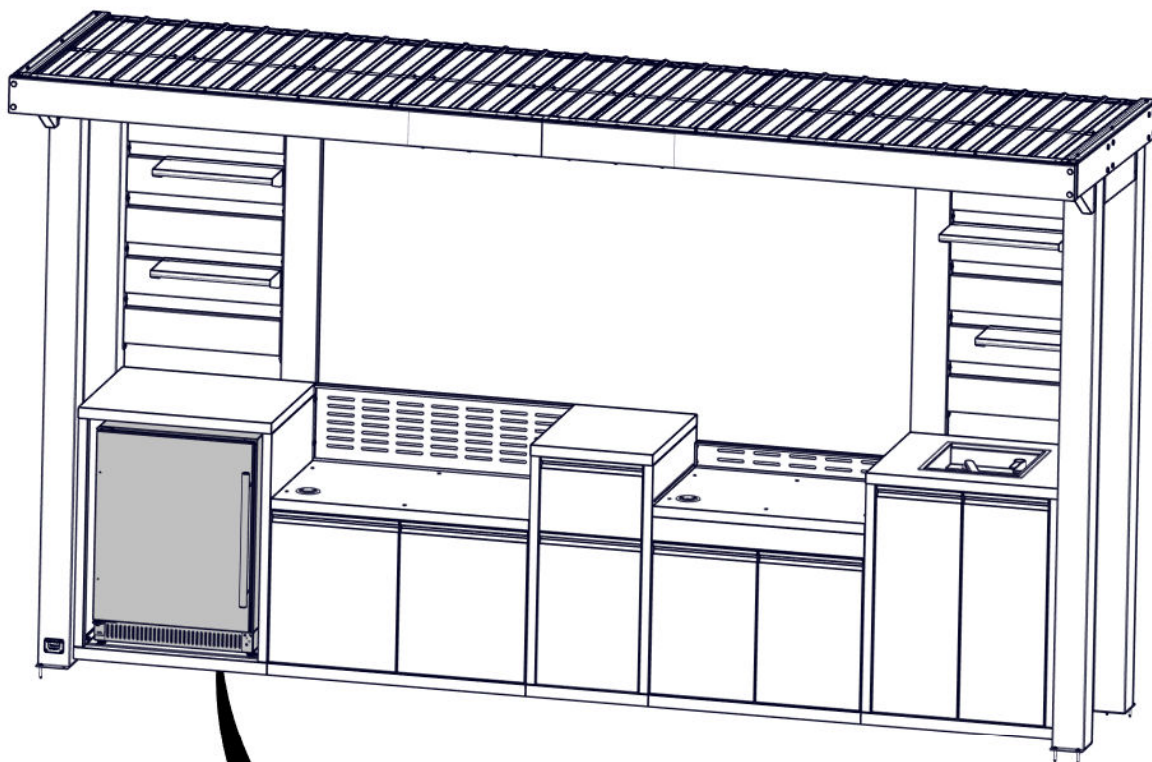


OUTDOOR KITCHEN FRIDGE

- ALIGN FEET ON FRIDGE UNIT SO THAT IT IS LEVEL AND DOES NOT TILT.
- TURN FEET CLOCKWISE TO EXTEND THEM AND COUNTERCLOCKWISE TO SHORTEN. REPEAT THIS FOR ALL FOUR FRIDGE FEET AS NEEDED TO LEVEL.

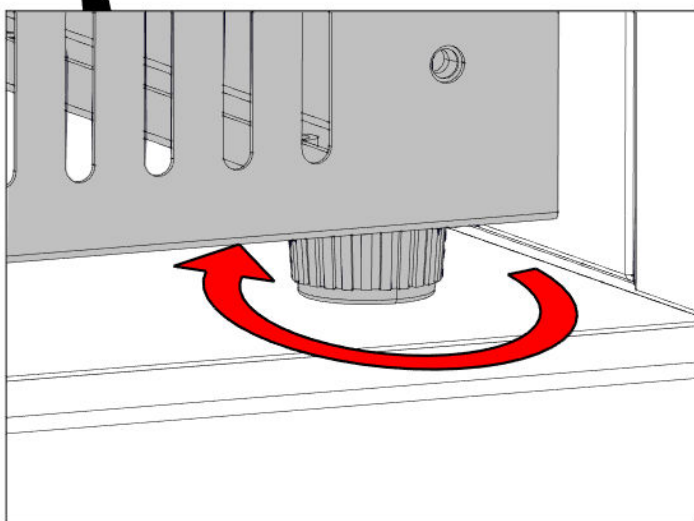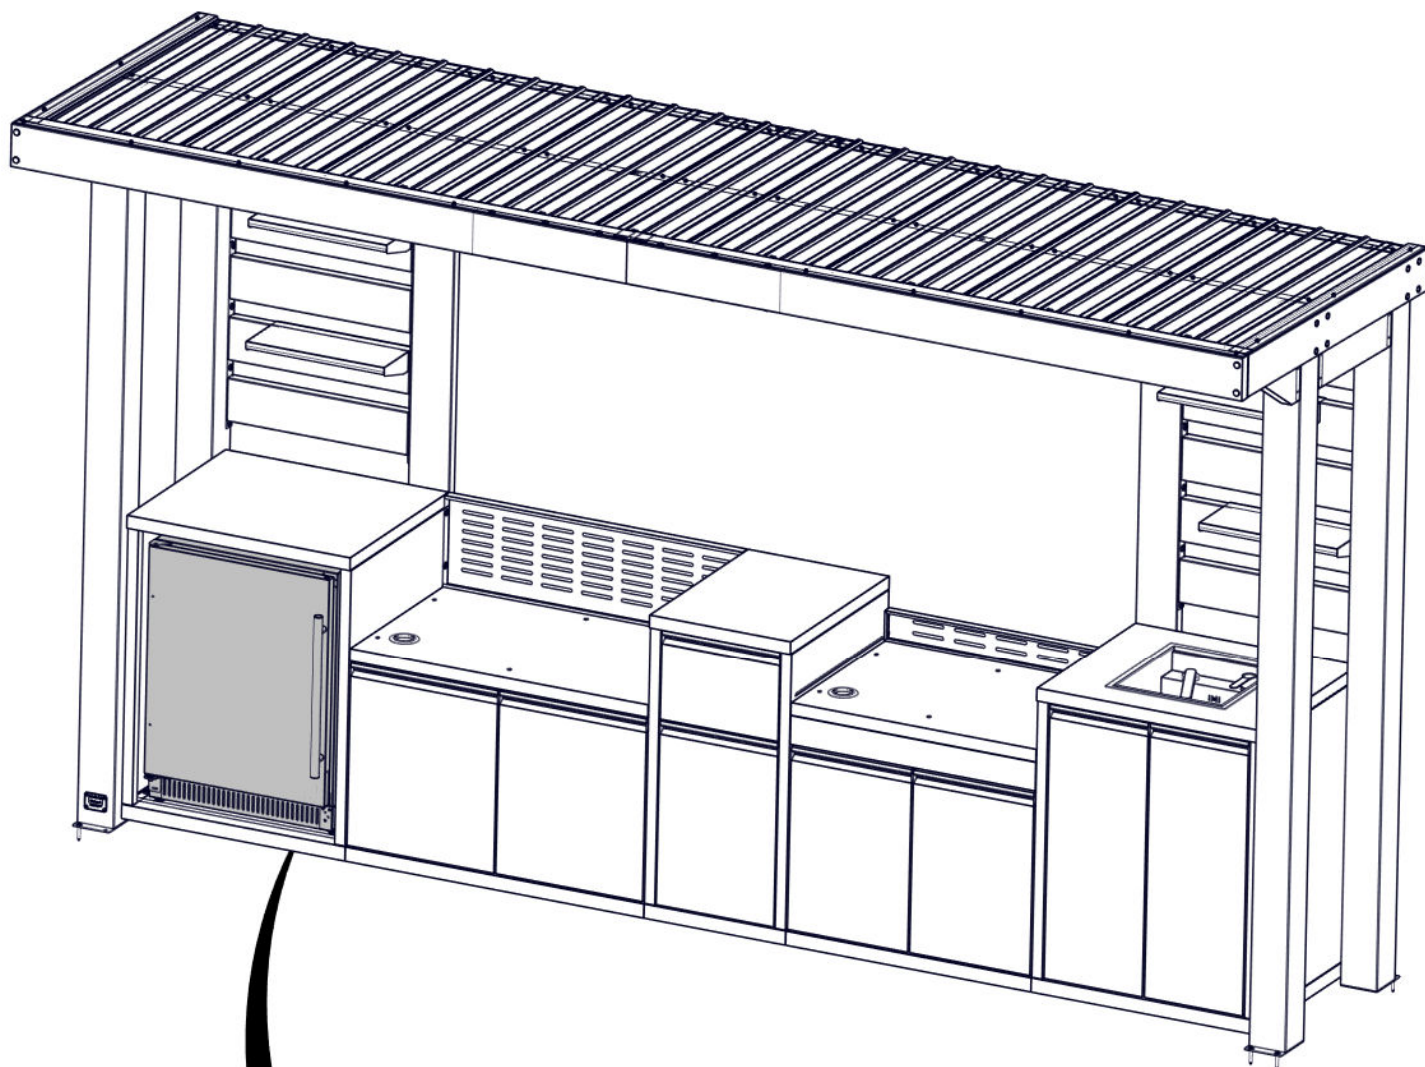


OUTDOOR KITCHEN APPLIANCE INSTALLATION

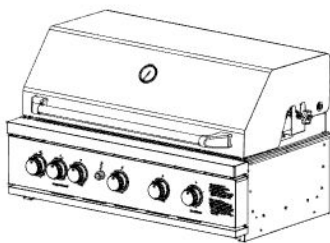


9240025 OUTDOOR KITCHEN GRILL KIT
(x1)

OR

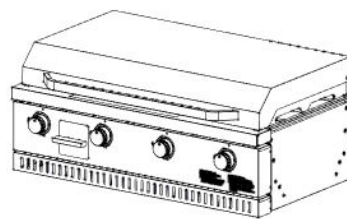


9240742 OUTDOOR KITCHEN GRIDDLE KIT
(x1)

- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN GRIDDLE KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN GRIDDLE KIT.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

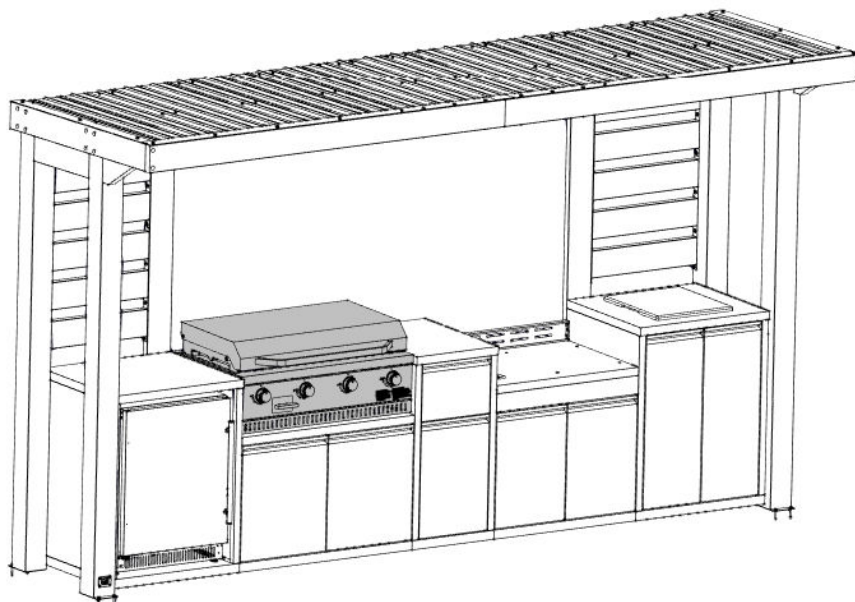


- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN GRILL KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN GRILL KIT.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

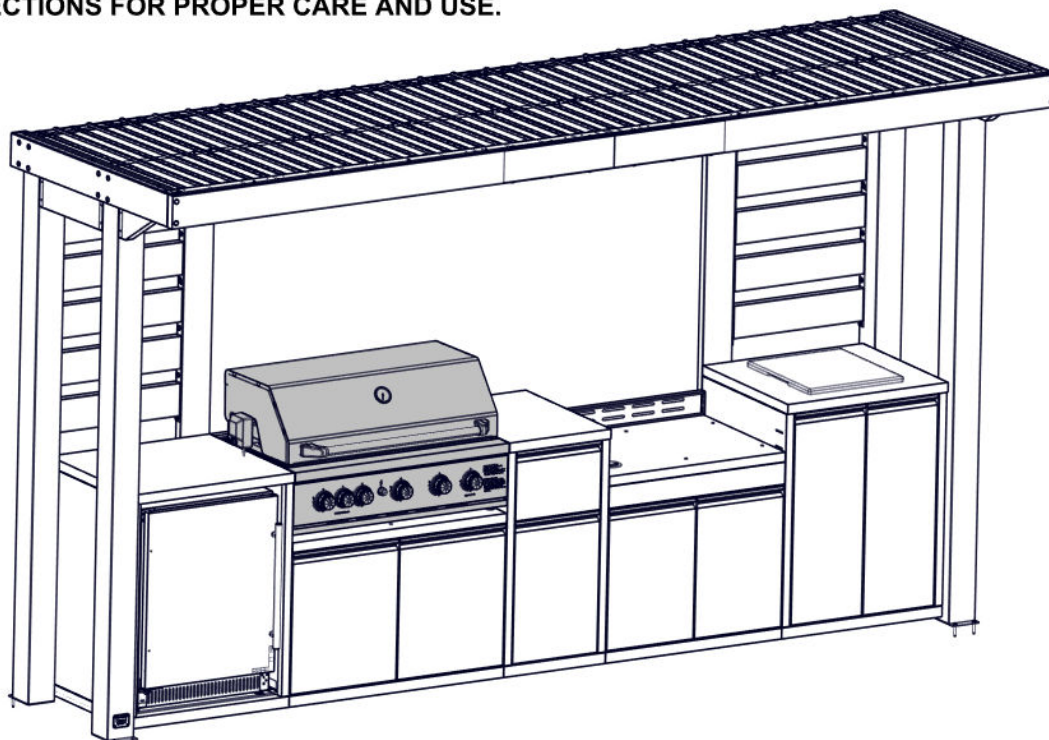


**NATURAL GAS CONVERSION KIT AVAILABLE BY CONTACTING BACKYARD DISCOVERY AT
www.backyarddiscovery.com 1-800-856-4445**

OUTDOOR KITCHEN APPLIANCE INSTALLATION

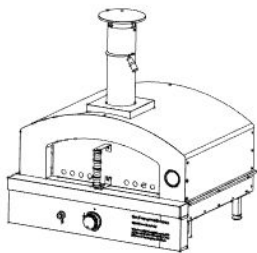


9240018 OUTDOOR KITCHEN PIZZA OVEN
(x1)

OR

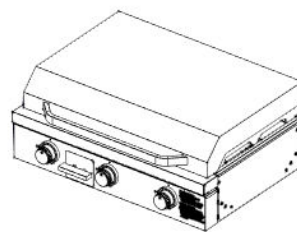


9240735 OUTDOOR KITCHEN GRIDDLE KIT
(x1)


- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN PIZZA OVEN, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN PIZZA OVEN.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

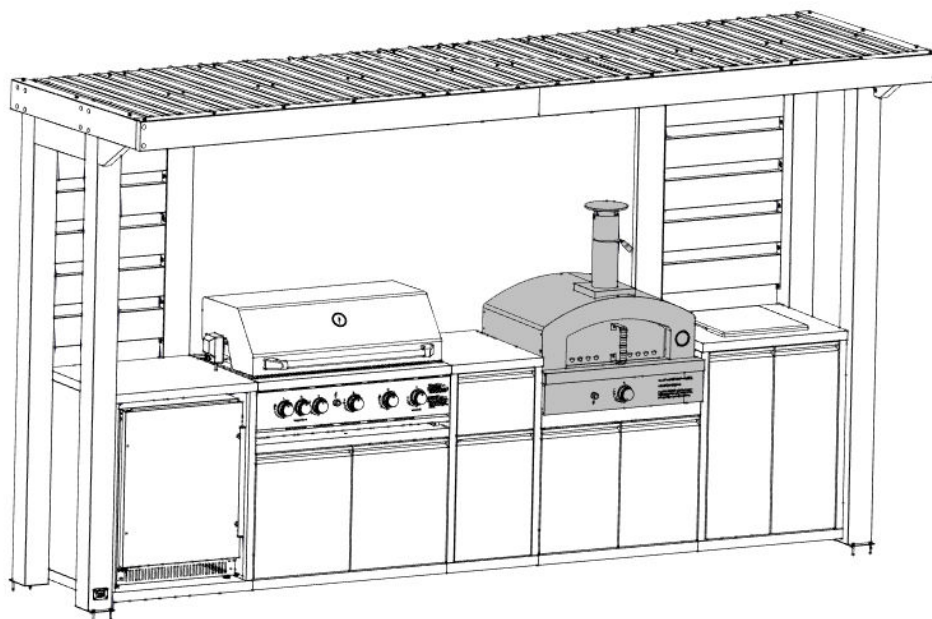

- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN GRIDDLE KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN GRIDDLE KIT.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

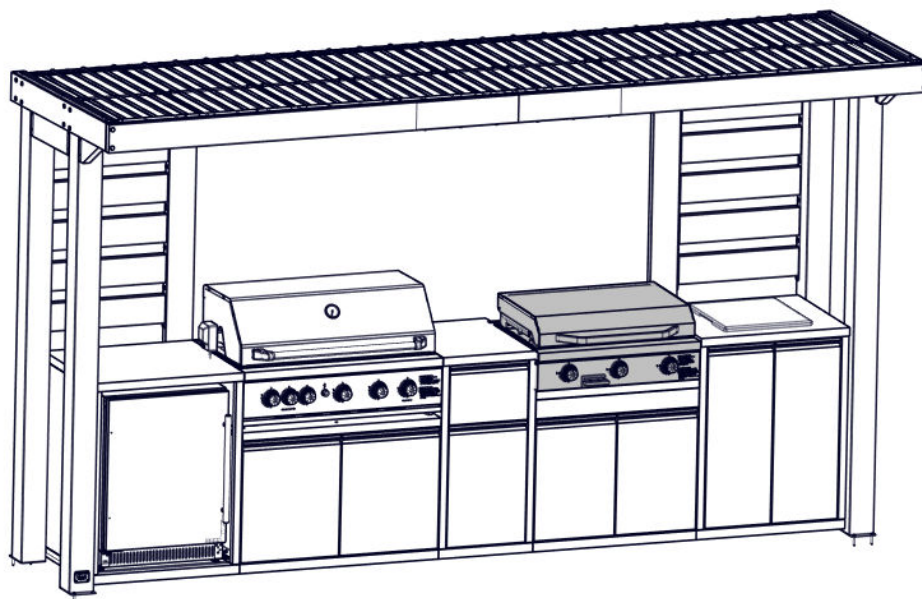

**NATURAL GAS CONVERSION KIT AVAILABLE BY CONTACTING BACKYARD DISCOVERY AT
www.backyarddiscovery.com 1-800-856-4445**

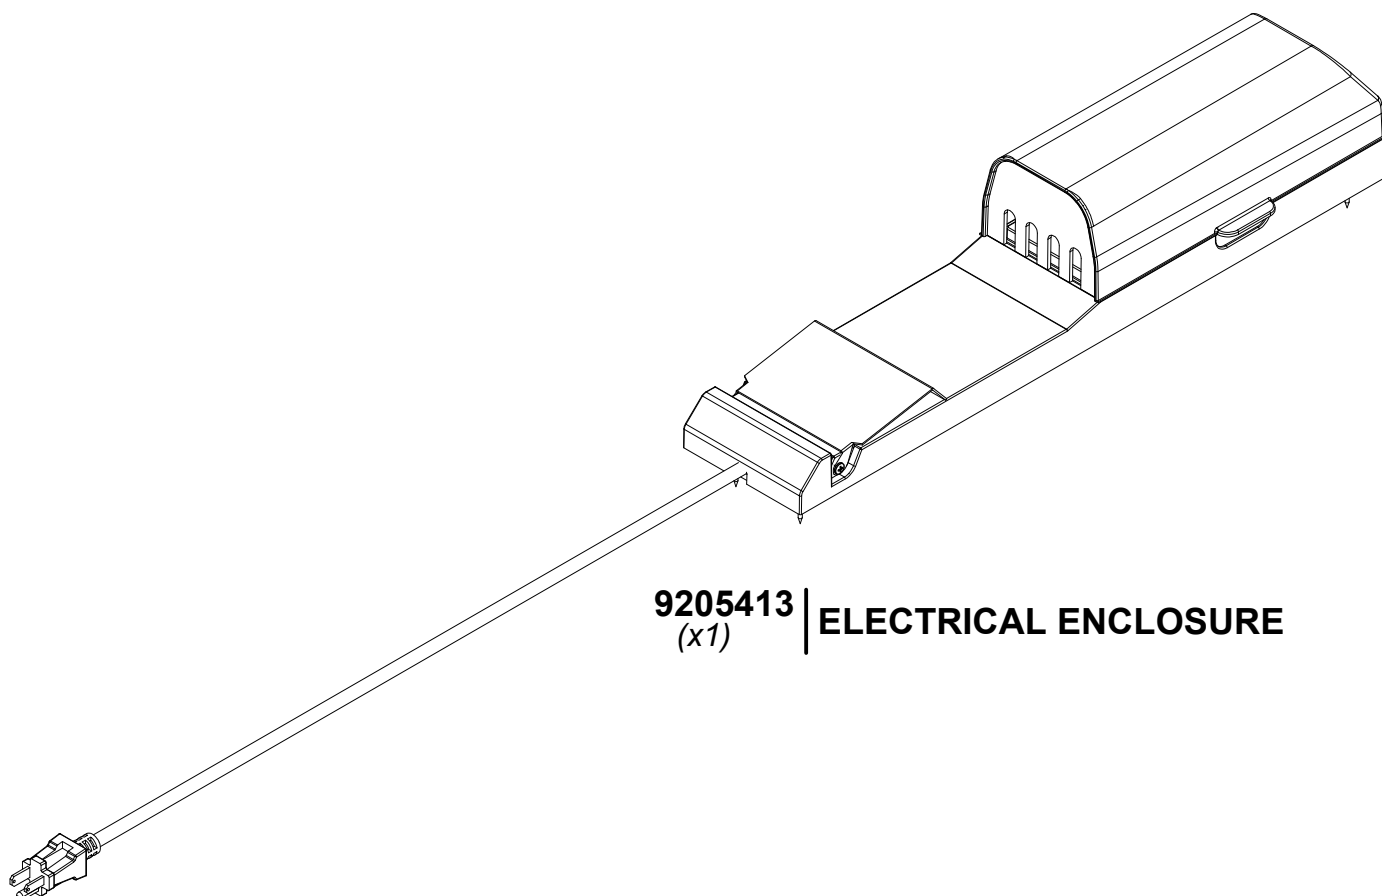

9205413
(x1) | **ELECTRICAL ENCLOSURE**

FOR POWERPORT INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE POWERPORT KIT. INSTALL ON ANY EXTERIOR POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.