



Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

LANGSTON BUILT-IN APPLIANCE UNIT


MODEL #: 2404175



WARNING

Cancer and Reproductive Harm
www.P65Warnings.ca.gov

**USE THIS ASSEMBLY INSTRUCTION IF ADDING
APPLIANCES TO YOUR OUTDOOR KITCHEN**

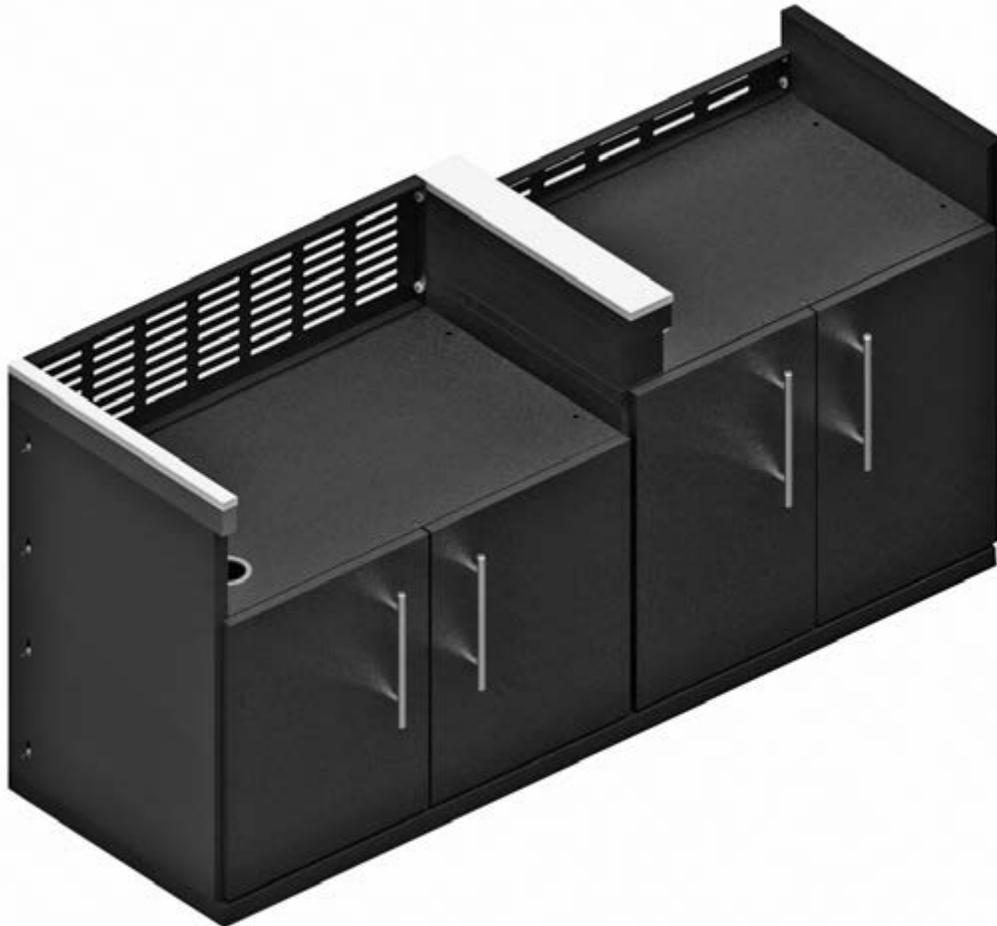

Please visit www.backyarddiscovery.com
For the most up to date assembly manual, to register your product, or to order
replacement parts Para obtener instrucciones en español, visite
www.backyarddiscovery.com



EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP






OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings or concrete pad to attach your structure.

- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.

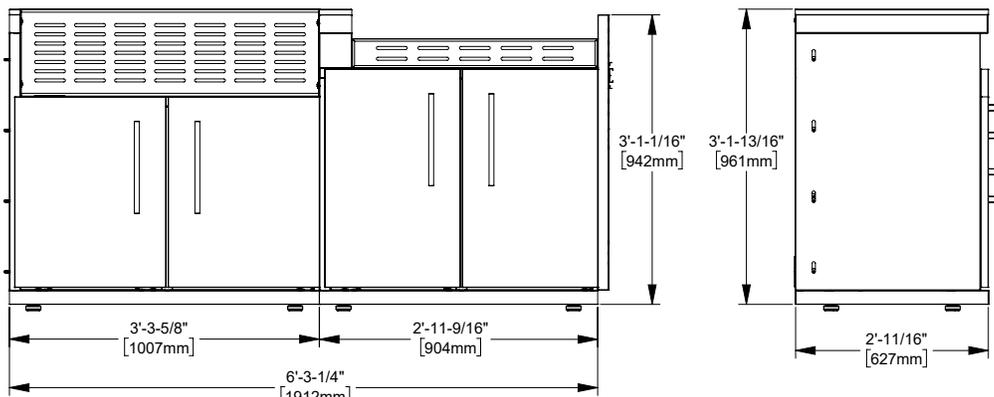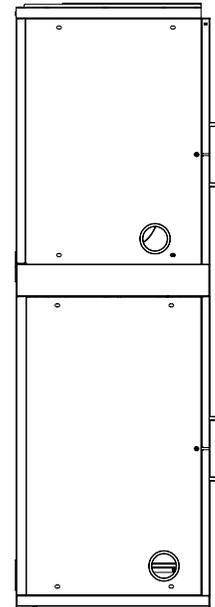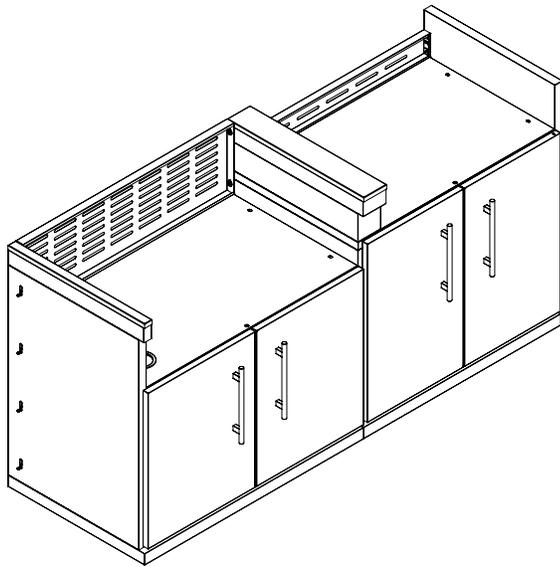

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)




S9 SIDE PANEL ASSEMBLY - A4M05372
(x1) 27 1/8"x23 11/16"x1 15/16" (53x601x690)




S11 CABINET SIDE PANEL ASSEMBLY M - A4M05387
(x1) 27 1/8"x23 5/8"x1 3/8" (35x600x689.5)




S12 SIDE PANEL ASSEMBLY - A4M05370
(x1) 32 15/16"x23 11/16"x1 3/8" (35.00x601.00x836.50)




S13 CABINET SIDE PANEL ASSEMBLY M - A4M05386
(x1) 23 5/8"x23 1/2"x1 3/8" (35x597x600)




S14 CABINET SIDE PANEL ASSEMBLY L - A4M05392
(x1) 35 1/4"x23 11/16"x2 1/2" (63.00x602x896)

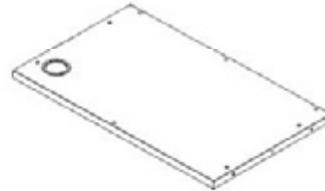

T7 TABLETOP ASSEMBLY - A4M05374
(x1) 1 1/4"x23 11/16"x38 1/4" (32x601x971)

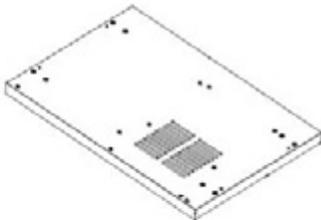


F5 FLOOR PANEL ASSEMBLY - A4M05368
(x1) 35 9/16"x24 3/4"x1 3/4" (45x628.50x904)

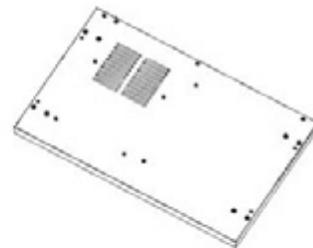

F6 FLOOR PANEL ASSEMBLY - A4M05366
(x1) 39 5/8"x24 3/4"x1 3/4" (45x628.50x1007)




L3 CABINET SHELF - A4M05389
(x1) 23 1/2"x16 5/8"x1" (25x423x597)

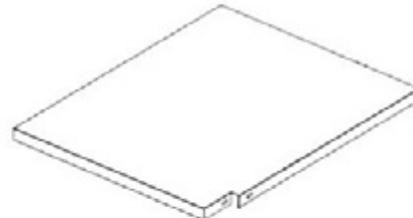


L4 CABINET SHELF - A4M05390
(x1) 23 9/16"x18 11/16"x1" (25.00x475.00x598.00)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

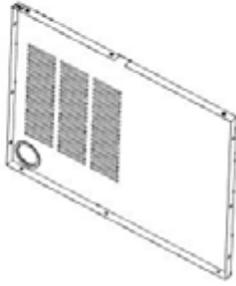


G9 BACK PANEL ASSEMBLY - A4M05376
(x1) 34 3/16"x27 1/8"x1 3/16" (30x689.0x868)

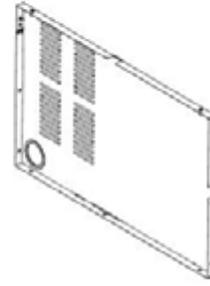

G10 BACK PANEL ASSEMBLY - A4M05375
(x1) 1 3/16"x23 1/2"x38 1/4" (30x598x971)

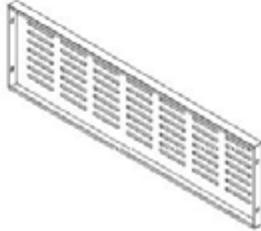


G11 VENTILATION PANEL - A4M05391
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)

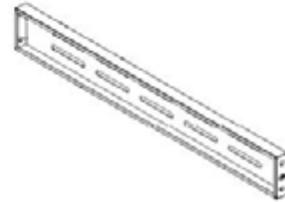

O8 VENTILATION PANEL - A4M03078
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)




D9 DOOR ASSEMBLY R - A4M05385
(x1) 27 15/16"x17 3/8"x15/16" (24x441x710)

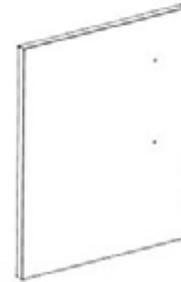

D11 DOOR ASSEMBLY L - A4M05382
(x1) 24 7/16"x19 3/8"x15/16" (24x492x620)




D10 DOOR ASSEMBLY L - A4M05384
(x1) 27 15/16"x17 3/8"x15/16" (24x441x710)

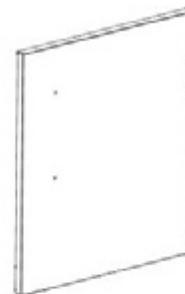

D12 DOOR ASSEMBLY R - A4M05383
(x1) 24 7/16"x19 3/8"x15/16" (24x492x620)




T6 TABLETOP ASSEMBLY - A4M05371
(x1) 35 9/16"x23 11/16"x1 1/4" (32x601.00x904.00)

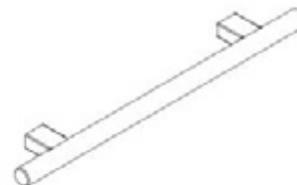

H2 STAINLESS STEEL HANDLE - A4M03024
(x4) 5/8"x1 9/16"x11 13/16" (16x40x300)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

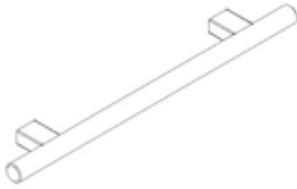


H2 STAINLESS STEEL HANDLE - A4M03024
(x4) 5/8"x1 9/16"x11 13/16" (16x40x300)



A2 MAGNET BRACKET - A4M03026
(x4) 1"x1 1/4"x3 1/8" (25x31x80)




A5 SHELF BRACKET - A4M03141
(x4) 5/8"x7/8"x2 1/16" (16x22x53)

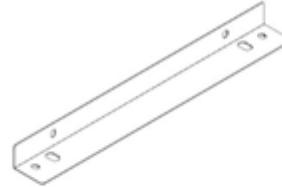


A6 ANGLED BRACKET - A4M03053
(x2) 1 3/8"x1 15/16"x17 1/8" (35x50x435)




A9 HOSE BRACKET ASSEMBLY - A4M03060
(x2) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

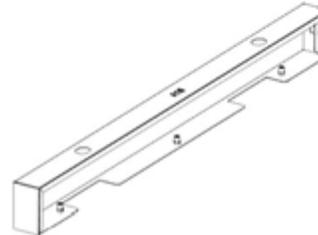

A10 COUNTERTOP BRACKET ASSEMBLY - A4M05377
(x1) 24 5/8"x1 3/8"x2 5/16" (59.00x35.00x625.00)

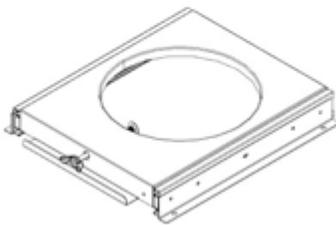

A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x2) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

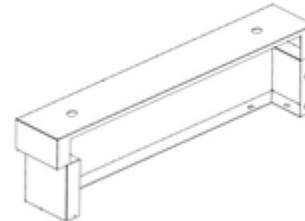

A14 COUNTERTOP BRACKET ASSEMBLY - A4M05373
(x1) 24 5/8"x6 13/16"x4 1/8" (109x172.2x625)



M6 CABINET COUNTERTOP - A4M05378
(x1) 24 3/4"x4 1/8"x11/16" (18.00x105.00x628.00)




M7 CABINET COUNTERTOP - A4M05379
(x1) 24 3/4"x1 3/8"x11/16" (18.00x35.00x628.00)

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS




H101185 | PHILLIPS FLAT HEAD
(x48) | 8-32x.5 BLK



H101103 | TORX SOCKET SCREW
(x11) | 1/4-20 BLK




H101292 | TORX PAN HEAD
(x12) | 1/4-20x13/32" BLK

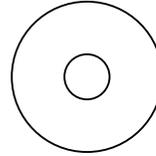


H101053 | STEEL WASHER
(x4) | 6x20 BLK



H101289 | PAN HEAD SCREW
(x17) | 8-32x1/2" SS

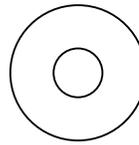


H101054 | SEALANT WASHER
(x4) | 6.5x18 BLK

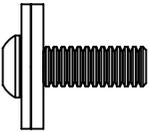


H101202 | TORX PAN HEAD
(x63) | 1/4-20x3/4 ASSY




H101307 | SHOULDER BOLT
(x8) | 8-32x30mm SS




H100147 | TORX BIT
(x1) | T-30




H101106 | SOCKET DRIVER
(x1) |




H101100 | MAGNETIC DRIVER
(x1) |



H101294 | HEX DRIVER
(x1) |

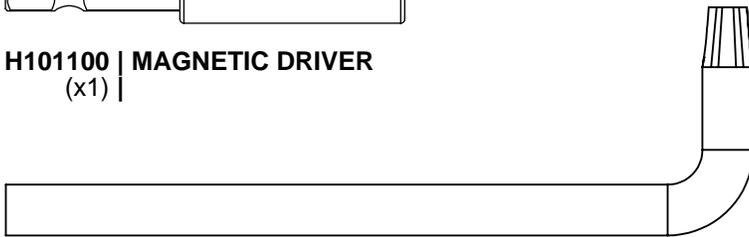

H100114 | TORX BIT
(x1) | T-30

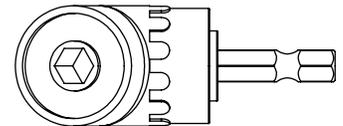

**H101114 | RIGHT ANGLE
DRILL ADAPTER**
(x1) |

PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the parts and hardware.


METAL PARTS:

- Organize metal parts by the three-digit, alpha-numeric number stamped on each bag (ex. P01).
- If there are multiple parts with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the parts or on the end of the parts.
- Allow yourself plenty of room - the parts can take up a significant amount of space.

WOOD PARTS:

- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY PART OR STEP NUMBER.

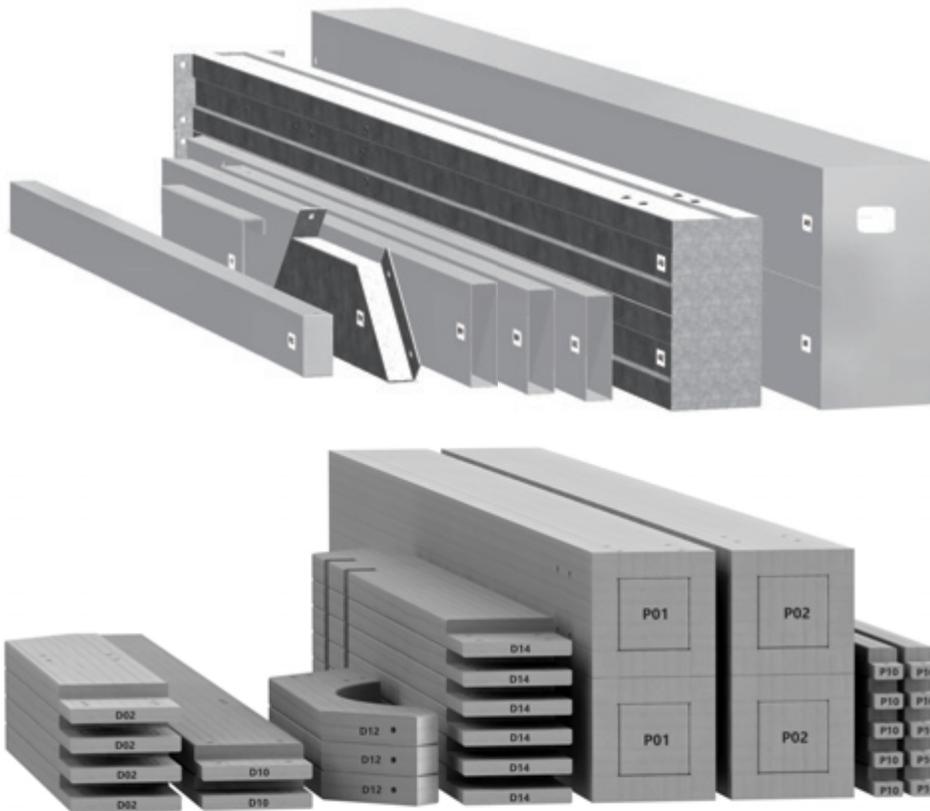

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (e.g. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.



PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or
Electric Drill




Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" &
7/16" Drill Bits



Phillips Screw Driver

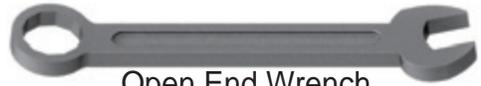

Open End Wrench
7/16"



3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets 1/2" & 7/16"
Deep Sockets




Claw Hammer



Rubber Mallet -
Optional



Tape Measure

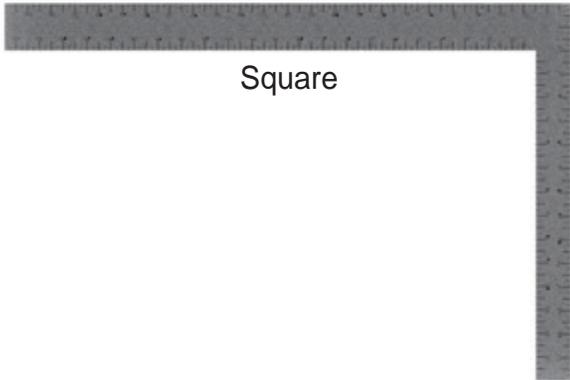

Square



Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.

1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)




BILT.[®]

Scan for easy
3D instructions

Download the BILT app
before you begin

Download on the
App Store

GET IT ON
Google Play

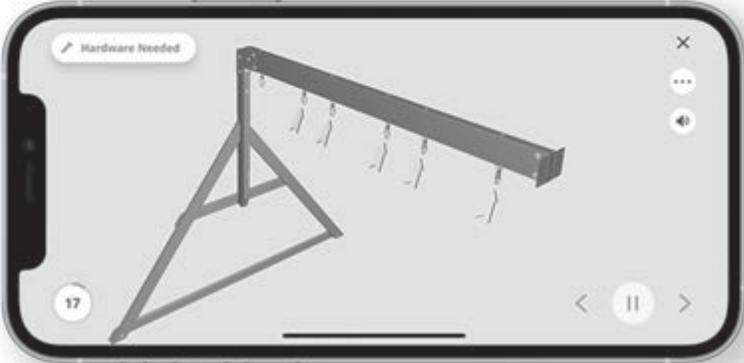

Hardware Needed

17


< || >

The image is a promotional graphic for the BILT app. It features the BILT logo at the top left, a QR code at the top right, and the text 'Scan for easy 3D instructions' in a large, bold font. Below this, it says 'Download the BILT app before you begin'. There are two buttons for downloading the app: 'Download on the App Store' and 'GET IT ON Google Play'. At the bottom, there is a smartphone displaying a 3D assembly instruction screen. The screen shows a 3D model of a structure with a horizontal beam and a triangular support. The screen has a 'Hardware Needed' button at the top left, a close button at the top right, and a page number '17' at the bottom left. There are also navigation arrows and a play/pause button at the bottom right of the screen.

**PLEASE FOLLOW THE INSTRUCTIONS IN THIS
MANUAL TO ENSURE PROPER ASSEMBLY.**


**STEP 1 - 10 WILL HAVE YOU DISASSEMBLE THE
CABINET TO CHANGE SIDE PANEL A4M04466 WITH
SIDE PANEL A4M05392.
STEPS 11 - 51 WILL COMPLETE THE ASSEMBLY.**

STEP 1 - CABINET DRAWER DISASSEMBLY

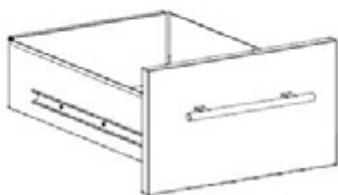

DRAWER ASSEMBLY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- PULL OUT THE DRAWER, THEN MOVE PLASTIC CLIP UP AT LEFT SIDE AND MOVE PLASTIC CLIP DOWN AT RIGHT SIDE AT SAME TIME TO REMOVE DRAWER FROM CABINET.
- KEEP CABINET DRAWERS TO BE USED FOR STEP 44.

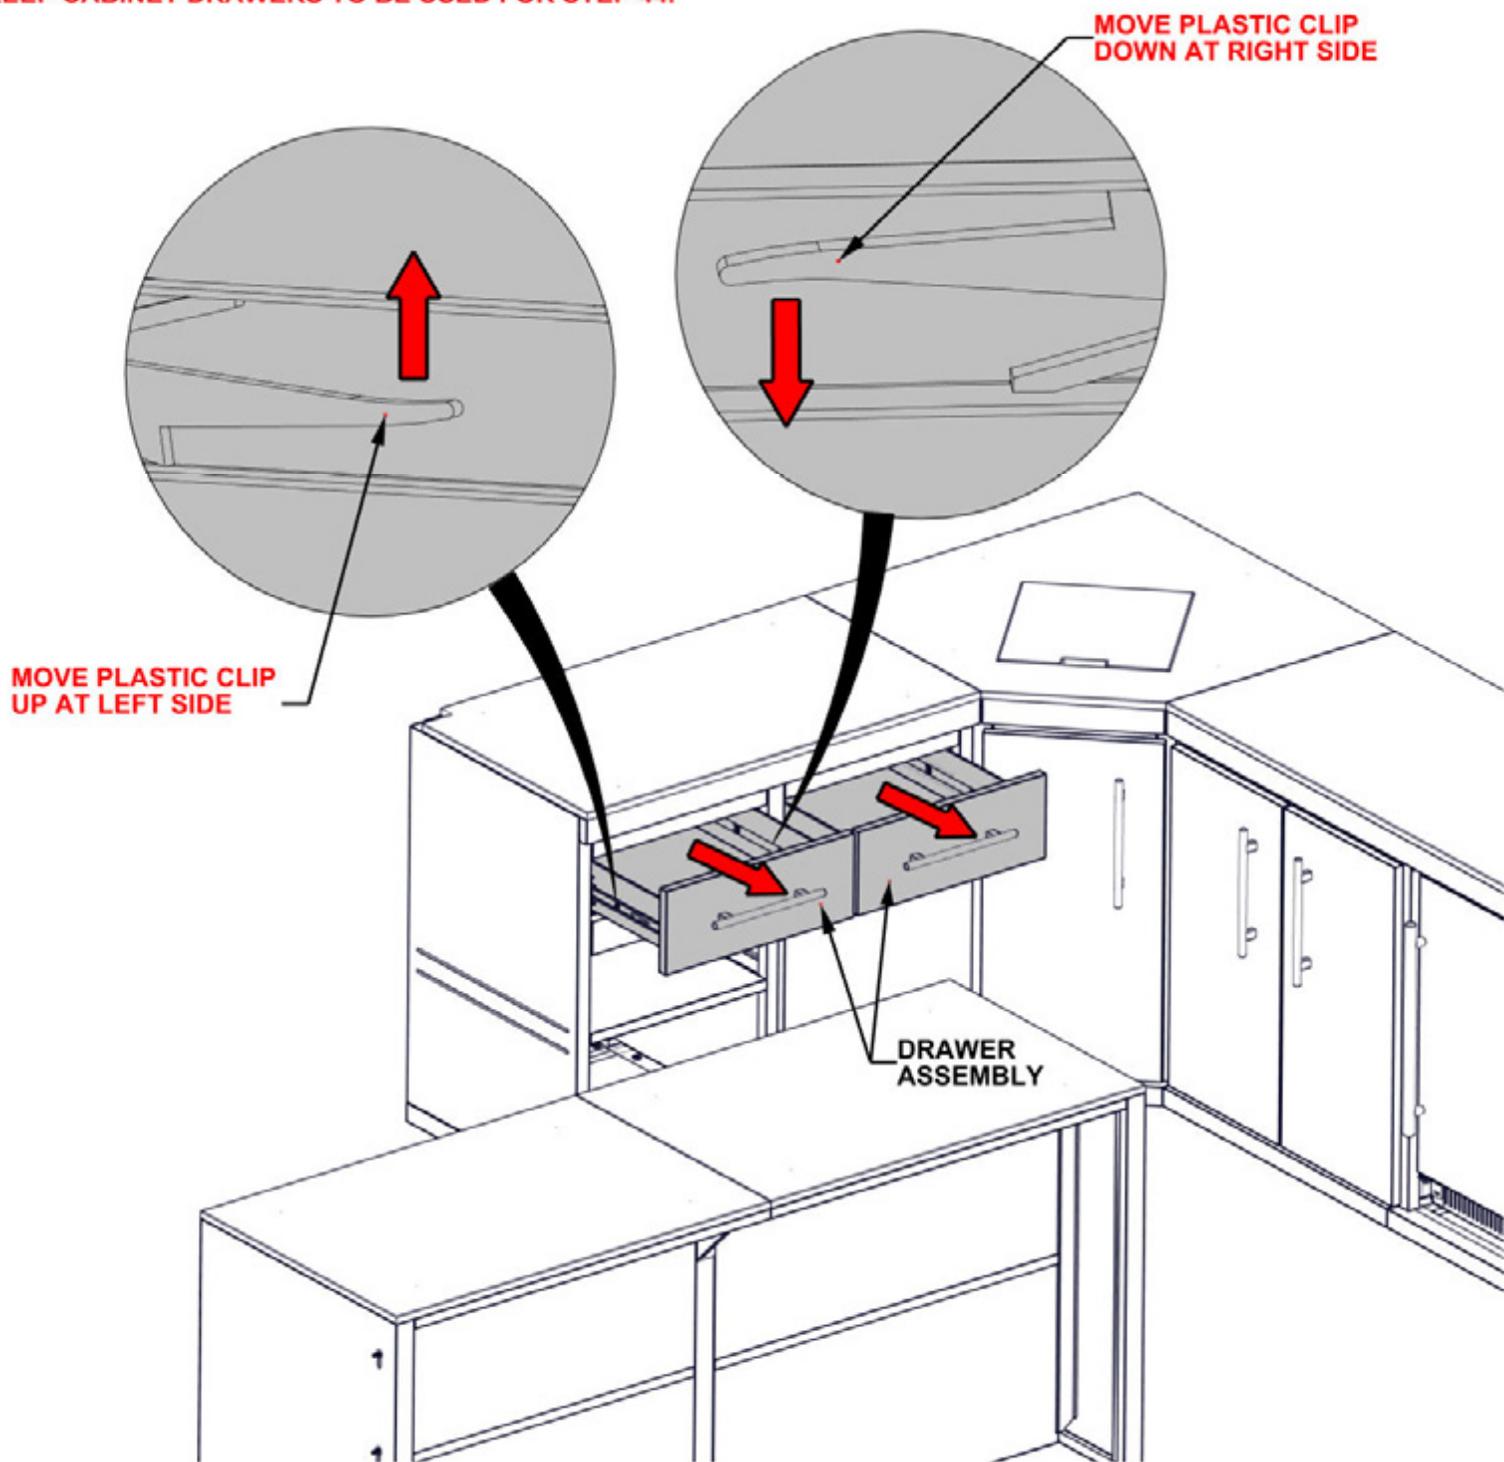


STEP 2 - CABINET DOOR DISASSEMBLY

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW




D8 LEFT CABINET DOOR ASSEMBLY - A4M04497
(x1) 23 1/4"x20 5/16"x15/16" (24x515.2x590.5)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **DISASSEMBLE LEFT DOOR AND HARDWARE.**
- **KEEP LEFT DOOR AND HARDWARE TO BE USED FOR STEP 45.**

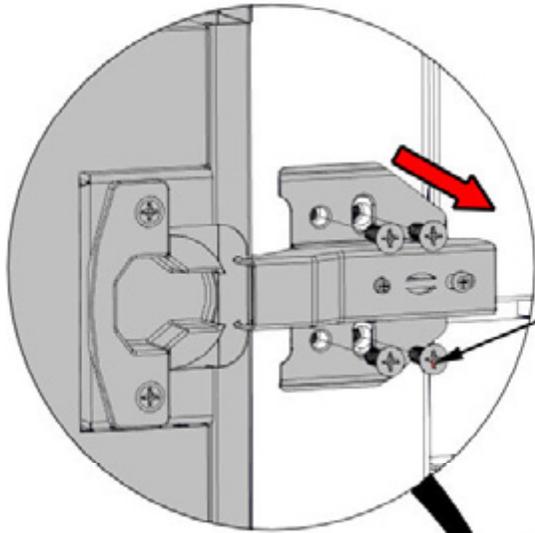

1185 (x8)
PHILLIPS FLAT HEAD 8-32x.5 SCREW

D8 (x1)
LEFT CABINET
DOOR ASSEMBLY

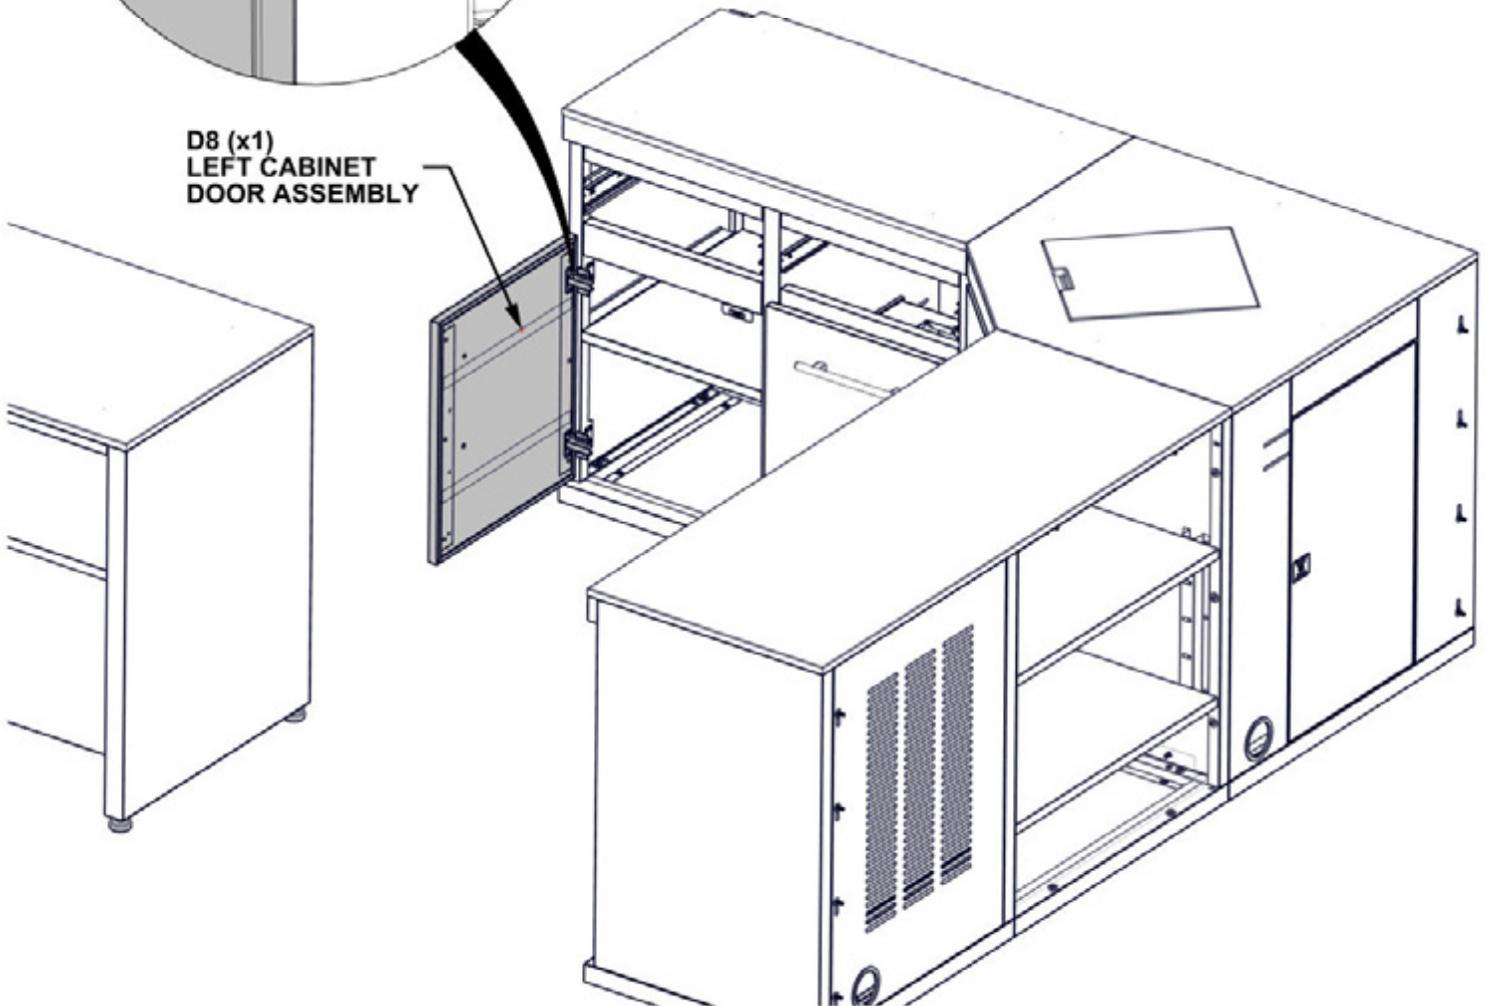


STEP 3 - TRASH CAN DISASSEMBLY




TRASH CAN ASSEMBLY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- PULL OUT THE TRASH CAN, THEN MOVE PLASTIC CLIP UP AT LEFT SIDE AND MOVE PLASTIC CLIP DOWN AT RIGHT SIDE AT SAME TIME TO REMOVE TRASH CAN FROM CABINET.
- KEEP TRASH CAN TO BE USED FOR STEP 43.

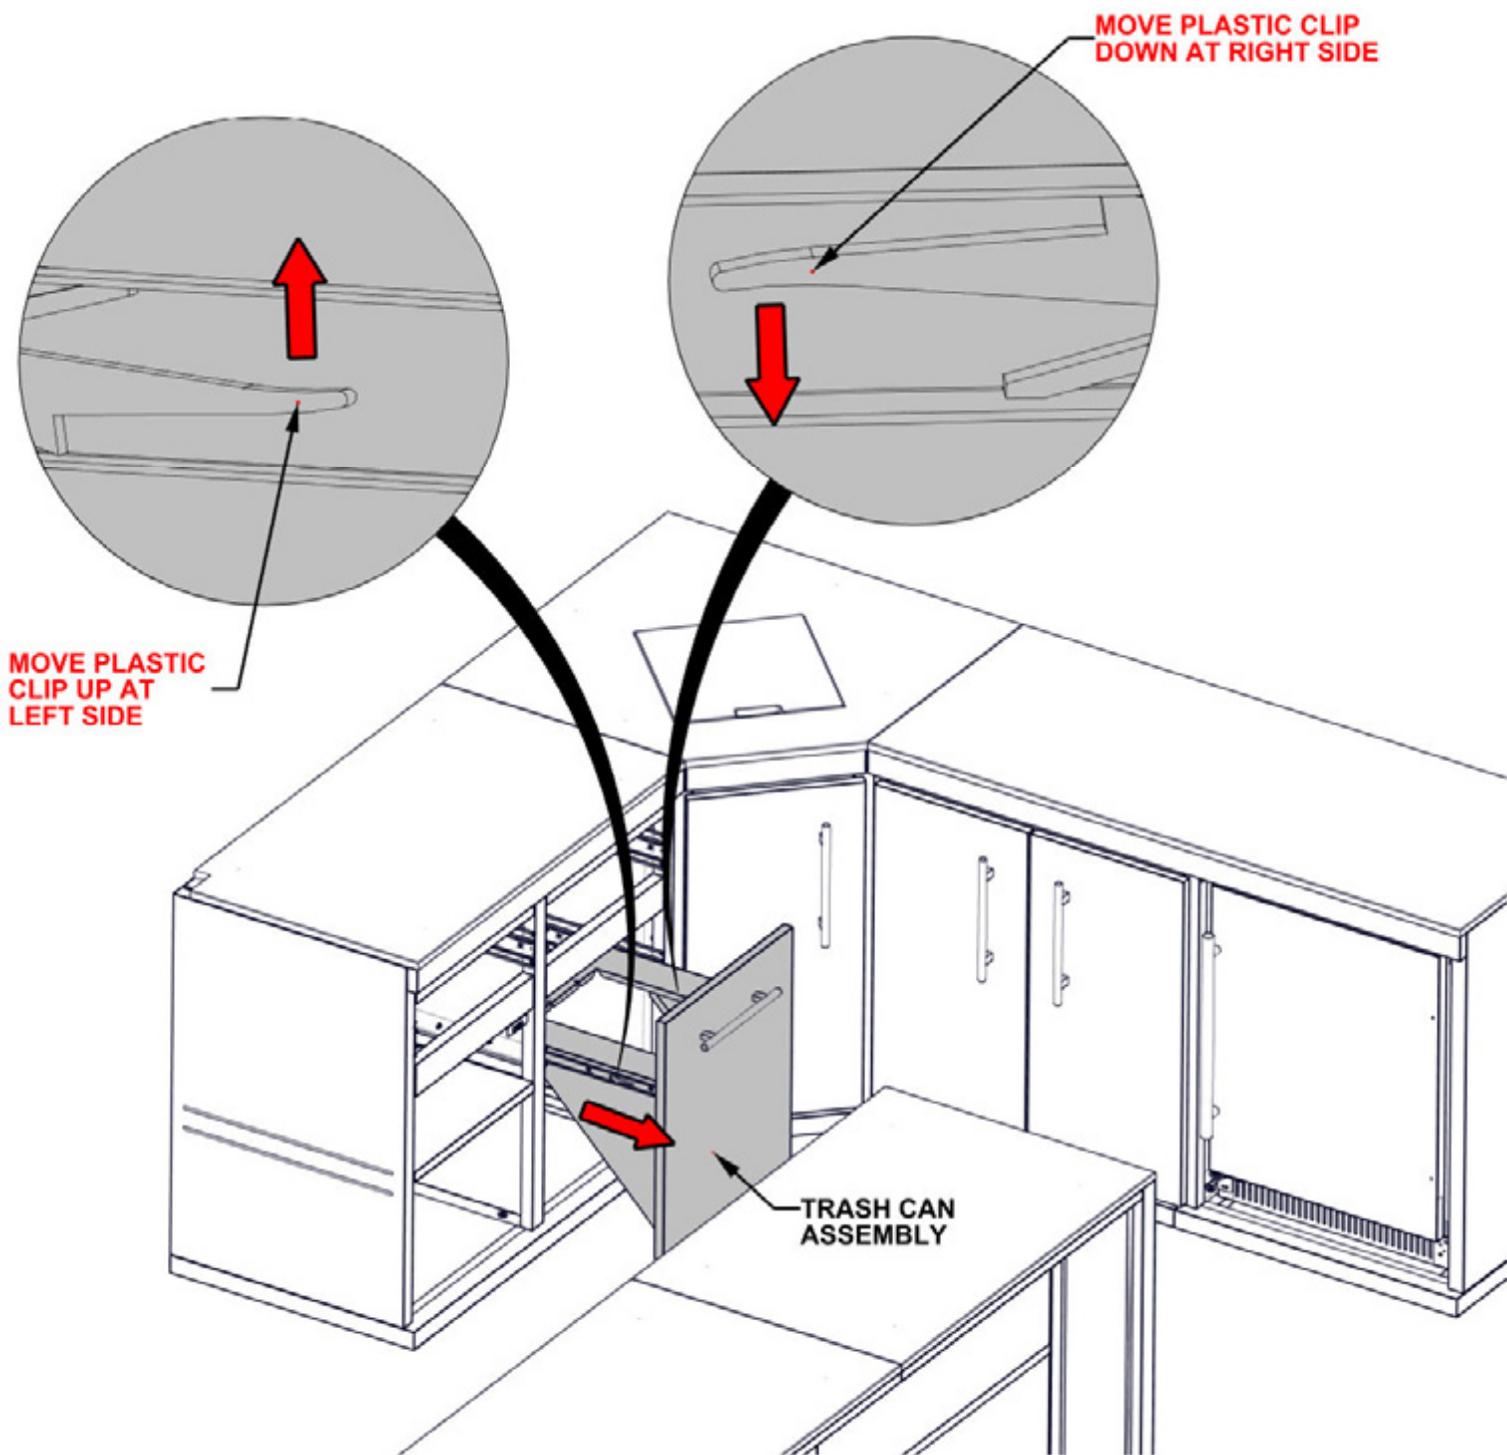


STEP 4 - STORAGE CABINET COUNTERTOP DISASSEMBLY

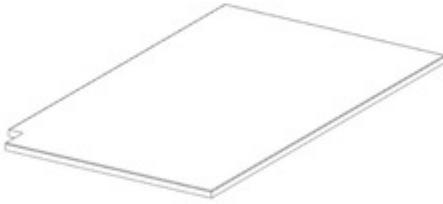

Qty	PartNo	Description
4	H101054	SEALANT WASHER
4	H101053	STEEL WASHER 6x20
4	H101292	TORX PAN HEAD 1/4-20x13/32"

M3 LEFT CABINET COUNTERTOP - A4M04482
 (x1) 42 7/16"x24 3/4"x11/16" (18x628.5x1077.5)


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **DISASSEMBLE STORAGE CABINET COUNTERTOP AND HARDWARE.**
- **KEEP STORAGE CABINET COUNTERTOP AND HARDWARE TO BE USED FOR STEP 42A-B.**

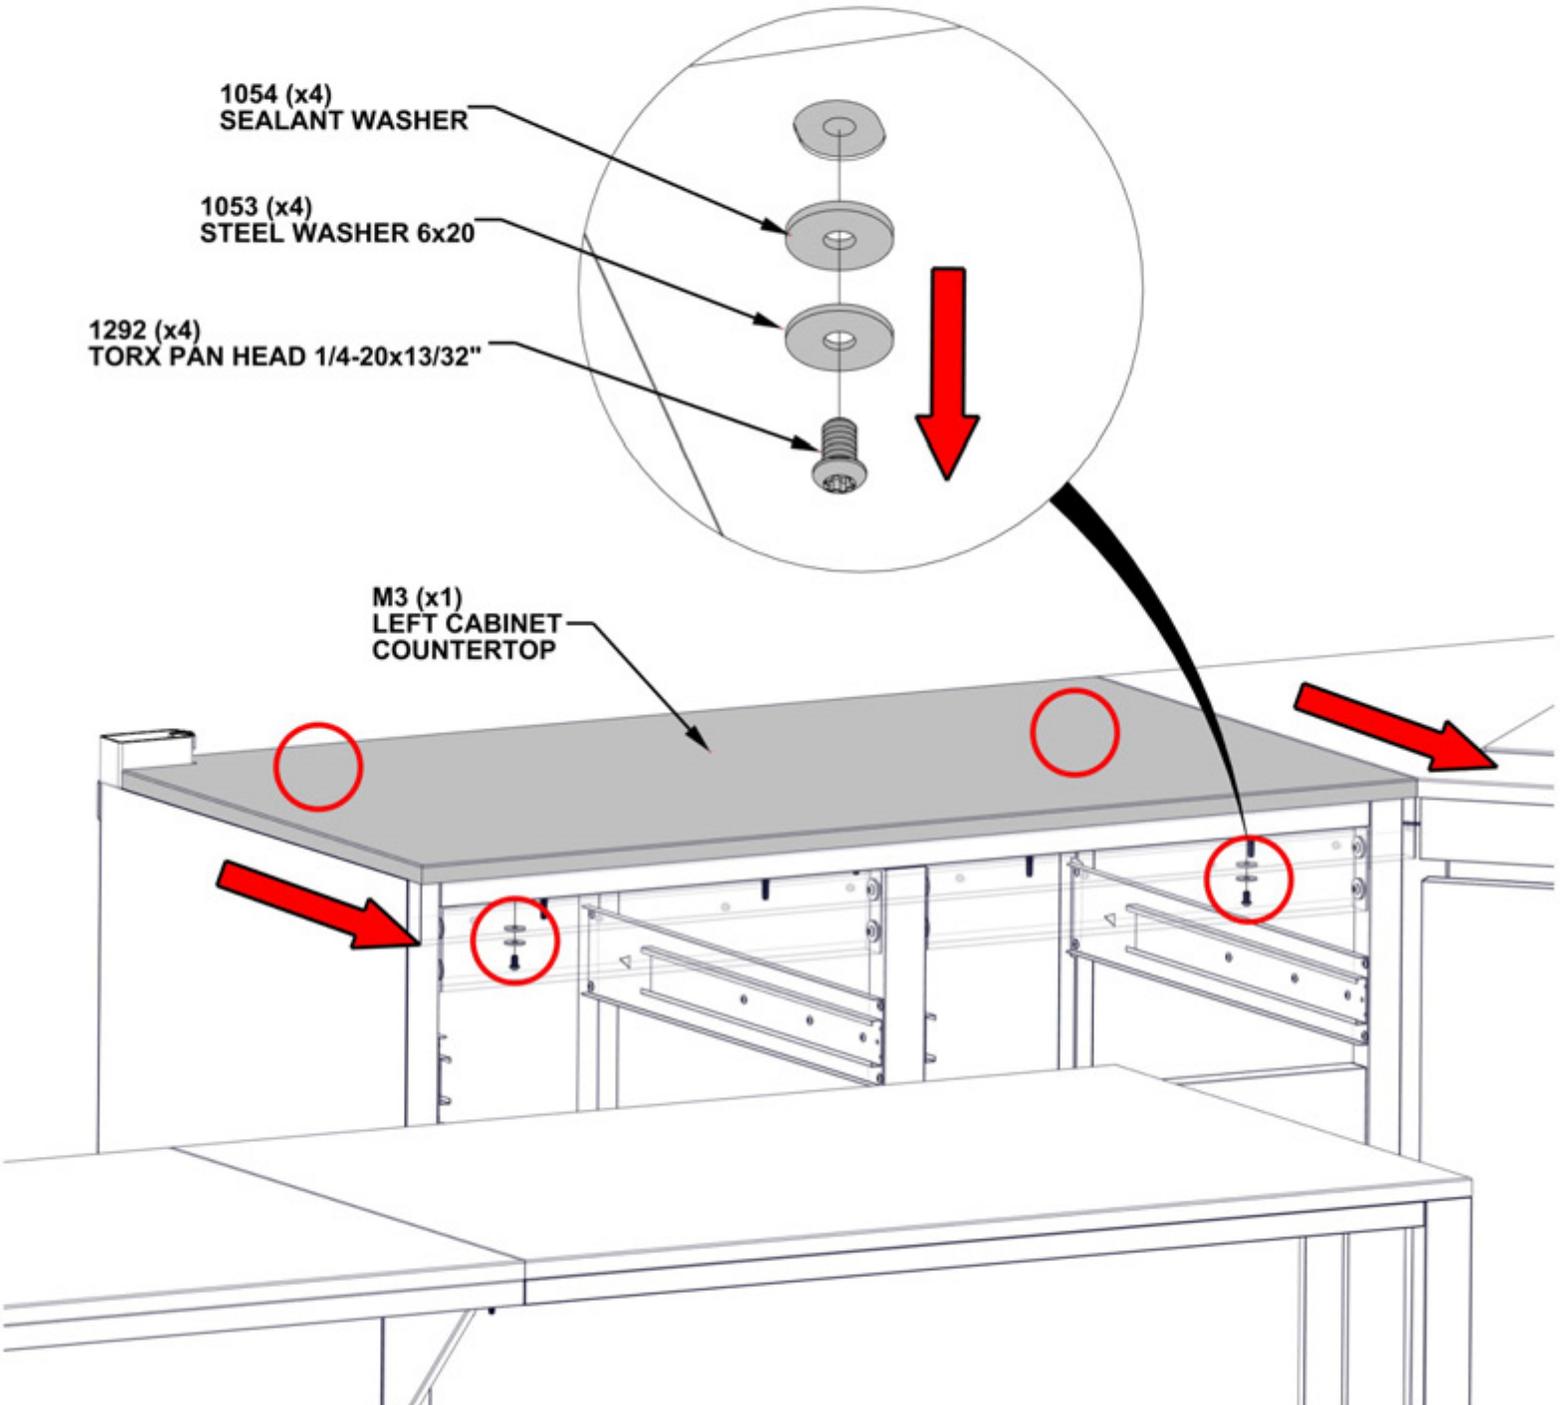

STEP 5 - STORAGE CABINET DISASSEMBLY


Qty	PartNo	Description
6	H101132	TORX SOCKET SCREW SHORT 1/4-20

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **DISASSEMBLE HARDWARE.**
- **KEEP HARDWARE TO BE USED FOR STEP 15C.**

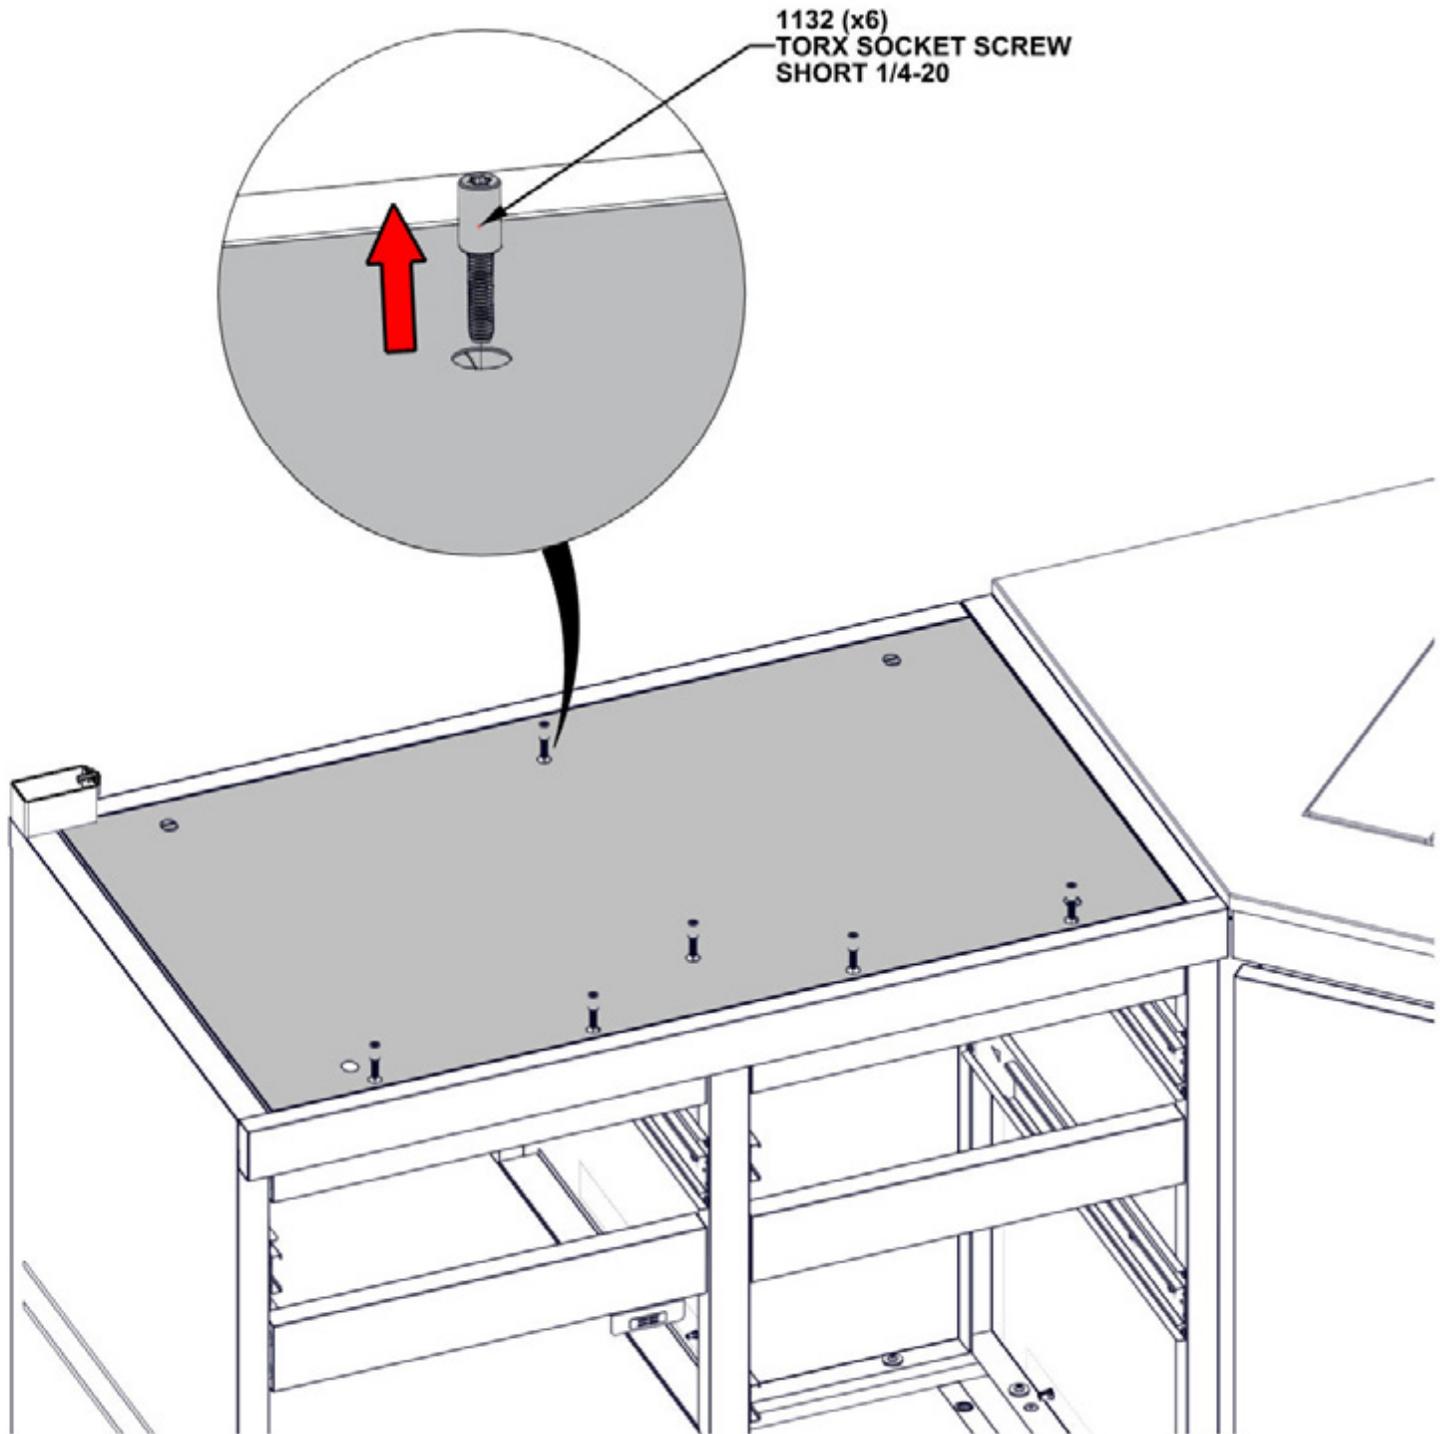

STEP 6 - STORAGE CABINET DISASSEMBLY


Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

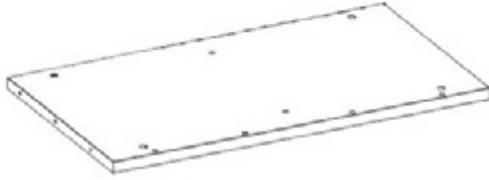


T4 LEFT CABINET TABLETOP PANEL ASSEMBLY - A4M04468
(x1) 39 9/16"x22 7/16"x1 3/16" (30x569.5x1004.5)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **DISASSEMBLE TABLETOP PANEL AND HARDWARE.**
- **KEEP TABLETOP PANEL AND HARDWARE TO BE USED FOR STEP 15A-B.**

1202 (x9)
TORX PAN HEAD 1/4-20x3/4 ASSY

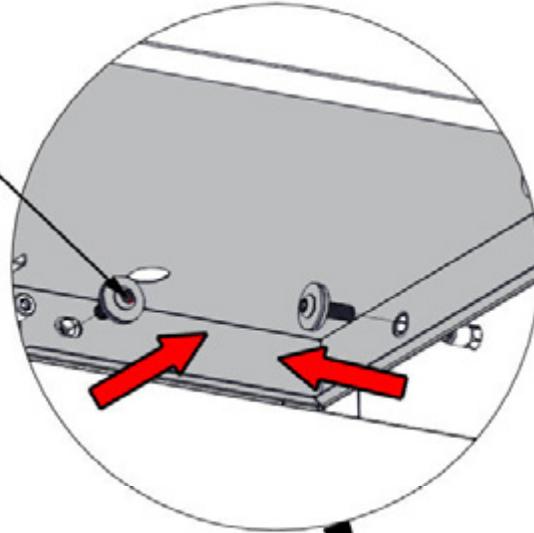


T4 (x1)
LEFT CABINET
TABLETOP PANEL
ASSEMBLY

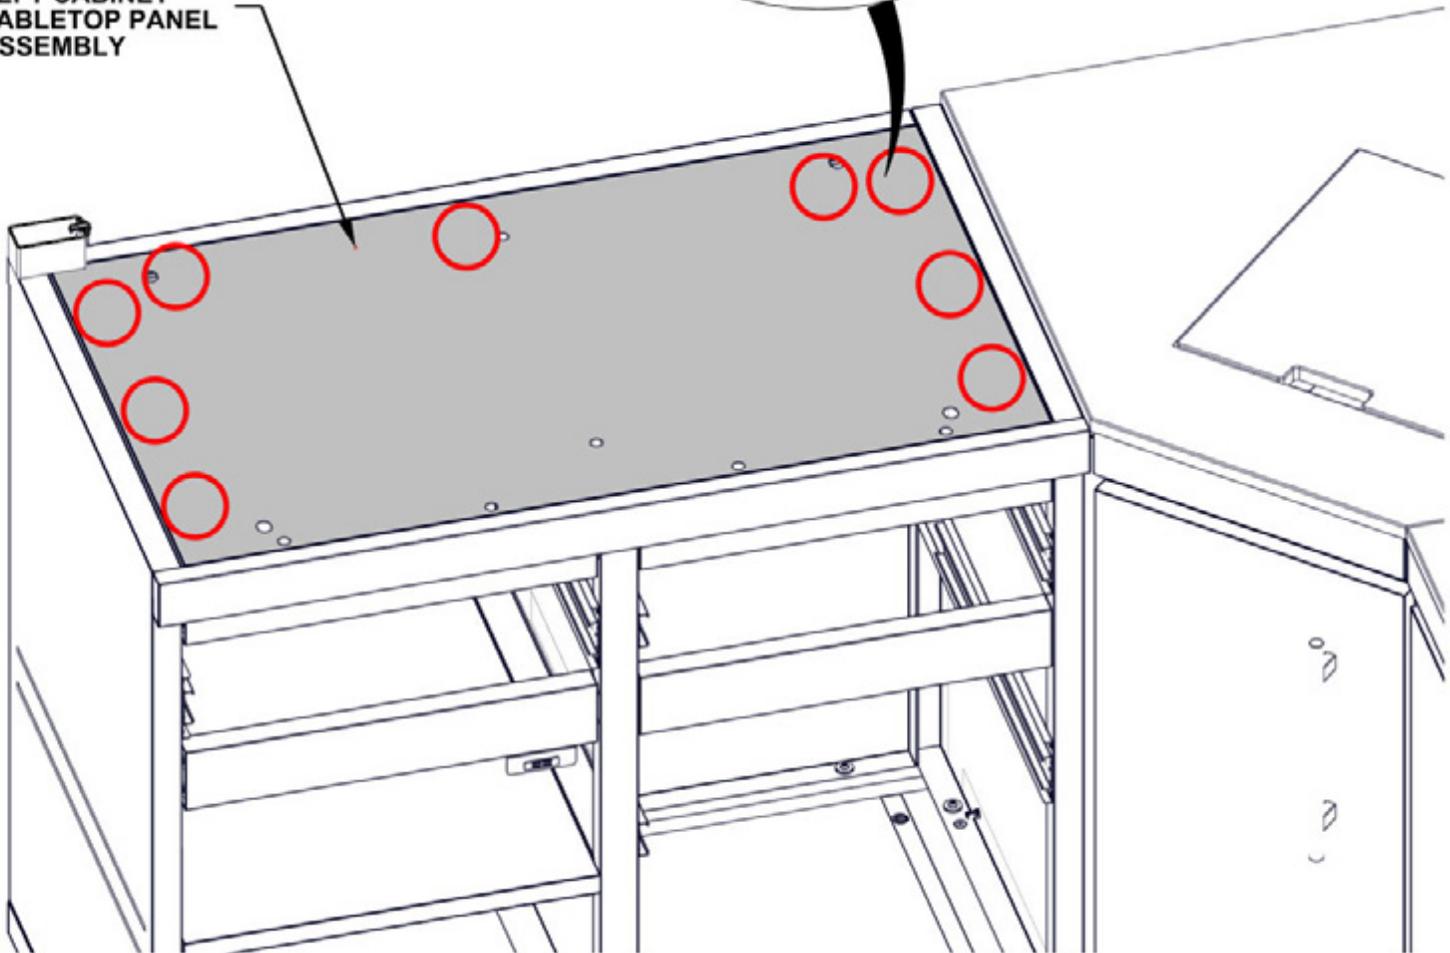


STEP 7 - STORAGE CABINET DISASSEMBLY

Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




H6 LEFT CABINET TRIM PANEL ASSEMBLY R - A4M04471
(x1) 42 7/16"x4 3/8"x2 3/16" (56x111.5x1078.0)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **DISASSEMBLE TRIM PANEL ASSEMBLY AND HARDWARE.**
- **KEEP TRIM PANEL ASSEMBLY AND HARDWARE TO BE USED FOR STEP 14.**

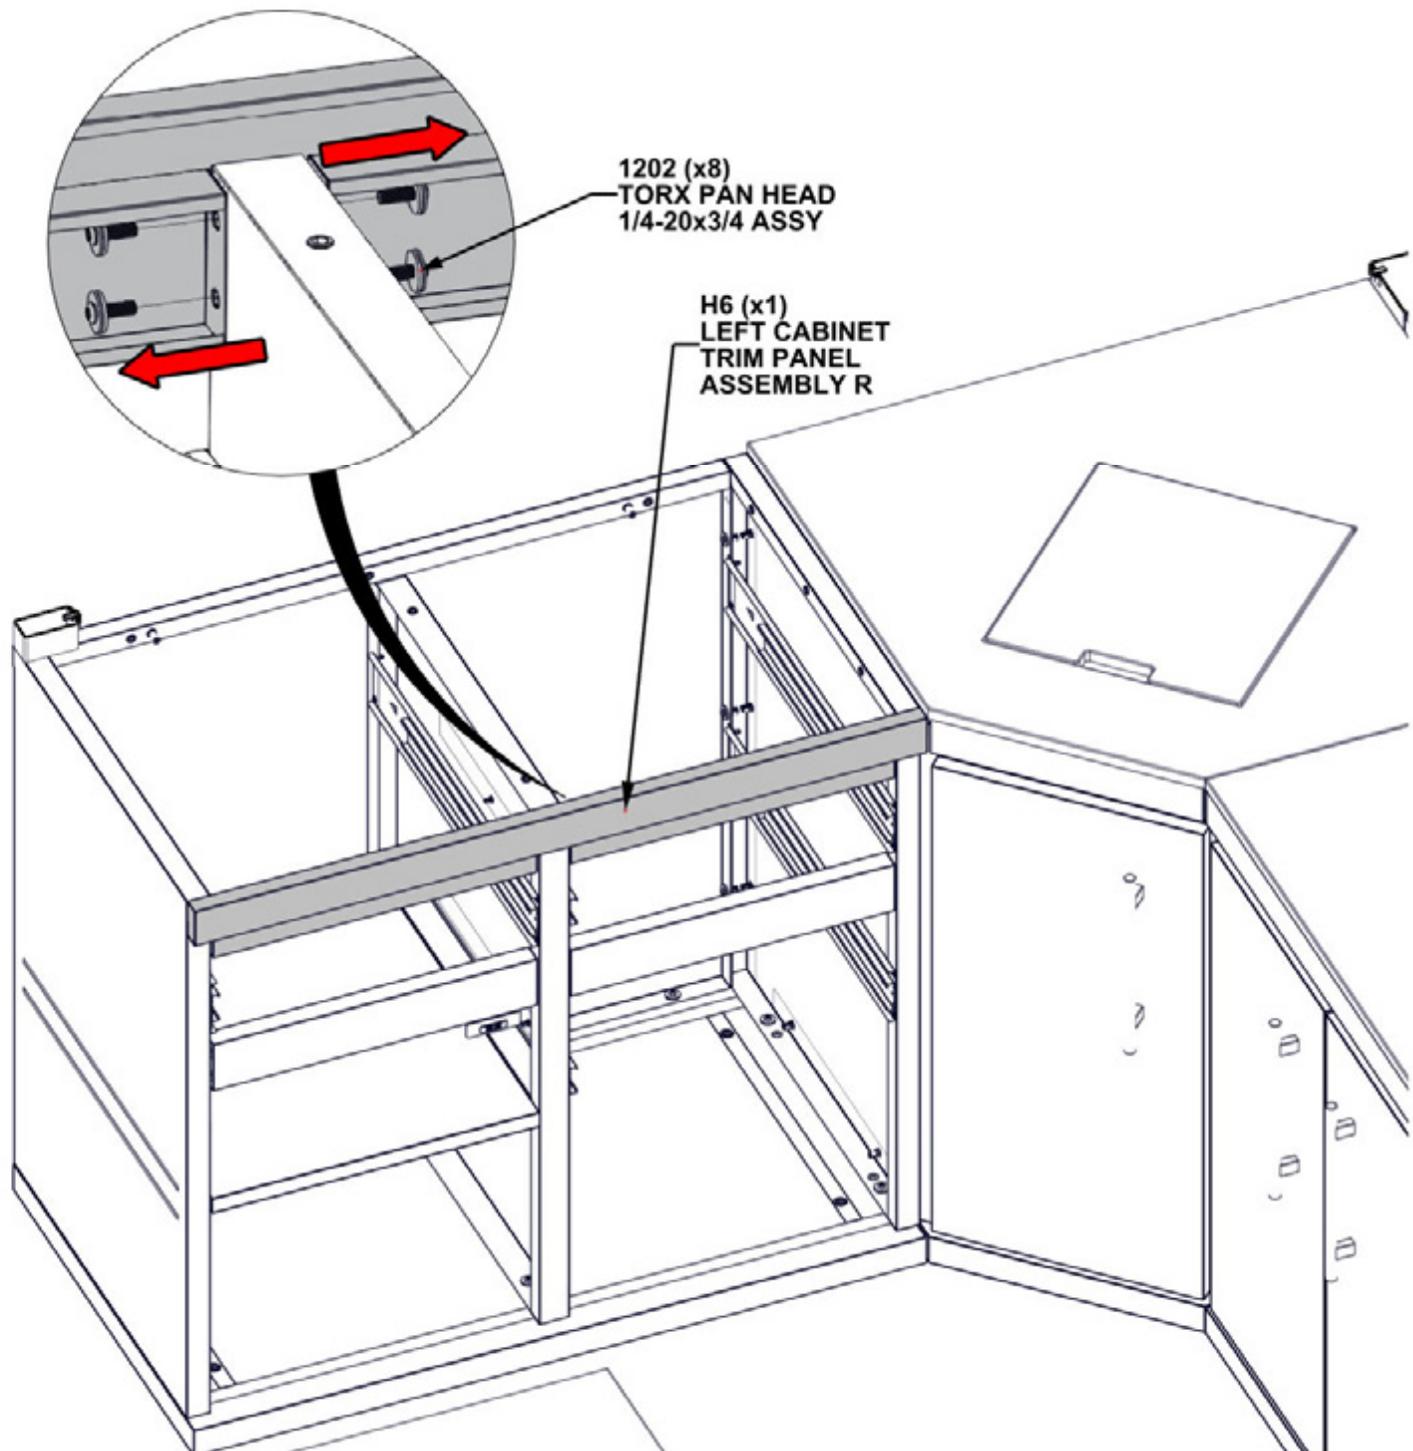


STEP 8A - STORAGE CABINET DISASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

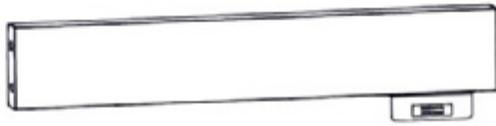


HORIZONTAL BEAM ASSEMBLY

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **DISASSEMBLE HORIZONTAL BEAM ASSEMBLY AND HARDWARE.**
- **KEEP HORIZONTAL BEAM ASSEMBLY AND HARDWARE TO BE USED FOR STEP 13C.**

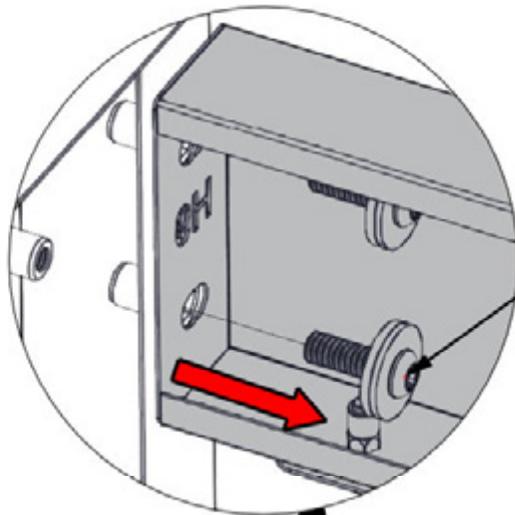


1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

HORIZONTAL BEAM ASSEMBLY

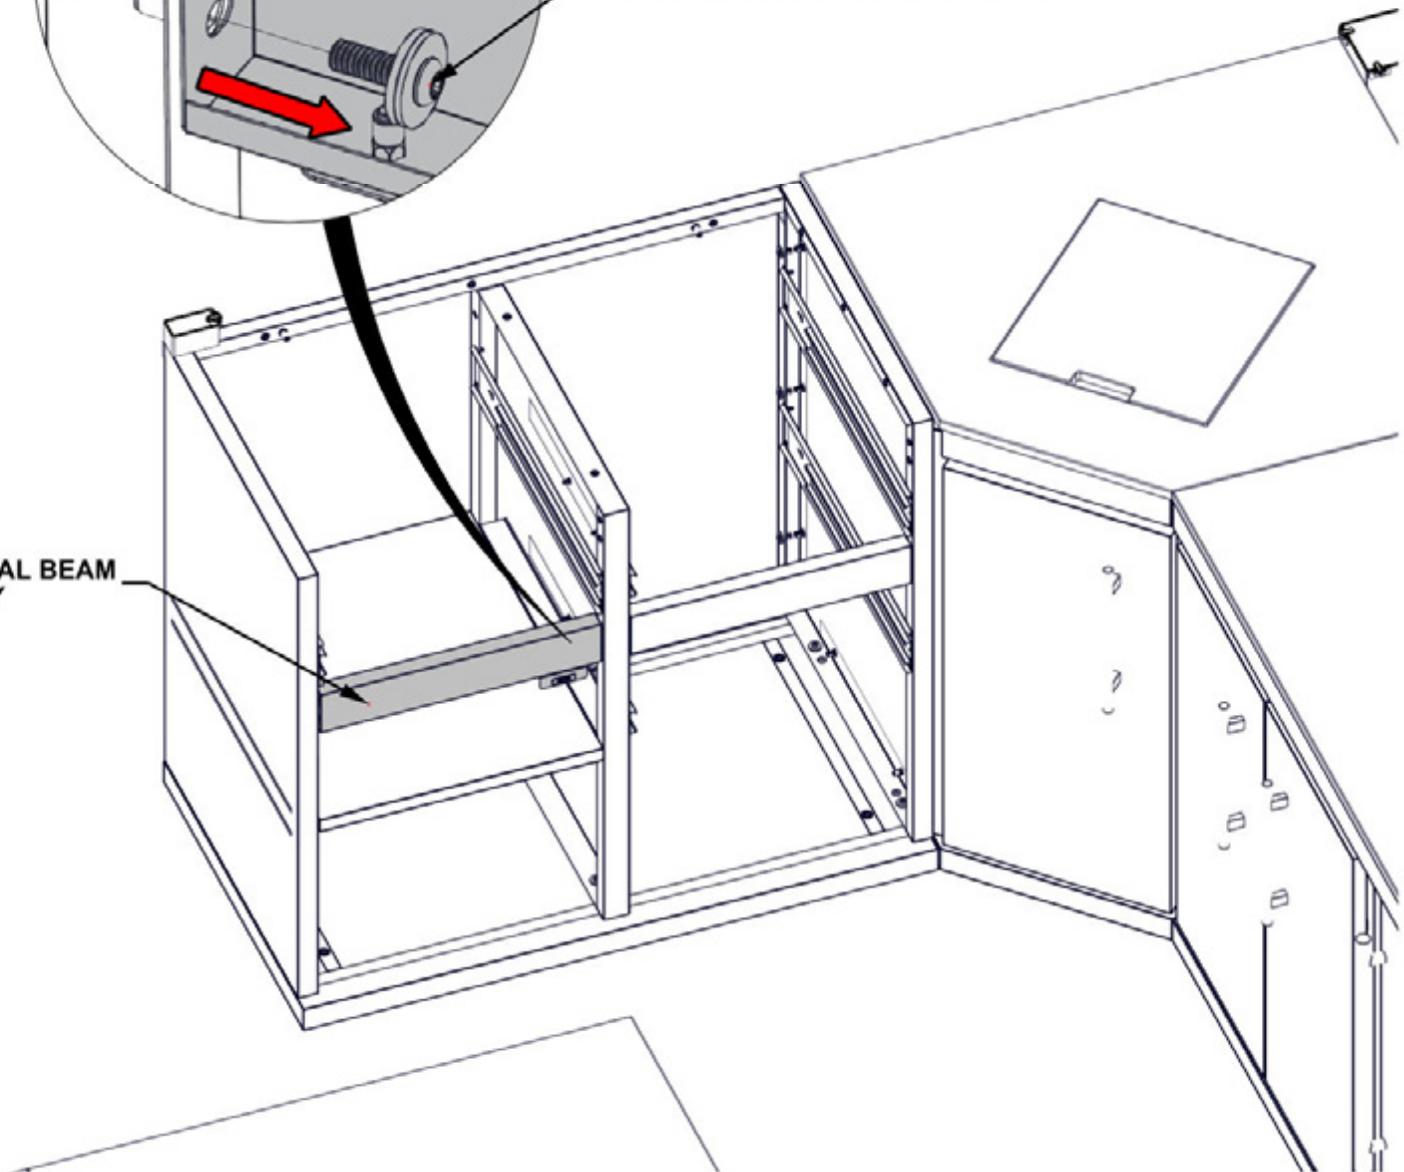


STEP 8B - STORAGE CABINET DISASSEMBLY

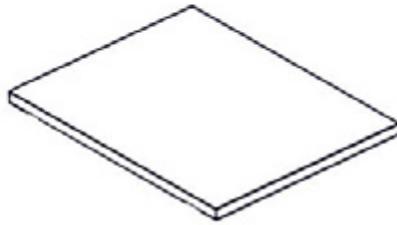


L5 SHELF - A4M05765
(x1) 23 5/8"x19"x1" (25x482x600)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- REMOVE SHELF FROM SHELF BRACKETS.
- KEEP SHELF TO BE USED FOR STEP 13B.

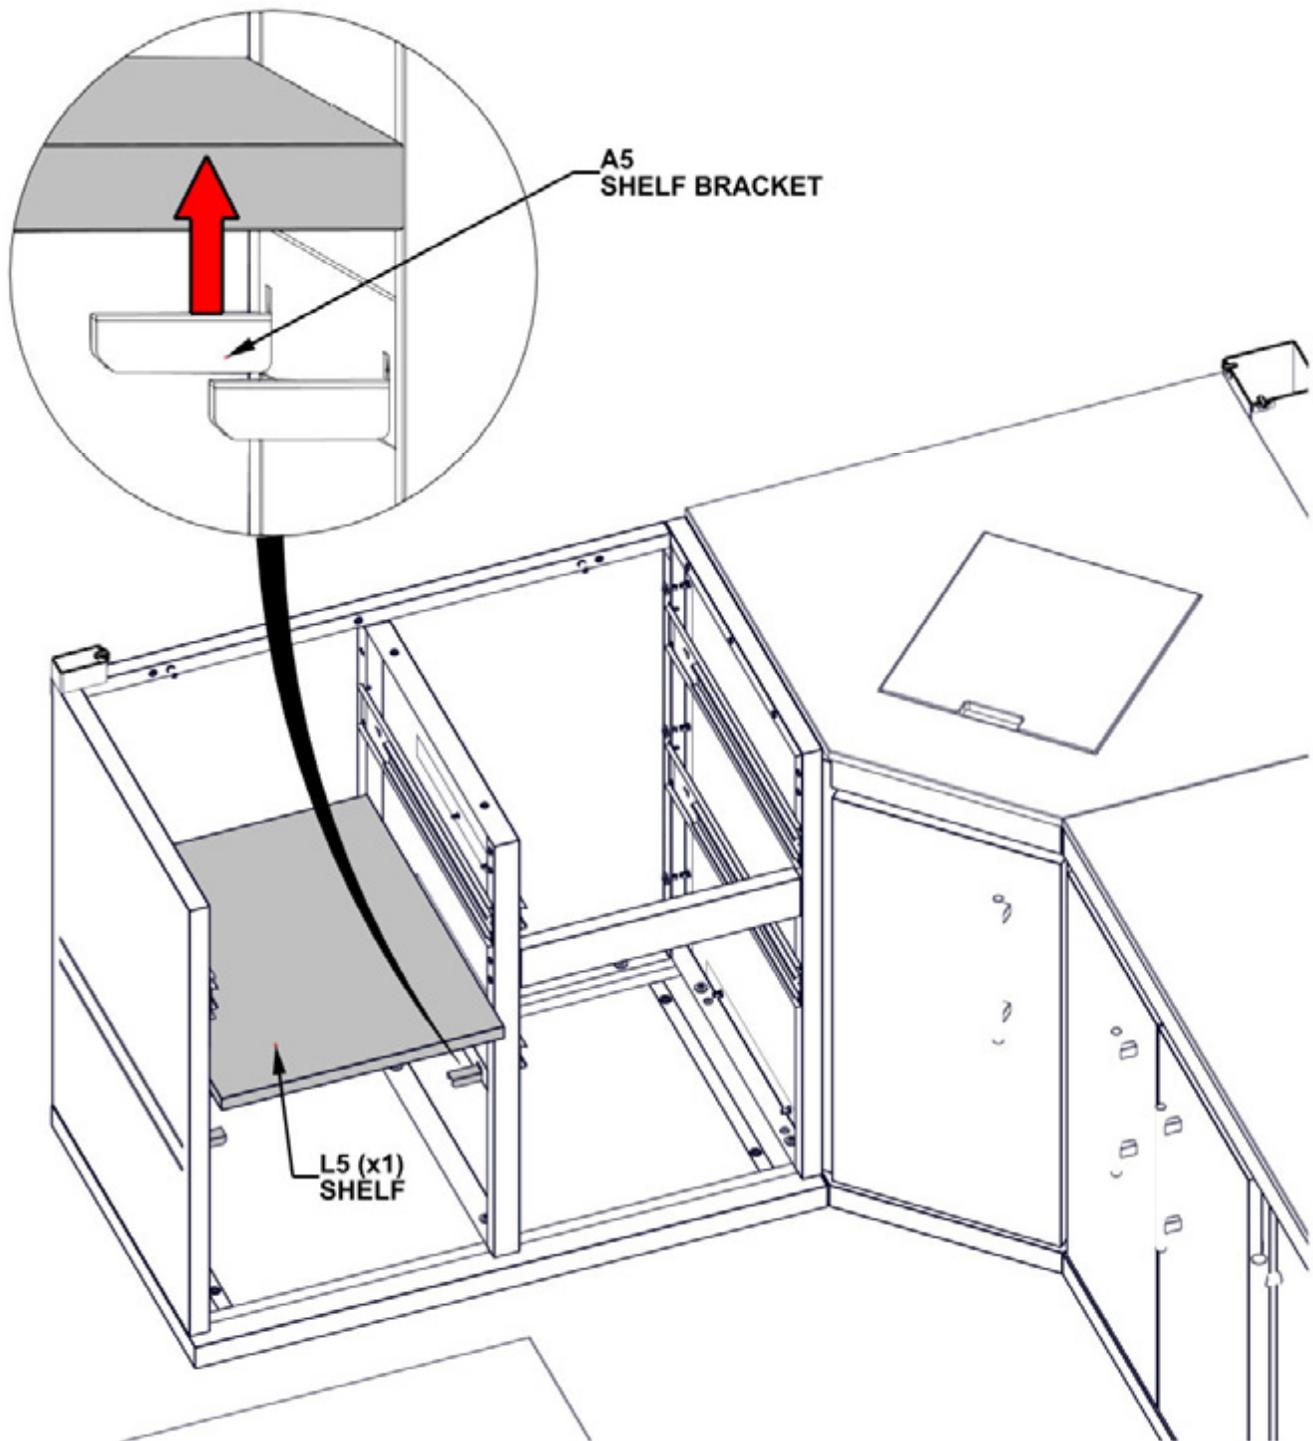



STEP 8C - STORAGE CABINET DISASSEMBLY

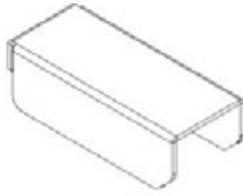

A5 SHELF BRACKET - A4M03141
(x4) 5/8"x7/8"x2 1/16" (16x22x53)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- REMOVE SHELF BRACKETS.
- KEEP SHELF BRACKETS TO BE USED FOR STEP 13A.

A5 (x4)
SHELF BRACKET

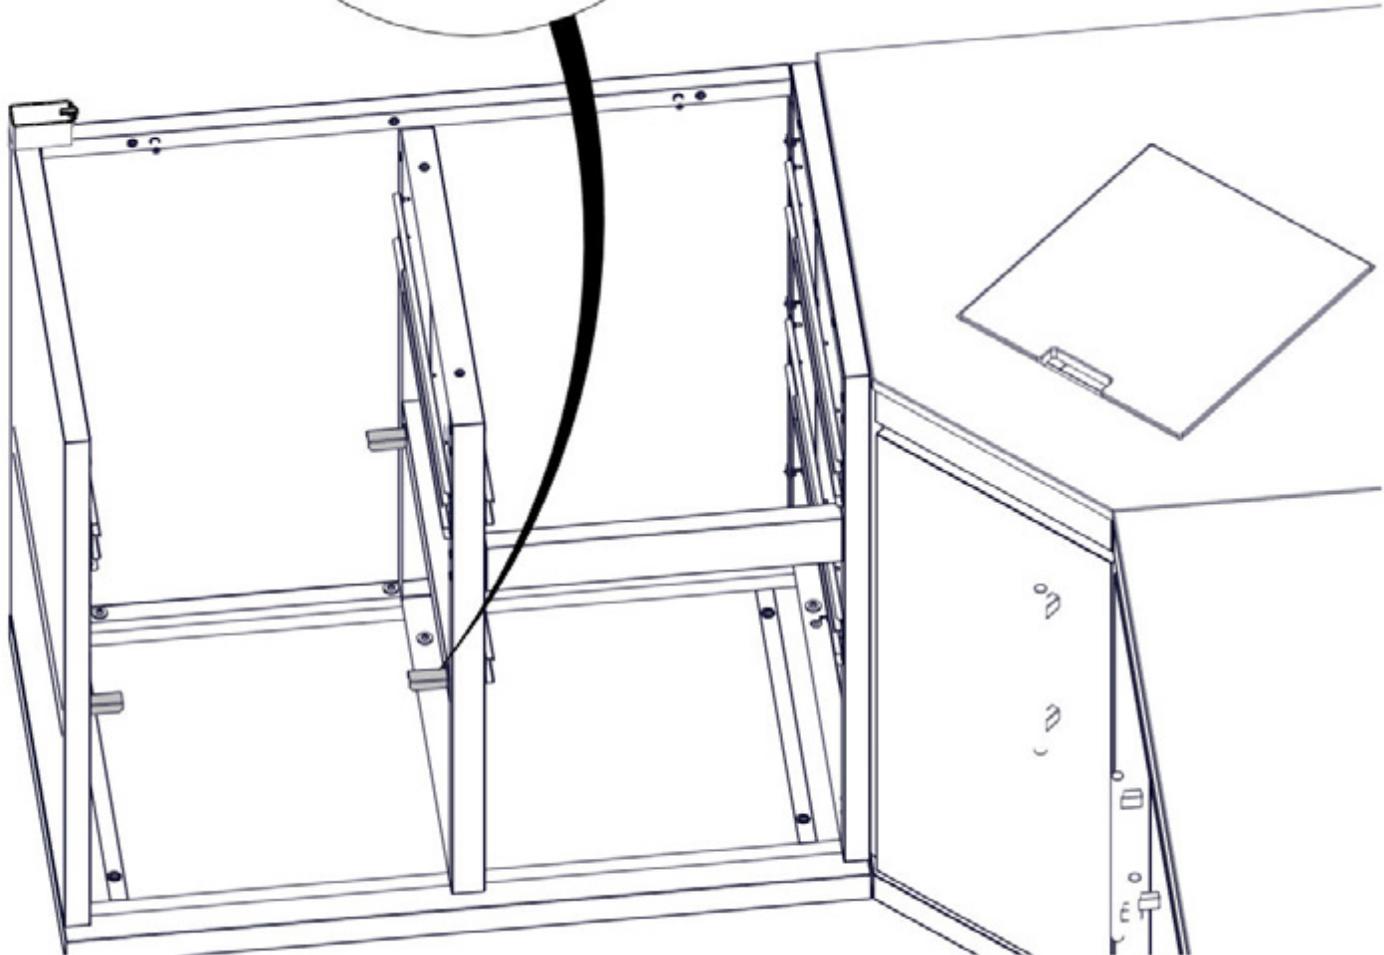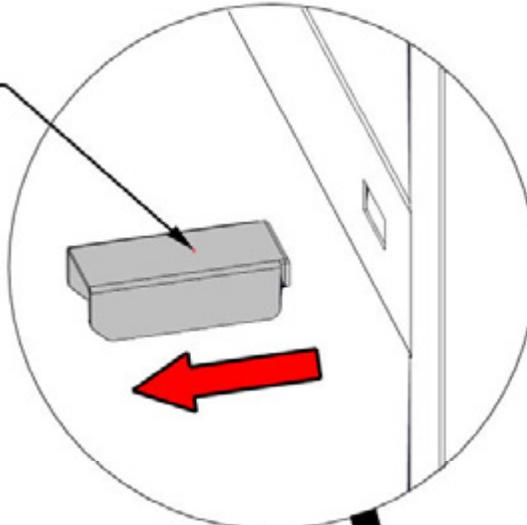

STEP 9 - STORAGE CABINET DISASSEMBLY

Qty	PartNo	Description
7	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




S5 LEFT CABINET SIDE PANEL ASSEMBLY L - A4M04466
(x1) 35 1/4"x23 11/16"x1 7/8" (48.3x601x896)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **DISASSEMBLE SIDE PANEL ASSEMBLY AND HARDWARE.**
- **KEEP HARDWARE TO BE USED FOR STEP 12A-B.**


1202 (x5)
TORX PAN HEAD
1/4-20x3/4 ASSY

1202 (x2)
TORX PAN HEAD
1/4-20x3/4 ASSY

S5 (x1)
LEFT CABINET
SIDE PANEL
ASSEMBLY L

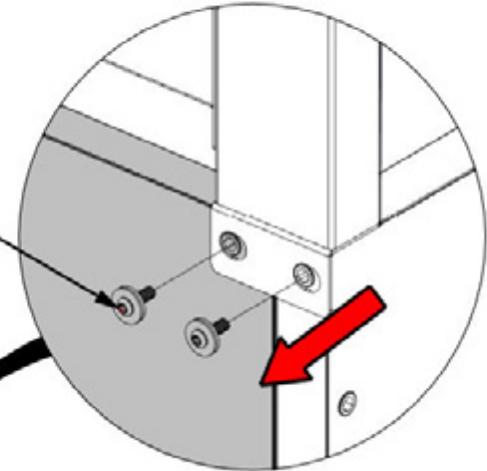


BACK VIEW

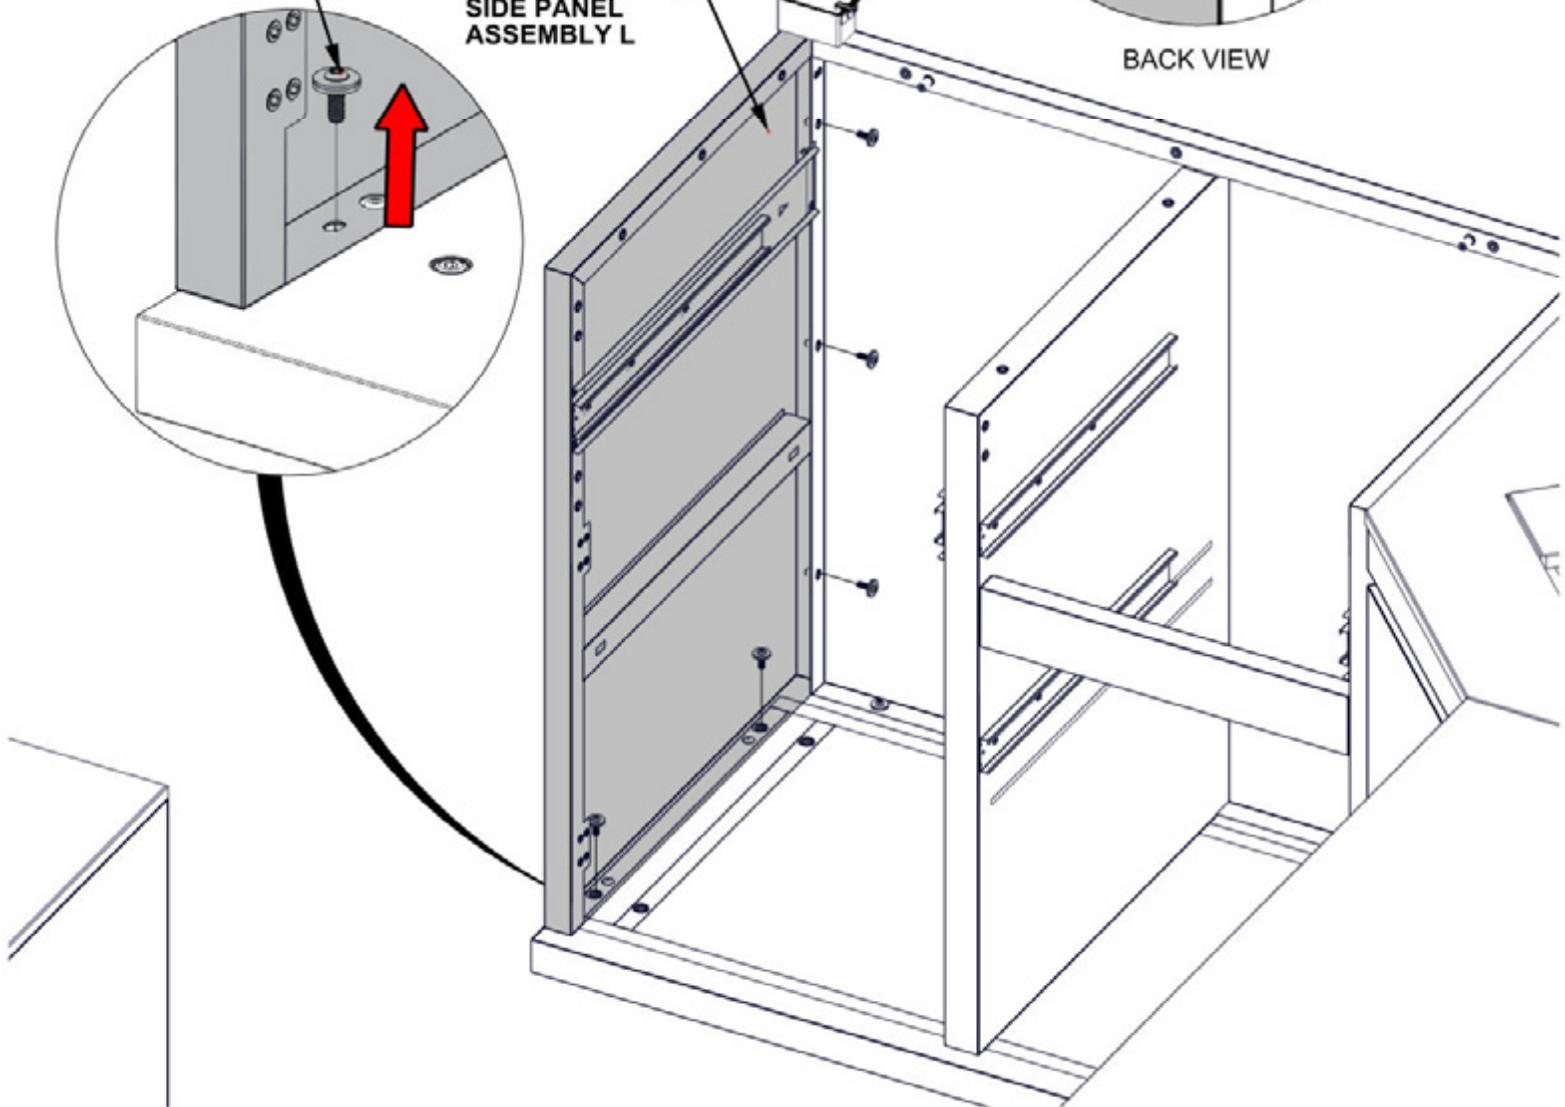


STEP 10 - STORAGE CABINET DISASSEMBLY

Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

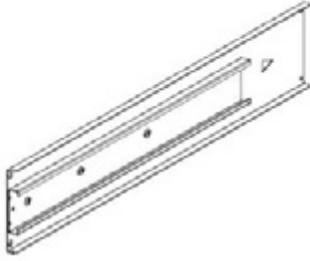

A10 SLIDE BRACKET ASSEMBLY - A4M03083
(x1) 15/16"x3 3/8"x22 5/8" (23x85x575)

- DISASSEMBLE A4M03083 SLIDE BRACKET ASSEMBLY FROM SIDE PANEL A4M04466. SIDE PANEL CAN BE DISCARDED AND WILL NOT BE USED IF ADDING APPLIANCES TO YOUR KITCHEN.
- KEEP SLIDE BRACKET ASSEMBLY AND HARDWARE TO BE USED FOR STEP 11.

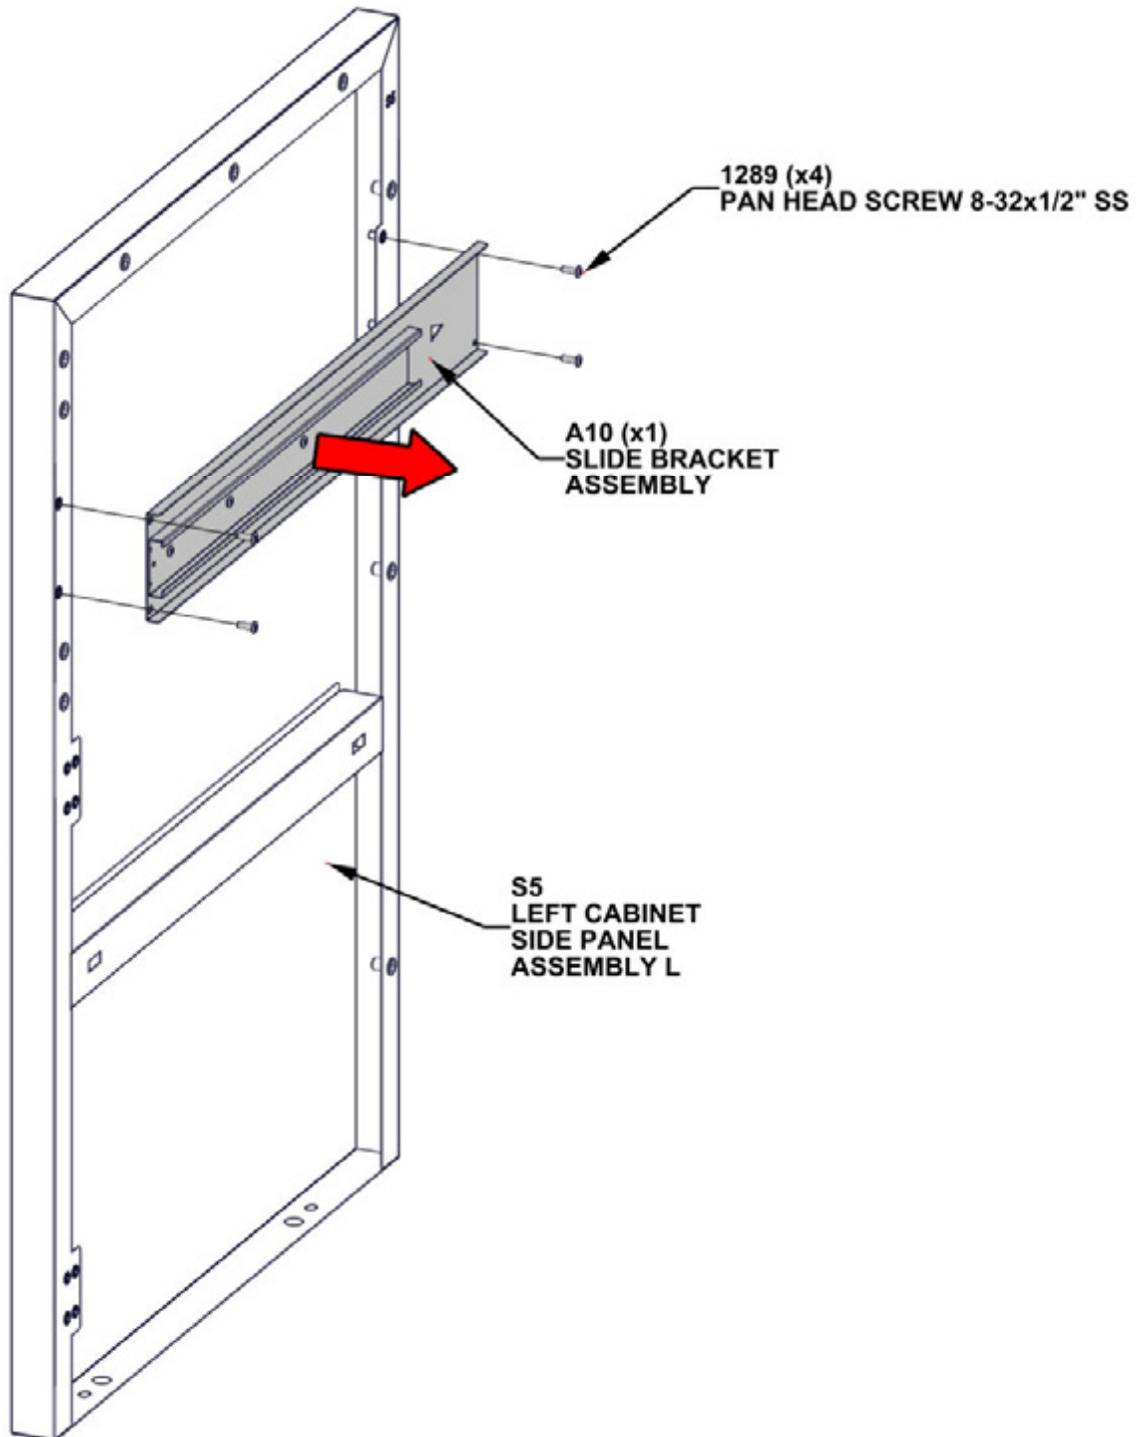


STEP 11 - STORAGE CABINET ASSEMBLY

Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS




S14 CABINET SIDE PANEL ASSEMBLY L - A4M05392
 (x1) 35 1/4"x23 11/16"x2 1/2" (63.00x602x896)

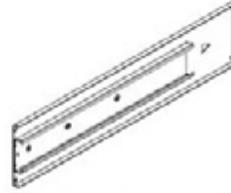

A10 SLIDE BRACKET ASSEMBLY - A4M03083
 (x1) 15/16"x3 3/8"x22 5/8" (23x85x575)

S14 (x1)
CABINET SIDE
PANEL ASSEMBLY L

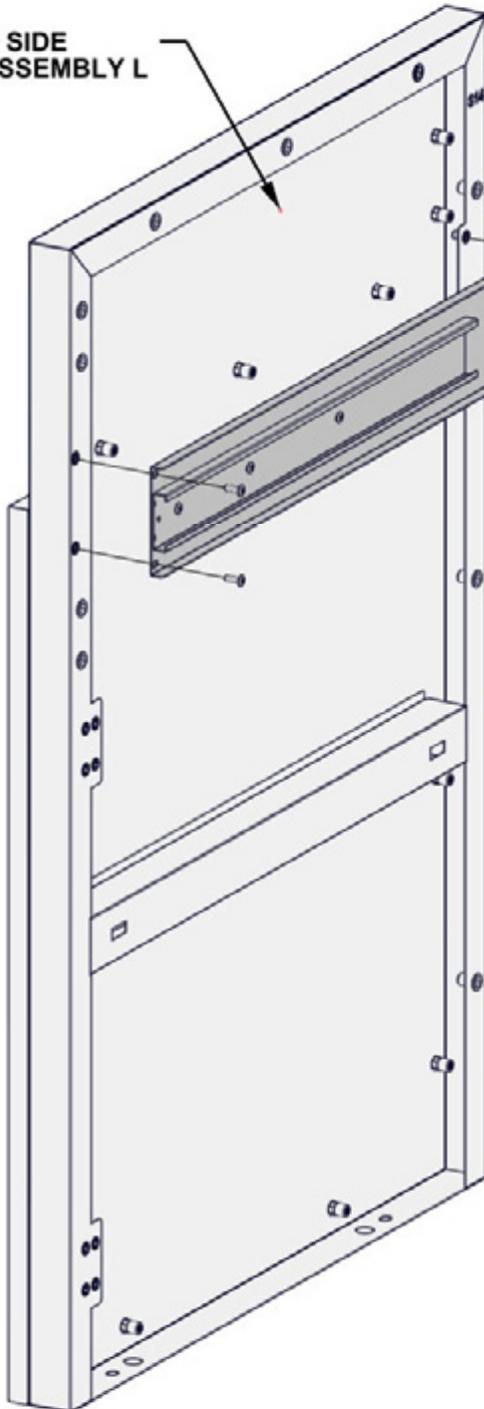

1289 (x4)
PAN HEAD SCREW 8-32x1/2" SS

USE HARDWARE FROM STEP 10

USE A4M03083 FROM STEP 10

STEP 12A - STORAGE CABINET ASSEMBLY


Qty	PartNo	Description
5	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



STORAGE CABINET ASSEMBLY FROM STEP 11

NOTE: USE HARDWARE FROM STEP 9.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FLUSH BACK AND SIDE OF PANEL.

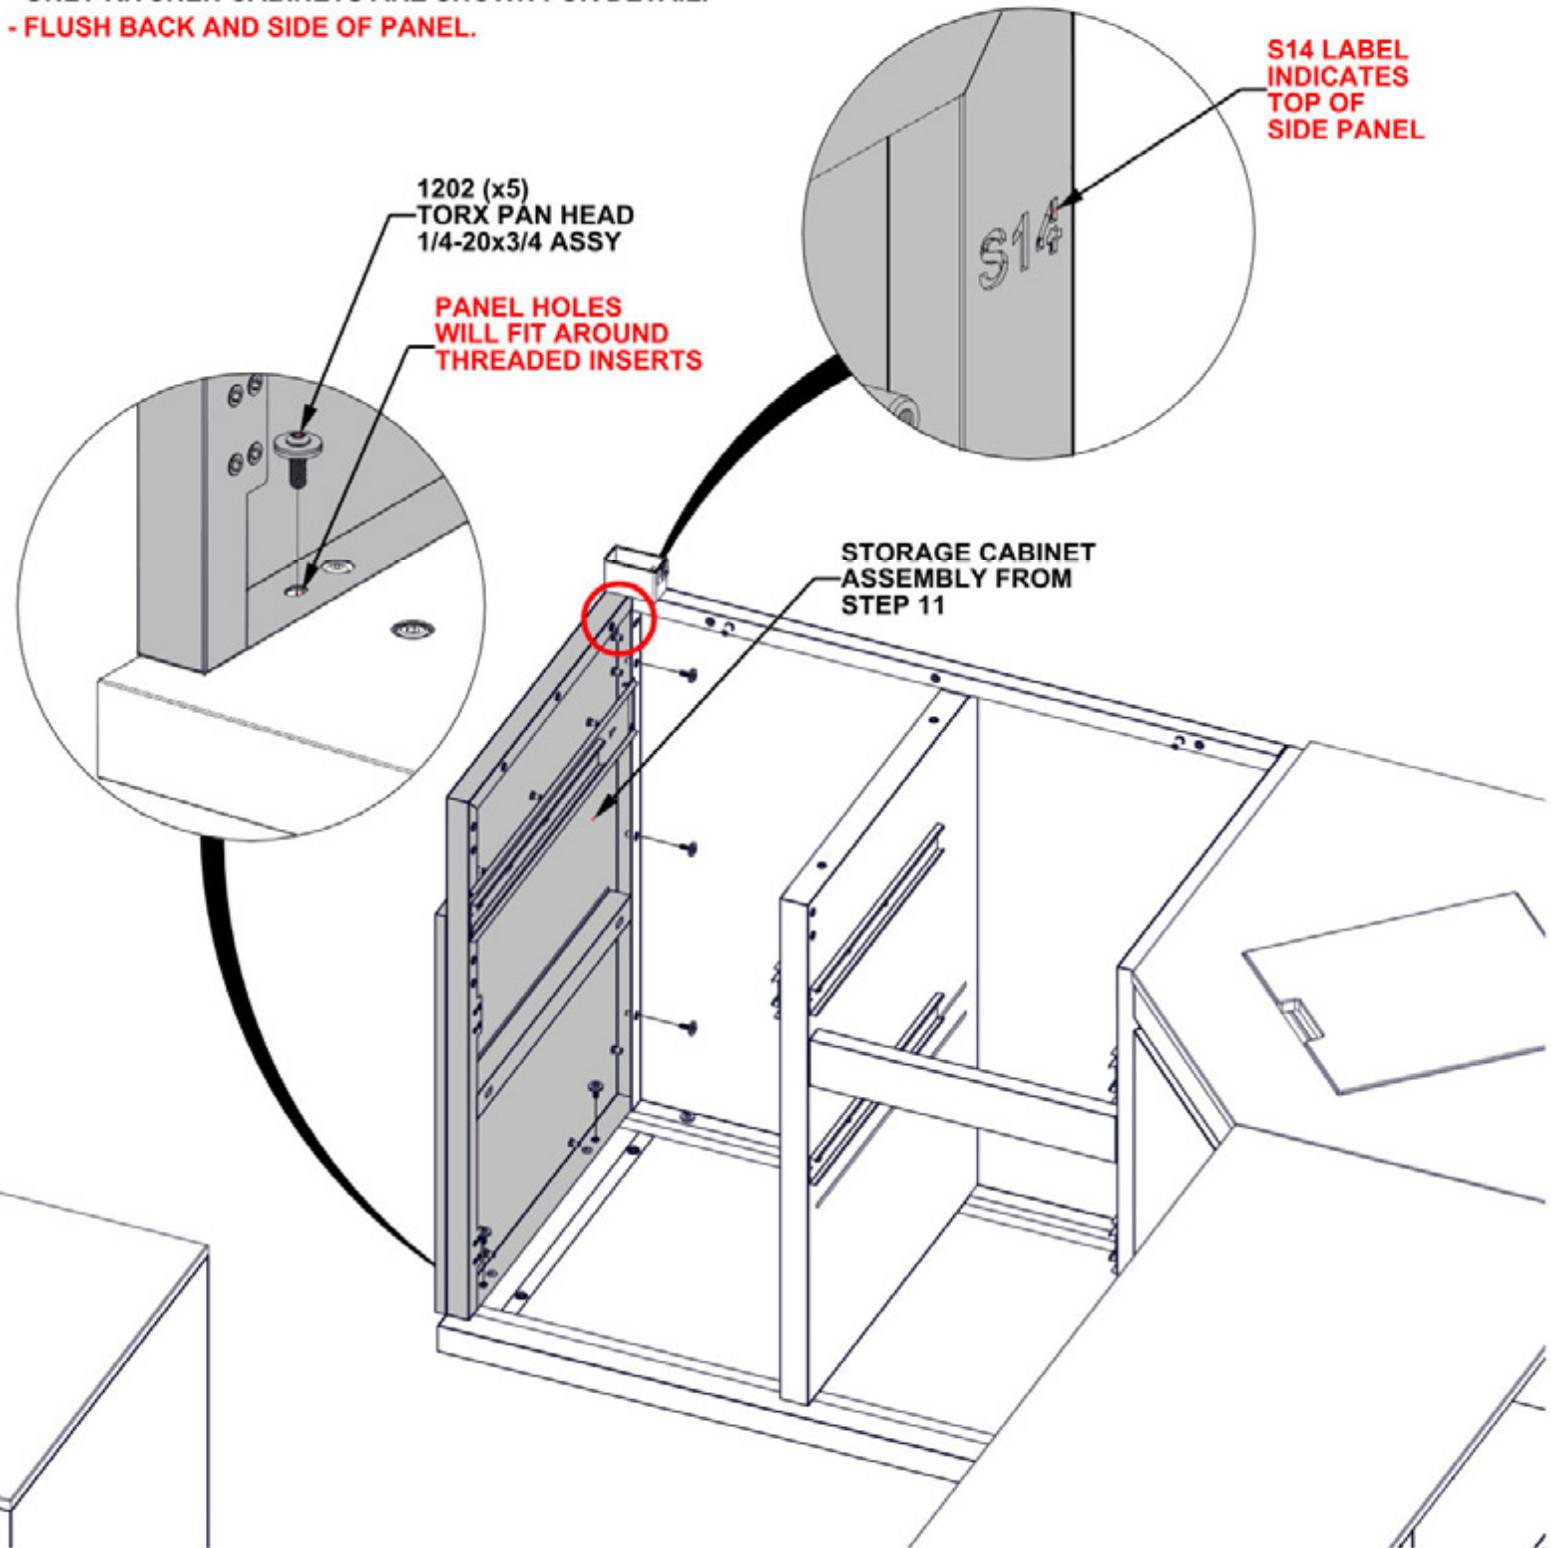

1202 (x5)
TORX PAN HEAD
1/4-20x3/4 ASSY

PANEL HOLES
WILL FIT AROUND
THREADED INSERTS

S14 LABEL
INDICATES
TOP OF
SIDE PANEL


STORAGE CABINET
ASSEMBLY FROM
STEP 11

STEP 12B - STORAGE CABINET ASSEMBLY


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

NOTE: USE HARDWARE FROM STEP 9.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

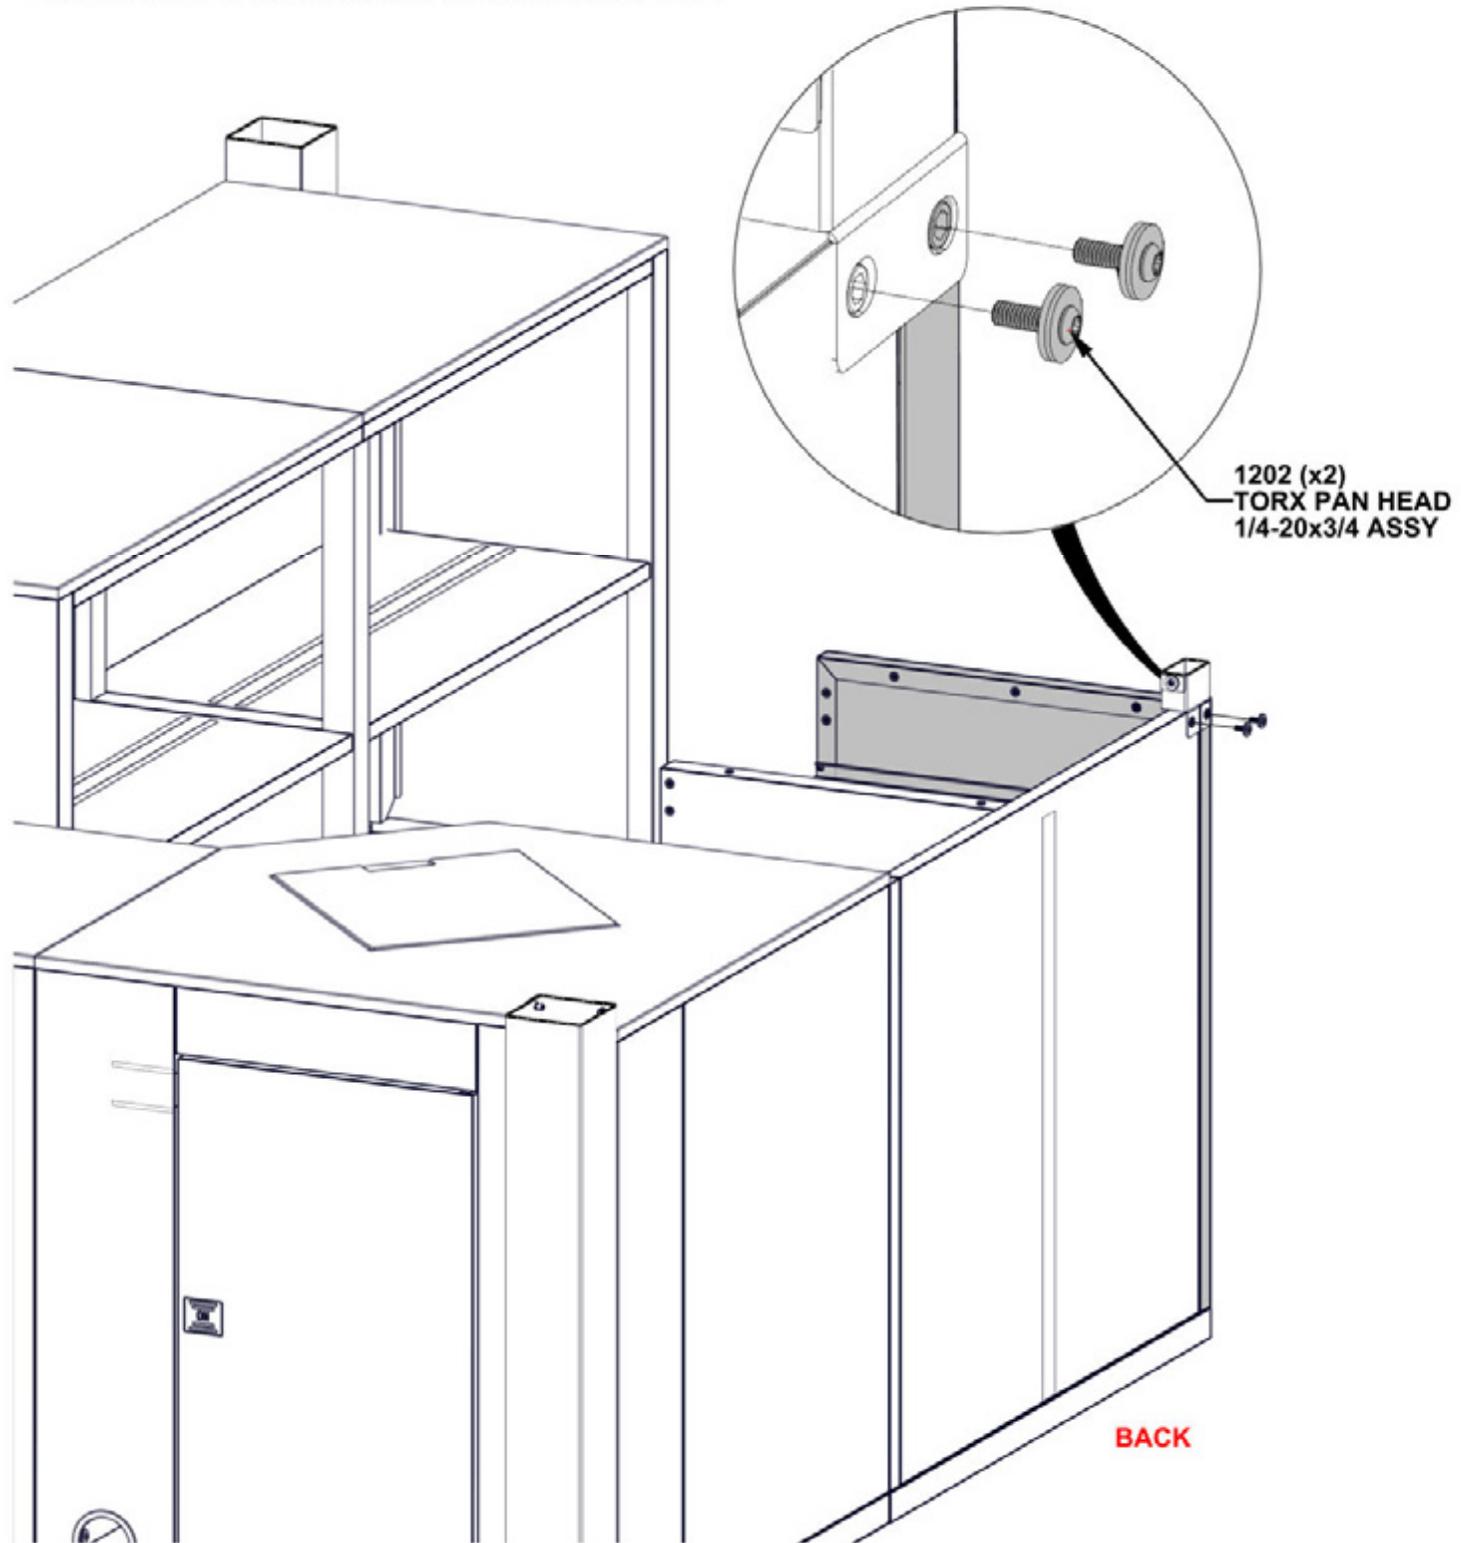


STEP 13A - STORAGE CABINET ASSEMBLY

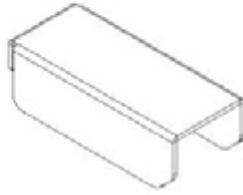


A5 SHELF BRACKET - A4M03141
(x4) 5/8"x7/8"x2 1/16" (16x22x53)

NOTE: USE PART FROM STEP 8C.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER CABINET.

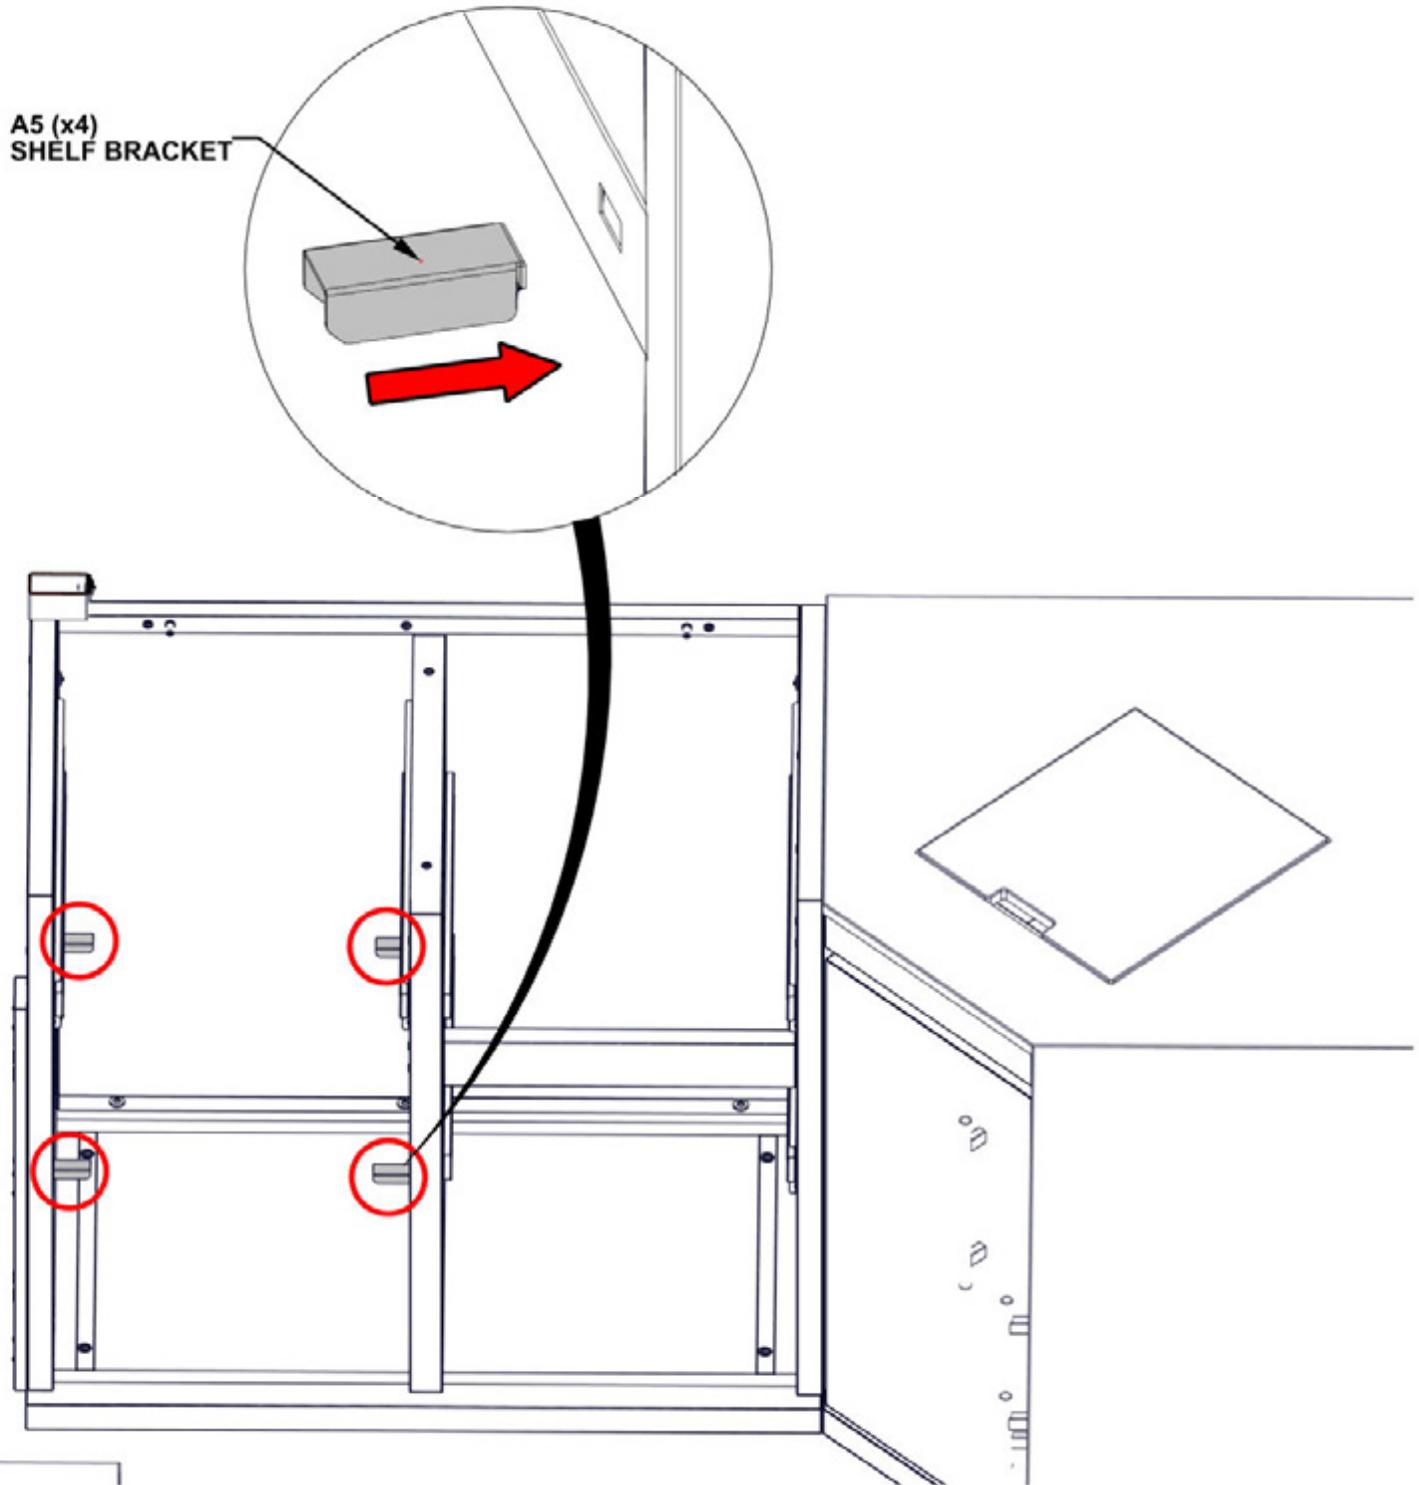


STEP 13B - STORAGE CABINET ASSEMBLY

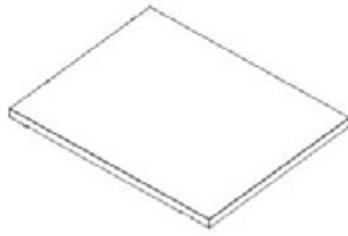


L5 SHELF - A4M05765
(x1) 23 5/8"x19"x1" (25x482x600)

NOTE: USE PART FROM STEP 8B.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH SHELF ON SHELF BRACKETS.

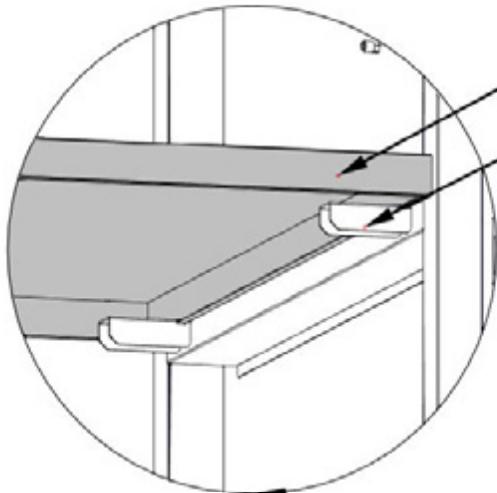

L5 (x1)
SHELF
A5
SHELF BRACKET

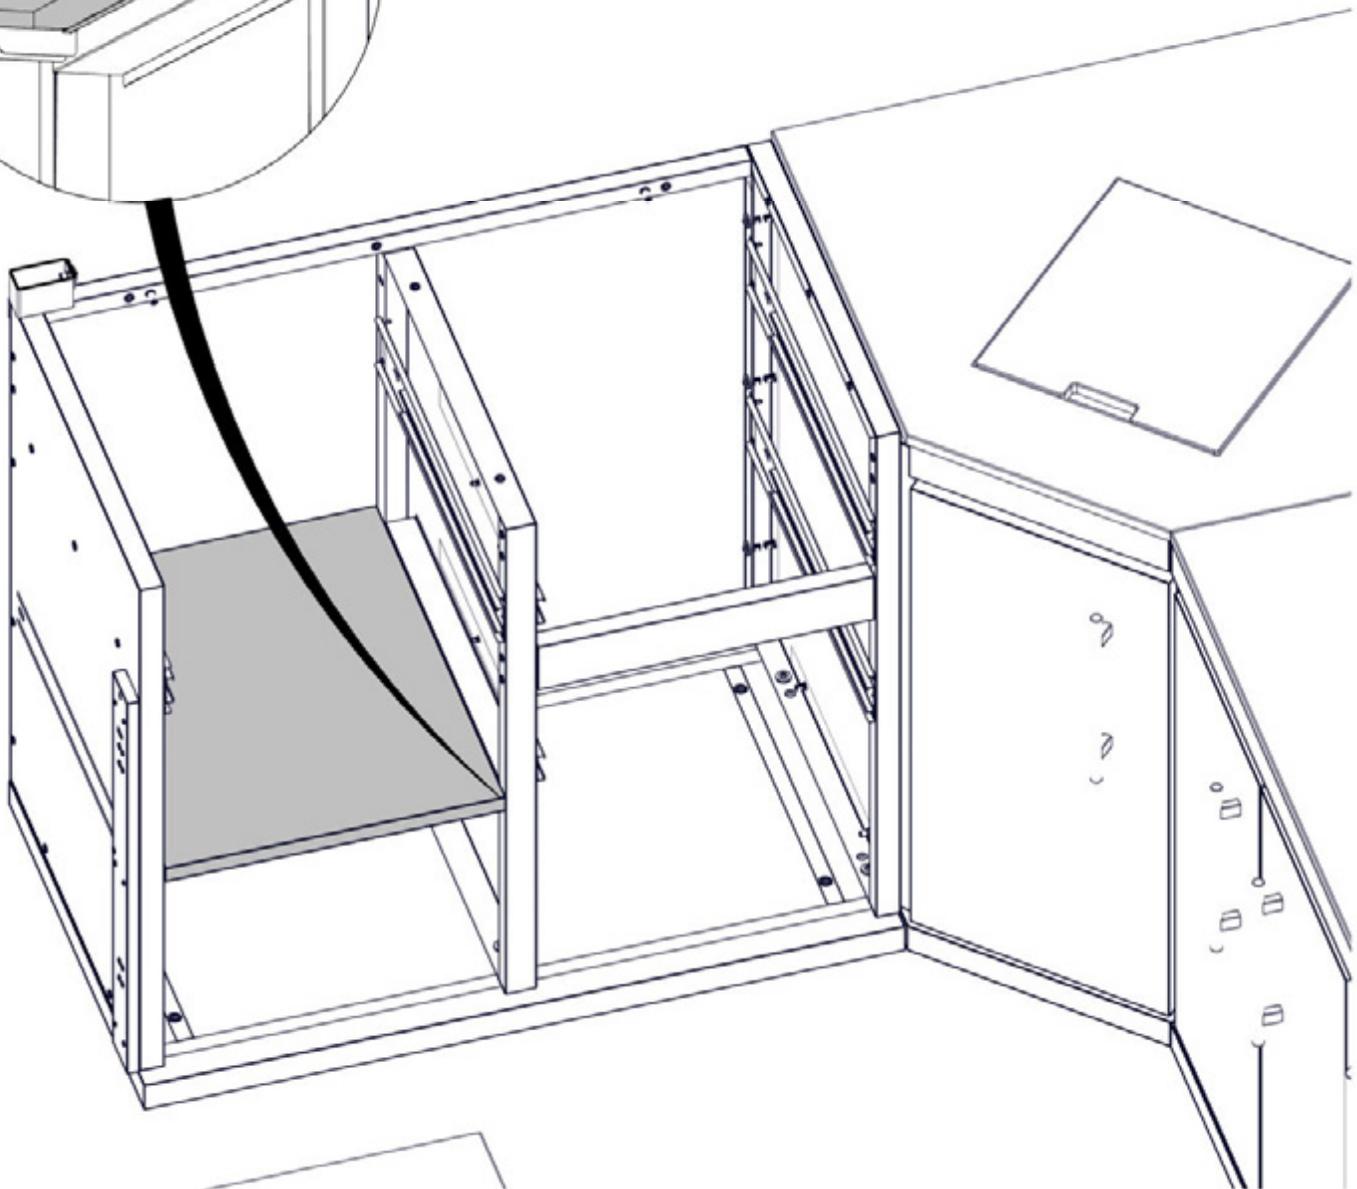

STEP 13C - STORAGE CABINET ASSEMBLY


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



HORIZONTAL BEAM ASSEMBLY


NOTE: USE PART AND HARDWARE FROM STEP 8A.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET**

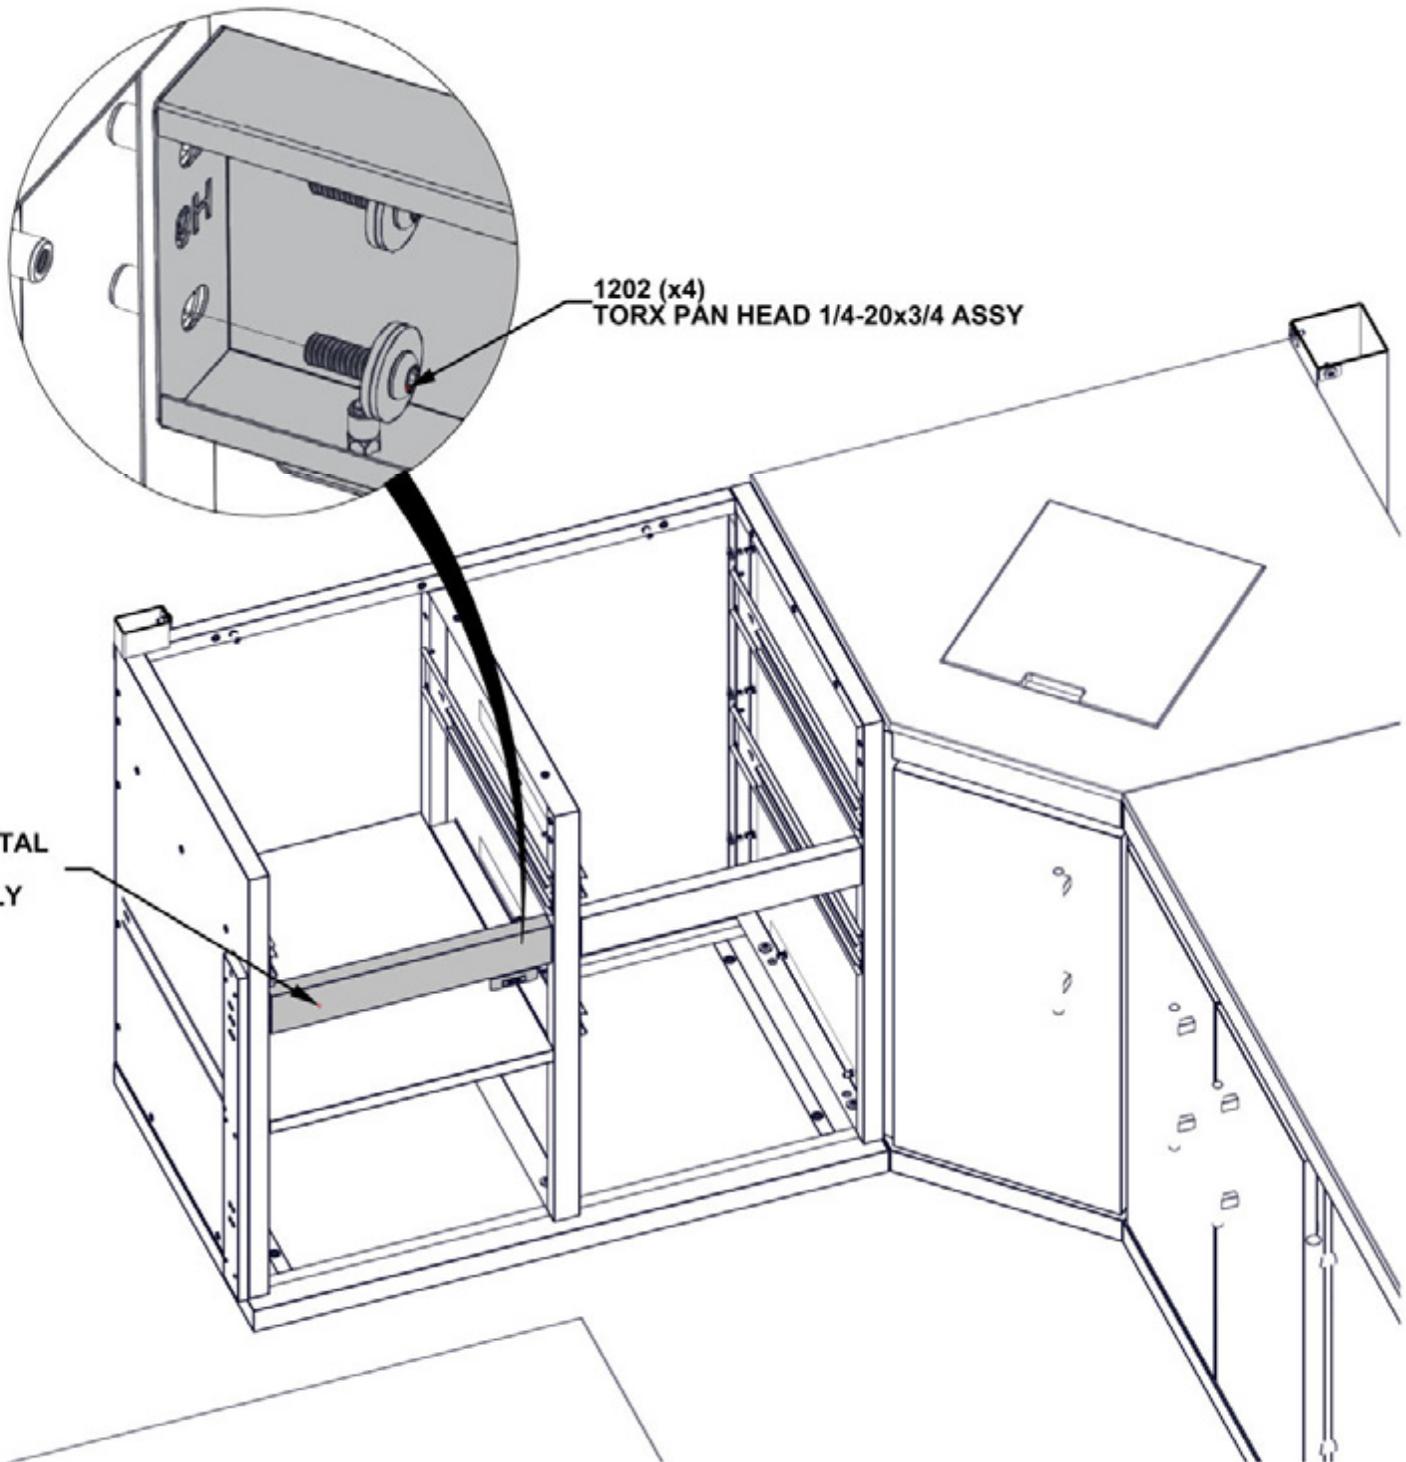

STEP 14 - STORAGE CABINET ASSEMBLY


Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



H6 LEFT CABINET TRIM PANEL ASSEMBLY R - A4M04471
(x1) 42 7/16"x4 3/8"x2 3/16" (56x111.5x1078.0)

NOTE: USE PART AND HARDWARE FROM STEP 7.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET**

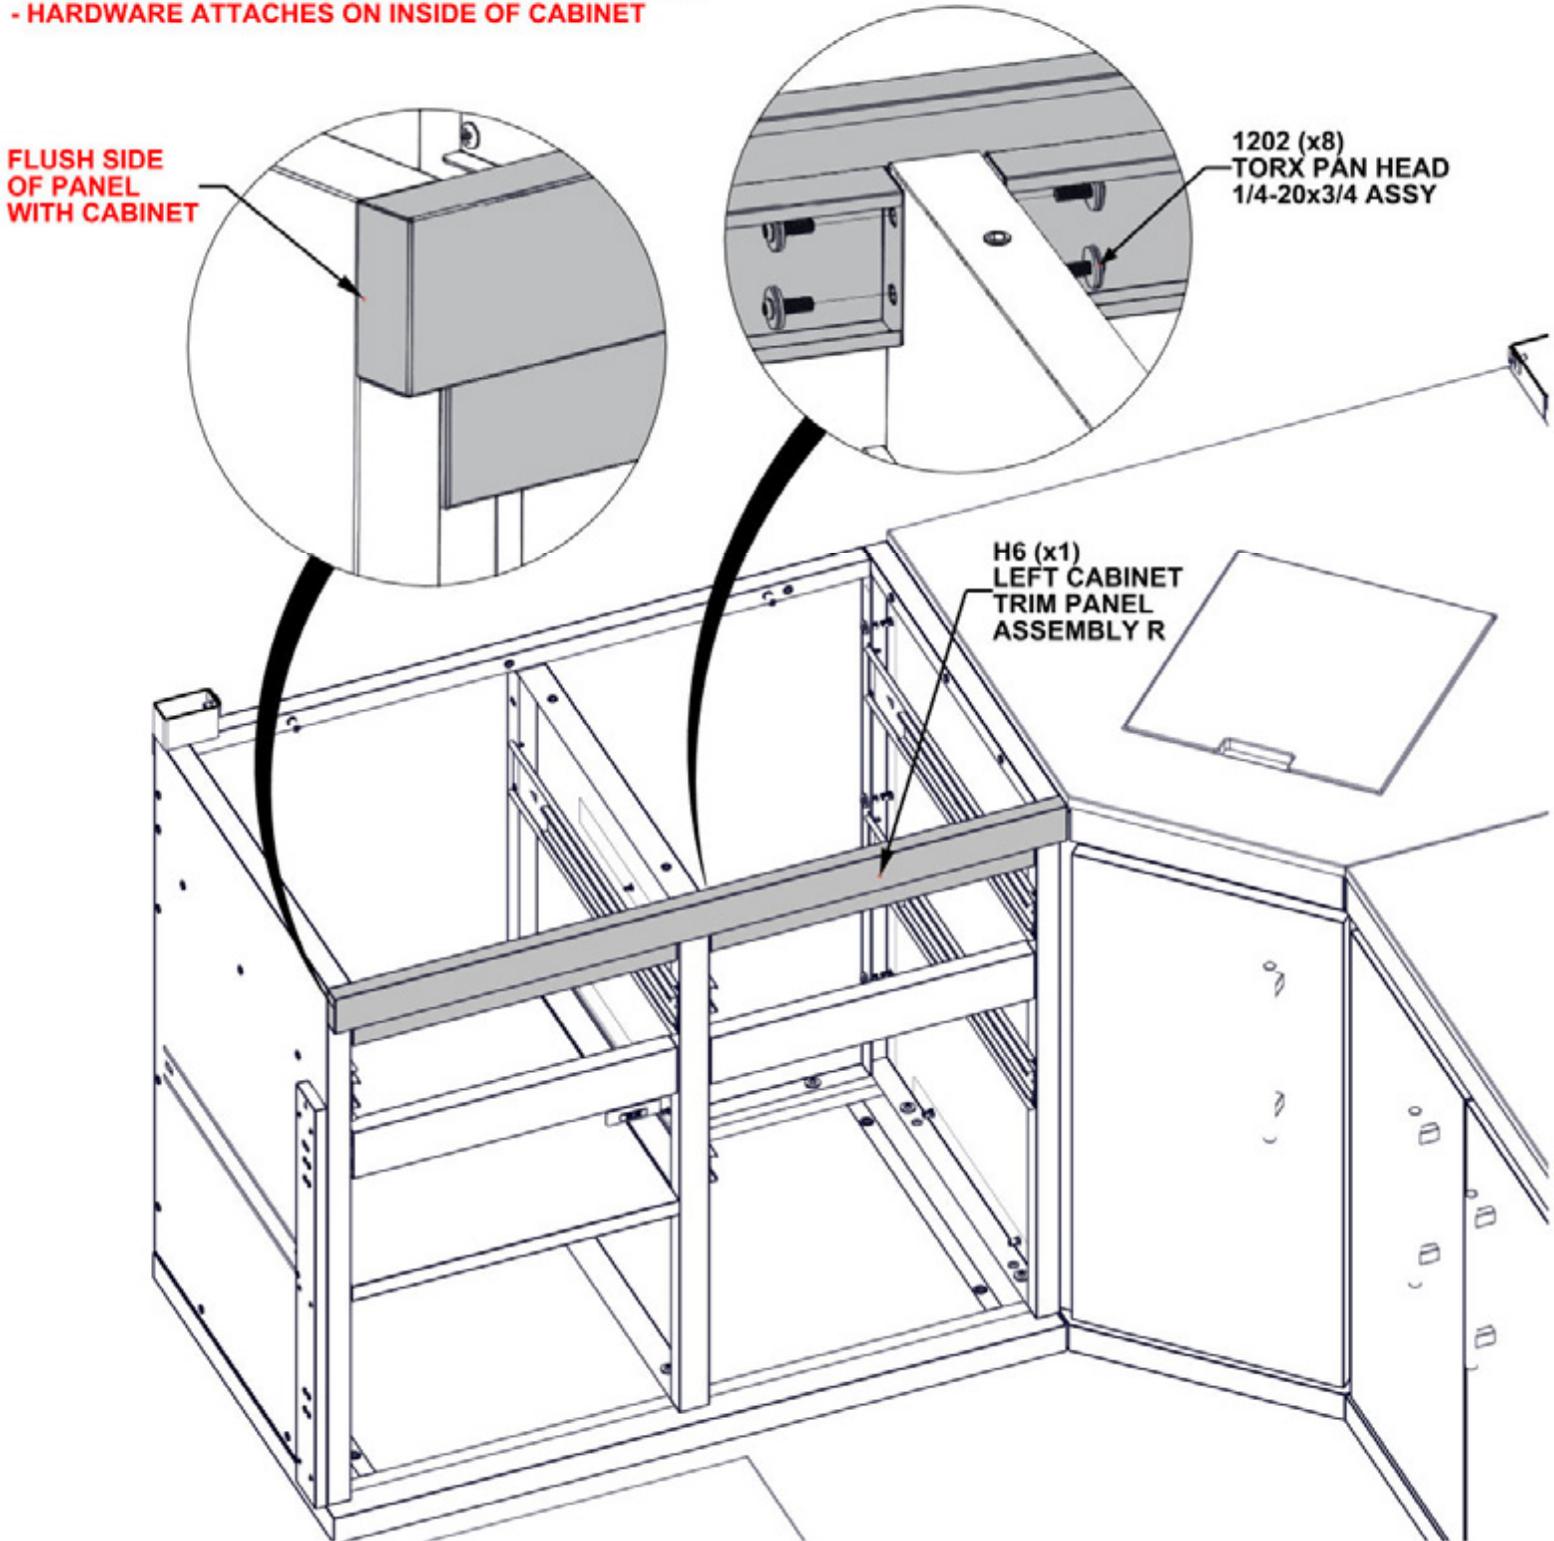


**FLUSH SIDE
OF PANEL
WITH CABINET**

1202 (x8)
TORX PAN HEAD
1/4-20x3/4 ASSY

H6 (x1)
LEFT CABINET
TRIM PANEL
ASSEMBLY R


STEP 15A - STORAGE CABINET ASSEMBLY

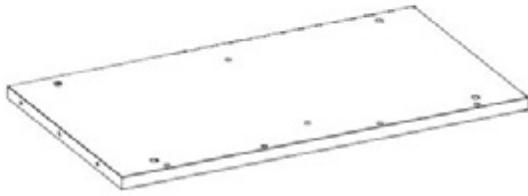

T4 LEFT CABINET TABLETOP PANEL ASSEMBLY - A4M04468
(x1) 39 9/16"x22 7/16"x1 3/16" (30x569.5x1004.5)

NOTE: USE PART FROM STEP 6.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- POSITION TABLETOP ON CABINET.
- TOP SIDE OF TABLETOP WILL SIT FLUSH WITH BACK AND SIDE PANELS.

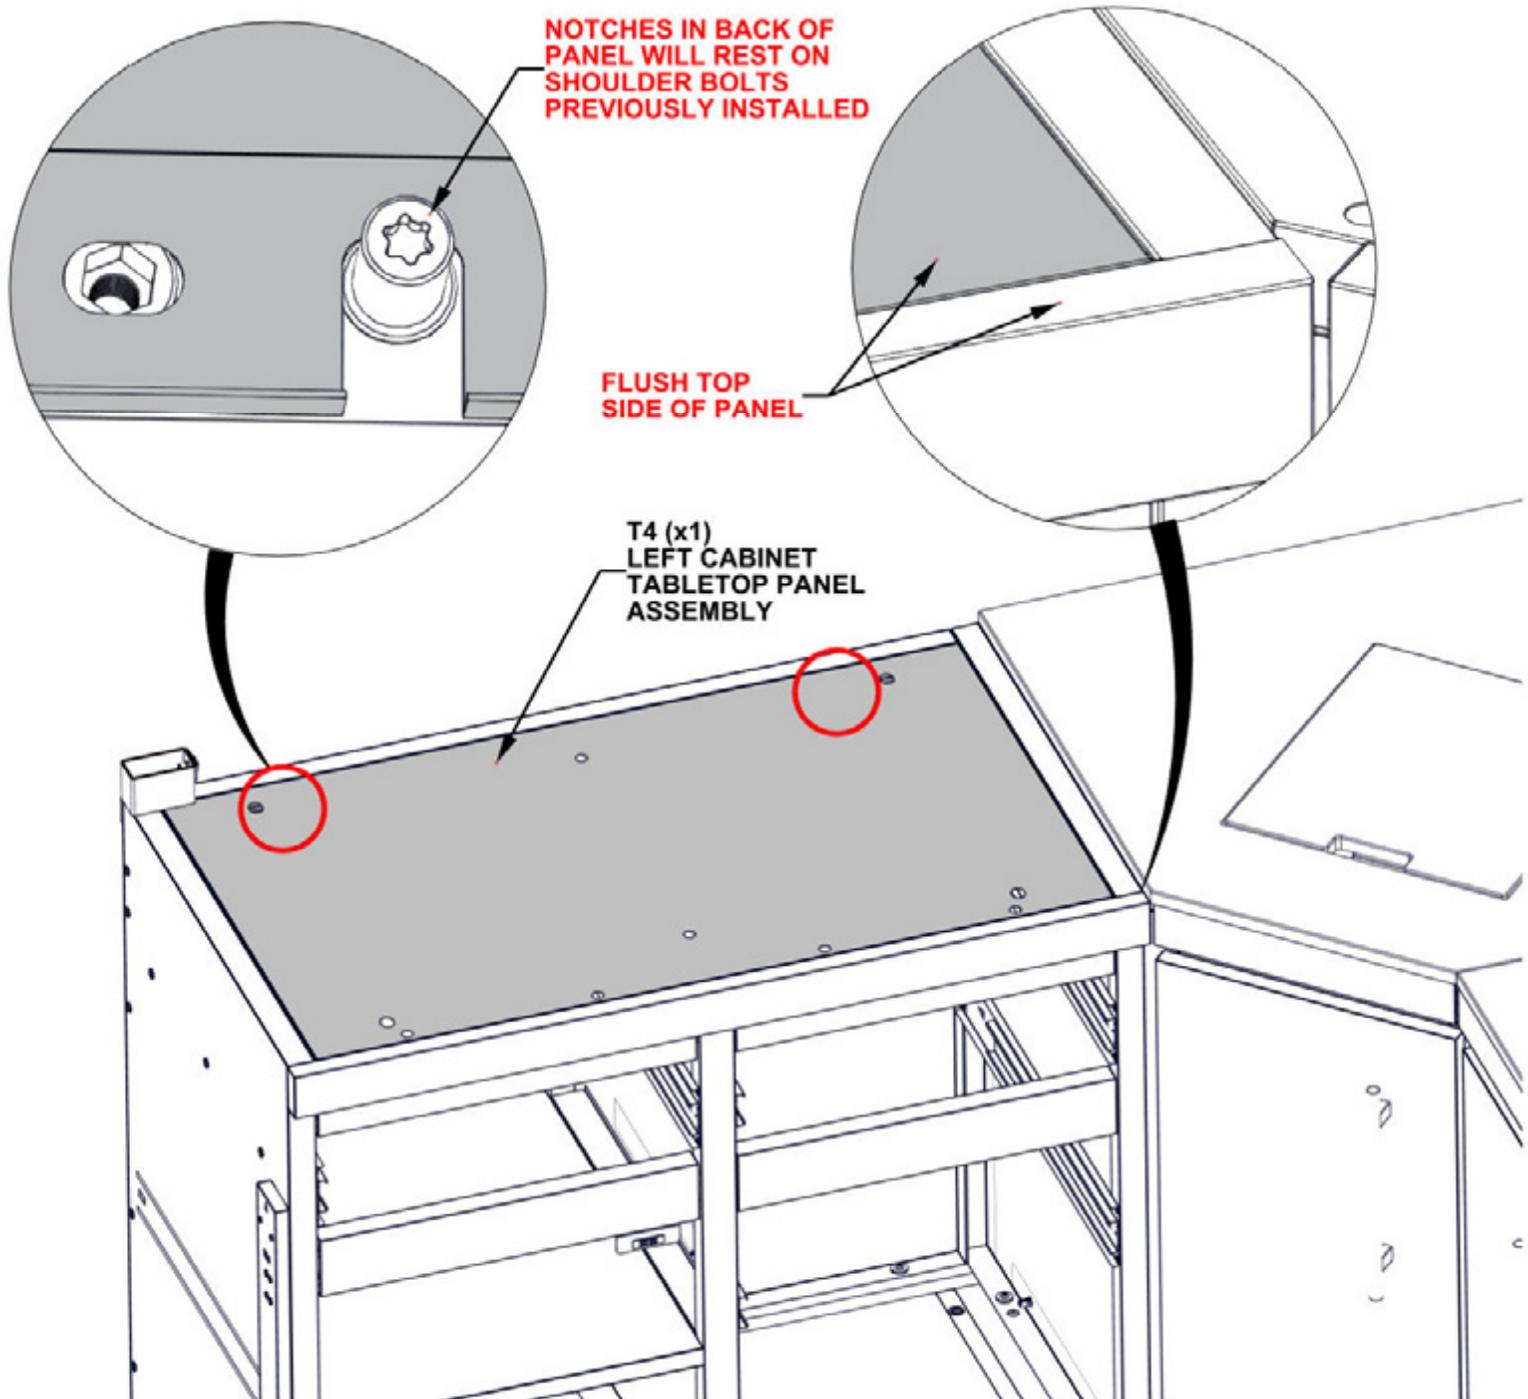


STEP 15B - STORAGE CABINET ASSEMBLY

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

NOTE: USE HARDWARE FROM STEP 6.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET**

1202 (x9)
TORX PAN HEAD 1/4-20x3/4 ASSY
HAND TIGHTEN ONLY

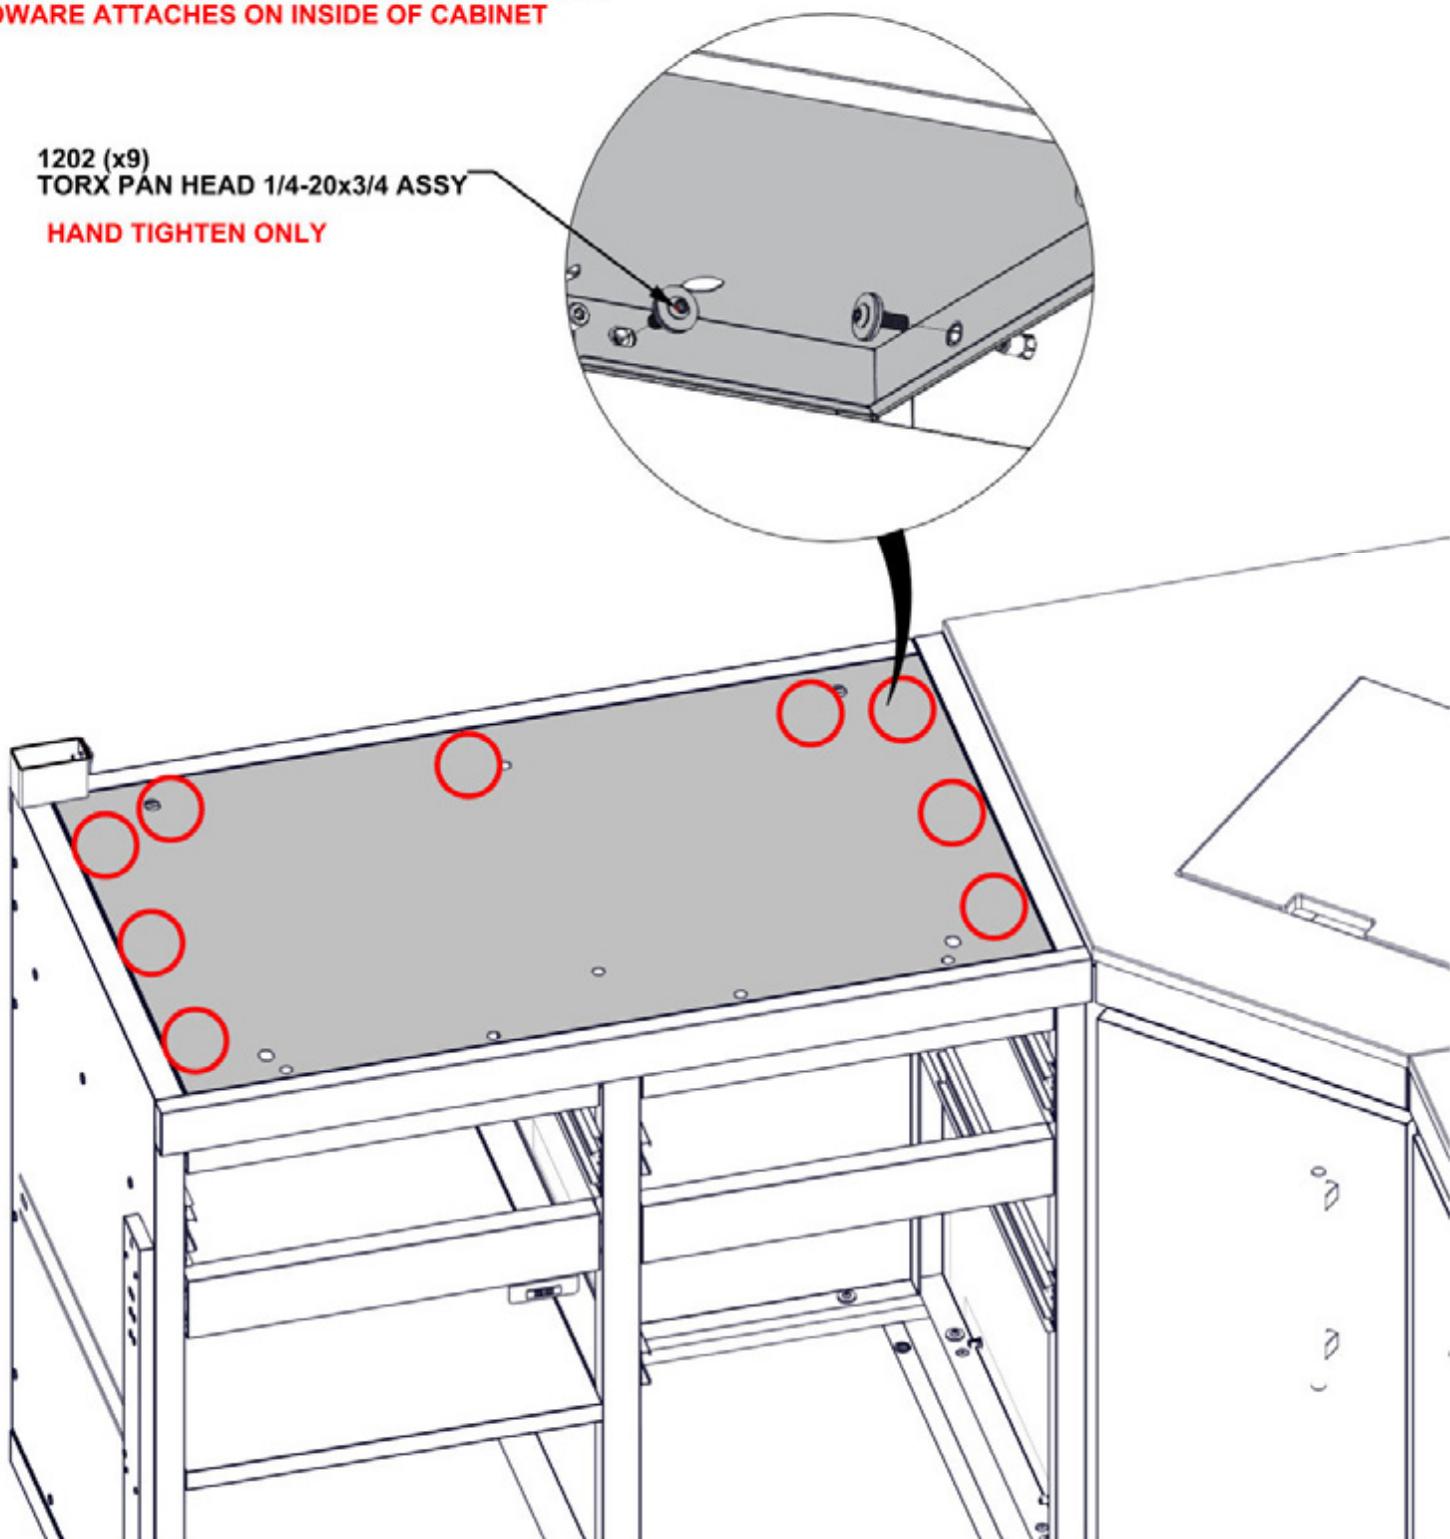


STEP 15C - STORAGE CABINET ASSEMBLY


Qty	PartNo	Description
6	H101132	TORX SOCKET SCREW SHORT 1/4-20

NOTE: USE HARDWARE FROM STEP 5.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FLUSH TOP SURFACE OF CABINET TABLETOP WITH BACK AND SIDE PANELS.
- **SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.**

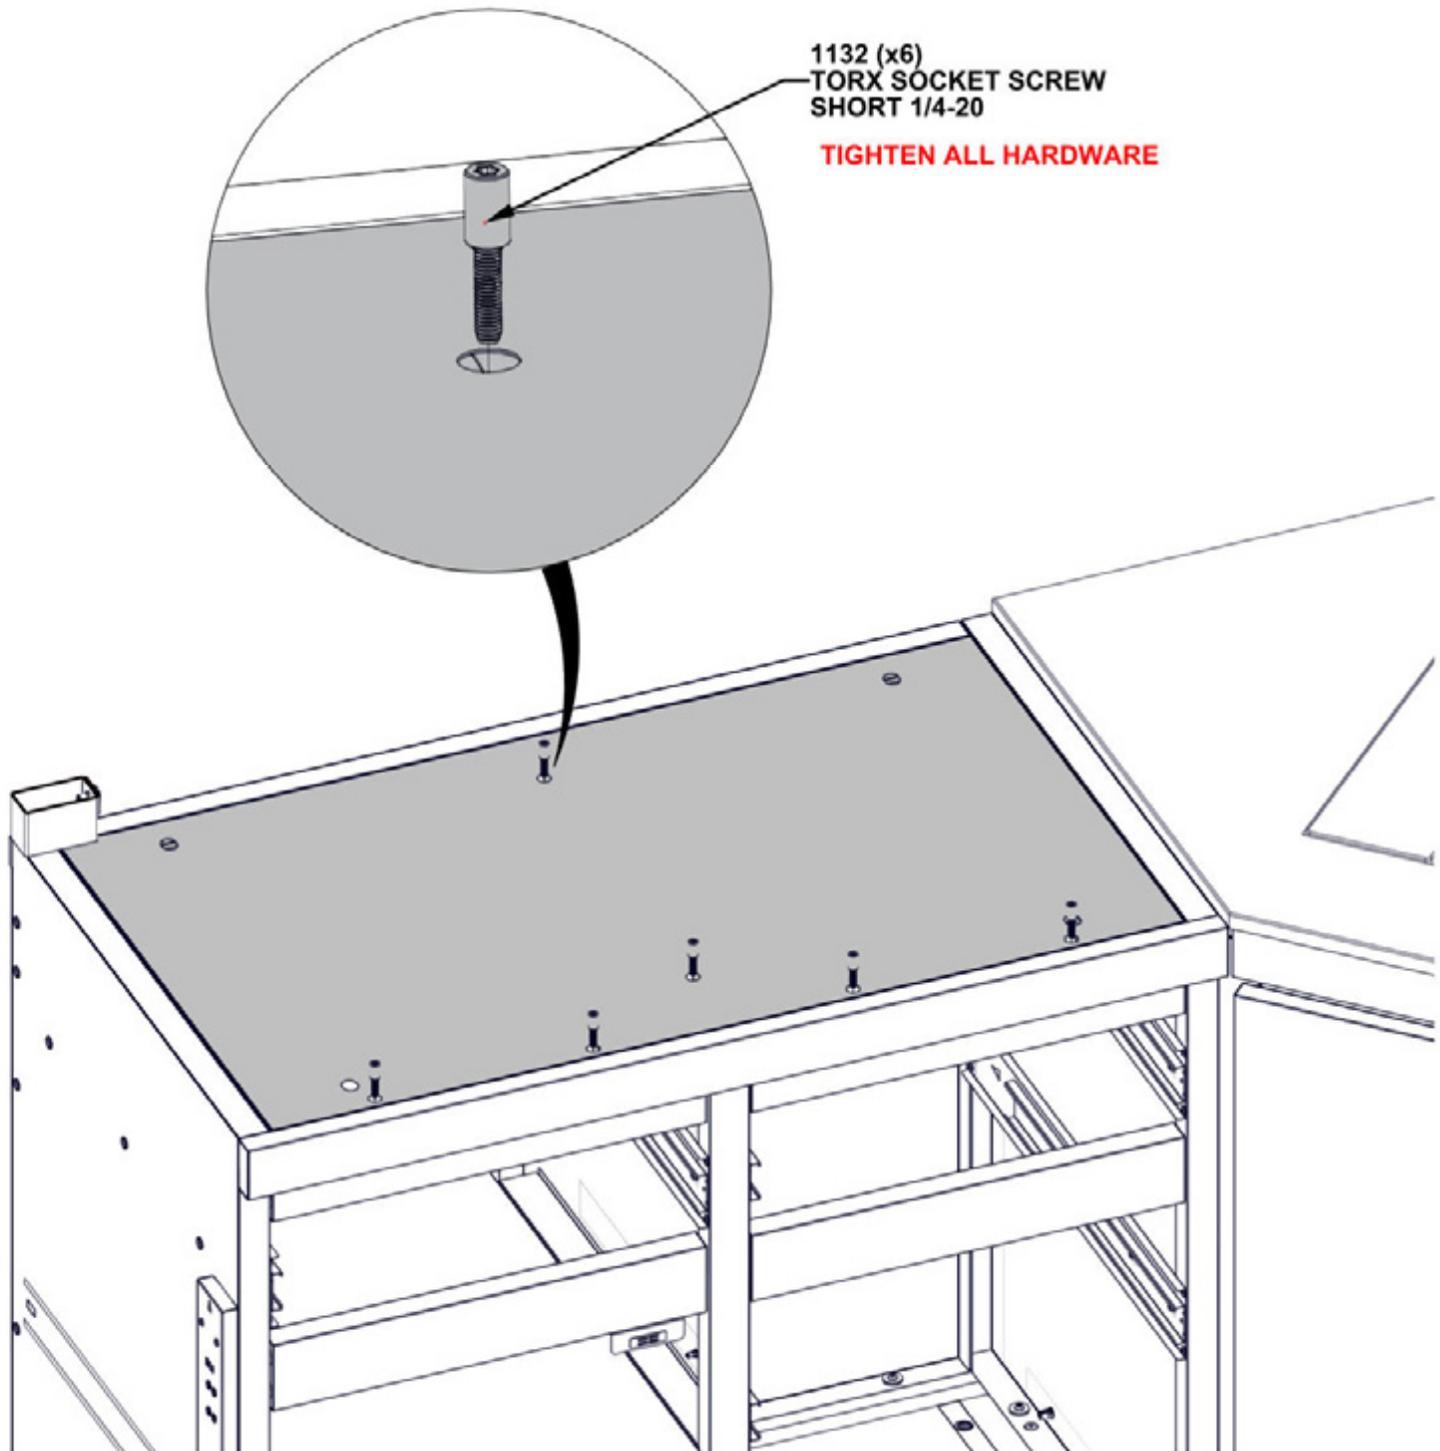


STEP 16 - CABINET ASSEMBLY

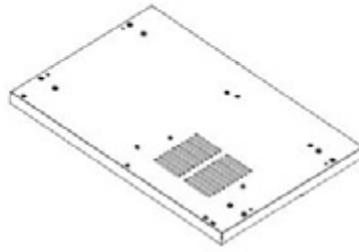


F5 FLOOR PANEL ASSEMBLY - A4M05368
(x1) 35 9/16"x24 3/4"x1 3/4" (45x628.50x904)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

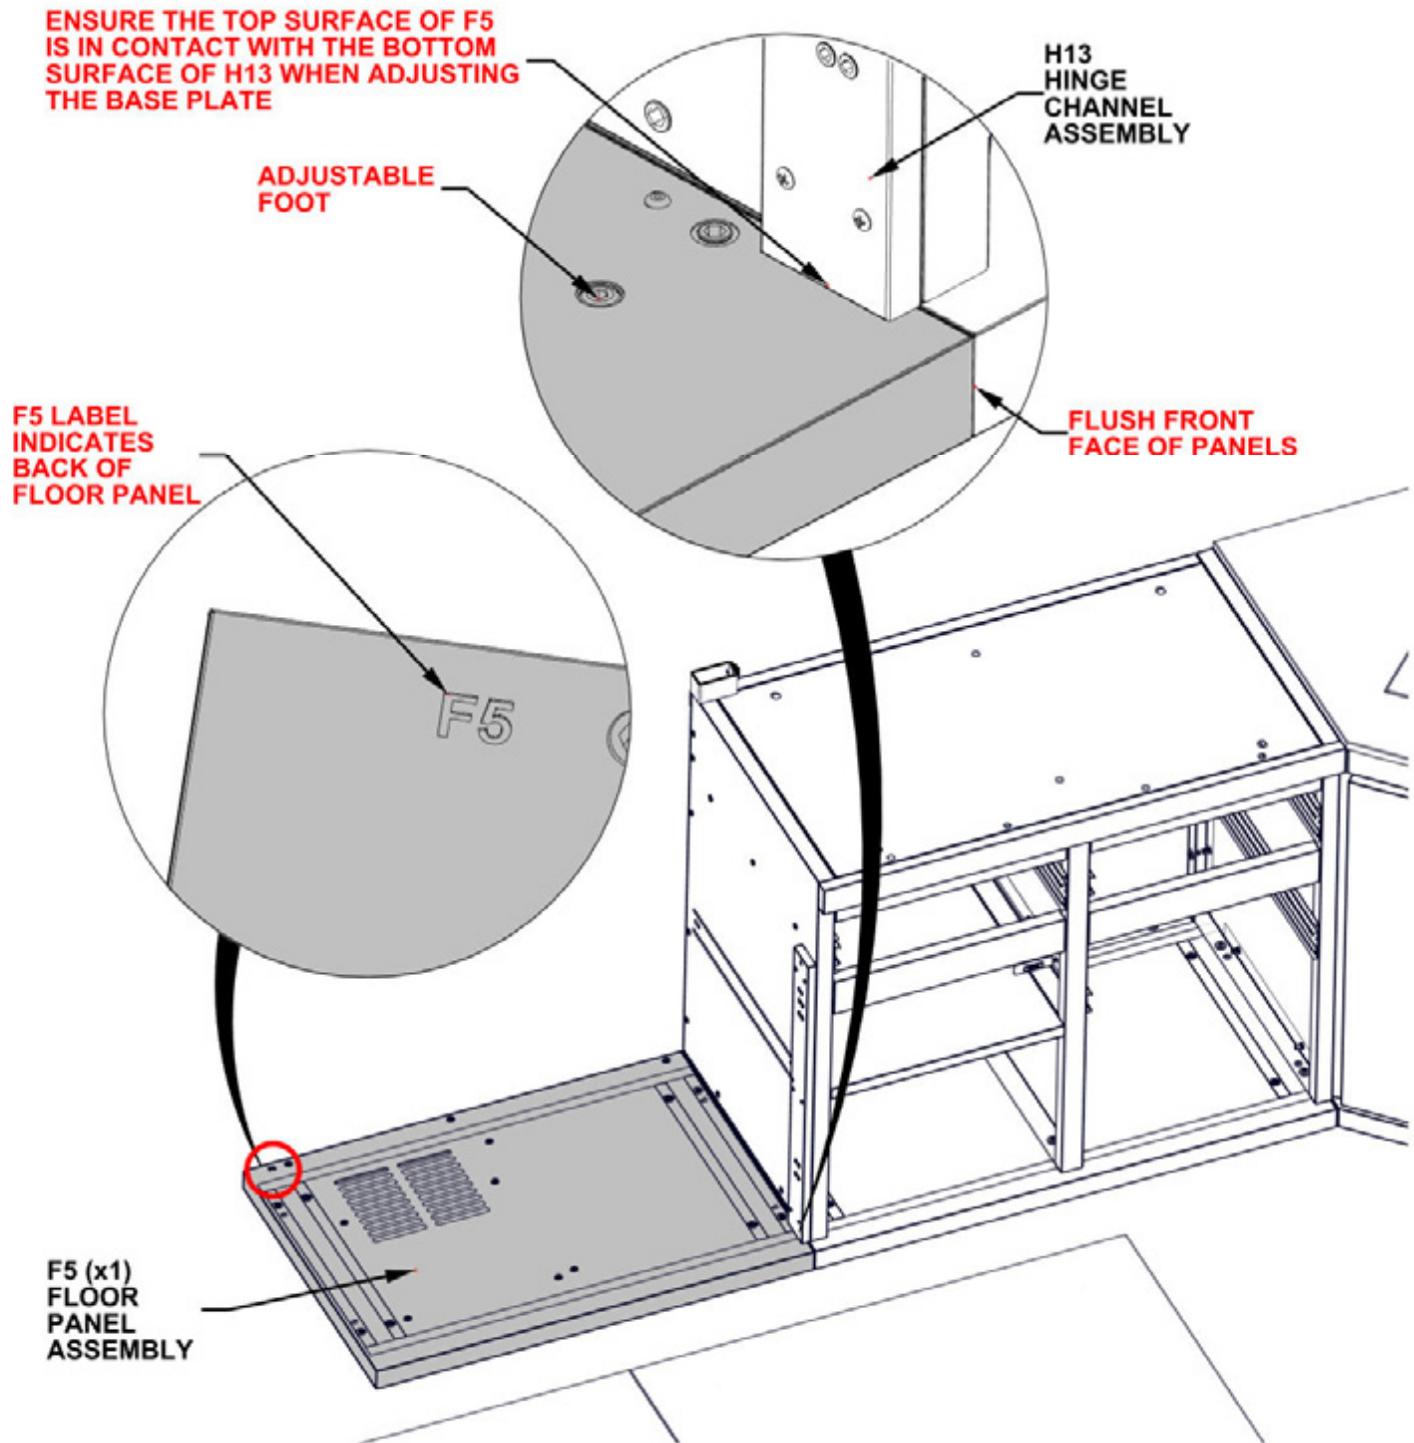


STEP 17 - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

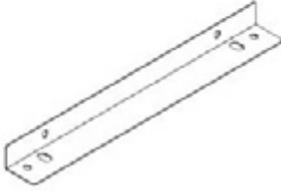

A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

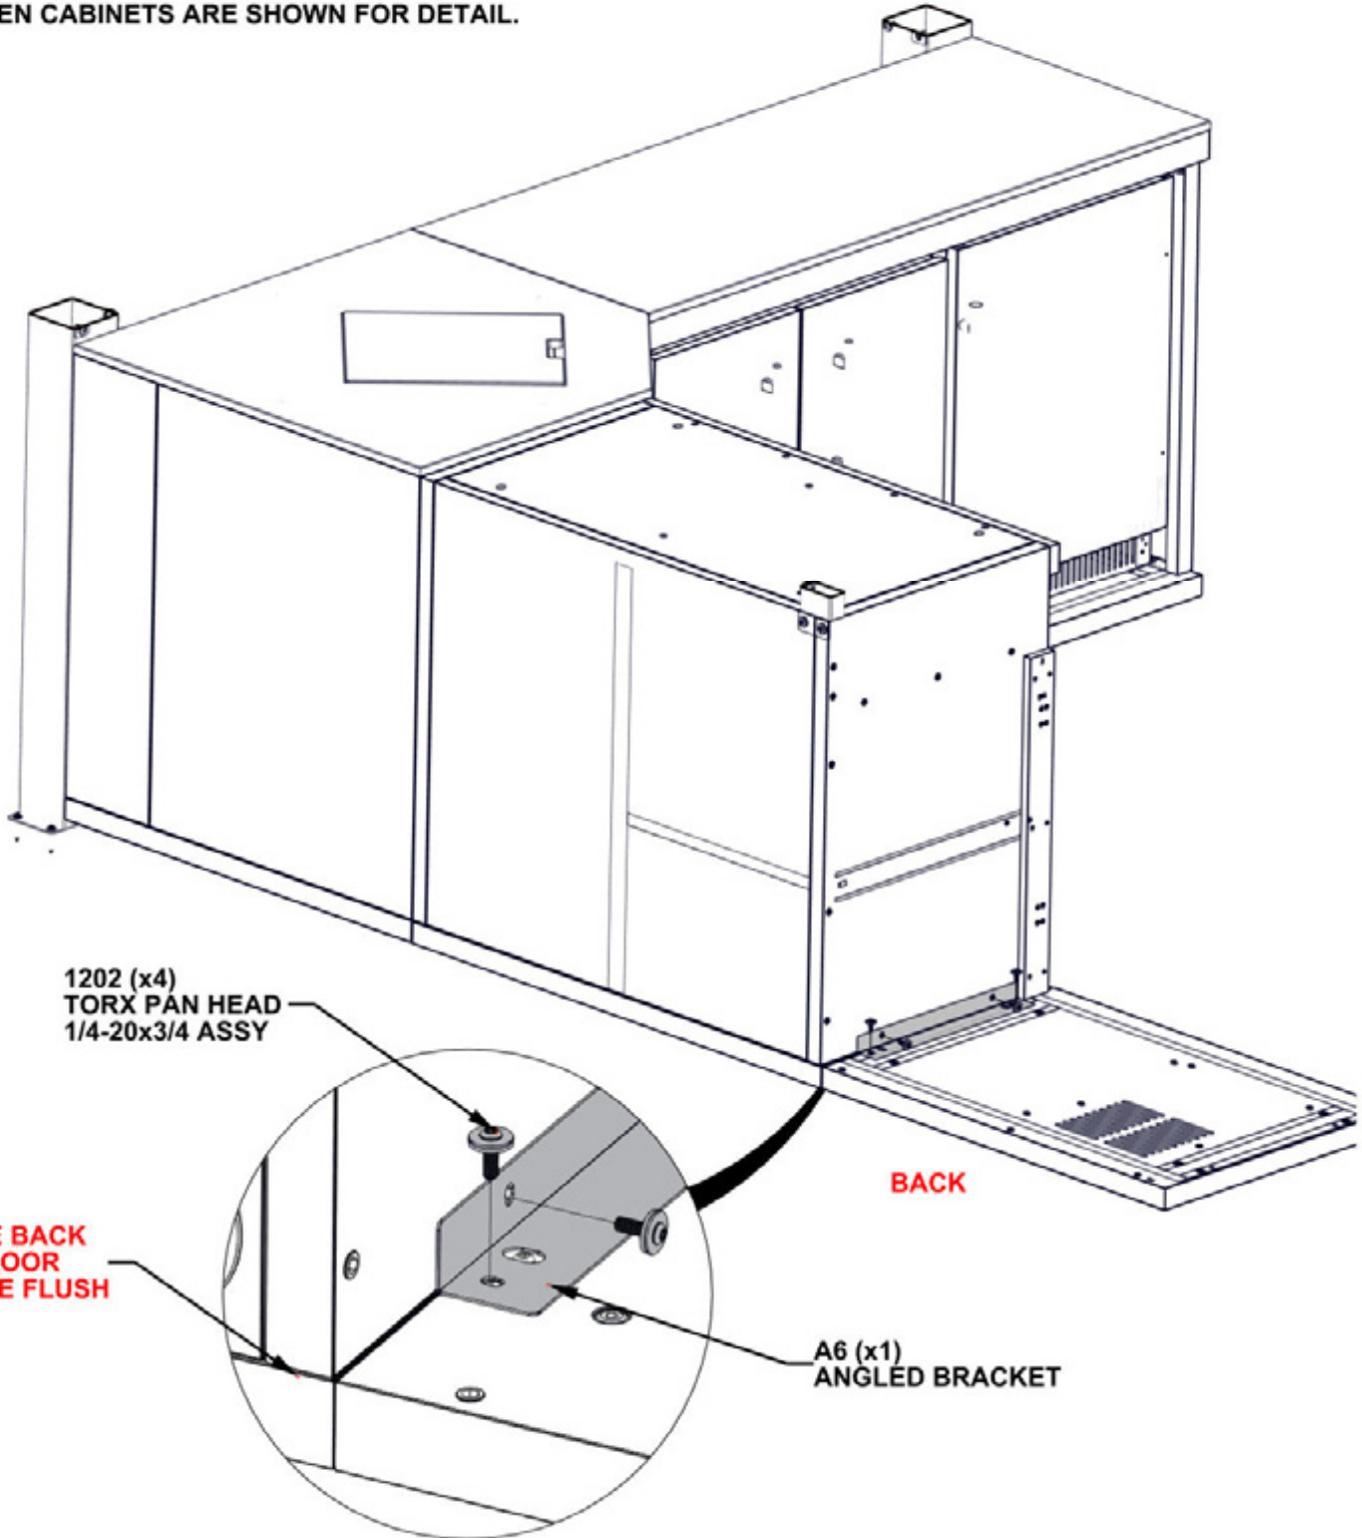


STEP 18 - CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




S9 SIDE PANEL ASSEMBLY - A4M05372
 (x1) 27 1/8"x23 11/16"x1 15/16" (53x601x690)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

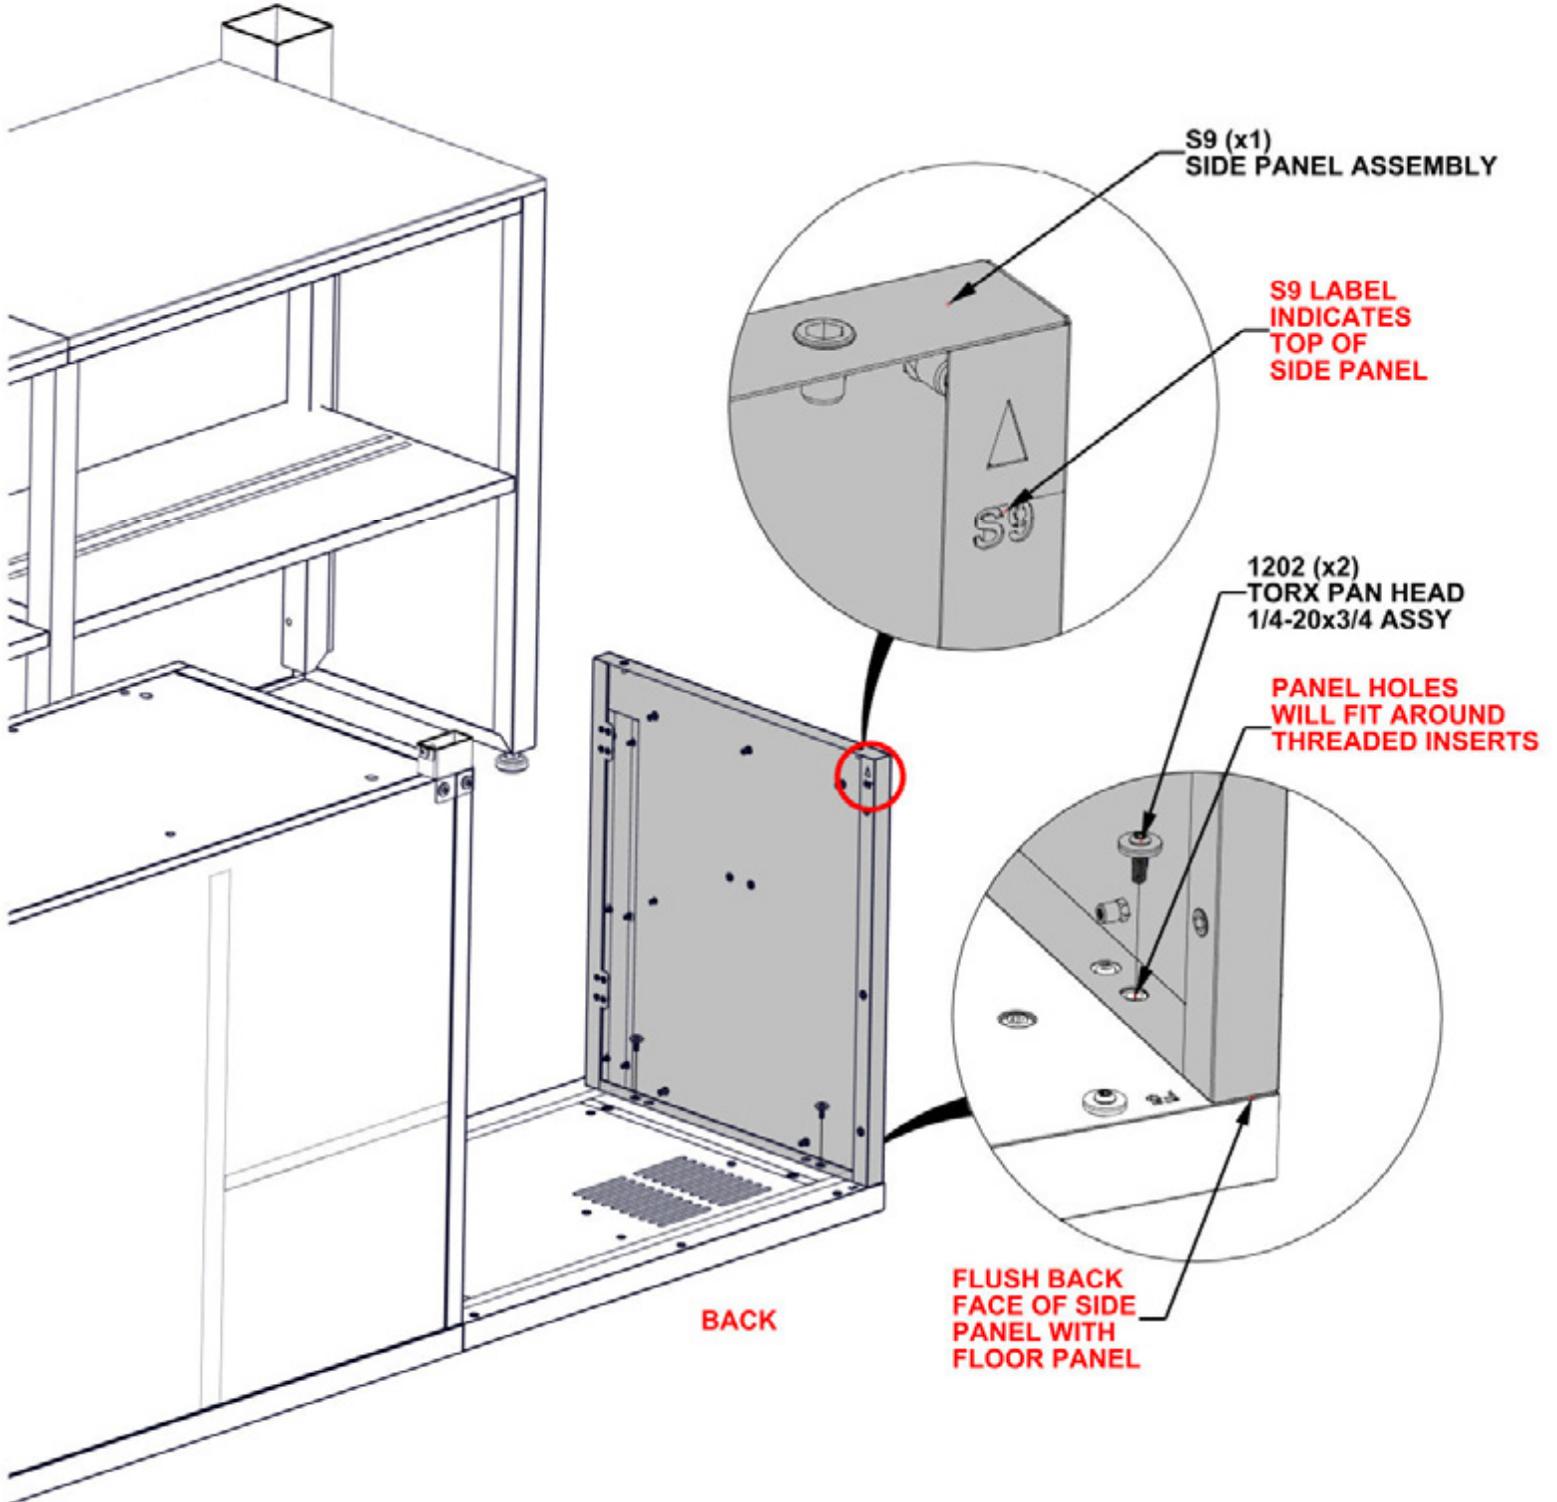


STEP 19 - CABINET ASSEMBLY

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

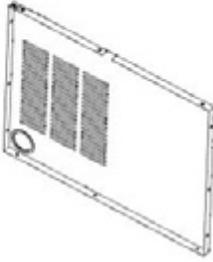

G9 BACK PANEL ASSEMBLY - A4M05376
(x1) 34 3/16"x27 1/8"x1 3/16" (30x689.0x868)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

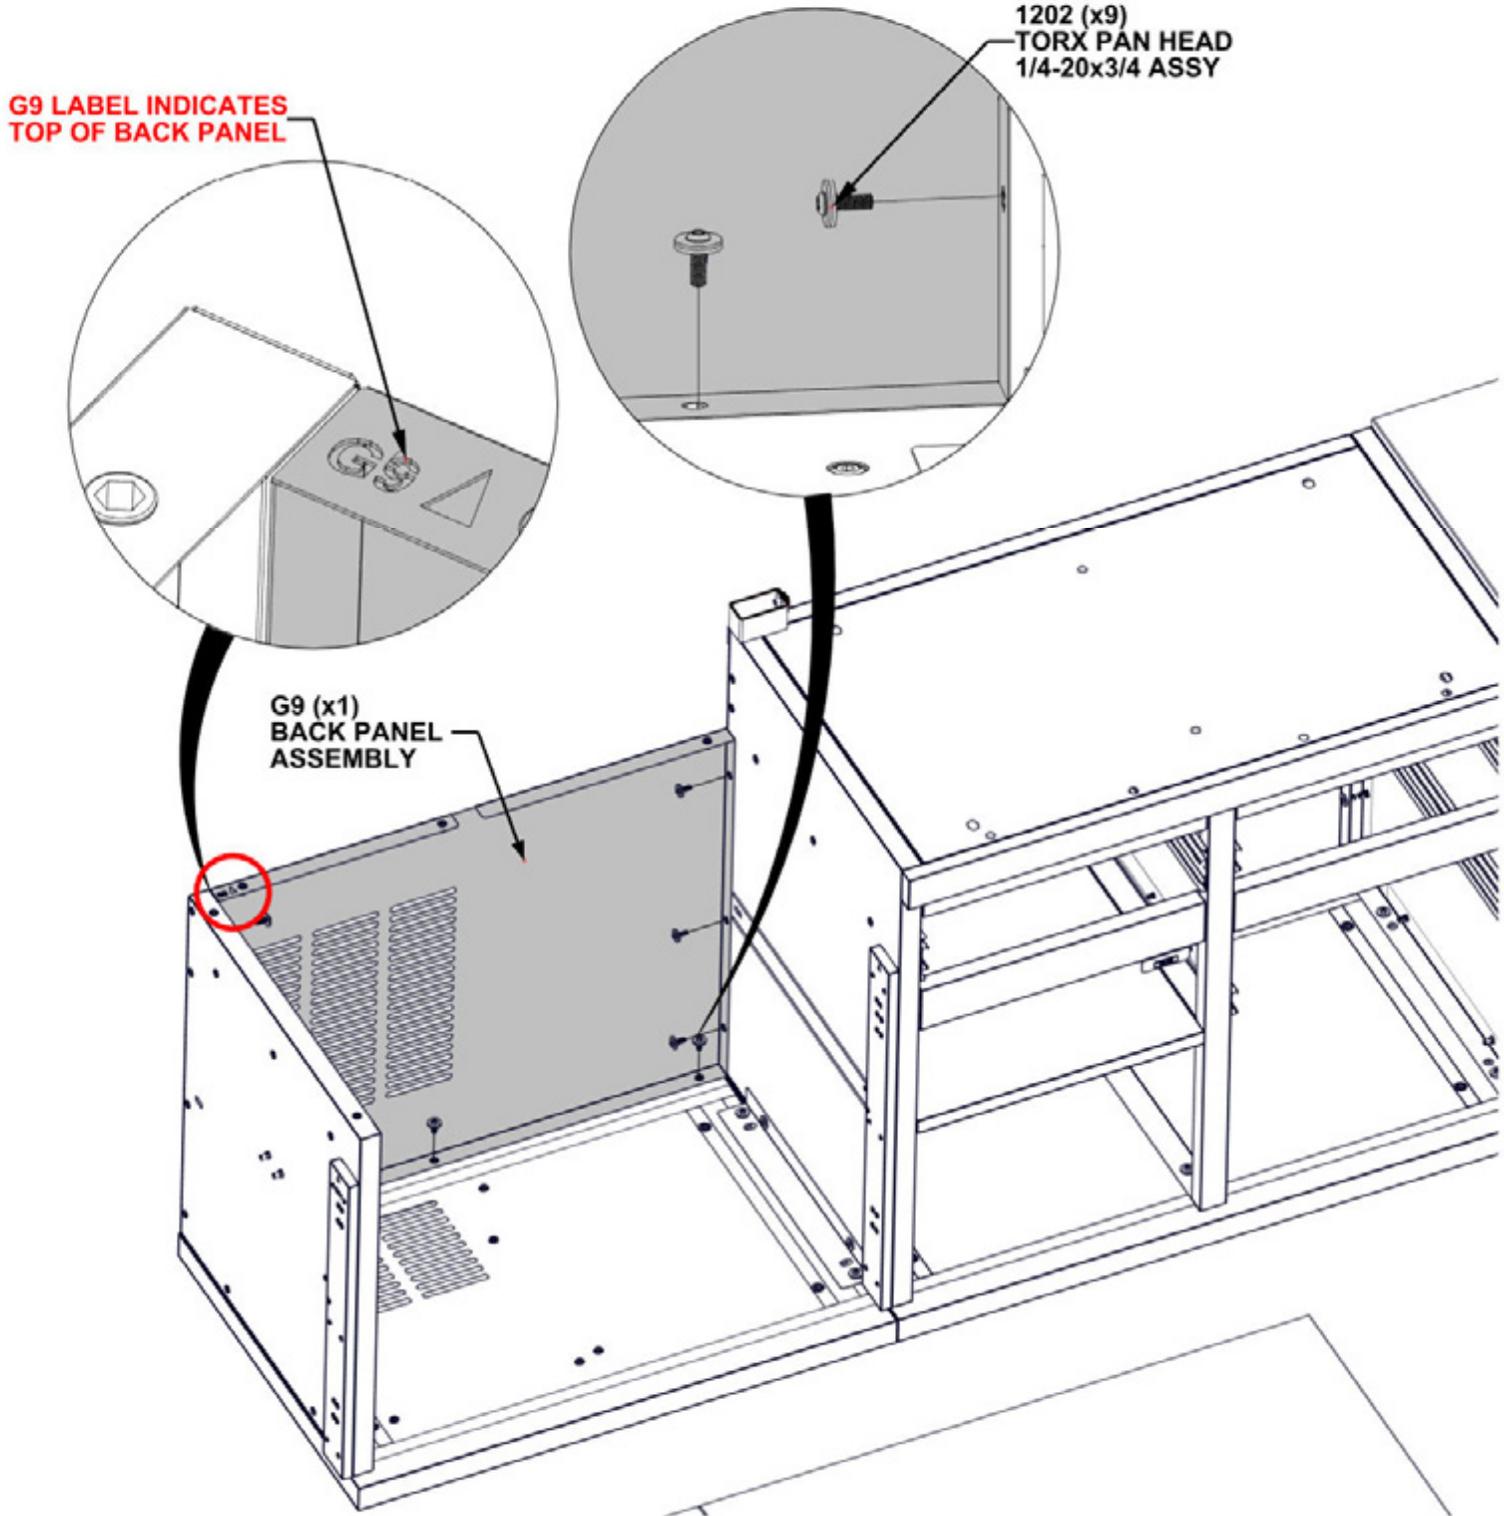


STEP 20 - CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




S11 CABINET SIDE PANEL ASSEMBLY M - A4M05387
 (x1) 27 1/8"x23 5/8"x1 3/8" (35x600x689.5)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

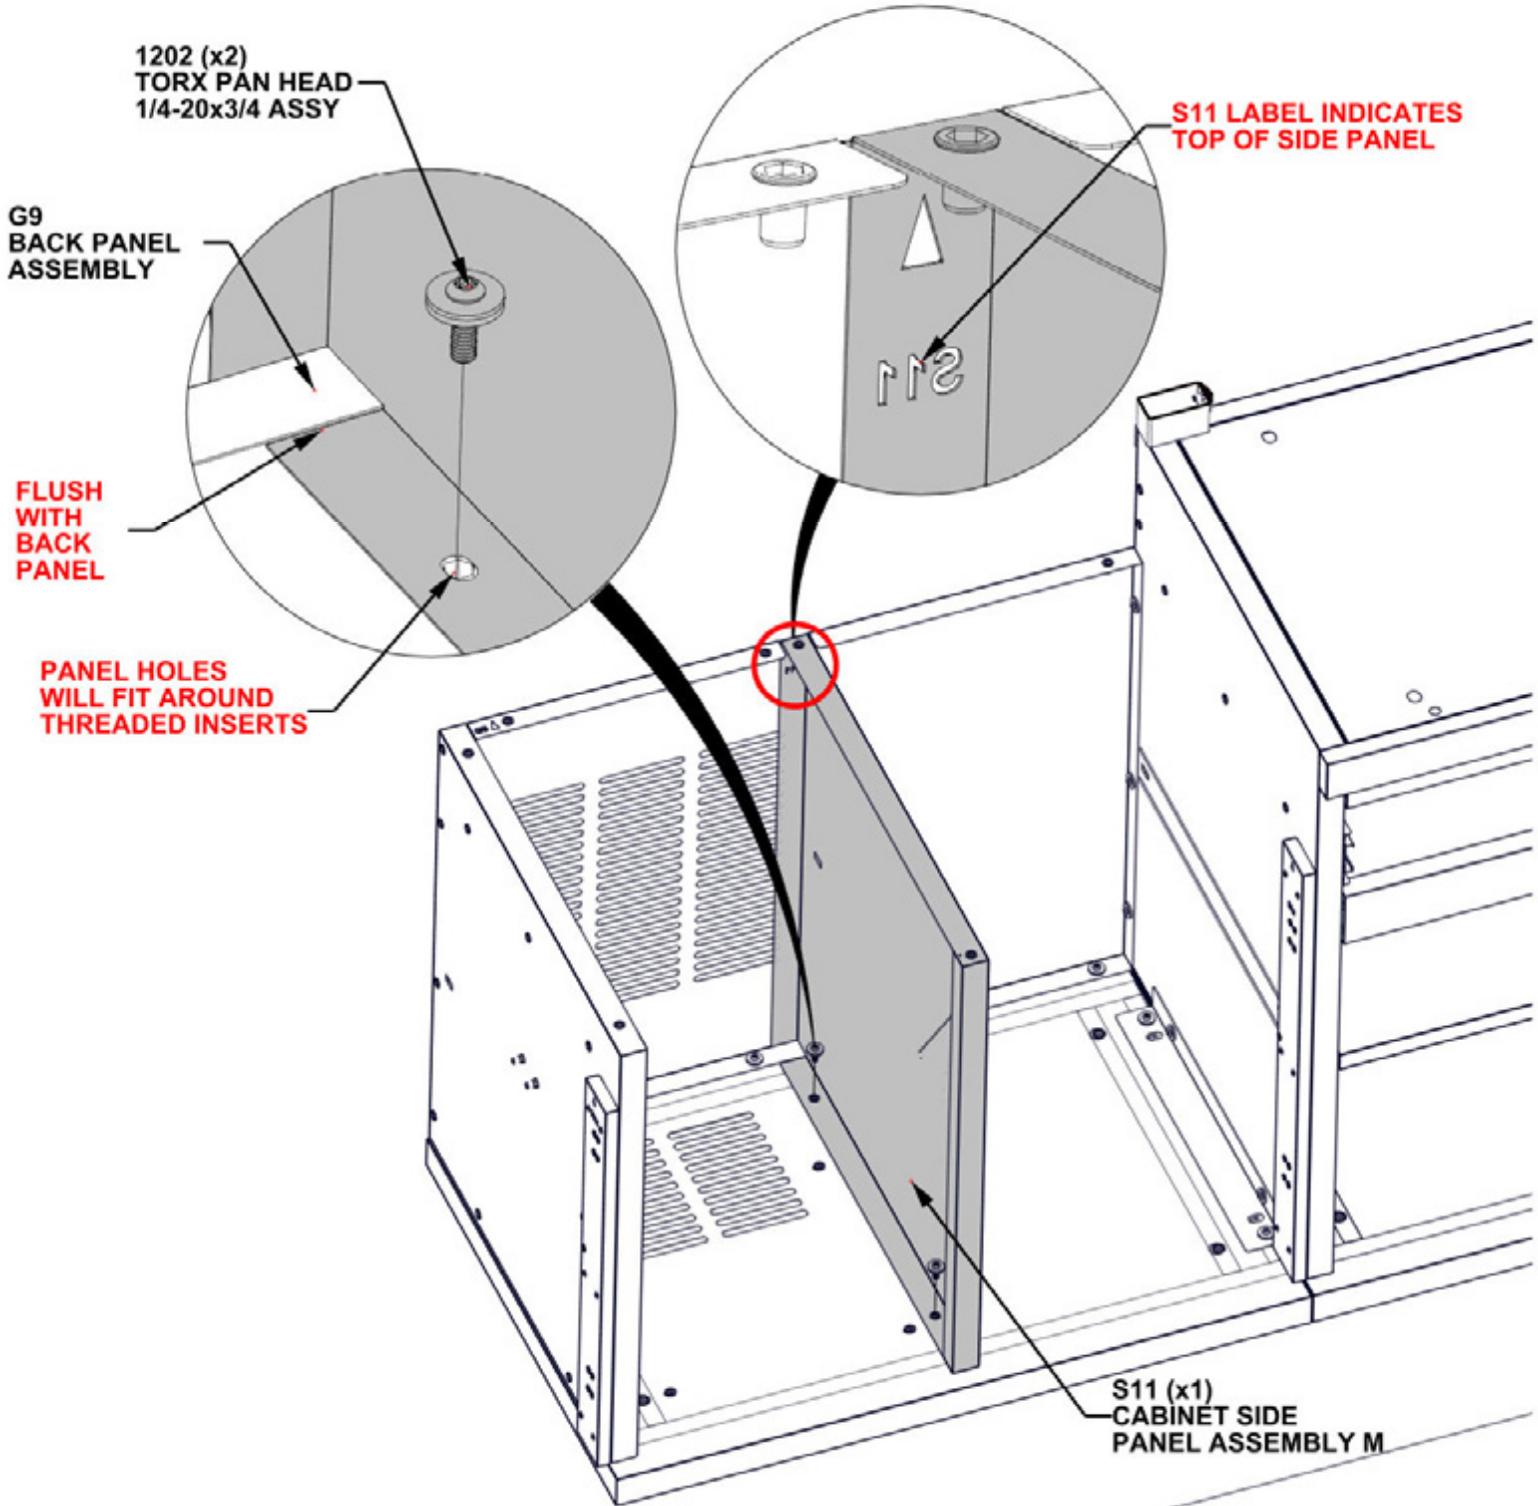


STEP 21 - CABINET ASSEMBLY

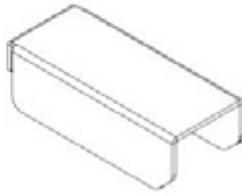

A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER CABINET.

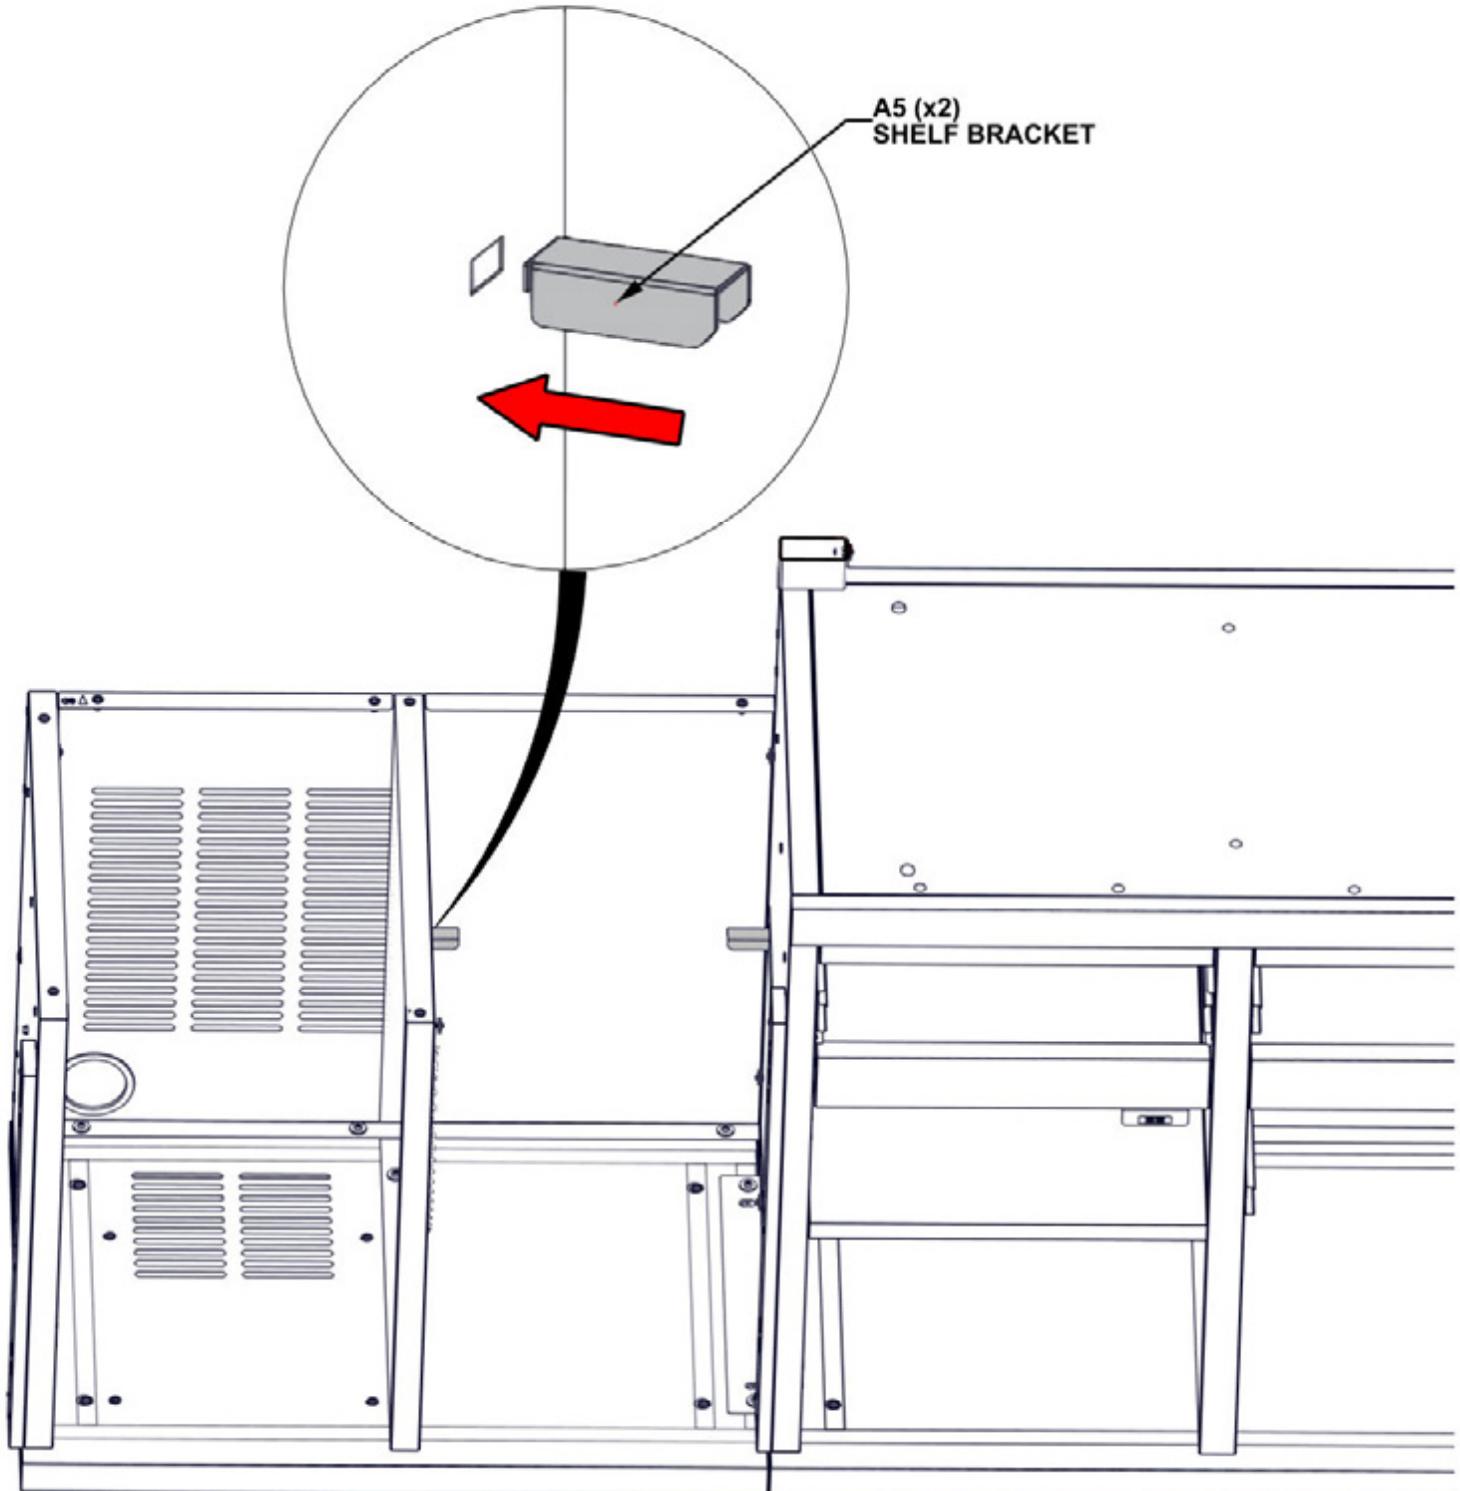


STEP 22 - CABINET ASSEMBLY

Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS



L3 CABINET SHELF - A4M05389
(x1) 23 1/2"x16 5/8"x1" (25x423x597)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

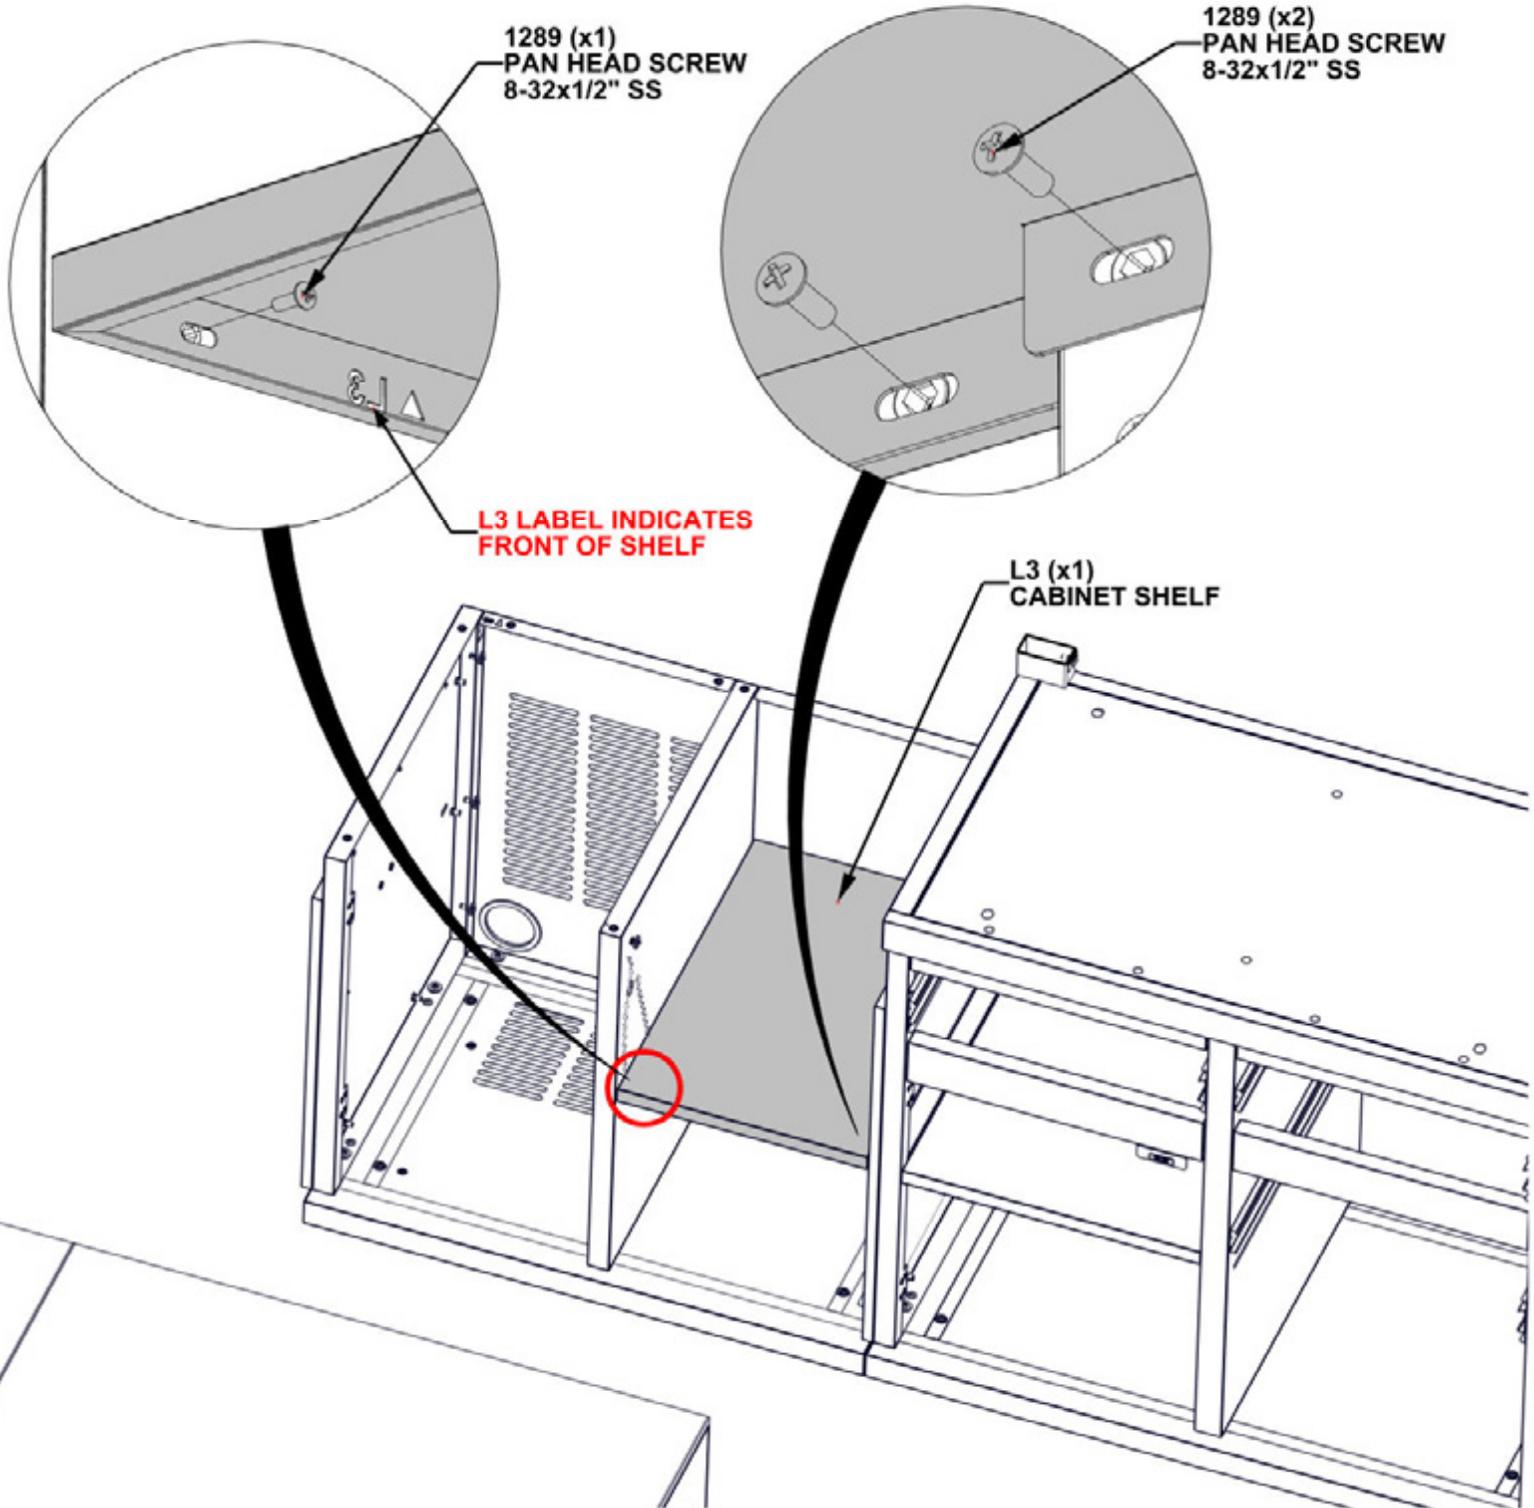


STEP 23 - CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

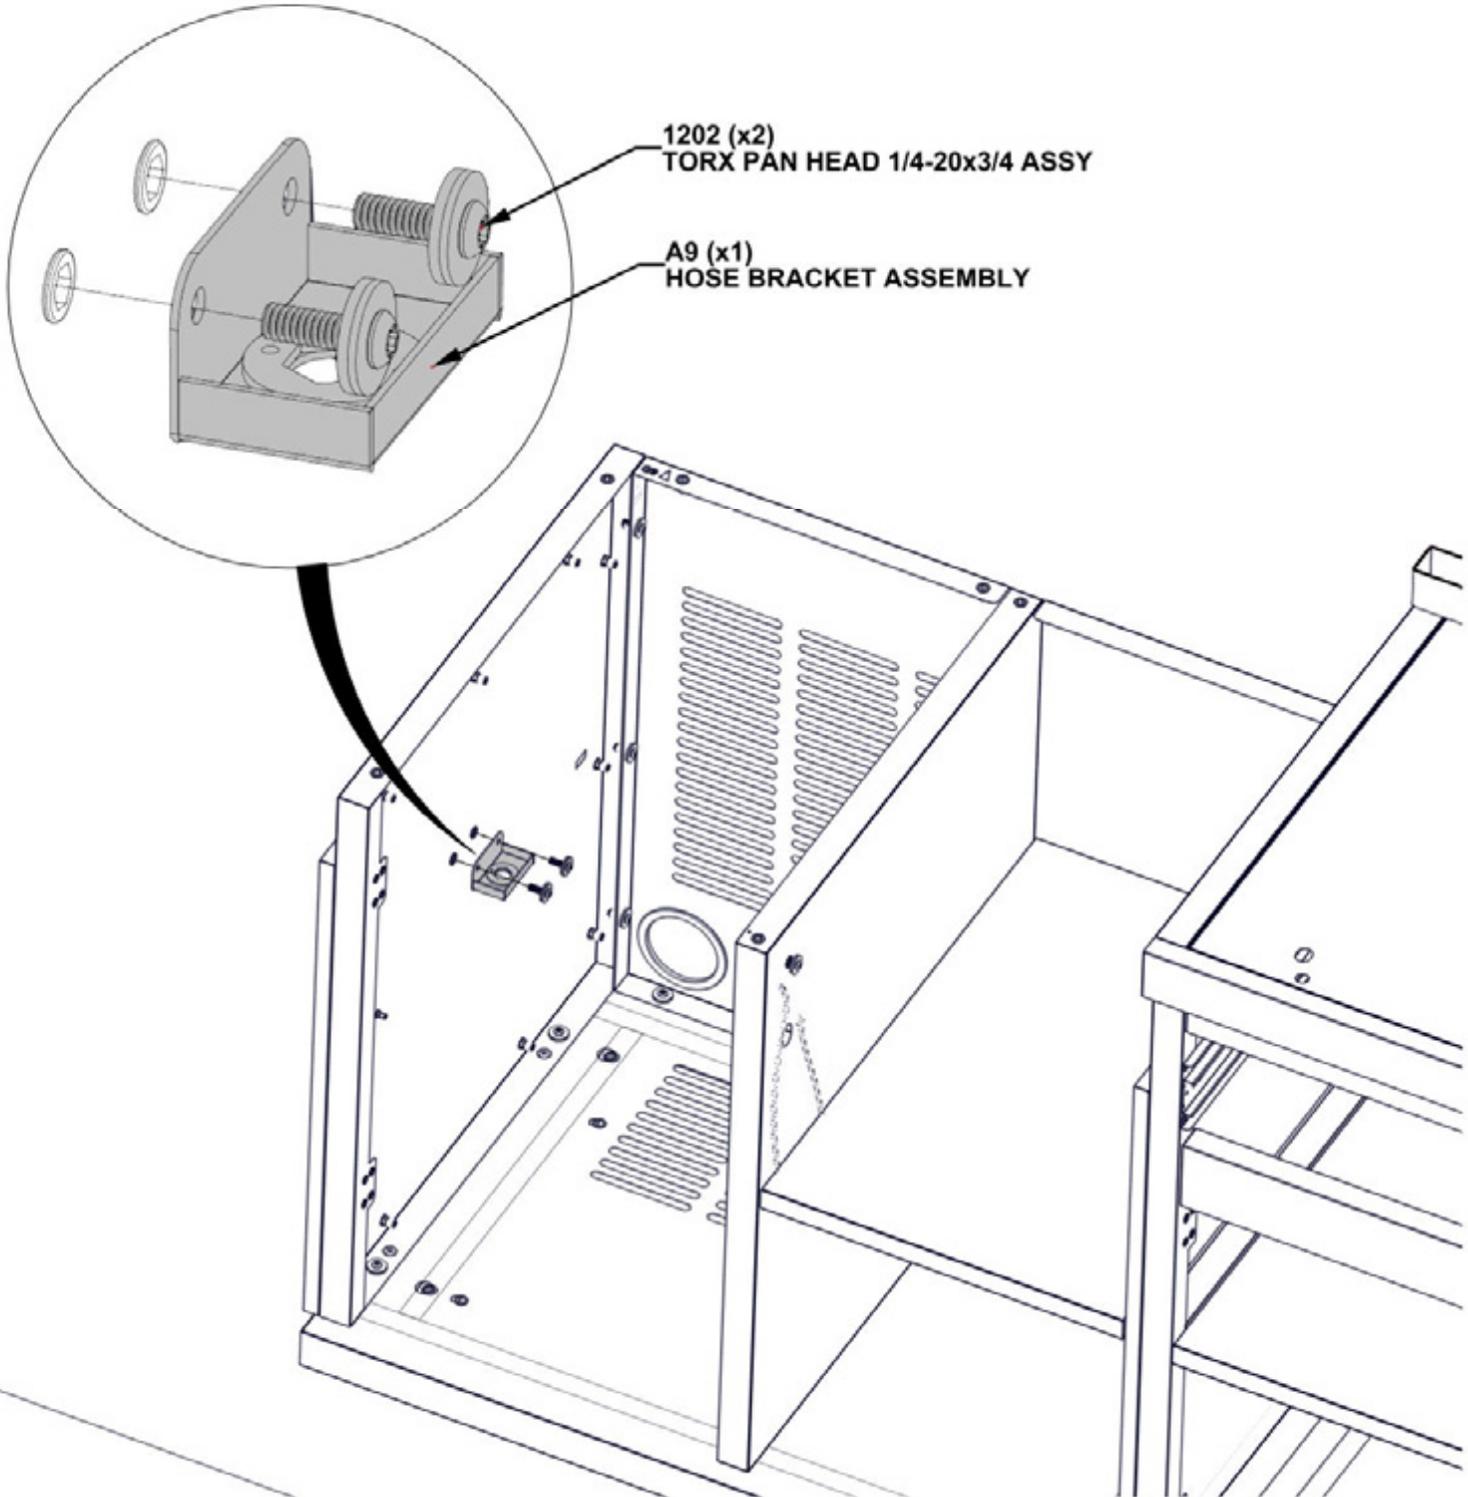

STEP 24 - CABINET ASSEMBLY


Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"

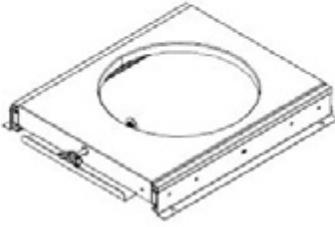



A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

1292 (x4)
TORX PAN HEAD 1/4-20x13/32"

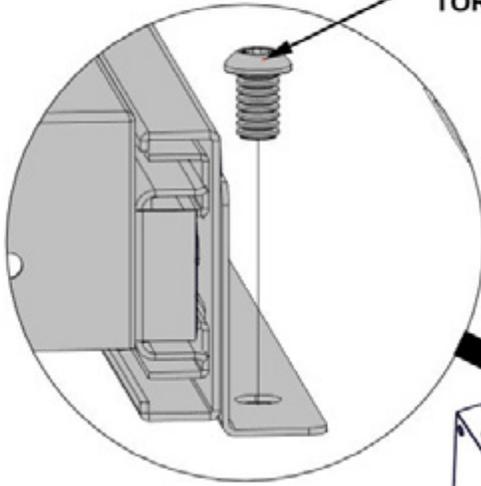


**NOTE ORIENTATION
OF WING NUT
TOWARDS FRONT**

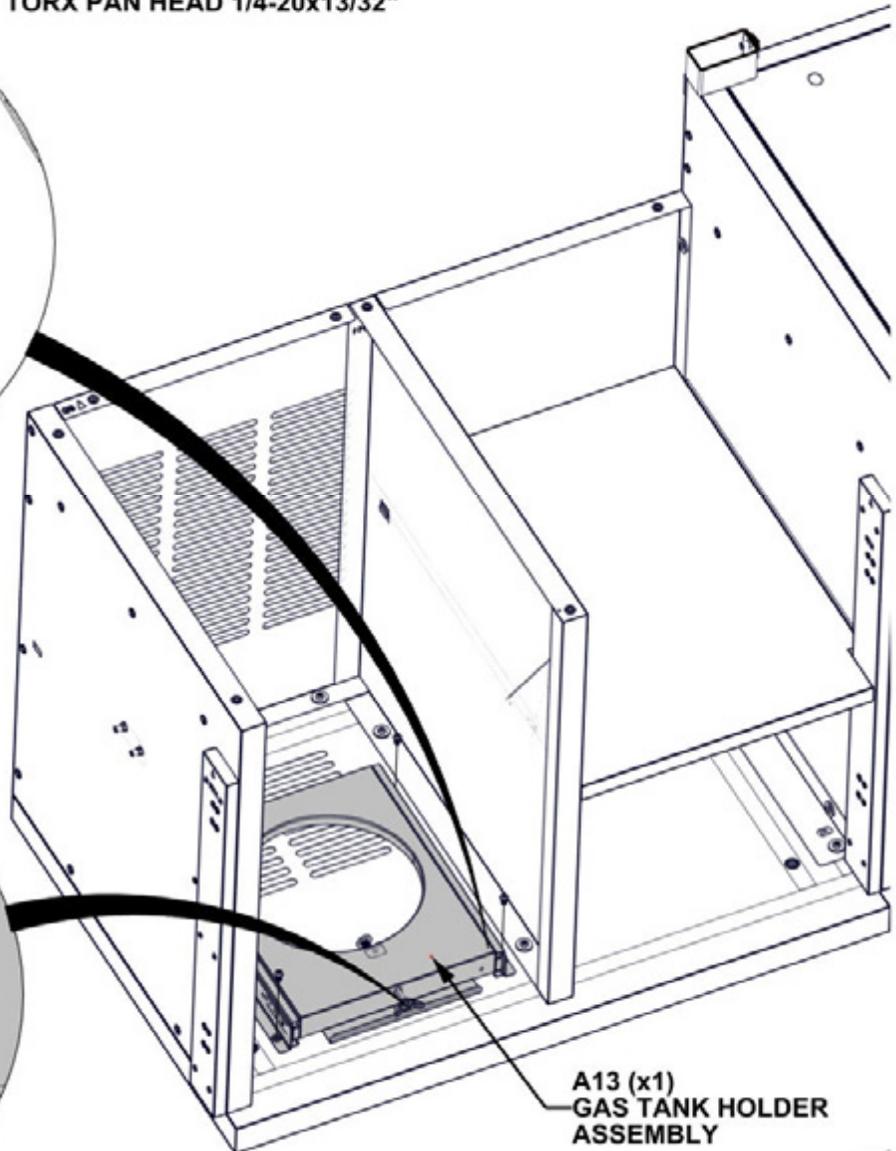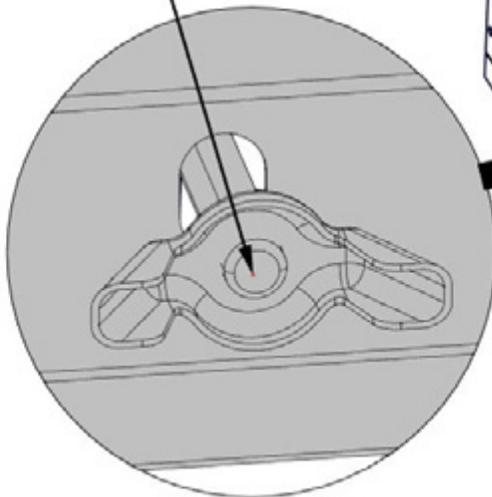

A13 (x1)
GAS TANK HOLDER
ASSEMBLY

STEP 25A - CABINET ASSEMBLY


Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

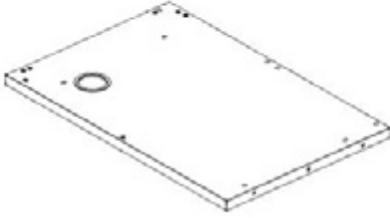

T6 TABLETOP ASSEMBLY - A4M05371
 (x1) 35 9/16"x23 11/16"x1 1/4" (32x601.00x904.00)




A2 MAGNET BRACKET - A4M03026
 (x2) 1"x1 1/4"x3 1/8" (25x31x80)

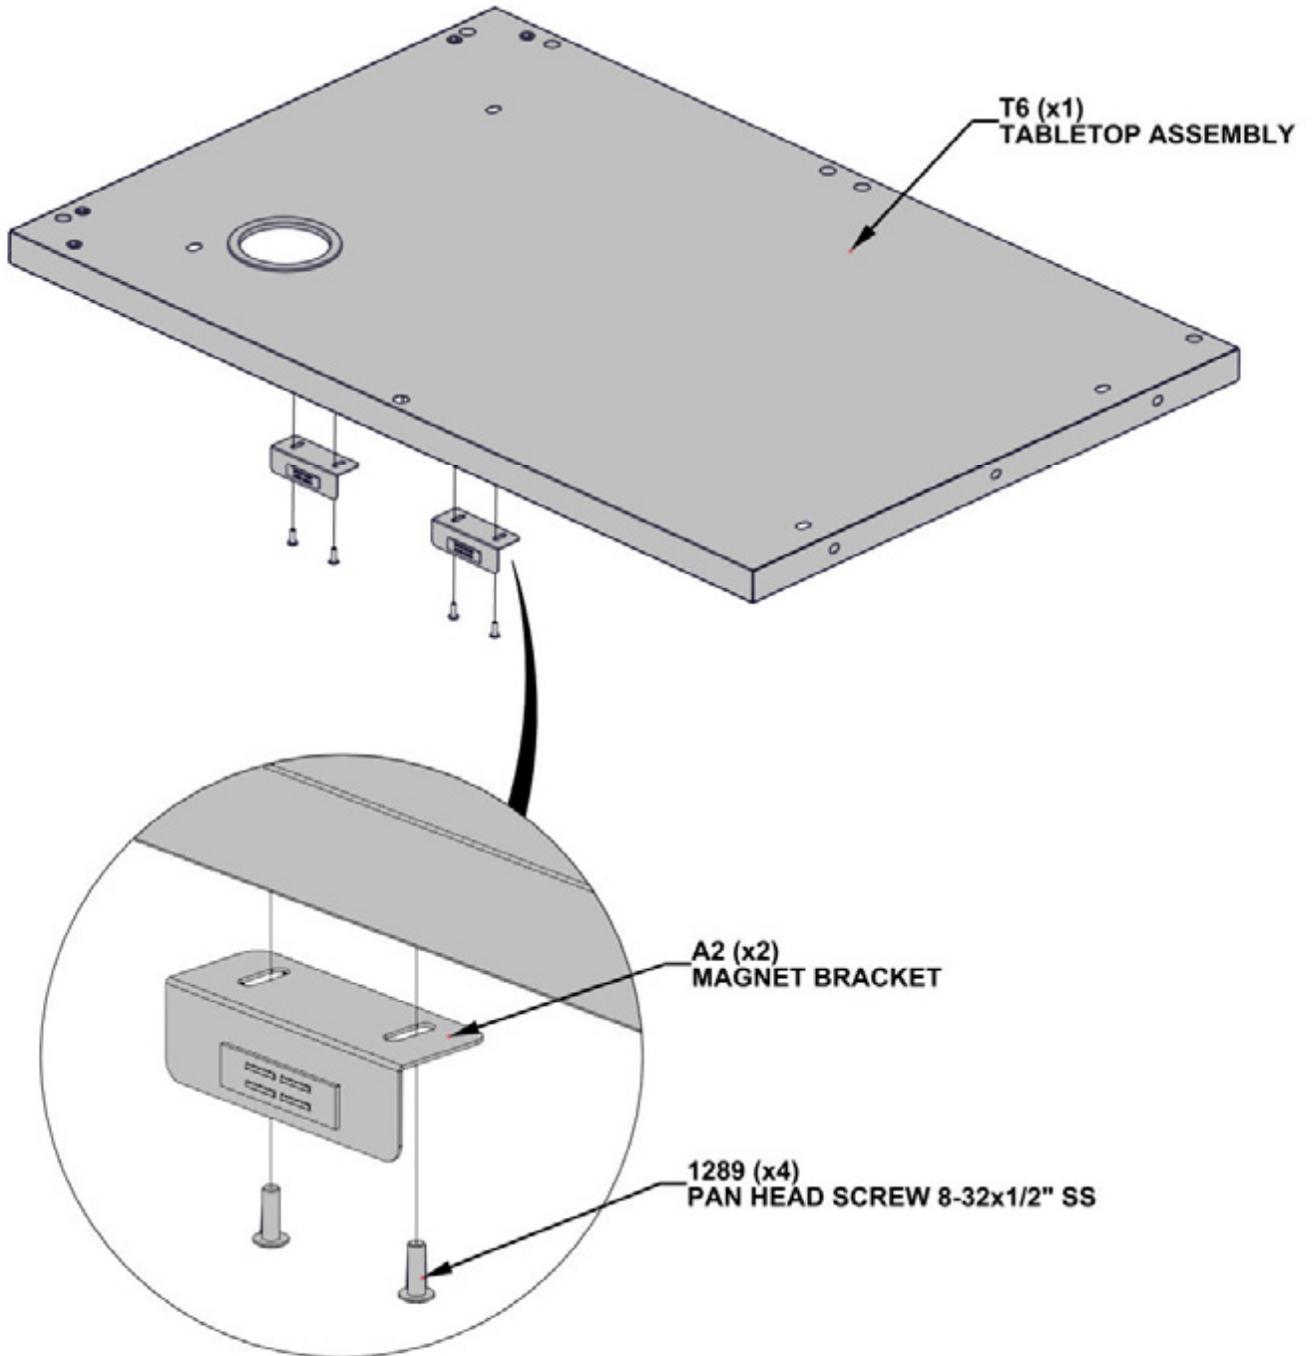


STEP 25B - CABINET ASSEMBLY

Qty	PartNo	Description
3	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

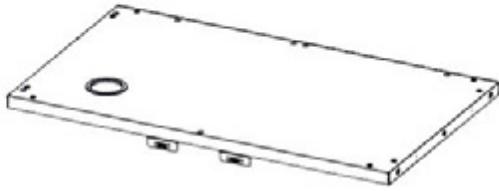

CABINET ASSEMBLY FROM STEP 25A


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET**

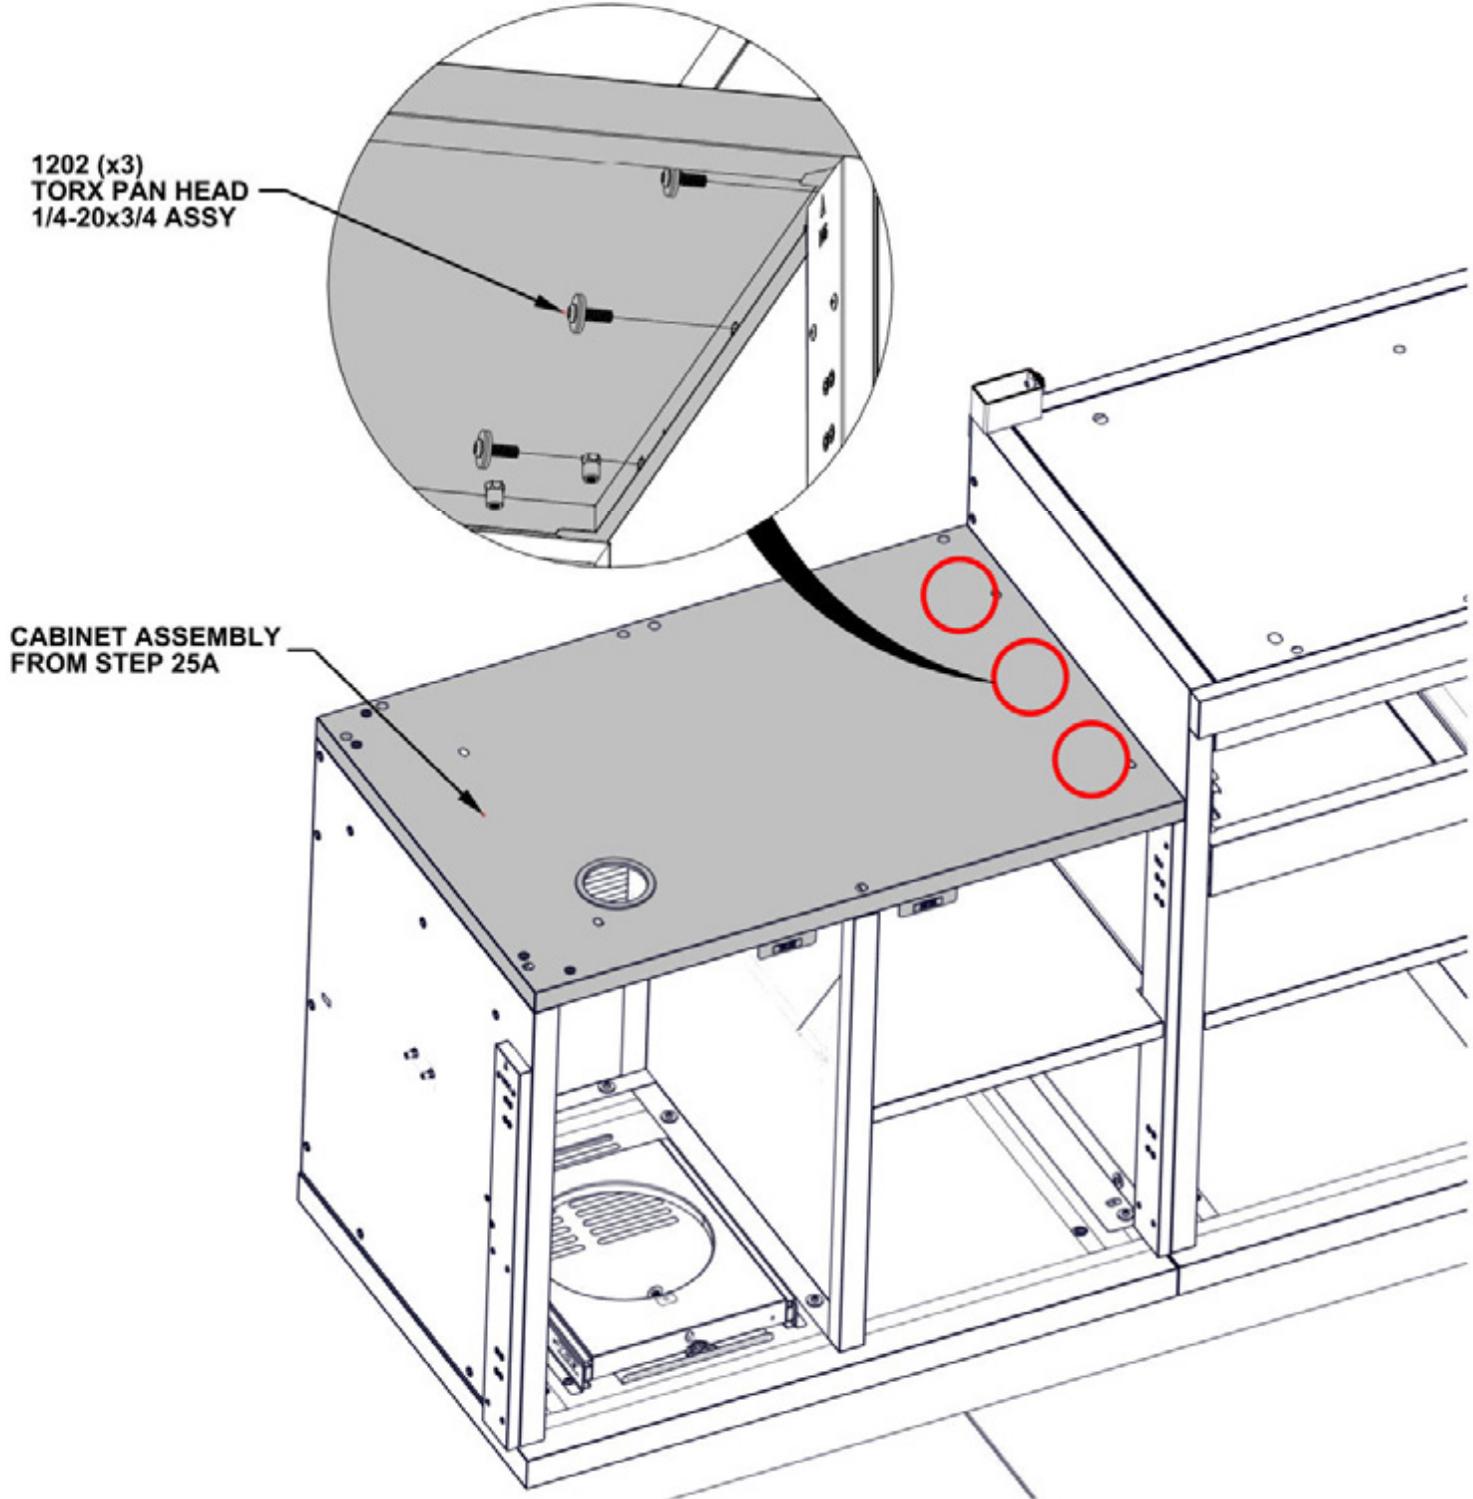


STEP 25C - CABINET ASSEMBLY

Qty	PartNo	Description
7	H101103	TORX SOCKET SCREW 1/4-20

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

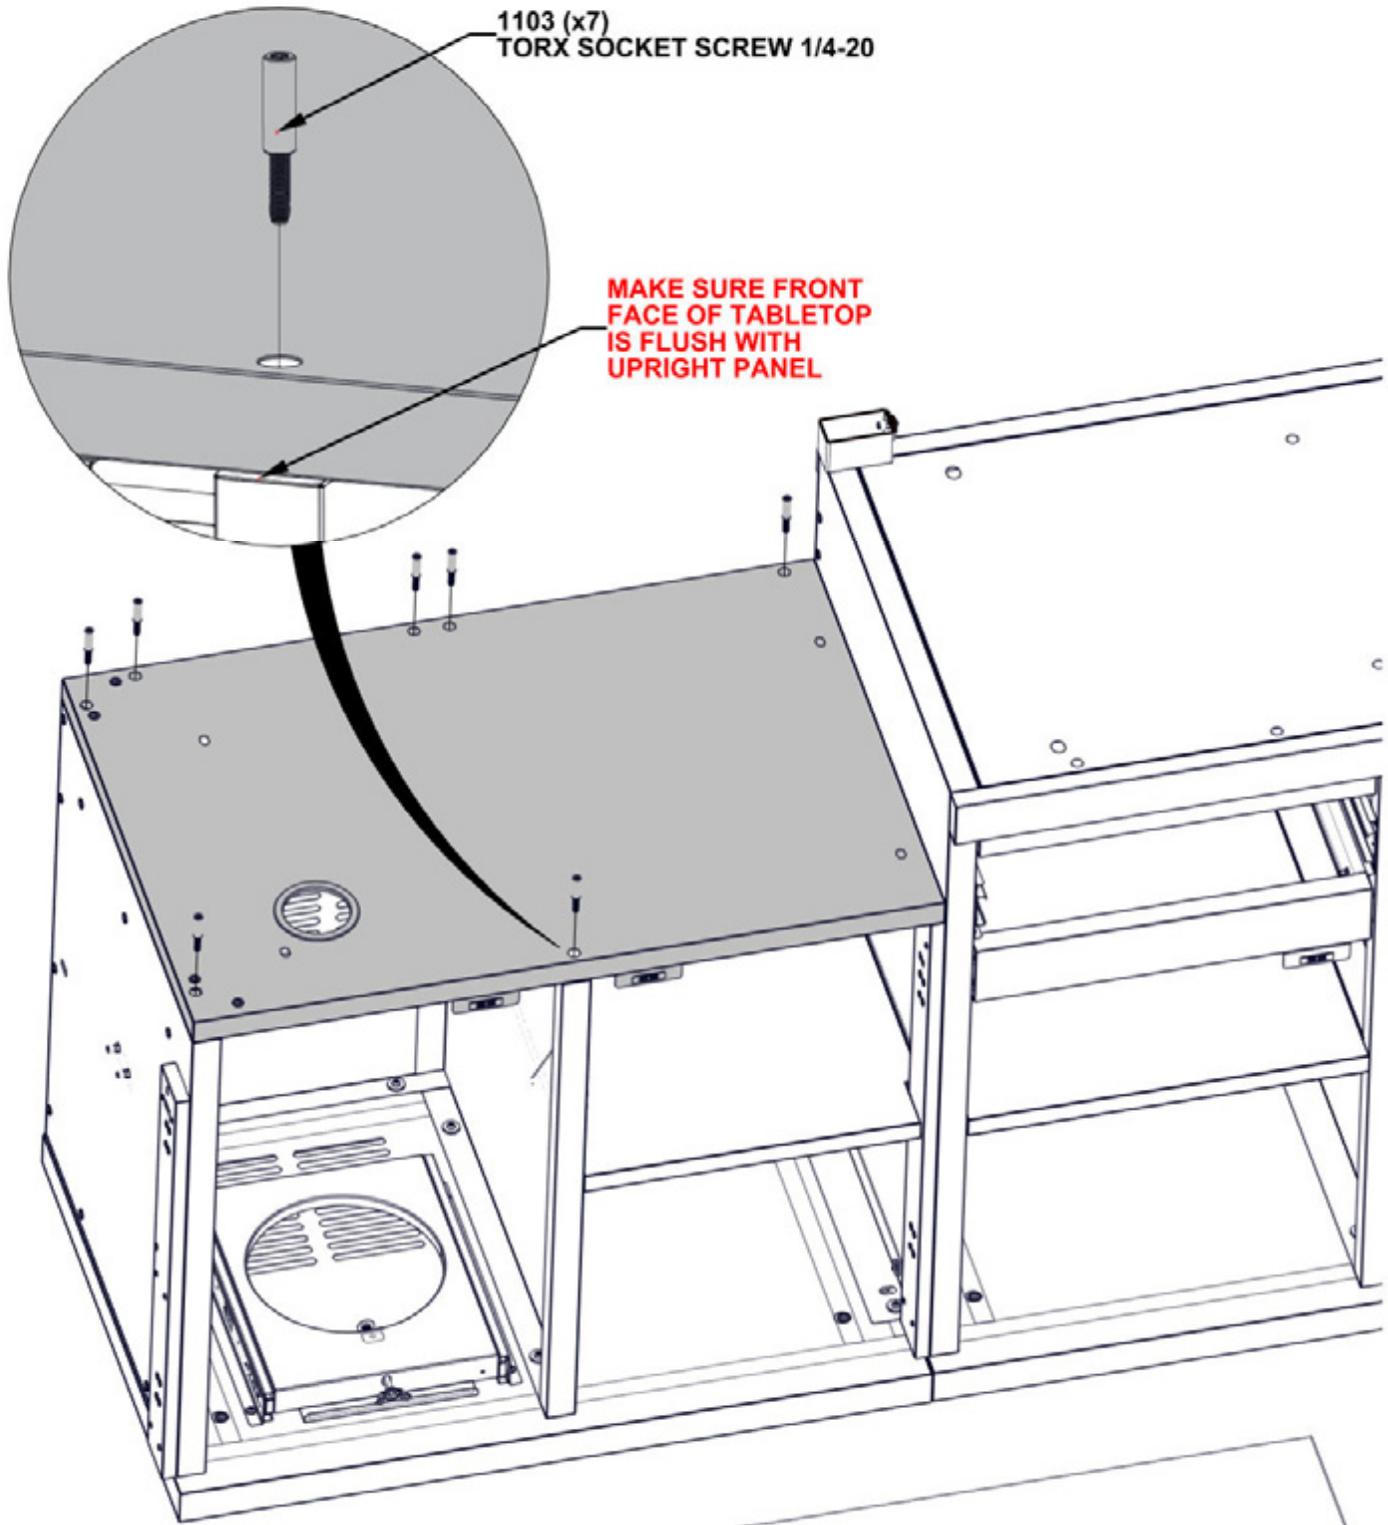


STEP 26 - CABINET ASSEMBLY

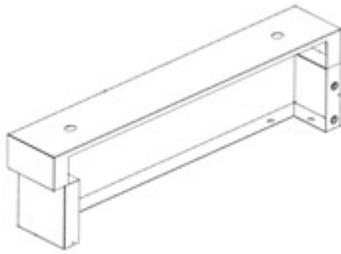

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


A14 COUNTERTOP BRACKET ASSEMBLY - A4M05373
 (x1) 24 5/8"x6 13/16"x4 1/8" (109x172.2x625)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

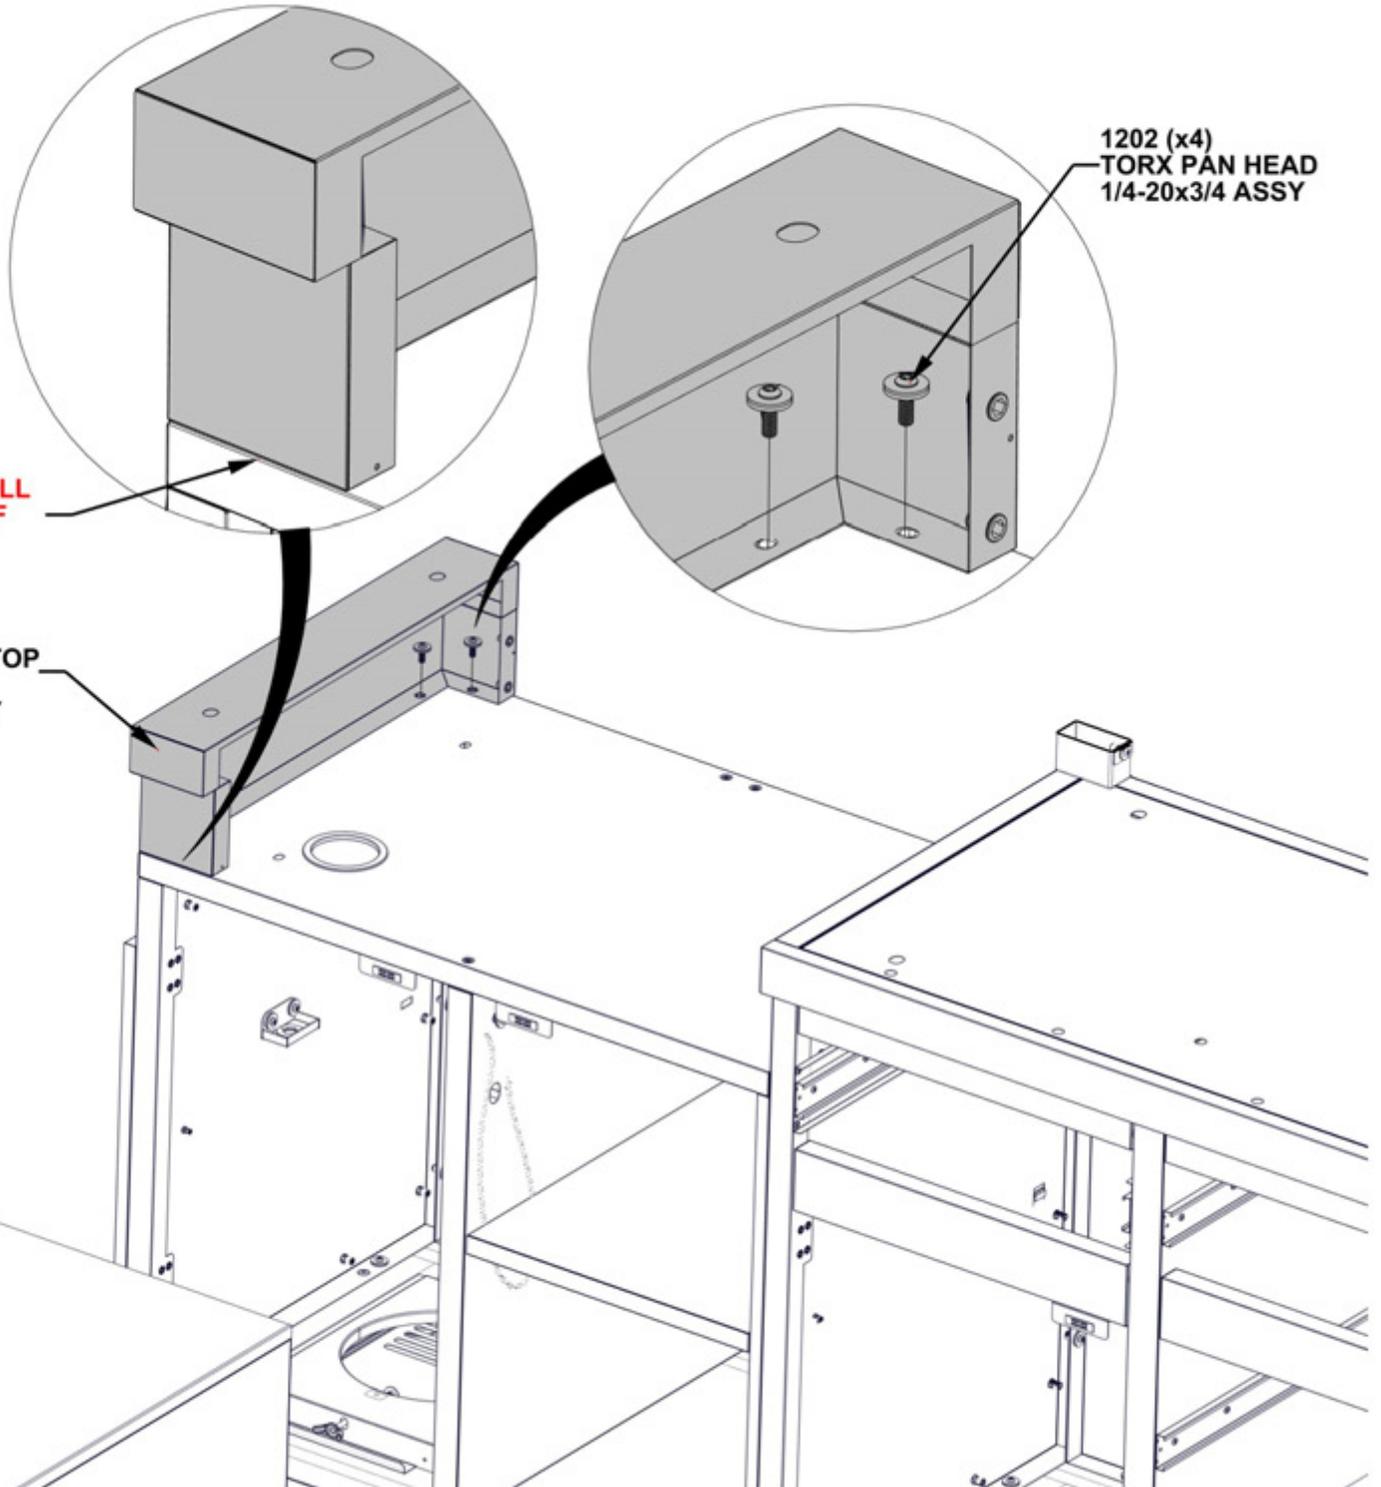

STEP 27 - CABINET ASSEMBLY


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

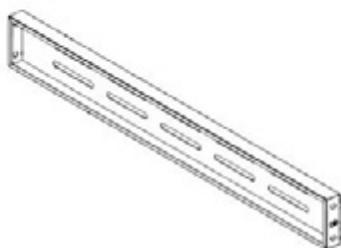


O8 VENTILATION PANEL - A4M03078
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.


1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

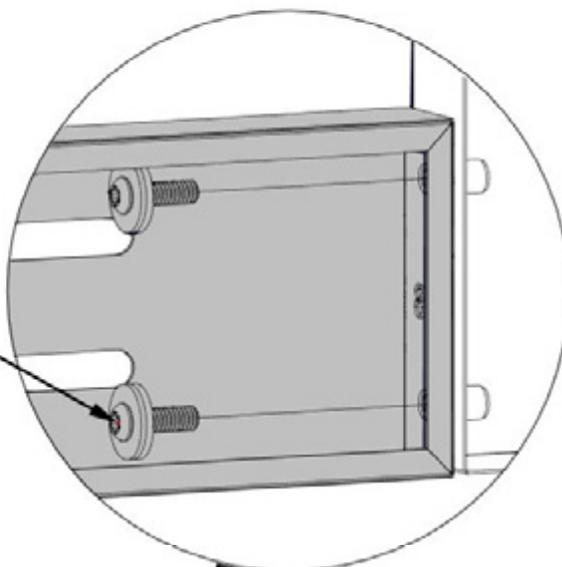

O8 (x1)
VENTILATION PANEL

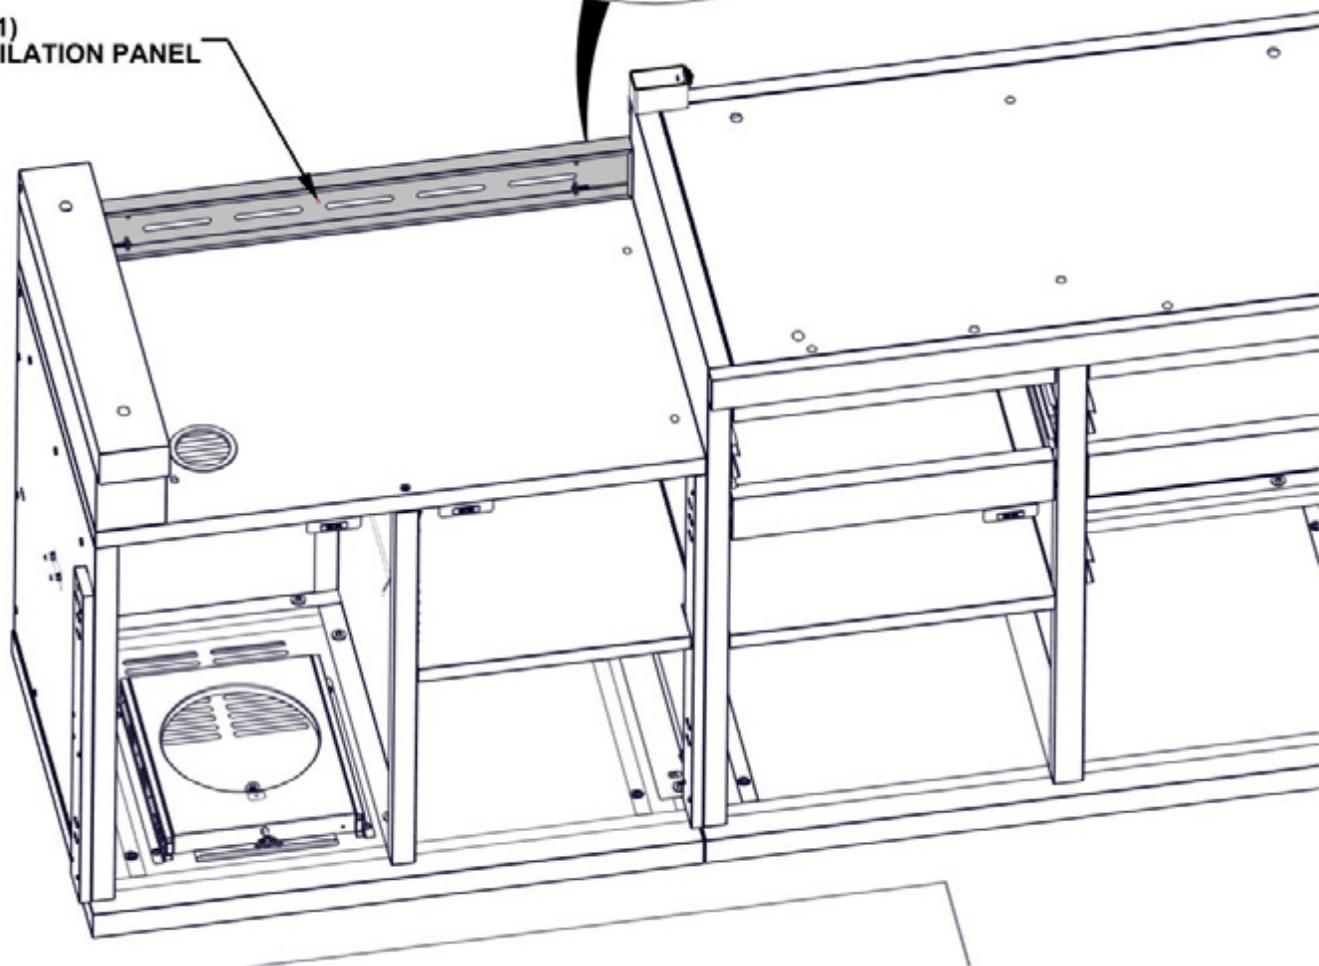


STEP 28A - CABINET ASSEMBLY

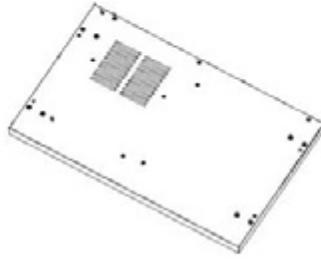

F6 FLOOR PANEL ASSEMBLY - A4M05366
(x1) 39 5/8"x24 3/4"x1 3/4" (45x628.50x1007)


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **LOOKING AT THE FRONT SIDE OF THE CABINETS, SLIDE FLOOR PANEL IN BETWEEN P03 POST AND RIGHT CABINET.**

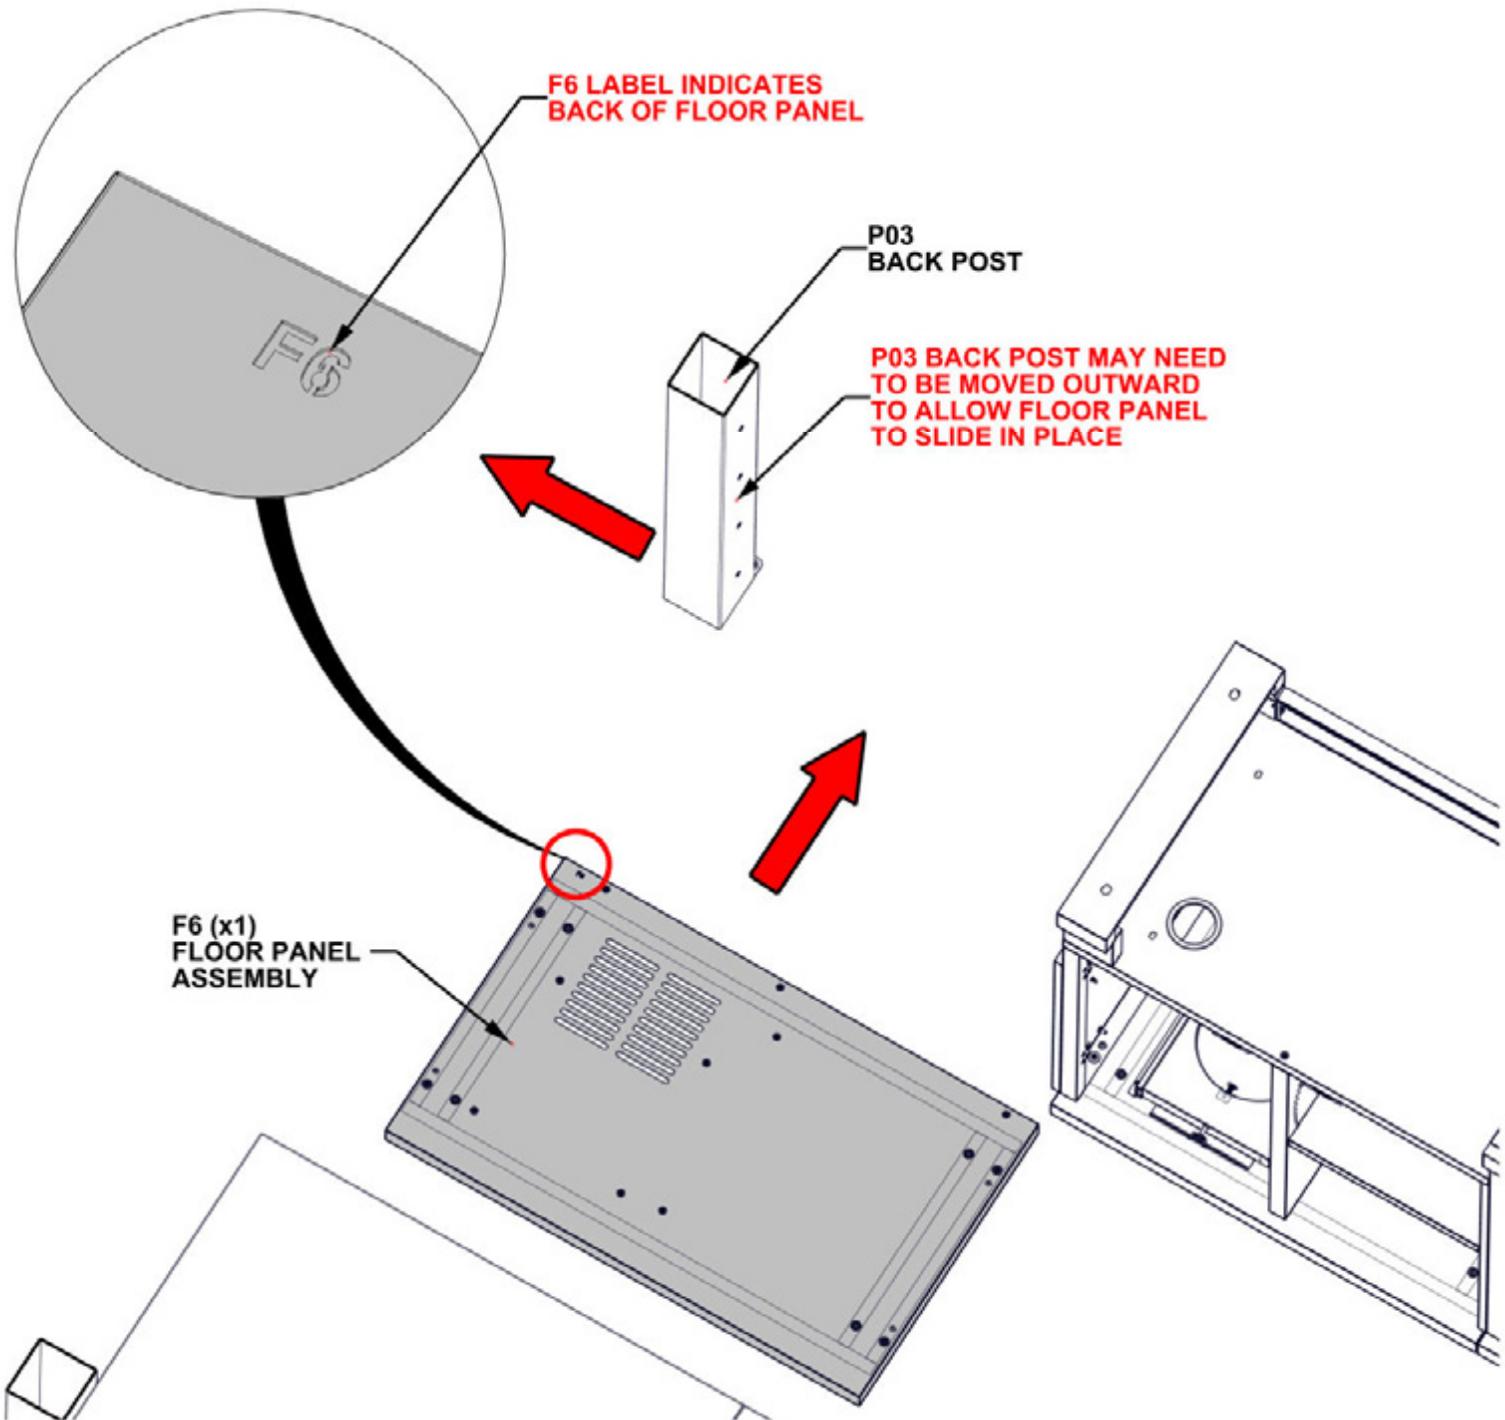

STEP 28B - CABINET ASSEMBLY


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.
- ADJUST LEFT POST AND RIGHT CABINET TO ELIMINATE ANY GAPS BETWEEN FLOOR PANEL AND POST AND CABINETS.

ENSURE THE TOP SURFACE OF F6 IS IN CONTACT WITH THE BOTTOM SURFACE OF H11 WHEN ADJUSTING THE BASE PLATE

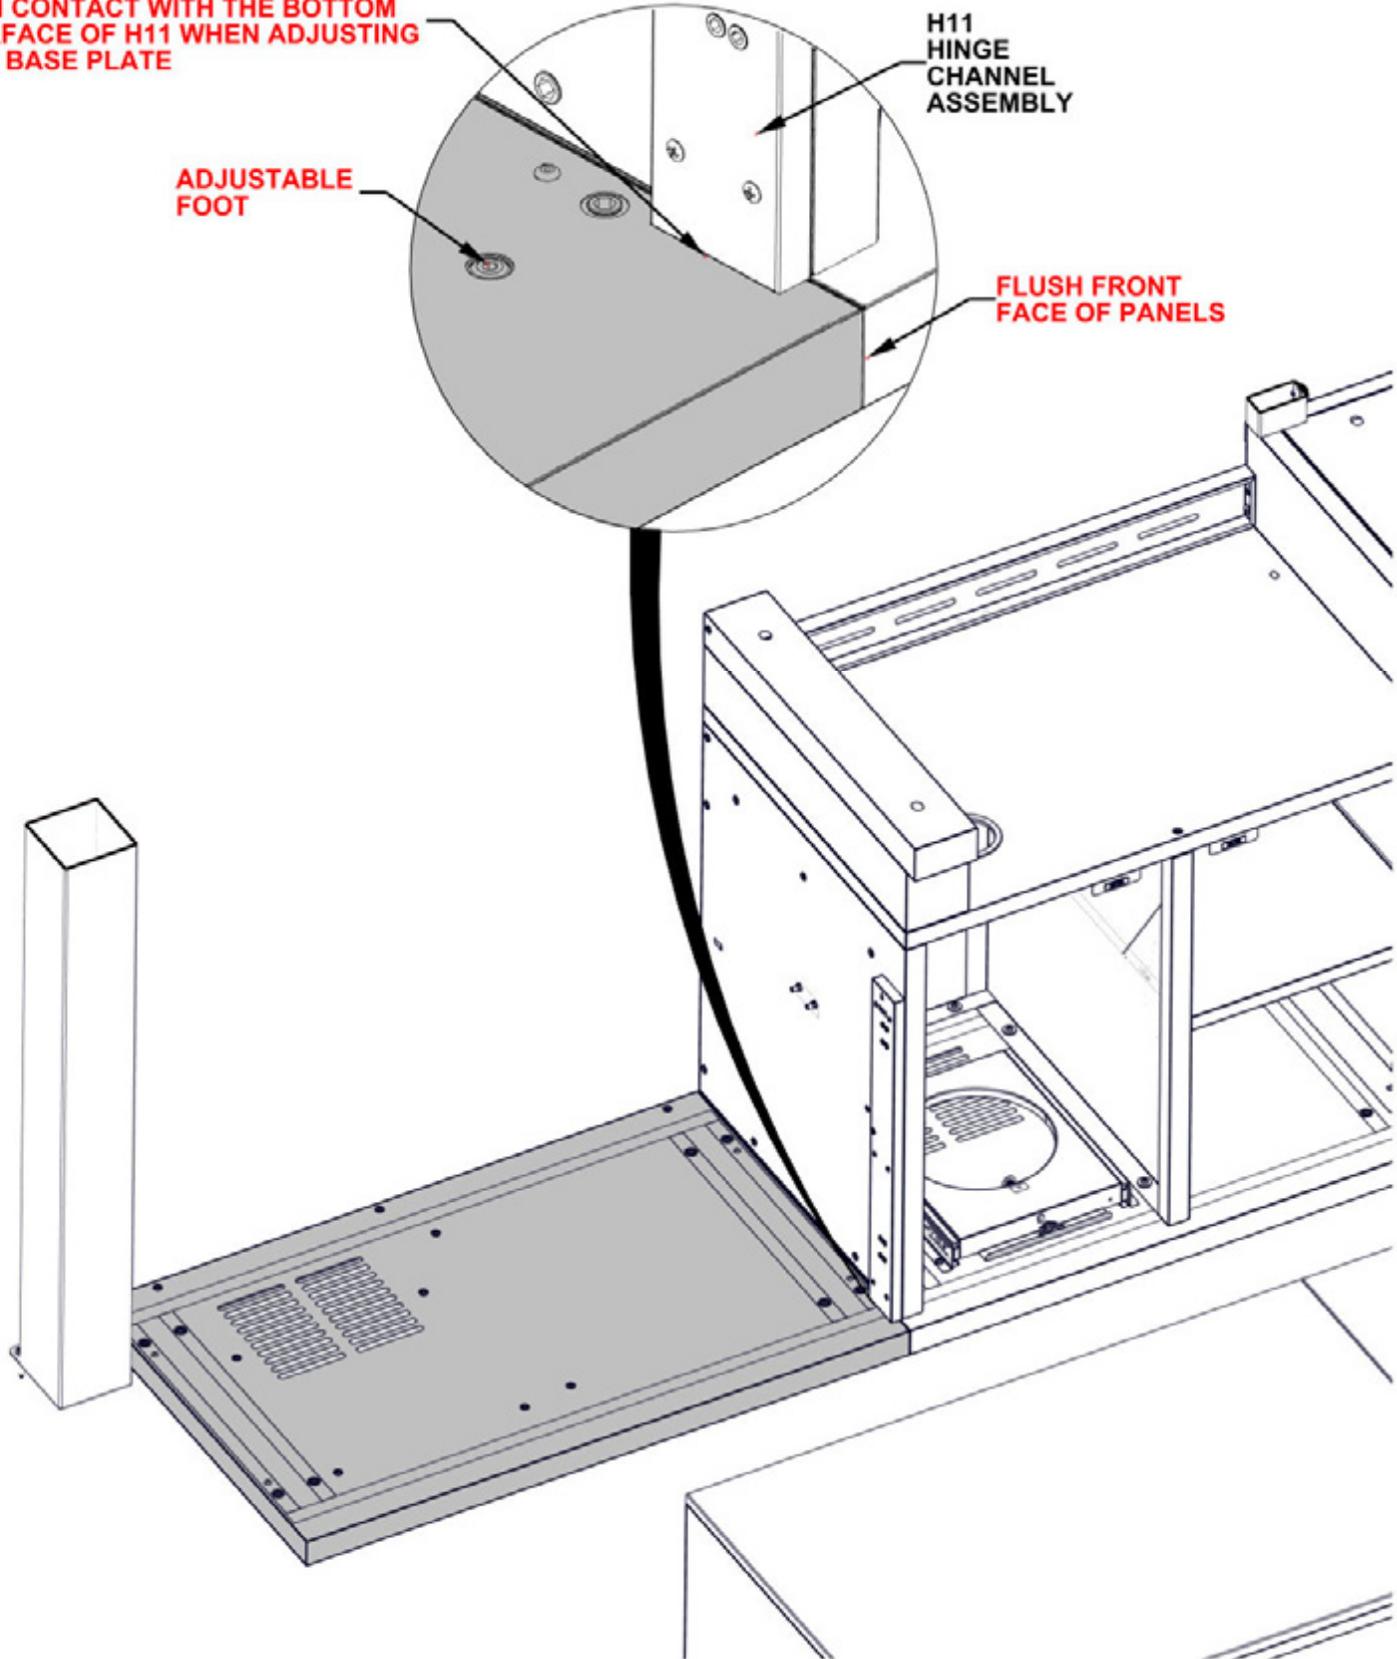


STEP 29 - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

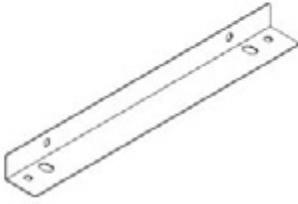


A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

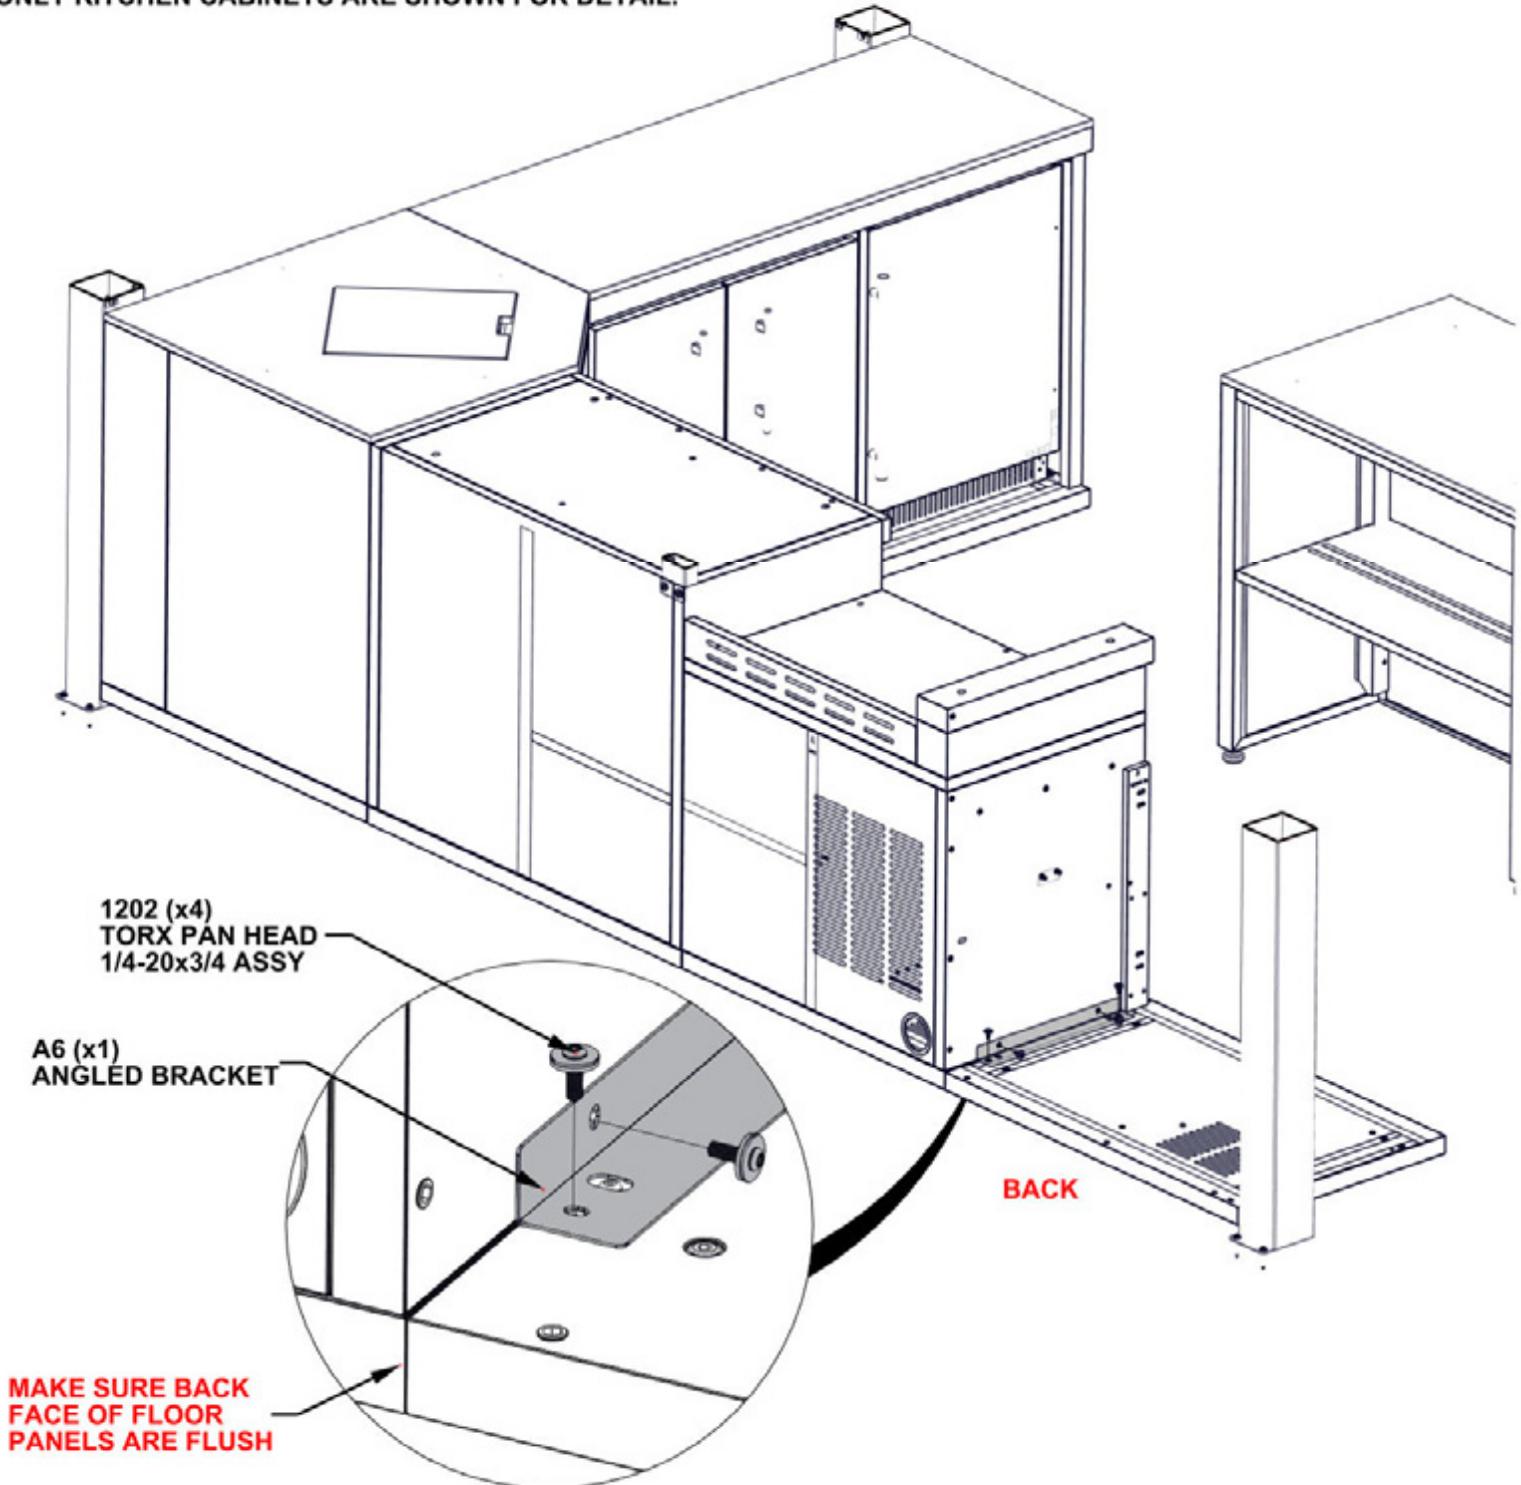


STEP 30 - CABINET ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

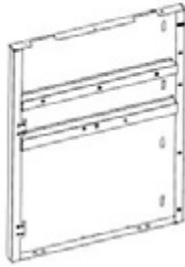


S12 SIDE PANEL ASSEMBLY - A4M05370
(x1) 32 15/16"x23 11/16"x1 3/8" (35.00x601.00x836.50)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH SIDE PANEL TO POST AND FLOOR PANEL.
- THE INSIDE OF THE BACK LEFT POST WILL SIT AGAINST SIDE OF SIDE PANEL.
- BACKSIDE OF POST WILL SIT FLUSH WITH BACKSIDE OF SIDE PANEL.
- BEFORE TIGHTENING HARDWARE, ADJUST CABINET FEET AS NEEDED UNTIL FLOOR PANELS ARE LEVEL.
- ALIGN PILOT HOLES IN POST WITH SLOTS IN SIDE PANEL.

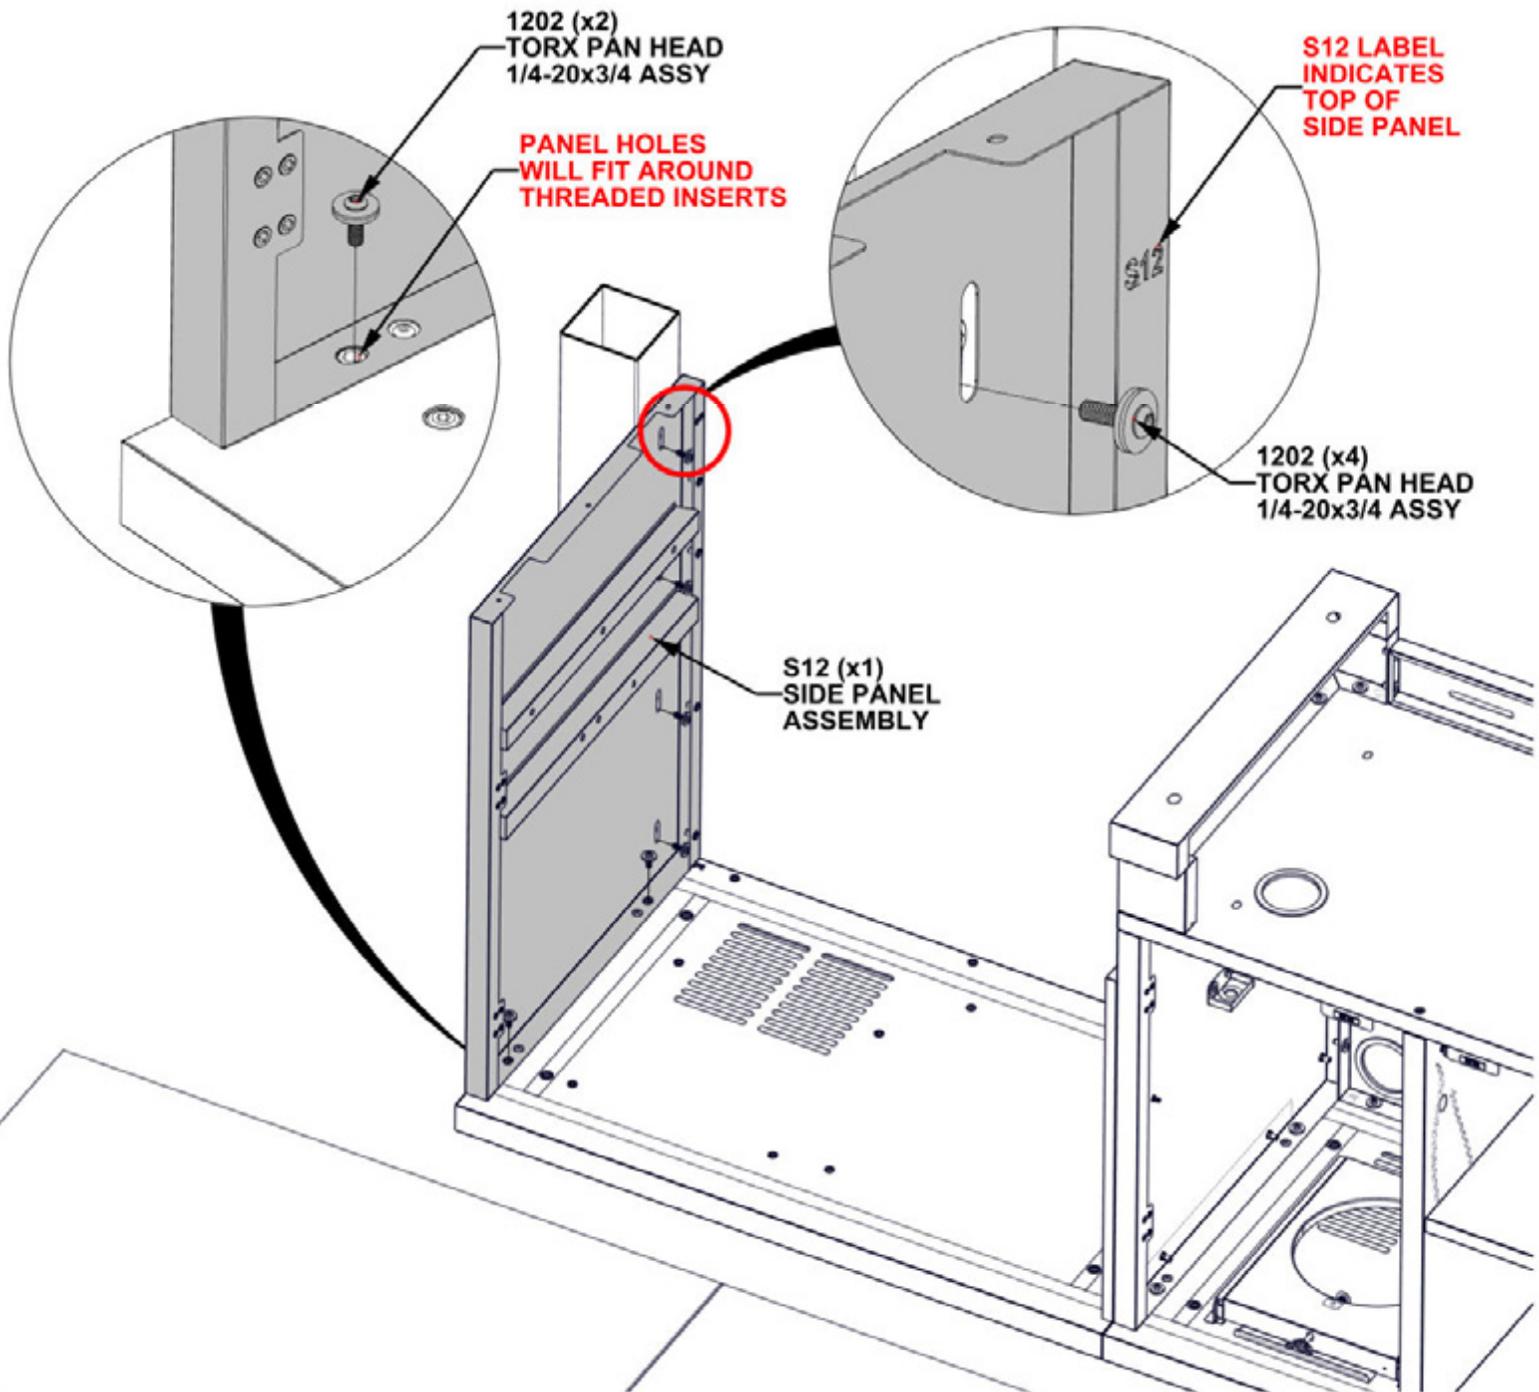


STEP 31 - CABINET ASSEMBLY

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

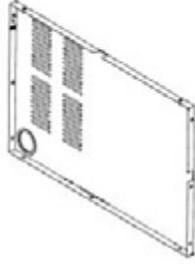

G10 BACK PANEL ASSEMBLY - A4M05375
(x1) 1 3/16"x23 1/2"x38 1/4" (30x598x971)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

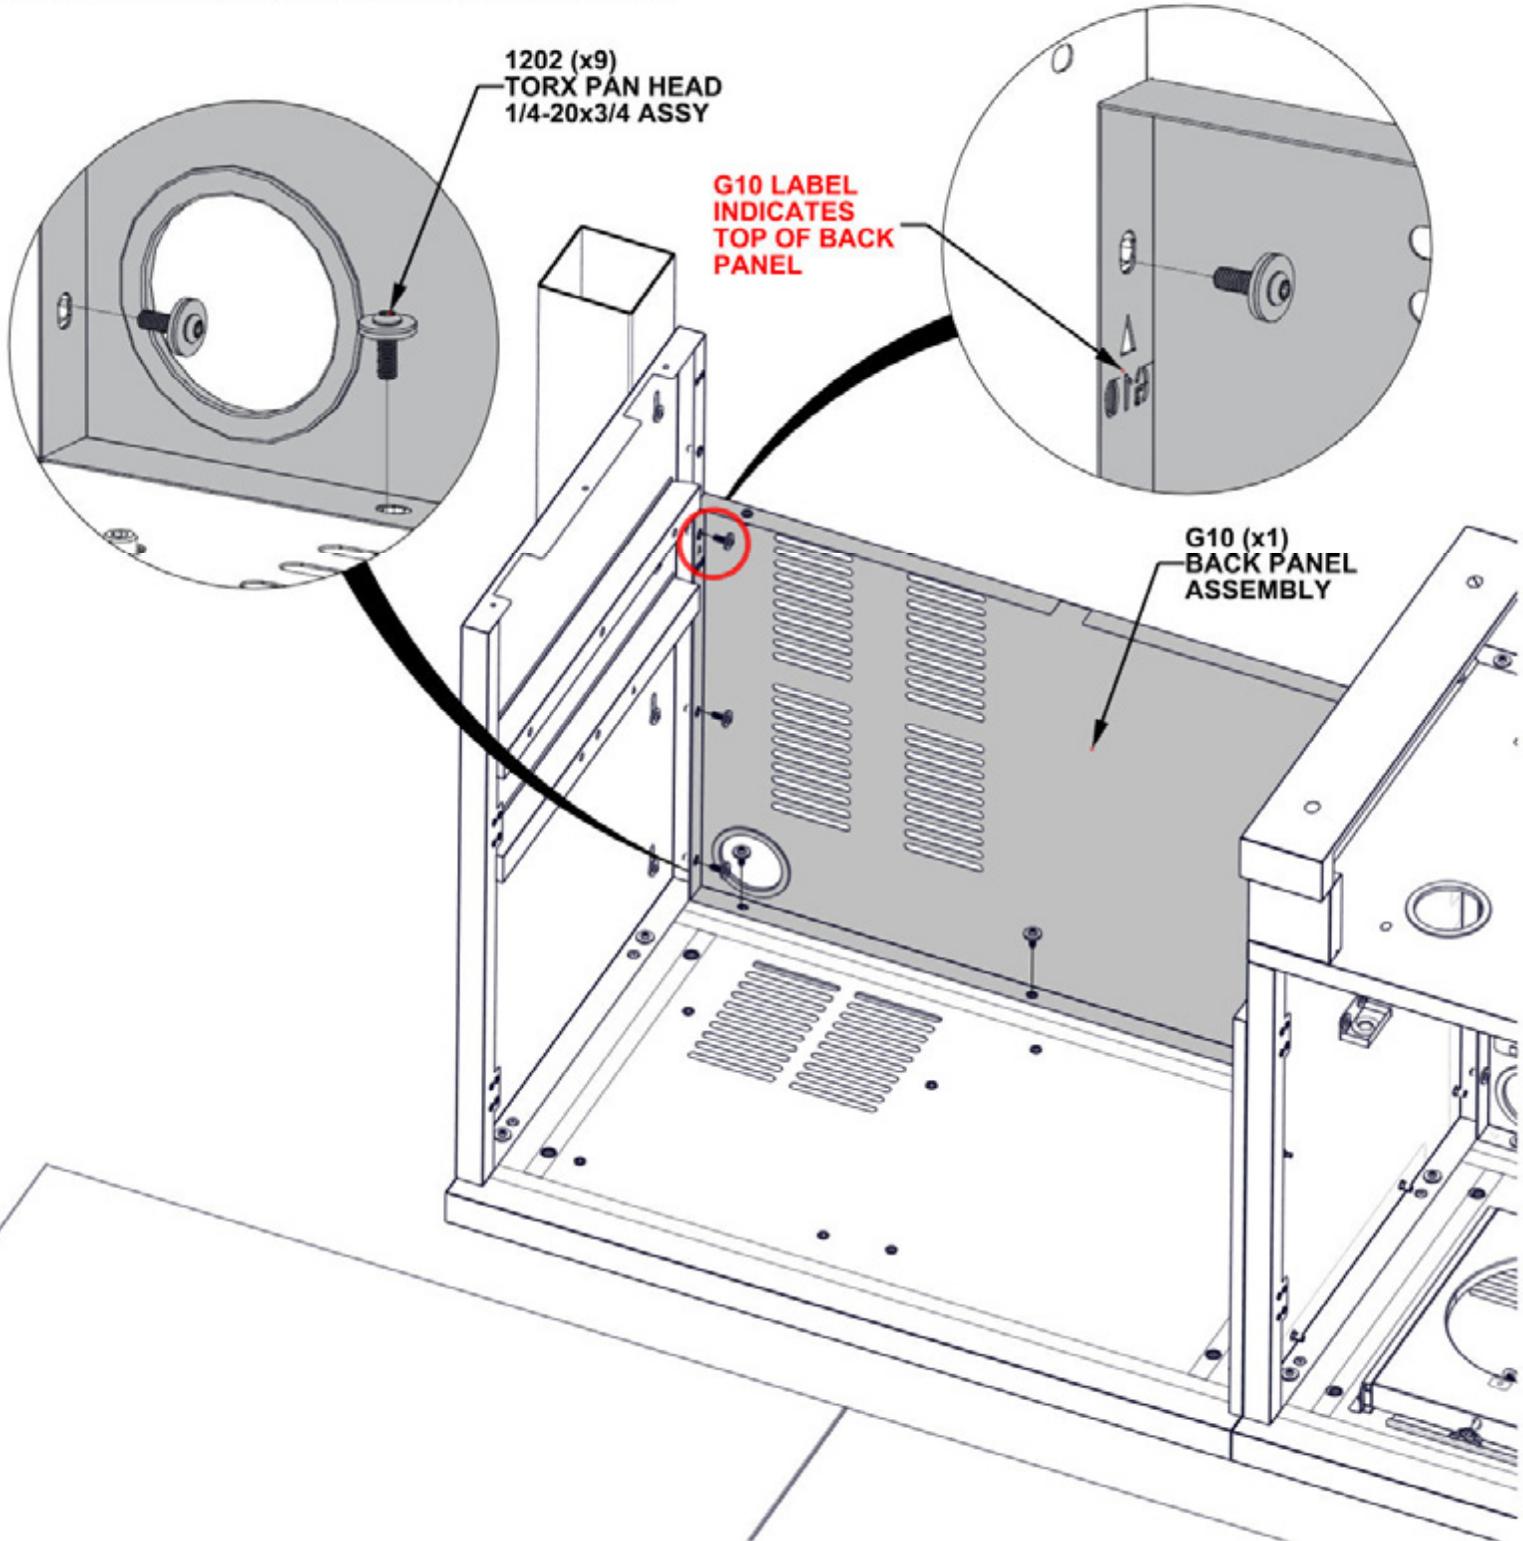


STEP 32 - CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




S13 CABINET SIDE PANEL ASSEMBLY M - A4M05386
 (x1) 23 5/8"x23 1/2"x1 3/8" (35x597x600)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

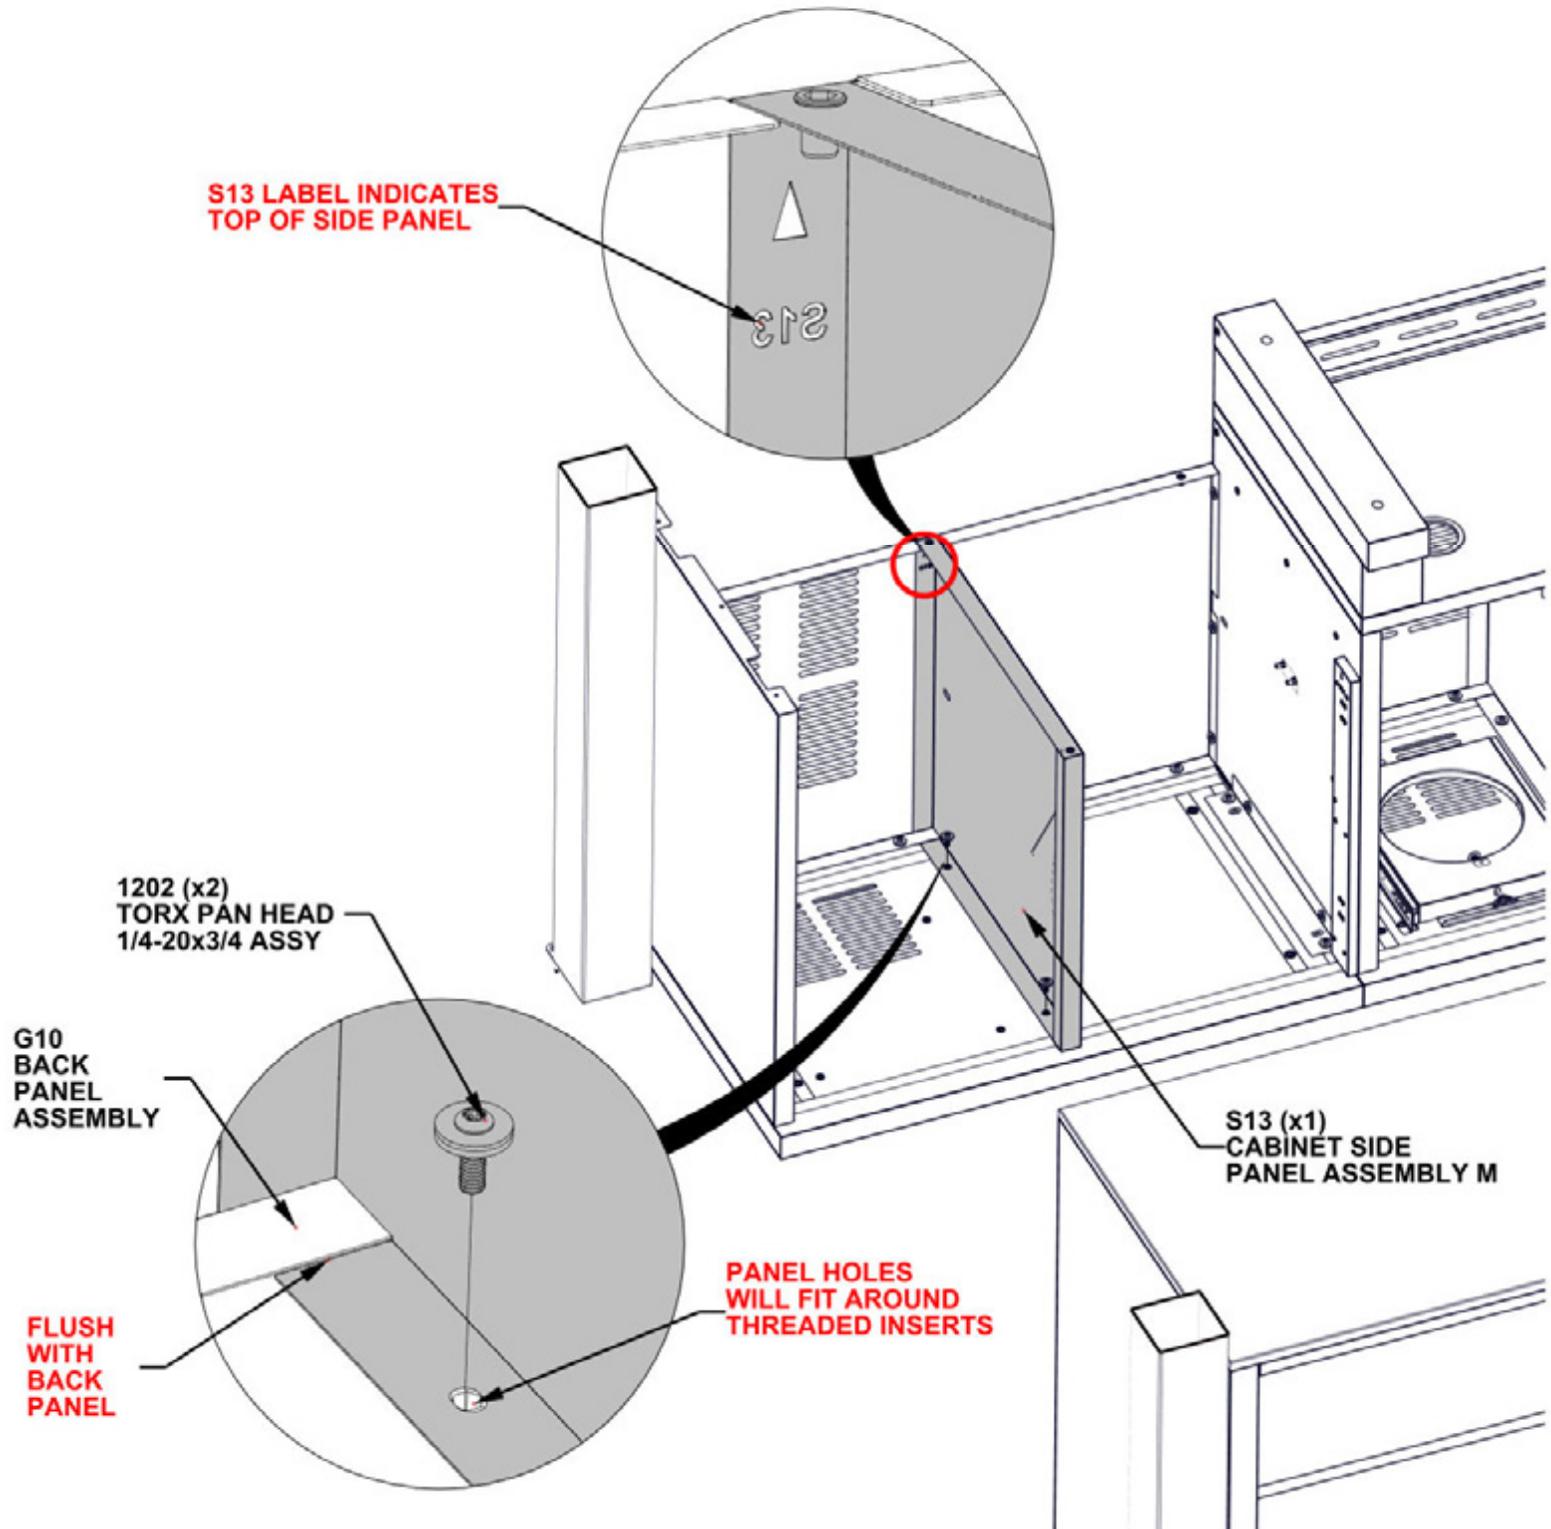


STEP 33 - CABINET ASSEMBLY

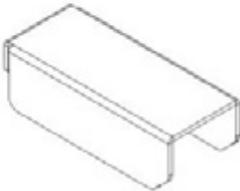


A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER CABINET.

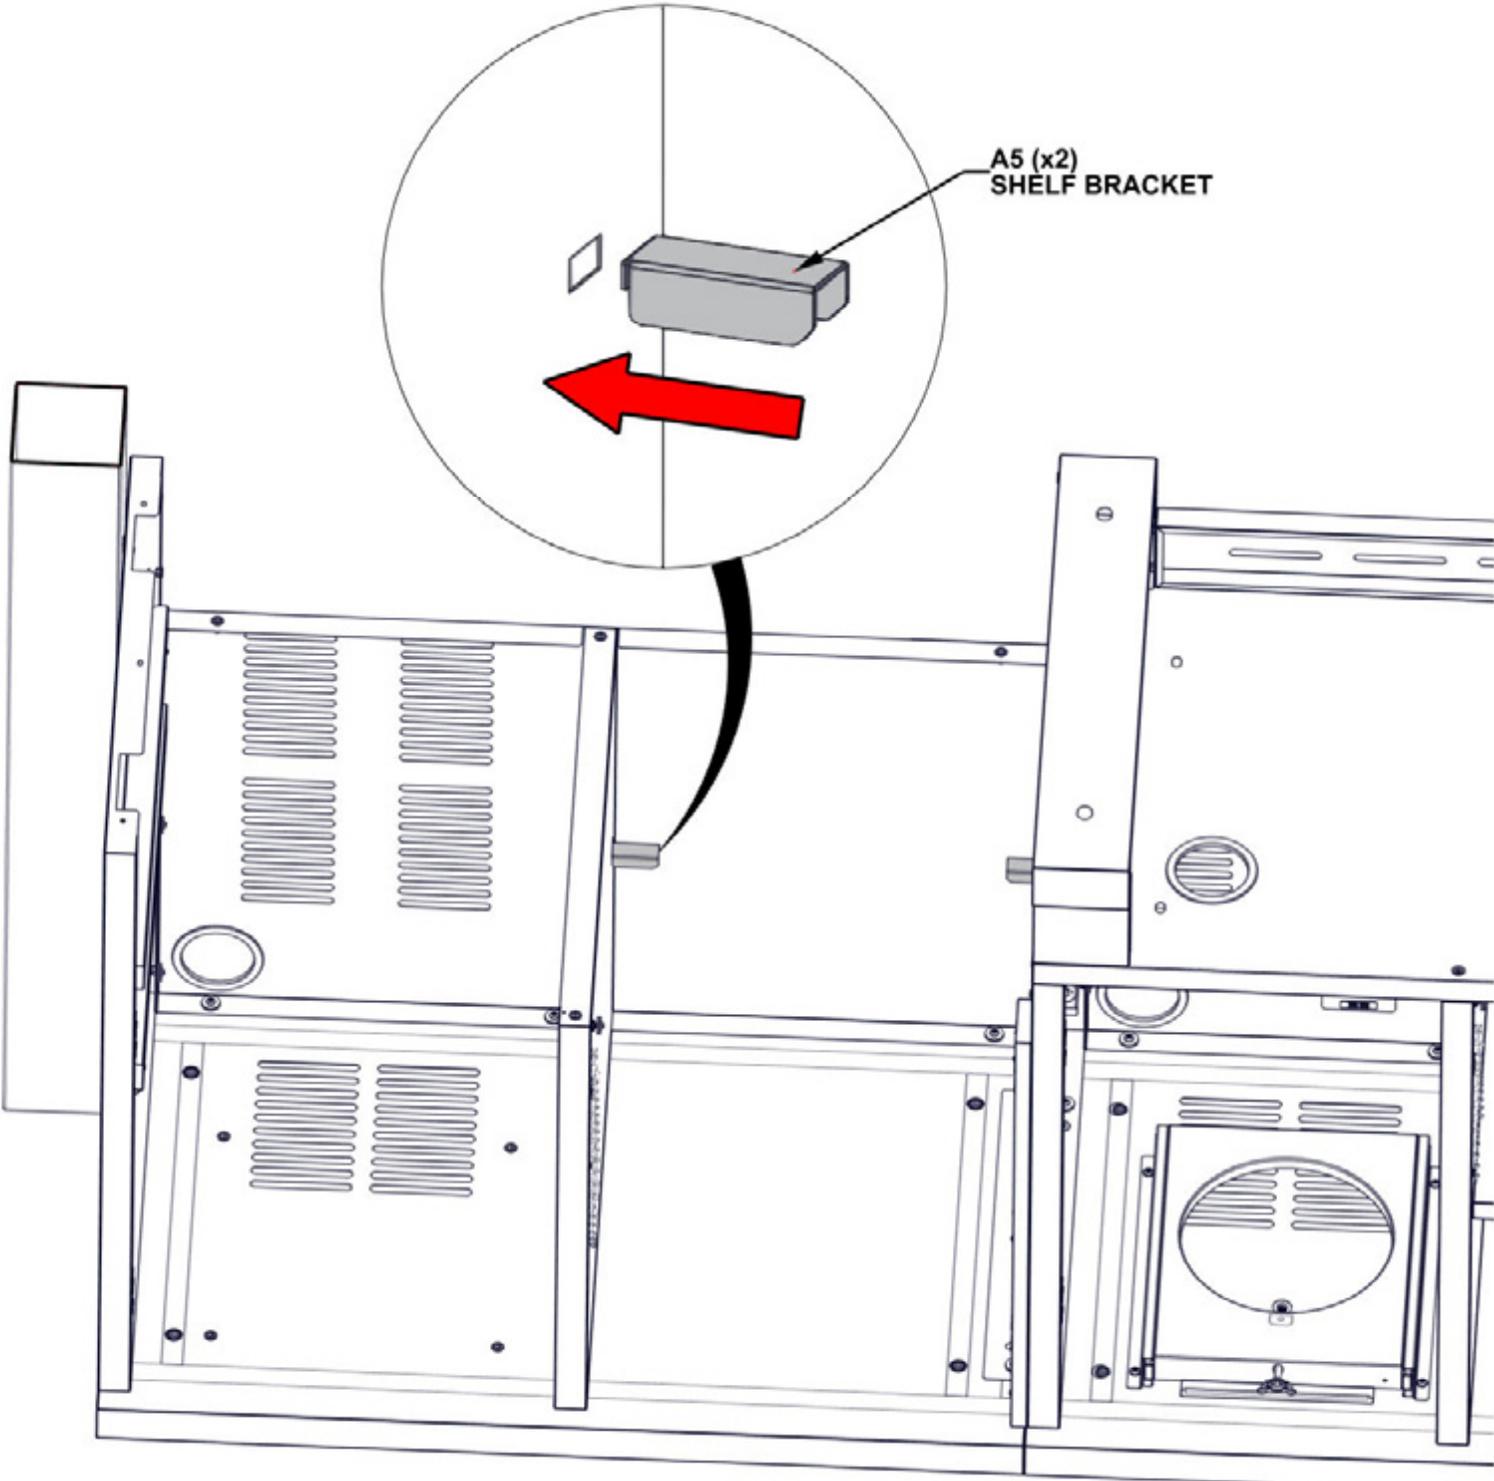


STEP 34 - CABINET ASSEMBLY

Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS

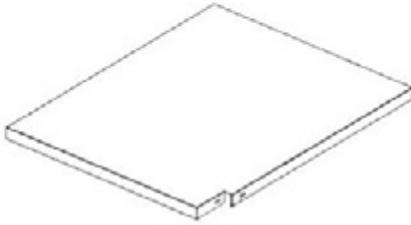


L4 CABINET SHELF - A4M05390
(x1) 23 9/16"x18 11/16"x1" (25.00x475.00x598.00)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

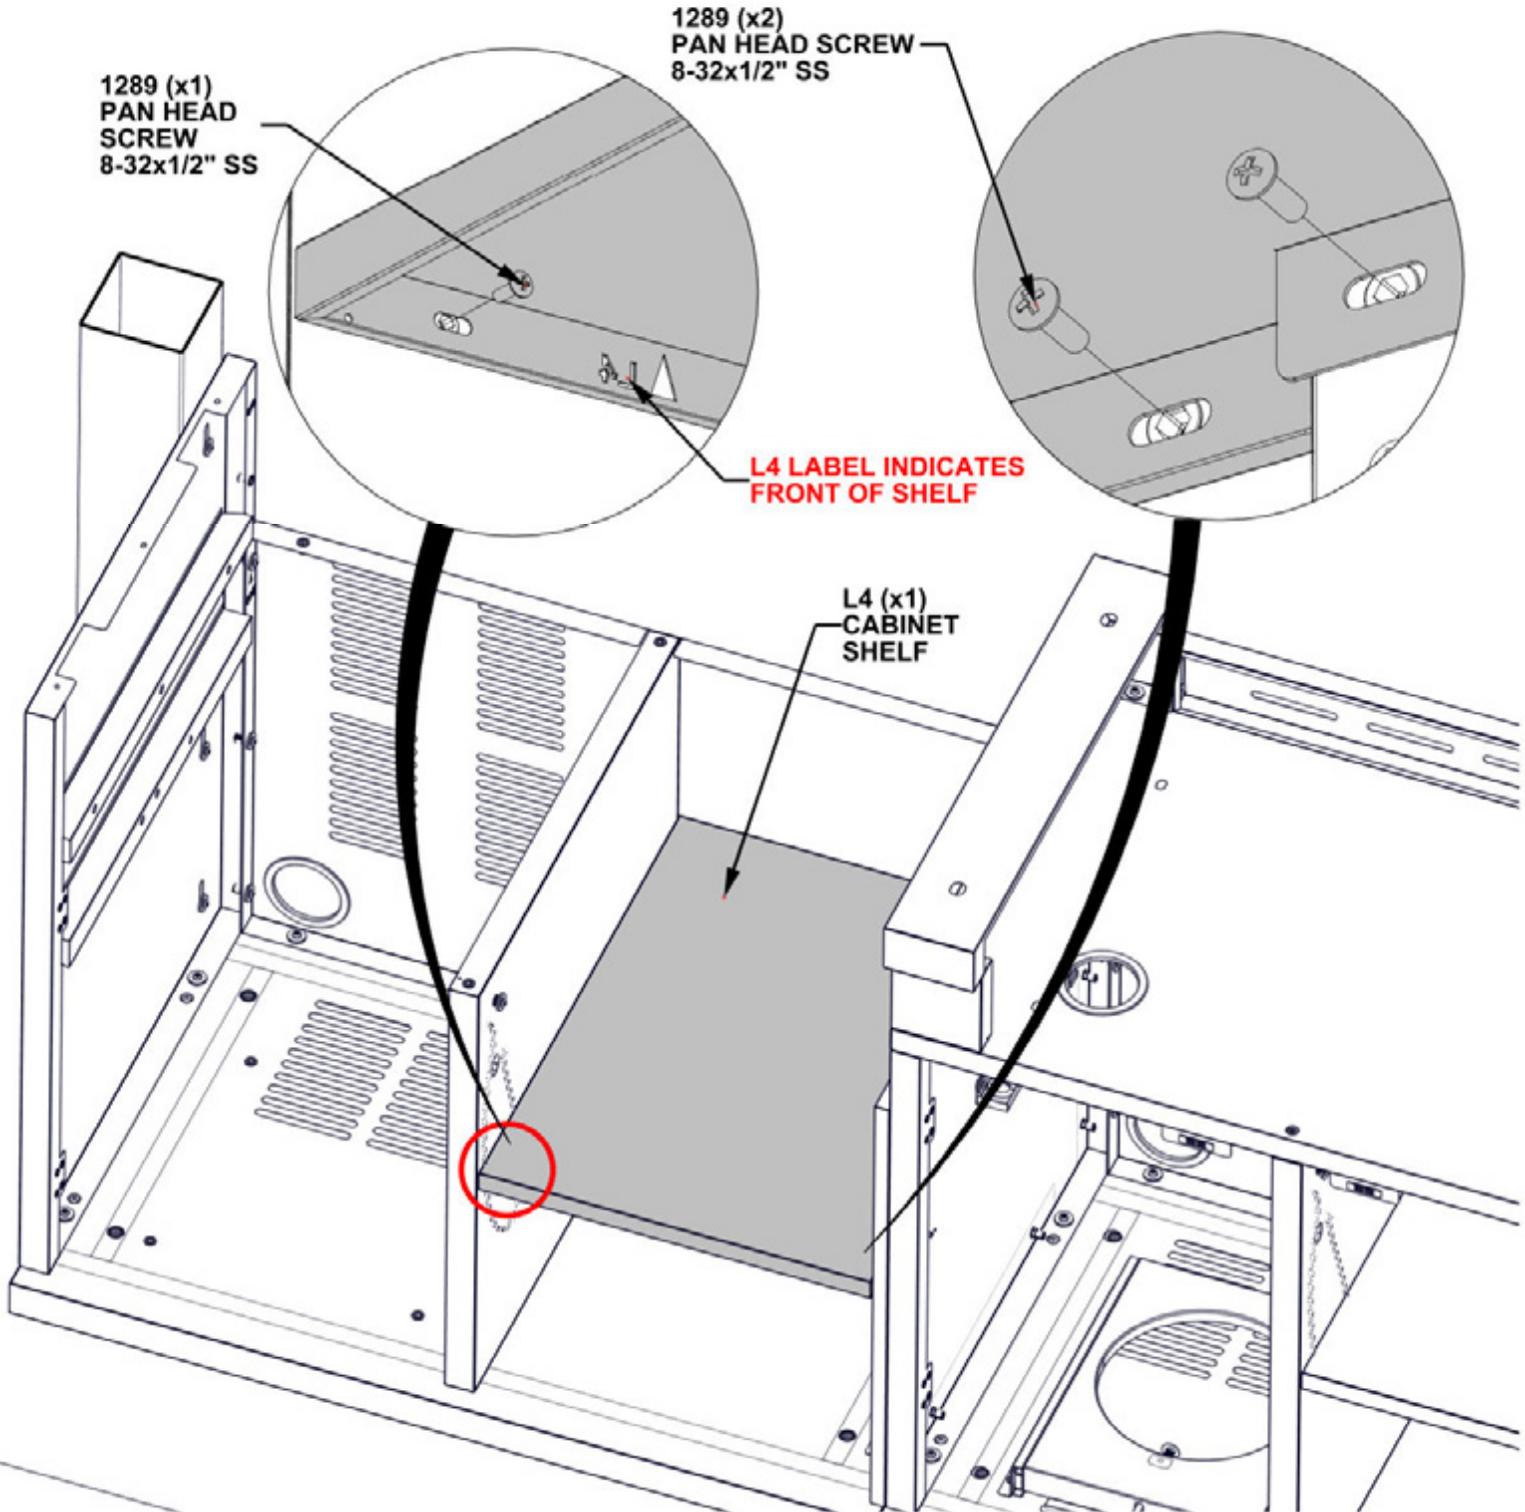


STEP 35 - CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

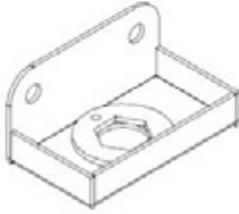

A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

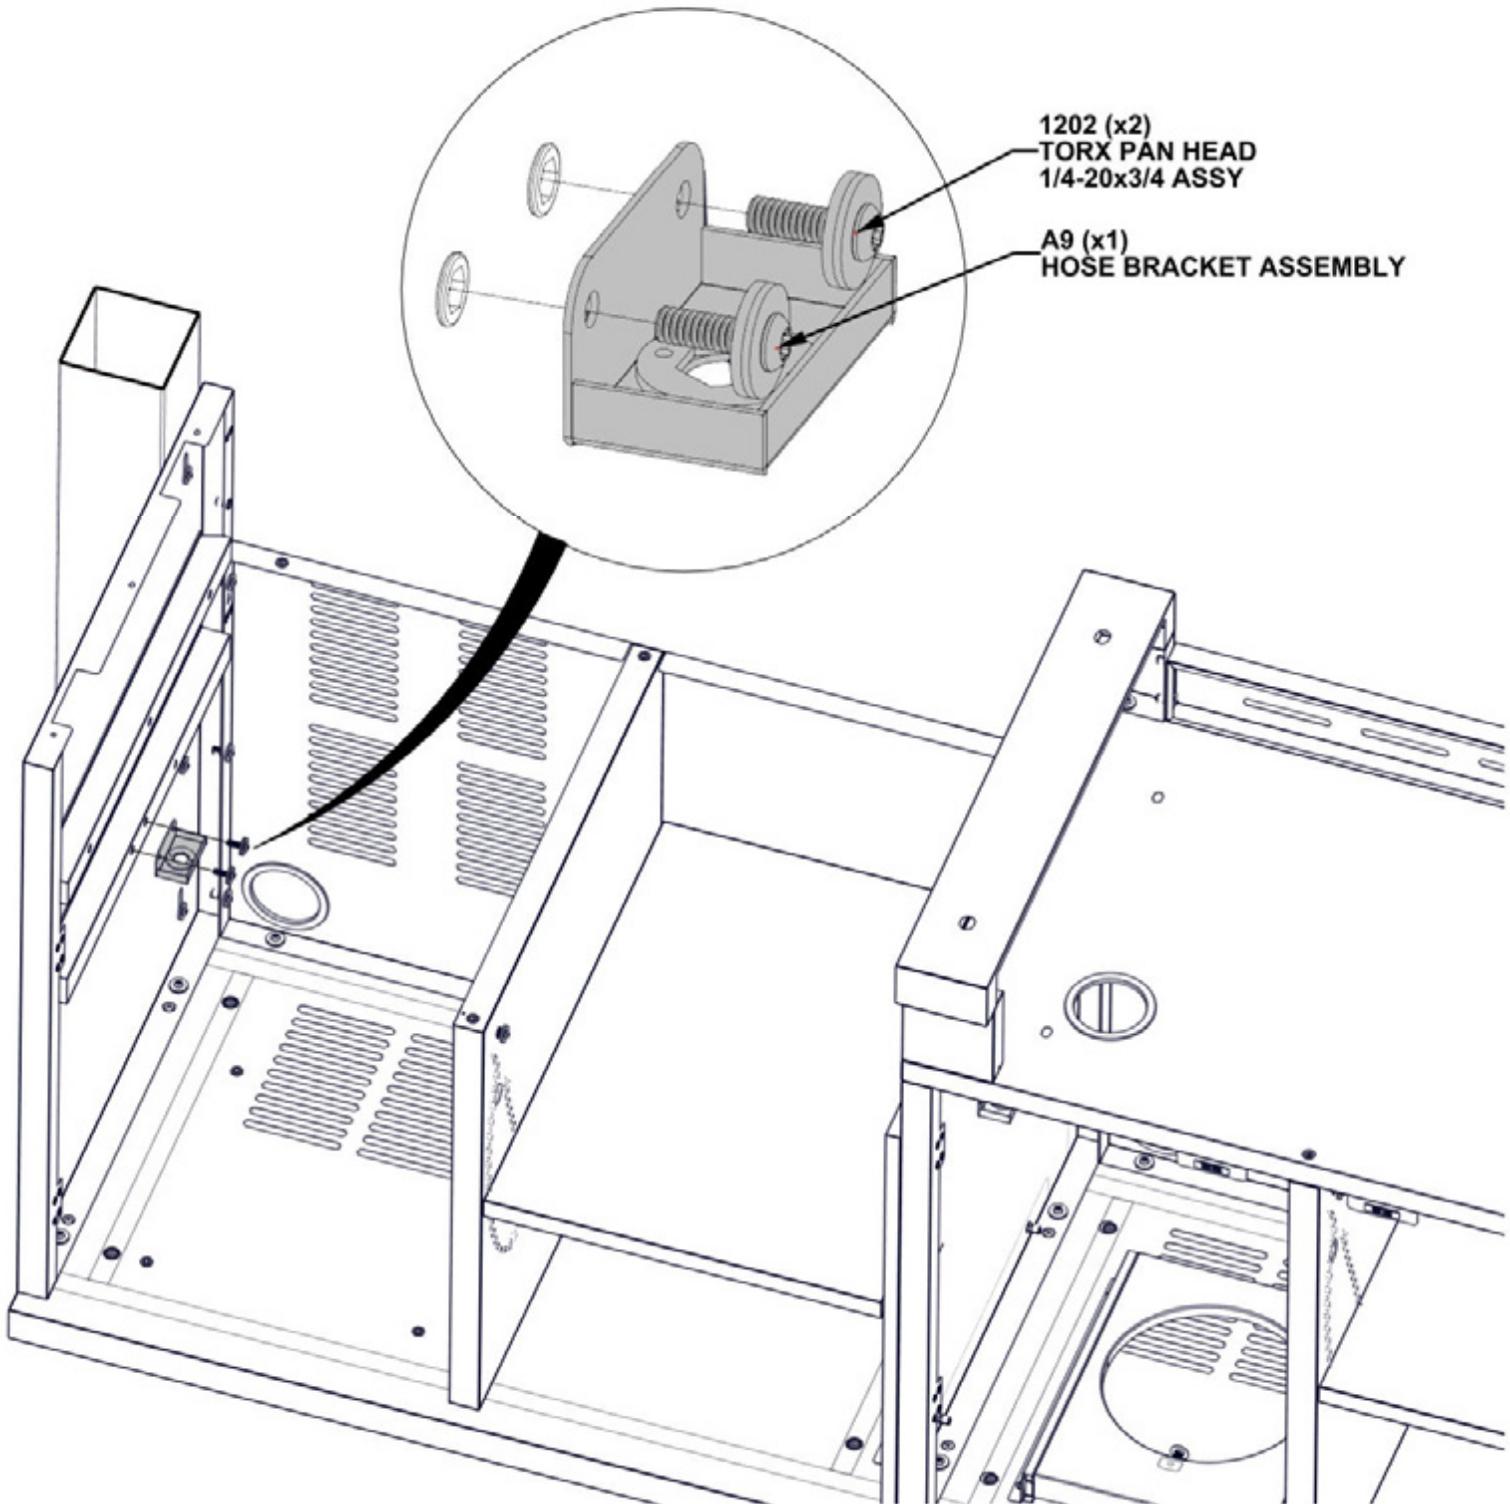


1202 (x2)
TORX PAN HEAD
1/4-20x3/4 ASSY

A9 (x1)
HOSE BRACKET ASSEMBLY


STEP 36 - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"

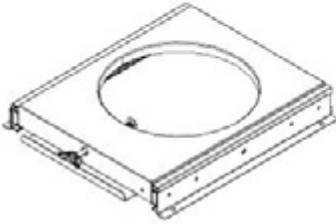


A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

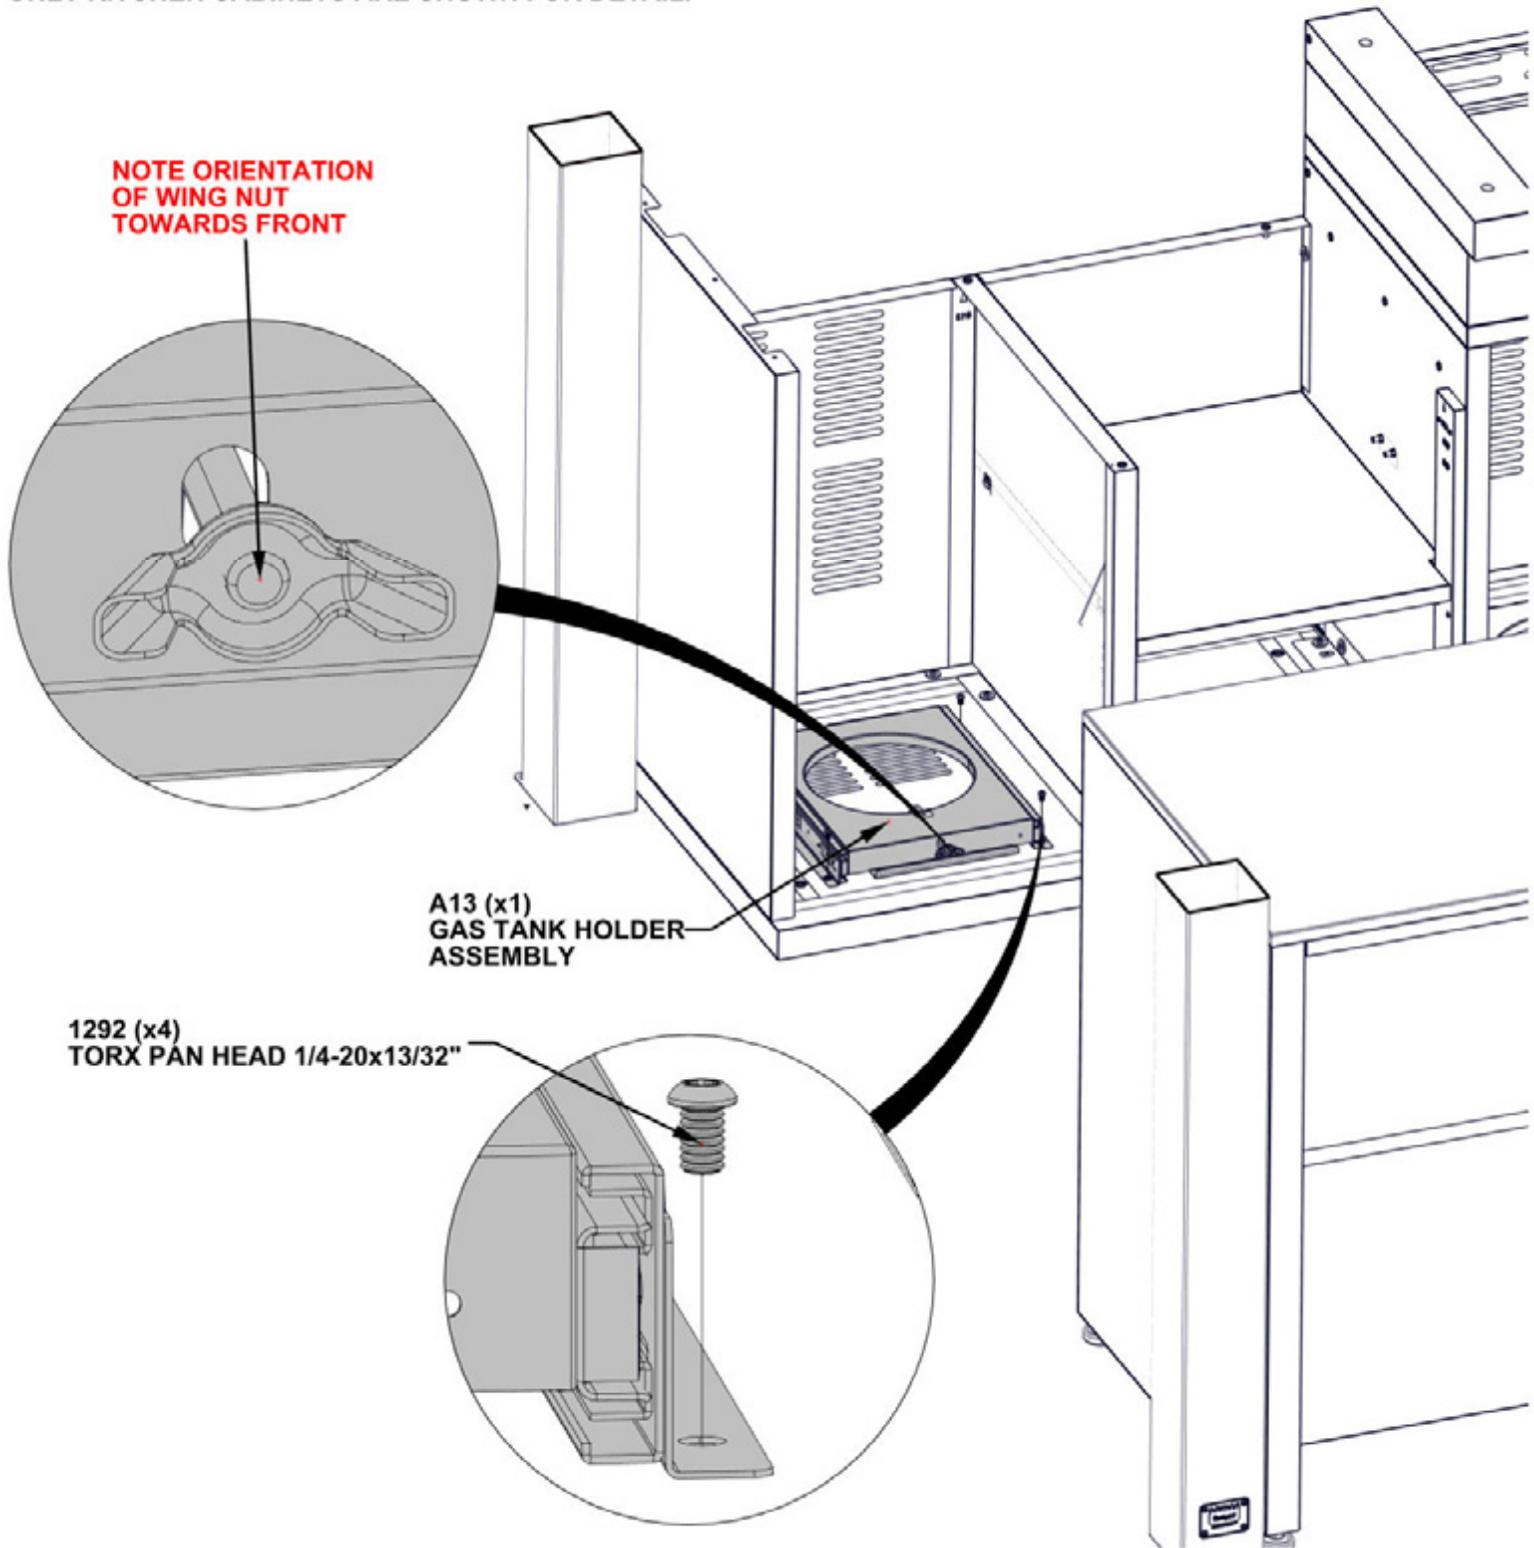

STEP 37A - CABINET ASSEMBLY


Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

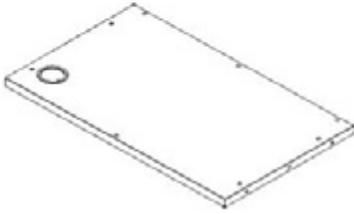

T7 TABLETOP ASSEMBLY - A4M05374
 (x1) 1 1/4"x23 11/16"x38 1/4" (32x601x971)



A2 MAGNET BRACKET - A4M03026
 (x2) 1"x1 1/4"x3 1/8" (25x31x80)

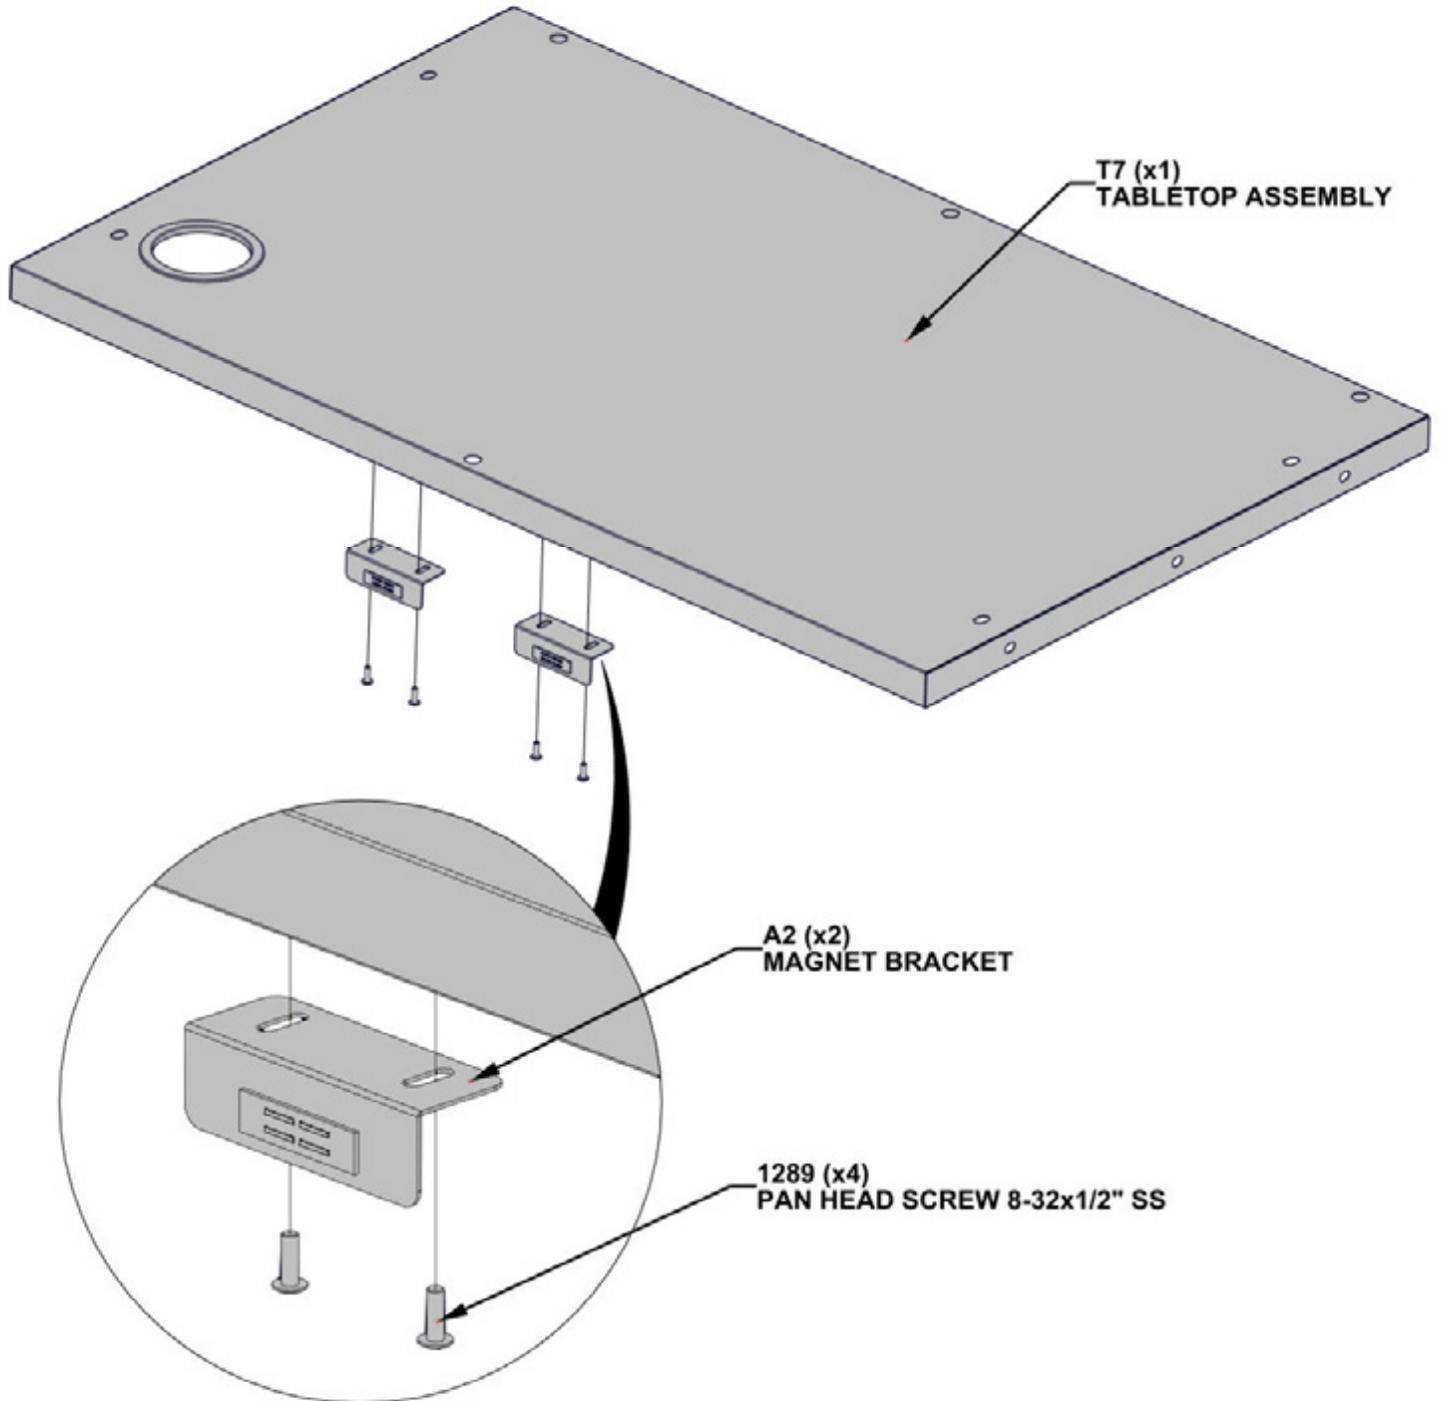


STEP 37B - CABINET ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



CABINET ASSEMBLY FROM STEP 37A


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- **HARDWARE ATTACHES ON INSIDE OF CABINET**

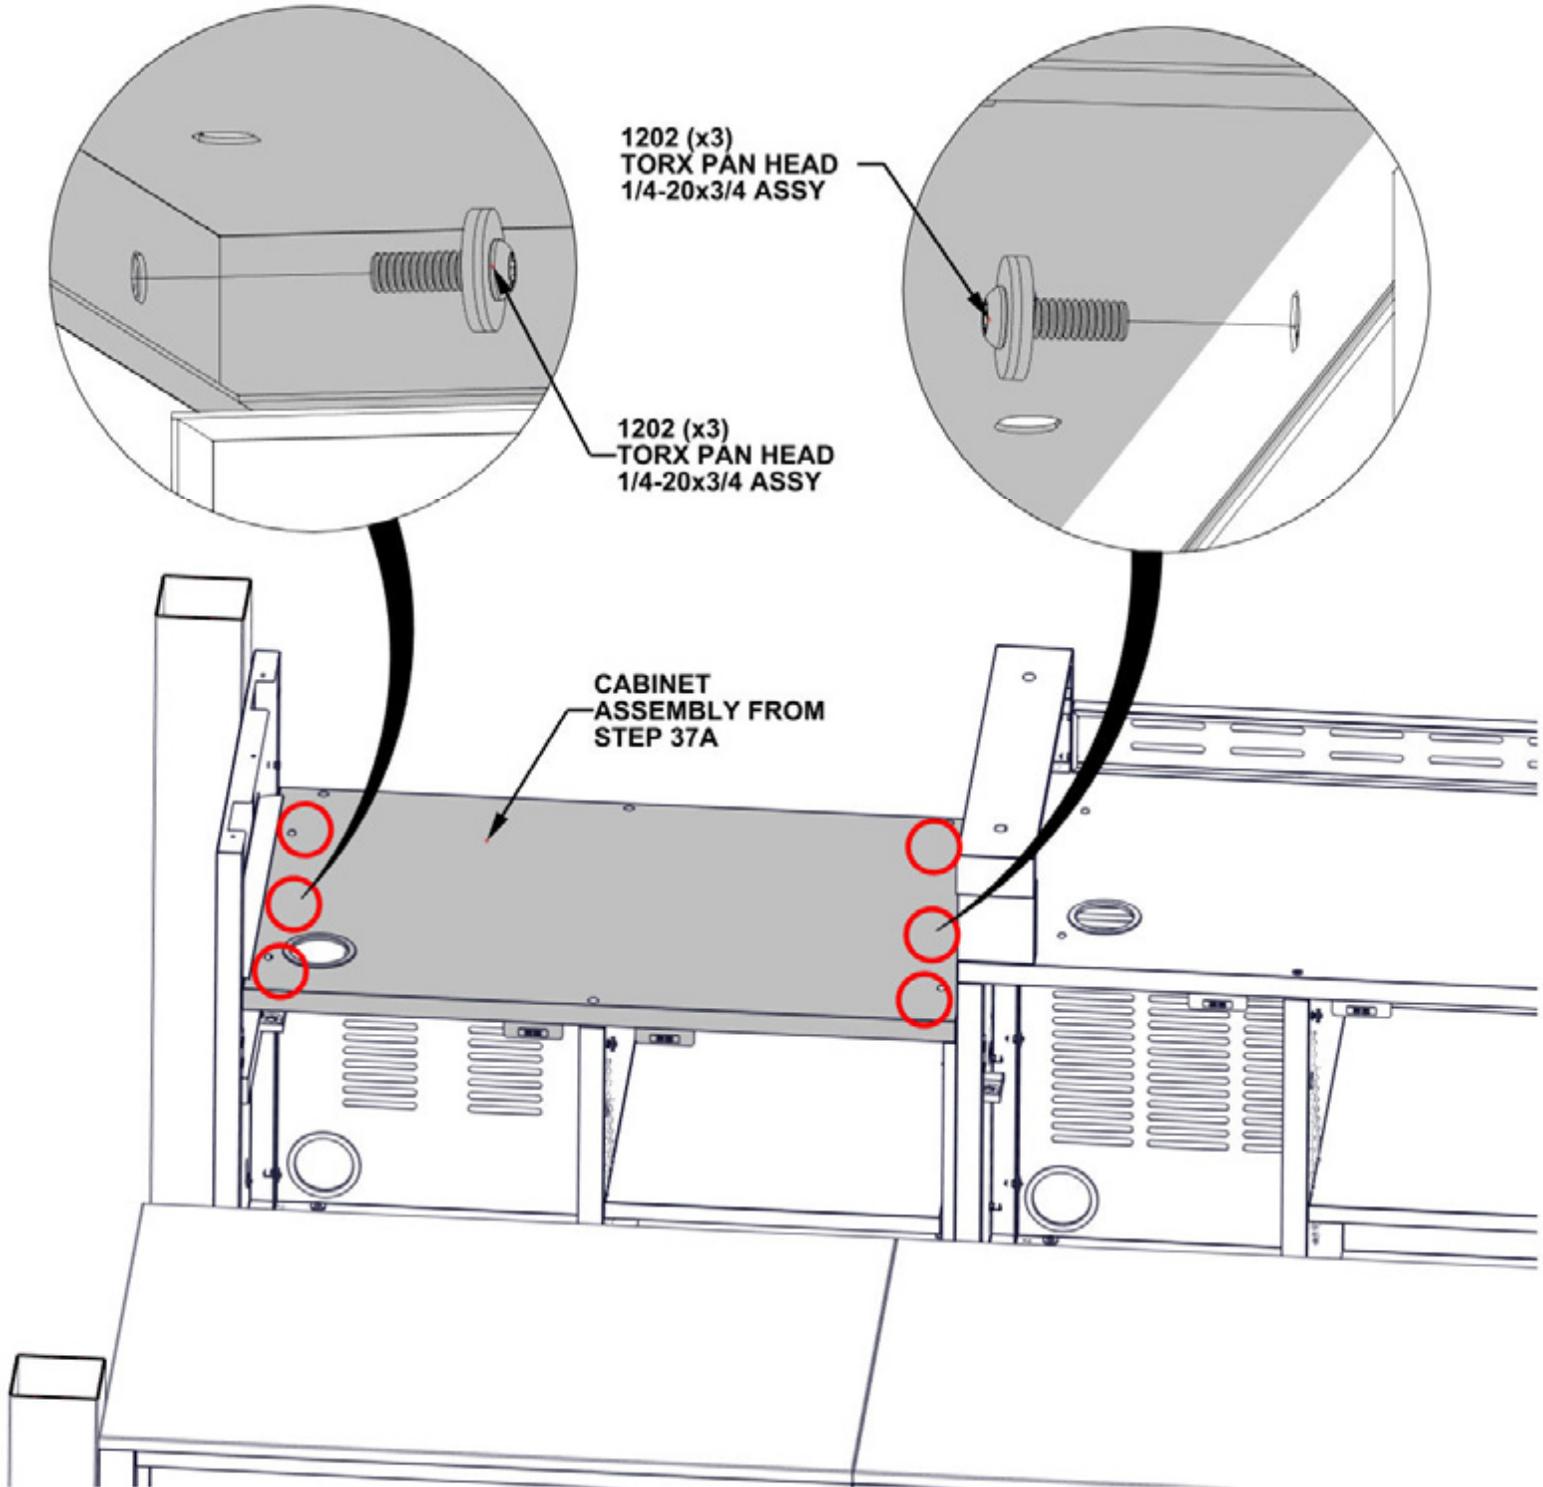


STEP 37C - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

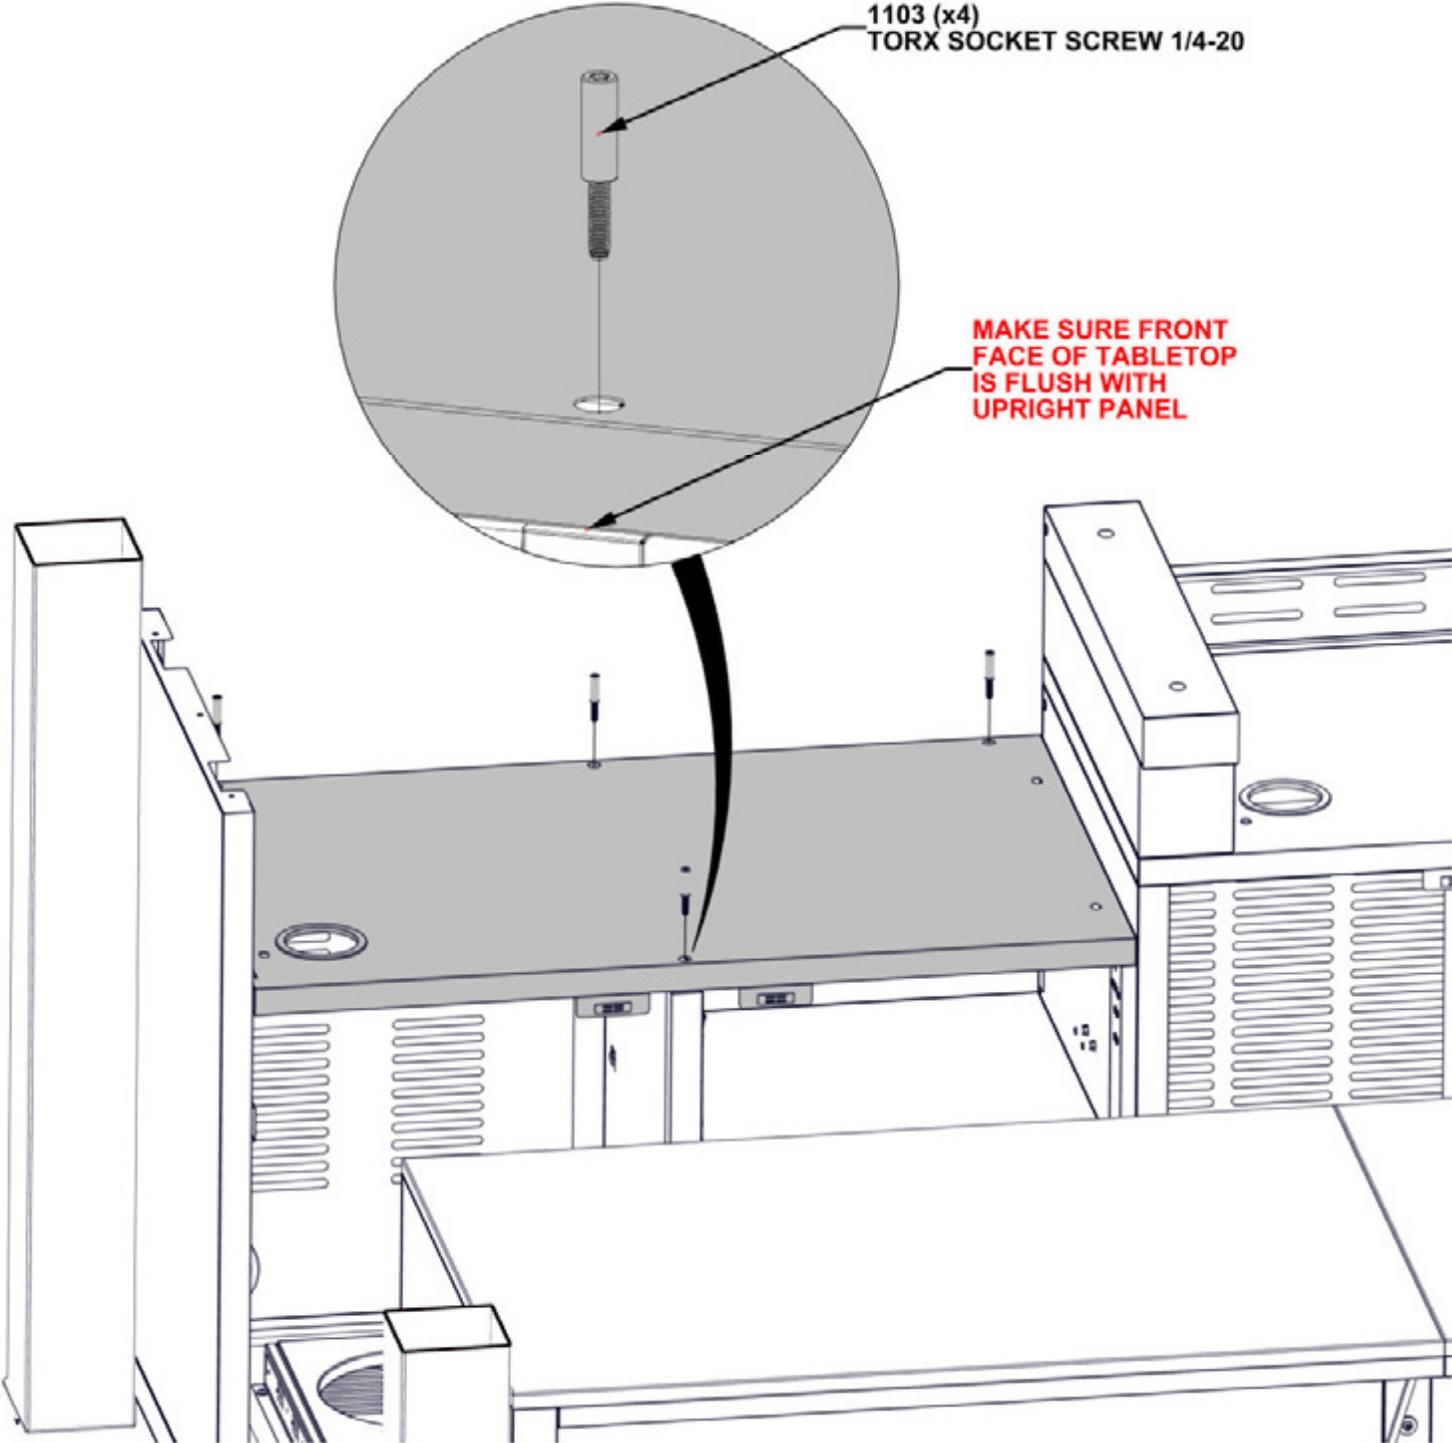


STEP 38 - CABINET ASSEMBLY

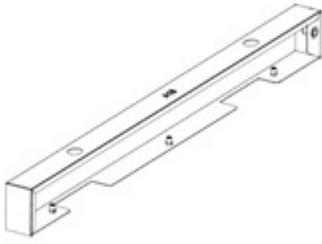

Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS


A10 COUNTERTOP BRACKET ASSEMBLY - A4M05377
(x1) 24 5/8"x1 3/8"x2 5/16" (59.00x35.00x625.00)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

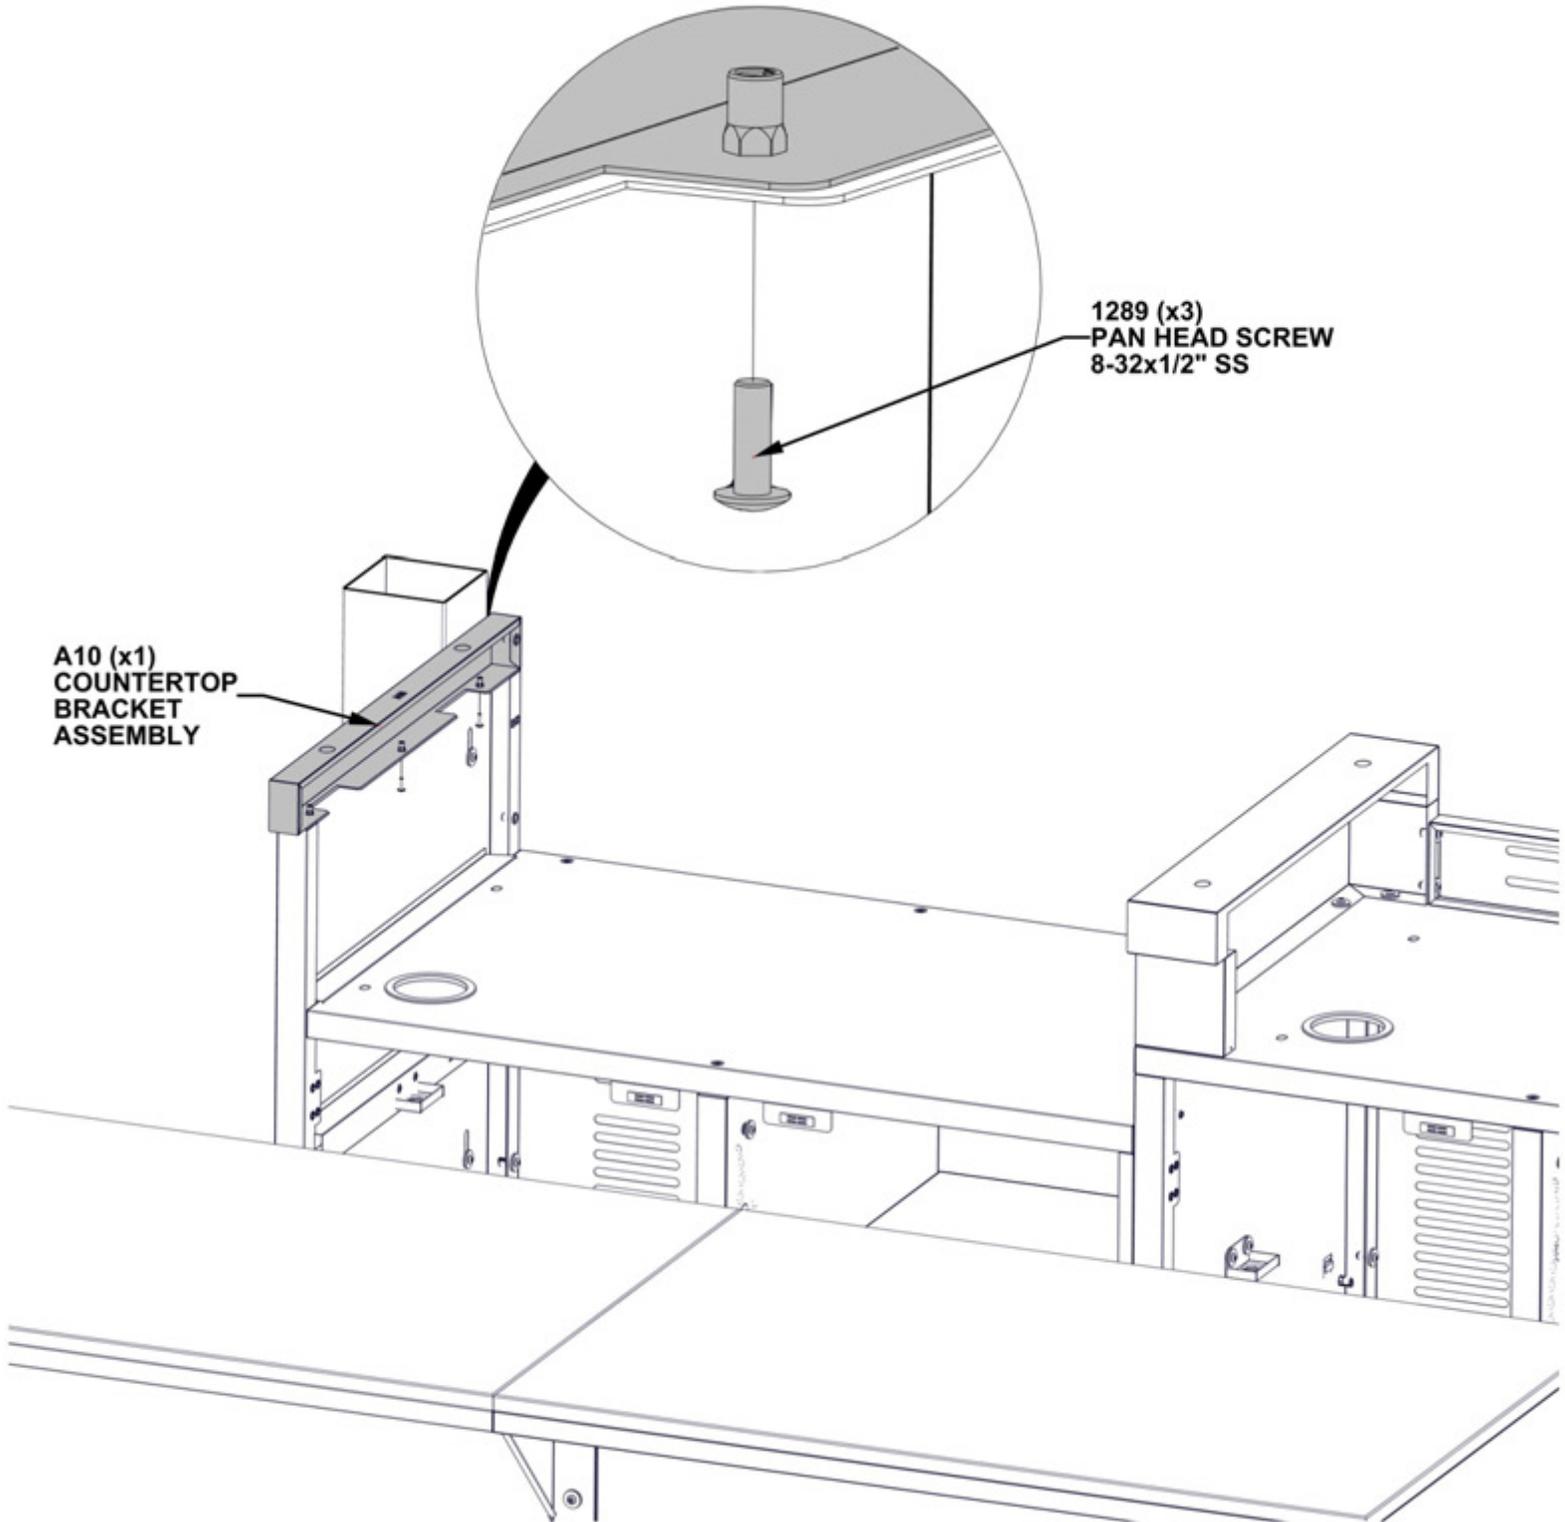


STEP 39 - CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

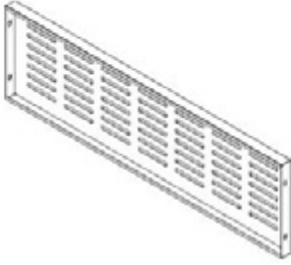

G11 VENTILATION PANEL - A4M05391
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

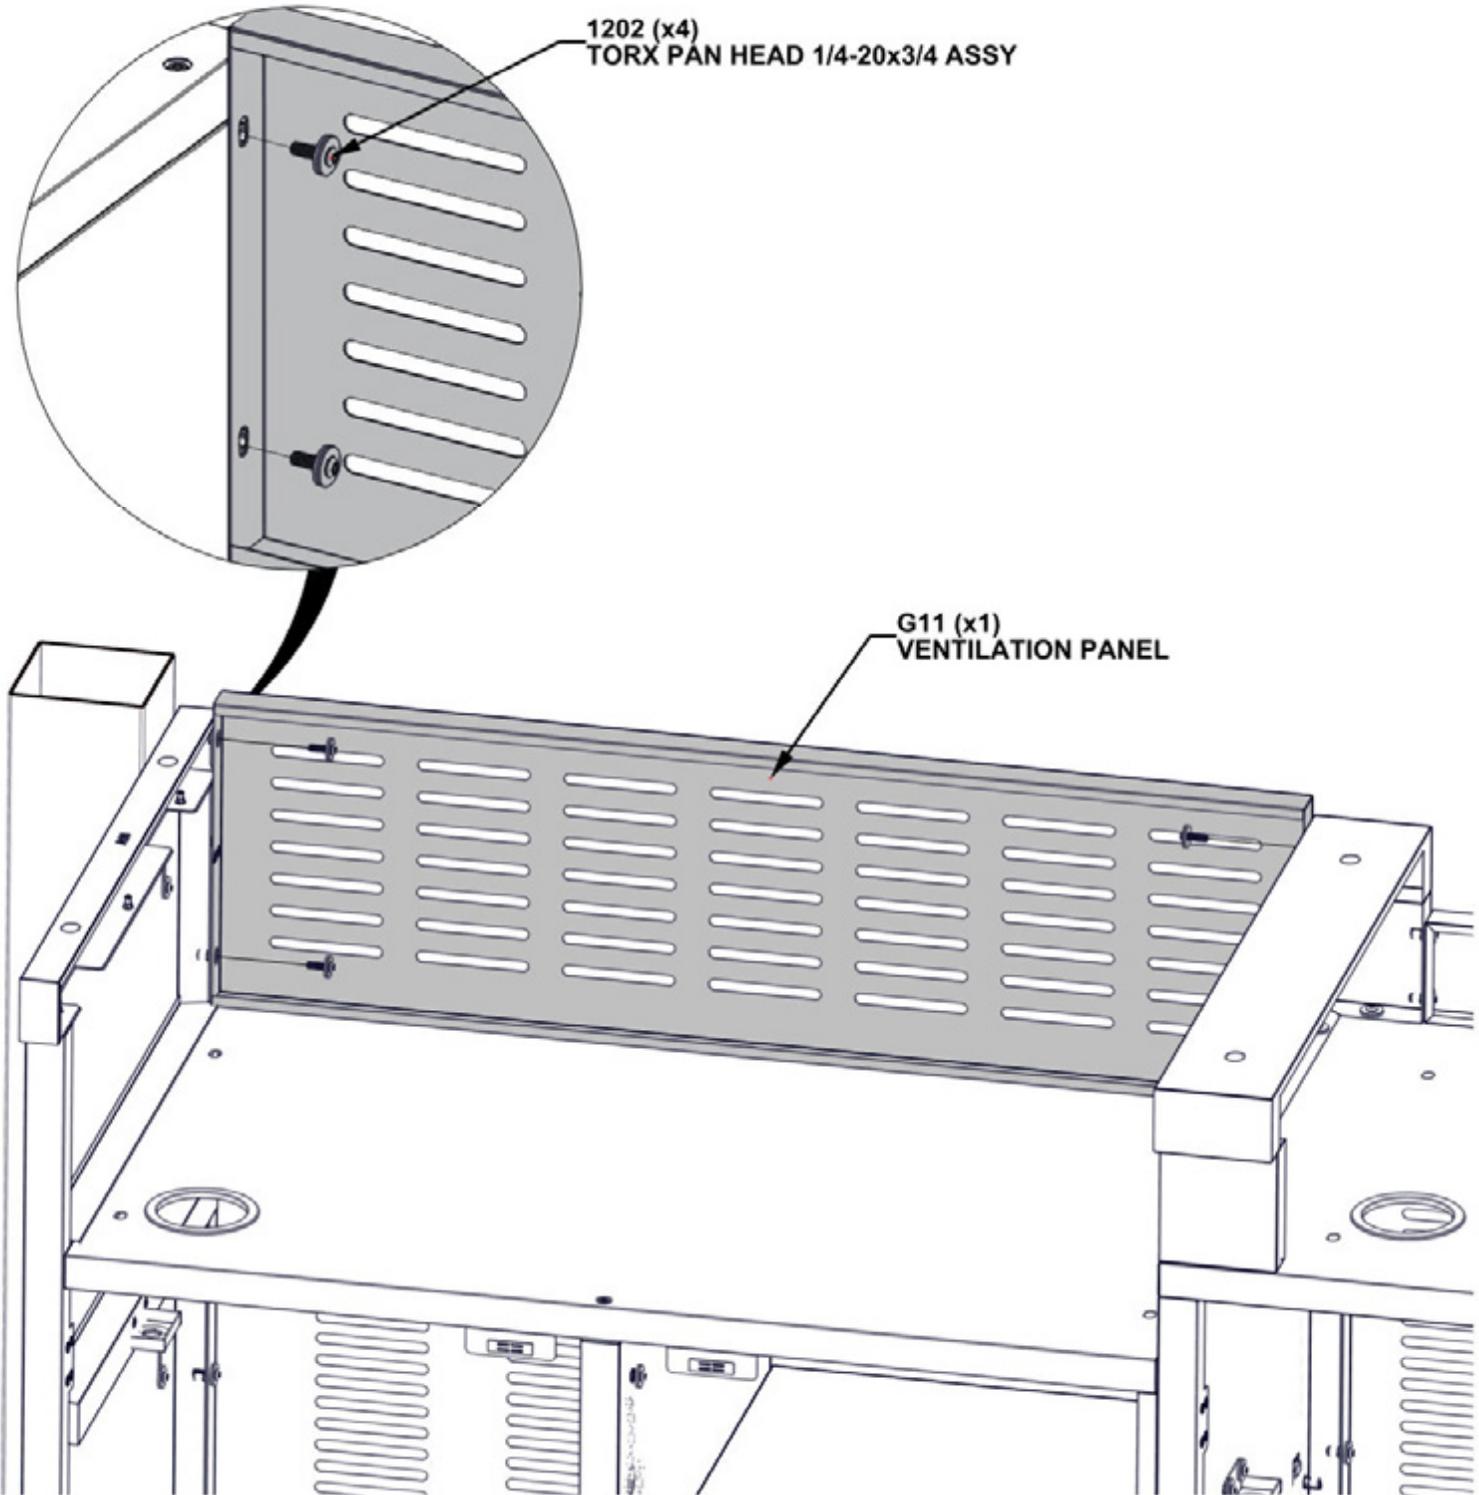


STEP 40A - CABINET COUNTERTOP INSTALLATION




M7 CABINET COUNTERTOP - A4M05379
(x1) 24 3/4"x1 3/8"x11/16" (18.00x35.00x628.00)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL COUNTERTOP IS TIGHT AGAINST PANEL AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH.**

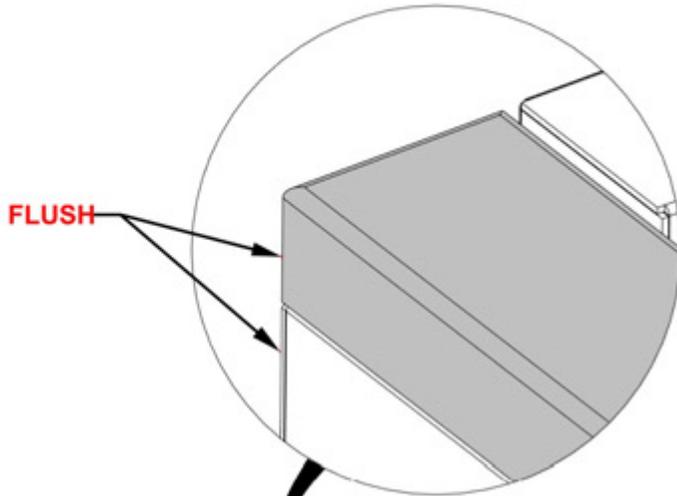

M7 (x1)
CABINET
COUNTERTOP

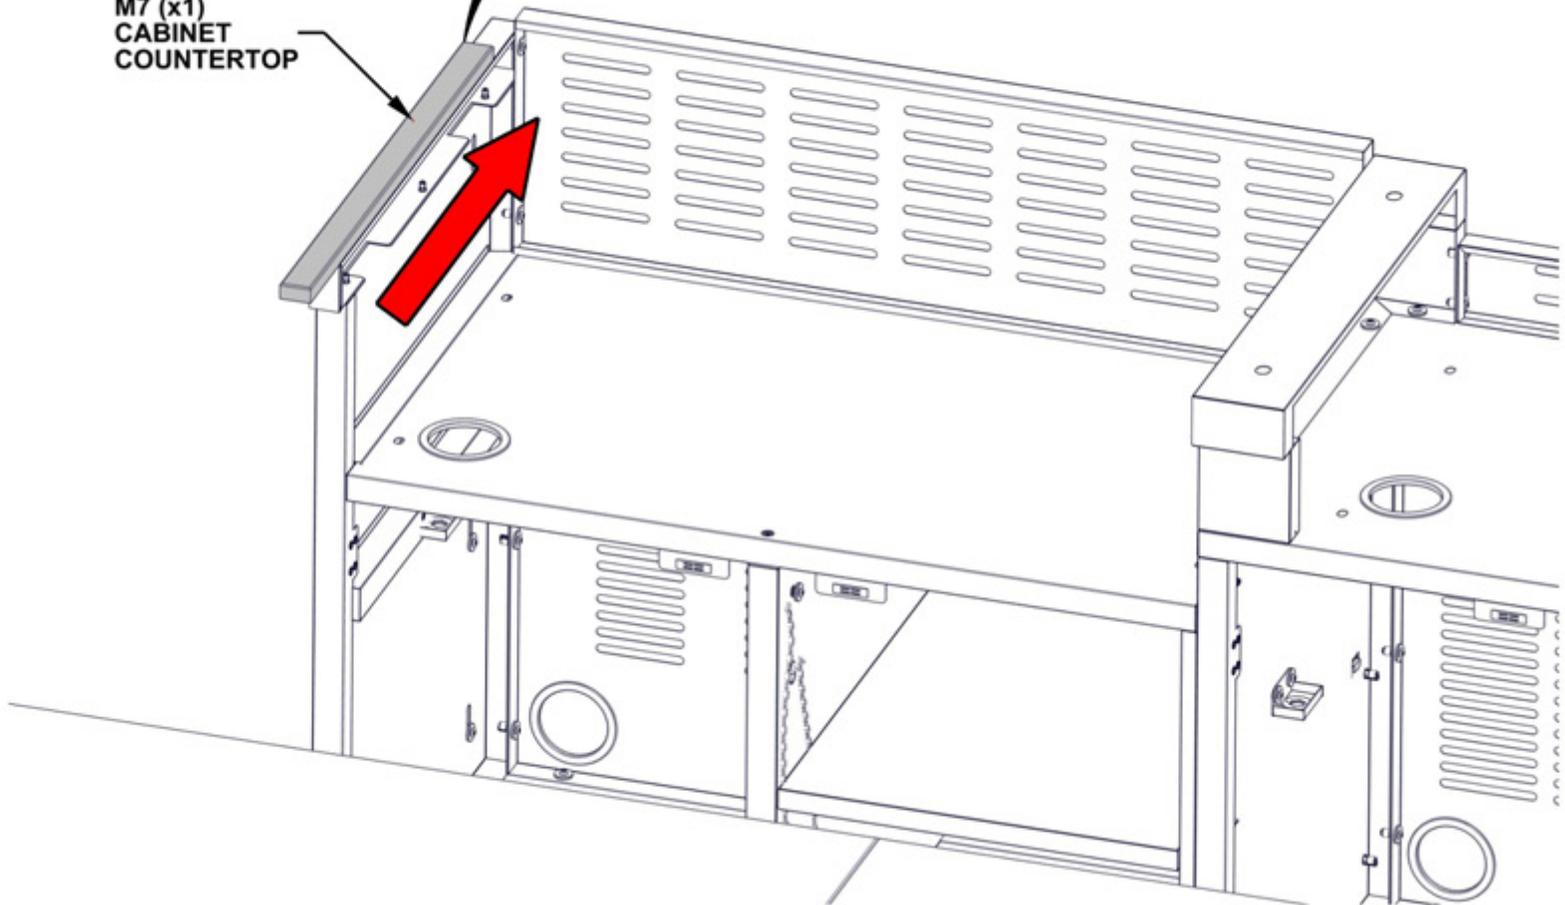

STEP 40B - CABINET COUNTERTOP INSTALLATION


Qty	PartNo	Description
2	H101054	SEALANT WASHER
2	H101053	STEEL WASHER 6x20
2	H101292	TORX PAN HEAD 1/4-20x13/32"

- ONLY KITCHEN CABINETS ARE SHOWN

- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.

- ONCE COUNTERTOP IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.

- DO NOT USE COUNTERTOP SURFACE AS A WORK BENCH.

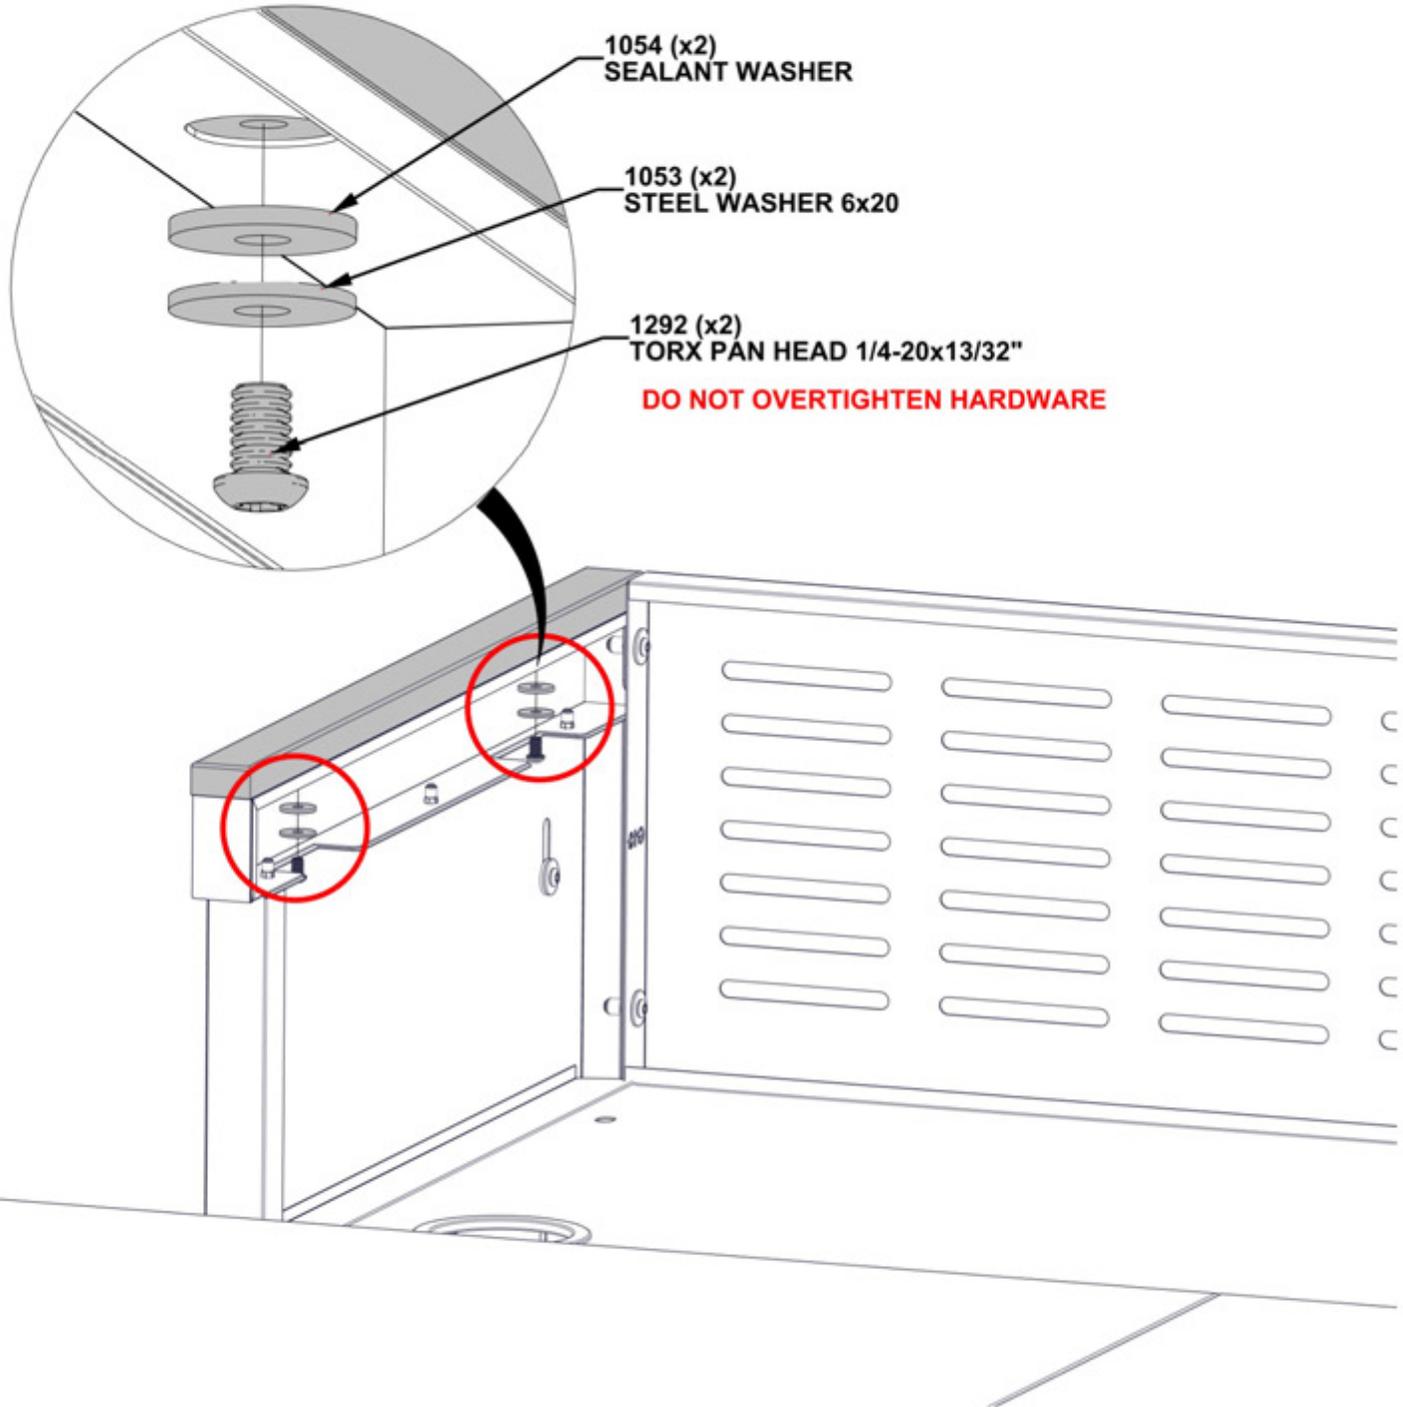


STEP 41A - CABINET COUNTERTOP INSTALLATION



M6 CABINET COUNTERTOP - A4M05378
(x1) 24 3/4"x4 1/8"x11/16" (18.00x105.00x628.00)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL COUNTERTOP IS TIGHT AGAINST PANEL AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH.**

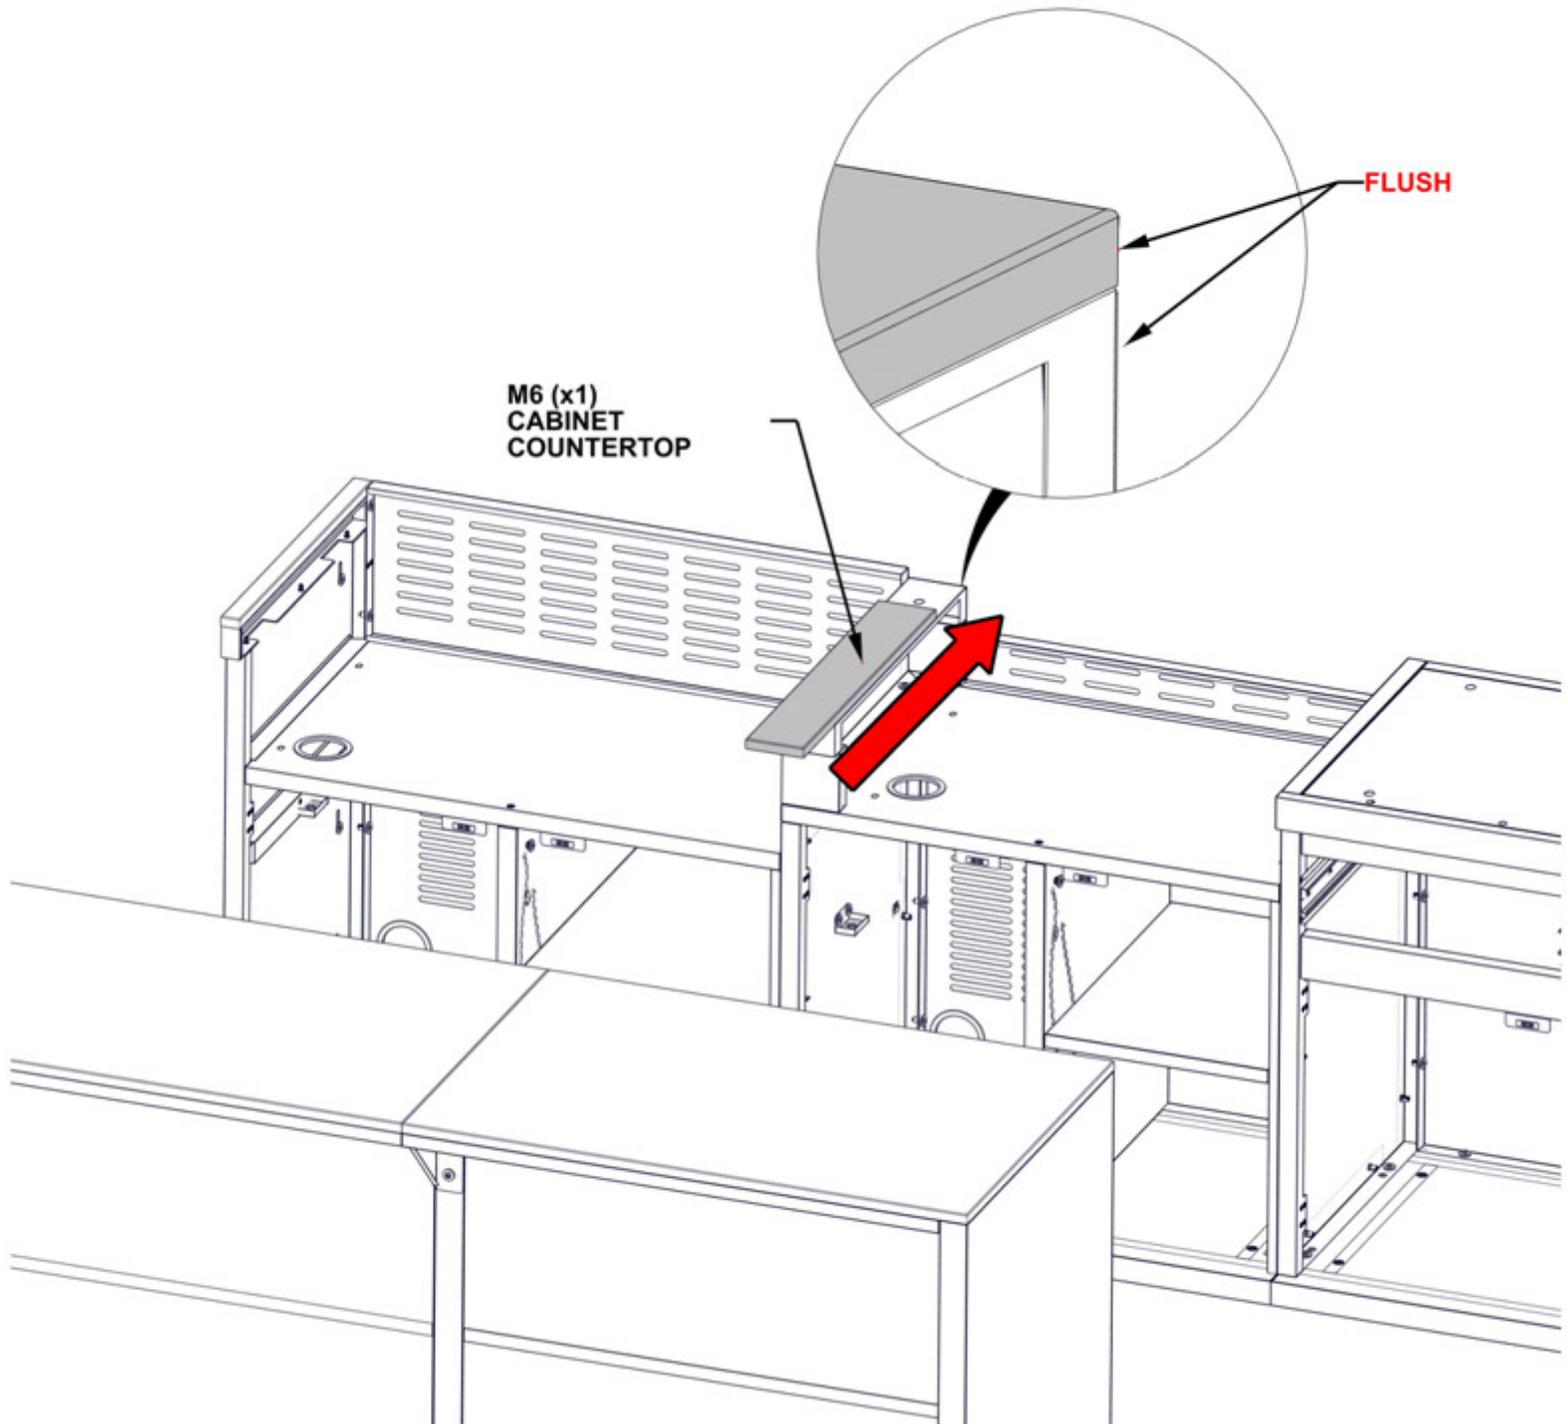

STEP 41B - CABINET COUNTERTOP INSTALLATION

Qty	PartNo	Description
2	H101054	SEALANT WASHER
2	H101053	STEEL WASHER 6x20
2	H101292	TORX PAN HEAD 1/4-20x13/32"

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.

- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.

- ONCE COUNTERTOP IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.


- DO NOT USE COUNTERTOP SURFACE AS A WORK BENCH.

1054 (x2)
SEALANT WASHER


1053 (x2)
STEEL WASHER 6x20

1292 (x2)
TORX PAN HEAD 1/4-20x13/32"

DO NOT OVERTIGHTEN HARDWARE

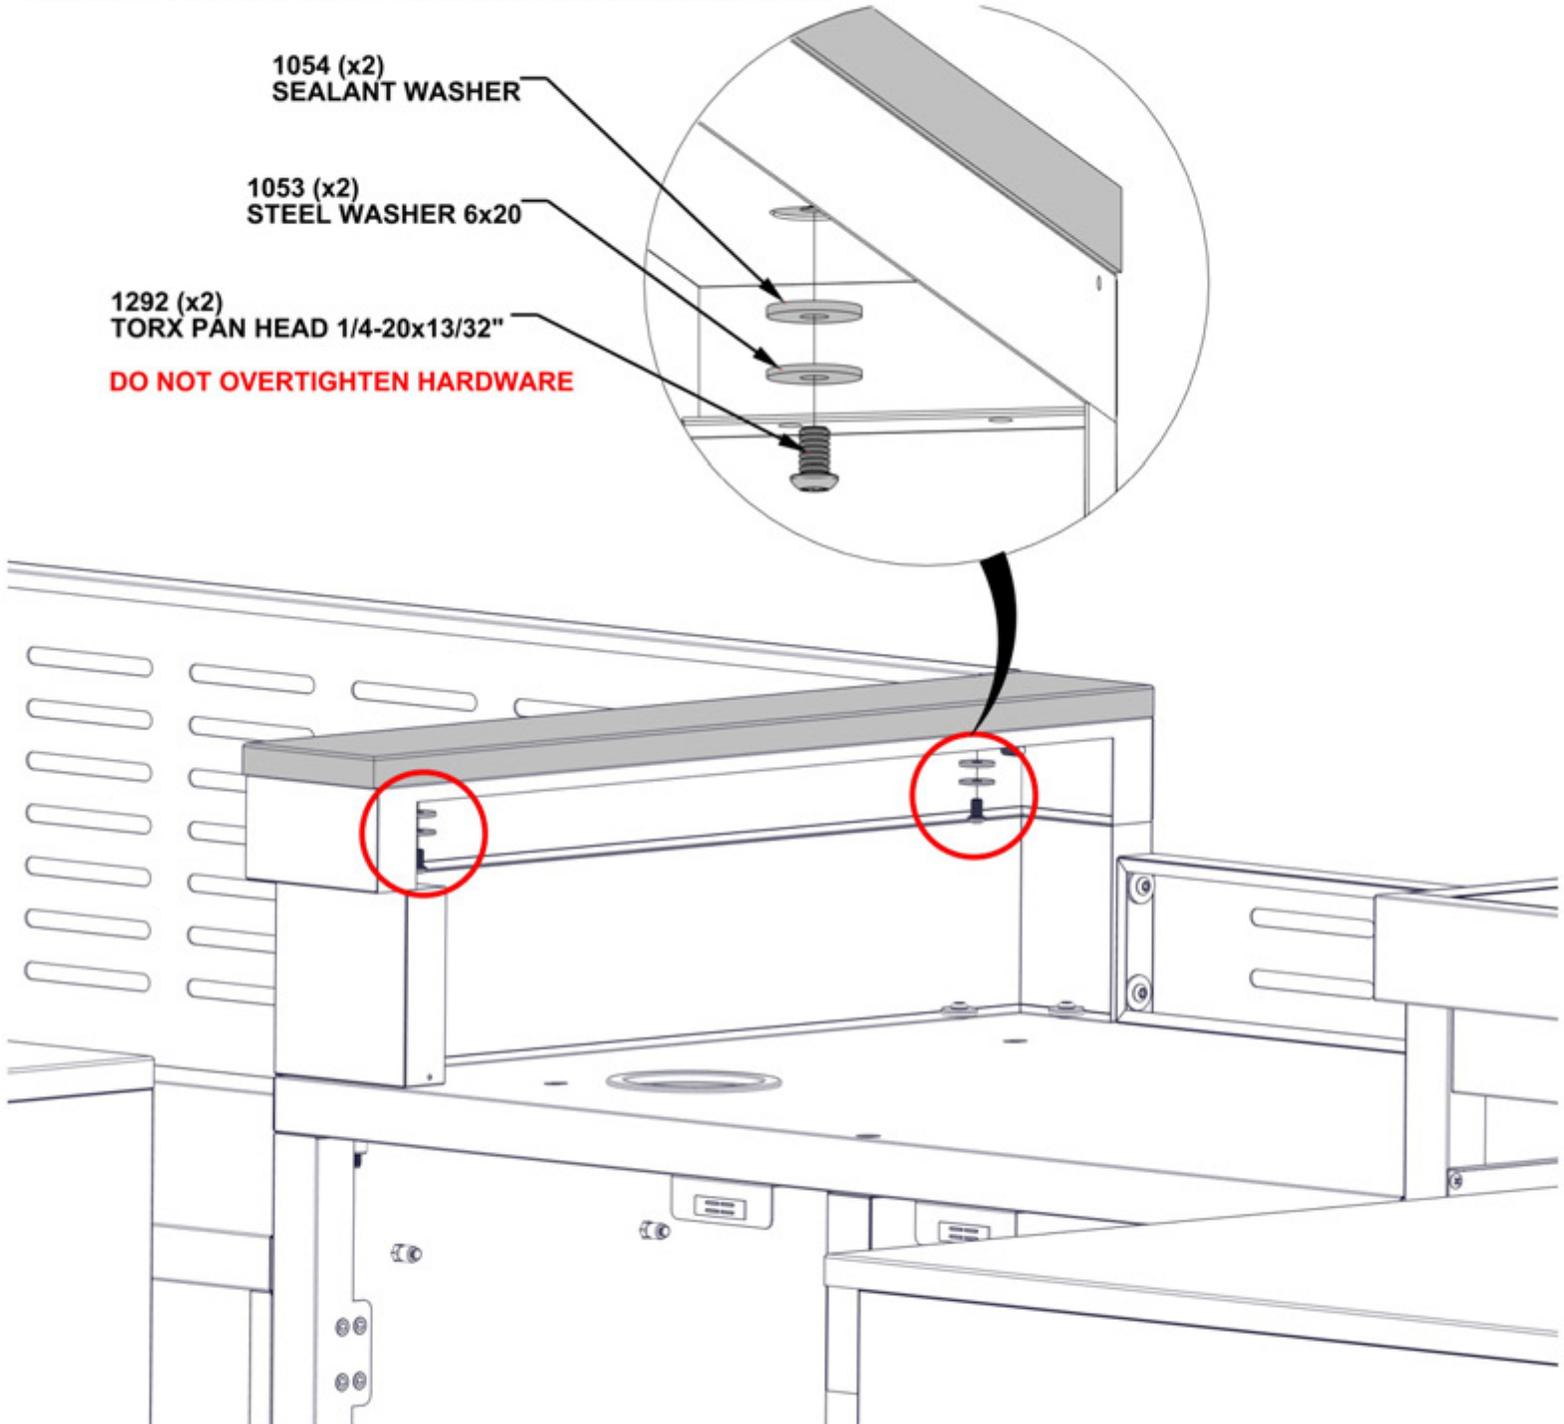


STEP 42A - STORAGE CABINET COUNTERTOP INSTALLATION

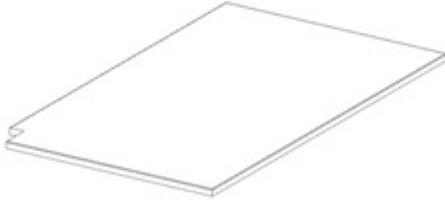

M3 LEFT CABINET COUNTERTOP - A4M04482
(x1) 42 7/16"x24 3/4"x11/16" (18x628.5x1077.5)

NOTE: USE PART FROM STEP 4.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL COUNTERTOP IS TIGHT AGAINST PANEL AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING COUNTERTOP IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH.**

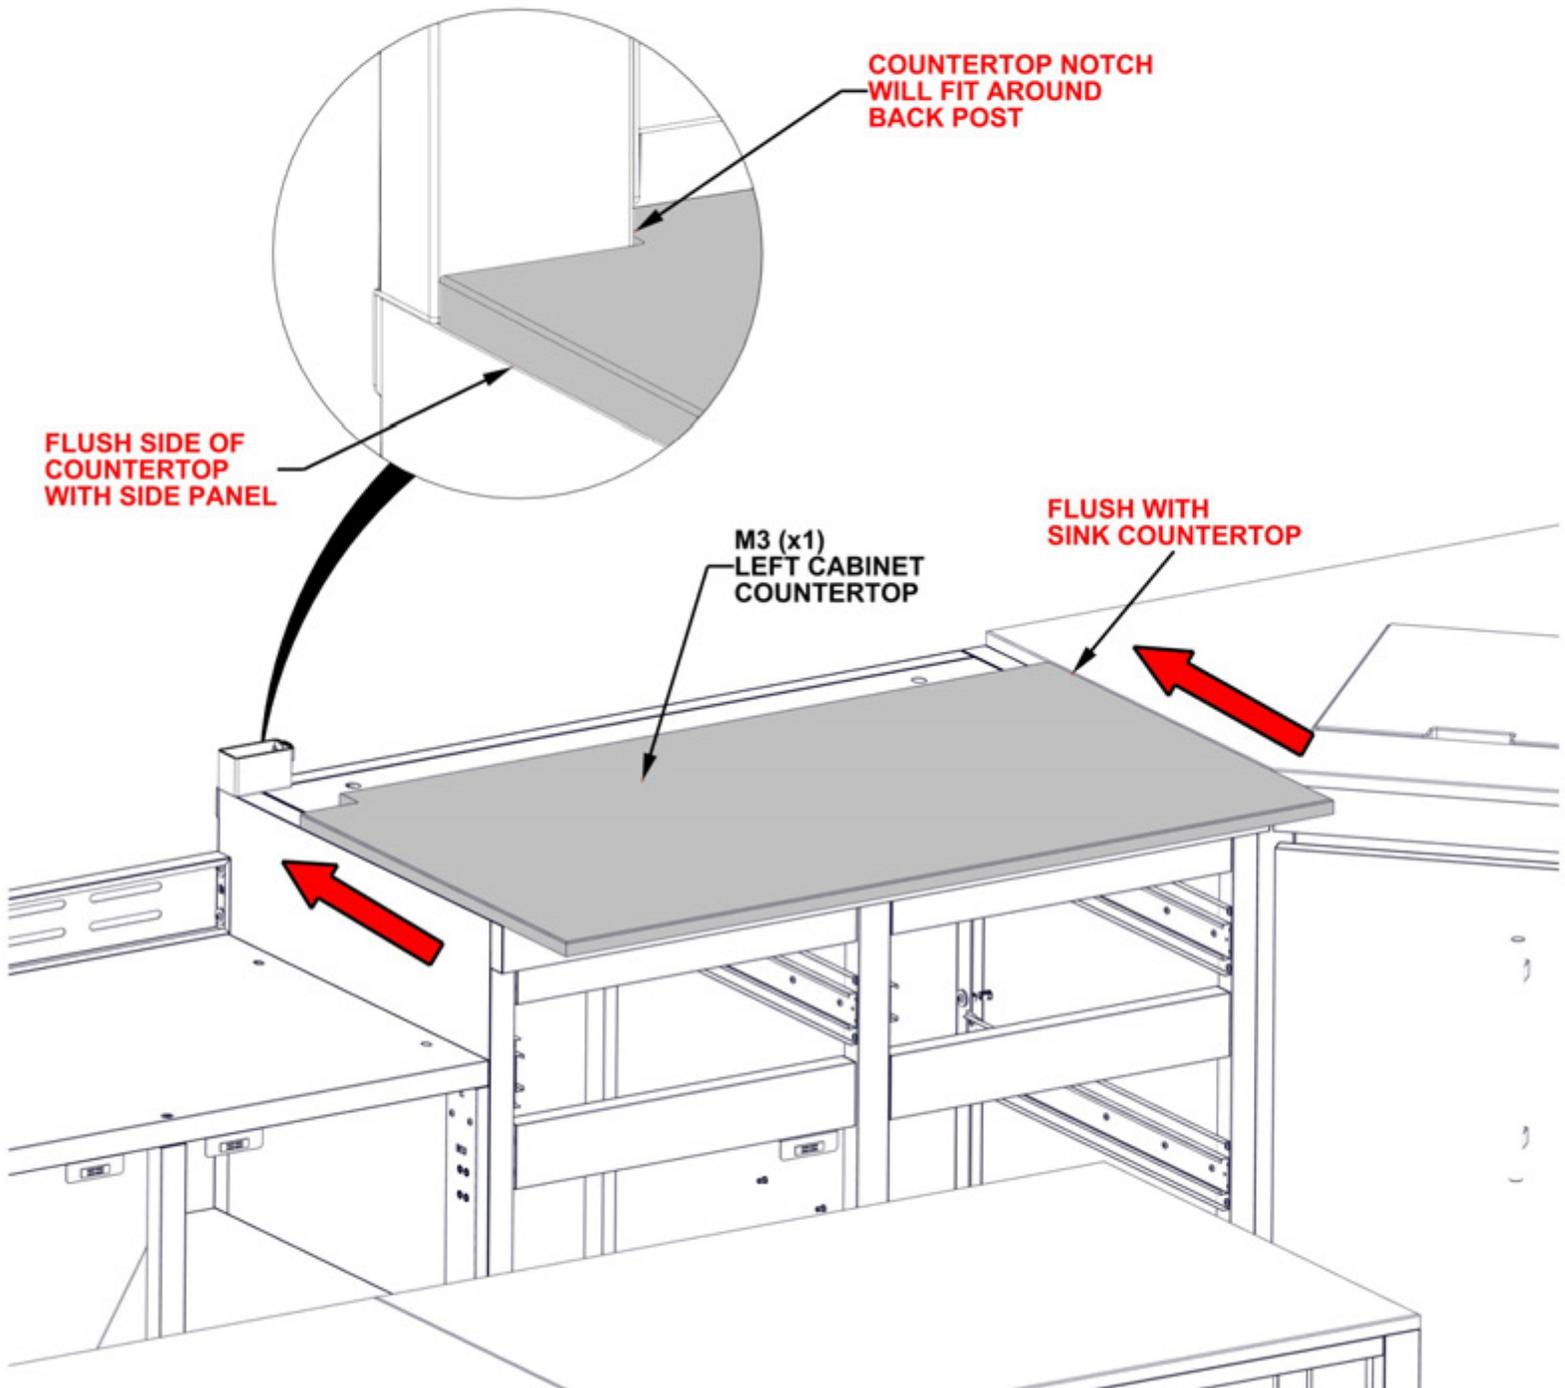


STEP 42B - STORAGE CABINET COUNTERTOP INSTALLATION

Qty	PartNo	Description
4	H101054	SEALANT WASHER
4	H101053	STEEL WASHER 6x20
4	H101292	TORX PAN HEAD 1/4-20x13/32"

NOTE: USE HARDWARE FROM STEP 4.

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE COUNTERTOP IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE COUNTERTOP SURFACE AS A WORK BENCH.

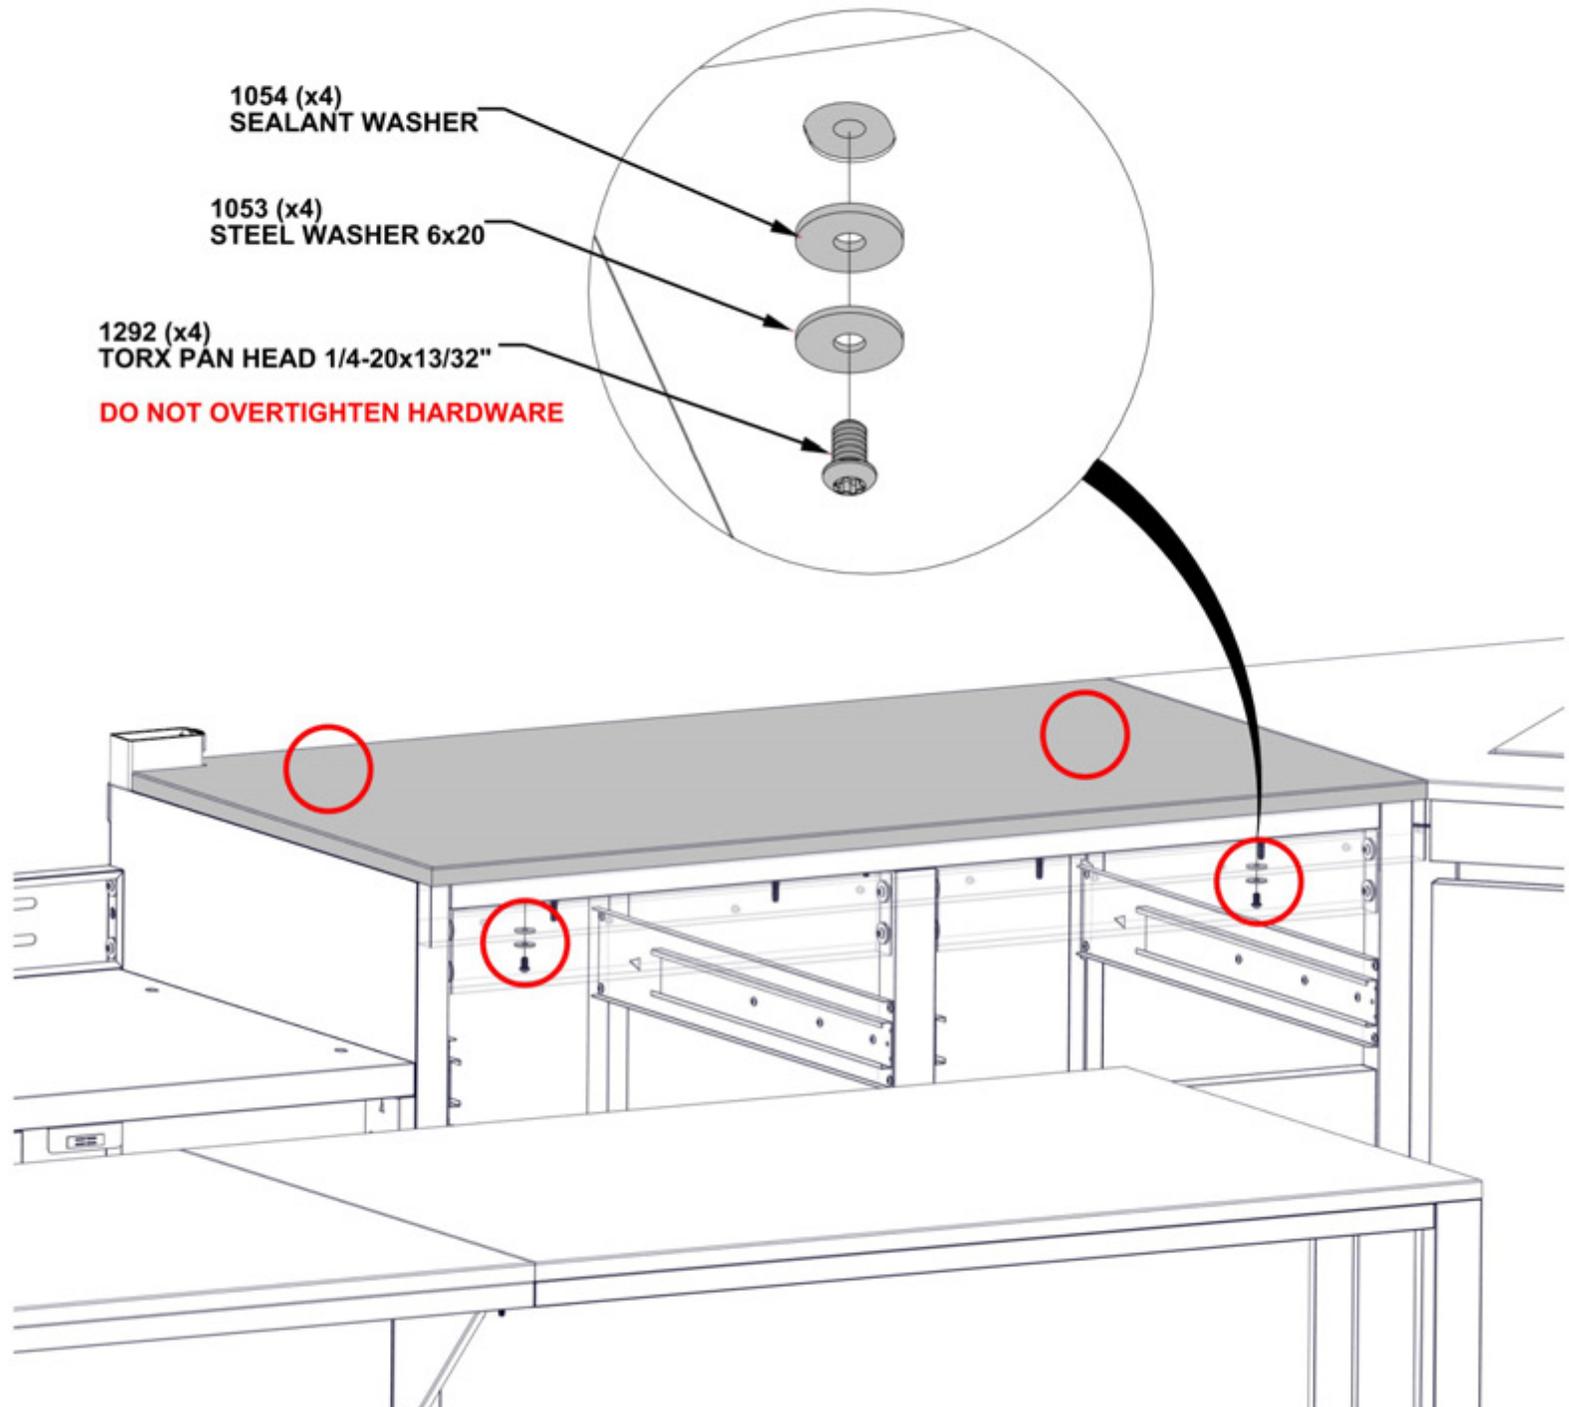


STEP 43 - TRASH CAN ASSEMBLY




TRASH CAN DISASSEMBLY FROM STEP 3

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH TRASH CAN ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.


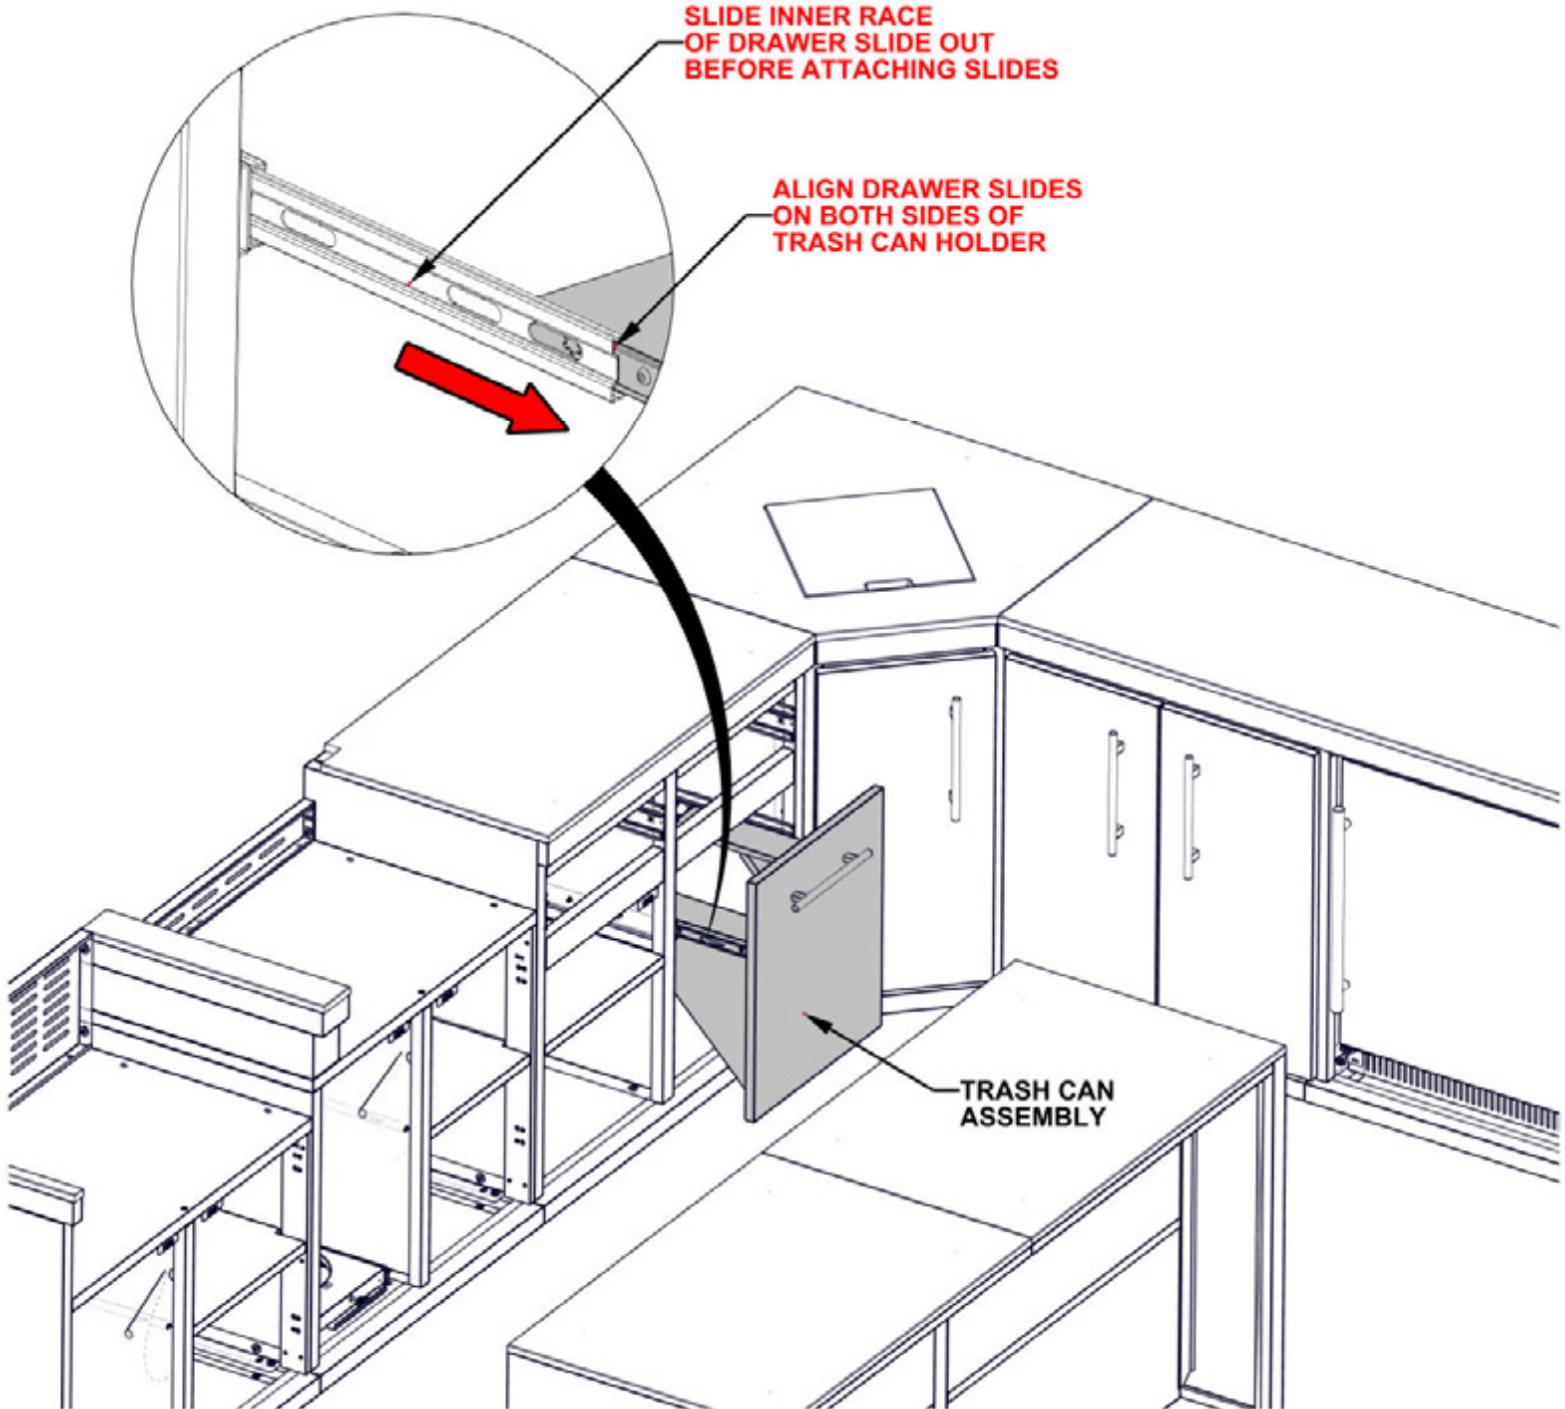


STEP 44 - CABINET DRAWER ATTACHMENT

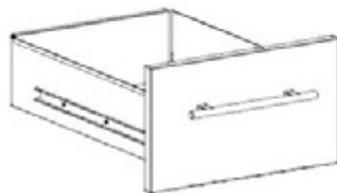

CABINET DRAWER DISASSEMBLY FROM STEP 1

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ATTACH DRAWER ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

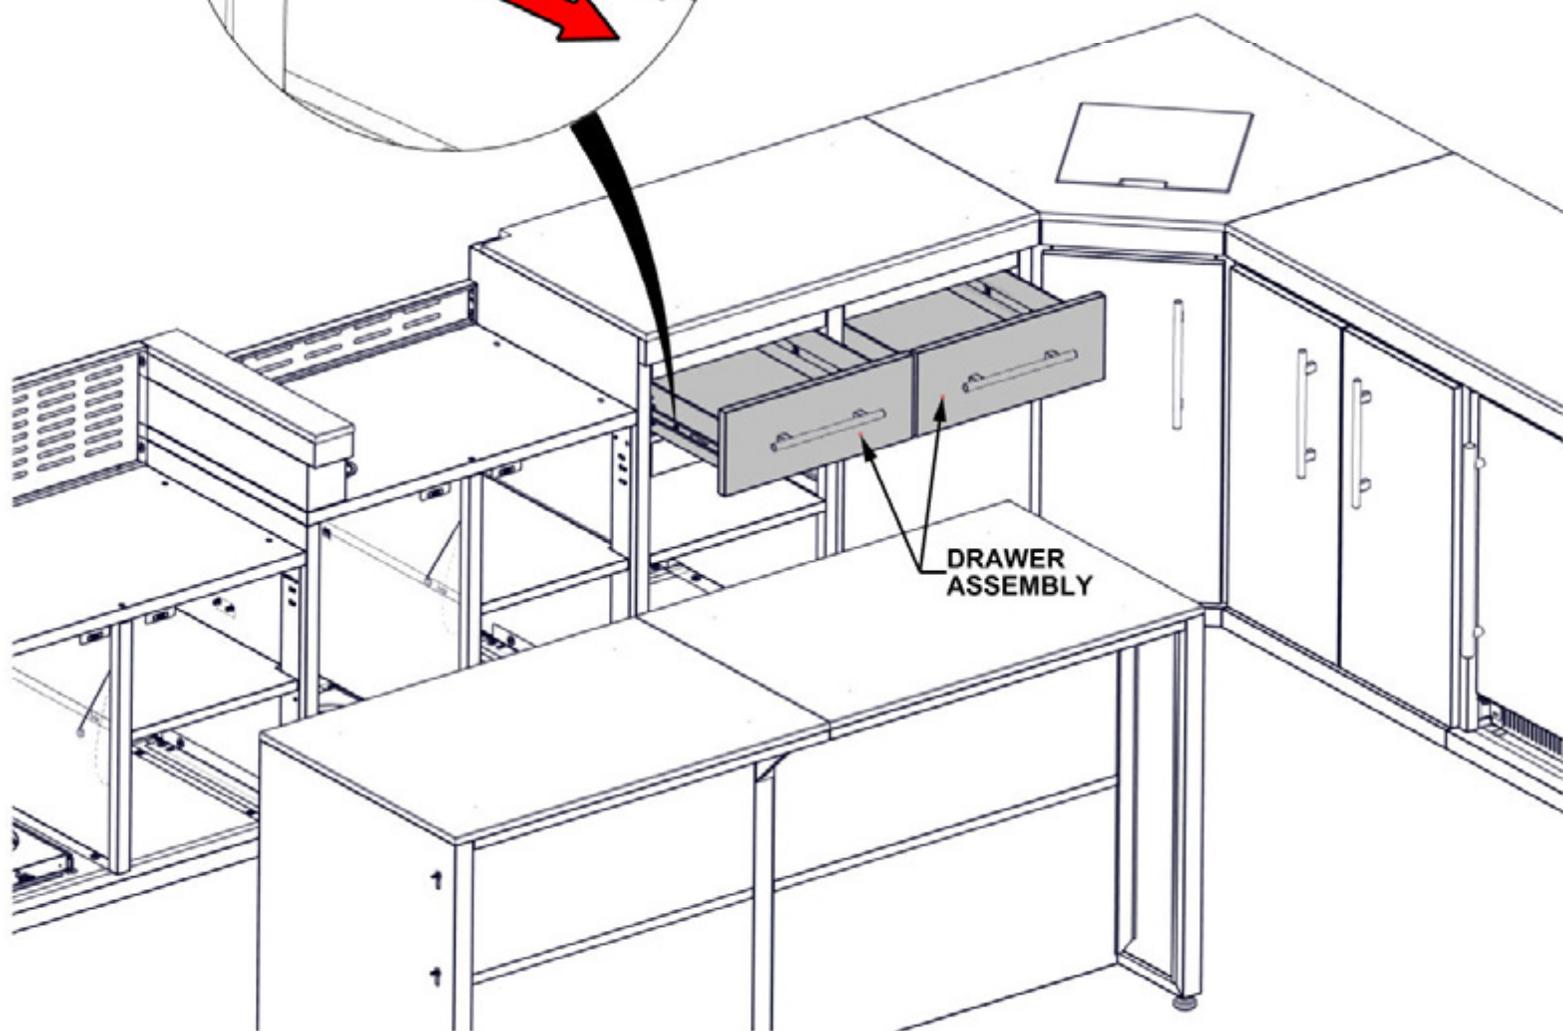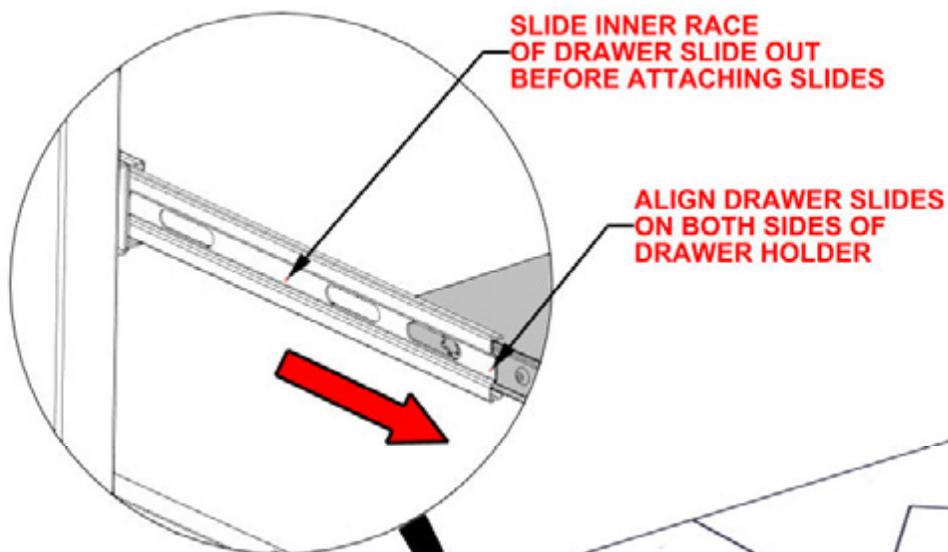

STEP 45 - CABINET DOOR ATTACHMENT


Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW



D8 LEFT CABINET DOOR ASSEMBLY - A4M04497
(x1) 23 1/4"x20 5/16"x15/16" (24x515.2x590.5)

NOTE: USE PART AND HARDWARE FROM STEP 2.


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

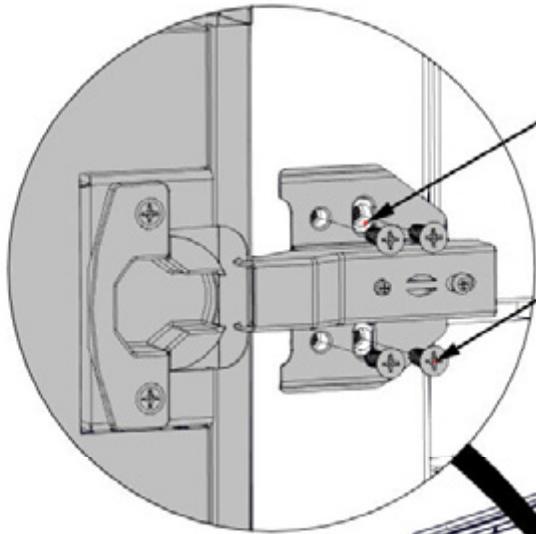

**ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL**

1185 (x8)
PHILLIPS FLAT HEAD 8-32x.5 SCREW

DO NOT OVERTIGHTEN HARDWARE

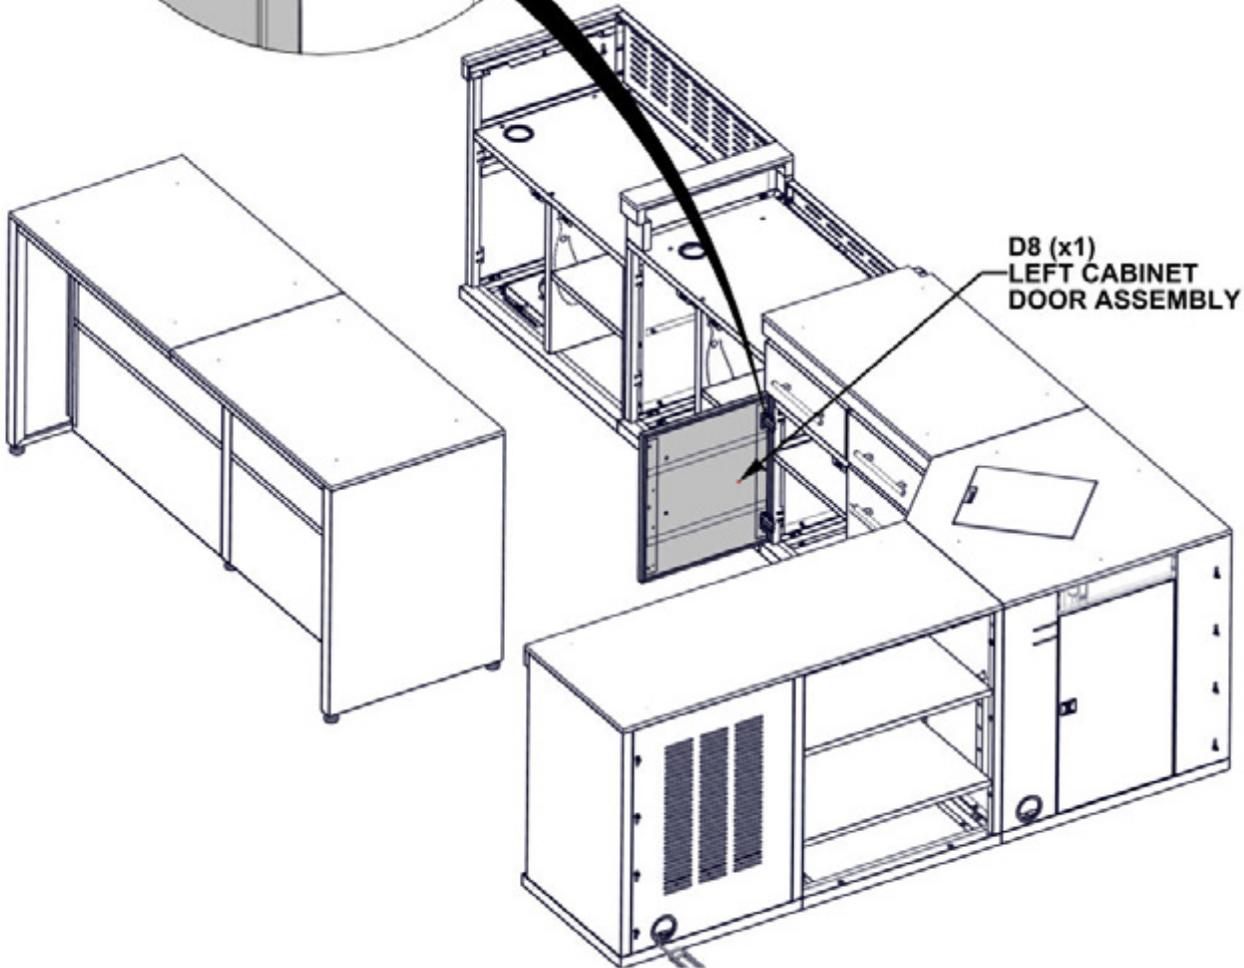

D8 (x1)
LEFT CABINET
DOOR ASSEMBLY

STEP 46A - DOOR ASSEMBLY

Qty	PartNo	Description
16	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW



D9 DOOR ASSEMBLY R - A4M05385
(x1) 27 15/16"x17 3/8"x15/16" (24x441x710)



D11 DOOR ASSEMBLY L - A4M05382
(x1) 24 7/16"x19 3/8"x15/16" (24x492x620)



D10 DOOR ASSEMBLY L - A4M05384
(x1) 27 15/16"x17 3/8"x15/16" (24x441x710)




D12 DOOR ASSEMBLY R - A4M05383
(x1) 24 7/16"x19 3/8"x15/16" (24x492x620)




A4M03025 FULL OVERLAY HINGE
(x8)

- INSTALL CABINET HINGES TO ALL DOORS.
- DO NOT OVERTIGHTEN HARDWARE.
- REPEAT FOR ALL DOORS ASSEMBLIES IN THIS STEP.

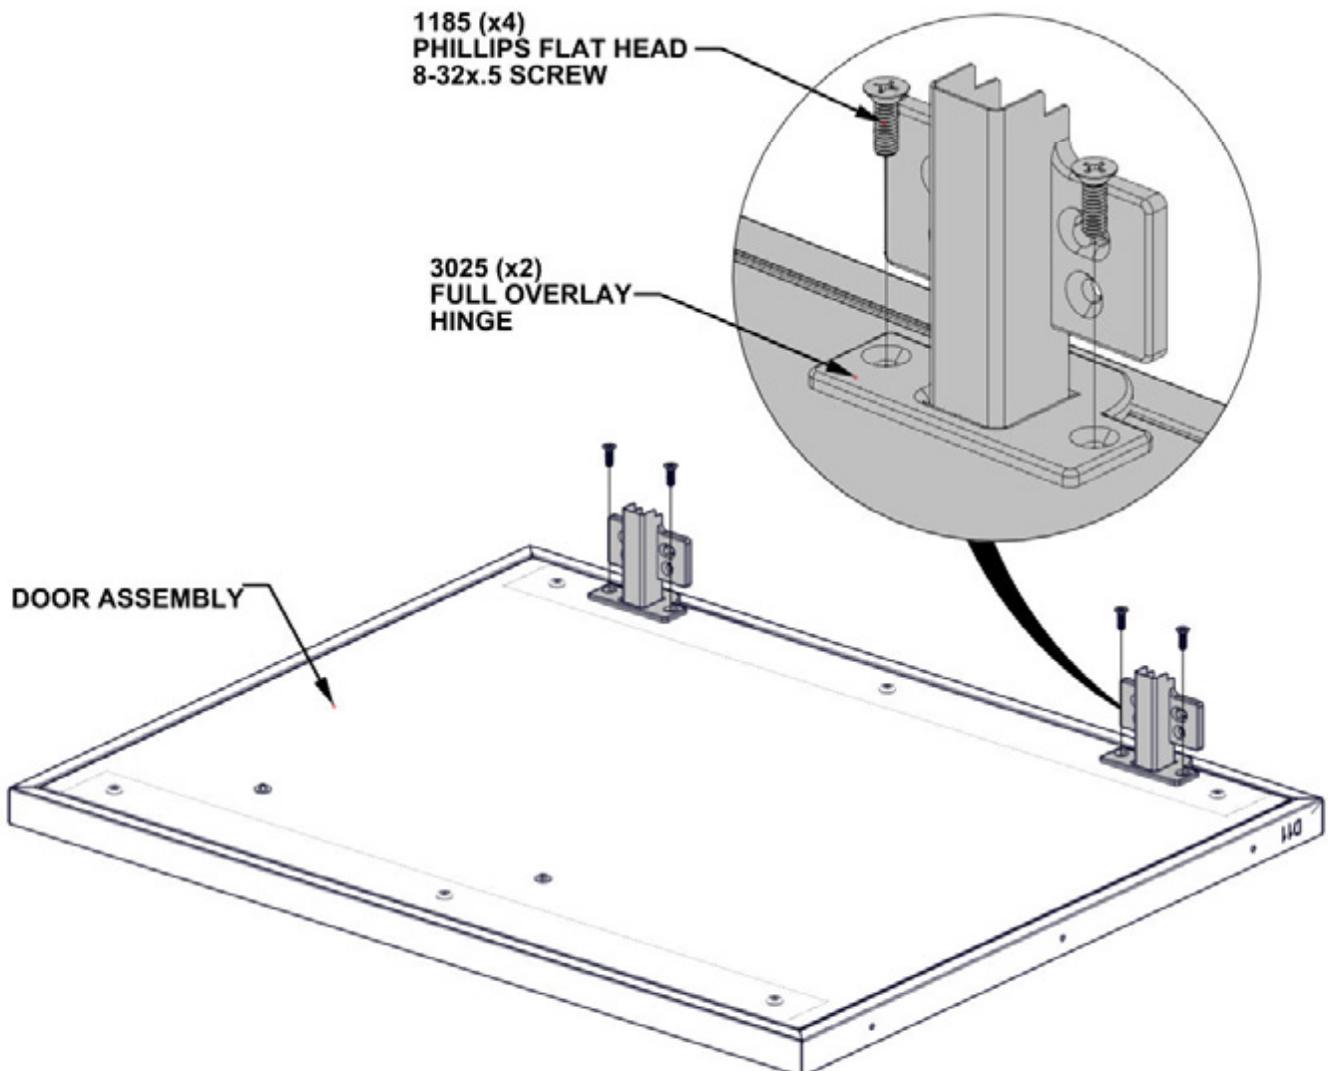

STEP 46B - DOOR ASSEMBLY


Qty	PartNo	Description
8	H101307	SHOULDER BOLT 8-32x30mm SS

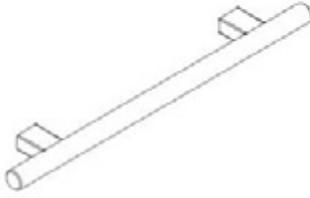

H2 STAINLESS STEEL HANDLE - A4M03024
(x4) 5/8"x1 9/16"x11 13/16" (16x40x300)

- INSTALL CABINET HANDLES TO ALL DOORS.
- REPEAT THIS STEP 4 TIMES.

1307 (x2)
SHOULDER BOLT
8-32x30mm SS

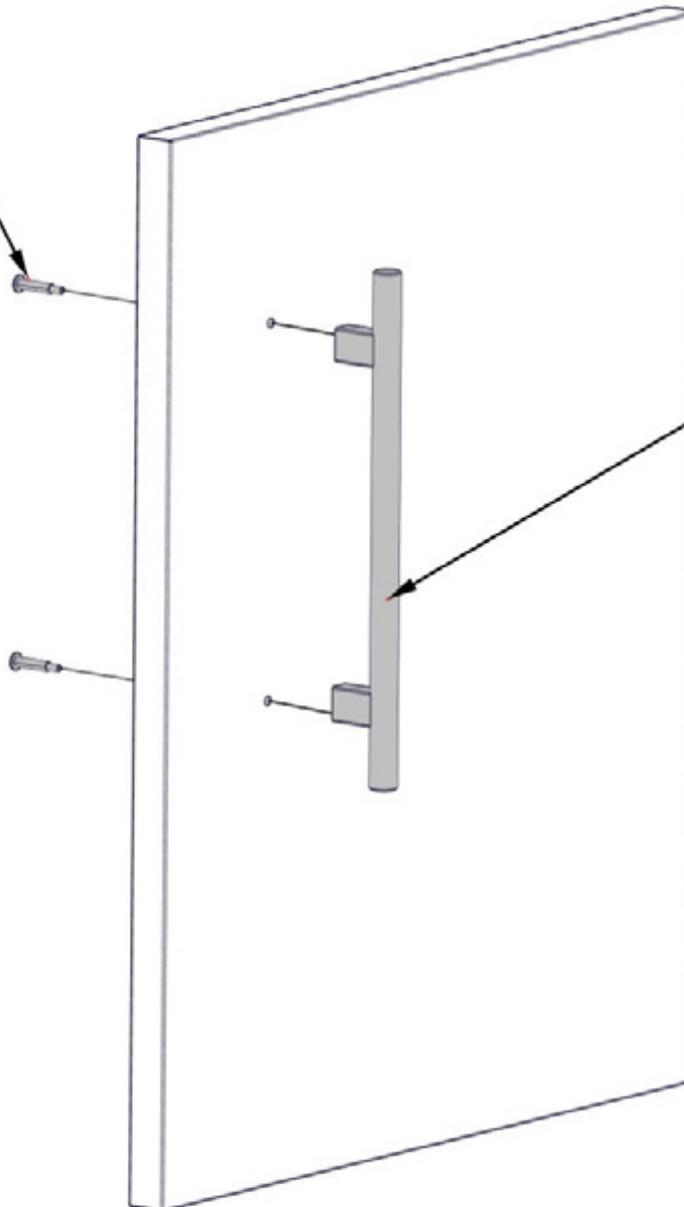

H2 (x1)
STAINLESS
STEEL
HANDLE


STEP 47 - CABINET DOOR ATTACHMENT

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW




D9 DOOR ASSEMBLY R - A4M05385
(x1) 27 15/16"x17 3/8"x15/16" (24x441x710)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

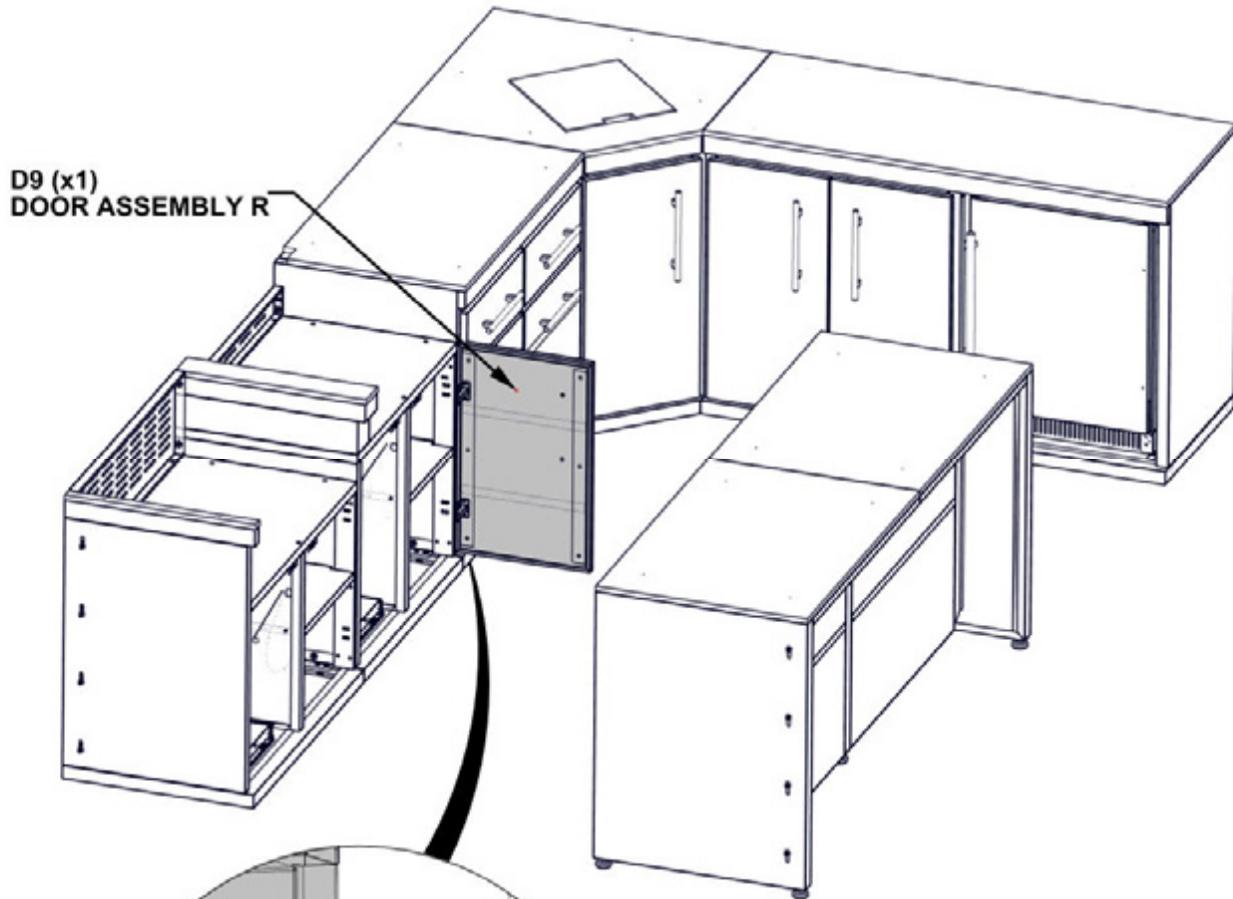

D9 (x1)
DOOR ASSEMBLY R

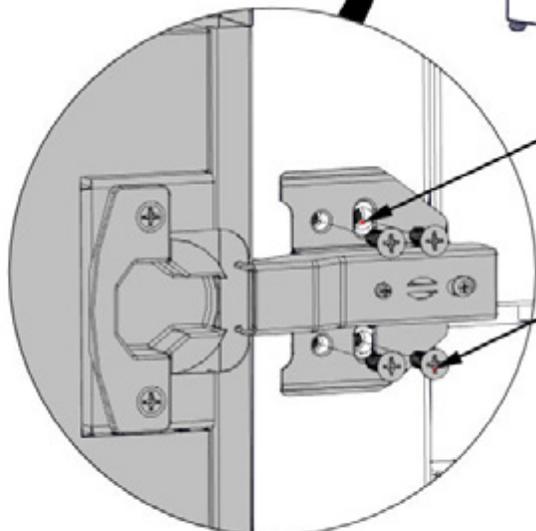

**ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL**

**1185 (x8)
PHILLIPS FLAT HEAD 8-32x.5 SCREW
DO NOT OVERTIGHTEN HARDWARE**


STEP 48 - CABINET DOOR ATTACHMENT

Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW



D10 DOOR ASSEMBLY L - A4M05384
(x1) 27 15/16"x17 3/8"x15/16" (24x441x710)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

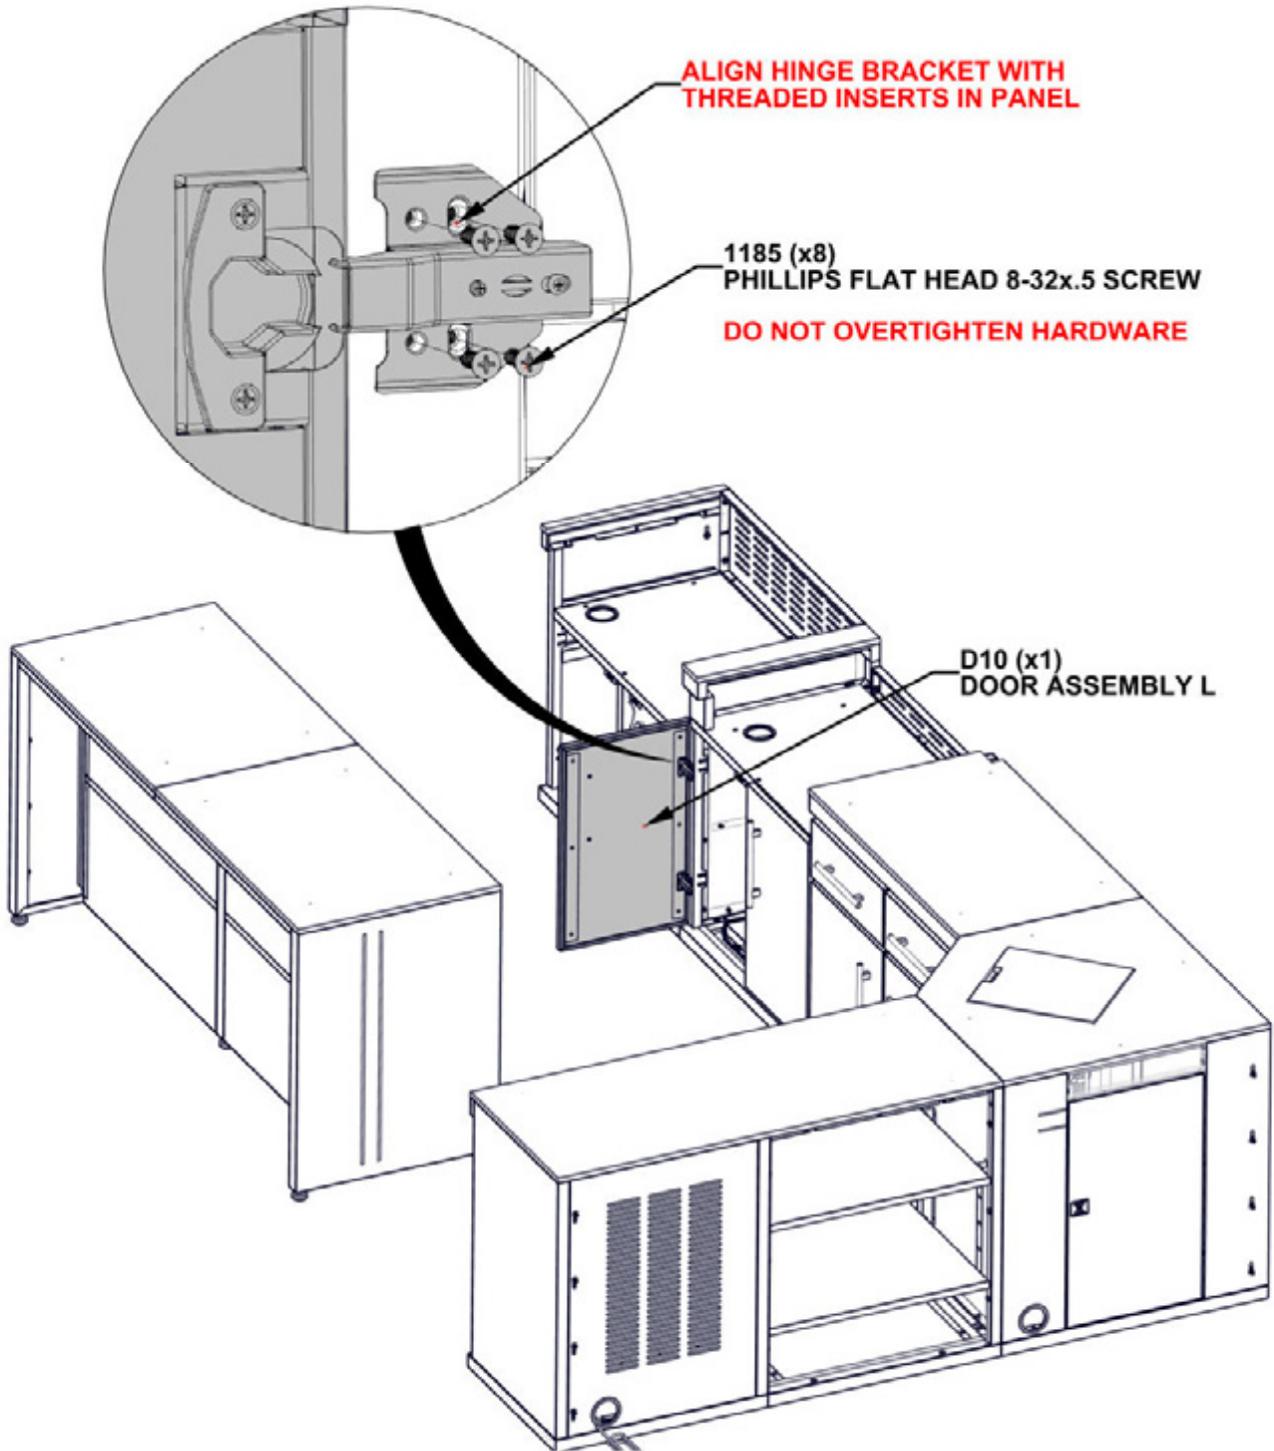

STEP 49 - CABINET DOOR ATTACHMENT




Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D12 DOOR ASSEMBLY R - A4M05383
(x1) 24 7/16"x19 3/8"x15/16" (24x492x620)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.


D12 (x1)
DOOR ASSEMBLY R

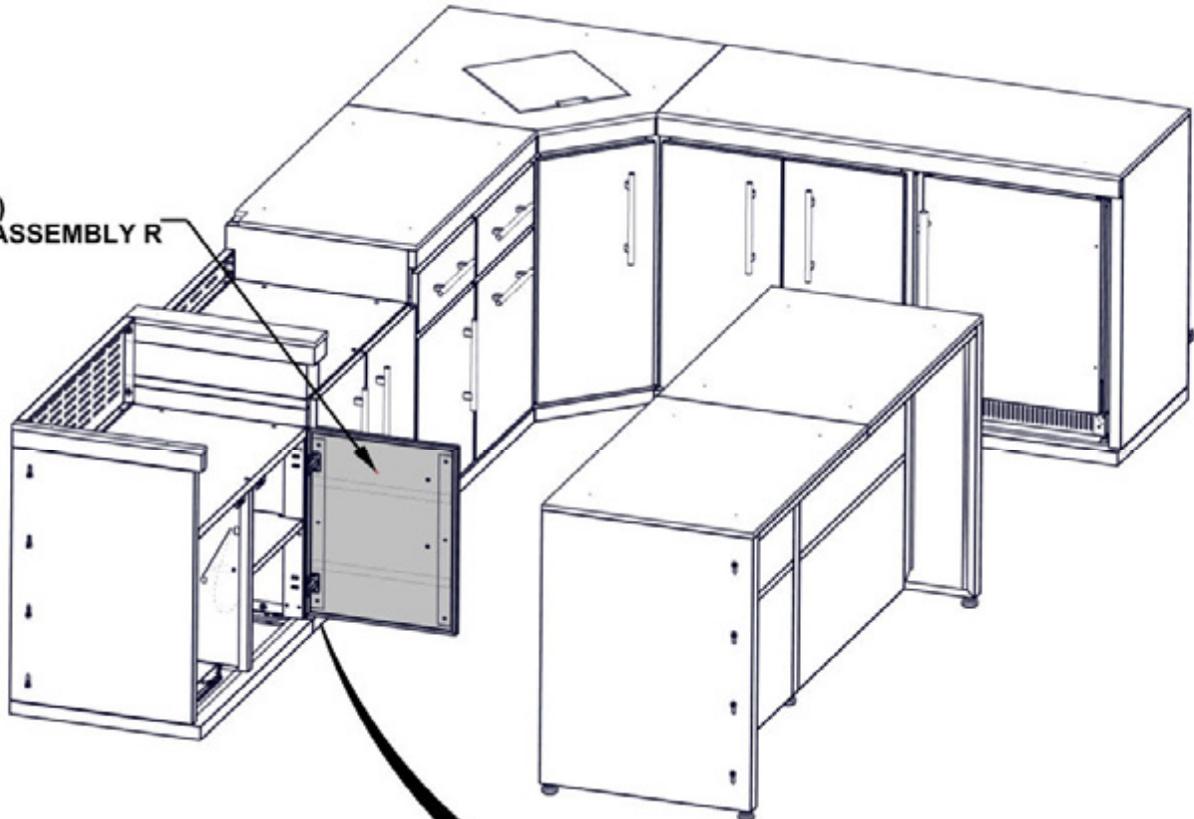

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

1185 (x8)
PHILLIPS FLAT HEAD 8-32x.5 SCREW

DO NOT OVERTIGHTEN HARDWARE

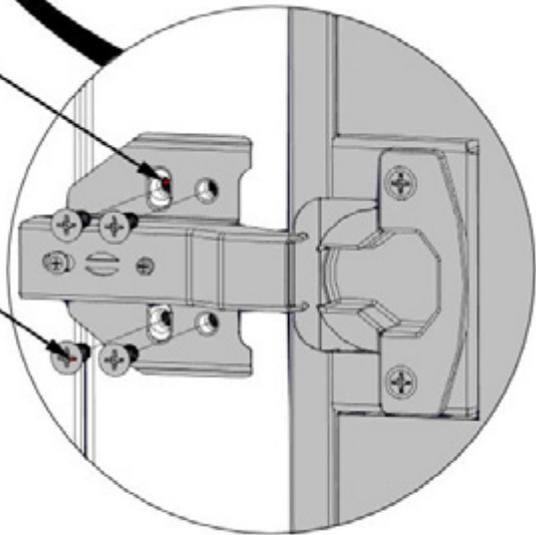



STEP 50 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW



D11 DOOR ASSEMBLY L - A4M05382
(x1) 24 7/16"x19 3/8"x15/16" (24x492x620)

- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

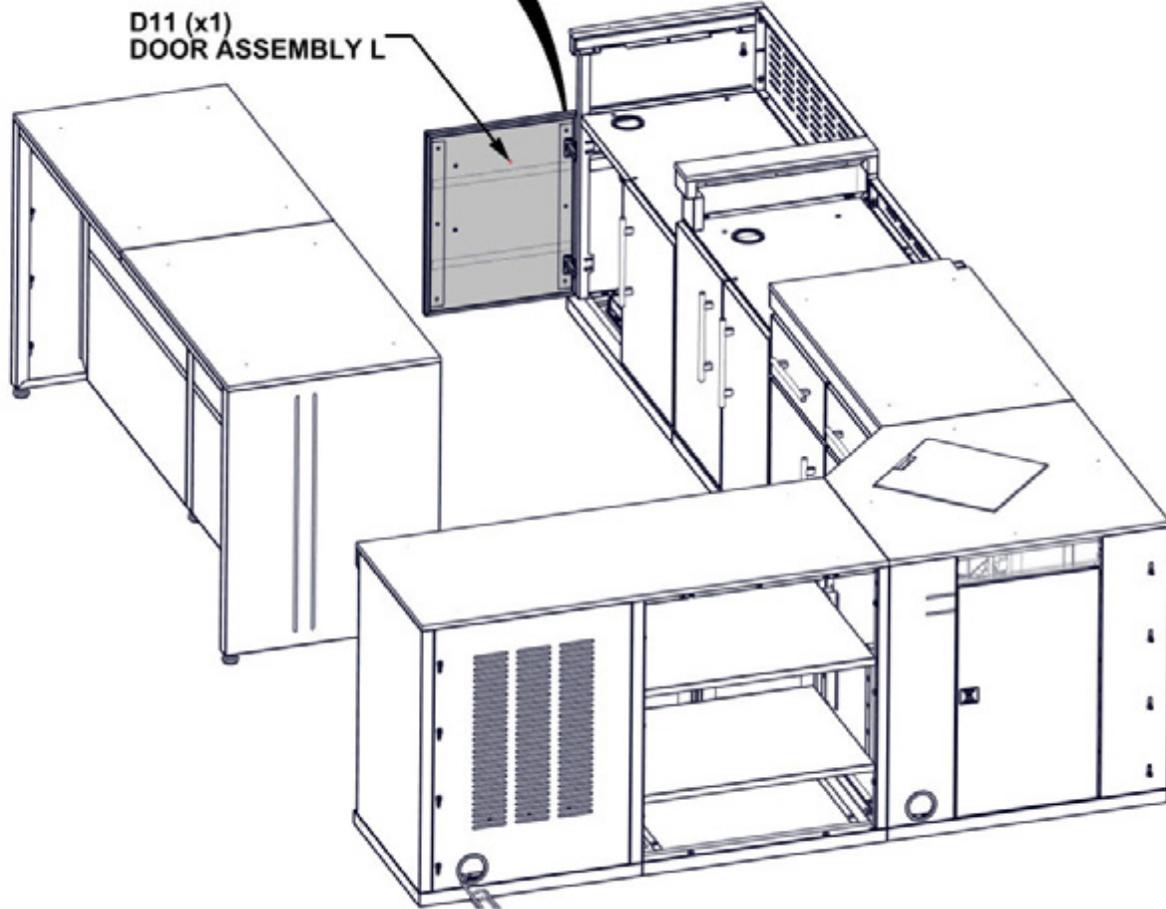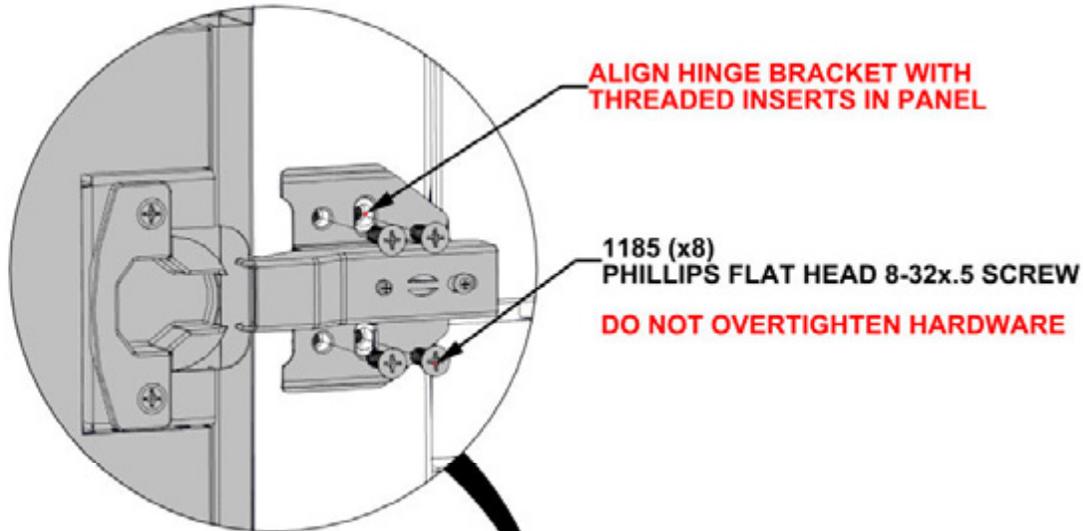

STEP 51 - CABINET DOOR ADJUSTMENT (AS NEEDED)


- ONLY KITCHEN CABINETS ARE SHOWN FOR DETAIL.
- ADJUST HINGES (AS NEEDED) SO THAT THE GAP AROUND ALL DOORS IS THE SAME AND THERE IS NO INTERFERENCE BETWEEN DOORS AND CABINETS.
- ADJUST MAGNET CATCH BRACKETS AS NEEDED.

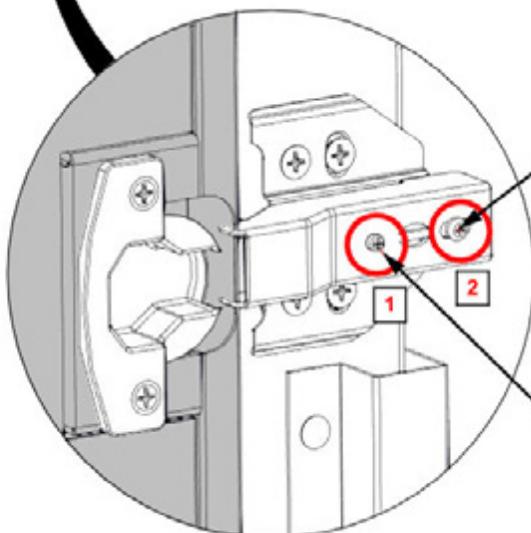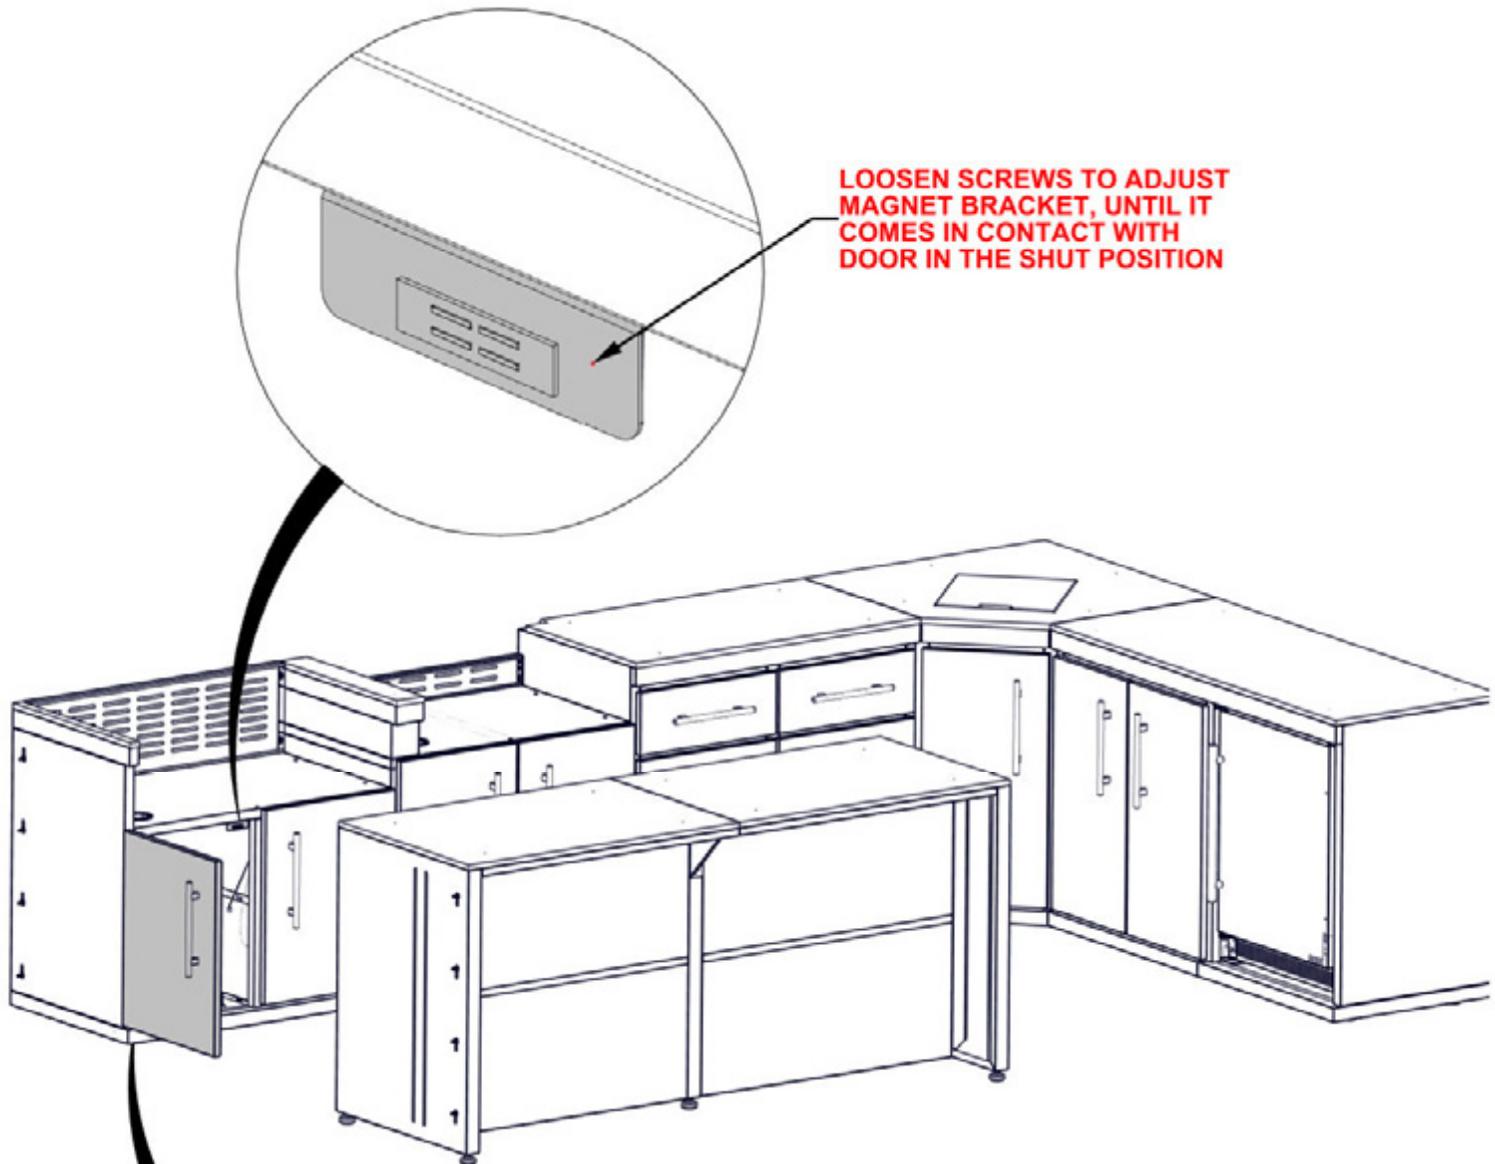

SCREW #2:
LOOSEN THESE SCREWS TO
SLIDE DOOR TOWARD
CABINET
OR AWAY FROM CABINET


SCREW #1:
SCREW CLOCKWISE TO BRING
EDGE OF DOOR AWAY FROM
CABINET. SCREW COUNTER
CLOCKWISE TO BRING EDGE OF
DOOR CLOSER TO CABINET

OUTDOOR KITCHEN APPLIANCE INSTALLATION

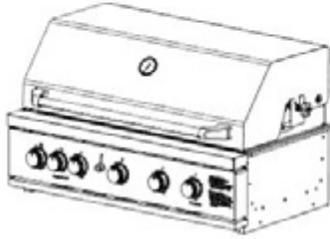


9240025 OUTDOOR KITCHEN GRILL KIT
(x1)

OR

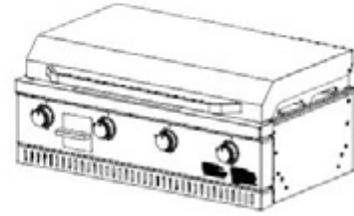


9240742 OUTDOOR KITCHEN GRIDDLE KIT
(x1)

- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN GRILL KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN GRILL KIT.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

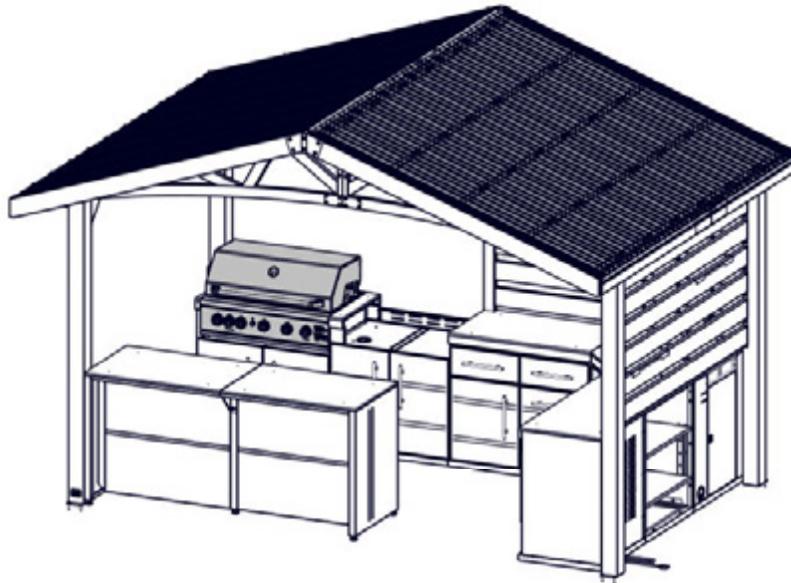

- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN GRIDDLE KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN GRIDDLE KIT.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

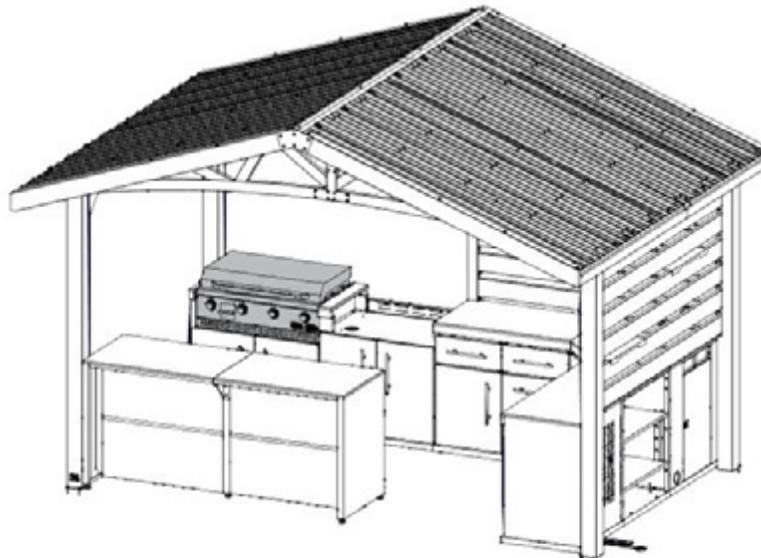


**NATURAL GAS CONVERSION KIT AVAILABLE BY CONTACTING BACKYARD DISCOVERY AT
www.backyarddiscovery.com 1-800-856-4445**

OUTDOOR KITCHEN APPLIANCE INSTALLATION




9240018 OUTDOOR KITCHEN PIZZA OVEN
(x1)

OR

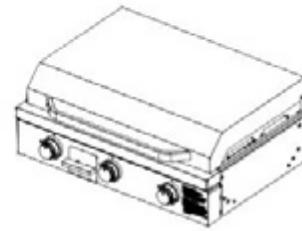


9240735 OUTDOOR KITCHEN GRIDDLE KIT
(x1)

- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN PIZZA OVEN, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN PIZZA OVEN.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

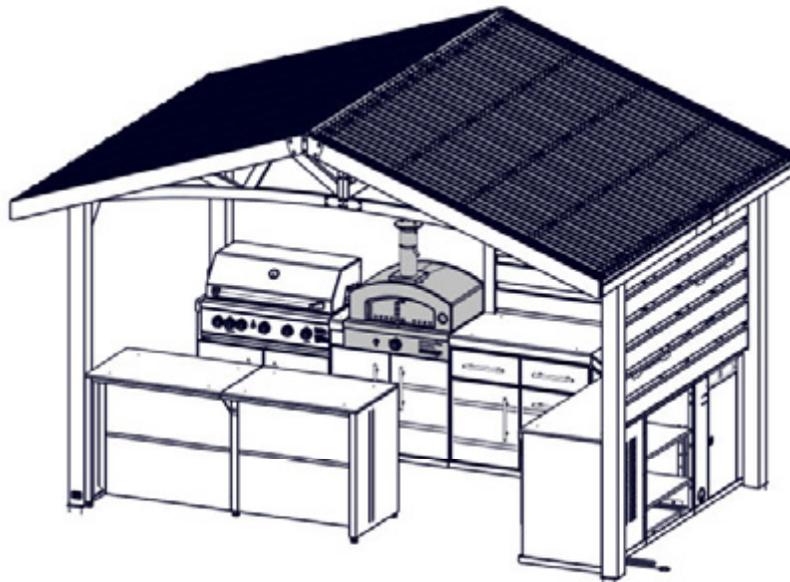

- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN GRIDDLE KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN GRIDDLE KIT.
- FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

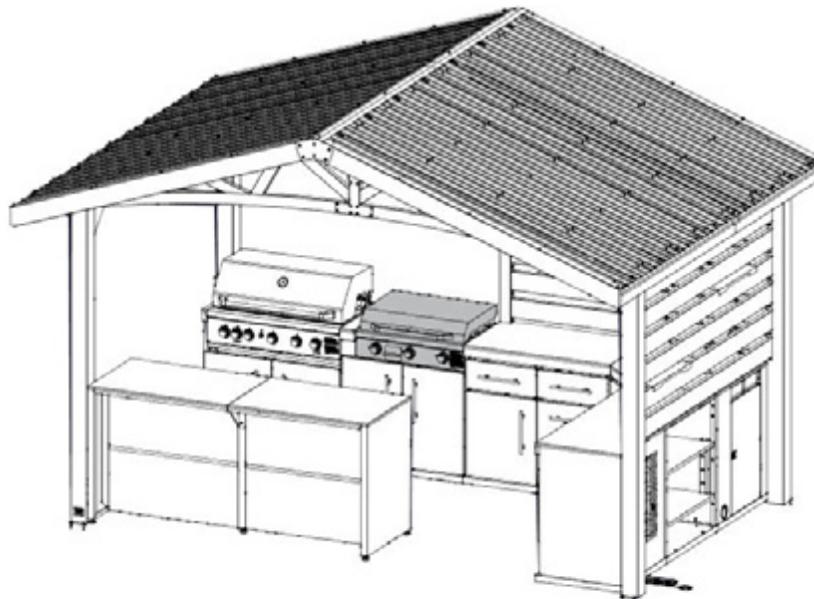

**NATURAL GAS CONVERSION KIT AVAILABLE BY CONTACTING BACKYARD DISCOVERY AT
www.backyarddiscovery.com 1-800-856-4445**