



MANUFACTURED BY:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 0800-567-8990

GRAYSON PEAK

Swing Set

Model # 2101050

The assembly manual must be retained
since it contains important information



WARNING

Adult Assembly Required.

Not suitable for children under 36 months due to small parts.

FOR DOMESTIC USE ONLY. INTENDED FOR OUTDOOR USE.



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your set, or to order replacement parts

Para obtener instrucciones en español, visite www.backyarddiscovery.com



EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS

DOWNLOAD THE FREE APP



Made in China


INS-2101050-A-GRAYSON PEAK-ENG 08-10-23



Place the set on level ground, not less than 6'-7" [2 m] from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

- While assembling unit, take time before and after each phase to make sure fort is level. If fort is not level, assembly will be difficult and improper assembly may result. Extra care must be taken to insure the fort is square.
- The safe play area refers to a zone extending 6'-7" (2m) beyond the play product on all sides, including the space above the play product.

SAFE PLAY AREA DIAGRAM

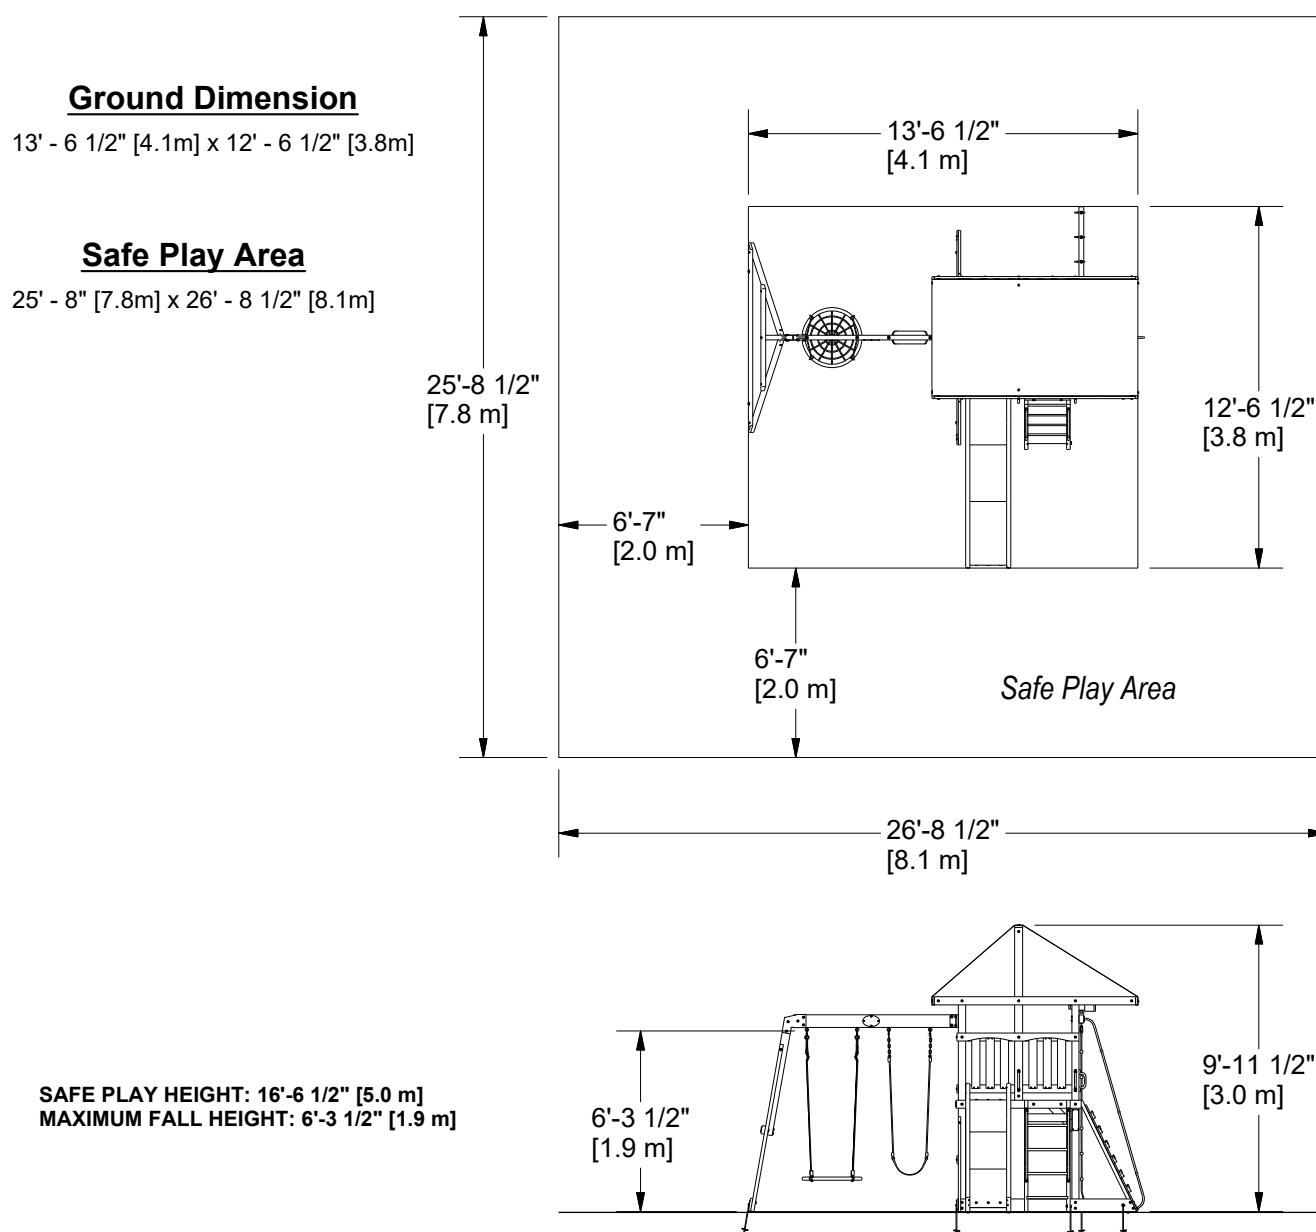

General Information:


Your set has been designed and engineered for children only and for residential use only.
A maximum of 150 lbs. per child is recommended for play activities designed for individual use.
A maximum of 120 lbs. per child is recommended for play activities designed for multiple child use.
A maximum of 9 children is recommended for this swing set.




Wood Components (Not to Scale)



B2 | UPRIGHT POST - W4L13768
(x1) 3"x3"x89 1/2" (76x76x2274)




B3 | UPRIGHT POST - W4L13769
(x1) 3"x3"x89 1/2" (76x76x2274)




B4 | UPRIGHT POST - W4L13770
(x1) 3"x3"x89 1/2" (76x76x2274)



E1 | RAIL - W4L13761
(x1) 1 3/8"x3"x51 7/8" (36x76x1318)



E2 | RAIL - W4L13755
(x1) 1 3/8"x3"x51 7/8" (36x76x1318)




E3 | RAIL - W4L13762
(x1) 1 3/8"x3"x51 7/8" (36x76x1318)




E74 | LEFT UPRIGHT - W4L13775
(x1) 1 3/8"x3 3/8"x50 3/4" (36x86x1290)



E75 | RIGHT UPRIGHT - W4L13776
(x1) 1 3/8"x3 3/8"x50 3/4" (36x86x1290)



E77 | ANGLE BRACE - W4L13782
(x2) 1 3/8"x3 3/8"x80 1/2" (36x86x2043)



E79 | END SUPPORT - W4L13783
(x1) 1 1/2"x3 1/2"x44 1/2" (36x86x1127)



G1 | GROUND BOARD - W4L13582
(x1) 1"x5 1/4"x79 1/8" (24x134x2010)



G2 | WALL RAIL - W4L07153
(x1) 1"x5 1/4"x48 7/8" (24x134x1243)



G50 | GROUND BOARD - W4L13784
(x1) 1"x5 1/4"x79" (24x134x2006)




Wood Components (Not to Scale)




H1 | ANGLE BRACE - W4L07127
(x2) | 1"x3 3/8"x44 1/2" (24x86x1129)



H2 | FLOOR SUPPORT - W4L13772
(x1) | 1"x3 3/8"x52 1/8" (24x86x1324)




H3 | FLOOR SUPPORT - W4L13773
(x1) | 1"x3 3/8"x52 1/8" (24x86x1324)




H4 | FLOOR SUPPORT - W4L07130
(x1) | 1"x3 3/8"x48 7/8" (24x86x1243)




H5 | FLOOR SUPPORT - W4L07131
(x1) | 1"x3 3/8"x48 7/8" (24x86x1243)



H6 | UPRIGHT - W4L13763
(x1) | 1"x3 3/8"x72" (24x86x1828)



H7 | UPRIGHT - W4L13764
(x1) | 1"x3 3/8"x72" (24x86x1828)




H8 | ROOF RAIL - W4L13765
(x2) | 1"x3 3/8"x83 7/8" (24x86x2132)



H9 | ROOF RAIL - W4L13766
(x2) | 1"x3 3/8"x50 7/8" (24x86x1291)




H10 | ROOF RAIL - W4L13767
(x1) | 1"x3 3/8"x48 7/8" (24x86x1243)



H11 | DECK BRACE - W4L07296
(x2) | 1"x3 3/8"x17 3/4" (24x86x450)



H12 | DECK BRACE - W4L13771
(x4) | 1"x3 3/8"x15 7/8" (24x86x402)



H13 | ARCHED RAIL - W4L13774
(x1) | 1"x3 3/8"x50 7/8" (24x86x1292)



H81 | LADDER RUNG - W4L13778
(x4) | 1"x3 3/8"x17 1/8" (24x86x434)



Wood Components (Not to Scale)



J1 | FLOOR JOIST - W4L07139
(x2) | 1"x2 3/8"x50 1/4" (24x60x1275)



J2 | FLOOR SUPPORT - W4L06710
(x4) | 1"x2 3/8"x3" (24x60x76)



K1 | GROUND BOARD - W4L07122
(x1) | 5/8"x5 1/4"x74 1/4" (16x134x1888)




K2 | GROUND BOARD - W4L07123
(x1) | 5/8"x5 1/4"x89 3/8" (16x134x2270)




K3 | GROUND BOARD - W4L07124
(x1) | 5/8"x5 1/4"x50 1/8" (16x134x1274)




K4 | GROUND BOARD - W4L13756
(x1) | 5/8"x5 1/4"x23 1/8" (16x134x588)




K5 | GROUND BOARD - W4L13757
(x1) | 5/8"x4 3/4"x50 1/4" (16x120x1275)




M1 | ROCK WALL BOARD - W4L13758
(x7) | 5/8"x3 3/8"x48 7/8" (16x86x1243)



M2 | ROCK WALL BOARD - W4L13759
(x3) | 5/8"x3 3/8"x48 7/8" (16x86x1243)




M3 | ROCK WALL BOARD - W4L13760
(x3) | 5/8"x3 3/8"x48 7/8" (16x86x1243)



M4 | FLOOR BOARD - W4L07141
(x2) | 5/8"x3"x42 7/8" (16x76x1090)




M5 | FLOOR BOARD - W4L07142
(x1) | 5/8"x3 3/8"x48 7/8" (16x86x1242)



M8 | WALL RAIL - W4L07145
(x2) | 5/8"x3 3/8"x50 7/8" (16x86x1292)




Wood Components (Not to Scale)



M9 | WALL RAIL - W4L07146
(x3) 5/8"x3 3/8"x48 7/8" (16x86x1243)



M44 | PICKET - W4L07152
(x13) 5/8"x3 3/8"x21 3/8" (16x86x542)




M77 | SLIDE BRACE - W4L08748
(x1) 5/8"x3 3/8"x17 1/4" (16x86x438)



M78 | CENTER SLIDE BRACE - W4L08749
(x2) 5/8"x3 3/8"x17 1/4" (16x86x438)




M102 | ATTACHMENT BOARD - W4L13779
(x1) 5/8"x3 3/8"x19" (16x86x482)



M103 | REAR SUPPORT - W4L13777
(x1) 5/8"x3 3/8"x19" (16x86x482)



SB74 | SWING BEAM 2 POSITION - W4L13780
(x1) 2"x5 1/4"x68 3/4" (50x134x1745)




T1 | SUPPORT BOARD - W4L07140
(x2) 1"x1 3/8"x44 1/8" (24x34x1122)




W1 | SUPPORT BOARD - W4L07156
(x1) 2"x3 3/8"x78 7/8" (50x86x2005)



W71 | SWING BEAM SUPPORT - W4L13781
(x1) 2"x3 3/8"x49 3/8" (50x86x1254)




B1 | UPRIGHT POST ASSEMBLY - W2A02851
(x1) 3"x3"x89 1/2" (76x76x2274)

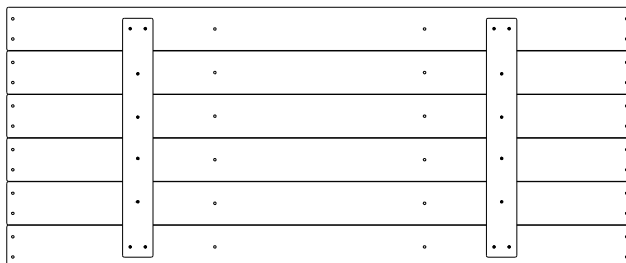


FP1 | FLOOR PANEL - W2A02850
(x2) 1 1/4"x20 3/8"x48 5/8" (32x519x1242)




Hardware Components

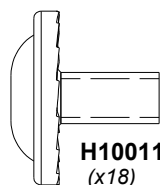


H100115 | BOLT WH
(x18) | 5/16x1/2

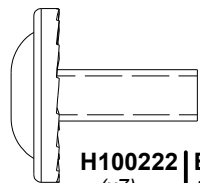


H100222 | BOLT WH
(x7) | 5/16x3/4

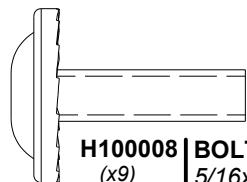


H100008 | BOLT WH
(x9) | 5/16x1

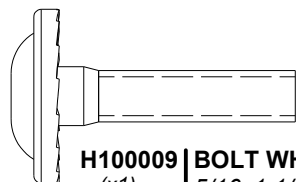


H100009 | BOLT WH
(x1) | 5/16x1 1/4

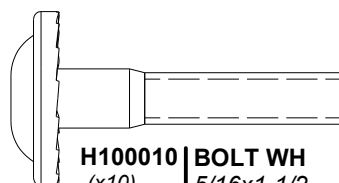


H100010 | BOLT WH
(x10) | 5/16x1-1/2

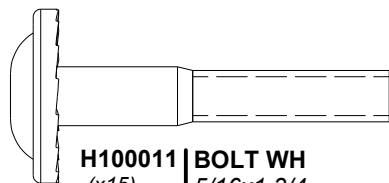

H100011 | BOLT WH
(x15) | 5/16x1 3/4

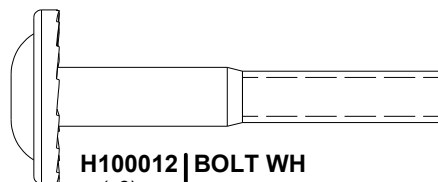


H100012 | BOLT WH
(x3) | 5/16x2




H100047 | BOLT HEX
(x2) | 5/16x2 3/4




H100505 | BOLT WH
(x7) | 5/16x4 3/4

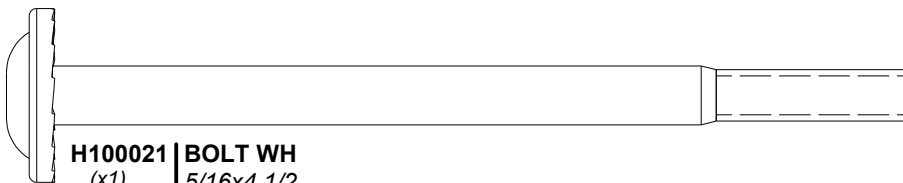

H100021 | BOLT WH
(x1) | 5/16x4 1/2

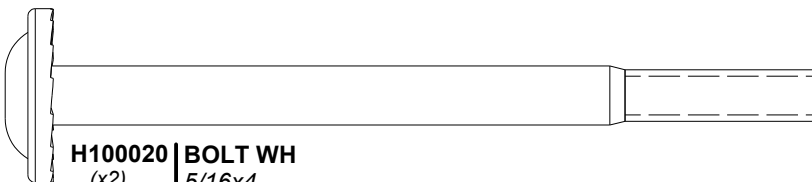


H100020 | BOLT WH
(x2) | 5/16x4

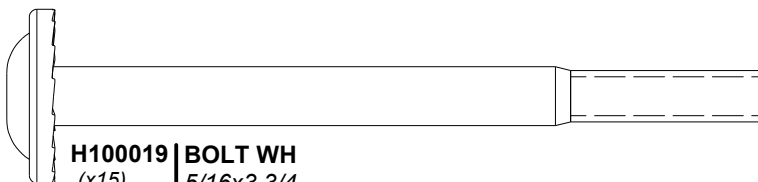


H100019 | BOLT WH
(x15) | 5/16x3 3/4




H100018 | BOLT WH
(x18) | 5/16x3 1/2

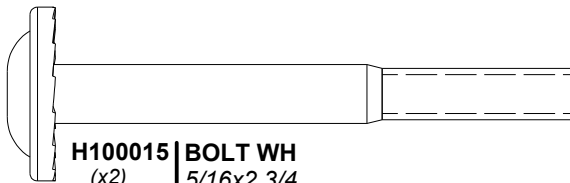


H100015 | BOLT WH
(x2) | 5/16x2 3/4

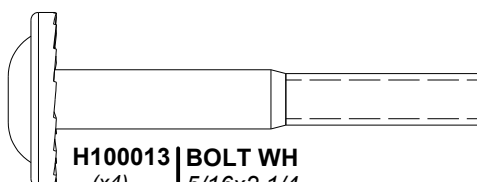


H100013 | BOLT WH
(x4) | 5/16x2 1/4




H100042 | BOLT HEX
(x4) | 5/16x1 1/4

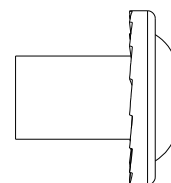


H100004 | NUT BARREL WH
(x9) | 5/16 x 5/8

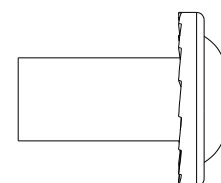

H100005 | NUT BARREL WH
(x17) | 5/16x7/8



H100831 | NUT BARREL PTH BLK
(x4) | 1/4x3/4

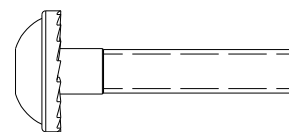


H100142 | BOLT WH
(x2) | 1/4x1-1/4




Hardware Components



H100088 | SCREW PFH
(x56) | 8x1 1/8




H100087 | SCREW PFH
(x2) | 8x1 1/4




H100086 | SCREW PFH
(x176) | 8x1 1/2




H100089 | SCREW PFH
(x19) | 8x1 3/4




H100111 | SCREW PFH
(x17) | 8x2




H100090 | SCREW PFH
(x35) | 8x2 1/2"

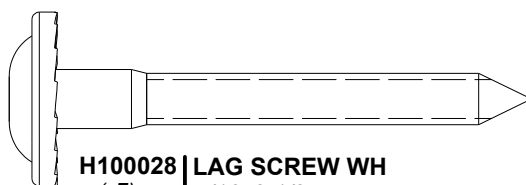


H100028 | LAG SCREW WH
(x7) | 5/16x2 1/2

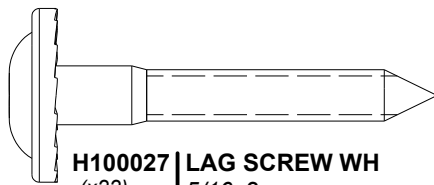


H100027 | LAG SCREW WH
(x22) | 5/16x2

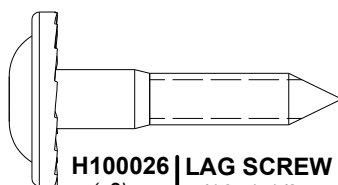


H100026 | LAG SCREW WH
(x2) | 5/16x1 1/2




H100063 | BOLT PTH
(x20) | 1/4x3/4




H100832 | BOLT PTH BLK (with LOCTITE)
(x4) | 1/4x3/4

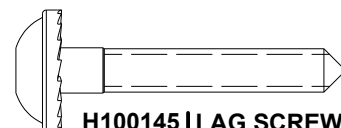


H100145 | LAG SCREW WH
(x7) | 1/4x1 1/2

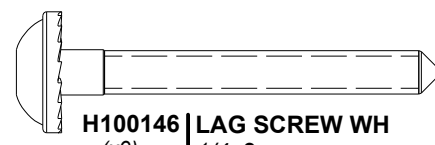


H100146 | LAG SCREW WH
(x9) | 1/4x2




H100128 | SCREW PWH
(x2) | 8x5/8




H100070 | SCREW PWH
(x19) | 8x3/4

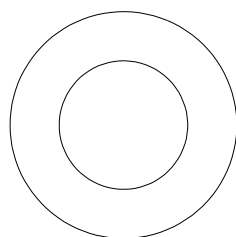


H100103 | WASHER SAFETY
(x8) | 17x30

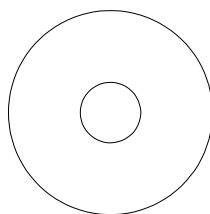


H100105 | WASHER FLAT
(x16) | 8x27




H100095 | WASHER SPLIT
(x4) | 5/16

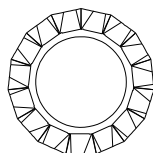


H100031 | WASHER LOCK EXT
(x19) | 12x19

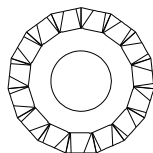

H100030 | WASHER LOCK EXT
(x92) | 8x19

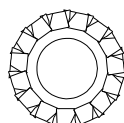


H100138 | WASHER LOCK EXT
(x17) | 6x15




H100110 | NUT LOCK
(x10) | 5/16




H100072 | T-NUT
(x22) | 1/4

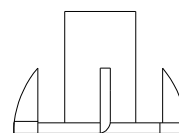


H100074 | T-NUT
(x85) | 5/16

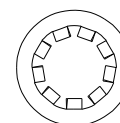


H100108 | WASHER LOCK INT
(x19) | 8x15




Hardware Components

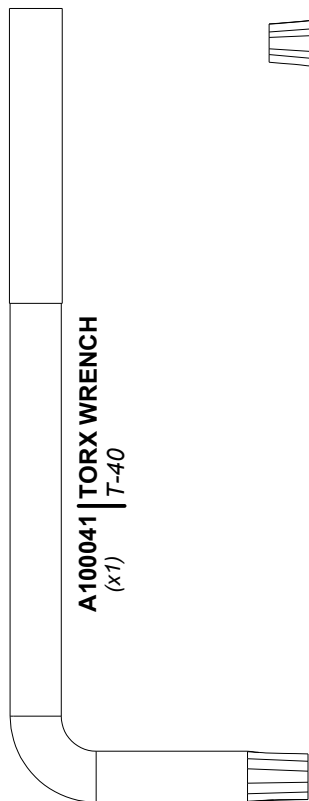


A100041 | TORX WRENCH
(x1) | T-40

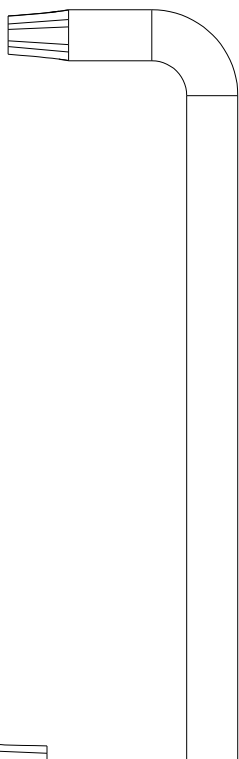


H100114 | TORX WRENCH
(x1) | T-30

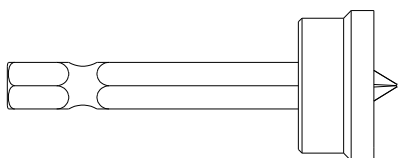


H100764 | SCREW SETTER
(x1)

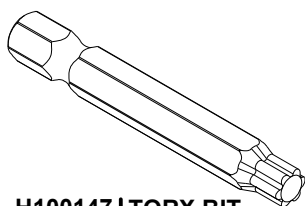


H100147 | TORX BIT
(x1) | T-30

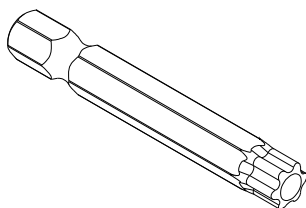


A100042 | TORX BIT
(x1) | T-40

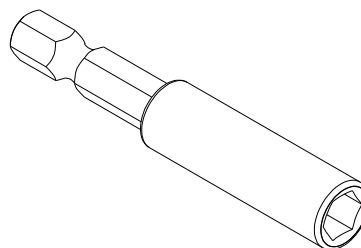

H101100 | MAGNETIC DRIVER
(x1)

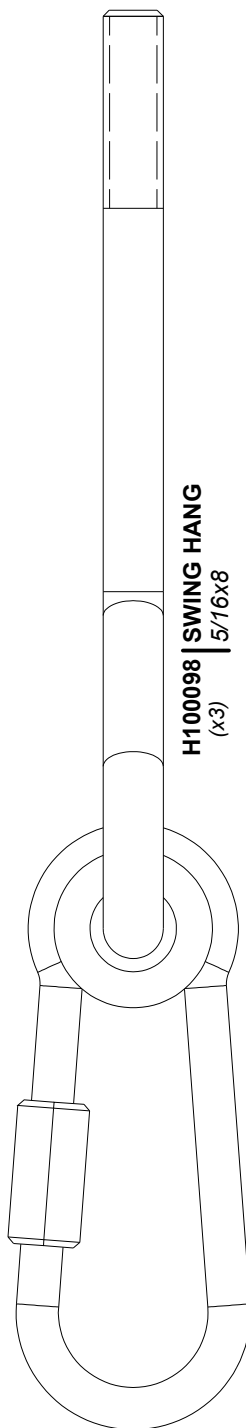


H100098 | SWING HANG
(x3) | 5/16x8

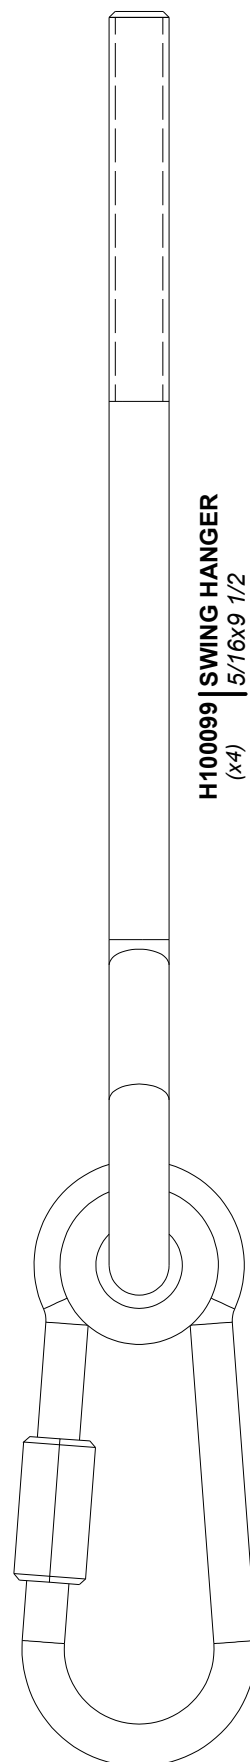

H100099 | SWING HANGER
(x4) | 5/16x9 1/2




Accessory Components (Not to Scale)

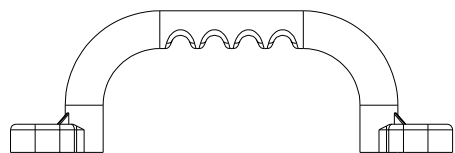


A100028
(x4) | **HAND GRIP GREEN PLASTIC**



A100134
(x2) | **HAND GRIP GREEN 816 C/C**

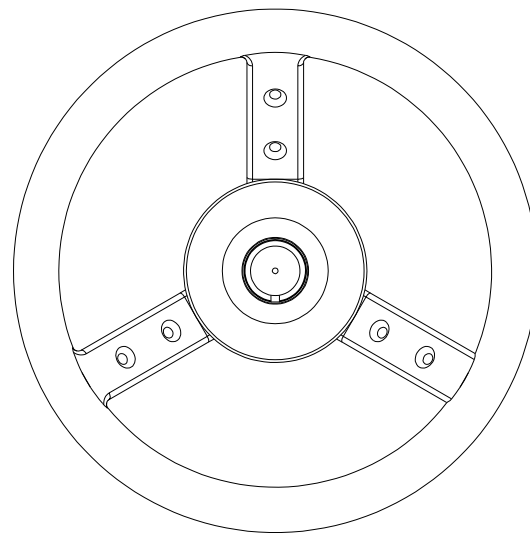


A100107
(x1) | **STEERING WHEEL**

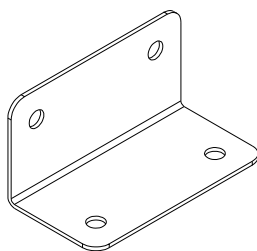

A100140
(x3) | **L BRACKET 66x66x127**




A100164
(x1) | **BYD ID TAG (LARGE) AGES 3-10**




A4M01046
(x8) | **L BRACKET 2.5x38x55x55**




A6P00037
(x9) | **GREEN HC ROCK #2**

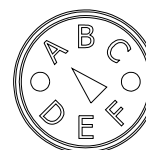

A100314
(x1) | **"A" REVISION TAG**

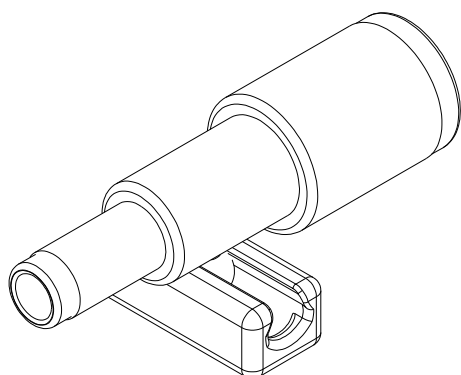


A6P00096
(x1) | **TELESCOPE**

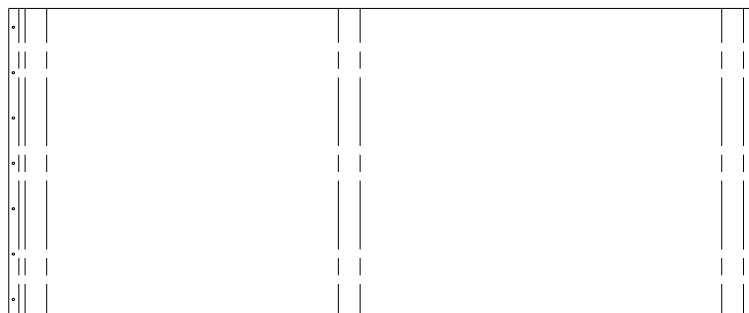


A6P00157
(x1) | **TARP**



Accessory Components (Not to Scale)

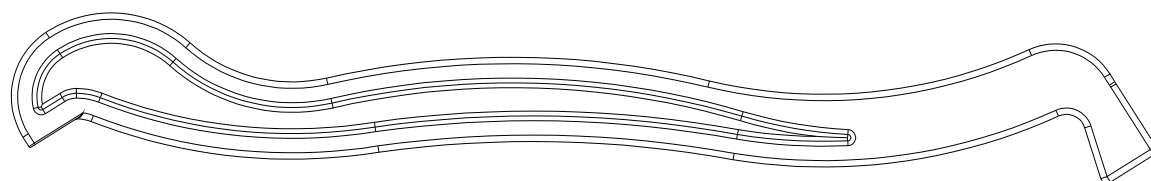


A100054
(x1) | SLIDE RAIL 8' GREEN RIGHT

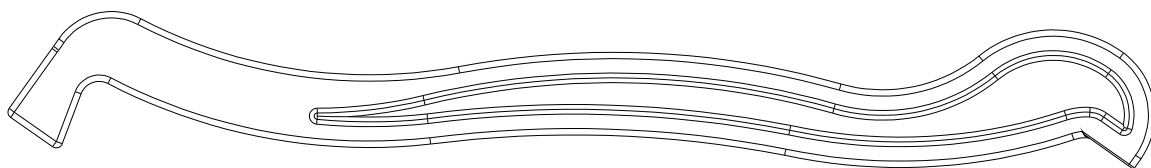


A100055
(x1) | SLIDE RAIL 8' GREEN LEFT




A6P00386
(x1) | SLIDE BED 8' DARK GREEN

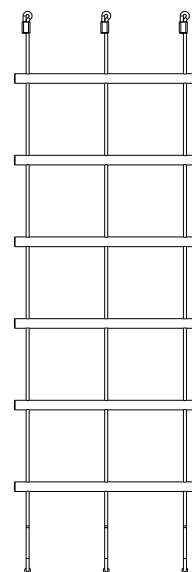


A6P00161
(x1) | ROPE LADDER

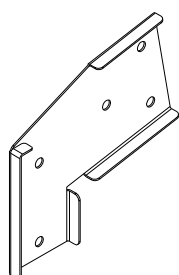


A100325
(x1) | SWING BEAM
EXTENSION
BRACKET-LEFT

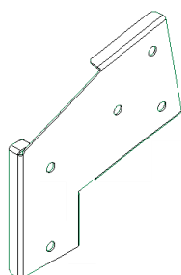

A100326
(x1) | SWING BEAM
EXTENSION
BRACKET-RIGHT

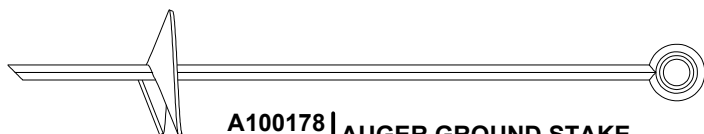


A100178
(x7) | AUGER GROUND STAKE

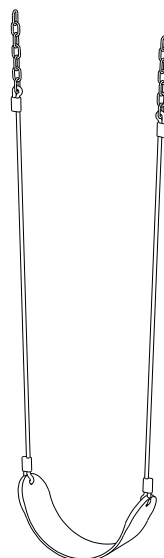

A6P00397
(x1) | ROPE-CHAIN GR / SEAT GR 22"



A4M01415
(x1) | 26" WEB SWING (EU)

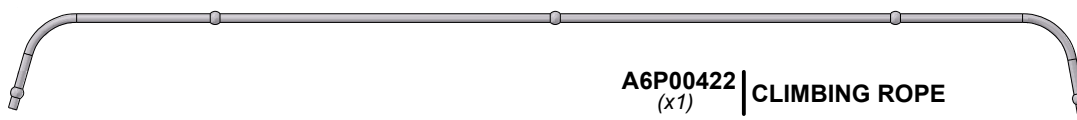

A6P00422
(x1) | CLIMBING ROPE


PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

WOOD PARTS:


- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.

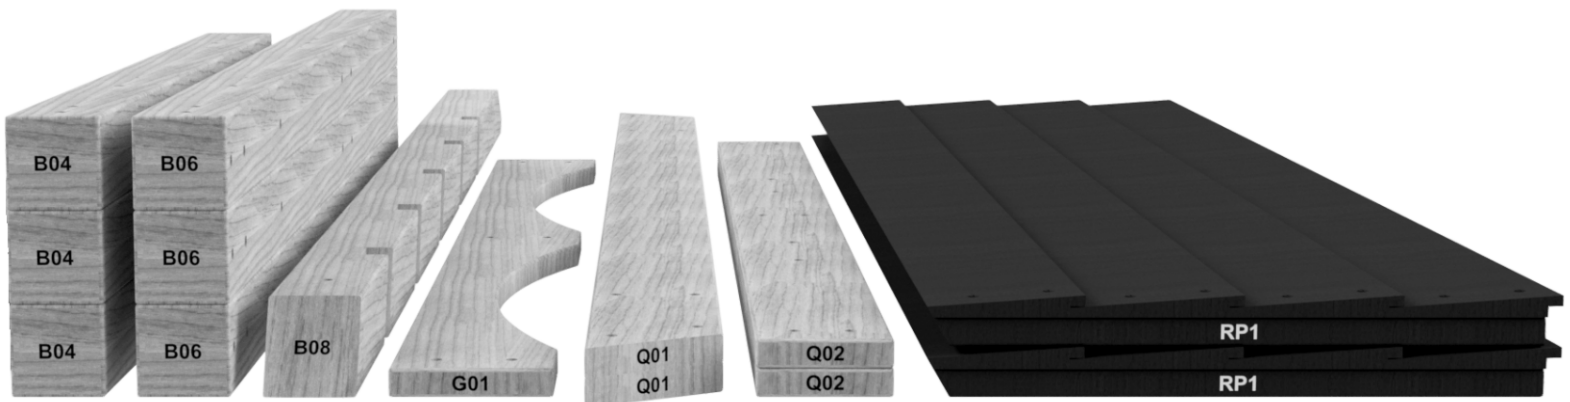

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

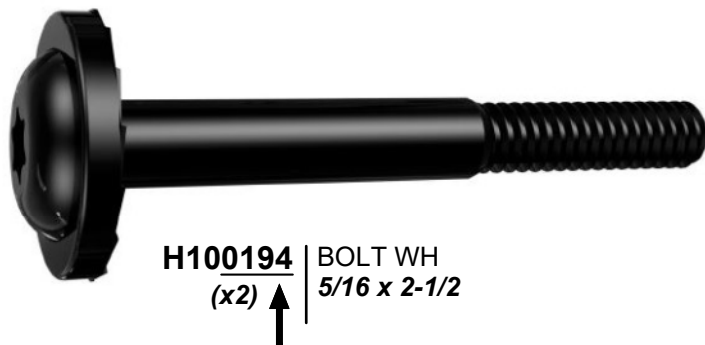

PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or
Electric Drill



Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" & 7/16" Drill
Bits



Phillips Screw Driver



Open End Wrenches 1/2" & 9/16"




3/8" Drive Ratchet, 1/2" &
9/16" STD Sockets 1/2" & 9/16" Deep
Sockets




Claw Hammer



Rubber Mallet - Optional

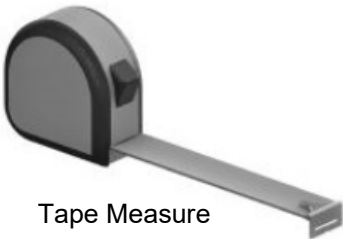

Tape Measure

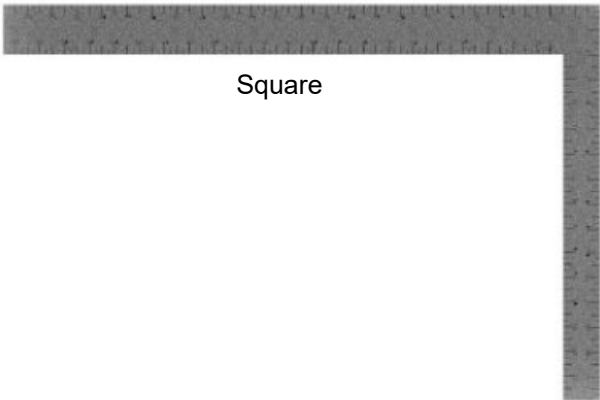

Square



Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.


1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)



Scan for easy 3D instructions

Download the BILT app before you begin



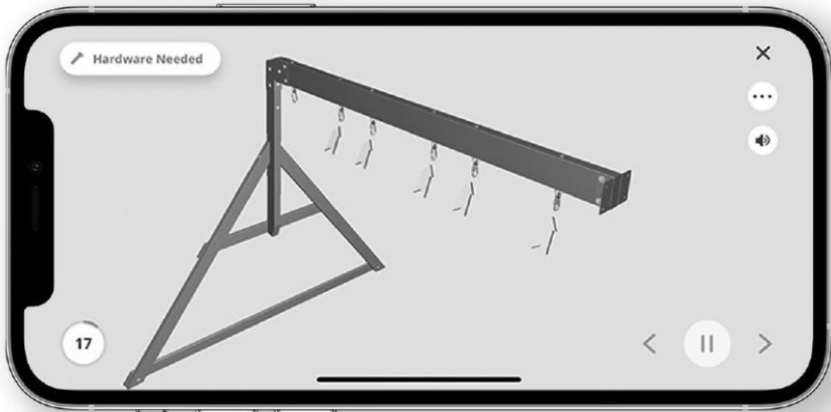




SLIDE ASSEMBLY

STEP 1



A6P00386 | SLIDE BED 8' DARK GREEN
(x1)



M77 | SLIDE BRACE - W4L08748
(x1) 5/8"x3 3/8"x17 1/4" (16x86x438)




H100115 | BOLT WH
(x3) 5/16x1/2




H100074 | T-NUT
(x3) 5/16

NOTE: TAKE NOTE OF SLIDE BED SURFACE FINISH, THE DULL SIDE WILL BE TOWARDS THE GROUND. PLACE SLIDE BRACE CENTERED ON THE BOTTOM (DULL SIDE) AND 1/4" FROM THE EDGE. USE M77 BOARD AS A TEMPLATE FOR DRILLING BOTTOM HOLE PATTERN IN SLIDE BED. USE A 5/16" DRILL BIT.

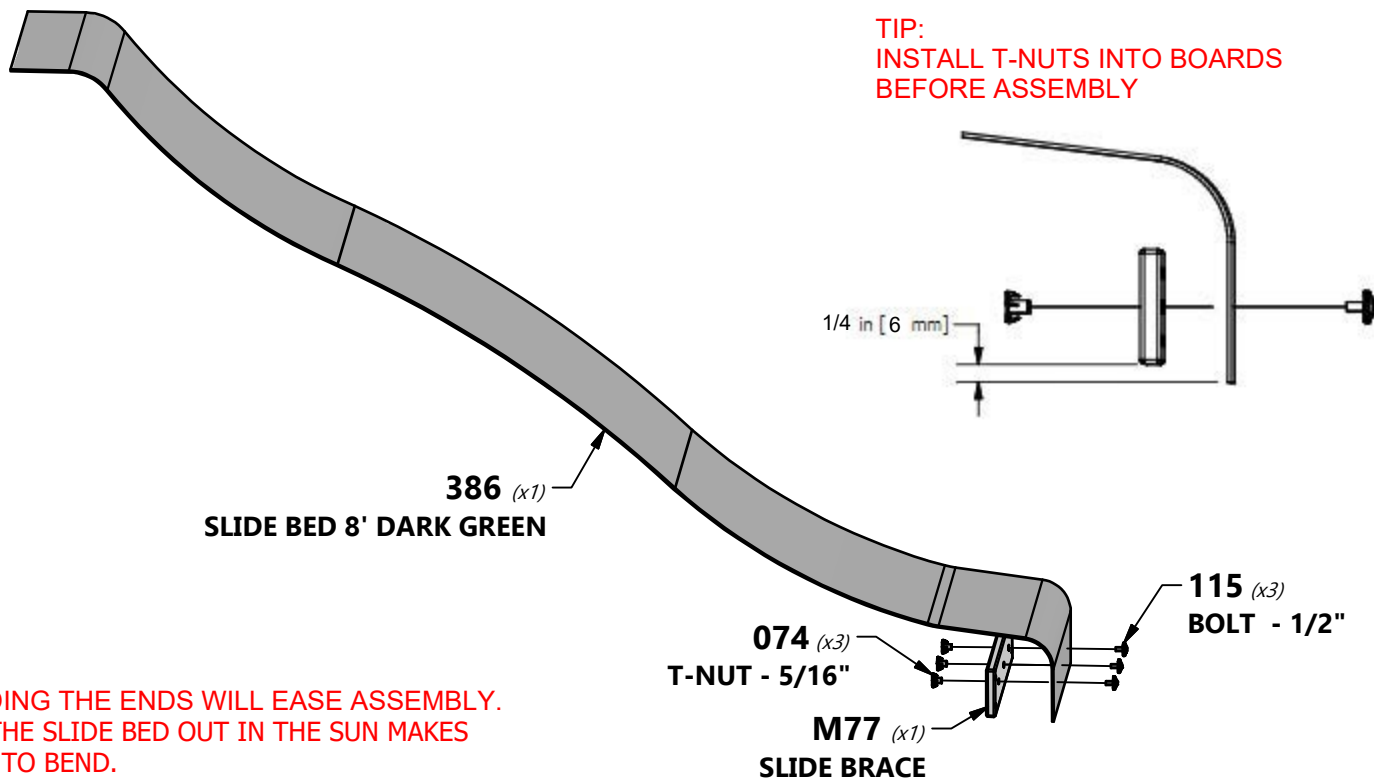


TIP:
PREBENDING THE ENDS WILL EASE ASSEMBLY.
PLACING THE SLIDE BED OUT IN THE SUN
MAKES IT EASIER TO BEND.

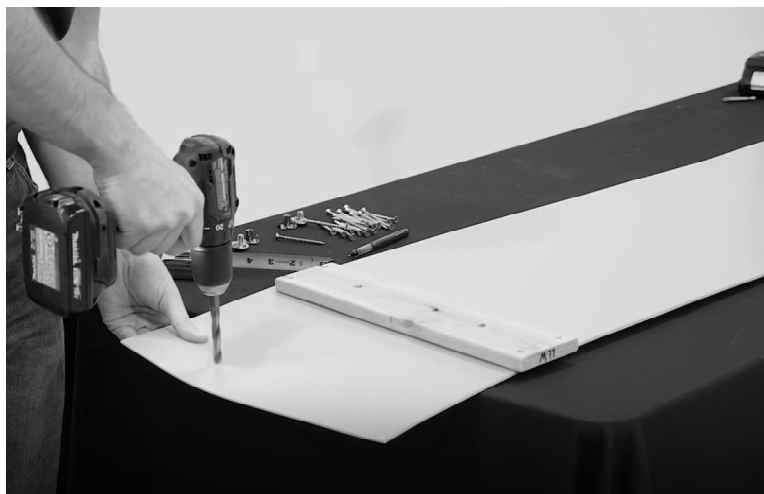



SLIDE ASSEMBLY

STEP 2



M78 | CENTER SLIDE BRACE - W4L08749
(x2) 5/8"x3 3/8"x17 1/4" (16x86x438)



A100054 | SLIDE RAIL 8' GREEN RIGHT
(x1)



A100055 | SLIDE RAIL 8' GREEN LEFT
(x1)



H100090 | SCREW PFH
(x24) 8x2-1/2

NOTE:

PLACE THE SLIDE RAIL ON FLAT SURFACE. STARTING AT THE BOTTOM, INSERT THE SLIDE BED INTO THE CHANNEL ON THE INSIDE OF THE RAIL. HOLD THE SLIDE BED IN PLACE WHILE A HELPER BENDS THE SLIDE BED INTO THE CHANNEL. MAKE SURE THE SLIDE BED IS COMPLETELY INSERTED INTO THE CHANNEL.


INSERT THE TWO CENTER SLIDE BRACES INTO THEIR RESPECTIVE LOCATIONS. SECURE THE SLIDE BED AND CENTER USING THE PROVIDED HARDWARE.

USING A 1/8" DRILL BIT, DRILL PILOT HOLES IN EACH INDENTATION ALONG EACH SIDE RAIL. THERE SHOULD BE 12 INDENTIONS ON EACH RAIL.

REPEAT THIS PROCESS FOR THE OPPOSITE SLIDE RAIL.



FAILURE TO INSERT SLIDE BED PROPERLY MAY RESULT IN INJURY OR AMPUTATION. EXPOSED SLIDE EDGES CAN BE SHARP AND BECOME A LACERATION HAZARD IF THE SLIDE IS NOT PROPERLY ASSEMBLED.

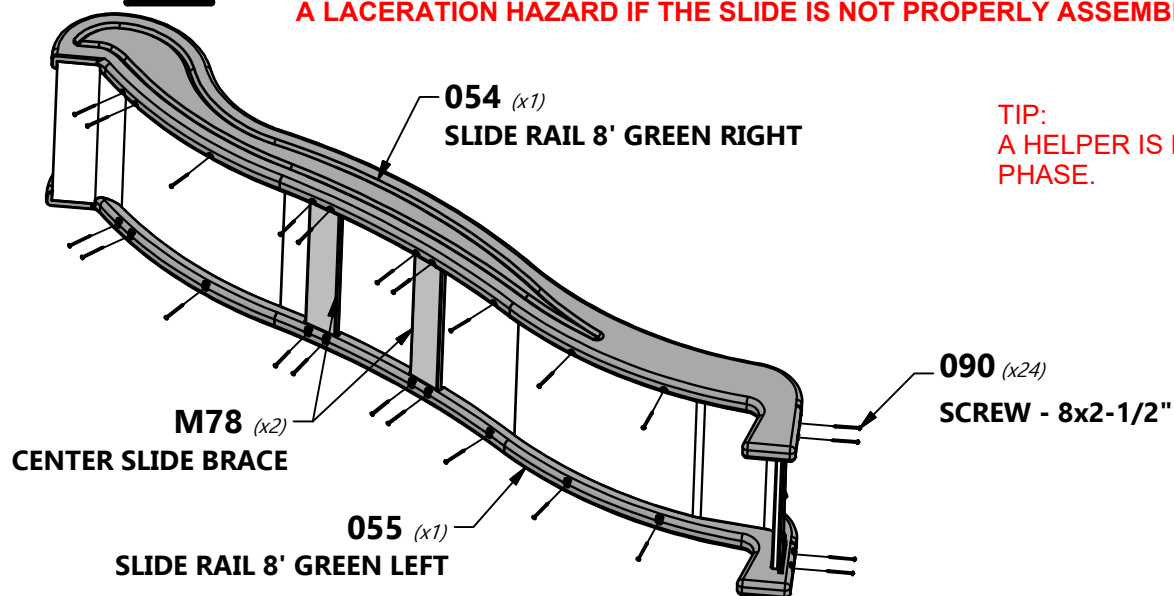

TIP:
A HELPER IS REQUIRED FOR THIS PHASE.





LADDER ASSEMBLY

STEP 1




E74 | LEFT UPRIGHT - W4L13775
(x1) | 1 3/8"x3 3/8"x50 3/4" (36x86x1290)




H81 | LADDER RUNG - W4L13778
(x4) | 1"x3 3/8"x17 1/8" (24x86x434)



H100111 | SCREW PFH
(x8) | 8x2

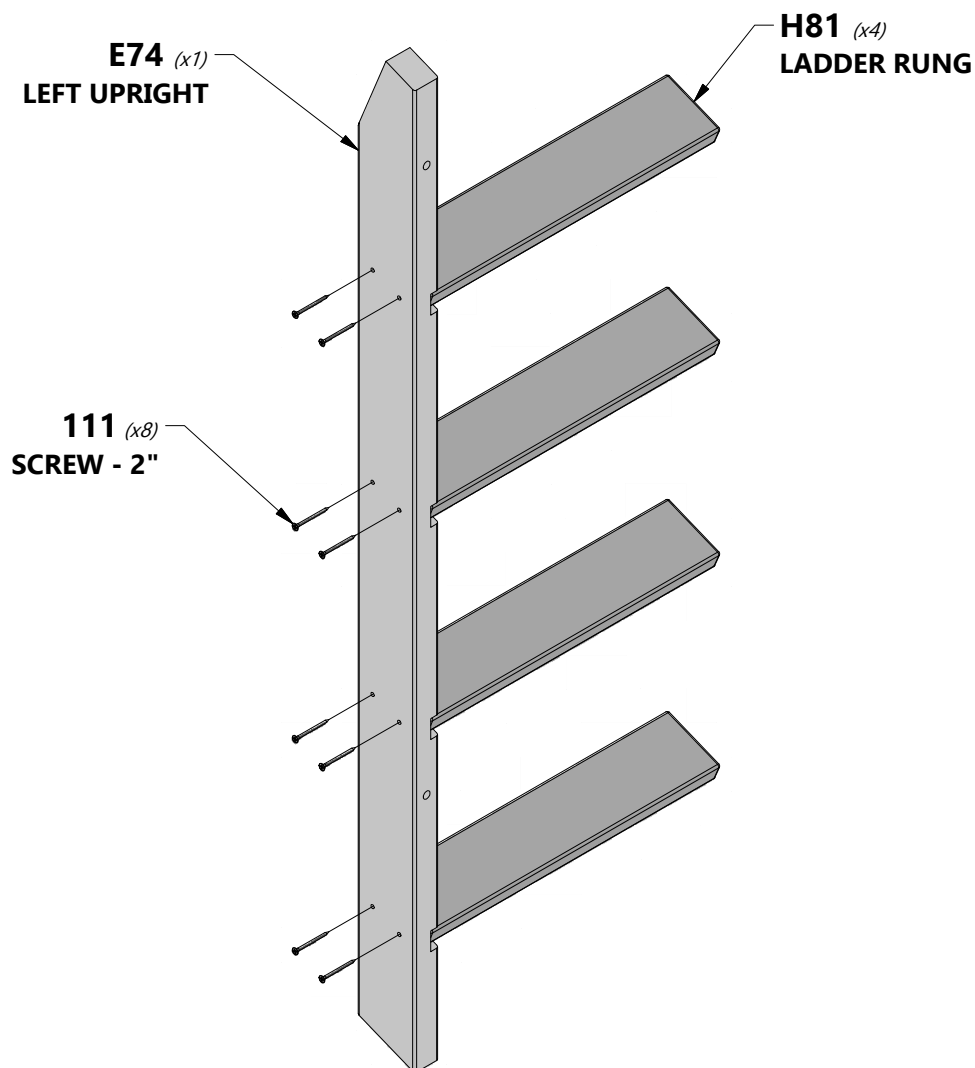




E75 | **RIGHT UPRIGHT - W4L13776**
(x1) | 1 3/8"x3 3/8"x50 3/4" (36x86x1290)




H100111 | **SCREW PFH**
(x8) | 8x2



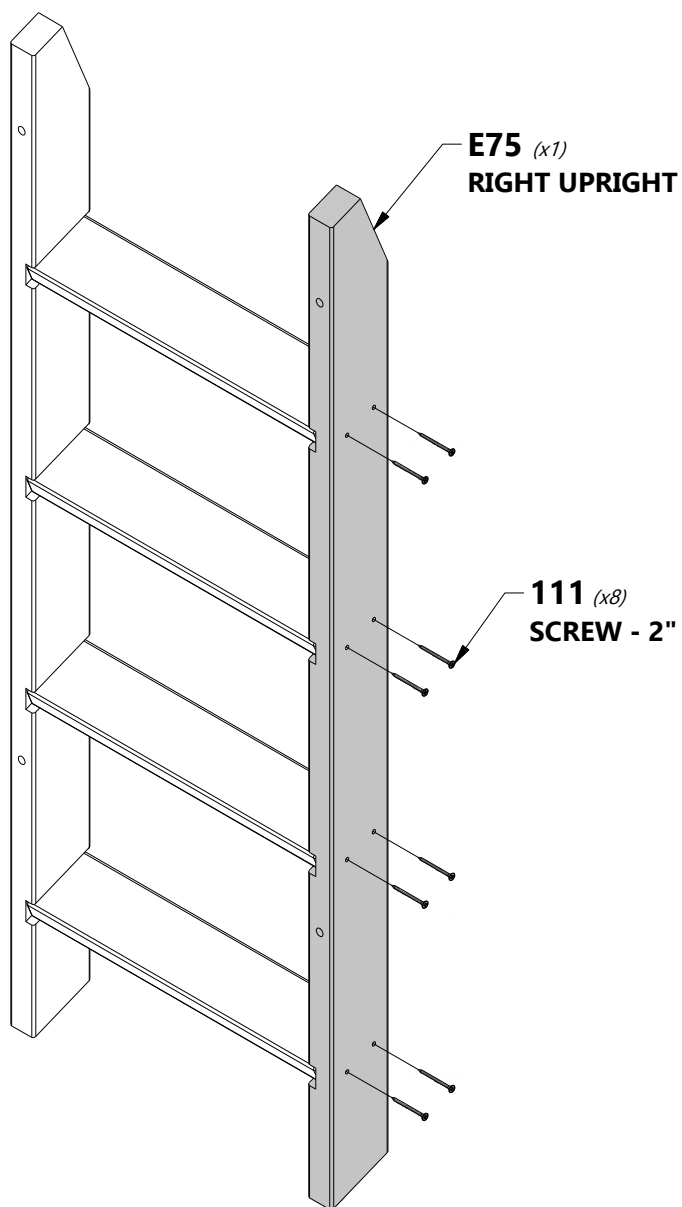


M103 REAR SUPPORT - W4L13777
(x1) 5/8"x3 3/8"x19" (16x86x482)

M102 ATTACHMENT BOARD - W4L13779
(x1) 5/8"x3 3/8"x19" (16x86x482)


H100086 SCREW PFH
(x8) 8x1 1/2

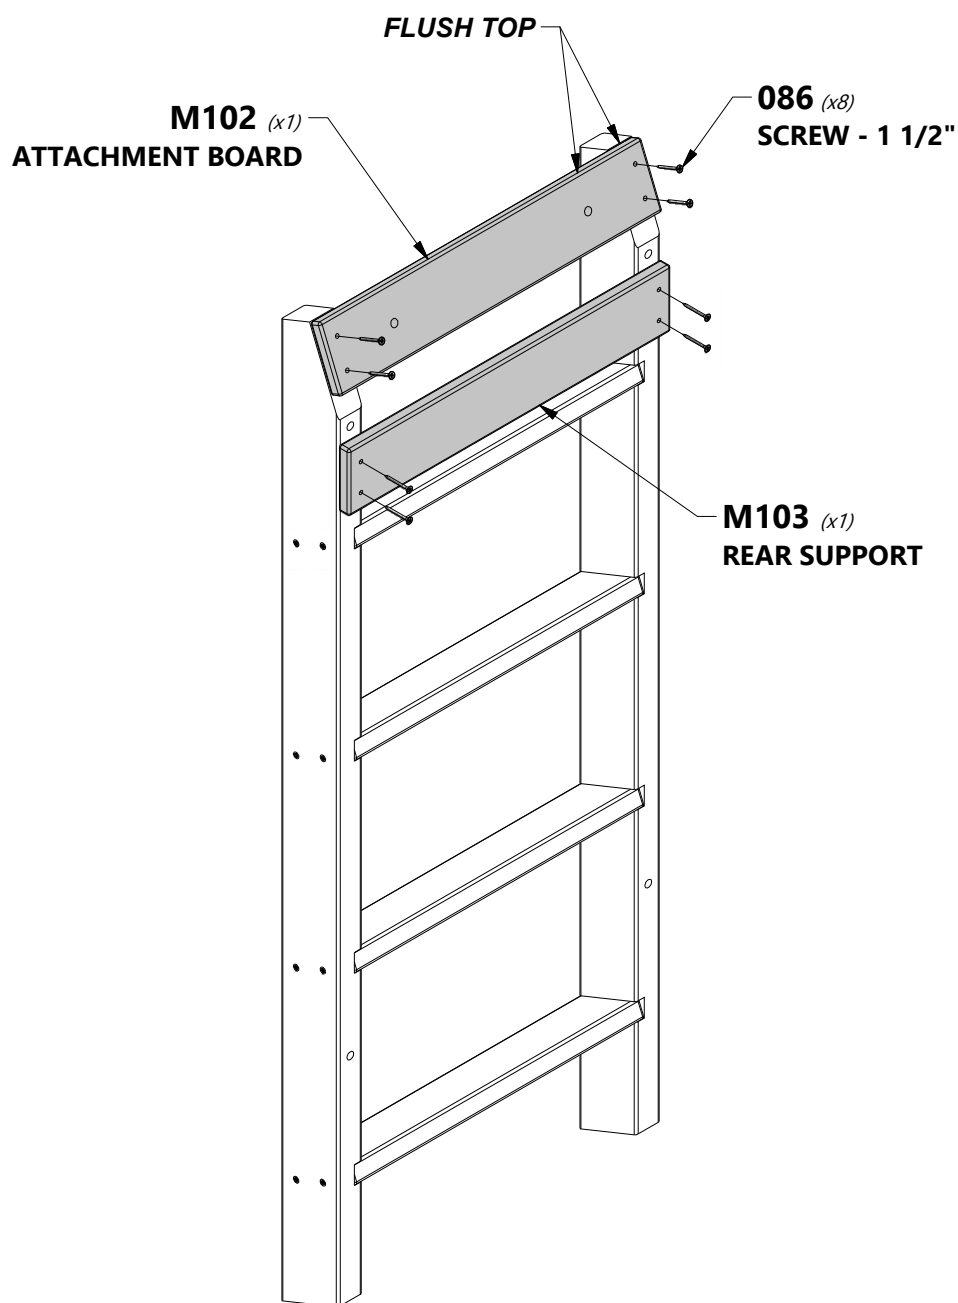


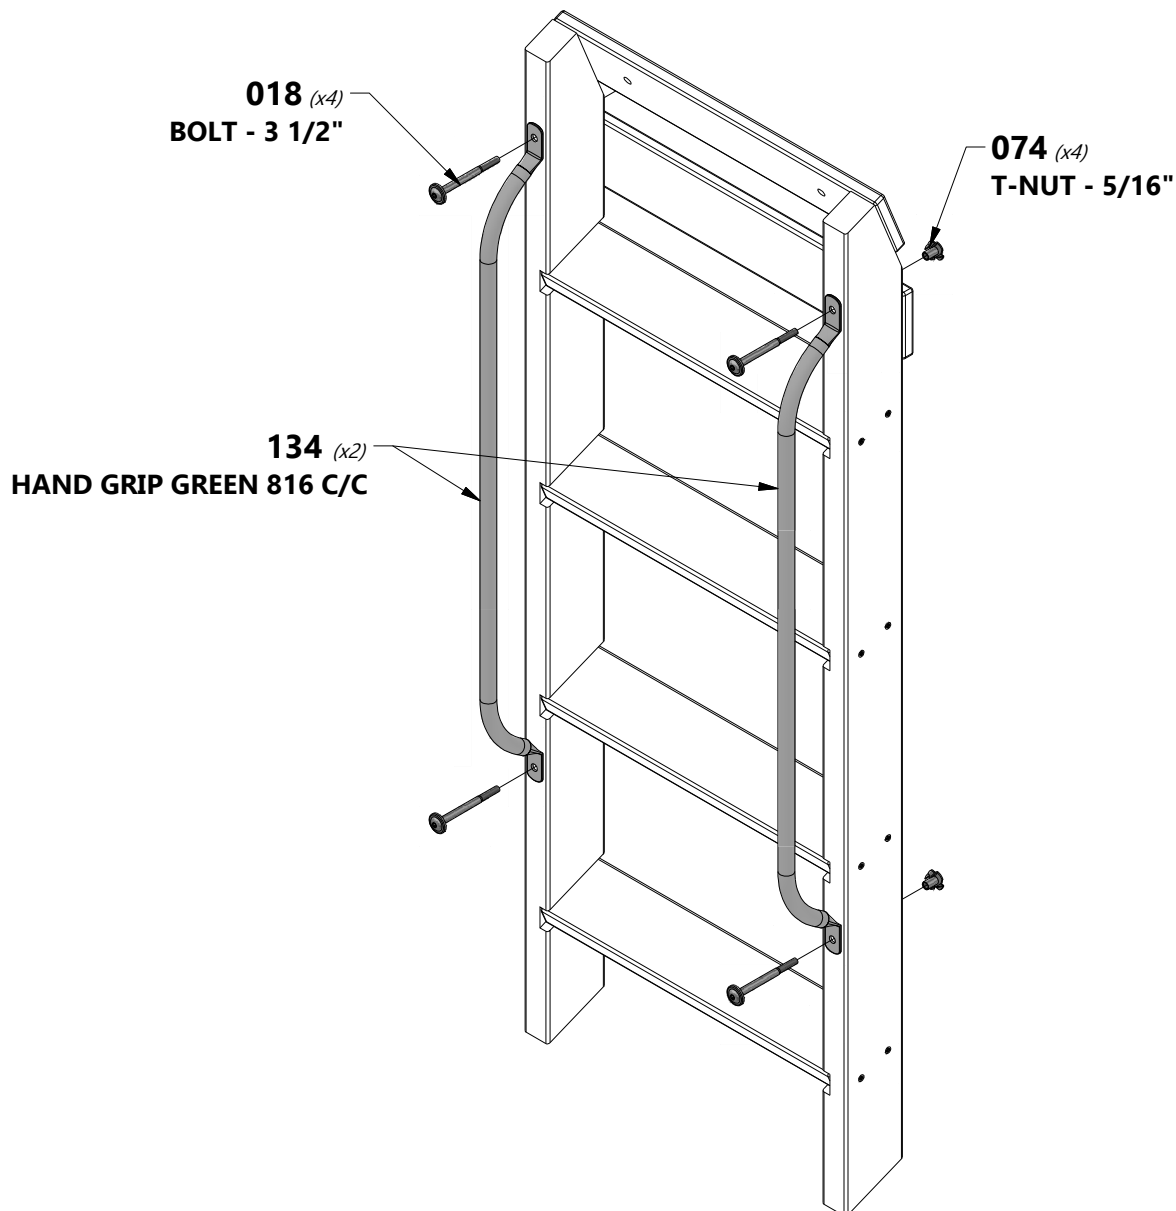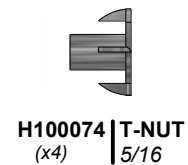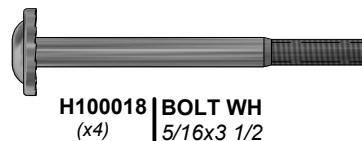




SWING BEAM


STEP 1



SB74 | SWING BEAM 2 POSITION - W4L13780
(x1) | 2"x5 1/4"x68 3/4" (50x134x1745)



A100325 | SWING BEAM
EXTENSION
BRACKET-LEFT
(x1)




A100326 | SWING BEAM
EXTENSION
BRACKET-RIGHT
(x1)



A100140 | L BRACKET
(x2) | 66x66x127



H100047 | BOLT HEX
(x2) | 5/16x2 3/4




H100105 | WASHER FLAT
(x4) | 8x27




H100110 | NUT LOCK
(x2) | 5/16



H100011 | BOLT WH
(x3) | 5/16x1 3/4




H100005 | NUT BARREL WH
(x3) | 5/16x7/8

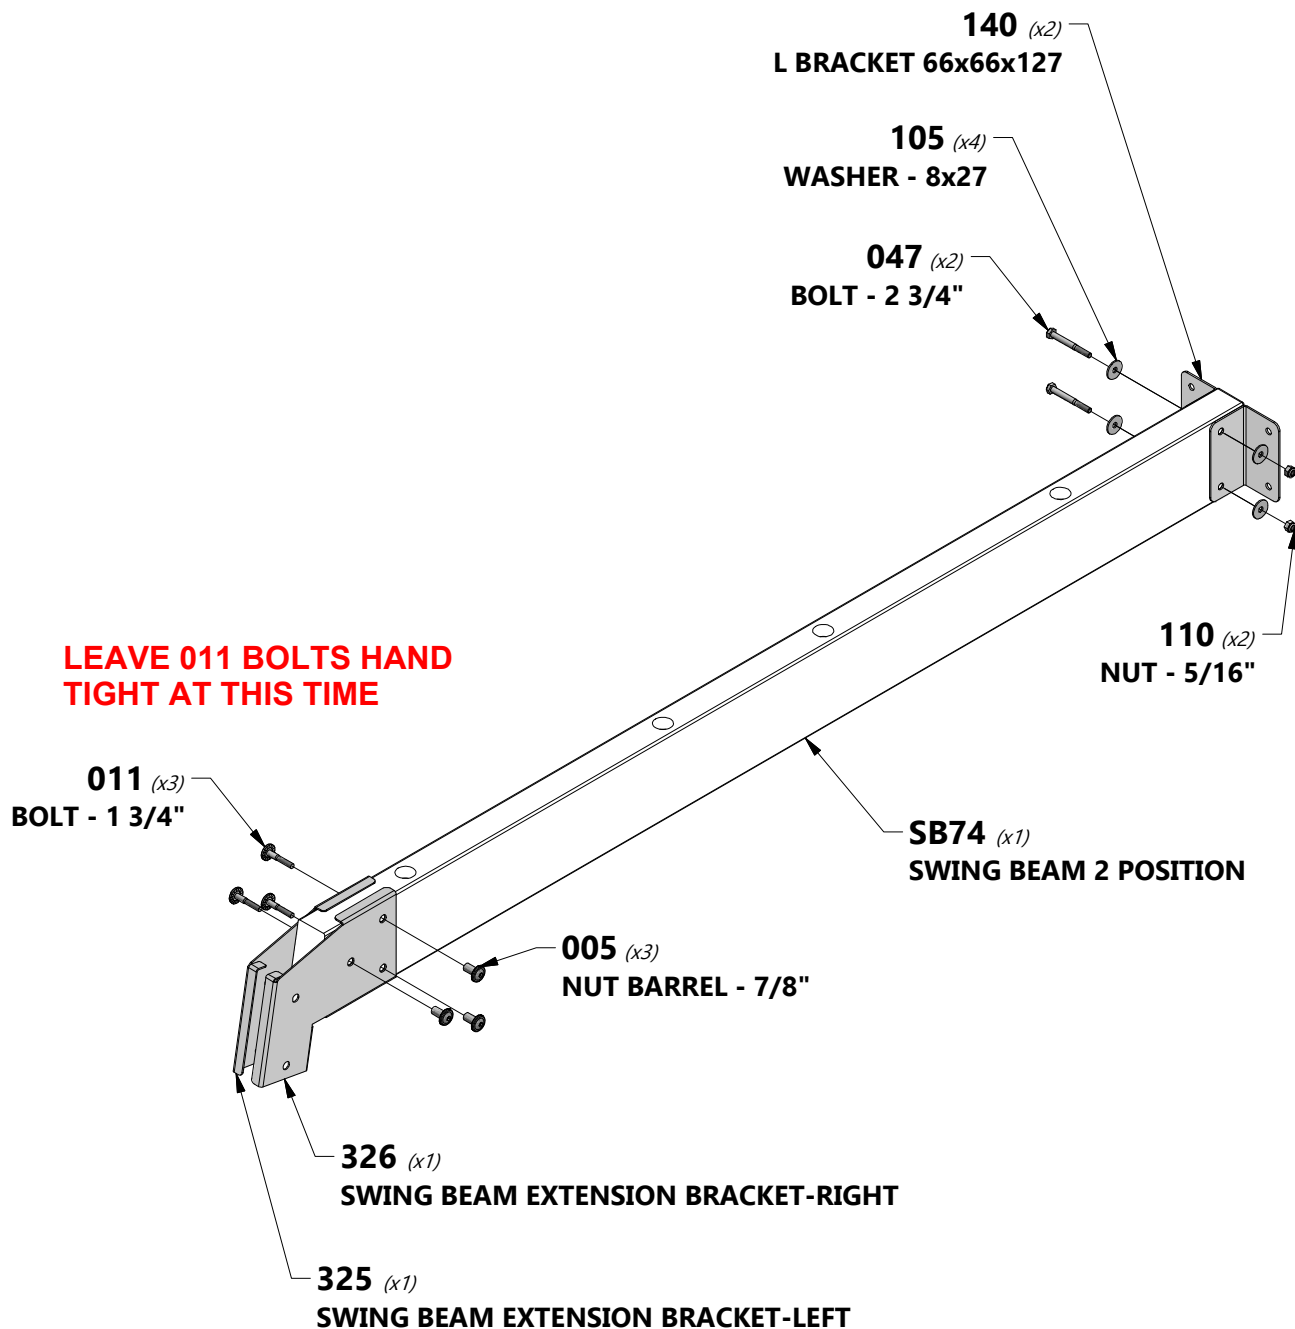




SWING BEAM


STEP 2



H100099 | SWING HANGER
(x4) 5/16x9 1/2

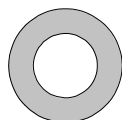



H100103 | WASHER SAFETY
(x4) 17x30



H100105 | WASHER FLAT
(x4) 8x27





H100110 | NUT LOCK
(x4) 5/16

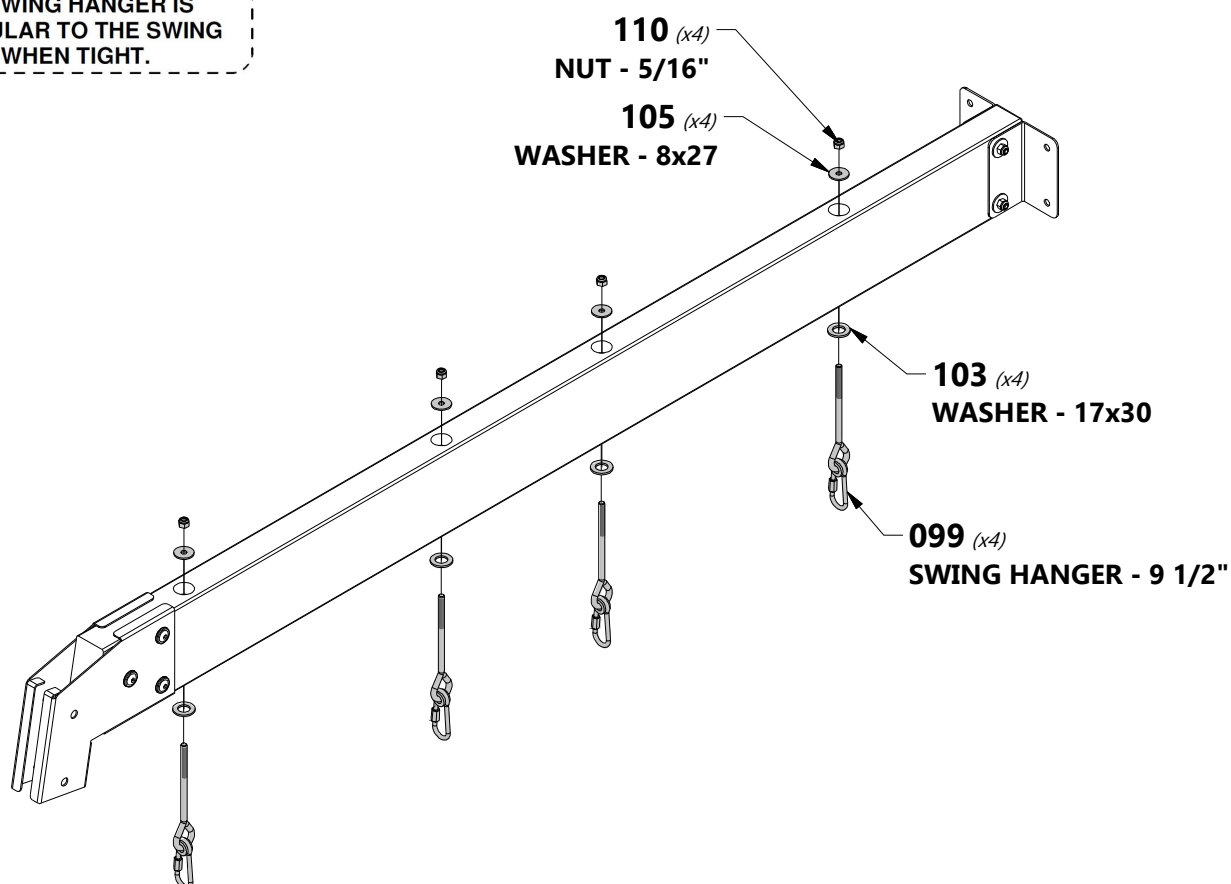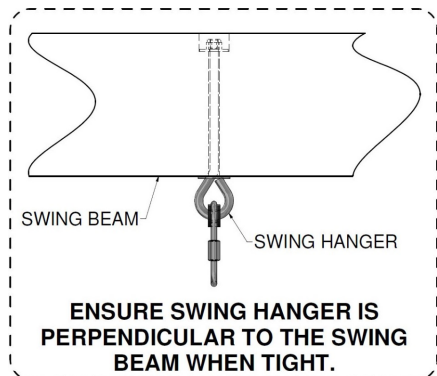




SWING BEAM


STEP 3

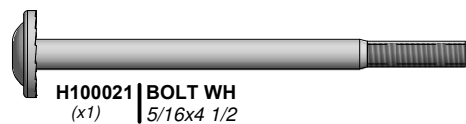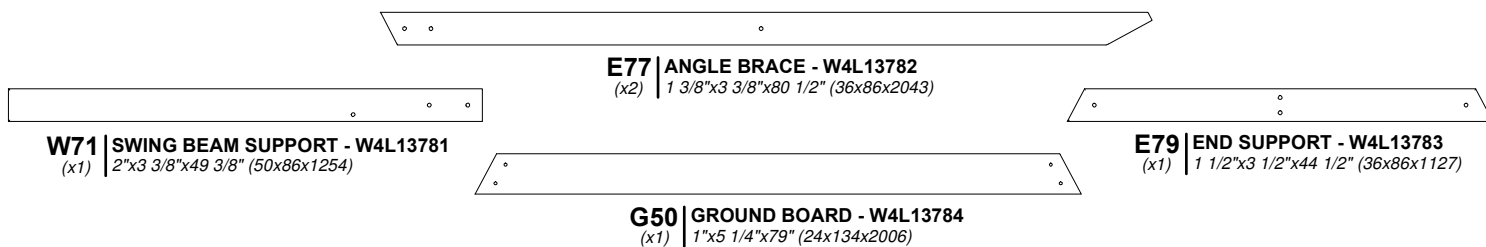

H100021 | BOLT WH
(x1) | 5/16x4 1/2

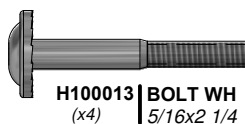


H100013 | BOLT WH
(x4) | 5/16x2 1/4

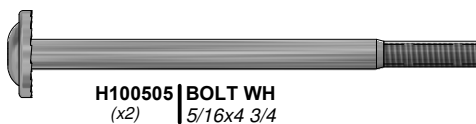

H100505 | BOLT WH
(x2) | 5/16x4 3/4



H100074 | T-NUT
(x8) | 5/16




H100015 | BOLT WH
(x2) | 5/16x2 3/4




H100031 | WASHER LOCK EXT
(x1) | 12x19



H100030 | WASHER LOCK EXT
(x9) | 8x19



H100005 | NUT BARREL WH
(x1) | 5/16x7/8

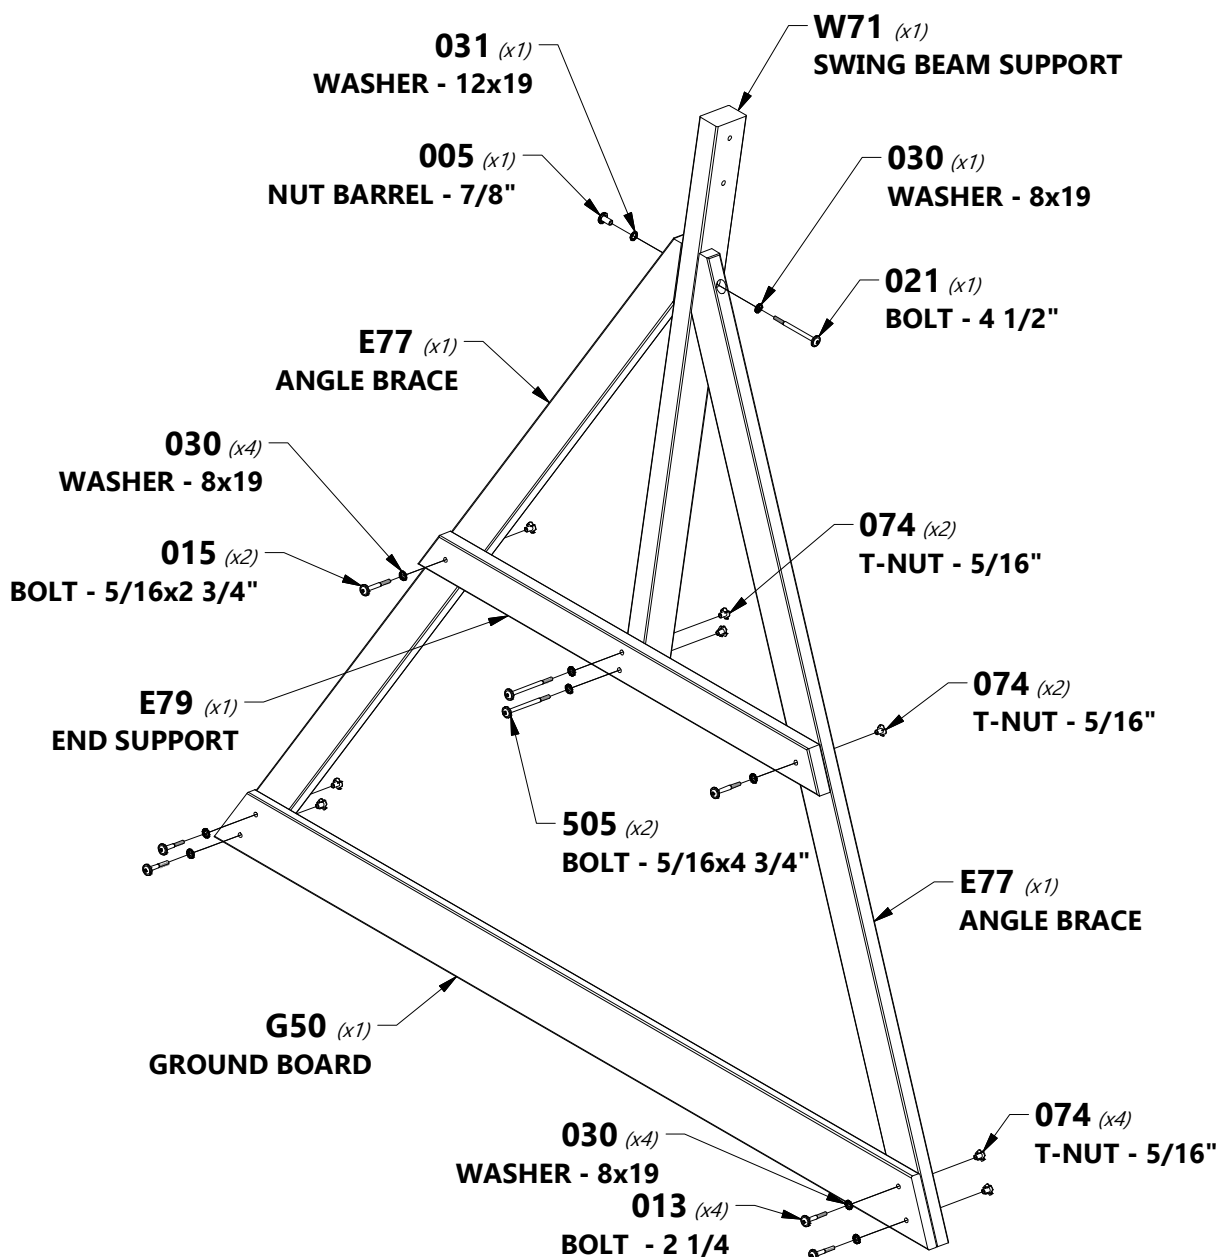




SWING BEAM

STEP 4

SWING BEAM SUB ASSEMBLY
(FROM STEP 2)




H100011 | BOLT WH
(x2) | 5/16x1 3/4




H100005 | NUT BARREL WH
(x2) | 5/16x7/8

'A' FRAME SUB ASSEMBLY
(FROM STEP 3)

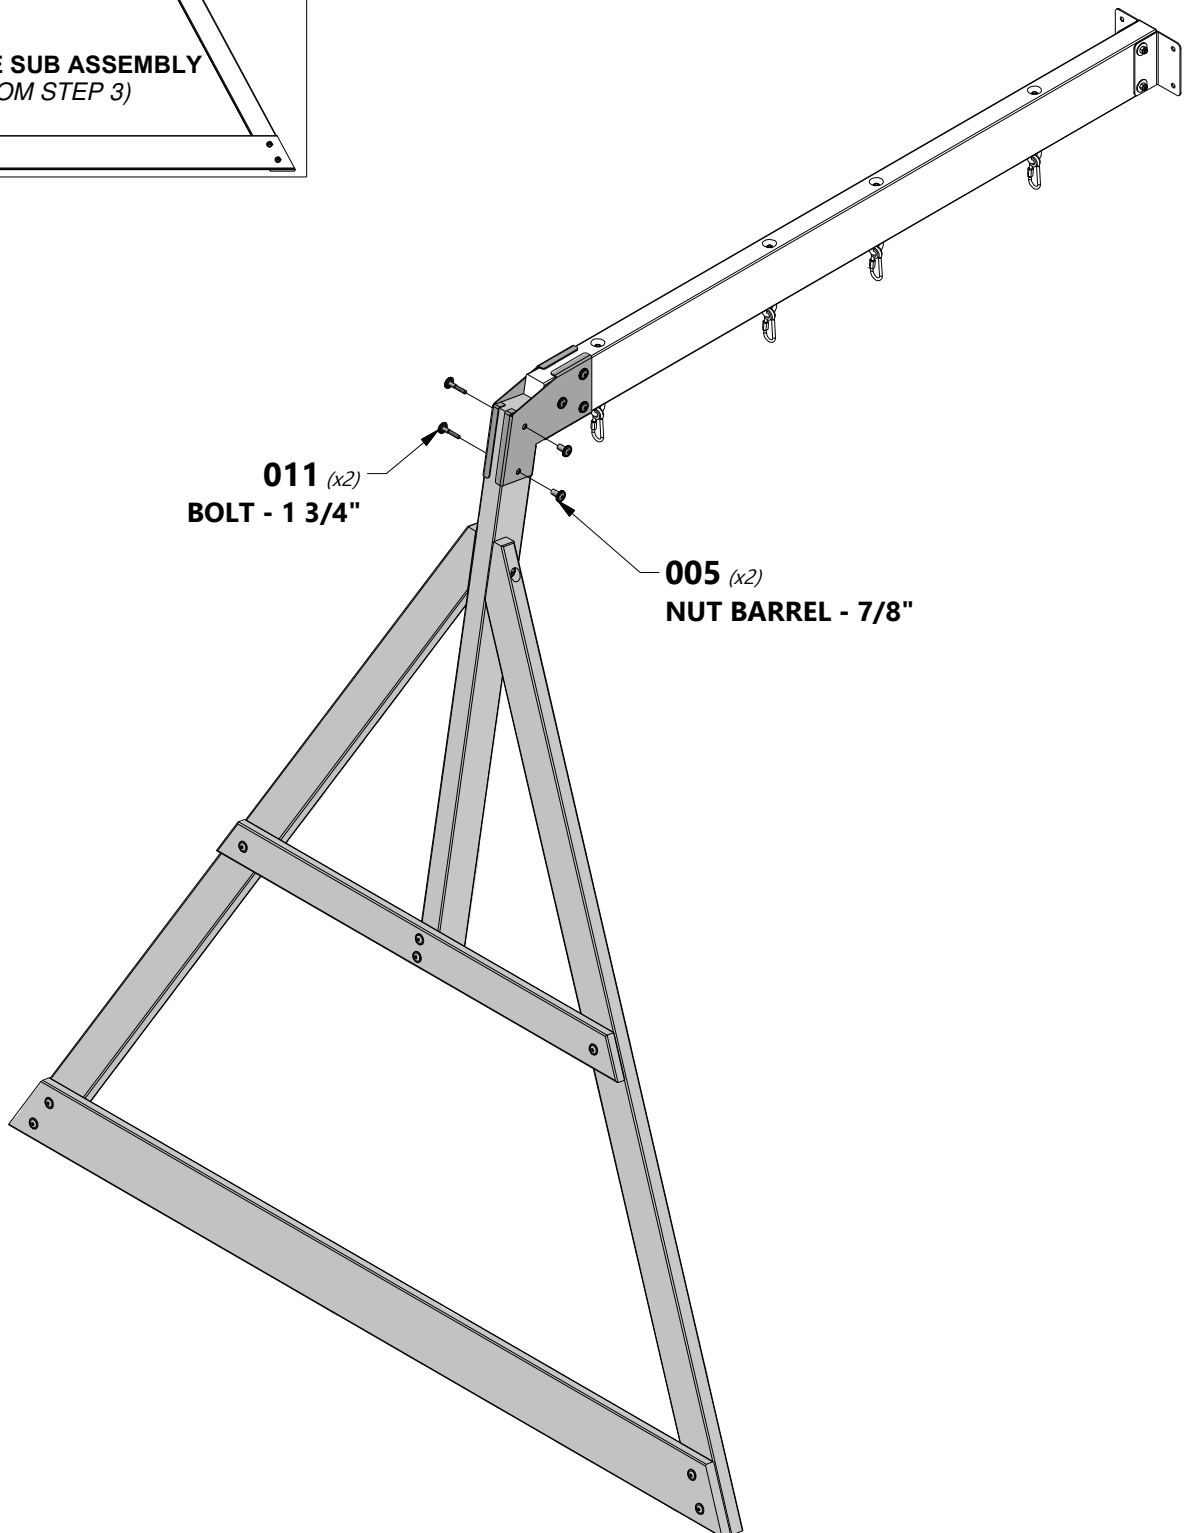


011 (x2)
BOLT - 1 3/4"

005 (x2)
NUT BARREL - 7/8"



B1 | UPRIGHT POST ASSEMBLY - W2A02851
(x1) | 3"x3"x89 1/2" (76x76x2274)



B4 | UPRIGHT POST - W4L13770
(x1) | 3"x3"x89 1/2" (76x76x2274)




H100074 | T-NUT
(x16) | 5/16




TIP:

1. FOR EASE OF ASSEMBLY WE RECOMMEND USING SAW HORSES TO ASSEMBLE FORT WALLS.
2. WE RECOMMEND INSTALLING T-NUTS INTO BOARDS BEFORE ASSEMBLY.

**NOTE PILOT HOLE LOCATION
FOR PROPER ORIENTATION
OF THE POST.**

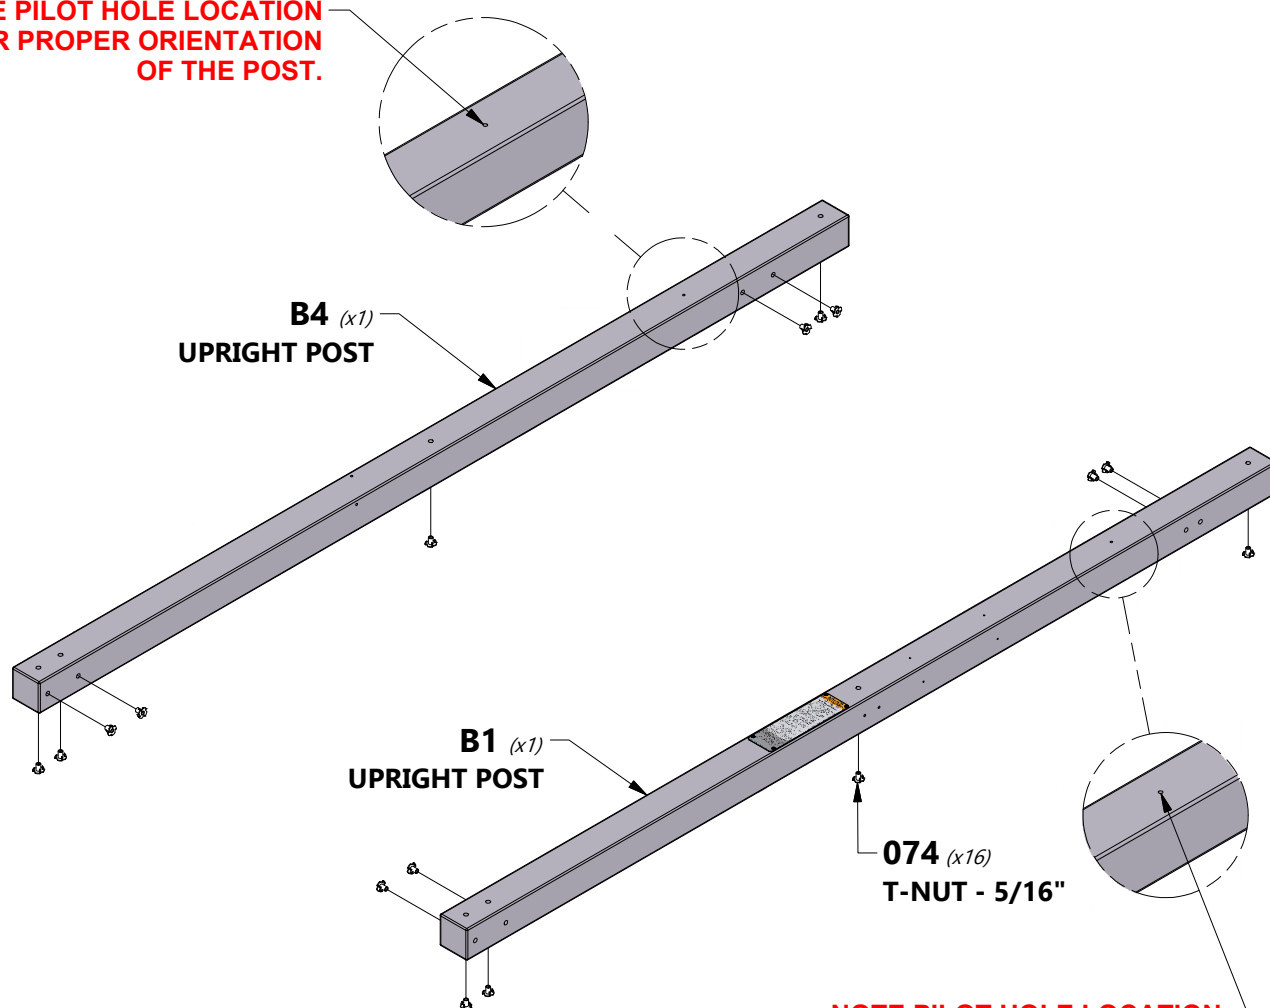


**NOTE PILOT HOLE LOCATION
FOR PROPER ORIENTATION
OF THE POST.**



H2 FLOOR SUPPORT - W4L13772
(x1) 1"x3 3/8"x52 1/8" (24x86x1324)



H8 ROOF RAIL - W4L13765
(x1) 1"x3 3/8"x83 7/8" (24x86x2132)




H13 ARCHED RAIL - W4L13774
(x1) 1"x3 3/8"x50 7/8" (24x86x1292)



K1 GROUND BOARD - W4L07122
(x1) 5/8"x5 1/4"x74 1/4" (16x134x1888)


ASSEMBLE T-NUT INTO ONLY (1) H12 DECK BRACE.

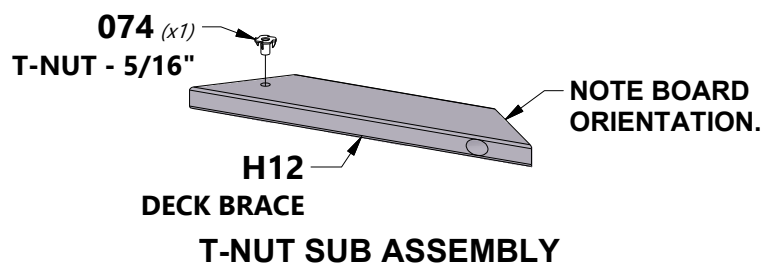


TIP:
INSTALL T-NUTS IN WOOD FIRST



H100019 BOLT WH
(x4) 5/16x3 3/4




H100018 BOLT WH
(x4) 5/16x3 1/2



H100011 BOLT WH
(x2) 5/16x1 3/4



H100028 LAG SCREW WH
(x2) 5/16x2 1/2



H100146 LAG SCREW WH
(x2) 1/4x2





H100030 WASHER LOCK
(x12) EXT
8x19



H100074 T-NUT
(x4) 5/16



H100138 WASHER LOCK
(x2) EXT
6x15

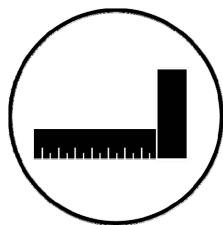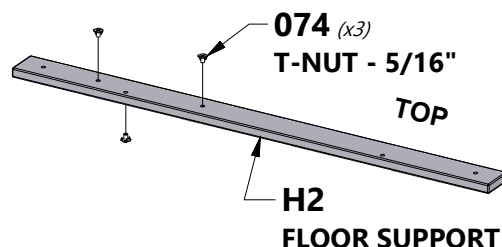

028 (x2)
LAG SCREW - 2 1/2"

030 (x2)
WASHER - 8x19

019 (x2)
BOLT - 3 3/4"

030 (x8)
WASHER - 8x19

H8 (x1)
ROOF RAIL

H13 (x1)
ARCHED RAIL

H2 (x1)
FLOOR SUPPORT

INCLUDES T-NUT

H12 (x1)
DECK BRACE

FLUSH

H12 (x1)
DECK BRACE

030 (x2)
WASHER - 8x19

011 (x2)
BOLT - 1 3/4"

019 (x2)
BOLT - 3 3/4"

NO T-NUT
IN BRACE.

146 (x2)
LAG SCREW - 2"


138 (x2)
WASHER - 6x15

018 (x4)
BOLT - 3 1/2"


B1

K1 (x1)
GROUND BOARD

B4

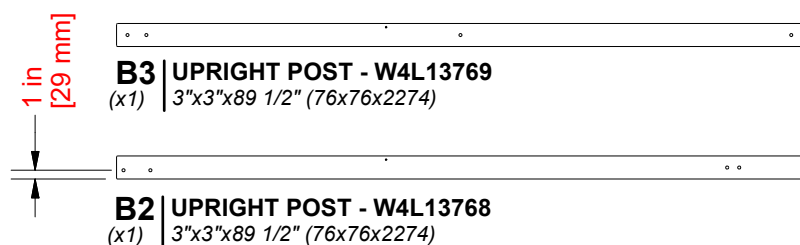

H100074 T-NUT
(x16) 5/16"

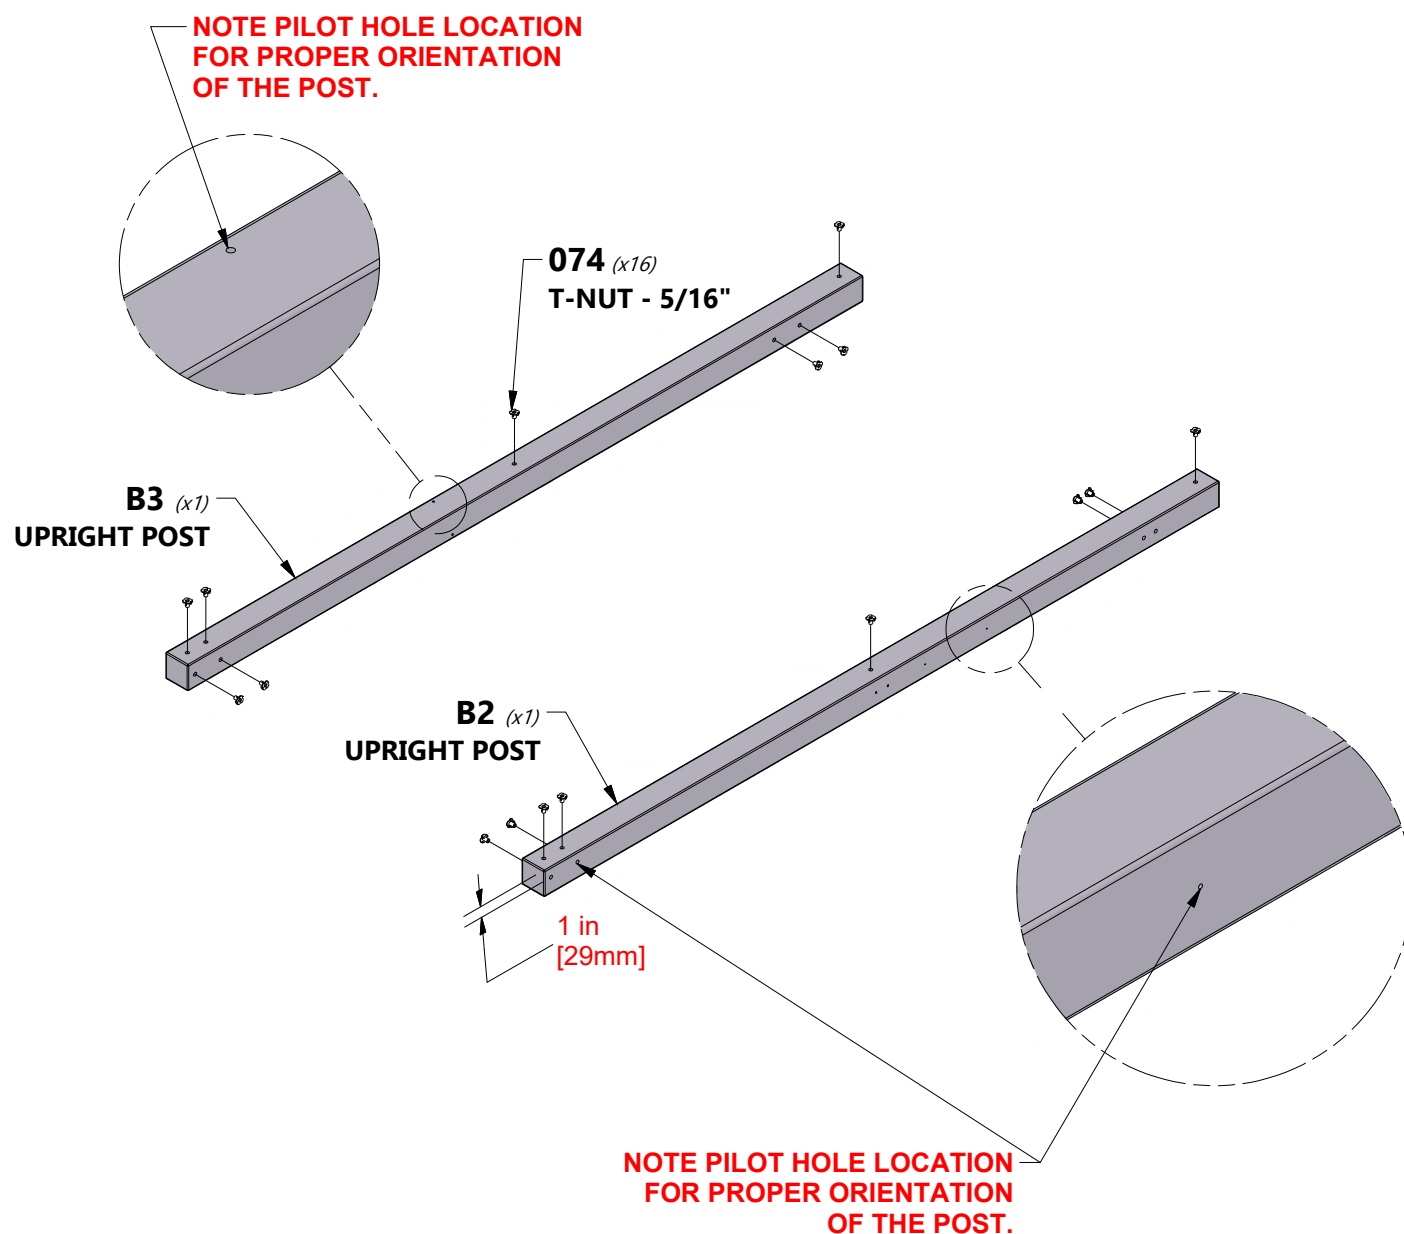




H3 | FLOOR SUPPORT - W4L13773
(x1) | 1"x3 3/8"x52 1/8" (24x86x1324)



H8 | ROOF RAIL - W4L13765
(x1) | 1"x3 3/8"x83 7/8" (24x86x2132)



K3 | GROUND BOARD - W4L07124
(x1) | 5/8"x5 1/4"x50 1/8" (16x134x1274)




M8 | WALL RAIL - W4L07145
(x2) | 5/8"x3 3/8"x50 7/8" (16x86x1292)




H12 | DECK BRACE - W4L13771
(x2) | 1"x3 3/8"x15 7/8" (24x86x402)




H100019 | BOLT WH
(x4) | 5/16x3 3/4




H100018 | BOLT WH
(x4) | 5/16x3 1/2




H100011 | BOLT WH
(x2) | 5/16x1 3/4



H100027 | LAG SCREW WH
(x4) | 5/16x2



H100146 | LAG SCREW WH
(x2) | 1/4x2





H100030 | WASHER LOCK
(x14) | EXT
8x19



H100074 | T-NUT
(x2) | 5/16





H100138 | WASHER LOCK
(x2) | EXT
6x15

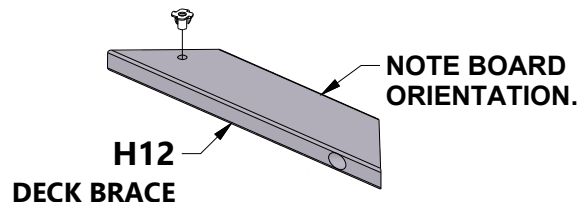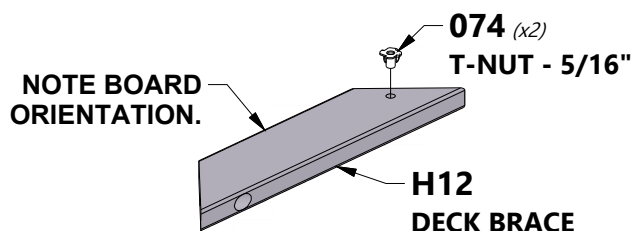


T-NUT SUB ASSEMBLY

TIP:
INSTALL T-NUTS IN WOOD FIRST

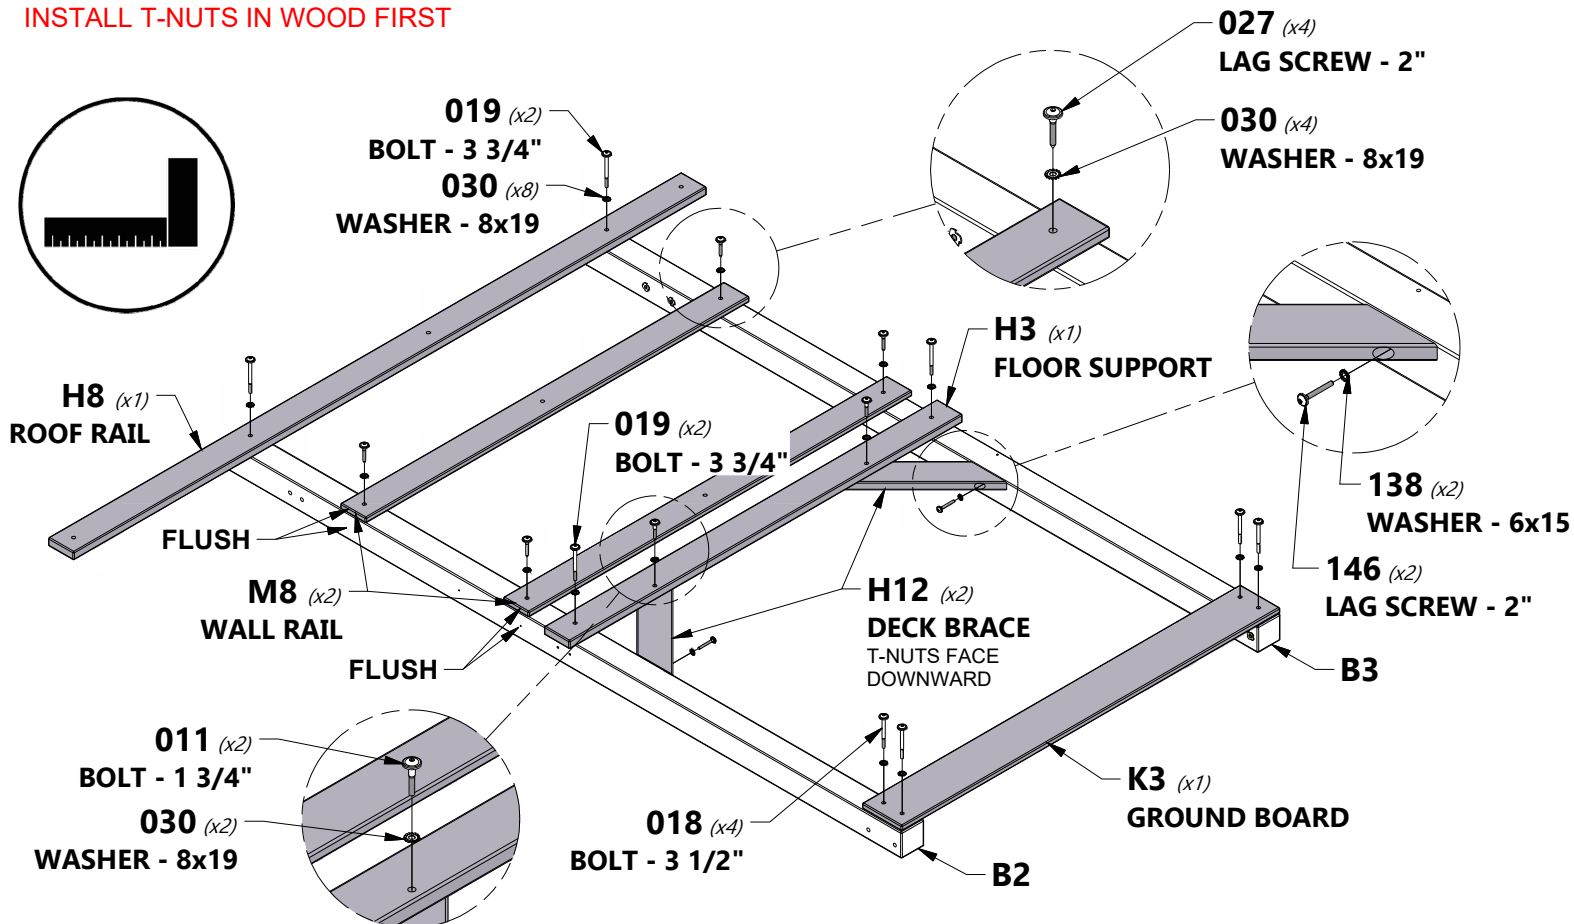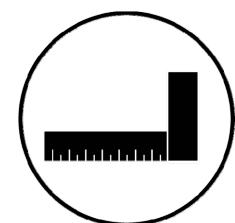




STEP 5



G2 | **WALL RAIL - W4L07153**
(x1) 1"x5 1/4"x48 7/8" (24x134x1243)



H5 | FLOOR SUPPORT - W4L07131
(x1) 1"x3 3/8"x48 7/8" (24x86x1243)




K2 | GROUND BOARD - W4L07123
(x1) 5/8"x5 1/4"x89 3/8" (16x134x2270)




M9 | **WALL RAIL - W4L07146**
(x3) 5/8"x3 3/8"x48 7/8" (16x86x1243)




H100019	BOLT WH
(x4)	5/16x3 3/4



H100018	BOLT WH
(x4)	5/16x3 1/2



H100028	LAG SCREW WH
(x4)	5/16x2 1/2




H100027	LAG SCREW WH
(x6)	5/16x2



H100030 | WASHER LOCK
(x18) **EXT**
8x19




H100074 | T-NUT
(x4) 5/16

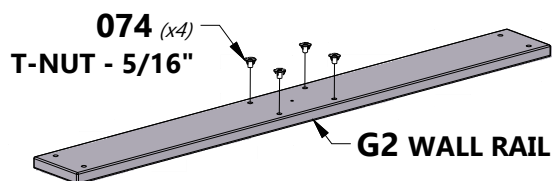


T-NUT SUB ASSEMBLY

TIP:
INSTALL T-NUTS IN WOOD FIRST

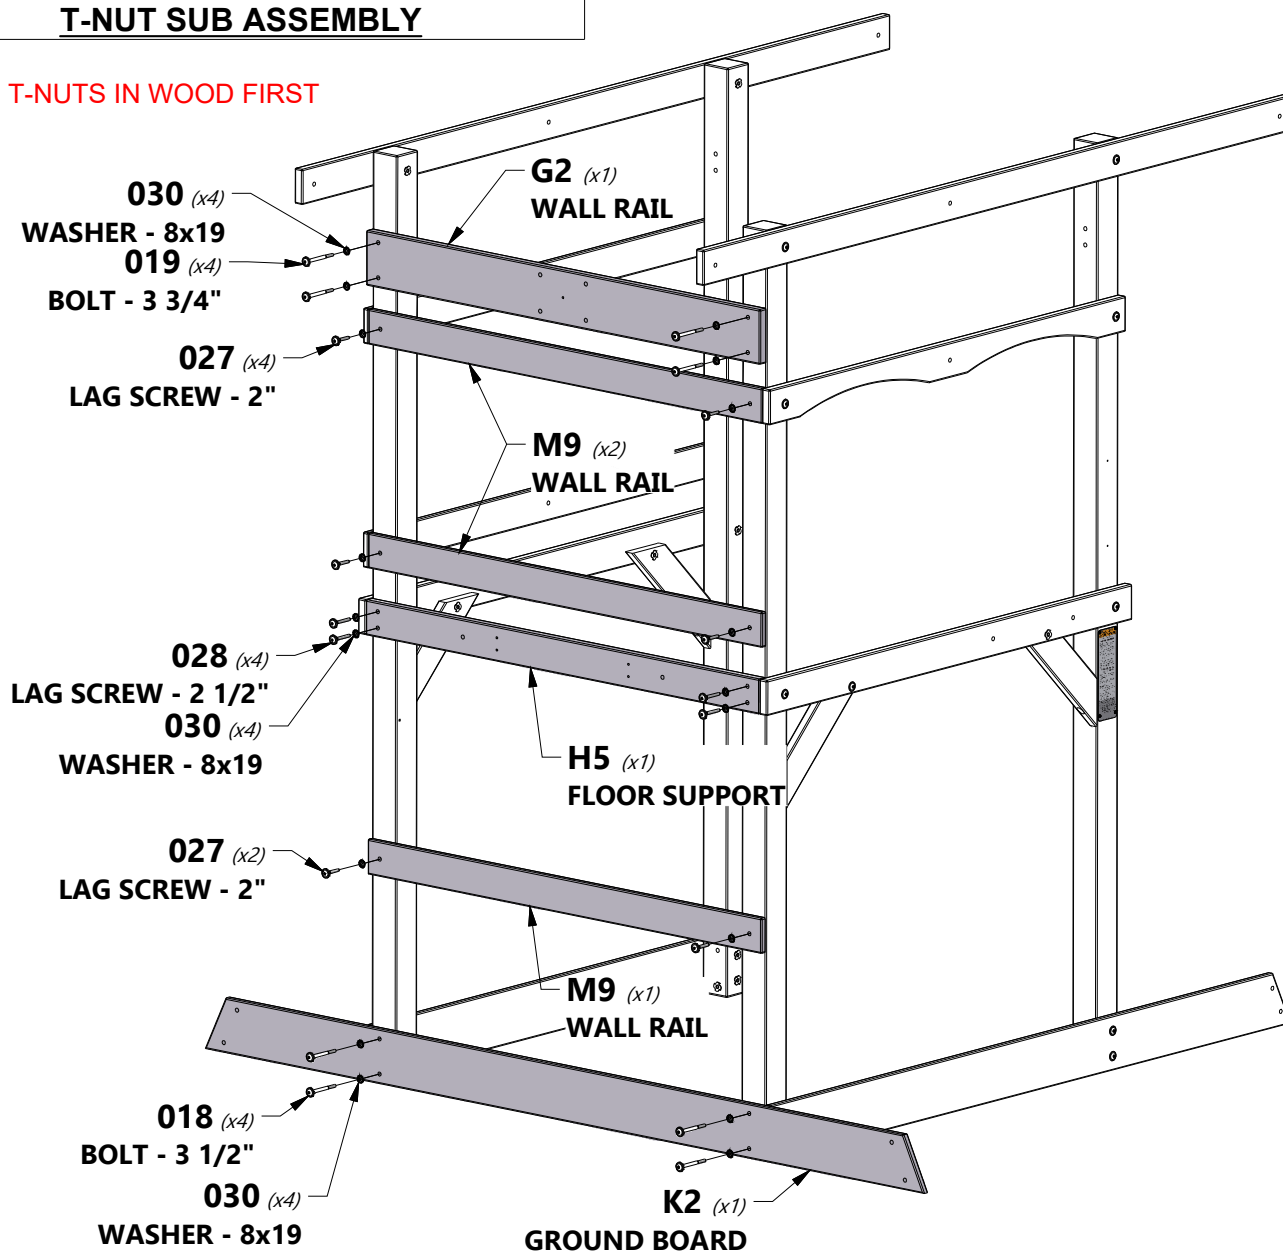




G1 | GROUND BOARD - W4L13582
(x1) 1"x5 1/4"x79 1/8" (24x134x2010)




H4 | FLOOR SUPPORT - W4L07130
(x1) 1"x3 3/8"x48 7/8" (24x86x1243)

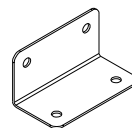


A100140 | L BRACKET 66x66x127
(x1)




W1 | SUPPORT BOARD - W4L07156
(x1) 2"x3 3/8"x78 7/8" (50x86x2005)



H100505 | BOLT WH
(x4) 5/16x4 3/4




H100020 | BOLT WH
(x2) 5/16x4




H100027 | LAG SCREW WH
(x4) 5/16x2




**H100030 | WASHER LOCK
EXT**
8x19



H100019 | BOLT WH
(x2) 5/16x3 3/4

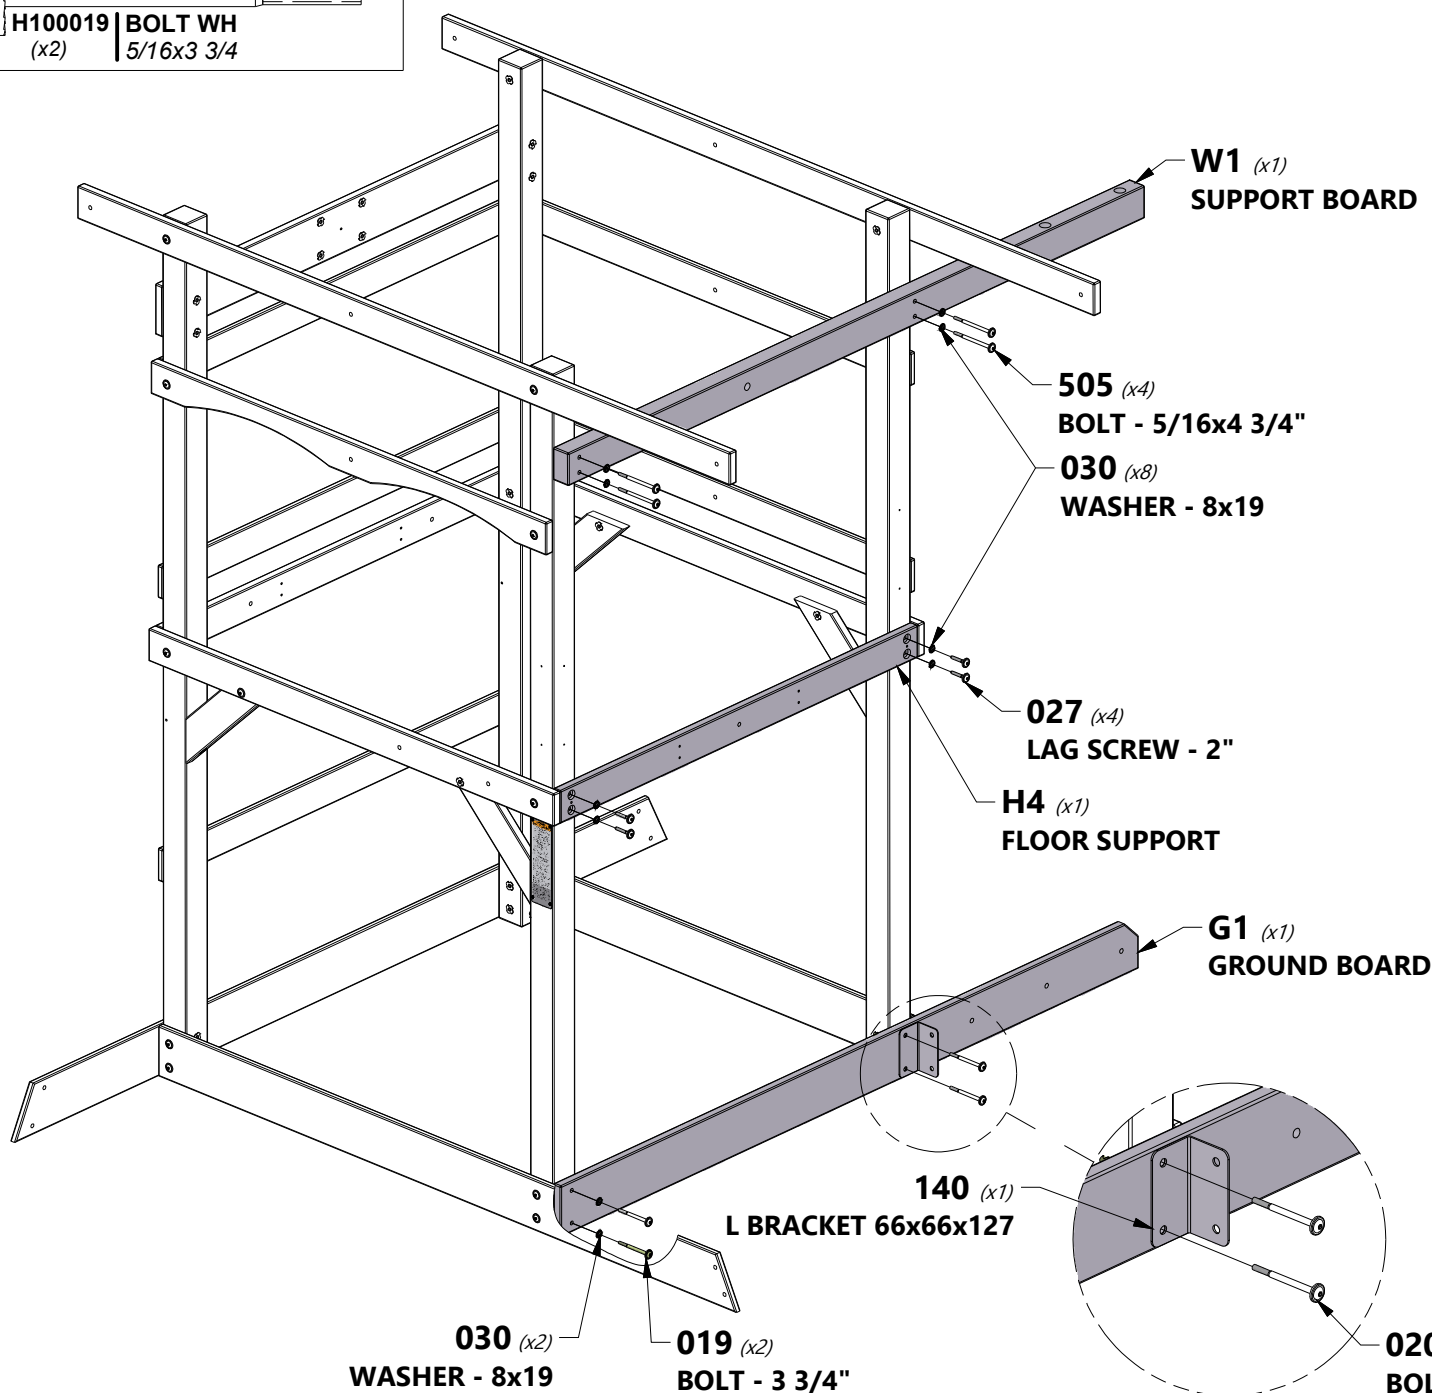



K4 | GROUND BOARD - W4L13756
(x1) | 5/8"x5 1/4"x23 1/8" (16x134x588)




H100115 | BOLT WH
(x2) | 5/16x1/2



H100031 | WASHER LOCK
(2) | EXT
12x19



H100004 | NUT BARREL WH
(x2) | 5/16 x 5/8

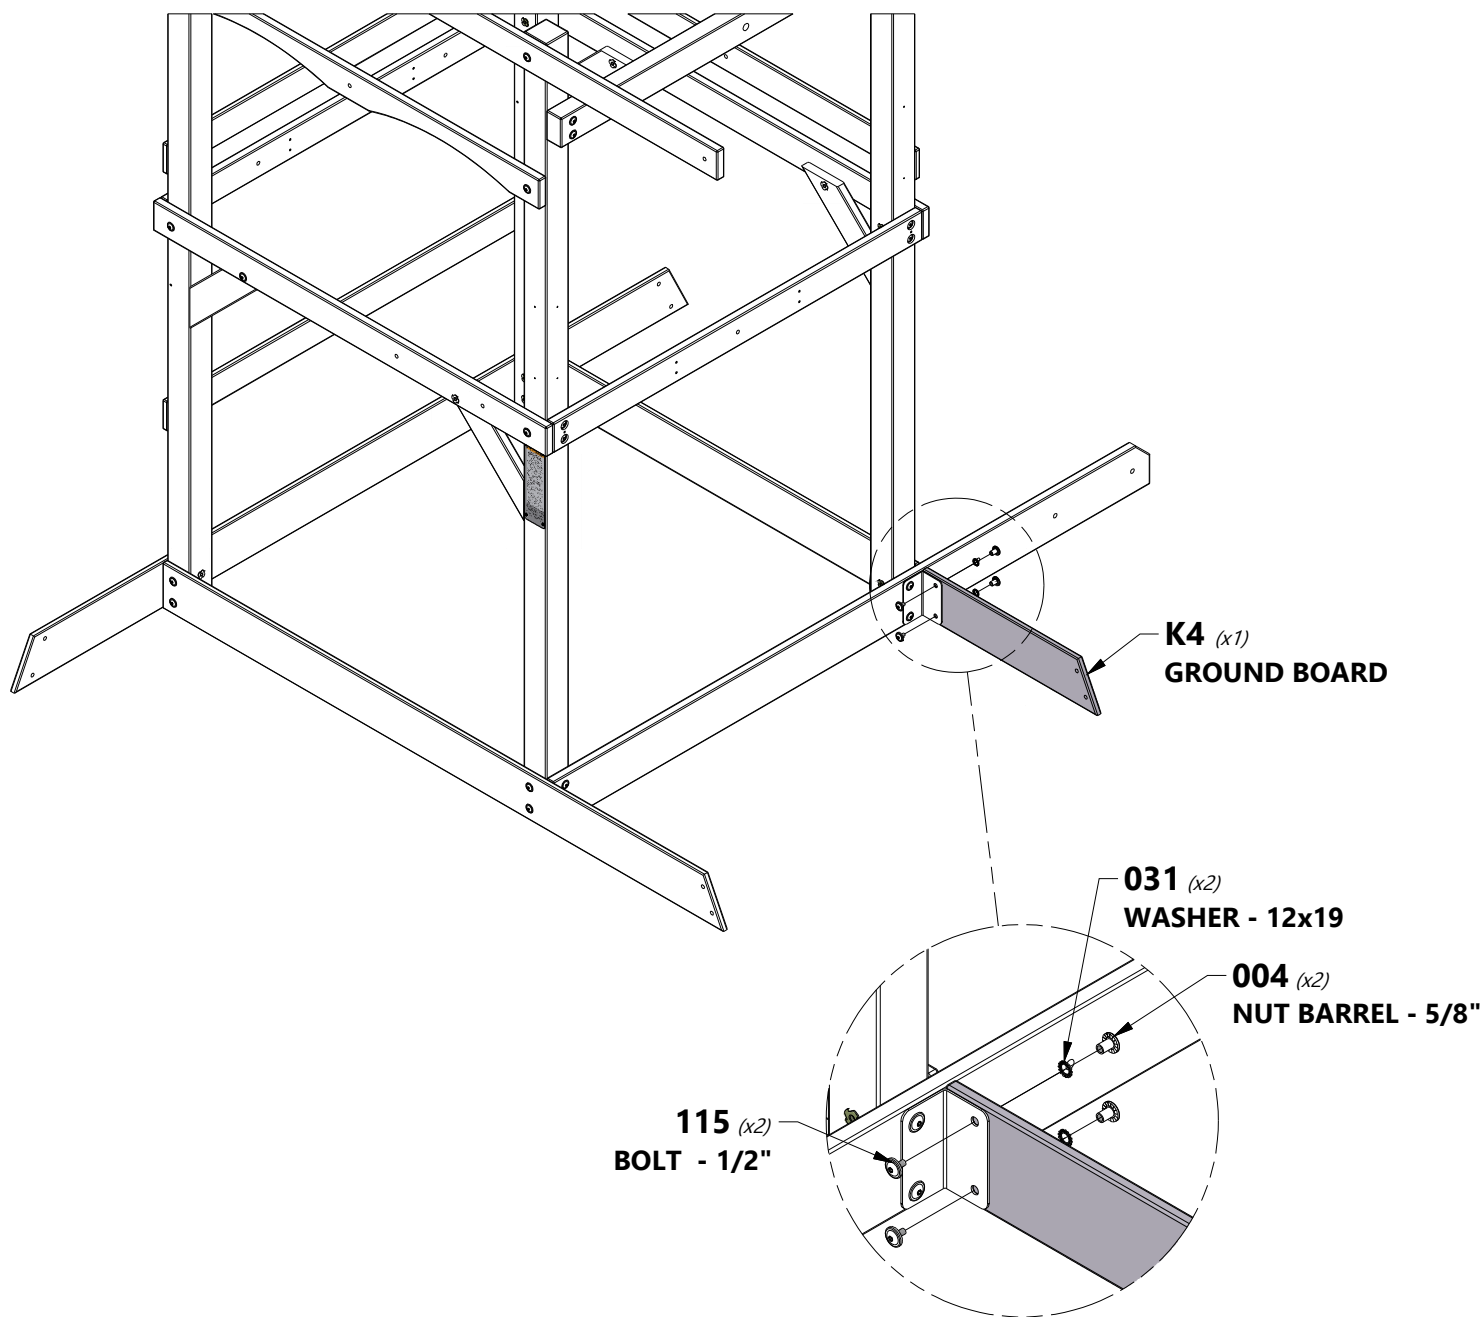



H1 | **ANGLE BRACE - W4L07127**
(x2) | 1"x3 3/8"x44 1/2" (24x86x1129)

H11 | **DECK BRACE - W4L07296**
(x2) | 1"x3 3/8"x17 3/4" (24x86x450)

H100011 | **BOLT WH**
(x2) | 5/16x1 3/4




H100030 | **WASHER LOCK**
(6) | **EXT**
8x19


H100010 | **BOLT WH**
(x4) | 5/16x1-1/2



H100138 | **WASHER LOCK**
(4) | **EXT**
6x15






H100146 | **LAG SCREW WH**
(x4) | 1/4x2



H100074 | **T-NUT**
(x6) | 5/16

TIP:
INSTALL T-NUTS IN WOOD FIRST

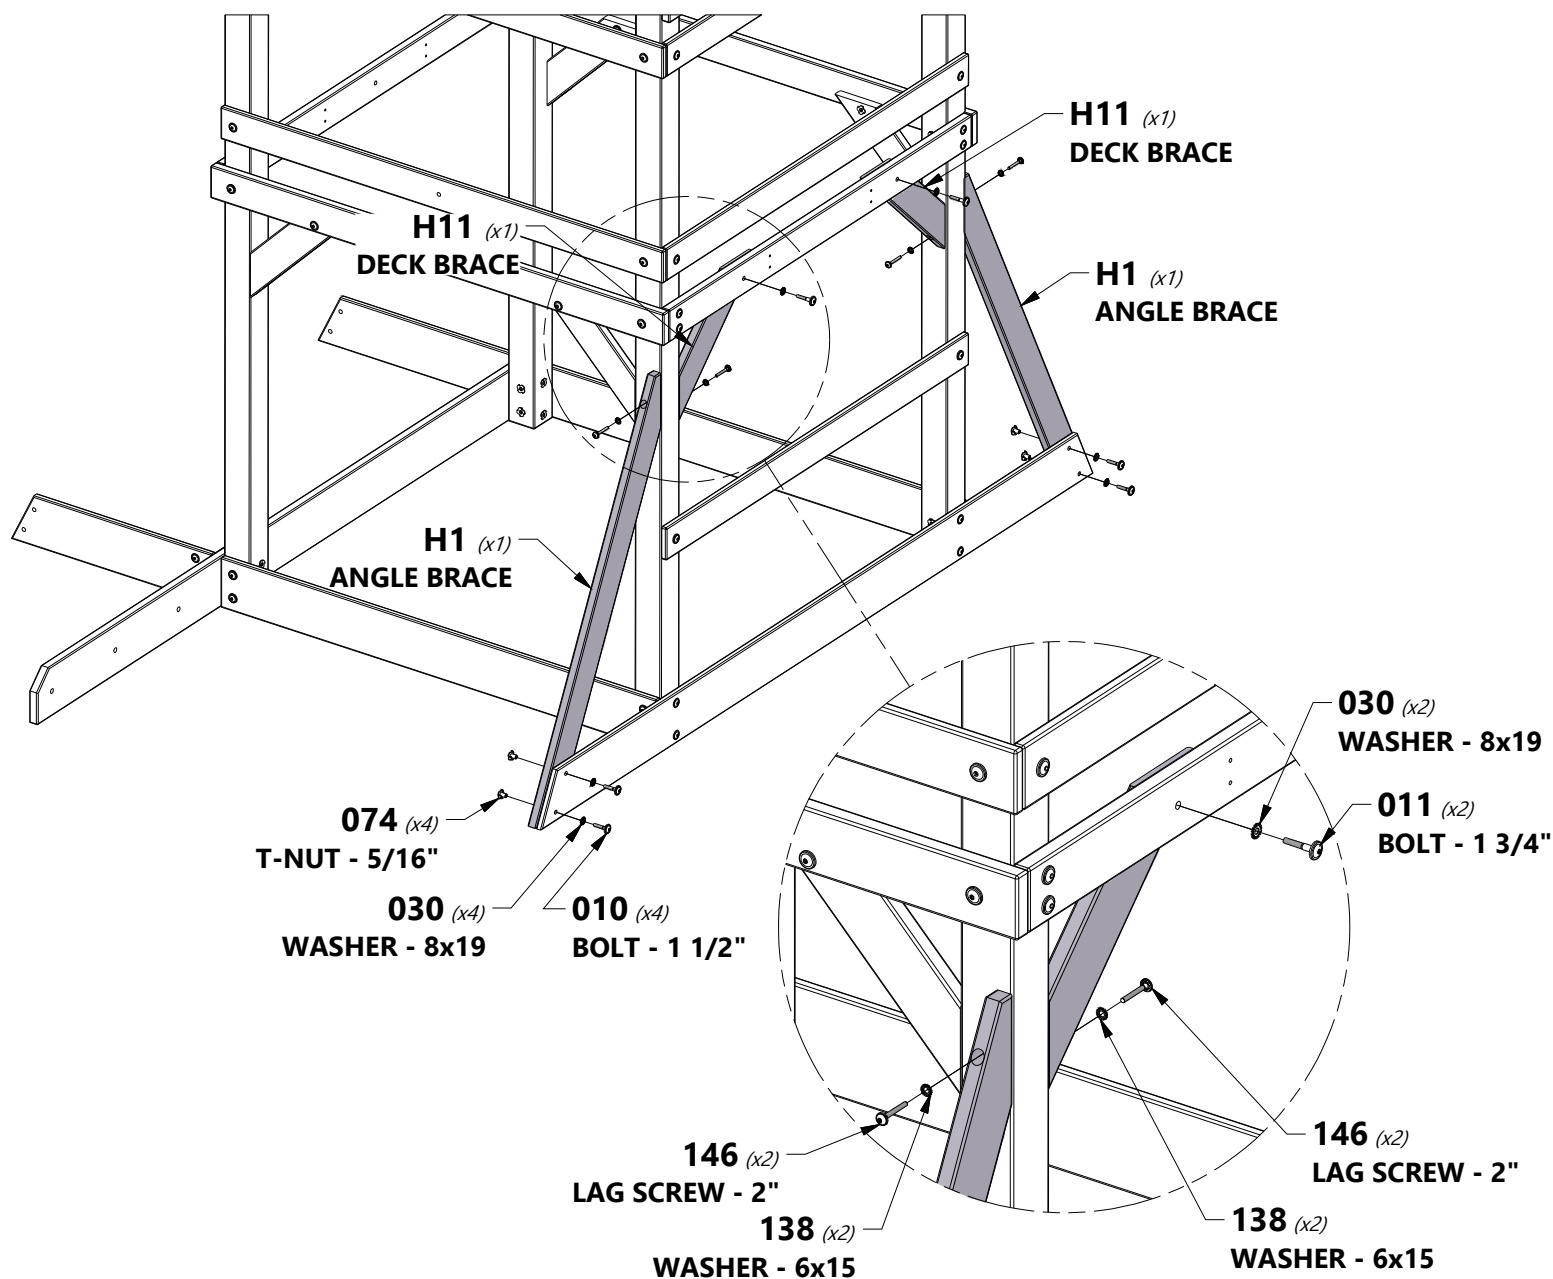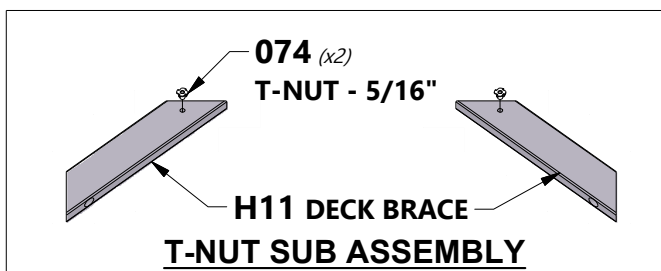




E1 | RAIL - W4L13761
(x1) | 1 3/8"x3"x51 7/8" (36x76x1318)



E2 | RAIL - W4L13755
(x1) | 1 3/8"x3"x51 7/8" (36x76x1318)




E3 | RAIL - W4L13762
(x1) | 1 3/8"x3"x51 7/8" (36x76x1318)



H100027 | LAG SCREW WH
(x6) | 5/16x2



H100030 | WASHER LOCK
(x7) | EXT
8x19







H100010 | BOLT WH
(x1) | 5/16x1-1/2



H100074 | T-NUT
(x4) | 5/16

TIP:
INSTALL T-NUTS IN WOOD FIRST

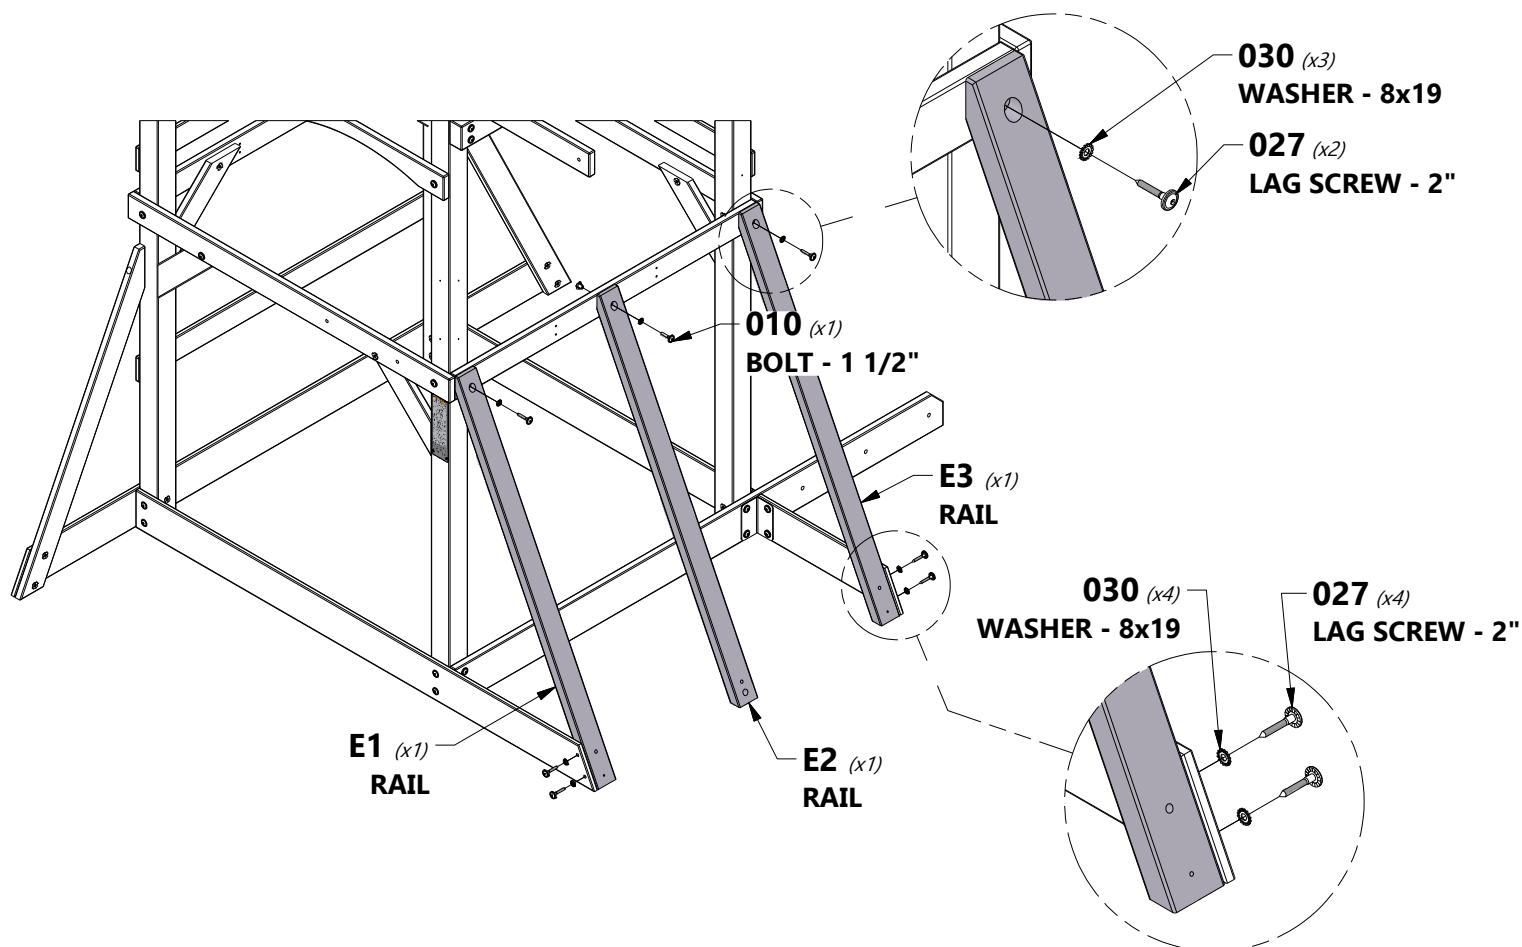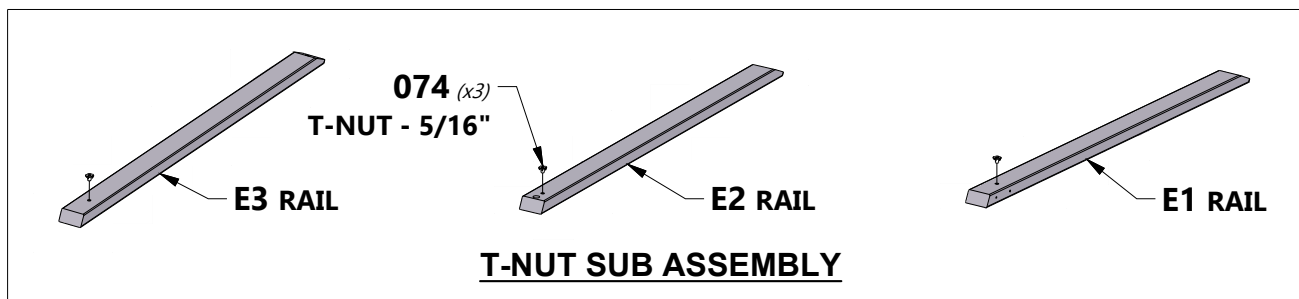




K5 | GROUND BOARD - W4L13757
(x1) | 5/8"x4 3/4"x50 1/4" (16x120x1275)




H100012 | BOLT WH
(x3) | 5/16x2





H100026 | LAG SCREW WH
(x2) | 5/16x1 1/2



H100030 | WASHER LOCK
(x5) | EXT
8x19

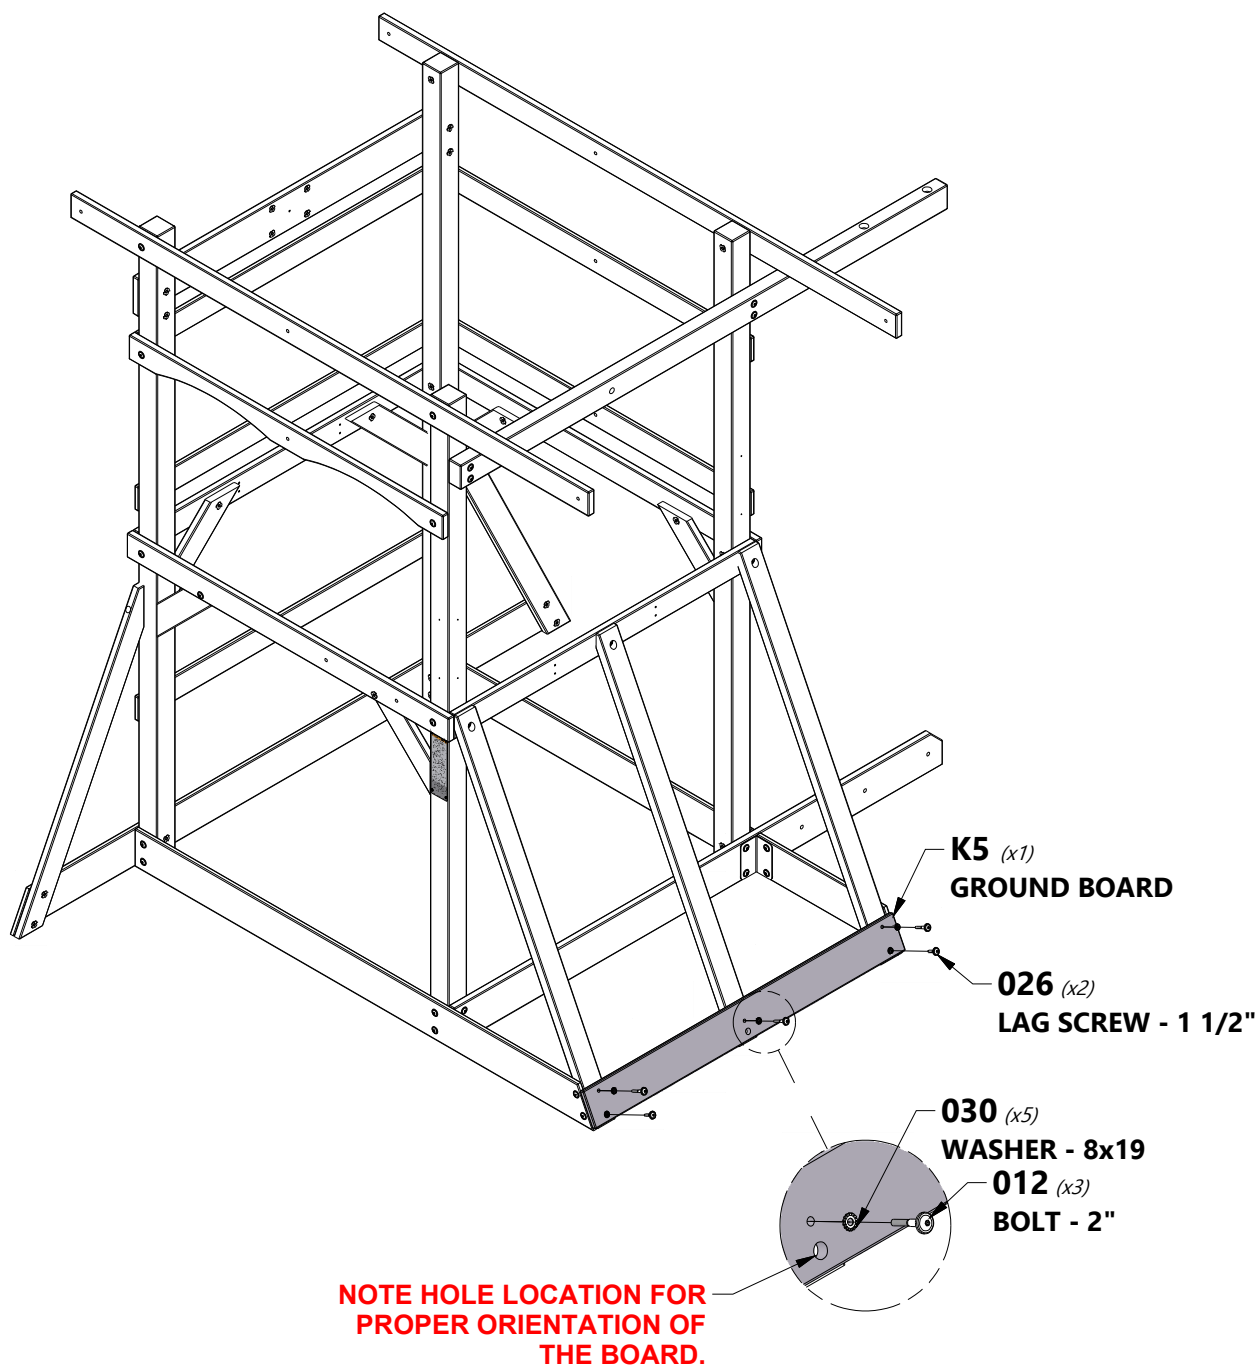




J1 | FLOOR JOIST - W4L07139
(x2) | 1"x2 3/8"x50 1/4" (24x60x1275)




H100090 | SCREW PFH
(x8) | 8x2 1/2"

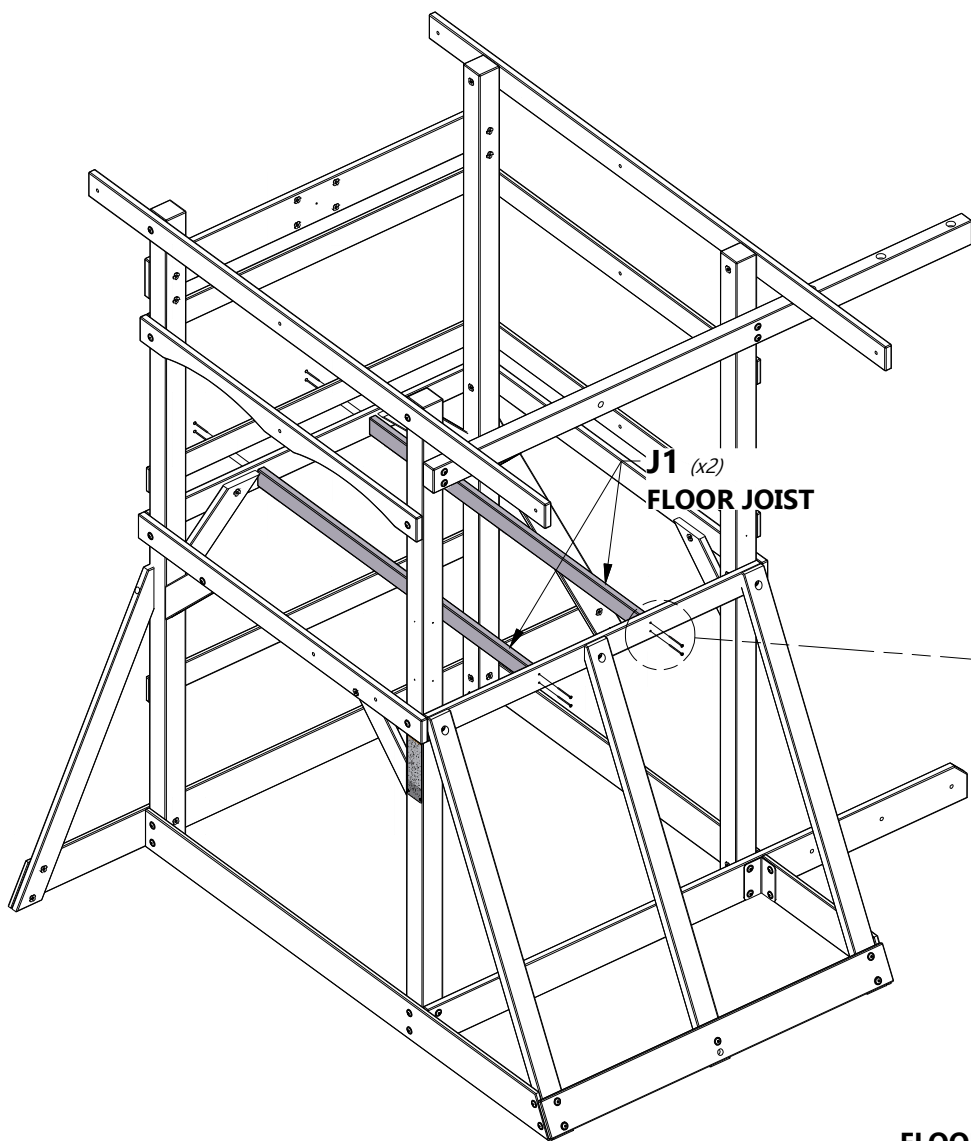

J1 (x2)
FLOOR JOIST

090 (x8)
SCREW - 2 1/2"

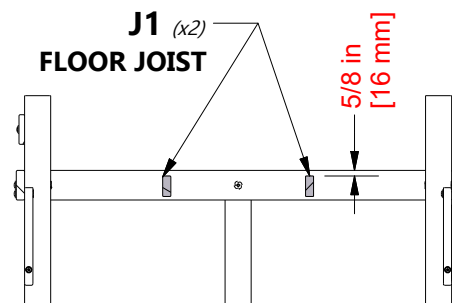

J1 (x2)
FLOOR JOIST

5/8 in
[16 mm]



M2 | ROCK WALL BOARD - W4L13759
(x3) | 5/8"x3 3/8"x48 7/8" (16x86x1243)

M3 | ROCK WALL BOARD - W4L13760
(x3) | 5/8"x3 3/8"x48 7/8" (16x86x1243)

A6P00037 | GREEN HC ROCK #2
(x9)




H100063 | BOLT PTH
(x18) | 1/4x3/4

H100108 | WASHER LOCK INT
(x18) | 8x15

H100072 | T-NUT
(x18) | 1/4


TIP:
INSTALL T-NUTS IN WOOD FIRST

FINGER GRIPS UPWARD

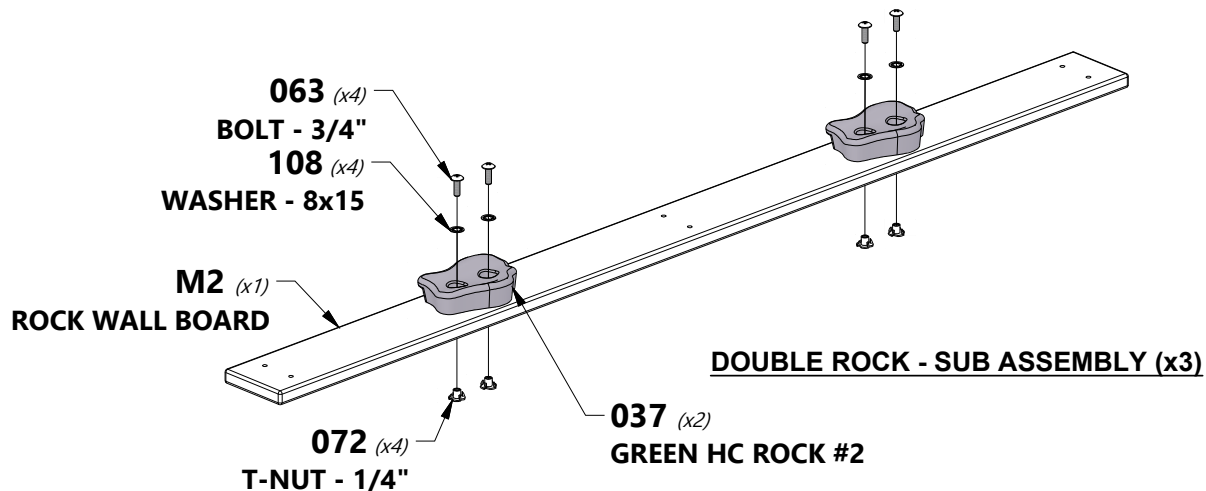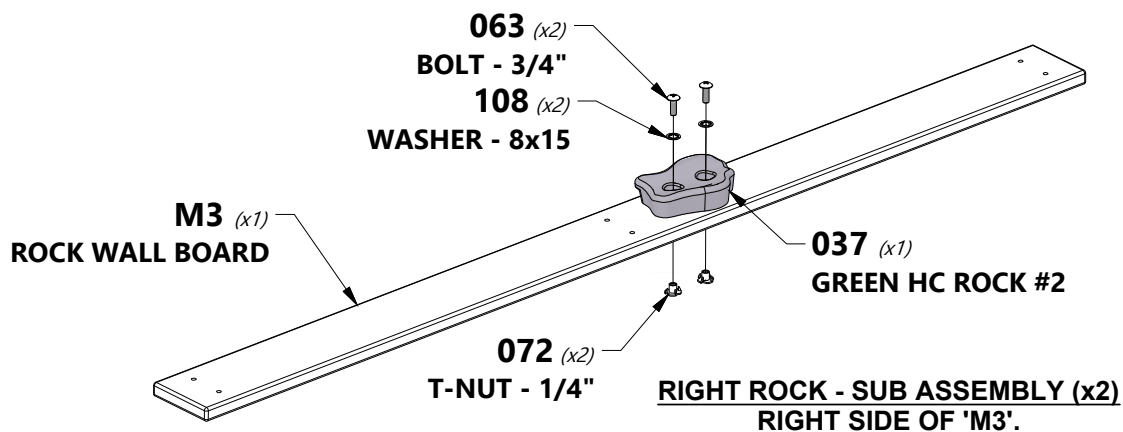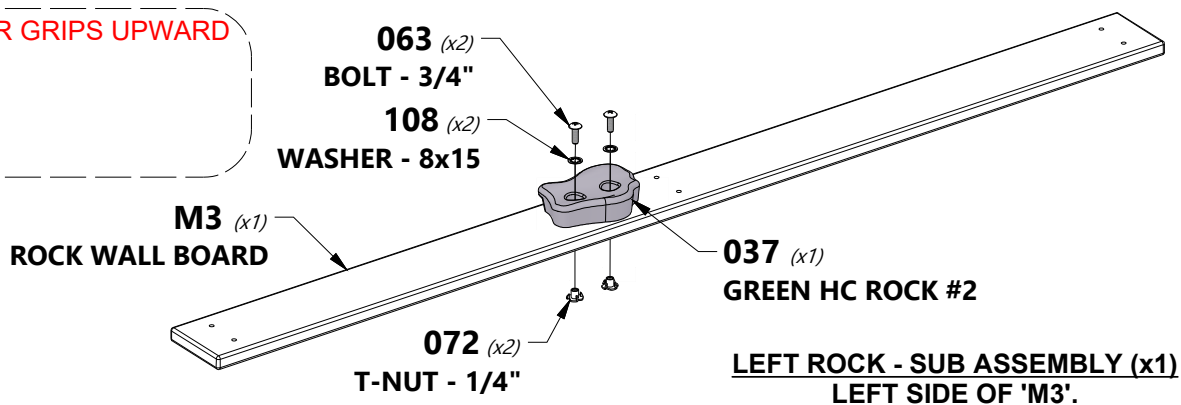



M1 | **ROCK WALL BOARD - W4L13758**
(x7) | 5/8"x3 3/8"x48 7/8" (16x86x1243)



LEFT ROCK - SUB ASSEMBLY (x1)
(FROM STEP 14).




DOUBLE ROCK - SUB ASSEMBLY (x3)
(FROM STEP 14).





RIGHT ROCK - SUB ASSEMBLY (x2)
(FROM STEP 14).




H100086 | **SCREW PFH**
(x78) | 8x1 1/2

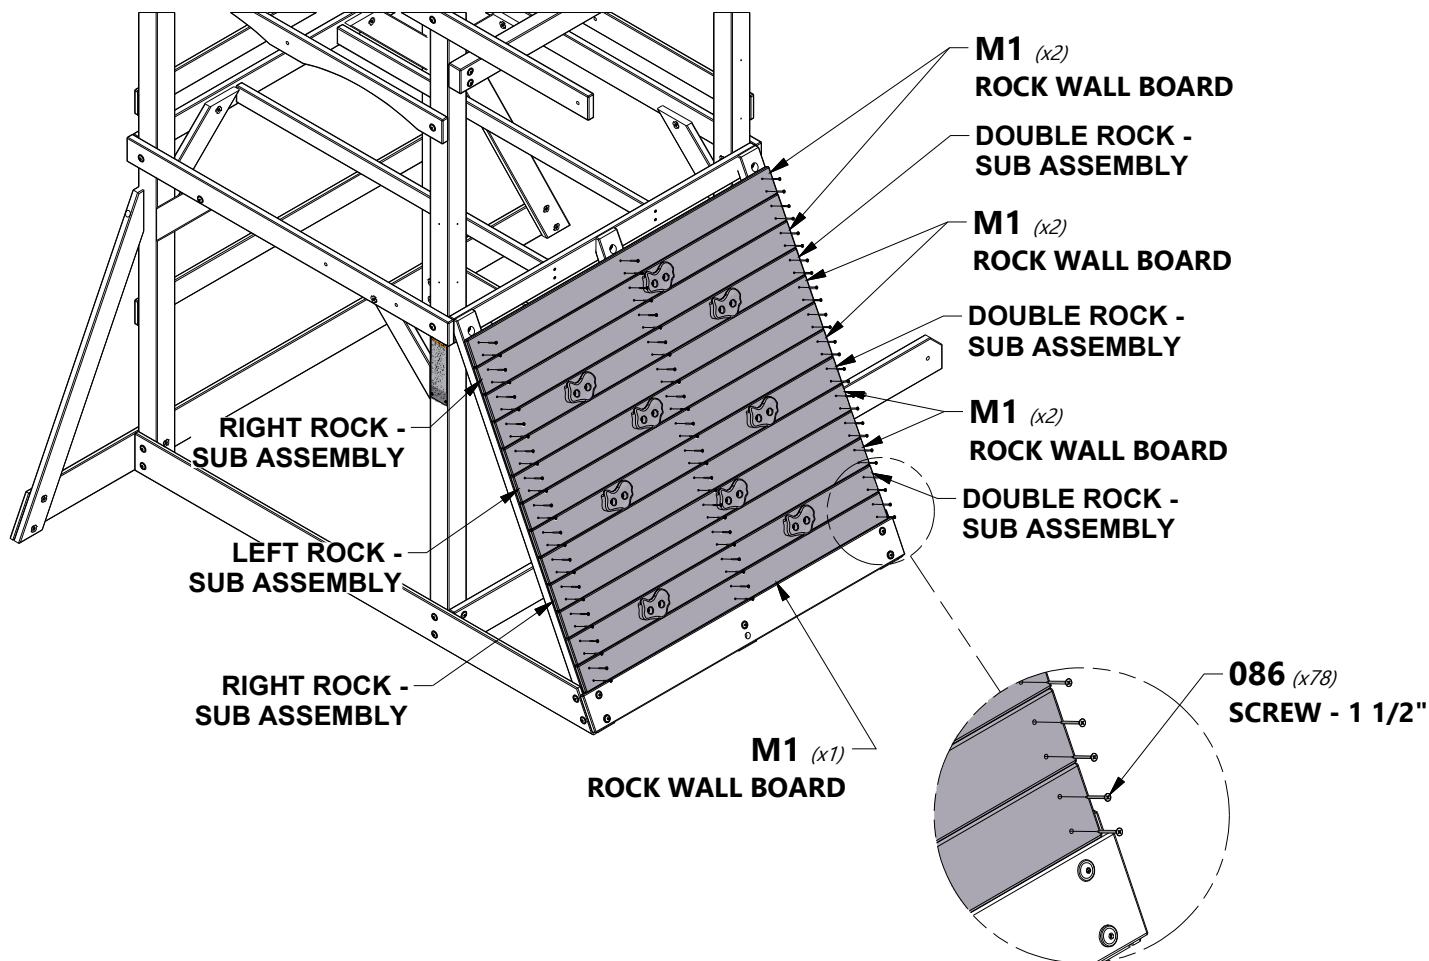





J2 | FLOOR SUPPORT - W4L06710
(x4) | 1"x2 3/8"x3" (24x60x76)



H100089 | SCREW PFH
(x8) | 8x1 3/4

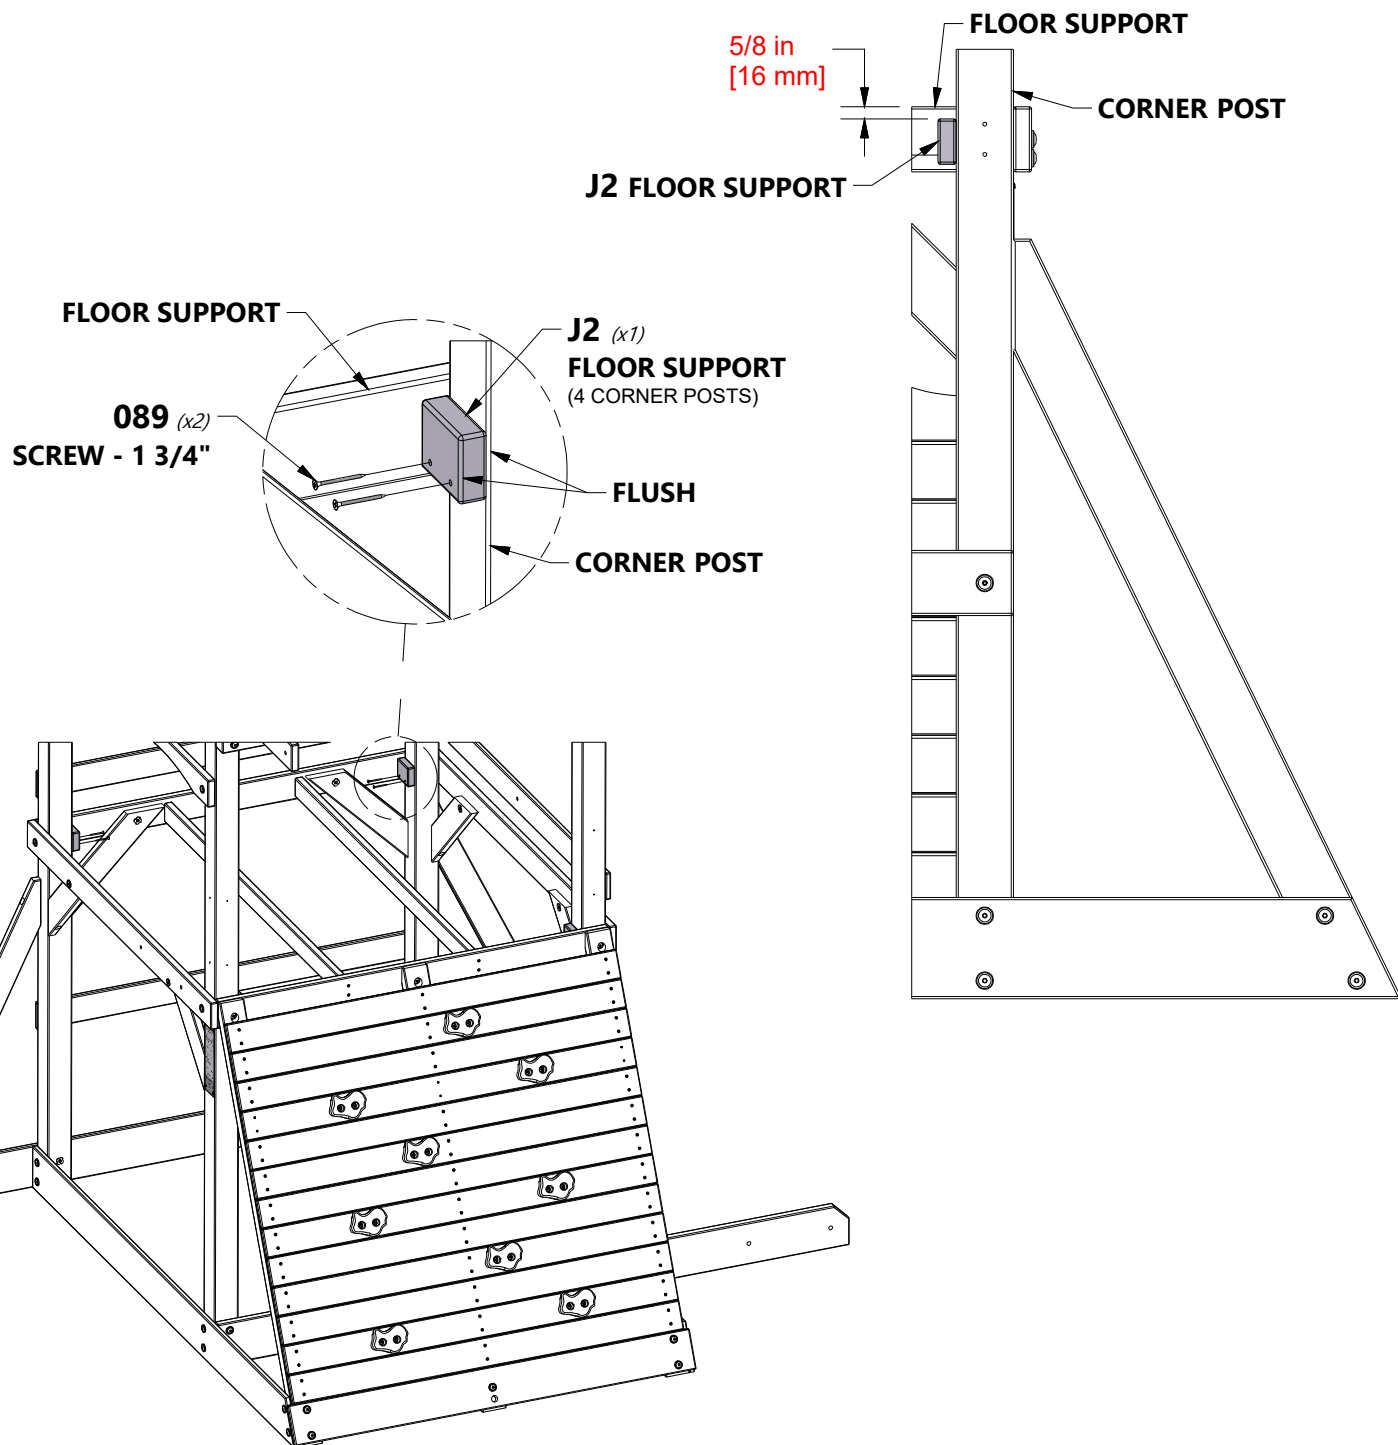






T1 | **SUPPORT BOARD - W4L07140**
(x2) | 1"x1 3/8"x44 1/8" (24x34x1122)



H100089 | **SCREW PFH**
(x10) | 8x1 3/4

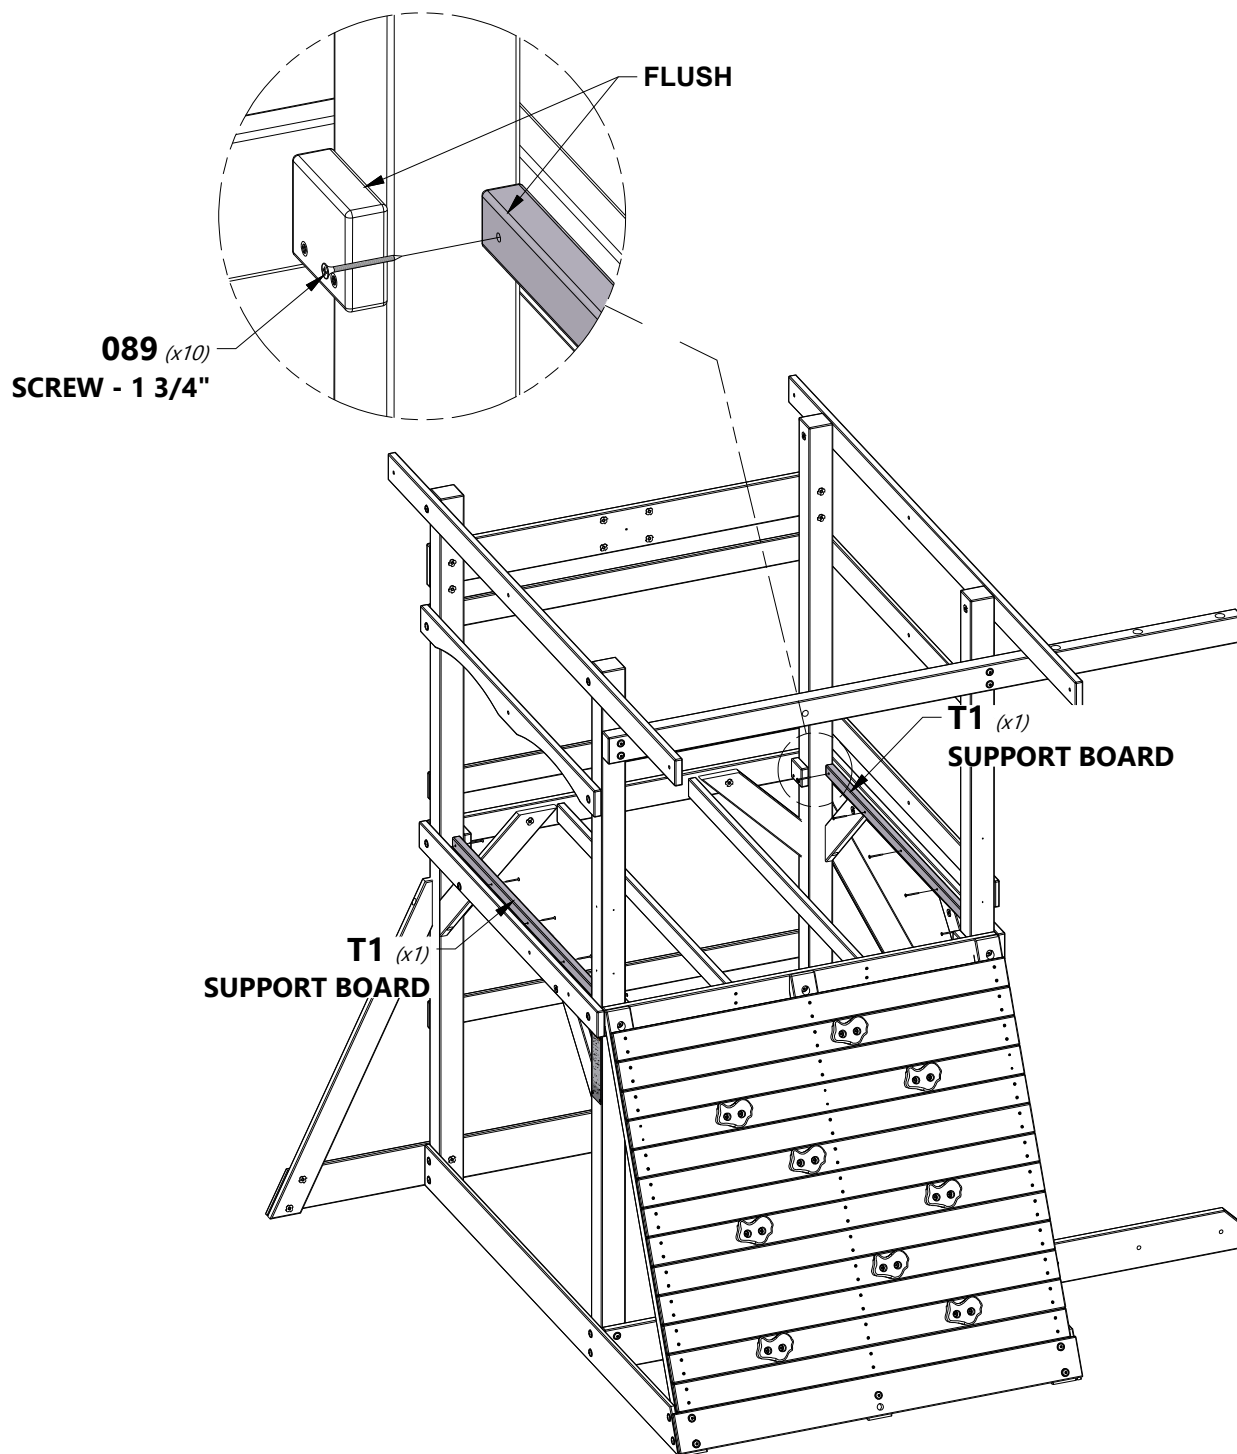


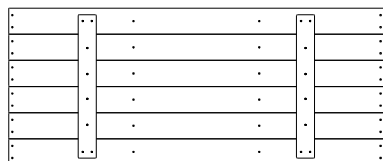


FP1 | FLOOR PANEL
(x2) | 1 1/4"x17"x48 5/8" (32x432x1242)




M4 | FLOOR BOARD - W4L07141
(x2) | 5/8"x3"x42 7/8" (16x76x1090)





M5 | FLOOR BOARD - W4L07142
(x1) | 5/8"x3 3/8"x48 7/8" (16x86x1242)




H100086 | SCREW PFH
(x86) | 8x1 1/2

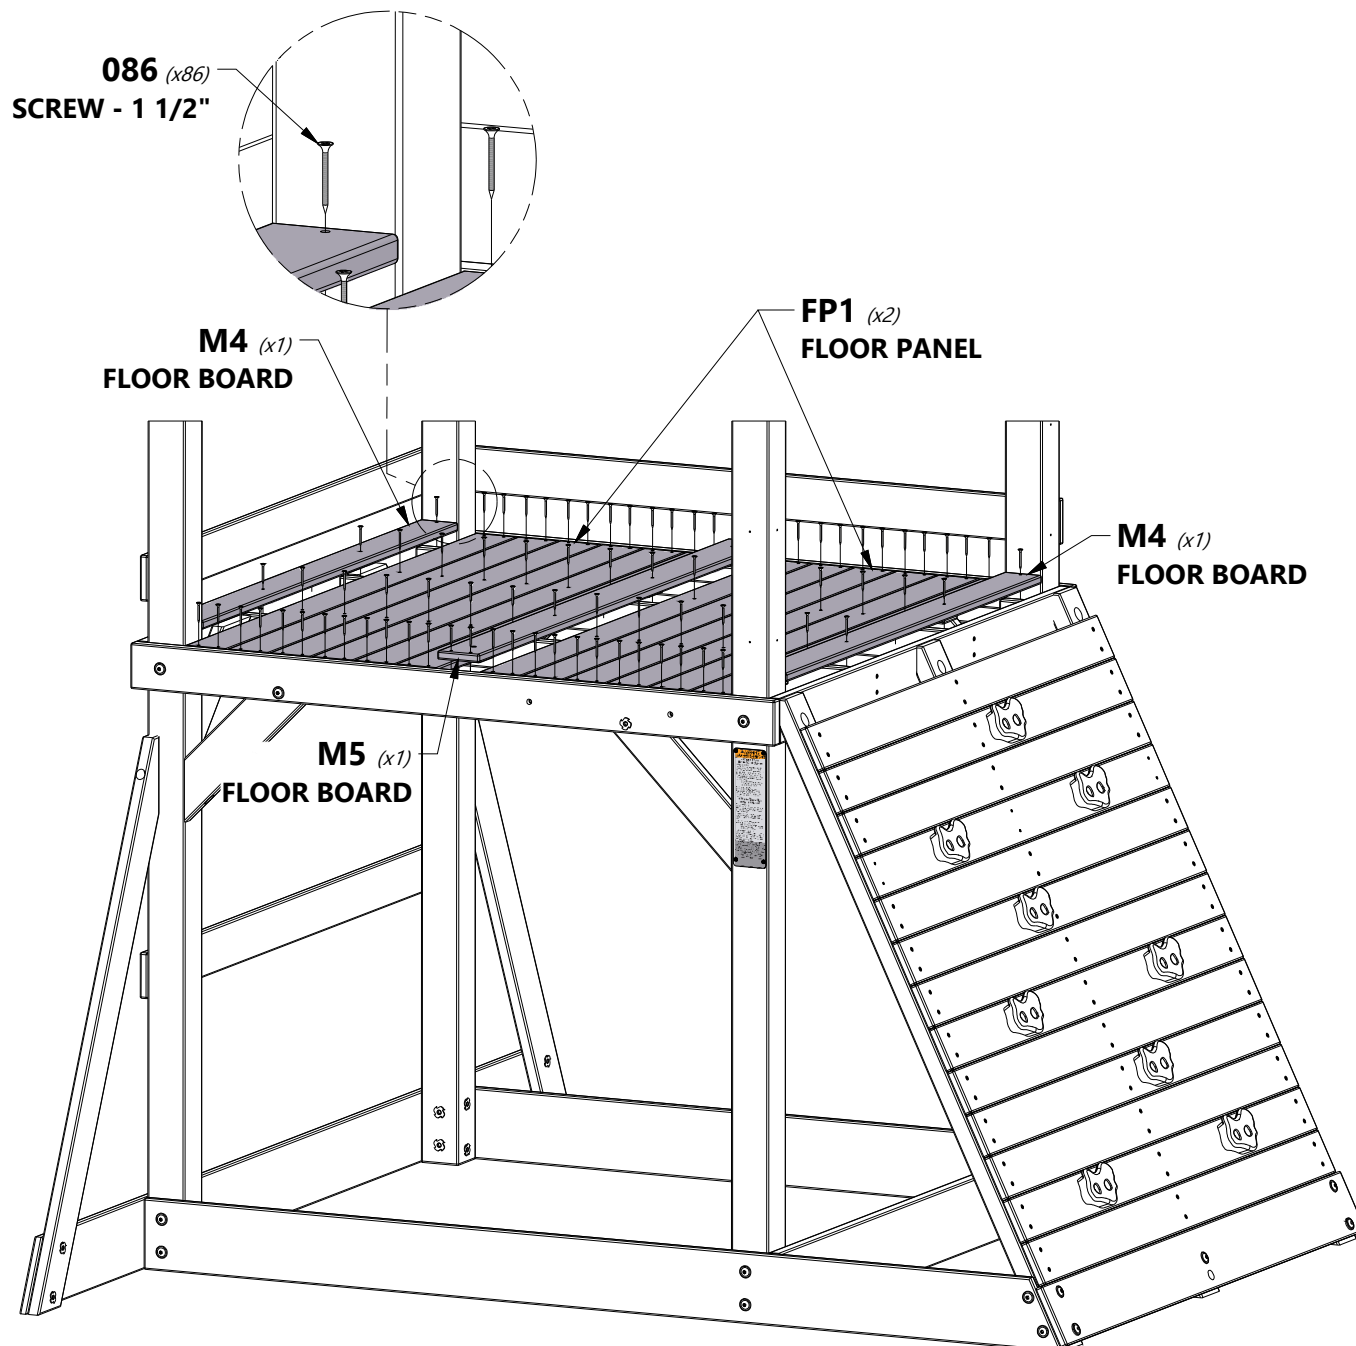

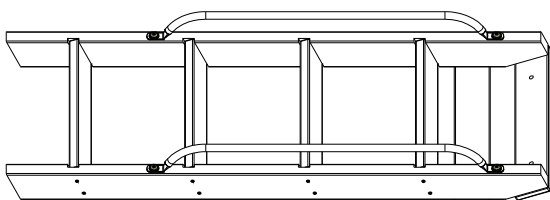


(1) LADDER ASSEMBLY




H100010 BOLT WH
(x2) 5/16x1-1/2



H100030 WASHER LOCK
(x2) EXT
8x19

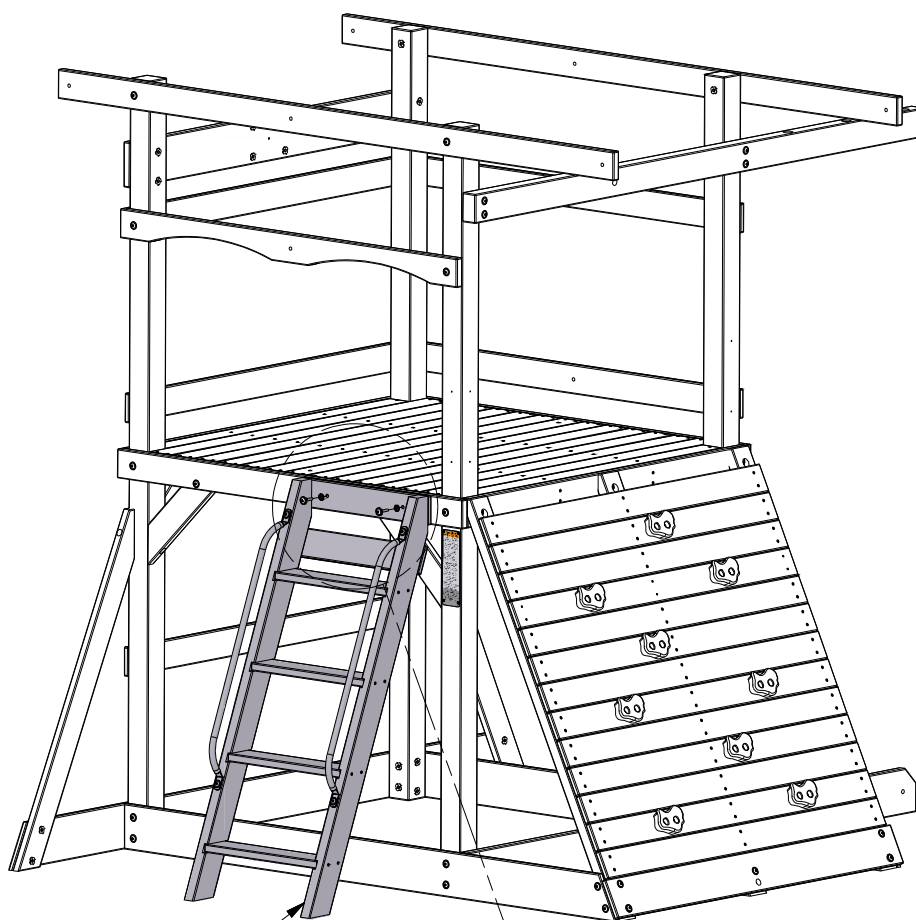


LADDER ASSEMBLY

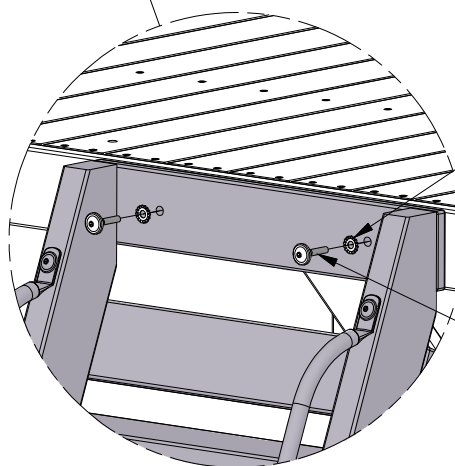

030 (x2)
WASHER - 8x19

010 (x2)
BOLT - 1 1/2"




H6 | UPRIGHT - W4L13763
(x1) | 1"x3 3/8"x72" (24x86x1828)

TOP



H100011 | BOLT WH
(x1) | 5/16x1 3/4




H100010 | BOLT WH
(x2) | 5/16x1-1/2





H100074 | T-NUT
(x3) | 5/16




H100030 | WASHER LOCK
(x3) | EXT
8x19

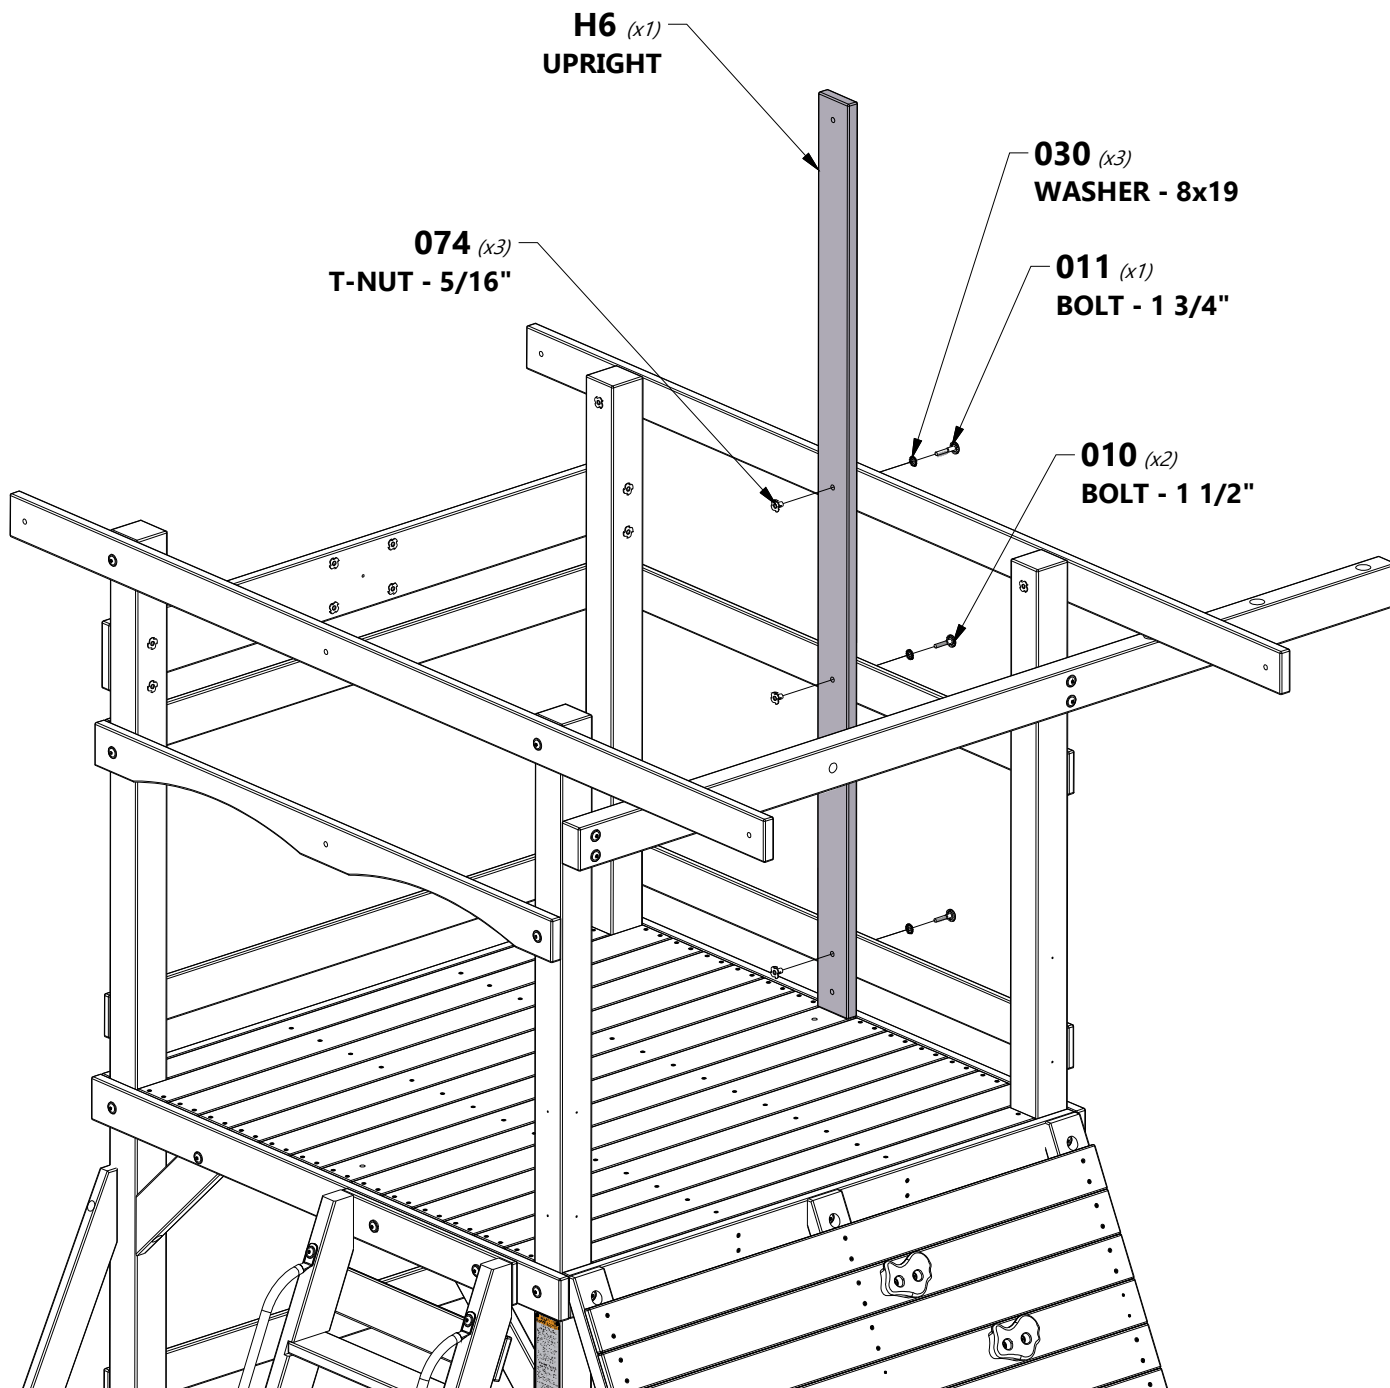



H7 | UPRIGHT - W4L13764
(x1) | 1"x3 3/8"x72" (24x86x1828)




H100011 | BOLT WH
(x2) | 5/16x1 3/4





H100030 | WASHER LOCK
(x2) | EXT
8x19



H100074 | T-NUT
(x2) | 5/16

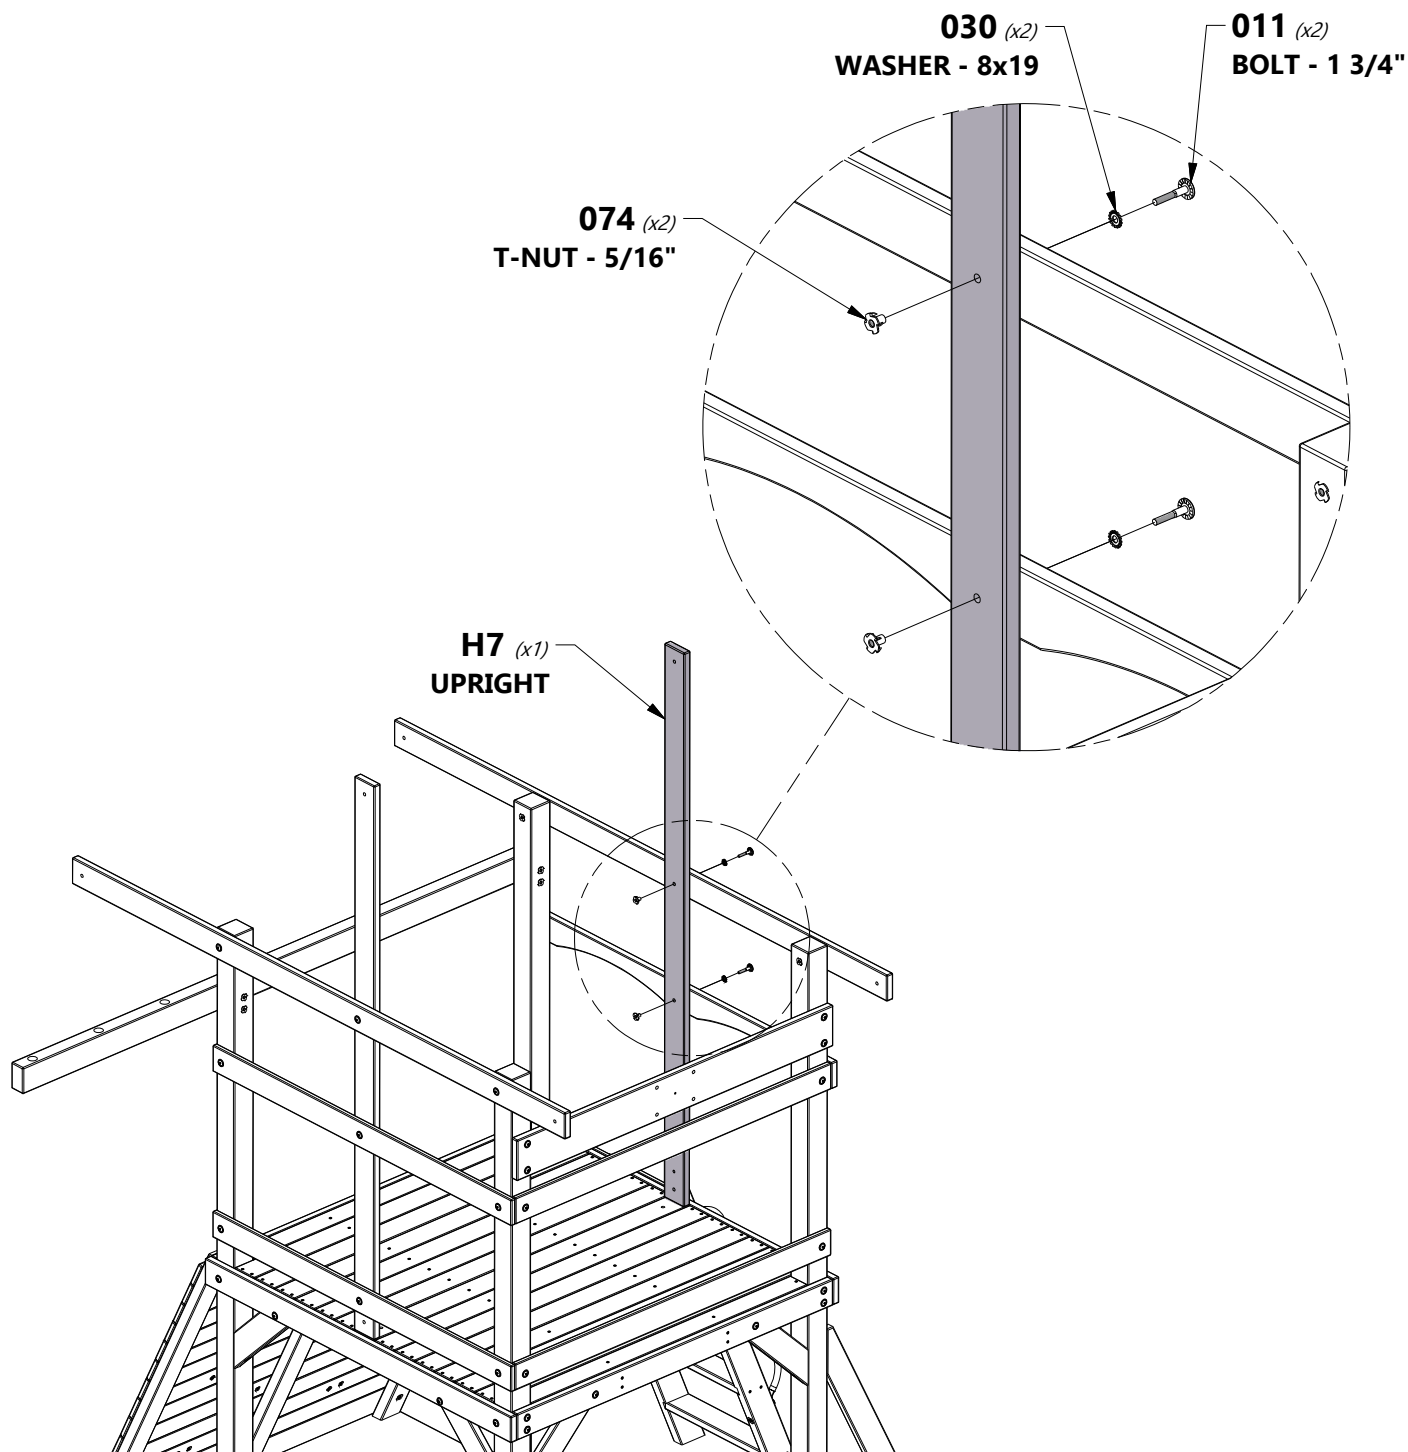




A4M01046 | L BRACKET
(2) | 2.5x38x55x55




H100115 | BOLT WH
(x2) | 5/16x1/2



H100031 | WASHER LOCK EXT
(x2) | 12x19





H100222 | BOLT WH
(x2) | 5/16x3/4





H100005 | NUT BARREL WH
(x2) | 5/16x7/8




H100074 | T-NUT
(x2) | 5/16

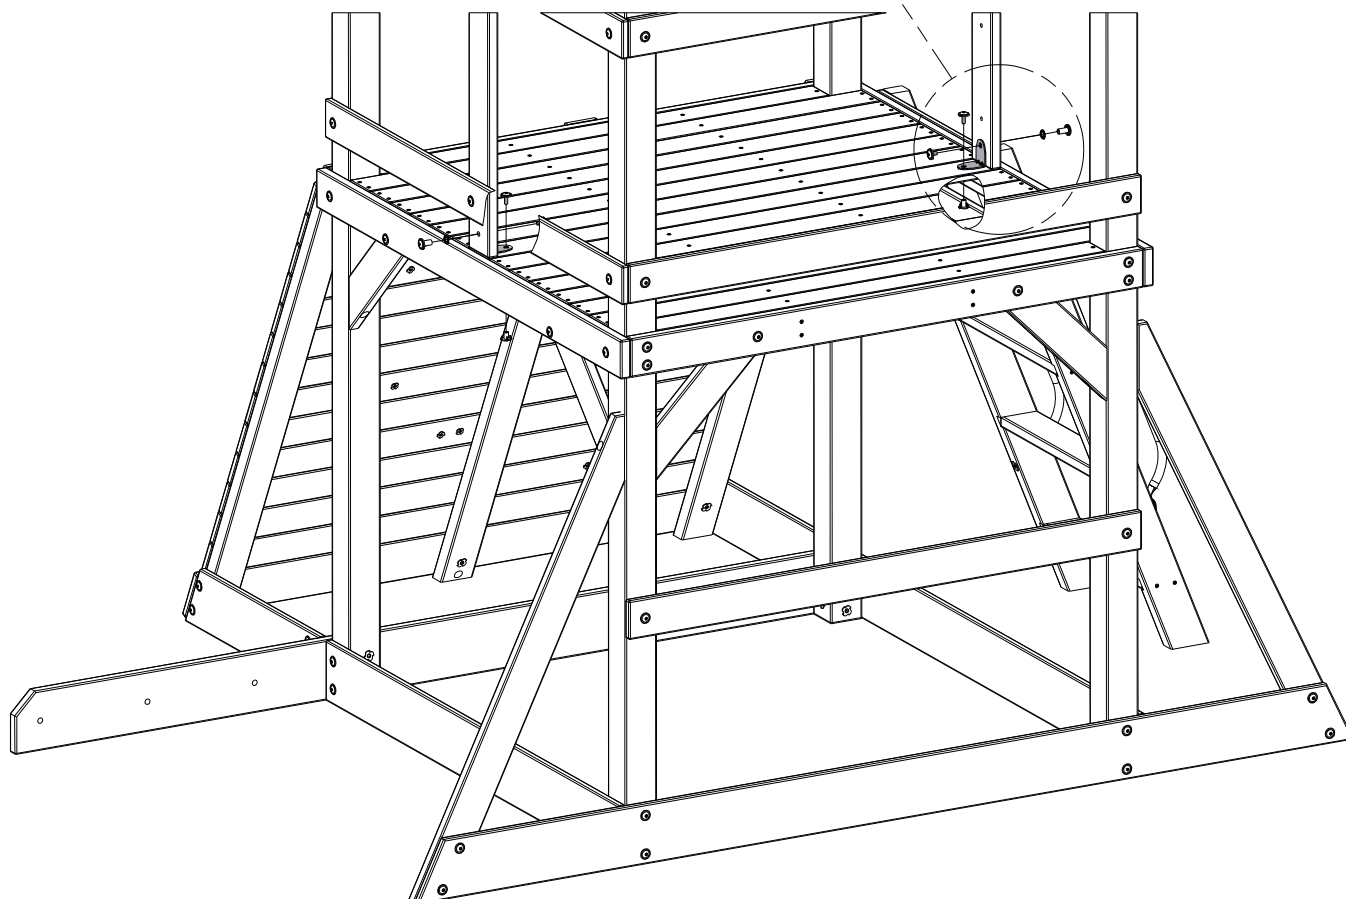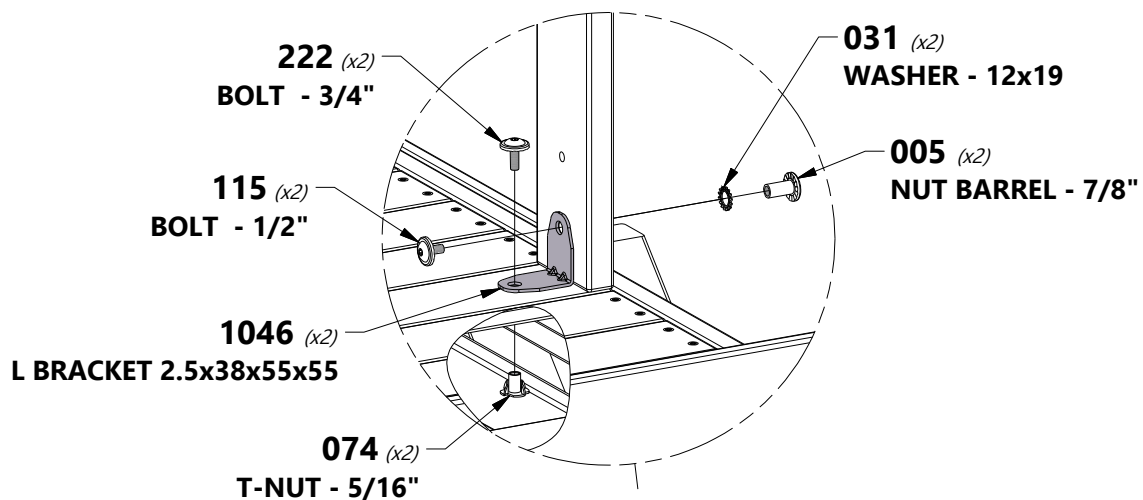





M44 | PICKET - W4L07152
(x6) | 5/8"x3 3/8"x21 3/8" (16x86x542)





H100088 | SCREW PFH
(x24) | 8x1 1/8

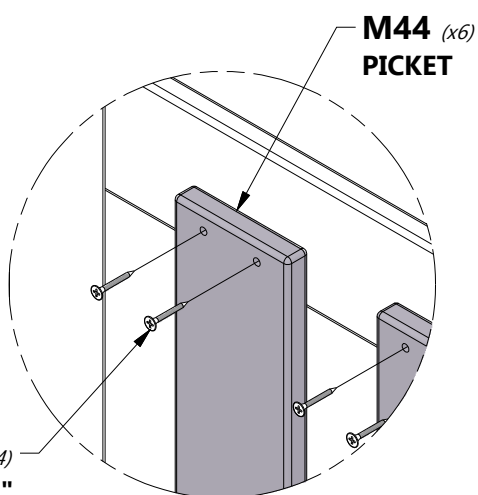


088 (x24)
SCREW - 1 1/8"

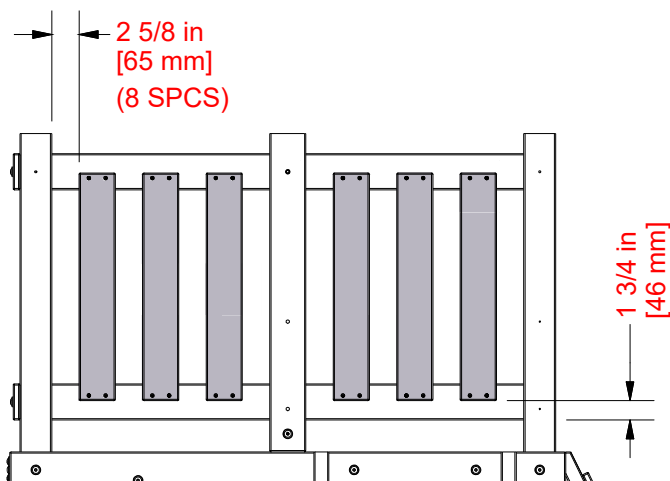

PICKET SPACING

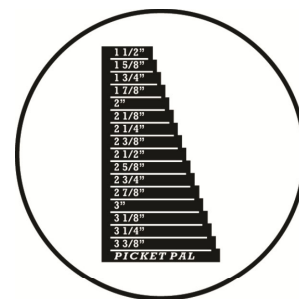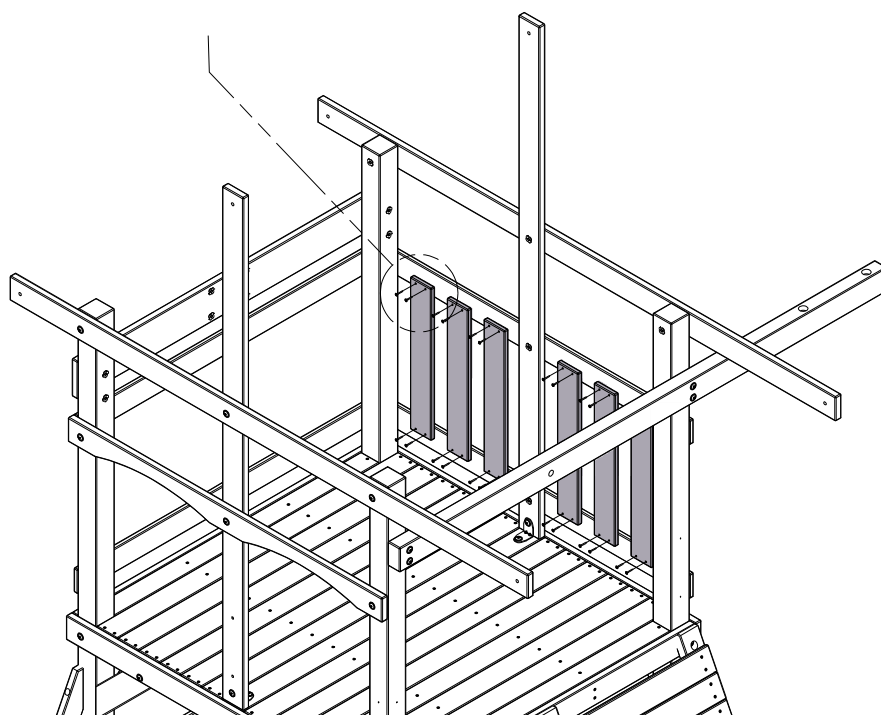




M44 PICKET - W4L07152
(x7) 5/8"x3 3/8"x21 3/8" (16x86x542)




H100088 SCREW PFH
(x28) 8x1 1/8



M44 (x7)
PICKET

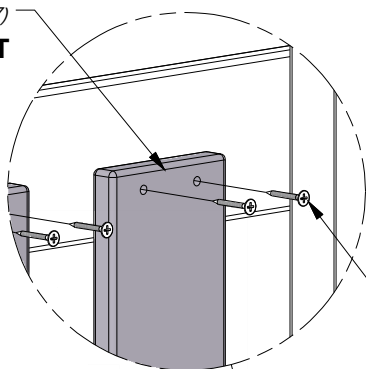

088 (x28)
SCREW - 1 1/8"

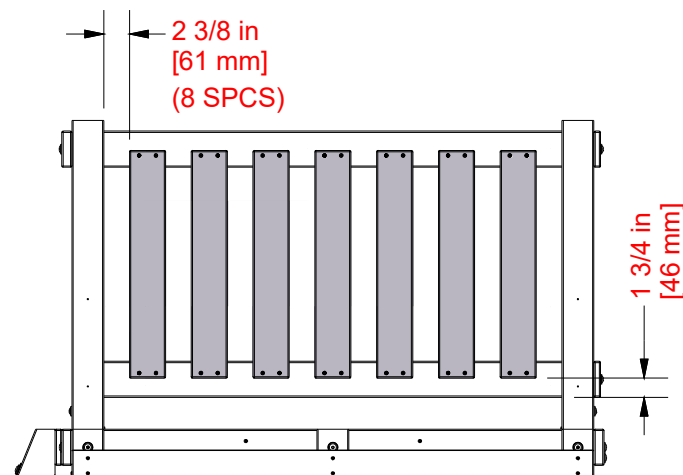

PICKET SPACING

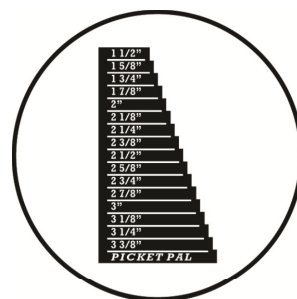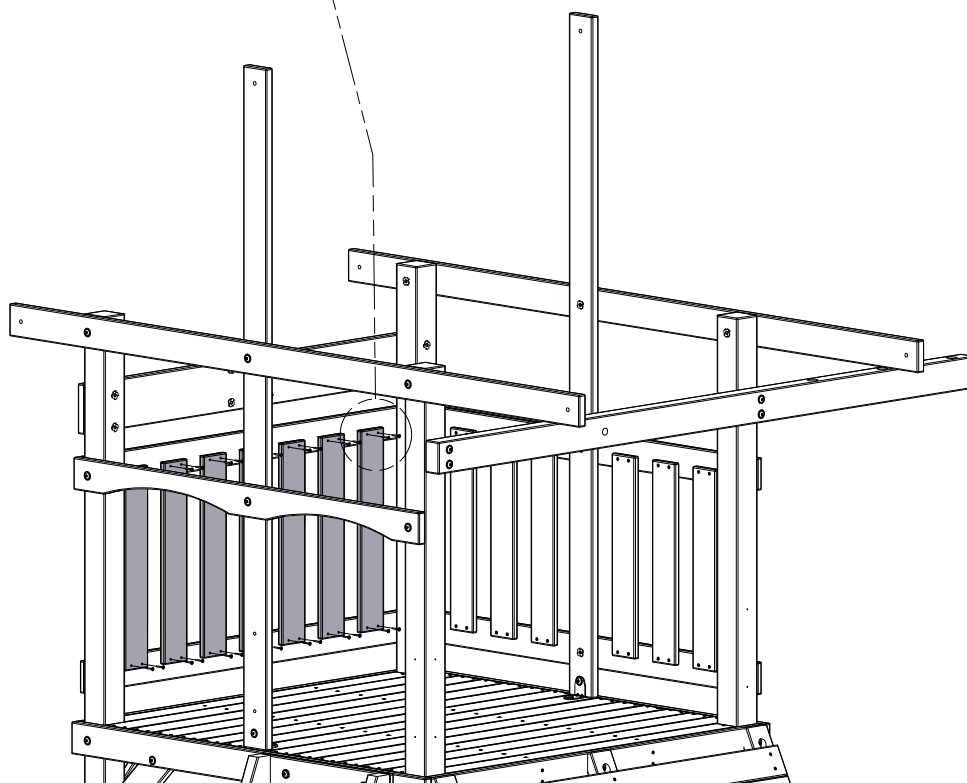




H9 | ROOF RAIL - W4L13766
(x2) | 1"x3 3/8"x50 7/8" (24x86x1291)

H10 | ROOF RAIL - W4L13767
(x1) | 1"x3 3/8"x48 7/8" (24x86x1243)

A4M01046 | L BRACKET
(x6) | 2.5x38x55x55

H100115 | BOLT WH
(x6) | 5/16x1/2




H100074 | T-NUT
(x6) | 5/16



H100008 | BOLT WH
(x6) | 5/16x1

H100005 | NUT BARREL WH
(x6) | 5/16x7/8




H100031 | WASHER LOCK
(x6) | EXT
12x19

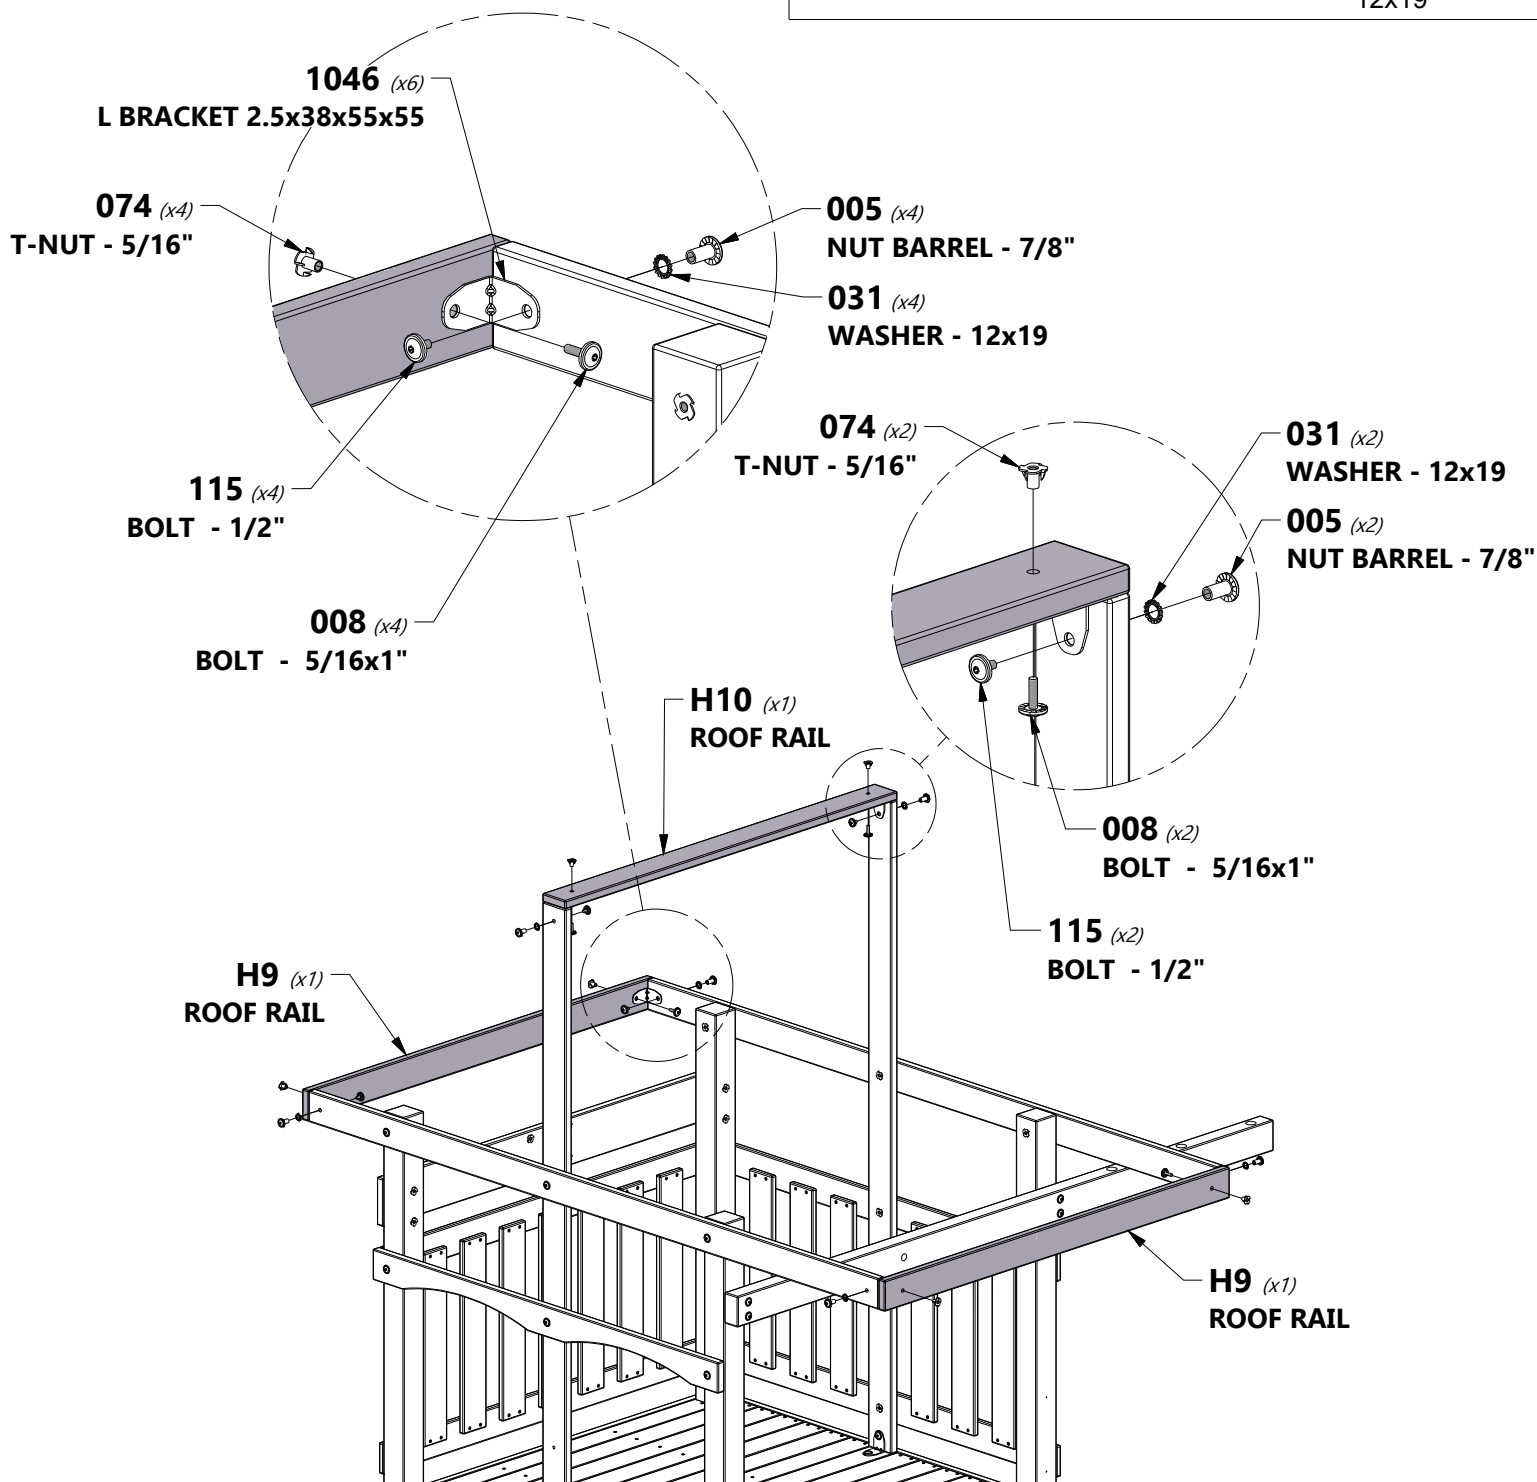






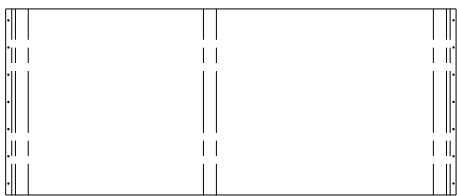



A6P00157 | TARP
(x1)




H100070 | SCREW PWH
(x14) | 8x3/4

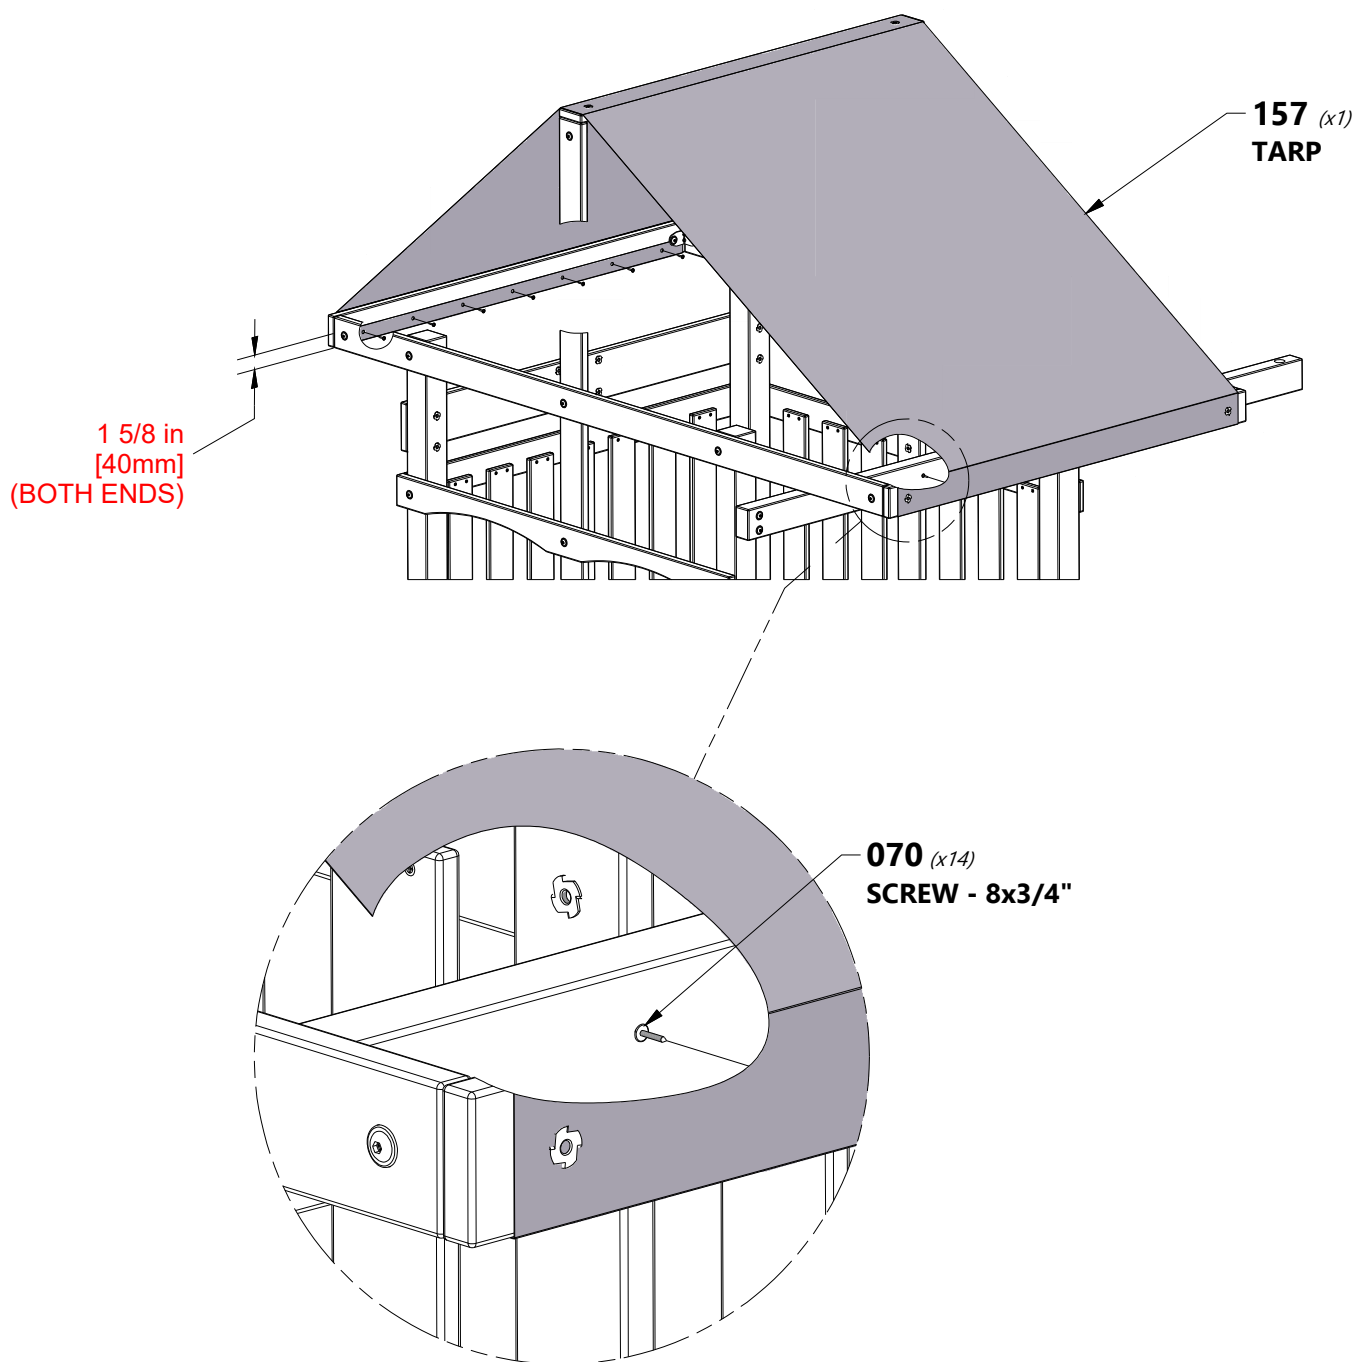

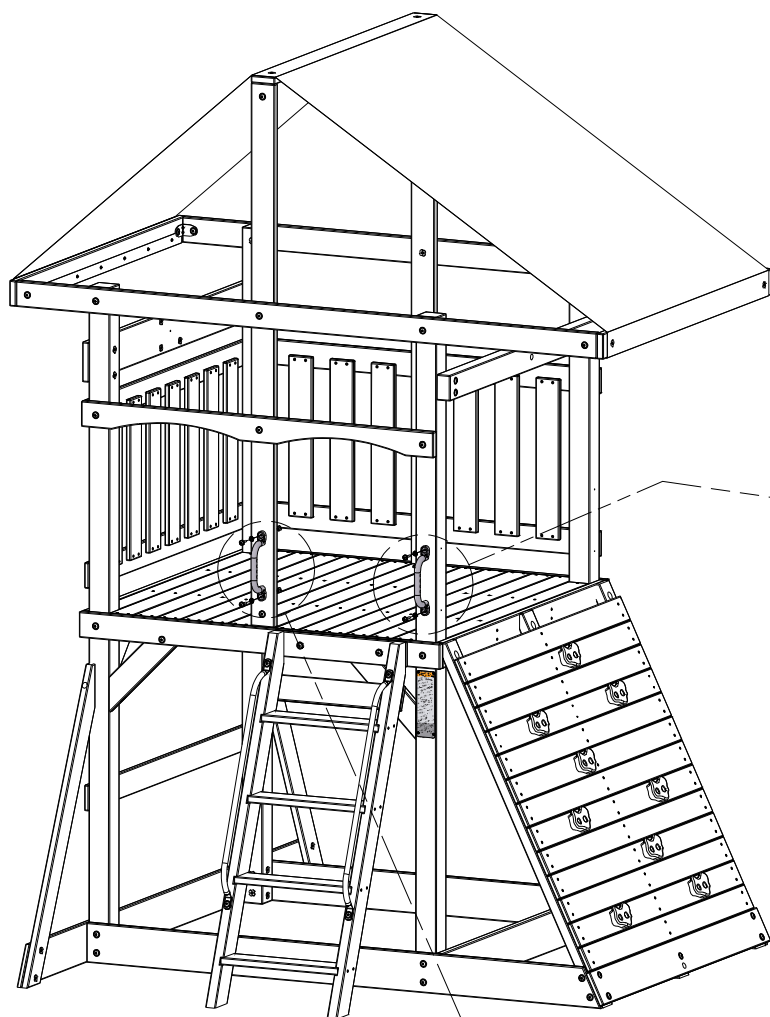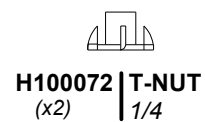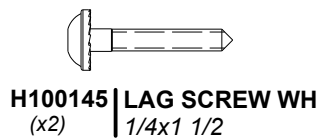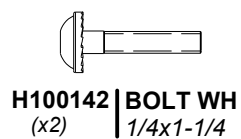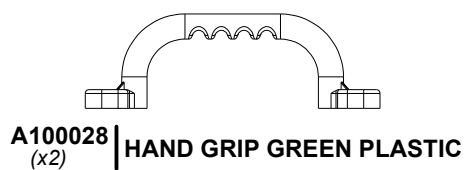




028 (x1)
HAND GRIP GREEN PLASTIC

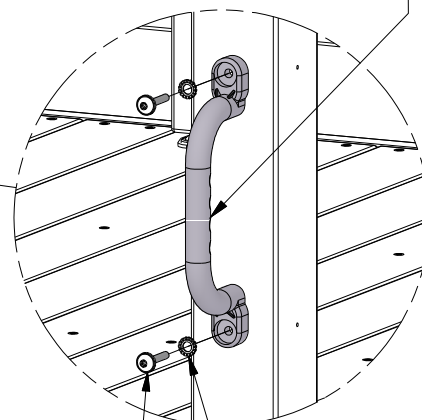


145 (x2)
LAG SCREW - 1 1/2"

138 (x2)
WASHER - 6x15

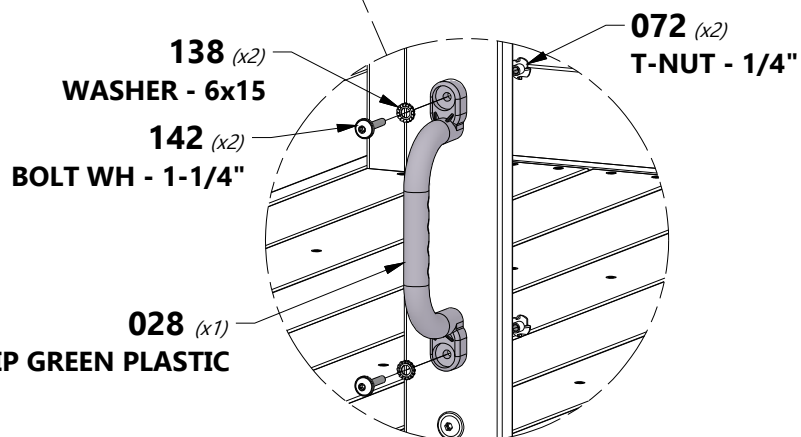





A100028
(x2) | **HAND GRIP GREEN PLASTIC**



H100145 | **LAG SCREW WH**
(x4) | **1/4x1 1/2**





H100138 | **WASHER LOCK**
(x4) | **EXT**
6x15

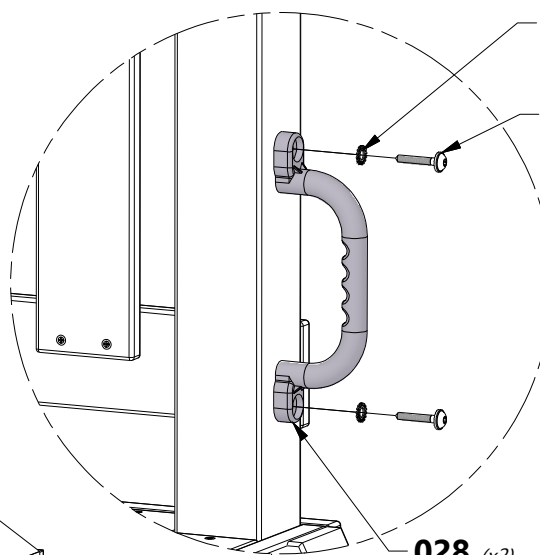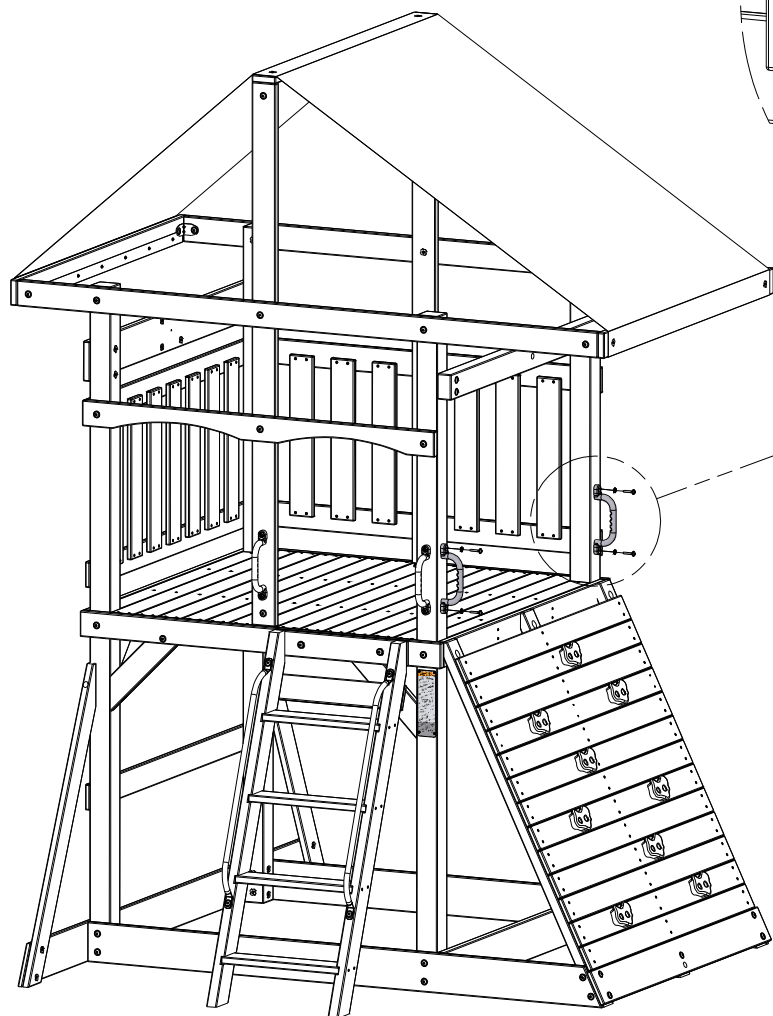


138 (x2)
WASHER - 6x15

145 (x2)
LAG SCREW - 1 1/2"


028 (x2)
HAND GRIP GREEN PLASTIC

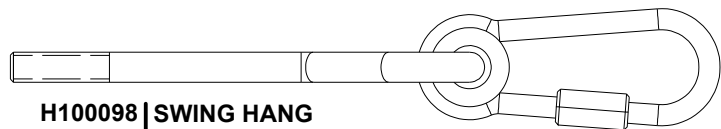

H100098 | SWING HANG
(x3) 5/16x8



H100103 | WASHER SAFETY
(x3) 17x30



H100105 | WASHER FLAT
(x3) 8x27




H100110 | NUT LOCK
(x3) 5/16



110 (x3)
NUT - 5/16"

105 (x3)
WASHER - 8x27


103 (x3)
WASHER - 17x30

098 (x3)
SWING - HANGER

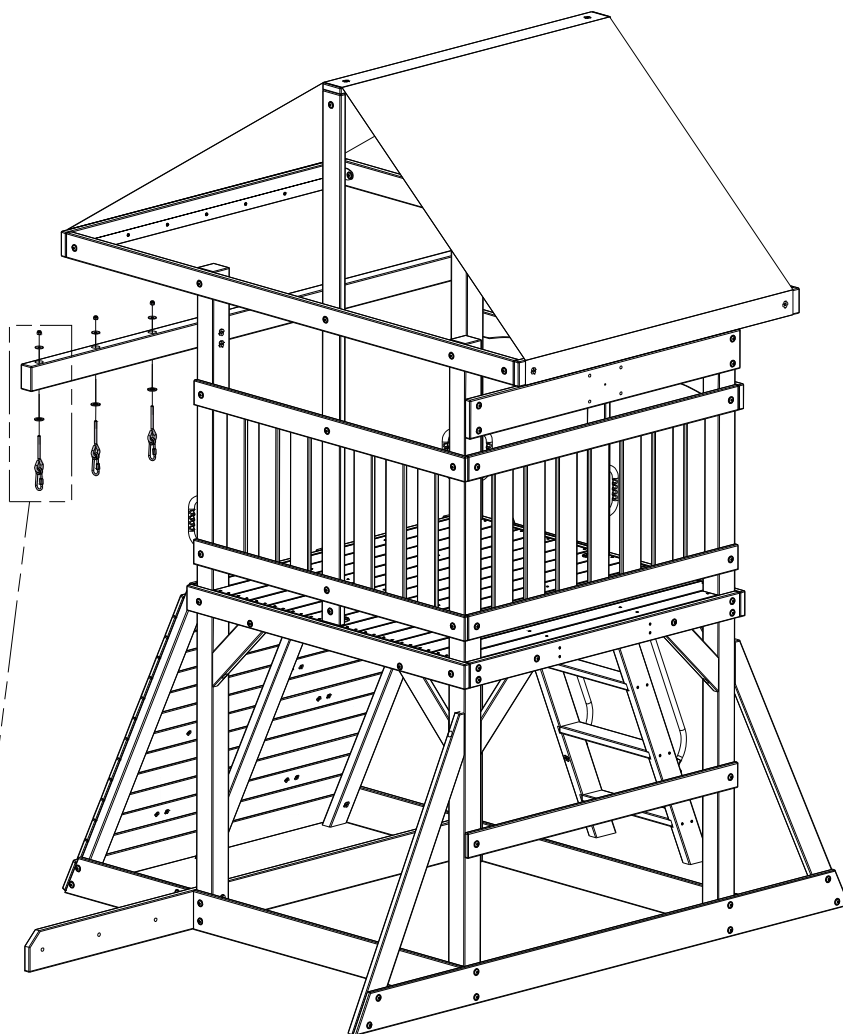

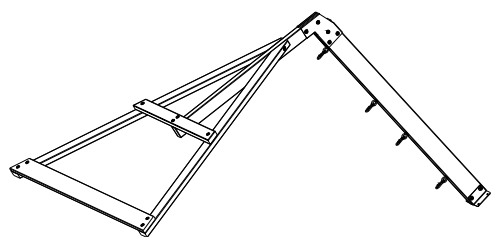


(1) | **SWING BEAM ASSEMBLY**




H100042 | BOLT HEX
(x4) | 5/16x1 1/4




H100095 | WASHER SPLIT
(x4) | 5/16



H100105 | WASHER FLAT
(x4) | 8x27

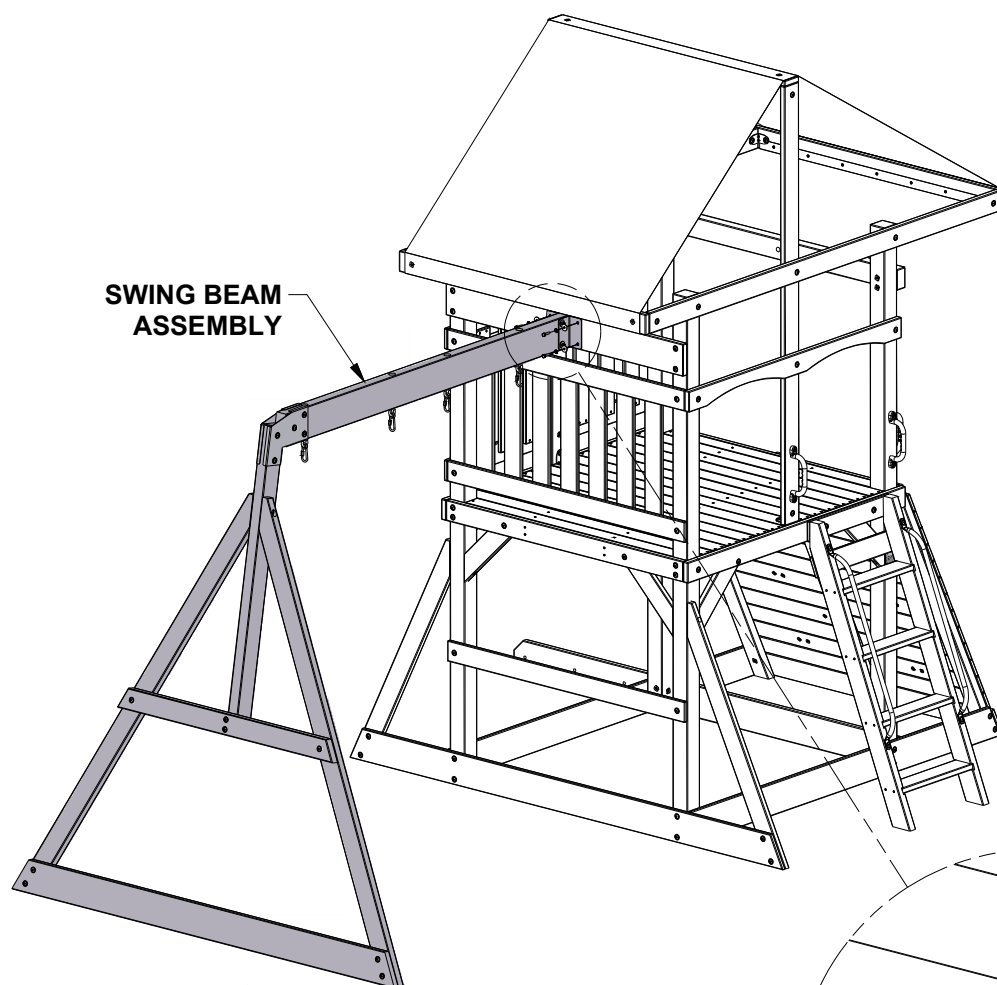


**SWING BEAM
ASSEMBLY**

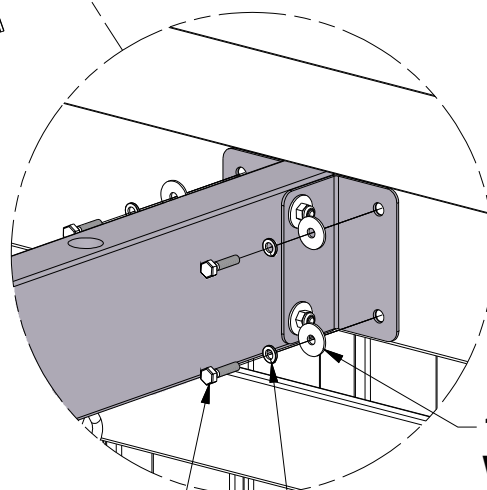

**105 (x4)
WASHER - 8x27**

**042 (x4)
BOLT HEX - 1 1/4"**

**095 (x4)
WASHER - 5/16"**



SETUP

WEB SWING

WEB SWING SETUP INSTRUCTIONS:

FOLLOW INSTRUCTIONS BELOW BEFORE USING THE WEB SWING.



H100832 | BOLT PTH BLK (with LOCTITE)
(4) 1/4x3/4




H100831 | NUT BARREL PTH BLK
(4) 1/4x3/4




IMPORTANT:
SLIDE ROPE LOOPS OVER TUBE ENDS FIRST!

SLIDE NARROW END OF TUBES INTO
LARGER OPENING AFTER SLIDING
ROPE LOOPS ONTO TUBES.

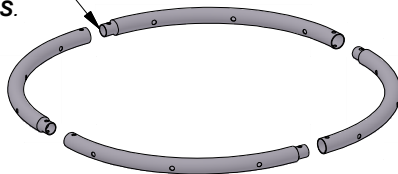

NOTE: ROPE WEBBING NOT
SHOWN IN ILLUSTRATION FOR
CLARITY.

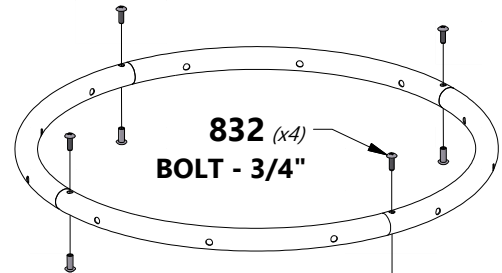

832 (x4)
BOLT - 3/4"



831 (x4)
NUT BARREL - 3/4"




Note: It is important that
the web swing hang level.



IMPORTANT
TO ENSURE STRAIGHT
SWINGING MOTION,
ADJUST BOTH
"S" BRACKETS UNTIL
WEB SEAT IS LEVEL.

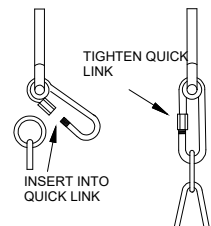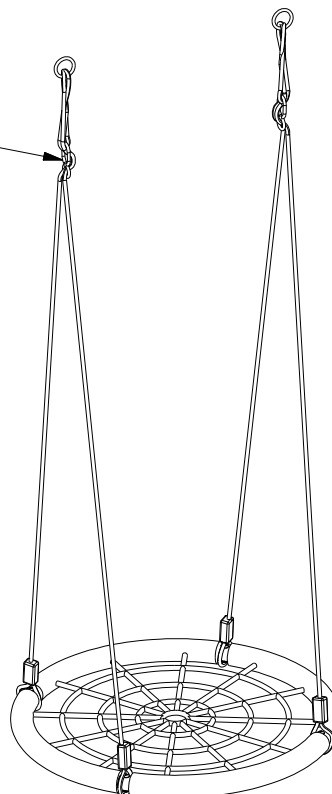



A6P00397 (x1) | **ROPE-CHAIN GR / SEAT GR 22"**





A4M01415 (x1) | **26" WEB SWING (EU)**




NOTE:

WHEN HANGING YOUR SWINGS IT IS RECOMMENDED THAT THE BOTTOM OF THE SWING SEAT, WHEN SITTING ON IT, IS LOCATED NO LOWER THAN (35 cm) 13 7/8 INCHES FROM THE GROUND.

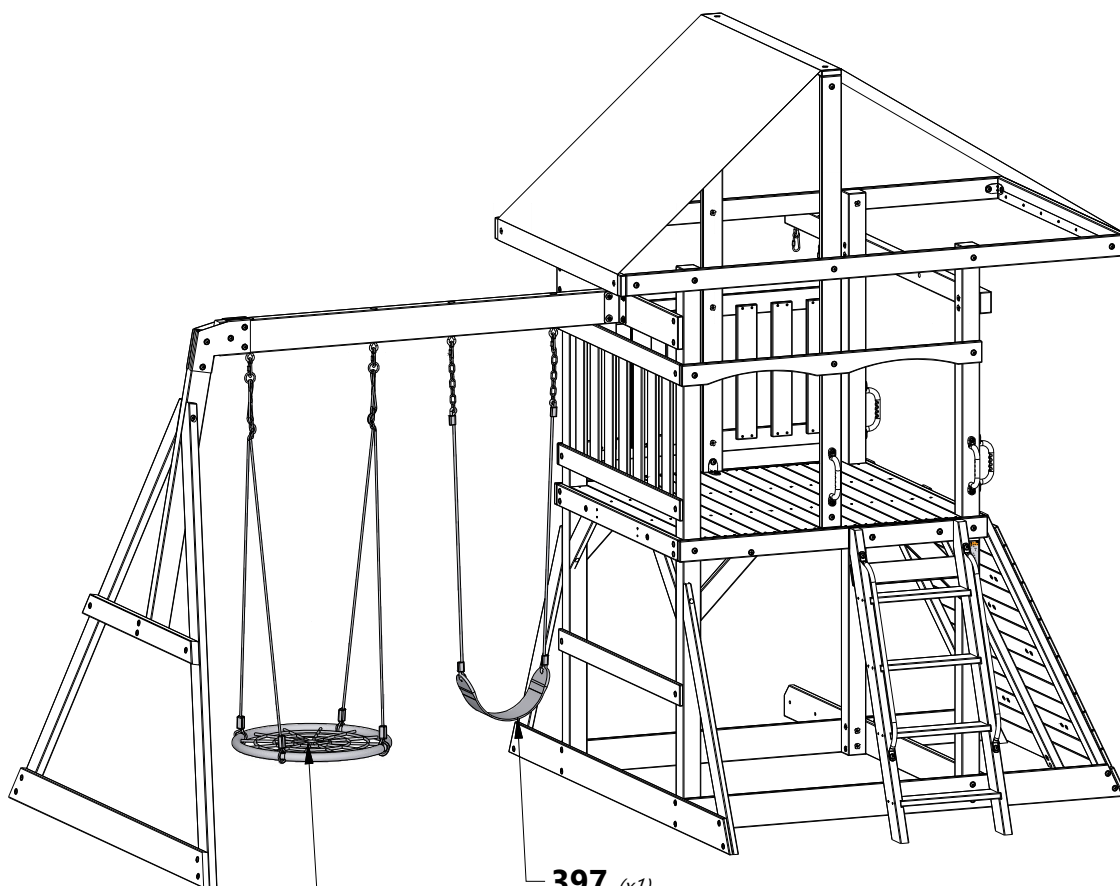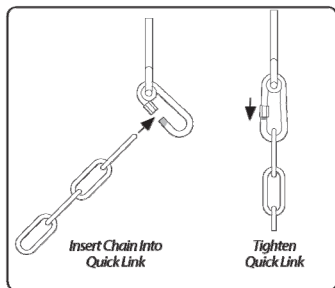


415 (x1) | **26" WEB SWING (EU)**

397 (x1) | **SWING SEAT GREEN 22"**

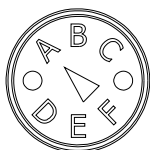


A100314 | "A" REVISION TAG
(x1)

A100164 | BYD ID TAG (LARGE) AGES 3-10
(x1)








H100128 | SCREW PWH
(x2) | 8x5/8



H100070 | SCREW PWH
(x4) | 8x3/4

LOCATE THE REVISION TAG UNDER
THE DECK ON THE CENTER JOIST.

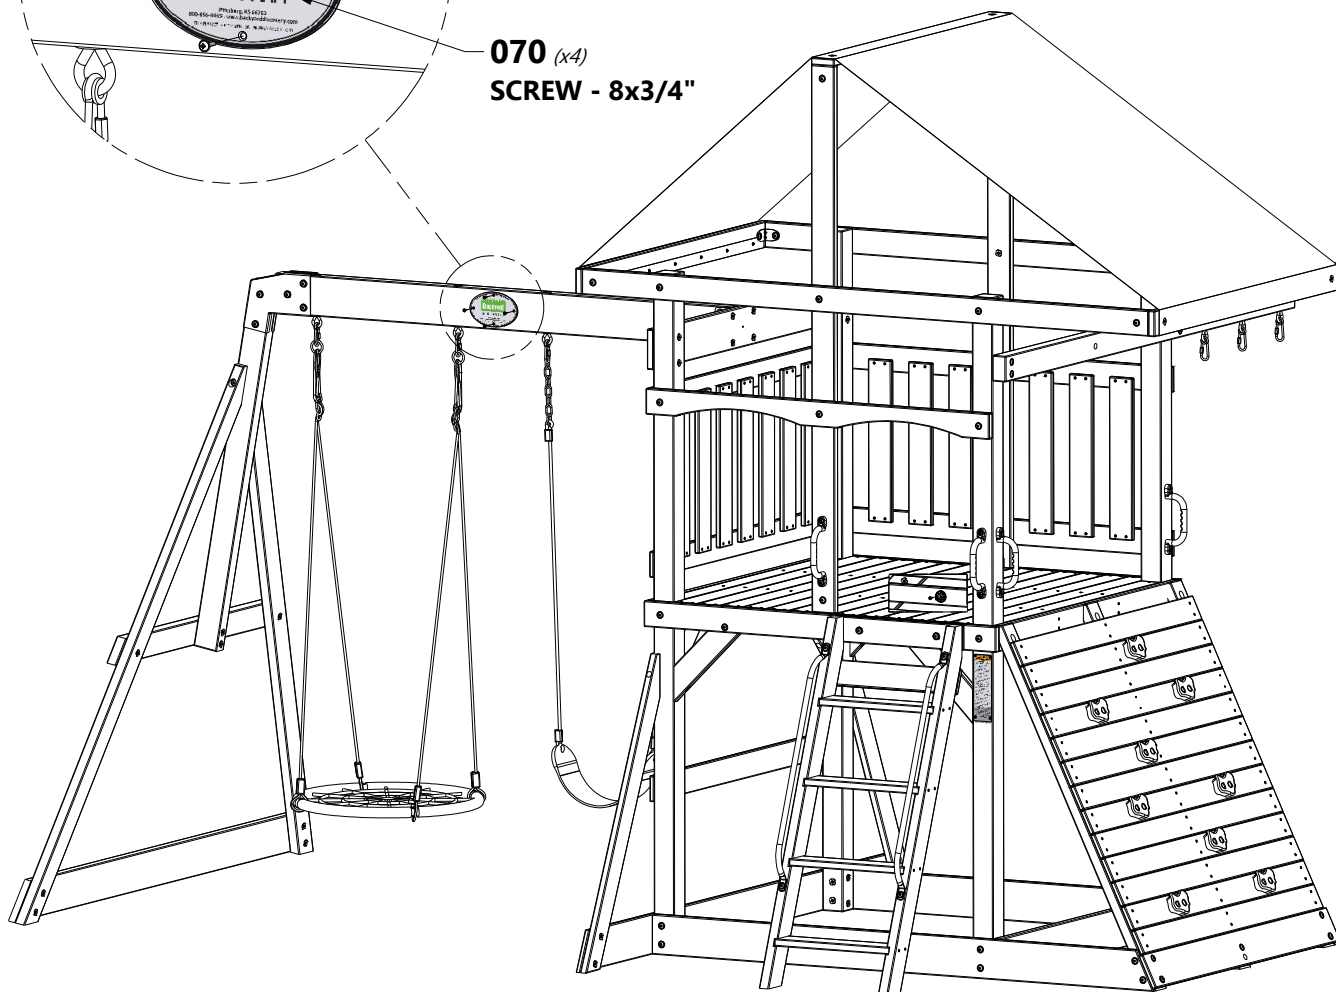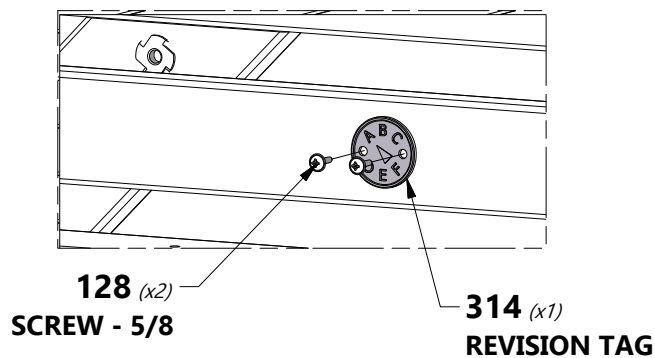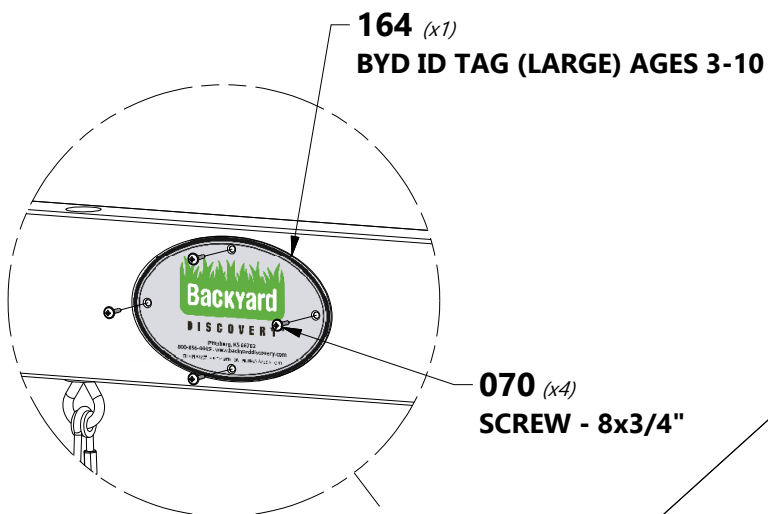

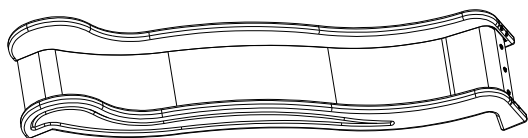



(1) SLIDE ASSEMBLY



H100115 BOLT WH
(x3) 5/16x1/2





H100074 T-NUT
(x3) 5/16

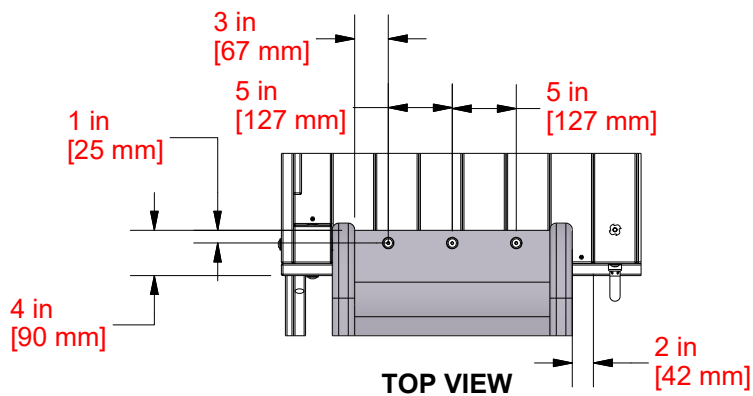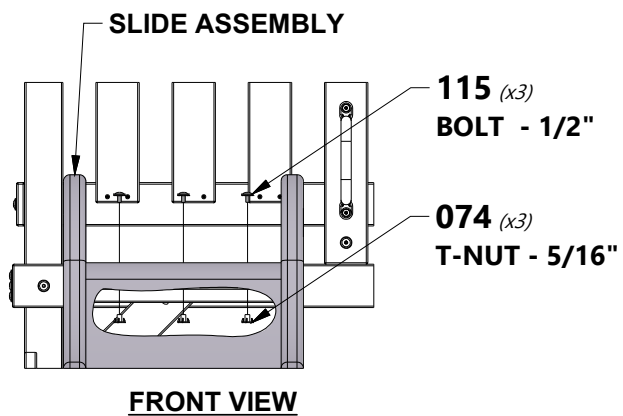


NOTE:

USING DIMENSIONS SHOWN
DRILL (3) 3/8" (10 mm) HOLES
THROUGH SLIDE & FLOOR.
ATTACHED SLIDE USING
SUPPLIED HARDWARE.

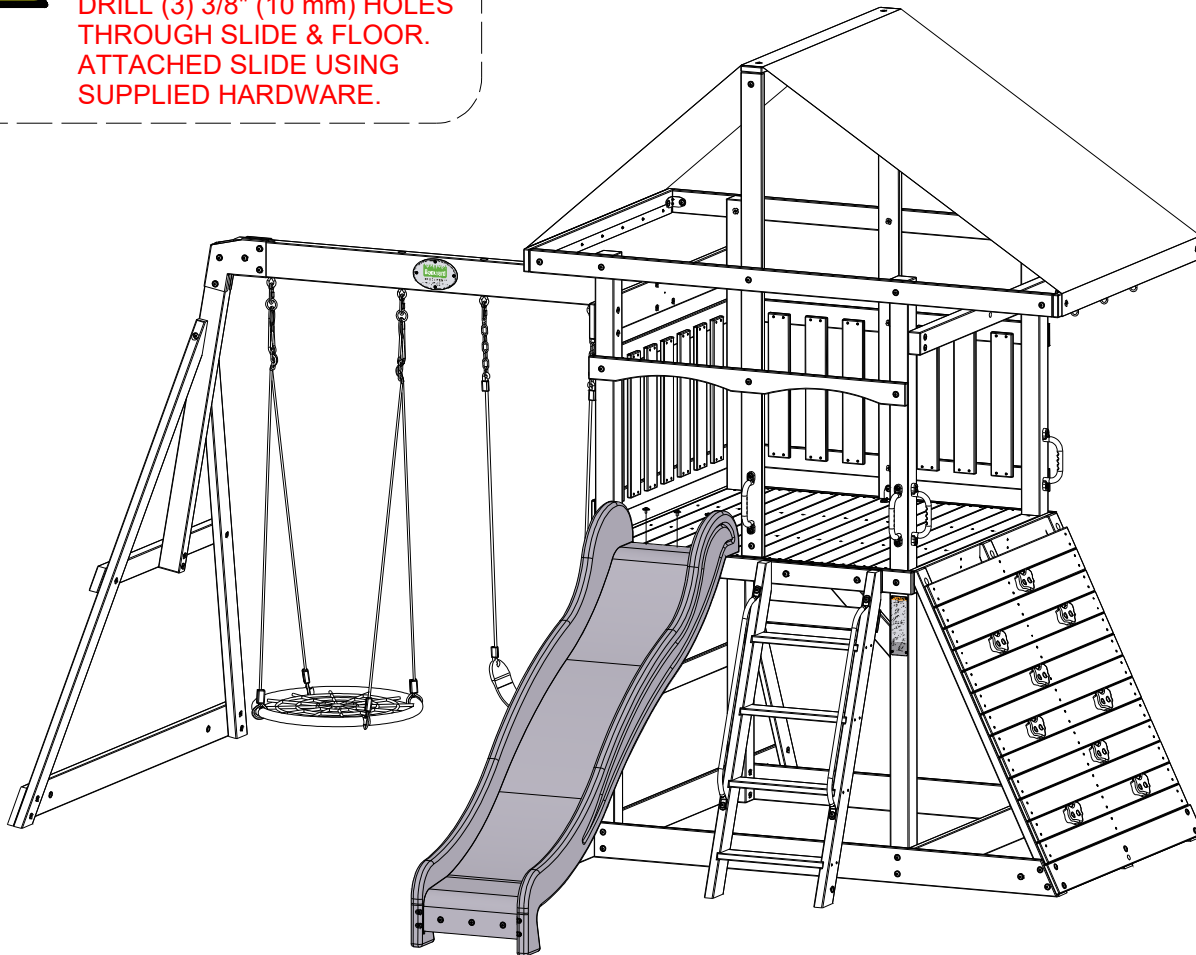

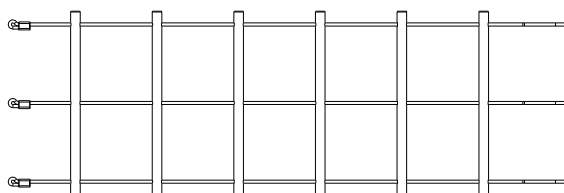


A6P00161
(x1) ROPE LADDER

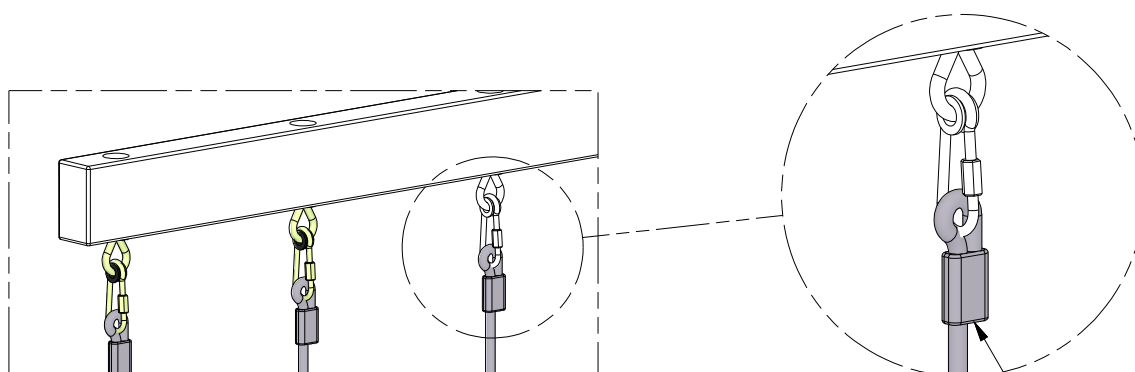




 **INSERT THE ROPE LOOPS INTO QUICK LINKS. TIGHTEN QUICK LINKS.**

LADDER ROPE ASSEMBLY

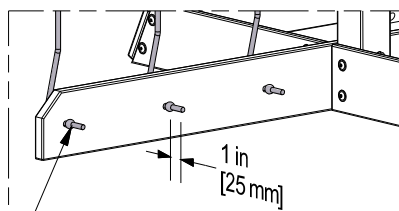


INSERT THE ROPE ENDS THROUGH THE PRE-DRILLED HOLES. MEASURE APPROXIMATELY 1 INCH UP FROM THE ROPE ENDS AND TIE A KNOT IN EACH ROPE TO SECURE THE ROPE LADDER ASSEMBLY.

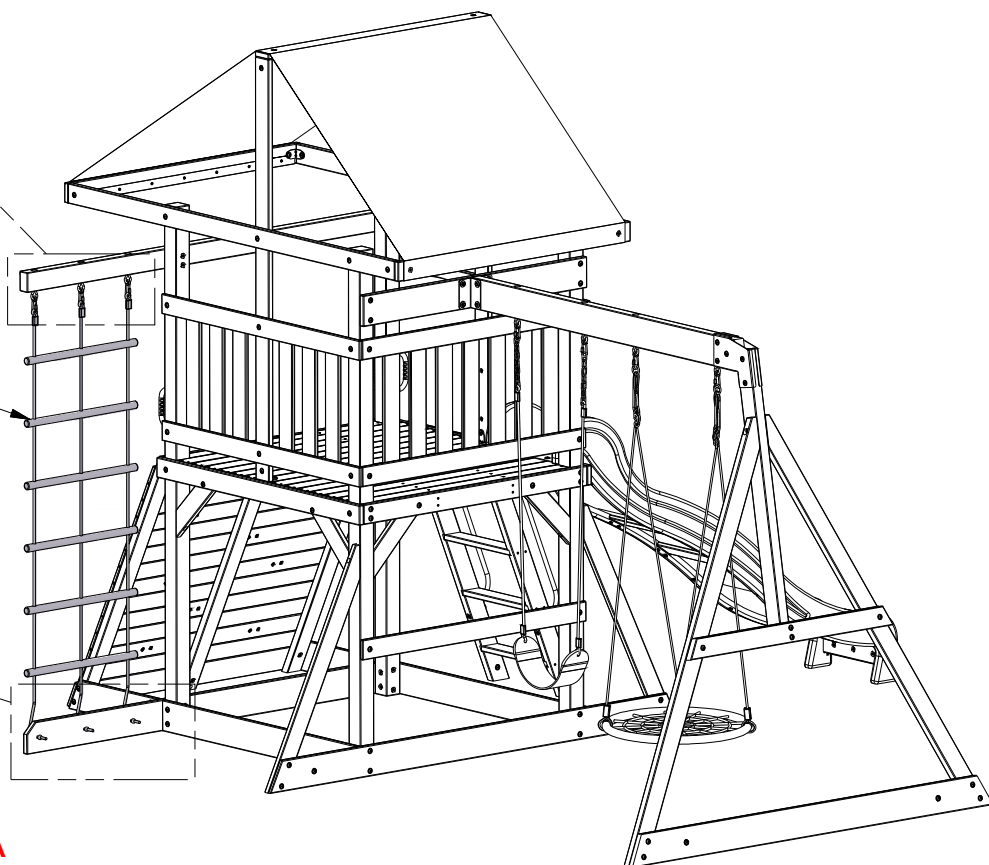

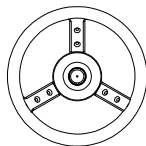

A100107 | **STEERING WHEEL**
(x1)


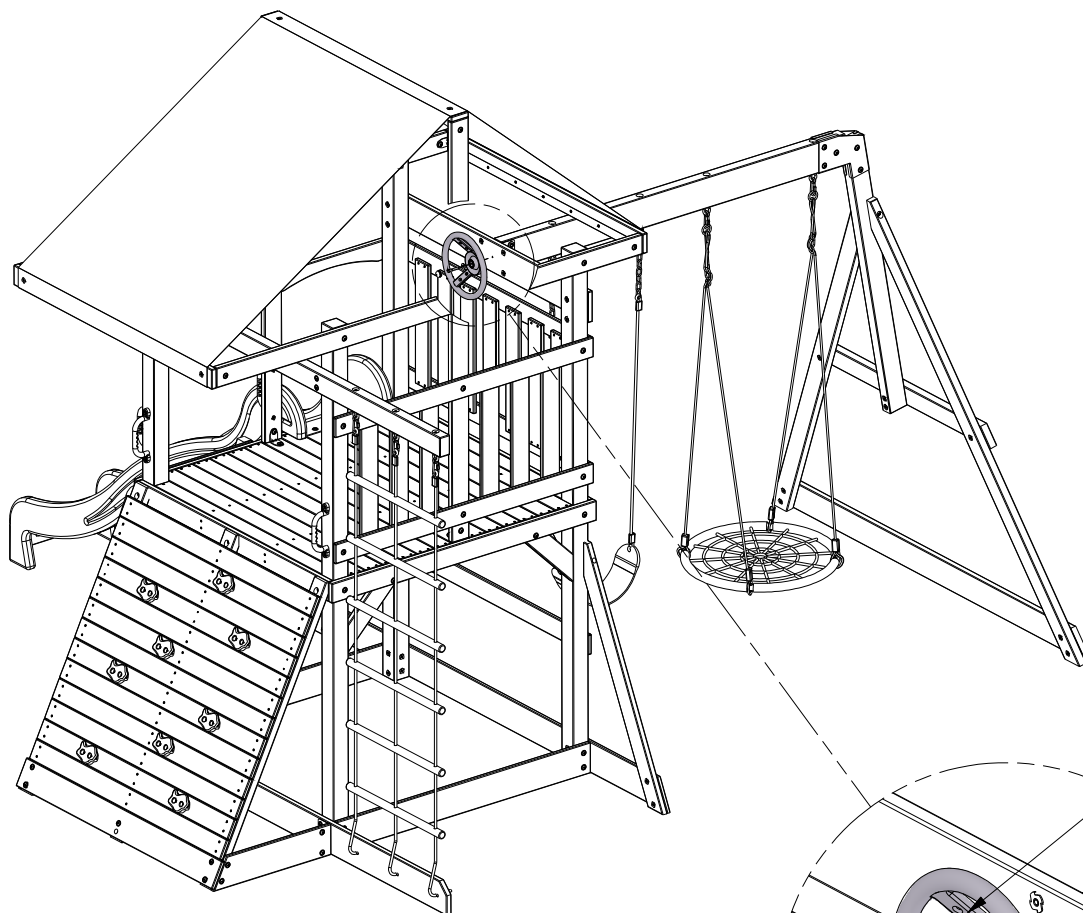


107 (x1)
STEERING WHEEL


(x1) **CENTER CAP**
(INCLUDED WITH STEERING WHEEL)

(x1) **LAG SCREW HEX 5/16x2**
(INCLUDED WITH STEERING WHEEL)

(x1) **WASHER FLAT OD23xID8.25x2THK**
(INCLUDED WITH STEERING WHEEL)



A6P00096 | TELESCOPE
(x1)



H100087 | SCREW PFH
(x2) | 8x1 1/4"






NOTE:

PILOT DRILL, IN DESIRED LOCATION, USING A 1/8" (3 mm) DRILL BIT.


096 (x1)
TELESCOPE

087 (x2)
SCREW - 1-1/4"


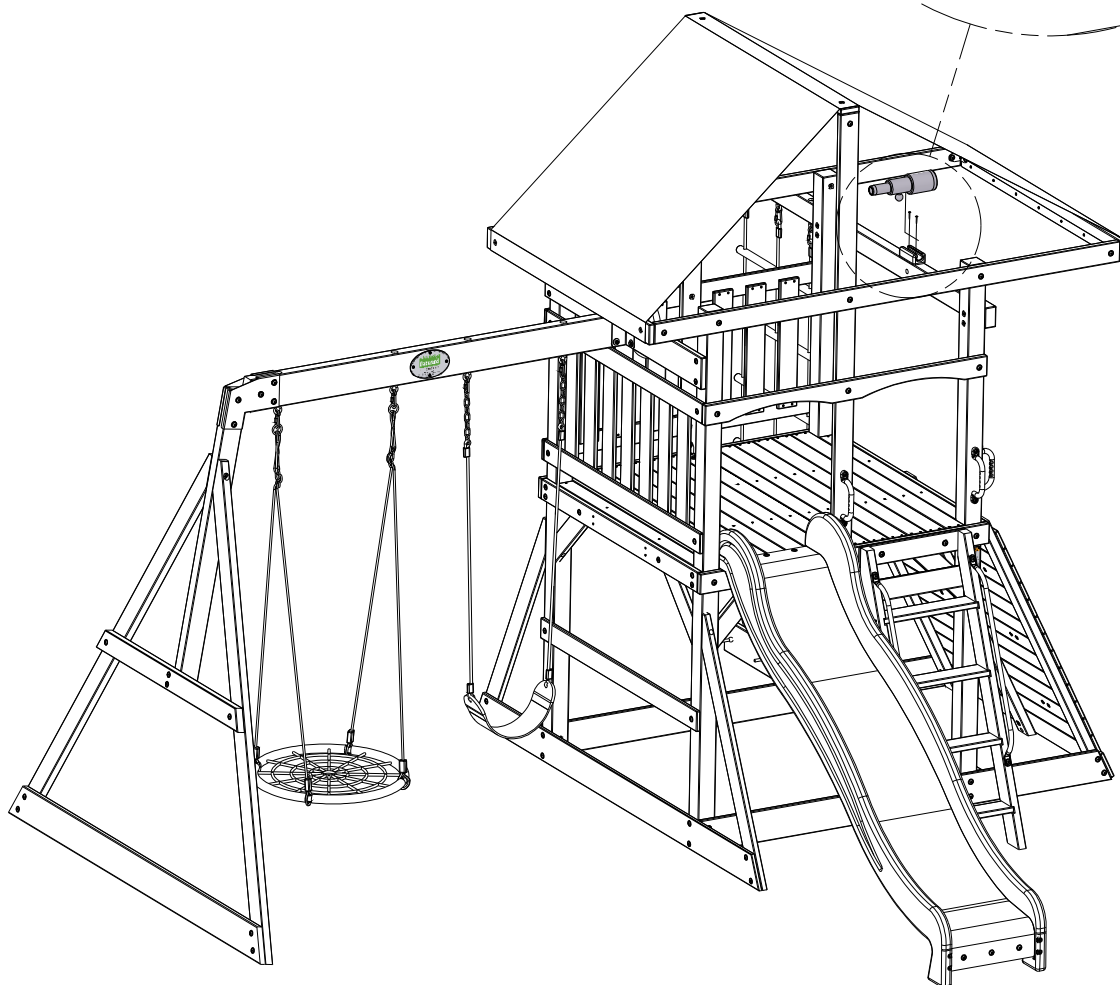


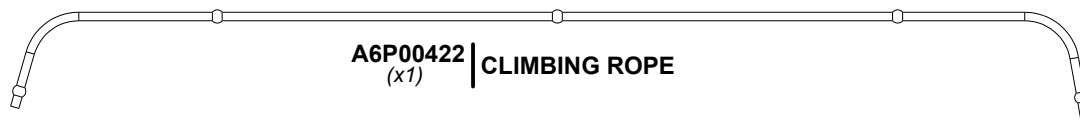

NOTE:
BEFORE ATTACHING ROPE, ADD THREE
KNOTS EVENLY SPACED

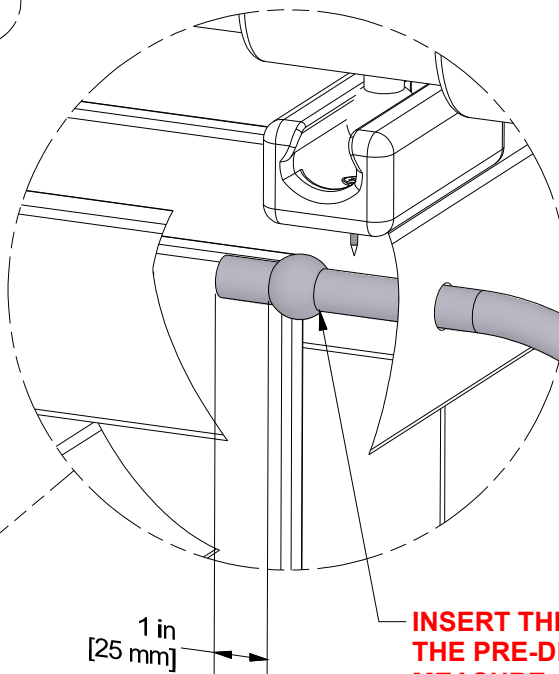


**INSERT THE ROPE END THROUGH
THE PRE-DRILLED HOLE.
MEASURE APPROXIMATELY 1 INCH
UP FROM THE ROPE END AND TIE A
KNOT IN THE ROPE TO SECURE.**

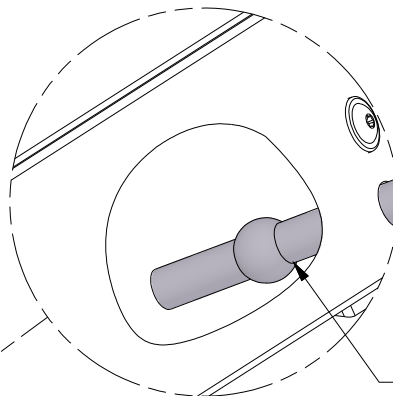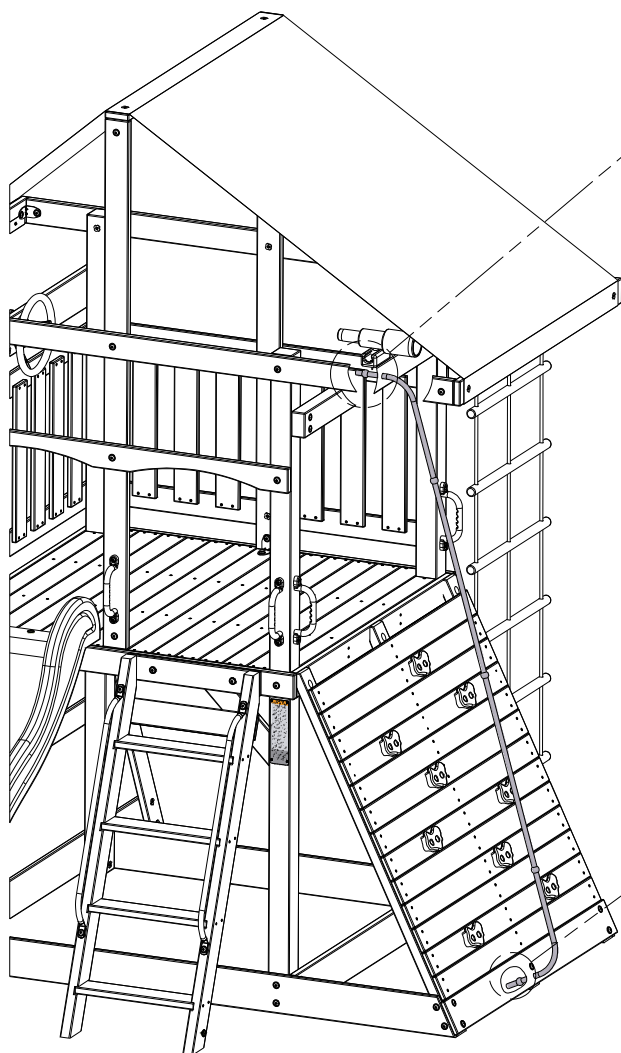


**INSERT THE ROPE END THROUGH
THE PRE-DRILLED HOLE.
PULL TIGHT AND TIE A
KNOT IN THE ROPE TO SECURE.**




A100178 | AUGER GROUND STAKE
(x7)



H100009 | BOLT WH
(x1) | 5/16x1 1/4



H100008 | BOLT WH
(x2) | 5/16x1




H100222 | BOLT WH
(x4) | 5/16x3/4



H100031 | WASHER LOCK
(7) | EXT
12x19



H100004 | NUT BARREL WH
(x6) | 5/16 x 5/8



H100005 | NUT BARREL WH
(x1) | 5/16x7/8




NOTE:

TWIST GROUND STAKE INTO THE GROUND WHERE SHOWN. THEN USING GROUND STAKE AS A GUIDE, DRILL A 7/16" (10mm) HOLE FOR HARDWARE.



NOTE:

GROUND STAKE LOCATIONS REPEAT ON OPPOSITE SIDE.

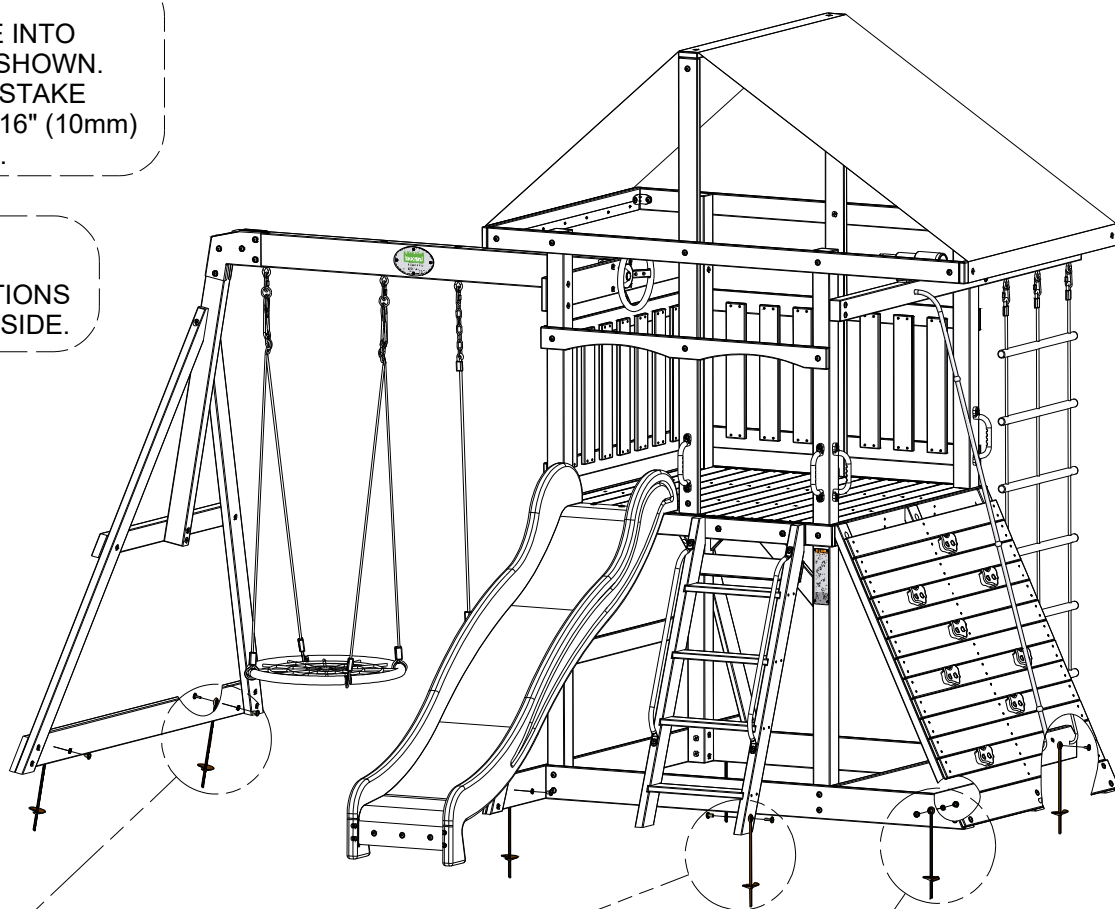

031 (x2)

WASHER - 12x19

008 (x2)

BOLT - 5/16x1"

004 (x2)

NUT BARREL - 5/8"

005 (x1)

NUT BARREL - 7/8"

031 (x1)

WASHER - 12x19

178 (x7)

AUGER GROUND STAKE

222 (x4)

BOLT - 3/4"

009 (x1)

BOLT - 1 1/4"

004 (x4)

NUT BARREL - 5/8"

031 (x4)

WASHER - 12x19