



Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Backyard Discovery Australia Pty Ltd 2/7 Hood Street, Hampton VIC 3188, Phone: 1800-087-941

SAXONY GRILL GAZEBO AUS

MODEL # : 2104631D



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order replacement parts *Para obtener instrucciones en español, visite* www.backyarddiscovery.com



EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP




OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings, concrete pad or deck to attach your structure


- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.

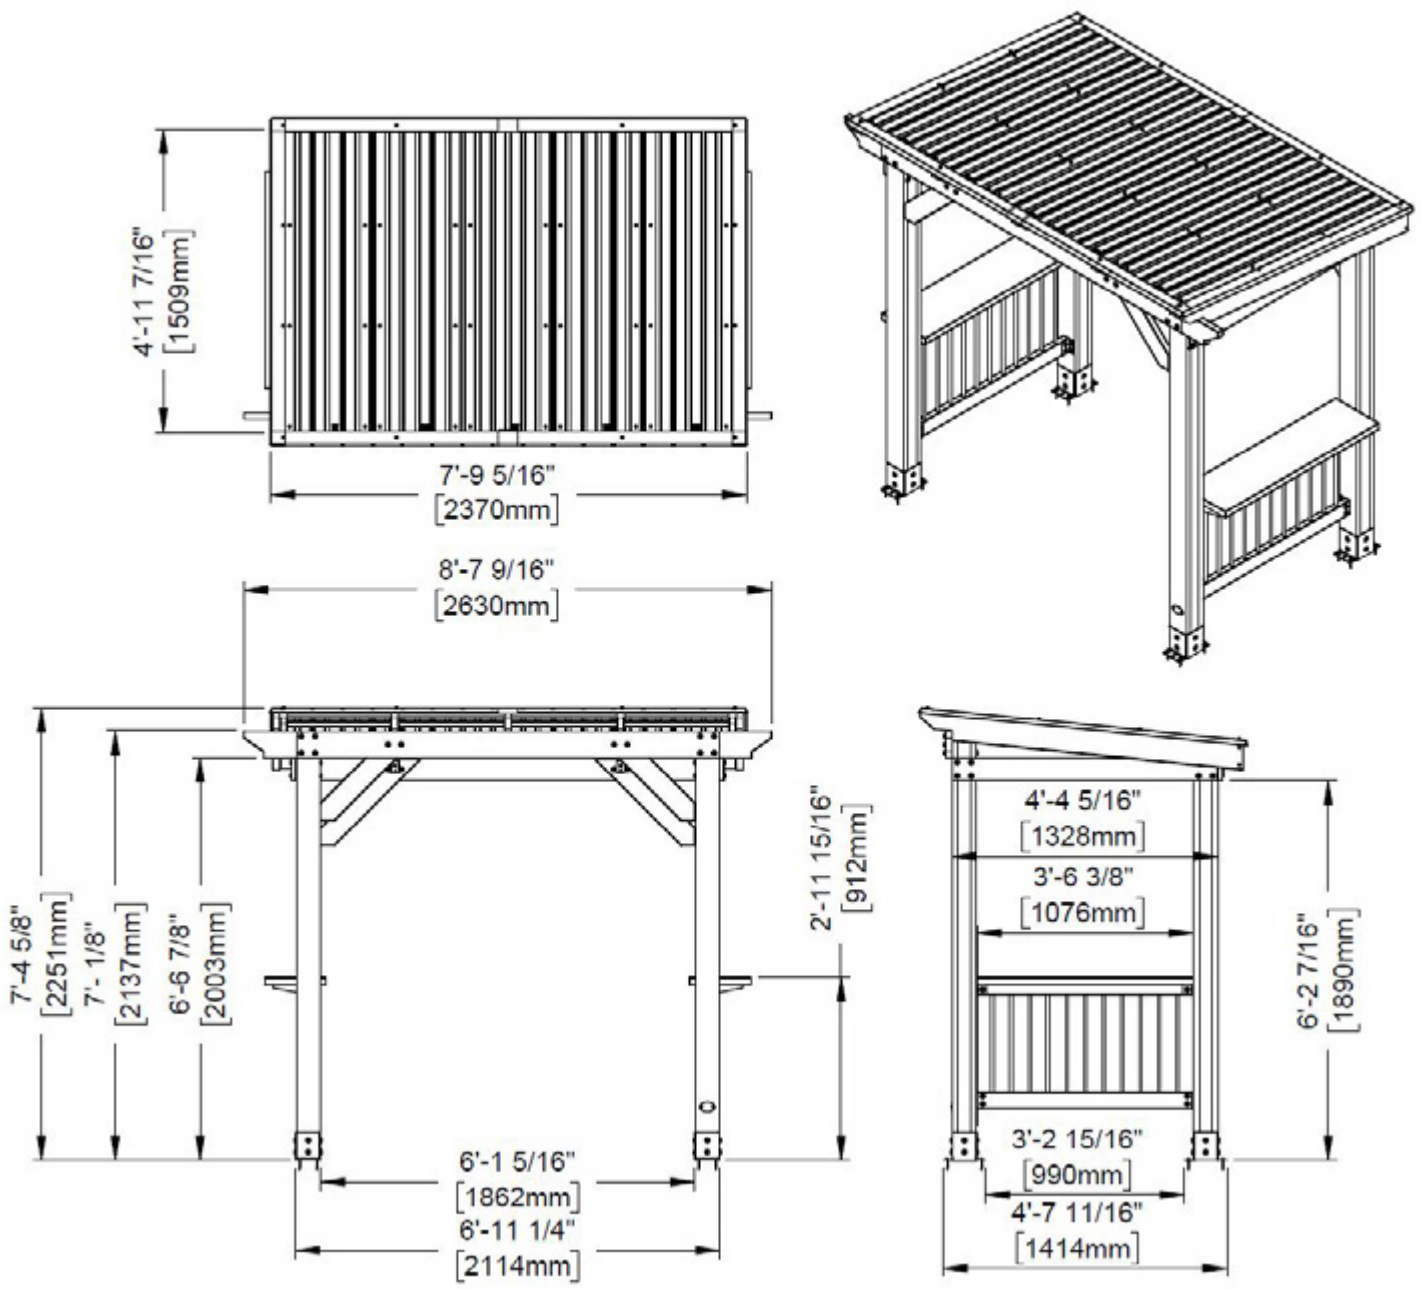

OWNER'S MANUAL - ANCHORING LAYOUT

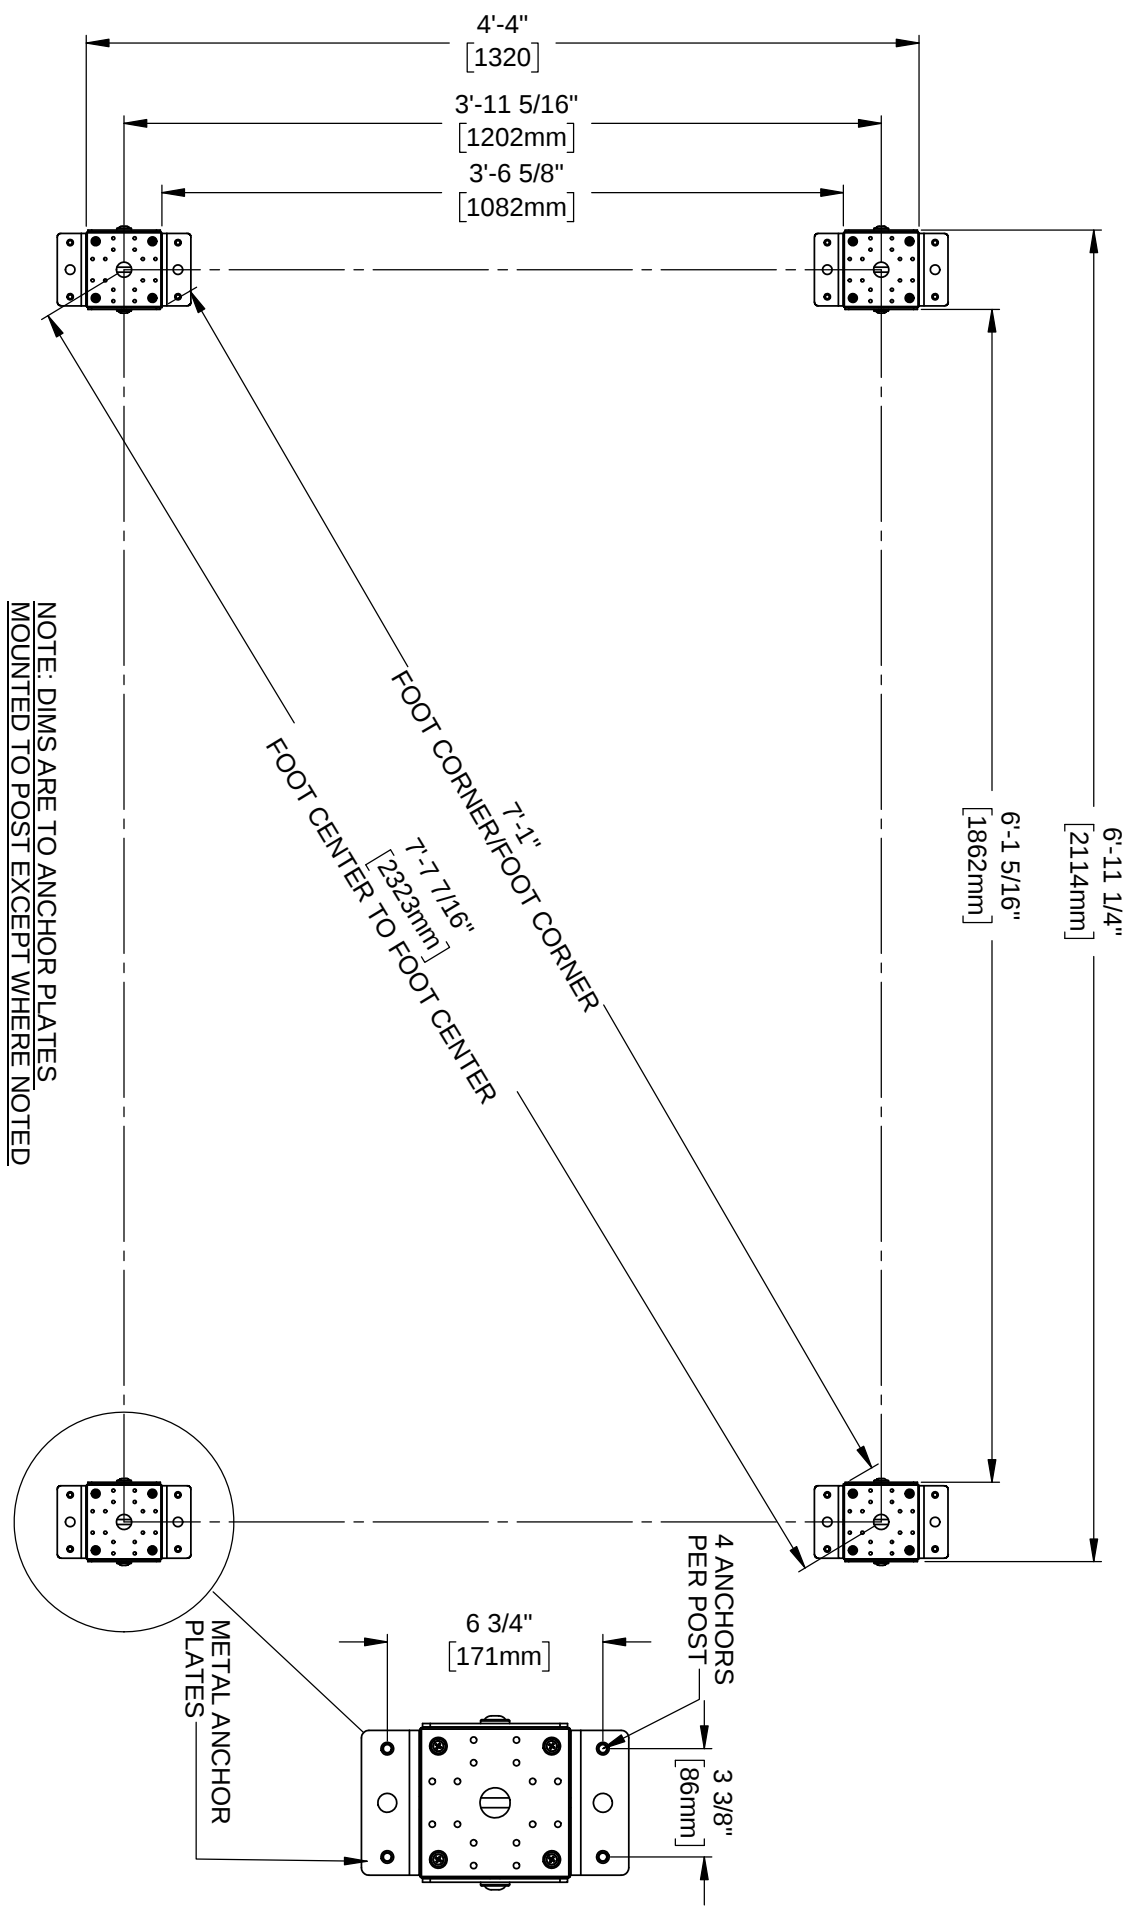


OWNER'S MANUAL - PARTS IDENTIFICATION


Wood Components (Not to Scale)



D1 | JOIST END-W4L16247
(1) | 1 7/16"x5 1/4"x15" (36x134x381)

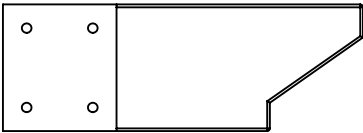

D2 | JOIST END-W4L16248
(1) | 1 7/16"x5 1/4"x15" (36x134x381)



D3 | JOIST-W4L16249
(1) | 1 7/16"x5 1/4"x83" (36x134x2108)




D4 | CORBEL-W4L16250
(2) | 1 7/16"x4 7/16"x26 1/2" (36x112x673)




D5 | CORBEL-W4L16251
(1) | 1 7/16"x4 7/16"x25 7/8" (36x112x657)



D6 | BEAM-W4L16252
(1) | 1 7/16"x5 1/4"x64" (36x134x1626)



D8 | BEAM-W4L16254
(1) | 1 7/16"x5 1/4"x64" (36x134x1626)



D7 | BEAM-W4L16253
(1) | 1 7/16"x5 1/4"x89 7/16" (36x134x2272)



E1 | RAFTER-W4L16255
(2) | 1 7/16"x3 3/8"x62 3/8" (36x86x1585)



E2 | RAIL-W4L16256
(4) | 1 7/16"x3 3/8"x42 3/8" (36x86x1076)



E3 | RAFTER-W4L16257
(1) | 1 7/16"x3 3/8"x62 3/8" (36x86x1585)

OWNER'S MANUAL - PARTS IDENTIFICATION

Wood Components (Not to Scale)




F1 | RAFTER-W4L16258
(2) | 1 7/16"x2 3/8"x62 1/4" (36x60x1582)




H2 | PURLIN-W4L16259
(3) | 15/16"x3 3/8"x89 7/16" (24x86x2272)



Q1 | RAIL-W4L16260
(2) | 15/16"x4 7/16"x52 1/16" (24x112x1322)



Q2 | RAIL-W4L16261
(1) | 15/16"x4 7/16"x84 7/8" (24x112x2156)




P1 | POST-W2A03385
(1) | 4 3/4"x4 3/4"x78 1/4" (120x120x1987)



P2 | POST-W2A03386
(1) | 4 3/4"x4 3/4"x83 1/2" (120x120x2121)



P3 | POST-W2A03387
(1) | 4 3/4"x4 3/4"x78 1/4" (120x120x1987)




P4 | POST-W2A03388
(1) | 4 3/4"x4 3/4"x83 1/2" (120x120x2121)



D9 | CORBEL W/ ID TAG-W2A03389
(1) | 1 7/16"x4 7/16"x25 7/8" (36x112x657)

OWNER'S MANUAL - PARTS IDENTIFICATION

Hardware Components (Not to Scale)




H100964 | BOLT WH BLK
(9) | 5/16 x 5-1/2



H100653 | NUT LOCK BLK
(4) | 1/4



H100201 | SCREW PFH BLK
(7) | 8 x 2-1/2




H100480 | BOLT WH BLK
(34) | 5/16 x 4-3/4



H100630 | WASHER FLAT BLK
(22) | 8 x 19



H100382 | SCREW PFH BLK
(16) | 8 x 1-3/4




H100205 | BOLT WH BLK
(4) | 5/16 x 2-1/4




H100469 | NUT BARREL WH BLK
(26) | 5/16 x 5/8



H100200 | SCREW PFH BLK
(17) | 8 x 1-1/2




H100457 | BOLT WH BLK
(4) | 5/16 x 2




H100192 | NUT BARREL WH BLK
(9) | 5/16 x 7/8



H100536 | SCREW PWH BLK
(9) | 8 x 1-1/4




H100459 | BOLT WH BLK
(18) | 5/16 x 1-1/4



H100193 | NUT BARREL WH BLK
(34) | 5/16 x 1-1/2




H100392 | SCREW PWH BLK
(2) | 8 x 3/4




H100488 | BOLT WH BLK
(4) | 1/4 x 2



H100405 | WASHER LOCK EXT BLK
(4) | 6 x 15




H100759 | SCREW TAPPING
(15) | 1/4 x 3/4




H100564 | LAG SCREW WH BLK
(4) | 1/4 x 4



H100198 | WASHER LOCK EXT BLK
(44) | 8 x 19




H101008 | SCREW CONFIRMAT BLK
(11) | 7 x 3



H100471 | LAG SCREW WH BLK
(42) | 5/16 x 1-1/2




H100199 | WASHER LOCK EXT BLK
(52) | 12 x 19




H100120 | CONCRETE ANCHOR 1/4"x2"
(18)



H101106 | HEX DRIVER
(1) | 5/16



H100764 | SCREW SETTER
(1)



H100147 | T-30 TORX BIT
(1)



H101100 | MAGNETIC DRIVER
(1)




H100114 | TORX WRENCH
(1) | T-30

OWNER'S MANUAL - PARTS IDENTIFICATION


Accessory Components (Not to Scale)




A4M02688 | ROOF EDGE TRIM
(2)




A4M02687 | ROOF EDGE TRIM
(4)

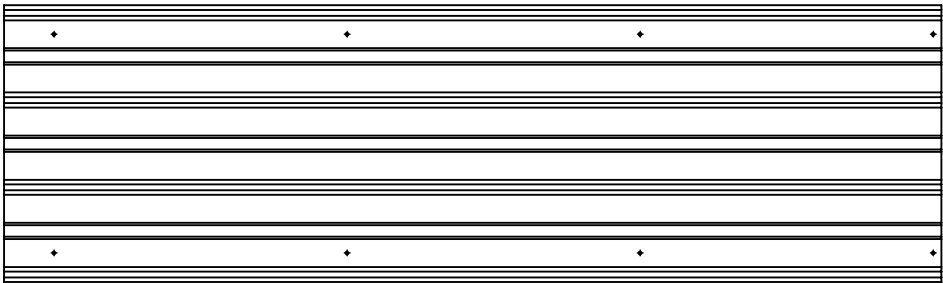


A4M02667 | 29 GA STEEL SHEETING
(5)

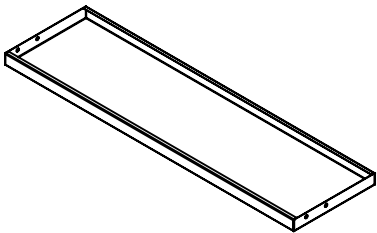

A4M01210 | TABLE
(2)




A4M01224 | L BRACKET
(2)



A4M01223 | L BRACKET
(2)




A100241 | BYD ID TAG
(1)




A4M00855 | L BRACKET 51x32x82x3.175
(8)




A4M01477 | POST PLATE
(8)

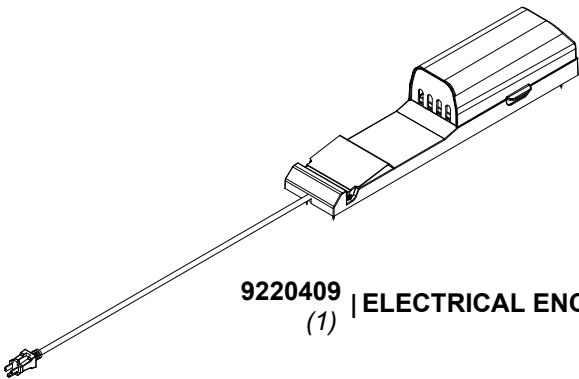

9220409 | ELECTRICAL ENCLOSURE
(1)

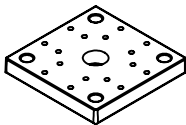


A6P00500 | PLASTIC POST FOOT
(4)




A4M01478 | POST ANCHORING
PLATE
(8)



A4M01228 | RAFTER BRACKET
(4)



A4M02686 | ROOF EDGE TRIM SPLICE
(2)

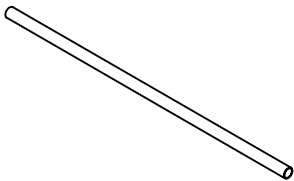

A4M01225 | METAL TUBE
(22)

PRE-ASSEMBLY STEP 1 - TOOLS REQUIRED



Cordless Drill or
Electric Drill



Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" &
7/16" Drill Bits



Phillips Screw Driver



Open End
Wrenches 1/2" &
7/16"




3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets, 1/2" &
7/16" Deep Sockets



Tape Measure



Claw Hammer

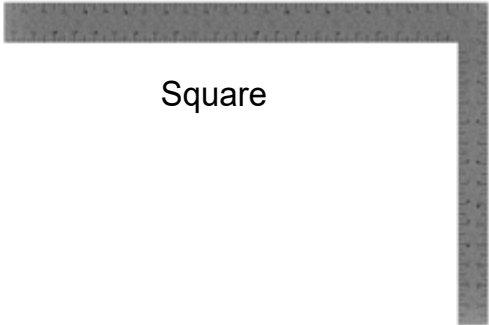

Square



Level 24"



Rubber Mallet -
Optional

PRE-ASSEMBLY STEP 2 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

WOOD PARTS:


- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.



HARDWARE PARTS:


- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

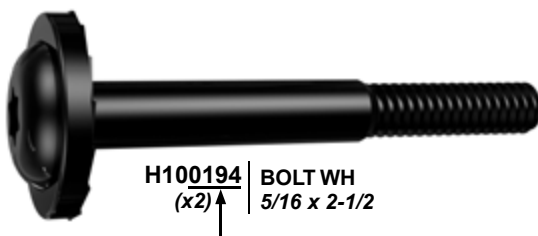

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.

1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)

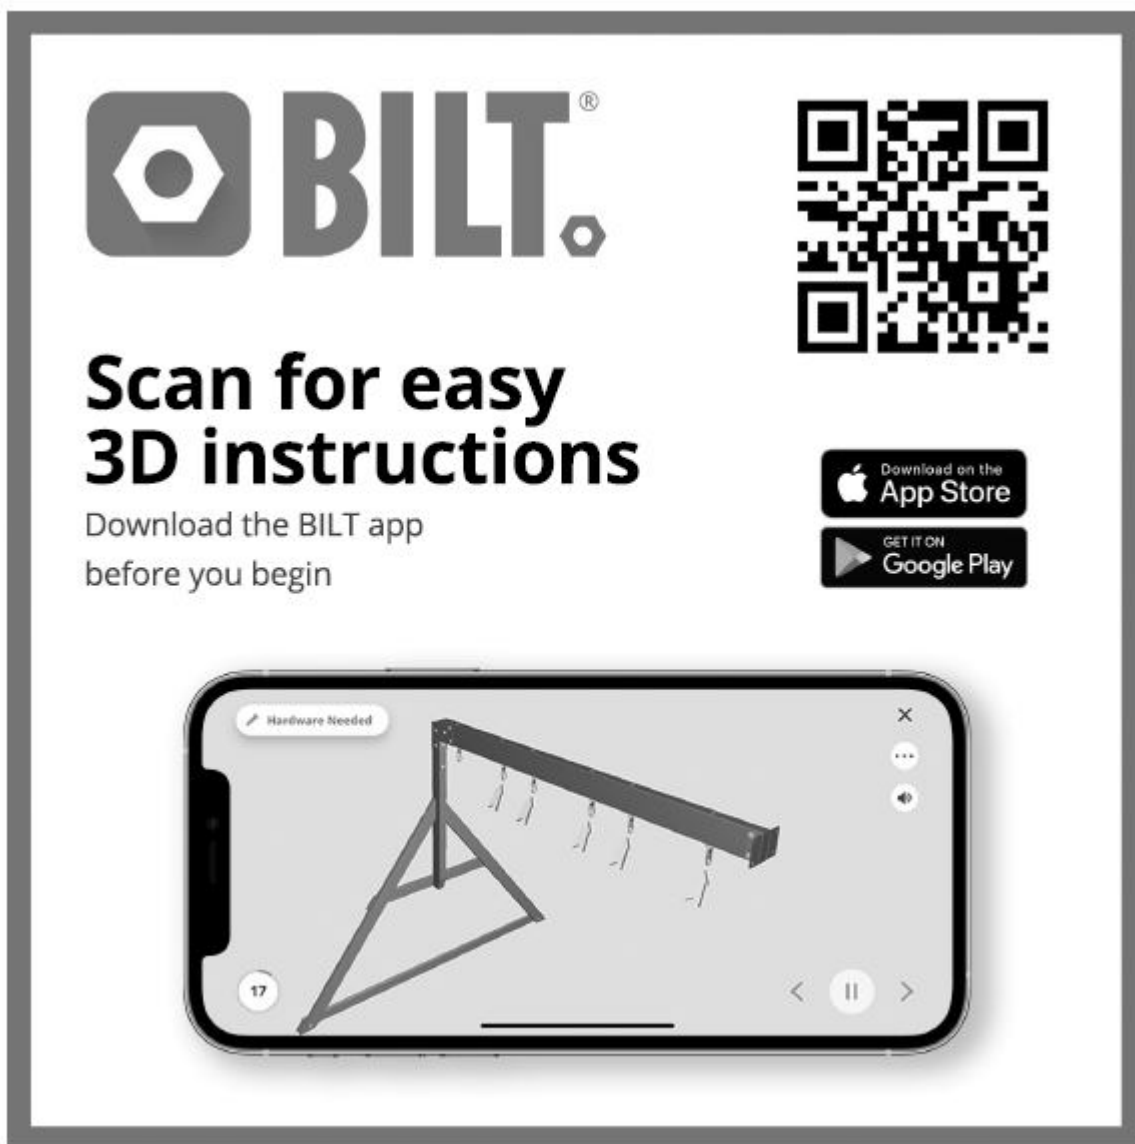

STEP 4 - GAZEBO FRAME ASSEMBLY



P1 | POST-W2A03385
(1) | 4 3/4"x4 3/4"x78 1/4" (120x120x1987)




P2 | POST-W2A03386
(1) | 4 3/4"x4 3/4"x83 1/2" (120x120x2121)



P3 | POST-W2A03387
(1) | 4 3/4"x4 3/4"x78 1/4" (120x120x1987)




P4 | POST-W2A03388
(1) | 4 3/4"x4 3/4"x83 1/2" (120x120x2121)

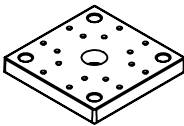

A6P00500
(4) | PLASTIC POST FOOT

QTY.	PART NUMBER	DESCRIPTION
16	H100200	SCREW PFH 8 X 1 1/2 BLK

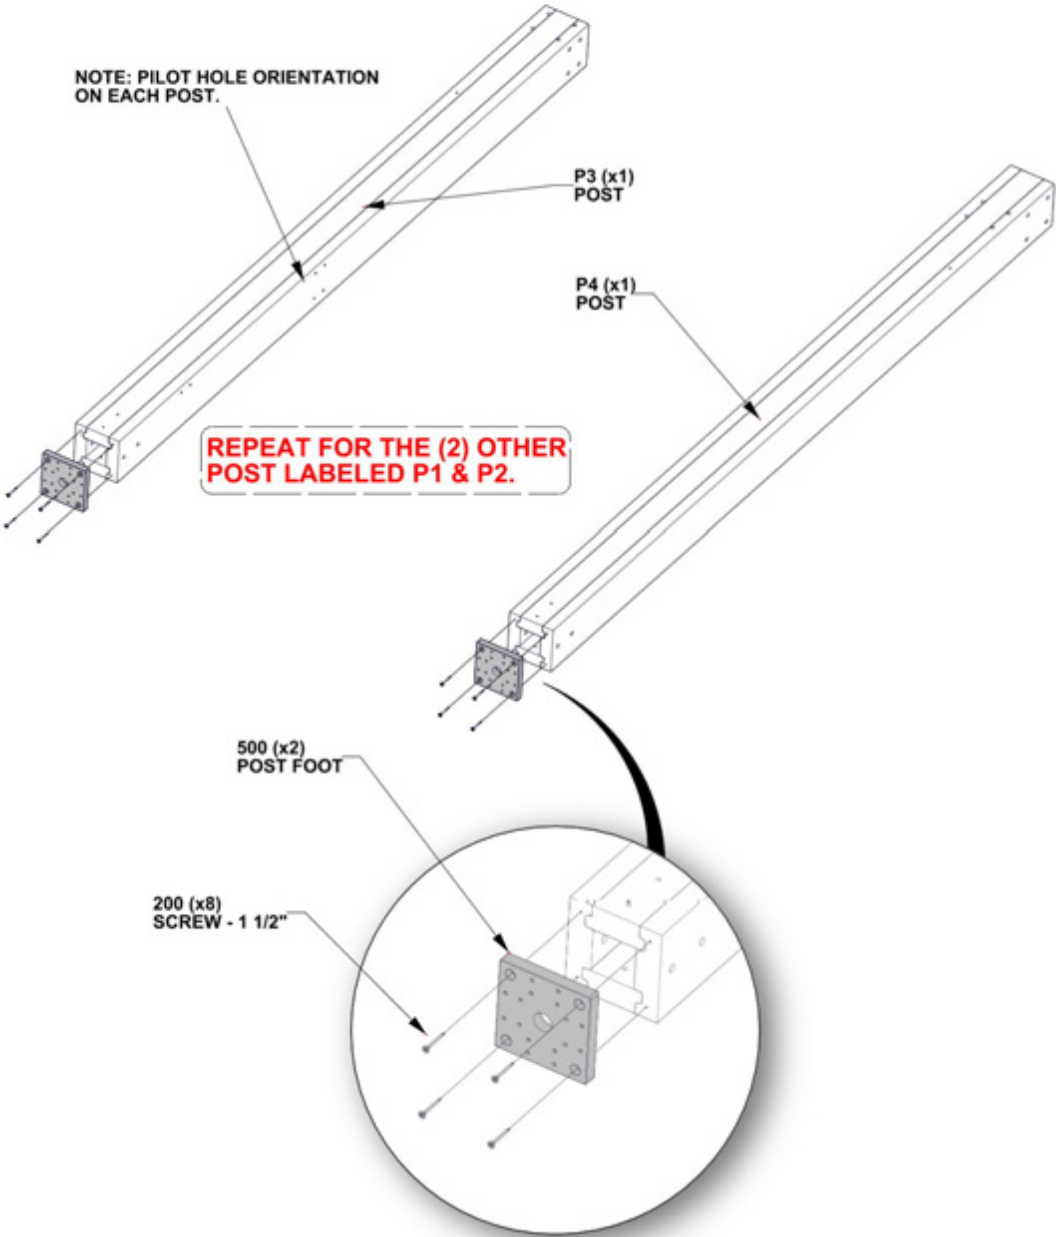


STEP 5 - GAZEBO FRAME ASSEMBLY




Q1 | RAIL-W4L16260
(1) | 15/16"x4 7/16"x52 1/16" (24x112x1322)

QTY.	PART NUMBER	DESCRIPTION
8	H100480	BOLT WH 5/16 X 4 3/4 BLK
8	H100199	WASHER LOCK EXT 12X18 BLK
8	H100193	NUT BARREL WH 5/16 X 1 1/2 BLK
8	H100198	WASHER LOCK EXT 8X19 BLK

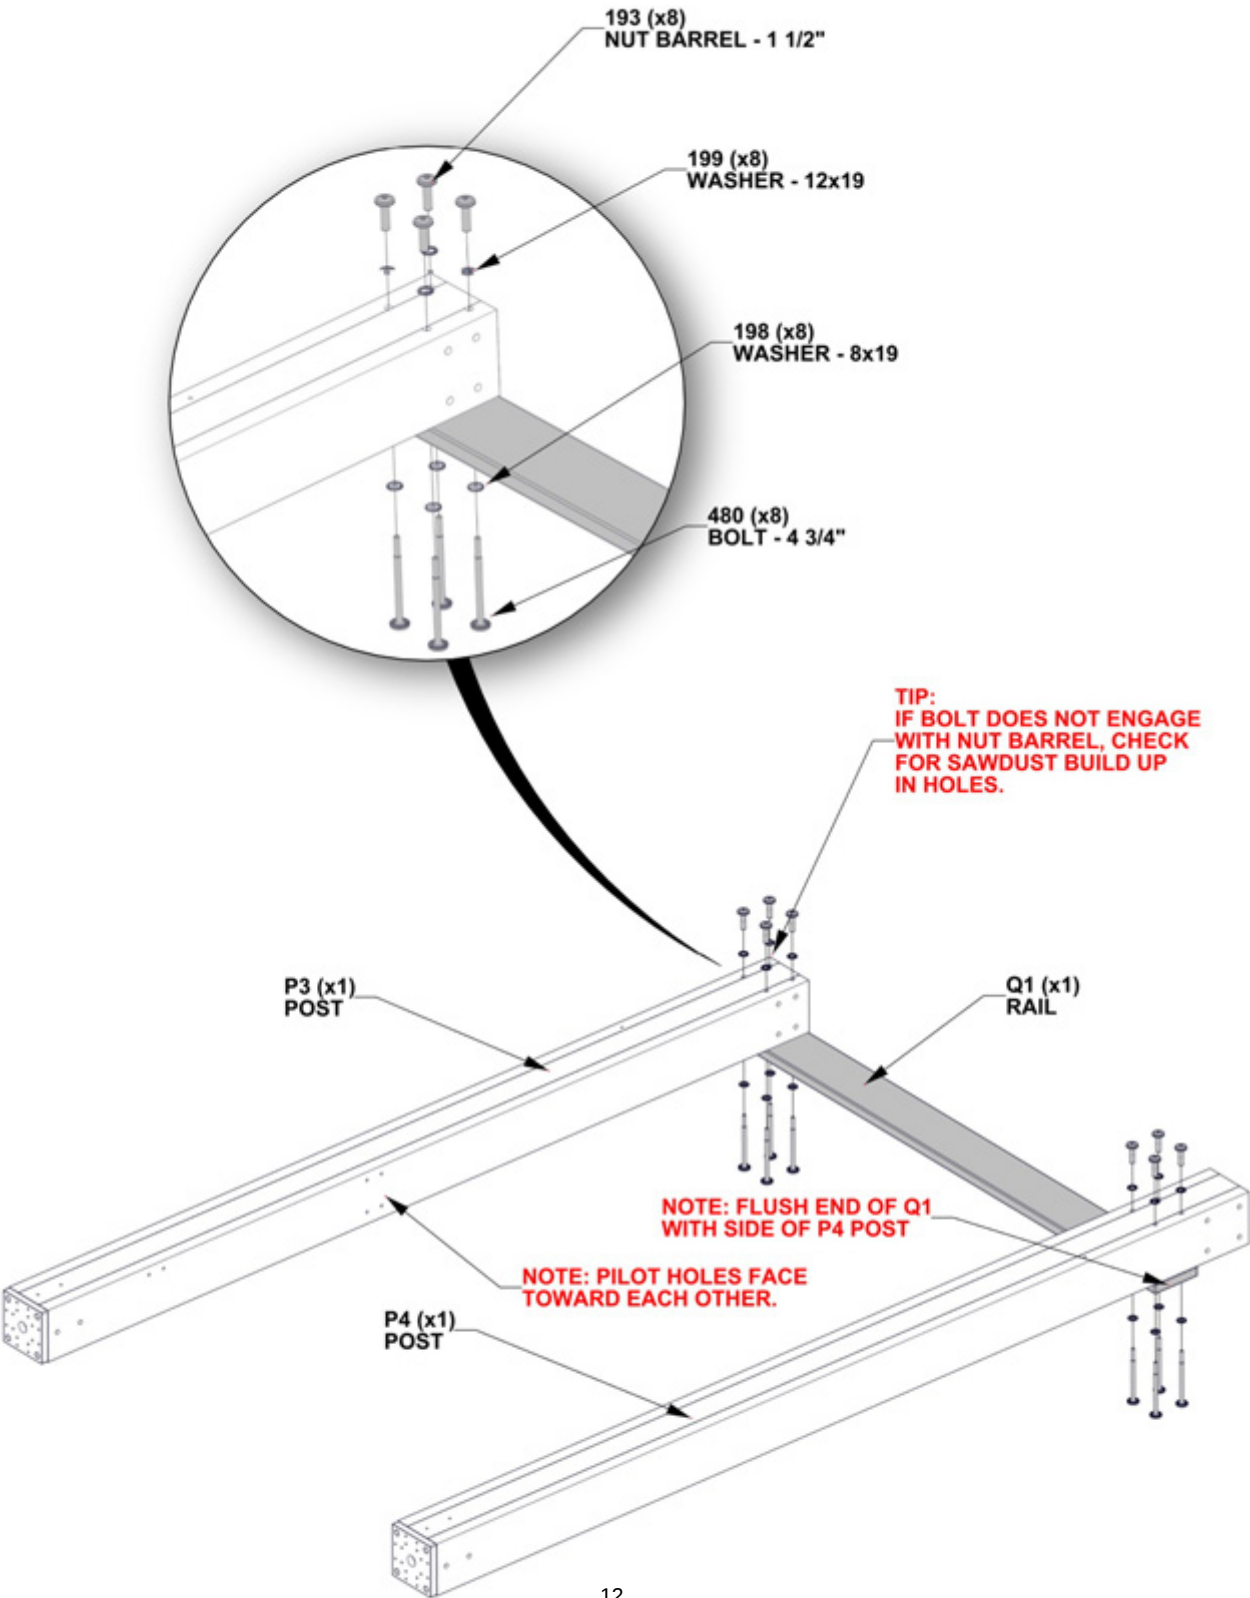

STEP 6 - GAZEBO FRAME ASSEMBLY




A4M00855
(2) | L BRACKET 51x32x82x3.175



E2 | RAIL-W4L16256
(1) | 1 7/16"x3 3/8"x42 3/8" (36x86x1076)

QTY.	PART NUMBER	DESCRIPTION
4	H100469	NUT BARREL WH 5/16 X 5/8 BLK
4	H100471	LAG SCREW WH 5/16 X 1 1/2 BLK
4	H100459	BOLT WH 5/16 X 1 1/4 BLK
4	H100199	WASHER LOCK EXT 12X19 BLK

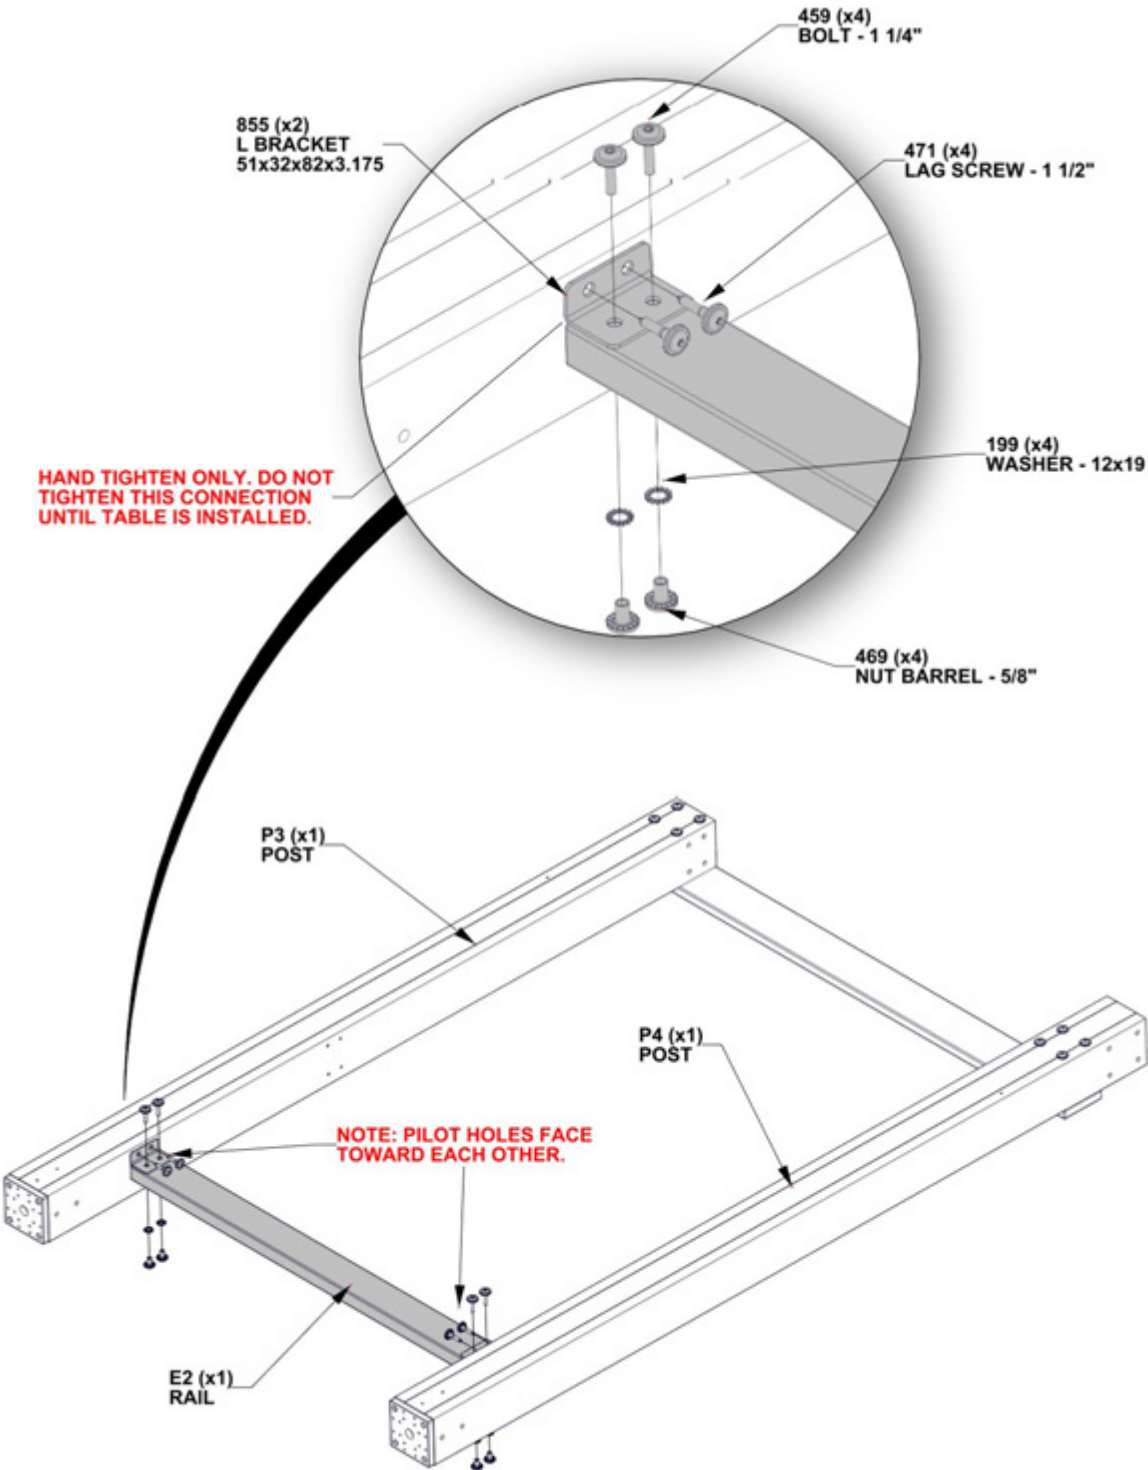


STEP 7 - GAZEBO FRAME ASSEMBLY




Q1 | RAIL-W4L16260
(1) | 15/16"x4 7/16"x52 1/16" (24x112x1322)

QTY.	PART NUMBER	DESCRIPTION
8	H100480	BOLT WH 5/16 X 4 3/4 BLK
8	H100199	WASHER LOCK EXT 12X18 BLK
8	H100193	NUT BARREL WH 5/16 X 1 1/2 BLK
8	H100198	WASHER LOCK EXT 8X19 BLK

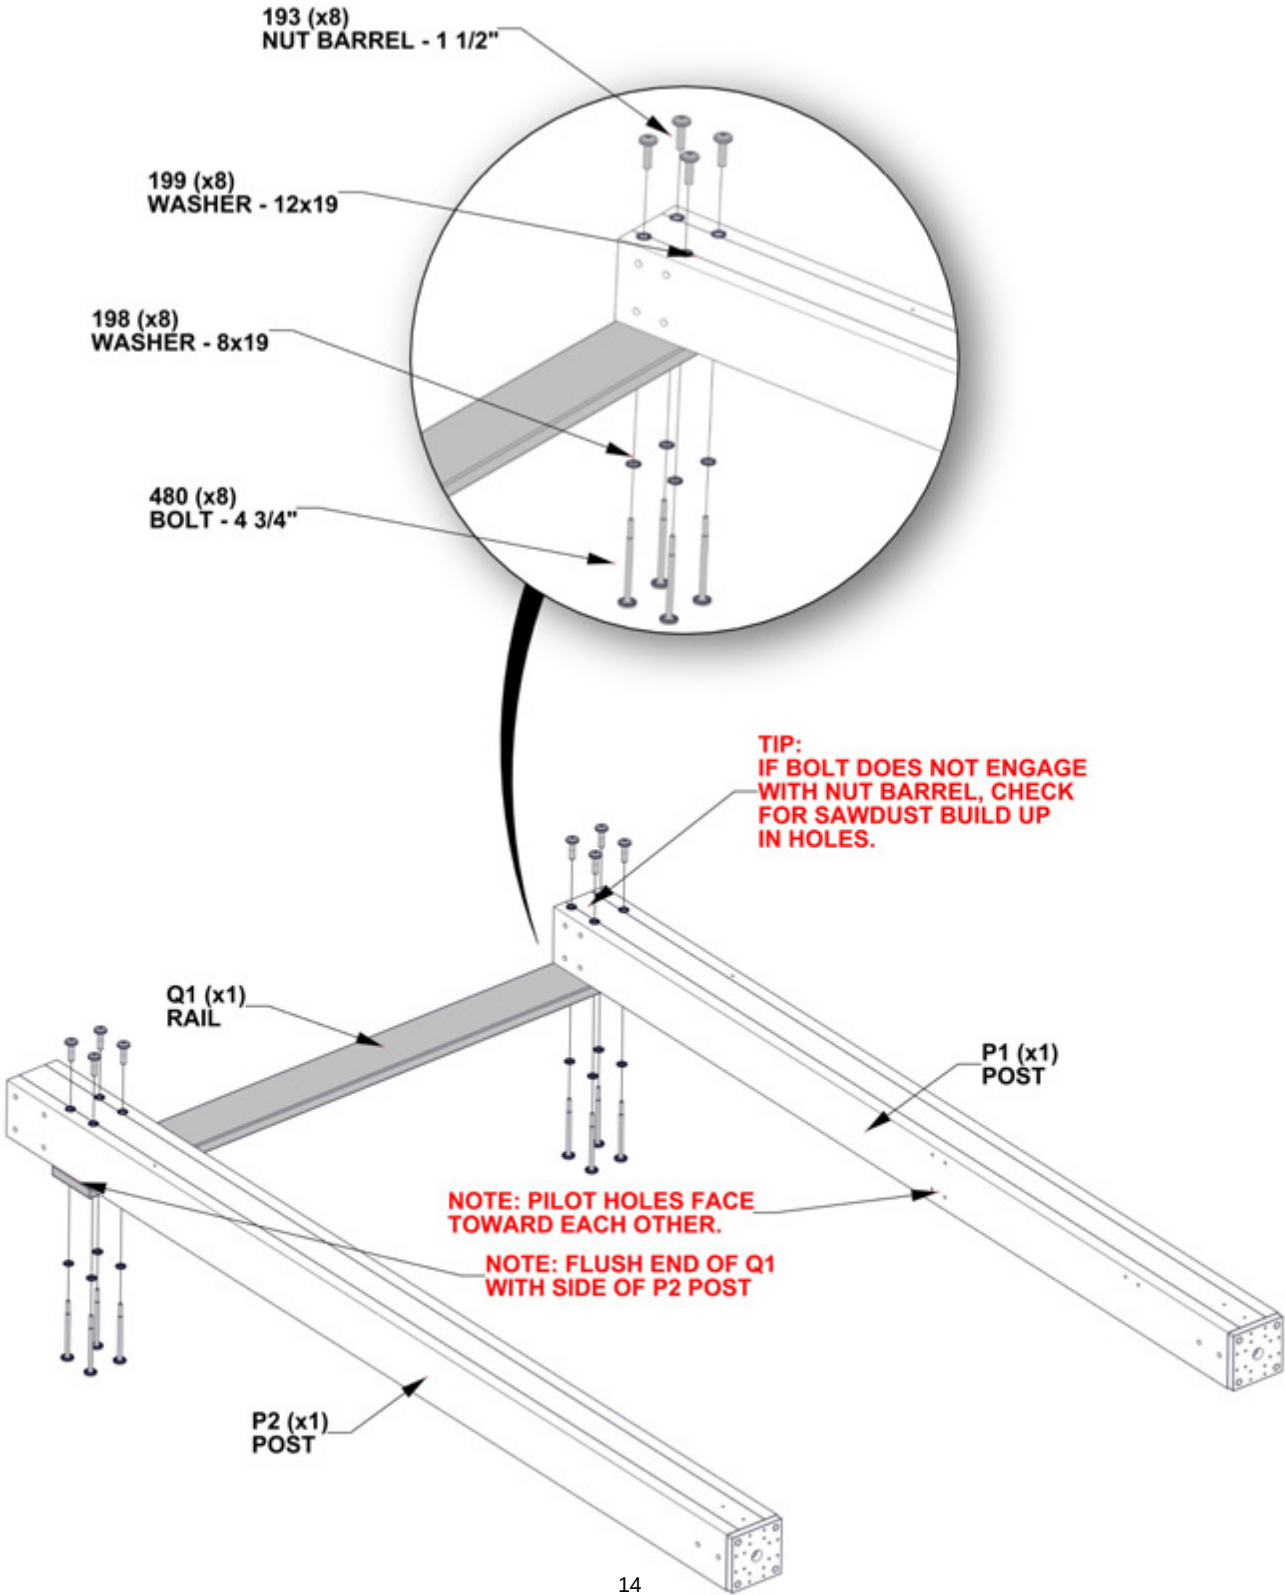

STEP 8 - GAZEBO FRAME ASSEMBLY




A4M00855 (2) | L BRACKET 51x32x82x3.175



E2 | RAIL-W4L16256
(1) | 1 7/16"x3 3/8"x42 3/8" (36x86x1076)

QTY.	PART NUMBER	DESCRIPTION
4	H100469	NUT BARREL WH 5/16 X 5/8 BLK
4	H100471	LAG SCREW WH 5/16 X 1 1/2 BLK
4	H100459	BOLT WH 5/16 X 1 1/4 BLK
4	H100199	WASHER LOCK EXT 12X19 BLK

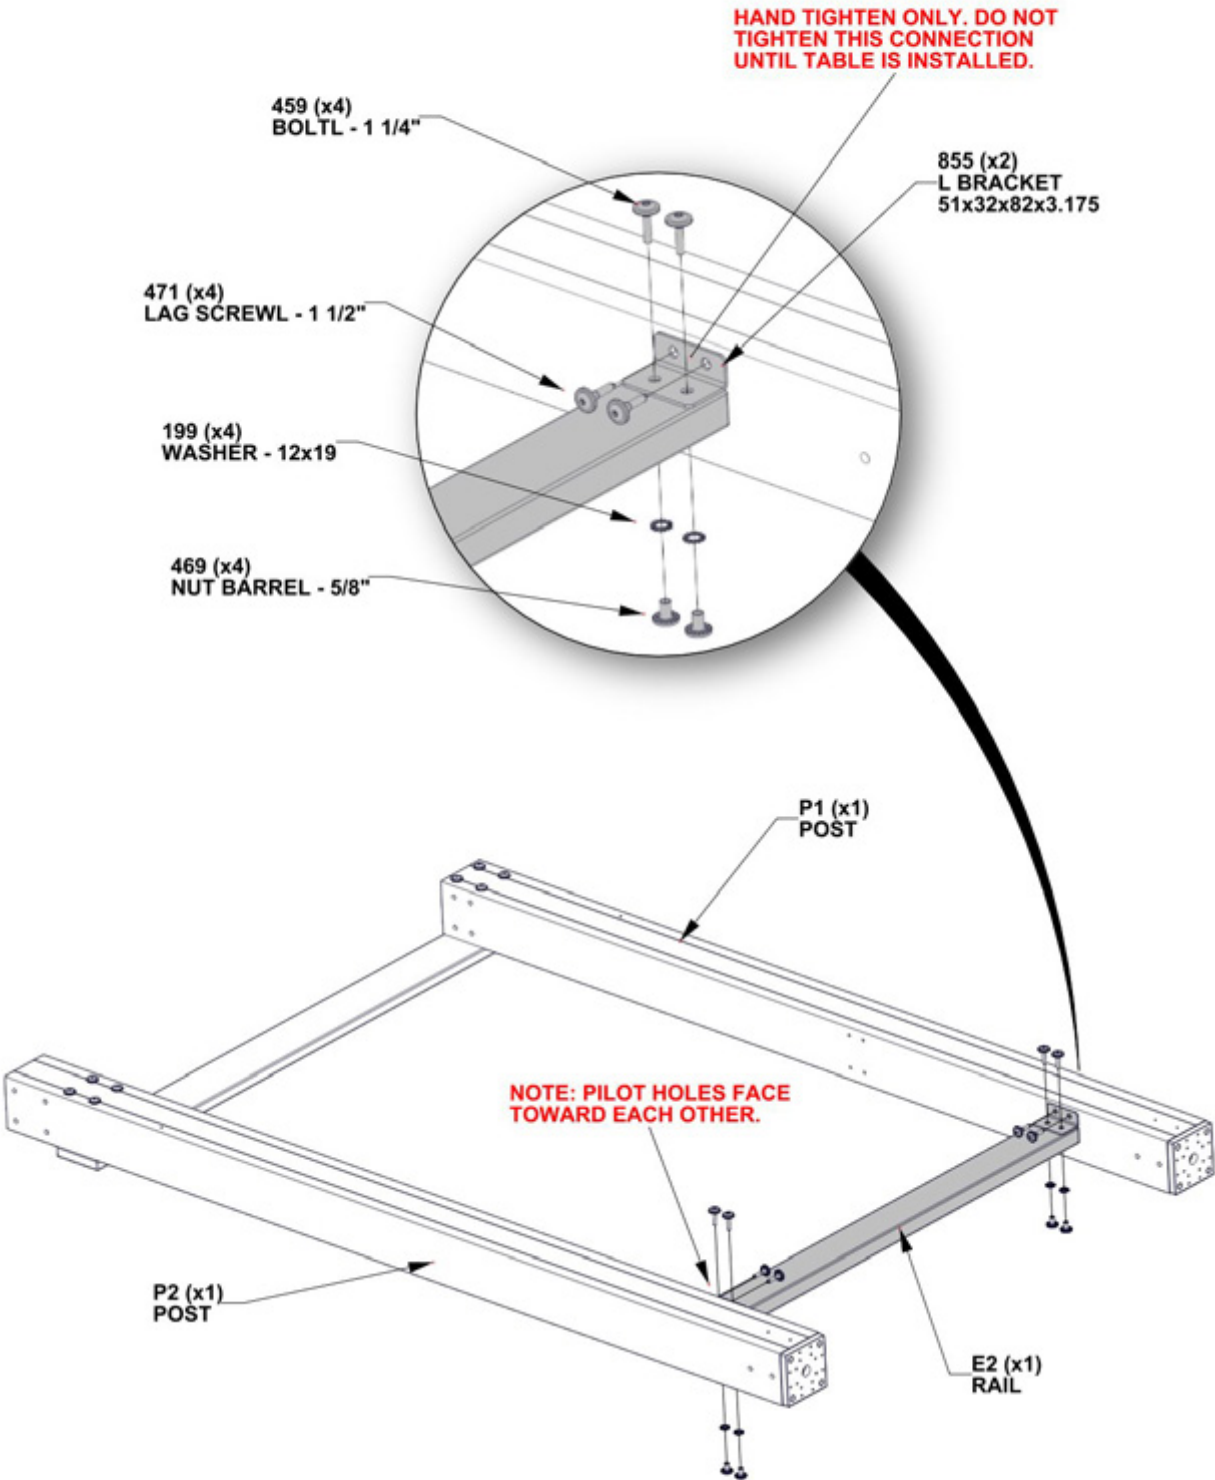

STEP 9 - GAZEBO FRAME ASSEMBLY



D1 | JOIST END-W4L16247
(1) | 1 7/16"x5 1/4"x15" (36x134x381)




D2 | JOIST END-W4L16248
(1) | 1 7/16"x5 1/4"x15" (36x134x381)


QTY.	PART NUMBER	DESCRIPTION
8	H100199	WASHER LOCK EXT 12X19 BLK
8	H100193	NUT BARREL WH 5/16 X 1 1/2 BLK
8	H100198	WASHER LOCK EXT 8X19 BLK
8	H100964	BOLT WH 5/16 X 5 1/2 BLK



D3 | JOIST-W4L16249
(1) | 1 7/16"x5 1/4"x83" (36x134x2108)

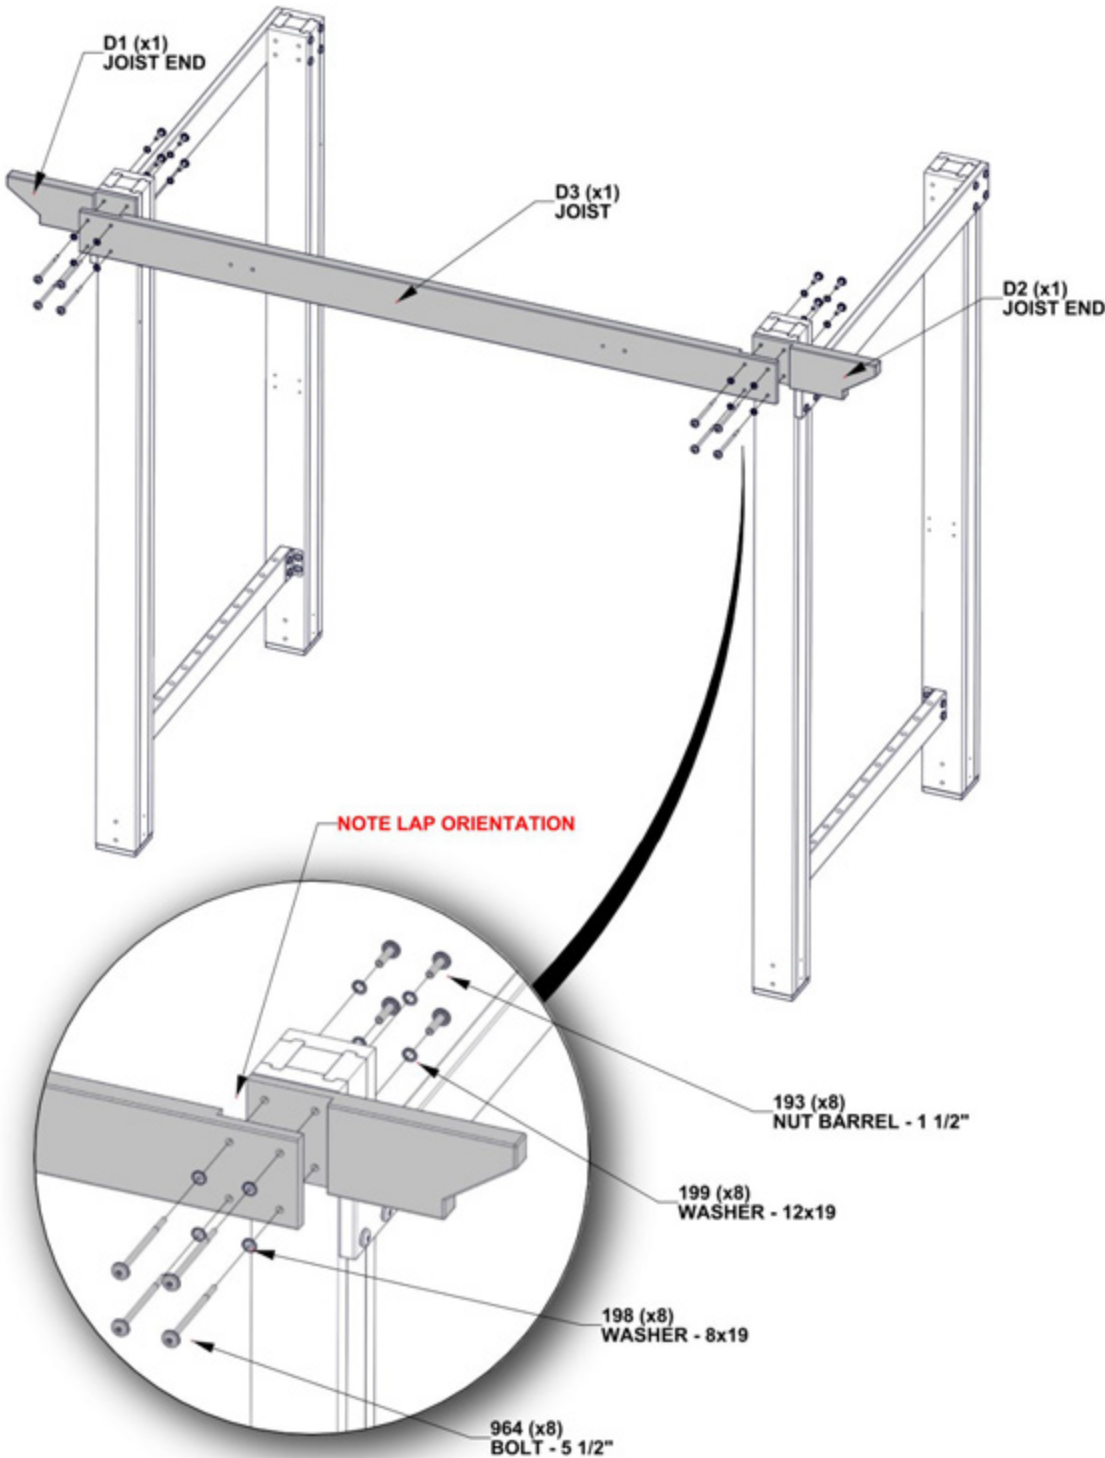


STEP 10 - GAZEBO FRAME ASSEMBLY



D4 | CORBEL-W4L16250
(2) 1 7/16"x4 7/16"x26 1/2" (36x112x673)

QTY.	PART NUMBER	DESCRIPTION
2	H100405	WASHER LOCK EXT 6X15 BLK
2	H100564	LAG SCREW WH 1/4 X 4 BLK
4	H100199	WASHER LOCK EXT 12X19 BLK
4	H100198	WASHER LOCK EXT 8X19 BLK
4	H100205	BOLT WH 5/16 X 2 1/4 BLK
4	H100192	NUT BARREL WH 5/16 X 7/8 BLK

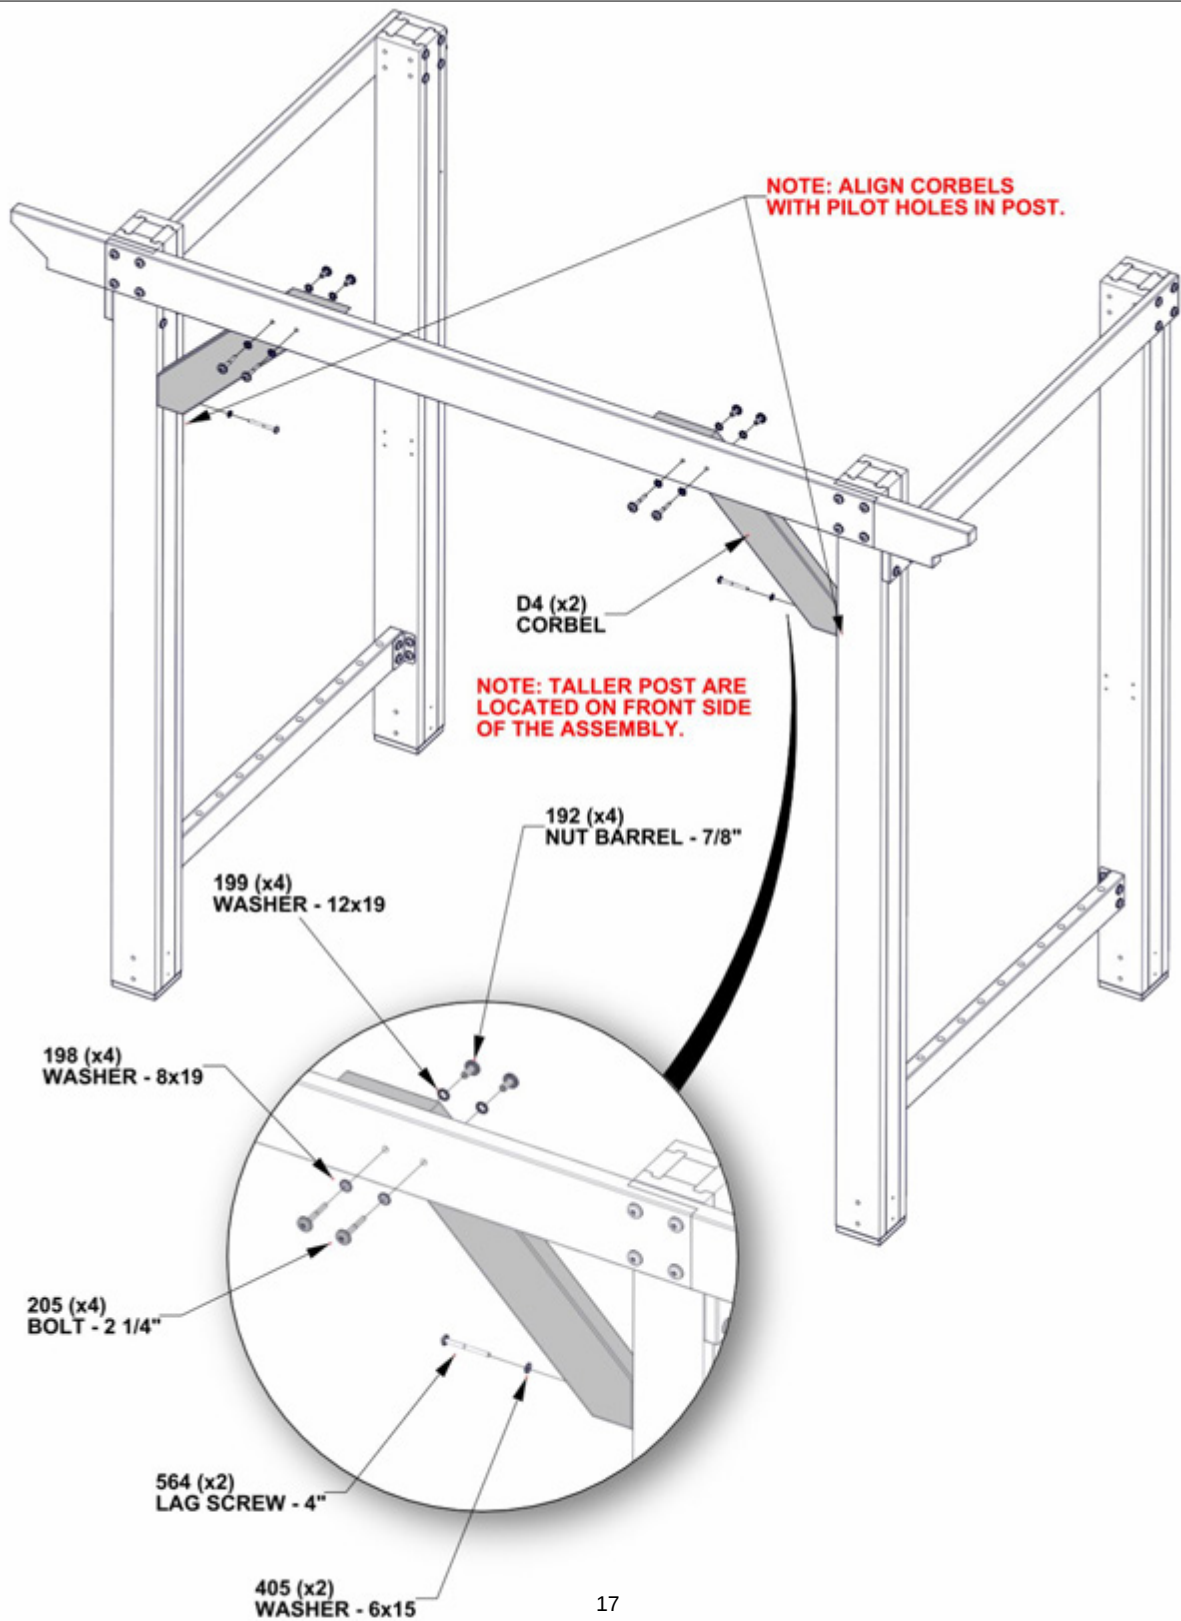


STEP 11 - GAZEBO FRAME ASSEMBLY



Q2 | RAIL-W4L16261
(1) | 15/16"x4 7/16"x84 7/8" (24x112x2156)

QTY.	PART NUMBER	DESCRIPTION
8	H100480	BOLT WH 5/16 X 4 3/4 BLK
8	H100199	WASHER LOCK EXT 12X19 BLK
8	H100193	NUT BARREL WH 5/16 X 1 1/2 BLK
8	H100198	WASHER LOCK EXT 8X19 BLK

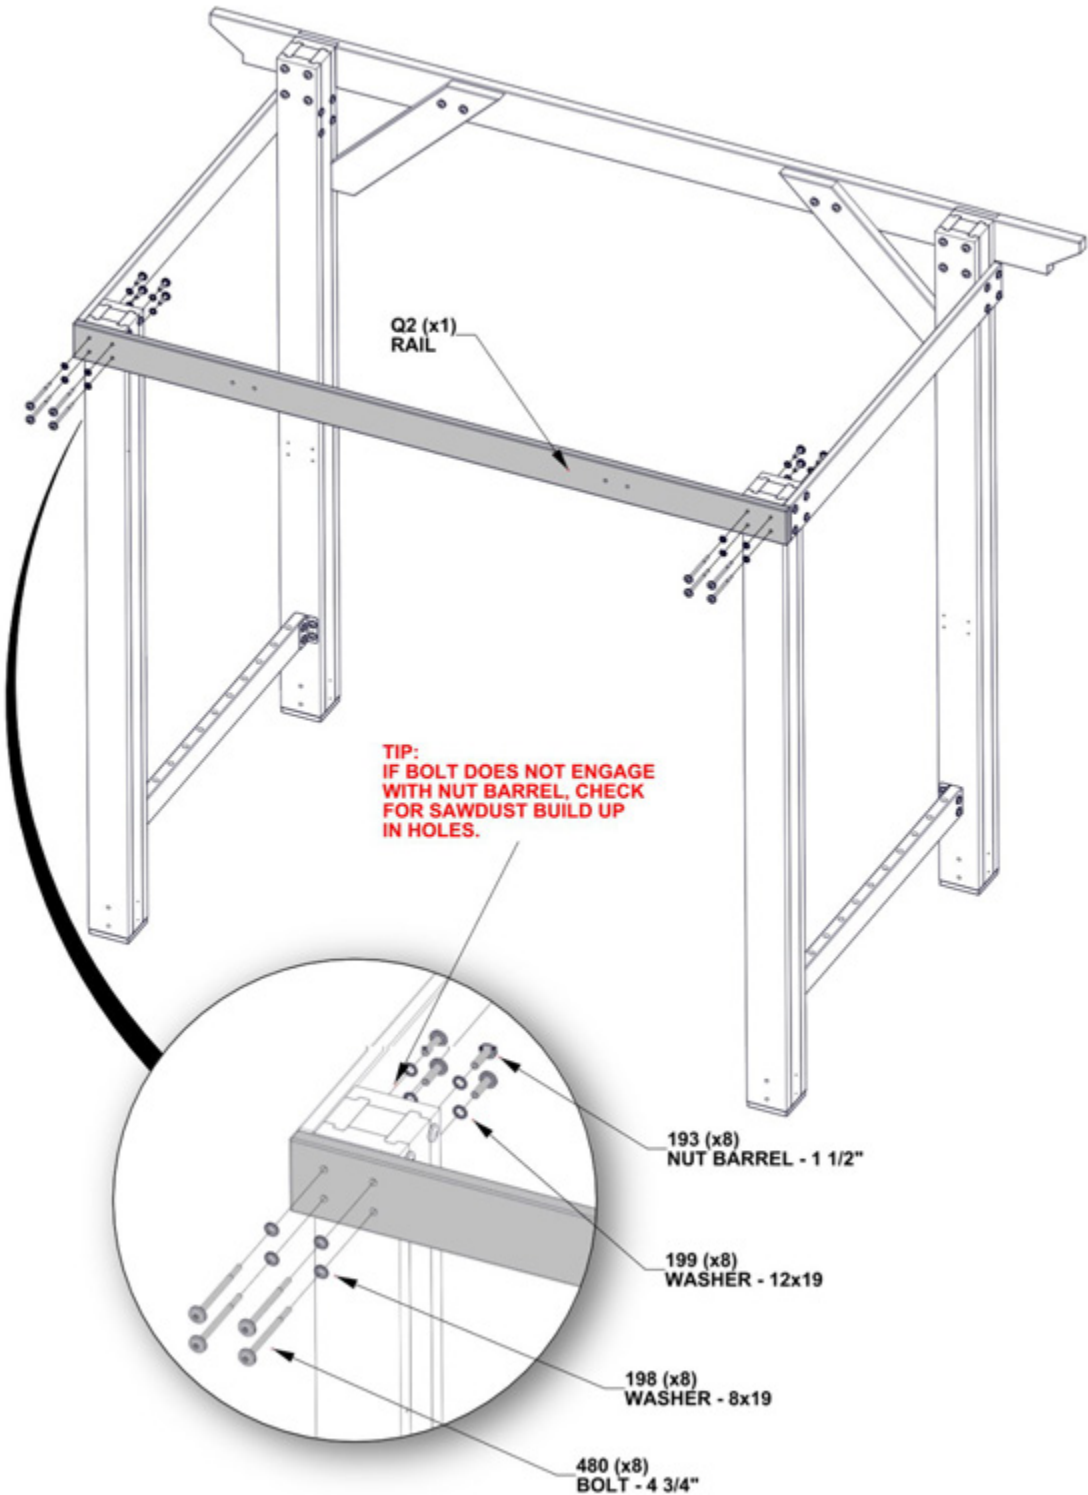

STEP 12 - GAZEBO FRAME ASSEMBLY




D5
(1) | **CORBEL-W4L16251**
1 7/16"x4 7/16"x25 7/8" (36x112x657)




D9
(1) | **CORBEL W/ ID TAG-W2A03389**
1 7/16"x4 7/16"x25 7/8" (36x112x657)


QTY.	PART NUMBER	DESCRIPTION
2	H100405	WASHER LOCK EXT 6X15 BLK
2	H100564	LAG SCREW WH 1/4 X 4 BLK
4	H100199	WASHER LOCK EXT 12X18 BLK
4	H100198	WASHER LOCK EXT 8X19 BLK
4	H100192	NUT BARREL WH 5/16 X 7/8 BLK
4	H100457	BOLT WH 5/16 X 2 BLK

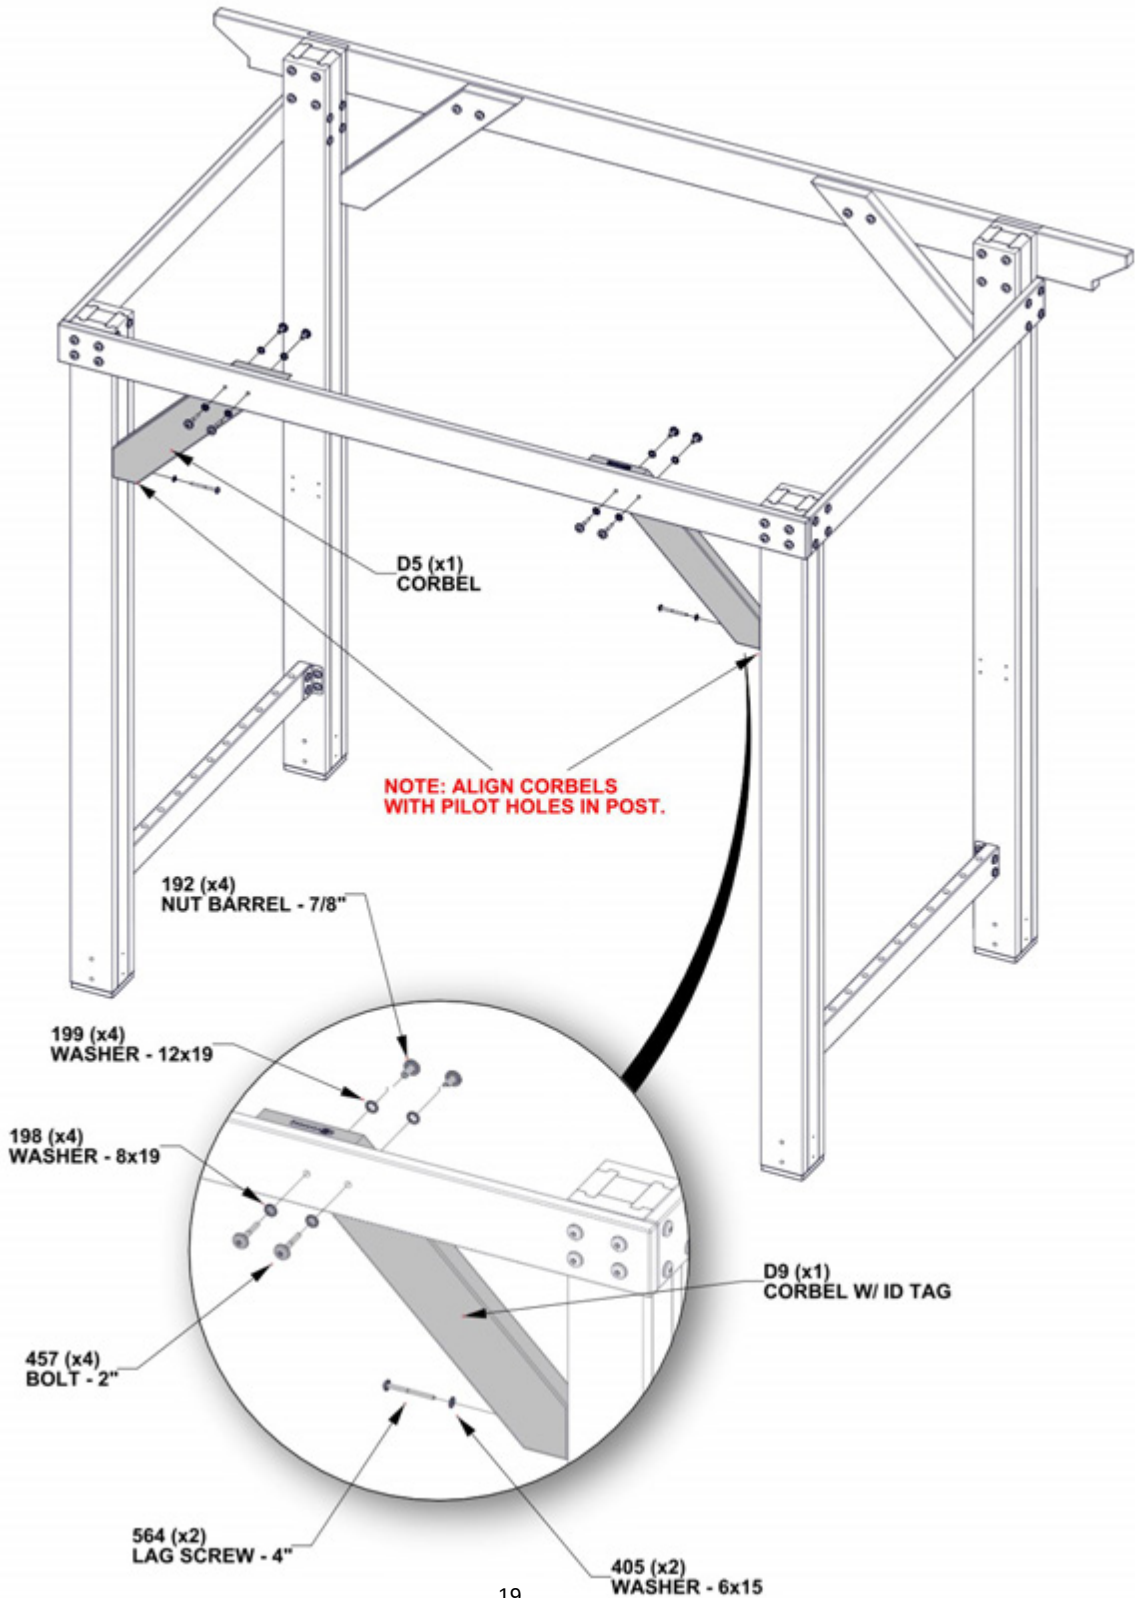


STEP 13 - RAIL ASSEMBLY




E2 | RAIL-W4L16256
(2) | 1 7/16"x3 3/8"x42 3/8" (36x86x1076)



A4M00855
(4) | L BRACKET 51x32x82x3.175




A4M01224
(2) | L BRACKET



A4M01223
(2) | L BRACKET


QTY.	PART NUMBER	DESCRIPTION
8	H100469	NUT BARREL WH 5/16 X 5/8 BLK
8	H100459	BOLT WH 5/16 X 1 1/4 BLK

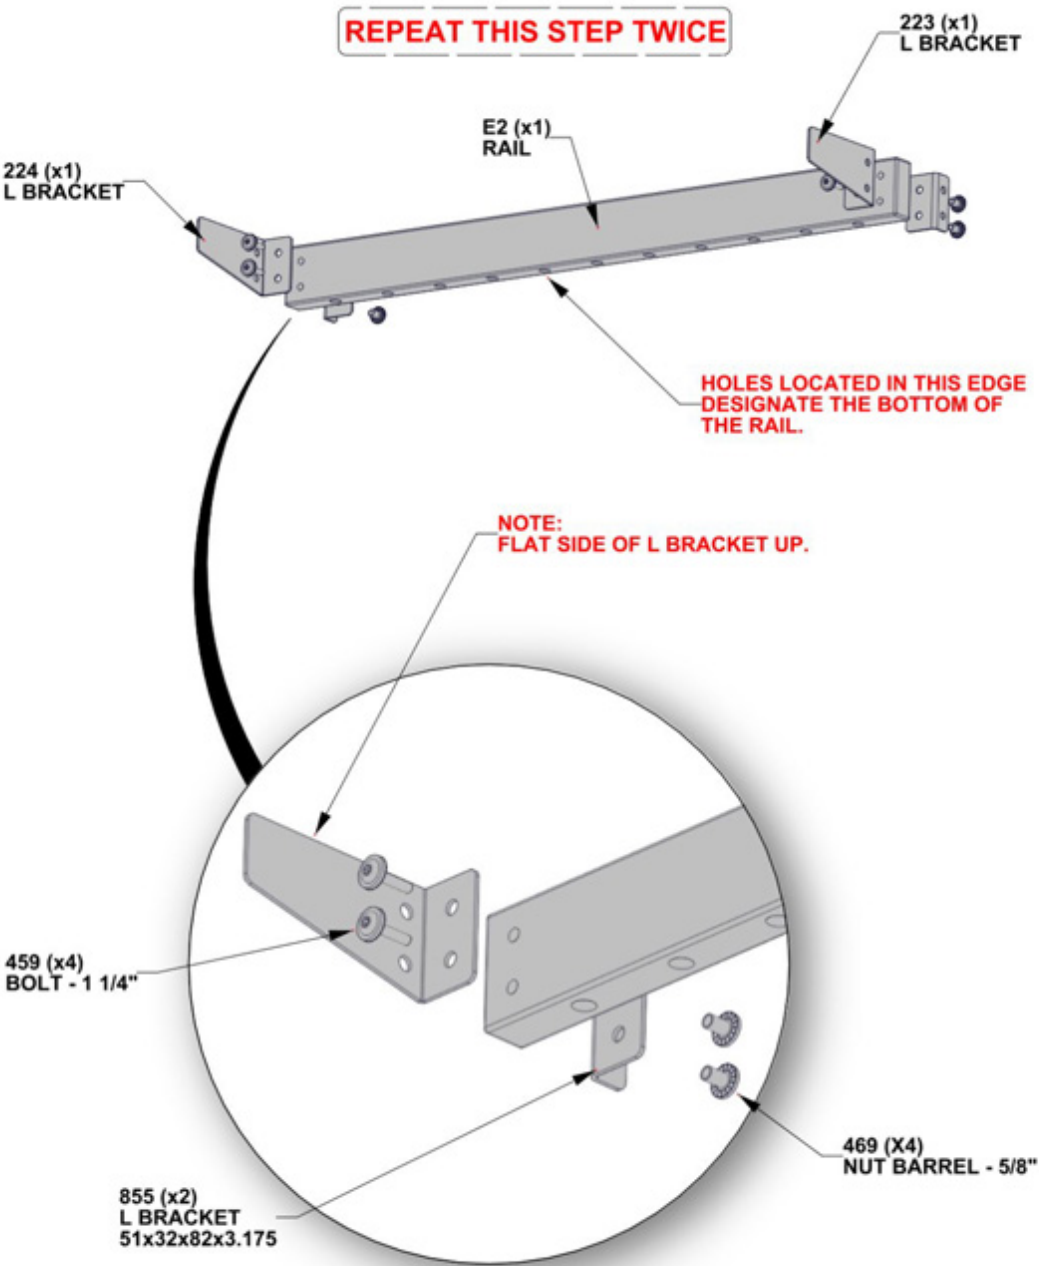


STEP 14 - RAIL ASSEMBLY



(2) RAIL ASSEMBLY

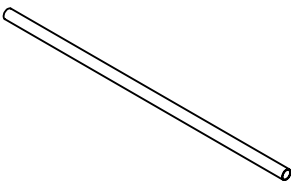


A4M01225 | METAL TUBE
(22)

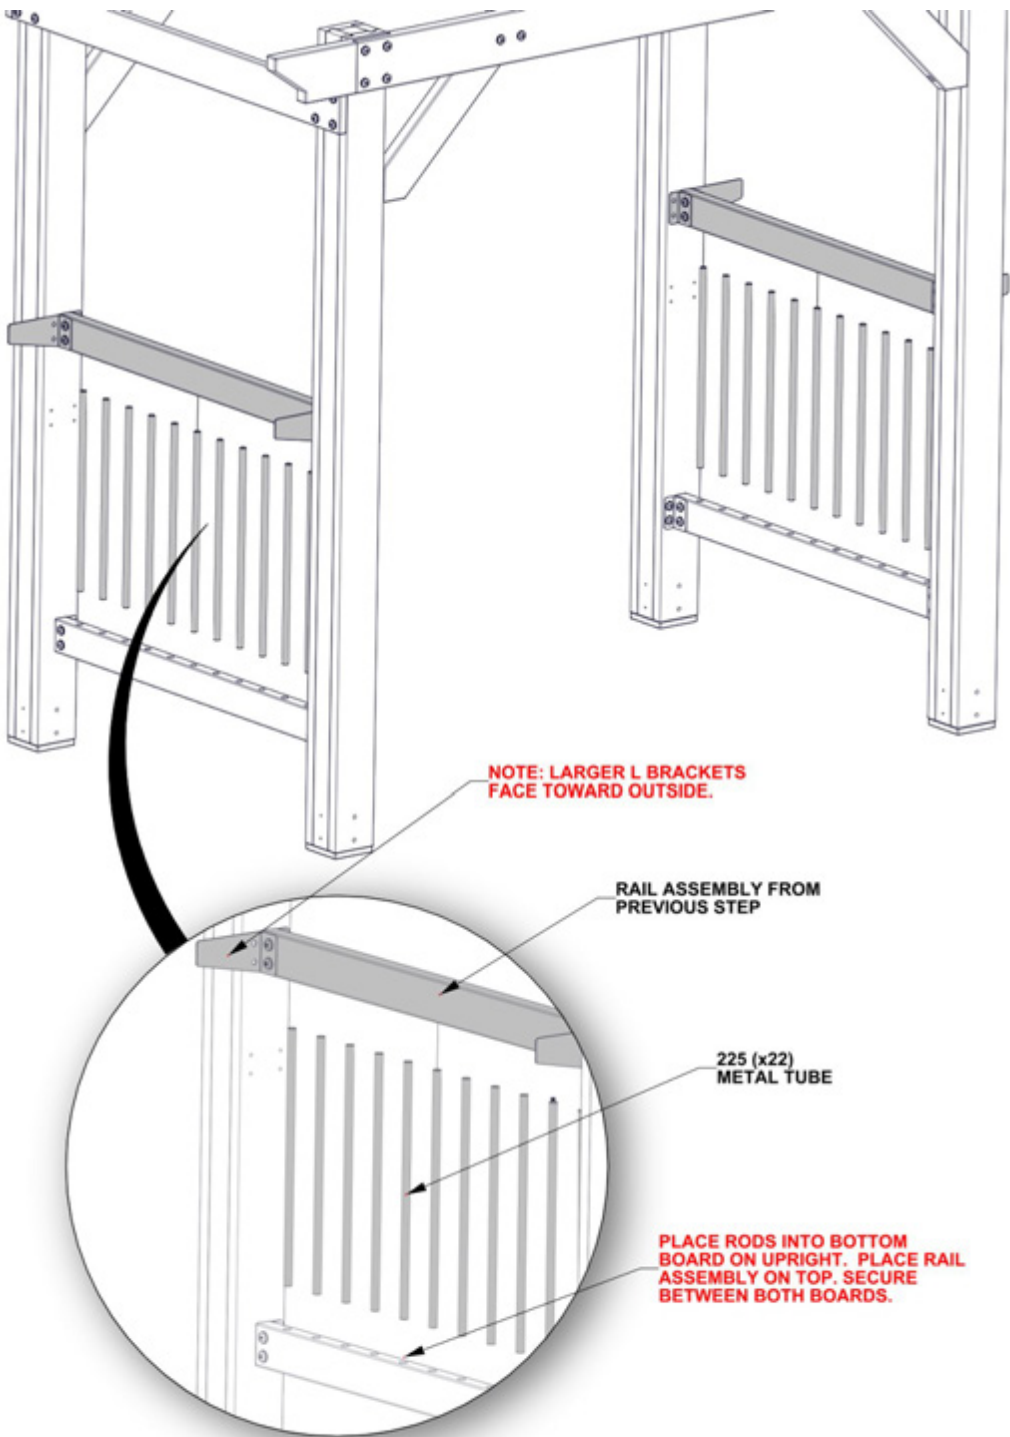


STEP 15- SHELF ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
8	H100471	LAG SCREW WH 5/16 X 1 1/2 BLK

REPEAT STEP FOR OPPOSITE SIDE

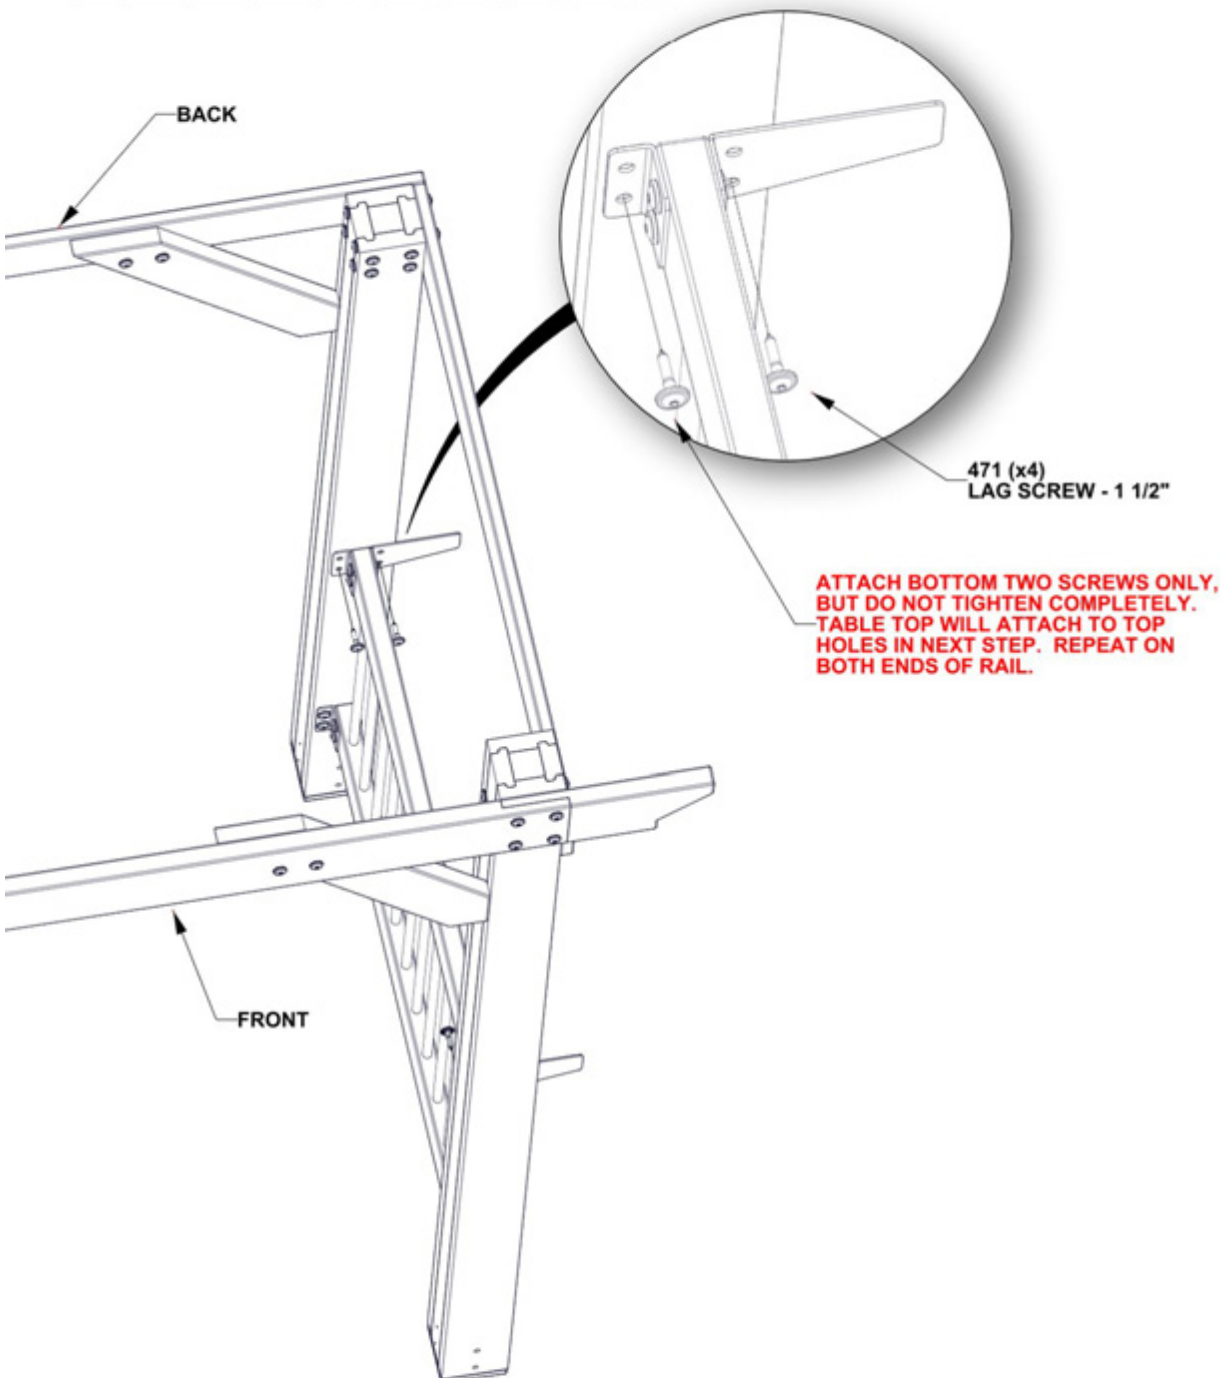


STEP 16 - SHELF ASSEMBLY

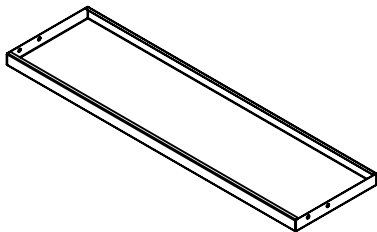


A4M01210
(2) | TABLE


QTY.	PART NUMBER	DESCRIPTION
8	H100471	LAG SCREW WH 5/16 X 1 1/2 BLK

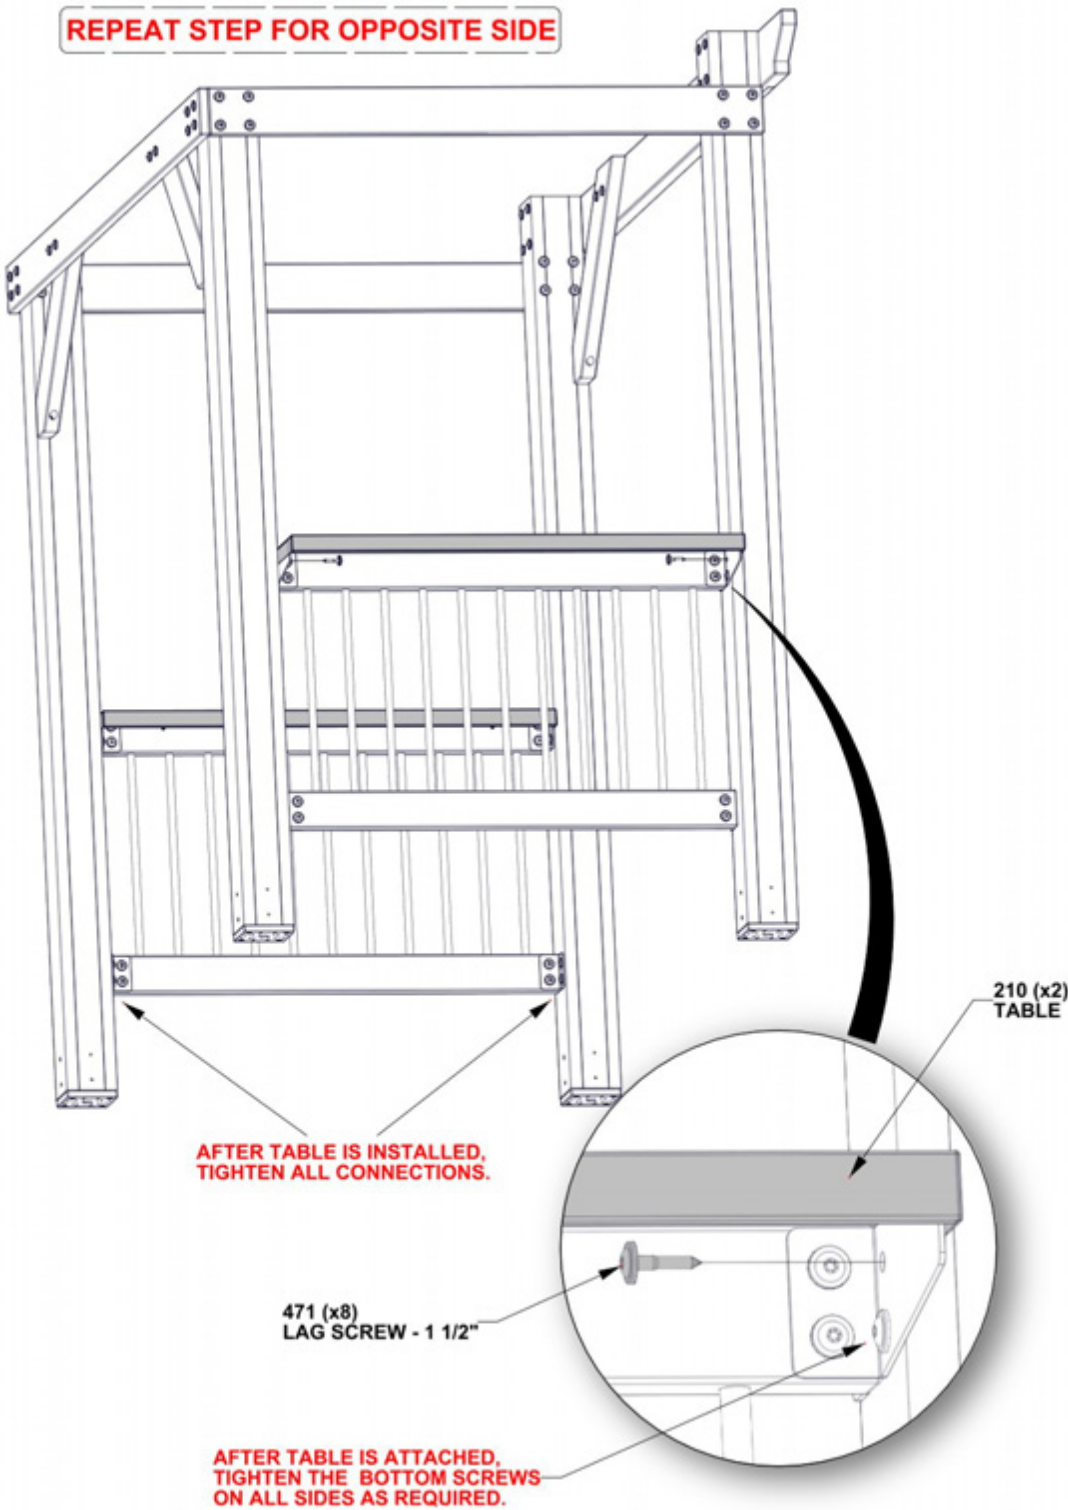


STEP 17 - GAZEBO ROOF ASSEMBLY



F1 | RAFTER-W4L16258
(2) | 1 7/16"x2 3/8"x62 1/4" (36x60x1582)




D6 | BEAM-W4L16252
(1) | 1 7/16"x5 1/4"x64" (36x134x1626)



D8 | BEAM-W4L16254
(1) | 1 7/16"x5 1/4"x64" (36x134x1626)

QTY.	PART NUMBER	DESCRIPTION
6	H100201	SCREW PFH 8 X 2 1/2 BLK

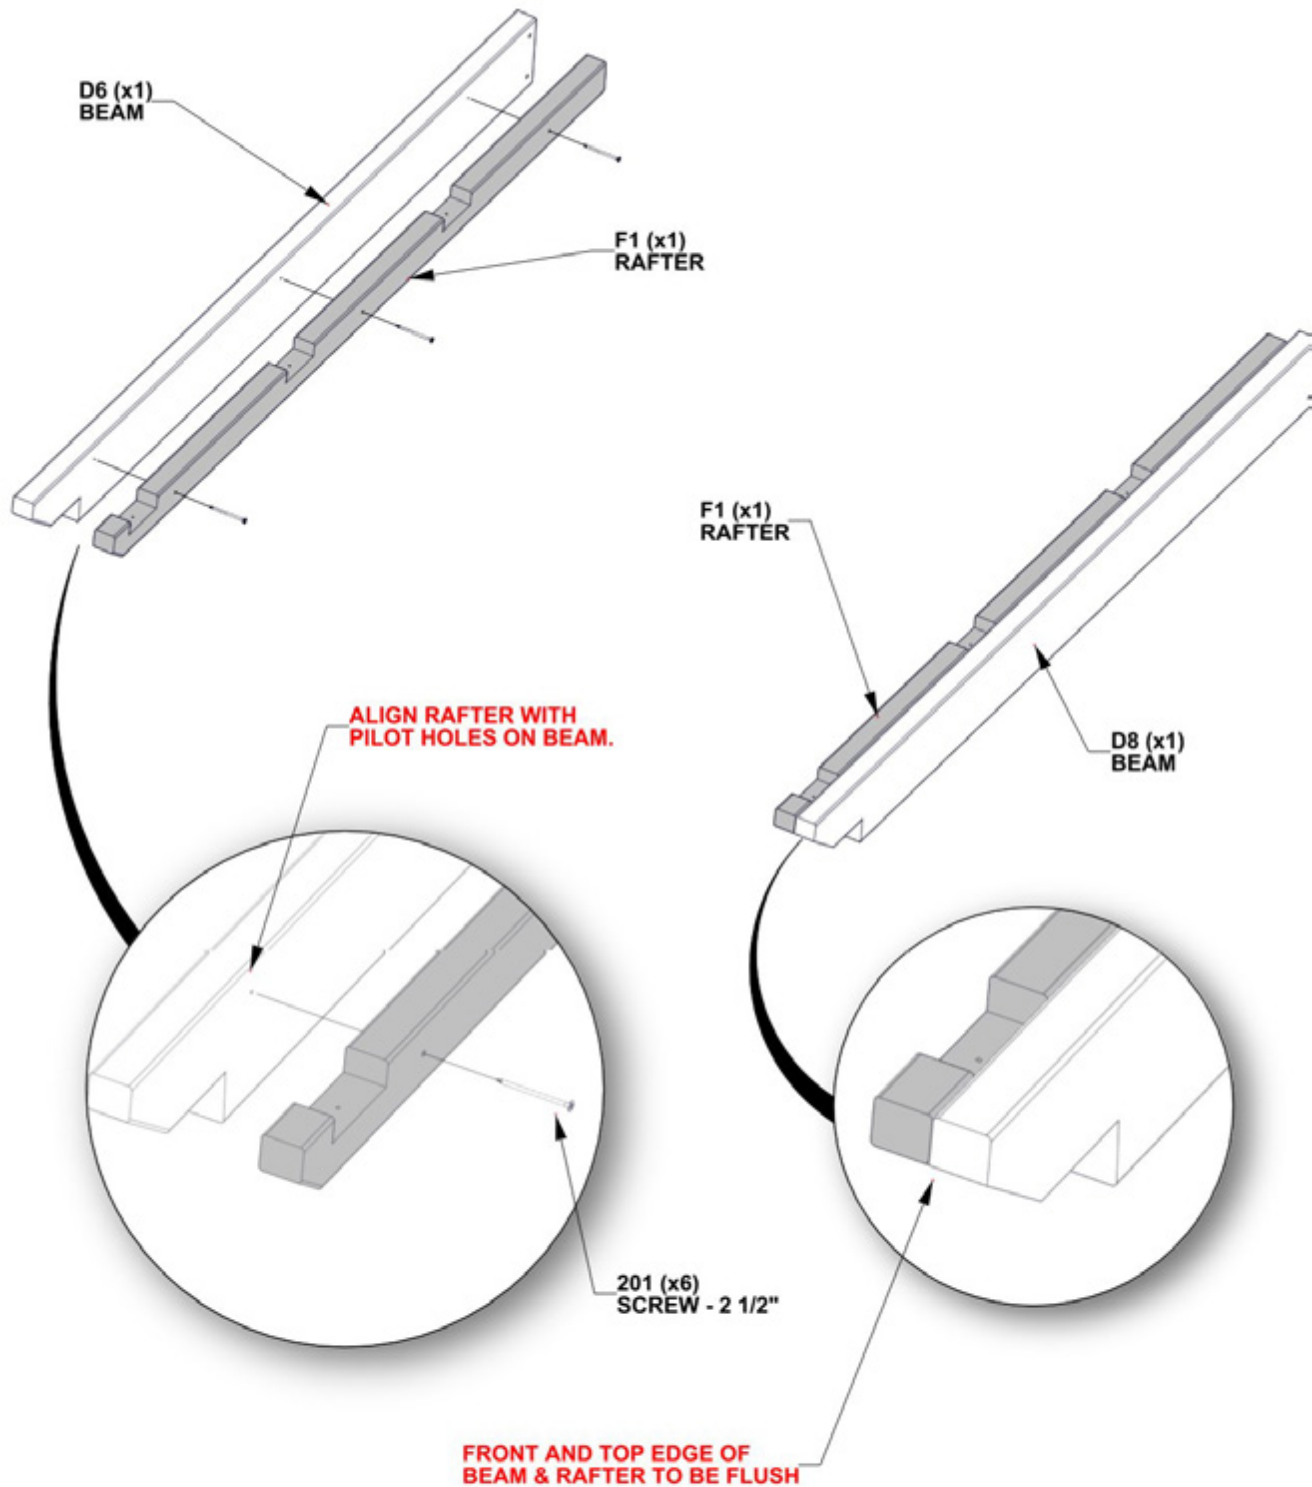


STEP 18 - GAZEBO ROOF ASSEMBLY




D7 | BEAM-W4L16253
(1) | 1 7/16"x5 1/4"x89 7/16" (36x134x2272)

QTY.	PART NUMBER	DESCRIPTION
4	H101008	SCREW CONFIRMAT 7 X 3 BLK

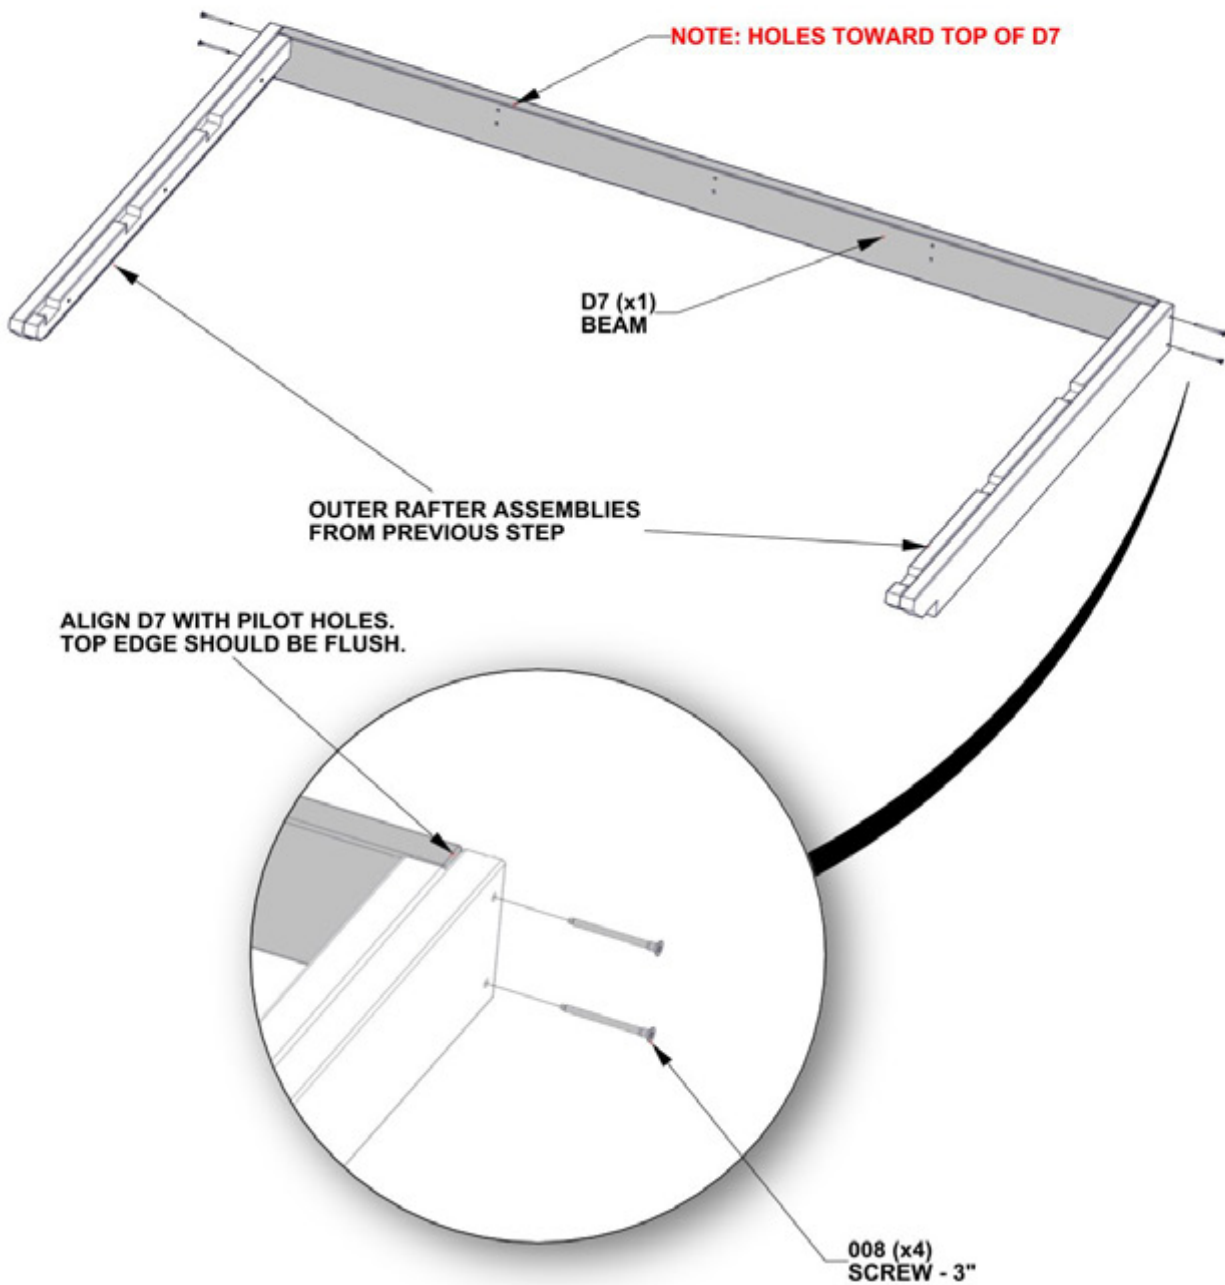

STEP 19 - GAZEBO ROOF ASSEMBLY




E1 | RAFTER-W4L16255
(2) | 1 7/16"x3 3/8"x62 3/8" (36x86x1585)




E3 | RAFTER-W4L16257
(1) | 1 7/16"x3 3/8"x62 3/8" (36x86x1585)

QTY.	PART NUMBER	DESCRIPTION
6	H101008	SCREW CONFIRMAT 7 X 3 BLK

FLIP ASSEMBLY FROM PREVIOUS STEP OVER.
LAY RAFTERS FLAT, ALIGNING PILOT HOLES
WITH HOLES IN D7.

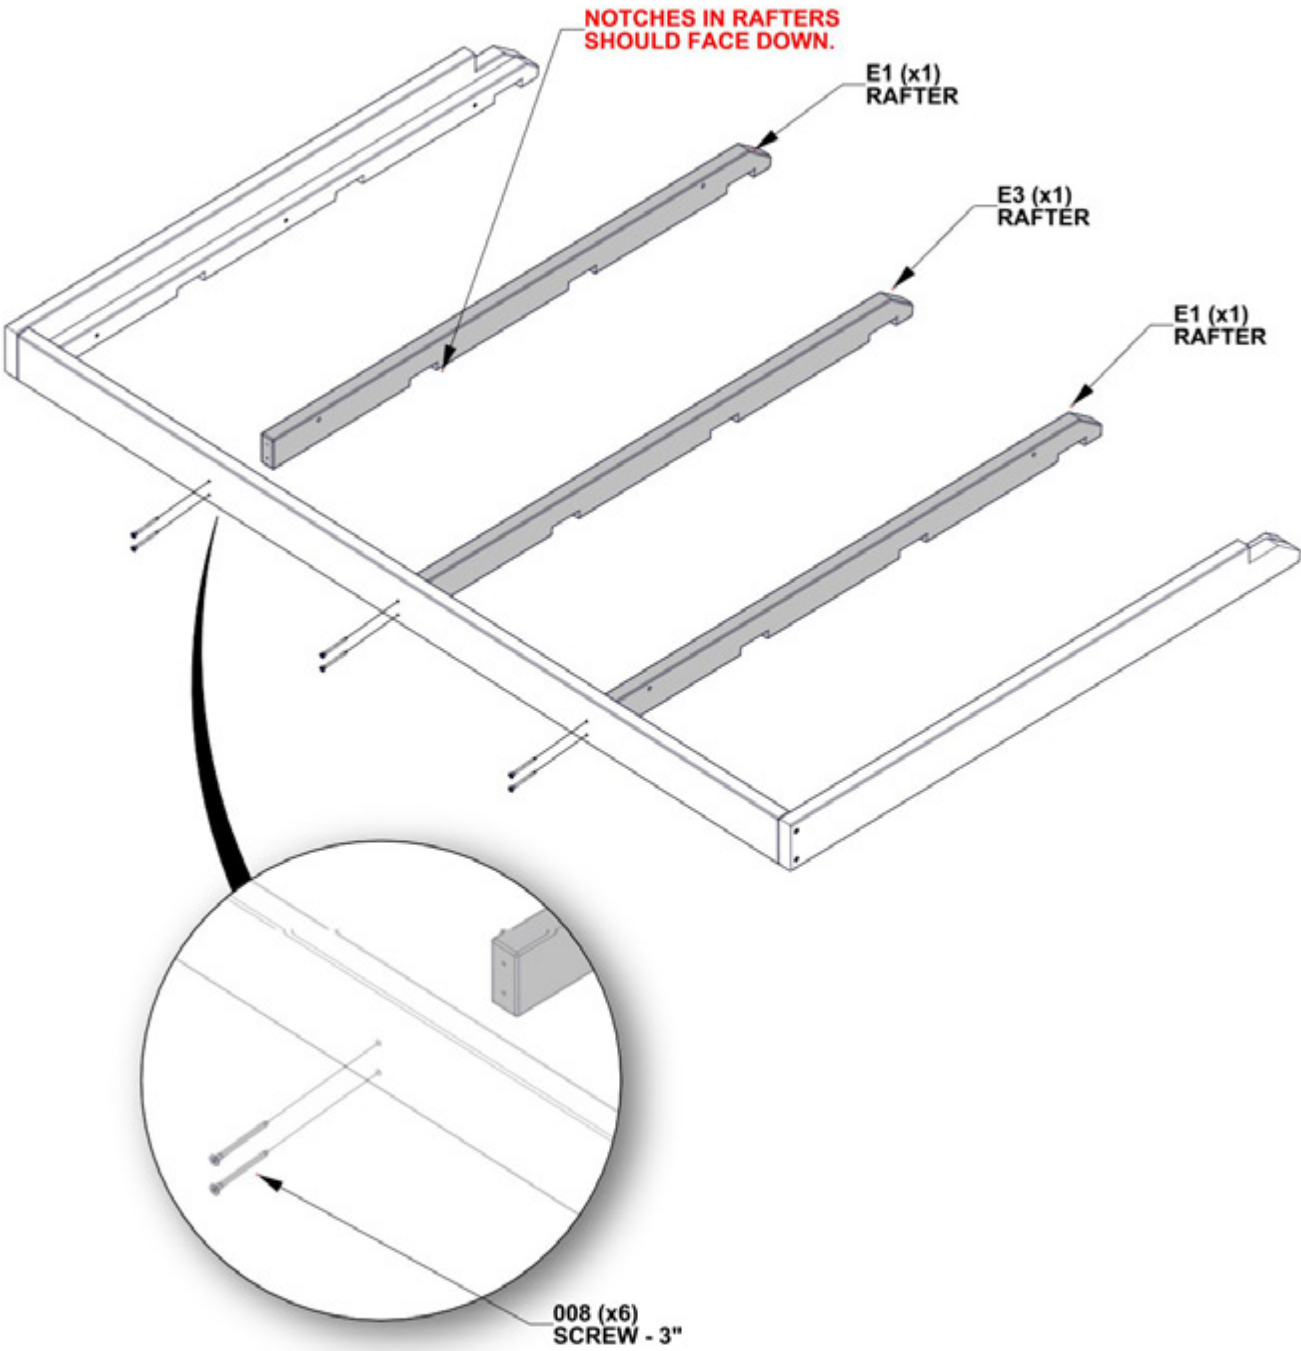




STEP 20 - GAZEBO ROOF ASSEMBLY



H2 | PURLIN-W4L16259
(1) | 15/16"x3 3/8"x89 7/16" (24x86x2272)

QTY.	PART NUMBER	DESCRIPTION
5	H100382	SCREW PFH 8 X 1 3/4 BLK


**FLIP ASSEMBLY FROM PREVIOUS STEP OVER.
POSITION H2 PURLIN IN PLACE. MEASURE
DIAGONALLY AND SQUARE AS NEEDED.
MEASUREMENT SHOULD BE 112 inches [2845 mm]**

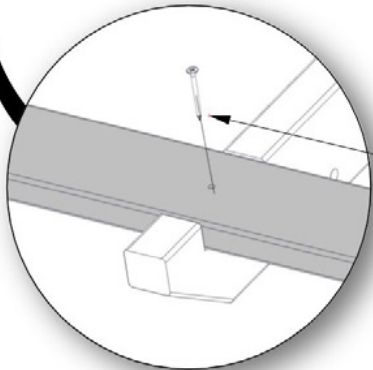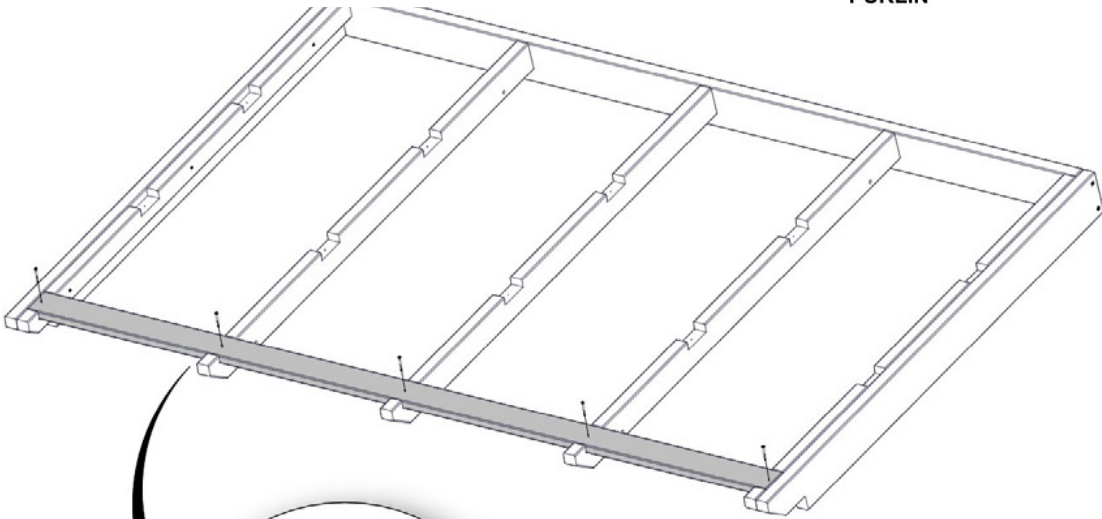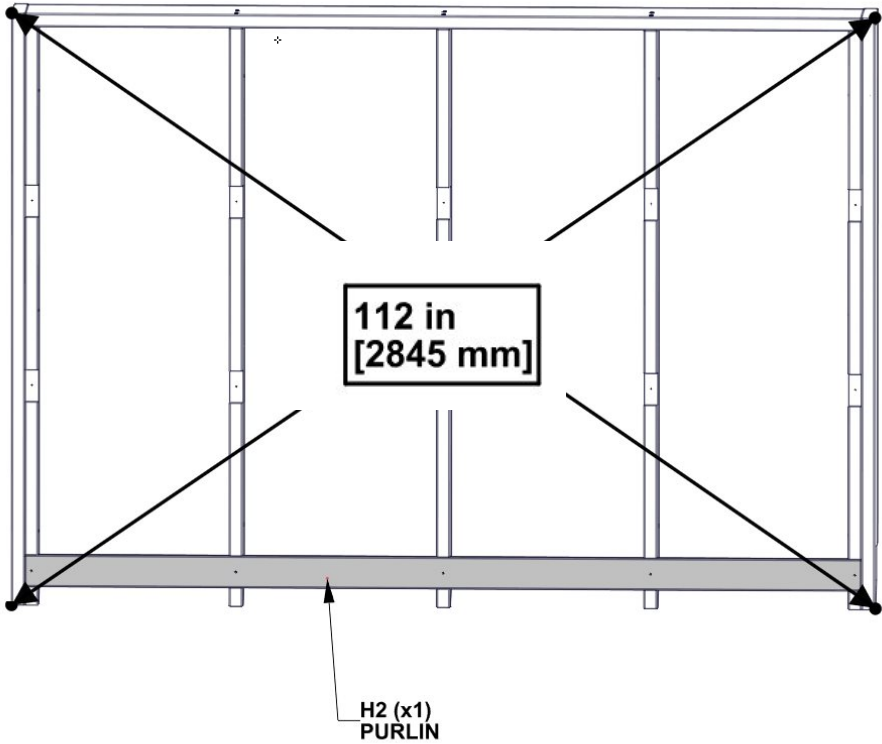

**ONCE SQUARE, INSERT SCREWS.
RE-MEASURE CORNER TO CORNER.**


382 (x5)
SCREW - 1 3/4"

STEP 21 - GAZEBO ROOF ASSEMBLY




H2 | PURLIN-W4L16259
(2) | 15/16"x3 3/8"x89 7/16" (24x86x2272)

QTY.	PART NUMBER	DESCRIPTION
10	H100382	SCREW PFH 8 X 1 3/4 BLK

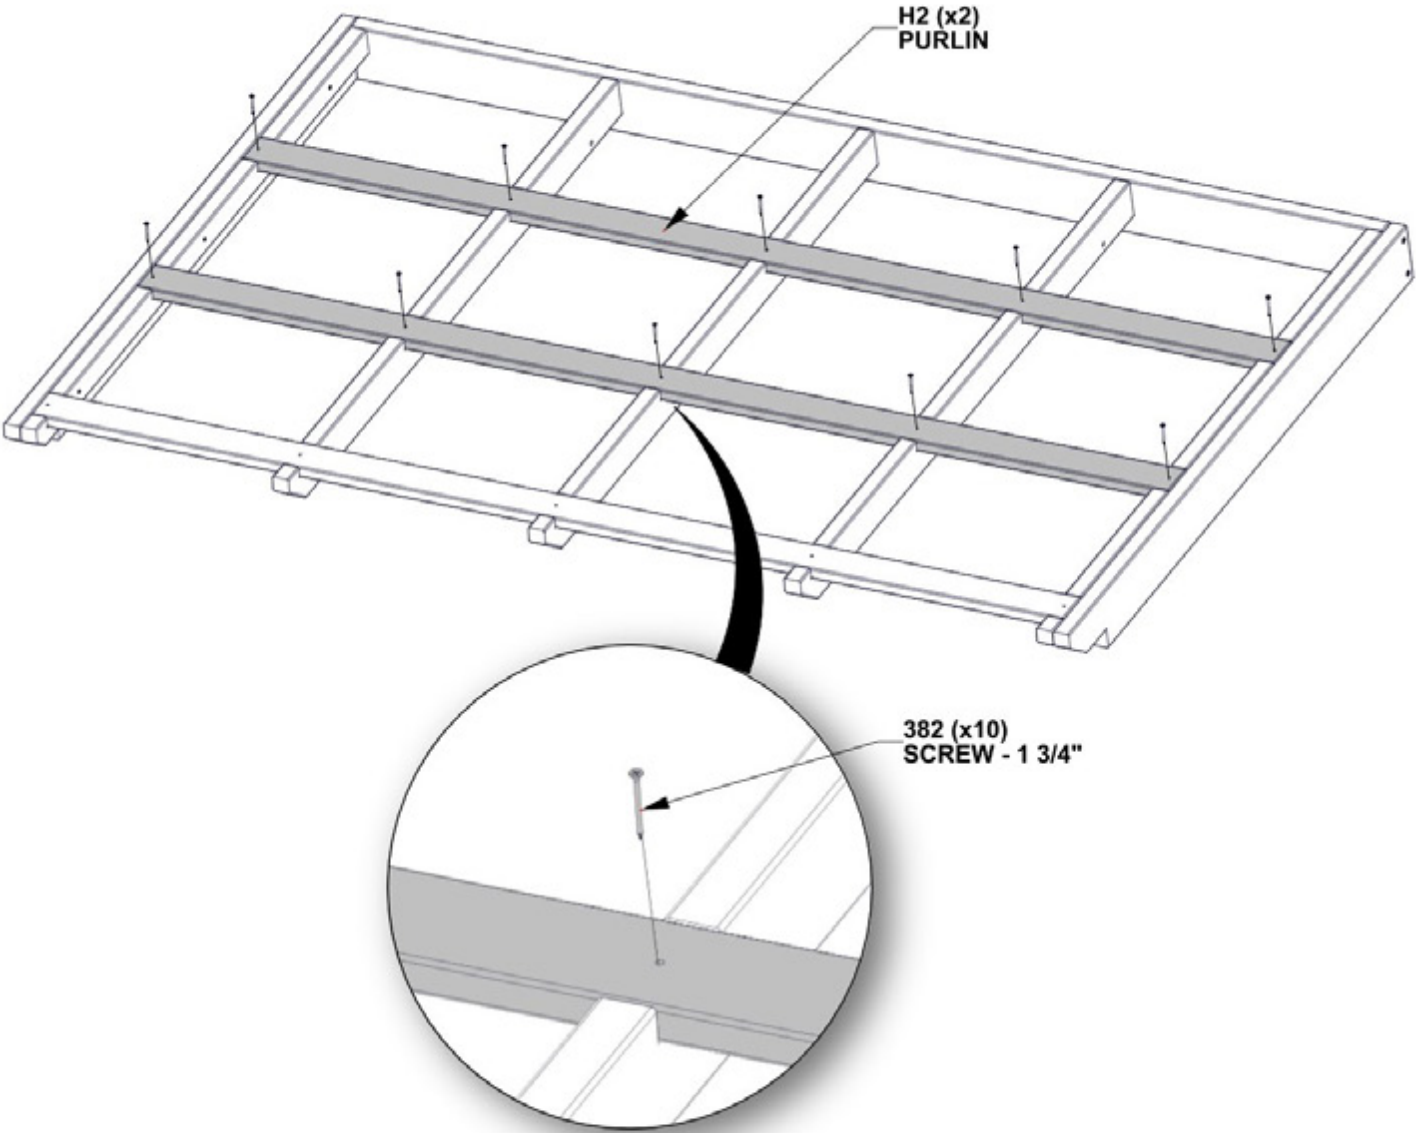

STEP 22 - GAZEBO ROOF ASSEMBLY

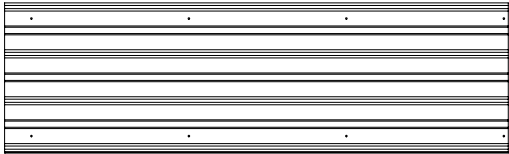


A4M02667
(5) | 29 GA STEEL SHEETING


QTY.	PART NUMBER	DESCRIPTION
40	H100833	SCREW WOODGRIP 10-16x3/4"

NOTE:
WARNING:
GLOVES SHOULD BE WORN WHEN HANDLING ROOF PANELS.
EDGES ARE SHARP. REMOVE BLUE FILM FROM EACH SHEET.

- 1. LOOKING AT THE BACK OF THE UNIT AS PICTURED BELOW, PLACE TIN SHEETS DOWN.
- 2. STARTING AT THE RIGHT SIDE AND WORKING TOWARD THE LEFT SIDE OVER LAPPING BY ONE RIB.
- 3. CENTER SHEETS ON ROOF AND LEAVE EQUAL GAPS ON BOTH LEFT AND RIGHT SIDES. SCREW IN PLACE.

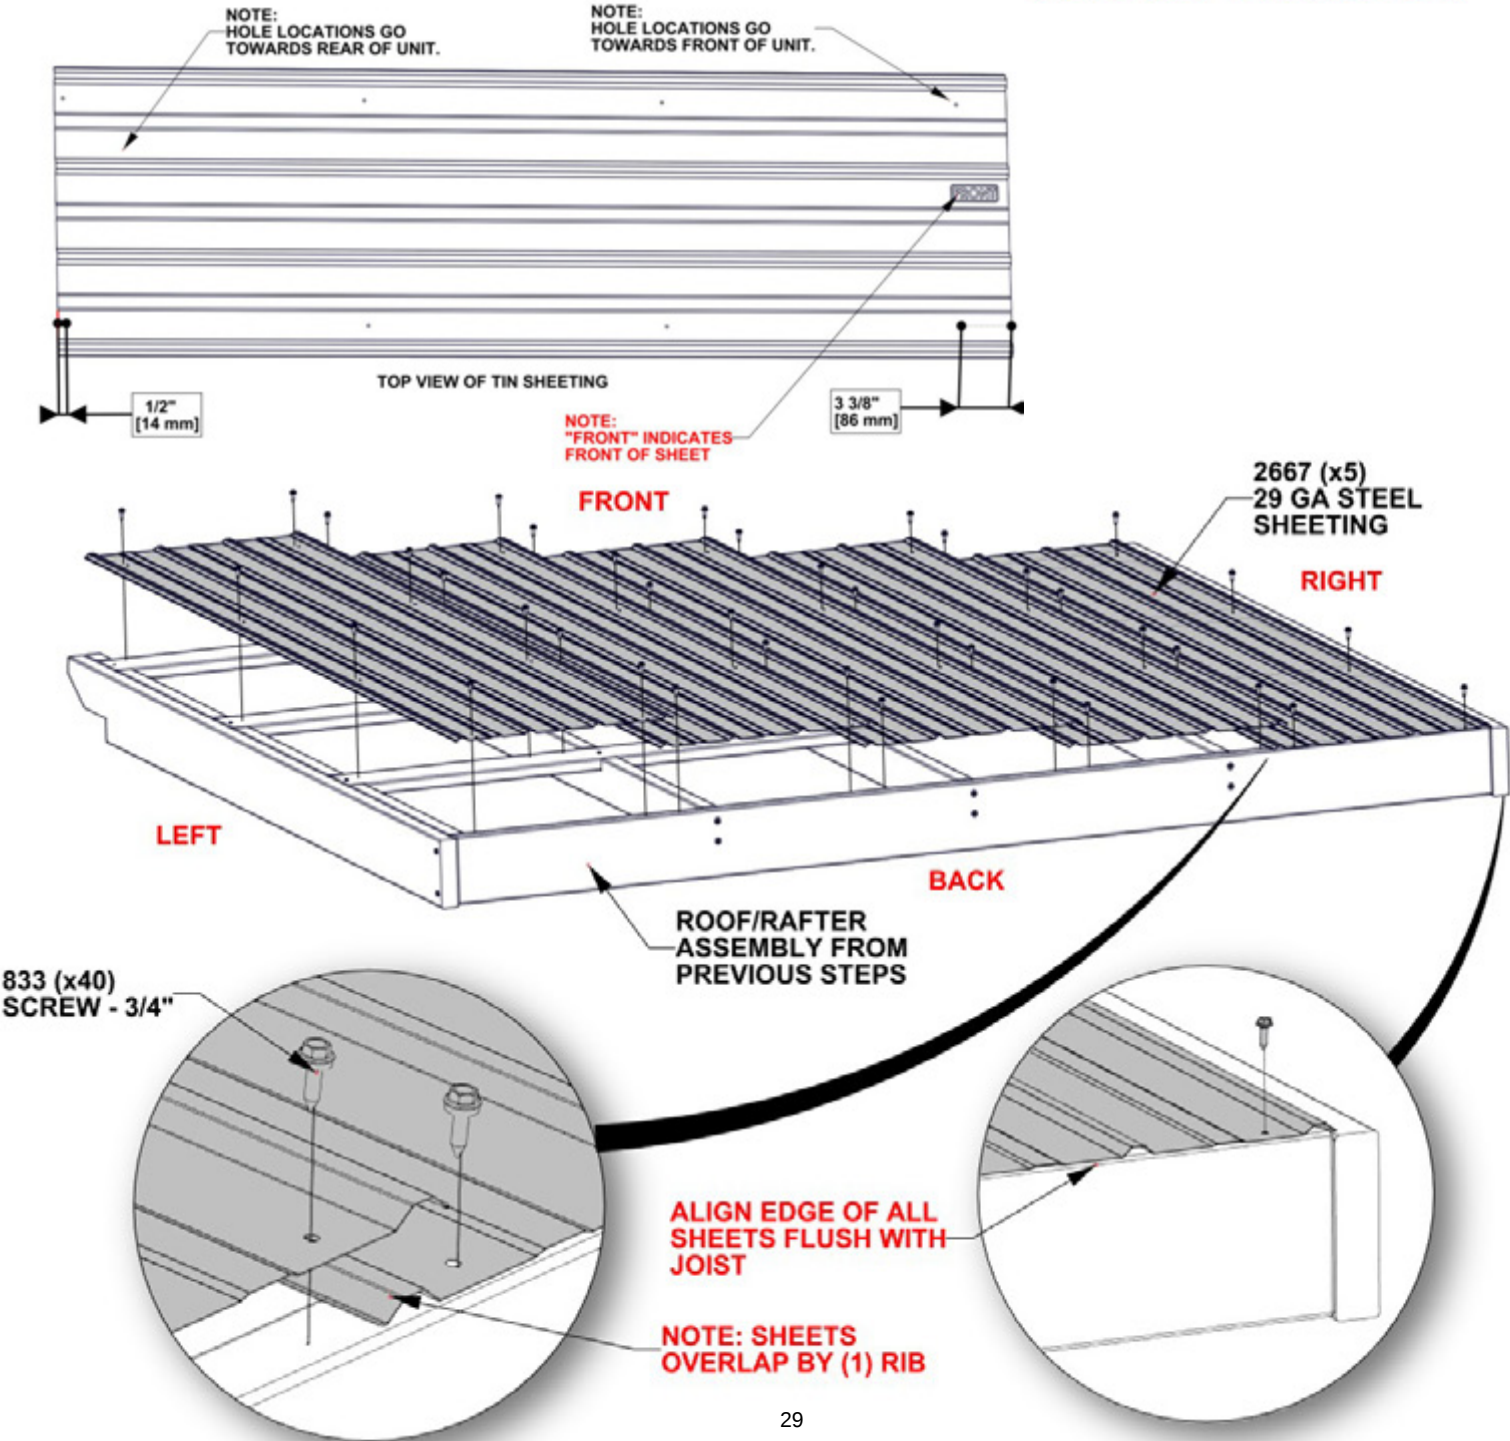


STEP 23 - GAZEBO ROOF ASSEMBLY



A4M02688 (2) | ROOF EDGE TRIM


A4M02686 (2) | ROOF EDGE TRIM SPLICE



A4M02687 (4) | ROOF EDGE TRIM

QTY.	PART NUMBER	DESCRIPTION
14	H100759	SCREW SELF TAPPING 1/4x3/4

NOTE: SCREWS GO THROUGH EDGE TRIM INTO THE TOP OF THE RIBS IN THE APPROXIMATE LOCATIONS SHOWN.

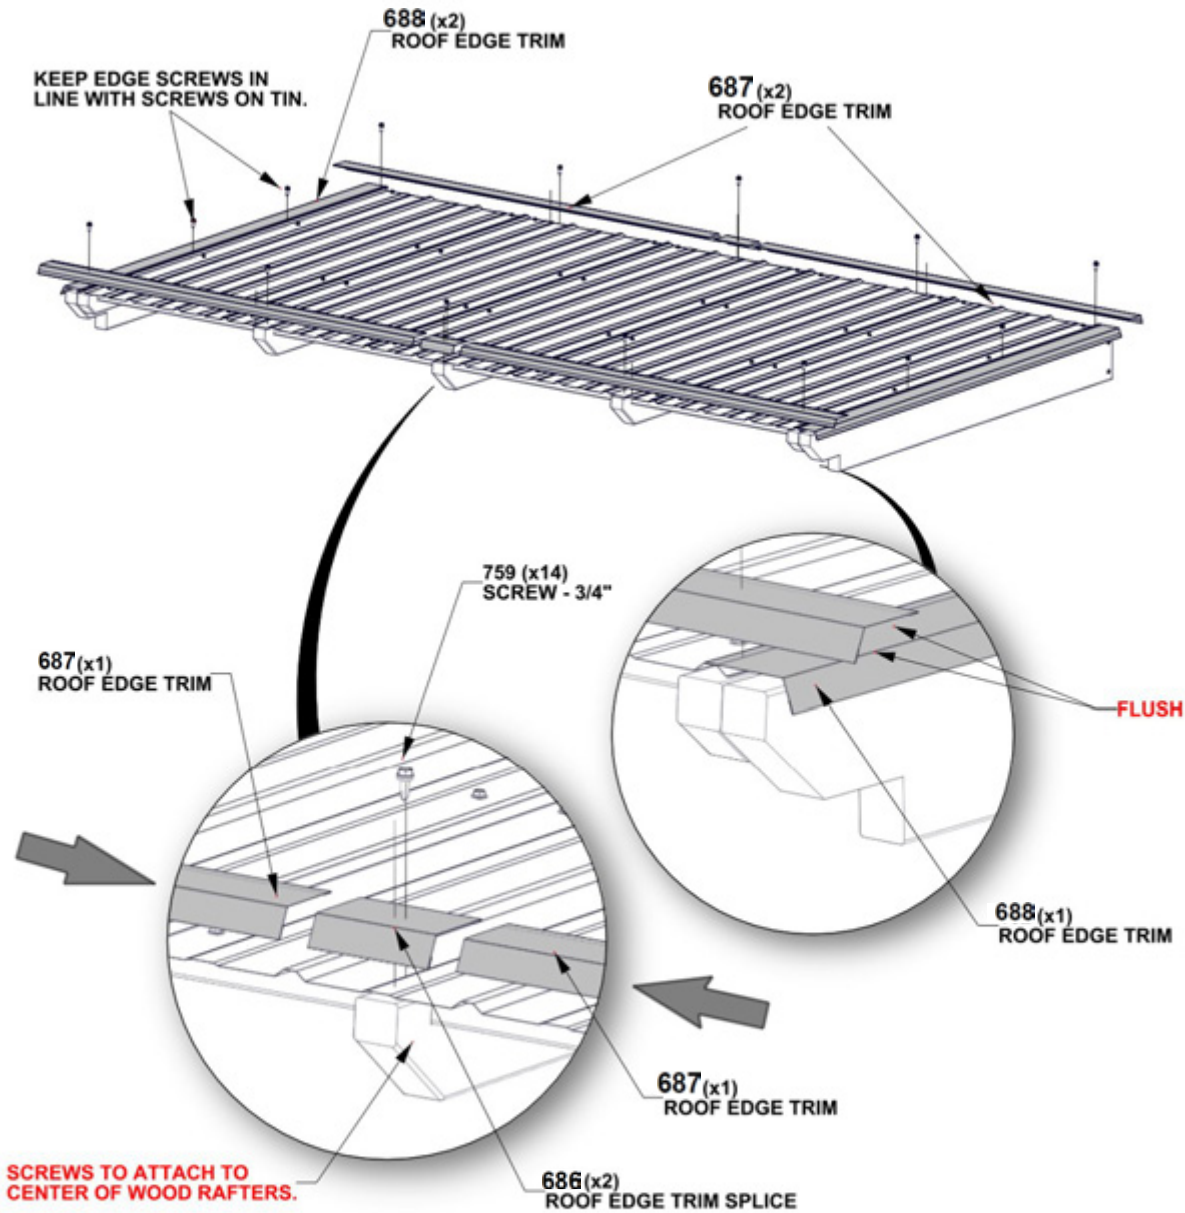


NOTE: SLIDE ROOF EDGE TRIM 687 INTO EACH SIDE OF EDGE TRIM SPLICE 686. PUSH TOGETHER UNTIL ROOF EDGE TRIM 687 IS FLUSH WITH ROOF EDGE TRIM 688 ON EACH SIDE OF THE UNIT. INSTALL SCREWS.

STEP 24 - GAZEBO ROOF ASSEMBLY


A4M01228
(4) | RAFTER BRACKET

QTY.	PART NUMBER	DESCRIPTION
4	H100488	BOLT WH 1/4 X 2 BLK
4	H100630	WASHER FLAT 8x19 BLK
4	H100653	NUT LOCK 1/4 BLK
8	H100536	SCREW PWH 8 X 1 1/4 BLK

**SLIDE ROOF PANEL
ON FROM BACKSIDE
UNTIL OUTSIDE RAFTERS
MEET FRONT BEAM**

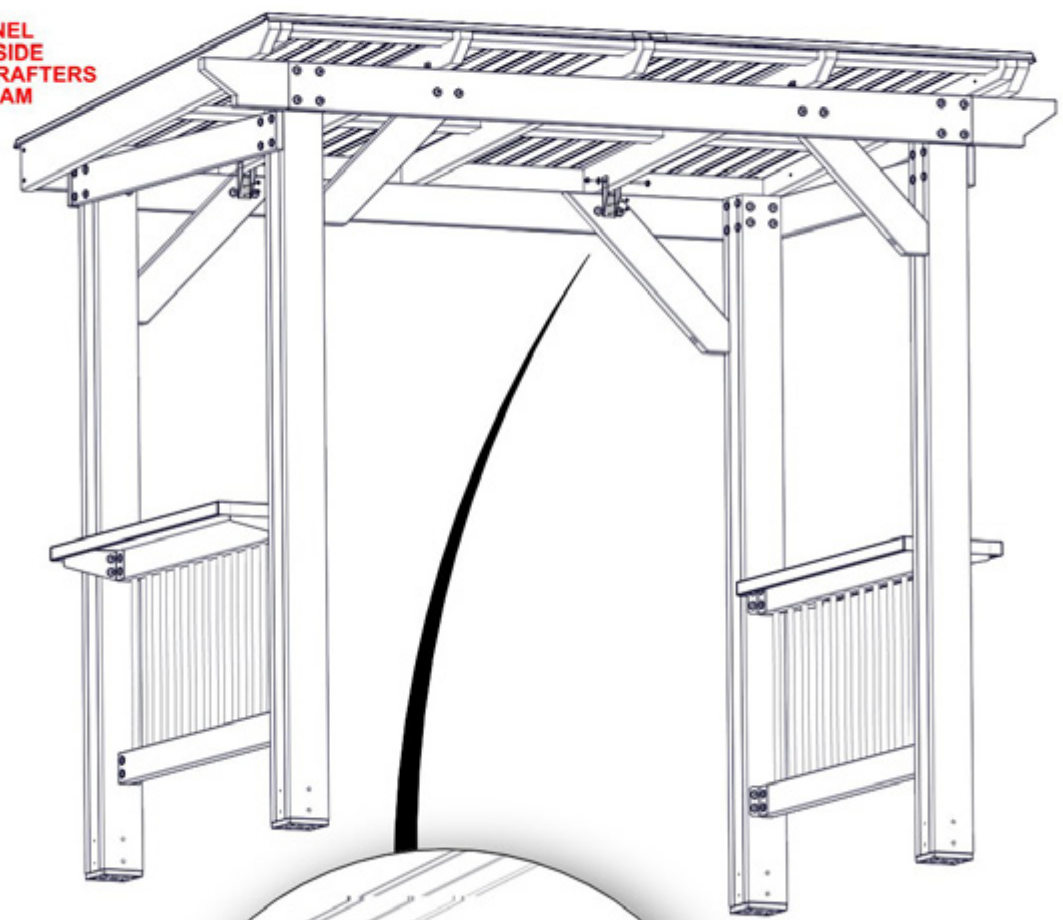

**653 (x4)
NUT - 1/4"**

**630 (x4)
WASHER - 8x19**

**228 (x4)
RAFTER BRACKET**

**488 (x4)
BOLT - 2"**

**536 (x8)
SCREW - 1 1/4"**


**REPEAT STEP TO FASTEN
OTHER (3) RAFTER BRACKETS**

**RAFTER BRACKET WILL
BE POSITIONED BETWEEN
CORBEL BOLTS.**

STEP 25 - GAZEBO ASSEMBLY




A4M01477
(8) | POST PLATE



A4M01478 | POST ANCHORING
(8) PLATE

QTY.	PART NUMBER	DESCRIPTION
8	H100480	BOLT WH 5/16 X 4 3/4 BLK
8	H100469	NUT BARREL WH 5/16 X 5/8 BLK
16	H100471	LAG SCREW WH 5/16 X 1 1/2 BLK

NOTES:
477 POST PLATES MOUNT ON LEFT AND RIGHT SIDE OF POST.
478 POST ANCHORING PLATES MOUNT ON FRONT AND BACK OF POST.

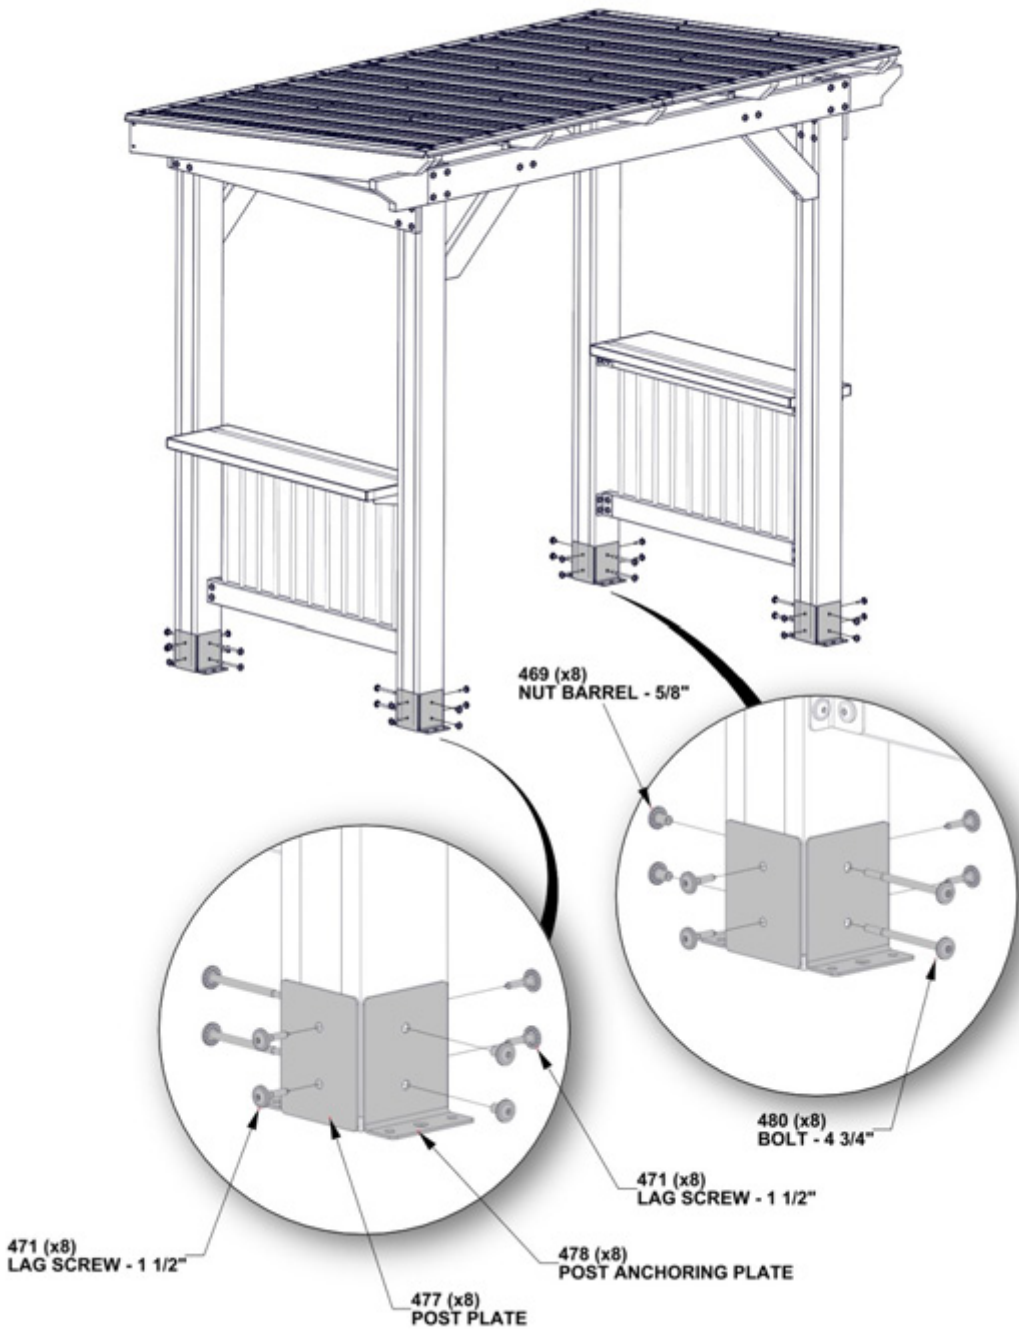


STEP 26 - GAZEBO ASSEMBLY



A100241 | BYD ID TAG
(1)

QTY.	PART NUMBER	DESCRIPTION
2	H100392	SCREW PWH 8 X 3/4 BLK

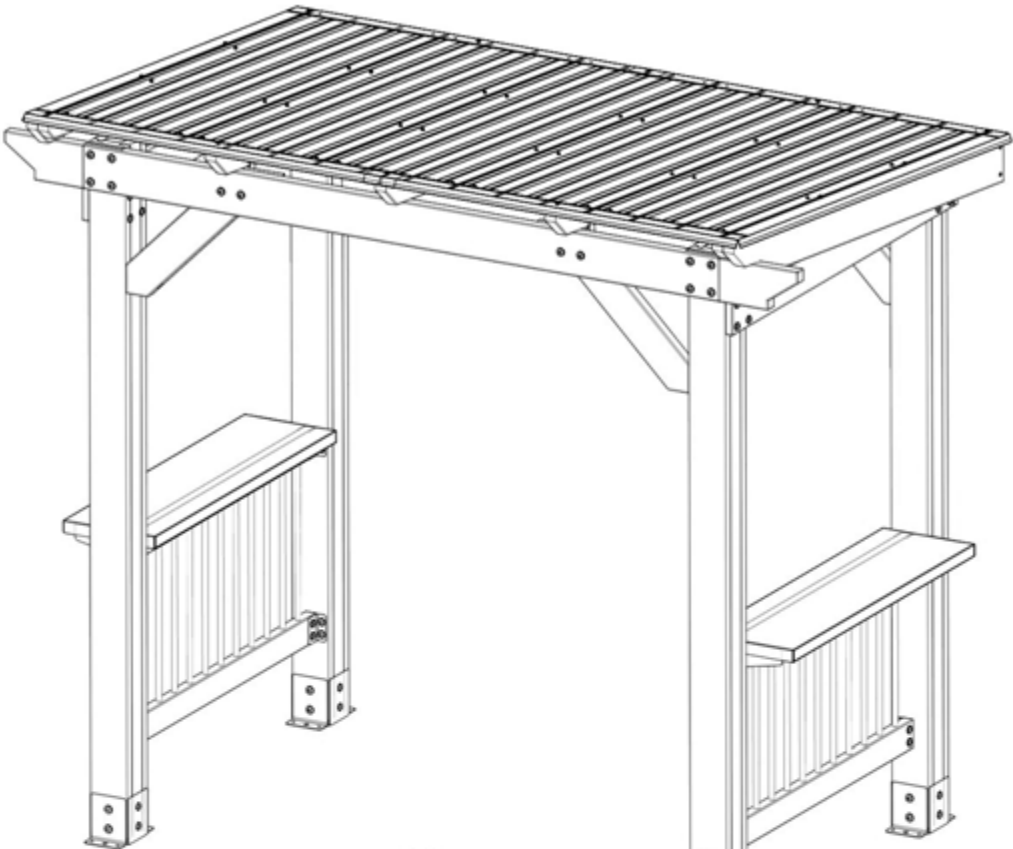

FRONT

241 (x1)
BYD ID TAG (SMALL) WITHOUT AGES


392 (x2)
SCREW - 3/4"




STEP 27 - GAZEBO ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
16	H100630	WASHER FLAT 8x19 BLK
16	H100120	CONCRETE ANCHOR 1/4"x2"

NOTES:
MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE SURFACE OR CONCRETE POST PADS. SEE BELOW
FOR INSTALLATION ON WOOD DECK, YOU MUST ENSURE THERE IS AMPLE STRUCTURAL SUPPORT UNDER DECK.

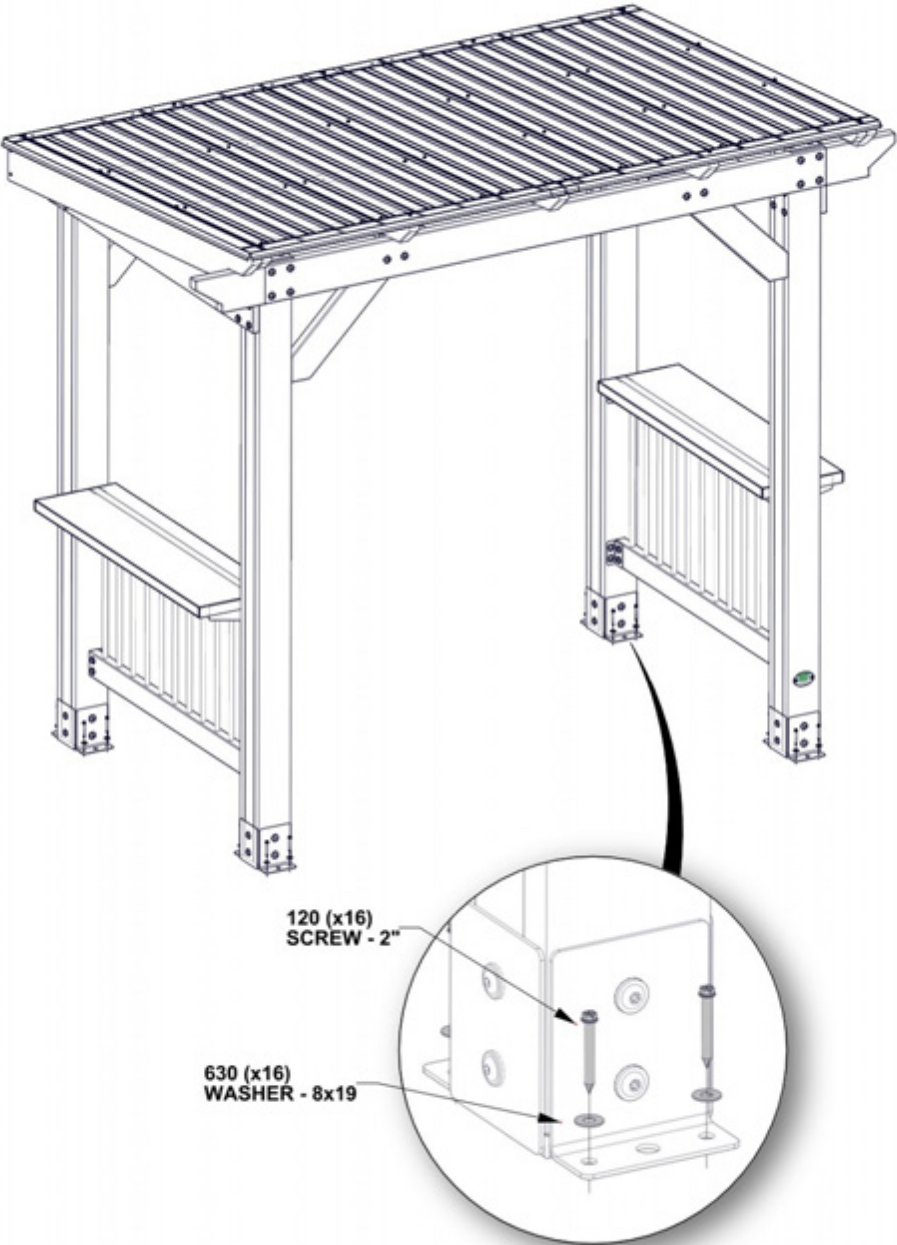

NOTES:
PRE-DRILL HOLES FOR CONCRETE ANCHORS USING A 3/16" CONCRETE DRILL BIT.

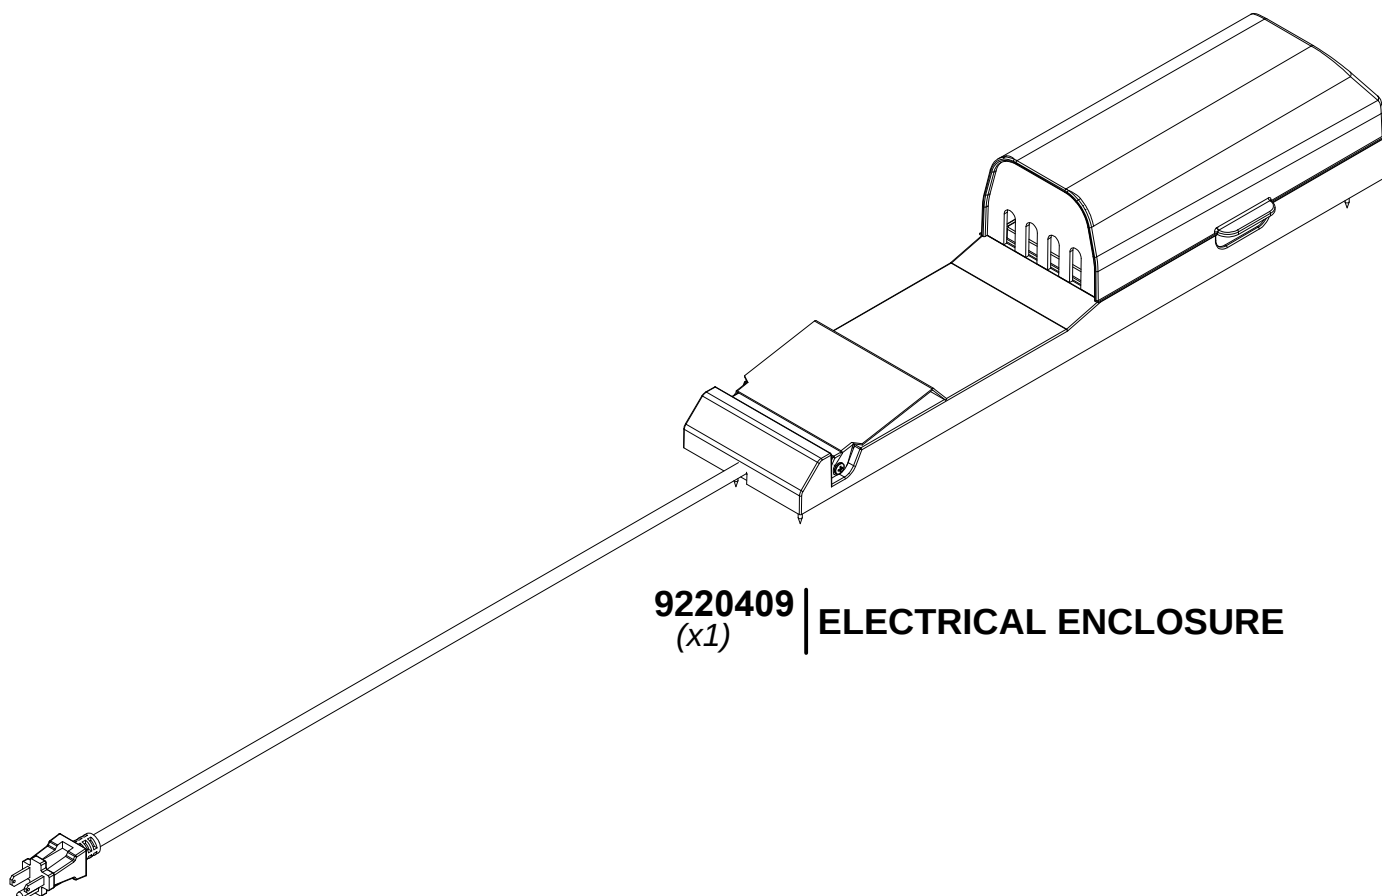

9220409
(x1) | **ELECTRICAL ENCLOSURE**

FOR POWERPORT INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE POWERPORT KIT. INSTALL ON ANY POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.