



MANUFACTURED BY:  
Backyard Discovery  
3305 Airport Drive, Pittsburg, KS 66762  
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476  
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 0800-567-8990

# CARAWAY COTTAGE - WHITE PLAYHOUSE

## Model # 2303041

The assembly manual must be retained  
since it contains important information



### WARNING

**Adult Assembly Required.**

**Not suitable for children under 36 months due to small parts.**

**FOR DOMESTIC USE ONLY. INTENDED FOR OUTDOOR USE.**

CAN ICES-003 (B)/NMB-003(B)



**Please visit [www.backyarddiscovery.com](http://www.backyarddiscovery.com)**

For the most up to date assembly manual, to register your set, or to order replacement parts

*Para obtener instrucciones en español, visite [www.backyarddiscovery.com](http://www.backyarddiscovery.com)*

Made in China

INS-2303041-A-CARAWAY COTTAGE - WHITE-ENG 06/04/24

# Owner's Manual - Basic Setup Dimensions & Assembly Notes

Selecting the correct location for your play product is important for your children's safety and the product's longevity

- The safe play area refers to a zone extending 6'-7" (2m) beyond the play product on all sides, including the space above the play product.


## SAFE PLAY AREA DIAGRAM

### Ground Dimension


3'-7 1/4" [1.1 m] x 4'-2 1/4" [1.3 m]

### Safe Play Area

16'-9 1/4" [5.1 m] x 17'-4 1/4" [5.3 m] x 11'-4" [3.5 m]

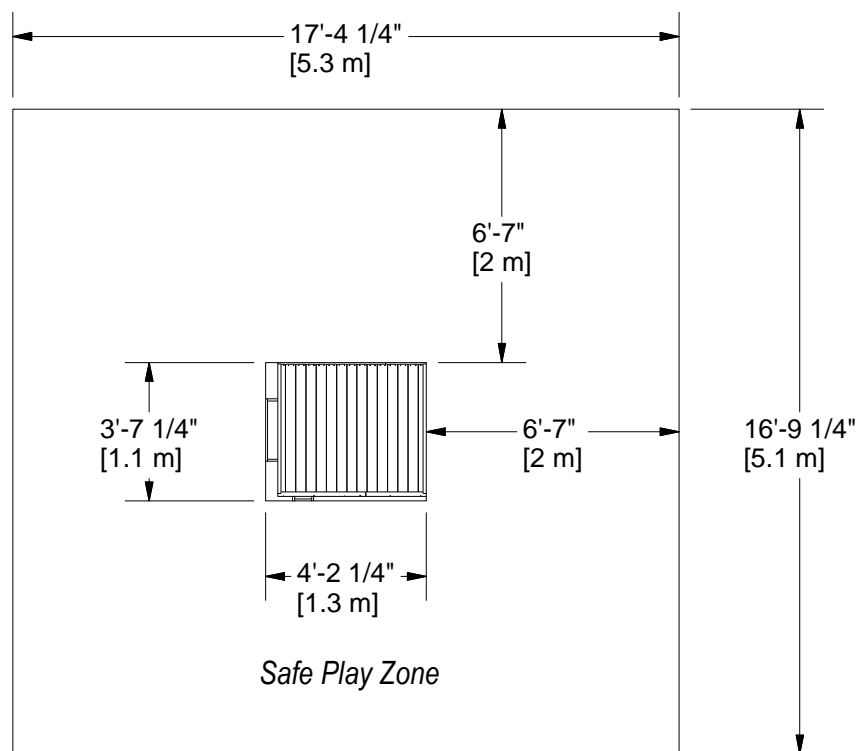

**SAFE PLAY HEIGHT: 11'-4" [3.5m]**  
**MAXIMUM FALL HEIGHT: 1'-10 3/4" [.6m]**

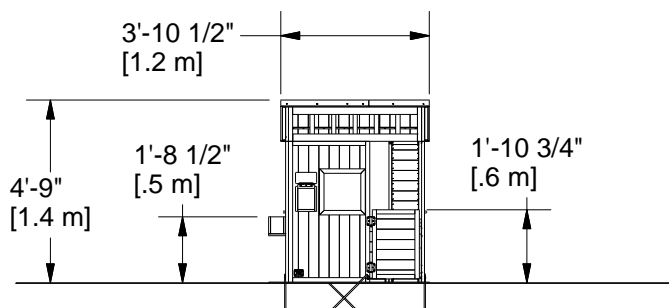


### General Information:

Your set has been designed and engineered for children only and for residential use only.  
A maximum of 150 lbs. per child is recommended for play activities designed for individual use.  
A maximum of 120 lbs. per child is recommended for play activities designed for multiple child use.  
A maximum of 6 children is recommended for this playhouse.

# Owner's Manual - Parts Identification

## Wood Components (Not to Scale)




**AD01 TABLE TOP SUPPORT - W4L19818**

(x1) 1"x4"x6 3/4" (24x102x172)




**F01 ROOF TRIM - W4L19315**

(x2) 1"x1 7/8"x41 7/8" (26x47x1064)




**F03 ROOF TRIM - W4L19820**

(x1) 1"x1 7/8"x18 7/8" (26x47x479)



**F02 ROOF TRIM - W4L19316**

(x1) 1"x1 7/8"x27 1/2" (26x47x700)



**H01 TABLE TOP SUPPORT - W4L19817**

(x2) 1"x3 3/8"x6 3/4" (24x86x172)



**J01 TOP RAIL - W4L19308**

(x1) 1"x1 3/8"x41 5/8" (24x34x1057)




**K01 FRONT - W4L19311**

(x1) 5/8"x5 1/4"x19 1/2" (16x134x495)




**K02 BACK - W4L19312**

(x1) 5/8"x5 1/4"x19 1/2" (16x134x495)




**K03 BOTTOM - W4L19314**

(x1) 5/8"x5 1/4"x19 1/2" (16x134x495)




**M02 TABLE TOP - W4L19816**

(x2) 5/8"x3 3/8"x41 5/8" (16x86x1056)



**N01 WINDOW BOARD - W4L19309**

(x2) 5/8"x1 5/8"x17 7/8" (16x40x454)



**N02 WINDOW BOARD - W4L19310**

(x1) 5/8"x1 5/8"x21 1/8" (16x40x536)



**N04 ROOF TRIM - W4L19819**

(x1) 5/8"x1 3/8"x12 3/4" (16x34x324)



**N03 ROOF TRIM - W4L19317**

(x1) 5/8"x1 3/8"x33 5/8" (16x34x855)




**Y01 SIDE - W4L19313**


(x2) 5/8"x4"x5 1/4" (16x102x134)

# Owner's Manual - Parts Identification


## Wood Components (Not to Scale)

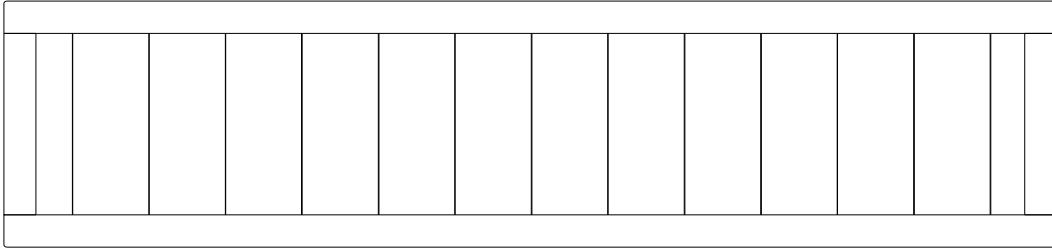


**WP01 WALL PANEL - W2A04117**  
(x1) 1"x10 1/4"x43 7/8" (24x260x1115)

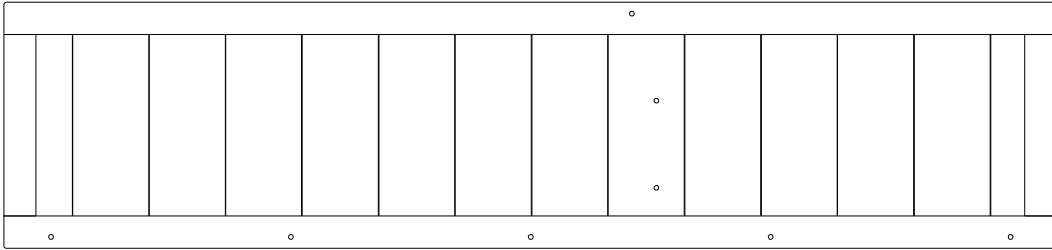

**WP02 WALL PANEL - W2A04118**  
(x1) 1"x10 1/4"x43 7/8" (24x260x1115)

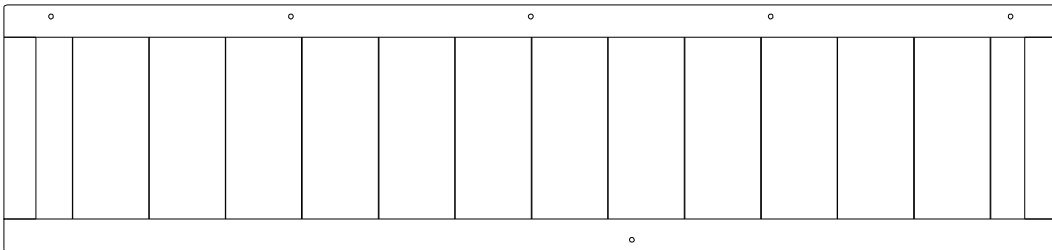


**WP03 WALL PANEL - W2A04119**  
(x1) 1"x10 1/4"x43 7/8" (24x260x1115)

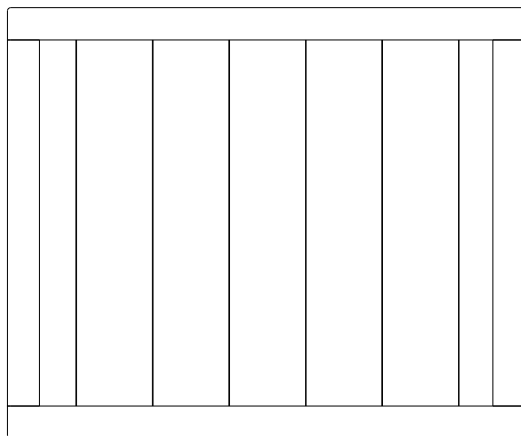


**WP04 WALL PANEL - W2A04120**  
(x2) 1"x10 1/4"x43 7/8" (24x455x548)

# Owner's Manual - Parts Identification


## Wood Components (Not to Scale)




**WP05 WALL PANEL - W2A04121**  
(x1) 1"x18 3/8"x21 1/8" (24x467x537)

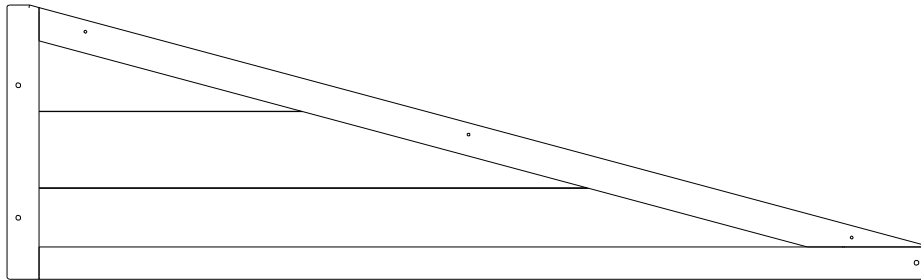

**WP06 WALL PANEL - W2A04122**  
(x1) 1"x11 3/8"x38 3/8" (24x290x975)

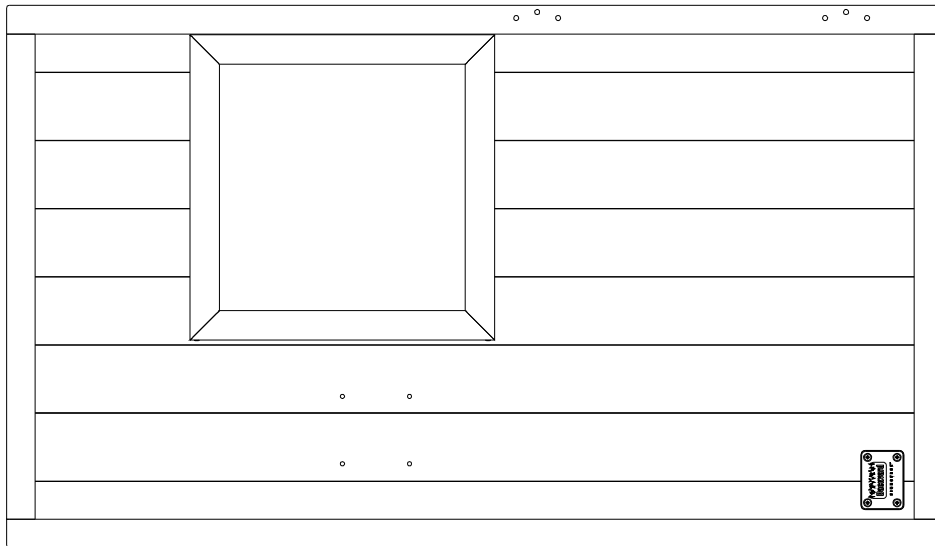


**WP07 WALL PANEL - W2A04123**  
(x1) 1"x10 1/4"x43 7/8" (24x645x1115)

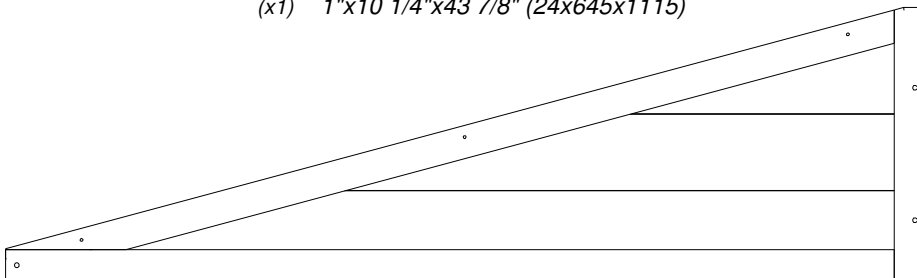


**WP08 WALL PANEL - W2A04124**  
(x1) 1"x11 3/8"x38 3/8" (24x290x975)

# Owner's Manual - Parts Identification


## Wood Components (Not to Scale)

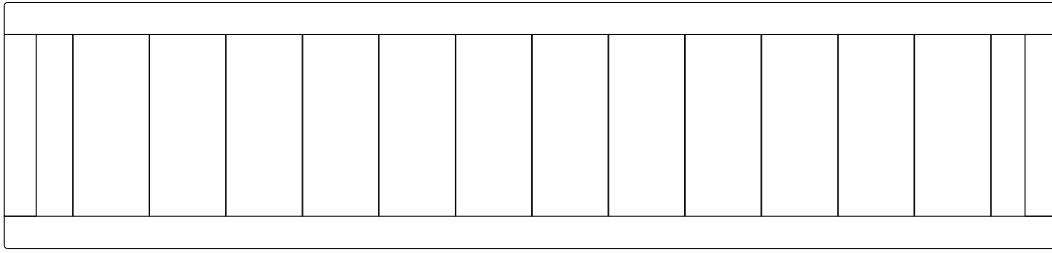


**WP09 WALL PANEL - W2A04126**  
(x1) 1"x10 1/4"x43 7/8" (24x260x1115)

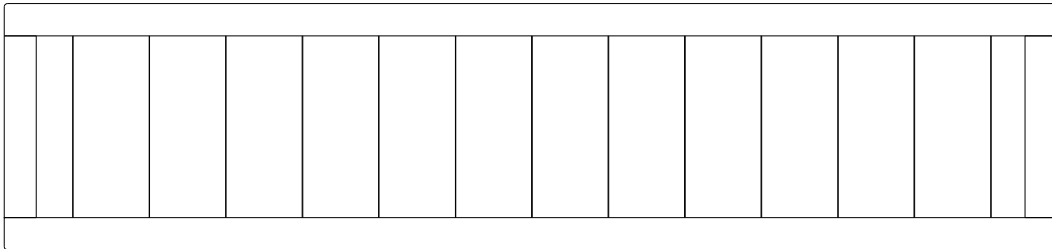


**WP10 WALL PANEL - W2A04127**  
(x1) 1"x10 1/4"x43 7/8" (24x260x1115)

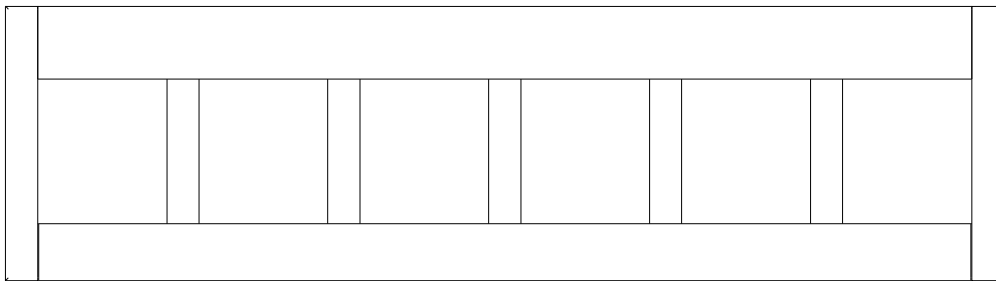


**WP11 WALL PANEL - W2A04128**  
(x1) 15/16"x11 7/16"x41 5/8" (24x290x1057)

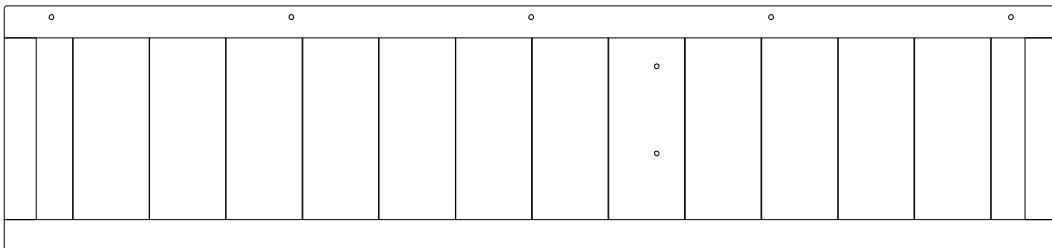

**WP12 WALL PANEL - W2A04132**  
(x1) 1"x10 1/4"x43 7/8" (24x260x1115)

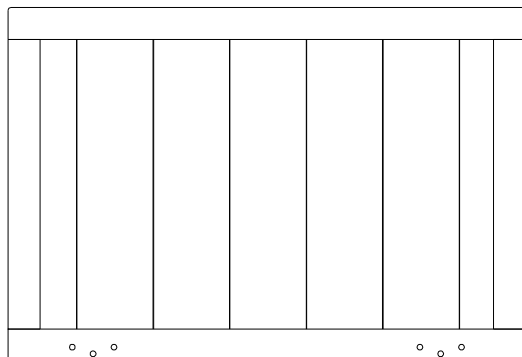

**DP01 DOOR PANEL - W2A04125**  
(x1) 1"x10 1/4"x43 7/8" (24x374x548)

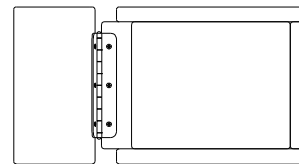

**MB01 MAILBOX - W2A04129**  
(x1) 3 3/8"x6 9/16"x8 3/4" (86x166x222)

# Owner's Manual - Parts Identification

## Wood Components (Not to Scale)

|  |
|--|
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |


**RP01 ROOF PANEL - W2A04130**  
(x1) 1 3/8"x24 5/8"x41 7/8" (35x625x1064)

|  |
|--|
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |
|  |


**RP02 ROOF PANEL - W2A04131**  
(x1) 1 3/8"x21 1/8"x41 7/8" (35x535x1064)

# Owner's Manual - Parts Identification


## Hardware Components




**H100385 SCREW PFH BLK**  
(x4) 8x1




**H100387 SCREW PFH BLK**  
(x25) 8x1 1/4




**H100200 SCREW PFH BLK**  
(x39) 8x1 1/2




**H100382 SCREW PFH BLK**  
(x6) 8x1 3/4




**H100391 SCREW PFH BLK**  
(x23) 8x2

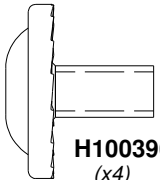


**H100396 BOLT WH BLK**  
(x4) 5/16x1/2

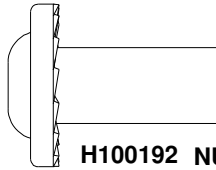

**H100192 NUT BARREL WH BLK**  
(x4) 5/16x7/8

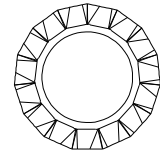

**H100199 WASHER LOCK EXT BLK**  
(x4) 12x19



**H100807 SCREW POH BLK**  
(x12) 8/32x1




**H100804 T-NUT**  
(x12) 8/32




# Owner's Manual - Parts Identification


## Accessory Components (Not to Scale)

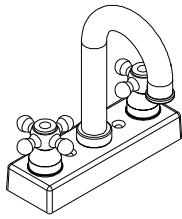

**A6P00024** FAUCET KIT  
(x1)

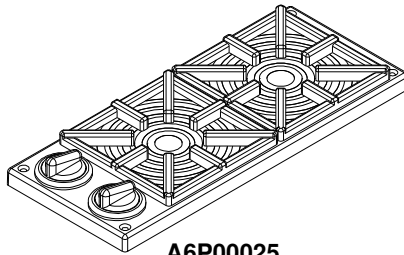

**A6P00025** STOVE KIT  
(x1)

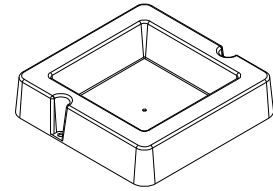

**A6P00032** SURFACE MOUNT BASIN  
(x1)




**A6P00336** BOIL POT  
(x1)



**A6P00338** FRY PAN  
(x1)




**A6P00337** POT/PAN LID  
(x1)




**A6P00339** SPATULA  
(x1)




**A6P00340** LADLE  
(x1)




**A4M02752** CLEAT  
(x8)

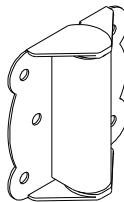


**A4M00624** HINGE (DOOR, SPRING LOADED)  
(x1)

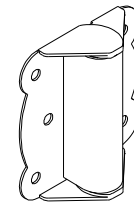


**A4M00994** HINGE (DOOR, NON-SPRING LOADED)  
(x1)




**H100764** SCREW SETTER  
(x1)



**H101100** MAGNETIC DRIVER  
(x1)




**H100147** T-30 TORX BIT  
(x1)

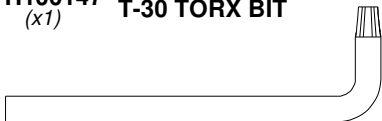

**H100114** T-30 TORX WRENCH  
(x1)



**A4M00527** GROUND STAKE REBAR  
(x4)

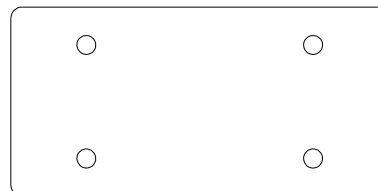

**A4M02100** CLEAT  
(x12)



**A4M02754** METAL TIE STRAP  
(x1)

# PRE-ASSEMBLY STEP 1 - SORTING PARTS


It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

---

## WOOD PARTS:

- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

**NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.**

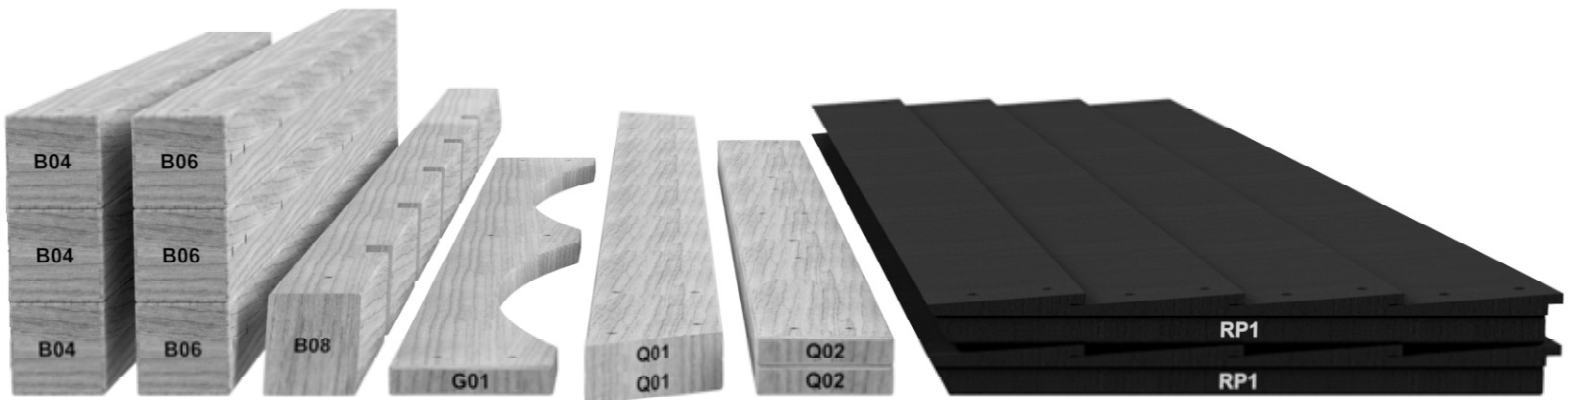

---

## HARDWARE PARTS:


- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.



# PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or Electric Drill



Drill Attachments:  
Phillips Head



1/8", 3/16", 3/8" & 7/16" Drill Bits



Phillips Screw Driver



Open End Wrenches 1/2" & 9/16"




3/8" Drive Ratchet, 1/2" & 9/16" STD Sockets 1/2" & 9/16" Deep Sockets




Claw Hammer



Rubber Mallet - Optional

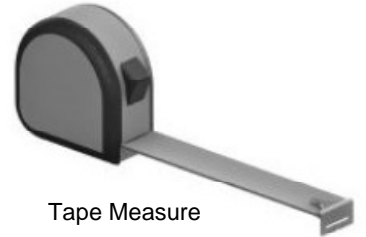

Tape Measure

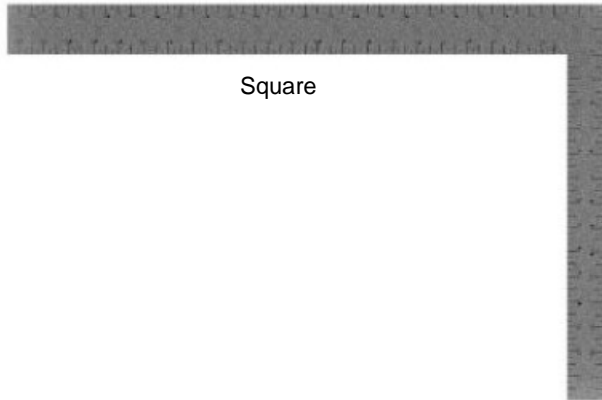

Square




Level 24"

# STEP 1 - BOX ASSEMBLY


| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 4   | H100200     | SCREW PFH 8x1-1/2 BLK |



**K01 FRONT - W4L19311**  
(x1) 5/8"x5 1/4"x19 1/2" (16x134x495)




**Y01 SIDE - W4L19313**  
(x2) 5/8"x4"x5 1/4" (16x102x134)

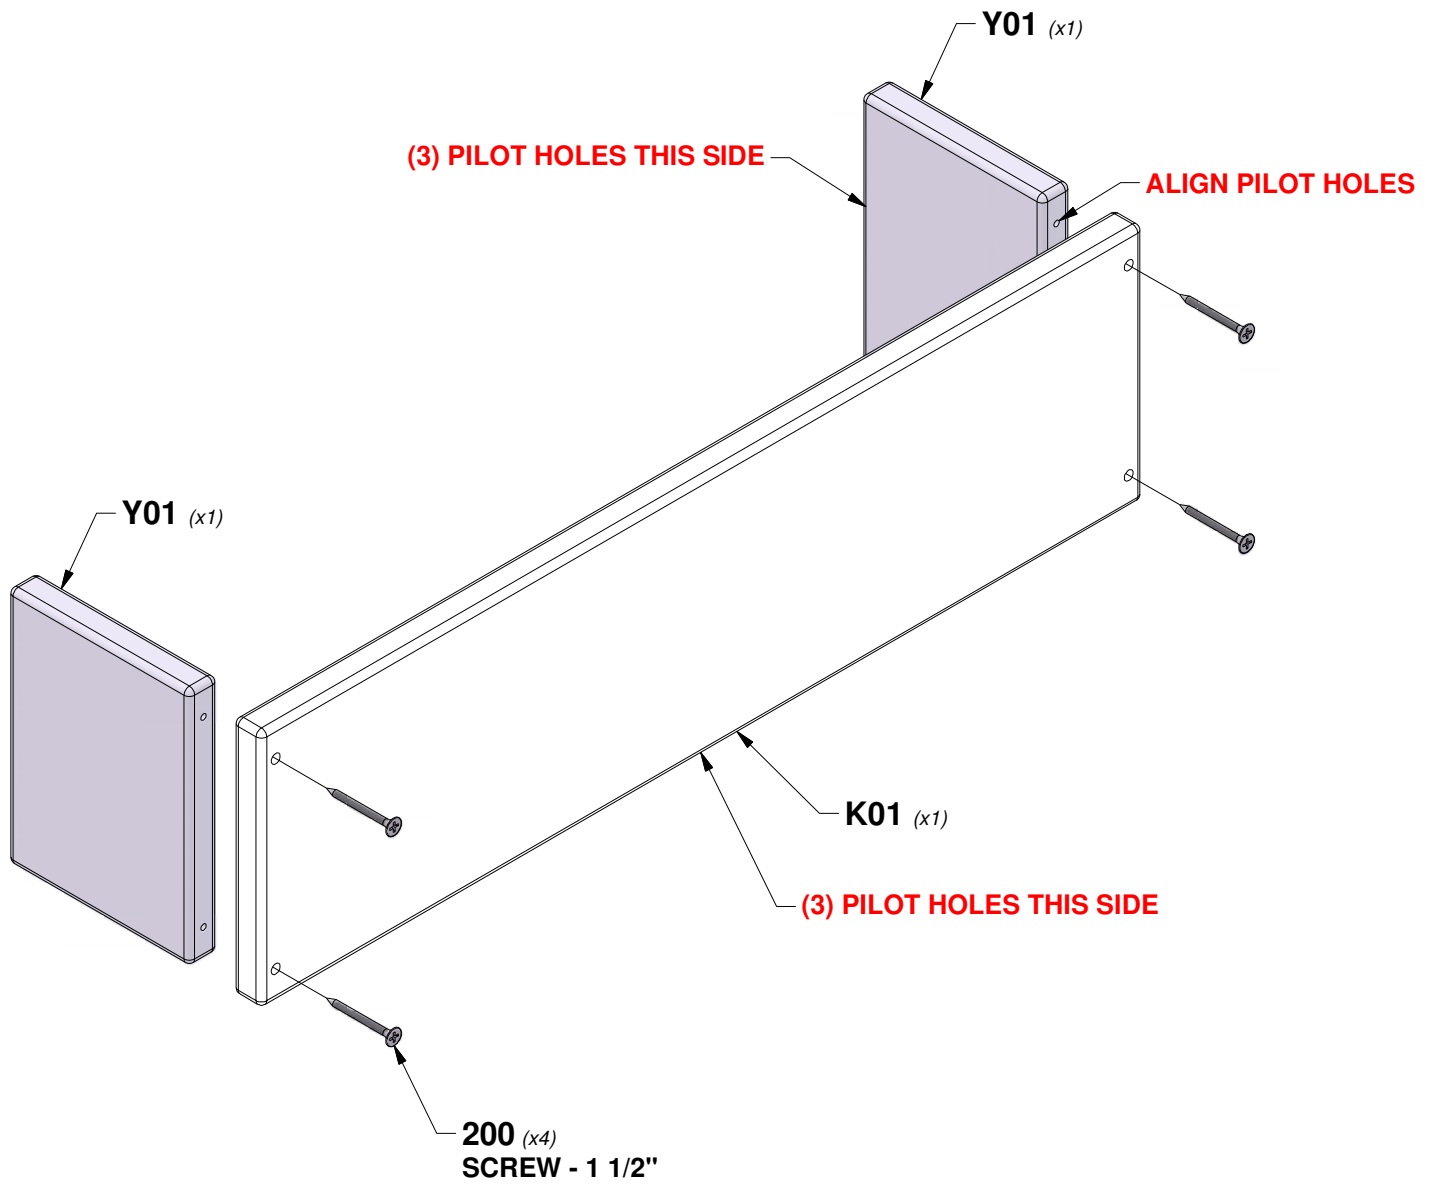


# STEP 2 - BOX ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 4   | H100200     | SCREW PFH 8x1-1/2 BLK |

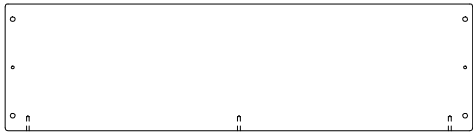


**K02 BACK - W4L19312**  
(x1) 5/8"x5 1/4"x19 1/2" (16x134x495)

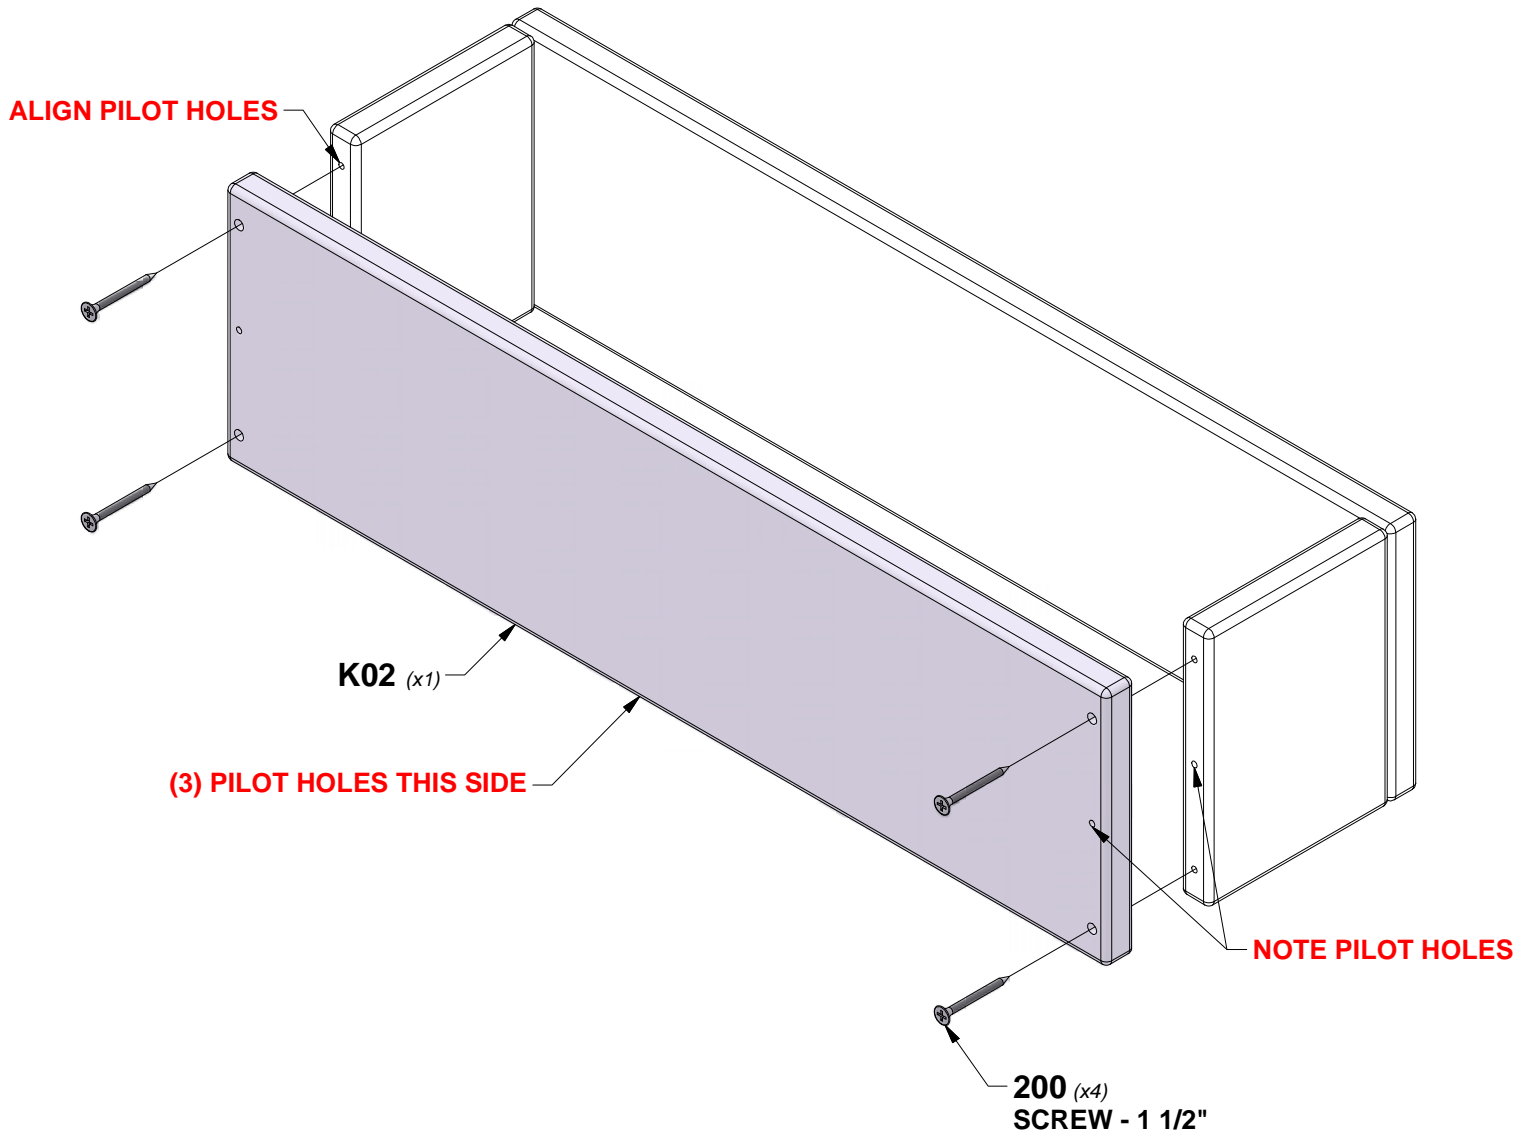


# STEP 3 - BOX ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 6   | H100200     | SCREW PFH 8x1-1/2 BLK |

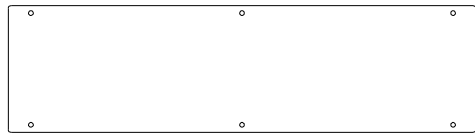


**K03 BOTTOM - W4L19314**  
(x1) 5/8"x5 1/4"x19 1/2" (16x134x495)

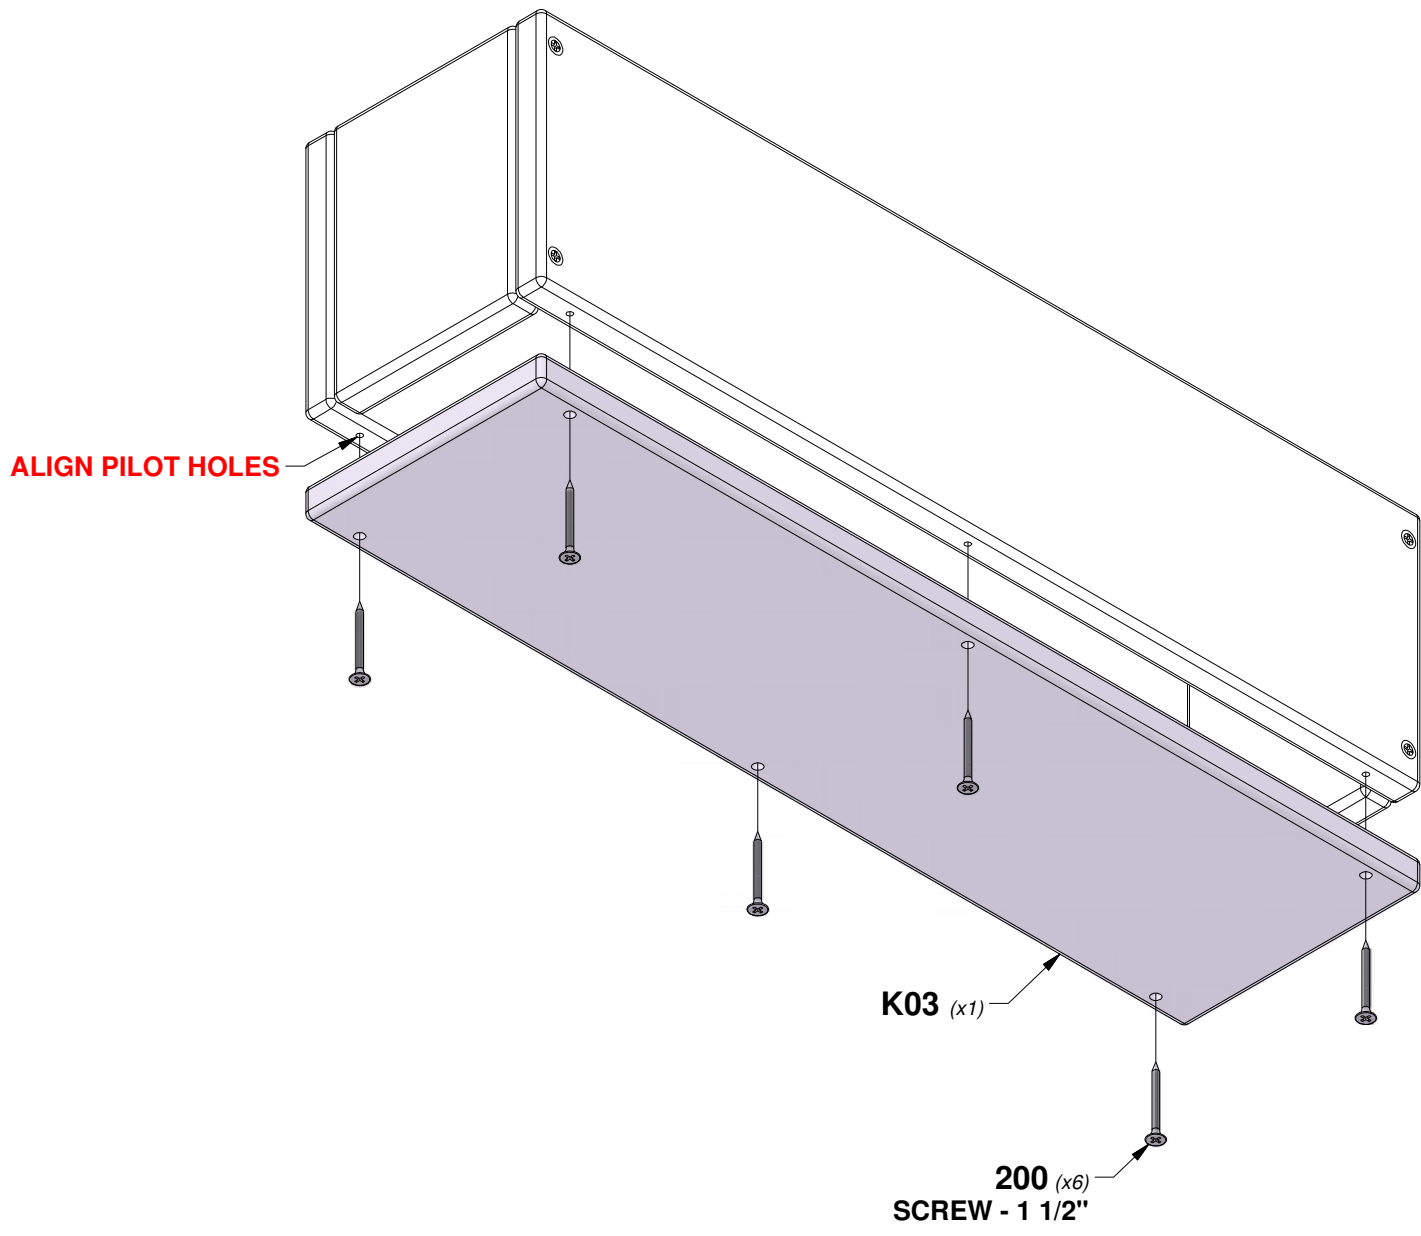


# STEP 1 - PLAYHOUSE ASSEMBLY


| QTY | PART NUMBER | DESCRIPTION       |
|-----|-------------|-------------------|
| 5   | H100391     | SCREW PFH 8x2 BLK |

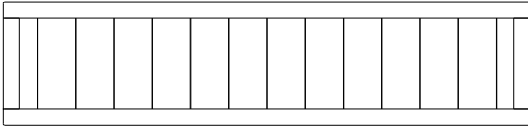

**WP01 WALL PANEL - W2A04117**  
 (x1) 1"x10 1/4"x43 7/8" (24x260x1115)

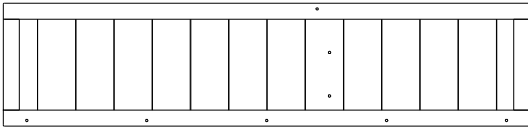


**WP02 WALL PANEL - W2A04118**  
 (x1) 1"x10 1/4"x43 7/8" (24x260x1115)

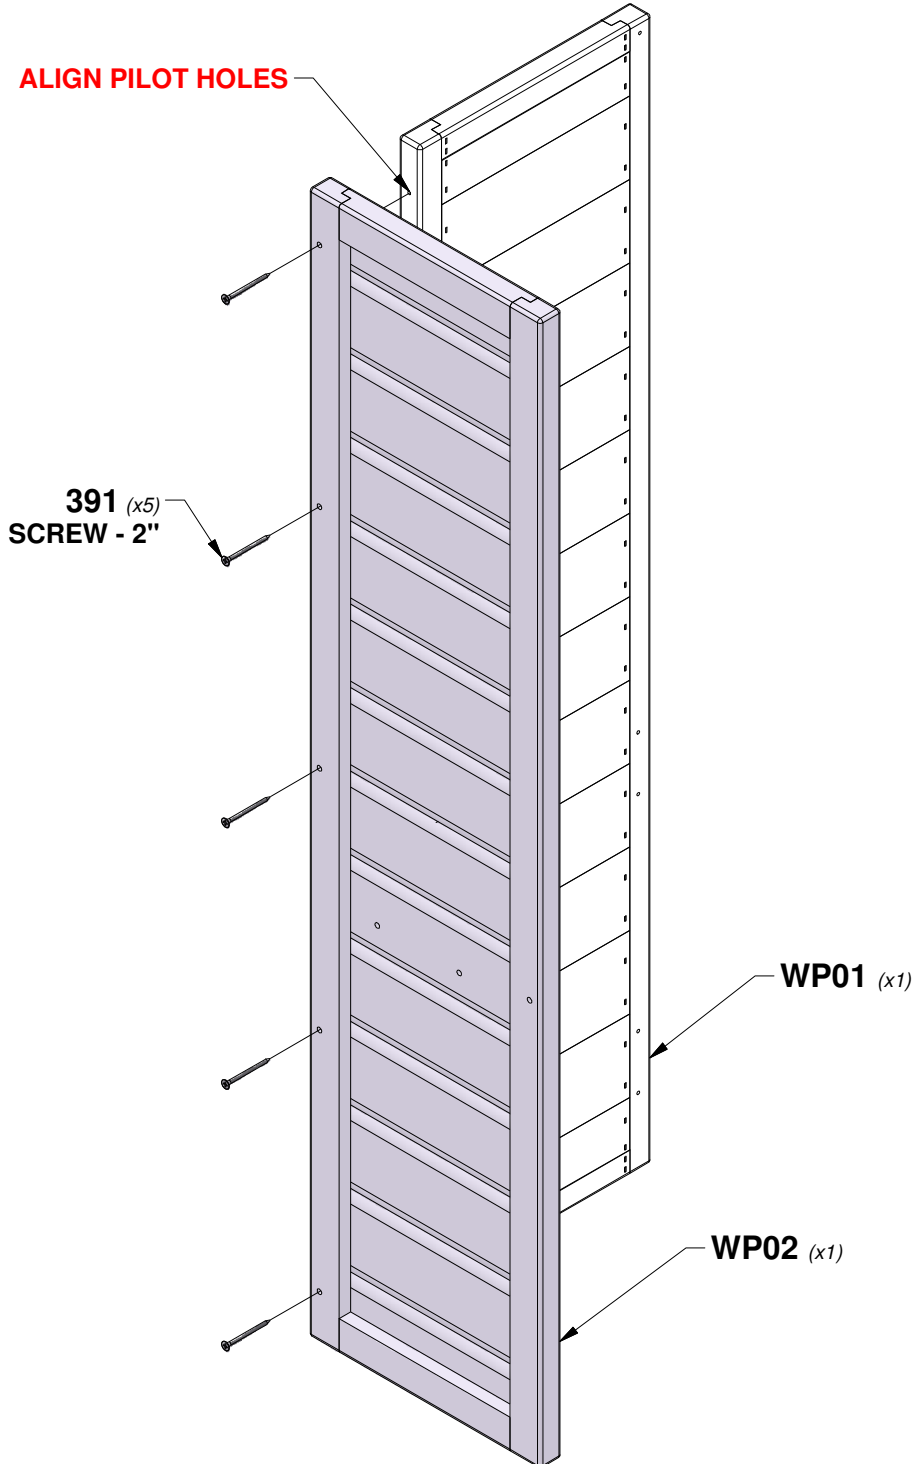

# STEP 2 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 8   | H100392     | SCREW PWH 8x3/4 BLK |

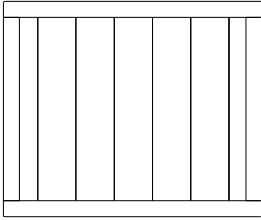


**WP04 WALL PANEL - W2A04120**  
 (x1) 1"x10 1/4"x43 7/8" (24x455x548)



**A4M02100 CLEAT**  
 (x2)


**TIP:**  
**ALIGN PILOT HOLES**

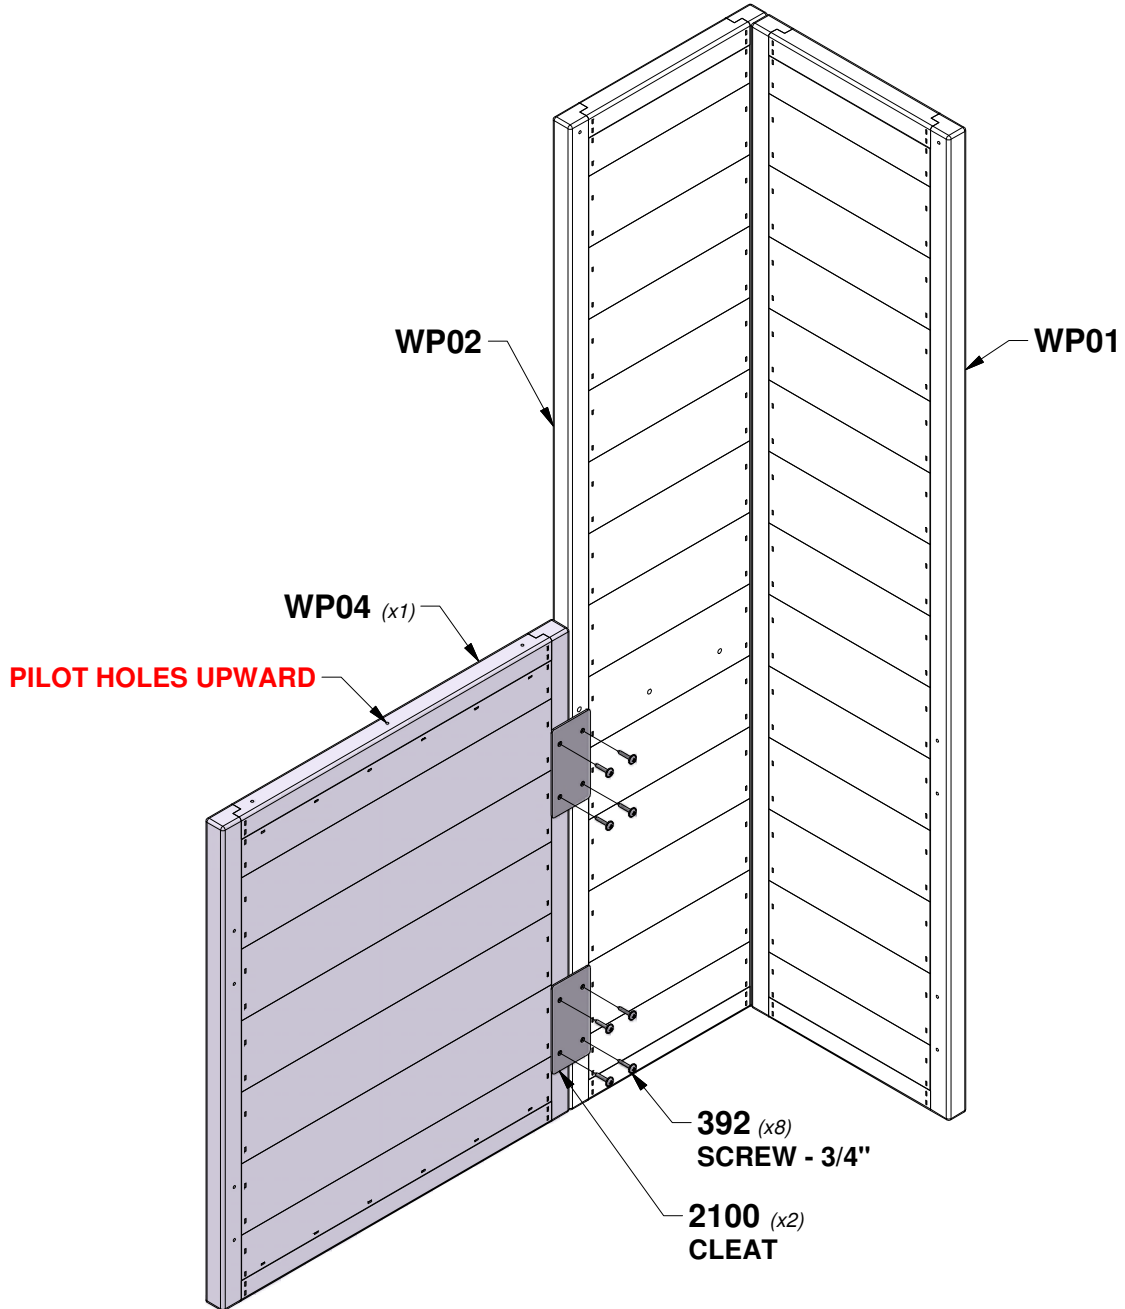



# STEP 3 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 8   | H100392     | SCREW PWH 8x3/4 BLK |

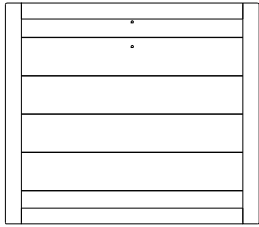


**WP05 WALL PANEL - W2A04121**  
(x1) 1"x18 3/8"x21 1/8" (24x467x537)




**A4M02100 CLEAT**  
(x2)

**TIP:**  
**ALIGN PILOT HOLES**

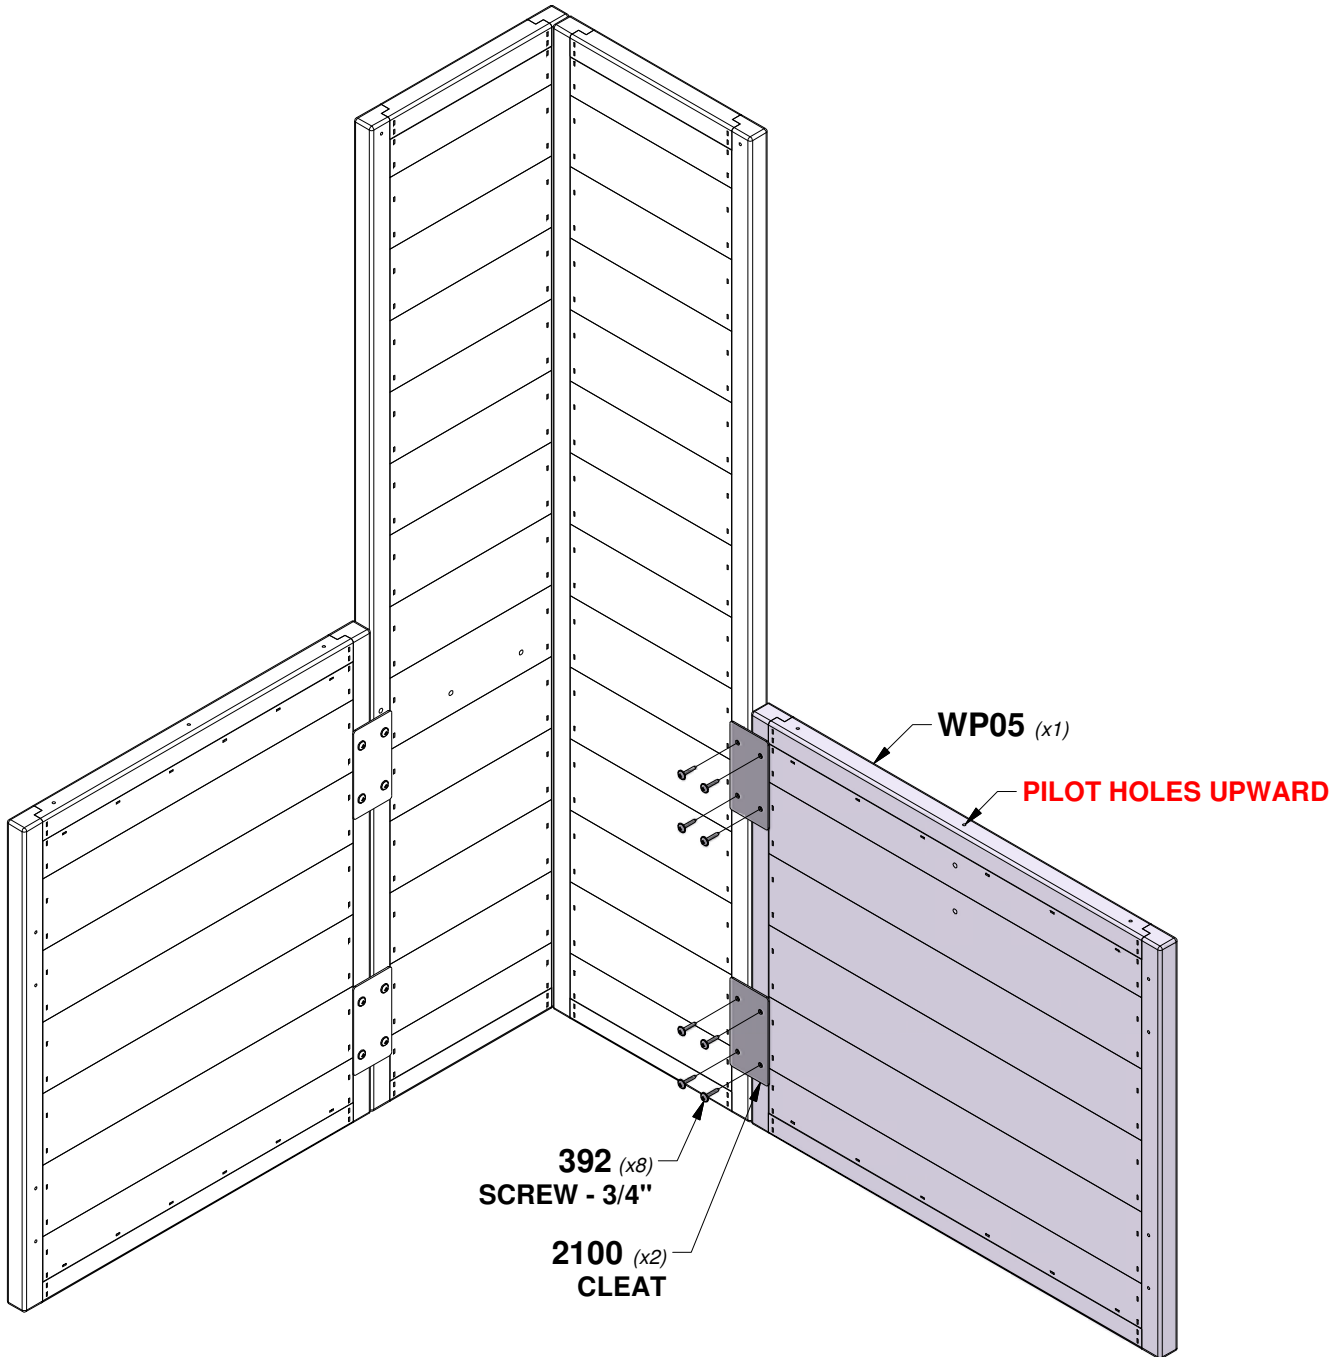


# STEP 4 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 8   | H100392     | SCREW PWH 8x3/4 BLK |

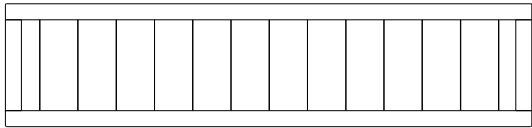


**WP09 WALL PANEL - W2A04126**  
(x1) 1"x10 1/4"x43 7/8" (24x260x1115)




**A4M02100 CLEAT**  
(x2)

**TIP:**  
**ALIGN PILOT HOLES**

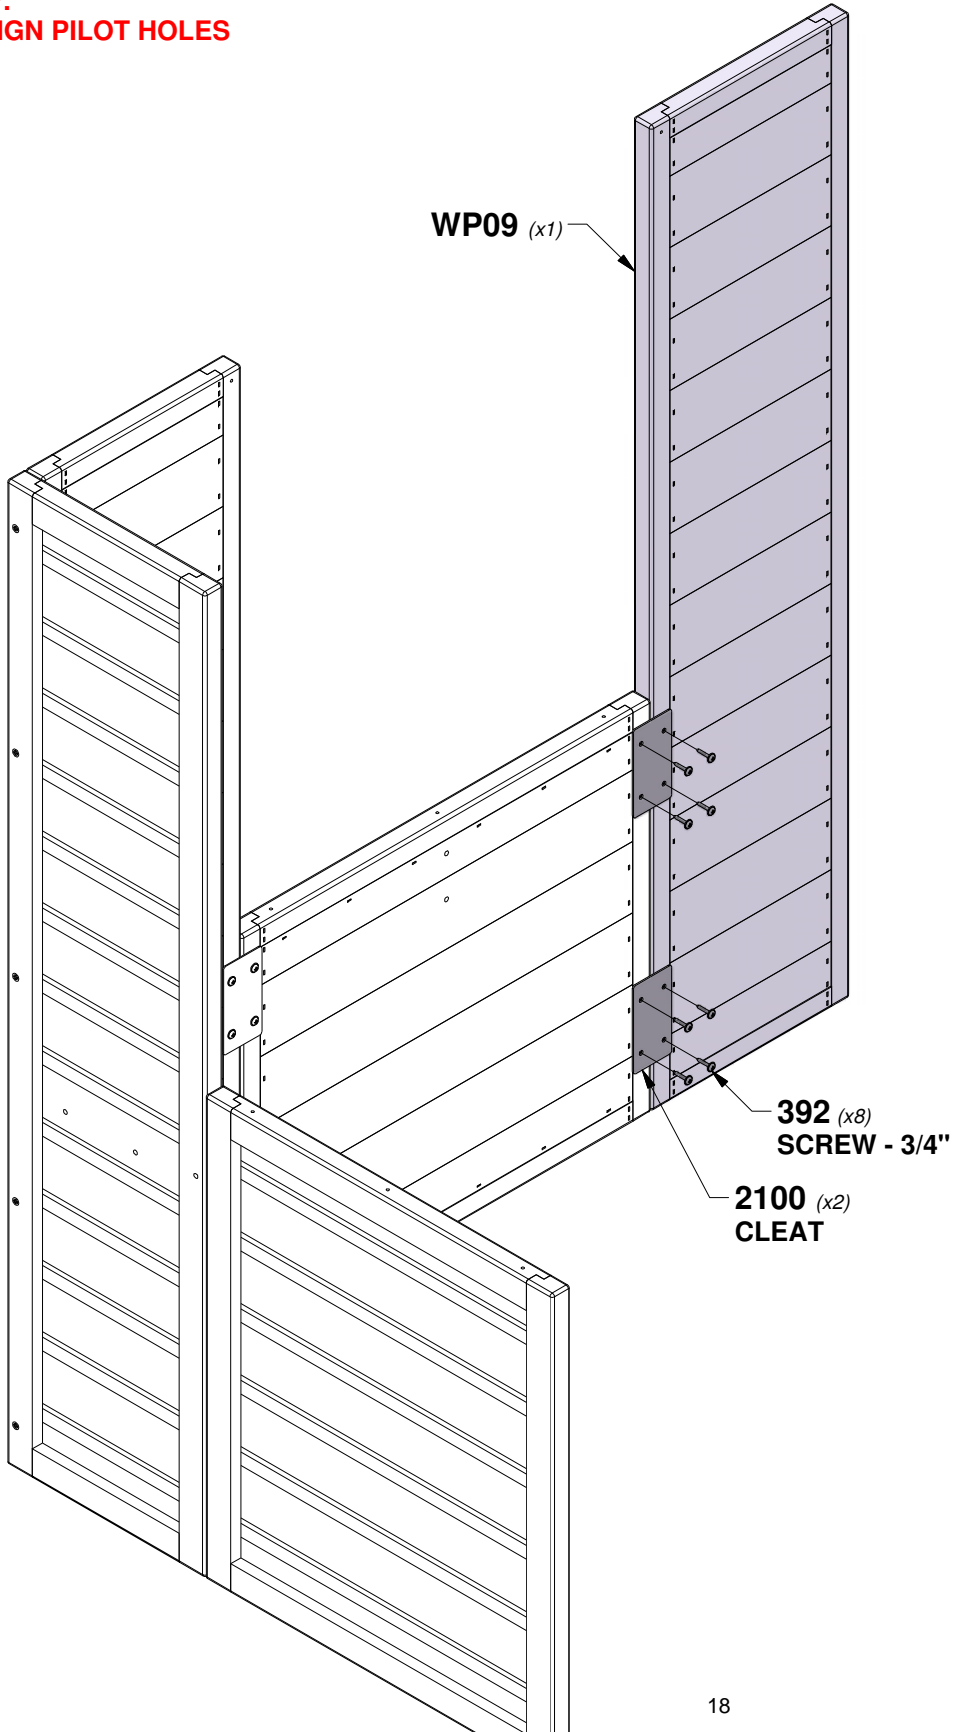


# STEP 5 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION       |
|-----|-------------|-------------------|
| 5   | H100391     | SCREW PFH 8x2 BLK |

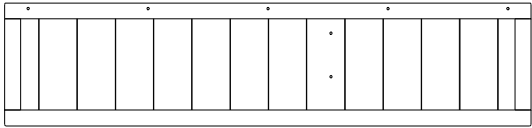


**WP12 WALL PANEL - W2A04132**  
(x1) 1"x10 1/4"x43 7/8" (24x260x1115)

**TIP:**  
**ALIGN PILOT HOLES**

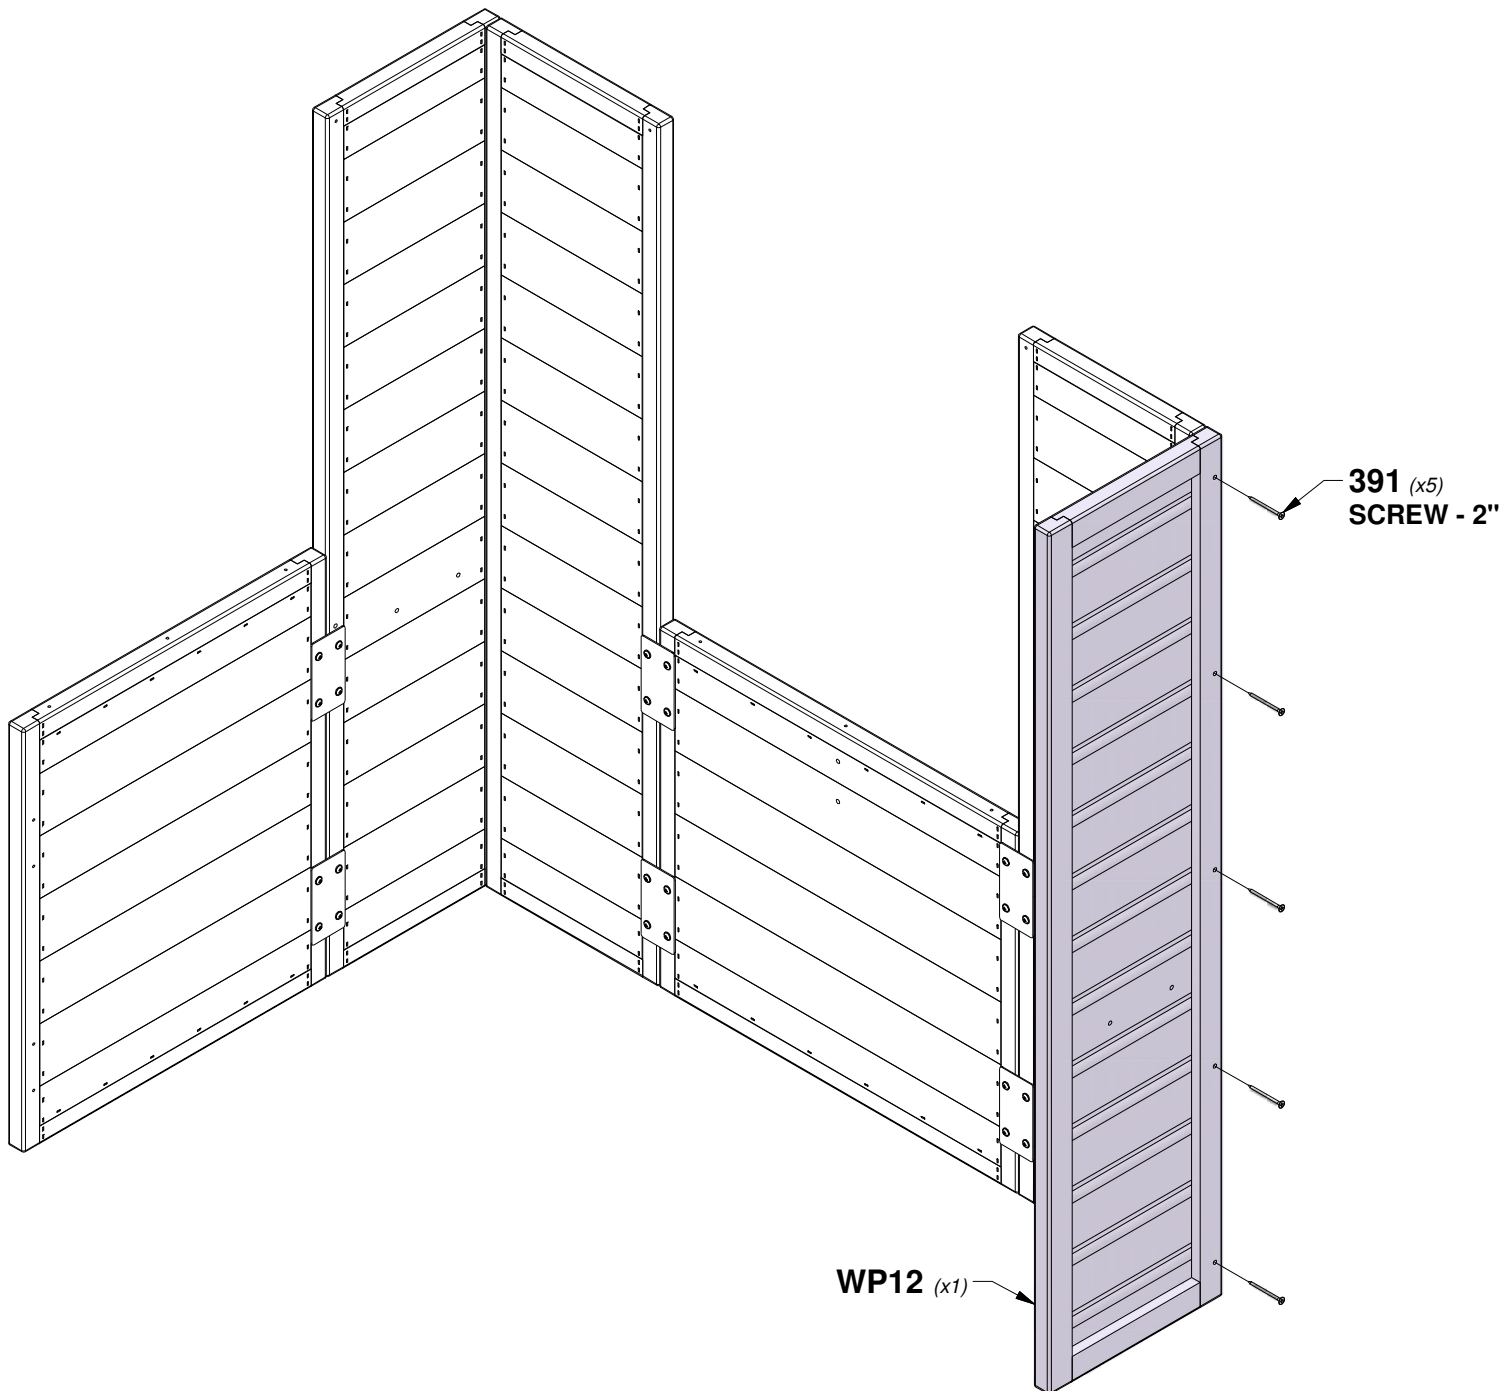

# STEP 6 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 8   | H100392     | SCREW PWH 8x3/4 BLK |

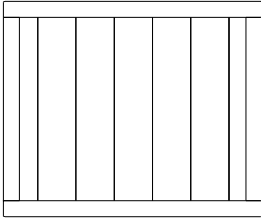


**WP04 WALL PANEL - W2A04120**  
(x1) 1"x10 1/4"x43 7/8" (24x455x548)




**A4M02100 CLEAT**  
(x2)

**TIP:**  
**ALIGN PILOT HOLES**

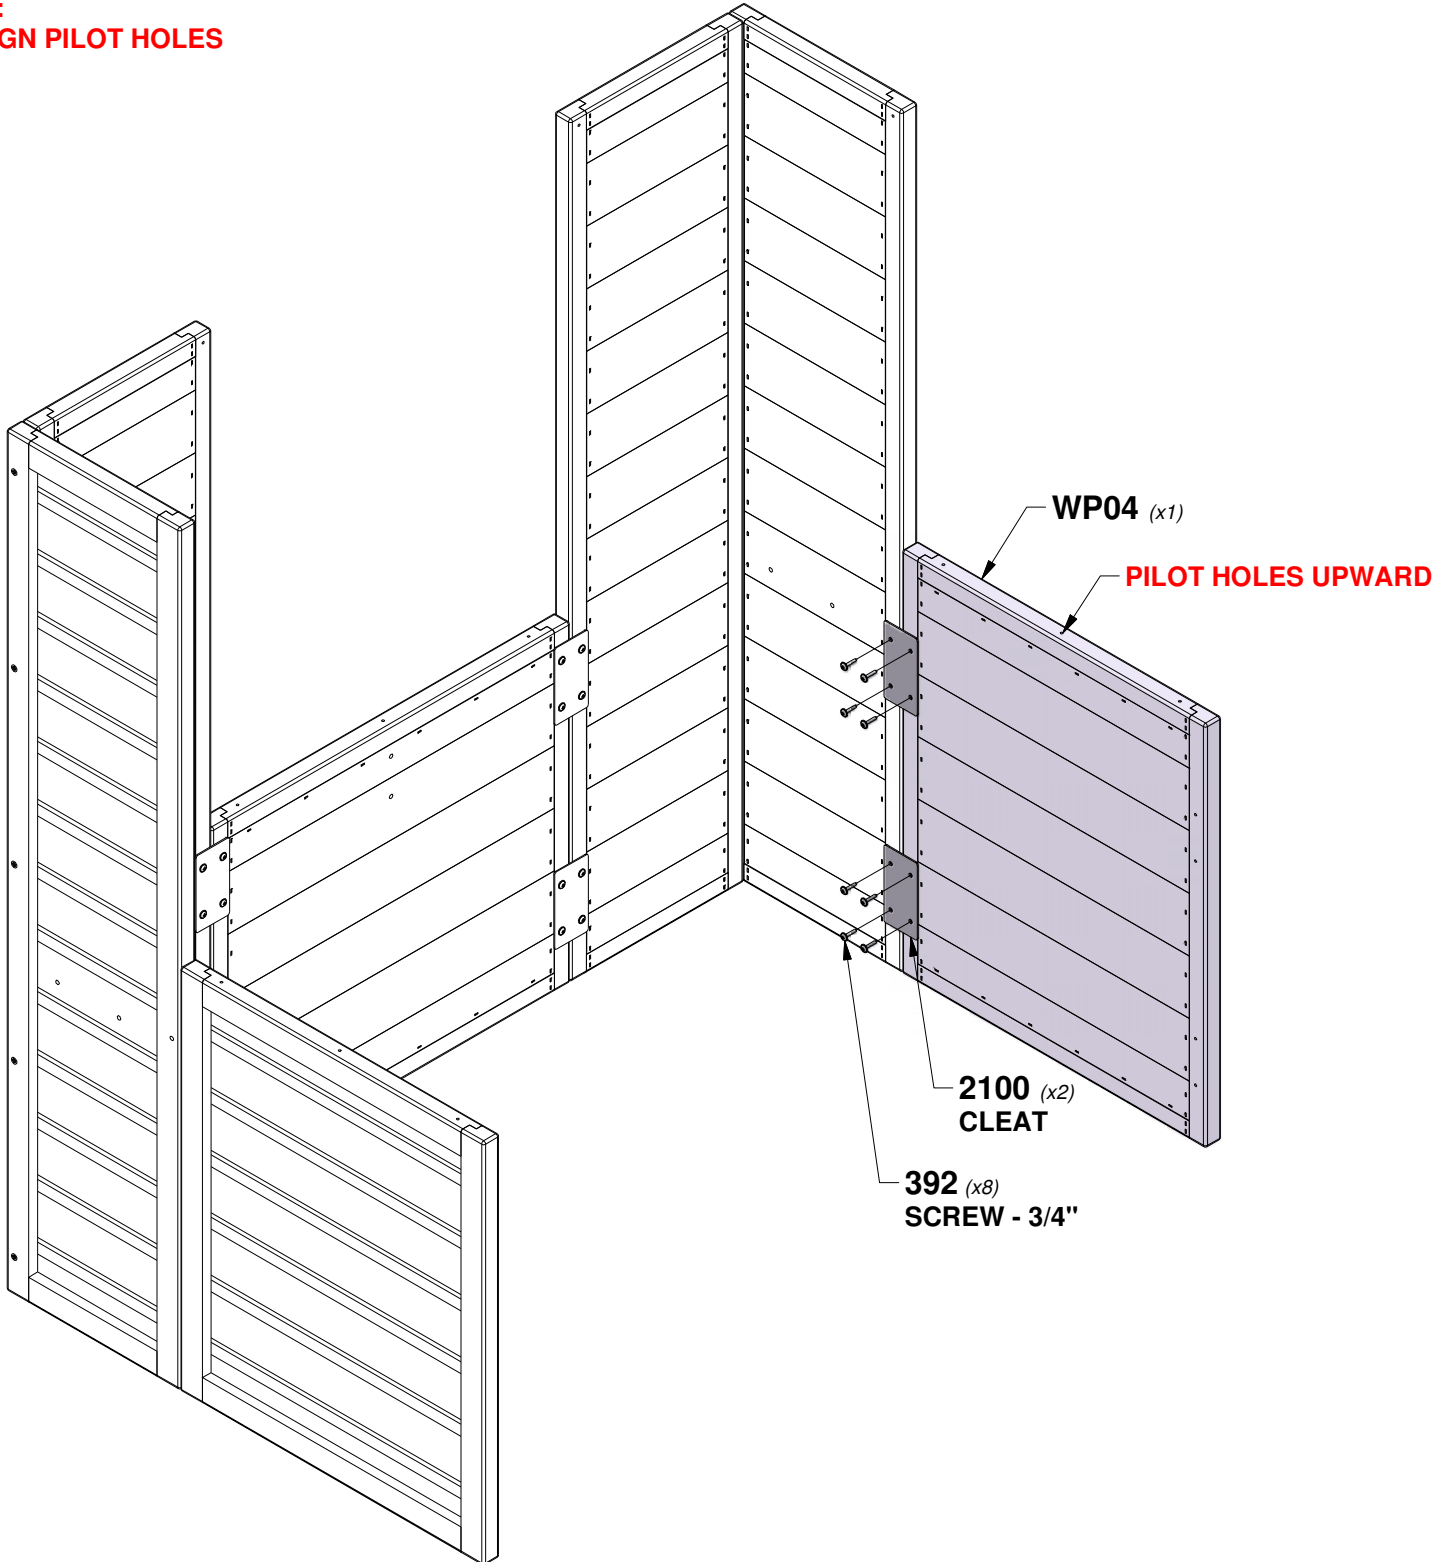

# STEP 7 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 8   | H100392     | SCREW PWH 8x3/4 BLK |

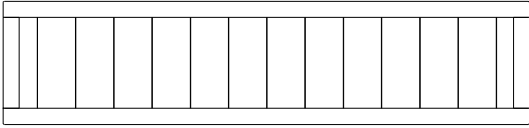


**WP10 WALL PANEL - W2A04127**  
 (x1) 1"x10 1/4"x43 7/8" (24x260x1115)




**A4M02100 CLEAT**  
 (x2)

**TIP:**  
**ALIGN PILOT HOLES**

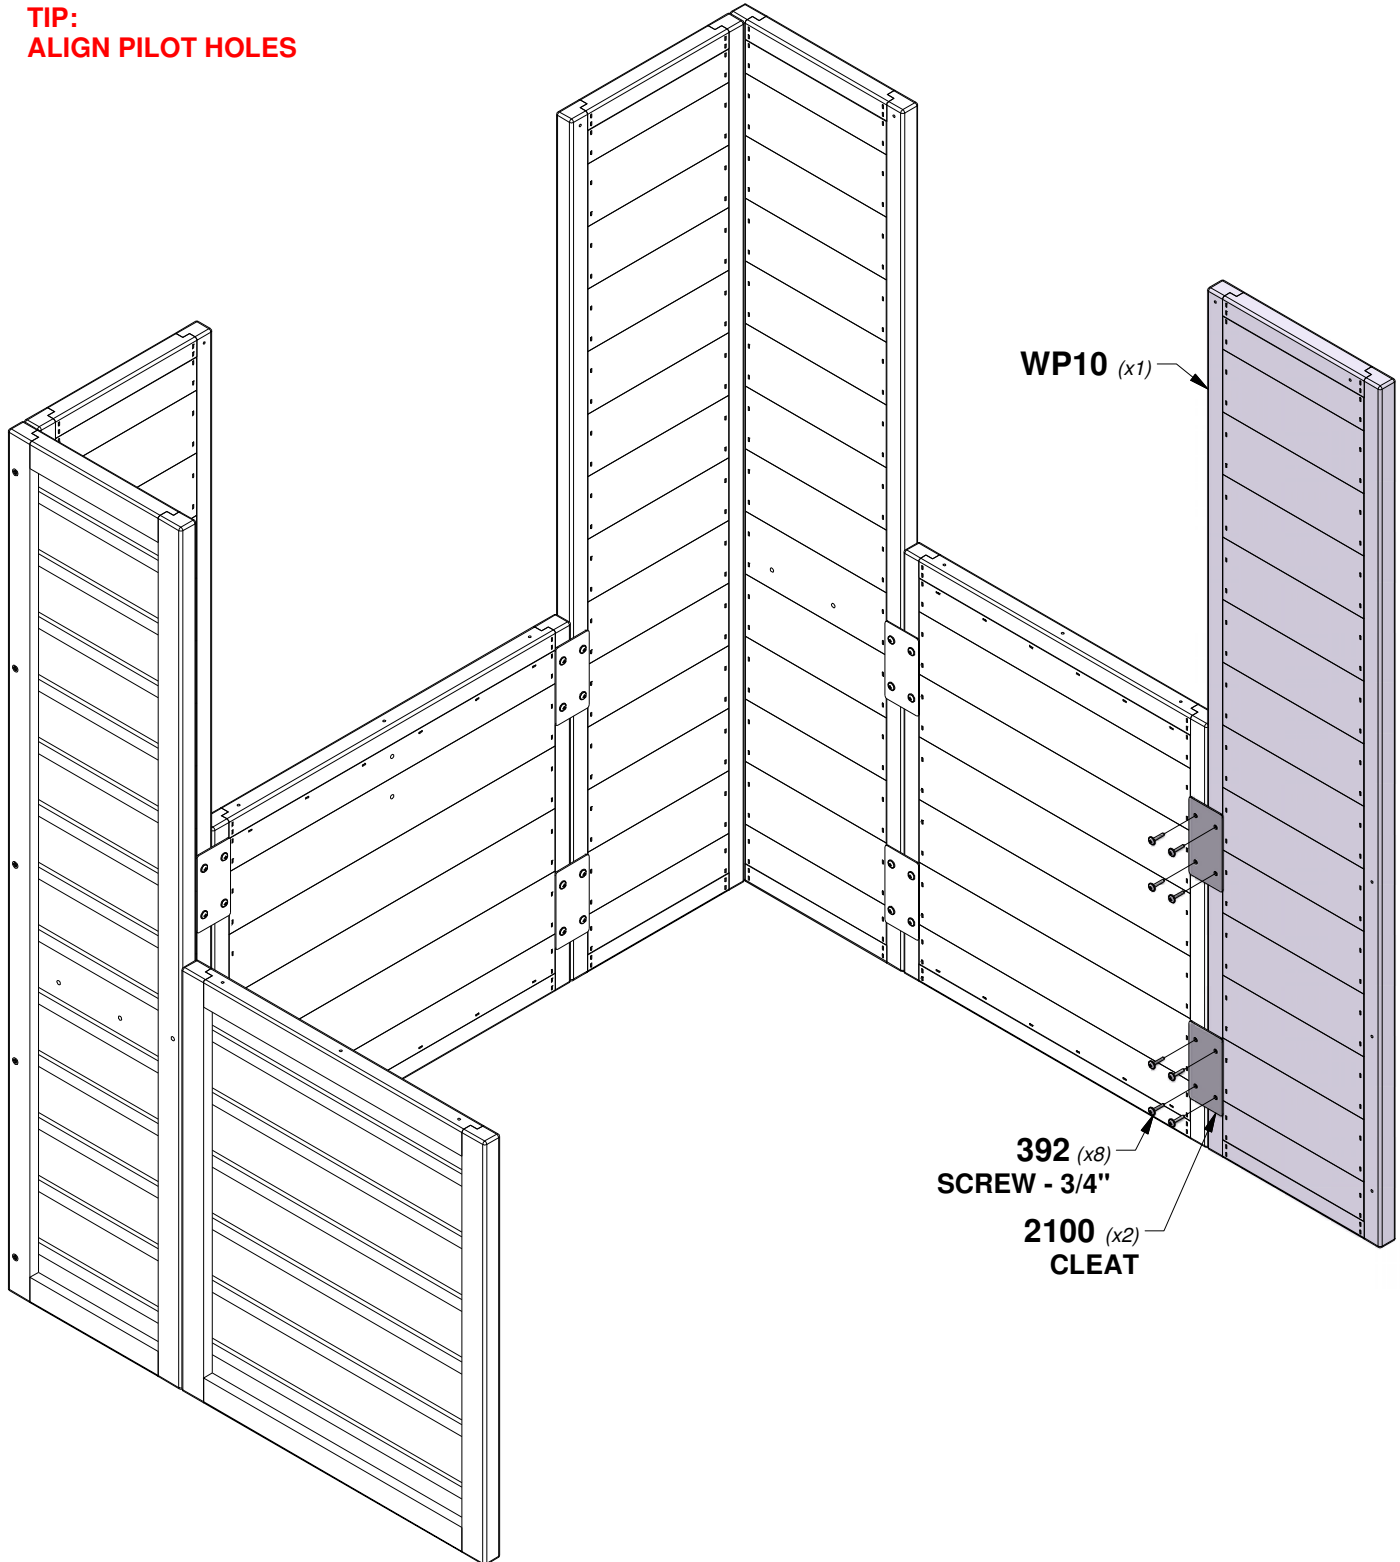


# STEP 8 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 8   | H100392     | SCREW PWH 8x3/4 BLK |

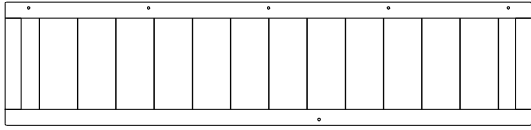


**WP03 WALL PANEL - W2A04119**  
(x1) 1"x10 1/4"x43 7/8" (24x260x1115)




**A4M02100 CLEAT**  
(x2)

**TIP:**  
**ALIGN PILOT HOLES**

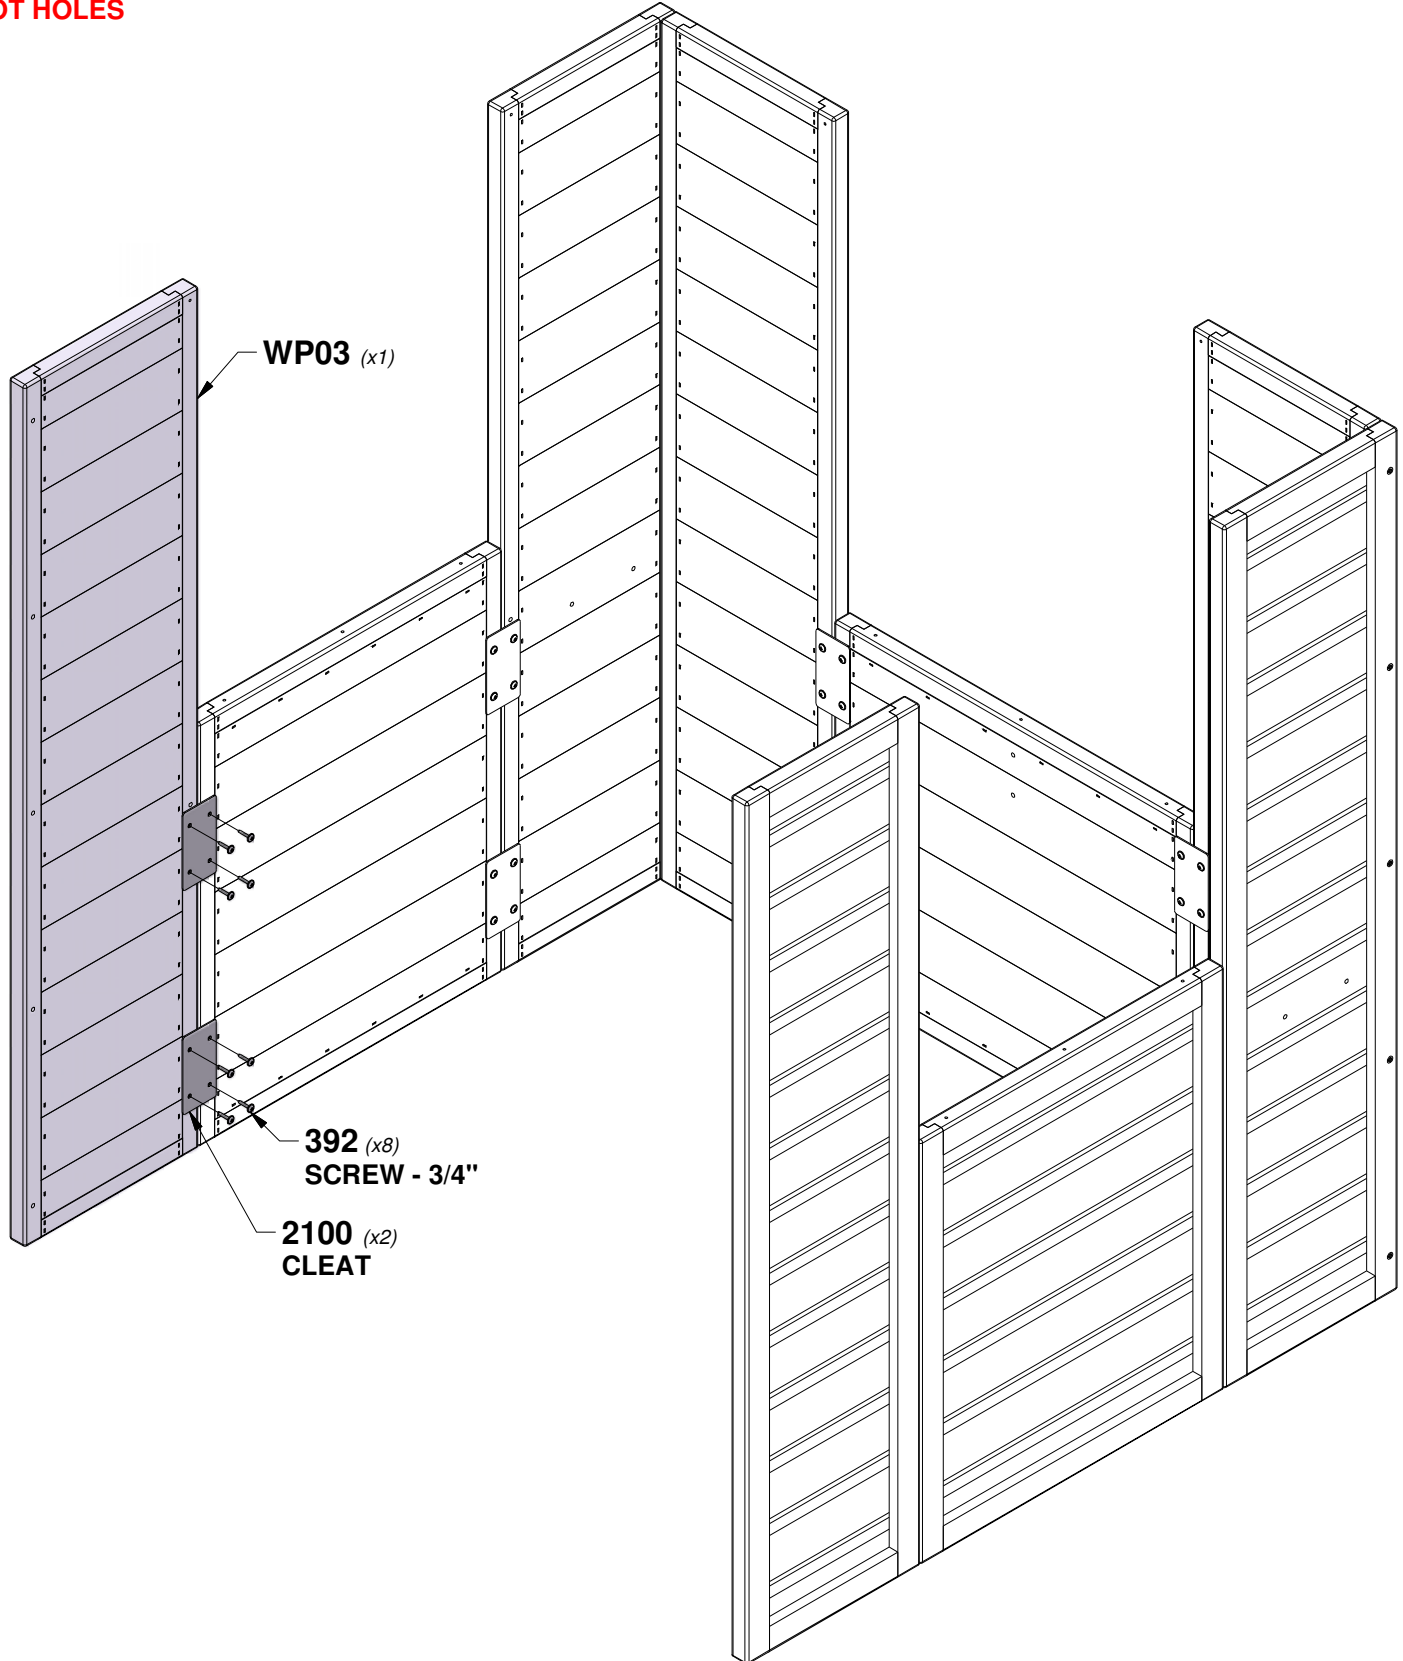


# STEP 9 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION       |
|-----|-------------|-------------------|
| 5   | H100391     | SCREW PFH 8x2 BLK |

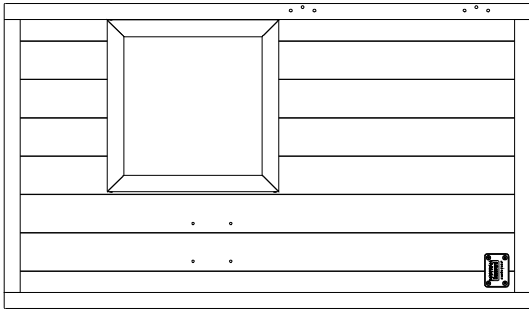


**WP07 WALL PANEL - W2A04123**  
(x1) 1"x10 1/4"x43 7/8" (24x645x1115)

**TIP:**  
**ALIGN PILOT HOLES**

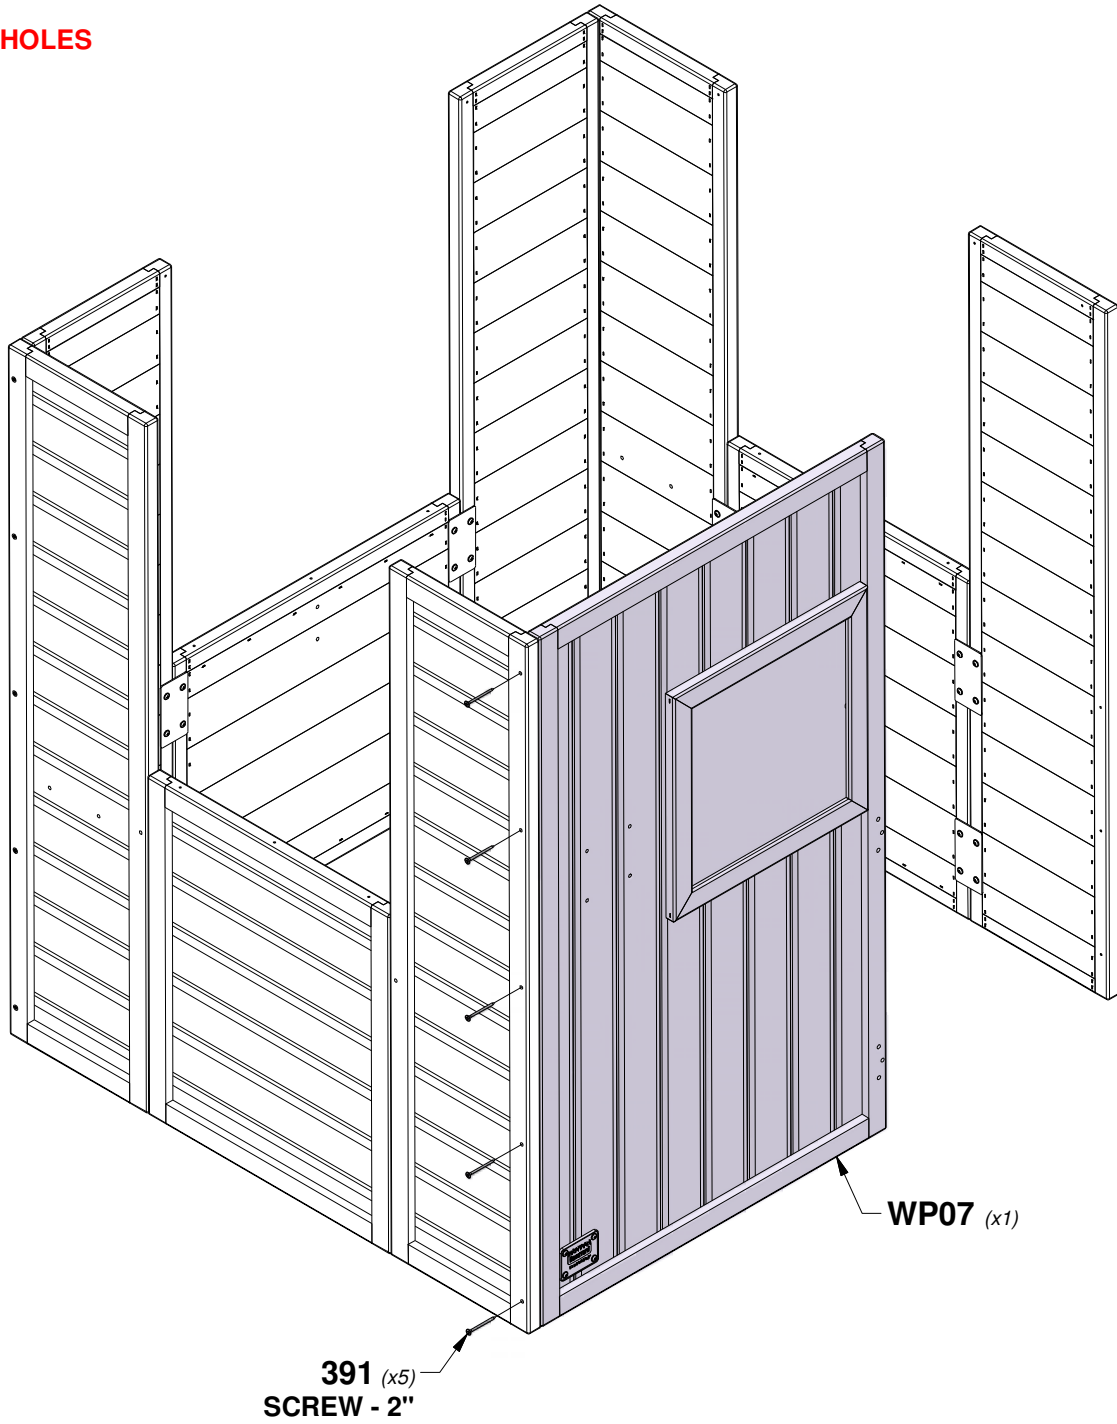


# STEP 10 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 7   | H100392     | SCREW PWH 8x3/4 BLK |

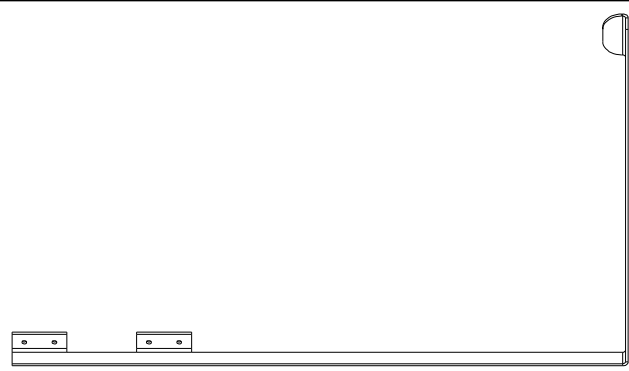

**A4M02754**  
*(x1)* METAL TIE STRAP


**TIP:**  
**ALIGN PILOT HOLES**

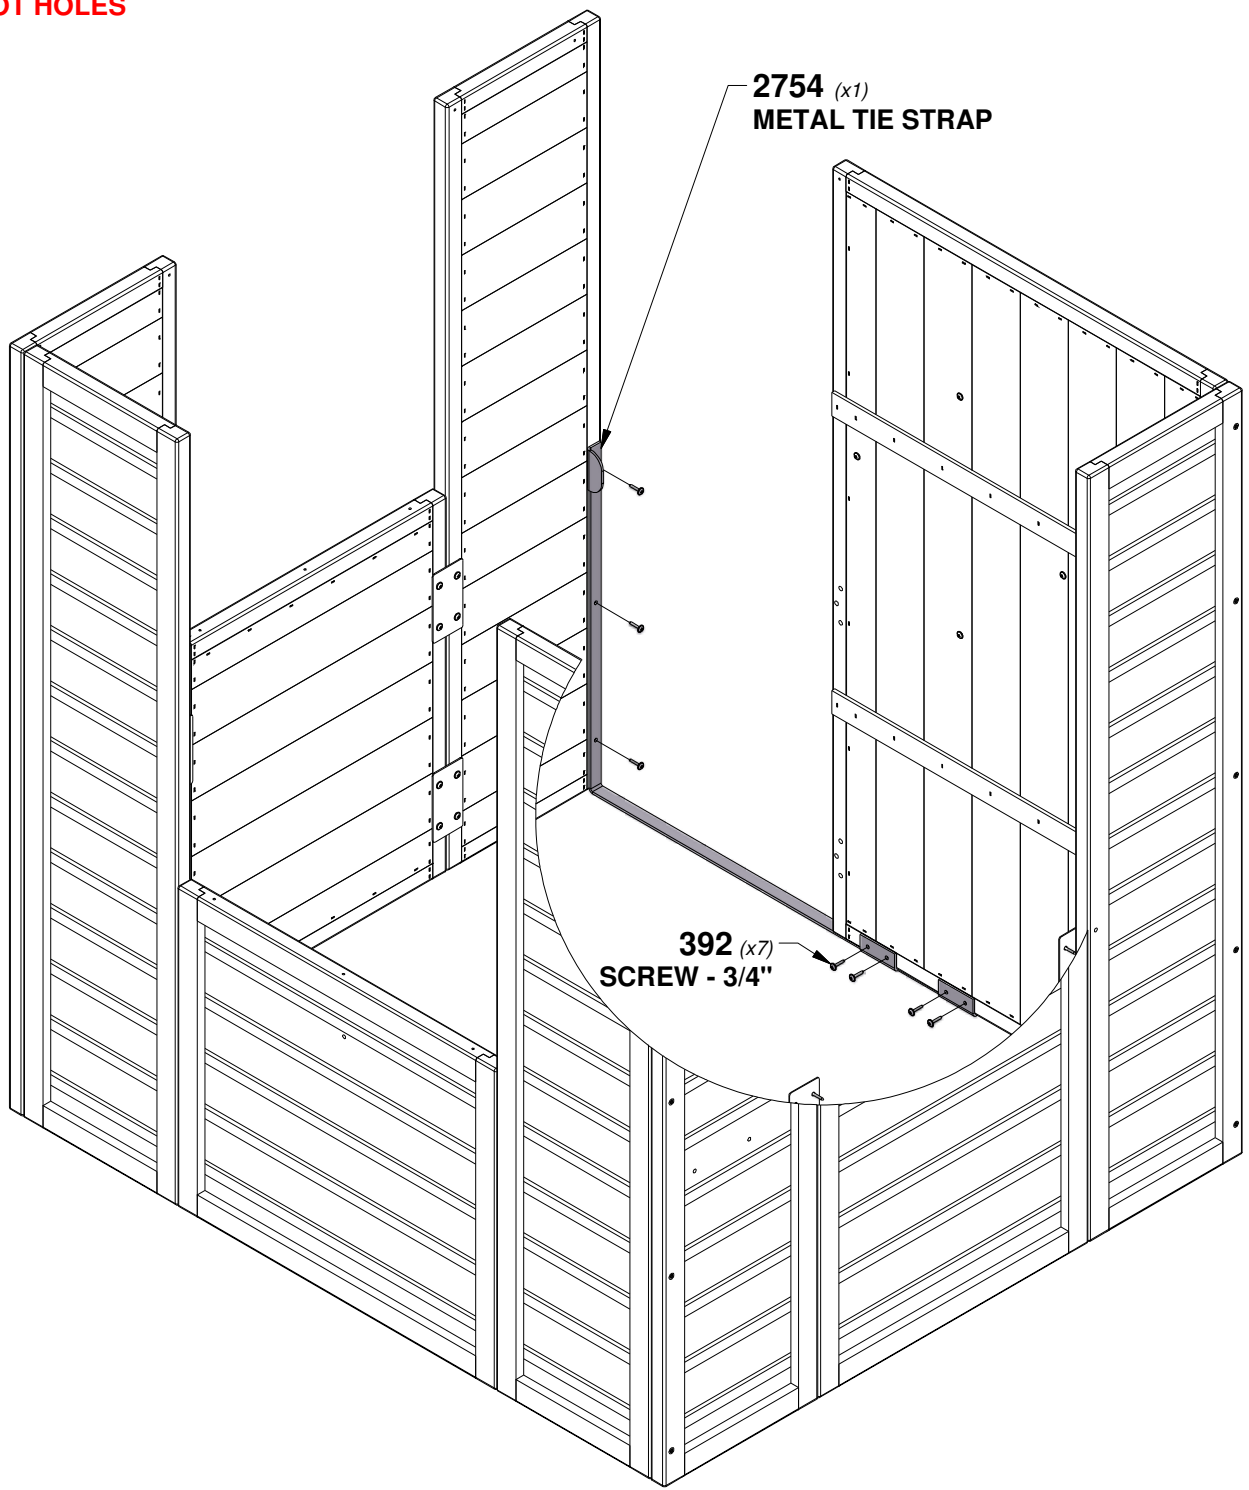




# STEP 11 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 2   | H100200     | SCREW PFH 8x1-1/2 BLK |
| 4   | H100387     | SCREW PFH 8x1-1/4 BLK |




**H01 TABLE TOP SUPPORT - W4L19817**  
 (x2) 1"x3 3/8"x6 3/4" (24x86x172)




**AD01 TABLE TOP SUPPORT - W4L19818**  
 (x1) 1"x4"x6 3/4" (24x102x172)

**TIP:**  
**ALIGN PILOT HOLES**

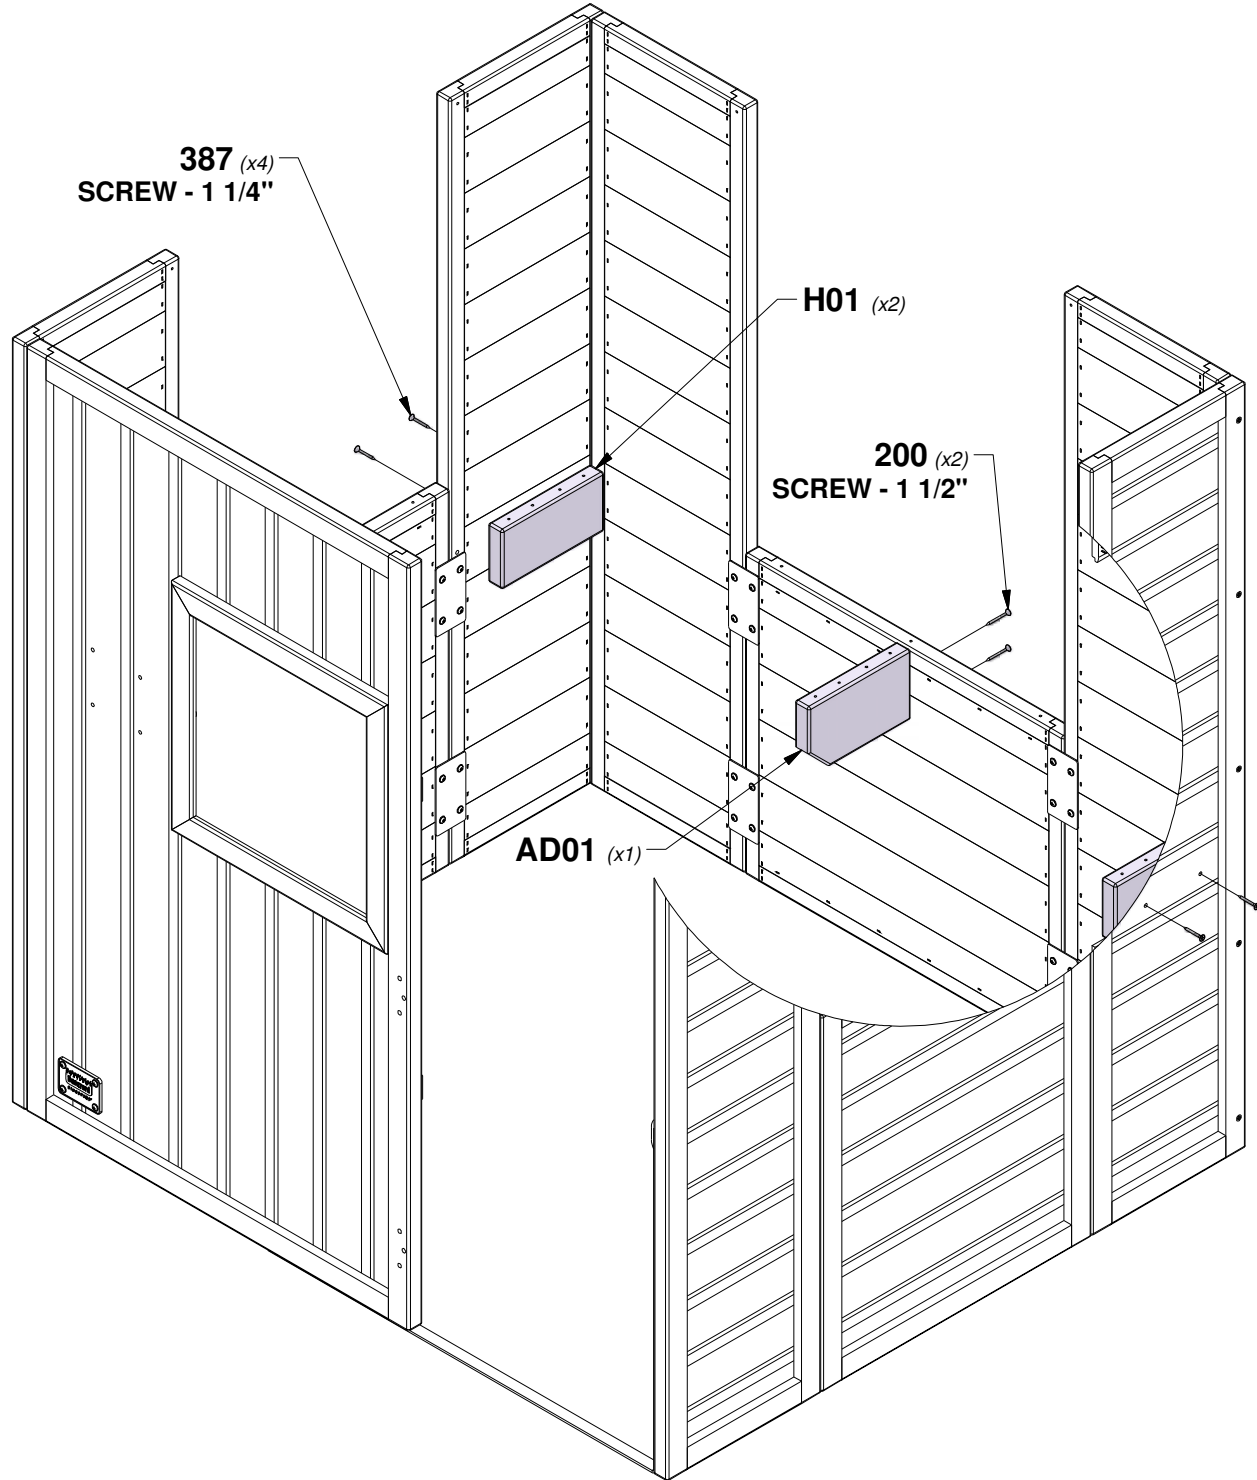


# STEP 12 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 12  | H100200     | SCREW PFH 8x1-1/2 BLK |




**M02 TABLE TOP - W4L19816**  
(x2) 5/8"x3 3/8"x41 5/8" (16x86x1056)

**TIP:**  
**ALIGN PILOT HOLES**

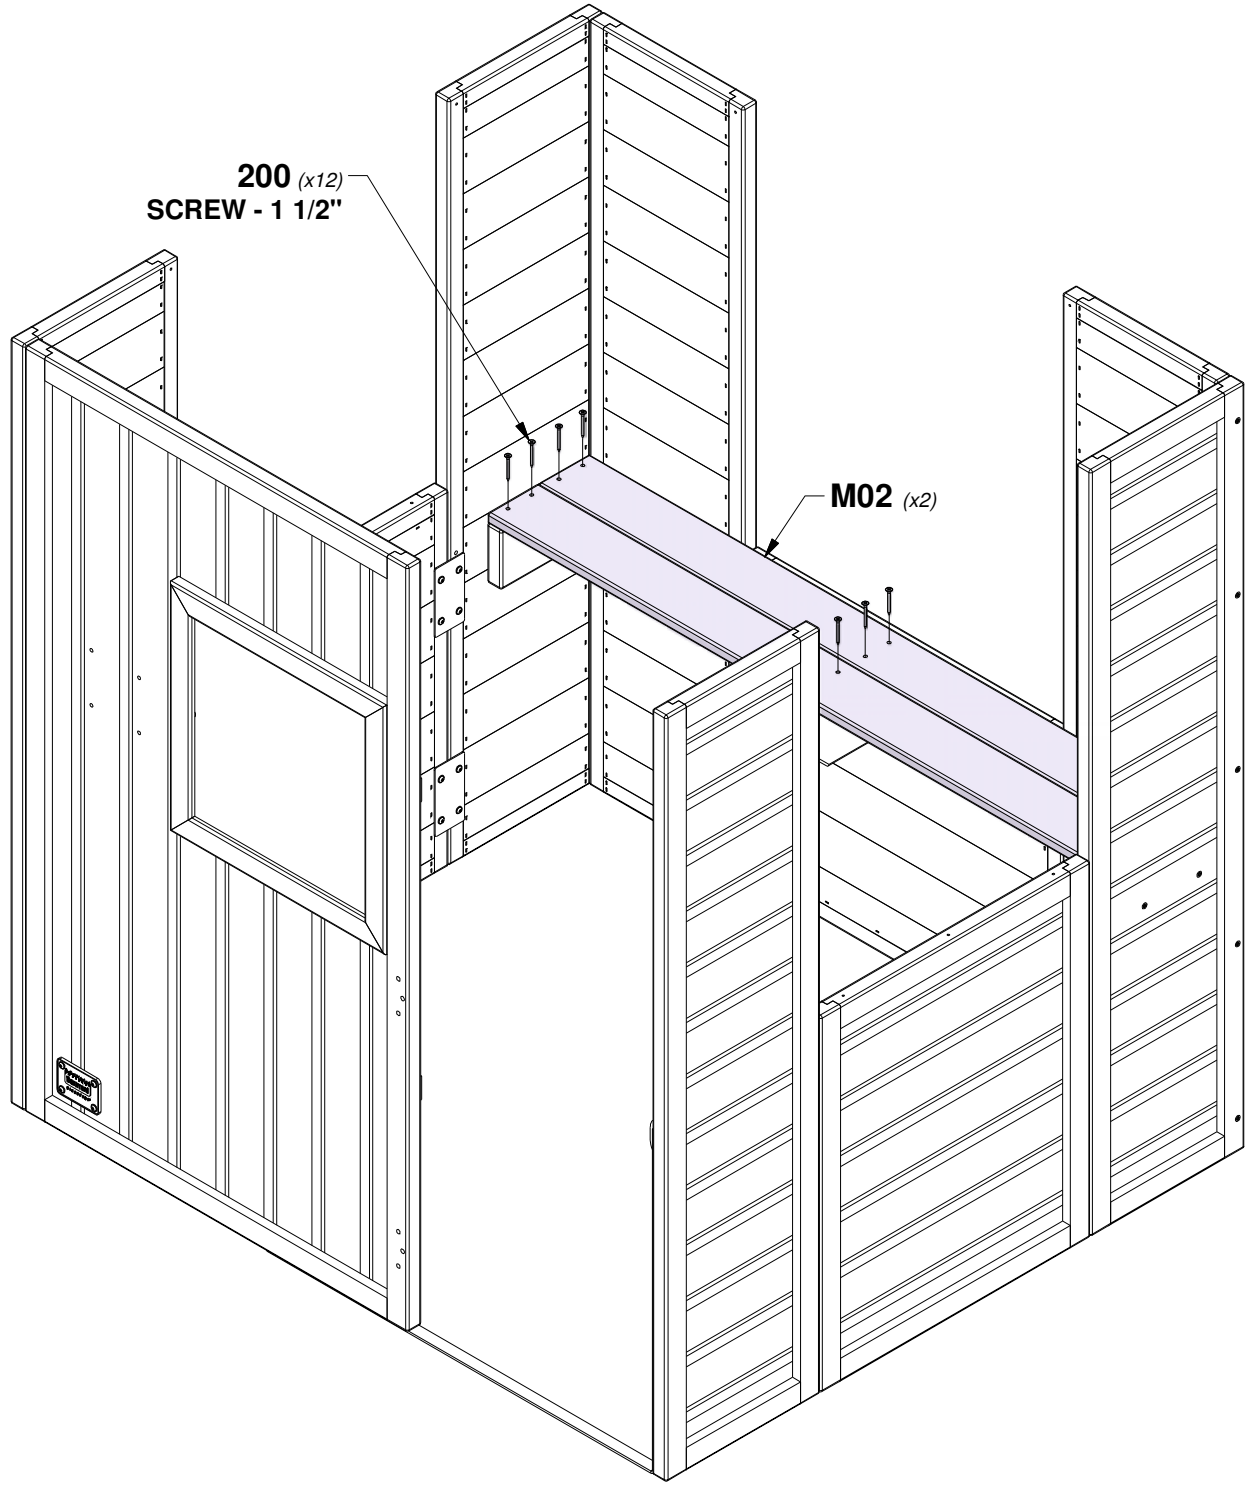


# STEP 13 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 2   | H100200     | SCREW PFH 8x1-1/2 BLK |

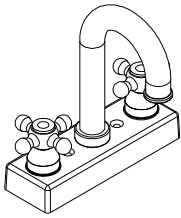


**A6P00024**  
*(x1)* FAUCET KIT

**PLACE AS DESIRED**

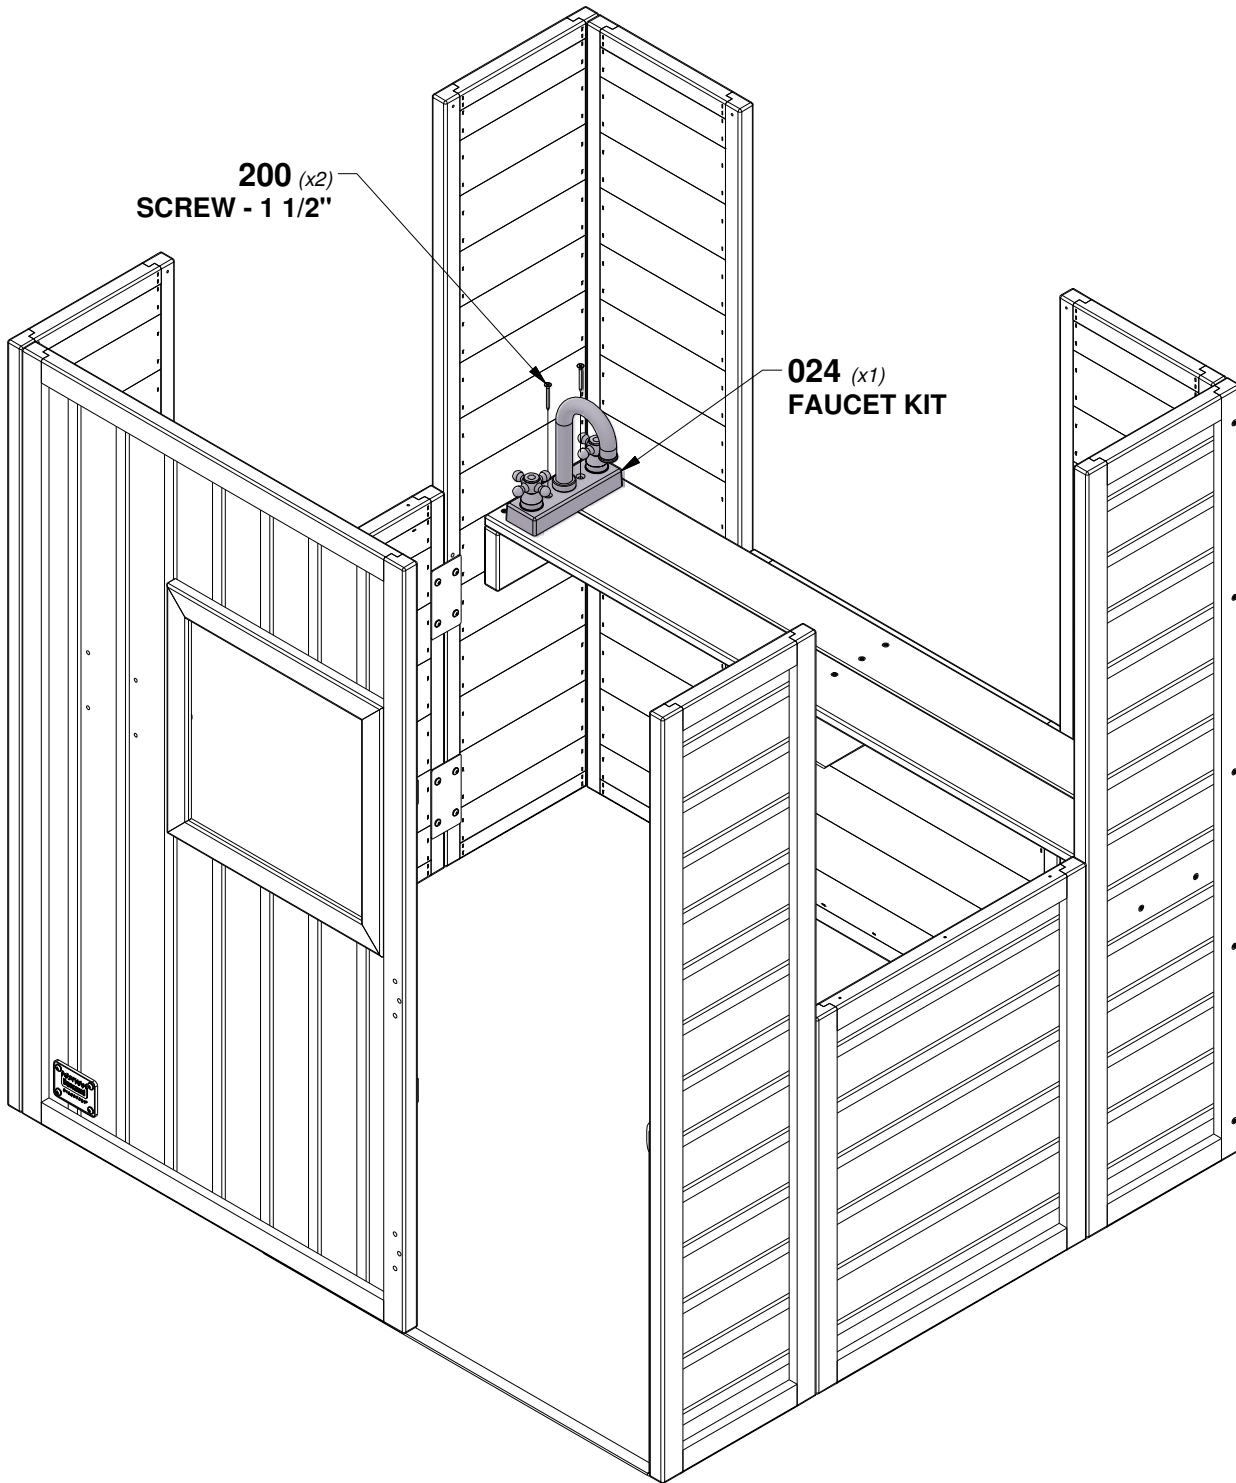


# STEP 14 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 2   | H100202     | SCREW PWH 8x5/8 BLK |

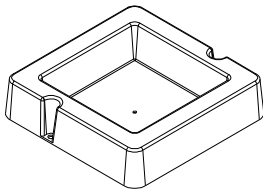


**A6P00032 SURFACE MOUNT BASIN**  
(x1)

**PLACE AS DESIRED**

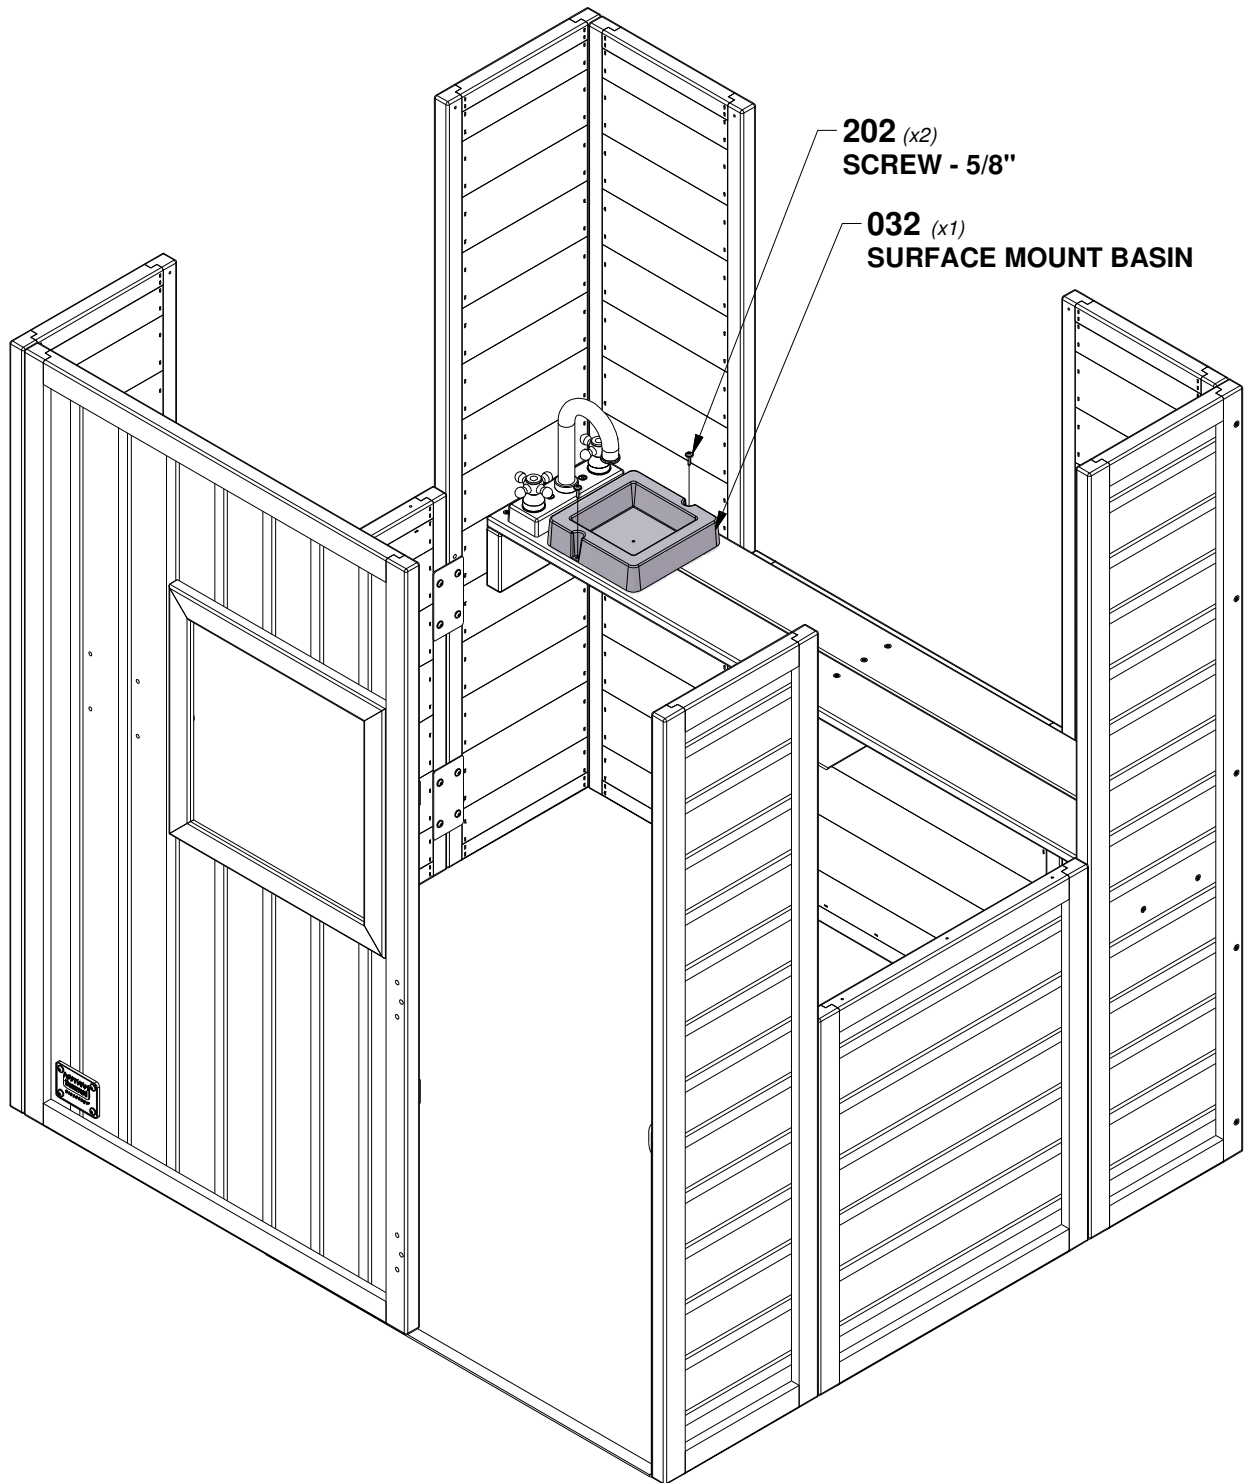


# STEP 15 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION       |
|-----|-------------|-------------------|
| 4   | H100385     | SCREW PFH 8x1 BLK |

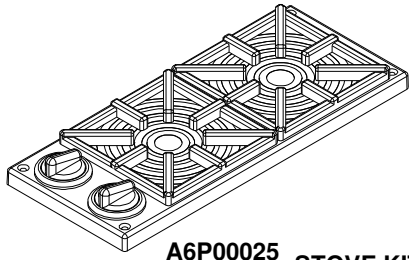

**A6P00025**  
(x1) **STOVE KIT**

**PLACE AS DESIRED**

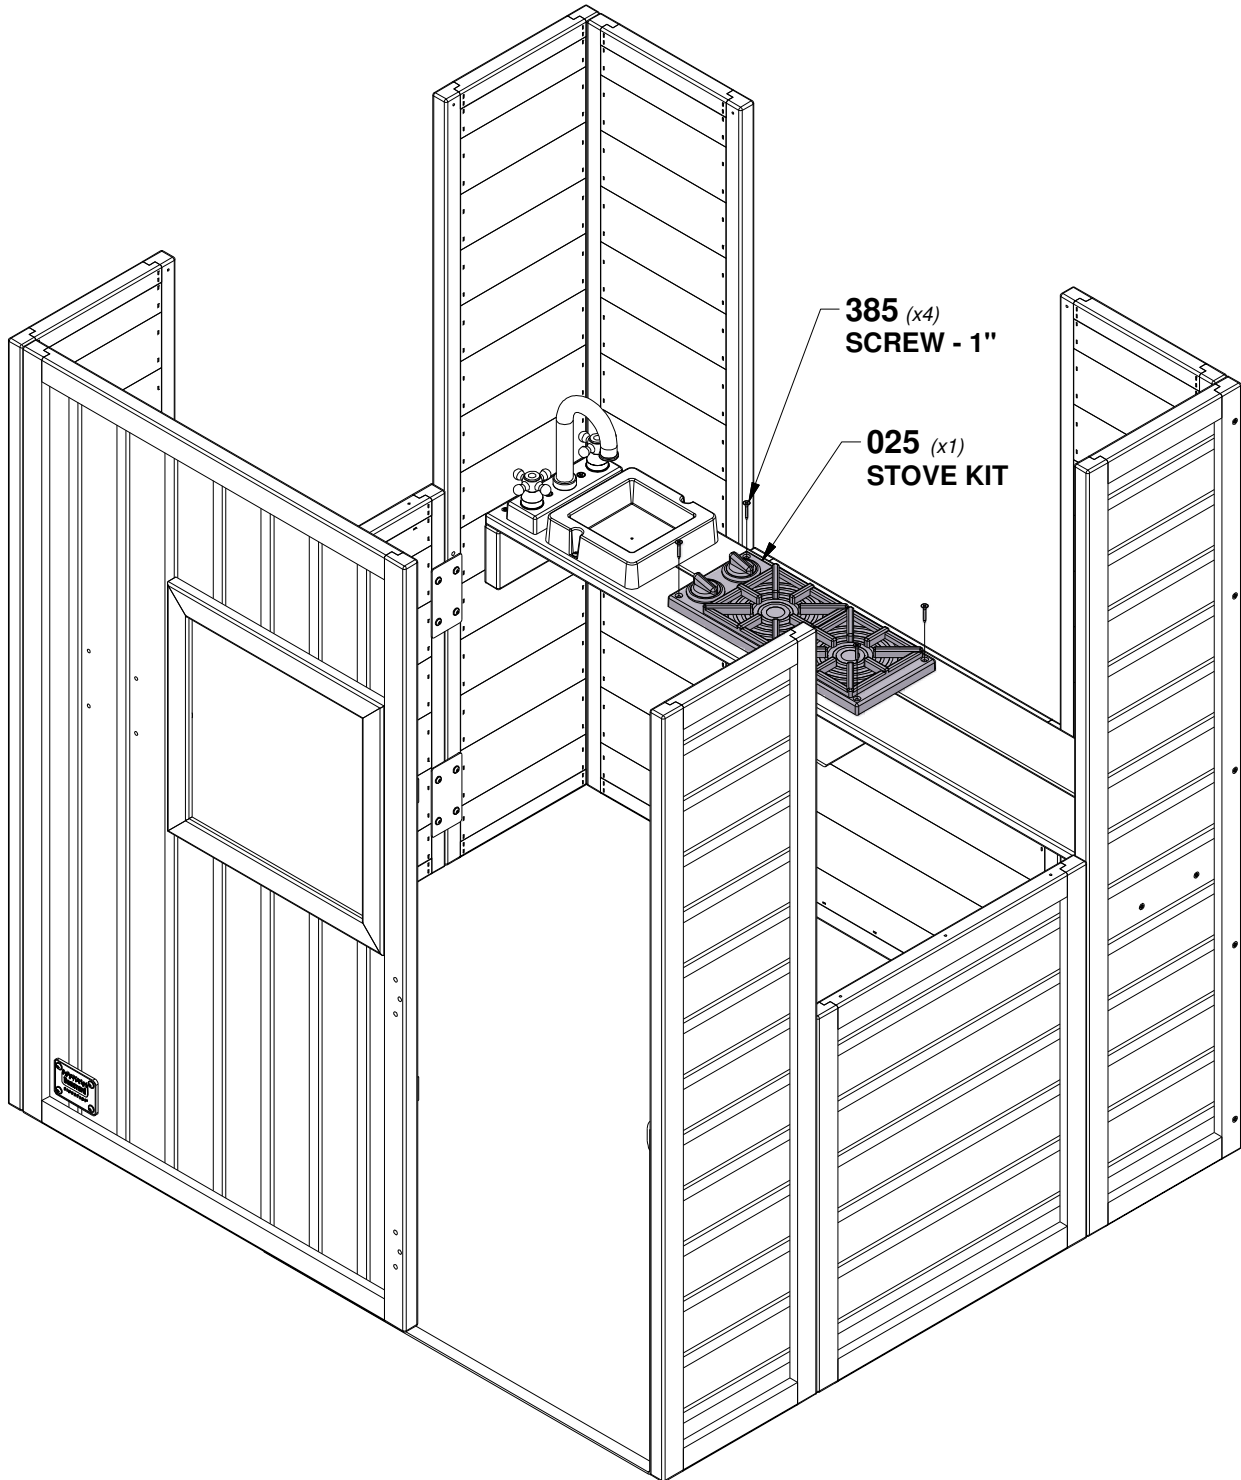

**385** (x4)  
**SCREW - 1"**


**025** (x1)  
**STOVE KIT**

# STEP 16 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 4   | H100392     | SCREW PWH 8x3/4 BLK |





**J01 TOP RAIL - W4L19308**  
 (x1) 1"x1 3/8"x41 5/8" (24x34x1057)




**A4M02752 CLEAT**  
 (x2)

**TIP:**  
**ALIGN PILOT HOLES**

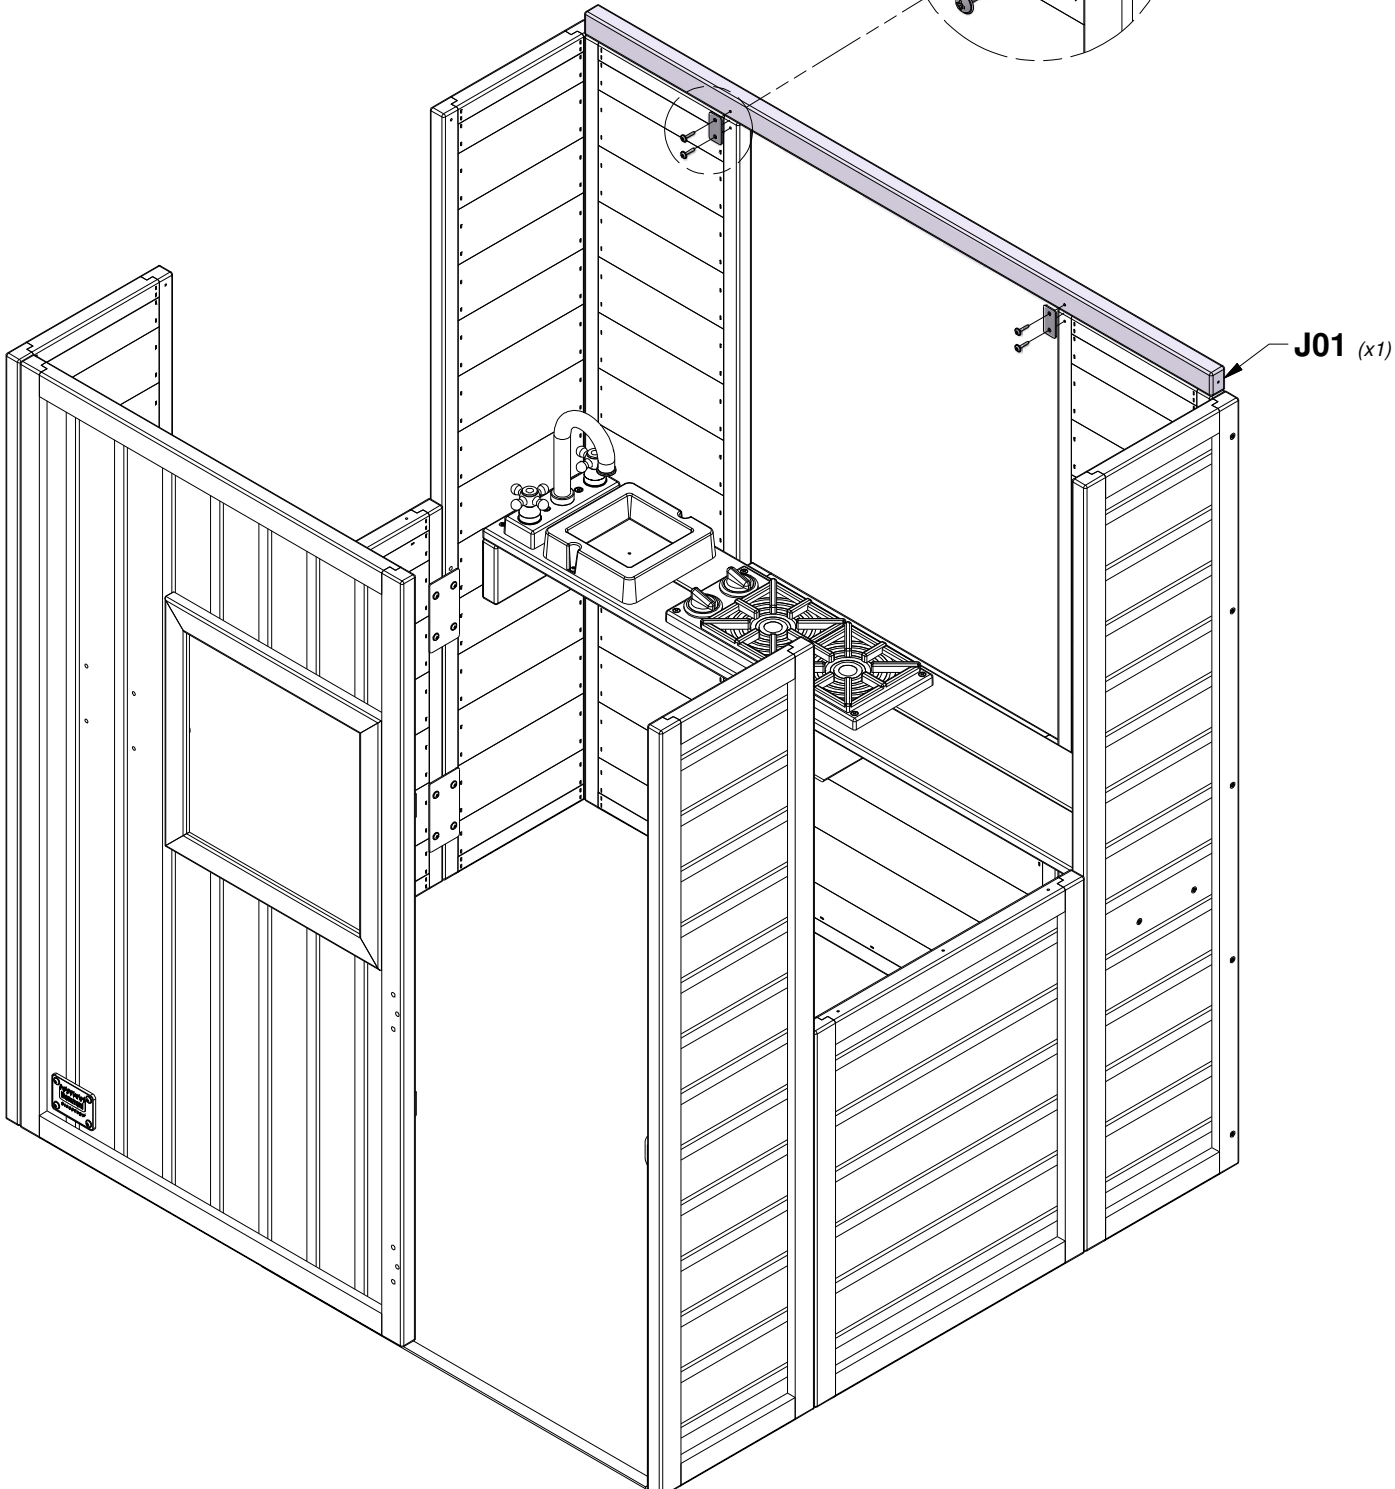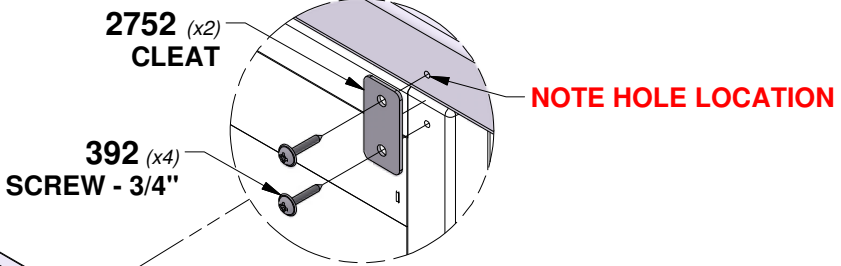


# STEP 17 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 1   | H100391     | SCREW PFH 8x2 BLK   |
| 4   | H100392     | SCREW PWH 8x3/4 BLK |

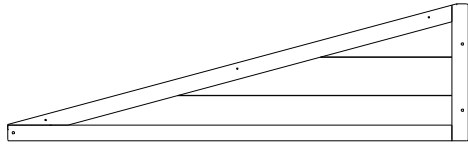


**WP08 WALL PANEL - W2A04124**  
 (x1) 1"x11 3/8"x38 3/8" (24x290x975)



**A4M02752 CLEAT**  
 (x2)


**TIP:**  
**ALIGN PILOT HOLES**

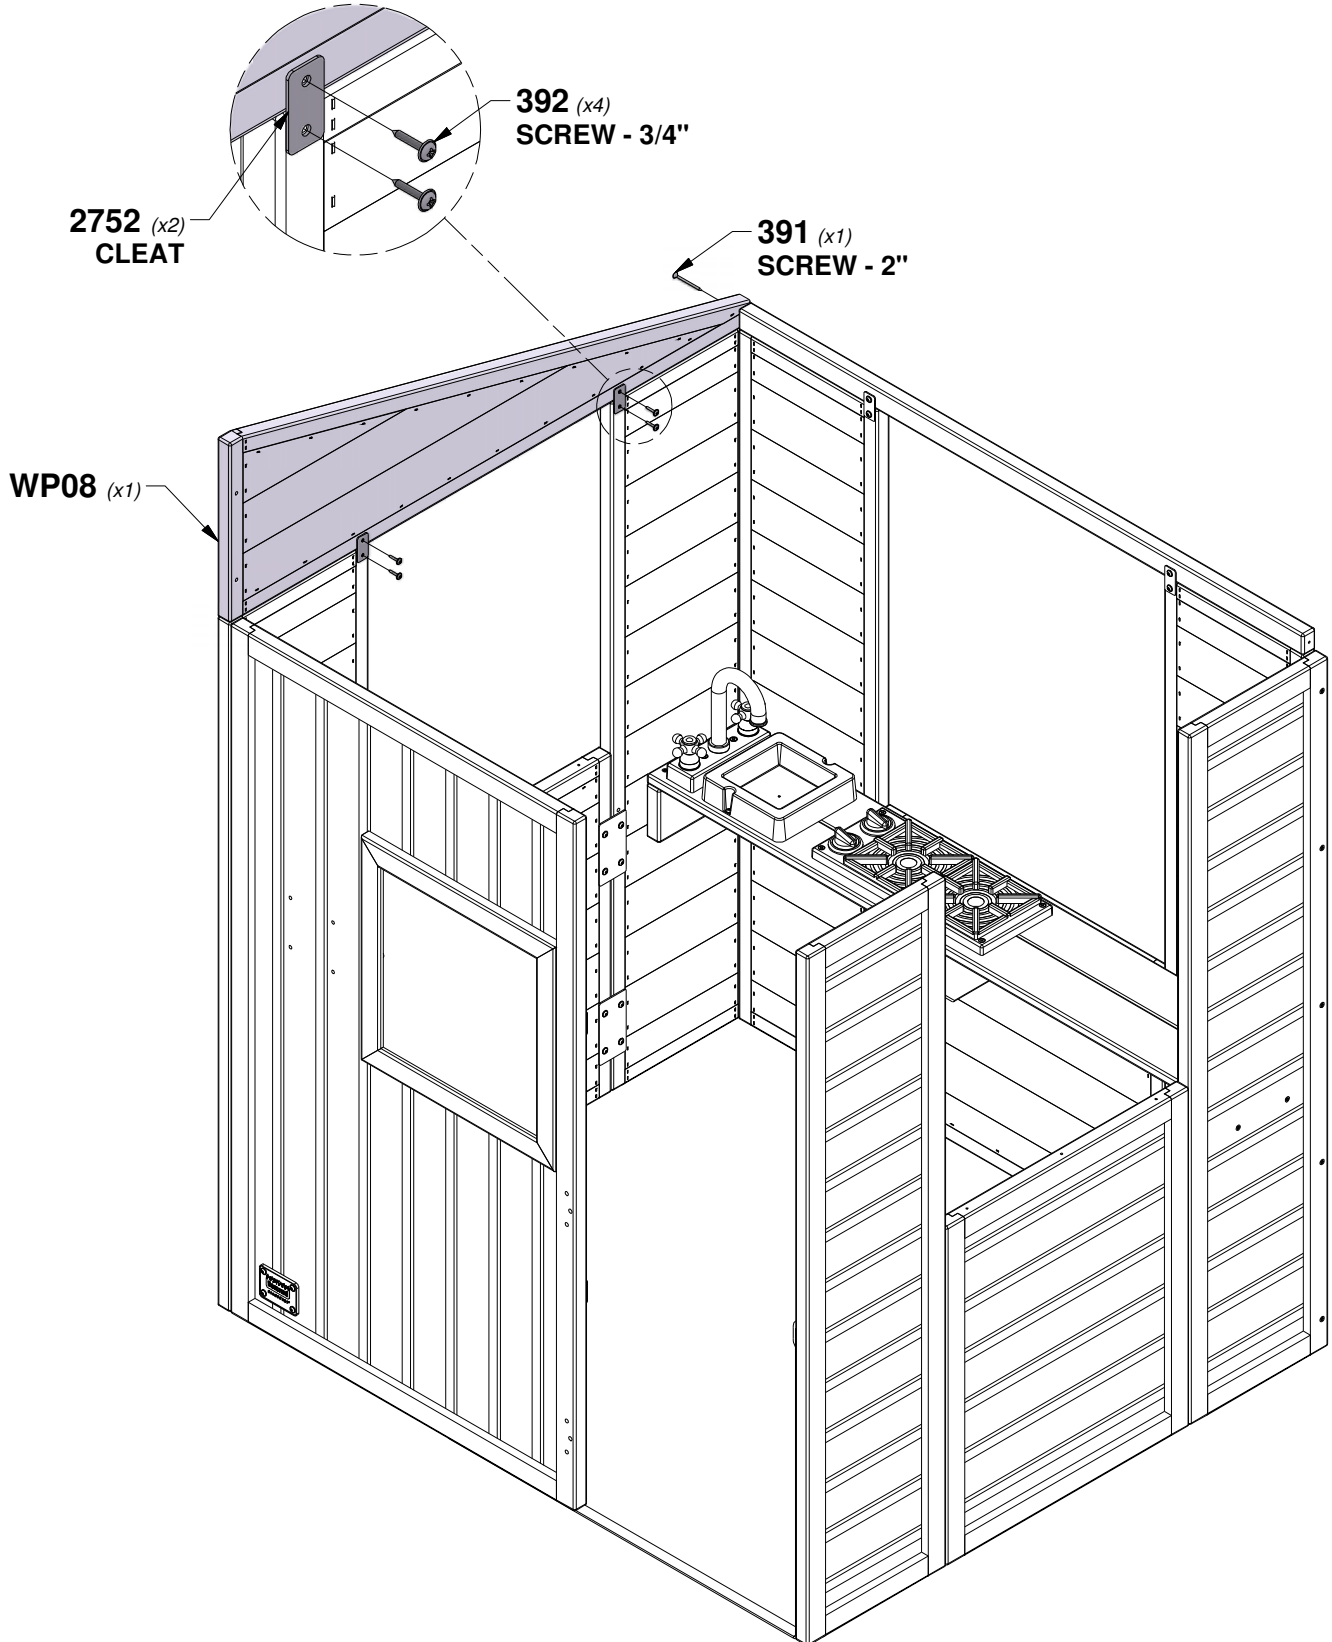




# STEP 18 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 1   | H100391     | SCREW PFH 8x2 BLK   |
| 6   | H100392     | SCREW PWH 8x3/4 BLK |

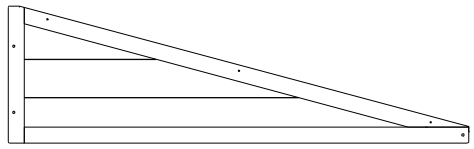


**WP06 WALL PANEL - W2A04122**  
 (x1) 1"x11 3/8"x38 3/8" (24x290x975)



**A4M02752 CLEAT**  
 (x3)


**TIP:**  
**ALIGN PILOT HOLES**

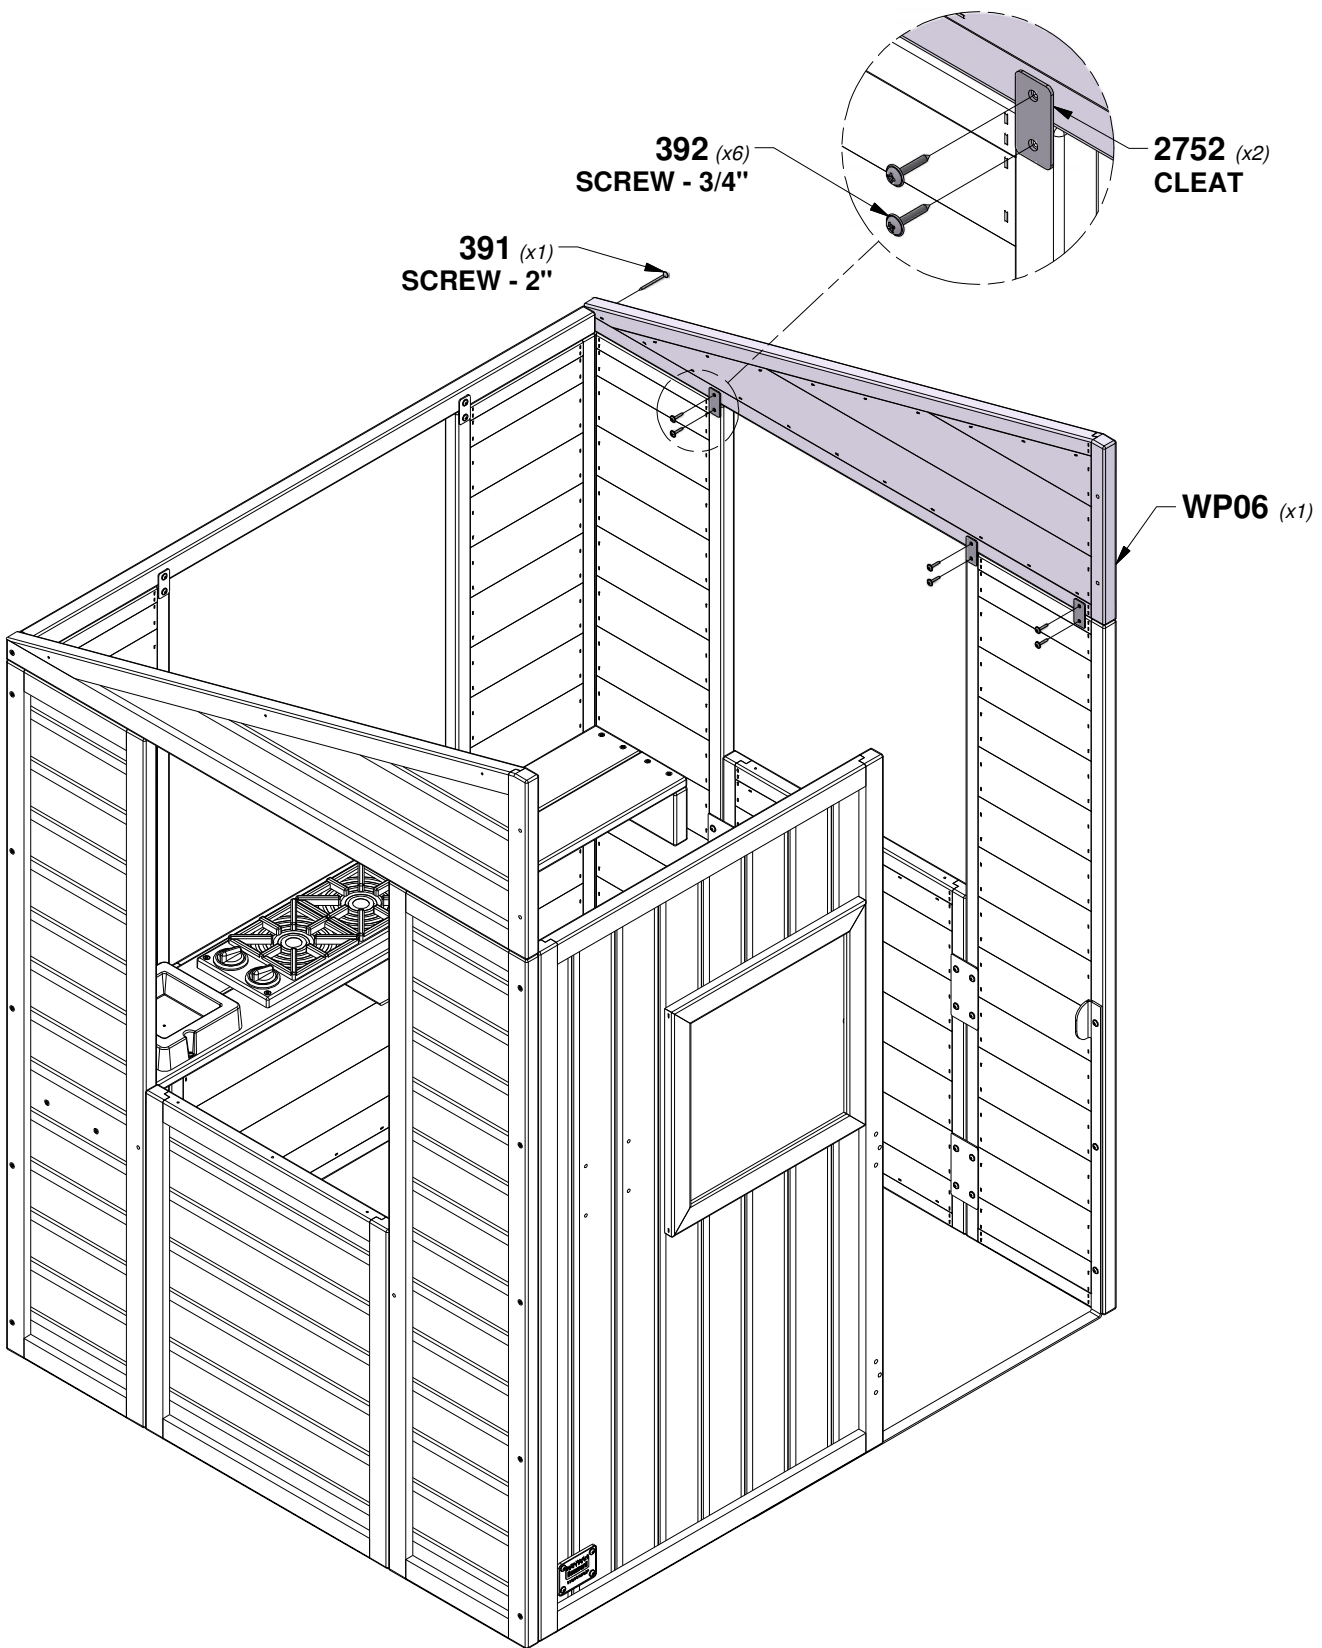




# STEP 19 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION         |
|-----|-------------|---------------------|
| 4   | H100391     | SCREW PFH 8x2 BLK   |
| 2   | H100392     | SCREW PWH 8x3/4 BLK |

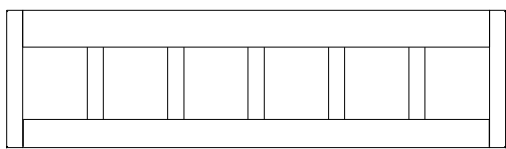


**WP11 WALL PANEL - W2A04128**  
 (x1) 15/16"x11 7/16"x41 5/8" (24x290x1057)




**A4M02752 CLEAT**  
 (x1)

**TIP:**  
**ALIGN PILOT HOLES**

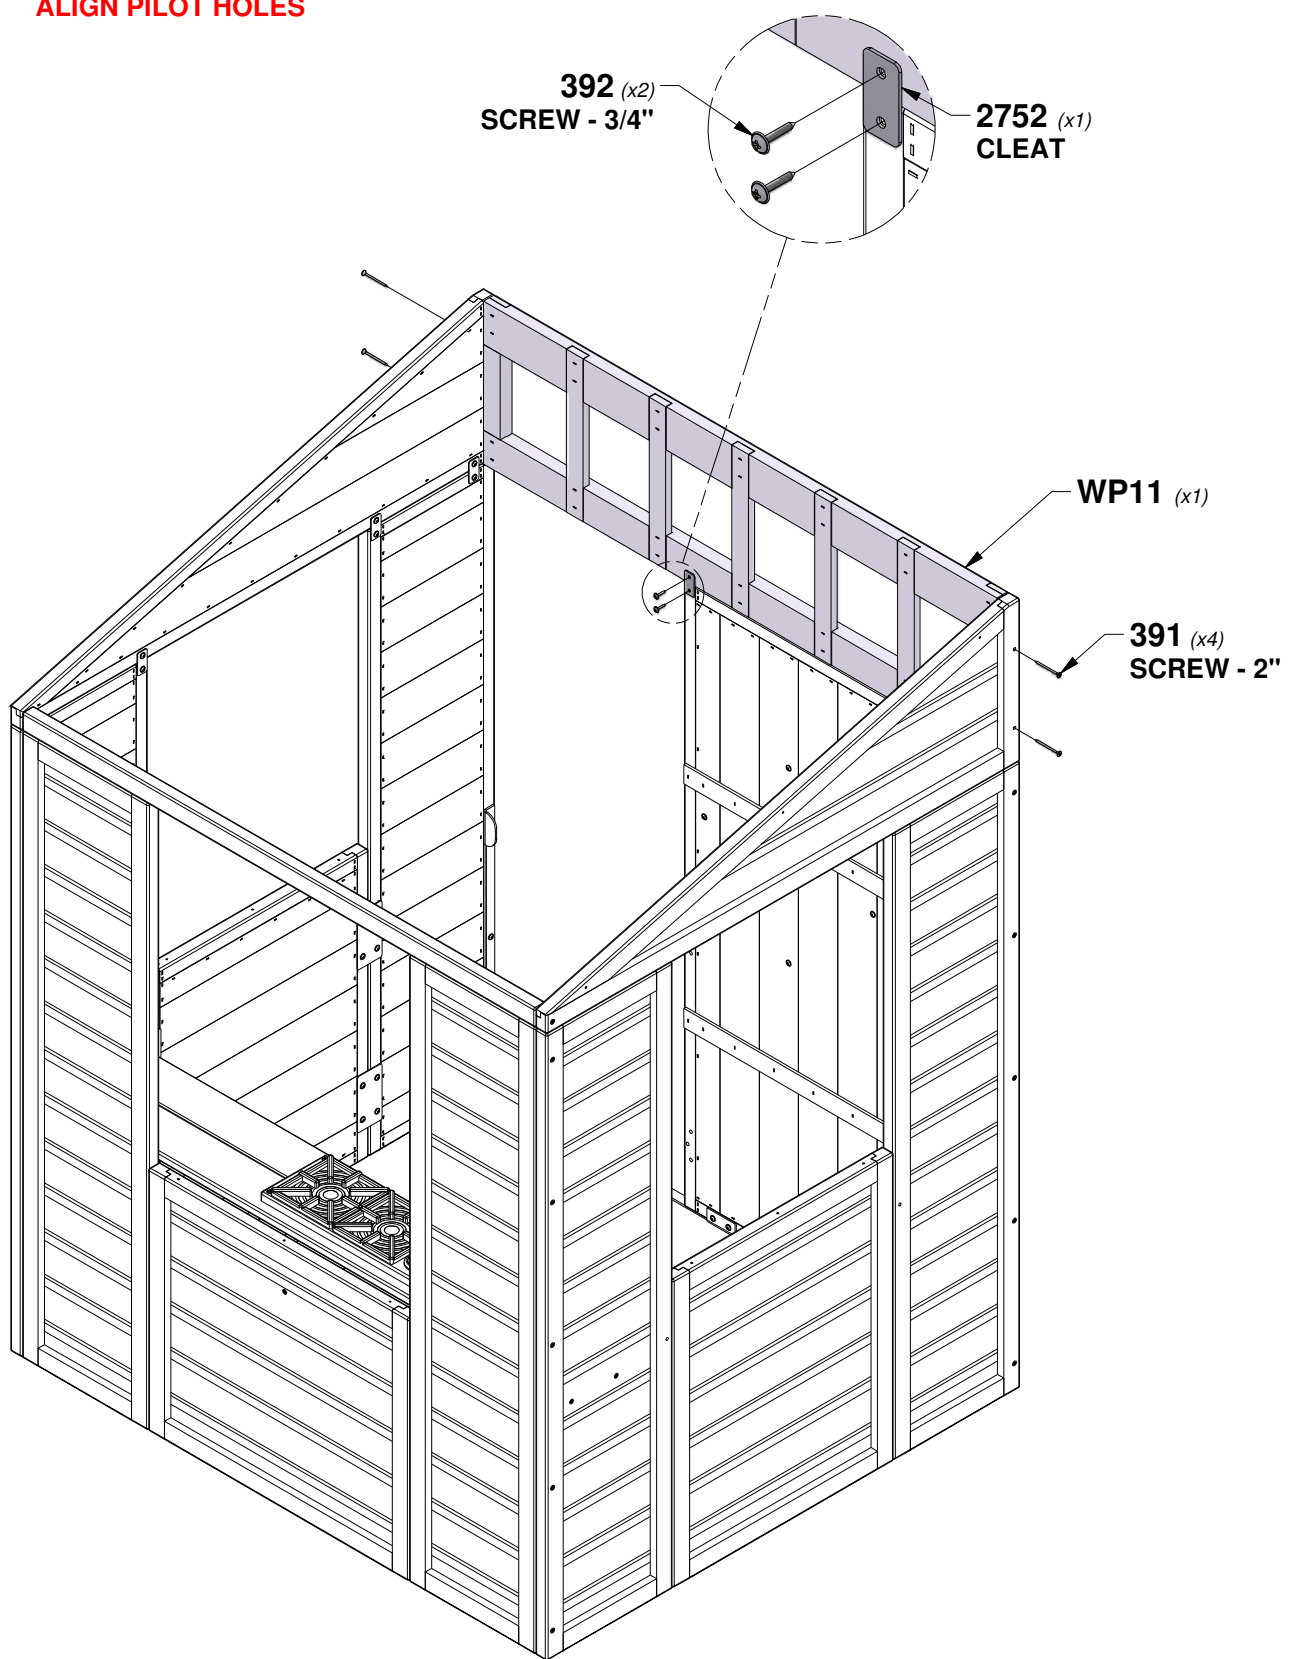


# STEP 20 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 3   | H100382     | SCREW PFH 8x1 3/4 BLK |

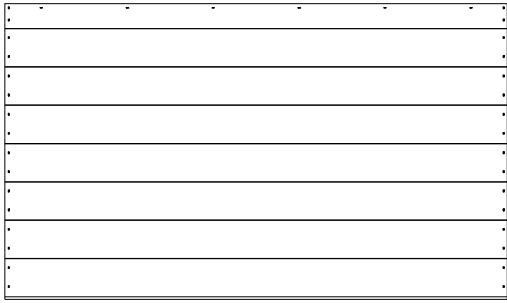


**RP01 ROOF PANEL - W2A04130**  
(x1) 1 3/8"x24 5/8"x41 7/8" (35x625x1064)

**TIP:**  
**ALIGN PILOT HOLES**

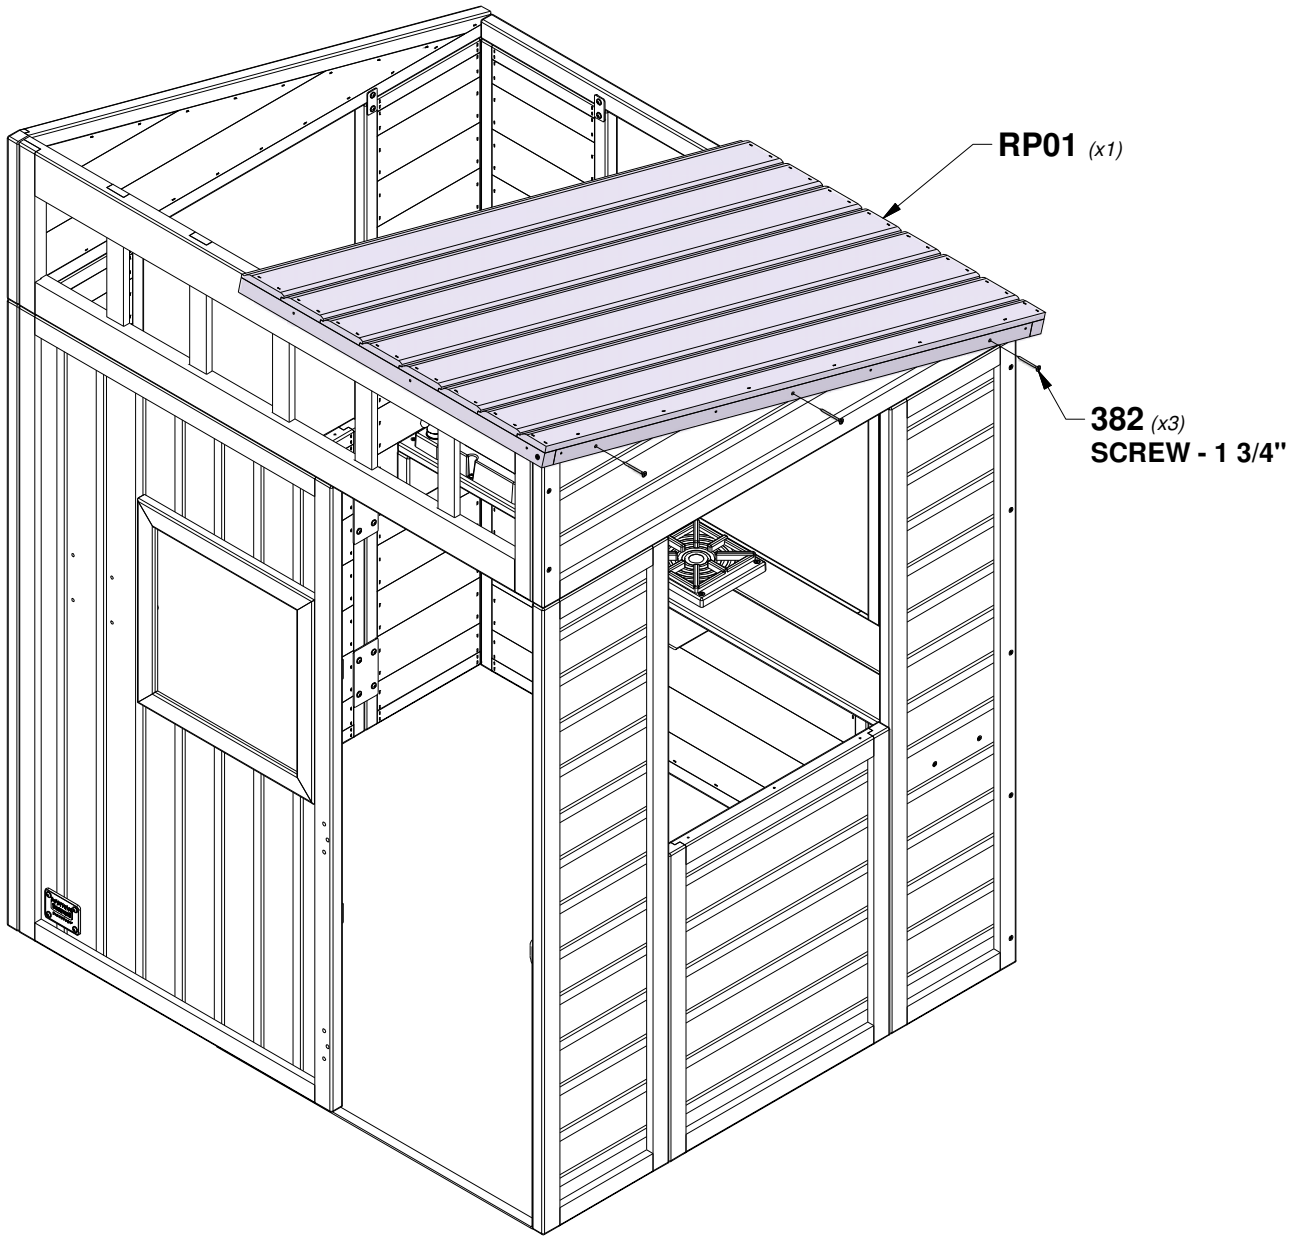


# STEP 21 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 3   | H100382     | SCREW PFH 8x1 3/4 BLK |

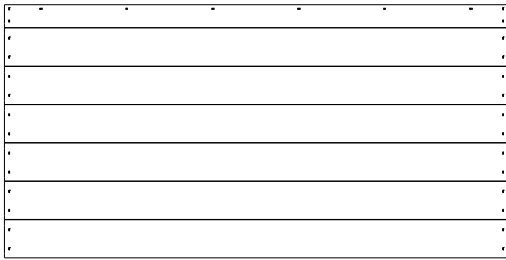


**RP02 ROOF PANEL - W2A04131**  
(x1) 1 3/8"x21 1/8"x41 7/8" (35x535x1064)

**TIP:**  
**ALIGN PILOT HOLES**

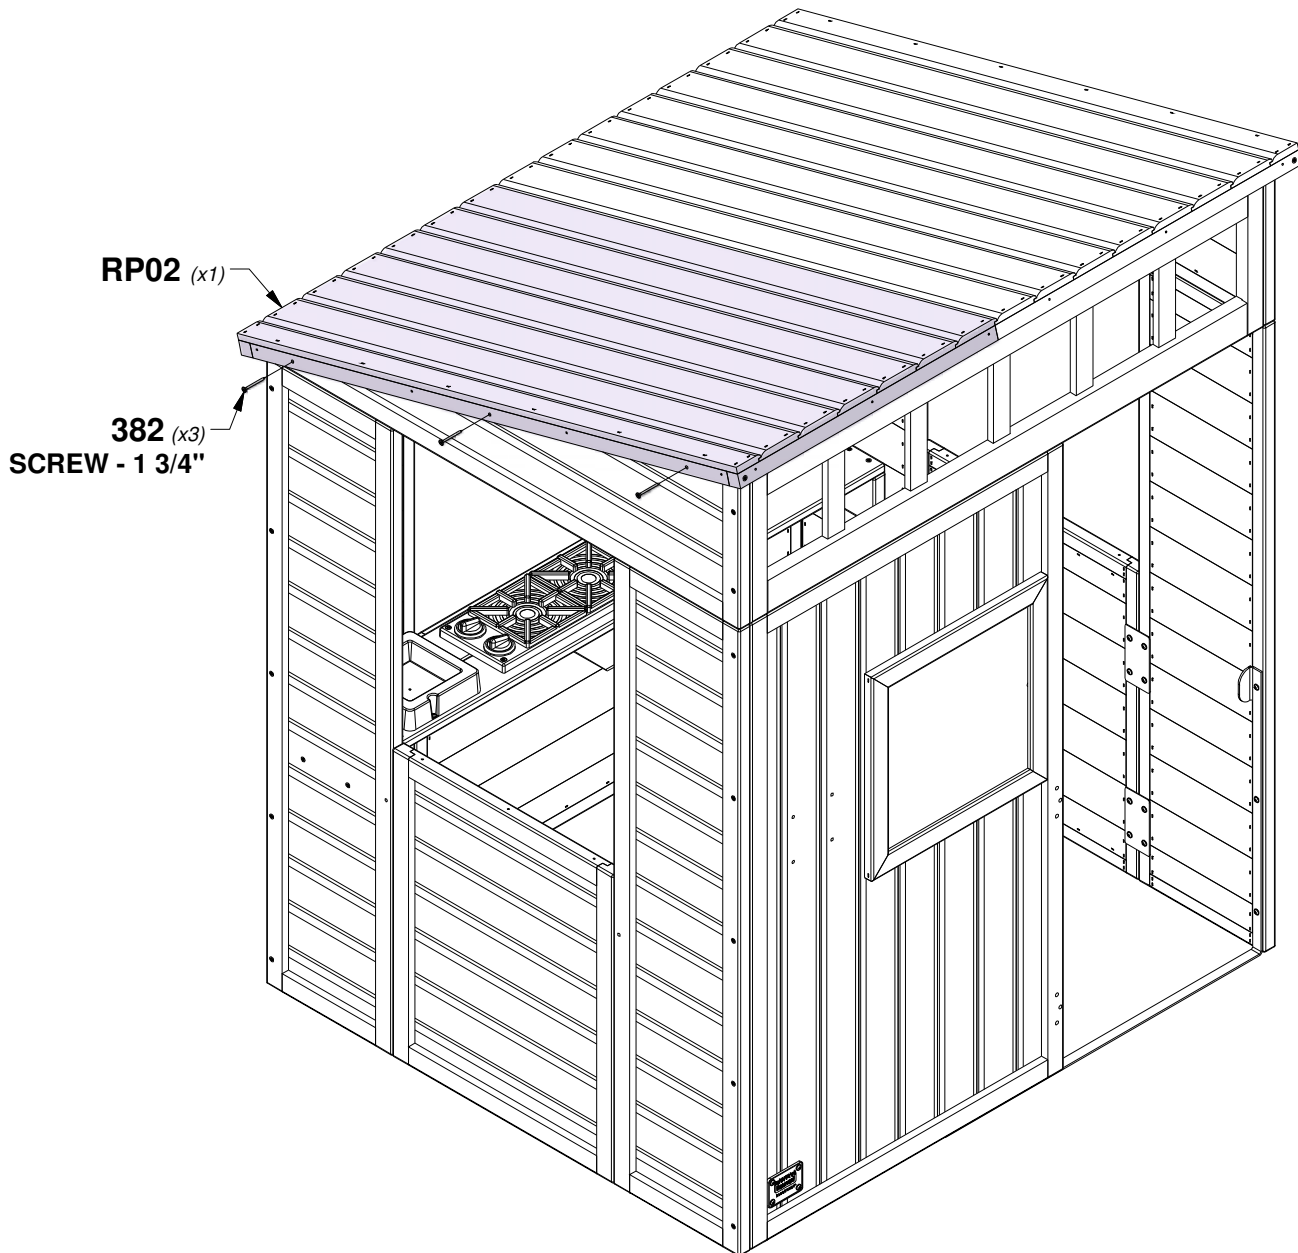


# STEP 22 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 6   | H100387     | SCREW PFH 8x1-1/4 BLK |




**F03 ROOF TRIM - W4L19820**  
(x1) 1"x1 7/8"x18 7/8" (26x47x479)



**F02 ROOF TRIM - W4L19316**  
(x1) 1"x1 7/8"x27 1/2" (26x47x700)

**TIP:**  
**ALIGN PILOT HOLES**

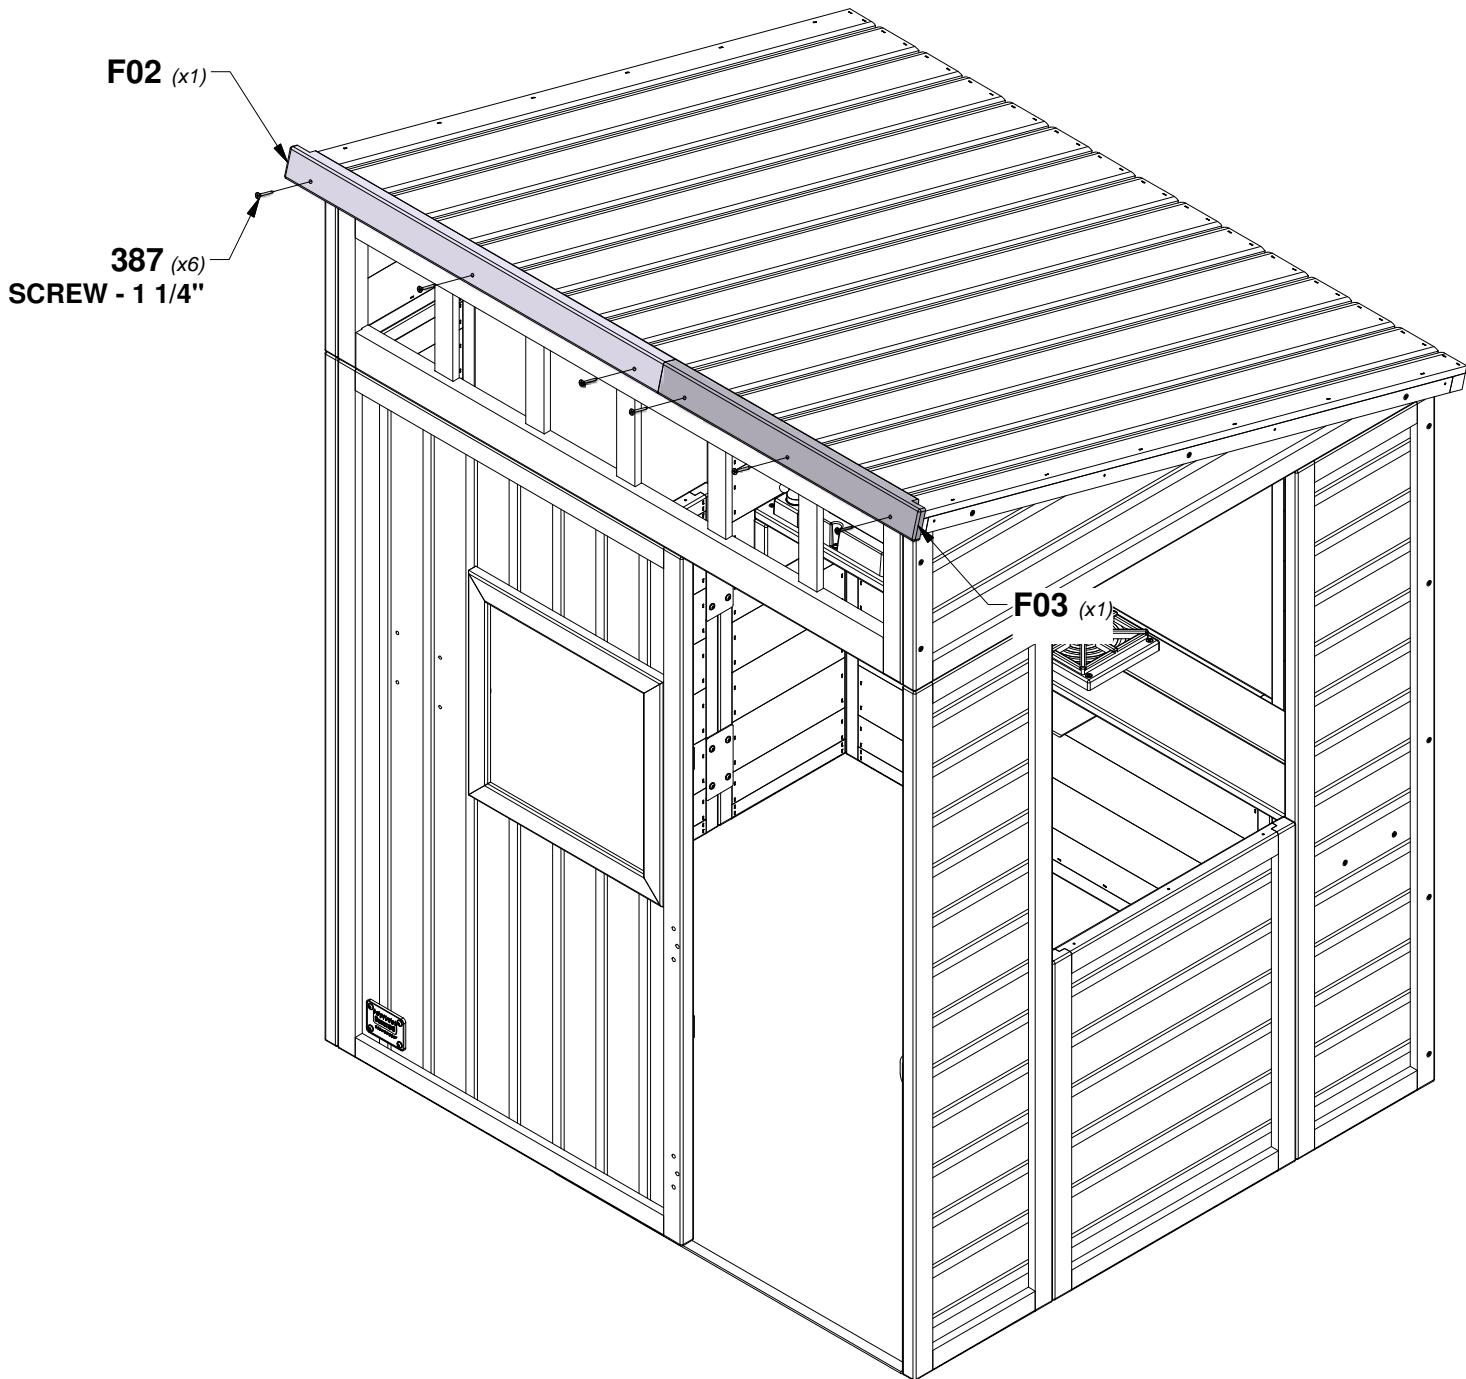


# STEP 23 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 4   | H100387     | SCREW PFH 8x1-1/4 BLK |



**F01 ROOF TRIM - W4L19315**  
(x1) 1"x1 7/8"x41 7/8" (26x47x1064)

**TIP:**  
**ALIGN PILOT HOLES**

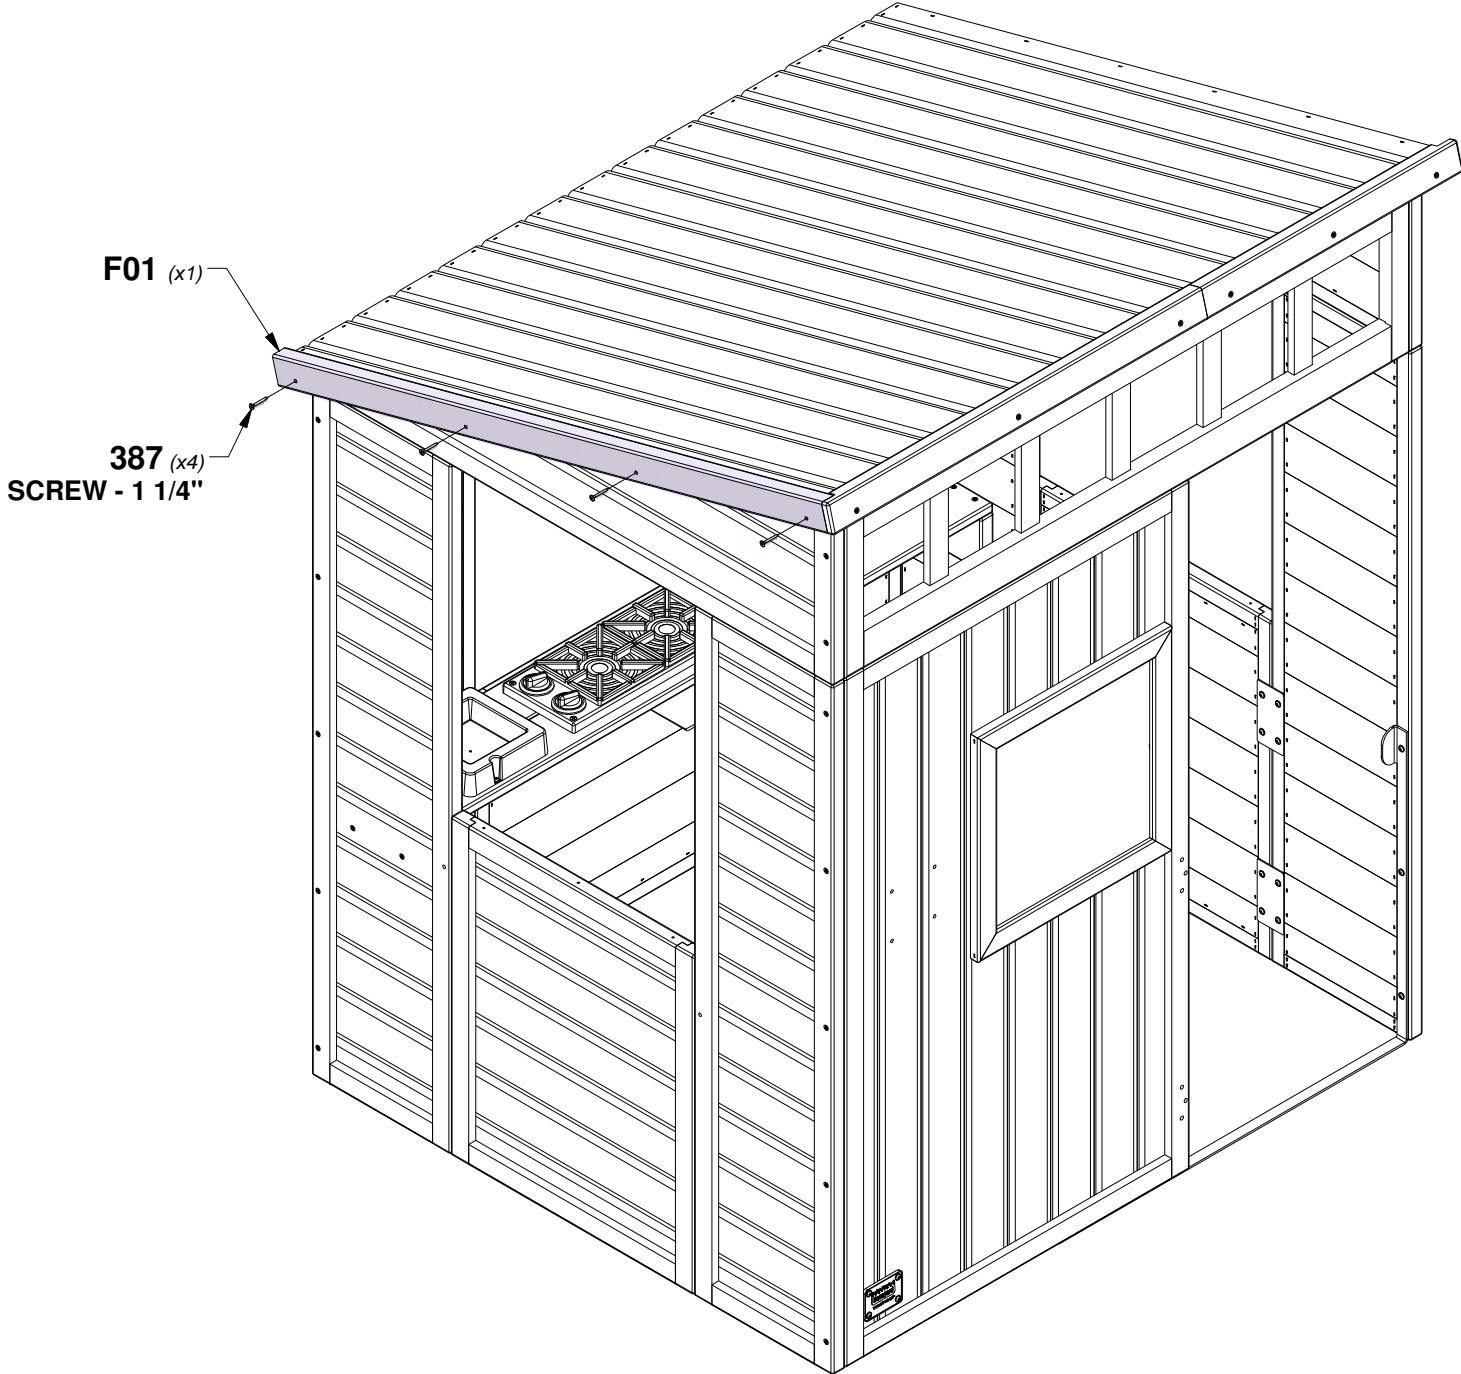


# STEP 24 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 4   | H100387     | SCREW PFH 8x1-1/4 BLK |



**F01 ROOF TRIM - W4L19315**  
(x1) 1"x1 7/8"x41 7/8" (26x47x1064)

**TIP:**  
**ALIGN PILOT HOLES**

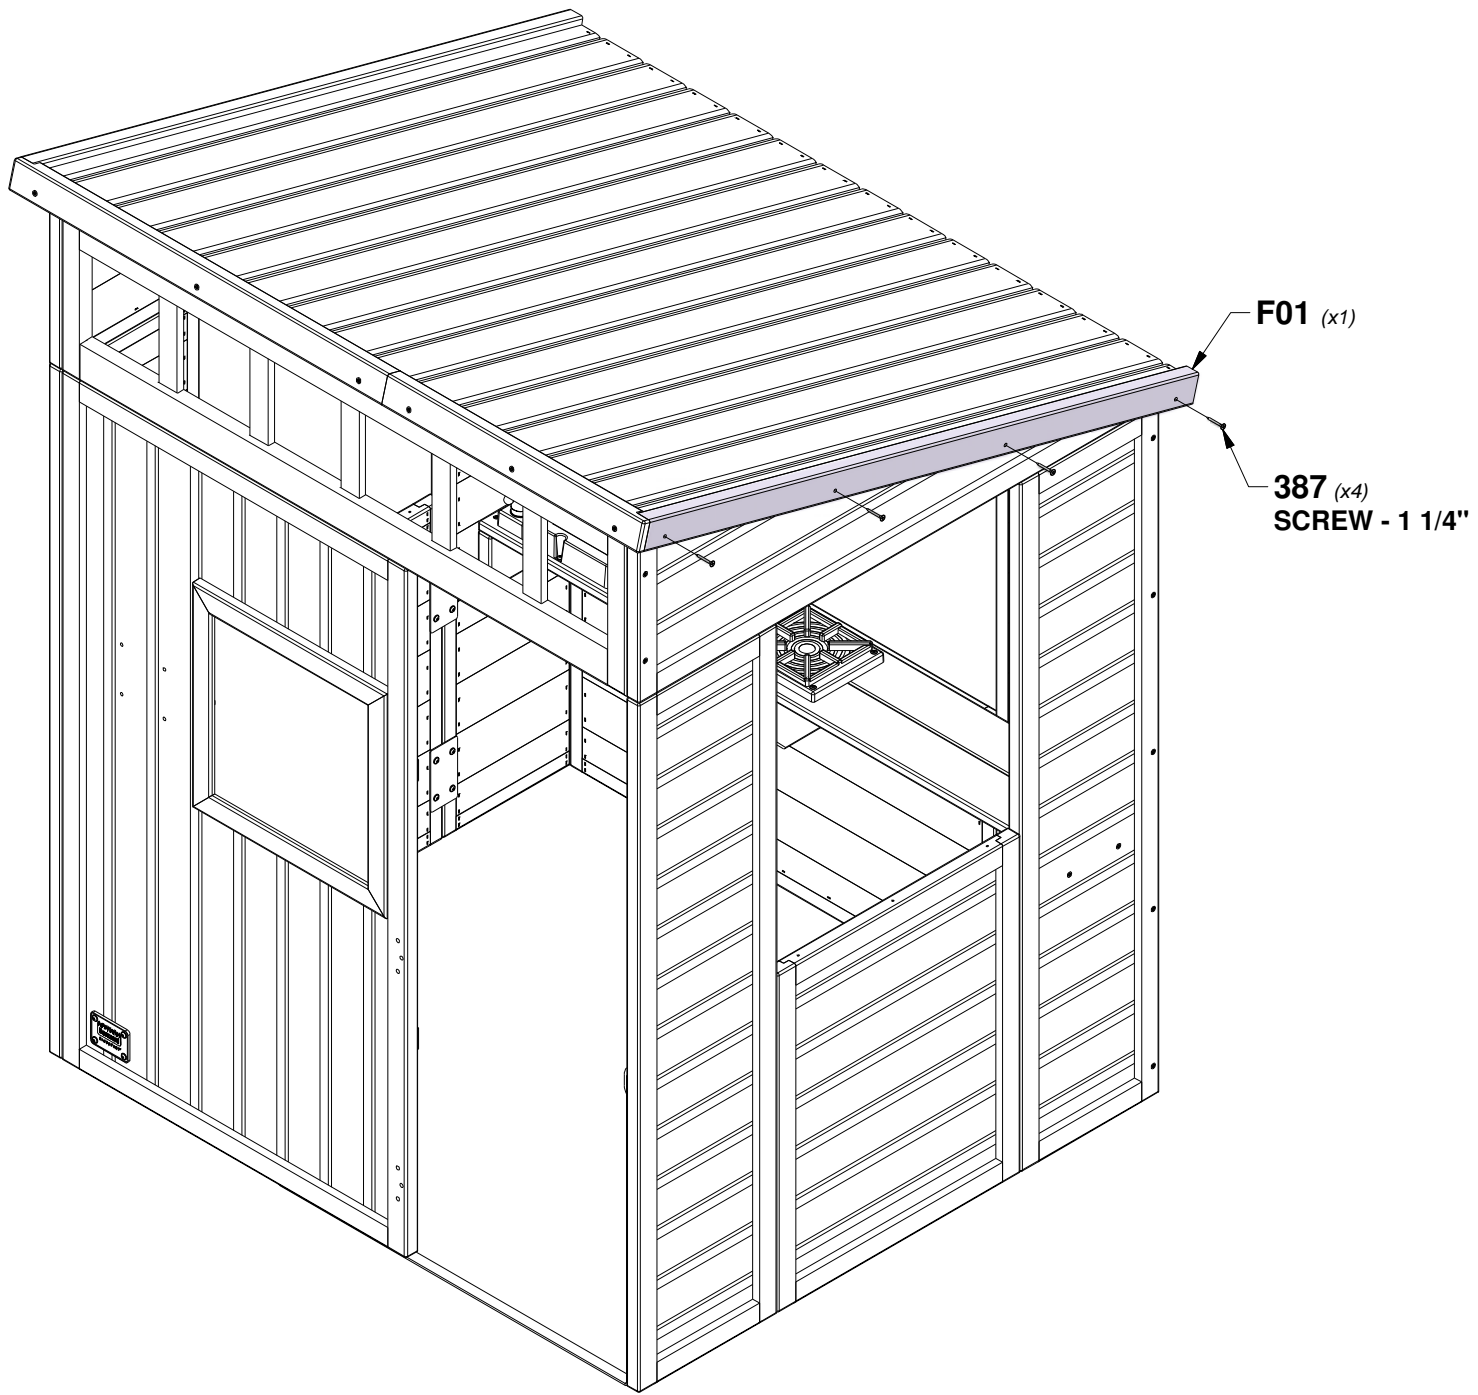


**F01 (x1)**

**387 (x4)**  
**SCREW - 1 1/4"**




# STEP 25 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 7   | H100387     | SCREW PFH 8x1-1/4 BLK |




**N04 ROOF TRIM - W4L19819**  
(x1) 5/8"x1 3/8"x12 3/4" (16x34x324)



**N03 ROOF TRIM - W4L19317**  
(x1) 5/8"x1 3/8"x33 5/8" (16x34x855)

**TIP:**  
**ALIGN PILOT HOLES**

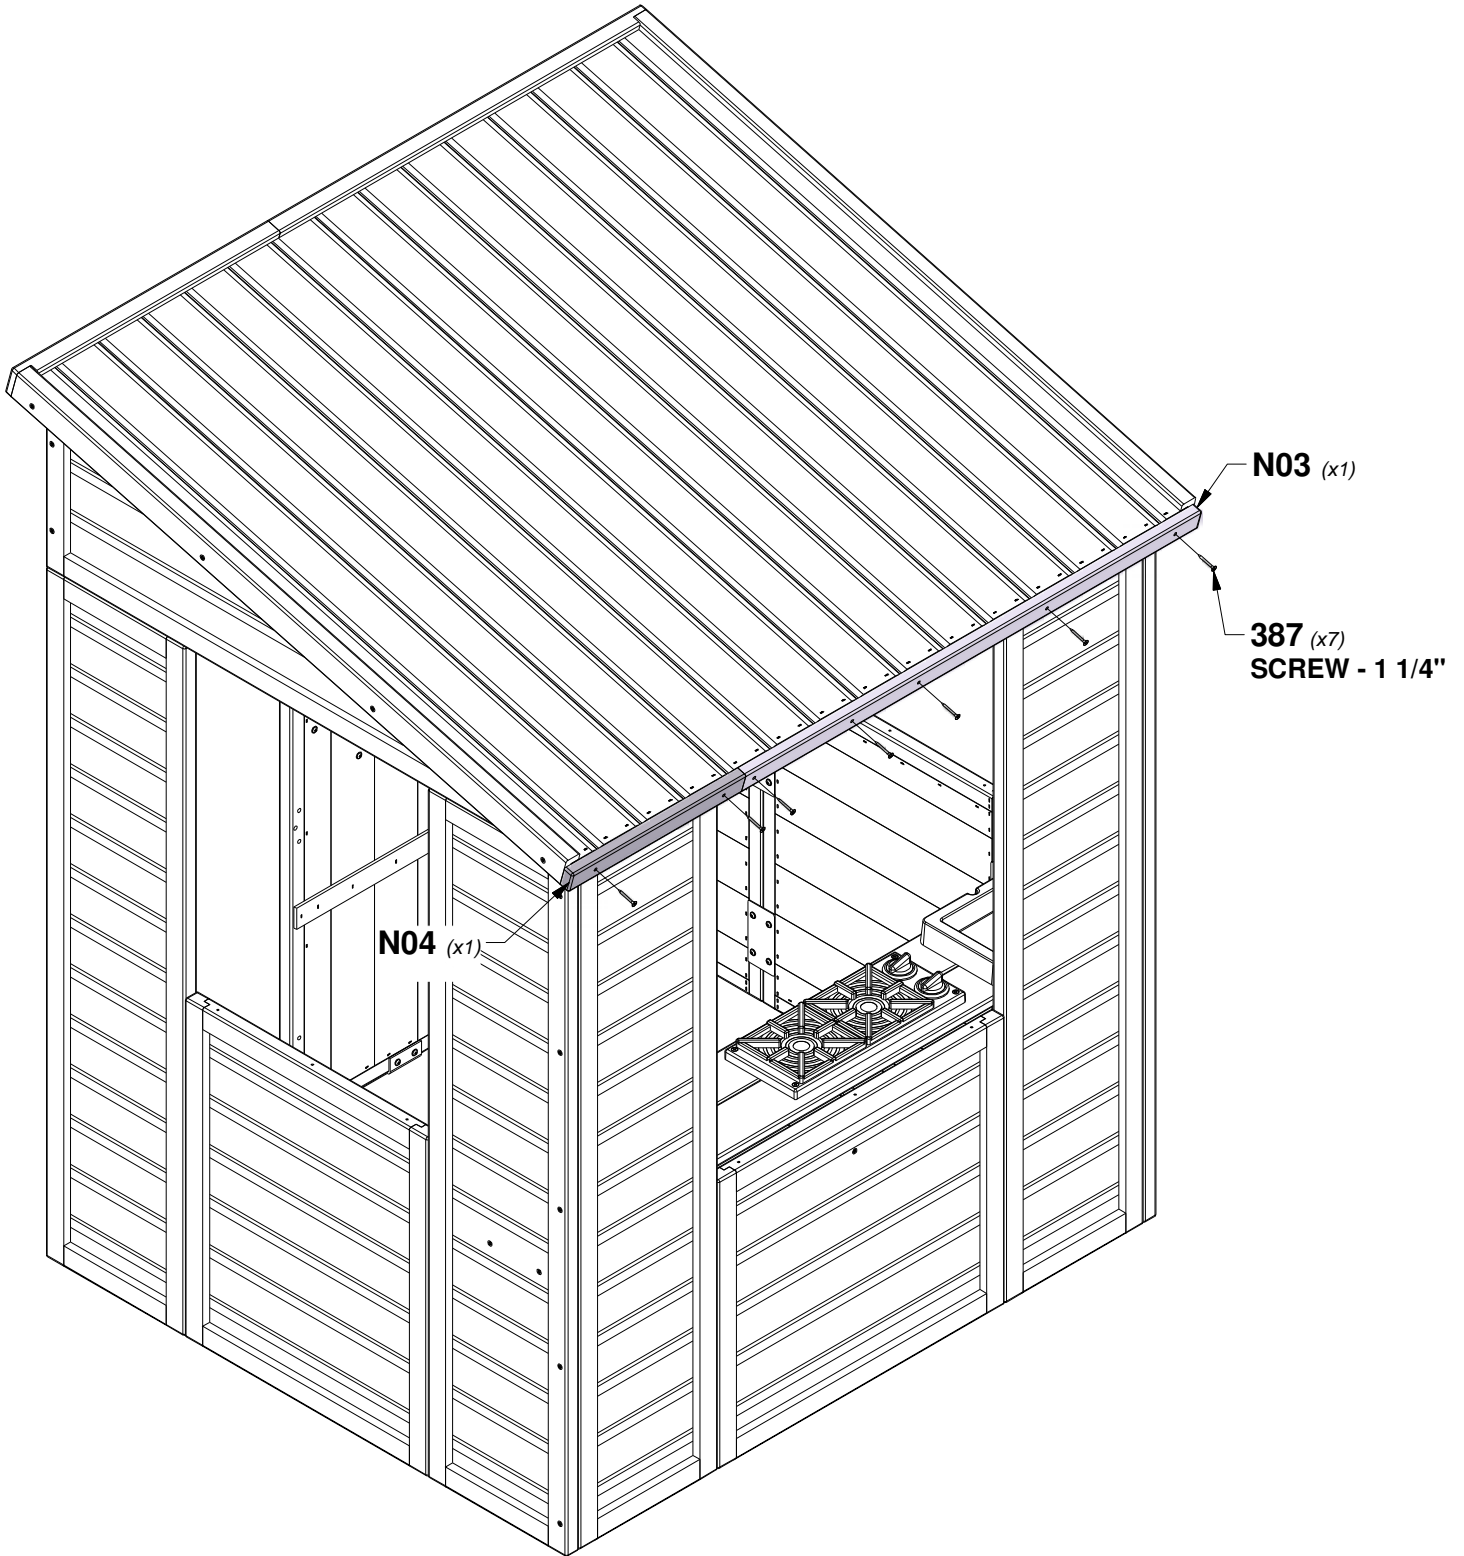


**N03 (x1)**

**387 (x7)**  
**SCREW - 1 1/4"**

**N04 (x1)**

# STEP 26 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION             |
|-----|-------------|-------------------------|
| 12  | H100804     | T-NUT 8/32              |
| 12  | H100807     | SCREW POH-MS 8/32x1 BLK |

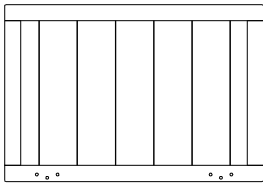

**DP01 DOOR PANEL - W2A04125**  
(x1) 1"x10 1/4"x43 7/8" (24x374x548)




**A4M00624 HINGE (DOOR, SPRING LOADED)**  
(x1)



**A4M00994 HINGE (DOOR, NON-SPRING LOADED)**  
(x1)


**TIP:**  
**INSTALL T-NUTS IN WOOD FIRST**

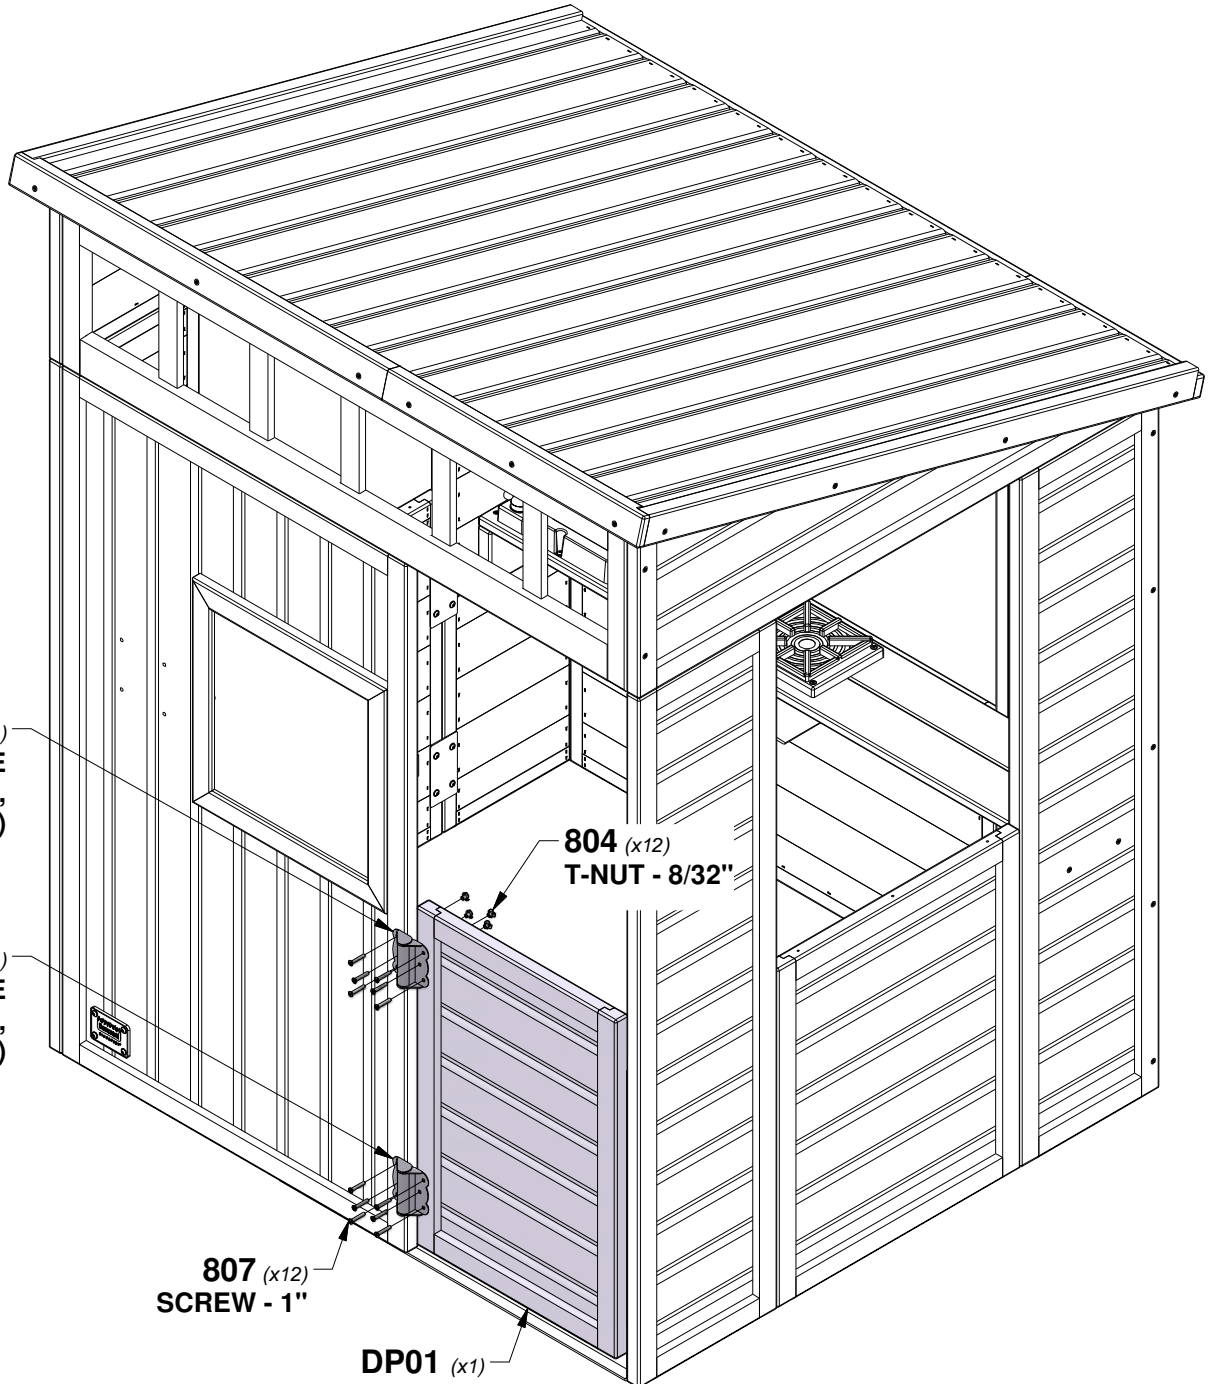





# STEP 27 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION       |
|-----|-------------|-------------------|
| 4   | H100797     | SCREW PWH 8x1 BLK |




**MB01 MAILBOX - W2A04129**  
(x1) 3 3/8"x6 9/16"x8 3/4" (86x166x222)

**TIP:**  
**ALIGN PILOT HOLES**

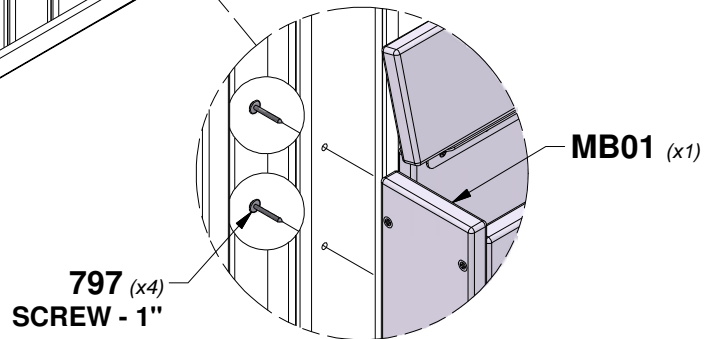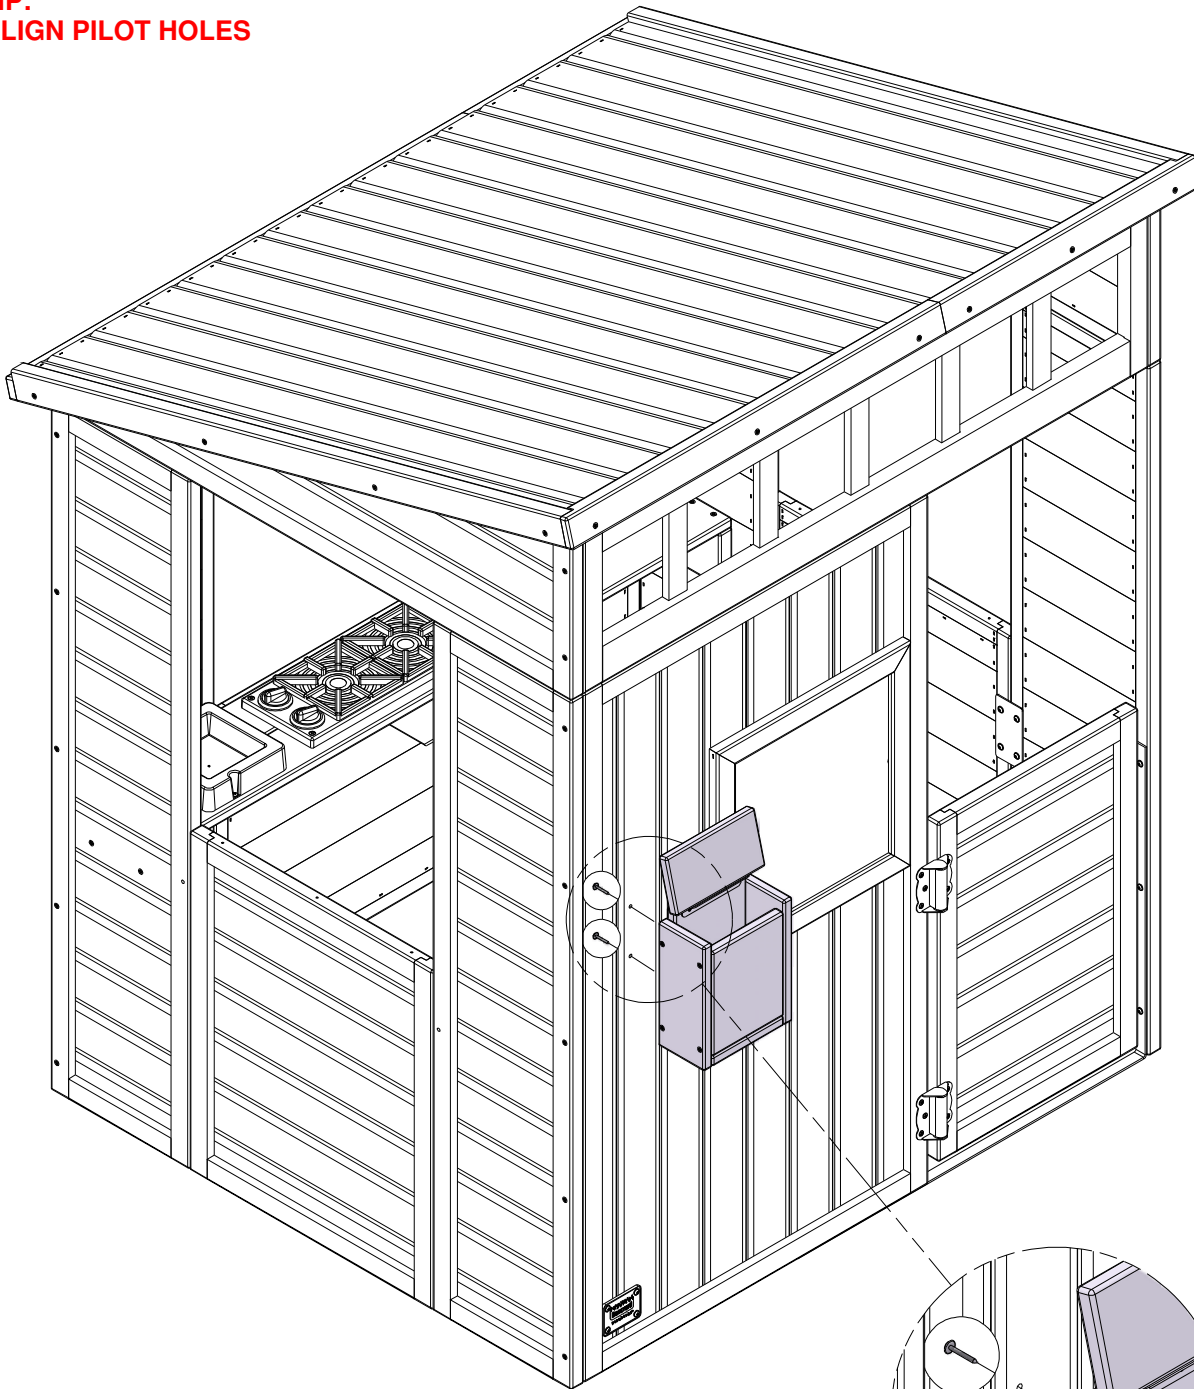


# STEP 28 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION       |
|-----|-------------|-------------------|
| 2   | H100391     | SCREW PFH 8x2 BLK |

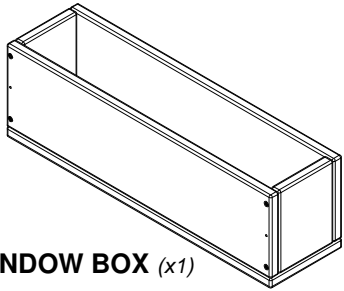

WINDOW BOX (x1)


**TIP:**  
**ALIGN PILOT HOLES**

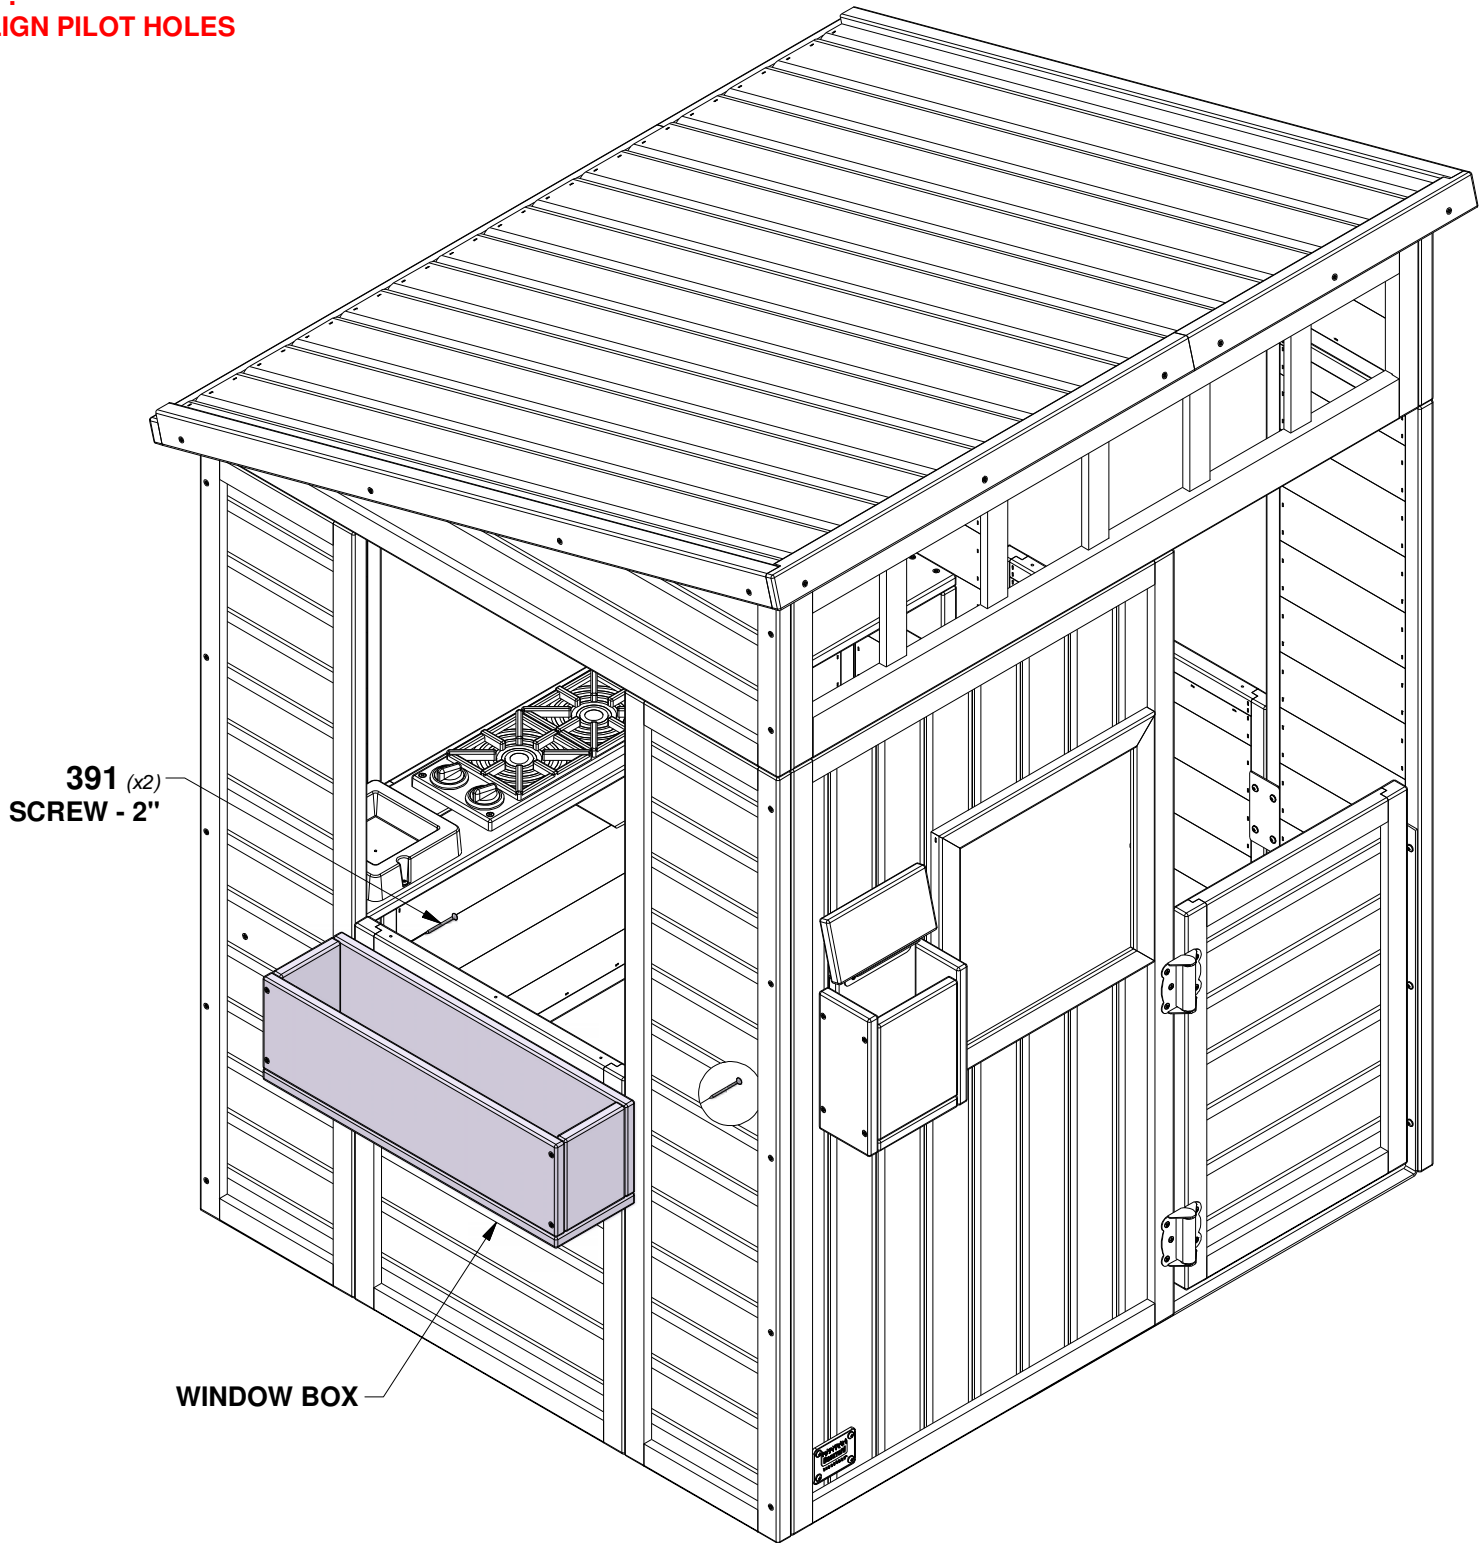

WINDOW BOX


# STEP 29 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 3   | H100200     | SCREW PFH 8x1-1/2 BLK |




**N02 WINDOW BOARD - W4L19310**  
(x1) 5/8"x1 5/8"x21 1/8" (16x40x536)

**TIP:**  
**ALIGN PILOT HOLES**

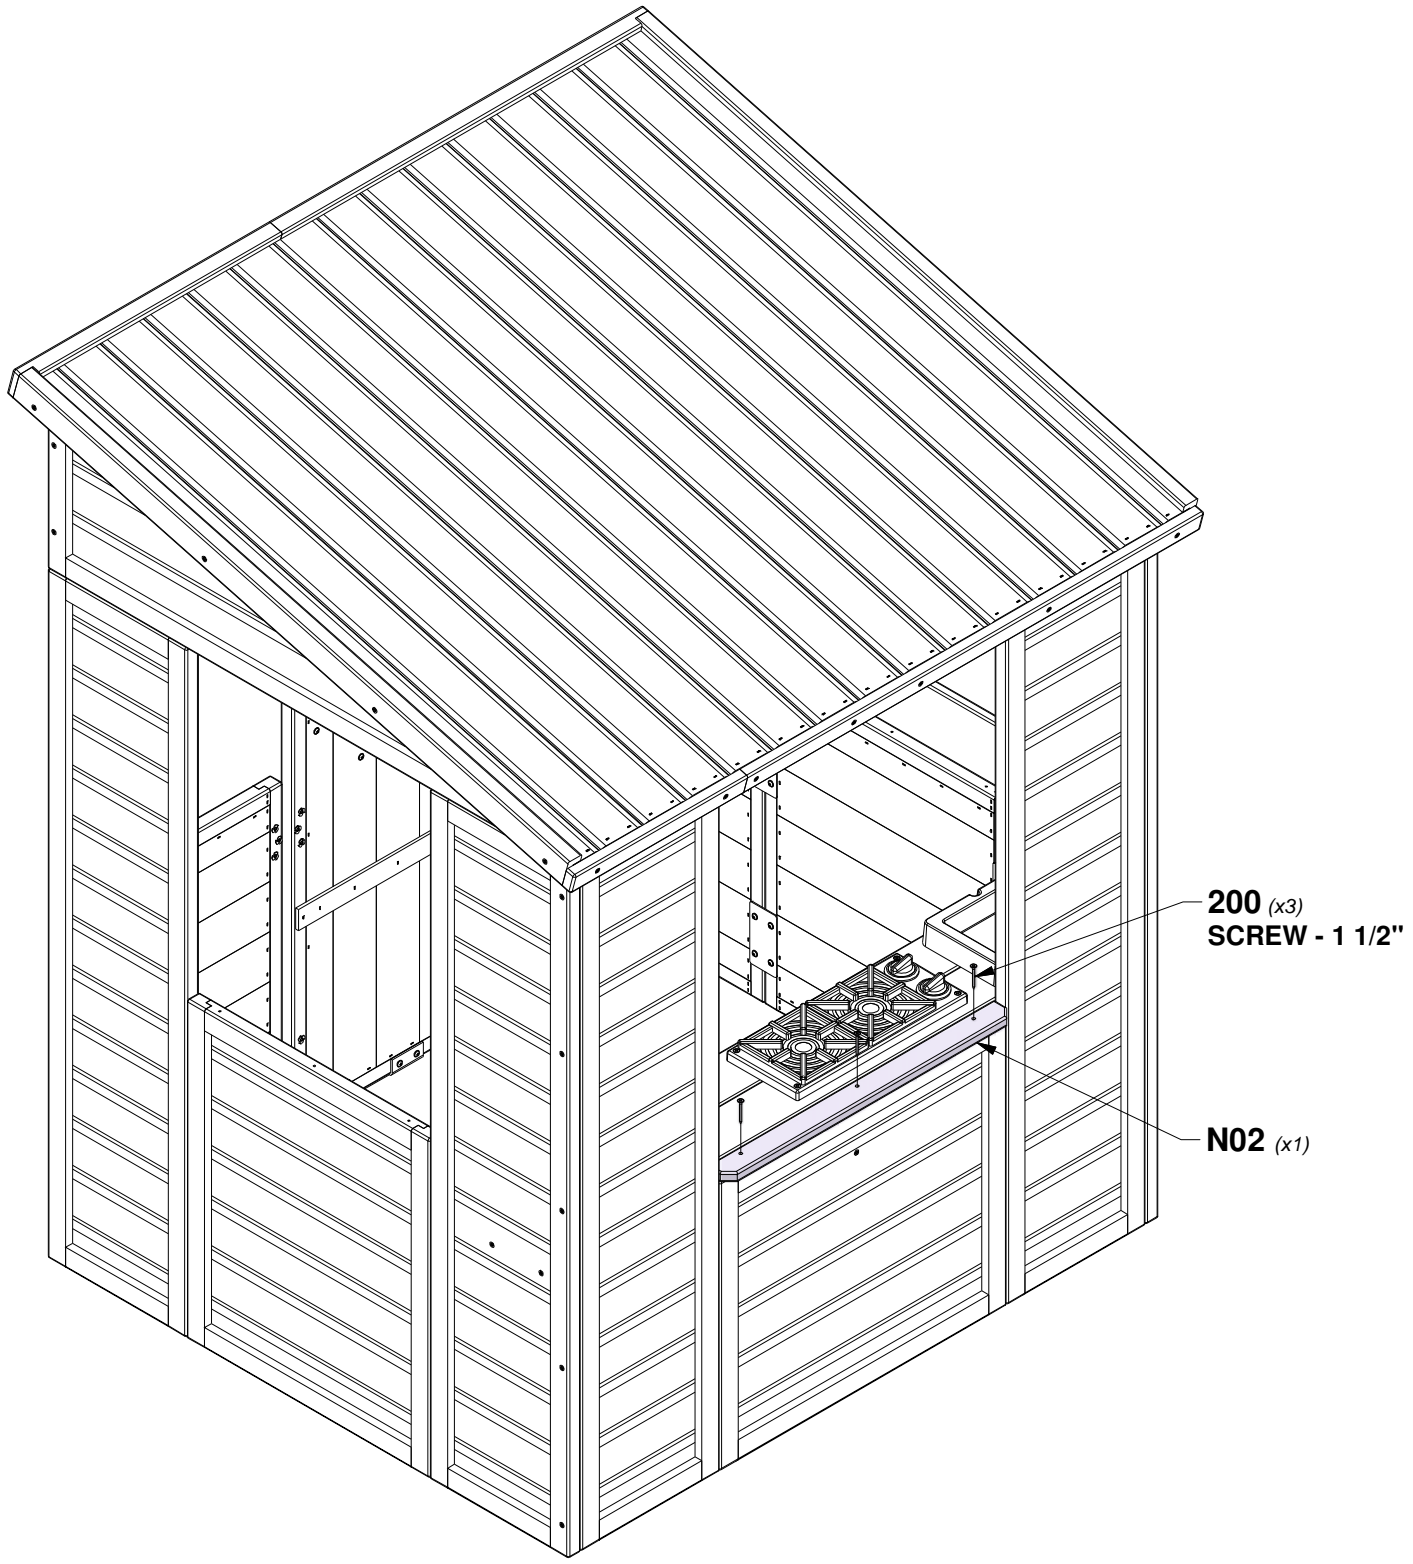


# STEP 30 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 3   | H100200     | SCREW PFH 8x1-1/2 BLK |



**N01 WINDOW BOARD - W4L19309**  
(x1) 5/8"x1 5/8"x17 7/8" (16x40x454)

**TIP:**  
**ALIGN PILOT HOLES**

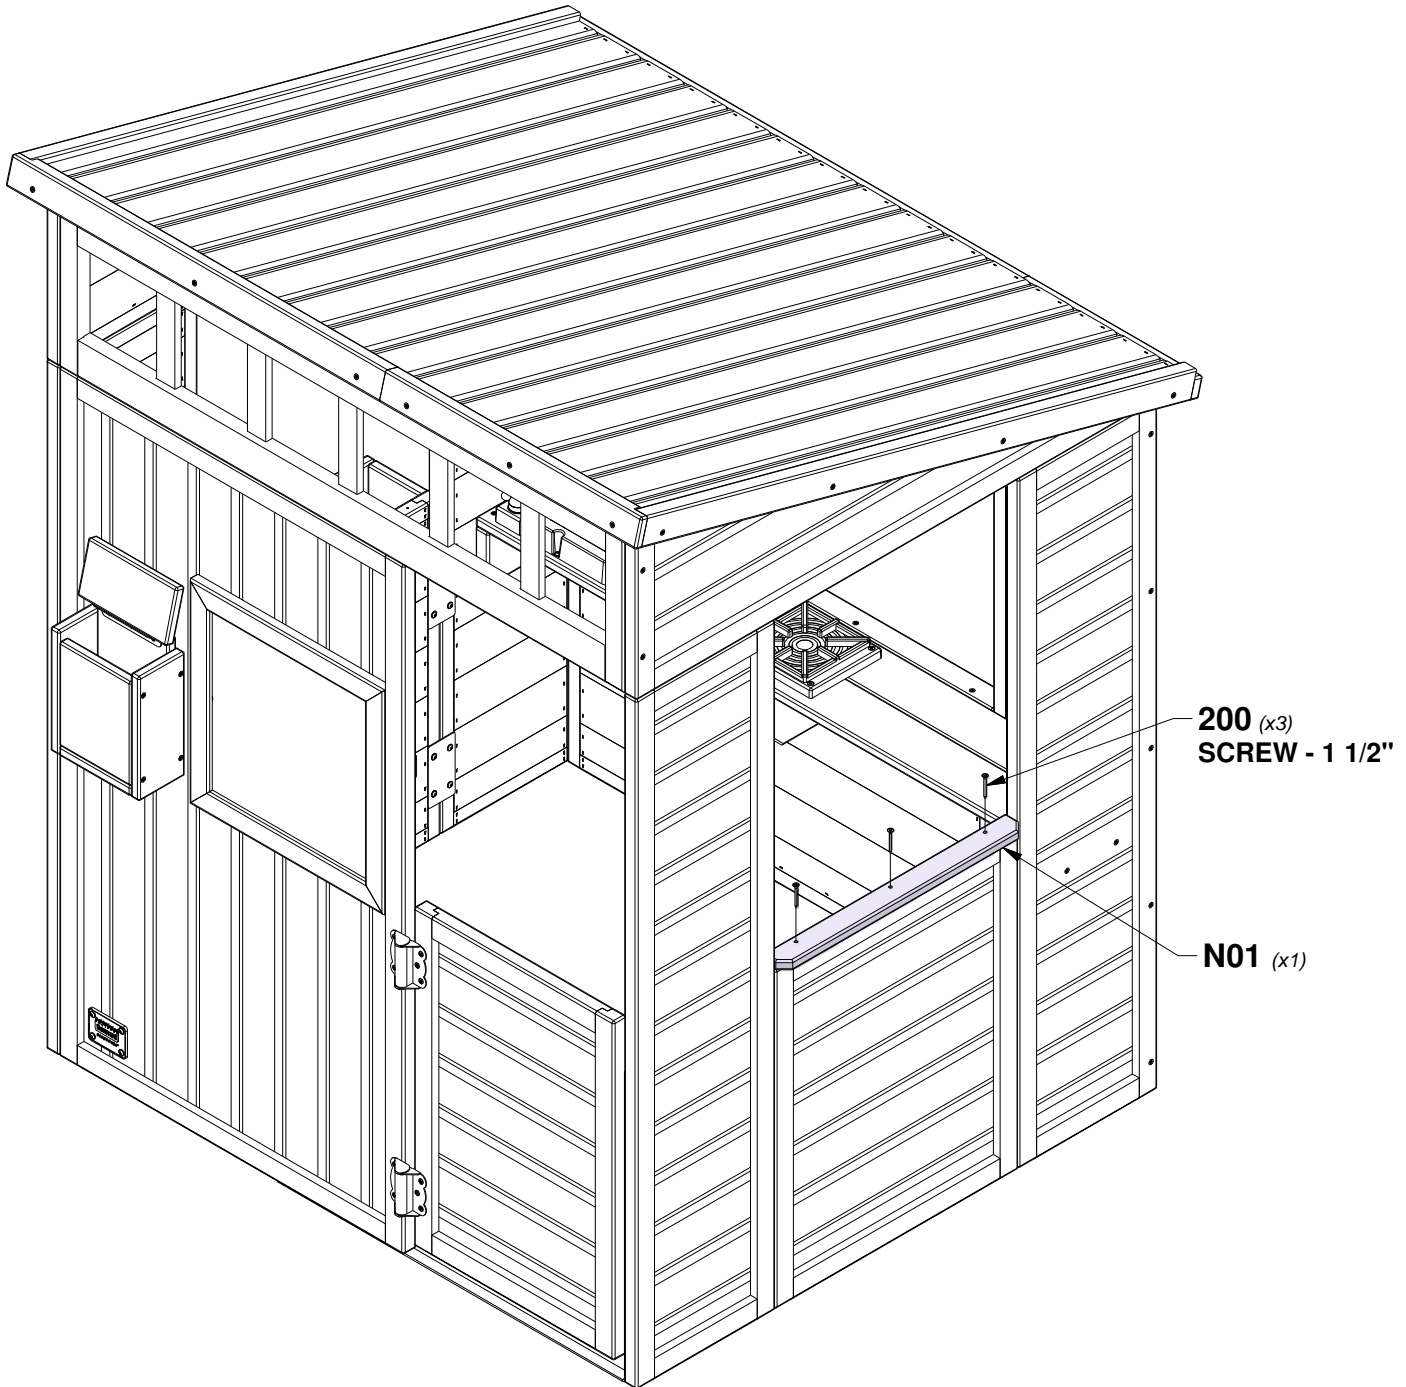


# STEP 31 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION           |
|-----|-------------|-----------------------|
| 3   | H100200     | SCREW PFH 8x1-1/2 BLK |




**N01 WINDOW BOARD - W4L19309**  
(x1) 5/8"x1 5/8"x17 7/8" (16x40x454)

**TIP:**  
**ALIGN PILOT HOLES**

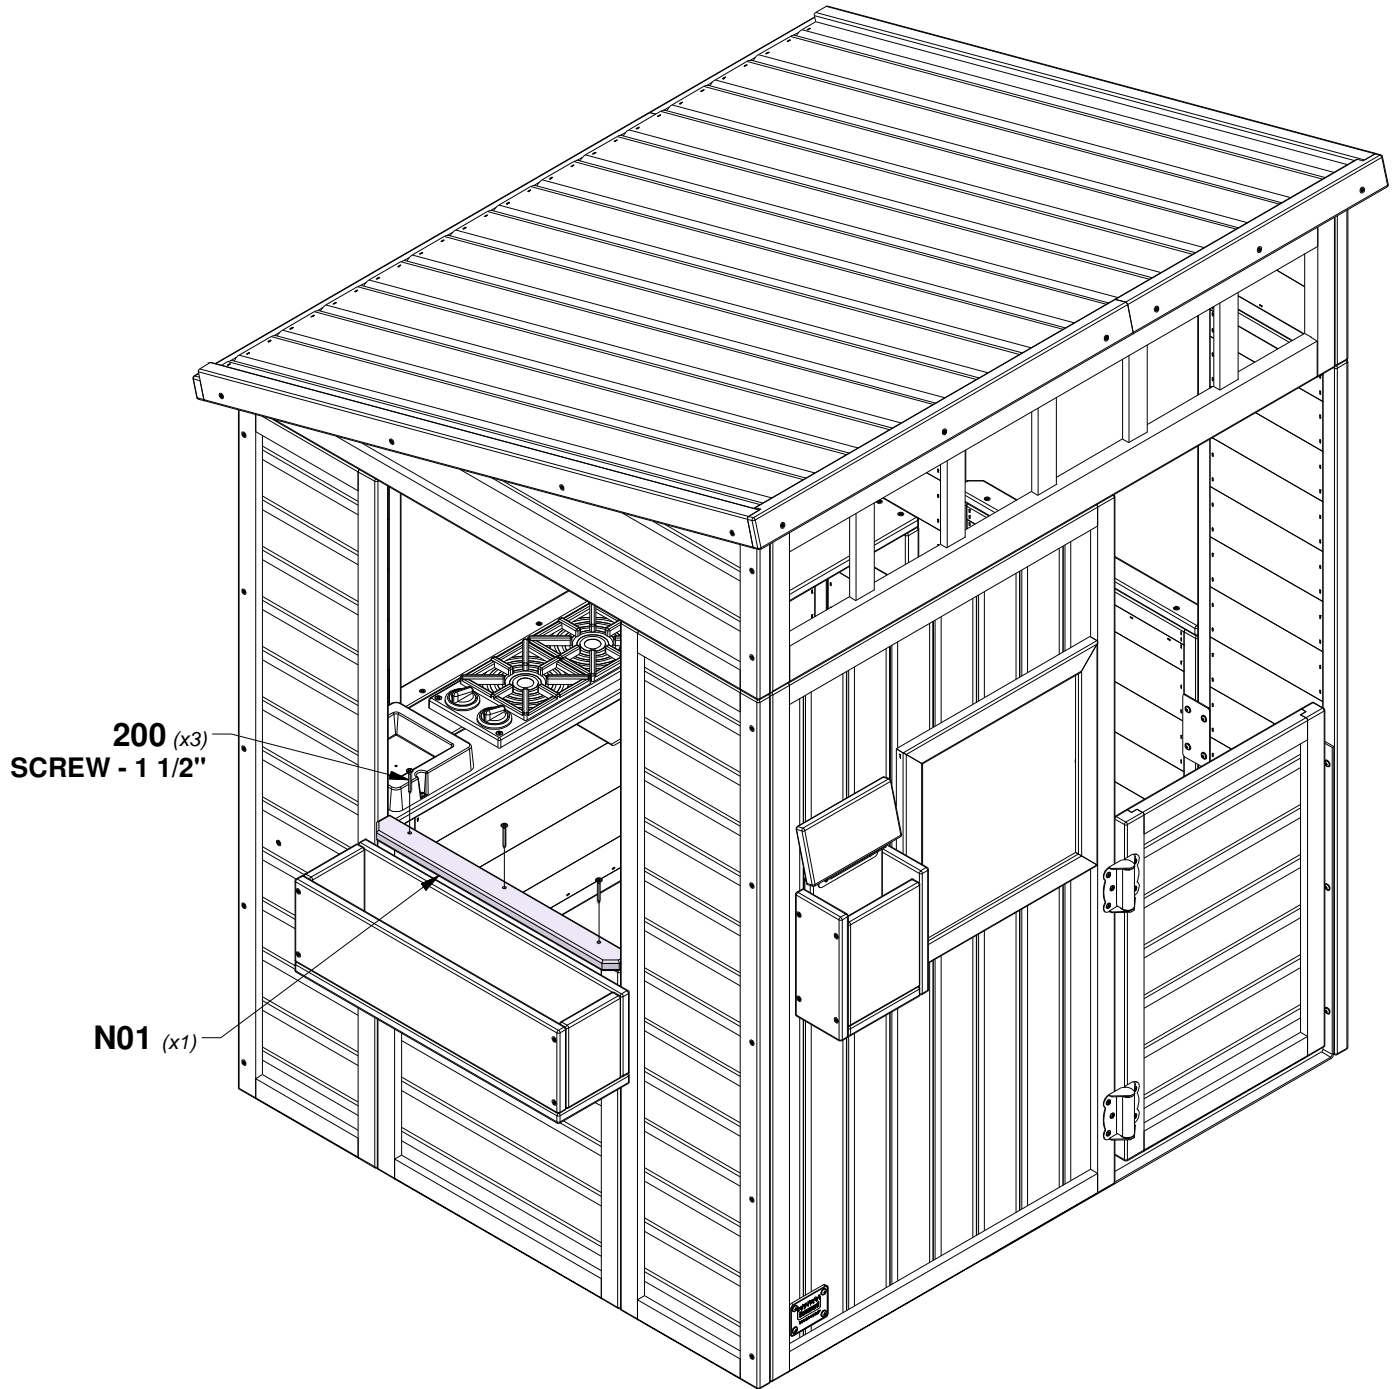




# STEP 32 - PLAYHOUSE ASSEMBLY

| QTY | PART NUMBER | DESCRIPTION                |
|-----|-------------|----------------------------|
| 4   | H100192     | NUT BARREL WH 5/16x7/8 BLK |
| 4   | H100199     | WASHER LOCK EXT 12x19 BLK  |
| 4   | H100396     | BOLT WH 5/16x1/2 BLK       |



**NOTE:**  
TAP IN GROUND STAKES AT AN APPROXIMATE 45° ANGLE AT LOCATIONS SHOWN. USING GROUND STAKE AS A GUIDE, DRILL 3/8" [10mm] DIA HOLES FOR HARDWARE.

**TOP VIEW**

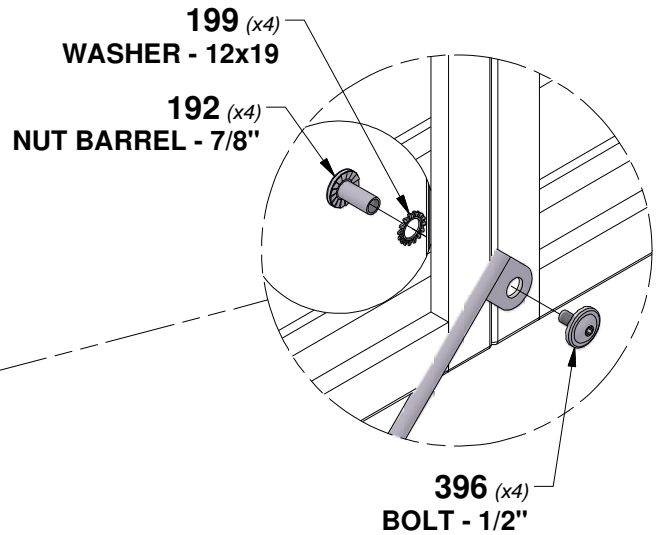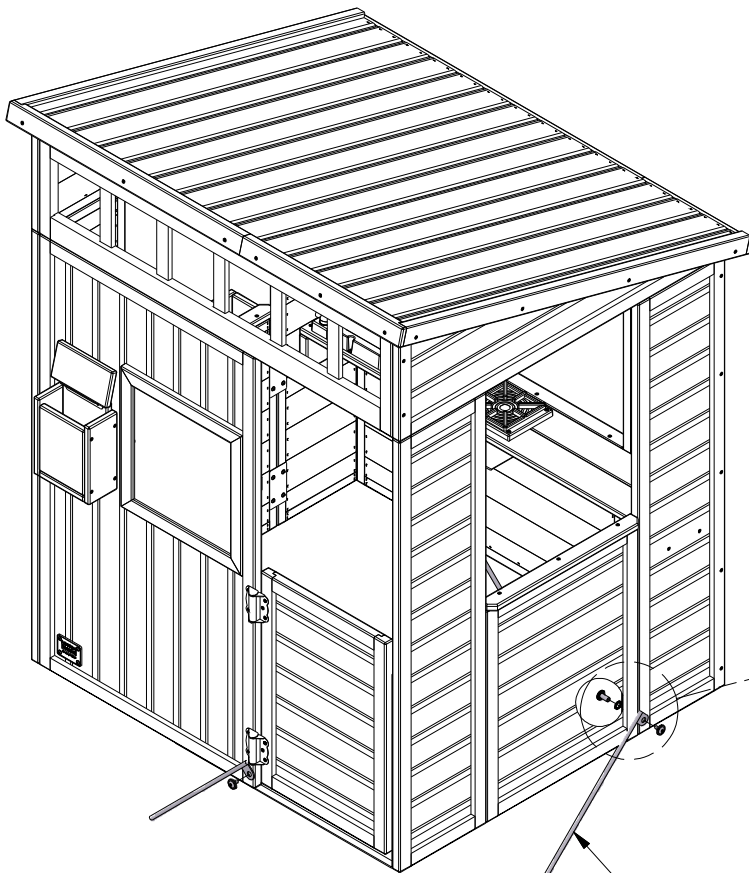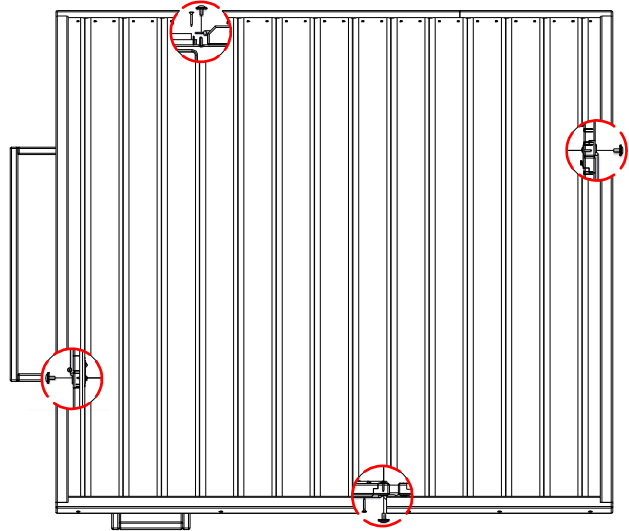

**527 (x4)**  
GROUND STAKE REBAR