Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive,Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

FUSION FLAME OUTDOOR KITCHEN
MODEL # : 2304079B

WARNING
Cancer and Reproductive Harm
www.P65Warnings.ca.gov

Please visit www.backyarddiscovery.com
For the most up to date assembly manual, to register your product, or to order replacement parts *Para obtener instrucciones en español, visite www.backyarddiscovery.com*

BILT®

EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP
App Store Google play

OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings, concrete pad or deck to attach your structure

- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.

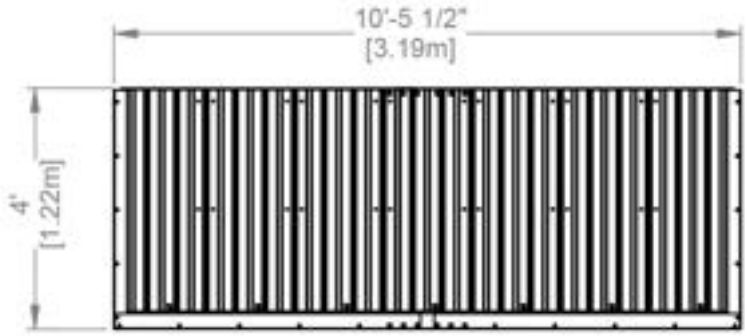

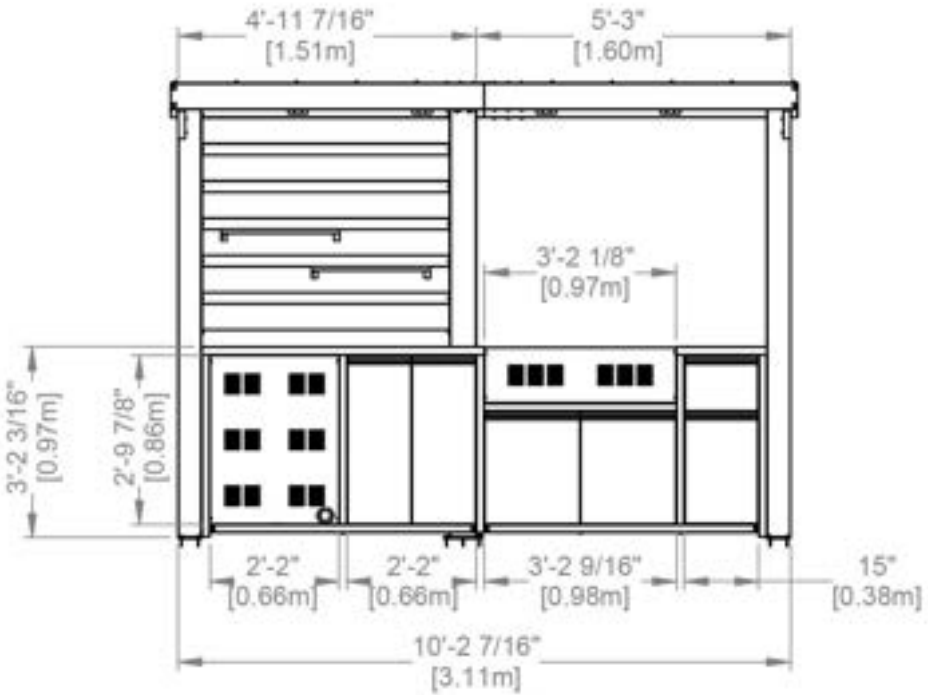

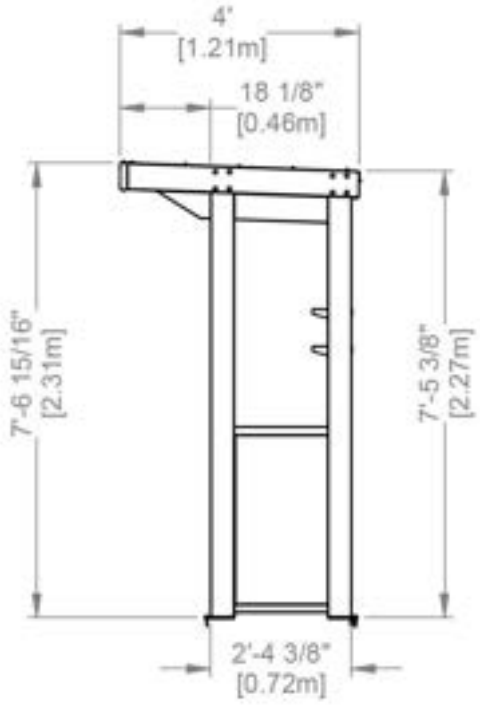

OWNER'S MANUAL - ANCHORING LAYOUT

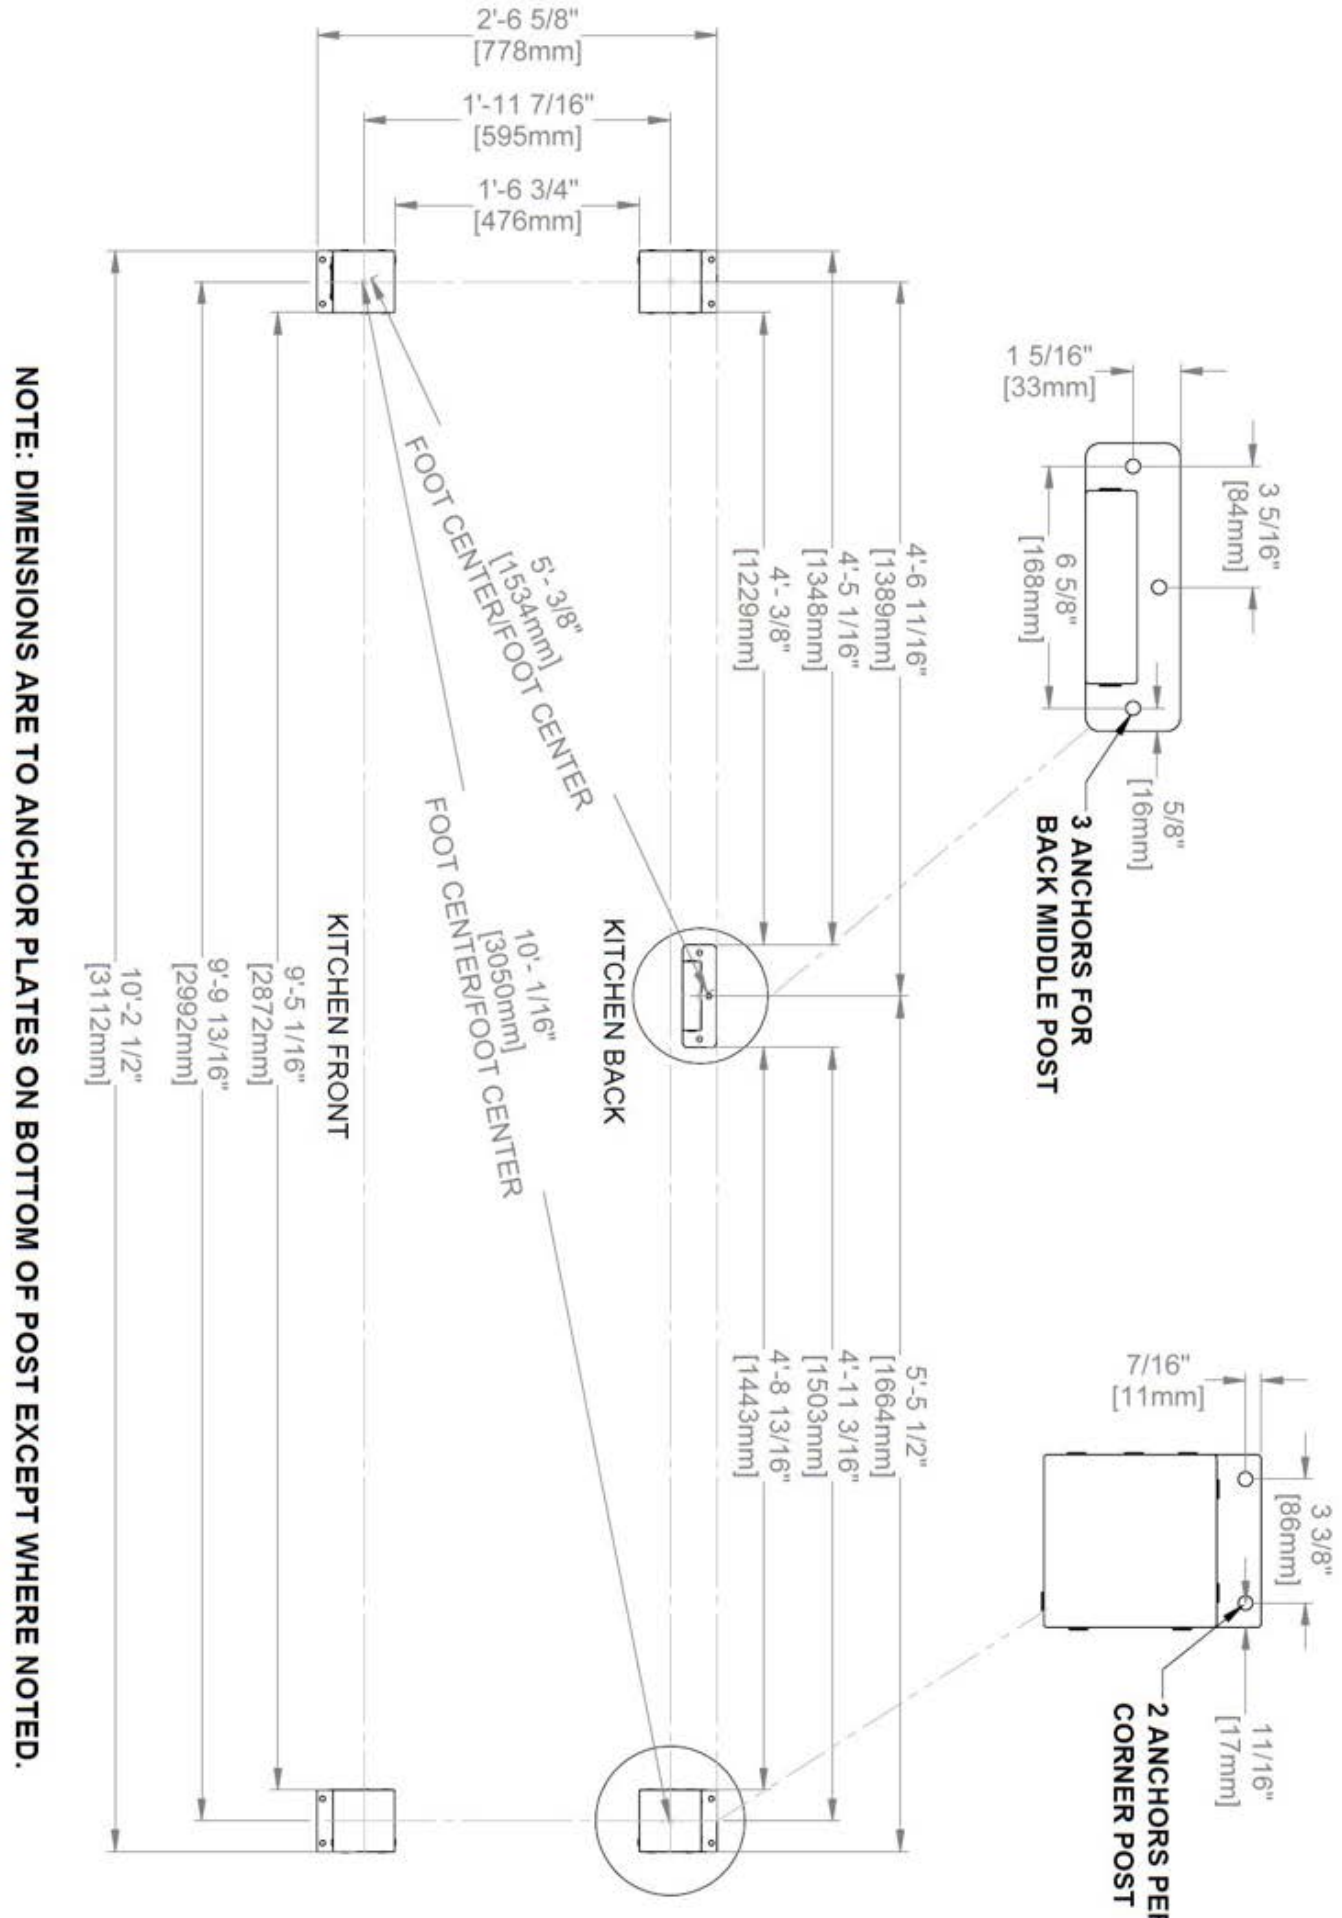

NOTE: DIMENSIONS ARE TO ANCHOR PLATES ON BOTTOM OF POST EXCEPT WHERE NOTED.

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

P01 FRONT POST - A4M02008
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)

P02 FRONT POST - A4M02009
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)

P04 BACK POST - A4M02011
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)

P03 BACK POST - A4M02010
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)

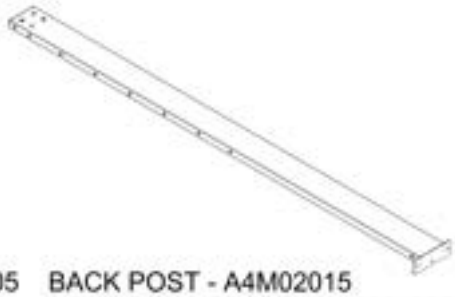

P05 BACK POST - A4M02015
(x1) 2 5/8"x7 7/8"x88 3/4" (66x200x2254)

B10 BACK PANEL - A4M02043
(x2) 1 7/16"x22 11/16"x49 5/8" (36x576.5x1261)

C01 CABINET PANEL - A4M02016
(x1) 2 3/4"x25"x38" (70x635x965)

C02 CABINET PANEL - A4M02017
(x1) 3 15/16"x25"x37" (100x635x940)

C05 CABINET PANEL - A4M02045
(x1) 2 3/16"x25"x33 7/8" (56x635x860)

C08 CABINET PANEL - A4M02048
(x1) 4 1/8"x25"x35 7/16" (105x635x900)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

C06 CABINET PANEL - A4M02046
(x1) 2 15/16"x25"x38" (75x635x965)

C09 CABINET TABLE FRAME - A4M02049
(x1) 2 3/8"x25"x38 7/16" (60x635x977)

BP01 BACK PANEL - A4M02051
(x1) 1 3/16"x14 13/16"x33 13/16" (30x377x859)

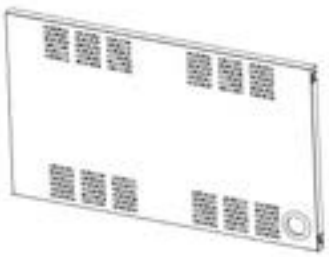

BP02 BACK PANEL - A4M03138
(x1) 1 3/16"x22 5/8"x38 7/16" (30x575x976)

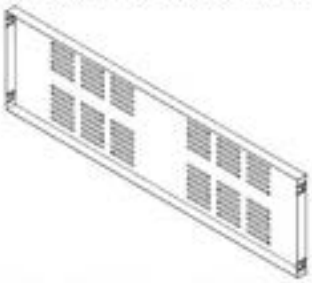

BP03 BACK PANEL - A4M02053
(x1) 1 3/16"x11 3/16"x38 3/8" (30x284x975)

BP04 BACK PANEL - A4M02054
(x1) 1 3/16"x25 13/16"x33 7/8" (30x656x860)

BP05 BACK PANEL - A4M02055
(x1) 1 3/16"x25 13/16"x33 13/16" (30x656x859)

A04 7 GALLON TRASH CAN HOLDER - A4M02074
(x1) 1 1/4"x12 9/16"x21 5/8" (32x319.5x550)

C10 COUNTERTOP - A4M02058
(x1) 1 5/8"x25 3/8"x56 5/8" (41x645x1438)

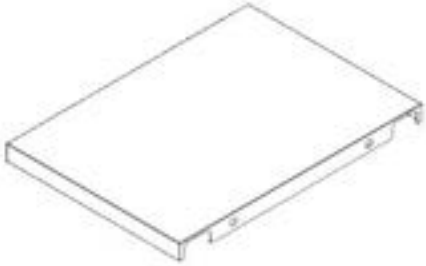

C11 COUNTERTOP - A4M02059
(x1) 1 5/8"x18 3/16"x25 3/8" (41x462x645)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

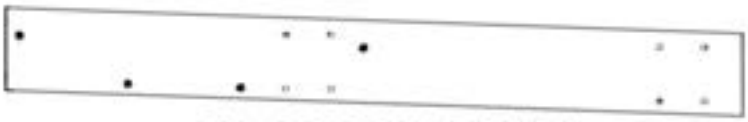

B01 SIDE BEAM - A4M02012
(x1) 36x5 1/4"x46 1/2" (36x134x1181)

B02 BACK BEAM - A4M02013
(x1) 1 7/16"x4 13/16"x61 1/4" (36x122x1556)

B03 FRONT BEAM - A4M02014
(x1) 1 7/16"x5 1/4"x62 11/16" (36x134x1593)

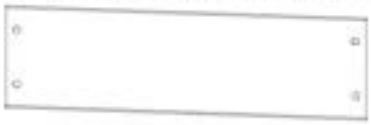

B04 SIDE BEAM - A4M02019
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)



B05 SIDE BEAM - A4M02022
(x1) 1 7/16"x5 1/4"x46 1/2" (36x134x1181)

B06 BACK BEAM - A4M02024
(x1) 1 7/16"x4 13/16"x (36x122x1556)

B07 FRONT BEAM - A4M02027
(x1) 1 7/16"x5 1/4"x62 11/16" (36x134x1593)

B08 CORBEL - A4M02041
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)

B09 CORBEL - A4M02042
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)

B11 SIDE BEAM - A4M02106
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)

J1 SPLICE BRACKET - A4M02183
(x1) 1 5/16"x5 3/16"x19 11/16" (33.2x131.2x500)



J2 SPLICEBRACKET - A4M02184
(x1) 1 5/16"x4 11/16"x19 11/16" (33.2x119.2x500)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

D01 DOOR PANEL - A4M02064
(x1) 22x12 3/4"x33 5/8" (22x324x854)

D02 DOOR PANEL - A4M02066
(x1) 7/8"x12 3/4"x33 5/8" (22x324x854)

D03 DOOR PANEL - A4M02067
(x1) 7/8"x14 5/8"x22 7/16" (22x372x570)

D04 DOOR PANEL - A4M02068
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)

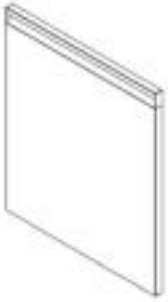

D05 DOOR PANEL - A4M02069
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)

D06 DRAWER FACE - A4M02060
(x1) 7/8"x11 1/16"x14 5/8" (22x281x372)

D07 8" DRAWER - A4M02075
(x1) 8 1/16"x12 9/16"x21 11/16" (204x319.5x551)

F03 FLOOR PANEL - A4M02202
(x2) 1 3/16"x21 3/4"x25 13/16" (30x553x655)

F11 FLOOR PANEL - A4M02209
(x1) 1 3/16"x14 13/16"x21 3/4" (30x376x553)

F12 FLOOR PANEL FOR PROPANE TANK - A4M02173
(x1) 1 3/16"x18 3/8"x21 3/4" (30x466.5x553)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

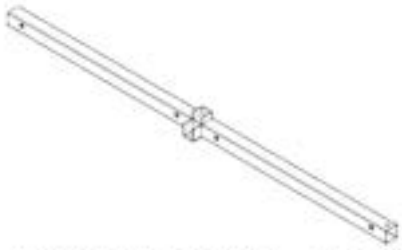

F01 BOTTOM PANEL RAIL - A4M02200
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)

F02 BOTTOM PANEL RAIL - A4M02201
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)

F04 FLOOR TUBE - A4M02203
(x2) 1 9/16"x1 9/16"x21 7/8" (40x40x555)

F05 TABLE RAIL - A4M02204
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)

F06 TABLE TUBE SUPPORT - A4M02205
(x1) 1 9/16"x1 9/16"x21 7/8" (40x40x555)

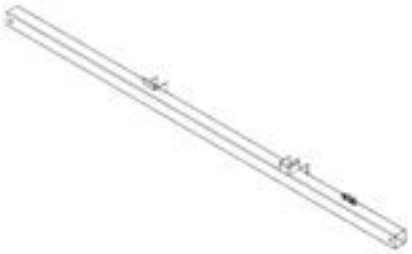

F07 BOTTOM PANEL RAIL - A4M02206
(x1) 2 3/8"x2 3/4"x54 15/16" (60x70x1395)

F08 BOTTOM PANEL RAIL - A4M02207
(x1) 2 3/8"x2 3/4"x54 15/16" (60x70x1395)

F09 BOTTOM FLOOR TUBE - A4M02210
(x1) 1 9/16"x2 3/8"x21 7/8" (40x60x555)

F13 TABLE RAIL - A4M02274
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)

R01 RAFTER - A4M02020
(x4) 3 1/8"x3 15/16"x45 1/16" (80x100x1144)

T01 TUBE - A4M02050
(x2) 1 9/16"x1 9/16"x14 7/8" (40x40x378)

T02 UPRIGHT TUBE - A4M02104
(x1) 1 9/16"x1 9/16"x22 11/16" (40x40x576)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

E01 PURLIN - A4M02021
(x2) 1 9/16"x1 3/4"x48 13/16" (40x45x1239.75)

E02 PURLIN - A4M02023
(x2) 1 9/16"x1 3/4"x73 5/8" (40x45x1870.75)

E03 PURLIN - A4M02025
(x1) 1 9/16"x1 3/4"x49 5/8" (40x45x1260)

E04 PURLIN - A4M02026
(x1) 1 9/16"x1 3/4"x58 1/16" (40x45x1475)

A4M03117 DRIP EDGE
(x1)

A4M03121 DRIP EDGE
(x1)

A4M03114 DRIP EDGE
(x2)

A4M03119 DRIP EDGE
(x1)

A4M03120 DRIP EDGE
(x1)

A4M03122 DRIP EDGE SPLICE
(x1)

A4M03118 DRIP EDGE SPLICE
(x1)

A4M03113 29GA STEEL SHEETING
(x5)

A4M03115 29GA STEEL SHEETING LEFT
(x1)

A4M03116 29GA STEEL SHEETING RIGHT
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

S01 CABINET SHELF - A4M02057
(x2) 13/16"x22 11/16"x24 1/2" (21x577x622)

A11 SHELF - A4M02105
(x1) 13/16"x18 3/8"x21 1/2" (21x467x546)

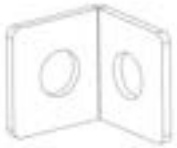

A02 BRACKET - A4M02056
(x3) 1 7/16"x1 7/16"x1 7/16" (36x36x36)

A03 BACK SHELF - A4M02072
(x2) 2 7/16"x7 15/16"x23 3/4" (61x201x603)

A12 PROPANE TANK HOLDER - A4M02028
(x1) 1 5/8"x11 13/16"x14 9/16" (41x300x370)

A06 ADJUSTABLE SHELF TAB - A4M02077
(x8) 11/16"x7/8"x1 3/16" (17x22x31)

A01 BRACKET - A4M02018
(x6) 1"x1 5/16"x5 1/16" (25x33.2x128)

F10 FLOOR PANEL - A4M02208
(x1) 1 3/16"x18 3/8"x21 3/4" (30x467x553)

A10 ANGLE BRACKET - A4M02276
(x1) 13/16"x5 15/16"x9 13/16" (20x151x250)

A07 ANGLE BRACKET - A4M02277
(x1) 13/16"x5 15/16"x9 13/16" (20x151x250)

A05 HOSE CLAMP - A4M02258
(x1) 1 3/16"x1 9/16"x 3 1/8" (30x40x80)

T03 UPRIGHT TUBE WITH MATCH HOLDER - A4M02404
(x1) 1 9/16"x1 9/16"x22 11/16" (40x40x576)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

A4M02070 (x8) CABINET HINGE

A6P00530 (x2) 2-WAY SQUARE PLUG

A6P00559 (x2) ADJUSTABLE FOOT

A4M02078 (x28) WOOD GRAIN HOLE COVER

A4M01352 (x14) HOLE COVER

A6P00679 (x8) ADHESIVE EVA TAPE

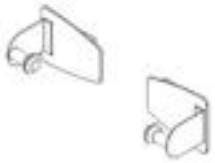

A4M02290 (x1) MAGNETIC PAPER TOWEL HOLDER

9205413 (x1) ELECTRICAL ENCLOSURE

9240025 (x1) OUTDOOR KITCHEN GRILL KIT

9230132 (x1) OUTDOOR KITCHEN FRIDGE

OWNER'S MANUAL - PARTS IDENTIFICATION

HARDWARE COMPONENTS (NOT TO SCALE)

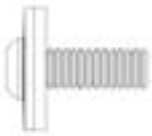

H101202 (x188) TORX PAN HEAD 1/4-20x3/4" ASSY

H101132 (x32) TORX SOCKET SCREW SHORT 1/4-20

H101103 (x52) TORX SOCKET SCREW 1/4-20

H100120 (x11) CONCRETE ANCHOR



H100401 (x4) BOLT WH 1/4x1/2 BLK

H101185 (x48) PHILLIPS FLAT HEAD 8-32x1/2

H100147 (x1) TORX BIT T-30

H100114 (x1) TORX WRENCH T-30

H101133 (x4) WASHER FLAT 7x14 BLK

H100630 (x11) WASHER FLAT 8x19 BLK

H101116 (x20) SCREW SELF TAPPING 1/4x1 BLK

H101117 (x42) SCREW WOODGRIP 10x3/4 BLK

H100653 (x4) NUT LOCK 1/4 BLK



H101114 (x1) RIGHT ANGLE DRILL ADAPTER

H101100 (x1) MAGNETIC DRIVER

H101106 (x1) SOCKET DRIVER

PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the parts and hardware.

METAL PARTS:

- Organize metal parts by the three-digit, alpha-numeric number stamped on each part (ex. P01).
- If there are multiple parts with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the parts or on the end of the parts.
- Allow yourself plenty of room - the parts can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY PART NUMBER.

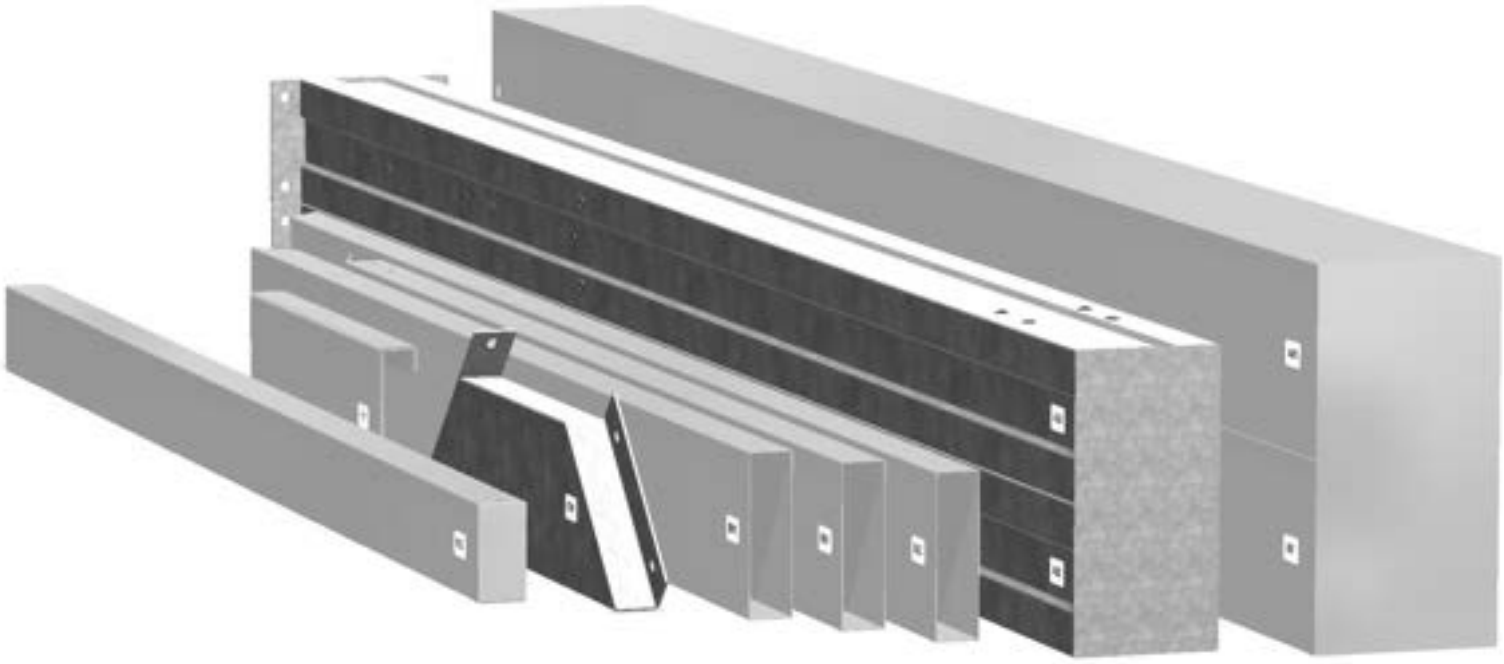

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED

Cordless Drill or
Electric Drill

Drill Attachments:
Phillips Head

1/8", 3/16", 3/8" &
7/16" Drill Bits

Phillips Screw Driver



Open End Wrench
7/16"

3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets 1/2" & 7/16"
Deep Sockets

Claw Hammer

Rubber Mallet -
Optional

Tape Measure

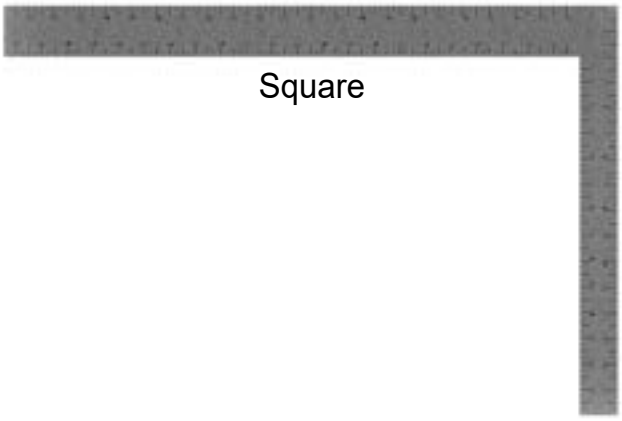

Square

Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.

1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)

STEP 1 - FLOOR PANEL ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

F01 (x1) BOTTOM PANEL RAIL - A4M02200
2 3/8"x2 3/4"x53 5/16" (60x70x1354)

F02 (x1) BOTTOM PANEL RAIL - A4M02201
2 3/8"x2 3/4"x53 5/16" (60x70x1354)

F04 (x1) FLOOR TUBE - A4M02203
1 9/16"x1 9/16"x21 7/8" (40x40x555)

FOR EASE OF ASSEMBLY, WE RECOMMEND
USING SAW HORSES FOR STEPS 1-6

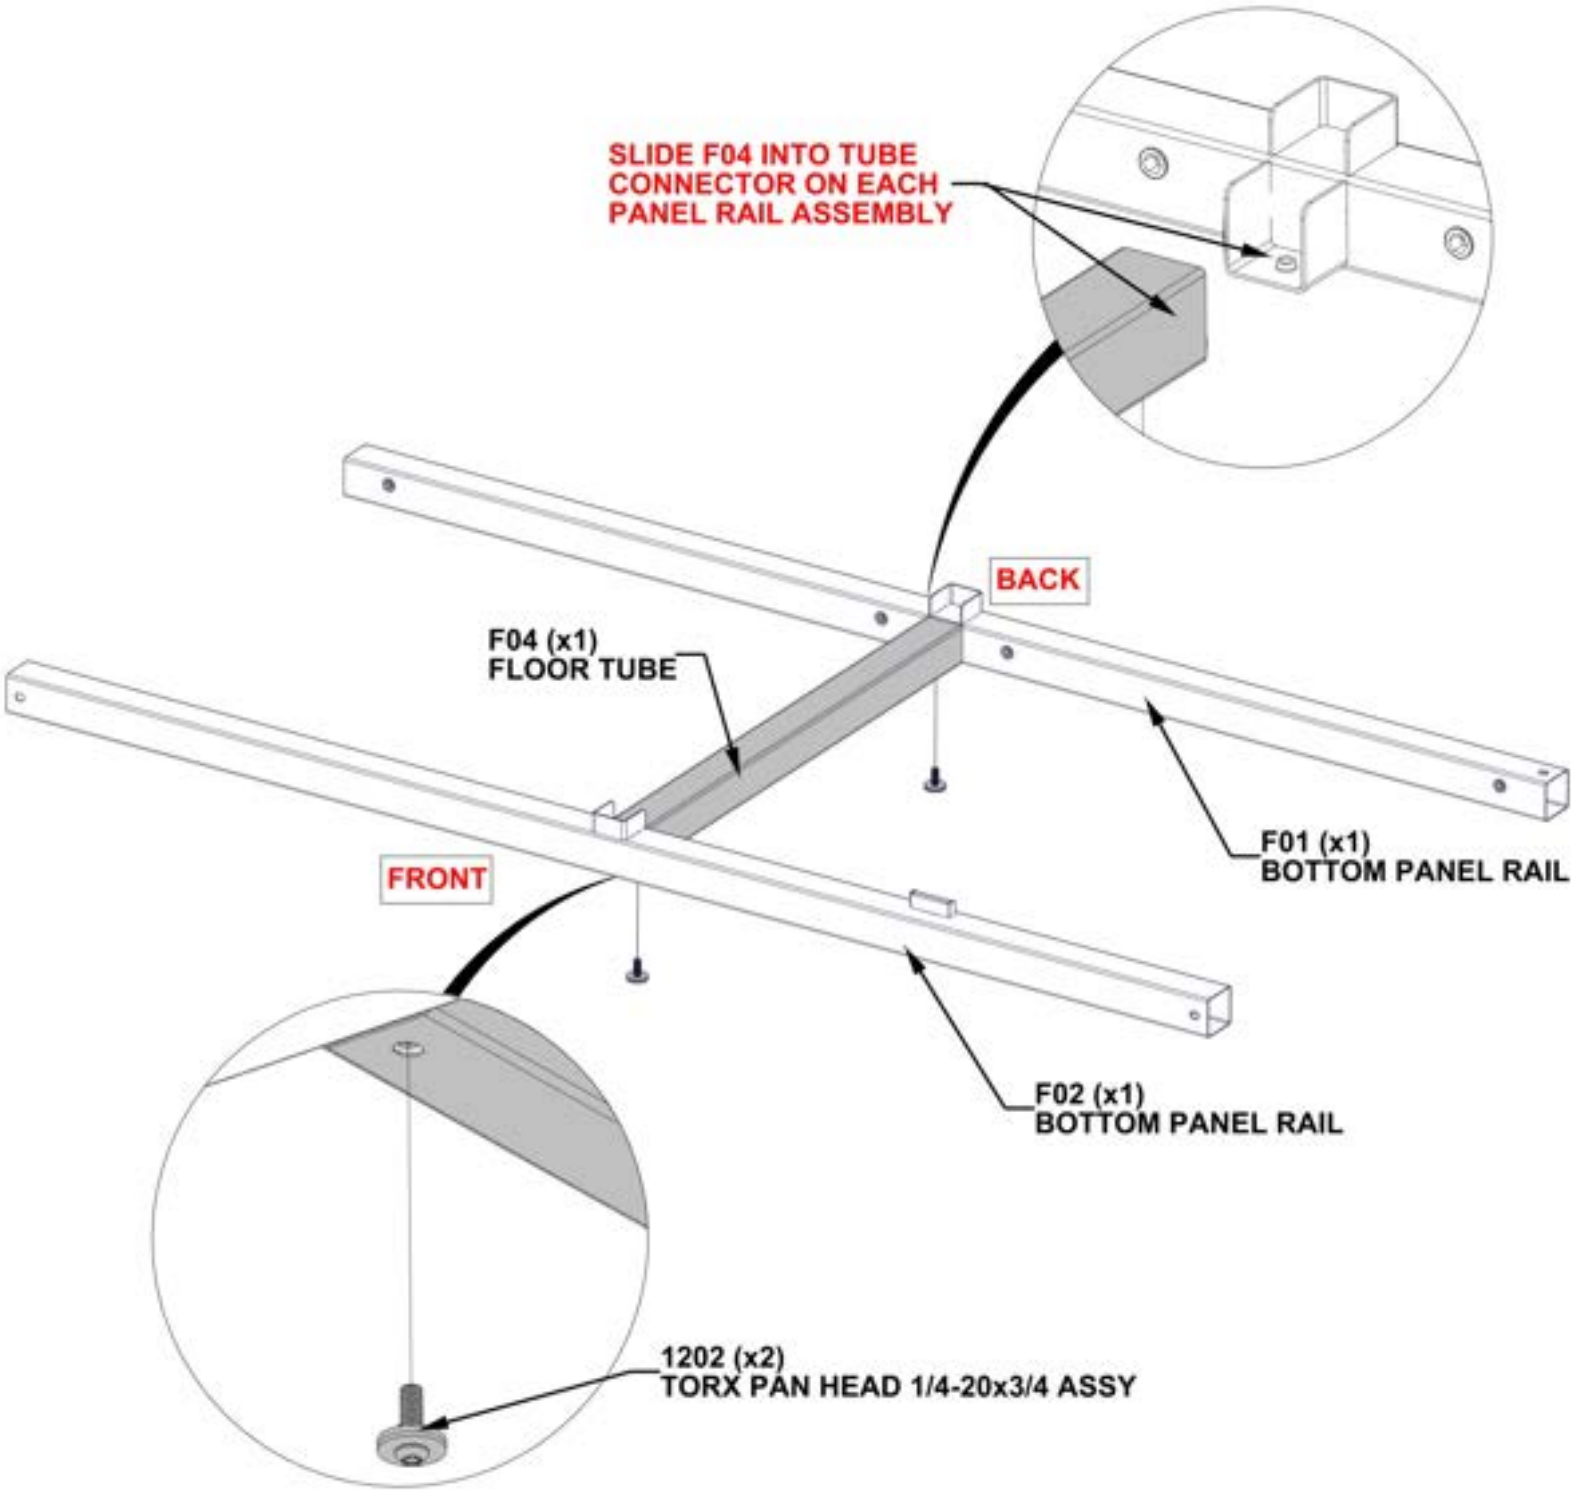

STEP 2 - FLOOR PANEL ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

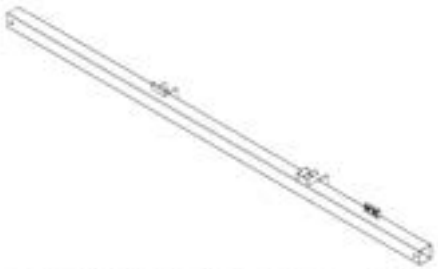

F07 BOTTOM PANEL RAIL - A4M02206
(x1) 2 3/8"x2 3/4"x54 15/16" (60x70x1395)

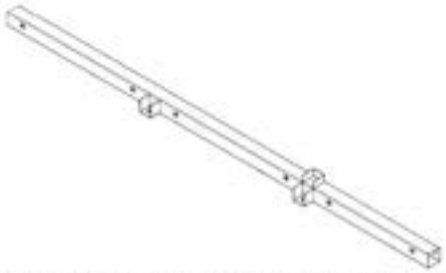

F08 BOTTOM PANEL RAIL - A4M02207
(x1) 2 3/8"x2 3/4"x54 15/16" (60x70x1395)

F04 FLOOR TUBE - A4M02203
(x1) 1 9/16"x1 9/16"x21 7/8" (40x40x555)

F09 BOTTOM FLOOR TUBE - A4M02210
(x1) 1 9/16"x2 3/8"x21 7/8" (40x60x555)

SLIDE F04 AND F09 INTO TUBE CONNECTORS ON EACH PANEL RAIL ASSEMBLY

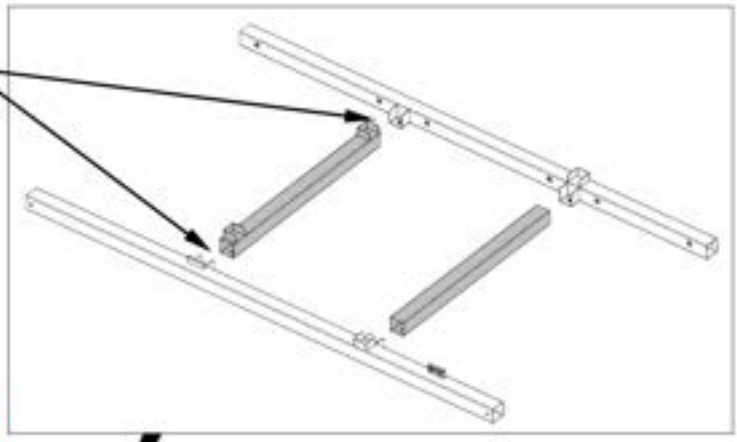

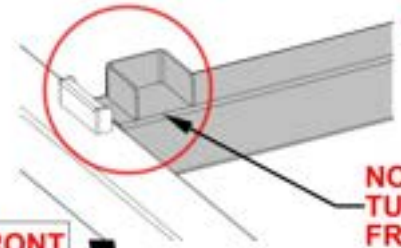

NOTE: ORIENTATION OF F09. TUBE CONNECTOR FURTHEST FROM END IS FRONT OF TUBE.

FRONT

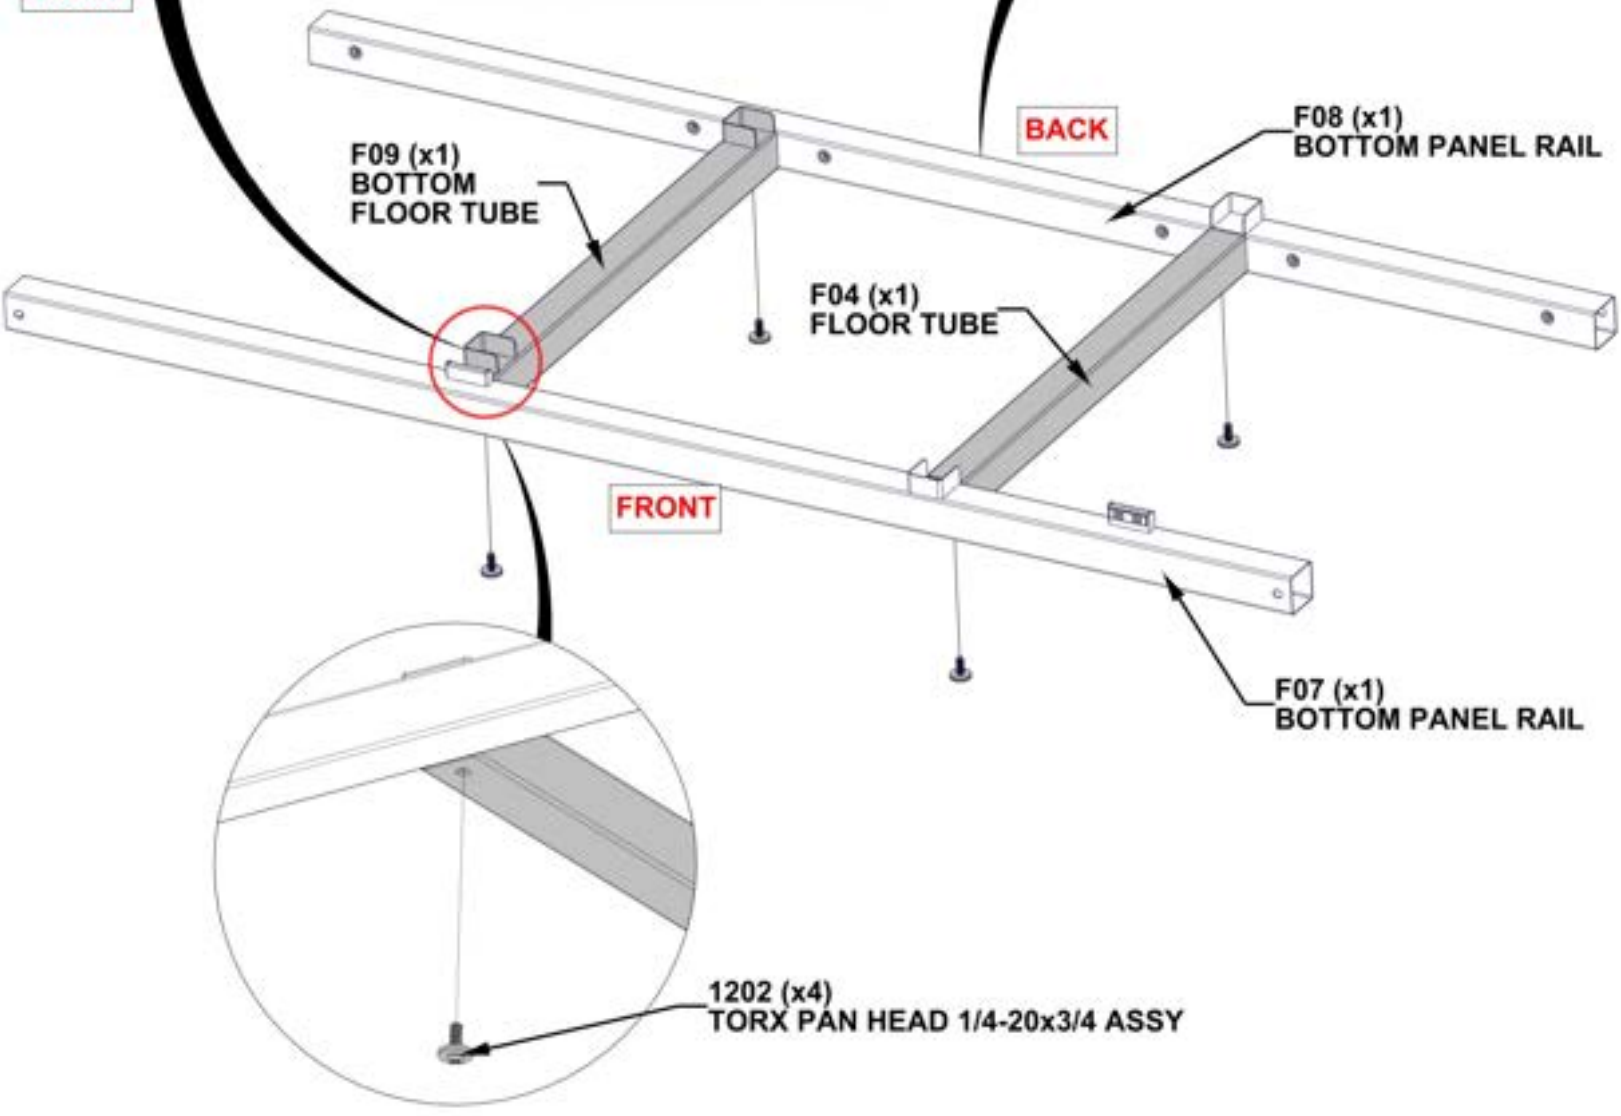

STEP 3 - COUNTERTOP FRAME ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

F13 TABLE RAIL - A4M02274
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)

F05 TABLE RAIL - A4M02204
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)

F06 TABLE TUBE SUPPORT - A4M02205
(x1) 1 9/16"x1 9/16"x21 7/8" (40x40x555)

ORIENTATION OF F06 SUPPORT IS CRITICAL TO ASSEMBLY.

SET FRAME ASSEMBLY TO THE SIDE FOR LATER USE.

SLIDE F06 INTO TUBE CONNECTOR ON EACH TABLE RAIL ASSEMBLY

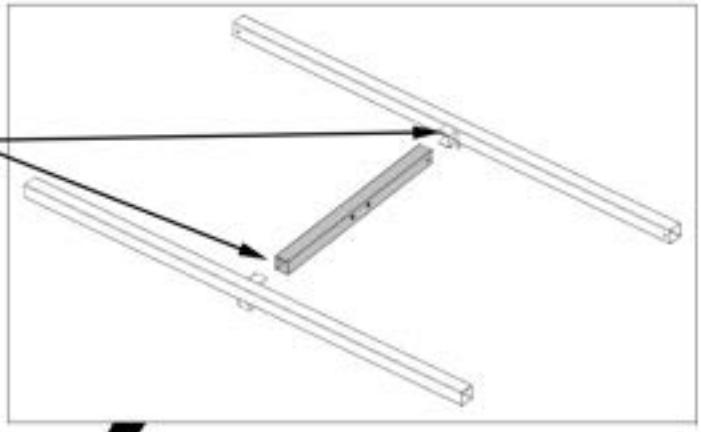

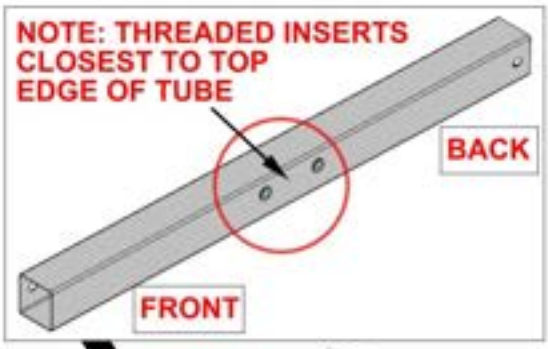

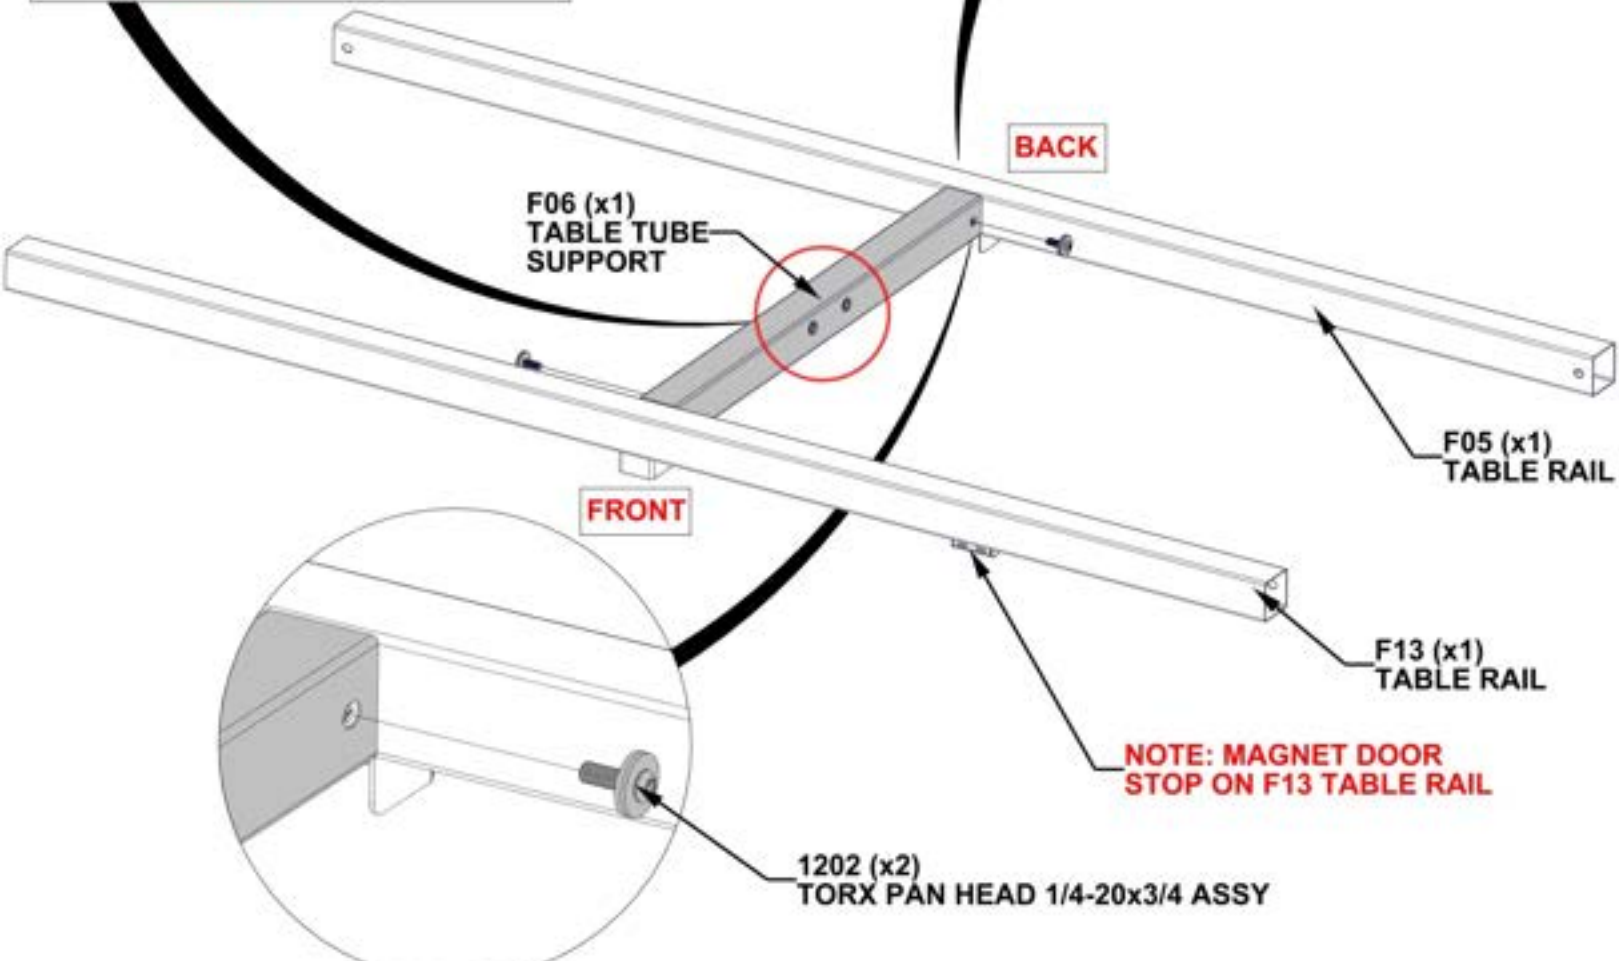

STEP 4 - CABINET PANEL ASSEMBLY

C02 (x1) CABINET PANEL - A4M02017
3 15/16"x25"x37" (100x635x940)

A6P00559 (x2) ADJUSTABLE FOOT

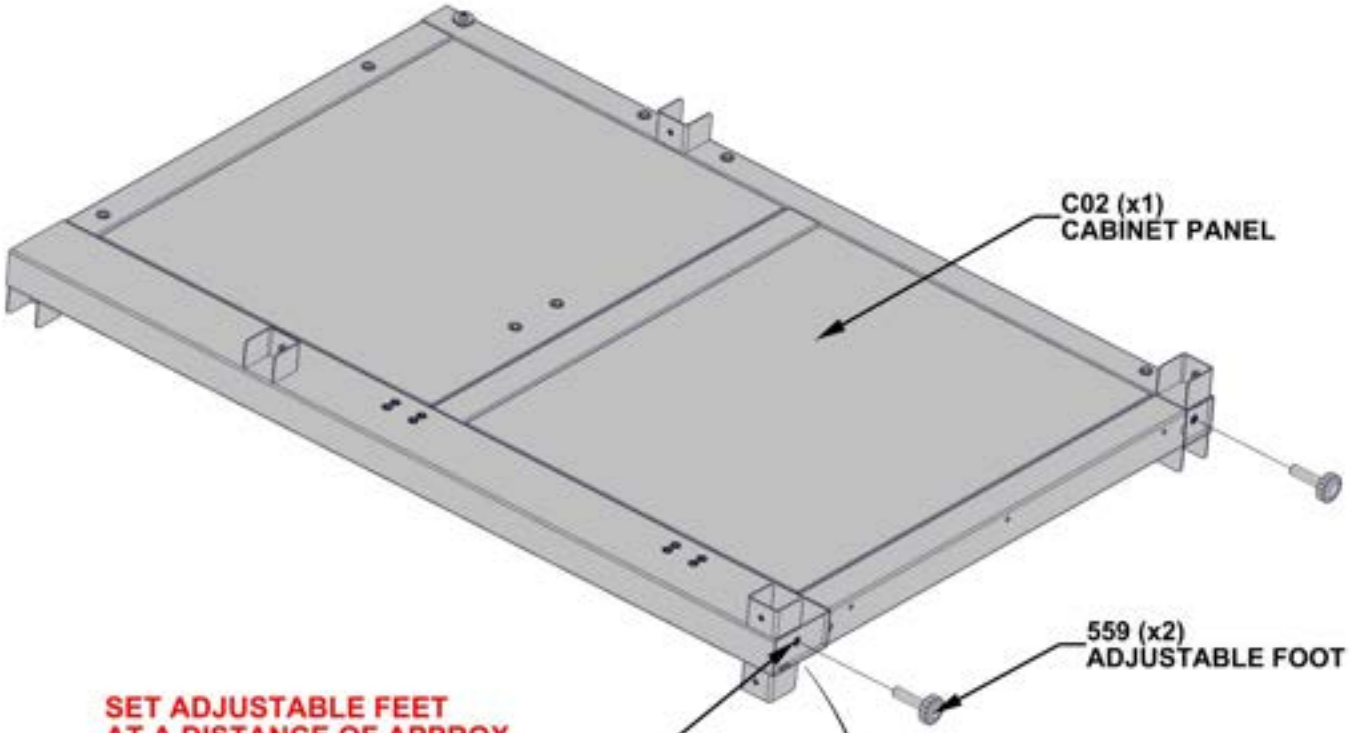

SET ADJUSTABLE FEET AT A DISTANCE OF APPROX. 1" [25.4 mm]. DEPENDING ON SURFACE, FEET CAN BE SCREWED IN OR OUT AS NEEDED.

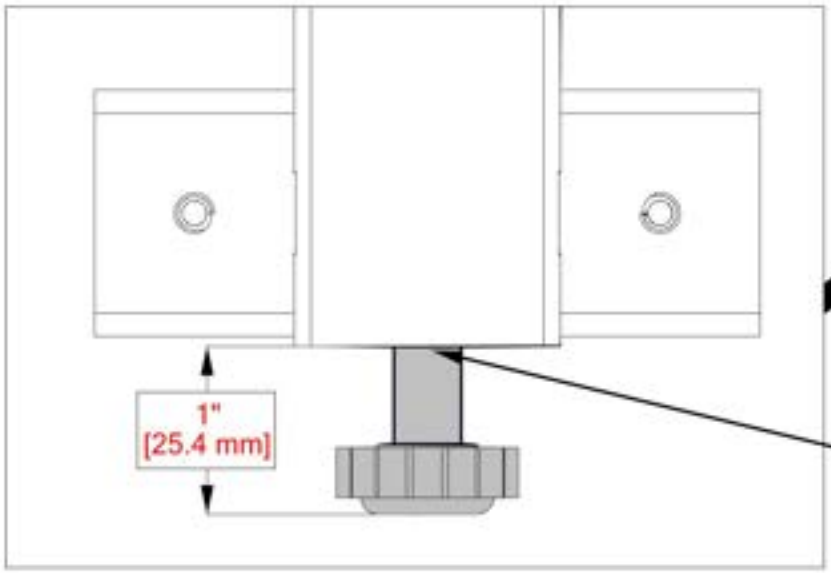

SCREW ADJUSTABLE FEET INTO THREADS LOCATED AT THE BOTTOM OF THE C02 CABINET PANEL

STEP 5A - KITCHEN CABINET ASSEMBLY

FLOOR PANEL ASSEMBLY
STEP 1

CABINET PANEL WITH FEET
STEP 4

TIP:
- RUBBER MALLET MAY NEED TO BE USED TO TAP PANELS IN PLACE

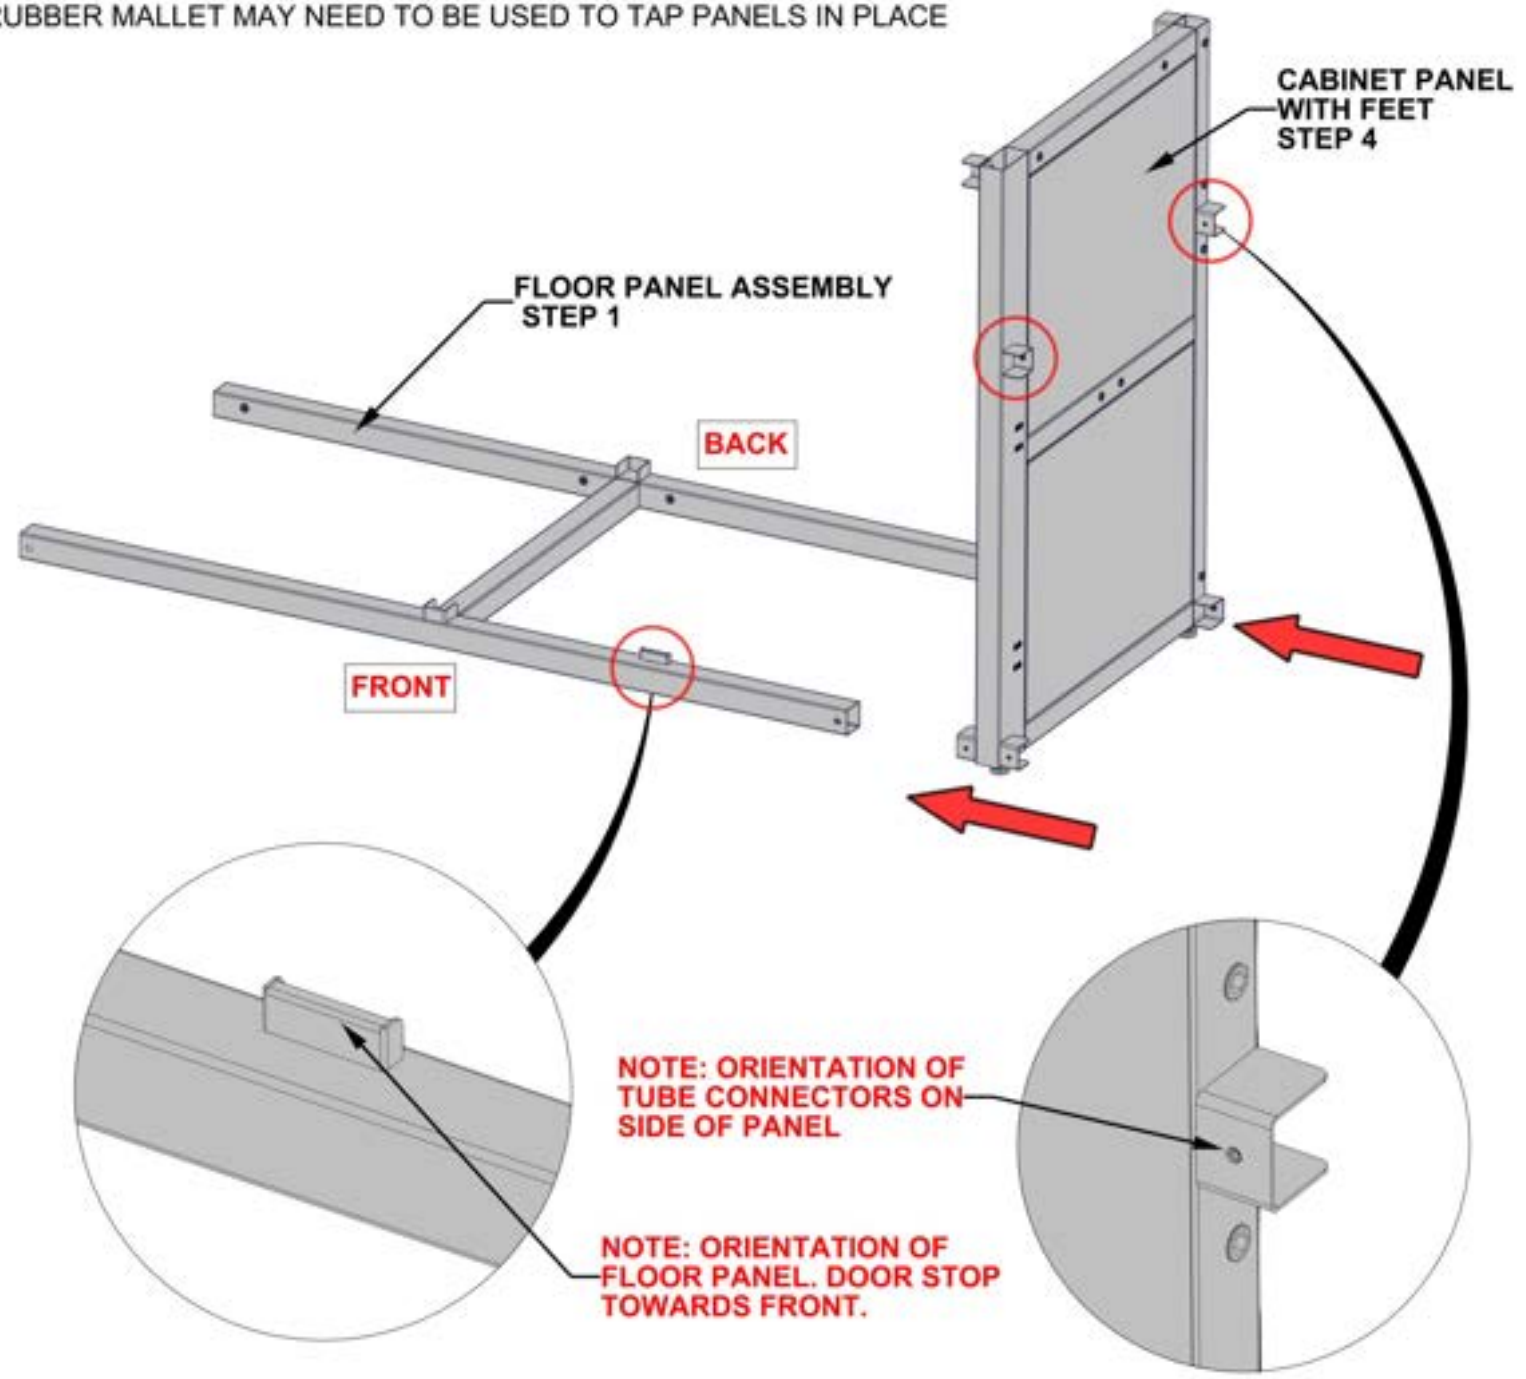

STEP 5B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

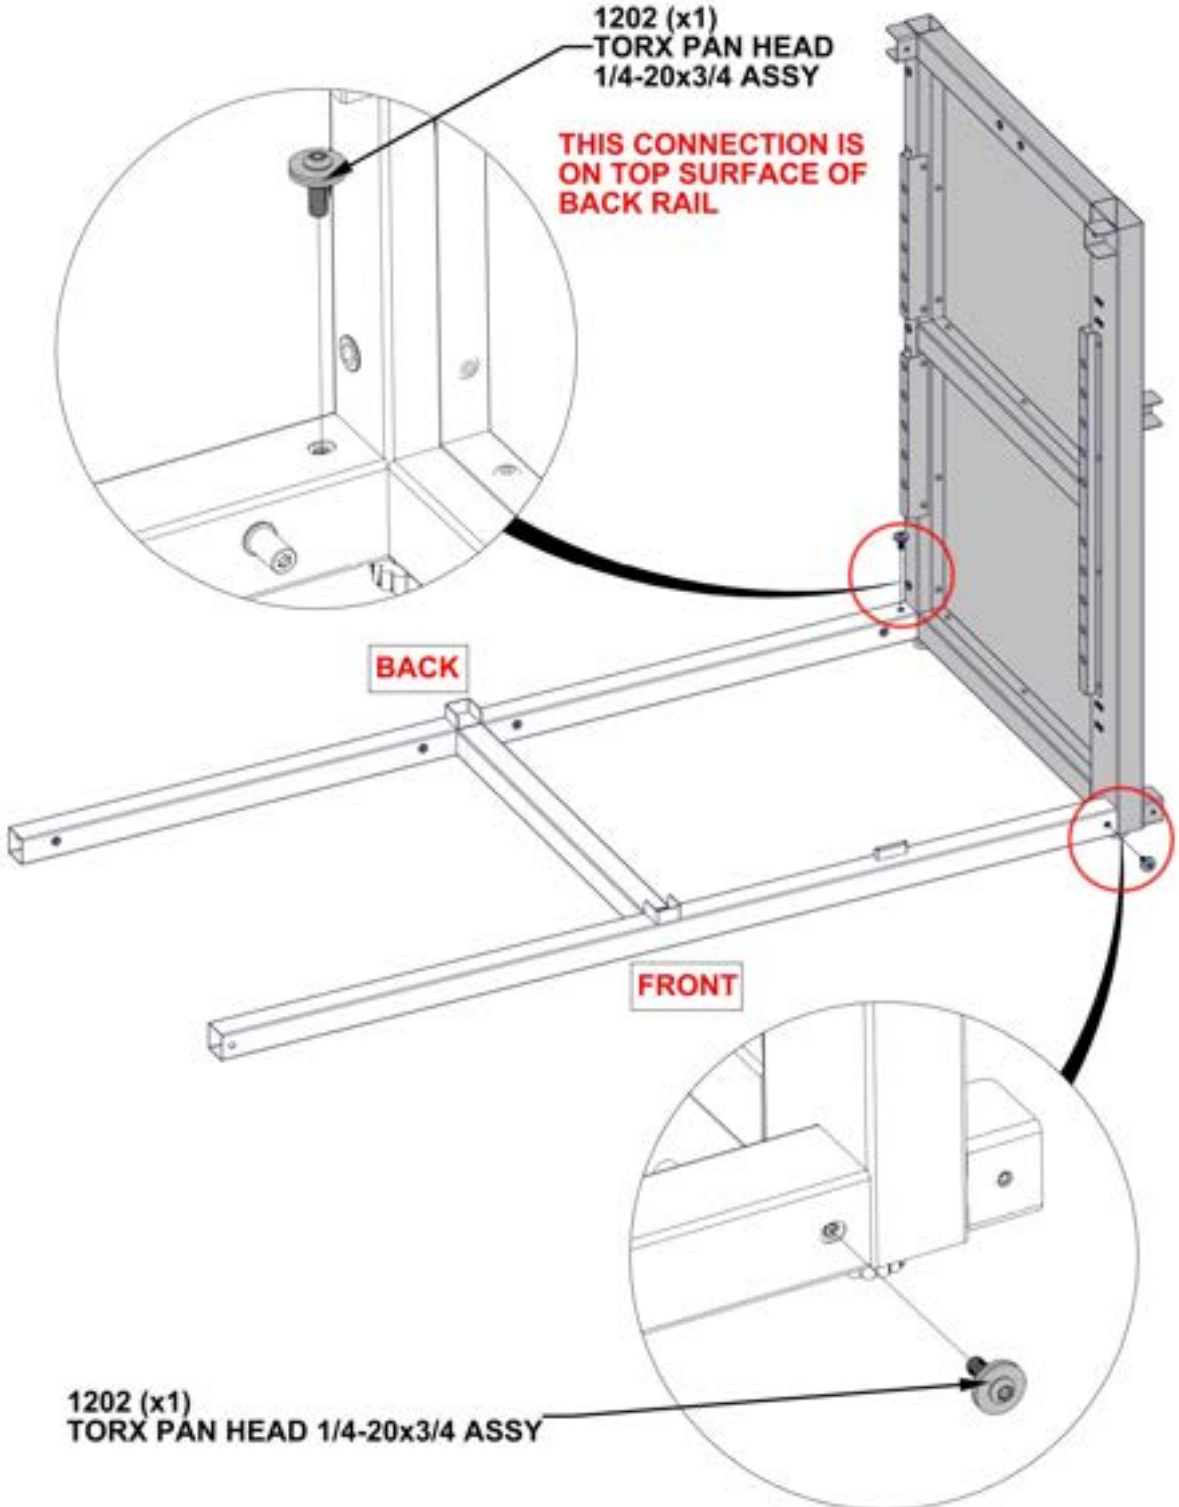

STEP 6 - KITCHEN CABINET ASSEMBLY

C05 CABINET PANEL - A4M02045
(x1) 2 3/16"x25"x33 7/8" (56x635x860)

PLACE C05 PANEL IN PLACE, ALIGNING TUBES WITH TUBE CONNECTORS.

THREADED INSERTS ON SIDE OF PANEL TOWARDS THE FRONT.

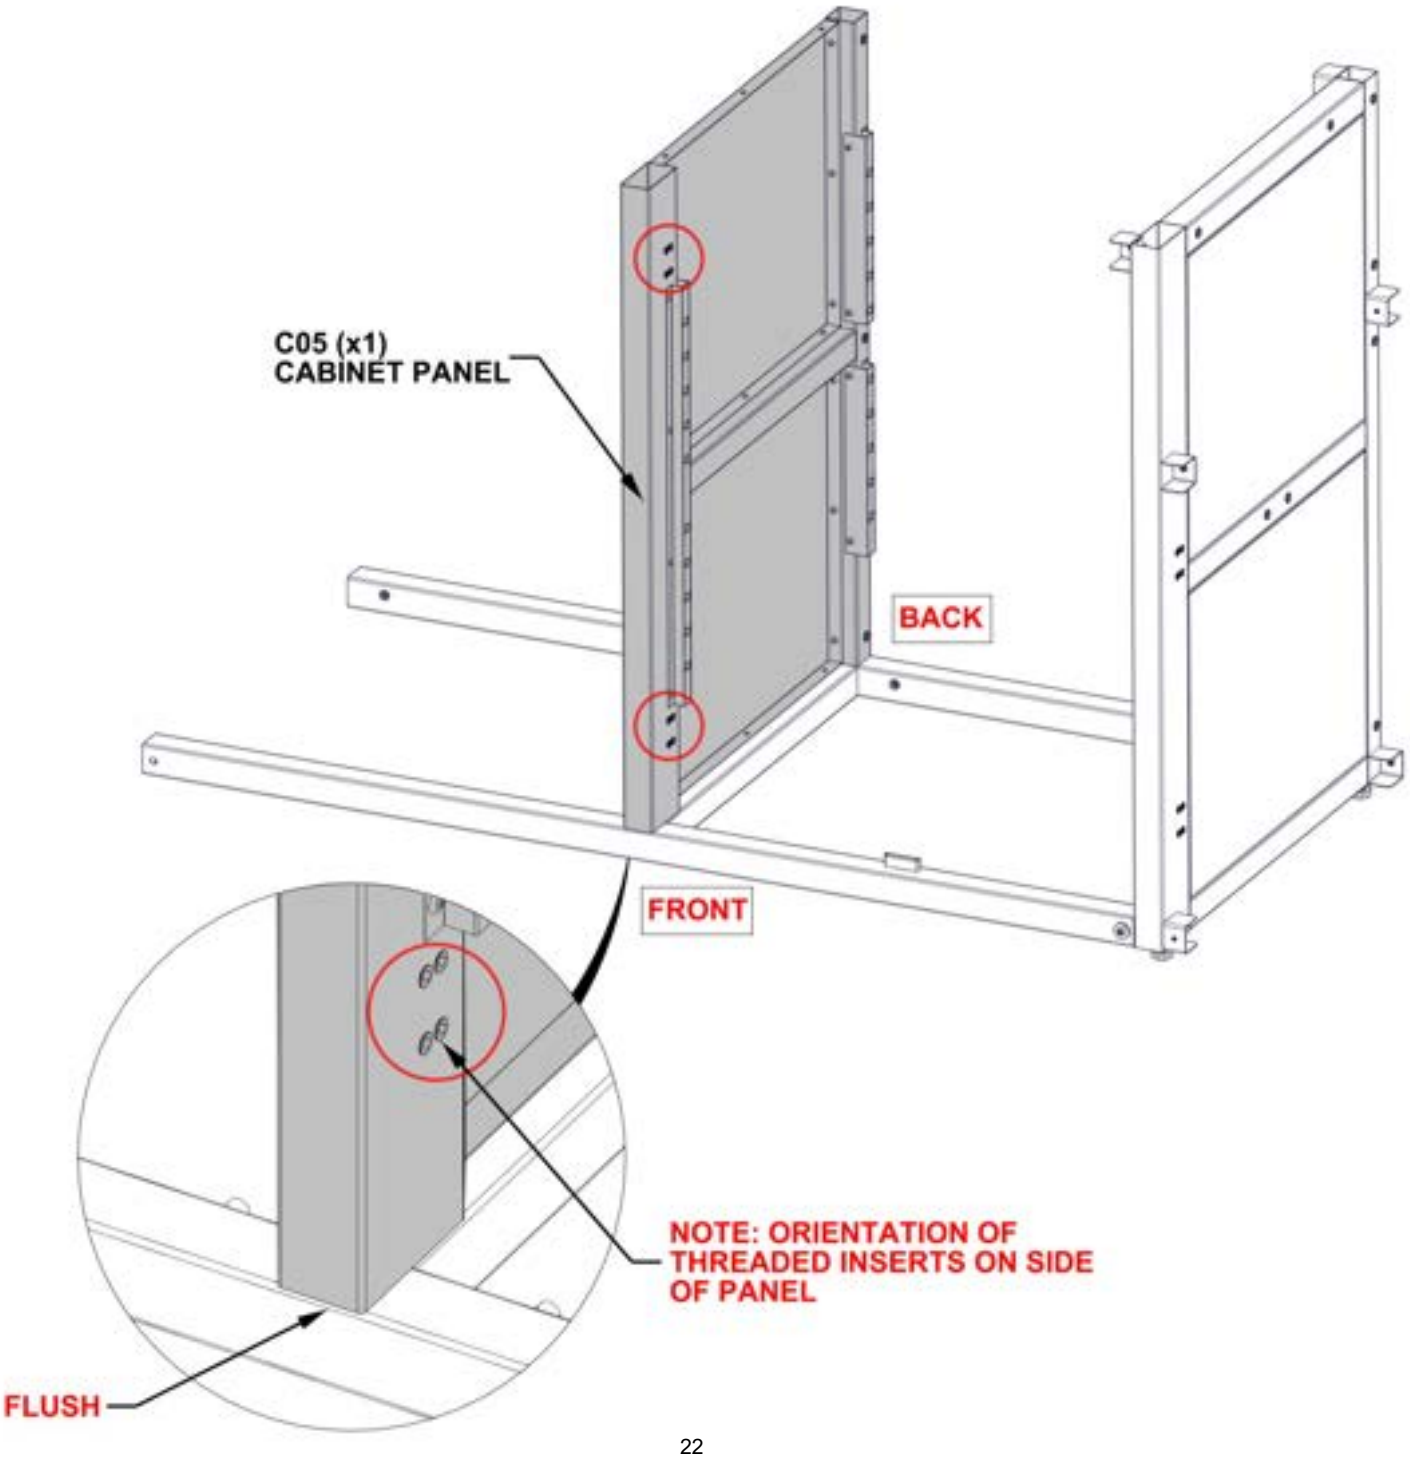

STEP 7A - KITCHEN CABINET ASSEMBLY

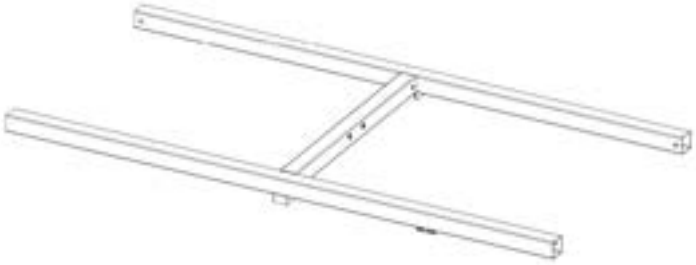

COUNTERTOP FRAME
ASSEMBLY STEP 3

SLIDE COUNTERTOP FRAME ASSEMBLY UNTIL TUBES ALIGN WITH TUBE CONNECTORS ON CABINET PANEL C02

TOP OF C05 CABINET PANEL WILL HAVE TO BE MOVED OUTWARD TO ALLOW COUNTERTOP FRAME TO SLIDE INTO PLACE.

TIP:
- RUBBER MALLET MAY NEED TO BE USED TO TAP PANELS IN PLACE

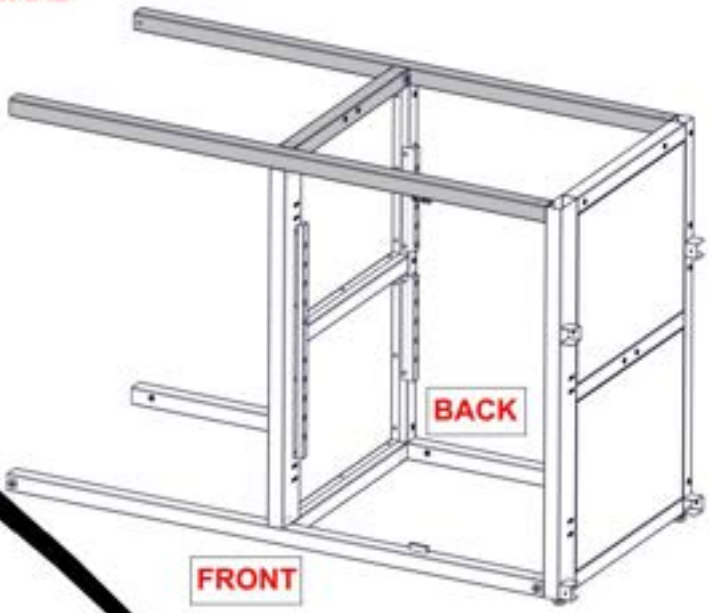

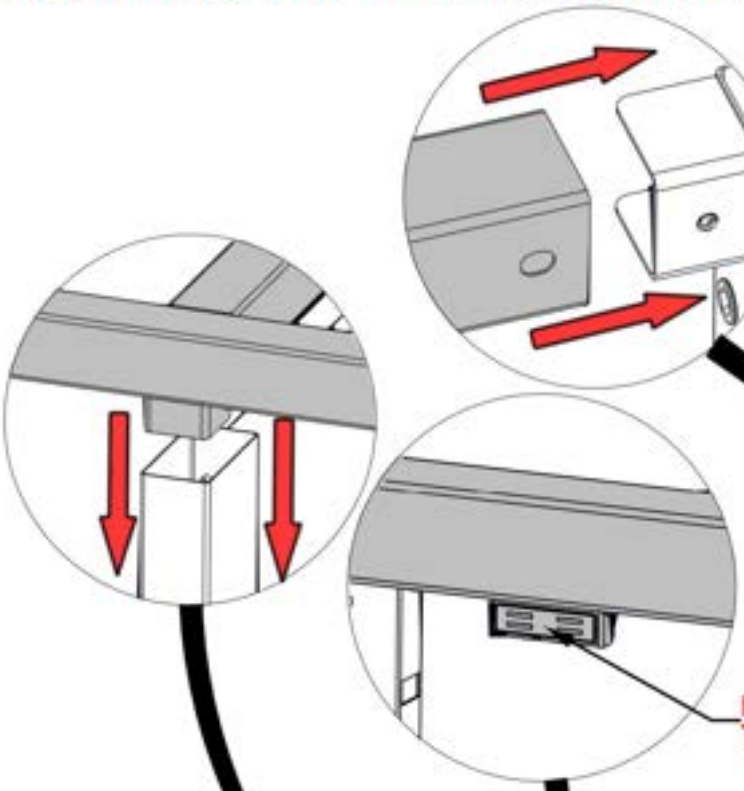

NOTE: DOOR STOP TOWARD FRONT

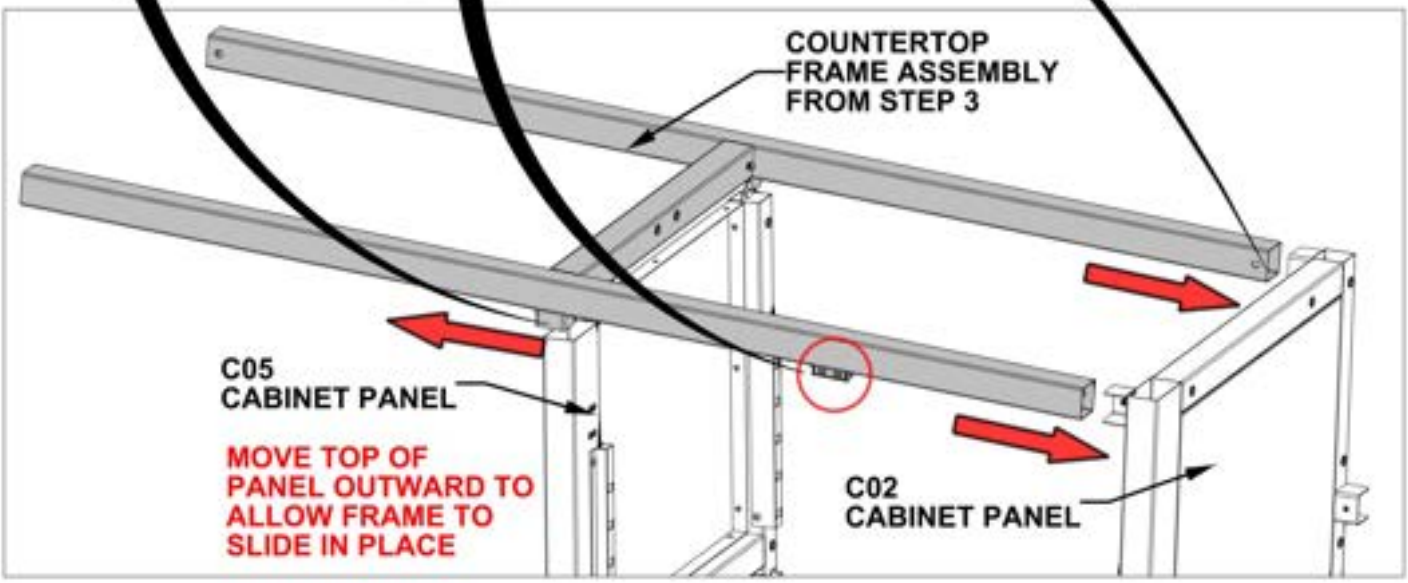

STEP 7B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

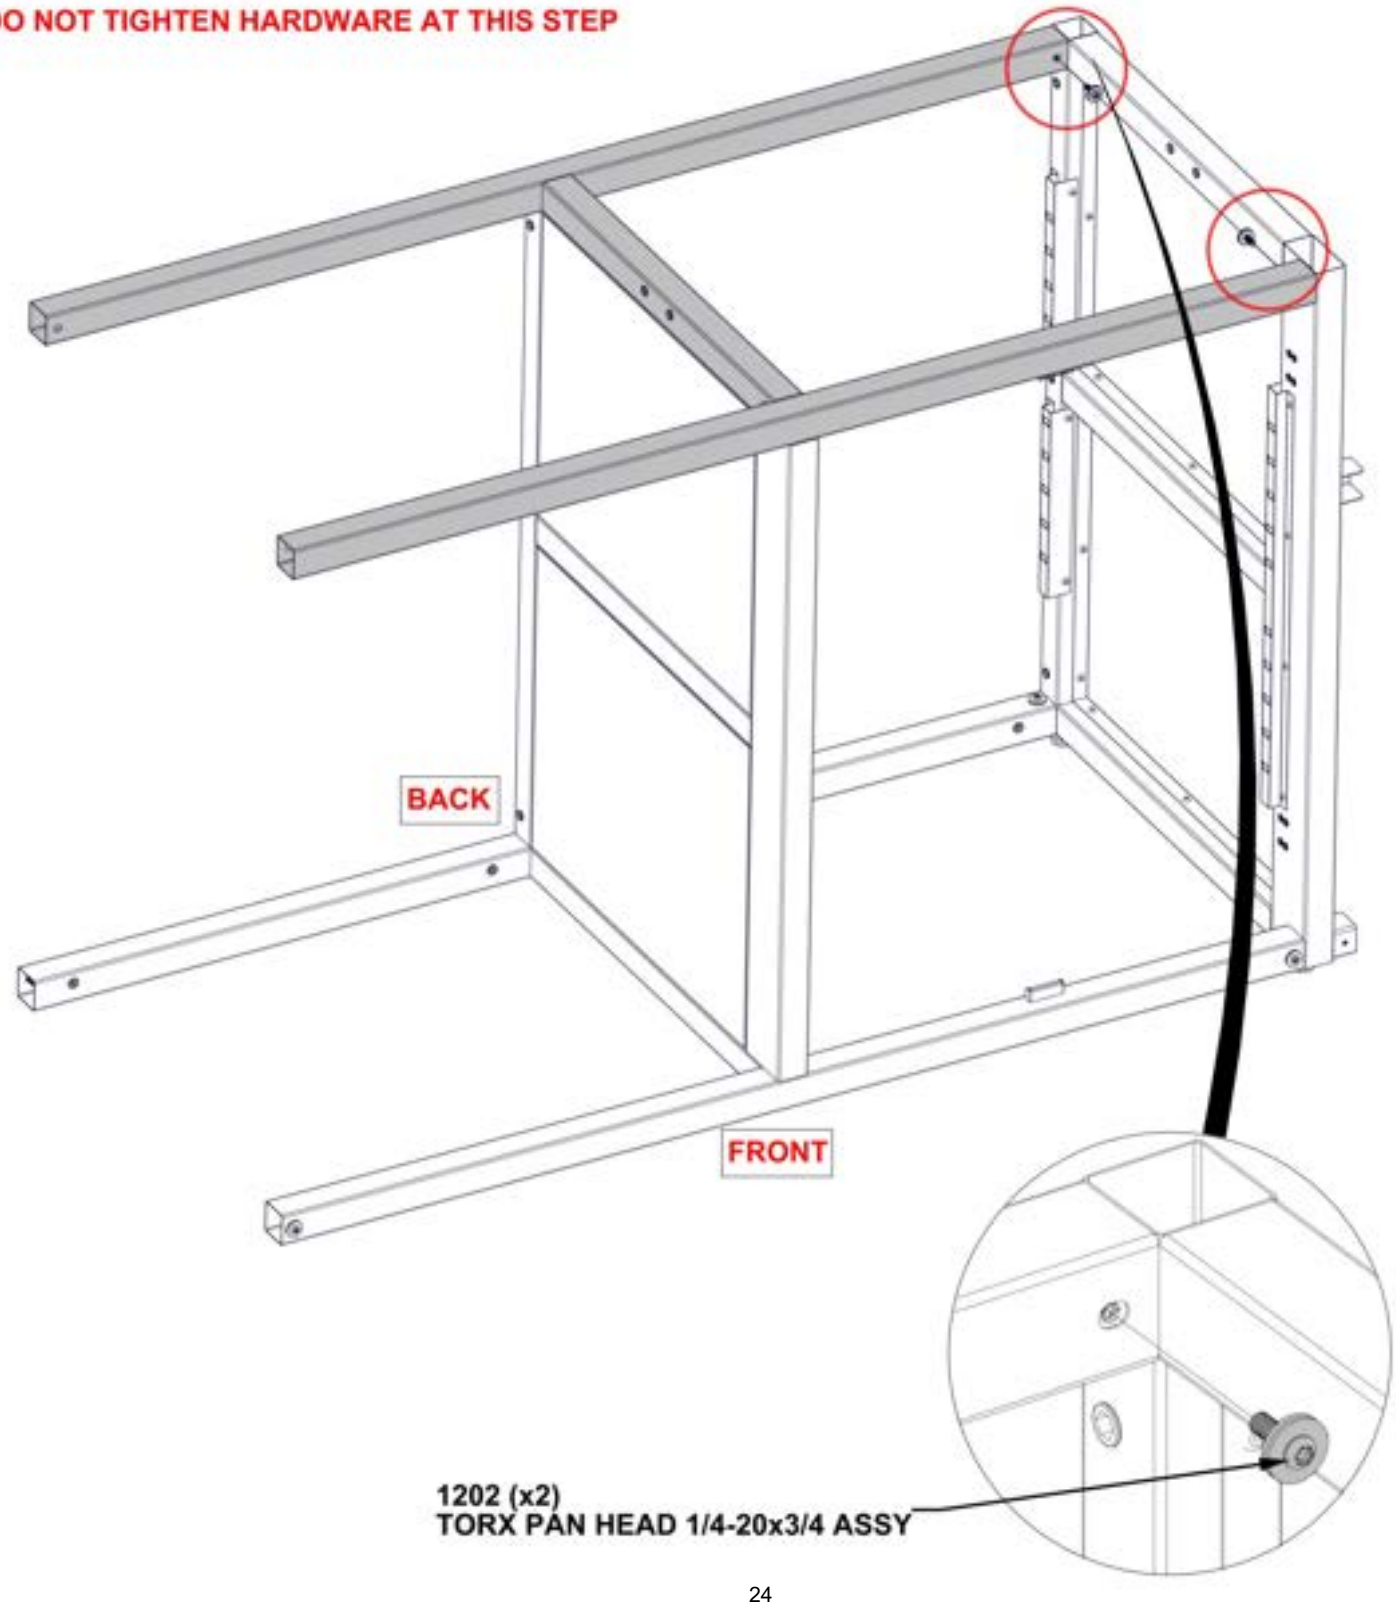

STEP 8A - KITCHEN CABINET ASSEMBLY

C01 CABINET PANEL - A4M02016
(x1) 2 3/4"x25"x38" (70x635x965)

ALIGN TUBE CONNECTORS ON C01 PANEL WITH TUBES ON TOP RAILS AND BOTTOM RAILS

TIP:
- RUBBER MALLET MAY NEED TO BE USED TO TAP PANELS IN PLACE

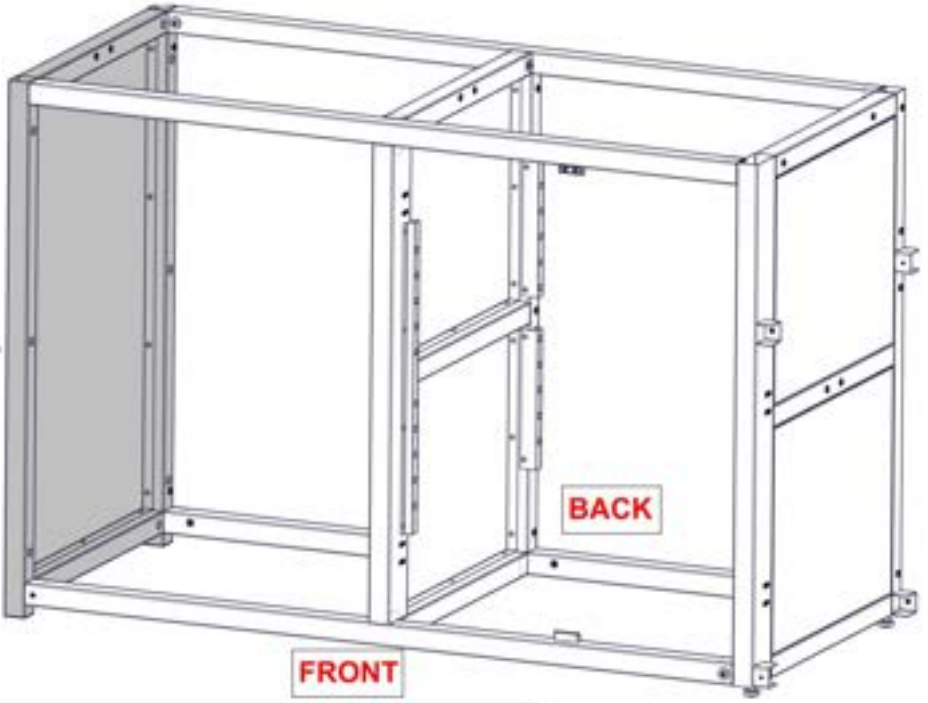

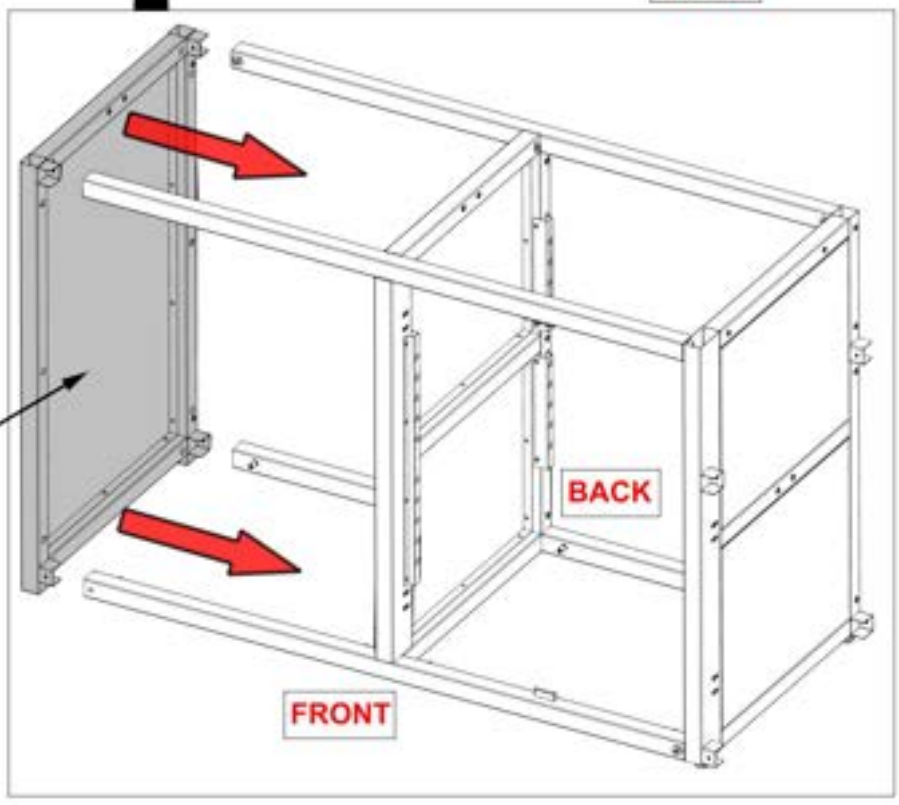

STEP 8B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

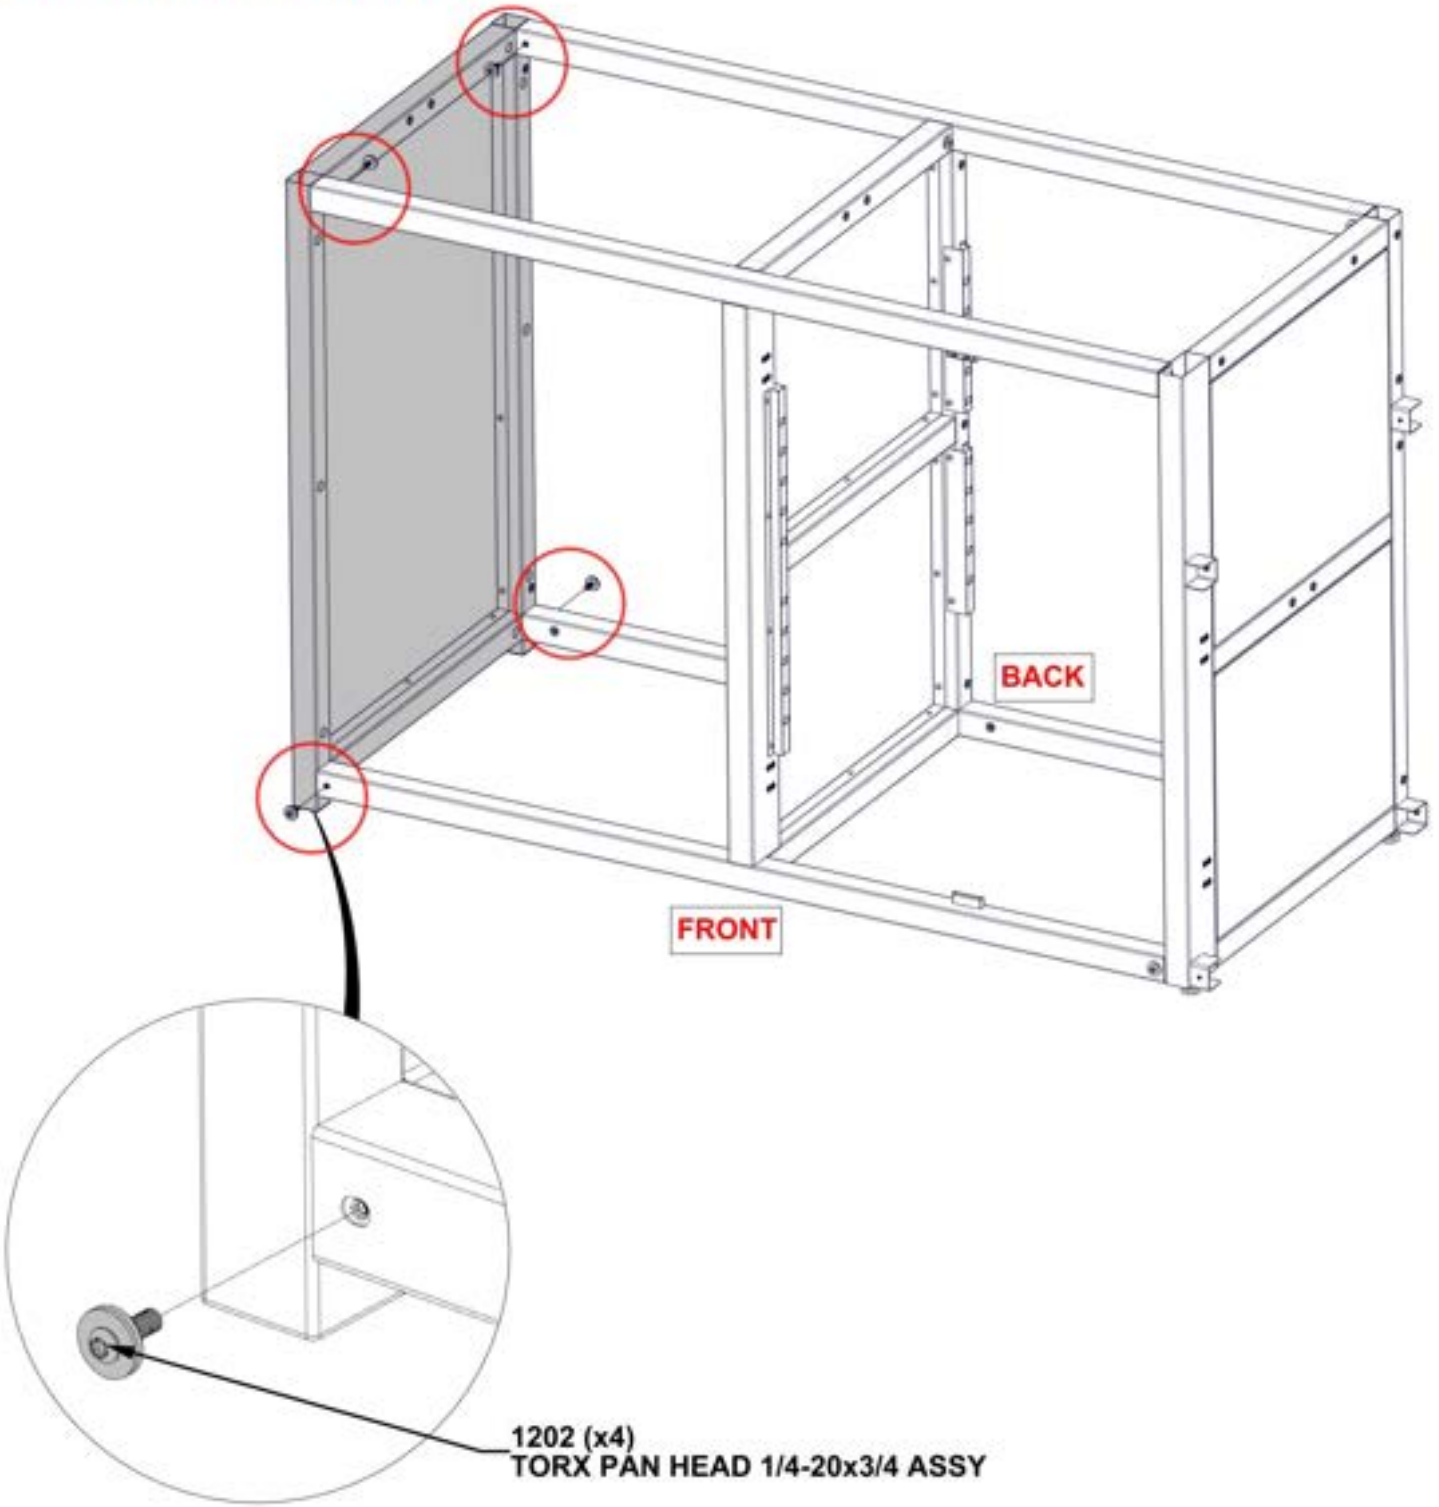

STEP 9A - KITCHEN CABINET ASSEMBLY

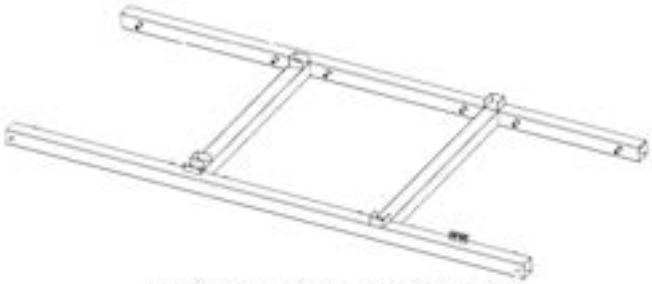

FLOOR PANEL ASSEMBLY
STEP 2

SLIDE FLOOR PANEL ASSEMBLY UNTIL TUBES ALIGN WITH TUBE CONNECTORS ON CABINET PANEL C02

MAKE SURE ALL DOOR STOPS ARE TOWARD THE FRONT

TIP:
- RUBBER MALLET MAY NEED TO BE USED TO TAP PANELS IN PLACE

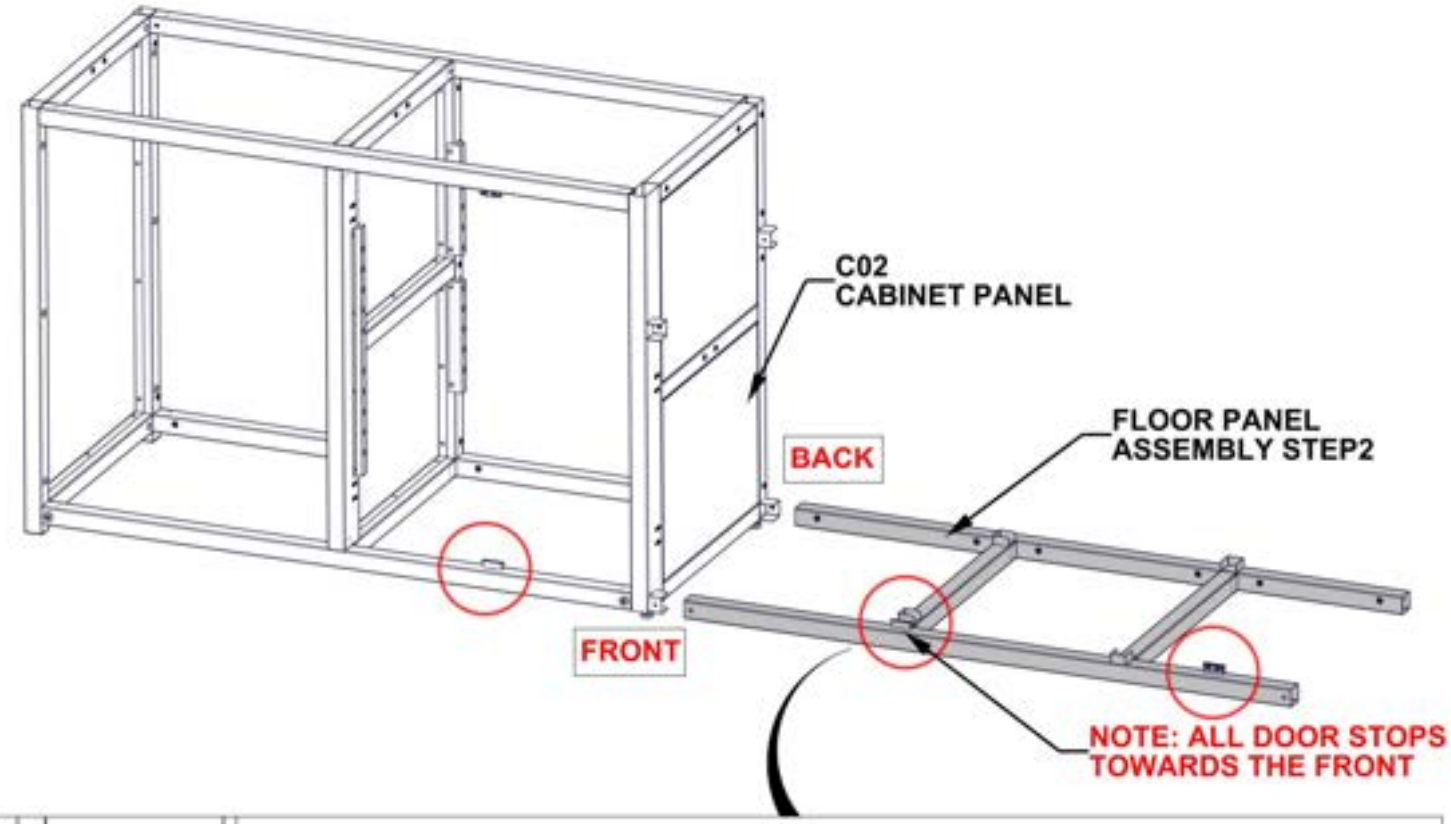

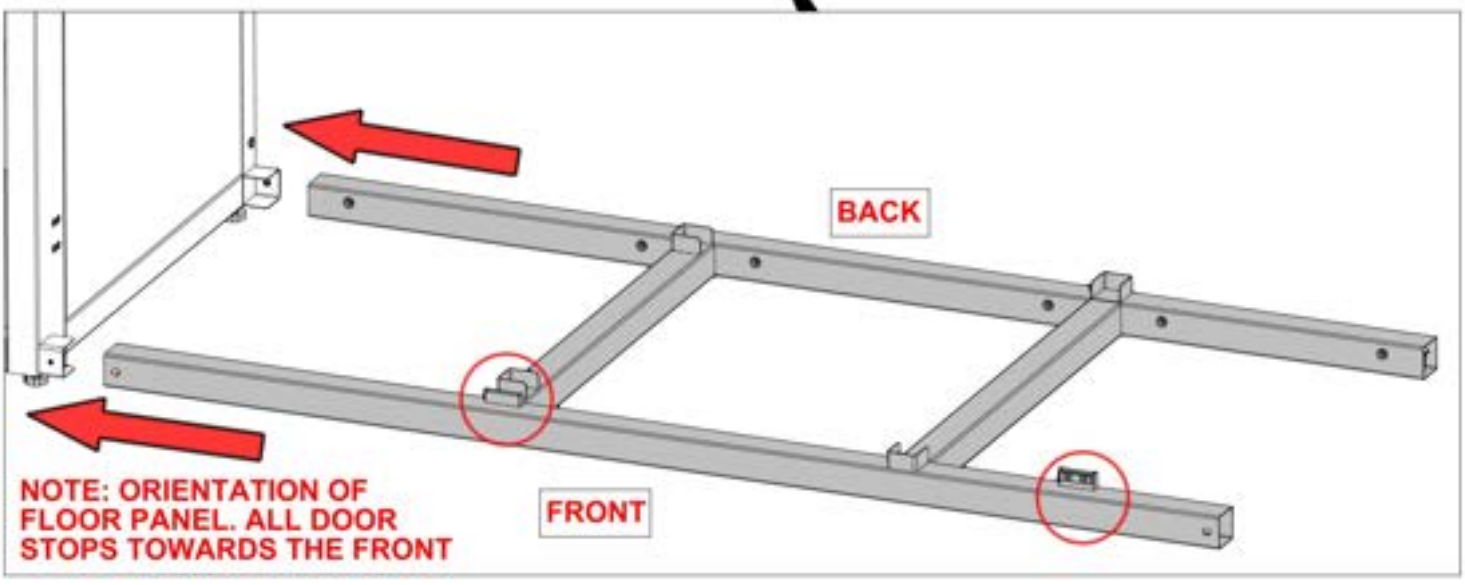

STEP 9B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

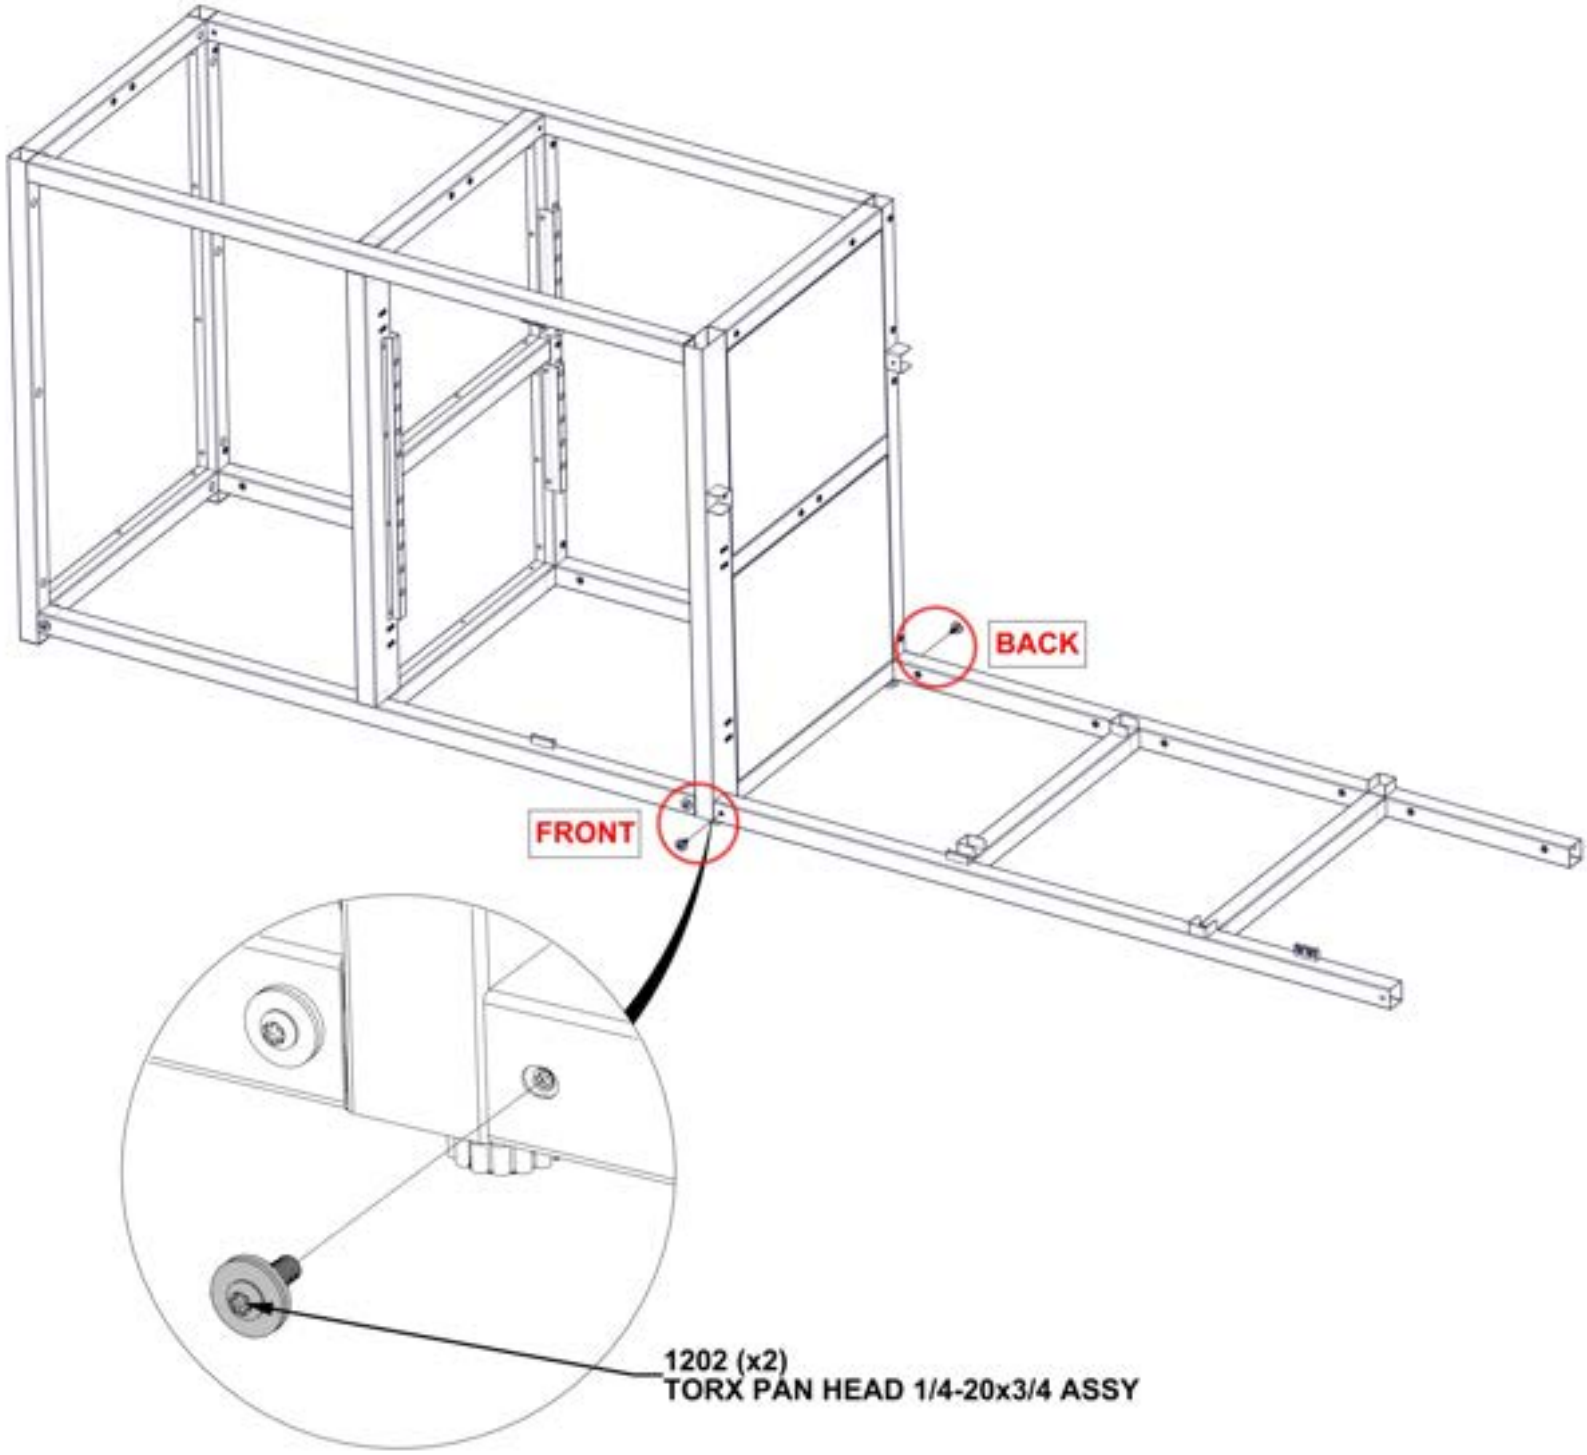

STEP 10 - KITCHEN CABINET ASSEMBLY

T02 UPRIGHT TUBE - A4M02104
(x1) 1 9/16"x1 9/16"x22 11/16" (40x40x576)

T03 UPRIGHT TUBE WITH MATCH HOLDER - A4M02404
(x1) 1 9/16"x1 9/16"x22 11/16" (40x40x576)

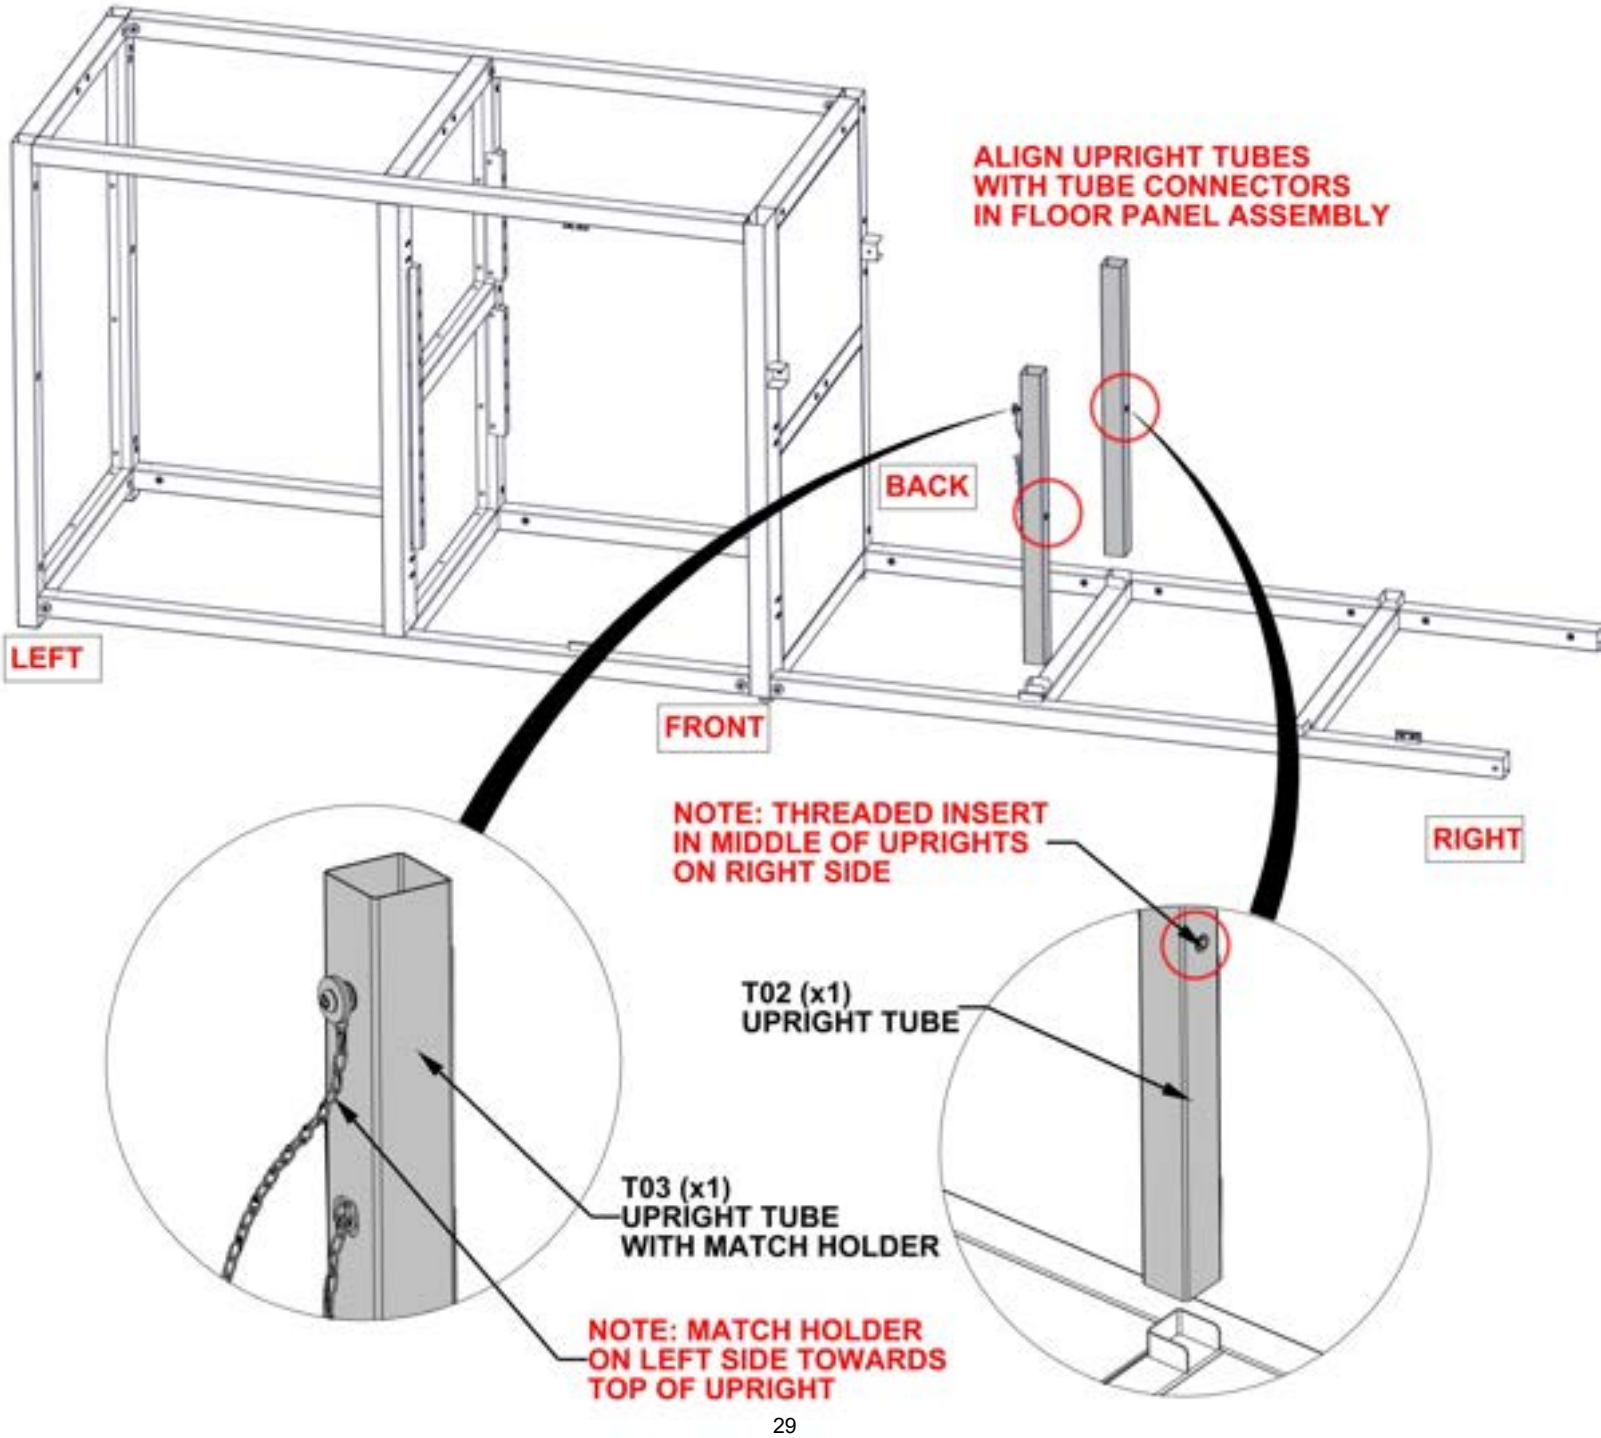

STEP 11A - KITCHEN CABINET ASSEMBLY

C09 (x1) CABINET TABLE FRAME - A4M02049
2 3/8"x25"x38 7/16" (60x635x977)

SLIDE CABINET TABLE FRAME UNTIL TUBES ALIGN WITH TUBE CONNECTORS ON CABINET PANEL C02

TOP OF T02 AND T03 UPRIGHT TUBES WILL HAVE TO BE MOVED OUTWARD TO ALLOW CABINET TABLE FRAME TO SLIDE INTO PLACE

TIP:
- RUBBER MALLET MAY NEED TO BE USED TO TAP PANELS IN PLACE

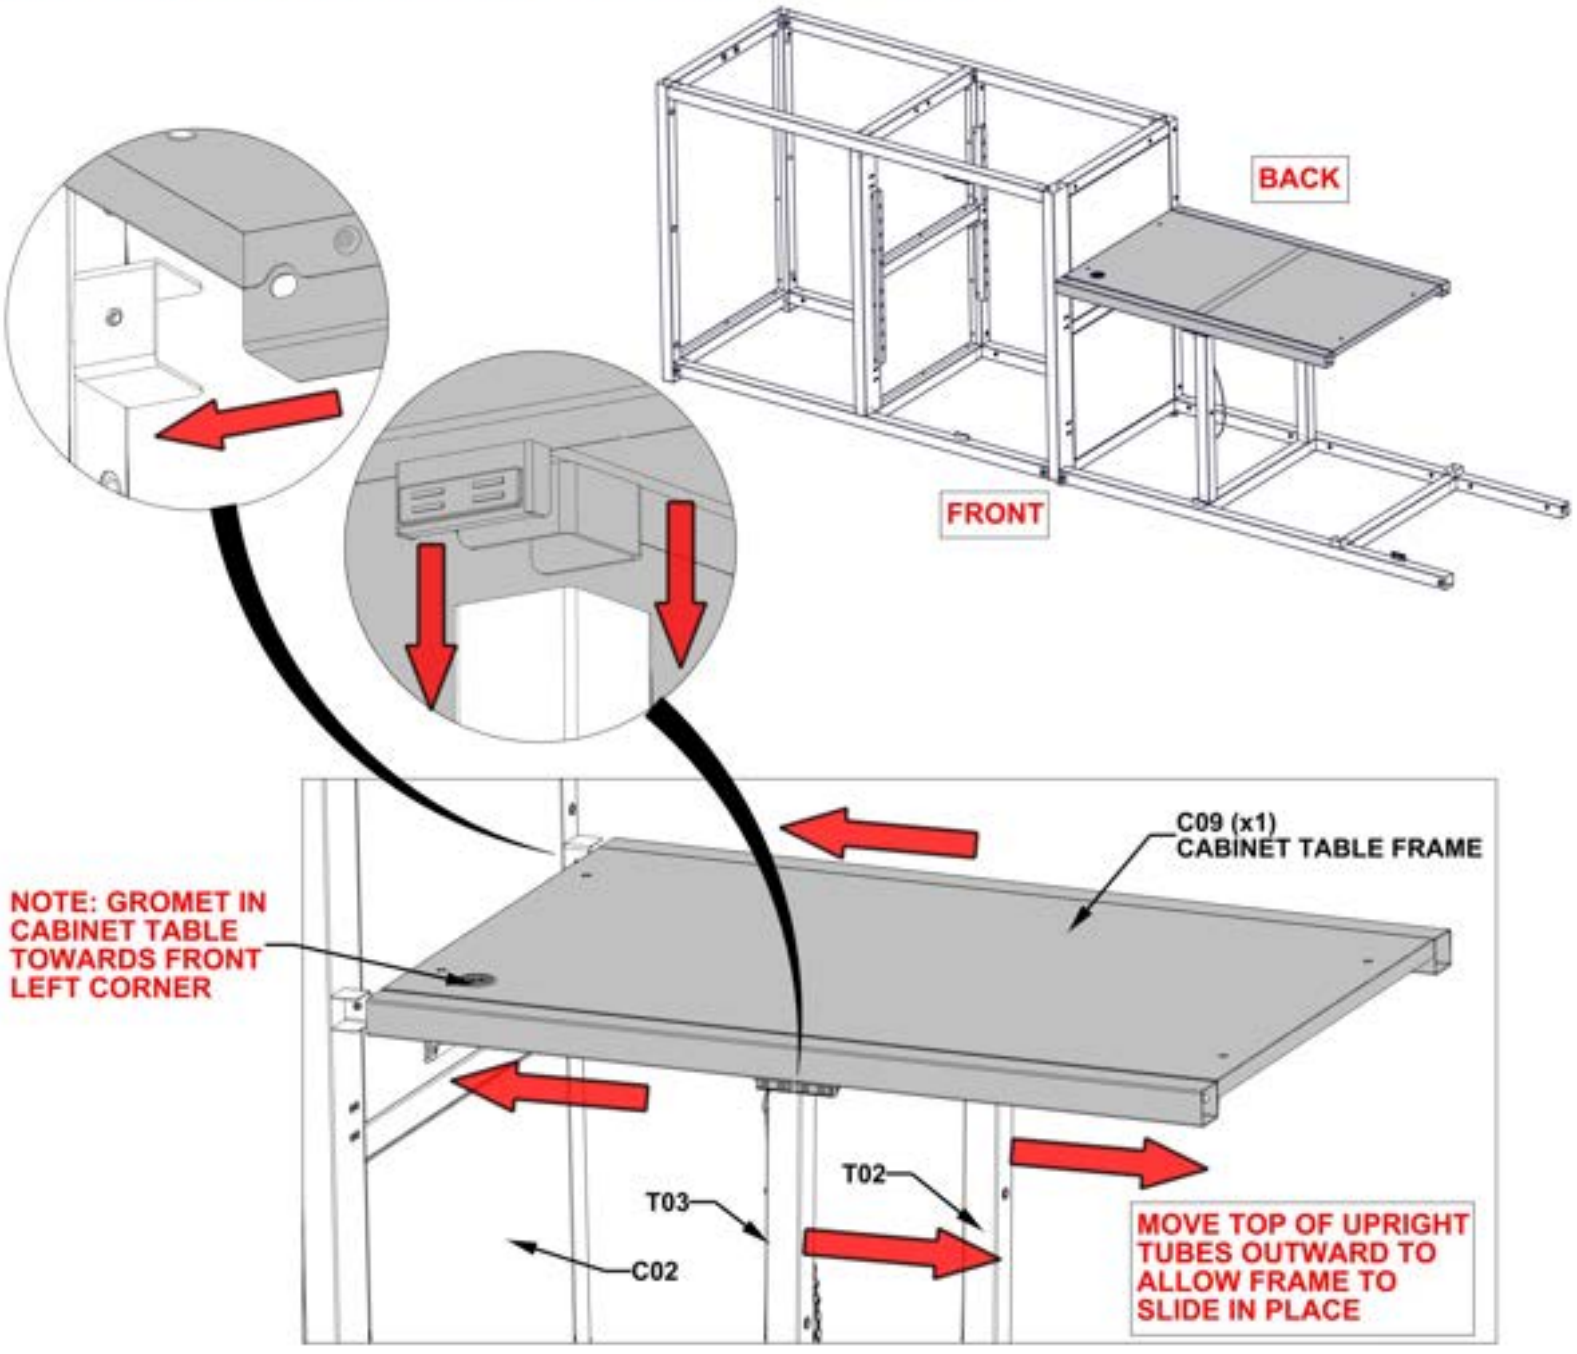

STEP 11B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

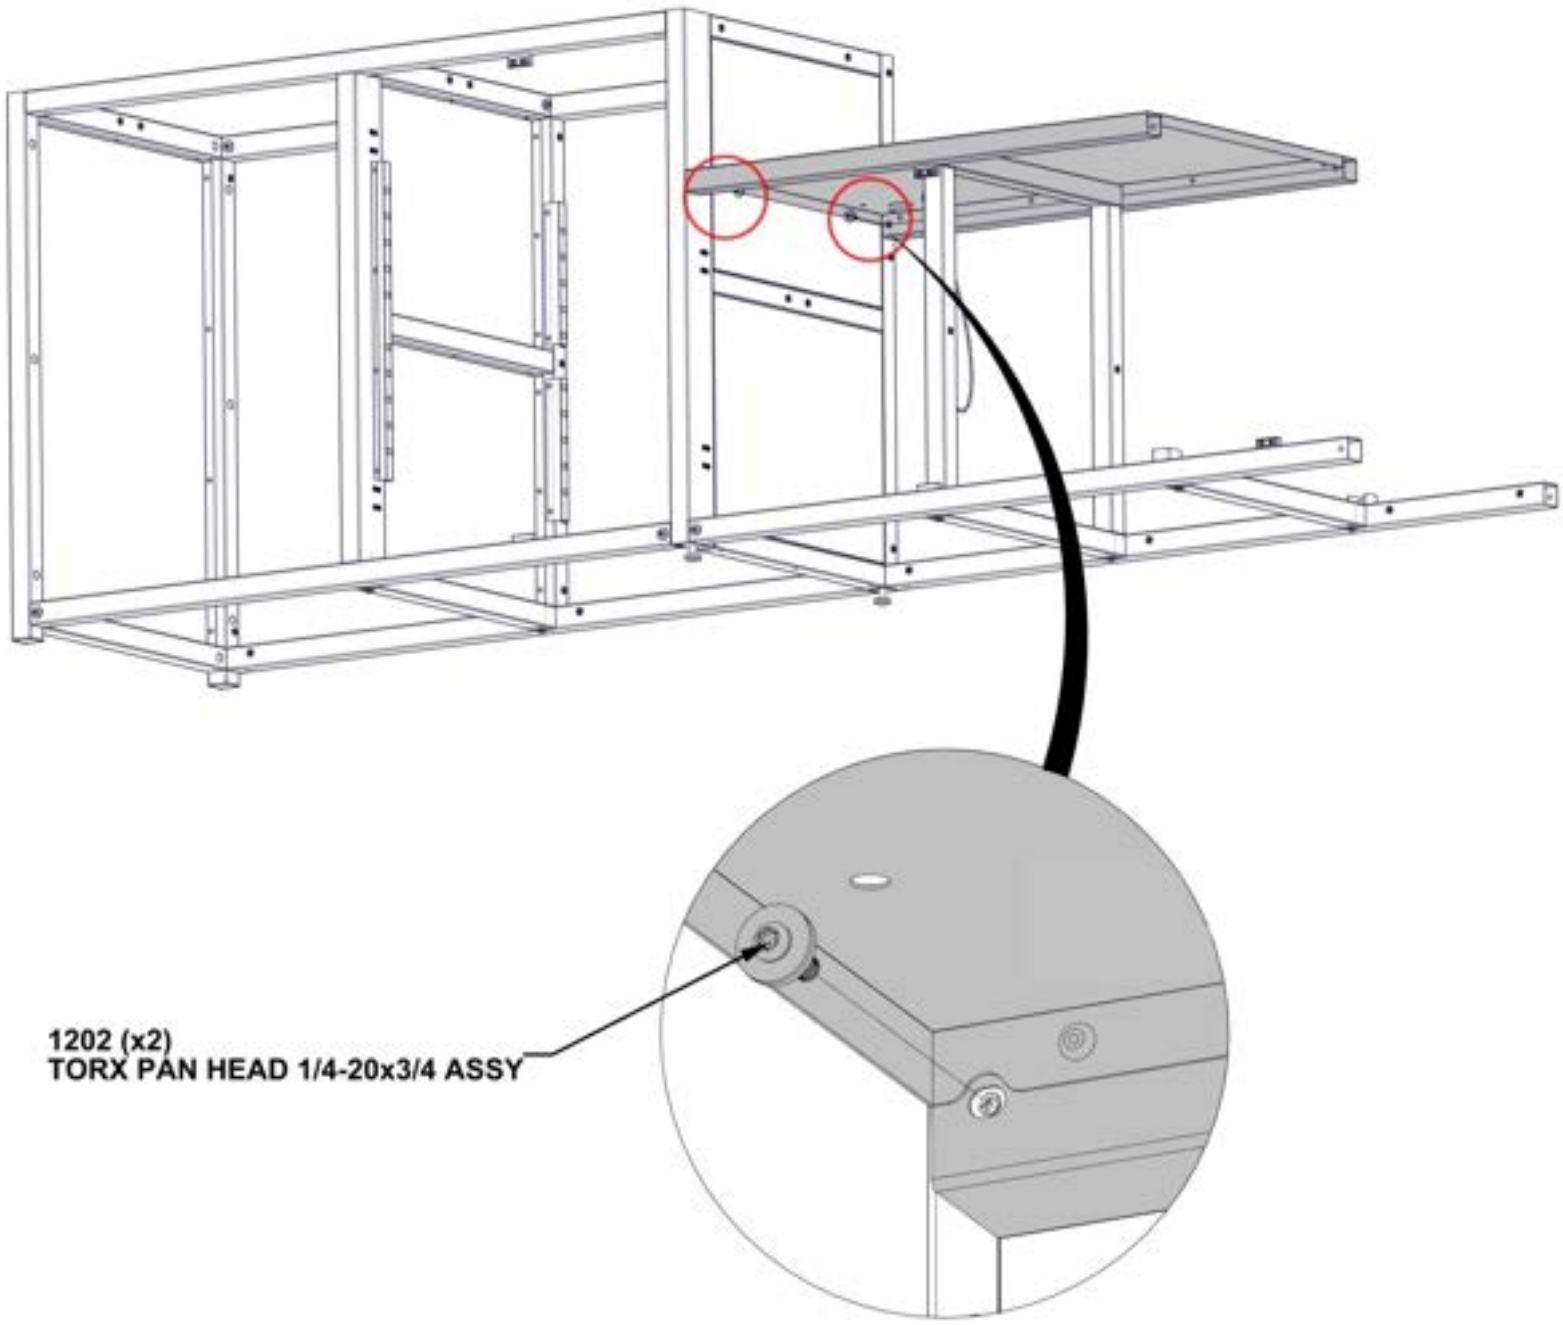

STEP 12A - KITCHEN CABINET ASSEMBLY

C08 CABINET PANEL - A4M02048
(x1) 4 1/8"x25"x35 7/16" (105x635x900)

SLIDE CABINET PANEL C08 UNTIL TUBES ALIGN WITH TUBE CONNECTORS ON TABLE FRAME C09

TOP OF C08 PANEL WILL HAVE TO BE MOVED OUTWARD

TIP:
- RUBBER MALLET MAY NEED TO BE USED TO TAP PANELS IN PLACE

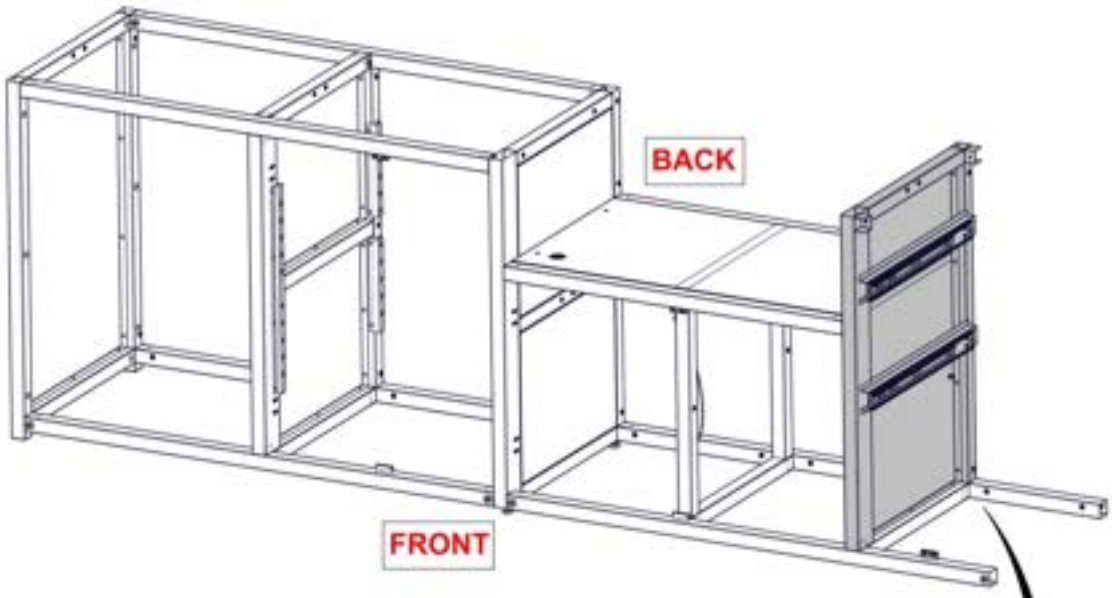

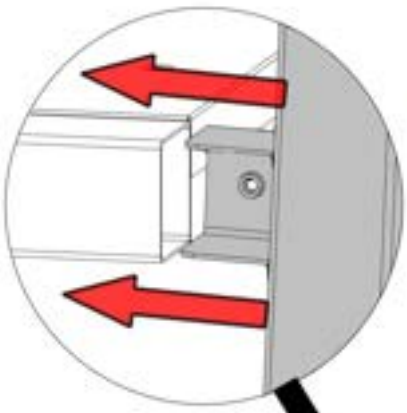

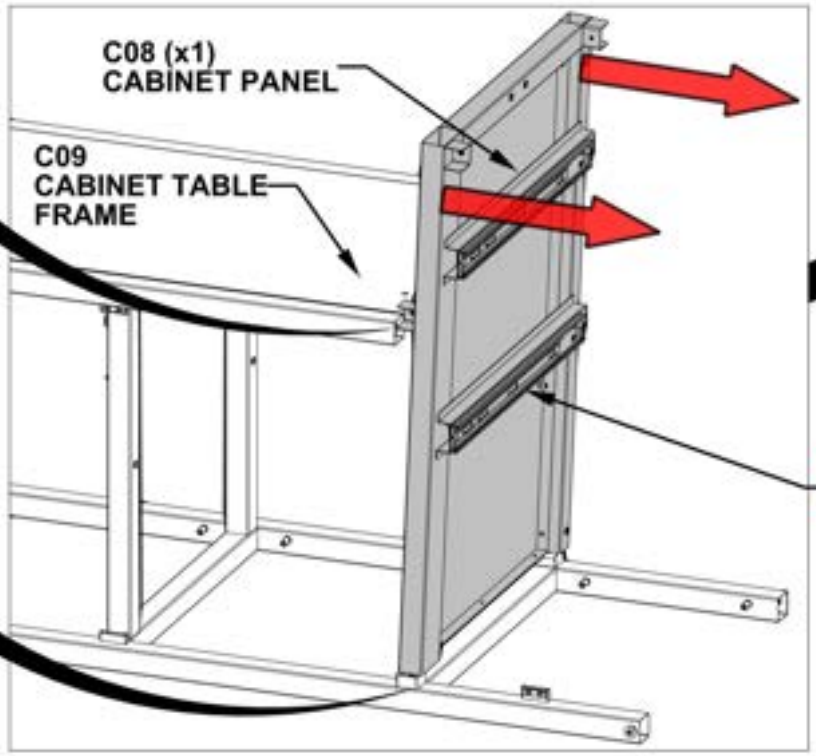

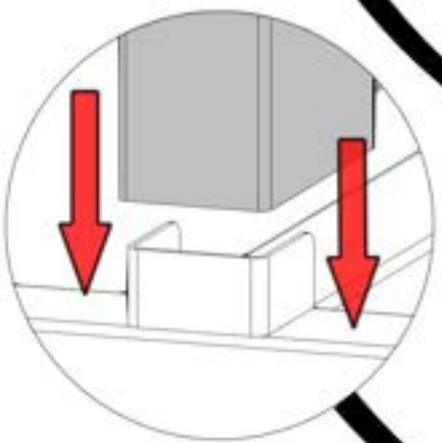

NOTE: DRAWER SLIDES ON RIGHT SIDE OF CABINET

STEP 12B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

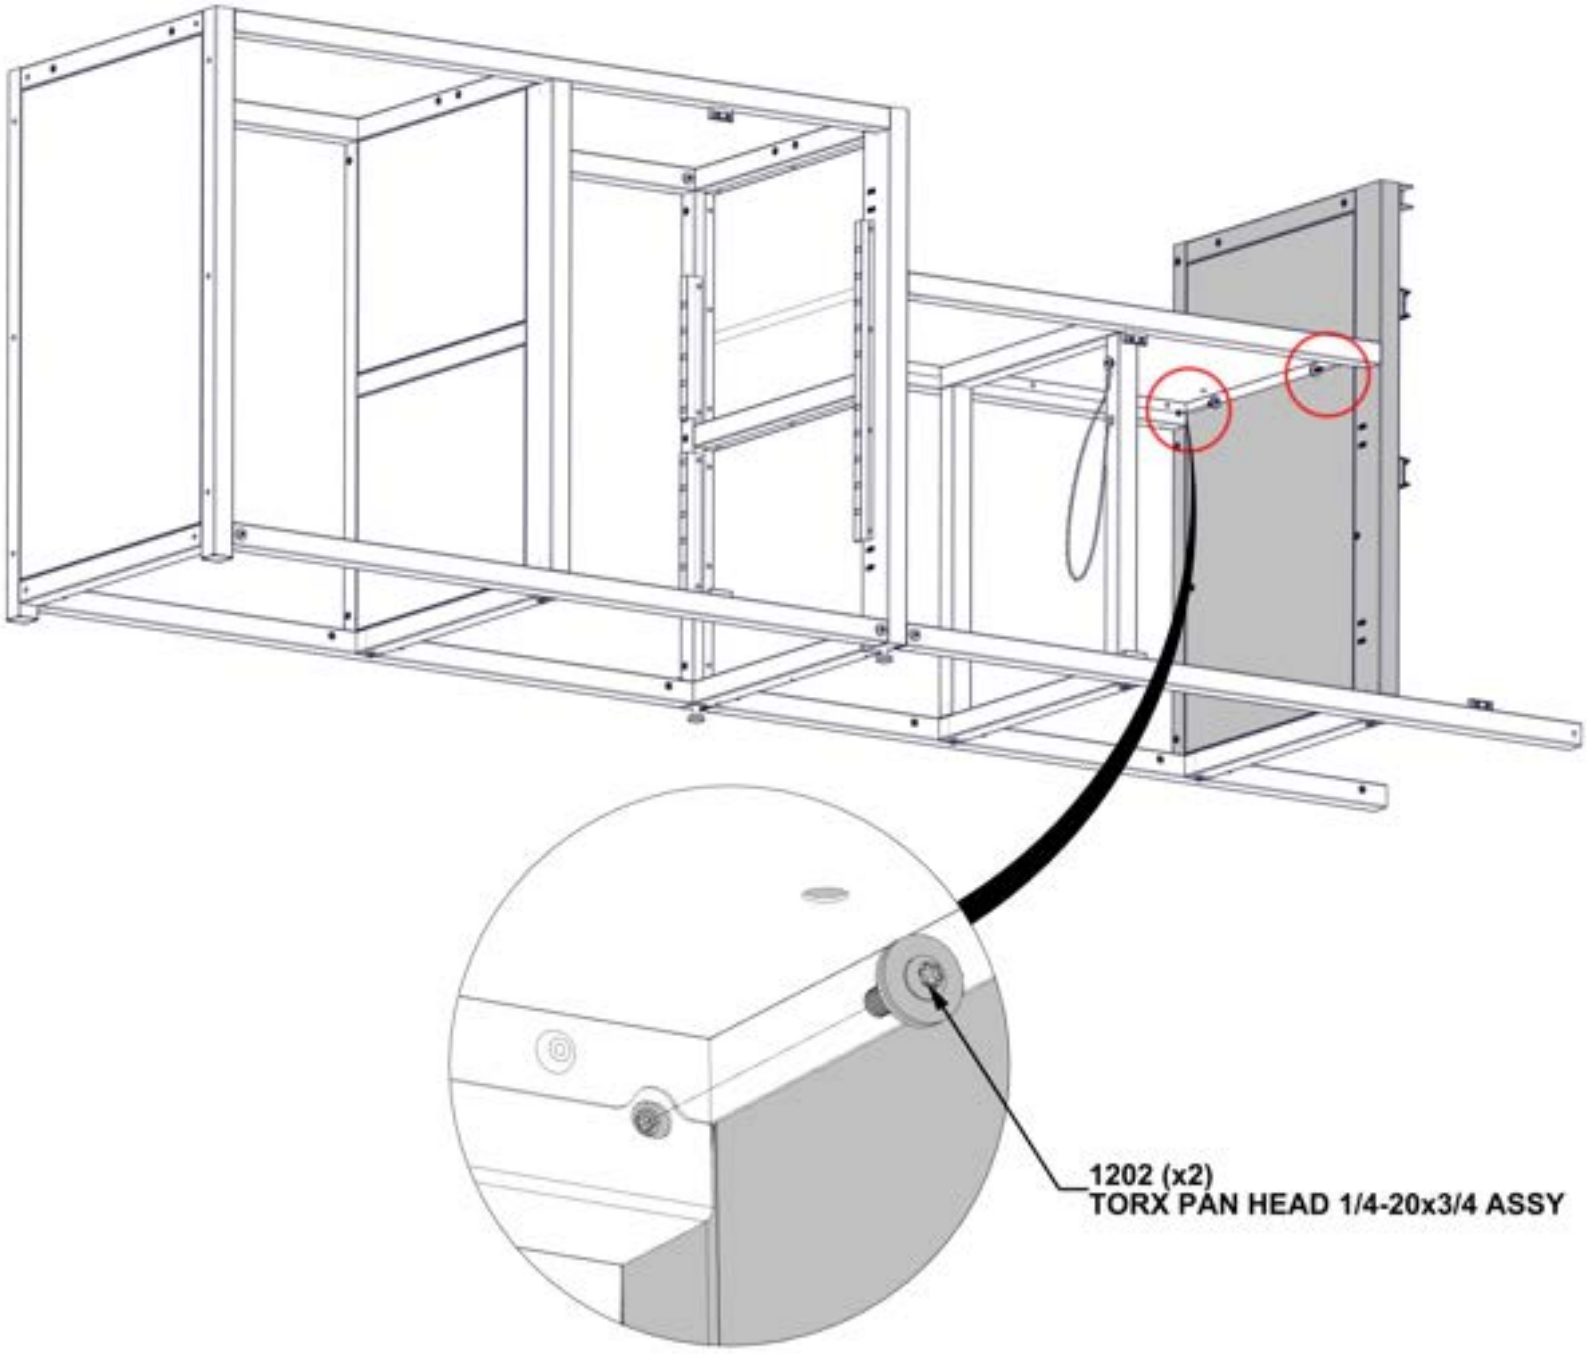

STEP 13A - KITCHEN CABINET ASSEMBLY

C06 CABINET PANEL - A4M02046
(x1) 2 15/16"x25"x38" (75x635x965)

ALIGN TUBE CONNECTORS ON C06 PANEL WITH TUBES ON BOTTOM RAILS

TIP:
- RUBBER MALLET MAY NEED TO BE USED TO TAP PANELS IN PLACE

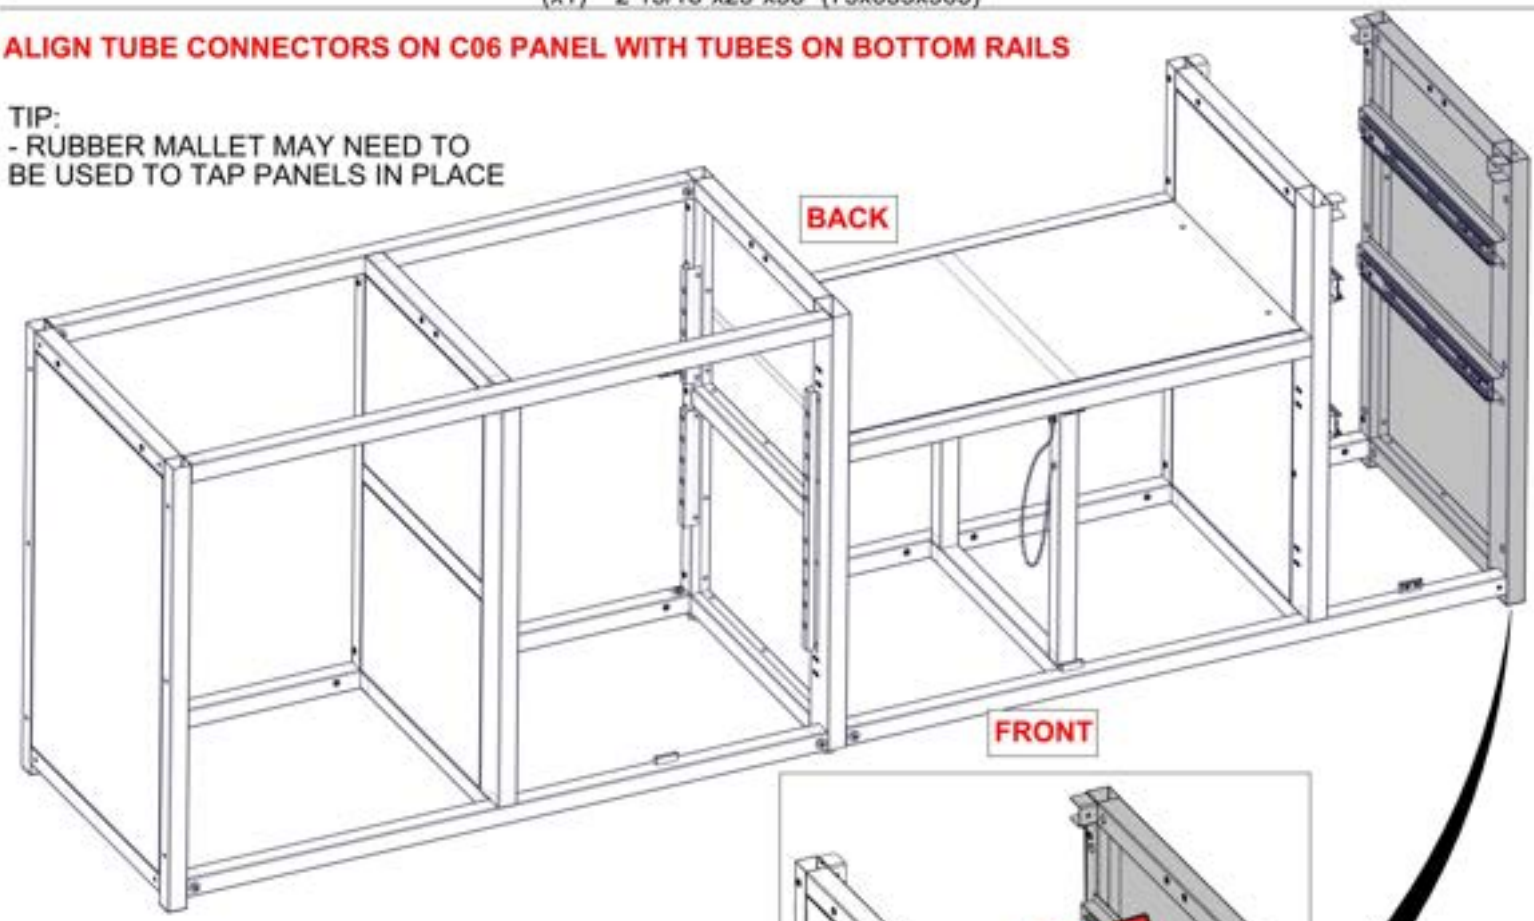

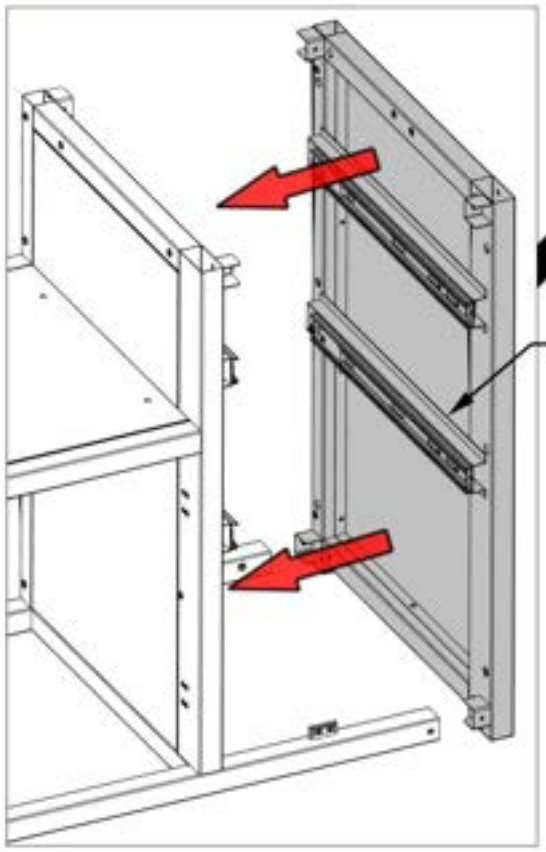

STEP 13B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

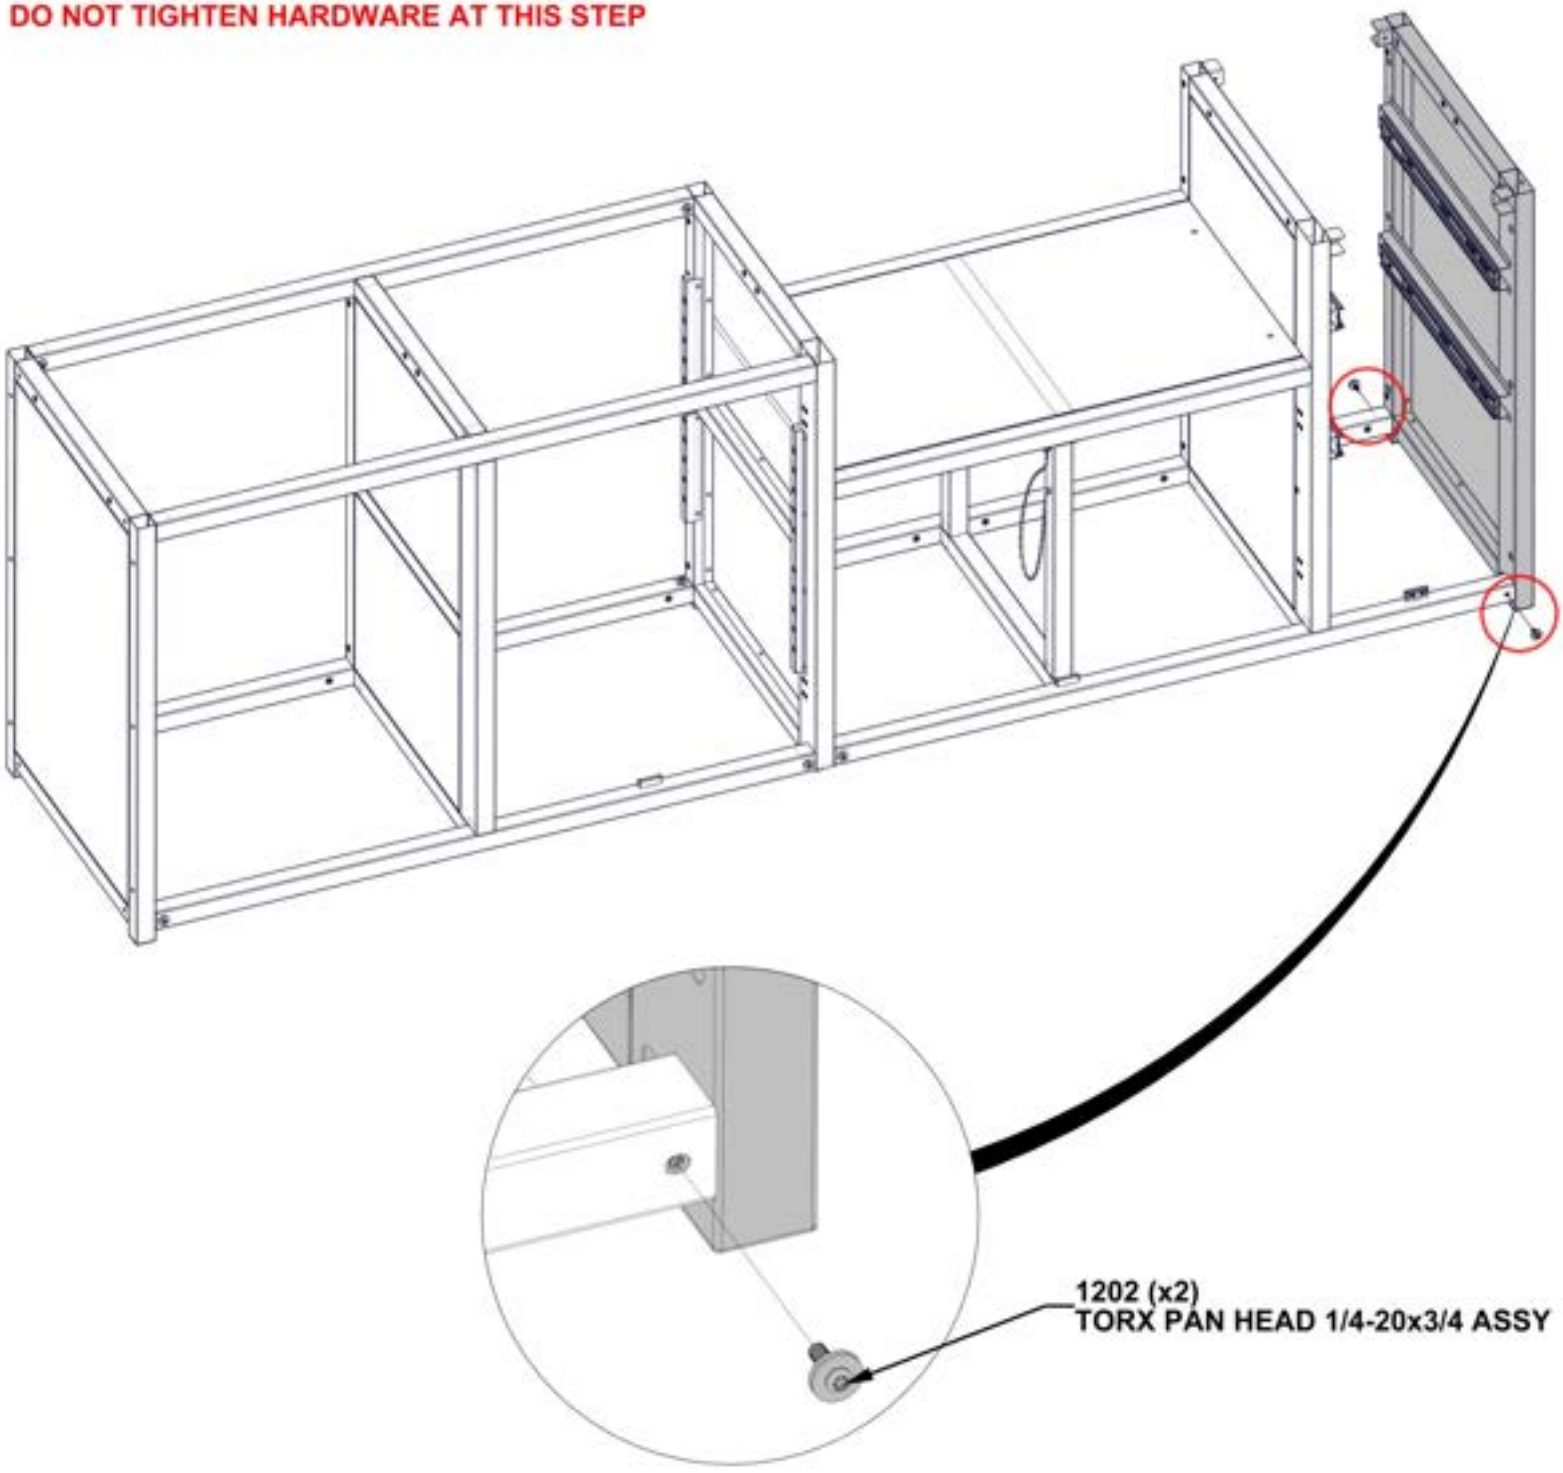

STEP 14A - KITCHEN CABINET ASSEMBLY

T01 (x2) TUBE - A4M02050
1 9/16"x1 9/16"x14 7/8" (40x40x378)

PLACE T01 TUBES IN PLACE WITH NOTCH IN BOTTOM OF TUBE FACING DOWN

MAKE SURE SLOT IN TUBES FACE EACH OTHER TOWARDS INSIDE OF CABINET

TIP:
- RUBBER MALLET MAY NEED TO BE USED TO TAP TUBES IN PLACE

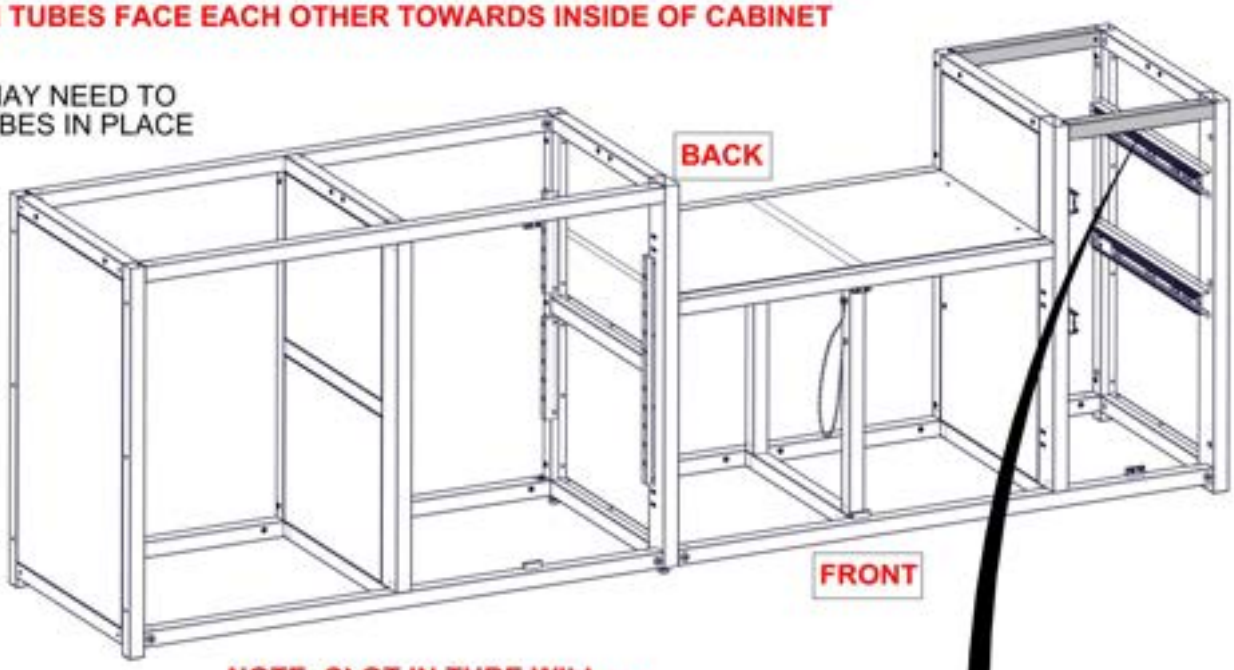

NOTE: SLOT IN TUBE WILL ALIGN WITH THREADED HOLE. MAKE SURE SLOTS ON EACH TUBE FACE EACH OTHER TOWARD INSIDE OF CABINET.

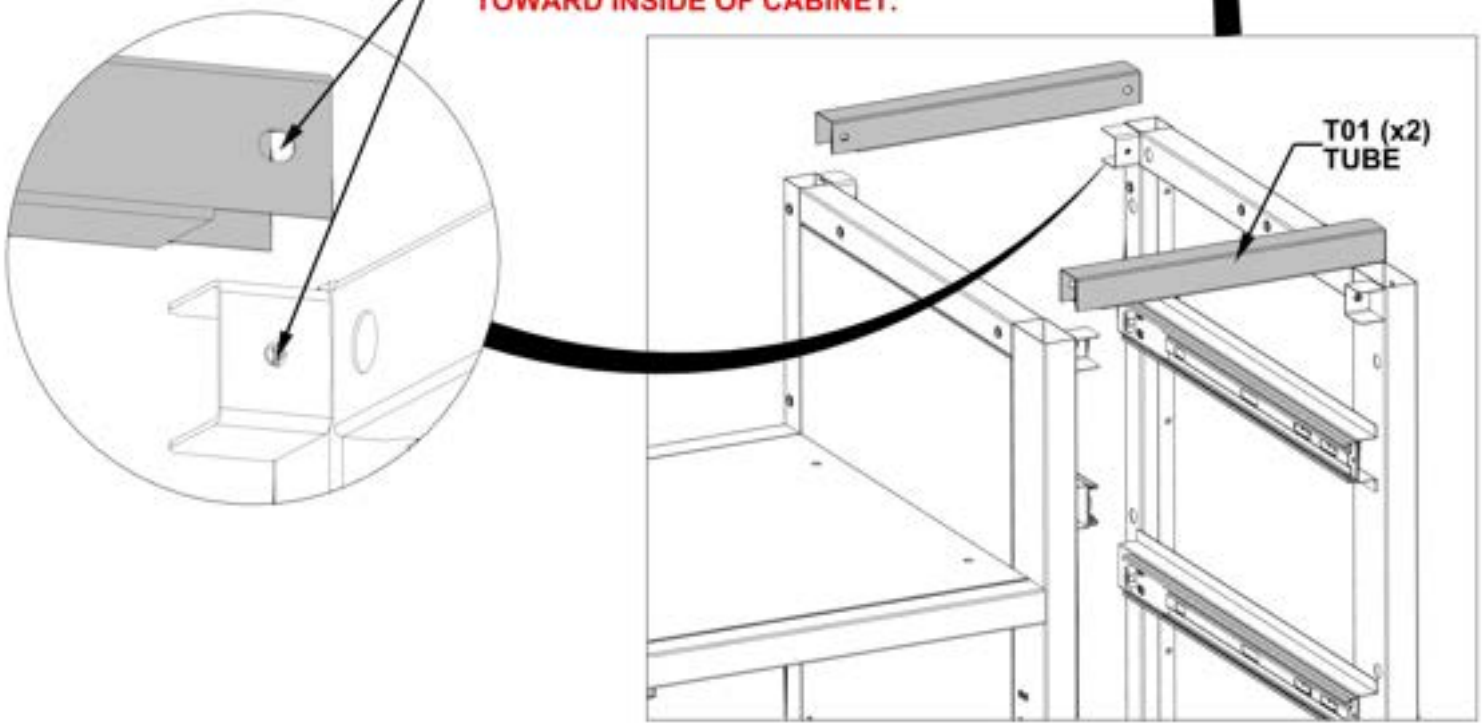

STEP 14B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

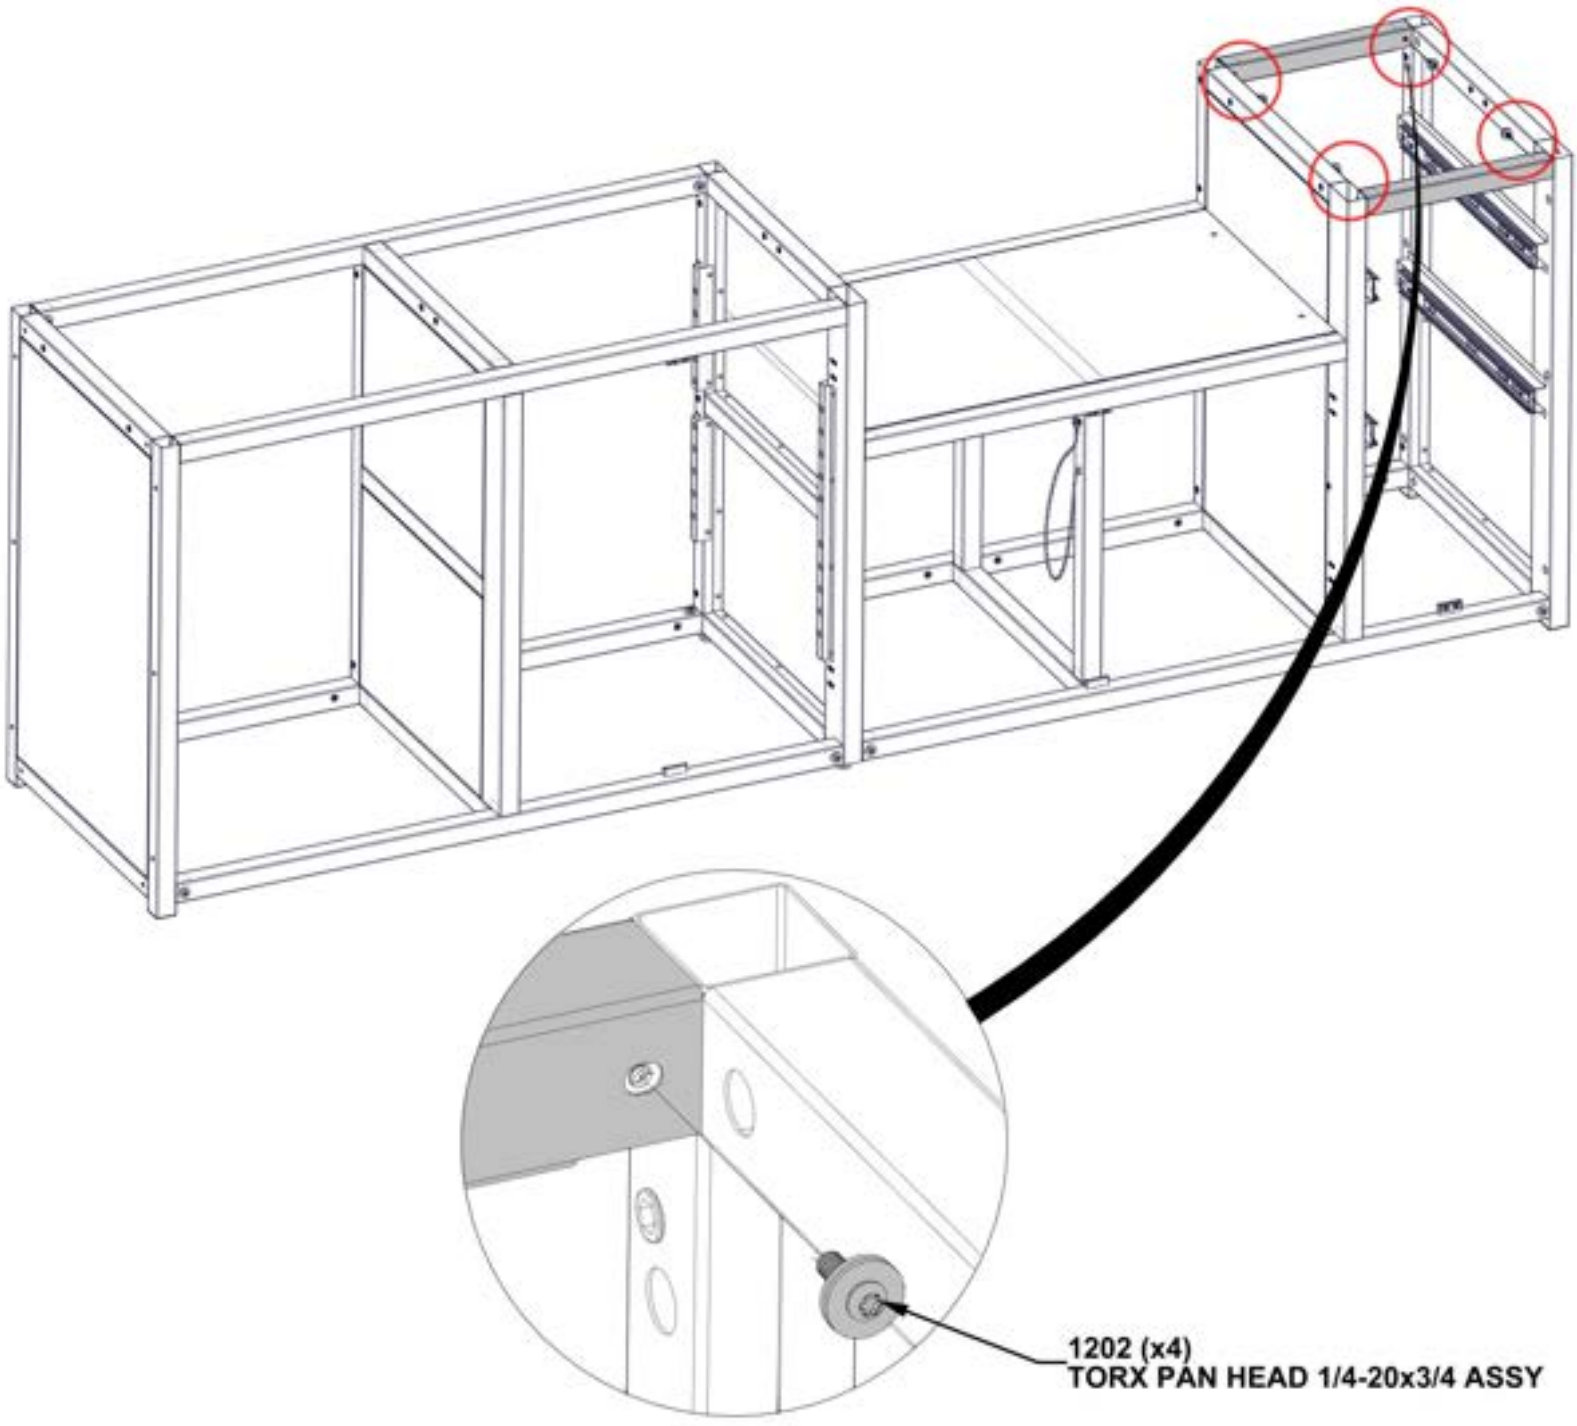

STEP 15 - SQUARE THE ASSEMBLY

**CRITICAL: SQUARE KITCHEN CABINETS BEFORE PROCEEDING TO NEXT STEPS.
ONCE SQUARE, TIGHTEN ALL HARWARE FROM PREVIOUS STEPS.**

MEASUREMENTS TAKEN FROM OUTSIDE CORNER OF CABINET TO OUTSIDE CORNER OF CABINET.

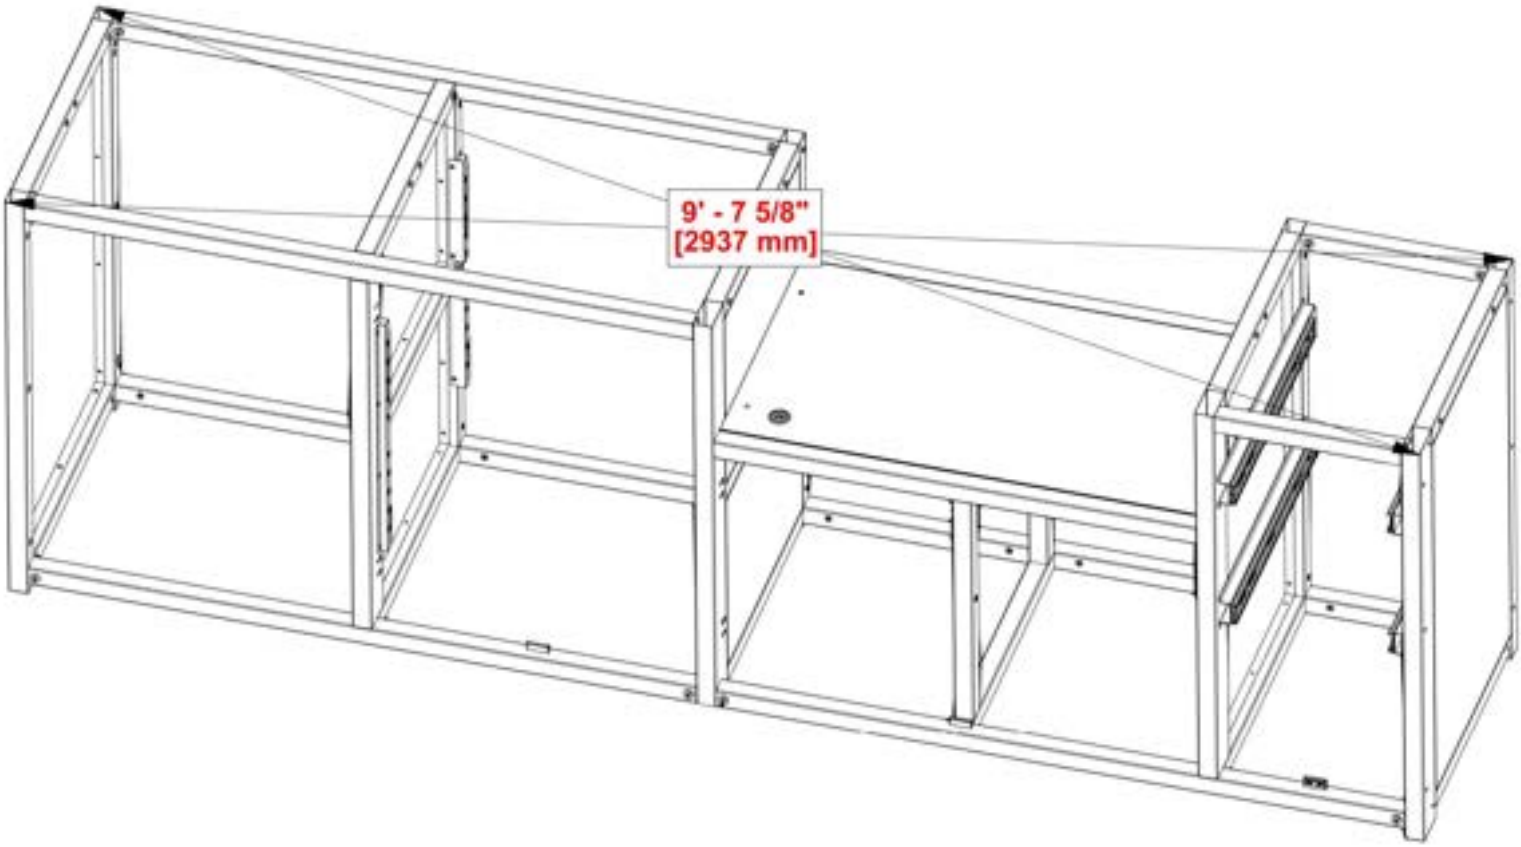

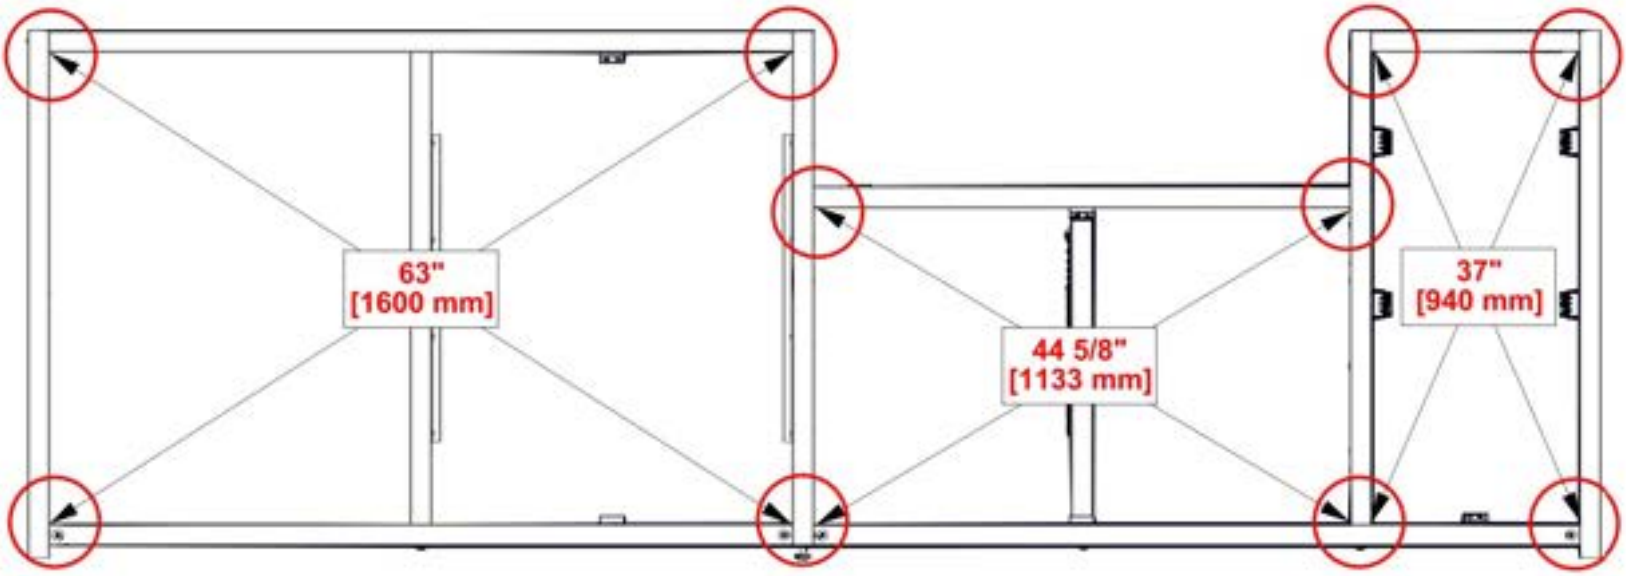

**CRITICAL: SQUARE ALL CABINET OPENINGS TO ENSURE PROPER DOOR,
COUTERTOP, AND DRAWER FITMENT**

BEFORE PROCEEDING, MAKE SURE ALL HARDWARE IS TIGHT AND KITCHEN CABINETS ARE SQUARE.

STEP 16 - POST ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

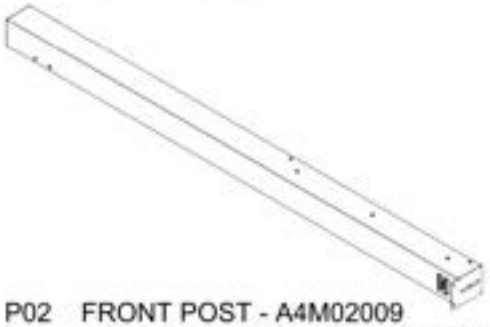

P02 FRONT POST - A4M02009
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)

A01 BRACKET - A4M02018
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

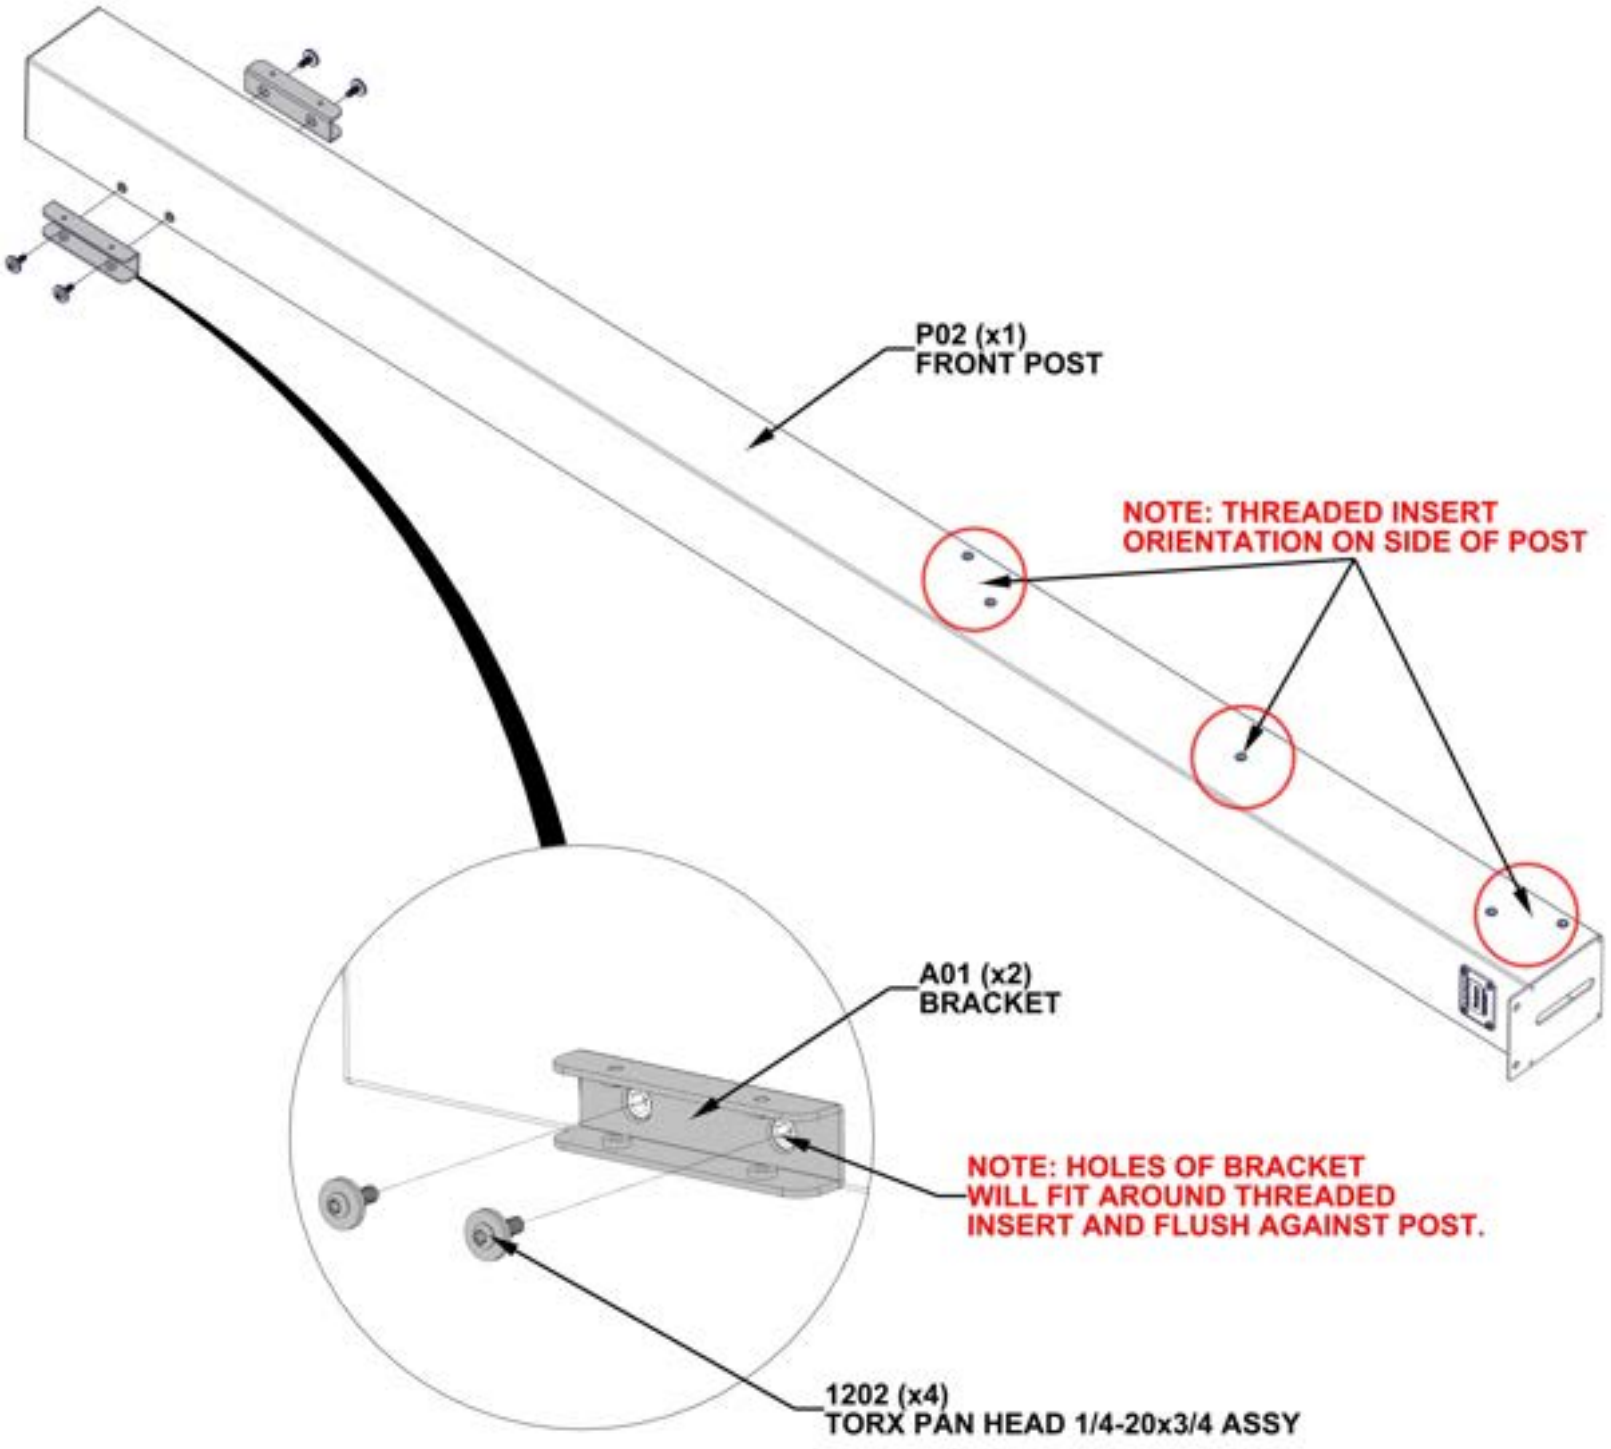

STEP 17 - POST ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

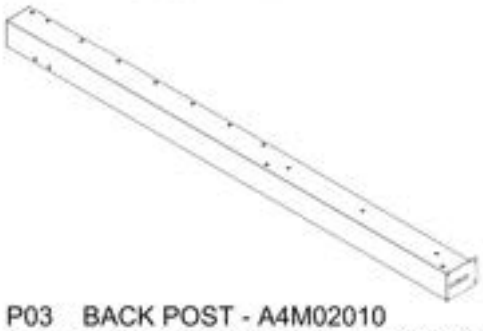

P03 BACK POST - A4M02010
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)

A01 BRACKET - A4M02018
(x1) 1"x1 5/16"x5 1/16" (25x33.2x128)

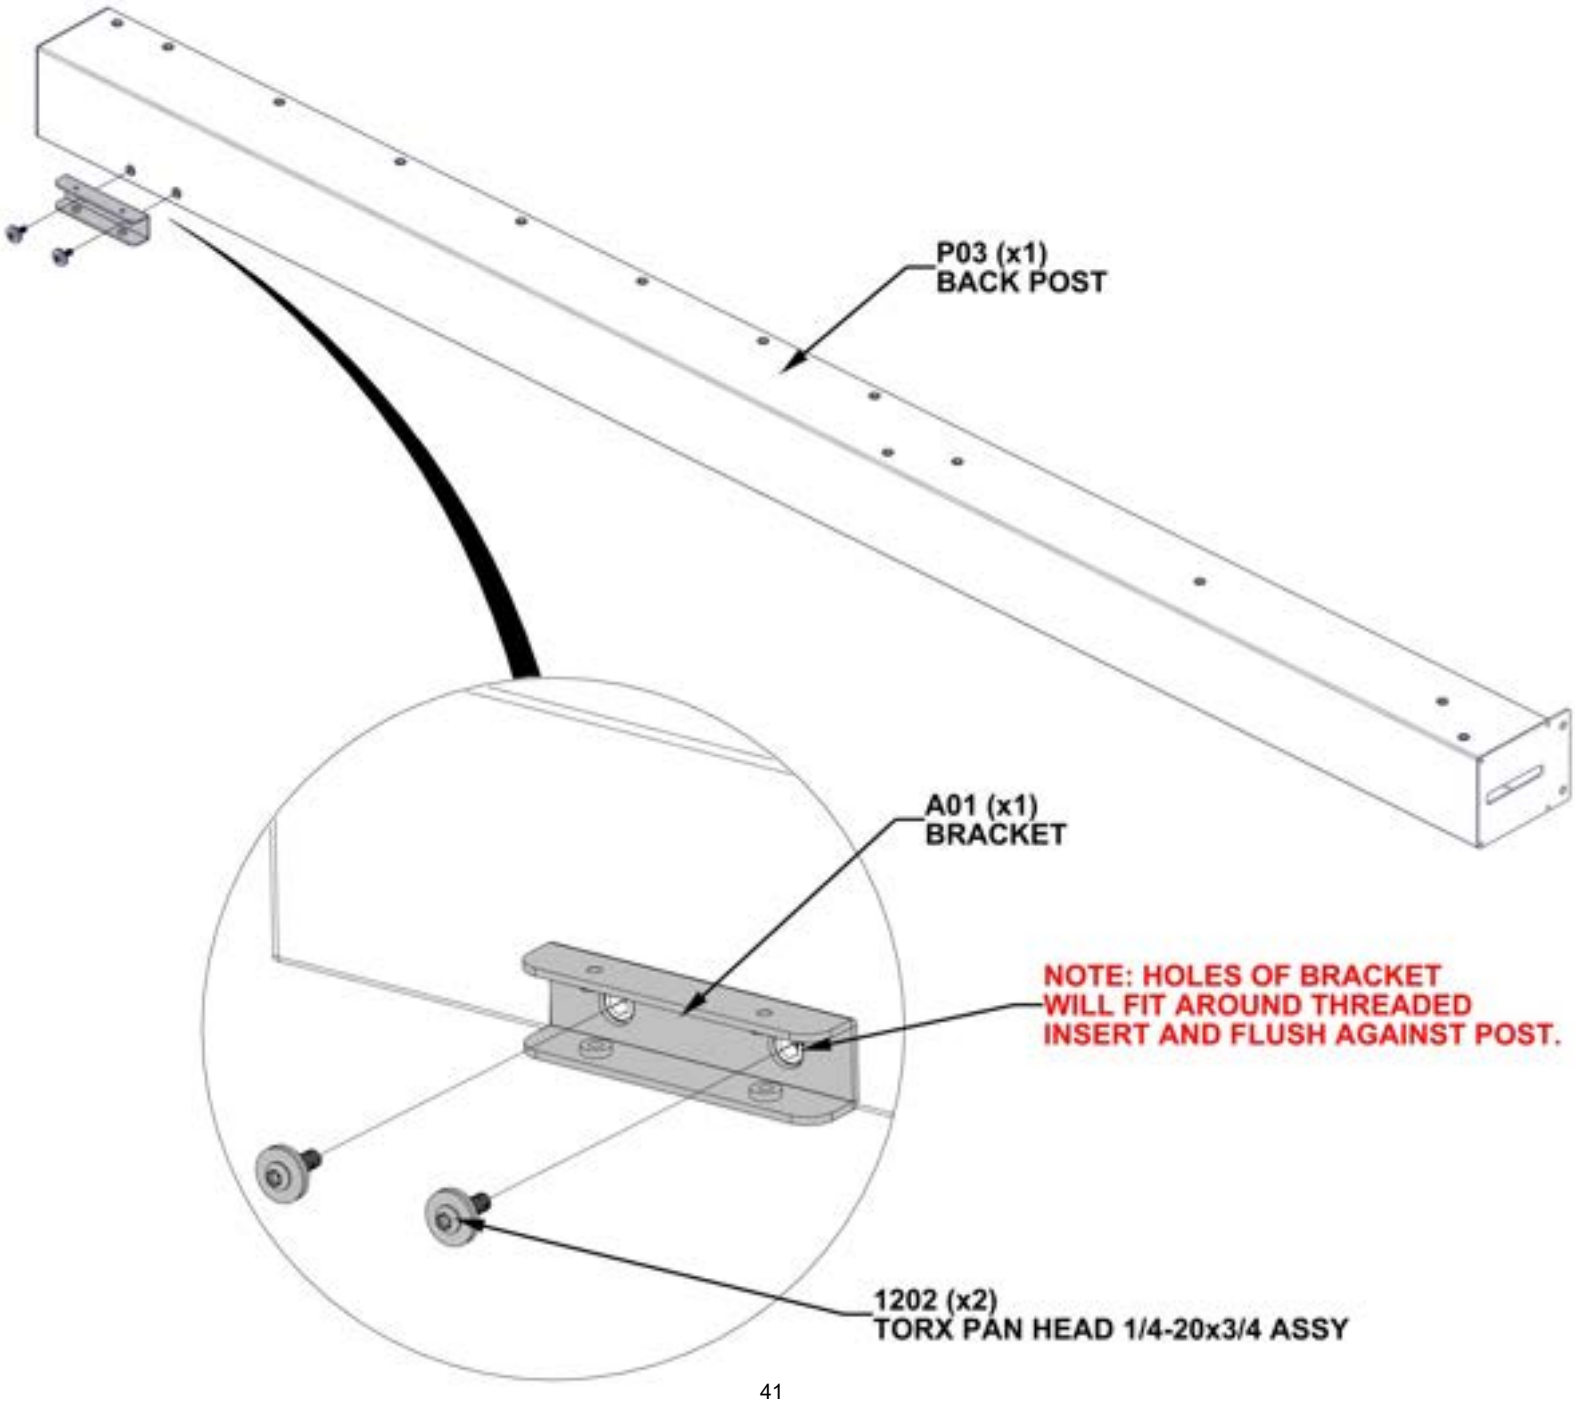

STEP 18 - POST ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

P01 FRONT POST - A4M02008
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)

A01 BRACKET - A4M02018
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

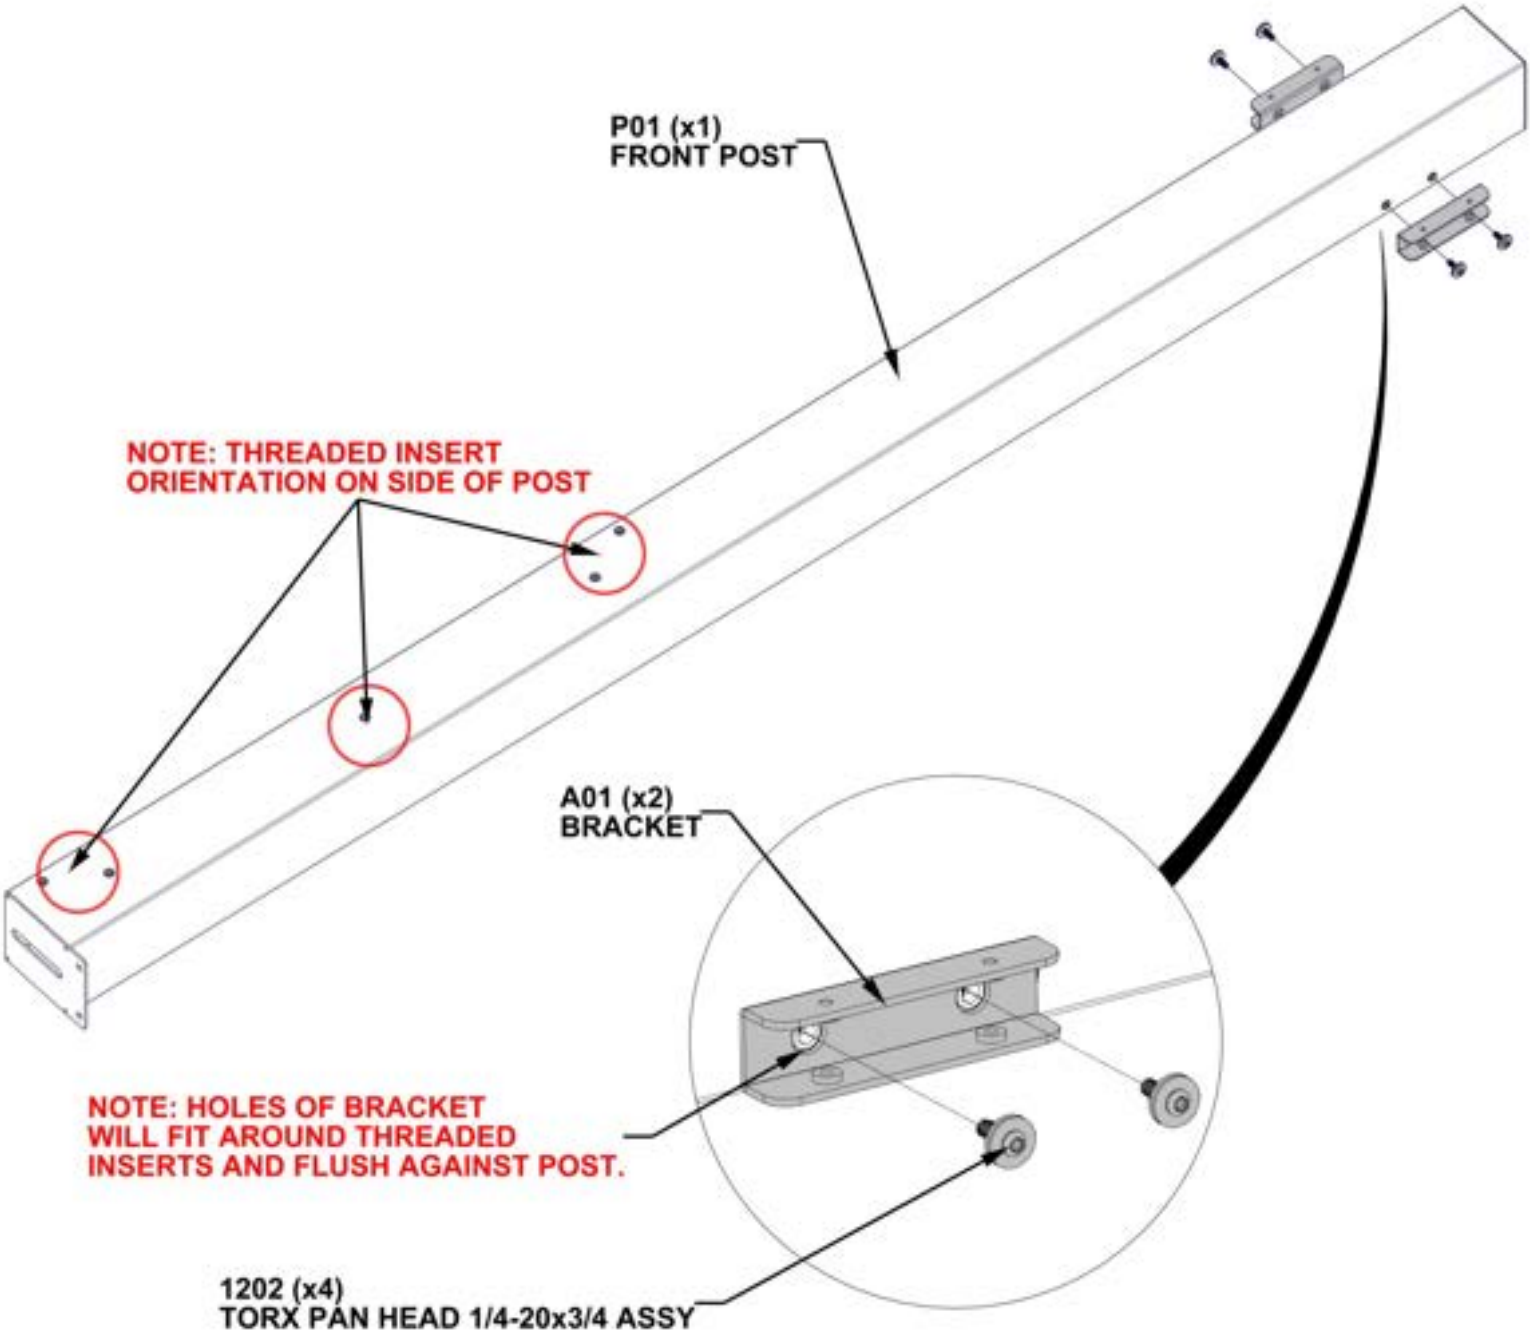

STEP 19 - POST ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

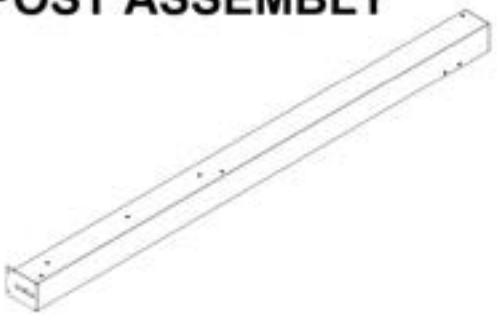

P04 BACK POST - A4M02011
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)

A01 BRACKET - A4M02018
(x1) 1"x1 5/16"x5 1/16" (25x33.2x128)

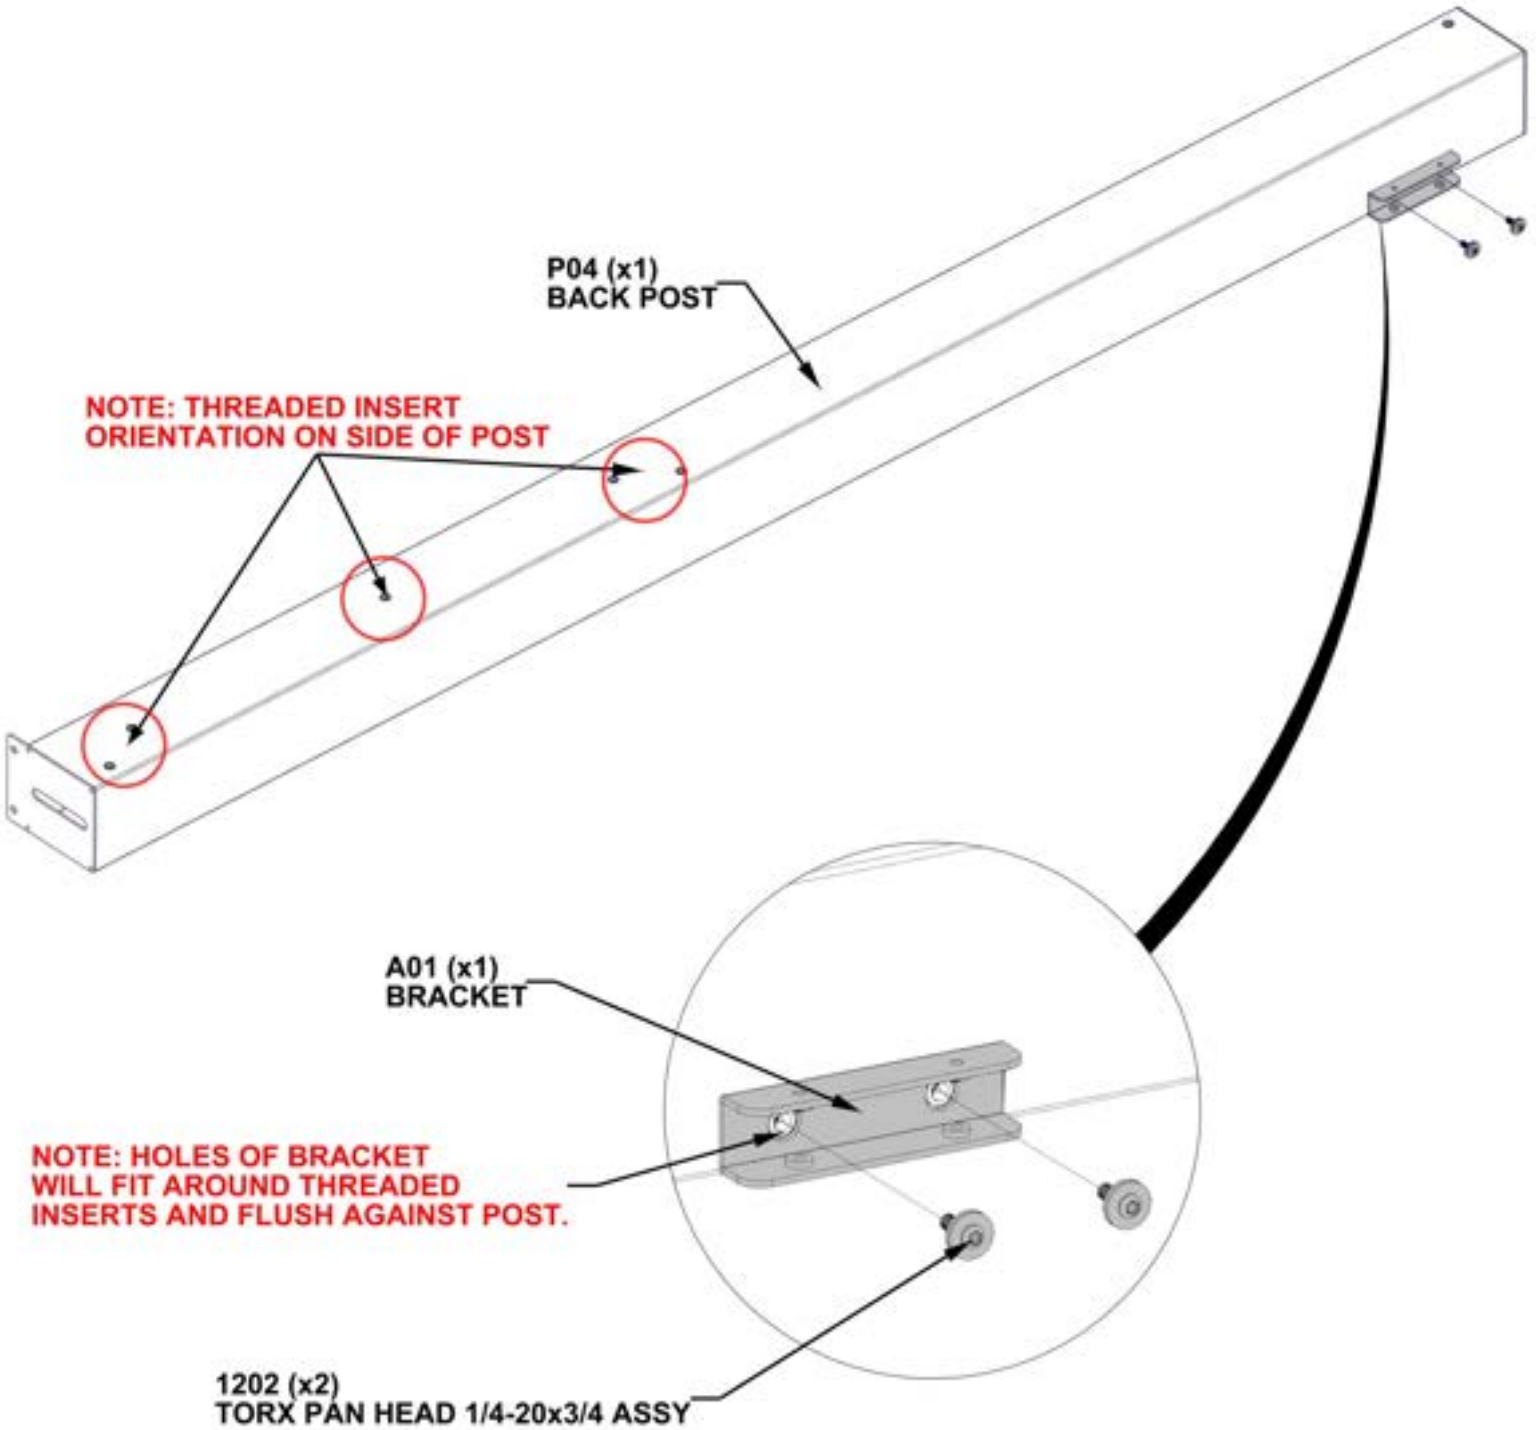

STEP 20 - KITCHEN ASSEMBLY

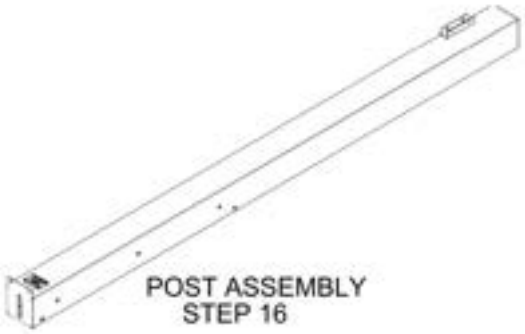

QTY	PART NUMBER	Description
5	H101103	TORX SOCKET SCREW 1/4-20

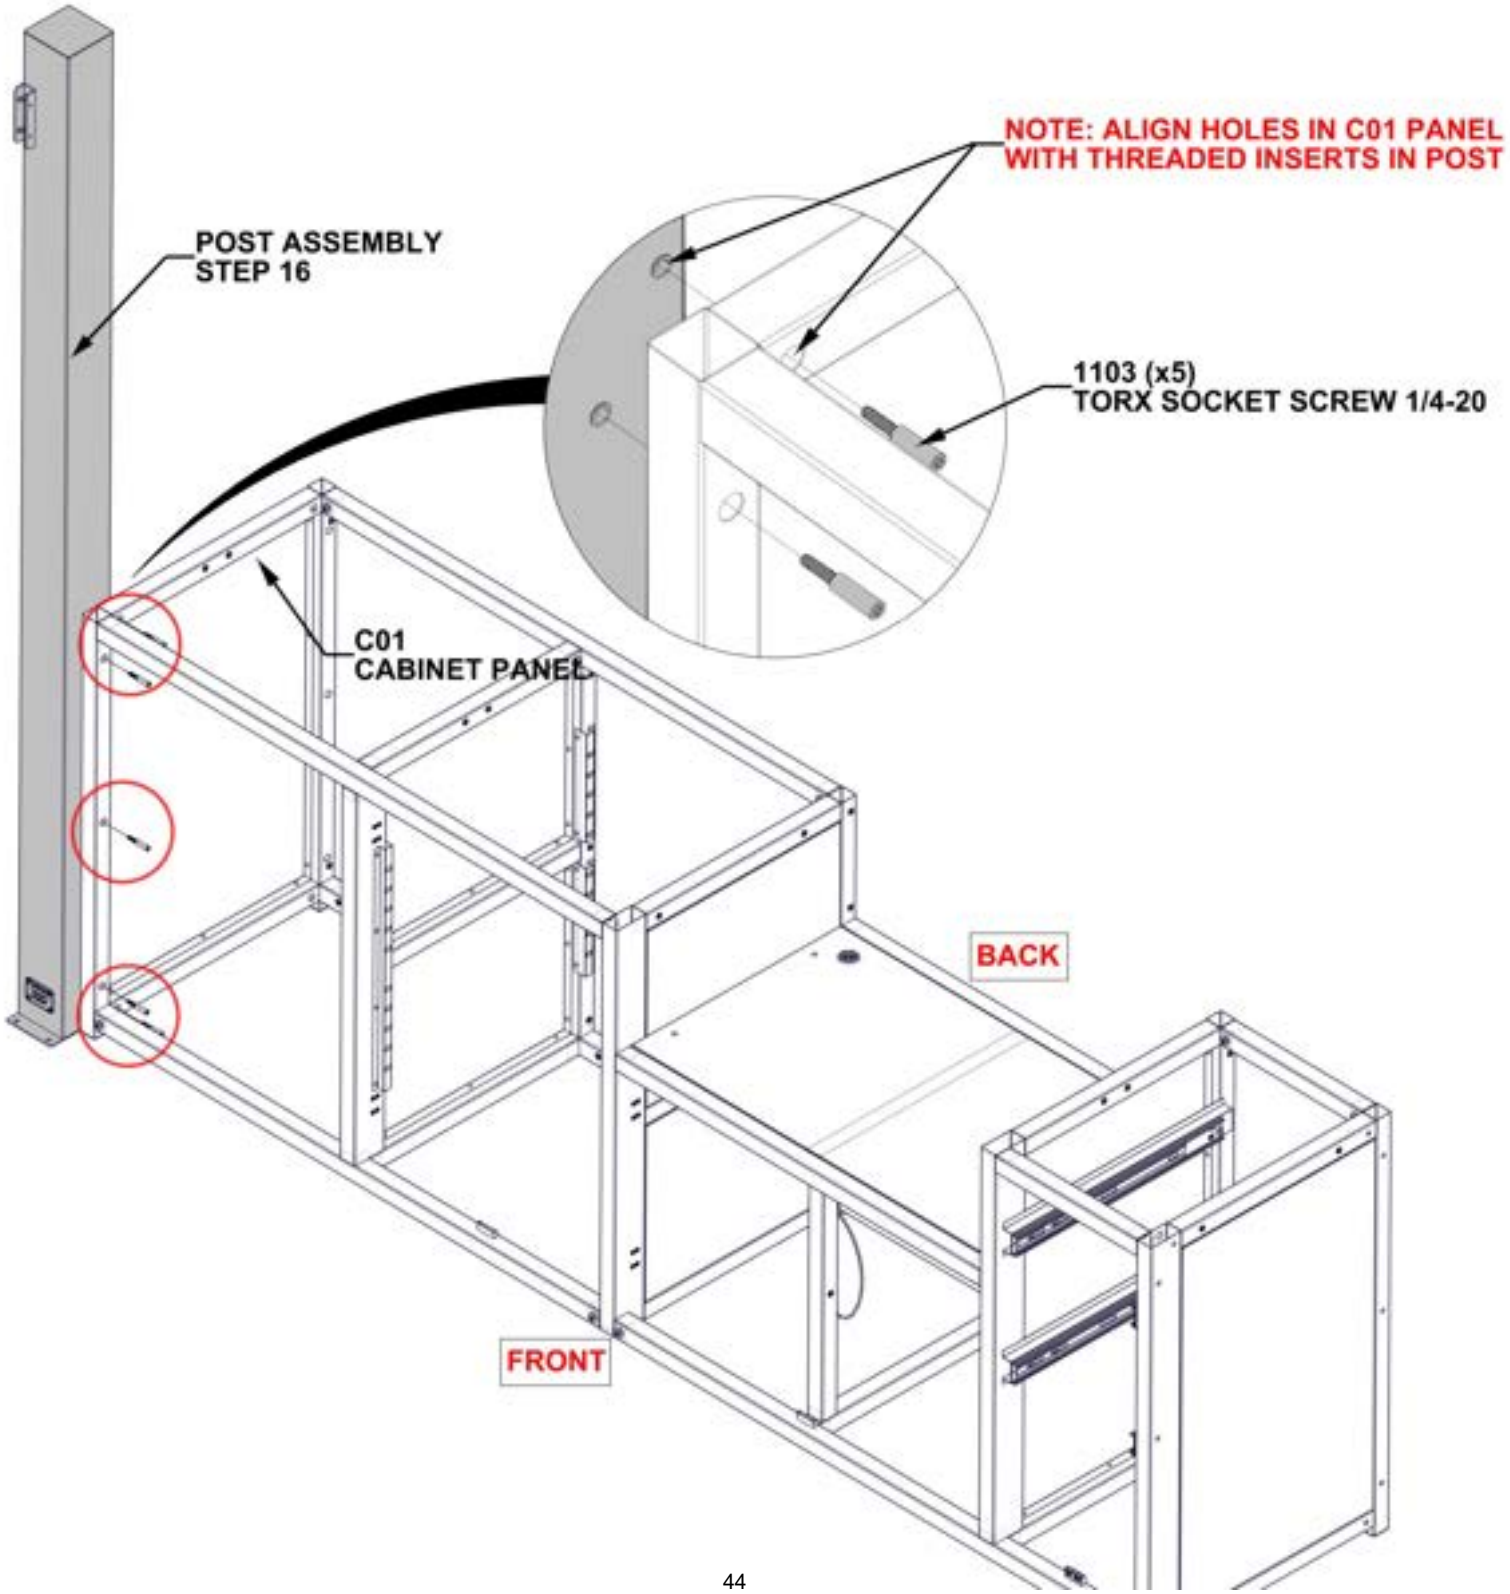

STEP 21 - KITCHEN ASSEMBLY

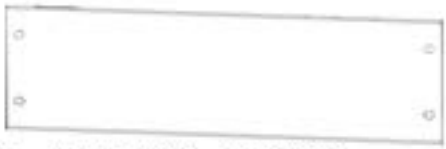

B04 SIDE BEAM - A4M02019
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

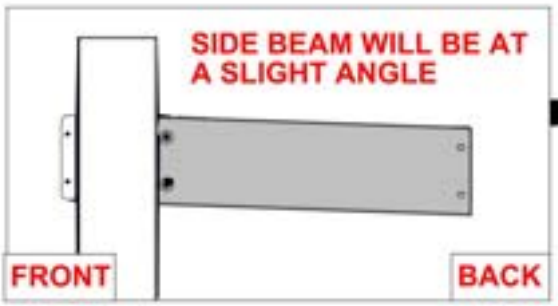

SLIDE BEAM ON TO
POST BRACKET

B04 (x1)
SIDE BEAM

NOTE: ARROW ON
TOP OF SIDE BEAM
TOWARDS FRONT

NOTE: ALIGN HOLES
IN B04 BEAM WITH
THREADED HOLES
IN POST BRACKET

1202 (x2)
TORX PAN HEAD
1/4-20x3/4 ASSY

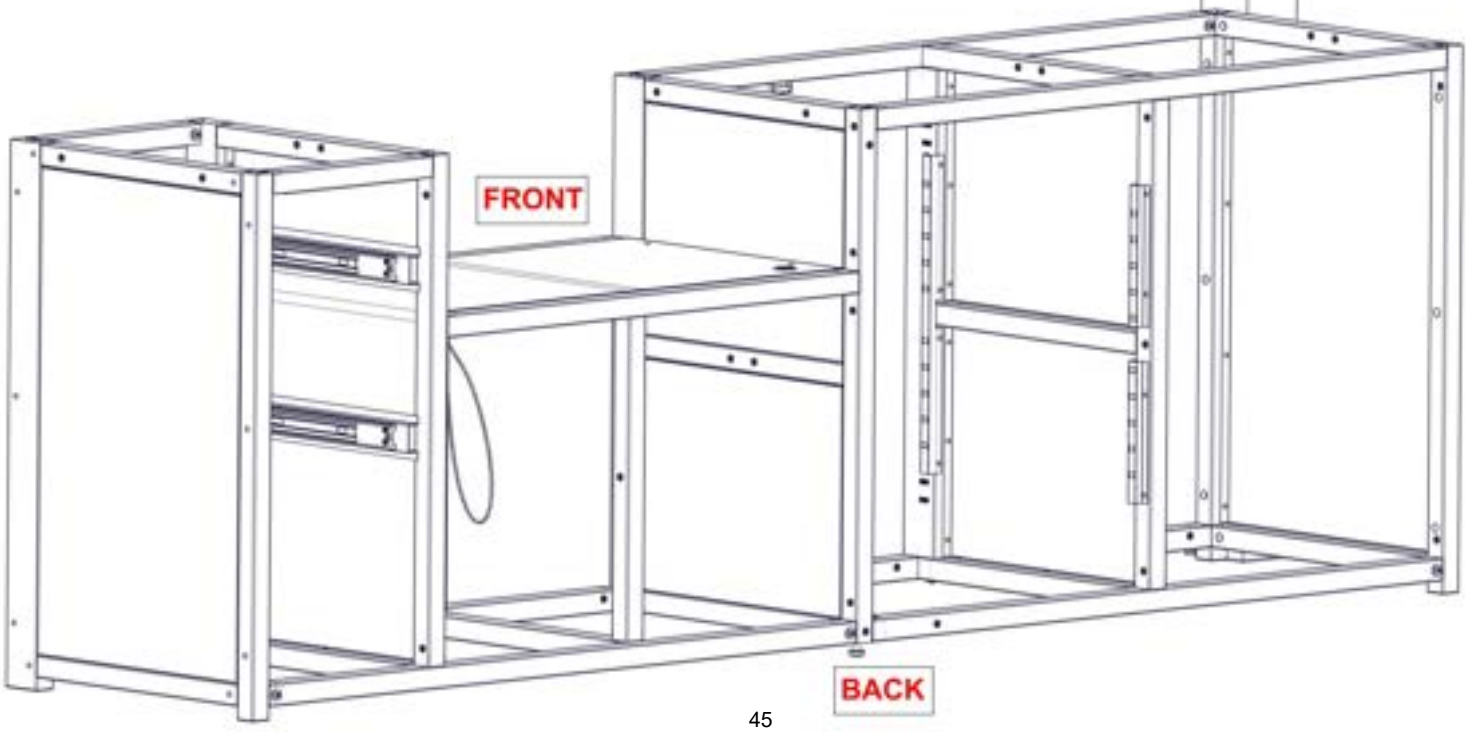

STEP 22 - KITCHEN ASSEMBLY

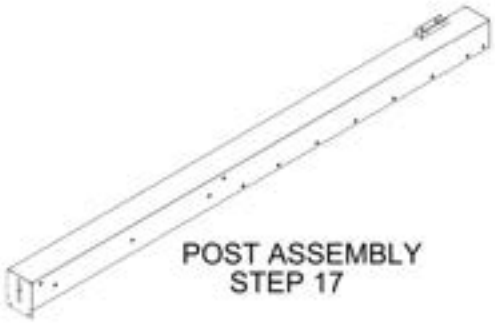

QTY	PART NUMBER	Description
5	H101103	TORX SOCKET SCREW 1/4-20
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

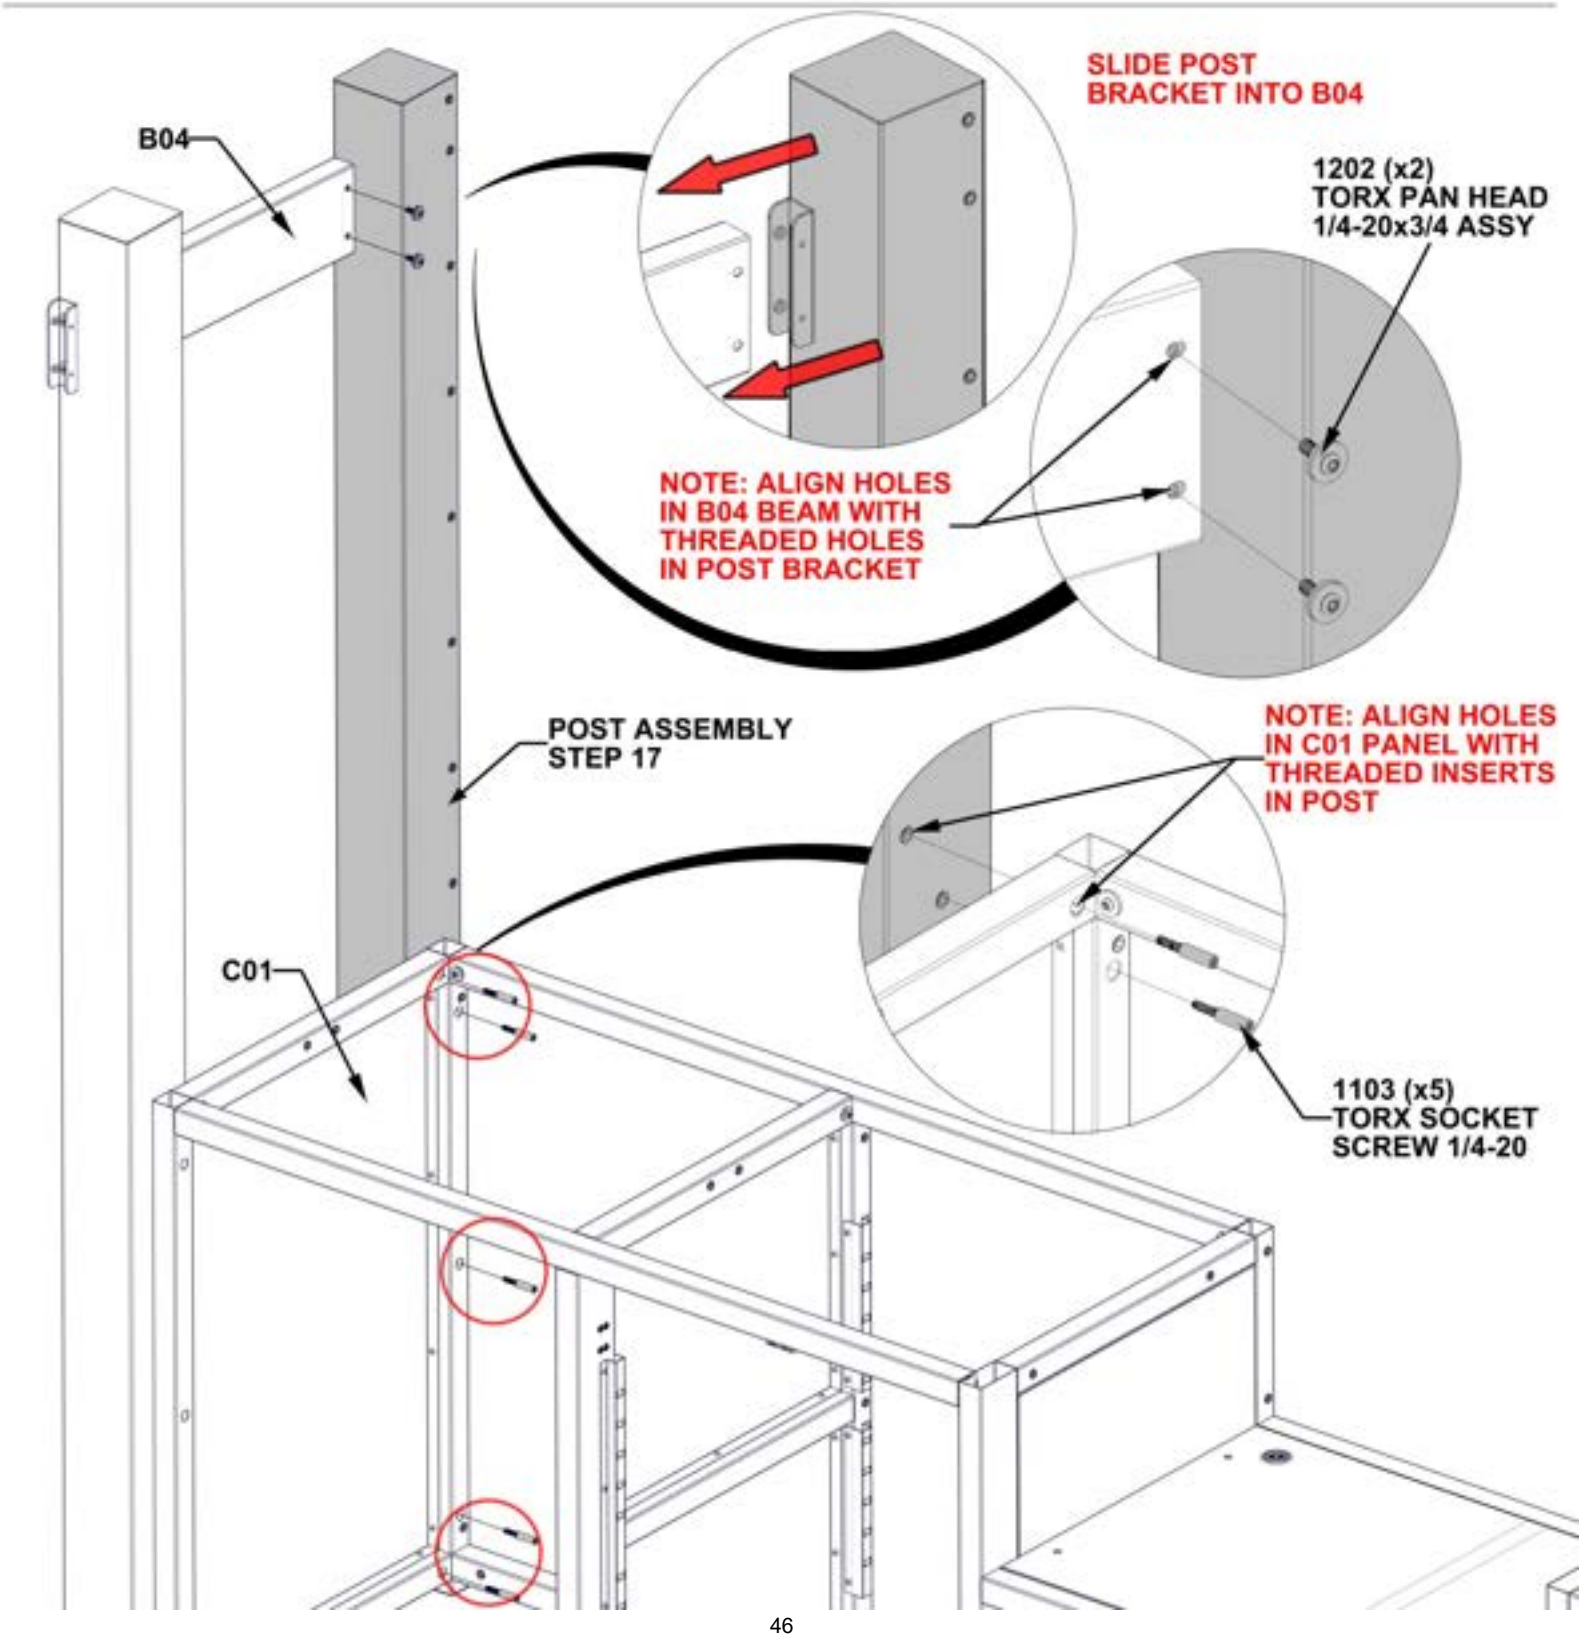

STEP 23 - KITCHEN ASSEMBLY

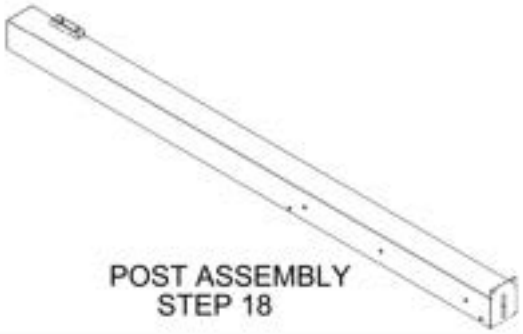

POST ASSEMBLY
STEP 18

QTY	PART NUMBER	Description
5	H101103	TORX SOCKET SCREW 1/4-20

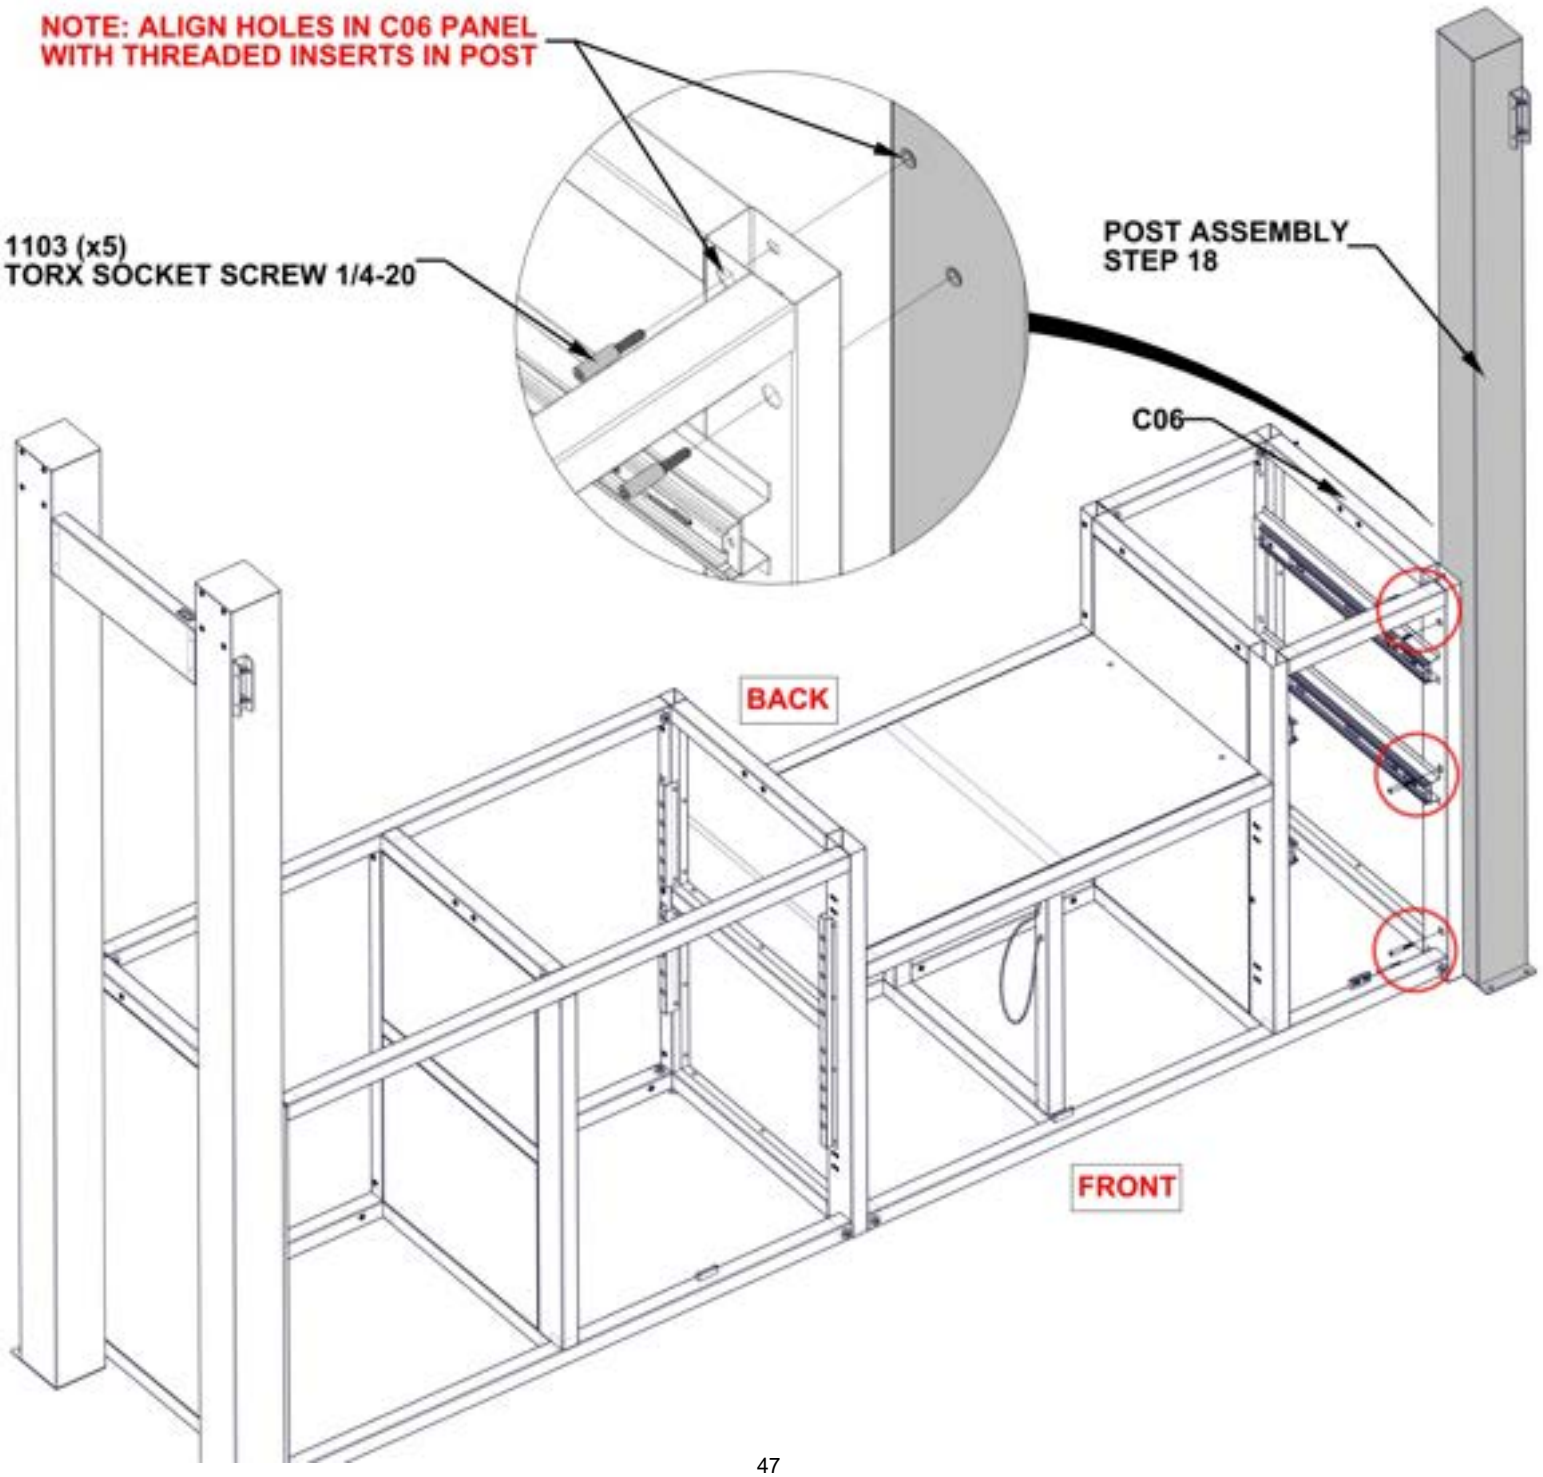

STEP 24 - KITCHEN ASSEMBLY

B11 SIDE BEAM - A4M02106
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

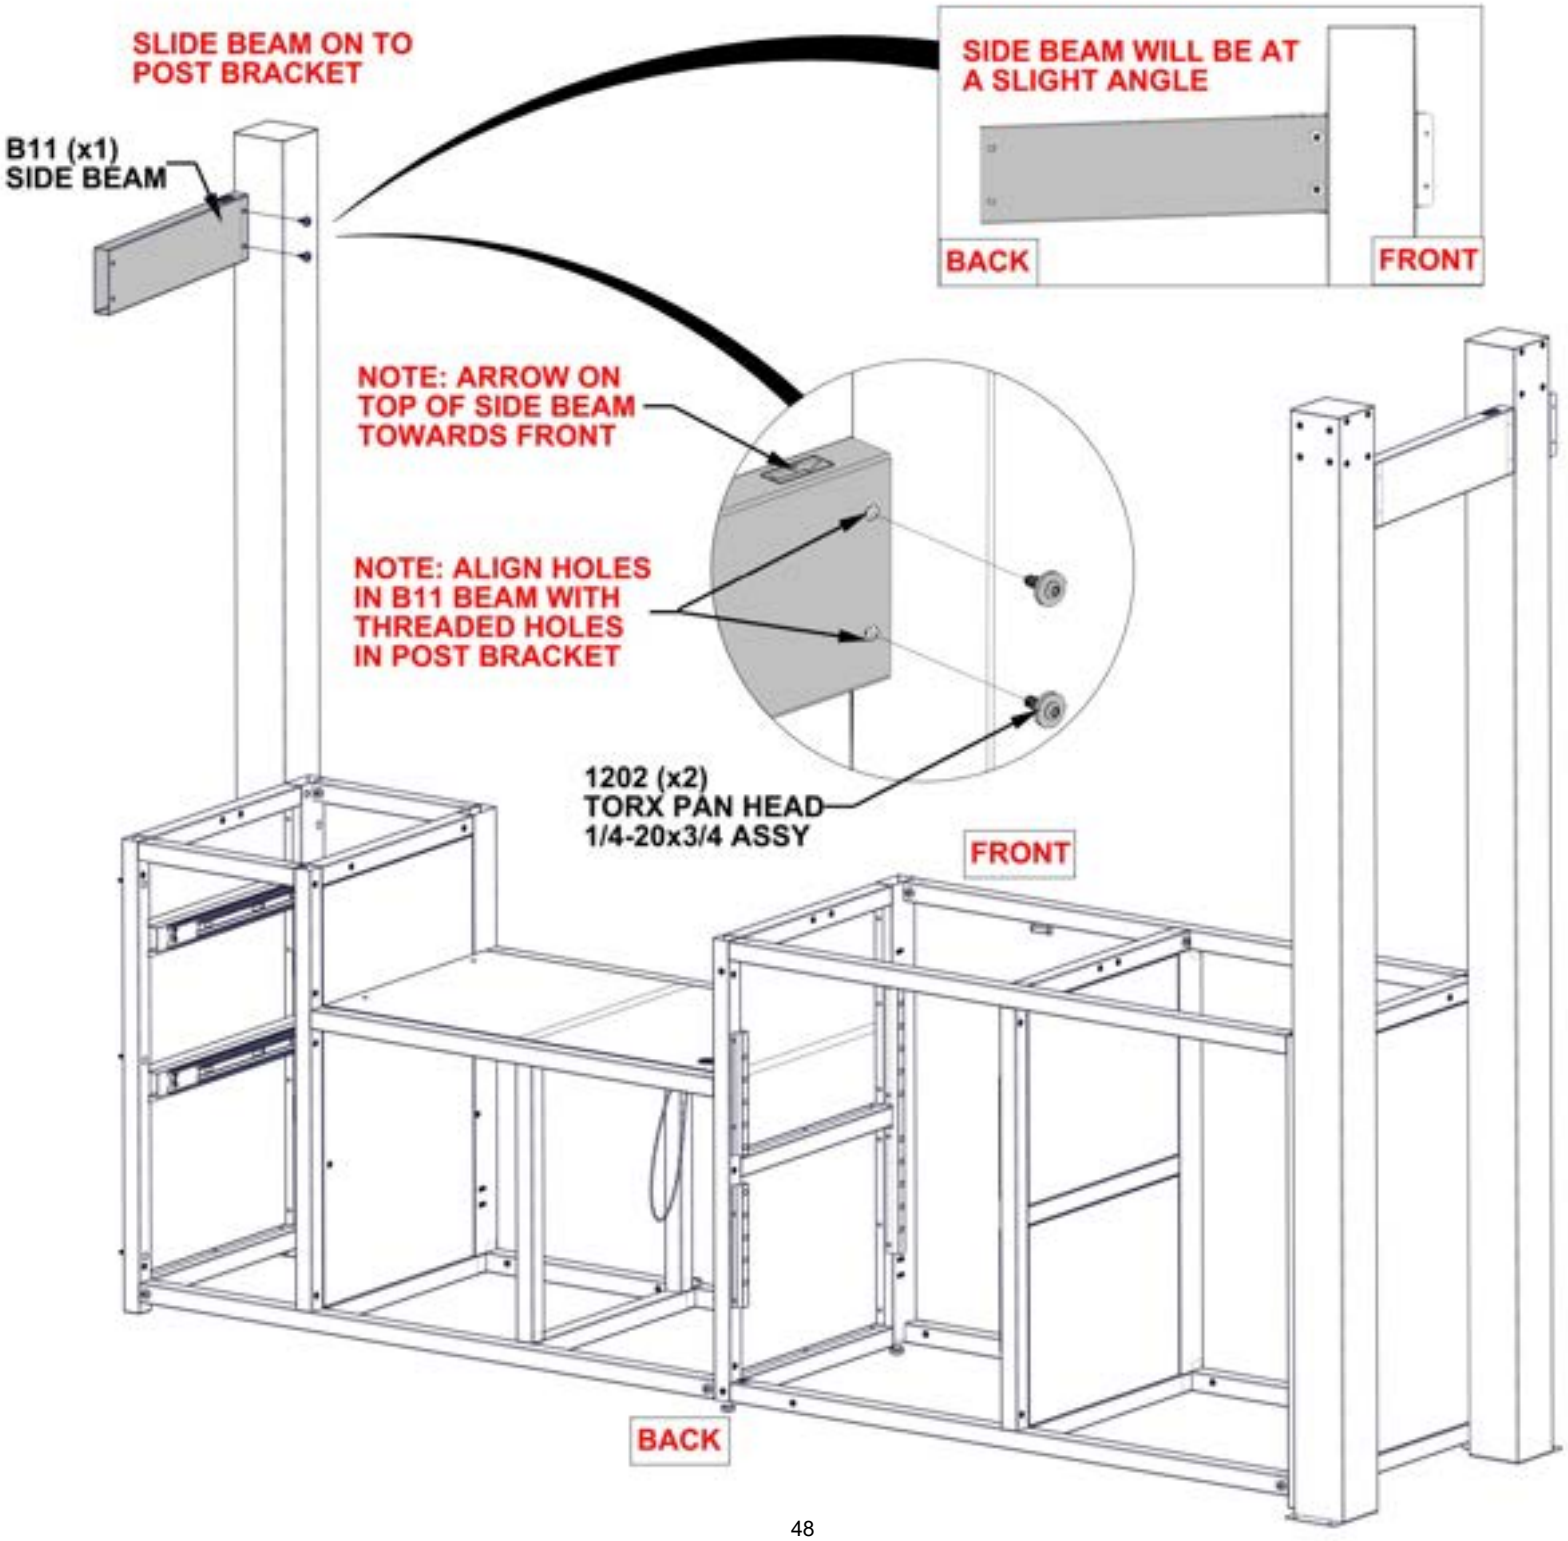

STEP 25 - KITCHEN ASSEMBLY

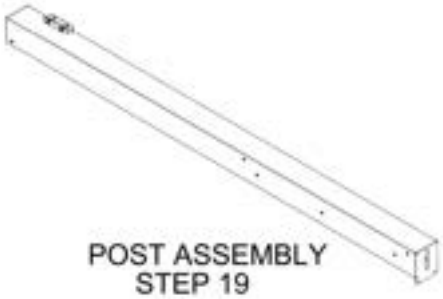

POST ASSEMBLY
STEP 19

QTY	PART NUMBER	Description
5	H101103	TORX SOCKET SCREW 1/4-20
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

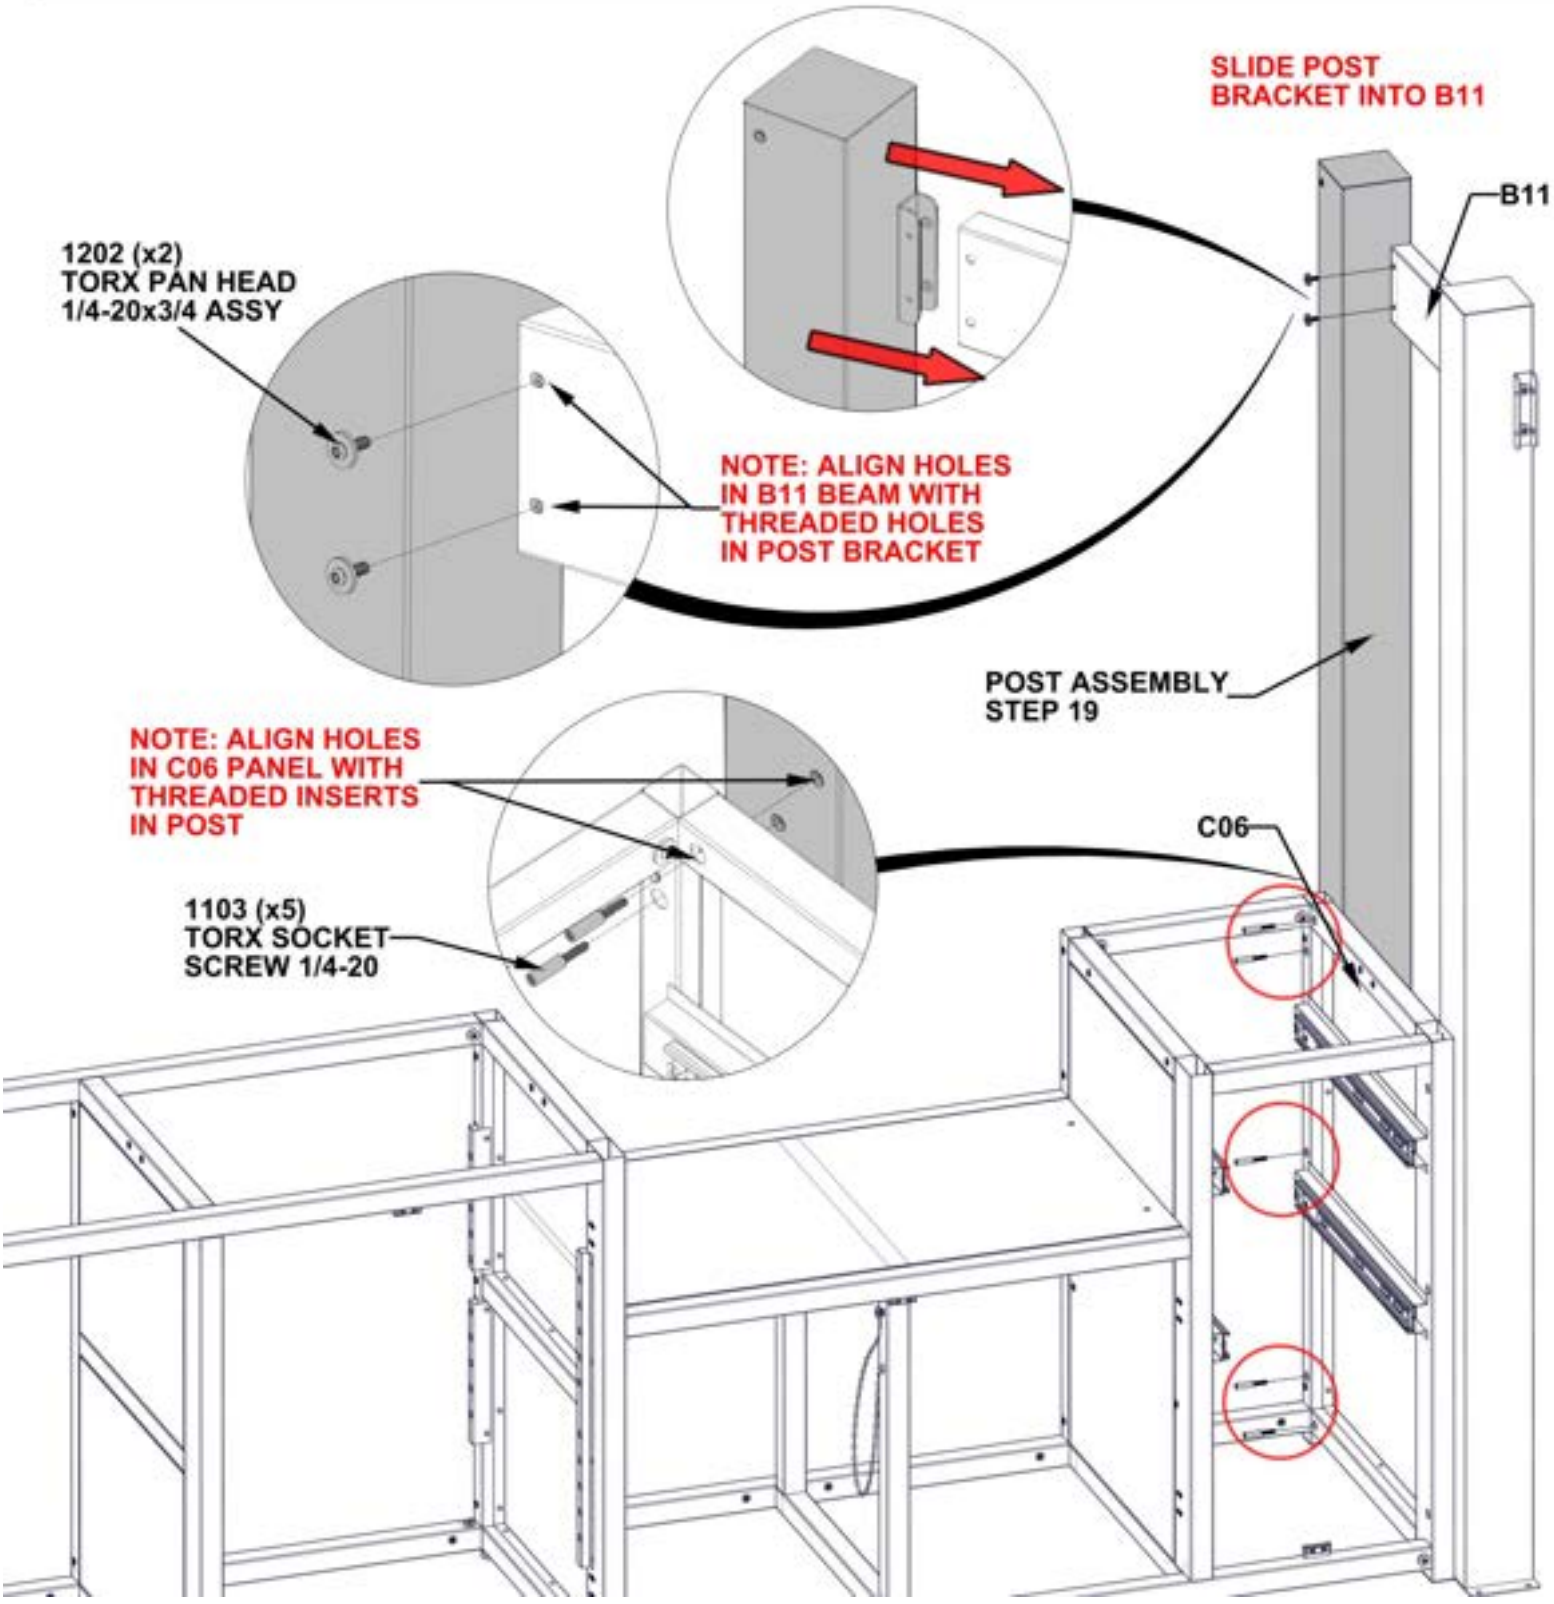

STEP 26 - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
20	H101132	TORX SOCKET SCREW 1/4-20

INSTALL TORX SOCKET SCREWS INTO THREADED INSERT IN BOTTOM FLOOR RAILS

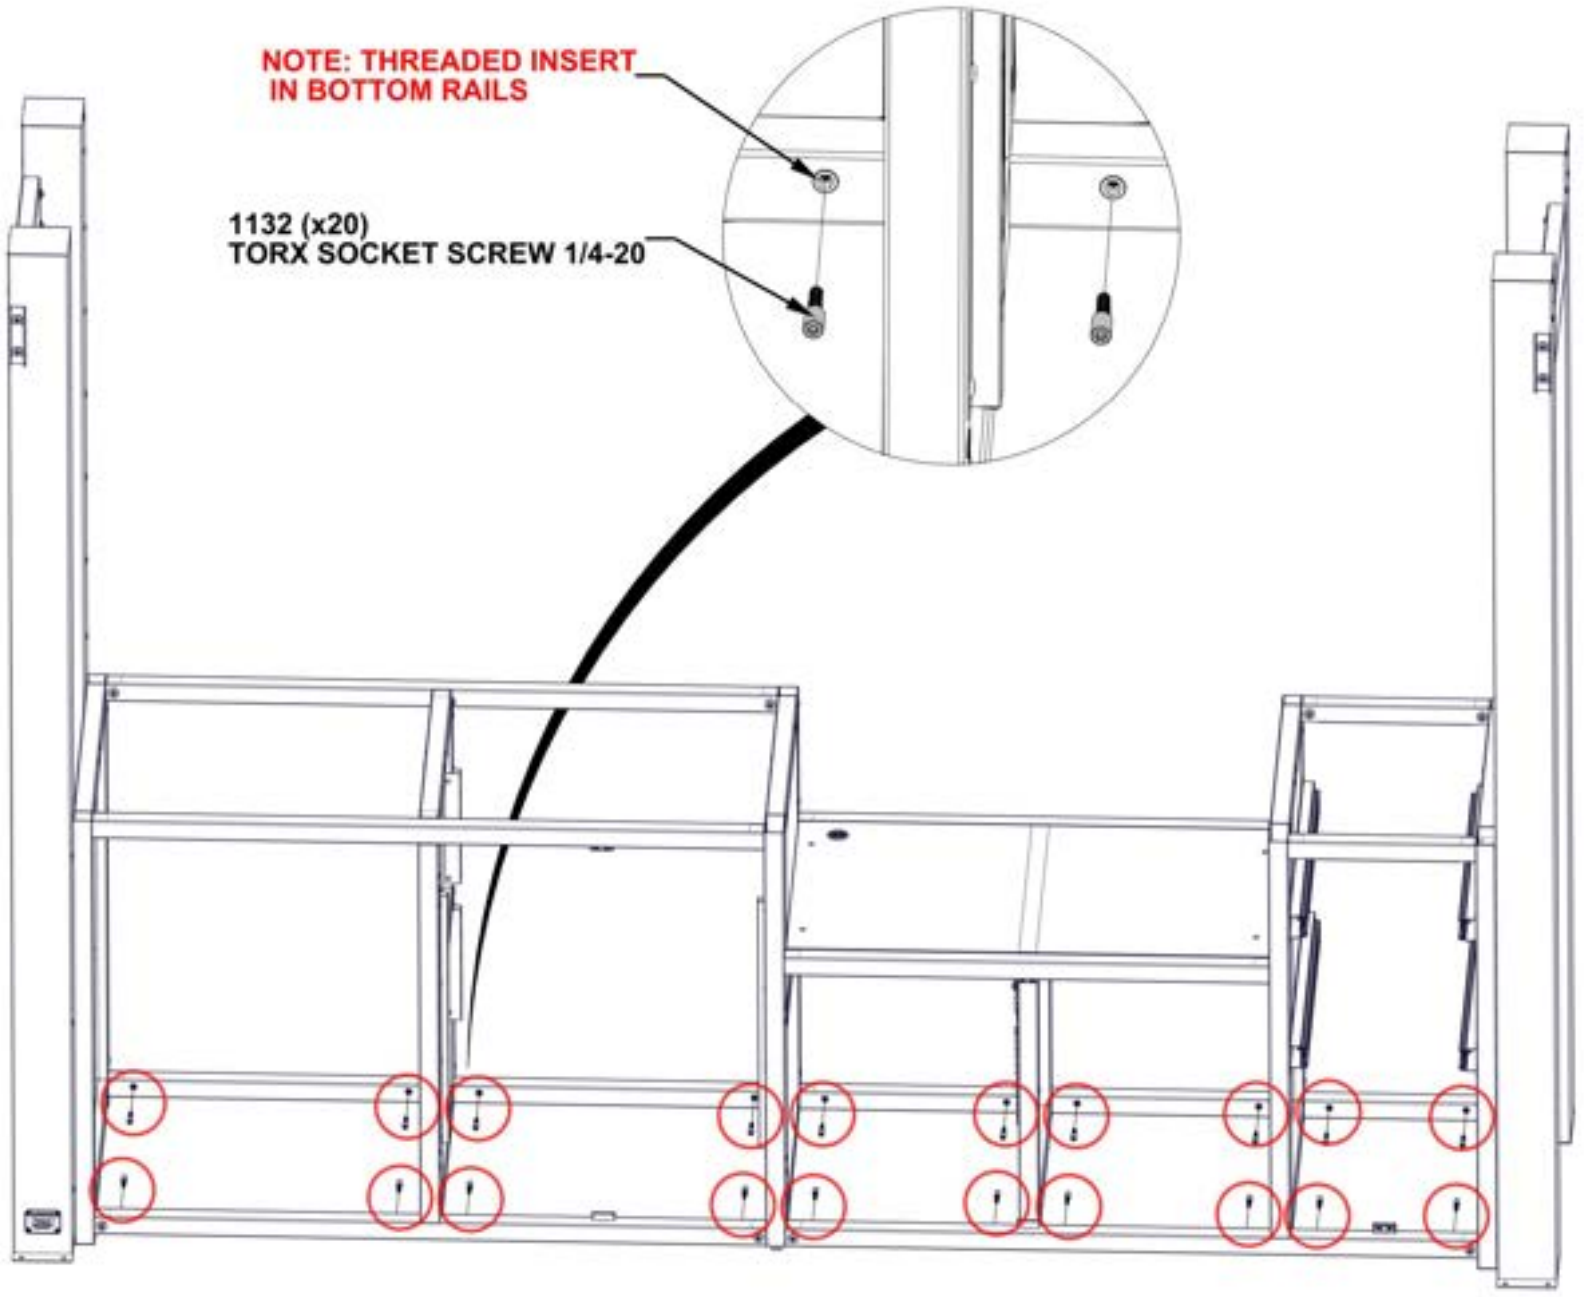

STEP 27 - KITCHEN ASSEMBLY

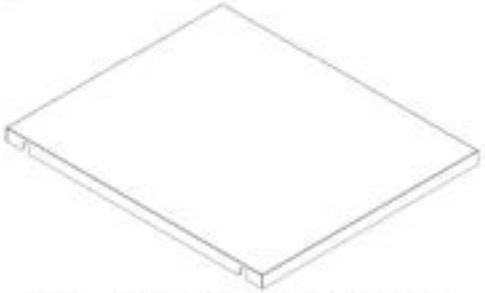

F03 FLOOR PANEL - A4M02202
(x2) 1 3/16"x21 3/4"x25 13/16" (30x553x655)

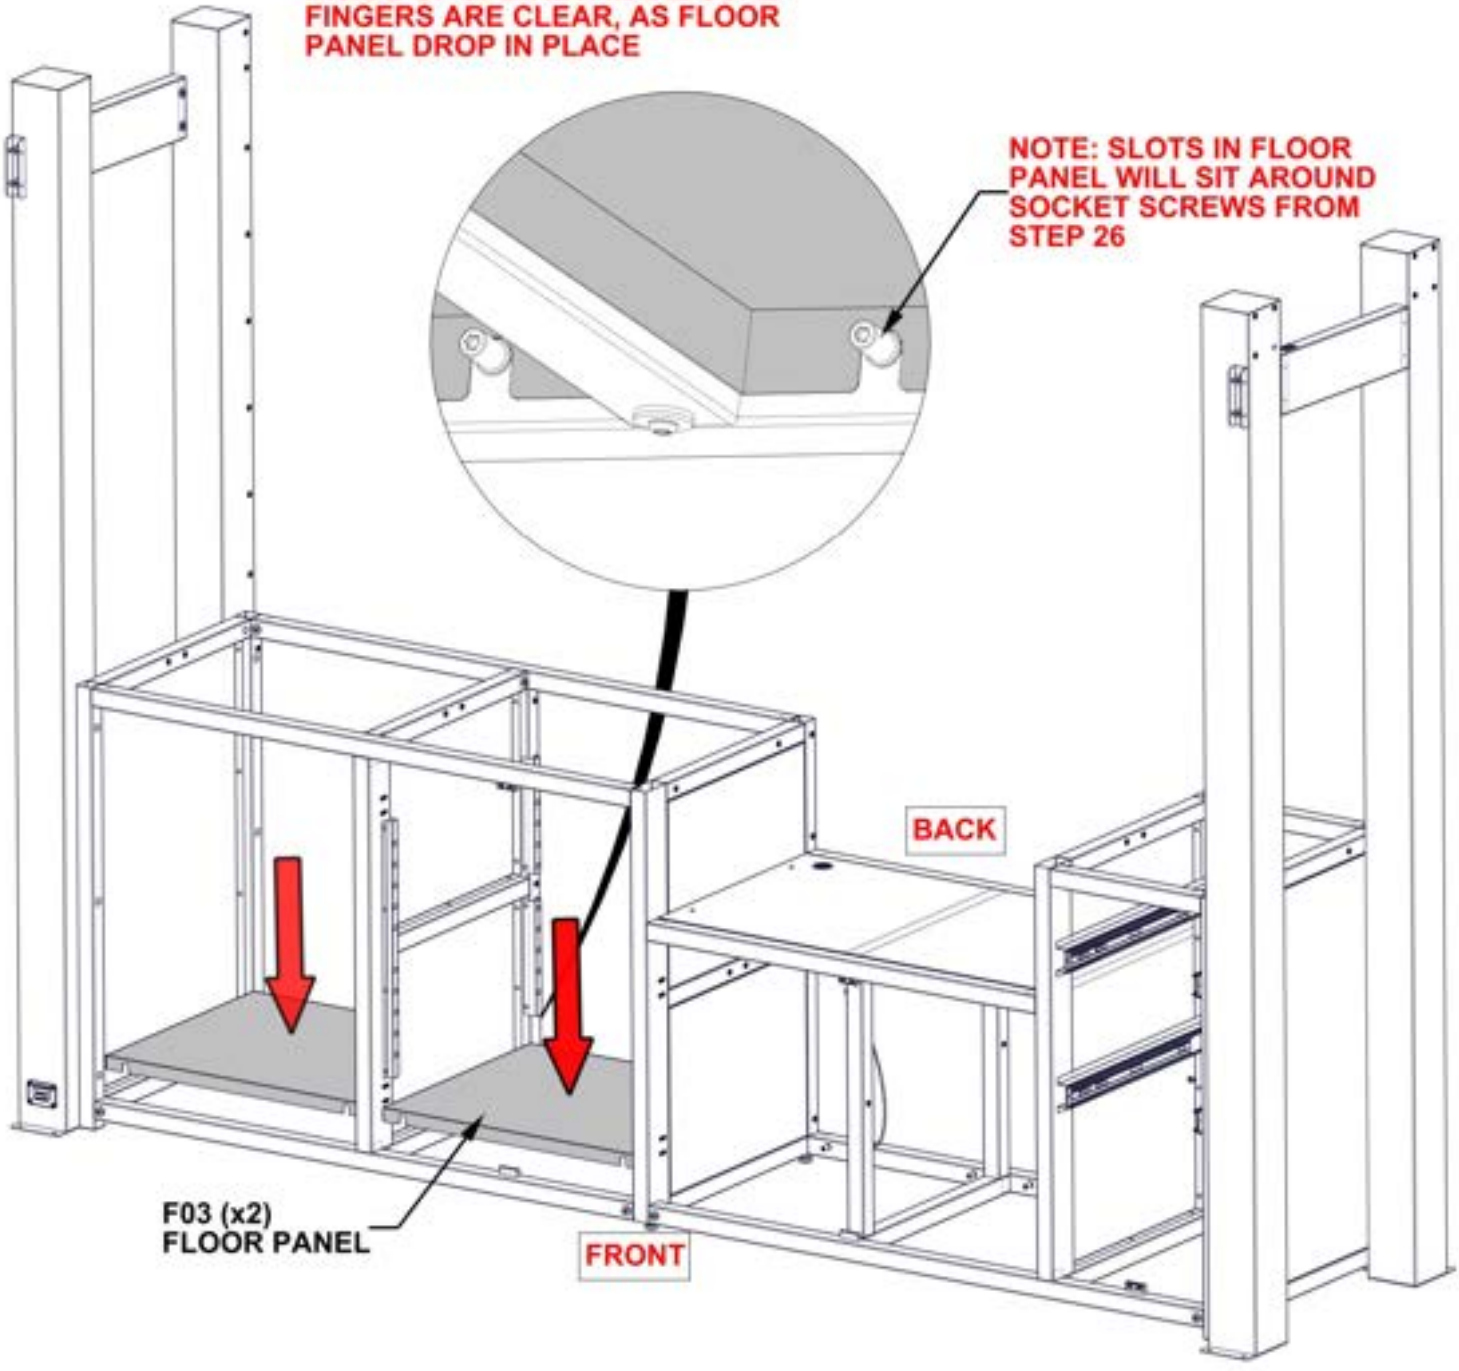

STEP 28A - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

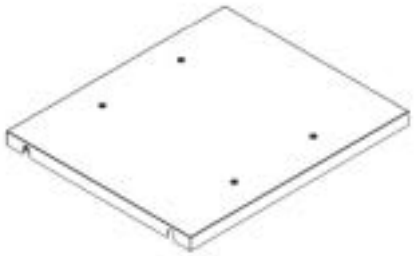

F12 (x1) FLOOR PANEL FOR PROPANE TANK - A4M02173
1 3/16"x18 3/8"x21 3/4" (30x466.5x553)

A12 (x1) PROPANE TANK HOLDER - A4M02028
1 5/8"x11 13/16"x14 9/16" (41x300x370)

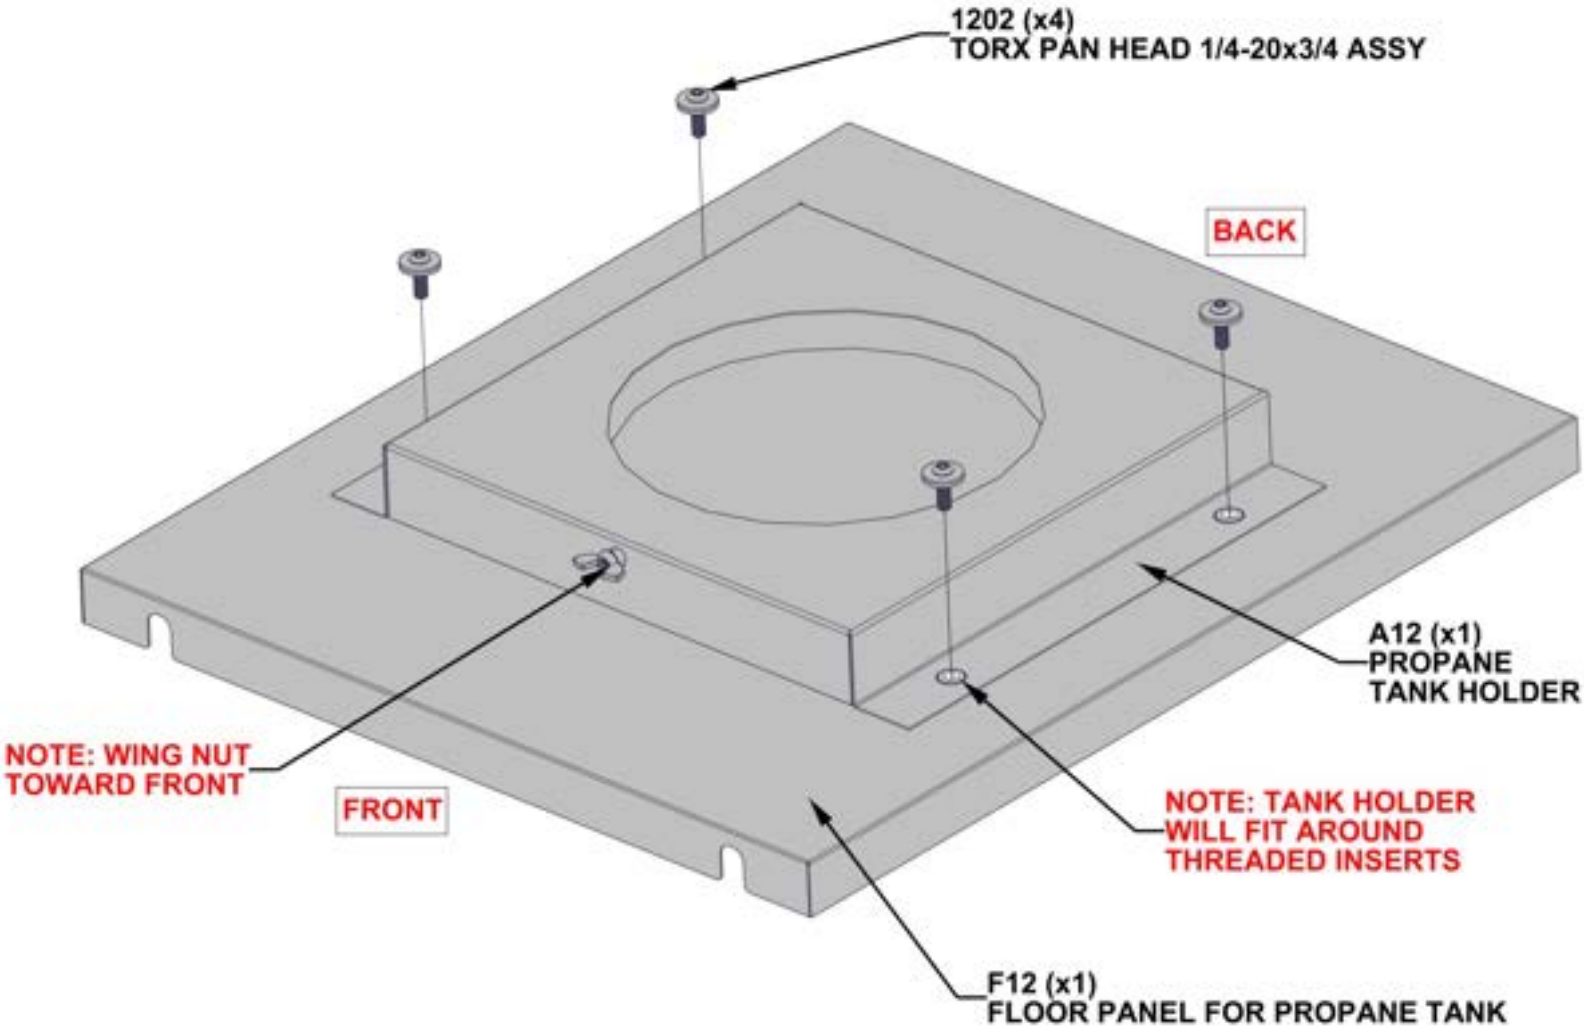

STEP 28B - KITCHEN ASSEMBLY

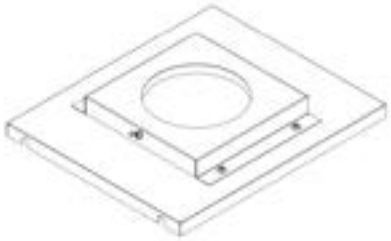

FLOOR PANEL
WITH TANK HOLDER
STEP 28A

INSTALL FLOOR PANEL FROM INSIDE OF CABINET. MAKE SURE FINGERS ARE CLEAR, AS FLOOR PANEL DROP IN PLACE

NOTE: SLOTS IN FLOOR PANEL WILL SIT AROUND SOCKET SCREWS FROM STEP 26

BACK

FRONT

FLOOR PANEL
WITH TANK HOLDER
STEP 28A

STEP 29 - KITCHEN ASSEMBLY

F10 FLOOR PANEL - A4M02208
(x1) 1 3/16"x18 3/8"x21 3/4" (30x467x553)

F11 FLOOR PANEL - A4M02209
(x1) 1 3/16"x14 13/16"x21 3/4" (30x376x553)

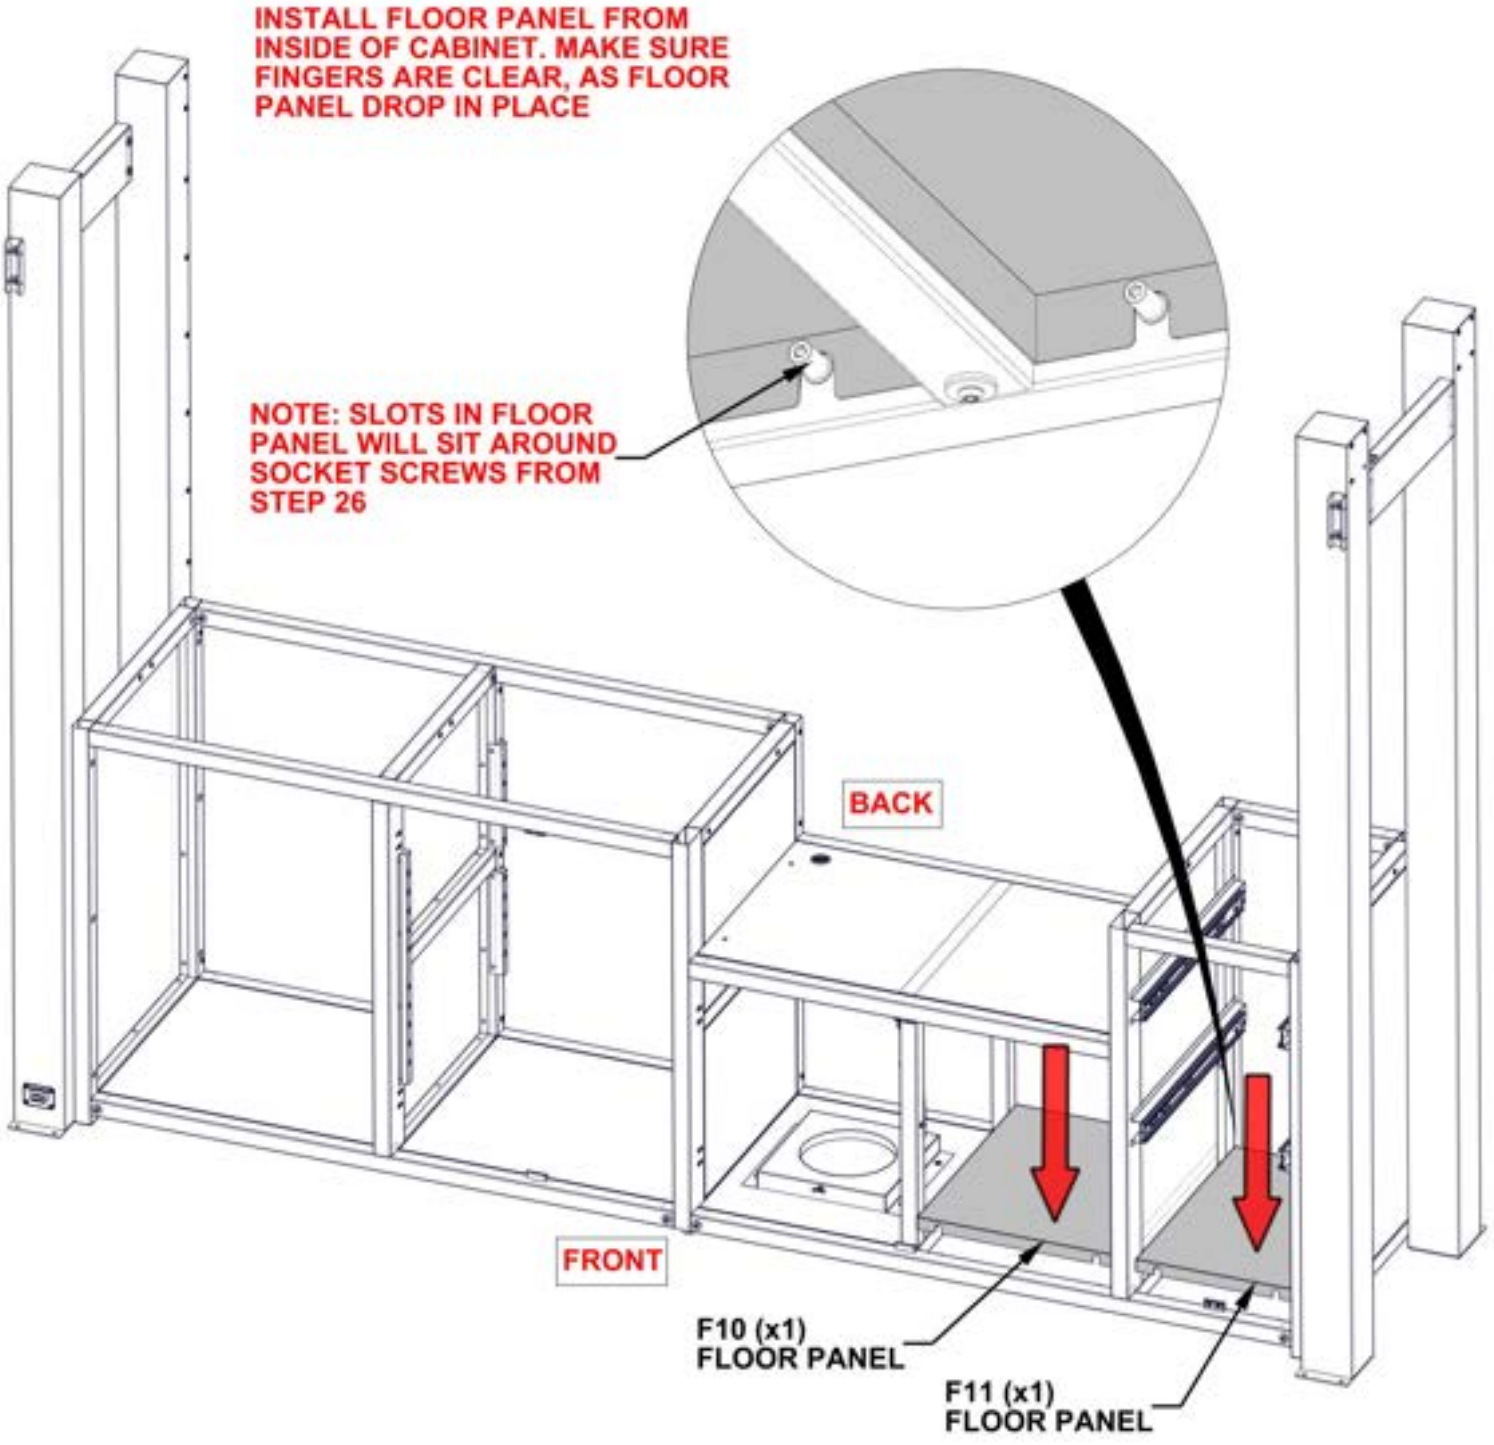

STEP 30 - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

BP05 BACK PANEL - A4M02055
(x1) 1 3/16"x25 13/16"x33 13/16" (30x656x859)

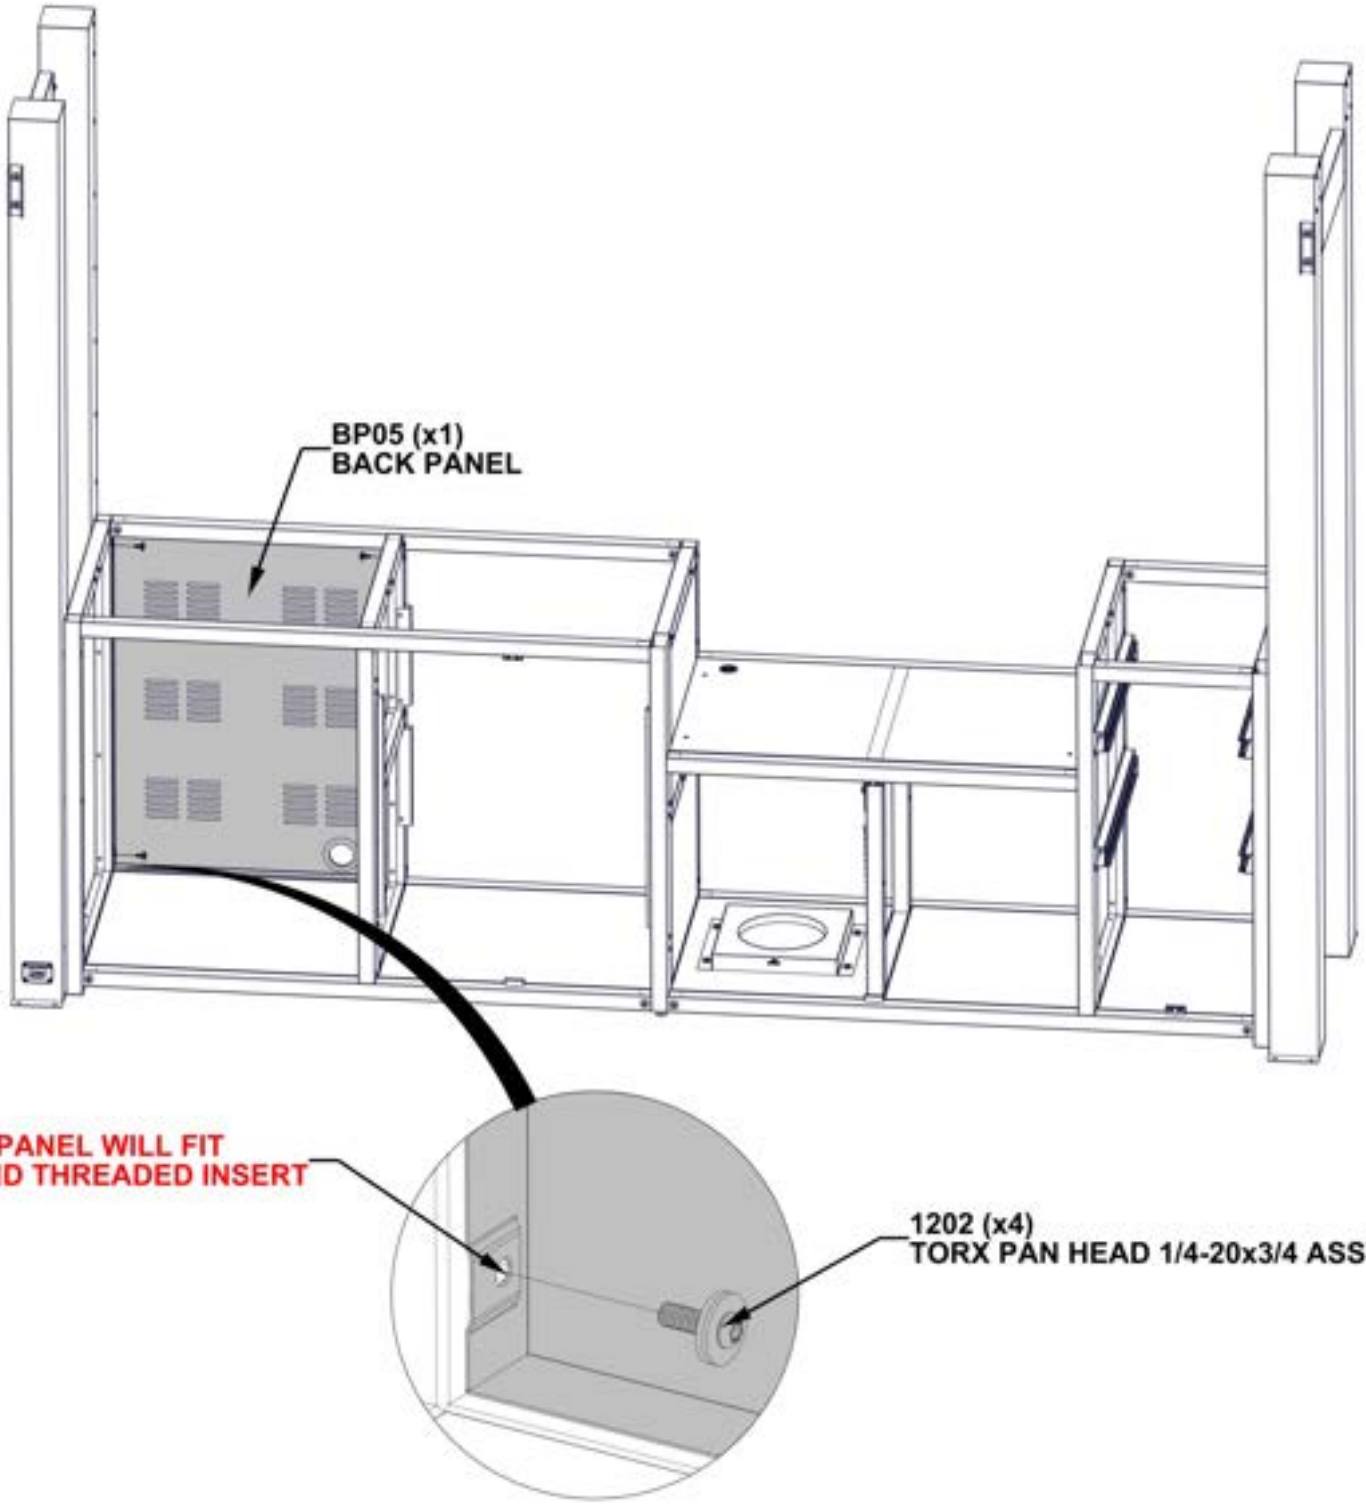

STEP 31 - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

BP04 BACK PANEL - A4M02054
(x1) 1 3/16"x25 13/16"x33 7/8" (30x656x860)

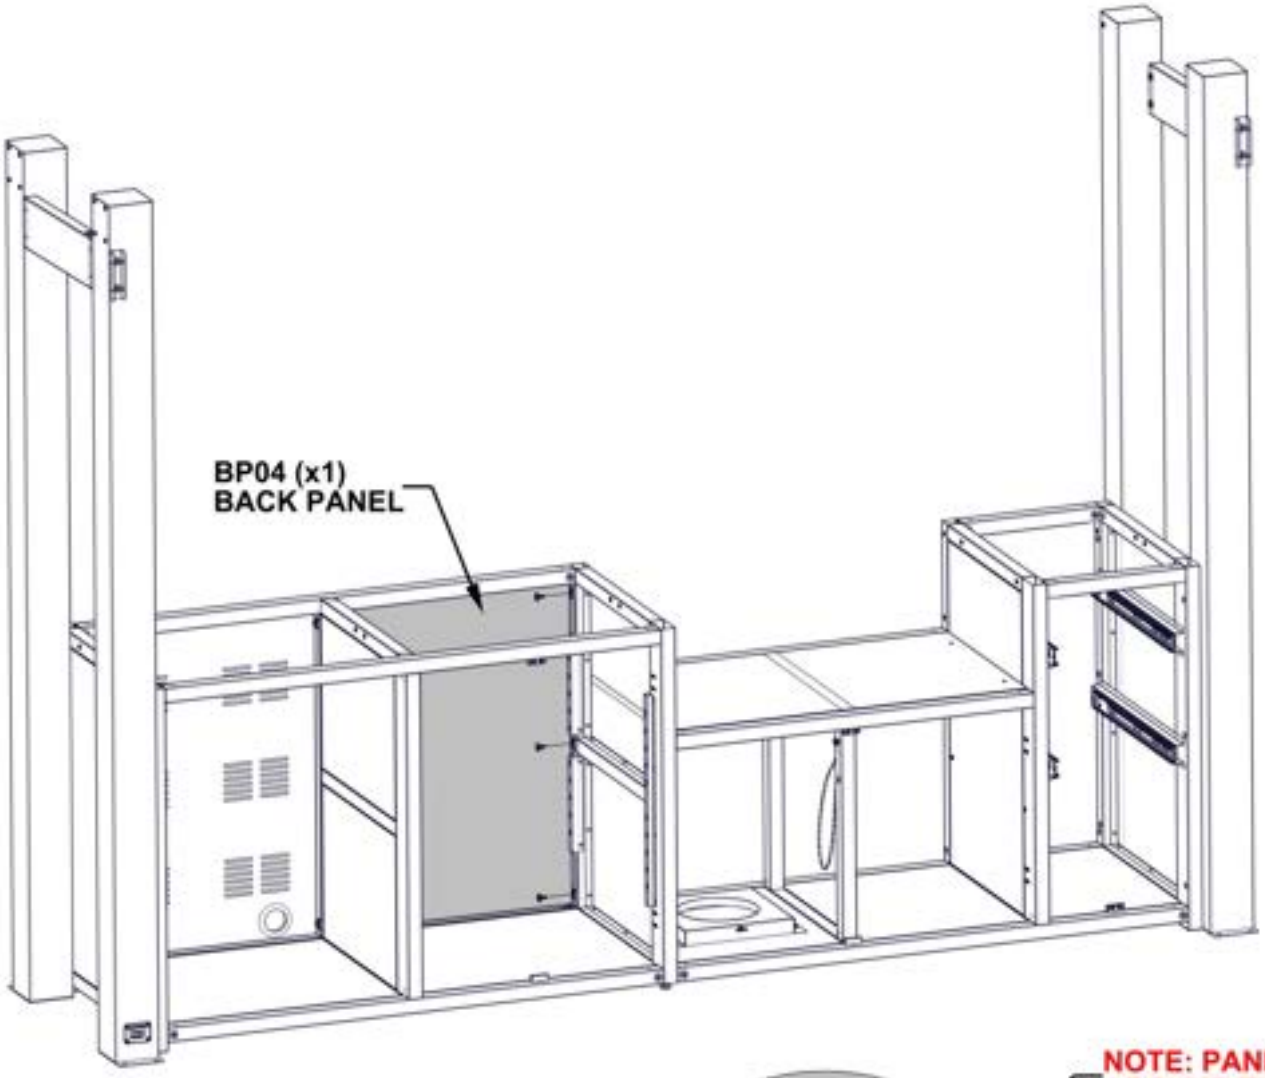

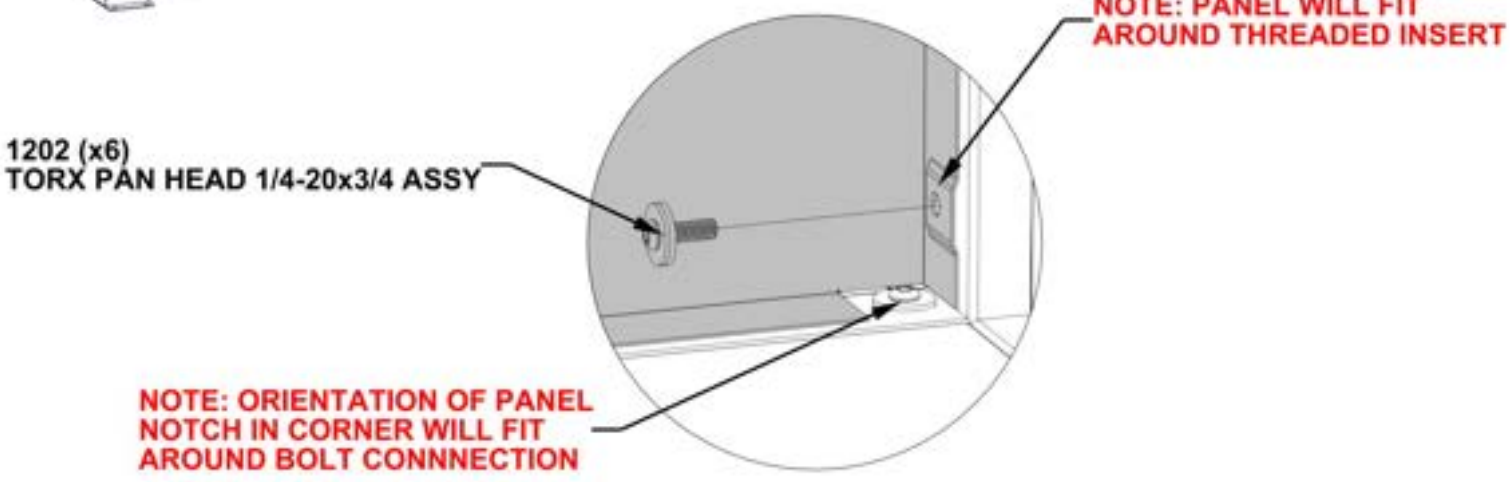

STEP 32 - KITCHEN ASSEMBLY

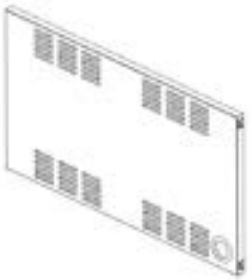

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

BP02 BACK PANEL - A4M03138
(x1) 1 3/16"x22 5/8"x38 7/16" (30x575x976)

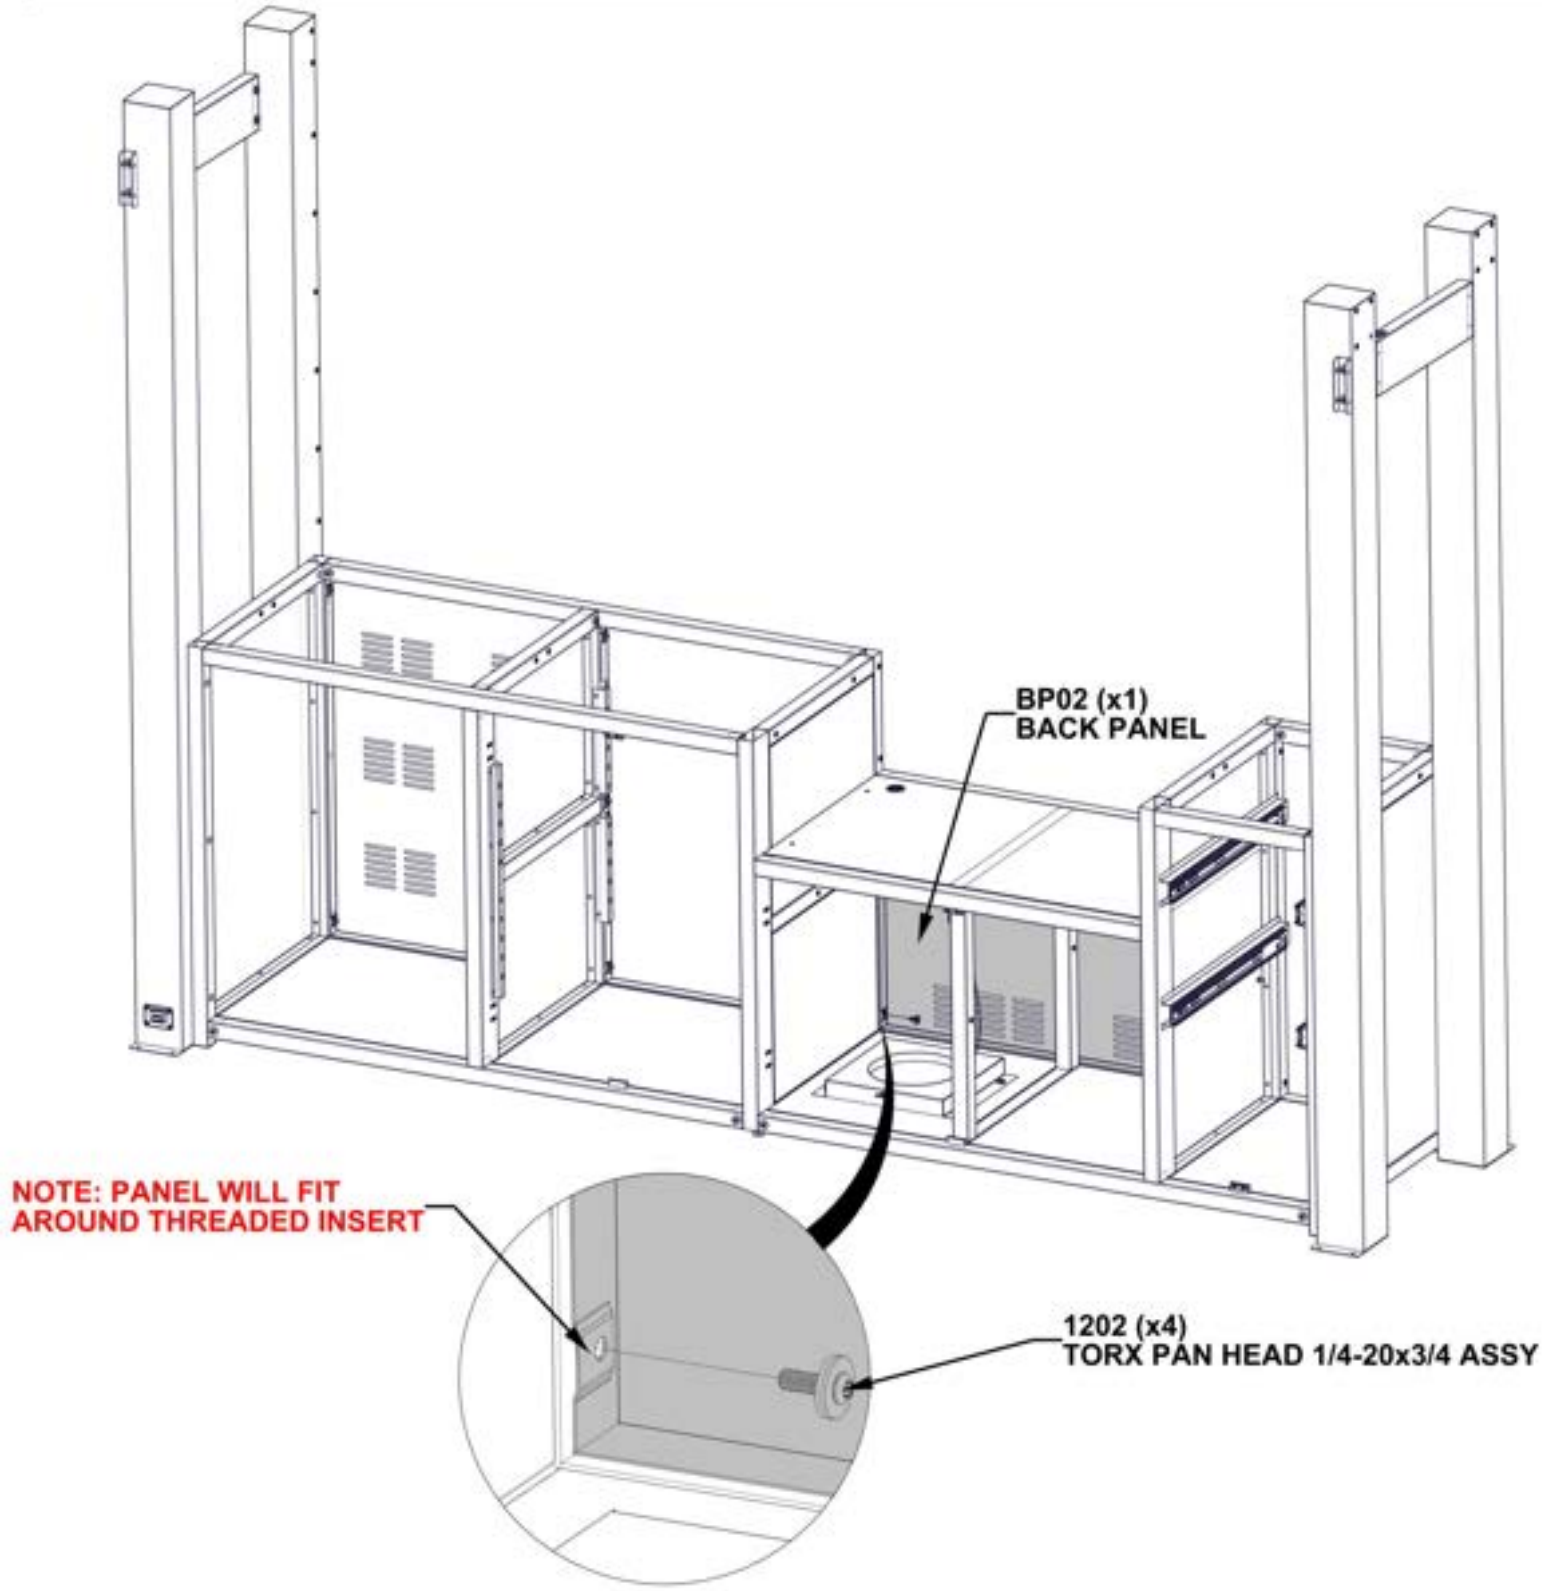

STEP 33 - KITCHEN ASSEMBLY

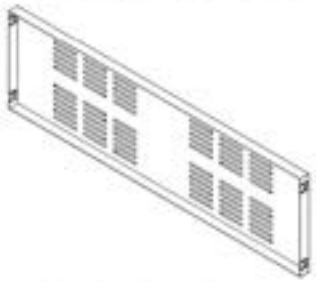

BP03 BACK PANEL - A4M02053
(x1) 1 3/16"x11 3/16"x38 3/8" (30x284x975)

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

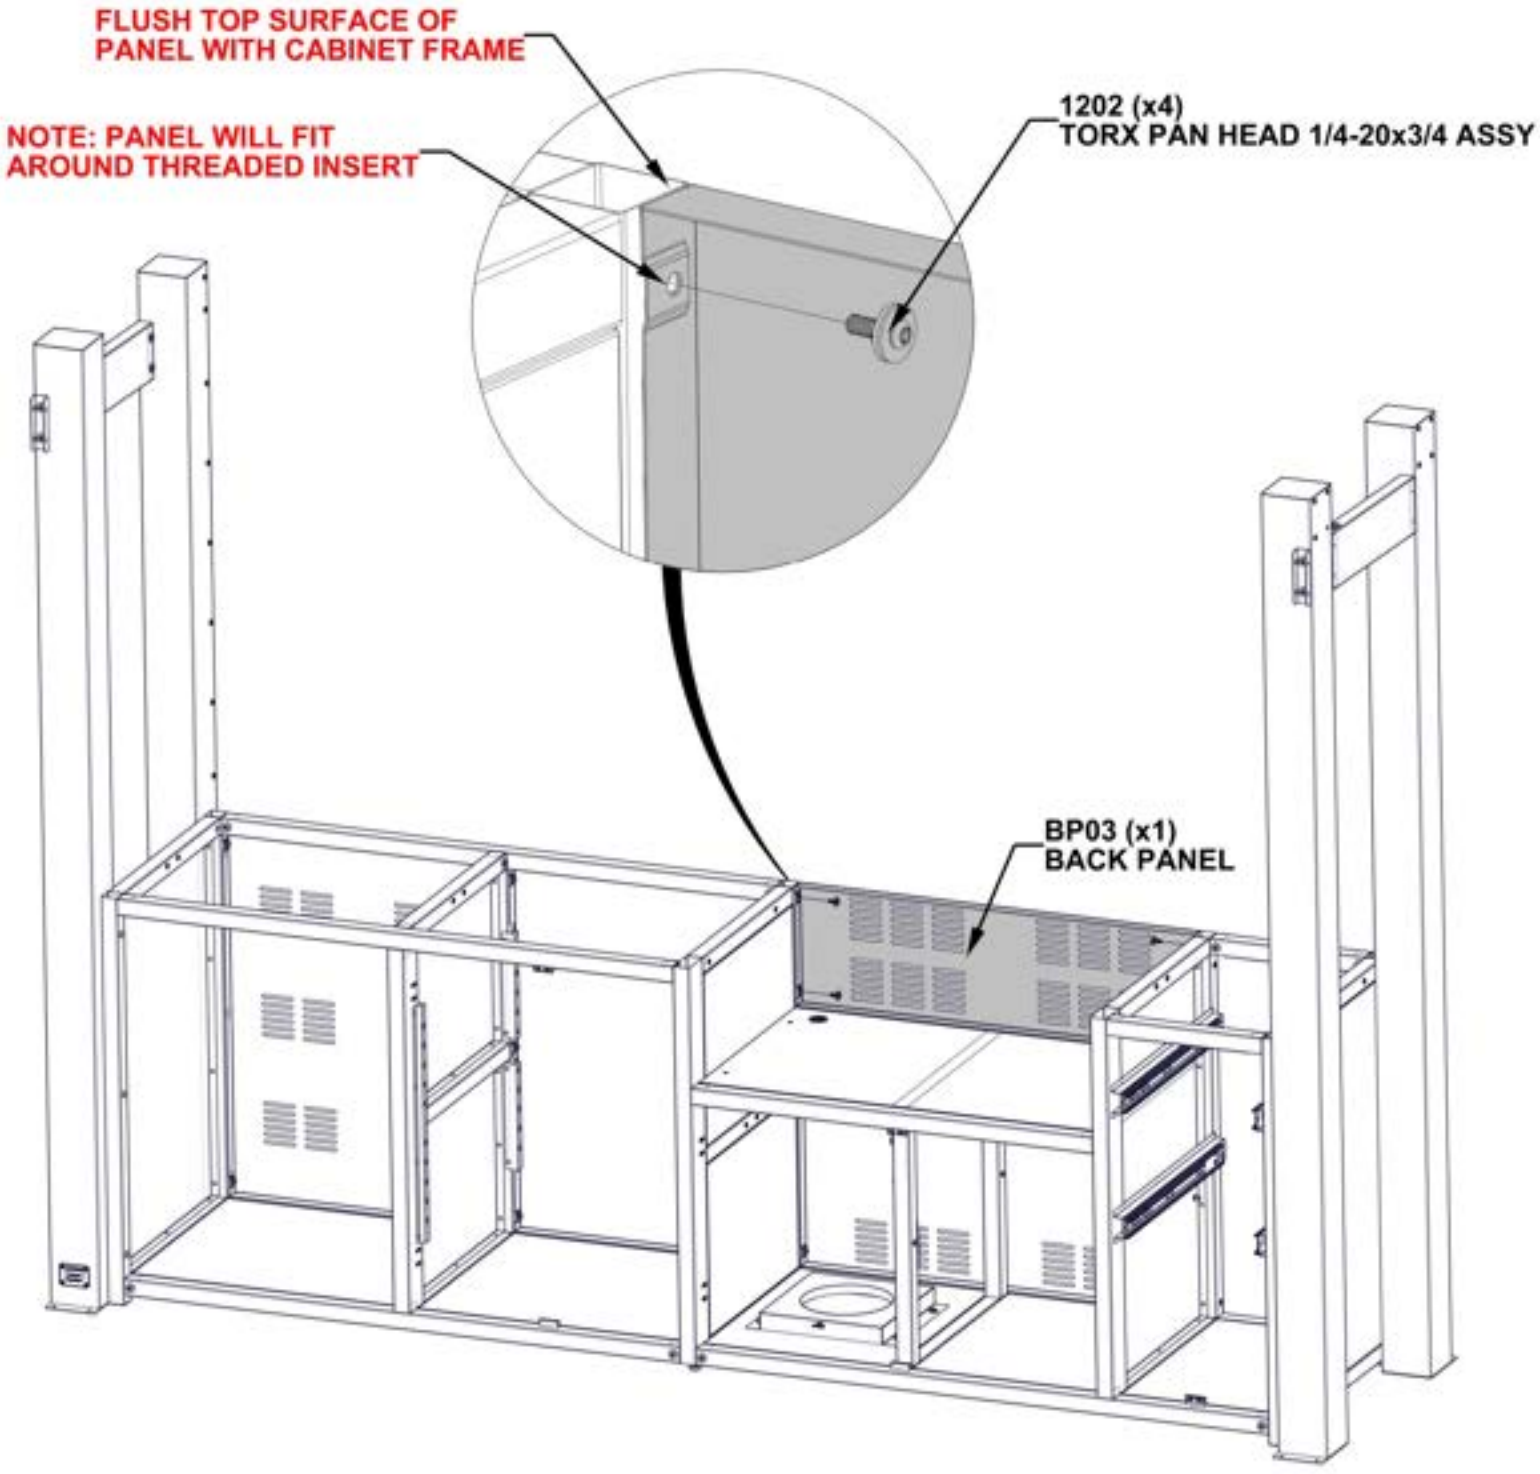

STEP 34 - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

BP01 BACK PANEL - A4M02051
(x1) 1 3/16"x14 13/16"x33 13/16" (30x377x859)

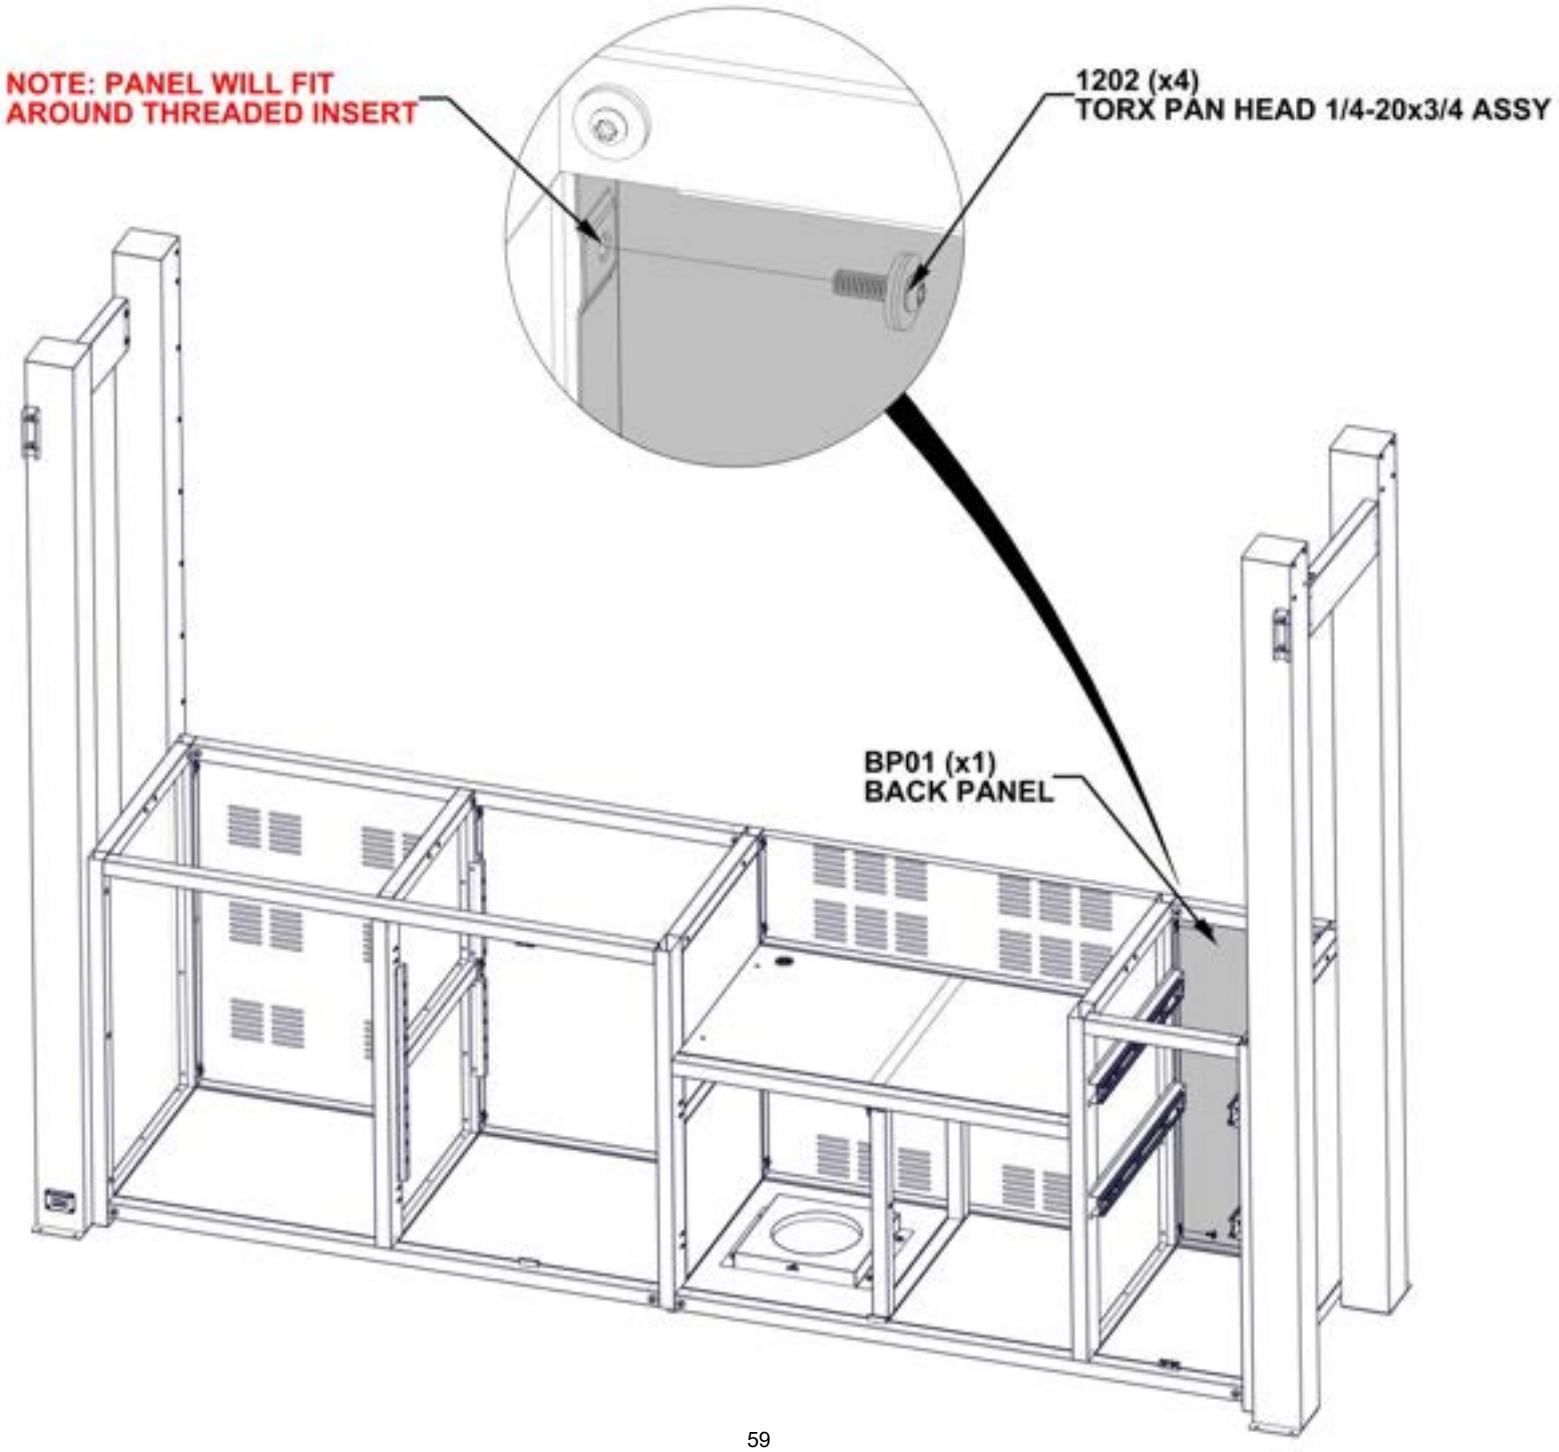

STEP 35 - KITCHEN ASSEMBLY

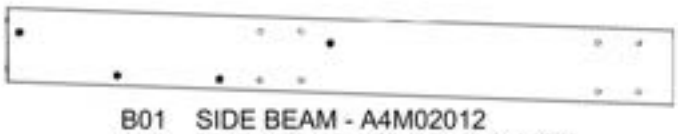

B01 SIDE BEAM - A4M02012
(x1) 36x5 1/4"x46 1/2" (36x134x1181)

QTY	PART NUMBER	Description
8	H101103	TORX SOCKET SCREW 1/4-20

DO NOT TIGHTEN HARDWARE AT THIS STEP

NOTE: SIDE BEAM WILL BE AT A SLIGHT ANGLE

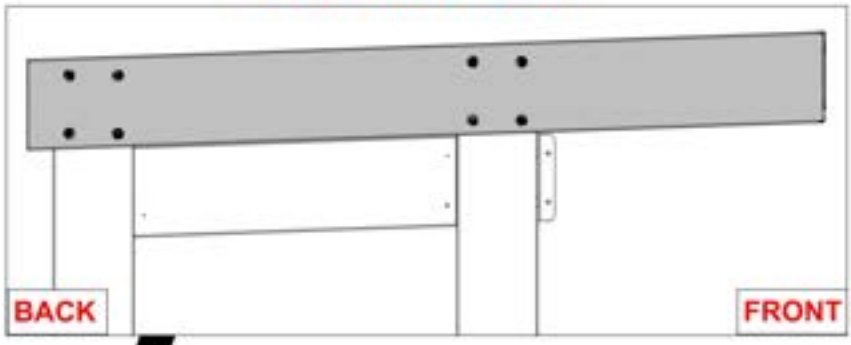

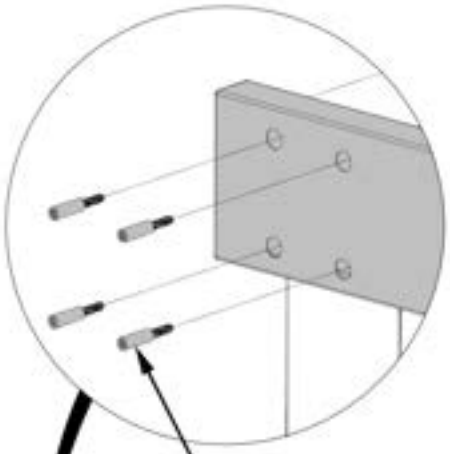

1103 (x8)
TORX SOCKET
SCREW 1/4-20

B01 (x1)
SIDE BEAM

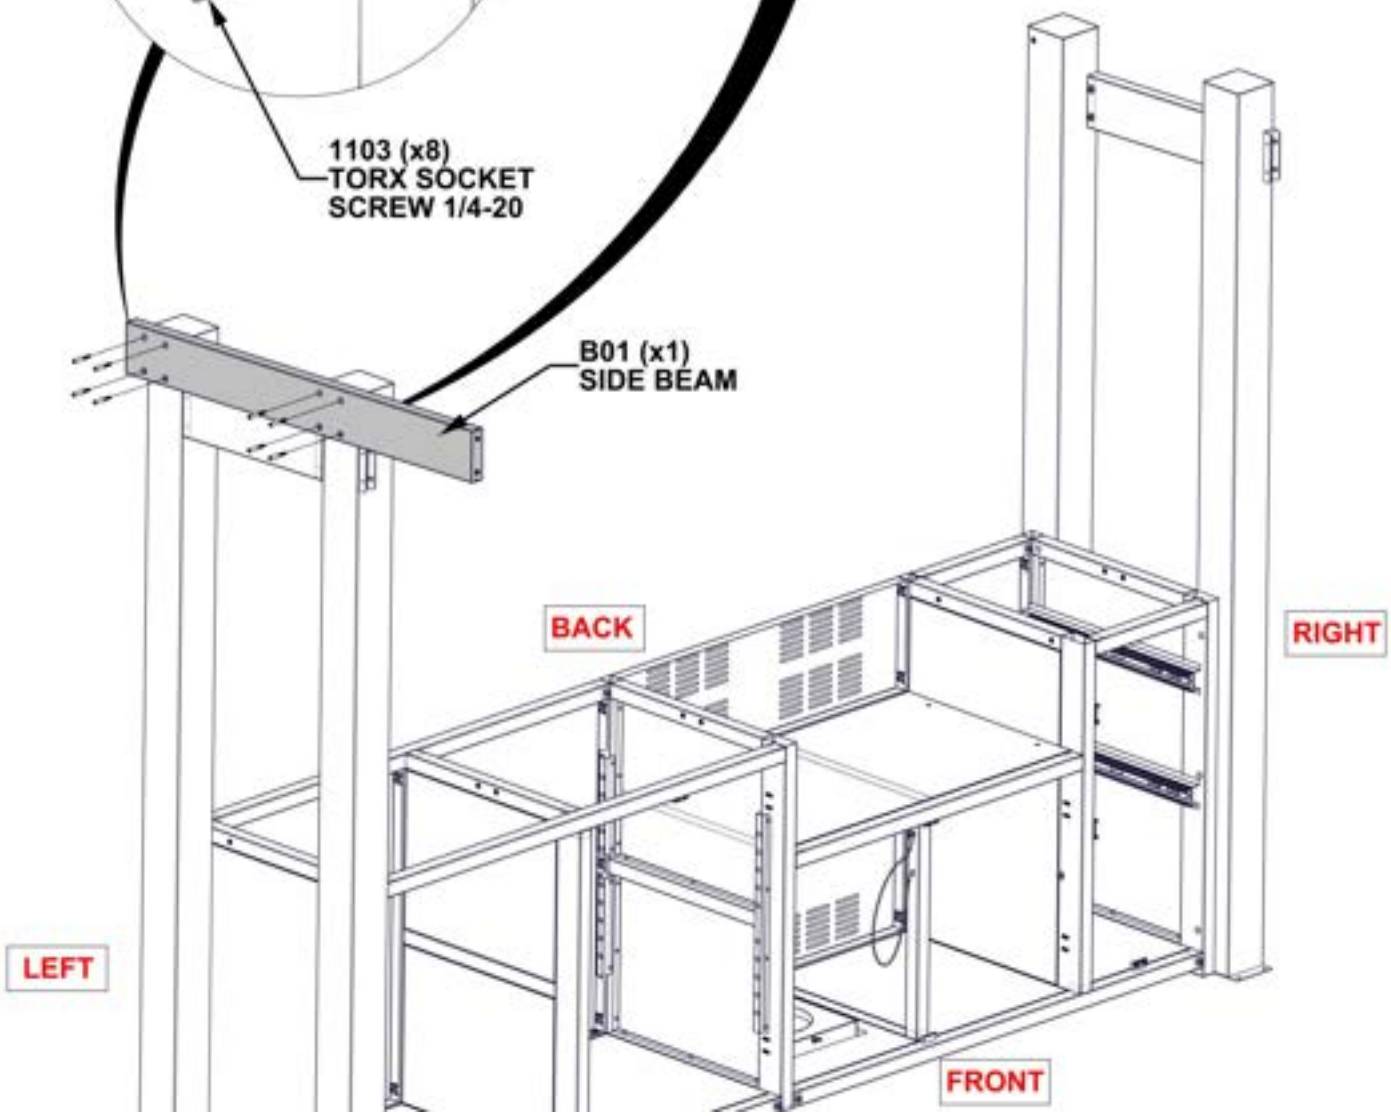

STEP 36A - KITCHEN ASSEMBLY

B09 CORBEL - A4M02042
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)

NOTE: CORBEL BRACKET SLOTS
WILL FIT AROUND THREADED
INSERTS AND FLUSH AGAINST BEAM

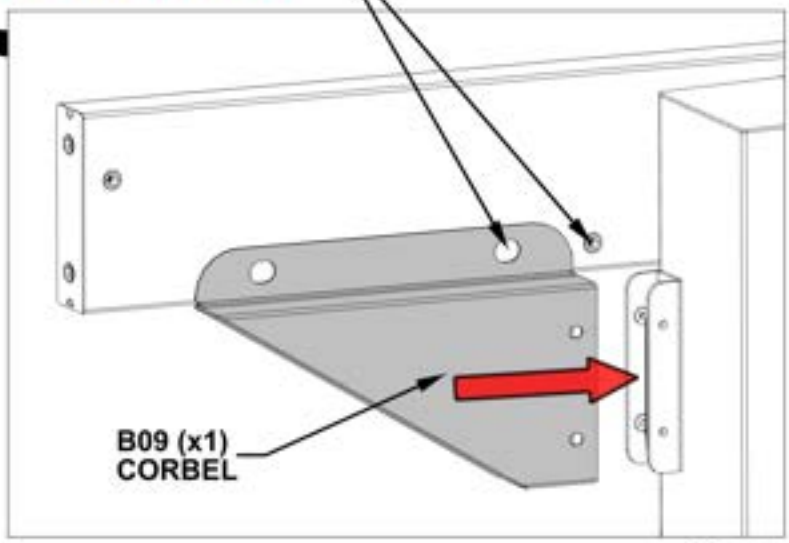

SLIDE CORBEL IN PLACE
UNTIL FLUSH AGAINST POST

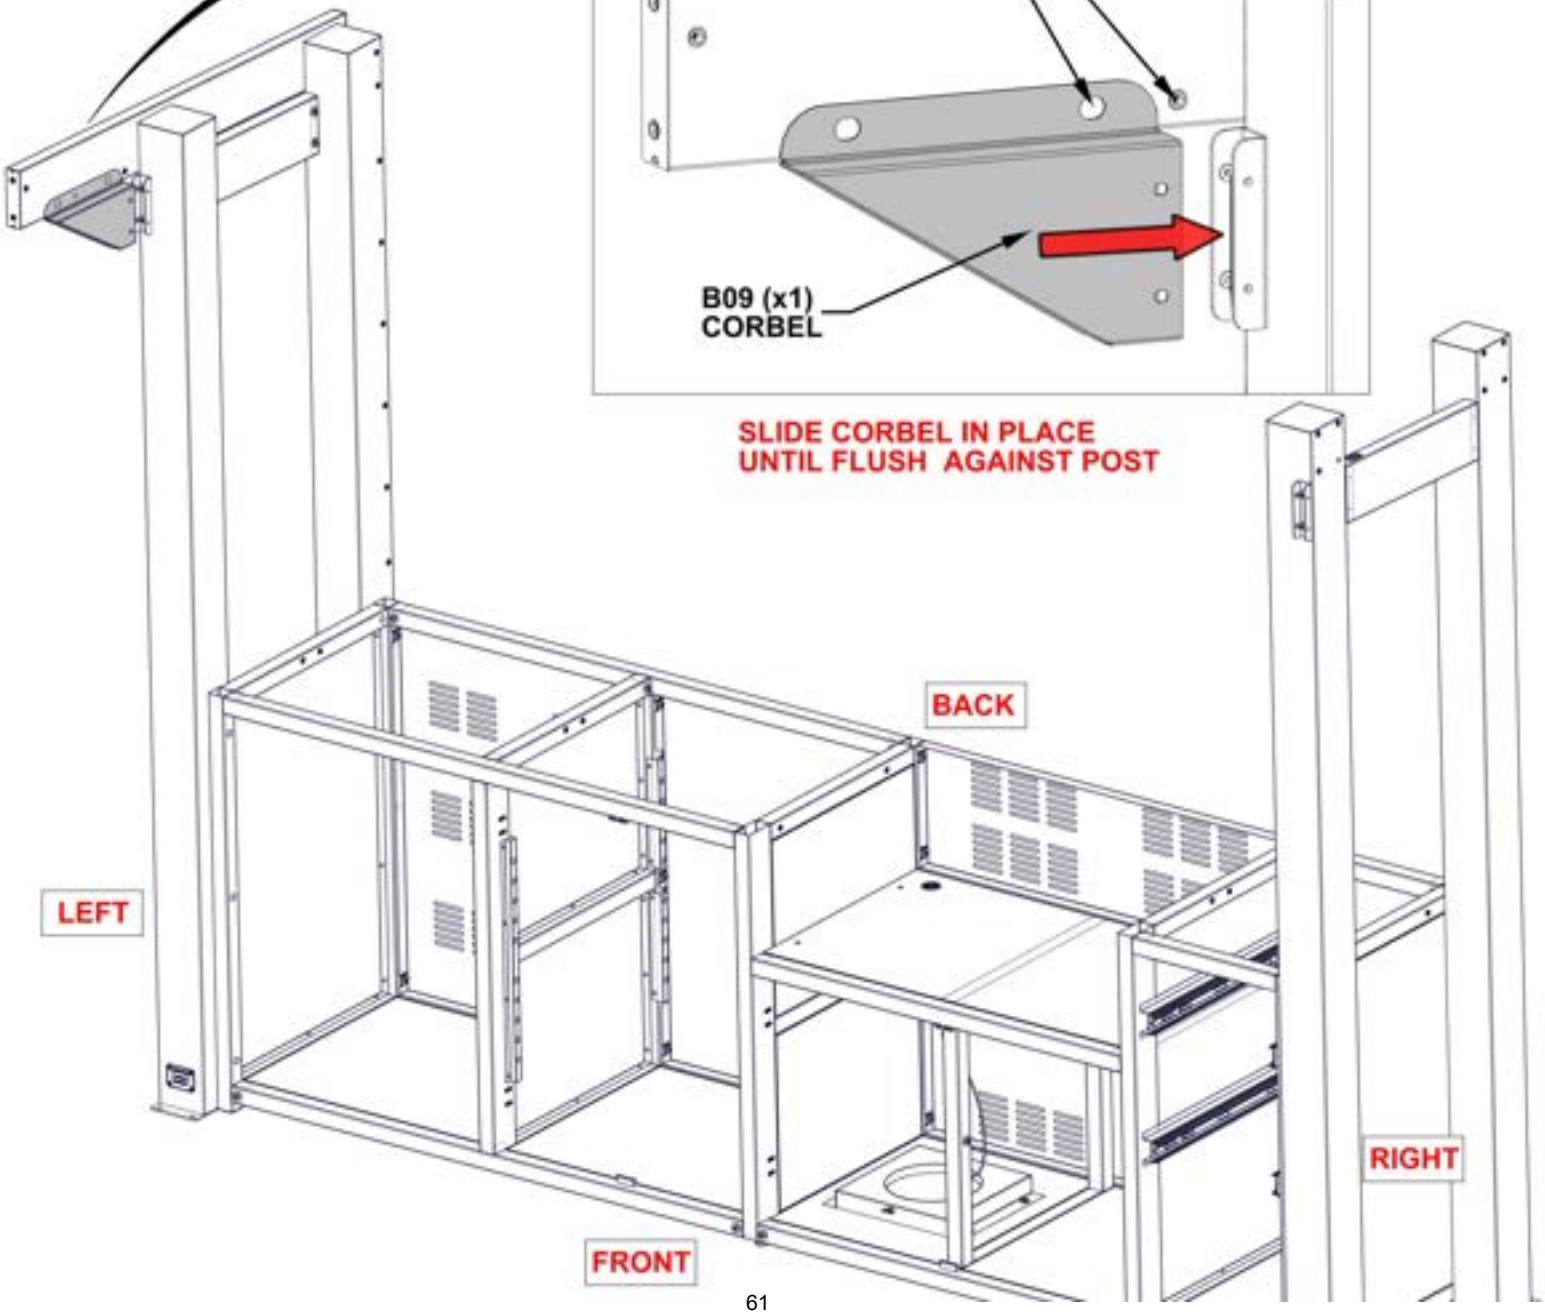

STEP 36B - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

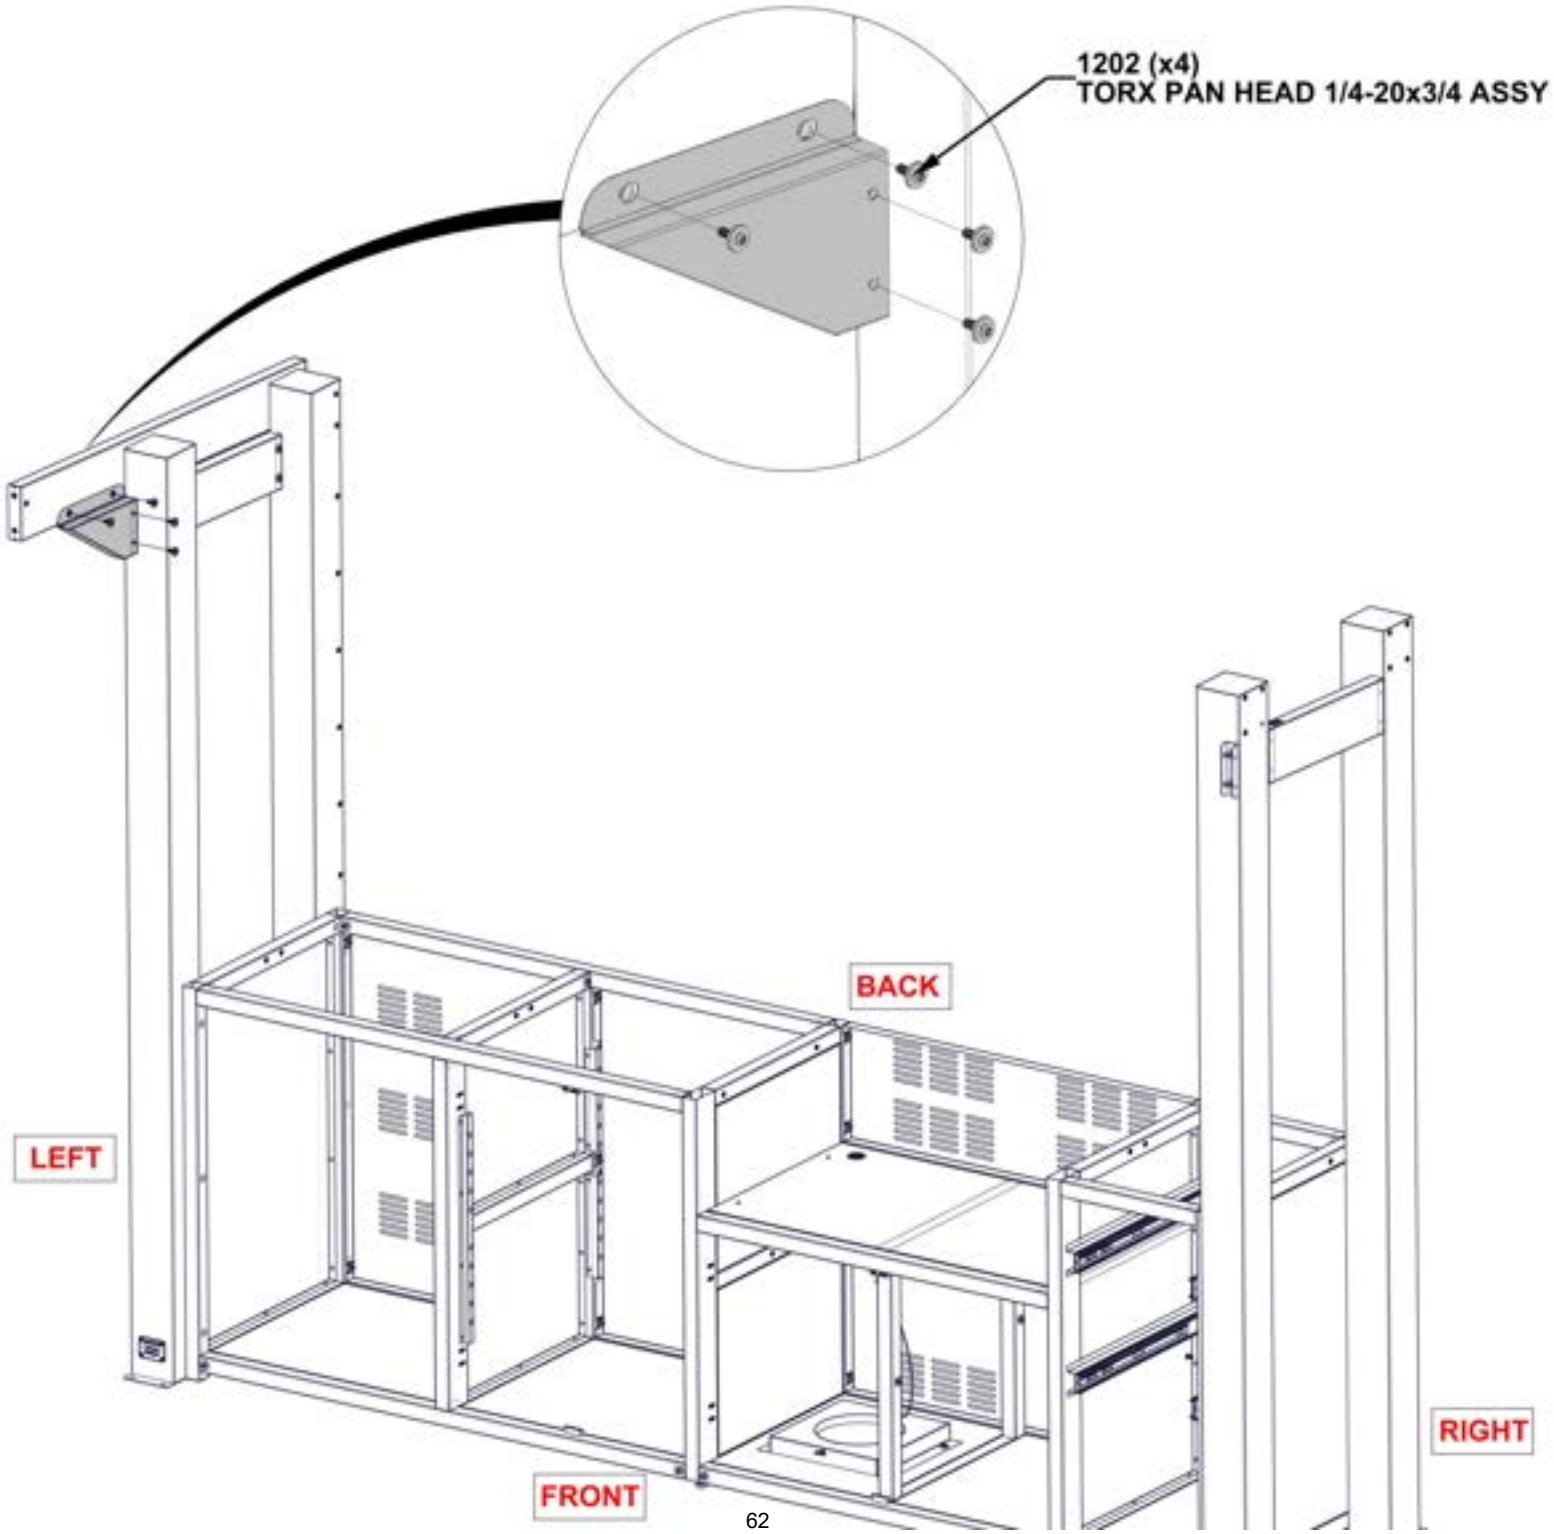

STEP 37 - KITCHEN ASSEMBLY

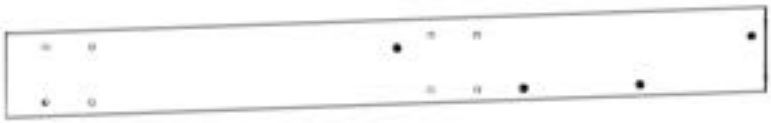

B05 SIDE BEAM - A4M02022
(x1) 1 7/16"x5 1/4"x46 1/2" (36x134x1181)

QTY	PART NUMBER	Description
8	H101103	TORX SOCKET SCREW 1/4-20

DO NOT TIGHTEN HARDWARE AT THIS STEP

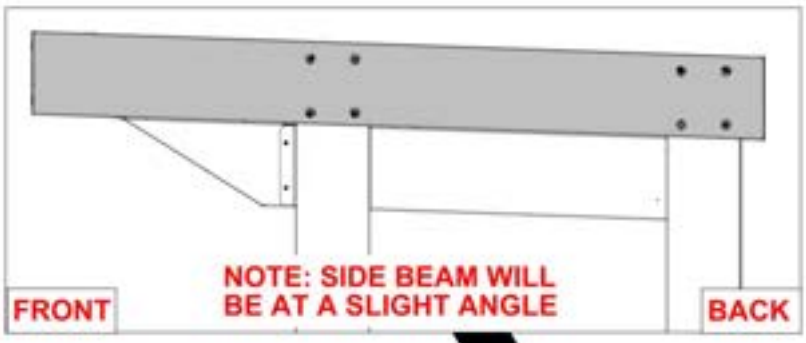

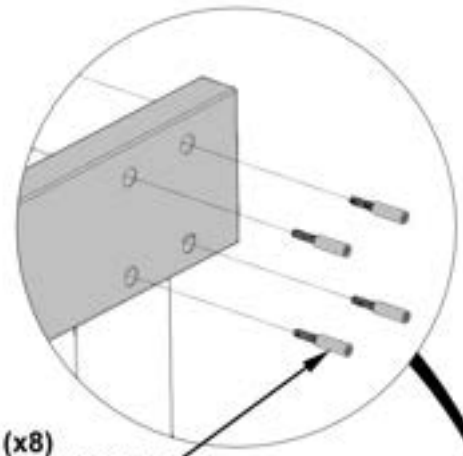

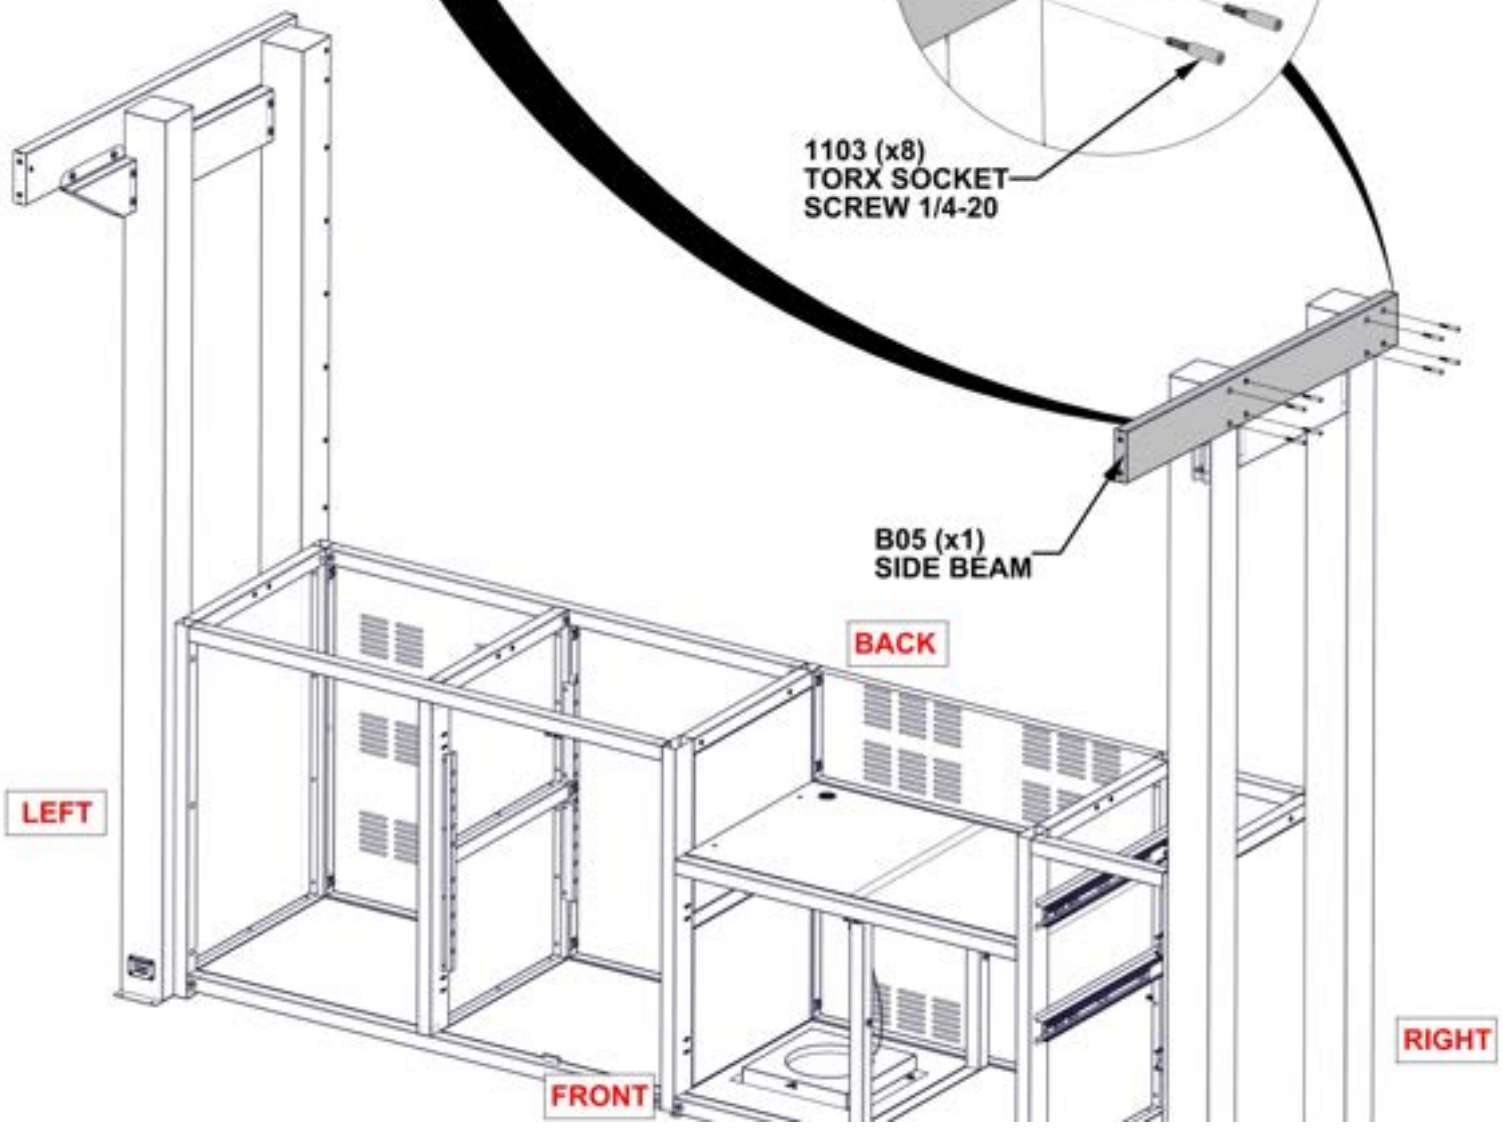

STEP 38A - KITCHEN ASSEMBLY

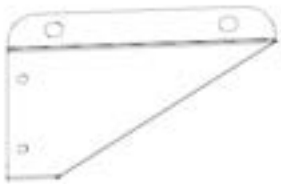

B08 CORBEL - A4M02041
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)

NOTE: CORBEL BRACKET SLOTS WILL FIT AROUND THREADED INSERTS AND FLUSH AGAINST BEAM

B08 (x1)
CORBEL

SLIDE CORBEL IN PLACE
UNTIL FLUSH AGAINST POST

BACK

RIGHT

LEFT

FRONT

STEP 38B - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

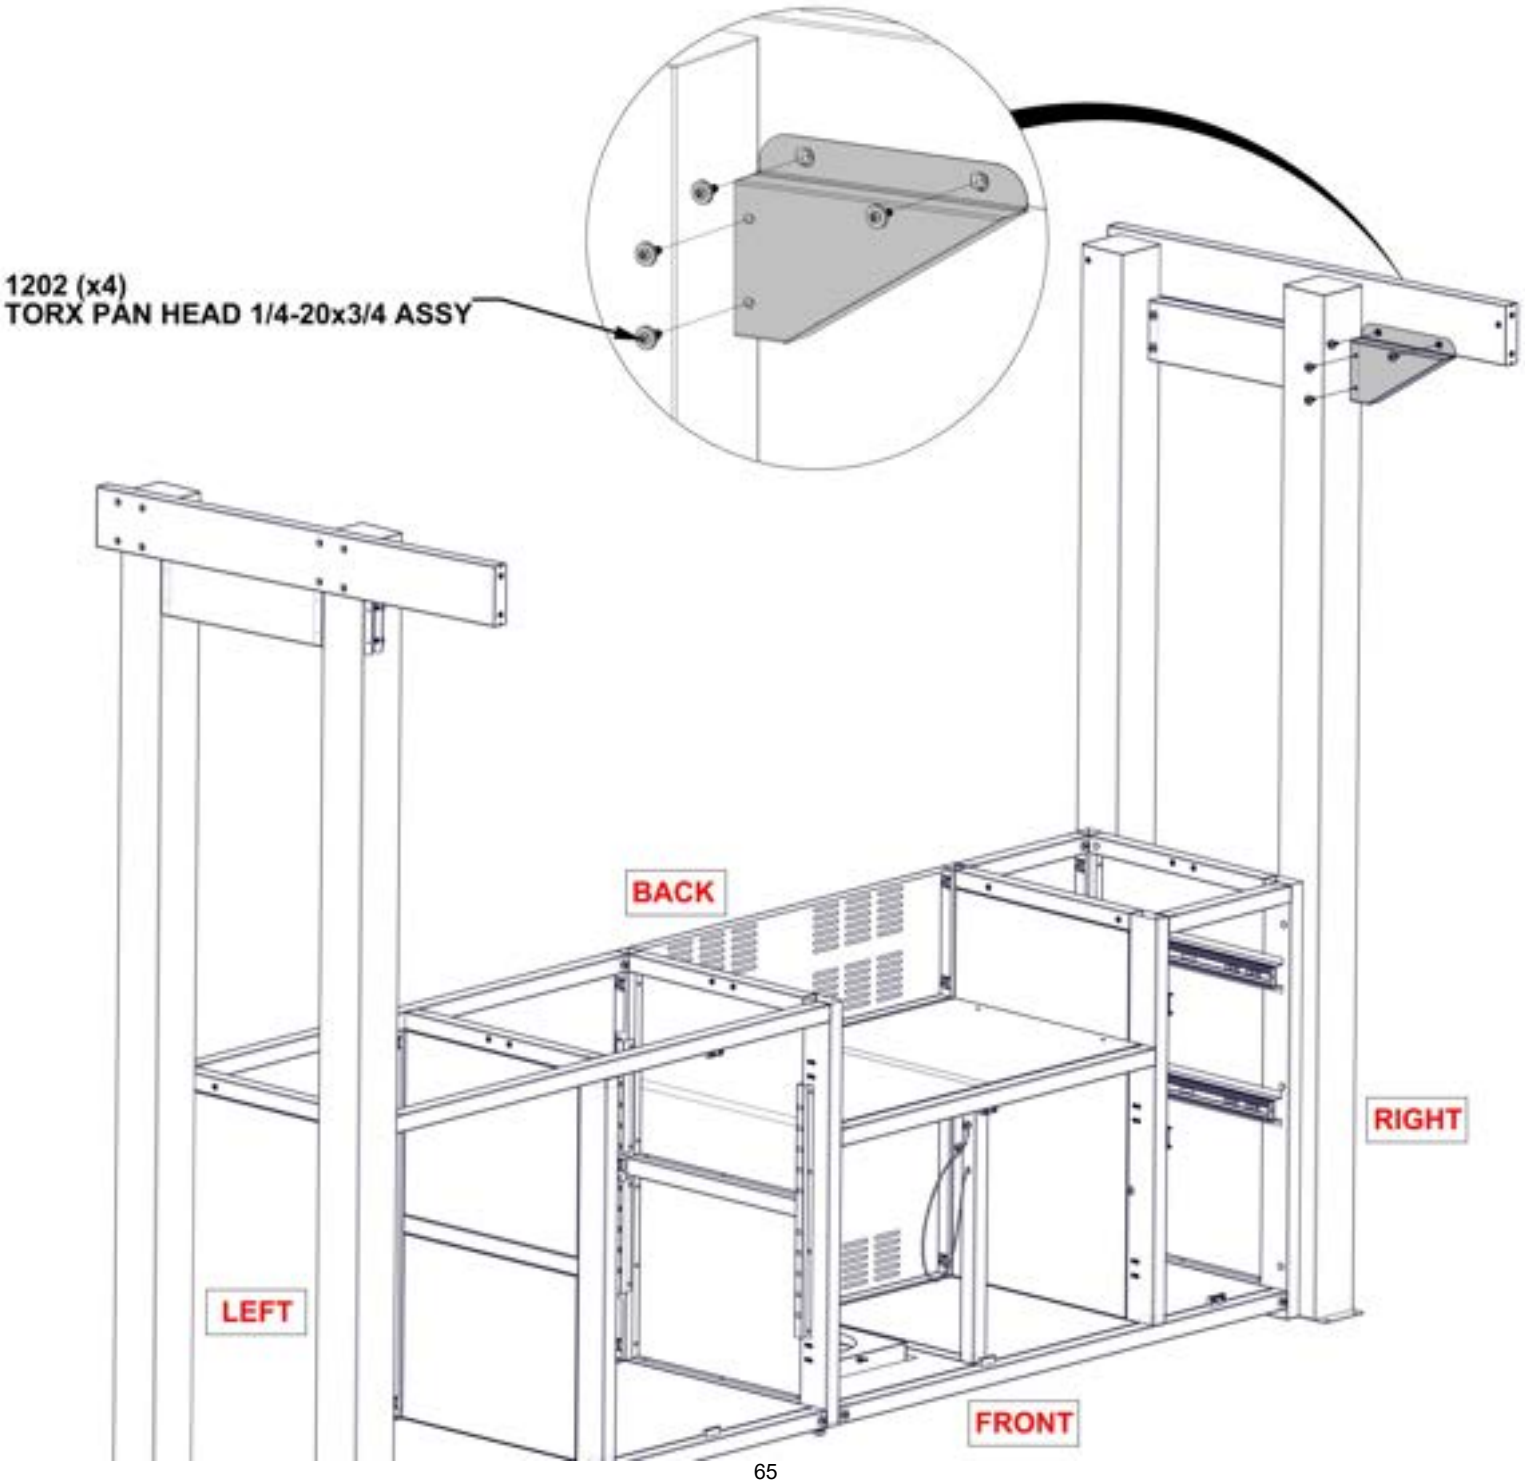

STEP 39 - BACK BEAM ASSEMBLY

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

J2 SPLICE BRACKET - A4M02184
(x1) 1 5/16"x4 11/16"x19 11/16" (33.2x119.2x500)

B02 BACK BEAM - A4M02013
(x1) 1 7/16"x4 13/16"x61 1/4" (36x122x1556)

DO NOT TIGHTEN HARDWARE AT THIS STEP

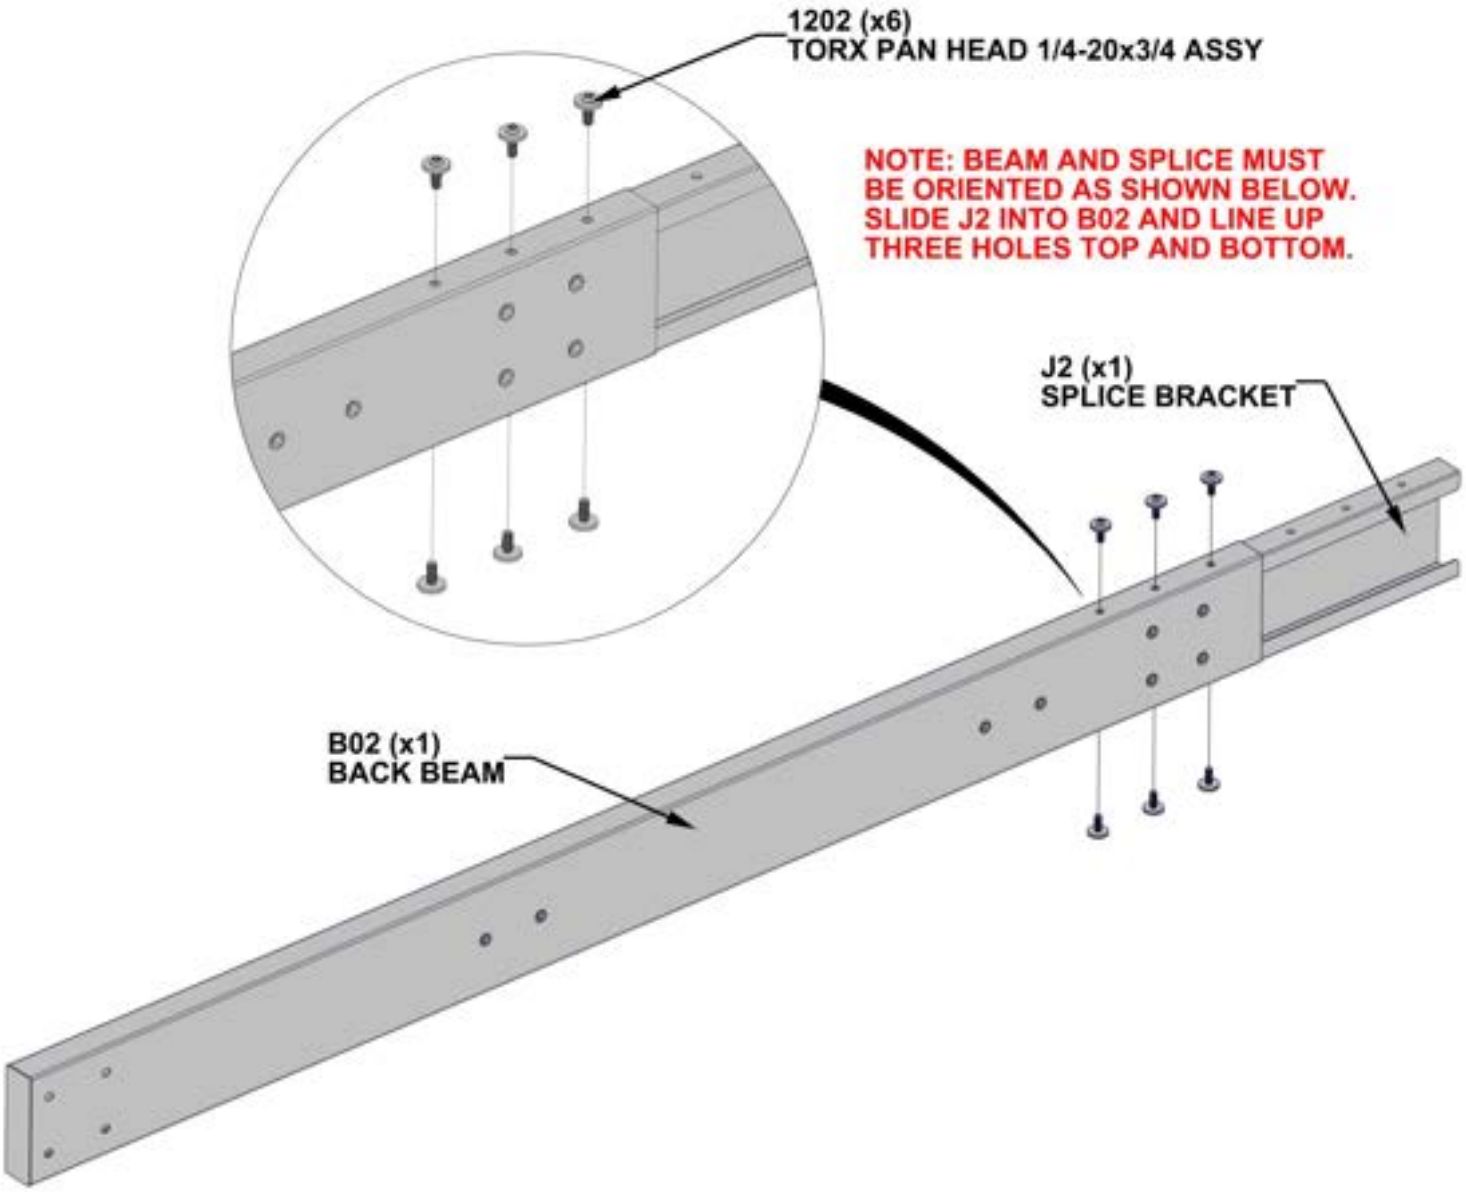

STEP 40 - BACK BEAM ASSEMBLY

B06 BACK BEAM - A4M02024
(x1) 1 7/16"x4 13/16"x (36x122x1556)

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

SLIDE B06 ONTO SPLICE BRACKET. GENTLY TAP ENDS OF ASSEMBLY WITH RUBBER MALLET UNTIL GAP CLOSES, THEN TIGHTEN ALL BOLTS ON BEAM.

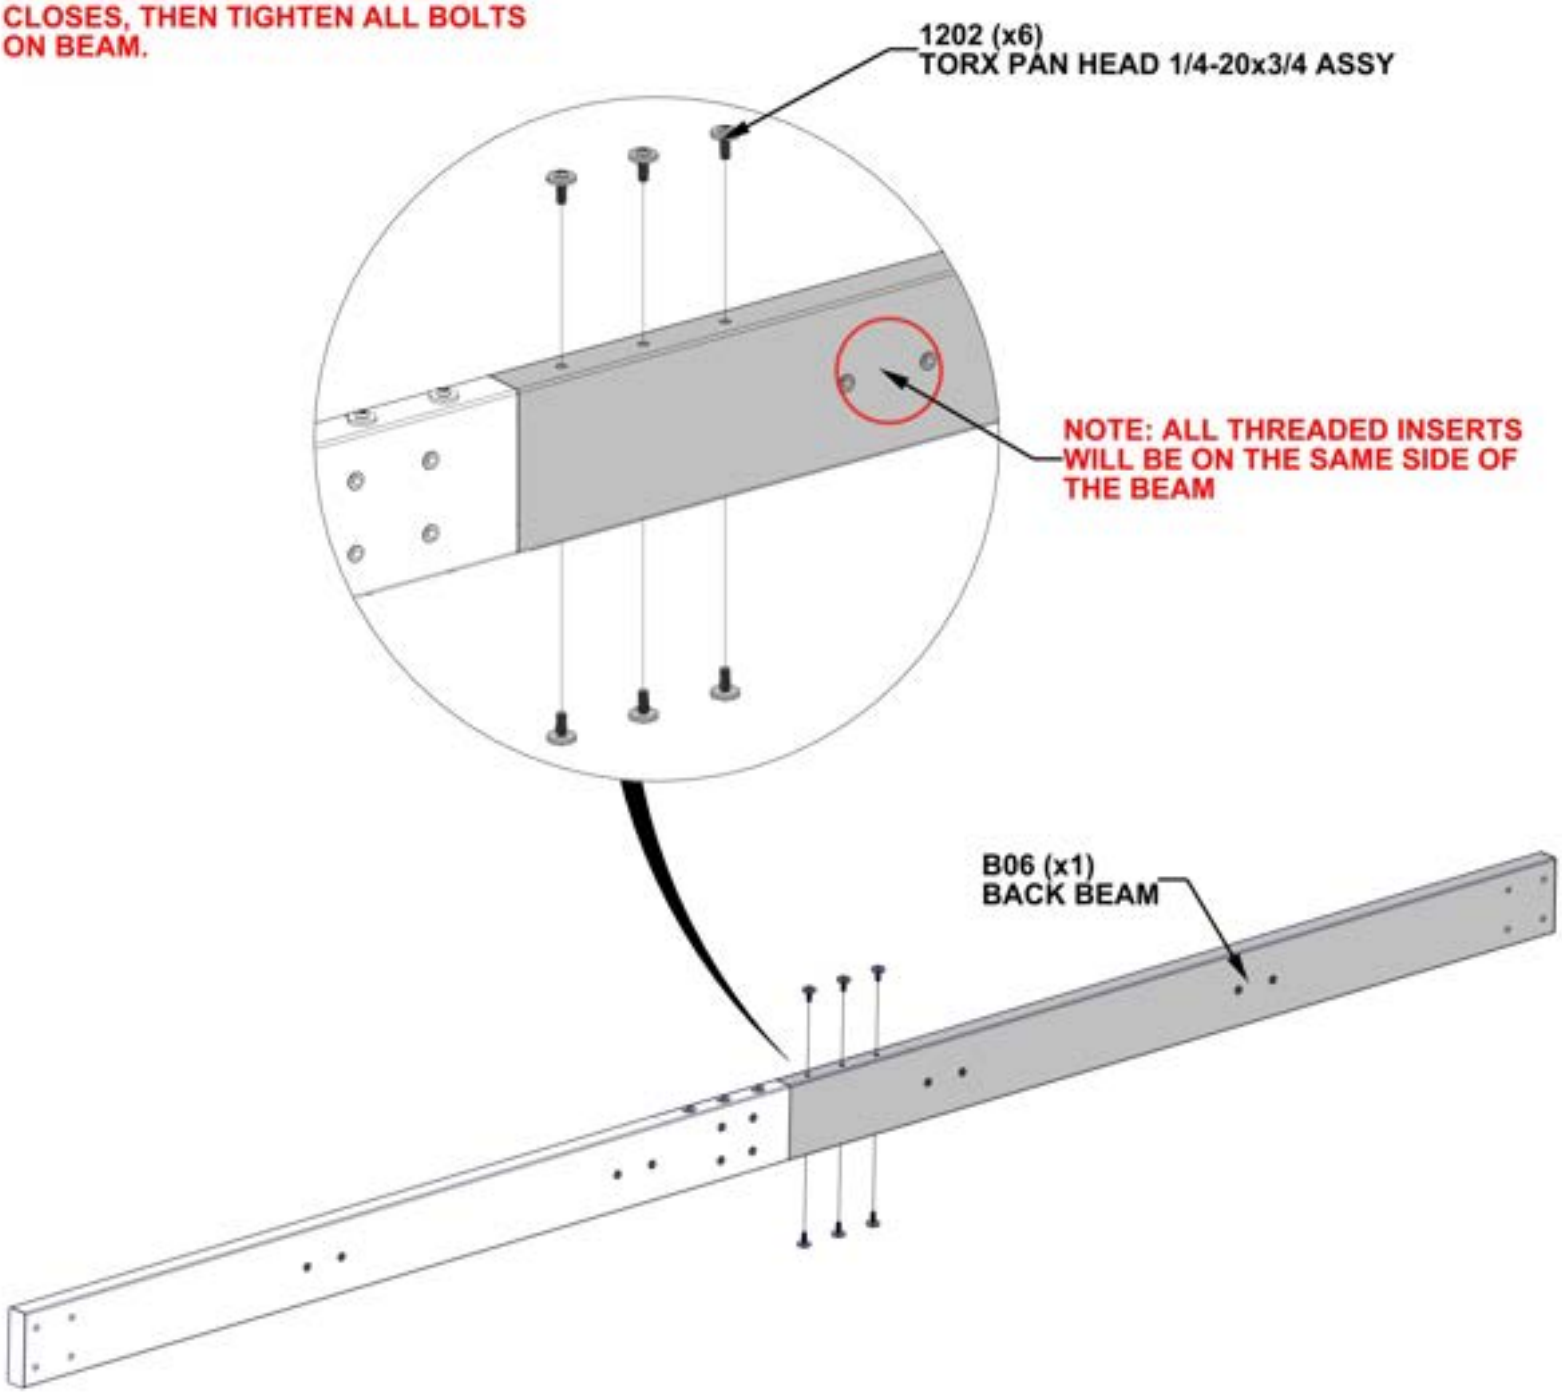

STEP 41 - FRONT BEAM ASSEMBLY

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

J1 SPLICE BRACKET - A4M02183
(x1) 1 5/16"x5 3/16"x19 11/16" (33.2x131.2x500)

B03 FRONT BEAM - A4M02014
(x1) 1 7/16"x5 1/4"x62 11/16" (36x134x1593)

DO NOT TIGHTEN HARDWARE AT THIS STEP

NOTE: BEAM AND SPLICE MUST BE ORIENTED AS SHOWN BELOW. SLIDE J1 INTO B03 AND LINE UP THREE HOLES TOP AND BOTTOM.

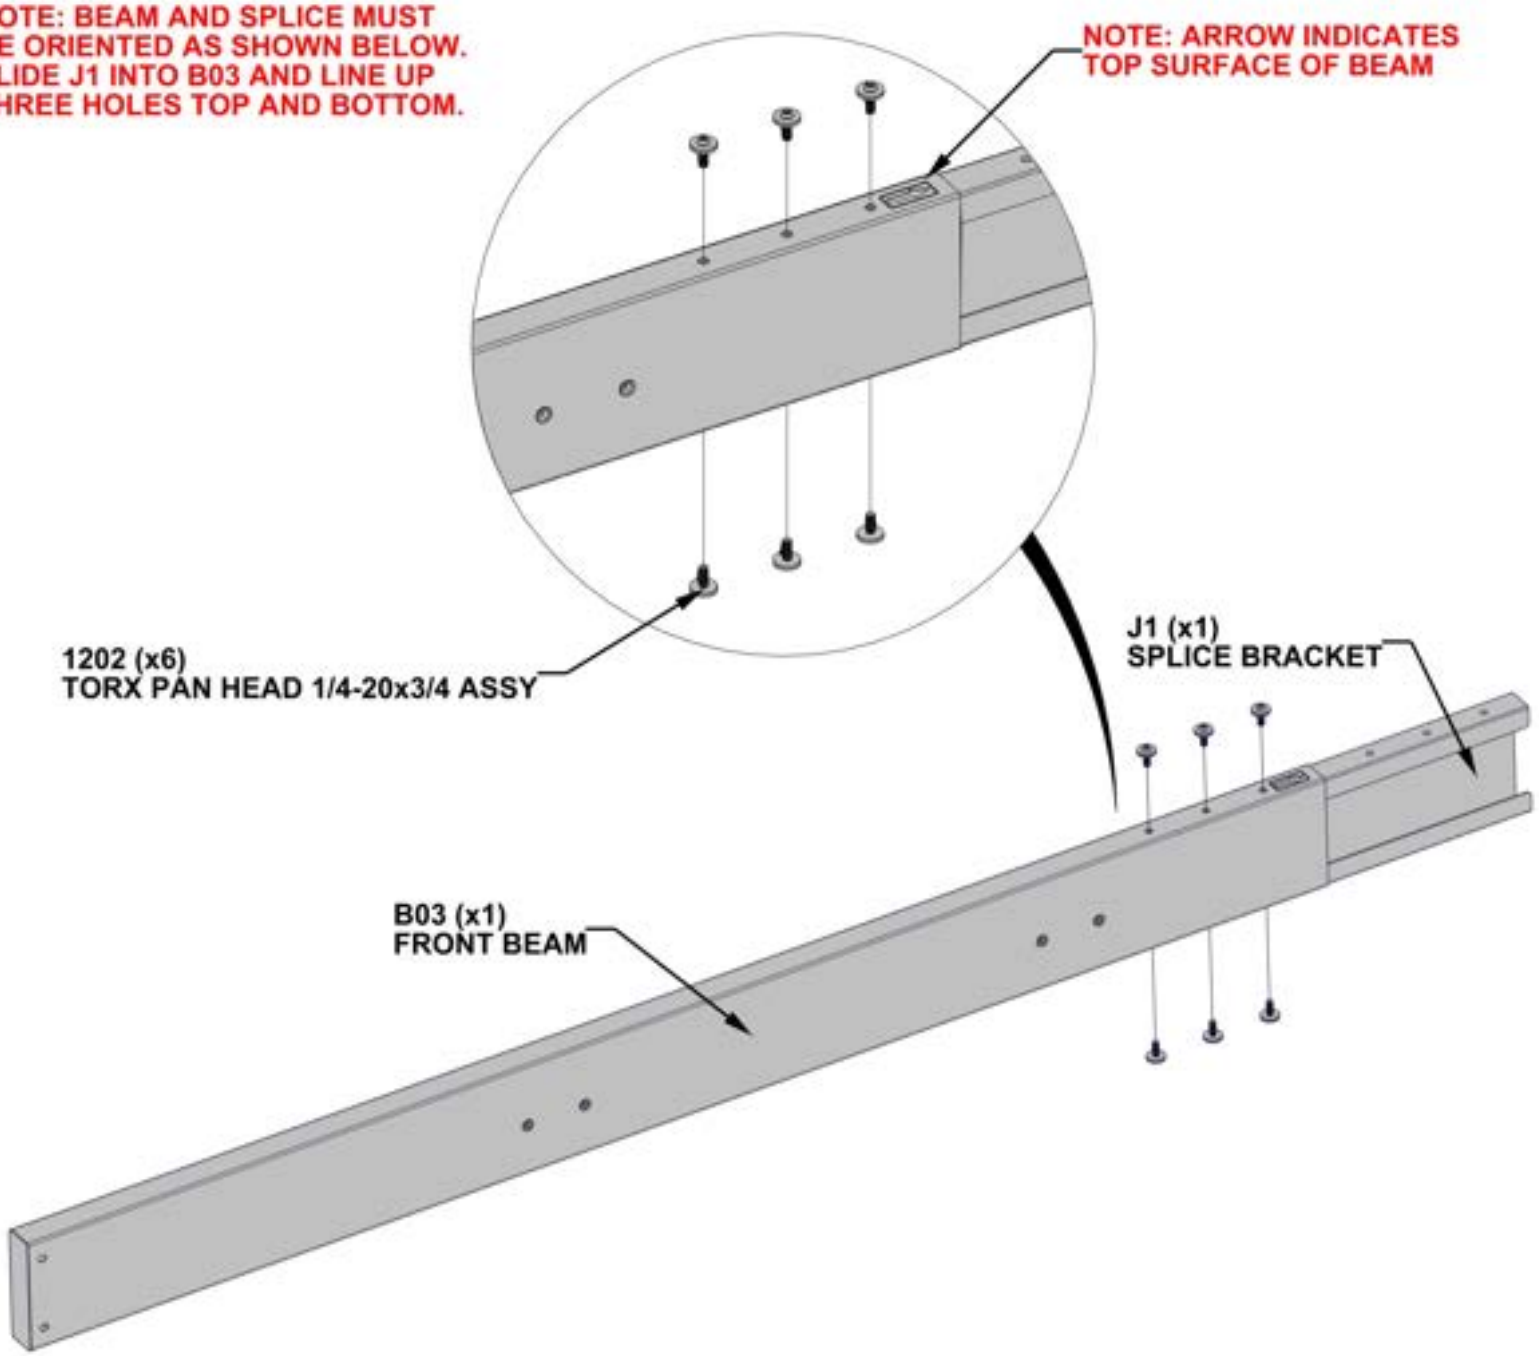

STEP 42 - FRONT BEAM ASSEMBLY

B07 FRONT BEAM - A4M02027
(x1) 1 7/16"x5 1/4"x62 11/16" (36x134x1593)

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

SLIDE B07 ONTO SPLICE BRACKET. GENTLY TAP ENDS OF ASSEMBLY WITH RUBBER MALLET UNTIL GAP CLOSES, THEN TIGHTEN ALL BOLTS ON BEAM.

1202 (x6)
TORX PAN HEAD 1/4-20x3/4 ASSY

NOTE: ARROWS INDICATE TOP SURFACE OF BEAM. BOTH ARROWS WILL FACE EACH OTHER ON BEAM ASSEMBLY

NOTE: ALL THREADED INSERTS WILL BE ON THE SAME SIDE OF THE BEAM

B07 (x1)
FRONT BEAM

STEP 43 - ROOF ASSEMBLY



BACK BEAM ASSEMBLY
STEPS 39-40

QTY	PART NUMBER	Description
8	H101103	TORX SOCKET SCREW 1/4-20

FOR THIS STEP IT IS HELPFUL TO HAVE THREE ADDITIONAL PEOPLE TO HELP HOLD BACK BEAM IN PLACE AND ATTACH HARDWARE.

DO NOT STAND ON CABINET FRAME TO INSTALL BEAM.
DO NOT FULLY TIGHTEN HARDWARE AT THIS STEP.

CRITICAL: BACK BEAM MUST BE ORIENTED IN THE EXACT WAY SHOWN BELOW.

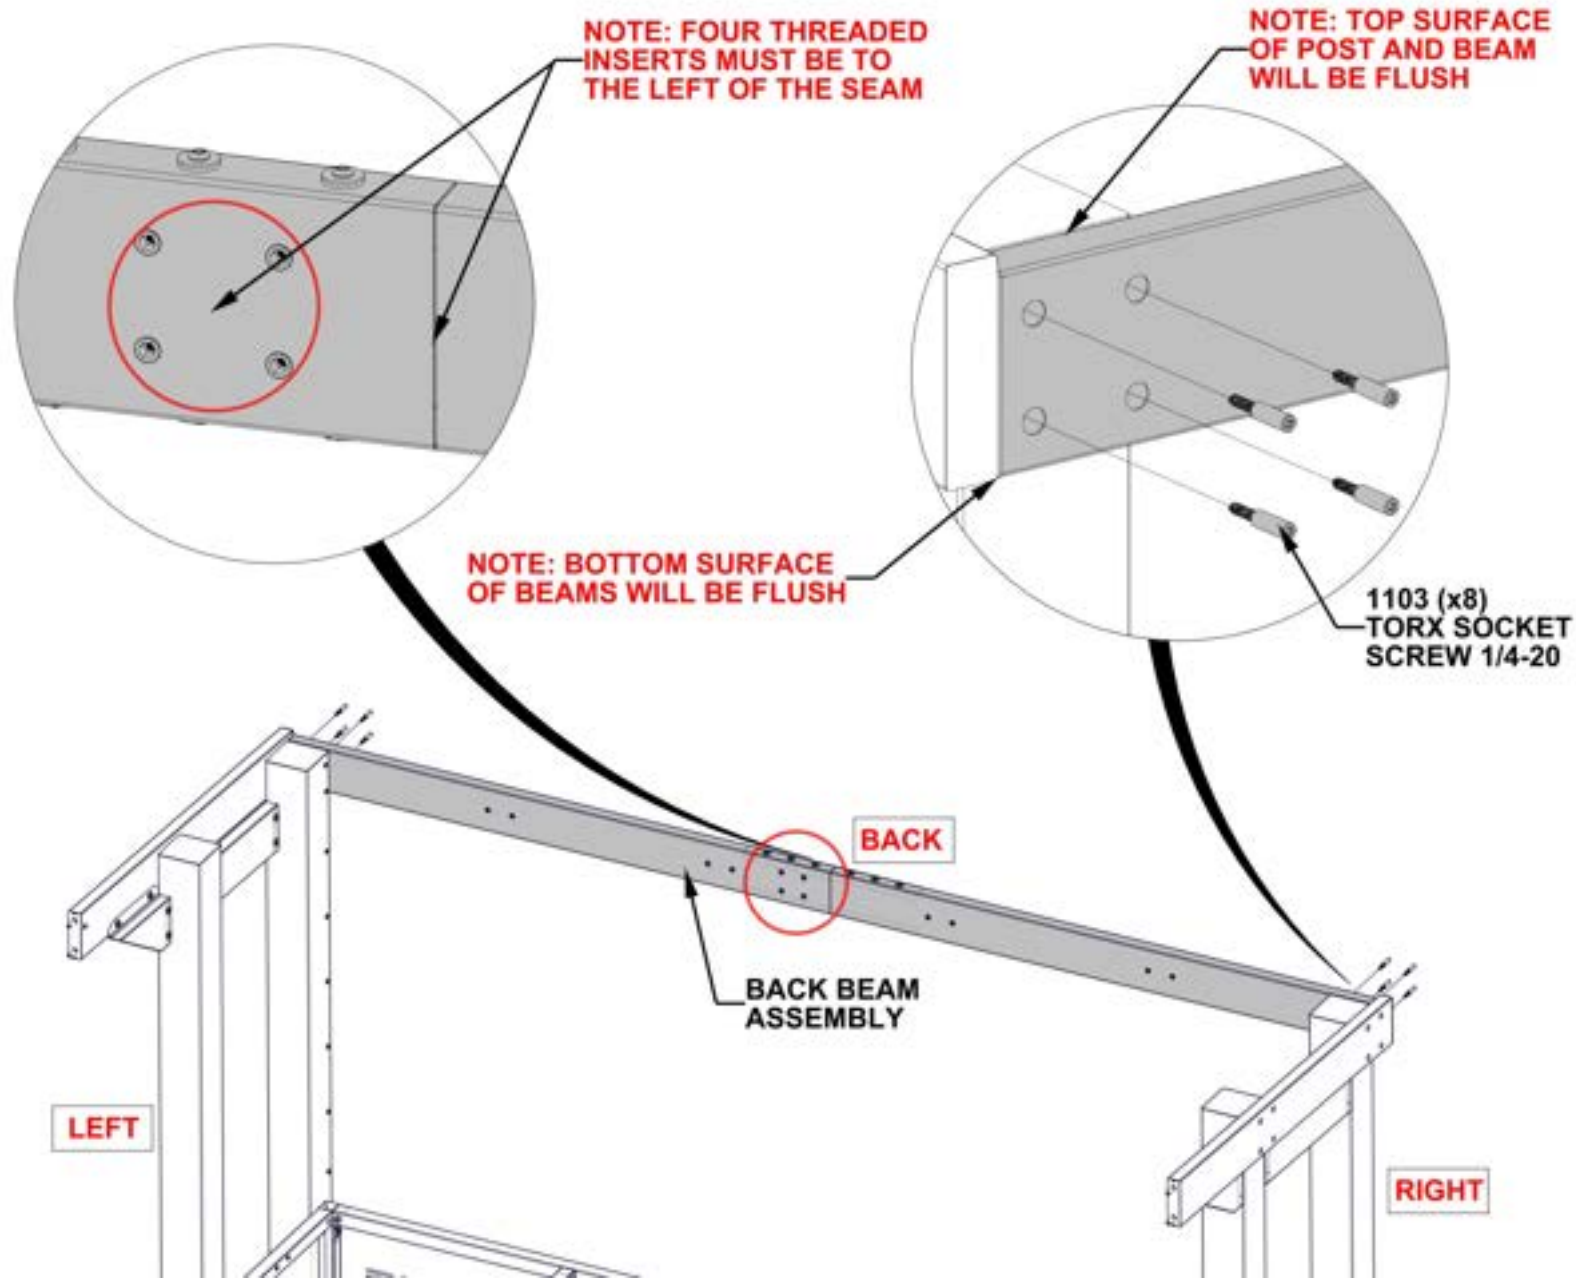

STEP 44A - ROOF ASSEMBLY

USE THIS STEP TO POSITION THE FRONT BEAM ASSEMBLY IN THE EXACT ORIENTATION SHOWN BELOW

FRONT BEAM ASSEMBLY
STEPS 41 - 42



NOTE: ARROWS INDICATE TOP SURFACE OF BEAM. BOTH ARROWS WILL FACE EACH OTHER ON BEAM ASSEMBLY

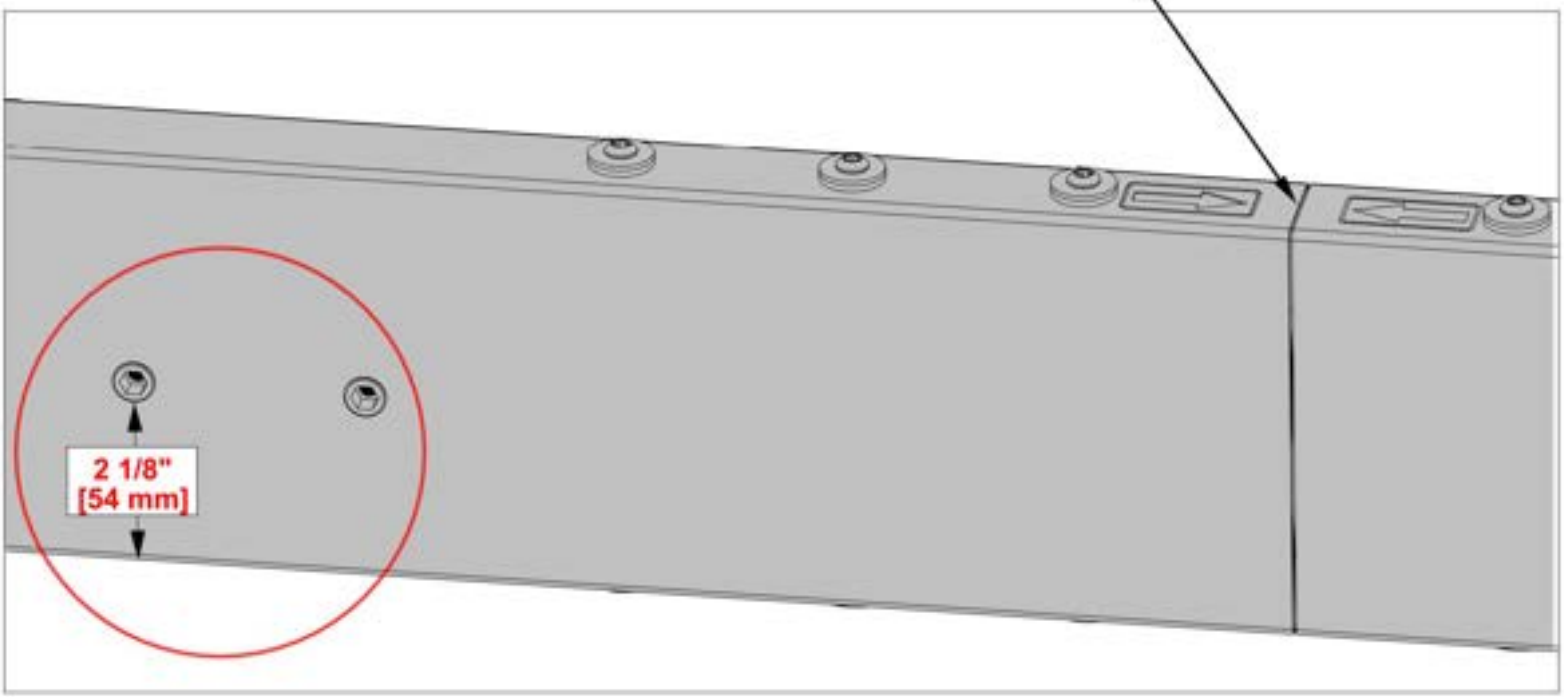

MEASURE FROM THE BOTTOM OF FRONT BEAM TO BOTTOM OF THREADED INSERTS OUTLINED IN RED. IF THE DIMENSION IS NOT CLOSE, FRONT BEAM WILL NEED TO BE FLIPPED.

STEP 44B - ROOF ASSEMBLY

QTY	PART NUMBER	Description
4	H101103	TORX SOCKET SCREW 1/4-20

FRONT BEAM ASSEMBLY
STEPS 41 - 42

FOR THIS STEP IT IS HELPFUL TO HAVE THREE ADDITIONAL PEOPLE TO HELP HOLD FRONT BEAM IN PLACE AND ATTACH HARDWARE.

DO NOT STAND ON CABINET FRAME TO INSTALL BEAM.
DO NOT FULLY TIGHTEN HARDWARE AT THIS STEP.

CRITICAL: FRONT BEAM MUST BE ORIENTED IN THE EXACT WAY SHOWN BELOW

NOTE: ARROWS INDICATE TOP SURFACE OF BEAM. BOTH ARROWS WILL FACE EACH OTHER ON BEAM ASSEMBLY

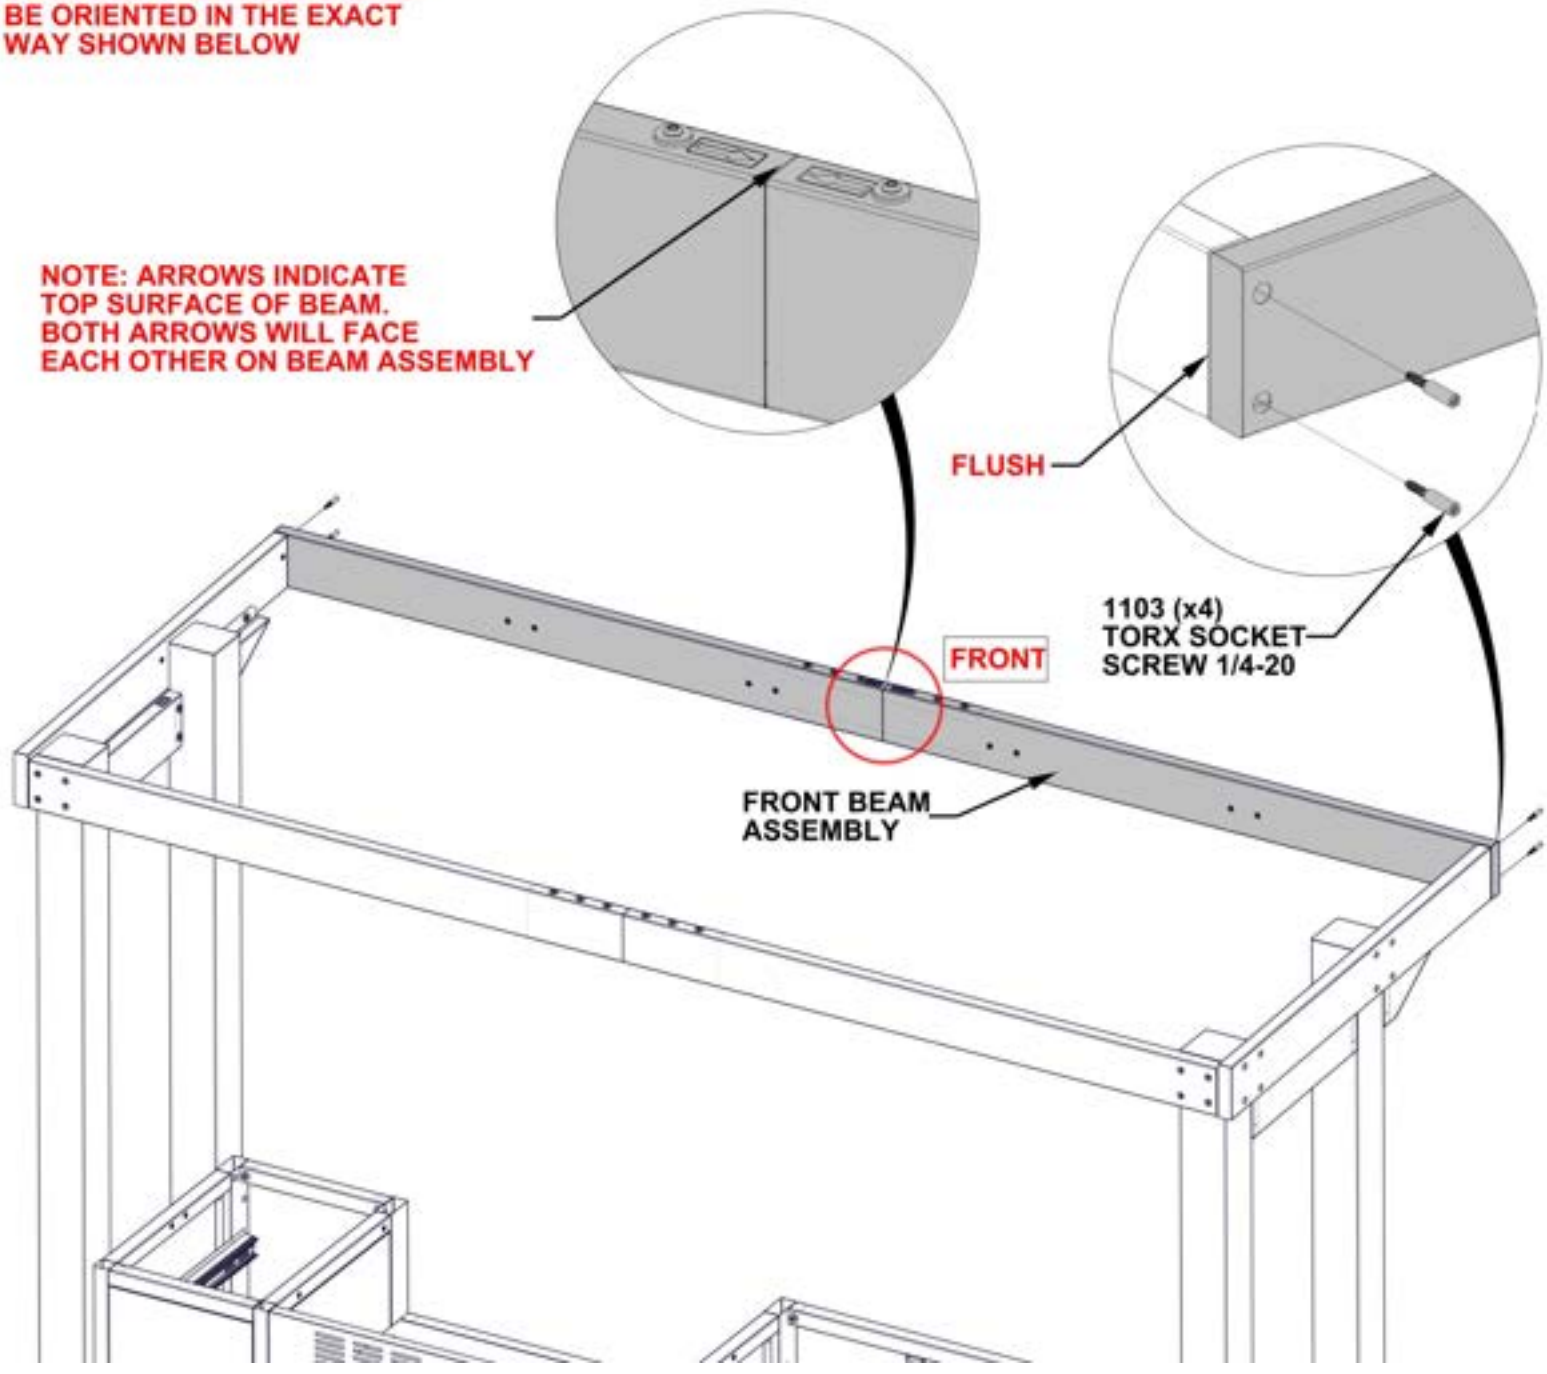

STEP 45 - KITCHEN ASSEMBLY

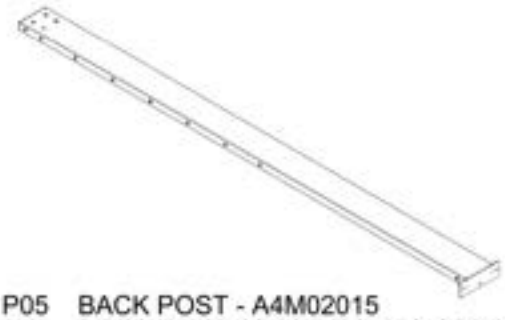

P05 BACK POST - A4M02015
(x1) 2 5/8"x7 7/8"x88 3/4" (66x200x2254)

QTY	PART NUMBER	Description
4	H101103	TORX SOCKET SCREW 1/4-20

DO NOT STAND ON CABINET FRAME TO INSTALL POST HARDWARE.

DO NOT TIGHTEN HARDWARE AT THIS STEP

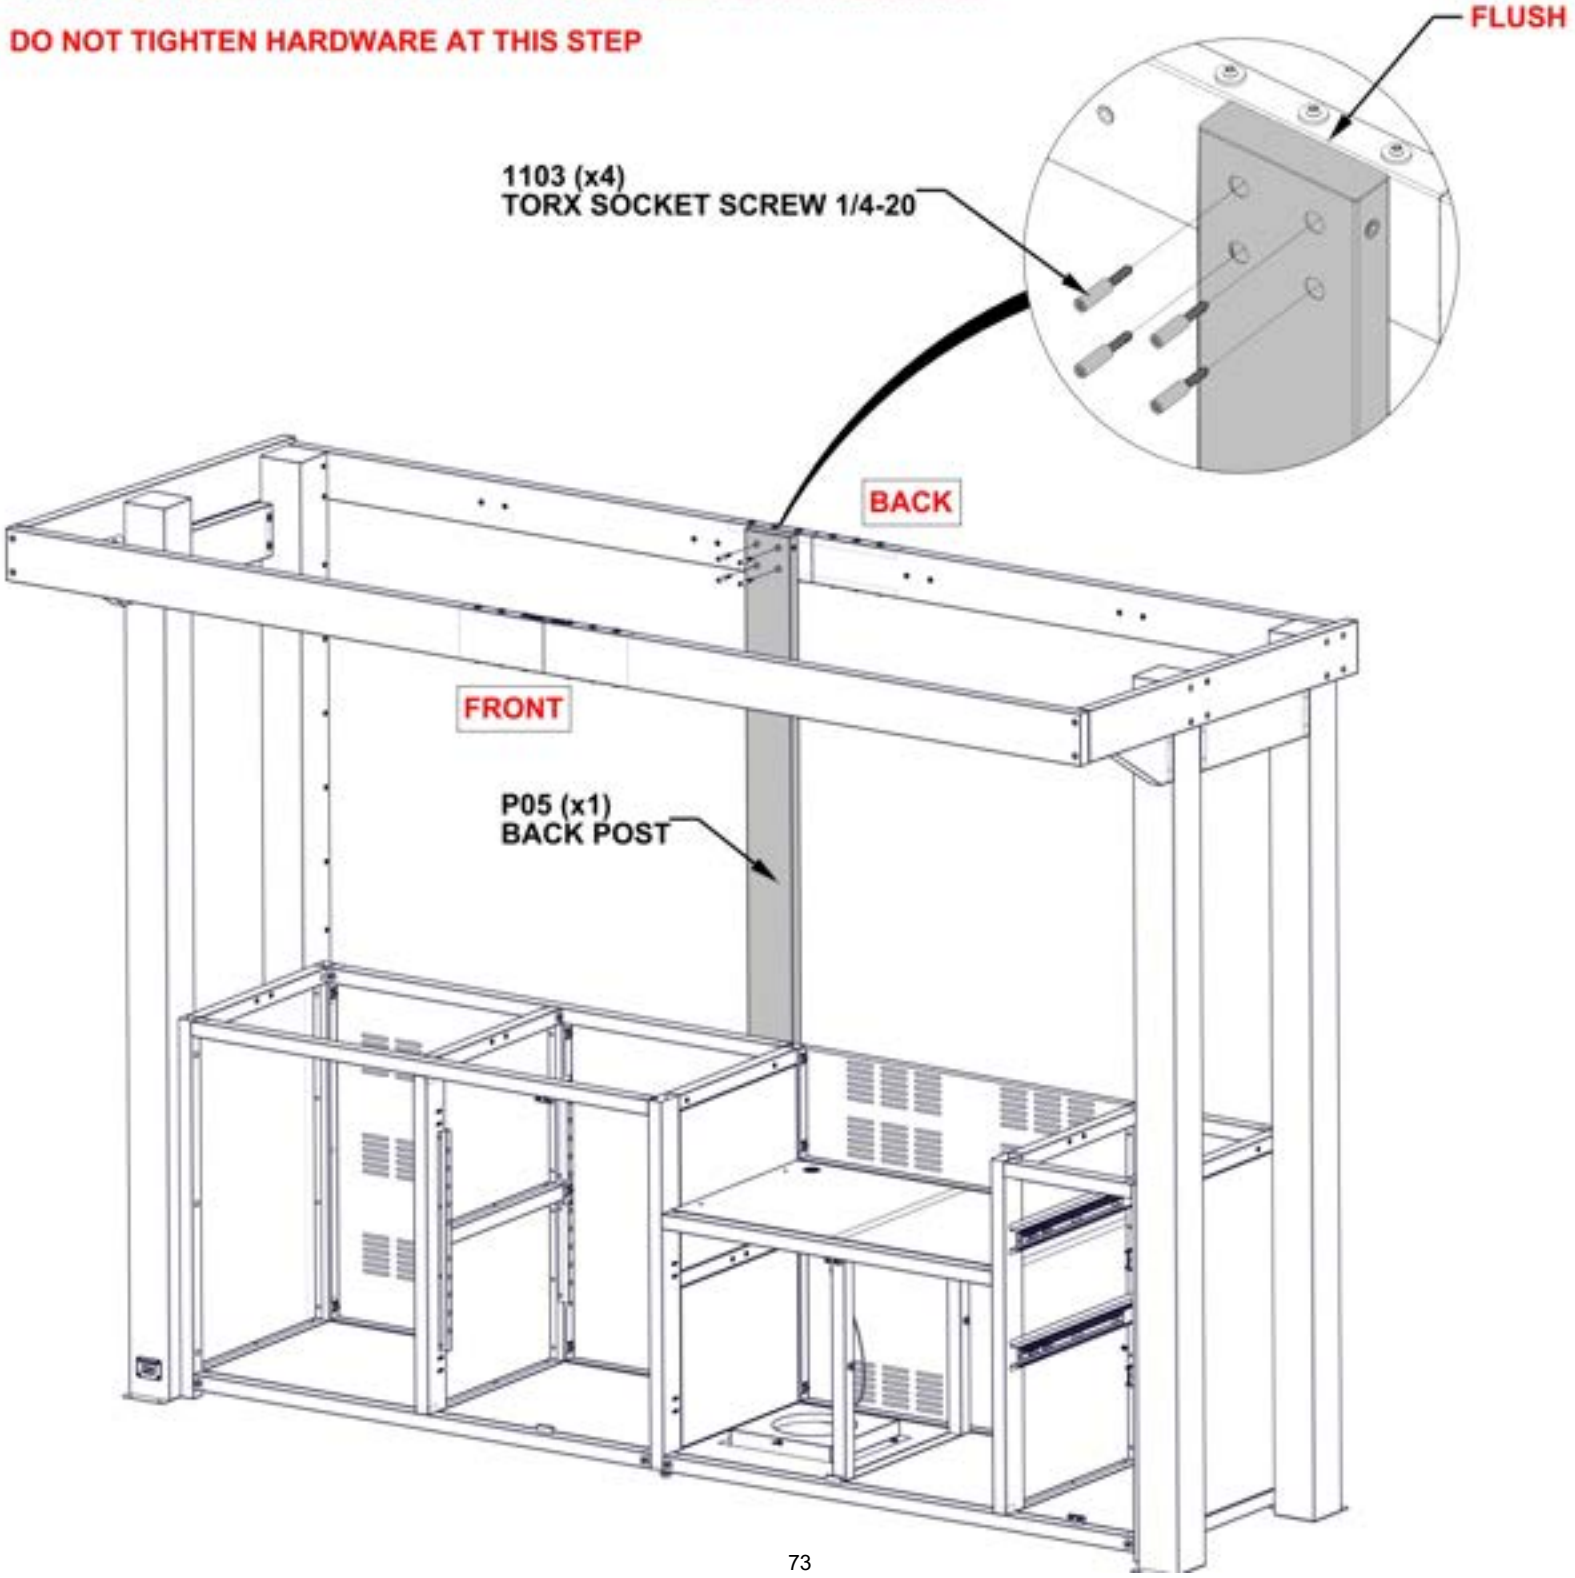

STEP 46 - KITCHEN ASSEMBLY

B10 BACK PANEL - A4M02043
(x1) 1 7/16"x22 11/16"x49 5/8" (36x576.5x1261)

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

NOTE: USE RIGHT ANGLE DRILL ADAPTER FOR THIS STEP

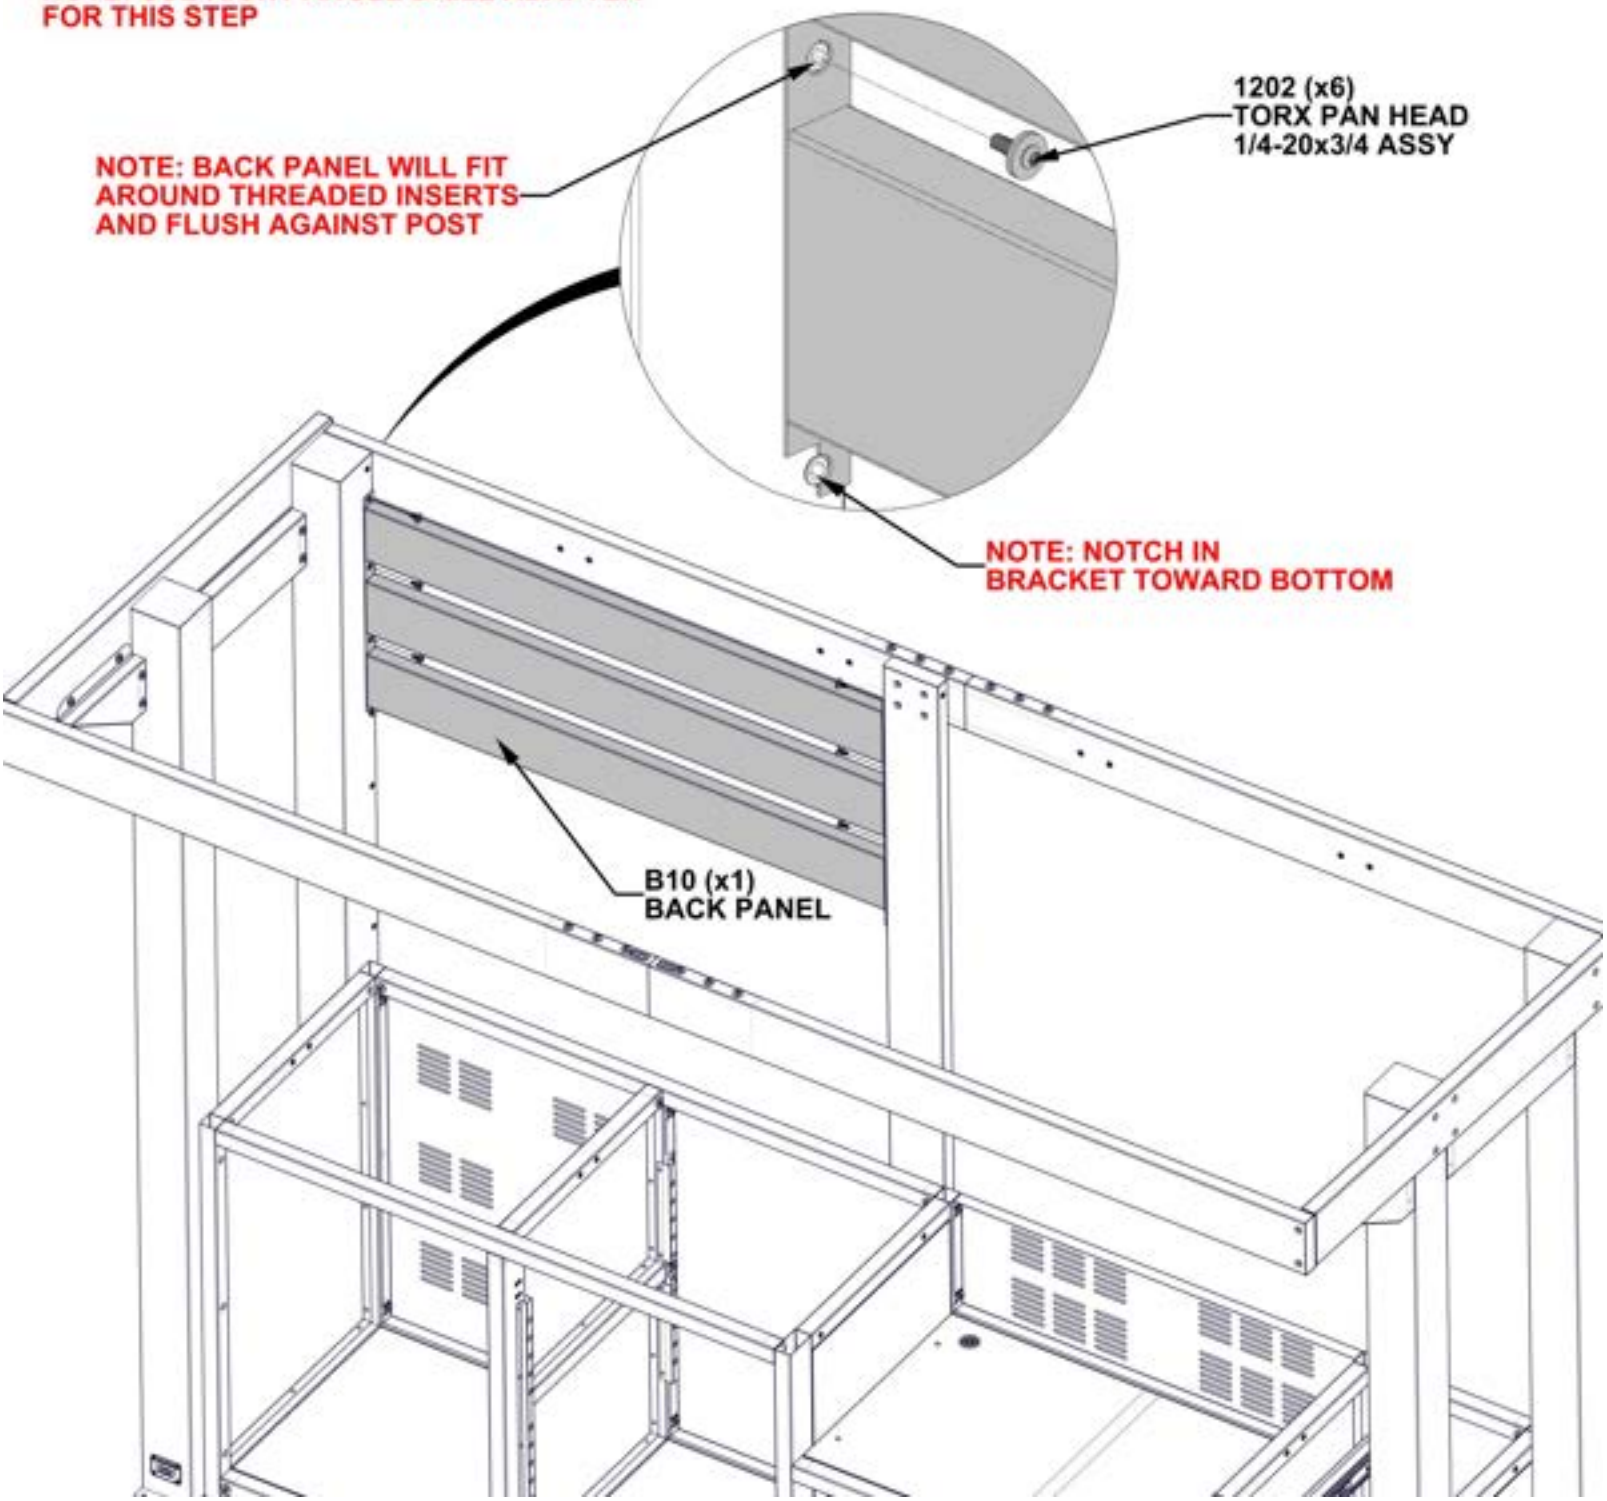

STEP 47 - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

B10 (x1) BACK PANEL - A4M02043
1 7/16"x22 11/16"x49 5/8" (36x576.5x1261)

DO NOT TIGHTEN HARDWARE AT THIS STEP

NOTE: USE RIGHT ANGLE DRILL ADAPTER FOR THIS STEP

NOTE: BACK PANEL WILL FIT AROUND THREADED INSERTS AND FLUSH AGAINST POST

1202 (x8) TORX PAN HEAD 1/4-20x3/4 ASSY

NOTE: CONNECT NOTCHED BRACKETS IN THE ORIENTATION SHOWN

B10 (x1) BACK PANEL

STEP 48 - ROOF ASSEMBLY

QTY	PART NUMBER	Description
16	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

R01 RAFTER - A4M02020
(x4) 3 1/8"x3 15/16"x45 1/16" (80x100x1144)

DO NOT STAND ON CABINET FRAME TO INSTALL RAFTERS

DO NOT TIGHTEN HARDWARE AT THIS STEP

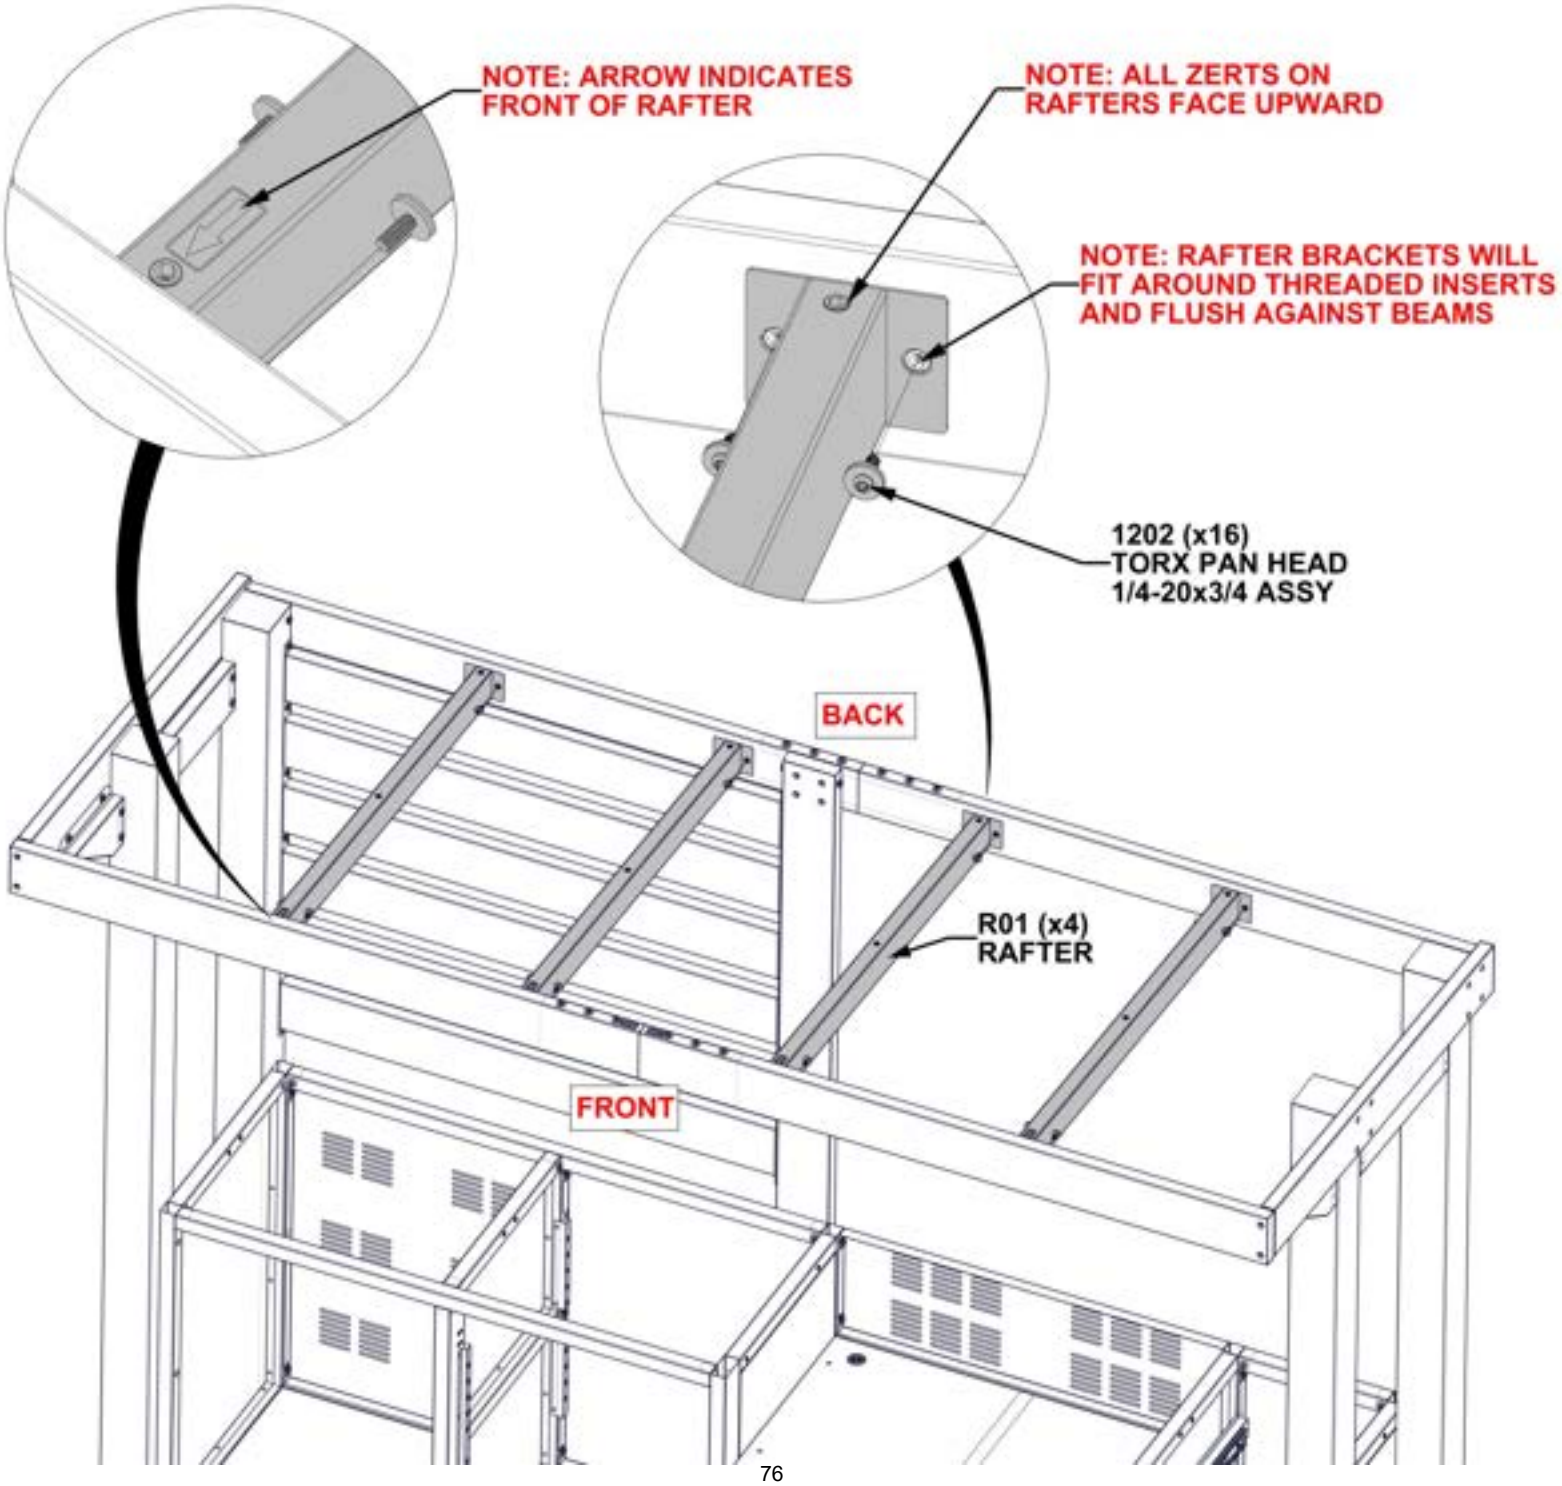

STEP 49 - PURLIN ASSEMBLY

A6P00530 2-WAY SQUARE PLUG
(x2)

E02 PURLIN - A4M02023
(x2) 1 9/16"x1 3/4"x73 5/8" (40x45x1870.75)

COMPLETE THIS STEP 2 TIMES

USE A RUBBER MALLET TO TAP 2-WAY SQUARE PLUG INTO END OF PURLINS

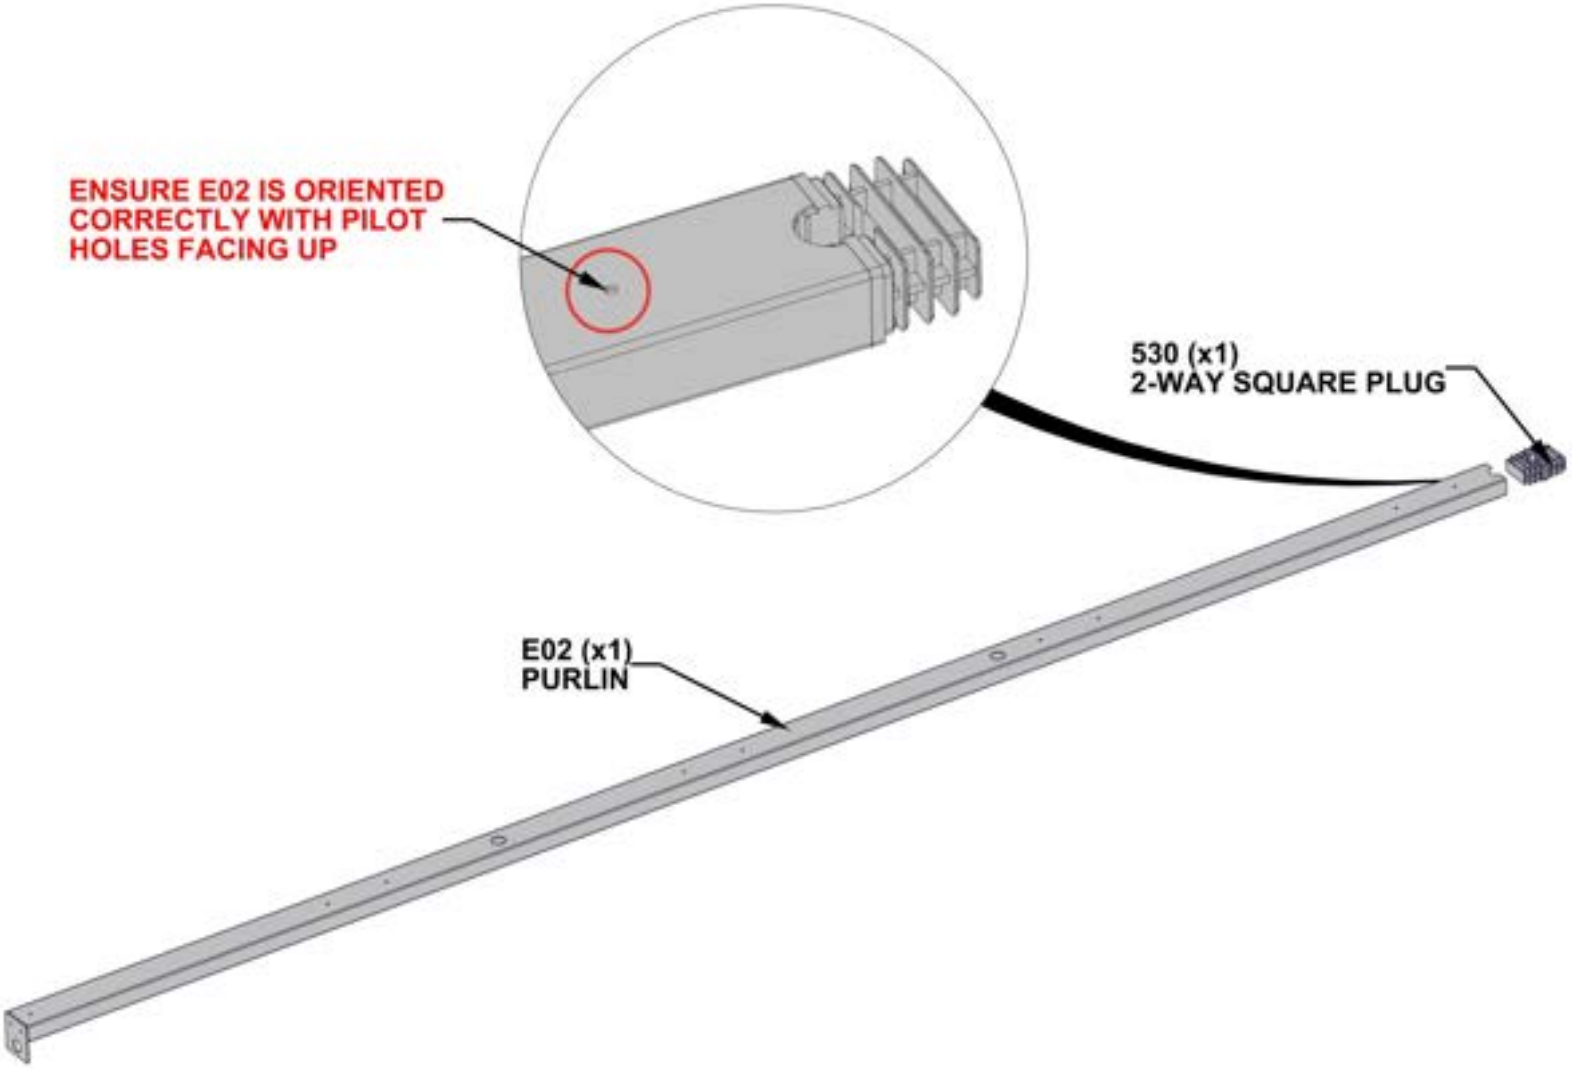

STEP 50 - PURLIN ASSEMBLY

E01 PURLIN - A4M02021
(x2) 1 9/16"x1 3/4"x48 13/16" (40x45x1239.75)

COMPLETE THIS STEP 2 TIMES

USE A RUBBER MALLET TO TAP ENDS OF EACH PURLIN UNTIL TIGHT AGAINST 2-WAY PLUG

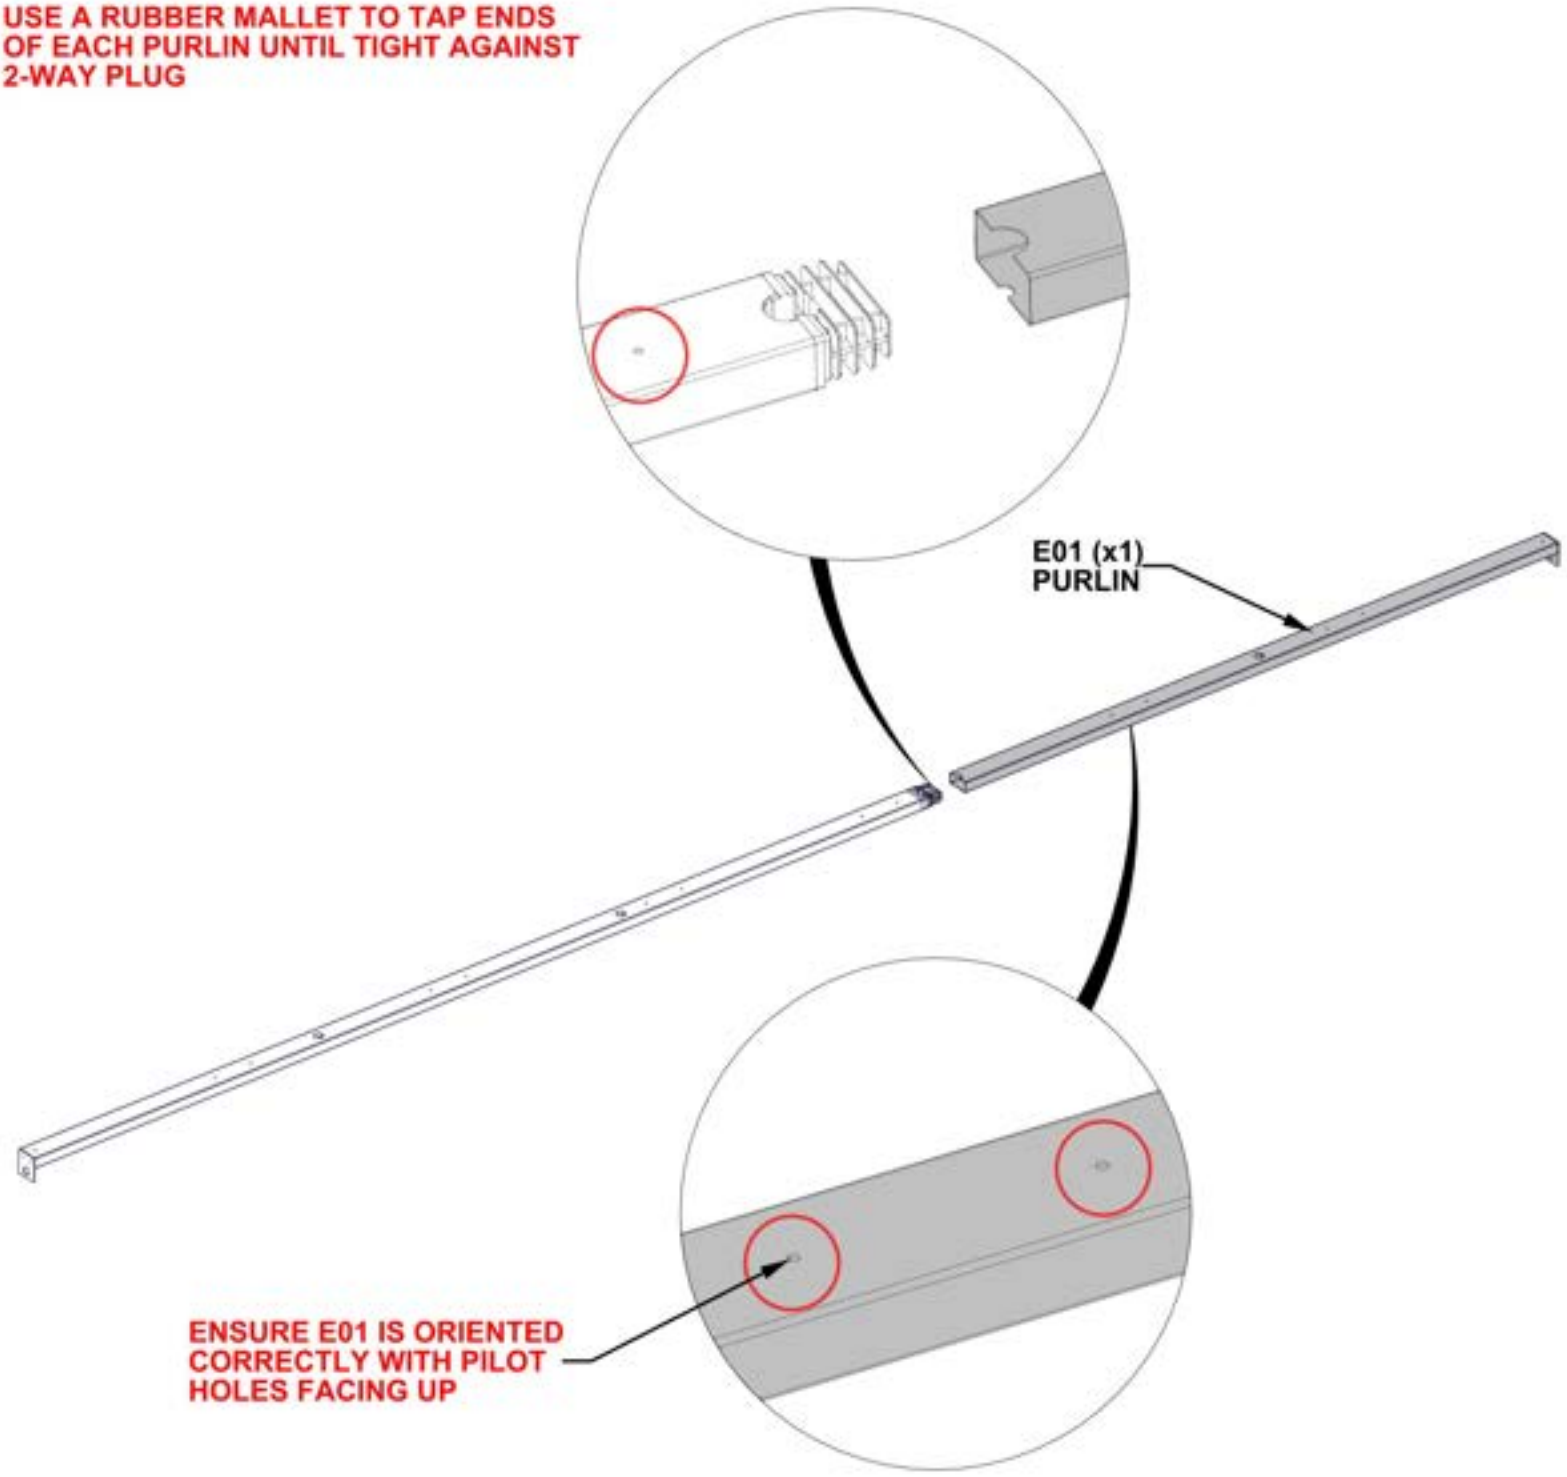

STEP 51A - ROOF ASSEMBLY

PURLIN ASSEMBLY
STEP 49 - 50

QTY	PART NUMBER	Description
8	H101132	TORX SOCKET SCREW 1/4-20

DO NOT STAND ON CABINET FRAME TO INSTALL PURLINS

DO NOT TIGHTEN HARDWARE AT THIS STEP

NOTE: MAKE SURE MIDDLE OF PURLIN ASSEMBLY IS SUPPORTED WHEN LIFTING

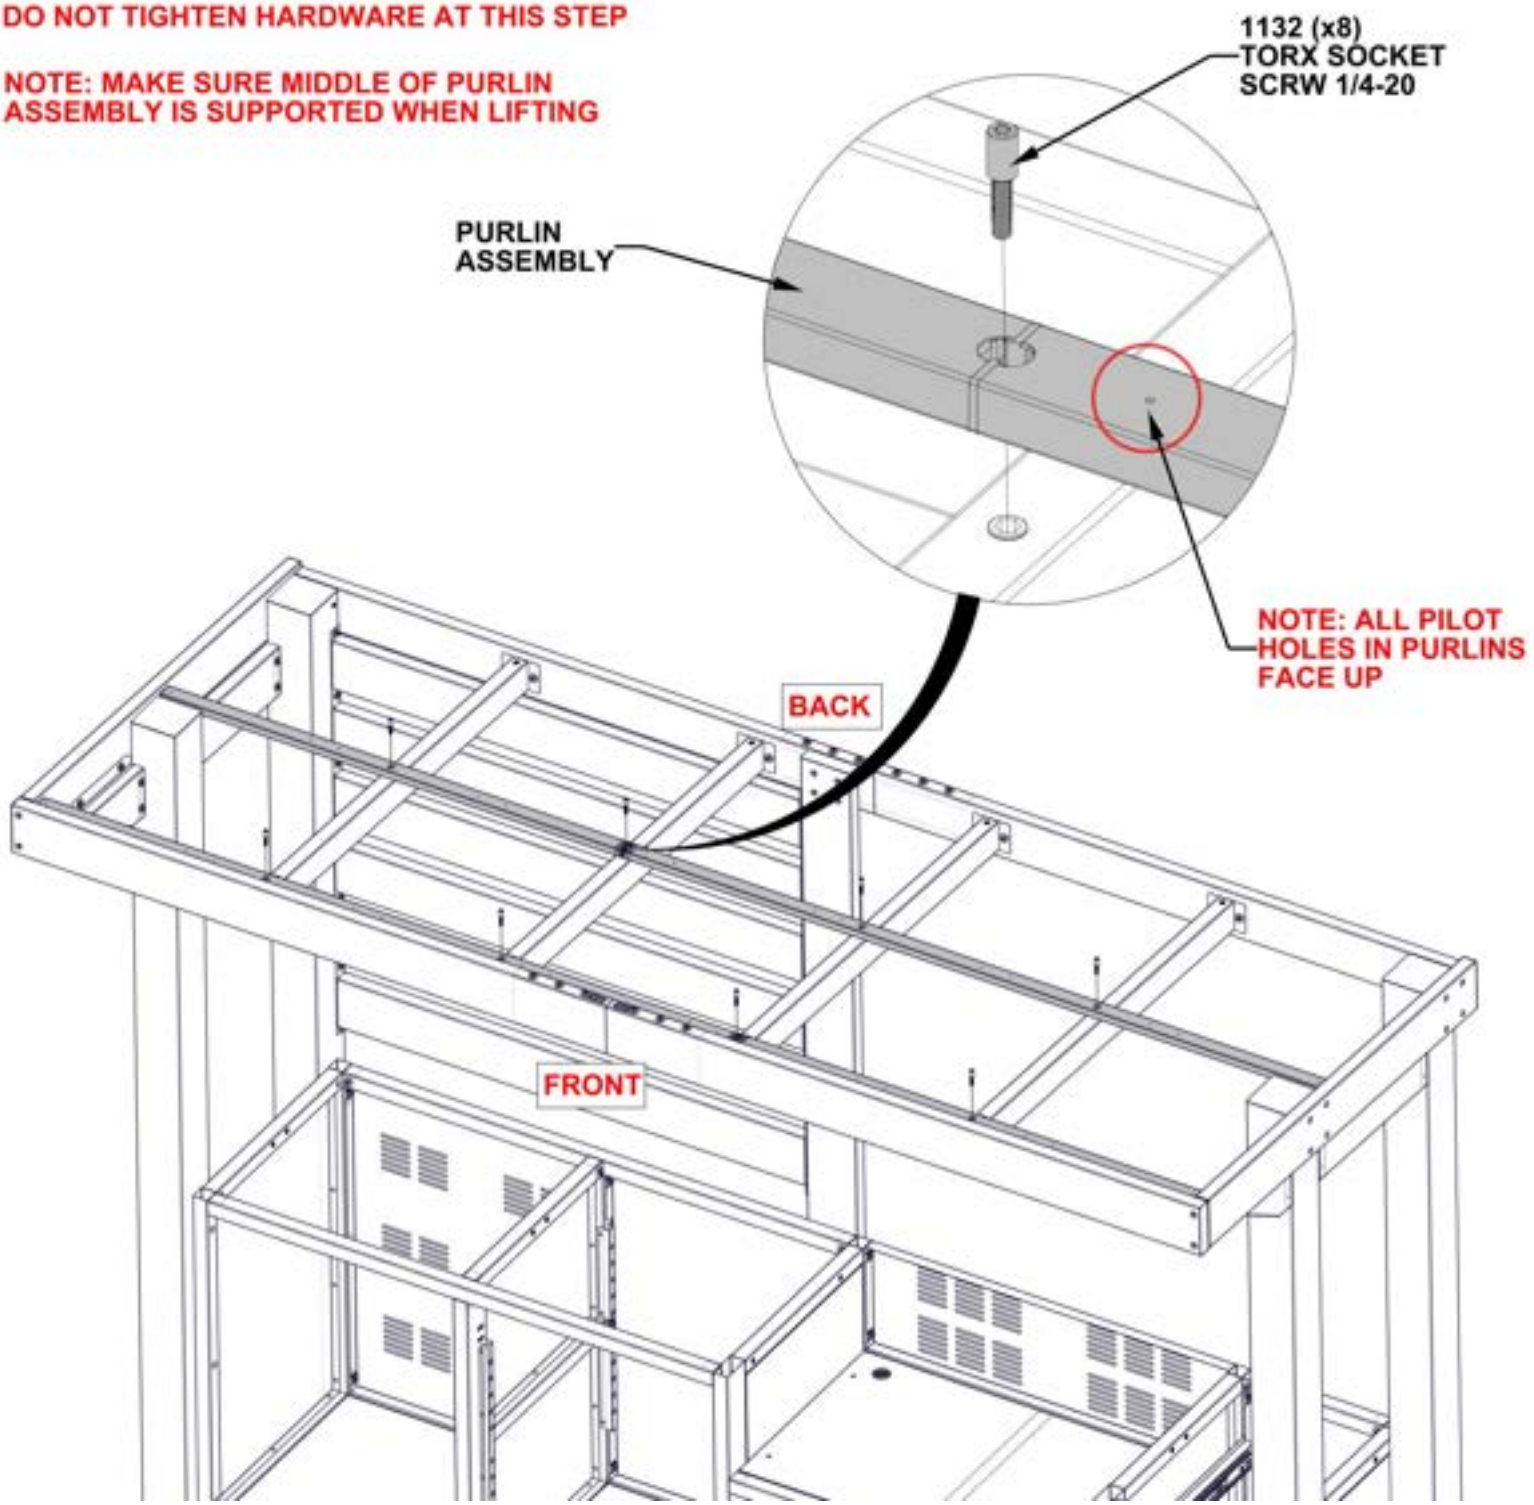

STEP 51B - ROOF ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT STAND ON CABINET FRAME TO INSTALL PURLINS

DO NOT TIGHTEN HARDWARE AT THIS STEP

REPEAT THIS STEP FOR BOTH SIDES OF KITCHEN ROOF

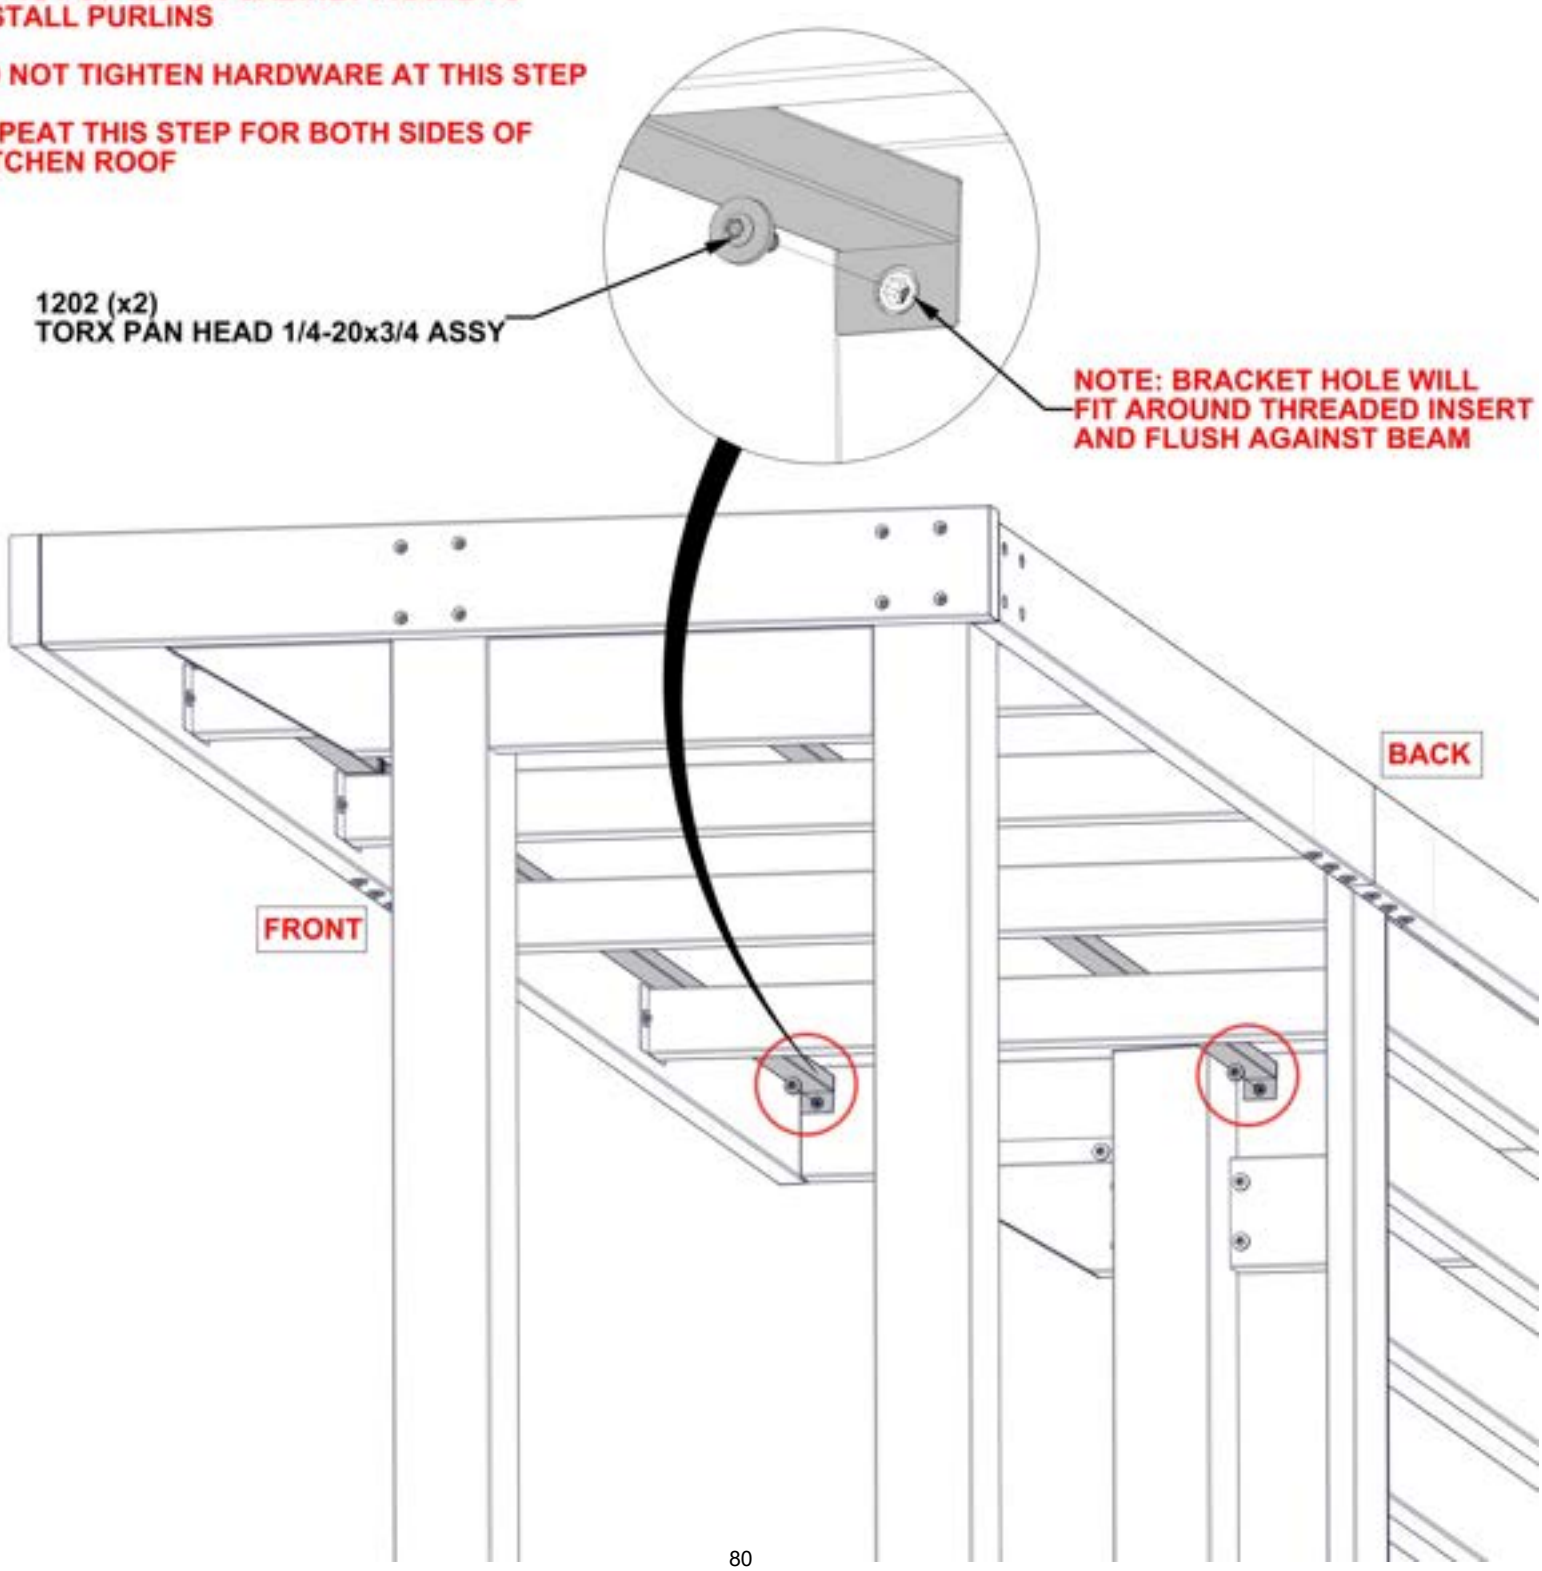

STEP 52A - ROOF ASSEMBLY

E03 PURLIN - A4M02025
(x1) 1 9/16"x1 3/4"x49 5/8" (40x45x1260)

QTY	PART NUMBER	Description
2	H101132	TORX SOCKET SCREW 1/4-20

DO NOT STAND ON CABINET FRAME TO INSTALL PURLIN

DO NOT TIGHTEN HARDWARE AT THIS STEP

NOTE: ORIENTATION OF PURLIN. TWO PILOT HOLES ON PURLIN WILL BE CLOSEST TO MIDDLE POST.

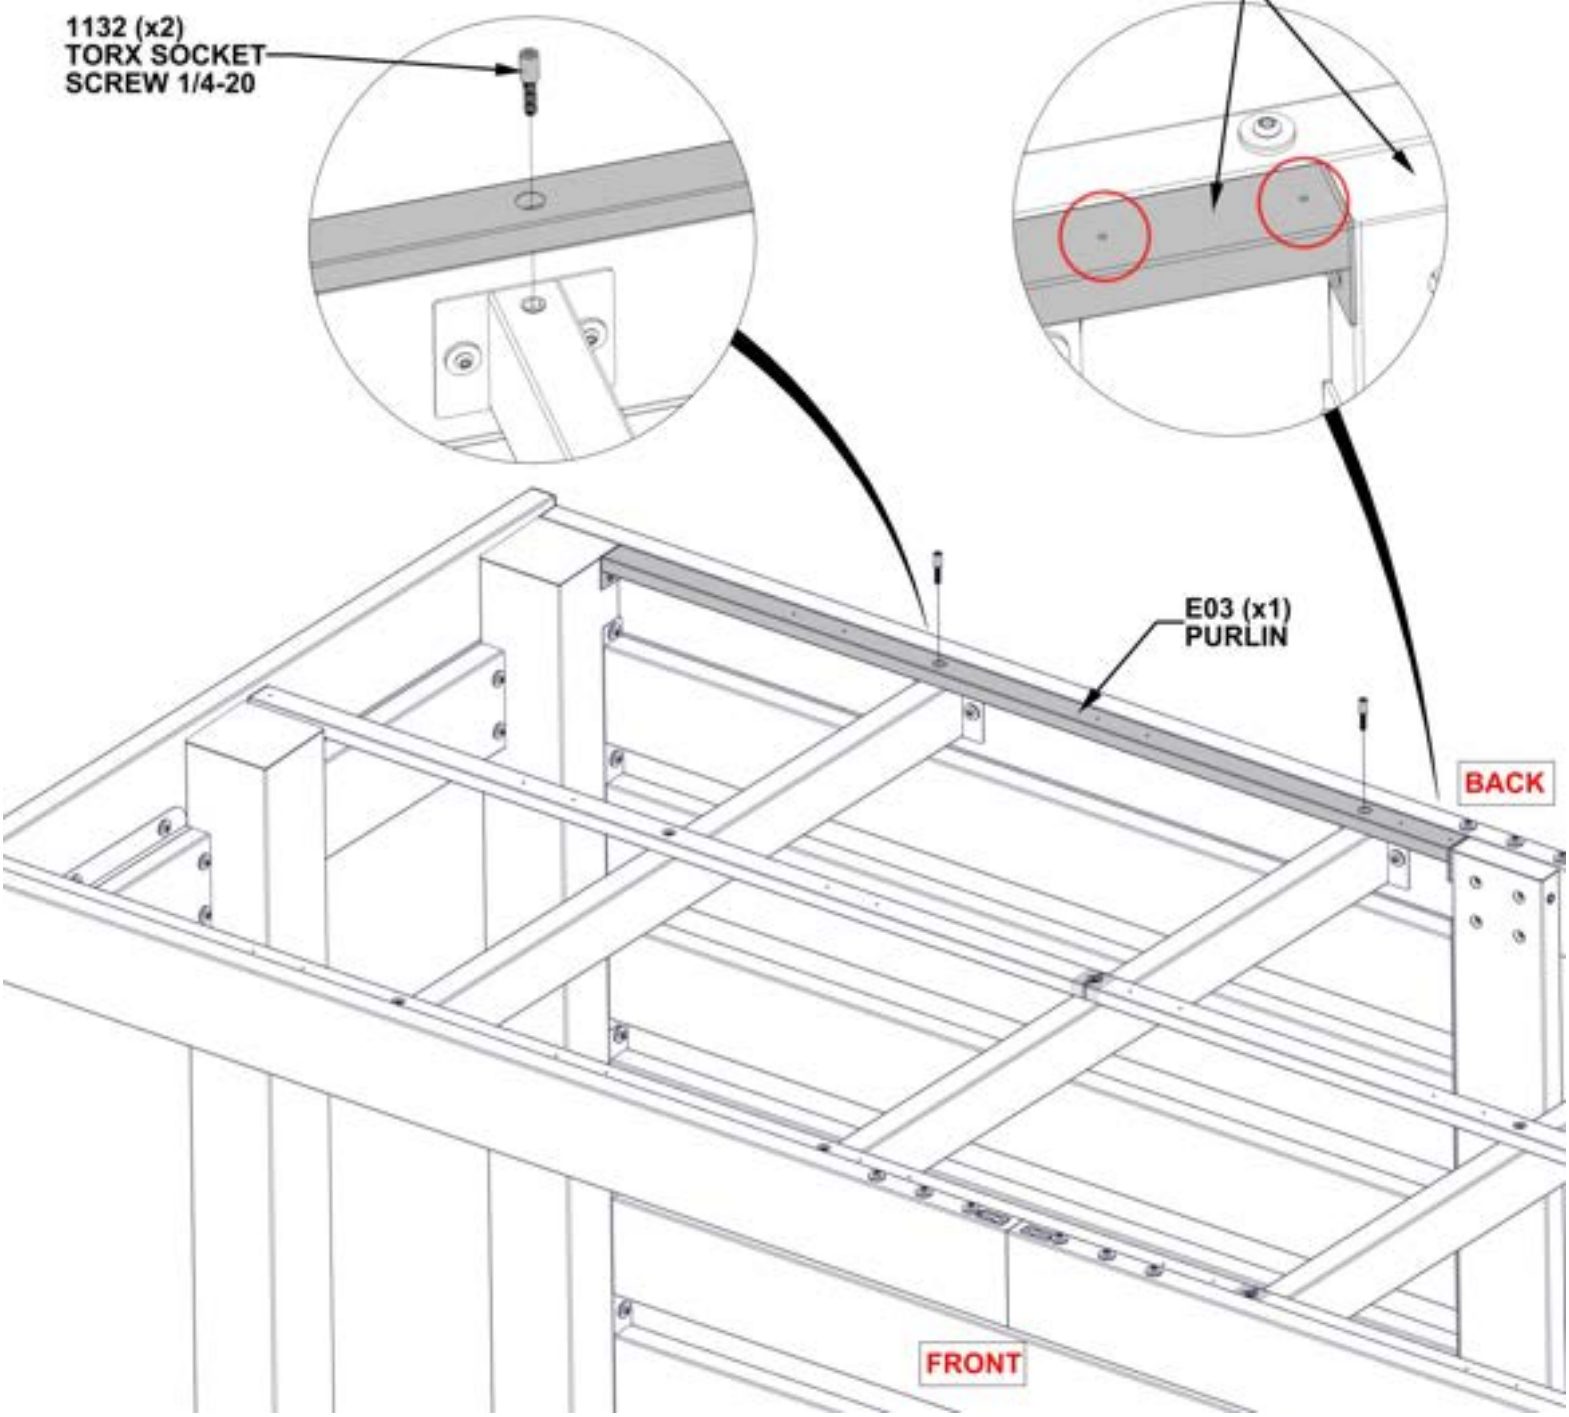

STEP 52B - ROOF ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT STAND ON CABINET FRAME TO INSTALL PURLIN

DO NOT TIGHTEN HARDWARE AT THIS STEP

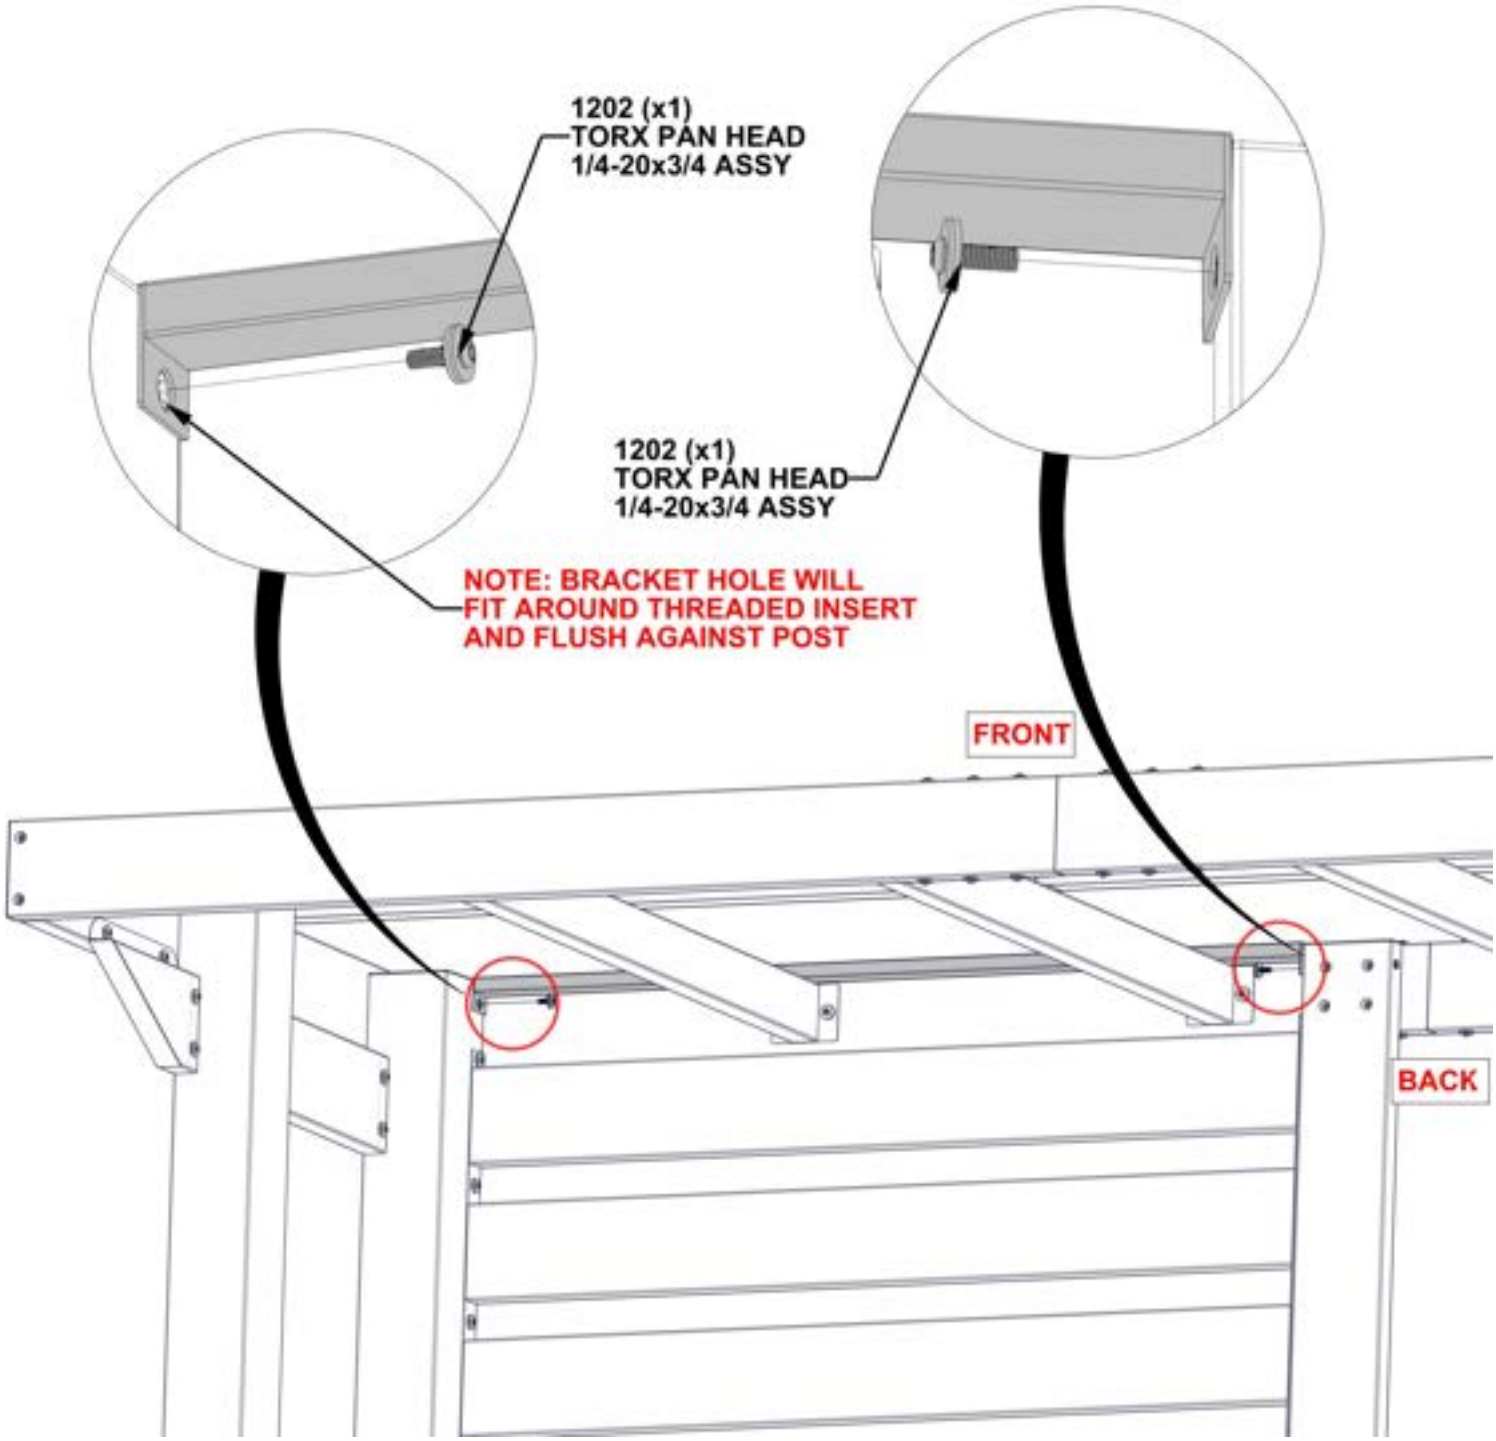

STEP 53A - ROOF ASSEMBLY

E04 PURLIN - A4M02026
(x1) 1 9/16"x1 3/4"x58 1/16" (40x45x1475)

QTY	PART NUMBER	Description
2	H101132	TORX SOCKET SCREW 1/4-20

DO NOT STAND ON CABINET FRAME TO INSTALL PURLIN

DO NOT TIGHTEN HARDWARE AT THIS STEP

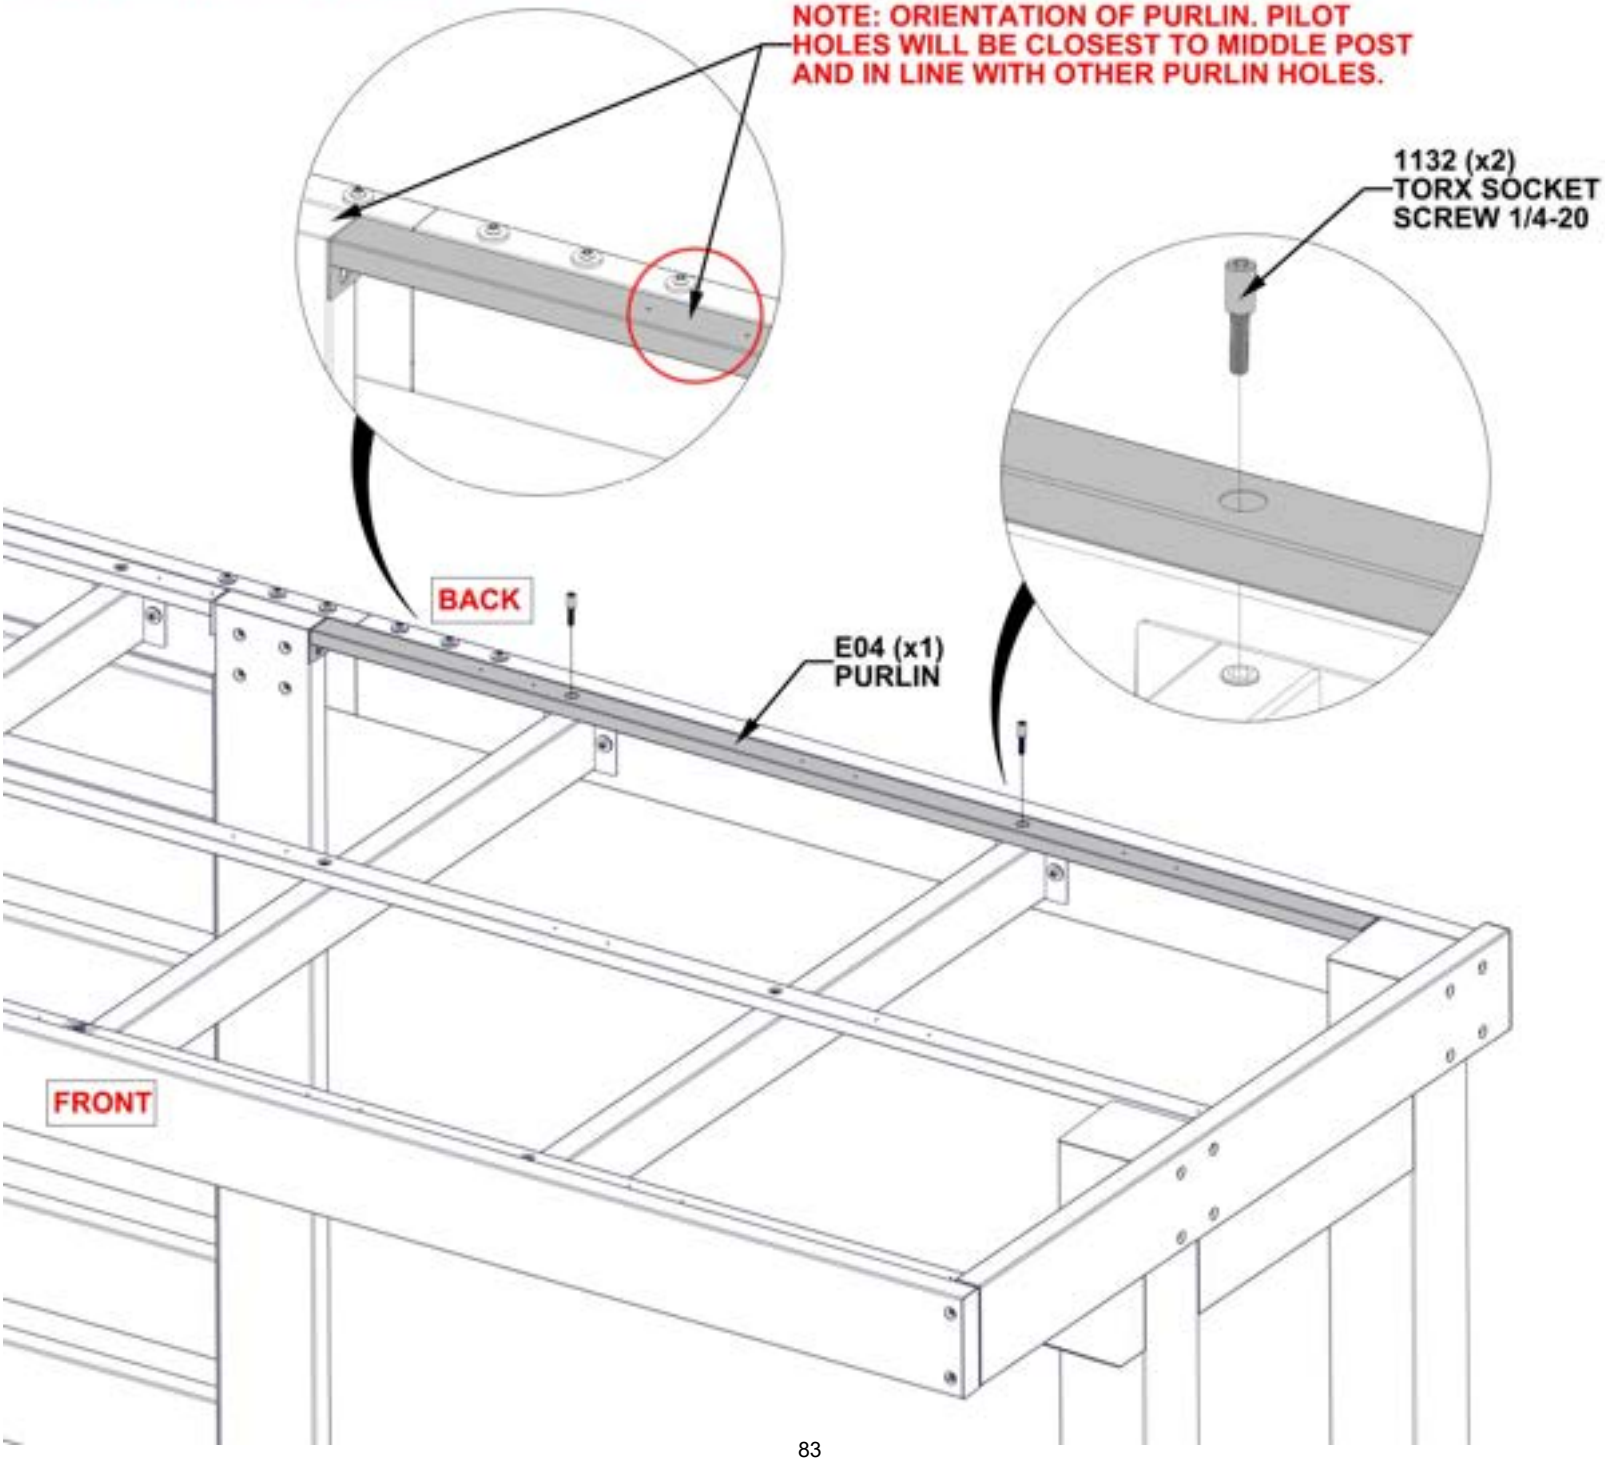

STEP 53B - ROOF ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT STAND ON CABINET FRAME TO INSTALL PURLIN

DO NOT TIGHTEN HARDWARE AT THIS STEP

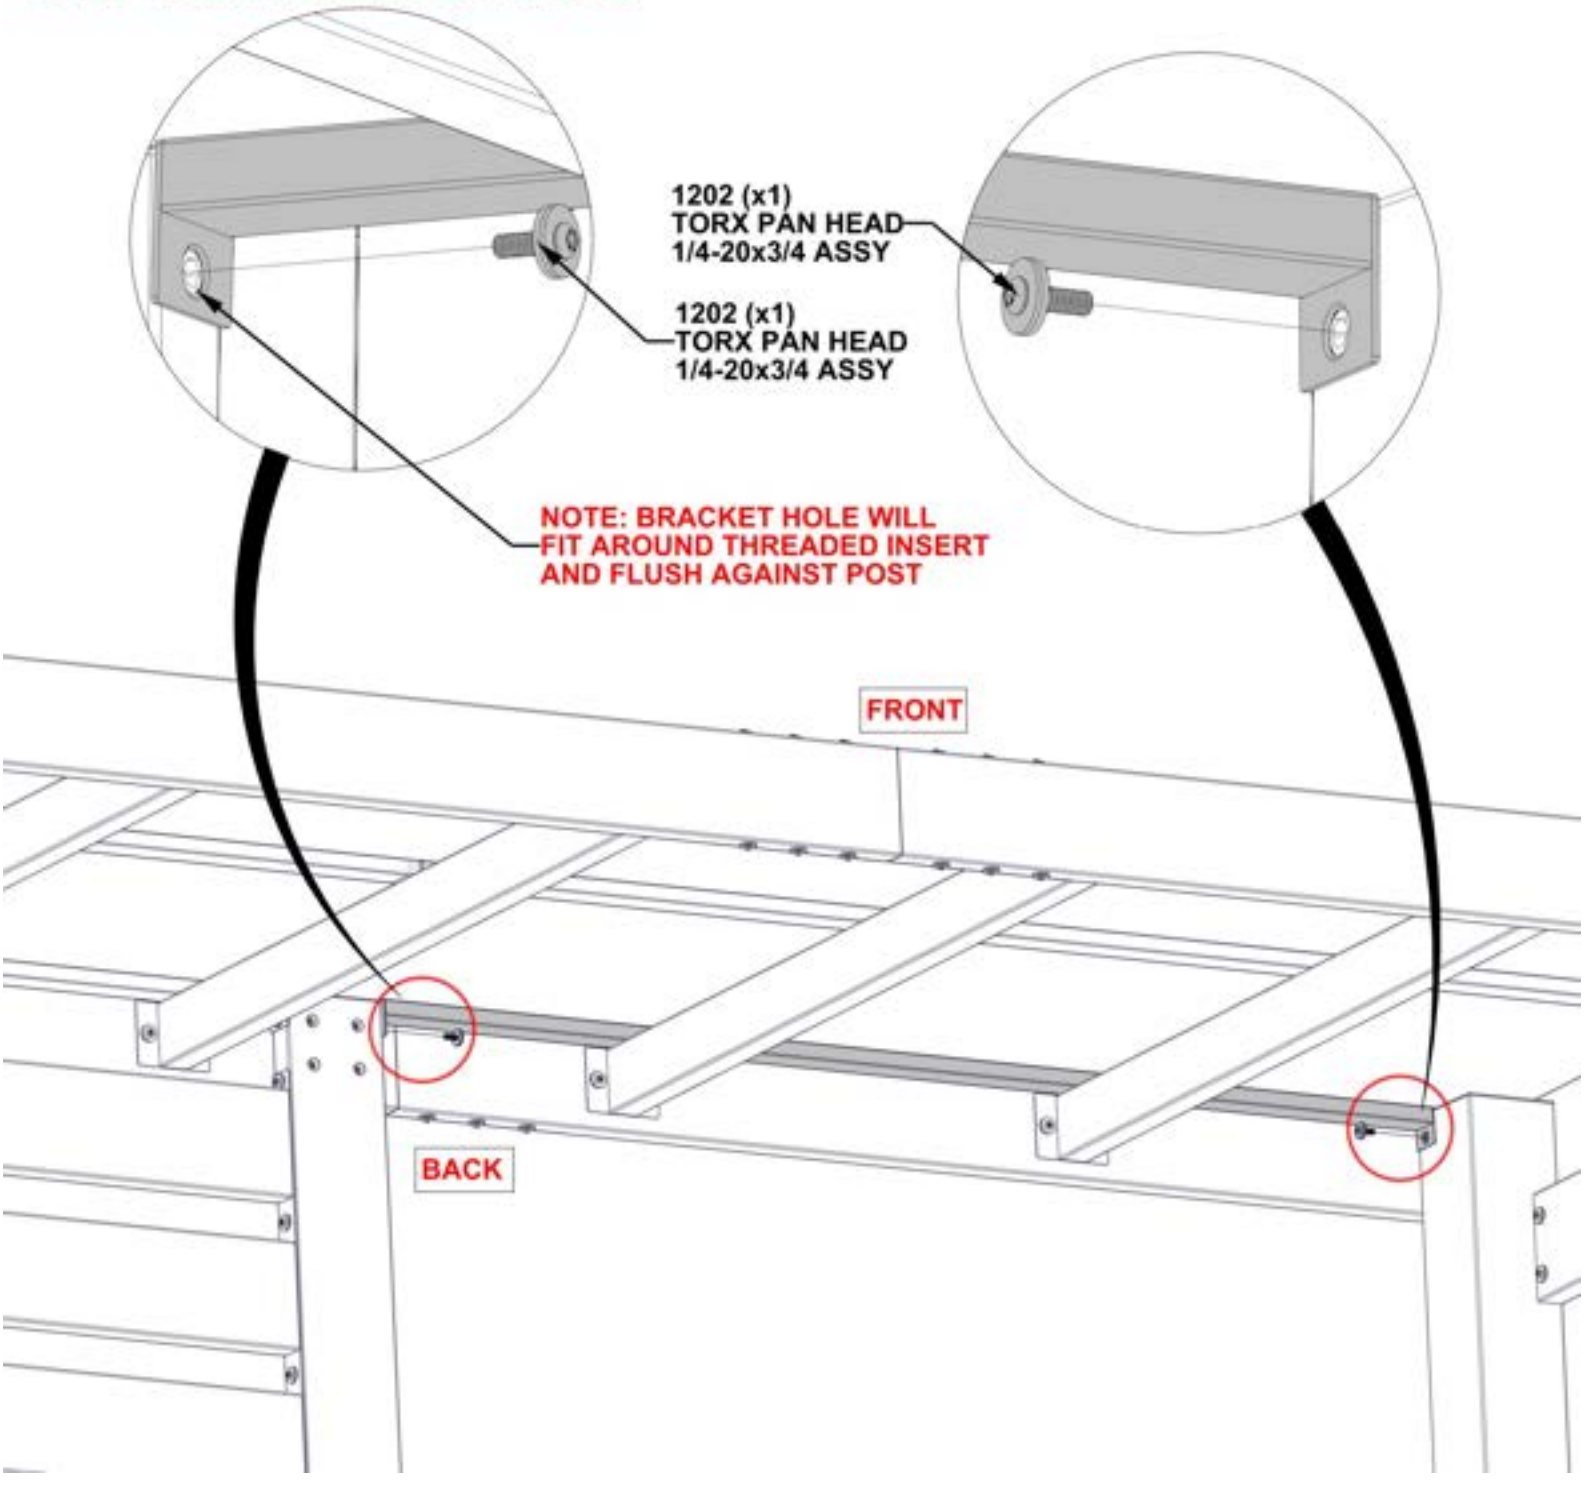

STEP 54 - SQUARE THE ASSEMBLY

CRITICAL: SQUARE KITCHEN ROOF BEFORE PROCEEDING TO NEXT STEPS
ONCE SQUARE, TIGHTEN ALL HARDWARE.

MEASUREMENTS TAKEN FROM CORNER TO CORNER OF ROOF.

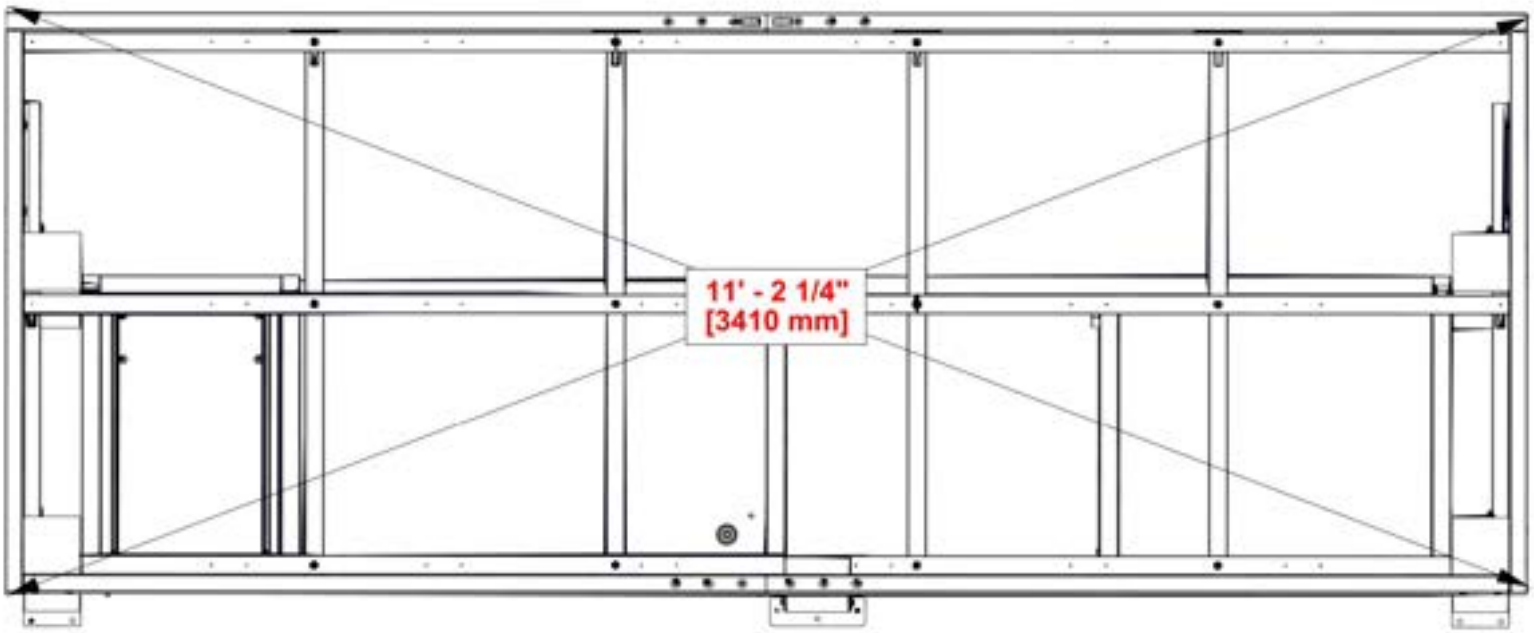

BEFORE PROCEEDING, MAKE SURE ALL HARDWARE IS TIGHT AND KITCHEN ROOF IS SQUARE.

STEP 55 - KITCHEN ACCESSORIES

A4M02078 (x28) WOOD GRAIN HOLE COVER

USE A SMALL PIECE OF WOOD AND RUBBER MALLET TO TAP HOLE COVERS IN.

DO NOT TAP DIRECTLY WITH A HAMMER AS YOU MAY DAMAGE THE FINISH ON PRODUCT.

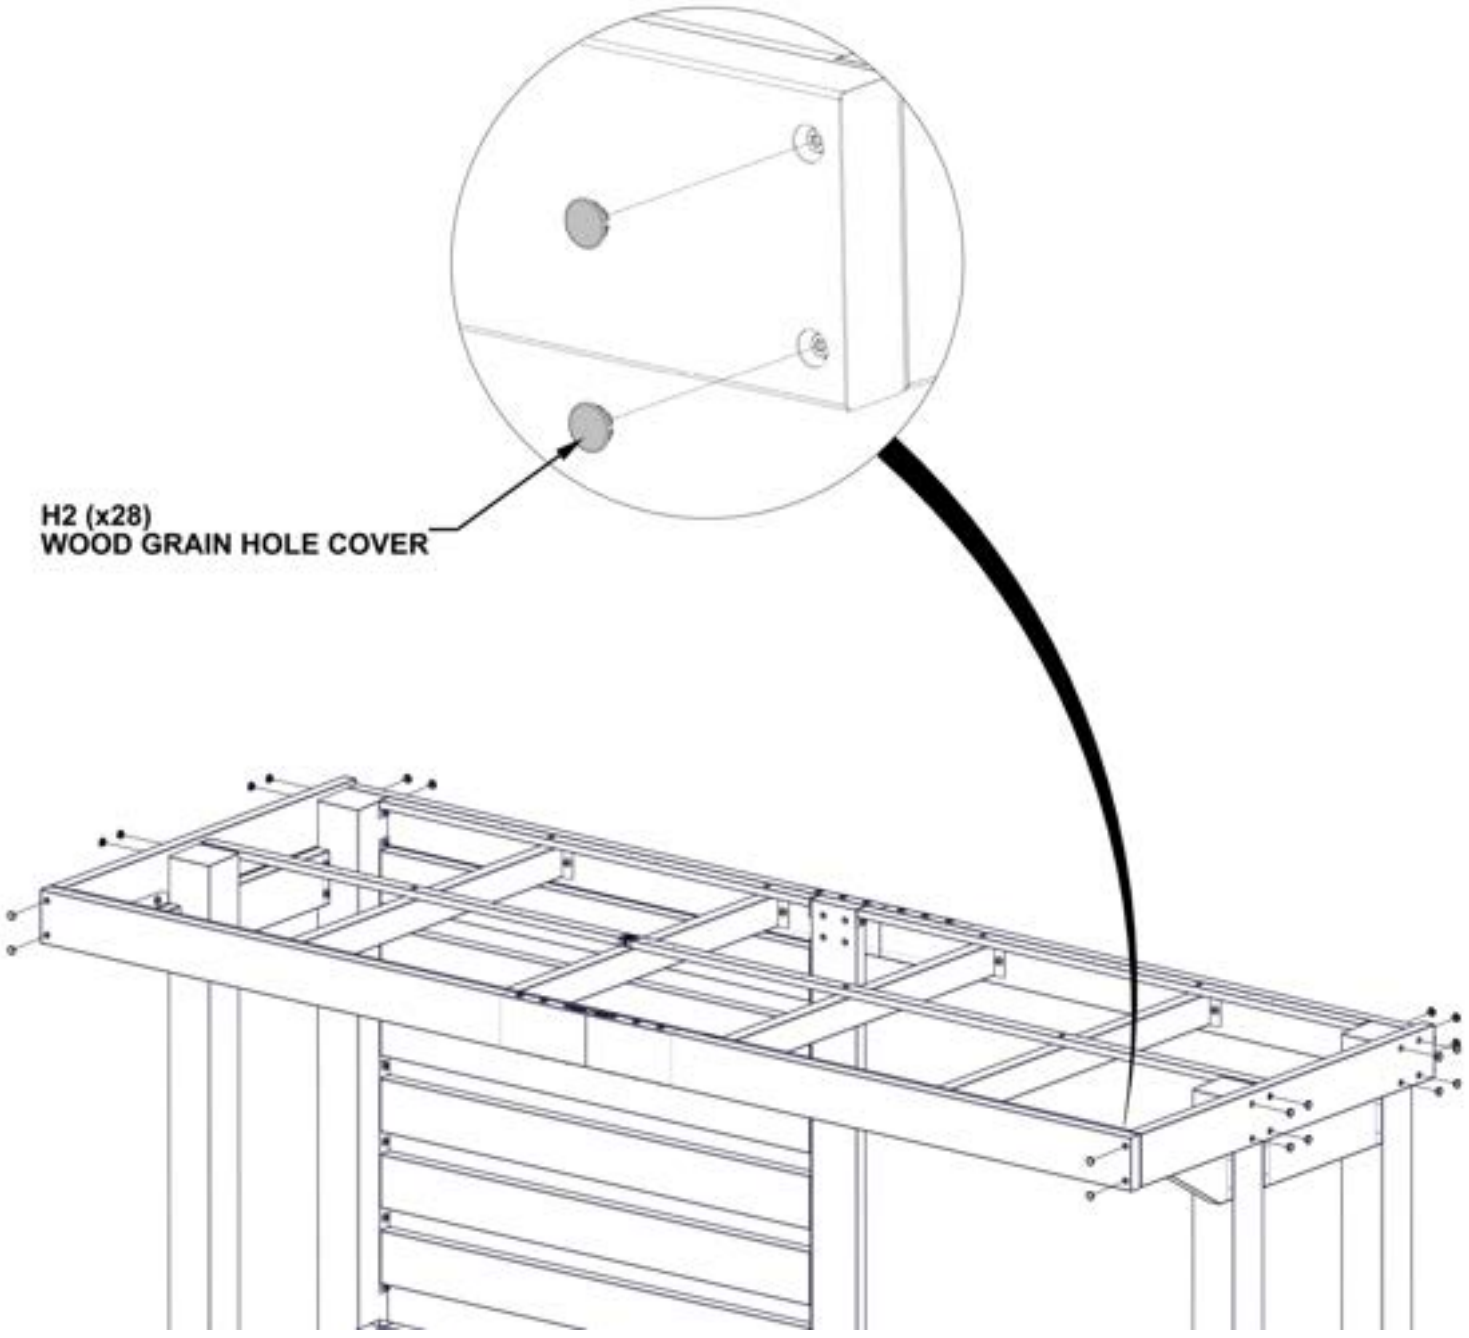

STEP 56 - ROOF ASSEMBLY

QTY	PART NUMBER	Description
4	H101117	SCREW WOODGRIP 10-16x3/4" BLK

A4M03115 29GA STEEL SHEETING LEFT
(x1)

TIPS:
- REMOVE PROTECTIVE FILM

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

STARTING AT THE LEFT SIDE AND WORKING TO THE RIGHT, LINE UP THE HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS

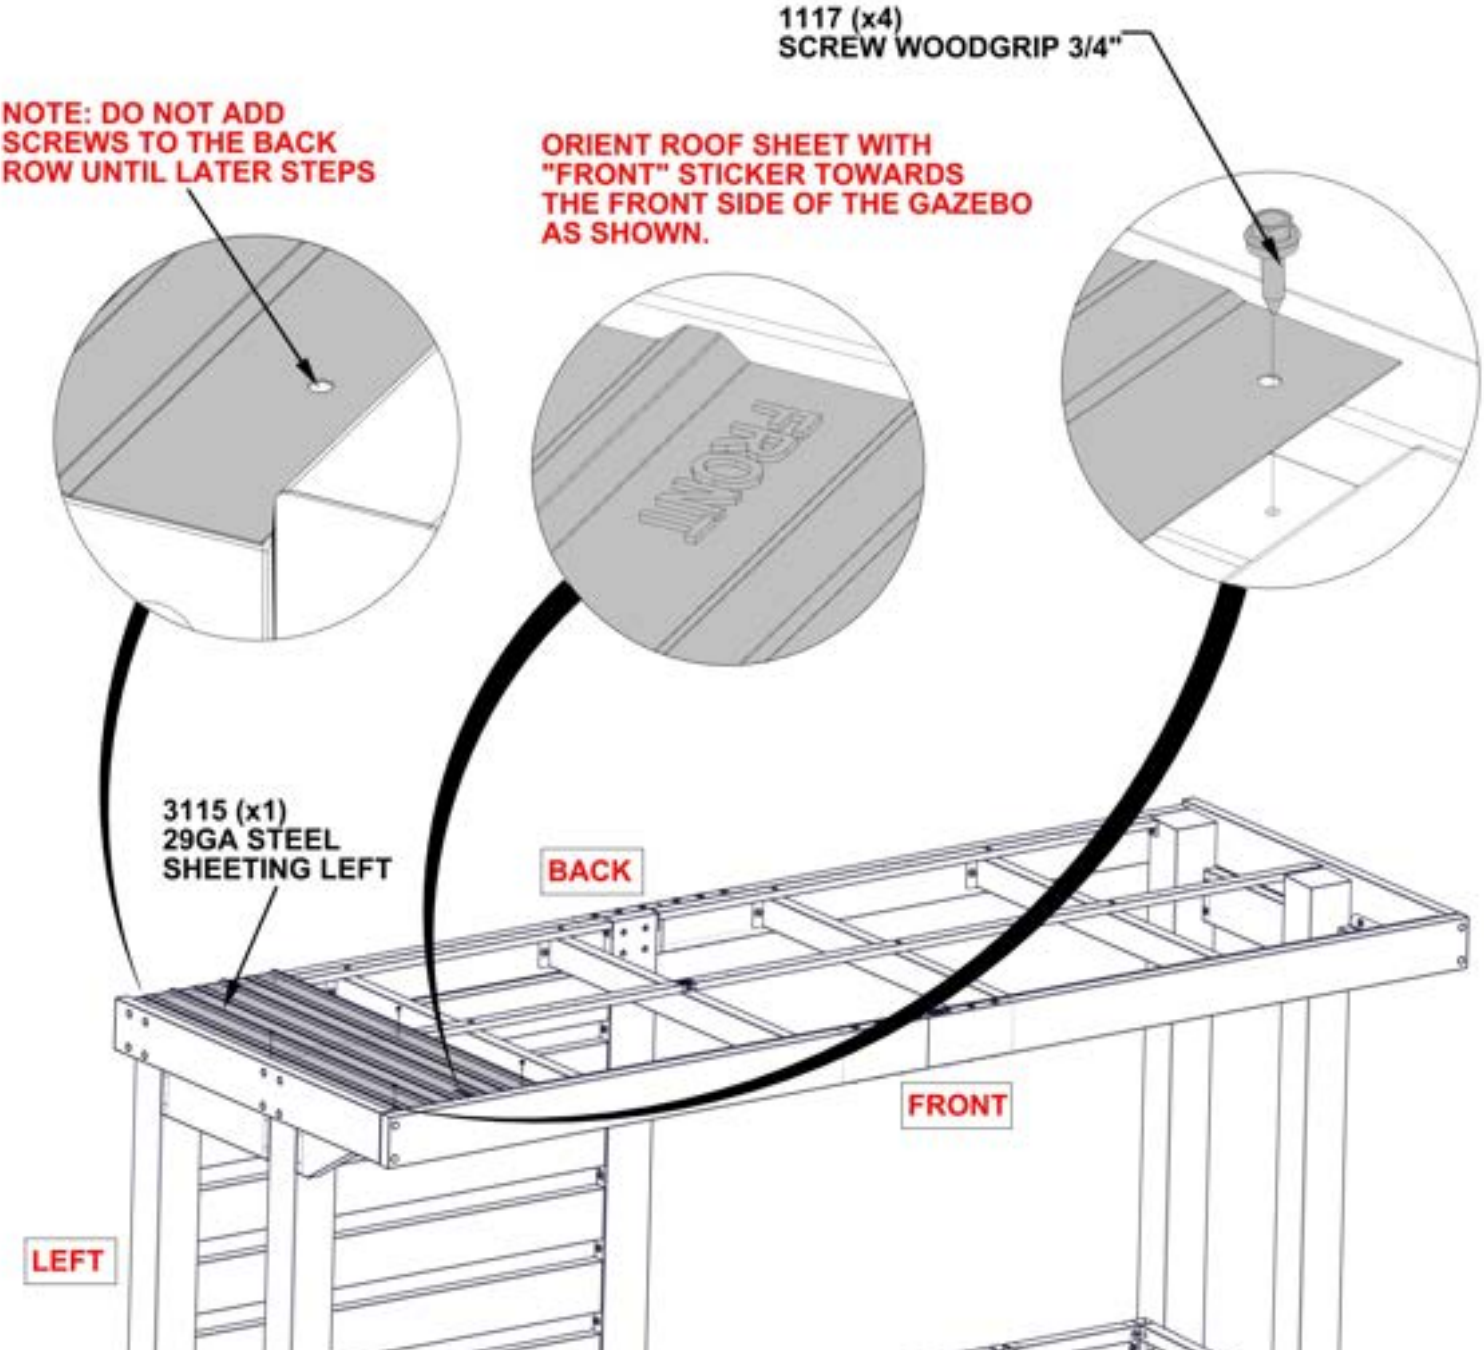

STEP 57 - ROOF ASSEMBLY

QTY	PART NUMBER	Description
20	H101117	SCREW WOODGRIP 10-16x3/4" BLK

A4M03113 29GA STEEL SHEETING
(x5)

TIPS:
- REMOVE PROTECTIVE FILM

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

STARTING AT THE LEFT SIDE AND WORKING TO THE RIGHT, LINE UP THE HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS

ATTACH AND FULLY TIGHTEN ALL SCREWS ON EACH ROOF SHEET BEFORE ATTACHING THE NEXT ONE. THIS MAKES IT POSSIBLE TO REACH ALL THE SCREWS WITHOUT GETTING ON THE ROOF.

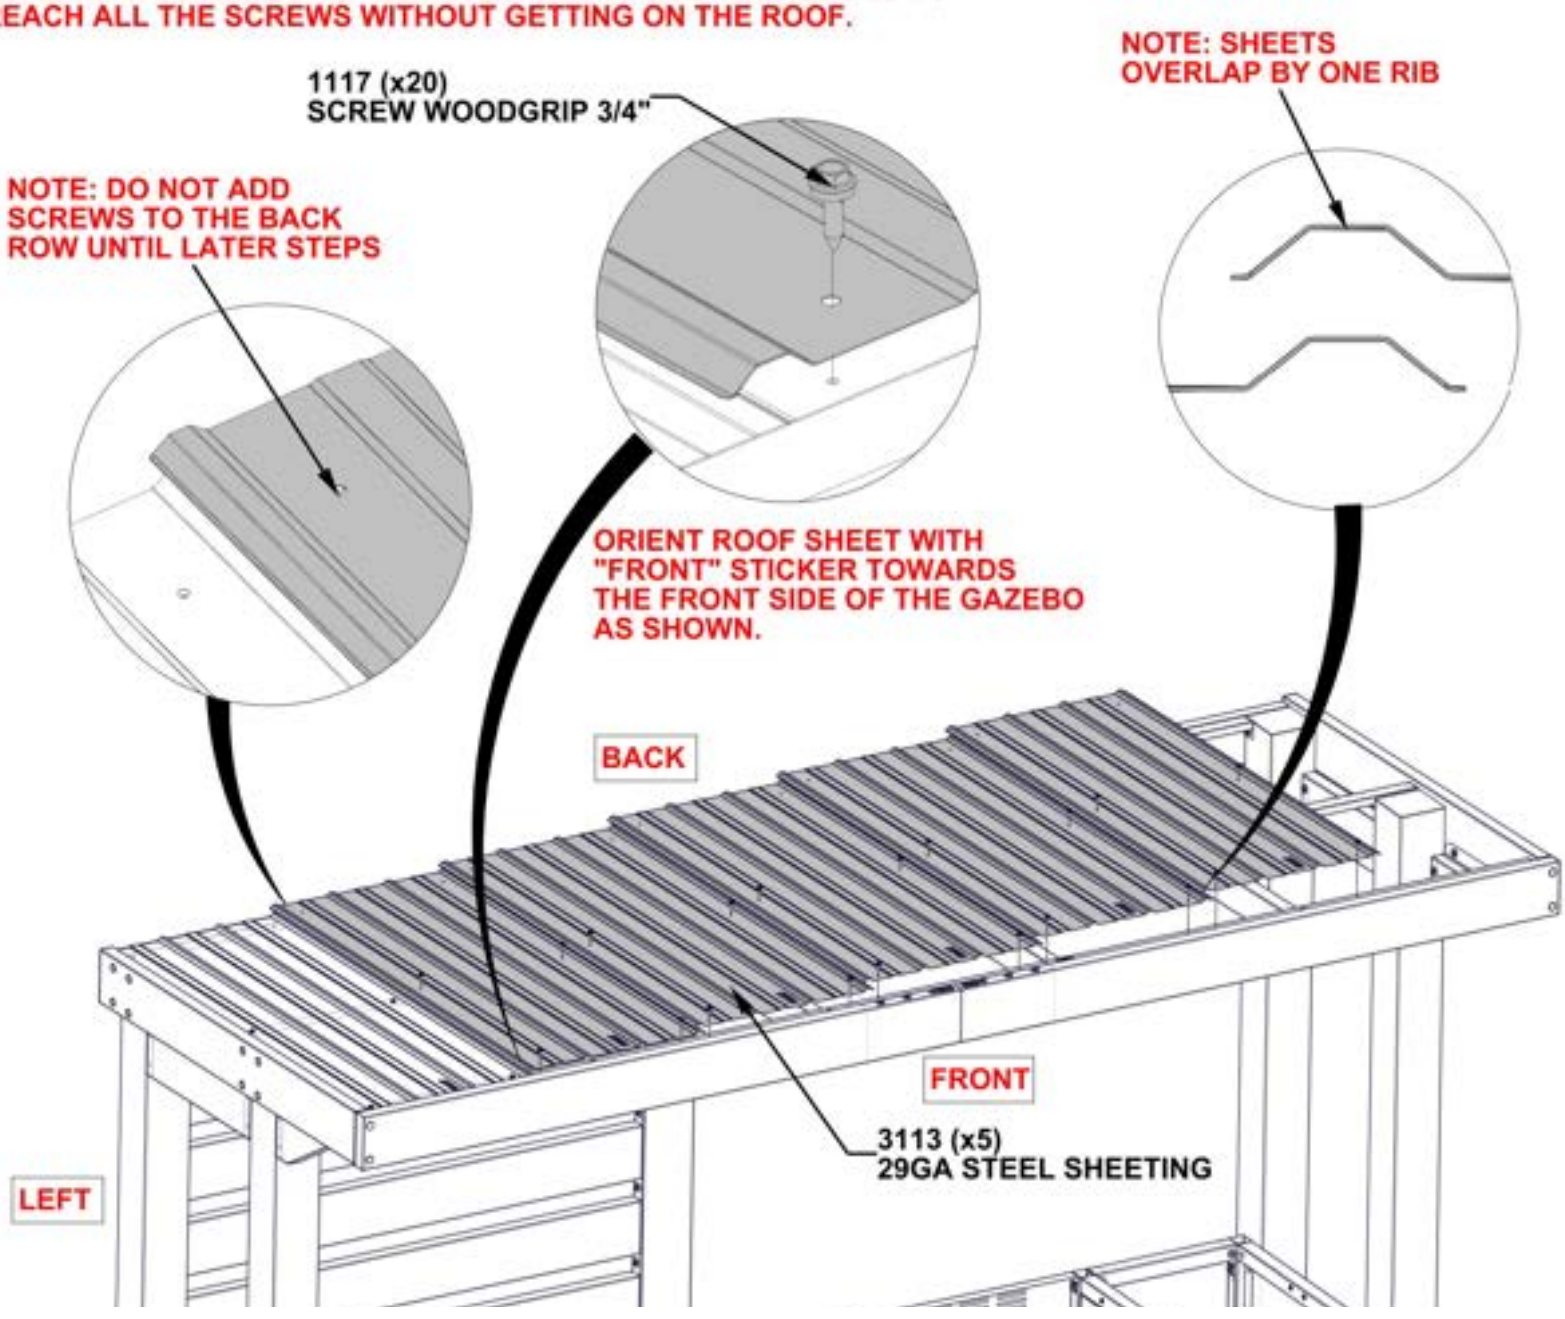

STEP 58 - ROOF ASSEMBLY

QTY	PART NUMBER	Description
4	H101117	SCREW WOODGRIP 10-16x3/4" BLK

A4M03116 29GA STEEL SHEETING RIGHT
(x1)

TIPS:
- REMOVE PROTECTIVE FILM

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

ORIENT ROOF SHEET WITH "FRONT" STICKER TOWARDS THE FRONT SIDE OF THE GAZEBO AS SHOWN.

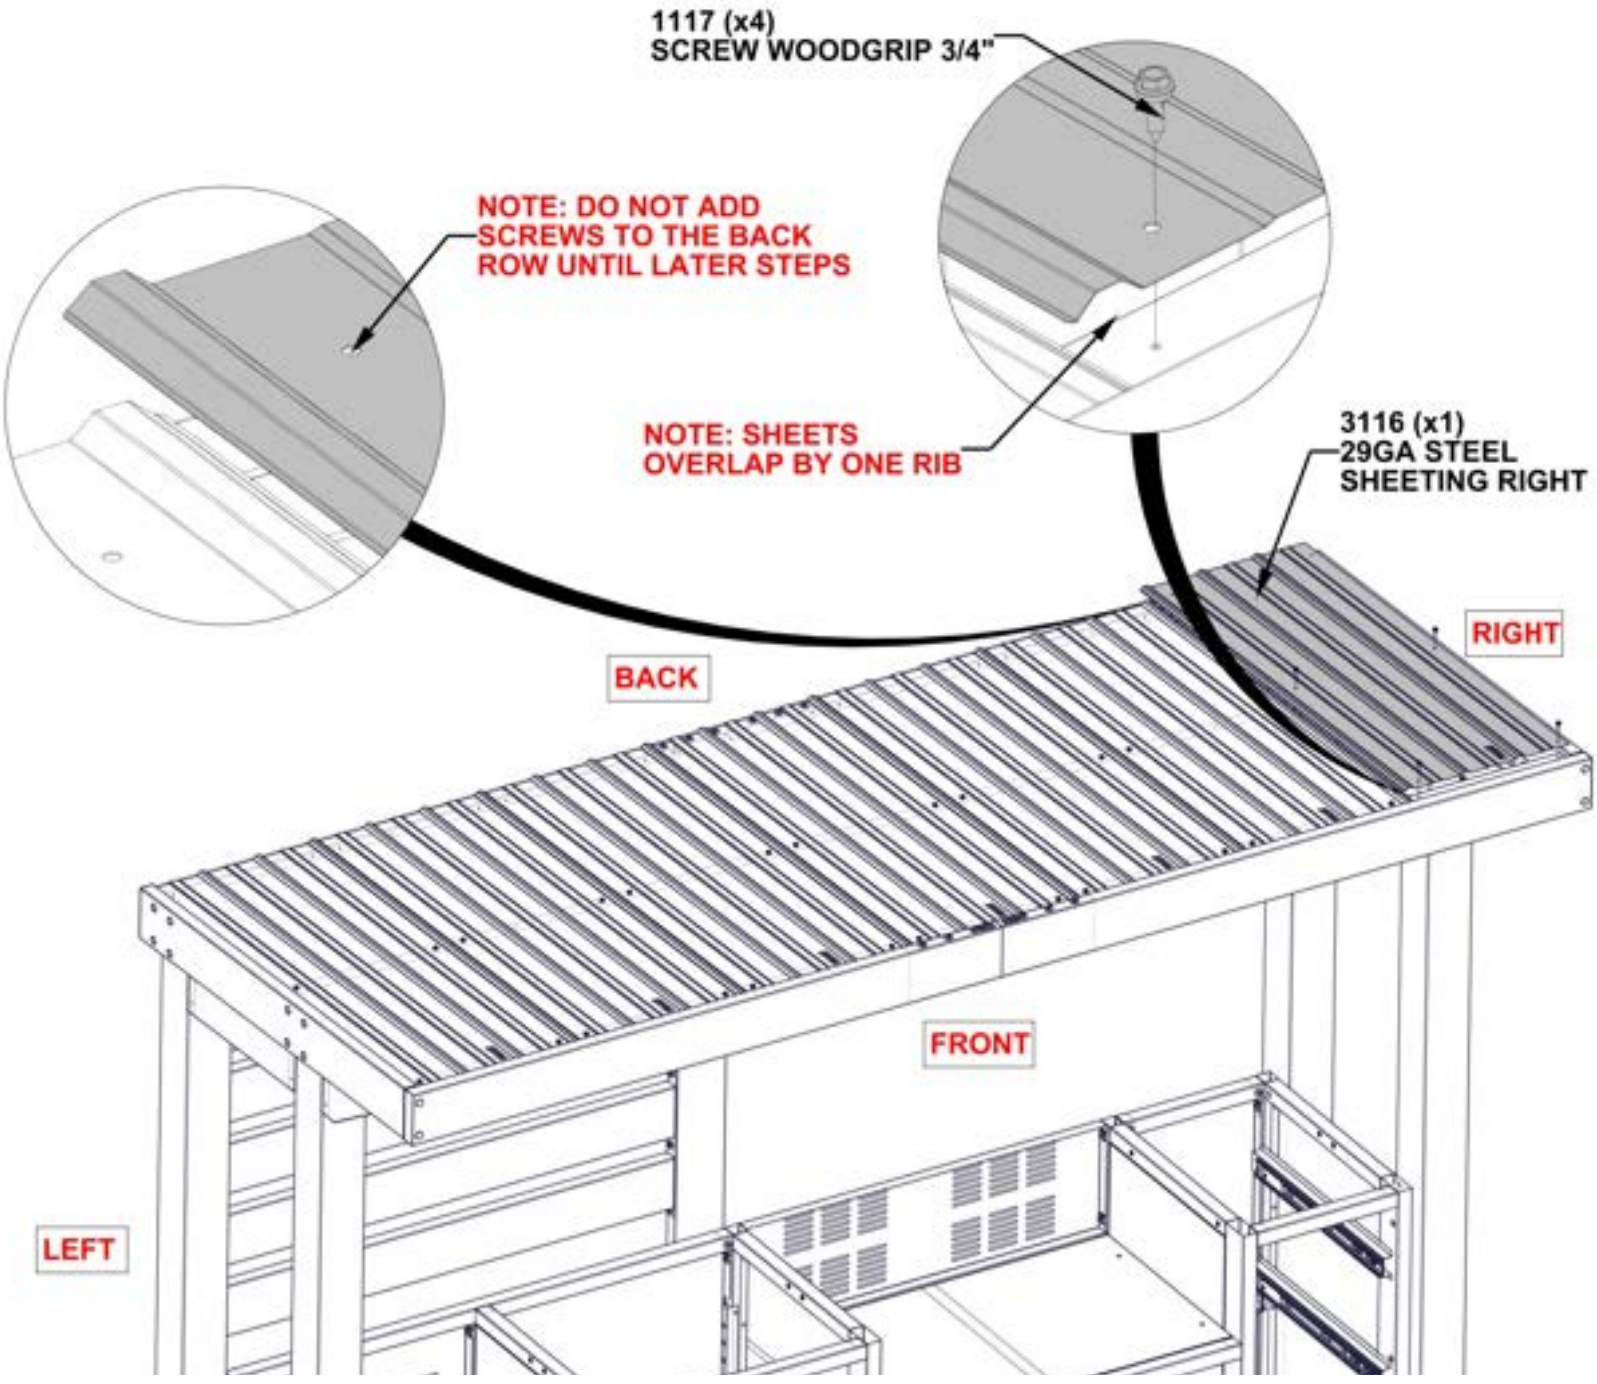

STEP 59 - ROOF ASSEMBLY

QTY	PART NUMBER	Description
14	H101117	SCREW WOODGRIP 10-16x3/4" BLK

A4M03117 DRIP EDGE
(x1)

A4M03121 DRIP EDGE
(x1)

A4M03118 DRIP EDGE SPLICE
(x1)

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

NOTES:
- REMOVE BLUE FILM FROM DRIP EDGE AND DRIP EDGE SPLICE.
- DUE TO MULTIPLE LAYERS OF METAL ON THE DRIP EDGE, IT IS RECOMMENDED THAT A 1/8" DRILL BIT BE USED TO CREATE STARTER HOLES.
- ORIENT DRIP EDGE AND SPLICE AS SHOWN BELOW.
- ATTACH USING HOLES IN SHEETING. DO NOT GET ON ROOF TO ATTACH SCREWS.

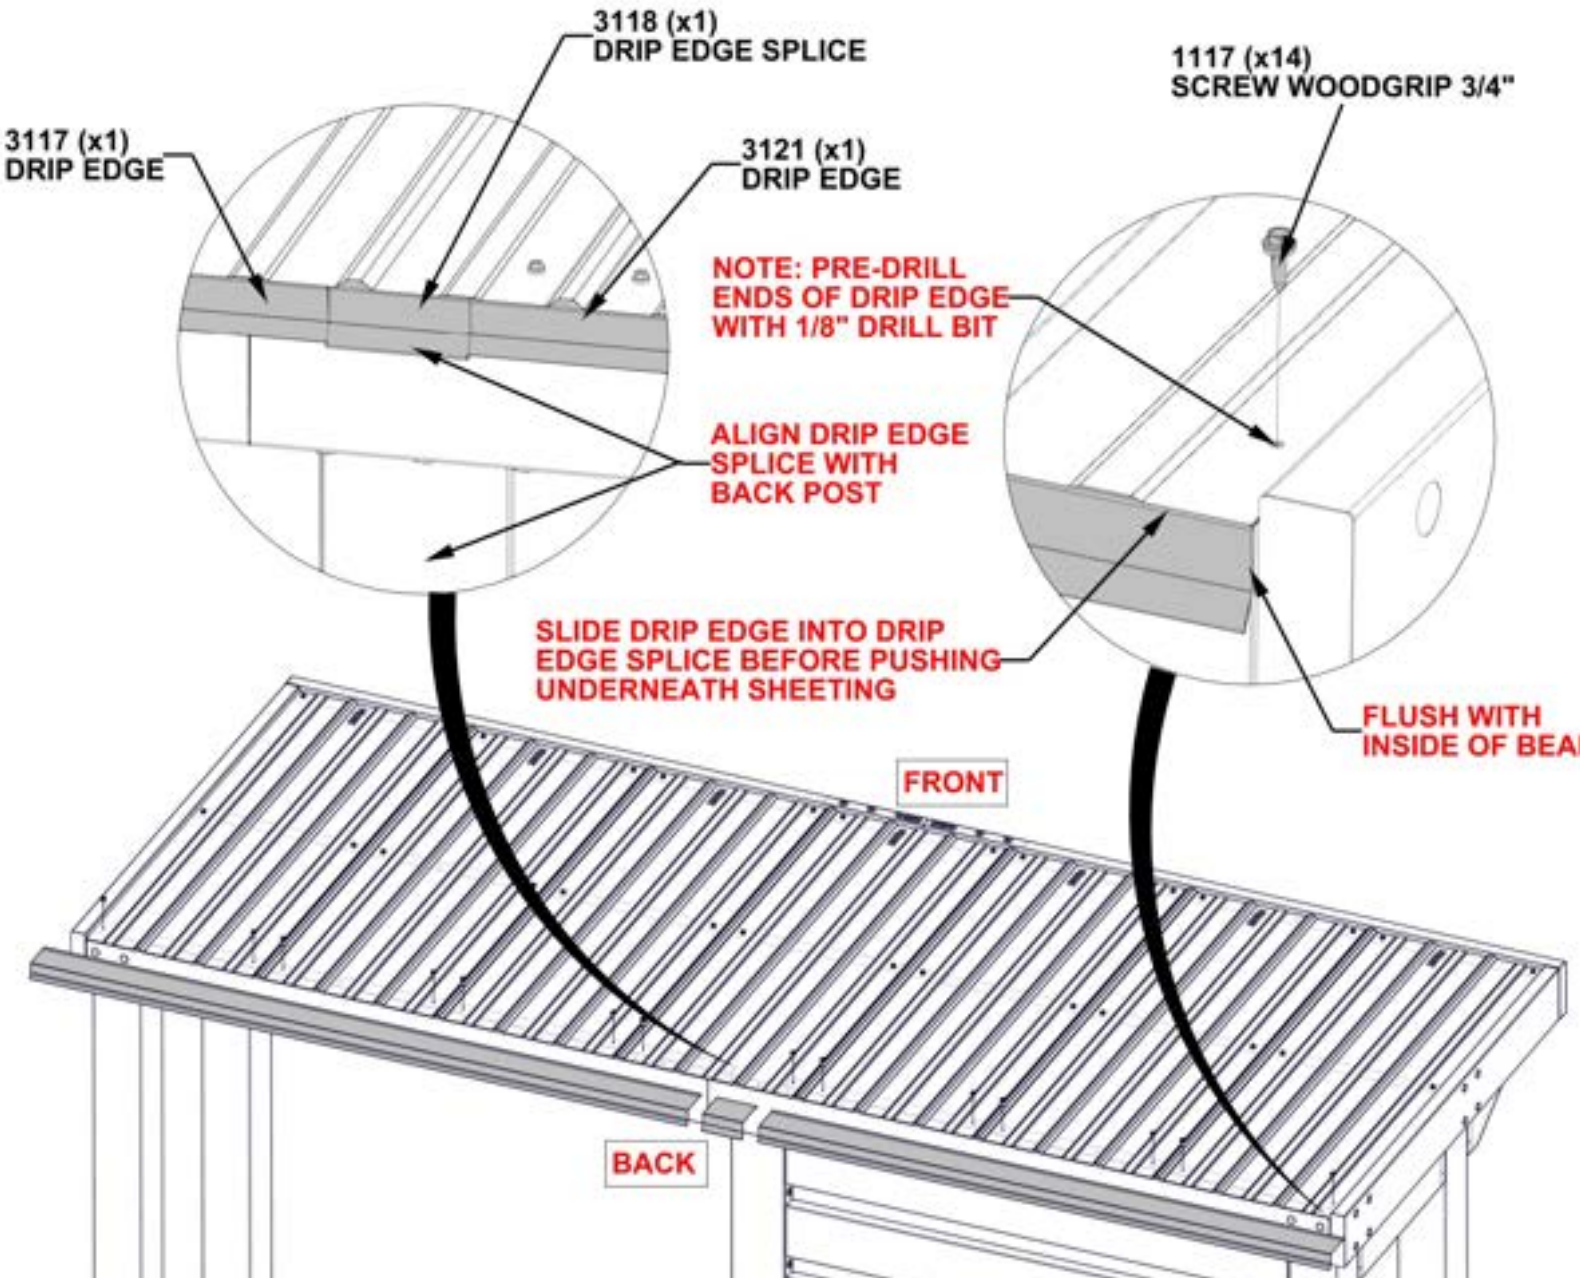

STEP 60 - ROOF ASSEMBLY

A4M03114 (x2) DRIP EDGE

QTY	PART NUMBER	Description
8	H101116	SCREW SELF TAPPING 1/4x1 BLK

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

NOTES:
- REMOVE PROTECTIVE BLUE FILM.
- DUE TO MULTIPLE LAYERS OF METAL ON THE EDGE TRIM, IT IS RECOMMENDED THAT A 1/8" DRILL BIT BE USED TO CREATE STARTER HOLES.

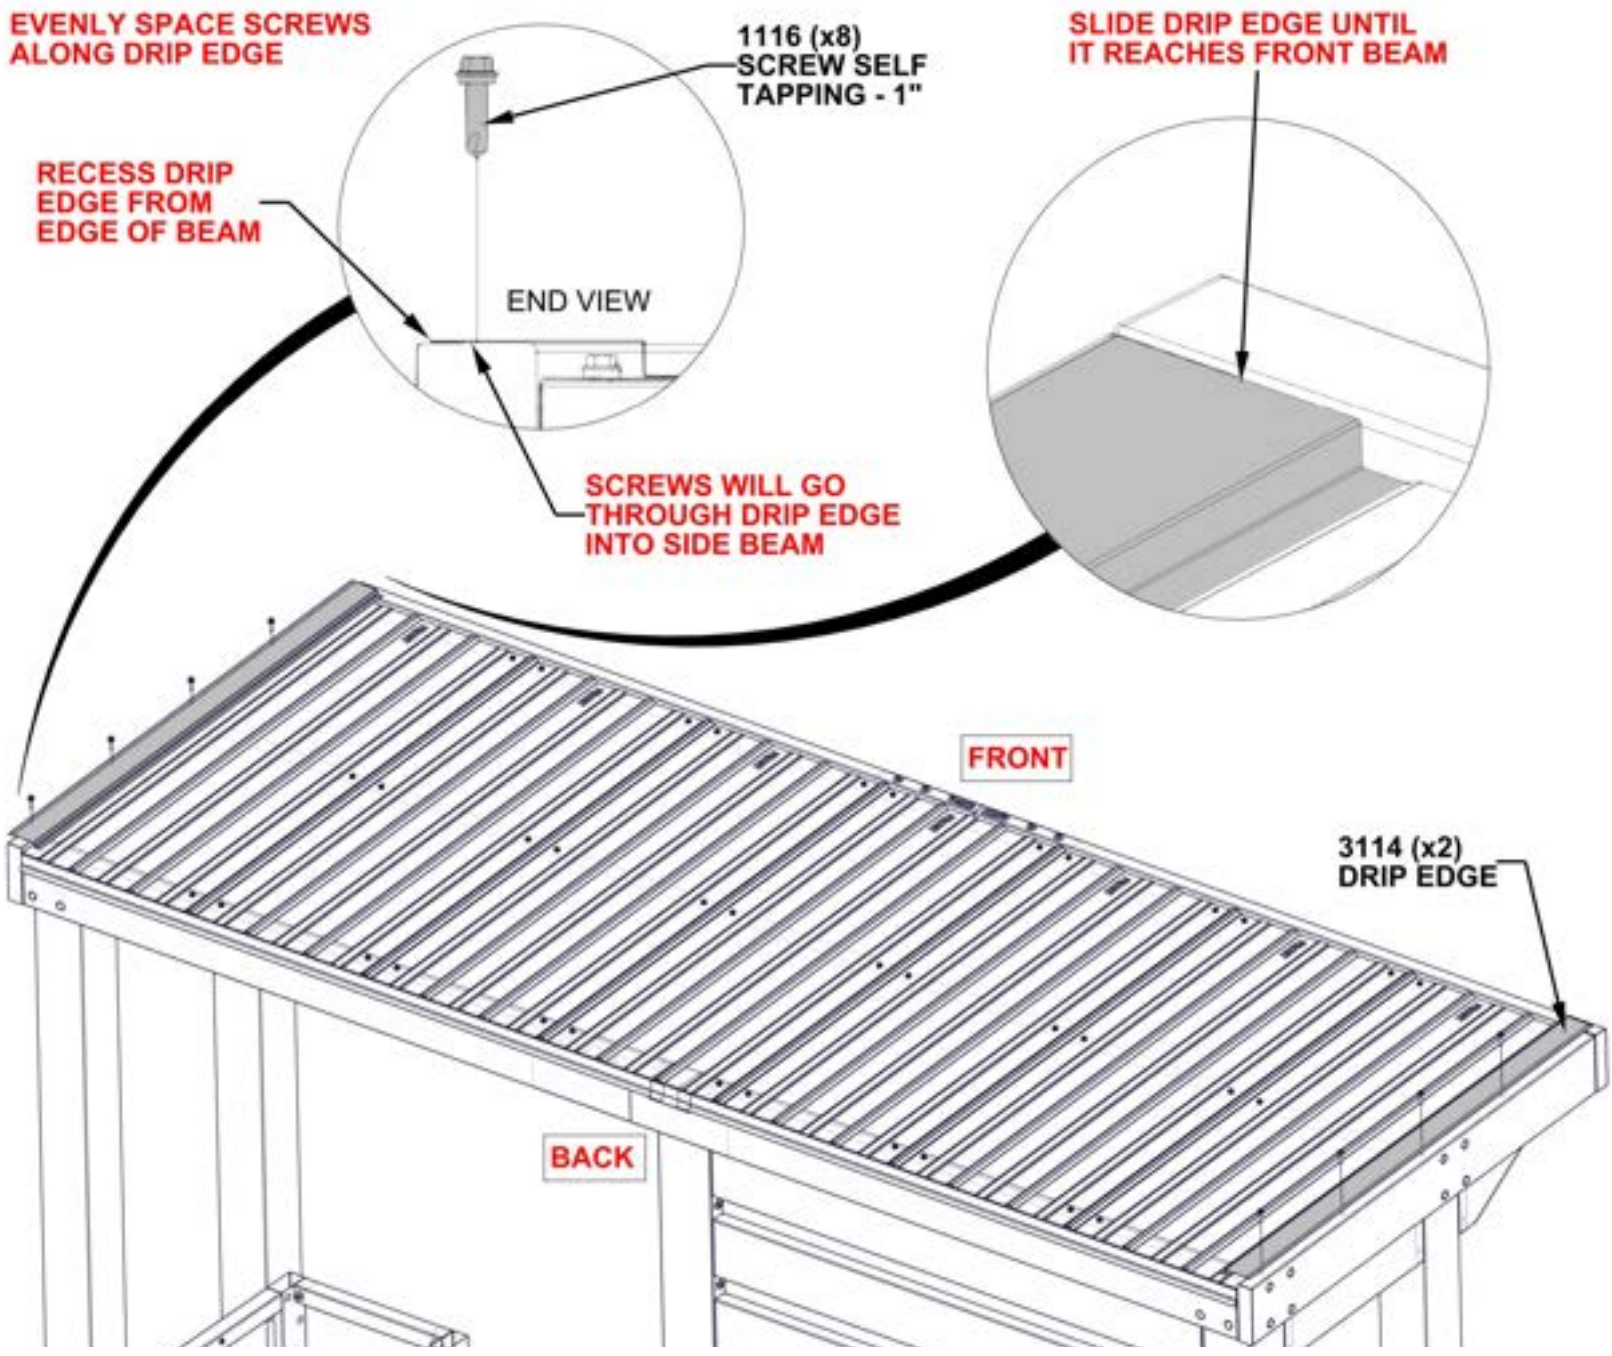

STEP 61A - ROOF ASSEMBLY

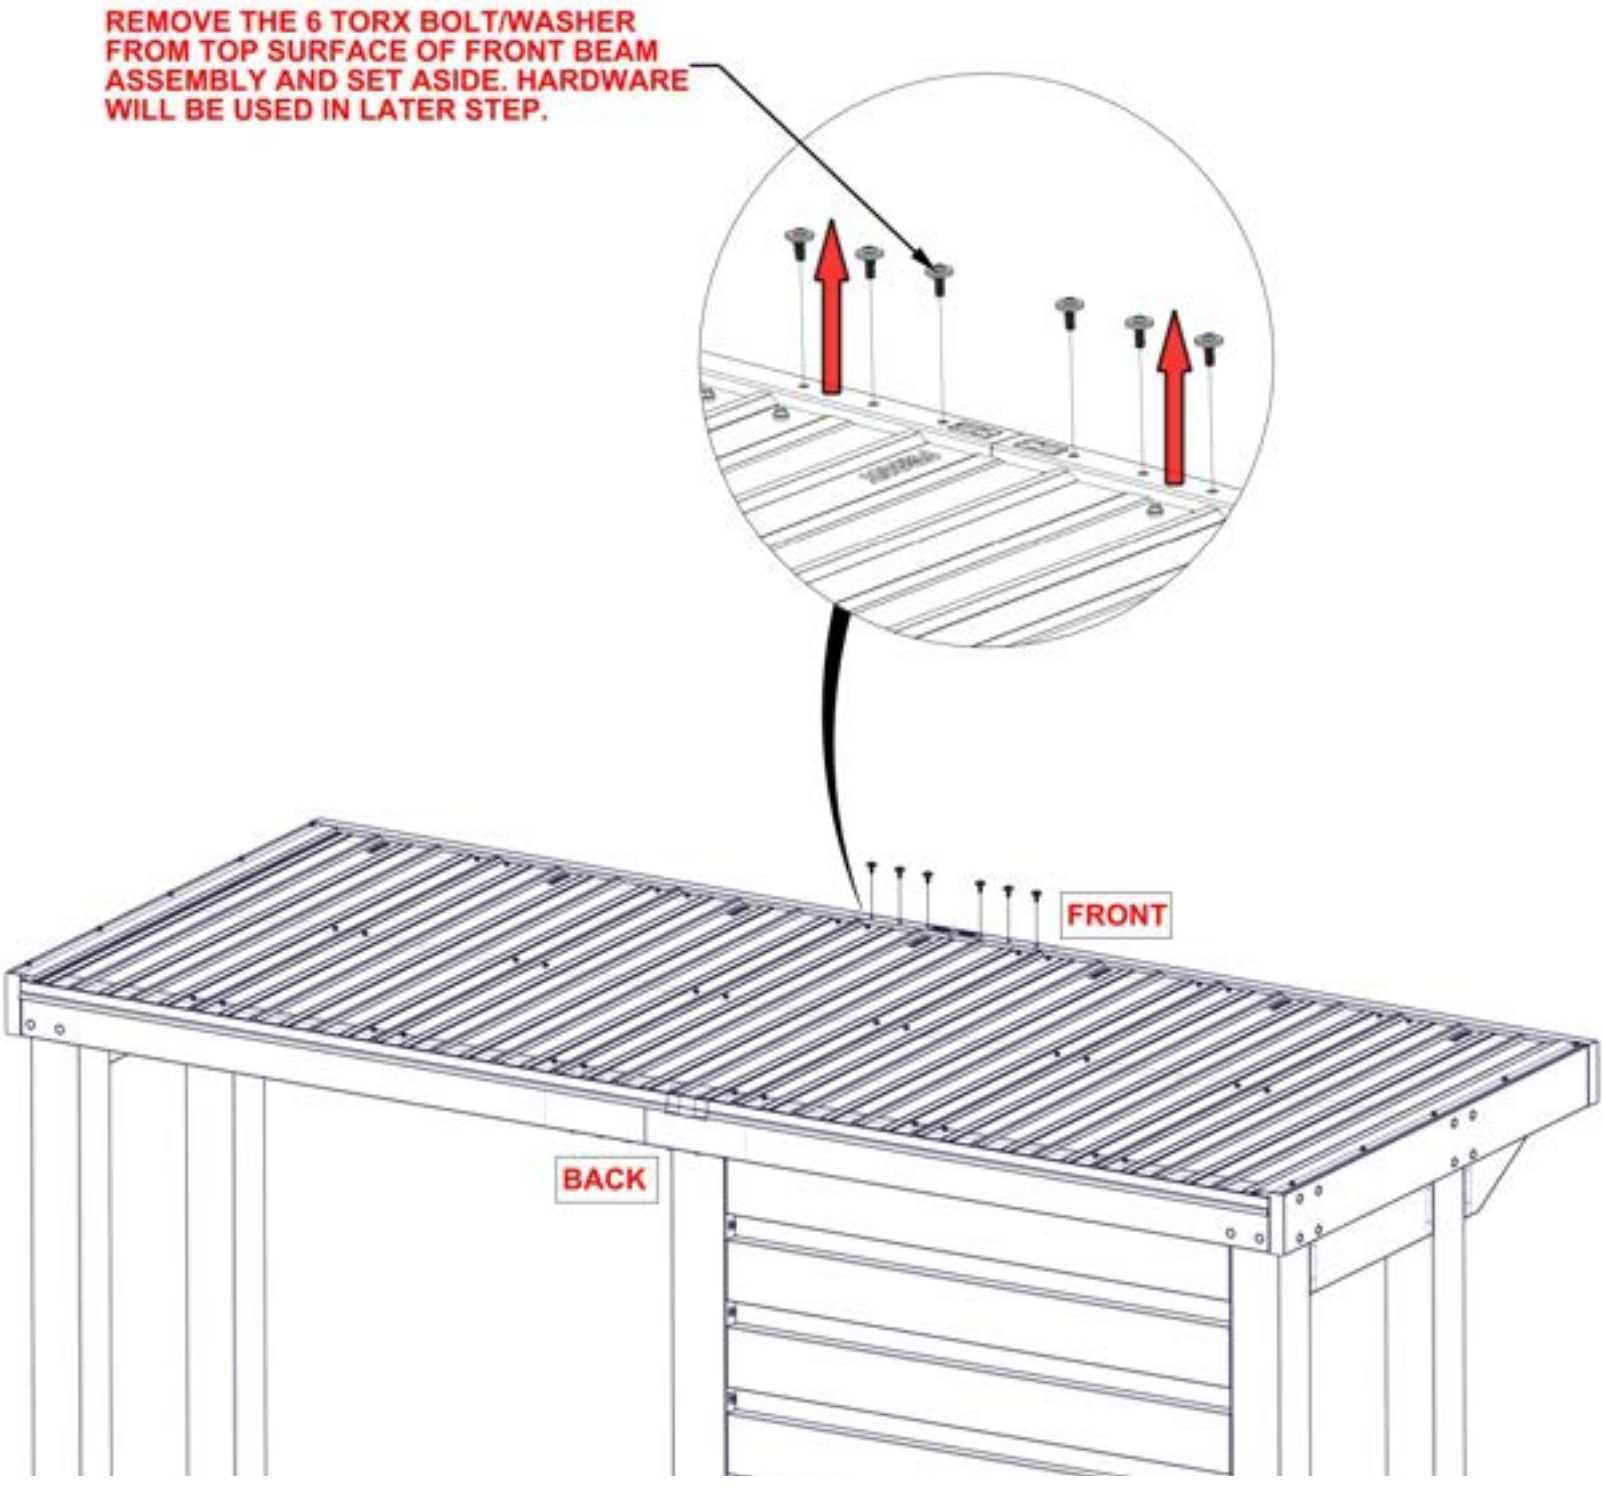

STEP 61B - ROOF ASSEMBLY

A4M03119 DRIP EDGE
(x1)

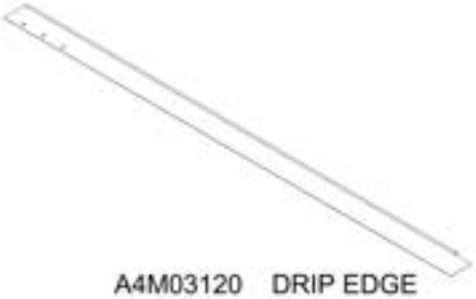

A4M03120 DRIP EDGE
(x1)

A4M03122 DRIP EDGE SPLICE
(x1)

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

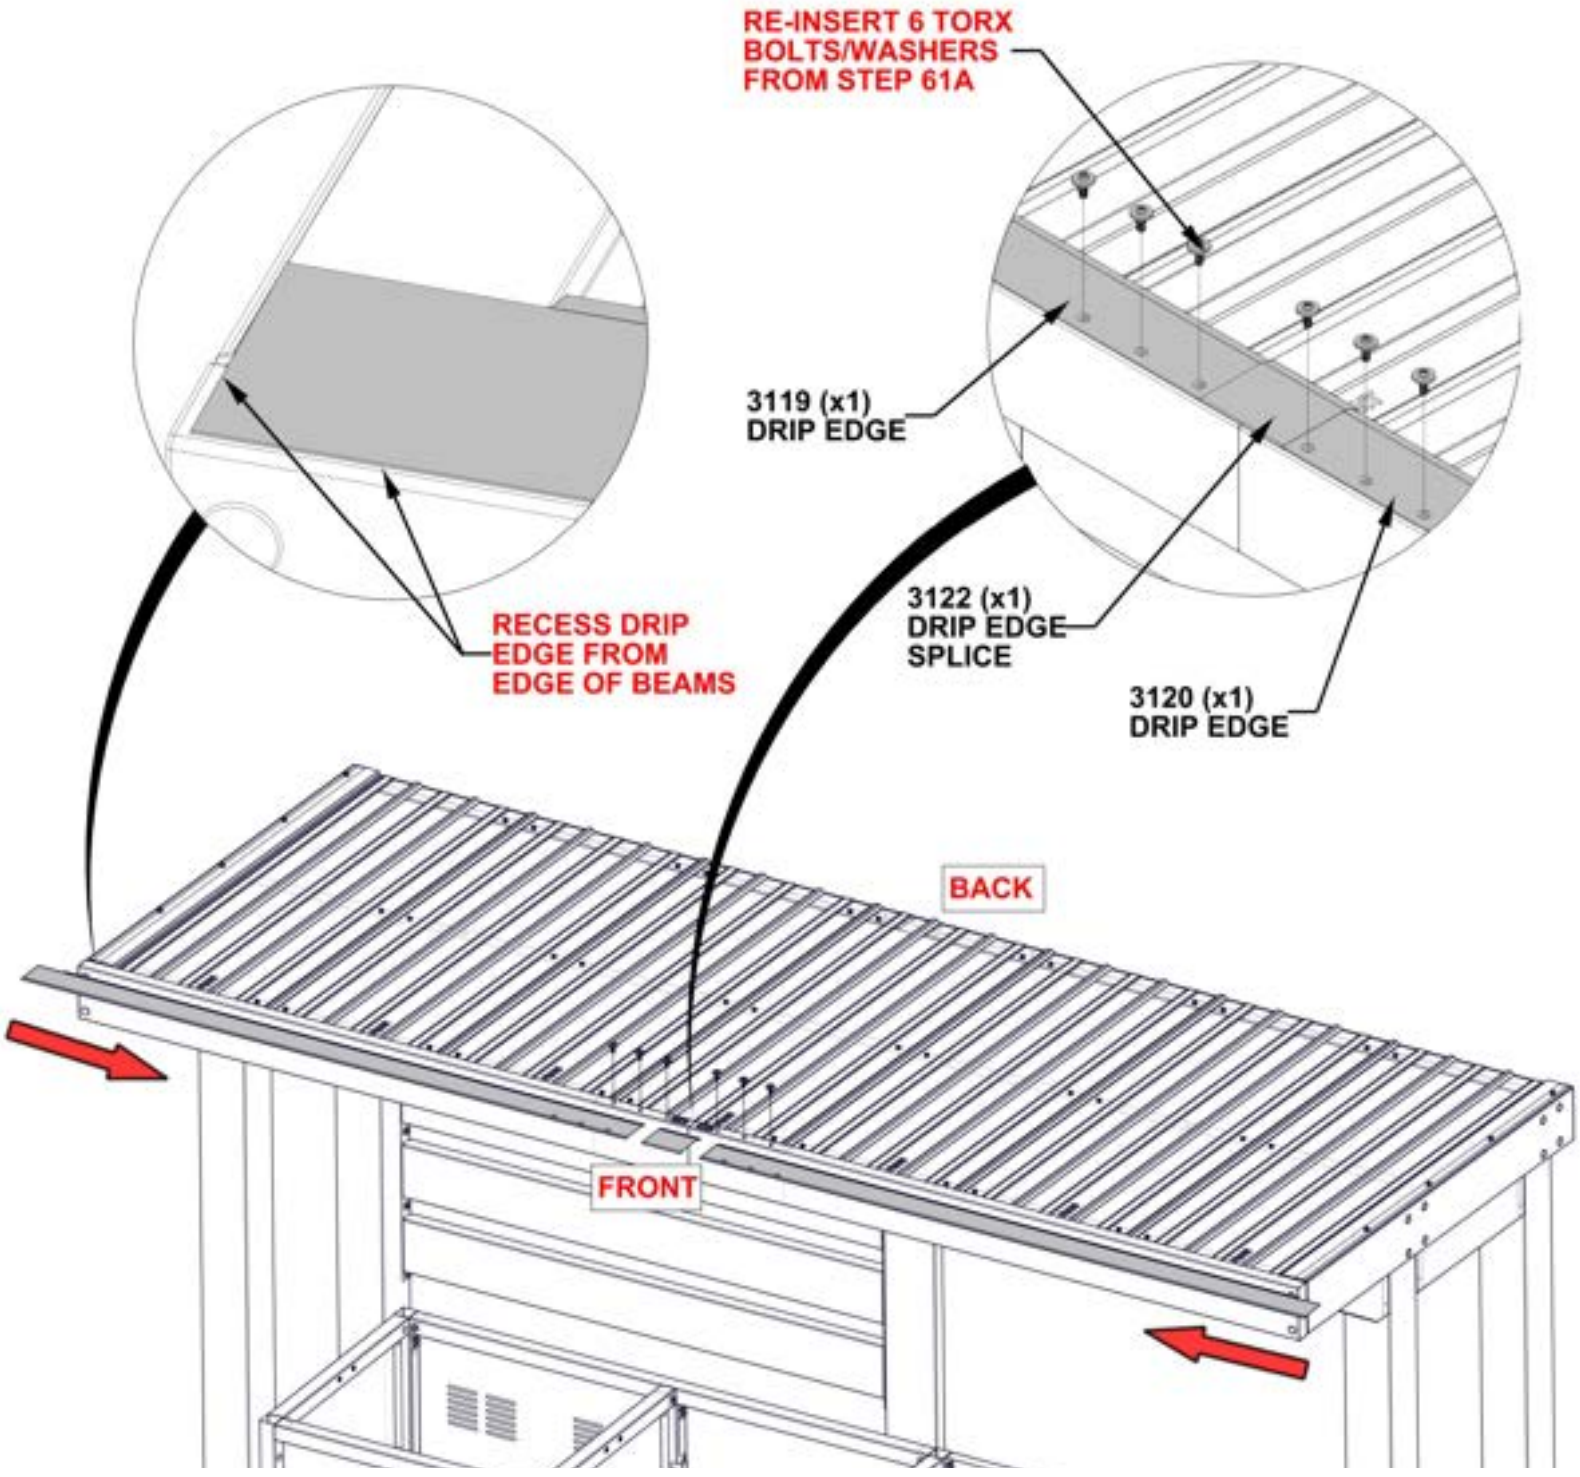

STEP 61C - ROOF ASSEMBLY

QTY	PART NUMBER	Description
12	H101116	SCREW SELF TAPPING 1/4x1 BLK

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

NOTES:
- REMOVE PROTECTIVE BLUE FILM.
- DUE TO MULTIPLE LAYERS OF METAL ON THE EDGE TRIM, IT IS RECOMMENDED THAT A 1/8" DRILL BIT BE USED TO CREATE STARTER HOLES.

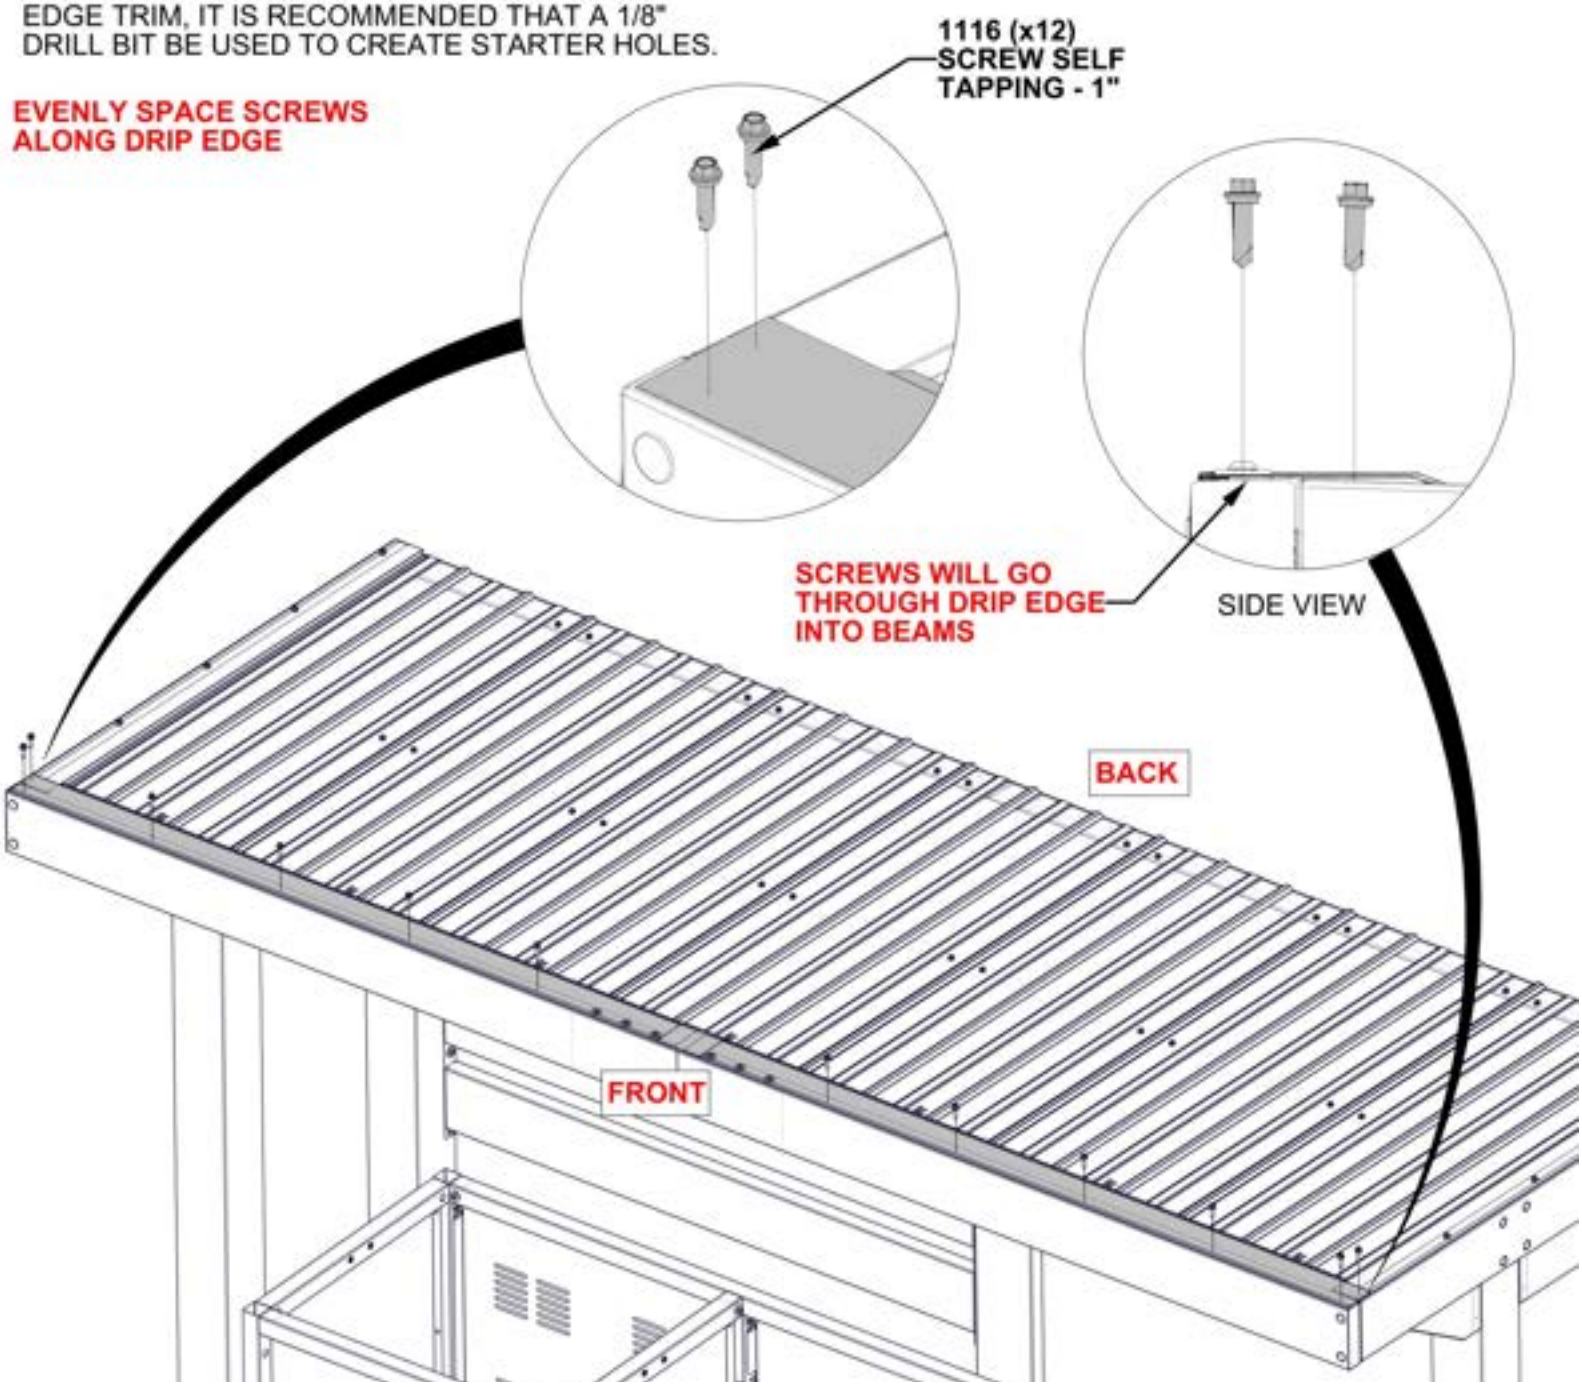

STEP 62A - KITCHEN CABINET ASSEMBLY

C10 COUNTERTOP - A4M02058
(x1) 1 5/8"x25 3/8"x56 5/8" (41x645x1438)

TIPS:
- REMOVE PROTECTIVE FILM FROM SIDES OF COUNTERTOP, LEAVING FILM ONLY ON TOP SURFACE UNTIL ASSEMBLY IS FINISHED TO PREVENT SCRATCHES.

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STAINLESS STEEL COUNTERTOP

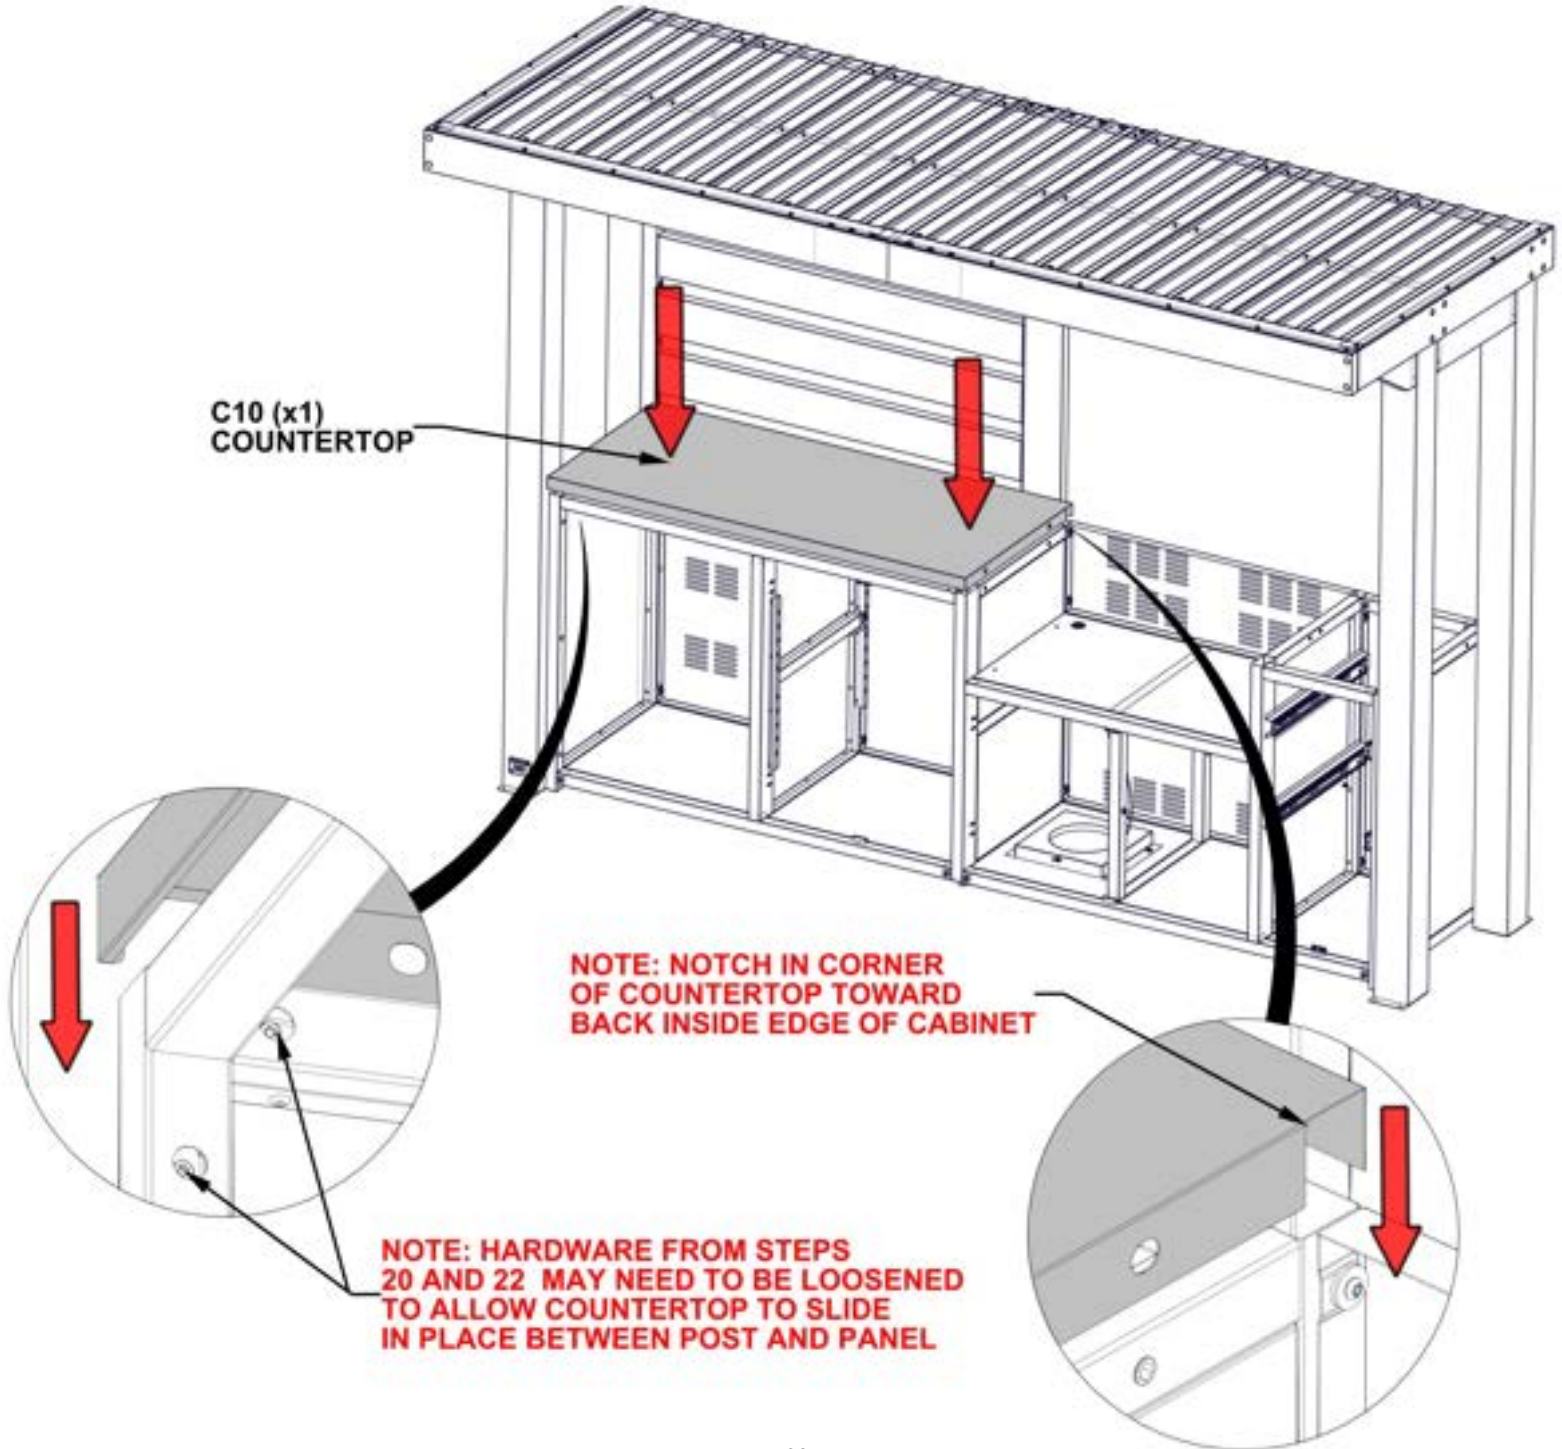

STEP 62B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

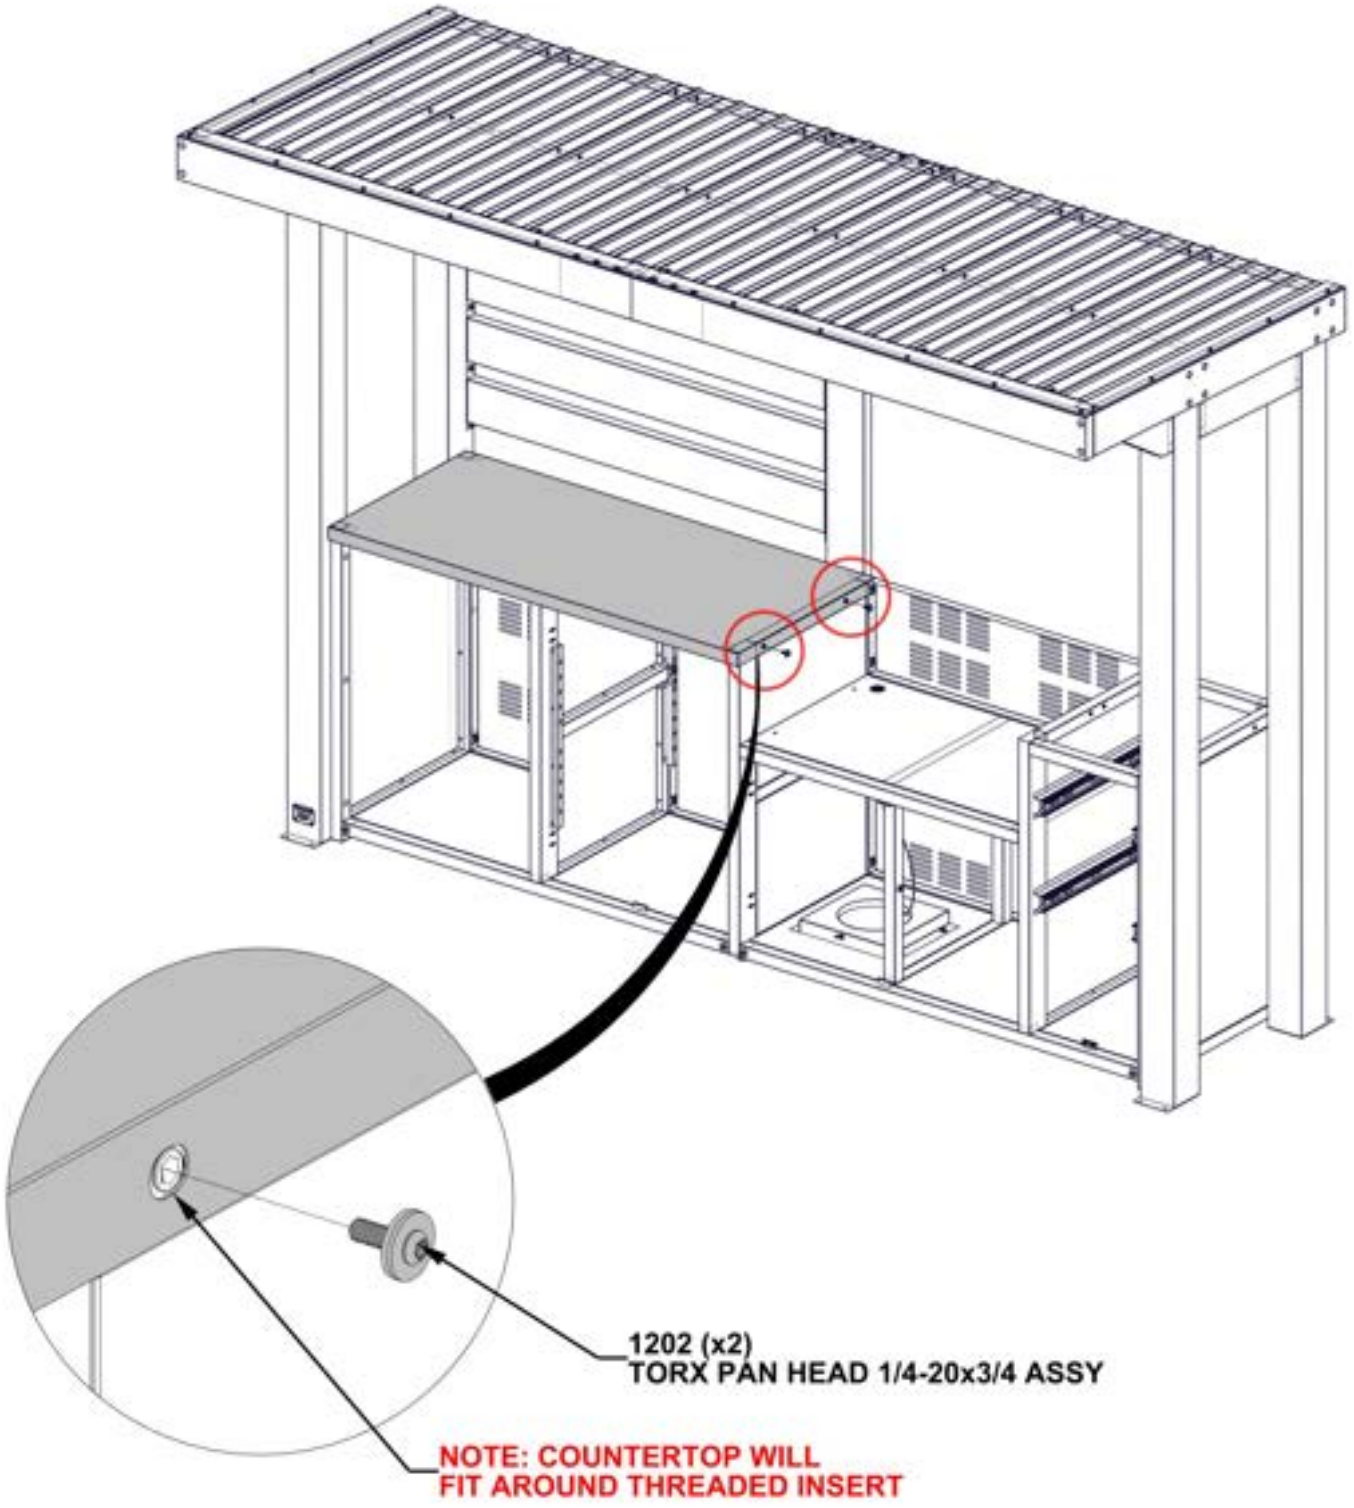

STEP 62C - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

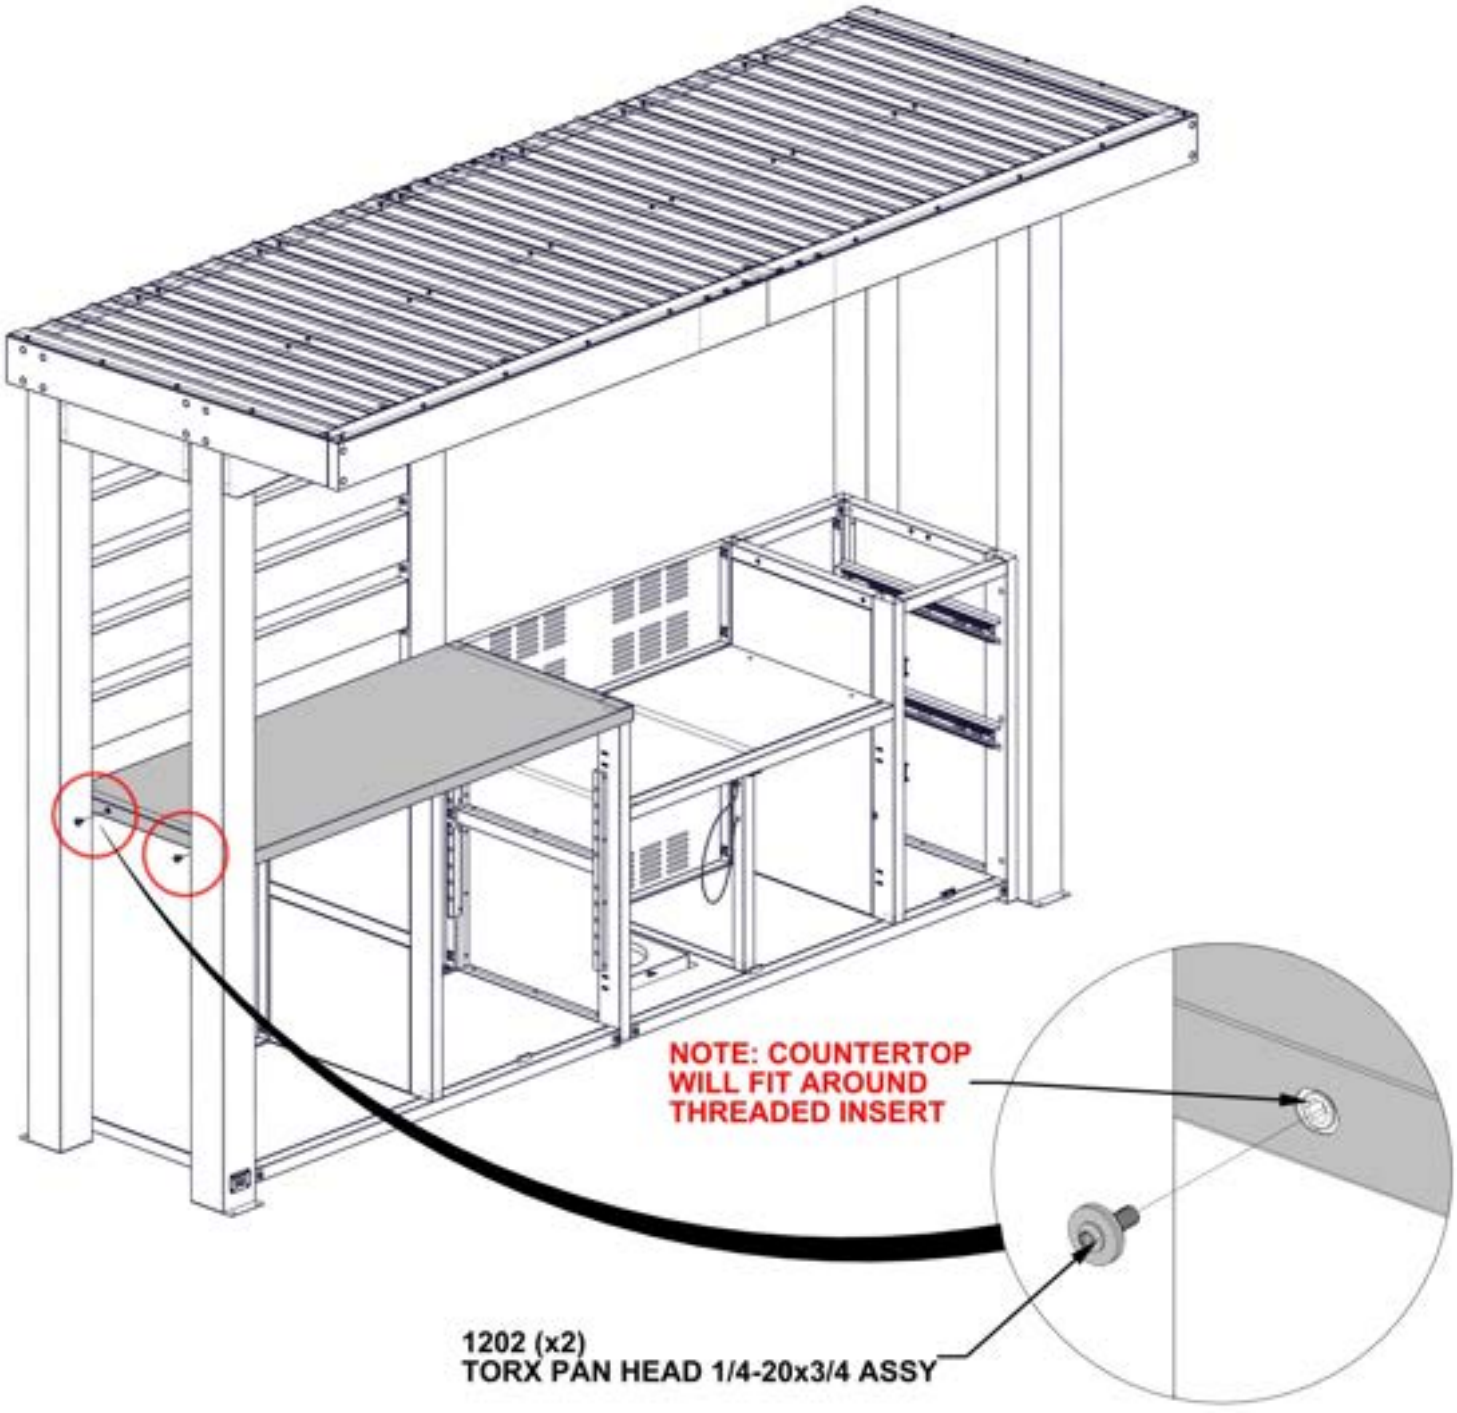

STEP 62D - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

ATTACH HARDWARE FROM UNDERSIDE OF COUNTERTOP.
RIGHT ANGLE DRILL ADAPTER IS HELPFUL FOR THIS STEP.

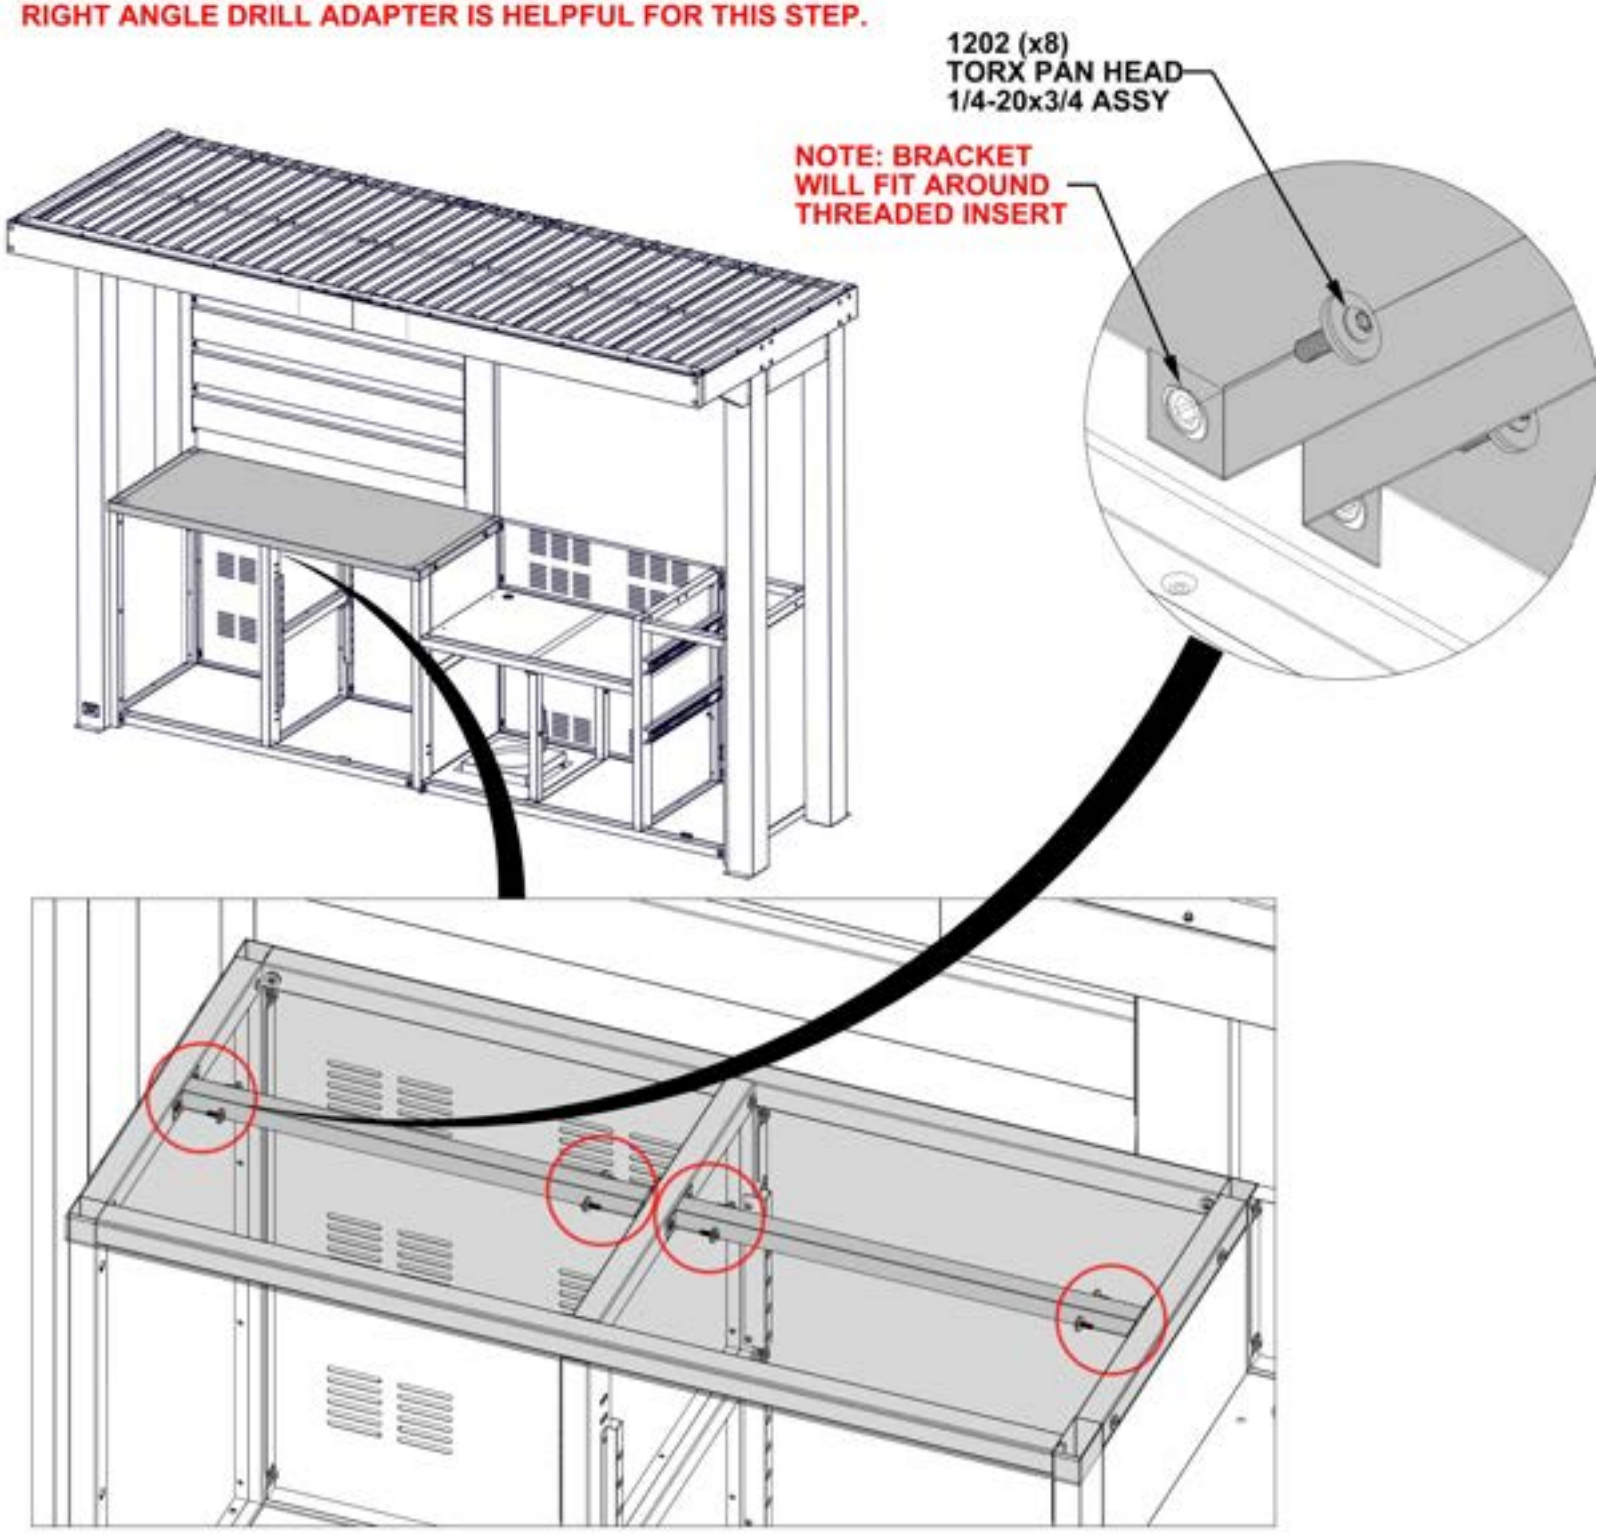

STEP 63A - KITCHEN CABINET ASSEMBLY

C11 (x1) COUNTERTOP - A4M02059
1 5/8"x18 3/16"x25 3/8" (41x462x645)

TIPS:
- REMOVE PROTECTIVE FILM FROM SIDES OF COUNTERTOP, LEAVING FILM ONLY ON TOP SURFACE UNTIL ASSEMBLY IS FINISHED TO PREVENT SCRATCHES.

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STAINLESS STEEL COUNTERTOP

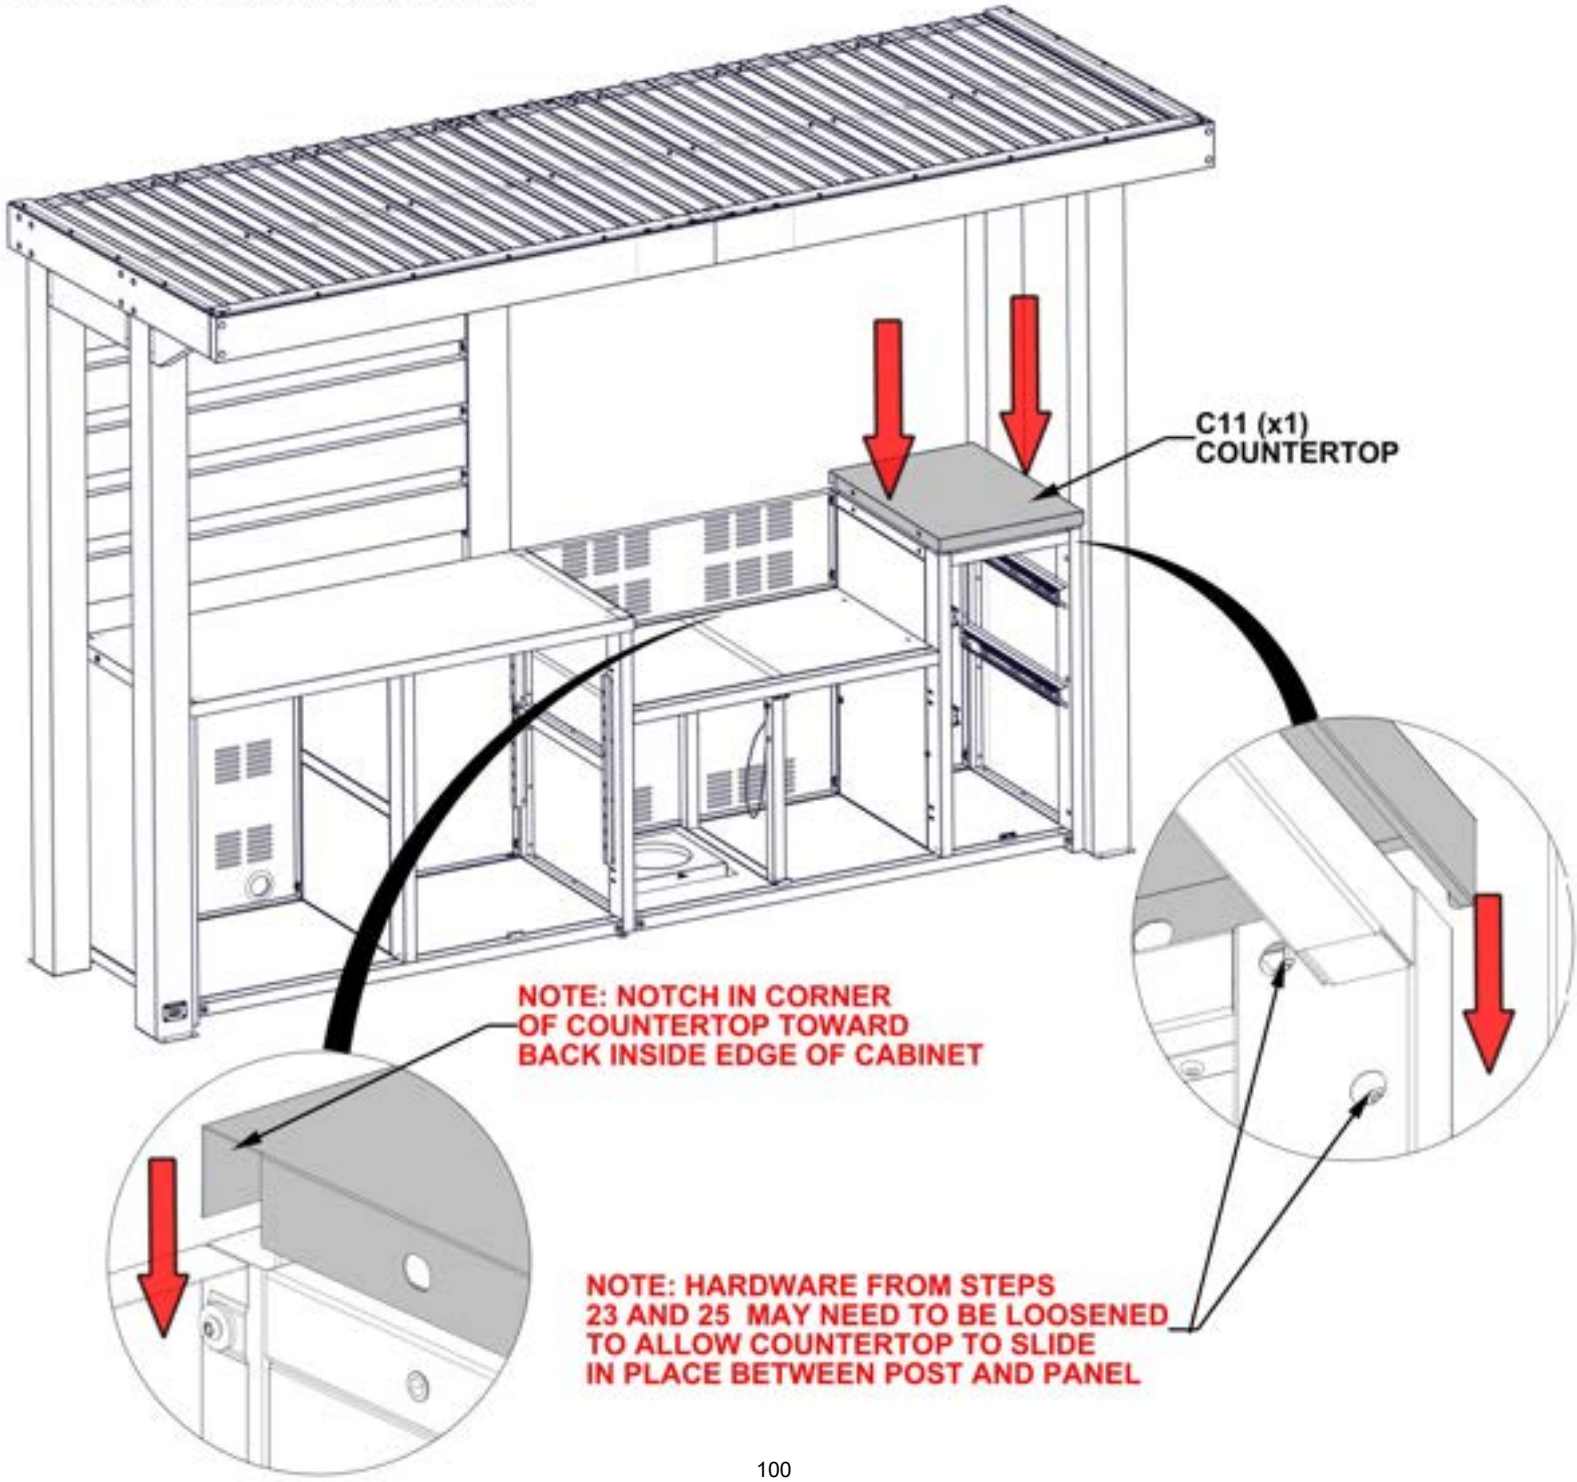

STEP 63B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

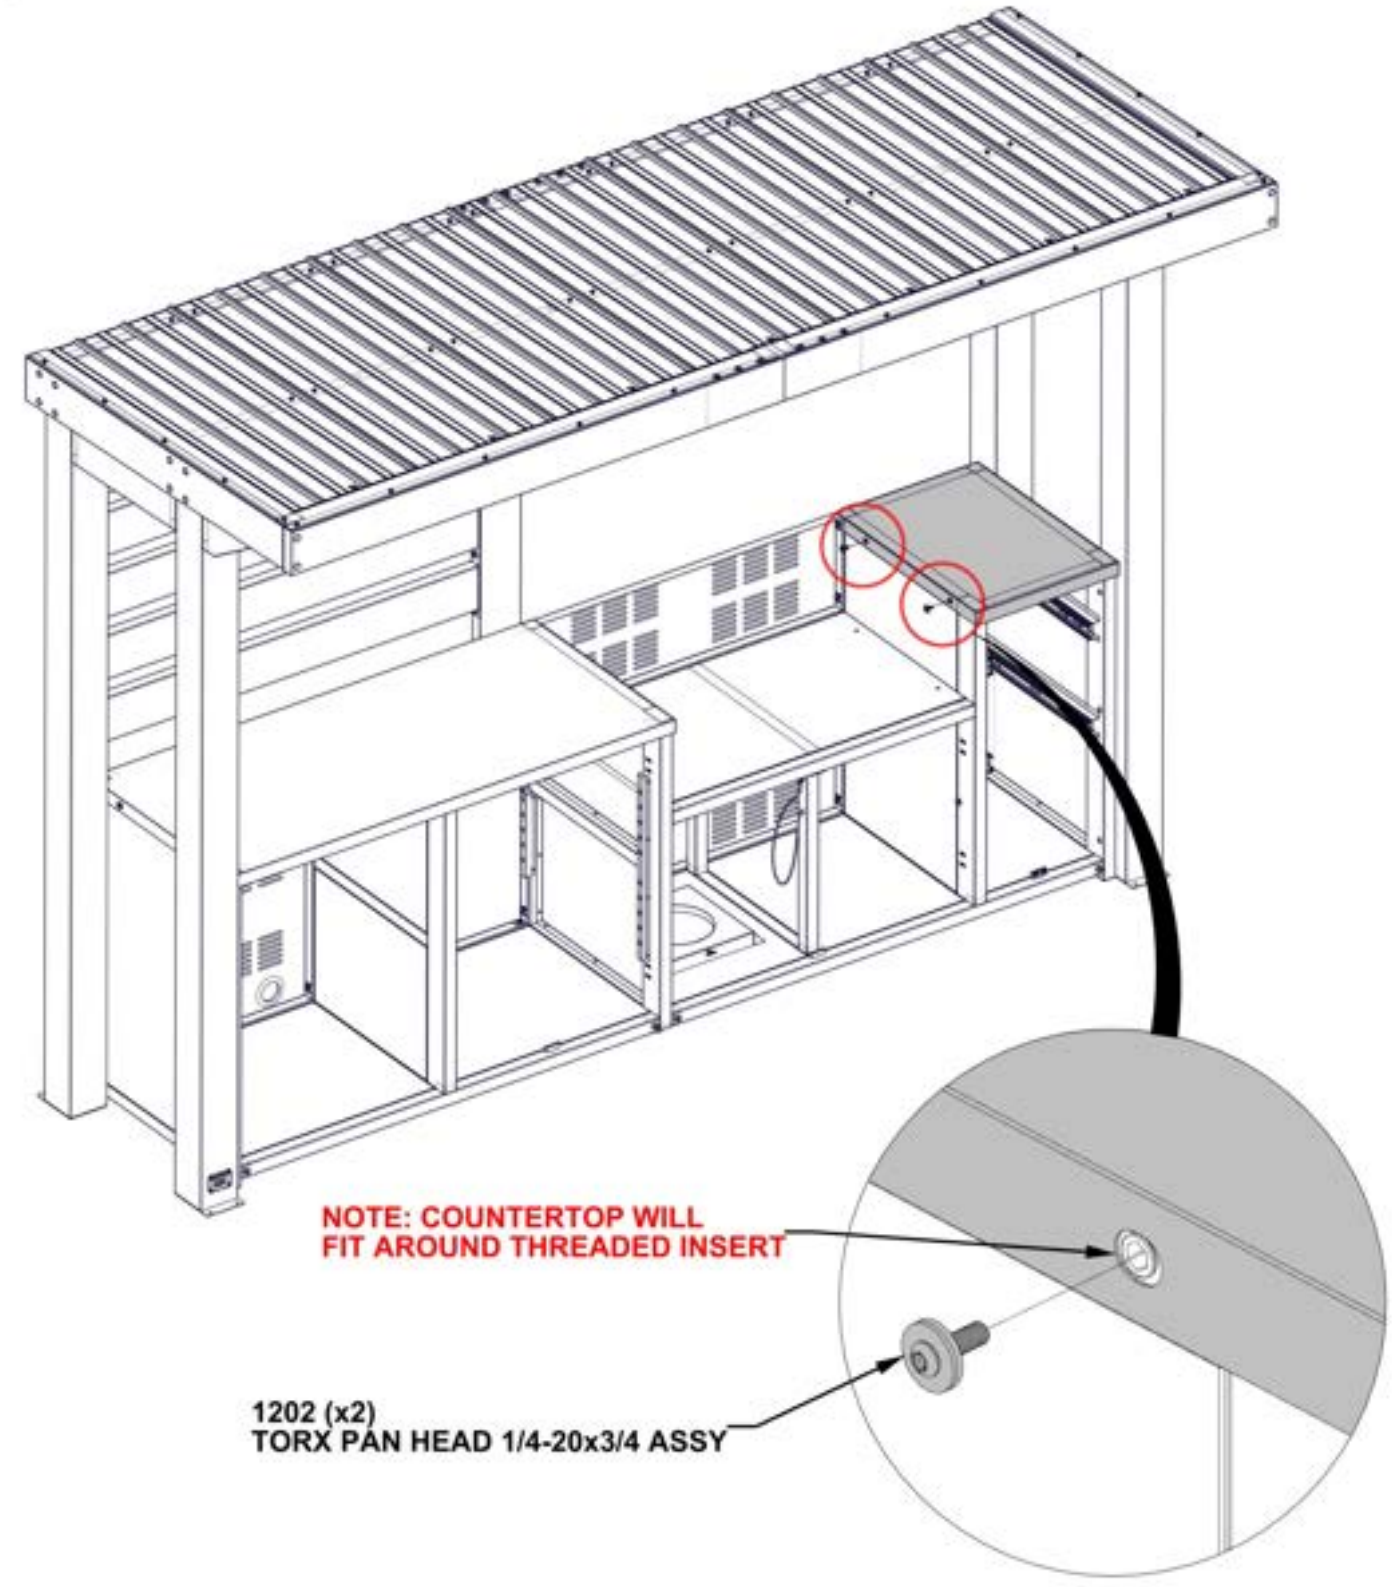

STEP 63C - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

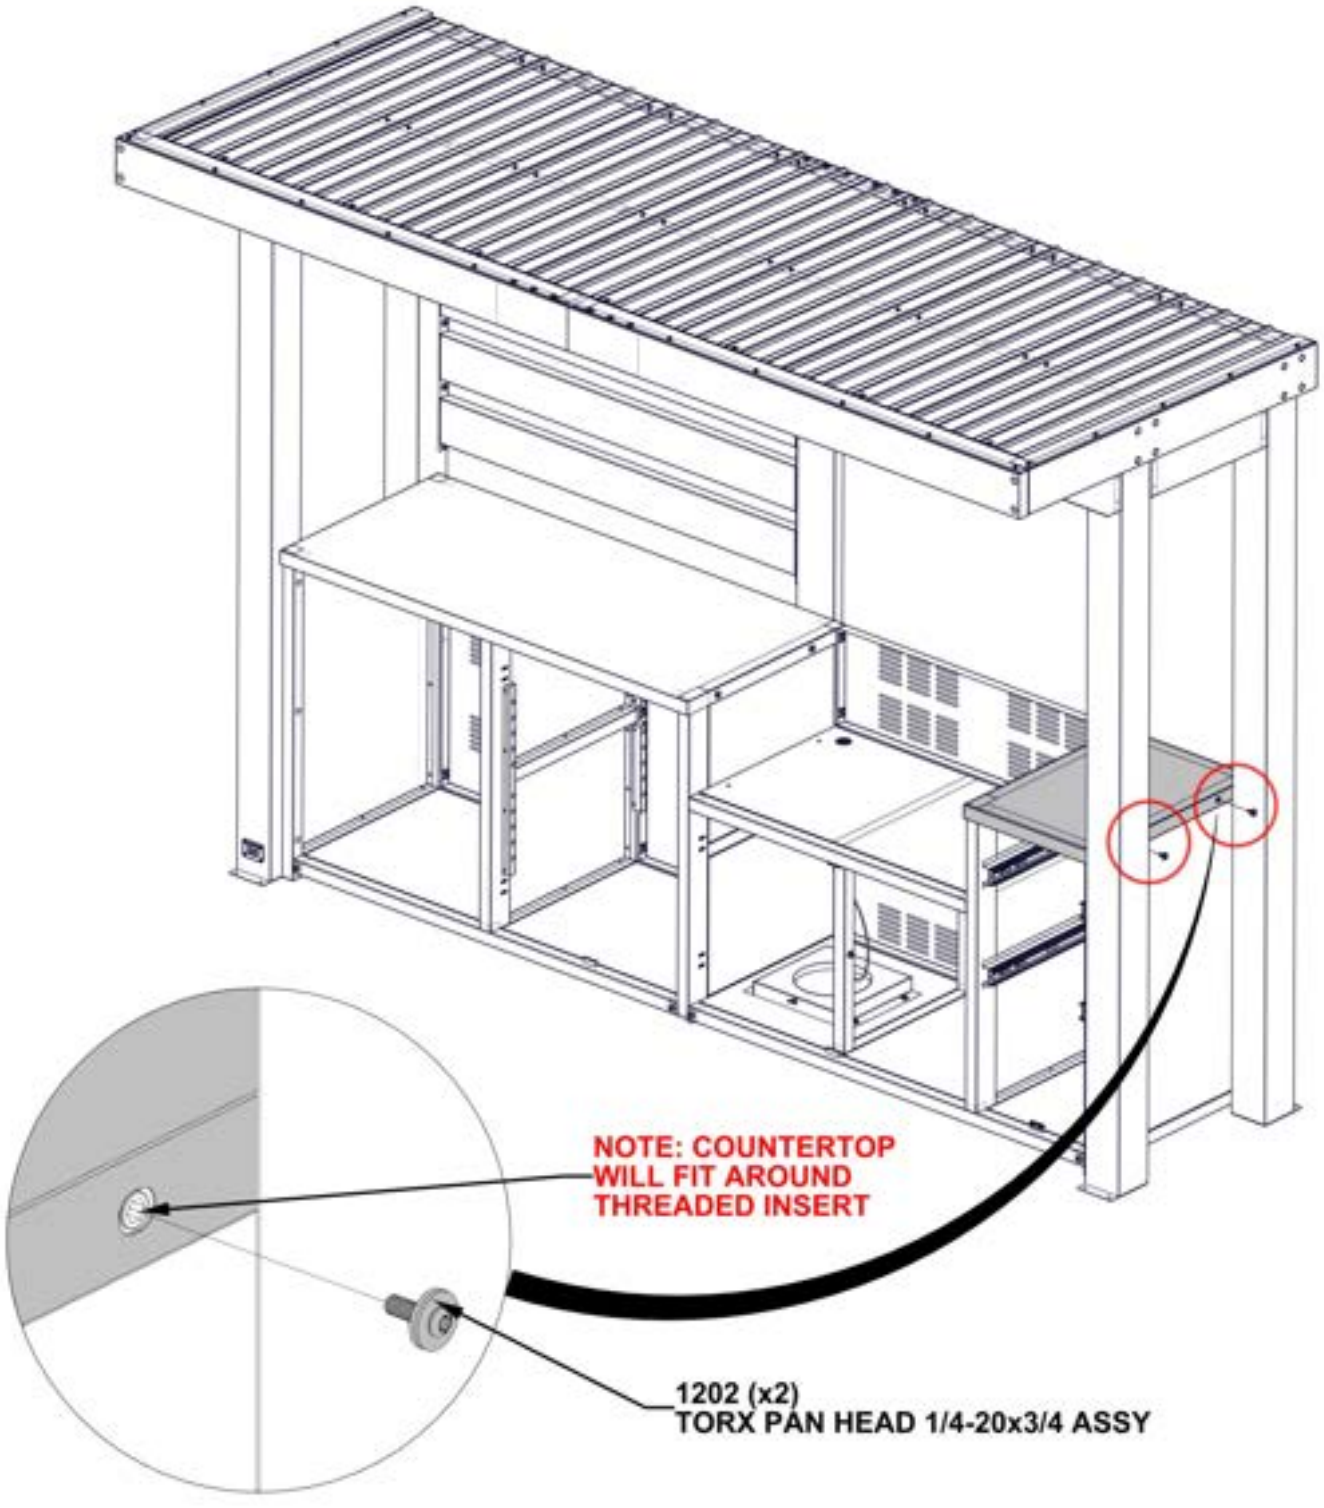

STEP 63D - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

ATTACH HARDWARE FROM UNDERSIDE OF COUNTERTOP.
RIGHT ANGLE DRILL ADAPTER IS HELPFUL FOR THIS STEP.

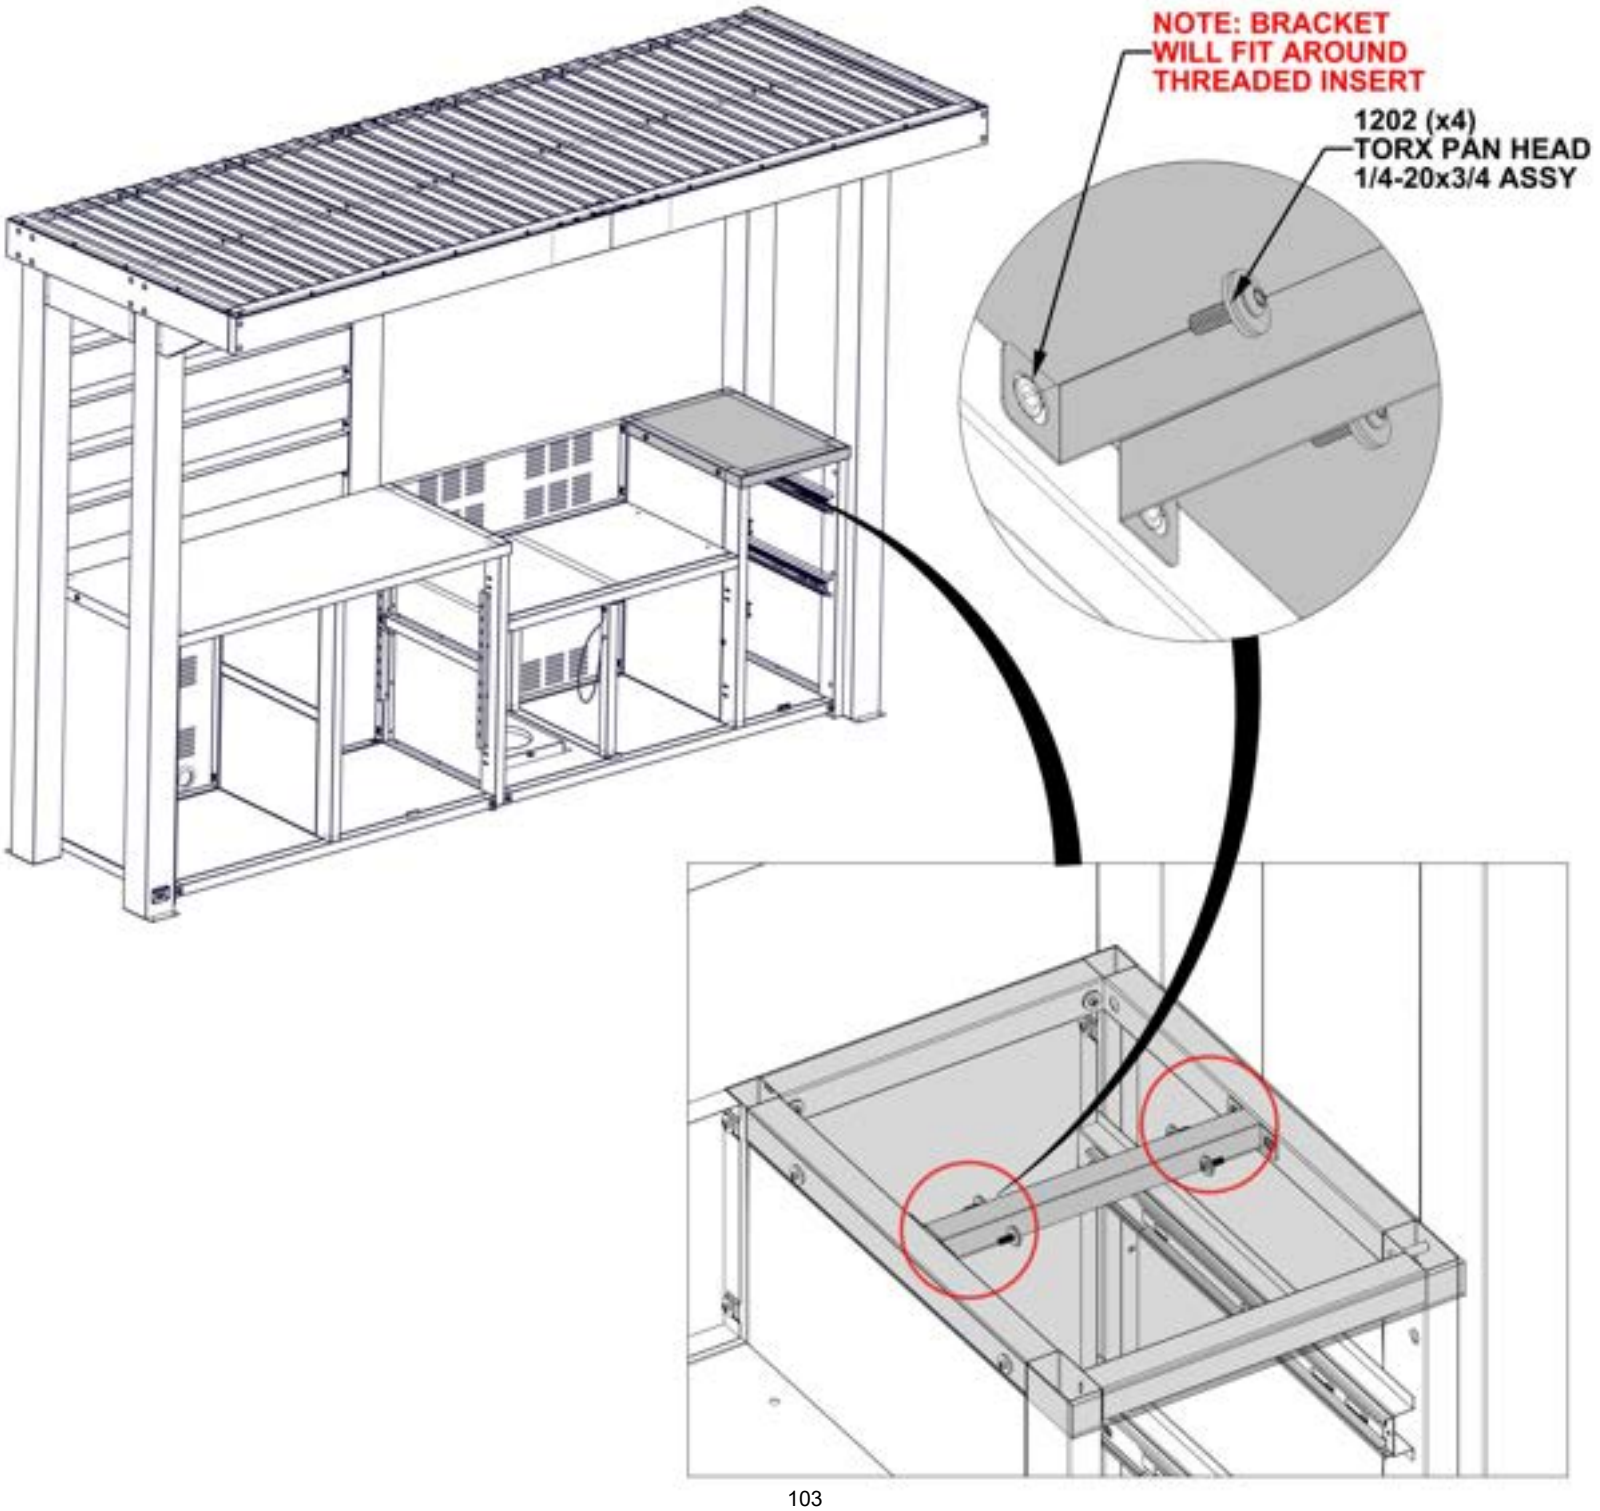

STEP 64 - KITCHEN CABINET ASSEMBLY

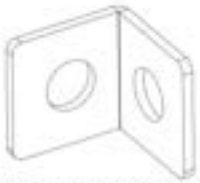

A02 (x3) BRACKET - A4M02056
1 7/16"x1 7/16"x1 7/16" (36x36x36)

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

ATTACH A02 BRACKETS TO CONNECT P05 BACK POST TO C02 CABINET PANEL AND F01 BOTTOM PANEL RAIL

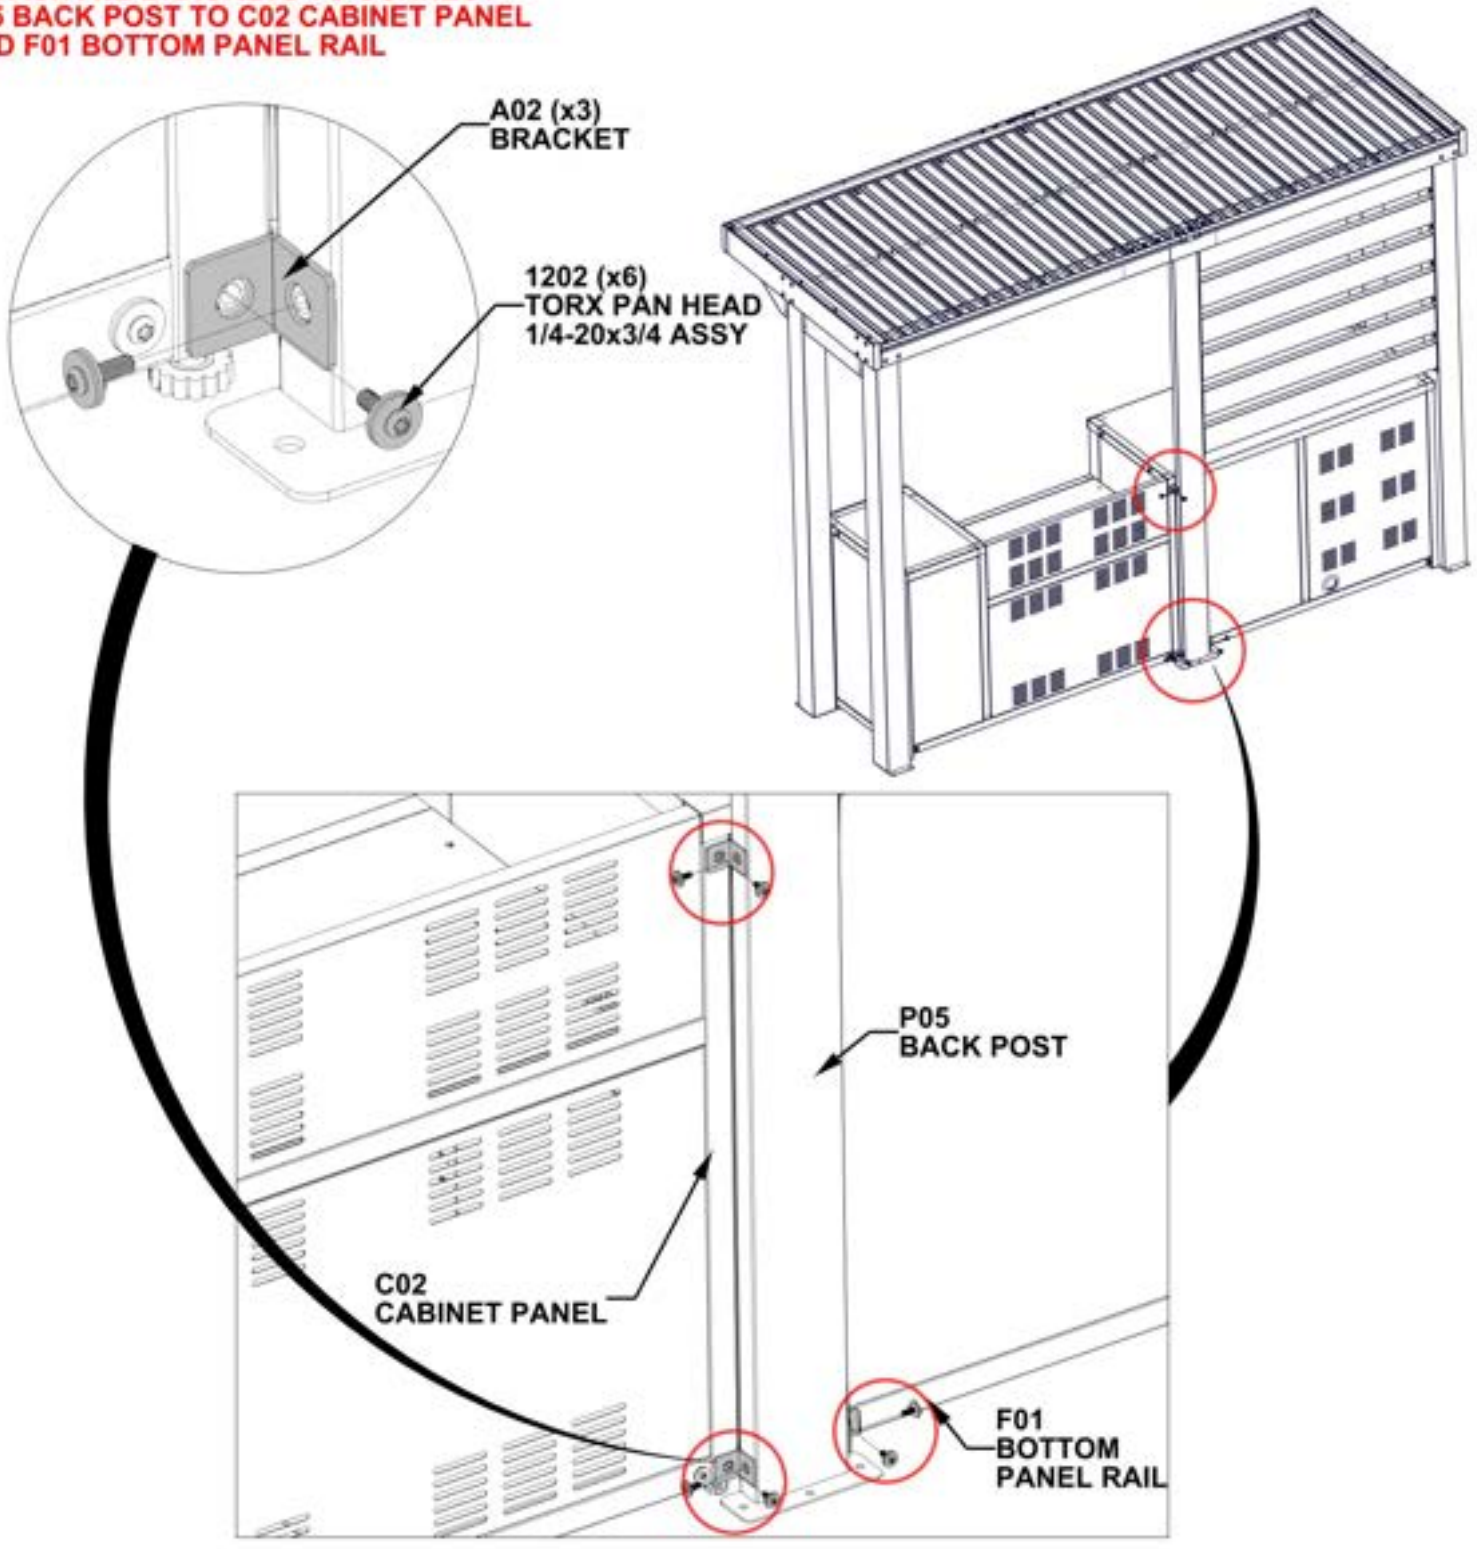

STEP 65 - KITCHEN CABINET ACCESSORIES

A06 ADJUSTABLE SHELF TAB - A4M02077
(x8) 11/16"x7/8"x1 3/16" (17x22x31)

ATTACH ADJUSTABLE SHELF TABS ON BOTH SIDES OF CENTER CABINET

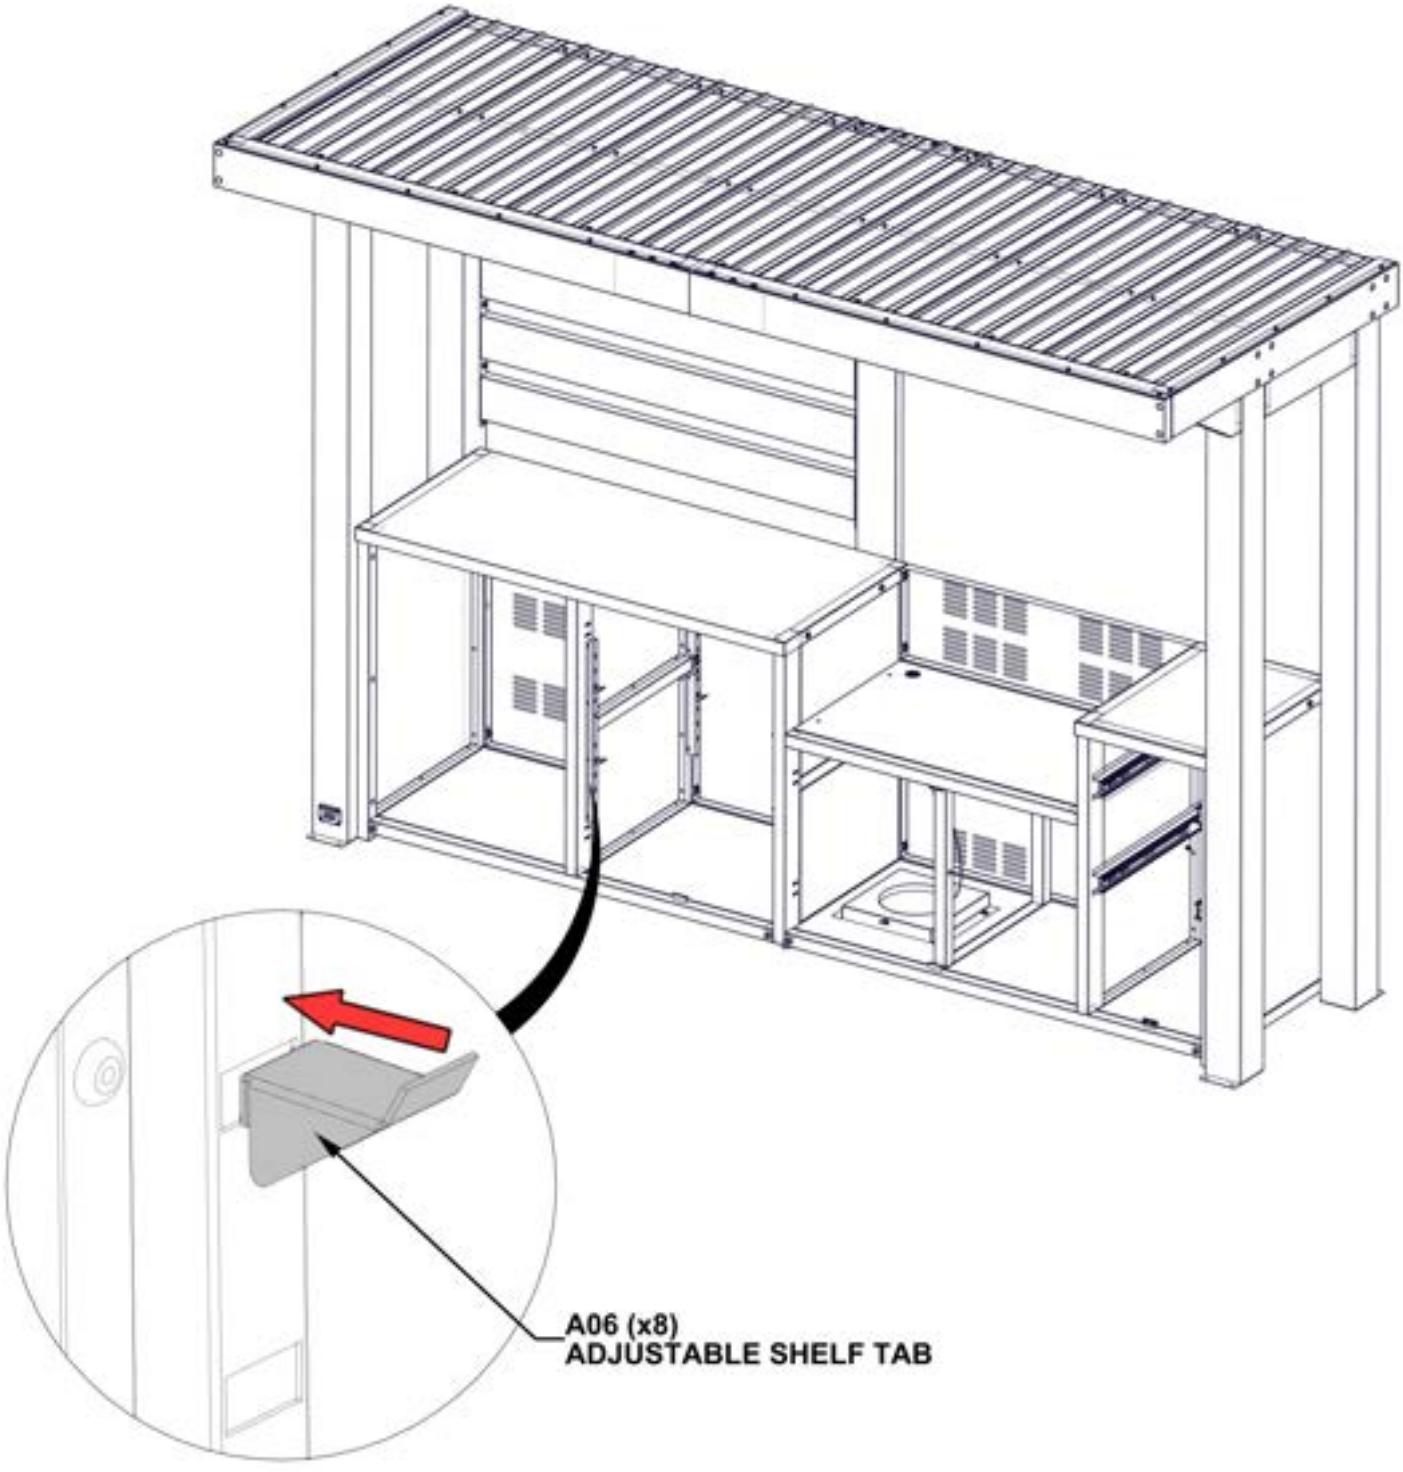

STEP 66 - KITCHEN CABINET ACCESSORIES

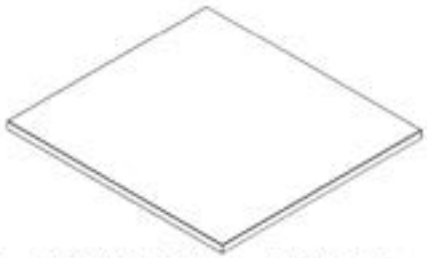

S01 CABINET SHELF - A4M02057
(x2) 13/16"x22 11/16"x24 1/2" (21x577x622)

INSTALL CABINET SHELVES IN CENTER CABINET.

SHELVES WILL REST ON ADJUSTABLE TABS FROM PREVIOUS STEP AND CAN BE POSITIONED AS DESIRED.

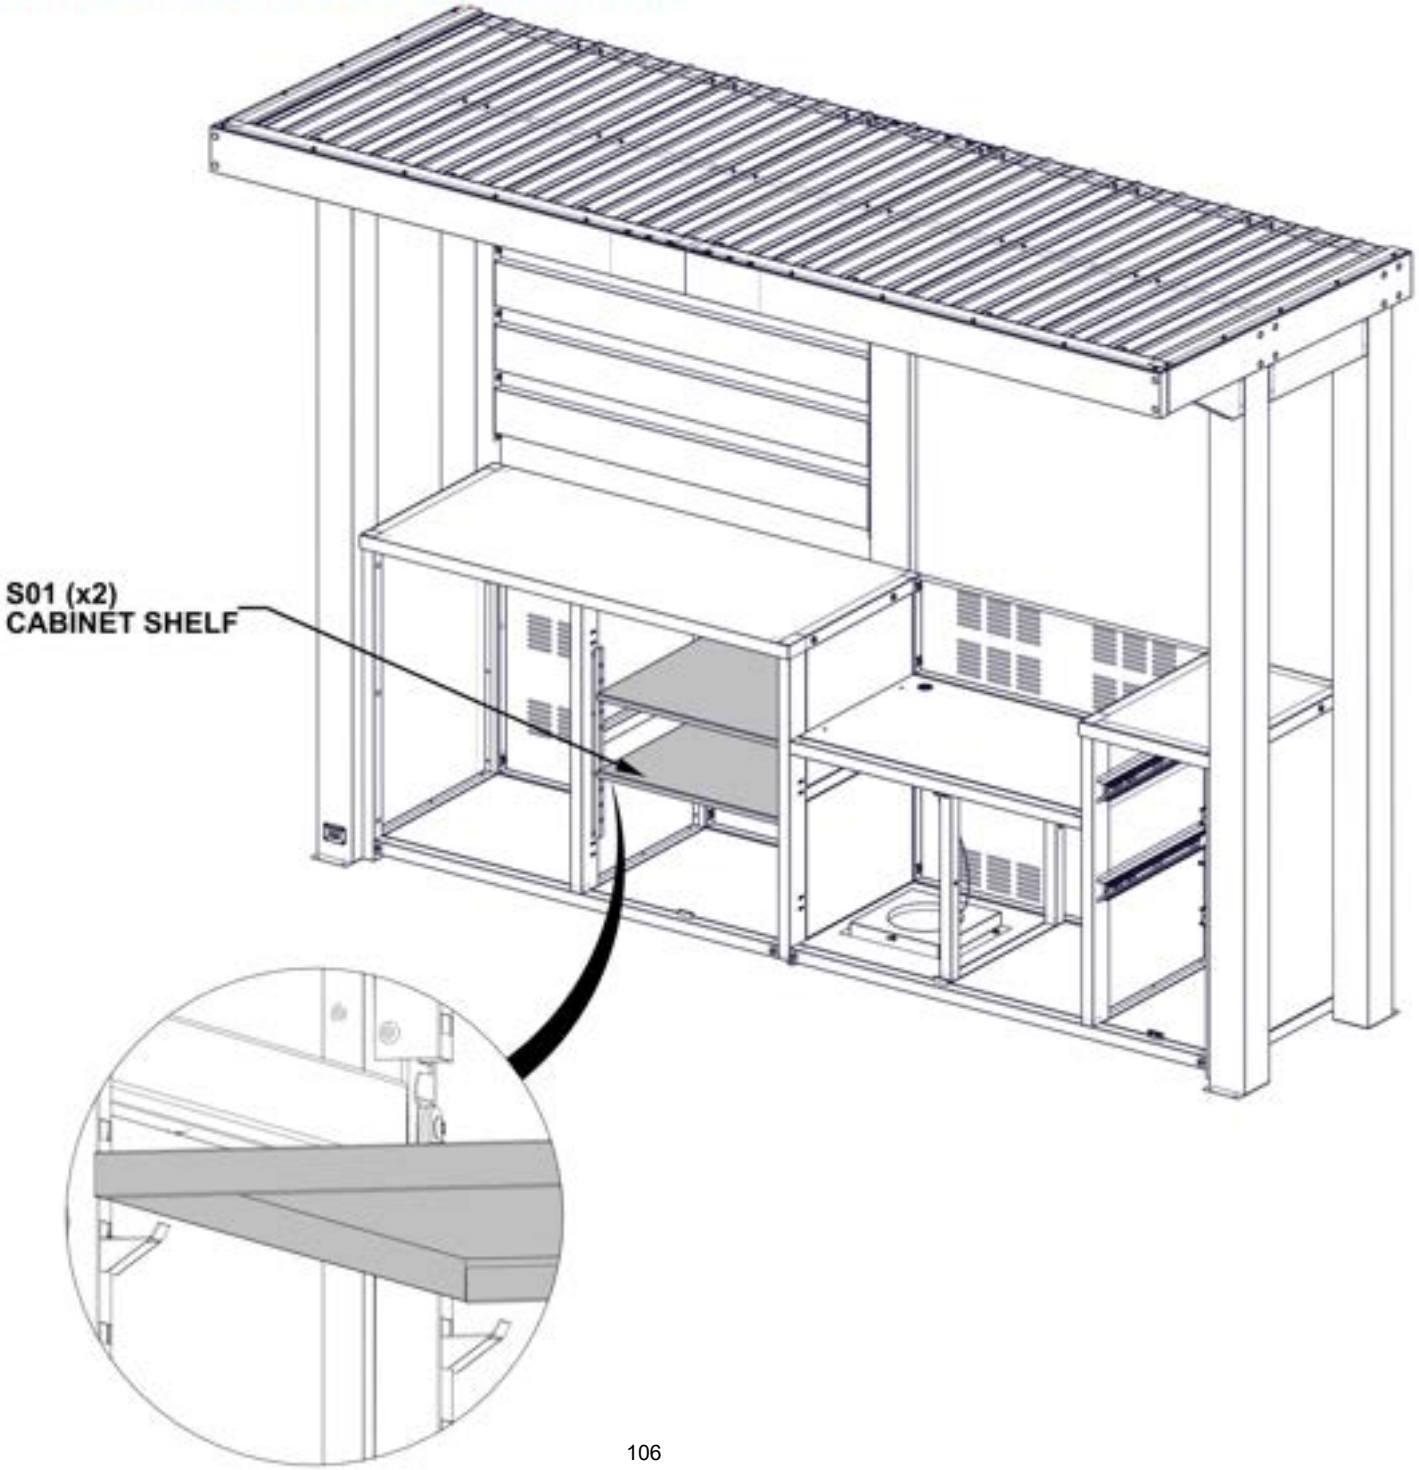

STEP 67 - KITCHEN CABINET ACCESSORIES

A11 SHELF - A4M02105
(x1) 13/16"x18 3/8"x21 1/2" (21x467x546)

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

ATTACH HARDWARE FROM UNDERSIDE OF SHELF

RIGHT ANGLE DRILL ADAPTER IS HELPFUL FOR THIS STEP

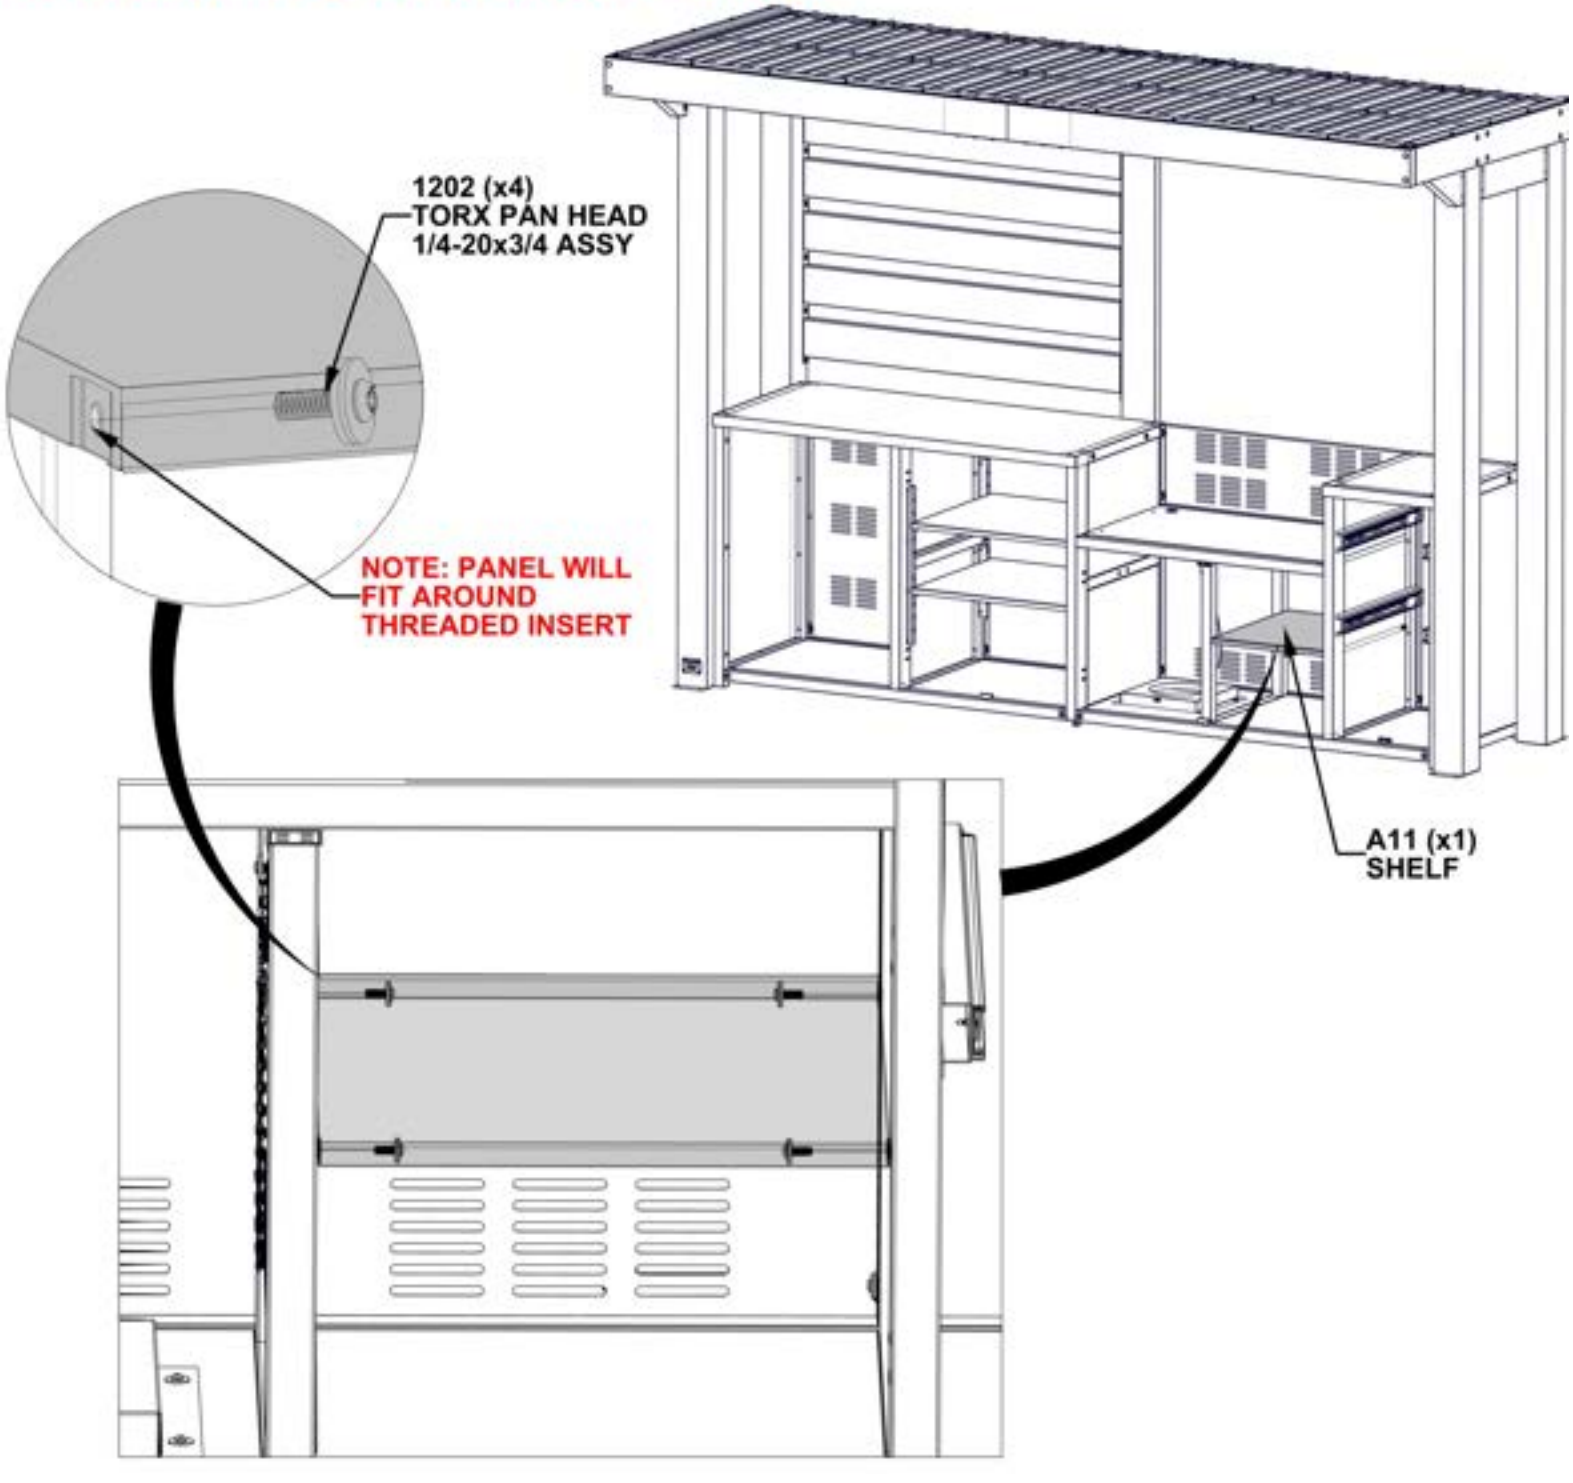

STEP 68A - BACK SHELF

A03 (x2) BACK SHELF - A4M02072
2 7/16"x7 15/16"x23 3/4" (61x201x603)

A6P00679 (x8) EVA TAPE

APPLY EVA TAPE IN THE APPROXIMATE LOCATIONS SHOWN

REPEAT FOR BOTH A03 SHELVES

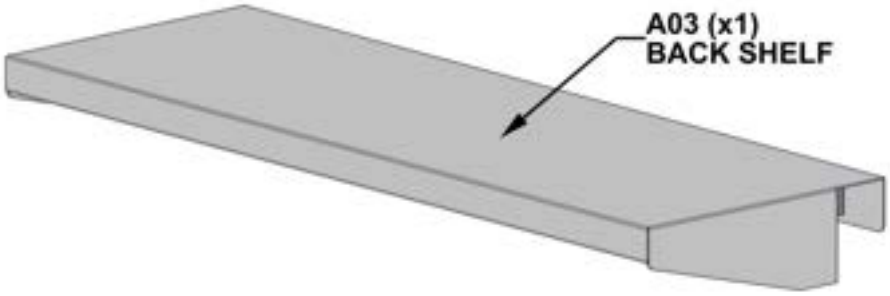

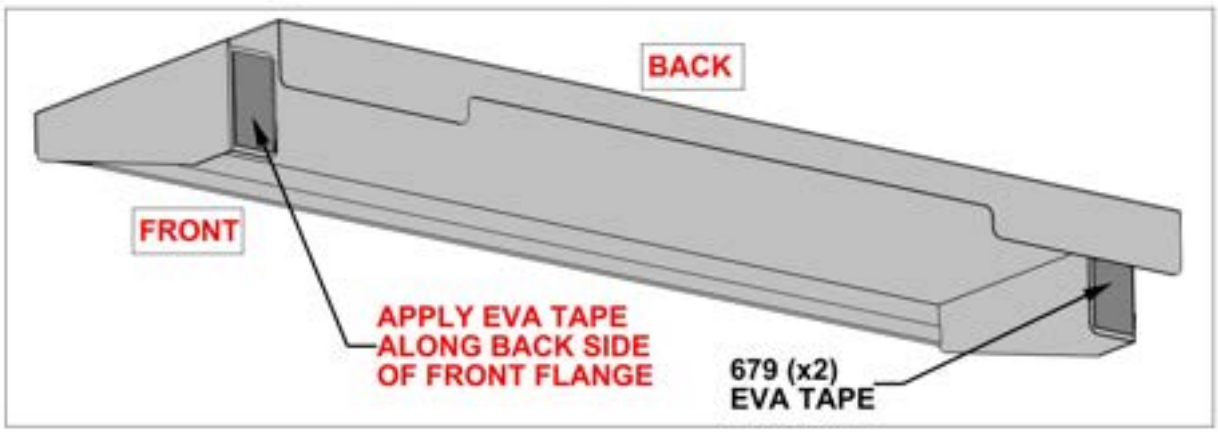

STEP 68B - KITCHEN CABINET ACCESSORIES

A03 BACK SHELF - A4M02072
(x2) 2 7/16"x7 15/16"x23 3/4" (61x201x603)

MAKE SURE EVA TAPE FROM PREVIOUS STEP, HAS BEEN APPLIED TO FLANGES OF EACH A03 SHELF BEFORE INSTALLING. THIS WILL PREVENT SHELVES FROM SCRATCHING SURACE OF BACK PANEL

SLIDE BACK SHELF OVER ANY TUBE ALONG B10 BACK PANEL. SHELVES CAN BE POSITIONED ANYWHERE DESIRED.

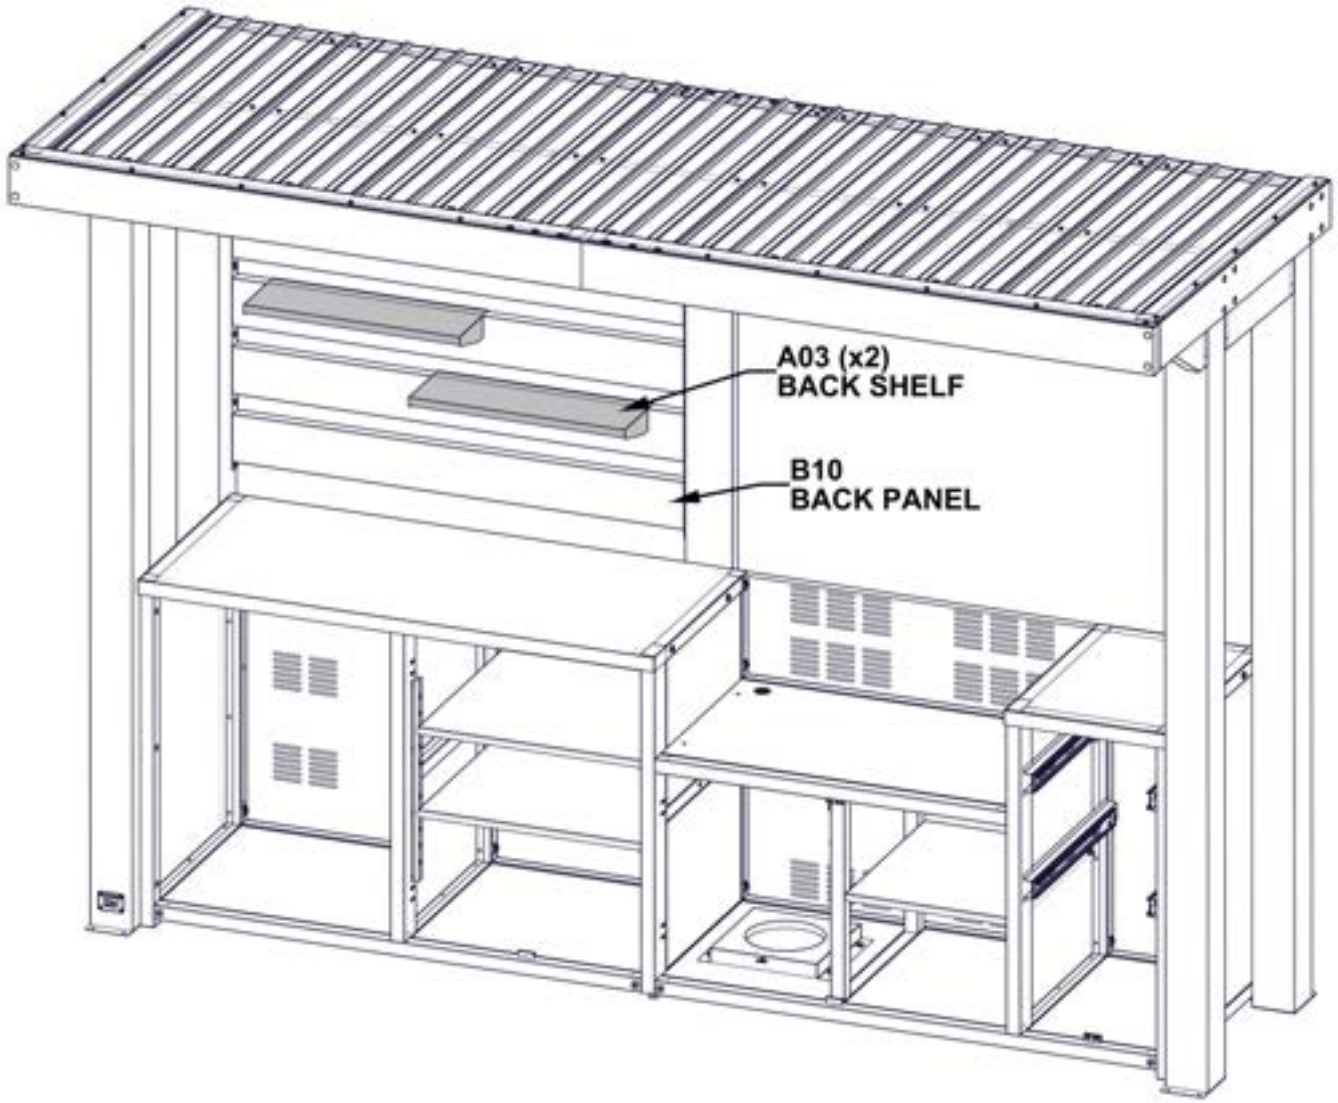

STEP 68C - KITCHEN CABINET ACCESSORIES

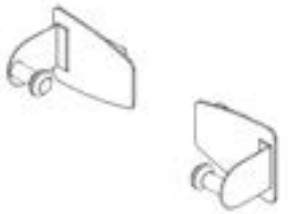

A4M02290 (x1) MAGNETIC PAPER TOWEL HOLDER

MAGNETIC PAPER TOWEL HOLDER CAN BE ATTACHED TO ANY METAL SURFACE ON KITCHEN. WE RECOMMEND ATTACHING ALONG BACK PANEL.

MAKE SURE TO KEEP PAPER TOWEL HOLDER AT A SAFE DISTANCE FROM GRILLING SURFACE.

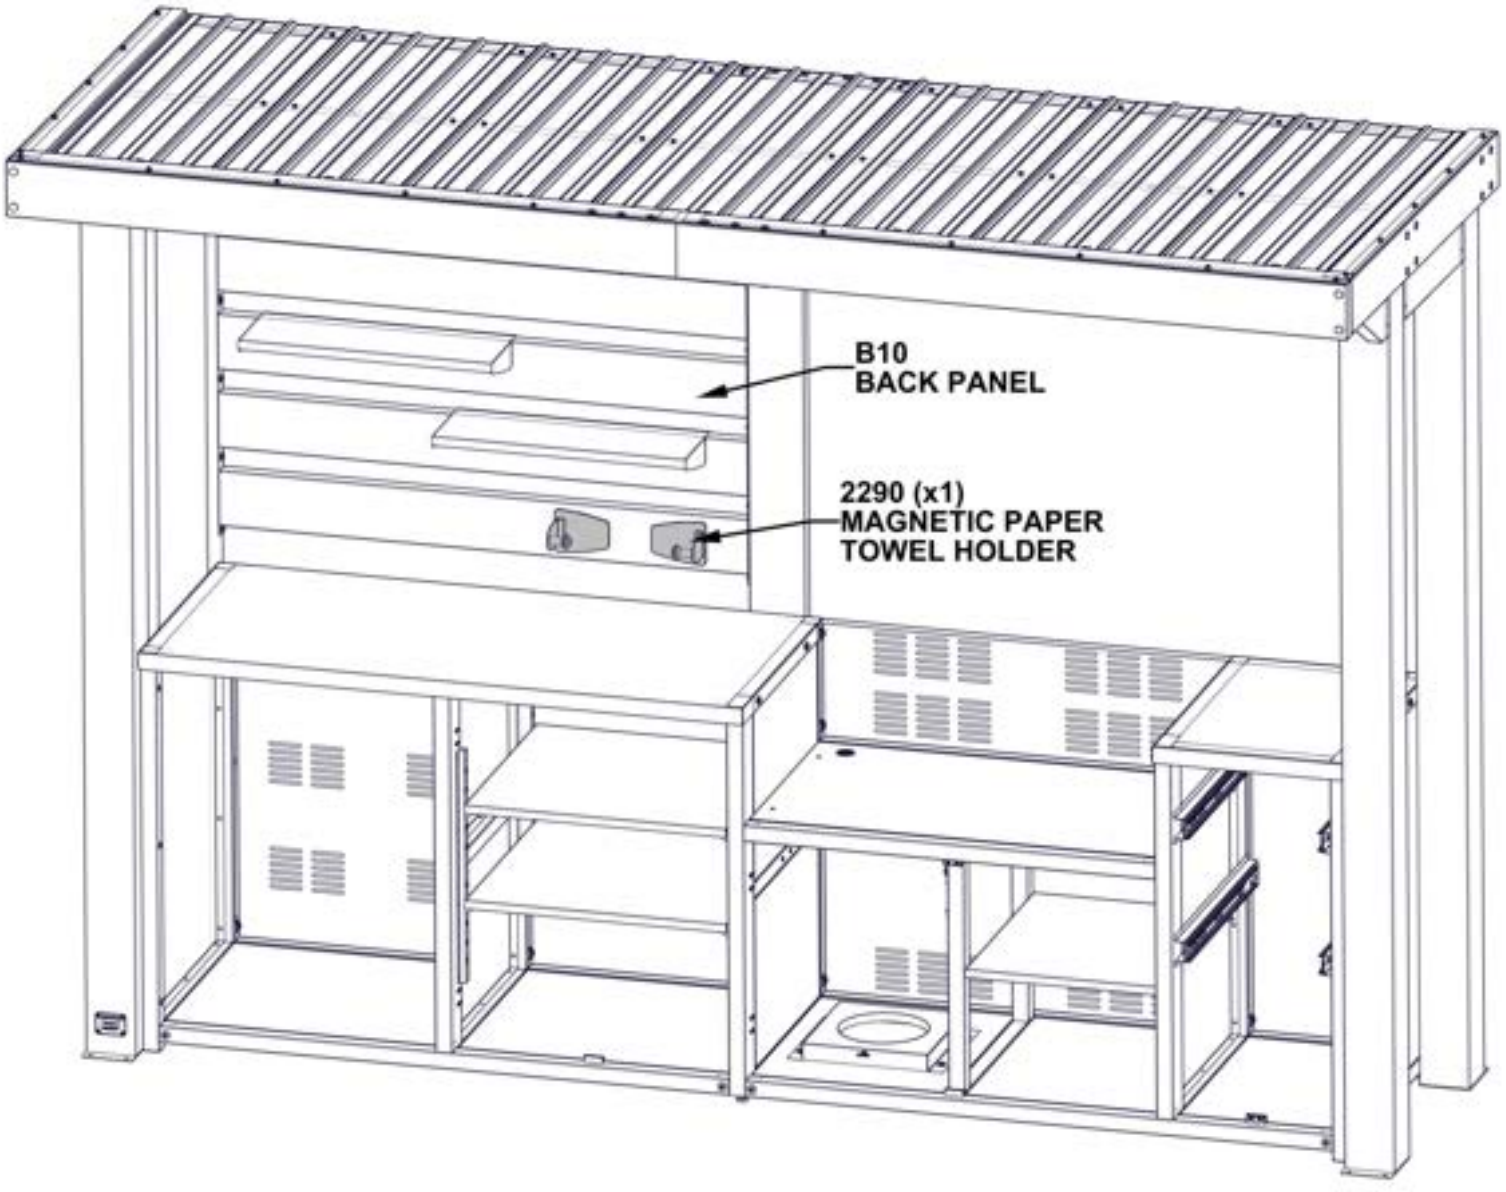

STEP 69A - KITCHEN CABINET ACCESSORIES

A4M01352 HOLE COVER
(x5)

USE A SMALL PIECE OF WOOD AND RUBBER MALLET TO TAP HOLE COVERS IN.

DO NOT TAP DIRECTLY WITH A HAMMER AS YOU MAY DAMAGE THE FINISH ON PRODUCT.

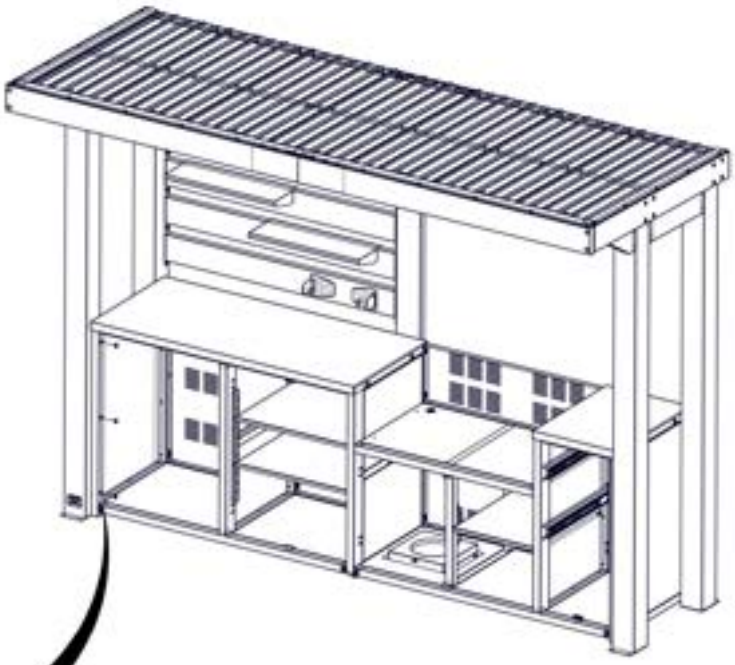

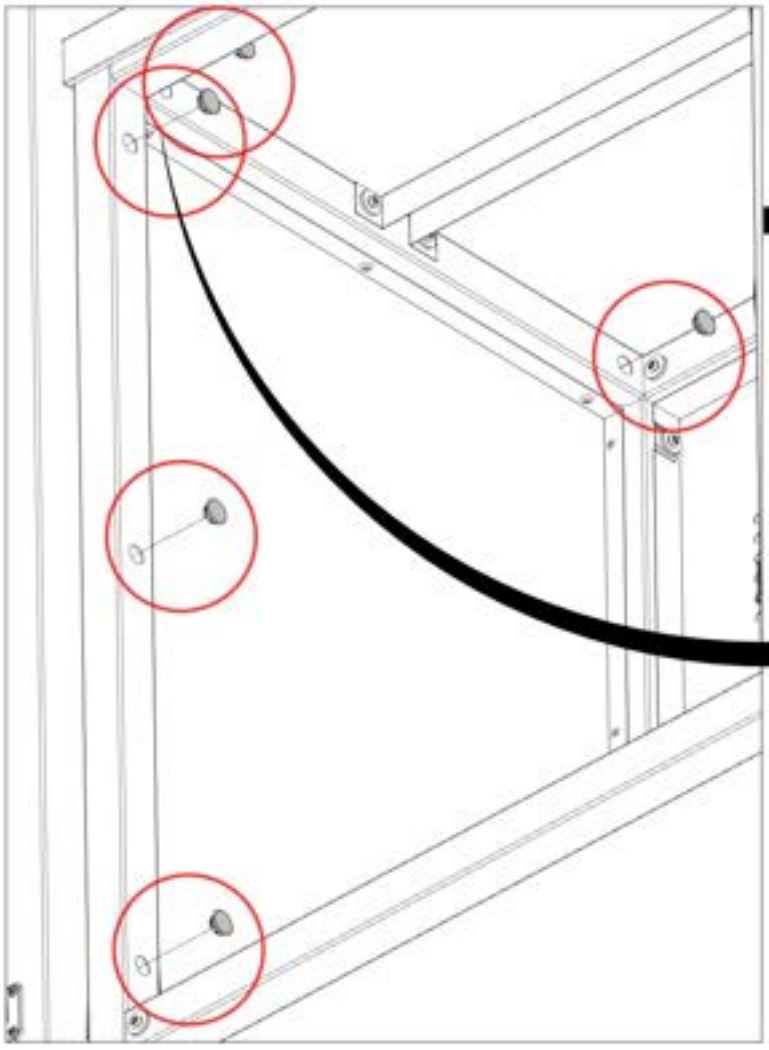

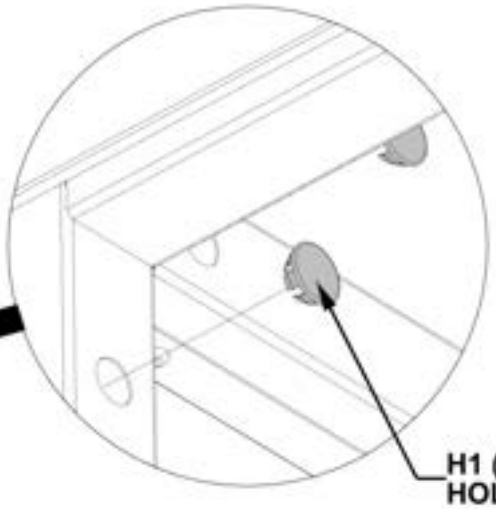

STEP 69B - KITCHEN CABINET ACCESSORIES

A4M01352 HOLE COVER
(x5)

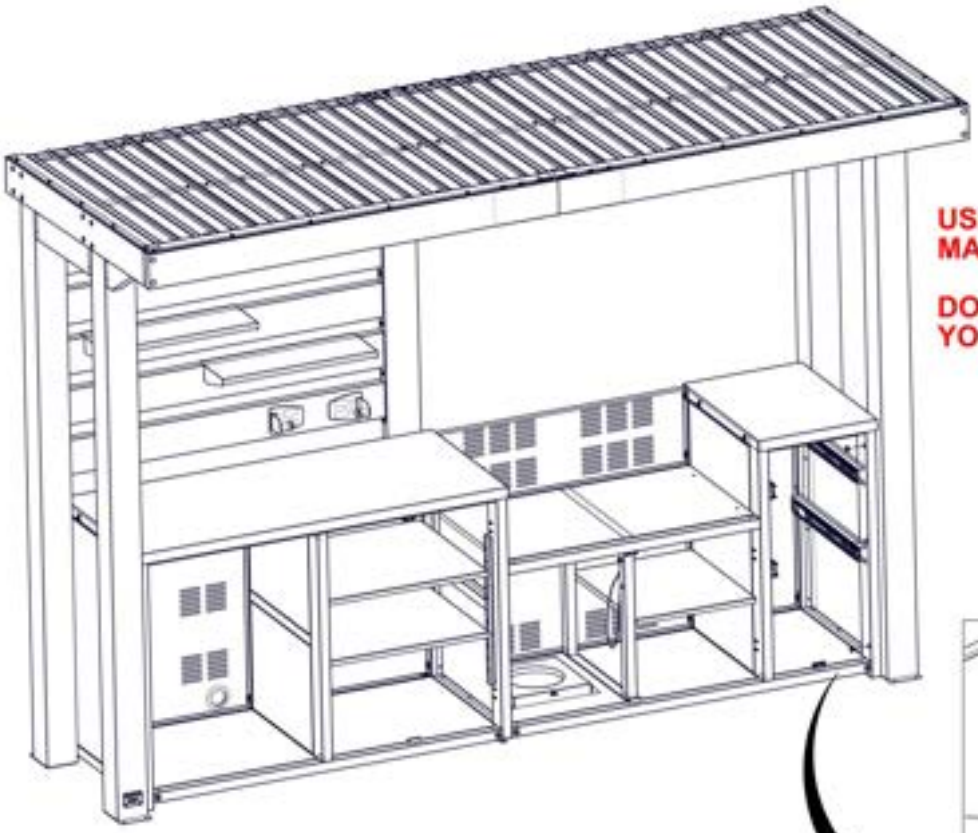

USE A SMALL PIECE OF WOOD AND RUBBER MALLET TO TAP HOLE COVERS IN.

DO NOT TAP DIRECTLY WITH A HAMMER AS YOU MAY DAMAGE THE FINISH ON PRODUCT.

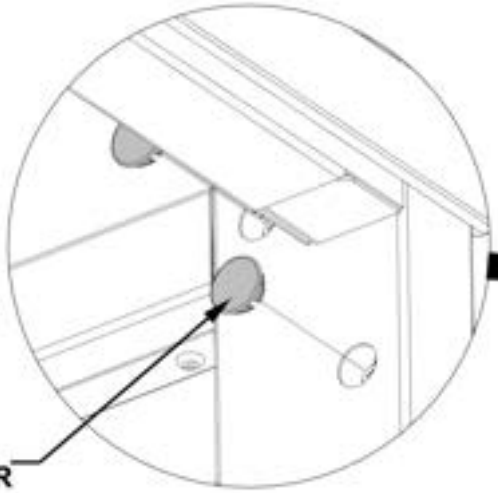

H1 (x5)
HOLE COVER

STEP 69C - KITCHEN CABINET ACCESSORIES

A4M01352 HOLE COVER
(x4)

DO NOT STAND ON CABINET FRAME TO INSTALL HOLE COVERS

USE A SMALL PIECE OF WOOD AND RUBBER MALLET TO TAP HOLE COVERS IN.

DO NOT TAP DIRECTLY WITH A HAMMER AS YOU MAY DAMAGE THE FINISH ON PRODUCT.

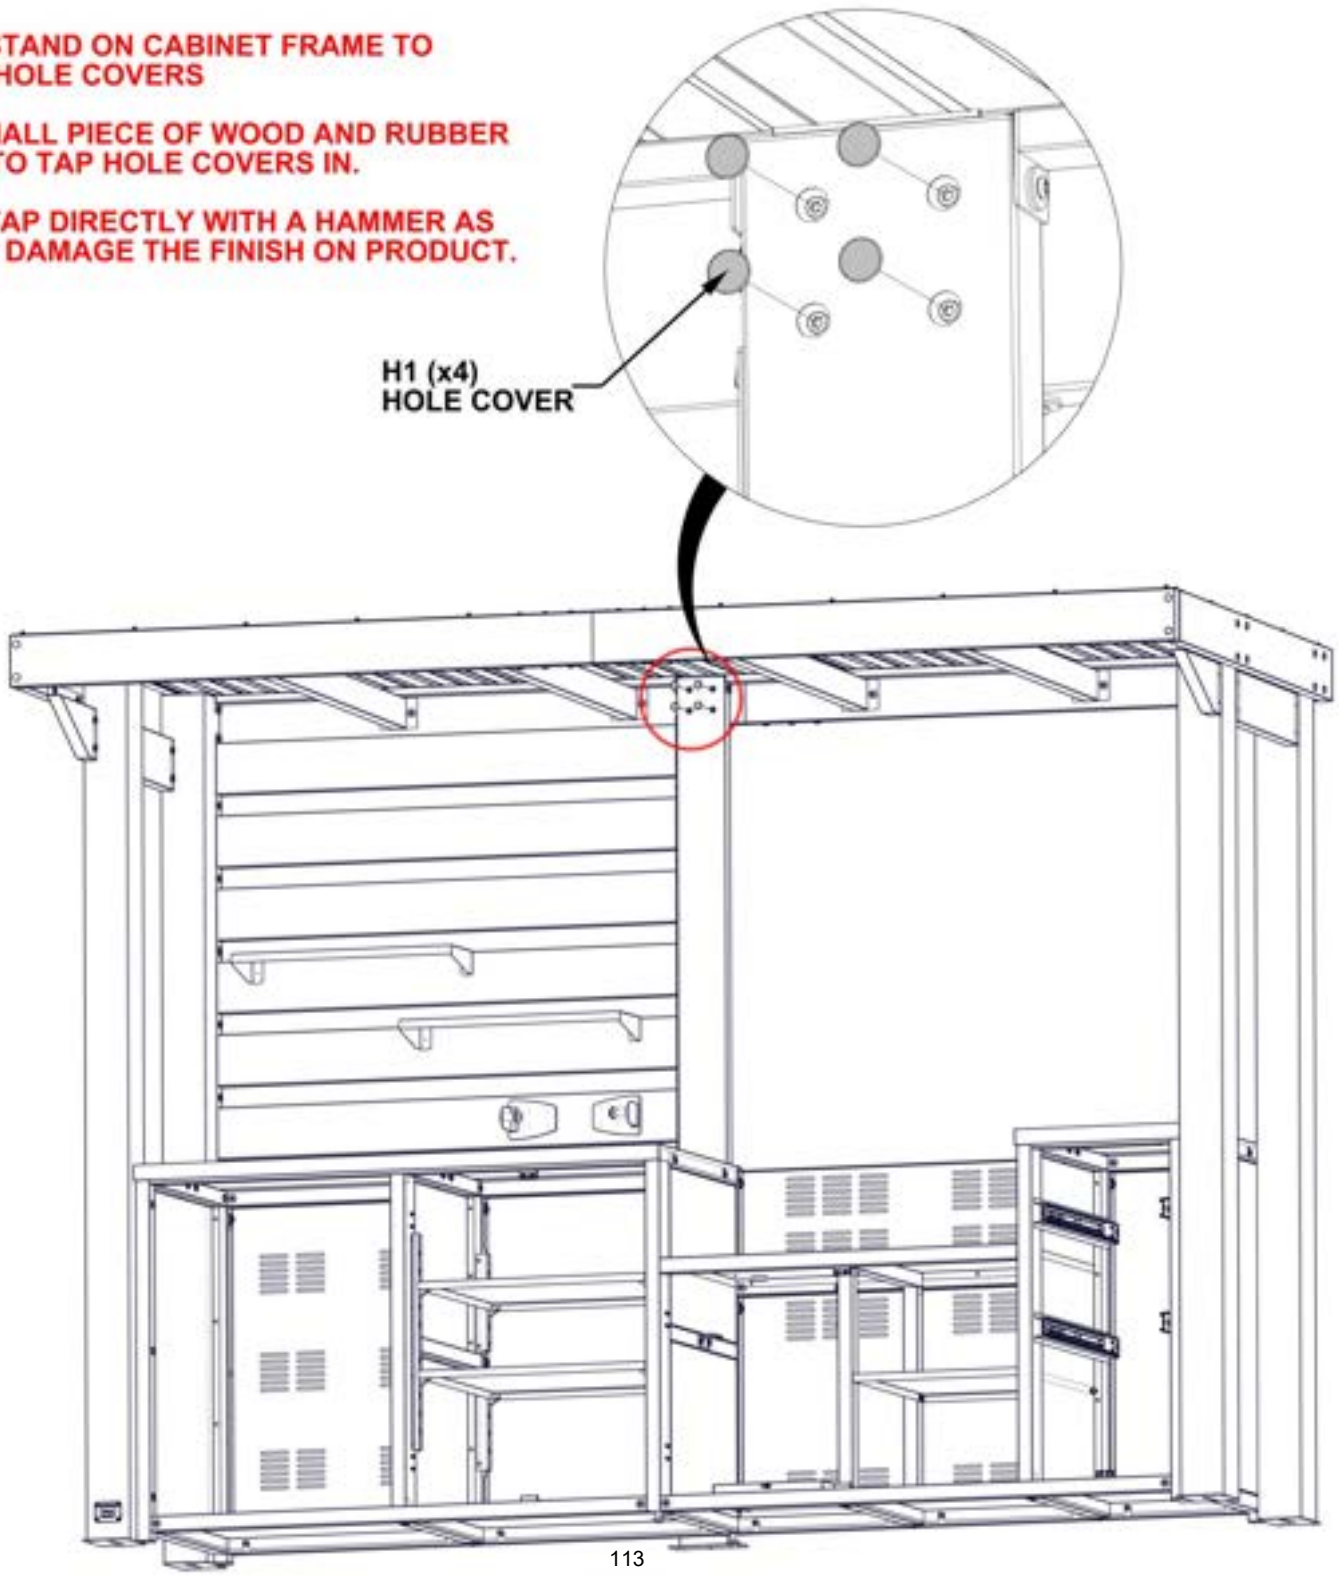

STEP 70A - KITCHEN TRASH CAN ASSEMBLY

A10 ANGLE BRACKET - A4M02276
(x1) 13/16"x5 15/16"x9 13/16" (20x151x250)

A07 ANGLE BRACKET - A4M02277
(x1) 13/16"x5 15/16"x9 13/16" (20x151x250)

QTY	PART NUMBER	Description
4	H100653	NUT LOCK 1/4 BLK
4	H100401	BOLT WH 1/4x1/2 BLK
4	H101133	WASHER FLAT 7x14 BLK

A04 7 GALLON TRASH CAN HOLDER - A4M02074
(x1) 1 1/4"x12 9/16"x21 5/8" (32x319.5x550)

ALIGN HOLES IN TOP OF ANGLE BRACKETS WITH HOLES IN TRASH CAN HOLDER.

MAKE SURE FLAT SIDE OF BRACKETS FACE OUTWARD AND FRONT EDGE IS FLUSH.

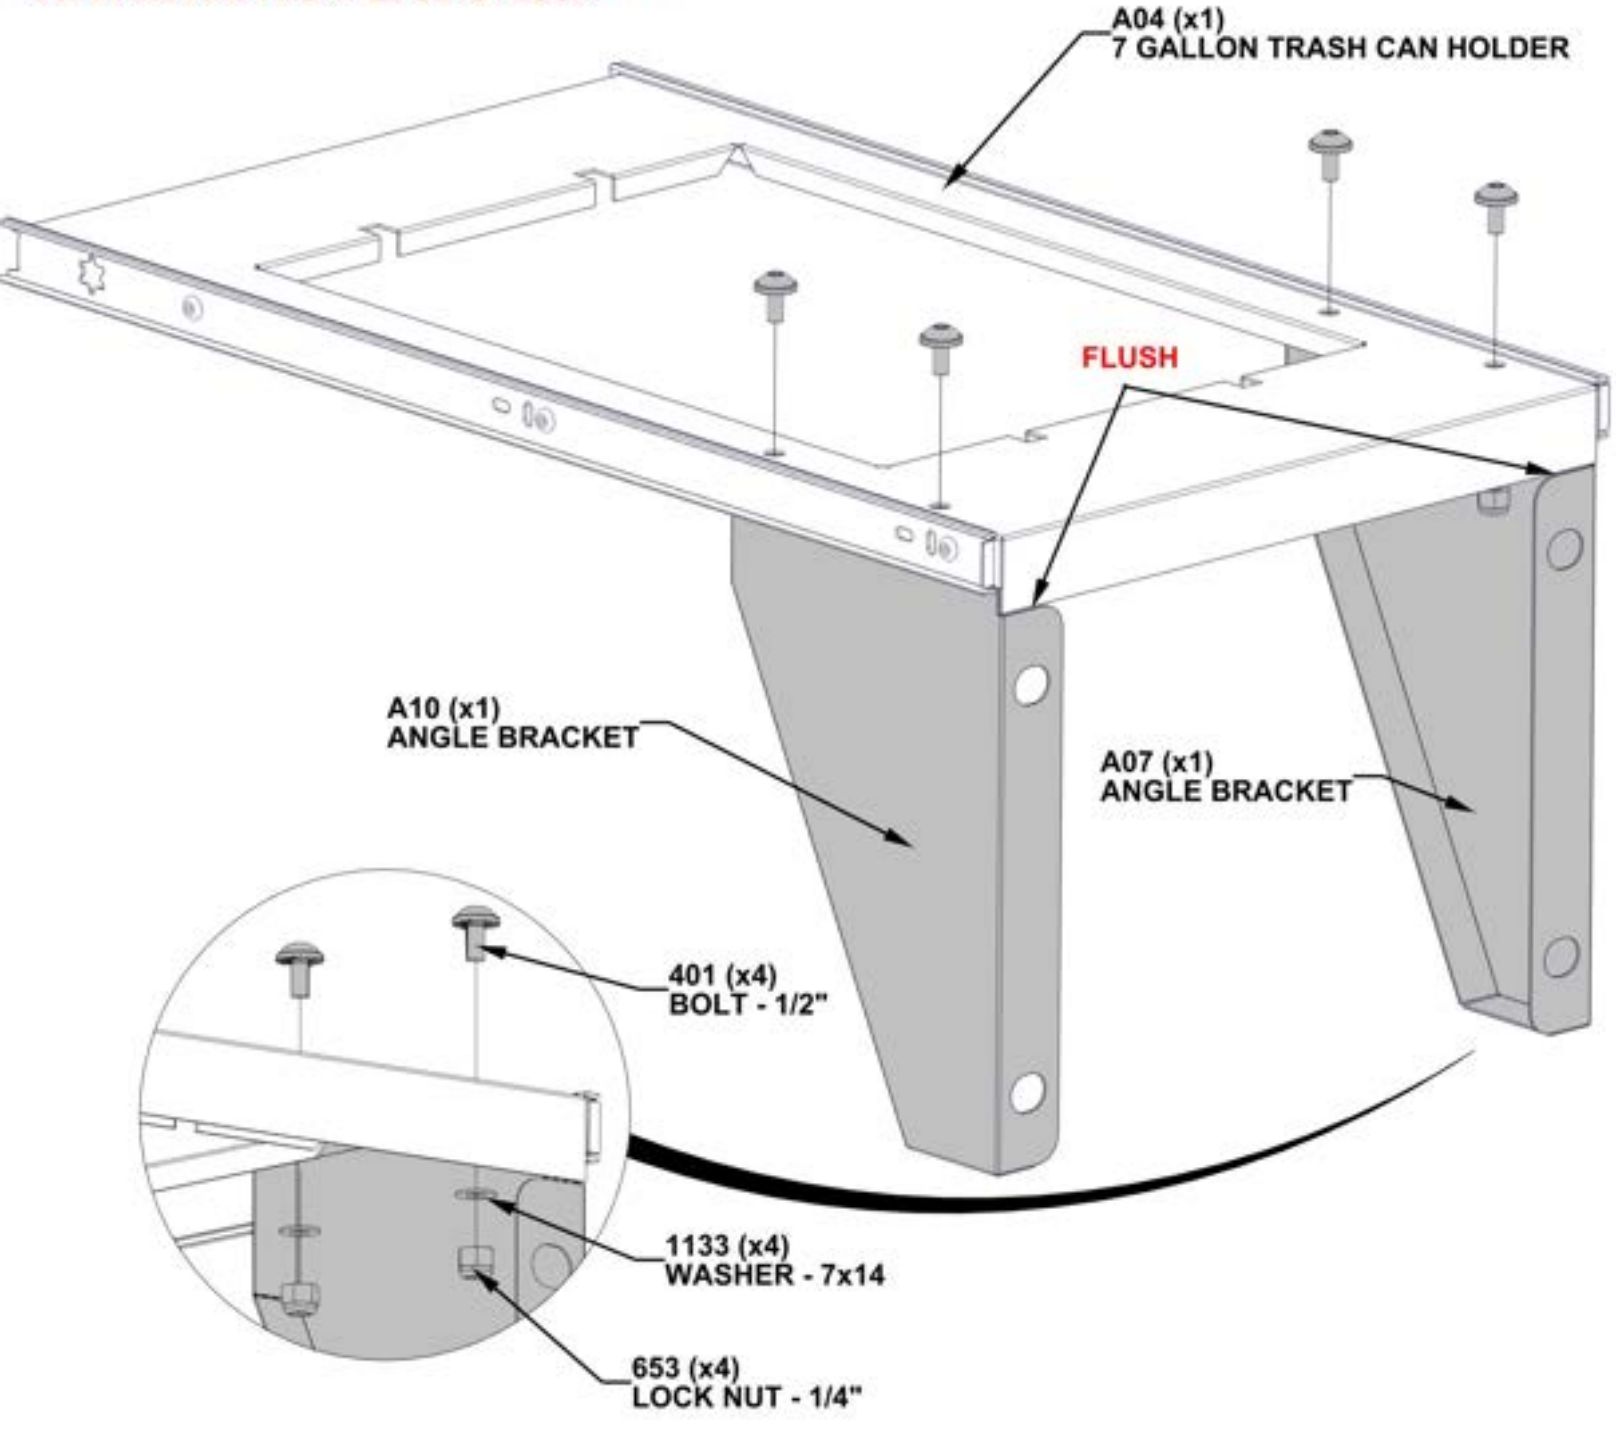

STEP 70B - KITCHEN TRASH CAN ASSEMBLY

D03 DOOR PANEL - A4M02067
(x1) 7/8"x14 5/8"x22 7/16" (22x372x570)

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

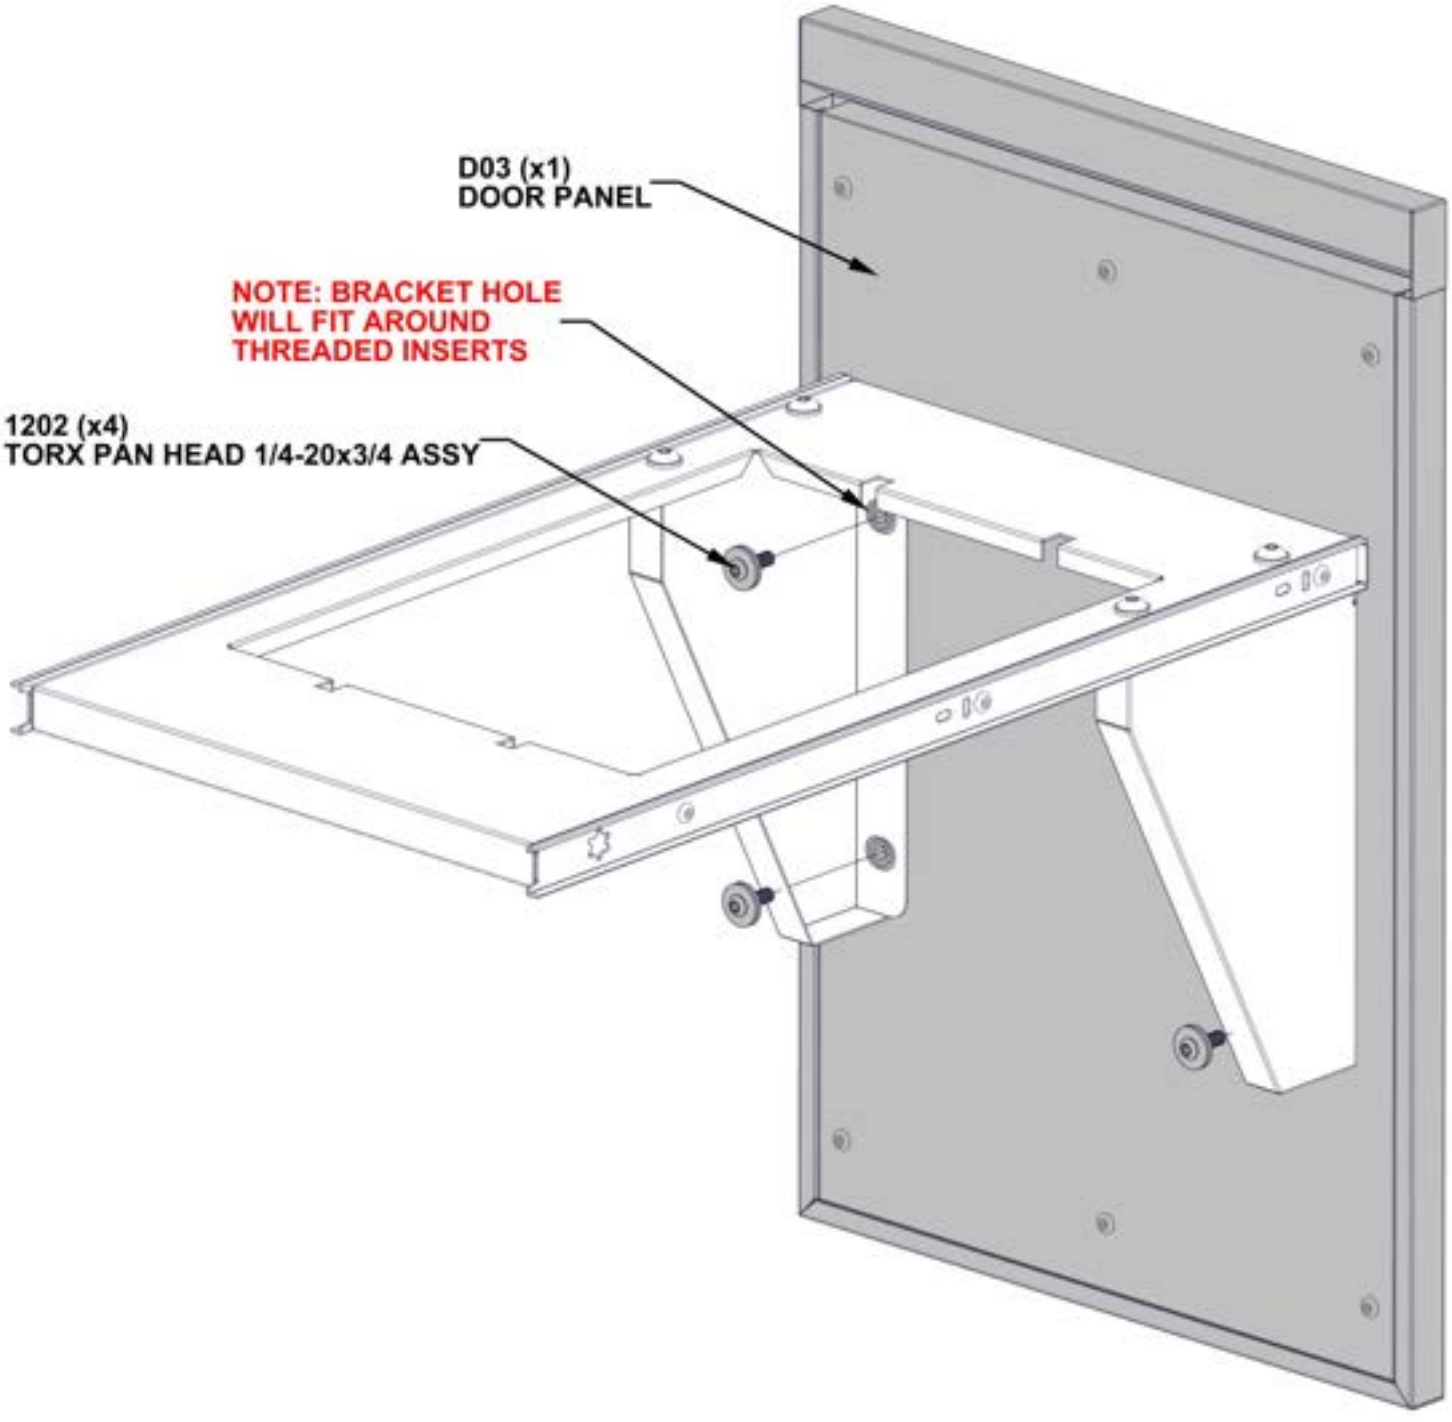

STEP 71 - KITCHEN CABINET ACCESSORIES

TRASH CAN HOLDER ASSEMBLY
STEPS 70A - 70B

ATTACH TRASH CAN HOLDER BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.

PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

TIP: REFER TO STEP 79:
KITCHEN DOOR ADJUSTMENT

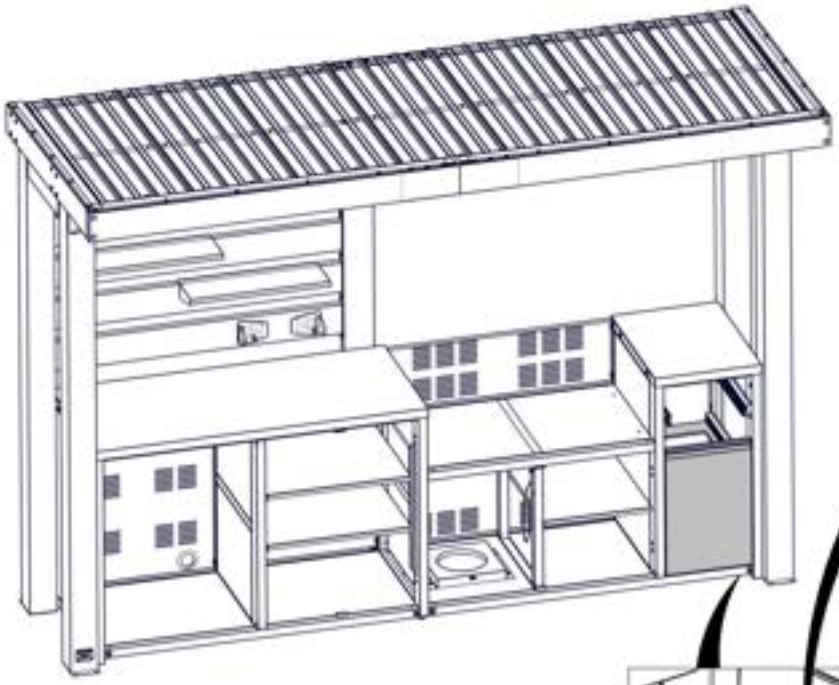

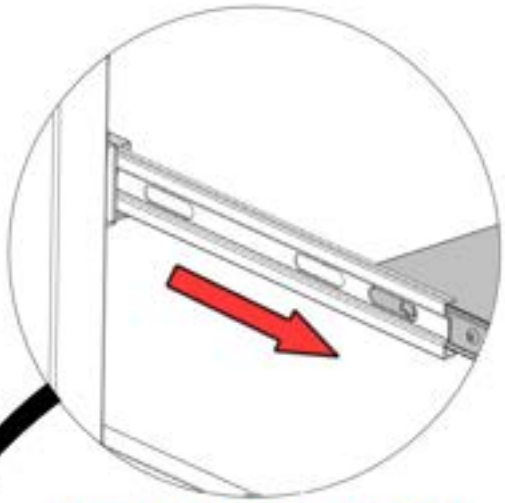

NOTE: SLIDE INNER RACE OF DRAWER SLIDE OUT BEFORE ATTACHING SLIDES

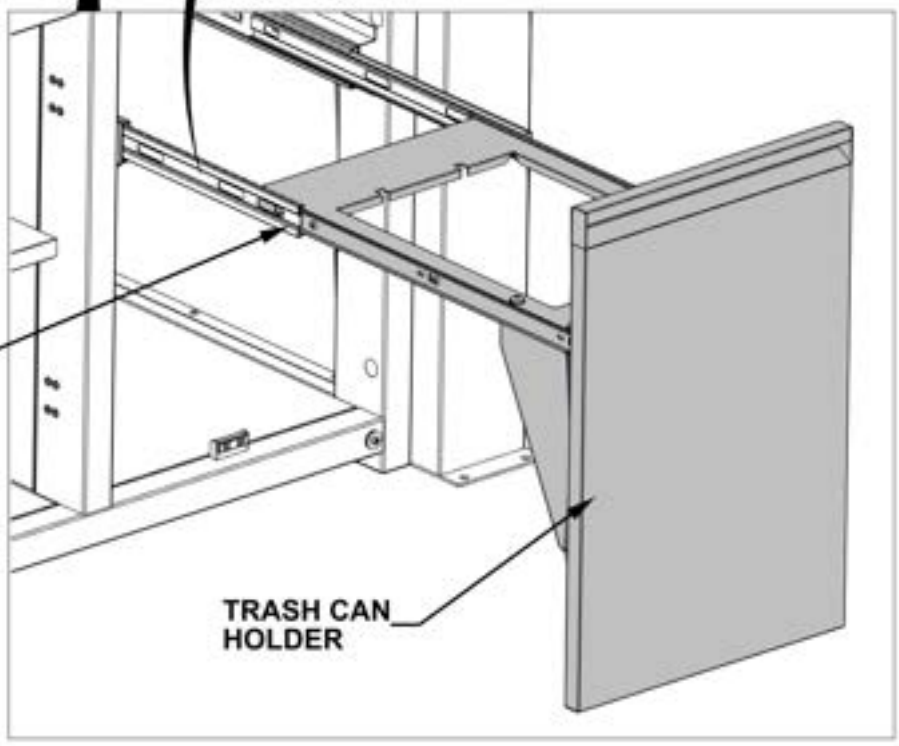

STEP 72 - CABINET DRAWER ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

D06 DRAWER FACE - A4M02060
(x1) 7/8"x11 1/16"x14 5/8" (22x281x372)

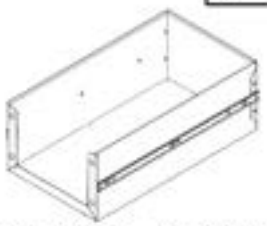

D07 8" DRAWER - A4M02075
(x1) 8 1/16"x12 9/16"x21 11/16" (204x319.5x551)

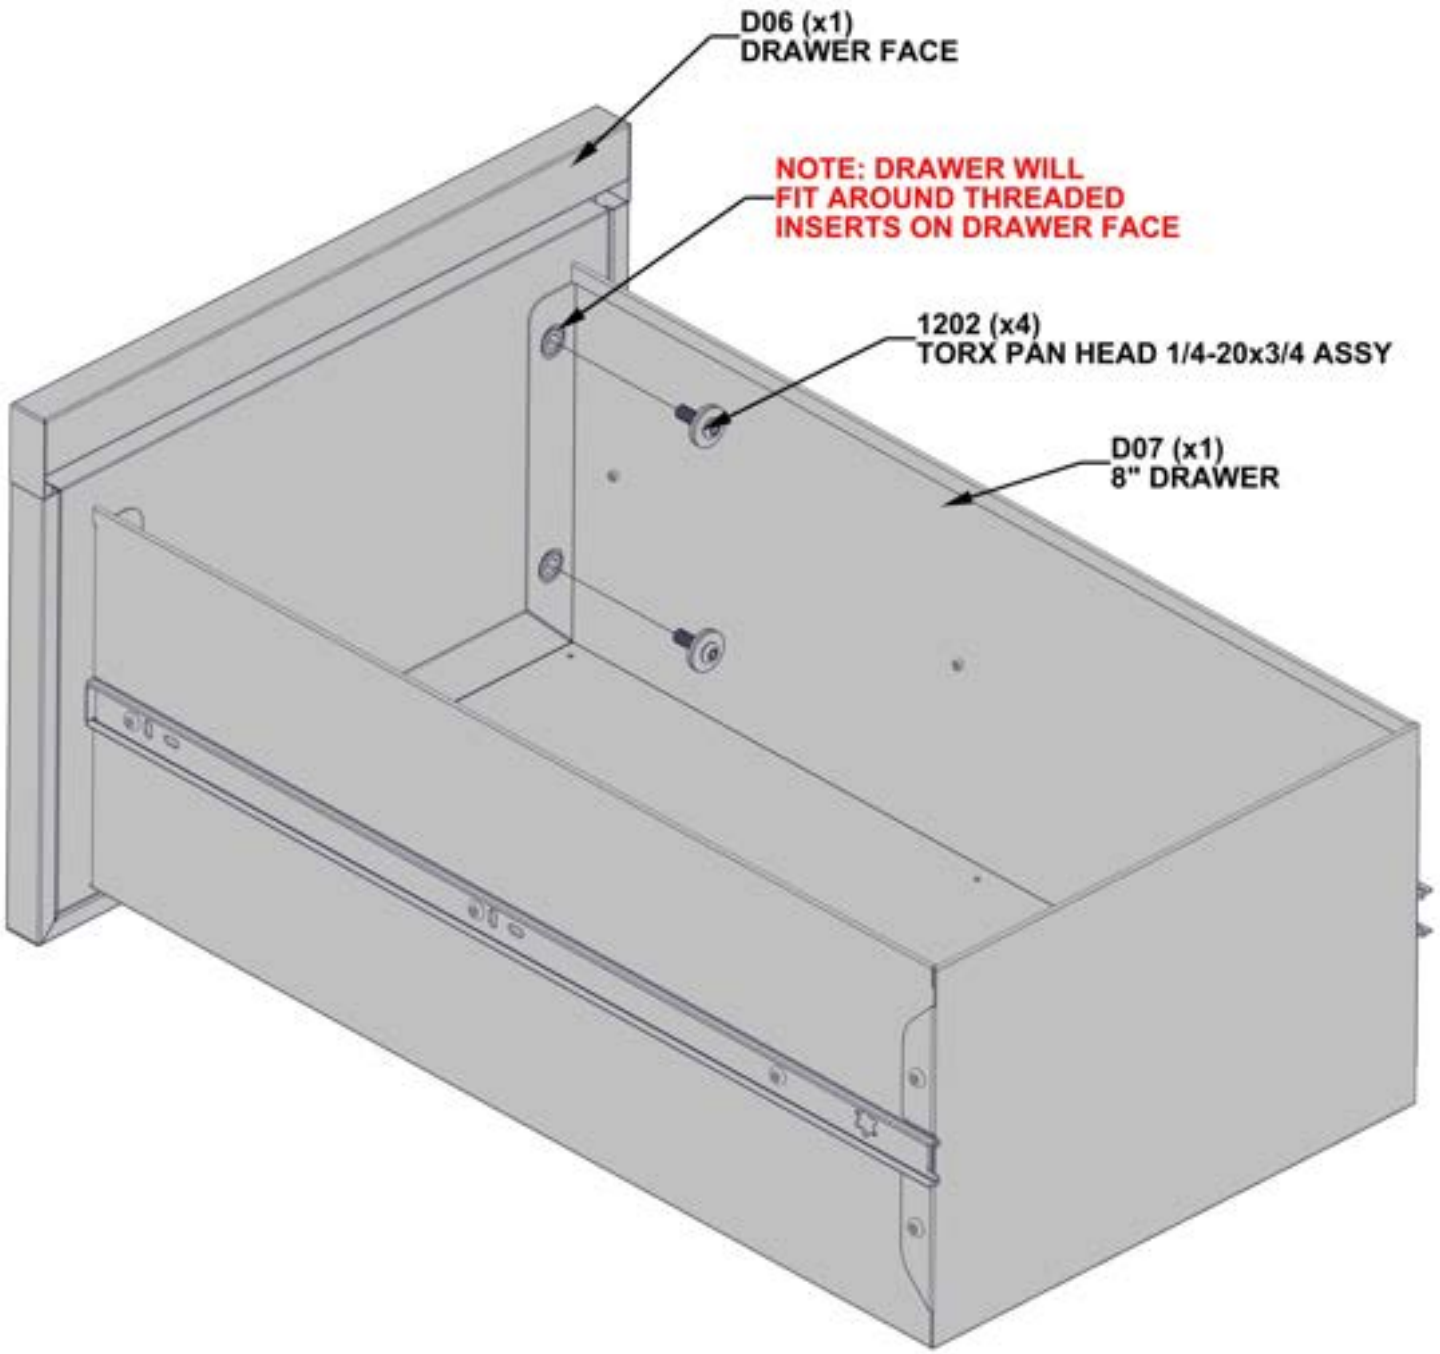

STEP 73 - KITCHEN CABINET ACCESSORIES

PULL OUT DRAWER
ASSEMBLY STEP 72

ATTACH PULL OUT DRAWER BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.

PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

TIP: REFER TO STEP 79:
KITCHEN DOOR ADJUSTMENT

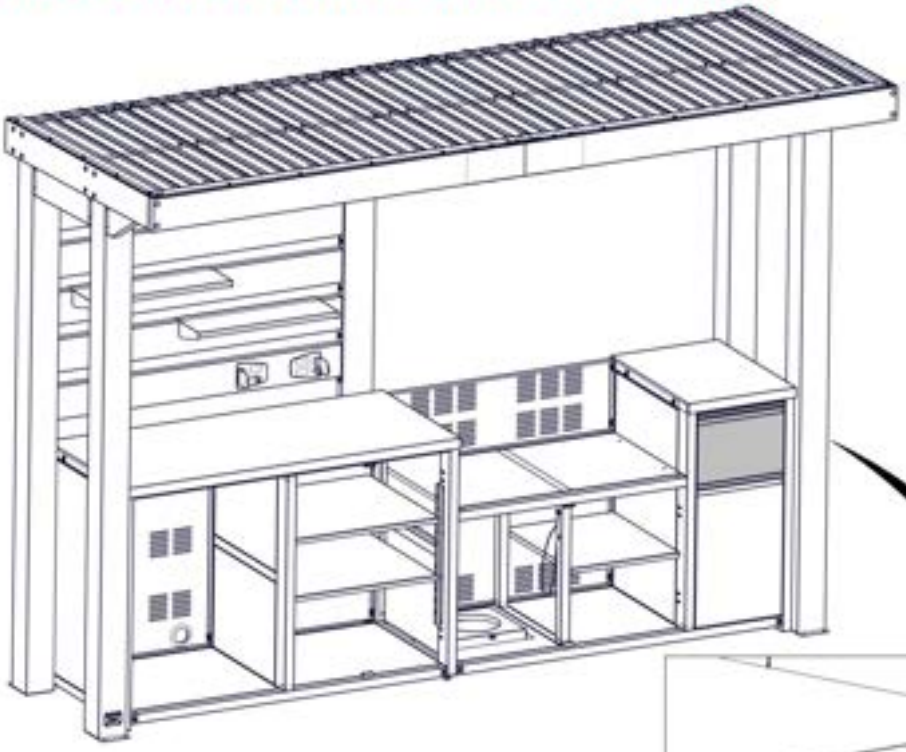

NOTE: SLIDE INNER RACE OF DRAWER SLIDE OUT BEFORE ATTACHING SLIDES

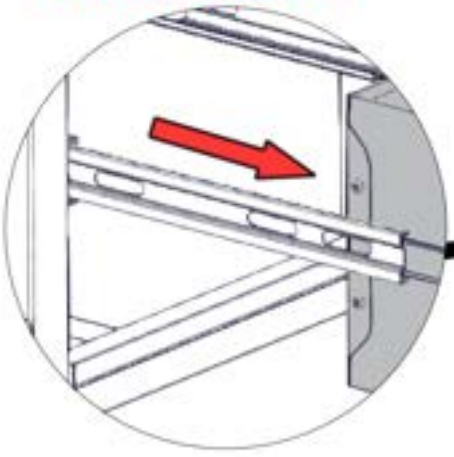

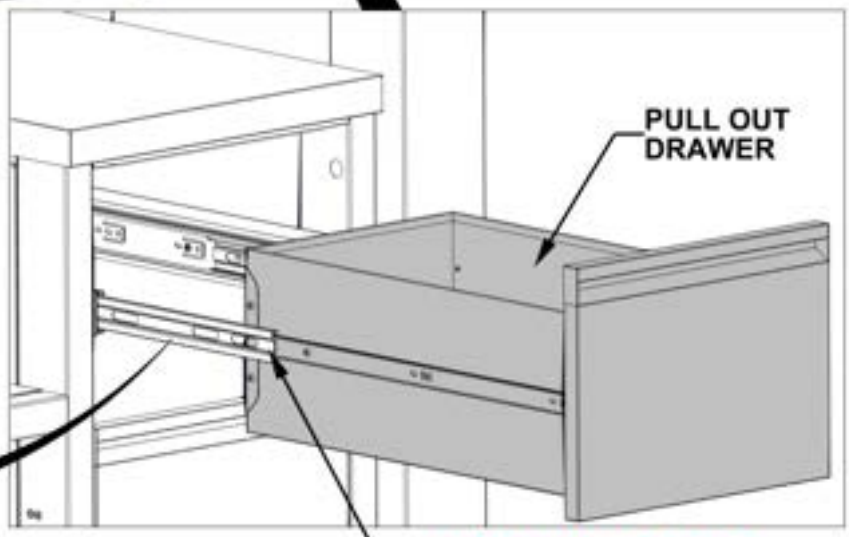

STEP 74 - CABINET DOOR ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
16	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D01 DOOR PANEL - A4M02064
(x1) 22x12 3/4"x33 5/8" (22x324x854)

D02 DOOR PANEL - A4M02066
(x1) 7/8"x12 3/4"x33 5/8" (22x324x854)

A4M02070 CABINET HINGE
(x8)

D04 DOOR PANEL - A4M02068
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)

D05 DOOR PANEL - A4M02069
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)

INSTALL CABINET HINGES TO ALL DOORS.

DO NOT OVERTIGHTEN HARDWARE

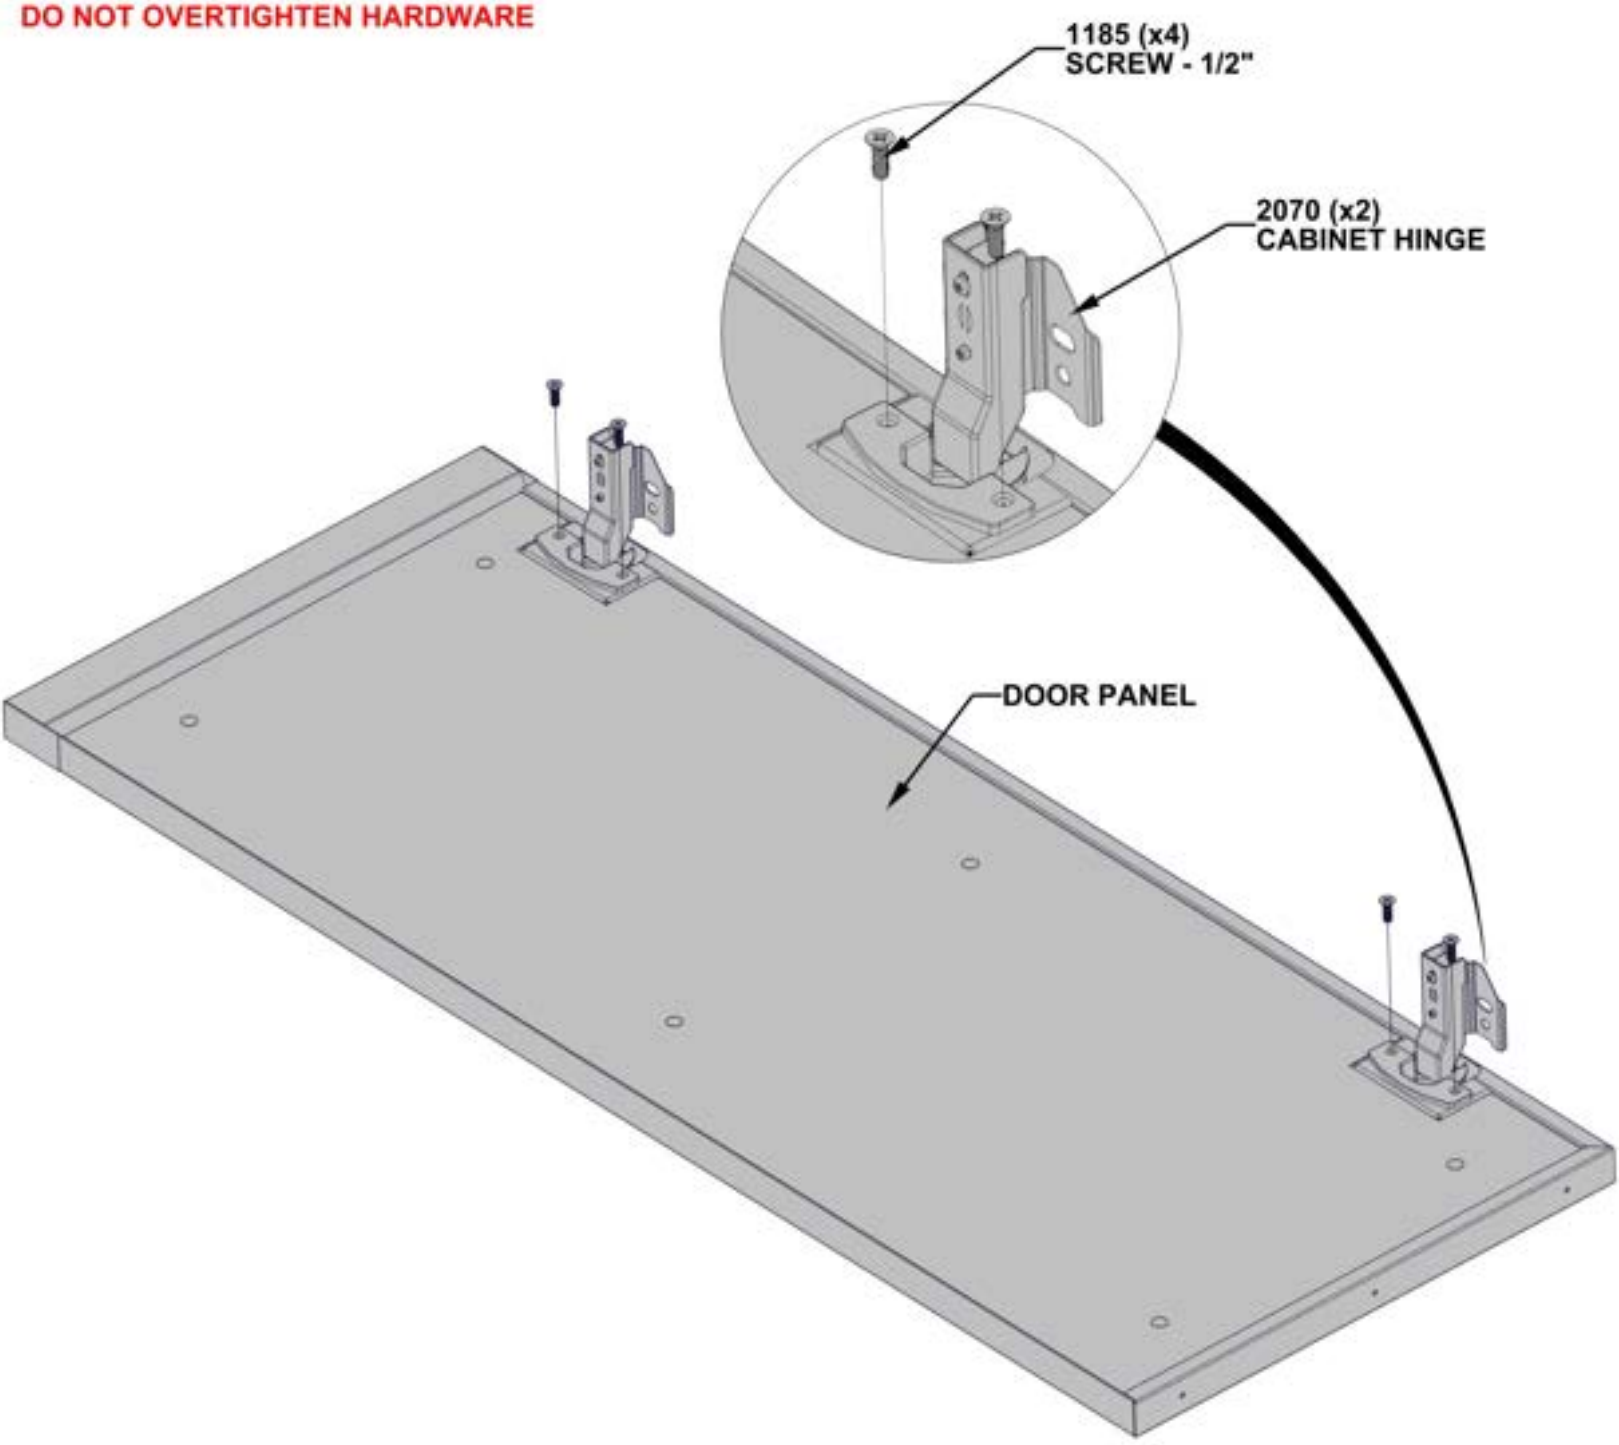

STEP 75 - CABINET DOOR ATTACHMENT

D02 DOOR PANEL - A4M02066
(x1) 7/8"x12 3/4"x33 5/8" (22x324x854)

QTY	PART NUMBER	DESCRIPTION
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.

TIP: REFER TO STEP 79: ADJUSTING DOOR HINGES AS NEEDED

WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH ZERTS IN SIDE OF CABINET PANEL.

DO NOT OVERTIGHTEN HARDWARE.

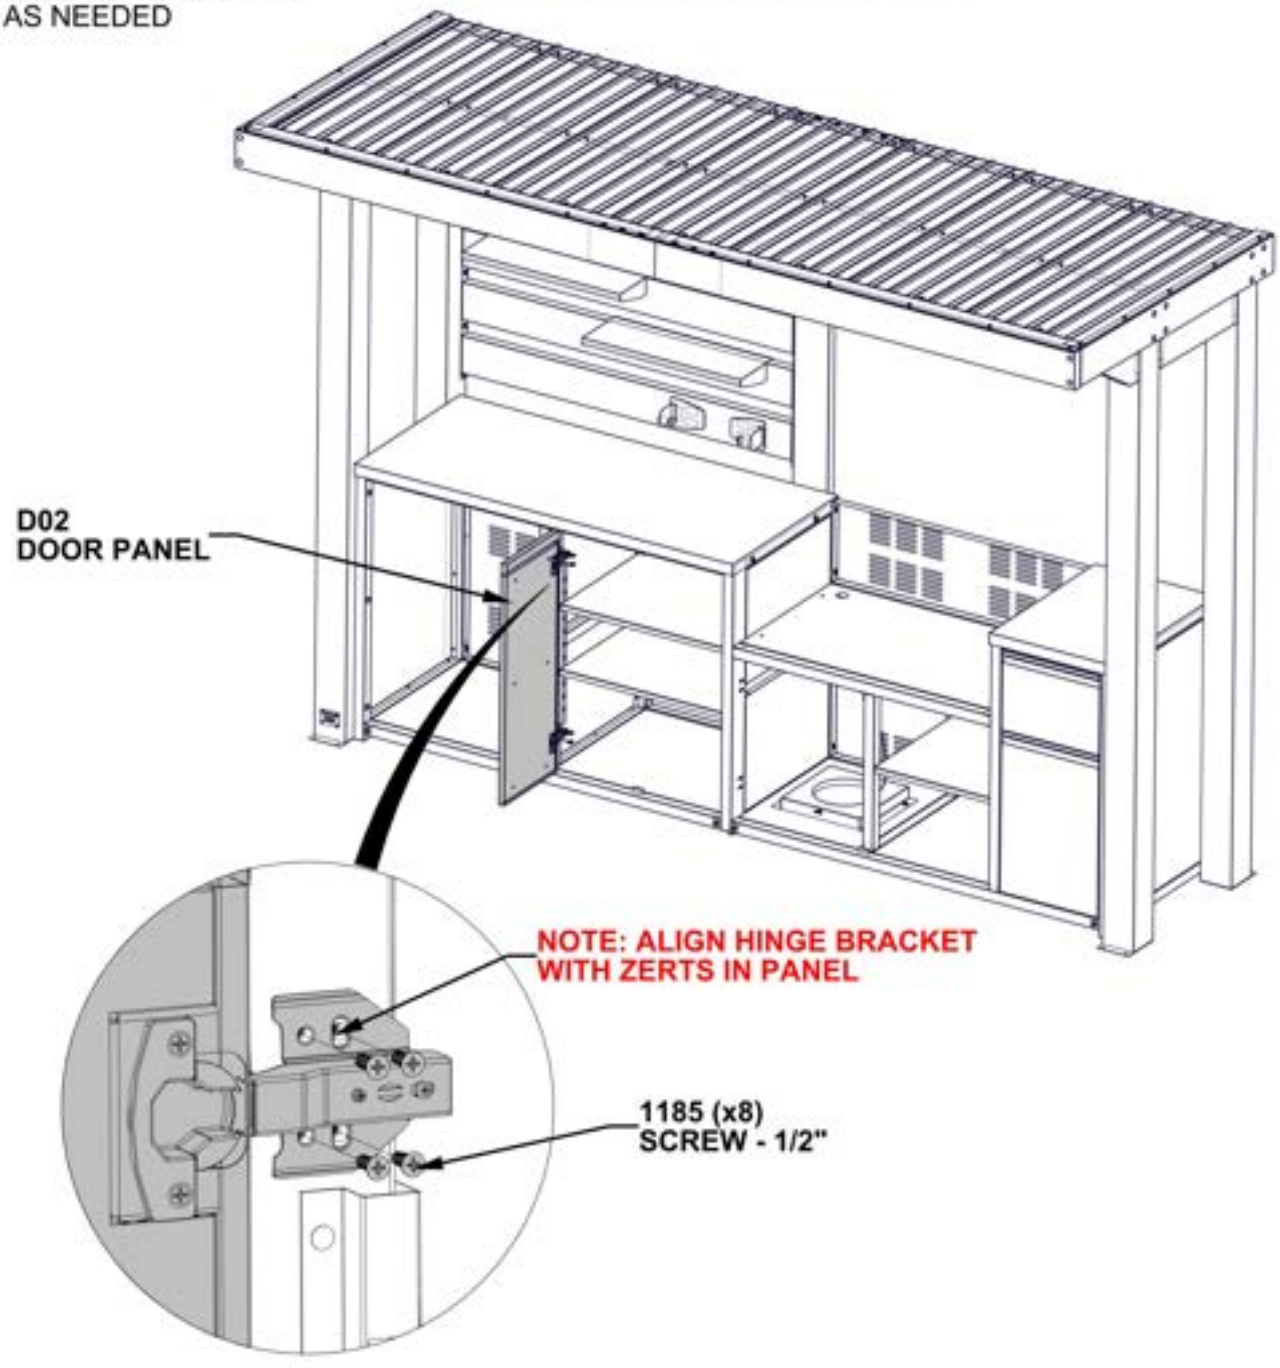

STEP 76 - CABINET DOOR ATTACHMENT

D01 DOOR PANEL - A4M02064
(x1) 22x12 3/4"x33 5/8" (22x324x854)

QTY	PART NUMBER	DESCRIPTION
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.

TIP: REFER TO STEP 79: ADJUSTING DOOR HINGES AS NEEDED

WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH ZERTS IN SIDE OF CABINET PANEL.

DO NOT OVERTIGHTEN HARDWARE.

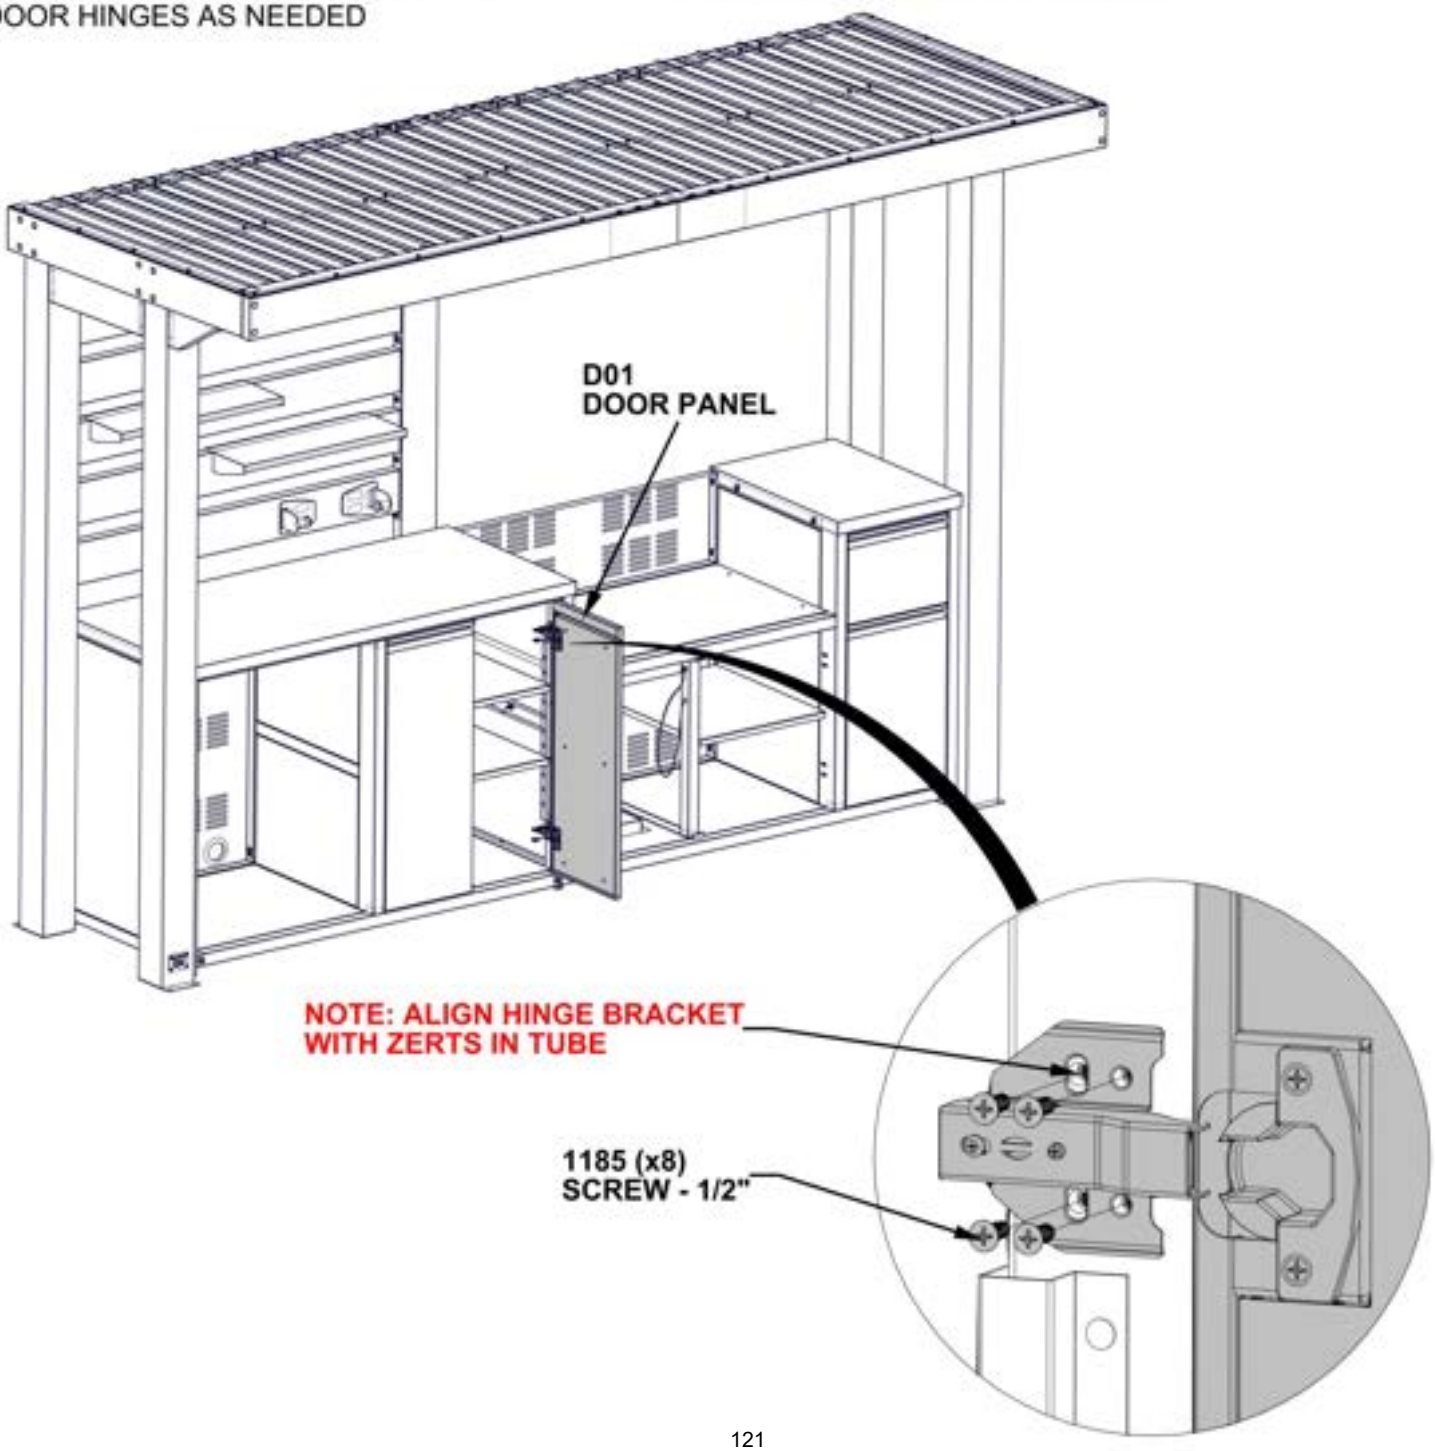

STEP 77 - CABINET DOOR ATTACHMENT

QTY	PART NUMBER	DESCRIPTION
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D05 DOOR PANEL - A4M02069
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)

FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.

TIP: REFER TO STEP 79: ADJUSTING DOOR HINGES AS NEEDED

WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH ZERTS IN SIDE OF CABINET PANEL.

DO NOT OVERTIGHTEN HARDWARE.

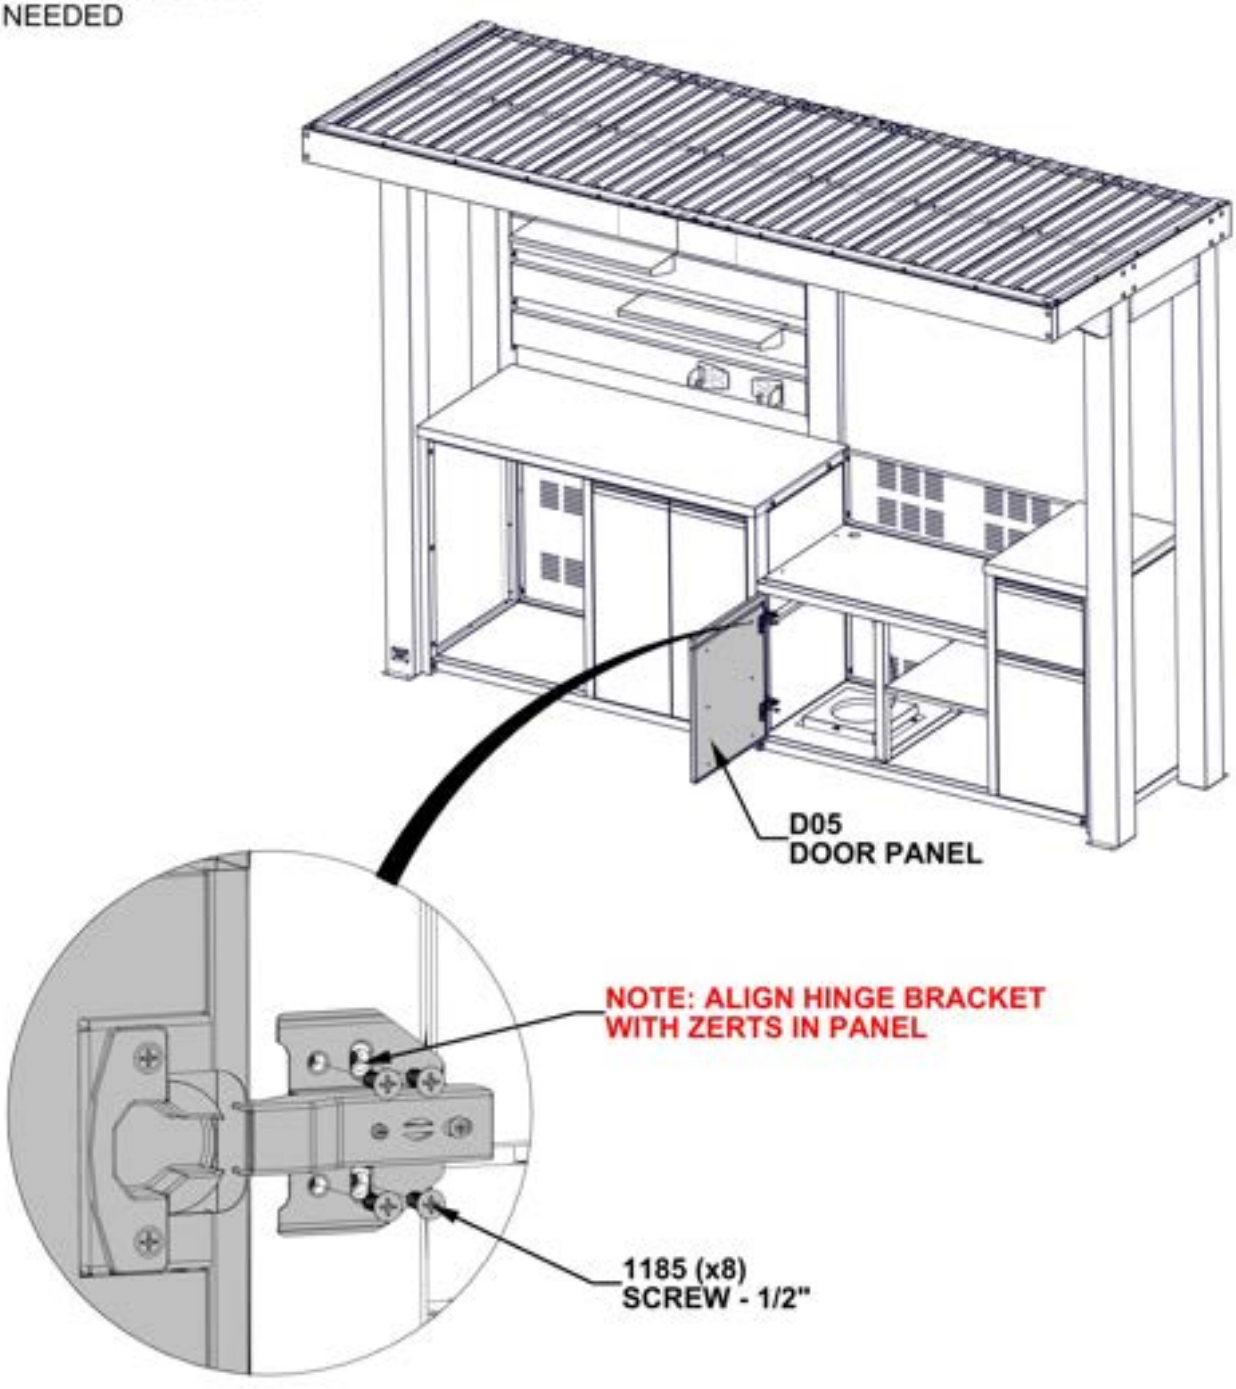

STEP 78 - CABINET DOOR ATTACHMENT

D04 DOOR PANEL - A4M02068
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)

QTY	PART NUMBER	DESCRIPTION
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.

TIP: REFER TO STEP 79: ADJUSTING DOOR HINGES AS NEEDED

WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH ZERTS IN SIDE OF CABINET PANEL.

DO NOT OVERTIGHTEN HARDWARE.

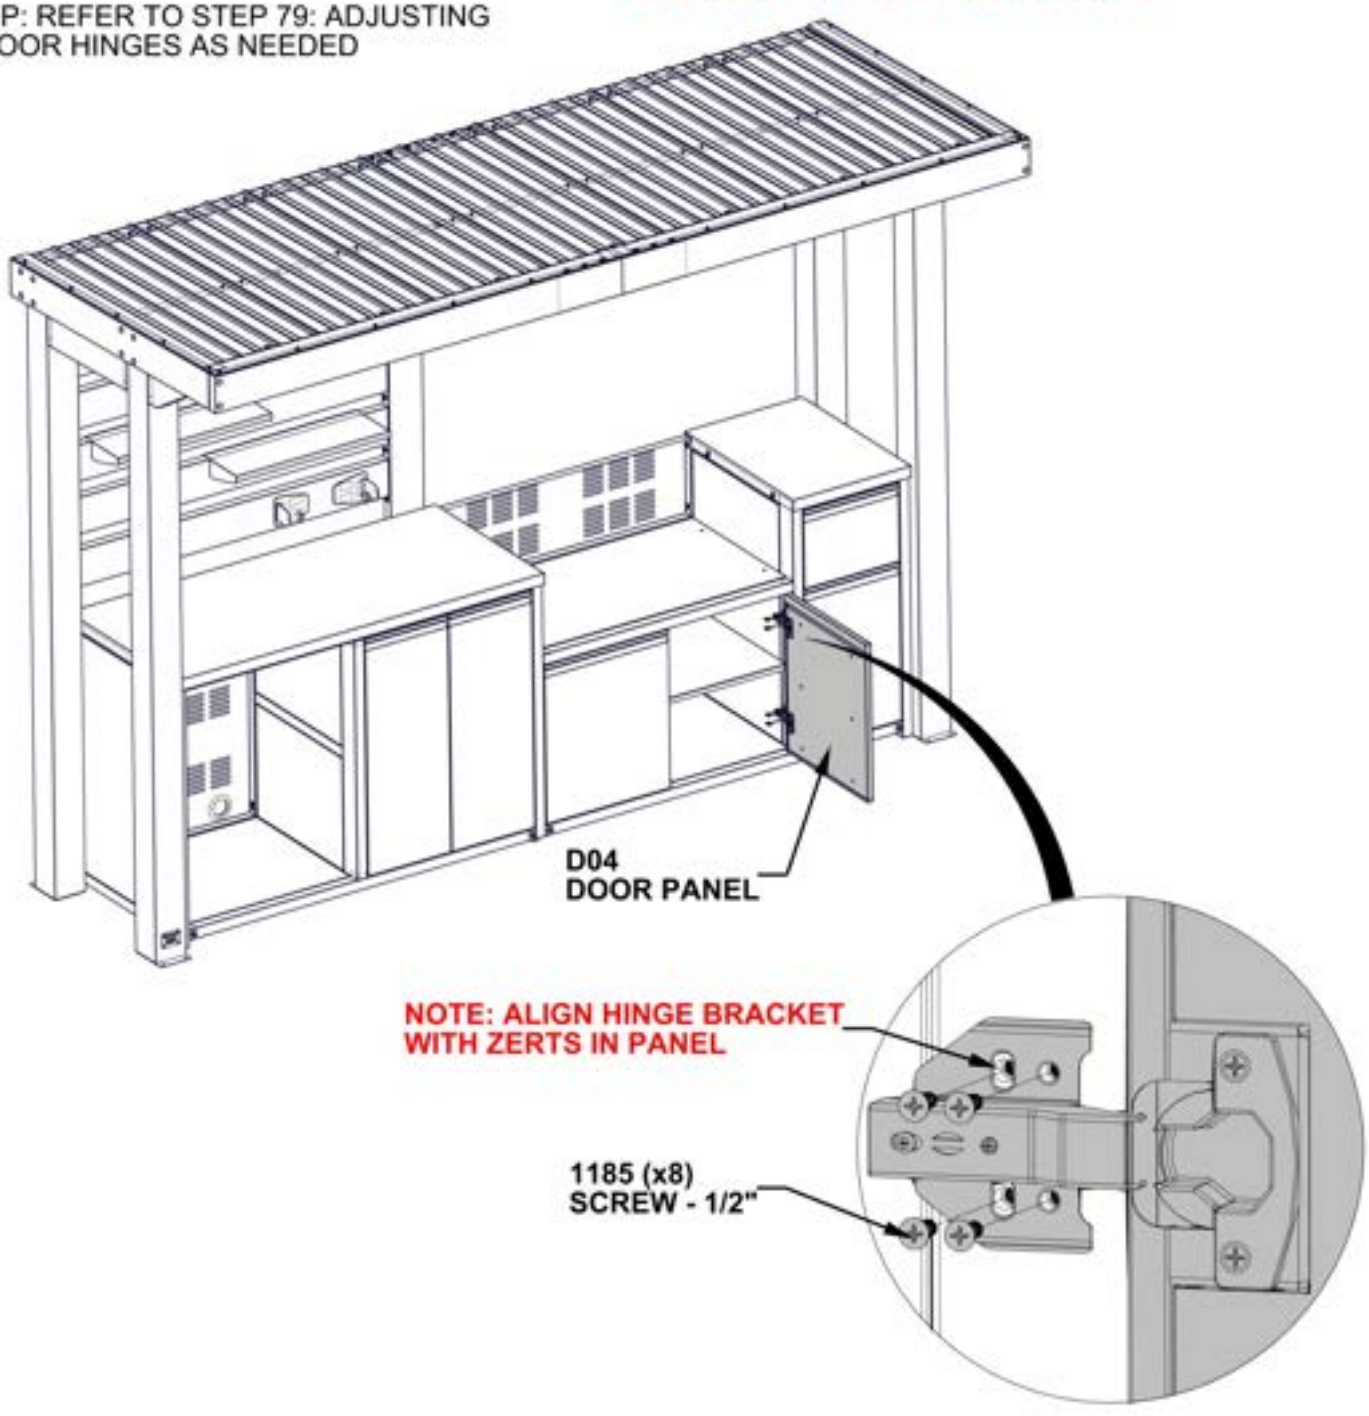

STEP 79 - KITCHEN DOOR ADJUSTMENT (AS NEEDED)

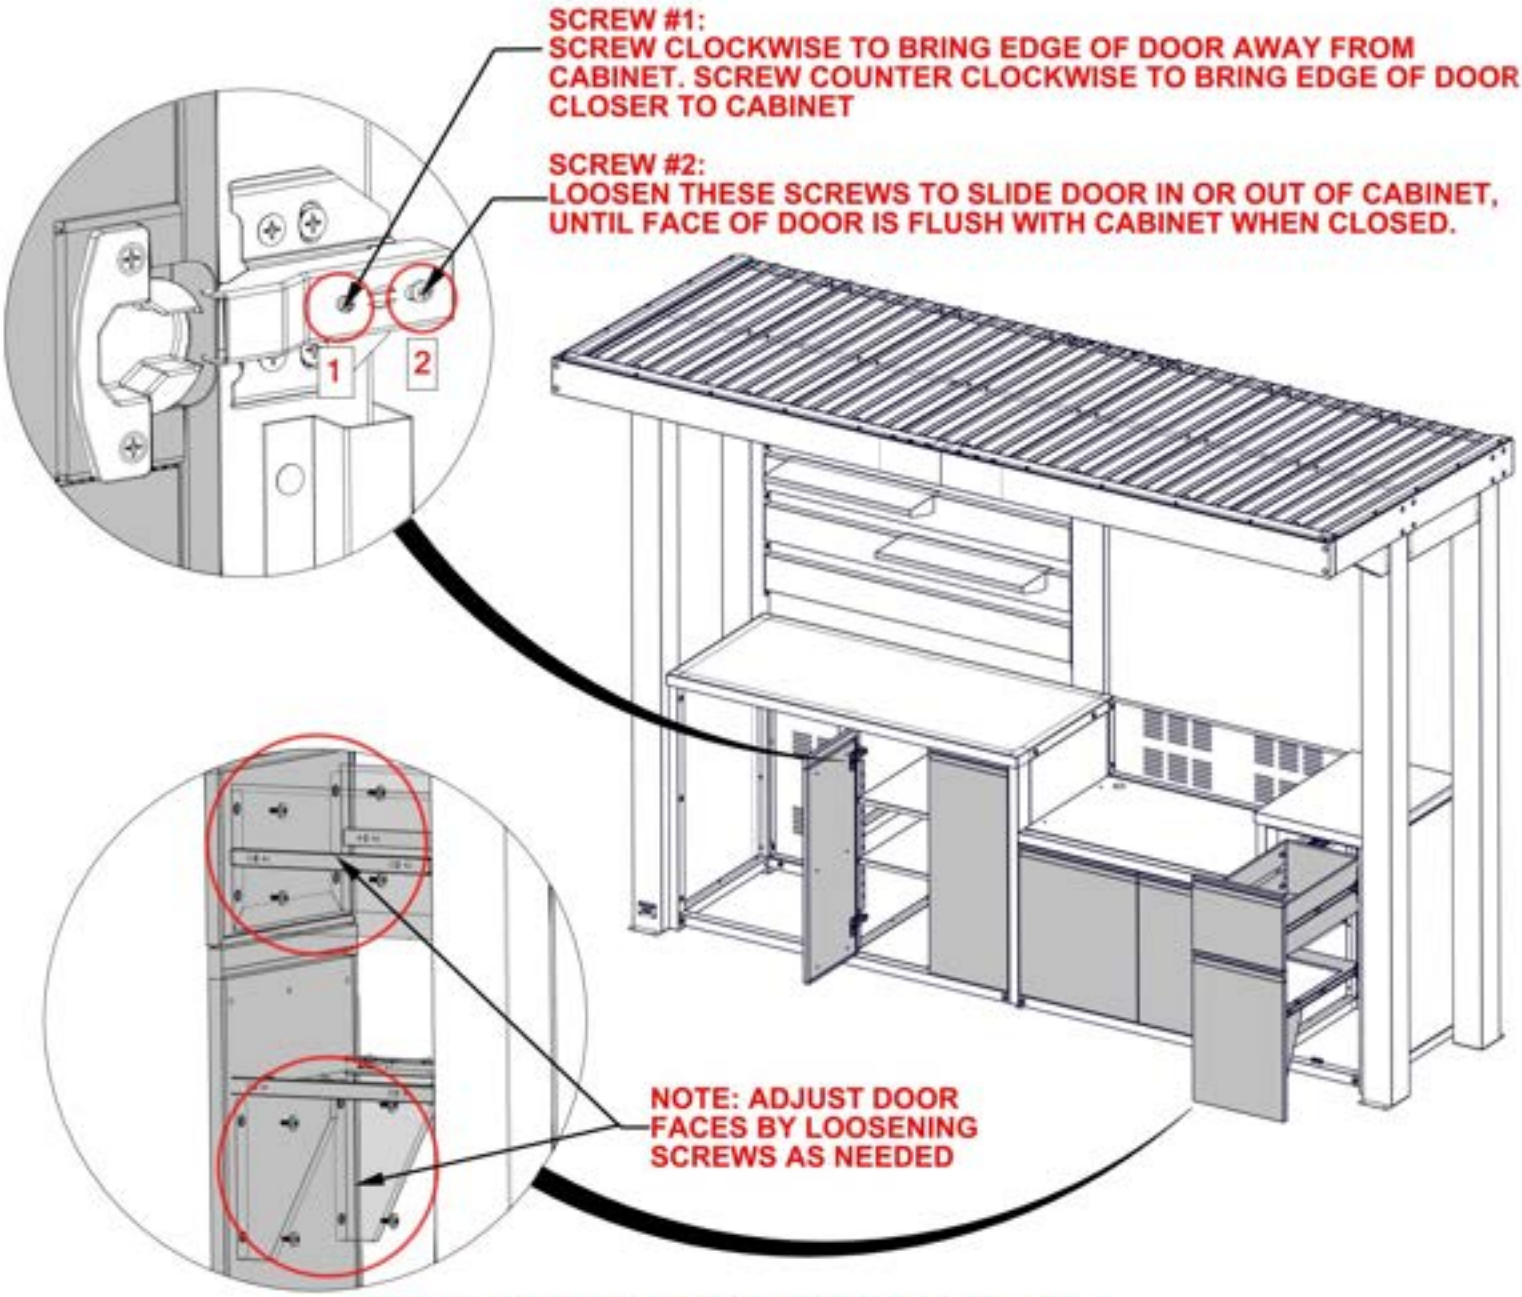

ADJUST HINGES SO THAT THE GAP AROUND ALL DOORS AND DRAWER FACE IS THE SAME, AND THERE IS NO INTERFERENCE BETWEEN DOORS AND CABINETS

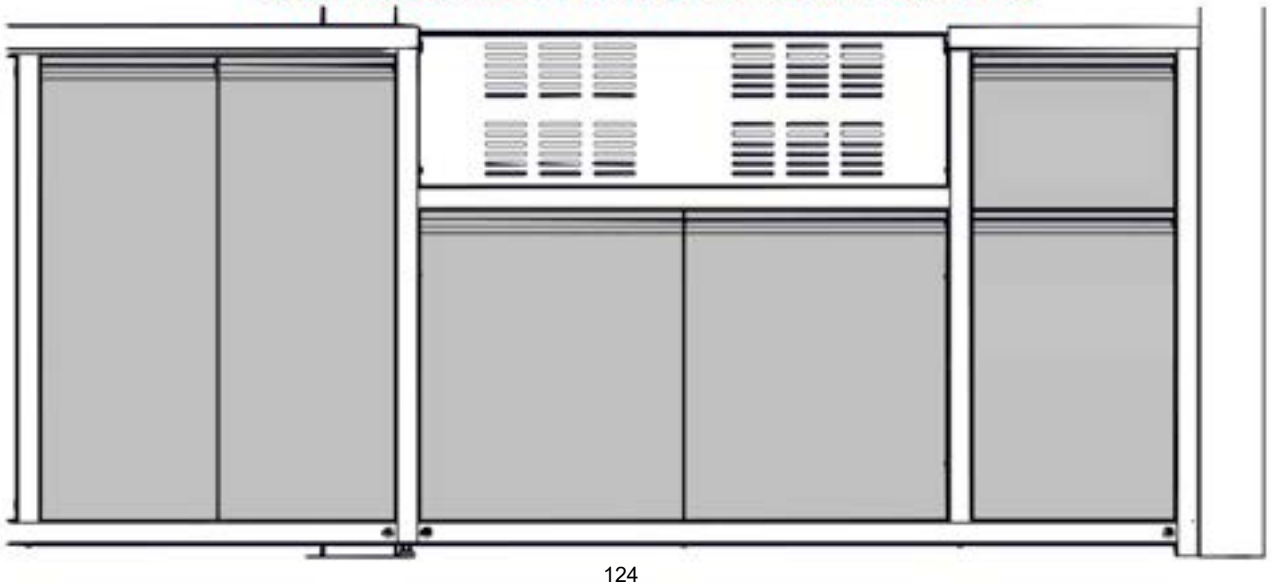

STEP 80 - KITCHEN ANCHORING

QTY	PART NUMBER	DESCRIPTION
11	H100630	WASHER FLAT 8x19 BLK
11	H100120	CONCRETE ANCHOR

MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE SURFACE OR CONCRETE POST PADS AS SHOWN BELOW.

FOR INSTALLATION ON WOOD DECK, YOU MUST ENSURE THERE IS AMPLE STRUCTURAL SUPPORT UNDER THE DECK. HARDWARE NOT INCLUDED FOR DECK ATTACHMENT.

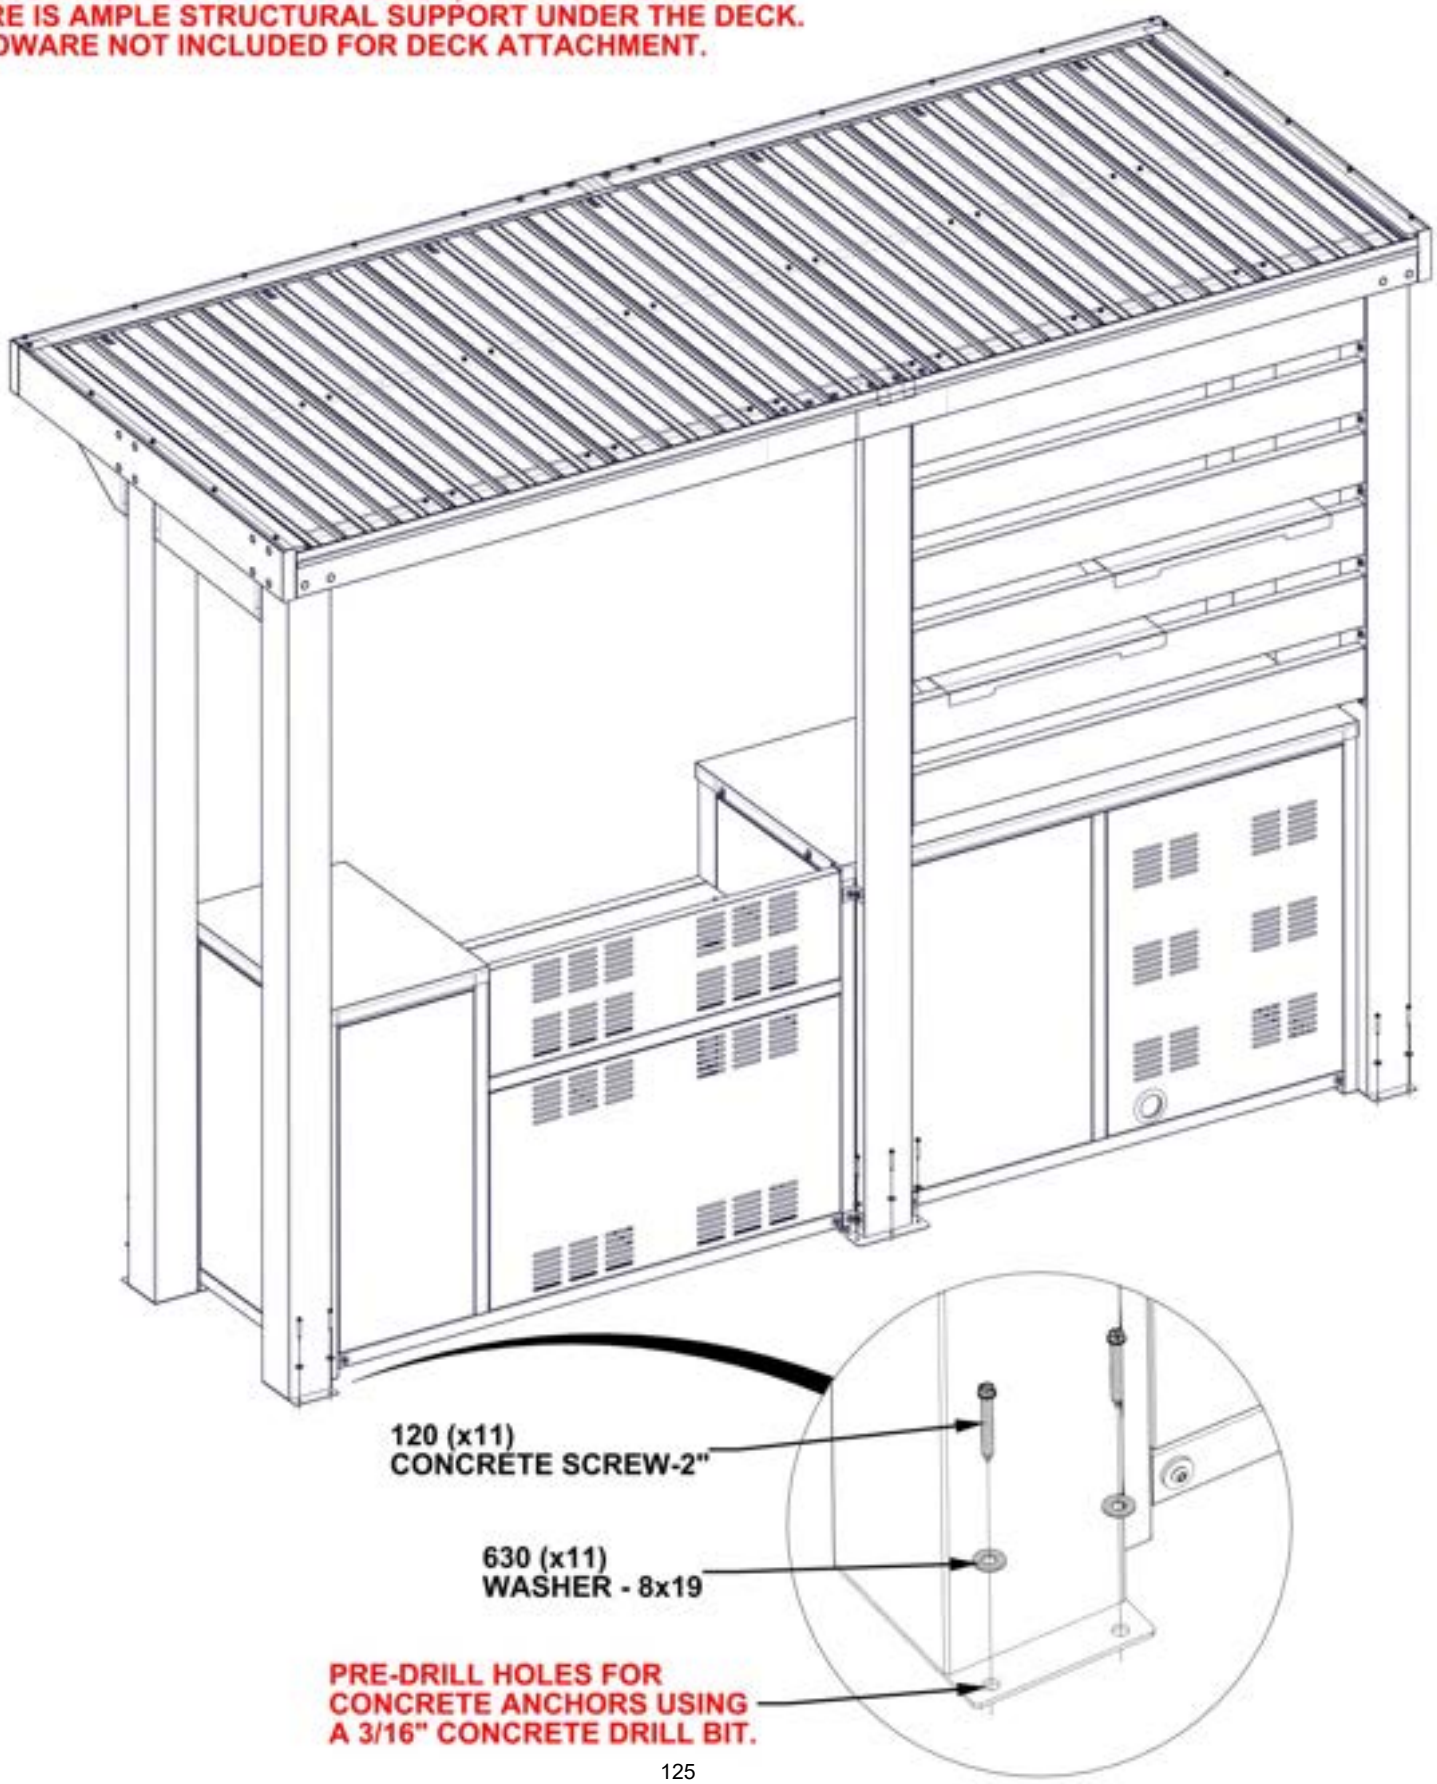

Outdoor Kitchen Grill Kit

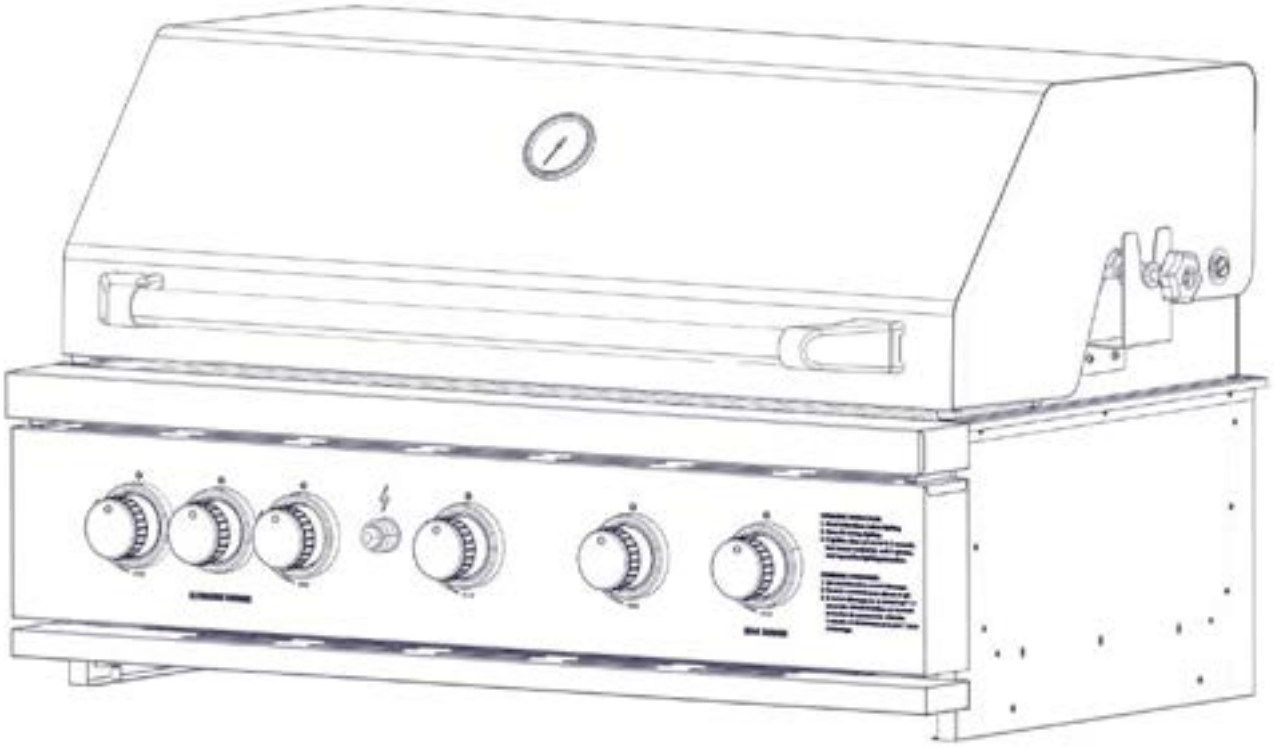

9240025 *(x1)* | **OUTDOOR KITCHEN GRILL KIT**

FOR INTALLATION AND DETAILED INFORMATION REGARDING OUTDOOR KITCHEN GRILL KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN GRILL KIT. FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

Outdoor Kitchen Fridge

9230132 *(x1)* | **OUTDOOR KITCHEN FRIDGE**

FOR INSTALLATION OF OUTDOOR KITCHEN FRIDGE, REFER TO PAGES BELOW IN THIS INSTRUCTION MANUAL.

FOR DETAILED INFORMATION REGARDING OUTDOOR KITCHEN FRIDGE, REFER TO ASSEMBLY INSTRUCTIONS THAT COMES PACKAGED WITH THE OUTDOOR KITCHEN FRIDGE KIT. FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

FRIDGE INSTALLATION INSTRUCTION

OUTDOOR KITCHEN FRIDGE WILL BE INSTALLED IN THE CABINET OPENING ON THE LEFT SIDE OF THE OUTDOOR KITCHEN ASSEMBLY.

CAREFULLY SLIDE FRIDGE INTO CABINET OPENING MAKING SURE THAT THE ELECTRICAL CORD IS ROUTED THROUGH HOLE IN BACK PANEL.

NOTE: IF FRIDGE IS NOT IN UPRIGHT POSTION, PLEASE LET SIT FOR 24 HRS BEFORE PLUGGING INTO RECEPTACLE. FRIDGE CANNOT BE CONNECTED TO ELECTRICAL ENCLOSURE ATTACHED TO OUTDOOR STRUCTURE.

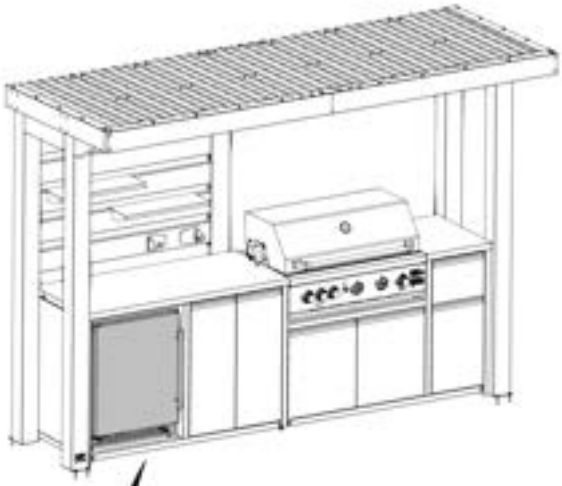

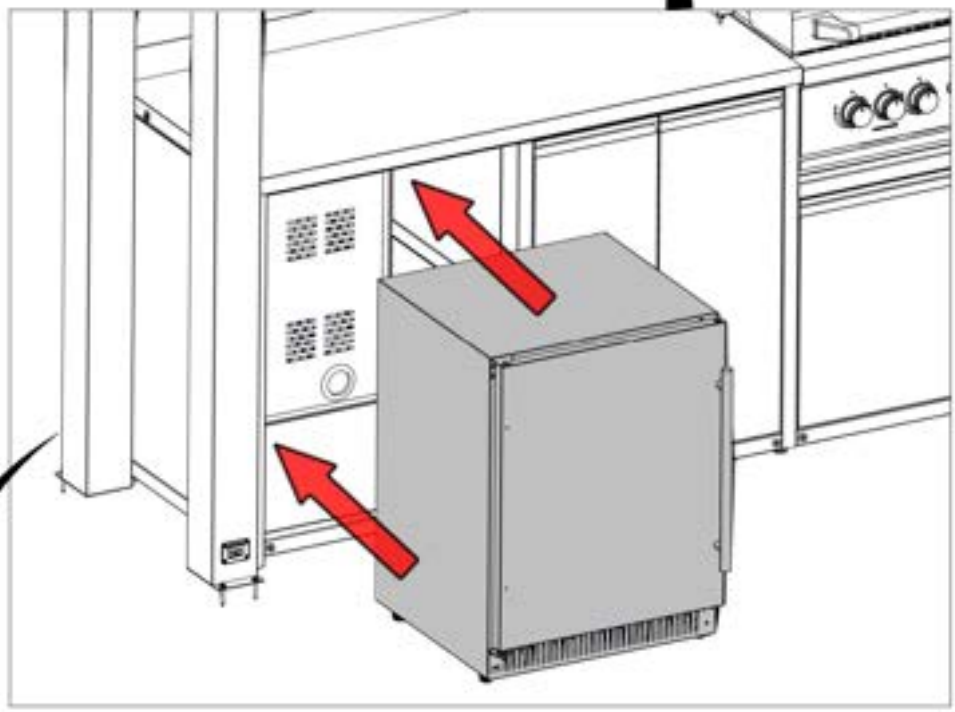

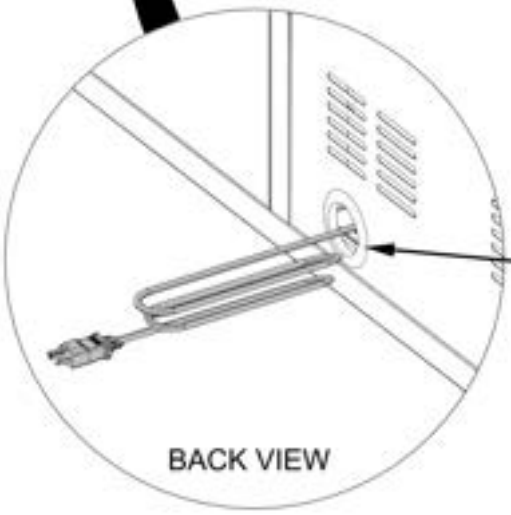

NOTE: ROUTE FRIDGE ELECTRICAL CORD THROUGH HOLE IN BACK PANEL

FRIDGE INSTALLATION INSTRUCTION

ALIGN FEET ON FRIDGE UNIT SO THAT IT IS LEVEL AND DOES NOT TILT.

THREAD FEET CLOCKWISE TO EXTEND THEM AND COUNTERCLOCKWISE TO SHORTEN. REPEAT THIS FOR ALL FOUR FRIDGE LEGS AS NEEDED TO LEVEL.

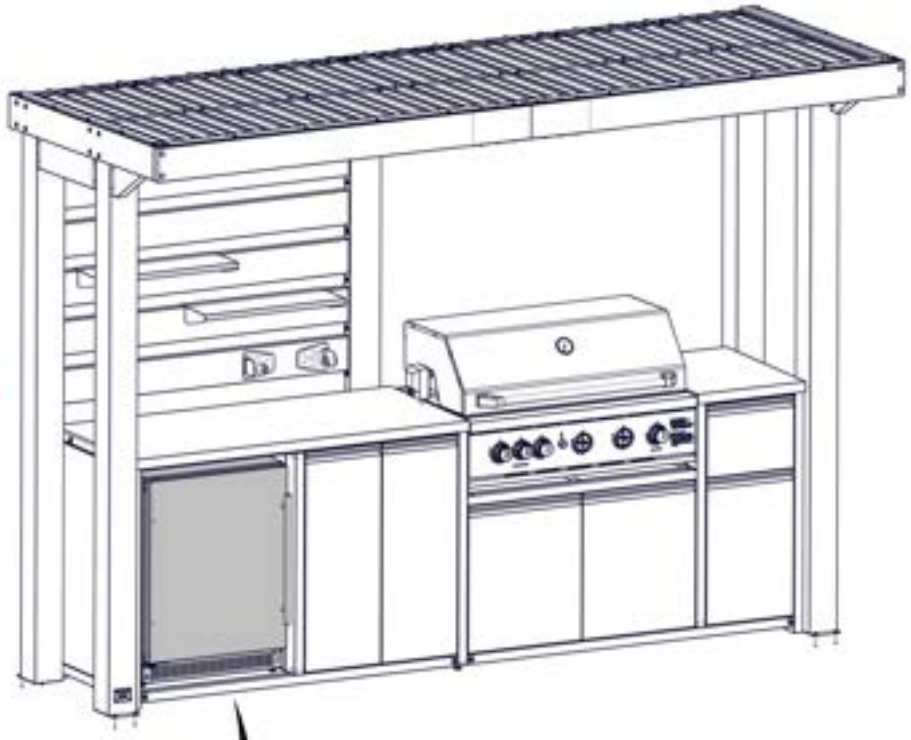

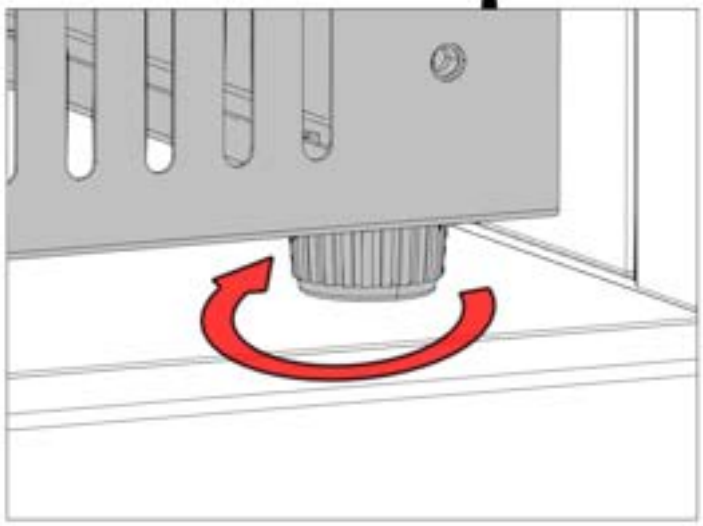

REMOVE ANY PROTECTIVE FILM REMAINING ON STAINLESS STEEL COUNTERTOPS

COUNTERTOP AND APPLIANCE CARE INSTRUCTIONS:

- WIPE DOWN COUNTERTOPS AND GRILL USING A DAMP MICROFIBER CLOTH TO REMOVE DUST AND SMUDGES. WIPE ALONG THE GRAIN OF THE STAINLESS STEEL TO PREVENT SCRATCHING.

- TO DEEP CLEAN USE A COMMERCIAL STAINLESS STEEL CLEANER AND MICROFIBER CLOTH WIPING ALONG THE GRAIN DIRECTION TO PREVENT SCRATCHES.

- SCRATCHES WILL HAPPEN TO COUNTERTOPS OVERTIME. DO NOT USE SANDPAPER OR STEEL WOOL AGAINST STAINLESS STEEL AS THIS WILL MAKE IT WORSE.

- IF YOU DENT OR DING THE SURFACE OF THE COUNTERTOP, APPLY PRESSURIZED AIR OR ICE TO THE SURFACE UNTIL COLD AND THEN HEAT USING A HAIR DRYER TO POP DENT OUT.

PowerPort™

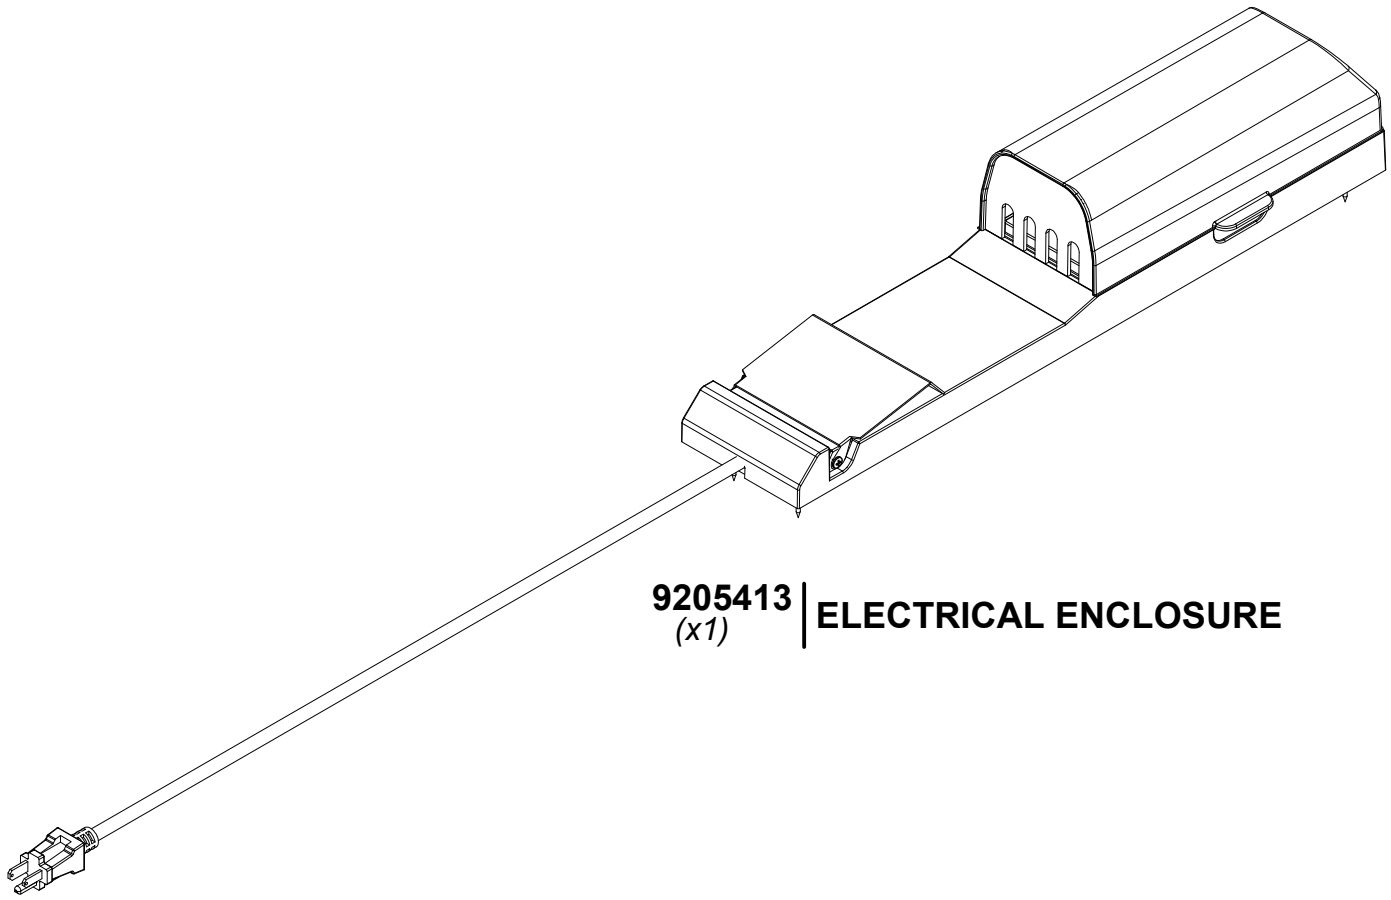

9205413 *(x1)* | **ELECTRICAL ENCLOSURE**

FOR POWERPORT INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE POWERPORT KIT. INSTALL ON ANY EXTERIOR POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.

DO NOT INSTALL POWERPORT ON MIDDLE POST OF ASSEMBLY, AS THIS WILL BE TOO CLOSE TO THE GRILL.