

Manufactured by: **Backyard Discovery** 3305 Airport Drive, Pittsburg, KS 66762 800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476 J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

# 201 12 Kingsport Carport MODEL #: 2306189B





Cancer and Reproductive Harm www.P65Warnings.ca.gov



#### Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order replacement parts Para obtener instrucciones en español, visite www.backyarddiscovery.com



**EASY STEP-BY-STEP 3D INTERACTIVE INSTRUCTIONS** DOWNLOAD THE FREE APP




## OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

# It is critically important that you start with square and level footings or concrete pad to attach your structure


- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines


Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.

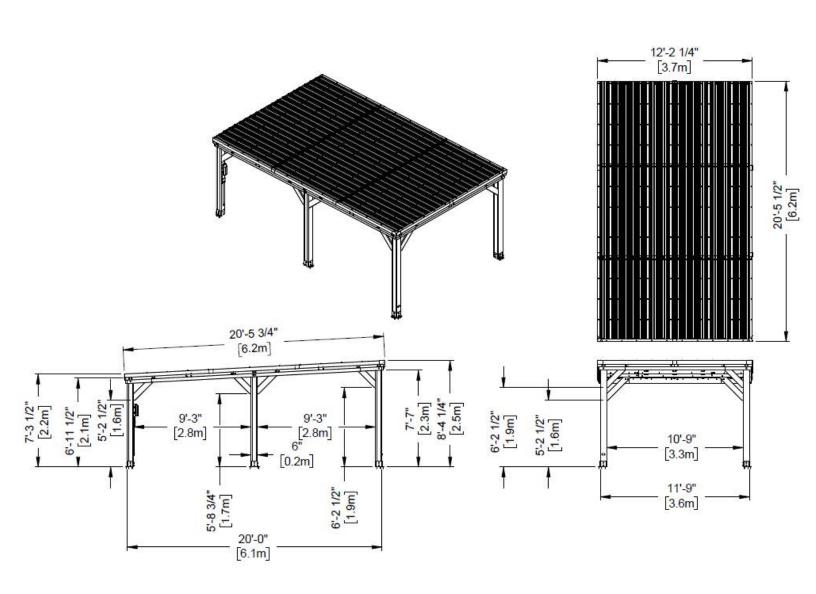

## **OWNER'S MANUAL - ANCHORING LAYOUT**

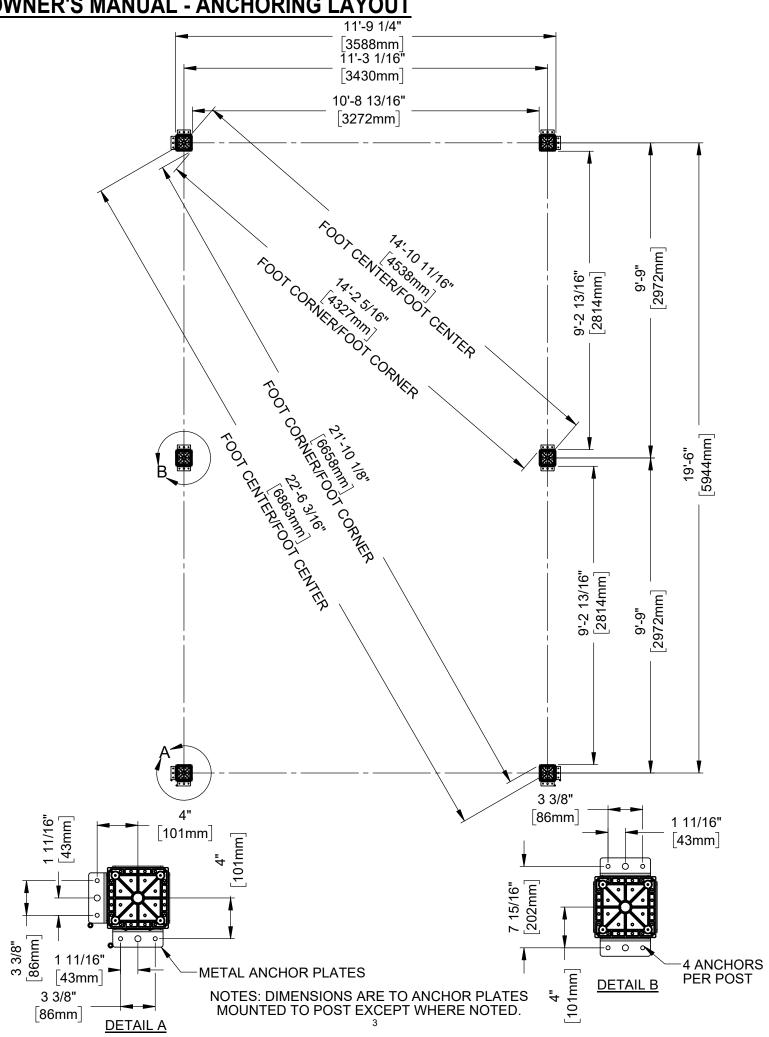

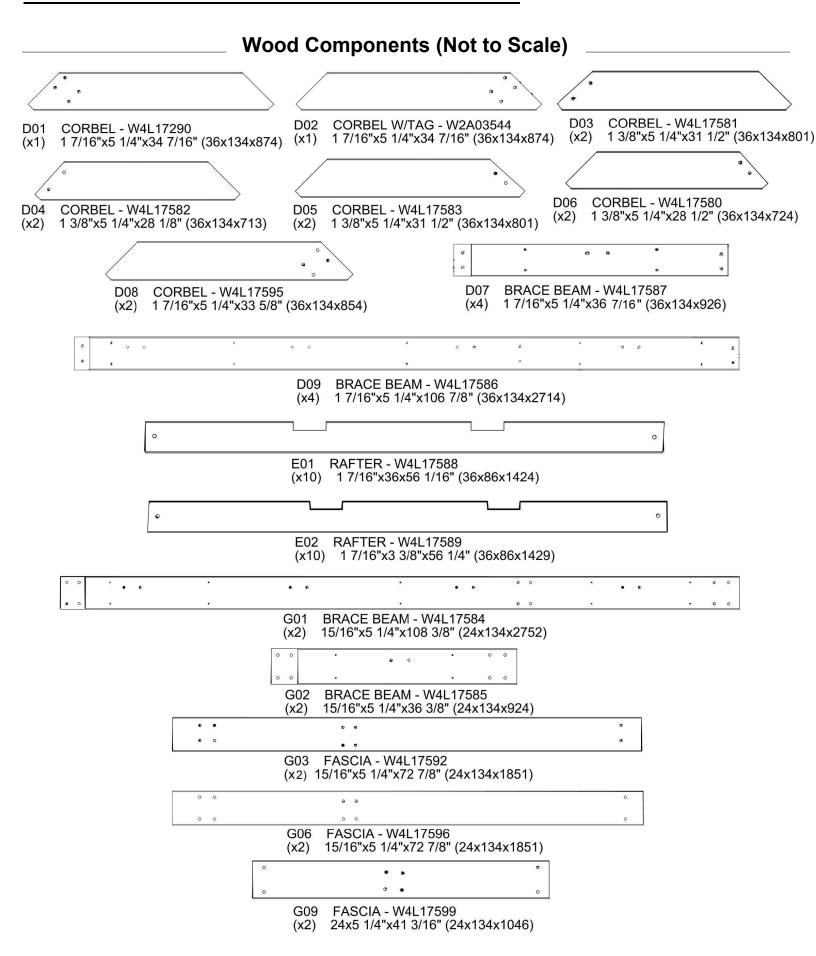


		nts (Not to Scal	e)
0	<b>e</b>		0 0
ď	G10 FASCIA - W4L (x2) 15/16"x5 1/4"x	.17600 100 1/8" (24x134x2543)	
• •	0 9		0
	G11 FASCIA - W4L (x2) 15/16"x5 1/4"x	.17601 102 1/8" (24x134x2594)	~ 1
• • •			• • •
	G13 BRACE BEAM	- W4L17602 108 3/8" (24x134x2752)	
:	:	:	
	H02 PURLIN - W	x98 3/16" (24x86x2494)	
* * .		* * .	
0 0 *	* 0 0	*	• 0 0
J02 JOIST ASSE		BLY - W2A03718 00" (36x214x2540)	。。 。。 BLY - W2A03720
	16"X24 9/16" (36x214x624)		"x24 9/16" (36x214x624)
a . *	α ο •		
		EMBLY - W2A03721 /16"X100" (36x214x2540)	
0 0 0	0 0 0	0 0	° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° ° °
(x1) 1 7/16"x8 7/1	MBLY - W2A03722  6"x28 7/16" (36x214x722)	(x1) 1 7/1	ST ASSEMBLY - W2A03724 16"x8 7/16"x28 7/16" (36x214x
0 0	• •	• •	• • •
	J06 JOIST ASSE (x1) 1 7/16"x8 7/	EMBLY - W2A03723 16"x94 7/8" (36x214x241	10)
0 0 0	. 0 0	0 0	• 0 0 0 0


J08 JOIST ASSEMBLY - W2A03725 (x1) 1 7/16"x8 7/16"x28 7/16" (36x214x722)

J10 JOIST ASSEMBLY - W2A03727 (x1) 1 7/16"x8 7/16"x28 7/16" (36x214x722)

• 0	o.			•	• 0	·		0 0		• 0
0 0	•									0 0
					SEMBLY - W					
<b>9</b> 9				7/16"x8 7	7/16"x94 7/8	s" (36x 214x2	410)	9 0		
a o		-			•	•		• o	* *	0
	-	000 militar (m. 1860)			SEMBLY - 1 7/16"X97 11	W2A03728 I/16" (36x214	lx2481)			_
	·:		• •							
•										
					SEMBLY - 1 7/16"x97 1	W2A03729 1/16" (36x214	4x2481)			
	0 0	8	0 0				0		0 0	
J13 (x1)		SSEMBLY - V 3 7/16"x26 7/3				J14 (x1)			BLY - W2A( 426 7/8" (3	
	•	o	g	•	•	•		•	•	
J15 (x4)	CLEAT - 15/16"x2	W4L17604 3/8"x48 1/8"	(24x60x1	222)		J16 C (x4) 1	LEAT - W4 5/16"x2 3/	4L17605 8"x53 15/10	6" (24x60x13	370)
								*		C
				G 5						C
			P01 (x1)		W2A03712 3 1/2" (152x	152x2502)				
			P02 (x1)		W2A03714 8 1/2" (152x	152x2502)		•		
<u> </u>			. , ,		•	•	6			0
• •									• 0	0
			P03 (x2)		W2A03713 2 5/16" (152	x152x2344)				
۰	•								• • •	
			P05 (x1)		W2A03716 1/4" (152x15	52x2190)				
a	0		-0.		-		v		0 0	
L	367		P06		W2A03717 1/4" (152x1	52v2190)	21	O.		

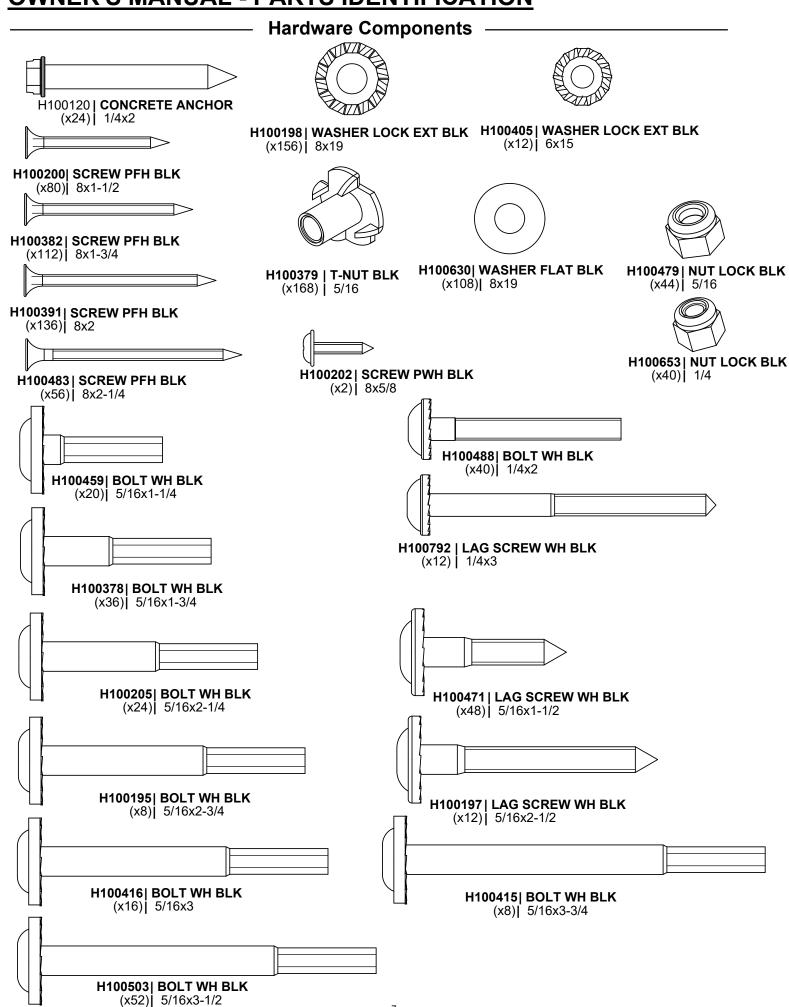


7

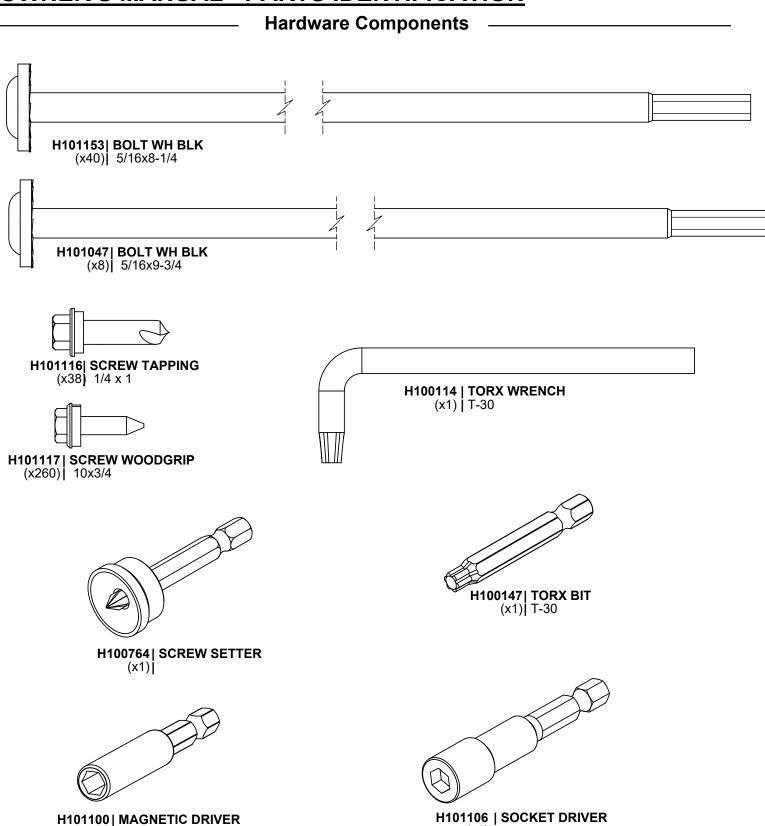

(x1)

(x1)

#### **Accessory Components (Not to Scale)**

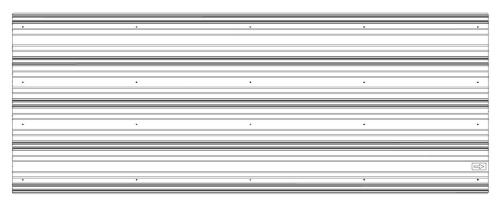

0

A4M00978 POST PLATE (x12)

A4M02960 29GA SHEETING (x10)



0

A4M00977 POST ANCHORING (x12) PLATE



A4M02961 29GA SHEETING (x5)



A4M02736

(x1)



A4M02735 CORNER SPLICE TRIM RH (x1)



9205413 ELECTRICAL ENCLOSURE (x1)



A100241 ID TAG (x1)

(x2)



CORNER SPLICE TRIM LH

A6P00308 6x6 POST FOOT (x6)





A4M02734 EDGE TRIM SPLICE (x5)




A4M02794 DRIP EDGE SPLICE (x1)


## **Accessory Components (Not to Scale)**



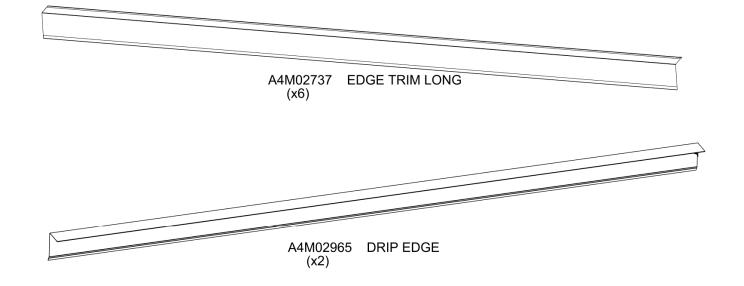

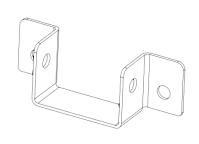

A4M01480 JOIST HANGER 90° (x4)

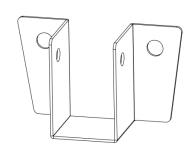

A4M01787 RAFTER BRACKET (x40)

## PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

#### **WOOD PARTS:**

- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room the wood pieces can take up a significant amount of space.

#### NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.




#### HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.



# PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED

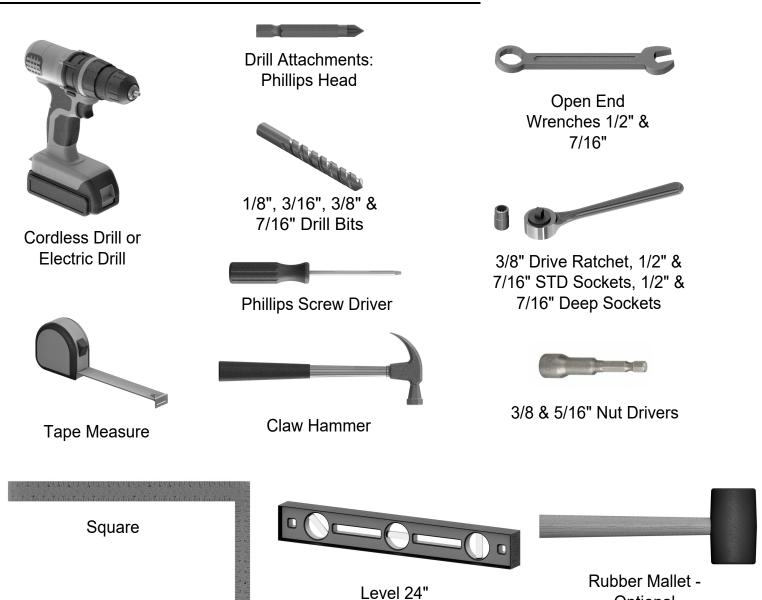

Optional

## PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.

- 1. Printed Assembly Manual included with your set
- 2. BILT APP 3D interactive instructions
- 3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)



#### **STEP 1 - REAR ASSEMBLY**


P05 POST - W2A03716 (x1) 6"x6"x86 1/4" (152x152x2190)


P06 POST - W2A03717 (x1) 6"x6"x86 1/4" (152x152x2190)

1	Qty	PART NUMBER	DESCRIPTION
	8	H100200	SCREW PFH 8x1 1/2 BLK



A6P00308 6x6 POST FOOT (x2)

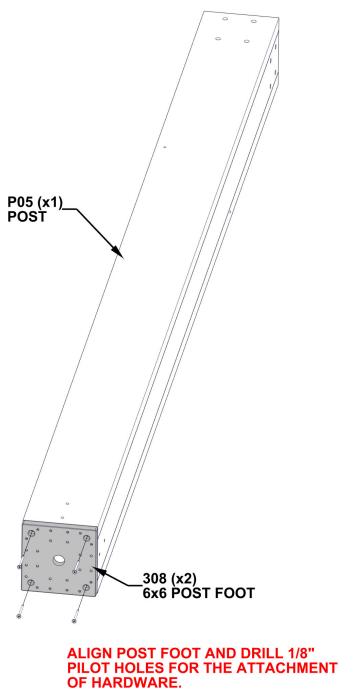

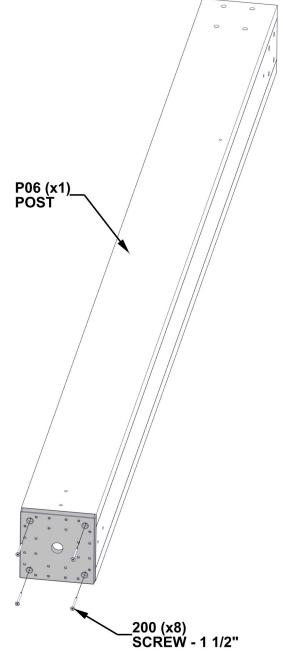


## **STEP 2 - REAR ASSEMBLY**

Qty	PART NUMBER	DESCRIPTION
6	H100379	T-NUT 5/16 BLK

• 0	9	• •	•	• 0	•	0 0	e	• 0
0 0	*		۰		•		•	0 0

J09 JOIST ASSEMBLY - W2A03726 (x1) 1 7/16"X8 7/16"X100" (36x214x2540)

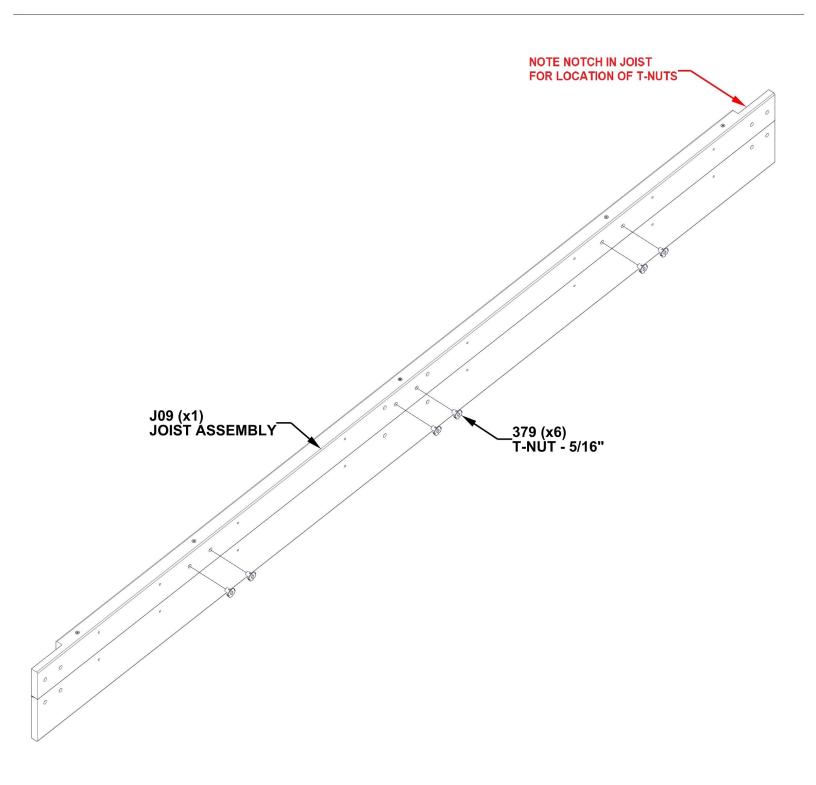

#### **STEP 3 - REAR ASSEMBLY**


8	Qty	PART NUMBER	DESCRIPTION
	4	H100379	T-NUT 5/16 BLK

0 0	o	0 0	0 0
0 0	0		0 0
0			

J10 JOIST ASSEMBLY - W2A03727 (x1) 1 7/16"x8 7/16"x28 7/16" (36x214x722)

0	0	0	a	0	0
0			۰	0	0
				(	0

J08 JOIST ASSEMBLY - W2A03725 (x1) 1 7/16"x8 7/16"x28 7/16" (36x214x722)

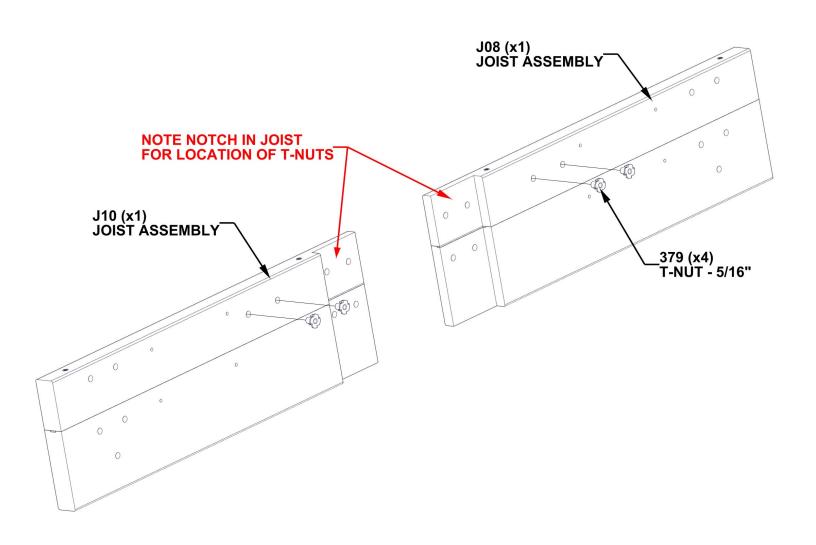

#### **STEP 4A - REAR ASSEMBLY**



J09 JOIST ASSEMBLY WITH T-NUTS FROM STEP 2




J10 JOIST ASEMBLY WITH T-NUTS FROM STEP 3



J08 JOIST ASSEMBLY WITH T-NUTS FROM STEP 3


#### **NOTES:**

- POSITION JOIST ASSEMBLIES AS SHOWN BELOW.
- ALL T-NUTS WILL BE ON THE SAME SIDE AND IN-LINE.

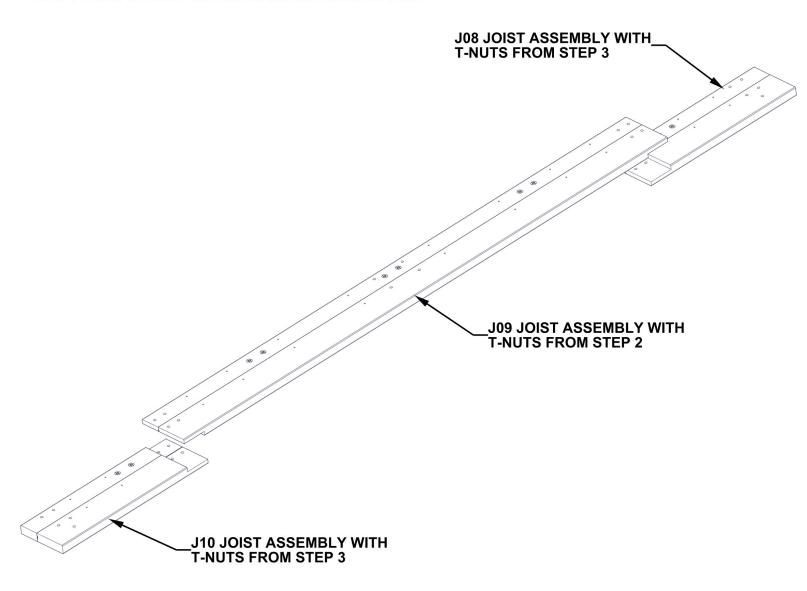


#### **STEP 4B - REAR ASSEMBLY**


Qty	PART NUMBER	DESCRIPTION
12	H100198	WASHER LOCK EXT 8x19
4	H100205	BOLT WH 5/16x2 1/4 BLK
12	H100379	TNUT-5/16" BLK
8	H100503	BOLT WH 5/16x3 1/2 BLK





G06 FASCIA - W4L17596 (x2) 15/16"x5 1/4"x72 7/8" (24x134x1851)

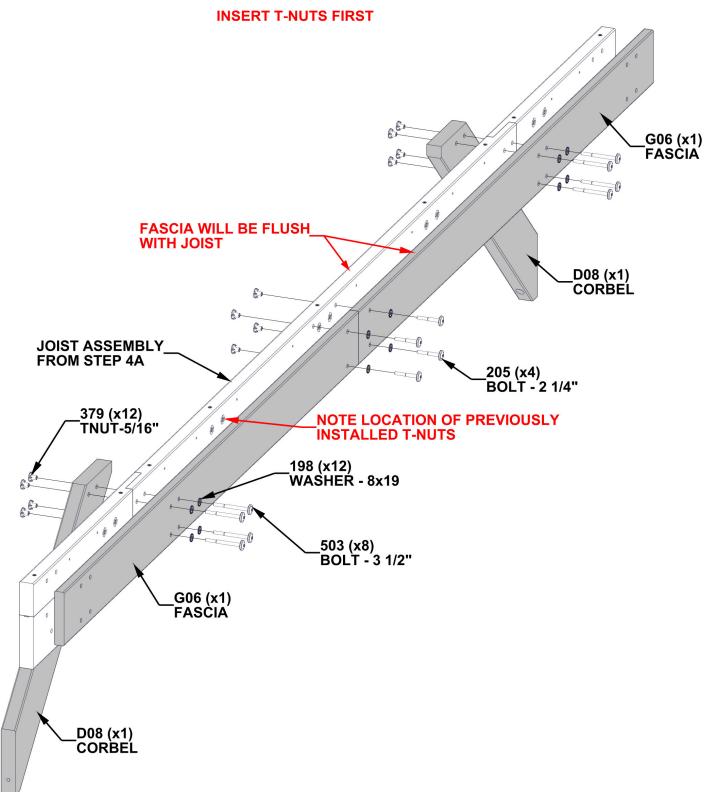


## **STEP 4C - REAR ASSEMBLY**



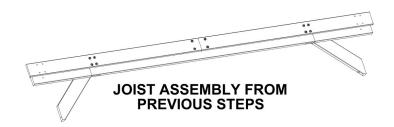


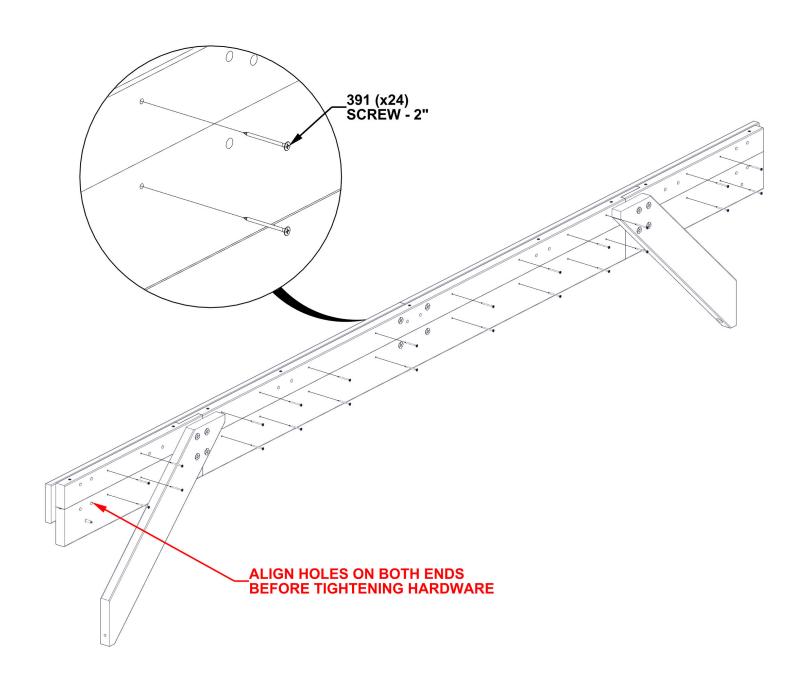

#### **STEP 5A - REAR ASSEMBLY**

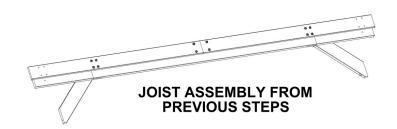


Qty	PART NUMBER	DESCRIPTION
2	H100197	LAG SCREW WH 5/16x2 1/2 BLK
10	H100198	WASHER LOCK EXT 8x19
8	H100379	TNUT-5/16" BLK
2	H100405	WASHER LOCK EXT 6x15
2	H100792	LAG SCREW WH 1/4x3 BLK
8	H101153	BOLT WH 5/16x8 1/4 BLK

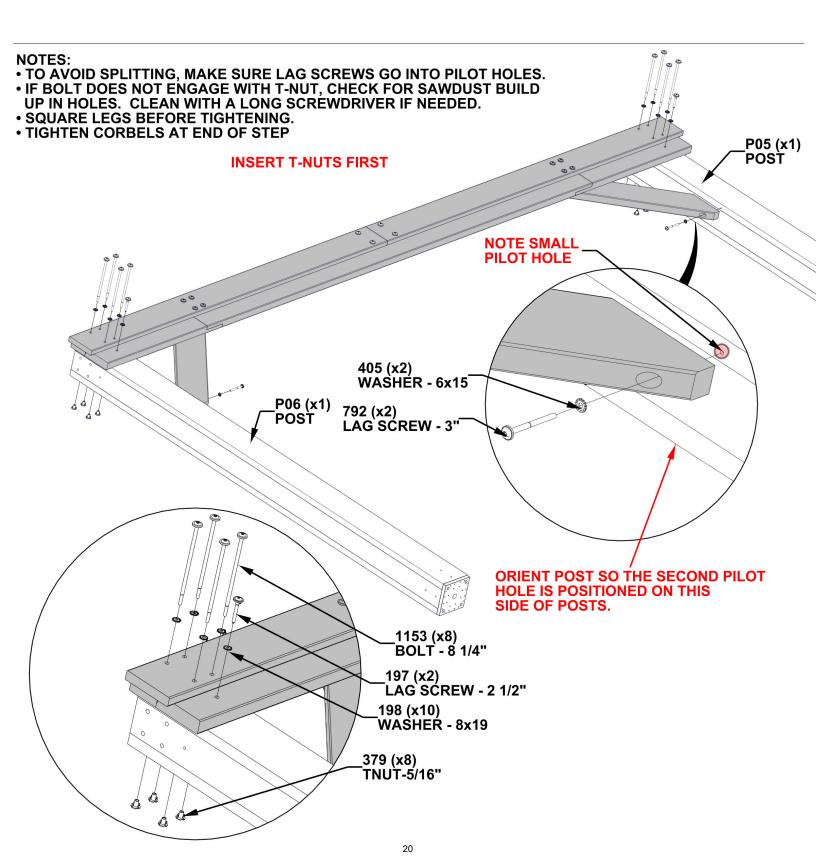

## **STEP 5B - REAR ASSEMBLY**

Qty	PART NUMBER	DESCRIPTION
8	H100379	TNUT-5/16" BLK

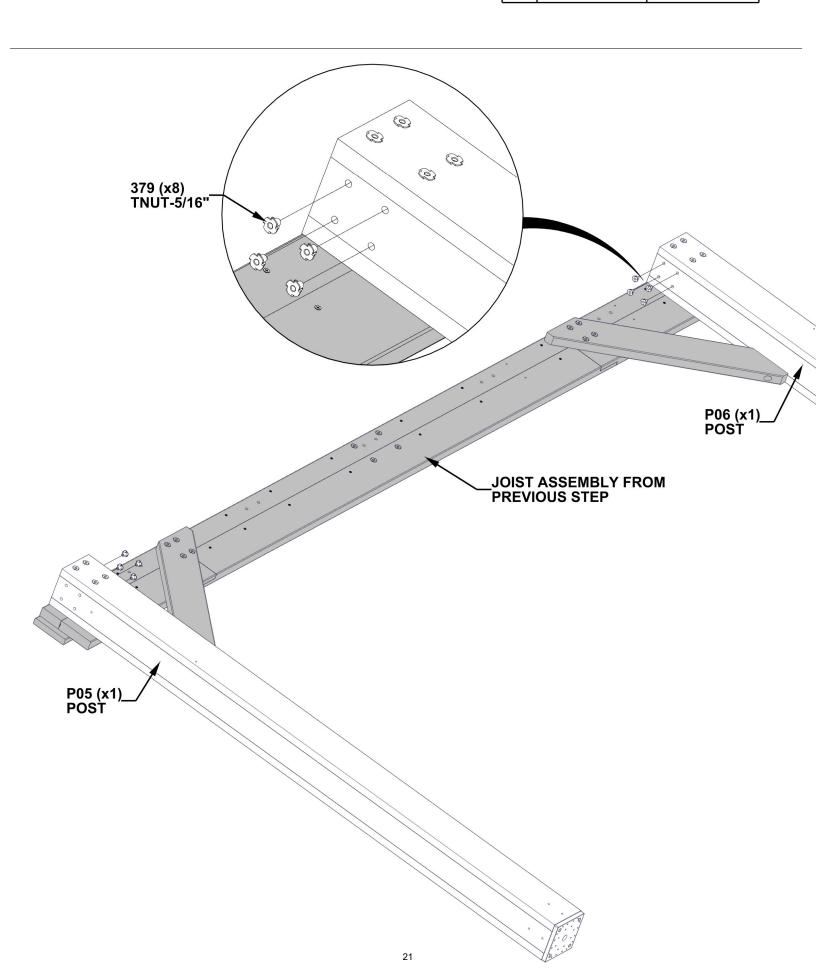


## **SET REAR ASSEMBLY TO THE SIDE**


## **STEP 6 - CENTER ASSEMBLY**

QtyPART NUMBERDESCRIPTION8H100200SCREW PFH 8x1 1/2 BLK

. . . .

P03 POST - W2A03713 (x2) 6"x6"x92 5/16" (152x152x2344)



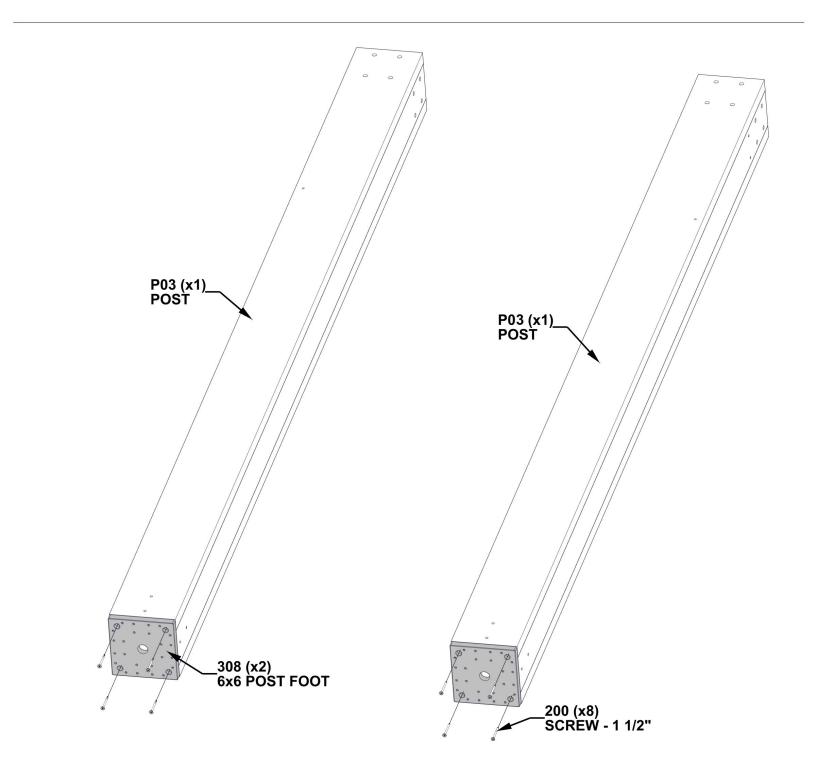

#### **STEP 7A - CENTER ASSEMBLY**

0	0	•	0 0	۰	•	0
0	o			•	•	a

G13 BRACE BEAM - W4L17603

(x2) 15/16"x5 1/4"x36 3/8" (24x134x924)


Qty	PART NUMBER	RT NUMBER DESCRIPTION			
8	H100198	WASHER LOCK EXT 8x19			
8	H100378	BOLT WH 5/16x1 3/4 BLK			
8	H100379	T-NUT 5/16 BLK			

0 0	• • •	•	o (#	0	a •	0 0	• • •	
0 0						0.0		

G12 BRACE BEAM - W4L17602

(x2) 15/16"x5 1/4"x108 3/8" (24x134x2752)

#### HAND TIGHTEN ONLY

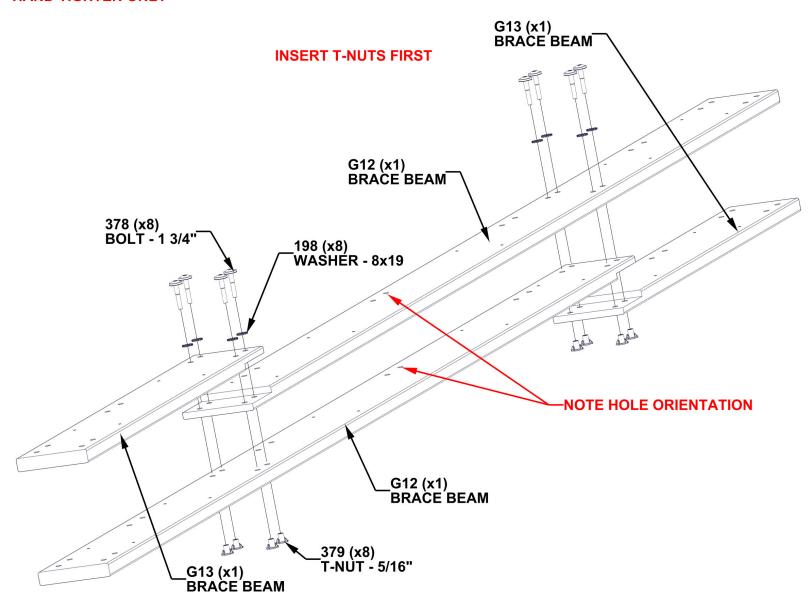


#### **STEP 7B - CENTER ASSEMBLY**

Qty	PART NUMBER	DESCRIPTION
28	H100200	SCREW PFH 8x1 1/2 BLK



**BEAM ASSEMBLY FROM PREVIOUS STEP** 

#### NOTES:

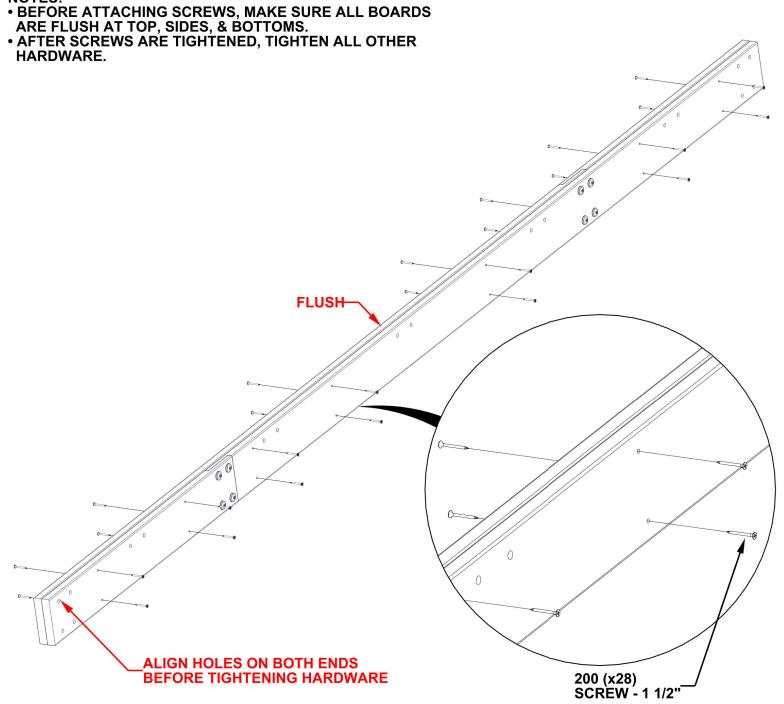


## **STEP 7C - CENTER ASSEMBLY**

Qty	PART NUMBER	DESCRIPTION
10	H100379	T-NUT 5/16 BLK



BEAM ASSEMBLY FROM PREVIOUS STEPS

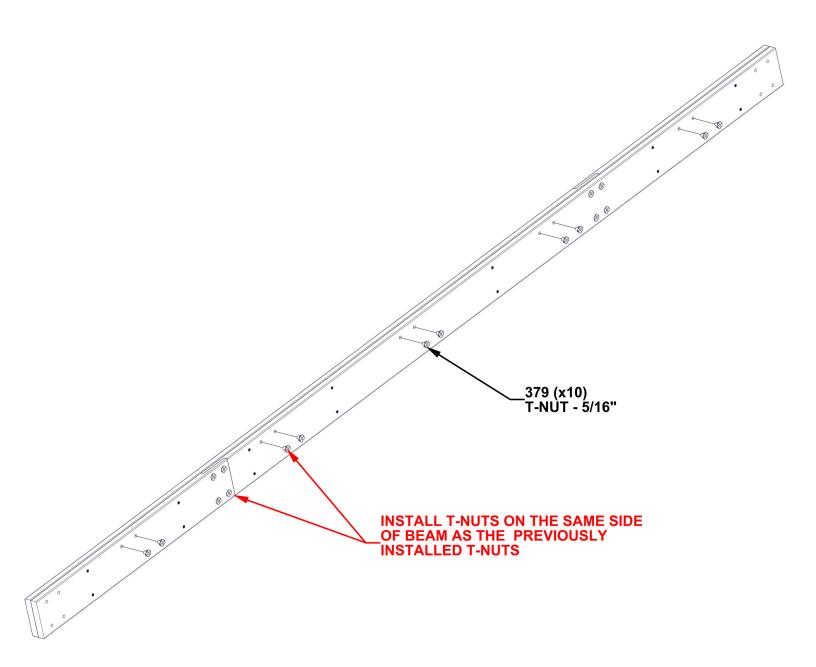

#### **STEP 8A - CENTER ASSEMBLY**

0	٥	,	۰	0	•	0	0
0	0					0	0

G02 BRACE BEAM - W4L17585

(x2) 15/16"x5 1/4"x36 3/8" (24x134x924)


Qty	PART NUMBER	R DESCRIPTION			
8	H100198	WASHER LOCK EXT 8x19			
8	H100378	BOLT WH 5/16x1 3/4 BLK			
8	H100379	T-NUT 5/16 BLK			

c	0	 • 1	• 0	•	• •	0 0		•	0	0
,	0	•				0 0	•		0	0

G01 BRACE BEAM - W4L17584

(x2) 15/16"x5 1/4"x108 3/8" (24x134x2752)

#### HAND TIGHTEN ONLY

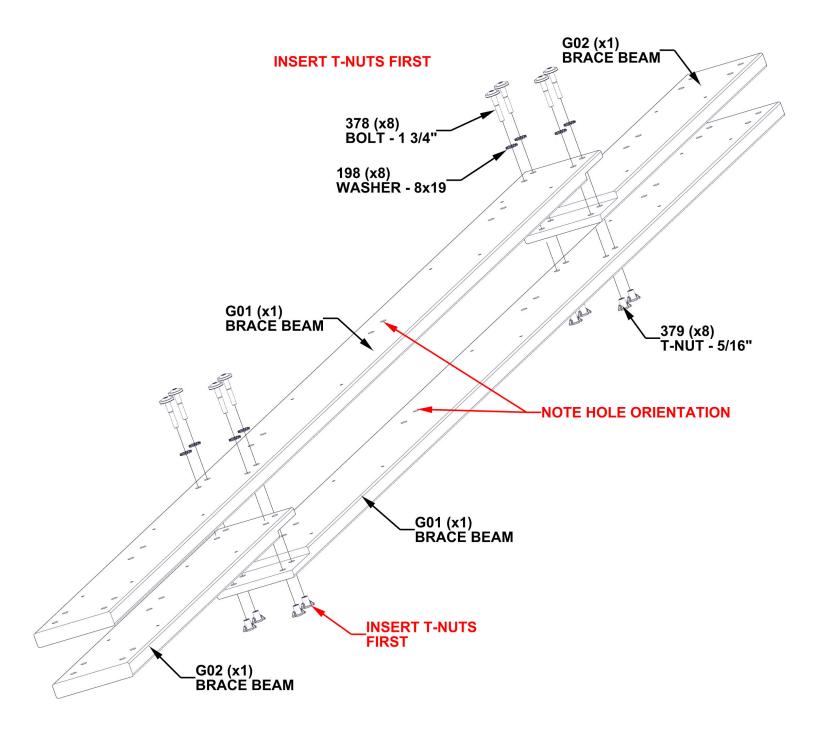


#### **STEP 8B - CENTER ASSEMBLY**

Qt	у	PART NUMBER	DESCRIPTION
28		H100200	SCREW PFH 8x1 1/2 BLK



#### NOTES:


- BEFORE ATTACHING SCREWS, MAKE SURE ALL BOARDS ARE FLUSH AT TOP, SIDES, & BOTTOMS.
- AFTER SCREWS ARE TIGHTENED, TIGHTEN ALL OTHER HARDWARE

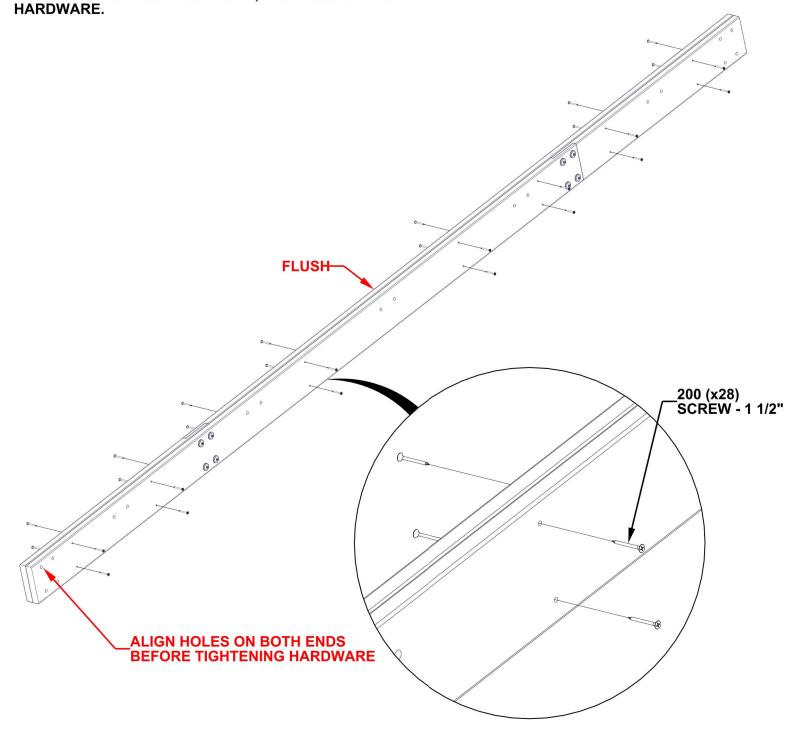

## **STEP 8C - CENTER ASSEMBLY**

Qty	PART NUMBER	DESCRIPTION
10	H100379	T-NUT 5/16 BLK




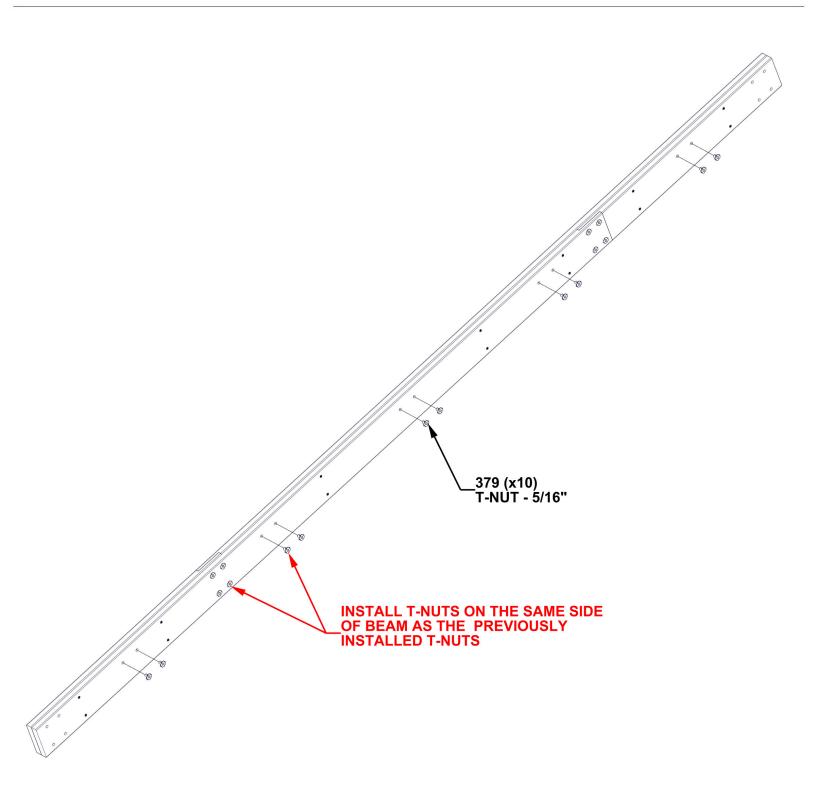

#### **STEP 9 - CENTER ASSEMBLY**

Qty	PART NUMBER	MBER DESCRIPTION				
8	H100198	WASHER LOCK EXT 8x19				
16	H100379	TNUT-5/16" BLK				
8	H101047	BOLT WH 5/16x9 3/4 BLK				

#### **BEAM ASSEMBLIES FROM** PREVIOUS STEPS (X2)

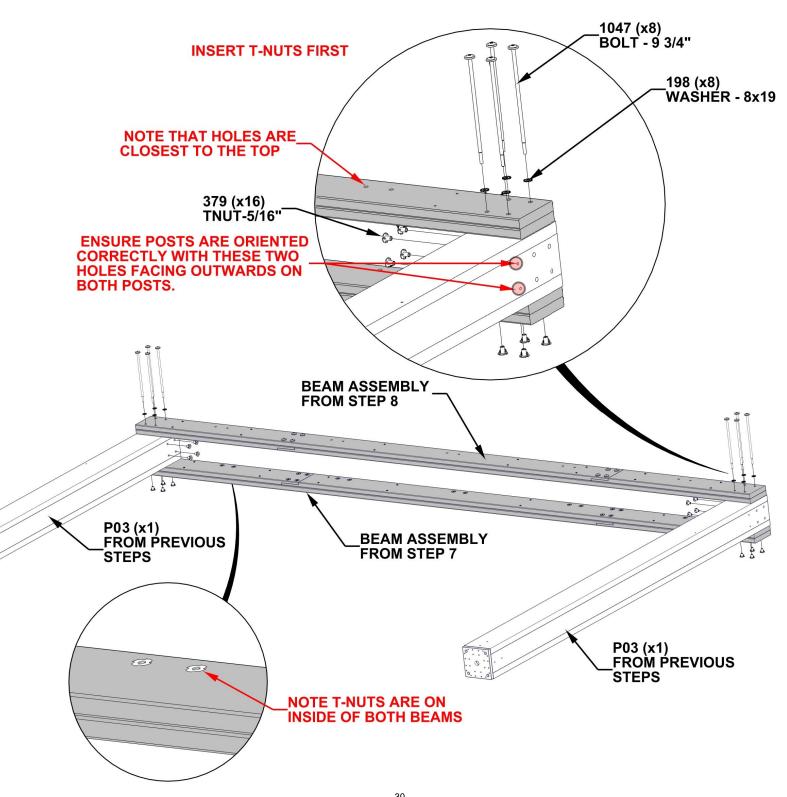

## **SET CENTER ASSEMBLY TO THE SIDE**

#### STEP 10 - LEFT JOIST ASSEMBLY

Qty	Part Number	Description
4	H100379	TNUT-5/16" BLK

0		٠. ٠				. :		0
•	2.50	0 0		•	•	0 *	•	
6								1


•	0	7	•	, 0 0
ø	9		•	0 0
d				

J12 JOIST ASSEMBLY - W2A03729 (x1) 1 7/16"x8 7/16"x97 11/16" (36x214x2481)

J13 JOIST ASSEMBLY - W2A03730 (x1) 1 7/16"x8 7/16"x26 7/8" (36x214x682)


#### NOTES:

- POSITION JOIST ASSEMBLIES AS SHOWN BELOW.
- ADD T-NUTS IN THE TOP TWO HOLES AS SHOWN.
- NOTE NOTCH DIRECTION IN ASSEMBLIES FOR T-NUT LOCATION.

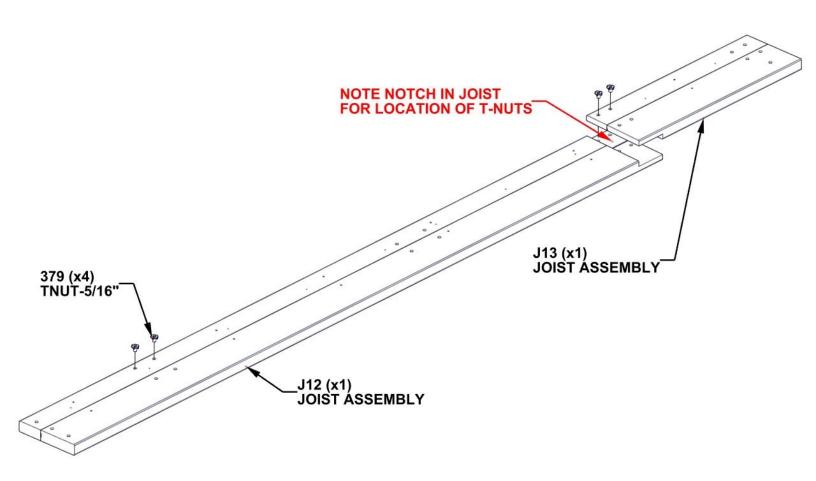

#### STEP 11A - LEFT JOIST ASSEMBLY


Qty	Part Number	Description		
4	H100198	WASHER LOCK EXT 8x19		
4	H100205	BOLT WH 5/16x2 1/4 BLK		

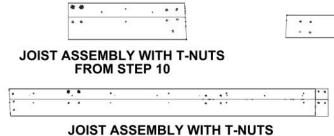

G11 FASCIA - W4L17601

(x1) 15/16"x5 1/4"x102 1/8" (24x134x2594)

G09 FASCIA - W4L17599

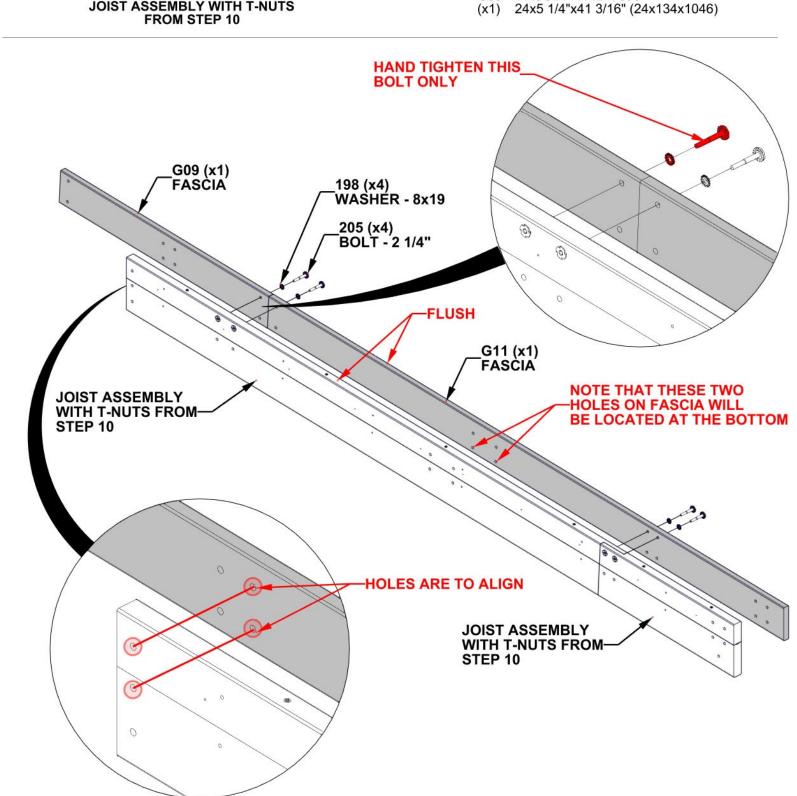

#### STEP 11B - LEFT JOIST ASSEMBLY




Qty	Part Number	Description			
4	H100198	WASHER LOCK EXT 8x19			
4	H100379	TNUT-5/16" BLK			
4	H100503	BOLT WH 5/16x3 1/2 BLK			

D04 CORBEL - W4L17582 1 3/8"x5 1/4"x28 1/8" (36x134x713) (x1) 1 3/8"x5 1/4"x31 1/2" (36x134x801) (x1)

D05 CORBEL - W4L17583

• •	• •		• •	• 0	,
	0.60.00	0 0		• •	

#### **BEAM ASSEMBLY WITH FASCIA** FROM PREVIOUS STEP

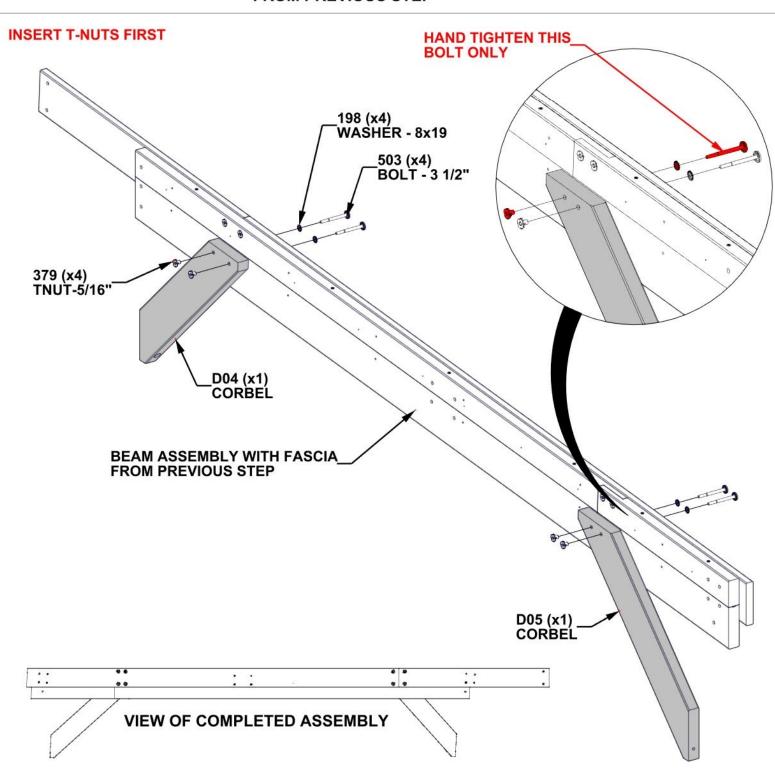

## SET LEFT JOIST ASSEMBLY TO THE SIDE

#### **STEP 12 - RIGHT JOIST ASSEMBLY**


Qty	Part Number	Description
4	H100379	TNUT-5/16" BLK

0	a		: .		٠			٠.	
•	0		• •	•		<i>™</i>	<b>e</b> 0	*	

J11 JOIST ASSEMBLY - W2A03728 (x1) 36X8 7/16"X97 11/16" (36x214x2481) J14 JOIST ASSEMBLY - W2A03731 (x1) 1 7/16"x8 7/16"x26 7/8" (36x214x682)


#### NOTES:

- POSITION JOIST ASSEMBLIES AS SHOWN BELOW.
- ADD T-NUTS IN THE TOP TWO HOLES AS SHOWN.
- NOTE NOTCH DIRECTION IN ASSEMBLIES FOR T-NUT LOCATION.

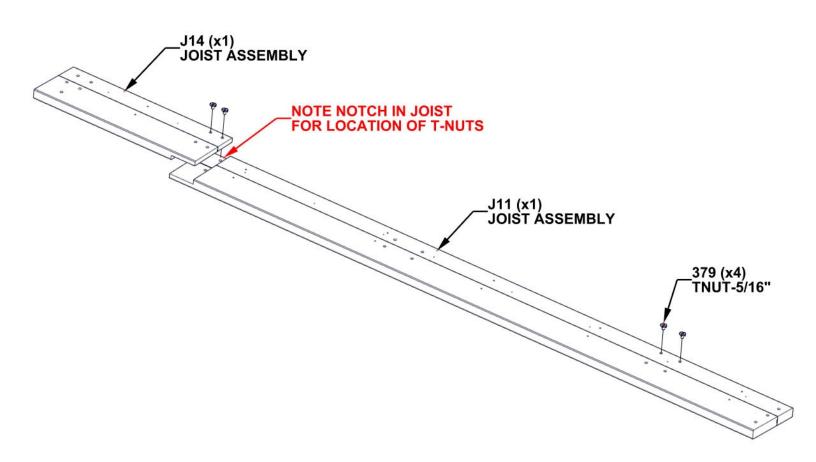

#### STEP 13A - RIGHT JOIST ASSEMBLY

Qty	Part Number	Description
4	H100198	WASHER LOCK EXT 8x19
4	H100205	BOLT WH 5/16x2 1/4 BLK



JOIST ASSEMBLY WITH T-NUTS
FROM STEP 12

G11 FASCIA - W4L17601


(x1) 15/16"x5 1/4"x102 1/8" (24x134x2594)



JOIST ASSEMBLY WITH T-NUTS FROM STEP 12



G09 FASCIA - W4L17599 (x1) 24x5 1/4"x41 3/16" (24x134x1046)

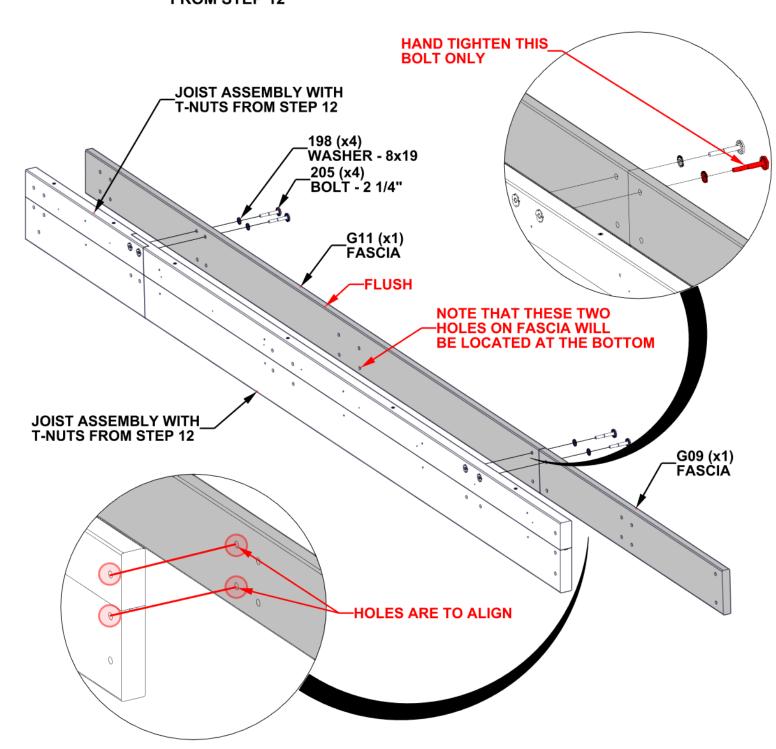


#### STEP 13B - RIGHT JOIST ASSEMBLY




Qty	Part Number	Description
4	H100198	WASHER LOCK EXT 8x19
4	H100379	TNUT-5/16" BLK
4	H100503	BOLT WH 5/16x3 1/2 BLK

D04 CORBEL - W4L17582 (x1)

CORBEL - W4L17582 D05 CORBEL - W4L17583 1 3/8"x5 1/4"x28 1/8" (36x134x713) (x1) 1 3/8"x5 1/4"x31 1/2" (36x134x801)



#### **BEAM ASSEMBLY WITH FASCIA** FROM PREVIOUS STEP

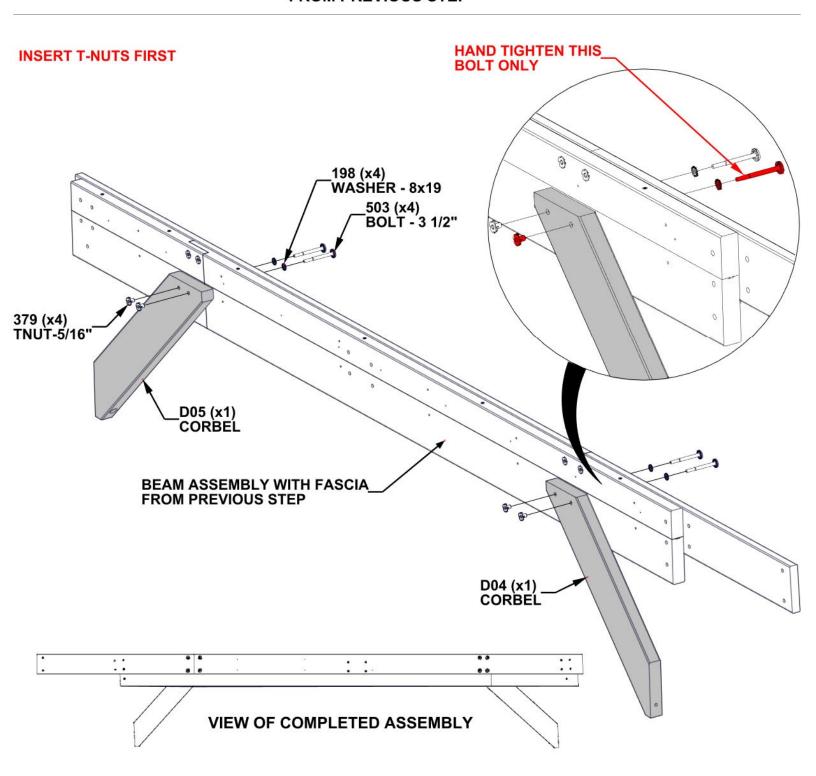


# SET RIGHT JOIST ASSEMBLY TO THE SIDE

### STEP 14A - GAZEBO ASSEMBLY



REAR ASSEMBLY FROM PREVIOUS STEPS

CENTER ASSEMBLY FROM PREVIOUS STEPS

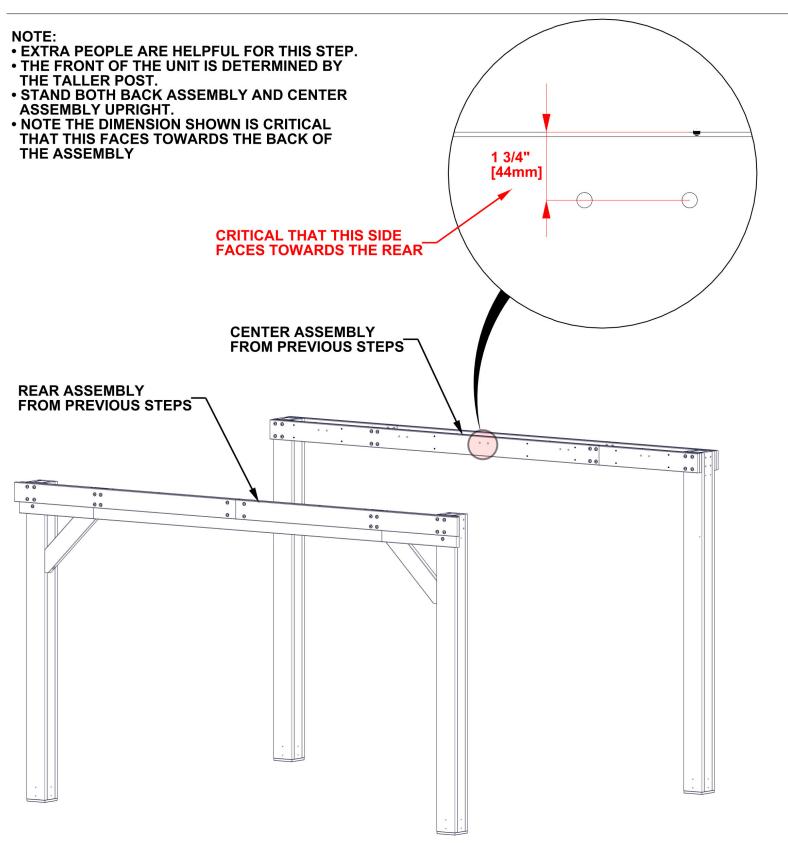

#### STEP 14B - GAZEBO ASSEMBLY




**PREVIOUS STEPS** 

REAR ASSEBILY FROM CENTER ASSEMBLY FROM PREVIOUS STEPS

Qty	Part Number	Description
2	H100197	LAG SCREW WH 5/16x2 1/2 BLK
8	H100198	WASHER LOCK EXT 8x19
2	H100405	WASHER LOCK EXT 6x15
2	H100792	LAG SCREW WH 1/4x3 BLK
6	H101153	BOLT WH 5/16v8 1/4 BLK




LEFT JOIST ASSEMBLY FROM **PREVIOUS STEPS** 

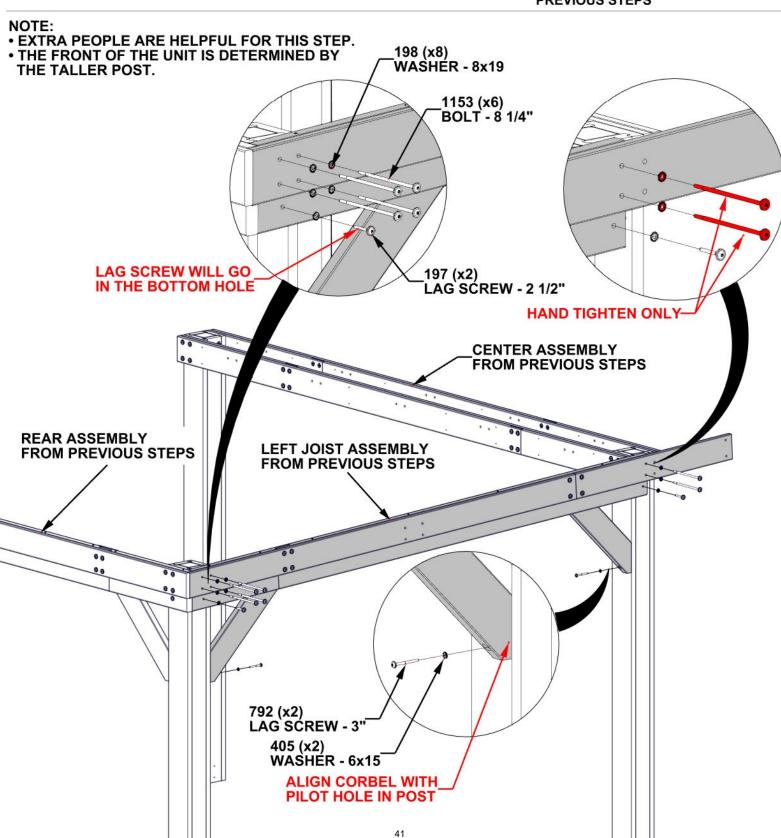

#### STEP 15 - GAZEBO ASSEMBLY



Qty	Part Number	Description
2	H100197	LAG SCREW WH 5/16x2 1/2 BLK
8	H100198	WASHER LOCK EXT 8x19
2	H100405	WASHER LOCK EXT 6x15
2	H100792	LAG SCREW WH 1/4x3 BLK
6	H101153	BOLT WH 5/16x8 1/4 BLK

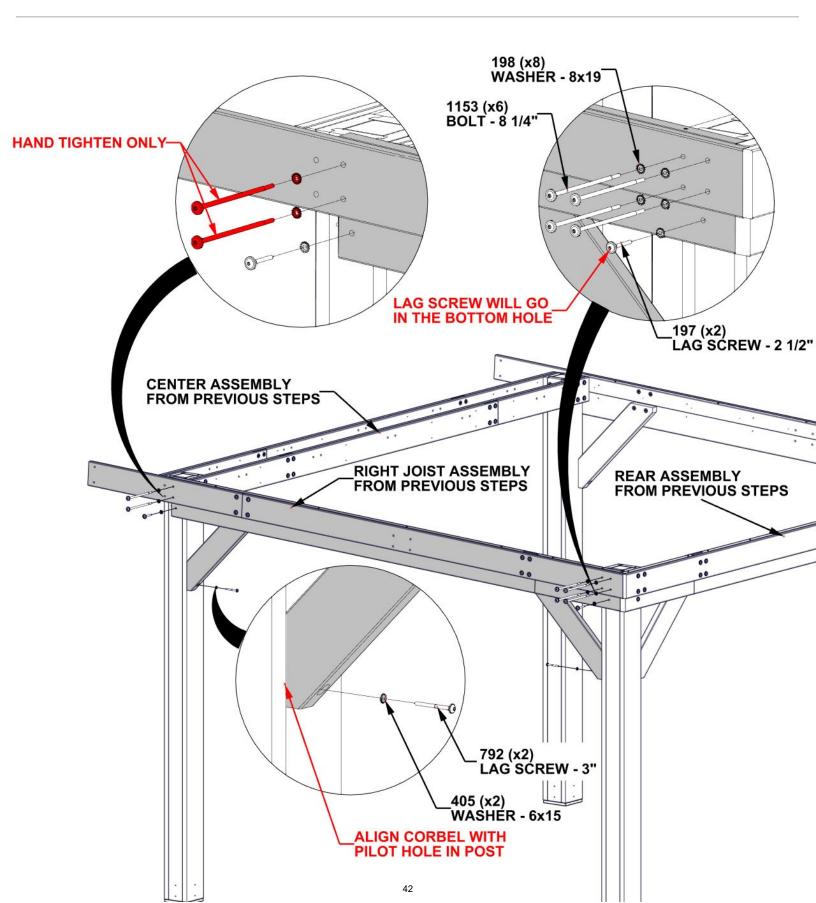

# **STEP 16 - FRONT ASSEMBLY**


QtyPART NUMBERDESCRIPTION8H100200SCREW PFH 8x1 1/2 BLK

P02 POST - W2A03714 (x1) 6"x6"x98 1/2" (152x152x2502)



A6P00308 6x6 POST FOOT (x2)

P01 POST - W2A03712 (x1) 6"x6"x98 1/2" (152x152x2502)

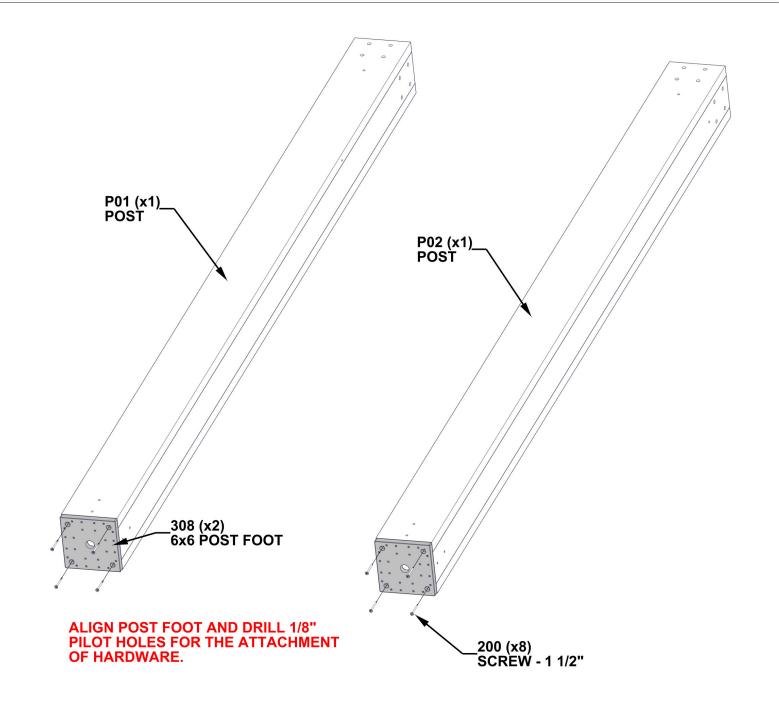


# **STEP 17 - FRONT ASSEMBLY**

Qty	PART NUMBER	DESCRIPTION
6	H100379	T-NUT 5/16 BLK

0 0	•	• •	1.0	0 •	•	0 •	0	0 0
0 0	۰		•				0	0 0
								1 1

J06 JOIST ASSEMBLY - W2A03723 (x1) 1 7/16"X8 7/16"X100" (36x214x2540)

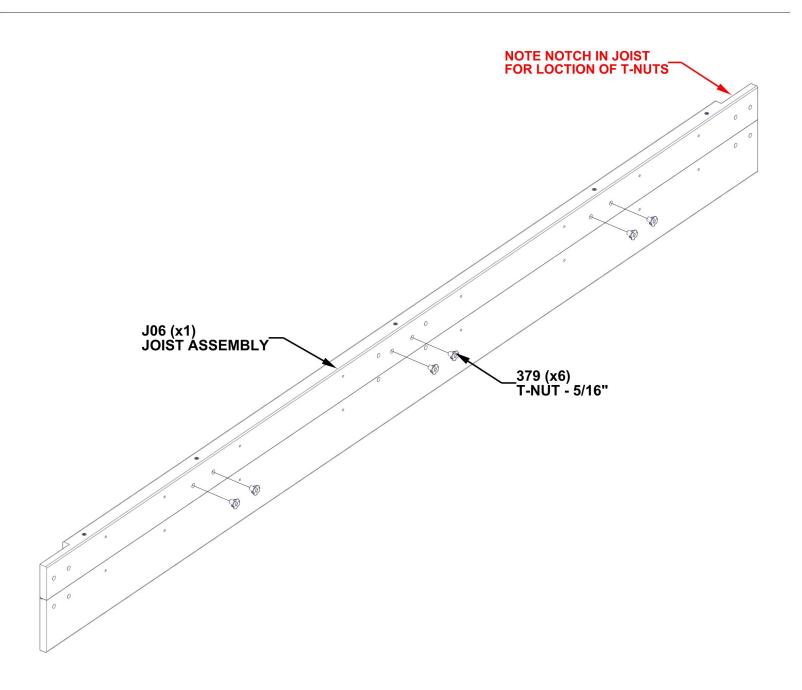

# **STEP 18 - FRONT ASSEMBLY**

Qty	PART NUMBER	DESCRIPTION
4	H100379	T-NUT 5/16 BLK

0	0	٥	0	0	o	O
0	•	٠			0	0
۰						


J05 JOIST ASSEMBLY - W2A03722 (x1) 1 7/16"x8 7/16"x28 7/16" (36x214x722)

0	0	0	۰	٥	٥	0
0	0			۰	۰	0
					•	

J07 JOIST ASSEMBLY - W2A03724 (x1) 1 7/16"x8 7/16"x28 7/16" (36x214x722)

#### NOTE:

• NOTCHES IN JOIST ASSEMBLIES FOR LOCATION OF T-NUTS.

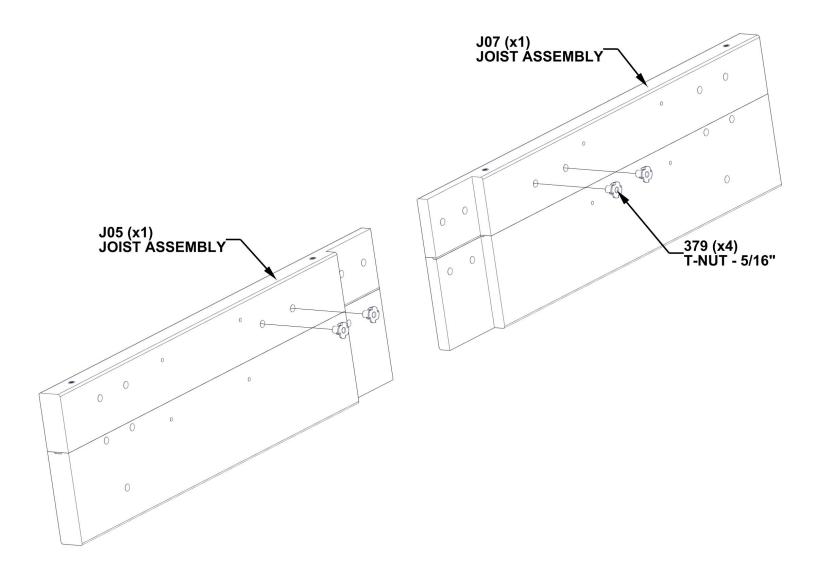

# **STEP 19A - FRONT ASSEMBLY**



J06 JOIST ASSEMBLY WITH T-NUTS FROM STEP 17




J05 JOIST ASSEMBLY WITH T-NUTS FROM STEP 18




J07 JOIST ASSEMBLY WITH T-NUTS FROM STEP 18

#### **NOTES:**

- POSITION JOIST ASSEMBLIES AS SHOWN BELOW.
- ALL T-NUTS WILL BE ON THE SAME SIDE AND IN LINE.

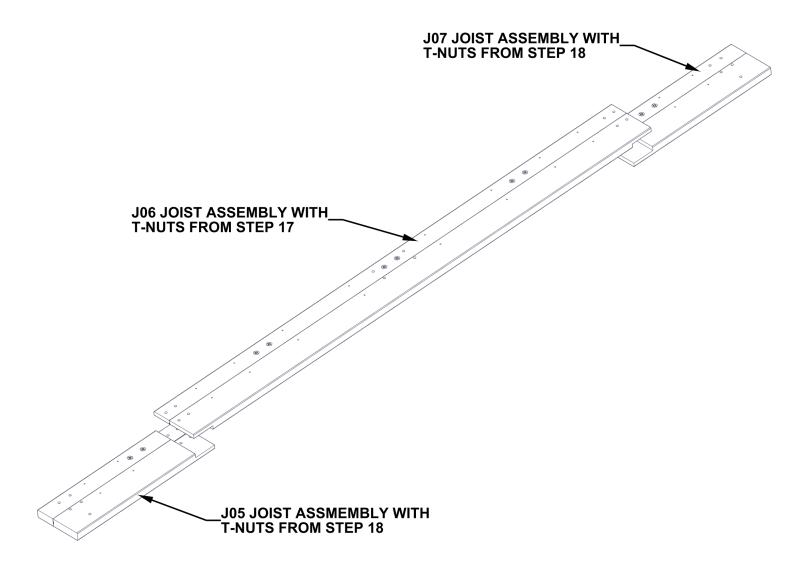

### **STEP 19B - FRONT ASSEMBLY**




(x2) 15/16"x5 1/4"x72 7/8" (24x134x1851)

D01 **CORBEL - W4L17290** 1 7/16"x5 1/4"x34 7/16" (36x134x874)


Qty	PART NUMBER	DESCRIPTION
12	H100198	WASHER LOCK EXT 8x19
4	H100205	BOLT WH 5/16x2 1/4 BLK
12	H100379	TNUT-5/16" BLK
8	H100503	BOLT WH 5/16x3 1/2 BLK




#### **INSERT T-NUTS FIRST**

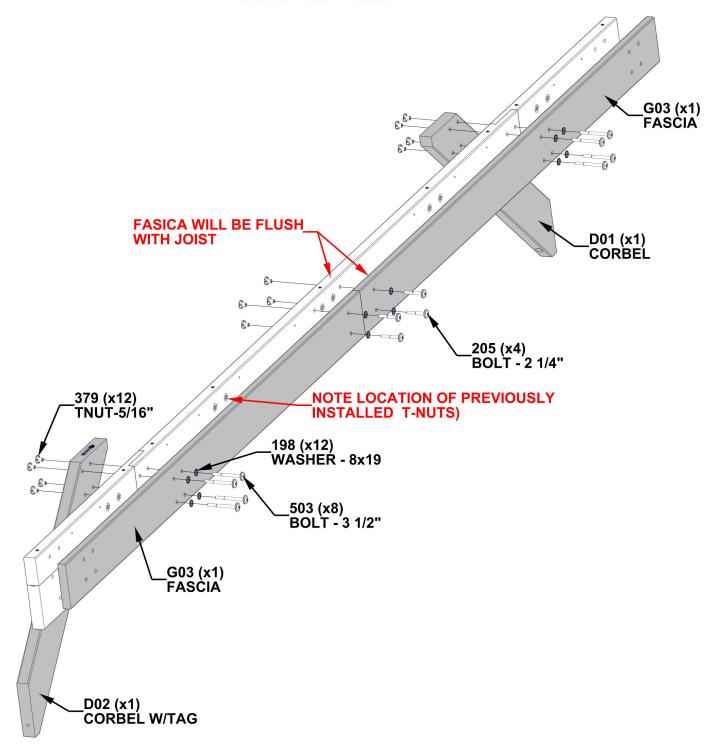


# **STEP 19C - FRONT ASSEMBLY**

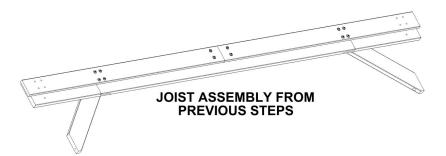


Qty	PART NUMBER	DESCRIPTION
24	H100391	SCREW PFH 8x2 BLK

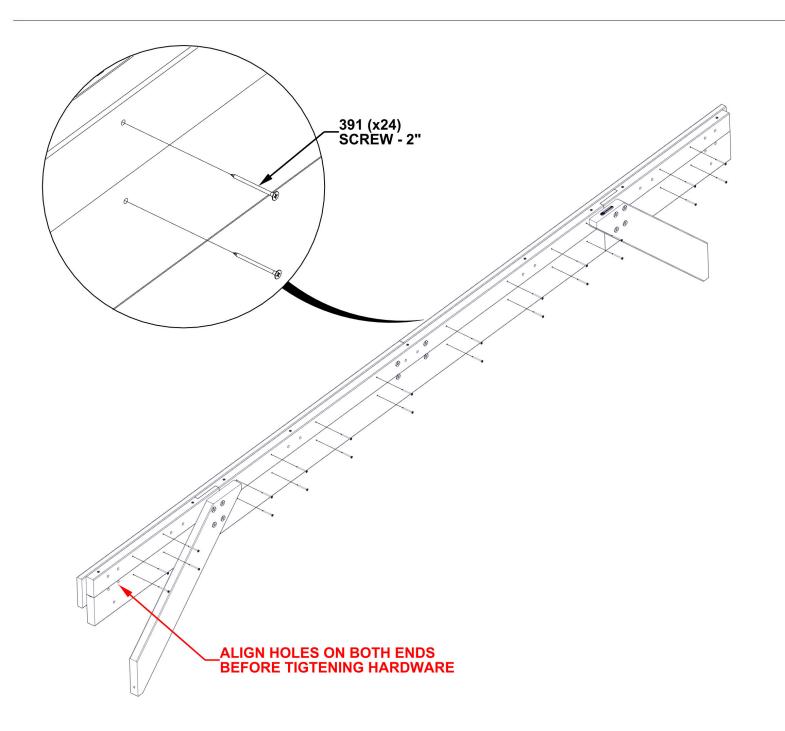

#### STEP 20A - FRONT ASSEMBLY

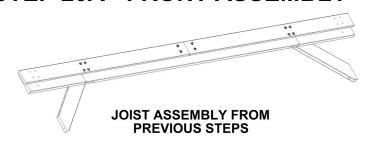


Qty	PART NUMBER	DESCRIPTION
2	H100197	LAG SCREW WH 5/16x2 1/2 BLK
10	H100198	WASHER LOCK EXT 8x19
8	H100379	TNUT-5/16" BLK
2	H100405	WASHER LOCK EXT 6x15
2	H100792	LAG SCREW WH 1/4x3 BLK
8	H101153	BOLT WH 5/16x8 1/4 BLK

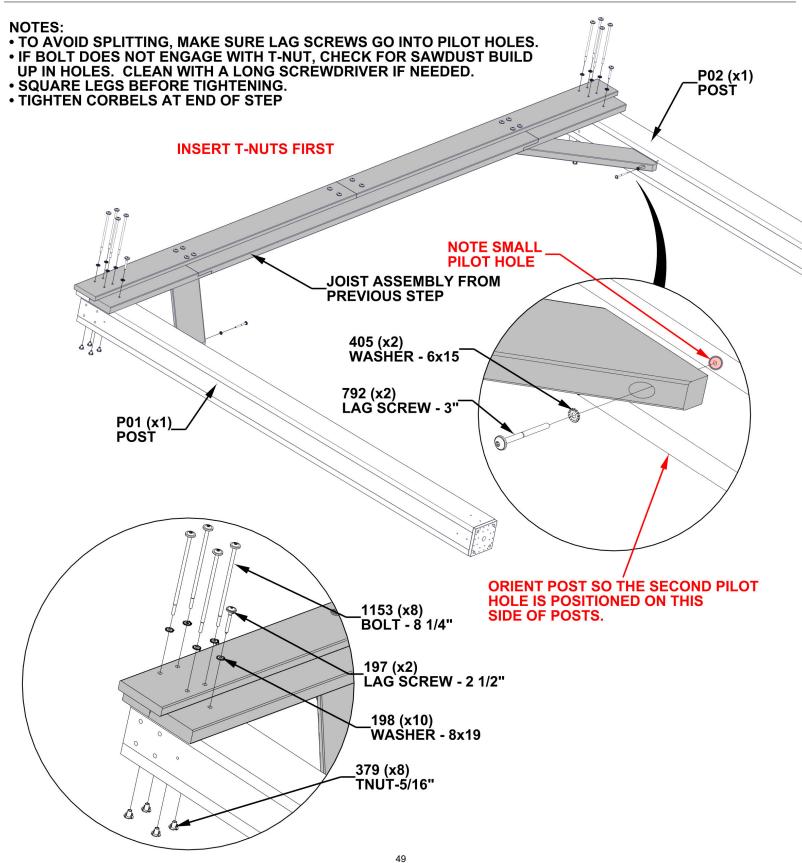

# **STEP 20B - FRONT ASSEMBLY**

Qty	PART NUMBER	DESCRIPTION
8	H100379	TNUT-5/16" BLK

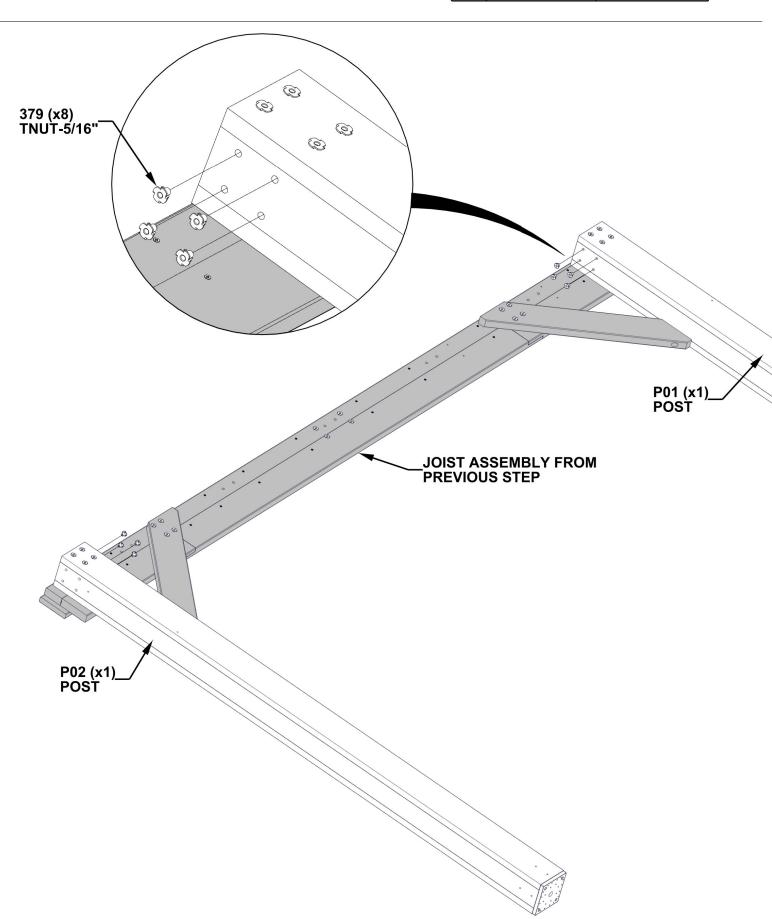

# **SET FRONT ASSEMBLY TO THE SIDE**

# STEP 21A - LEFT JOIST ASSEMBLY


QtyPart NumberDescription4H100379TNUT-5/16" BLK

J01 JOIST ASSEMBLY - W2A03718 (x1) 36X214X100" (36x214x2540)


J03 JOIST ASSEMBLY - W2A03720 (x1) 1 7/16"x8 7/16"x24 9/16" (36x214x624)

#### NOTES:

- POSITION JOIST ASSEMBLIES AS SHOWN BELOW.
- ADD T-NUTS IN THE TOP TWO HOLES AS SHOWN.
- NOTE NOTCH DIRECTION IN ASSEMBLIES FOR T-NUT LOCATION.

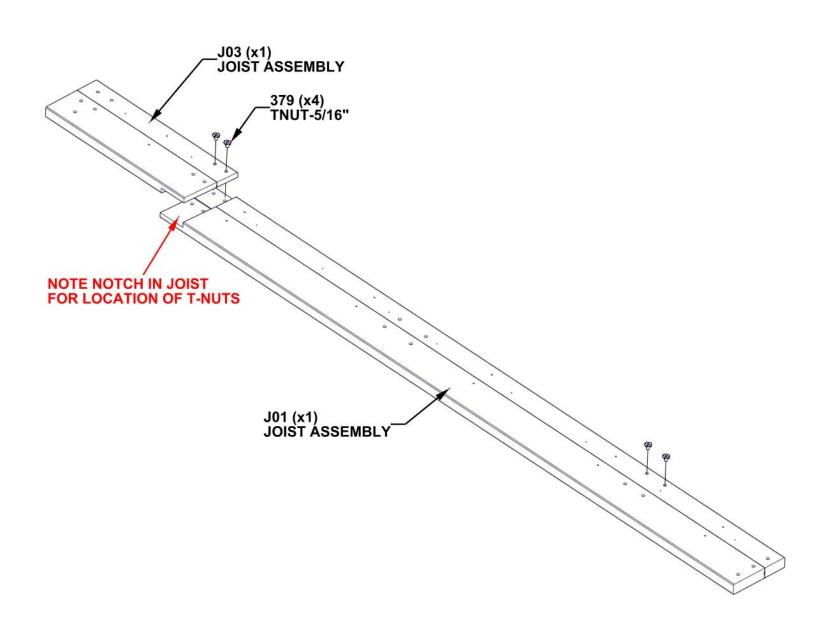


#### STEP 21B - LEFT JOIST ASSEMBLY




Qty	Part Number	Description
5	H100198	WASHER LOCK EXT 8x19
3	H100205	BOLT WH 5/16x2 1/4 BLK
2	H100379	TNUT-5/16" BLK
2	H100503	BOLT WH 5/16x3 1/2 BLK


G10 FASCIA - W4L17600 (x1) 15/16"x5 1/4"x100 1/8" (24x134x2543)

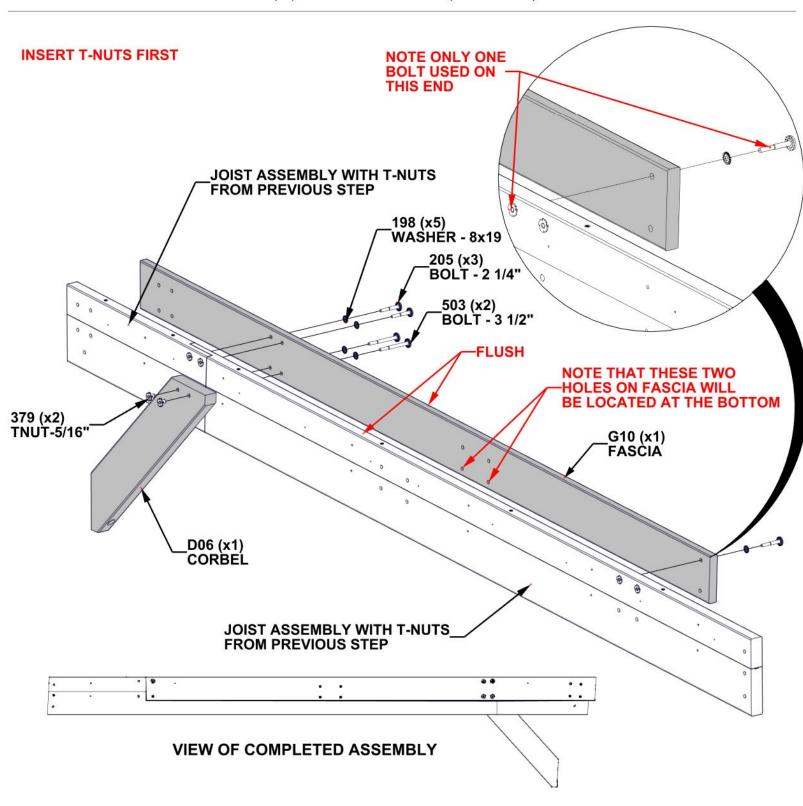


#### STEP 22A - GAZEBO ASSEMBLY



Qty	Part Number	Description
2	H100197	LAG SCREW WH 5/16x2 1/2 BLK
8	H100198	WASHER LOCK EXT 8x19
1	H100405	WASHER LOCK EXT 6x15
1	H100792	LAG SCREW WH 1/4x3 BLK
6	H101153	BOLT WH 5/16x8 1/4 BLK

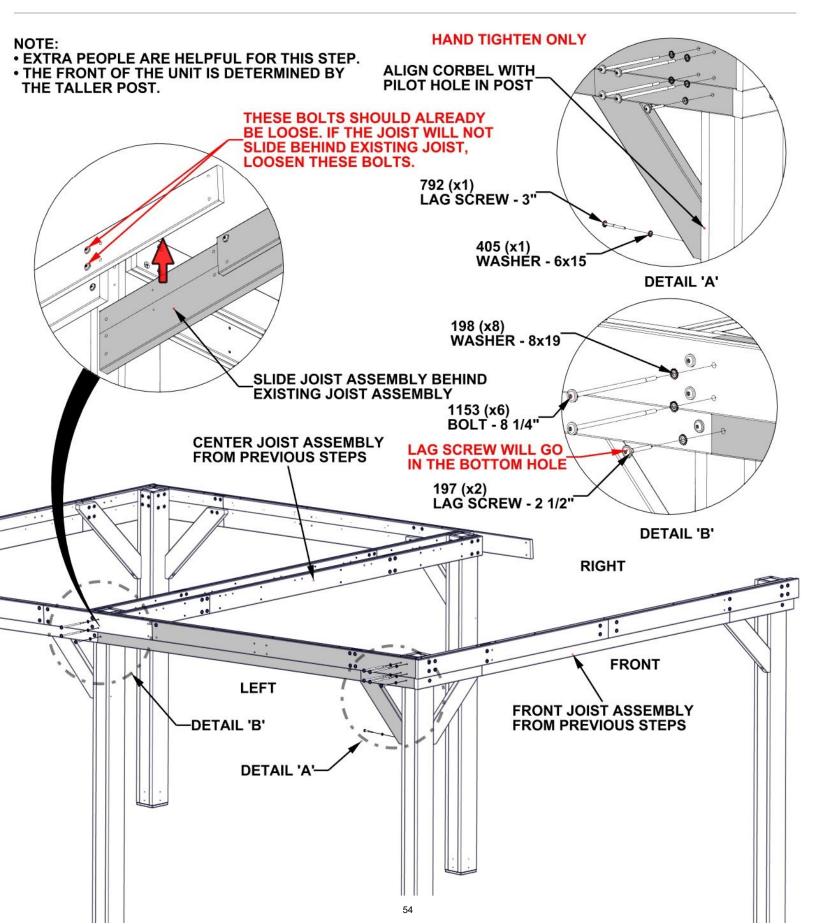


### STEP 22B - GAZEBO ASSEMBLY



Qty	Part Number	Description
3	H100198	WASHER LOCK EXT 8x19
1	H100205	BOLT WH 5/16x2 1/4 BLK
2	H100379	TNUT-5/16" BLK
1	H100405	WASHER LOCK EXT 6x15
2	H100503	BOLT WH 5/16x3 1/2 BLK
1	H100792	LAG SCREW WH 1/4x3 BLK

#### NOTE:

• THE FRONT OF THE UNIT IS DETERMINED BY INSERT T-NUTS FIRST HAND TIGHTEN ONLY THE TALLER POST.

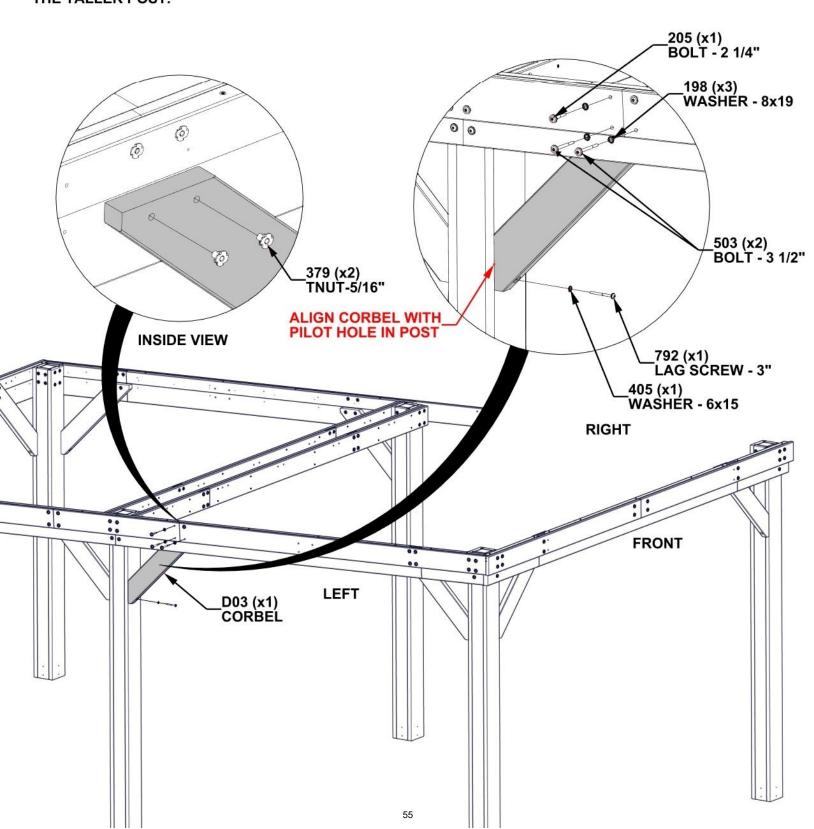

### STEP 23A - RIGHT JOIST ASSEMBLY

Qty	Part Number	Description
4	H100379	TNUT-5/16" BLK


			•				0	0					•	•	
		0	6	•					••••	. "	 	-	*		

J04 JOIST ASSEMBLY - W2A03721 (x1) 36X8 7/16"X100" (36x214x2540)


J02 JOIST ASSEMBLY - W2A03719 (x1) 36X8 7/16"X24 9/16" (36x214x624)

#### NOTES:

- LAYOUT JOIST ASSEMBLIES AS SHOWN BELOW.
- ADD T-NUTS IN THE TOP TWO HOLES AS SHOWN.
- NOTE NOTCH DIRECTION IN ASSEMBLIES FOR T-NUT LOCATION.

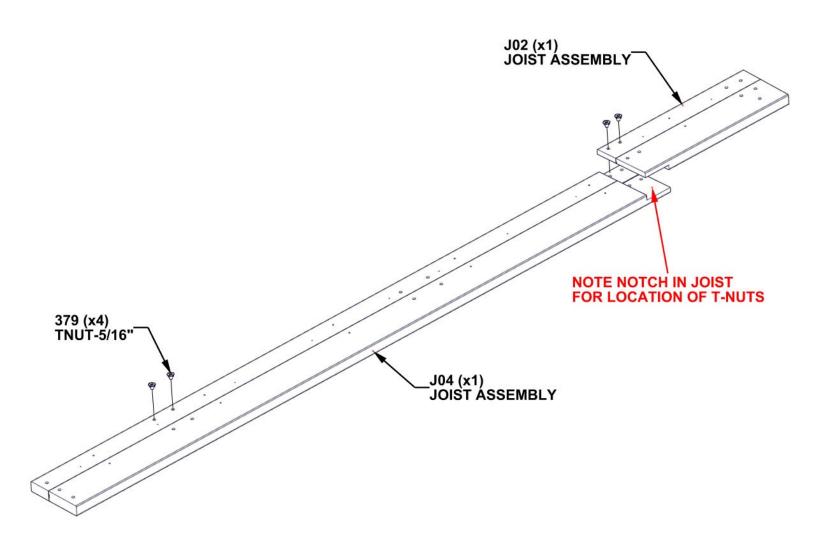

### STEP 23B - RIGHT JOIST ASSEMBLY




Qty	Part Number	Description
5	H100198	WASHER LOCK EXT 8x19
3	H100205	BOLT WH 5/16x2 1/4 BLK
2	H100379	TNUT-5/16" BLK
2	H100503	BOLT WH 5/16x3 1/2 BLK


٥	e	0	0	٠	0	9
٥		o	0		•	0

G10 FASCIA - W4L17600 (x1) 15/16"x5 1/4"x100 1/8" (24x134x2543)


#### **INSERT T-NUTS FIRST**

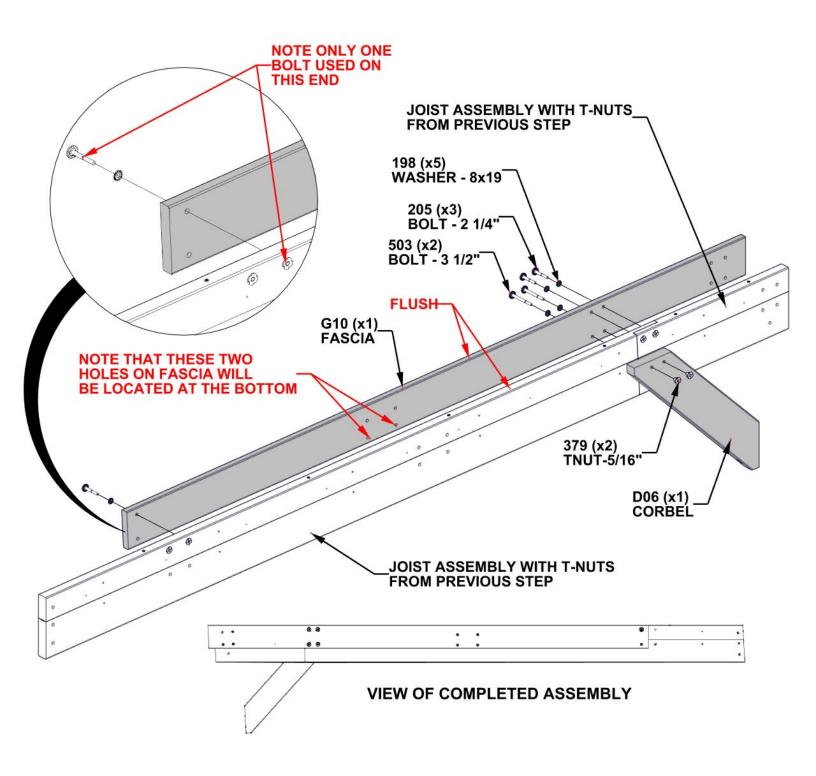


#### STEP 24A - GAZEBO ASSEMBLY



Qty	Part Number	Description
2	H100197	LAG SCREW WH 5/16x2 1/2 BLK
8	H100198	WASHER LOCK EXT 8x19
1	H100405	WASHER LOCK EXT 6x15
1	H100792	LAG SCREW WH 1/4x3 BLK
6	H101153	BOLT WH 5/16x8 1/4 BLK

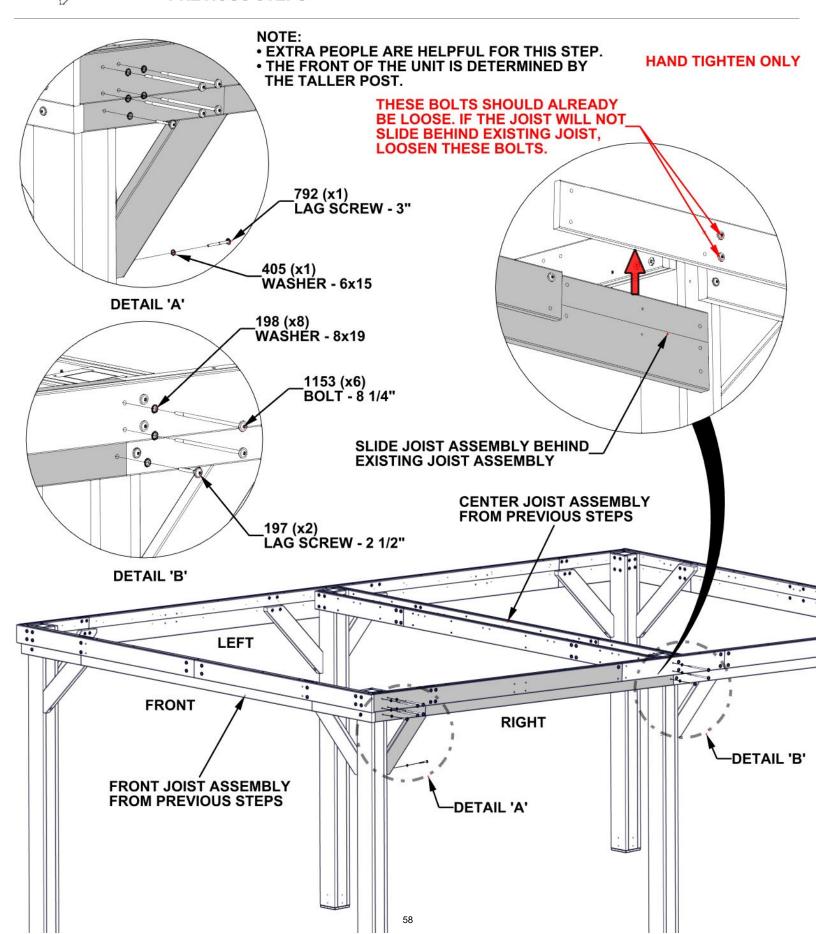

### STEP 24B - GAZEBO ASSEMBLY




Qty	Part Number	Description
3	H100198	WASHER LOCK EXT 8x19
1	H100205	BOLT WH 5/16x2 1/4 BLK
2	H100379	TNUT-5/16" BLK
1	H100405	WASHER LOCK EXT 6x15
2	H100503	BOLT WH 5/16x3 1/2 BLK
1	H100792	LAG SCREW WH 1/4x3 BLK

#### NOTE:

THE FRONT OF THE UNIT IS DETERMINED BY THE TALLER POST.


**INSERT T-NUTS FIRST** 

HAND TIGHTEN ONLY

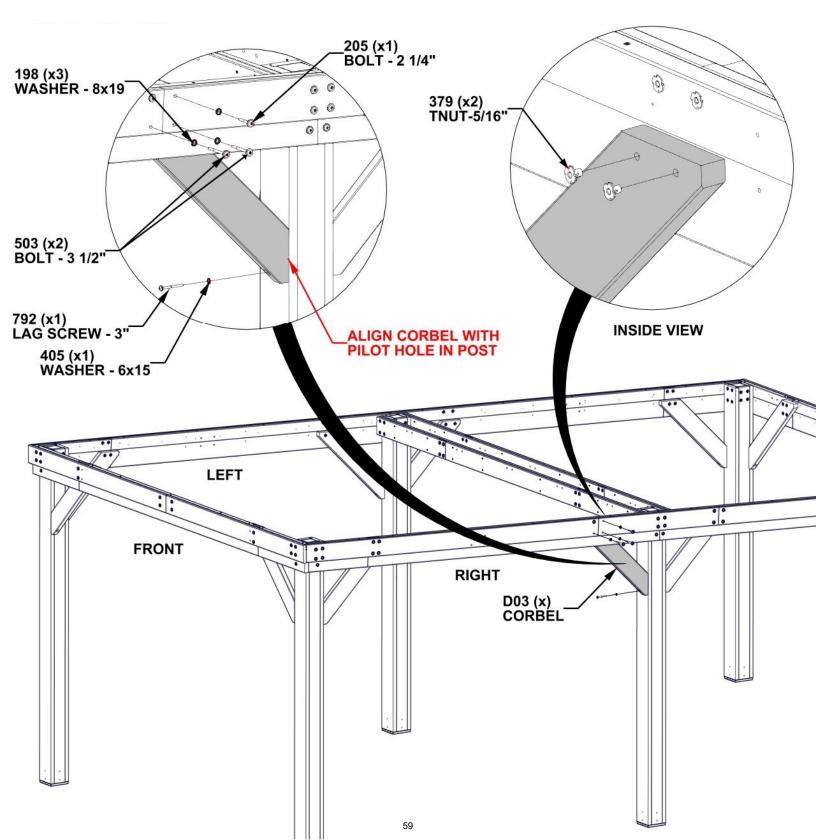

# **STEP 25 - GAZEBO ASSEMBLY**

Qty	Part Number	Description
48	H100391	SCREW PFH 8x2 BLK

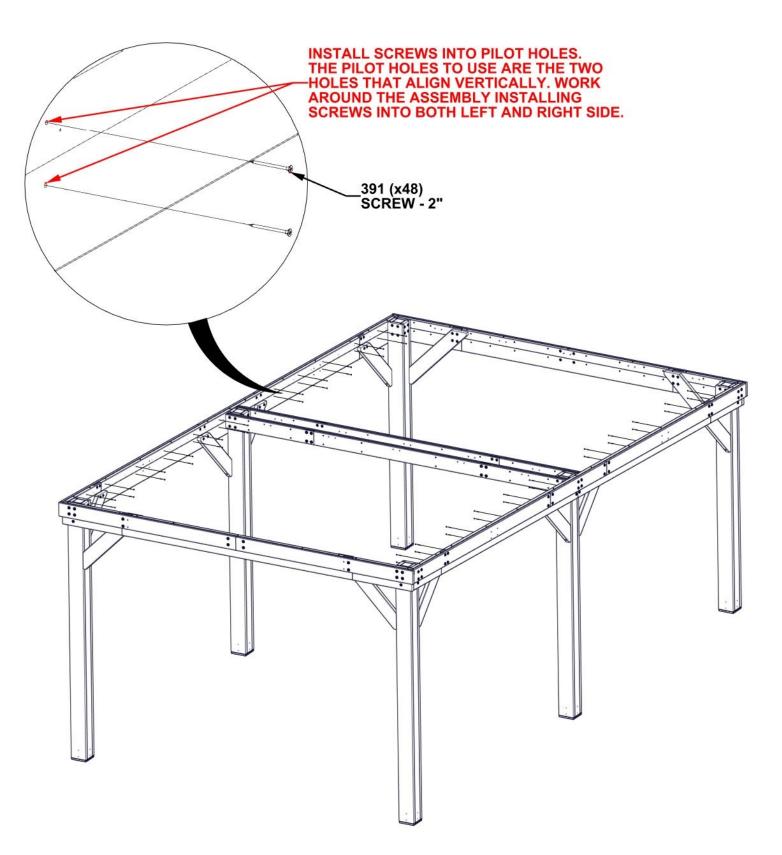


# STEP 26 - GAZEBO ASSEMBLY



A4M02103 - JOIST HANGER 90° (x4)

Qty	Part Number	Description
16	H100198	WASHER LOCK EXT 8x19
16	H100416	BOLT WH 5/16x3 BLK
16	H100479	NUT LOCK 5/16 BLK
16	H100630	WASHER FLAT 8x19 BLK

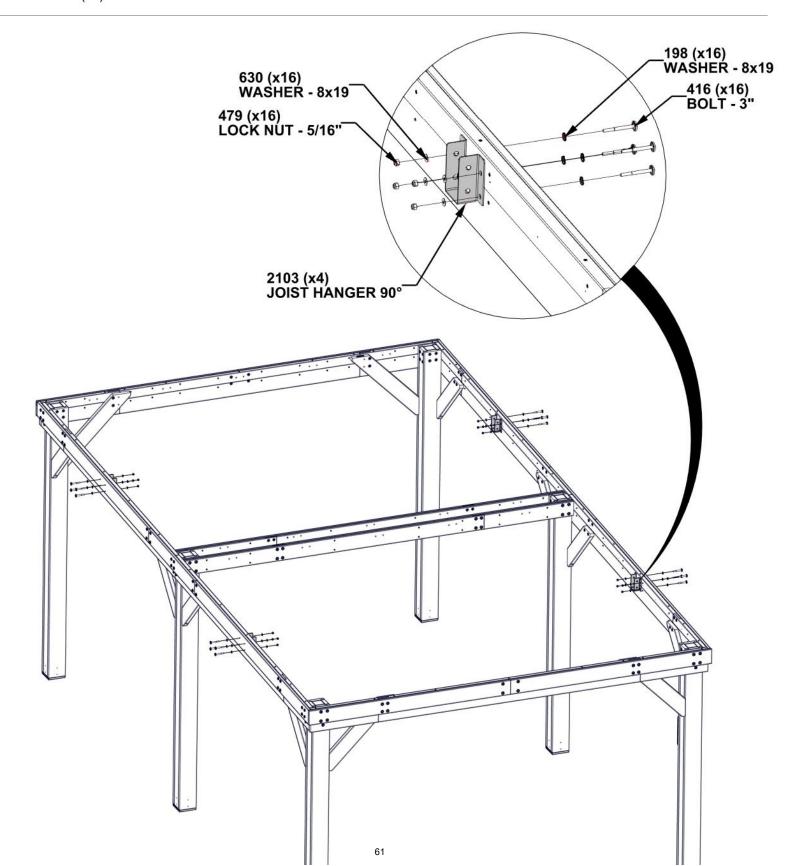

# STEP 27A - GAZEBO ASSEMBLY

9	150			1.0
	o	•	0 0	
	a			


D07 BRACE BEAM - W4L17587

(x4) 1 7/16"x5 1/4"x36 7/16" (36x134x926)

Qty	Part Number	Description
8	H100195	BOLT WH 5/16x2 3/4 BLK
8	H100198	WASHER LOCK EXT 8x19
8	H100379	TNUT-5/16" BLK

a	. 0 0	0 0	·	0 0	р	•	9 0	4	٥
٥	*				0				٠

D09 BRACE BEAM - W4L17586 (x4) 1 7/16"x5 1/4"x106 7/8" (36x134x2714)

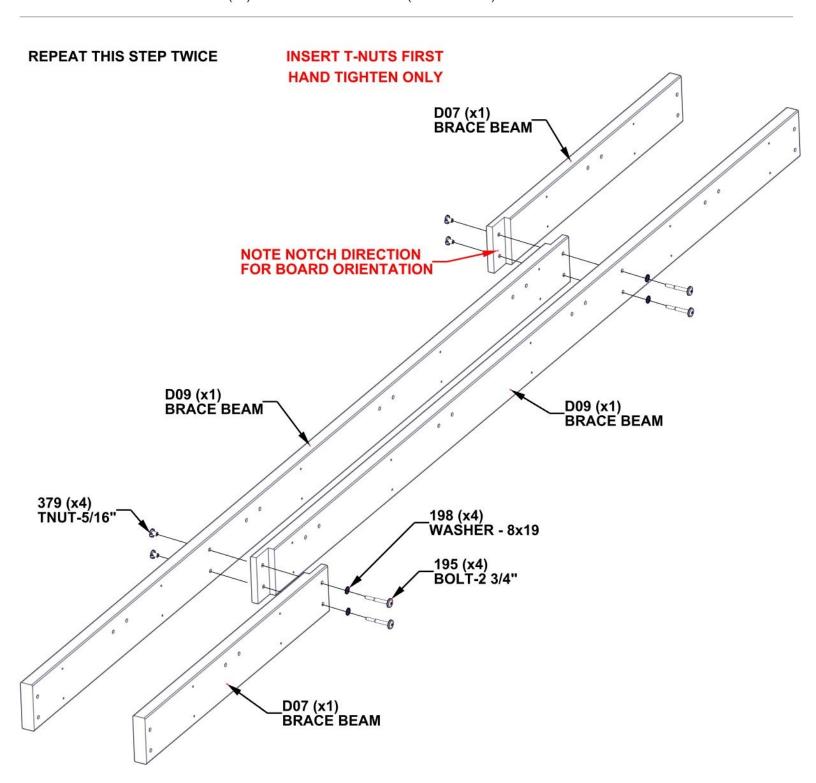

### STEP 27B - GAZEBO ASSEMBLY

Qty	Part Number	Description
56	H100483	SCREW PFH 8x2 1/4 BLK


•	 	0							•
•		19		139		9			•

#### **BEAM ASSEMBLY FROM PREVIOUS STEP**

#### NOTES:

- MAKE SURE THE TOP, BOTTOM, AND ENDS OF ALL BOARDS ARE FLUSH.
   MAKE SURE ALL HOLES ARE ALIGNED WHEREAS BOLTS CAN PASS THROUGH.
- INSTALL SCREWS AS SHOWN BELOW AND TIGHTEN ALL HARDWARE

#### REPEAT THIS STEP TWICE

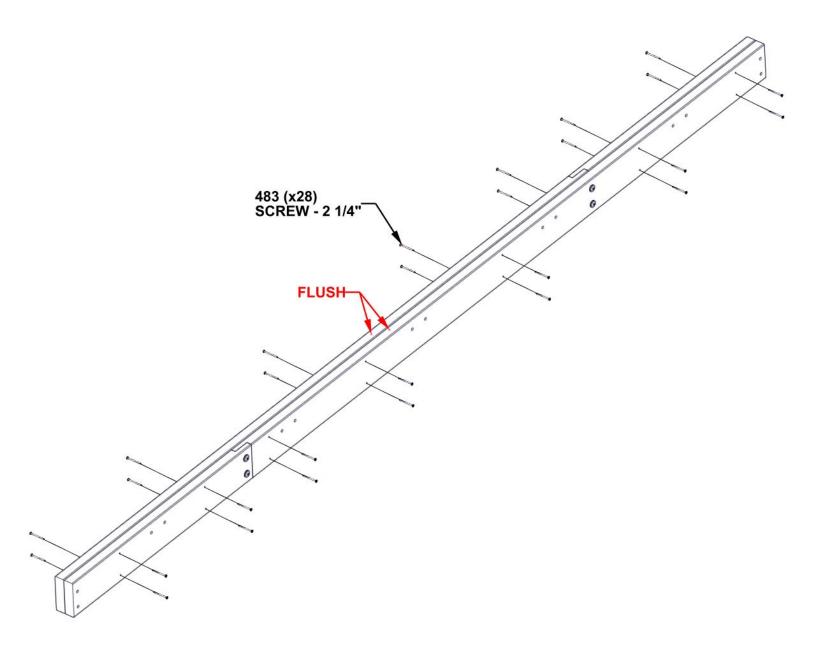

### **STEP 28 - GAZEBO ASSEMBLY**


Qty	Part Number	Description
8	H100415	BOLT WH 5/16x3 3/4 BLK
8	H100479	NUT LOCK 5/16 BLK
8	H100630	WASHER FLAT 8y19 BLK

#### BEAM ASSEMBLY FROM PREVIOUS STEPS (x2)

#### NOTES:

- INSERT BEAM ASSEMBLIES INTO BRACKETS.
- ATTACH BEAMS TO BRACKETS USING 3 3/4" BOLTS, FLAT WASHERS & LOCK NUTS.


#### HAND TIGHTEN ONLY

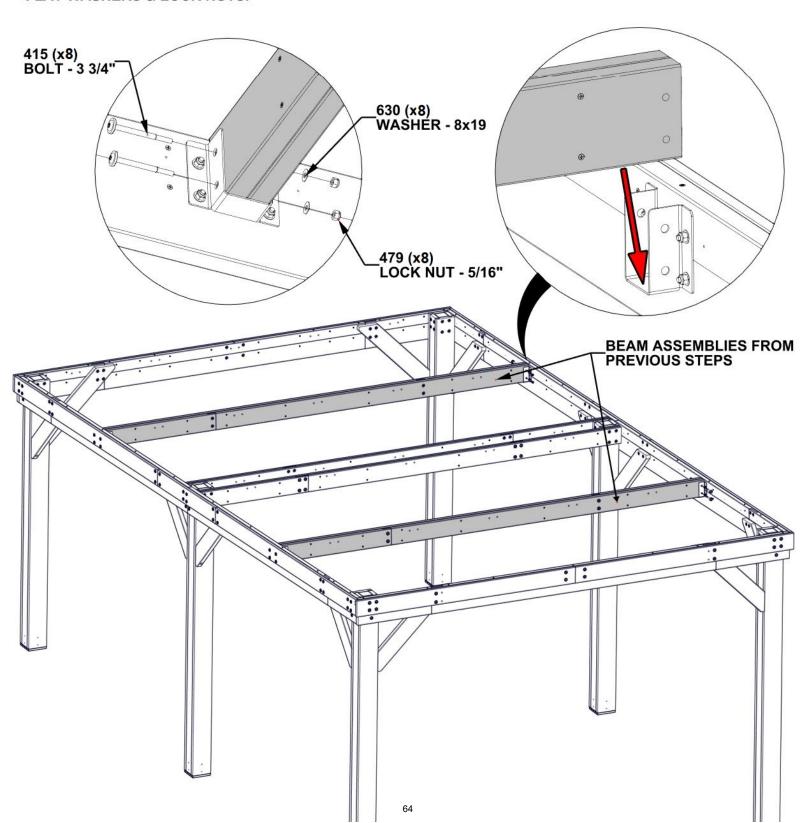

# **STEP 29 - SQUARE ASSEMBLY**

# CRITICAL: SQUARE ASSEMBLY BEFORE PROCEEDING TO NEXT STEPS. ONCE SQUARE, ENSURE ALL HARDWARE IS FULLY TIGHTENED.

MEASUREMENTS TAKE FROM INSIDE OF POST TO INSIDE OF POST.

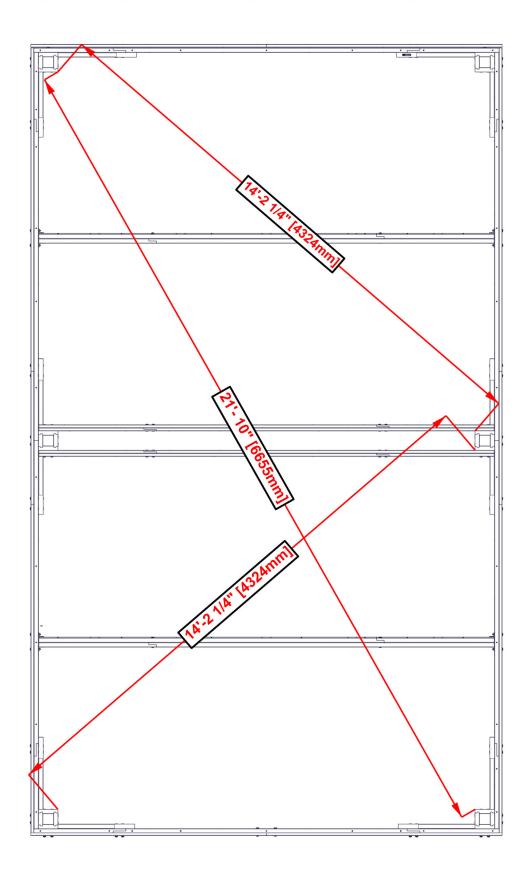


# **STEP 30 - GAZEBO ASSEMBLY**

Qty	Part Number	Description
10	H100459	BOLT WH 5/16x1 1/4 BLK




A4M01787 - RAFTER BRACKET (x5)

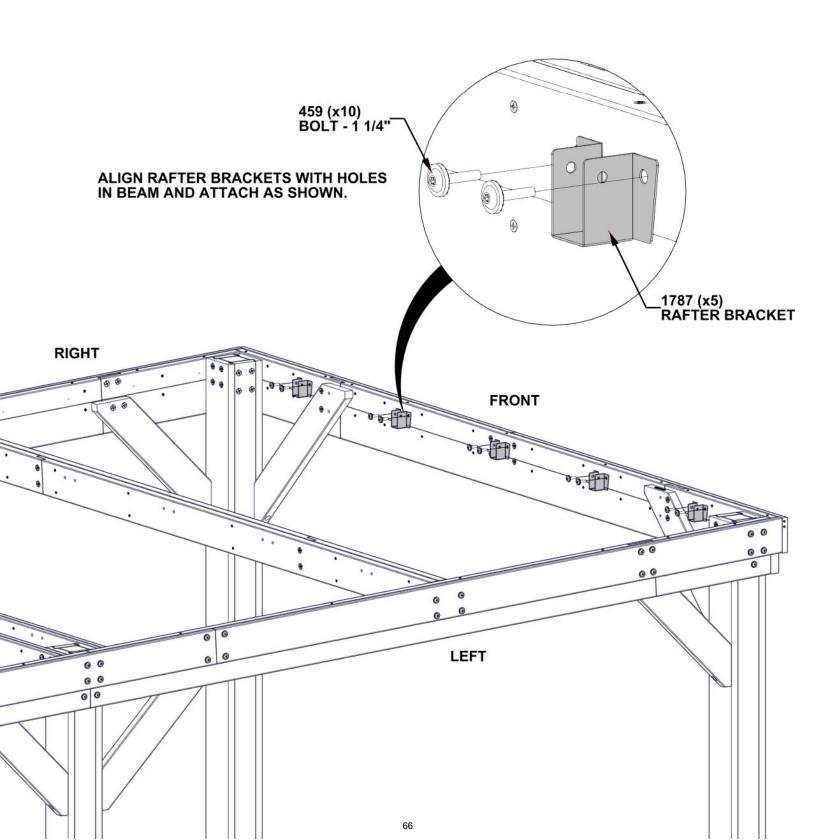

# STEP 31 - GAZEBO ASSEMBLY




Qty	Part Number	Description
10	H100479	NUT LOCK 5/16 BLK
10	H100503	BOLT WH 5/16x3 1/2 BLK
10	H100630	WASHER FLAT 8x19 BLK

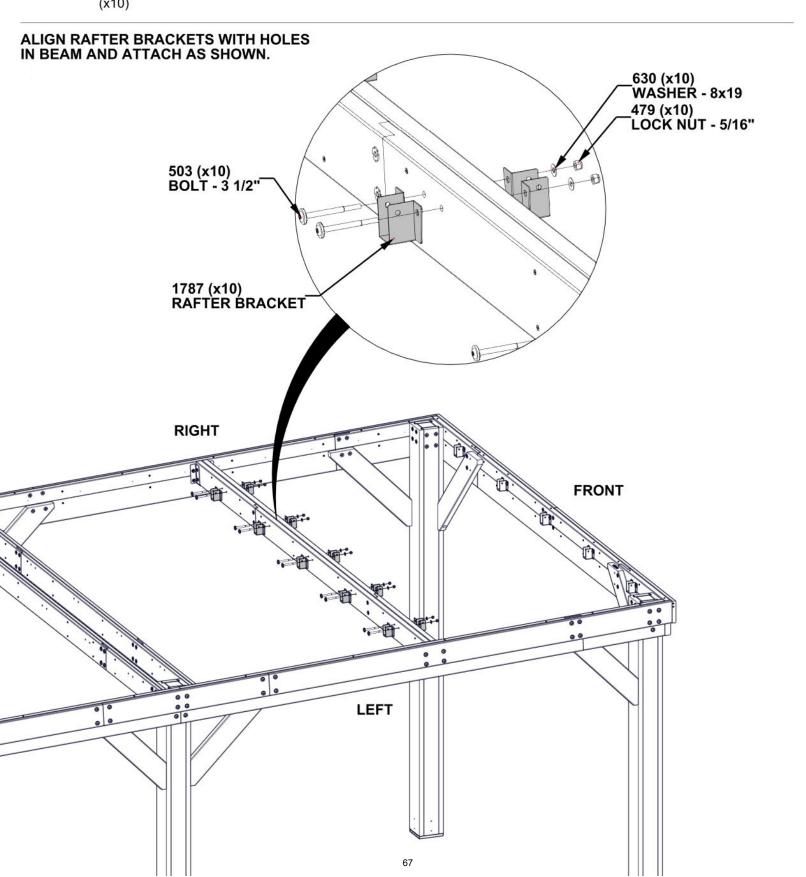


# **STEP 32 - GAZEBO ASSEMBLY**

QtyPart NumberDescription20H100378BOLT WH 5/16x1 3/4 BLK

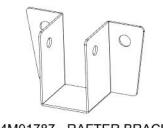

A4M01787 - RAFTER BRACKET (x10)

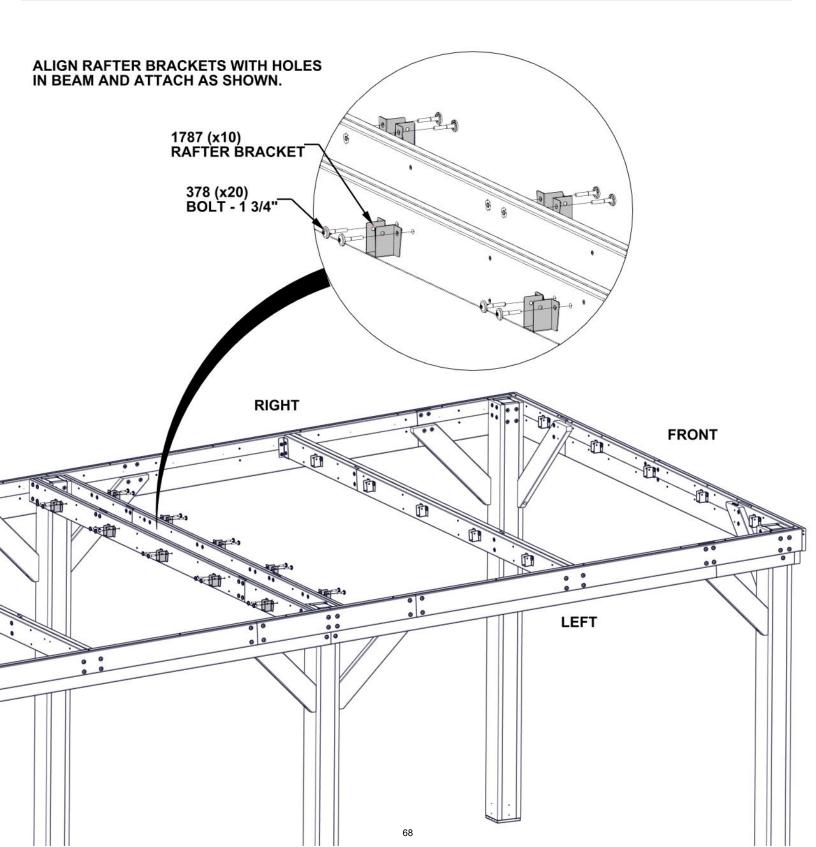

### **STEP 33 - GAZEBO ASSEMBLY**




 Qty
 Part Number
 Description

 10
 H100479
 NUT LOCK 5/16 BLK

 10
 H100503
 BOLT WH 5/16x3 1/2 BLK

 10
 H100630
 WASHER FLAT 8x19 BLK

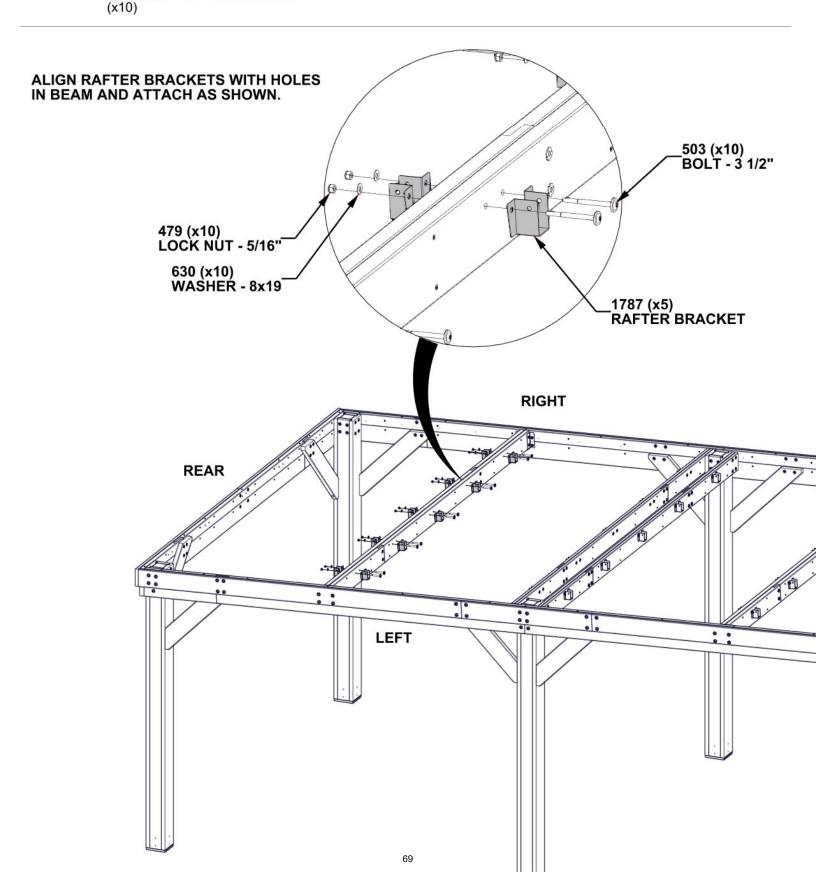


# STEP 34 - GAZEBO ASSEMBLY

 Qty
 Part Number
 Description

 10
 H100459
 BOLT WH 5/16x1 1/4 BLK



A4M01787 - RAFTER BRACKET (x5)

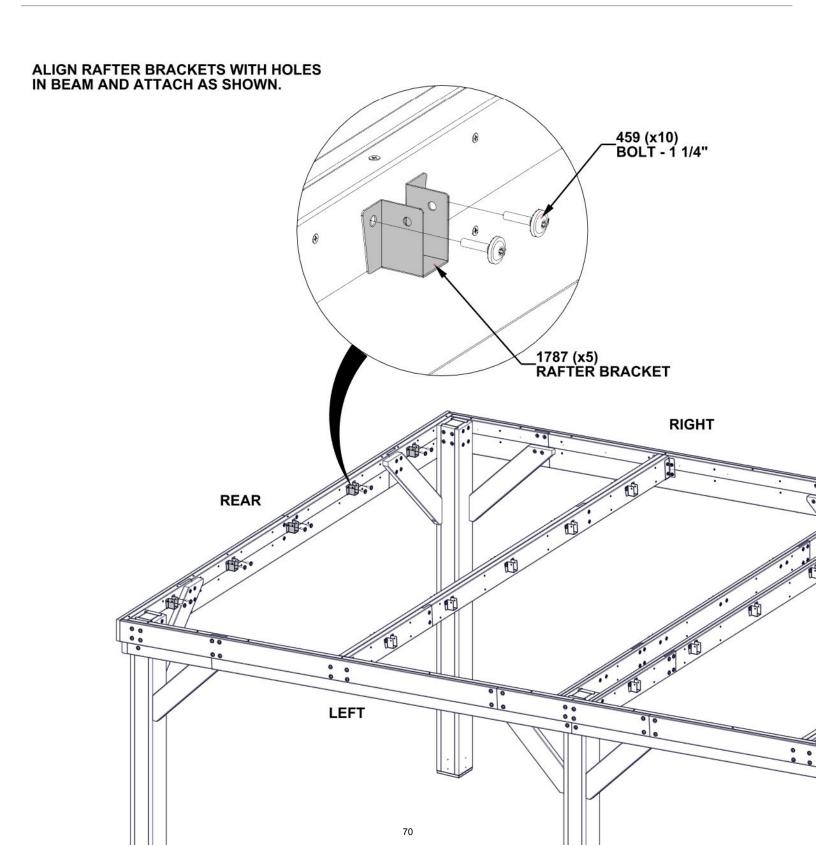


# STEP 35 - GAZEBO ASSEMBLY E01 RAFTER - W4L17588 (x5) 17/16"x36x56 1/16" (36x86x1424) E02 RAFTER - W4L17589 (x5) 17/16"x3 3/8"x56 1/4" (36x86x1429)

Qty	Part Number	Description
20	H100488	BOLT WH 1/4x2 BLK
20	H100630	WASHER FLAT 8x19 BLK
20	H100653	NUT LOCK 1/4 BLK

#### NOTES:

- INSERT RAFTERS INTO BRACKETS.
- ATTACH RAFTERS TO BRACKETS USING 2" BOLTS, FLAT WASHERS & LOCK NUTS.

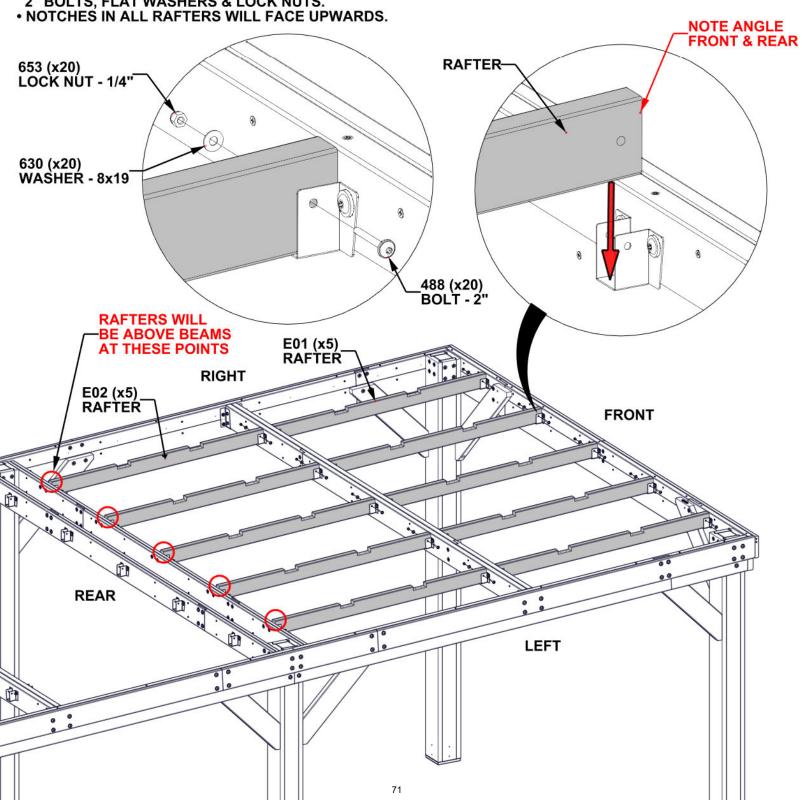


# STEP 36 - GAZEBO ASSEMBLY E01 RAFTER - W4L17588 (x5) 1 7/16"x36x56 1/16" (36x86x1424) E02 RAFTER - W4L17589

(x5) 1 7/16"x3 3/8"x56 1/4" (36x86x1429)

Qty	Part Number	Description
20	H100488	BOLT WH 1/4x2 BLK
20	H100630	WASHER FLAT 8x19 BLK
20	H100653	NUT LOCK 1/4 BLK

#### NOTES:

- INSERT RAFTERS INTO BRACKETS.
- ATTACH RAFTERS TO BRACKETS USING 2" BOLTS, FLAT WASHERS & LOCK NUTS.
- NOTCHES IN ALL RAFTERS WILL FACE UPWARDS.

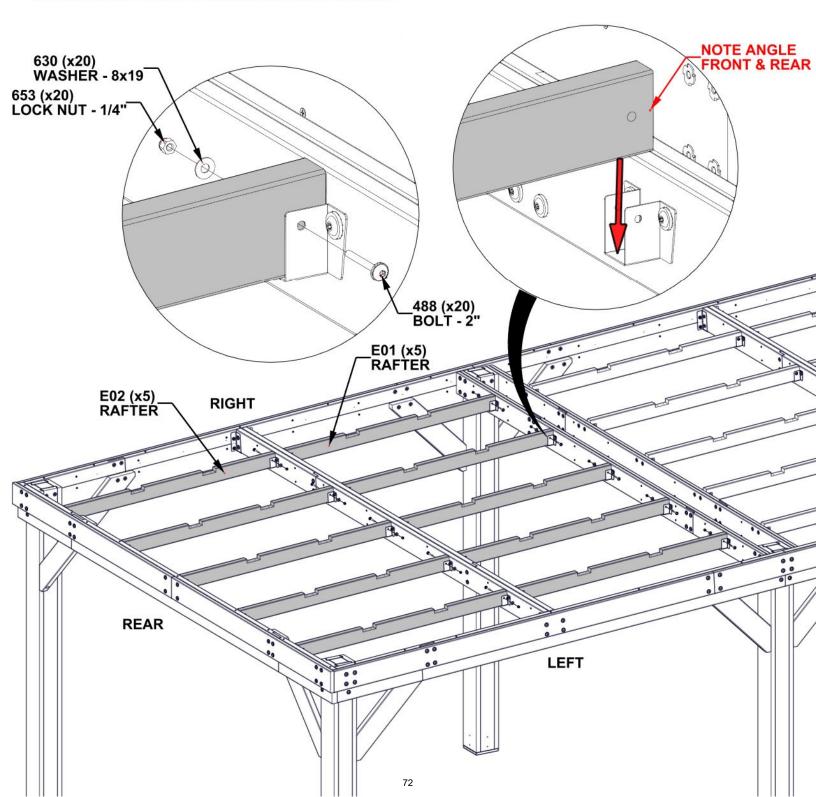


#### 

Description

SCREW PFH 8x2 BLK

#### NOTE:

• REPEAT CLEAT INSTALLATION ON OPPOSITE SIDE OF CARPORT

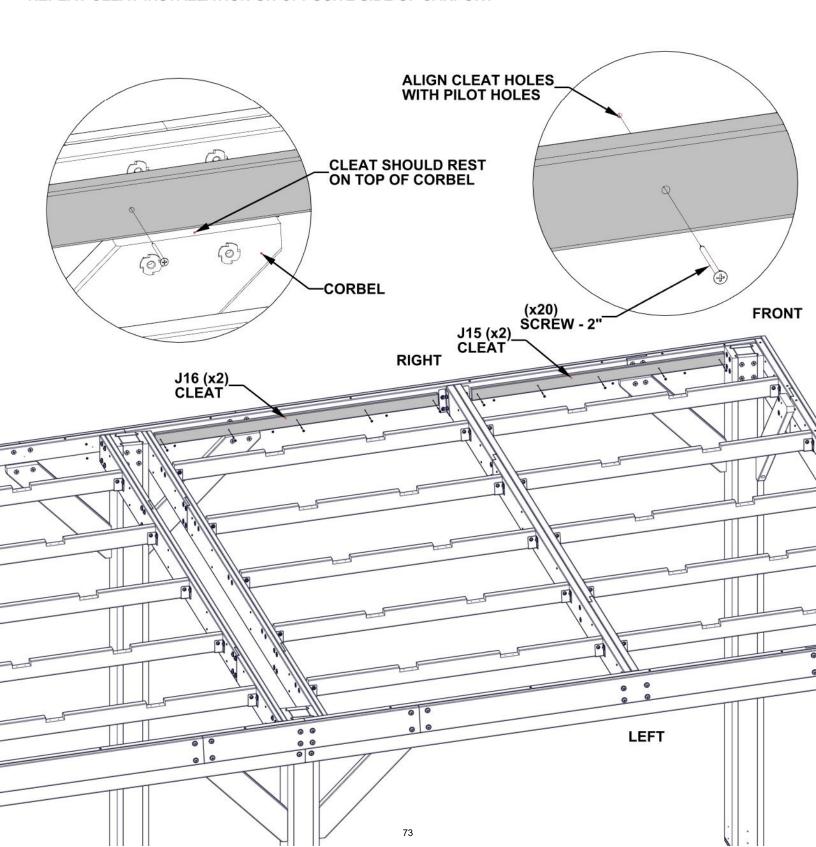

TEP 37E	B - GAZEI	BO ASSI	EMBLY		Qty	Part Number	Description
	121		•		20	H100391	SCREW PFH 8x2 BI
	J15 CLEAT - W	11 17604	*	•			
(	(x2) 15/16"x2 3/	8"x48 1/8" (24x	60x1222)				
	•	•	•	•			
	J16 CLEAT - W	4L17605	2009 - See Address VIII (1900 See 2000 See 2000				
(	(x2) 15/16"x2 3/	8"x53 15/16" (2	4x60x1370)				
TE:							
EPEAT CLEA	AT INSTALLAT	ON ON OPPO	OSITE SIDE OF	CAR PORT			
		<b>≥</b>	ALIGN CLE	EAT HOLES_			// \
			WITH PILO	T HOLES_	7		
						6	
		<u></u>	CLEAT SHOUL ON TOP OF CO	D REST			
			ON TOP OF CO	NBEL			-
							<b>A</b> (2)
		•			-		
		)					
		$\checkmark$ /			204 (	200	
	6		COPPE		391 (X SCRE	20) W - 2"	
\			-CORBEL				
$\vee$	1			J16 (x2) ∫ CLEAT			11.
	F					0000	
		.115 (x2)	RIGHT		1		
		J15 (x2)		X. C	1		
						$\triangleleft$	
		100			1		
		-			7.5		
	700)						
	11		0				
4				1111			
1							
1					~ )		
	1 11						
					-5	,	
		1					
		100					
		///					
	R	EAR					• •
			20			00	LEFT


### STEP 38A - GAZEBO ASSEMBLY

QtyPart NumberDescription32H100382SCREW PFH 8x1 3/4 BLK

H01 PURLIN - W4L17590 (x4) 15/16"x3 3/8"x98 3/16" (24x86x2494)

### NOTES:

POSTION PURLINS AS SHOWN BELOW

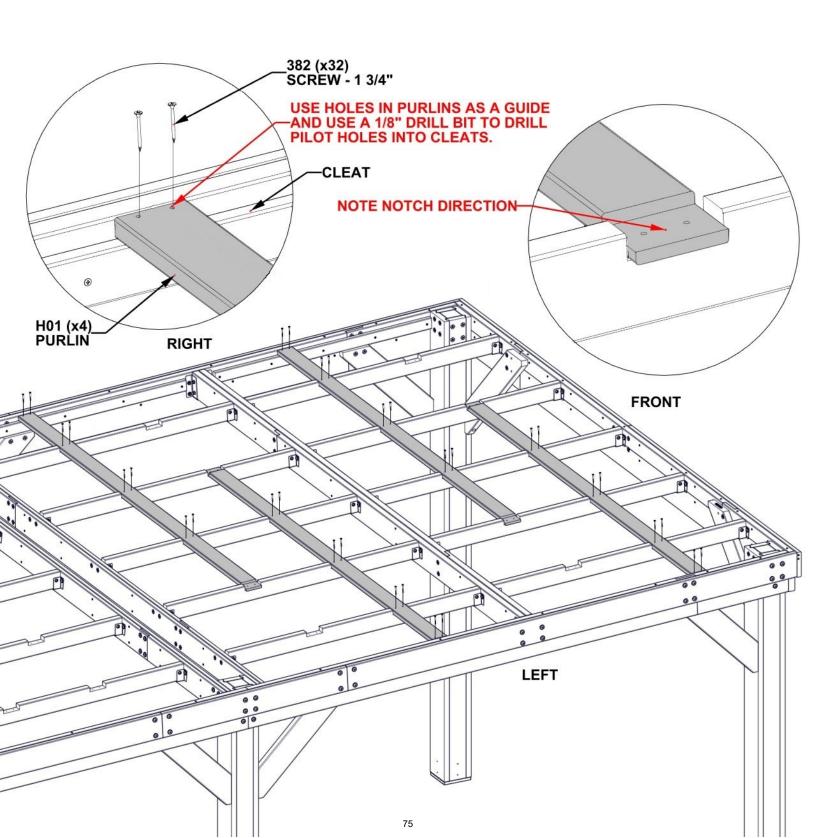


### STEP 38B - GAZEBO ASSEMBLY

QtyPart NumberDescription24H100382SCREW PFH 8x1 3/4 BLK

		ø	
•		9.	
	H02 (x4)	PURLIN - W4L17591 15/16"x3 3/8"x45 1/8" (24x86x1146)	

#### NOTES:

• POSTION PURLINS AS SHOWN BELOW

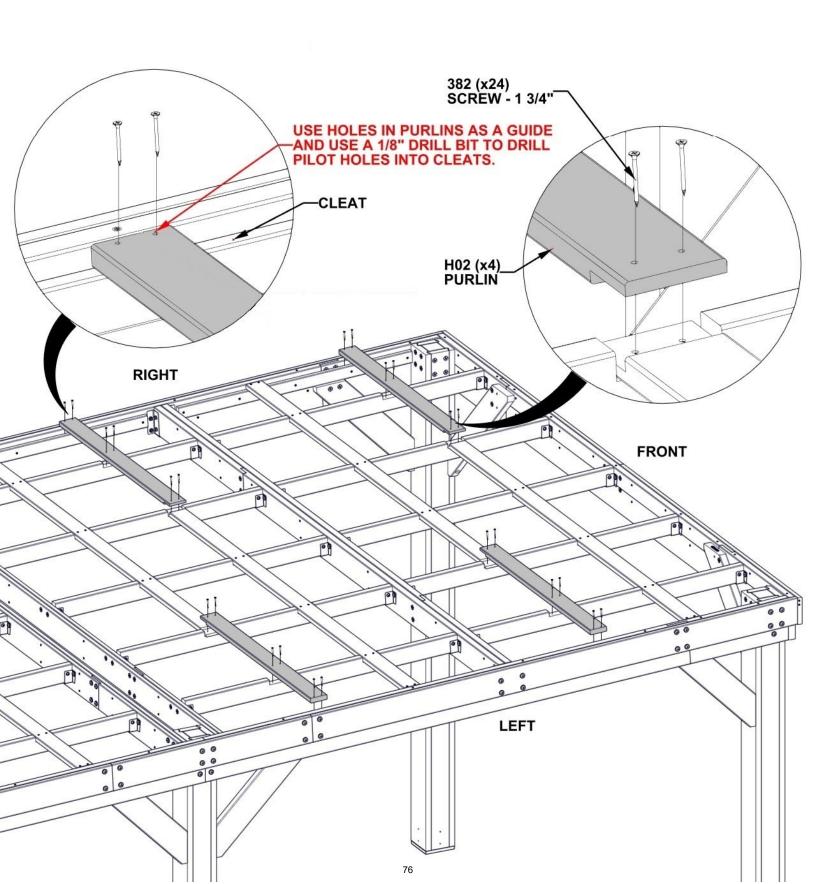

### STEP 39A - GAZEBO ASSEMBLY


QtyPart NumberDescription32H100382SCREW PFH 8x1 3/4 BLK

H01 PURLIN - W4L17590

(x4) 15/16"x3 3/8"x98 3/16" (24x86x2494)

#### NOTES:

• POSTION PURLINS AS SHOWN BELOW

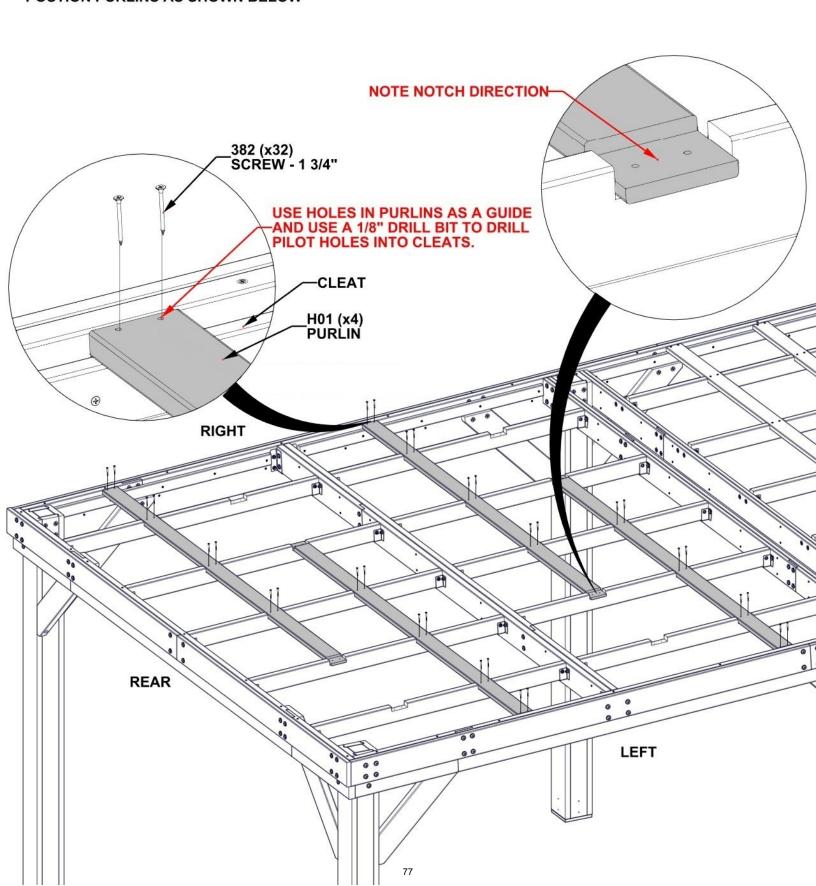

### STEP 39B - GAZEBO ASSEMBLY


QtyPart NumberDescription24H100382SCREW PFH 8x1 3/4 BLK

H02 PURLIN - W4L17591


(x4) 15/16"x3 3/8"x45 1/8" (24x86x1146)

#### NOTES:


POSTION PURLINS AS SHOWN BELOW

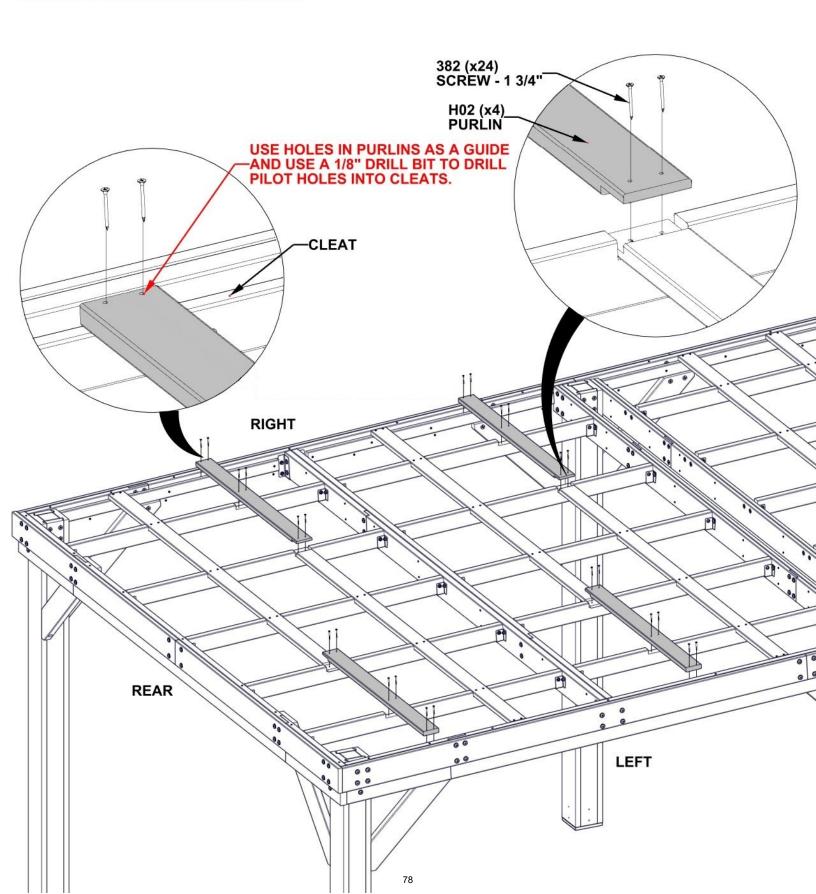

### STEP 40A - GAZEBO ASSEMBLY

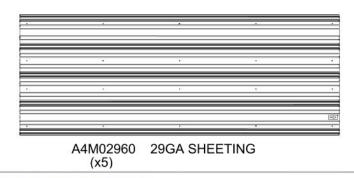


- REMOVE BLUE FILM FROM ROOF PANELS.
- ORIENT ROOF PANELS AS SHOWN BELOW.
- IT IS IMPORTANT TO HOLD THE 1/4" OVERHANG AT THE BACK OF THE UNIT SO TRIM PIECES WILL FIT CORRECTLY IN FUTURE STEPS.
- ATTACH ONE SHEET AT A TIME, DO NOT GET ON THE ROOF TO ATTACH SCREWS.

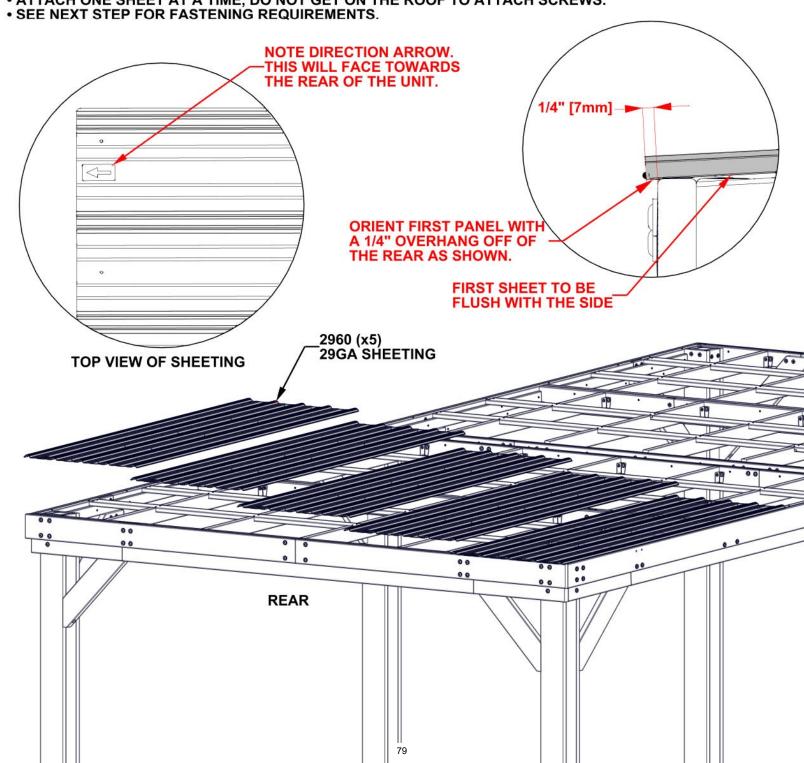


### **STEP 40B - GAZEBO ASSEMBLY**

Qty	PART NUMBER	DESCRIPTION
60	H101117	SCREW WOODGRIP 10-16x3/4" BLK

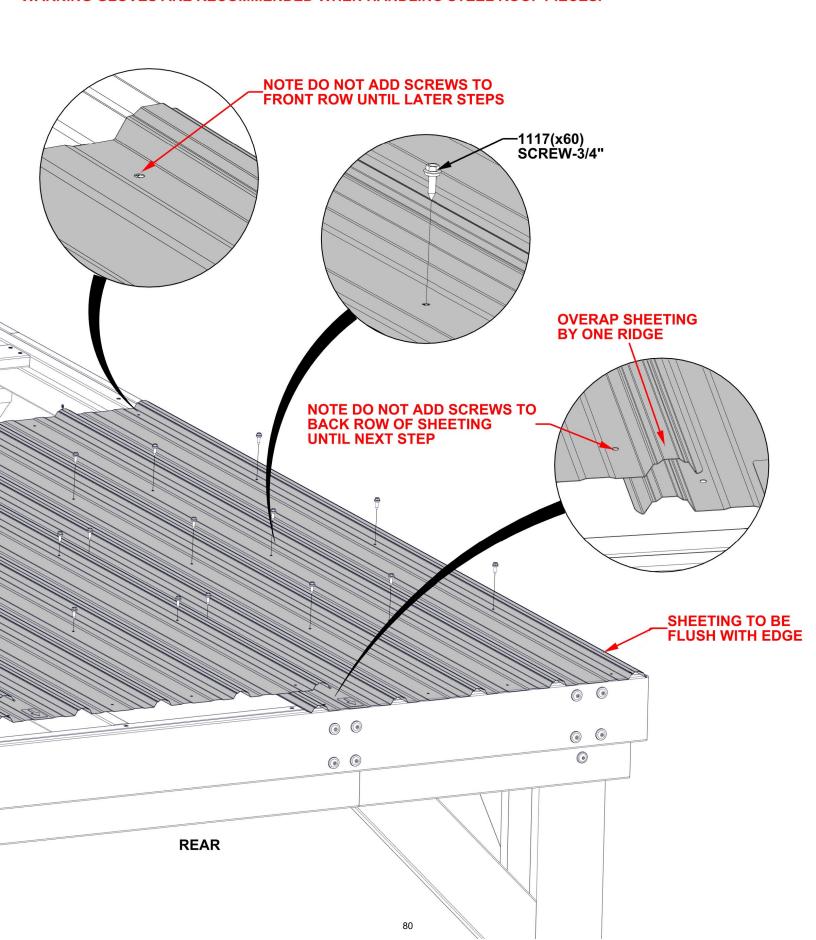


### STEP 40C - GAZEBO ASSEMBLY

Qty	PART NUMBER	DESCRIPTION
20	H101117	SCREW WOODGRIP 10-16x3/4" BLK

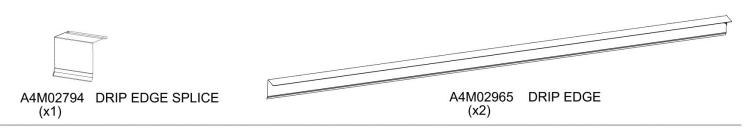


#### WARNING GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

- REMOVE BLUE FILM FROM DRIP EDGE AND DRIP EDGE SPLICE.
- ORIENT DRIP EDGE AND SPLICE AS SHOWN BELOW.
- ATTACH USING HOLES IN SHEETING. DO NOT GET ON ROOF TO ATTACH SCREWS.

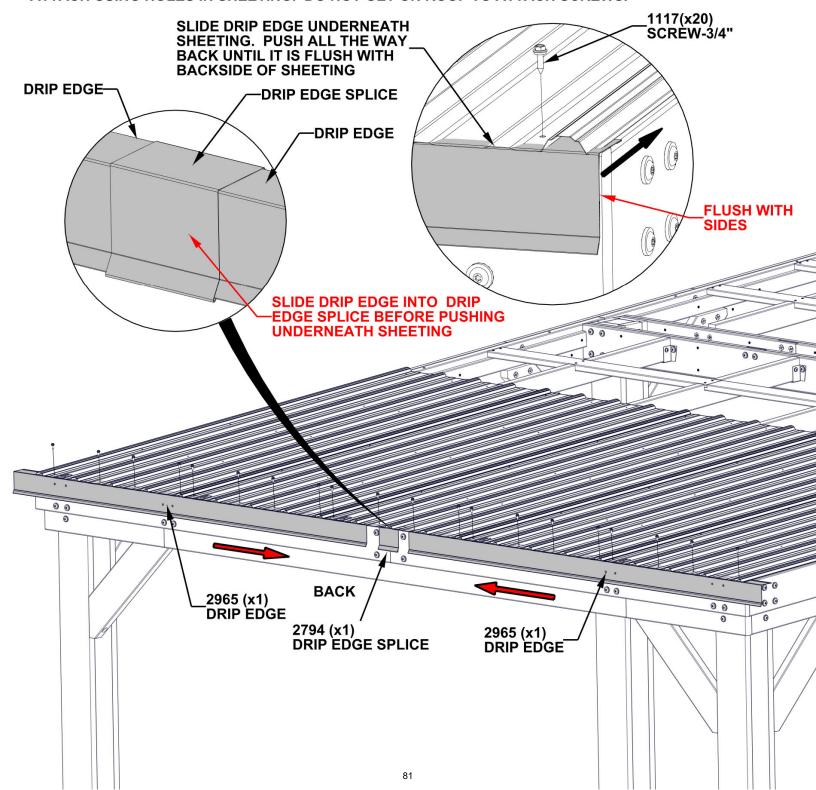


### STEP 40D - GAZEBO ASSEMBLY



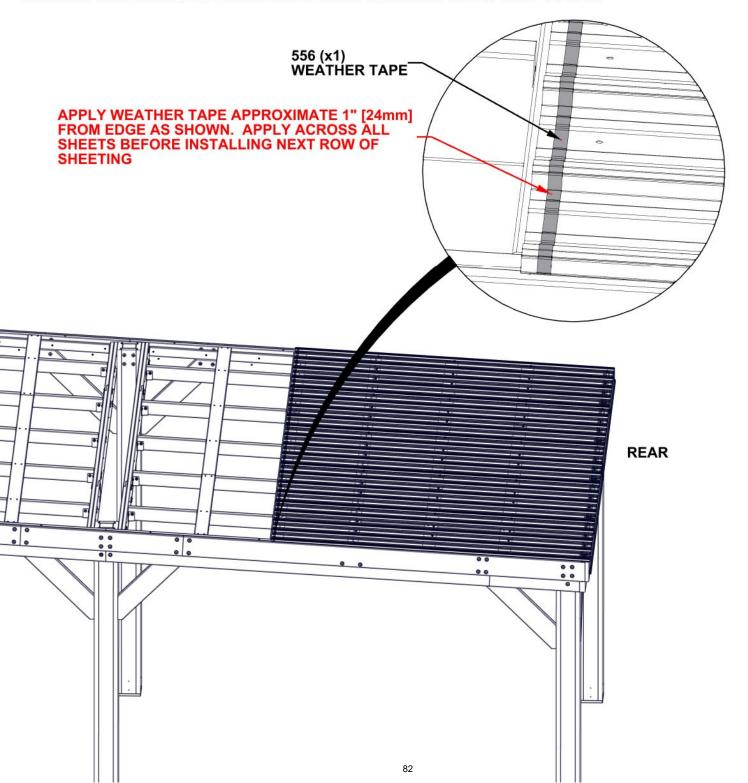

### STEP 41 - GAZEBO ASSEMBLY

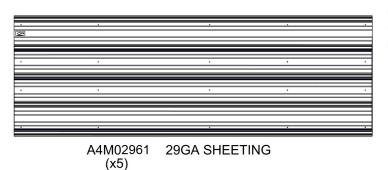



Qty	PART NUMBER	DESCRIPTION
80	H101117	SCREW WOODGRIP 10-16x3/4" BLK

### WARNING GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

OVERLAP SHEETING BY ONE RIDGE


- REMOVE BLUE FILM FROM ROOF PANELS.
- ORIENT ROOF PANELS AS SHOWN BELOW.

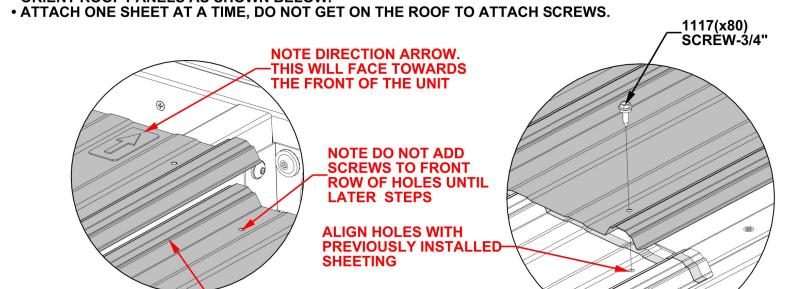

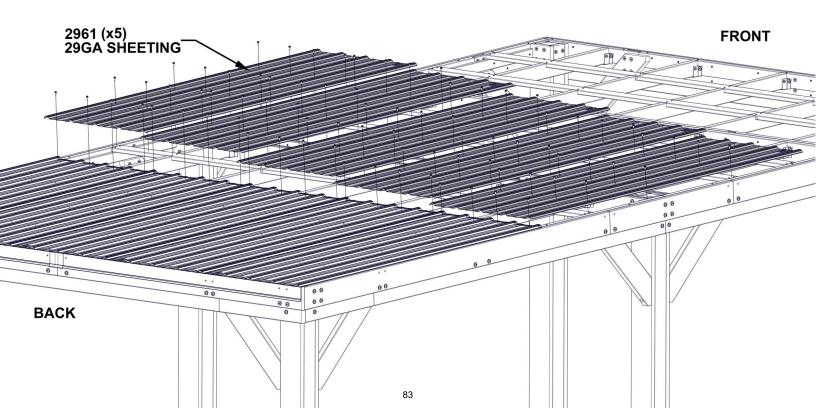

### **STEP 42 - GAZEBO ASSEMBLY**



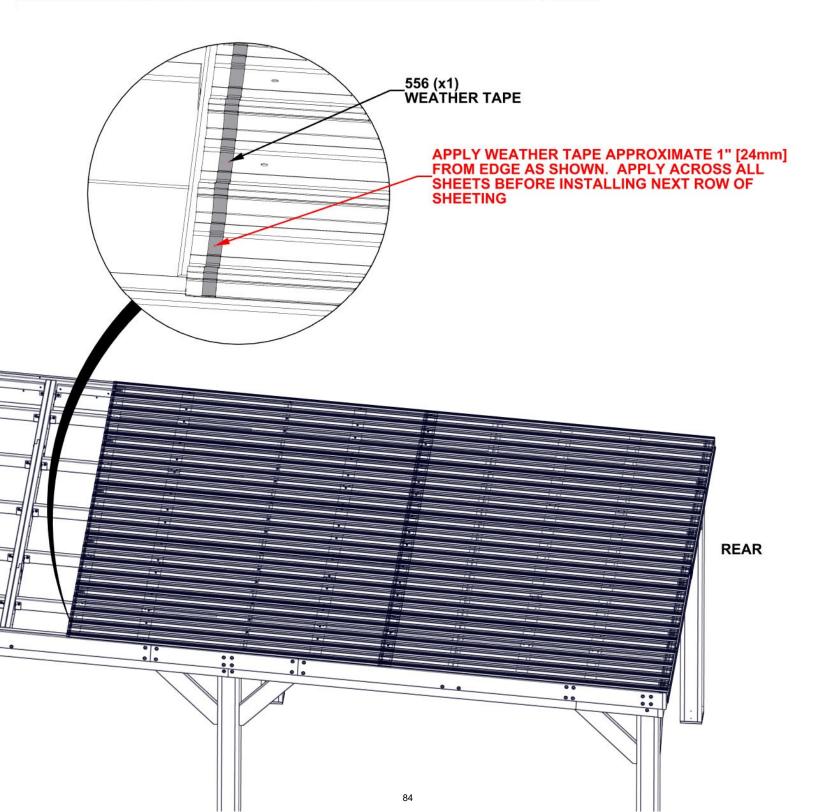

### **STEP 43 - GAZEBO ASSEMBLY**


Qty	PART NUMBER	DESCRIPTION
100	H101117	SCREW WOODGRIP 10-16x3/4" BLK

	<u>*</u>		<u> </u>	
<u> </u>	÷	•	*	9
ŭ.	8	(4)	£	

A4M02960 29GA SHEETING (x5)


#### WARNING GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.

- REMOVE BLUE FILM FROM ROOF PANELS.
- ORIENT ROOF PANELS AS SHOWN BELOW.
- ATTACH ONE SHEET AT A TIME, DO NOT GET ON THE ROOF TO ATTACH SCREWS.

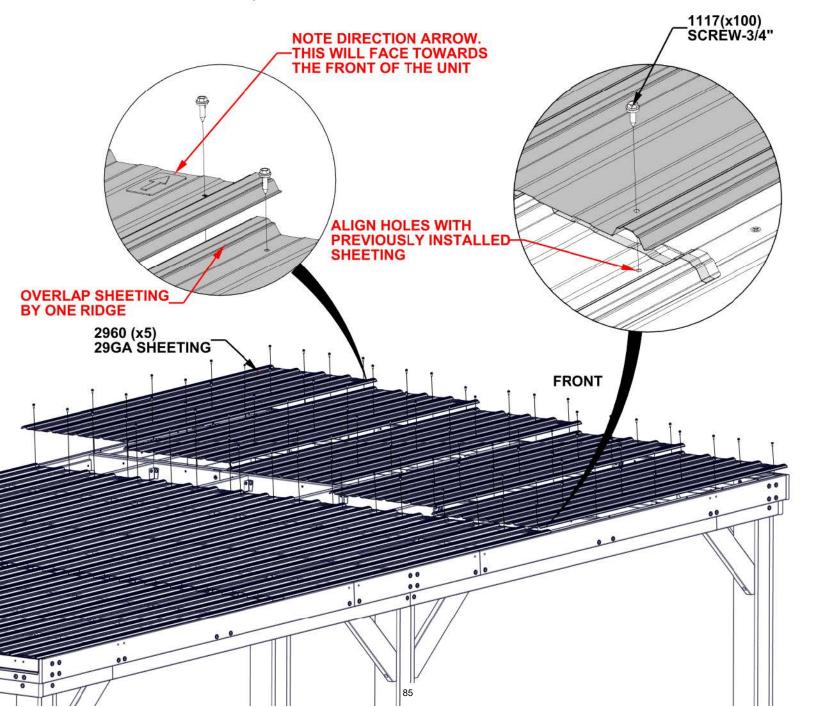


### STEP 44 - GAZEBO ASSEMBLY


1	Qty	PART NUMBER	DESCRIPTION	
	10	H101116	SCREW SELF TAPPING	1/4x1 BLK

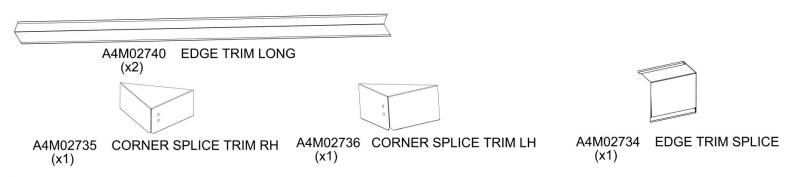

#### WARNING GLOVES ARE RECOMMENDED WHEN HANDLING STELL ROOF PIECES.

- POSITION EDGE TRIM, EDGE TRIM SPLICE AND CORNER SPLICE TRIM AS SHOWN BELOW.
- SLIDE TRIM PIECES INTO SPLICES. ATTACH CORNER SPLICES BY SLIDING ONTO EDGE TRIM. SCREW AS NOTED IN DETAIL.

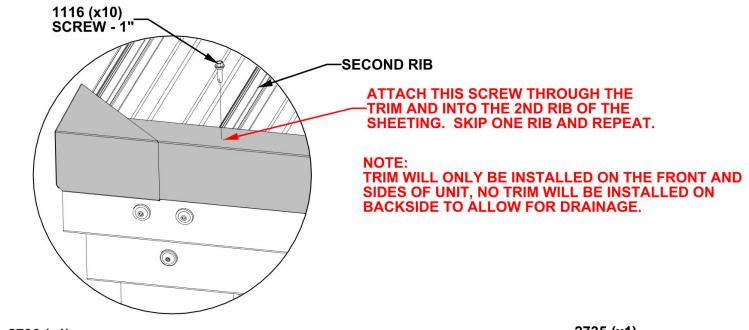

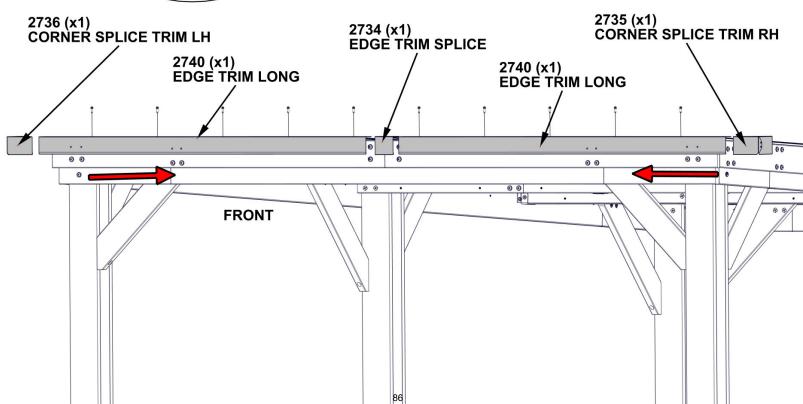

### **STEP 45 - GAZEBO ASSEMBLY**

PART NUMBER | DESCRIPTION 28 SCREW SELF TAPPING 1/4x1 BLK H101116




(x6)



A4M02734 EDGE TRIM SPLICE (x4)

### WARNING GLOVES ARE RECOMMENDED WHEN HANDLING STELL ROOF PIECES.

- LAY EDGE TRIM ON SIDE OF ROOF AS SHOWN BELOW, SLIDE EACH PIECE INTO ONE ANOTHER.
- FLUSH LAST PIECE WITH THE REAR DRIP EDGE. SCREWS GO THROUGH EDGE TRIM INTO RIB AT THE APPROXIMATE LOCATIONS SHOWN.
- REPEAT ON OPPOSITE SIDE

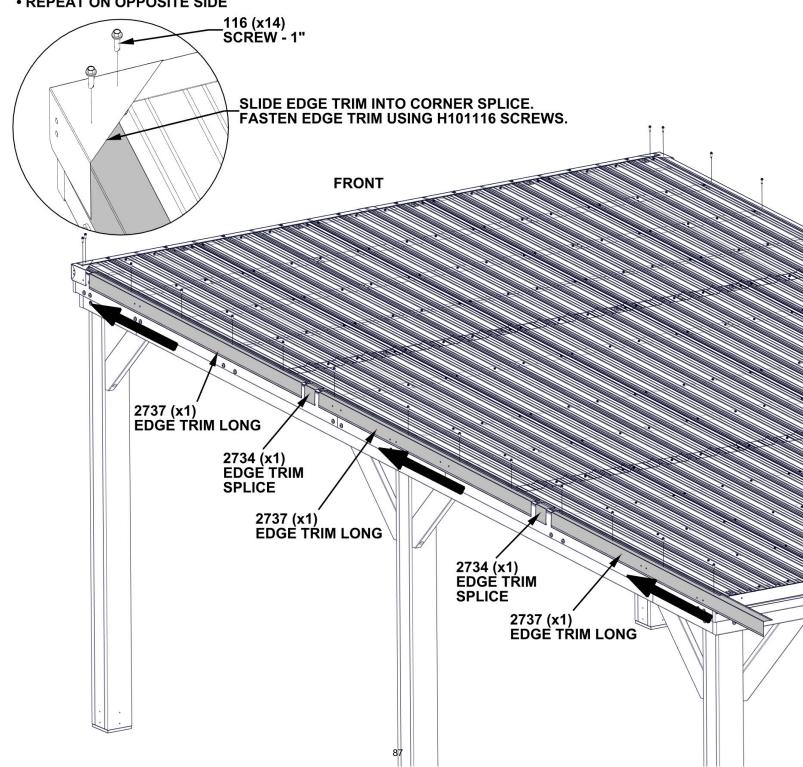

### STEP 46 - GAZEBO ASSEMBLY


Qty	PART NUMBER	DESCRIPTION
48	H100471	LAG SCREW WH 5/16x1 1/2 BLK





A4M00977 POST ANCHORING PLATE (x12)


- 977 POST ANCHORING PLATES MOUNT ON OUTSIDE OF POST AS SHOWN EXCEPT THE CENTER POST.
   978 POST PLATES GO ON INSIDE OF POST AS SHOWN EXCEPT CENTER POST, THESE WILL ALSO BE ON THE FRONT FACE OF POST AS SHOWN IN DETAIL BELOW.

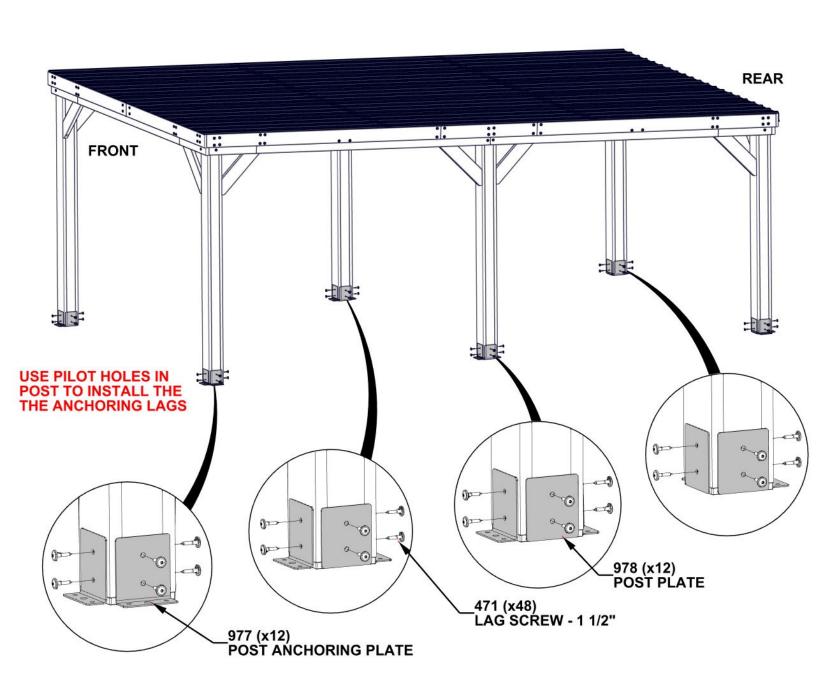

## **STEP 47 - GAZEBO ASSEMBLY**

Q	ty	PART NUMBER	DESCRIPTION
2		H100202	SCREW PWH 8x5/8 BLK




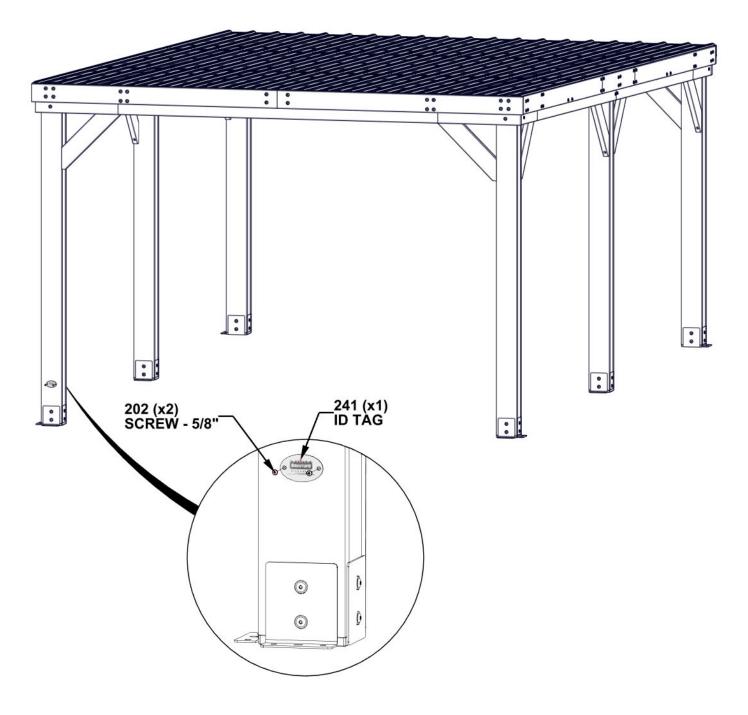


### **STEP 48 - GAZEBO ASSEMBLY**

Qty	PART NUMBER	DESCRIPTION
24	H100120	CONCRETE ANCHOR 1/4"
24	H100630	WASHER FLAT 8x19 BLK

MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE SURFACE OR CONCRETE POST PADS.

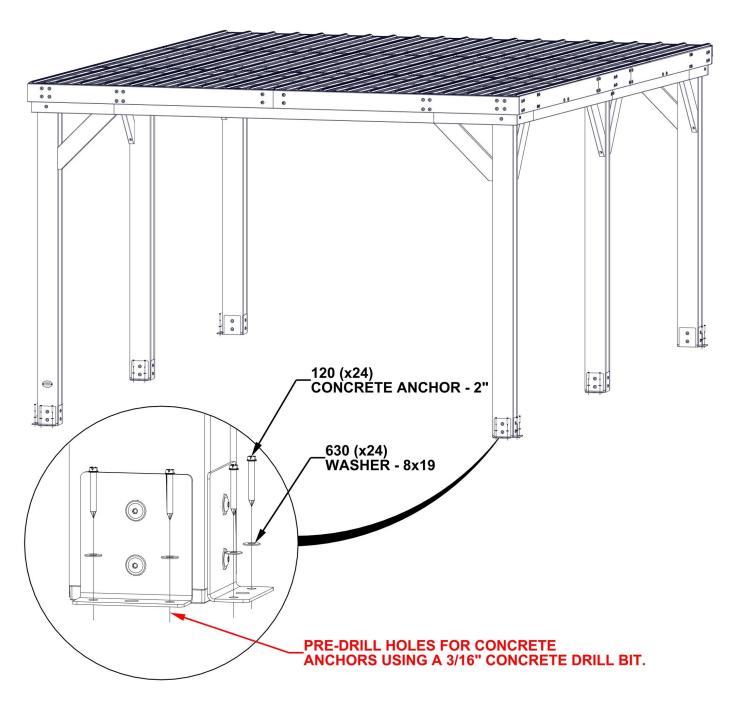

# **PowerPort**™

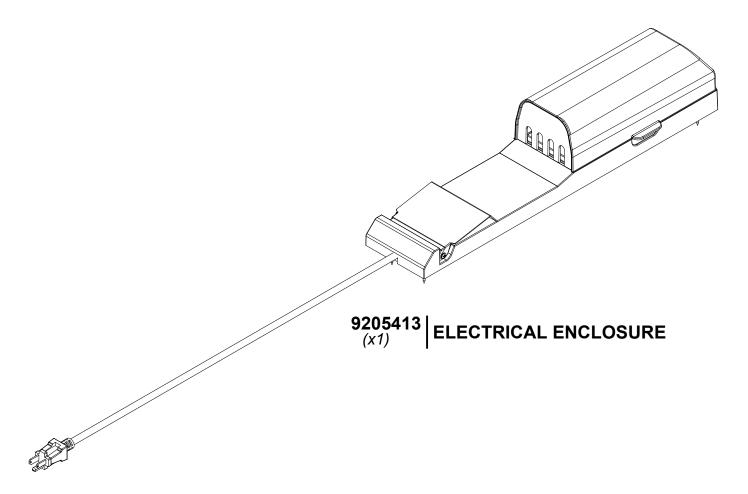

FOR POWERPORT INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE POWERPORT KIT. INSTALL ON ANY POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.