



Manufactured by: Backyard
Discovery
3305 Airport Drive,
Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone:
0800-118-2476 J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

GALVANIZED STEEL PATIO KITCHEN 4-PIECE

MODEL # : 2404458



WARNING

Cancer and Reproductive Harm
www.P65Warnings.ca.gov



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order
replacement parts *Para obtener instrucciones en español, visite*
www.backyarddiscovery.com







EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP



OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
 - Remember to double check for underground utilities and overhead electrical lines
-

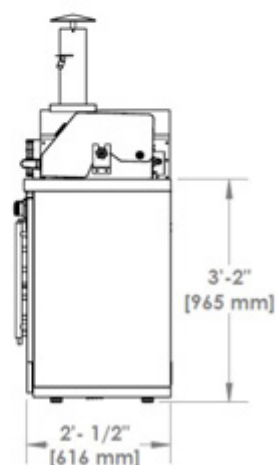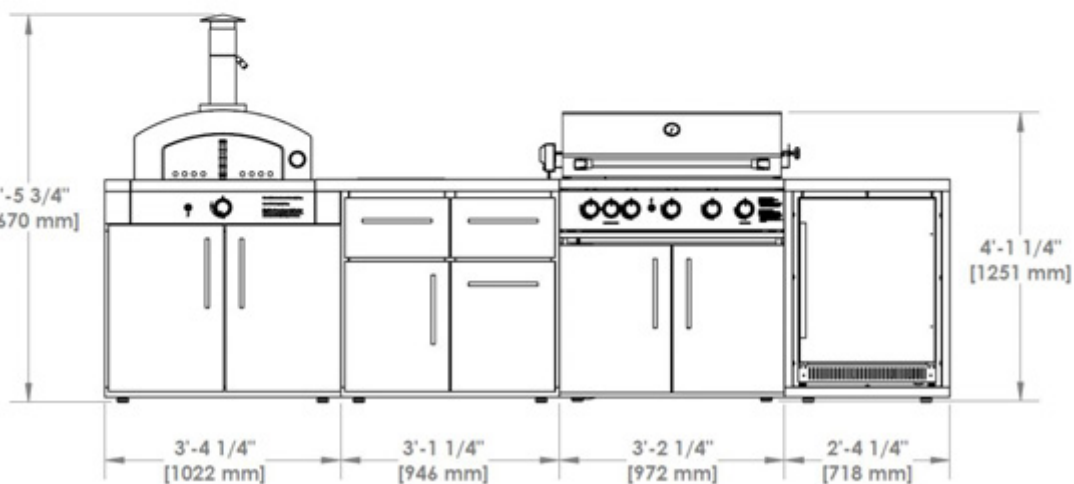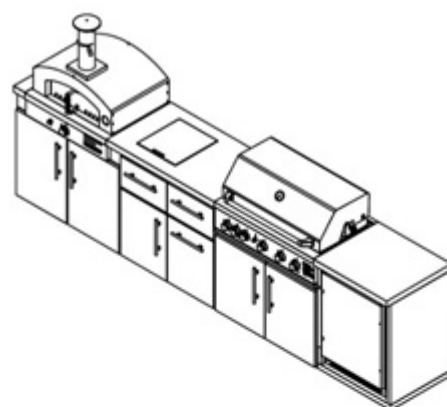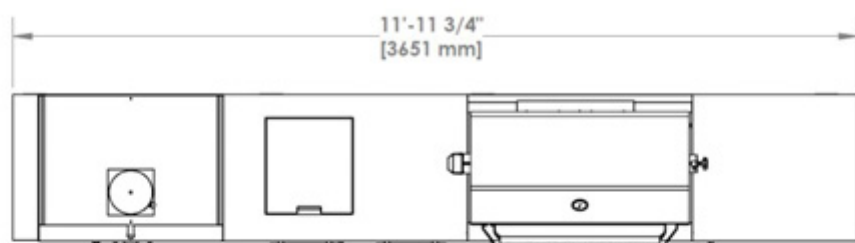

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)




D1 PIZZA OVEN CABINET DOOR ASSEMBLY L - A4M03546
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)




D2 PIZZA OVEN CABINET DOOR ASSEMBLY R - A4M03555
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

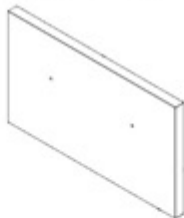


D3 SINK CABINET DRAWER PANEL ASSEMBLY - A4M03569
(x1) 17 3/4"x10 1/4"x15/16" (24x260x451)

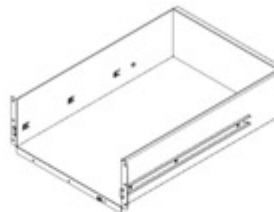

D4 SINK CABINET DRAWER BODY ASSEMBLY - A4M03571
(x1) 22 1/4"x16 1/16"x6 7/16" (164.2x408.4x565.4)

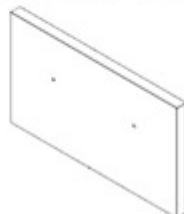

D5 SINK CABINET TRIM PANEL - A4M03576
(x1) 17 13/16"x10 1/4"x1" (26x260x452)



D6 SINK CABINET DOOR ASSEMBLY L - A4M03577
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)



D7 GRILL CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)




D8 GRILL CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)



D9 TRASH CAN PANEL ASSEMBLY - A4M03608
(x1) 22 1/4"x17 3/4"x15/16" (24.00x451.00x565.00)



G10 GRILL CABINET BACK PANEL ASSEMBLY - A4M03055
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

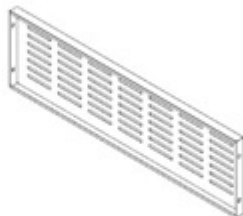

G11 GRILL VENTILATION PANEL - A4M03056
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)



H3 TRASH CAN BRACKET ASSEMBLY - A4M03610
(x1) 18 1/16"x15 13/16"x (35x401.60x458)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)




L1 PIZZA OVEN CABINET SHELF - A4M03548
(x1) 23 1/4"x19 5/16"x1" (25.00x490.50x591.00)




H4 HORIZONTAL BEAM ASSEMBLY L - A4M03575
(x4) 16 1/4"x3 3/8"x1" (25x85x413)



A2 MAGNET BRACKET - A4M03026
(x5) 1"x1 1/4"x3 1/8" (25x31x80)

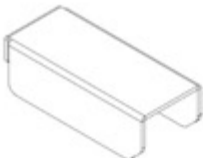

A5 SHELF BRACKET - A4M03141
(x4) 5/8"x7/8"x2 1/16" (16x22x53)

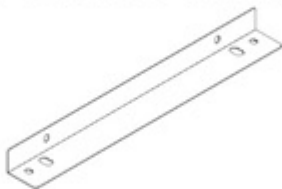

A6 ANGLED BRACKET - A4M03053
(x3) 1 3/8"x1 15/16"x17 1/8" (35x50x435)



A9 HOSE BRACKET ASSEMBLY - A4M03060
(x2) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)




A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x2) 1 15/16"x12 7/8"x14 3/4" (49x327x374)




A11 TRIANGLE PANEL - A4M03086
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)




M1 PIZZA OVEN CABINET MARBLE - A4M03553
(x1) 24 13/16"x4 5/16"x1 15/16" (50x109x630)

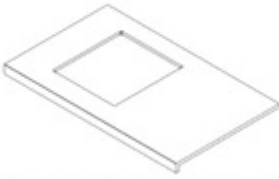

M2 SINK CABINET MARBLE - A4M03568
(x1) 41 1/2"x24 15/16"x1 15/16" (49x633x1054)

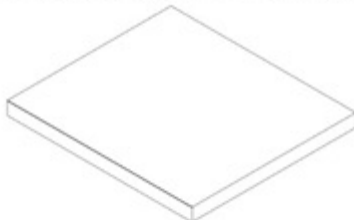


M3 FRIDGE CABINET MARBLE - A4M03602
(x1) 28 1/8"x24 15/16"x1 15/16" (50x634x715)

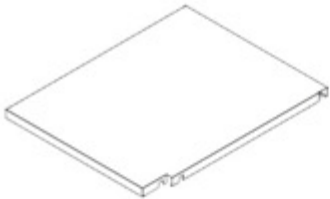

L2 GRILL CABINET SHELF ASSEMBLY - A4M03589
(x1) 23 1/4"x18 3/8"x1" (25.00x467.00x591.00)




H5 PIZZA OVEN CABINET HINGE CHANNEL ASSEMBLY - A4M03558
(x1) 26 5/8"x2 15/16"x11/16" (18x74.80x676)

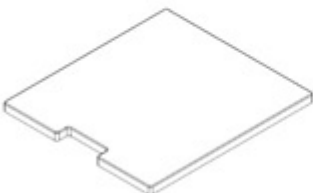


M5 SINK COVER MARBLE - A4M03147
(x1) 11/16"x14 3/4"x16 5/16" (18x375x415)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

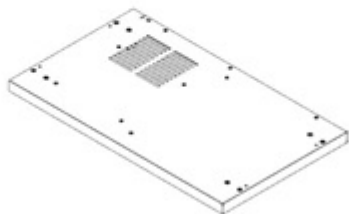


F1 PIZZA OVEN CABINET FLOOR PANEL ASSEMBLY - A4M03538
(x1) 40 3/16"x23 3/8"x2 5/8" (66x594x1020)

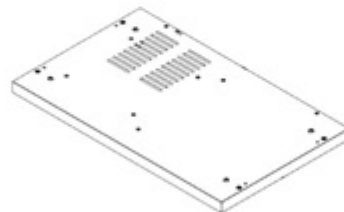

F2 GRILL CABINET FLOOR PANEL ASSEMBLY - A4M03048
(x1) 2 5/8"x23 3/8"x38 1/4" (66x594x972)

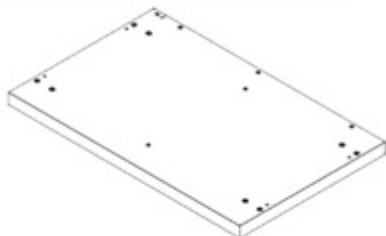

F3 SINK CABINET FLOOR PANEL ASSEMBLY - A4M03560
(x1) 37 3/16"x23 3/8"x2 5/8" (66x594x944)

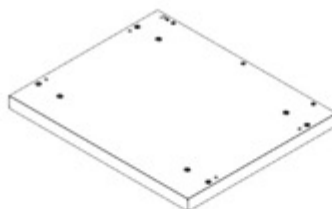

F4 FRIDGE CABINET FLOOR PANEL ASSEMBLY - A4M03595
(x1) 28 1/8"x23 3/8"x2 5/8" (66x594x715)



H2 STAINLESS STEEL HANDLE - A4M03024
(x8) 5/8"x1 9/16"x11 13/16" (16x40x300)



G1 PIZZA OVEN CABINET BACK PANEL ASSEMBLY - A4M03542
(x1) 38 3/4"x26 1/2"x1 3/16" (30x673.5x984)




O8 PIZZA OVEN VENTILATION PANEL - A4M03078
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)




G3 SINK CABINET BACK PANEL ASSEMBLY - A4M03564
(x1) 34 5/16"x33 3/8"x1 3/16" (30x847.2x872)




G4 FRIDGE CABINET BACK PANEL ASSEMBLY - A4M03599
(x1) 25 5/16"x33 3/8"x1 3/16" (30x847.2x643)

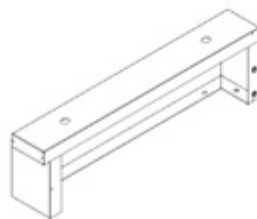

T5 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY L - A4M04537
(x1) 24 1/8"x4 5/16"x6 3/4" (109x172.2x612)

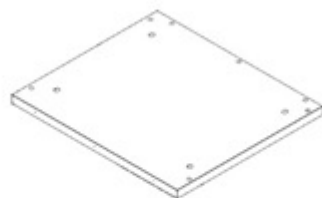

T7 FRIDGE CABINET TABLETOP - A4M03641
(x1) 27 3/8"x24 1/8"x1 1/4" (32x612x696)

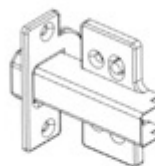

A4M03025 FULL OVERLAY HINGE
(x10)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)




S14 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY - A4M04536
(x1) 26 9/16"x23 3/8"x1 3/8" (35x594x675)



S2 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY M - A4M03545
(x1) 26 1/2"x23 3/8"x1 3/8" (35x593x673.5)




S3 SINK CABINET SIDE PANEL ASSEMBLY L - A4M03562
(x1) 33 3/8"x23 3/8"x1 3/8" (35.00x594.00x848.20)




S4 SINK CABINET SIDE PANEL ASSEMBLY R - A4M03563
(x1) 33 3/8"x23 3/8"x2 5/8" (67x594x848.20)



S5 SINK CABINET SIDE PANEL ASSEMBLY M - A4M03567
(x1) 33 3/8"x23 3/8"x2 3/16" (56.2x593x847)

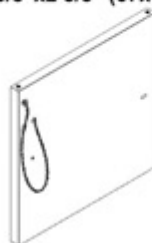

S6 GRILL CABINET SIDE PANEL ASSEMBLY M - A4M03586
(x1) 23 3/8"x22 7/8"x1 3/8" (35x581x593)

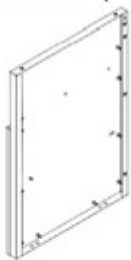


S7 FRIDGE CABINET SIDE PANEL ASSEMBLY L - A4M03597
(x1) 33 7/16"x23 3/8"x2 1/16" (53x594x849.7)




S8 FRIDGE CABINET SIDE PANEL ASSEMBLY R - A4M04535
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.20)




T1 PIZZA OVEN CABINET TABLETOP ASSEMBLY - A4M03543
(x1) 40 3/16"x23 3/8"x1 1/4" (32x594x1020)

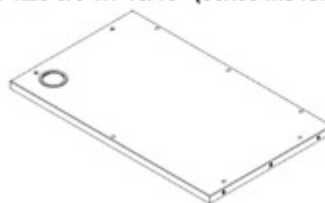

T2 GRILL TABLETOP ASSEMBLY - A4M03057
(x1) 1 1/4"x23 3/8"x38 3/16" (32x594x970)

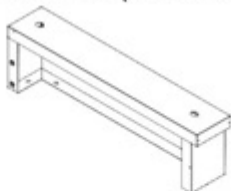


T3 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY R - A4M03551
(x1) 612x4 5/16"x6 3/4" (109x172.2x612)

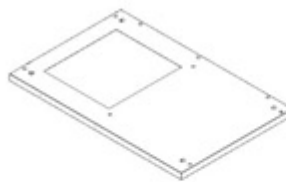

T4 SINK CABINET TABLETOP FRAME - A4M03566
(x1) 37 3/16"x24 1/8"x1 1/4" (32x612x944)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

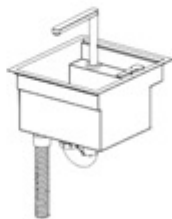


A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)




A4M03151 GARDEN HOSE ADAPTER
(x1)

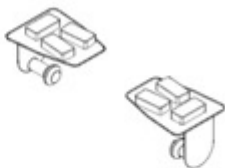

A4M02290 MAGNETIC PAPER TOWEL HOLDER
(x1)

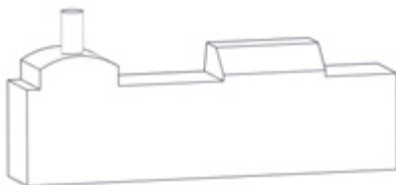

A6P01385 OUTDOOR KITCHEN CABINET COVER
(x1)

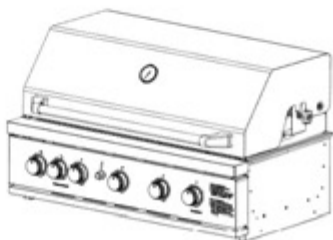

9240025 OUTDOOR KITCHEN GRILL KIT
(x1)




9240018 OUTDOOR KITCHEN PIZZA OVEN
(x1)



9240162 OUTDOOR KITCHEN FRIDGE - RIGHT OPEN
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS




H101185 | PHILLIPS FLAT HEAD
(x60) | 8-32x.5 SCREW




H101103 | TORX SOCKET SCREW
(x27) |

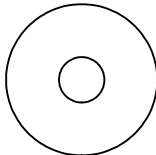


H101054 | SEALANT WASHER
(x10) |




H101287 | PAN HEAD SCREW
(x6) | 8-32x1" SS




H101307 | SHOULD BOLT
(x14) | 8-32x30mm SS

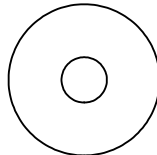


H101053 | STEEL WASHER
(x10) | 6x20




H101289 | PAN HEAD SCREW
(x42) | 8-32x1/2" SS




H101292 | TORX PAN HEAD
(x18) | 1/4-20x13/32"

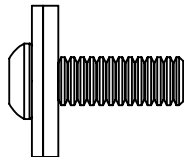


H101202 | TORX PAN HEAD
(x118) | 1/4-20x3/4 ASSY




H101294 | HEX DRIVER
(x1)

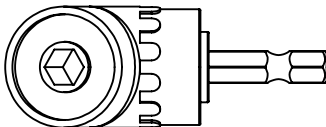


H101114 | RIGHT ANGLE DRILL ADAPTER
(x1) |



H100147 | TORX BIT
(x1) | T-30

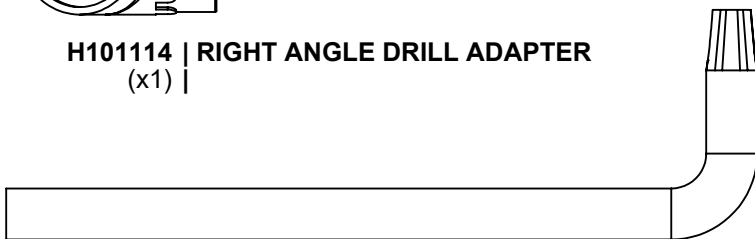

H100114 | TORX WRENCH
(x1) | T-30



H101100 | MAGNETIC DRIVER
(x1)


PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the metal and hardware.

METAL PARTS:


- Organize metal parts by the three-digit, alpha-numeric part label on each bag (ex. A01).
- If there are multiple parts with the same part label, stack those pieces together.
- Part labels can be found on the bags of the parts.
- Keep parts in bags until required step.
- Allow yourself plenty of room - the metal pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY PART OR STEP NUMBER.

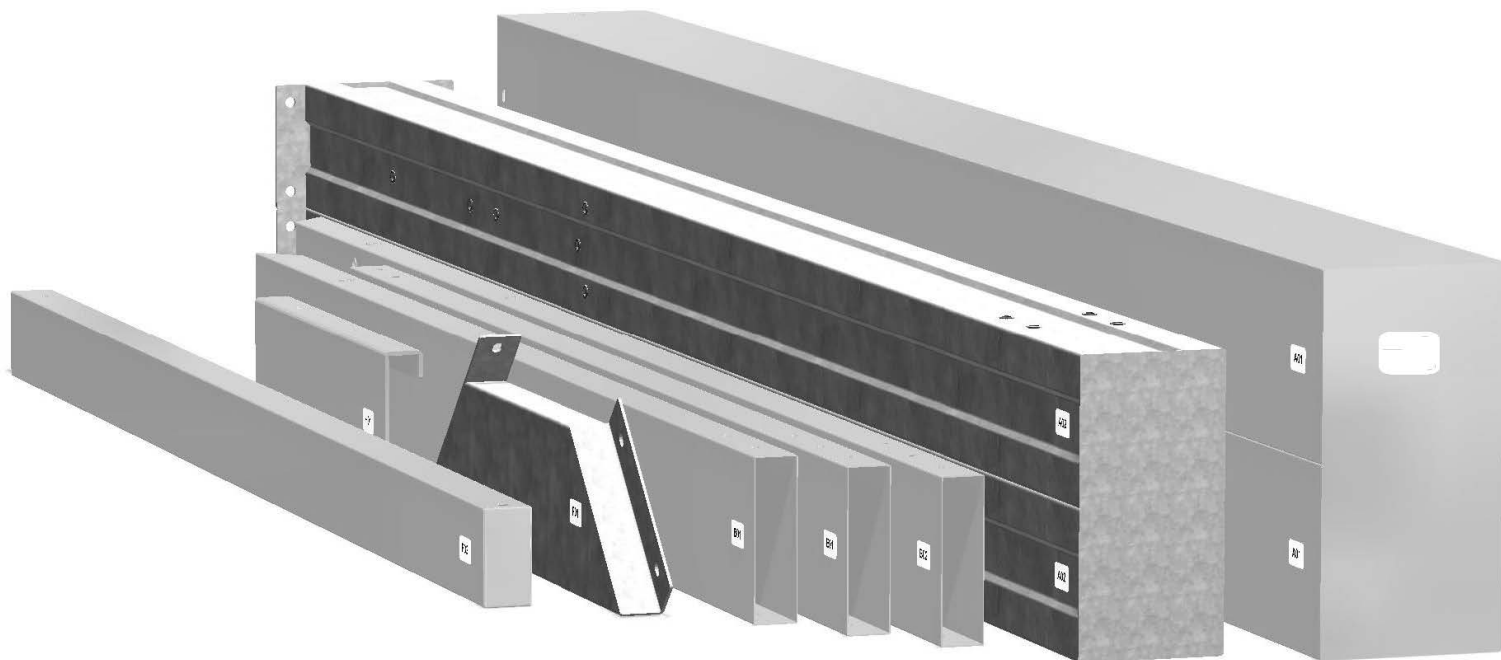

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (e.g. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

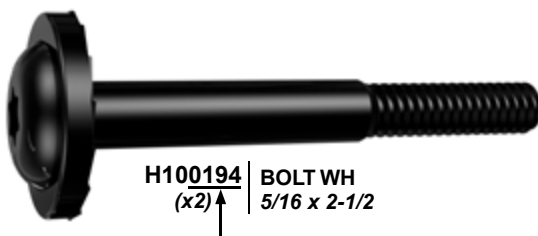


PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill
or Electric Drill



Drill
Attachments:
Phillips Head

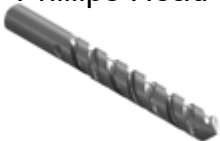

1/8", 3/16", 3/8" &
7/16" Drill Bits



Phillips Screw Driver



Open End
Wrenches
1/2" & 9/16"




3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets 1/2" & 7/16"
Deep Sockets




Claw Hammer




Rubber Mallet
- Optional

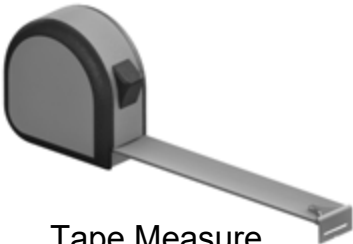

Tape Measure

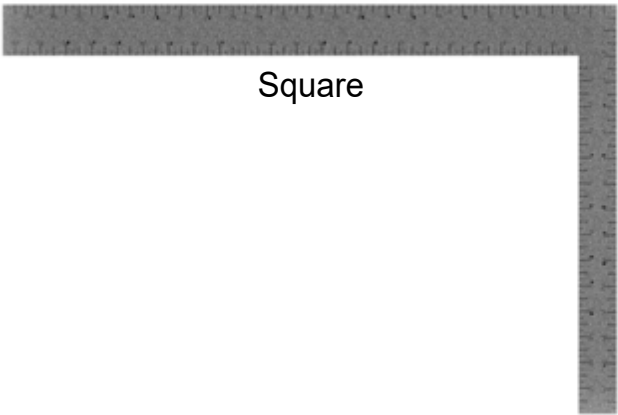

Square

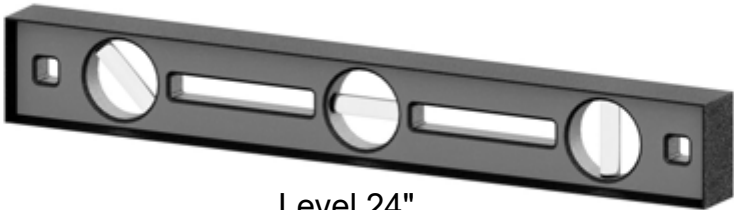


Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD


There are several types of assembly instructions available to you.

1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)

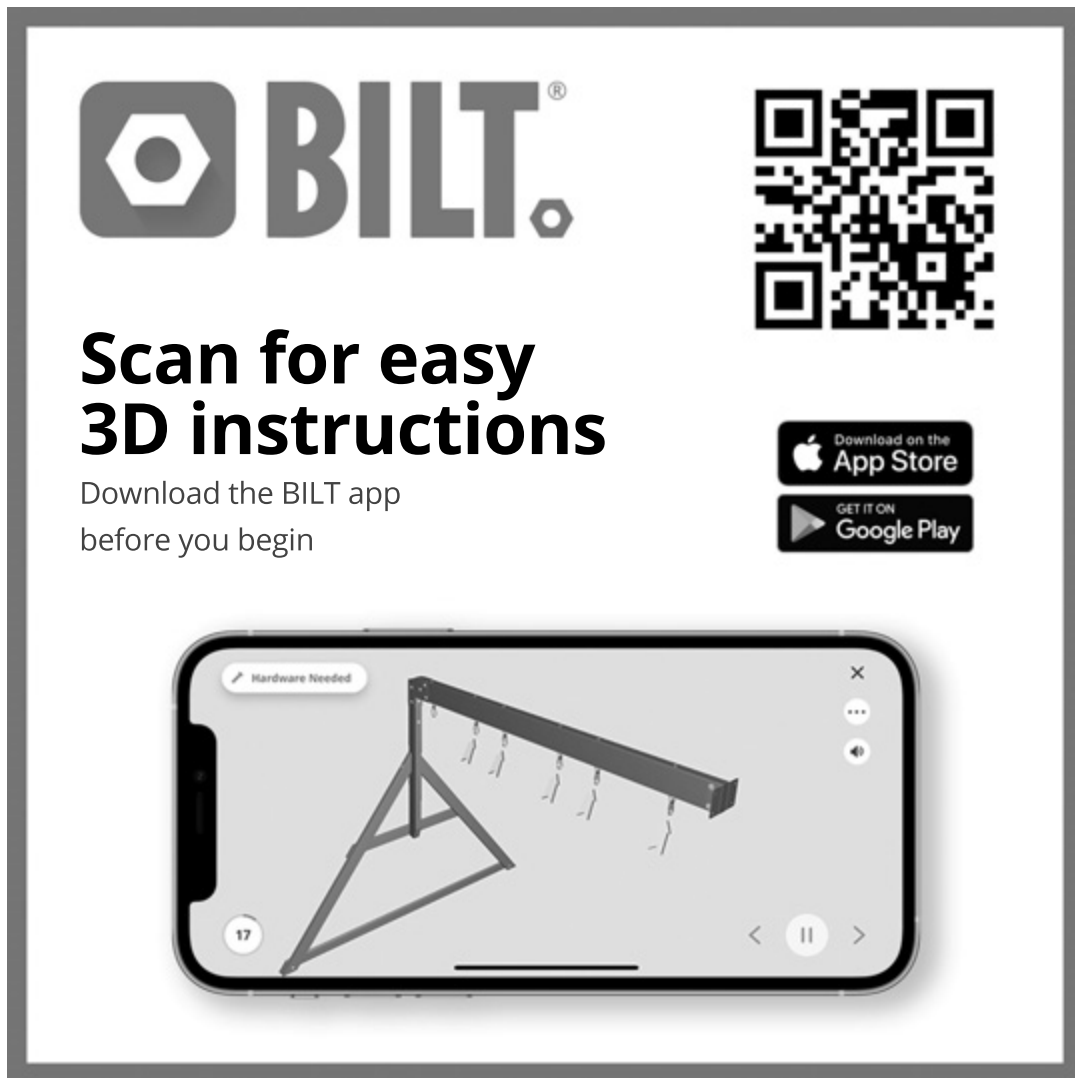

STEP 1 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

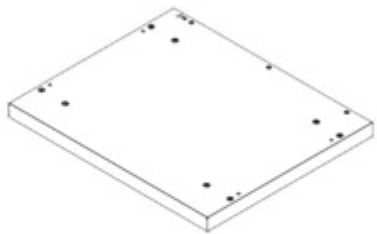


F4 FRIDGE CABINET FLOOR PANEL ASSEMBLY - A4M03595
(x1) 28 1/8"x23 3/8"x2 5/8" (66x594x715)



S8 FRIDGE CABINET SIDE PANEL ASSEMBLY R - A4M04535
(x1) 33 3/8"x23 3/8"x1 15/16" (50x594x848.20)

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR KITCHEN WILL BE.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

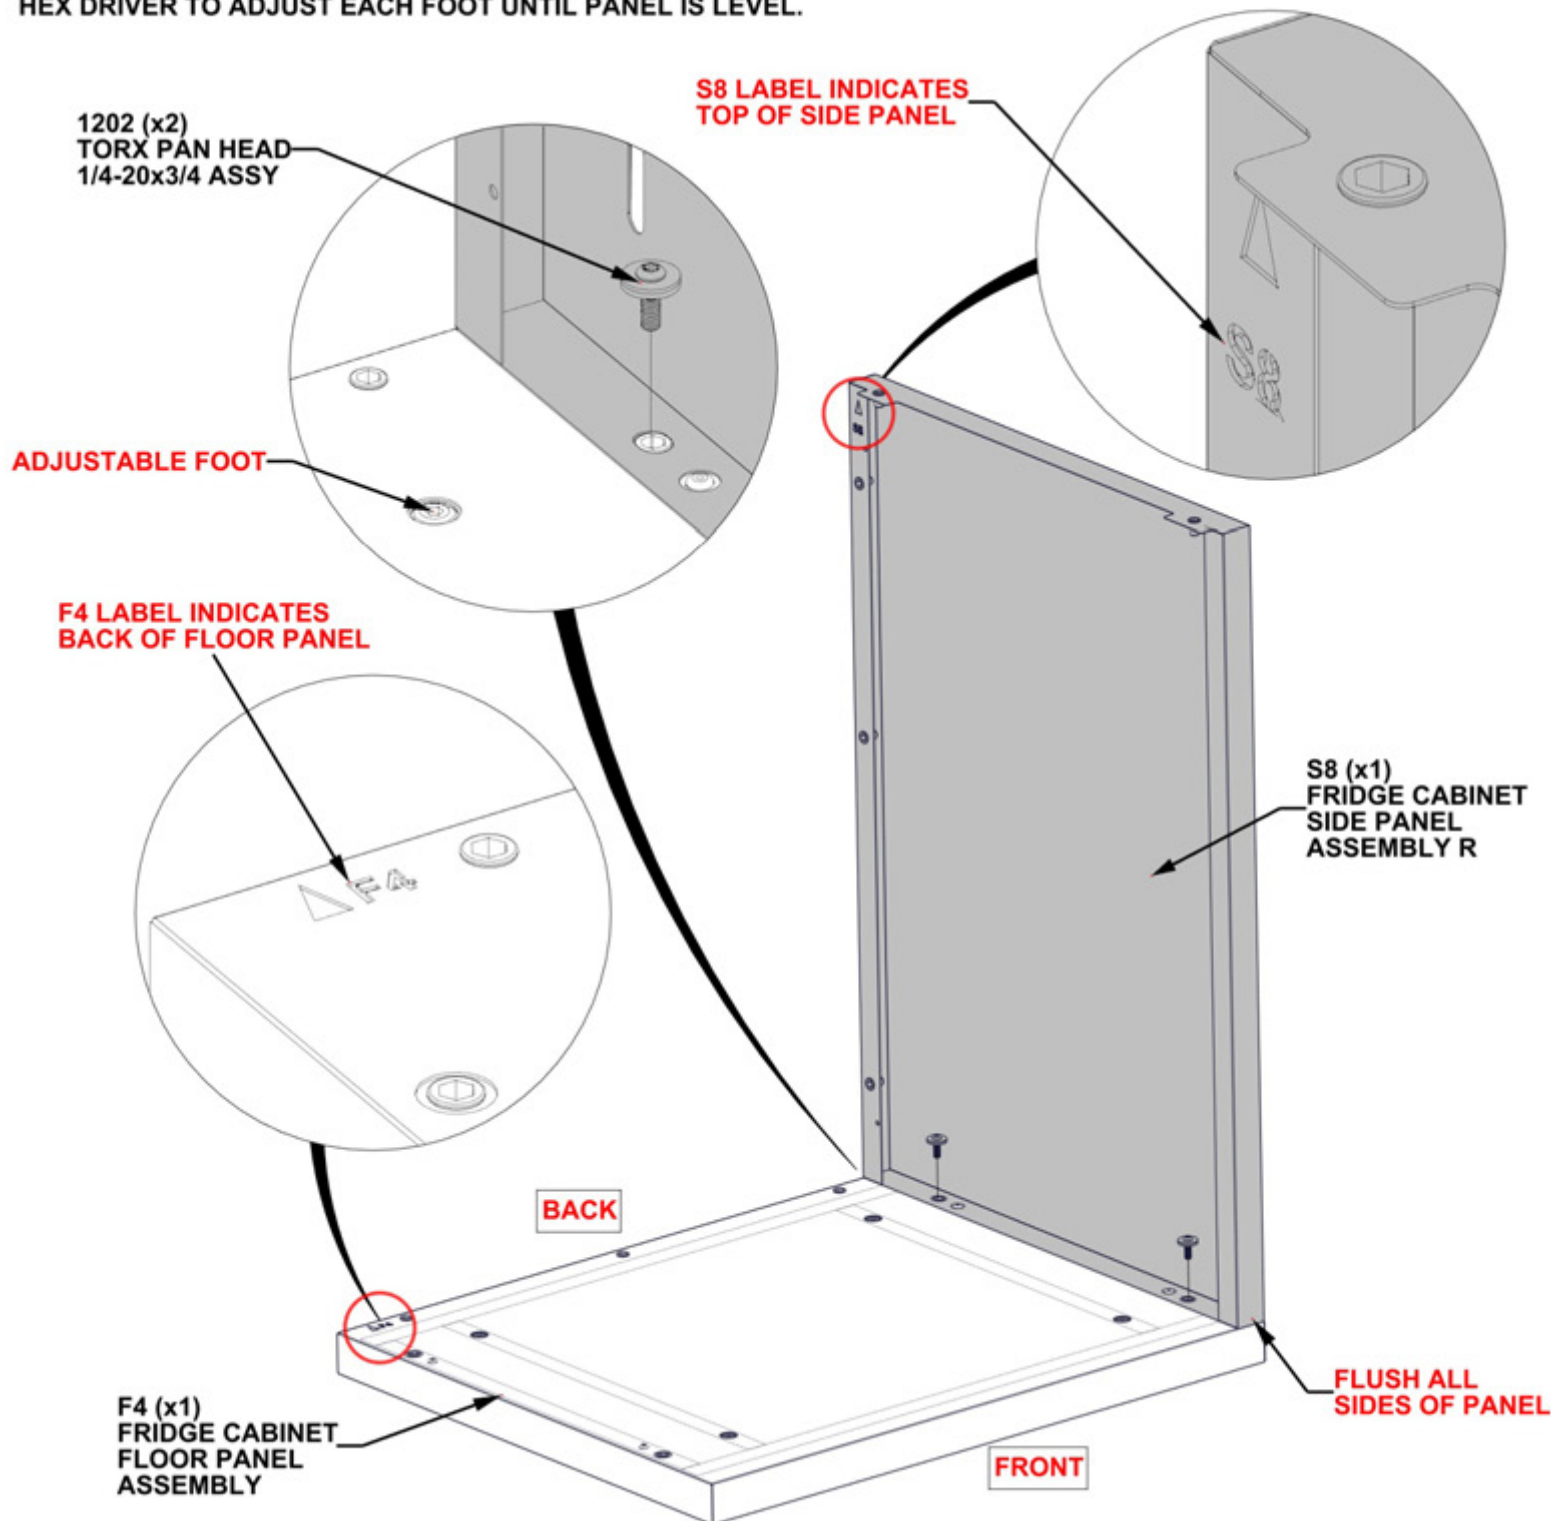


STEP 2 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




S7 FRIDGE CABINET SIDE PANEL ASSEMBLY L - A4M03597
(x1) 33 7/16"x23 3/8"x2 1/16" (53x594x849.7)

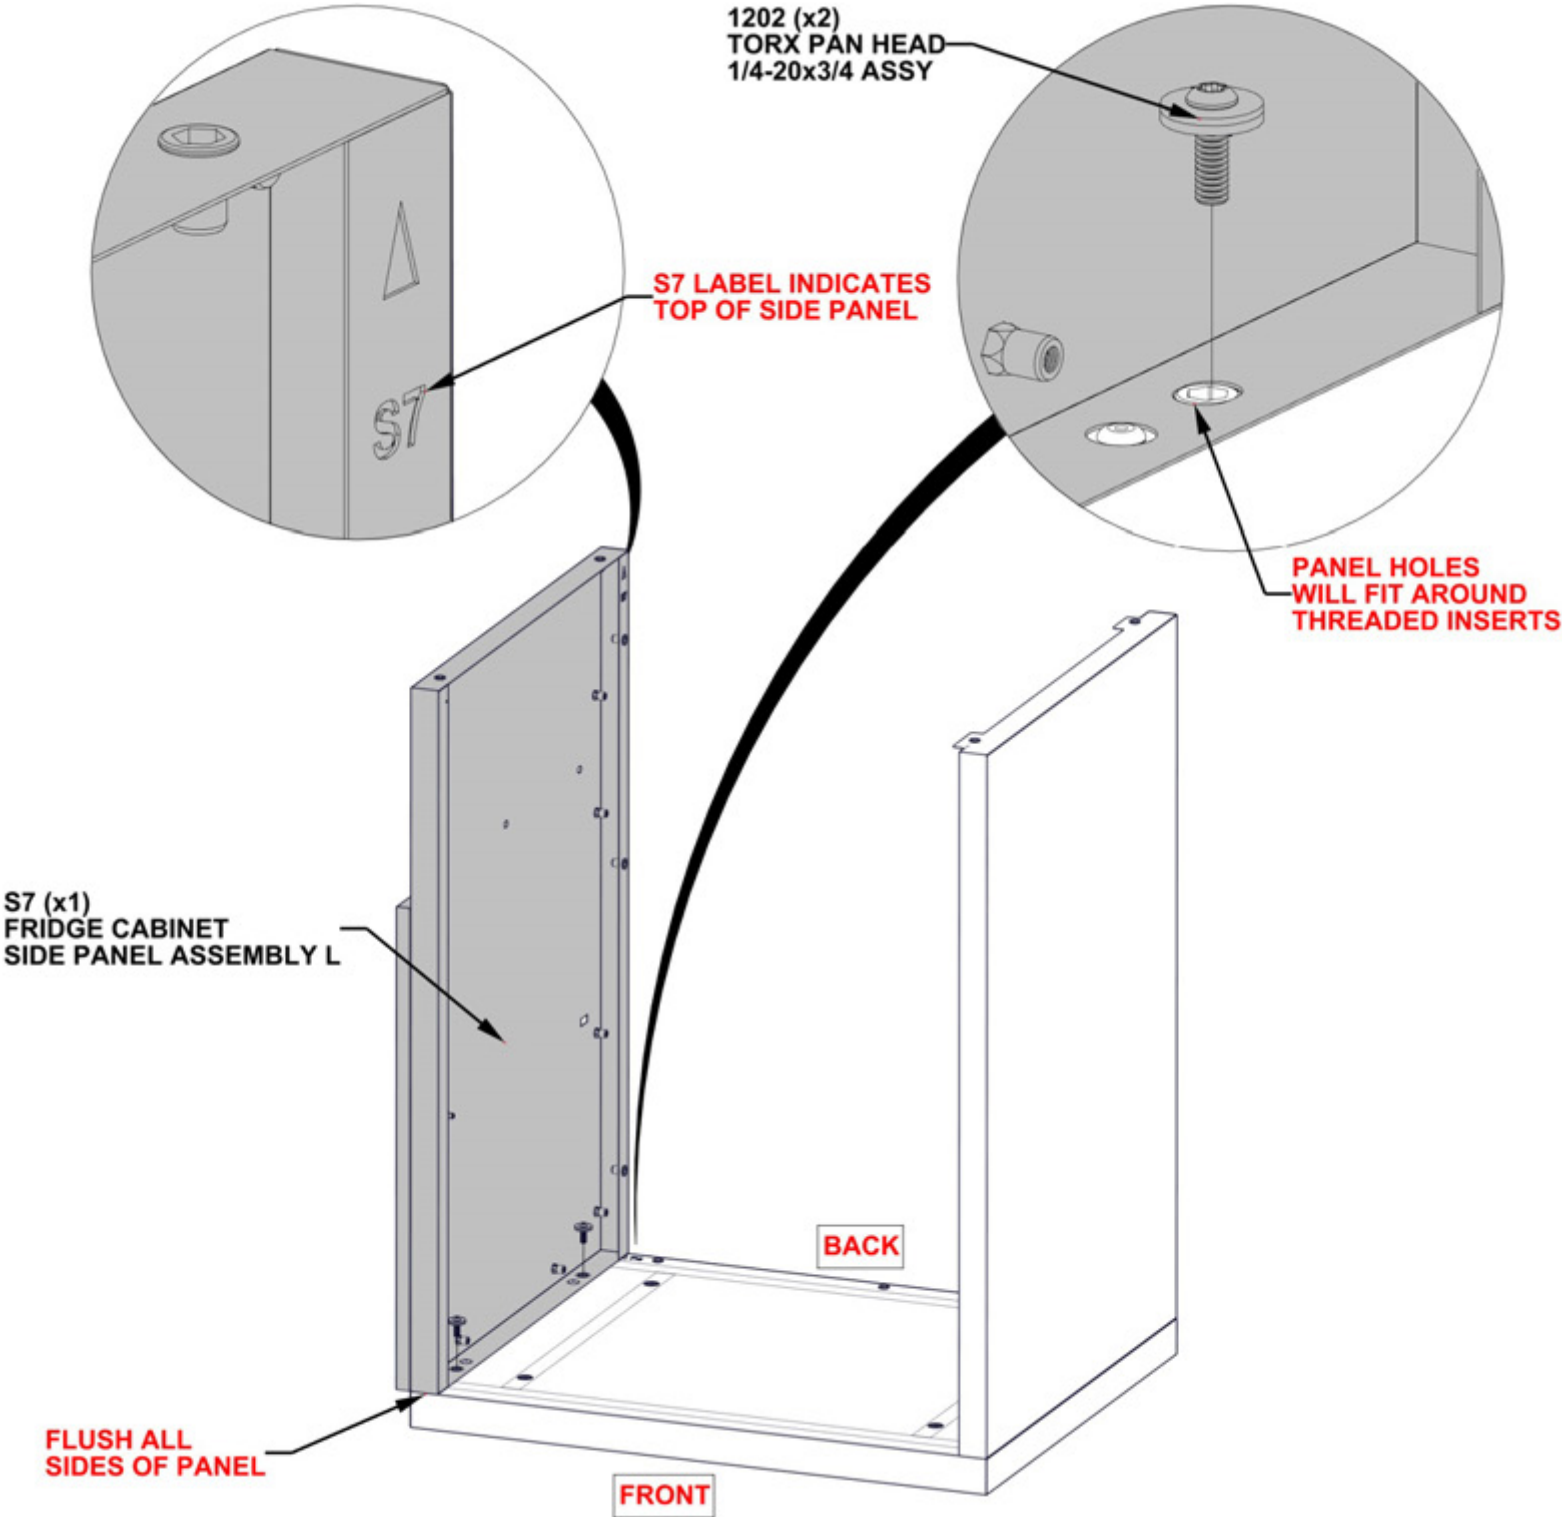


STEP 3 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

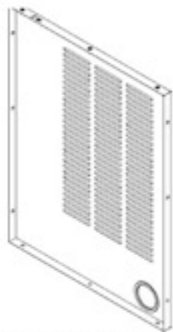

G4 FRIDGE CABINET BACK PANEL ASSEMBLY - A4M03599
(x1) 25 5/16"x33 3/8"x1 3/16" (30x847.2x643)

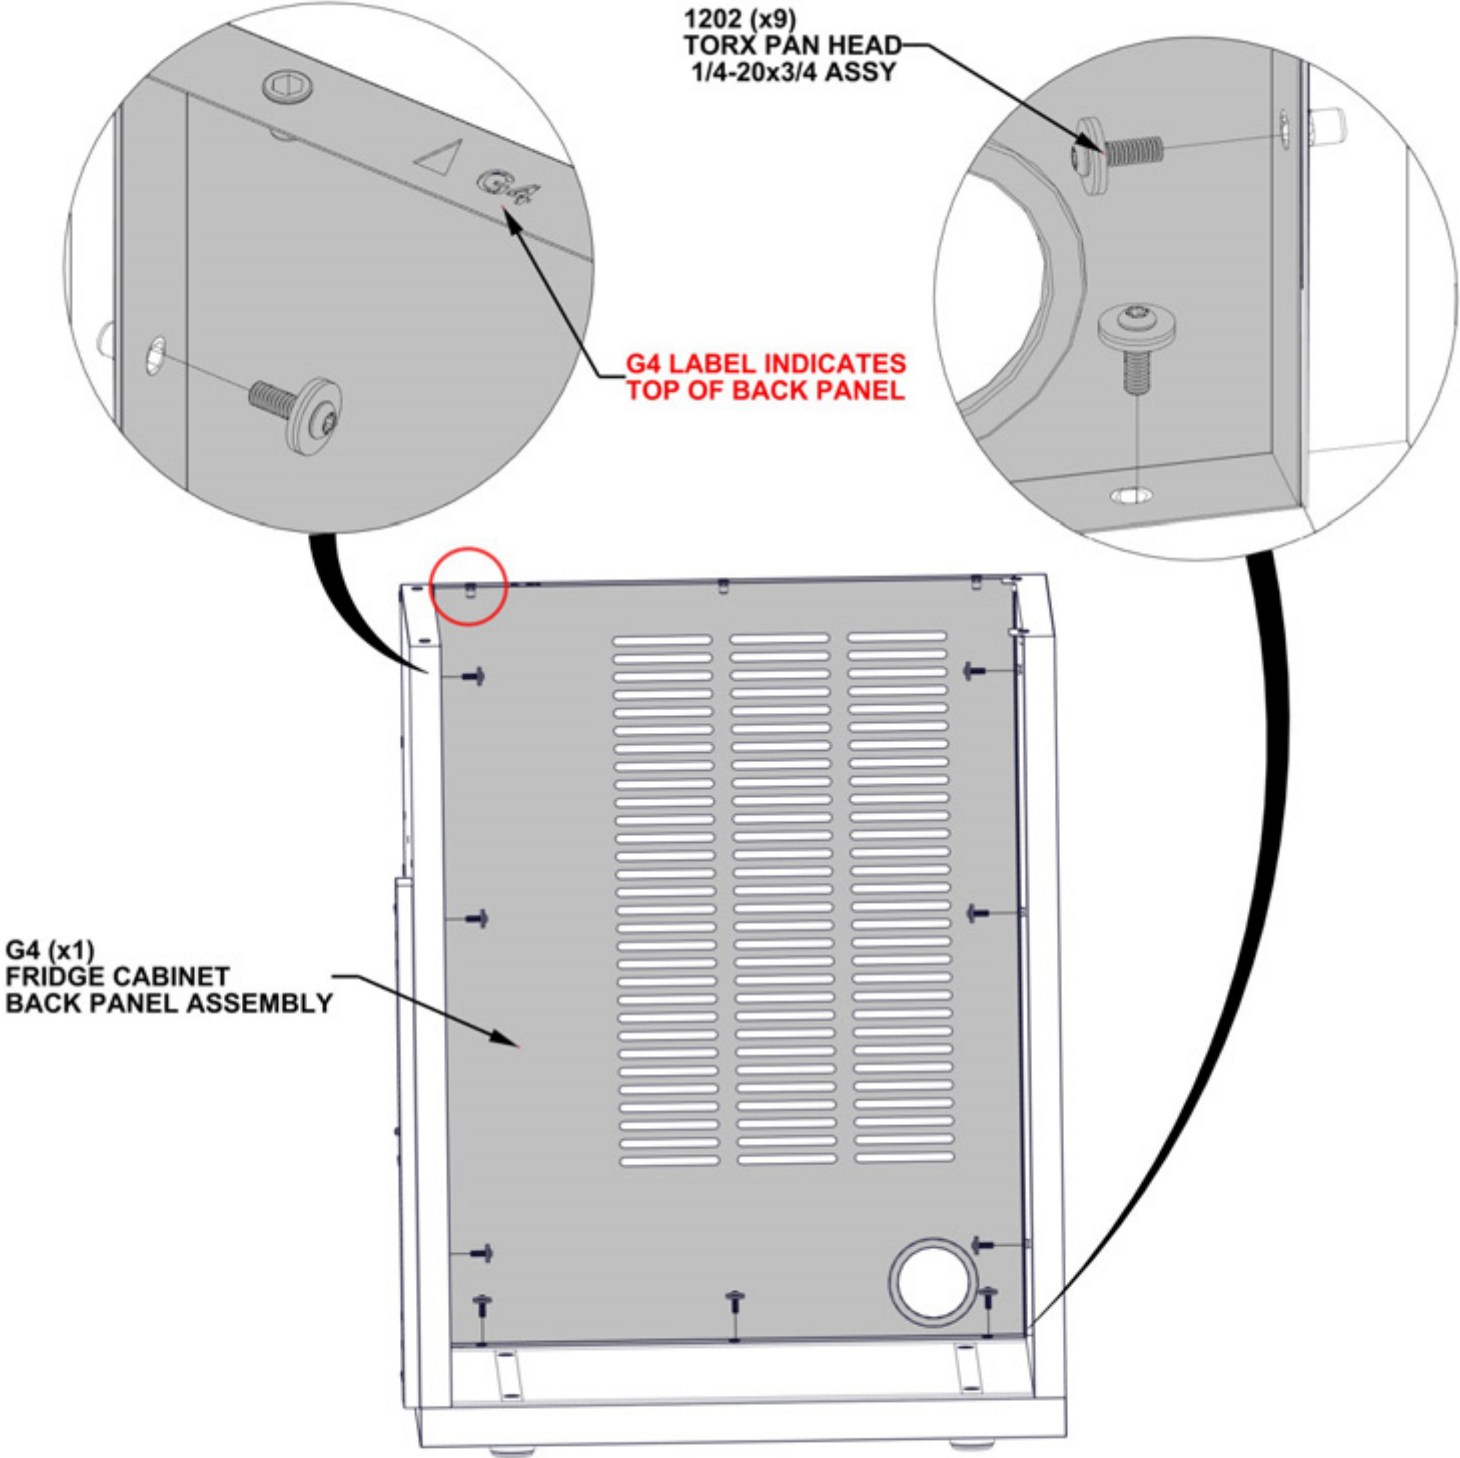


STEP 4 - FRIDGE CABINET ASSEMBLY

Qty	PartNo	Description
7	H101103	TORX SOCKET SCREW 1/4-20




T7 FRIDGE CABINET TABLETOP - A4M03641
(x1) 27 3/8"x24 1/8"x1 1/4" (32x612x696)

- FLUSH BACK AND SIDES OF PANEL ASSEMBLY.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

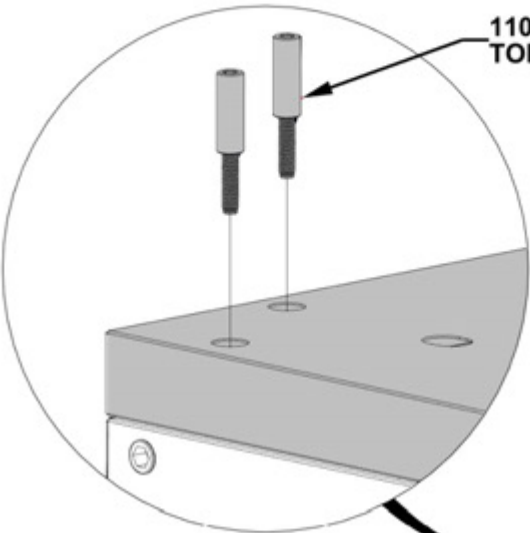


1103 (x7)
TORX SOCKET SCREW 1/4-20

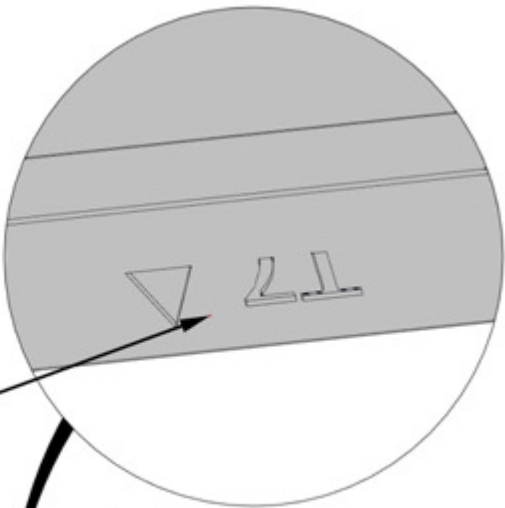


T7 LABEL ON BOTTOM
SIDE INDICATES BACK

T7 (x1)
FRIDGE CABINET TABLETOP

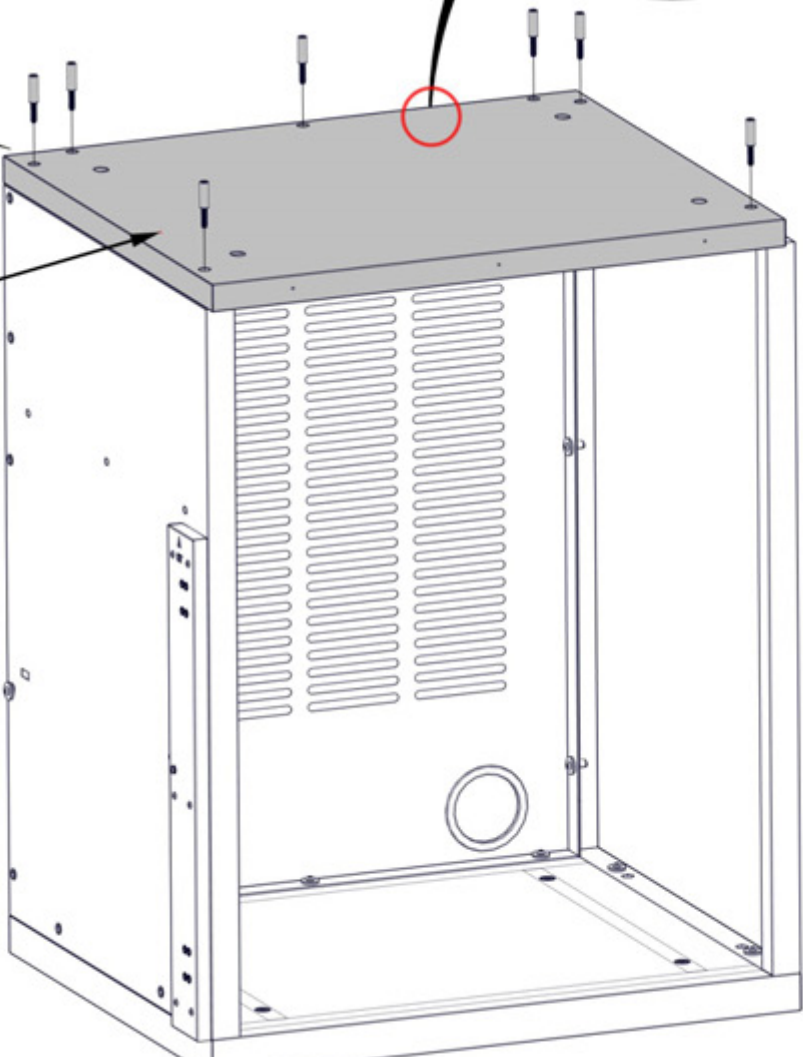


STEP 5 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

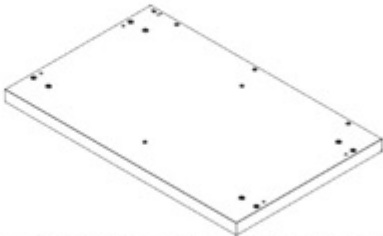


F3 SINK CABINET FLOOR PANEL ASSEMBLY - A4M03560
(x1) 37 3/16"x23 3/8"x2 5/8" (66x594x944)

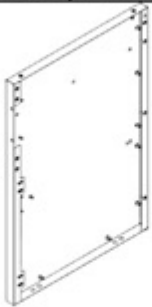


S3 SINK CABINET SIDE PANEL ASSEMBLY L - A4M03562
(x1) 33 3/8"x23 3/8"x1 3/8" (35.00x594.00x848.20)

- POSITION FLOOR PANEL IN THE PROXIMITY OF WHERE YOUR KITCHEN WILL BE.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

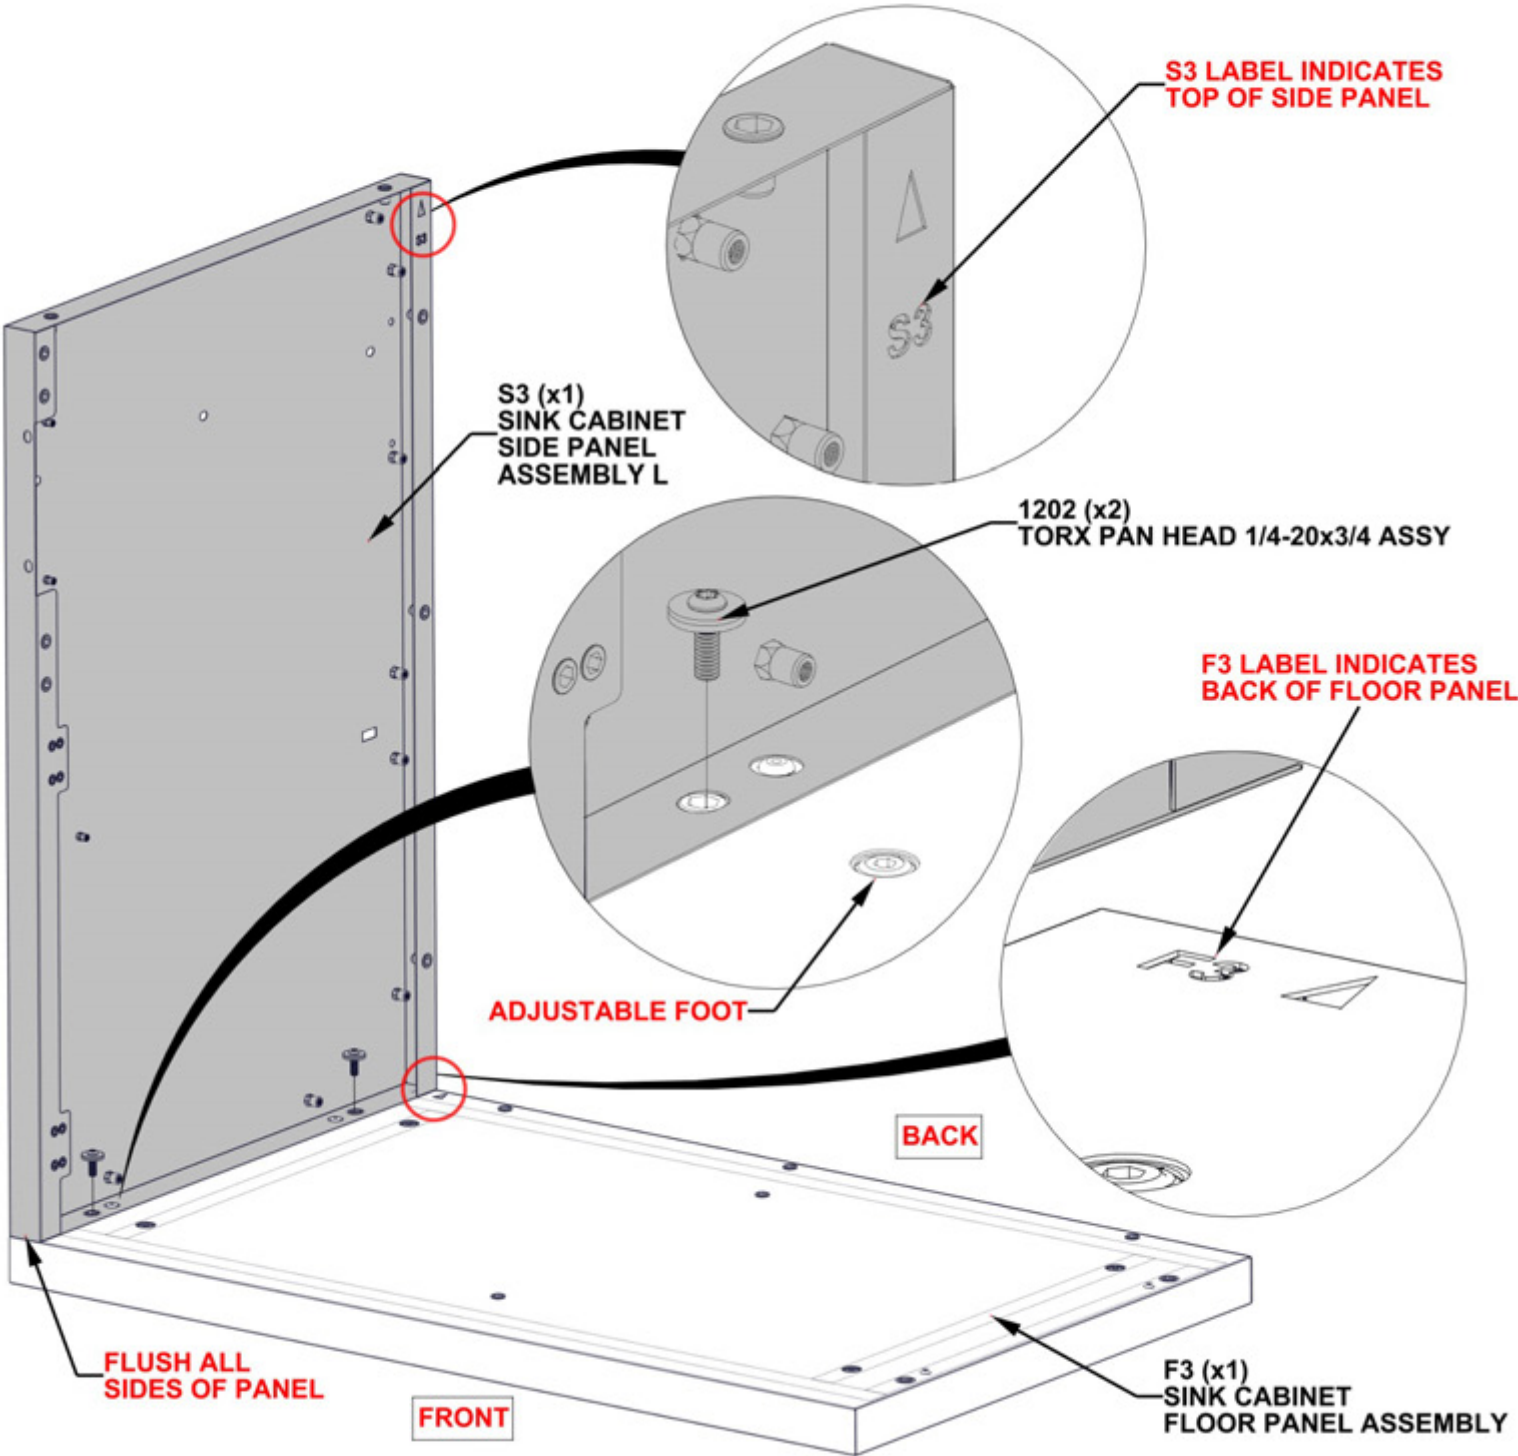


STEP 6 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

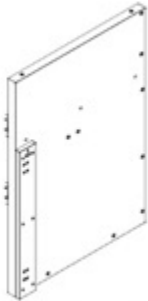

S4 SINK CABINET SIDE PANEL ASSEMBLY R - A4M03563
(x1) 33 3/8"x23 3/8"x2 5/8" (67x594x848.20)

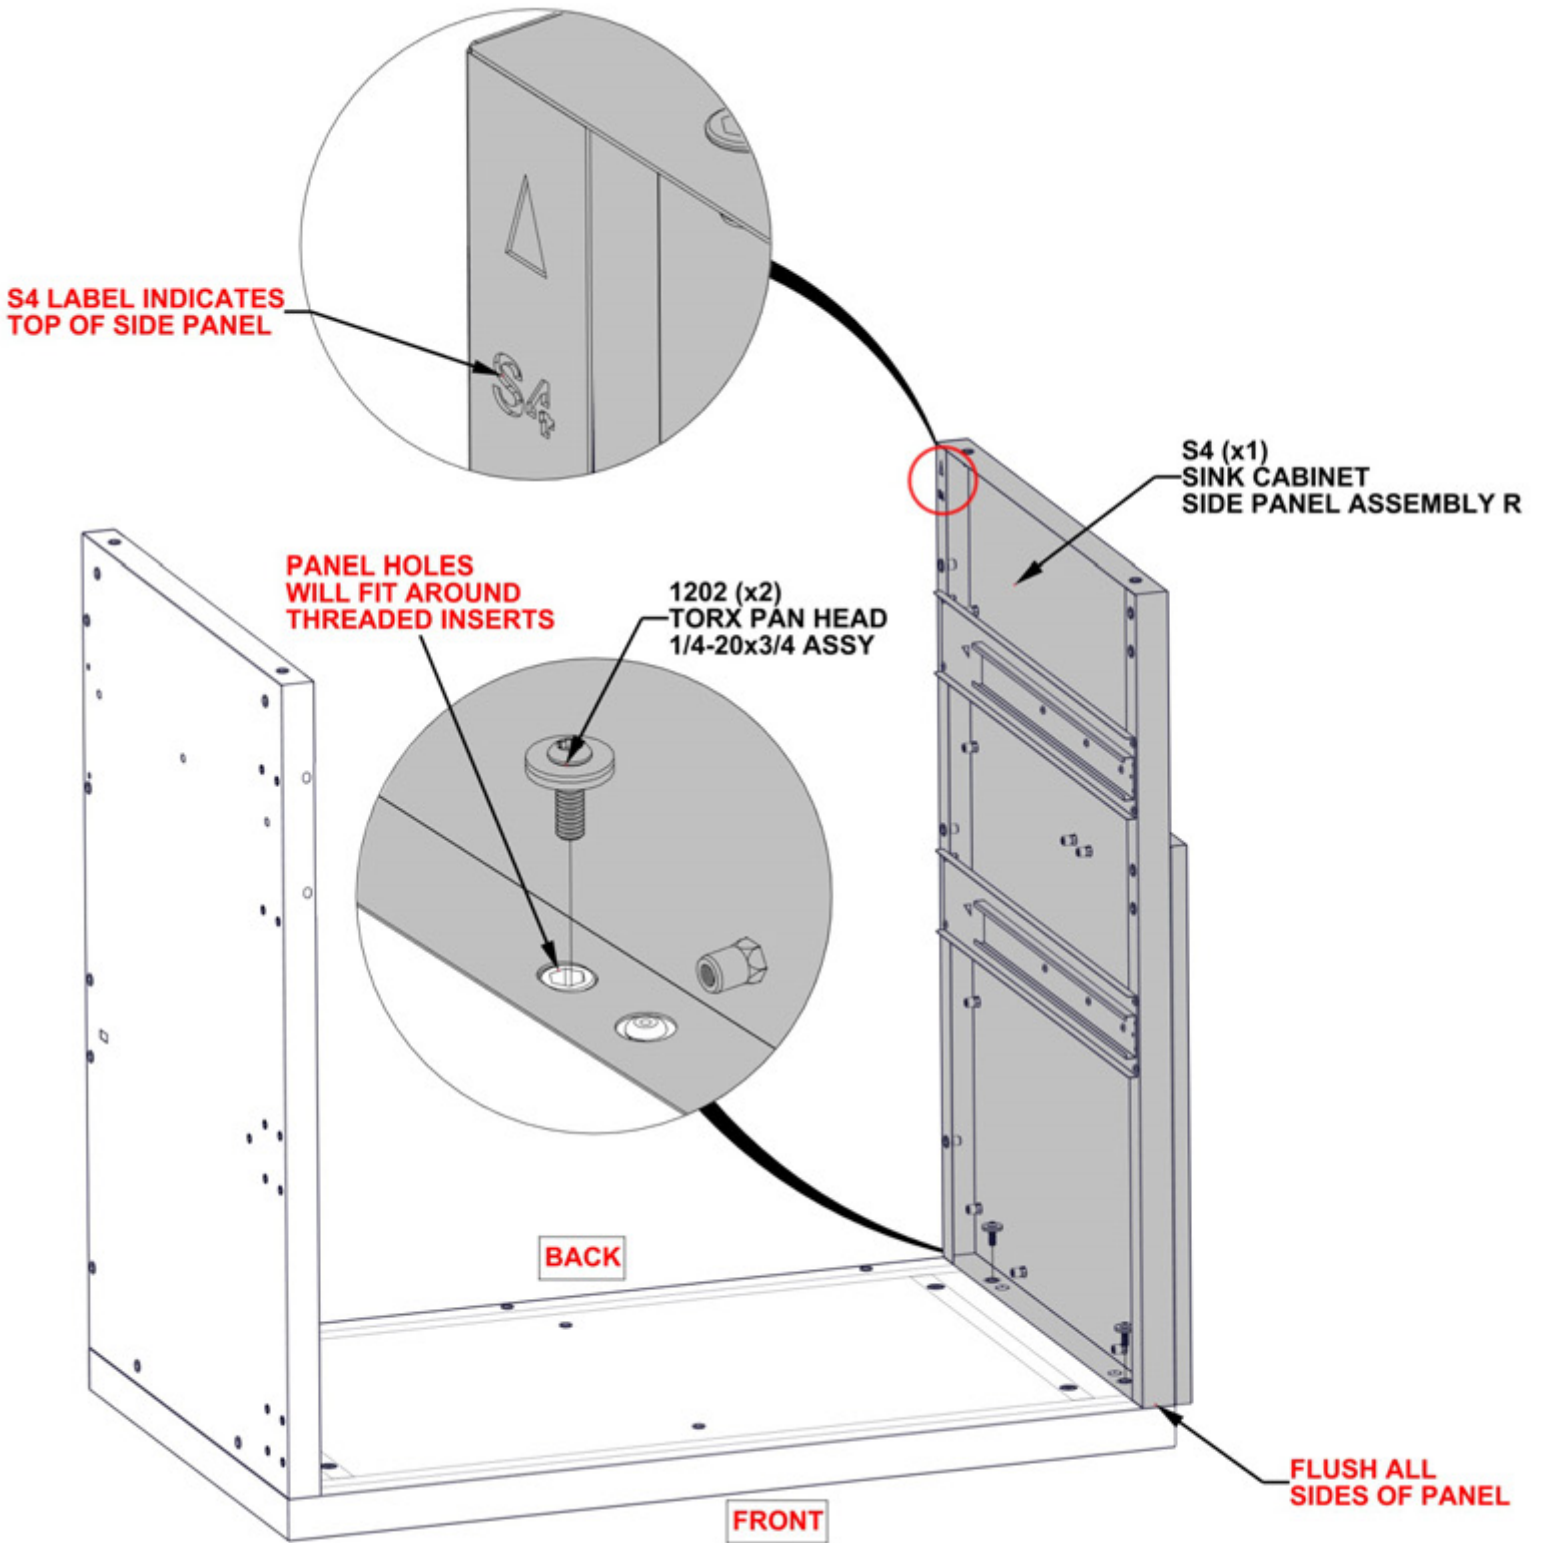


STEP 7 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




G3 SINK CABINET BACK PANEL ASSEMBLY - A4M03564
(x1) 34 5/16"x33 3/8"x1 3/16" (30x847.2x872)


G3 LABEL INDICATES
TOP OF BACK PANEL

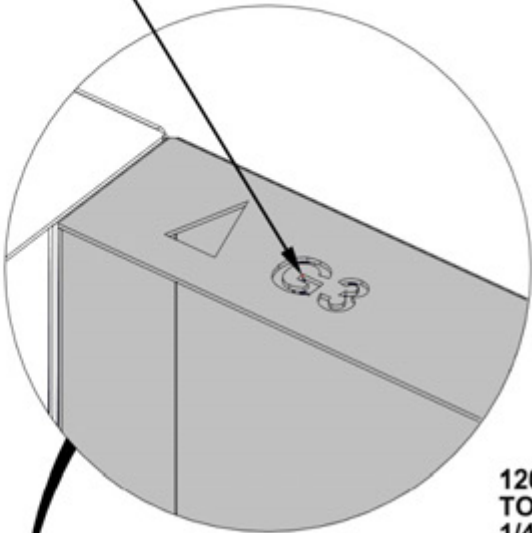

1202 (x9)
TORX PAN HEAD
1/4-20x3/4 ASSY

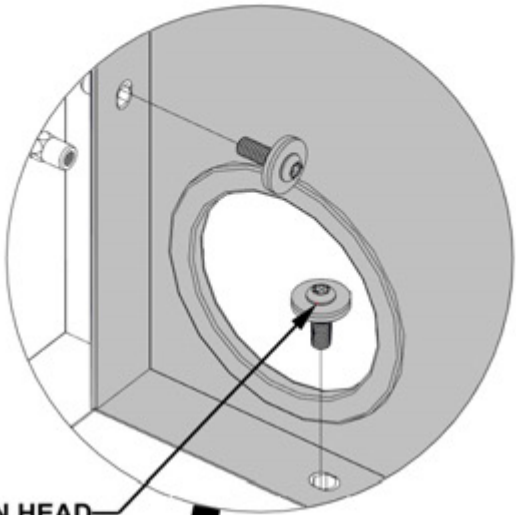

G3 (x1)
SINK CABINET BACK
PANEL ASSEMBLY

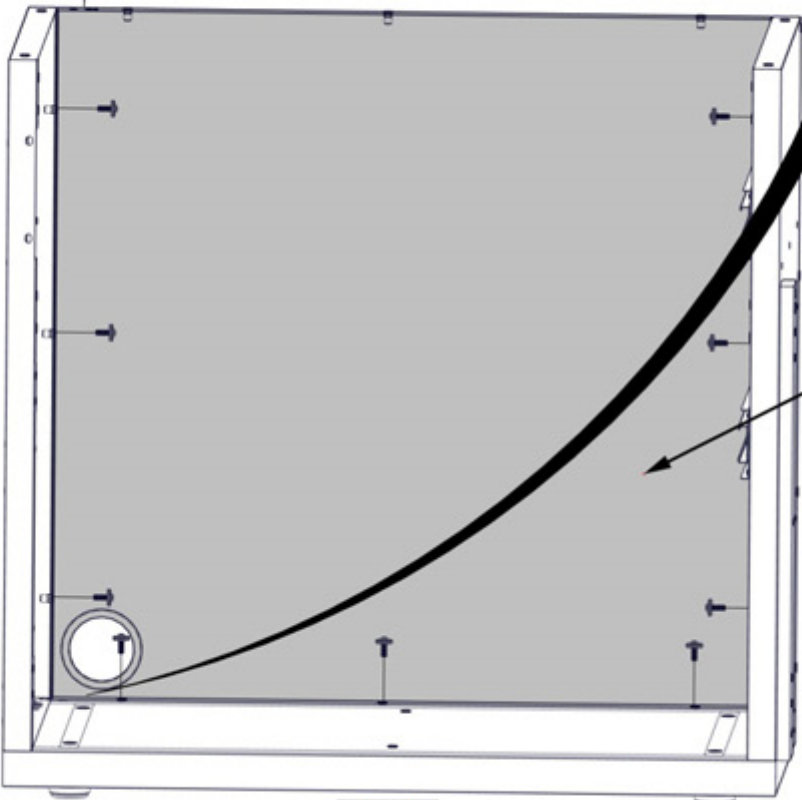

FRONT

STEP 8 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




S5 SINK CABINET SIDE PANEL ASSEMBLY M - A4M03567
(x1) 33 3/8"x23 3/8"x2 3/16" (56.2x59.3x847)

1202 (x2)
TORX PAN HEAD
1/4-20x3/4 ASSY

FLUSH FRONT
SURFACE


S5 LABEL INDICATES
TOP OF SIDE PANEL

S5 (x1)
SINK CABINET SIDE
PANEL ASSEMBLY M

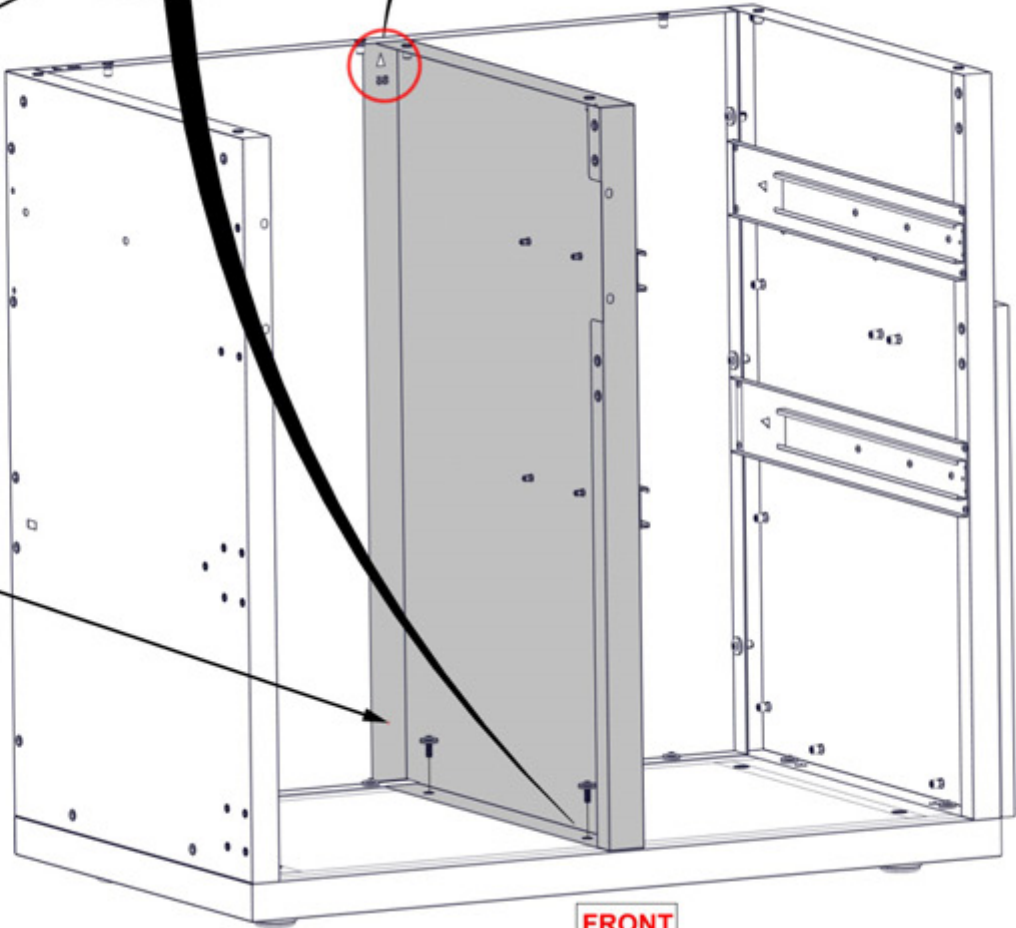

STEP 9 - SINK CABINET ASSEMBLY


Qty	PartNo	Description
16	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

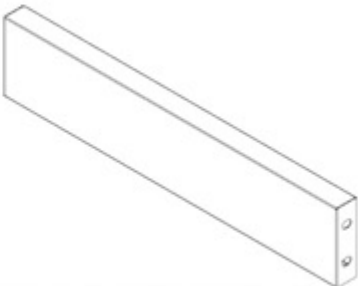


H4 HORIZONTAL BEAM ASSEMBLY L - A4M03575
(x4) 16 1/4"x3 3/8"x1" (25x85x413)

- HARDWARE ATTACHES ON INSIDE OF CABINET


1202 (x16)
TORX PAN HEAD
1/4-20x3/4 ASSY

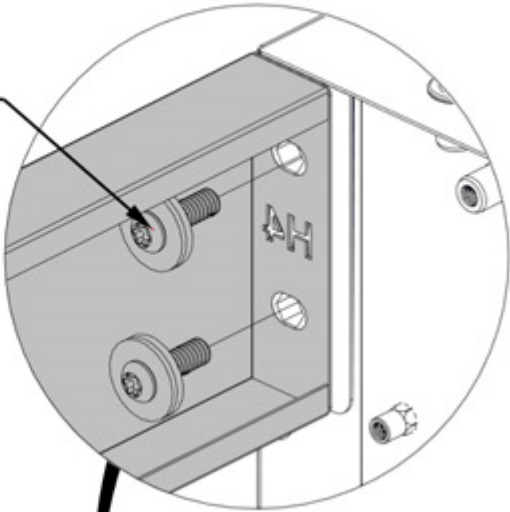

THREADED INSERTS
FACE DOWN

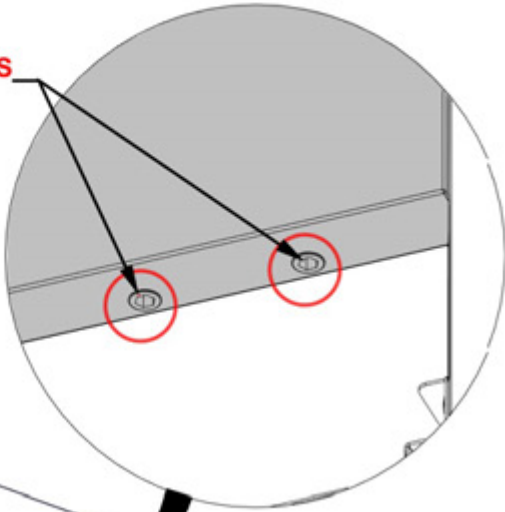

H4 (x4)
HORIZONTAL BEAM
ASSEMBLY L

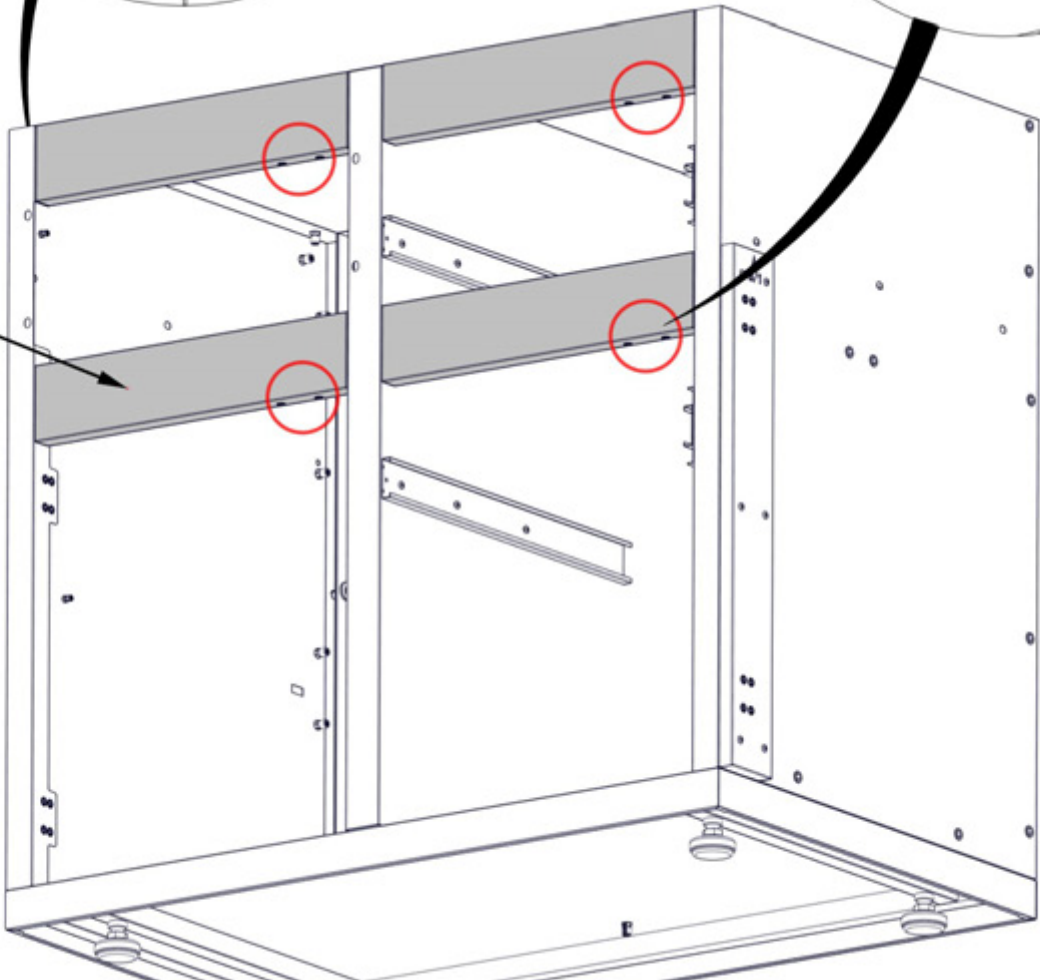


STEP 10 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS



A2 MAGNET BRACKET - A4M03026
(x1) 1"x1 1/4"x3 1/8" (25x31x80)

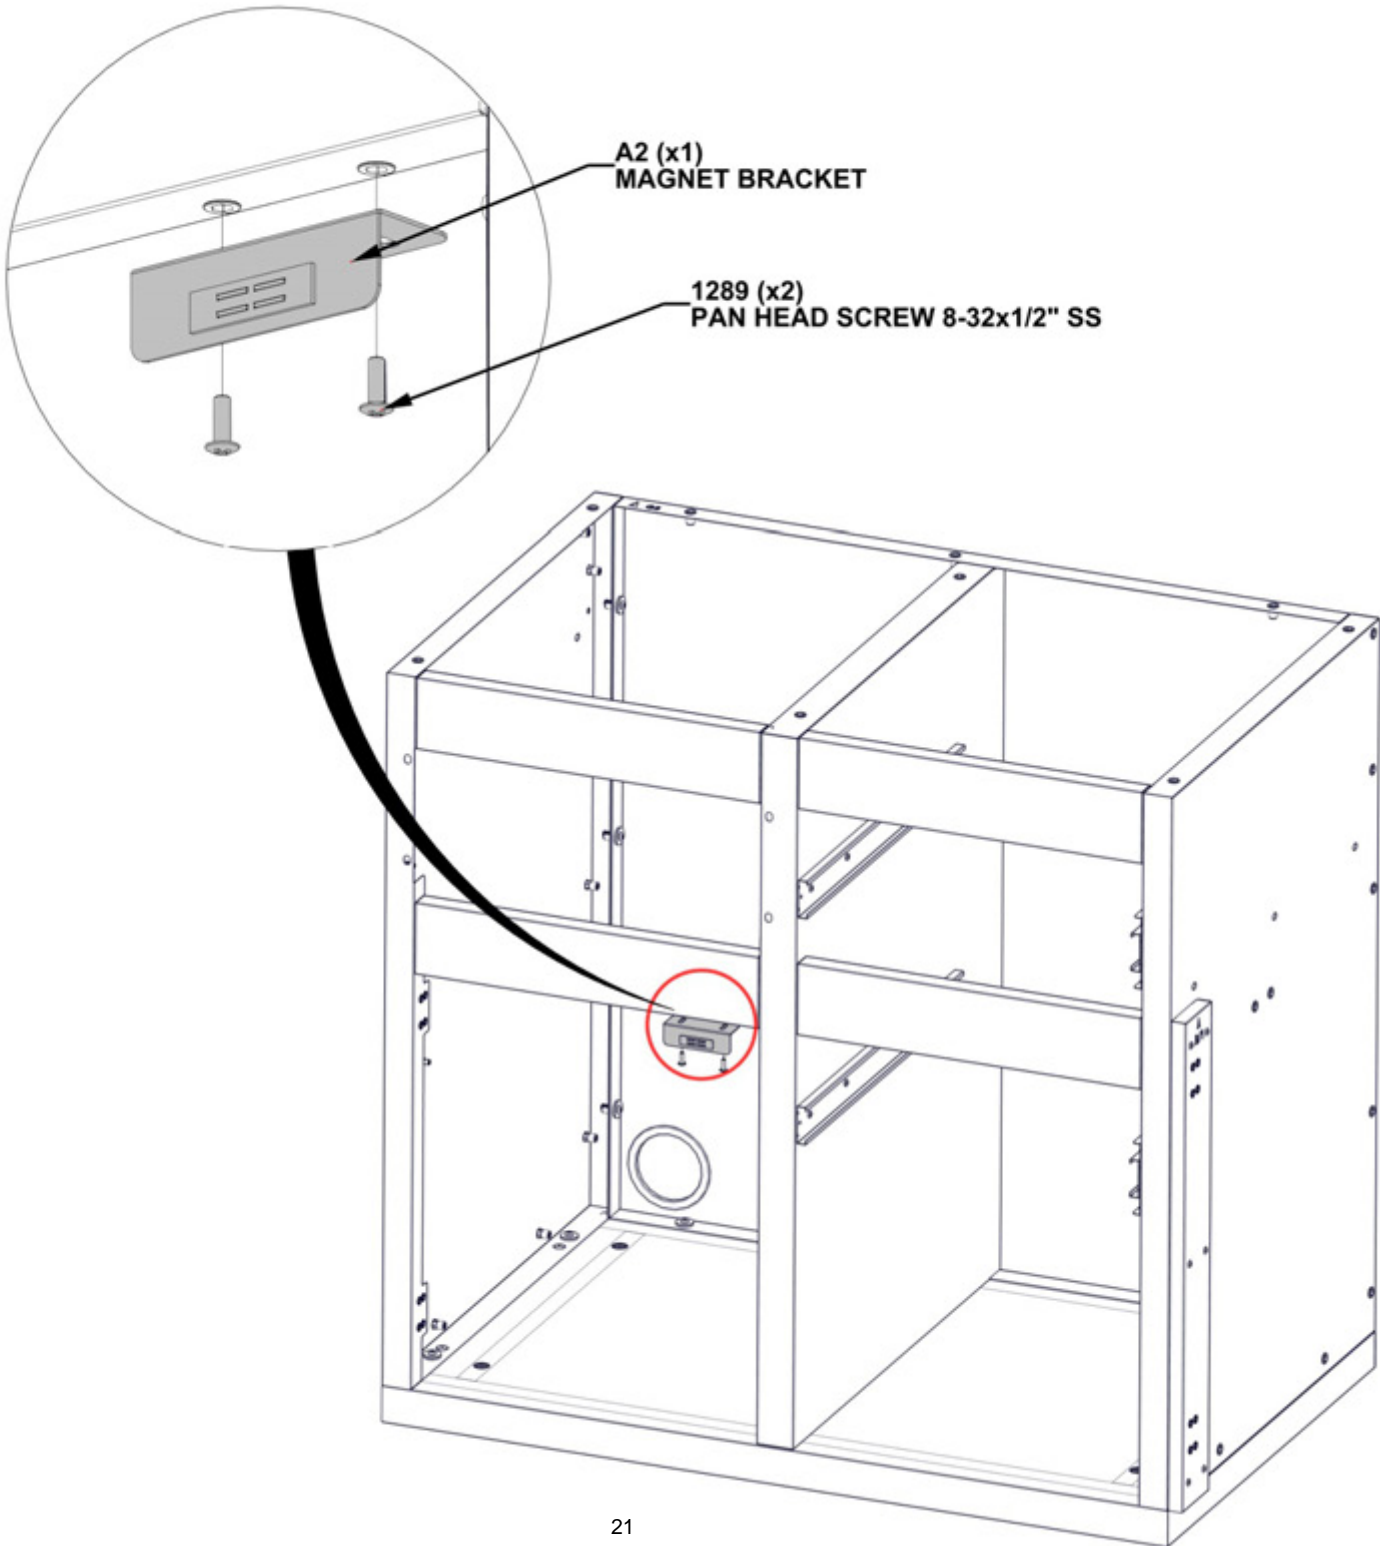


STEP 11 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
6	H101287	PAN HEAD SCREW 8-32x1" SS




H5 PIZZA OVEN CABINET HINGE CHANNEL ASSEMBLY - A4M03558
(x1) 26 5/8"x2 15/16"x11/16" (18x74.80x676)

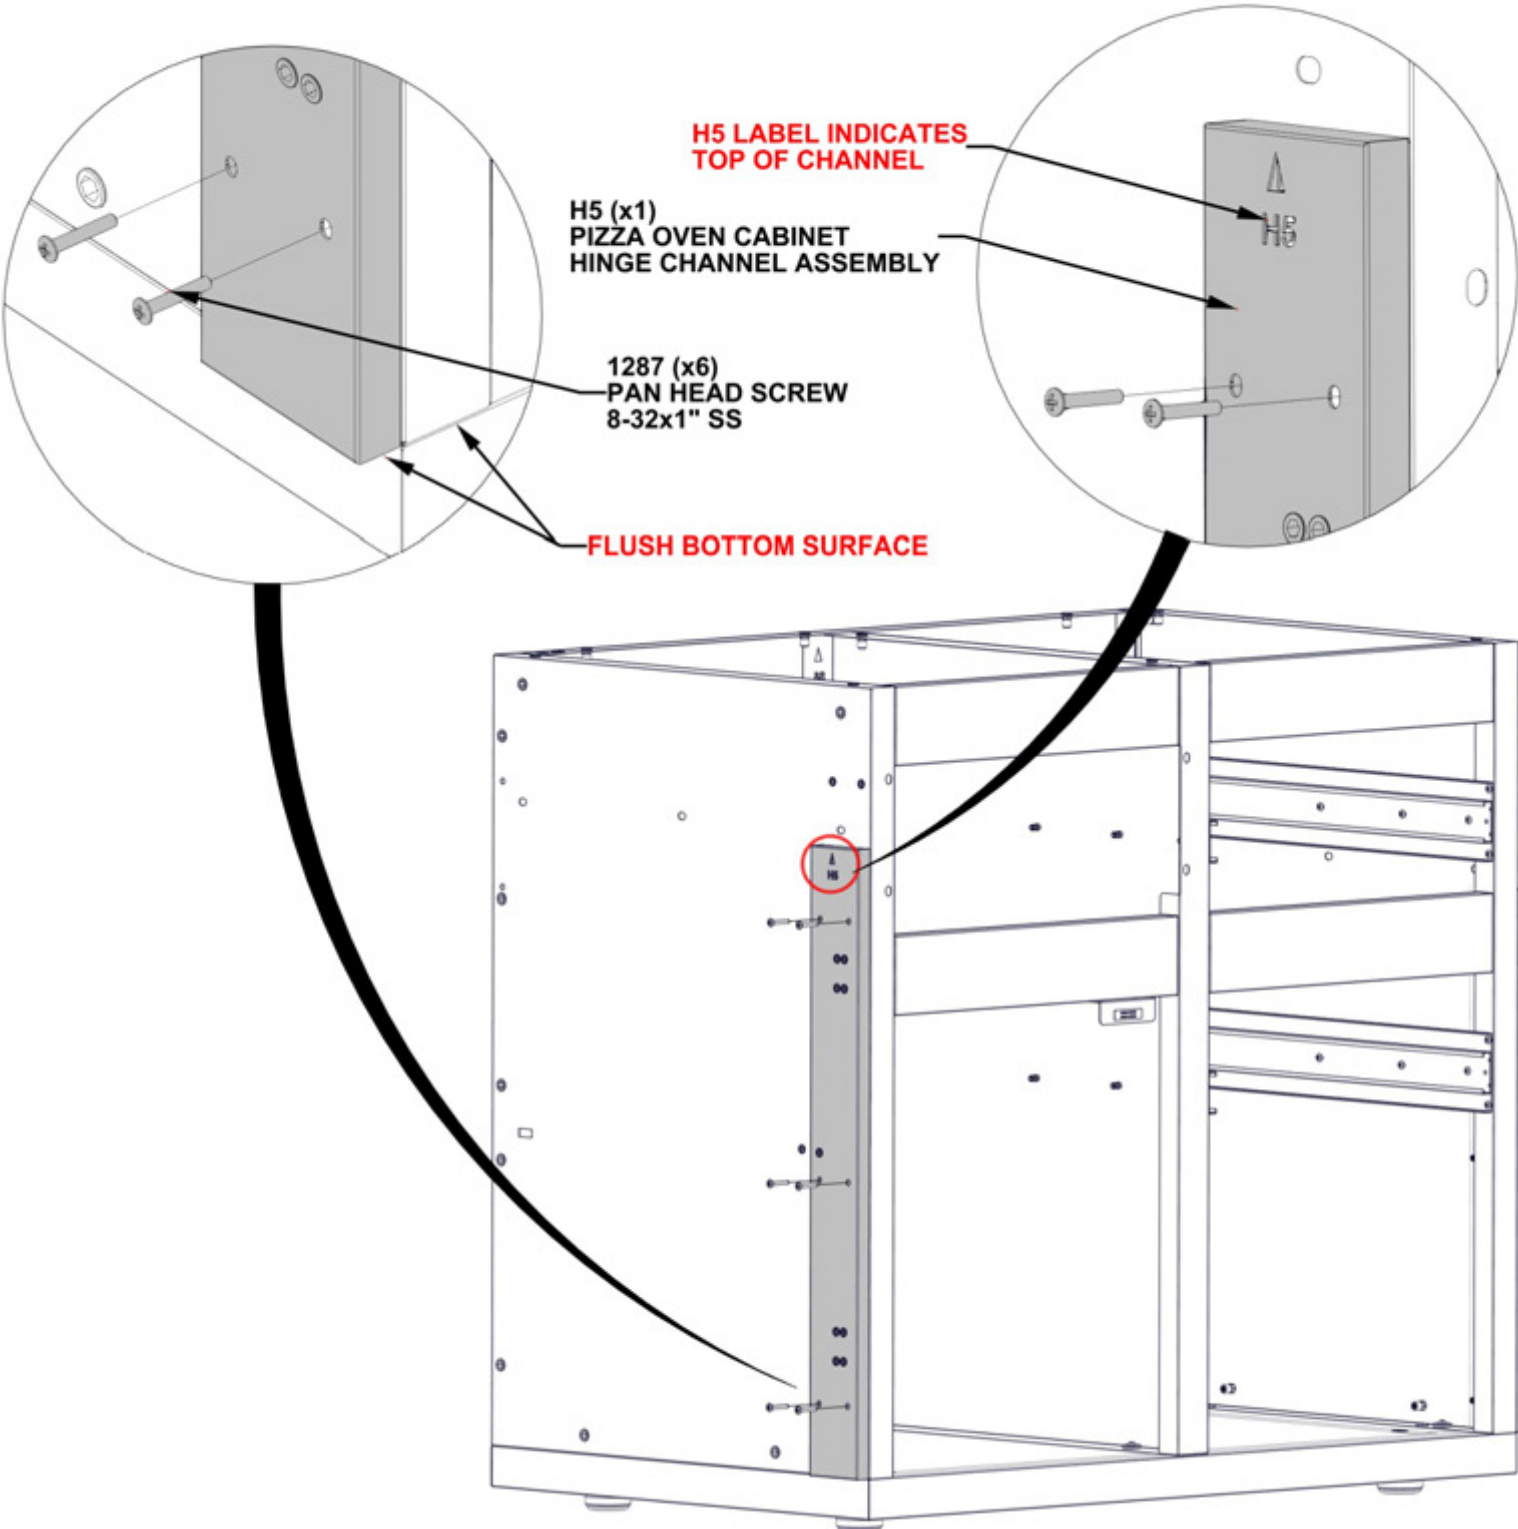


STEP 12 - SINK CABINET ASSEMBLY

Qty	PartNo	Description
9	H101103	TORX SOCKET SCREW 1/4-20

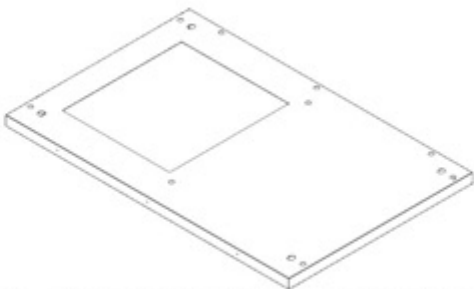


T4 SINK CABINET TABLETOP FRAME - A4M03566
(x1) 37 3/16"x24 1/8"x1 1/4" (32x612x944)

- FLUSH BACK AND SIDE OF PANEL ASSEMBLY.
- SQUARE ALL SIDES OF CABINET BEFORE TIGHTENING HARDWARE.

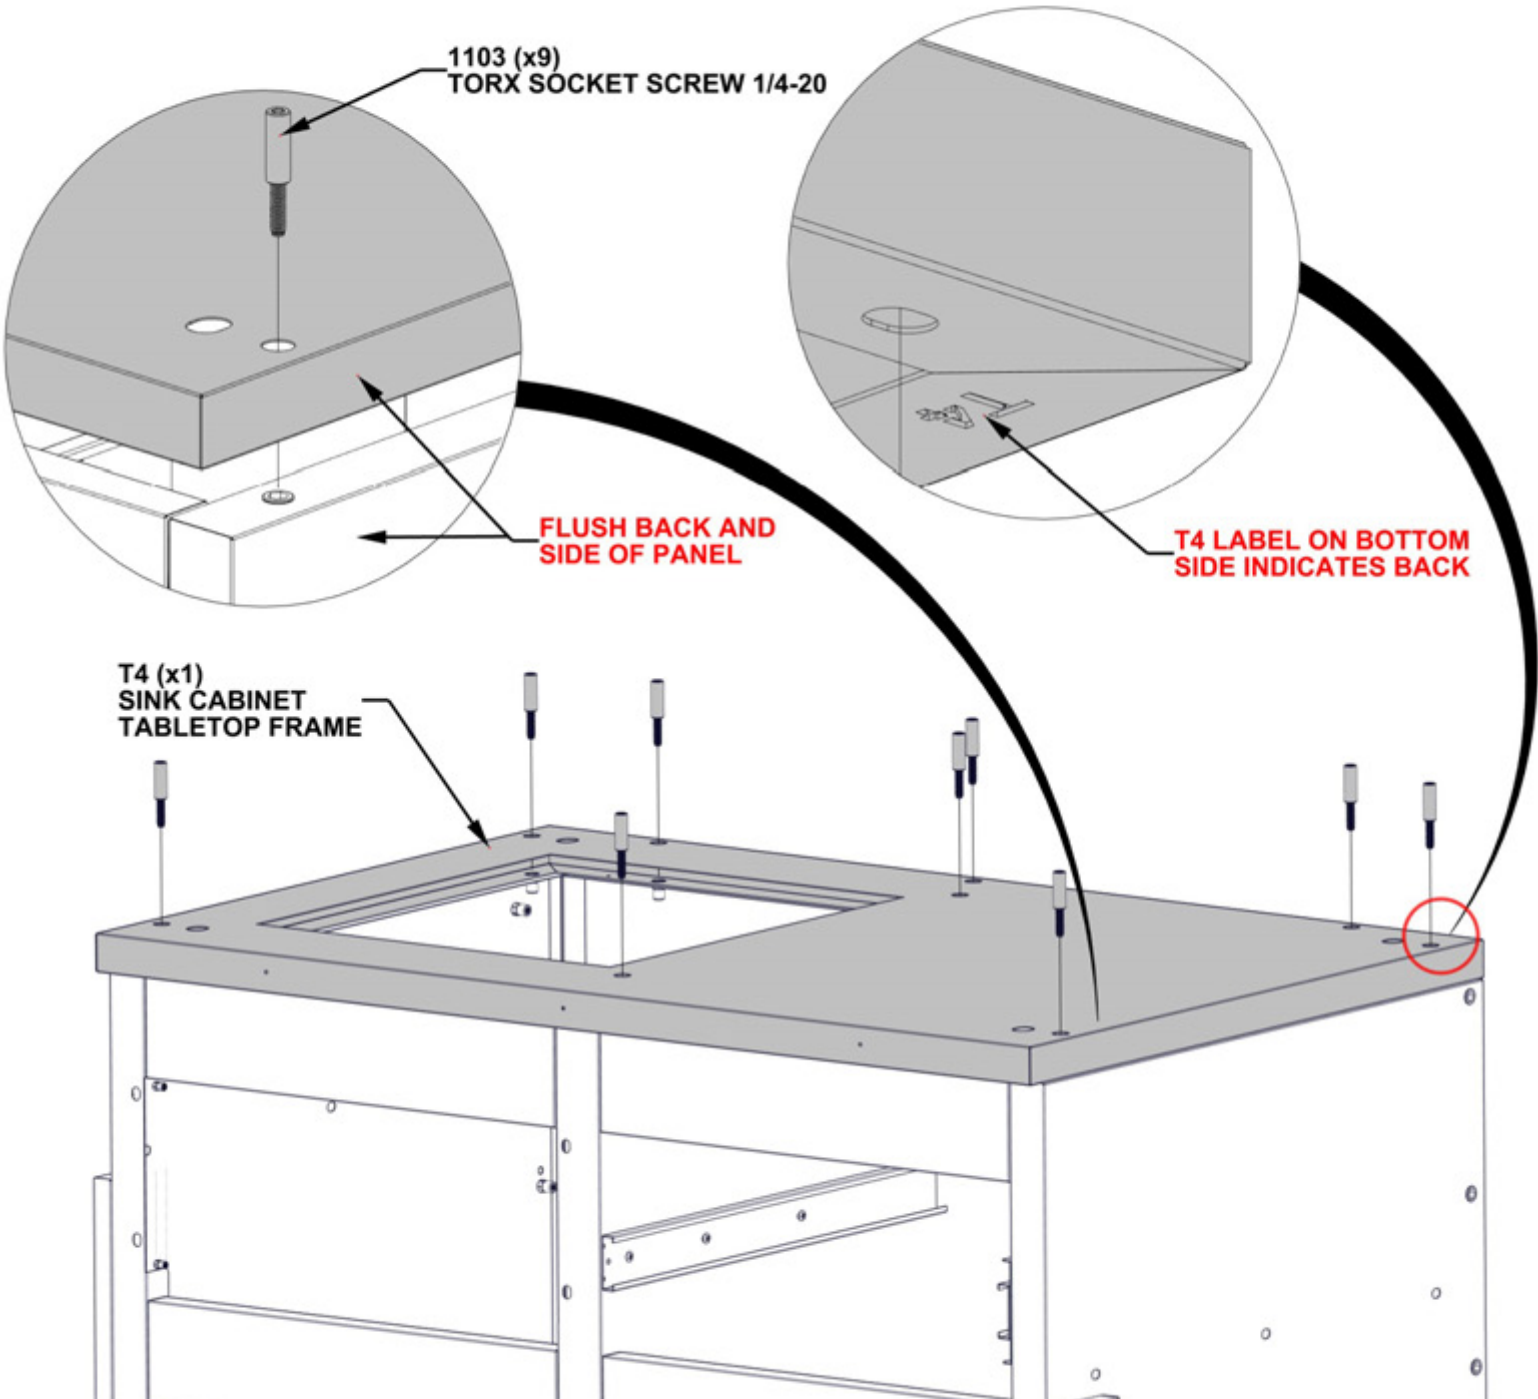


STEP 13 - SINK CABINET INSTALLATION

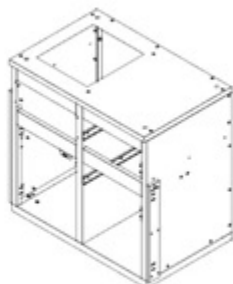


SINK CABINET FROM
STEPS 5 - 12


-
- POSITION SINK CABINET ASSEMBLY ON THE LEFT SIDE OF FRIDGE CABINET.
 - DISTANCE BETWEEN FRIDGE CABINET WILL BE DETERMINED IN NEXT STEP.

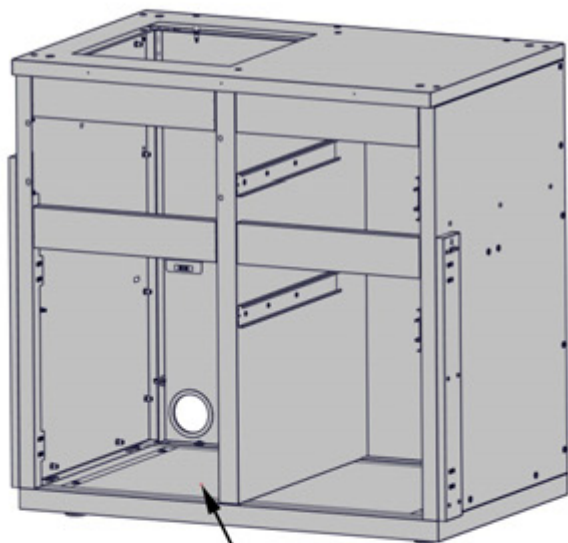

SINK CABINET
FROM STEPS 5 - 12

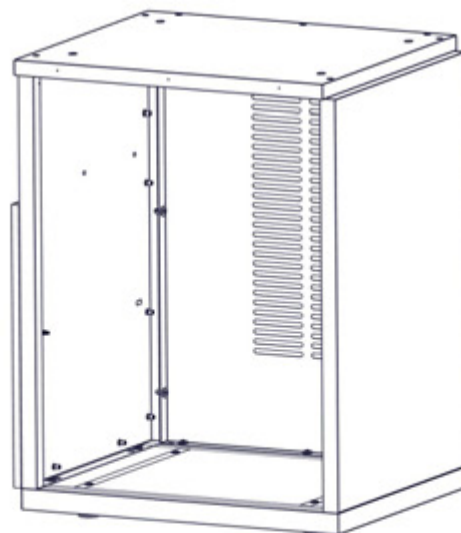


STEP 14 - GRILL CABINET ASSEMBLY

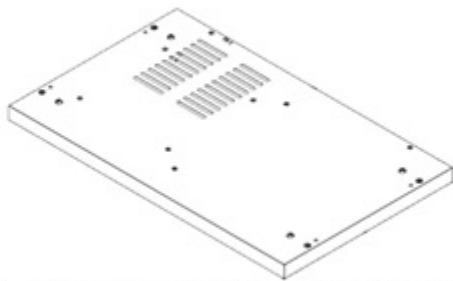


F2 GRILL CABINET FLOOR PANEL ASSEMBLY - A4M03048
(x1) 2 5/8"x23 3/8"x38 1/4" (66x594x972)

- LOOKING AT THE FRONT SIDE OF THE CABINETS,
SLIDE FLOOR PANEL IN BETWEEN SINK AND FRIDGE CABINETS.

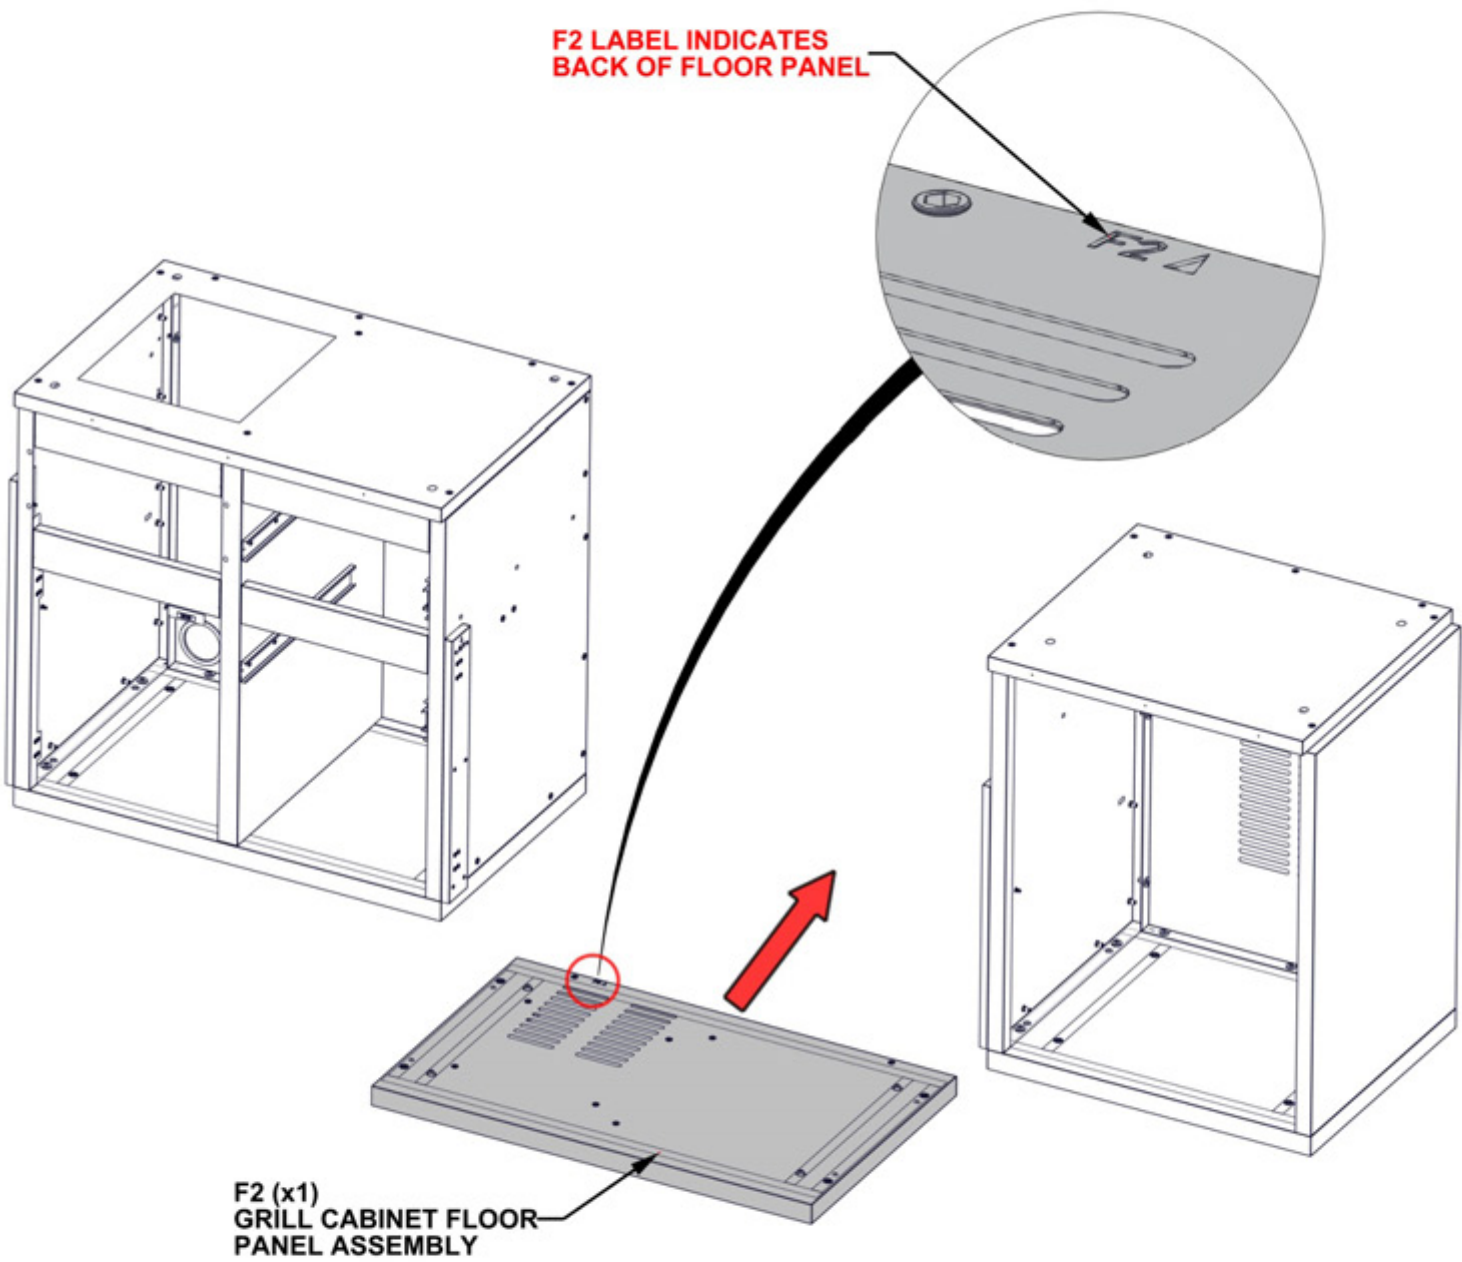


STEP 15 - GRILL CABINET ASSEMBLY

- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.
- ADJUST SINK AND FRIDGE CABINET TO ELIMINATE GAPS BETWEEN FLOOR PANEL AND CABINETS.


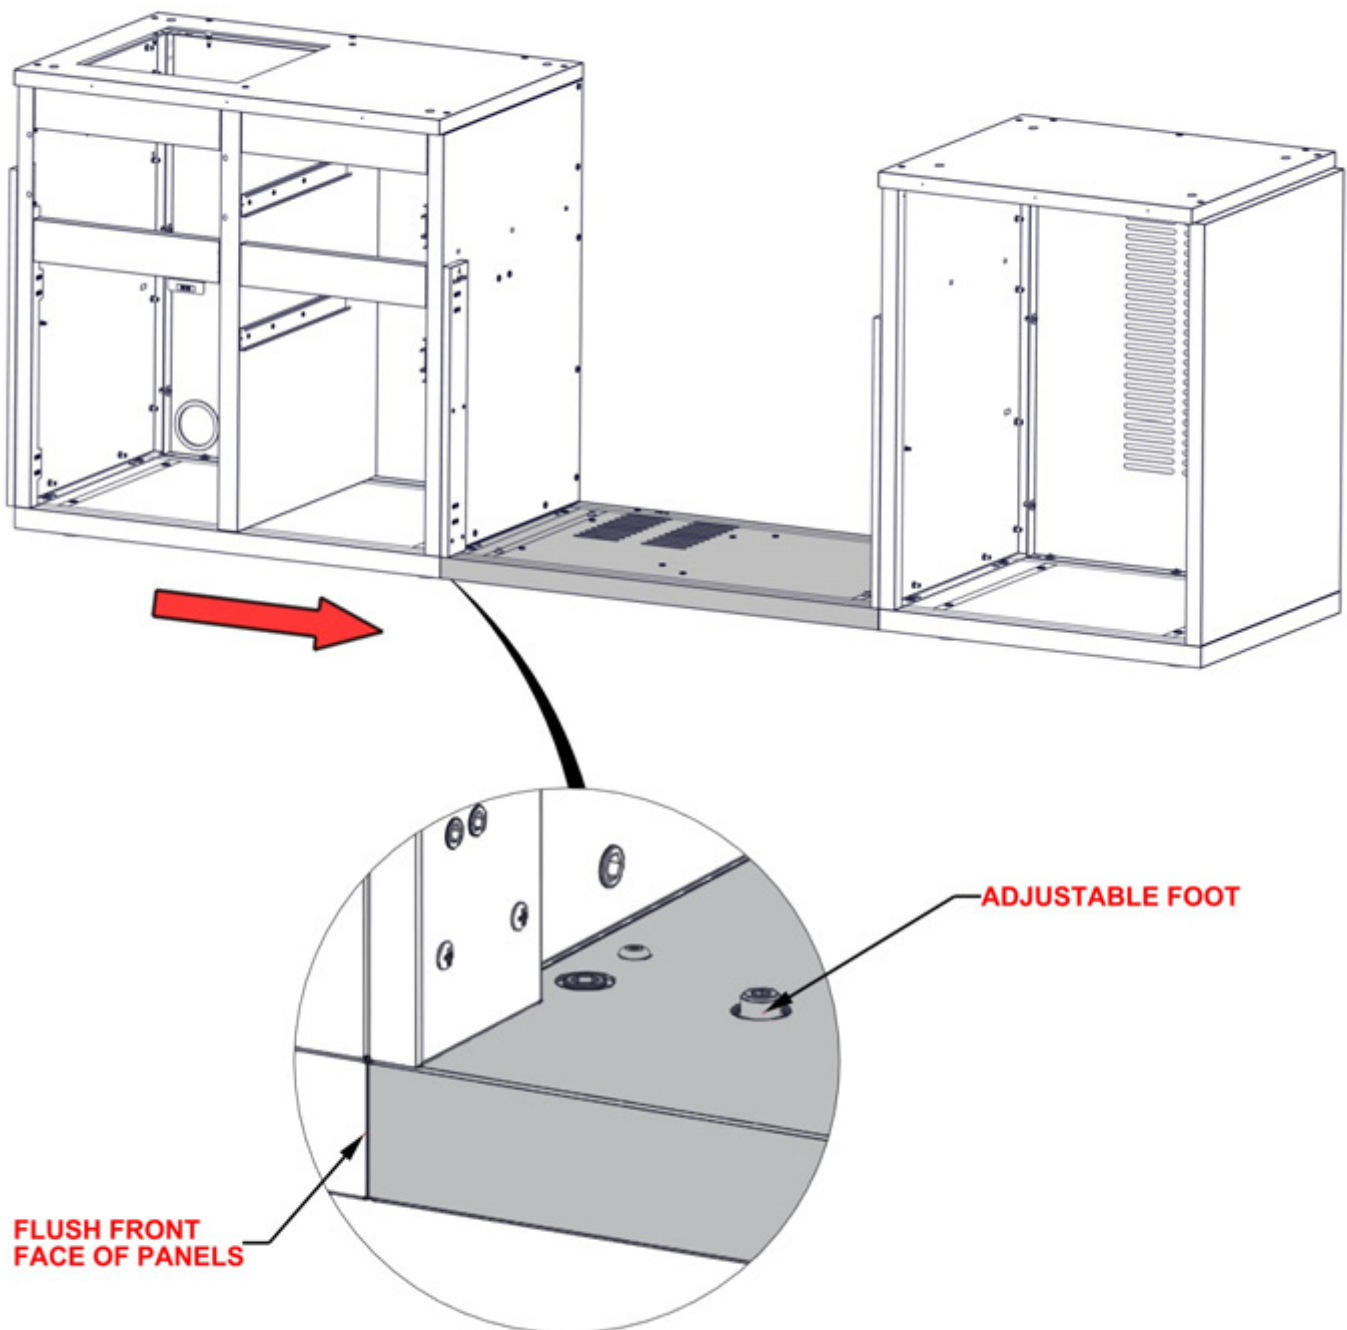


STEP 16 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

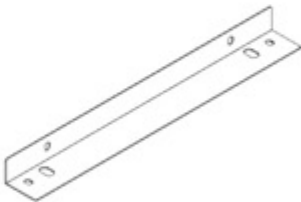


A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

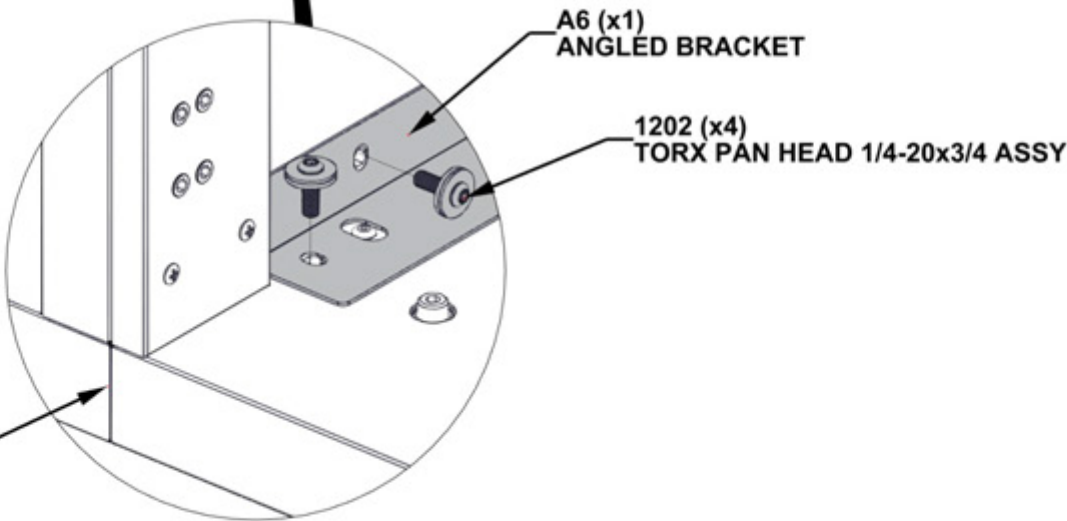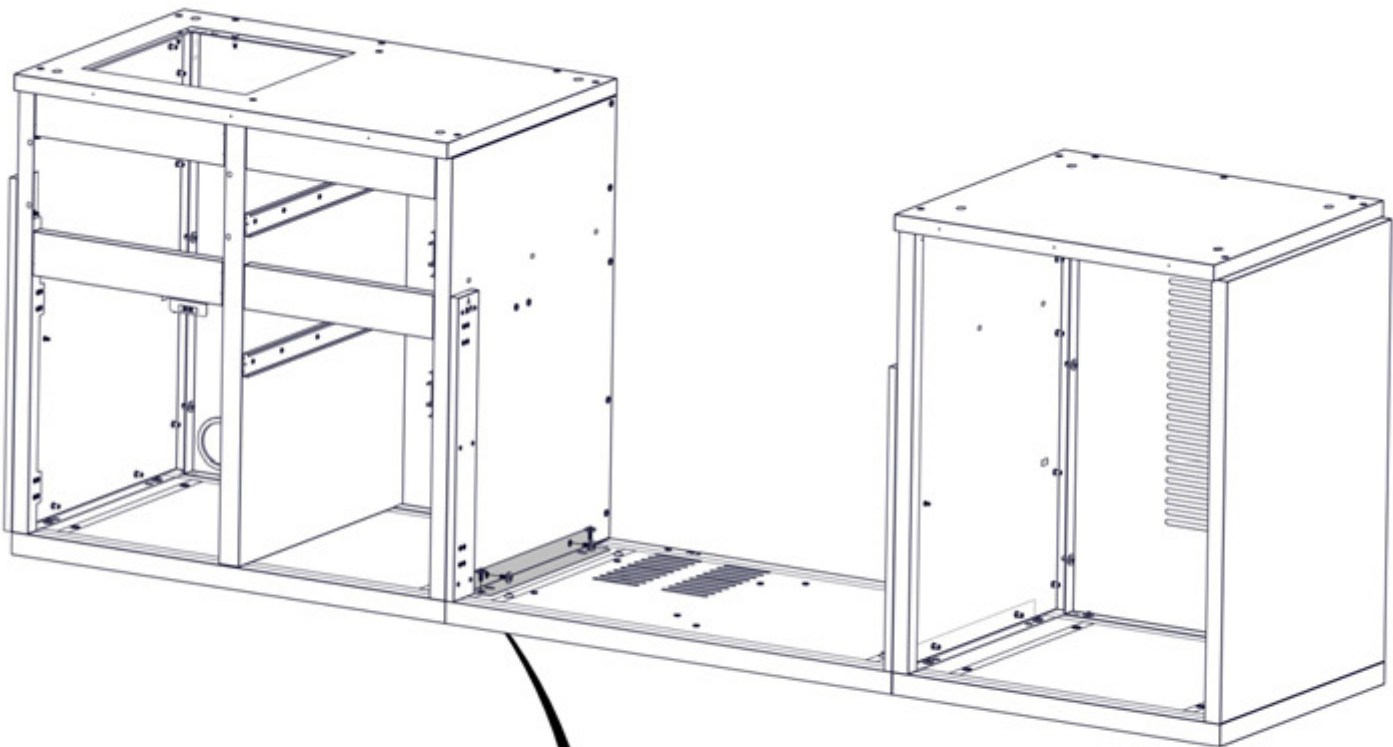


STEP 17 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

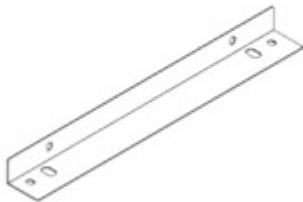


A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x17 1/8" (35x50x435)

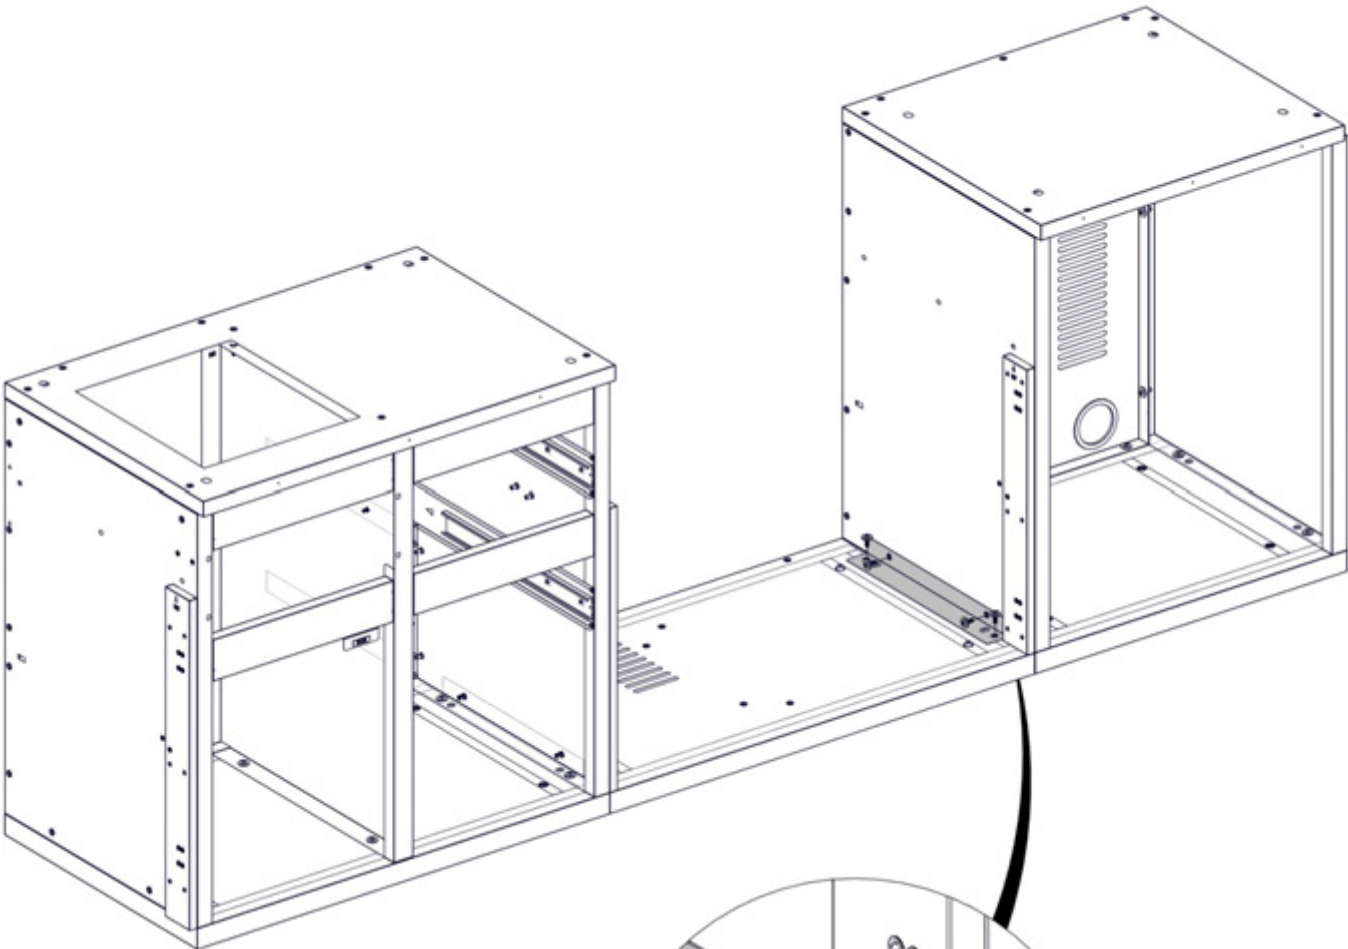

1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY


A6 (x1)
ANGLED BRACKET

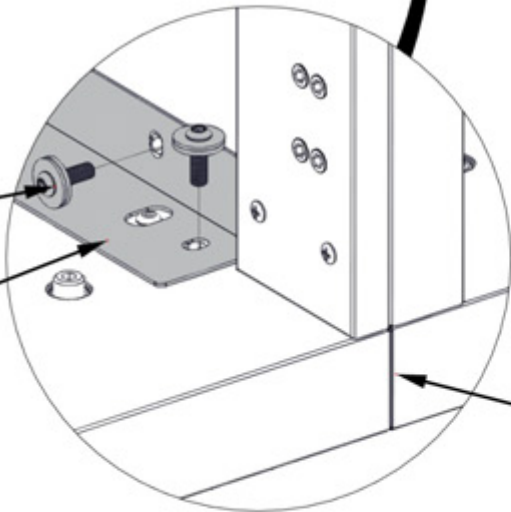

MAKE SURE FRONT
FACE OF FLOOR
PANELS ARE FLUSH


STEP 18 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


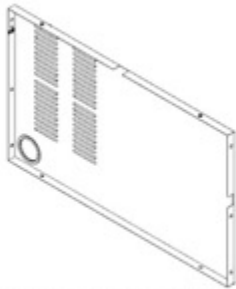


G10 GRILL CABINET BACK PANEL ASSEMBLY - A4M03055
(x1) 1 3/16"x22 7/8"x38 3/16" (30x581x970)

G10 LABEL INDICATES
TOP OF BACK PANEL

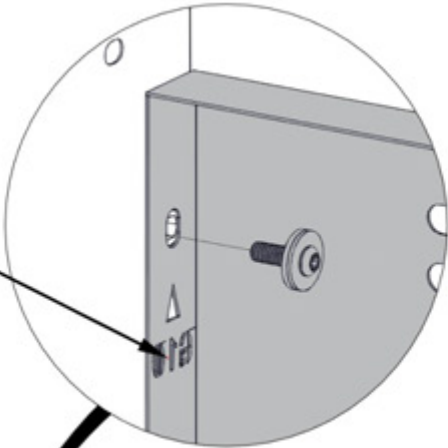

G10 (x1)
GRILL CABINET
BACK PANEL
ASSEMBLY

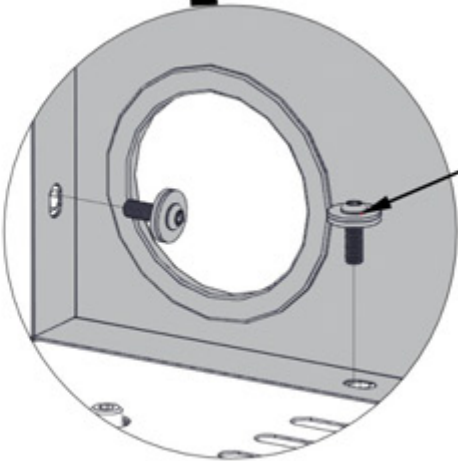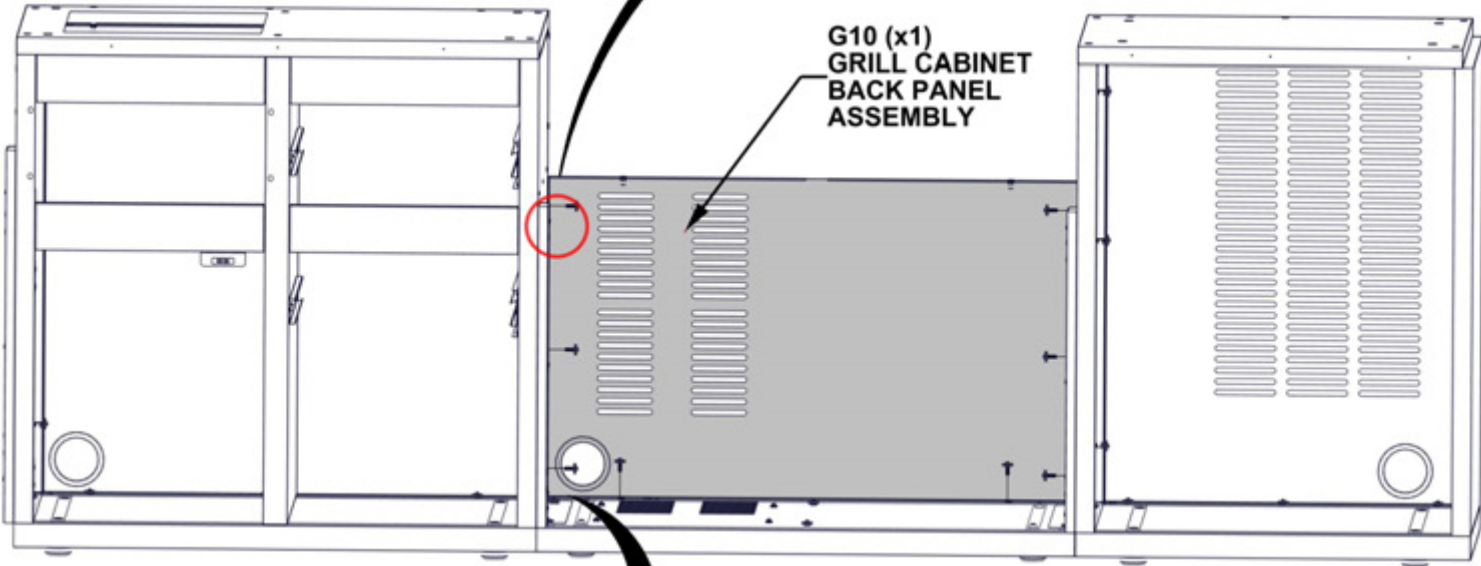

1202 (x8)
TORX PAN HEAD 1/4-20x3/4 ASSY

HAND TIGHTEN ONLY



STEP 19 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



S6 GRILL CABINET SIDE PANEL ASSEMBLY M - A4M03586
(x1) 23 3/8"x22 7/8"x1 3/8" (35x581x593)

S6 LABEL INDICATES
TOP OF SIDE PANEL

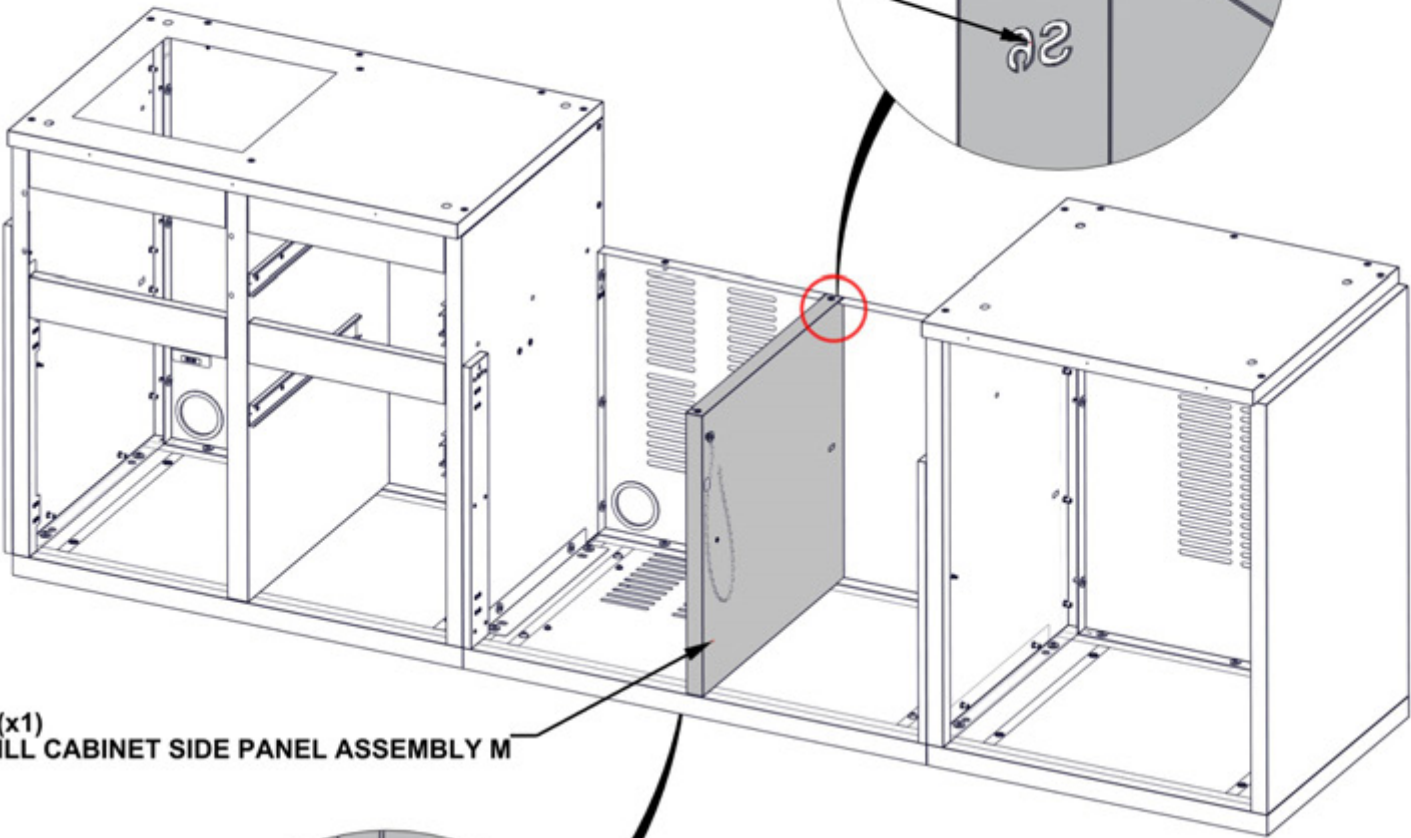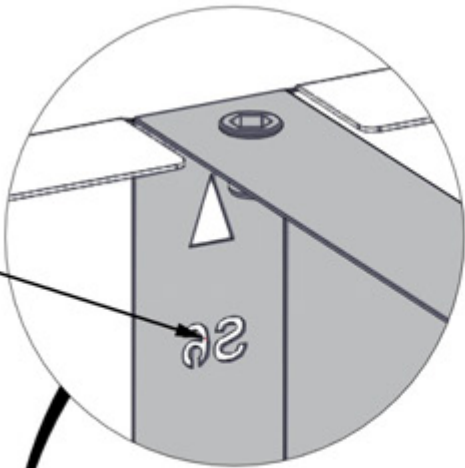


S6 (x1)
GRILL CABINET SIDE PANEL ASSEMBLY M


TIGHTEN ALL HARDWARE

1202 (x2)
TORX PAN HEAD 1/4-20x3/4 ASSY

FLUSH FRONT FACE
OF SIDE PANEL WITH
FLOOR PANEL

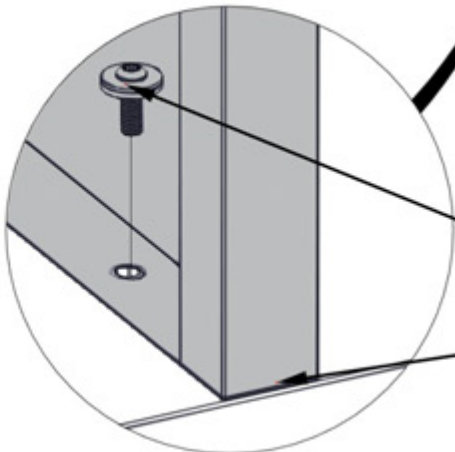


STEP 20A - GRILL CABINET ASSEMBLY

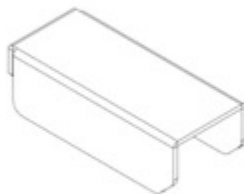


A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- BRACKETS WILL BE TOWARD THE BACK OF THE GRILL CABINET.
- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER GRILL CABINET.

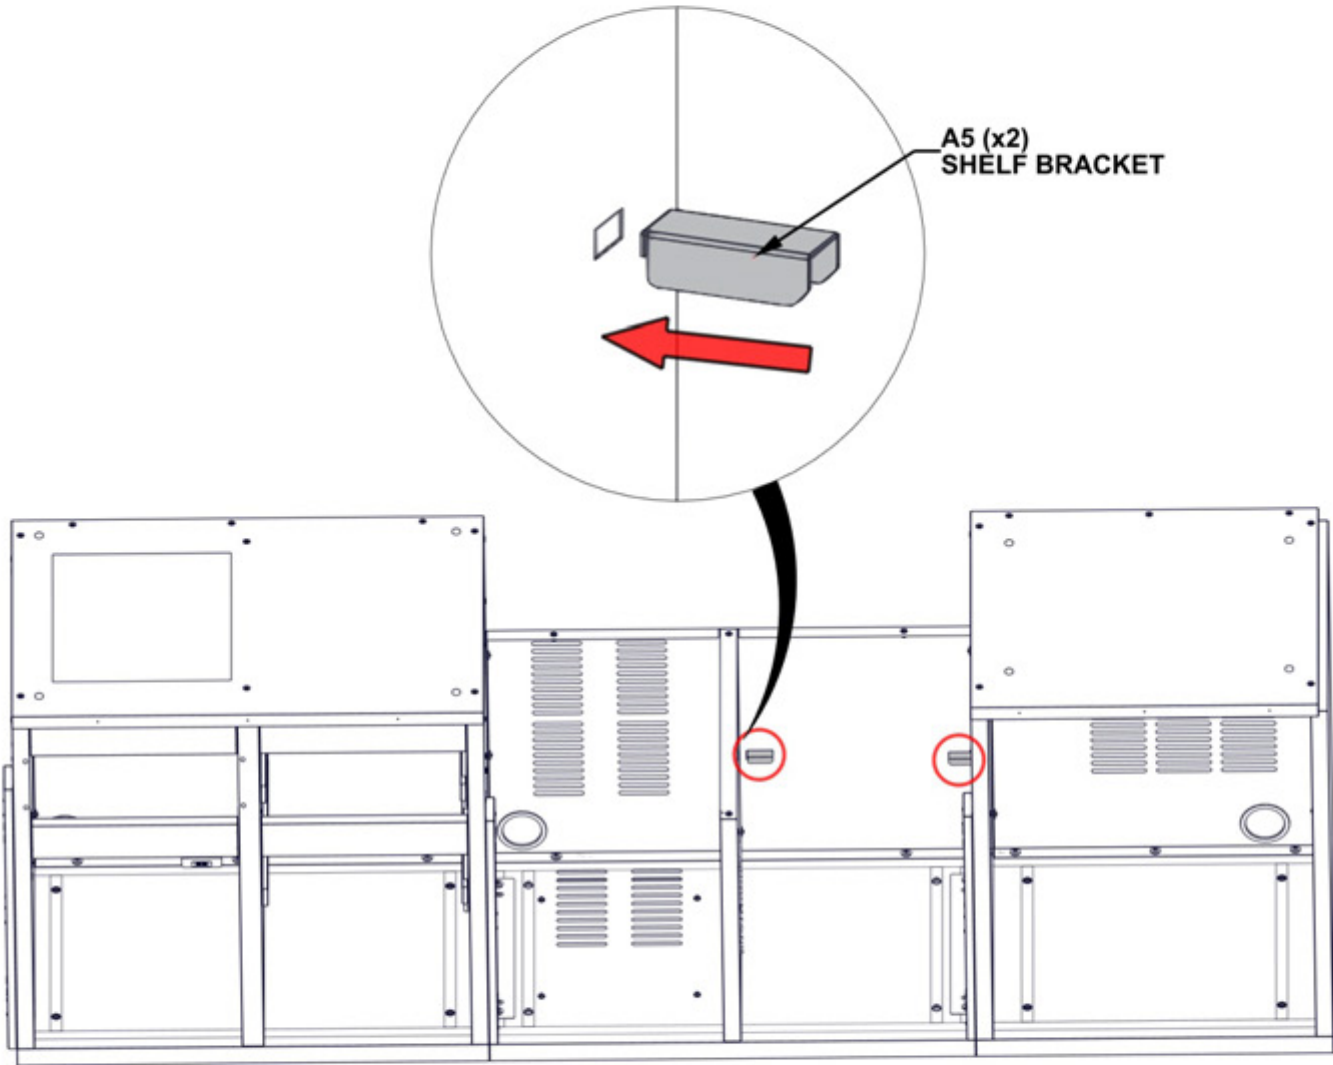


STEP 20B - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS

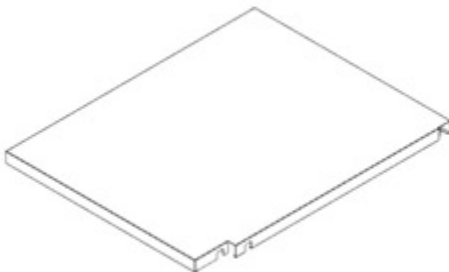


L2 GRILL CABINET SHELF ASSEMBLY - A4M03589
(x1) 23 1/4"x18 3/8"x1" (25.00x467.00x591.00)


- ALIGN SHELF WITH THREADED INSERTS AND ATTACH HARDWARE TO FASTEN IN PLACE.

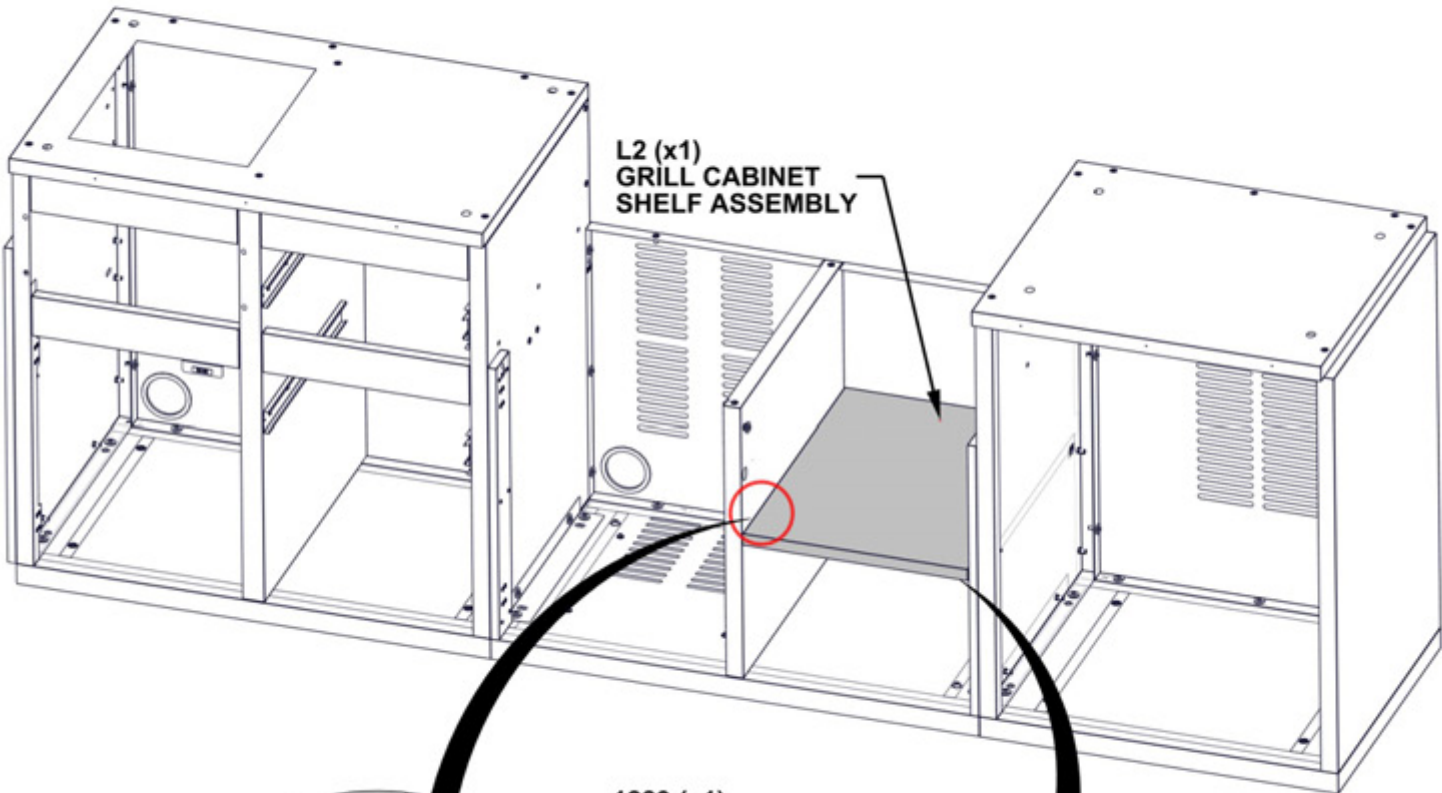

L2 (x1)
GRILL CABINET
SHELF ASSEMBLY

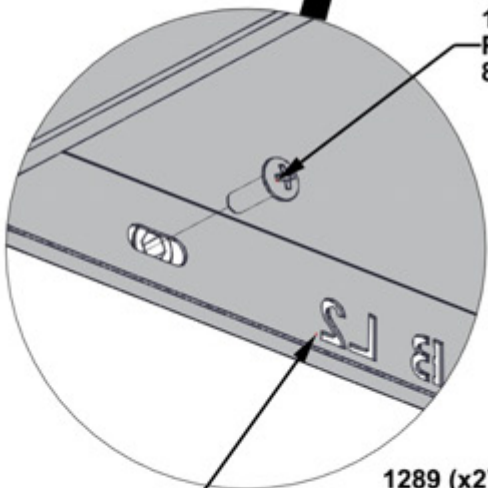

1289 (x1)
PAN HEAD SCREW
8-32x1/2" SS

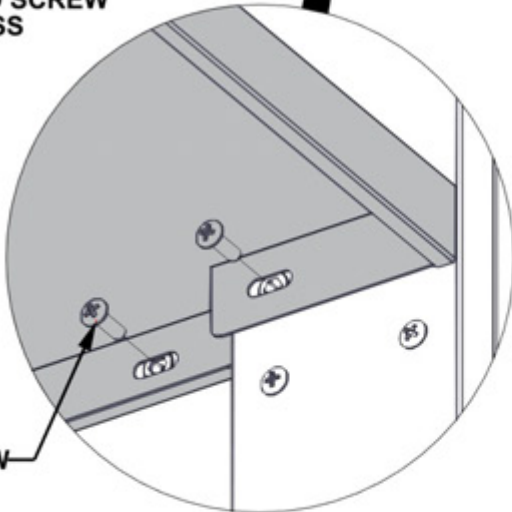

1289 (x2)
PAN HEAD SCREW
8-32x1/2" SS


L2 LABEL INDICATES
FRONT OF SHELF

STEP 21 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

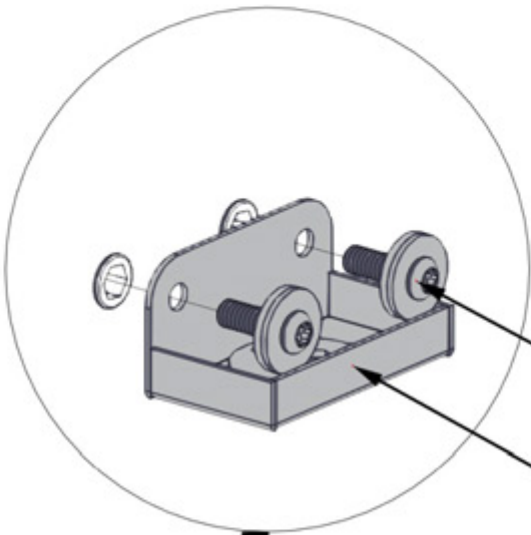


1202 (x2)
TORX PAN HEAD 1/4-20x3/4 ASSY

A9 (x1)
HOSE BRACKET ASSEMBLY

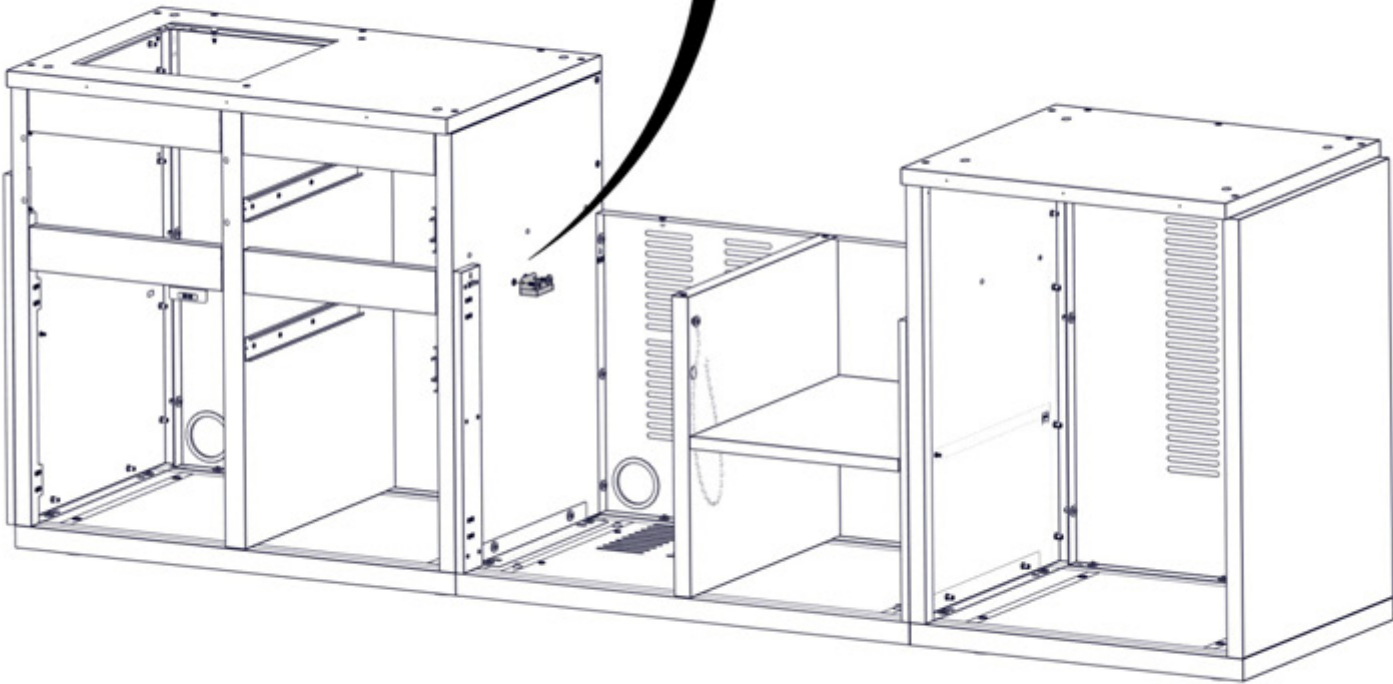


STEP 22 - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"

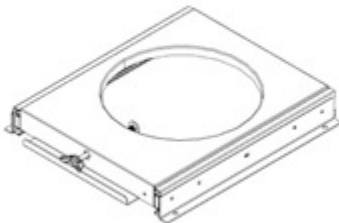


A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

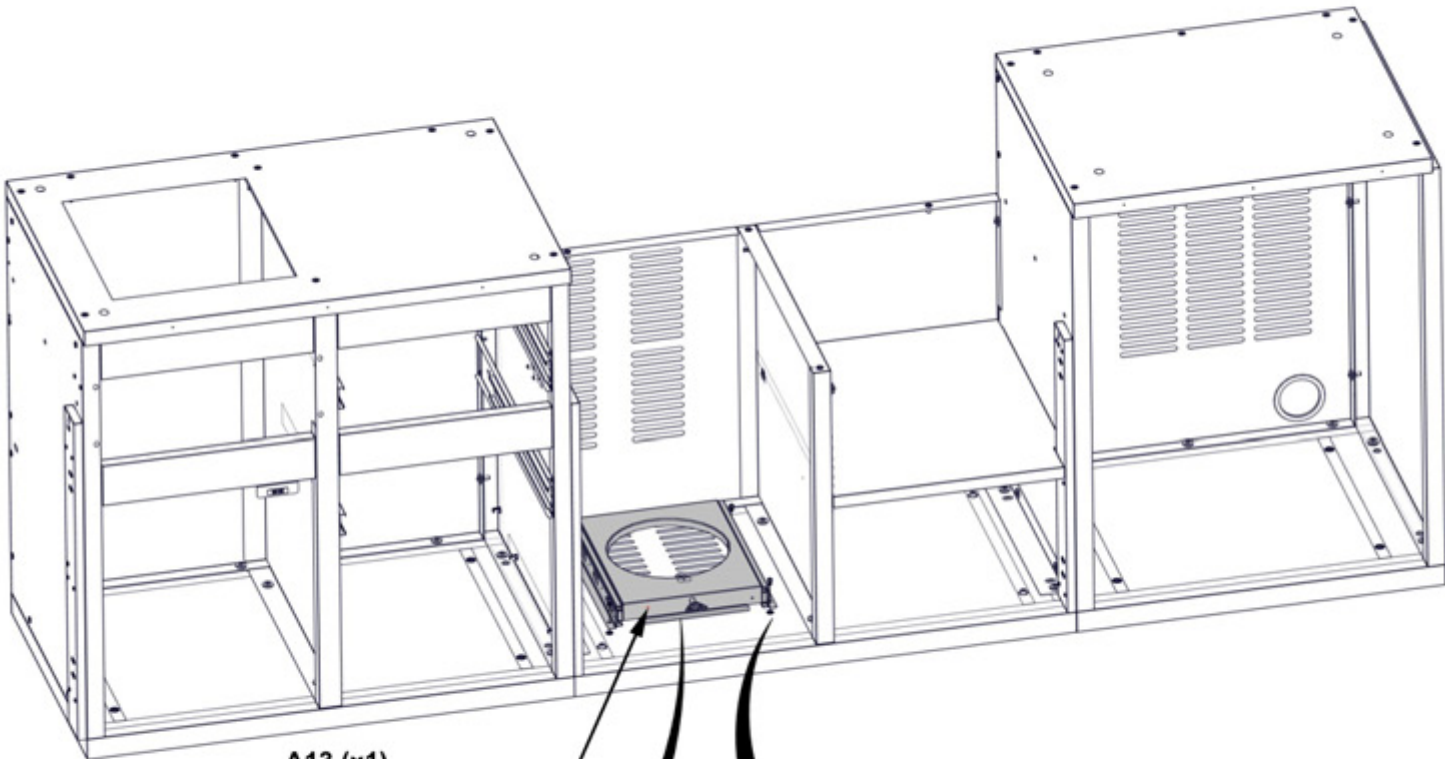


A13 (x1)
GAS TANK HOLDER
ASSEMBLY

1292 (x4)
TORX PAN HEAD 1/4-20x13/32"

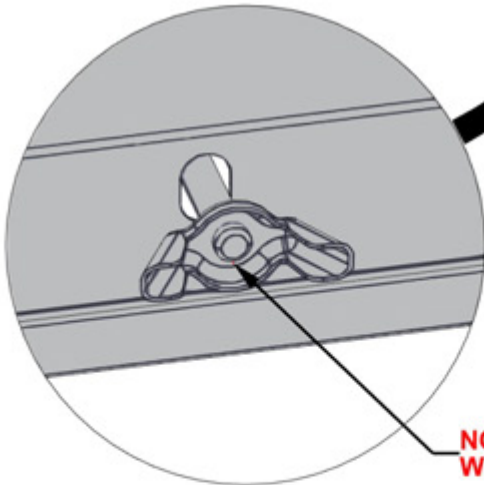


NOTE ORIENTATION OF
WING NUT TOWARDS FRONT

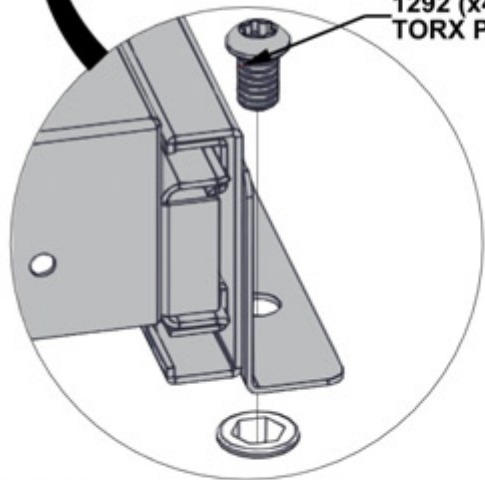

STEP 23 - GRILL CABINET ASSEMBLY


Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

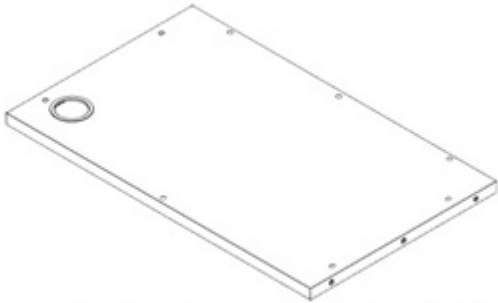

T2 GRILL TABLETOP ASSEMBLY - A4M03057
(x1) 1 1/4"x23 3/8"x38 3/16" (32x594x970)




A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

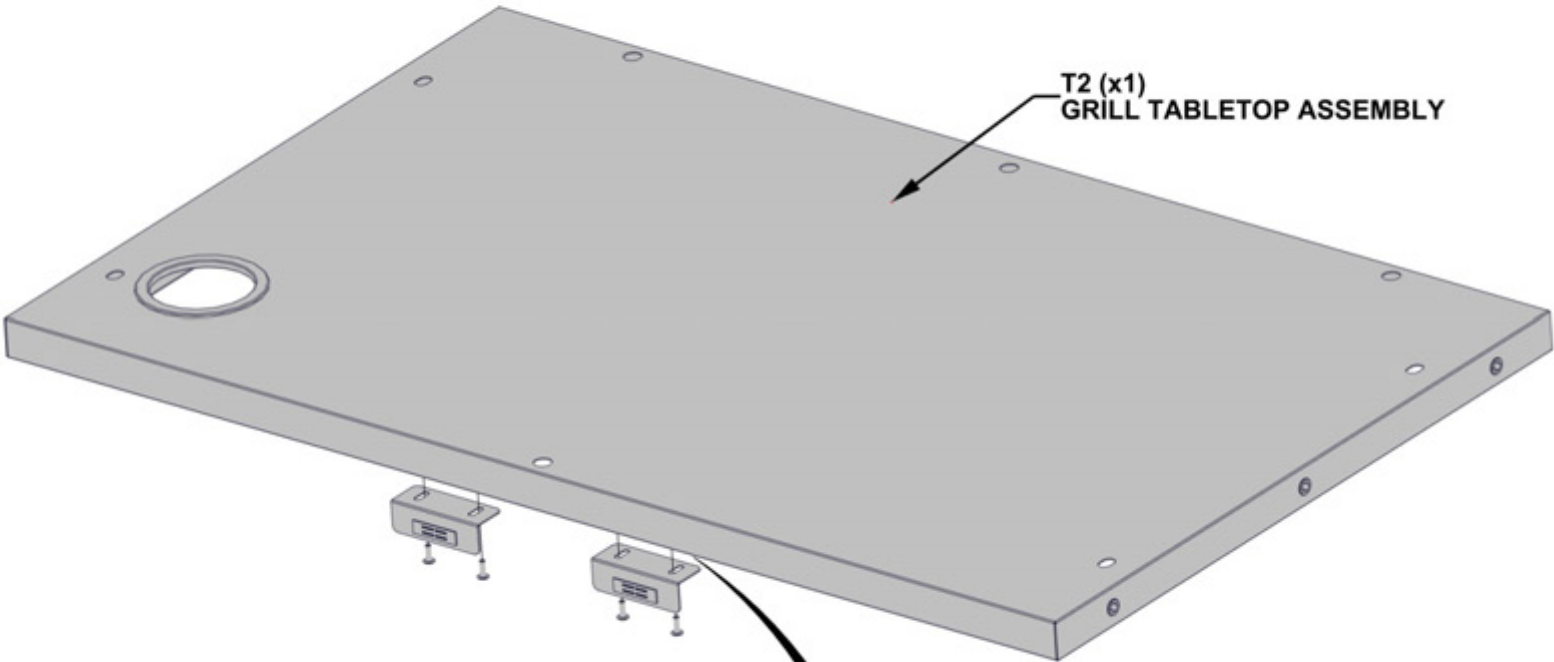

T2 (x1)
GRILL TABLETOP ASSEMBLY


A2 (x2)
MAGNET BRACKET

1289 (x4)
PAN HEAD SCREW 8-32x1/2" SS

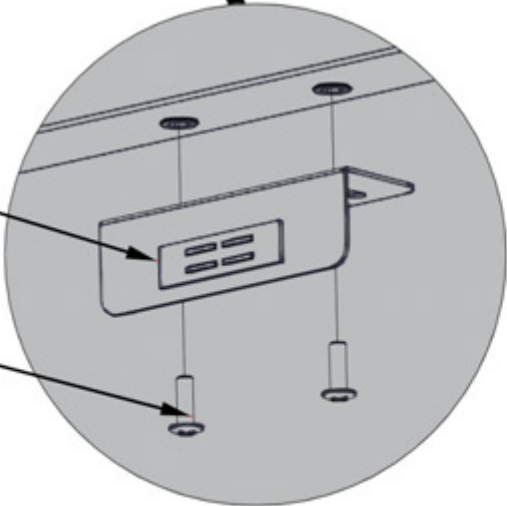


STEP 24A - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

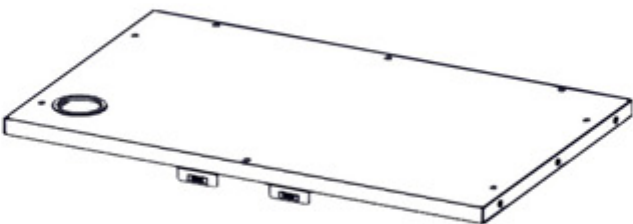


GRILL TABLETOP
ASSEMBLY FROM STEP 23

- HARDWARE ATTACHES ON INSIDE OF ADJACENT CABINETS.

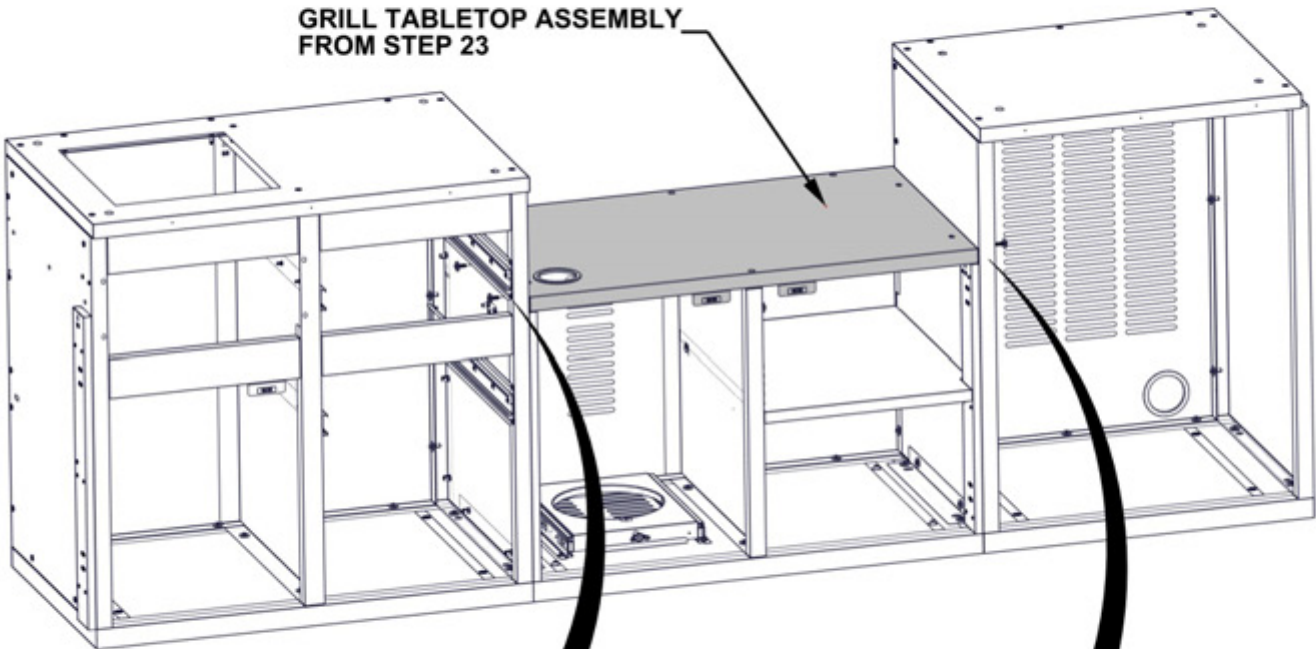


HAND TIGHTEN ONLY

1202 (x3)
TORX PAN HEAD
1/4-20x3/4 ASSY

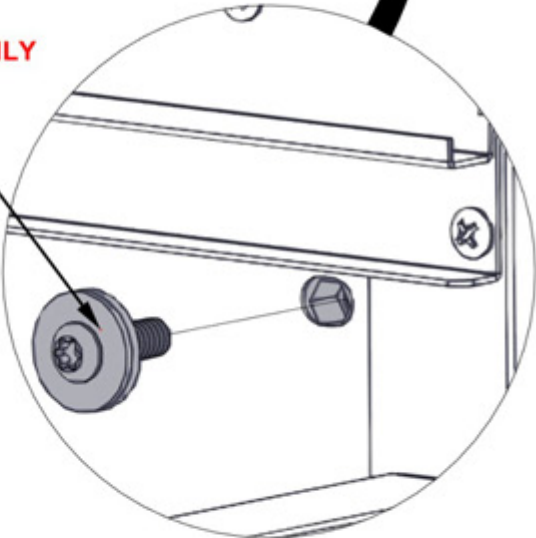



HAND TIGHTEN ONLY

1202 (x3)
TORX PAN HEAD
1/4-20x3/4 ASSY

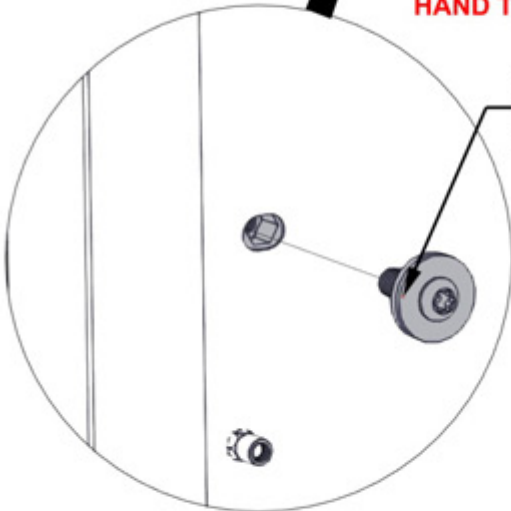


STEP 24B - GRILL CABINET ASSEMBLY

Qty	PartNo	Description
4	H101103	TORX SOCKET SCREW 1/4-20

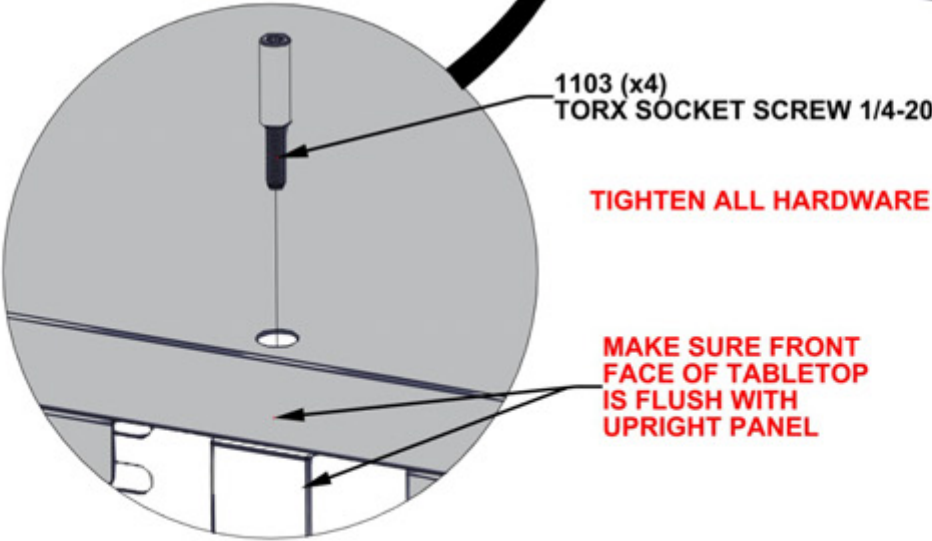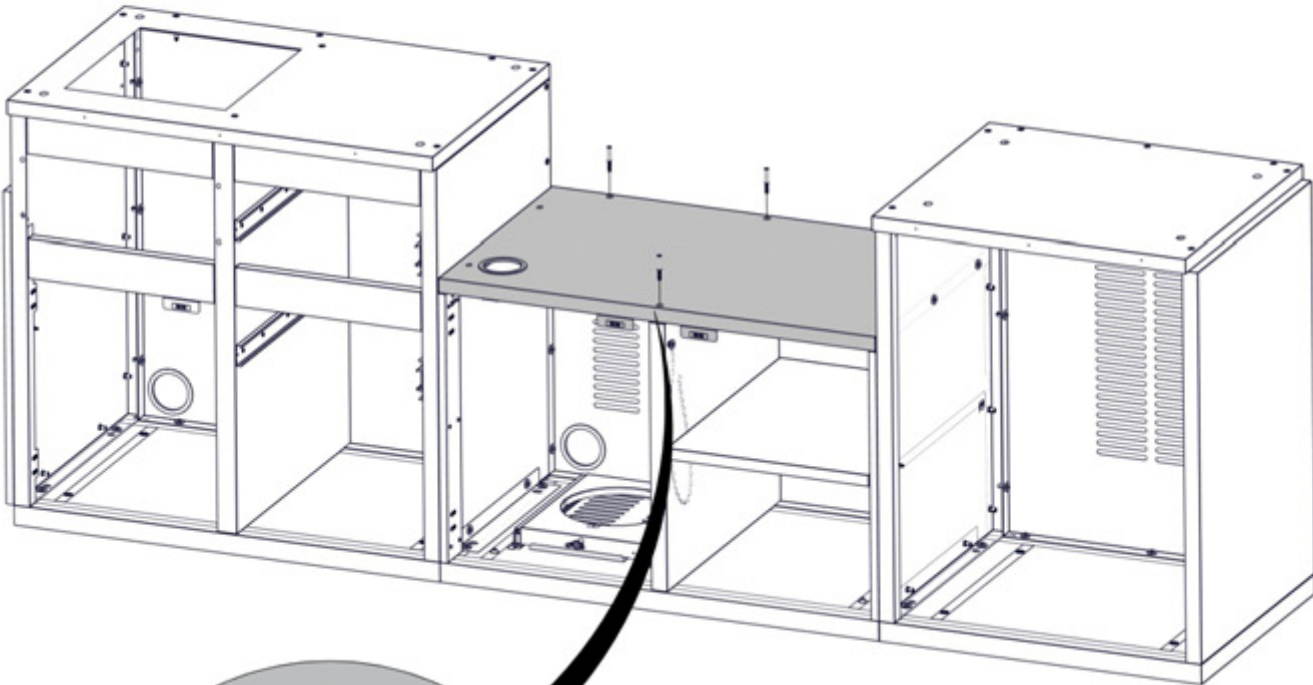


STEP 25 - GRILL CABINET ASSEMBLY


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

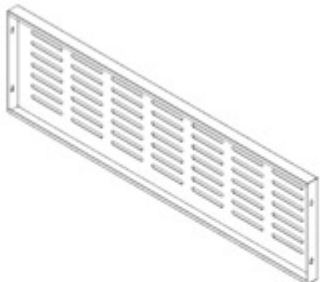


G11 GRILL VENTILATION PANEL - A4M03056
(x1) 1 5/16"x11 3/16"x38 3/16" (33x284x970)

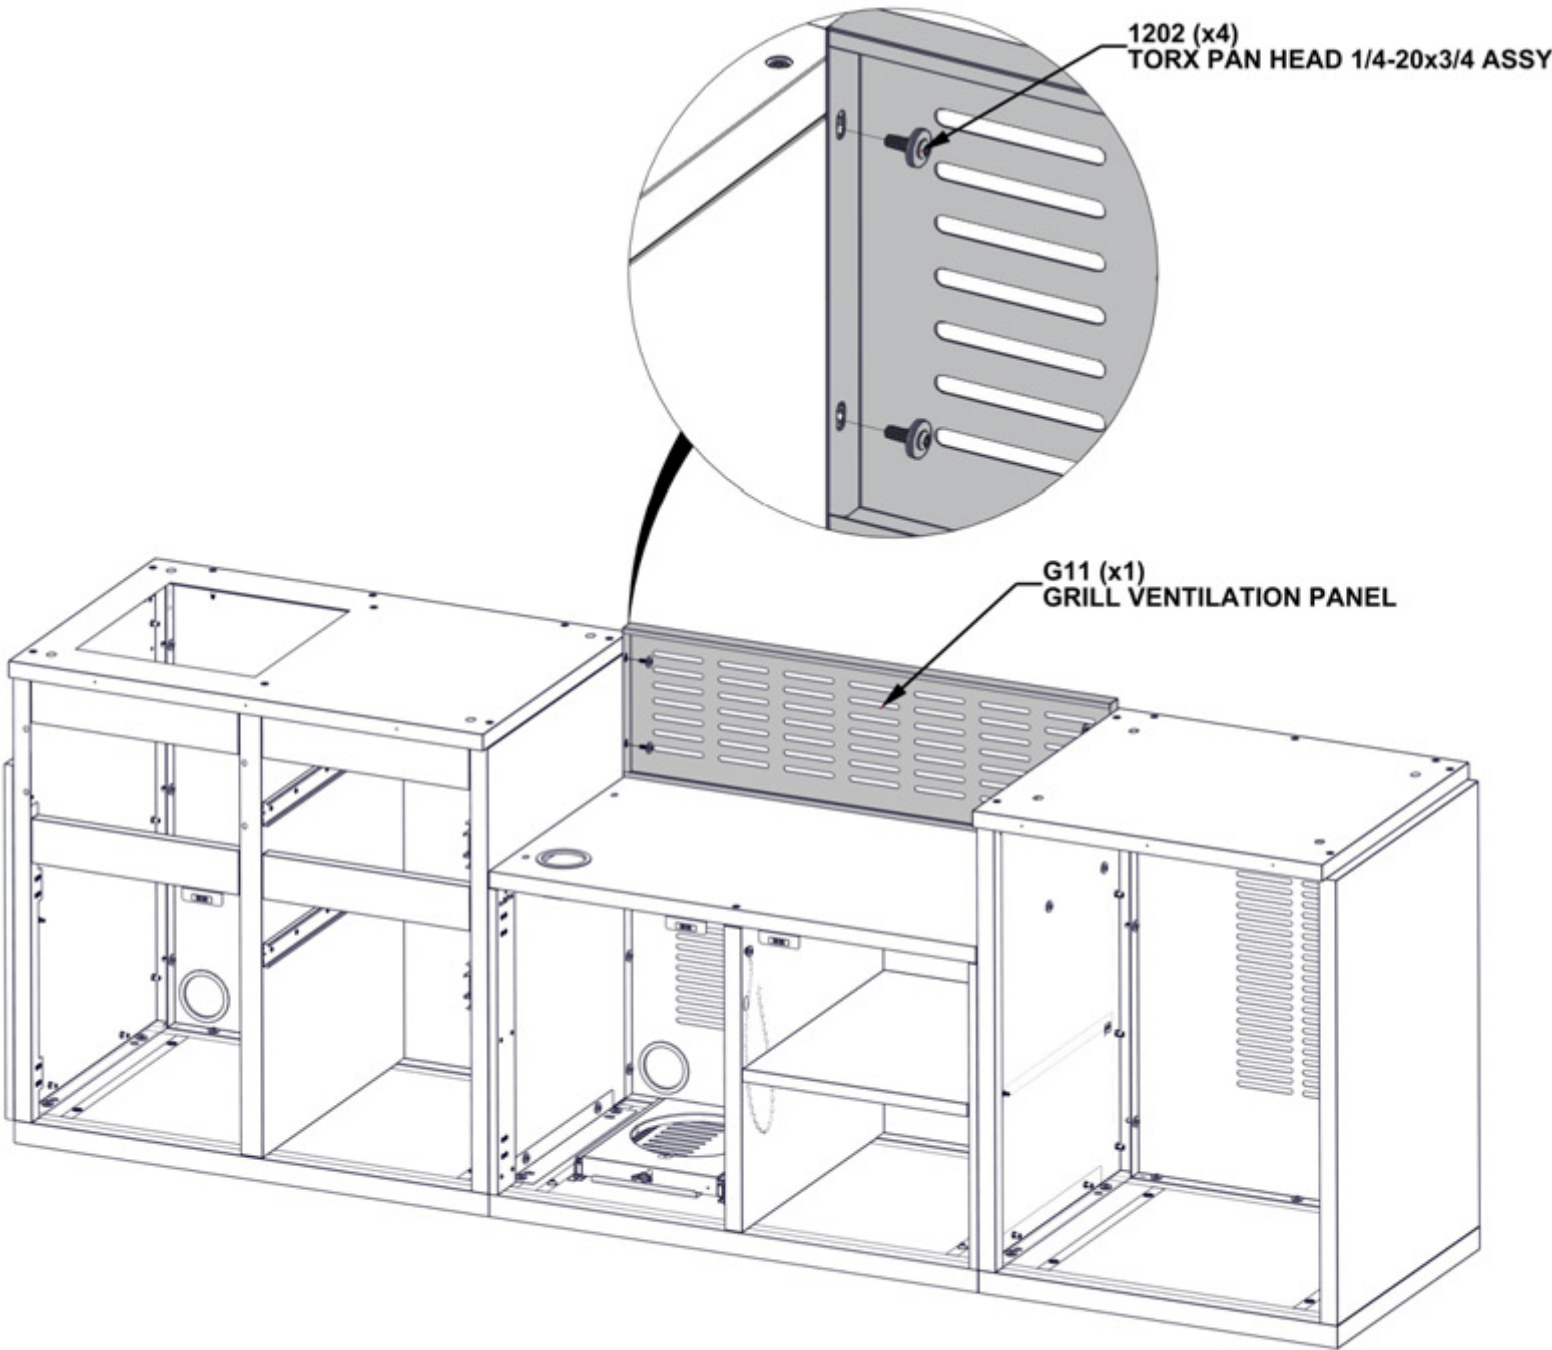

STEP 26A - PIZZA OVEN CABINET ASSEMBLY

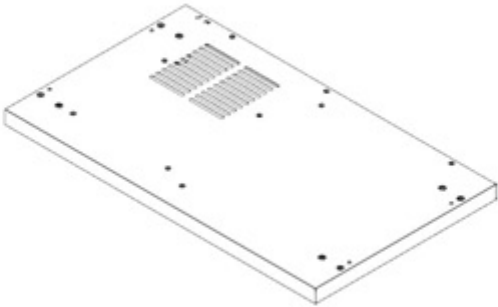


F1 PIZZA OVEN CABINET FLOOR PANEL ASSEMBLY - A4M03538
(x1) 40 3/16"x23 3/8"x2 5/8" (66x594x1020)

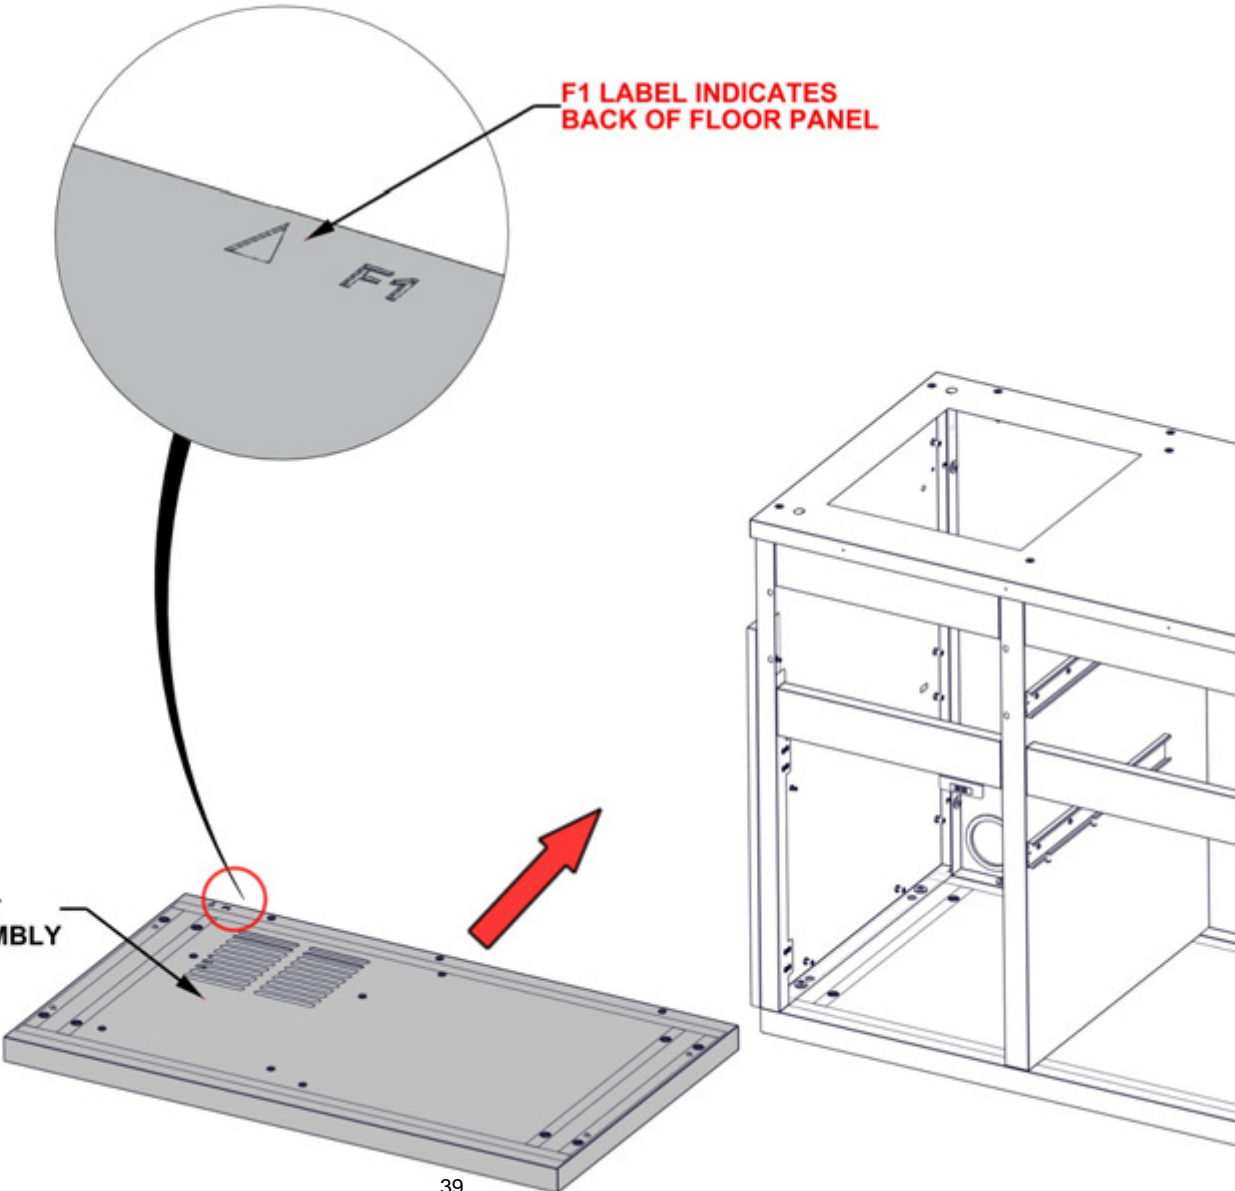


STEP 26B - GRILL CABINET ASSEMBLY

- POSITION FLOOR PANEL AS SHOWN BELOW.
- EACH FLOOR PANEL HAS FACTORY INSTALLED ADJUSTABLE FEET. USE PROVIDED HEX DRIVER TO ADJUST EACH FOOT UNTIL PANEL IS LEVEL.

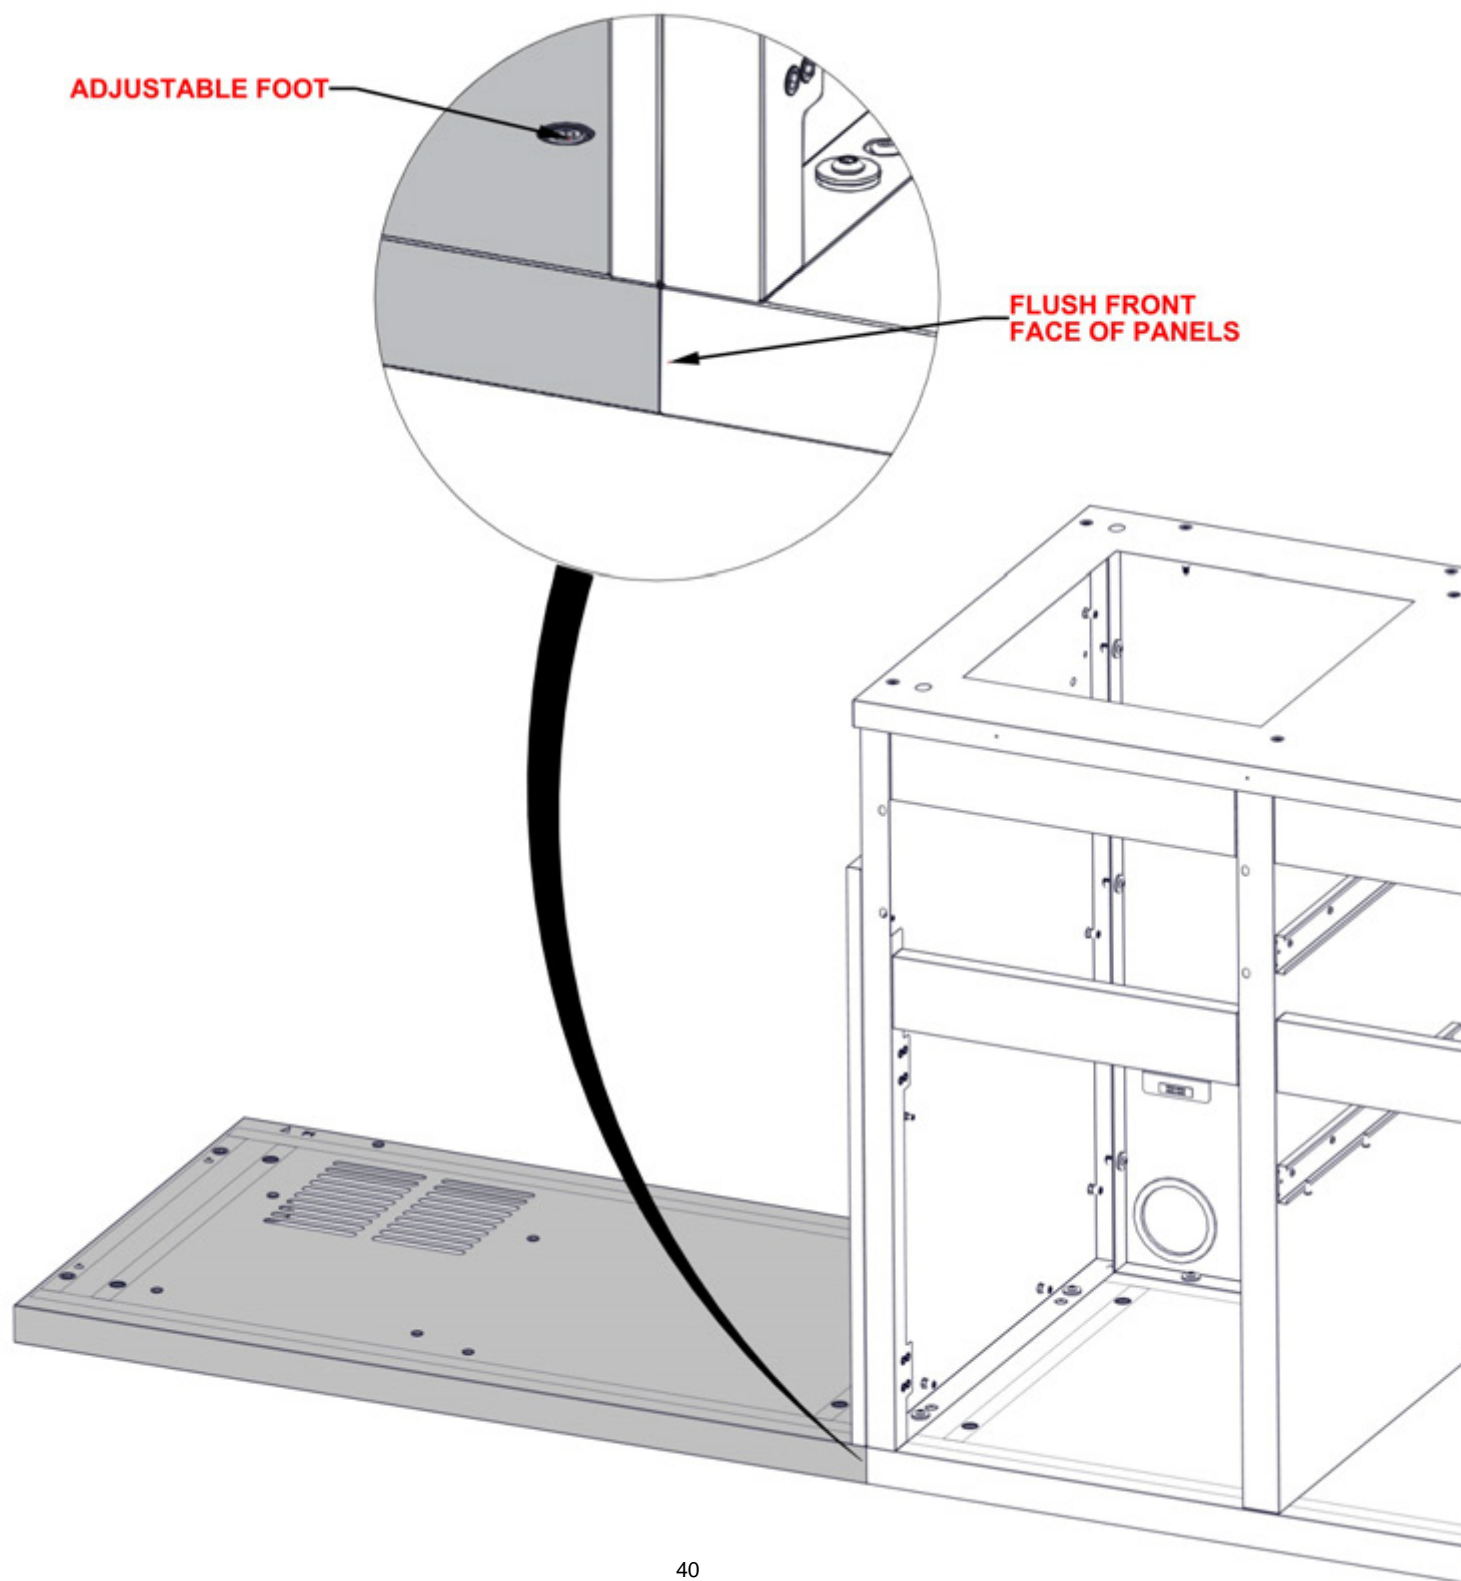


STEP 27 - PIZZA OVEN CABINET ASSEMBLY

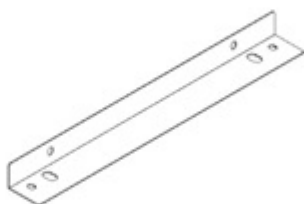

A6 ANGLED BRACKET - A4M03053
(x1) 1 3/8"x1 15/16"x1 1/8" (35x50x435)

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

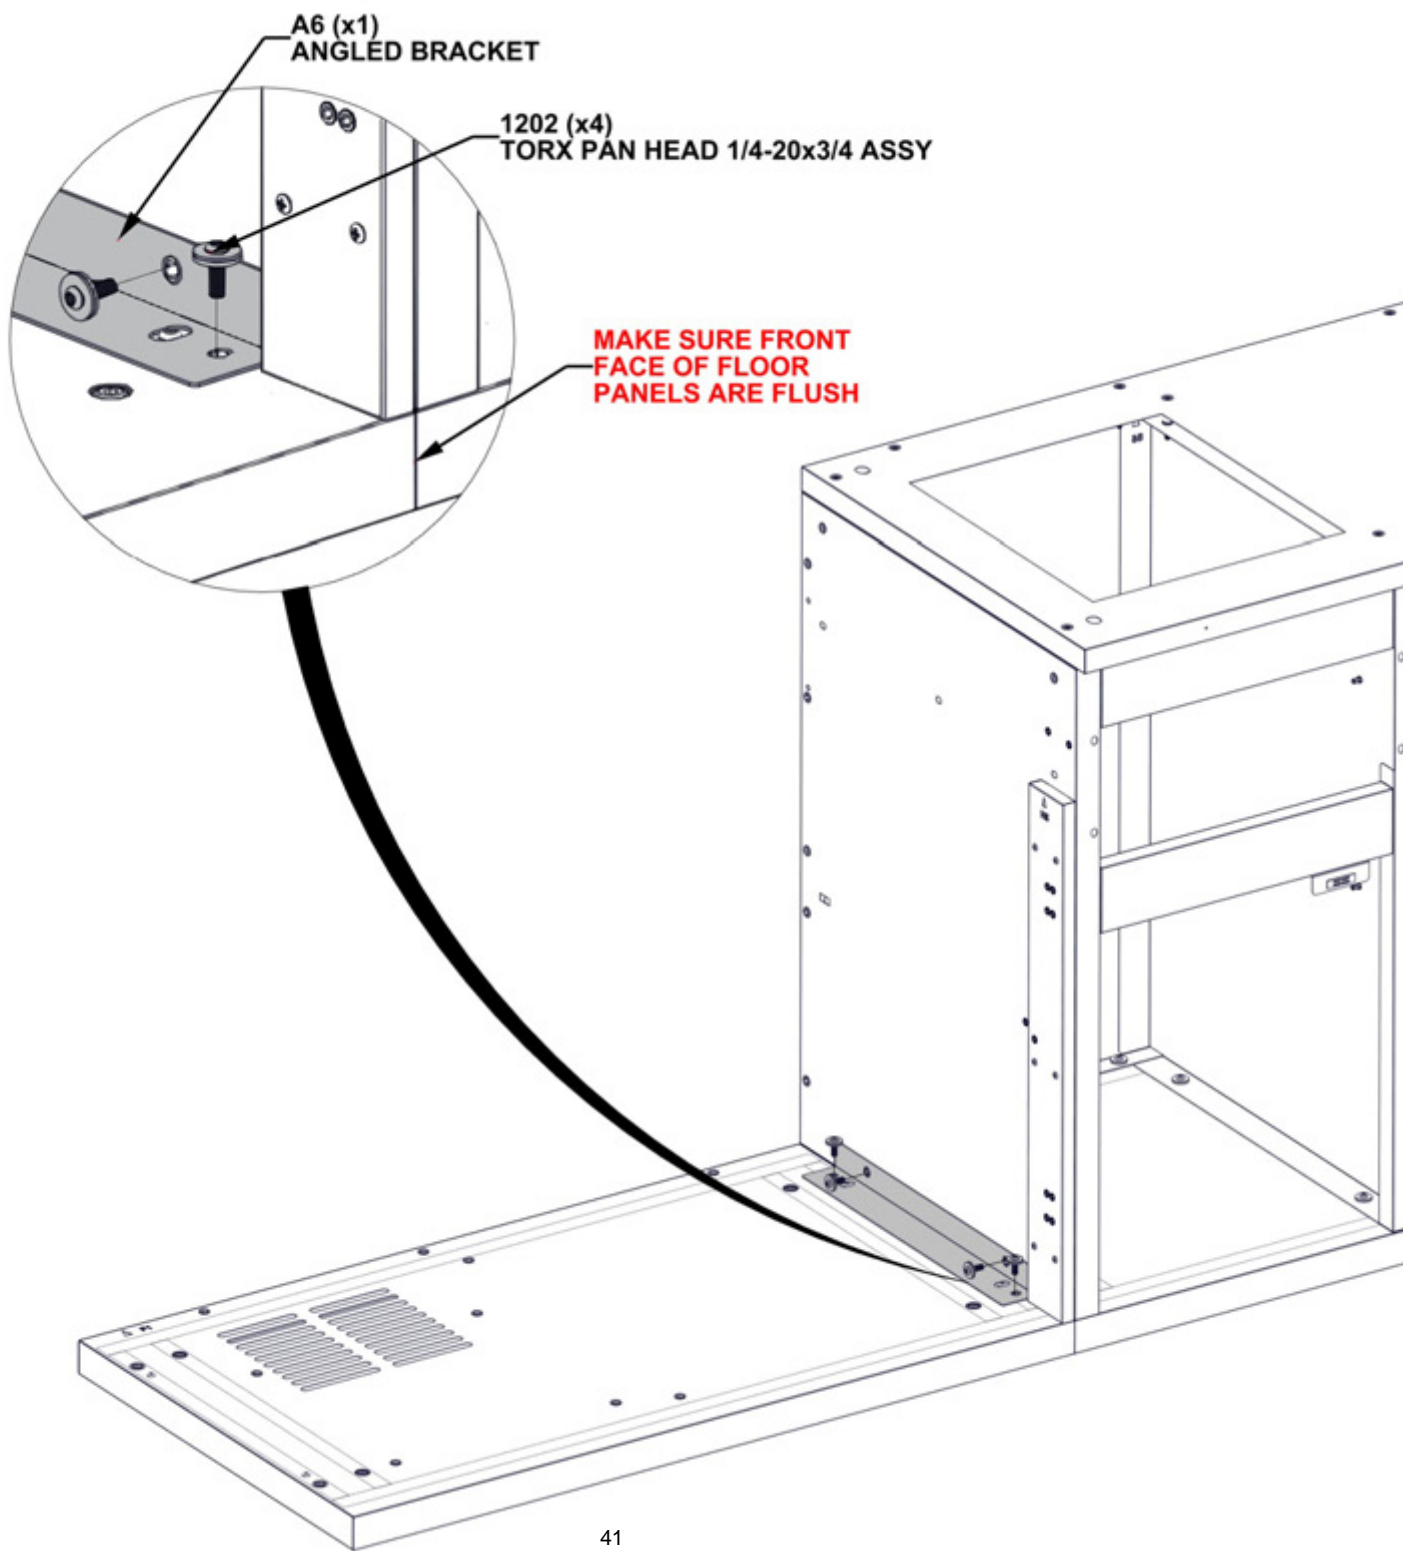


STEP 28 - PIZZA OVEN CABINET ASSEMBLY




Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S14 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY - A4M04536
(x1) 26 9/16"x23 3/8"x1 3/8" (35x594x675)

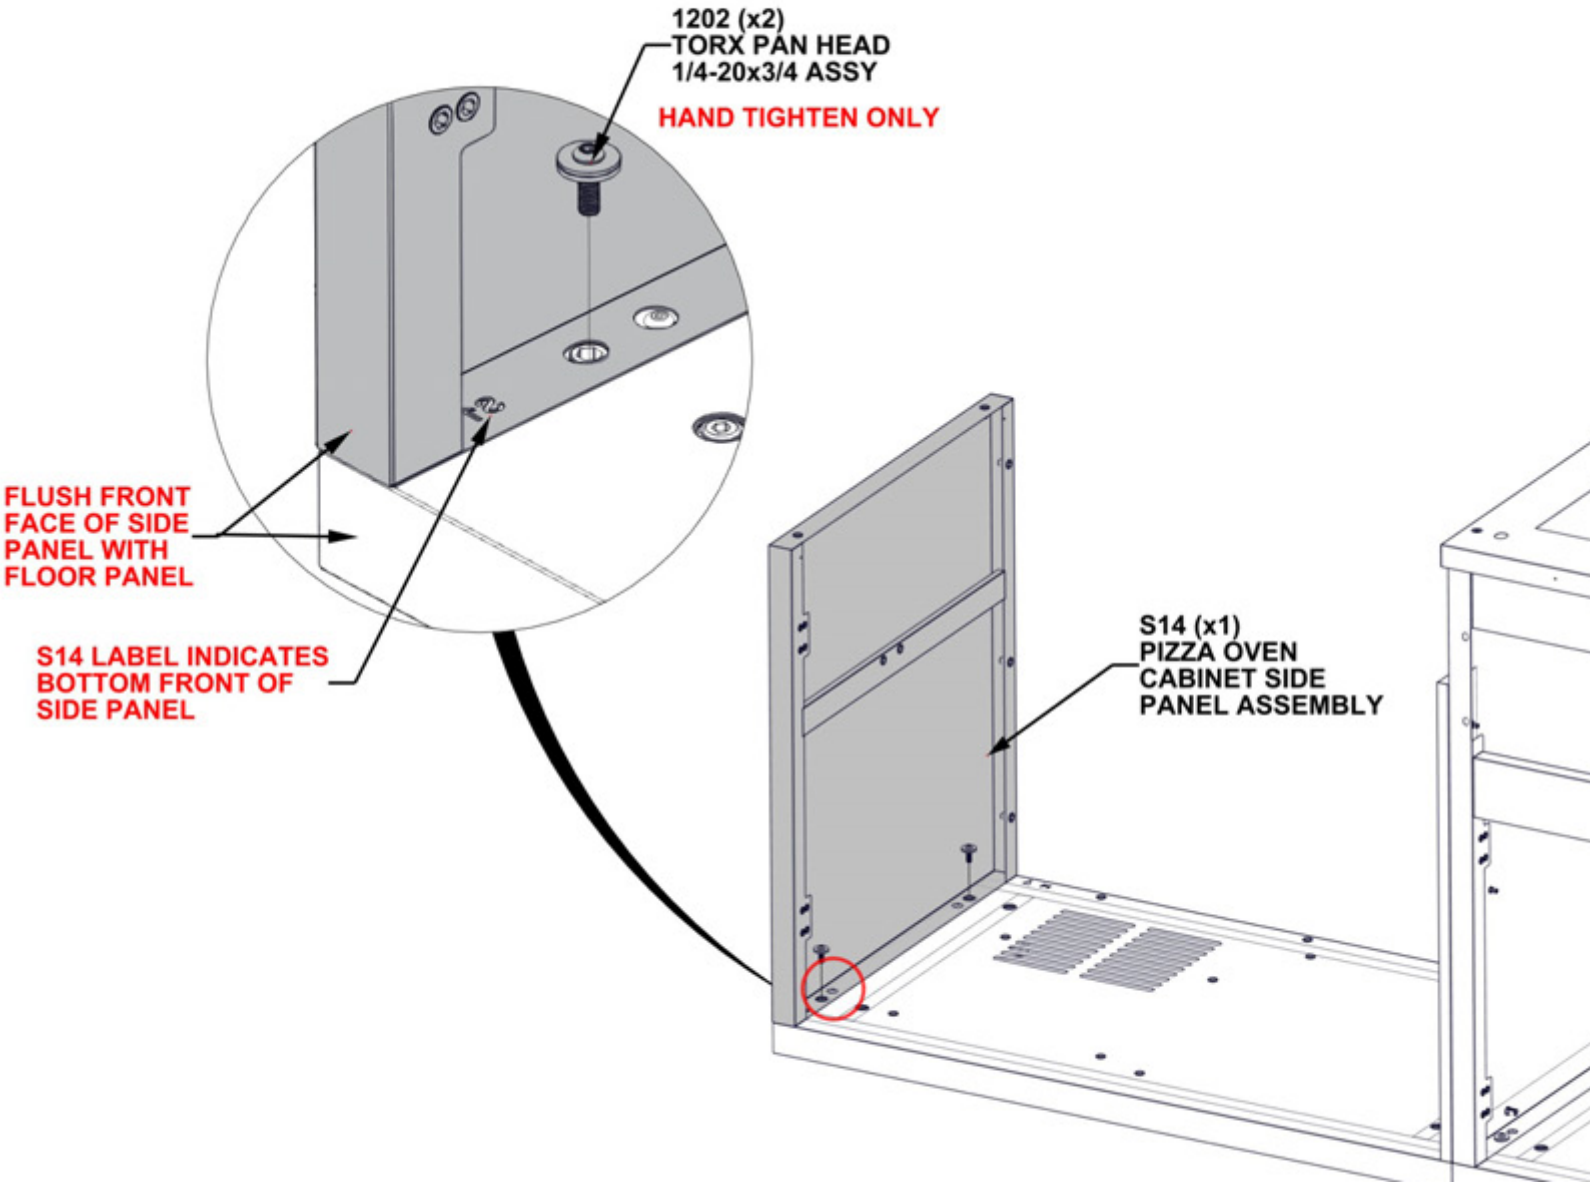

STEP 29 - PIZZA OVEN CABINET ASSEMBLY

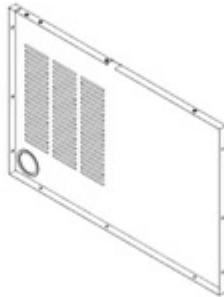

Qty	PartNo	Description
9	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


G1 PIZZA OVEN CABINET BACK PANEL ASSEMBLY - A4M03542
(x1) 38 3/4"x26 1/2"x1 3/16" (30x673.5x984)

HAND TIGHTEN ONLY


1202 (x9)
TORX PAN HEAD
1/4-20x3/4 ASSY

G1 LABEL INDICATES
TOP OF BACK PANEL

G1 (x1)
PIZZA OVEN
CABINET BACK
PANEL ASSEMBLY

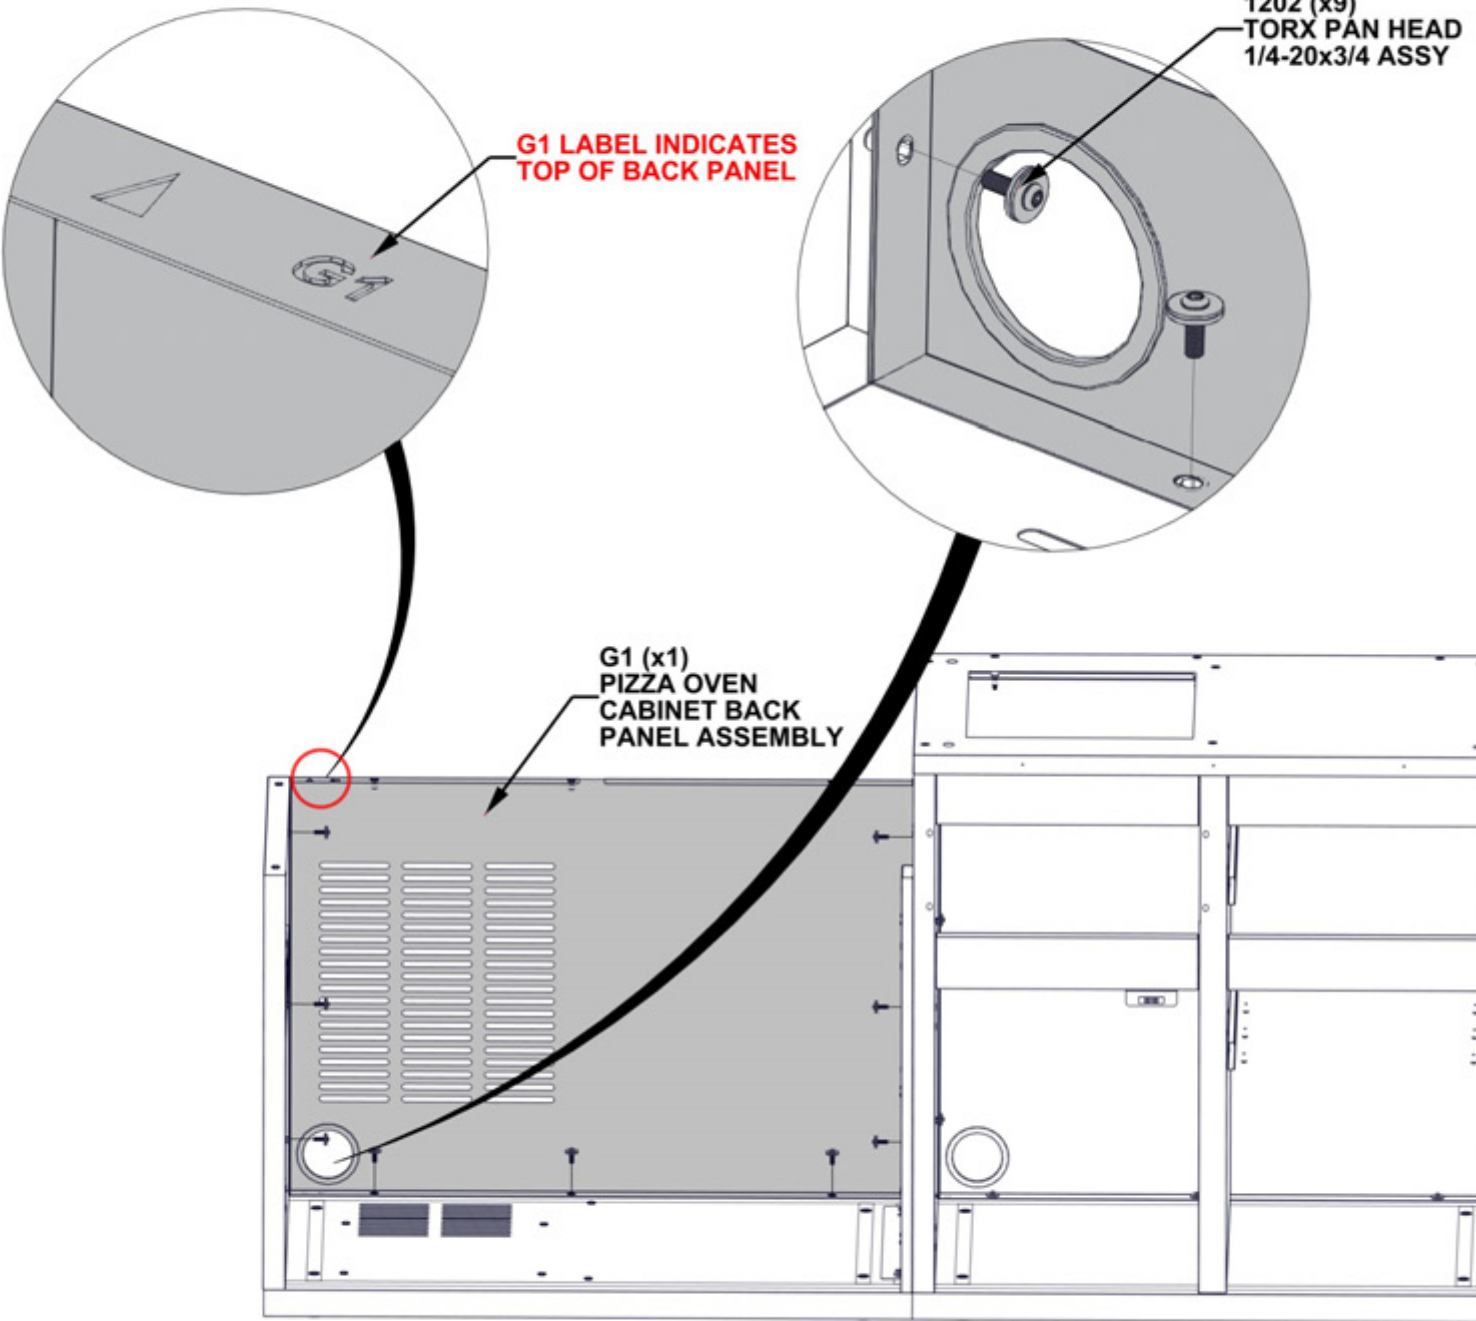


STEP 30 - PIZZA OVEN CABINET ASSEMBLY

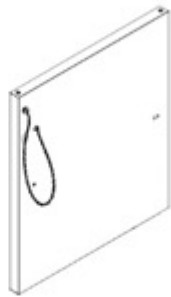


Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

S2 PIZZA OVEN CABINET SIDE PANEL ASSEMBLY M - A4M03545
(x1) 26 1/2"x23 3/8"x1 3/8" (35x593x673.5)

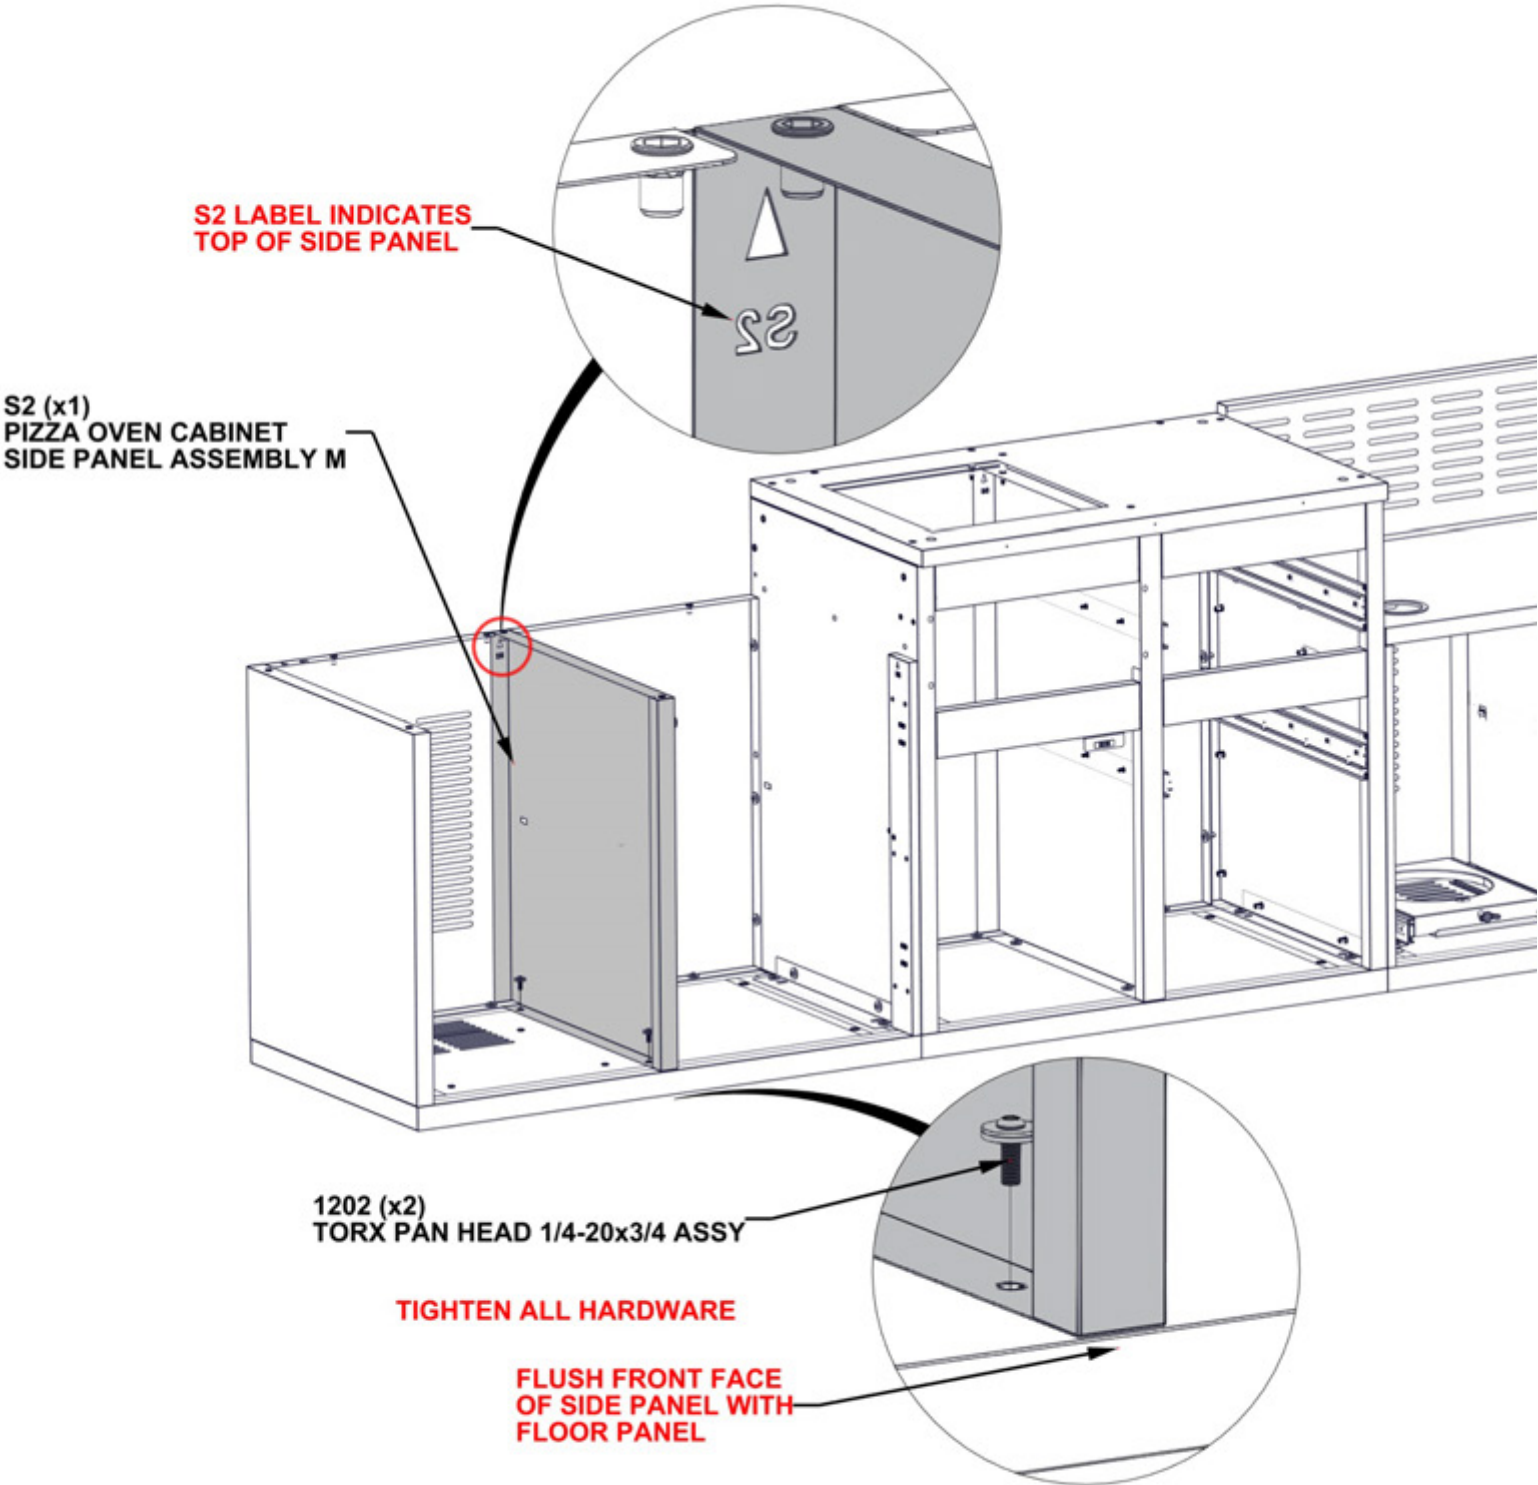


STEP 31A - PIZZA OVEN CABINET ASSEMBLY

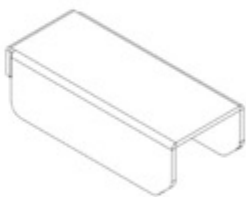


A5 SHELF BRACKET - A4M03141
(x2) 5/8"x7/8"x2 1/16" (16x22x53)

- BRACKETS WILL BE TOWARD THE BACK OF THE GRILL CABINET.
- ATTACH SHELF BRACKETS ON BOTH SIDES OF CENTER PIZZA OVEN CABINET.

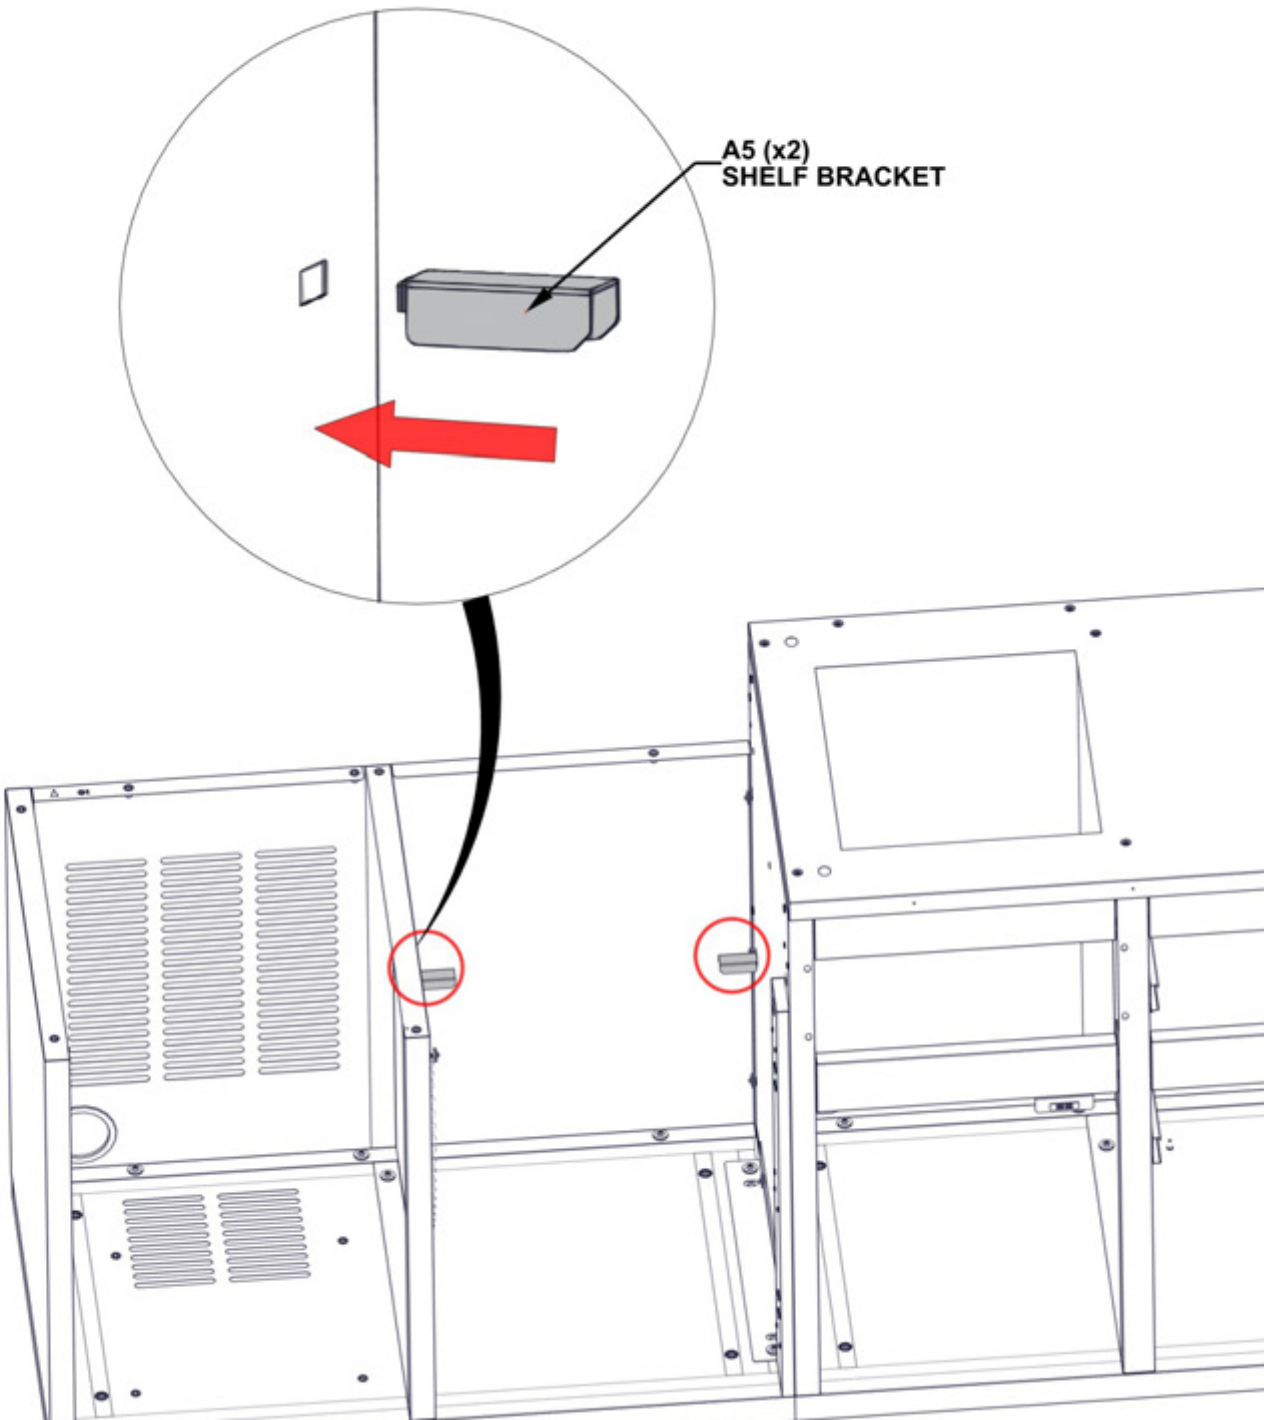


STEP 31B - PIZZA OVEN CABINET ASSEMBLY

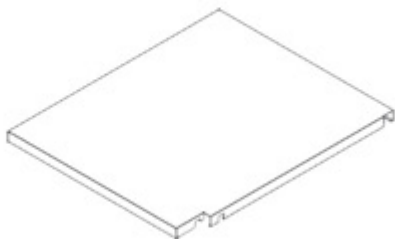

Qty	PartNo	Description
3	H101289	PAN HEAD SCREW 8-32x1/2" SS

L1 PIZZA OVEN CABINET SHELF - A4M03548
(x1) 23 1/4"x19 5/16"x1" (25.00x490.50x591.00)

- ALIGN SHELF WITH THREADED INSERTS AND ATTACH HARDWARE TO FASTEN IN PLACE.

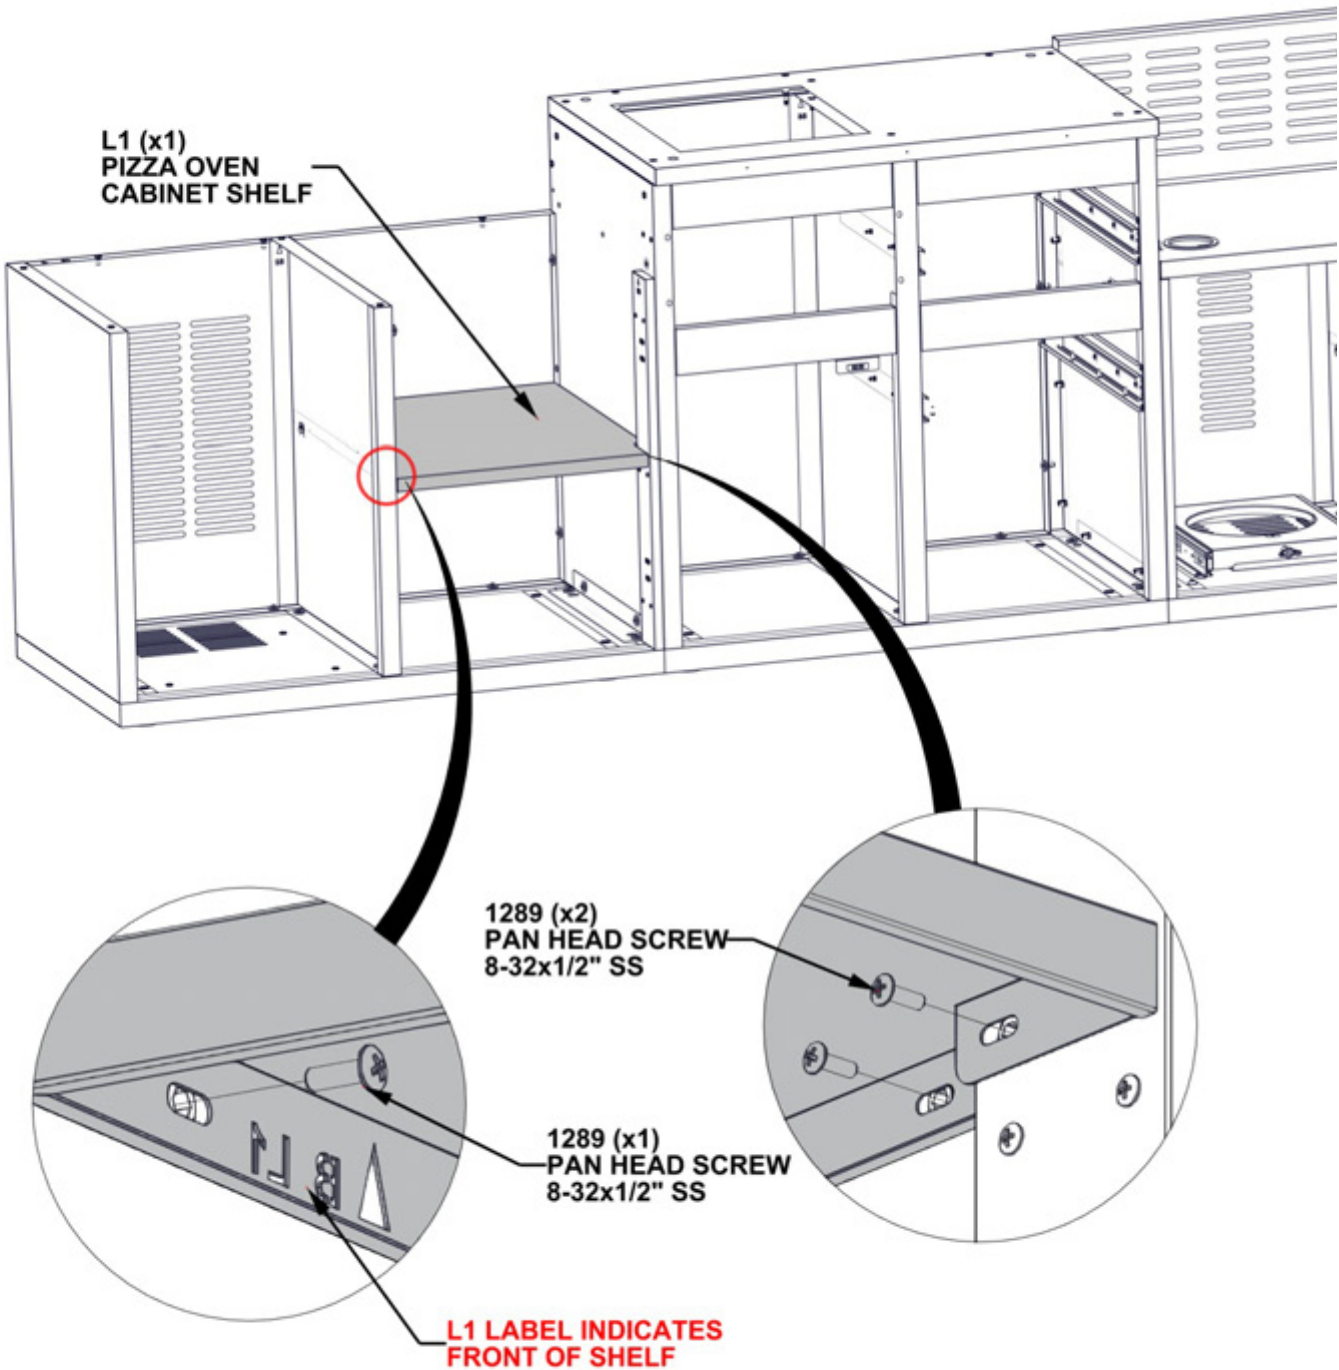


STEP 32 - PIZZA OVEN CABINET ASSEMBLY




A9 HOSE BRACKET ASSEMBLY - A4M03060
(x1) 1 1/4"x1 7/16"x2 9/16" (31.5x36.5x65)

Qty	PartNo	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

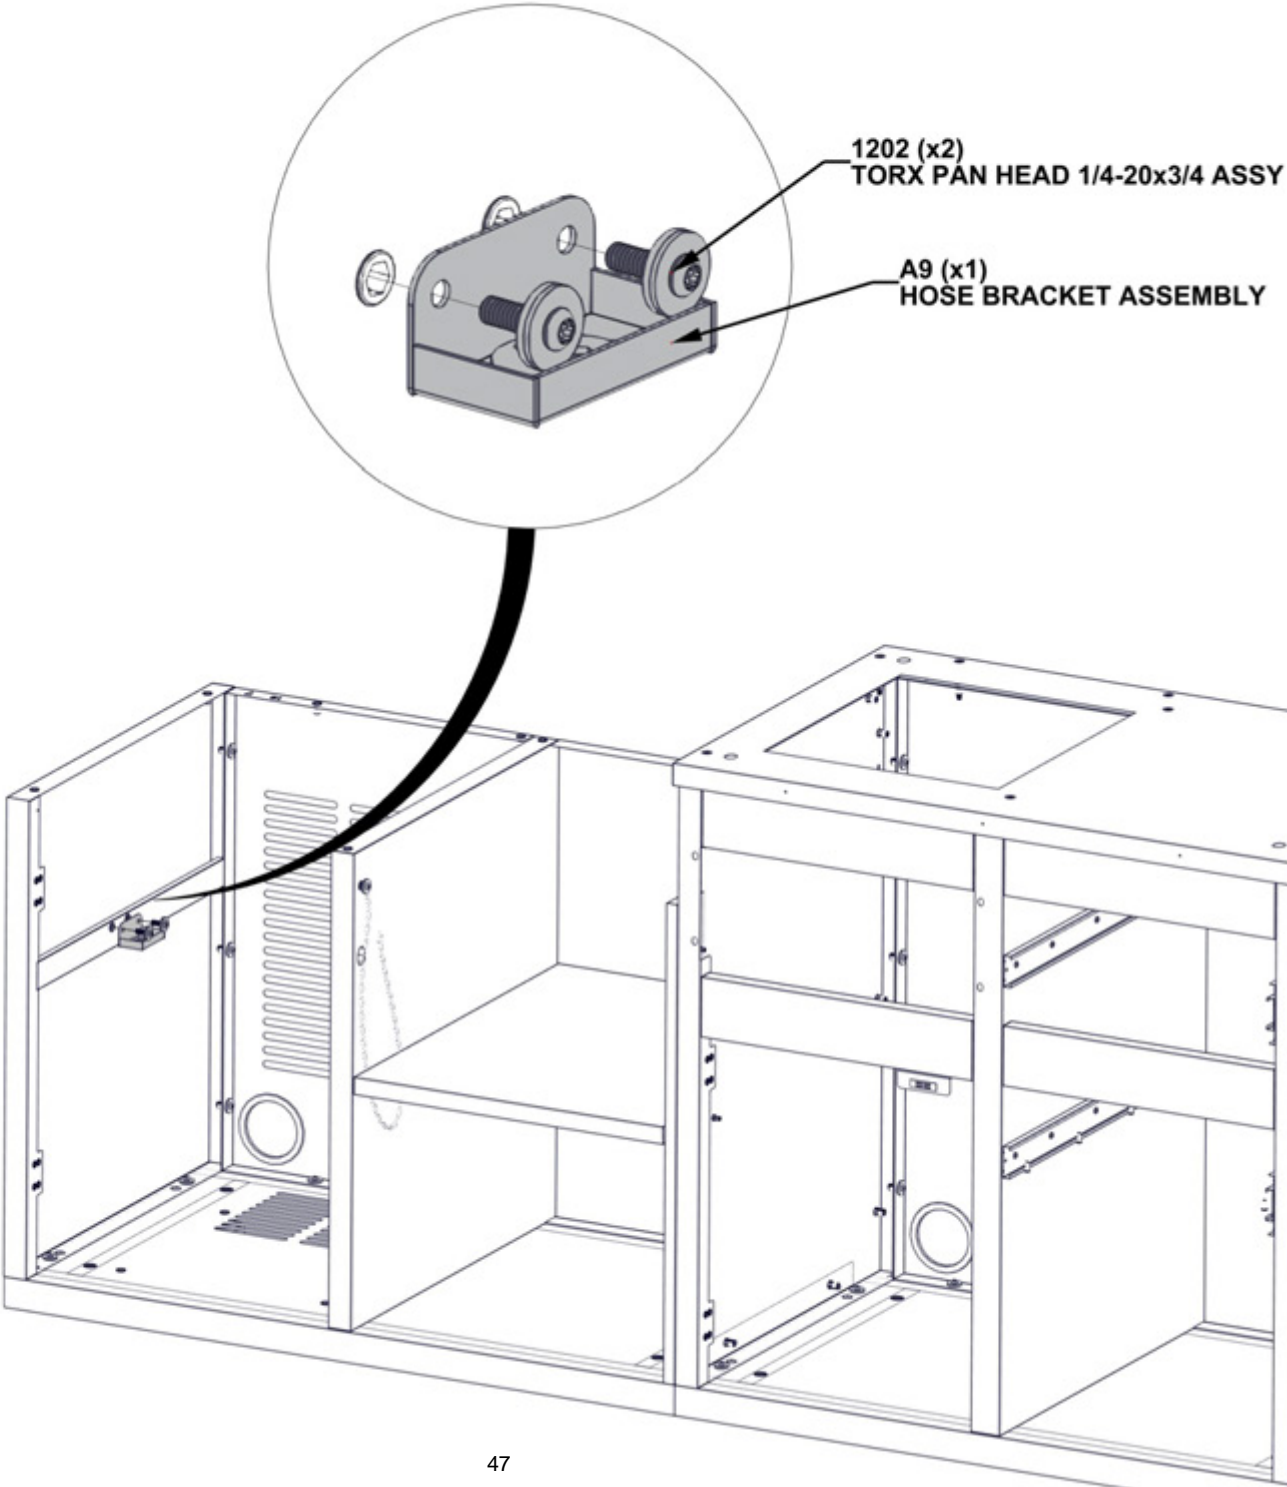



STEP 33 - GRILL CABINET ASSEMBLY

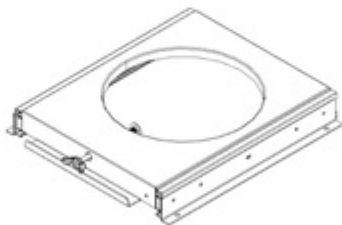


Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"

A13 GAS TANK HOLDER ASSEMBLY - A4M03047
(x1) 1 15/16"x12 7/8"x14 3/4" (49x327x374)

A13 (x1)
GAS TANK HOLDER
ASSEMBLY

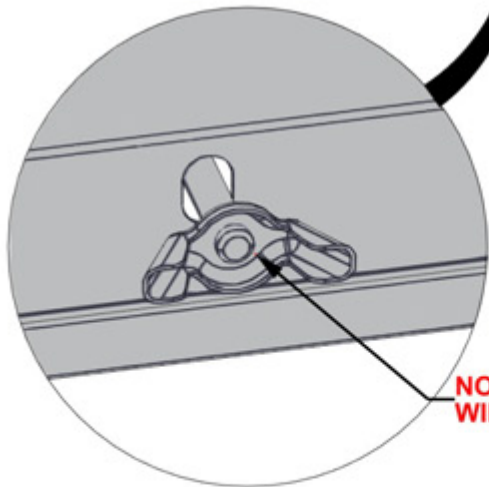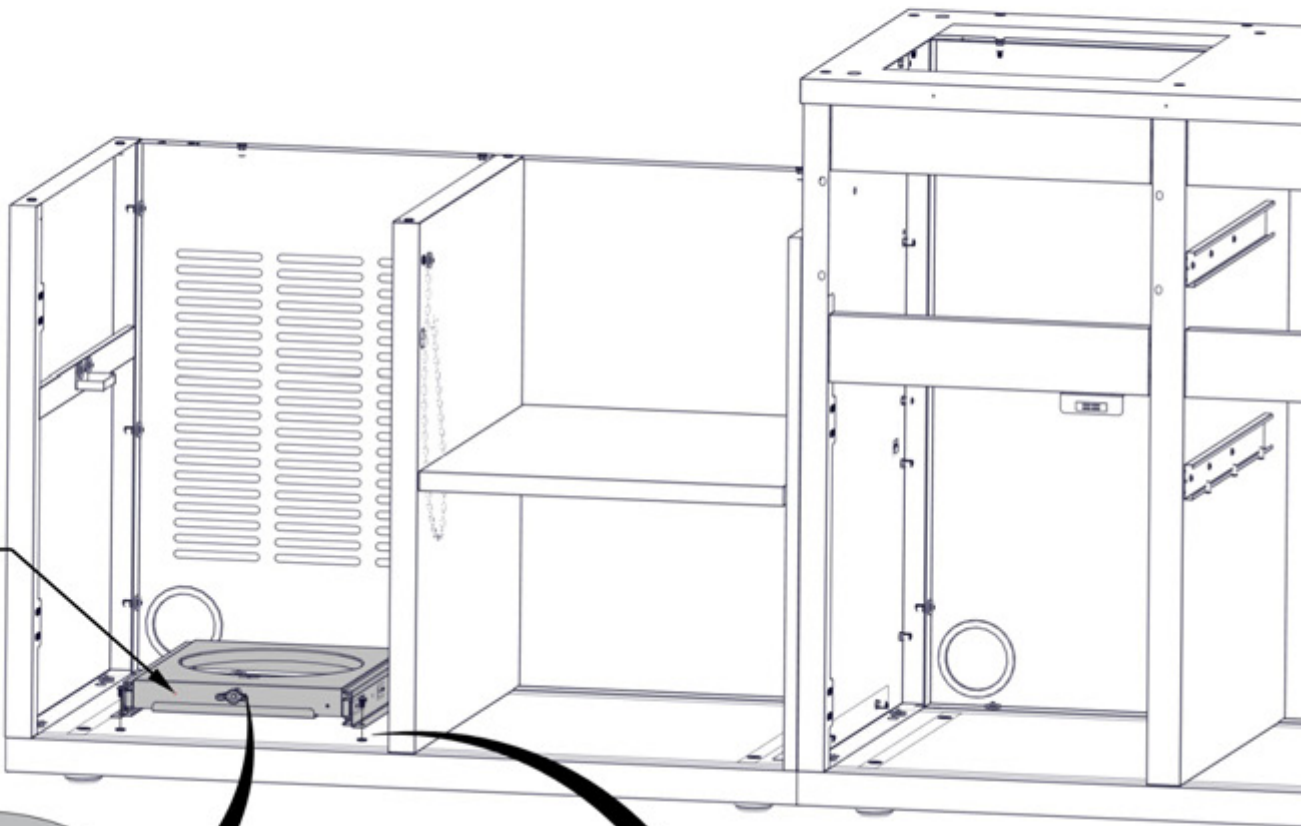


NOTE ORIENTATION OF
WING NUT TOWARDS FRONT

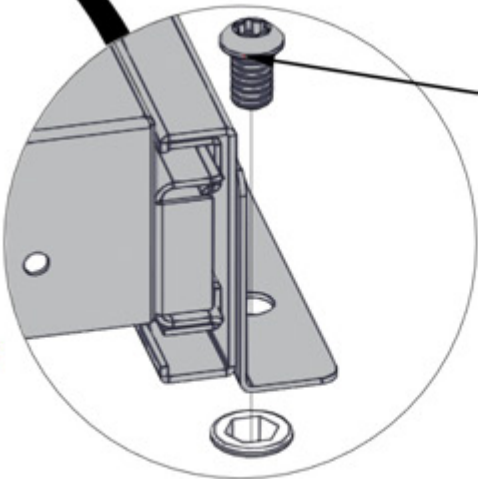

1292 (x4)
TORX PAN HEAD
1/4-20x13/32"

STEP 34 - PIZZA OVEN CABINET ASSEMBLY


Qty	PartNo	Description
4	H101289	PAN HEAD SCREW 8-32x1/2" SS

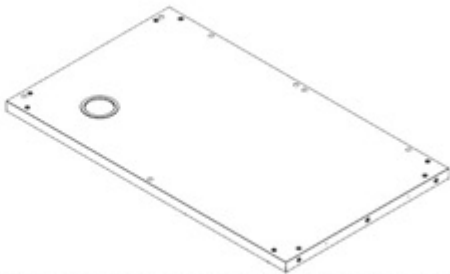

T1 PIZZA OVEN CABINET TABLETOP ASSEMBLY - A4M03543
(x1) 40 3/16"x23 3/8"x1 1/4" (32x594x1020)



A2 MAGNET BRACKET - A4M03026
(x2) 1"x1 1/4"x3 1/8" (25x31x80)

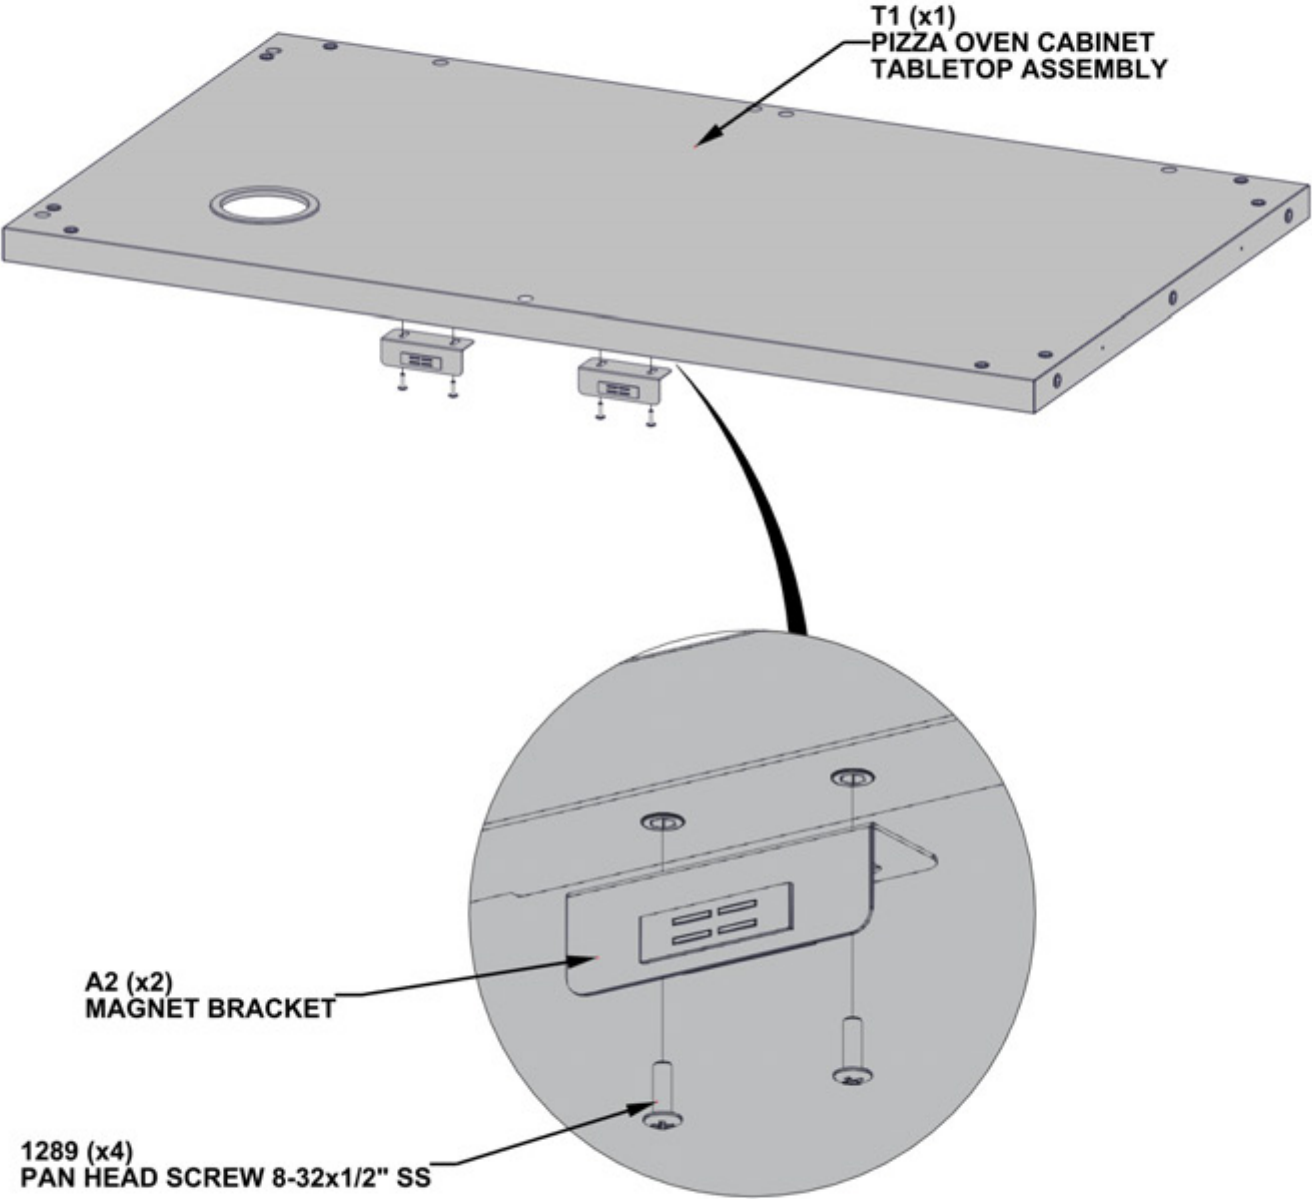


STEP 35A - PIZZA OVEN CABINET ASSEMBLY



PIZZA OVEN TABLETOP
ASSEMBLY FROM STEP 34


Qty	PartNo	Description
3	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- HARDWARE ATTACHES ON INSIDE OF CABINET

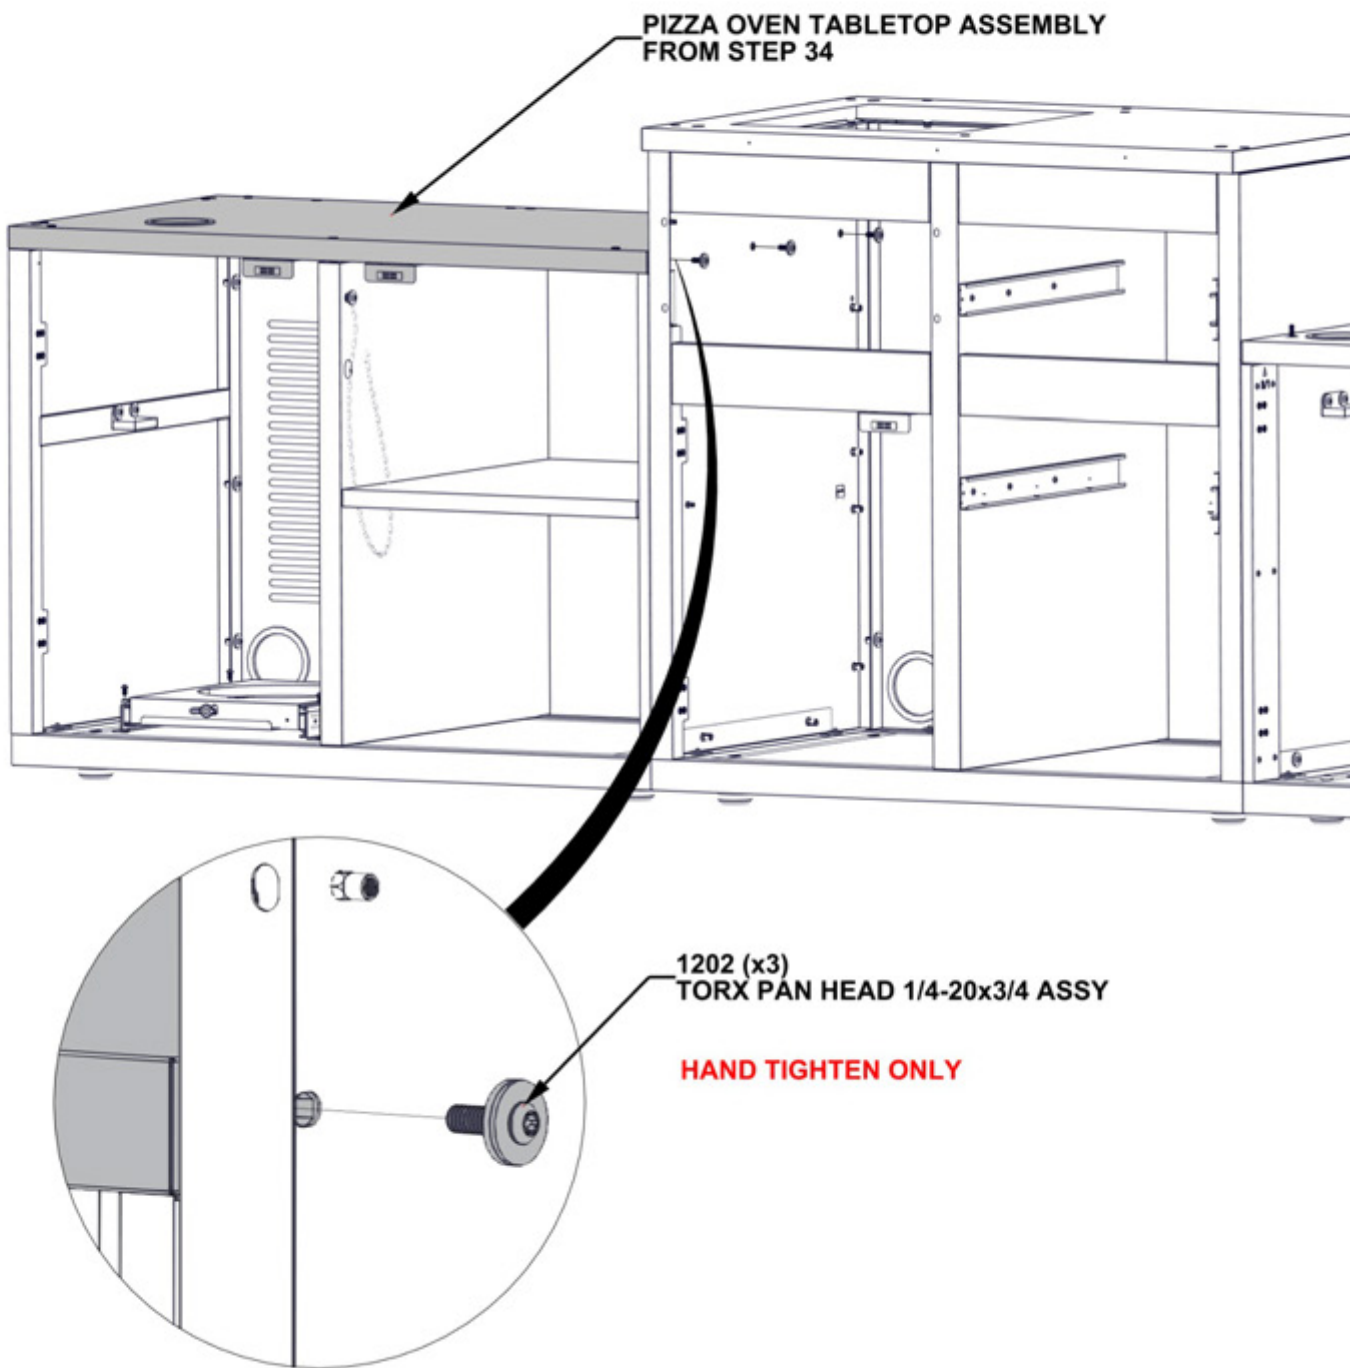


STEP 35B - PIZZA OVEN CABINET ASSEMBLY

Qty	PartNo	Description
7	H101103	TORX SOCKET SCREW 1/4-20

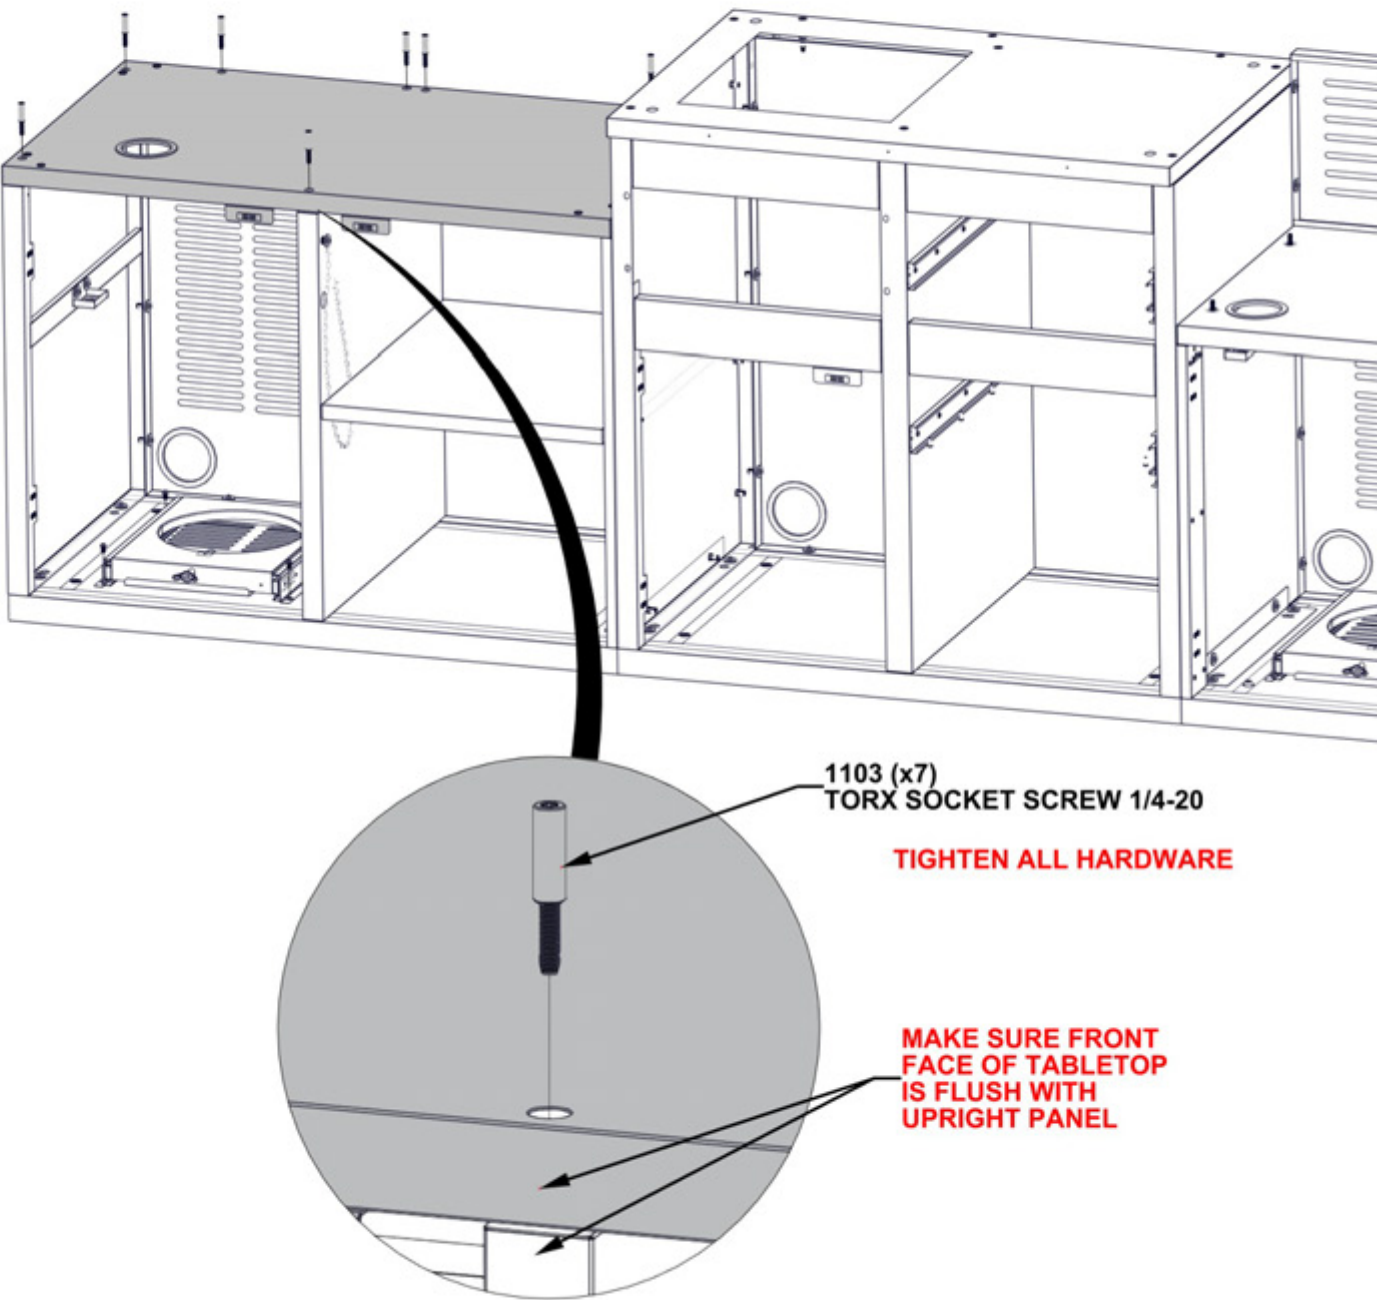


STEP 36 - PIZZA OVEN CABINET ASSEMBLY

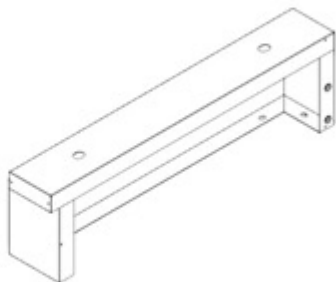


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

T5 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY L - A4M04537
(x1) 24 1/8"x4 5/16"x6 3/4" (109x172.2x612)

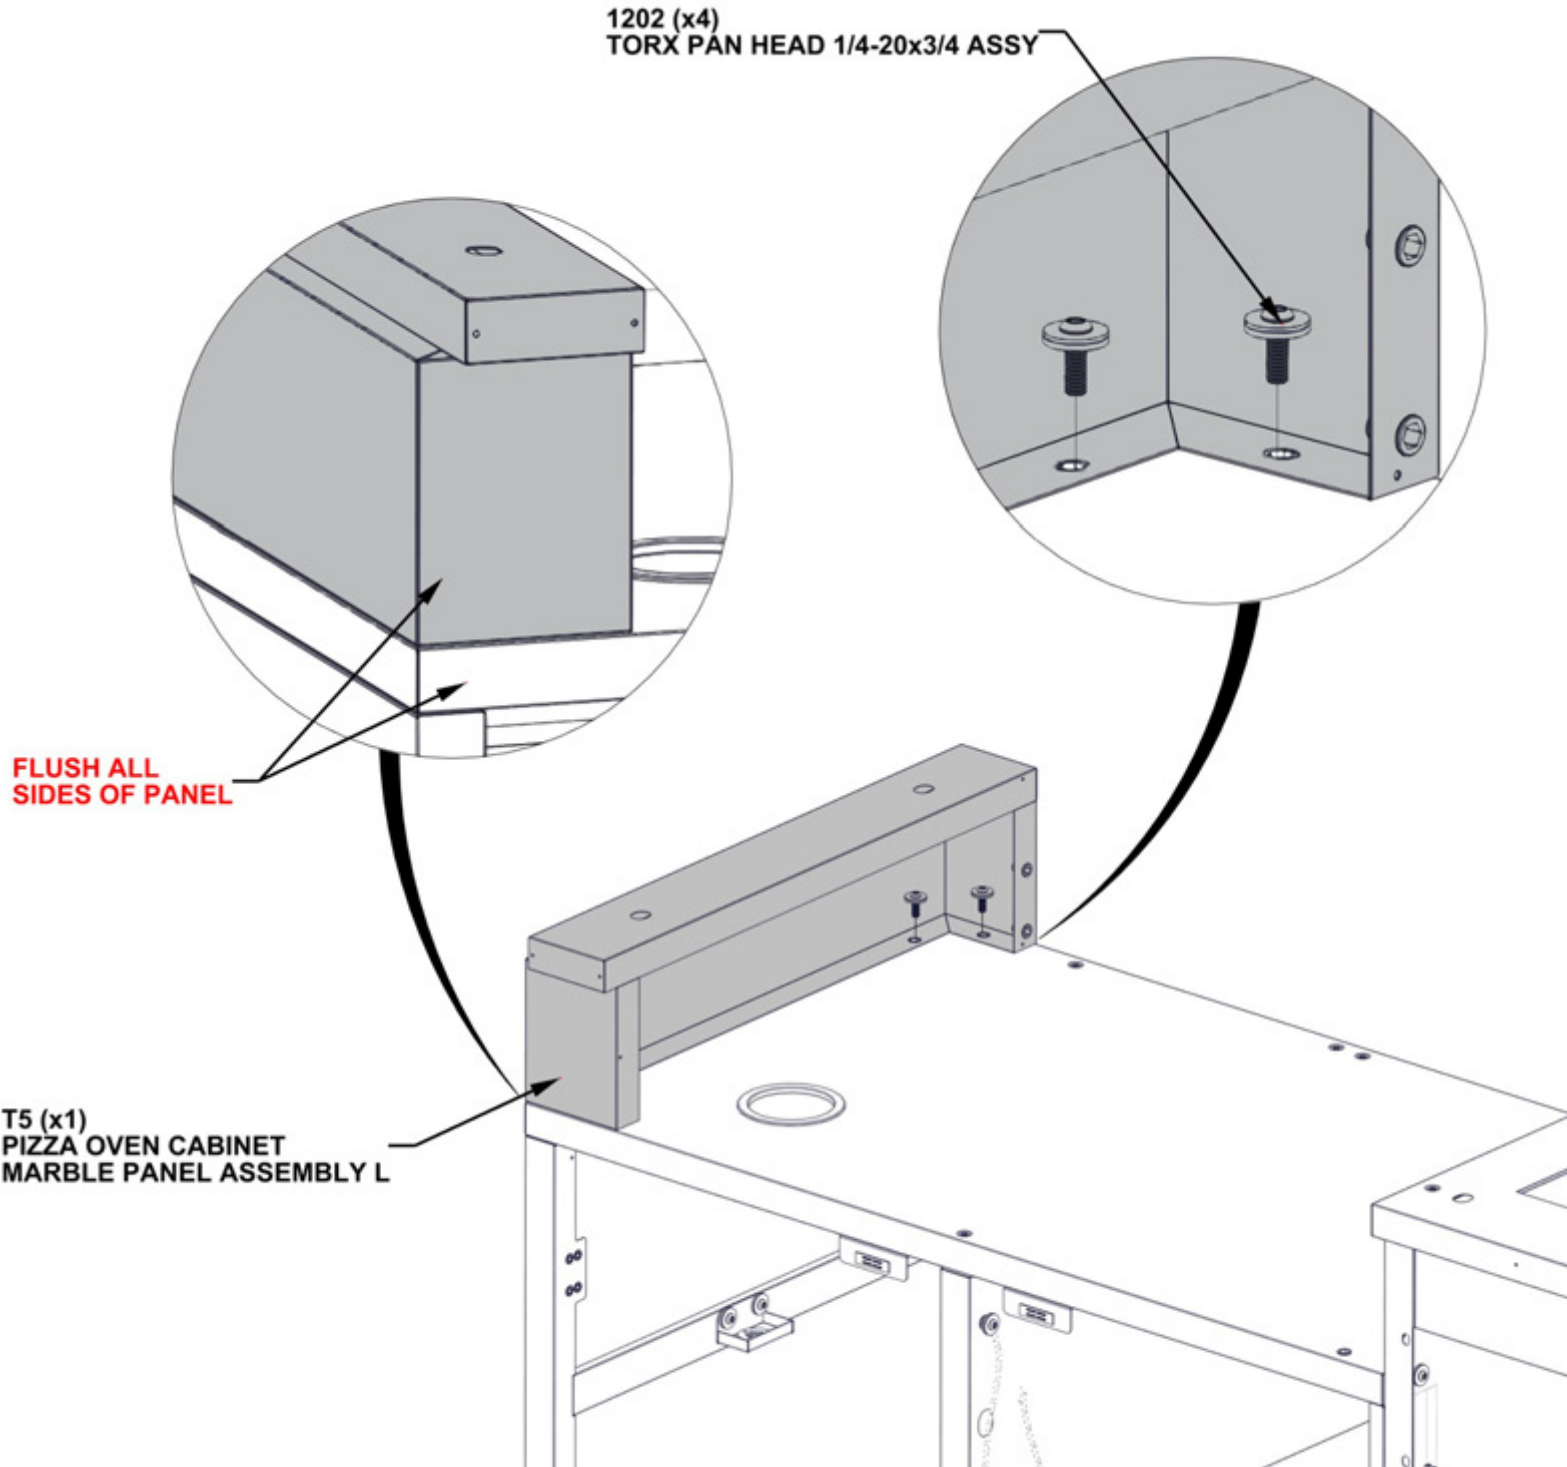


STEP 37 - PIZZA OVEN CABINET ASSEMBLY

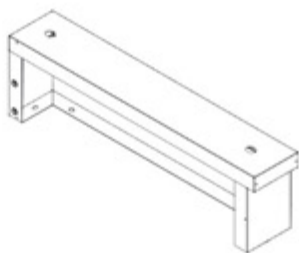


Qty	PartNo	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

T3 PIZZA OVEN CABINET MARBLE PANEL ASSEMBLY R - A4M03551
(x1) 612x4 5/16"x6 3/4" (109x172.2x612)

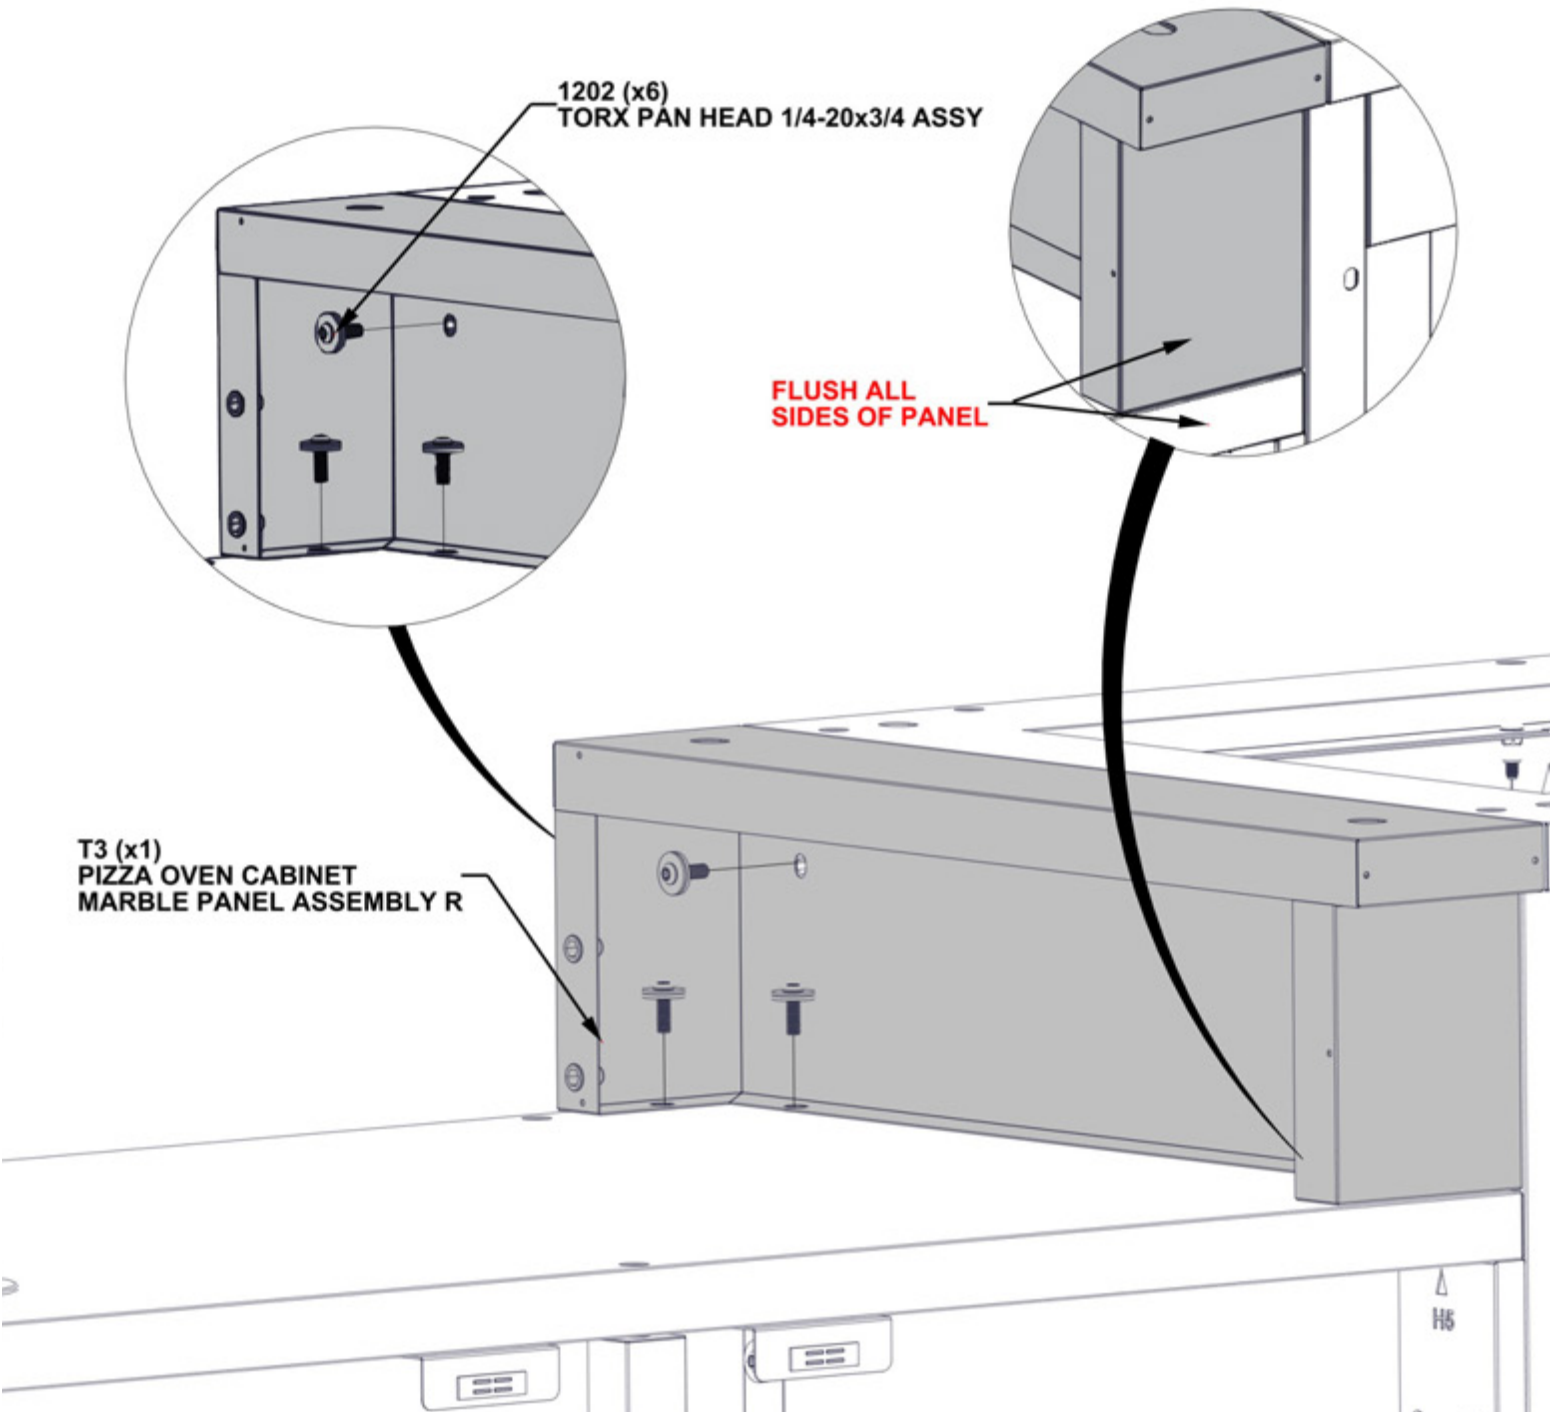


STEP 38 - PIZZA OVEN CABINET ASSEMBLY

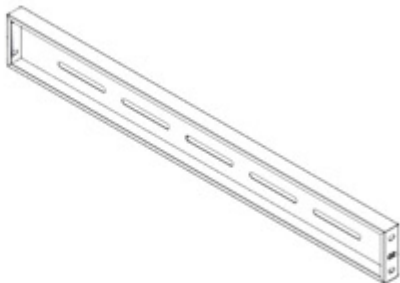


Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

O8 PIZZA OVEN VENTILATION PANEL - A4M03078
(x1) 1 3/16"x3 3/4"x31 7/16" (30x95x798)

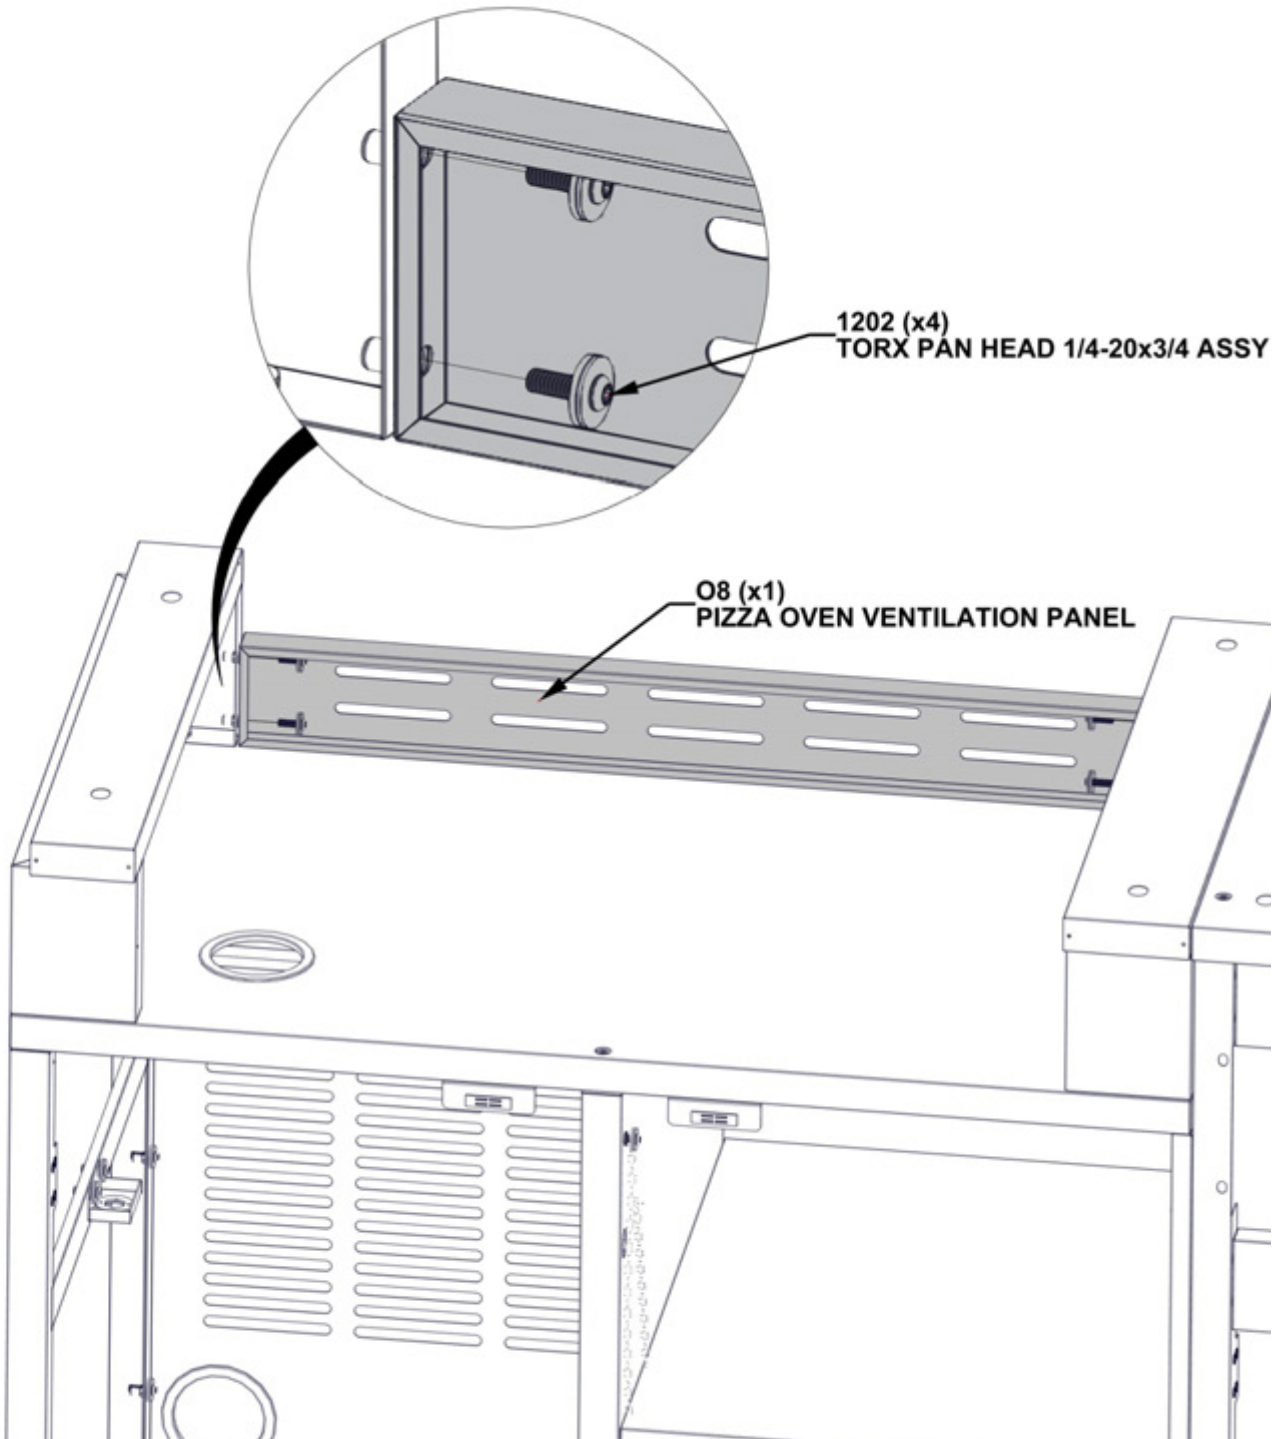

STEP 39 - SINK CABINET FALSE PANEL ASSEMBLY


Qty	PartNo	Description
2	H101289	PAN HEAD SCREW 8-32x1/2" SS

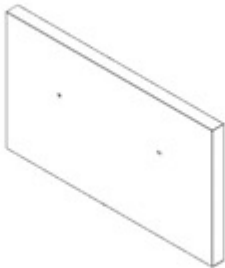


D5 SINK CABINET TRIM PANEL - A4M03576
(x1) 17 13/16"x10 1/4"x1" (26x260x452)



H2 STAINLESS STEEL HANDLE - A4M03024
(x1) 5/8"x1 9/16"x11 13/16" (16x40x300)

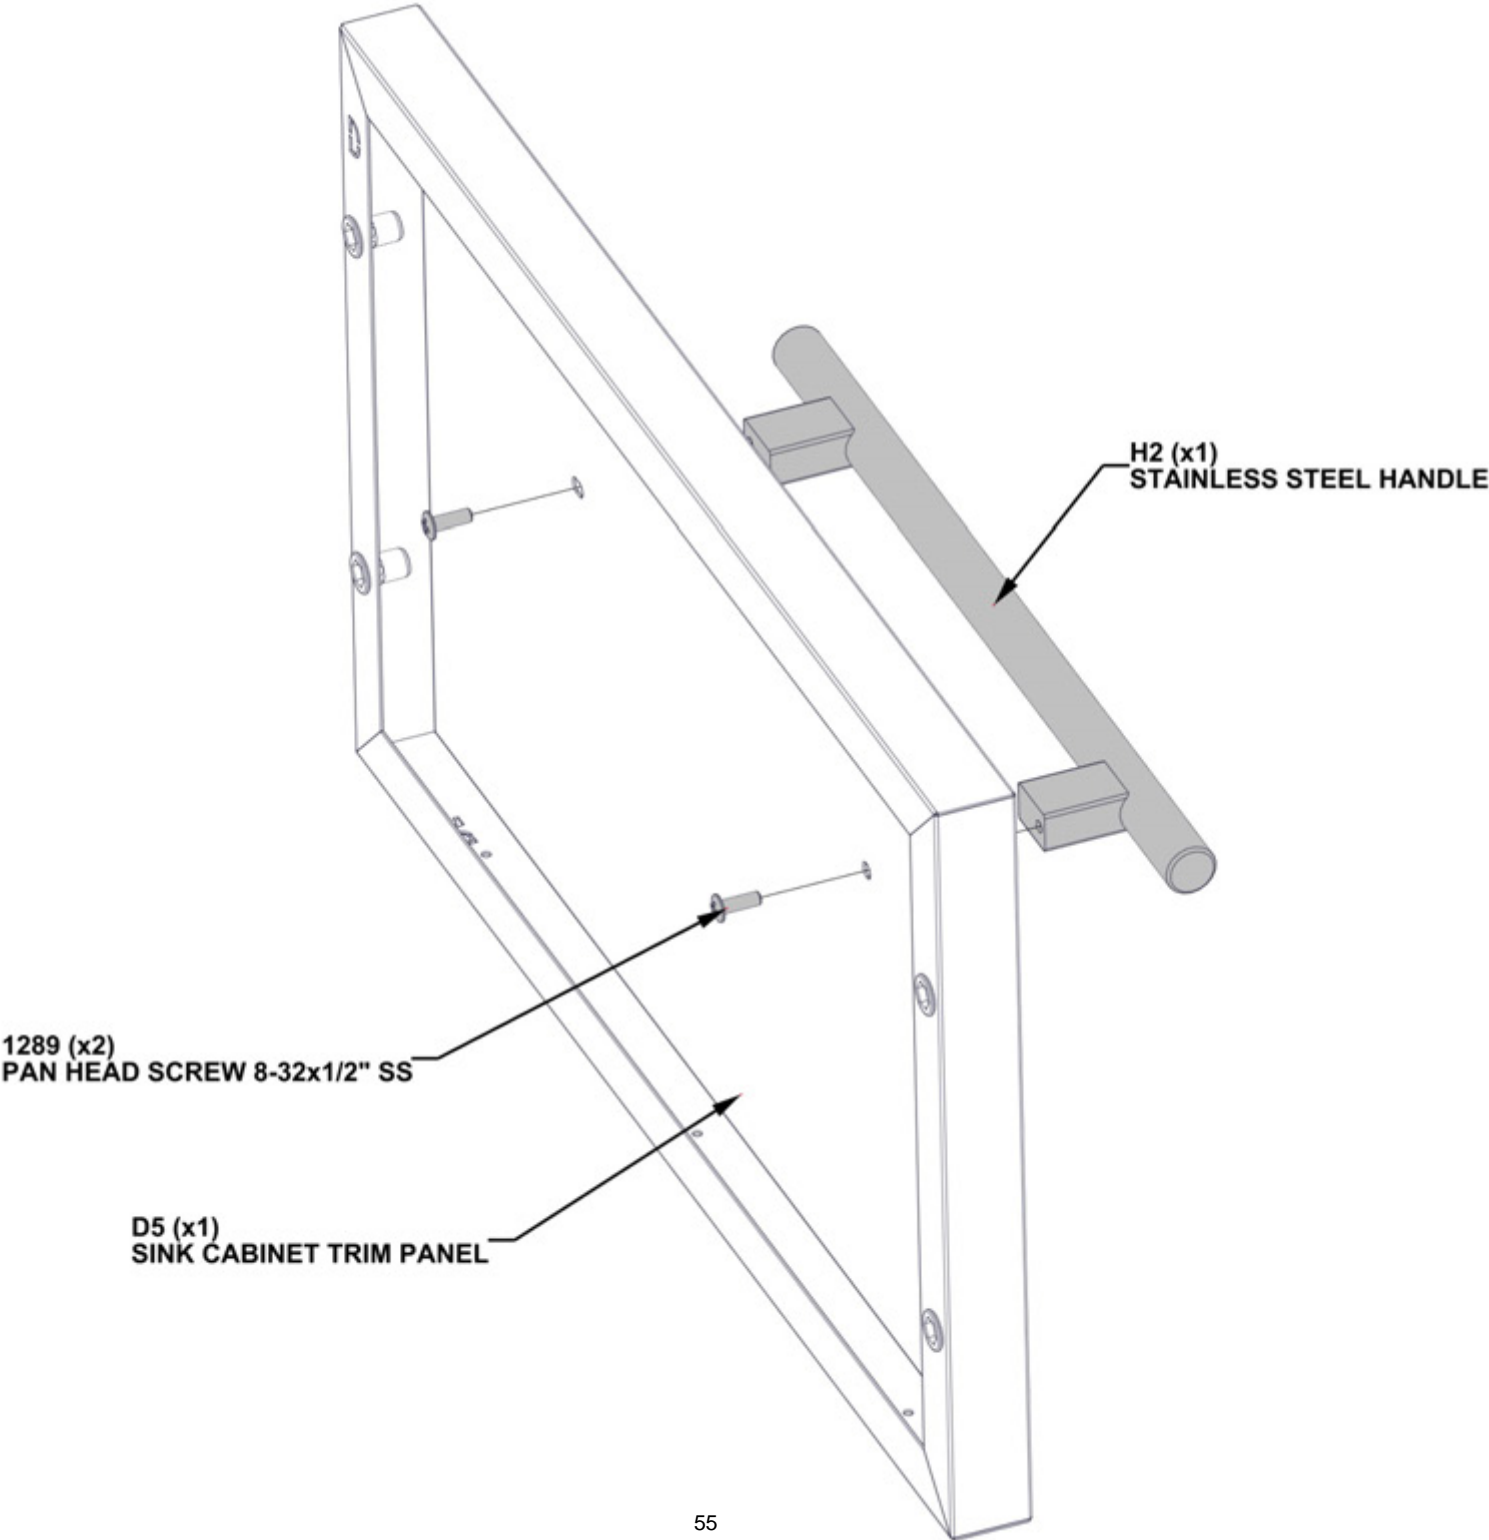


STEP 40 - SINK CABINET FALSE PANEL ATTACHMENT

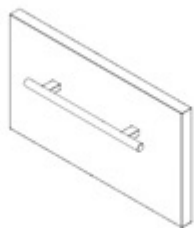


FALSE PANEL ASSEMBLY
FROM STEP 39

Qty	PartNo	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

- HARDWARE ATTACHES ON INSIDE OF CABINET.

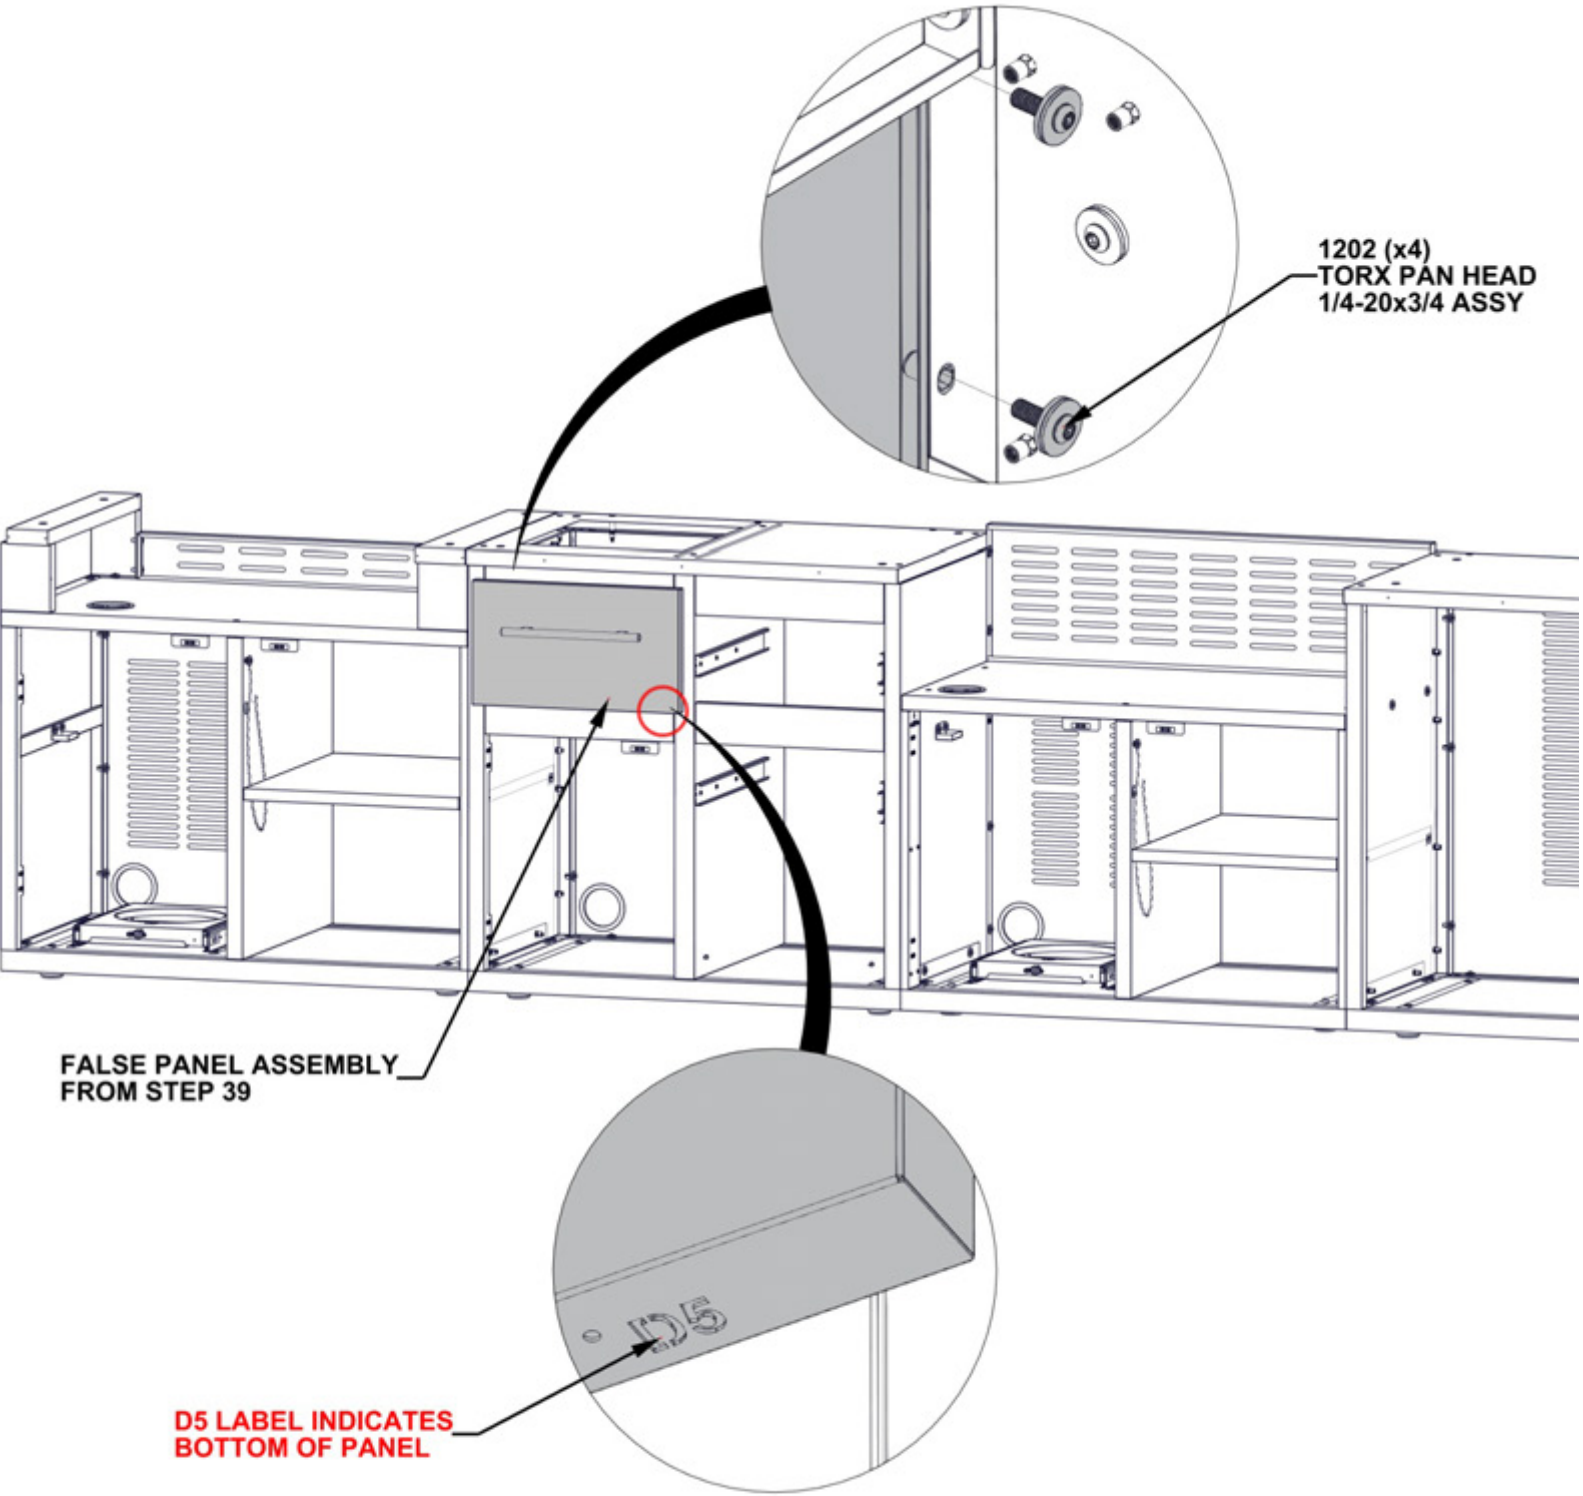


STEP 41A - SINK PRE-ASSEMBLY

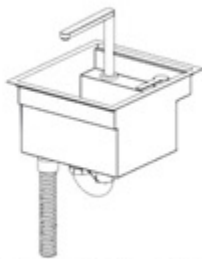

A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)


1. INSTALLING THE SINK DRAIN

- SET DRAIN INSIDE OF SINK BODY, PLACING FOAM GASKET BETWEEN SURFACES.
- FASTEN IN PLACE USING RUBBER GASKET AND DRAIN NUT FROM BOTTOM SIDE.

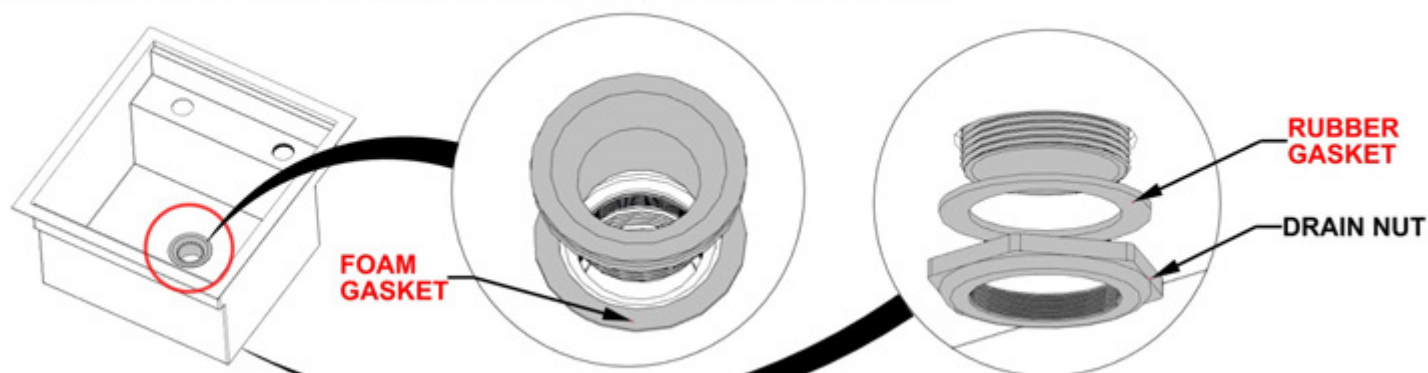


2. INSTALLING THE FAUCET

- INSTALL FAUCET BY PLACING HANDLE AND SPOUT INTO SINK OPENINGS AND SECURING IN PLACE VIA NUT.
- INSERT SCREWS TO LOCK.
- CONNECT WATER FAUCET LINES TOGETHER.

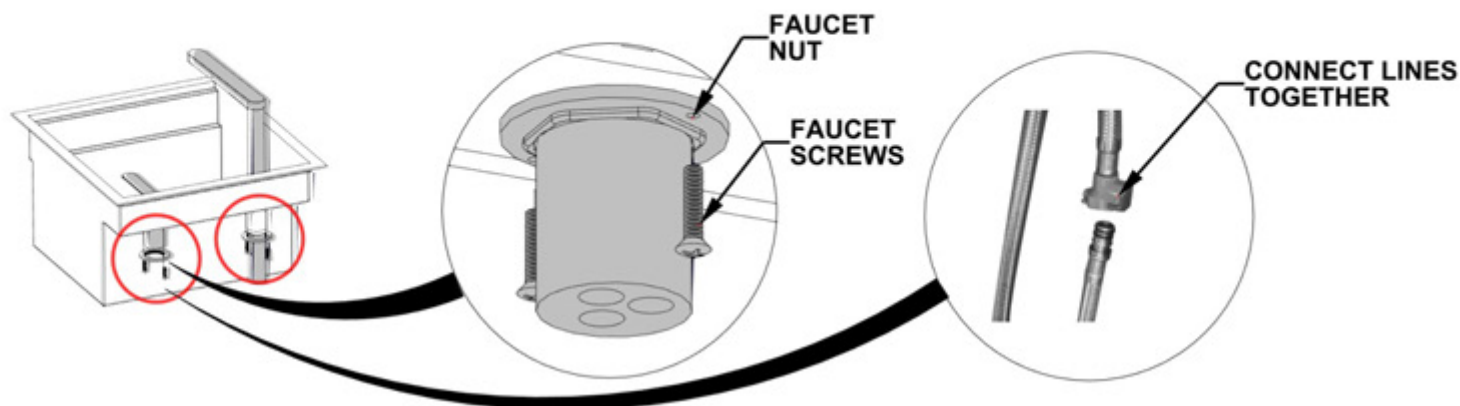


3. INSTALLING THE DRAIN FITTING

- ATTACH DRAIN FITTING TO SINK DRAIN.

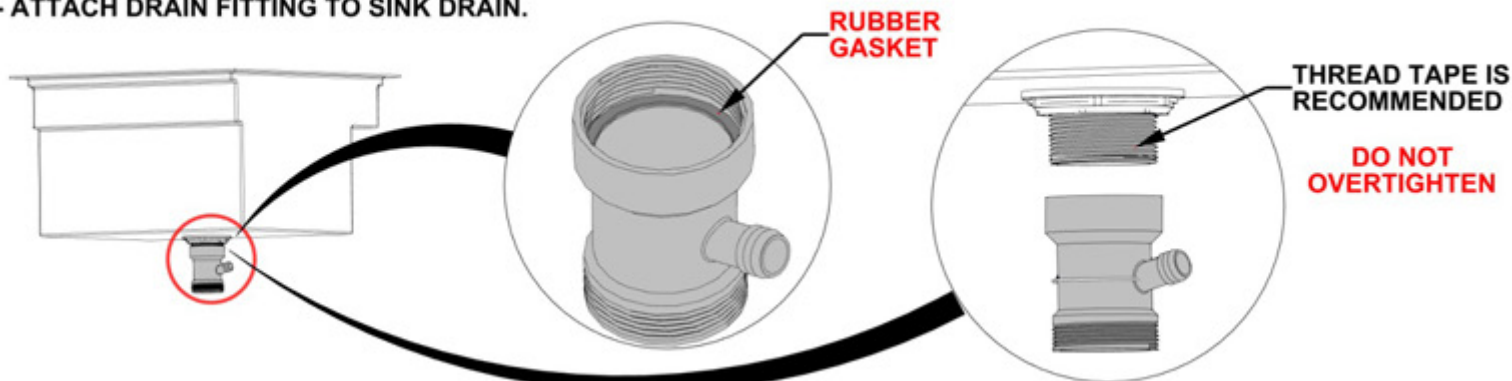


STEP 41B - SINK PRE-ASSEMBLY

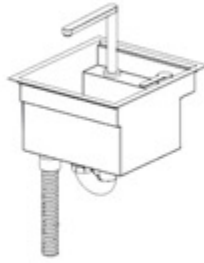

A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)


4. INSTALLING THE OVERFLOW DRAIN

- MAKE SURE RUBBER GASKET IS INSTALLED IN OVERFLOW DRAIN.
- INSERT DRAIN SCREW TO HOLD IN PLACE.

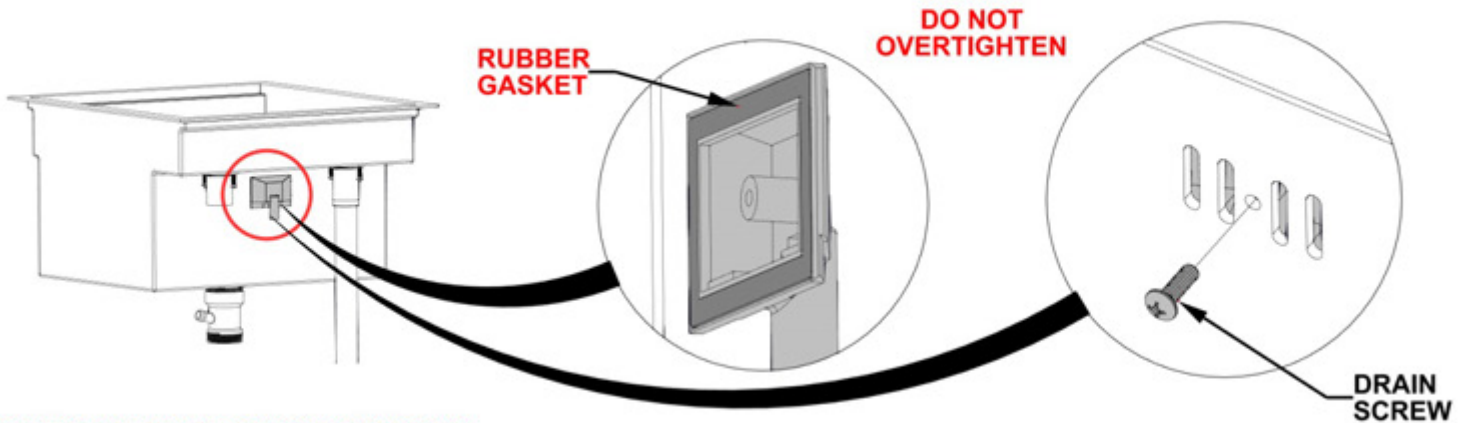


5. INSTALLING THE OVERFLOW DRAIN

- ATTACH OVERFLOW DRAIN BY CONNECTING EACH END AS SHOWN.

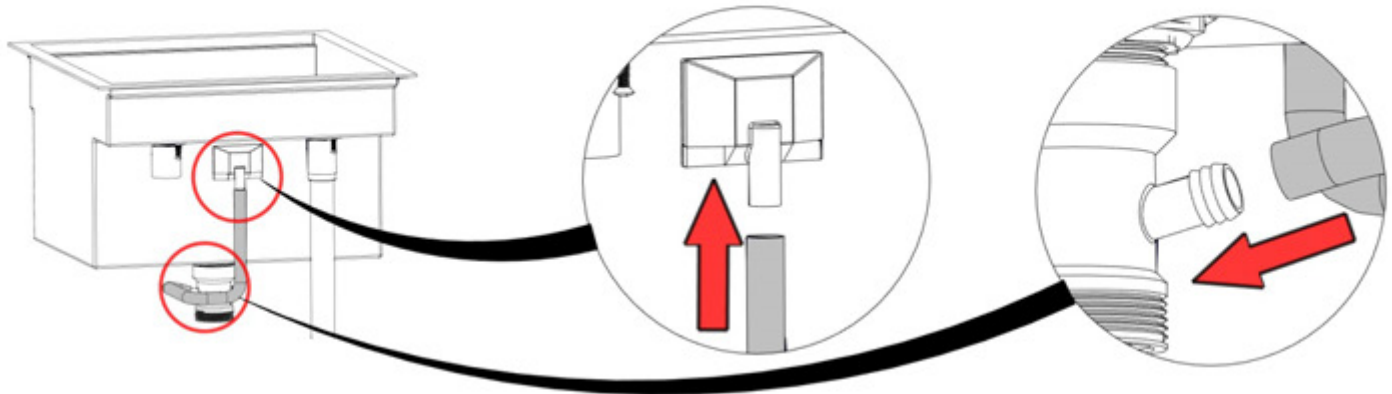


6. INSTALLING THE MAIN DRAIN AND TRAP

- ATTACH TRAP AND CORRUGATED DRAIN HOSE TO DRAIN FITTING.

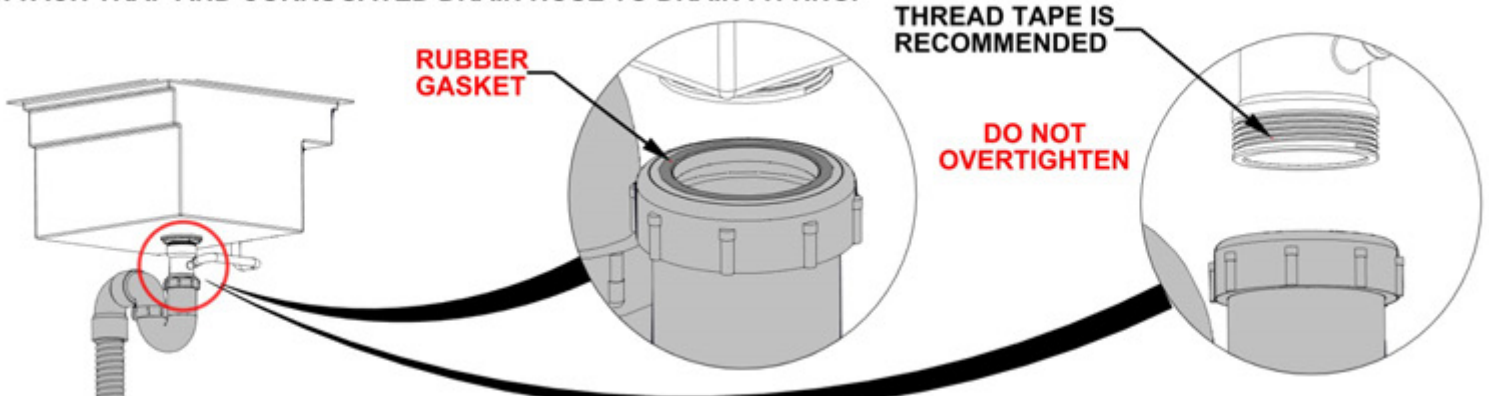

STEP 41C - SINK INSTALLATION

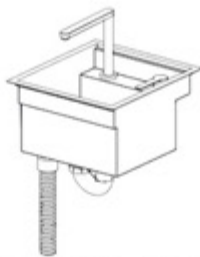

A16 SINK ASSEMBLY - A4M03143
(x1) 15 1/8"x15 5/16"x16 7/8" (384x389x429)



A4M03151 GARDEN HOSE ADAPTER
(x1)

- DRAIN STRAINER MUST BE USED WHEN DISCARDING FOOD INSIDE OF SINK.
- DO NOT LET SOLID MATERIAL ENTER SINK BASIN.

OPTIONS FOR WATER INLET SUPPLY HOOKUP:

- GARDEN HOSE ATTACHMENT USING PROVIDED ADAPTER
- WATER INLET SUPPLY LINE

ATTACH ADAPTER
TO INLET LINE AND
TIGHTEN WITH WRENCH


OPTIONS FOR DRAIN DISCHARGE:

- BUCKET OR GREY WATER CONTAINER
- FRENCH DRAIN OR DRY BASIN
- INTEGRATED SEWER SYSTEM
- CHECK YOUR LOCAL REQUIREMENTS.


IT IS RECOMMENDED TO
APPLY A FINE BEAD OF
SILICONE, TO UNDERNEATH
SIDE OF ALL SINK FLANGES
BEFORE INSTALLING

3151 (x1)
GARDEN HOSE
ADAPTER

A16 (x1)
SINK ASSEMBLY

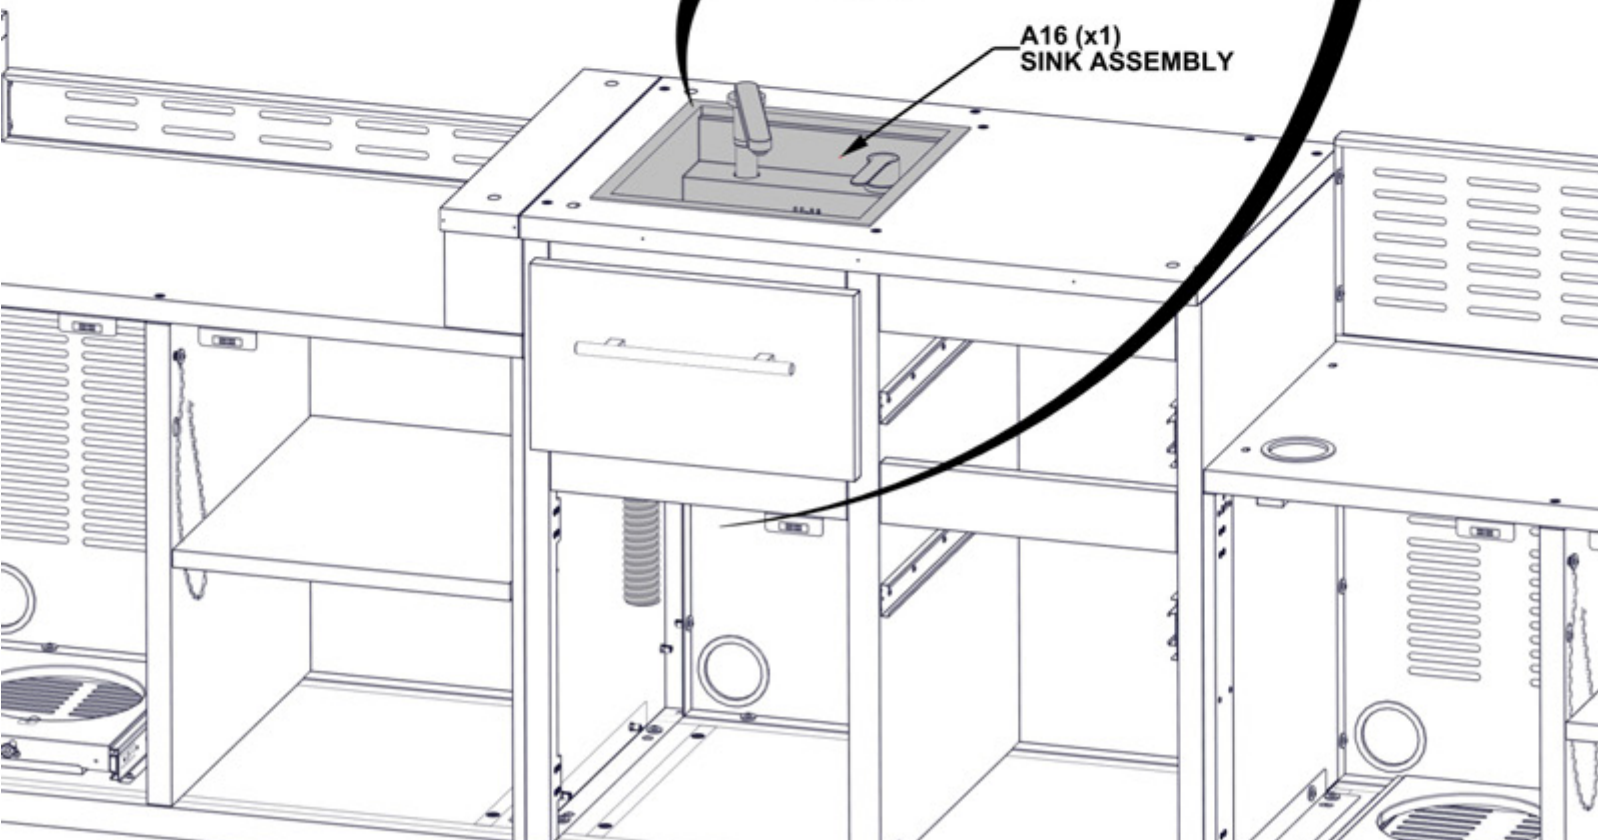


STEP 42A - FRIDGE CABINET MARBLE INSTALLATION

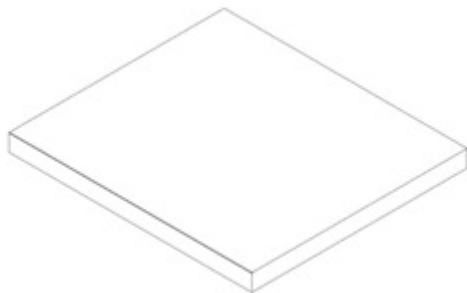


M3 FRIDGE CABINET MARBLE - A4M03602
(x1) 28 1/8"x24 15/16"x1 15/16" (50x634x715)

- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE IS TIGHT AGAINST CABINET AND SIDES ARE FLUSH WITH PANEL.
- WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.

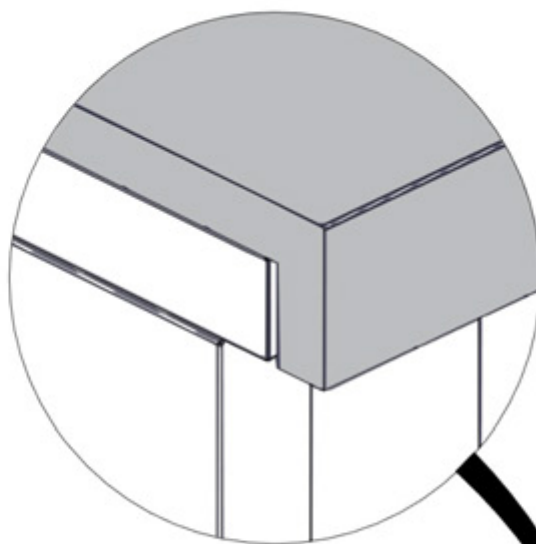


M3 (x1)
FRIDGE CABINET
MARBLE

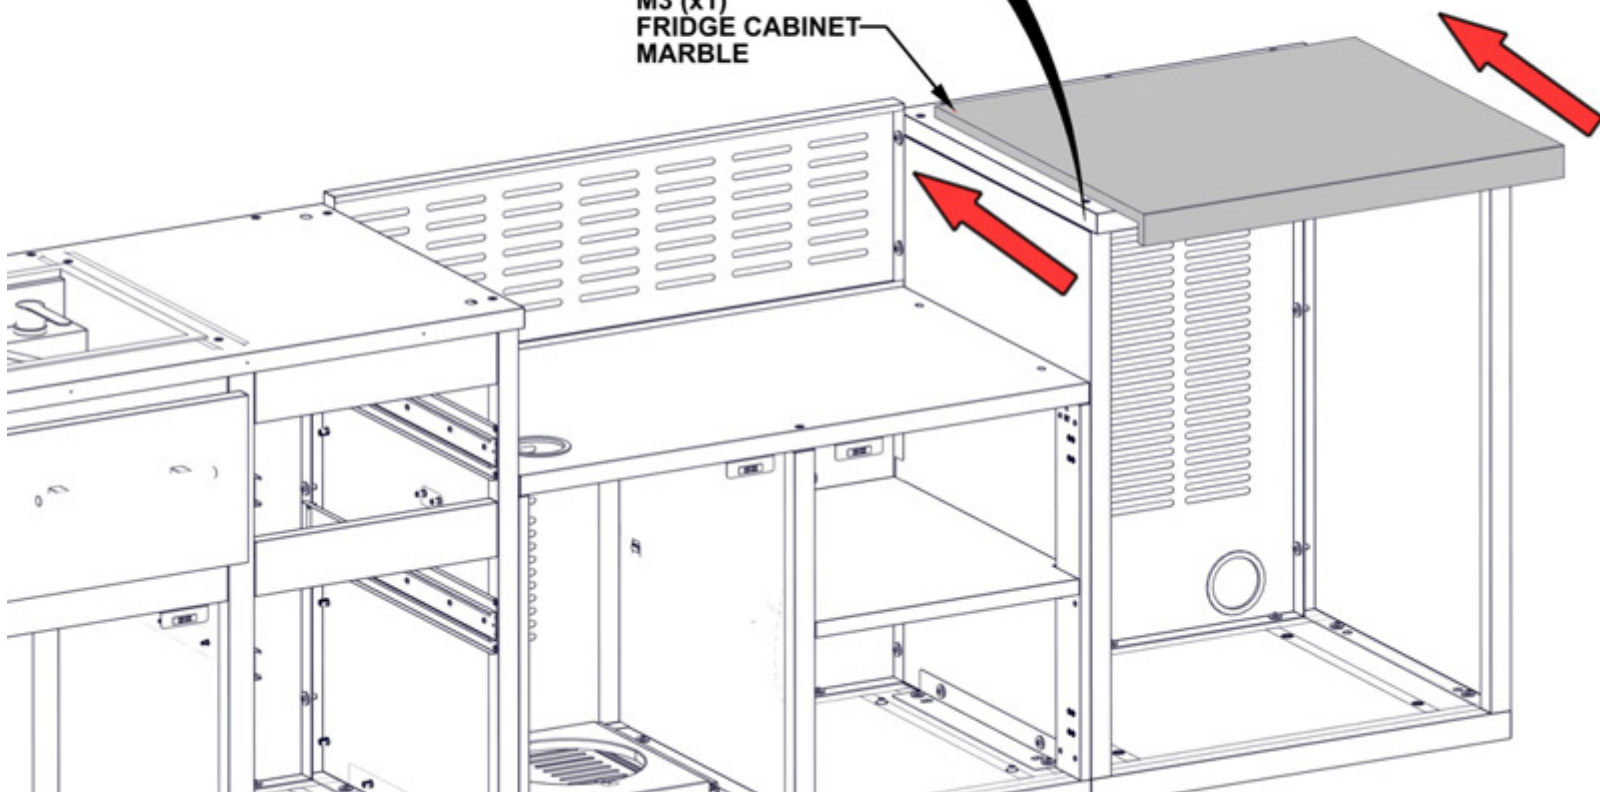


STEP 42B - FRIDGE CABINET MARBLE INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER

- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

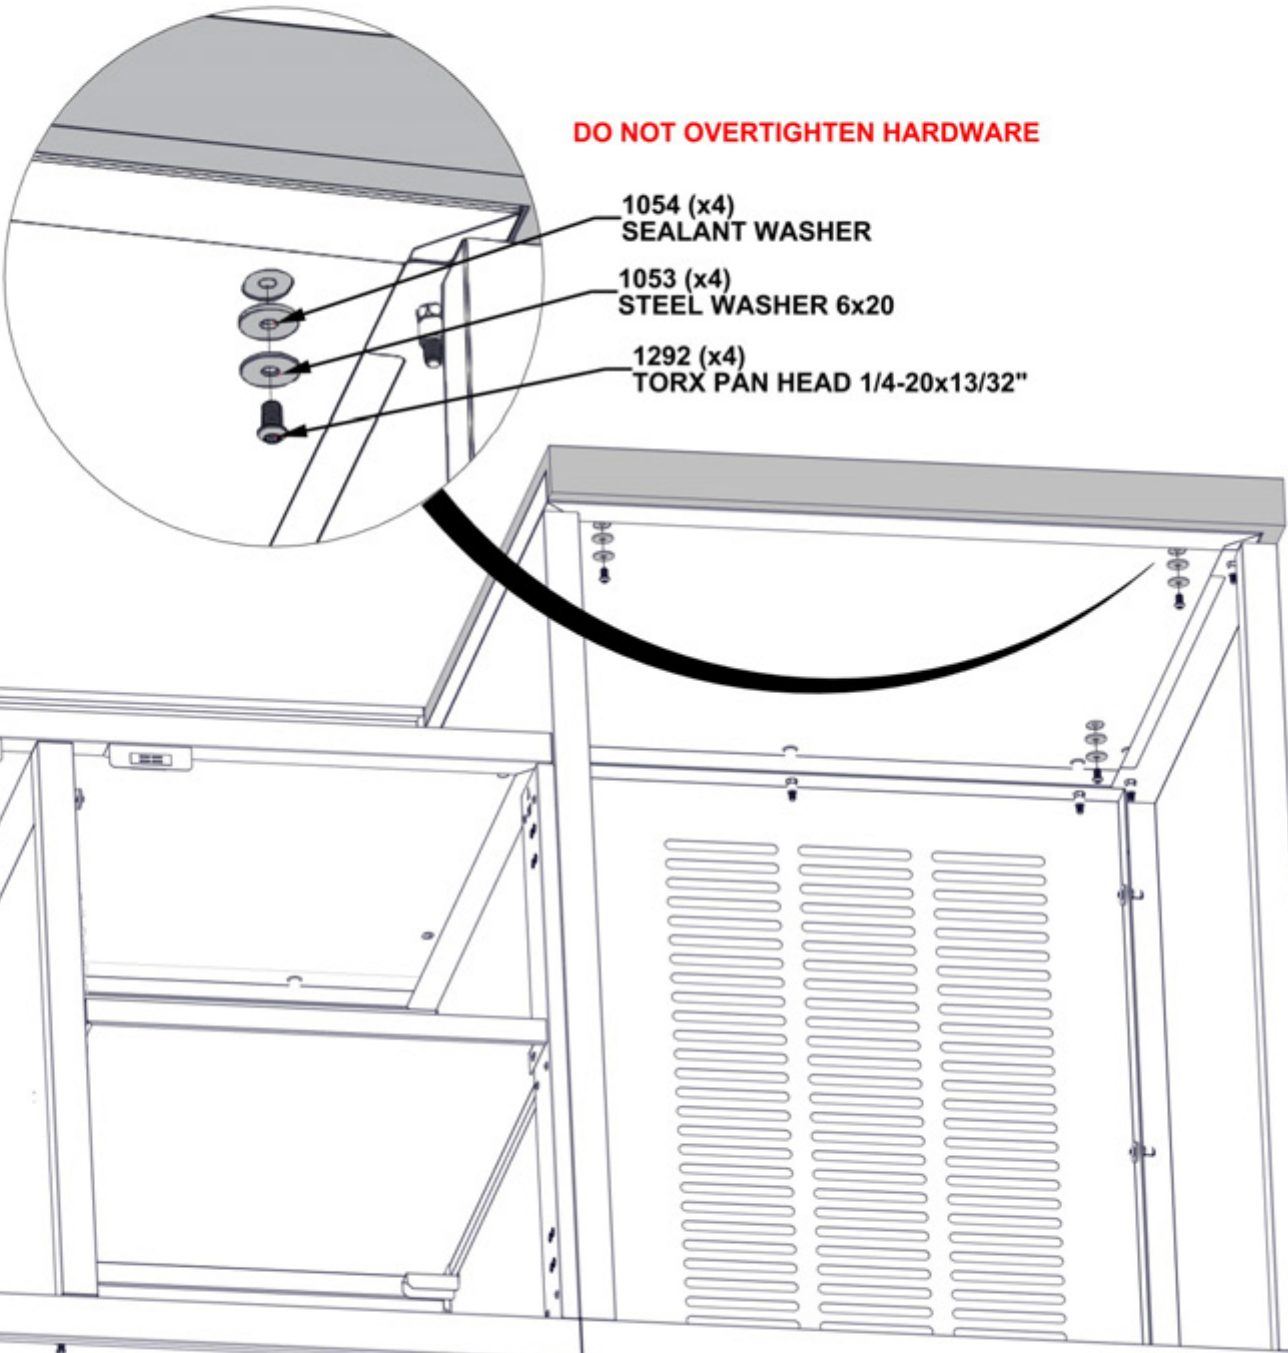


STEP 43A - SINK CABINET MARBLE INSTALLATION

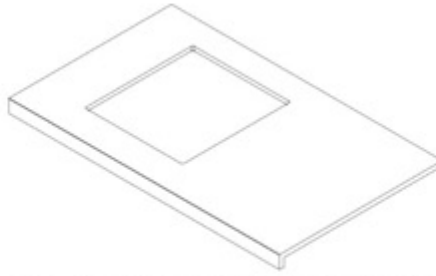

M2 SINK CABINET MARBLE - A4M03568
(x1) 41 1/2"x24 15/16"x1 15/16" (49x633x1054)


- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE IS TIGHT AGAINST CABINET AND SIDES ARE FLUSH WITH PANEL.
- **WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.**

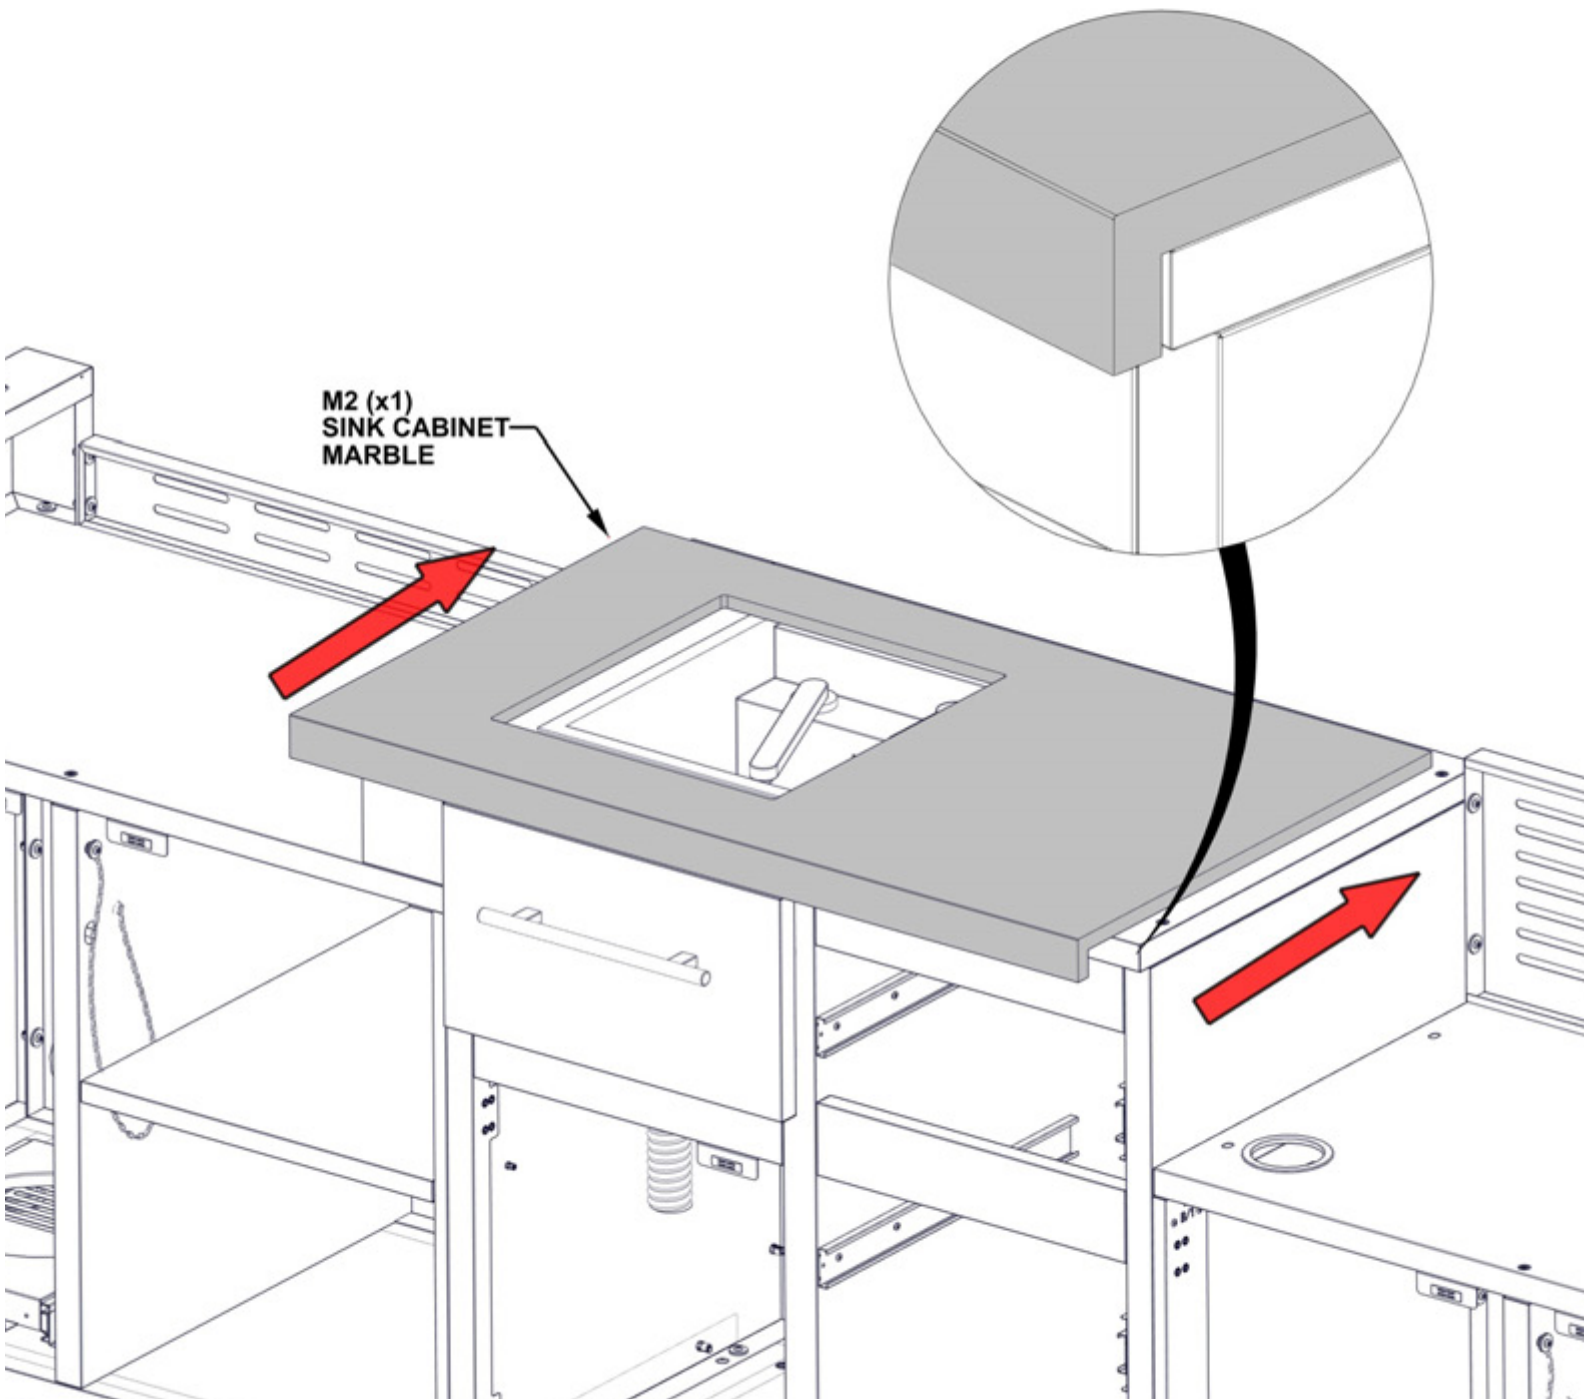


STEP 43B - SINK CABINET MARBLE INSTALLATION

Qty	PartNo	Description
4	H101292	TORX PAN HEAD 1/4-20x13/32"
4	H101053	STEEL WASHER 6x20
4	H101054	SEALANT WASHER


- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

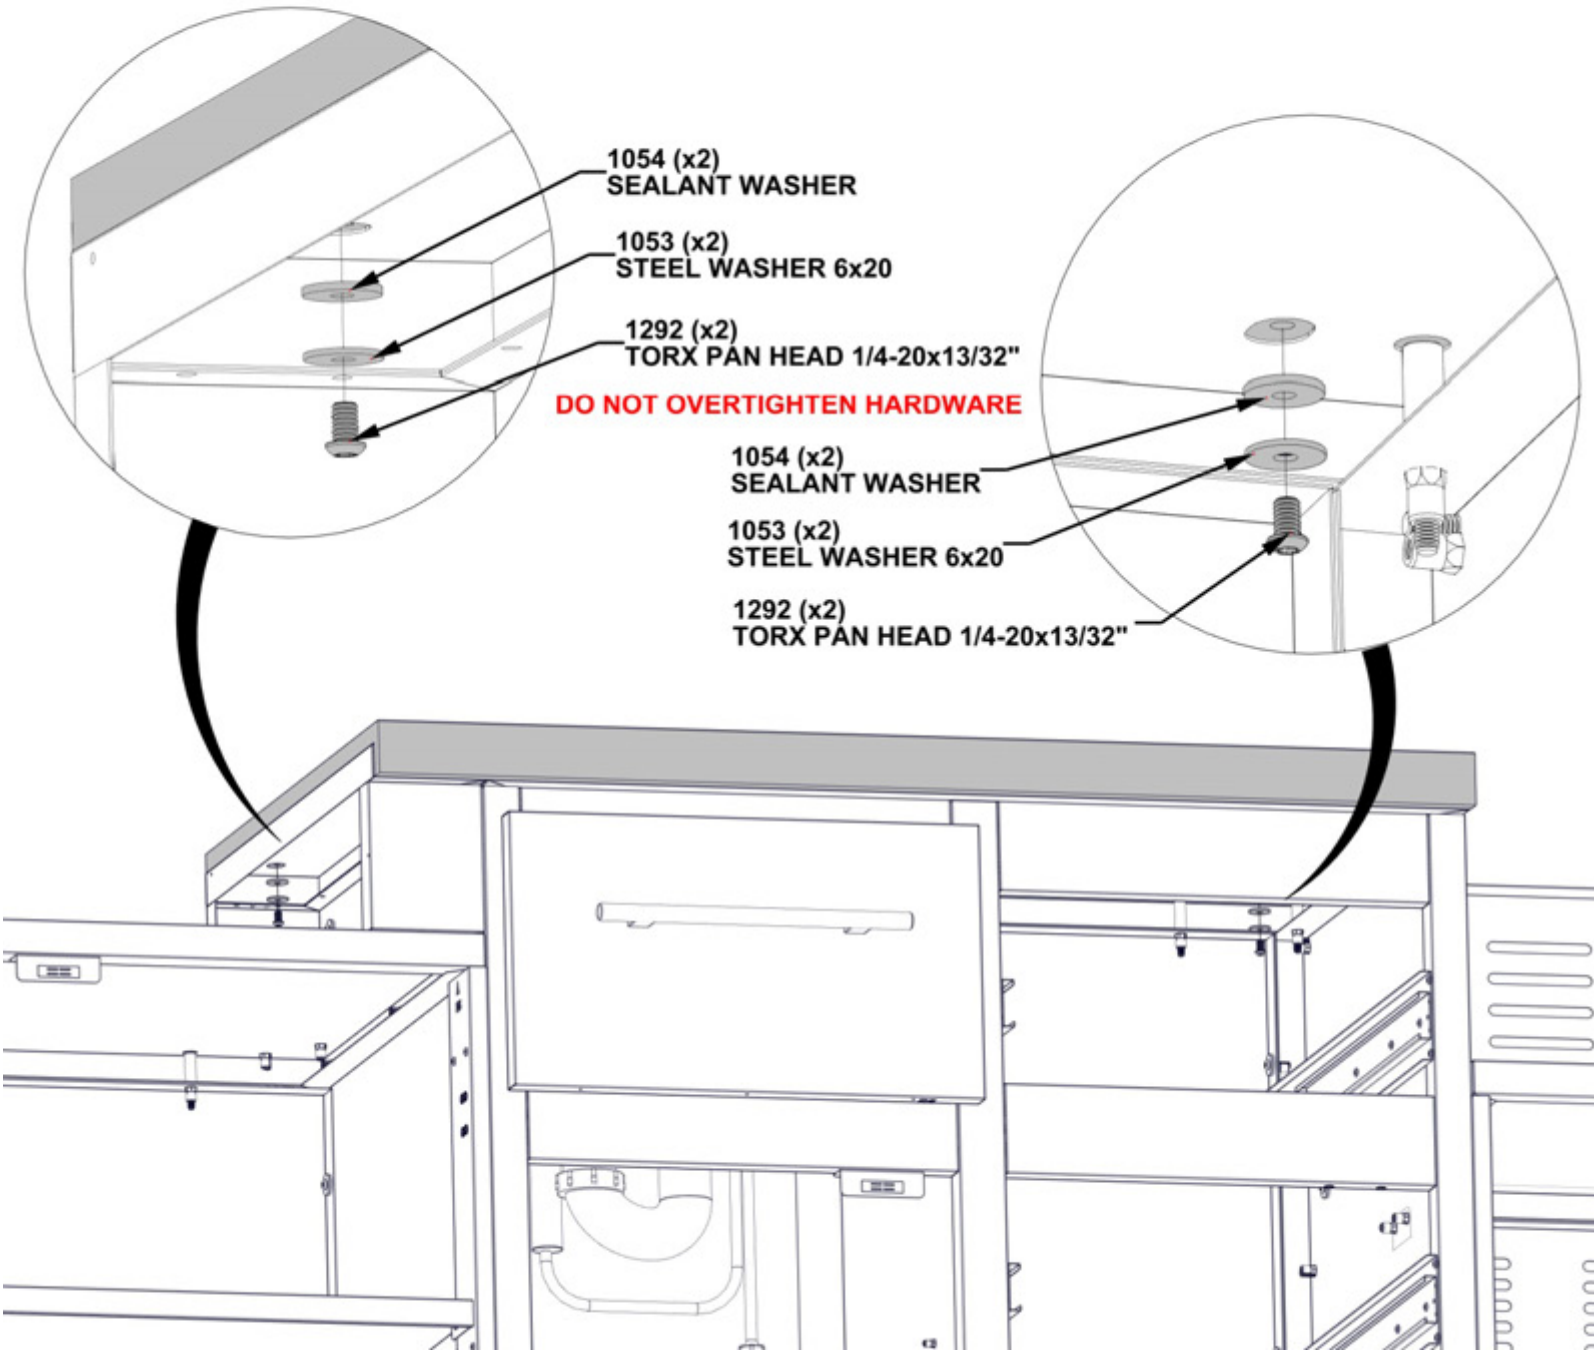


STEP 44 - SINK CABINET MARBLE INSTALLATION

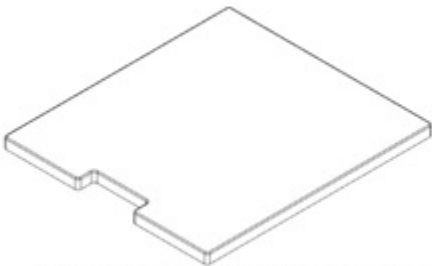

M5 SINK COVER MARBLE - A4M03147
(x1) 11/16"x14 3/4"x16 5/16" (18x375x415)

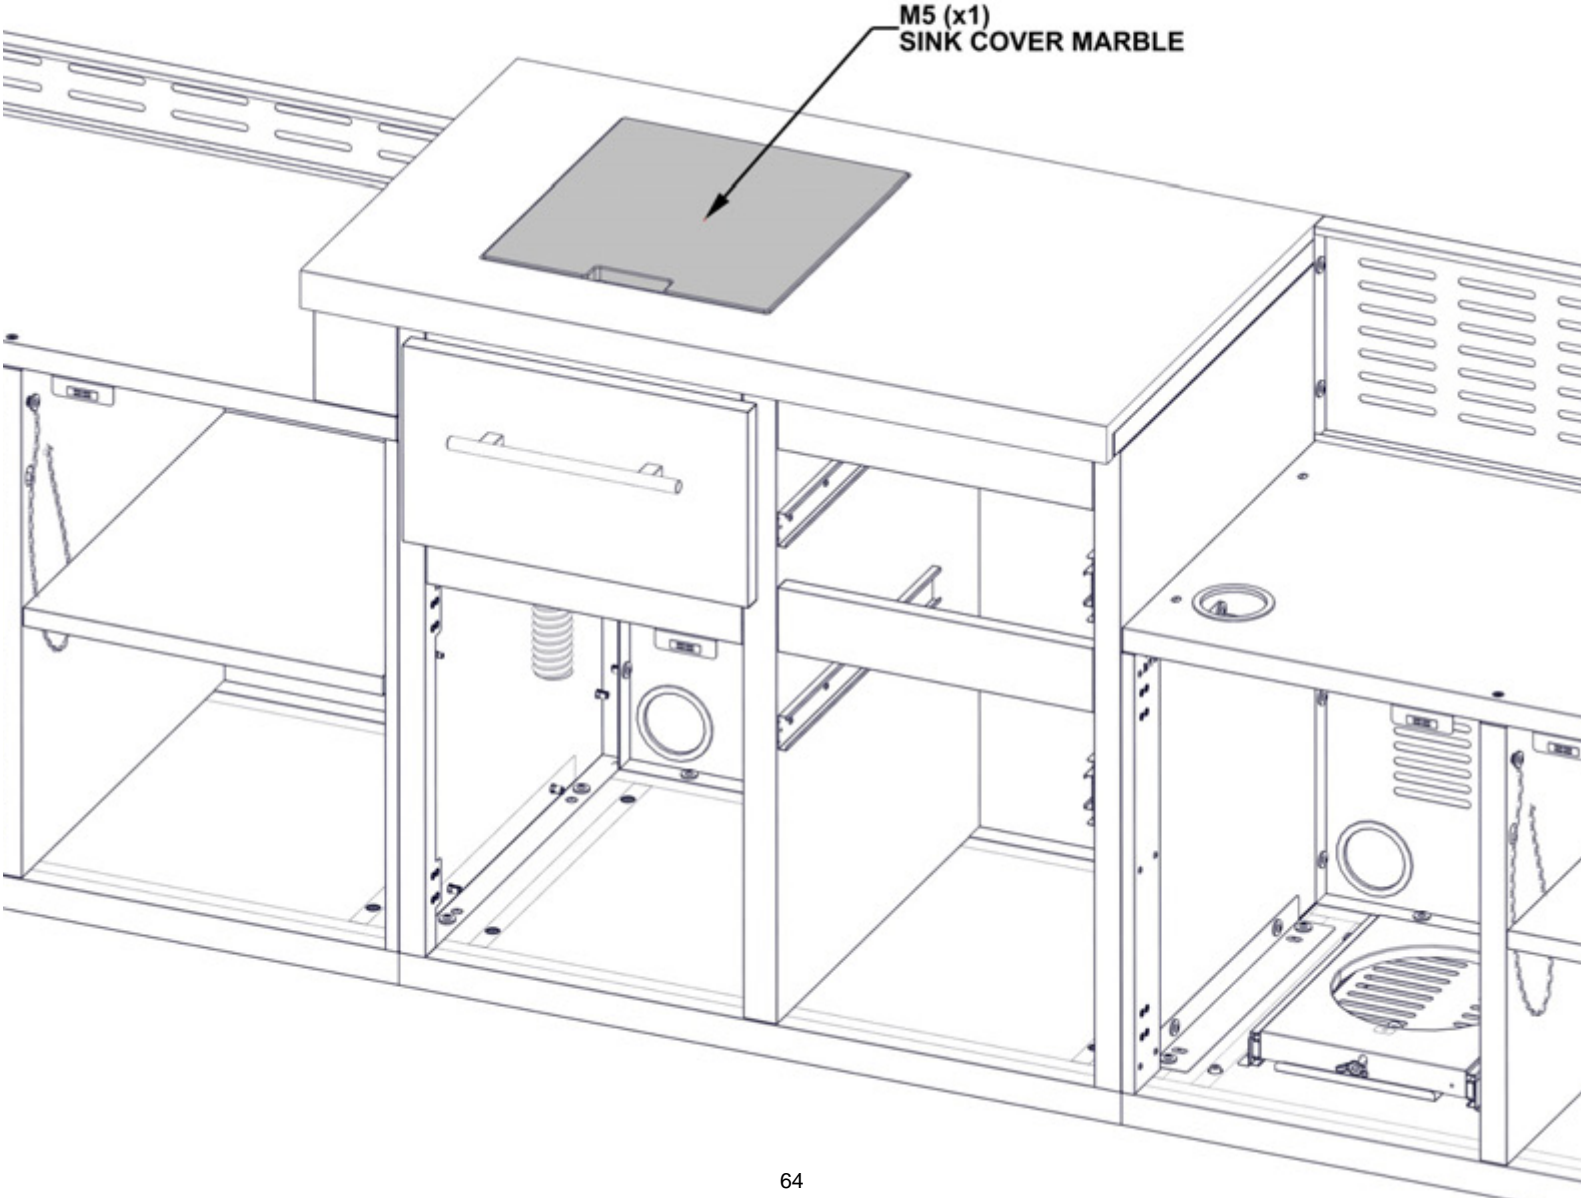


STEP 45A - PIZZA OVEN CABINET MARBLE INSTALLATION

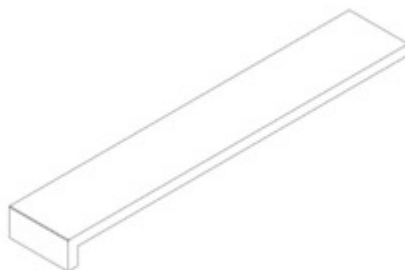

M1 PIZZA OVEN CABINET MARBLE - A4M03553
(x1) 24 13/16"x4 5/16"x1 15/16" (50x109x630)

- IT IS RECOMMENDED TO HAVE AT LEAST TWO PEOPLE SET MARBLE COUNTERTOP IN PLACE.
- SLIDE IN PLACE UNTIL MARBLE IS TIGHT AGAINST CABINET AND SIDES ARE FLUSH WITH PANEL.
- WHEN SETTING MARBLE IN PLACE, MAKE SURE YOUR FINGERS ARE CLEAR AND NOT UNDERNEATH MARBLE.

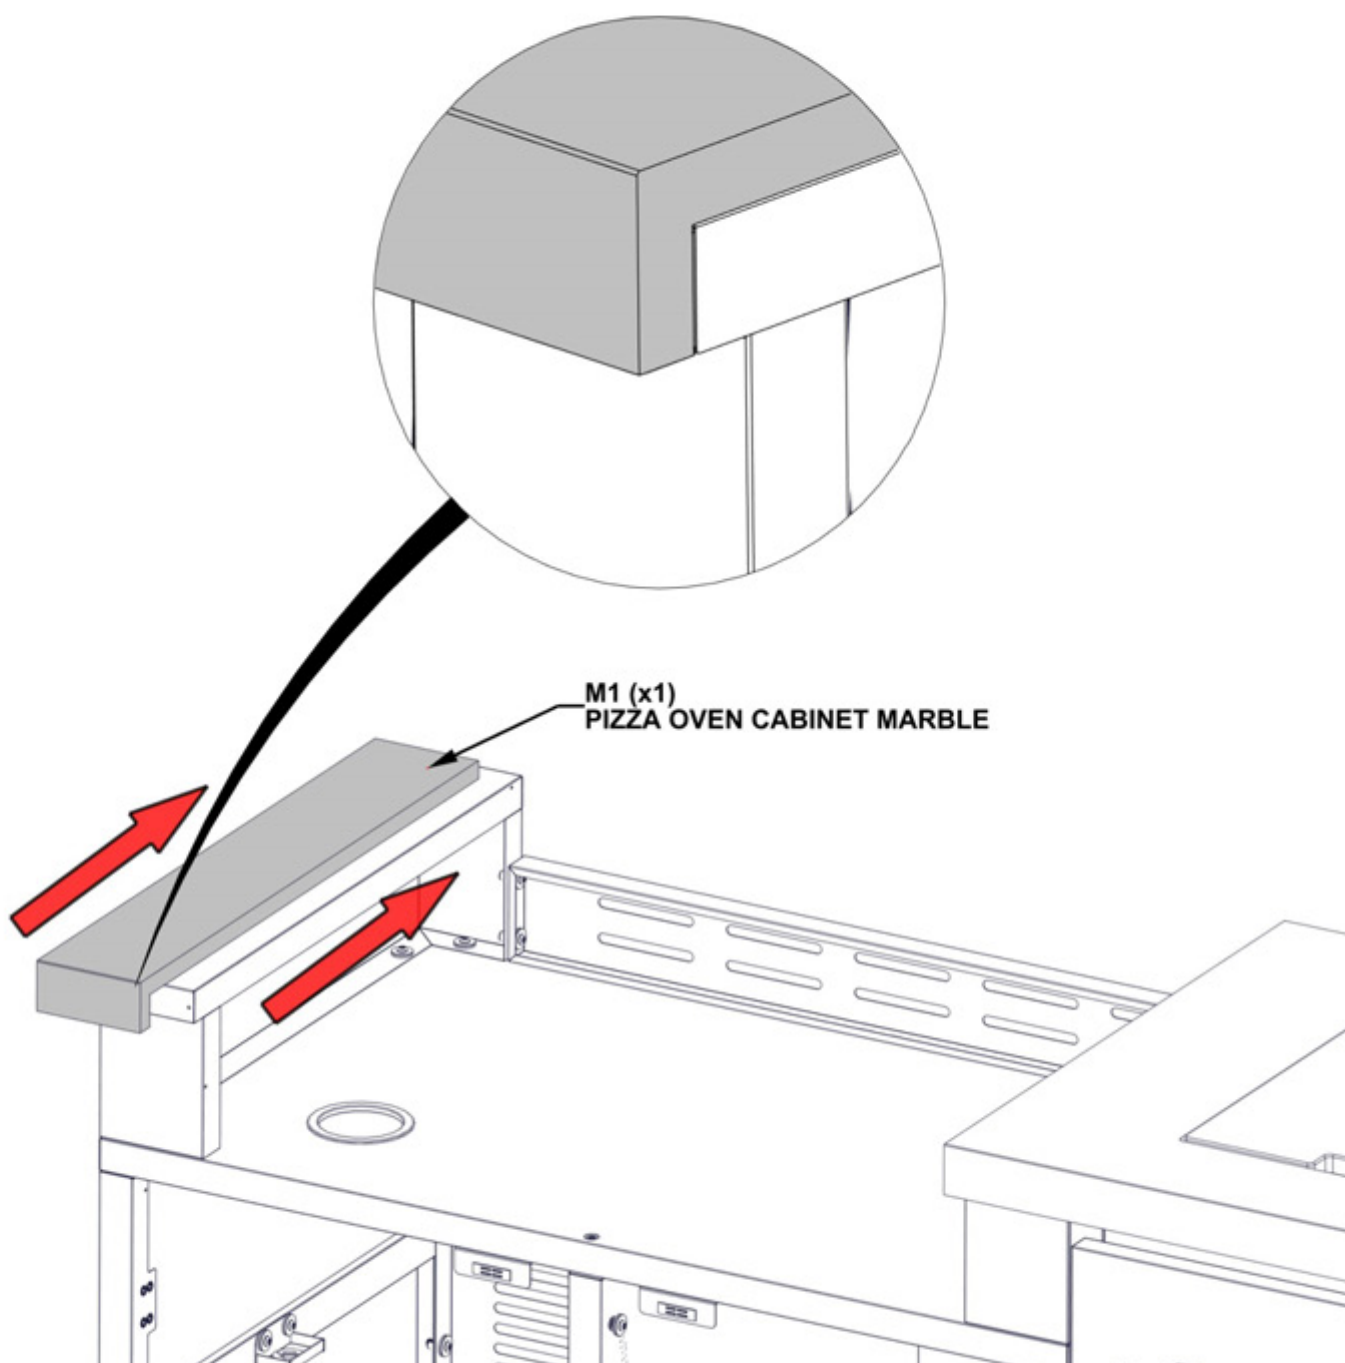

STEP 45B - SINK CABINET MARBLE INSTALLATION

Qty	PartNo	Description
2	H101292	TORX PAN HEAD 1/4-20x13/32"
2	H101053	STEEL WASHER 6x20
2	H101054	SEALANT WASHER


- MAKE SURE YOU ARE USING THE CORRECT HARDWARE FOR THIS STEP.
- ONCE MARBLE IS IN PLACE, IT IS RECOMMENDED TO COVER WITH A PIECE OF CARDBOARD OR FOAM UNTIL ASSEMBLY IS FINISHED TO PREVENT DAMAGE.
- DO NOT USE MARBLE SURFACE AS A WORK BENCH.

DO NOT OVERTIGHTEN HARDWARE

1054 (x2)
SEALANT WASHER

1053 (x2)
STEEL WASHER 6x20

1292 (x2)
TORX PAN HEAD 1/4-20x13/32"

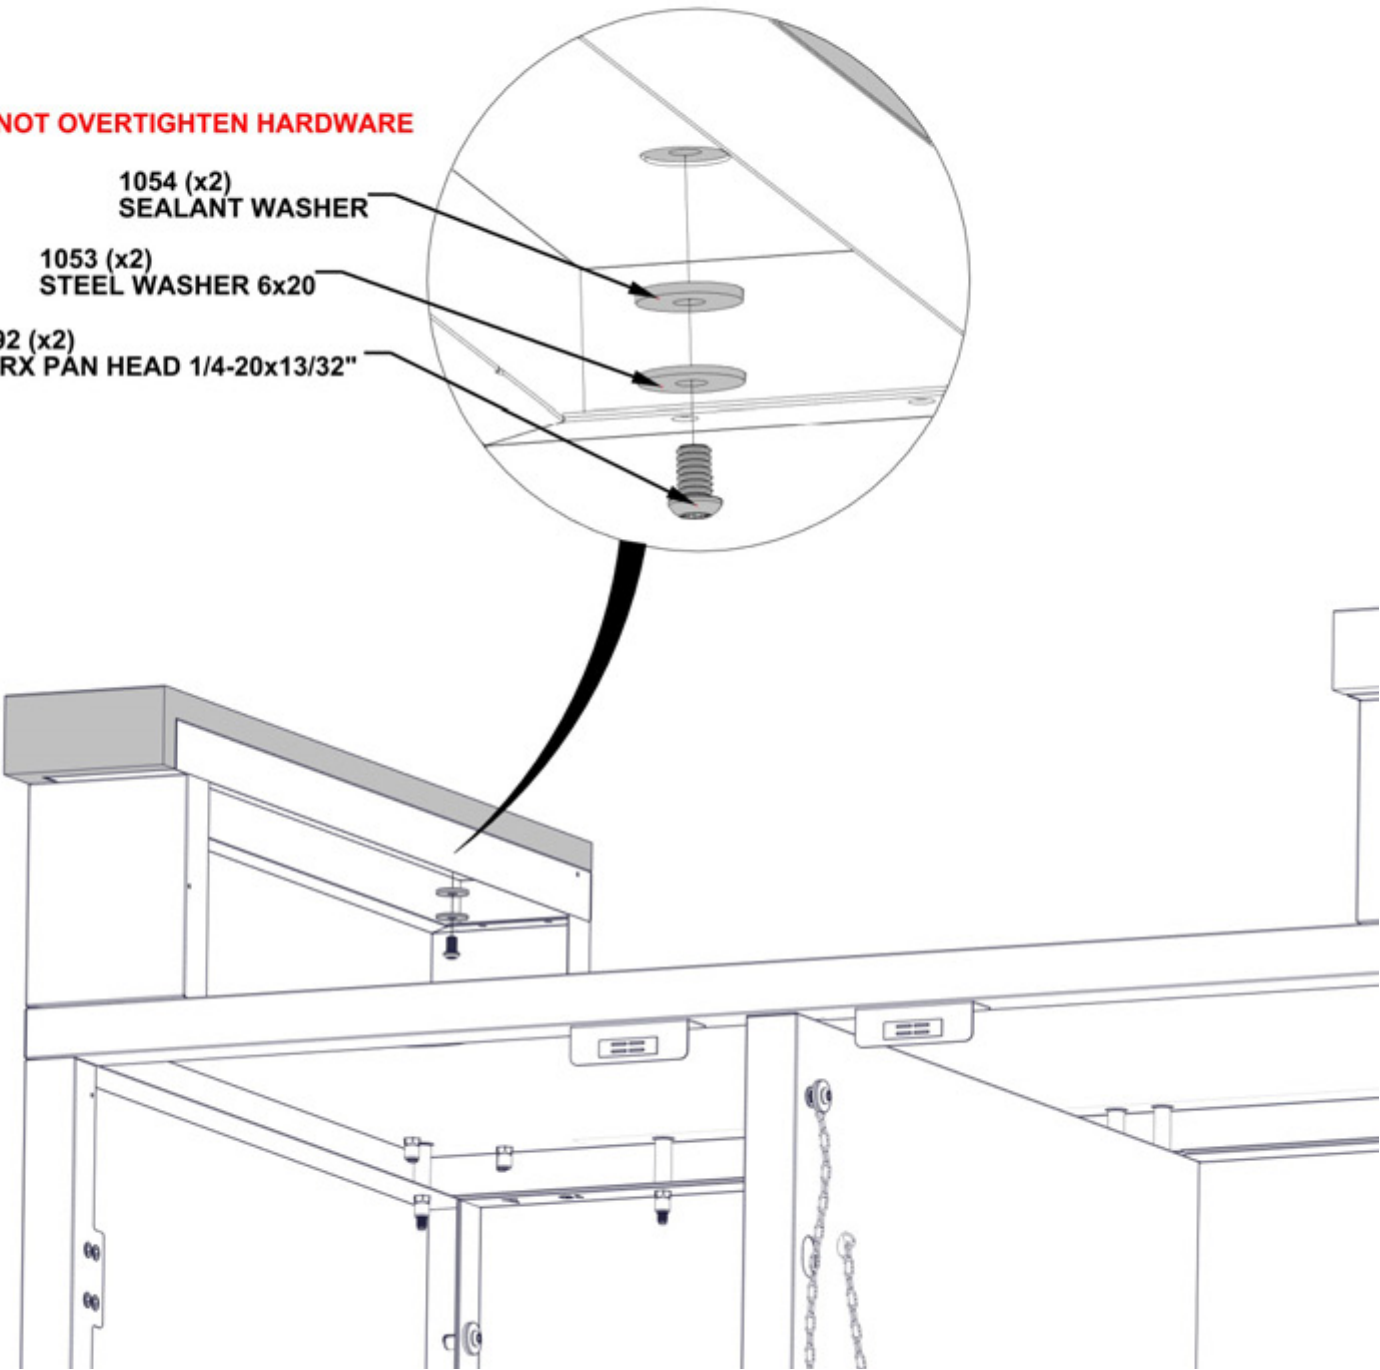

STEP 46A - KITCHEN TRASH CAN ASSEMBLY


Qty	PartNo	Description
6	H101289	PAN HEAD SCREW 8-32x1/2" SS




H3 TRASH CAN BRACKET ASSEMBLY - A4M03610
(x1) 18 1/16"x15 13/16"x (35x401.60x458)



A11 TRIANGLE PANEL - A4M03086
(x2) 13/16"x13 3/4"x13 3/4" (20x350x350)

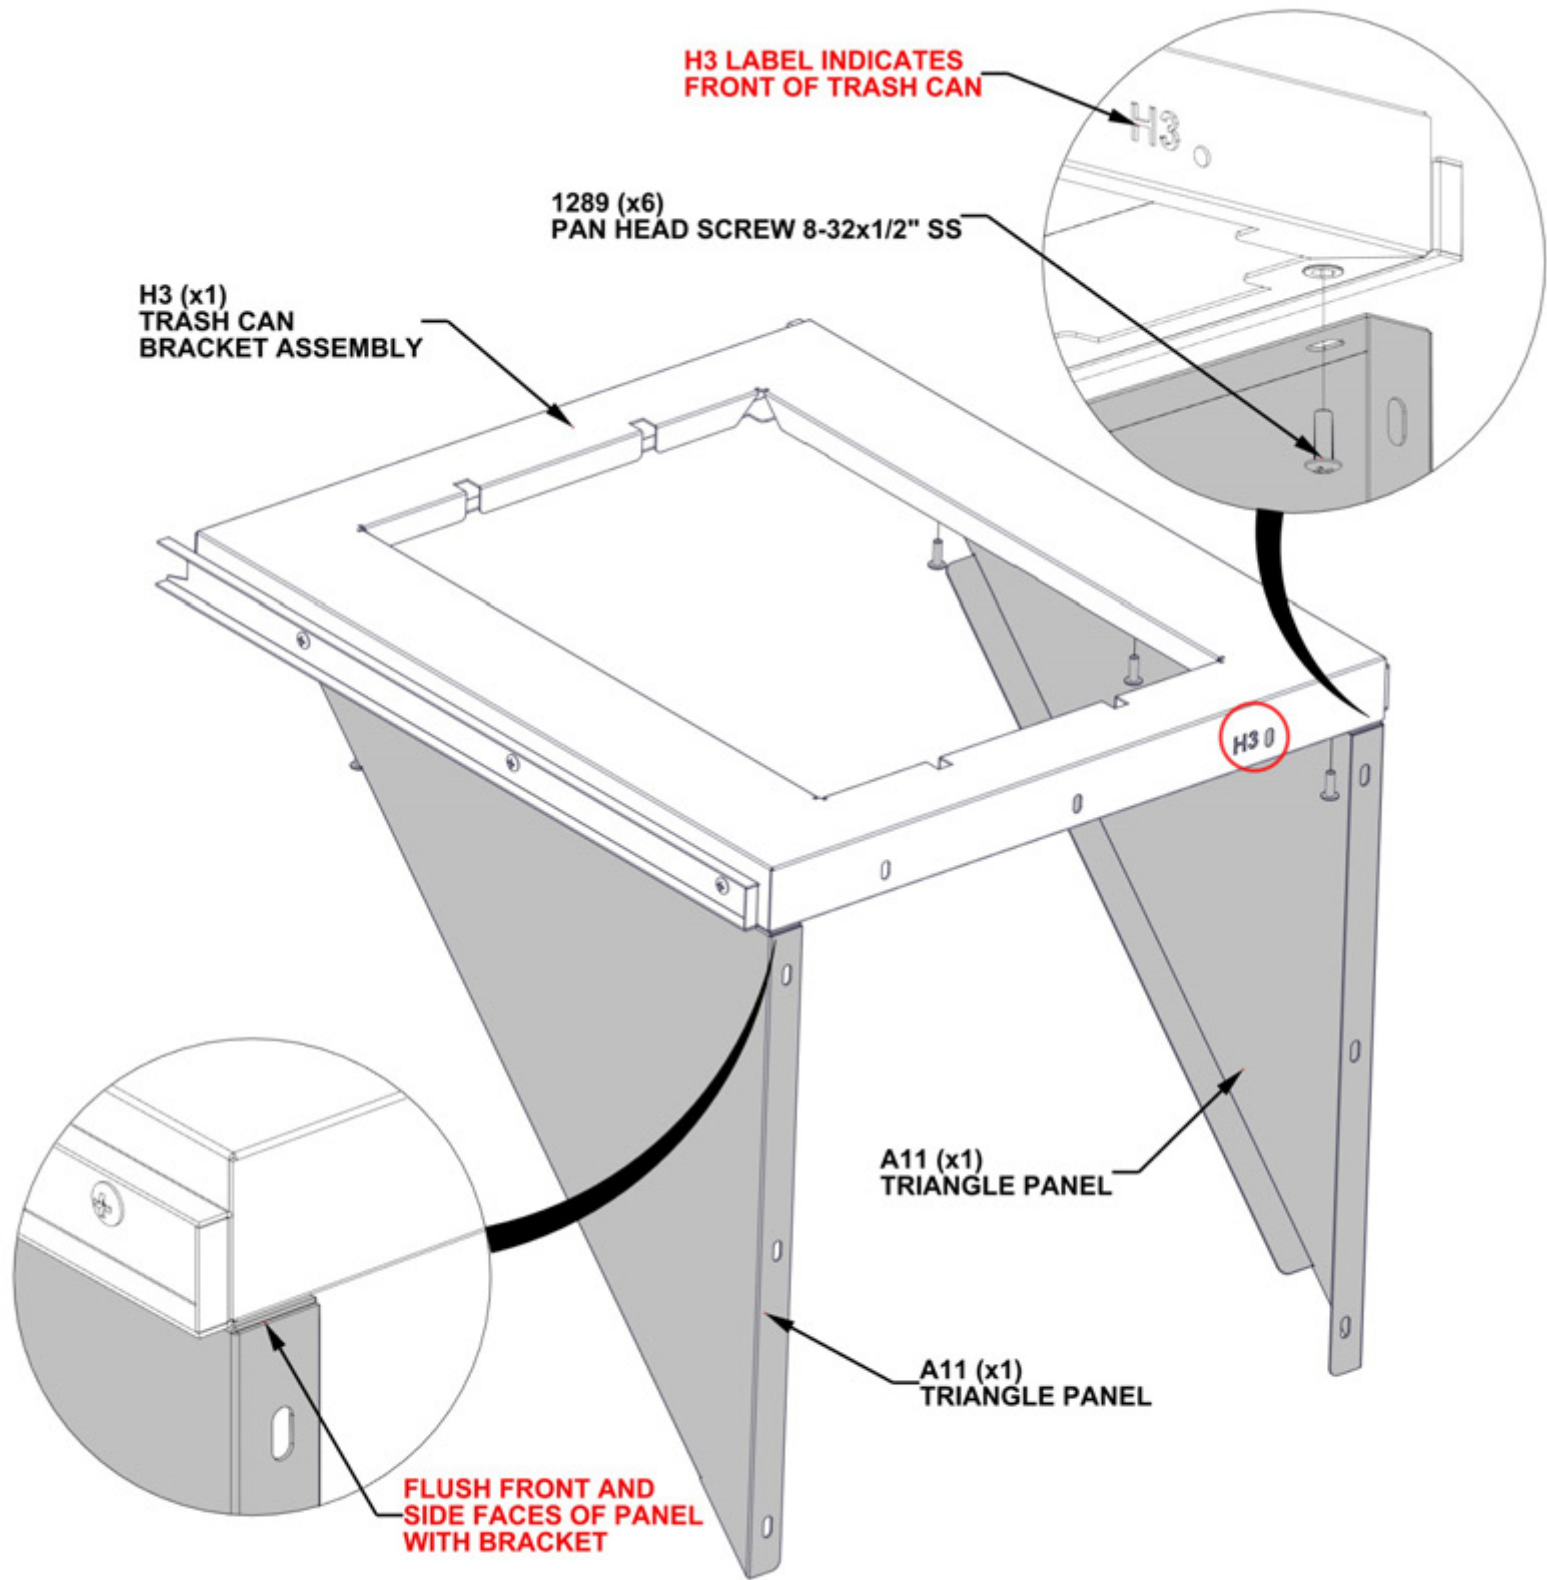


STEP 46B - KITCHEN TRASH CAN ASSEMBLY

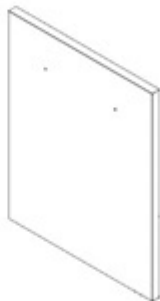


Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS

D9 TRASH CAN PANEL ASSEMBLY - A4M03608
(x1) 22 1/4"x17 3/4"x15/16" (24.00x451.00x565.00)

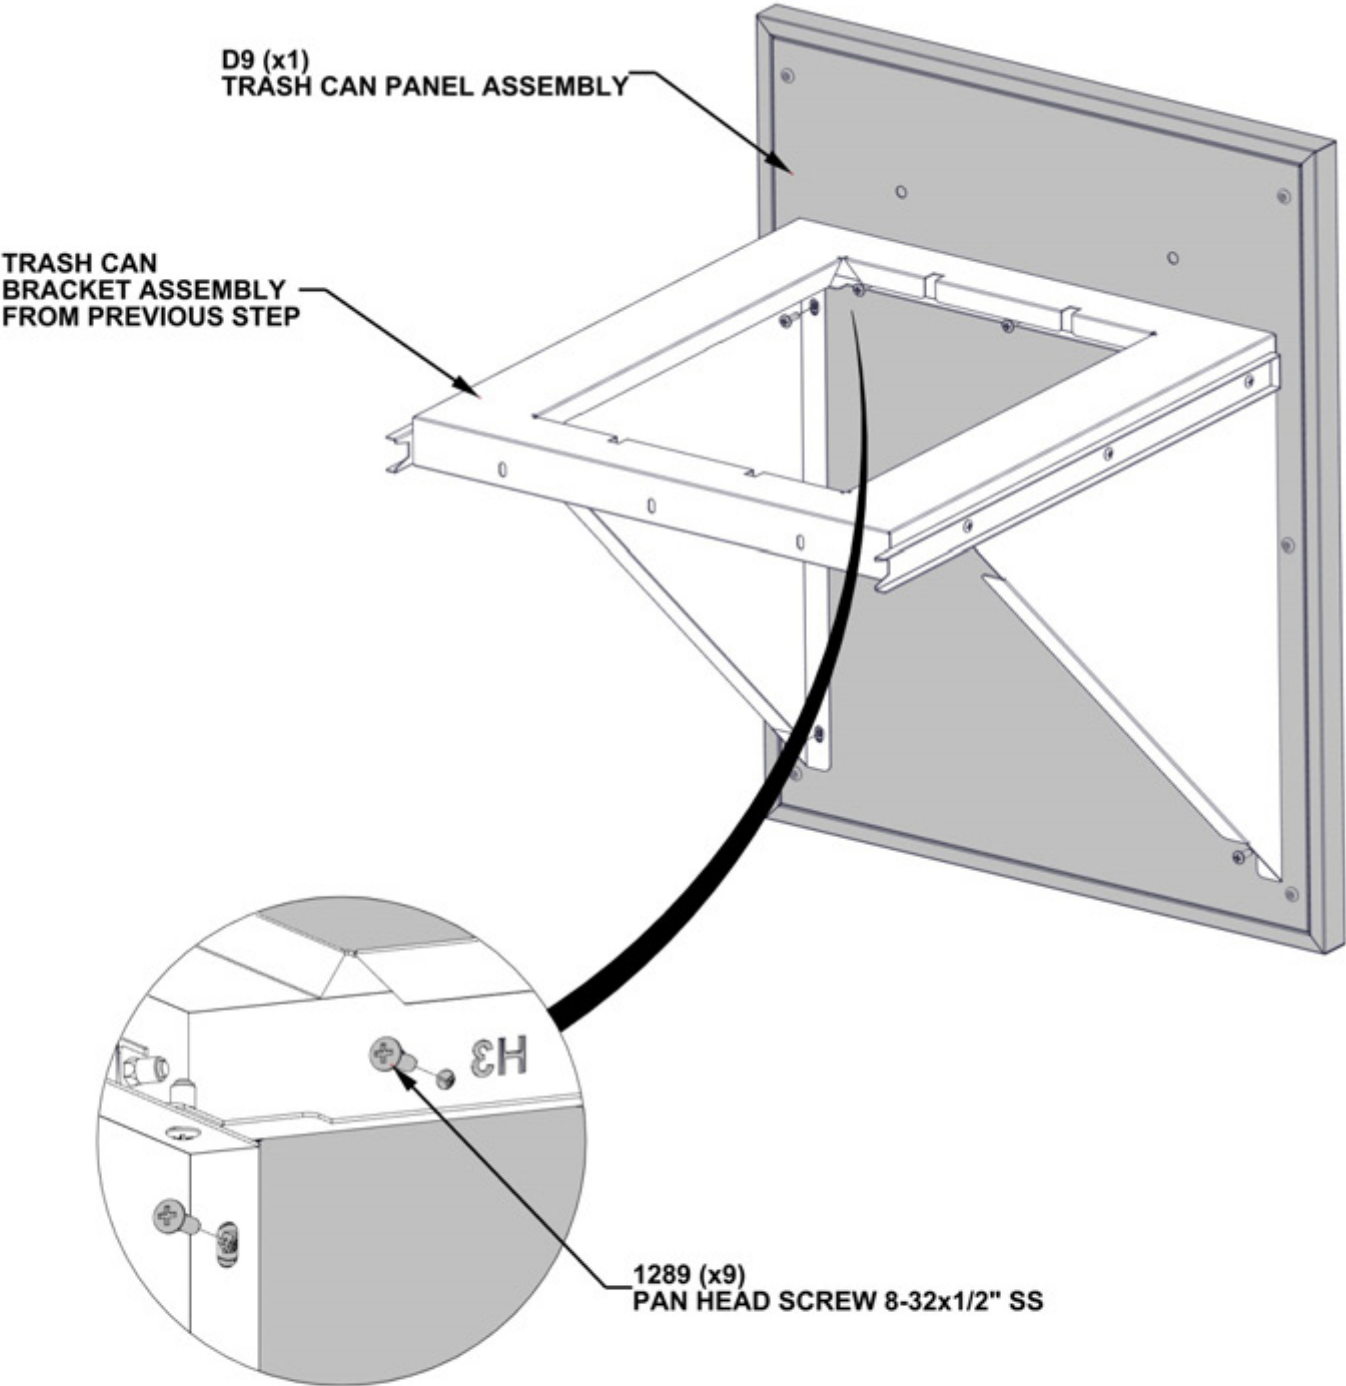


STEP 46C - KITCHEN TRASH CAN ASSEMBLY

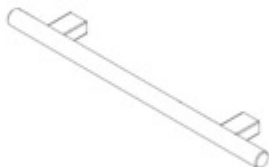

Qty	PartNo	Description
2	H101307	SHOULDER BOLT 8-32x30mm SS

H2 STAINLESS STEEL HANDLE - A4M03024
(x1) 5/8"x1 9/16"x11 13/16" (16x40x300)


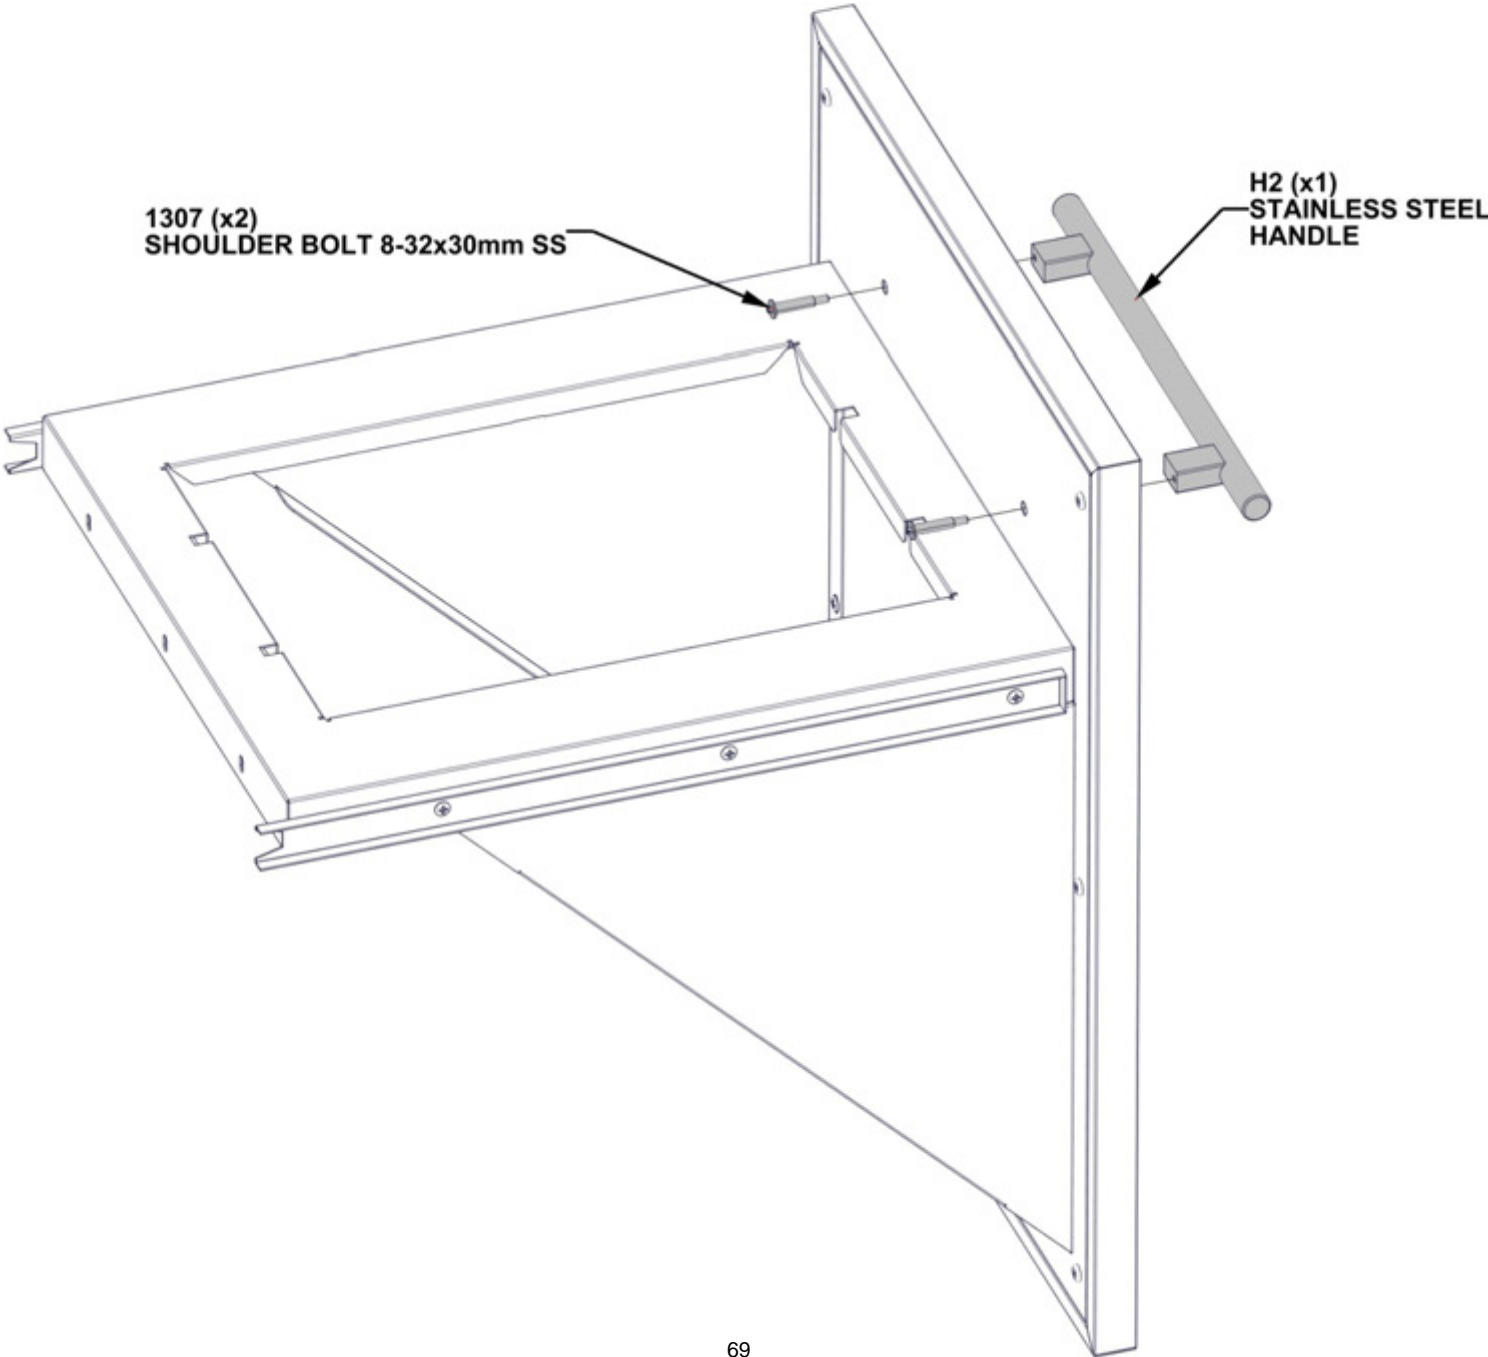


STEP 47 - KITCHEN TRASH CAN INSTALLATION



TRASH CAN ASSEMBLY
FROM STEP 46

- ATTACH TRASH CAN ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

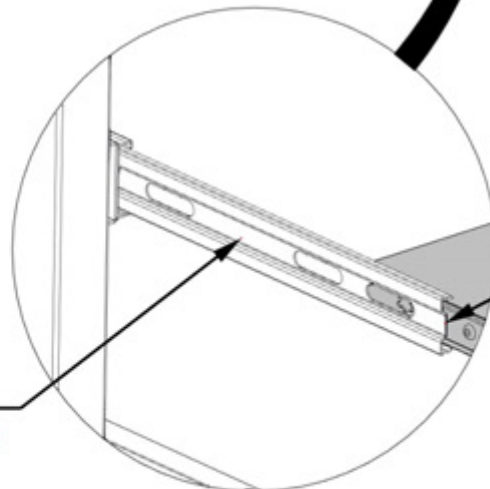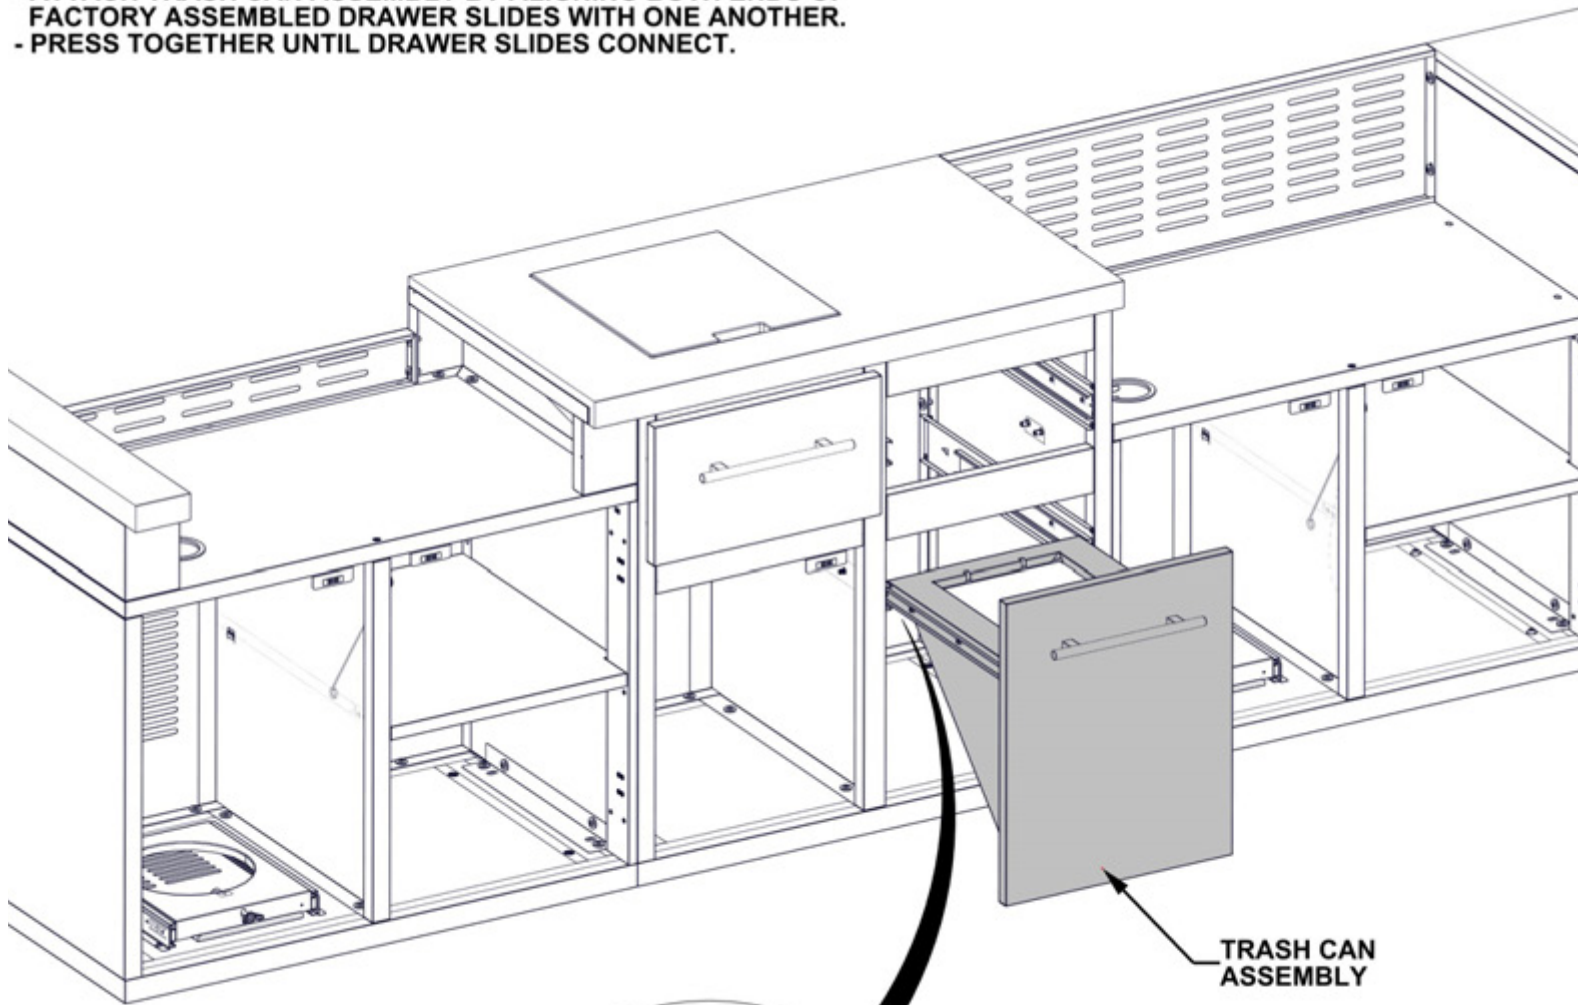


SLIDE INNER RACE
OF DRAWER SLIDE OUT
BEFORE ATTACHING SLIDES

ALIGN DRAWER SLIDES
ON BOTH SIDES OF TRASH
CAN HOLDER


STEP 48A - KITCHEN DRAWER ASSEMBLY

Qty	PartNo	Description
9	H101289	PAN HEAD SCREW 8-32x1/2" SS

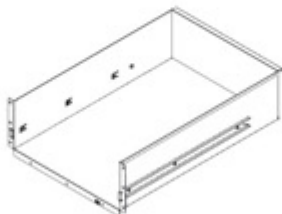


D4 SINK CABINET DRAWER BODY ASSEMBLY - A4M03571
(x1) 22 1/4"x16 1/16"x6 7/16" (164.2x408.4x565.4)

D3 SINK CABINET DRAWER PANEL ASSEMBLY - A4M03569
(x1) 17 3/4"x10 1/4"x15/16" (24x260x451)

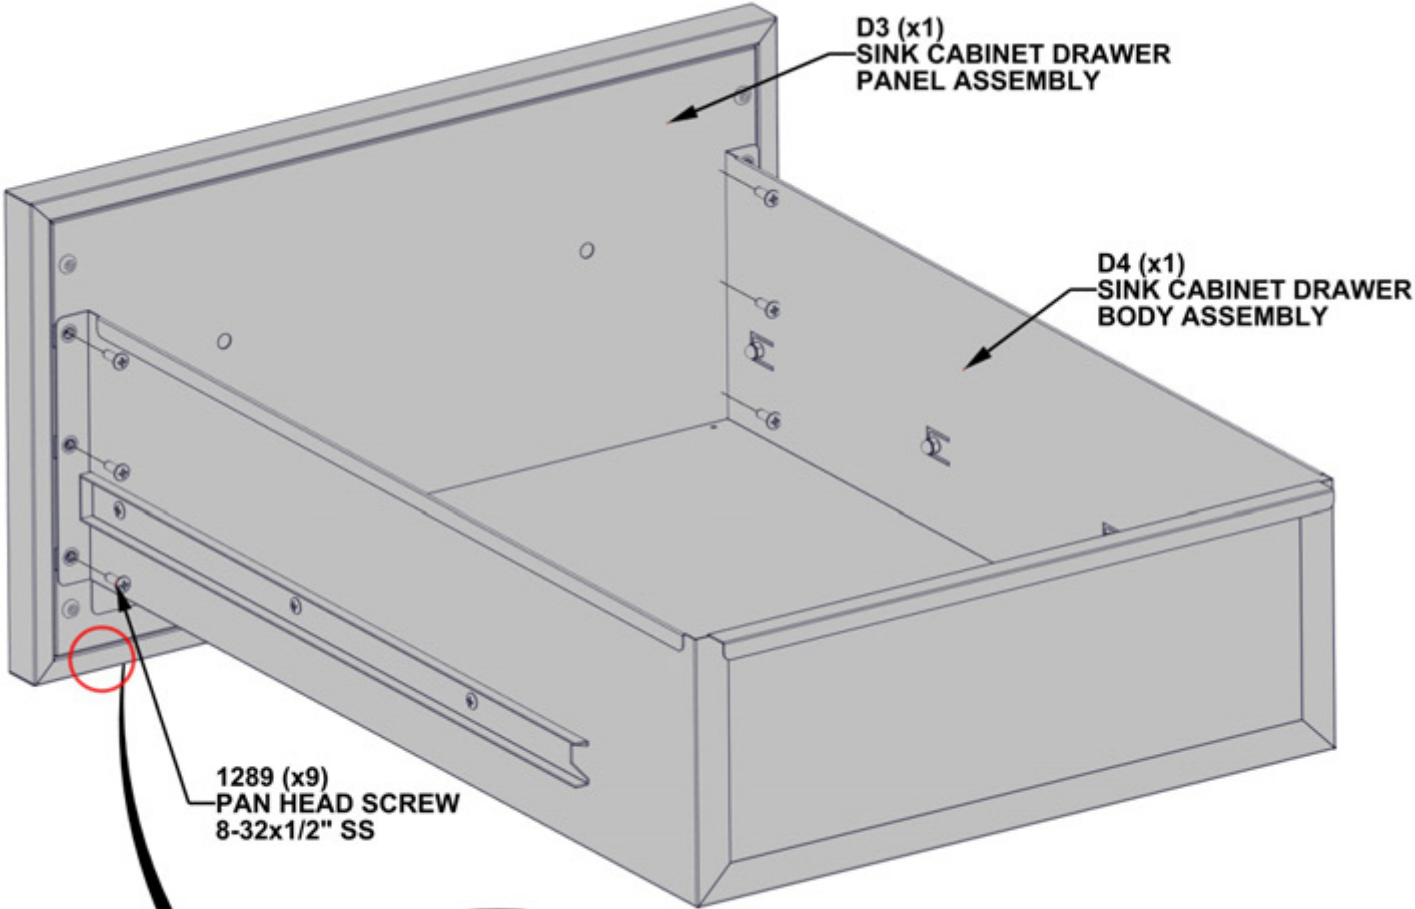


1289 (x9)
PAN HEAD SCREW
8-32x1/2" SS

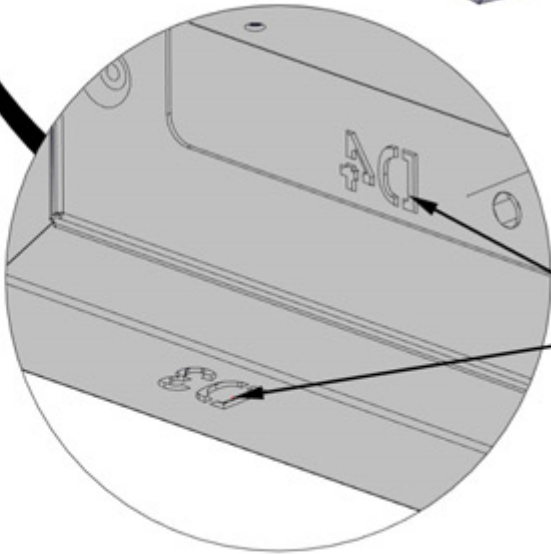

D3 AND D4 LABELS INDICATE
BOTTOM OF DRAWER

STEP 48B - KITCHEN DRAWER ASSEMBLY

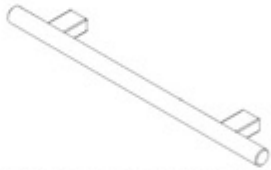


Qty	PartNo	Description
2	H101307	SHOULDER BOLT 8-32x30mm SS


H2 STAINLESS STEEL HANDLE - A4M03024
(x1) 5/8"x1 9/16"x11 13/16" (16x40x300)

1307 (x2)
SHOULDER BOLT 8-32x30mm SS

H2 (x1)
STAINLESS STEEL
HANDLE

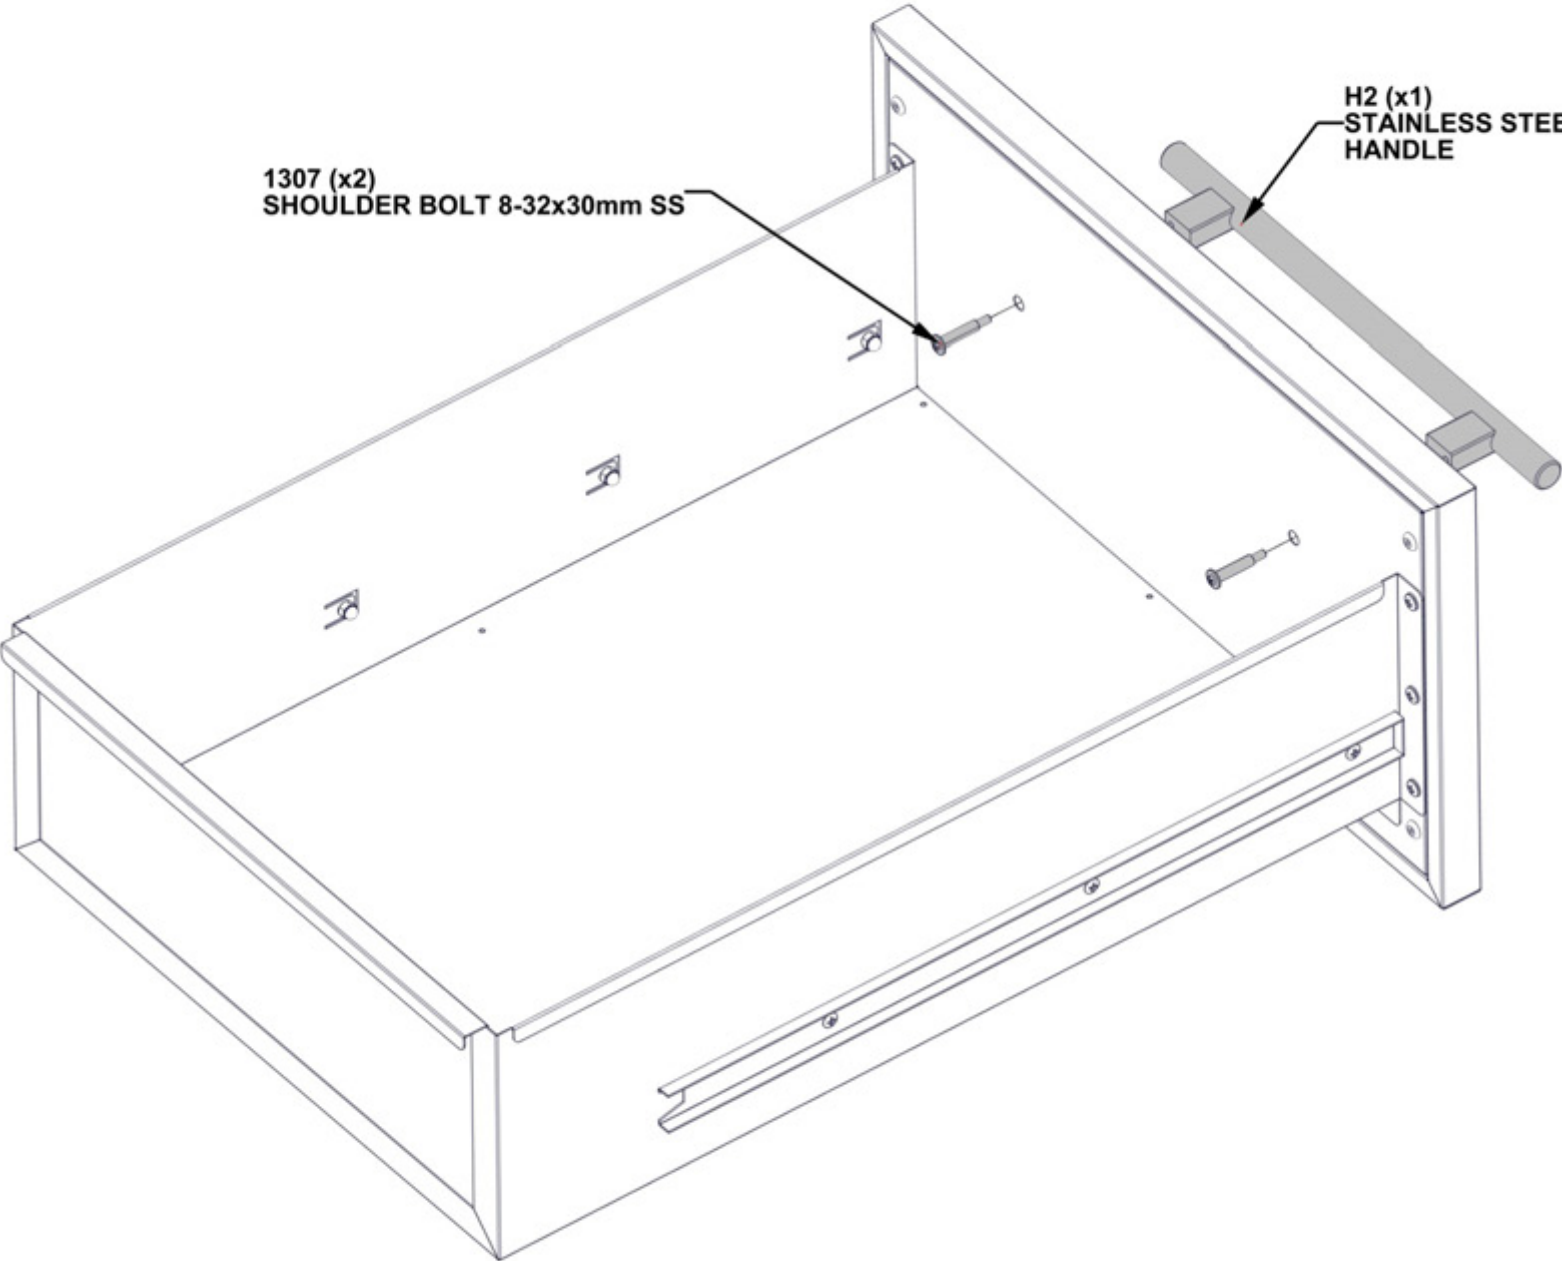


STEP 49 - KITCHEN DRAWER INSTALLATION

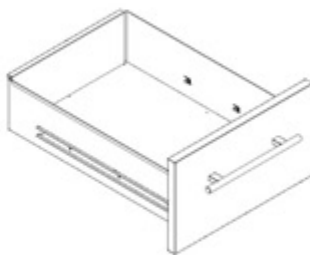

DRAWER ASSEMBLY
FROM STEP 48

- ATTACH DRAWER ASSEMBLY BY ALIGNING BOTH ENDS OF FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
- PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

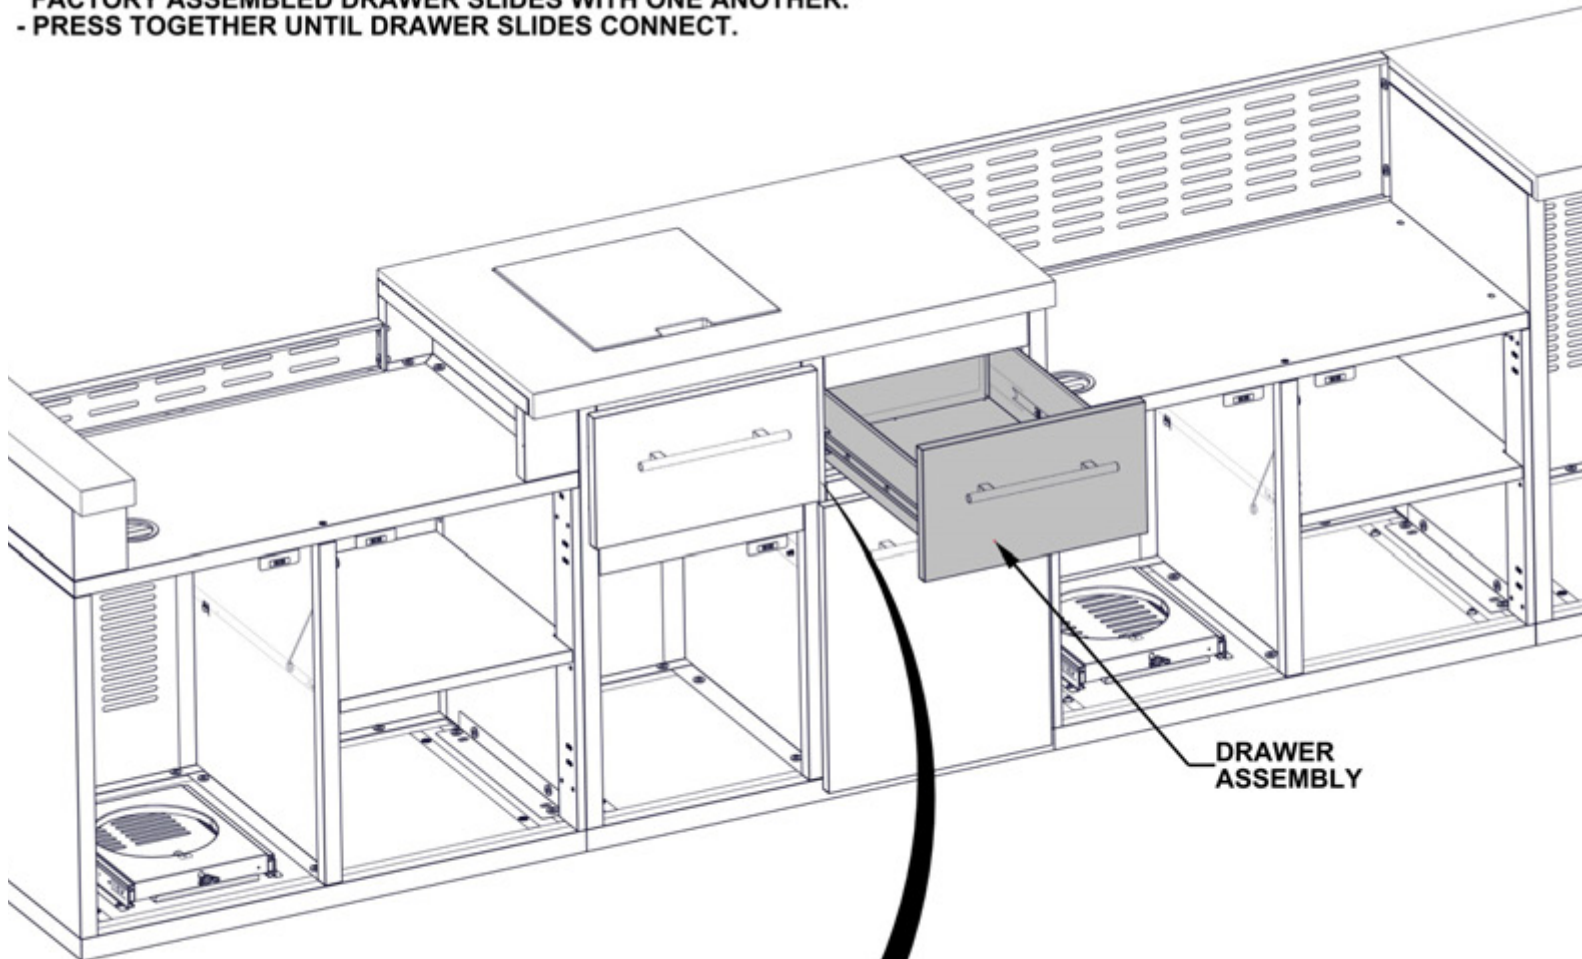

DRAWER
ASSEMBLY

SLIDE INNER RACE
OF DRAWER SLIDE OUT
BEFORE ATTACHING SLIDES

ALIGN DRAWER SLIDES
ON BOTH SIDES OF TRASH
CAN HOLDER

STEP 50A - DOOR ASSEMBLY

Qty	PartNo	Description
20	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW



D1 PIZZA OVEN CABINET DOOR ASSEMBLY L - A4M03546
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)



D2 PIZZA OVEN CABINET DOOR ASSEMBLY R - A4M03555
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)



D6 SINK CABINET DOOR ASSEMBLY L - A4M03577
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)



D7 GRILL CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)




D8 GRILL CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)



A4M03025 FULL OVERLAY HINGE
(x10)

- INSTALL CABINET HINGES TO THE FIVE DOORS.

DO NOT OVERTIGHTEN HARDWARE

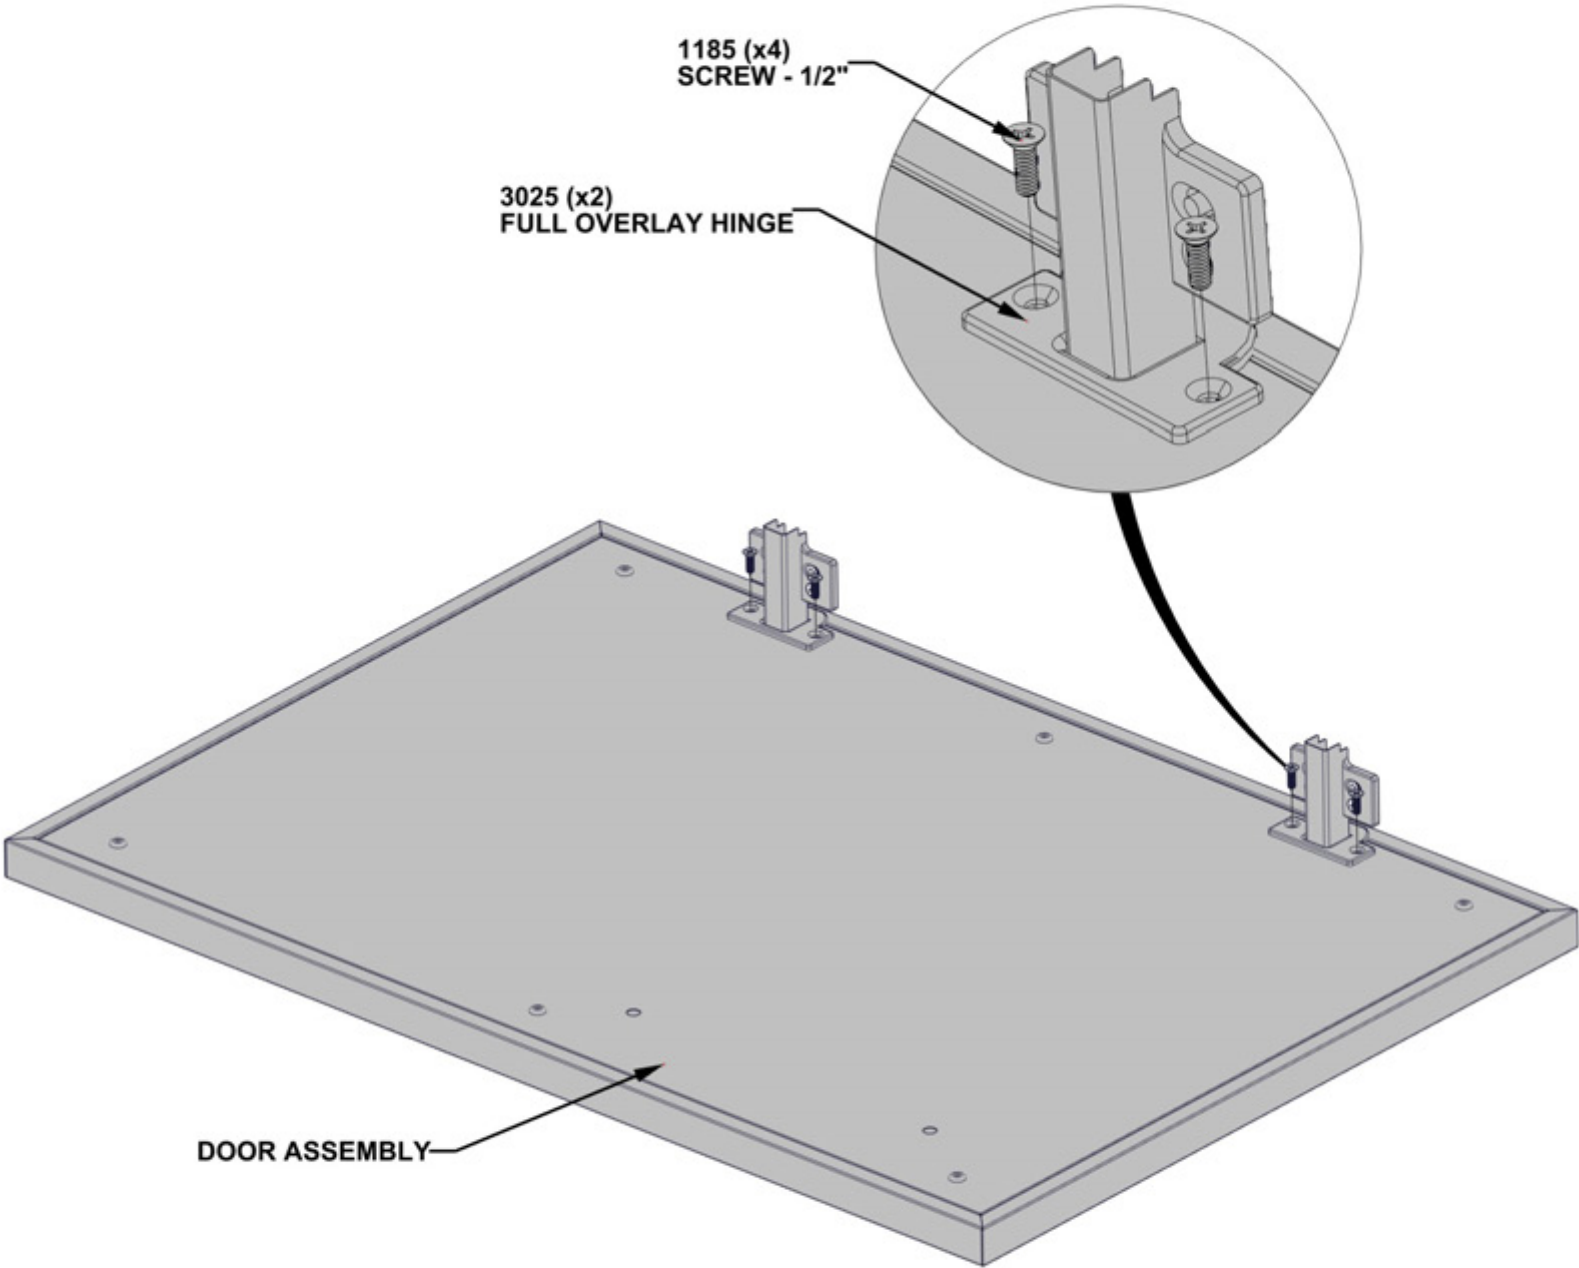


STEP 50B - DOOR ASSEMBLY

Qty	PartNo	Description
10	H101307	SHOULDER BOLT 8-32x30mm SS



H2 STAINLESS STEEL HANDLE - A4M03024
(x5) 5/8"x1 9/16"x11 13/16" (16x40x300)

- INSTALL CABINET HANDLES ON THE FIVE DOORS FROM PREVIOUS STEP.

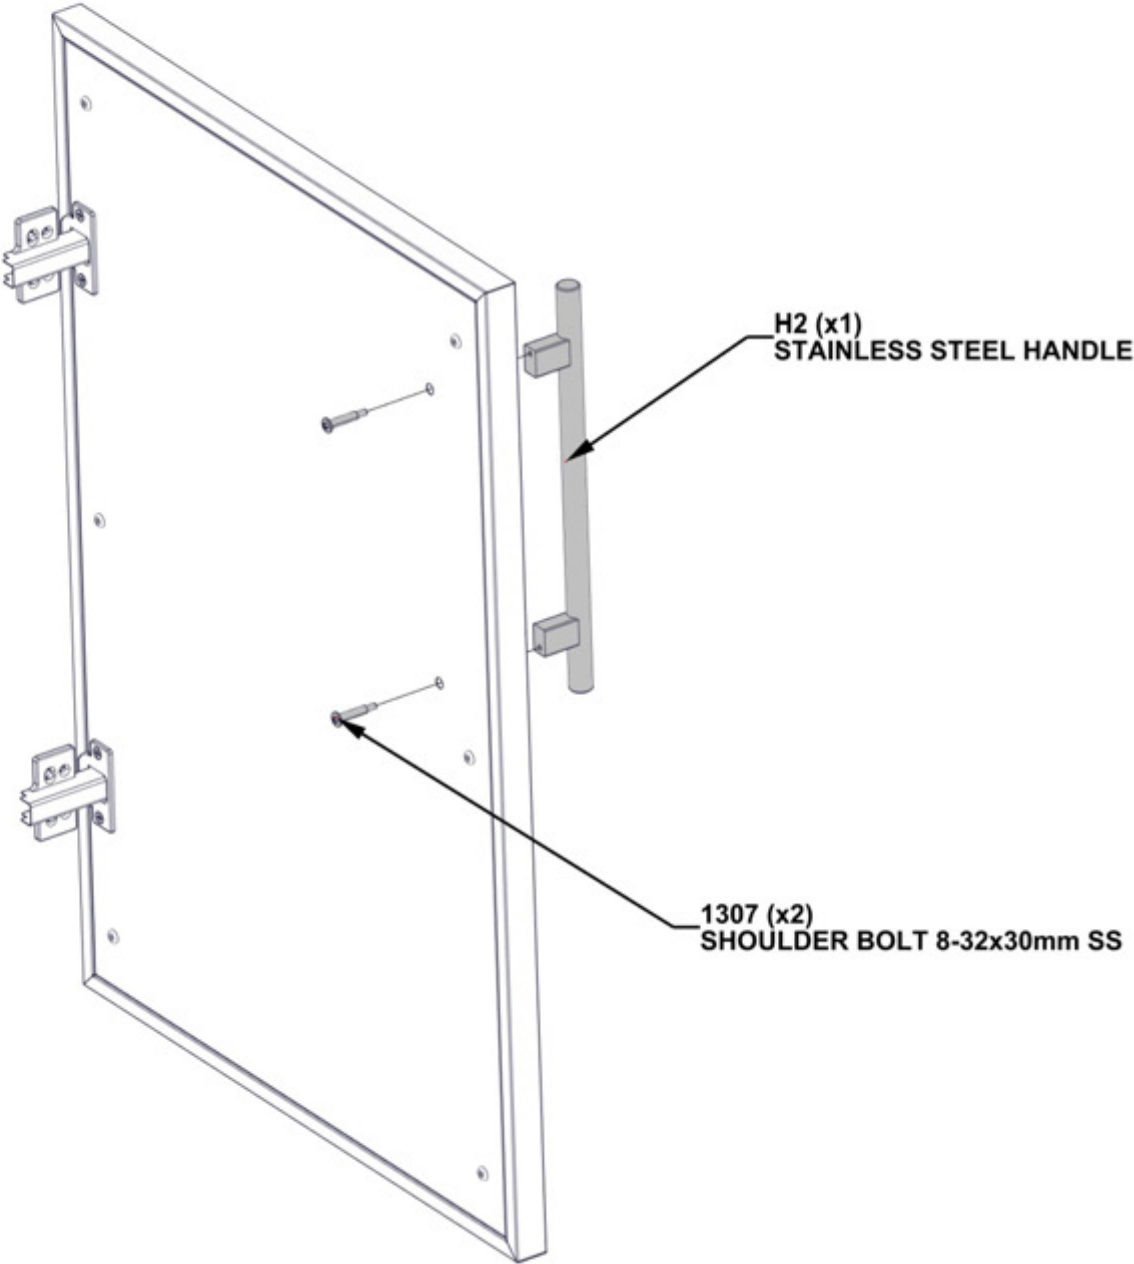


STEP 51 - CABINET DOOR ATTACHMENT




Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D1 PIZZA OVEN CABINET DOOR ASSEMBLY L - A4M03546
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

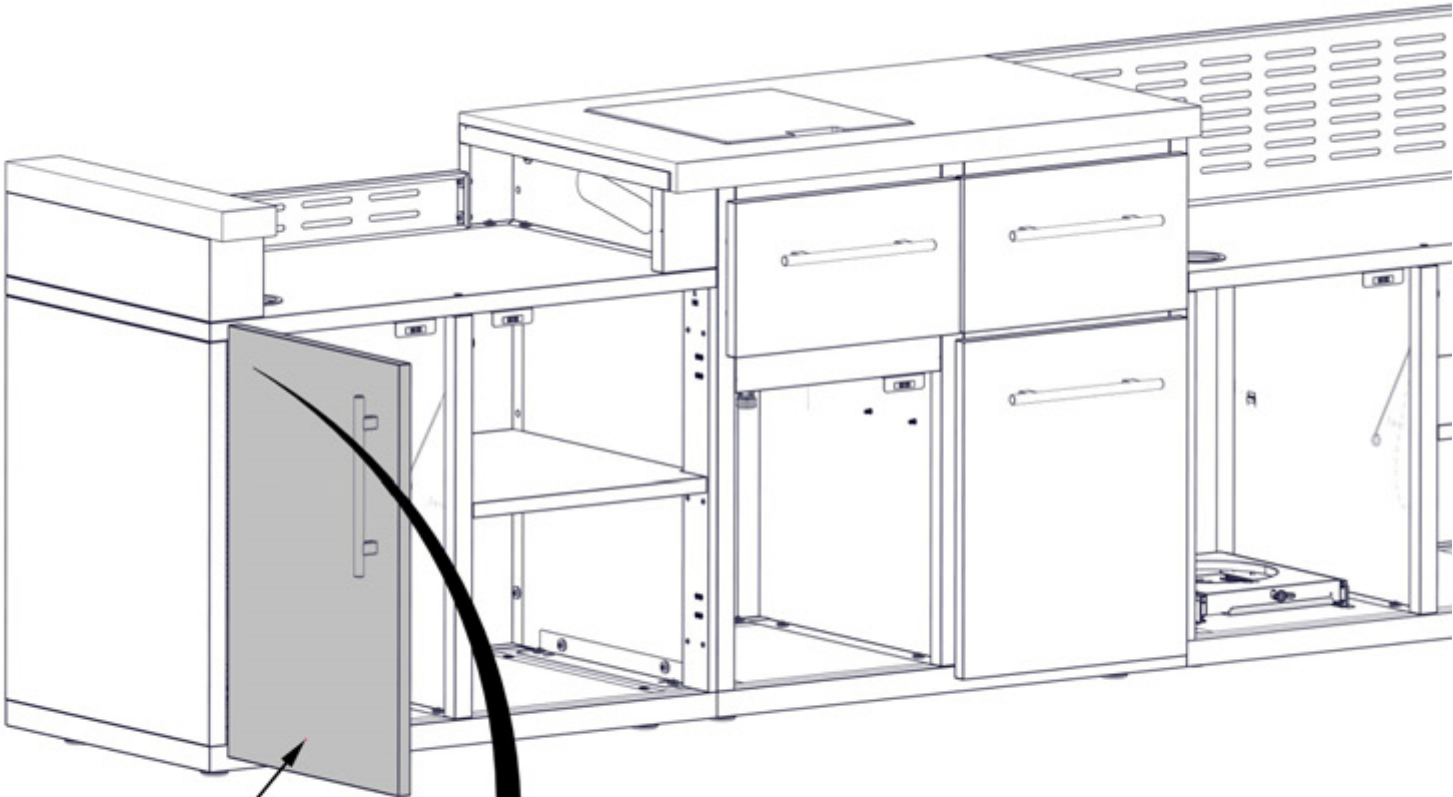

D1 (x1)
PIZZA OVEN CABINET
DOOR ASSEMBLY

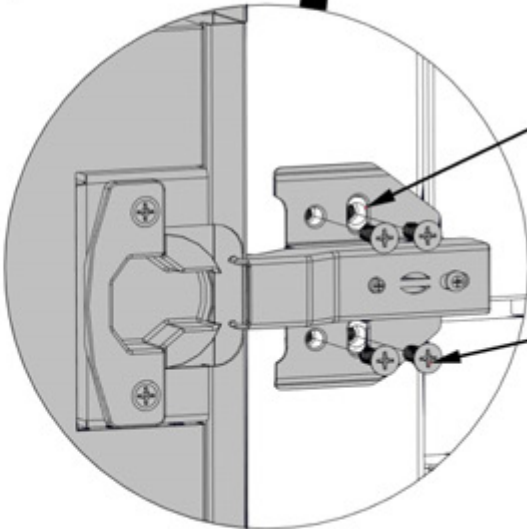

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"


STEP 52 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D2 PIZZA OVEN CABINET DOOR ASSEMBLY R - A4M03555
(x1) 28 7/16"x19 5/8"x15/16" (24x498x722.5)

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

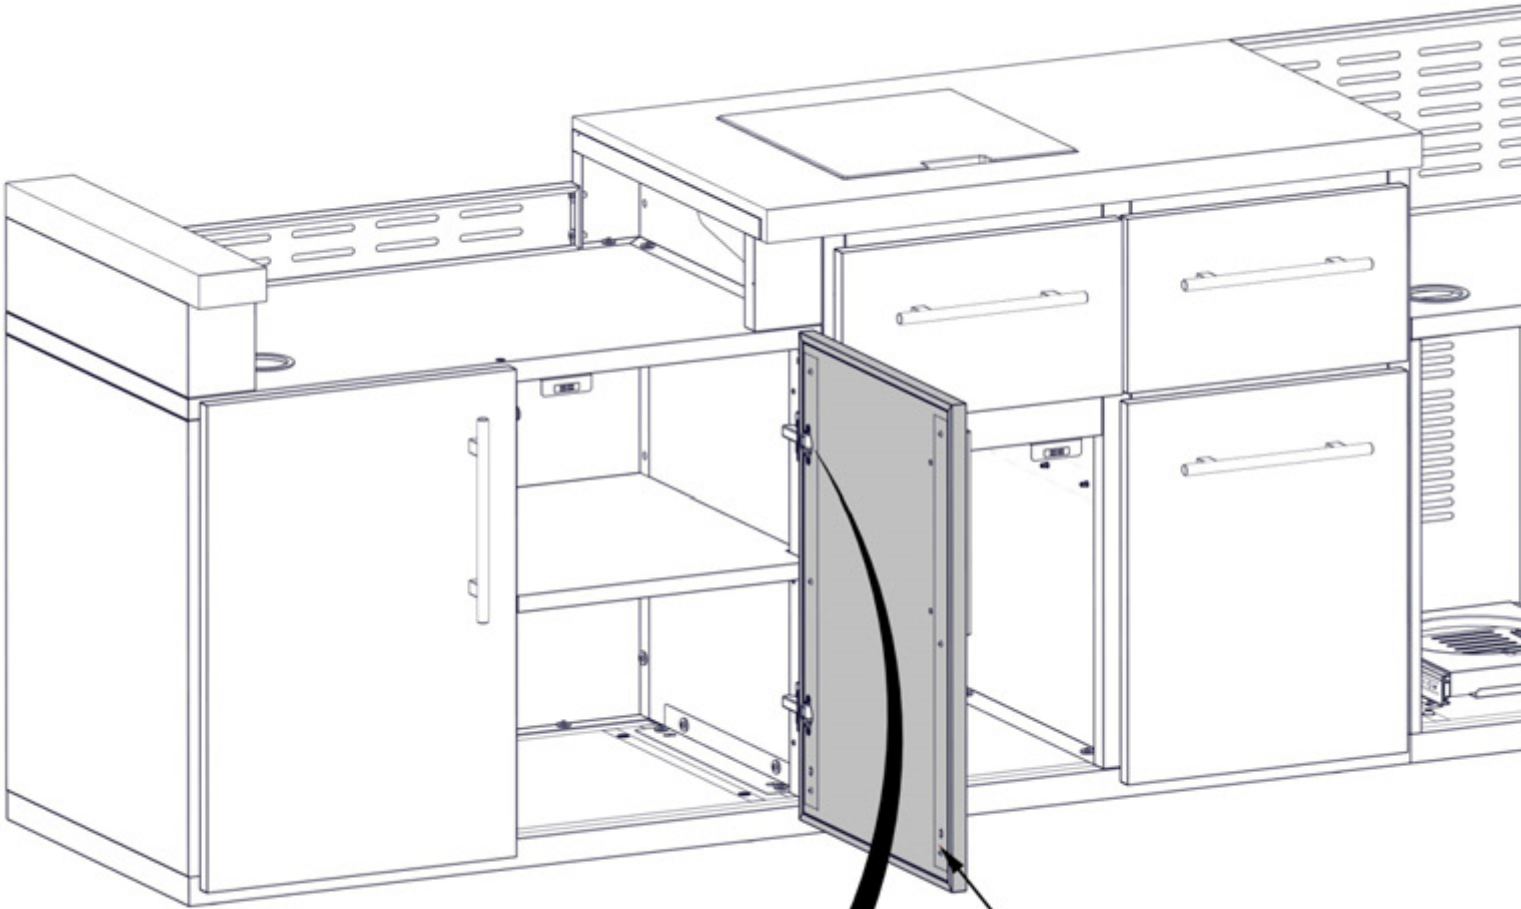


D2 (x1)
PIZZA OVEN CABINET
DOOR ASSEMBLY R

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"

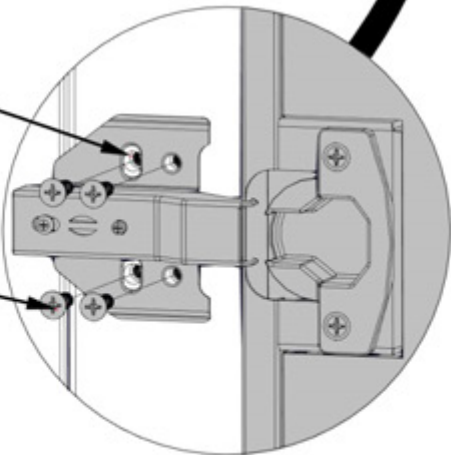


STEP 53 - CABINET DOOR ATTACHMENT




Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D6 SINK CABINET DOOR ASSEMBLY L - A4M03577
(x1) 22 1/4"x17 13/16"x15/16" (24x452x565)

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

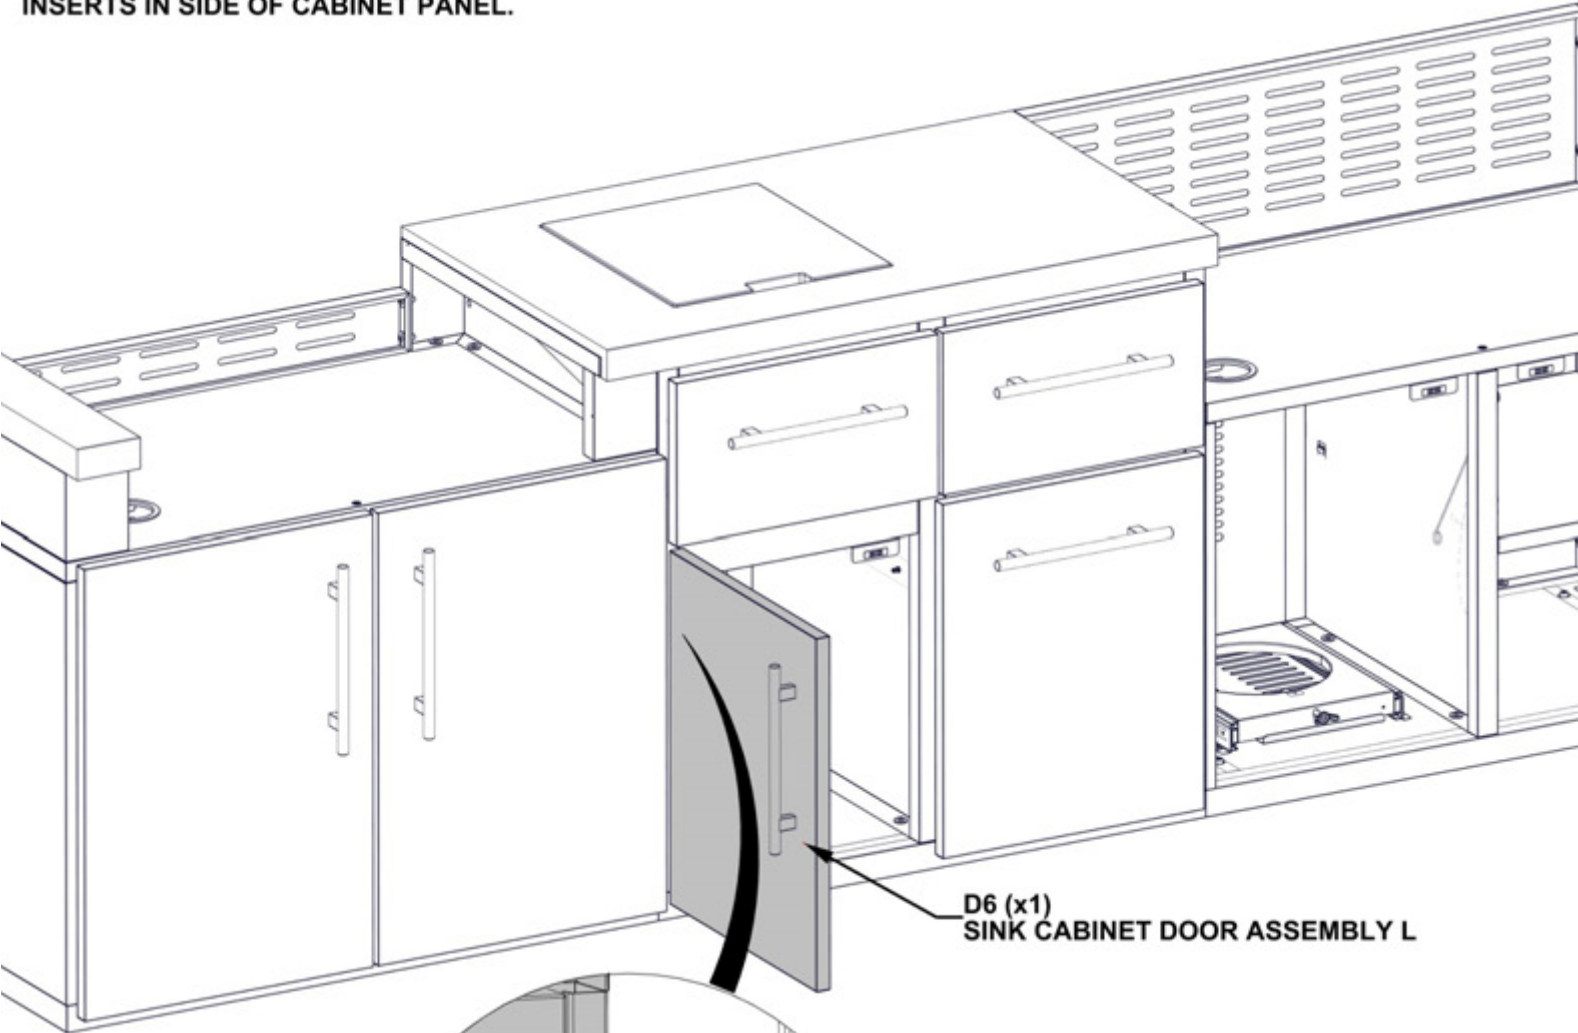

D6 (x1)
SINK CABINET DOOR ASSEMBLY L

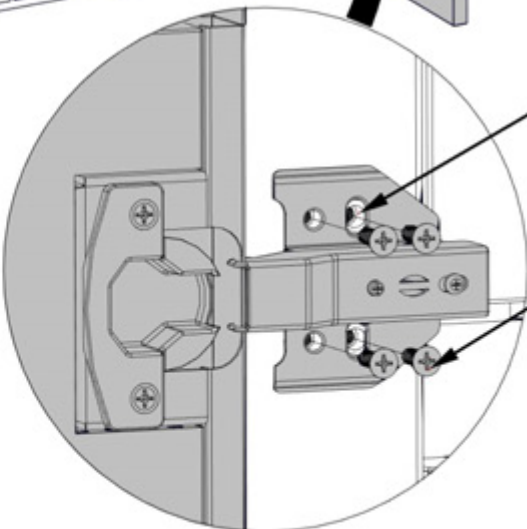

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"



STEP 54 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D7 GRILL CABINET DOOR ASSEMBLY L - A4M03587
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

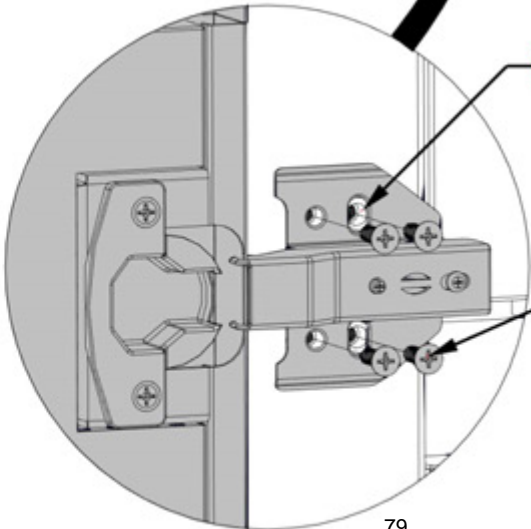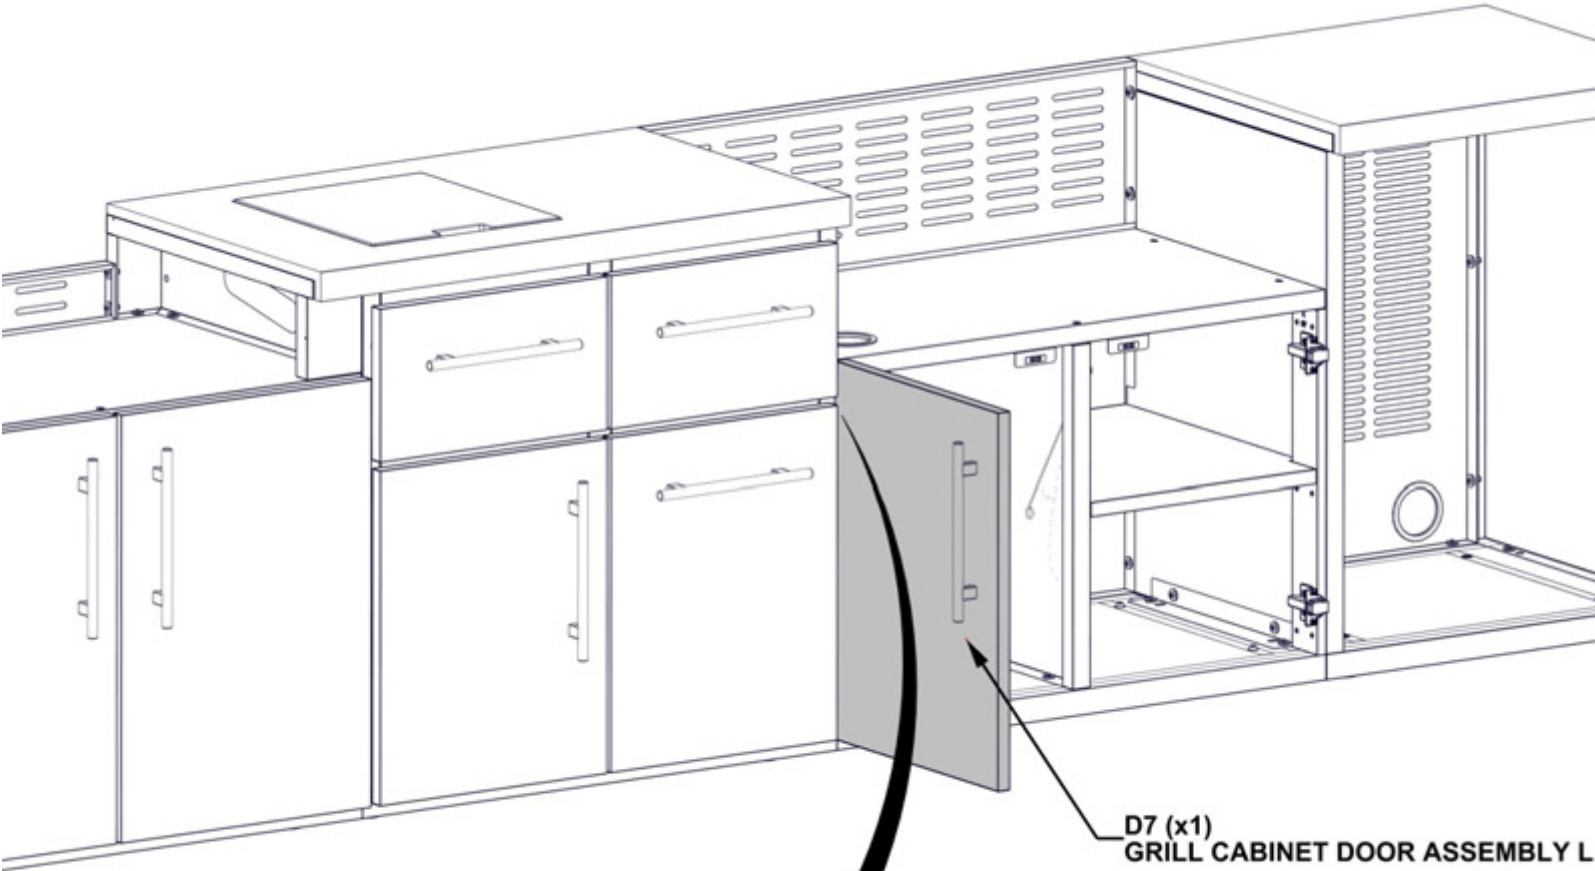

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE

1185 (x8)
SCREW - 1/2"


STEP 55 - CABINET DOOR ATTACHMENT



Qty	PartNo	Description
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D8 GRILL CABINET DOOR ASSEMBLY R - A4M03590
(x1) 24 13/16"x19 1/16"x15/16" (24x484.15x630)

- FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.
- WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH THREADED INSERTS IN SIDE OF CABINET PANEL.

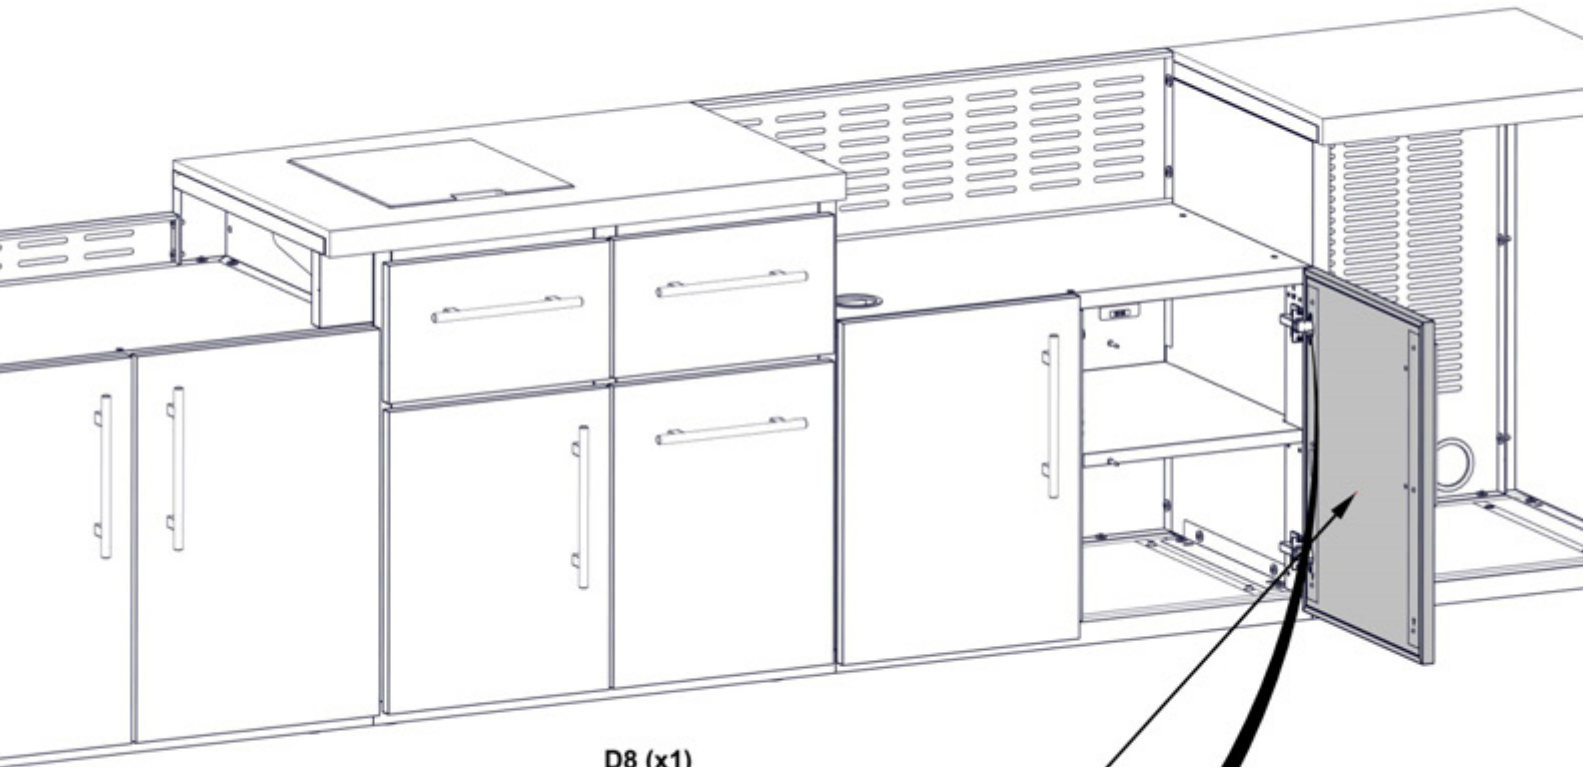


D8 (x1)
GRILL CABINET DOOR ASSEMBLY R

ALIGN HINGE BRACKET WITH
THREADED INSERTS IN PANEL

DO NOT OVERTIGHTEN HARDWARE



1185 (x8)
SCREW - 1/2"

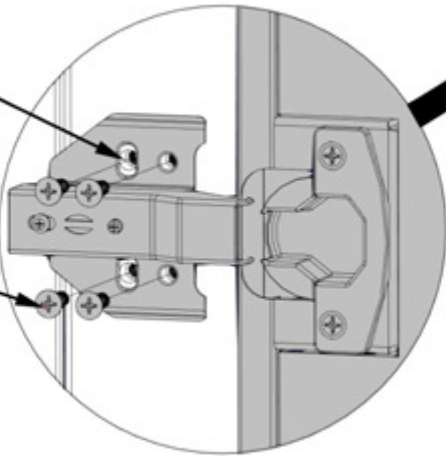

STEP 56 - CABINET DOOR ADJUSTMENT (AS NEEDED)


- ADJUST HINGES (AS NEEDED) SO THAT THE GAP AROUND ALL DOORS IS THE SAME AND THERE IS NO INTERFERENCE BETWEEN DOORS AND CABINETS.
- ADJUST MAGNET CATCH BRACKETS AS NEEDED.

**LOOSEN SCREWS TO ADJUST
MAGNET BRACKET, UNTIL IT
COMES IN CONTACT WITH
DOOR IN THE SHUT POSITION**

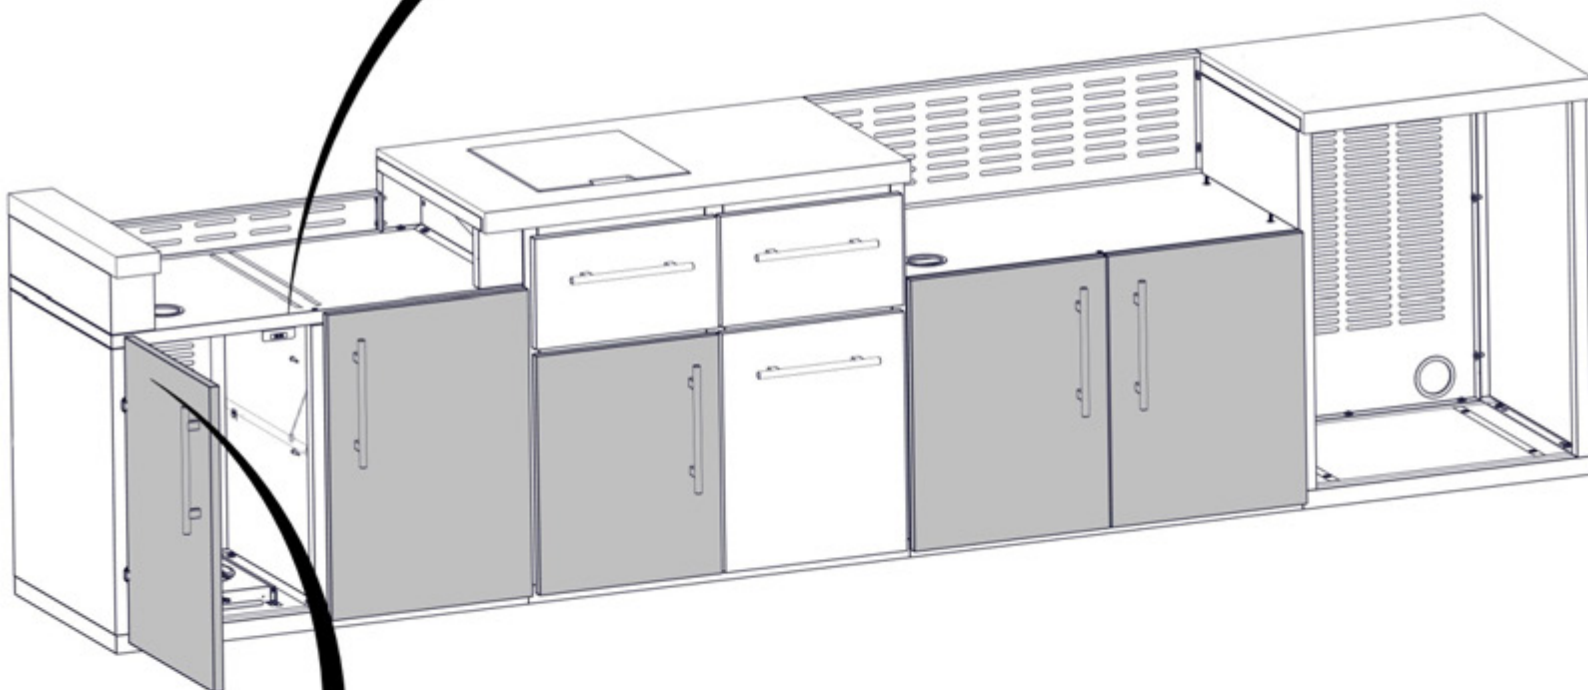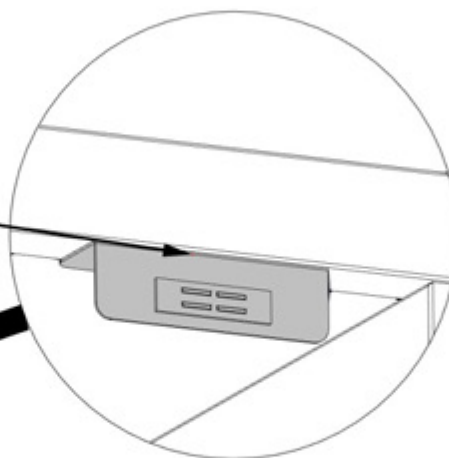


**SCREW #1:
SCREW CLOCKWISE TO BRING EDGE OF DOOR AWAY FROM
CABINET. SCREW COUNTER CLOCKWISE TO BRING EDGE OF DOOR
CLOSER TO CABINET**

**SCREW #2:
LOOSEN THESE SCREWS TO SLIDE DOOR TOWARD CABINET OR
AWAY FROM CABINET**

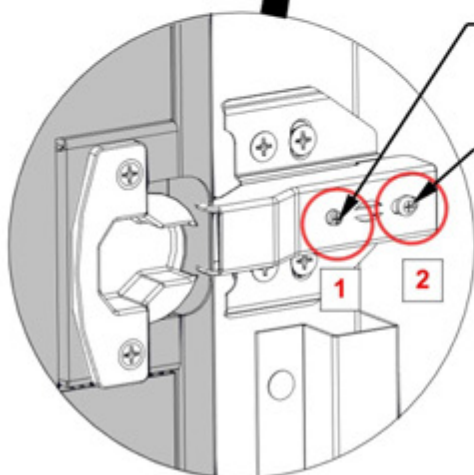


STEP 57 - KITCHEN ACCESSORY

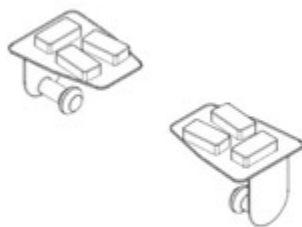


A4M02290 MAGNETIC PAPER TOWEL HOLDER
(x1)

- MAGNETIC PAPER TOWEL HOLDER CAN BE ATTACHED TO ANY METAL SURFACE ON KITCHEN.
- WE RECOMMEND ATTACHING TO THE INSIDE OF GRILL CABINET DOORS.
- **MAKE SURE TO KEEP PAPER TOWEL HOLDER AT A SAFE DISTANCE FROM GRILLING SURFACE.**

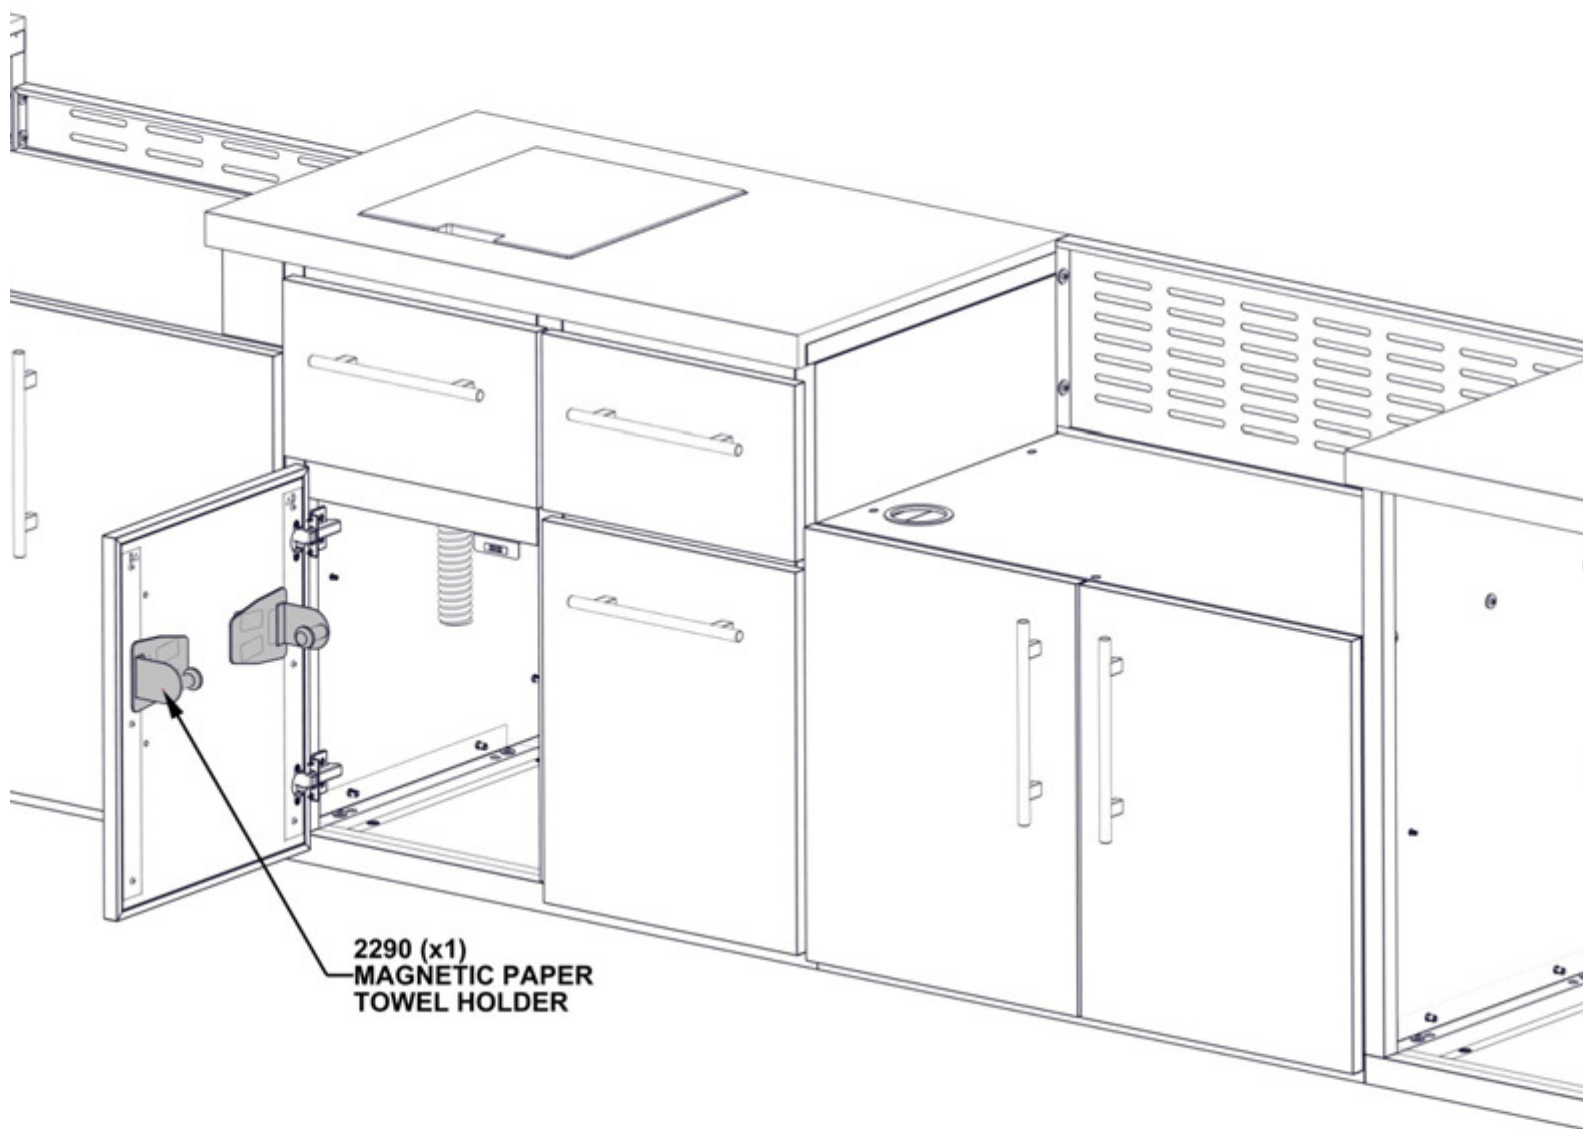


2290 (x1)
MAGNETIC PAPER
TOWEL HOLDER

OUTDOOR KITCHEN GRILL KIT

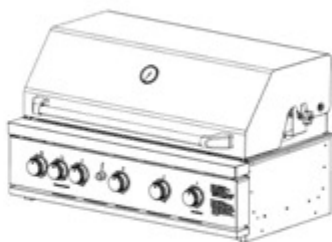


9240025 OUTDOOR KITCHEN GRILL KIT
(x1)

-
- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN GRILL KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN GRILL KIT.
 - FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

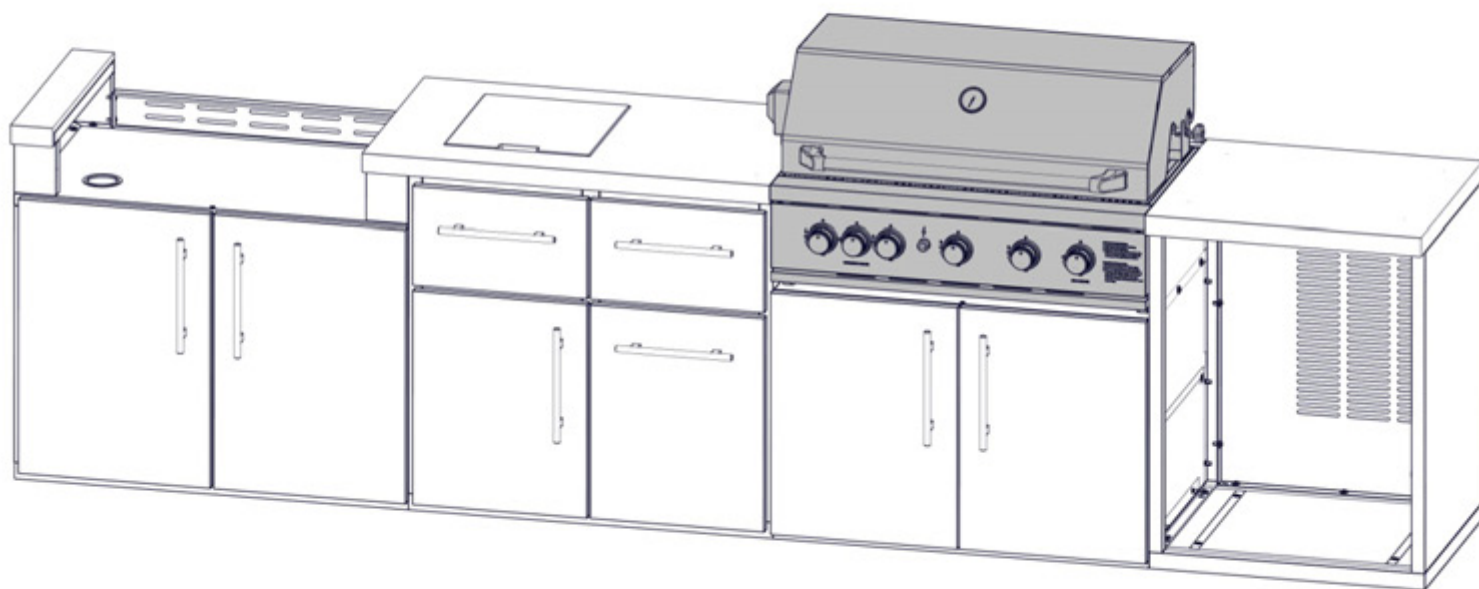


**NATURAL GAS CONVERSION KIT AVAILABLE BY CONTACTING BACKYARD DISCOVERY AT
www.backyarddiscovery.com 1-800-856-4445**

OUTDOOR KITCHEN PIZZA OVEN

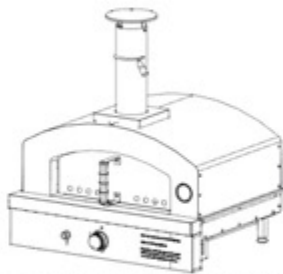

9240018 OUTDOOR KITCHEN PIZZA OVEN
(x1)

-
- FOR INSTALLATION AND DETAILED INFORMATION OF OUTDOOR KITCHEN PIZZA OVEN, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN PIZZA OVEN.
 - FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

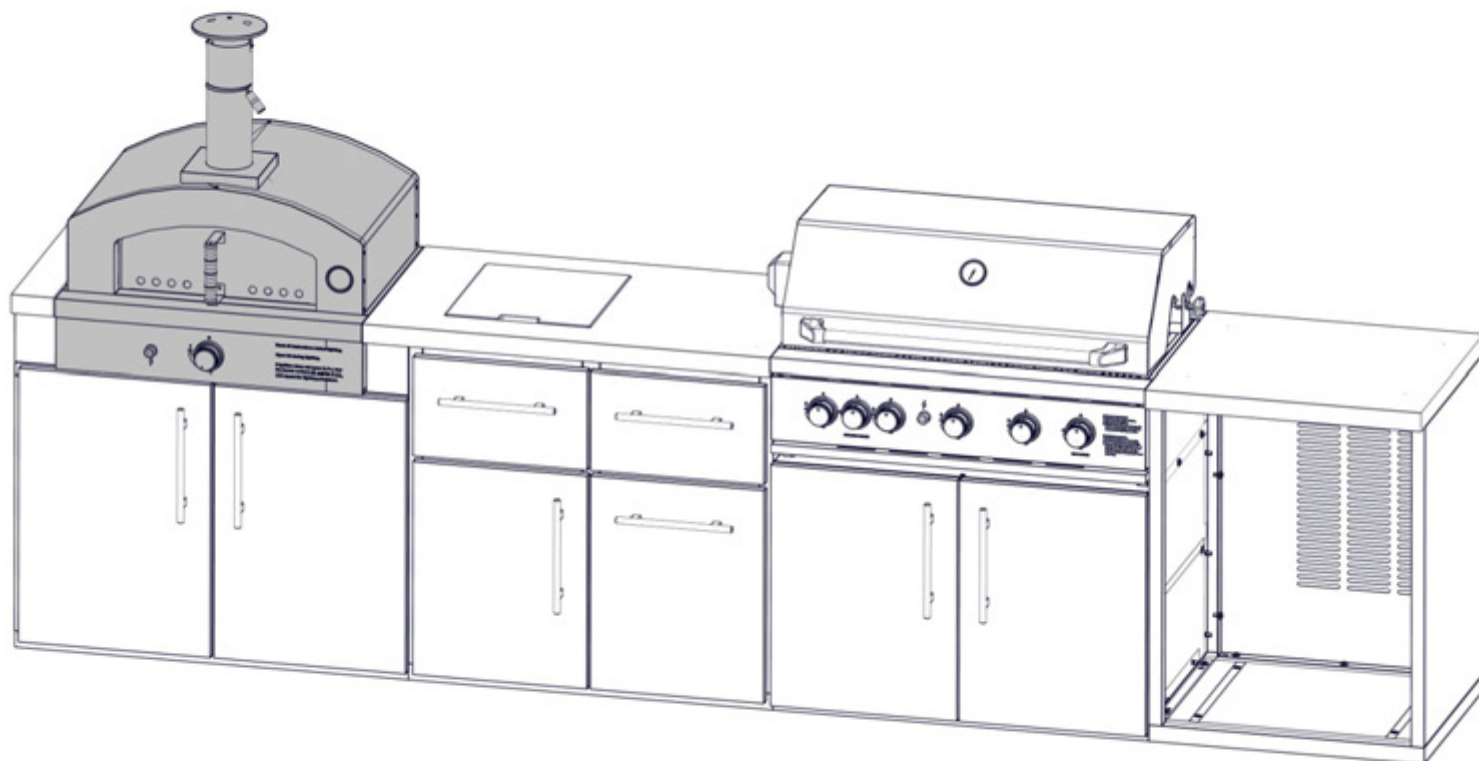


**NATURAL GAS CONVERSION KIT AVAILABLE BY CONTACTING BACKYARD DISCOVERY AT
www.backyarddiscovery.com 1-800-856-4445**

OUTDOOR KITCHEN FRIDGE



9240162 OUTDOOR KITCHEN FRIDGE - RIGHT OPEN
(x1)




-
- FOR INSTALLATION OF OUTDOOR KITCHEN FRIDGE, REFER TO PAGES IN THIS INSTRUCTION MANUAL.
 - FOR DETAILED INFORMATION OF OUTDOOR KITCHEN FRIDGE, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN FRIDGE.
 - FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

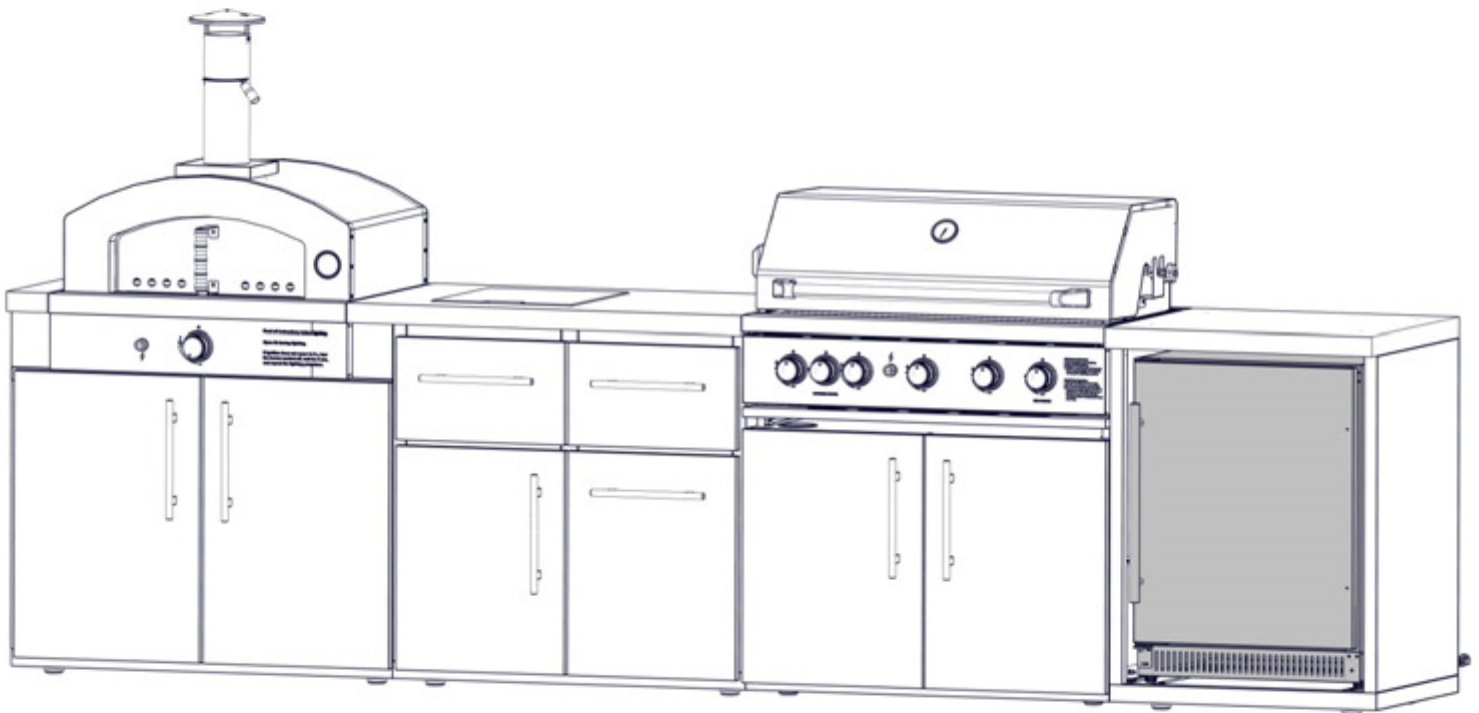

OUTDOOR KITCHEN FRIDGE

- CAREFULLY SLIDE FRIDGE INTO CABINET OPENING MAKING SURE THAT THE ELECTRICAL CORD IS ROUTED THROUGH THE HOLES IN THE BACK PANEL OF THE CABINET.

- IF FRIDGE IS NOT IN UPRIGHT POSITION, PLEASE LET SIT FOR 24 HRS BEFORE PLUGGING INTO RECEPTACLE.

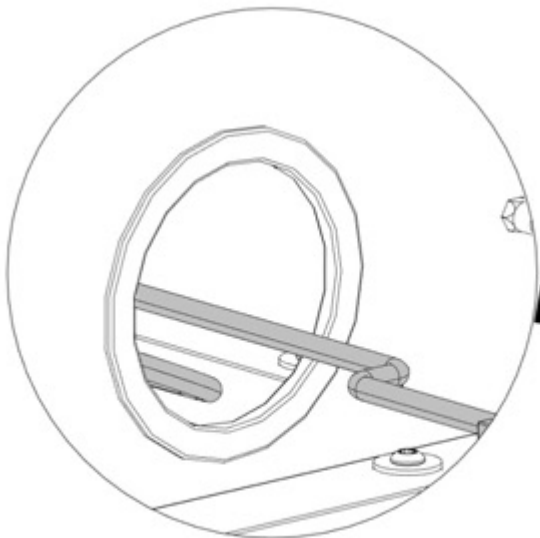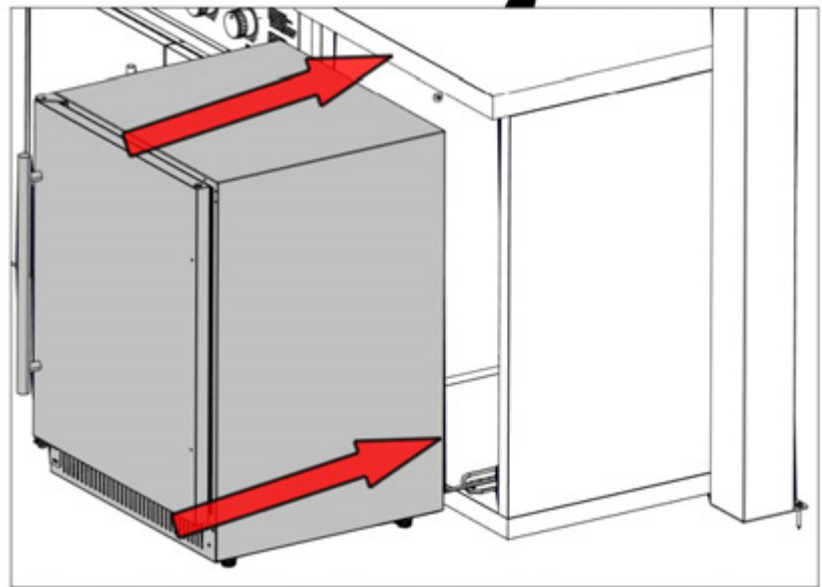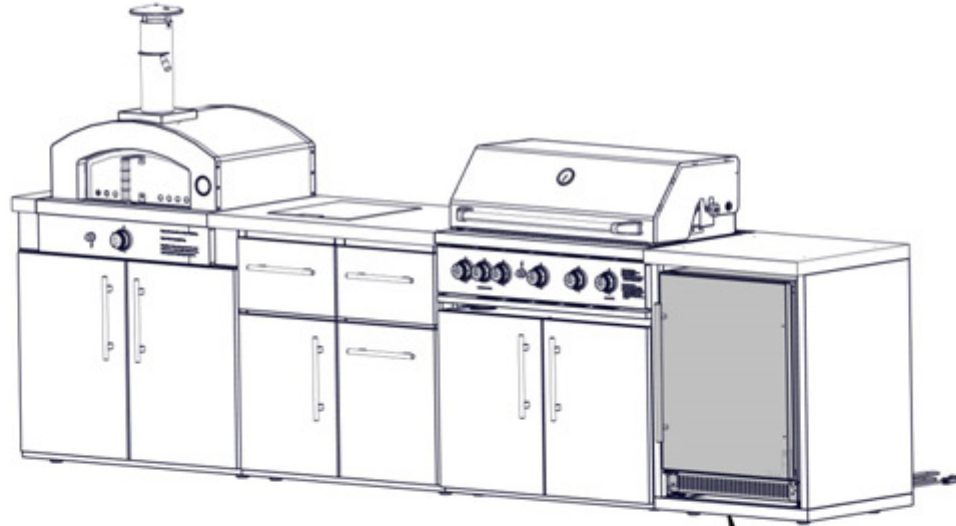

OUTDOOR KITCHEN FRIDGE

- ALIGN FEET ON FRIDGE UNIT SO THAT IT IS LEVEL AND DOES NOT TILT.
- TURN FEET CLOCKWISE TO EXTEND THEM AND COUNTERCLOCKWISE TO SHORTEN. REPEAT THIS FOR ALL FOUR FRIDGE FEET AS NEEDED TO LEVEL.

