



Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

14x10 GLENMORE GAZEBO

MODEL #: 2600522, 2600522-V



WARNING

Cancer and Reproductive Harm
www.P65Warnings.ca.gov



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order
replacement parts Para obtener instrucciones en español, visite
www.backyarddiscovery.com



EASY STEP-BY-STEP

3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP



INS-2600522, 2600522-V-A-14x10 GLENMORE GAZEBO-ENG 6-26-2026


OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings or concrete pad to attach your structure.


- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.

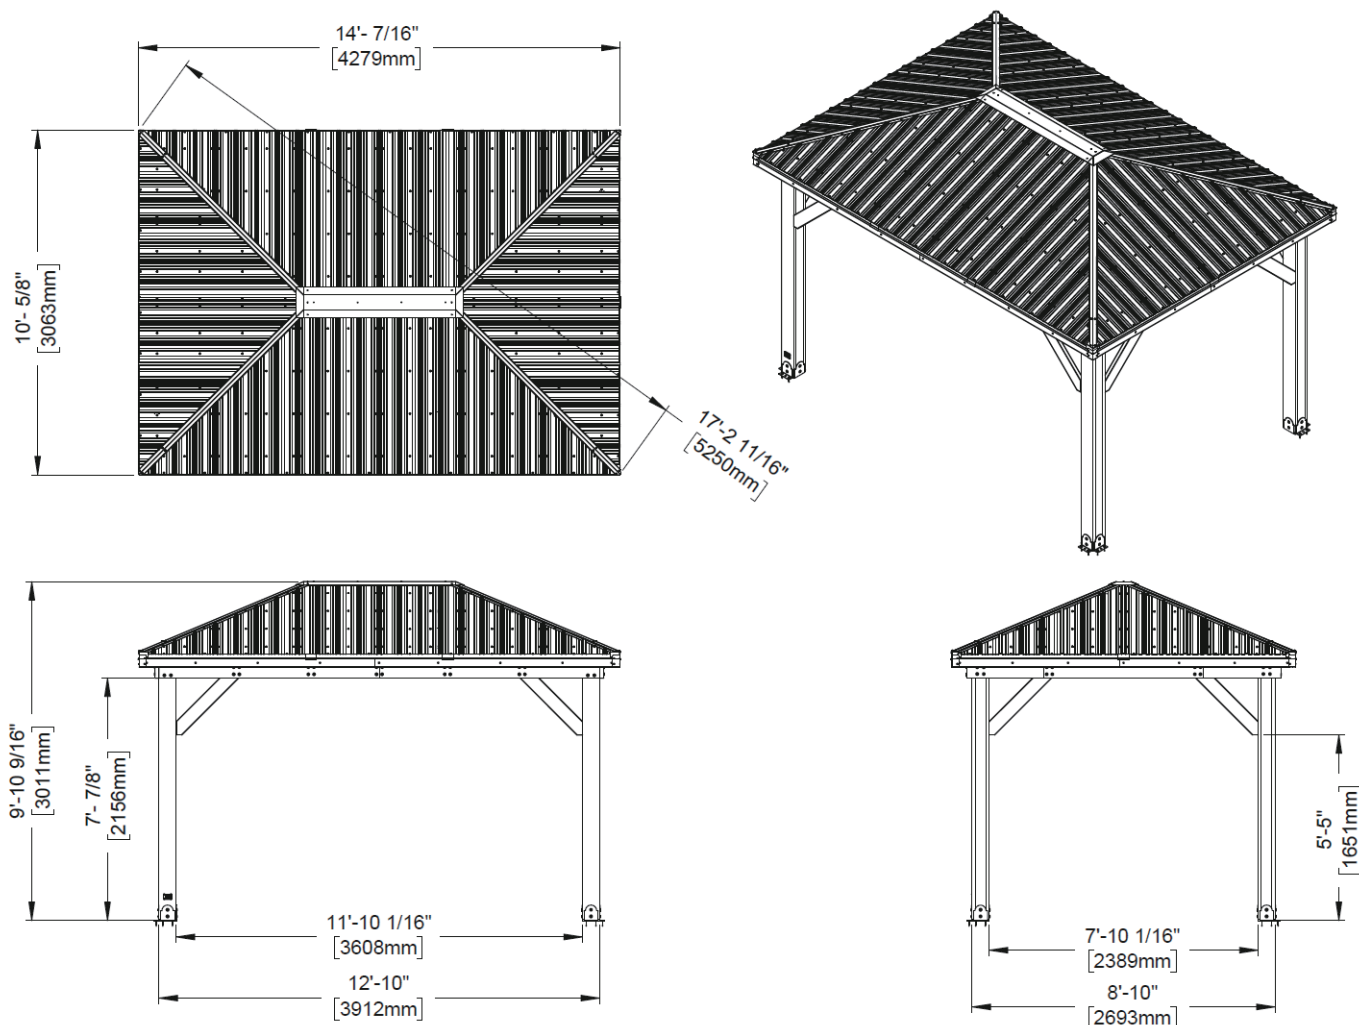


OWNER'S MANUAL - ANCHORING LAYOUT

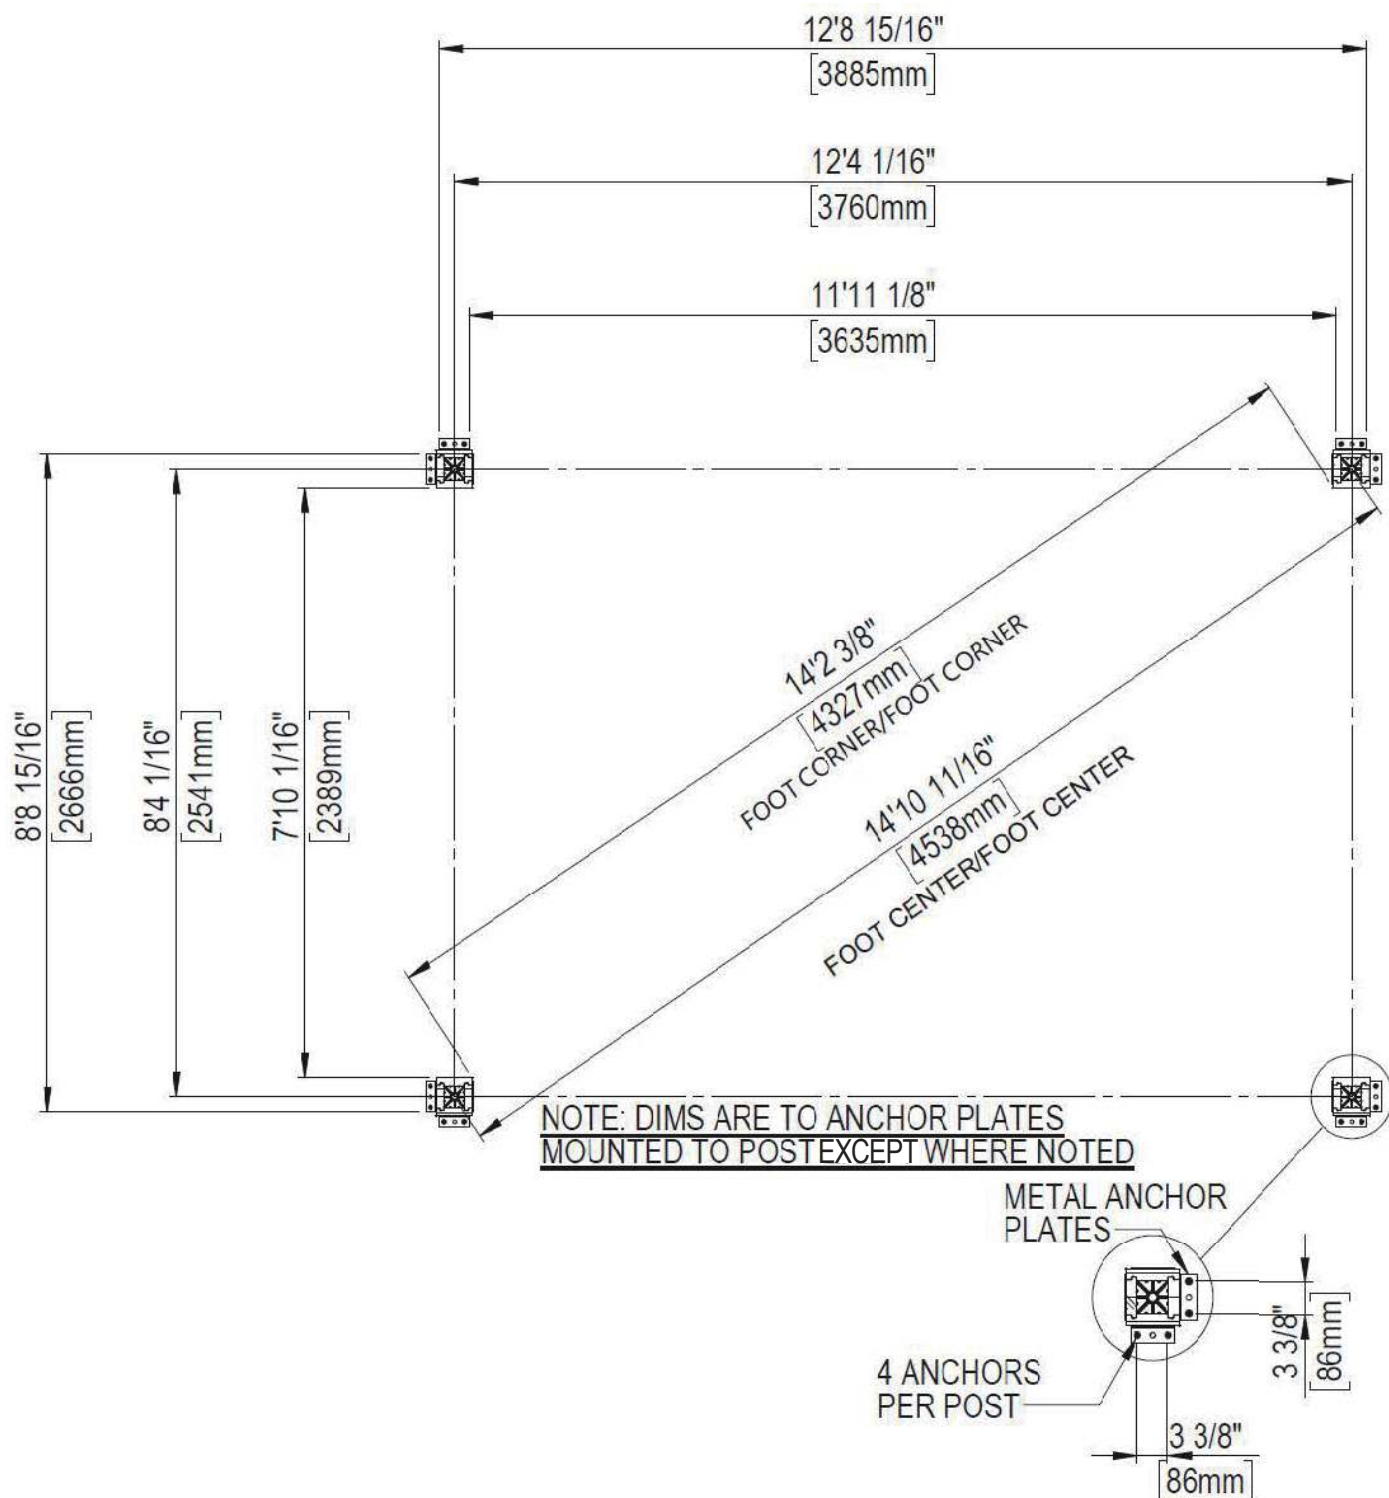


**NOTE: DIMENSIONS ARE TO ANCHOR PLATES
MOUNTED TO POSTS EXCEPT WHERE NOTED.**

OWNER'S MANUAL - PARTS IDENTIFICATION

WOOD COMPONENTS (NOT TO SCALE)

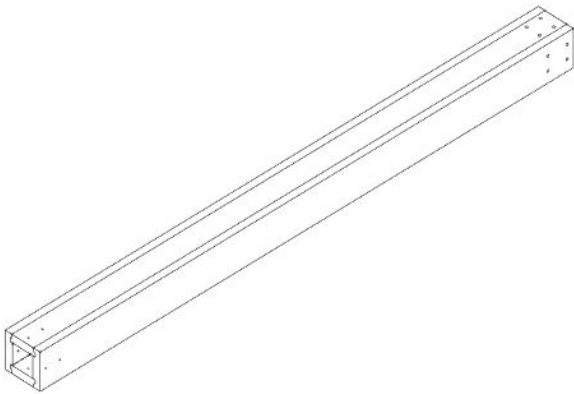

P01 POST - W2A03571
(x2) 6"x6"x89 1/2" (152x150x2274)

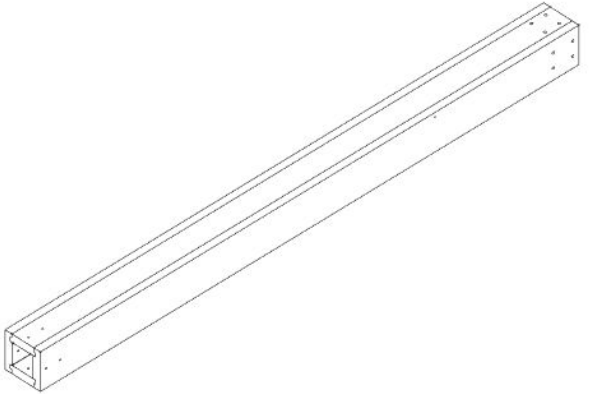

P02 POST - W2A03572
(x2) 6"x6"x89 1/2" (152x150x2274)



CO1 ANGLE BRACE - W4L23582
(x7) 1 7/16"x4 3/4"x35 1/8" (36x120x893)



CO2 ANGLE BRACE/TAG - W2A05423
(x1) 1 7/16"x4 3/4"x35 1/8" (36x120x893)



D01 BEAM - W4L16926
(x4) 1 7/16"x5 1/4"x30 15/16" (36x134x786)



D02 BEAM - W4L16927
(x2) 1 7/16"x5 1/4"x55 3/4" (36x134x1416)



G01 BEAM - W4L16923
(x4) 15/16"x5 1/4"x53 3/16" (24x134x1351)



G02 BEAM - W4L16924
(x2) 15/16"x5 1/4"x47 5/8" (24x134x1210)



G03 BEAM - W4L16925
(x4) 15/16"x5 1/4"x77" (24x134x1956)



Q01 ROOF JOIST - W4L16294
(x4) 15/16"x4 7/16"x84 9/16" (24x112x2148)



Q02 ROOF JOIST - W4L16307
(x4) 15/16"x4 3/8"x61 1/2" (24x112x1562)

OWNER'S MANUAL - PARTS IDENTIFICATION

WOOD COMPONENTS (NOT TO SCALE)



H01 ROOF JOIST - W4L16295
(x2) 15/16"x3 3/8"x"88 3/16" (24x86x2240)



H02 ROOF JOIST - W4L16283
(x2) 15/16"x3 3/8"x46 3/4" (24x86x1188)



H03 PURLIN - W4L16281
(x2) 15/16"x3 3/8"x68 3/8" (24x86x1736)



H04 PURLIN - W4L16921
(x4) 15/16"x3 3/8"x29 5/8" (24x86x752)



H05 PURLIN - W4L16291
(x4) 15/16"x3 3/8"x65 1/2" (24x86x1664)



H07 PURLIN - W4L16292
(x4) 15/16"x3 3/8"x59 7/16" (24x86x1509)



H08 PURLIN - W4L16293
(x4) 15/16"x3 3/8"x43 11/16" (24x86x1110)



H09 ROOF JOIST - W4L16296
(x2) 1"x3 3/8"x88 1/4" (24x86x2240)



H10 ROOF JOIST - W4L16309
(x2) 15/16"x3 3/8"x76 7/8" (24x86x1952)



H11 ROOF JOIST - W4L16297
(x2) 15/16"x3 3/8"x15 7/8" (24x86x404)



H12 ROOF JOIST - W4L16308
(x2) 1"x3 3/8"x76 7/8" (24x86x1952)



H13 PURLIN - W4L16303
(x2) 15/16"x3 3/8"x20 1/4" (24x86x514)

OWNER'S MANUAL - PARTS IDENTIFICATION

WOOD COMPONENTS (NOT TO SCALE)



H14 PURLIN - W4L16304
(x2) 15/16"x3 3/8"x50 1/16" (24x86x1272)



H15 PURLIN - W4L16305
(x2) 15/16"x3 3/8"x79 7/8" (24x86x2030)



H16 PURLIN - W4L16922
(x4) 15/16"x3 3/8"x56" (24x86x1423)




H17 PURLIN - W4L16289
(x2) 15/16"x1 5/16"x51 3/8" (24x34x1306)



H18 ROOF SUPPORT - W4L16315
(x1) 15/16"x3 3/8"x48" (24x86x1219)



H19 ROOF SUPPORT - W4L16928
(x4) 15/16"x3 3/8"x75 3/16" (24x86x1909)



E01 RAFTER - W4L16284
(x2) 1 7/16"x3 3/8"x44" (36x86x1117)



E02 RAFTER - W4L16288
(x4) 1 7/16"x3 3/8"x63 7/8" (36x86x1622)



E03 RAFTER - W4L16286
(x2) 1 7/16"x3 3/8"x20 7/16" (36x86x519)



E04 RAFTER - W4L16285
(x2) 1 7/16"x3 3/8"x44" (36x86x1117)



E05 RAFTER - W4L17402
(x2) 1 7/16"x3 3/8"x42 13/16" (36x86x1087)



E06 RAFTER - W4L16287
(x2) 1 7/16"x3 3/8"x20 7/16" (36x86x519)



E07 RAFTER - W4L17401
(x2) 1 7/16"x3 3/8"x42 13/16" (36x86x1087)



E09 RAFTER - W4L16298
(x2) 1 7/16"x3 3/8"x55 13/16" (36x86x1417)



E10 RAFTER - W4L16300
(x2) 1 7/16"x3 3/8"x21 3/4" (36x86x553)




E11 RAFTER - W4L16290
(x2) 1 7/16"x3 3/8"x63 7/8" (36x86x1622)




E12 RAFTER - W4L16302
(x2) 1 7/16"x3 3/8"x21 3/4" (36x86x553)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

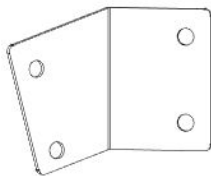


A4M01191 PANEL BRACKET
(x2)

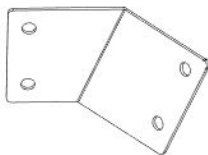

A4M01192 PANEL BRACKET
(x2)

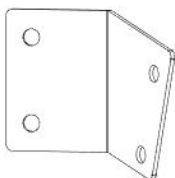

A4M01193 PANEL BRACKET
(x2)

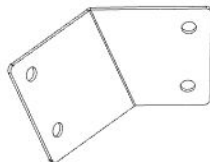

A4M01194 PANEL BRACKET
(x2)




A4M01185 CORNER BRACKET
(x4)




A4M01228 RAFTER CLIP
(x18)



A4M01205 METAL SPACER
(x4)

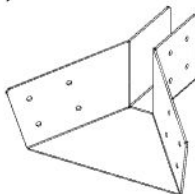

A4M01184 PANEL SUPPORT BRACKET
(x2)

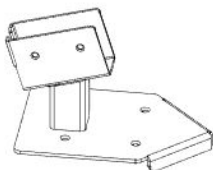


A4M01234 POST CLIP ASSY
(x4)



A4M07224-1 29 GA STEEL SHEETING
(x2)




A4M07224-2 29 GA STEEL SHEETING
(x2)

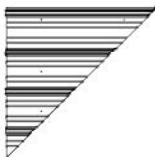

A4M07225-1 29 GA STEEL SHEETING
(x2)




A4M07225-2 29 GA STEEL SHEETING
(x2)

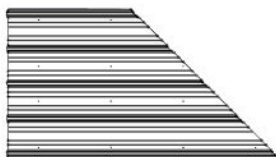


A4M07226-1 29 GA STEEL SHEETING
(x2)



A4M07226-2 29 GA STEEL SHEETING
(x2)

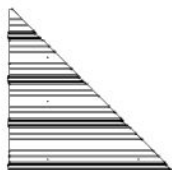

A4M07227-1 29 GA STEEL SHEETING
(x2)

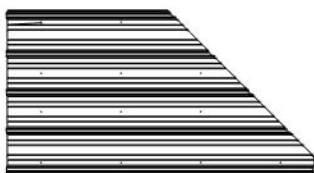


A4M07227-2 29 GA STEEL SHEETING
(x2)



A4M07216 29 GA STEEL SHEETING
(x2)



A4M07217 29 GA STEEL SHEETING
(x2)

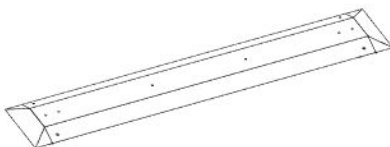


A4M07228 RIDGE PEAK CAP
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)




A4M07218 RIDGE CAP CHANNEL
(x8)

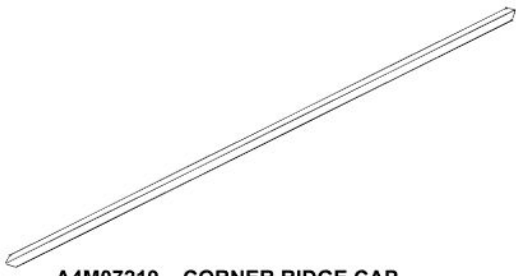


A4M07219 CORNER RIDGE CAP
(x4)

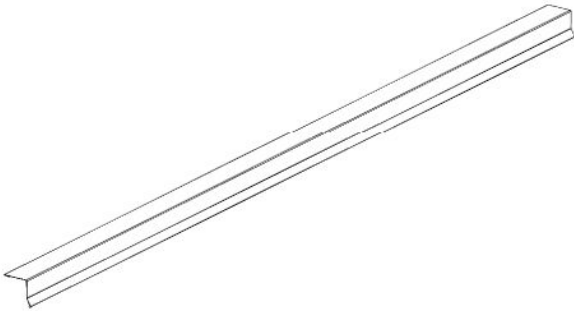


A4M07273 DRIP EDGE
(x8)

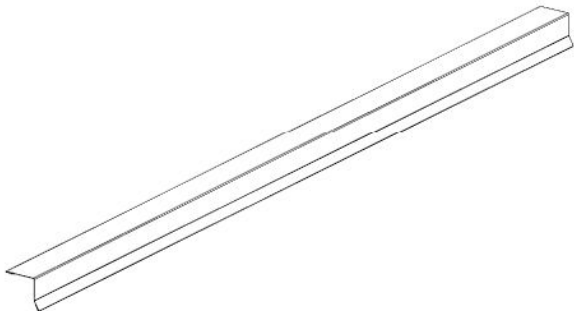


A4M07274 DRIP EDGE
(x2)

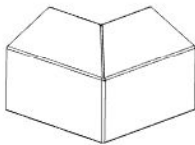

A4M07275 CORNER CAP
(x4)

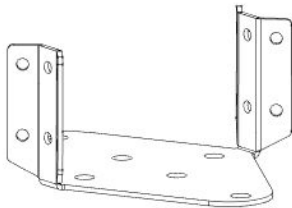


A4M02501 FAN MOUNT BRACKET
(x1)

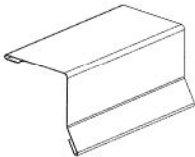


A4M05428 DRIP EDGE SPLICE
(x6)



A4M02158 BYD ID TAG PATIO
(x1)

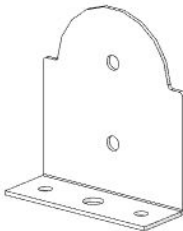


A4M01793 POST ANCHORING PLATE
(x8)

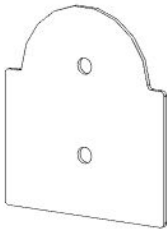

A4M01794 POST PLATE
(x8)

OWNER'S MANUAL - PARTS IDENTIFICATION

PLASTIC COMPONENTS (NOT TO SCALE)

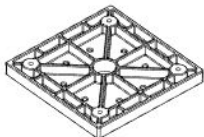


A6P00308 6x6 POST FOOT
(x4)




9250154 ELECTRICAL ENCLOSURE
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS

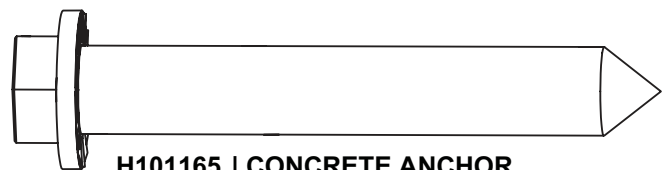


H101165 | CONCRETE ANCHOR
(x16) | 3/8x3" BLK




H100398 | T-NUT
(x32) | 1/4

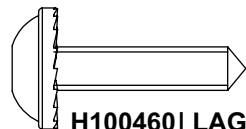


H100460 | LAG SCREW
(x16) | 1/4 X 1

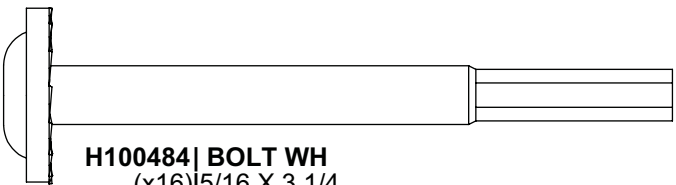


H100484 | BOLT WH
(x16) | 5/16 X 3 1/4

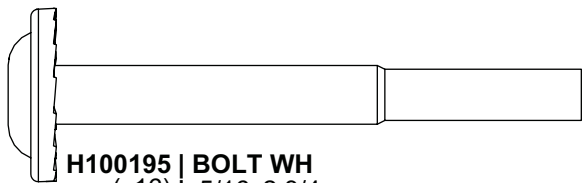


H100195 | BOLT WH
(x16) | 5/16x2 3/4

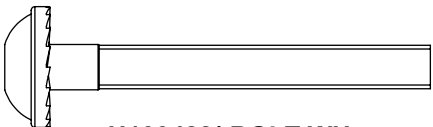


H100488 | BOLT WH
(x18) | 1/4 X 2




H100200 | SCREW PFH
(x22) | 8x1 1/2

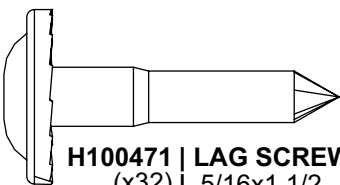


H100471 | LAG SCREW WH
(x32) | 5/16x1 1/2

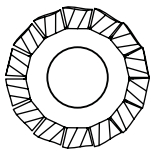


H100198 | WASHER LOCK EXT
(x110) | 8x19




H100382 | SCREW PFH
(x20) | 8x1 3/4



H100385 | SCREW PFH
(x36) | 8x1




H100405 | WASHER LOCK EXT
(x8) | 6x15

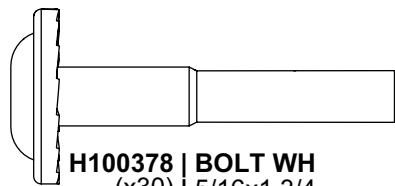


H100378 | BOLT WH
(x30) | 5/16x1 3/4




H100653 | NUT LOCK
(x18) | 1/4



H100536 | SCREW PWH
(x40) | 8x1 1/4




H100379 | T-NUT
(x94) | 5/16

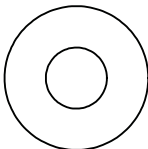


H100630 | WASHER FLAT
(x18) | 8x19




H100479 | NUT LOCK
(x16) | 5/16




H100391 | SCREW PFH
(x188) | 8x2

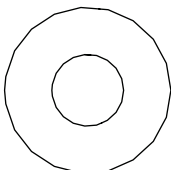

H100770 | WASHER FLAT
(x16) | 9.5x22



H100392 | SCREW PFH
(x16) | 8x3/4

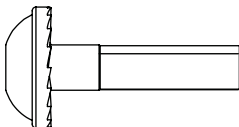


H100171 | BOLT WH
(x32) | 1/4 X 1

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS



H101030 | CONFIRMAT SCREW
(x96) | 7X2

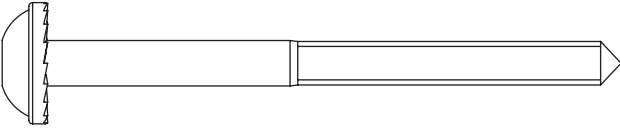


H100792 | LAG SCREW WH
(x12) | 1/4x3

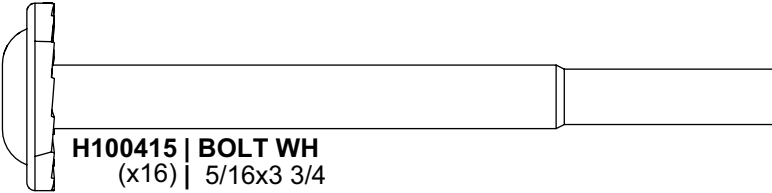


H100415 | BOLT WH
(x16) | 5/16x3 3/4




H101034 | WEATHER PROOF WASHER
(x4) | 1/8"x1/4" I.D.x7/16" O.D. (3x6.00 I.D.x11.00 O.D.)

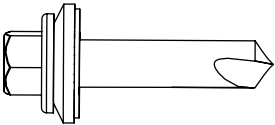


H101480 | SCREW SELF TAPPING #9
(x274) | 1/4X1




H100764 | SCREW SETTER
(x1) |




H100147 | TORX BIT
(x1) | T-30




H101100 | MAGNETIC DRIVER
(x1) |



H100114 | TORX BIT
(x1) | T-30

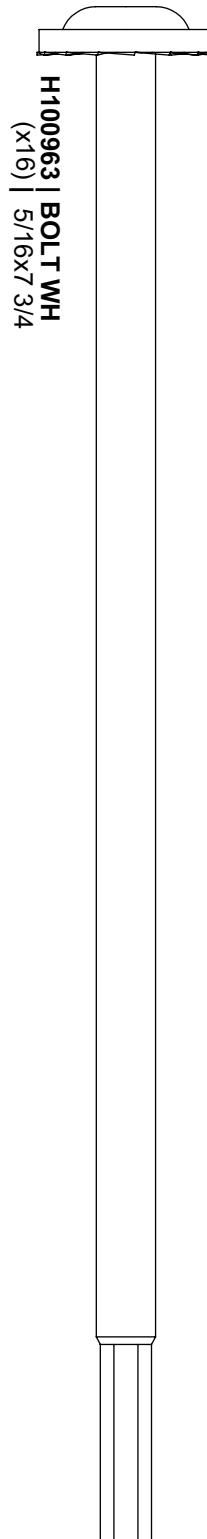

H100963 | BOLT WH
(x16) | 5/16x7 3/4

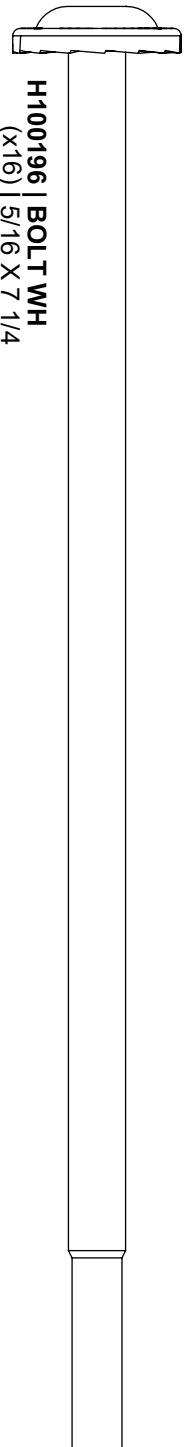


H100196 | BOLT WH
(x16) | 5/16 X 7 1/4

PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the parts and hardware.

WOOD PARTS:


- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. W01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

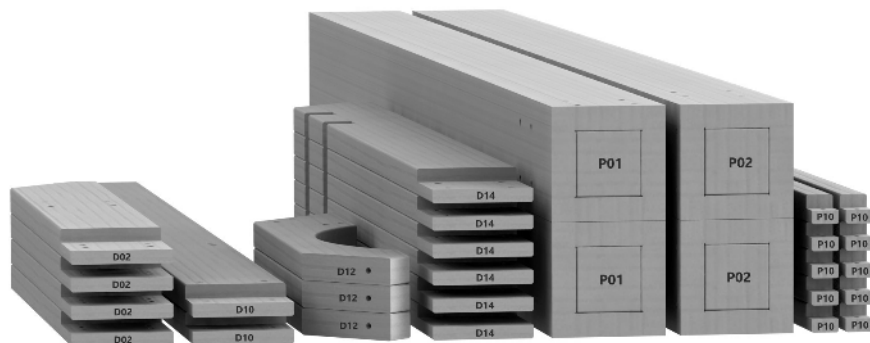

NOTE: CARTONS ARE NOT ORGANIZED BY BOARD OR STEP NUMBER.

METAL PARTS:

- Organize metal parts by the three-digit, alpha-numeric number stamped on each bag (ex. A01).
- If there are multiple parts with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the parts or on the end of the parts.
- Allow yourself plenty of room - the parts can take up a significant amount of space.

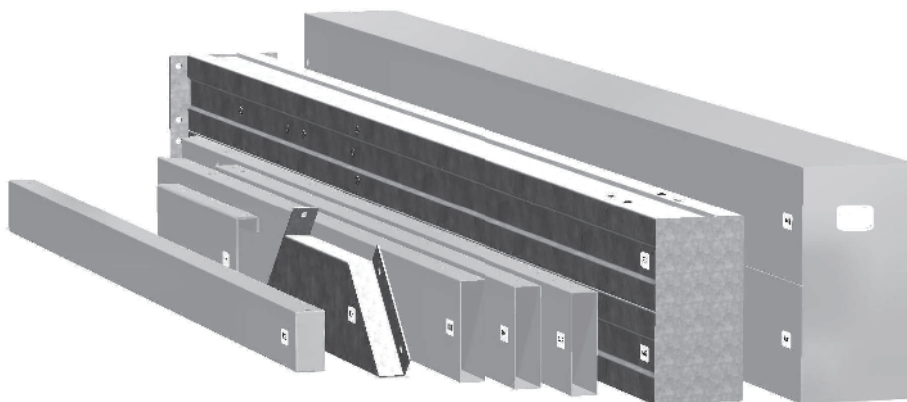



NOTE: CARTONS ARE NOT ORGANIZED BY PART OR STEP NUMBER.

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (e.g. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.



PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED

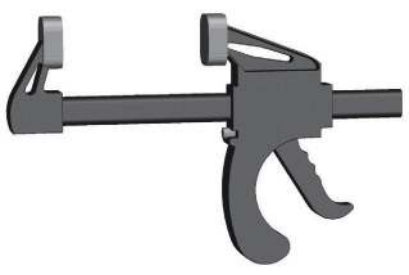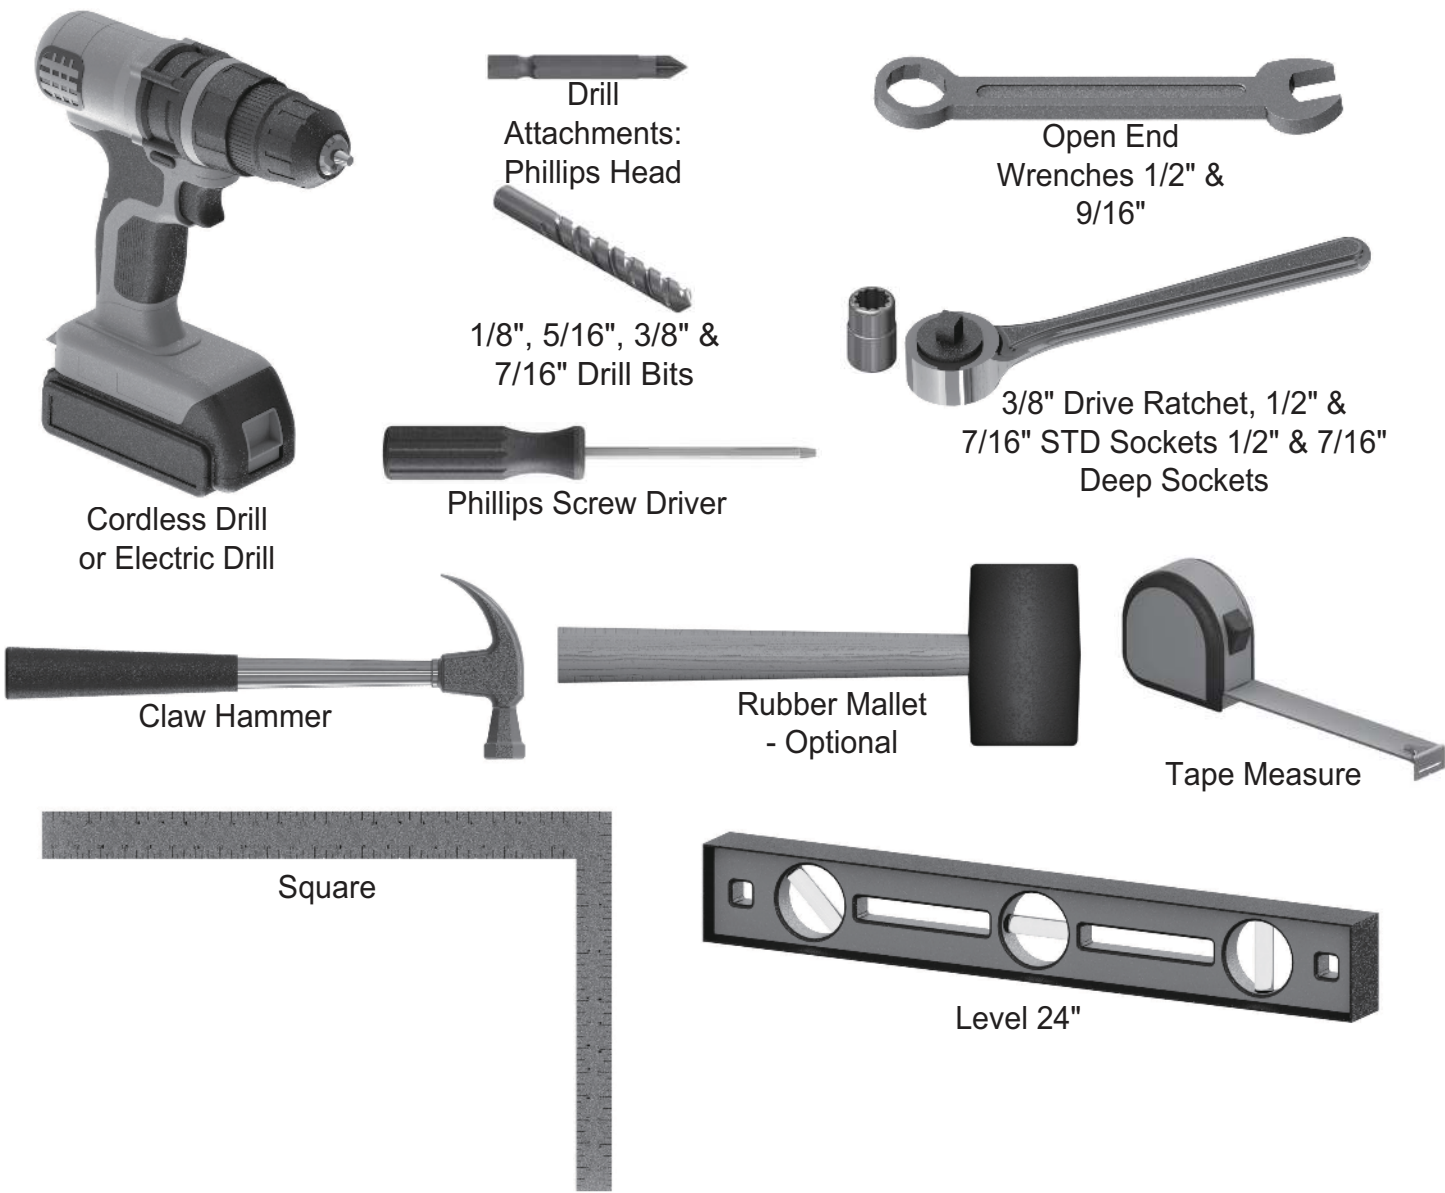

A6P00460 (x2) | QUICK RELEASE BAR CLAMP

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.


1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)



Scan for easy 3D instructions


Download the BILT app
before you begin



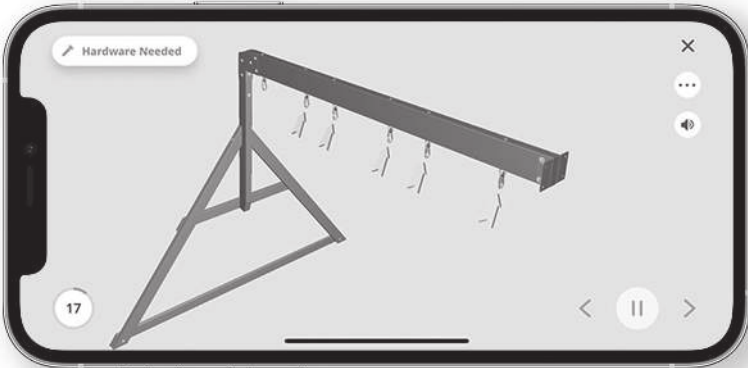


STEP 1 - 10FT BEAM AND POST ASSEMBLY


QTY.	PART NUMBER	DESCRIPTION
8	H100200	SCREW PFH 8x1 1/2 BLK

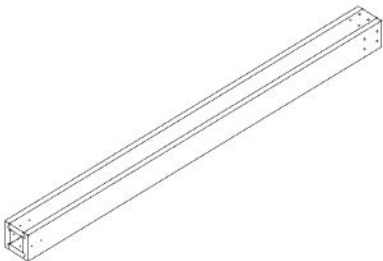

P01 POST - W2A03571
(x1) 6"x6"x89 1/2" (152x152x2274)

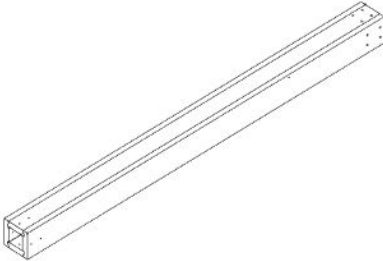


P02 POST - W2A03572
(x1) 6"x6"x89 1/2" (152x152x2274)

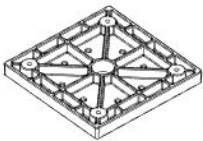


A6P00308 6x6 POST FOOT
(x2)

- FOR EASE OF ASSEMBLY, SAWHORSES ARE RECOMMENDED FOR POST AND BEAM ASSEMBLIES.
- ALIGN POST FOOT AND DRILL 1/8" PILOT HOLES FOR THE ATTACHMENT OF HARDWARE.
- REPEAT THIS FOR P02 POST.

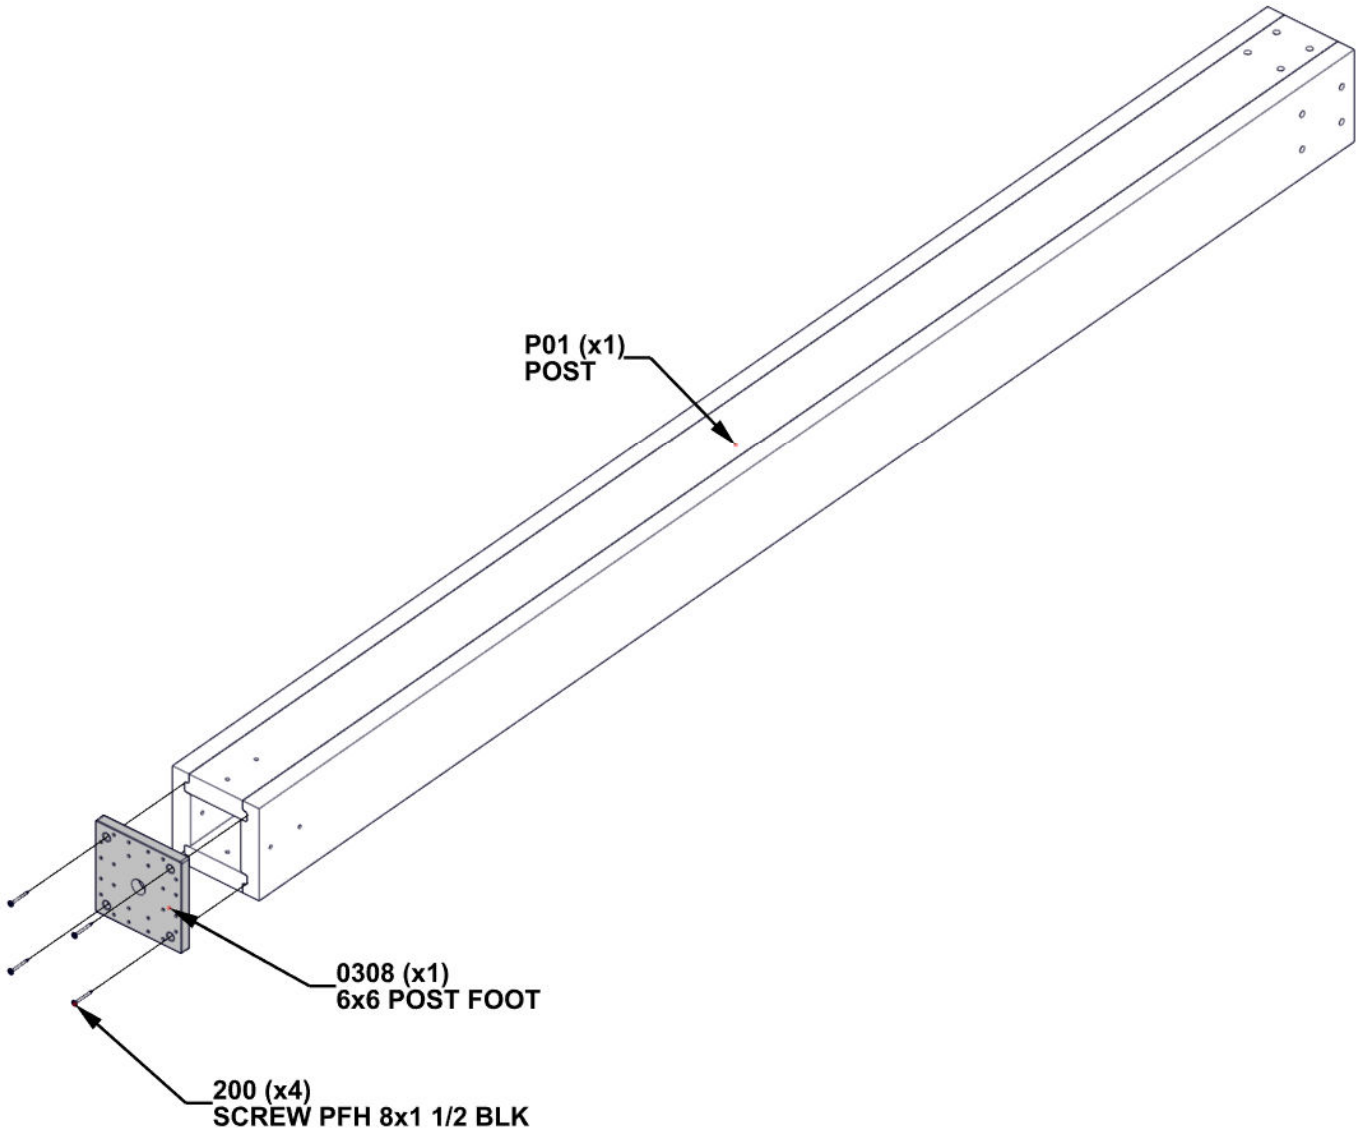

STEP 2 - 10FT BEAM AND POST ASSEMBLY



D01 BEAM - W4L16926
(x2) 1 7/16"x5 1/4"x30 15/16" (36x134x786)




D02 BEAM - W4L16927
(x1) 1 7/16"x5 1/4"x55 3/4" (36x134x1416)

QTY.	PART NUMBER	DESCRIPTION
8	H100198	WASHER LOCK EXT 8x19
8	H100195	BOLT WH 5/16x2 3/4 BLK
8	H100379	TNUT-5/16" BLK




CO1 ANGLE BRACE - W4L23582
(x2) 1 7/16"x4 3/4"x35 1/8" (36x120x893)

- INSTALL T-NUTS FIRST.
- HAND TIGHTEN ONLY.

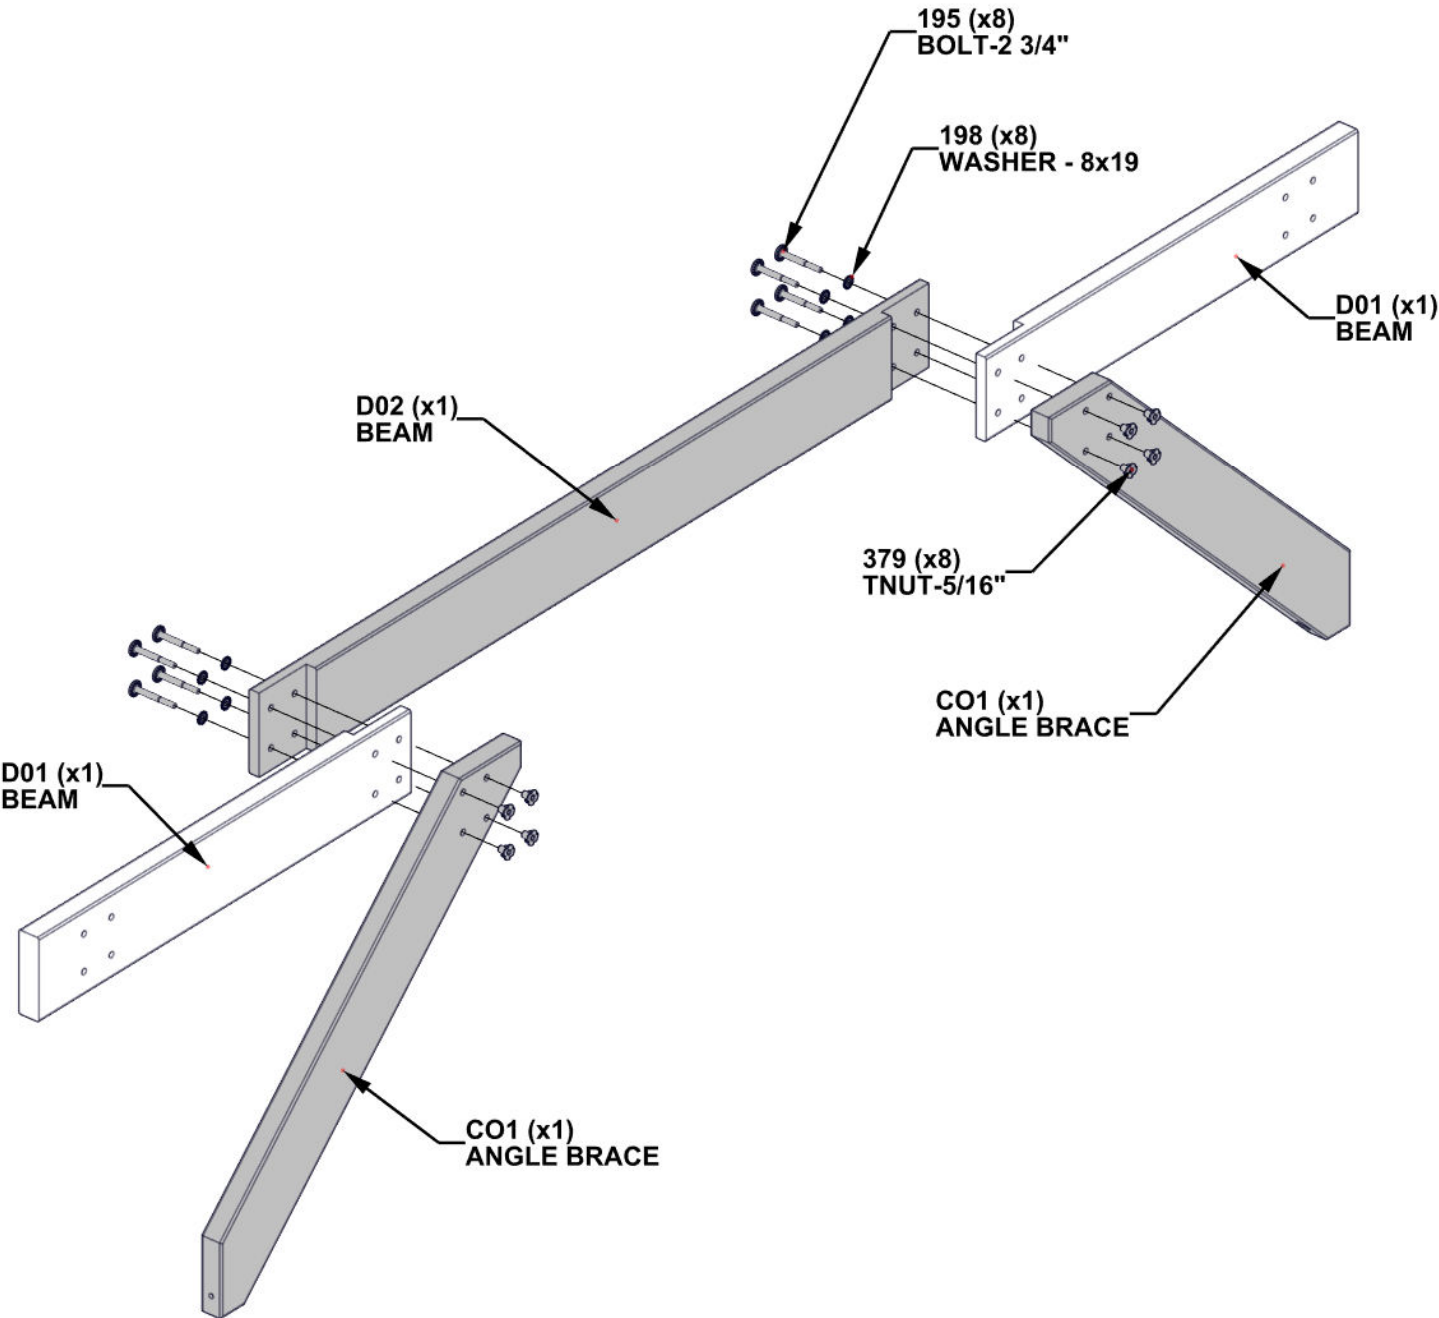


STEP 3 - 10FT BEAM AND POST ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
8	H100198	WASHER LOCK EXT 8x19
8	H100196	BOLT WH 5/16x7 1/4 BLK
8	H100379	T-NUT 5/16 BLK
2	H100405	WASHER LOCK EXT 6x15
2	H100792	LAG SCREW WH 1/4x3 BLK

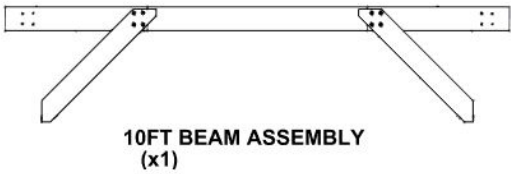

- INSTALL T-NUTS FIRST.
- TIGHTEN ALL HARDWARE.
- INSERT BOLTS BEFORE LAG SCREWS.
- TO AVOID SPLITTING, MAKE SURE LAG SCREWS GO INTO PILOT HOLES.

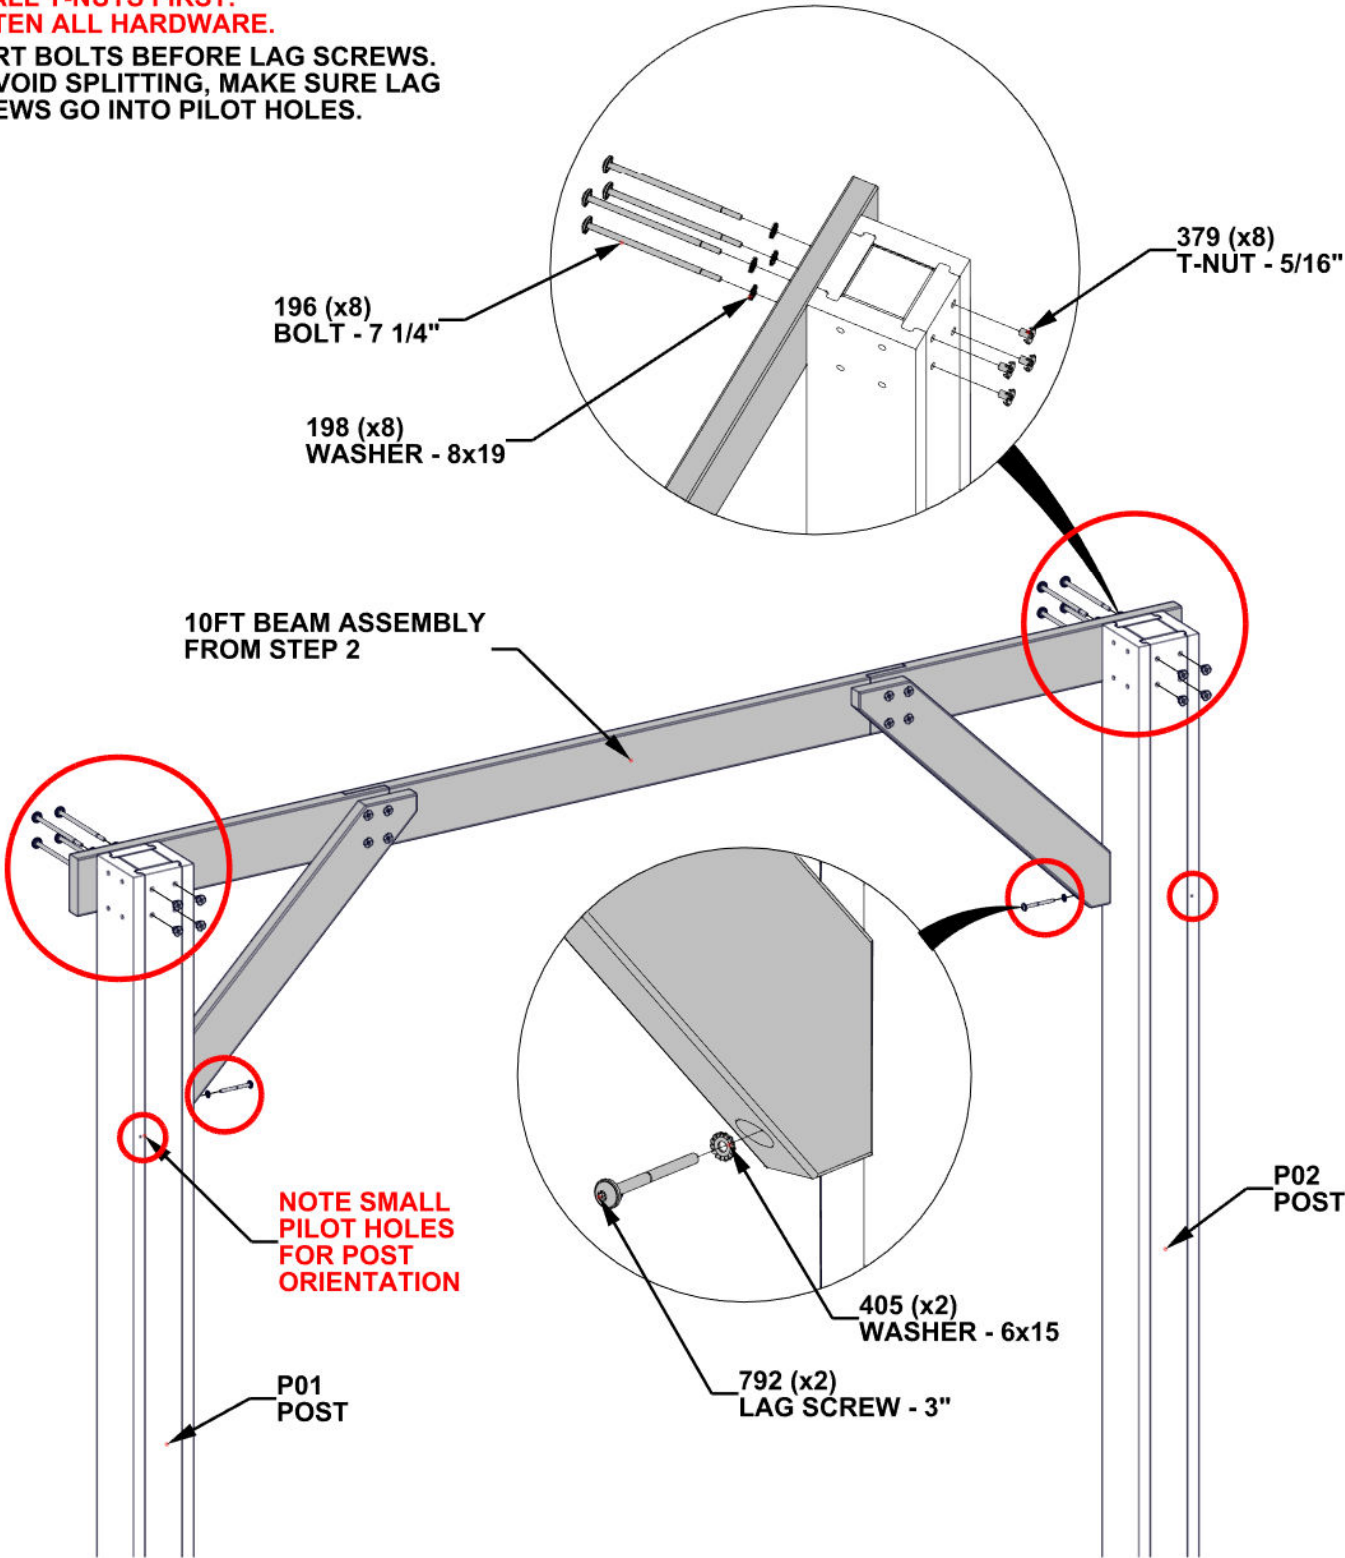

**REPEAT STEP 1 THROUGH STEP 3
TO BUILD SECOND 10FT BEAM AND POST ASSEMBLY**

STEP 4 - 14FT BEAM ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
8	H100379	T-NUT 5/16 BLK
8	H100198	WASHER LOCK EXT 8x19
8	H100378	BOLT WH 5/16x1 3/4 BLK




G02 BEAM - W4L16924
(x1) 15/16"x5 1/4"x47 5/8" (24x134x1210)



G03 BEAM - W4L16925
(x2) 15/16"x5 1/4"x77" (24x134x1956)

- INSTALL T-NUTS FIRST.

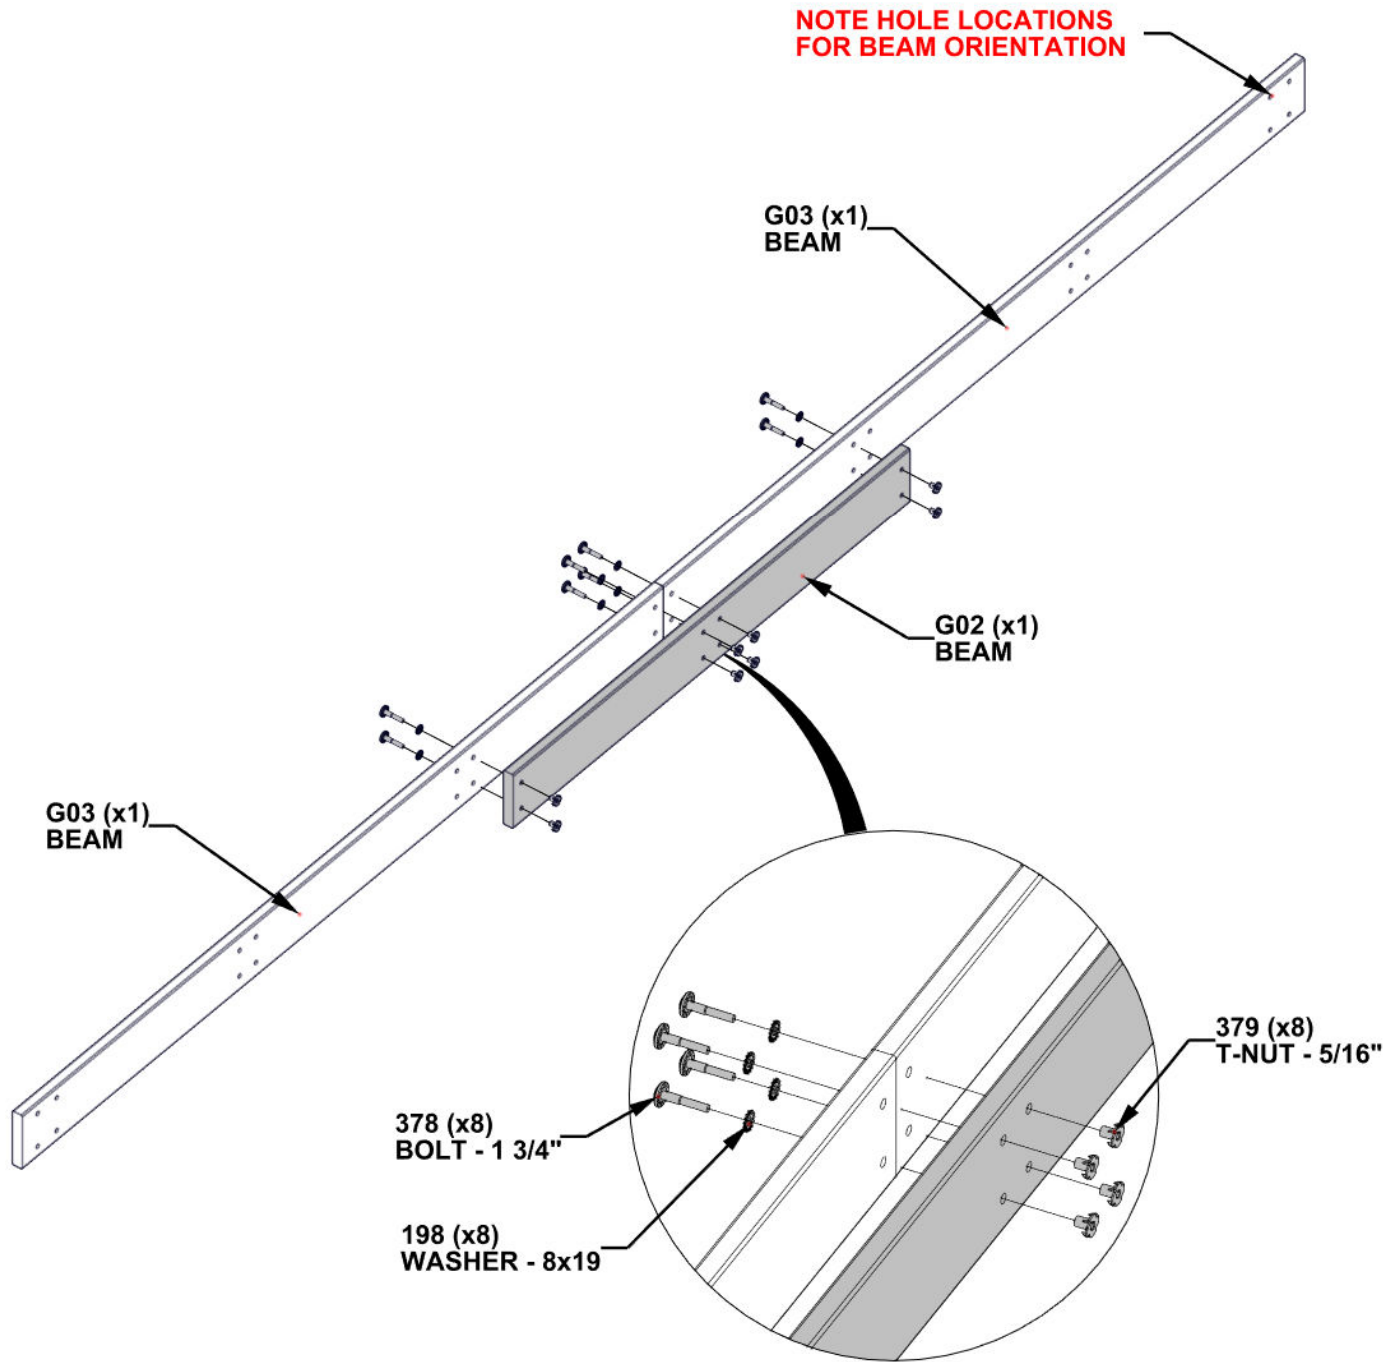


STEP 5 - 14FT BEAM ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
4	H100198	WASHER LOCK EXT 8x19
4	H100378	BOLT WH 5/16x1 3/4 BLK
4	H100379	T-NUT 5/16 BLK



G01 BEAM - W4L16923
(x2) 15/16"x5 1/4"x53 3/16" (24x134x1351)

- INSTALL T-NUTS FIRST.

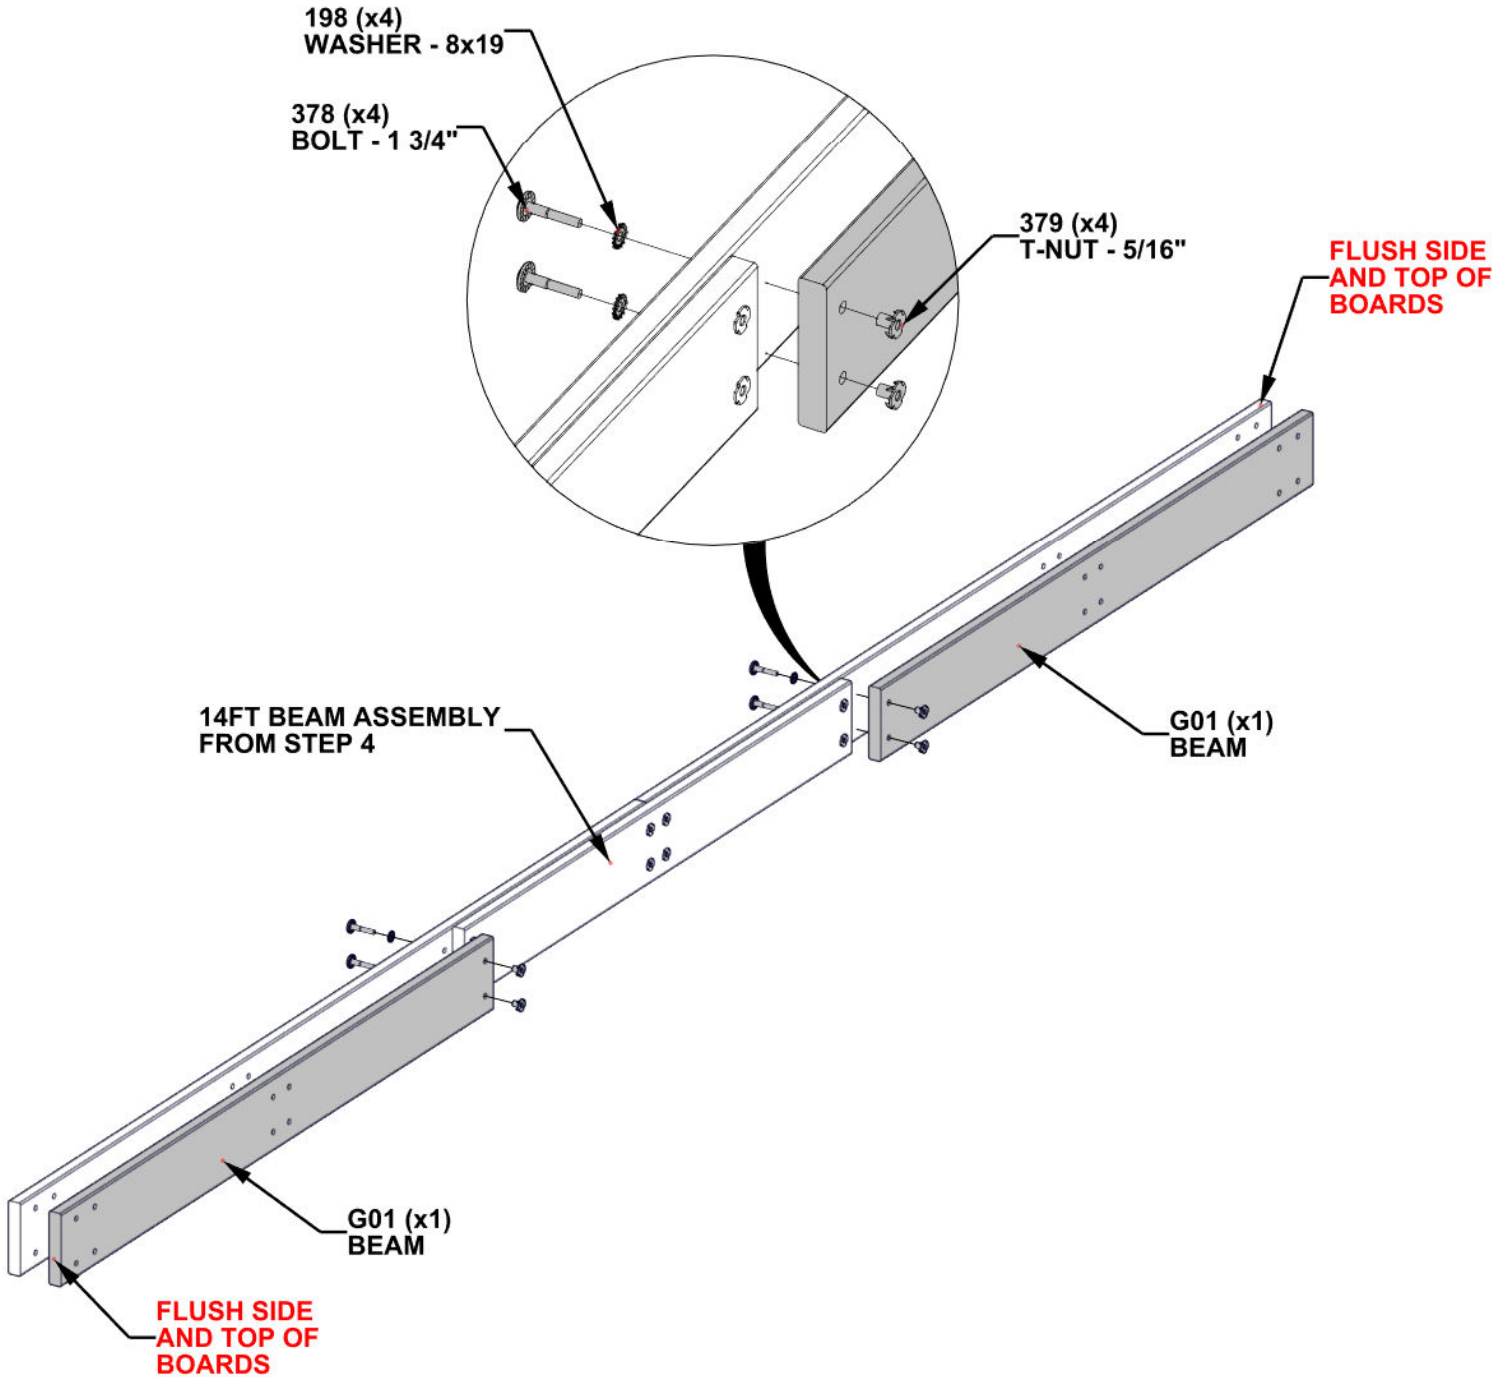

STEP 6 - 14FT BEAM ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
8	H100198	WASHER LOCK EXT 8x19
8	H100484	BOLT WH 5/16x3 1/4 BLK
8	H100379	T-NUT 5/16 BLK




CO1 ANGLE BRACE - W4L23582
(x1) 1 7/16"X4 3/4"X35 1/8" (36x120x893)





CO2 ANGLE BRACE/TAG - W2A05423
(x1) 1 7/16"X4 3/4"X35 1/8" (36x120x893)

- TWO "C01" PARTS WILL USE ON OTHER SIDE.
- INSTALL T-NUTS FIRST.
- HAND TIGHTEN ONLY.

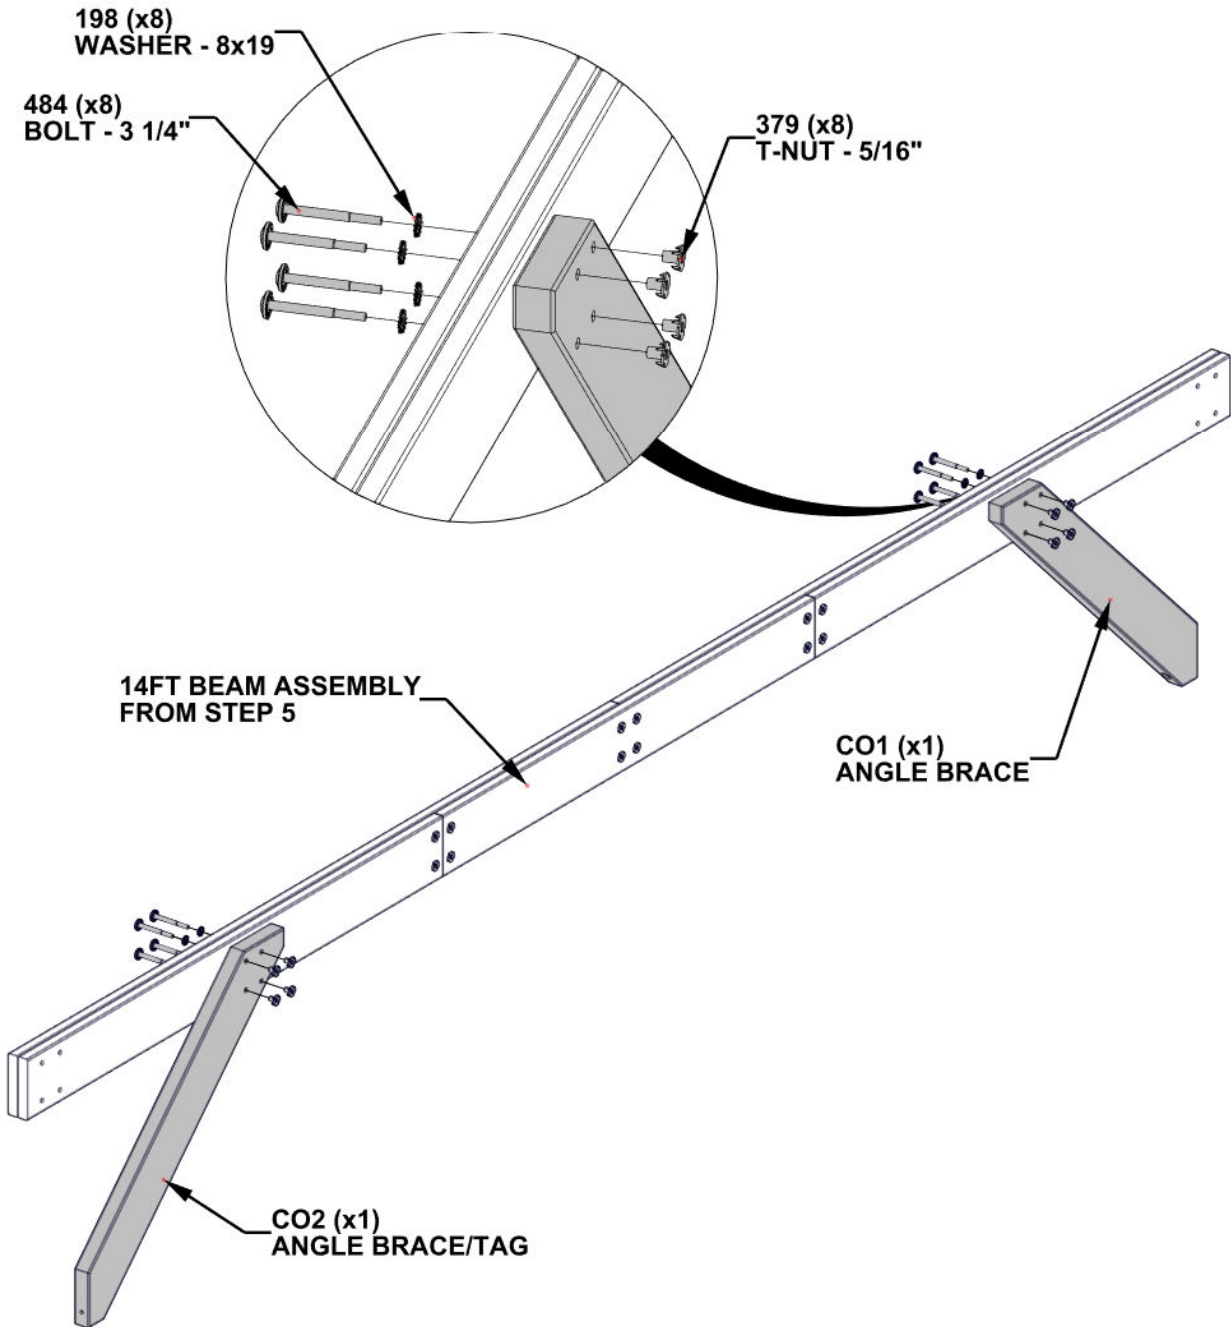


STEP 7 - 14FT BEAM ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
8	H100379	T-NUT 5/16 BLK
8	H100198	WASHER LOCK EXT 8x19
8	H100963	BOLT WH 5/16x7 3/4 BLK
2	H100405	WASHER LOCK EXT 6x15
2	H100792	LAG SCREW WH 1/4x3 BLK

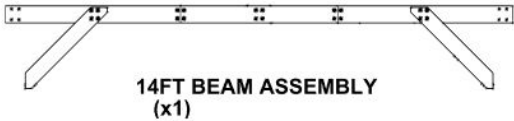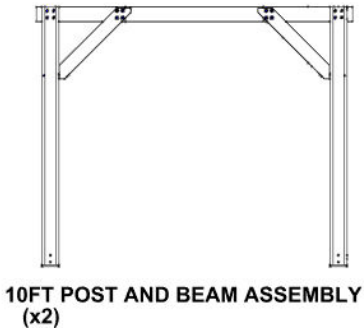


- **INSTALL T-NUTS FIRST.**
- **HAND TIGHTEN ONLY.**
- **3 PEOPLE ARE HELPFUL FOR THIS STEP.**
- **MOVE THE POST ASSEMBLIES TO THEIR FINAL LOCATION WITH SOMEONE HOLDING EACH ASSEMBLY UPRIGHT.**
- **USING A THIRD PERSON, CONNECT THE 14FT BEAM ASSEMBLY TO THE POSTS TO MAKE THE GAZEBO FRAME.**

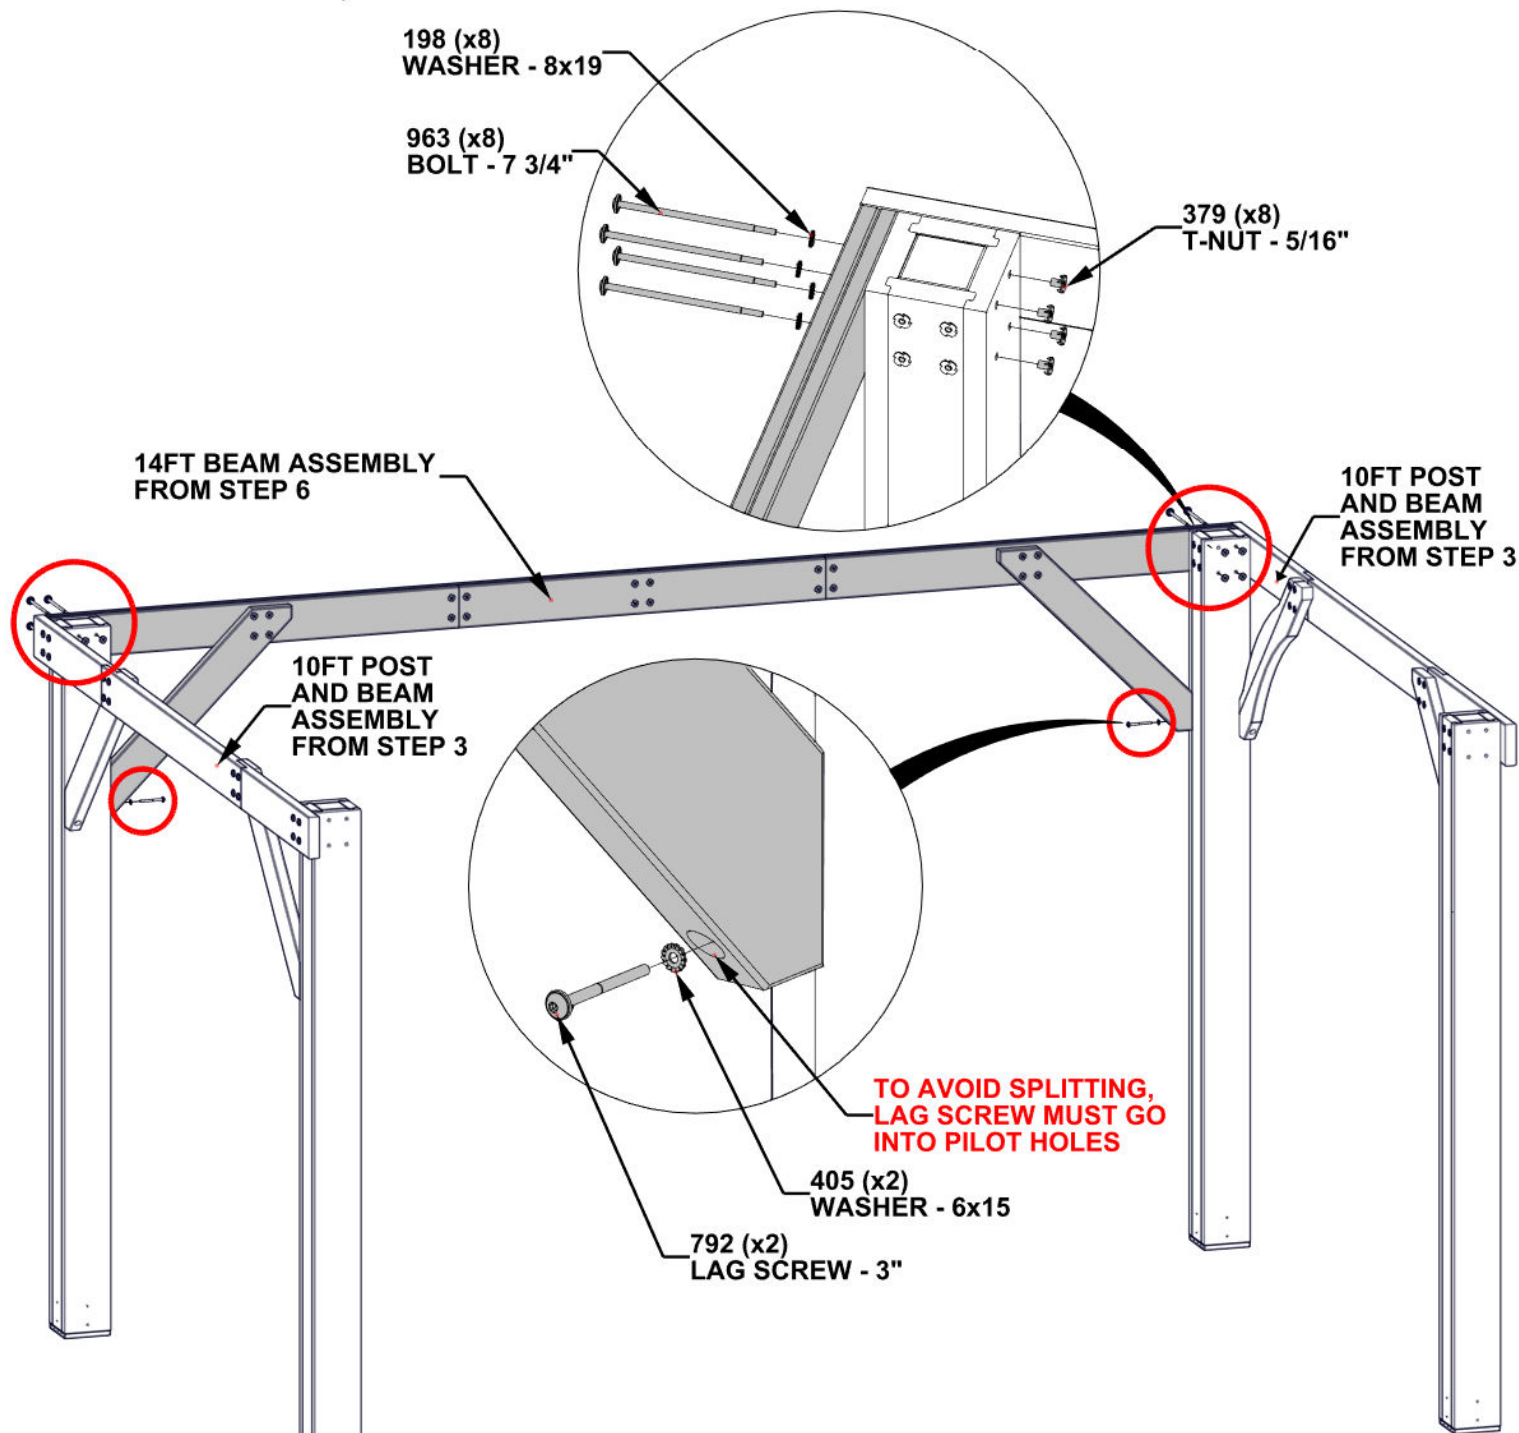


**REPEAT STEP 4 THROUGH STEP 7
FOR OPPOSITE SIDE 14FT BEAM ASSEMBLY**

STEP 8 - SQUARE ASSEMBLY

**CRITICAL: SQUARE UNIT BEFORE PROCEEDING TO NEXT STEPS.
ONCE SQUARE, TIGHTEN ALL HARDWARE.**

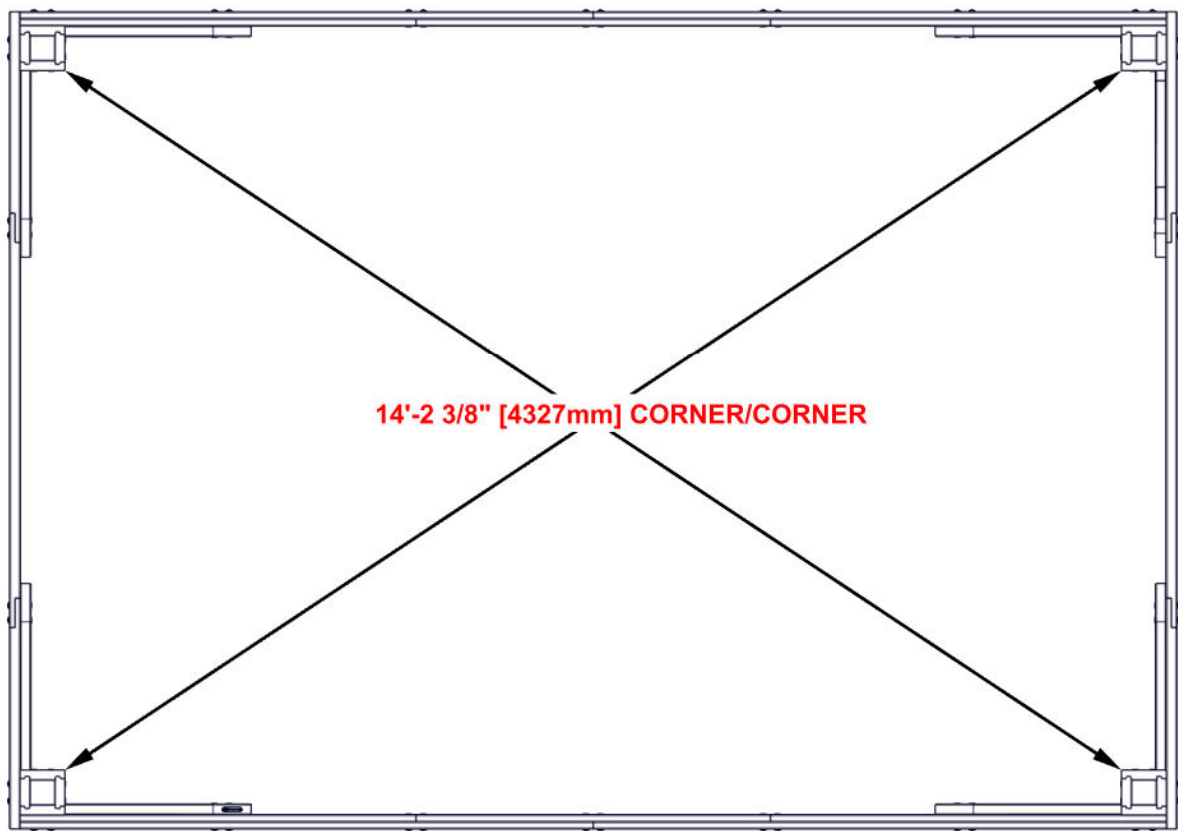


STEP 9 - ROOF SUPPORT ASSEMBLY

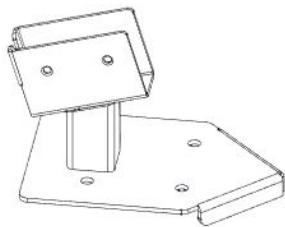


A4M01234 POST CLIP ASSY
(x4)

QTY.	PART NUMBER	DESCRIPTION
16	H100460	LAG SCREW WH 1/4x1 BLK

- DO NOT OVERTIGHTEN.

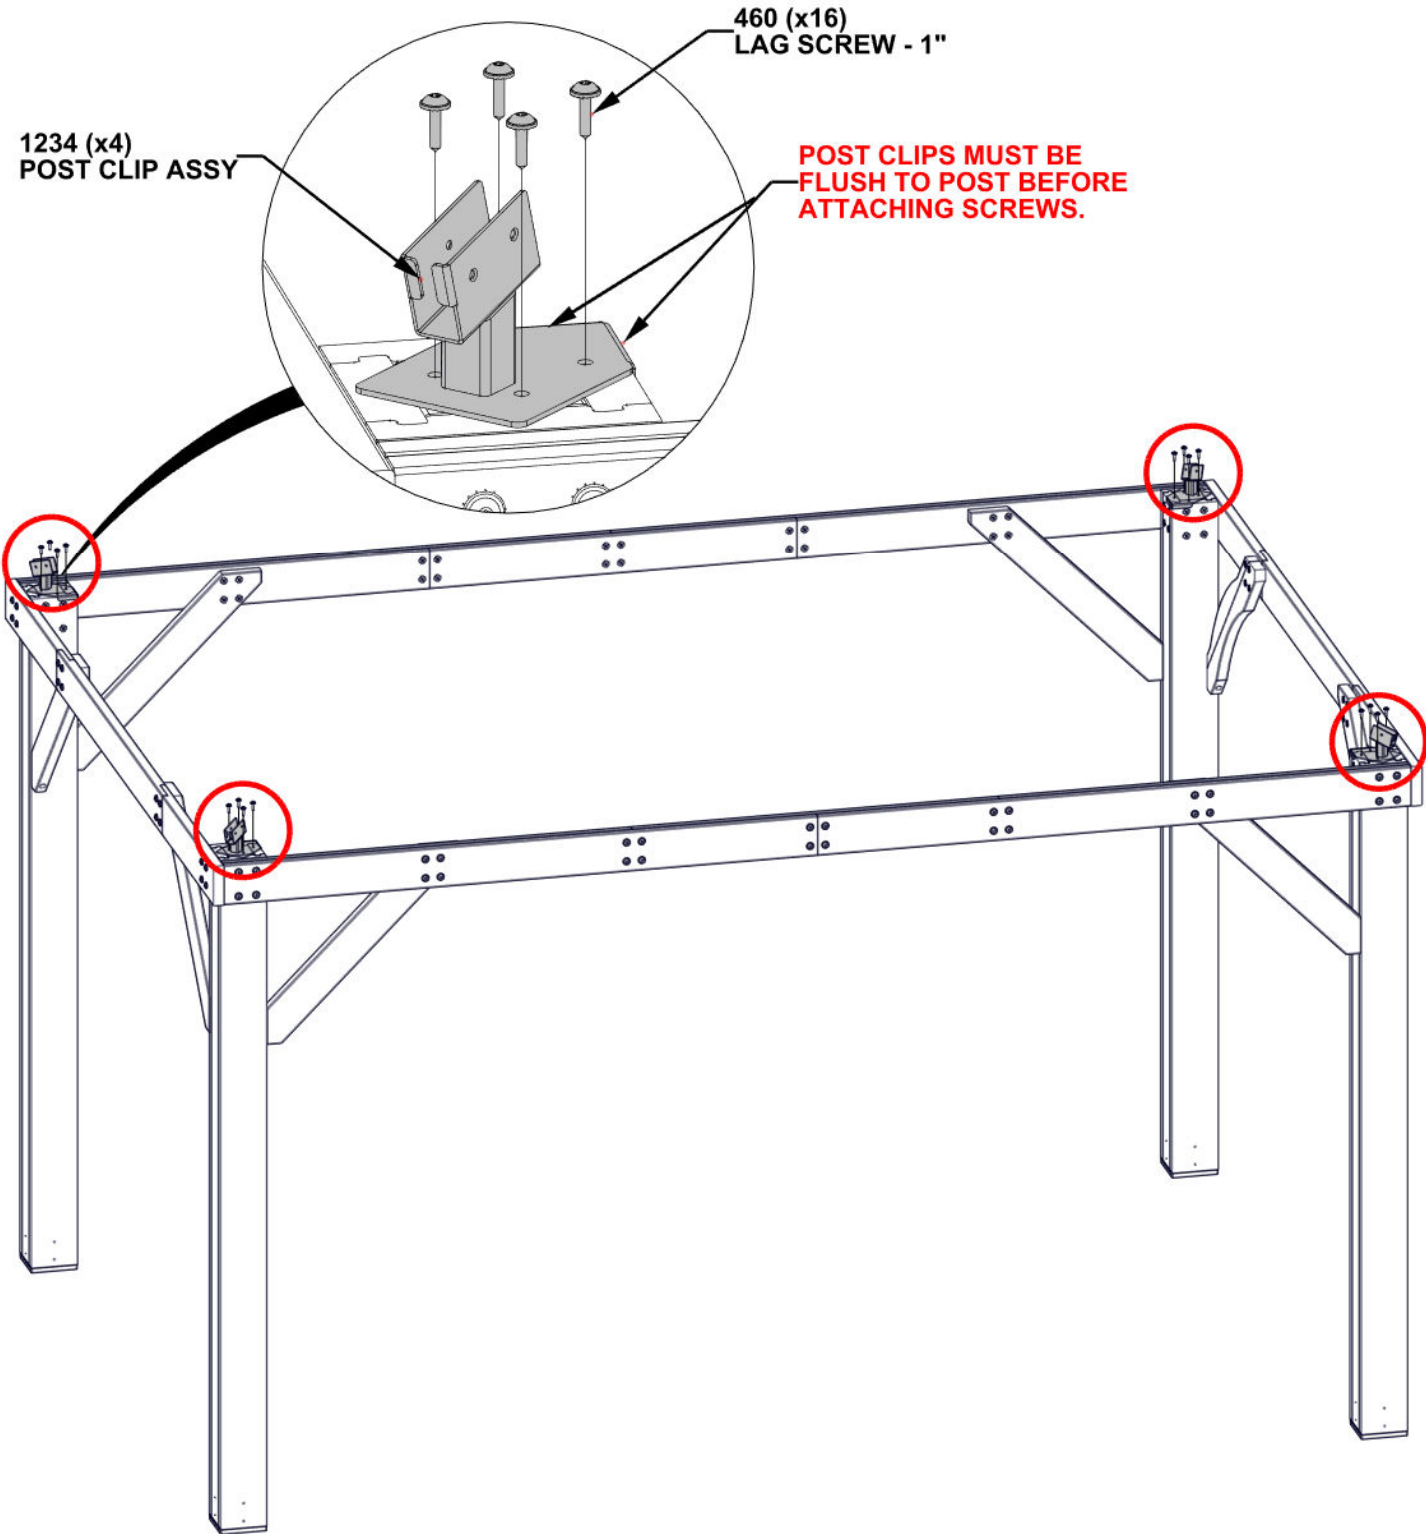

STEP 10 - ROOF SUPPORT ASSEMBLY

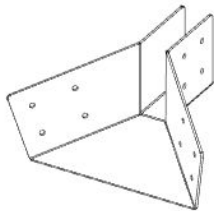


A4M01184 PANEL SUPPORT BRACKET
(x2)

QTY.	PART NUMBER	DESCRIPTION
8	H100385	SCREW PFH 8x1 BLK
2	H100379	TNUT-5/16" BLK



H18 ROOF SUPPORT - W4L16315
(x1) 15/16"x3 3/8"x48" (24x86x1219)

- INSERT T-NUTS FIRST.
- CORRECT T-NUT PLACEMENT IS CRITICAL IN FUTURE STEPS.
- ALIGN PILOT HOLES.

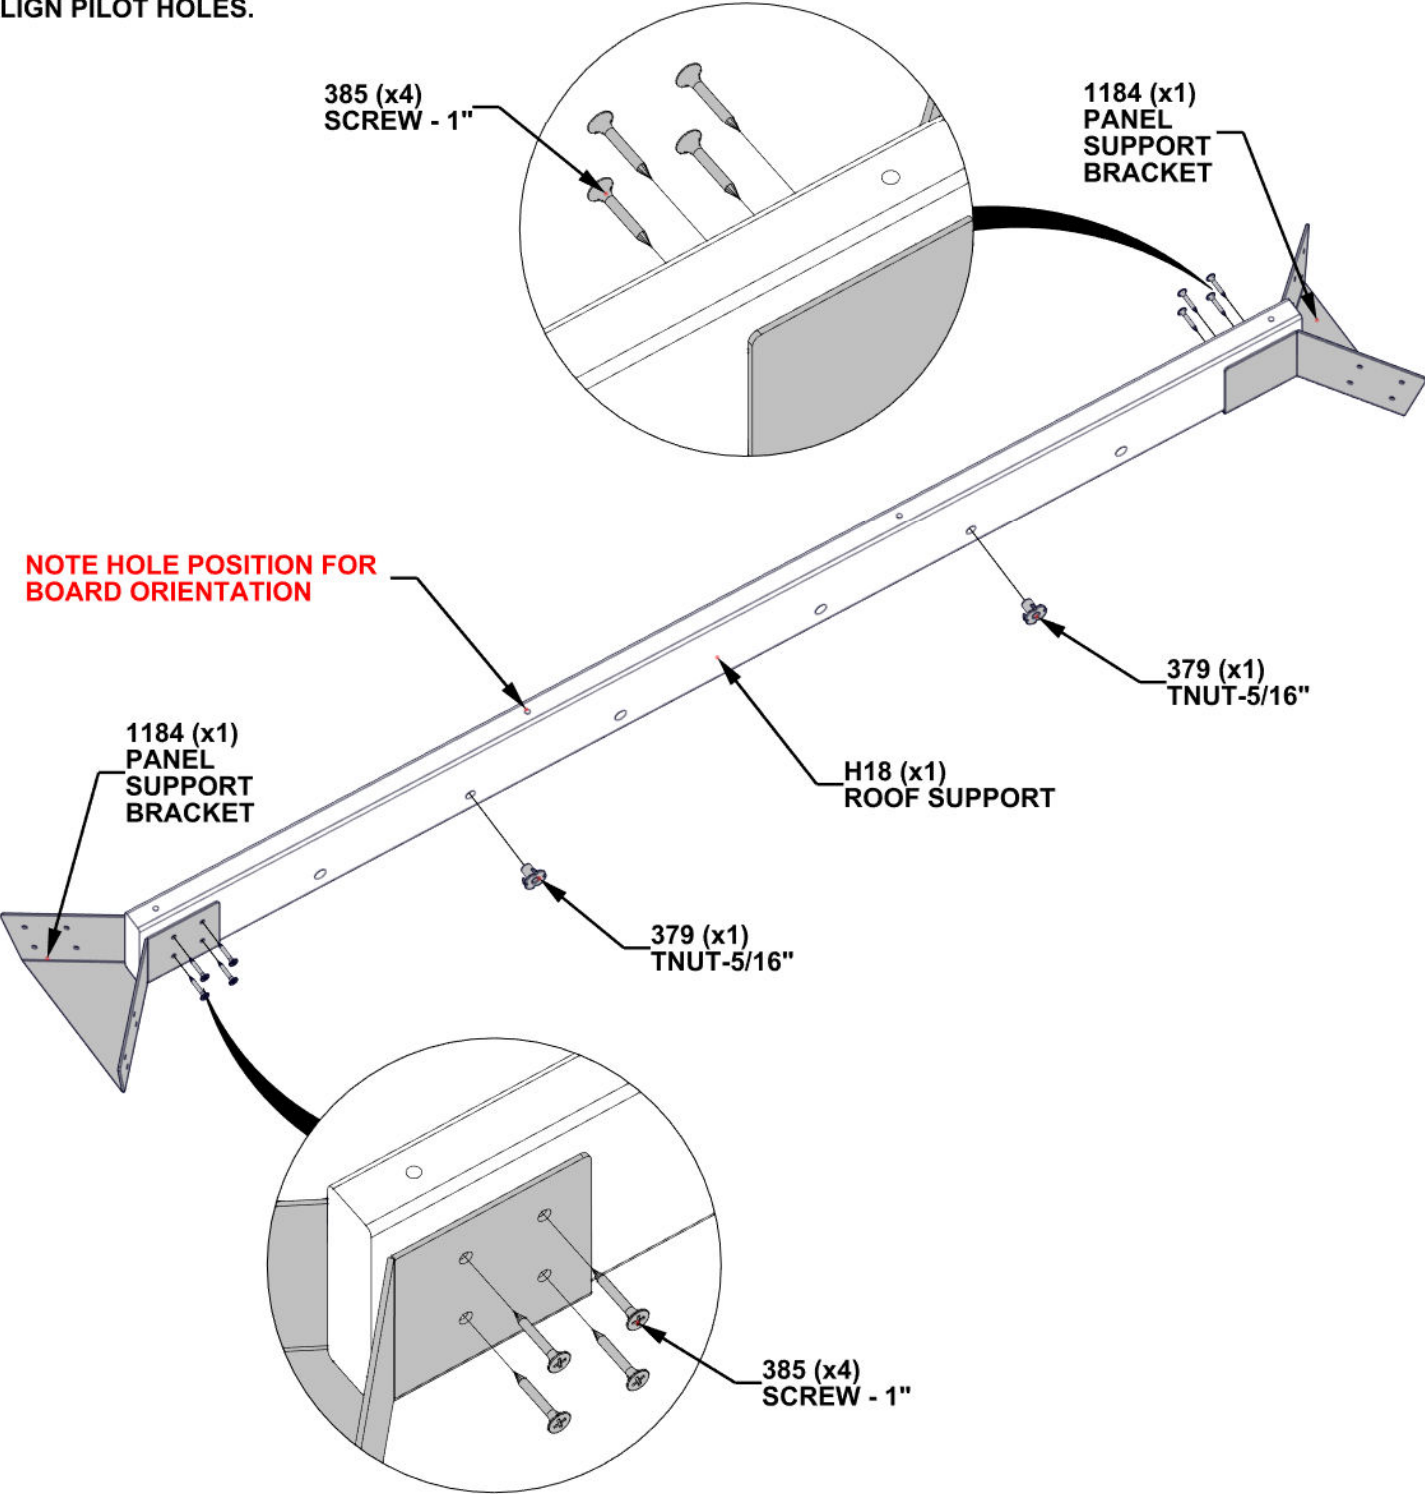


STEP 11 - ROOF SUPPORT ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
16	H100385	SCREW PFH 8x1 BLK
4	H100379	T-NUT 5/16 BLK




H19 ROOF SUPPORT - W4L16928
(x4) 15/16"x3 3/8"x75 3/16" (24x86x1909)

- INSERT T-NUTS FIRST.
- CORRECT T-NUT PLACEMENT IS CRITICAL IN FUTURE STEPS.

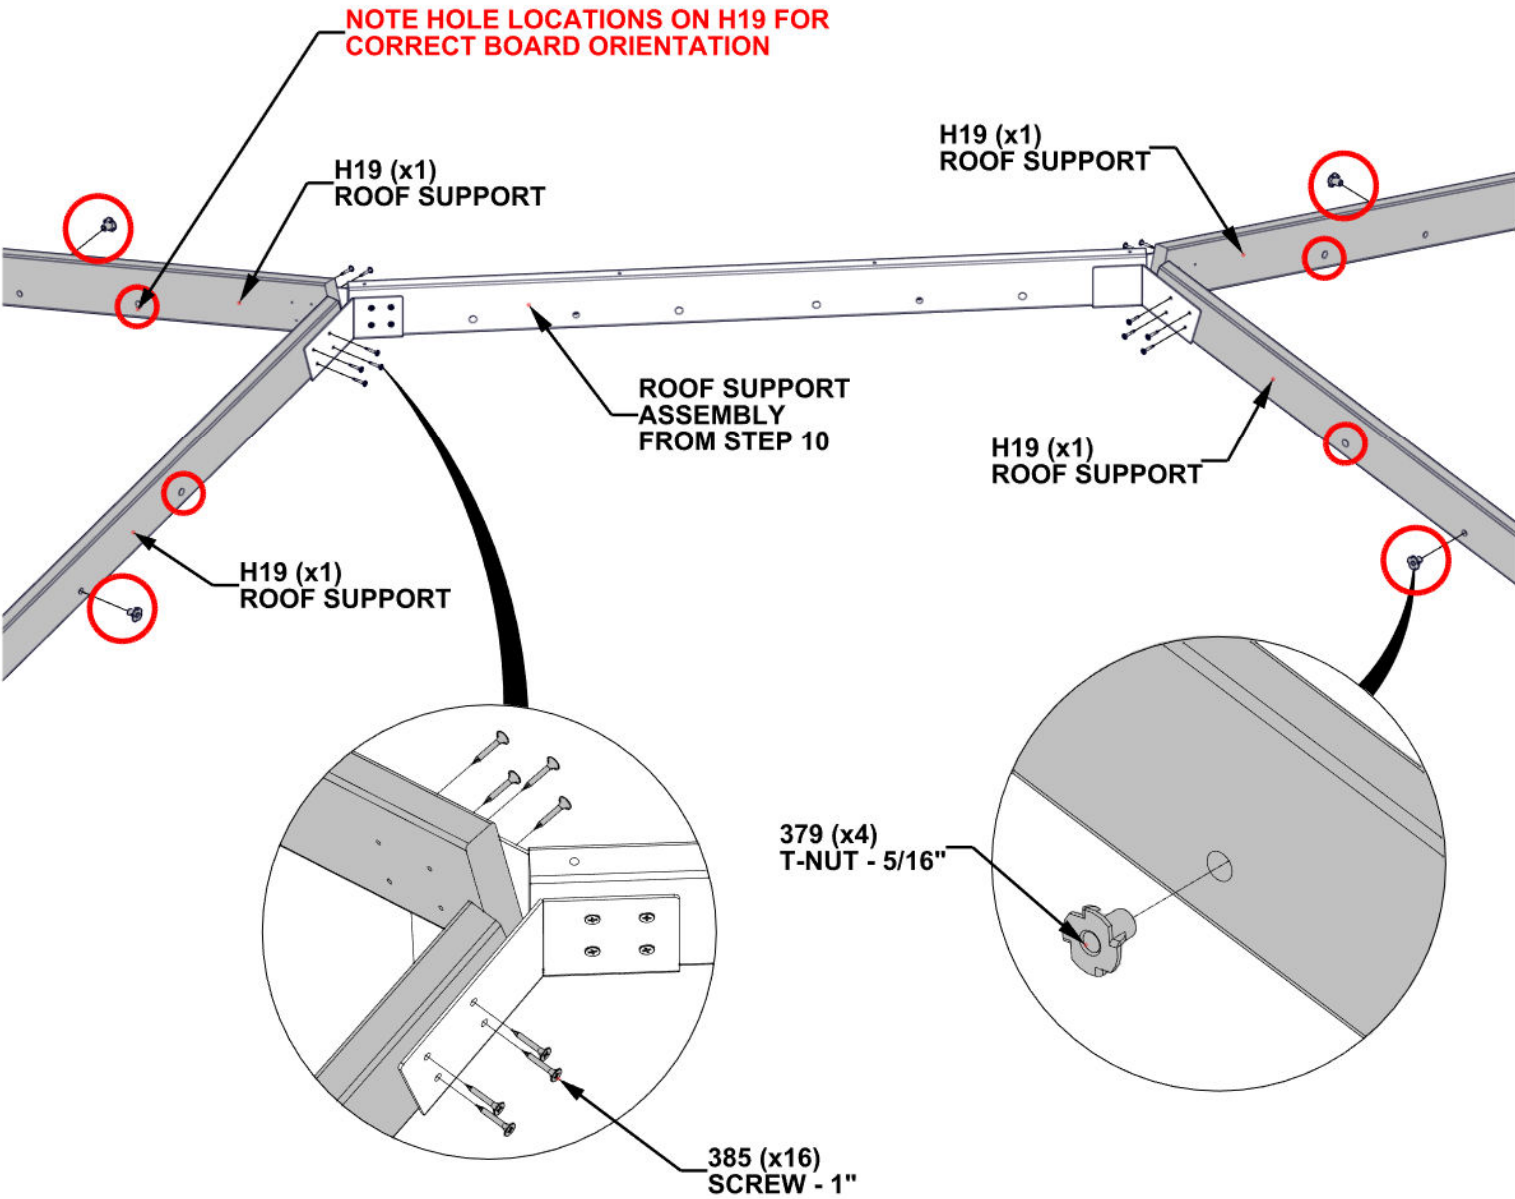

STEP 12 - ROOF SUPPORT ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
4	H101034	WEATHER PROOFING WASHER
4	H100792	LAG SCREW WH 1/4x3 BLK

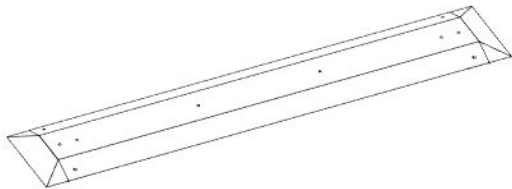


A4M07228 RIDGE PEAK CAP
(x1)




A4M01205 METAL SPACER
(x4)

- GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.
- REMOVE PROTECTIVE FILM BEFORE ASSEMBLY.
- ALIGN RIDGE PEAK CAP AND METAL SPACER WITH PILOT HOLES BEFORE INSERTING LAG SCREWS.

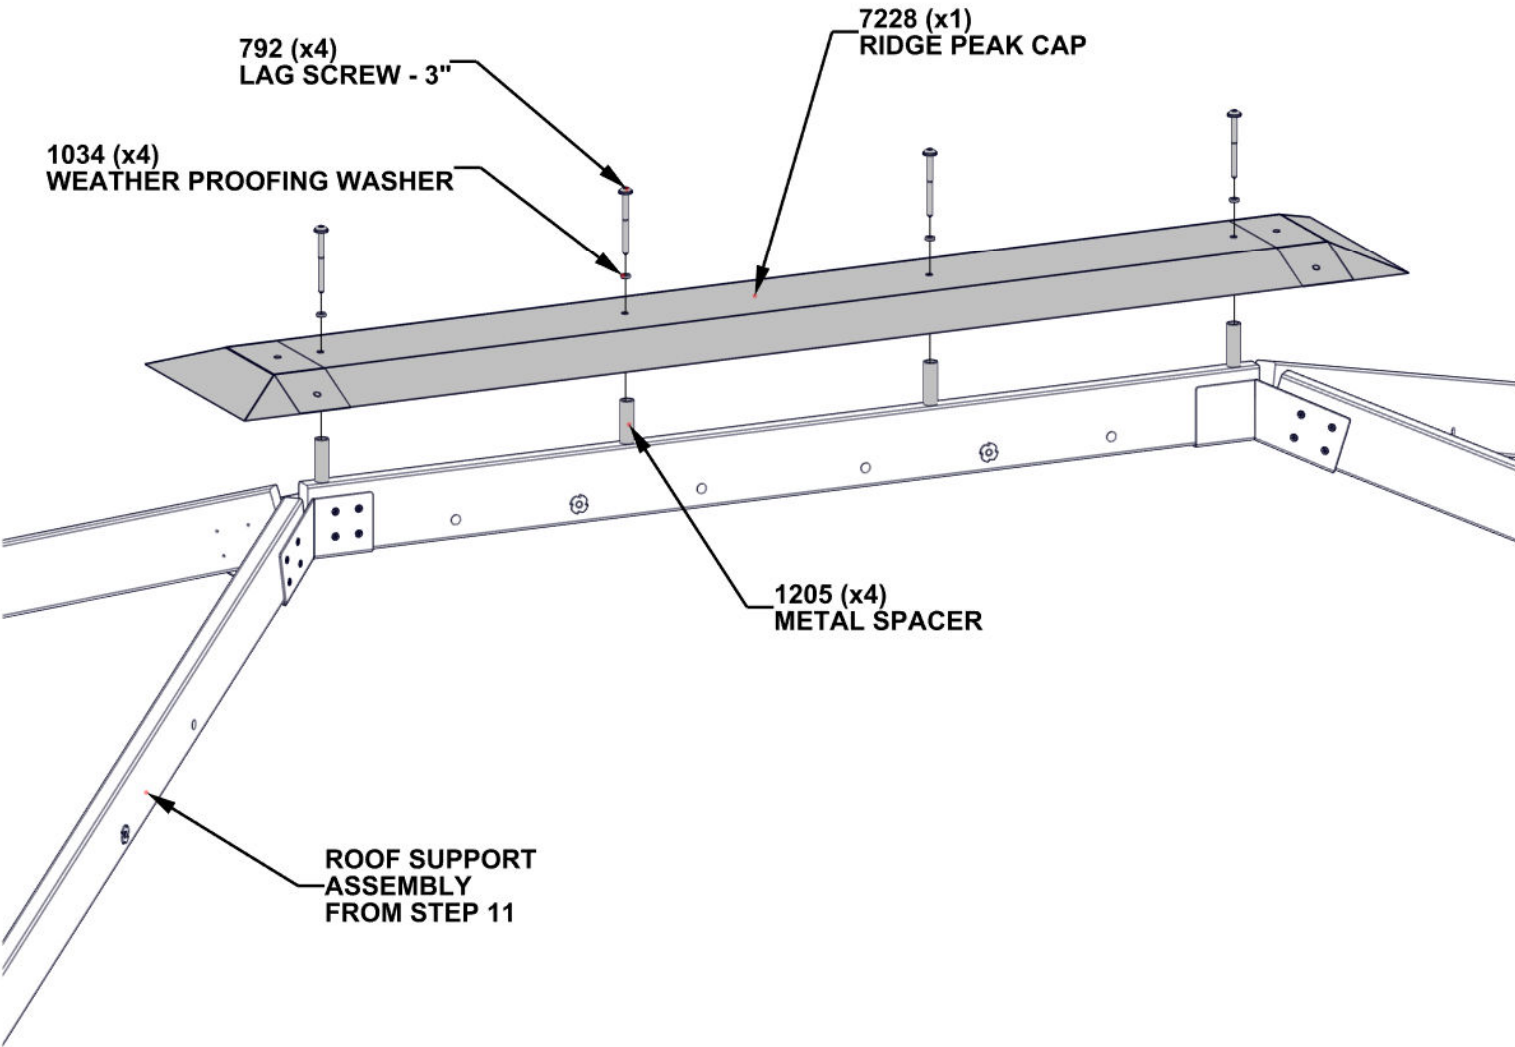


STEP 13 - ROOF SUPPORT ASSEMBLY

- 3 PEOPLE ARE RECOMMENDED FOR THIS STEP.
- POSITION 1 PERSON ON A LADDER IN THE CENTER.
- LIFT ROOF SUPPORT UP AND OVER BEAMS AND INSERT INTO CORNER POST CLIPS.

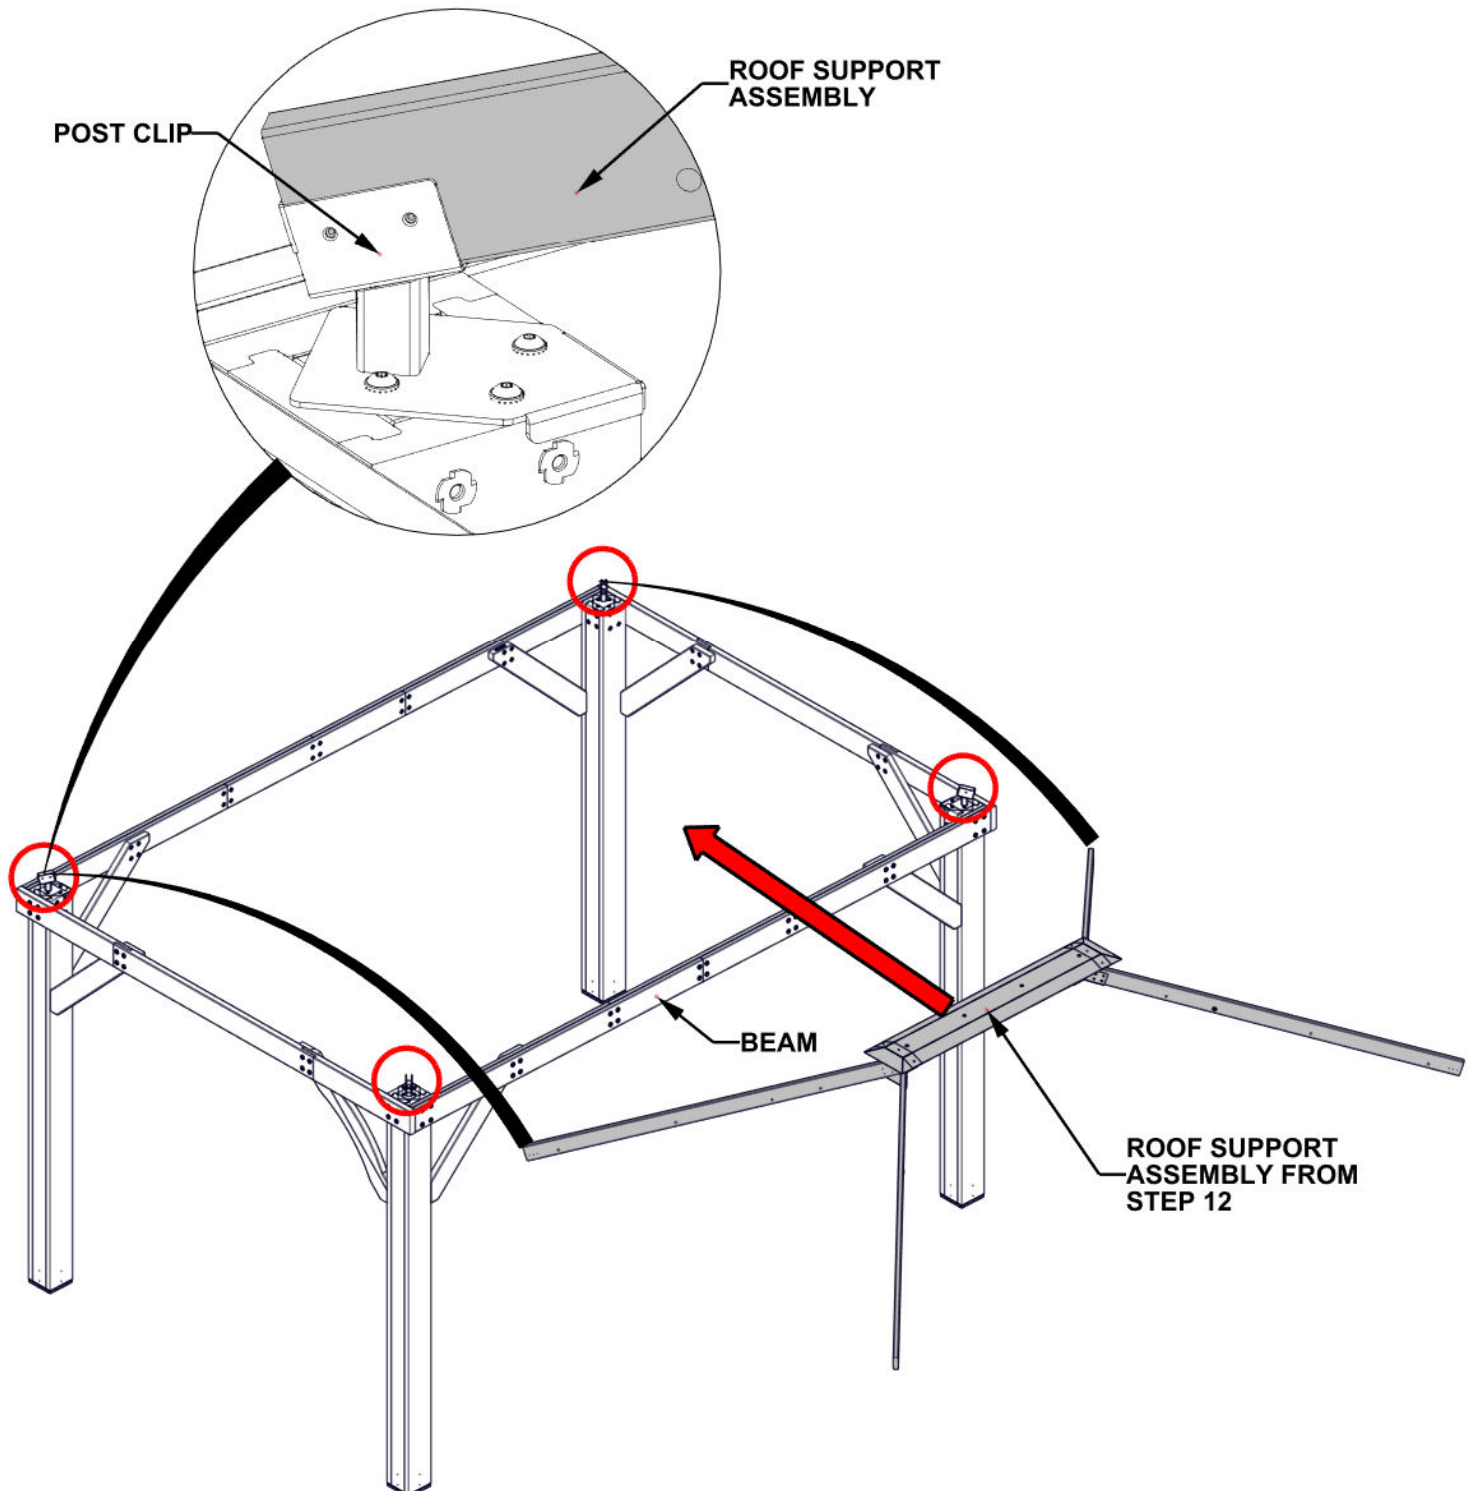


STEP 14 - ROOF SUPPORT ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
12	H100385	SCREW PFH 8 X 1 BLK

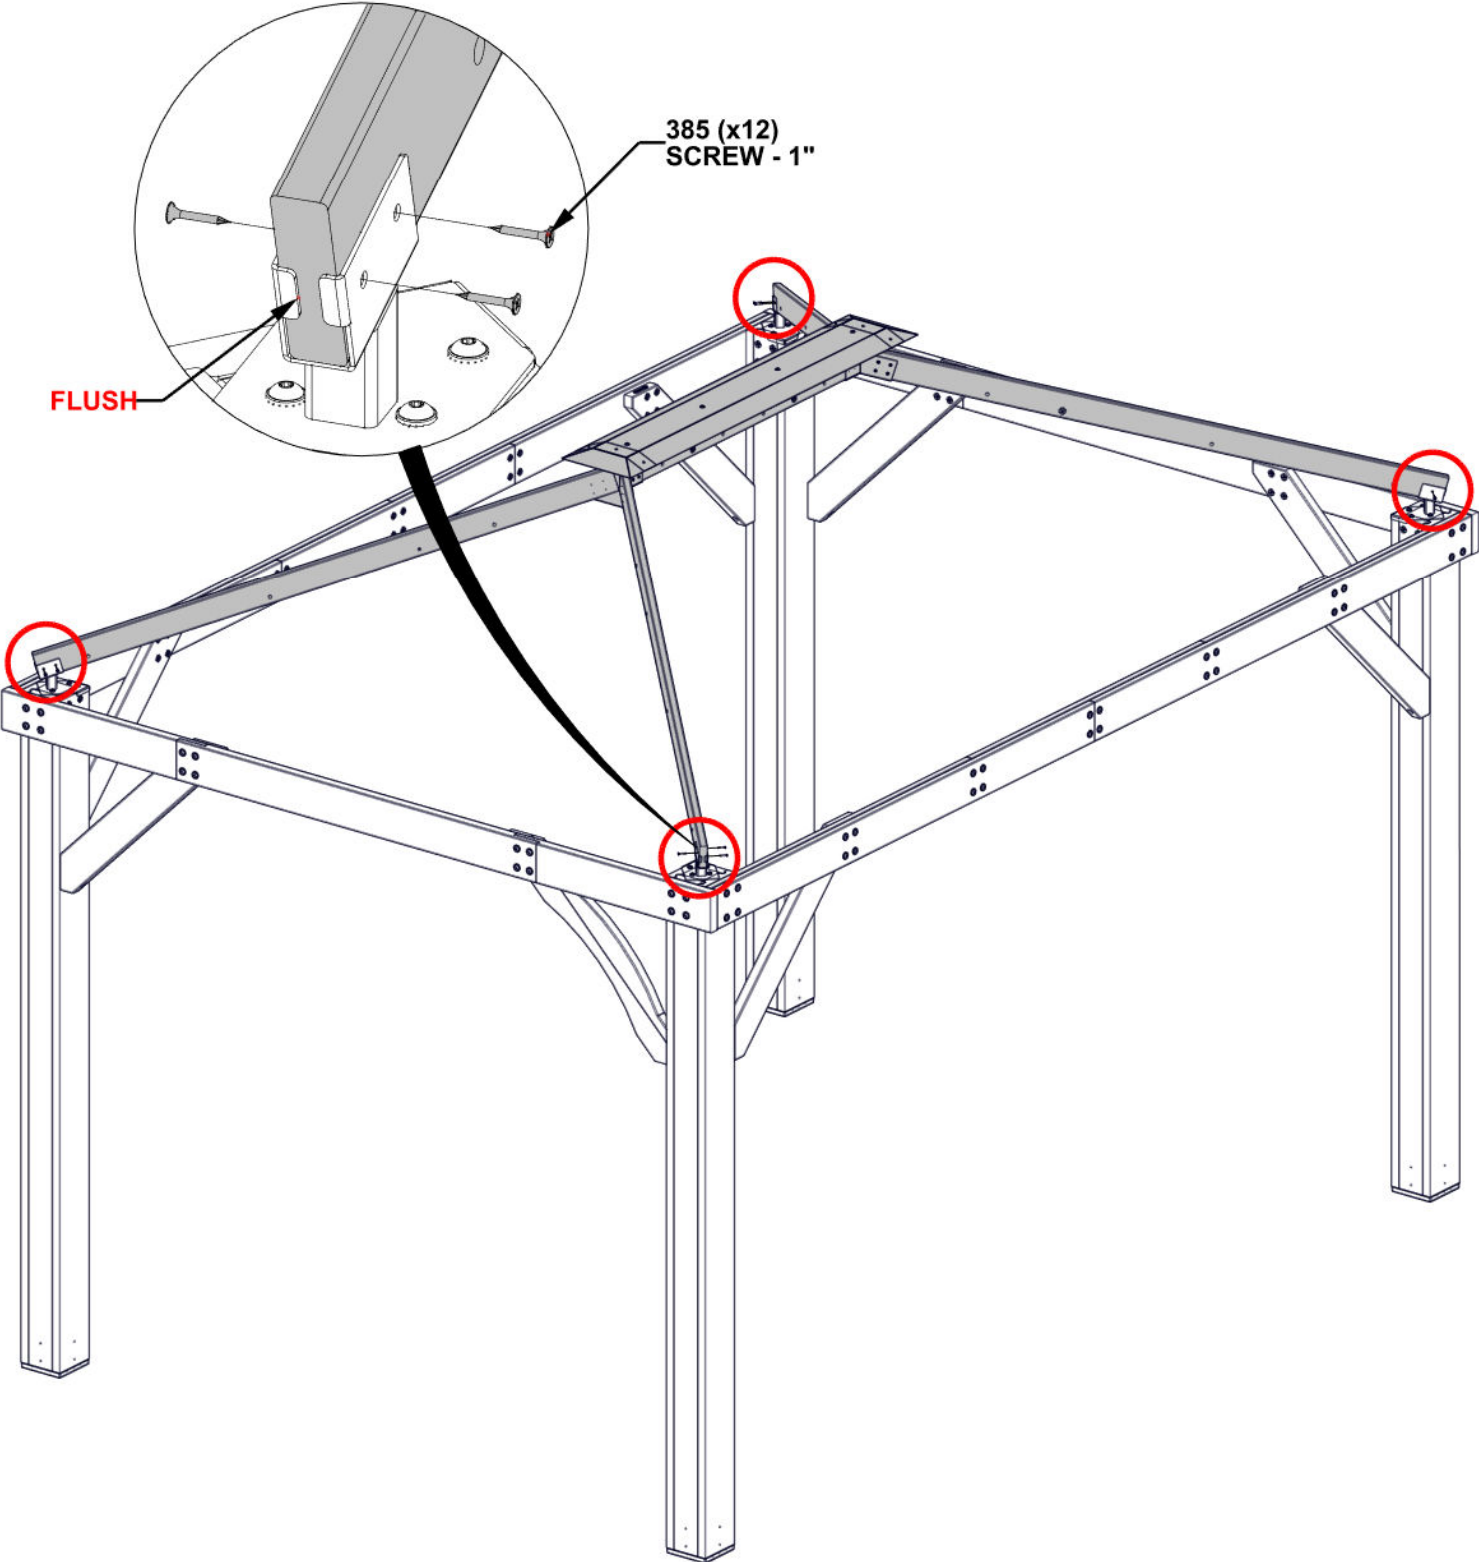


STEP 15 - 10FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
4	H100398	T-NUT 1/4 BLK
4	H100171	BOLT WH 1/4x1 BLK

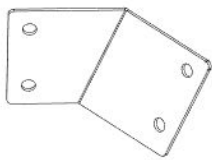

A4M01192 PANEL BRACKET
(x1)

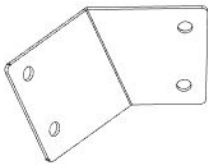


A4M01194 PANEL BRACKET
(x1)



H11 ROOF JOIST - W4L16297
(x1) 15/16"x3 3/8"x15 7/8" (24x86x404)

- INSERT T-NUTS FIRST
- HAND TIGHTEN ONLY

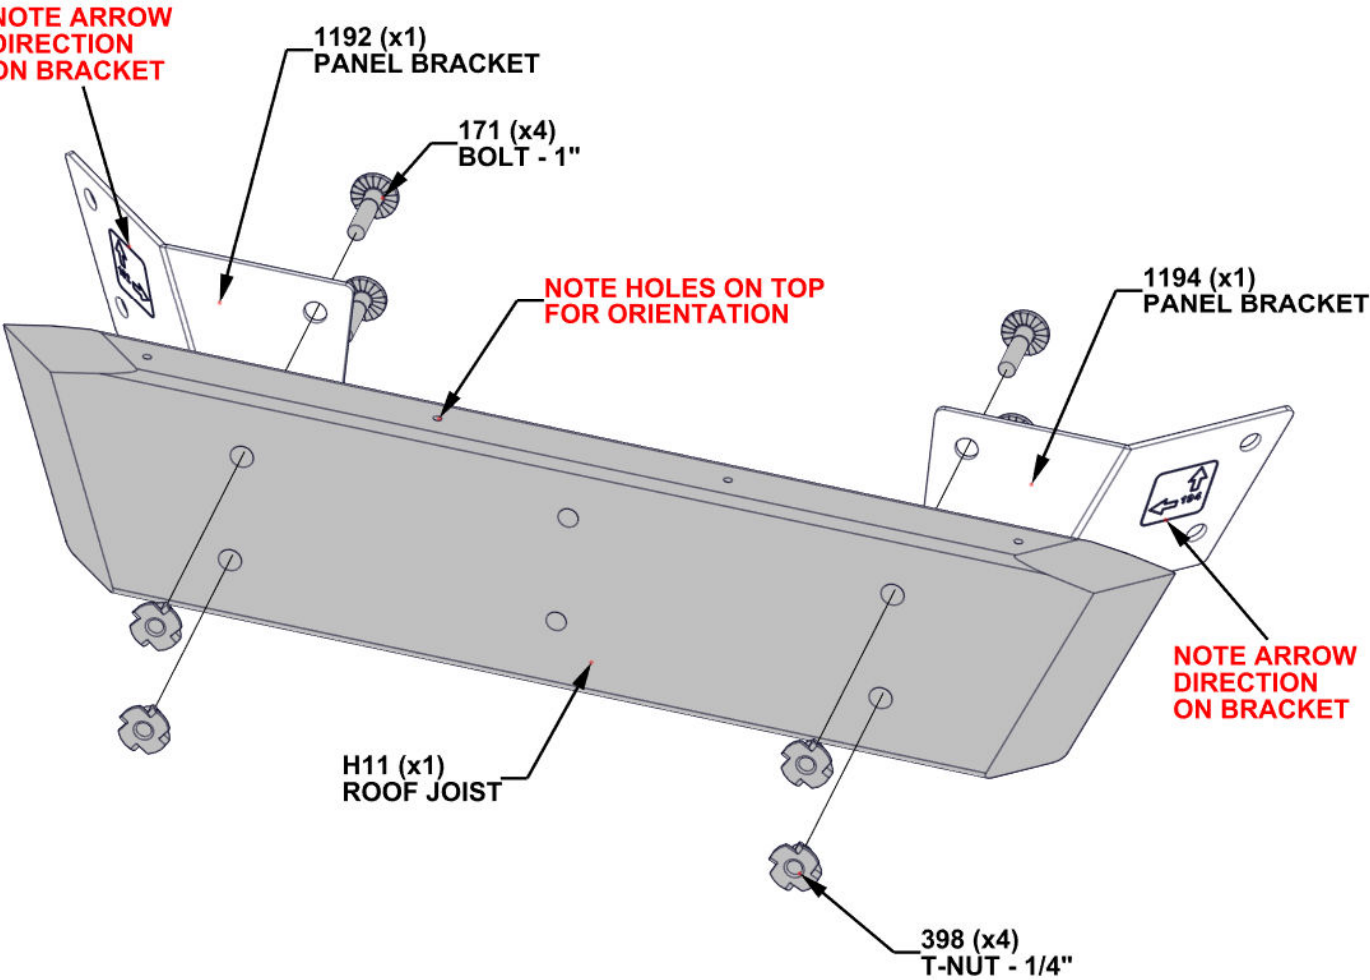

STEP 16 - 10FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
4	H100171	BOLT WH 1/4x1 BLK
4	H100398	T-NUT 1/4 BLK




H10 ROOF JOIST - W4L16309
(x1) 15/16"x3 3/8"x76 7/8" (24x86x1952)



H12 ROOF JOIST - W4L16308
(x1) 1"x3 3/8"x76 7/8" (24x86x1952)

- INSERT T-NUTS FIRST.
- HAND TIGHTEN ONLY.

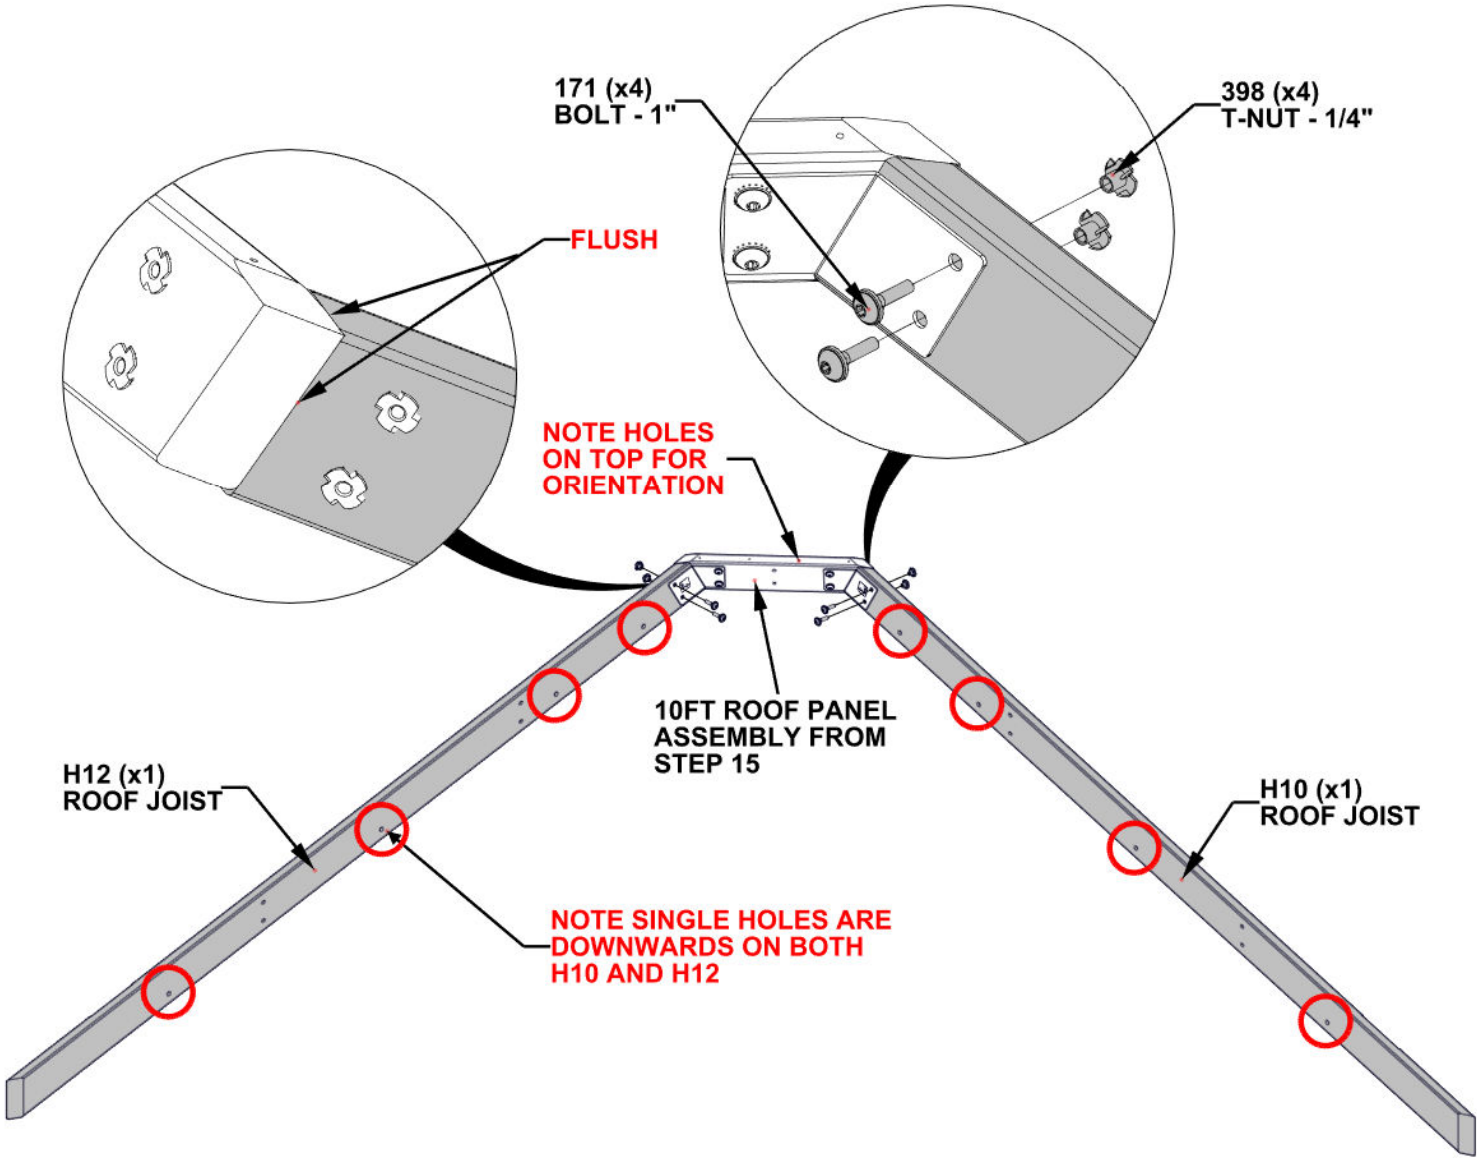

STEP 17 - 10FT ROOF PANEL ASSEMBLY



E05 RAFTER - W4L17402
(x1) 1 7/16"x3 3/8"x42 13/16" (36x86x1087)



E07 RAFTER - W4L17401
(x1) 1 7/16"x3 3/8"x42 13/16" (36x86x1087)



E09 RAFTER - W4L16298
(x1) 1 7/16"x3 3/8"x55 13/16" (36x86x1417)


QTY.	PART NUMBER	DESCRIPTION
10	H101030	2" CONFIRMAT SCREW



E10 RAFTER - W4L16300
(x1) 1 7/16"x3 3/8"x21 3/4" (36x86x553)



E12 RAFTER - W4L16302
(x1) 1 7/16"x3 3/8"x21 3/4" (36x86x553)

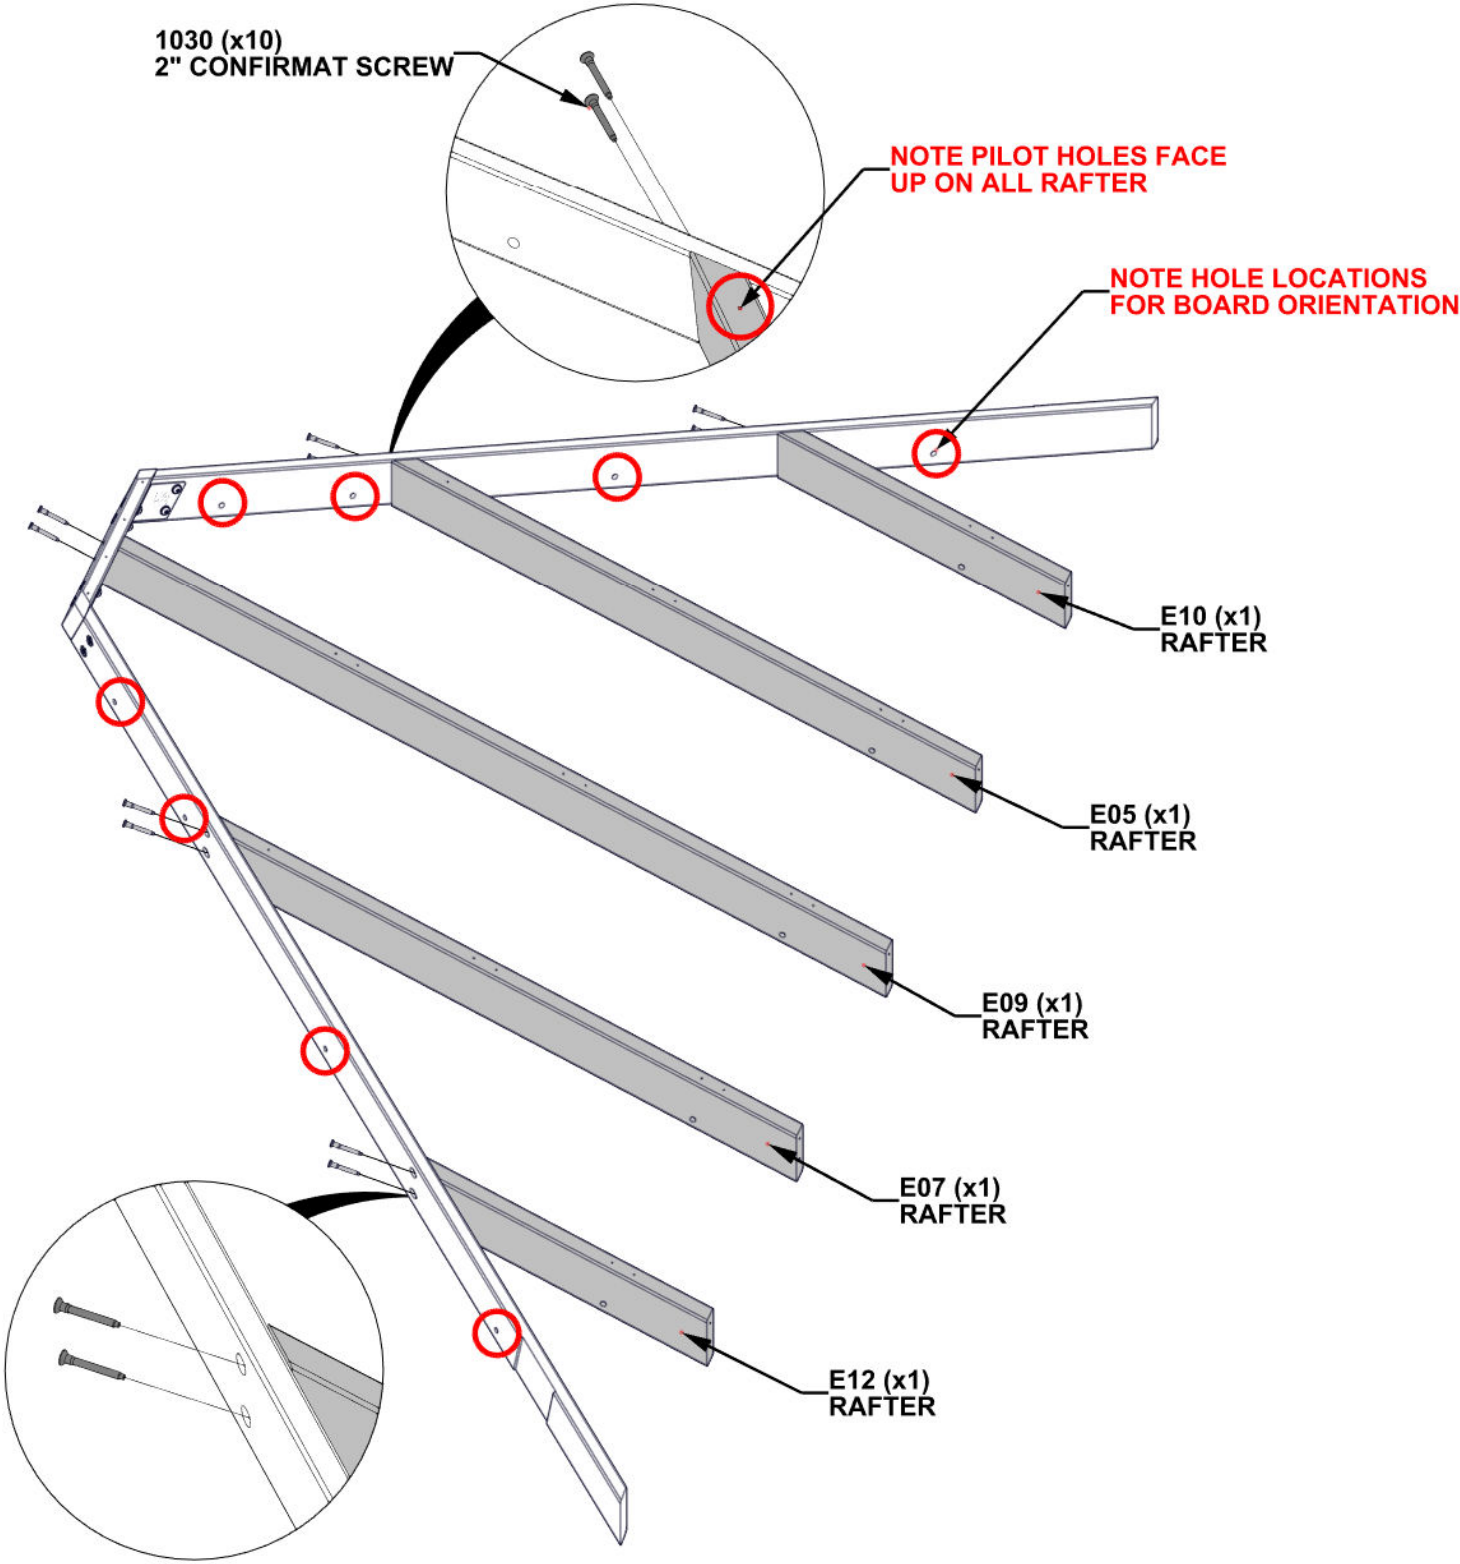


STEP 18 - 10FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
10	H101030	2" CONFIRMAT SCREW




Q02 ROOF JOIST - W4L16307
(x2) 15/16"x4 3/8"x61 1/2" (24x112x1562)

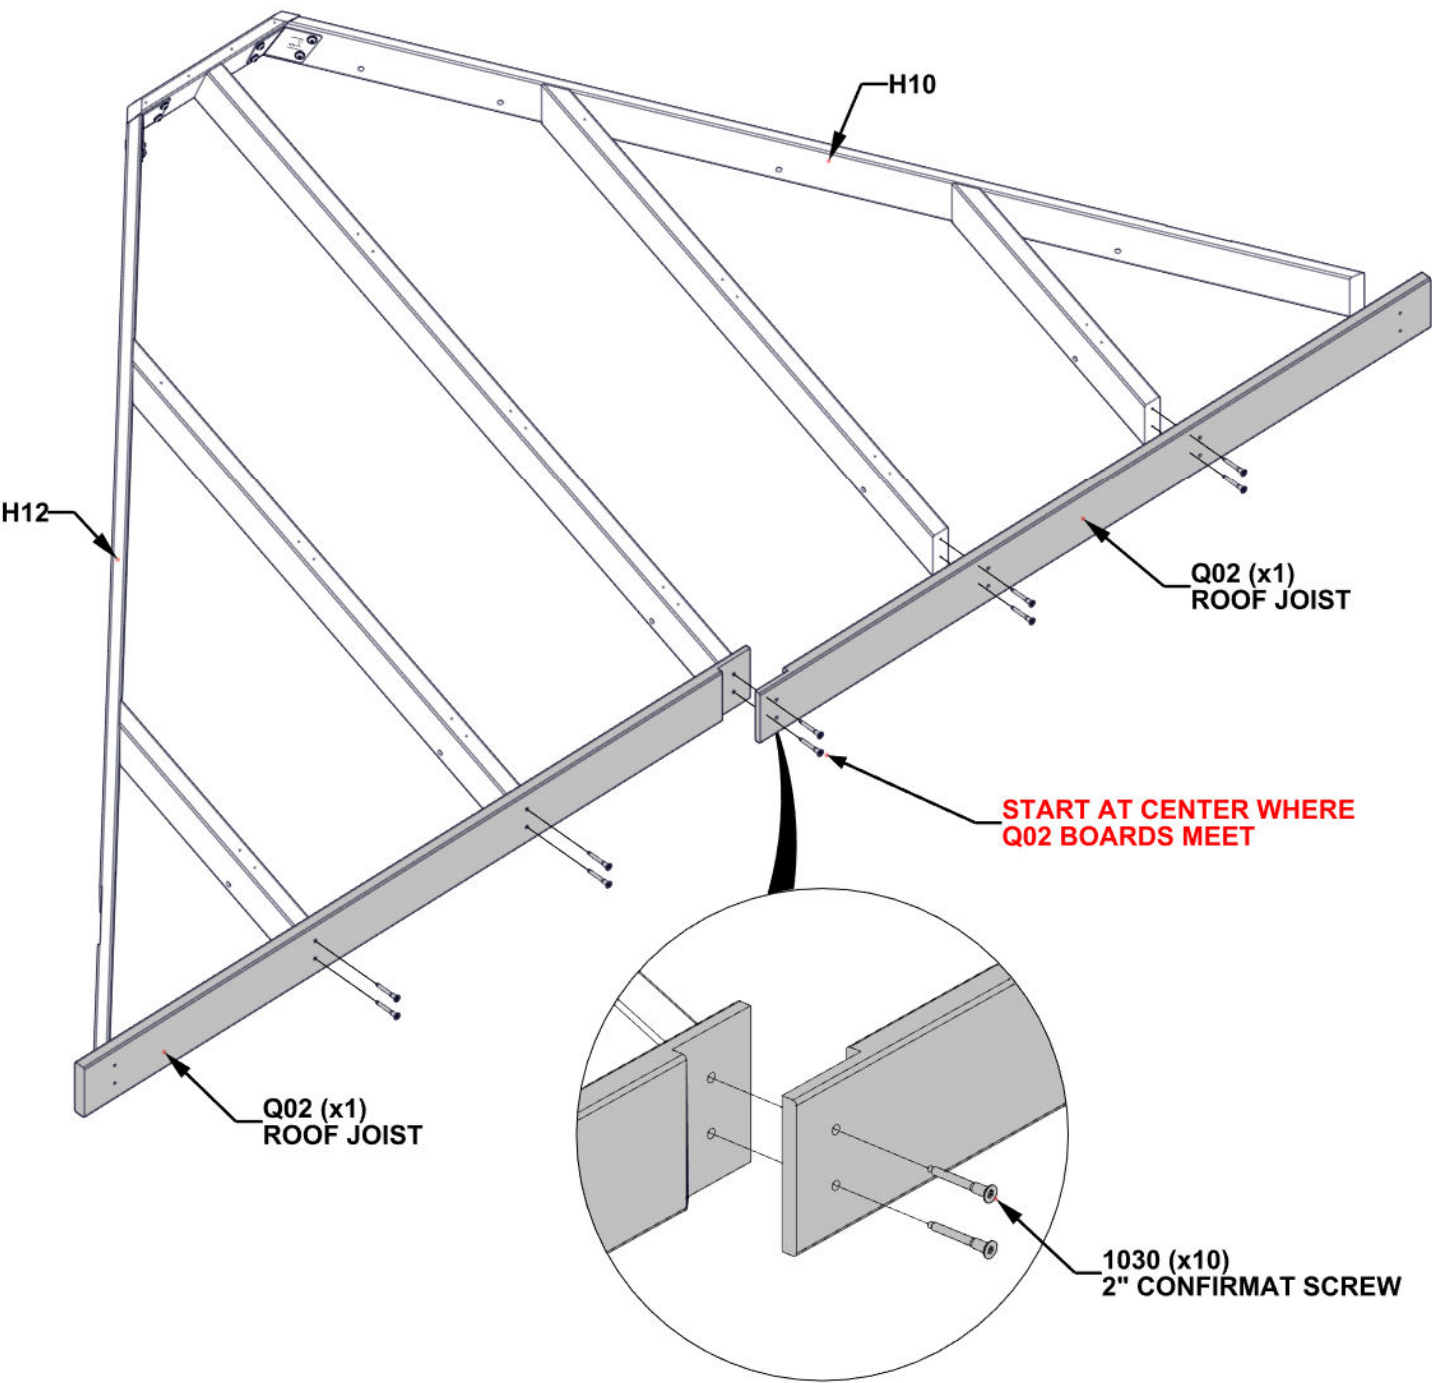

STEP 19 - 10FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
4	H100382	SCREW PFH 8x1 3/4 BLK

- USING THE Q02 BOARDS AS A GUIDE AND A 1/8" DRILL BIT, DRILL PILOT HOLES INTO H10 AND H12 BOARDS USING THE DIMENSIONS BELOW.
- RAFTERS MAY NEED TO BE LOOSENED TO ATTACH THE Q02 BOARDS TO H10 AND H12.

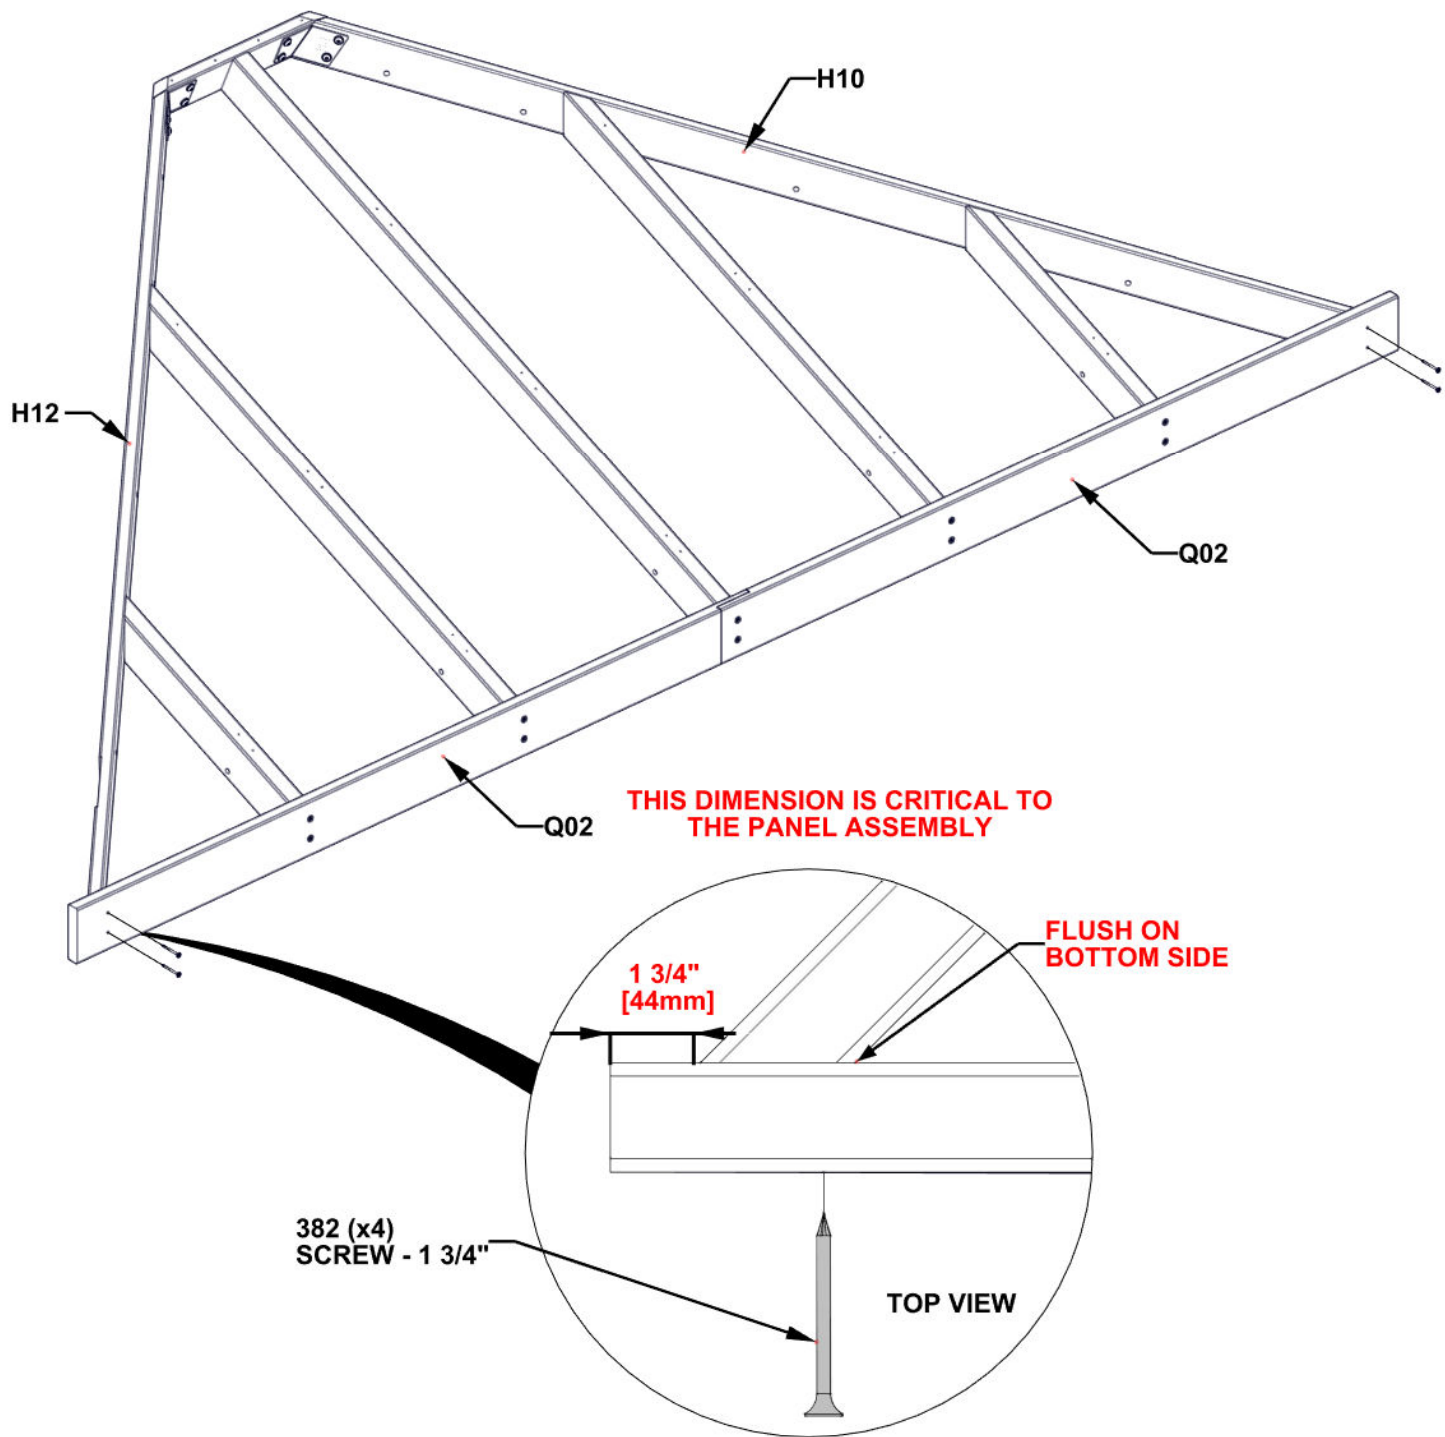


STEP 20 - 10FT ROOF PANEL ASSEMBLY

- LOOSEN HARDWARE TO ADJUST FOR SQUARING IF NEEDED.


CRITICAL:

- SQUARE UNIT BEFORE PROCEEDING TO NEXT STEPS.
- THE BELOW DIMENSIONS ARE CRITICAL TO THE FINAL ROOF ASSEMBLY.
- DIMENSIONS ARE FROM CORNER TO CORNER OF ROOF PANEL.
- MEASUREMENTS SHOULD BE WITHIN $\pm 1/4"$.
- MEASUREMENTS OUTSIDE OF TOLERANCE WILL LEAD TO THE INABILITY TO ASSEMBLE THE ROOF.
- ONCE SQUARE, TIGHTEN ALL HARDWARE FROM PREVIOUS STEPS.

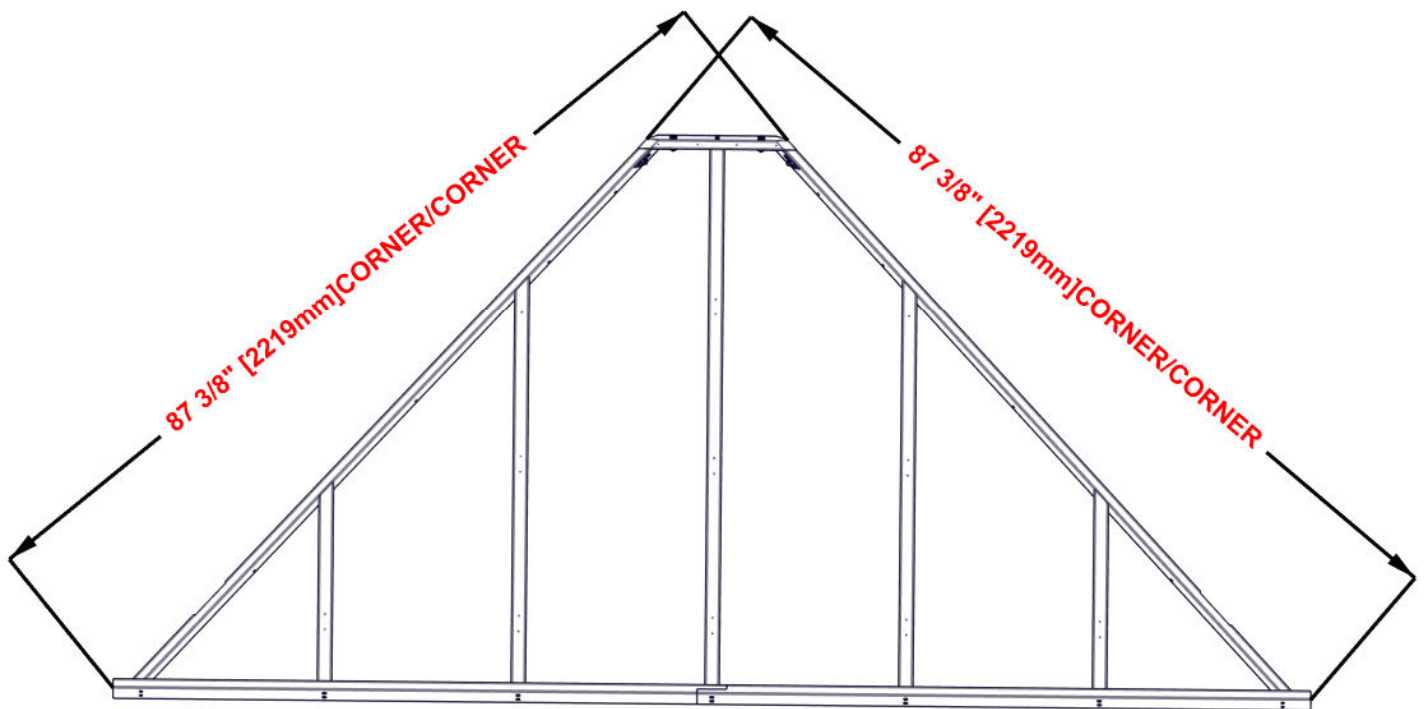


STEP 21 - 10FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
38	H100391	SCREW PFH 8x2 BLK

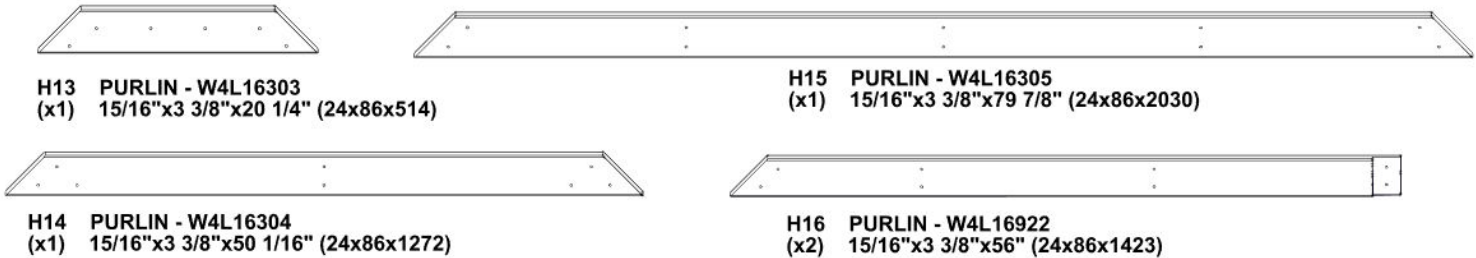

- ALIGN PURLIN PILOT HOLES WITH RAFTER PILOT HOLES.
- ATTACH SCREWS FROM THE CENTER AND WORK OUTWARDS.
- H10 AND H12 BOARDS DO NOT HAVE PILOT HOLES FOR THE OUTSIDE EDGE SCREWS.
- USING THE PURLINS AS A GUIDE AND A 1/8" [3mm] DRILL BIT AND DRILL PILOT HOLES INTO H10 AND H12.

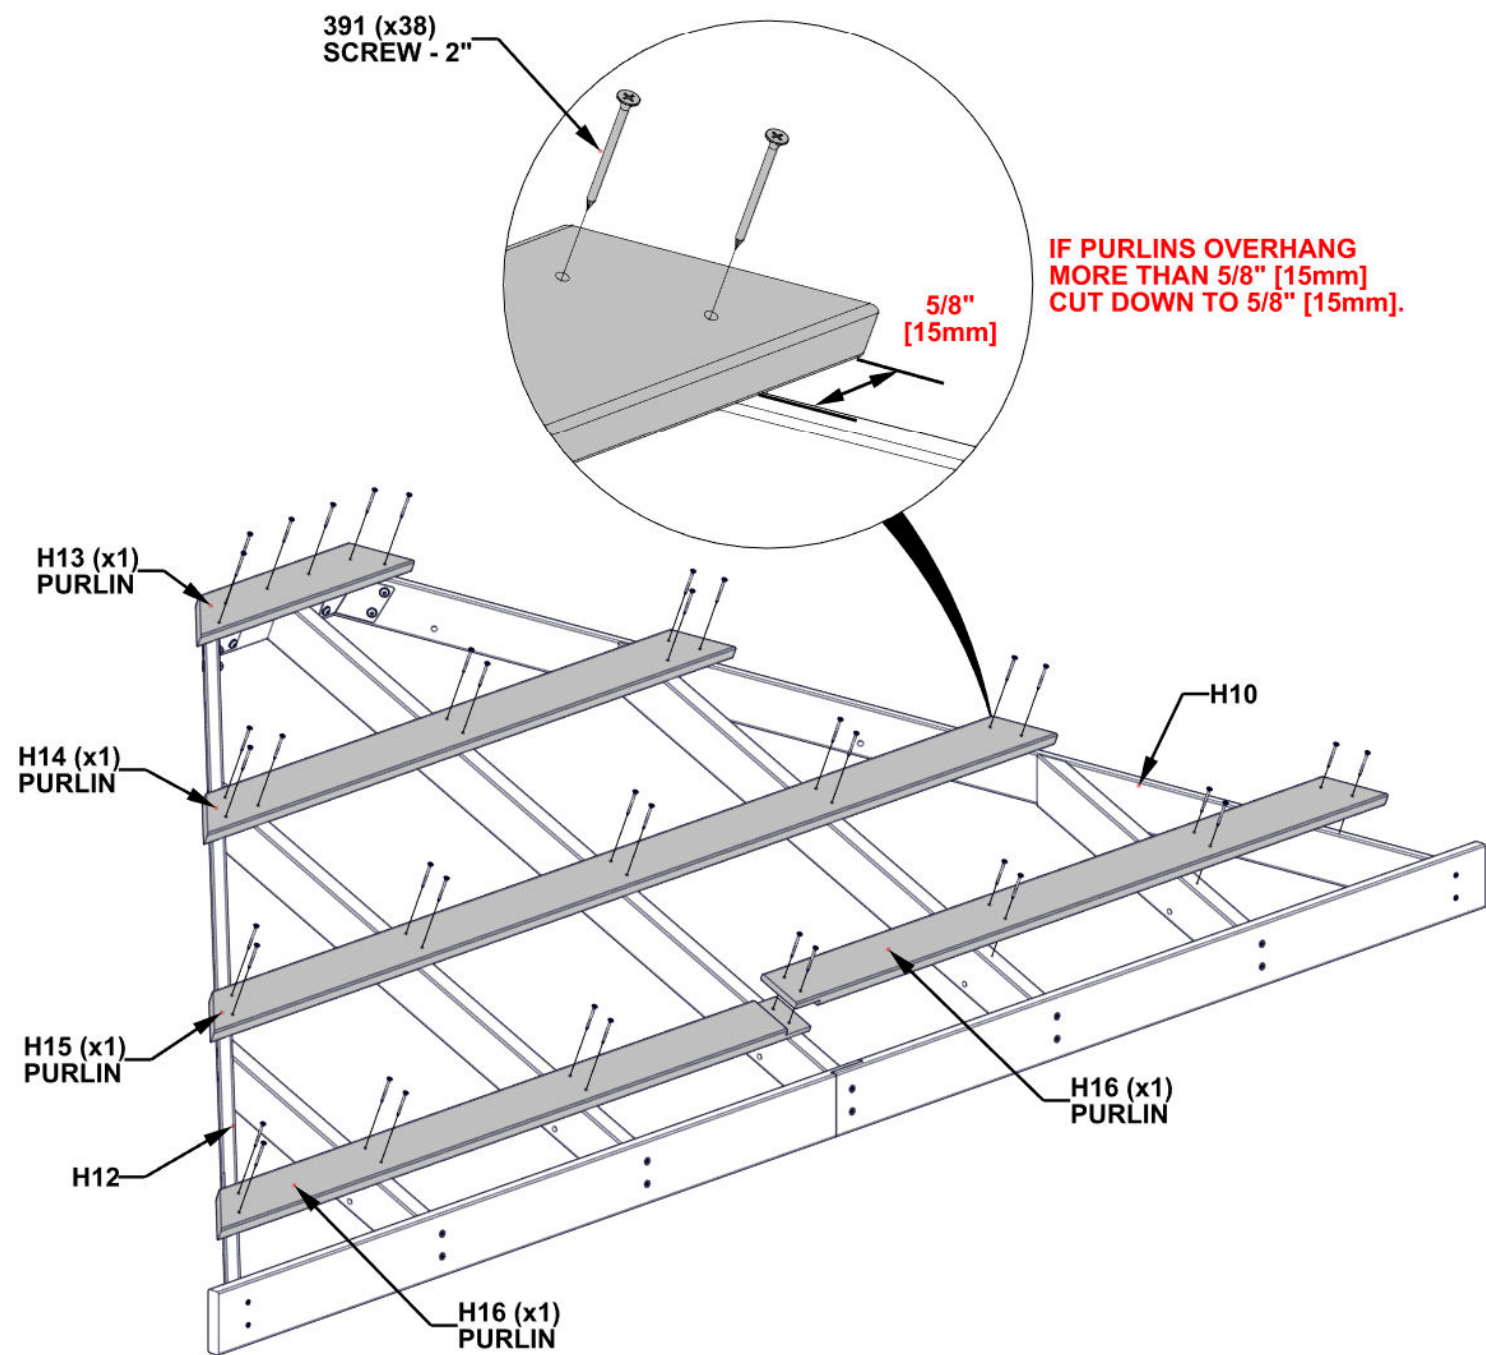


STEP 22 - 10FT ROOF PANEL ASSEMBLY


QTY.	PART NUMBER	DESCRIPTION
16	H101480	SCREW SELF TAPPING #9x3/4 BLK



A4M07226-2 29 GA STEEL SHEETING (x1)

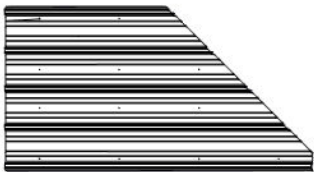

A4M07227-2 29 GA STEEL SHEETING (x1)

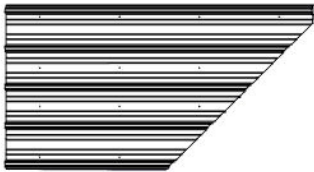


A4M07225-2 29 GA STEEL SHEETING (x1)




A4M07224-2 29 GA STEEL SHEETING (x1)

- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- **REMOVE PROTECTIVE FILM.**
- **STARTING IN THE CENTER, PLACE PANELS AS SHOWN BELOW.**
- **OVERLAP PANELS BY ONE RIDGE.**
- **PANELS SHOULD BE FLUSH WITH PURLIN ENDS AND Q02 ROOF JOIST.**
- **ONCE SHEETING IS IN PLACE, IT IS RECOMMENDED TO ADD H101480 SCREWS IN THE MIDDLE OF SHEETS TO HOLD SHEETING FOR THE NEXT STEP.**

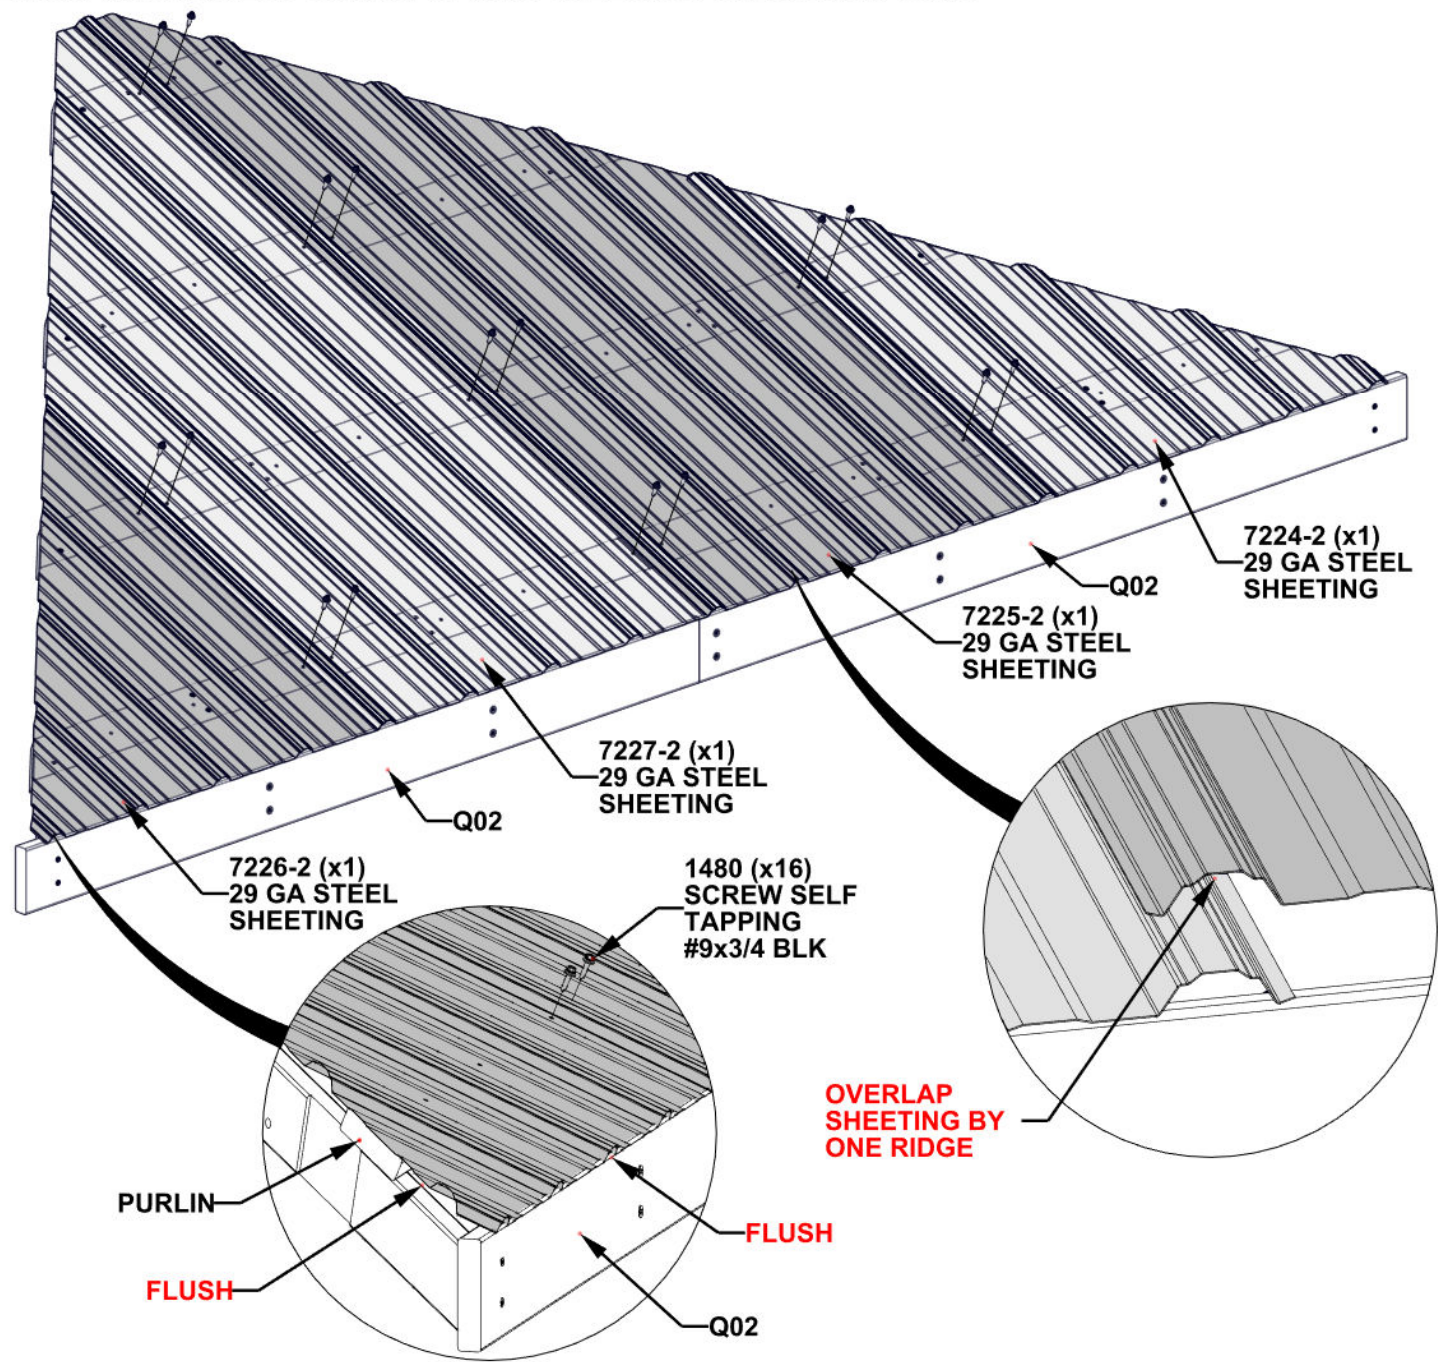


STEP 23 - 10FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
8	H101480	SCREW SELF TAPPING #9x3/4 BLK

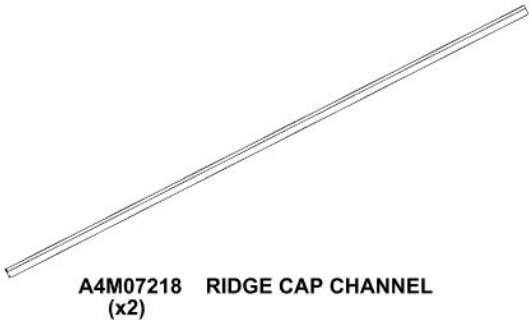

- REMOVE PROTECTIVE FILM.
- POSITION THE RIDGE CAP CHANNEL OVER THE EDGE OF THE ROOF PANELS WITH THE WIDER SIDE OF THE CHANNEL ON THE BOTTOM.
- MAKE SURE THE PANELS ARE FULLY SEATED INTO THE CHANNEL.
- FLUSH THE TOP OF THE CHANNEL WITH THE TOP OF THE METAL PANELS.

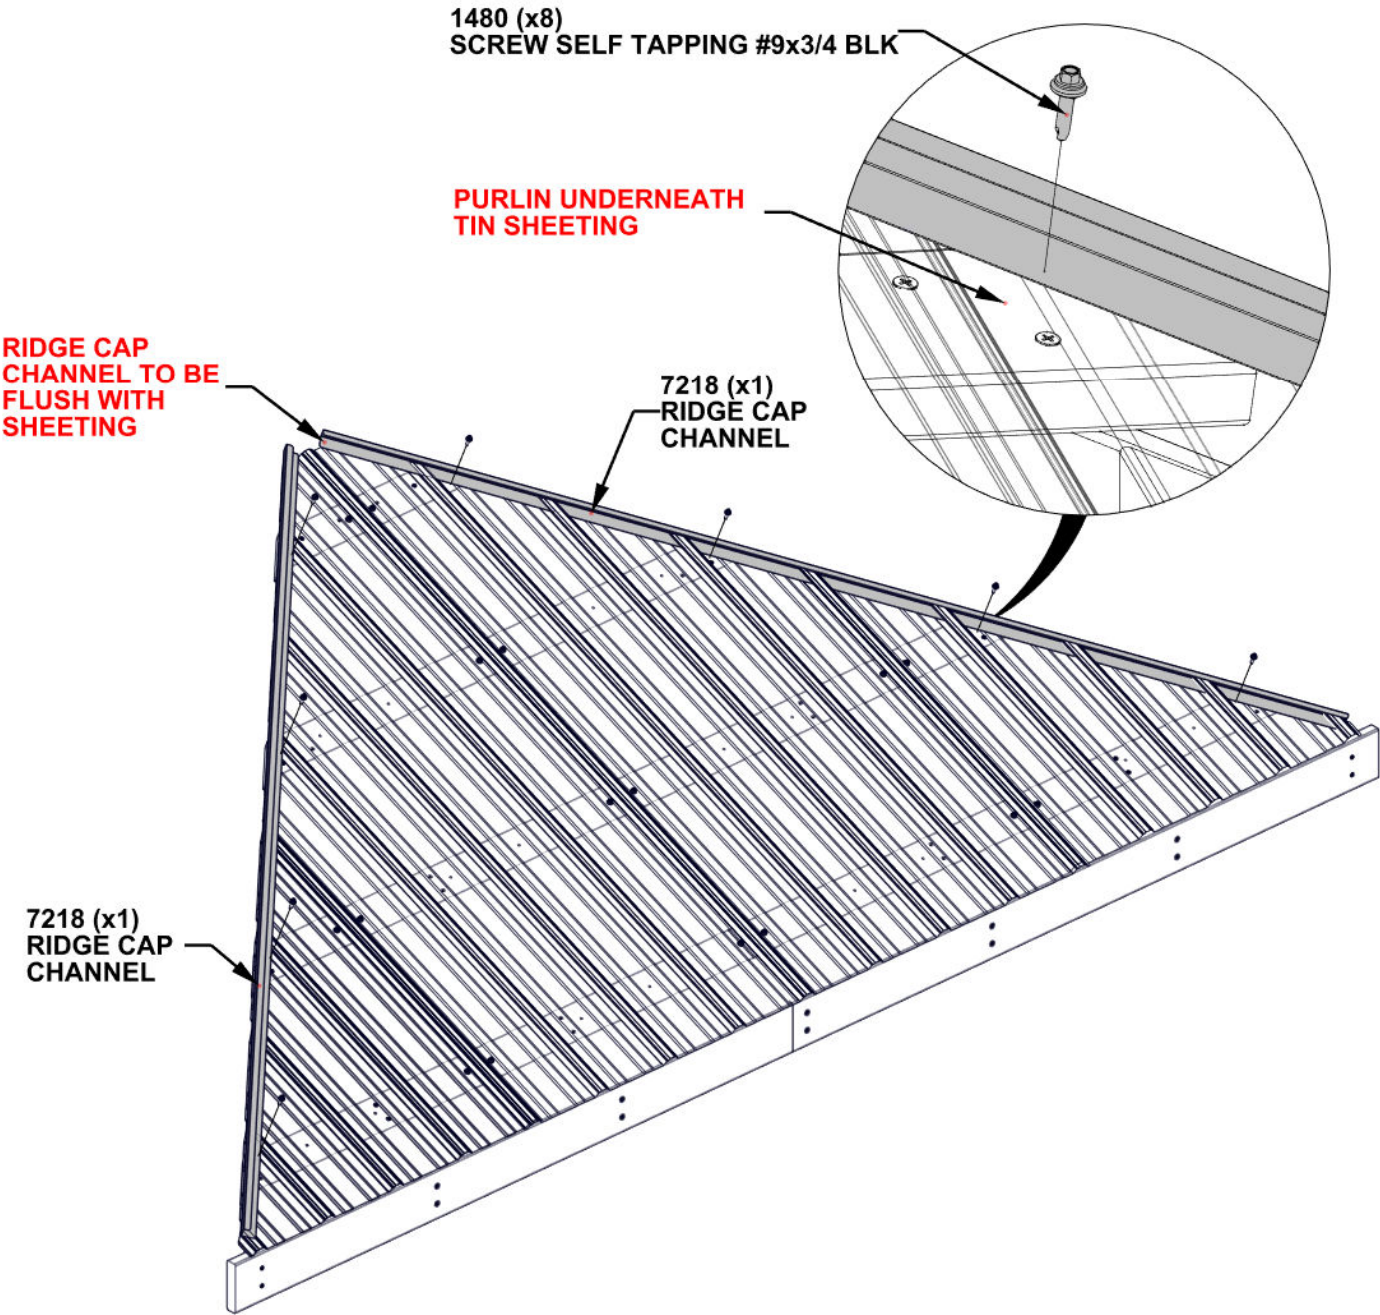


STEP 24 - 10FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
16	H101480	SCREW SELF TAPPING #9x3/4 BLK

- INSERT REMAINING SCREWS TO FASTEN SHEET METAL IN PLACE.
- MAKE SURE SHEET EDGES ARE FLUSH AS SHOWN.


1480 (x16)
SCREW SELF TAPPING #9x3/4 BLK

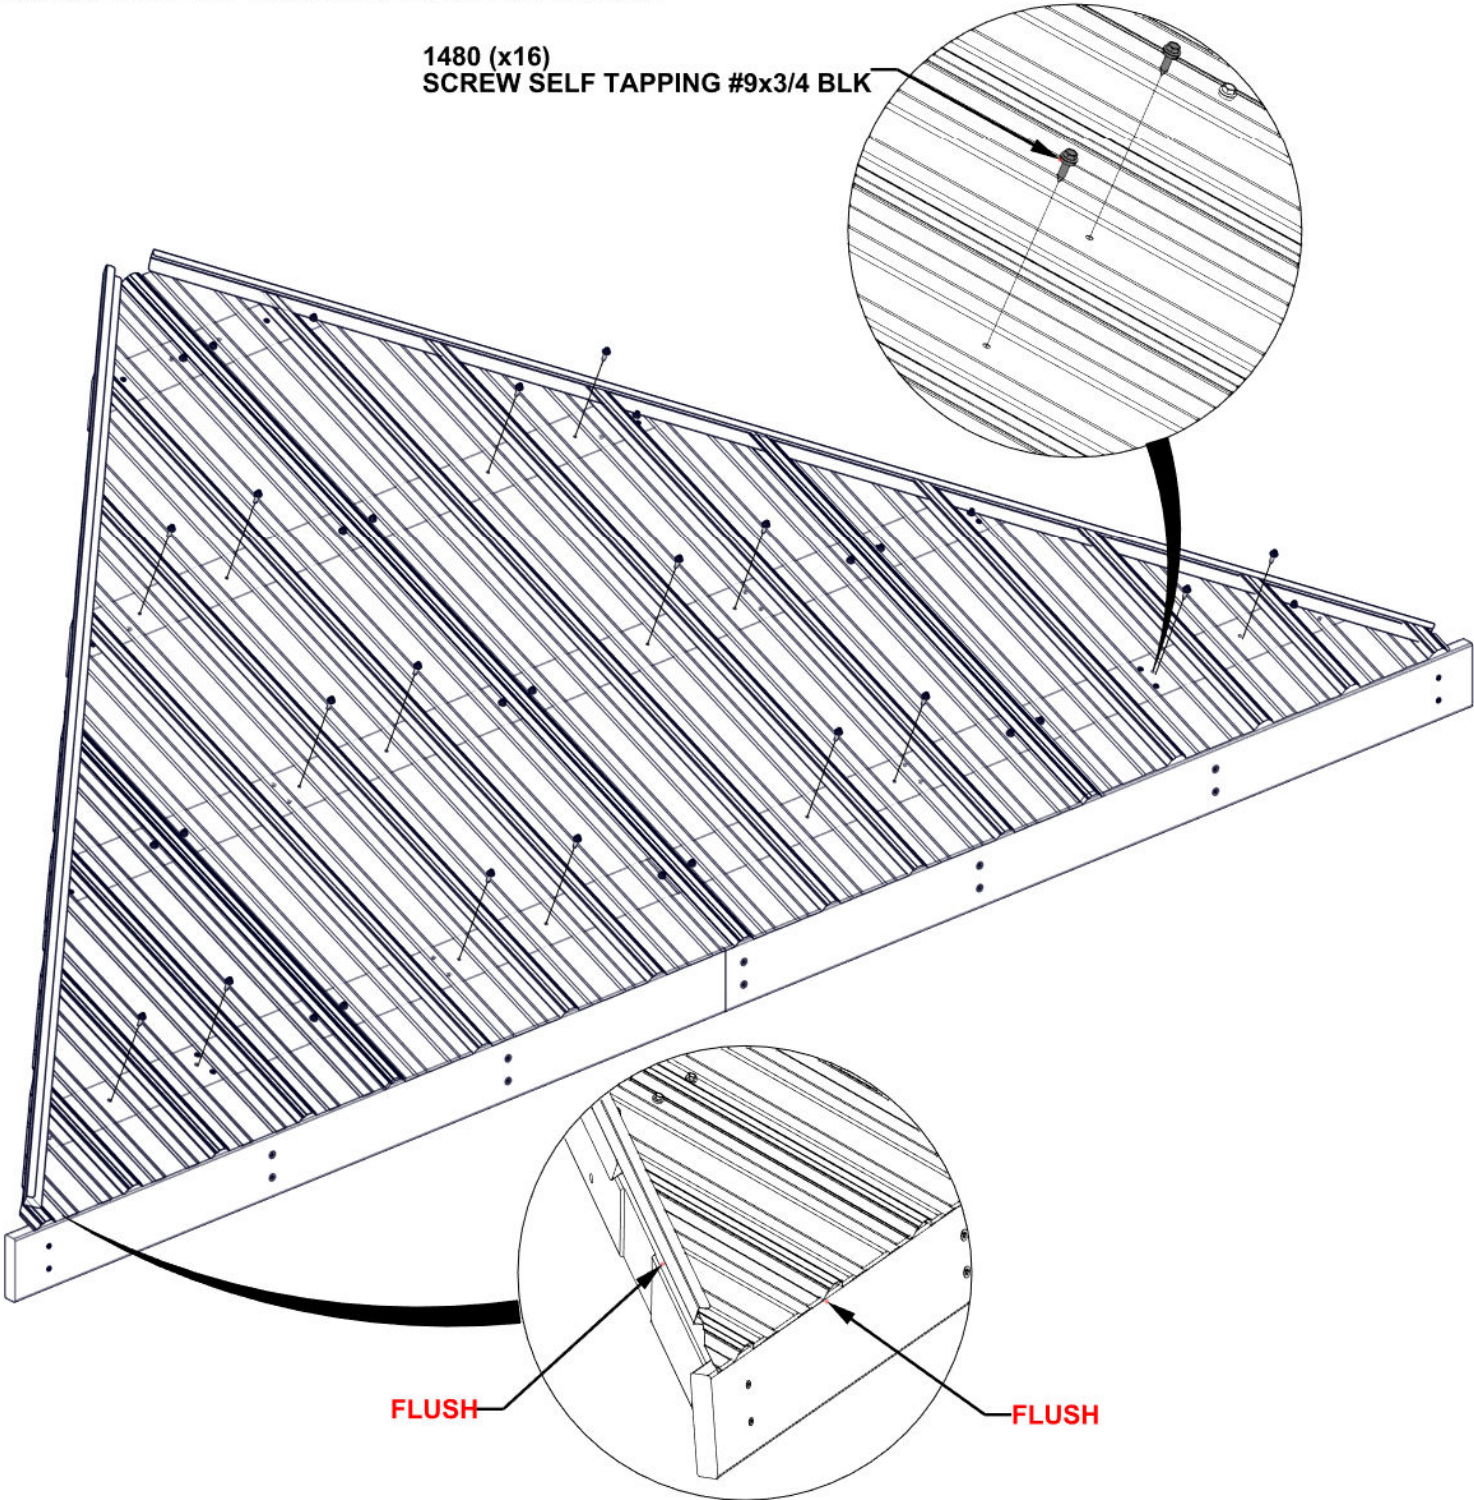


**REPEAT PREVIOUS STEPS 15 THROUGH 24 TO
BUILD SECOND 10FT ROOF PANEL**

STEP 25 - 14FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
4	H100171	BOLT WH 1/4x1 BLK
4	H100398	TNUT-1/4" BLK

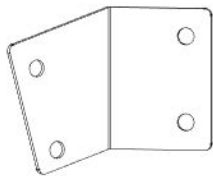

A4M01191 PANEL BRACKET
(x1)

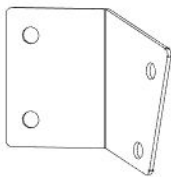


A4M01193 PANEL BRACKET
(x1)



H02 ROOF JOIST - W4L16283
(x1) 15/16"x3 3/8"x46 3/4" (24x86x1188)

- INSERT T-NUTS FIRST
- HAND TIGHTEN ONLY

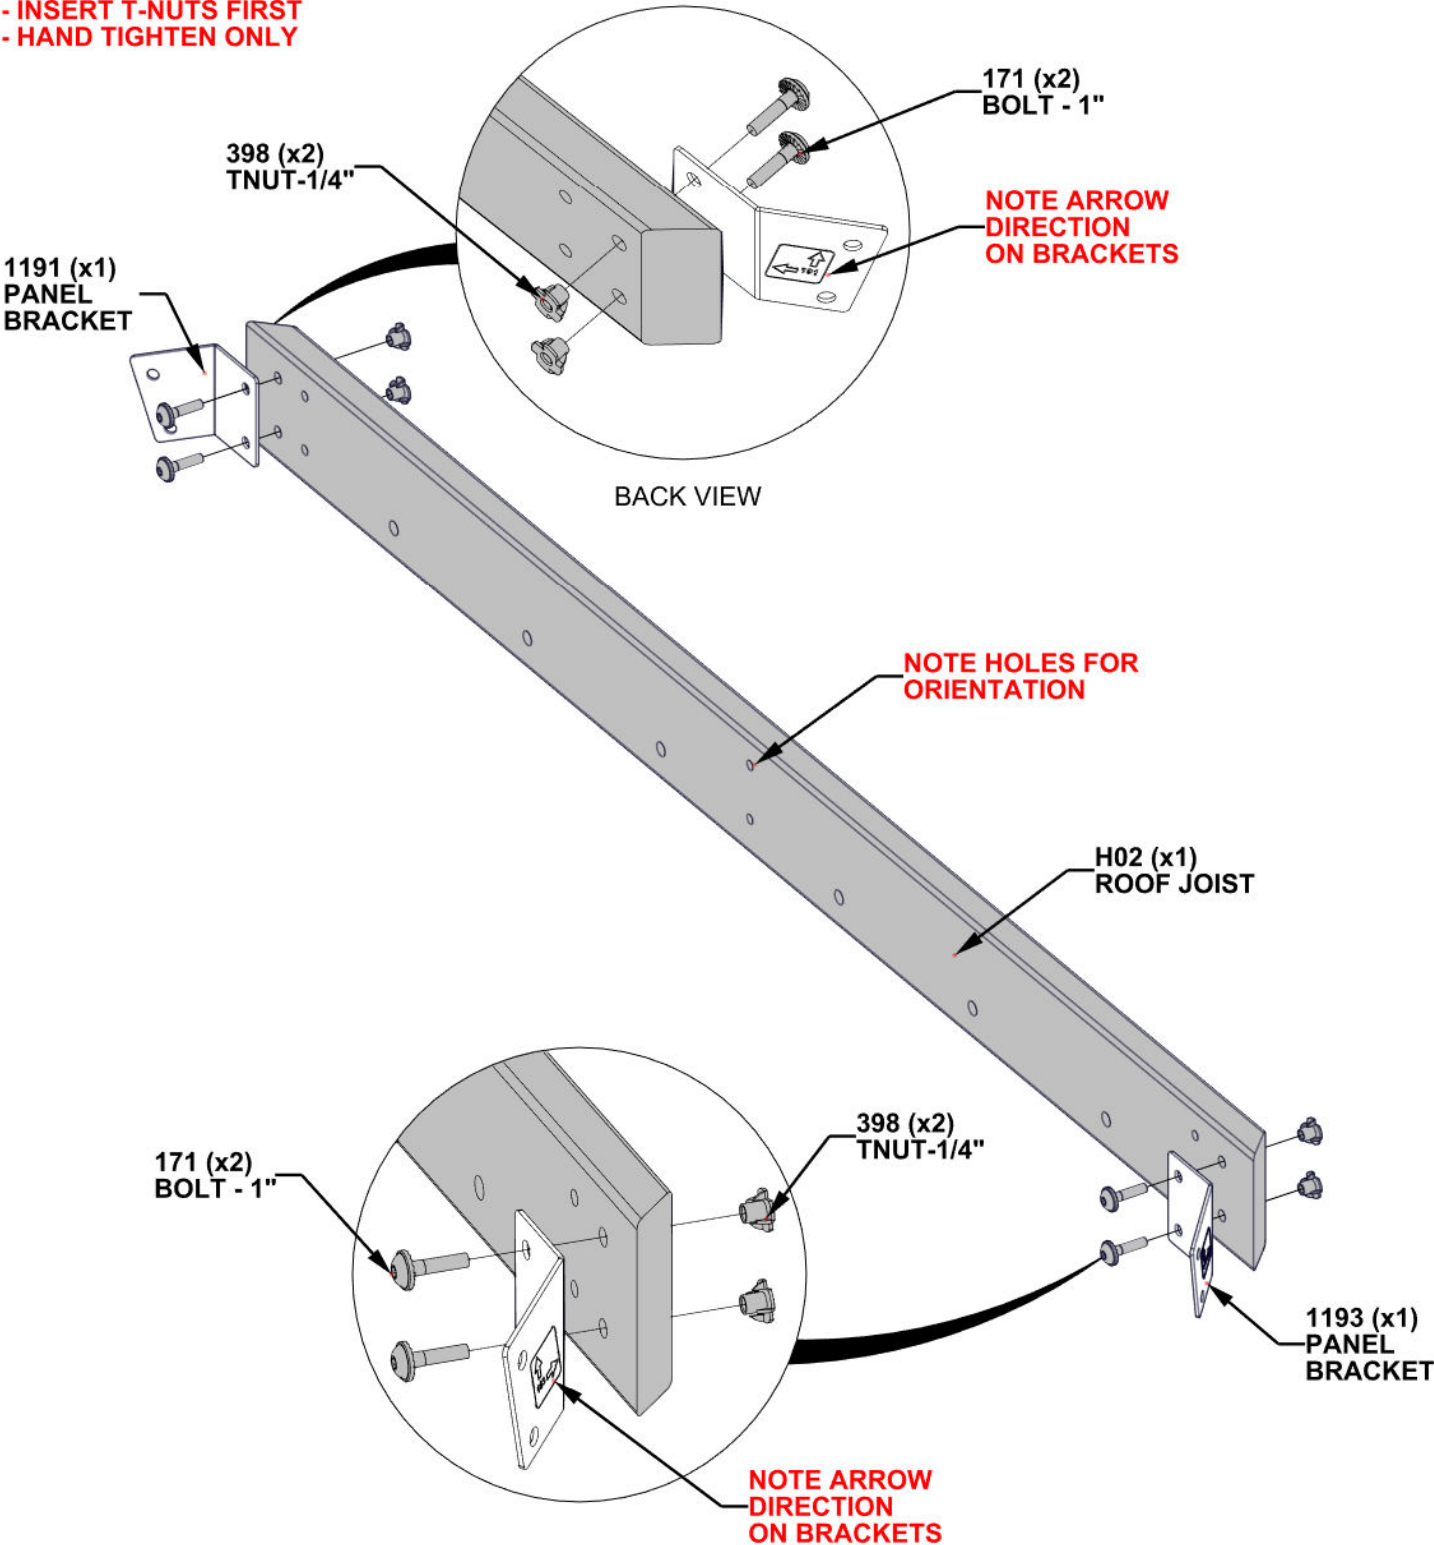

STEP 26 - 14FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
4	H100171	BOLT WH 1/4x1 BLK
4	H100398	TNUT-1/4" BLK




H01 ROOF JOIST - W4L16295
(x1) 15/16"x3 3/8"x"88 3/16" (24x86x2240)



H09 ROOF JOIST - W4L16296
(x1) 1"x3 3/8"x88 1/4" (24x86x2240)

- INSERT T-NUTS FIRST.
- HAND TIGHTEN ONLY.

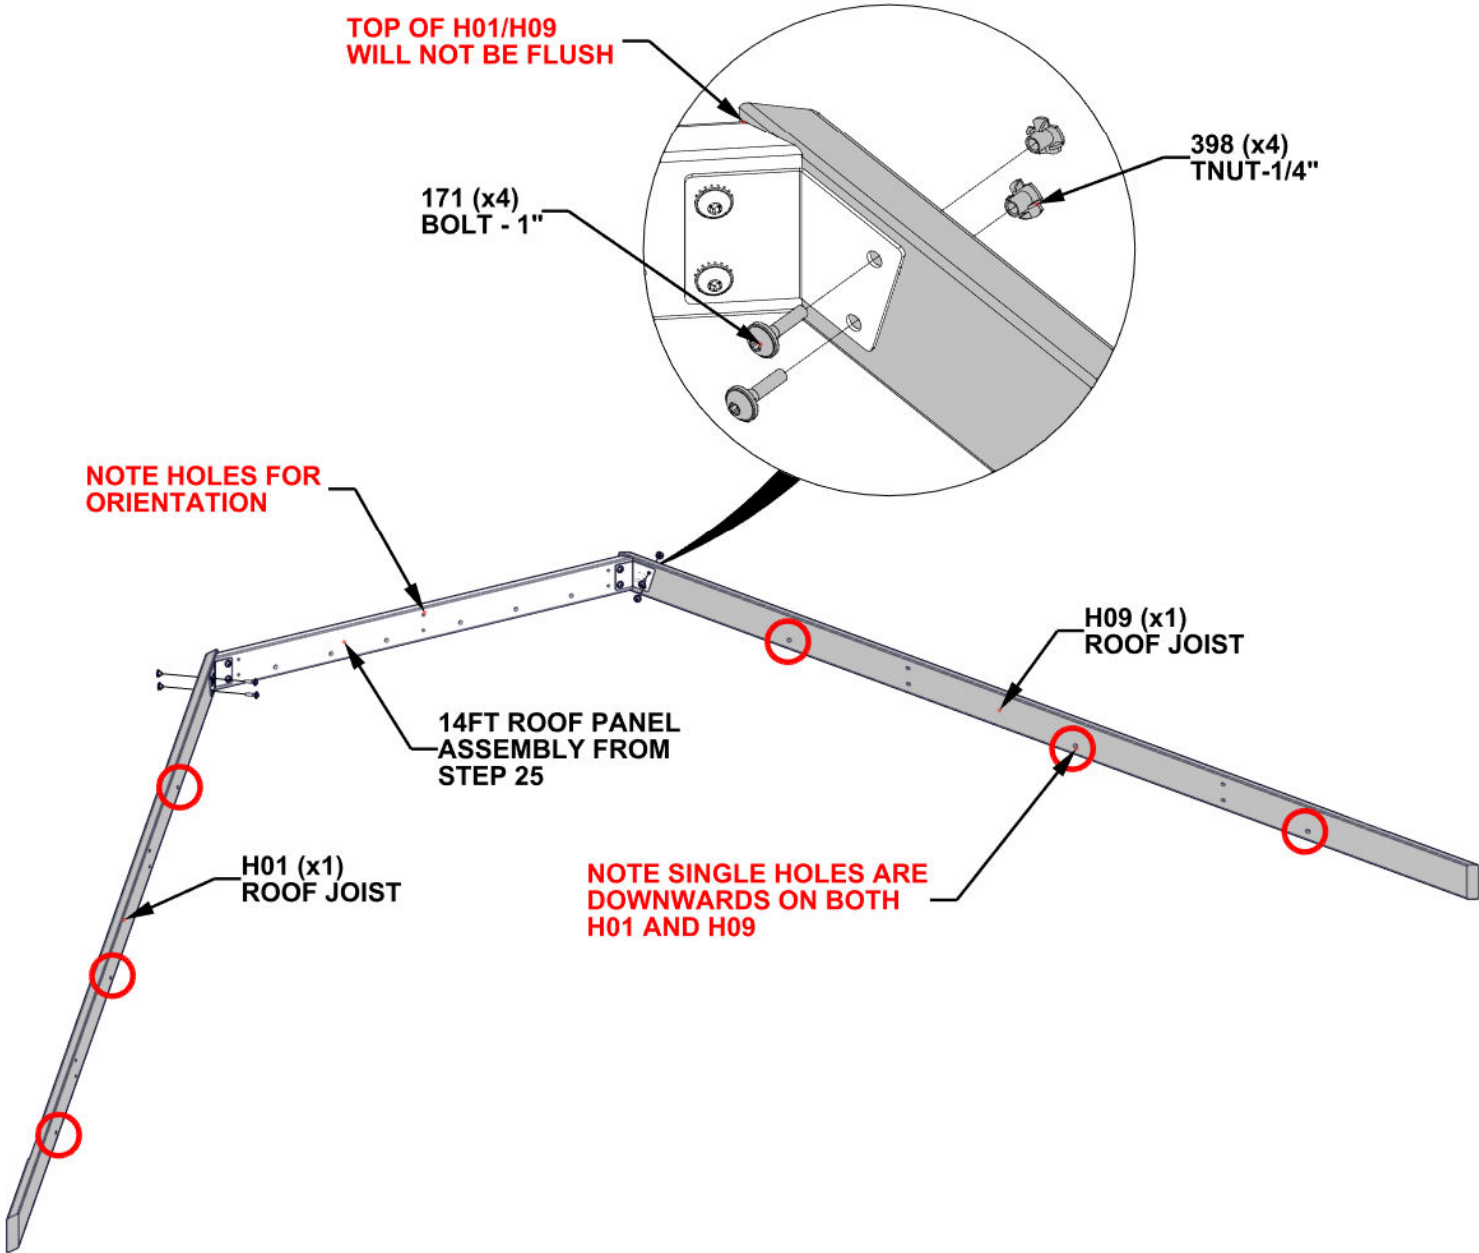

STEP 27 - 14FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
14	H101030	2" CONFIRMAT SCREW

E01 RAFTER - W4L16284
(x1) 1 7/16"x3 3/8"x44" (36x86x1117)


E03 RAFTER - W4L16286
(x1) 1 7/16"x3 3/8"x20 7/16" (36x86x519)

E02 RAFTER - W4L16288
(x2) 1 7/16"x3 3/8"x63 7/8" (36x86x1622)

E04 RAFTER - W4L16285
(x1) 1 7/16"x3 3/8"x44" (36x86x1117)

E06 RAFTER - W4L16287
(x1) 1 7/16"x3 3/8"x20 7/16" (36x86x519)

E11 RAFTER - W4L16290
(x1) 1 7/16"x3 3/8"x63 7/8" (36x86x1622)

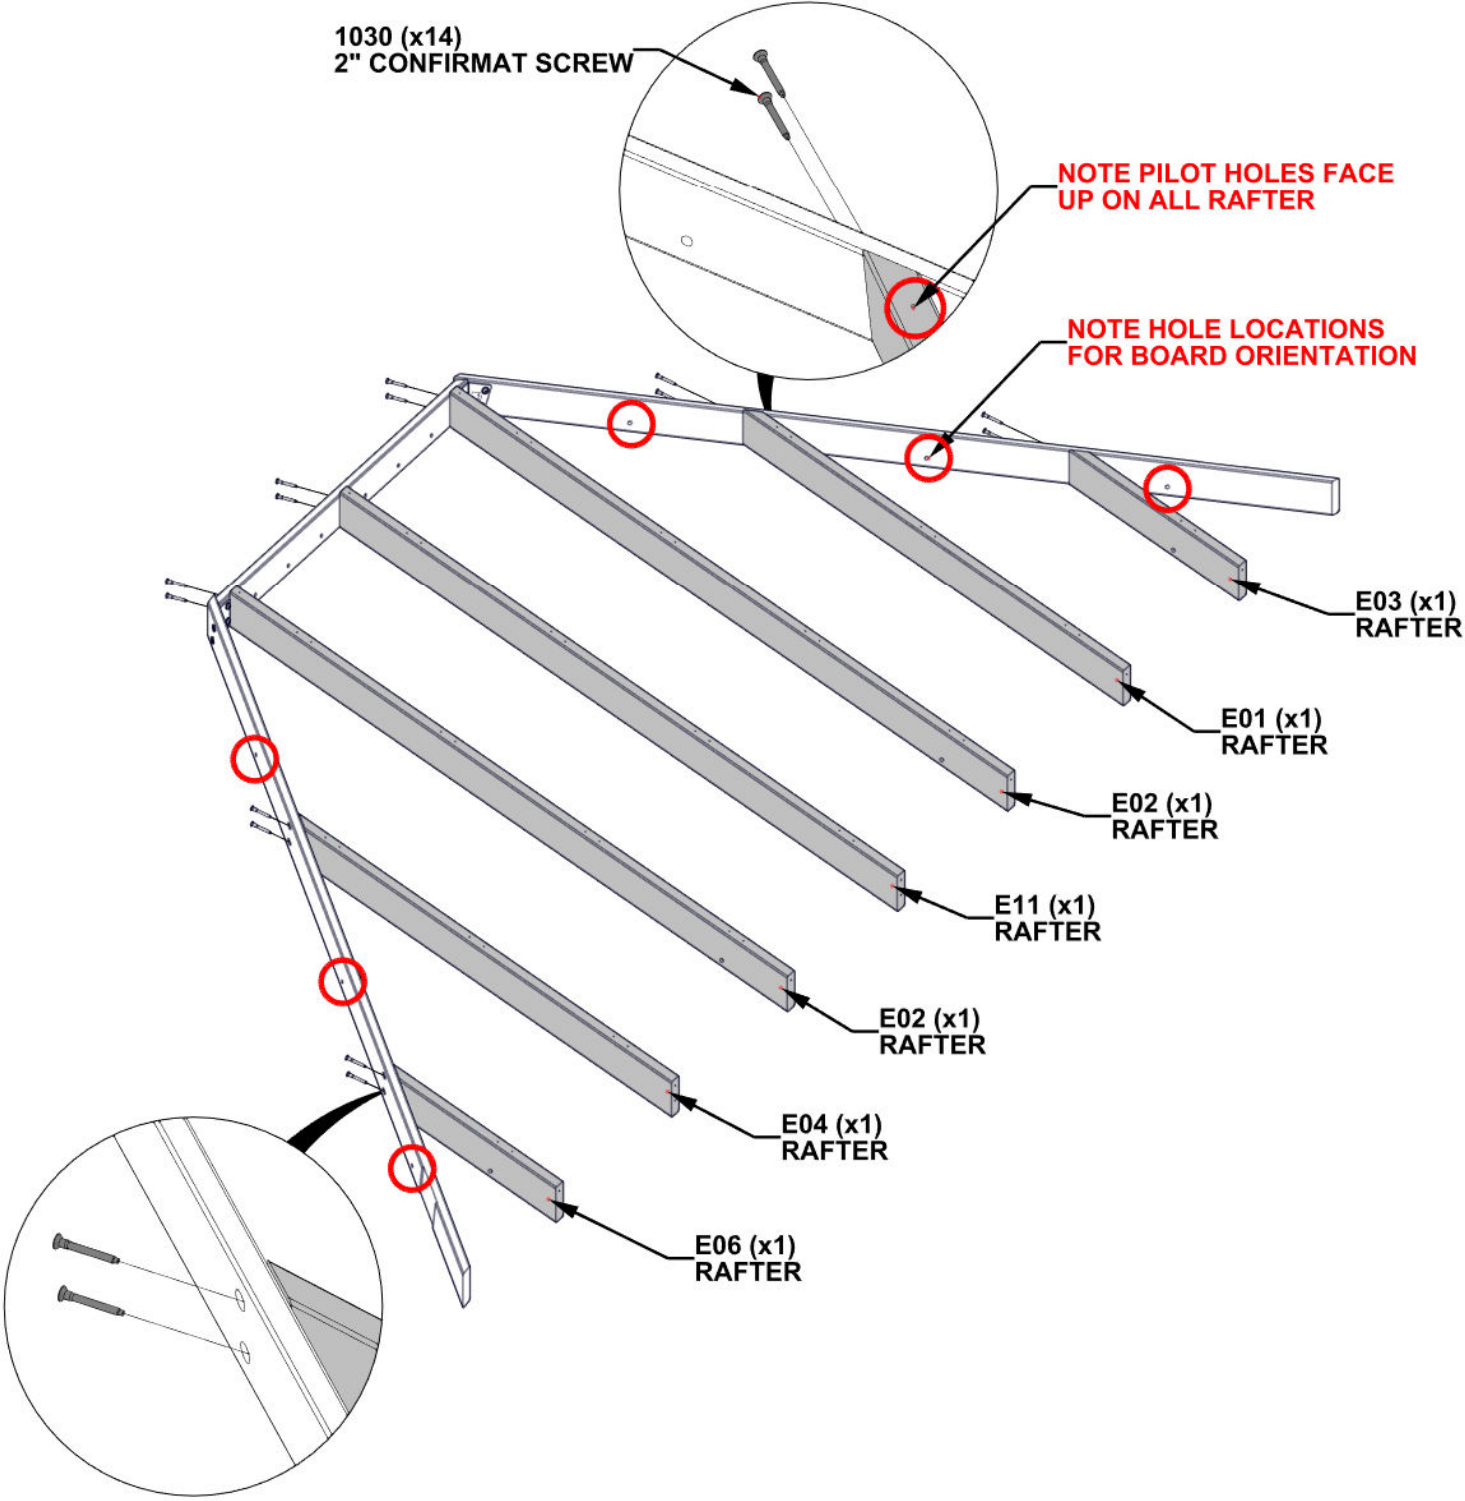


STEP 28 - 14FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
14	H101030	2" CONFIRMAT SCREW




Q01 ROOF JOIST - W4L16294
(x2) 15/16"x4 7/16"x84 9/16" (24x112x2148)

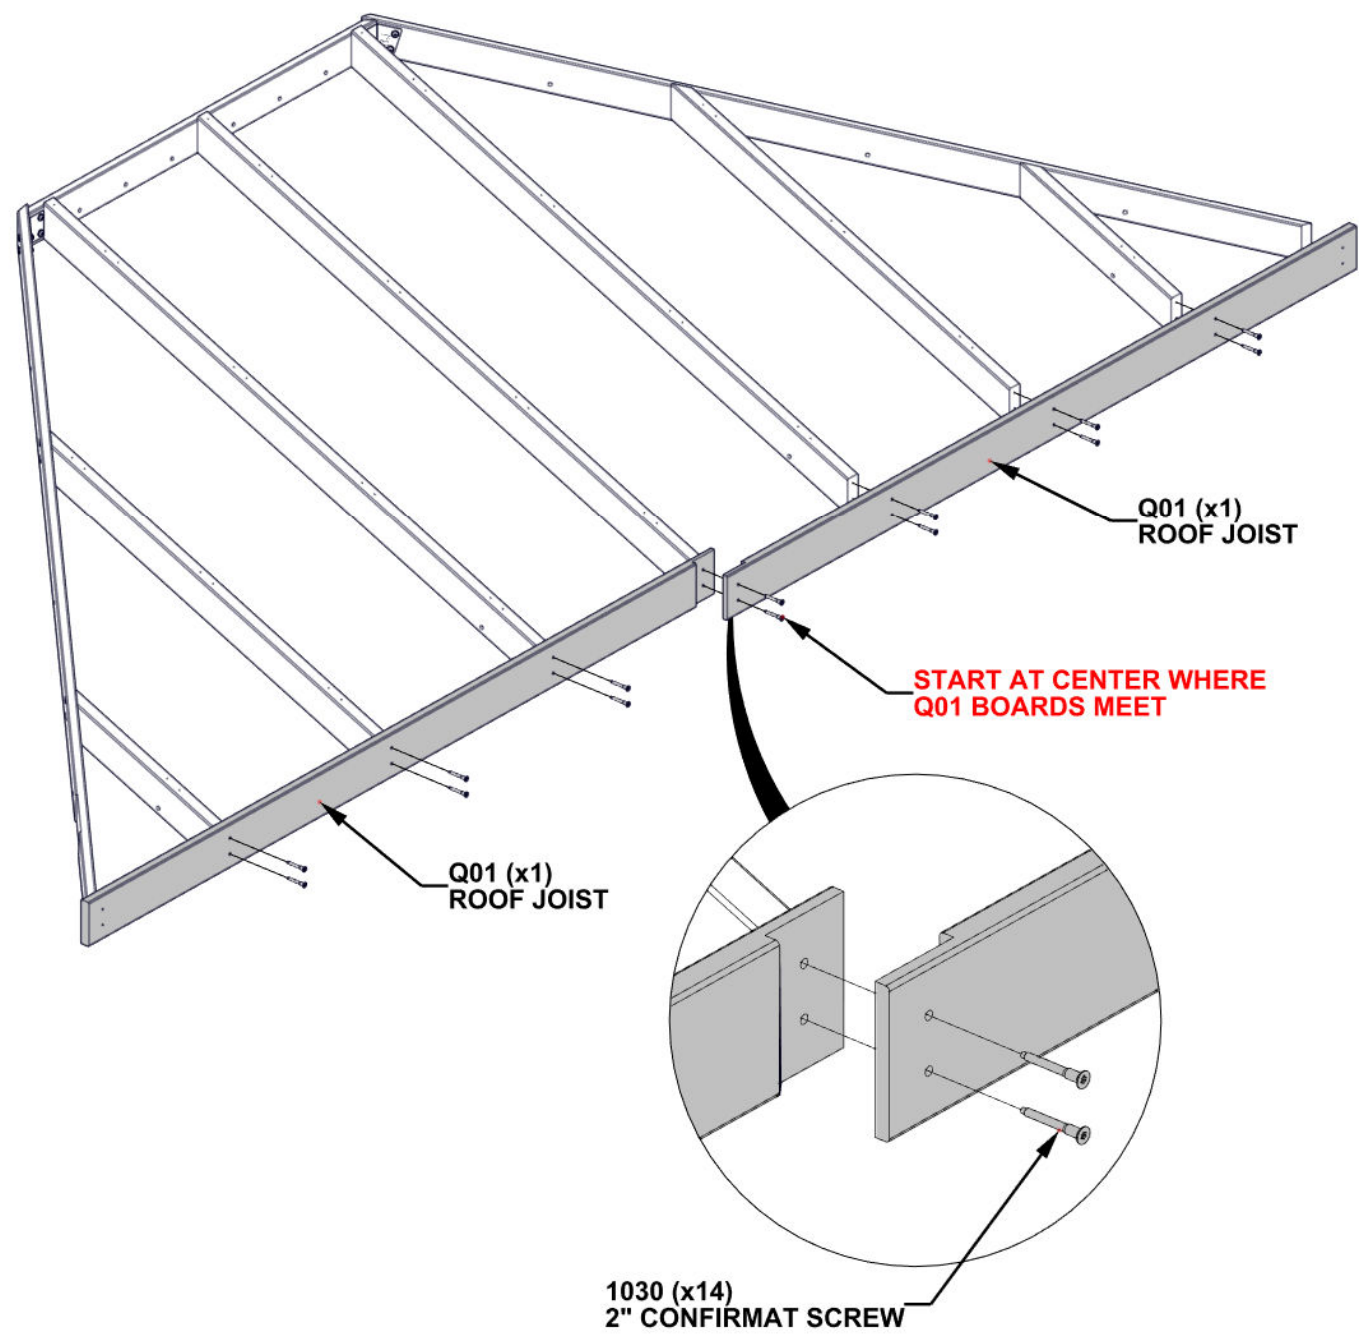

STEP 29 - 14FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
4	H100382	SCREW PFH 8x1 3/4 BLK

- USING THE Q01 BOARDS AS A GUIDE AND A 1/8" DRILL BIT, DRILL PILOT HOLES INTO H01 AND H09 BOARDS USING THE DIMENSIONS BELOW.
- RAFTERS MAY NEED TO BE LOOSENED TO ATTACH THE Q01 BOARDS TO H01 AND H09.

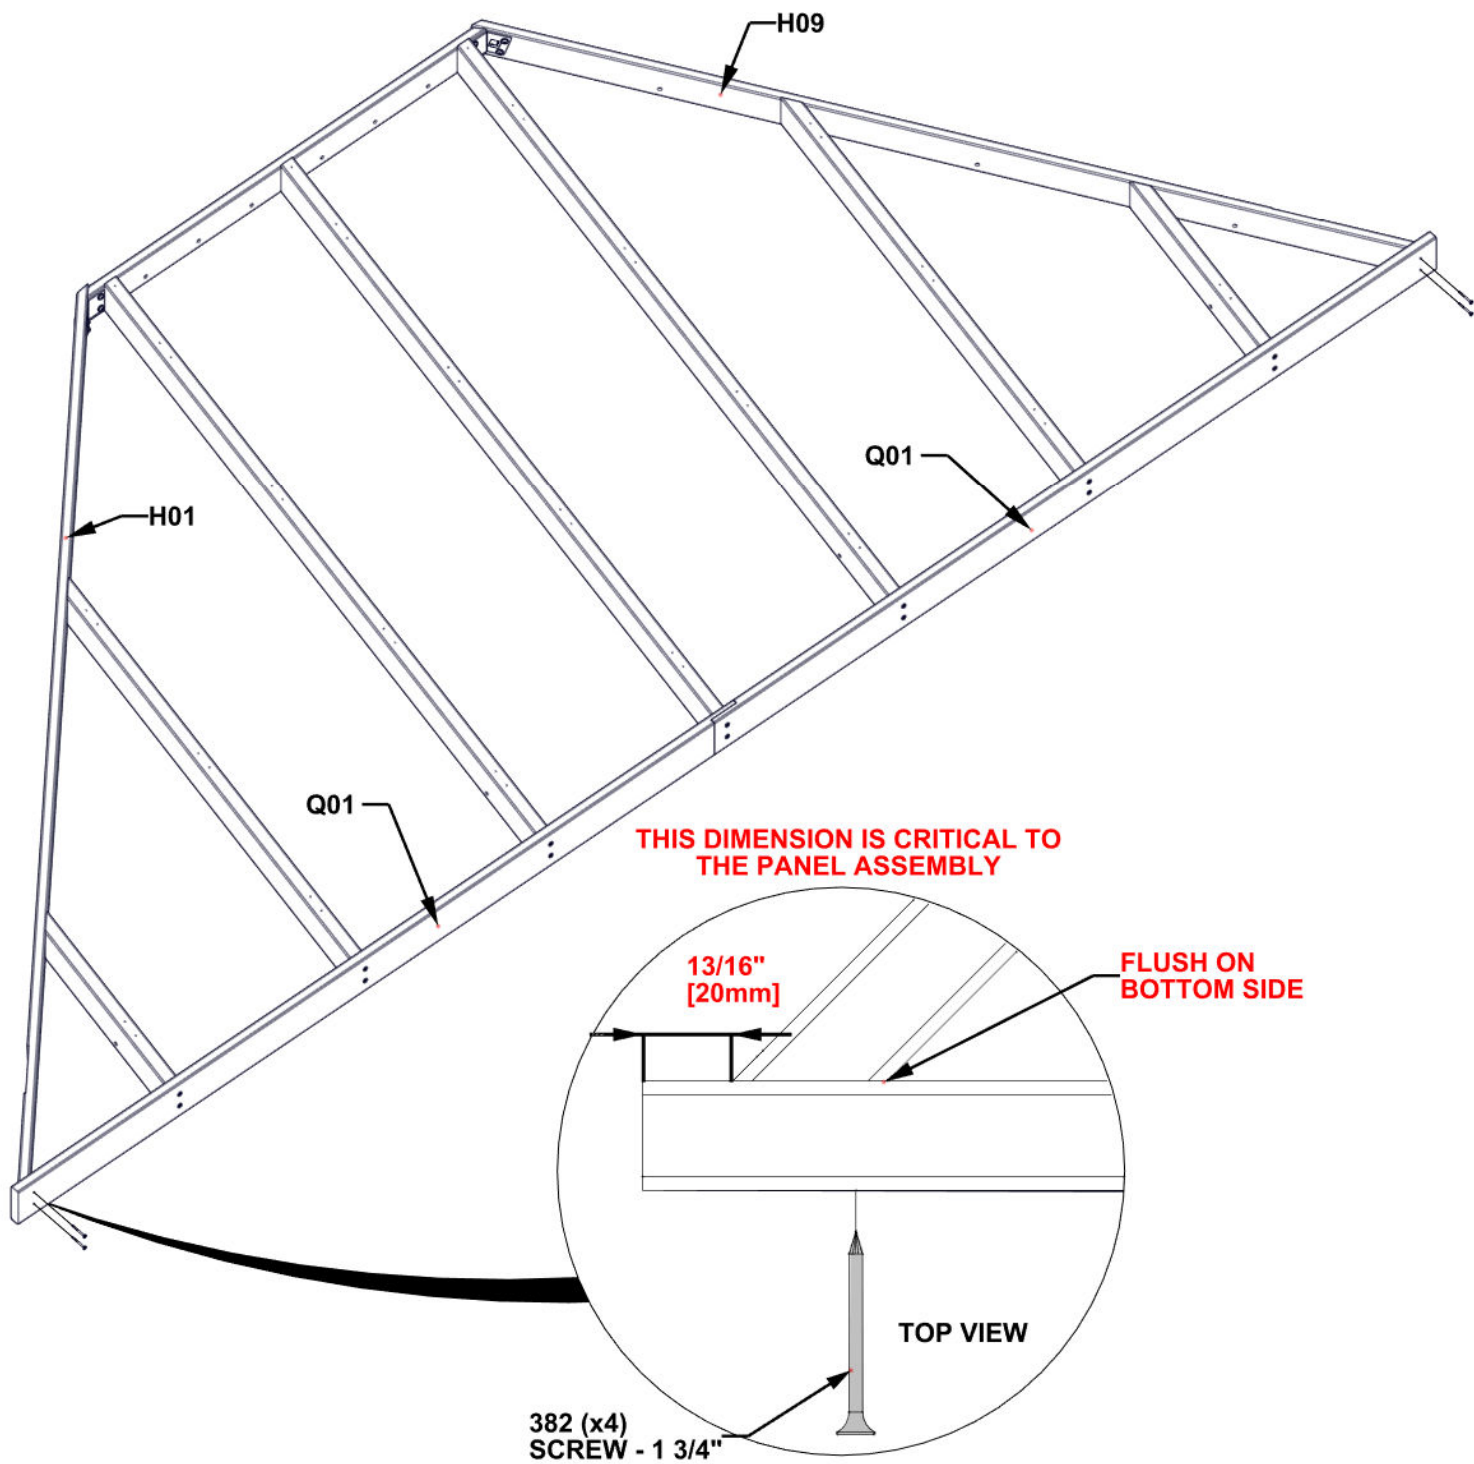


STEP 30 - 14FT ROOF PANEL ASSEMBLY

- LOOSEN HARDWARE TO ADJUST FOR SQUARING IF NEEDED.

CRITICAL:

- SQUARE UNIT BEFORE PROCEEDING TO NEXT STEPS.
- THE BELOW DIMENSIONS ARE CRITICAL TO THE FINAL ROOF ASSEMBLY.
- DIMENSIONS ARE FROM CORNER TO CORNER OF ROOF PANEL.
- MEASUREMENTS SHOULD BE WITHIN $\pm 1/4"$.
- MEASUREMENTS OUTSIDE OF TOLERANCE WILL LEAD TO THE INABILITY TO ASSEMBLE THE ROOF.
- ONCE SQUARE, TIGHTEN ALL HARDWARE FROM PREVIOUS STEPS.

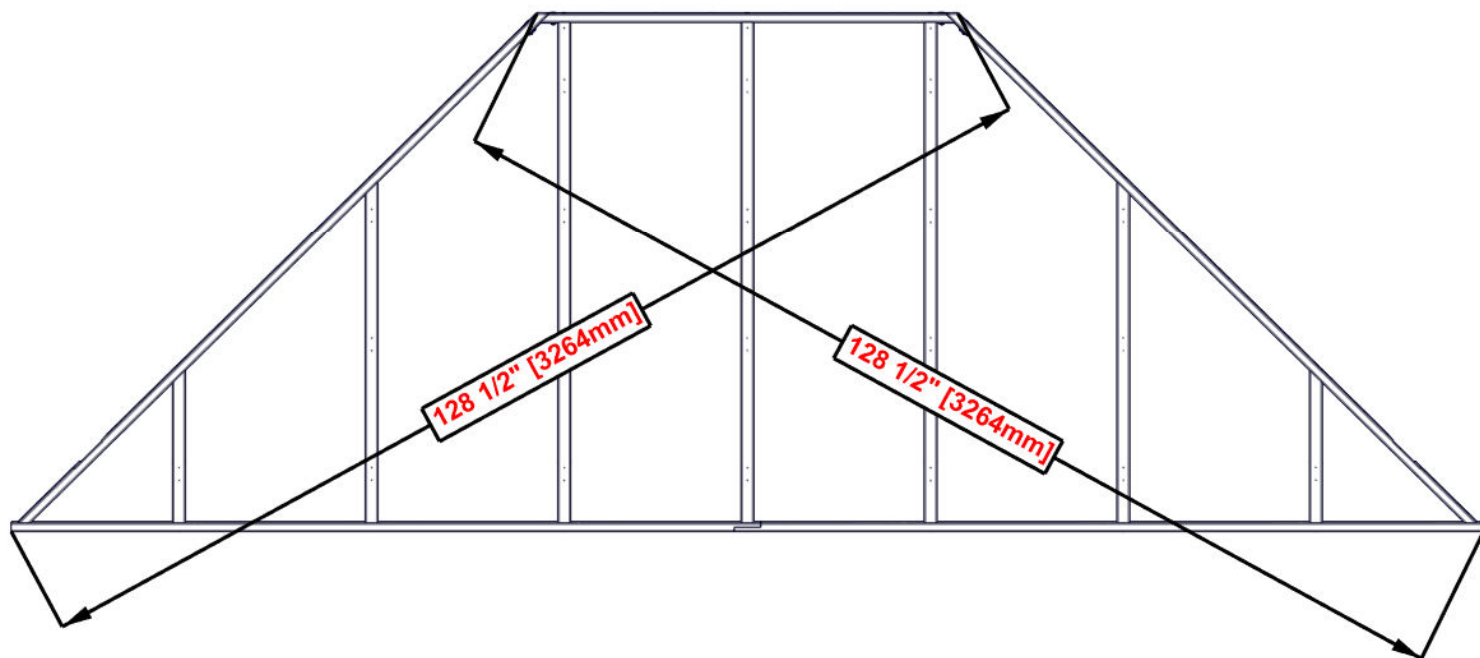

STEP 31 - 14FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
56	H100391	SCREW PFH 8x2 BLK
3	H100200	SCREW PFH 8x1 1/2 BLK



H17 PURLIN - W4L16289
(x1) 15/16"x1 5/16"x51 3/8" (24x34x1306)



H03 PURLIN - W4L16281
(x1) 15/16"x3 3/8"x68 3/8" (24x86x1736)



H07 PURLIN - W4L16292
(x2) 15/16"x3 3/8"x59 7/16" (24x86x1509)



H05 PURLIN - W4L16291
(x2) 15/16"x3 3/8"x65 1/2" (24x86x1664)




H08 PURLIN - W4L16293
(x2) 15/16"x3 3/8"x43 11/16" (24x86x1110)




H04 PURLIN - W4L16921
(x2) 15/16"x3 3/8"x29 5/8" (24x86x752)

- ALIGN PURLIN PILOT HOLES WITH RAFTER PILOT HOLES.
- ATTACH SCREWS FROM THE CENTER AND WORK OUTWARDS.
- H01 AND H09 BOARDS DO NOT HAVE PILOT HOLES FOR THE OUTSIDE EDGE SCREWS.
- USING THE PURLINS AS A GUIDE AND A 1/8" [3mm] DRILL BIT AND DRILL PILOT HOLES INTO H01 AND H09.

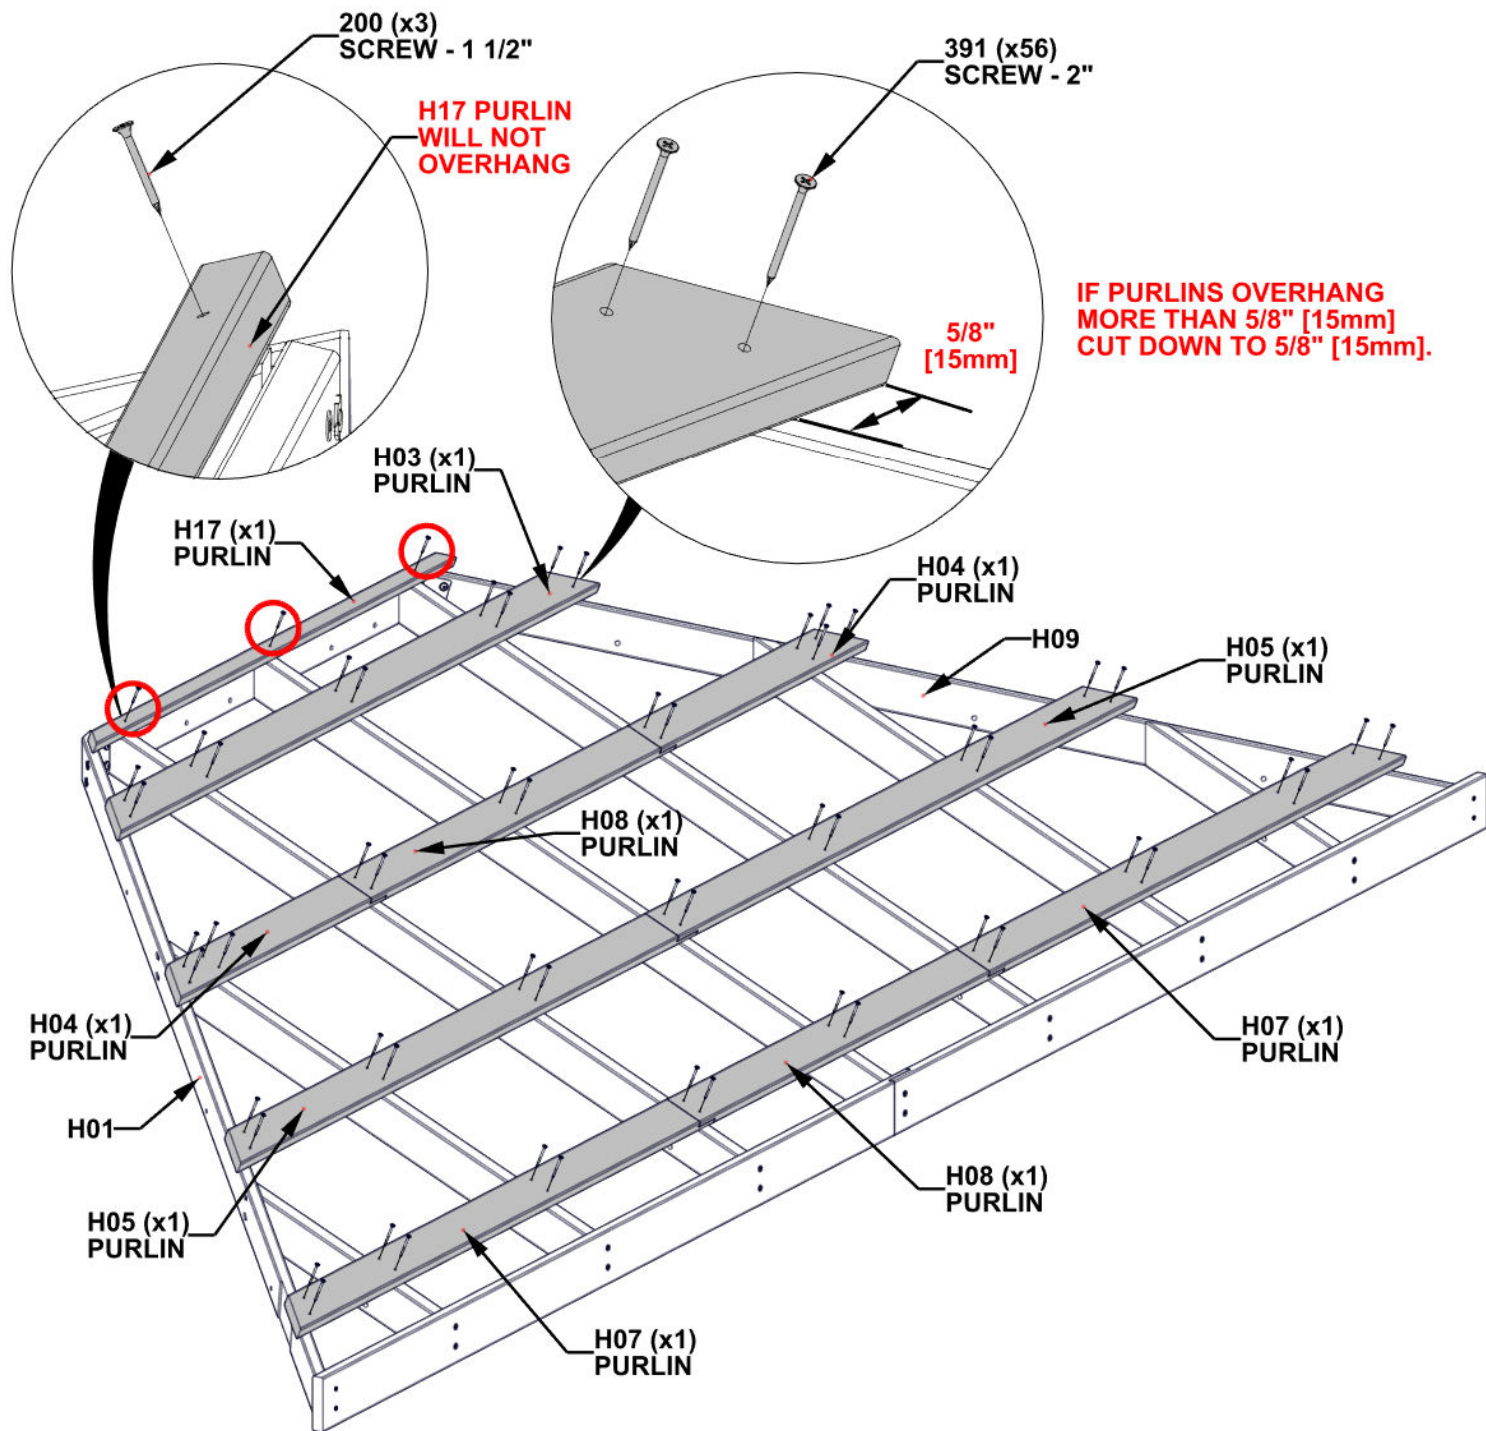


STEP 32 - 14FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
32	H101480	SCREW SELF TAPPING #9x3/4 BLK

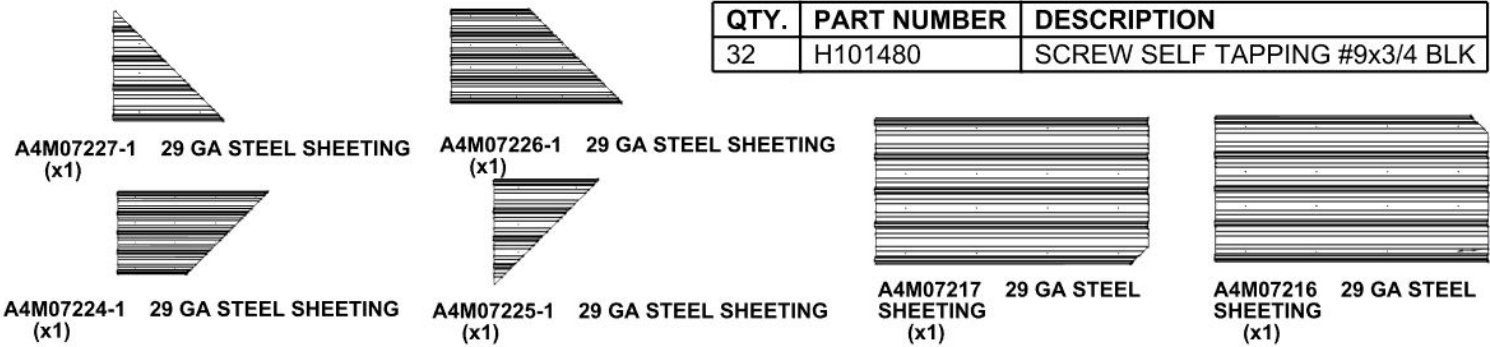


- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- **REMOVE PROTECTIVE FILM.**
- **STARTING IN THE CENTER, PLACE PANELS AS SHOWN BELOW.**
- **OVERLAP PANELS BY ONE RIDGE.**
- **PANELS SHOULD BE FLUSH WITH PURLIN ENDS AND Q01 ROOF JOIST.**
- **ONCE SHEETING IS IN PLACE, IT IS RECOMMENDED TO ADD H101480 SCREWS IN THE MIDDLE OF SHEETS TO HOLD SHEETING FOR THE NEXT STEP.**

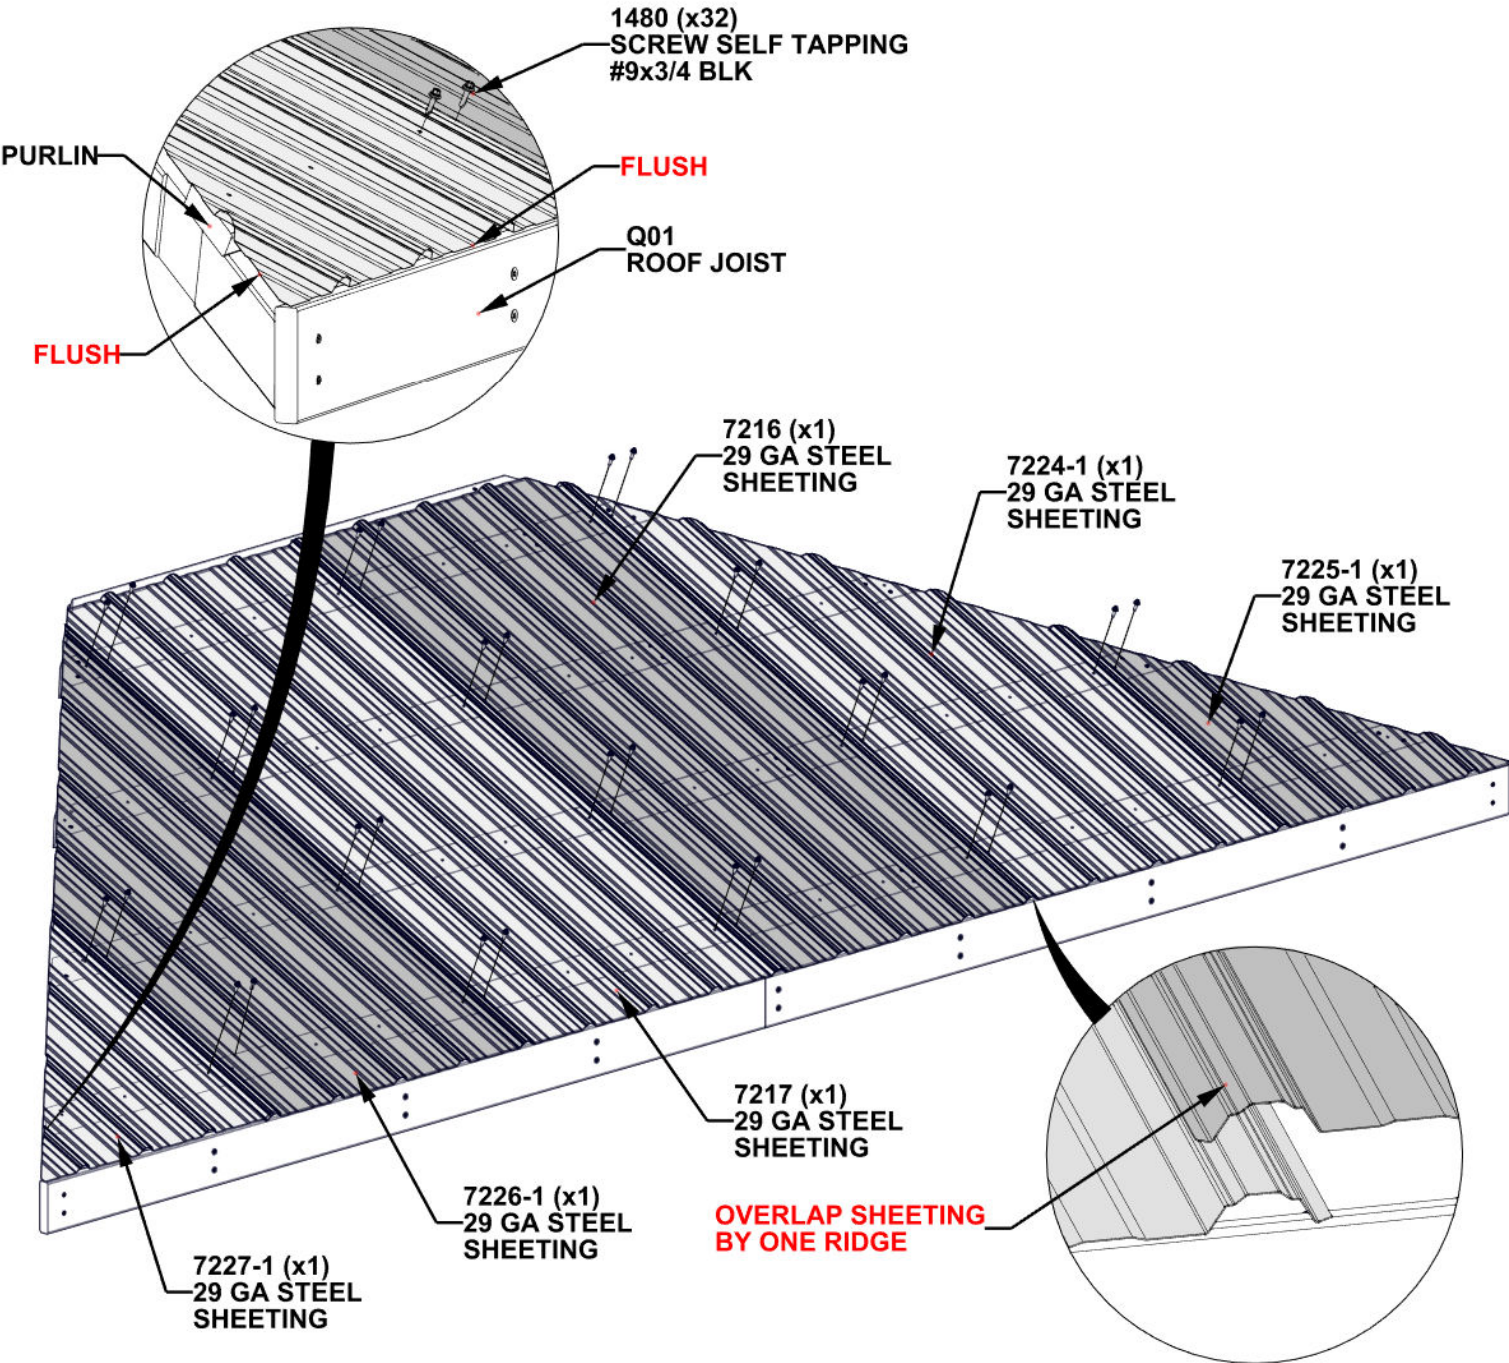

STEP 33 - 14FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
8	H101480	SCREW SELF TAPPING #9x3/4 BLK

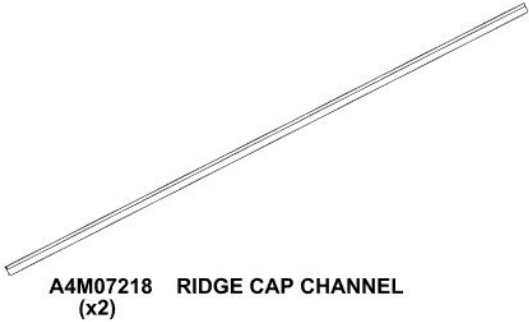


- REMOVE PROTECTIVE FILM.
- POSITION THE RIDGE CAP CHANNEL OVER THE EDGE OF THE ROOF PANELS WITH THE WIDER SIDE OF THE CHANNEL ON THE BOTTOM.
- MAKE SURE THE PANELS ARE FULLY SEATED INTO THE CHANNEL.
- FLUSH THE TOP OF THE CHANNEL WITH THE TOP OF THE METAL PANELS.


1480 (x8)
SCREW SELF TAPPING
#9x3/4 BLK

PURLIN UNDERNEATH
TIN SHEETING

RIDGE CAP CHANNEL TO
BE FLUSH WITH SHEETING

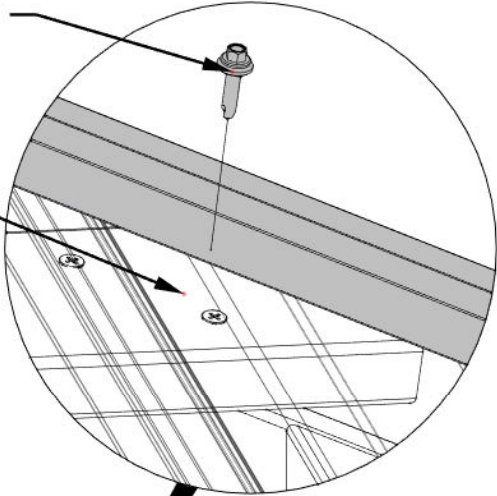

7218 (x1)
RIDGE CAP CHANNEL

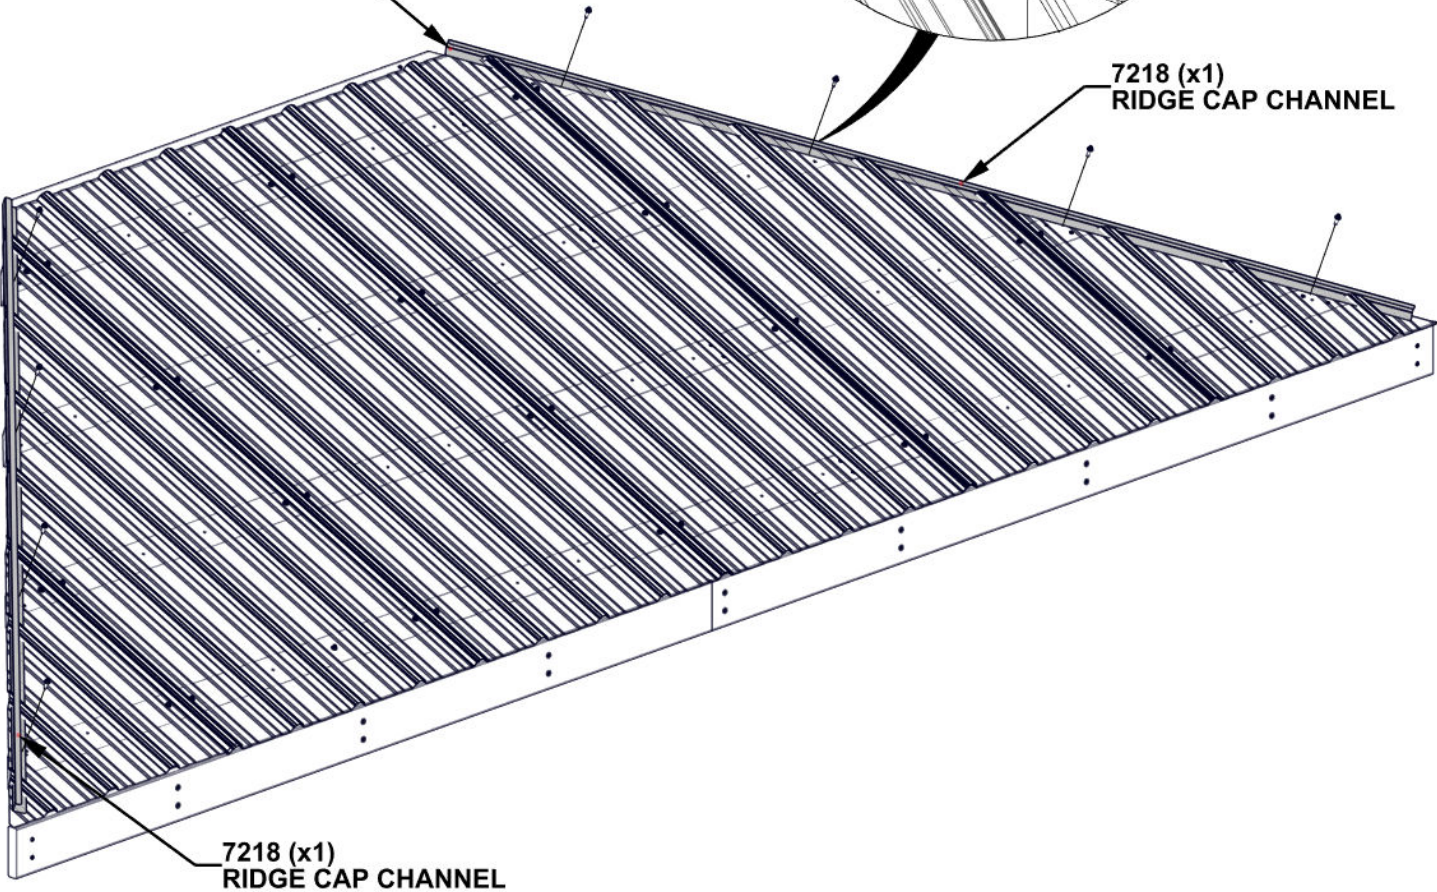


7218 (x1)
RIDGE CAP CHANNEL

STEP 34 - 14FT ROOF PANEL ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
30	H101480	SCREW SELF TAPPING #9x3/4 BLK

- ALIGN PILOT HOLES AND INSERT REMAINING SCREWS TO FASTEN SHEET METAL IN PLACE.
- MAKE SURE SHEET EDGES ARE FLUSH AS SHOWN.


1480 (x30)
SCREW SELF TAPPING
#9x3/4 BLK

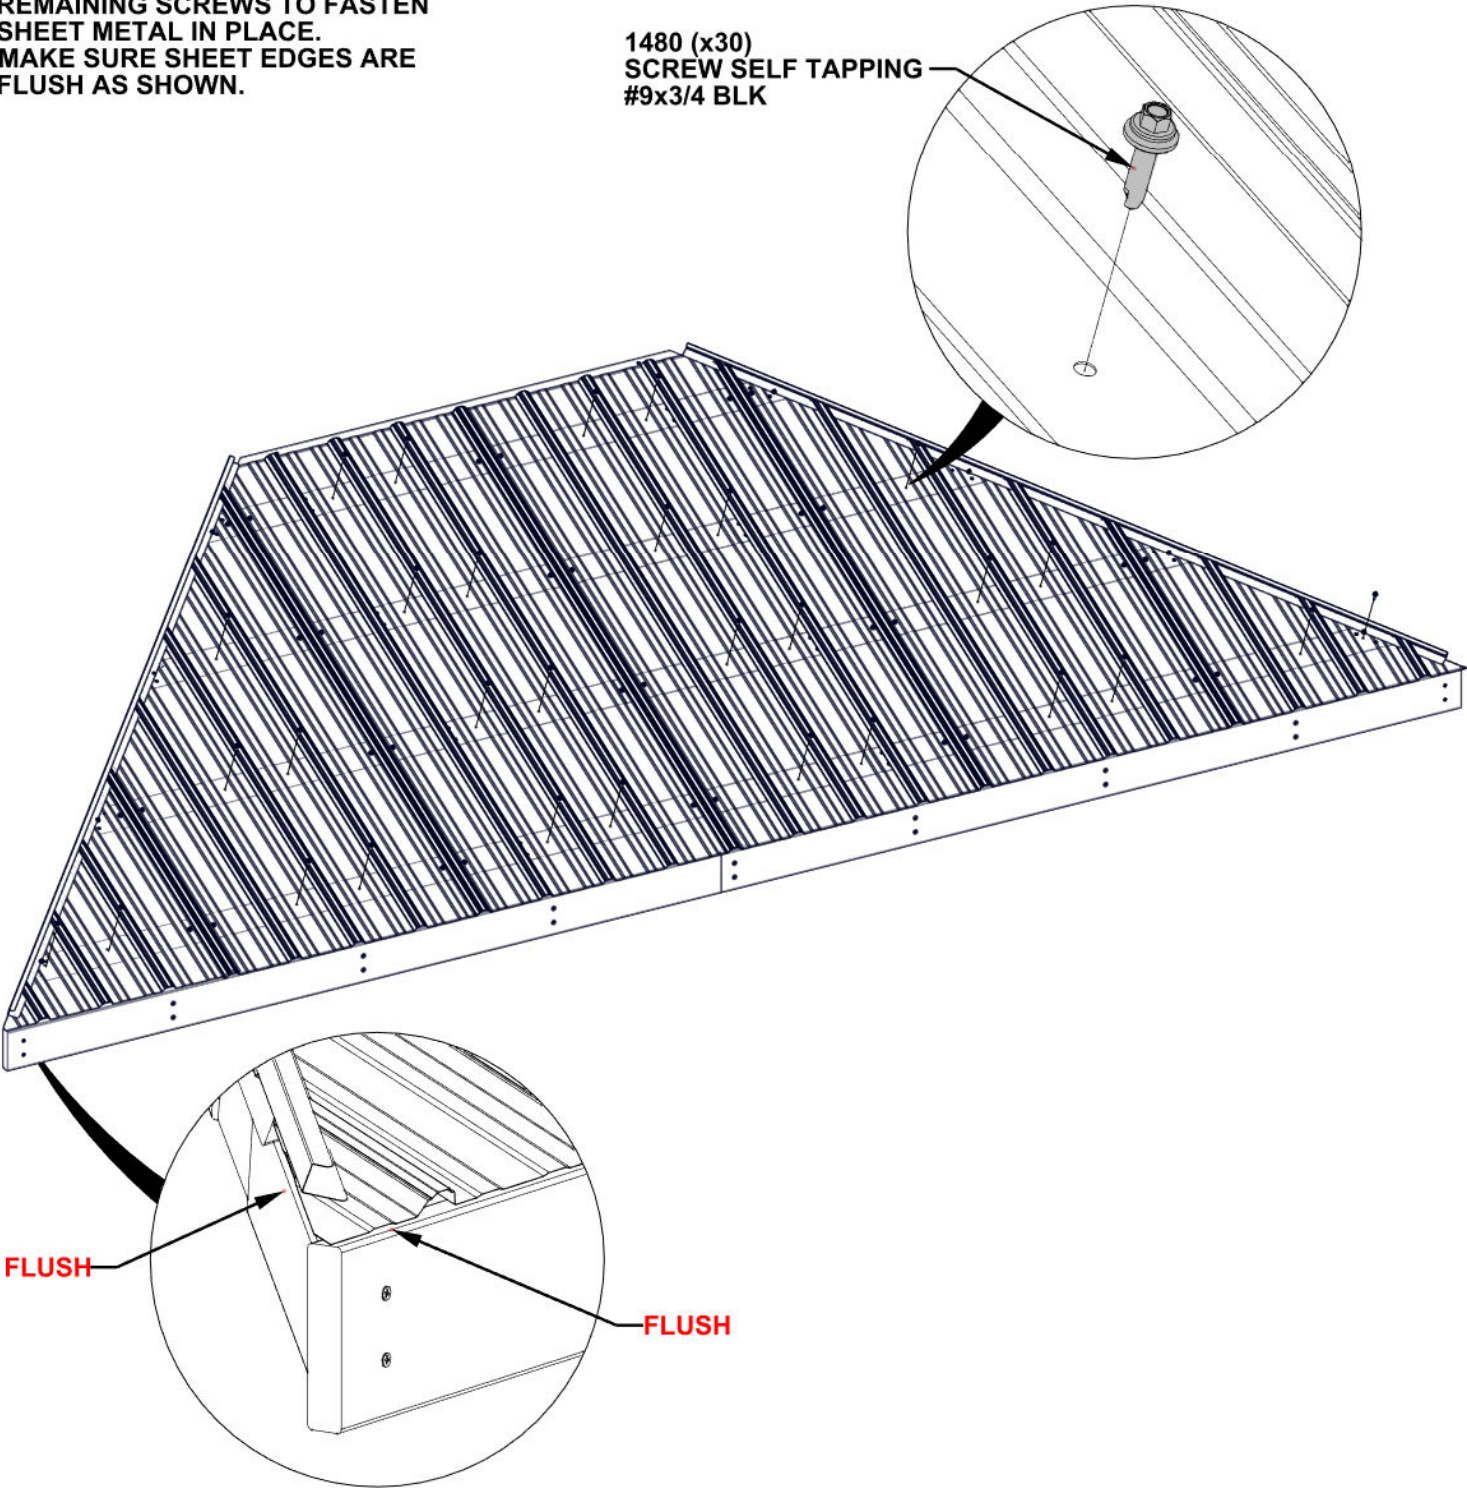

**REPEAT PREVIOUS STEPS 25 THROUGH 34 TO
BUILD SECOND 14FT ROOF PANEL**

STEP 35A - 10FT ROOF PANEL ATTACHMENT


- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- THREE PEOPLE ARE RECOMMENDED FOR THIS STEP.
- POSITION A PERSON ON A LADDER IN THE CENTER OF THE GAZEBO TO HELP SUPPORT THE ROOF PANEL.
- WITH TWO PEOPLE, WORK THE PANEL UP WITHOUT SLIDING OR DRAGGING, UNTIL IT MEETS THE ROOF SUPPORT FRAME.
- MAKE SURE THE ROOF PANEL SLIDES UNDERNEATH THE RIDGE PEAK CAP.

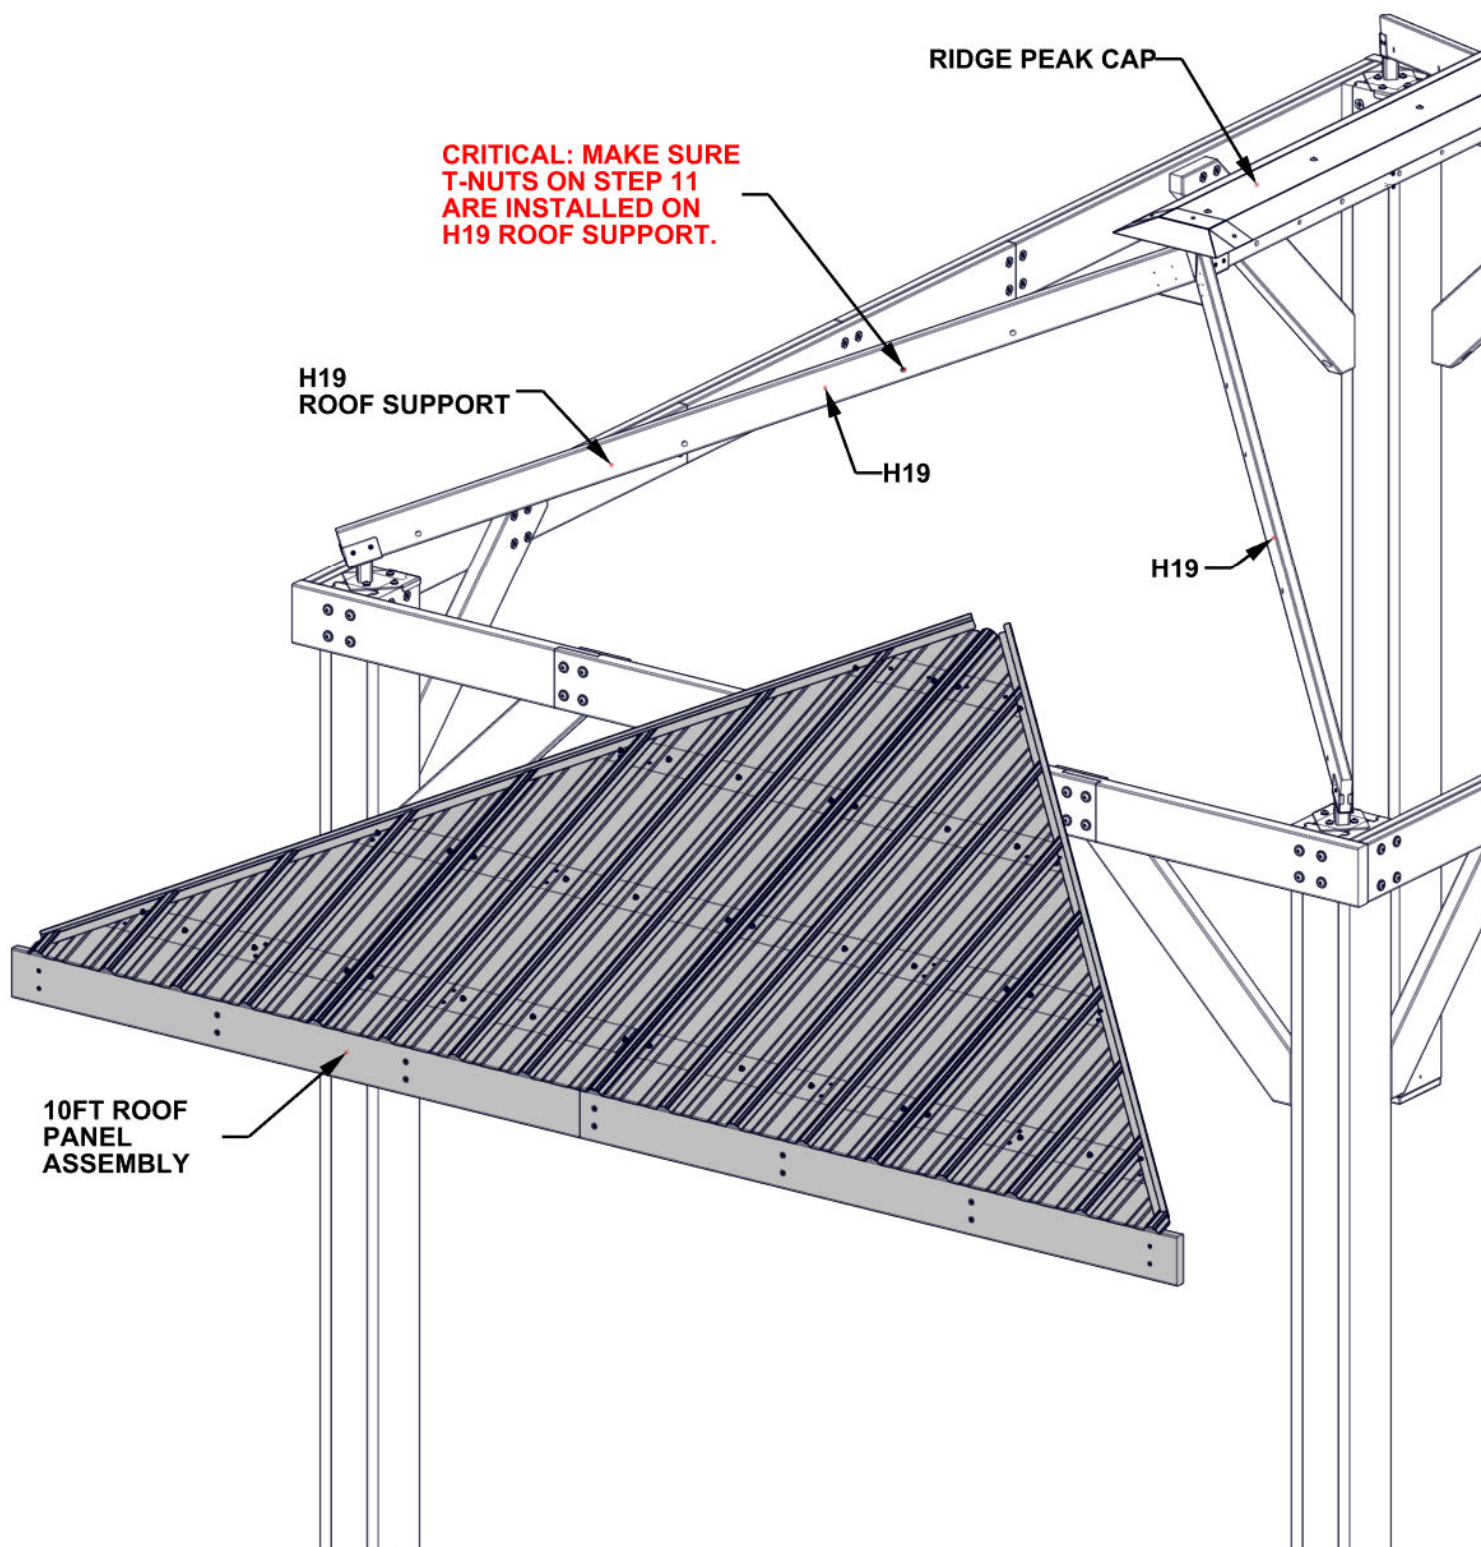

STEP 35B - 10FT ROOF PANEL ATTACHMENT

QTY.	PART NUMBER	DESCRIPTION
2	H100378	BOLT WH 5/16x1 3/4 BLK
2	H100198	WASHER LOCK EXT 8x19

- TIPS:
- IF NECESSARY USE CLAMPS TO HOLD PANEL IN PLACE.
- INSERT BOLTS INTO FIRST HOLE FROM THE TOP OF H12 AND H10.
- **HAND TIGHTEN ONLY.**

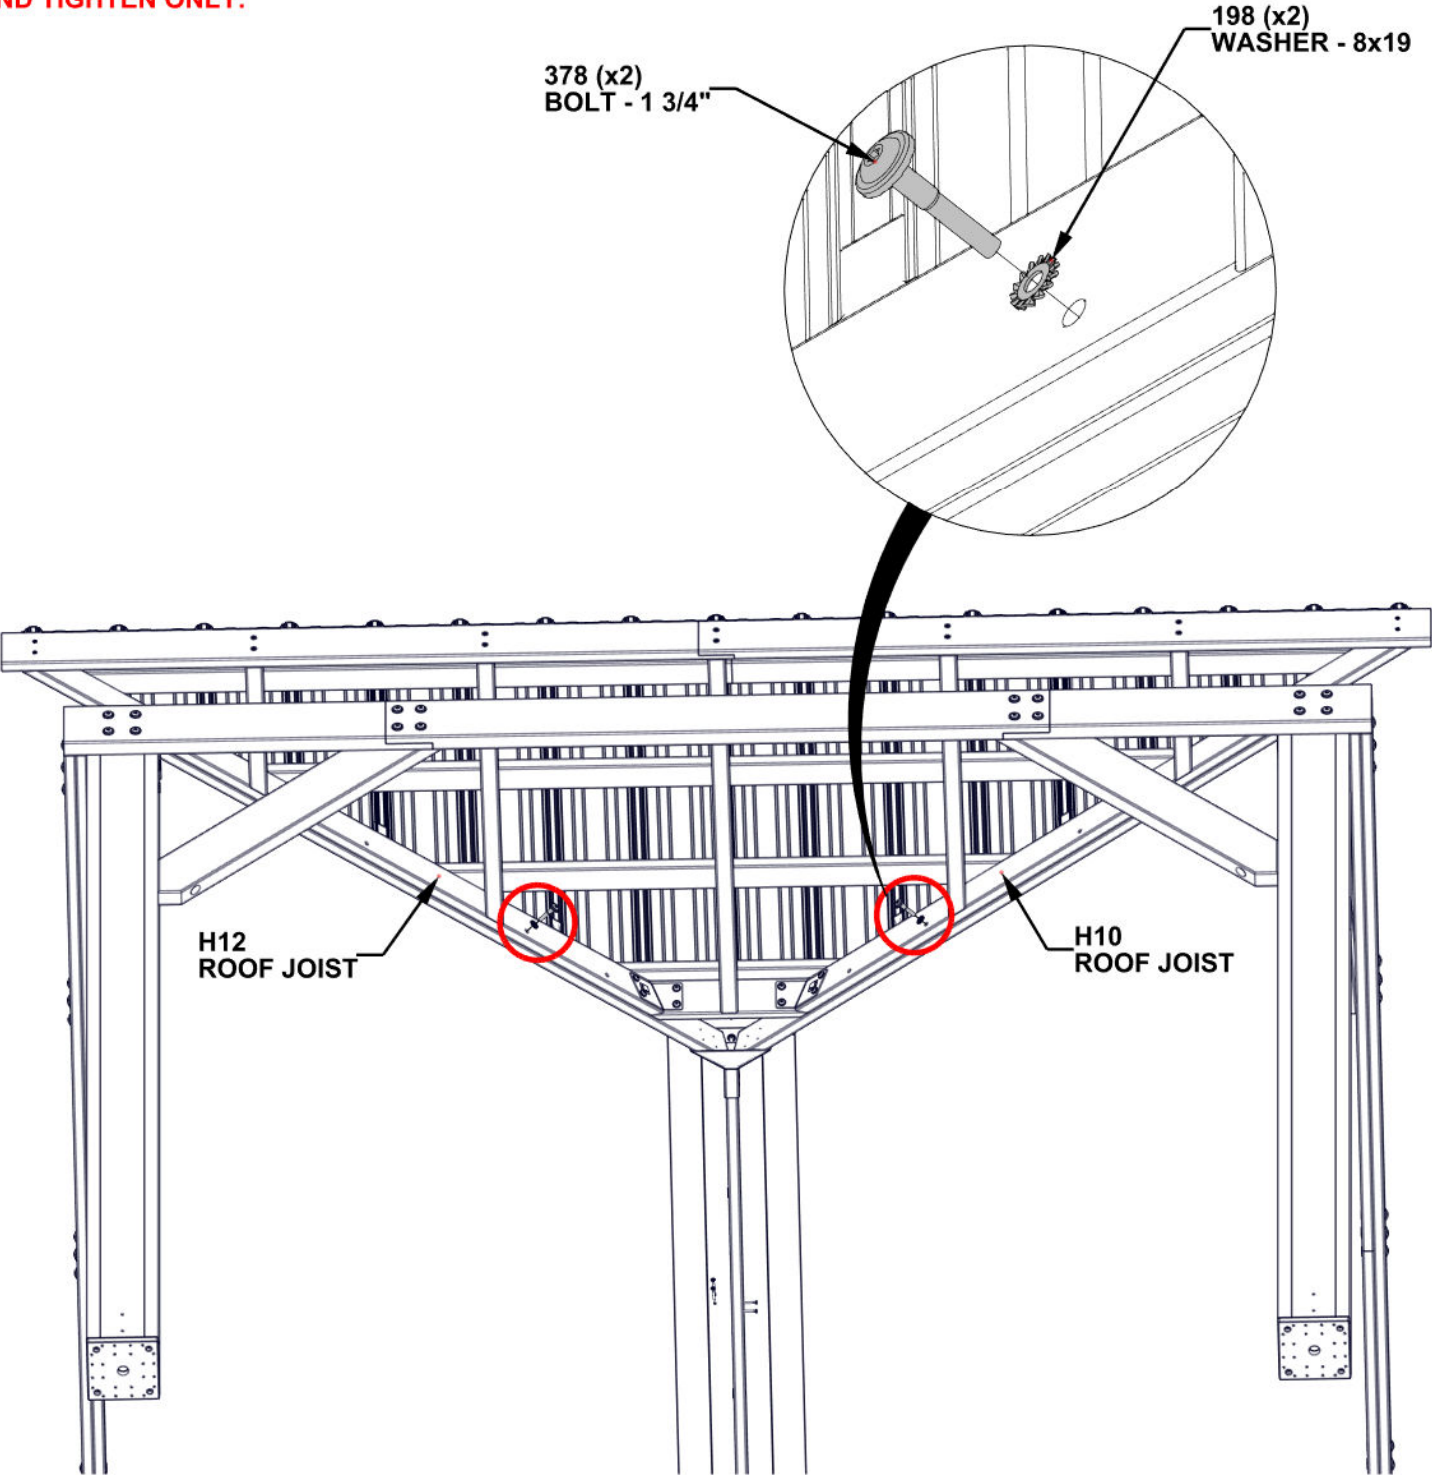


**REPEAT 10FT ROOF PANEL ATTACHMENT
STEPS 35A & 35B**

STEP 36 - 14FT ROOF PANEL ATTACHMENT

- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- THREE PEOPLE ARE RECOMMENDED FOR THIS STEP.
- POSITION A PERSON ON A LADDER IN THE CENTER OF THE GAZEBO TO HELP SUPPORT THE ROOF PANEL.
- WITH TWO PEOPLE, WORK THE PANEL UP WITHOUT SLIDING OR DRAGGING, UNTIL IT MEETS THE ROOF SUPPORT FRAME.
- MAKE SURE THE ROOF PANEL SLIDES UNDERNEATH THE RIDGE PEAK CAP.


SEE NEXT STEP FOR ROOF PANEL HARDWARE ATTACHMENT

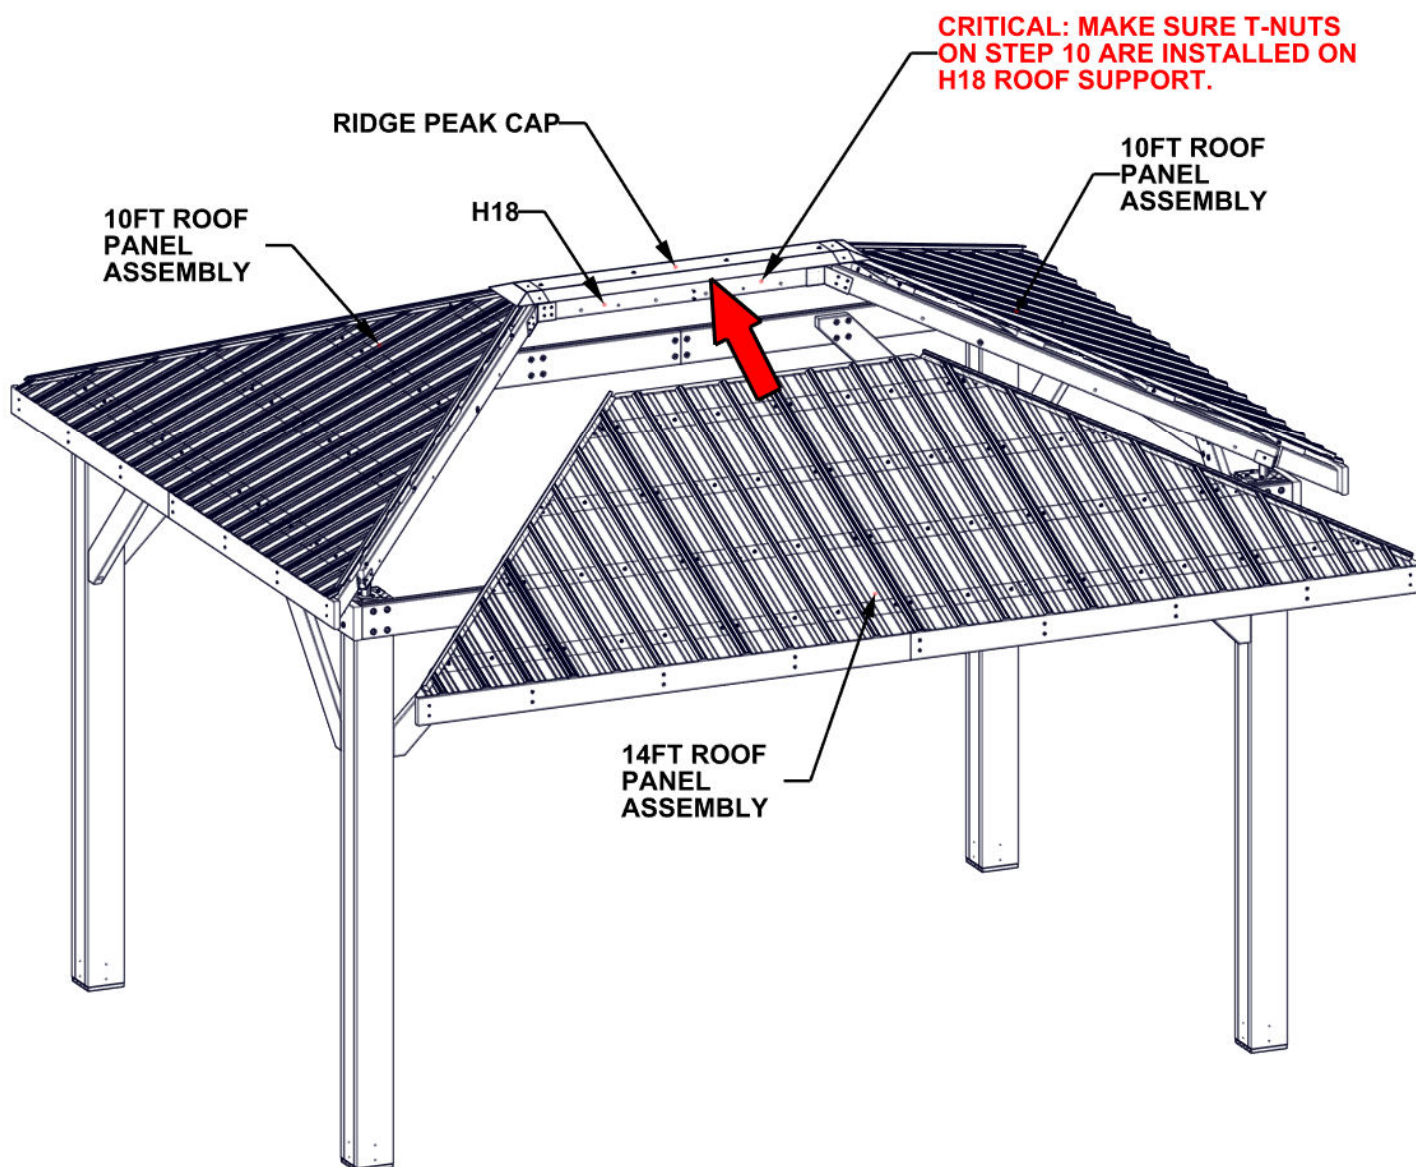

STEP 37 - 14FT ROOF PANEL ATTACHMENT

QTY.	PART NUMBER	DESCRIPTION
2	H100198	WASHER LOCK EXT 8x19
2	H100378	BOLT WH 5/16x1 3/4 BLK


- TIPS:
- IF NECESSARY USE CLAMPS TO HOLD PANEL IN PLACE.
- HAND TIGHTEN ONLY.

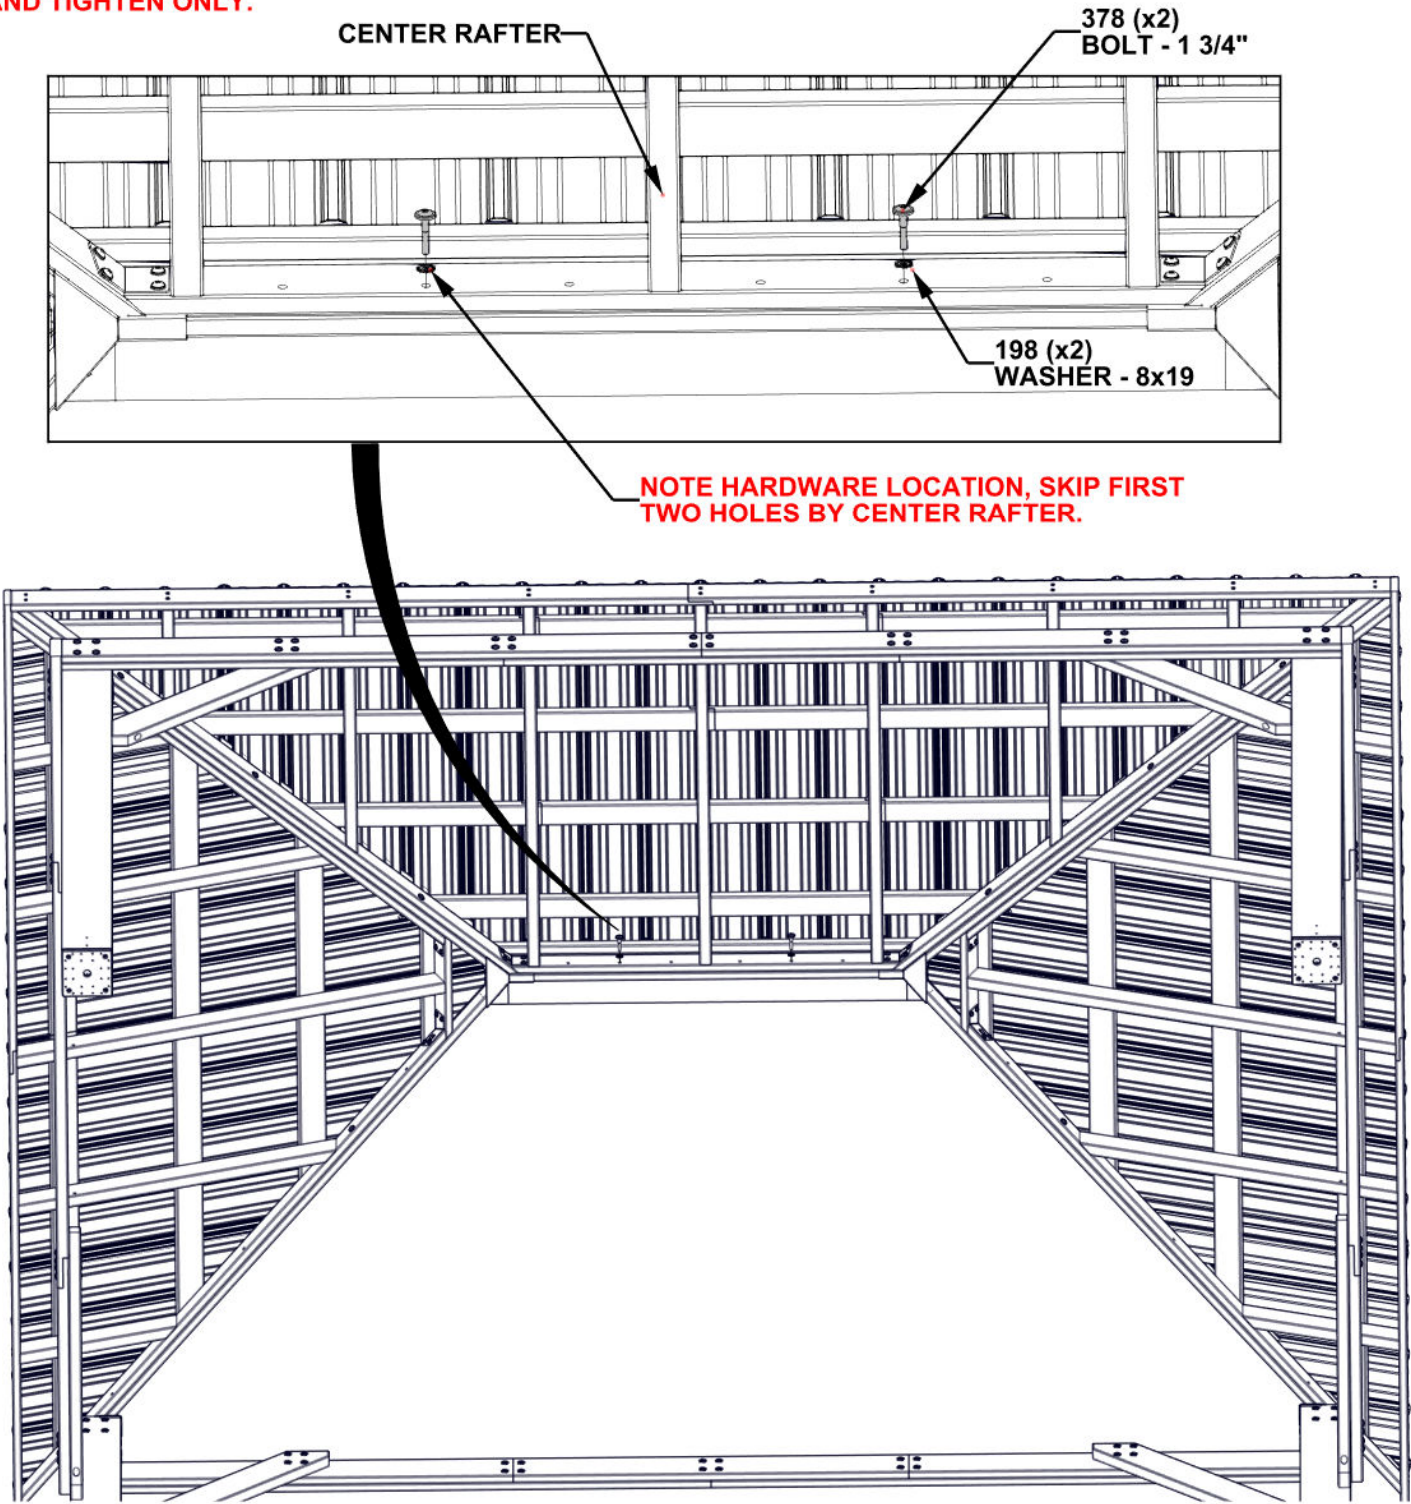

STEP 38 - 14FT ROOF PANEL ATTACHMENT

QTY.	PART NUMBER	DESCRIPTION
4	H100770	WASHER FLAT 5/16 BLK
4	H100479	NUT LOCK 5/16 BLK
4	H100198	WASHER LOCK EXT 8x19
4	H100415	BOLT WH 5/16x3 3/4 BLK


- TIPS:
- REPEAT STEP 36 FOR SECOND 14FT ROOF PANEL.
- IF NECESSARY USE CLAMPS TO HOLD PANEL IN PLACE.
- **HAND TIGHTEN ONLY.**

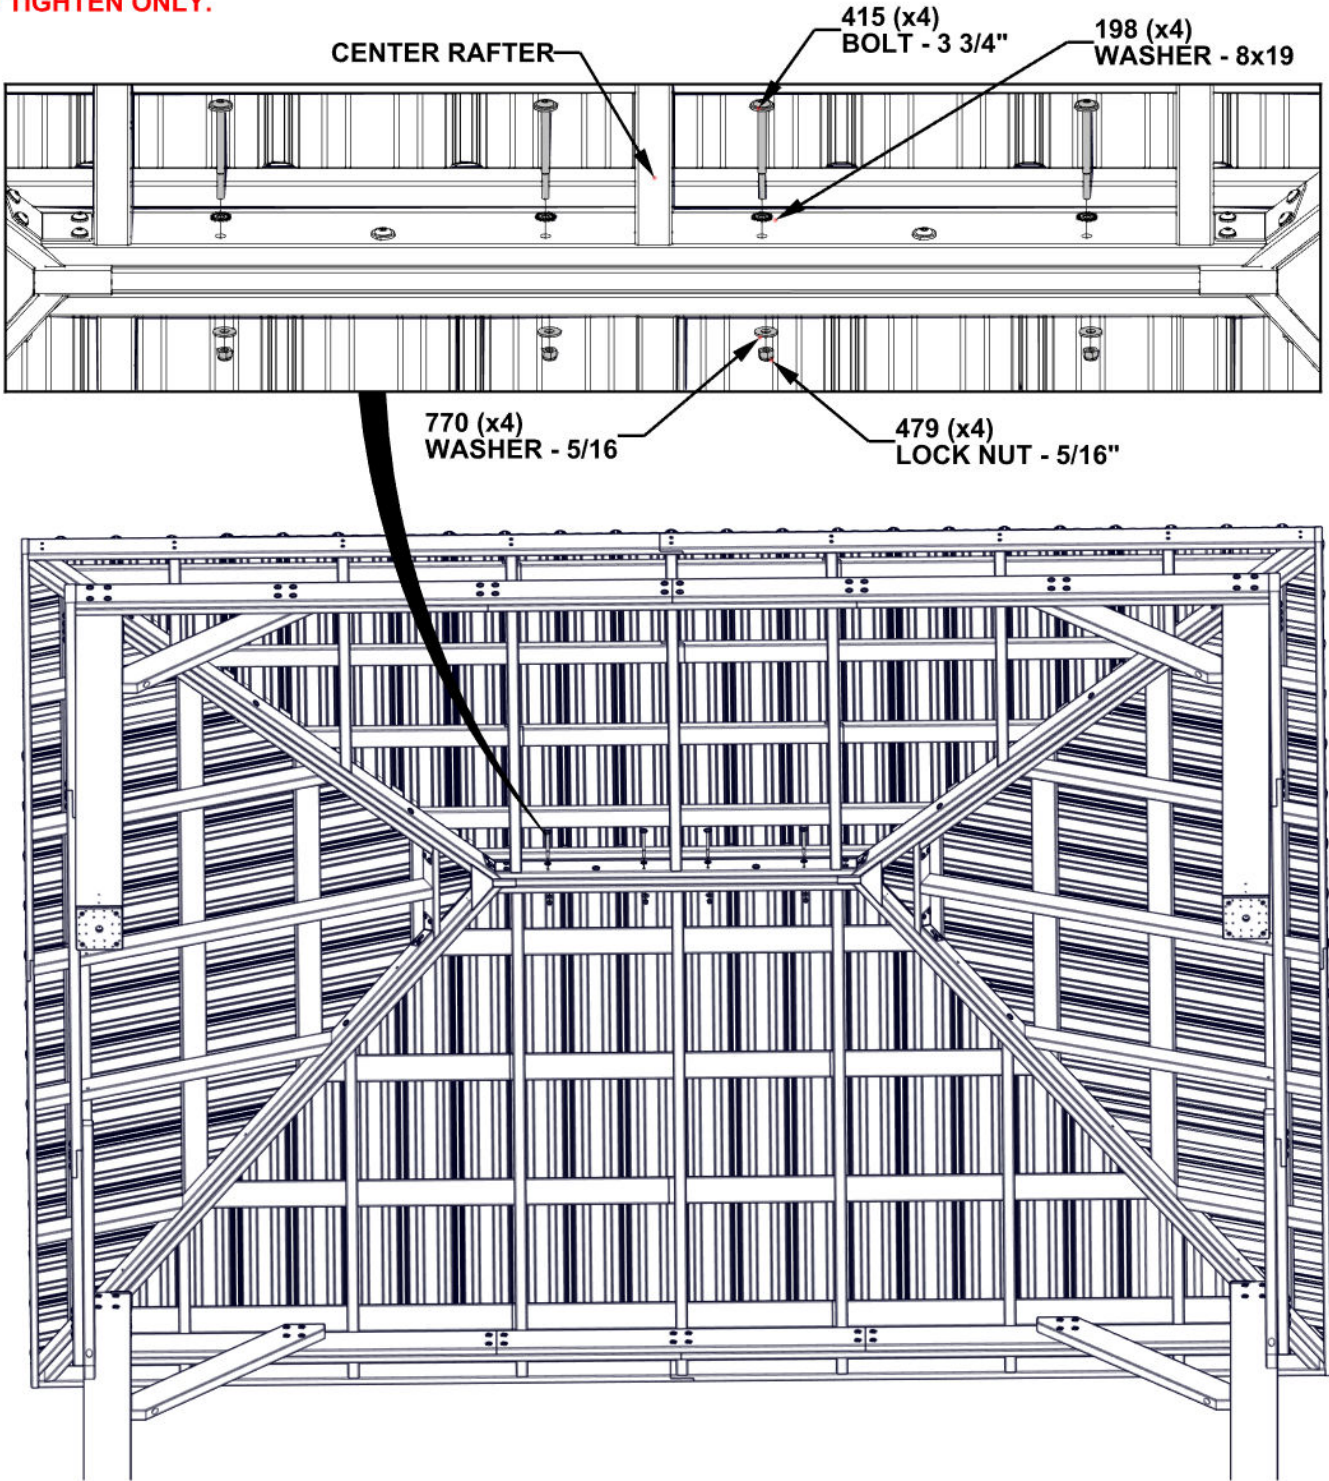

STEP 39 - 14FT ROOF PANEL ATTACHMENT


QTY.	PART NUMBER	DESCRIPTION
12	H100198	WASHER LOCK EXT 8x19
12	H100770	WASHER FLAT 5/16 BLK
12	H100479	NUT LOCK
12	H100415	BOLT WH 5/16x3 3/4 BLK

- HAND TIGHTEN ONLY.

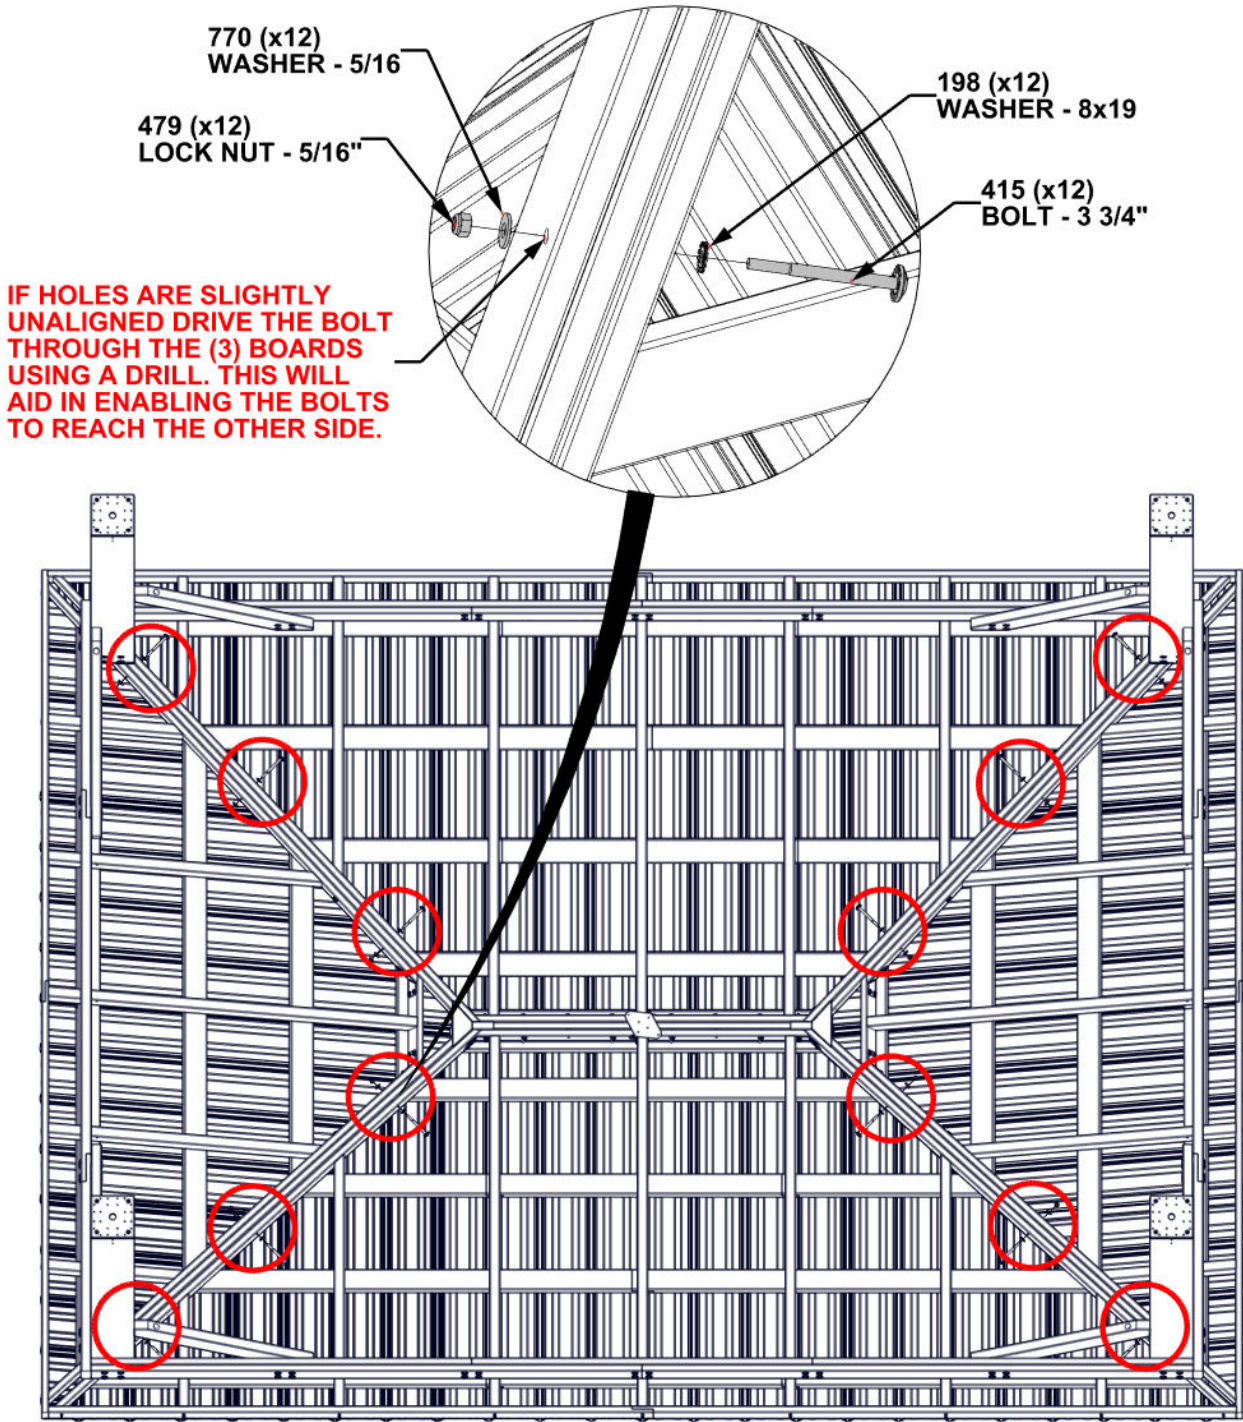


STEP 40 - ROOF PANEL ATTACHMENT

TIGHTEN ALL THE HARDWARE IN THE ORDER SHOWN BELOW.
START AT THE TOP AND WORK YOUR WAY DOWN.

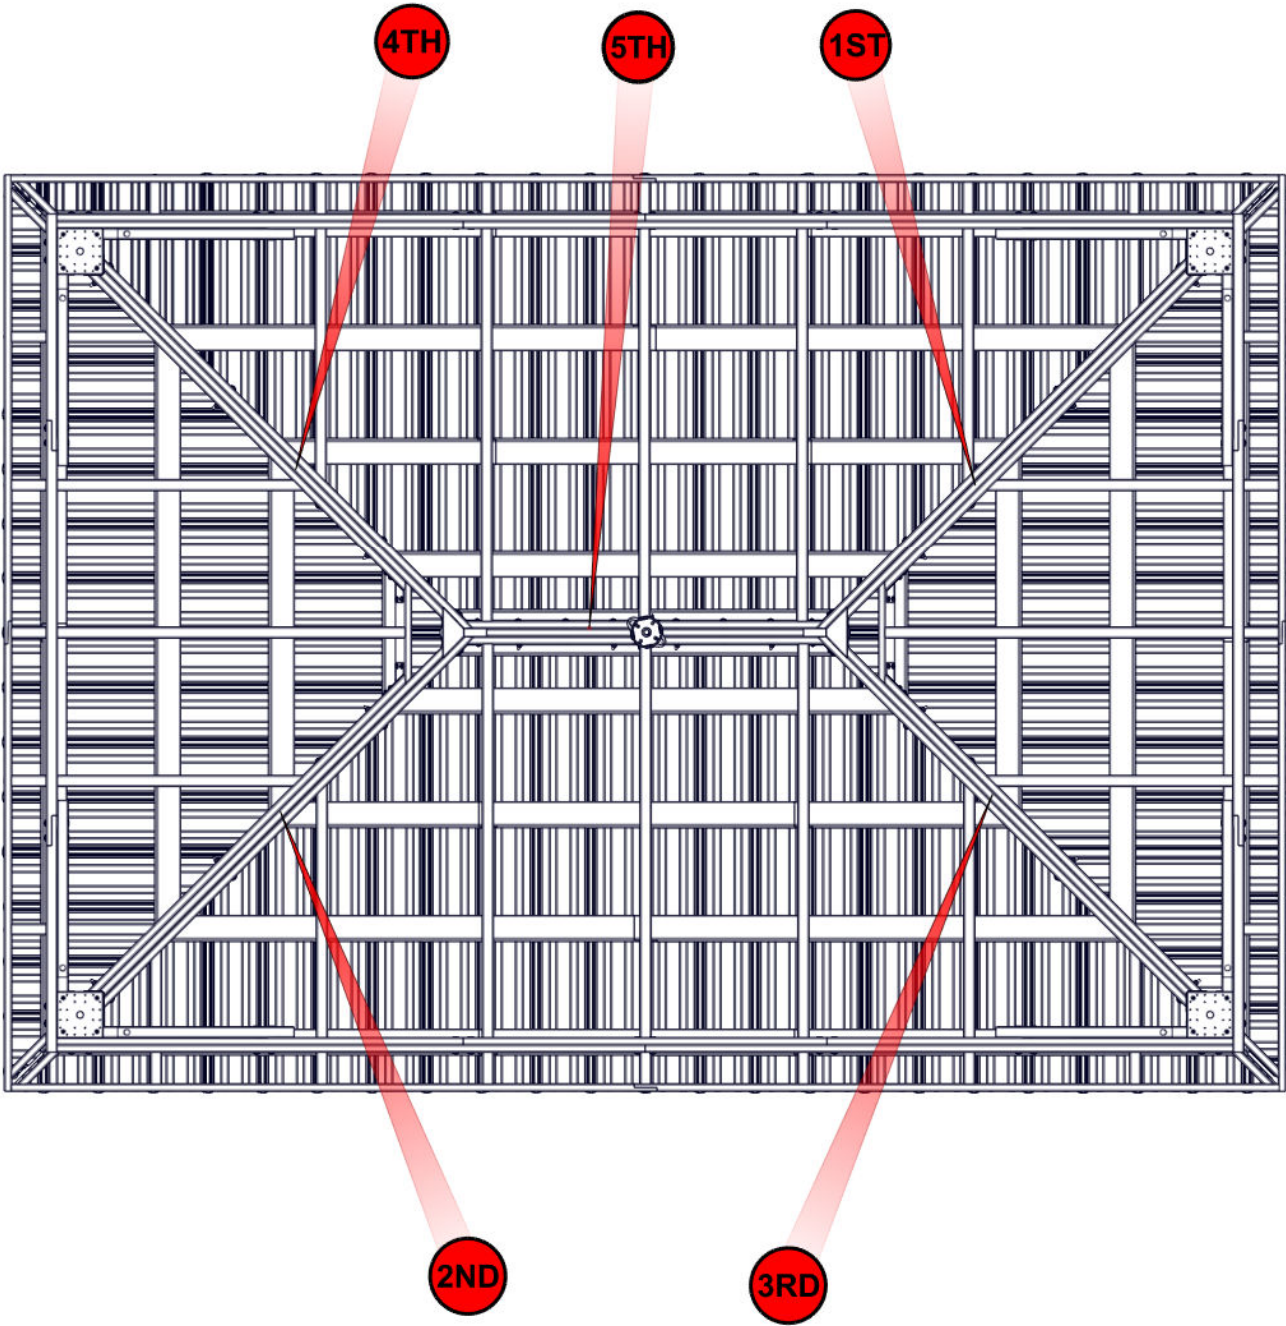


STEP 41 - ROOF ASSEMBLY

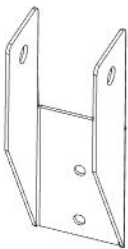

A4M01228 RAFTER CLIP
(x18)

QTY.	PART NUMBER	DESCRIPTION
36	H100536	SCREW PWH 8x1 1/4 BLK
18	H100630	WASHER FLAT 8x19 BLK
18	H100653	NUT LOCK 1/4 BLK
18	H100488	BOLT WH 1/4x2 BLK

- ATTACH RAFTER CLIPS FIRST WITH 2" [51mm] BOLTS.
- USING THE BRACKET AS A TEMPLATE & A 1/8" [3mm] DRILL BIT. DRILL PILOT HOLES FOR THE H100536 SCREWS.
- DRILL PILOT HOLES APPROXIMATELY 1/2" [13mm] DEEP.

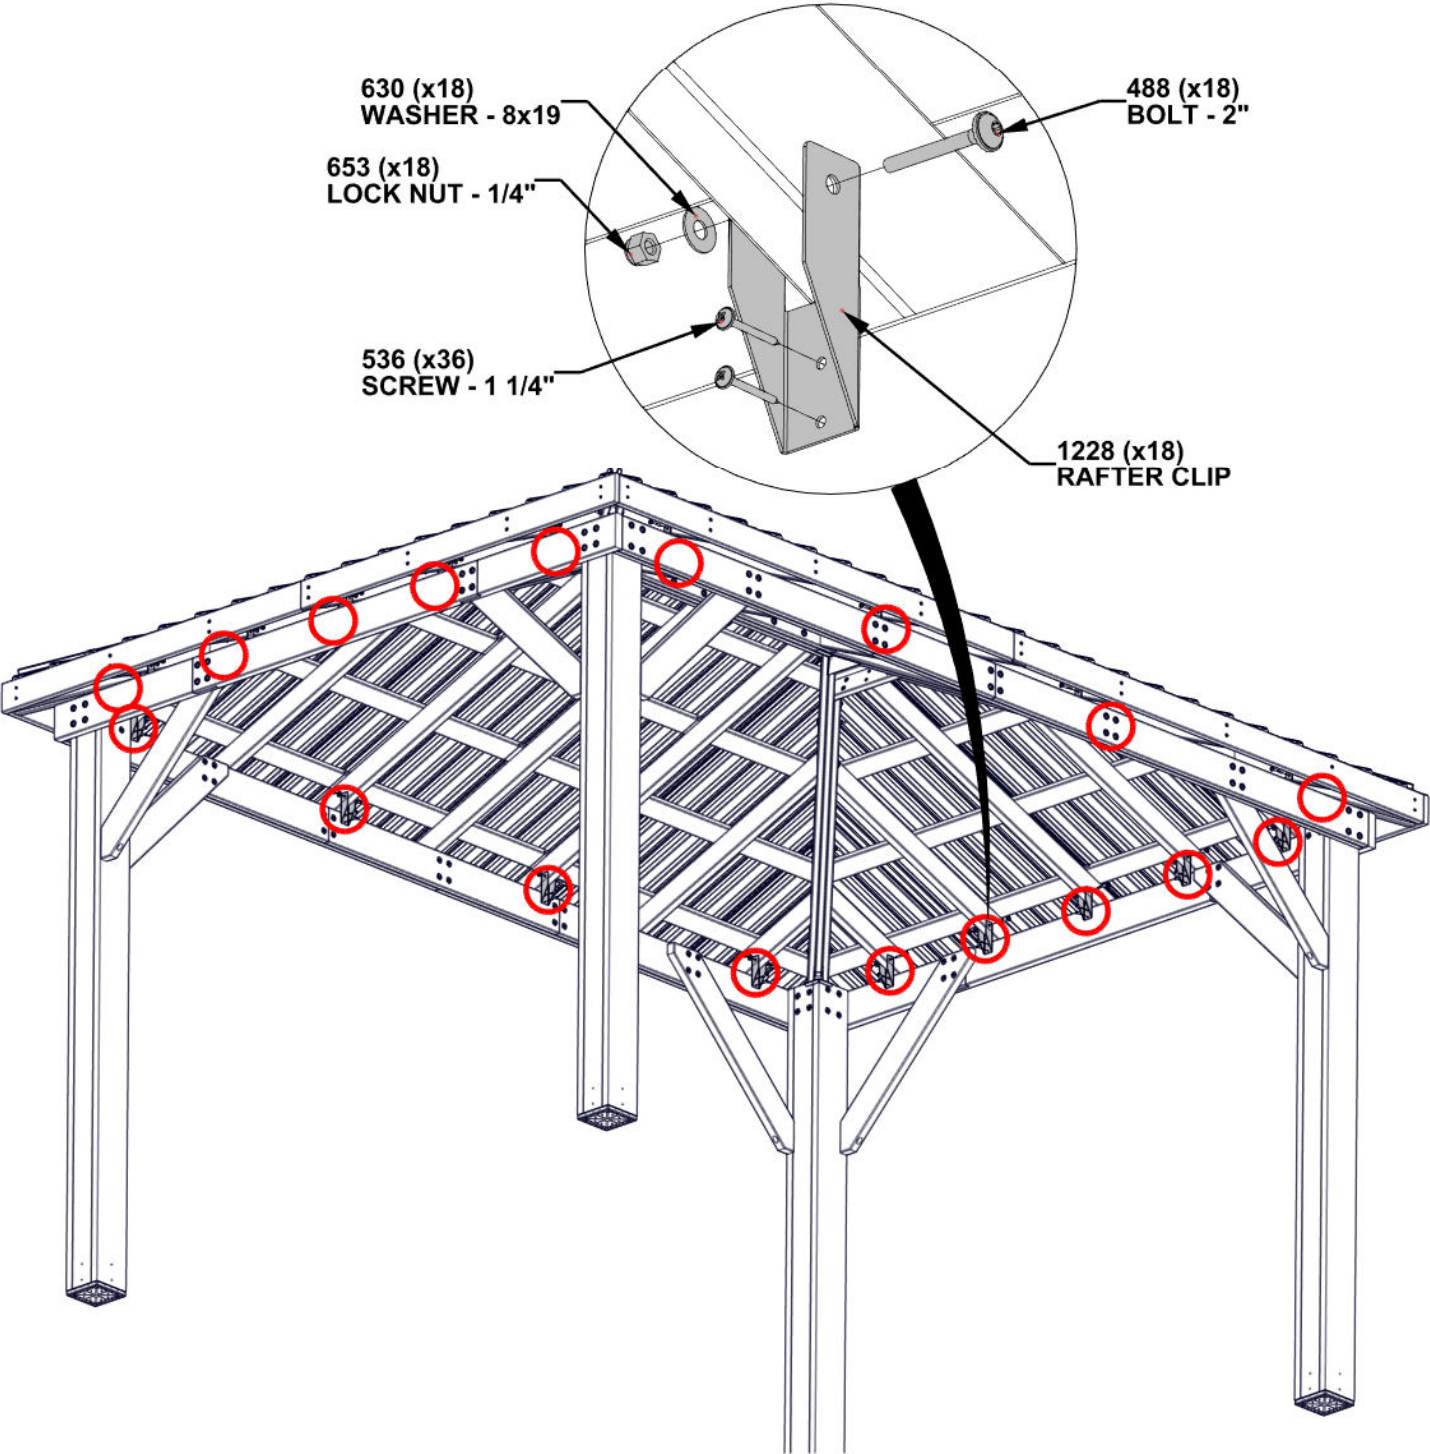


STEP 42 - ROOF ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
16	H100392	SCREW PWH 8x3/4 BLK




A4M01185 CORNER BRACKET
(x4)

- USING THE CORNER BRACKETS AS A GUIDE & 1/8" [3mm] DRILL BIT, PREDRILL HOLES AT EACH BRACKET LOCATION.

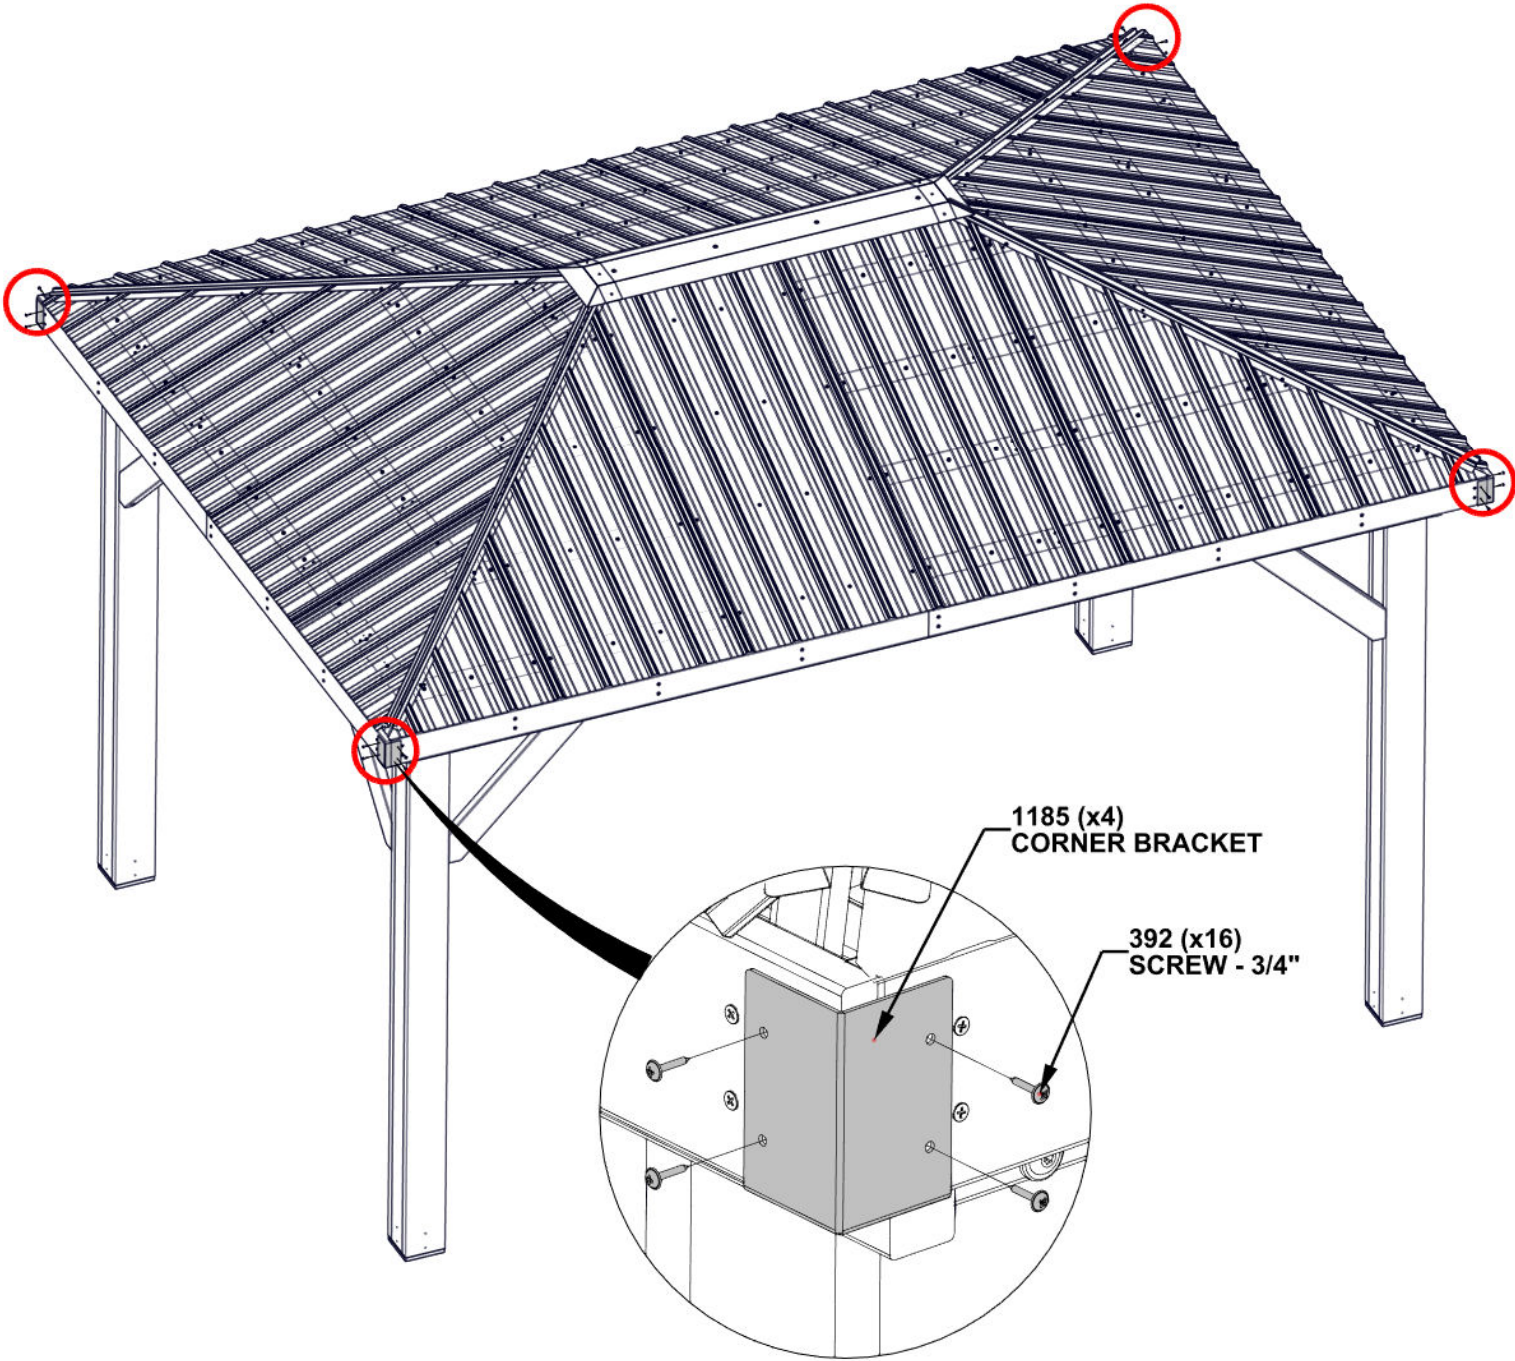


STEP 43 - ROOF TRIM ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
16	H101480	SCREW SELF TAPPING #9x3/4 BLK

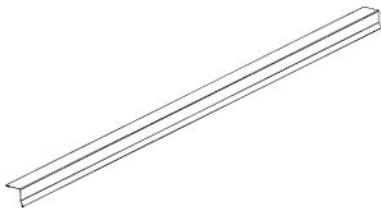


A4M07273 DRIP EDGE
(x4)



A4M05428 DRIP EDGE SPLICE
(x2)


- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- **REMOVE PROTECTIVE FILM.**
- **REPEAT THIS STEP ON OPPOSITE SIDE.**
- SLIDE DRIP EDGES INTO EACH SIDE OF THE DRIP EDGE SPLICE, ADJUST IF NEEDED.
- CENTER THE DRIP EDGE ASSEMBLY UNDER THE THE ROOF SHEETING, AND ON TOP OF THE ROOF JOIST.

ONCE DRIP EDGE IS PUSHED UNDER ROOF SHEETING ATTACH USING H101480 SCREWS. START AT LOCATION SHOWN APPROXIMATELY 1" [25mm] UP FROM BOTTOM OF SHEETING AND NEXT TO RIB IN SHEETING. WORK LEFT TO RIGHT AND SKIP EVERY TWO RIBS AS SHOWN.

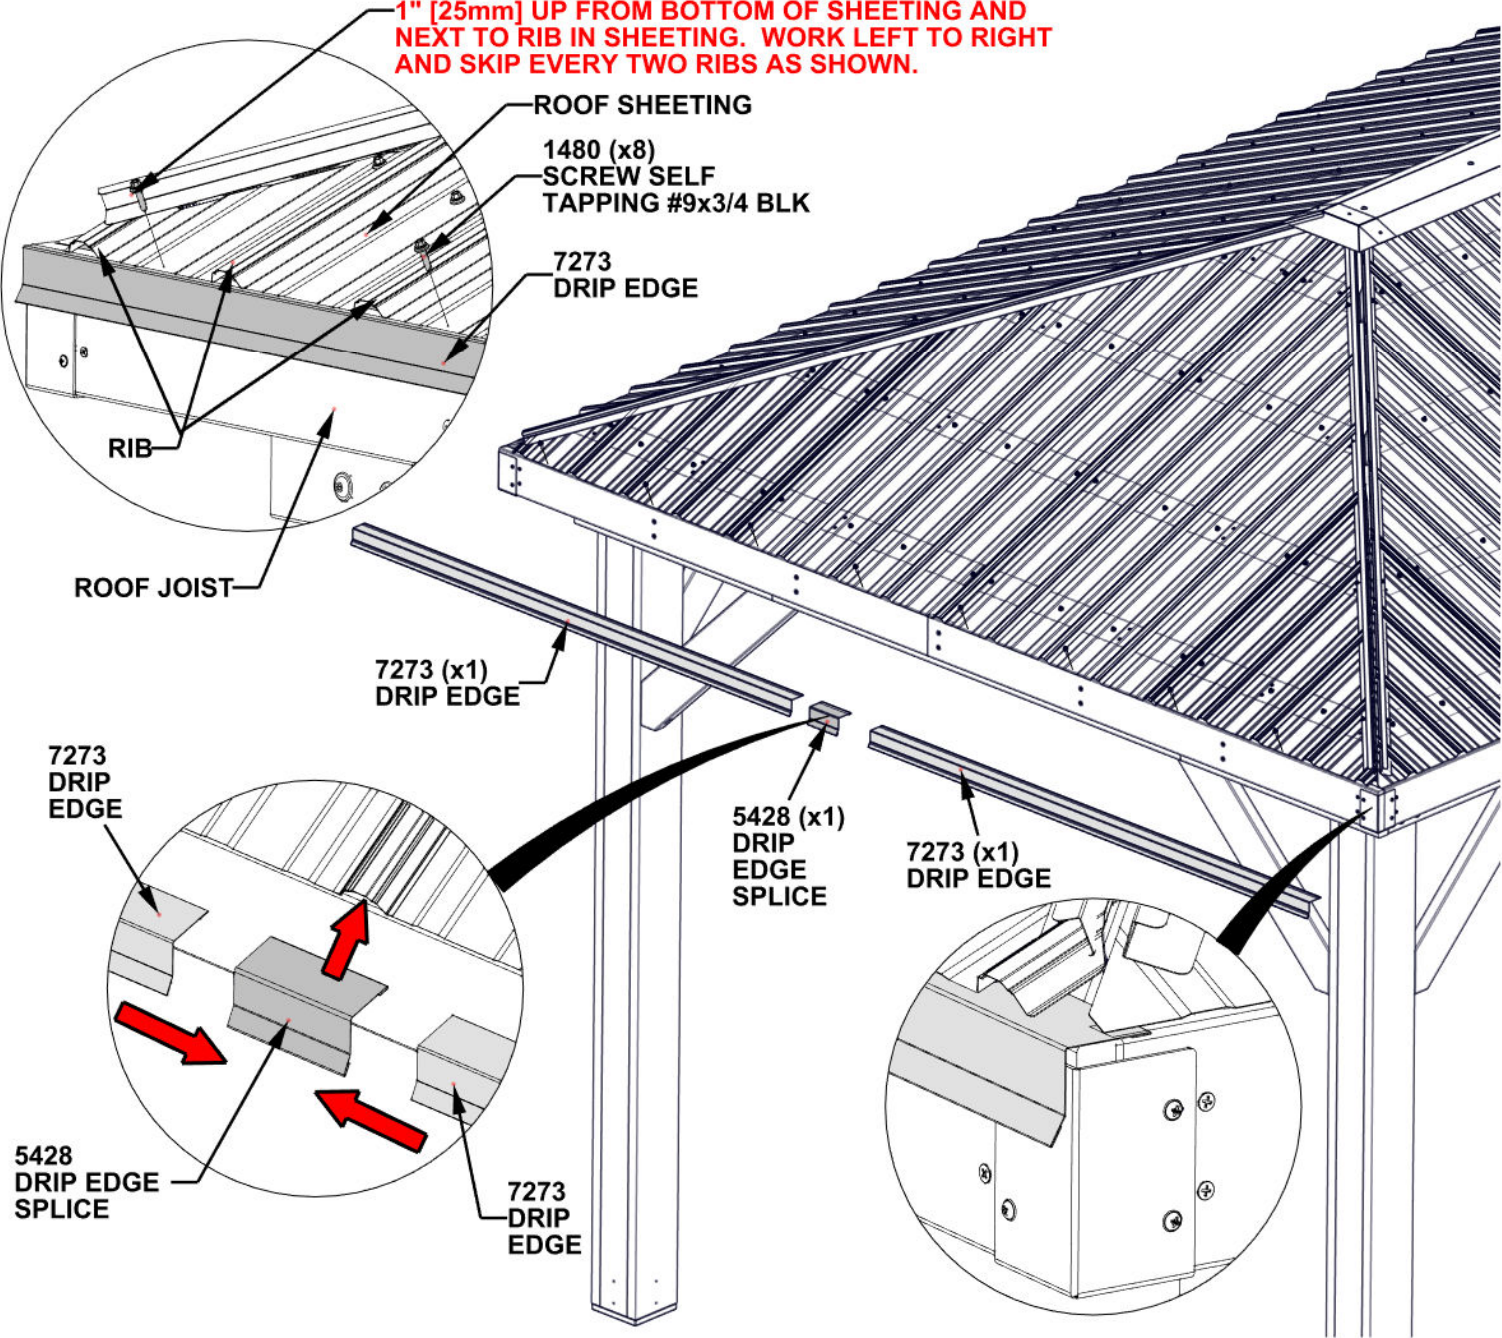


STEP 44 - ROOF TRIM ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
22	H101480	SCREW SELF TAPPING #9x3/4 BLK

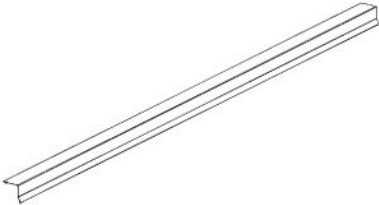

A4M07273 DRIP EDGE
(x4)

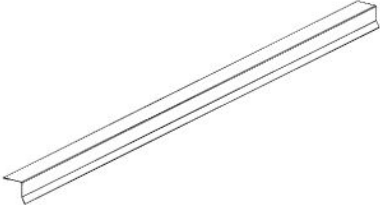


A4M07274 DRIP EDGE
(x2)





A4M05428 DRIP EDGE SPLICE
(x4)

- **WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES.**
- **REMOVE PROTECTIVE FILM.**
- **REPEAT THIS STEP ON OPPOSITE SIDE.**
- SLIDE DRIP EDGES INTO EACH SIDE OF THE DRIP EDGE SPLICE, ADJUST IF NEEDED.
- CENTER THE DRIP EDGE ASSEMBLY UNDER THE THE ROOF SHEETING AND ON TOP OF ROOF JOIST.
- START SCREWS AFTER THE FIRST RIB OF THE ROOF SHEETING.
- BE SURE TO INSERT SCREWS THROUGH DRIP EDGES AND DRIP EDGE SPLICES.
- PROCEED TO INSTALL A SCREW SKIP EVERY TWO RIBS AS SHOWN (11 PER SIDE).


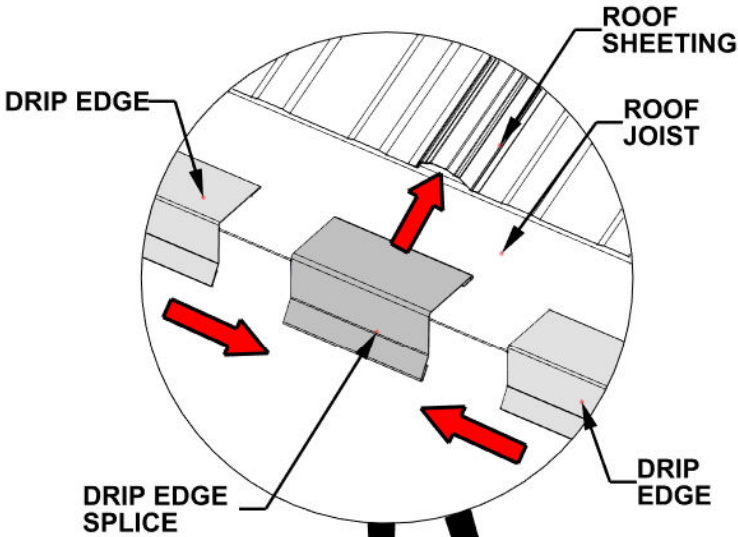


1480 (x11)
SCREW SELF
TAPPING
#9x3/4 BLK

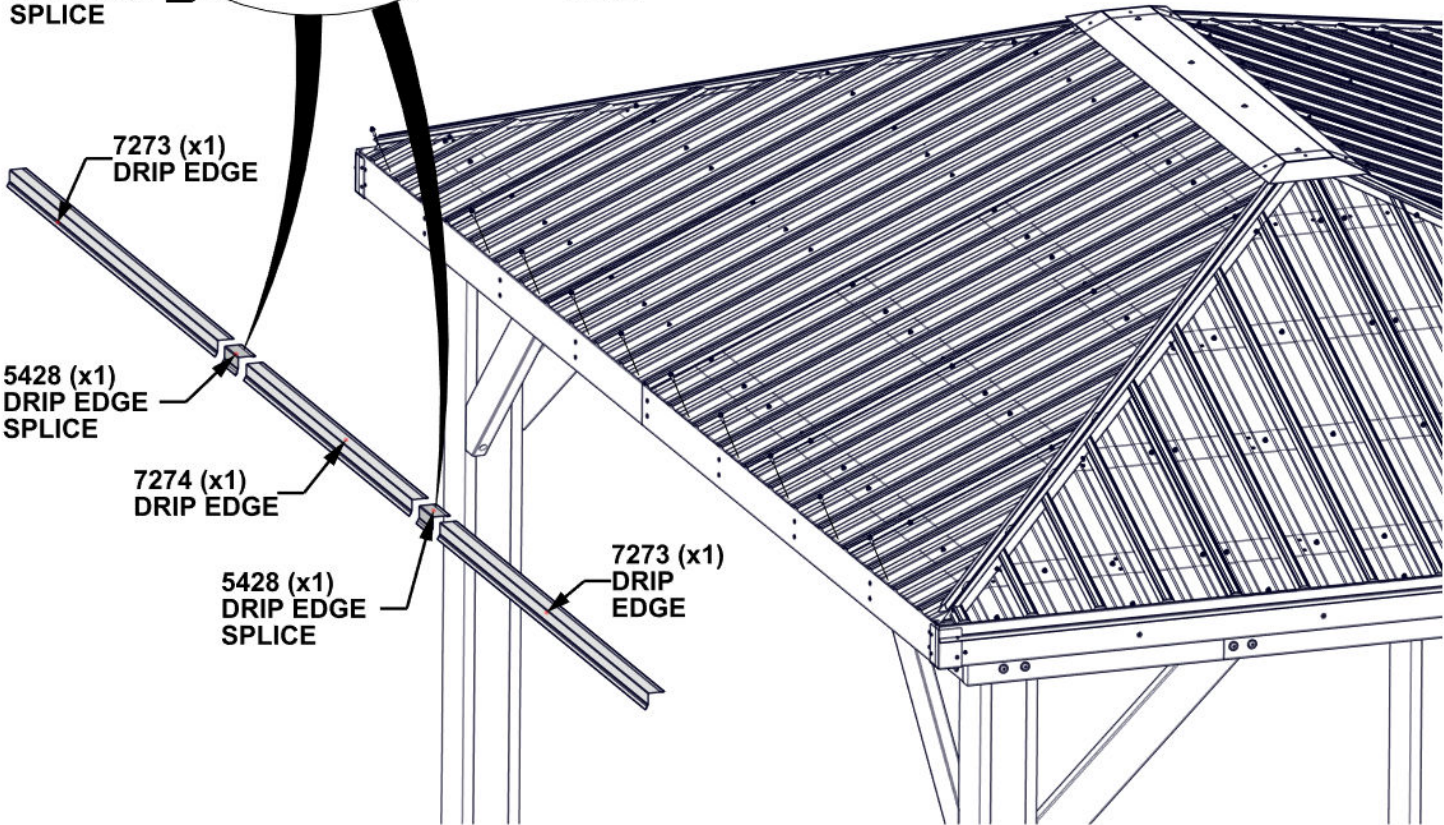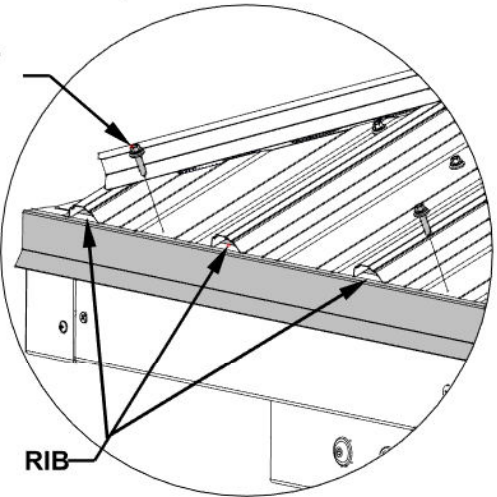


STEP 45 - ROOF ASSEMBLY

QTY.	PART NUMBER	DESCRIPTION
16	H101480	SCREW SELF TAPPING #9x3/4 BLK

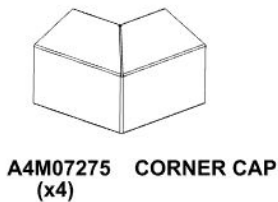
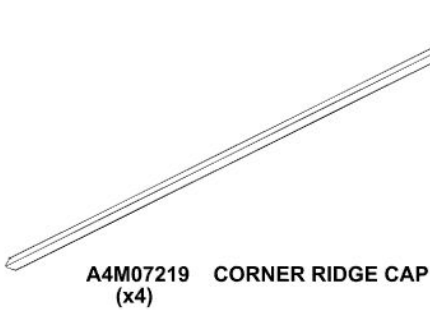


- REMOVE PROTECTIVE FILM.
- REPEAT THIS STEP FOR ALL 4 CORNERS.
- SLIDE CORNER RIDGE CAP ONTO RIDGE CAP CHANNEL AND THE END UNDER THE RIDGE PEAK CAP AS SHOWN.
- ORIENT CORNER CAP UNDER CORNER RIDGE CAP AS SHOWN.

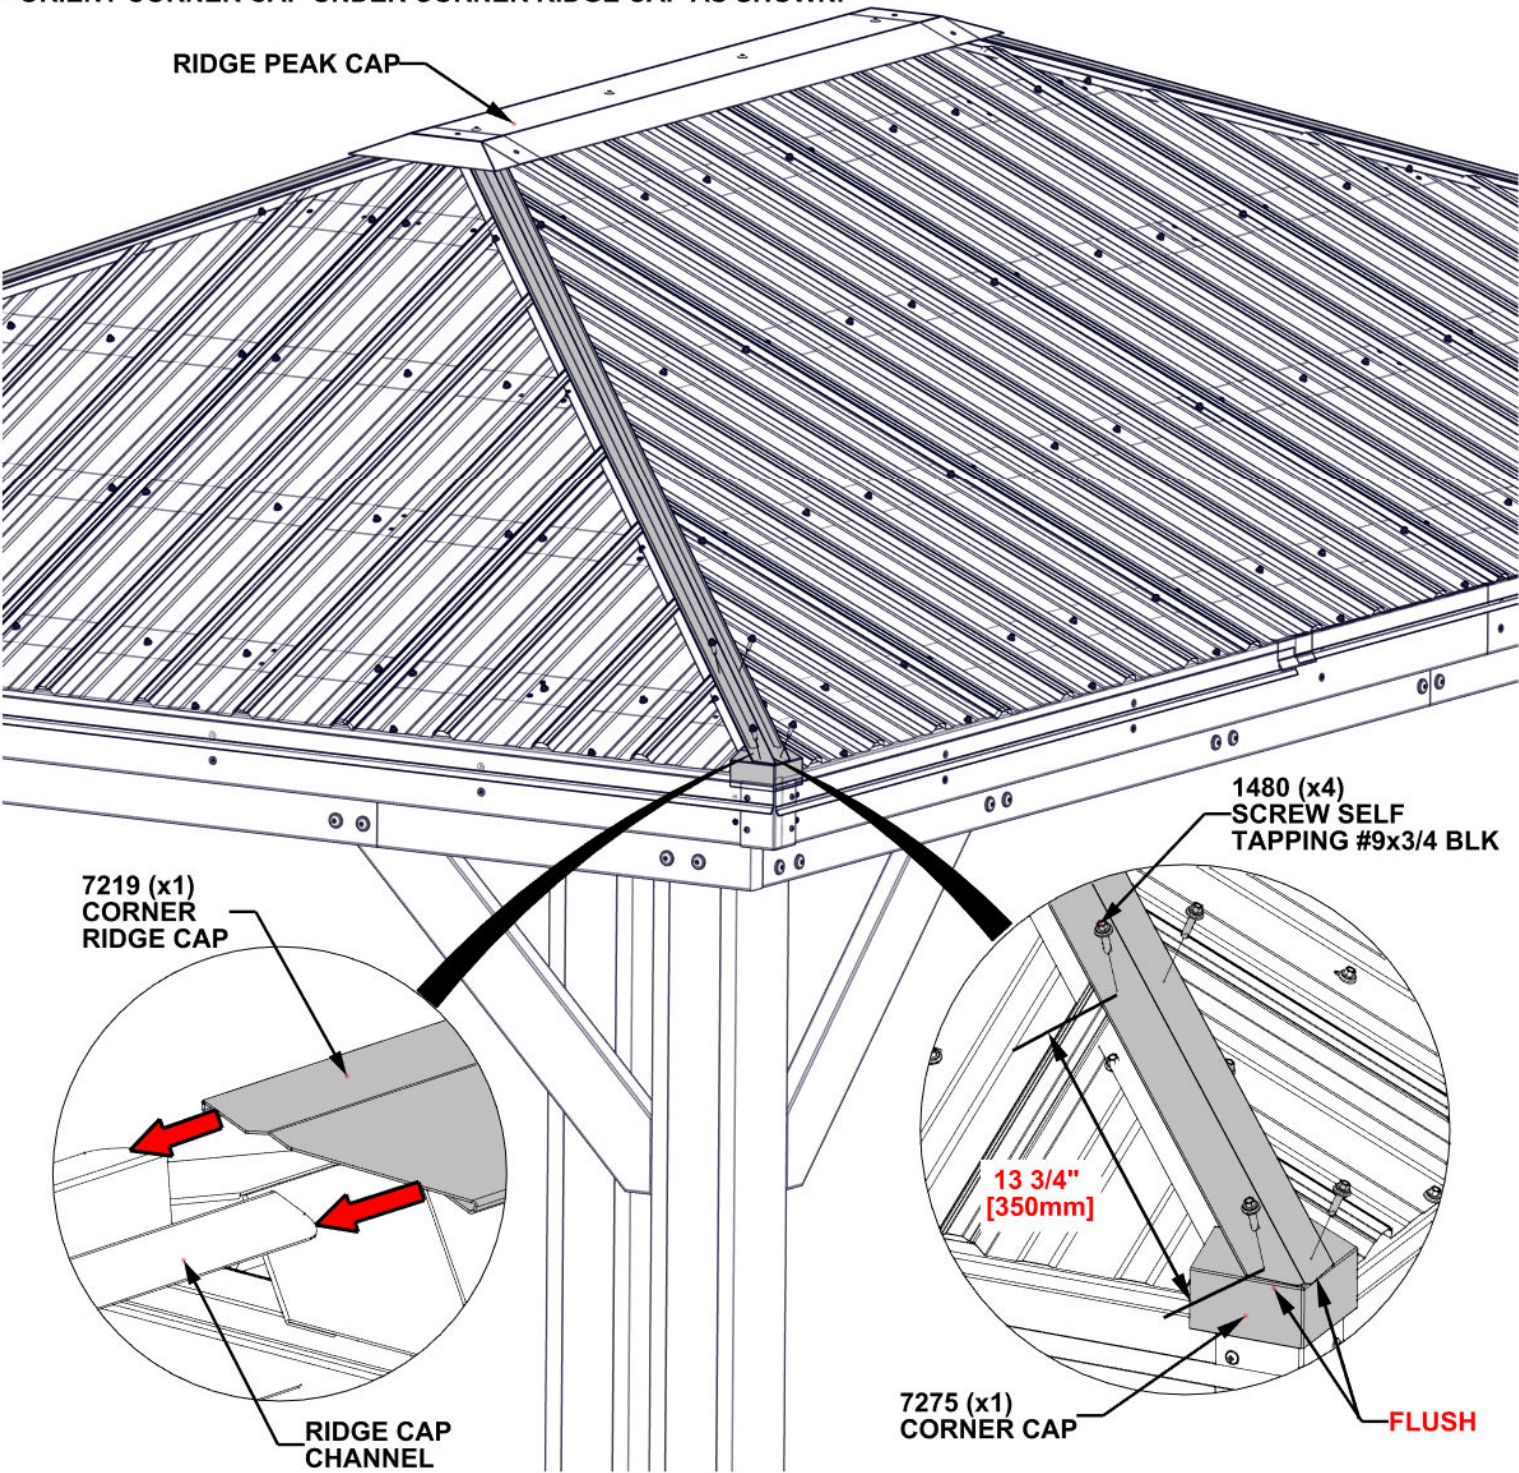

STEP 46 - GAZEBO ASSEMBLY


QTY.	PART NUMBER	DESCRIPTION
32	H100471	LAG SCREW WH 5/16x1 1/2 BLK

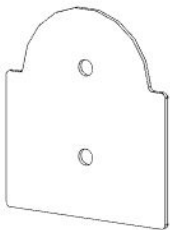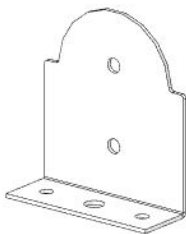

A4M01793 POST ANCHORING PLATE
(x8)


A4M01794 POST PLATE
(x8)

- ALL POST PLATES GO ON THE INSIDES OF THE POSTS AS SHOWN.
- ALL POST ANCHORING PLATES GO ON THE OUTSIDE OF THE POSTS AS SHOWN.
- ALIGN EACH PLATE WITH PILOT HOLES IN POST.

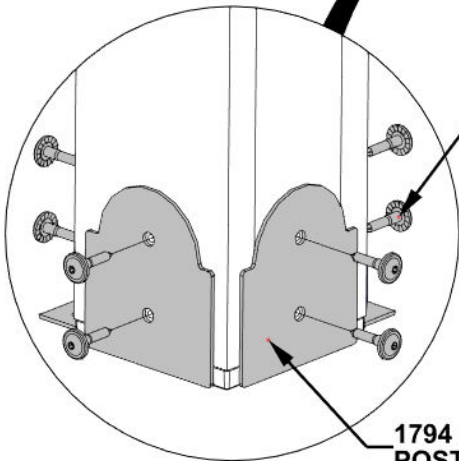

471 (x32)
LAG SCREW - 1 1/2"

1794 (x8)
POST PLATE

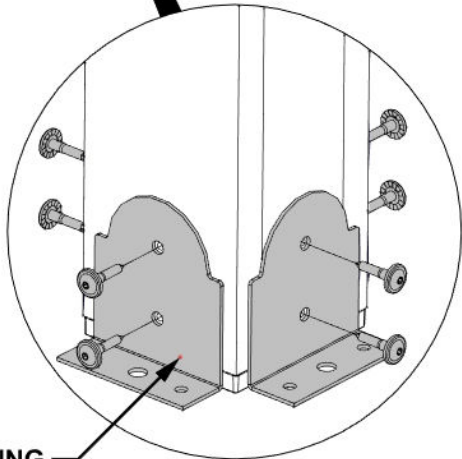



1793 (x8)
POST ANCHORING
PLATE

STEP 47 - ID TAG ATTACHMENT

QTY.	PART NUMBER	DESCRIPTION
4	H100536	SCREW PWH 8x1 1/4 BLK




A4M02158 BYD ID TAG PATIO
(x1)

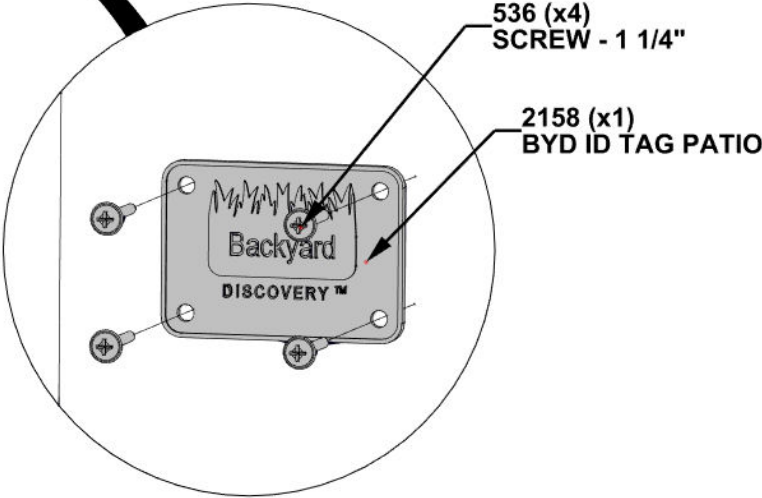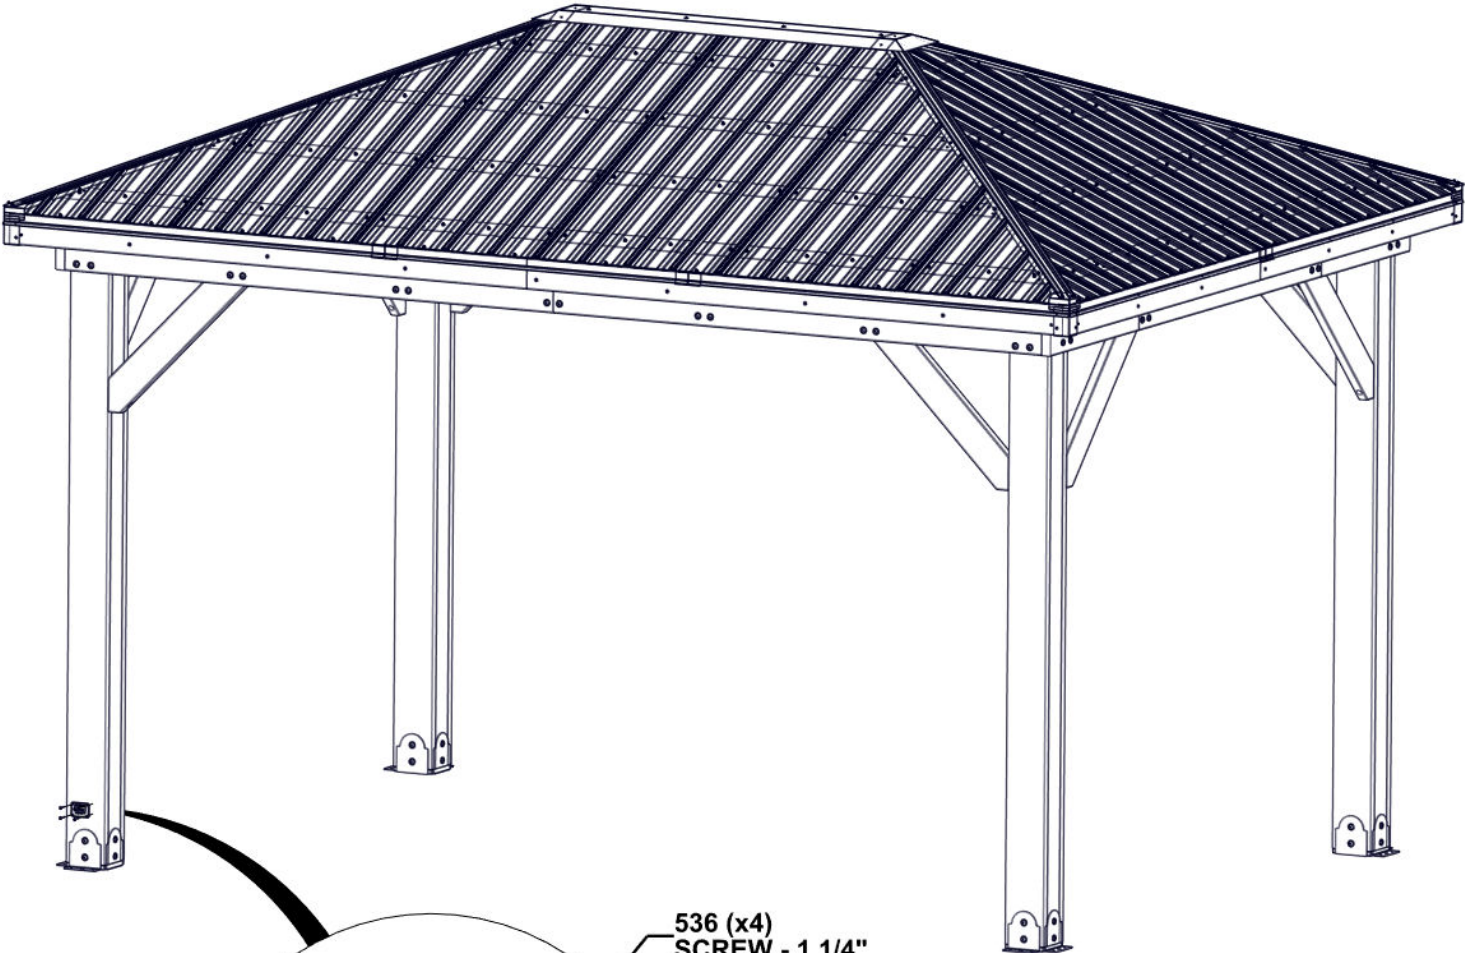


STEP 48 - ANCHORING

QTY.	PART NUMBER	DESCRIPTION
16	H101165	CONCRETE ANCHOR 3/8"x3" BLK

- MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE SURFACE OR CONCRETE POST PADS. SEE BELOW.
- FOR INSTALLATION ON WOOD DECKS, YOU MUST ENSURE THERE IS AMPLE STRUCTURAL SUPPORT UNDER DECK.
- REPEAT THIS STEP FOR ALL FOUR POSTS.

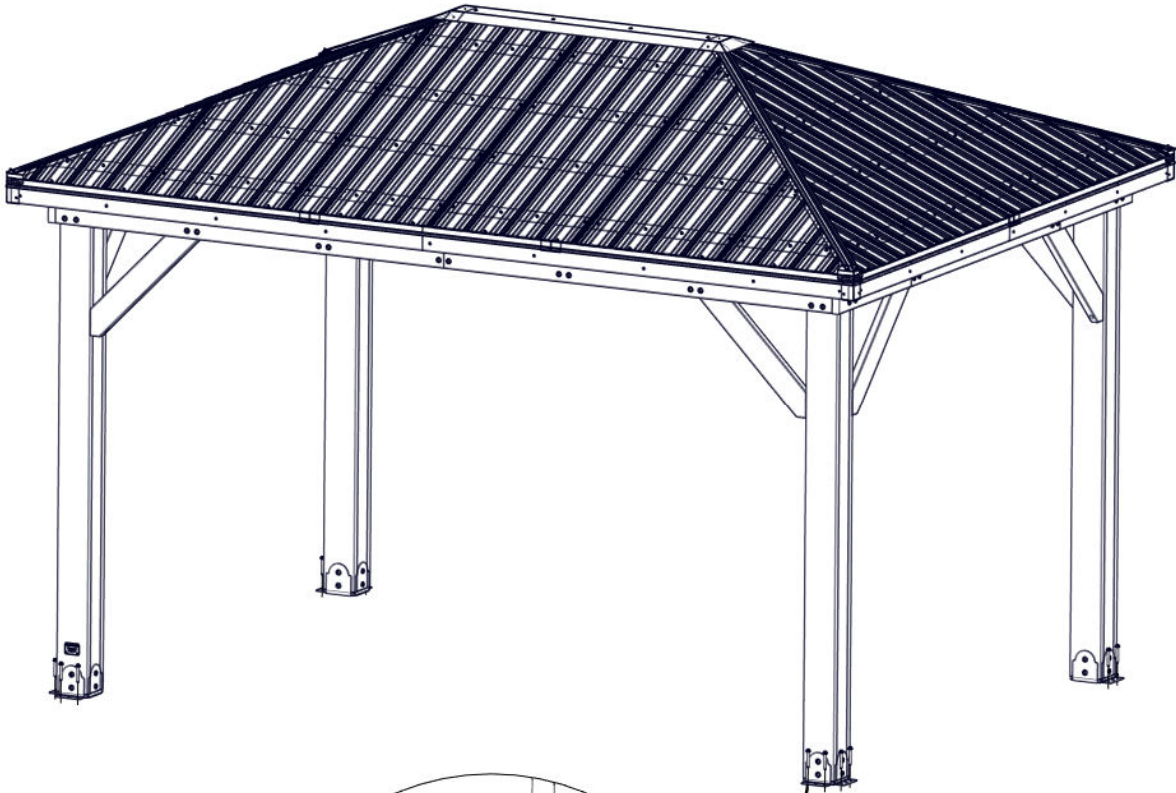


1165 (x16)
CONCRETE ANCHOR-3"

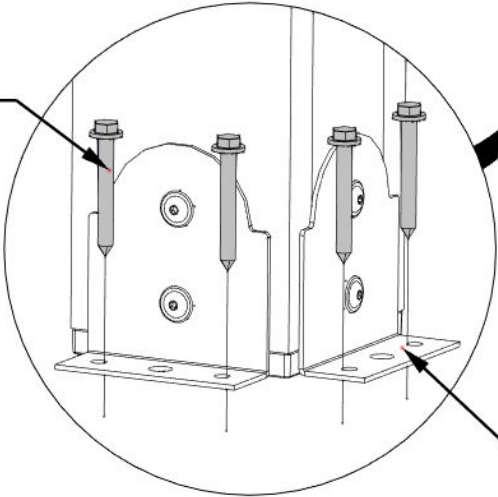

PRE-DRILL HOLES FOR CONCRETE ANCHORS USING A 5/16" [8mm] CONCRETE DRILL BIT



STEP 49 - GAZEBO ASSEMBLY (OPTIONAL)


QTY.	PART NUMBER	DESCRIPTION
4	H100382	SCREW PFH 8x1 3/4 BLK

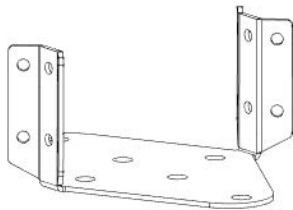

A4M02501 FAN MOUNT BRACKET
(x1)

- ATTACH YOUR ELECTRICAL BOX (SOLD SEPARATELY) WITH THE PROVIDED HOLES IN FAN MOUNT BRACKET.
- PLACE FAN MOUNT BRACKET ON RIDGE BEAMS AND MOVE TO DESIRED FAN LOCATION.
- ROTATE BRACKET UNTIL MOUNTING FLANGES ALIGN BEST WITH RIDGE BEAMS.
- USE AN 1/8" (3mm) DRILL BIT AND DRILL PILOT HOLES AND ATTACH AS SHOWN.

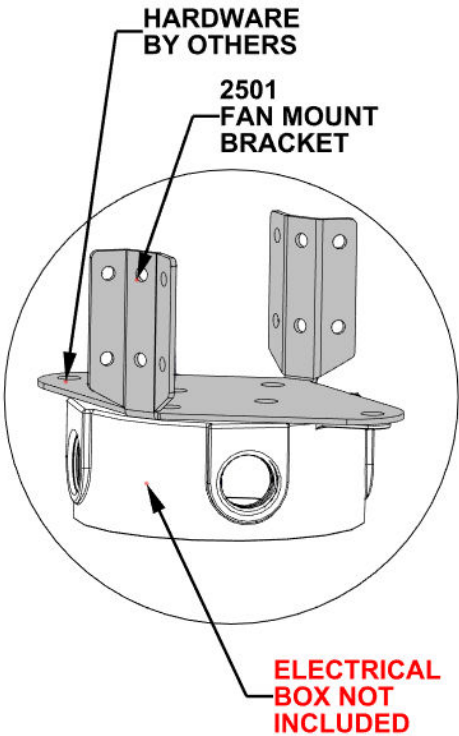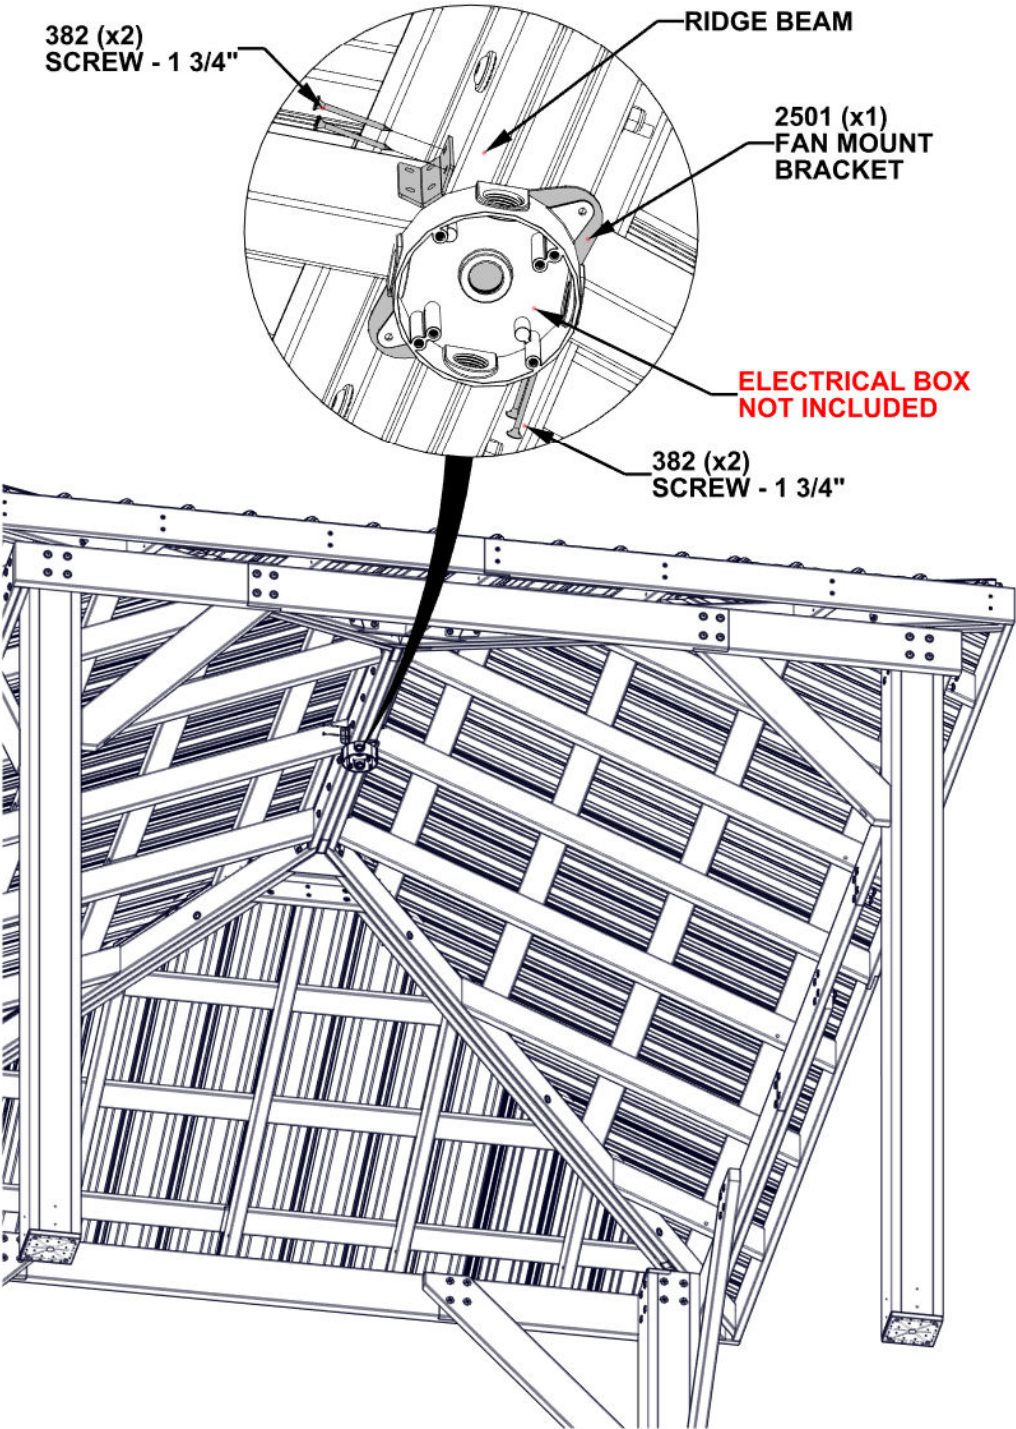

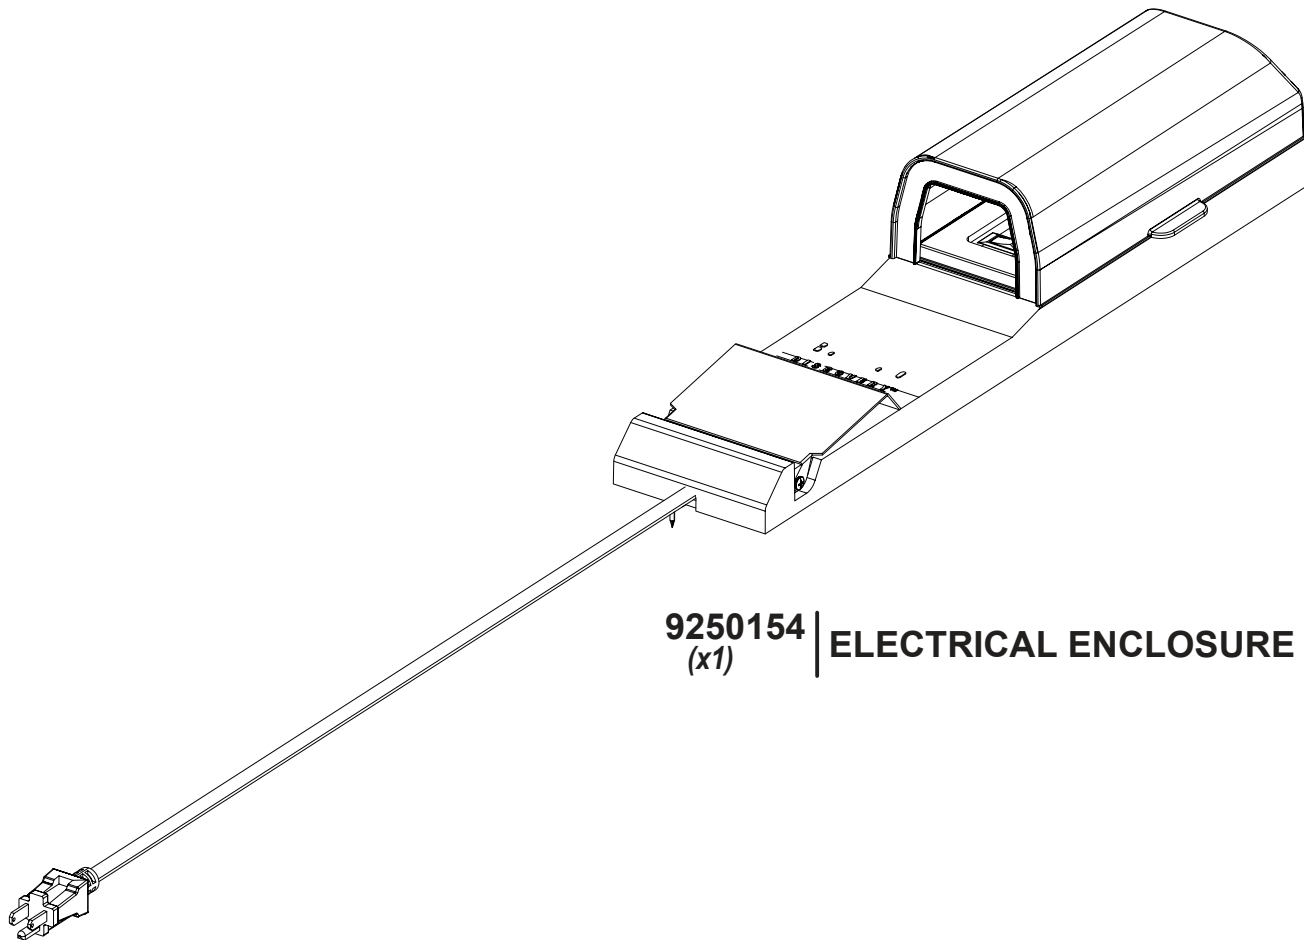

FOR POWERPORT INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE POWERPORT KIT. INSTALL ON ANY EXTERIOR POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.