



Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

VICTORIAN INN PLAYHOUSE MODEL: # 1706316



WARNING

Adult Assembly Required.

Assembly manual must be retained since it contains important information.
Not suitable for children under two years due to sharp points and small parts.
FOR DOMESTIC USE ONLY. INTENDED FOR OUTDOOR USE.



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order replacement parts

Para obtener instrucciones en español, visite www.backyarddiscovery.com



EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP



INSTALLATION
SERVICES
AVAILABLE!
See inside for details



INSTALLATION SERVICES AVAILABLE!*

Need a helping hand?

Let our team of professionals handle the installation for you!

GOCONFIGURE
888-888-5424

**Installation services are only available
to U.S. customers.*

With Go Con! gure, we bring you 18 years of experience right to your doorstep.
We service a wide array of indoor and outdoor recreation products that most consumers
don't have the time or ability to deliver & install themselves.

We do the heavy lifting, so you don't have to!

-
- 18+ Years of Experience Servicing Big Box Retailers and Direct Consumers
 - Highly Skilled, Specialized, Courteous, Professional Service Technicians
 - Over 140,000 Installations Annually
 - White Glove Service

- Satisfaction Guarantee
- Flexible Appointments, including weekends
- Coverage across the nation

Visit www.goconfigure.com for more info!

**Installation services are only available to U.S. customers.*



STOP

**MISSING A PART?
CALL US BEFORE GOING
BACK TO THE STORE**

The store where you made your purchase
does not stock parts for this item.
If you have assembly questions or you are missing or
have damaged parts, please call

1-800-856-4445

you can also visit www.backyarddiscovery.com
or e-mail customerservice@backyarddiscovery.com

Please have the following information ready when you make your call:

- Model Number of the product located on the front of the assembly manual
 - The item description and number from the parts list from the manual that was included in your box
-
- Read entire assembly manual, paying special attention to the important tips and safety information.
 - Ensure there are no missing pieces by first separating and identifying all parts.
 - Make sure to check packing material for small parts that may have fallen out during shipment.
 - Structures are not intended for public use. Any unintended use such as home child care, daycare center, faith center, government facility, home owner's associate, park or school will make the warranty of our product null & void.
 - This manual contains helpful information concerning assembly preparation, installation procedure and required maintenance.
 - Always keep safety in mind as your structure is being built.
 - Keep these instructions for future reference.



THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE

This Limited Warranty by Backyard Discovery applies to products manufactured under the Backyard Discovery brand or its other brands including but not limited to Adventure Playsets, and Leisure Time Products.

Backyard Discovery Wood Play Structure

Backyard Discovery warrants this wooden play product to be free from defects in materials and workmanship for a period of two (2) years from the original date of purchase. All wood carries a five (5) year warranty against rot and decay from the original purchase date.

Backyard Discovery Metal Play Structure

Backyard Discovery warrants this metal play product to be free from defects in materials and workmanship for a period of five (5) years from the original date of purchase.

General Warranty Information

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to ensure maximum life and performance of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty. Maintenance guidelines are provided in the Owner's Manual.

This Limited Warranty does not cover:

- Natural occurring properties of wood such as twisting, warping, checking, peeling or any other natural occurring properties of wood that do not affect performance or integrity.
- Installation – the warranty is null and void if installation is not in accordance with the Assembly Instructions.
- Labor for any inspection
- Labor for replacement of any defective item(s)
- Incidental or consequential damages
- Cosmetic defects, including rusting, color fading, minor cracks, corrosion, which do not affect performance or integrity of a part or the entire product.
- Vandalism, improper use, failure due to loading or use beyond the capacities stated in the applicable Assembly Manual.
- Acts of nature including but not limited to wind, storms, hail, floods, excessive water exposure.
- Improper installation including but not limited to installation on uneven, unlevel, or soft ground.

Backyard Discovery products have been designed for safety and quality. Any modifications made to the original product could damage the structural integrity of the unit leading to failure and possible injury. Modification voids any-and-all warranties and Backyard Discovery assumes no liability for the modified products or consequences resulting from failure of a modified product. Backyard Discovery disclaims all other representations and warranties of any kind, express or implied.

This product is warranted for RESIDENTIAL USE ONLY. Under no circumstance should a Backyard Discovery product be used in public settings (public settings include but are not limited to churches, day cares, parks, etc.). Such use may lead to product failure and potential injury. Any and all public use will void this warranty.

USA and Canada: To make a warranty or replacement part claim please visit backyarddiscovery.com or call Backyard Discovery customer service at 800-856-4445. Backyard Discovery will, at its sole discretion, replace any part within the stated warranty period that is defective in workmanship or materials. At Backyard Discovery's discretion, photographs of the defective part, physical return of the defective part to Backyard Discovery, or proof of purchase may be required for verification.

Outside of the USA and Canada: Contact place of purchase or distributor for warranty service.

This Warranty gives you specific legal rights. You may have other rights as well which vary from state to state, province to province or country to country, where you bought the product. This warranty excludes all consequential damages however, some states do not allow the limitation or exclusion of consequential damages and therefore this limitation may not apply to you.


Please read entire booklet completely before beginning the assembly process

Please retain these instructions and your receipt for future reference. Keep them in a safe place where you can refer to them as needed. In order to provide you with the most efficient service, it is required that you provide us with the part numbers when ordering parts.

For Your Records:

Please take time and fill out the information below. This information will be needed for warranty issues.

Where Purchased: _____
Date of Purchase: _____
Installation Date: _____
Installed by: _____
Tracking Number: _____

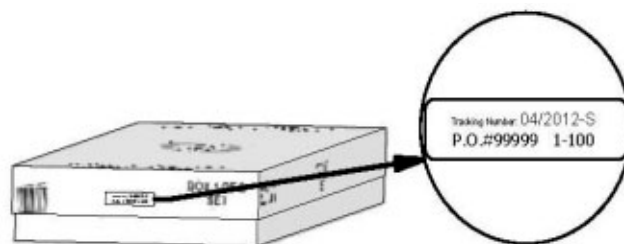

Tracking Number Reference Label

Tracking ID number on the carton and on the bottom of the vertical ID plate are included for tracking purposes associated with warranty claims.



NOTE:

Your Children's Safety Is Our #1 Concern!

Observe the following statements and warnings to reduce the likelihood of serious or fatal injury. Please review these safety rules regularly with your children.



WARNING: BURN HAZARD

- Pay special attention to plastic and metal surfaces as they may be hot enough to cause burns.
- Always check the temperature of the product before letting your children play on it.
- Remember that the product may cause burns if left in direct sunlight.
- Always be aware of the sun and weather conditions, and do not assume that the equipment is safe because the air temperature is not very high.

- Equipment is recommended for use by children 2 to 10 years of age.
- On-site adult supervision is required.
- Instruct children not to climb when the equipment is wet.
- Instruct children to never crawl on top of a play house roof.
- The parents should have the children dress appropriately with well-fitting shoes. Loose clothing such as scarves and ponchos should not be worn. Always take off, tie up or tuck in cords and drawstrings on children's clothing. These things can get caught on playground equipment and strangle a child.
- Do not allow children to walk, in front, between, behind or close to moving rides.
- Instruct children not to attach items to the equipment that are not specifically designed for use with that equipment (such as ropes, clothesline, pet leashes, etc.).
- Instruct children to remove their bike or other sports helmet before playing on the playground equipment.
- Do not allow children to go down slide head first or run up slide.
- Instruct children to **look** before they slide to make sure no one is at the bottom.
- On sunny and/or hot days, check the slide and other plastic rides to assure that they are not hot to the touch to cause burns. Cool hot slide and rides with water and wipe dry prior to using.



Positioning Your Playhouse

- The playhouse is designed to be installed on a level surface by an Adult with an Adult helper. Place in a flat area of your yard to minimize ground preparation.
- Choose a level location for the equipment. This can reduce the likelihood of the playhouse tipping over and loose-fill surfacing material washing away during heavy rains.
- Place the equipment not less than 6'-7" (2.0 m) from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- It is a good idea to place your playhouse in an area that is convenient for adults to watch children at play.
- Create a site free of obstacles that could cause injuries – such as low overhanging tree branches, overhead wires, tree stumps and/or roots, large rocks, bricks and concrete. We have additional suggestions in the Suggested Playground Surfacing Section.
- Do not build your playhouse on top of surfacing material.

Suggested Playground Surfacing

- Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.
- Shredded bark mulch, wood chips, fine sand and fine gravel, are added as shock absorbing materials after assembly. If used properly these materials can absorb some of the impact of a child's fall.
- All surface material should extend a minimum of 6 feet in all directions around the play area.
- Do not apply playground surfacing until after the unit is completely constructed. Play house should not be built on top of surfacing.
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging.
- Installations of rubber tiles or poured-in-place surfaces (other than loose-fill materials) generally require a professional and are not "do-it-yourself" projects.
- Shall use Playground Surfacing Materials (other than loose-fill material) which comply with the safety standard ASTM F1292 Standard Specification of Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment.

The following chart explains the fall height in feet from which a life threatening head injury would not be expected

Critical Heights in feet (m) of Tested Materials

Material	Uncompressed Depth			Compressed Depth
	6" (152mm)	9" (228mm)	12" (304mm)	to 9" (228mm)
Wood Chips	7' (2.13m)	10-12' (3.0-3.6m)	11' (3.35m)	10' (3.05m)
Double-Shredded Bark Mulch	6' (1.83m)	10-12' (3.0-3.6m)	11' (3.35m)	7' (2.13m)
Engineered Wood Fibers	6' (1.83m)	7' (2.13m)	>12' (3.66m)	6' (1.83m)
Fine Sand	5' (1.52m)	5' (1.52m)	9' (2.74m)	5' (1.52m)
Coarse Sand	5' (1.52m)	5' (1.52m)	6' (1.83m)	4' (1.22m)
Fine Gravel	5' (1.52m)	7' (2.13m)	10' (3.05m)	6' (1.83m)
Medium Gravel	5' (1.52m)	5' (1.52m)	6' (1.83m)	5' (1.52m)
Shredded Tires*	10-12' (3.0-3.6m)	N/A	N/A	N/A

*This data is from tests conducted by independent testing laboratories on a 6-inch depth of uncompressed shredded tire samples produced by four manufacturers. The tests reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.



APPENDIX A

The following information is from the United States Consumer Product Safety Commission's Information Sheet for playground surfacing material; also see the following website for additional information: www.cpsc.gov

X3. SECTION 4 OF THE CONSUMER PRODUCT SAFETY COMMISSION'S OUTDOOR HOME PLAYGROUND SAFETY HANDBOOK⁹

X3.1 Select Protective Surfacing—One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification F 1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

X3.1.1 Loose-Fill Materials:

X3.1.1.1 Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWf), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial 12 inch level of 12 inches will compress to about a 9-inch depth of surfacing overtime. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9-inch depth.

X3.1.2 Use a minimum of 6 inches of protective surfacing for play equipment less than 4 feet in height. If maintained properly, this should be adequate. (At depths less than 6 inches, the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.

X3.1.3 Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.

X3.1.3.1 Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.

X3.1.3.2 Do not install loose-fill surfacing over hard surfaces such as concrete or asphalt.

X3.1.4 Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles — You may be interested in using surfacing other than loose-fill materials – like rubber tiles or poured-in-place surfaces.

X3.1.4.1 Installations of these surfaces generally require a professional and are not “do-it-yourself” projects.

X3.1.4.2 Review surface specification before purchasing this type of surfacing. Ask the installer/manufacture for a report showing that the product has been tested to the following safety standard: ASTM F 1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment

X3.1.4.3 Check the protective surfacing frequently for wear.

X3.1.5 Placement — Proper placement and maintenance of protective surfacing is essential. Be sure to:

X3.1.5.1 Extend surfacing at least 6 feet from the equipment in all directions.

X3.1.5.2 For to-and-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.

⁹This information has been extracted from the CPSC publications “Playground Surfacing — Technical Information Guide” and “Handbook for Public Playground Safety.” Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772.

The American Society for Testing and Materials takes no position respecting the validity of any patent right asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

The standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either approved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, 100 Barr Harbor Drive, West Conshohocken, PA 19428.



IT IS IMPORTANT TO CHECK AND TIGHTEN ALL HARDWARE AT THE BEGINNING AND DURING THE SEASON AS THEY MAY LOOSEN DUE TO WOOD EXPANSION AND CONTRACTION.

At the beginning of each play season

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a non lead-based paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Twice a month during play season

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, & corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Once a month during play season.

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

At the end of each play season or when the temperature drops below 32° F

- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

Additional Maintenance

- Check the swing beam and hardware every two weeks due to wood expansion and contraction. It is particularly important that this procedure be followed at the beginning of each season.
- Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sand may be necessary to maintain a safe playing environment. Treat your playset with stain regularly, to help prevent severe checking/splitting and other weather damage.
- A waterborne transparent stain has been applied to your playset. This is done for color only. Once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any "rough" spots on your playset. Please note this is a requirement of your warranty.
- Assembling and maintaining the playset on a level location is very important. As your children play, your playset will slowly dig its way into the soil, and it is very important that it settles evenly. Make sure the playset is level and true one each year or at the beginning of each play season.

Disposal Instructions

When the Playcenter use is no longer desired, it should be disassembled and disposed of in such a way that no unreasonable hazards will exist at the time the unit is discarded.



Third Party Assembly

- Customer may, in their sole discretion, elect to use a third party person or service to assemble this product. Backyard Discovery assumes no responsibility or liability for any charge incurred by the Customer for any assembly services. Please see our warranty for more information about damaged and missing part replacement coverage. Backyard Discovery will not reimburse Customer for the price of parts purchased.
- Modifications made by the consumer to the original activity toy shall be carried out according to the instructions of the manufacturer. In particular, instructions shall be provided with kit/accessory about the installation of rope/nets concerning the minimum diameter, the need for fixation ends, overall length, and positioning in relation to other at both structures.

OWNERS SHALL BE RESPONSIBLE FOR MAINTAINING THE LEGIBILITY OF THE WARNING LABELS



Your Backyard Discovery structure is designed and constructed of quality materials. As with all outdoor products it will weather and wear. To maximize the enjoyment, safety and life of your structure it is important that you properly maintain it.

About Our Wood

Backyard Discovery uses 100% Cedar (C. Lanceolata) wood. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my product?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. Checking is surface cracks in the wood along the grain. A post (4" x 4") will experience more checking than a board (1" x 4") because the surface and interior moisture content will vary more widely than in thinner wood.

2. Warping results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.

3. Fading happens as a natural change in the wood color as it is exposed to sun-light and will turn grey over time.

How can I reduce the amount of weathering to wood product?


1. Your wood product is coated with a water-based stain. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product). You must apply some type of protection (sealant) to the wood of your product. **Please note this is a requirement of your warranty.** Most weathering is just the normal result of nature and will not affect safety. However if you are concerned that a part has experienced a severe weathering problem please call our customer service department for further assistance.

2. Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sanding may be necessary to maintain a safe environment. Treating your Product with protection (sealant) after sanding will help prevent severe checking/ splitting and other weather damage.




Protrusion Hazard

Incorrect

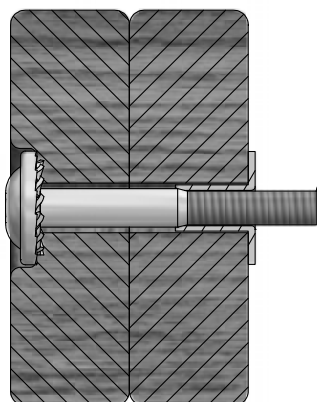

If you see exposed threads and your bolt protrudes beyond the T-Nut you may have over tightened the bolt or used incorrect hardware. If you've overtightened, remove the bolt and add washers to eliminate the protrusion.


Correct

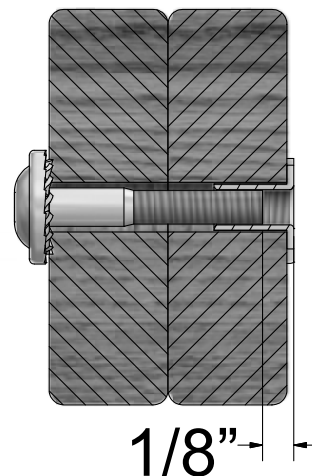

Proper Hardware Assembly


Bolt and T-Nut Assembly

Tap T-nut into the provided hole. Insert your bolt through the lock washer and insert into the provided hole opposite from the T-Nut. Turn clockwise to thread into T-nut. Do not completely tighten until instructed.

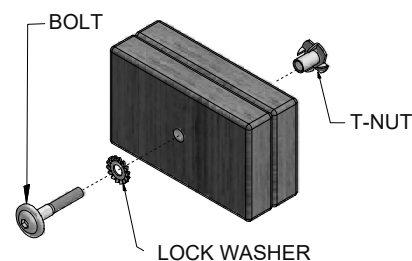


Bolt and Barrel Nut Assembly

Insert barrel nut through the lock washer and press the pair through the provided hole. Insert your bolt through the second lock washer and insert the pair into the provided hole opposite from the barrel nut. Turn clockwise to thread into the barrel nut. Do not completely tighten until instructed.

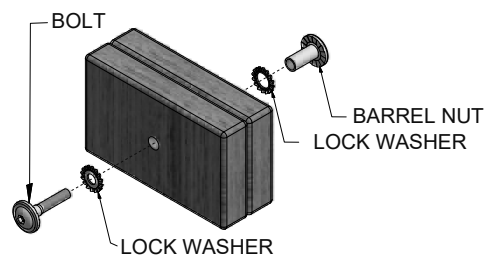

Lag Assembly

Normally there will be a pre-drilled pilot hole on assemblies that require a Lag Screw. If there is no pilot hole, line up the two boards as they are to be attached and use the factory drilled hole as a guide to drill another pilot hole into the adjoining board. This will keep the wood from splitting. Only a lock washer is required for steps with Lag Screws.

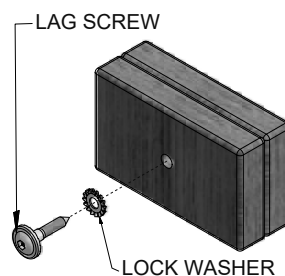




ASSEMBLY TIP:

Keep and eye out for these boxes which will contain helpful pictures and information making the assembly process as quick and painless as possible.

Sorting Wood

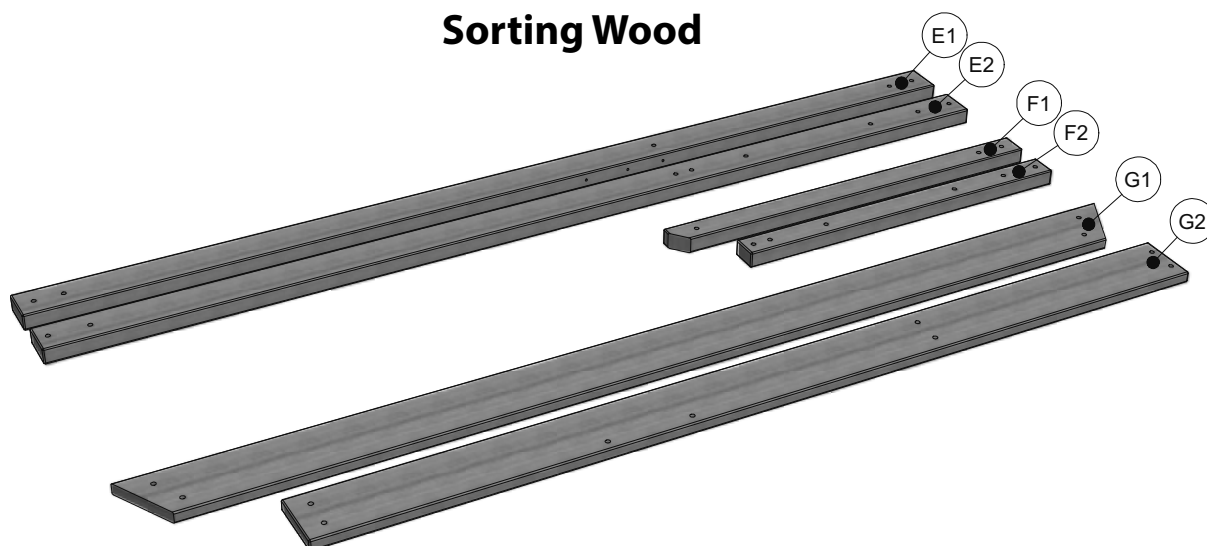

When removing the wood from the boxes we recommend arranging them by part number before you begin assembly. This will allow for faster assembly and easily identify any parts that may be missing or damaged.

Sorting Hardware


NUT BARREL
H100545



SCREW
H100695




T-NUT
H100699



WASHER FLAT
H100706



BOLT HEX
H100716

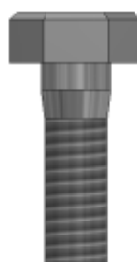

BOLT
H100718





SCREW PWH
H100742



To help with assembly we recommend sorting your hardware bags with the seven digit alpha-numeric number printed on the bags or by hardware type (i.e. bolts, nuts, etc.). Organizing your hardware will make assembly easier.


Hardware Identification

Hardware bags are printed with a seven digit alpha-numeric part number. During assembly you only need to reference the last three digits of the part number as noted in each step. This will make finding the correct hardware easier.

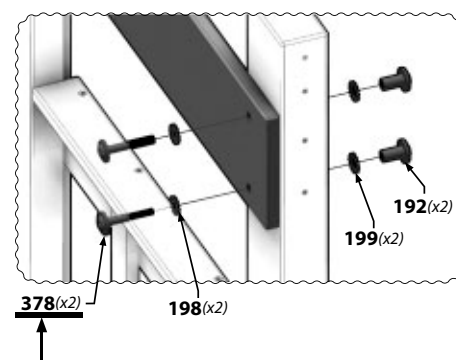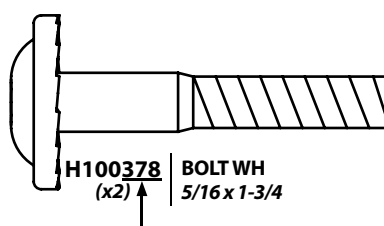


Tools Required for Installation:


(These are the tools that are generally required for assembly of our outdoor products. These tools are not included with the outdoor product purchase.)




(Level 24")

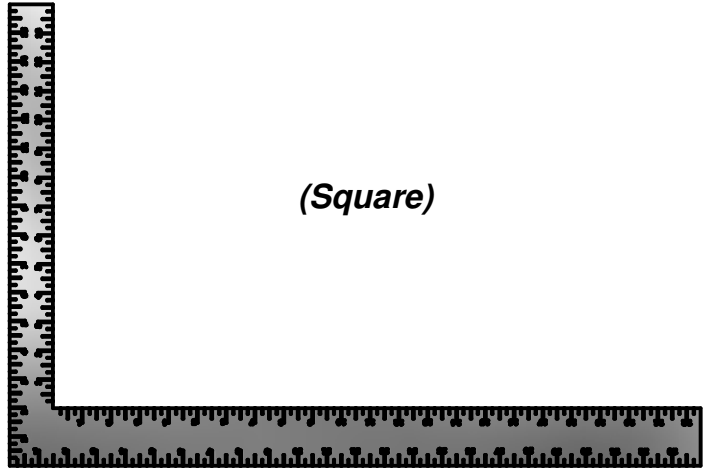

(Square)

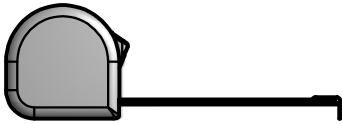


(Tape Measure)

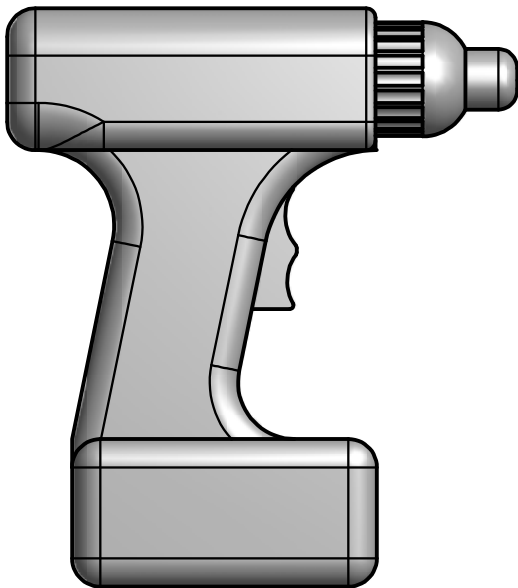

(Cordless Drill or Electric Drill)




(Drill Attachments: Phillips Head)



(Phillips Screw Driver)



(Claw Hammer)

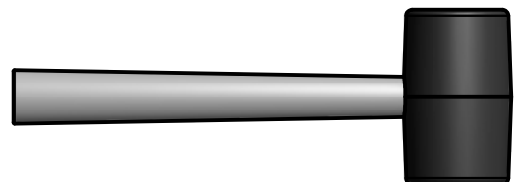

(Rubber Mallet - Optional)



(An Adult w/ an Adult Helper)

SAFETY AND ASSEMBLY INFORMATION

SELECTING THE CORRECT LOCATION FOR YOUR PLAY PRODUCT IS IMPORTANT FOR YOUR CHILDREN'S SAFETY AND THE PRODUCT'S LONGEVITY

Dimensions:

- The PPH103-2017 has one layout option.

Layout	Ground Dimension	Safe Play Area*
	6'-2" x 5'-5" x 67" Tall	18'-2" x 17'-5"

*Level Ground Surface - See below



General Information:

Your set has been designed and engineered for children only and for residential use only. A maximum of 150 lbs. per child is recommended for play activities designed for individual use. A maximum of 120 lbs. per child is recommended for play activities designed for multiple child use. A maximum of 6 children is recommended for this unit.

Safe Play Area:

- The safe play area refers to a zone extending 6' beyond the play product on all sides, including the space above the play product.
- The ground surface **must be level**. Installing your play product on sloping ground can cause it to lean or "rack". This leaning puts additional stress on all connections and joints and in time will cause those connections to loosen and fail.
- The safe play area must be free of all structures, landscaping, trees and branches, rocks, wires, and other obstacles to safe play. Children can be seriously injured running or swinging into these obstacles.
- Remove all tripping hazards from the safe play area. Tripping hazards include: roots, stumps, rocks, landscaping, sprinkler heads, railroad ties, plumbing and electrical connections.
- Play product needs to be installed on solid ground.

SAFE PLAY AREA DIAGRAM

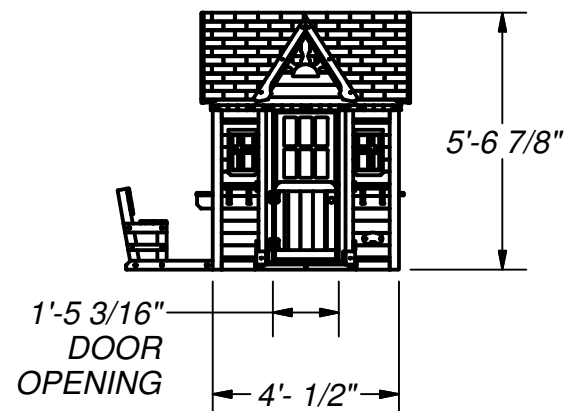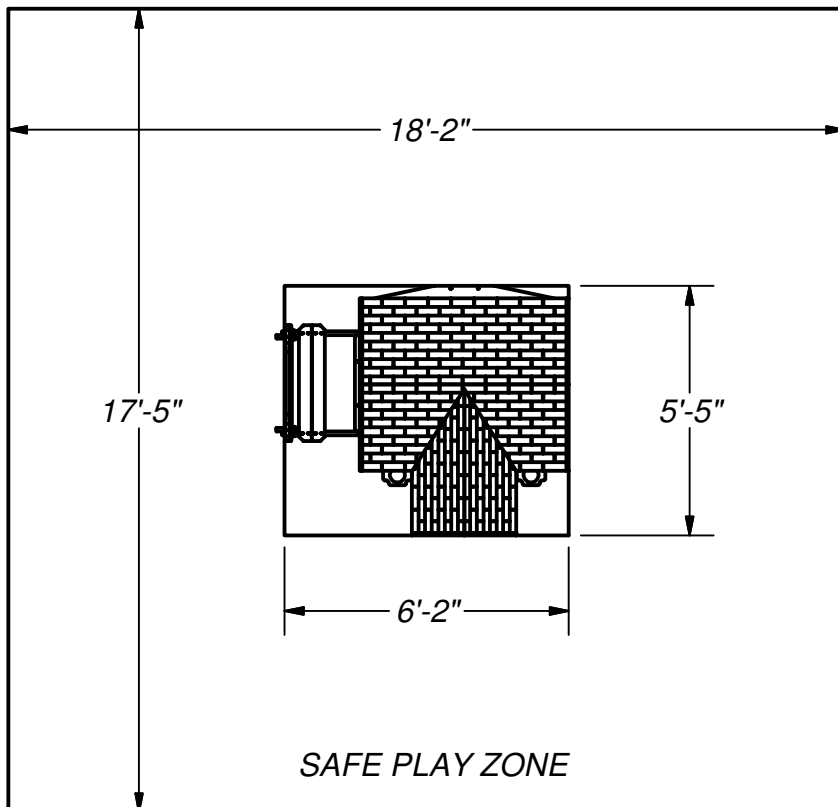

Parts Identification

Wood Components


(NOT TO SCALE)



- (1) **AA1 - LEFT PORCH POST - W4L07191**
2"x2"x43 7/8" (50x50x1113)



- (1) **AA2 - RIGHT PORCH POST - W4L07192**
2"x2"x43 7/8" (50x50x1113)

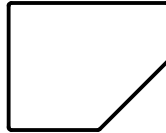

- (2) **G1 - WALL SUPPORT - W4L07210**
1"x5 1/4"x6 3/4" (24x134x170)



- (2) **H1 - HEADER BOARD - W4L07182**
1"x3 3/8"x48 1/4" (24x86x1226)



- (2) **H2 - HEADER BOARD - W4L07183**
1"x3 3/8"x40 7/8" (24x86x1037)




- (2) **H3 - SHELF SUPPORT - W4L07209**
1"x3 3/8"x4 3/4" (24x86x120)




- (2) **J1 - BAY WINDOW SIDE - W4L07181**
1"x1 7/8"x18 1/4" (24x48x464)




- (2) **J2 - SUPPORT BOARD - W4L07211**
1"x2 3/8"x6 3/4" (24x60x170)



- (2) **J3 - BENCH GROUND BOARD - W4L07222**
1"x2 3/8"x22 1/2" (24x60x573)



- (2) **J4 - BENCH UPRIGHT - W4L07223**
1"x2 3/8"x12" (24x60x305)



- (2) **J5 - BENCH UPRIGHT - W4L07224**
1"x2 3/8"x21 1/8" (24x60x538)

Parts Identification

Wood Components


(NOT TO SCALE)




- (2) **J6 - BENCH RAIL - W4L07225**
1"x2 3/8"x11 1/4" (24x60x285)




- (2) **J7 - PORCH CORBEL - W4L07230**
1"x2 3/8"x9" (24x60x230)

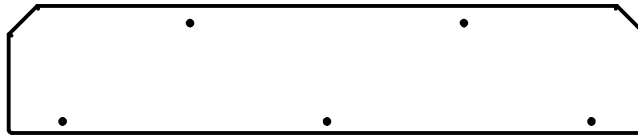

- (1) **K1 - WINDOW SHELF - W4L07208**
5/8"x5 1/4"x26 1/2" (16x134x674)

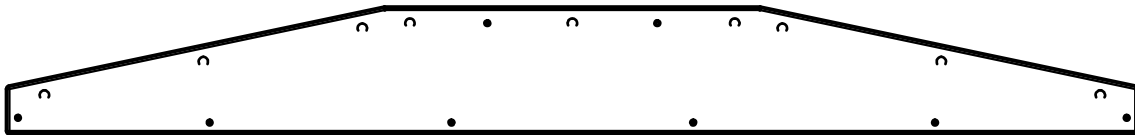


- (2) **K3 - BAY WINDOW HEADER - W4L07180**
5/8"x5 1/4"x47 1/8" (16x134x1198)



- (1) **L1 - PORCH BOARD - W4L07193**
5/8"x4 3/8"x26 1/2" (16x112x673)



- (3) **M1 - HALF MOON - W4L07184**
5/8"x3 1/8"x6 3/4" (16x80x170)



- (3) **M2 - PORCH BOARD - W4L07194**
5/8"x3 3/8"x26 1/2" (16x86x673)



- (2) **M3 - PORCH TRIM BOARD - W4L07195**
5/8"x2 3/4"x3 1/4" (16x70x82)



- (2) **M4 - PORCH TRIM BOARD - W4L07196**
5/8"x3 3/8"x2 1/2" (16x86x65)



- (2) **M5 - PORCH TRIM BOARD - W4L07197**
5/8"x3 3/8"x2" (16x86x50)

Parts Identification

Wood Components

(NOT TO SCALE)



- (2) **M6 - PORCH TRIM BOARD - W4L07198**
5/8"x2 3/4"x2 5/8" (16x70x66)



- (1) **M7 - HEADER BOARD - W4L07202**
5/8"x3 3/8"x13 7/8" (16x86x351)



- (1) **M8 - HEADER BOARD - W4L07203**
5/8"x3 3/8"x13 7/8" (16x86x351)




- (1) **M9 - HEADER BOARD - W4L07204**
5/8"x3 3/8"x25 7/8" (16x86x657)




- (2) **M10 - CABINET TOP - W4L07212**
5/8"x3 3/8"x46 3/8" (16x86x1177)



- (4) **M11 - FASCIA BOARD - W4L07218**
5/8"x3 3/8"x31 3/4" (16x86x808)




- (2) **M12 - FASCIA BOARD - W4L07219**
5/8"x3 3/8"x25 1/2" (16x86x647)



- (2) **M13 - BENCH SEAT - W4L07227**
5/8"x3 3/8"x30 1/8" (16x86x764)



- (1) **M14 - BENCH BACK - W4L07228**
5/8"x3 3/8"x30 1/8" (16x86x764)



- (1) **M15 - BENCH BACK - W4L07229**
5/8"x3 3/8"x30 1/8" (16x86x764)

Parts Identification

Wood Components

(NOT TO SCALE)



- (2) **N1 - SUNBURST LEG - W4L07185**
5/8"x2 3/8"x9 5/8" (16x60x244)



- (4) **N2 - SUNBURST LEG - W4L07186**
5/8"x2 3/8"x6 1/2" (16x60x164)



- (4) **N3 - PORCH RAIL - W4L07199**
5/8"x2 3/8"x14 3/8" (16x60x364)



- (4) **N4 - PICKET - W4L07201**
5/8"x2 3/8"x18 1/4" (16x60x463)



- (1) **N5 - SUNBURST LEG - W4L07205**
5/8"x2 3/8"x11 5/8" (16x60x294)



- (2) **N6 - SUNBURST LEG - W4L07206**
5/8"x2 3/8"x6" (16x60x152)



- (1) **N7 - WINDOW SHELF - W4L07207**
5/8"x2 3/8"x26 1/2" (16x60x674)




- (1) **N8 - DOOR STOP - W4L07220**
5/8"x2 3/8"x3 7/8" (16x60x100)




- (14) **N9 - TIE STRAP - W4L07221**
5/8"x2"x3 1/8" (16x50x80)



- (1) **O1 - TRIM BOARD - W4L07213**
5/8"x1 3/8"x27 1/8" (16x34x689)



- (2) **O2 - TRIM BOARD - W4L07214**
5/8"x1 3/8"x11 3/4" (16x34x300)




- (2) **O3 - TRIM BOARD - W4L07215**
5/8"x1 3/8"x13 3/4" (16x34x350)


Parts Identification

Wood Components

(NOT TO SCALE)



- (1) **O4 - TRIM BOARD - W4L07216**
5/8"x1 3/8"x49 1/2" (16x34x1258)



- (2) **O5 - TRIM BOARD - W4L07217**
5/8"x1 3/8"x42 5/8" (16x34x1084)



- (2) **O6 - BENCH RAIL - W4L07226**
5/8"x1 3/8"x10 1/4" (16x34x259)



- (2) **S1 - PORCH BOARD - W4L07200**
1"x1"x17 3/4" (24x24x450)



- (1) **T1 - PORCH BASE - W4L07187**
1"x1 3/8"x26 1/2" (24x34x673)




- (2) **T2 - PORCH BASE - W4L07188**
1"x1 3/8"x13 3/4" (24x34x348)




- (1) **T3 - PORCH BASE - W4L07189**
1"x1 3/8"x24 5/8" (24x34x625)



- (1) **T4 - PORCH BASE - W4L07190**
1"x1 3/8"x12 3/4" (24x34x324)

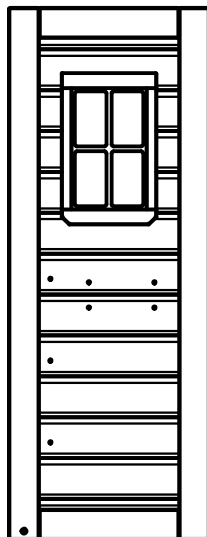

- (1) **WP1 - FRONT RIGHT PANEL - W2A02006**
1 1/8"x15 5/8"x41 1/2" (27x398x1054)

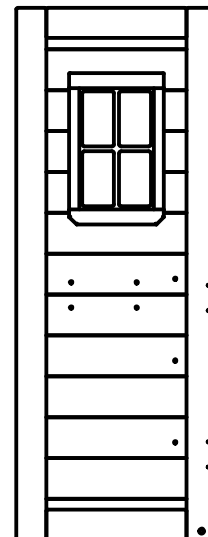


- (1) **WP2 - FRONT LEFT PANEL - W2A02007**
1 1/8"x15 5/8"x41 1/2" (27x398x1054)


Parts Identification

Wood Components


(NOT TO SCALE)

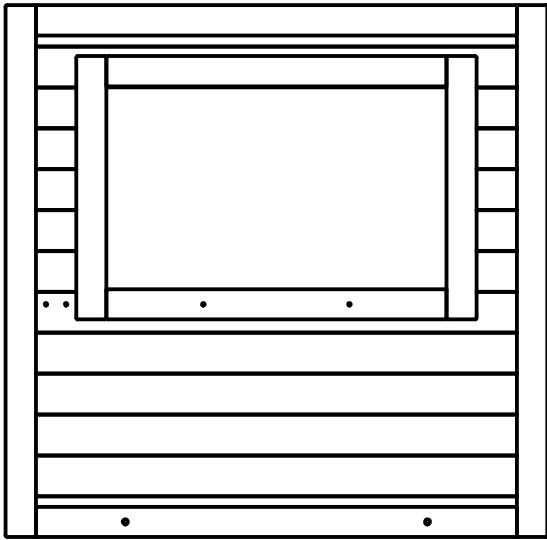


(1) **WP3 - LEFT WALL PANEL - W2A02008**
1 1/8"x42 3/8"x41 1/2" (32x1075x1054)

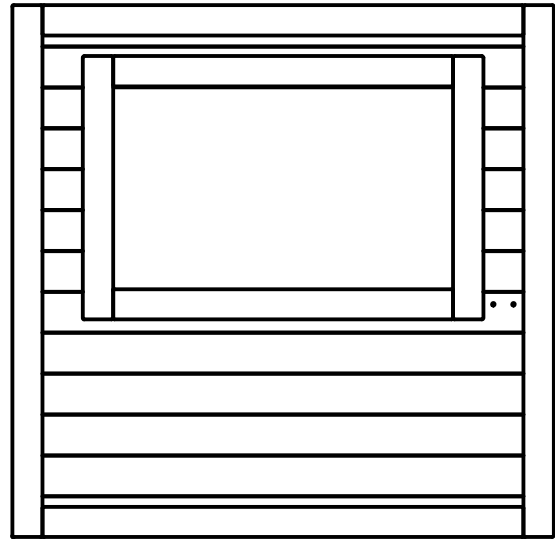


(1) **WP4 - RIGHT WALL PANEL - W2A02009**
1 1/4"x42 3/8"x41 1/2" (32x1075x1054)

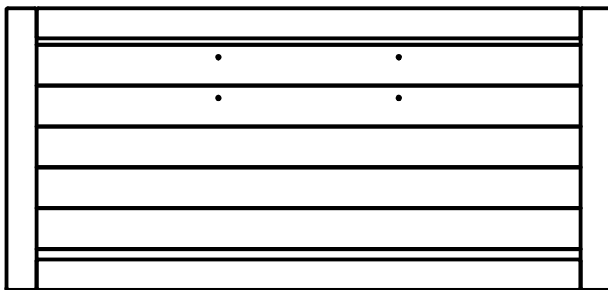


(1) **WP5 - BACK WALL PANEL - W2A02010**
1 1/4"x47 1/4"x22 1/4" (32x1200x558)

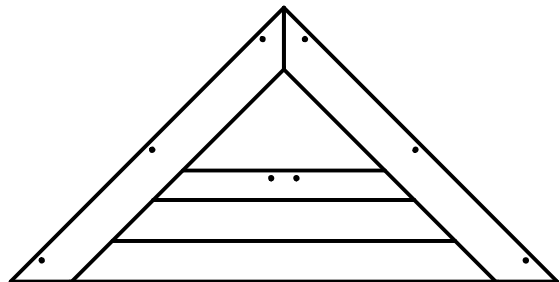

(2) **GP1 - GABLE END ASSEMBLY - W2A02011**
1 1/8"x42 3/4"x21 3/8" (27x1085x543)

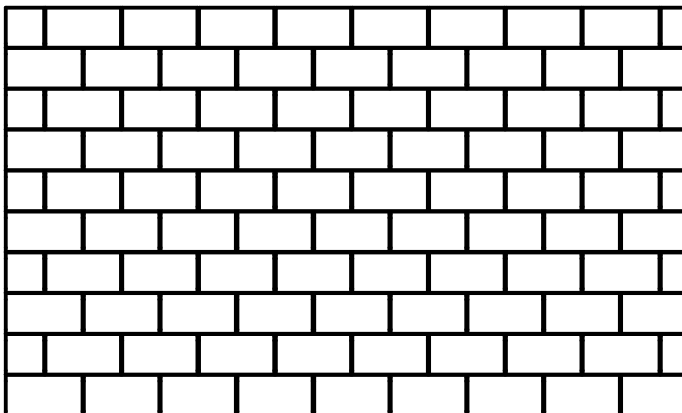

(1) **RP1 - BACK ROOF PANEL - W2A02012**
1 3/8"x35 1/4"x49 5/8" (35x808x1350)

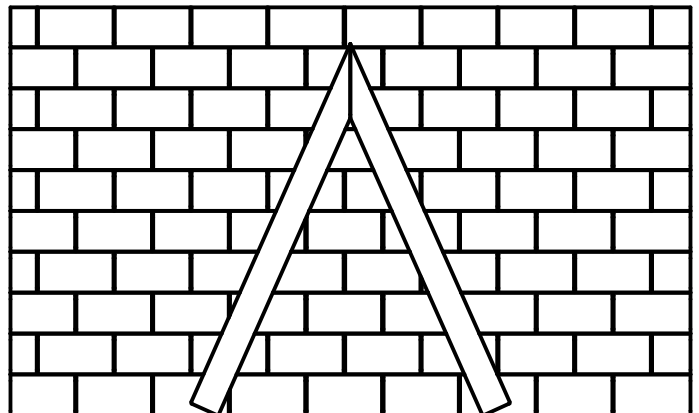


(1) **RP2 - FRONT ROOF PANEL - W2A02013**
2"x35 1/4"x49 5/8" (51x808x1350)


Parts Identification

Wood Components


(NOT TO SCALE)

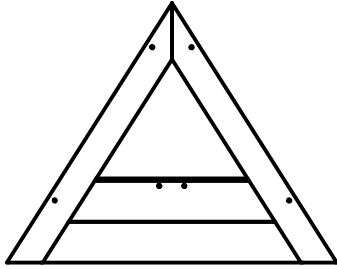


(1) GP2 - GABEL END ASSEMBLY - W2A02014
1 1/8"x25 3/4"x20 1/4" (27x655x514)

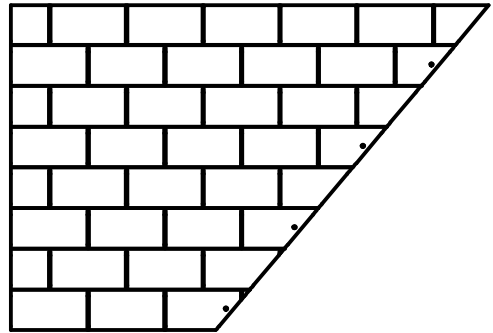

(1) RP3 - RIGHT ROOF PANEL - W2A02015
1 3/8"x37 3/8"x25 1/2" (35x949x646)

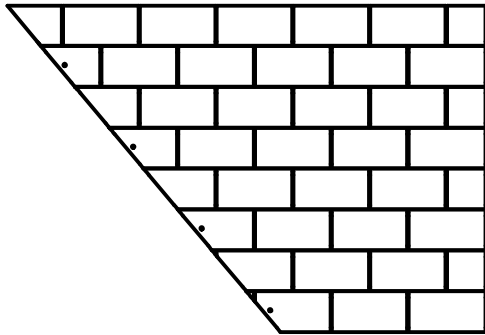


(1) RP4 - LEFT ROOF PANEL - W2A02016
1 3/8"x37 3/8"x25 1/2" (35x949x646)

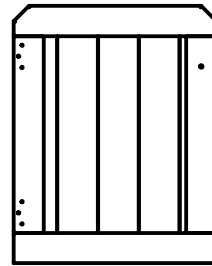


(1) DP1 - DOOR PANEL - W2A02017
1 1/8"x15 7/8"x20 1/8" (27x402x510)

Parts Identification

Hardware




(9) SCREW PFH 8x1/2 - H100124



(32) SCREW PFH 8x1 - H100085



(52) SCREW PFH 8x1 1/8 - H100088



(153) SCREW PFH 8x1 1/4 - H100087



(80) SCREW PFH 8x1 1/2 - H100086



(14) SCREW PFH 8x1 3/4 - H100089




(11) SCREW PFH 8x2 1/2 - H100090




(4) SCREW PWH 8x5/8 - H100128




(26) SCREW PWH 8x5/8 BLK - H100202

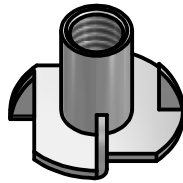


(2) T-NUT 5/16 - H100074

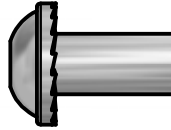


(2) NUT BARREL WH 1/4x5/8 - H100136

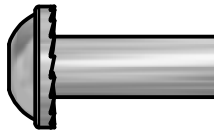


(11) NUT BARREL WH 1/4x7/8 - H100140

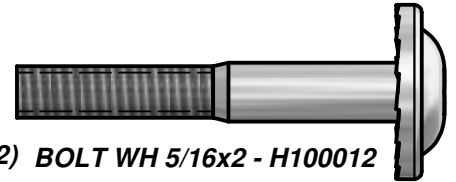

(2) BOLT WH 5/16x2 - H100012

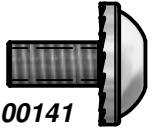


(2) BOLT WH 1/4x1/2 - H100141

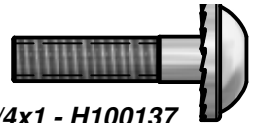


(2) BOLT WH 1/4x1 - H100137




(9) BOLT WH 1/4x1-1/2 - H100143

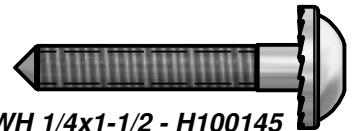


(2) LAG SCREW WH 1/4x1-1/2 - H100145

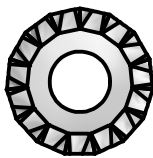


(2) WASHER LOCK EXT 8x19 - H100030

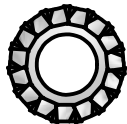

(11) WASHER LOCK EXT 6x15 - H100138

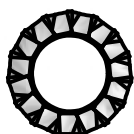

(13) WASHER LOCK EXT 8x15 - H100139

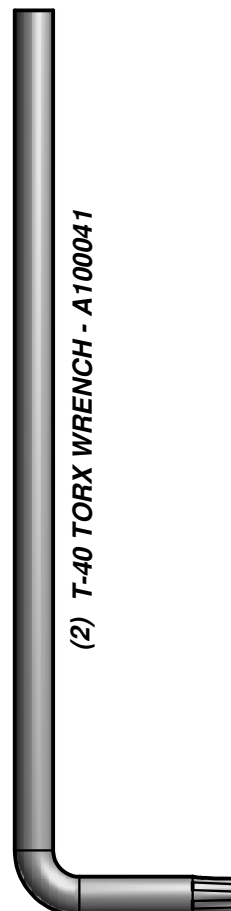


(2) T-40 TORX WRENCH - A100041



(2) T-30 TORX BIT - H100147



(2) T-40 TORX BIT - A100042

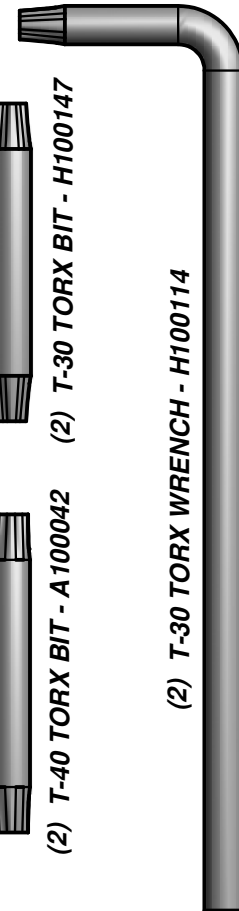


(2) T-30 TORX WRENCH - H100114


Parts Identification

Accessories


(NOT TO SCALE)

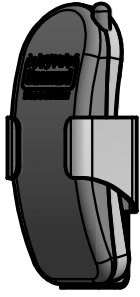


(1) *PHONE KIT - A100132*

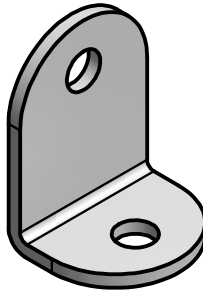


(2) *L BRACKET WHITE 32x51 - A100133*

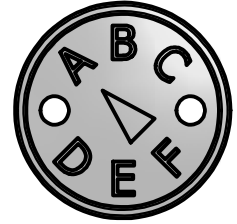

(1) *"A" REVISION TAG - A100314*

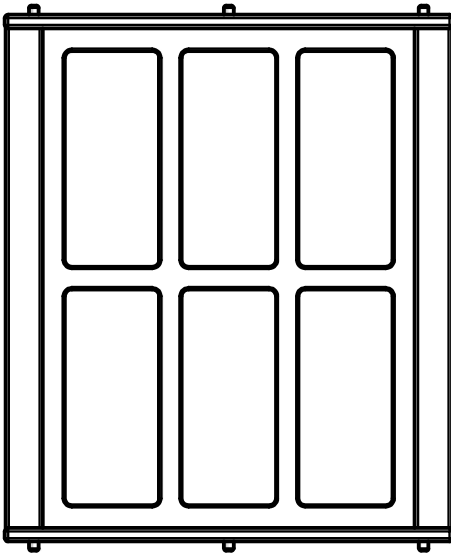


(3) *BAY WINDOW PANEL - A100373*

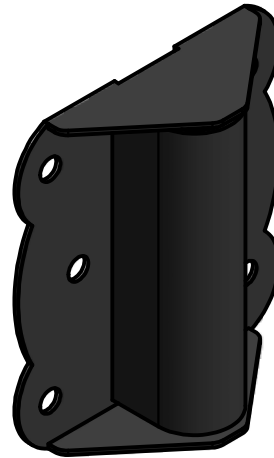

(2) *SPRING HINGE - BYA GREEN - A4M00591*



(1) *BYD ID TAG (MEDIUM) AGES 2 TO 10 - A4M00528*

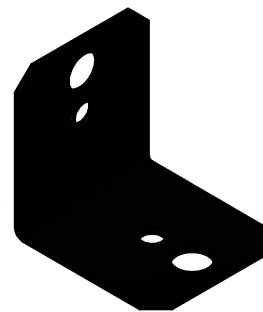

(12) *90° L-BRACKET - BLK - A4M00555*




(1) *KNOB - BUTTER - A6P00158*


Parts Identification

Accessories


(NOT TO SCALE)

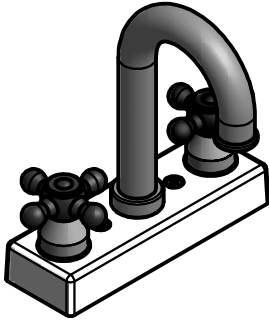


(1) FAUCET KIT - A6P00024

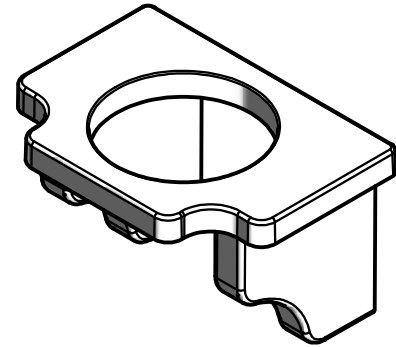


(2) FLOWER POT HOLDER - A6P00023

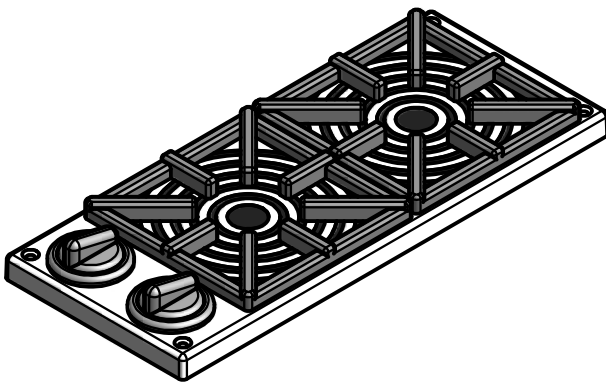


(1) STOVE KIT - A6P00025

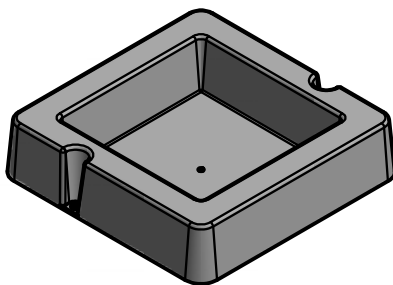


(1) SURFACE MOUNT BASIN - A6P00032

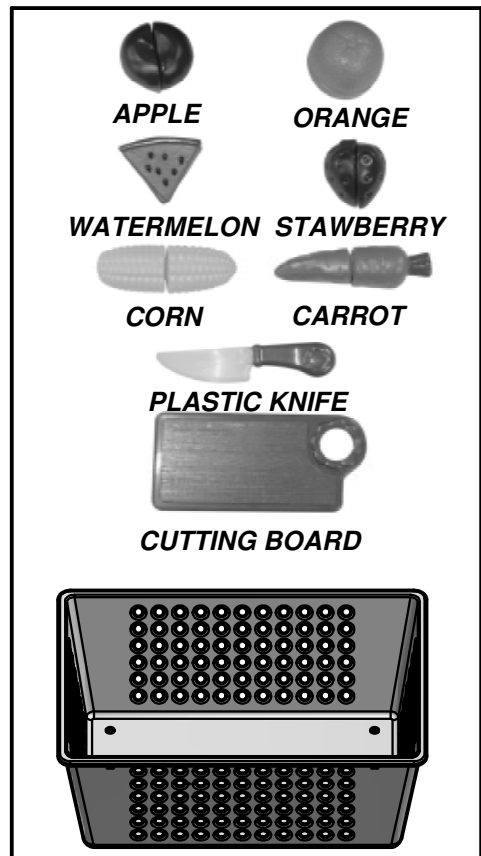


(1) FRUIT BASKET KIT - A6P00069

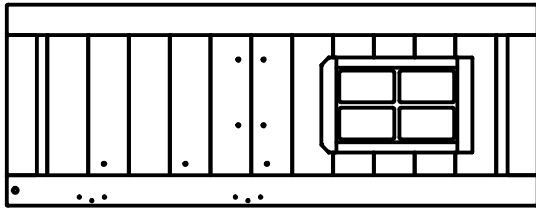

- (1) **WP2 - FRONT LEFT PANEL - W2A02007**
 1 1/8"x15 5/8"x41 1/2" (27x398x1054)

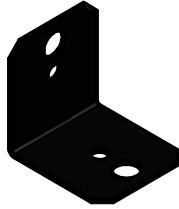


- (2) **90° L-BRACKET - BLK - A4M00555**

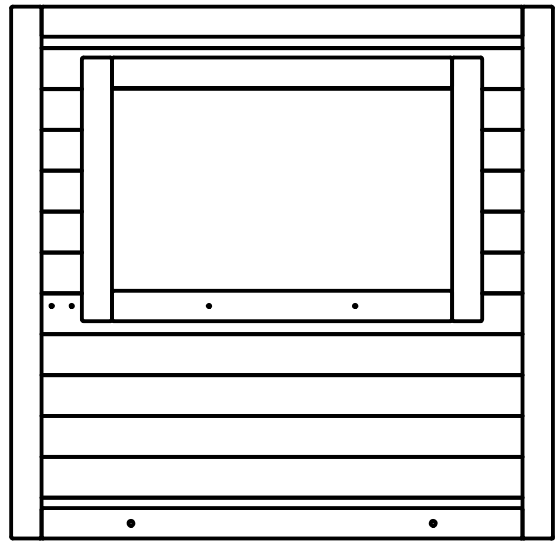





- (1) **WP3 - LEFT WALL PANEL - W2A02008**
 1 1/4"x42 3/8"x41 1/2" (32x1075x1054)


STEP 1:

PLAYHOUSE ASSEMBLY

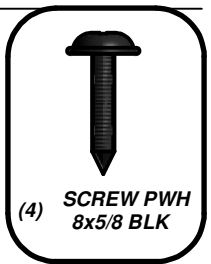


- (4) **SCREW PWH 8x5/8 BLK**

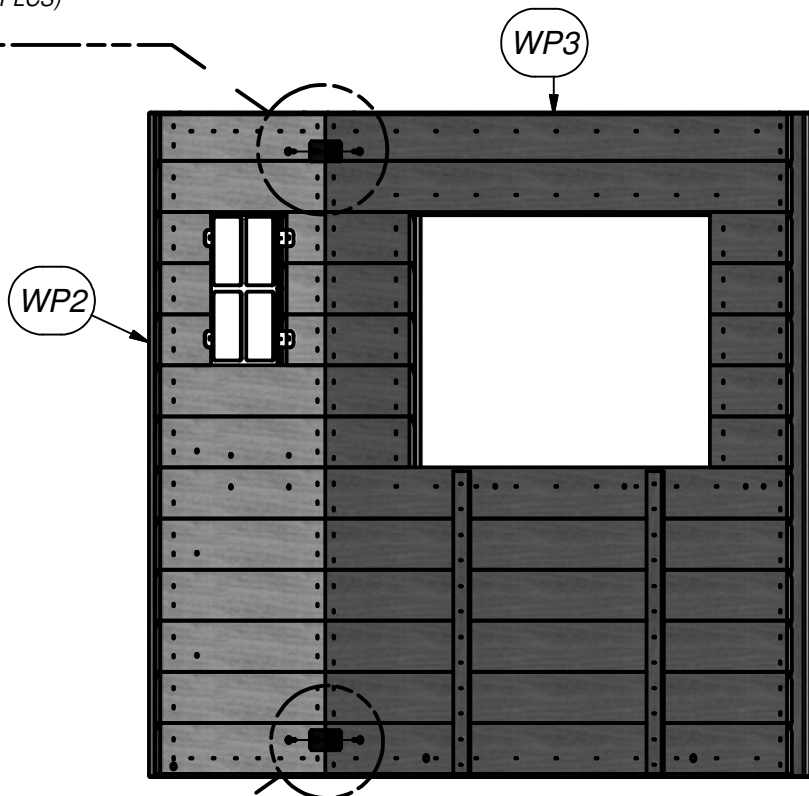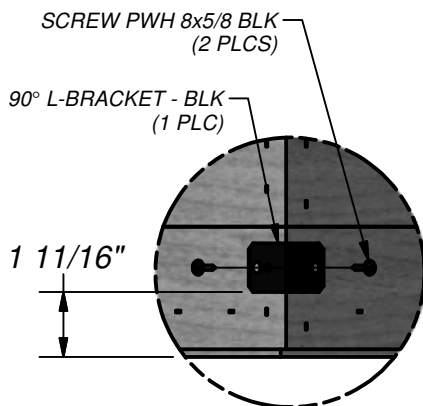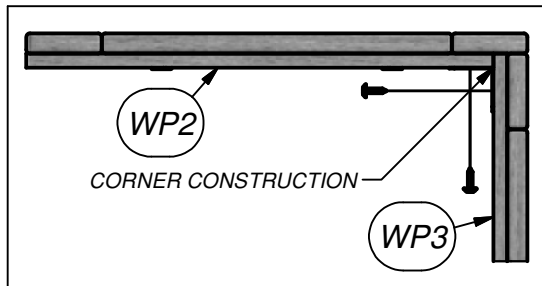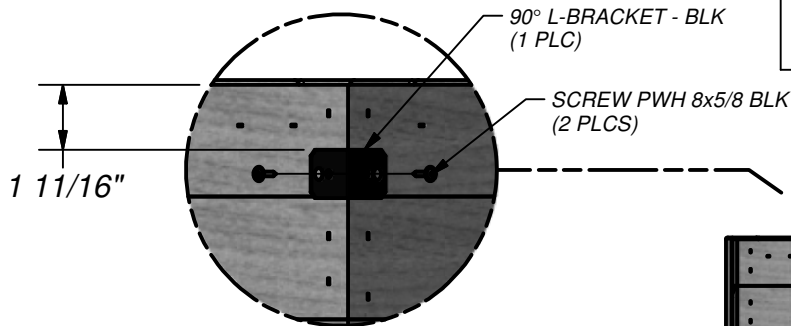


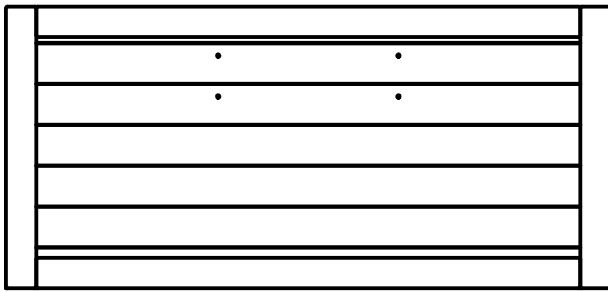



(1) **WP5 - BACK WALL PANEL - W2A02010**
1 1/4"x47 1/4"x22 1/4" (32x1200x558)

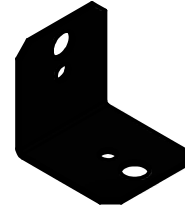


(2) **90° L-BRACKET - BLK - A4M00555**

STEP 2:

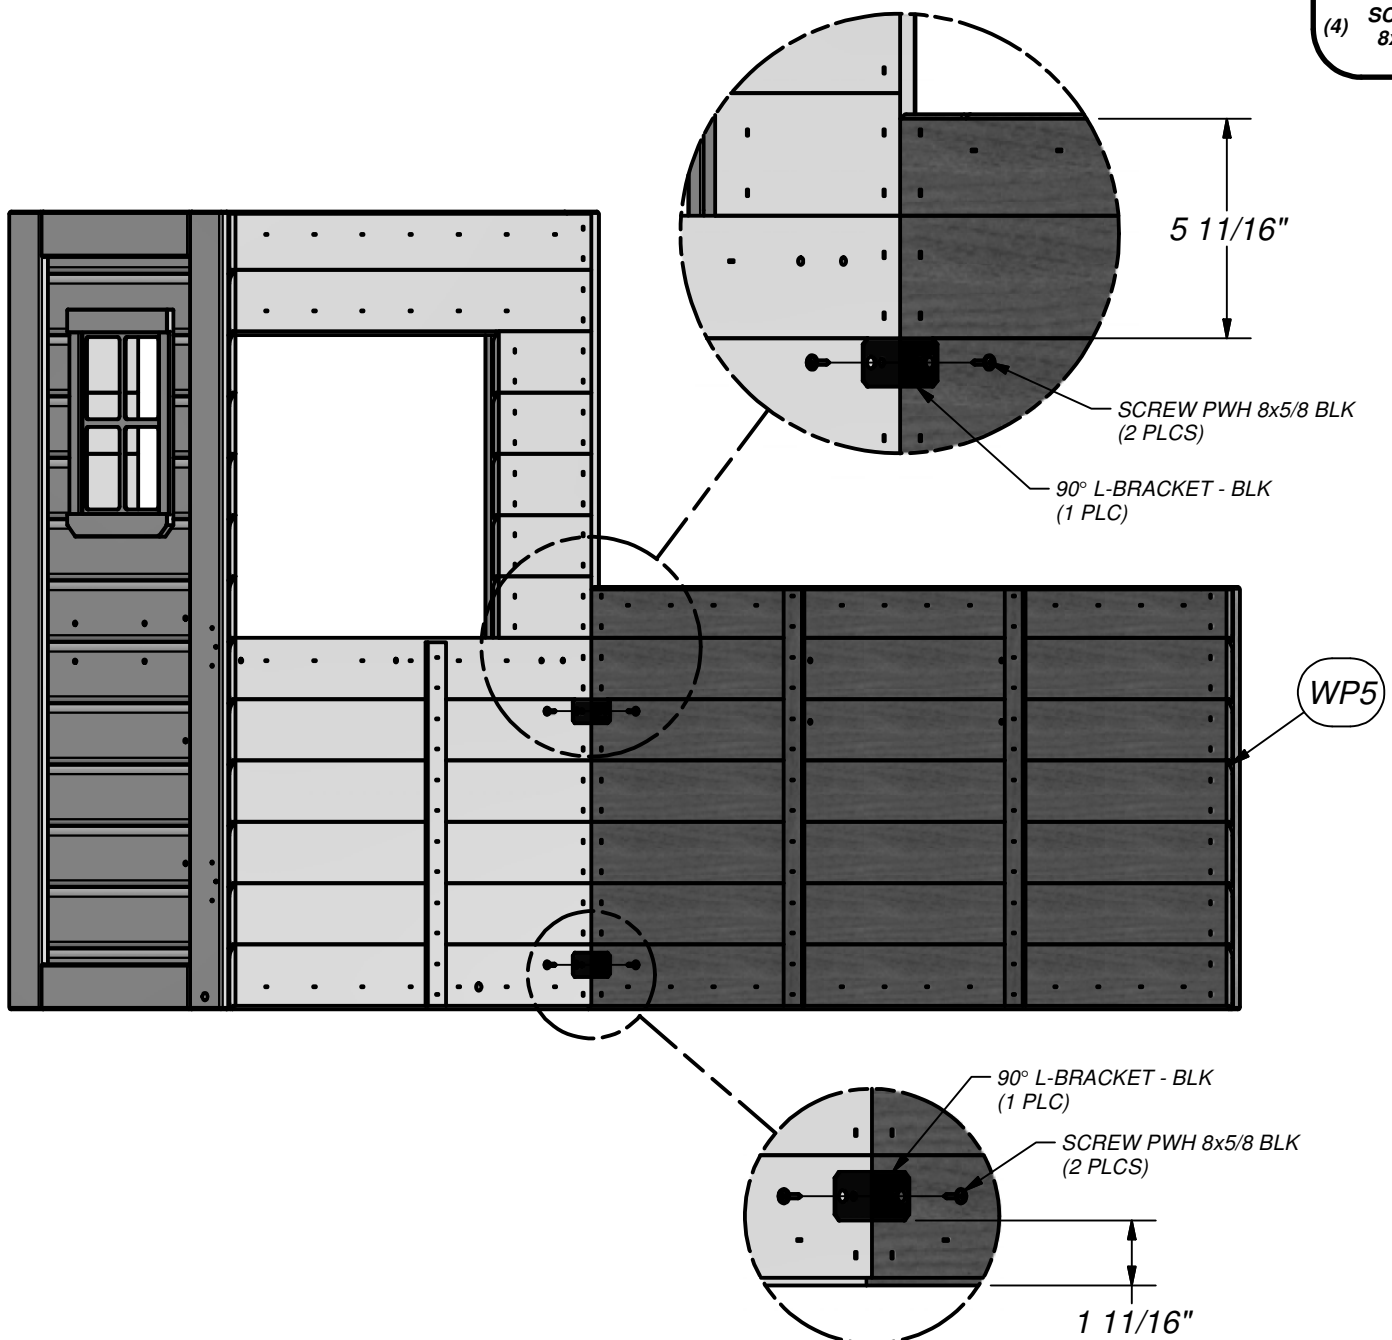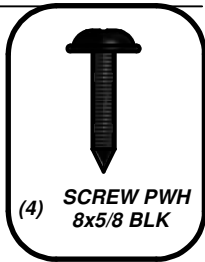



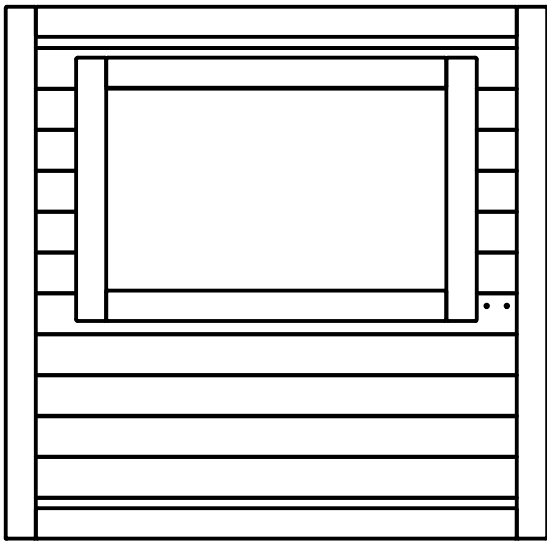



(1) **WP4 - RIGHT WALL PANEL - W2A02009**
 1 1/4"x42 3/8"x41 1/2" (32x1075x1054)

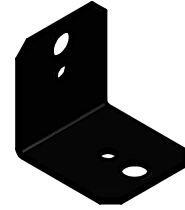


(2) **90° L-BRACKET - BLK - A4M00555**

STEP 3:

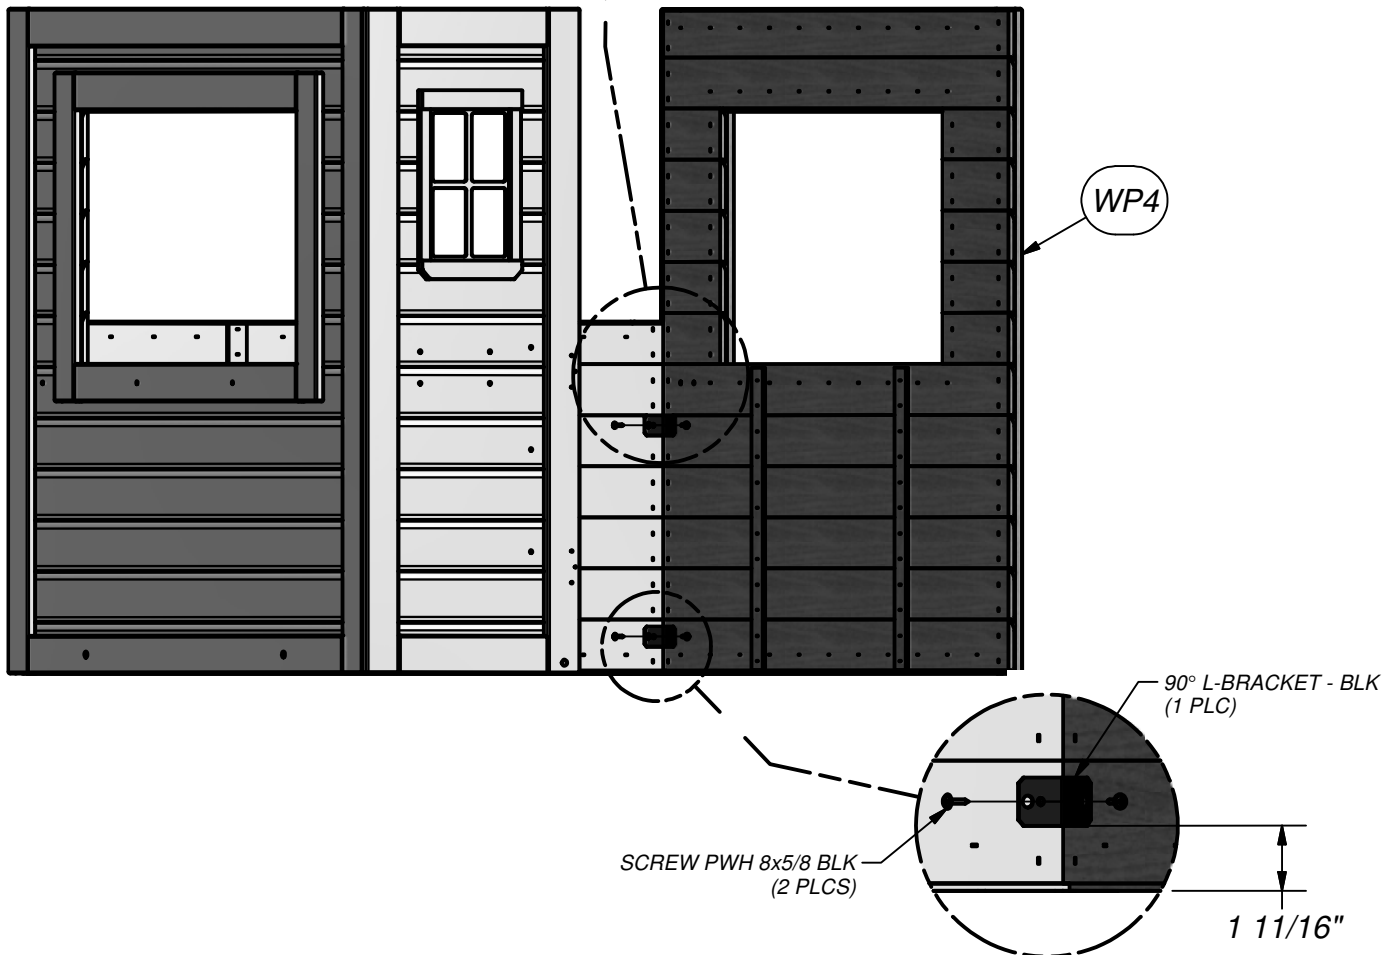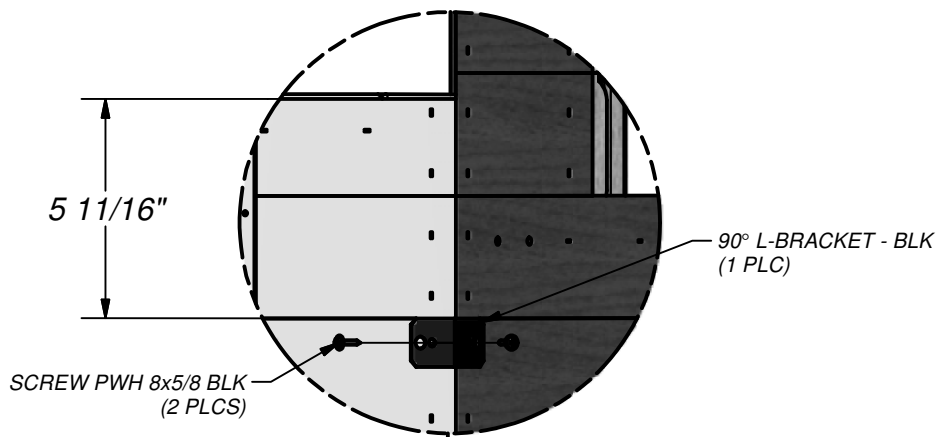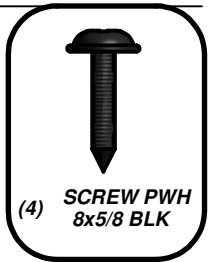


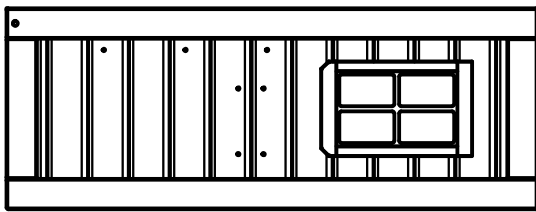



(1) **WP1 - FRONT RIGHT PANEL - W2A02006**
 1 1/8"x15 5/8"x41 1/2" (27x398x1054)

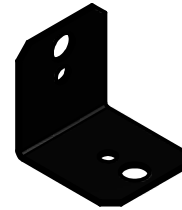

(2) **90° L-BRACKET - BLK - A4M00555**

STEP 4:

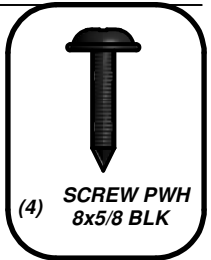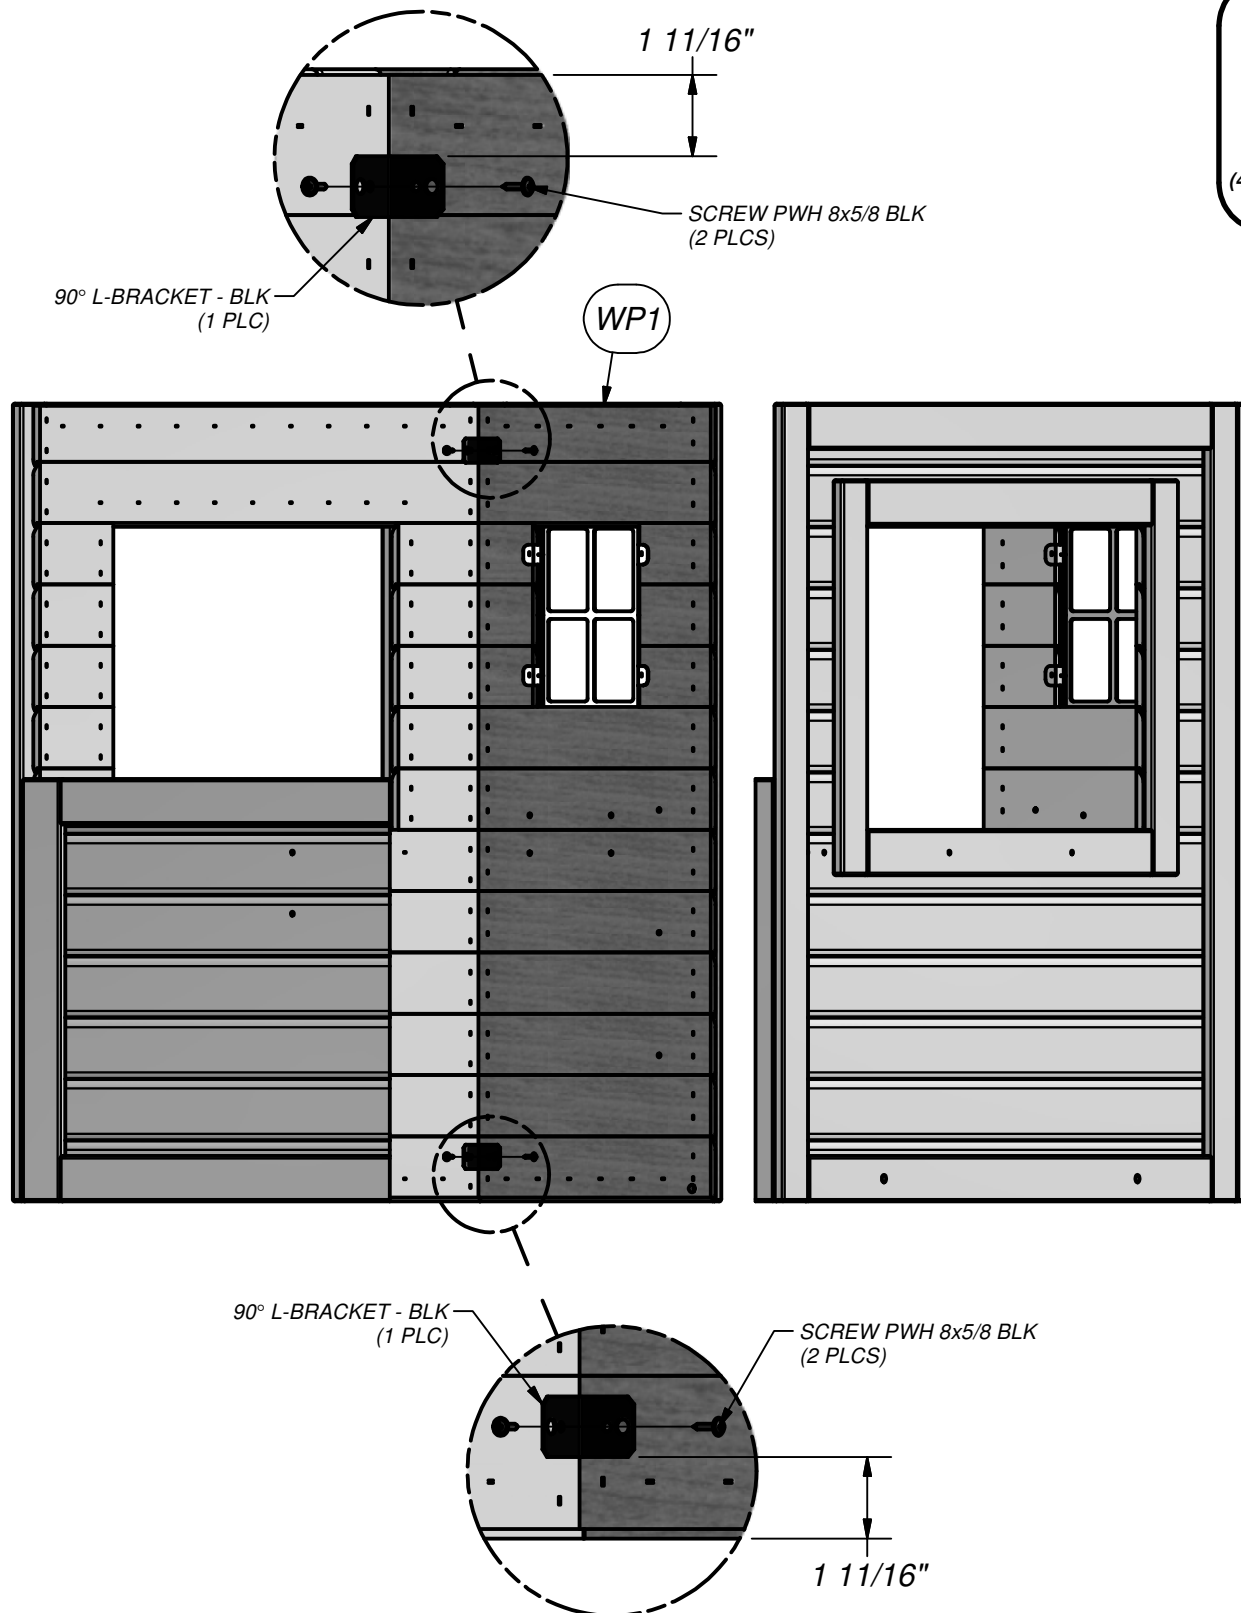


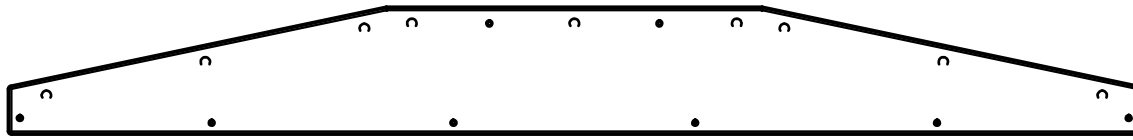

(2) **K3 - BAY WINDOW HEADER - W4L07180**
5/8"x5 1/4"x47 1/8" (16x134x1198)






(2) **J1 - BAY WINDOW SIDE - W4L07181**
1"x1 7/8"x18 1/4" (24x48x464)

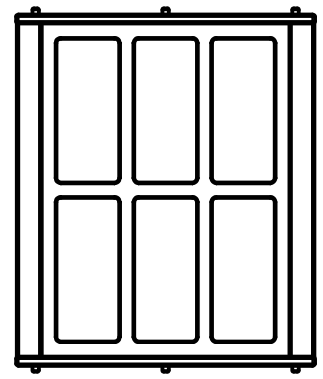

(3) **BAY WINDOW PANEL - A100373**



STEP 5:

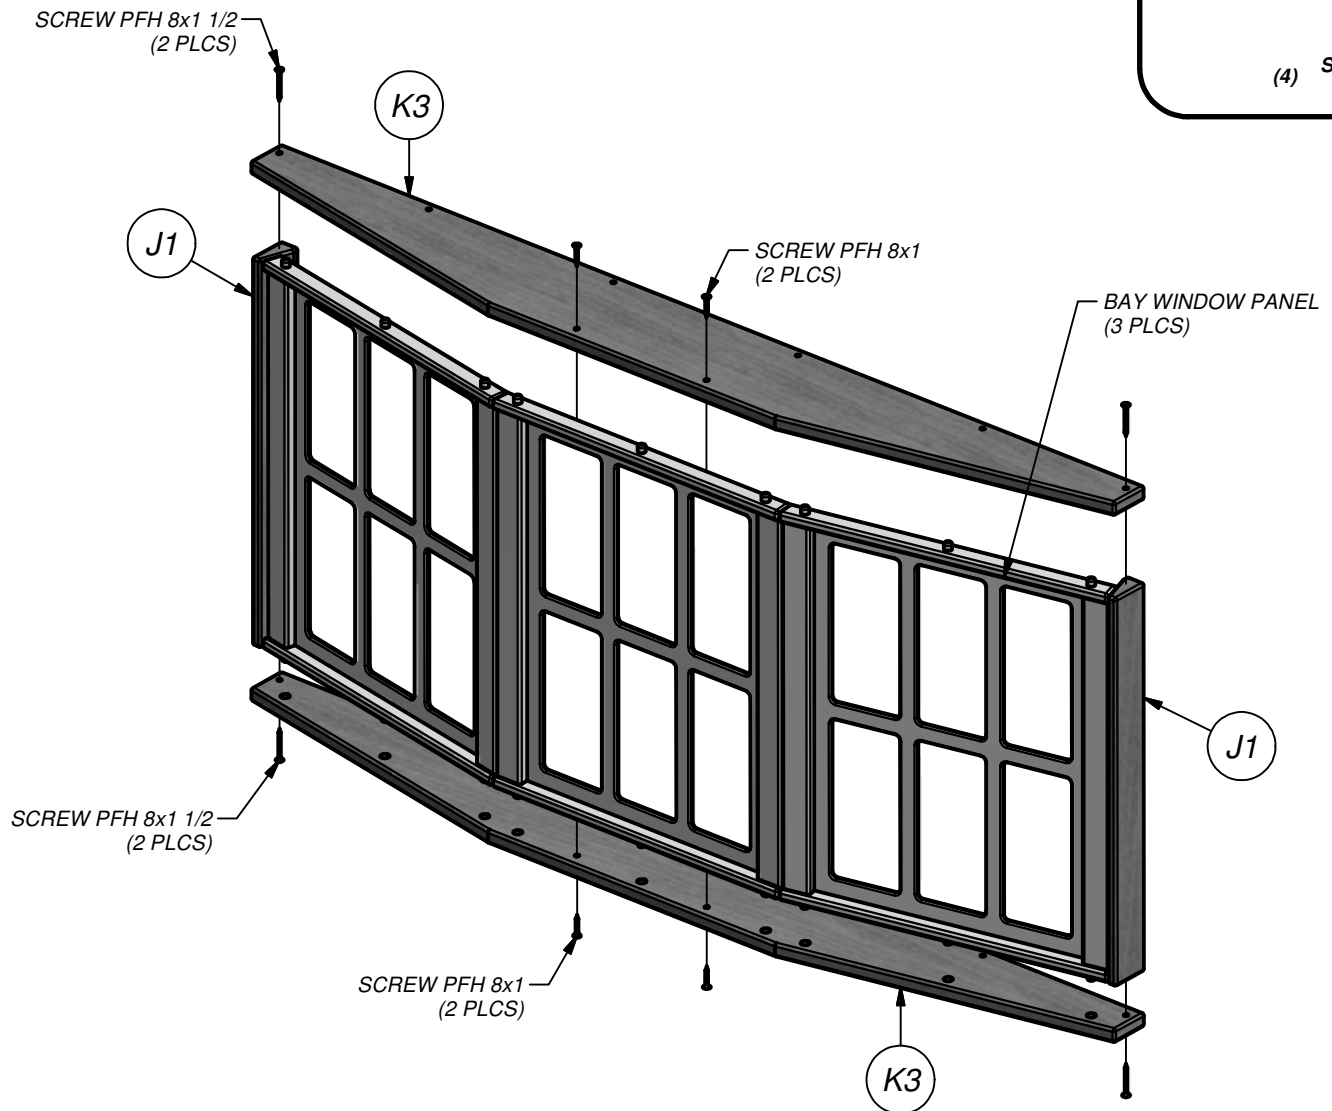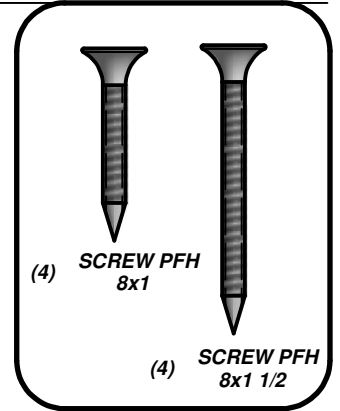

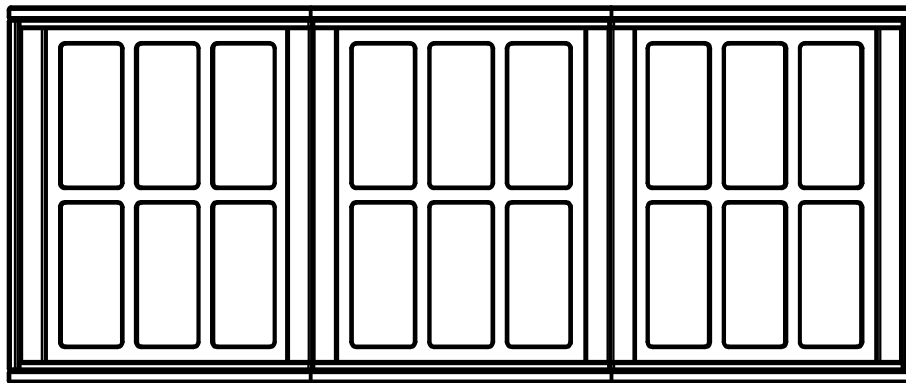

(1) BAY WINDOW ASSEMBLY

STEP 6:

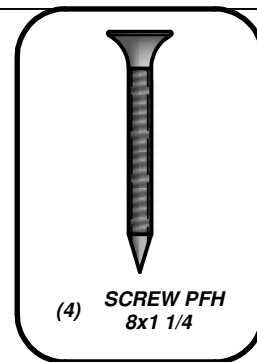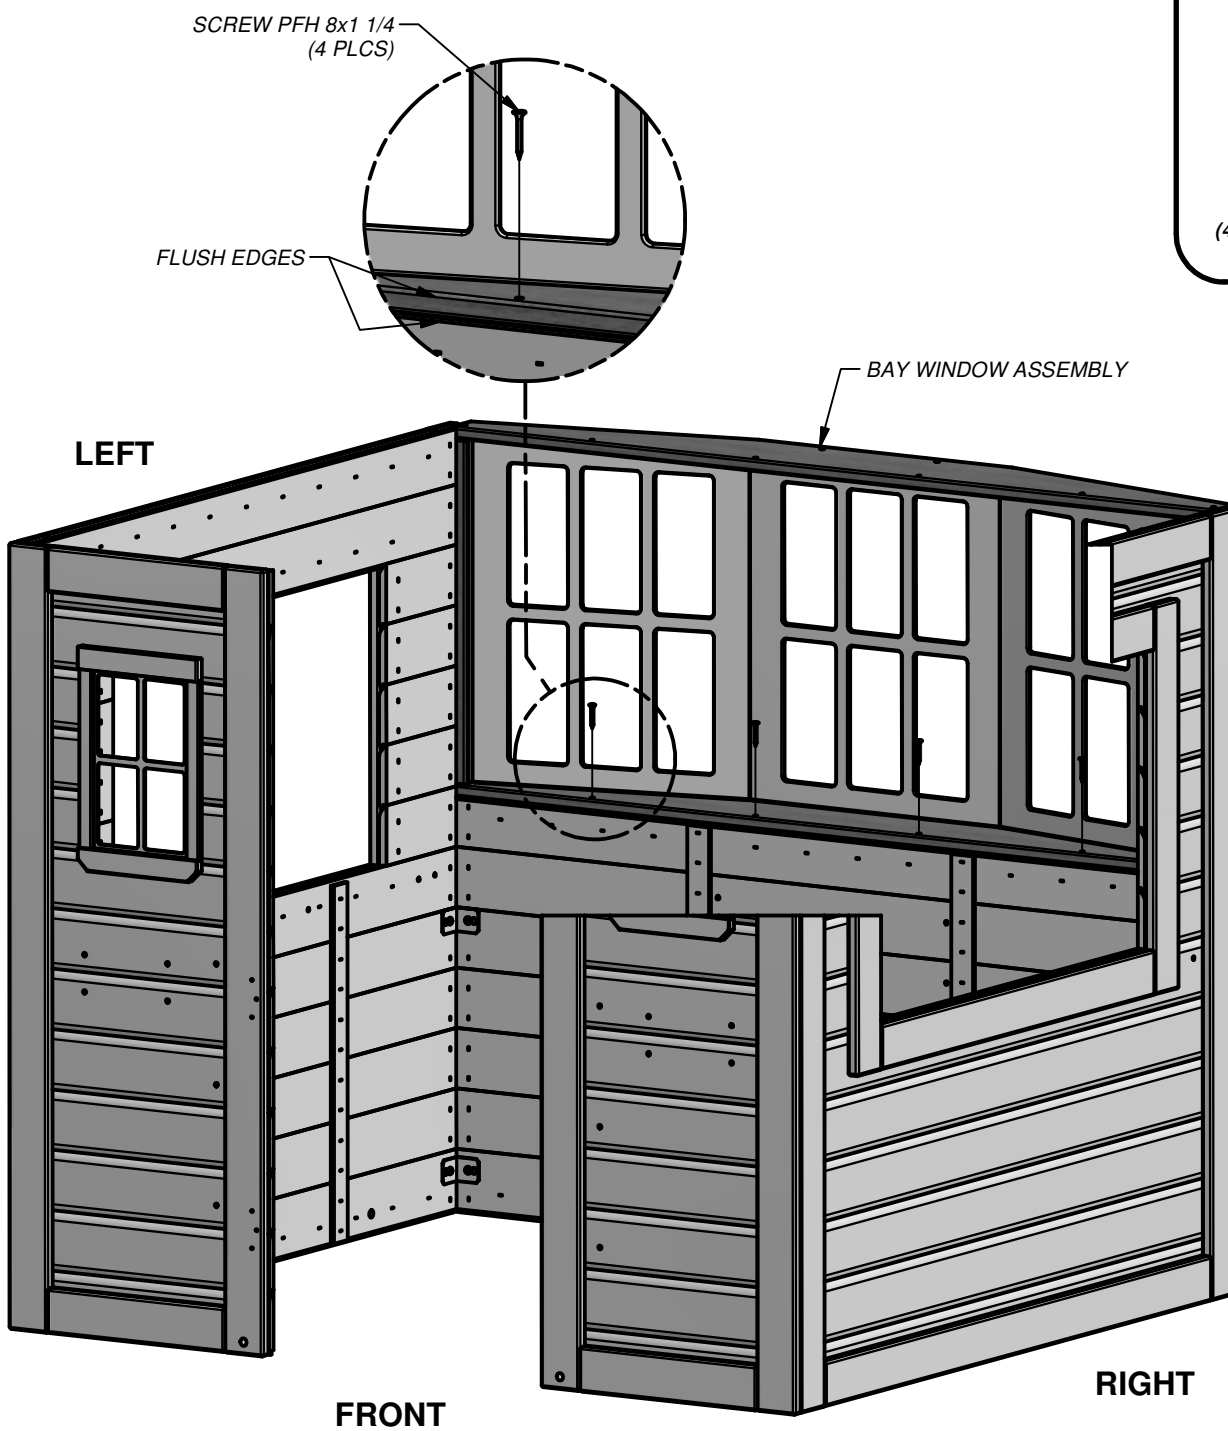






(2) **H1 - HEADER BOARD - W4L07182**
1"x3 3/8"x48 1/4" (24x86x1226)



(2) **H2 - HEADER BOARD - W4L07183**
1"x3 3/8"x40 7/8" (24x86x1037)



STEP 7:

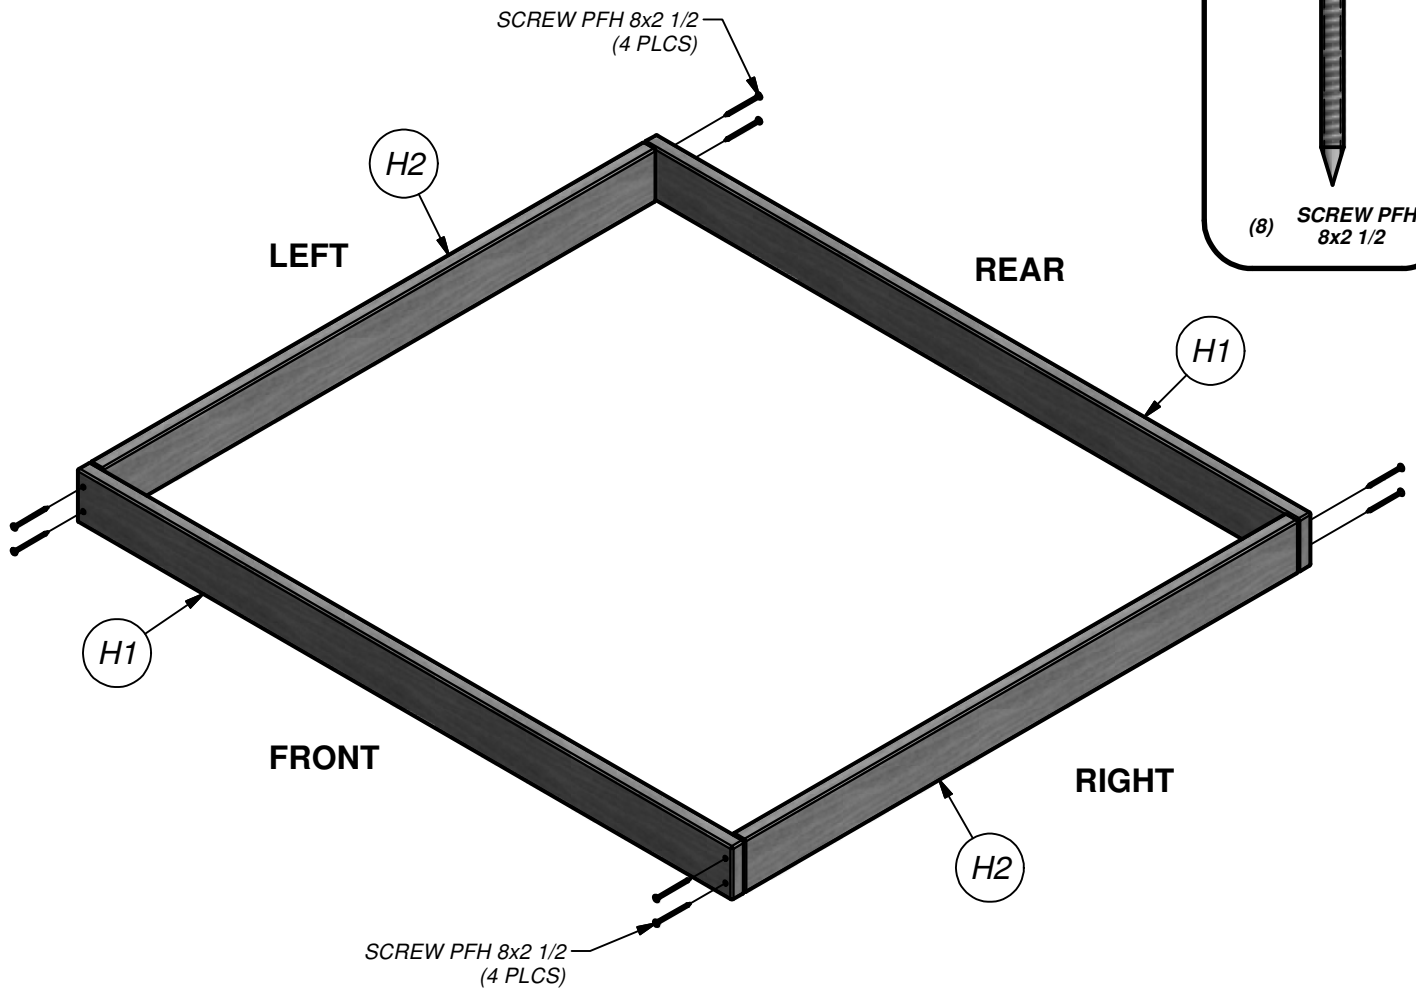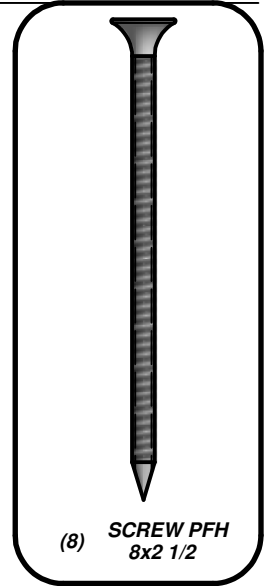


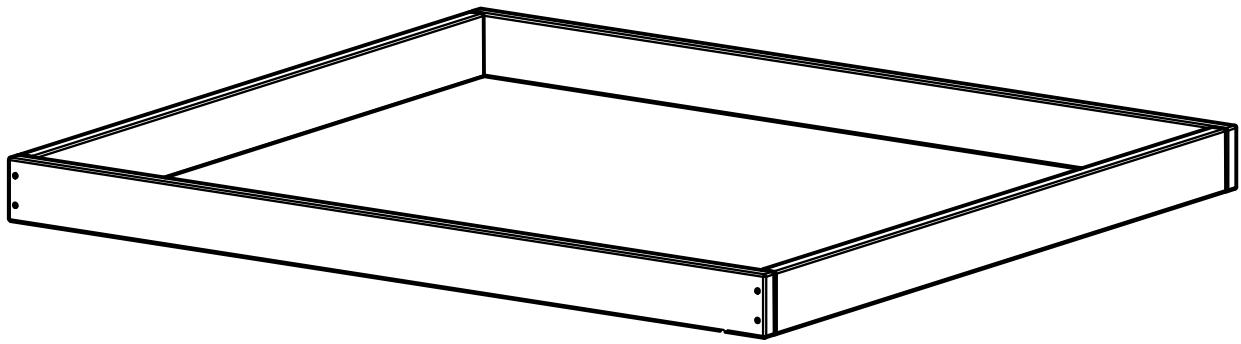

(1) HEADER ASSEMBLY


STEP 8:

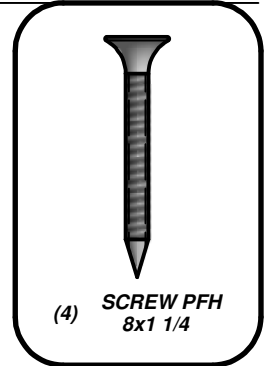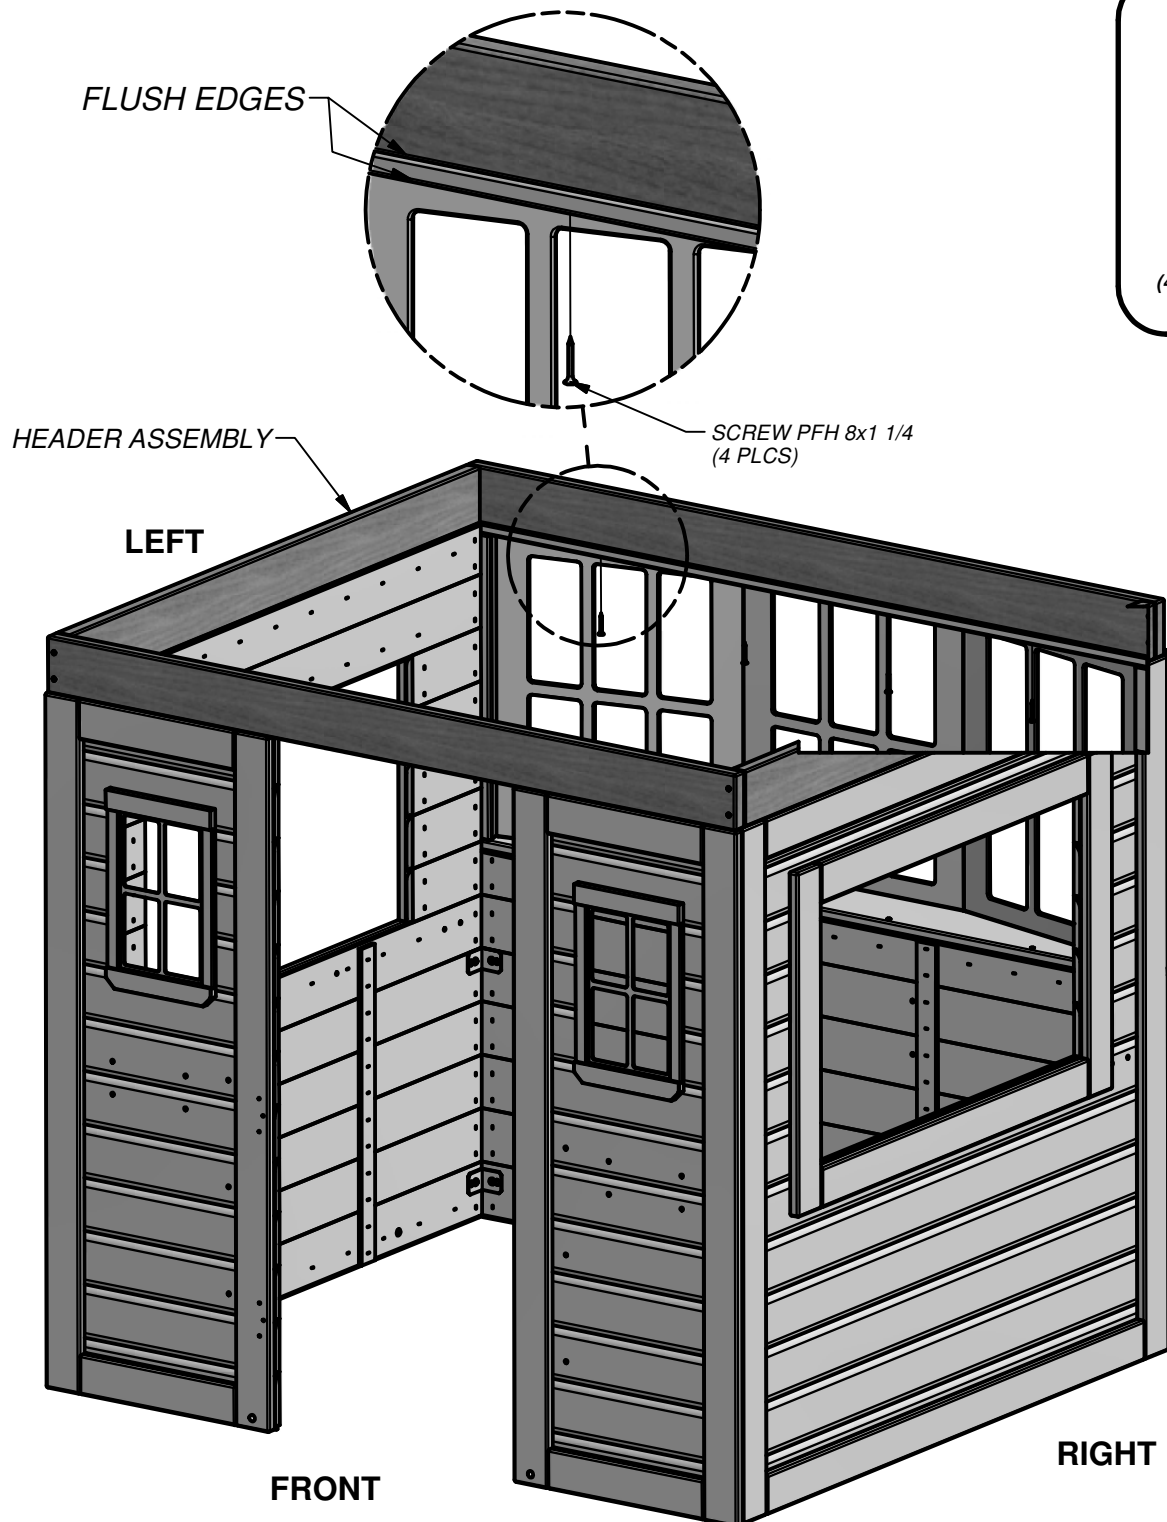

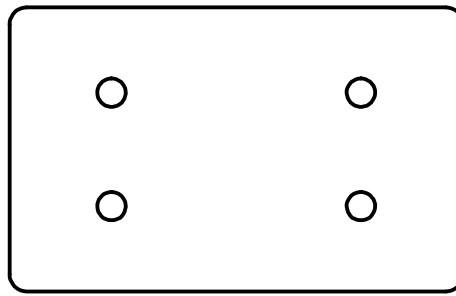



(4) **N9 - TIE STRAP - W4L07221**
5/8"x2"x3 1/8" (16x50x80)

STEP 9:

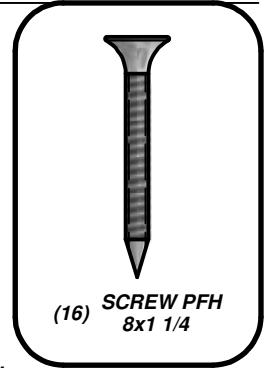



(16) **SCREW PFH**
8x1 1/4

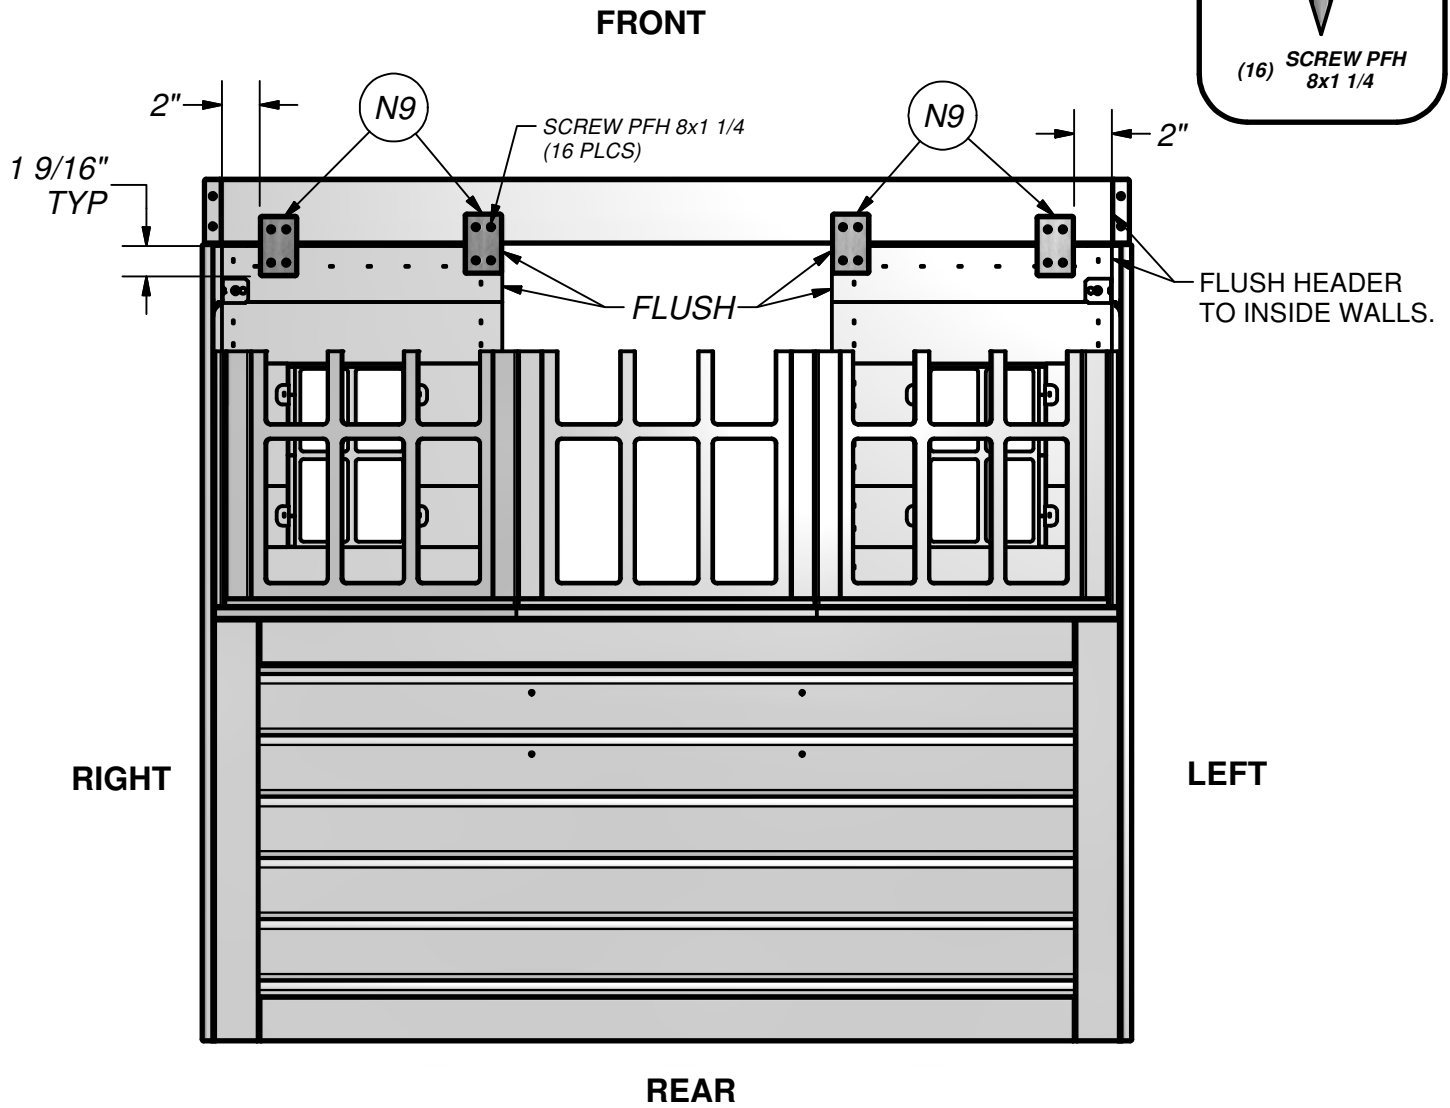


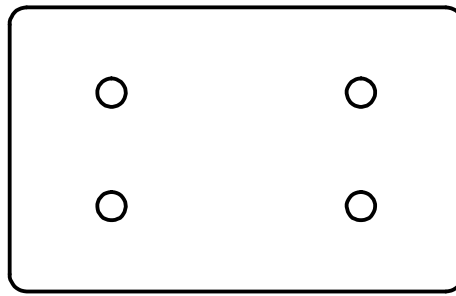

(2) **N9 - TIE STRAP - W4L07221**
5/8"x2"x3 1/8" (16x50x80)



STEP 10:

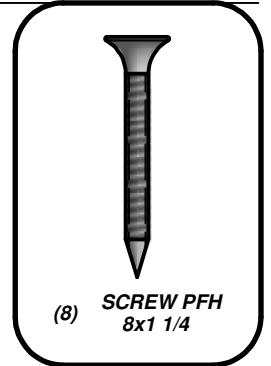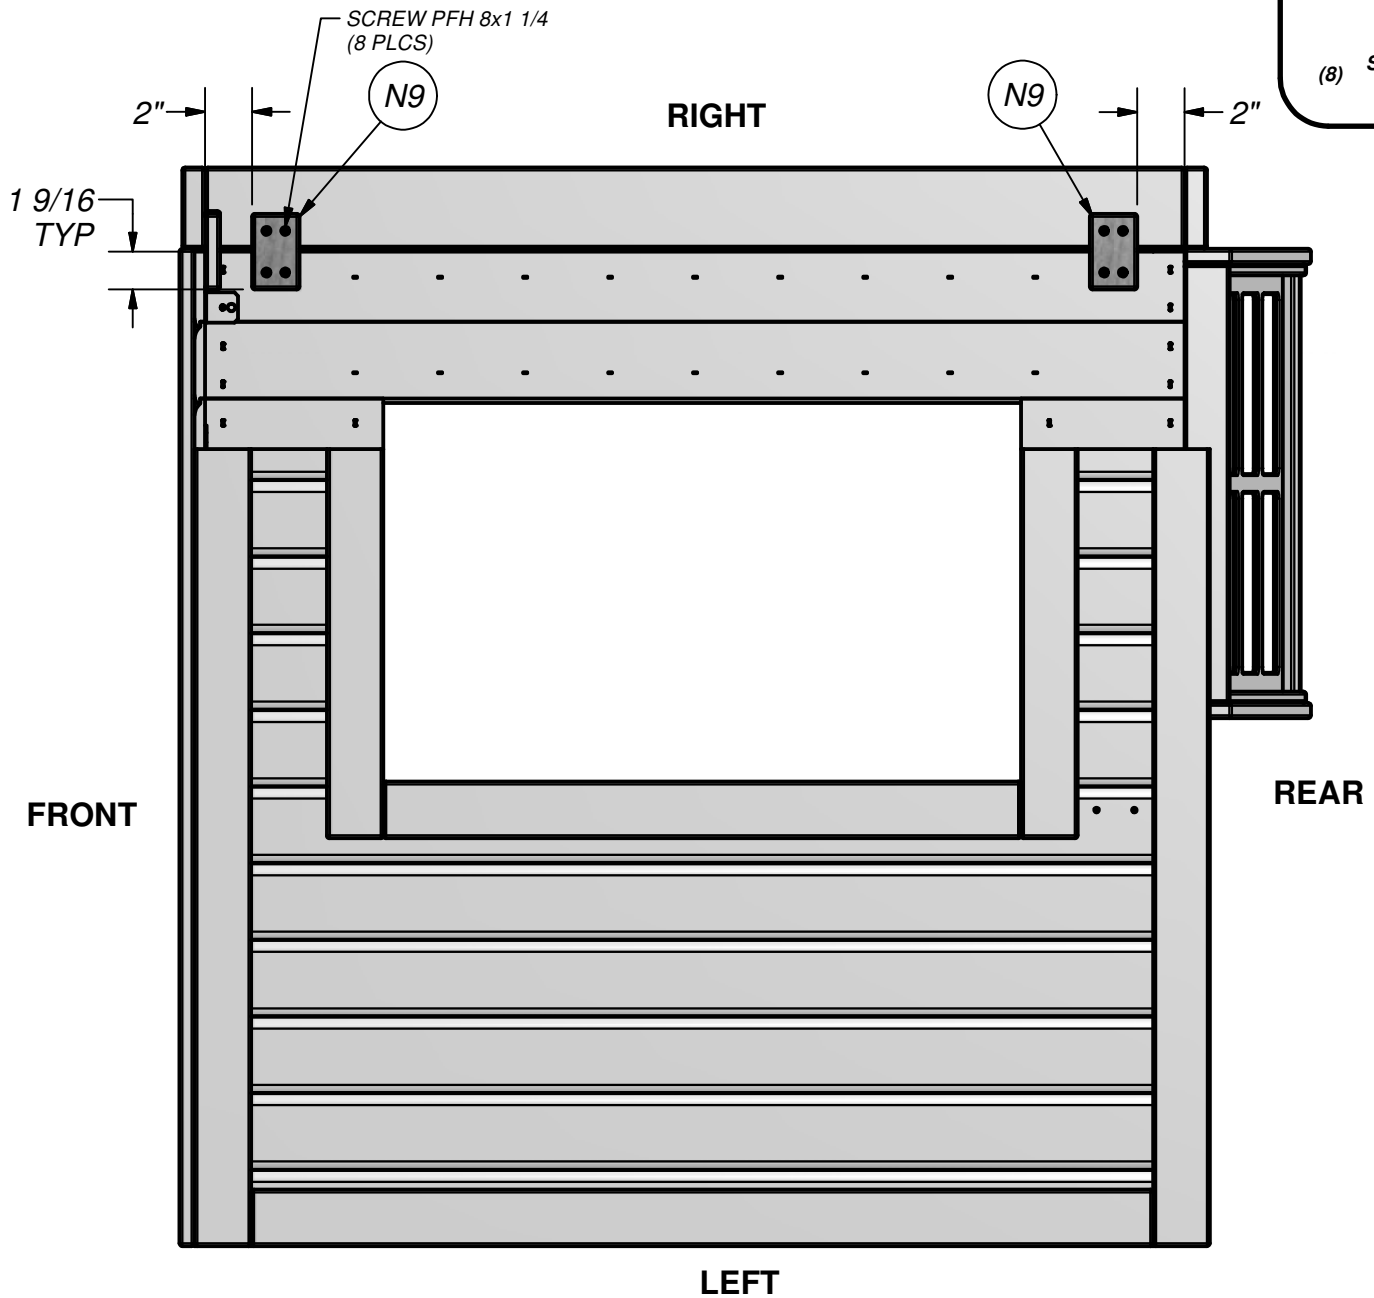

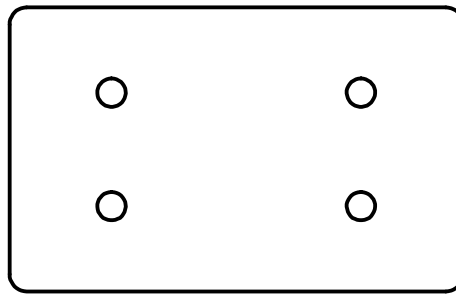


(2) **N9 - TIE STRAP - W4L07221**
5/8"x2"x3 1/8" (16x50x80)

STEP 11:

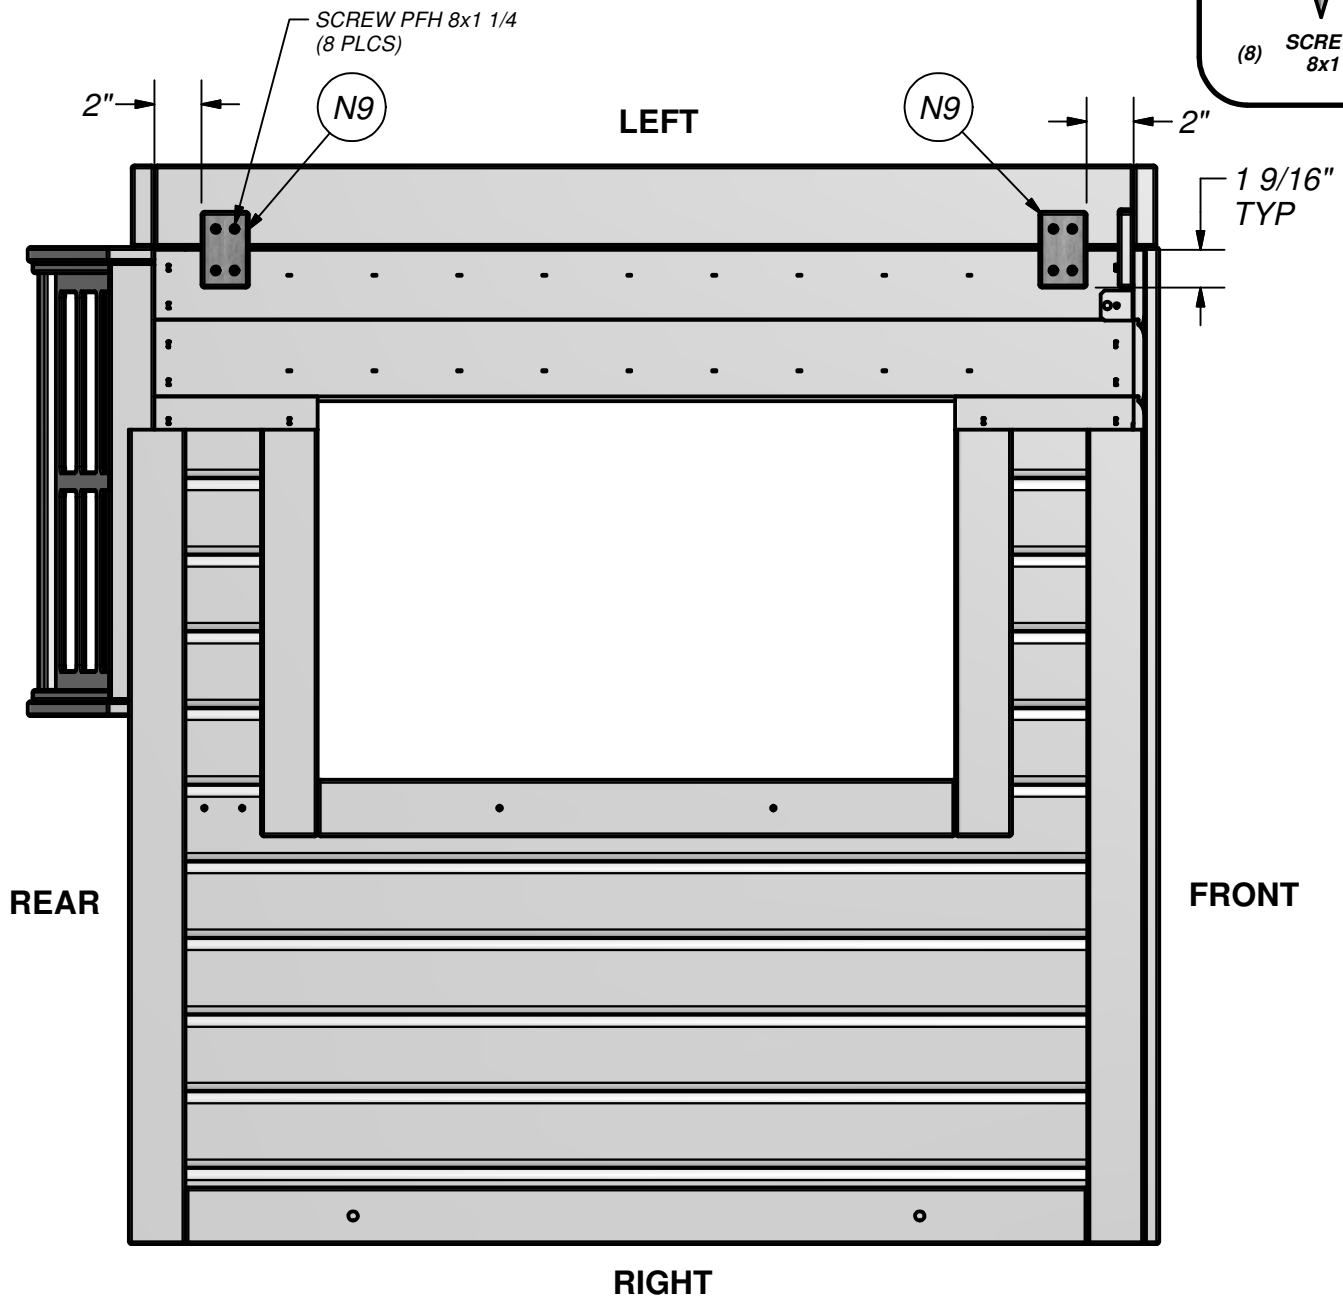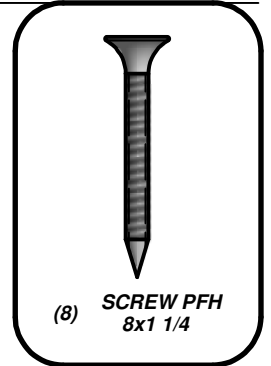



- (1) **T1 - PORCH BASE - W4L07187**
1"x1 3/8"x26 1/2" (24x34x673)



- (2) **T2 - PORCH BASE - W4L07188**
1"x1 3/8"x13 3/4" (24x34x348)





- (1) **T3 - PORCH BASE - W4L07189**
1"x1 3/8"x24 5/8" (24x34x625)



- (1) **T4 - PORCH BASE - W4L07190**
1"x1 3/8"x12 3/4" (24x34x324)


STEP 12:

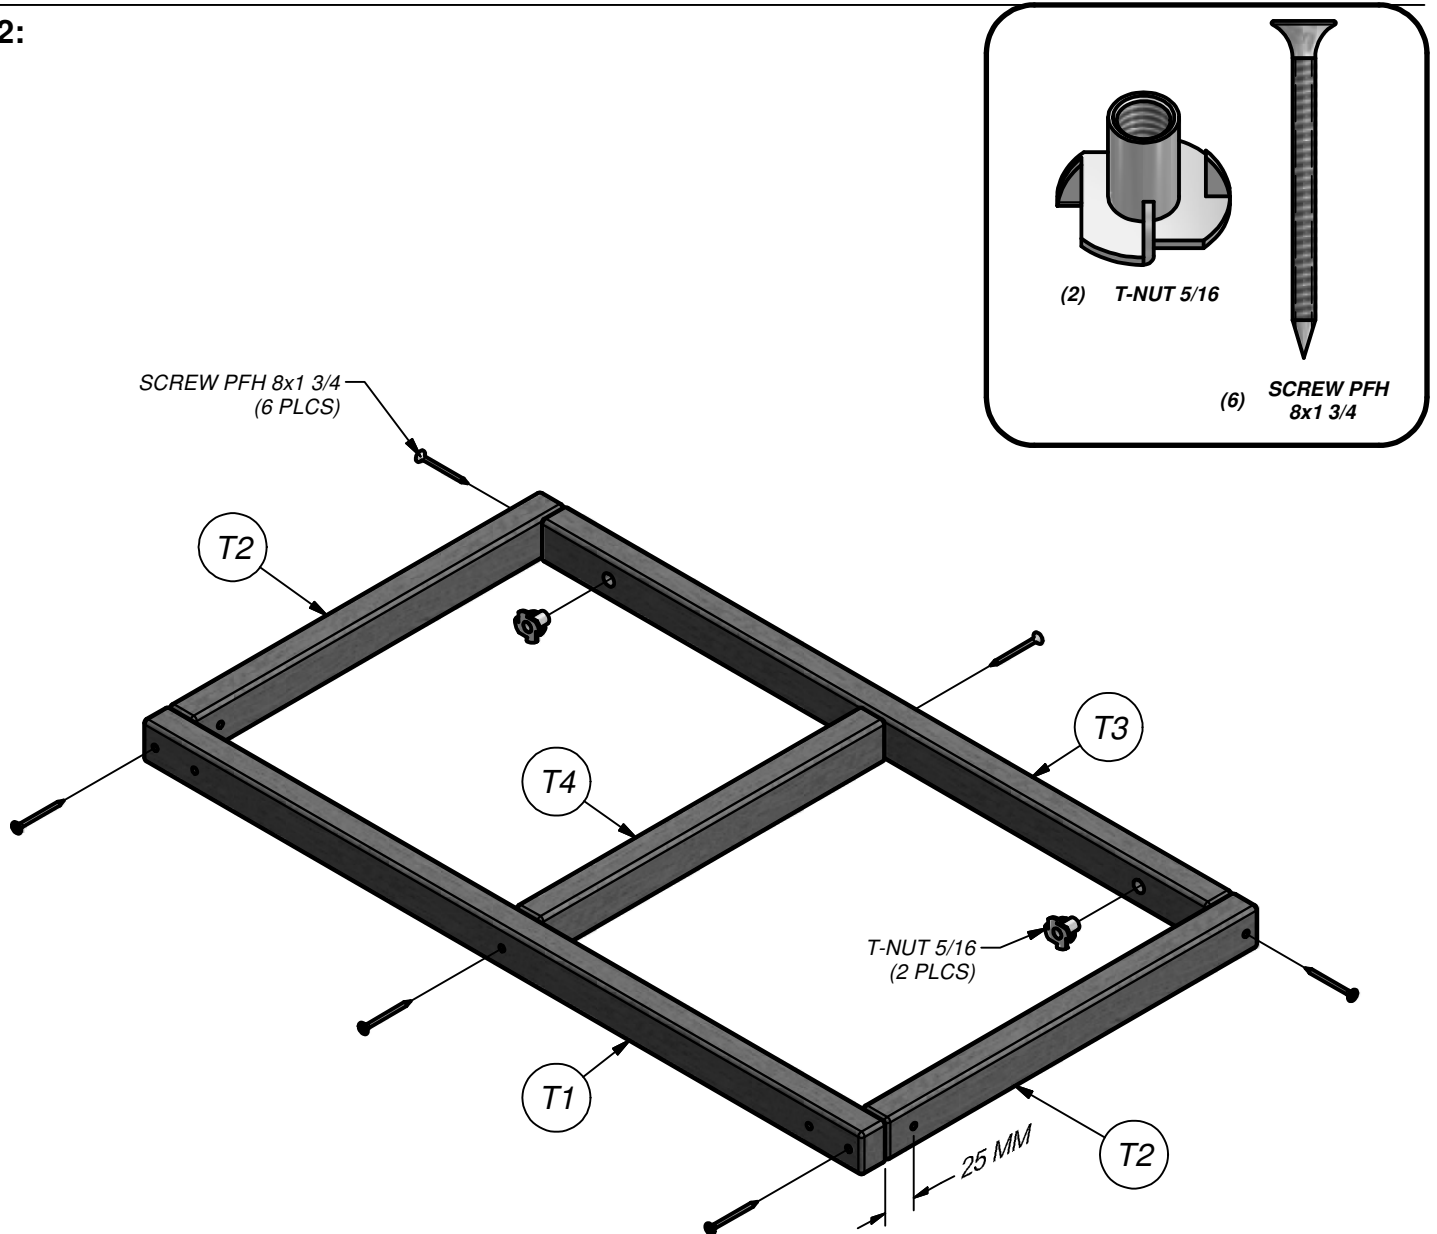

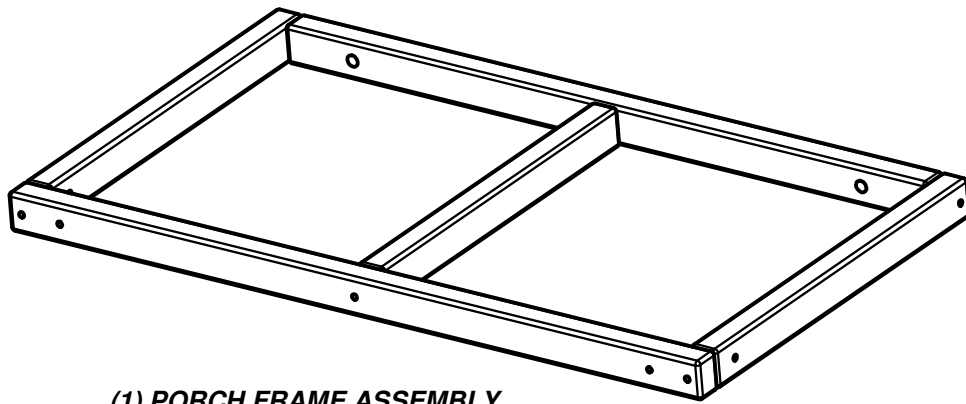



(1) PORCH FRAME ASSEMBLY

STEP 13:

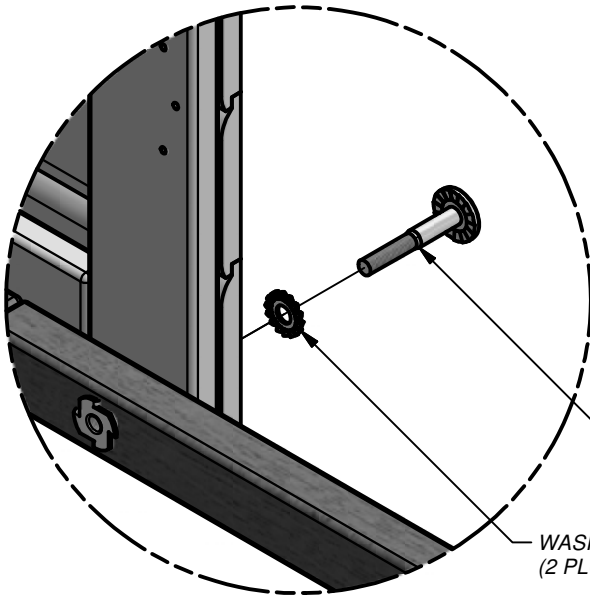


BOLT WH 5/16x2
(2 PLCS)

WASHER LOCK EXT 8x19
(2 PLCS)

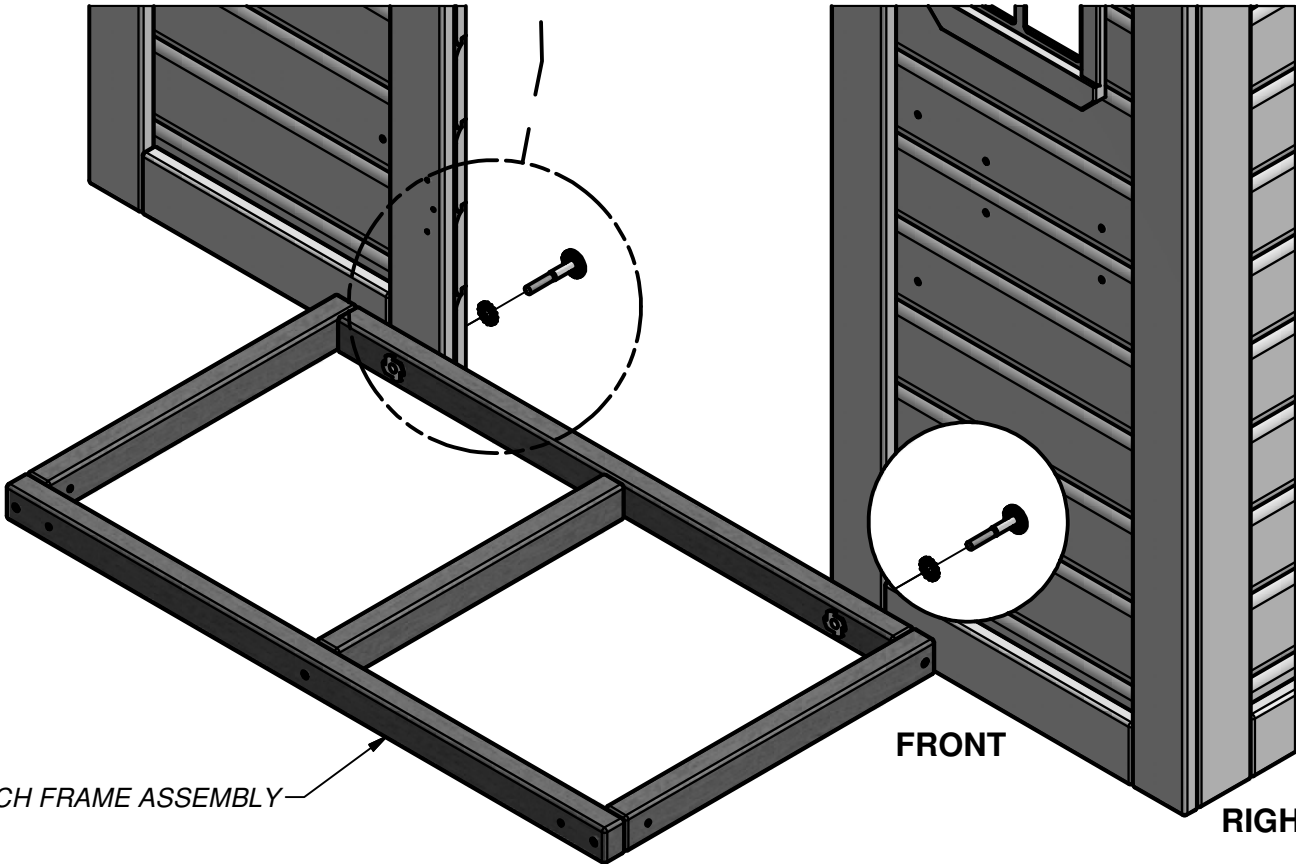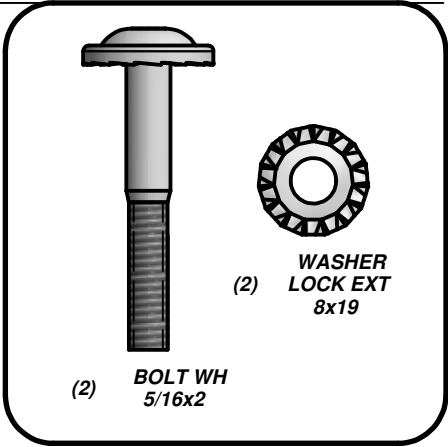





(1) **AA1 - LEFT PORCH POST - W4L07191**
2"x2"x43 7/8" (50x50x1113)




(1) **AA2 - RIGHT PORCH POST - W4L07192**
2"x2"x43 7/8" (50x50x1113)

STEP 14:

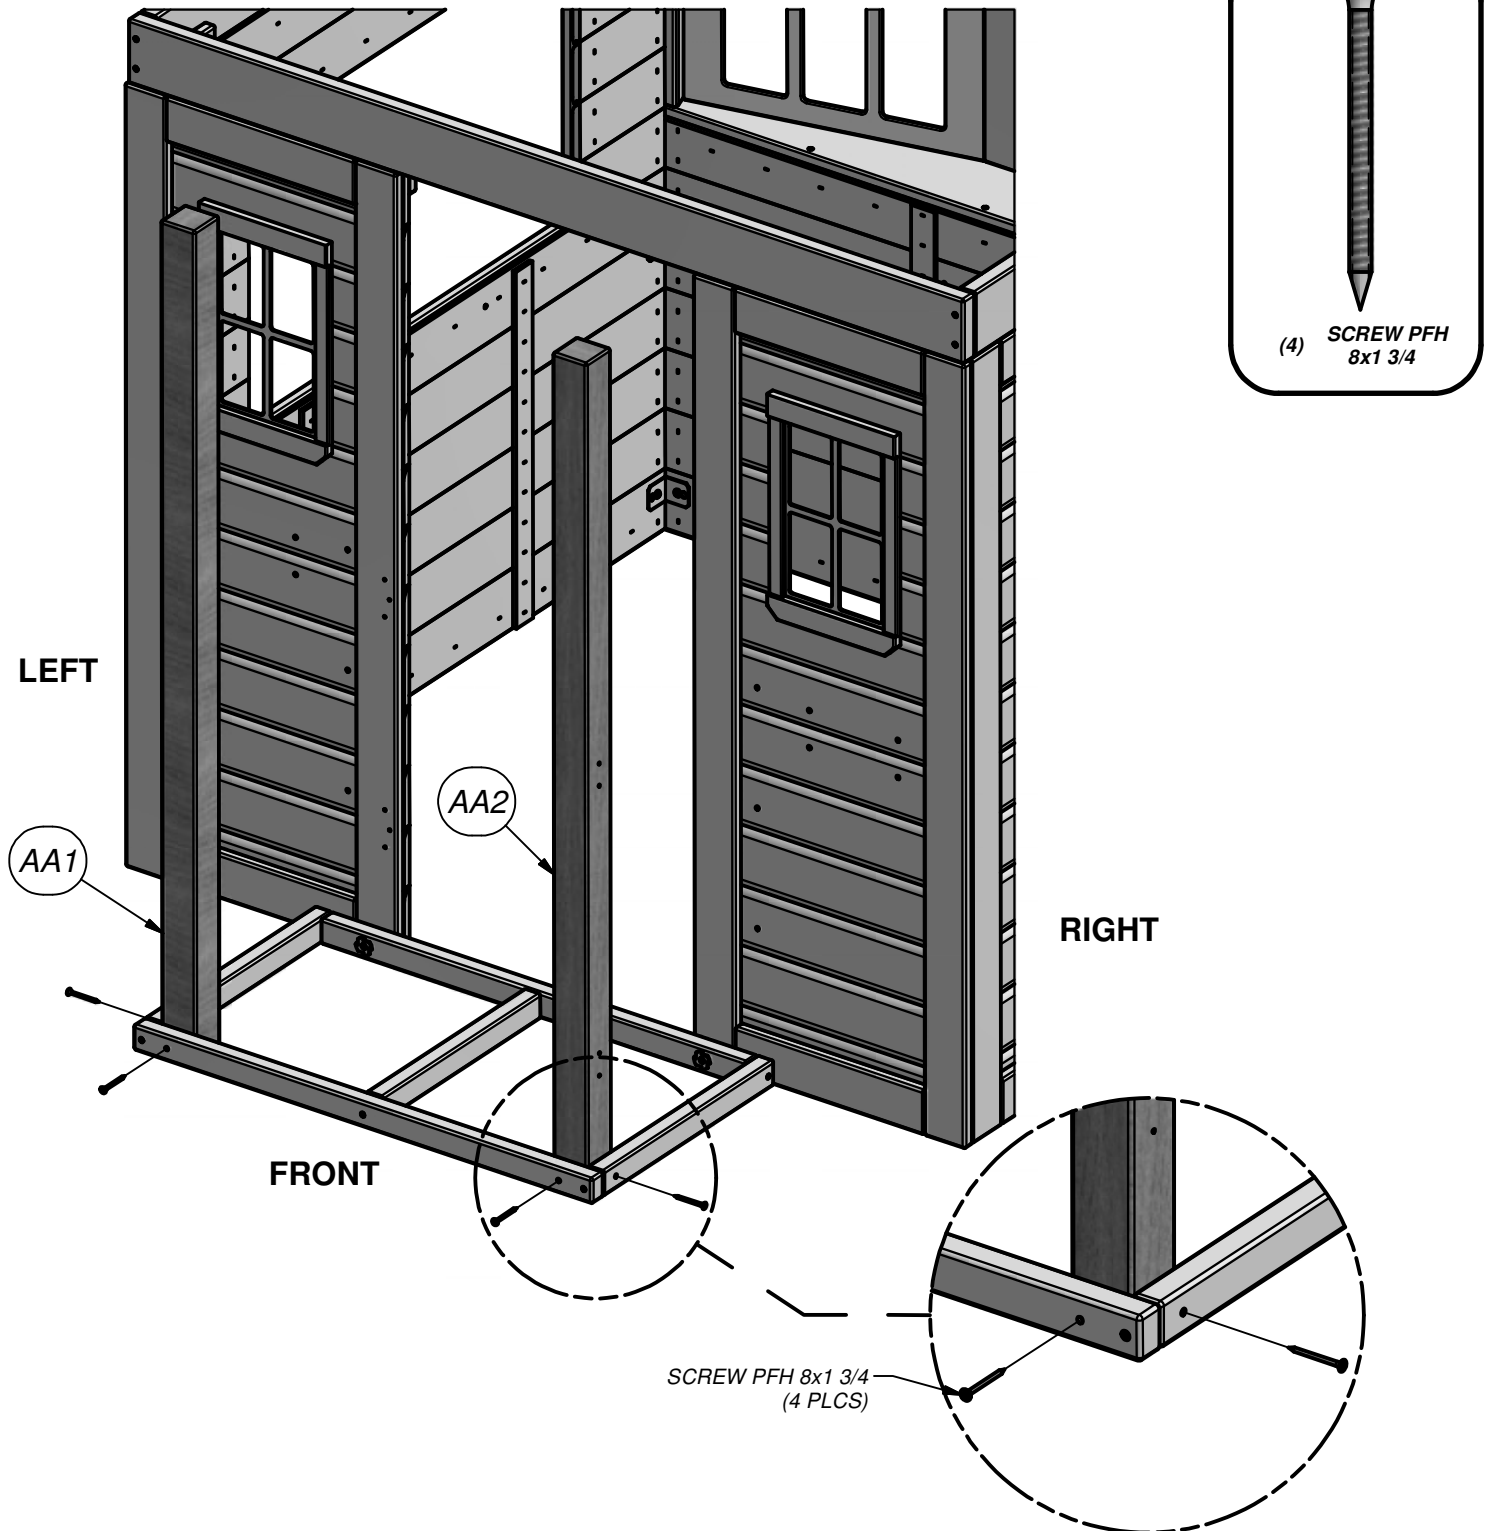






(1) **L1 - PORCH BOARD - W4L07193**
5/8"x4 3/8"x26 1/2" (16x112x673)



(3) **M2 - PORCH BOARD - W4L07194**
5/8"x3 3/8"x26 1/2" (16x86x673)

STEP 15:

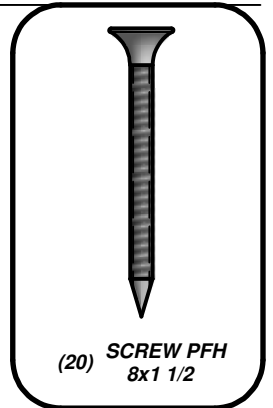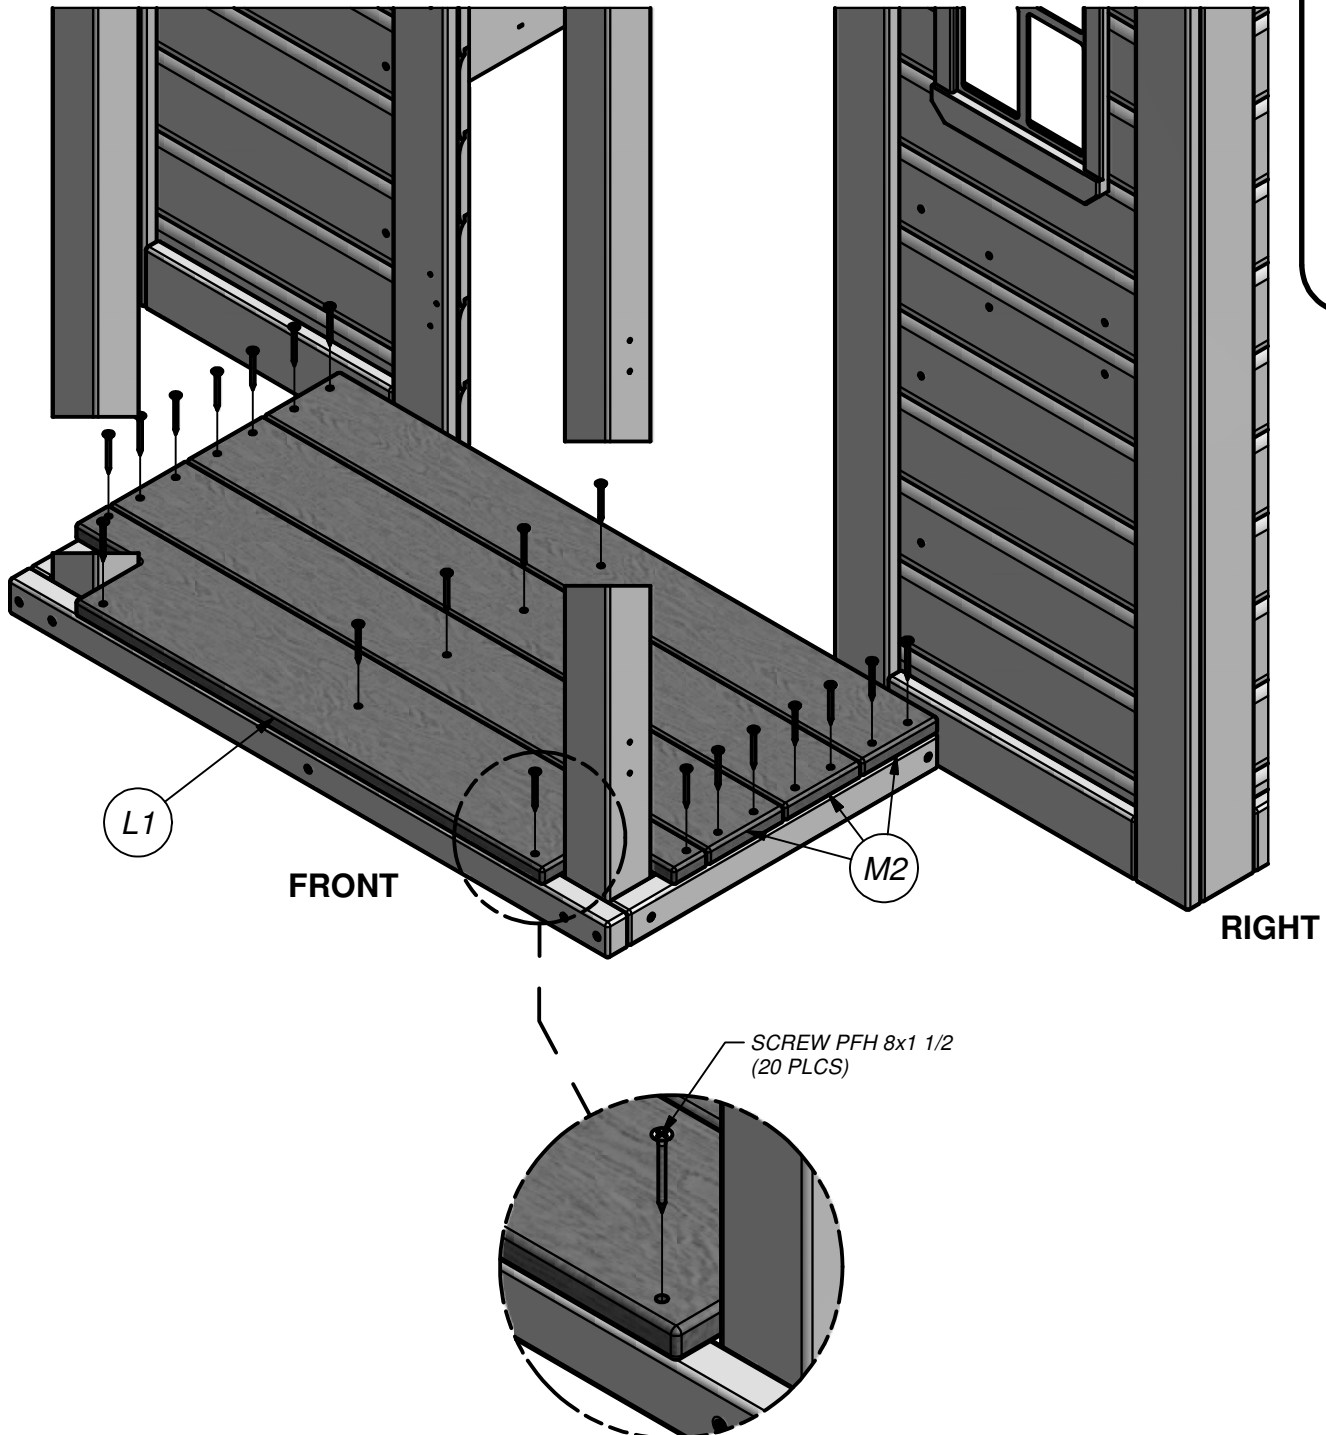

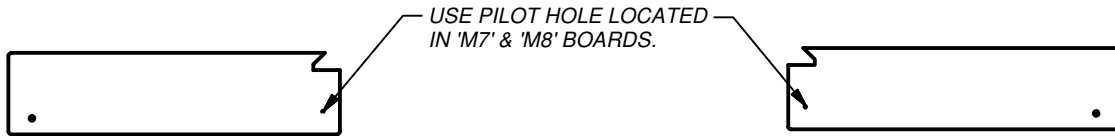


(1) **M7 - HEADER BOARD - W4L07202**
5/8"x3 3/8"x13 7/8" (16x86x351)

(1) **M8 - HEADER BOARD - W4L07203**
5/8"x3 3/8"x13 7/8" (16x86x351)




(1) **M9 - HEADER BOARD - W4L07204**
5/8"x3 3/8"x25 7/8" (16x86x657)

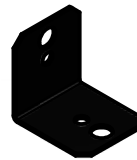

(2) **90° L-BRACKET - BLK - A4M00555**


STEP 16:

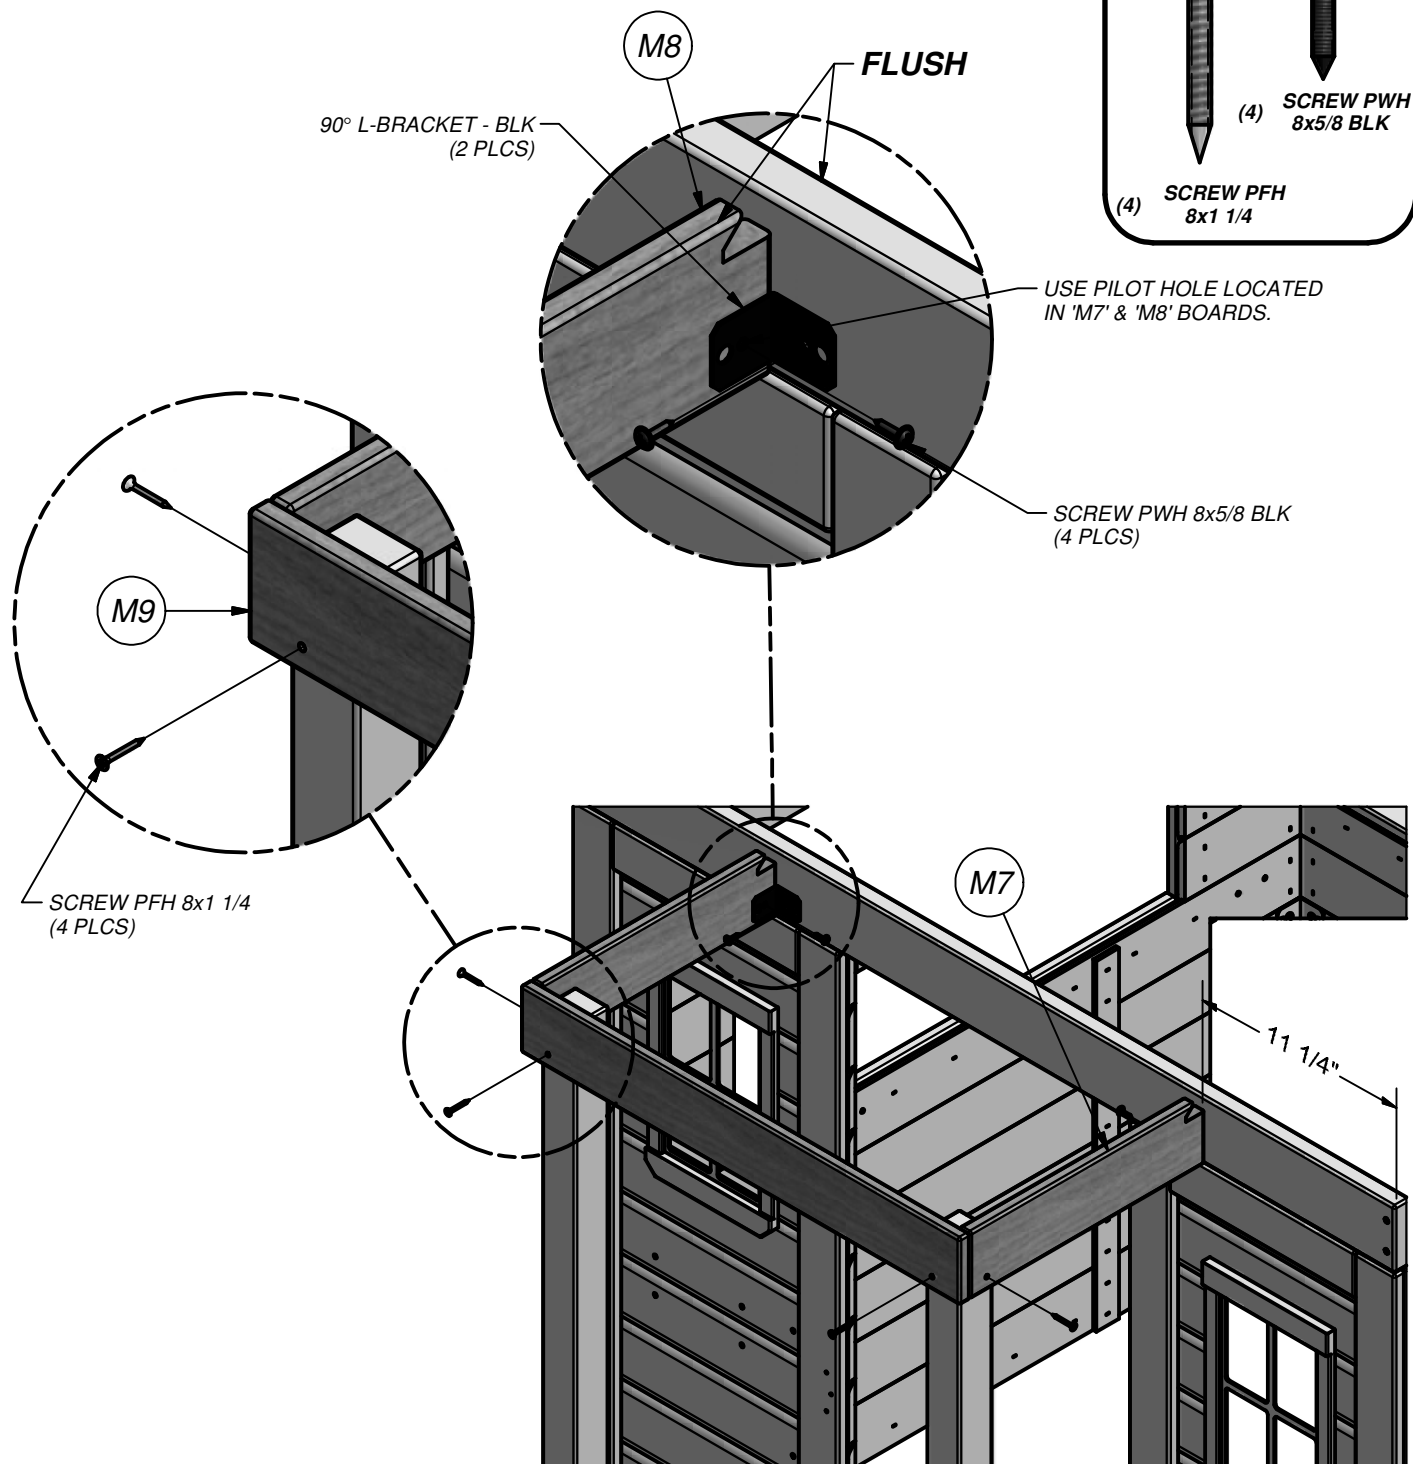



(2) **S1 - PORCH BOARD - W4L07200**
1"x1"x17 3/4" (24x24x450)

STEP 17:


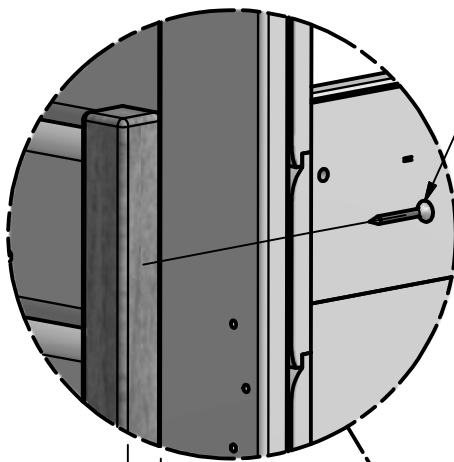


SCREW PFH 8x1 1/4
(6 PLCS)

9/16 GAP
TYP.

S1

3 3/16"
TYP

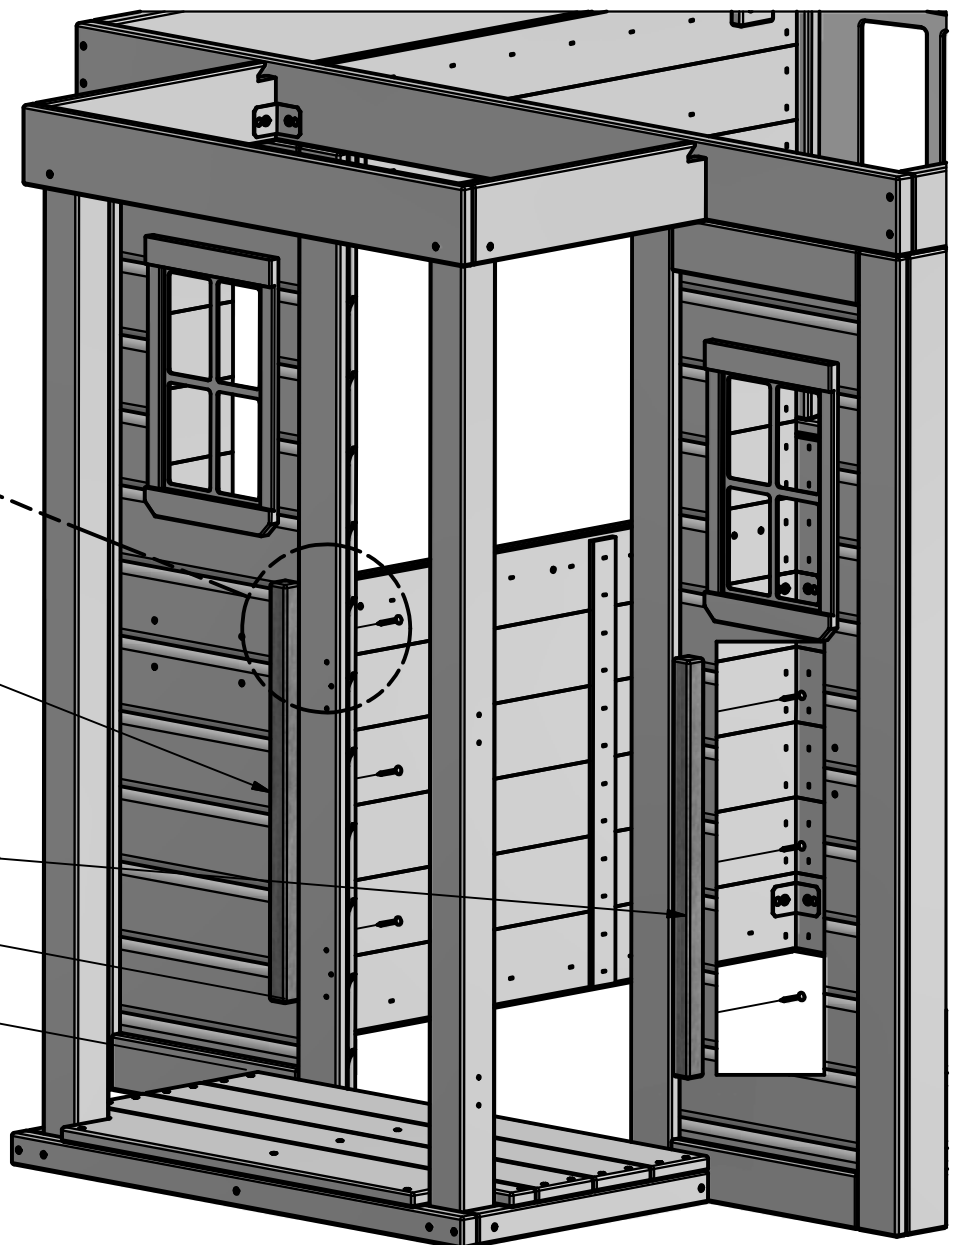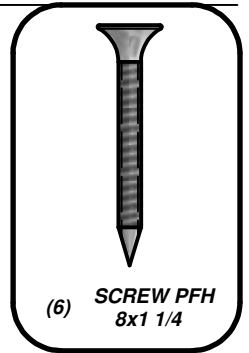



- (2) **M3 - PORCH TRIM BOARD - W4L07195**
5/8"x2 3/4"x3 1/4" (16x70x82)



- (2) **M5 - PORCH TRIM BOARD - W4L07197**
5/8"x3 3/8"x2" (16x86x50)






- (2) **M4 - PORCH TRIM BOARD - W4L07196**
5/8"x3 3/8"x2 1/2" (16x86x65)



- (2) **M6 - PORCH TRIM BOARD - W4L07198**
5/8"x2 3/4"x2 5/8" (16x70x66)


STEP 18:

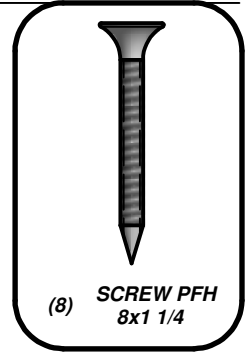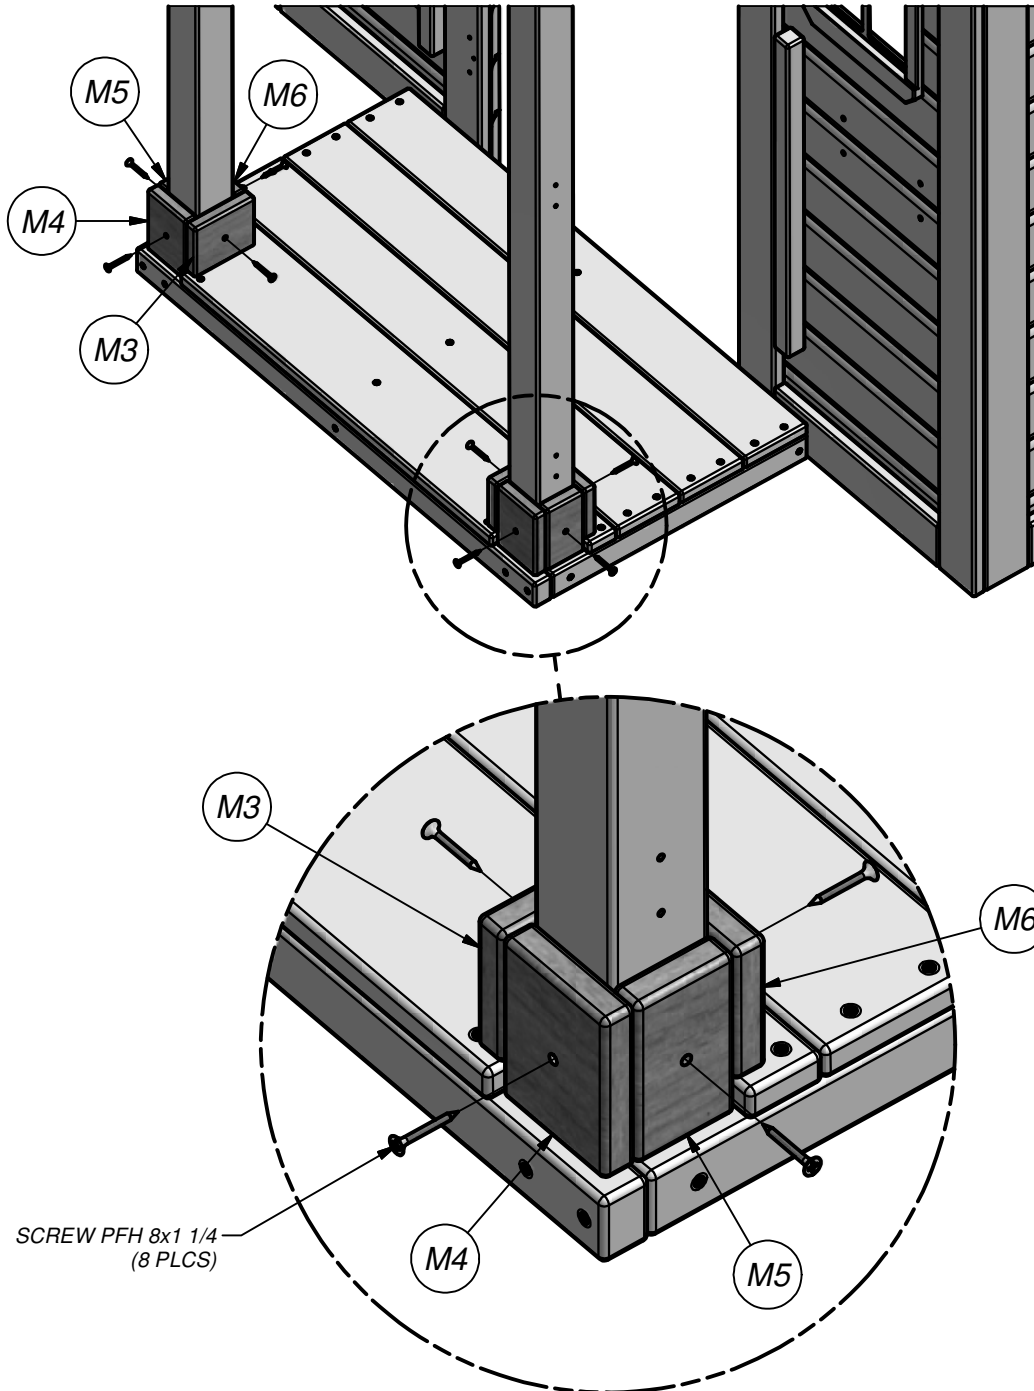



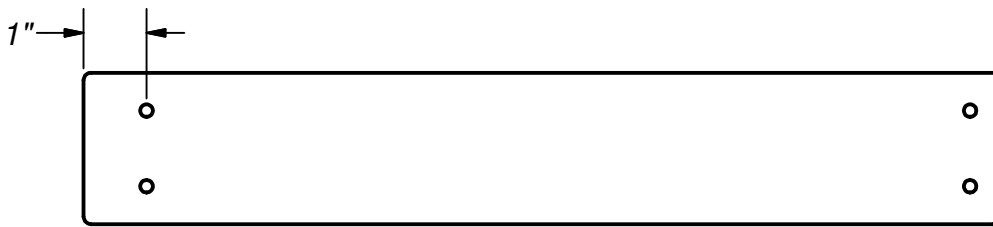


(4) **N3 - PORCH RAIL - W4L07199**
5/8"x2 3/8"x14 3/8" (16x60x364)

STEP 19:

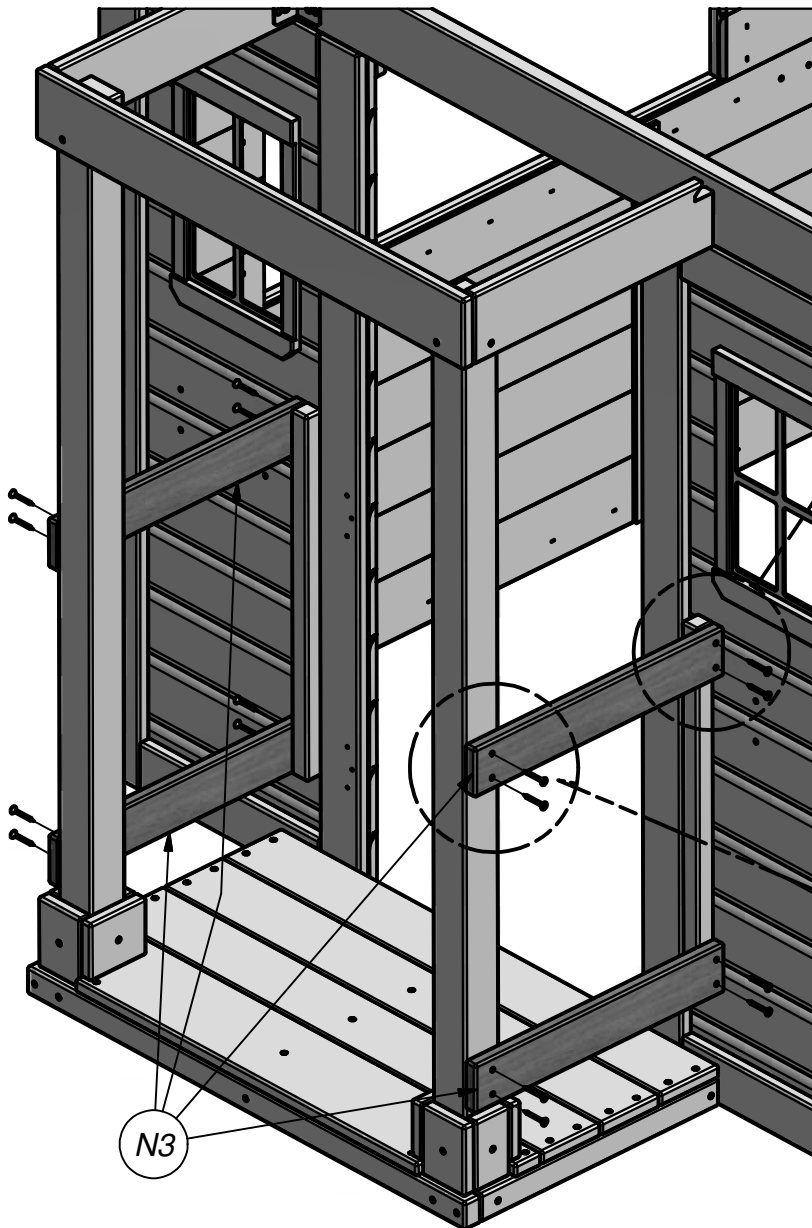

**FLUSH
BOTH
SIDES.**

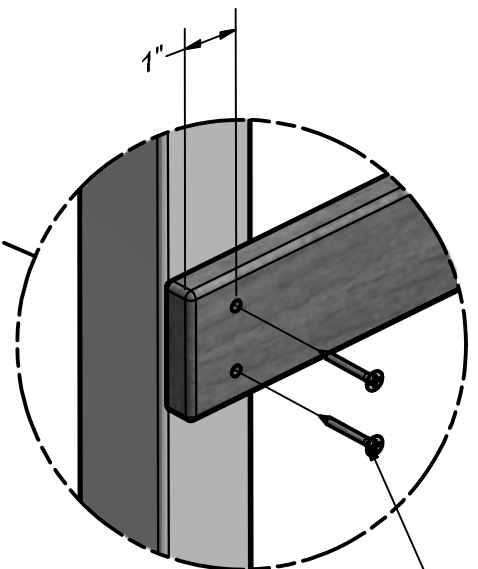
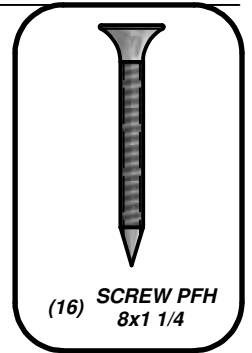
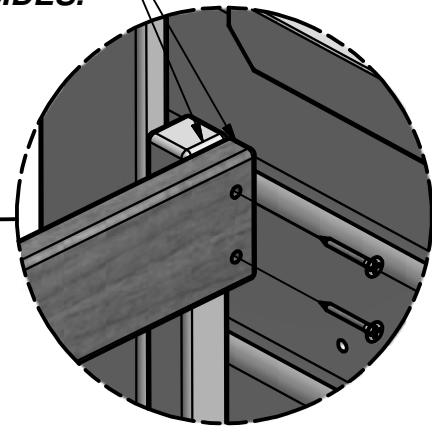


SCREW PFH 8x1 1/4
(2 PLCS)




(4) **N4 - PICKET - W4L07201**
5/8"x2 3/8"x18 1/4" (16x60x463)


STEP 20:

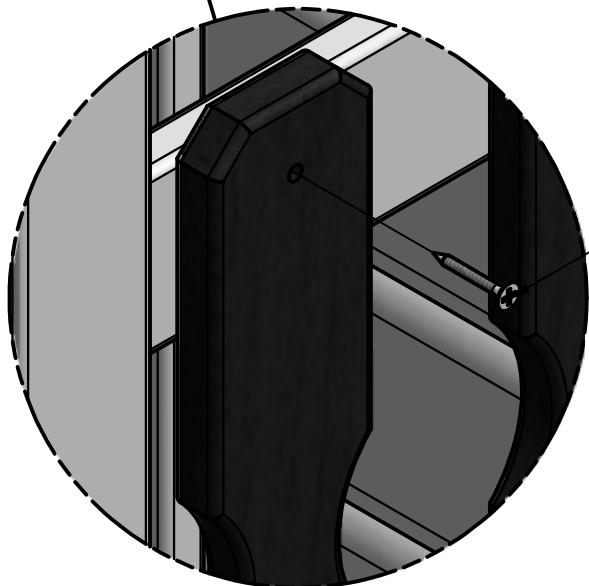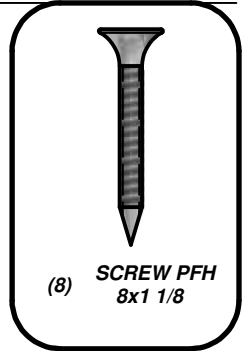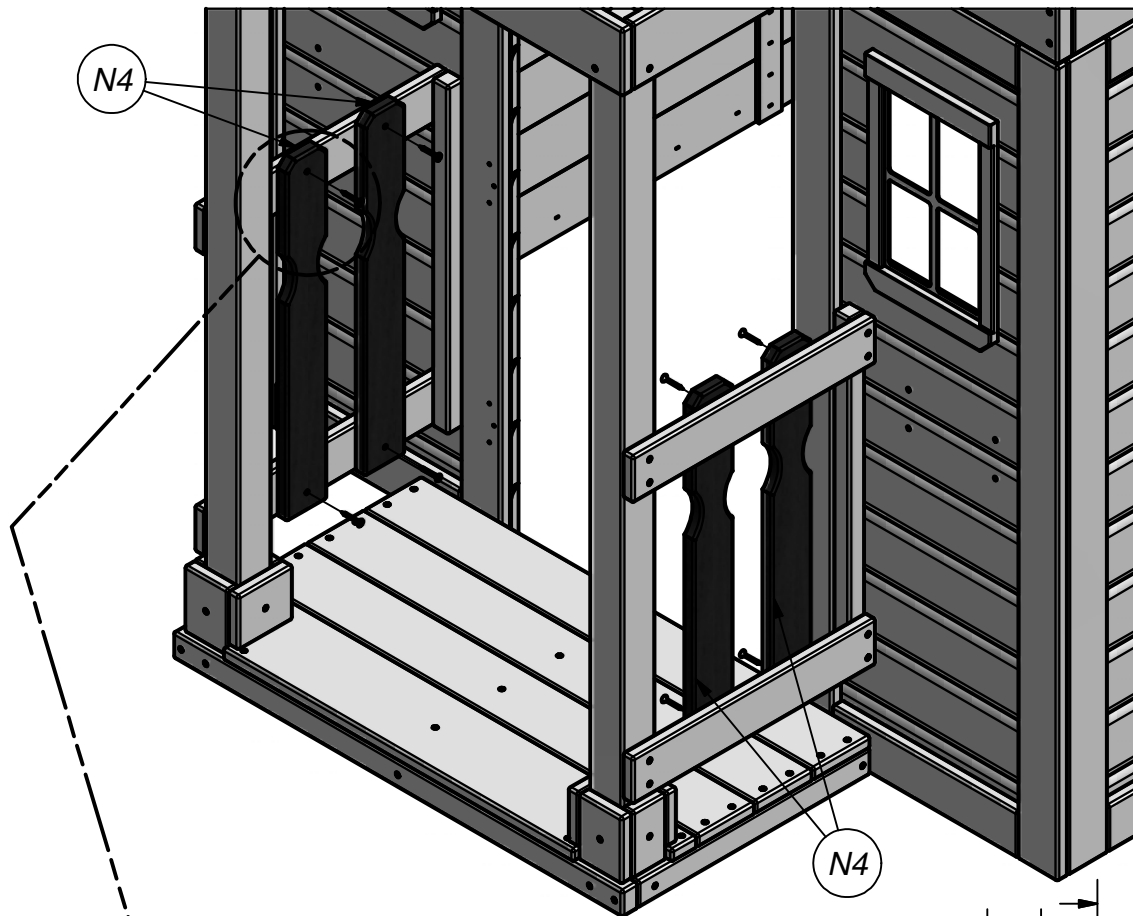

SCREW PFH 8x1 1/8
(8 PLCS)

2 1/4" 2 1/4"

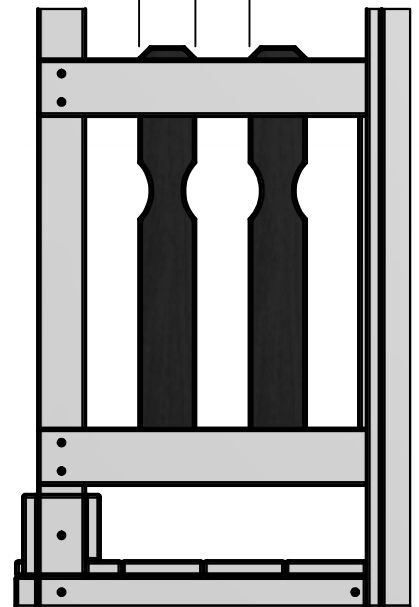



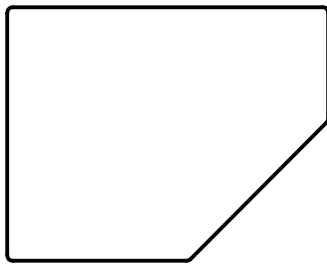



(2) **G1 - WALL SUPPORT - W4L07210**
1"x5 1/4"x6 3/4" (24x134x170)



(2) **J2 - SUPPORT BOARD - W4L07211**
1"x2 3/8"x6 3/4" (24x60x170)



STEP 21:

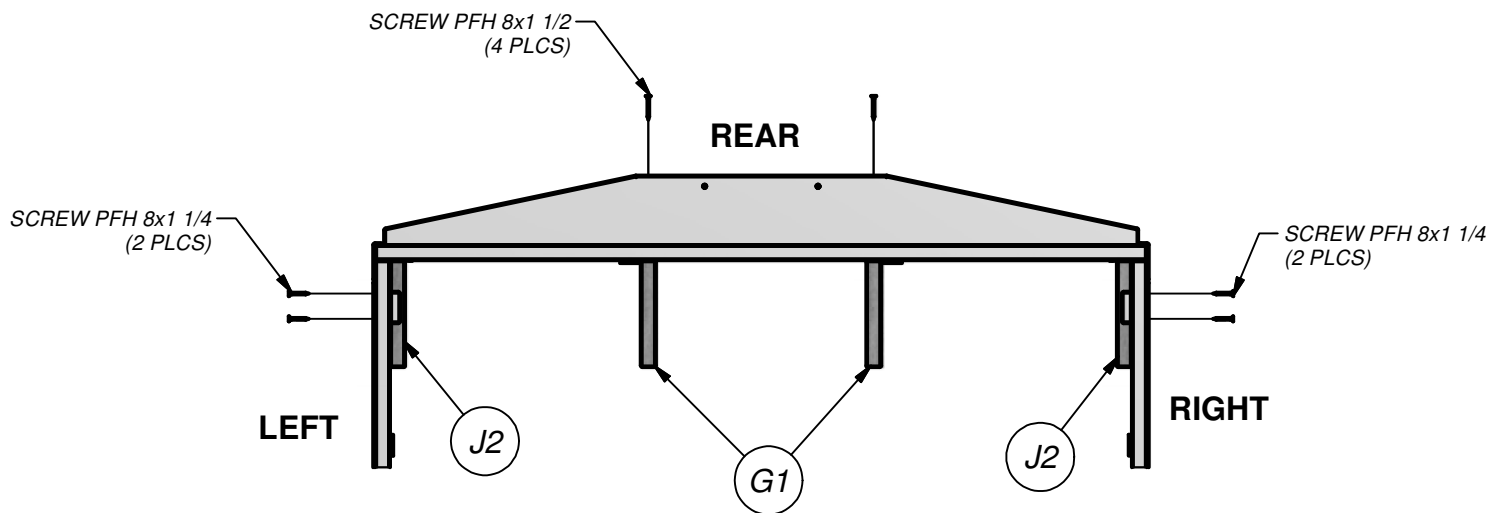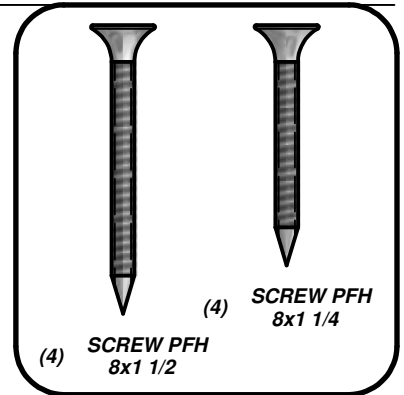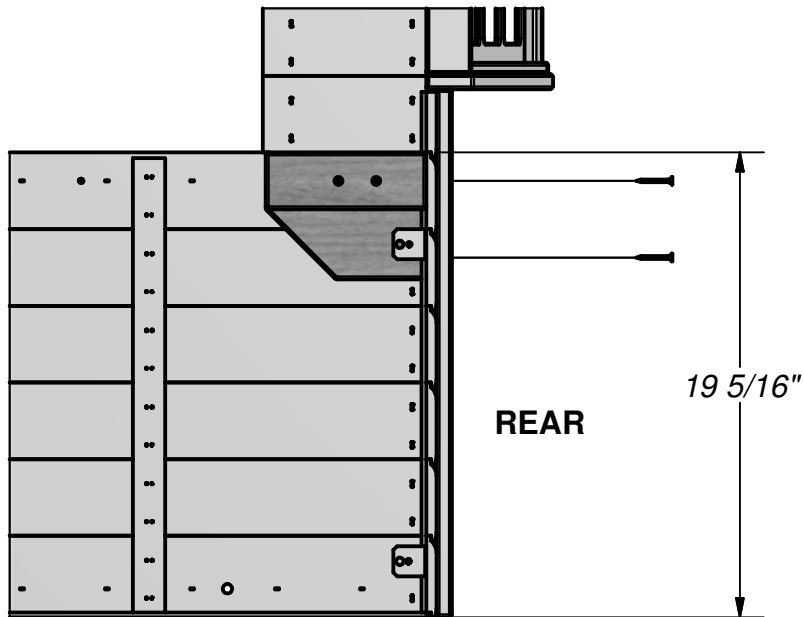

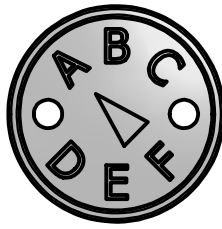


(1) "A" REVISION TAG - A100314

STEP 22:

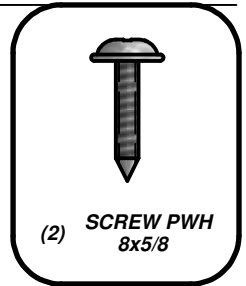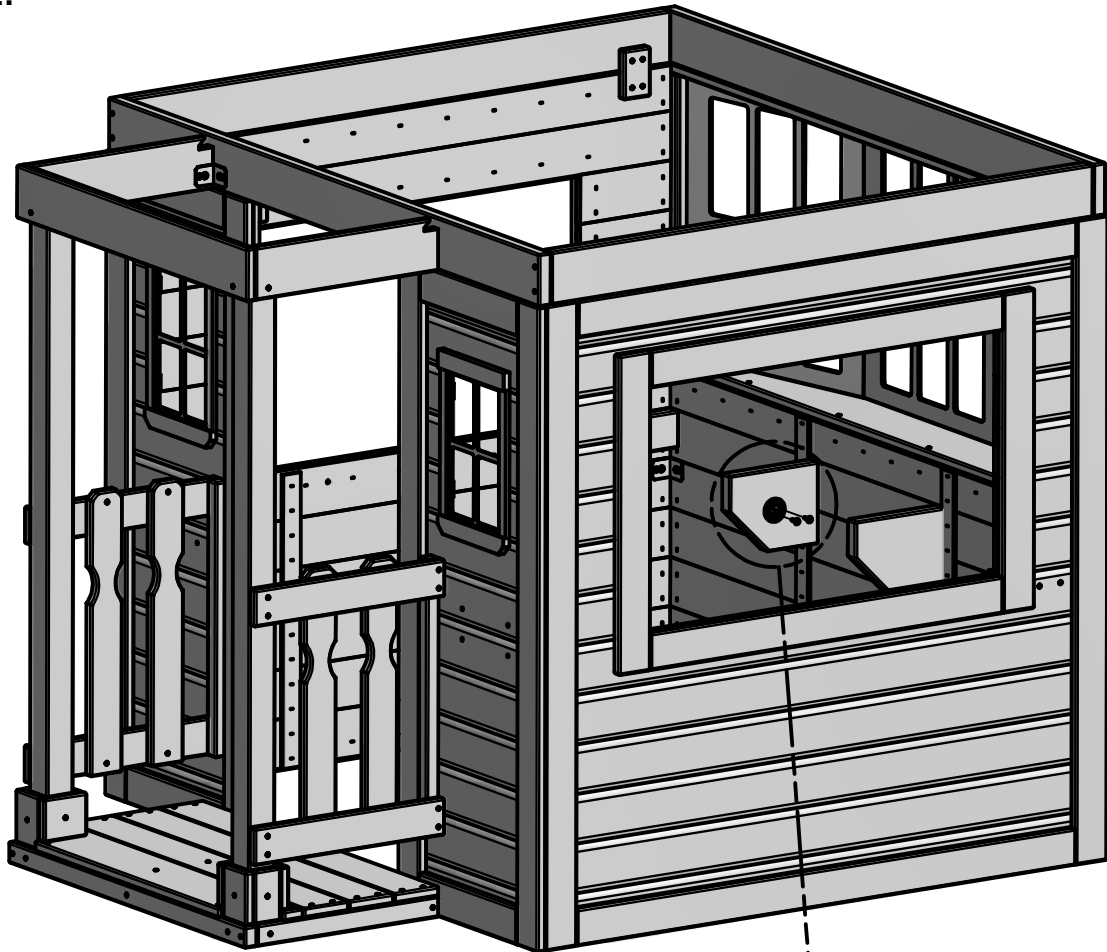

"A" REVISION TAG
(1 PLC)

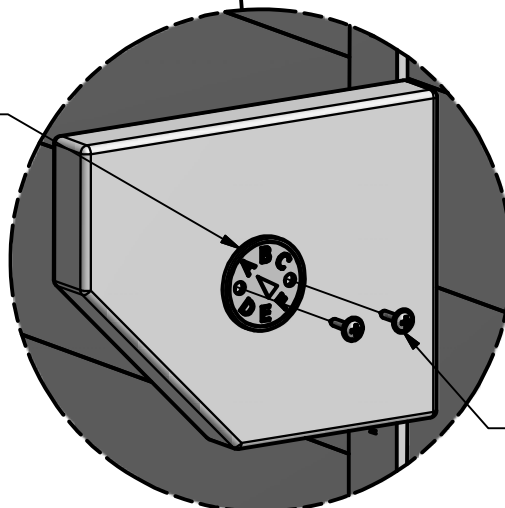




SCREW PWH 8x5/8
(2 PLCS)




(2) **M10 - CABINET TOP - W4L07212**
5/8"x3 3/8"x46 3/8" (16x86x1177)

STEP 23:




SCREW PFH 8x1 1/4
(12 PLCS)

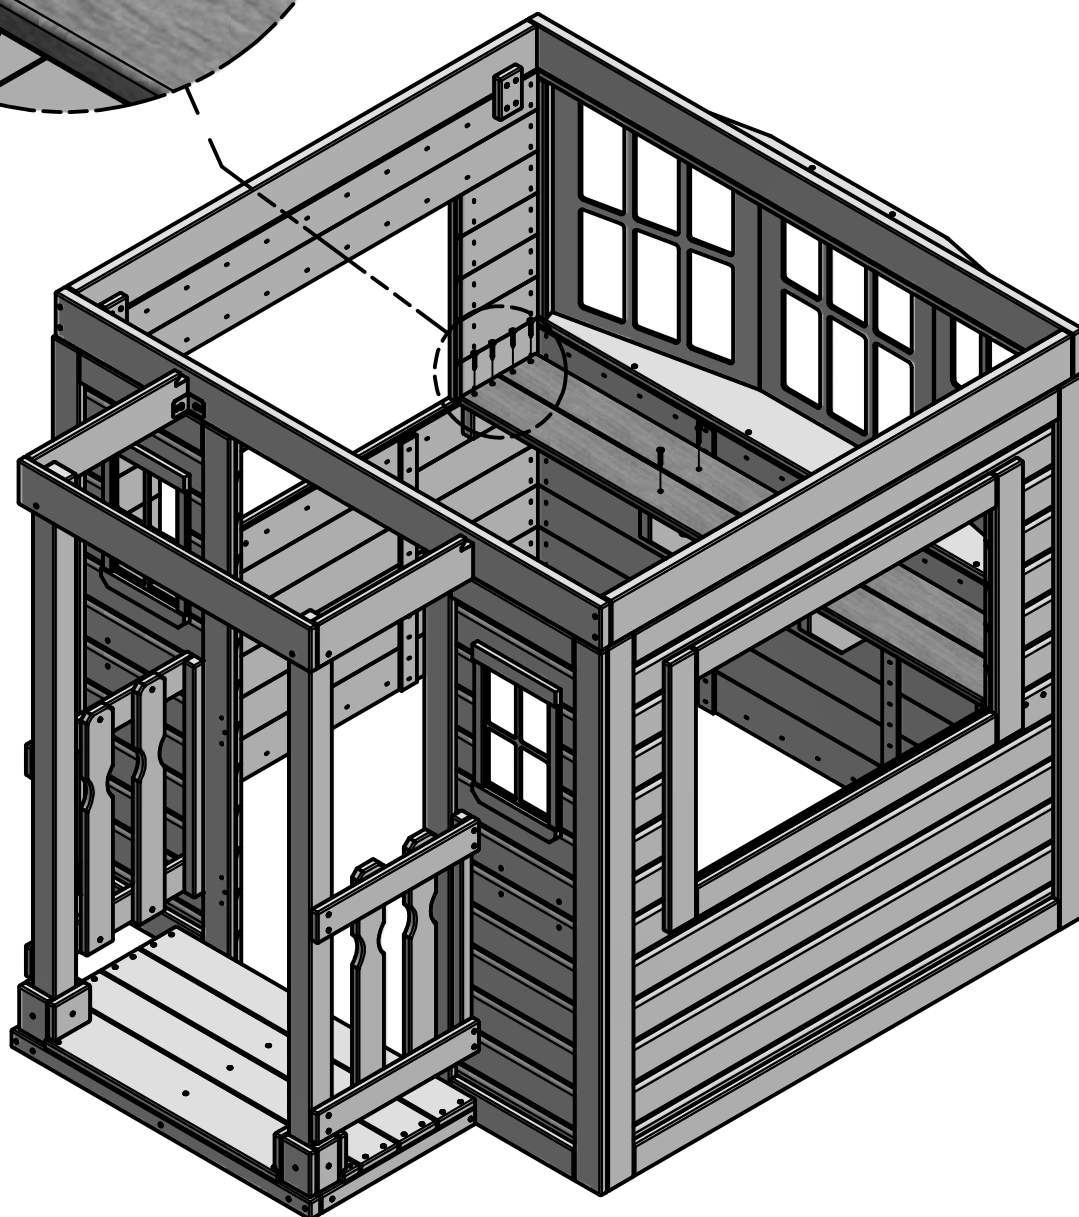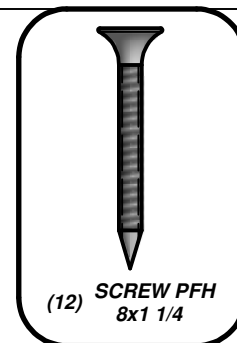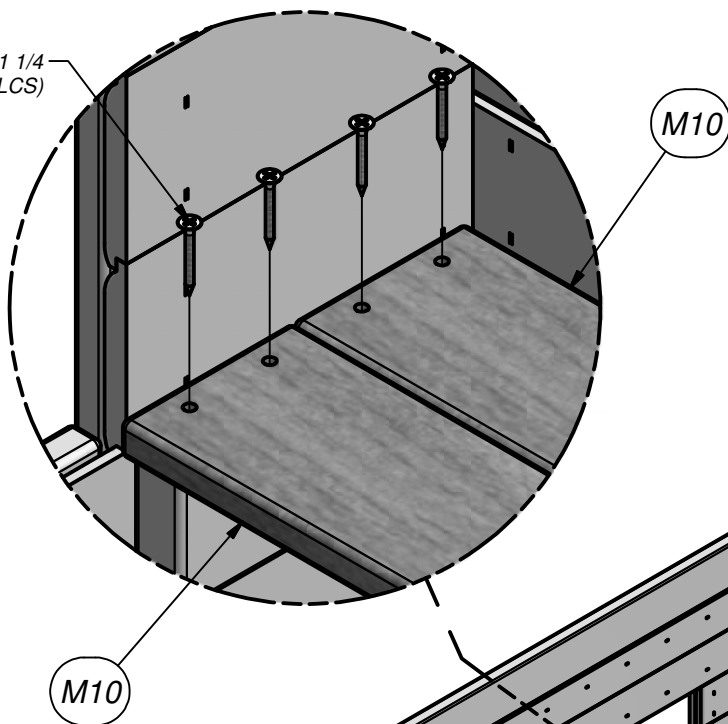


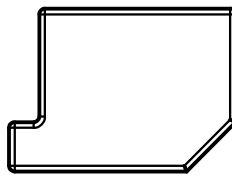

(2) **H3 - SHELF SUPPORT - W4L07209**
1"x3 3/8"x4 3/4" (24x86x120)


STEP 24:

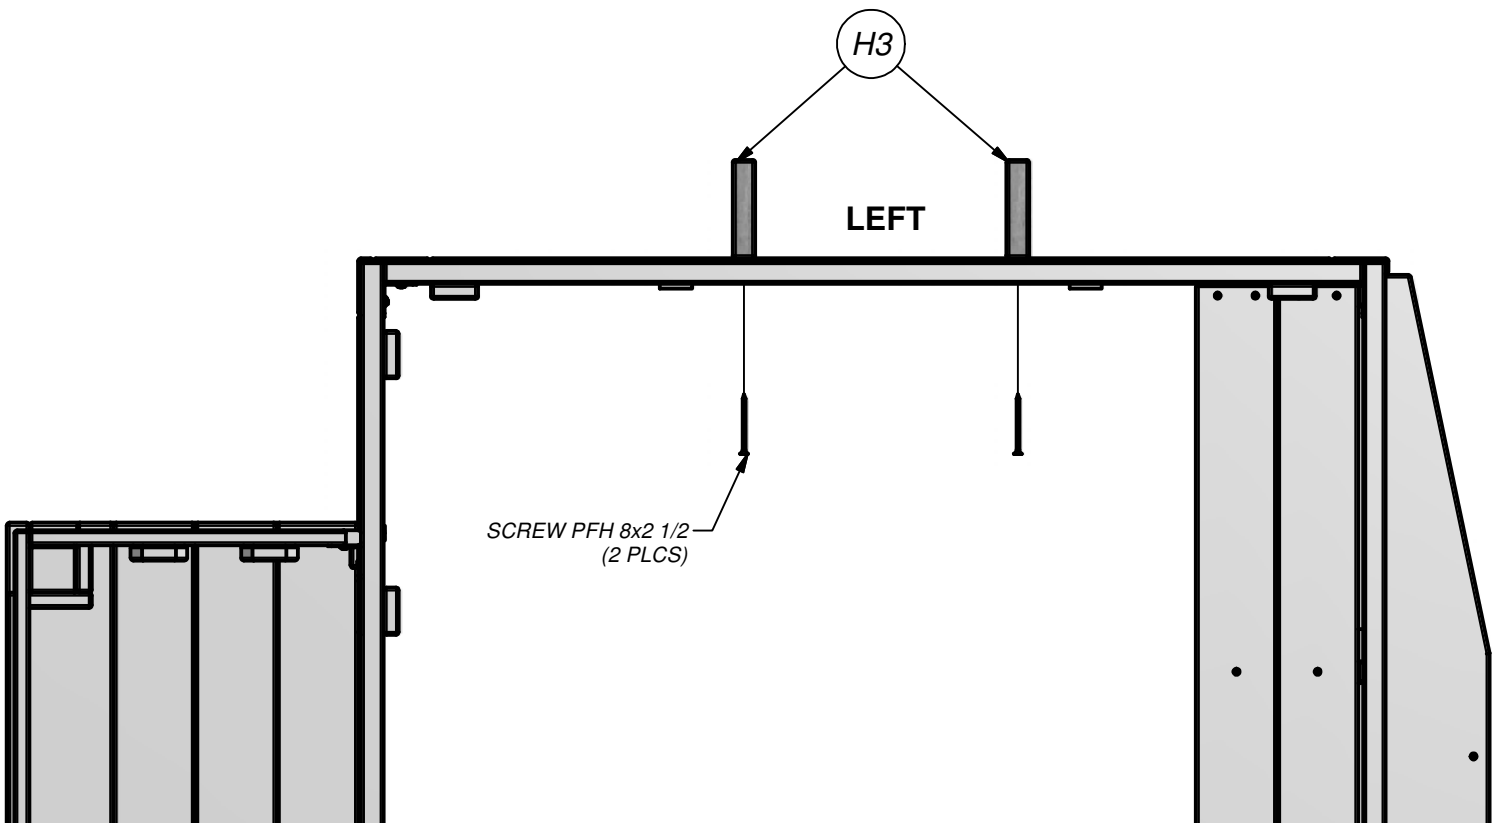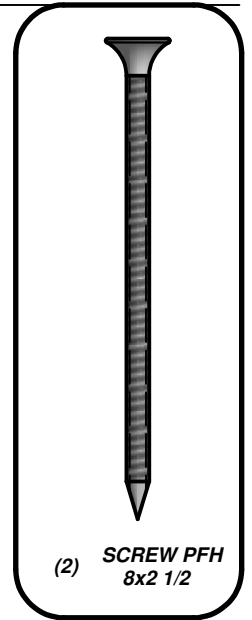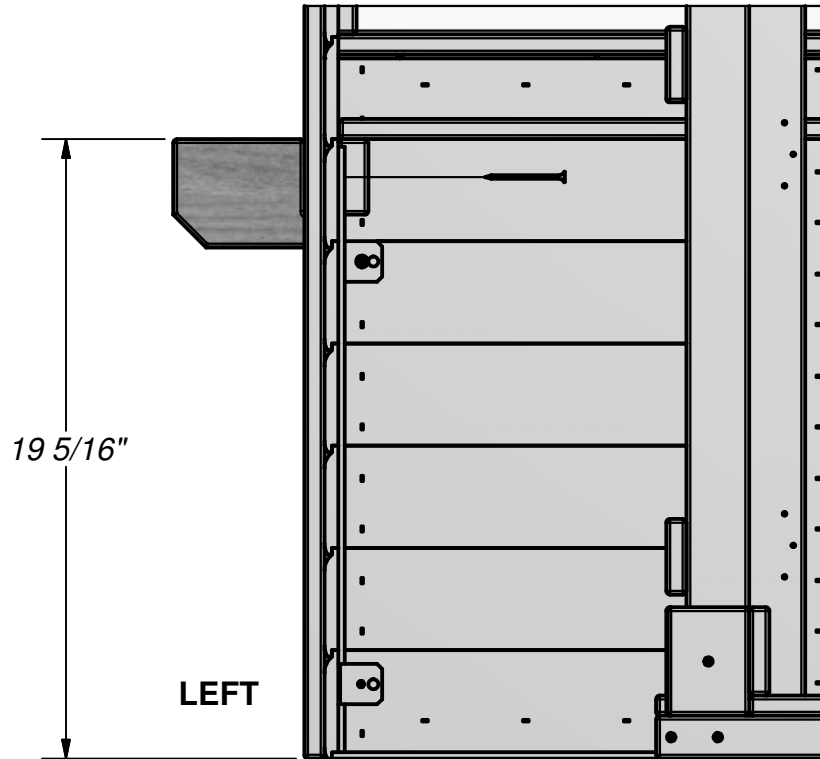

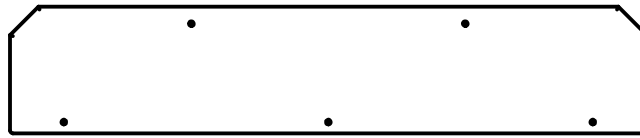

- (1) **K1 - WINDOW SHELF - W4L07208**
5/8"x5 1/4"x26 1/2" (16x134x674)




STEP 25:

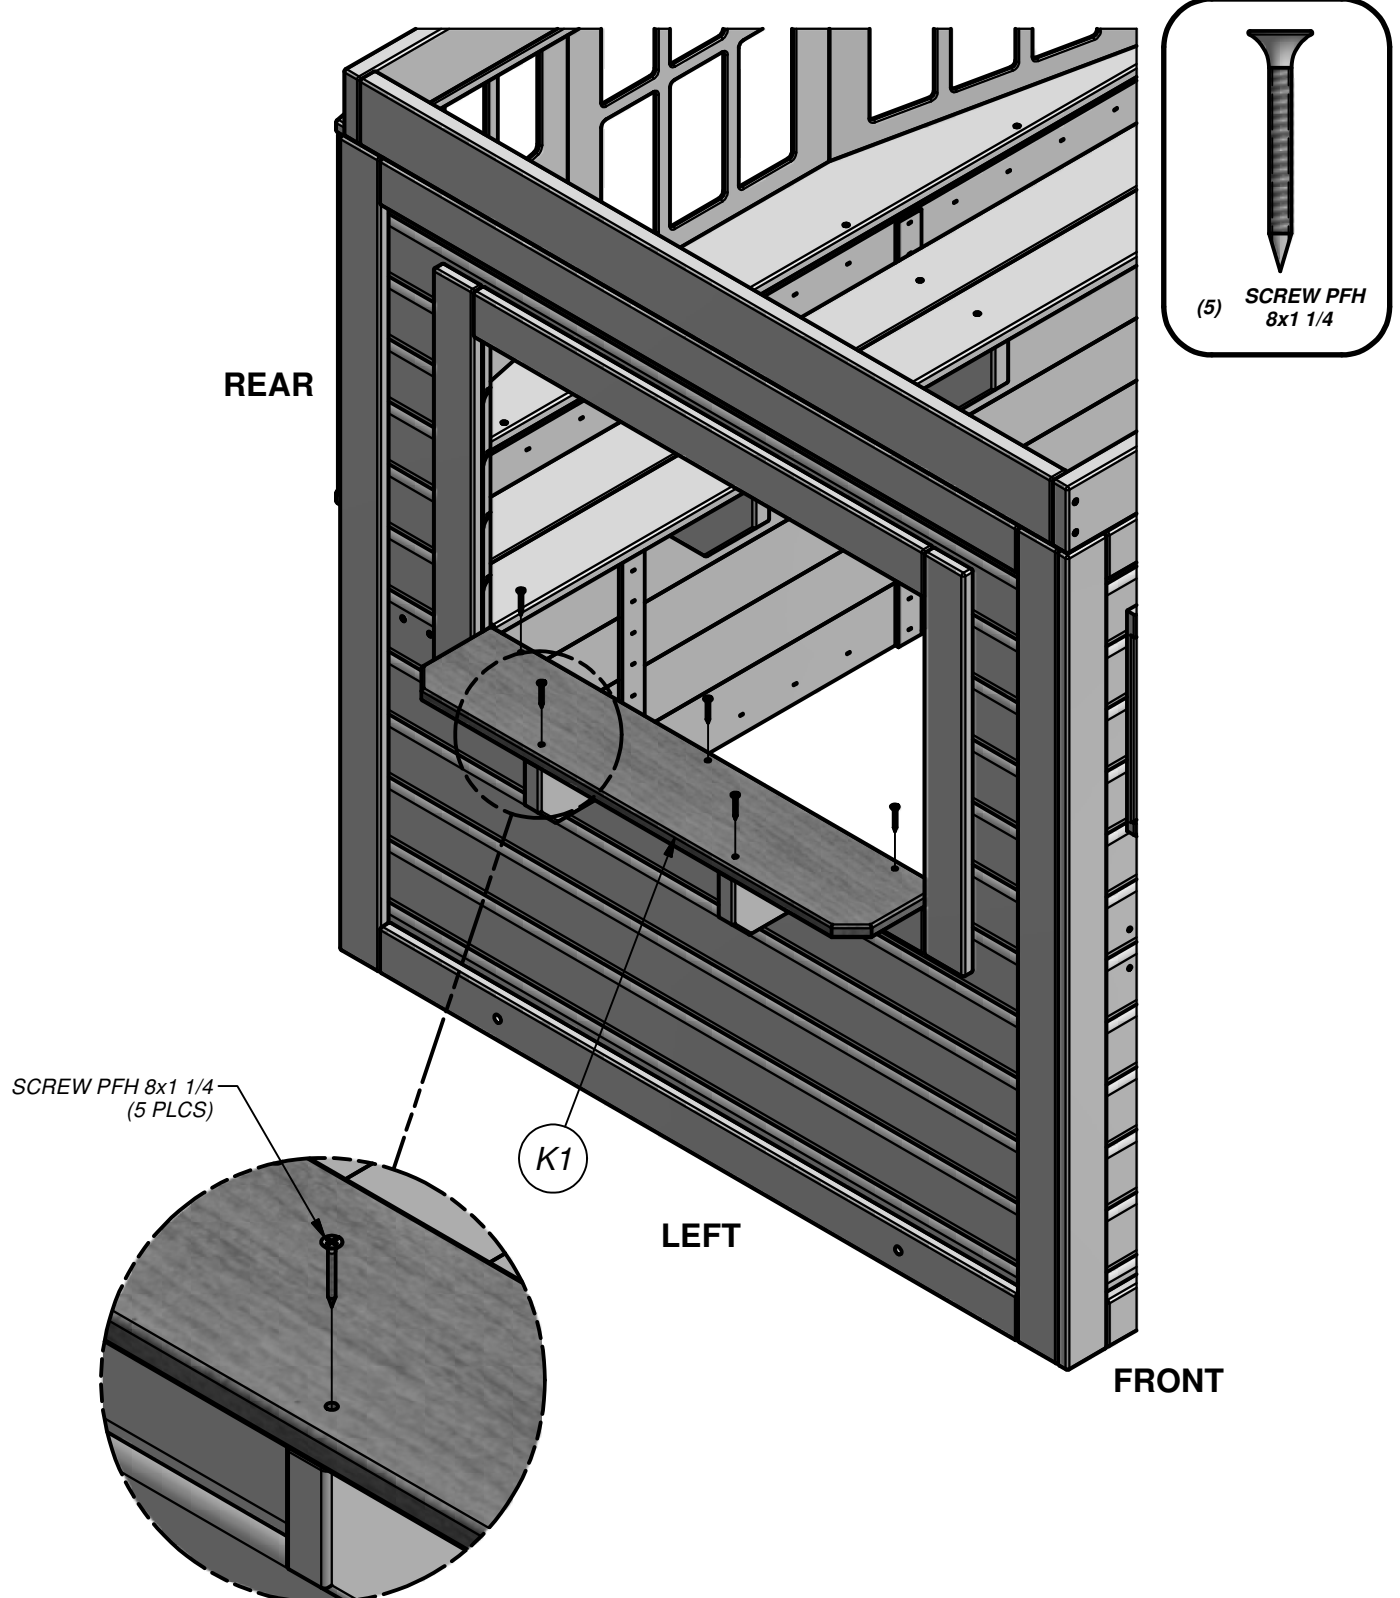






- (1) **N7 - WINDOW SHELF - W4L07207**
5/8"x2 3/8"x26 1/2" (16x60x674)

STEP 26:

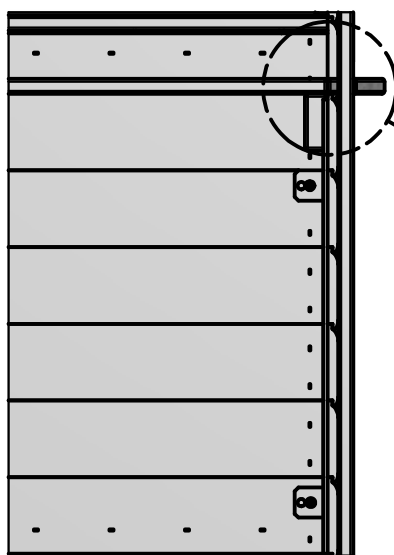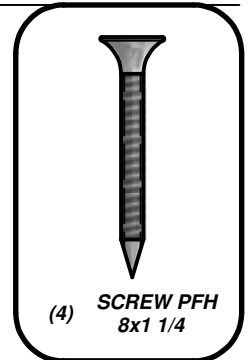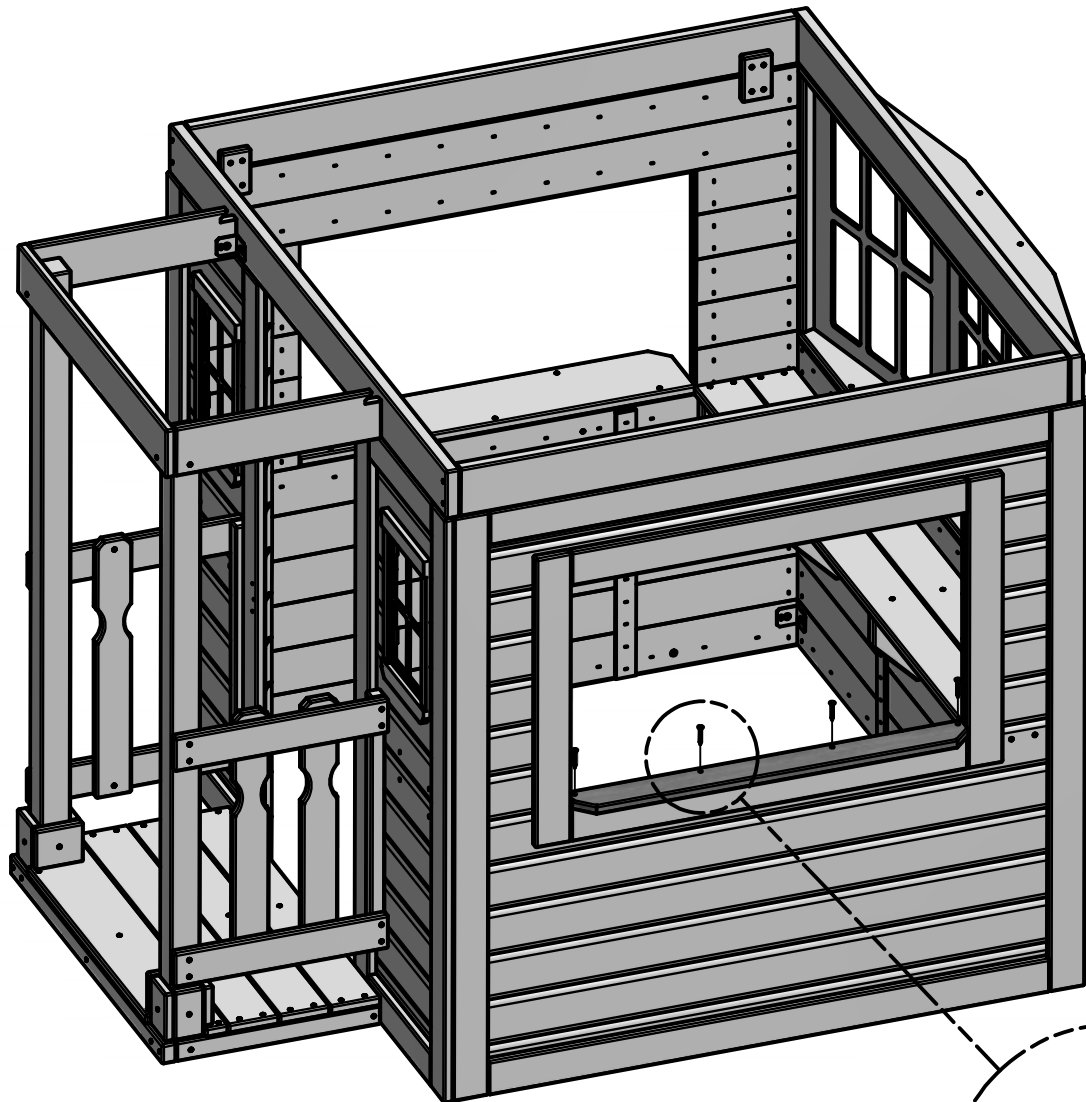




SCREW PFH 8x1 1/4
(4 PLCS)

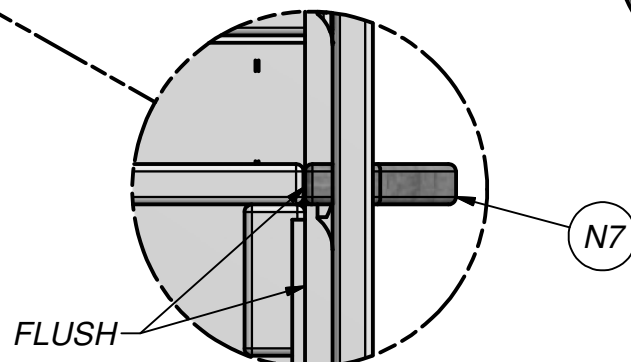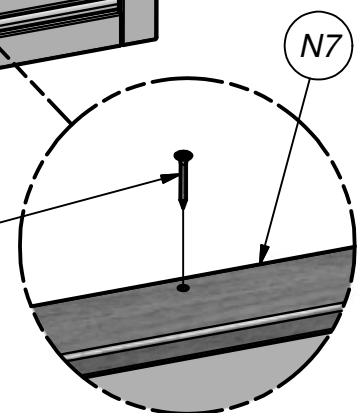


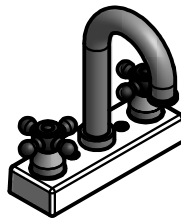

(1) FAUCET KIT - A6P00024


STEP 27:

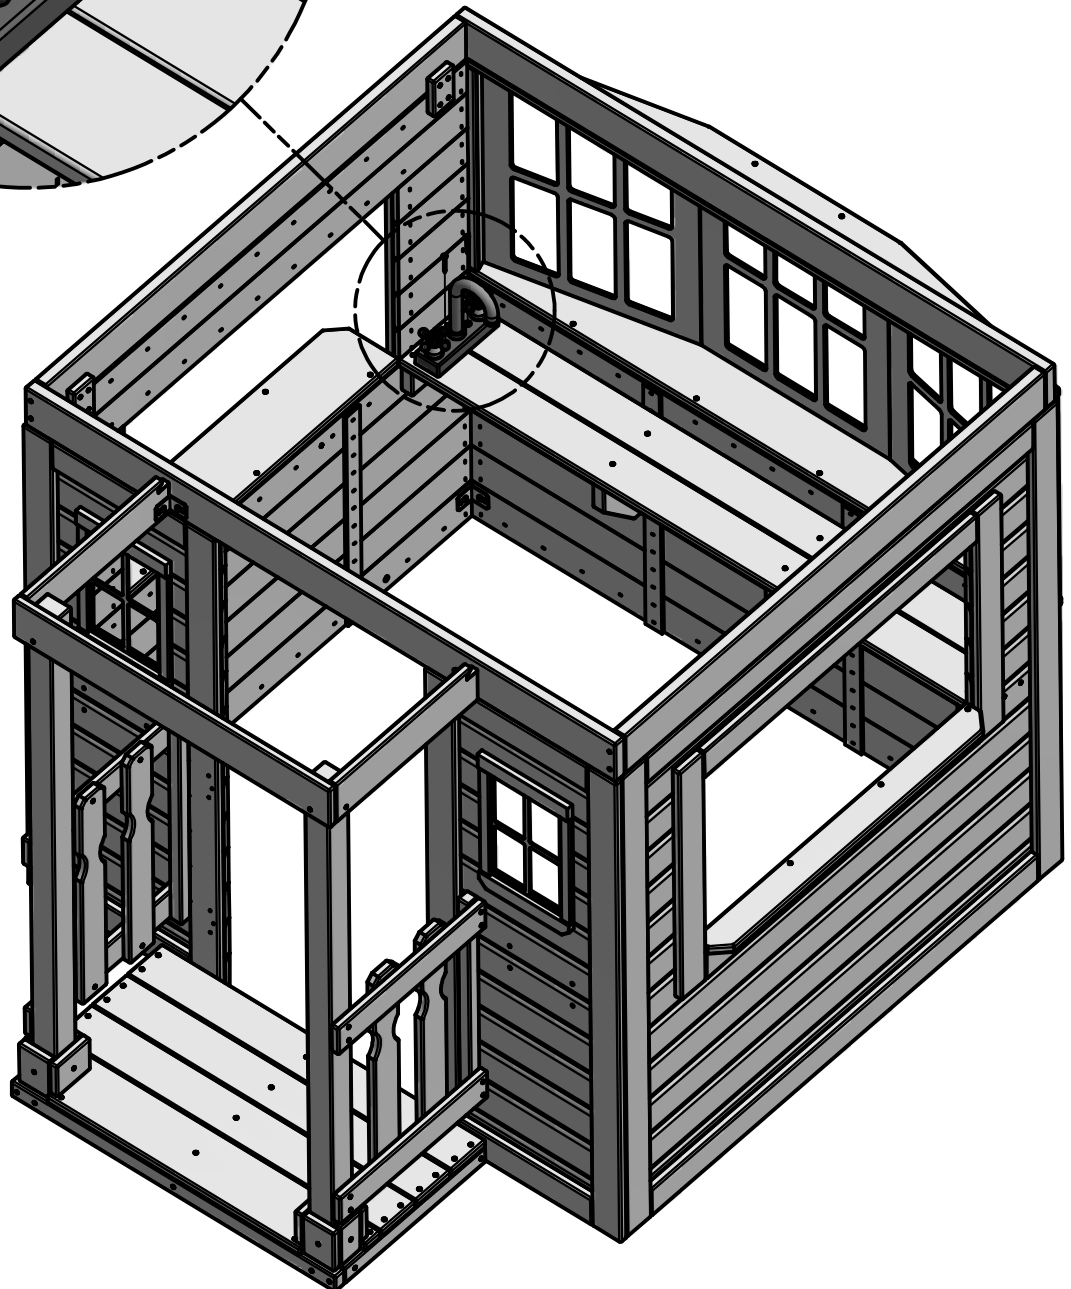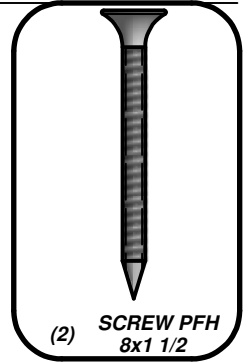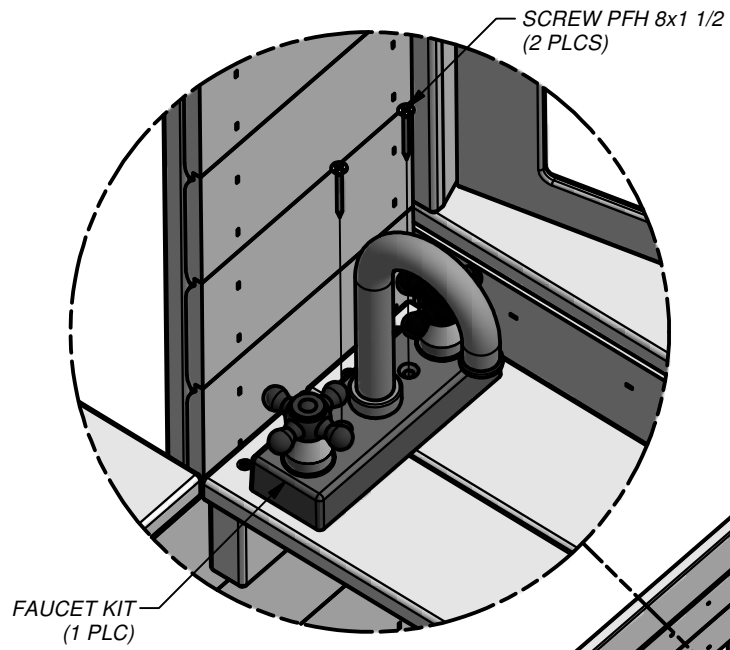

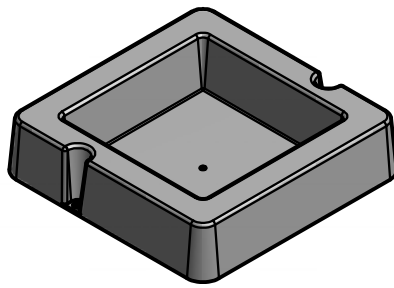


(1) *SURFACE MOUNT BASIN - A6P00032*


STEP 28:

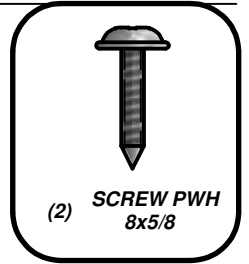

SCREW PWH 8x5/8
(2 PLCS)



SURFACE MOUNT BASIN
(1 PLC)

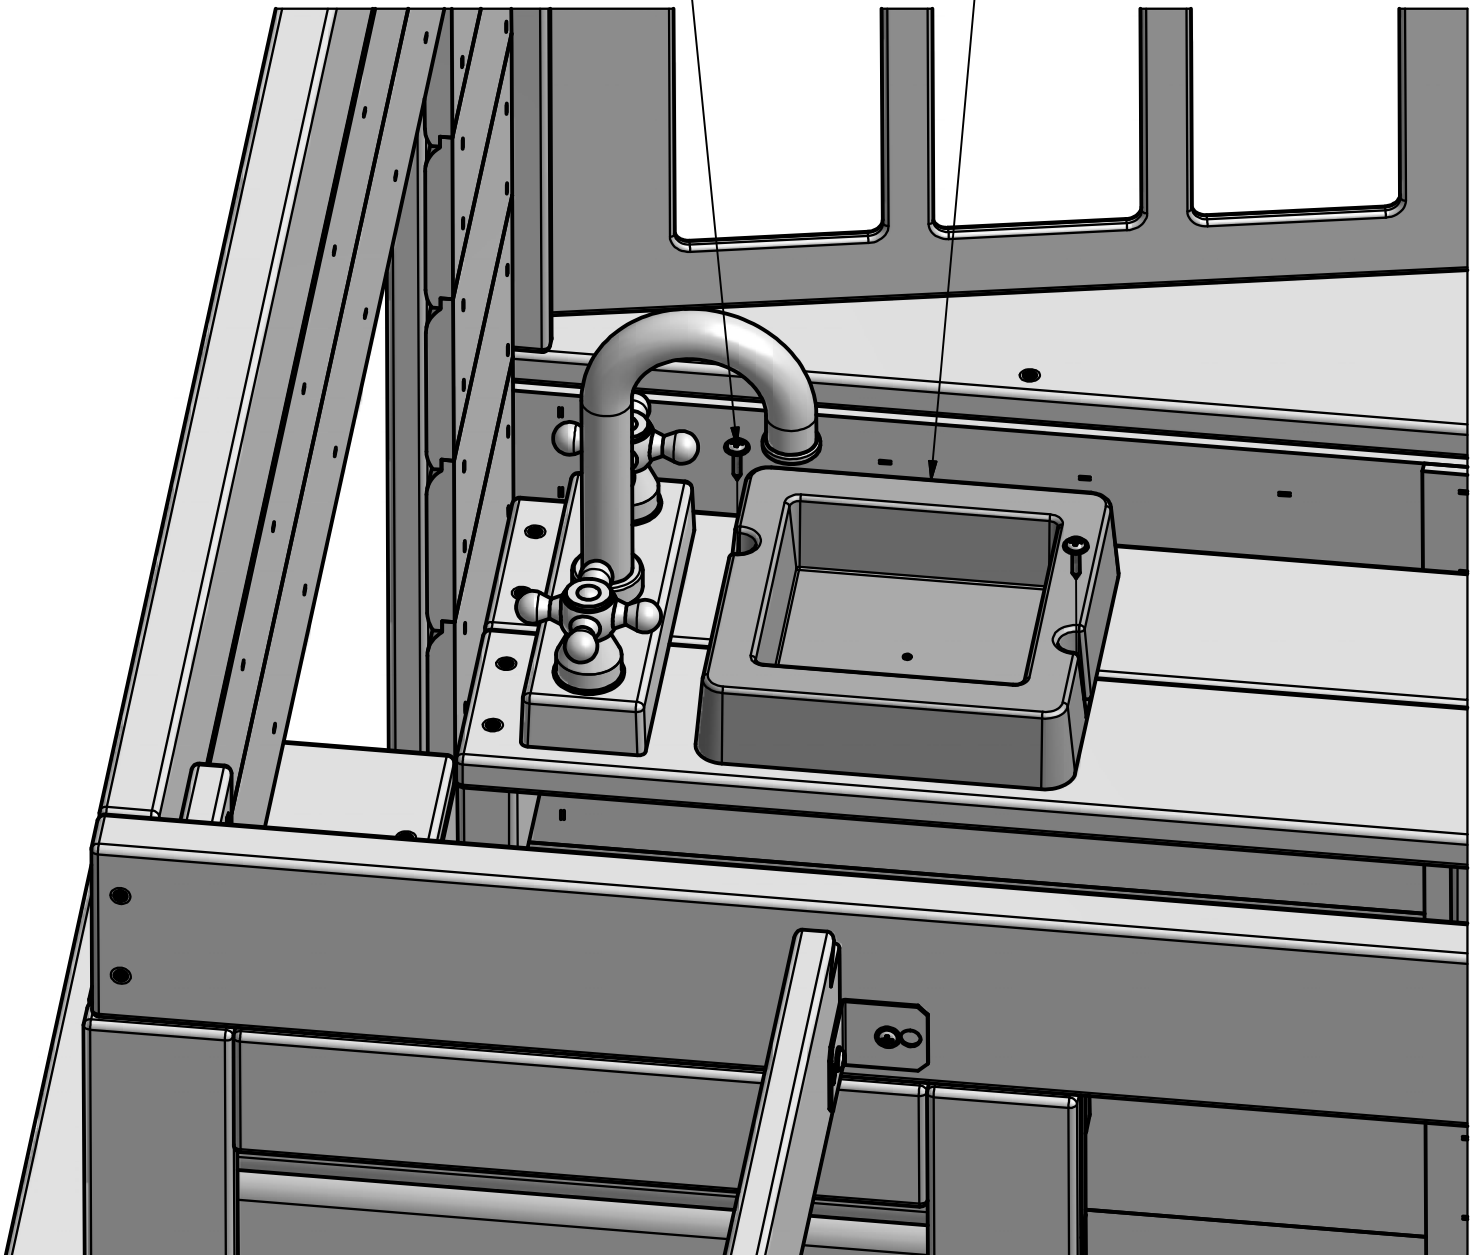

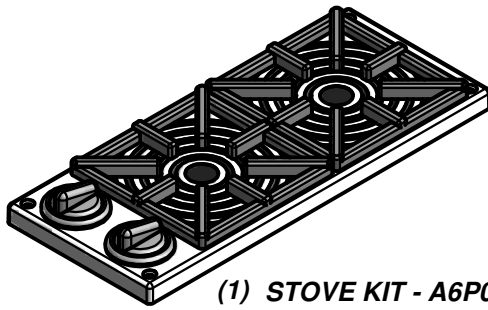


(1) STOVE KIT - A6P00025

STEP 29:

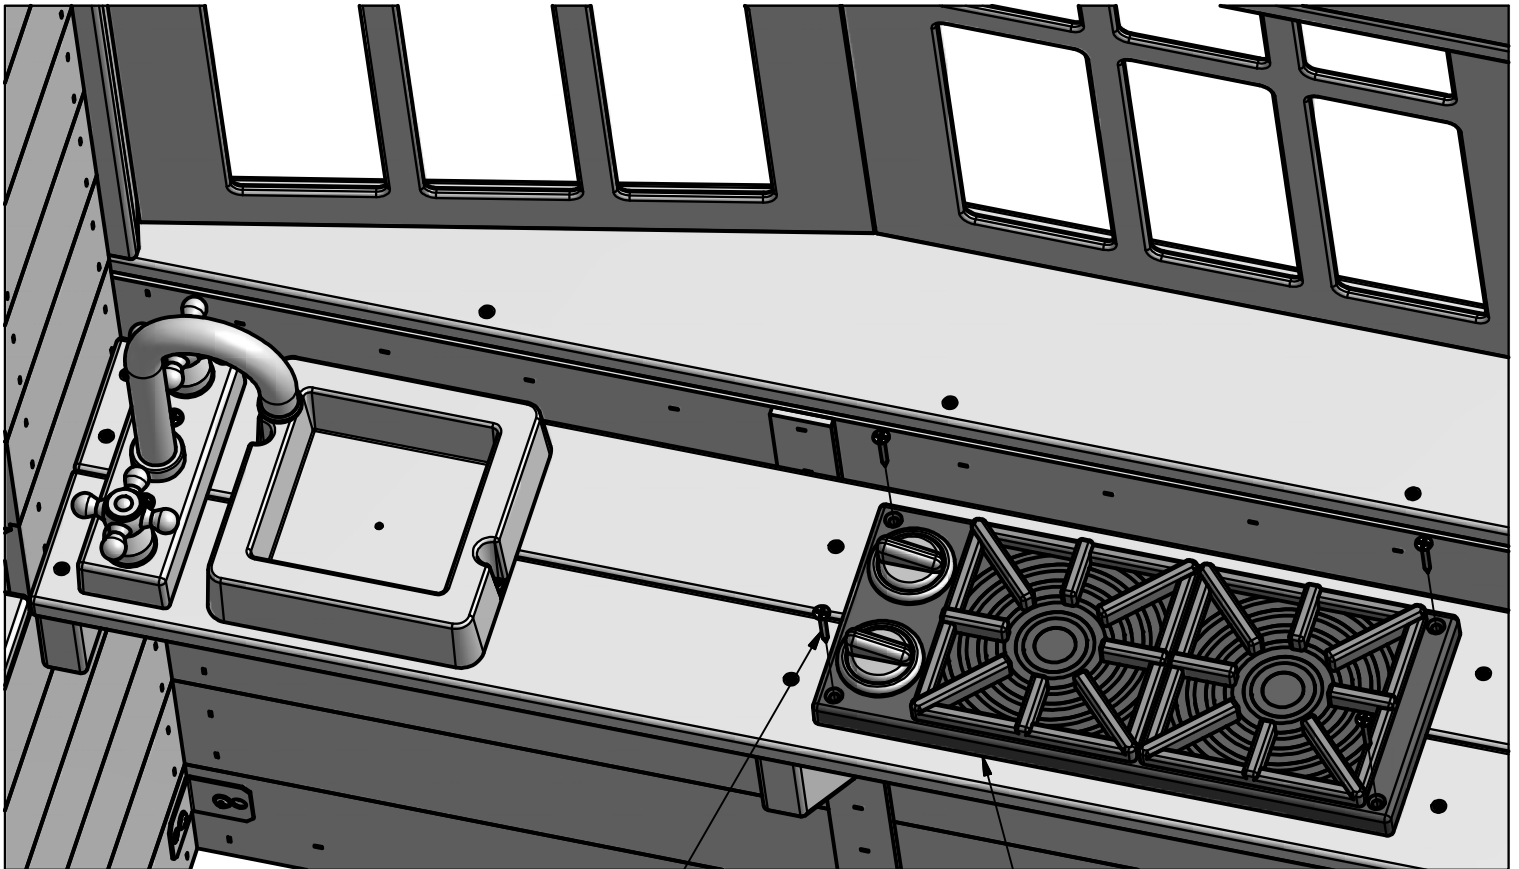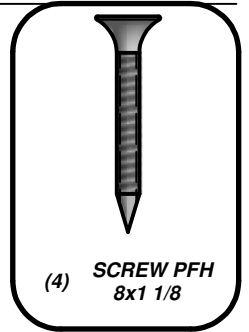

SCREW PFH 8x1 1/8
(4 PLCS)

STOVE KIT
(1 PLC)

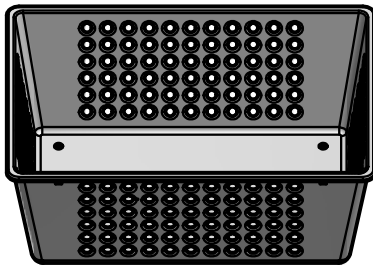


(1) **FRUIT BASKET KIT - A6P00069**


STEP 30:


SCREW PFH 8x1/2
(4 PLCS)

FRUIT BASKET KIT
(1 PLC)

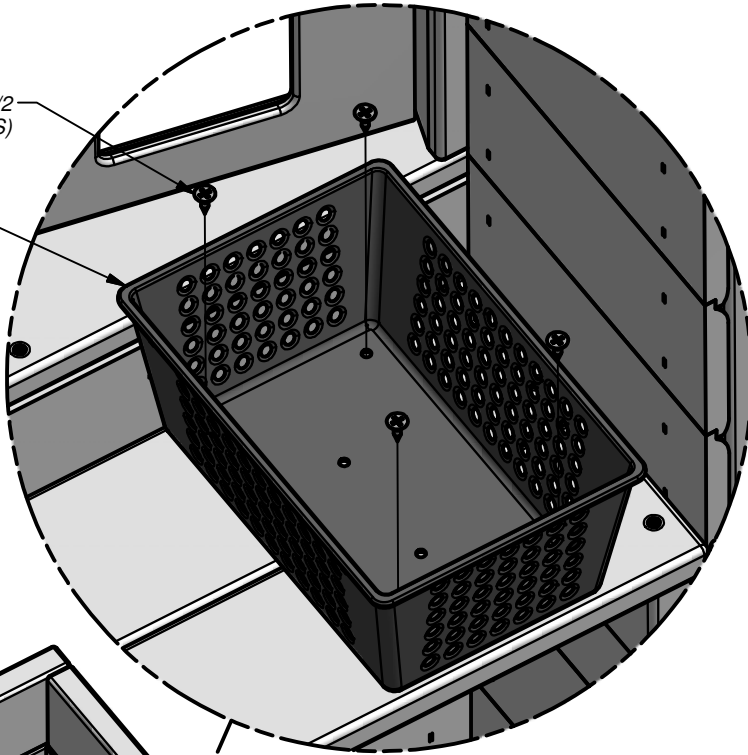



(4) **SCREW PFH
8x1/2**

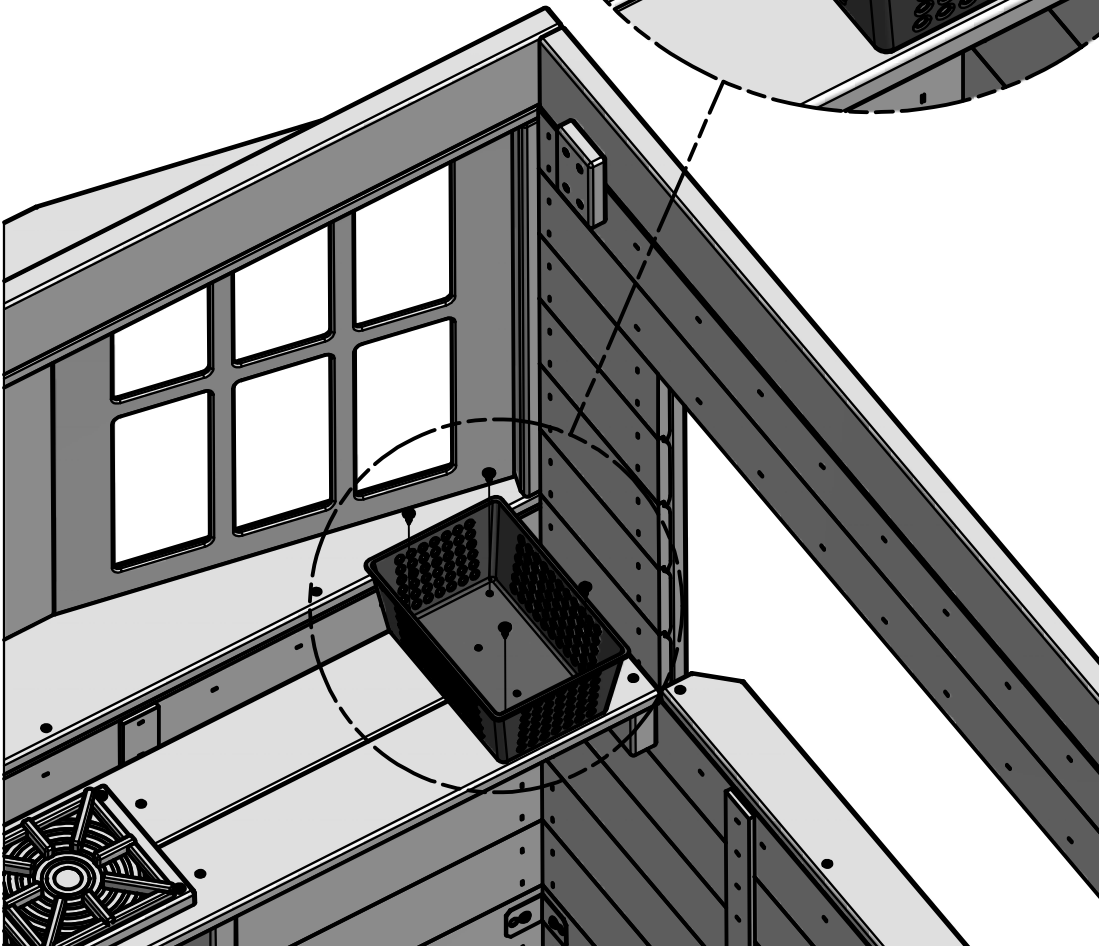

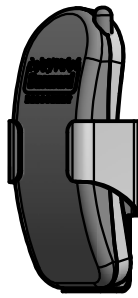




(1) PHONE KIT - A100132


STEP 31:

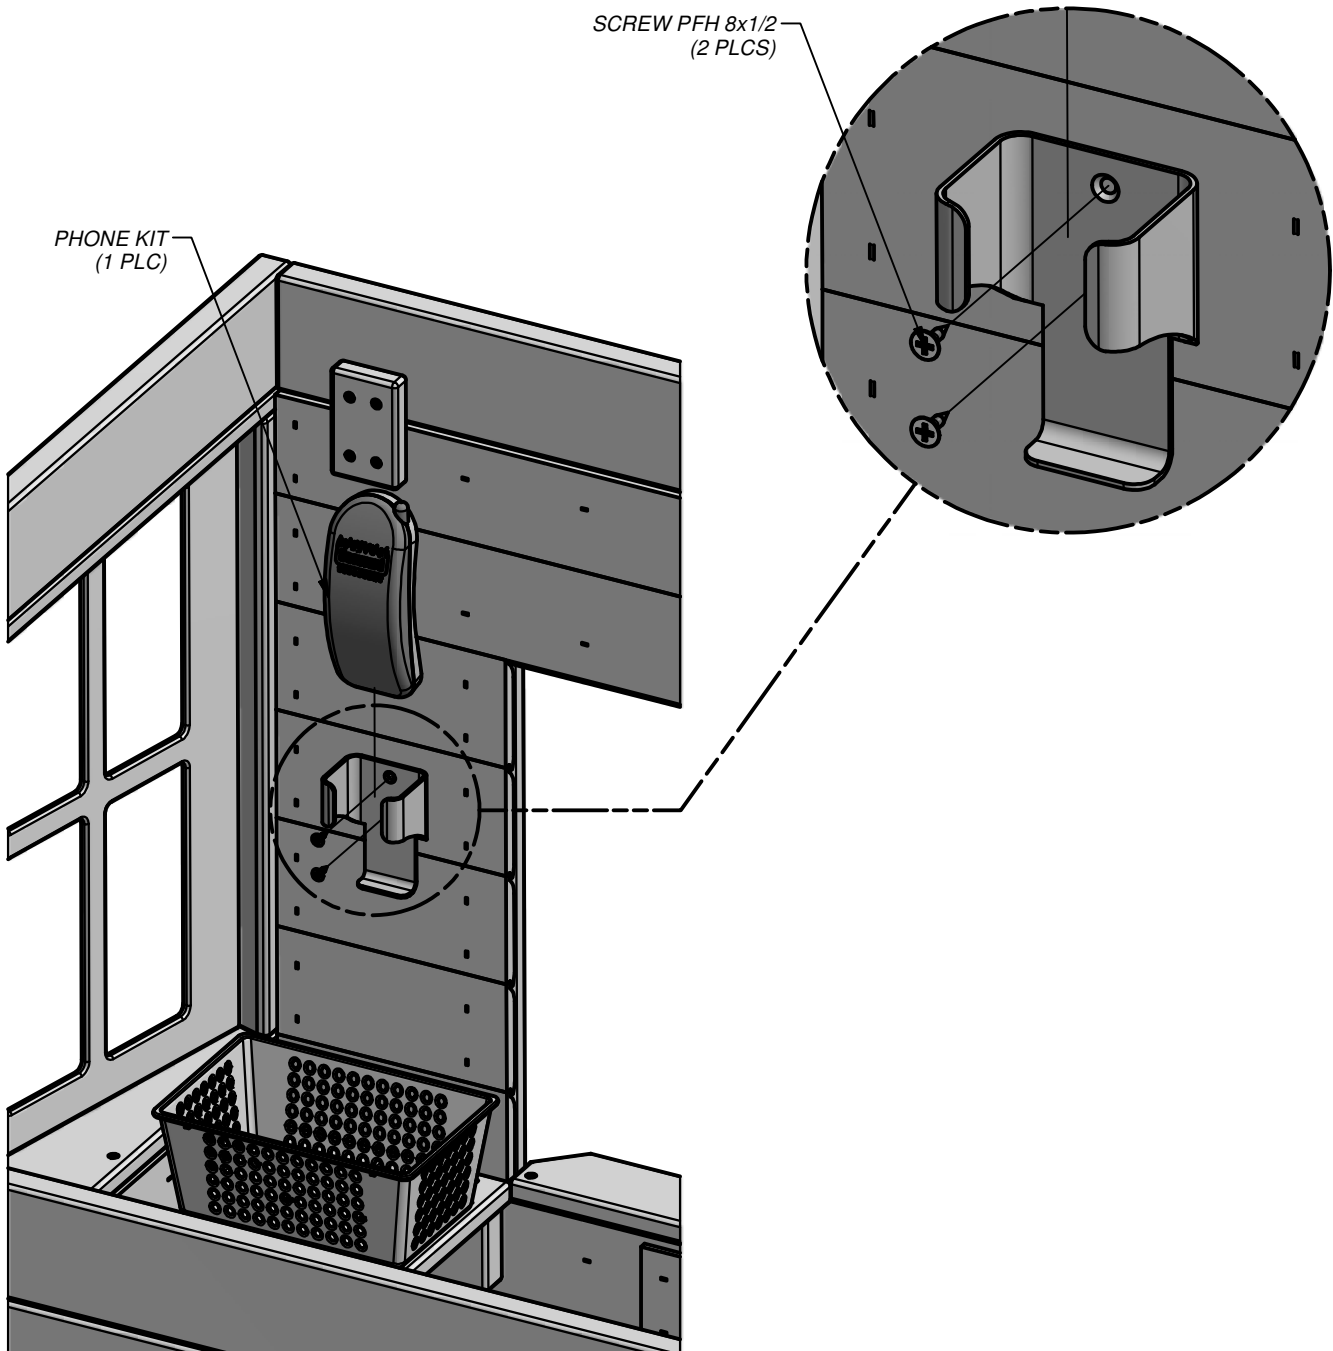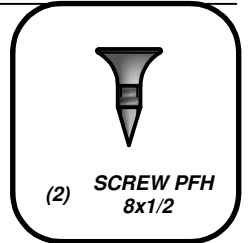




**BUILD (2) SUNBURSTS IN THIS STEP.
ONE FOR EACH HOUSE GABLE PANEL.**

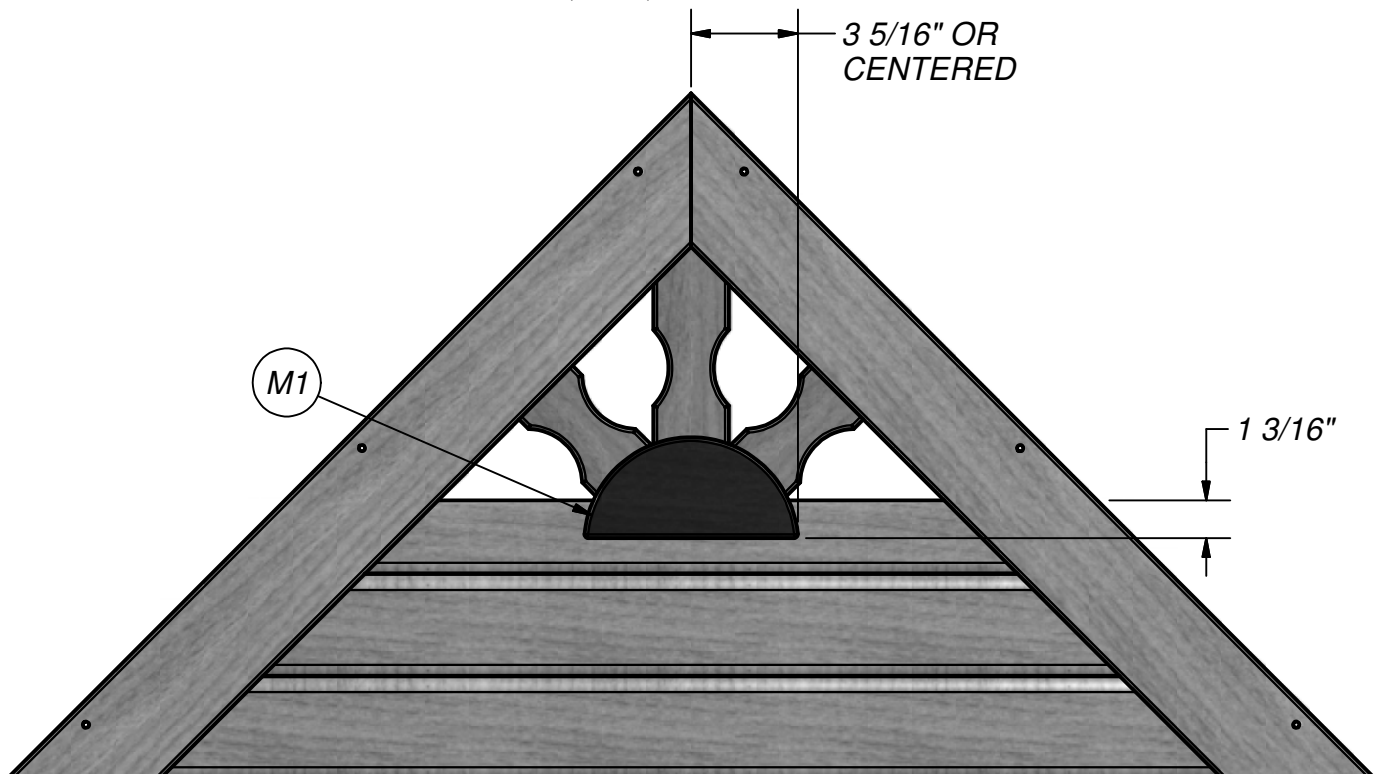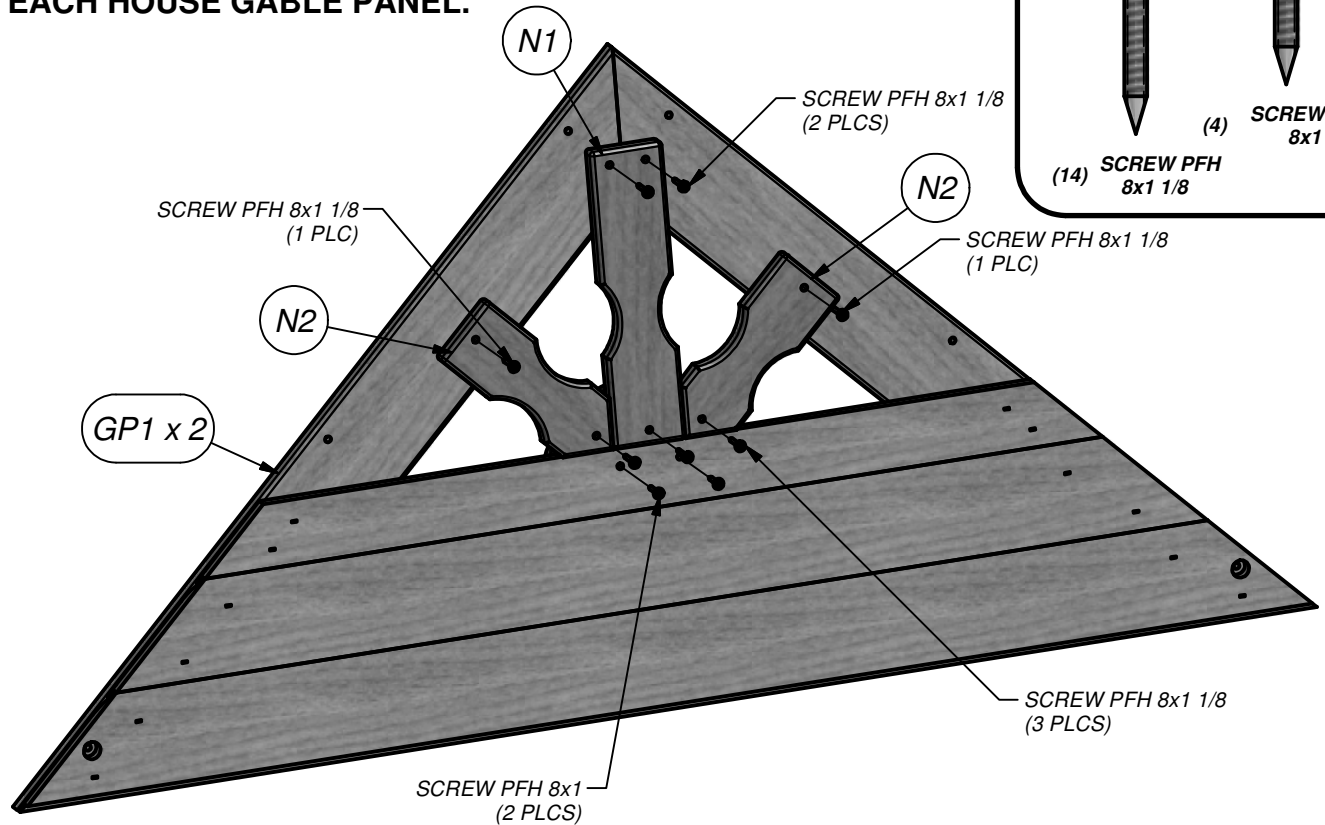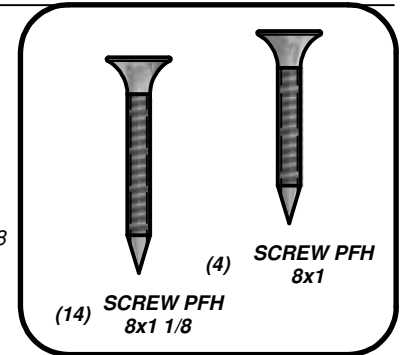


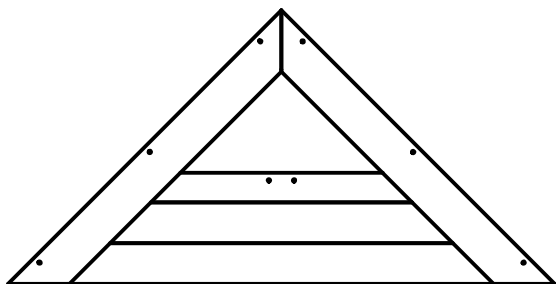



(1) **GP1 - GABLE END ASSEMBLY - W2A02011**
 1 1/8"x42 3/4"x21 3/8" (27x1085x543)

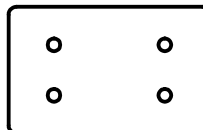


(2) **N9 - TIE STRAP - W4L07221**
 5/8"x2"x3 1/8" (16x50x80)

STEP 33:

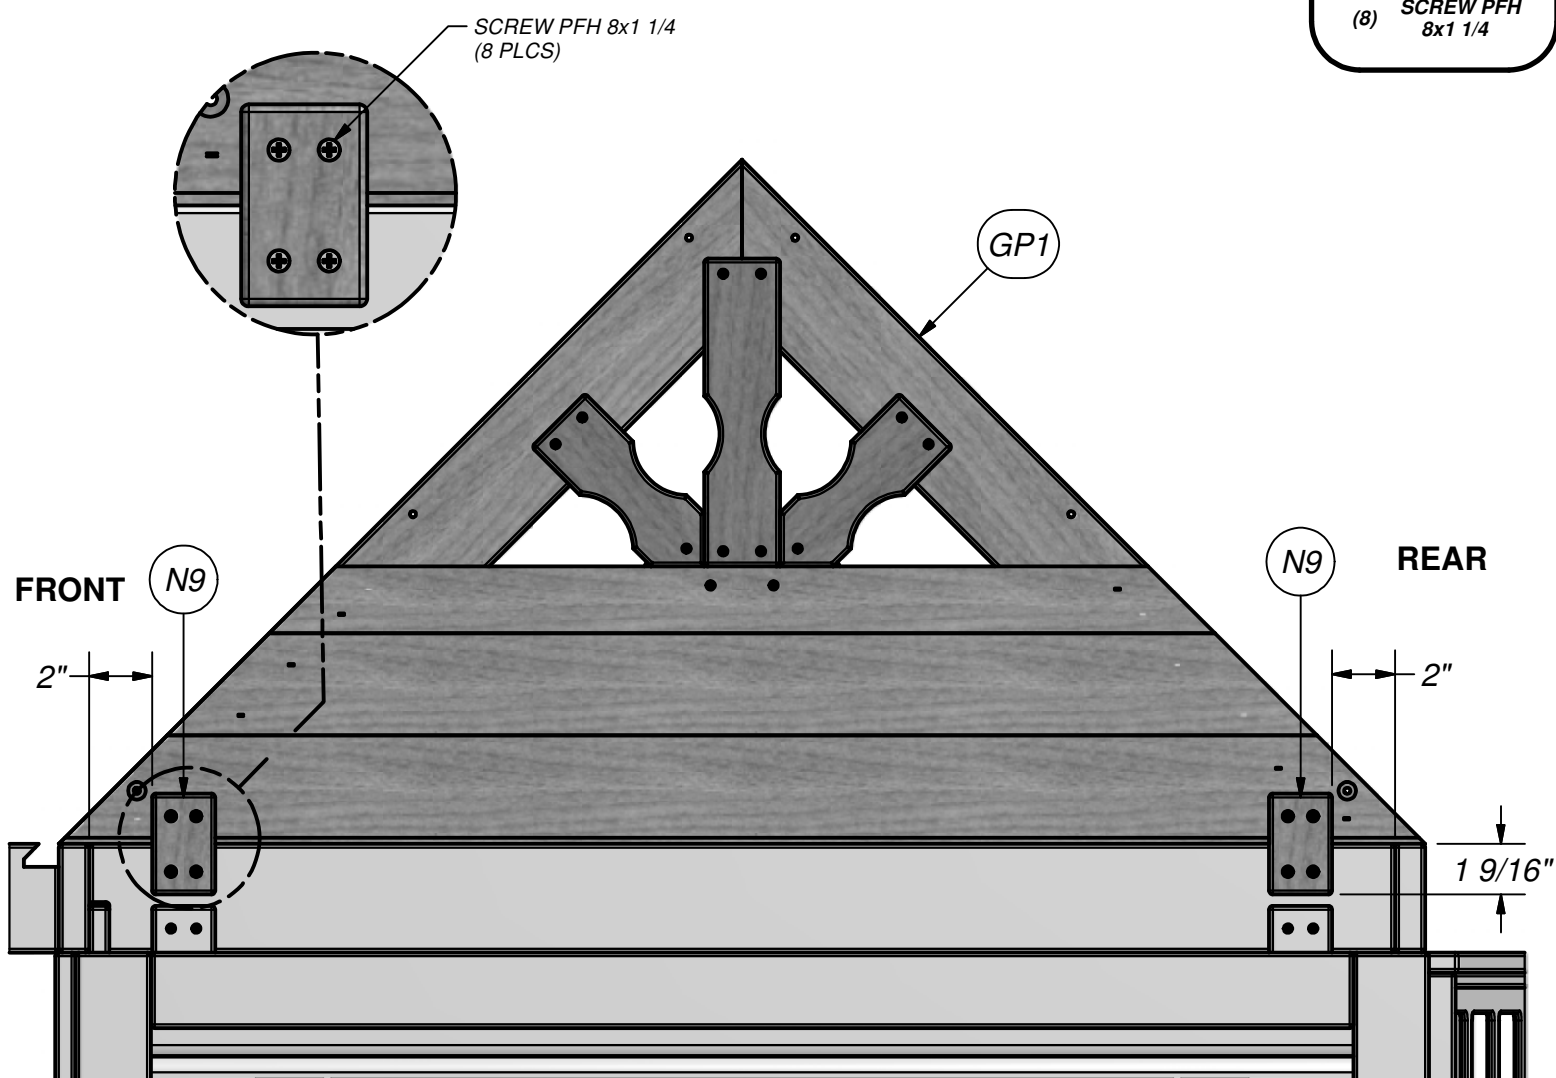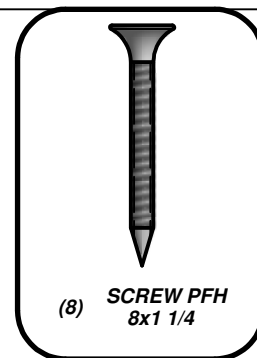


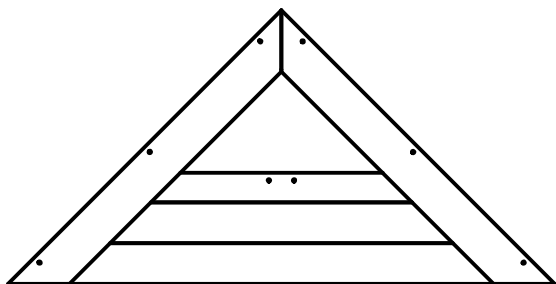


(1) **GP1 - GABLE END ASSEMBLY - W2A02011**
 1 1/8"x42 3/4"x21 3/8" (27x1085x543)

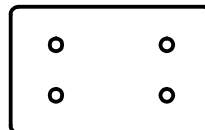

(2) **N9 - TIE STRAP - W4L07221**
 5/8"x2"x3 1/8" (16x50x80)

STEP 34:

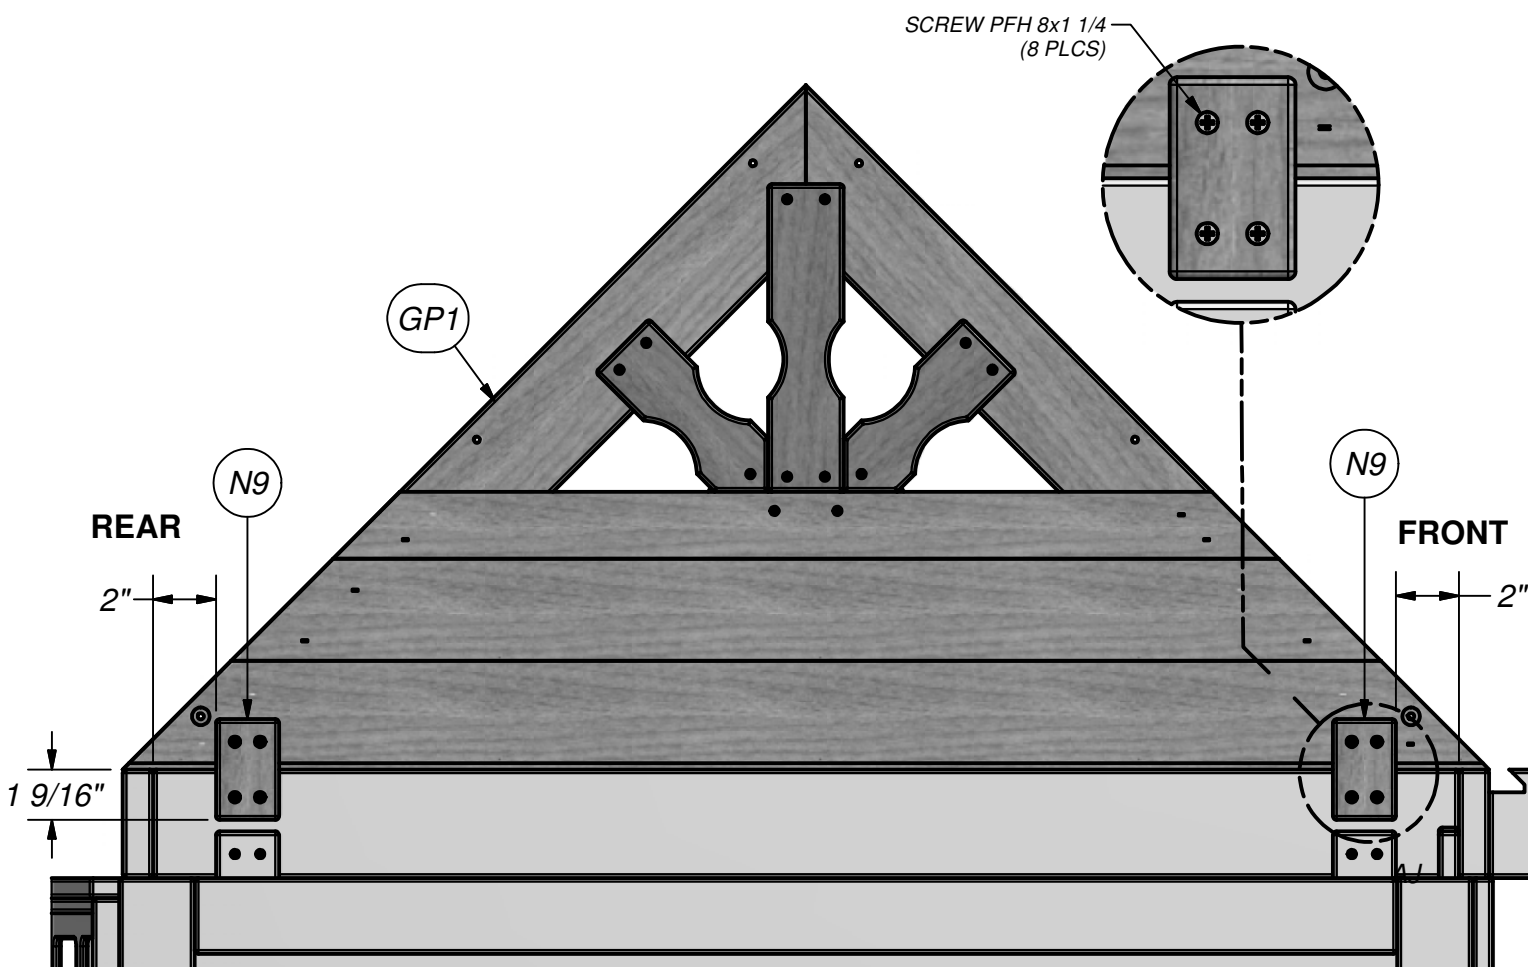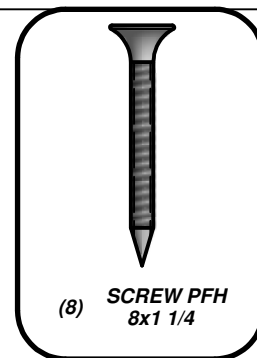



(1) **N5 - SUNBURST LEG - W4L07205**
5/8"x2 3/8"x11 5/8" (16x60x294)







(2) **N6 - SUNBURST LEG - W4L07206**
5/8"x2 3/8"x6" (16x60x152)




(1) **M1 - HALF MOON - W4L07184**
5/8"x3 1/8"x6 3/4" (16x80x170)

STEP 35:

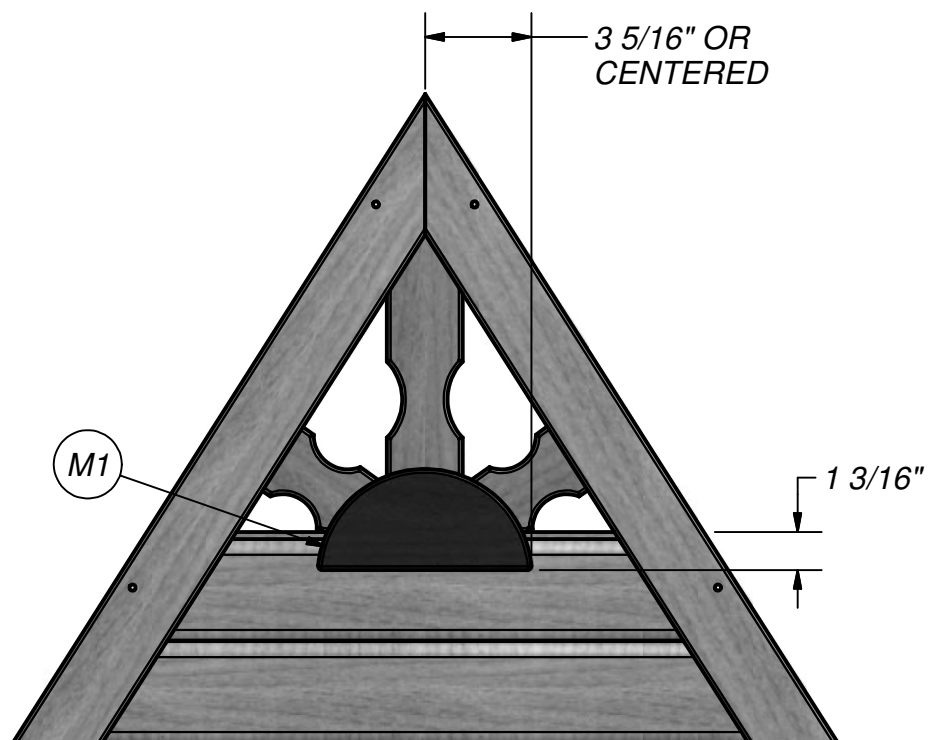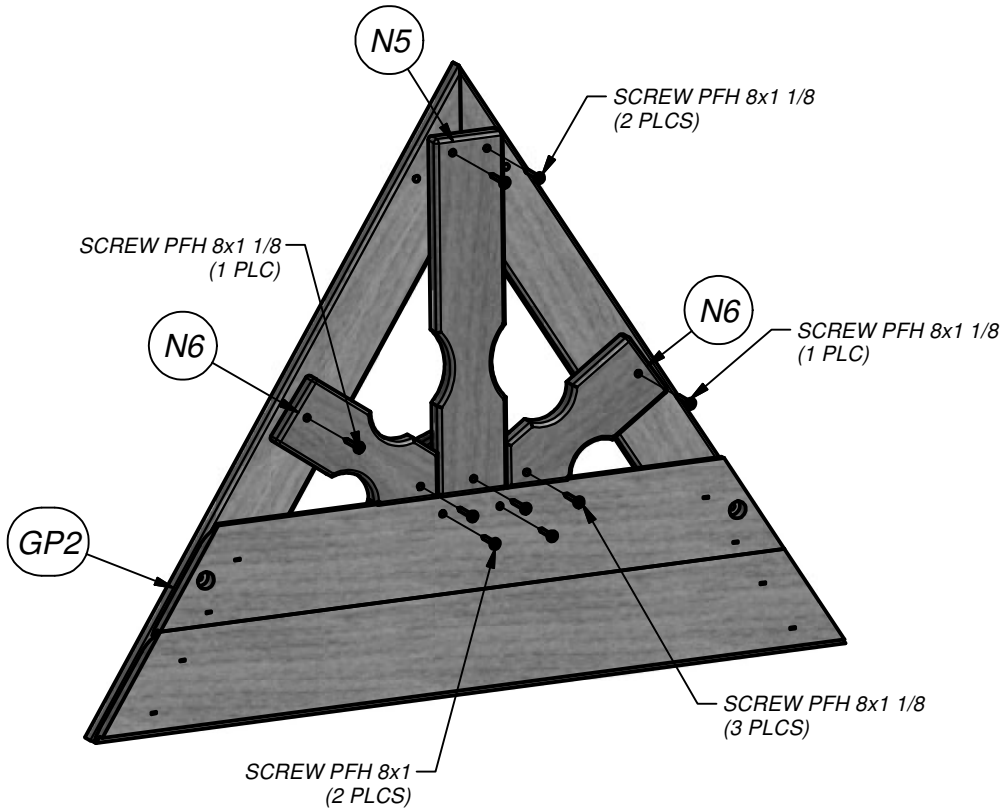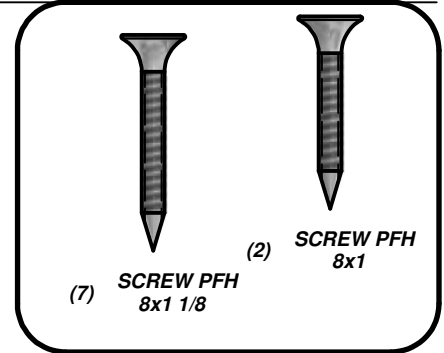


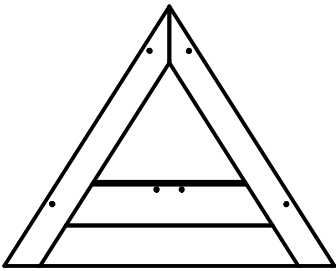




(1) **GP2 - GABEL END ASSEMBLY - W2A02014**
 1 1/8"x25 3/4"x20 1/4" (27x655x514)

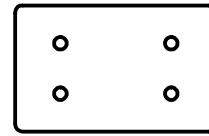

(2) **N9 - TIE STRAP - W4L07221**
 5/8"x2"x3 1/8" (16x50x80)

STEP 36:

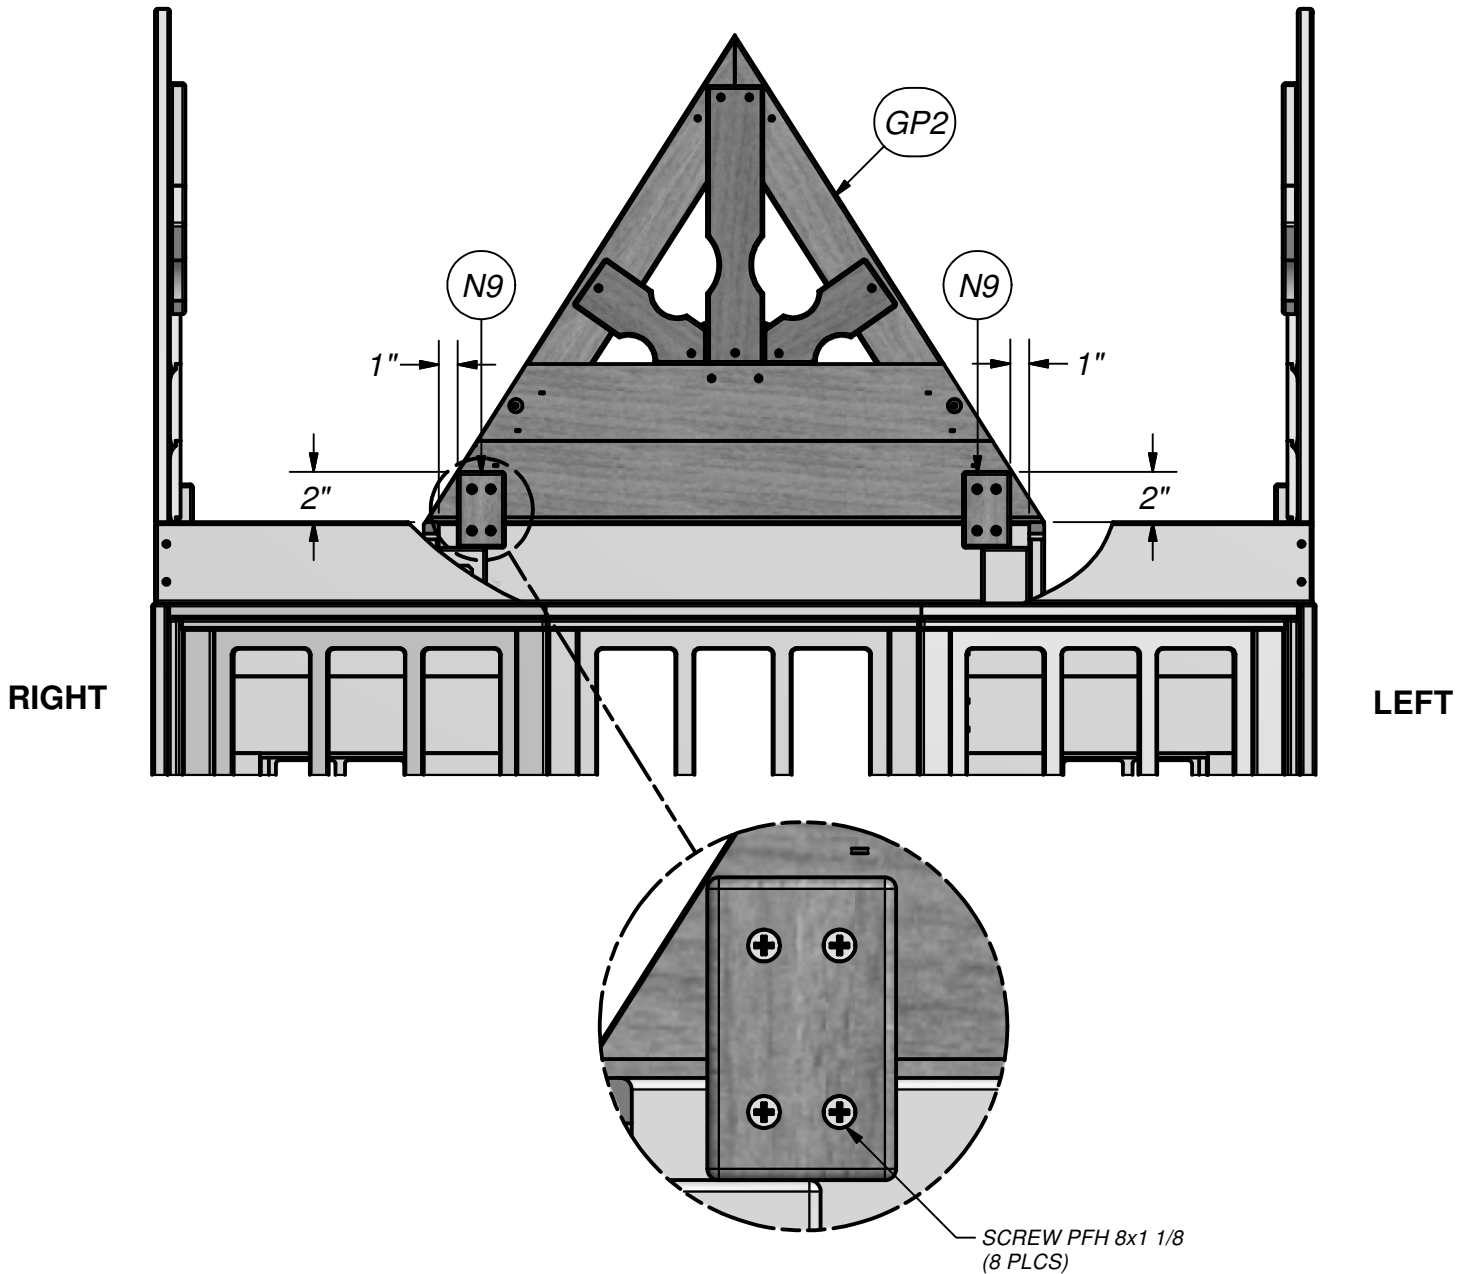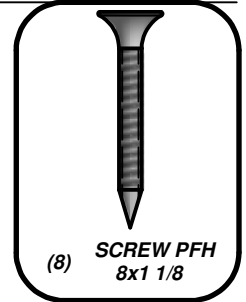

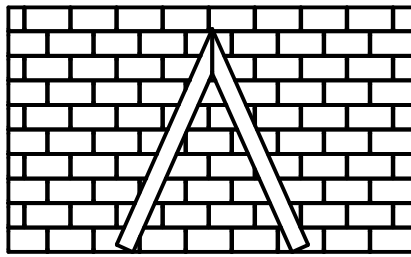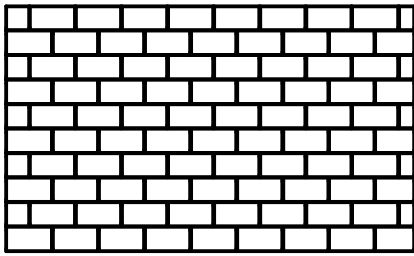



(2) 90° L-BRACKET - BLK - A4M00555

(1) RP1 - BACK ROOF PANEL - W2A02012
1 3/8"x35 1/4"x49 5/8" (35x808x1350)


(1) RP2 - FRONT ROOF PANEL - W2A02013
2"x35 1/4"x49 5/8" (51x808x1350)

STEP 37:

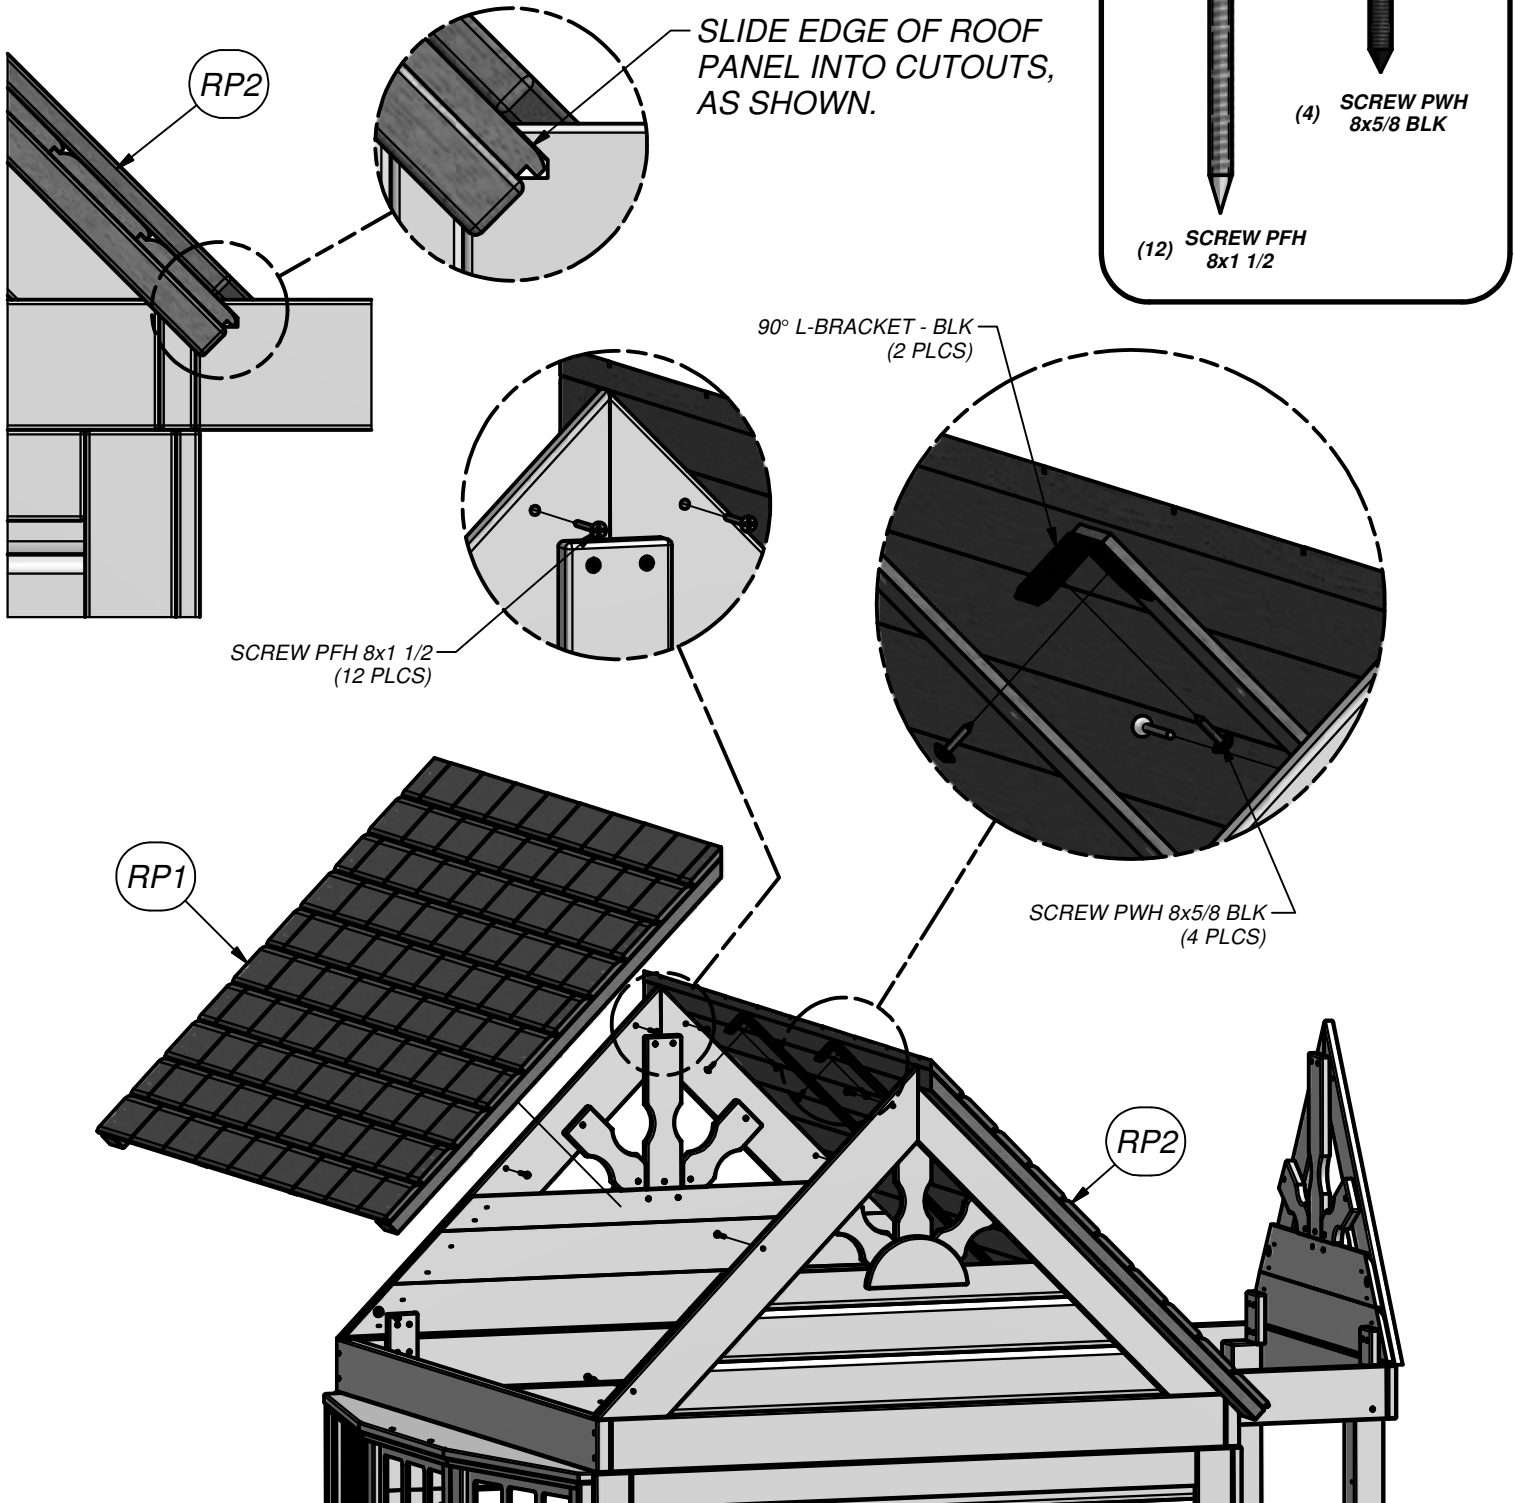



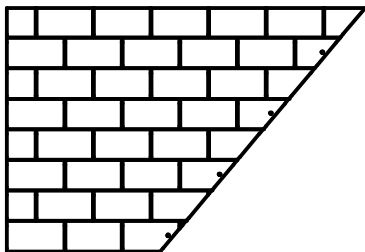



(1) **RP3 - RIGHT ROOF PANEL - W2A02015**
1 3/8"x37 3/8"x25 1/2" (35x949x646)

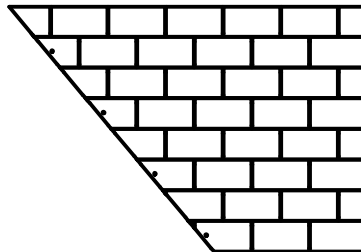

(1) **RP4 - LEFT ROOF PANEL - W2A02016**
1 3/8"x37 3/8"x25 1/2" (35x949x646)

STEP 38:

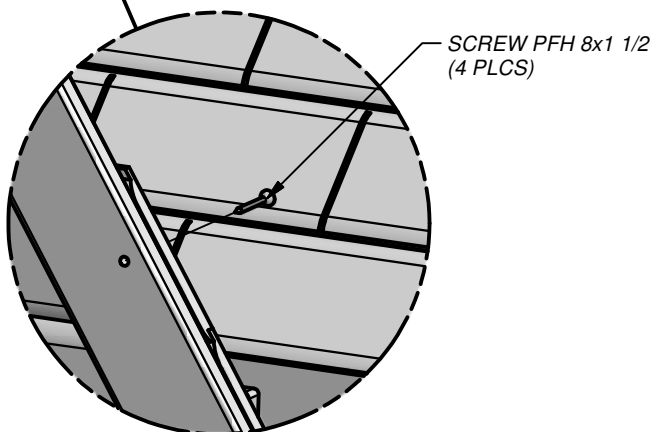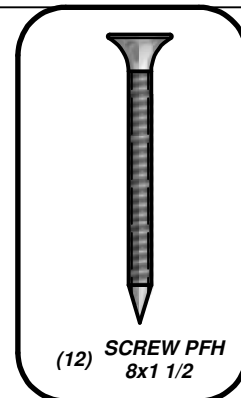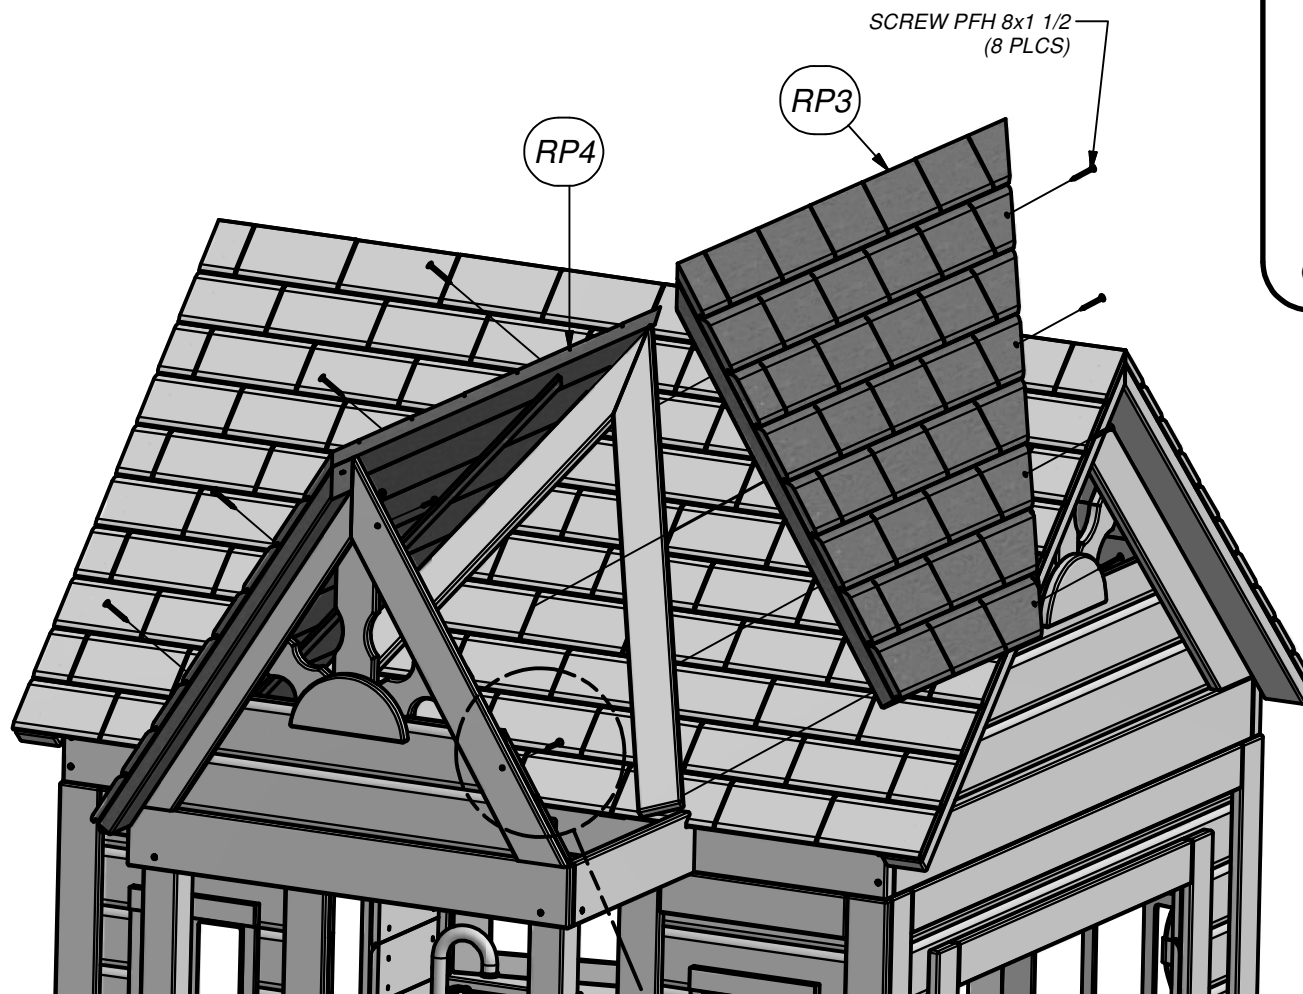


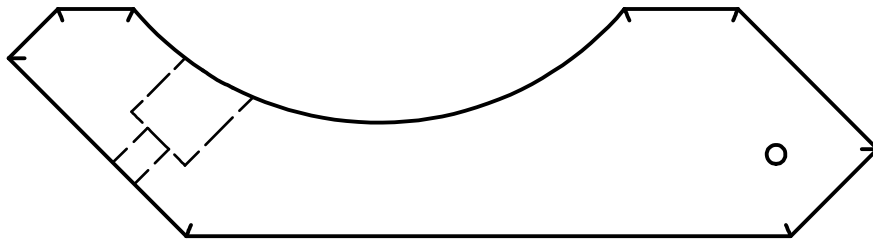



(2) **J7 - PORCH CORBEL - W4L07230**
1"x2 3/8"x9" (24x60x230)

STEP 39:




J7

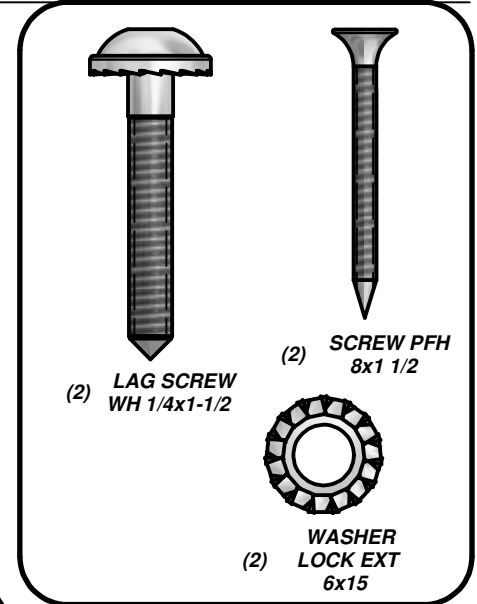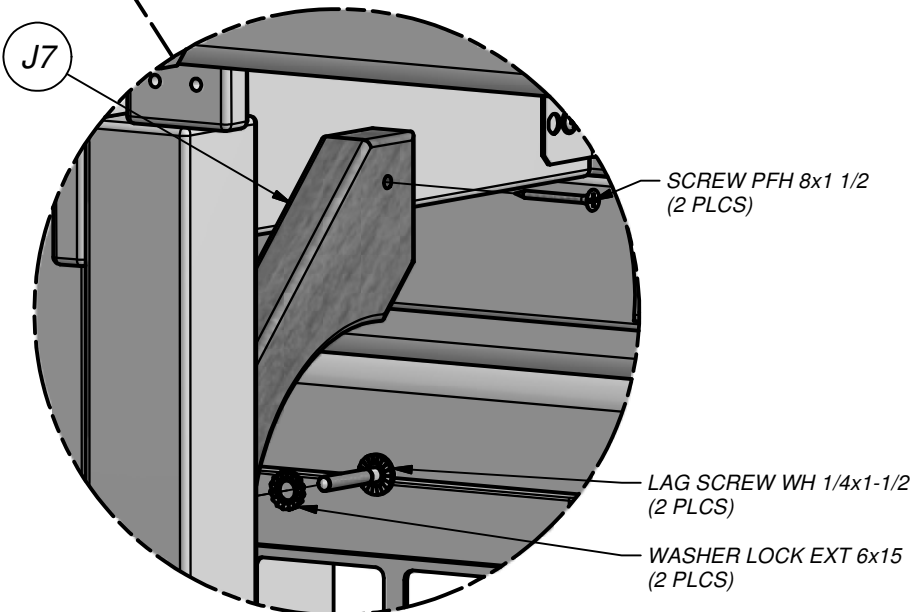

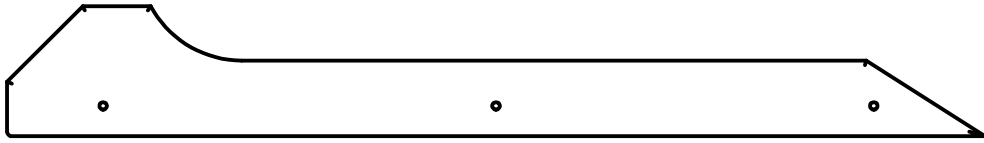



- (2) **M12 - FASCIA BOARD - W4L07219**
5/8"x3 3/8"x25 1/2" (16x86x647)

STEP 40:

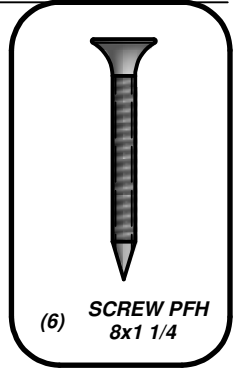



SCREW PFH 8x1 1/4
(6 PLCS)

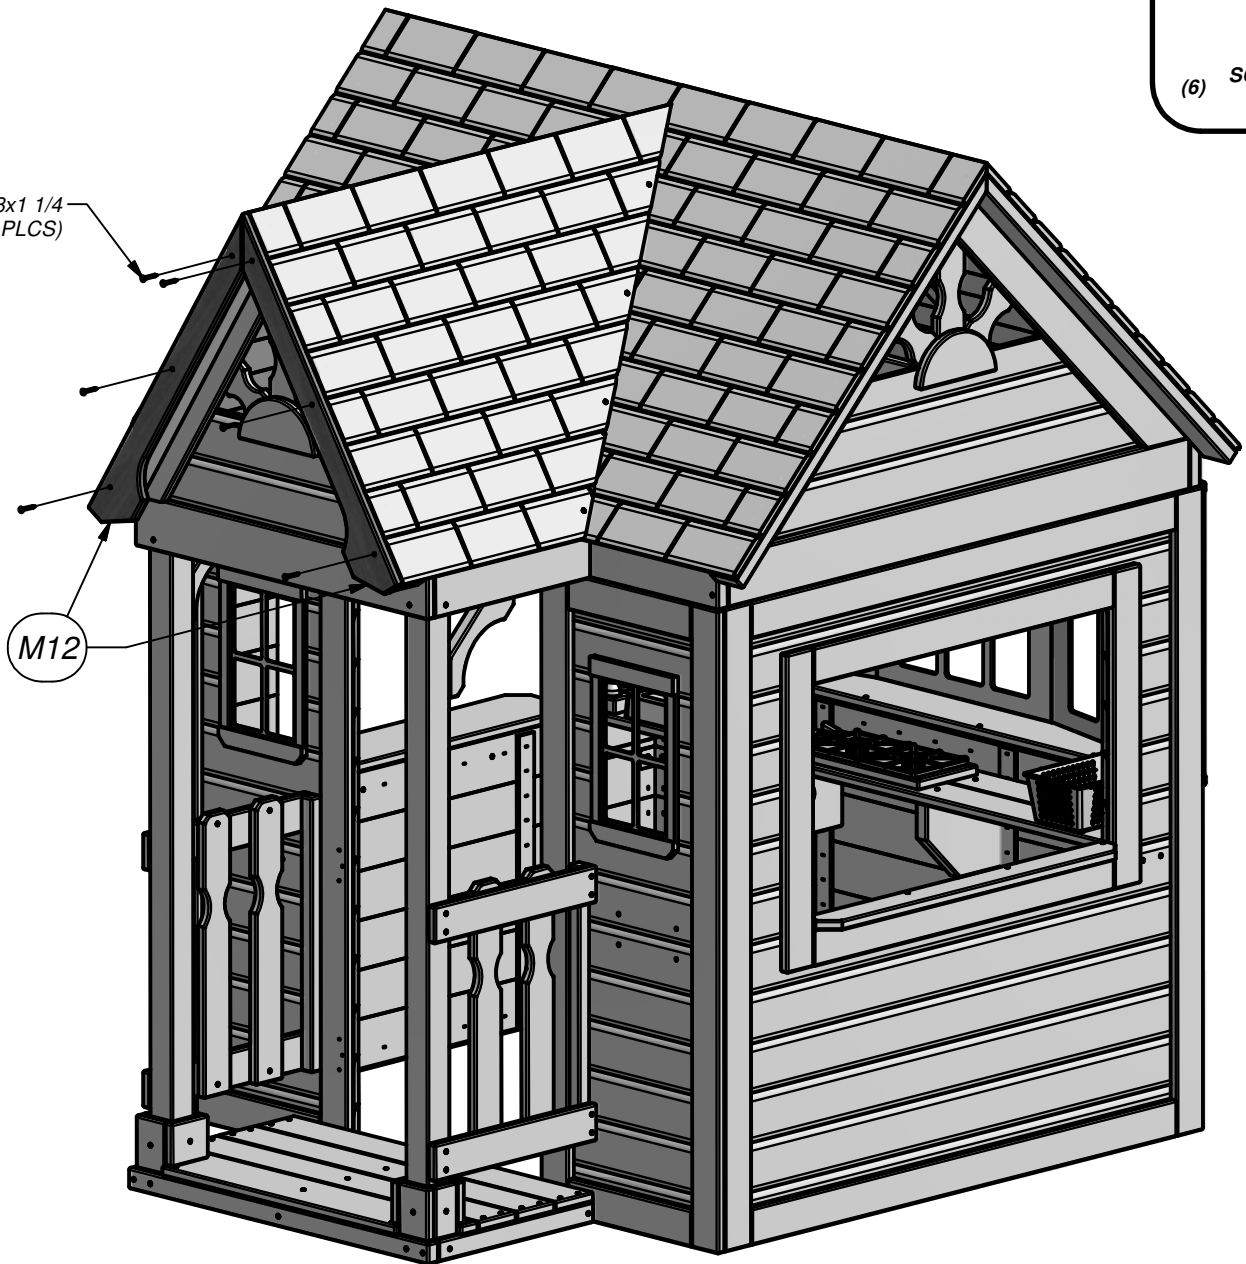


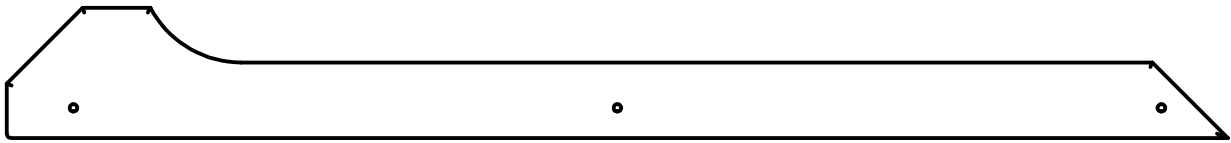

(2) **M11 - FASCIA BOARD - W4L07218**
5/8"x3 3/8"x31 3/4" (16x86x808)



STEP 41:

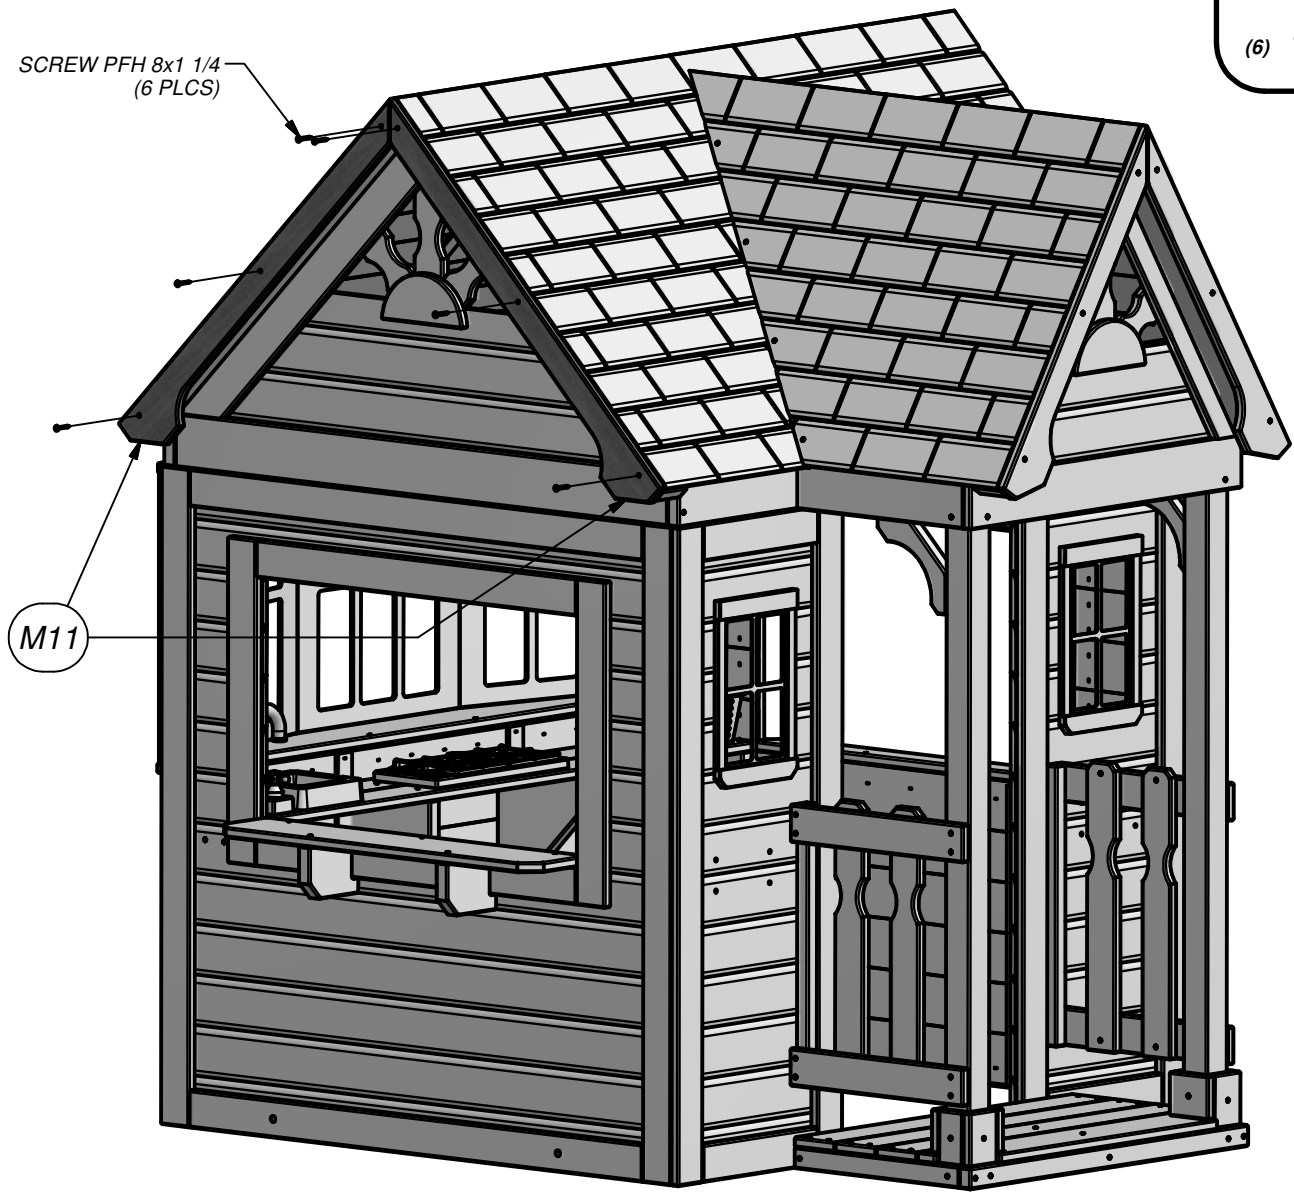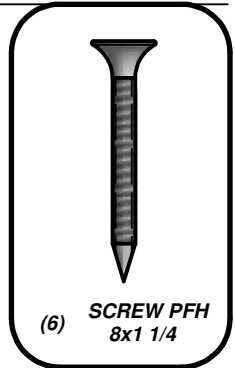

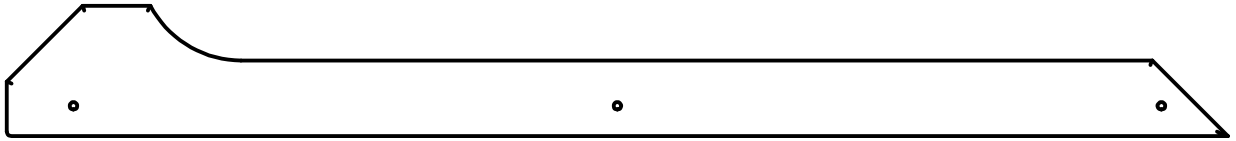

(2) **M11 - FASCIA BOARD - W4L07218**
5/8"x3 3/8"x31 3/4" (16x86x808)

STEP 42:

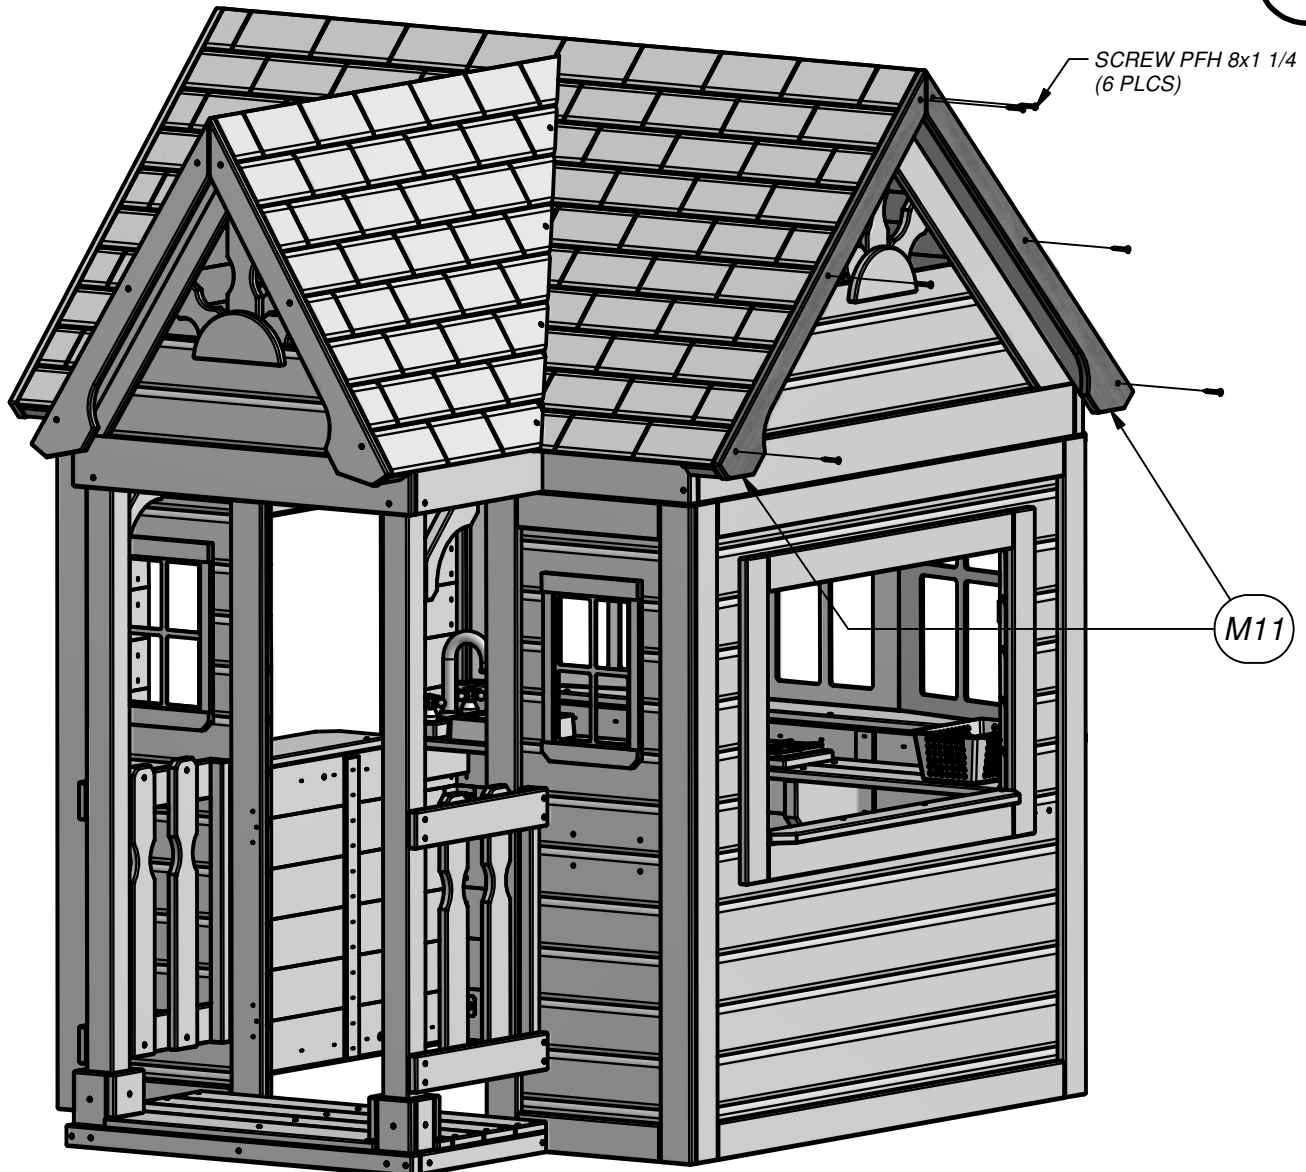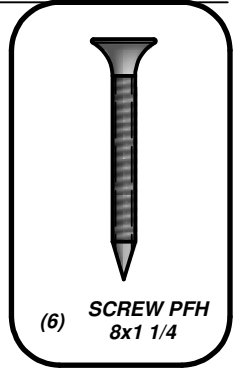




- (1) **O1 - TRIM BOARD - W4L07213**
5/8"x1 3/8"x27 1/8" (16x34x689)



- (2) **O2 - TRIM BOARD - W4L07214**
5/8"x1 3/8"x11 3/4" (16x34x300)



- (2) **O3 - TRIM BOARD - W4L07215**
5/8"x1 3/8"x13 3/4" (16x34x350)




- (1) **O4 - TRIM BOARD - W4L07216**
5/8"x1 3/8"x49 1/2" (16x34x1258)




- (2) **O5 - TRIM BOARD - W4L07217**
5/8"x1 3/8"x42 5/8" (16x34x1084)

STEP 43:

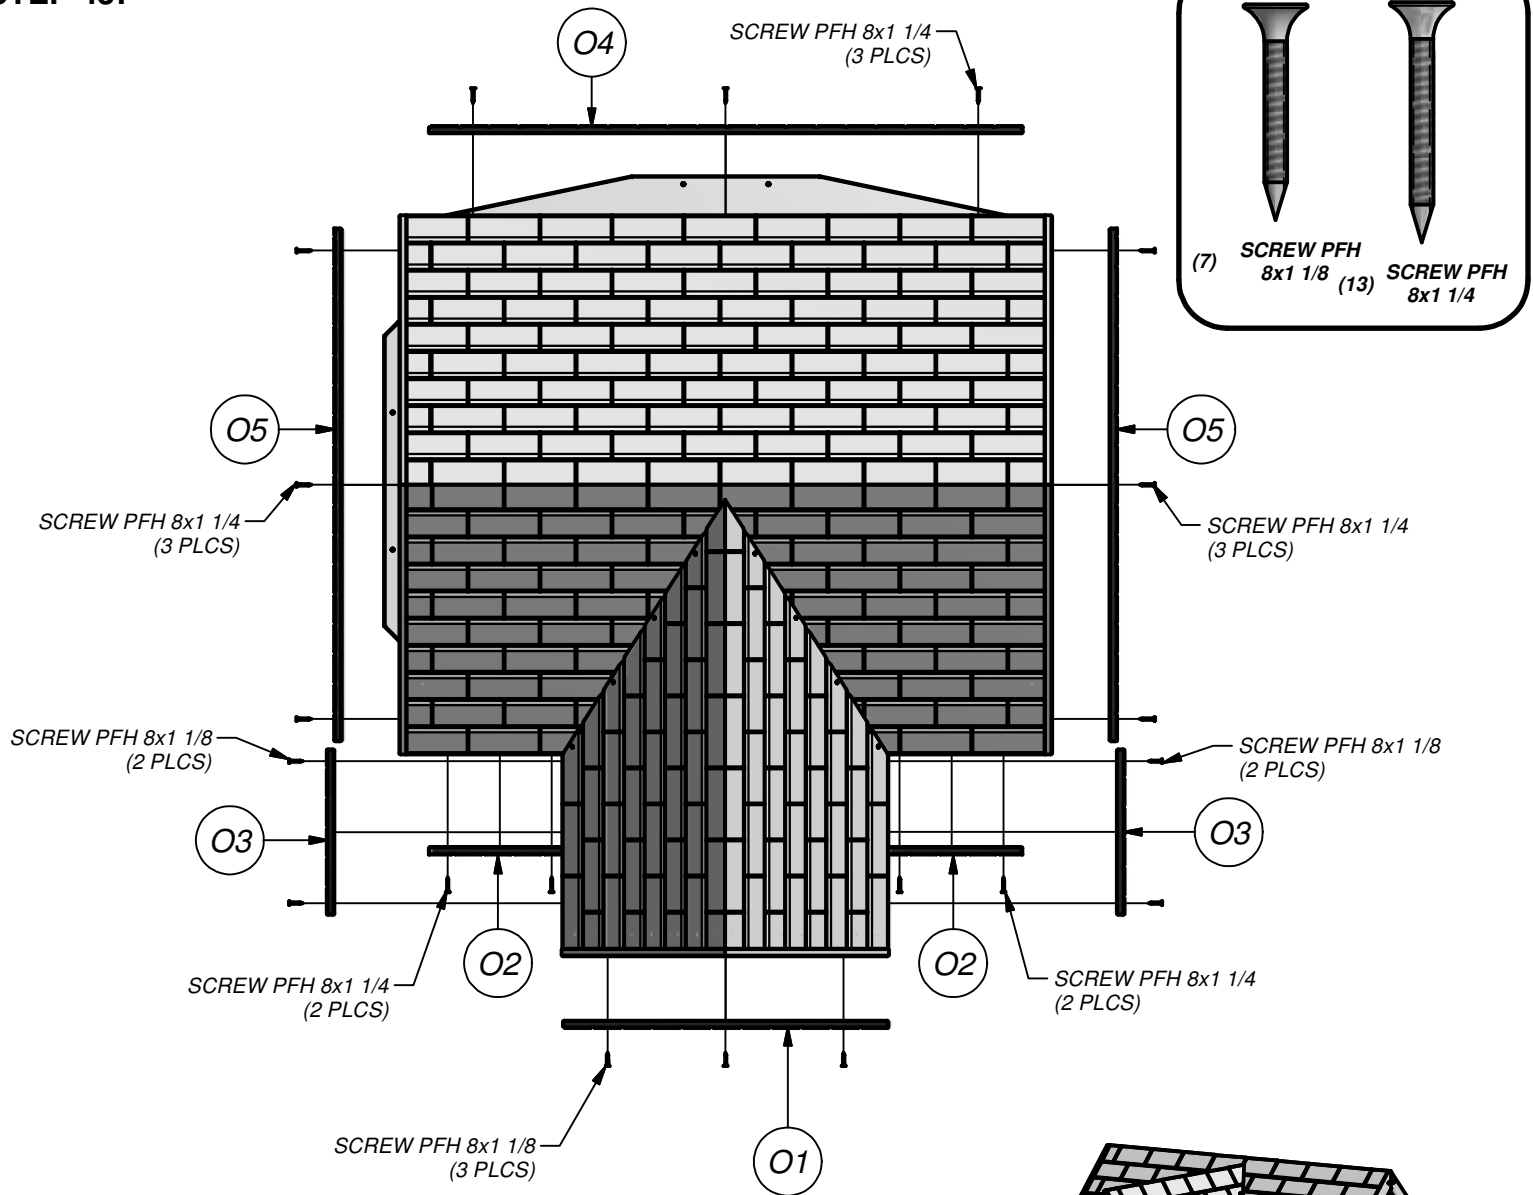




BOTTOM EDGE IS FLUSH
TO THE BOTTOM EDGE
OF THE HEADER BOARDS.




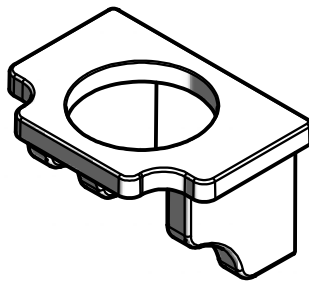

(2) FLOWER POT HOLDER - A6P00023





STEP 44:

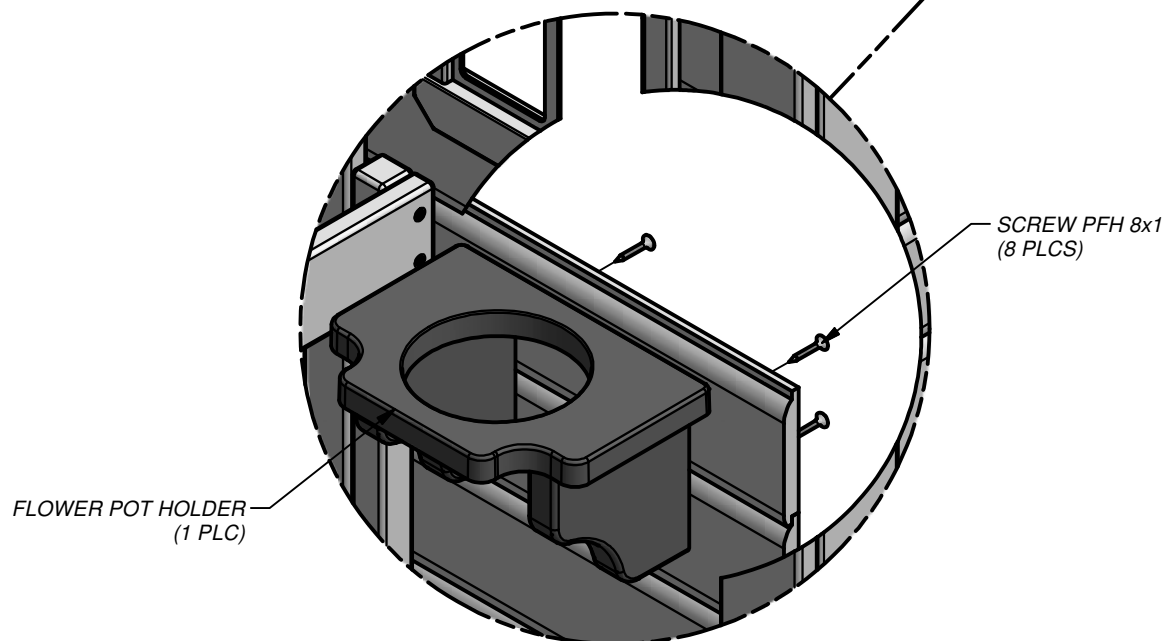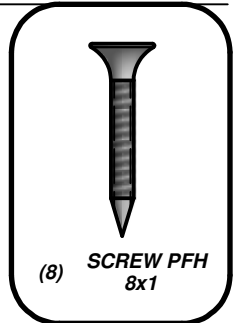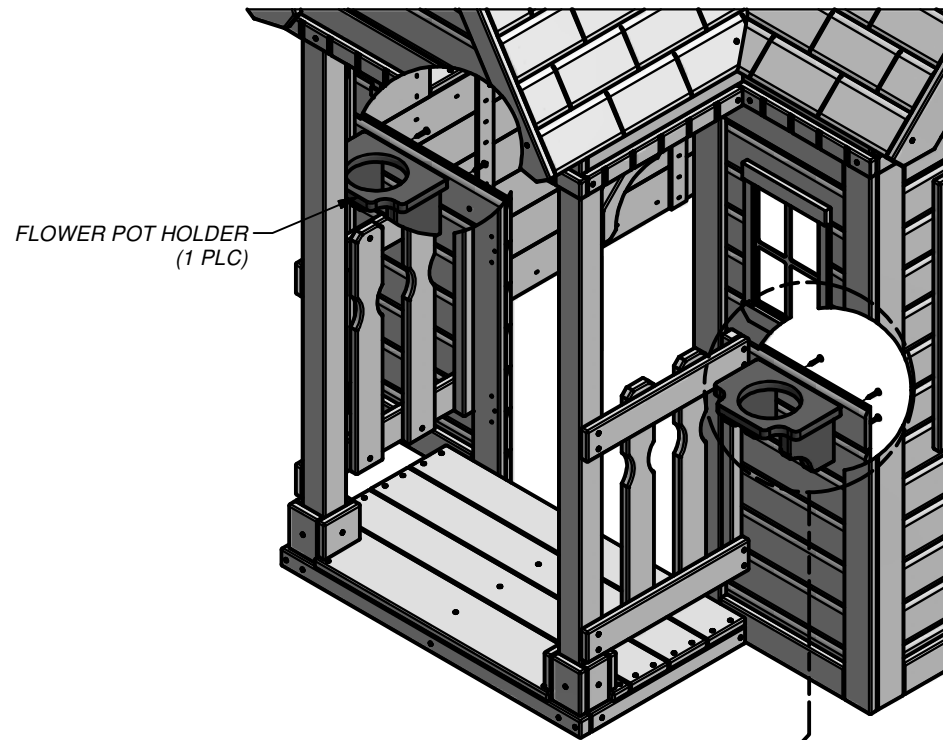


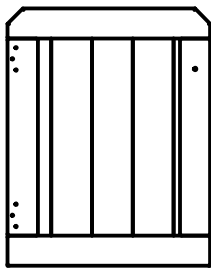

- (1) **DP1 - DOOR PANEL - W2A02017** (2) **SPRING HINGE - BYA GREEN - A4M00591** (1) **KNOB - BUTTER - A6P00158**
(1) **1 1/8"x15 7/8"x20 1/8" (27x402x510)**



STEP 45:

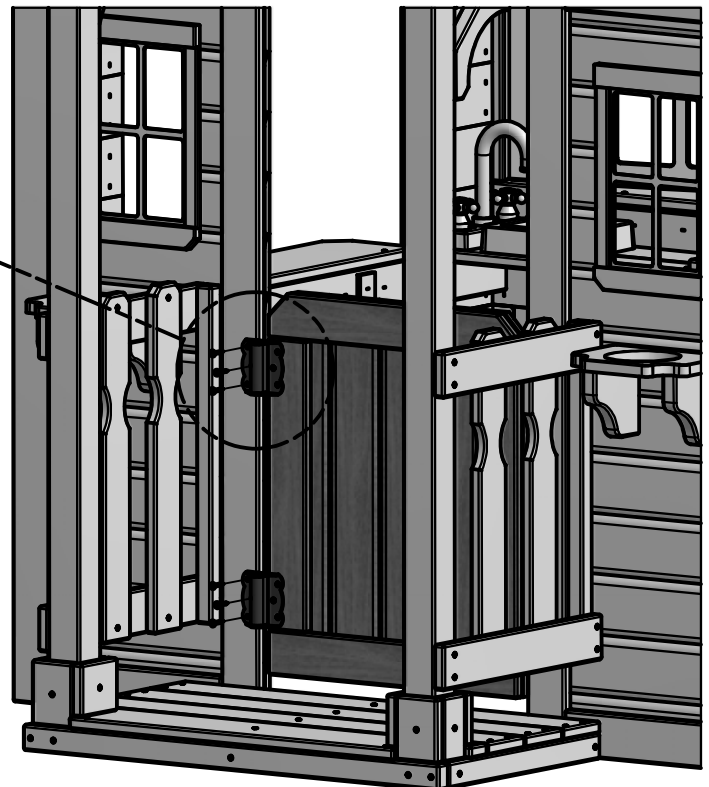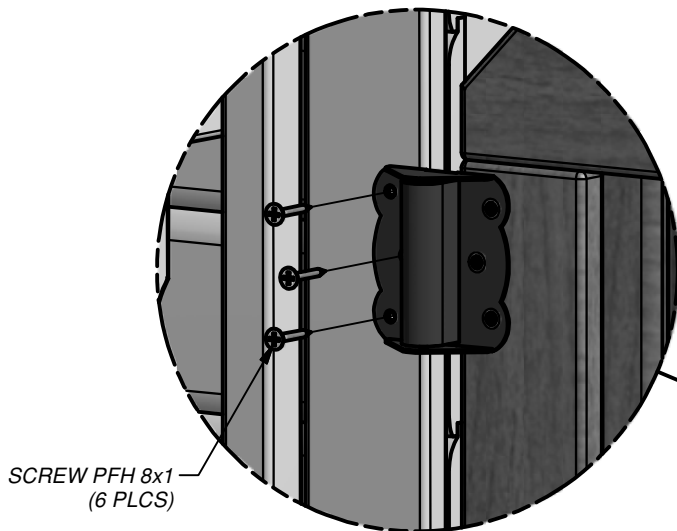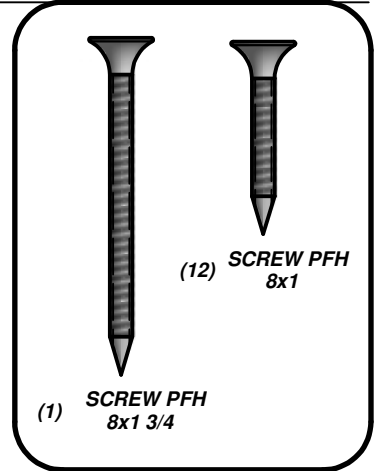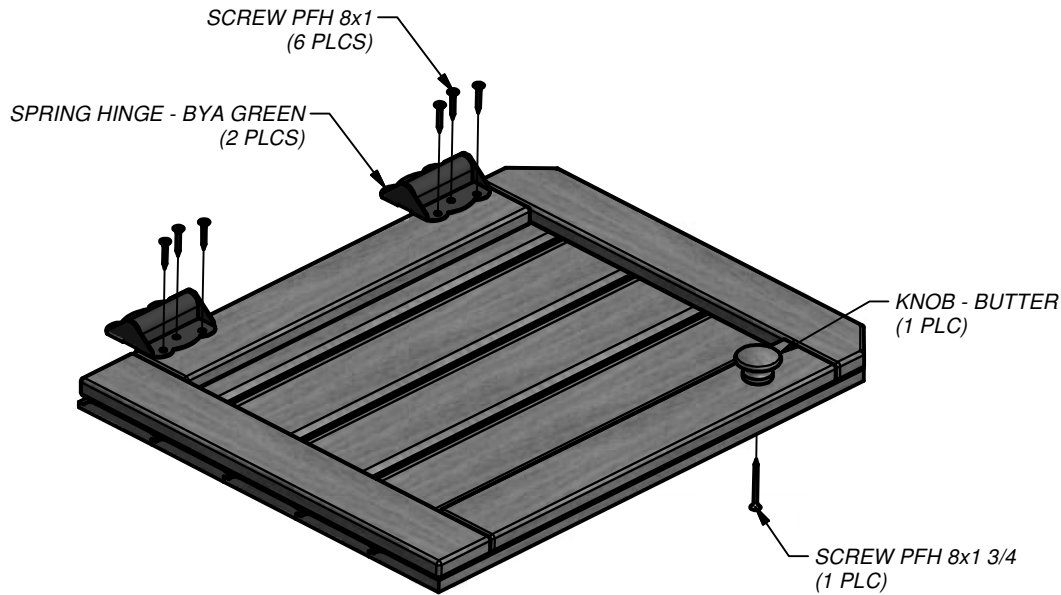

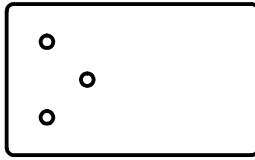

(1) **N8 - DOOR STOP - W4L07220**
5/8"x2 3/8"x3 7/8" (16x60x100)



STEP 46:

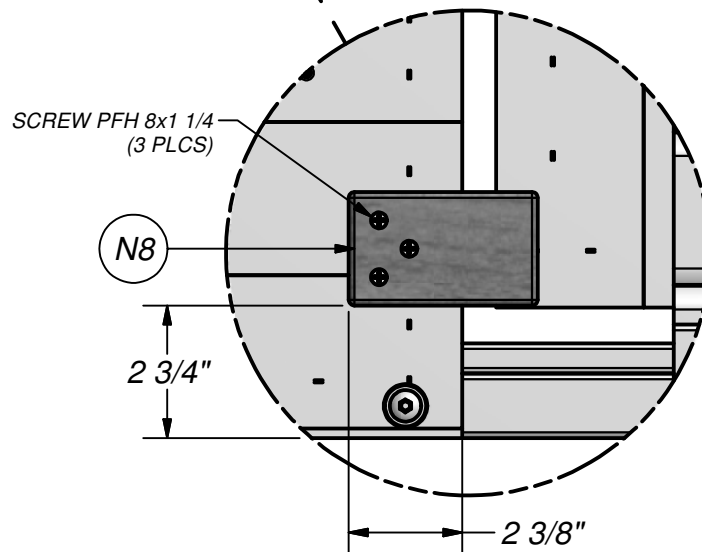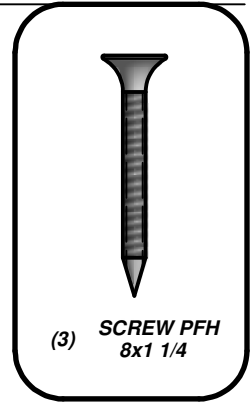



(1) *BYD ID TAG (MEDIUM) AGES 2 TO 10 - A4M00528*

STEP 47:

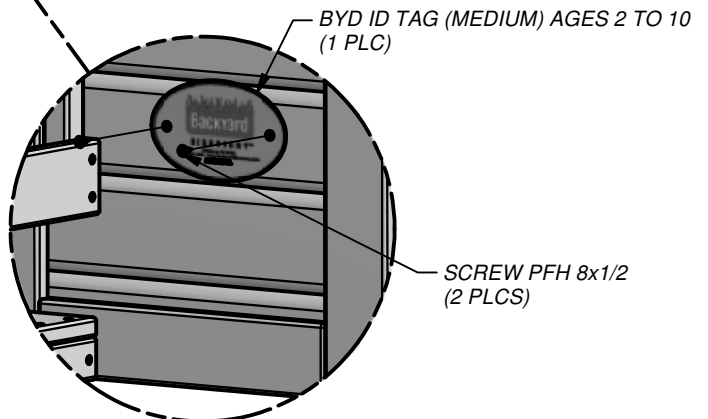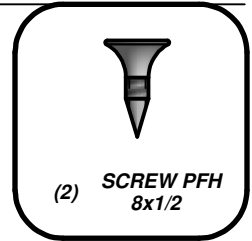




(1) **J3 - BENCH GROUND BOARD - W4L07222**
1"x2 3/8"x22 1/2" (24x60x573)



(1) **J4 - BENCH UPRIGHT - W4L07223**
1"x2 3/8"x12" (24x60x305)



(1) **J5 - BENCH UPRIGHT - W4L07224**
1"x2 3/8"x21 1/8" (24x60x538)



(1) **J6 - BENCH RAIL - W4L07225**
1"x2 3/8"x11 1/4" (24x60x285)






(1) **O6 - BENCH RAIL - W4L07226**
5/8"x1 3/8"x10 1/4" (16x34x259)



(1) **L BRACKET WHITE 32x51 - A100133**

STEP 48:

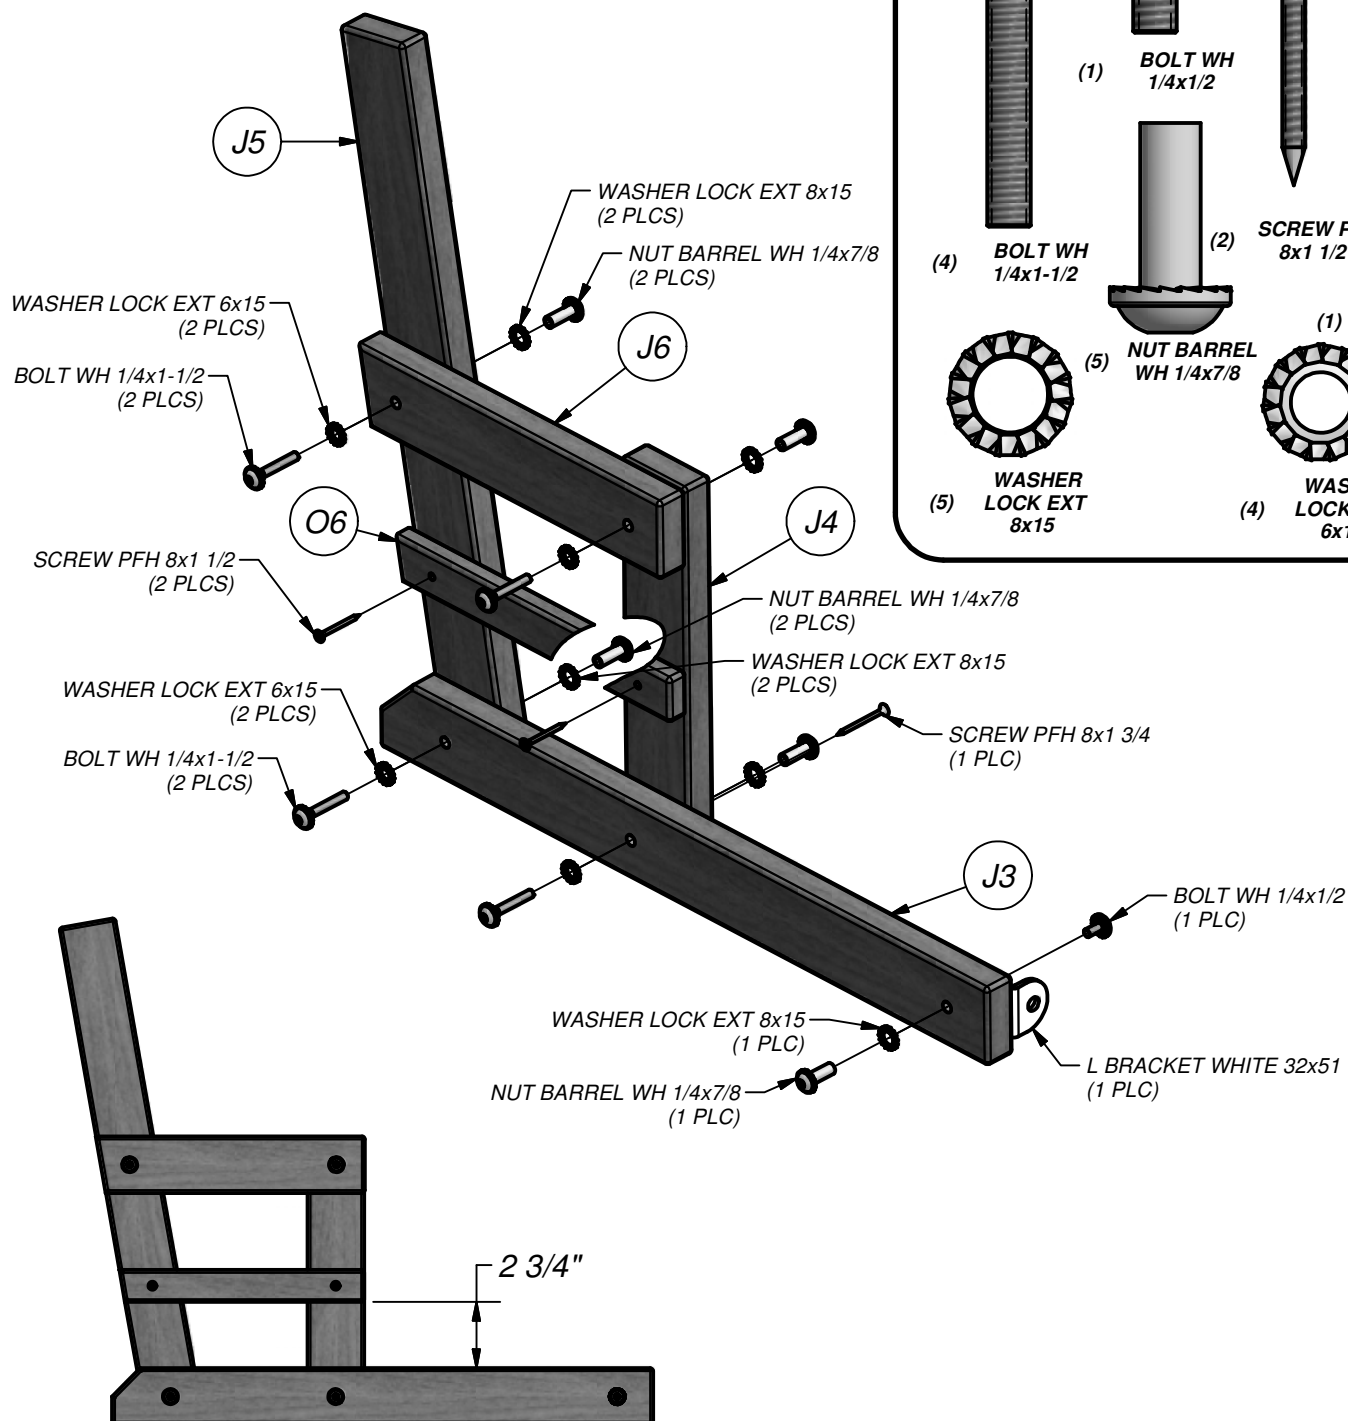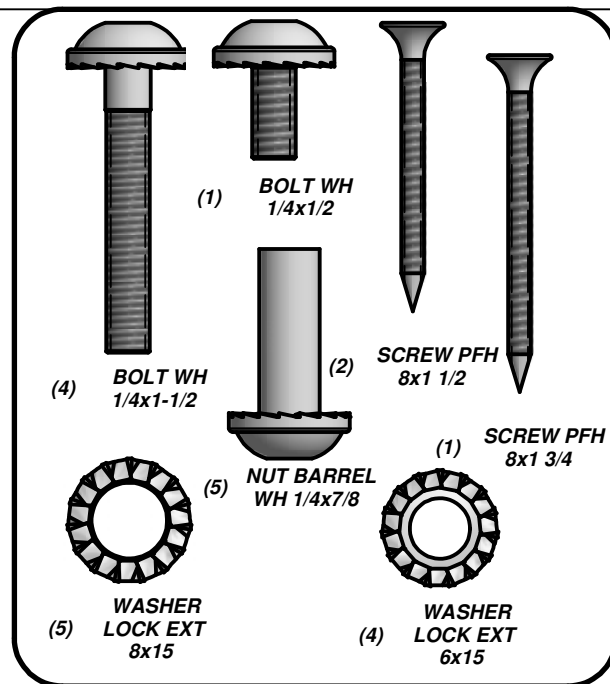



- (1) **O6 - BENCH RAIL - W4L07226**
5/8"x1 3/8"x10 1/4" (16x34x259)



- (1) L BRACKET WHITE 32x51 - A100133**

This diagram illustrates the assembly of a chair back. The main assembly is shown in an exploded view, with components labeled J3, J4, J5, J6, O6, and O7. A detailed inset in the top right corner shows the assembly sequence for the backrest frame, with parts numbered 1 through 5. The components and their quantities are as follows:

- WASHER LOCK EXT 6x15 (2 PLCS)**
- BOLT WH 1/4x1-1/2 (2 PLCS)**
- WASHER LOCK EXT 8x15 (2 PLCS)**
- NUT BARREL WH 1/4x7/8 (2 PLCS)**
- WASHER LOCK EXT 6x15 (2 PLCS)**
- BOLT WH 1/4x1-1/2 (2 PLCS)**
- SCREW PFH 8x1 1/2 (2 PLCS)**
- WASHER LOCK EXT 8x15 (2 PLCS)**
- NUT BARREL WH 1/4x7/8 (2 PLCS)**
- SCREW PFH 8x1 3/4 (1 PLC)**
- WASHER LOCK EXT 8x15 (1 PLC)**
- NUT BARREL WH 1/4x7/8 (1 PLC)**
- BOLT WH 1/4x1/2 (1 PLC)**
- L BRACKET WHITE 32x51 (1 PLC)**

The inset diagram shows the assembly sequence for the backrest frame, with parts numbered 1 through 5:



- SCREW PFH 8x1 3/4
- SCREW PFH 8x1 1/2
- NUT BARREL WH 1/4x7/8
- WASHER LOCK EXT 6x15
- WASHER LOCK EXT 8x15

A dimension of 2 3/4" is indicated for the height of the backrest frame.




(2) **M13 - BENCH SEAT - W4L07227**
5/8"x3 3/8"x30 1/8" (16x86x764)

STEP 50:

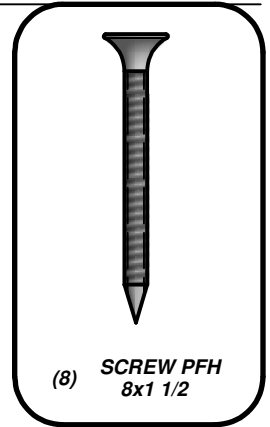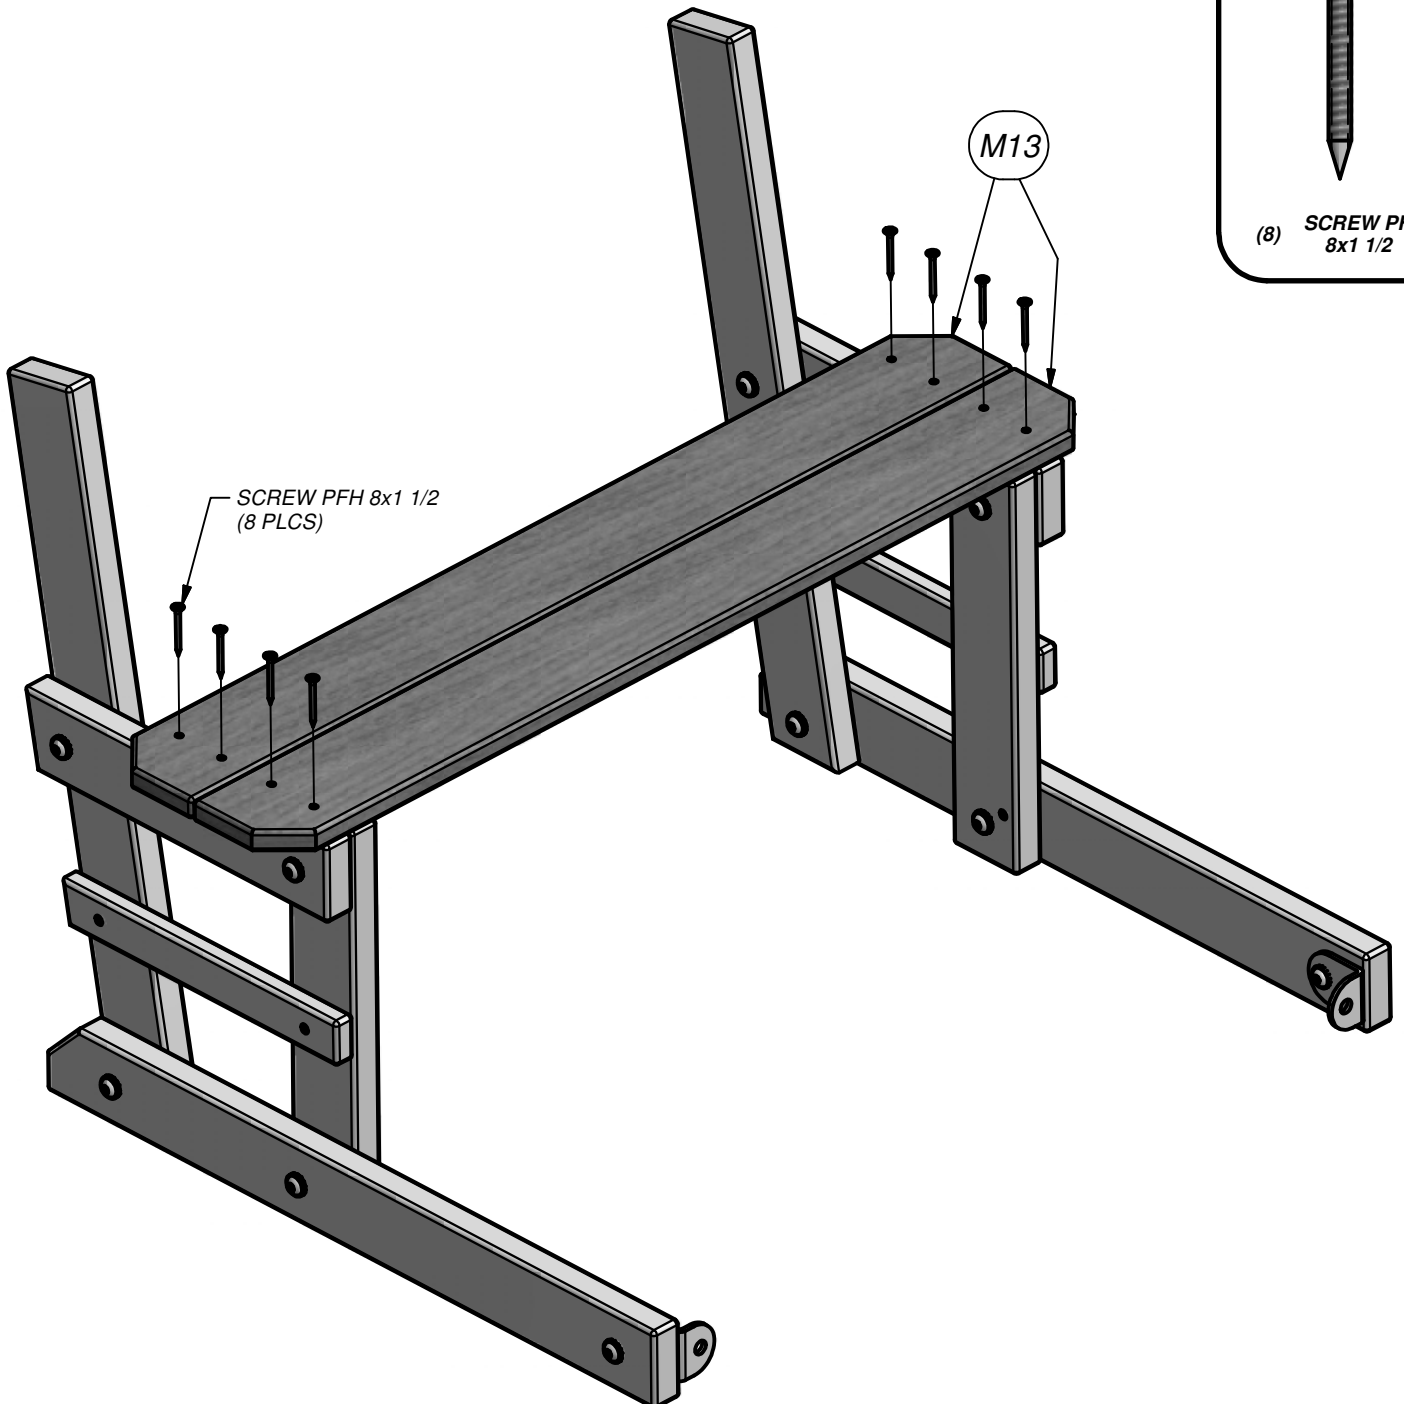

(8) **SCREW PFH**
8x1 1/2




(1) **M15 - BENCH BACK - W4L07229**
5/8"x3 3/8"x30 1/8" (16x86x764)




(1) **M14 - BENCH BACK - W4L07228**
5/8"x3 3/8"x30 1/8" (16x86x764)


STEP 51:

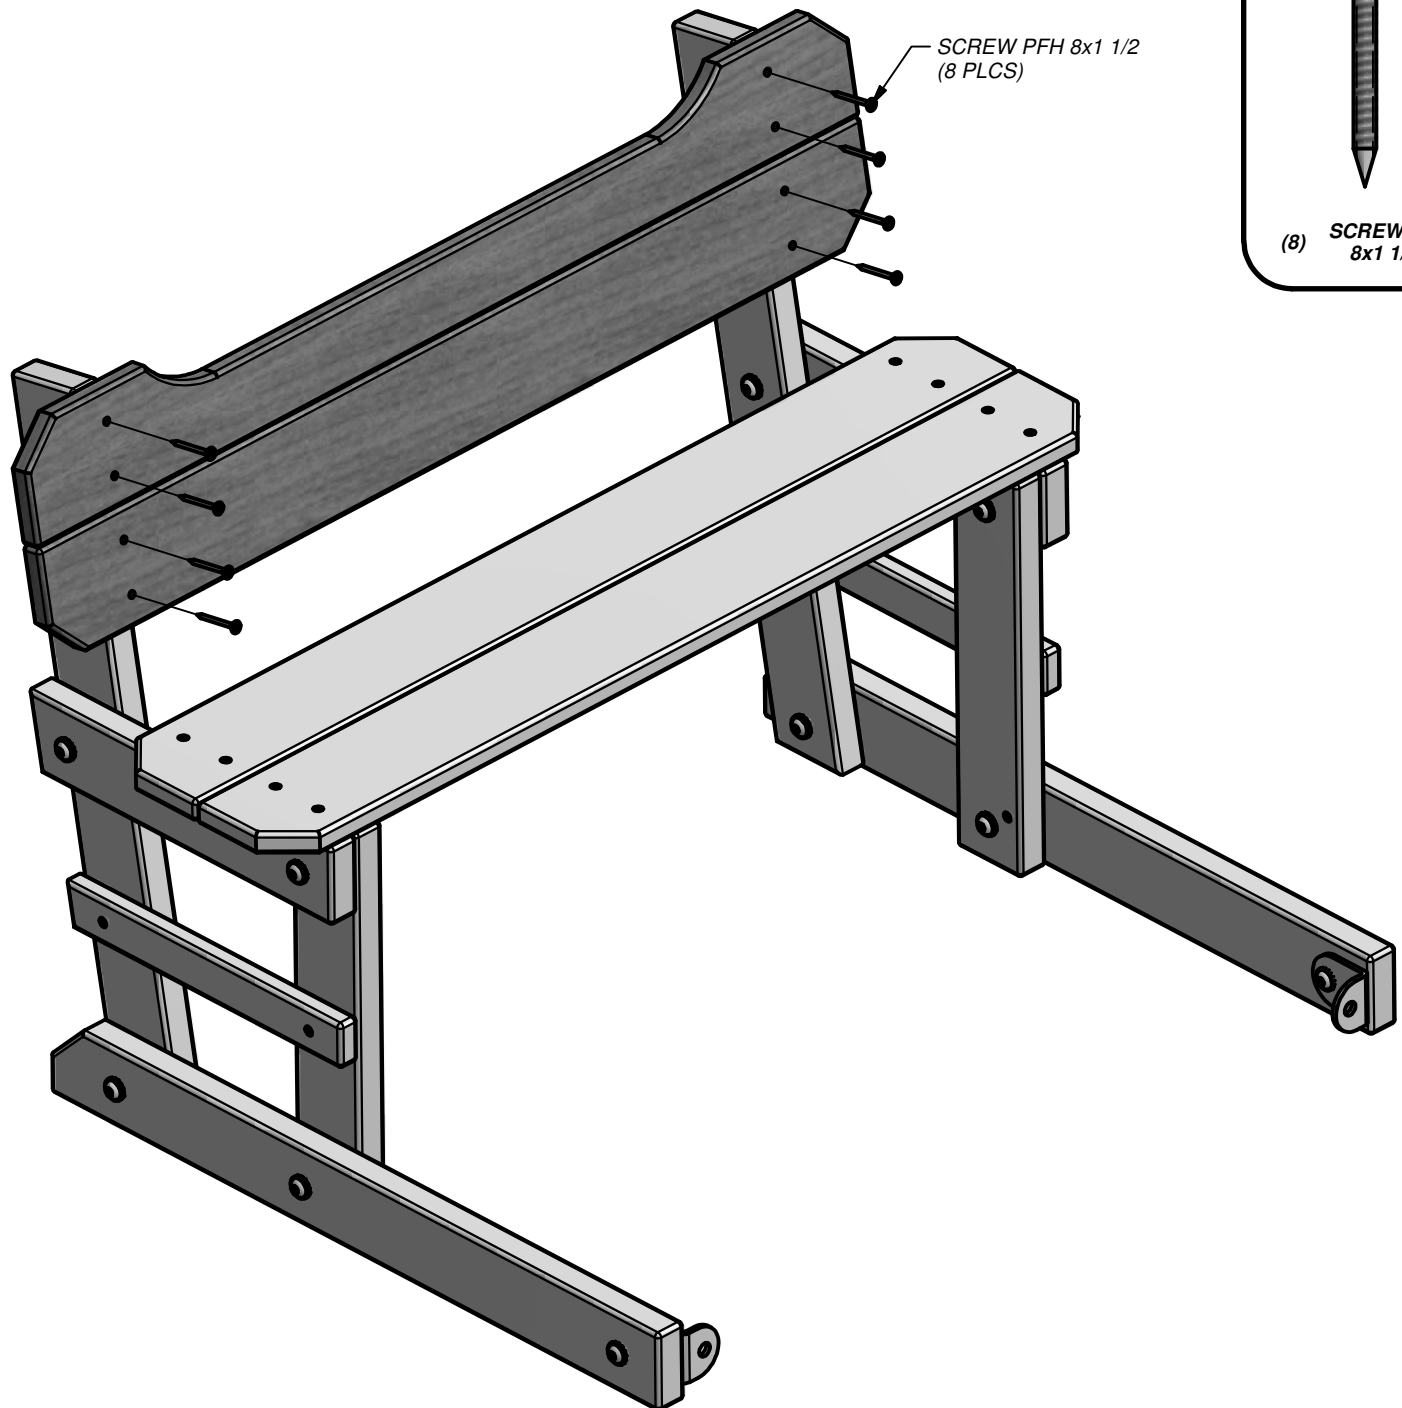

SCREW PFH 8x1 1/2
(8 PLCS)



(8) **SCREW PFH**
8x1 1/2

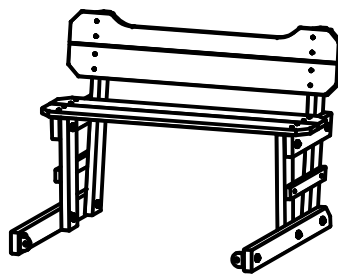

(1) BENCH ASSEMBLY

STEP 52:

