



Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

FUSION FLAME OUTDOOR KITCHEN

MODEL # : 2304079



WARNING

Cancer and Reproductive Harm
www.P65Warnings.ca.gov



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order replacement parts *Para obtener instrucciones en español, visite*
www.backyarddiscovery.com



EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP



Made in China

INS-2304079-A-FUSION FLAME OUTDOOR KITCHEN-ENG 2-13-2024


OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES

It is critically important that you start with square and level footings, concrete pad or deck to attach your structure


- Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step. Using incorrect hardware may result in improper assembly
- Remember to double check for underground utilities and overhead electrical lines

Post mounts are provided with your structure which allows you to permanently install your structure to a pre-existing or new wood or concrete surface. See Anchor Instructions for further details and recommendations.

- The hardware to attach the post mounts to the structure is included.
- The hardware to mount the structure permanently to a concrete surface is included.
- The hardware to mount the structure permanently to a wood deck is NOT included and will need to be purchased separately. You must ensure there is ample structural support under the deck before permanently attaching.

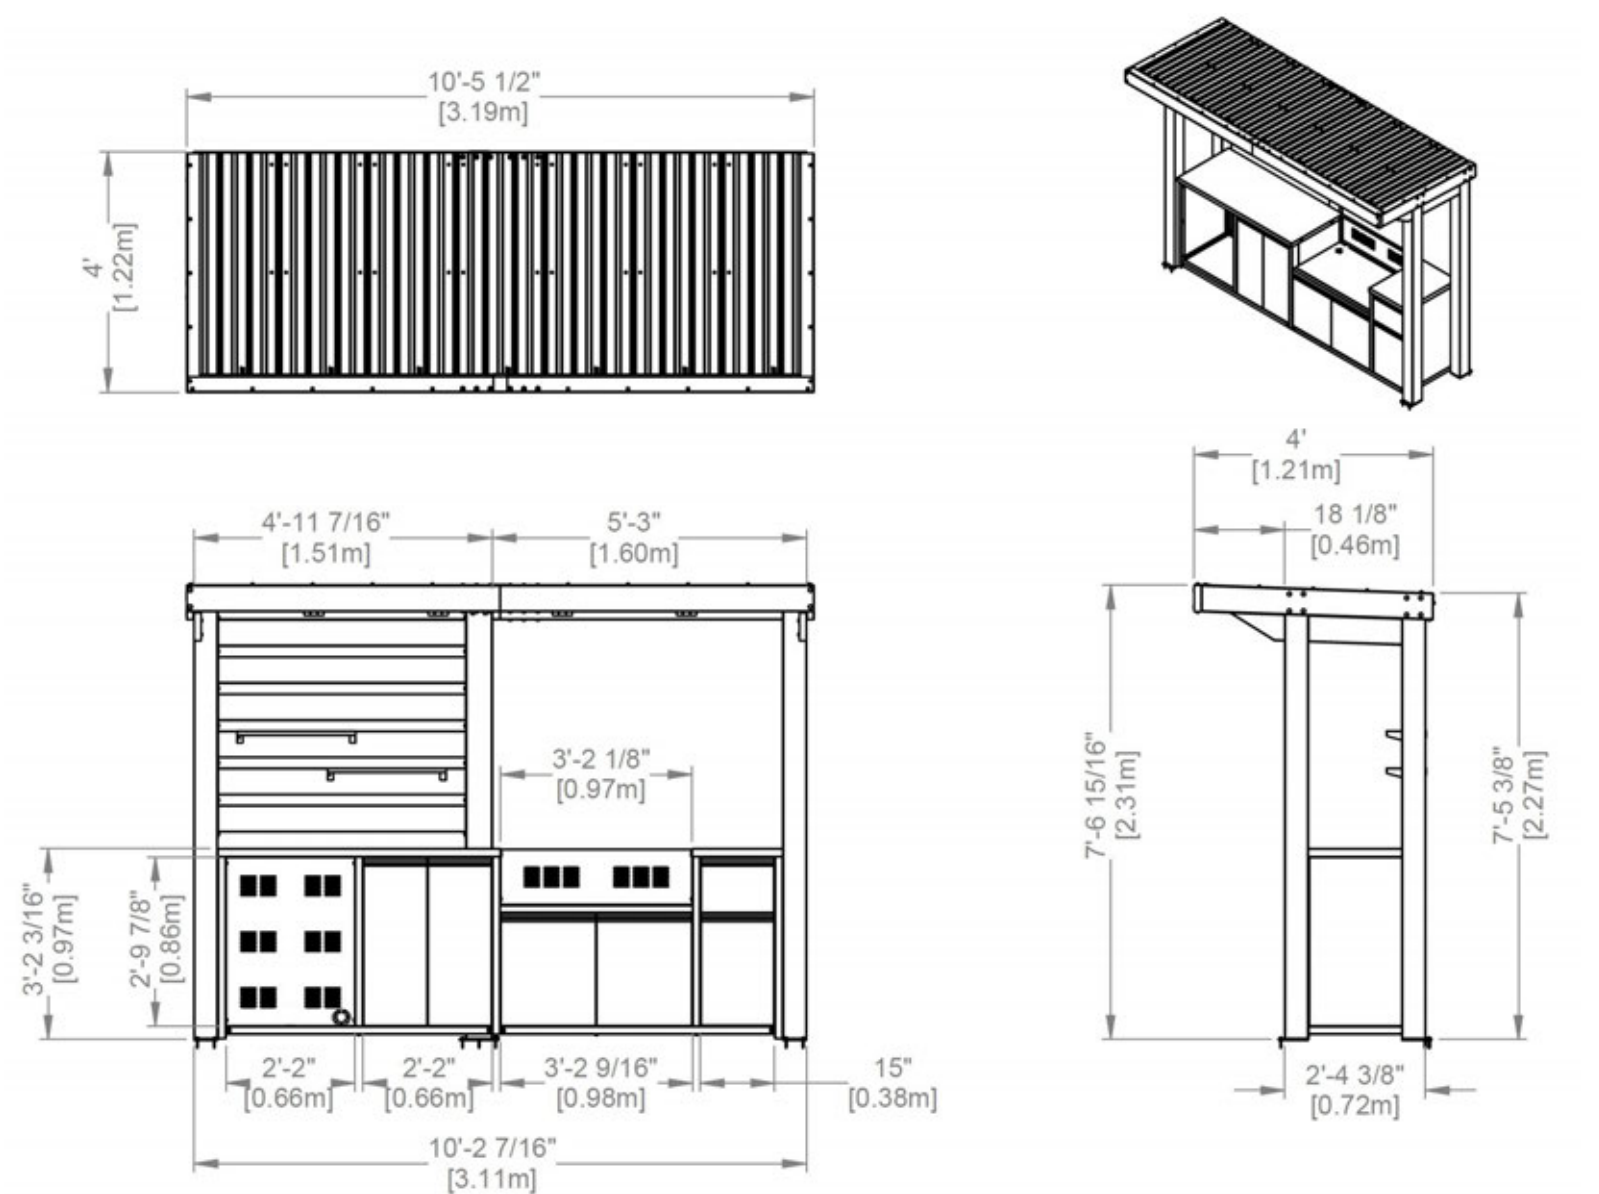


OWNER'S MANUAL - ANCHORING LAYOUT

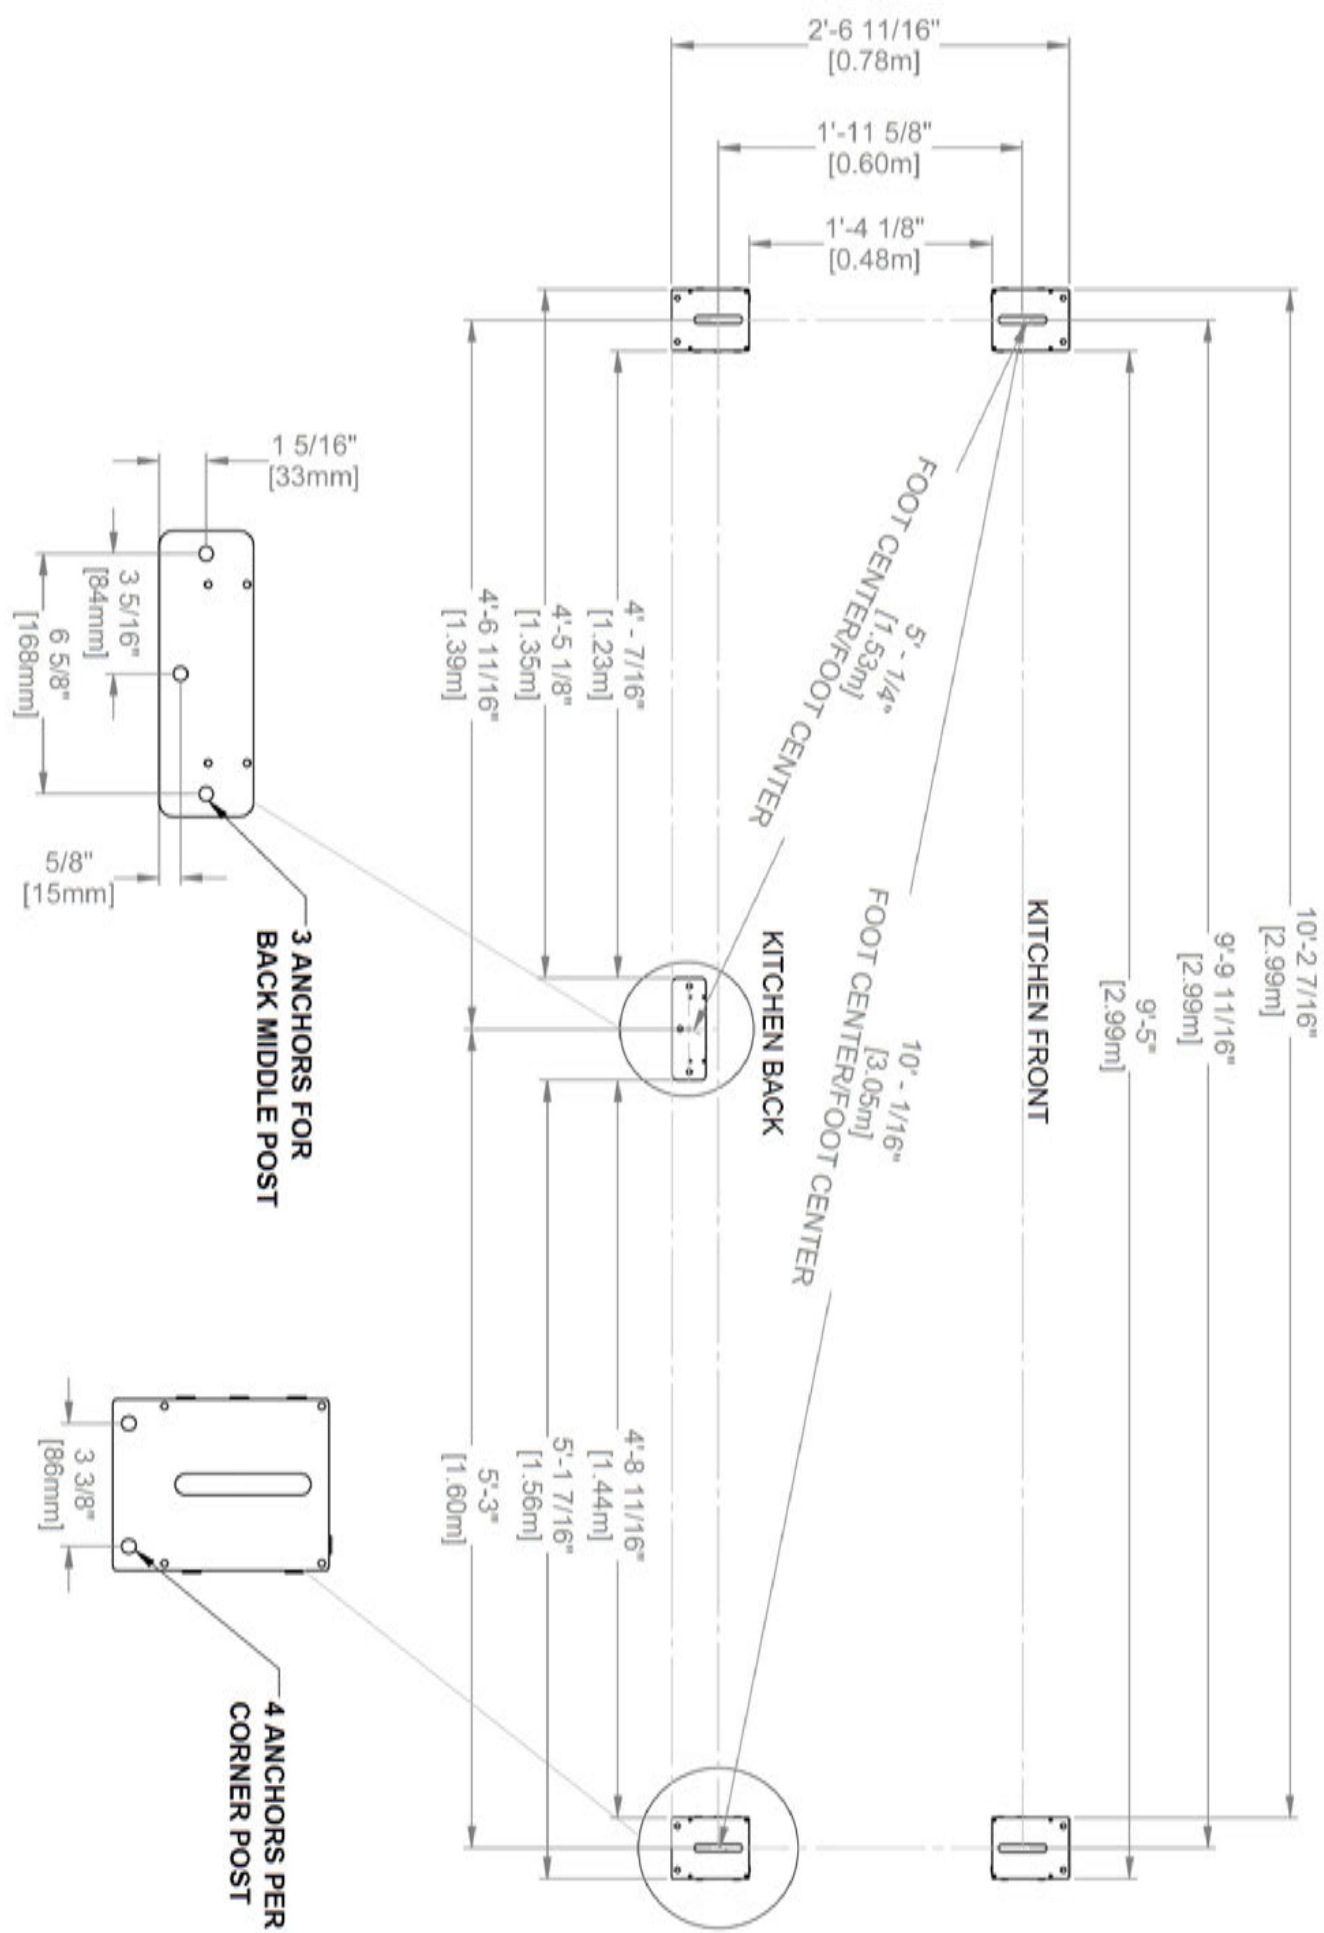


NOTE: DIMENSIONS ARE TO ANCHOR PLATES ON BOTTOM OF POST EXCEPT WHERE NOTED.

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

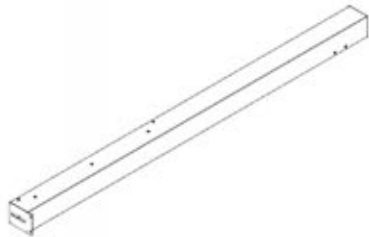


P01 FRONT POST - A4M02008
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)

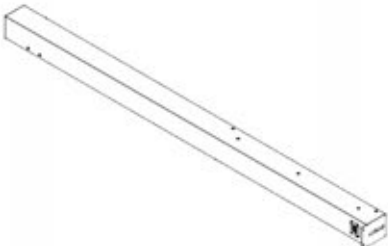

P02 FRONT POST - A4M02009
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)

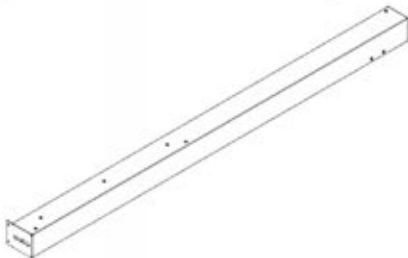


P04 BACK POST - A4M02011
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)

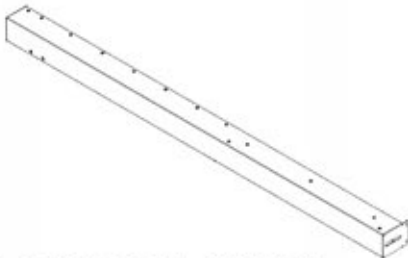


P03 BACK POST - A4M02010
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)




P05 BACK POST - A4M02015
(x1) 2 5/8"x7 7/8"x88 3/4" (66x200x2254)

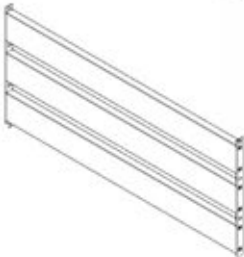


B10 BACK PANEL - A4M02043
(x2) 1 7/16"x22 11/16"x49 5/8" (36x576.5x1261)

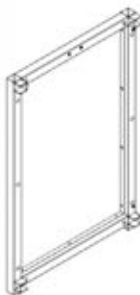

C01 CABINET PANEL - A4M02016
(x1) 2 3/4"x25"x38" (70x635x965)

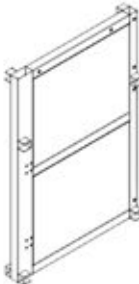

C02 CABINET PANEL - A4M02017
(x1) 3 15/16"x25"x37" (100x635x940)

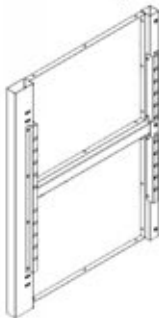

C05 CABINET PANEL - A4M02045
(x1) 2 3/16"x25"x33 7/8" (56x635x860)




C08 CABINET PANEL - A4M02048
(x1) 4 1/8"x25"x35 7/16" (105x635x900)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)




C06 CABINET PANEL - A4M02046
(x1) 2 15/16"x25"x38" (75x635x965)

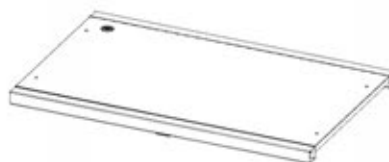


C09 CABINET TABLE FRAME - A4M02049
(x1) 2 3/8"x25"x38 7/16" (60x635x977)



BP01 BACK PANEL - A4M02051
(x1) 1 3/16"x14 13/16"x33 13/16" (30x377x859)

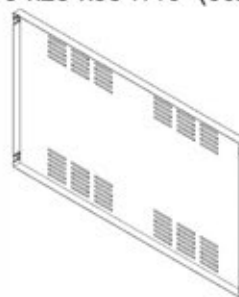

BP02 BACK PANEL - A4M02052
(x1) 1 3/16"x22 5/8"x38 7/16" (30x575x976)

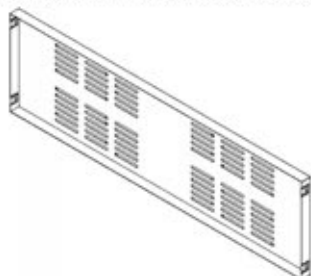

BP03 BACK PANEL - A4M02053
(x1) 1 3/16"x11 3/16"x38 3/8" (30x284x975)




BP04 BACK PANEL - A4M02054
(x1) 1 3/16"x25 13/16"x33 7/8" (30x656x860)



BP05 BACK PANEL - A4M02055
(x1) 1 3/16"x25 13/16"x33 13/16" (30x656x859)



A04 7 GALLON TRASH CAN HOLDER - A4M02074
(x1) 1 1/4"x12 9/16"x21 5/8" (32x319.5x550)

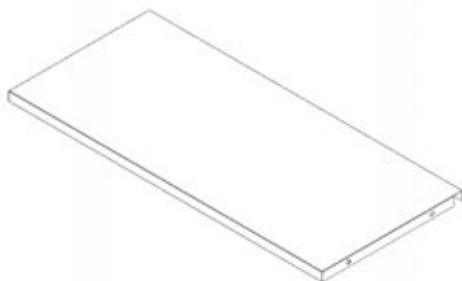


C10 COUNTERTOP - A4M02058
(x1) 1 5/8"x25 3/8"x56 5/8" (41x645x1438)



C11 COUNTERTOP - A4M02059
(x1) 1 5/8"x18 3/16"x25 3/8" (41x462x645)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)



B01 SIDE BEAM - A4M02012
(x1) 36x5 1/4"x46 1/2" (36x134x1181)




B02 BACK BEAM - A4M02013
(x1) 1 7/16"x4 13/16"x61 1/4" (36x122x1556)



B03 FRONT BEAM - A4M02014
(x1) 1 7/16"x5 1/4"x62 11/16" (36x134x1593)



B04 SIDE BEAM - A4M02019
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)




B05 SIDE BEAM - A4M02022
(x1) 1 7/16"x5 1/4"x46 1/2" (36x134x1181)



B06 BACK BEAM - A4M02024
(x1) 1 7/16"x4 13/16"x (36x122x1556)



B07 FRONT BEAM - A4M02027
(x1) 1 7/16"x5 1/4"x62 11/16" (36x134x1593)

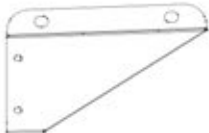

B08 CORBEL - A4M02041
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)



B09 CORBEL - A4M02042
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)



B11 SIDE BEAM - A4M02106
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)



J1 SPLICE BRACKET - A4M02183
(x1) 1 5/16"x5 3/16"x19 11/16" (33.2x131.2x500)



J2 SPLICE BRACKET - A4M02184
(x1) 1 5/16"x4 11/16"x19 11/16" (33.2x119.2x500)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)




D01 DOOR PANEL - A4M02064
(x1) 22x12 3/4"x33 5/8" (22x324x854)




D02 DOOR PANEL - A4M02066
(x1) 7/8"x12 3/4"x33 5/8" (22x324x854)




D03 DOOR PANEL - A4M02067
(x1) 7/8"x14 5/8"x22 7/16" (22x372x570)

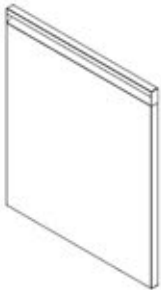


D04 DOOR PANEL - A4M02068
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)

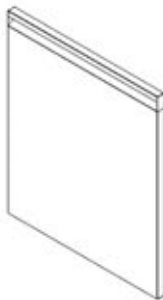


D05 DOOR PANEL - A4M02069
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)

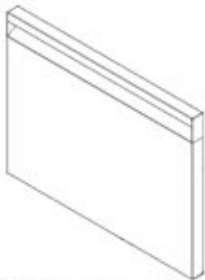


D06 DRAWER FACE - A4M02060
(x1) 7/8"x11 1/16"x14 5/8" (22x281x372)

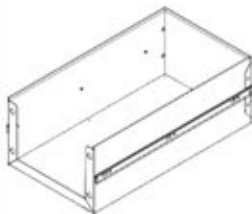


D07 8" DRAWER - A4M02075
(x1) 8 1/16"x12 9/16"x21 11/16" (204x319.5x551)

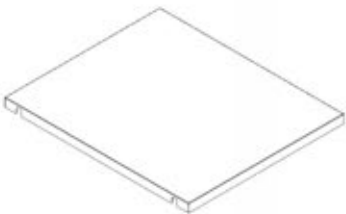

F03 FLOOR PANEL - A4M02202
(x2) 1 3/16"x21 3/4"x25 13/16" (30x553x655)

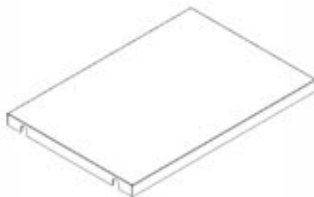


F11 FLOOR PANEL - A4M02209
(x1) 1 3/16"x14 13/16"x21 3/4" (30x376x553)

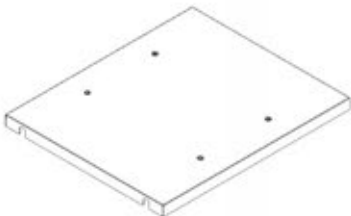


F12 FLOOR PANEL FOR PROPANE TANK - A4M02173
(x1) 1 3/16"x18 3/8"x21 3/4" (30x466.5x553)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)

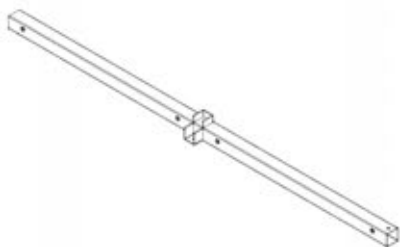


F01 BOTTOM PANEL RAIL - A4M02200
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)

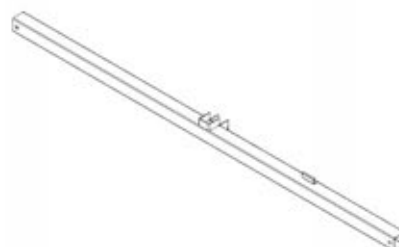

F02 BOTTOM PANEL RAIL - A4M02201
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)




F04 FLOOR TUBE - A4M02203
(x2) 1 9/16"x1 9/16"x21 7/8" (40x40x555)

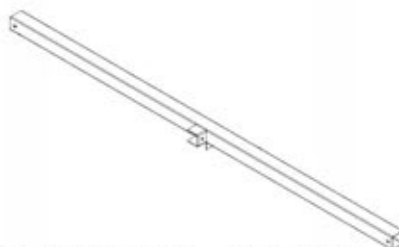


F05 TABLE RAIL - A4M02204
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)



F06 TABLE TUBE SUPPORT - A4M02205
(x1) 1 9/16"x1 9/16"x21 7/8" (40x40x555)

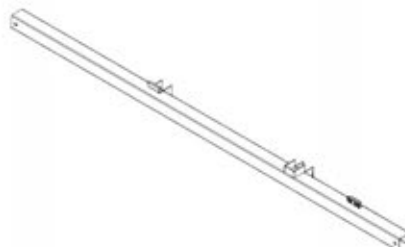


F07 BOTTOM PANEL RAIL - A4M02206
(x1) 2 3/8"x2 3/4"x54 15/16" (60x70x1395)

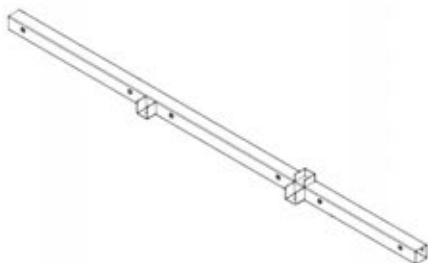

F08 BOTTOM PANEL RAIL - A4M02207
(x1) 2 3/8"x2 3/4"x54 15/16" (60x70x1395)




F09 BOTTOM FLOOR TUBE - A4M02210
(x1) 1 9/16"x2 3/8"x21 7/8" (40x60x555)

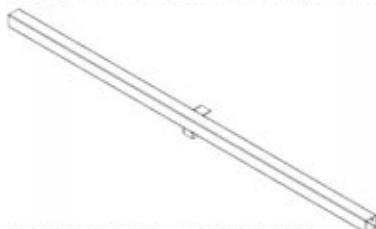

F13 TABLE RAIL - A4M02274
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)



R01 RAFTER - A4M02020
(x4) 3 1/8"x3 15/16"x45 1/16" (80x100x1144)

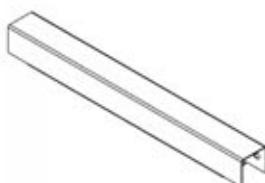

T01 TUBE - A4M02050
(x2) 1 9/16"x1 9/16"x14 7/8" (40x40x378)



T02 UPRIGHT TUBE - A4M02104
(x1) 1 9/16"x1 9/16"x22 11/16" (40x40x576)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)



E01 PURLIN - A4M02021
(x2) 1 9/16"x1 3/4"x48 13/16" (40x45x1239.75)



E02 PURLIN - A4M02023
(x2) 1 9/16"x1 3/4"x73 5/8" (40x45x1870.75)



E03 PURLIN - A4M02025
(x1) 1 9/16"x1 3/4"x49 5/8" (40x45x1260)



E04 PURLIN - A4M02026
(x1) 1 9/16"x1 3/4"x58 1/16" (40x45x1475)



A4M02107 DRIP EDGE
(x1)



A4M02272 DRIP EDGE
(x1)



A4M02029 DRIP EDGE
(x2)



A4M02186 DRIP EDGE
(x1)



A4M02187 DRIP EDGE
(x1)



A4M02273 DRIP EDGE SPLICE
(x1)



A4M02108 DRIP EDGE SPLICE
(x1)



A4M02007 29GA STEEL SHEETING
(x5)




A4M02079 29GA STEEL SHEETING LEFT
(x1)



A4M02080 29GA STEEL SHEETING RIGHT
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


METAL COMPONENTS (NOT TO SCALE)

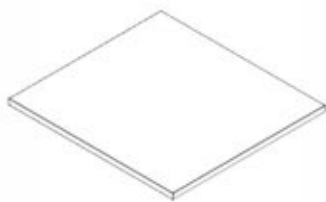


S01 CABINET SHELF - A4M02057
(x2) 13/16"x22 11/16"x24 1/2" (21x577x622)



A11 SHELF - A4M02105
(x1) 13/16"x18 3/8"x21 1/2" (21x467x546)

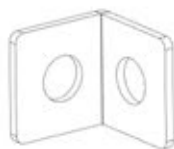

A02 BRACKET - A4M02056
(x3) 1 7/16"x1 7/16"x1 7/16" (36x36x36)

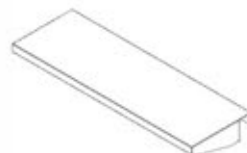

A03 BACK SHELF - A4M02072
(x2) 2 7/16"x7 15/16"x23 3/4" (61x201x603)



A12 PROPANE TANK HOLDER - A4M02028
(x1) 1 5/8"x11 13/16"x14 9/16" (41x300x370)



A06 ADJUSTABLE SHELF TAB - A4M02077
(x8) 11/16"x7/8"x1 3/16" (17x22x31)



A01 BRACKET - A4M02018
(x6) 1"x1 5/16"x5 1/16" (25x33.2x128)



F10 FLOOR PANEL - A4M02208
(x1) 1 3/16"x18 3/8"x21 3/4" (30x467x553)




A10 ANGLE BRACKET - A4M02276
(x1) 13/16"x5 15/16"x9 13/16" (20x151x250)



A07 ANGLE BRACKET - A4M02277
(x1) 13/16"x5 15/16"x9 13/16" (20x151x250)



A05 HOSE CLAMP - A4M02258
(x1) 1 3/16"x1 9/16"x 3 1/8" (30x40x80)

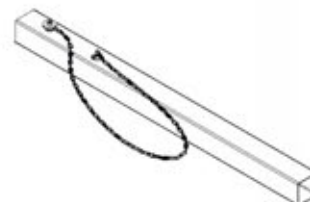

T03 UPRIGHT TUBE WITH MATCH HOLDER - A4M02404
(x1) 1 9/16"x1 9/16"x22 11/16" (40x40x576)

OWNER'S MANUAL - PARTS IDENTIFICATION

METAL COMPONENTS (NOT TO SCALE)



A4M02070 CABINET HINGE
(x8)



A6P00530 2-WAY SQUARE PLUG
(x2)



A6P00559 ADJUSTABLE FOOT
(x2)




A4M02078 WOOD GRAIN
HOLE COVER
(x28)




A4M01352 HOLE COVER
(x14)




A6P00679 ADHESIVE
EVA TAPE
(x8)

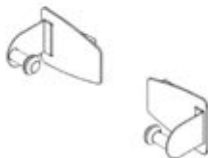

A4M02290 MAGNETIC PAPER
TOWEL HOLDER
(x1)

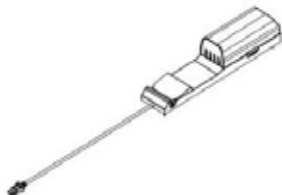

9205413 ELECTRICAL
ENCLOSURE
(x1)

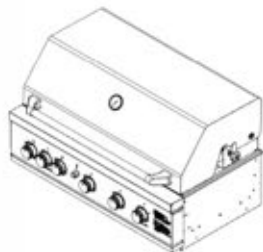


9230118 OUTDOOR KITCHEN
GRILL KIT
(x1)




9230132 OUTDOOR KITCHEN
FRIDGE
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION

HARDWARE COMPONENTS (NOT TO SCALE)

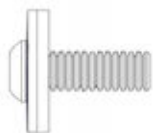

H101202 TORX PAN HEAD
(x188) 1/4-20x3/4" ASSY




H101132 TORX SOCKET SCREW SHORT
(x32) 1/4-20



H101103 TORX SOCKET SCREW
(x52) 1/4-20



H100120 CONCRETE
(x11) ANCHOR



H100401 BOLT WH
(x4) 1/4x1/2 BLK



H101185 PHILLIPS FLAT HEAD
(x48) 8-32x1/2



H100147 TORX BIT
(x1) T-30



H100114 TORX WRENCH
(x1) T-30



H101133 WASHER FLAT
(x4) 7x14 BLK




H100630 WASHER FLAT
(x11) 8x19 BLK




H101116 SCREW SELF TAPPING
(x20) 1/4x1 BLK



H101117 SCREW WOODGRIP
(x42) 10x3/4 BLK



H100653 NUT LOCK
(x4) 1/4 BLK



H101114 RIGHT ANGLE
(x1) DRILL ADAPTER



H101100 MAGNETIC DRIVER
(x1)



H101106 SOCKET DRIVER
(x1)


PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the parts and hardware.

METAL PARTS:


- Organize metal parts by the three-digit, alpha-numeric number stamped on each part (ex. P01).
- If there are multiple parts with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the parts or on the end of the parts.
- Allow yourself plenty of room - the parts can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY PART NUMBER.

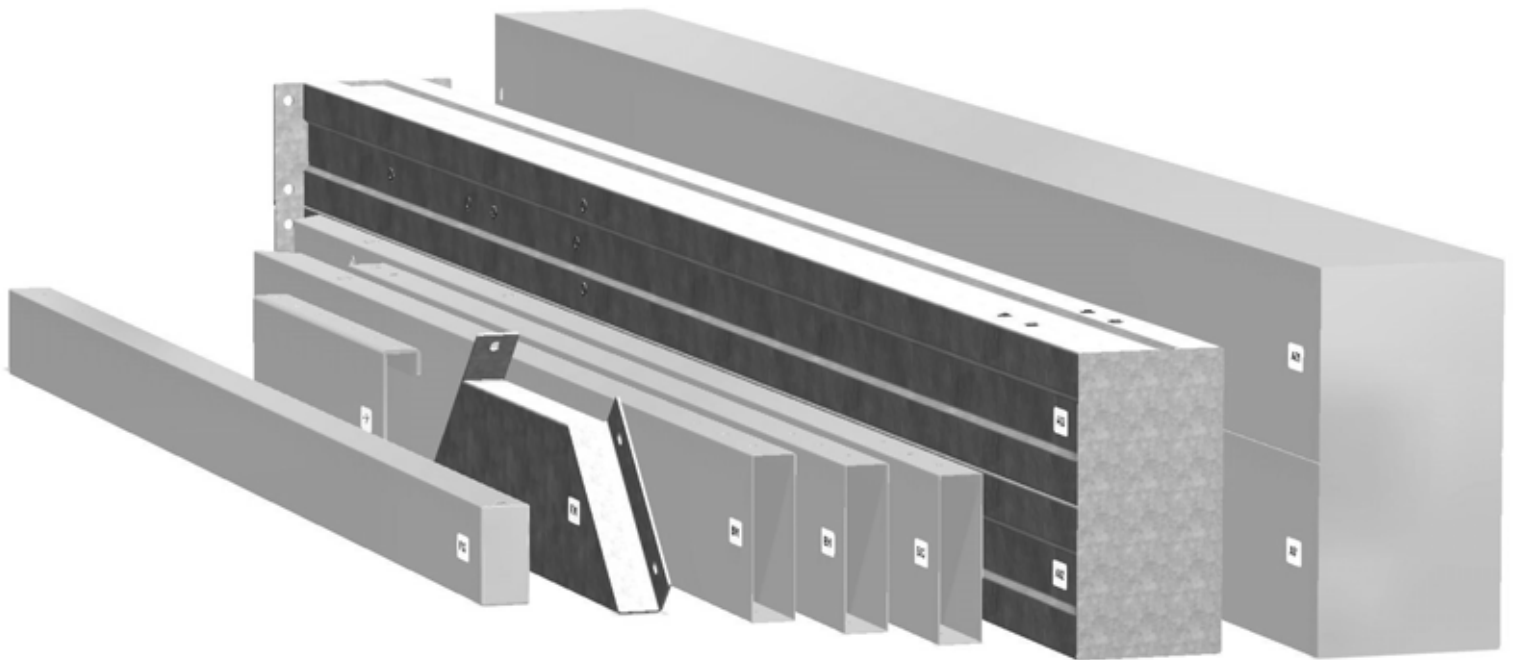

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

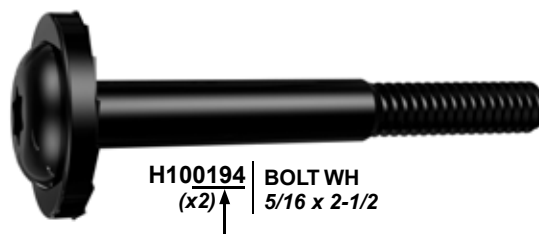

PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or
Electric Drill



Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" &
7/16" Drill Bits



Phillips Screw Driver



Open End Wrench
7/16"




3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets 1/2" & 7/16"
Deep Sockets




Claw Hammer



Rubber Mallet -
Optional

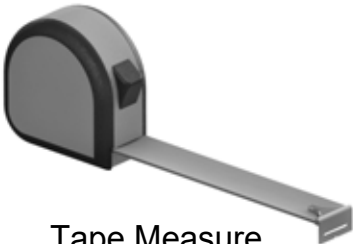

Tape Measure

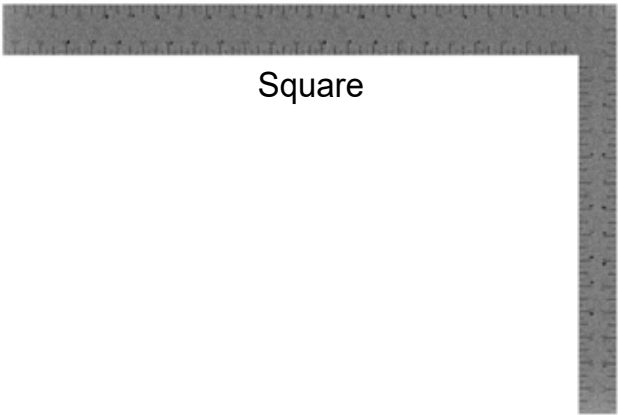

Square




Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.


1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)

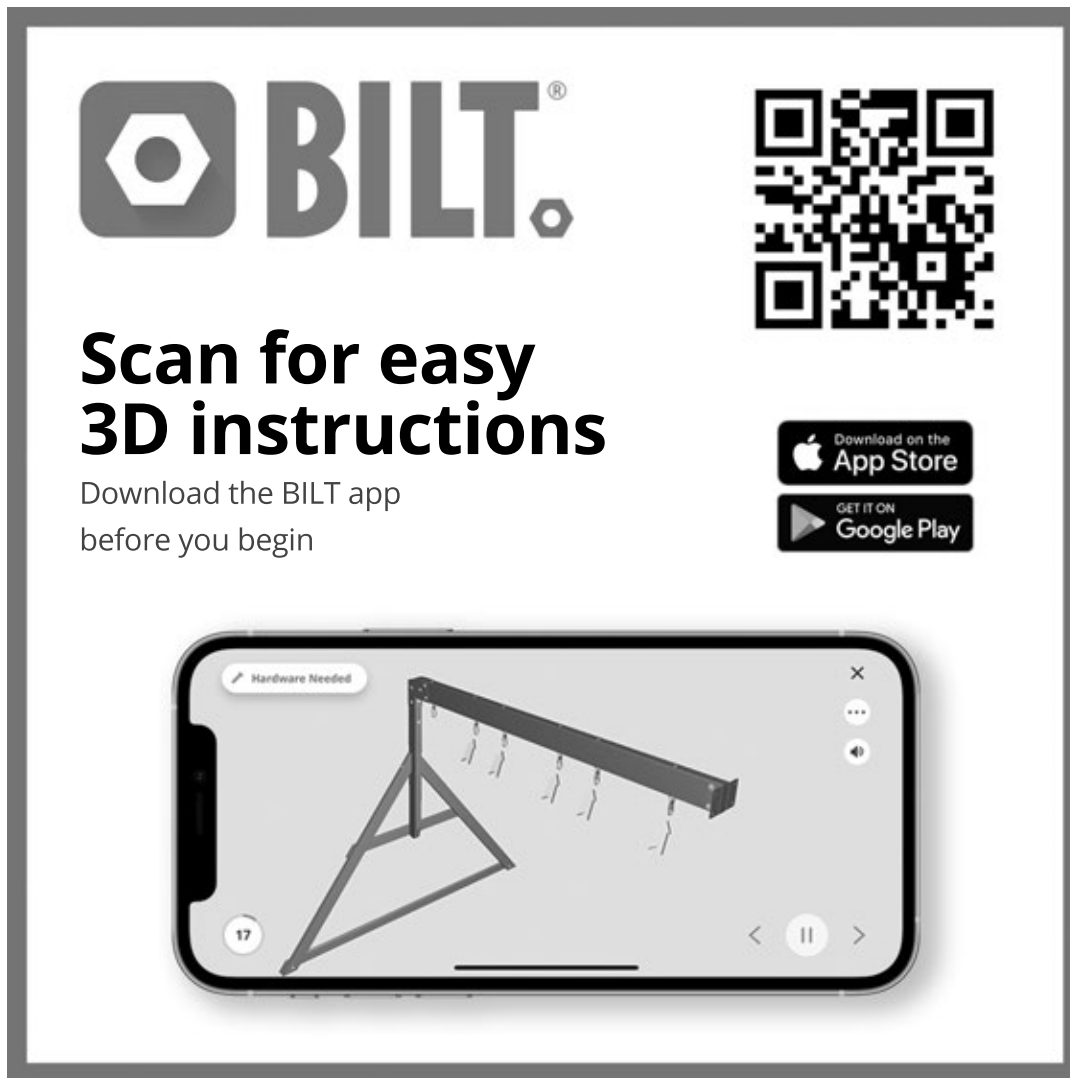



The graphic is a promotional banner for the BILT app. It features the BILT logo at the top left, which consists of a hexagonal icon with a white dot inside, followed by the word "BILT." in a bold, sans-serif font. To the right of the logo is a square QR code. Below the logo, the text "Scan for easy 3D instructions" is written in a large, bold, black font. Underneath this, in a smaller font, it says "Download the BILT app before you begin". To the right of the text are two buttons: "Download on the App Store" with the Apple logo and "GET IT ON Google Play" with the Google Play logo. At the bottom of the graphic is a smartphone displaying the BILT app interface. The screen shows a 3D model of a metal frame structure. In the top left corner of the app screen, there is a button labeled "Hardware Needed". In the bottom left corner, there is a circular icon with the number "17". In the bottom right corner, there are navigation icons: a back arrow, a pause button, and a forward arrow.

STEP 1 - FLOOR PANEL ASSEMBLY

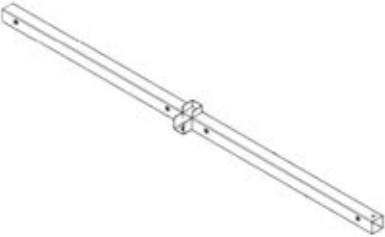QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


- 

F01 BOTTOM PANEL RAIL - A4M02200 (x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)
- 

F02 BOTTOM PANEL RAIL - A4M02201 (x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)
- 


F04 FLOOR TUBE - A4M02203 (x1) 1 9/16"x1 9/16"x21 7/8" (40x40x555)

FOR EASE OF ASSEMBLY, WE RECOMMEND USING SAW HORSES FOR STEPS 1-6


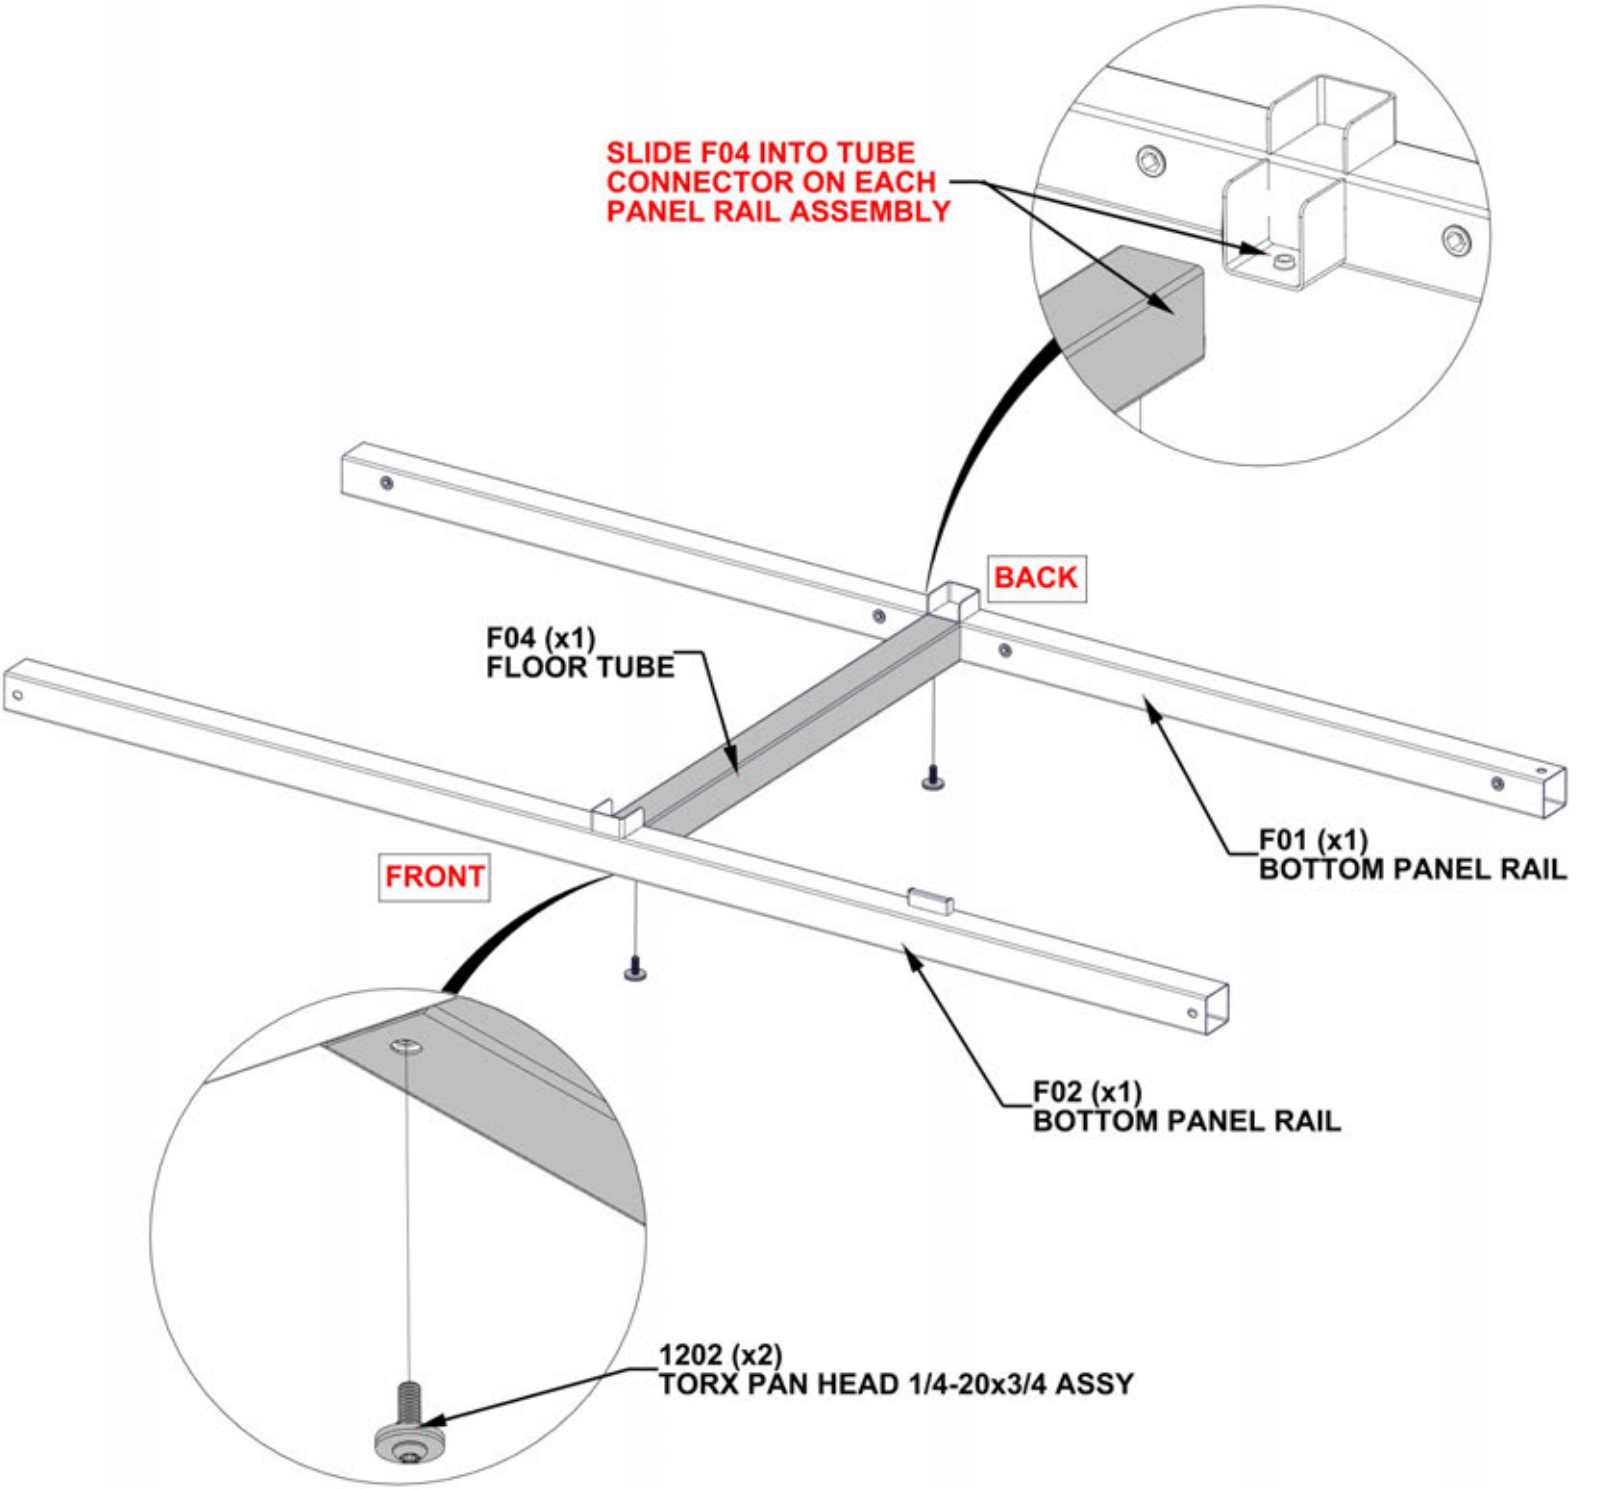


STEP 2 - FLOOR PANEL ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

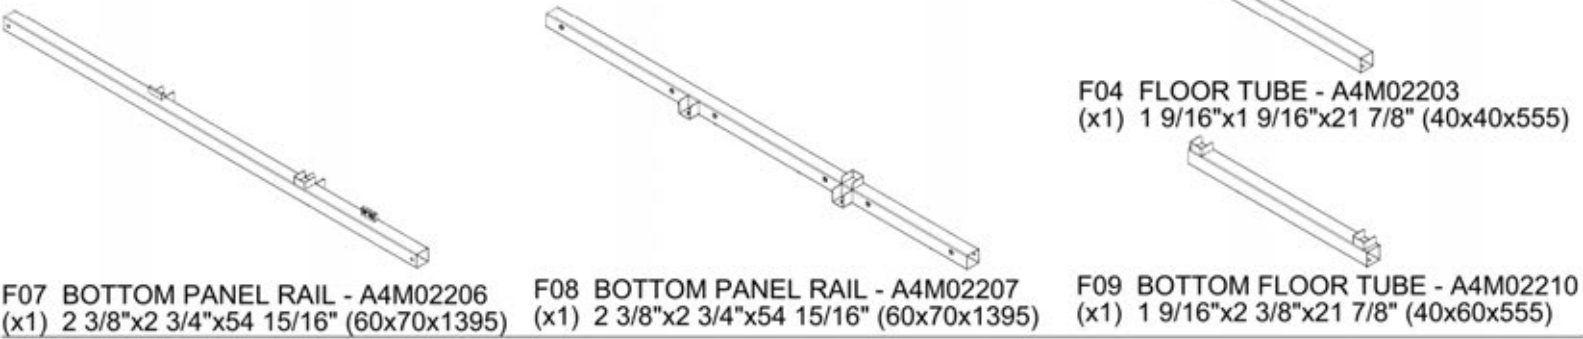

SLIDE F04 AND F09 INTO TUBE CONNECTORS ON EACH PANEL RAIL ASSEMBLY

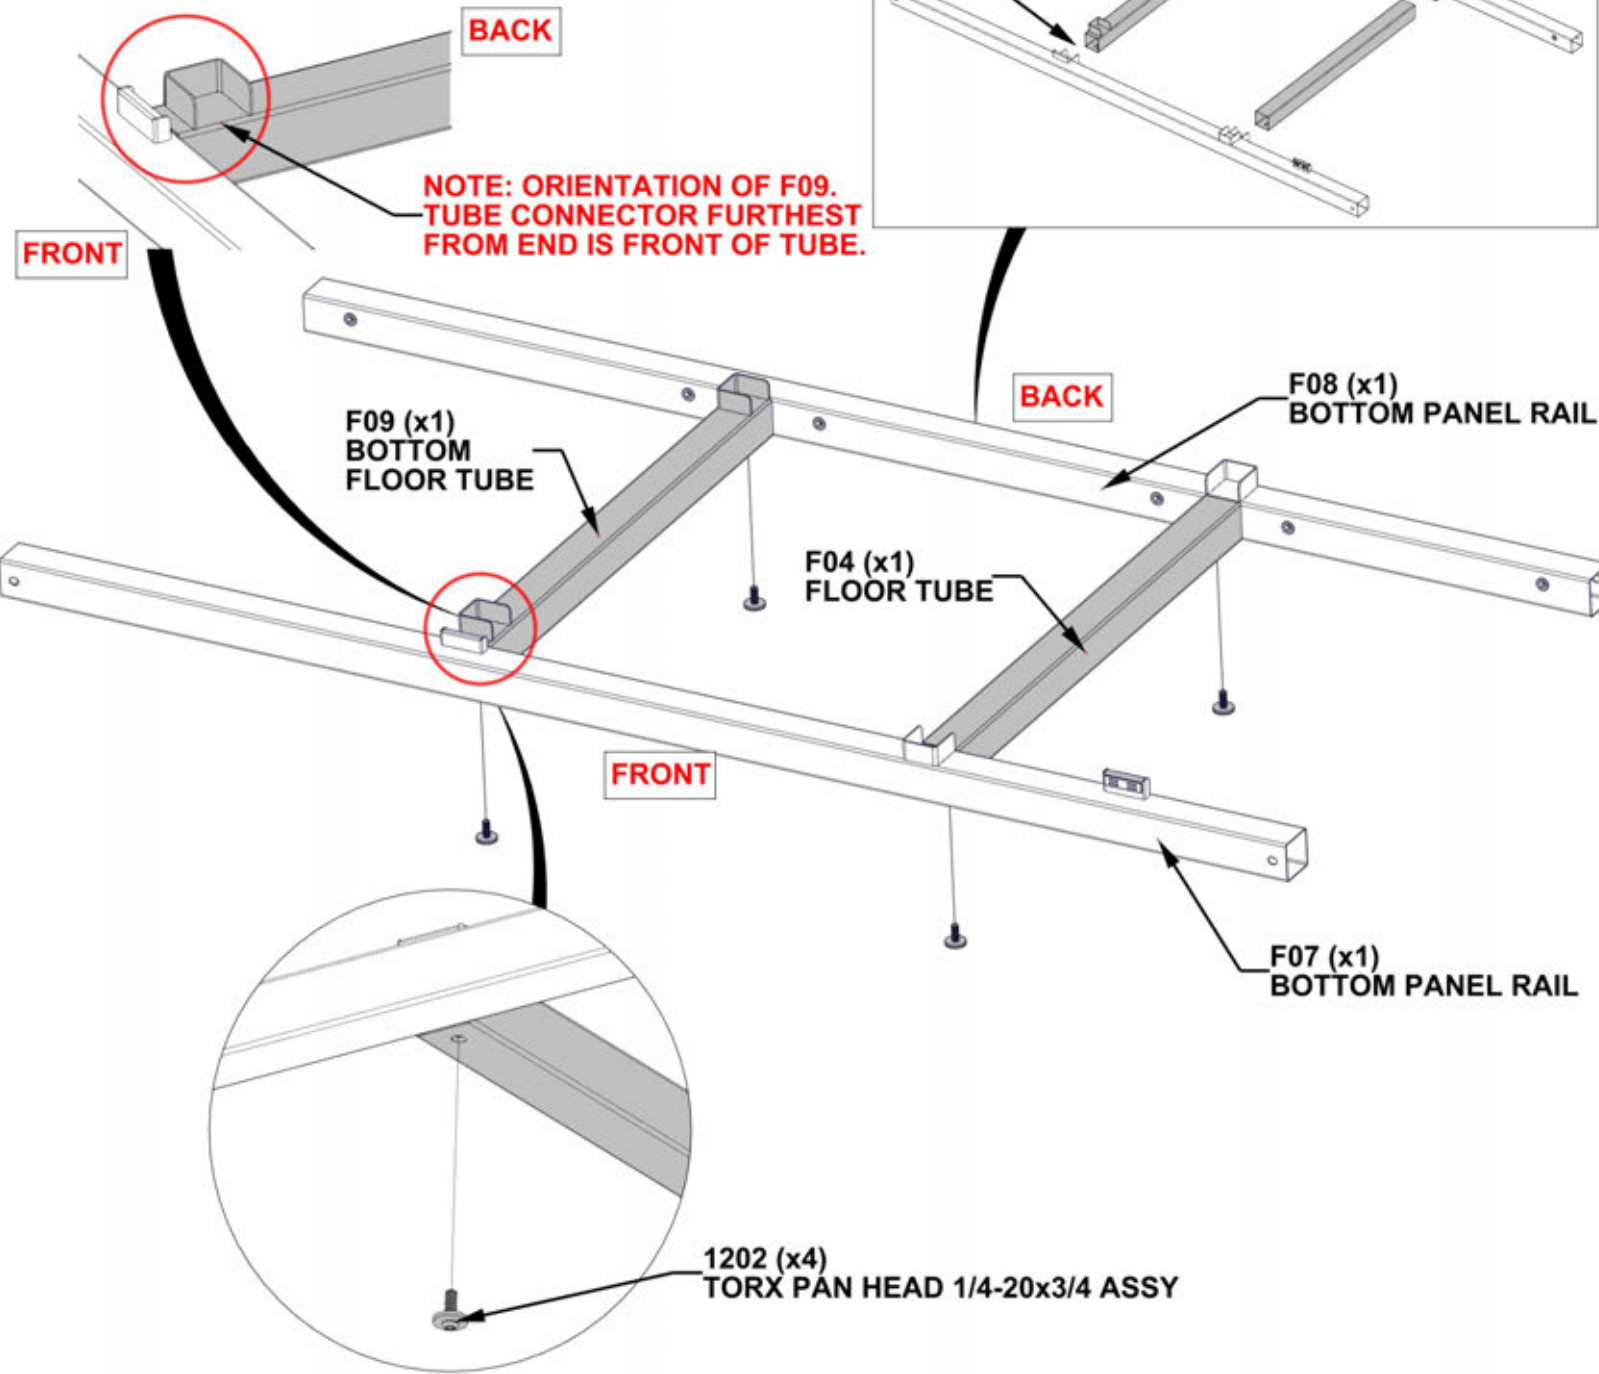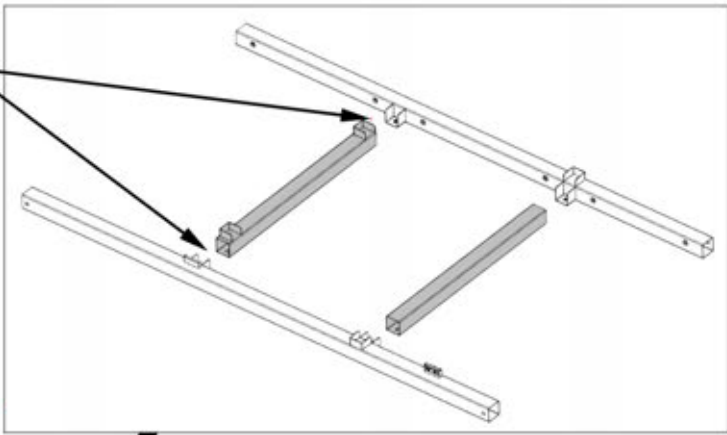


STEP 3 - COUNTERTOP FRAME ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



F13 TABLE RAIL - A4M02274
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)

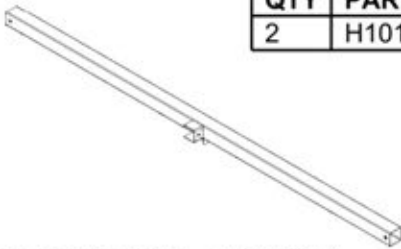


F05 TABLE RAIL - A4M02204
(x1) 2 3/8"x2 3/4"x53 5/16" (60x70x1354)




F06 TABLE TUBE SUPPORT - A4M02205
(x1) 1 9/16"x1 9/16"x21 7/8" (40x40x555)

ORIENTATION OF F06 SUPPORT IS CRITICAL TO ASSEMBLY.
SET FRAME ASSEMBLY TO THE SIDE FOR LATER USE.

**SLIDE F06 INTO TUBE
CONNECTOR ON EACH
TABLE RAIL ASSEMBLY**

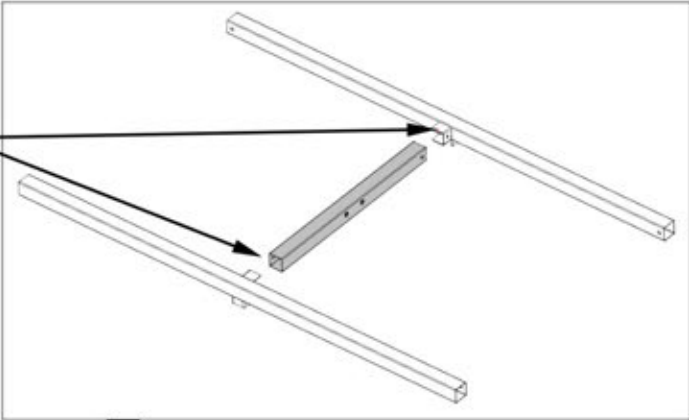

**NOTE: THREADED INSERTS
CLOSEST TO TOP
EDGE OF TUBE**

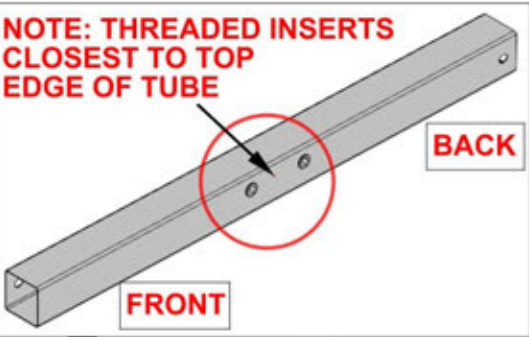

BACK

FRONT

**F06 (x1)
TABLE TUBE
SUPPORT**

BACK


**F05 (x1)
TABLE RAIL**

FRONT

**F13 (x1)
TABLE RAIL**

**NOTE: MAGNET DOOR
STOP ON F13 TABLE RAIL**

**1202 (x2)
TORX PAN HEAD 1/4-20x3/4 ASSY**

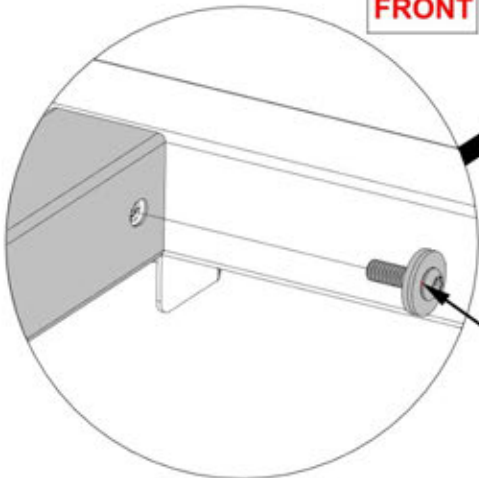



STEP 4 - CABINET PANEL ASSEMBLY



C02 CABINET PANEL - A4M02017
(x1) 3 15/16"x25"x37" (100x635x940)




A6P00559 ADJUSTABLE FOOT
(x2)

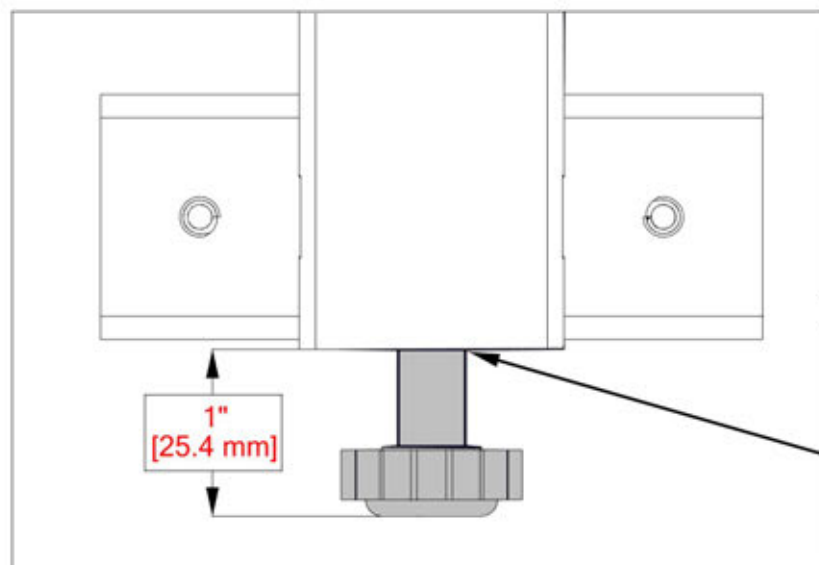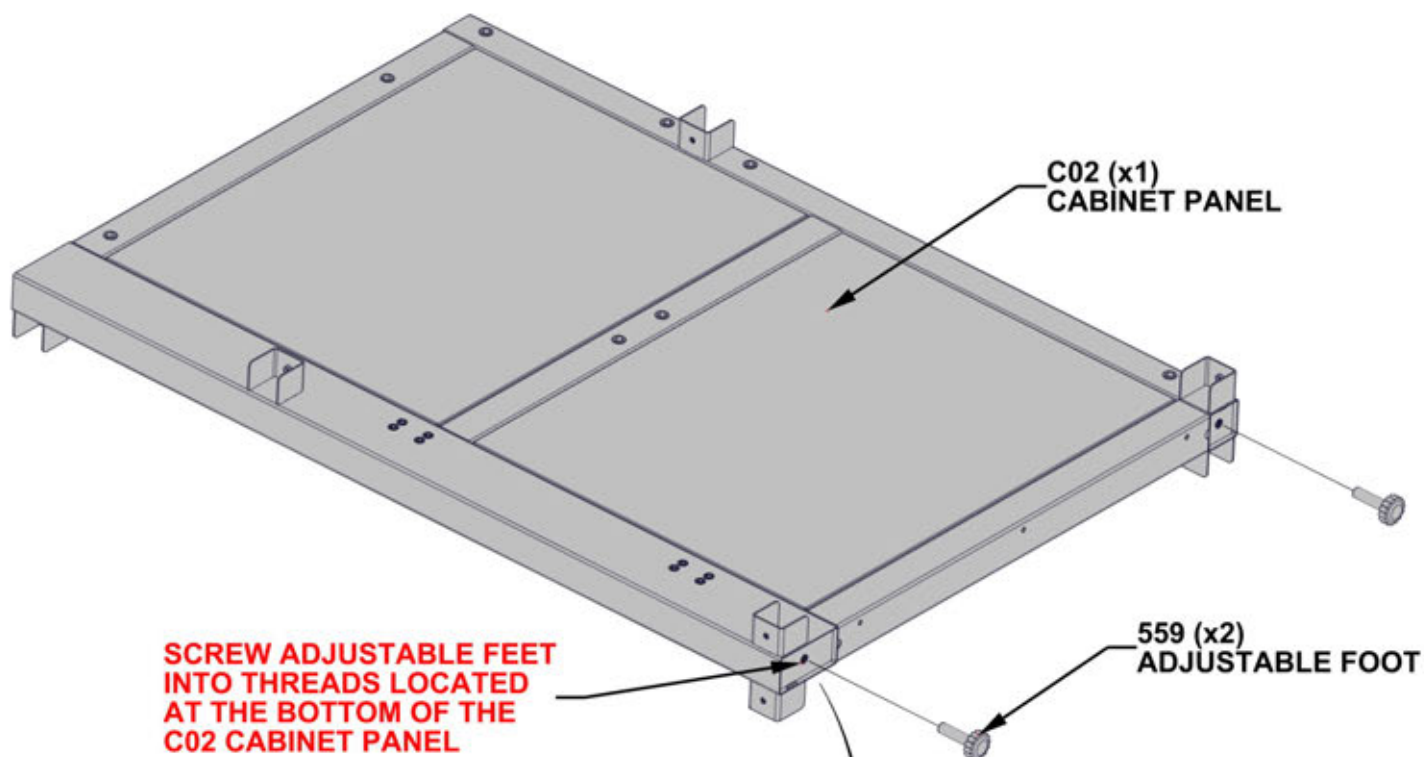

**SET ADJUSTABLE FEET
AT A DISTANCE OF APPROX.
1" [25.4 mm]. DEPENDING ON
SURFACE, FEET CAN BE SCREWED
IN OR OUT AS NEEDED.**

STEP 5A - KITCHEN CABINET ASSEMBLY

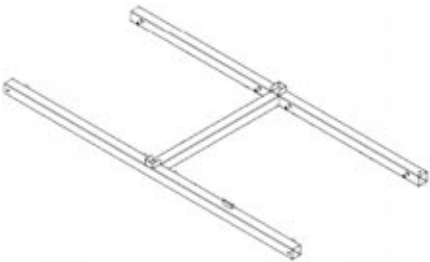


FLOOR PANEL ASSEMBLY
STEP 1



CABINET PANEL WITH FEET
STEP 4


TIP:
- RUBBER Mallet MAY NEED TO BE USED TO TAP PANELS IN PLACE

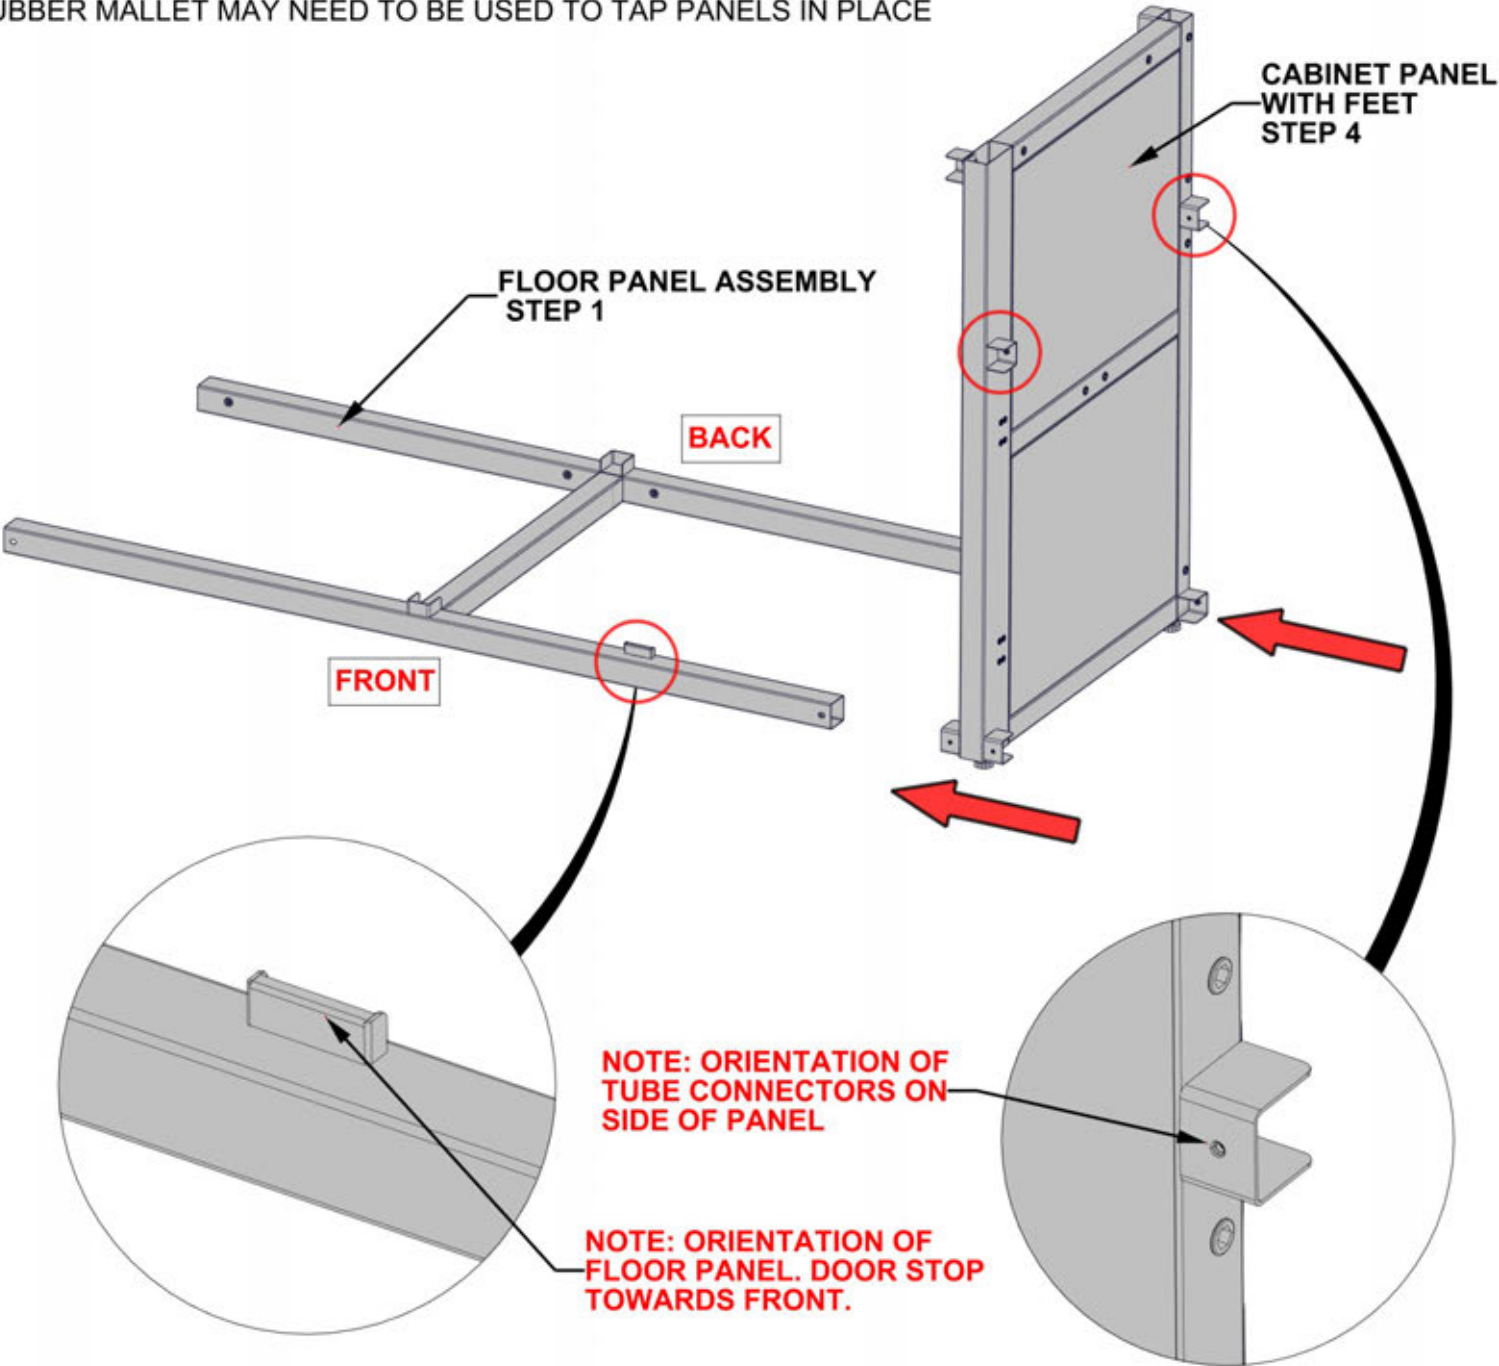

STEP 5B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

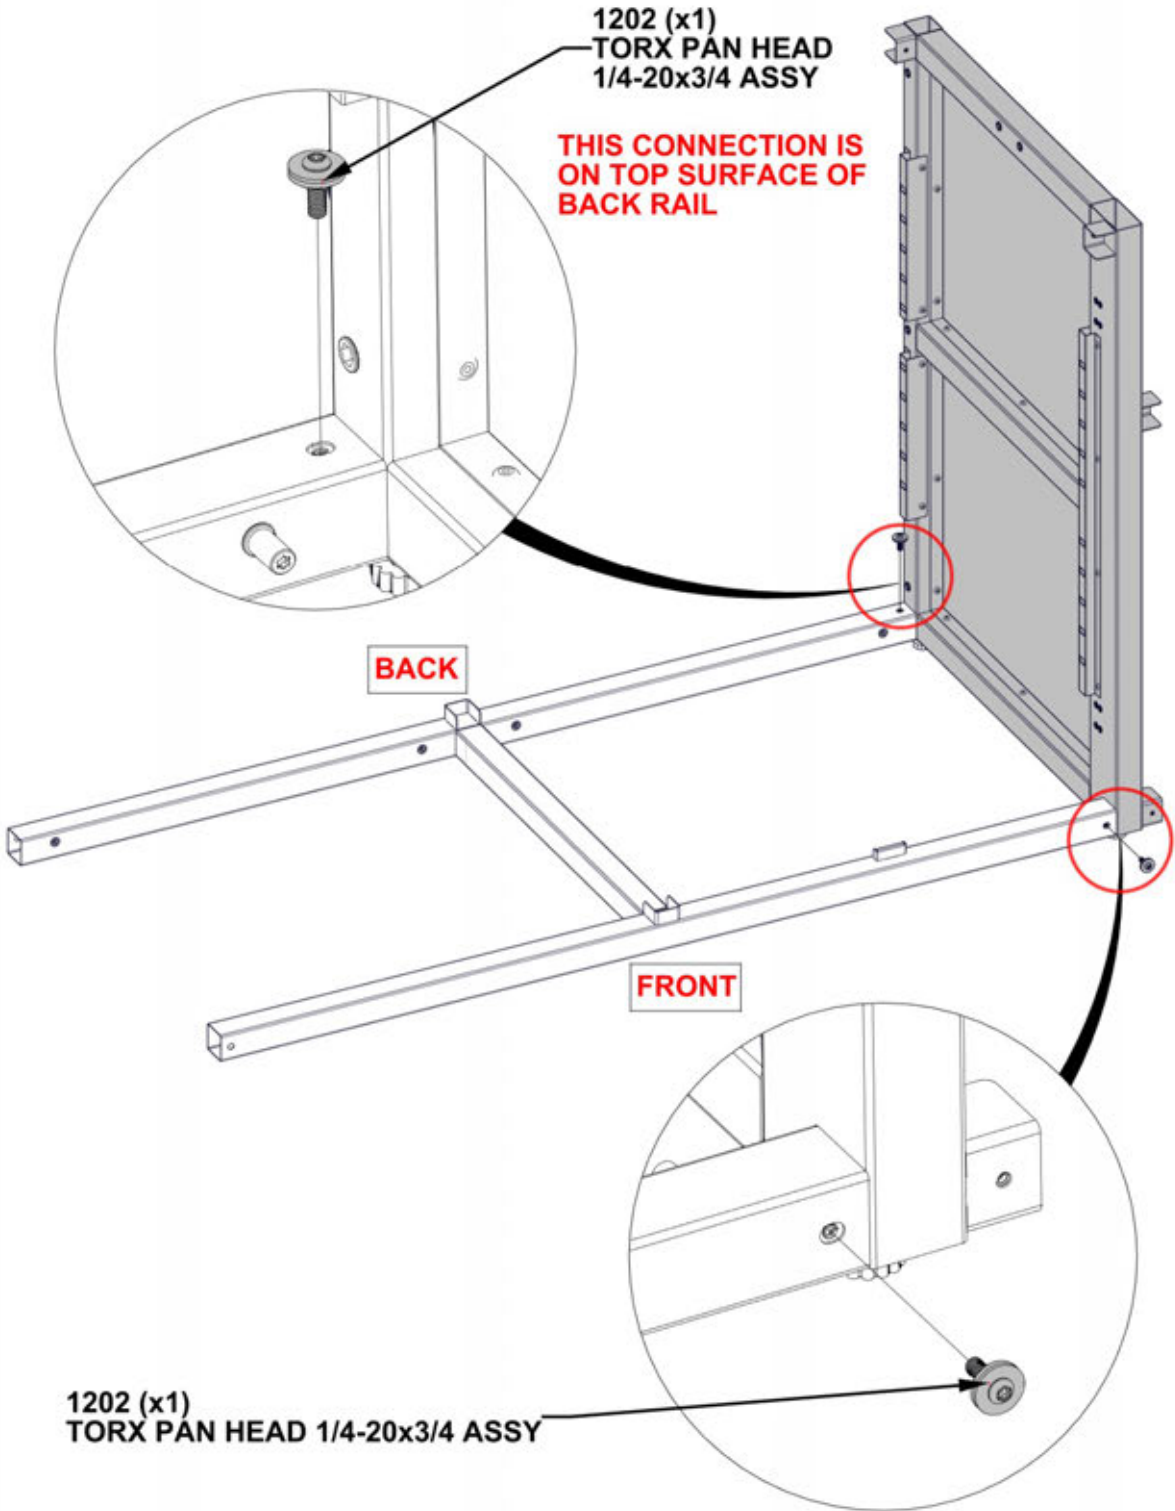


STEP 6 - KITCHEN CABINET ASSEMBLY




C05 CABINET PANEL - A4M02045
(x1) 2 3/16"x25"x33 7/8" (56x635x860)

PLACE C05 PANEL IN PLACE, ALIGNING TUBES WITH TUBE CONNECTORS.
THREADED INSERTS ON SIDE OF PANEL TOWARDS THE FRONT.

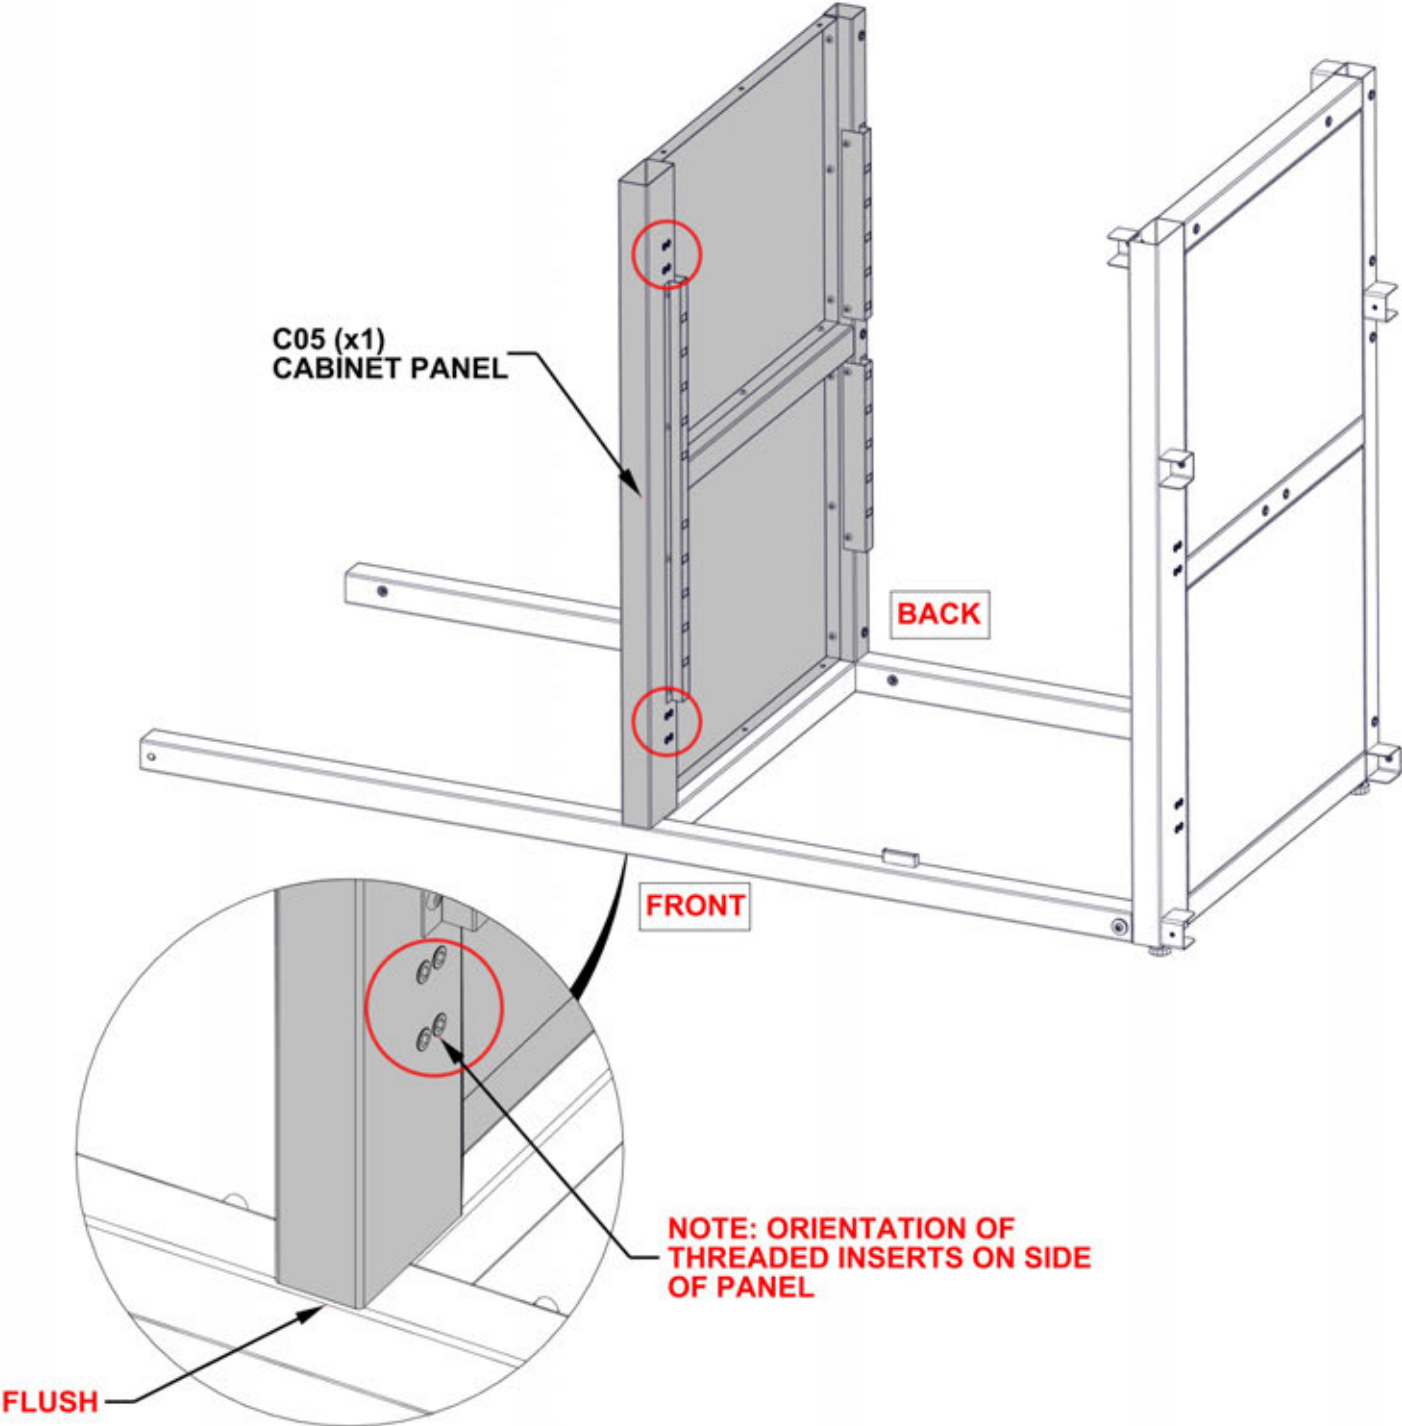

STEP 7A - KITCHEN CABINET ASSEMBLY

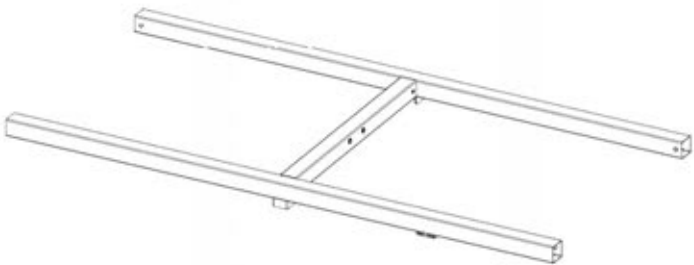


COUNTERTOP FRAME
ASSEMBLY STEP 3

**SLIDE COUNTERTOP FRAME ASSEMBLY UNTIL TUBES ALIGN
WITH TUBE CONNECTORS ON CABINET PANEL C02**

**TOP OF C05 CABINET PANEL WILL HAVE TO BE MOVED OUTWARD
TO ALLOW COUNTERTOP FRAME TO SLIDE INTO PLACE.**


TIP:
- RUBBER MALLET MAY NEED
TO BE USED TO TAP PANELS IN PLACE

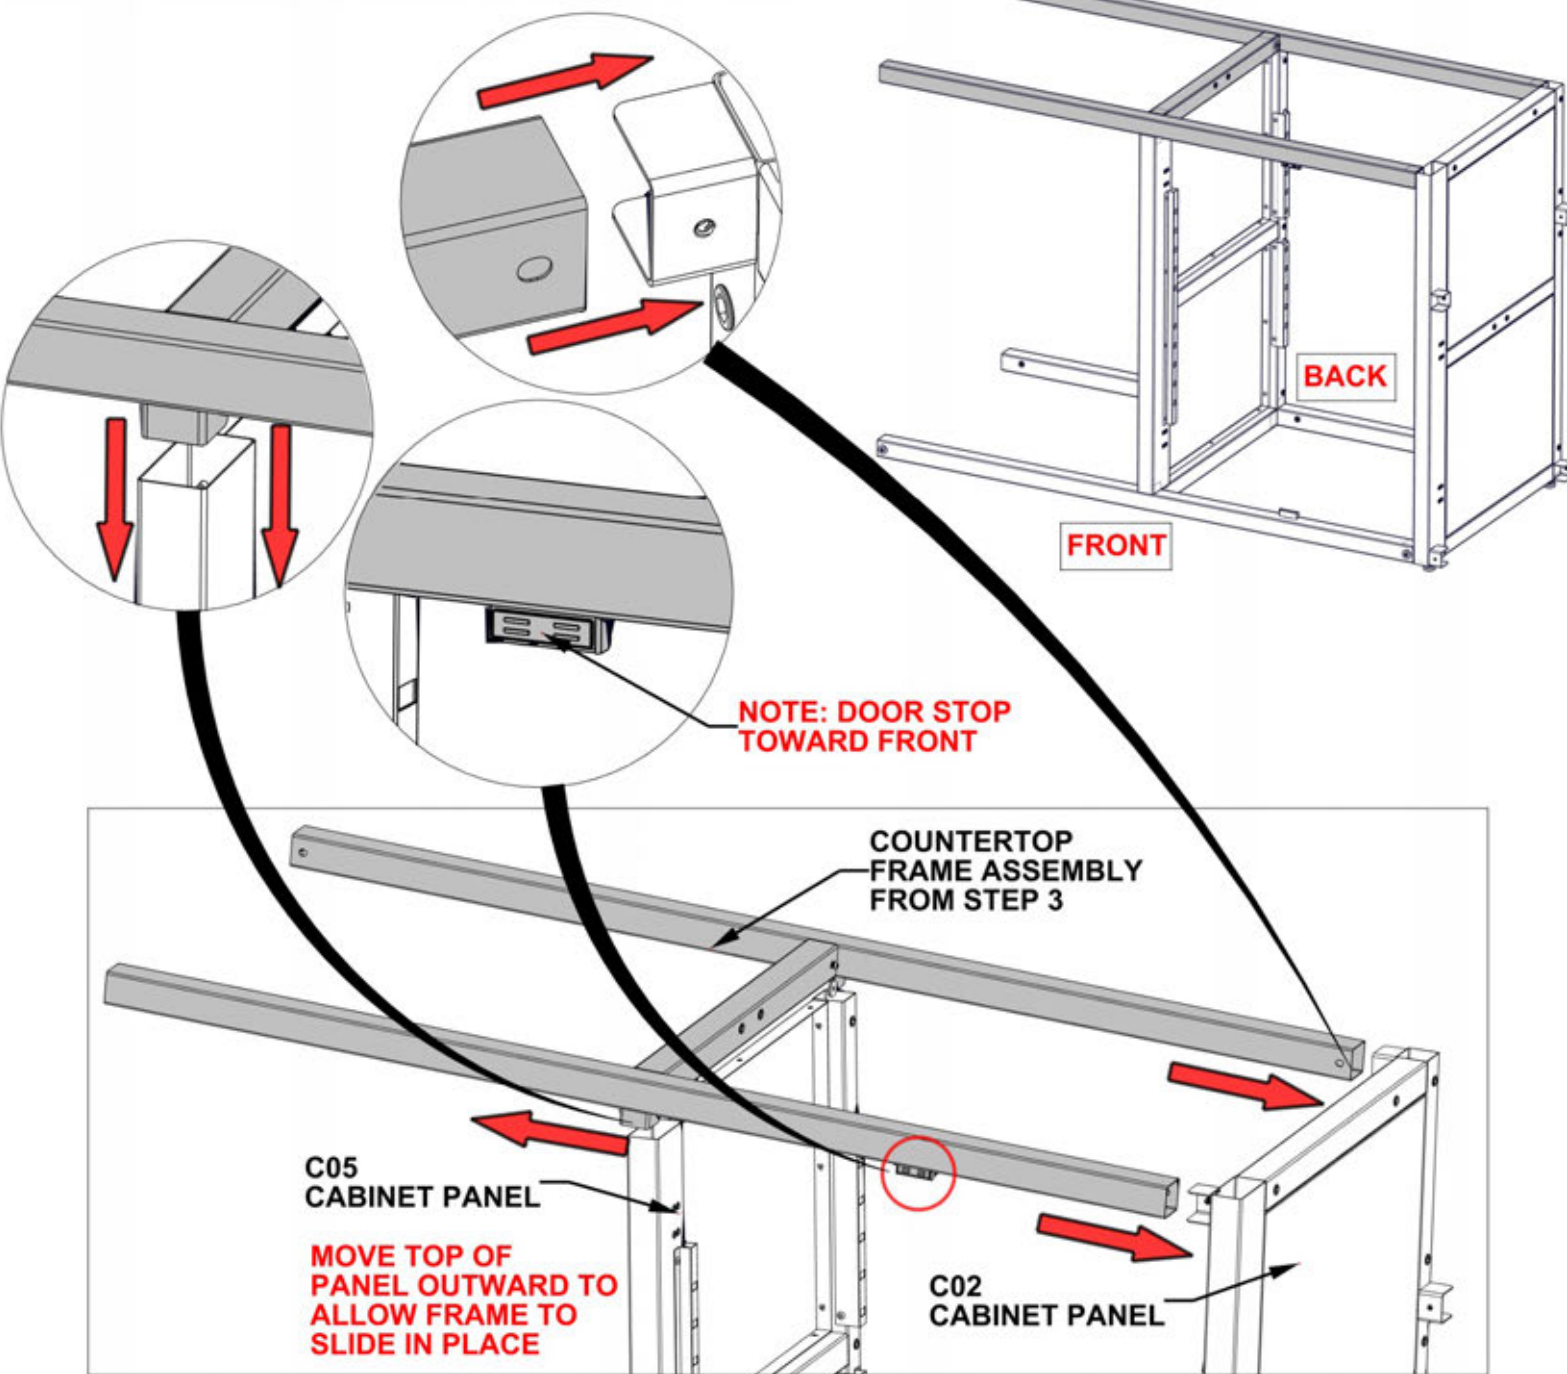

STEP 7B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

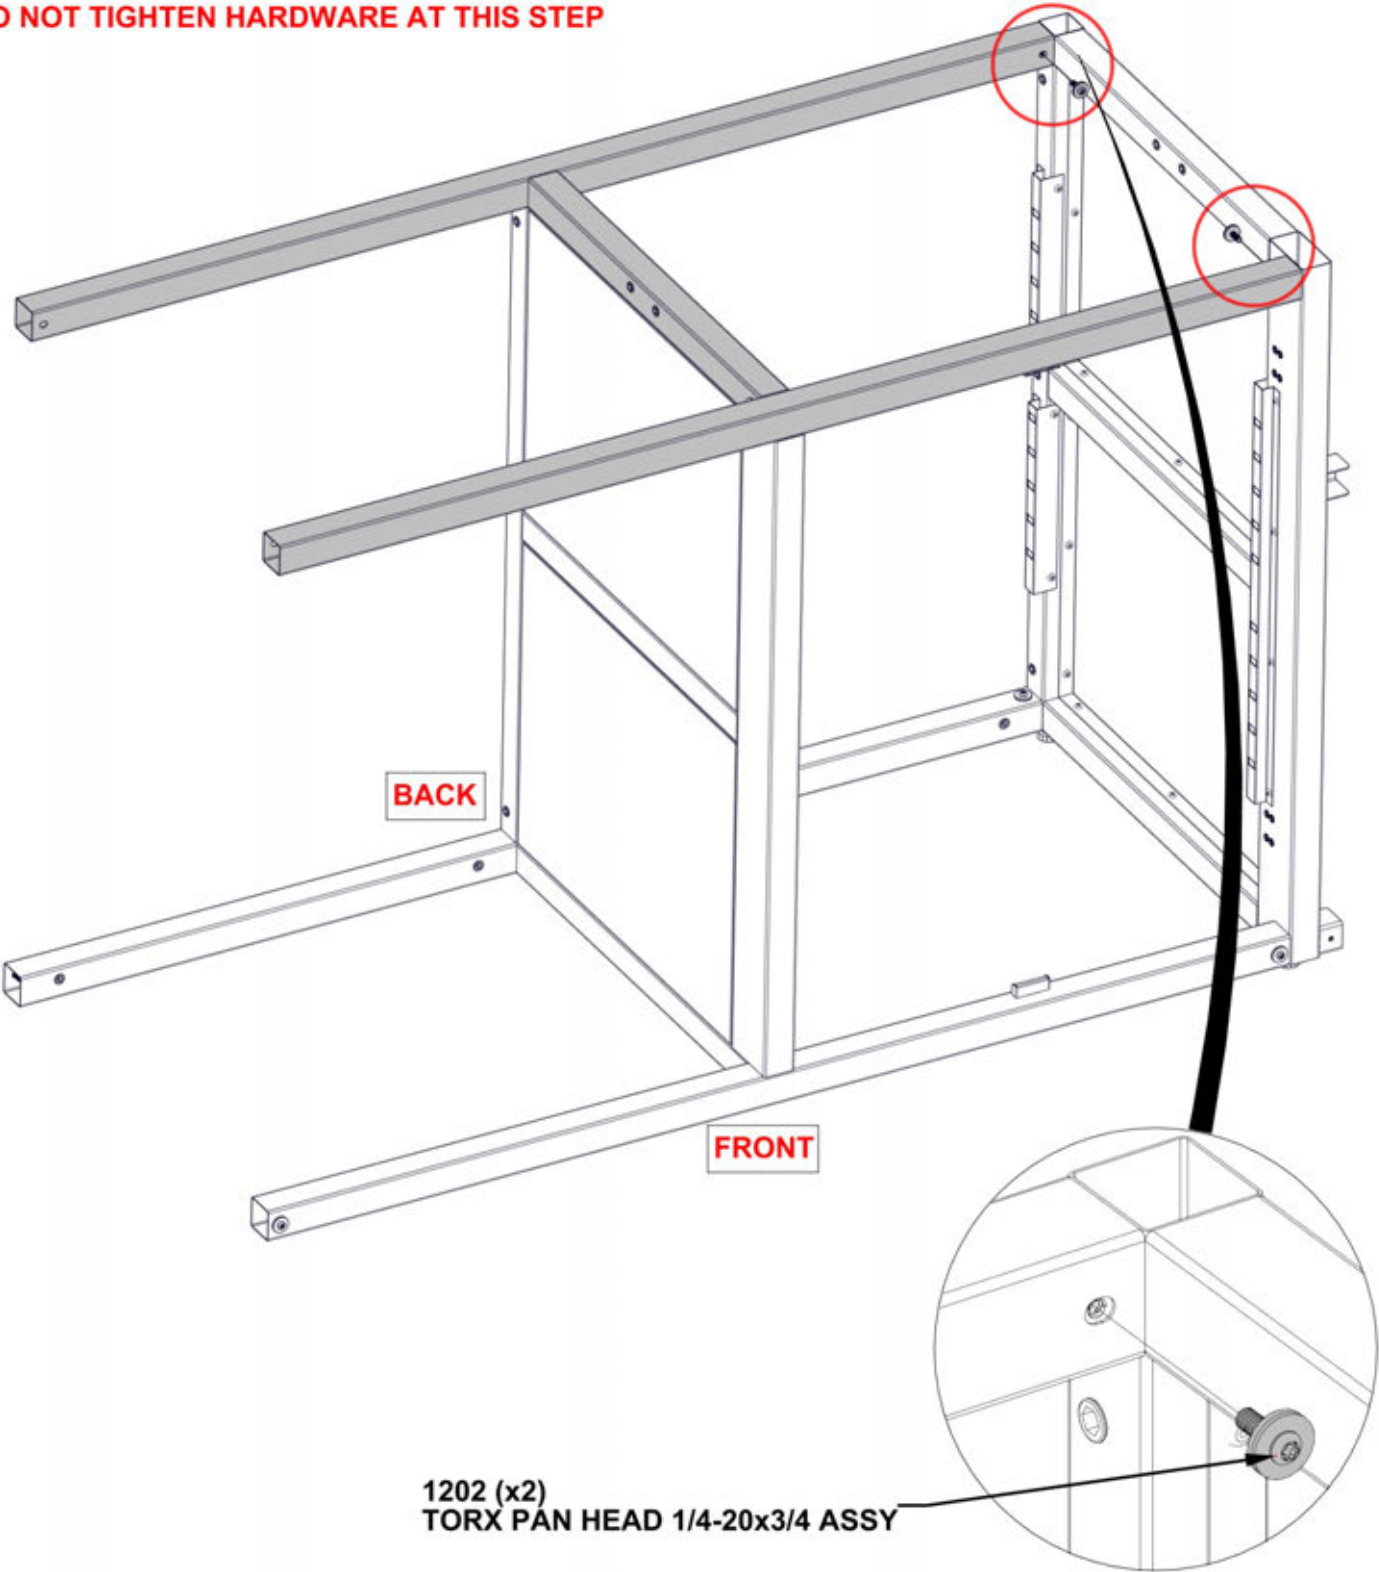


STEP 8A - KITCHEN CABINET ASSEMBLY




C01 CABINET PANEL - A4M02016
(x1) 2 3/4"x25"x38" (70x635x965)

ALIGN TUBE CONNECTORS ON C01 PANEL WITH TUBES ON TOP RAILS AND BOTTOM RAILS

TIP:
- RUBBER Mallet MAY NEED
TO BE USED TO TAP PANELS IN PLACE

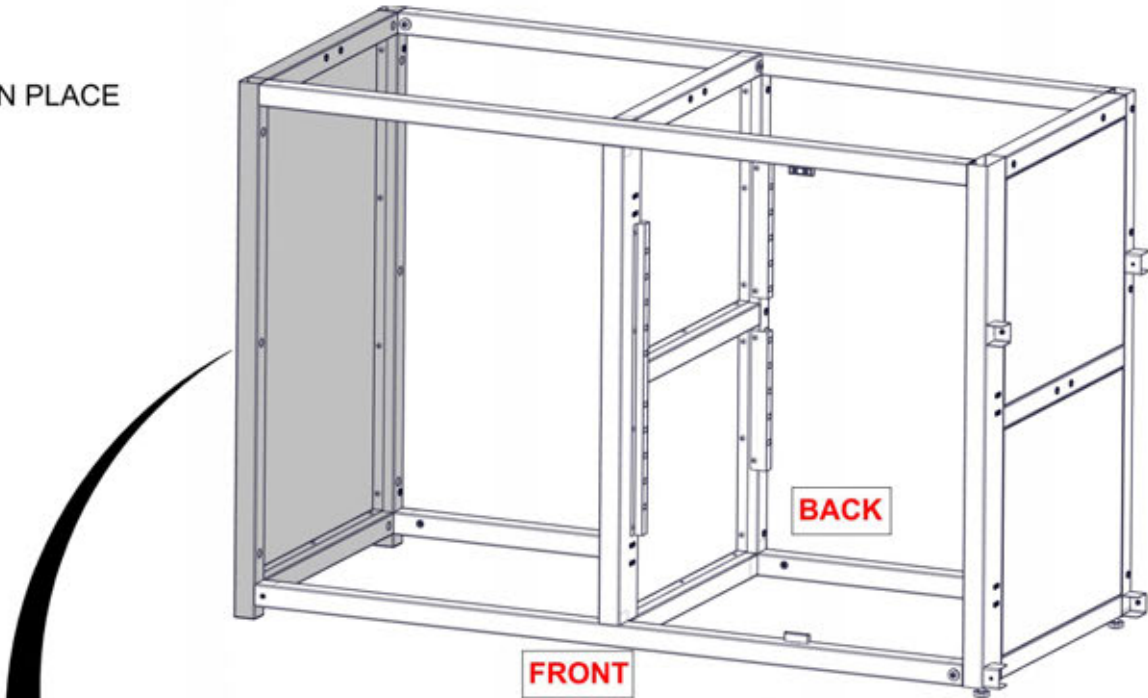


C01 (x1)
CABINET PANEL

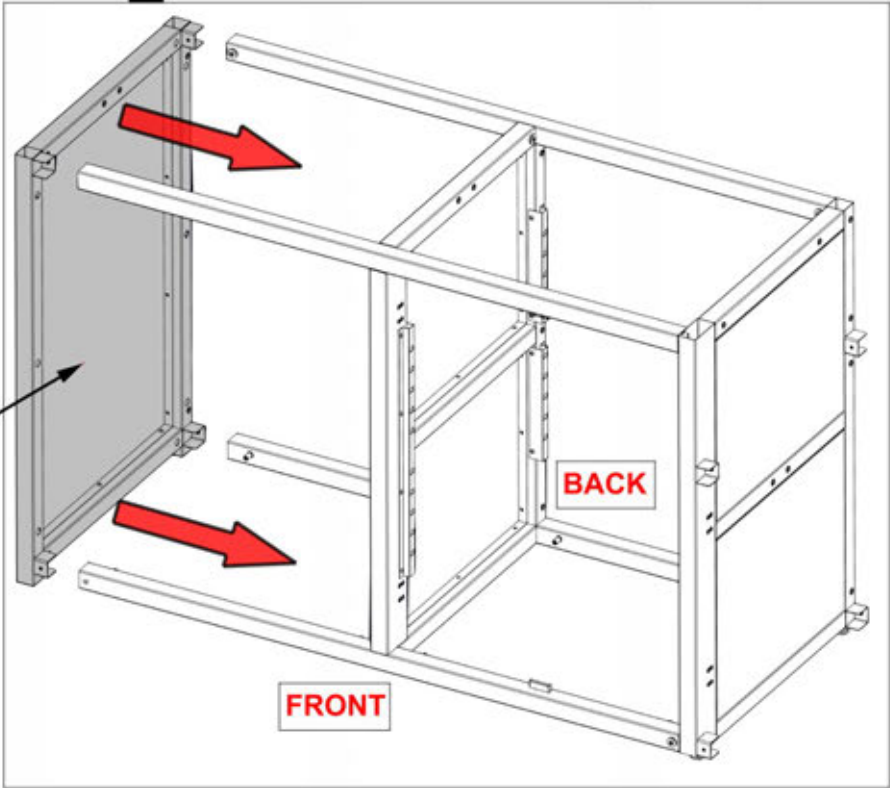


STEP 8B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

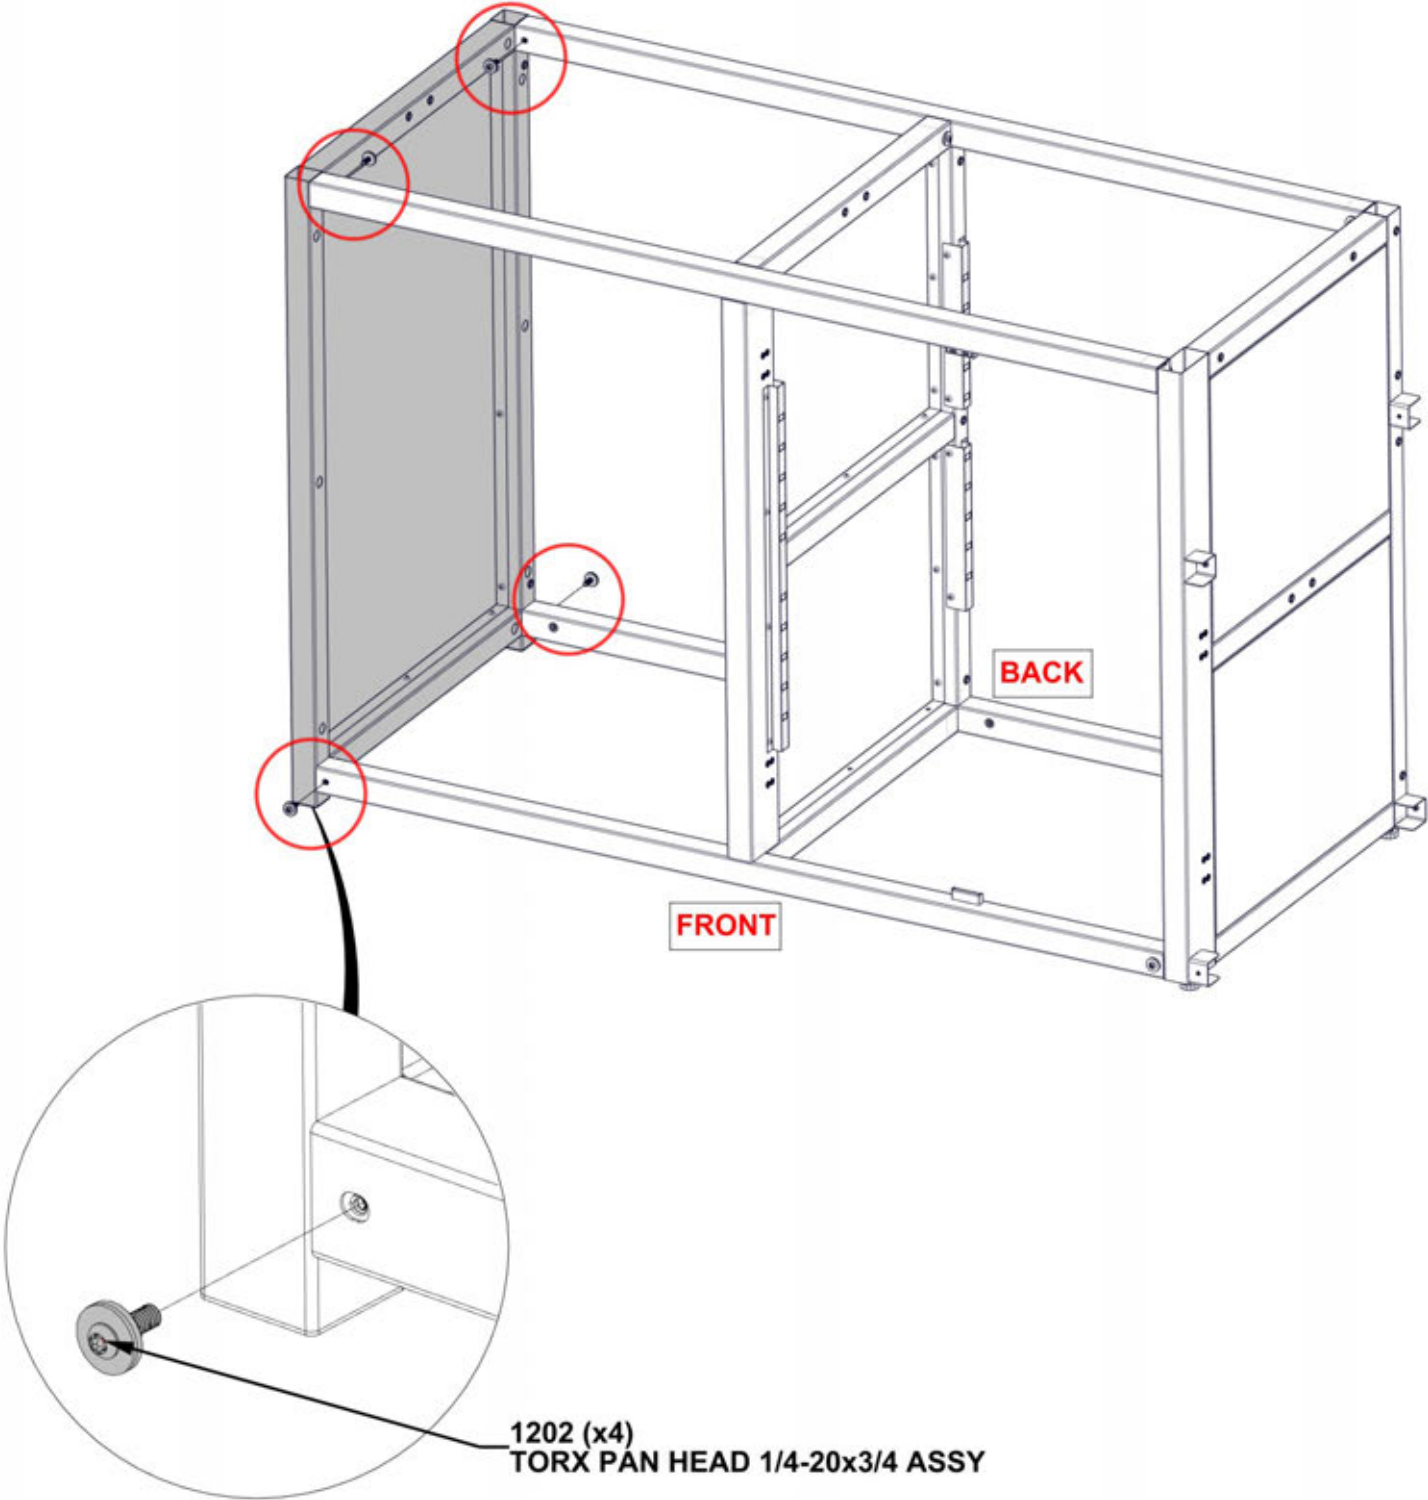

STEP 9A - KITCHEN CABINET ASSEMBLY


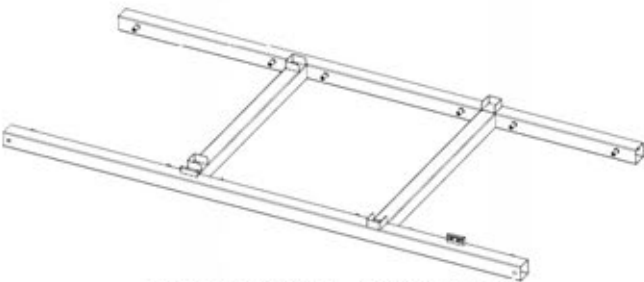


FLOOR PANEL ASSEMBLY
STEP 2

**SLIDE FLOOR PANEL ASSEMBLY UNTIL TUBES ALIGN WITH
TUBE CONNECTORS ON CABINET PANEL C02**

MAKE SURE ALL DOOR STOPS ARE TOWARD THE FRONT


TIP:
- RUBBER Mallet MAY NEED TO
BE USED TO TAP PANELS IN PLACE

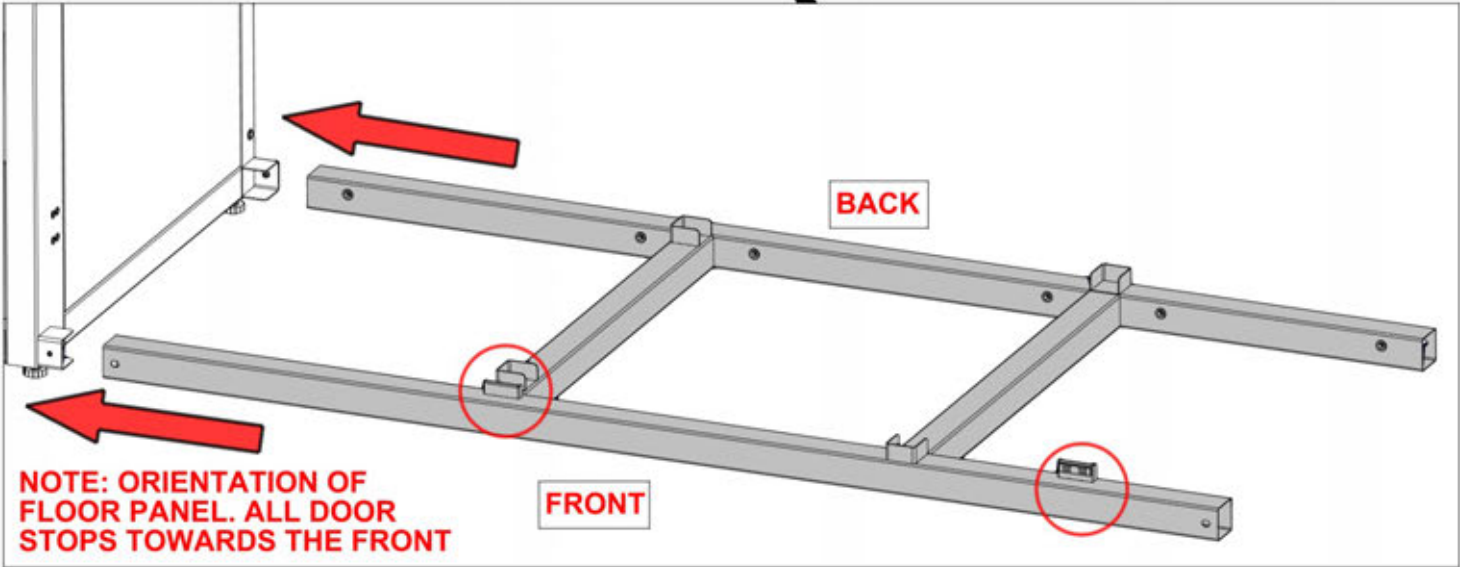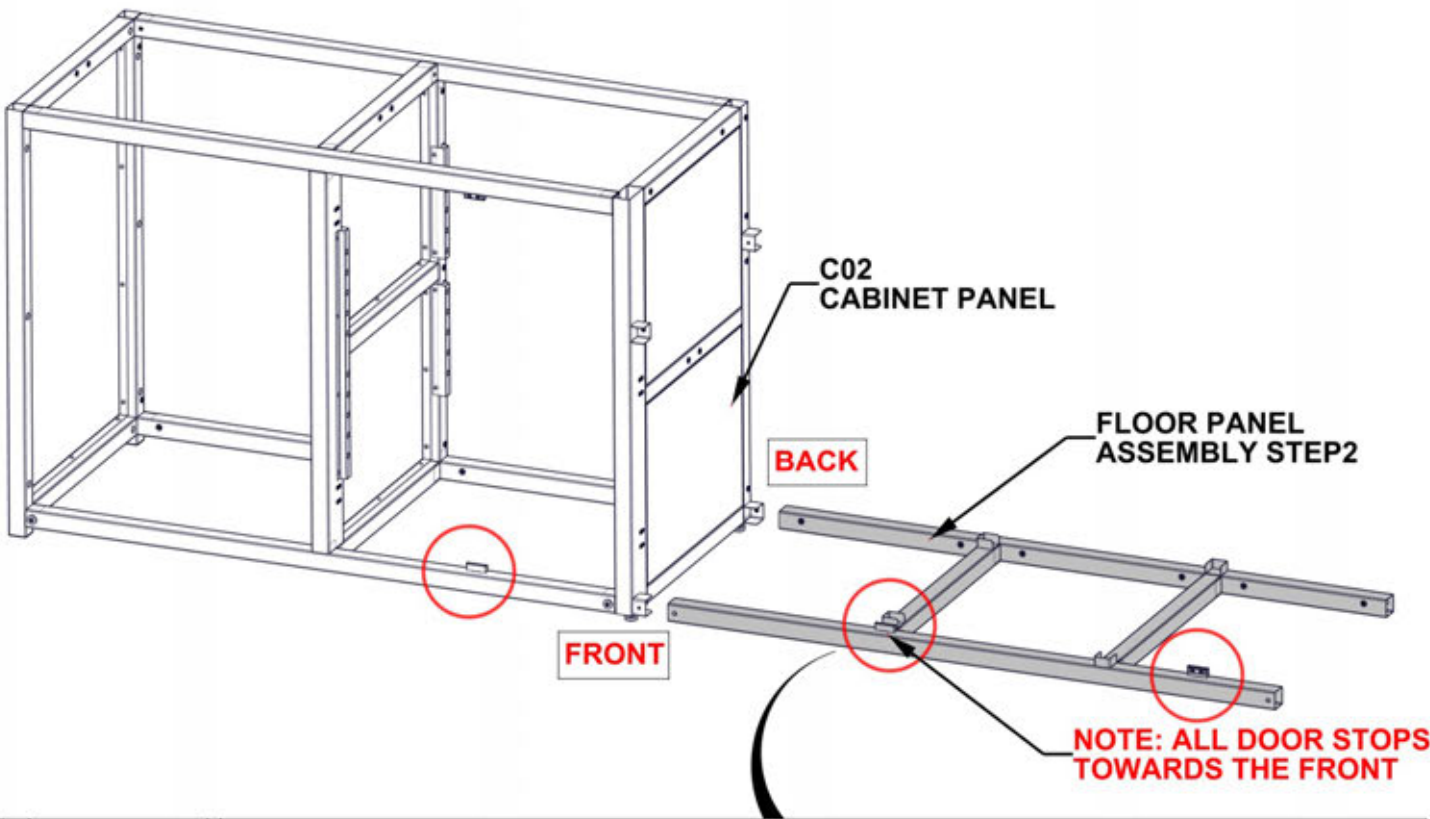

STEP 9B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


DO NOT TIGHTEN HARDWARE AT THIS STEP

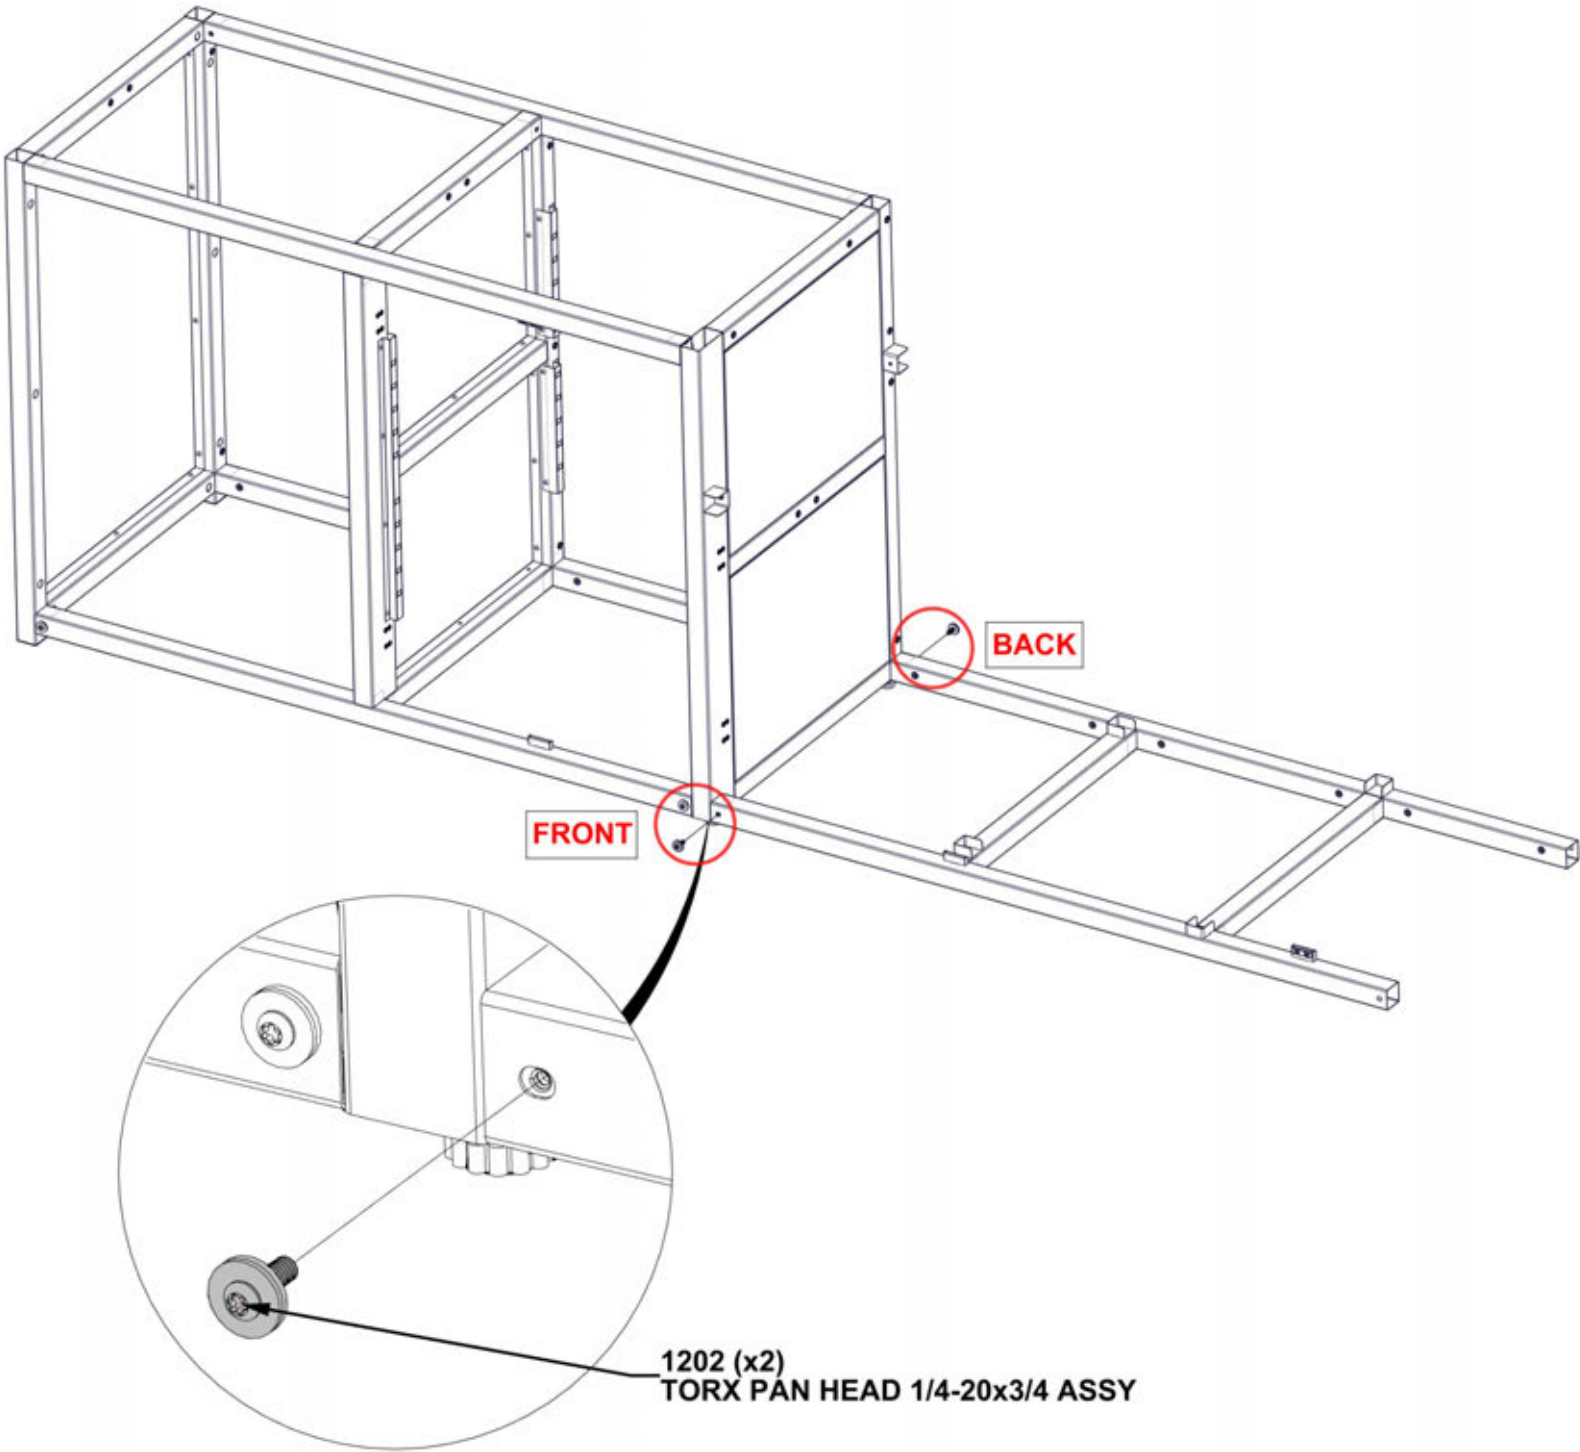



STEP 10 - KITCHEN CABINET ASSEMBLY



T02 UPRIGHT TUBE - A4M02104
(x1) 1 9/16"x1 9/16"x22 11/16" (40x40x576)

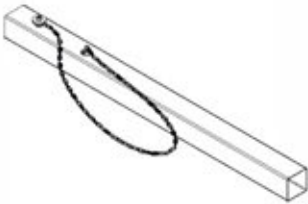


T03 UPRIGHT TUBE WITH MATCH HOLDER - A4M02404
(x1) 1 9/16"x1 9/16"x22 11/16" (40x40x576)

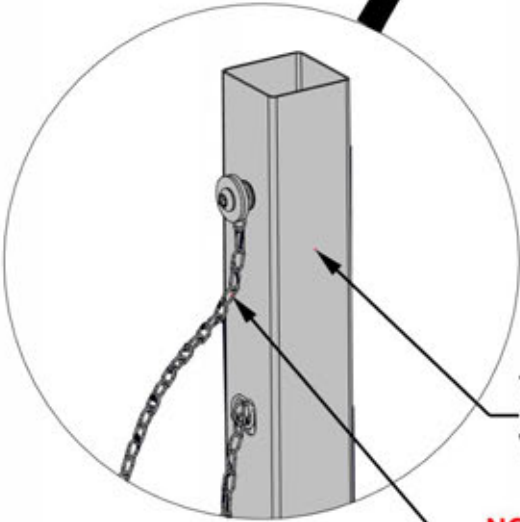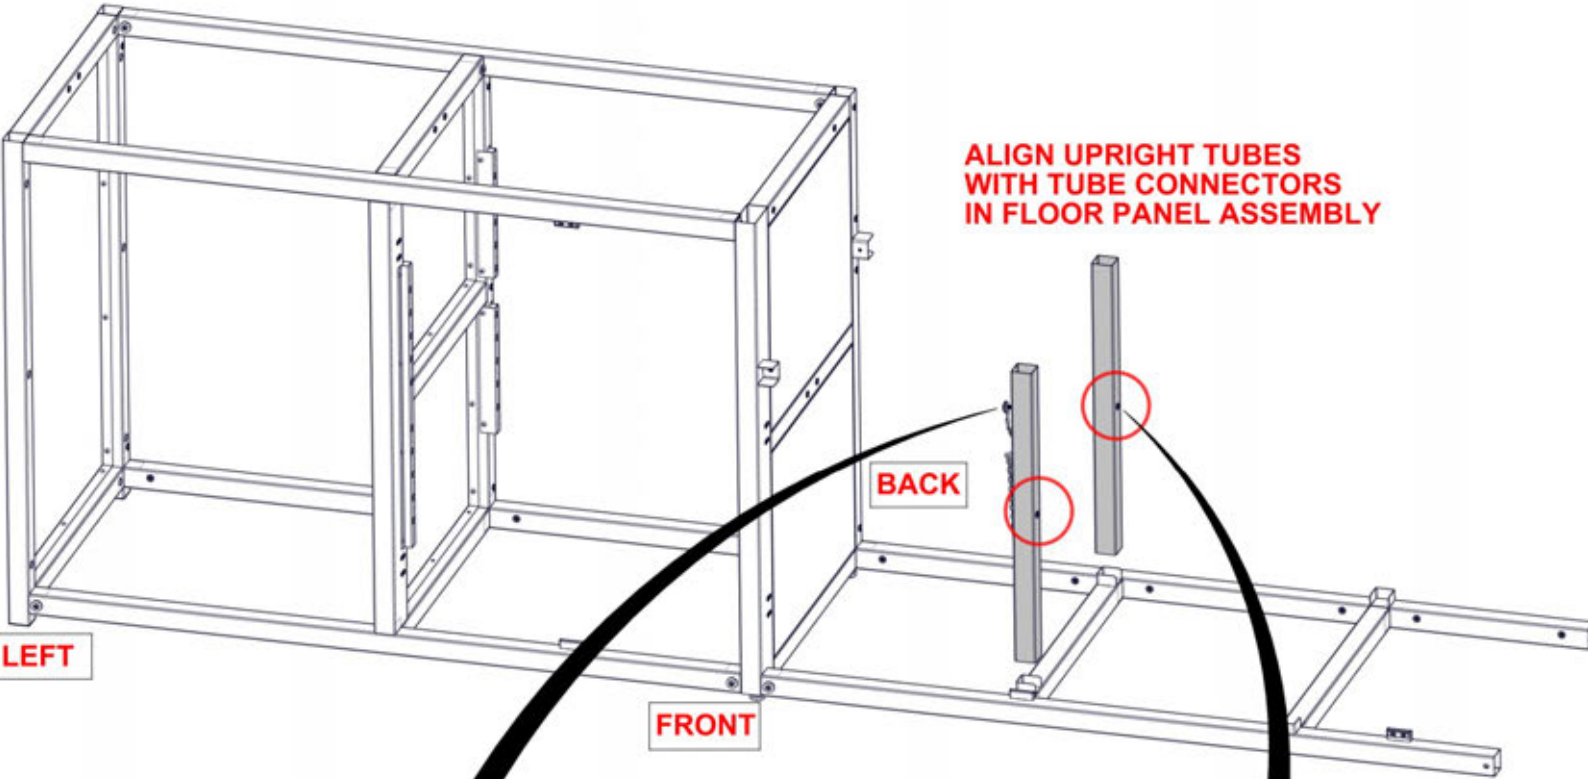

T03 (x1)
UPRIGHT TUBE
WITH MATCH HOLDER

NOTE: MATCH HOLDER
ON LEFT SIDE TOWARDS
TOP OF UPRIGHT

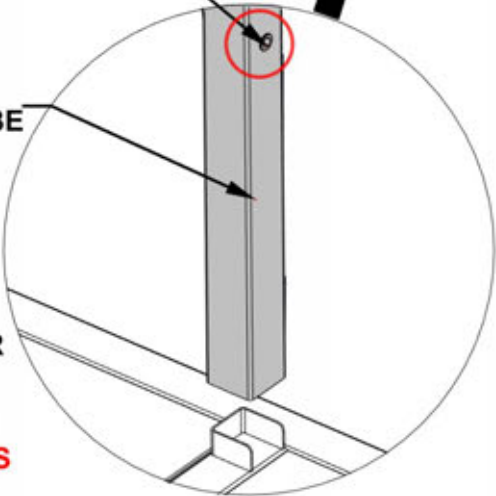

T02 (x1)
UPRIGHT TUBE

STEP 11A - KITCHEN CABINET ASSEMBLY




C09 CABINET TABLE - A4M02049
(x1) 2 3/8"x25"x38 7/16" (60x635x977)

SLIDE CABINET TABLE FRAME UNTIL TUBES ALIGN WITH TUBE CONNECTORS ON CABINET PANEL C02

TOP OF T02 AND T03 UPRIGHT TUBES WILL HAVE TO BE MOVED OUTWARD TO ALLOW CABINET TABLE FRAME TO SLIDE INTO PLACE


TIP:
- RUBBER Mallet MAY NEED TO BE USED TO TAP PANELS IN PLACE

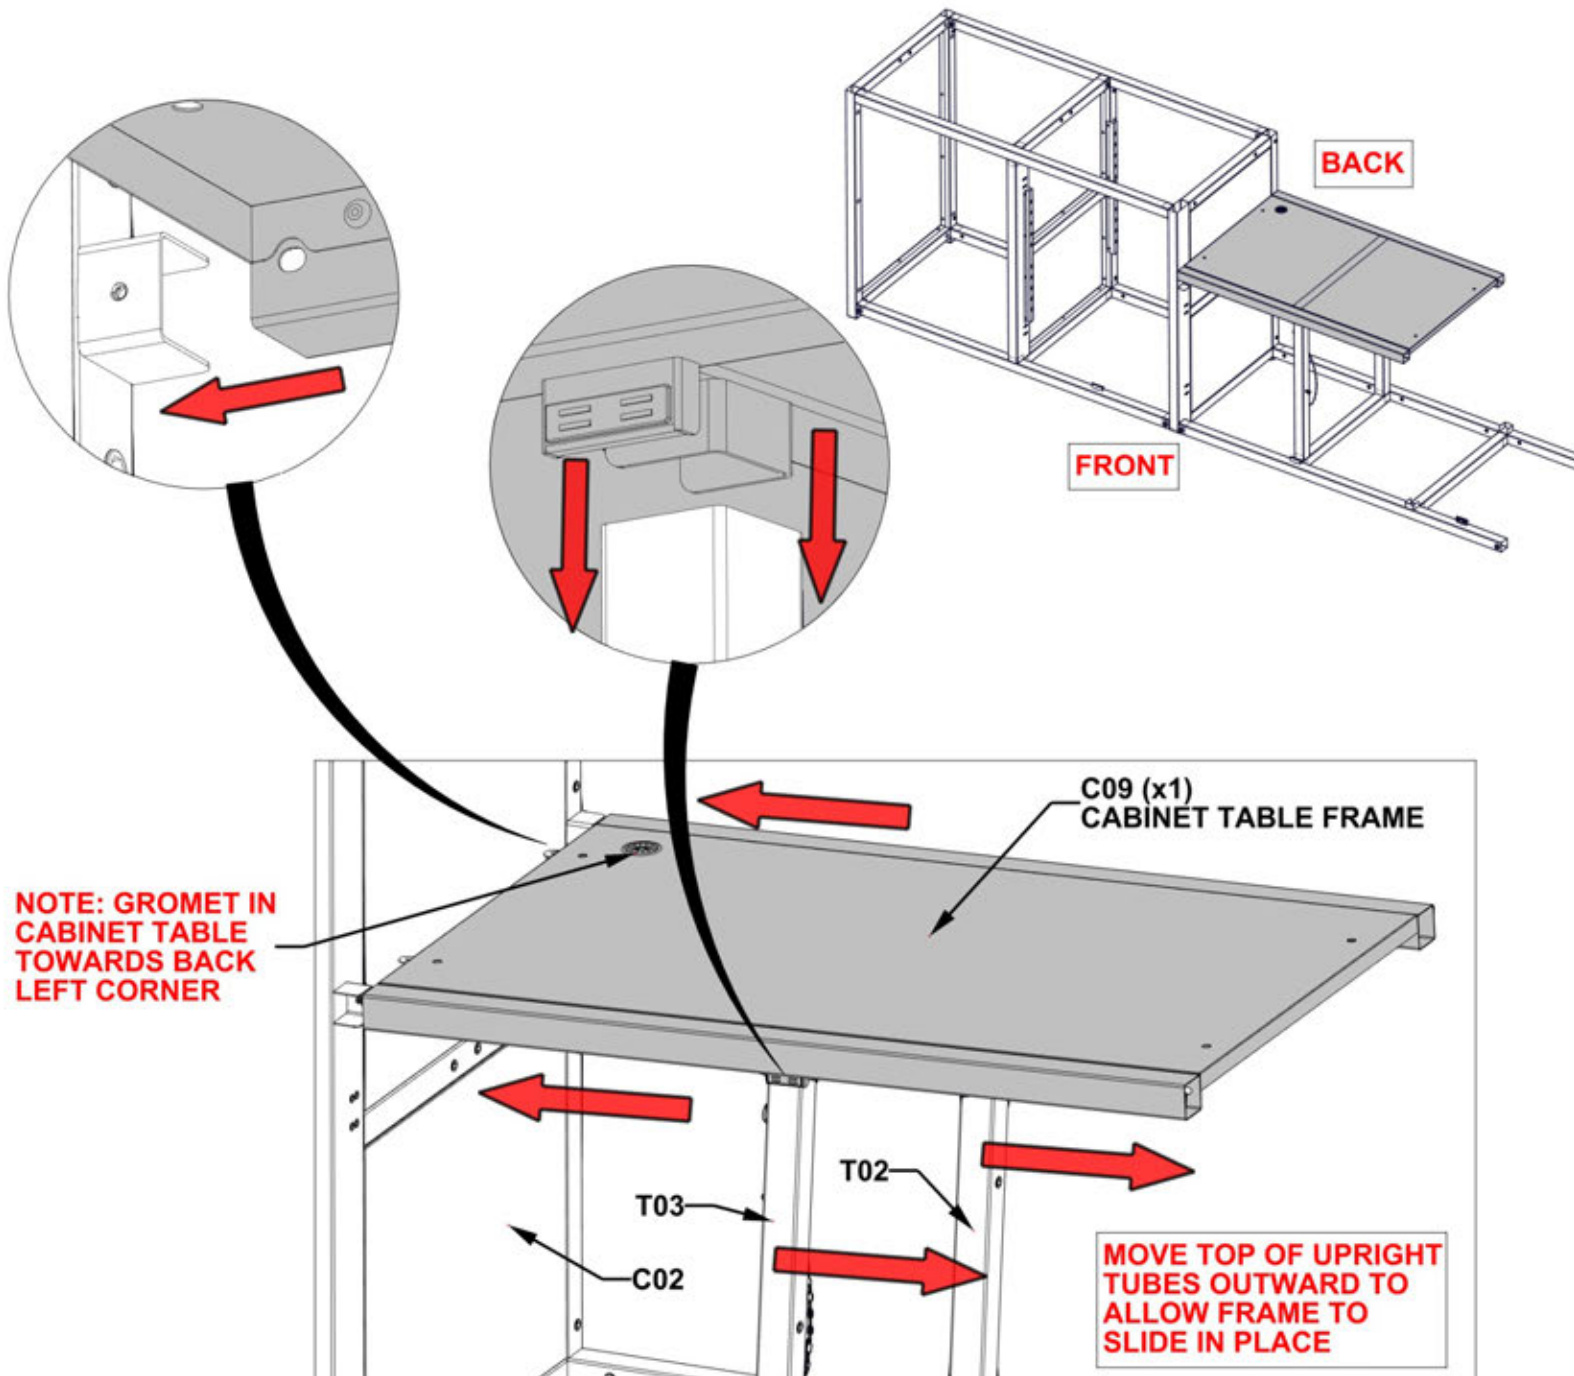

STEP 11B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

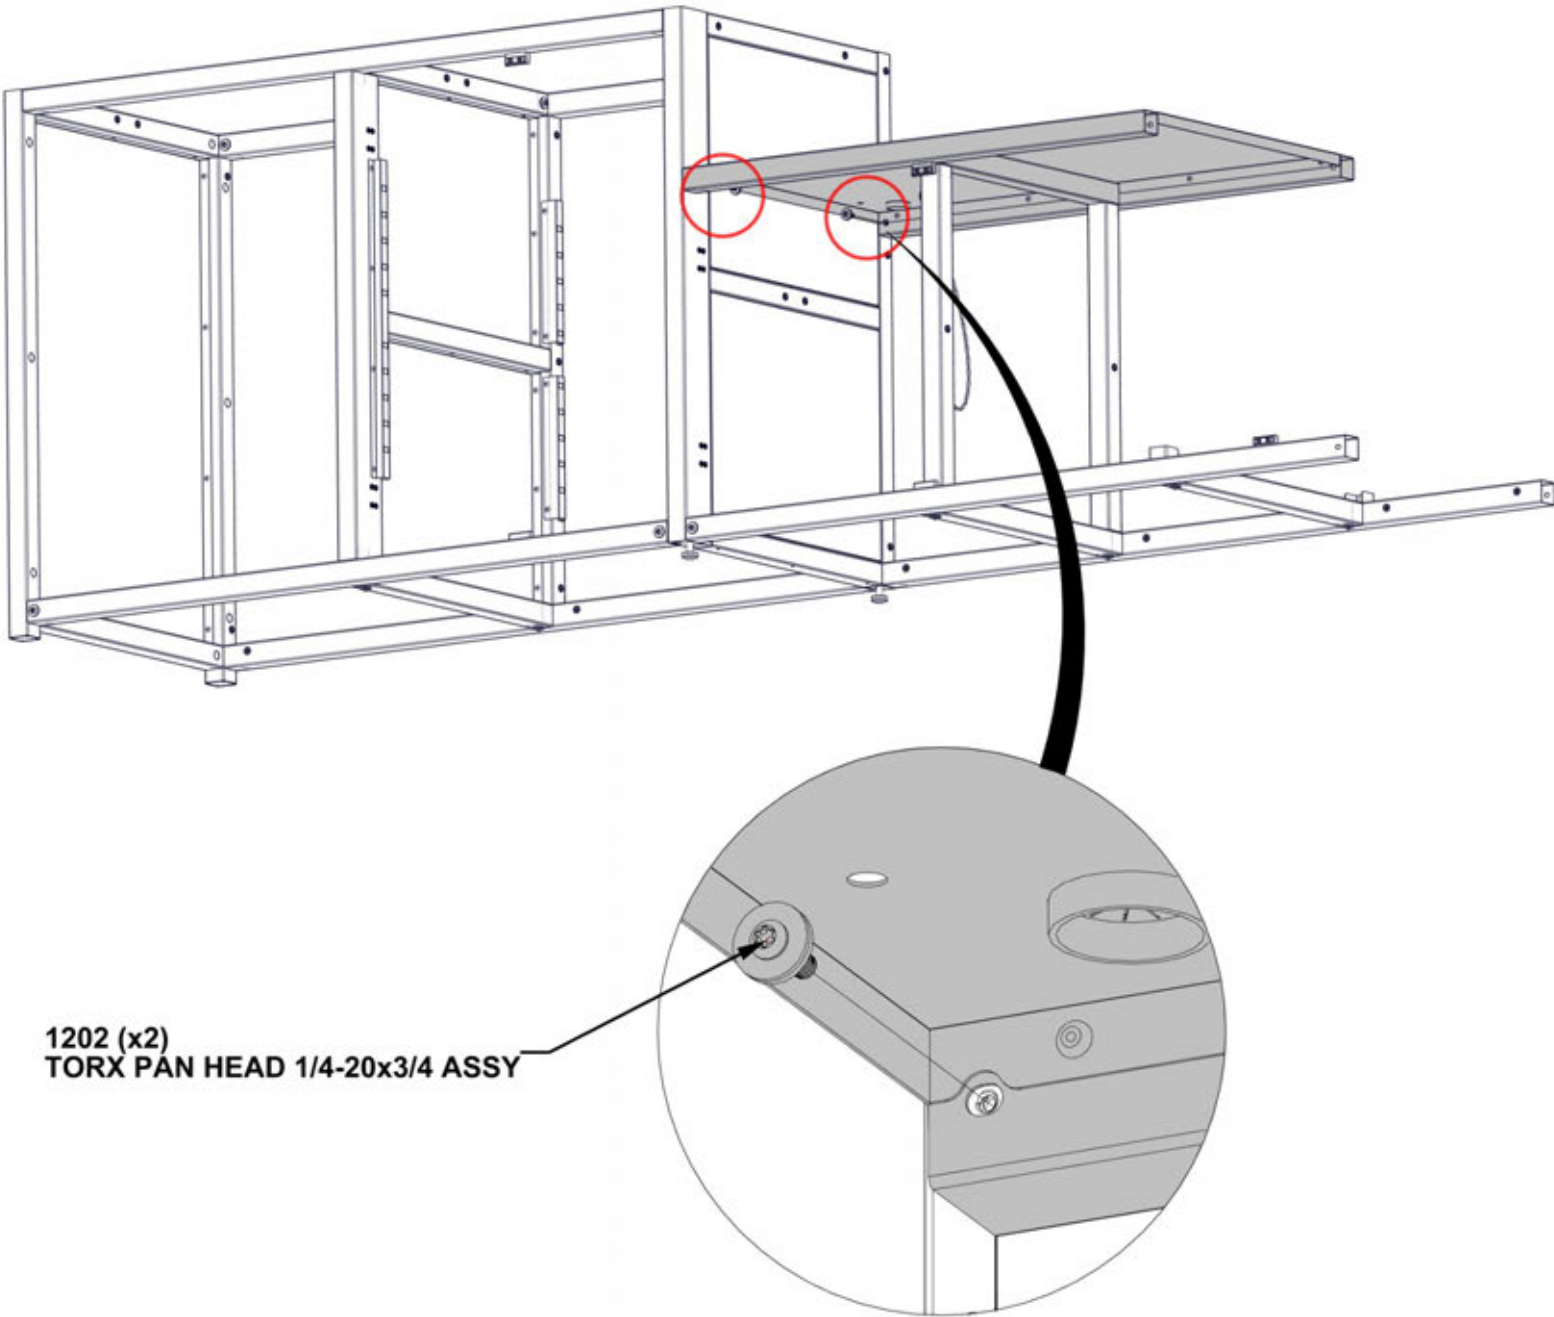

STEP 12A - KITCHEN CABINET ASSEMBLY







C08 CABINET PANEL - A4M02048
(x1) 4 1/8"x25"x35 7/16" (105x635x900)

**SLIDE CABINET PANEL C08 UNTIL TUBES ALIGN WITH
TUBE CONNECTORS ON TABLE FRAME C09**

TOP OF C08 PANEL WILL HAVE TO BE MOVED OUTWARD

TIP:
- RUBBER Mallet MAY NEED TO
BE USED TO TAP PANELS IN PLACE

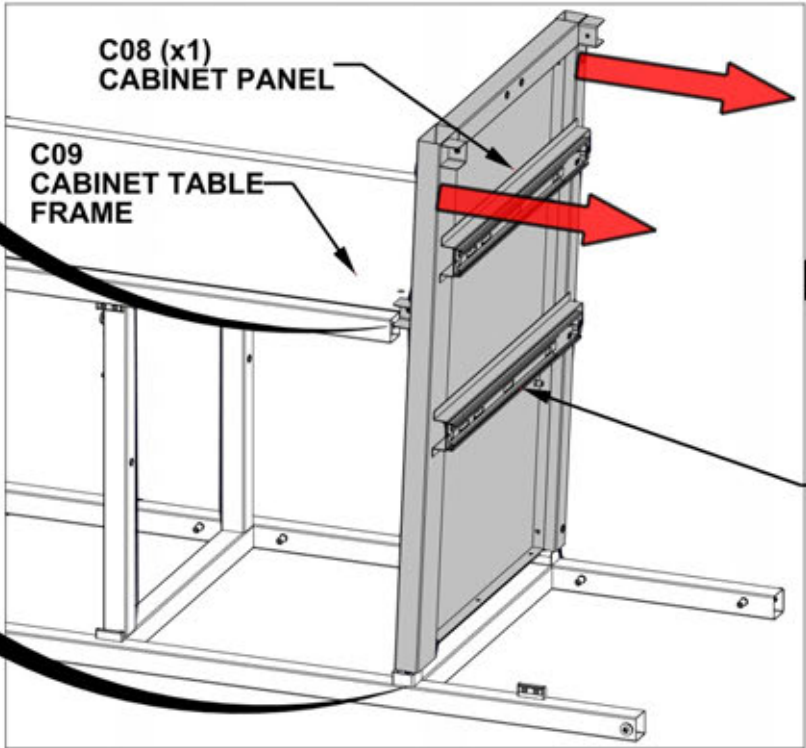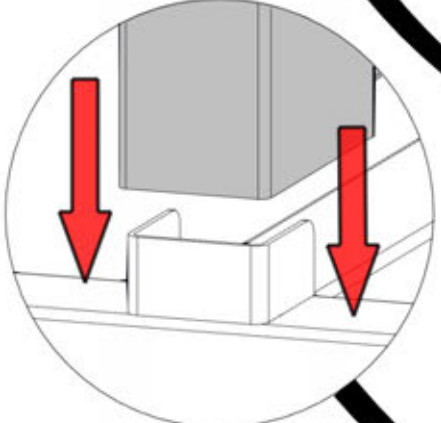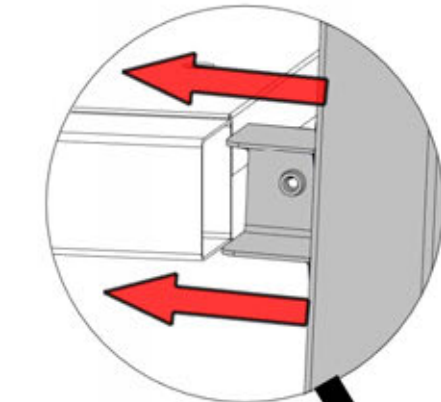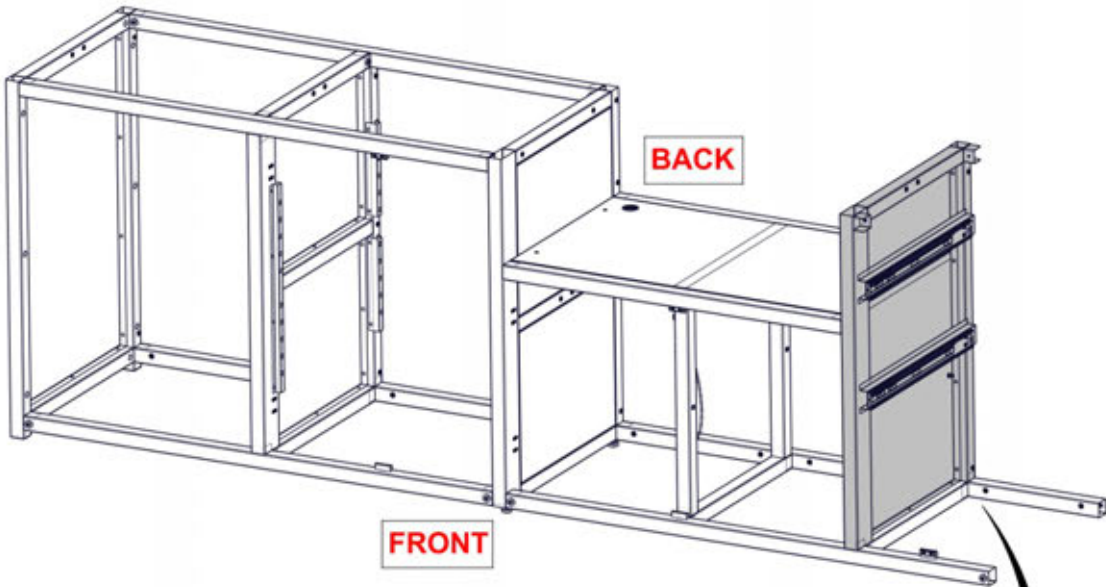


**NOTE: DRAWER
SLIDES ON RIGHT
SIDE OF CABINET**

STEP 12B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

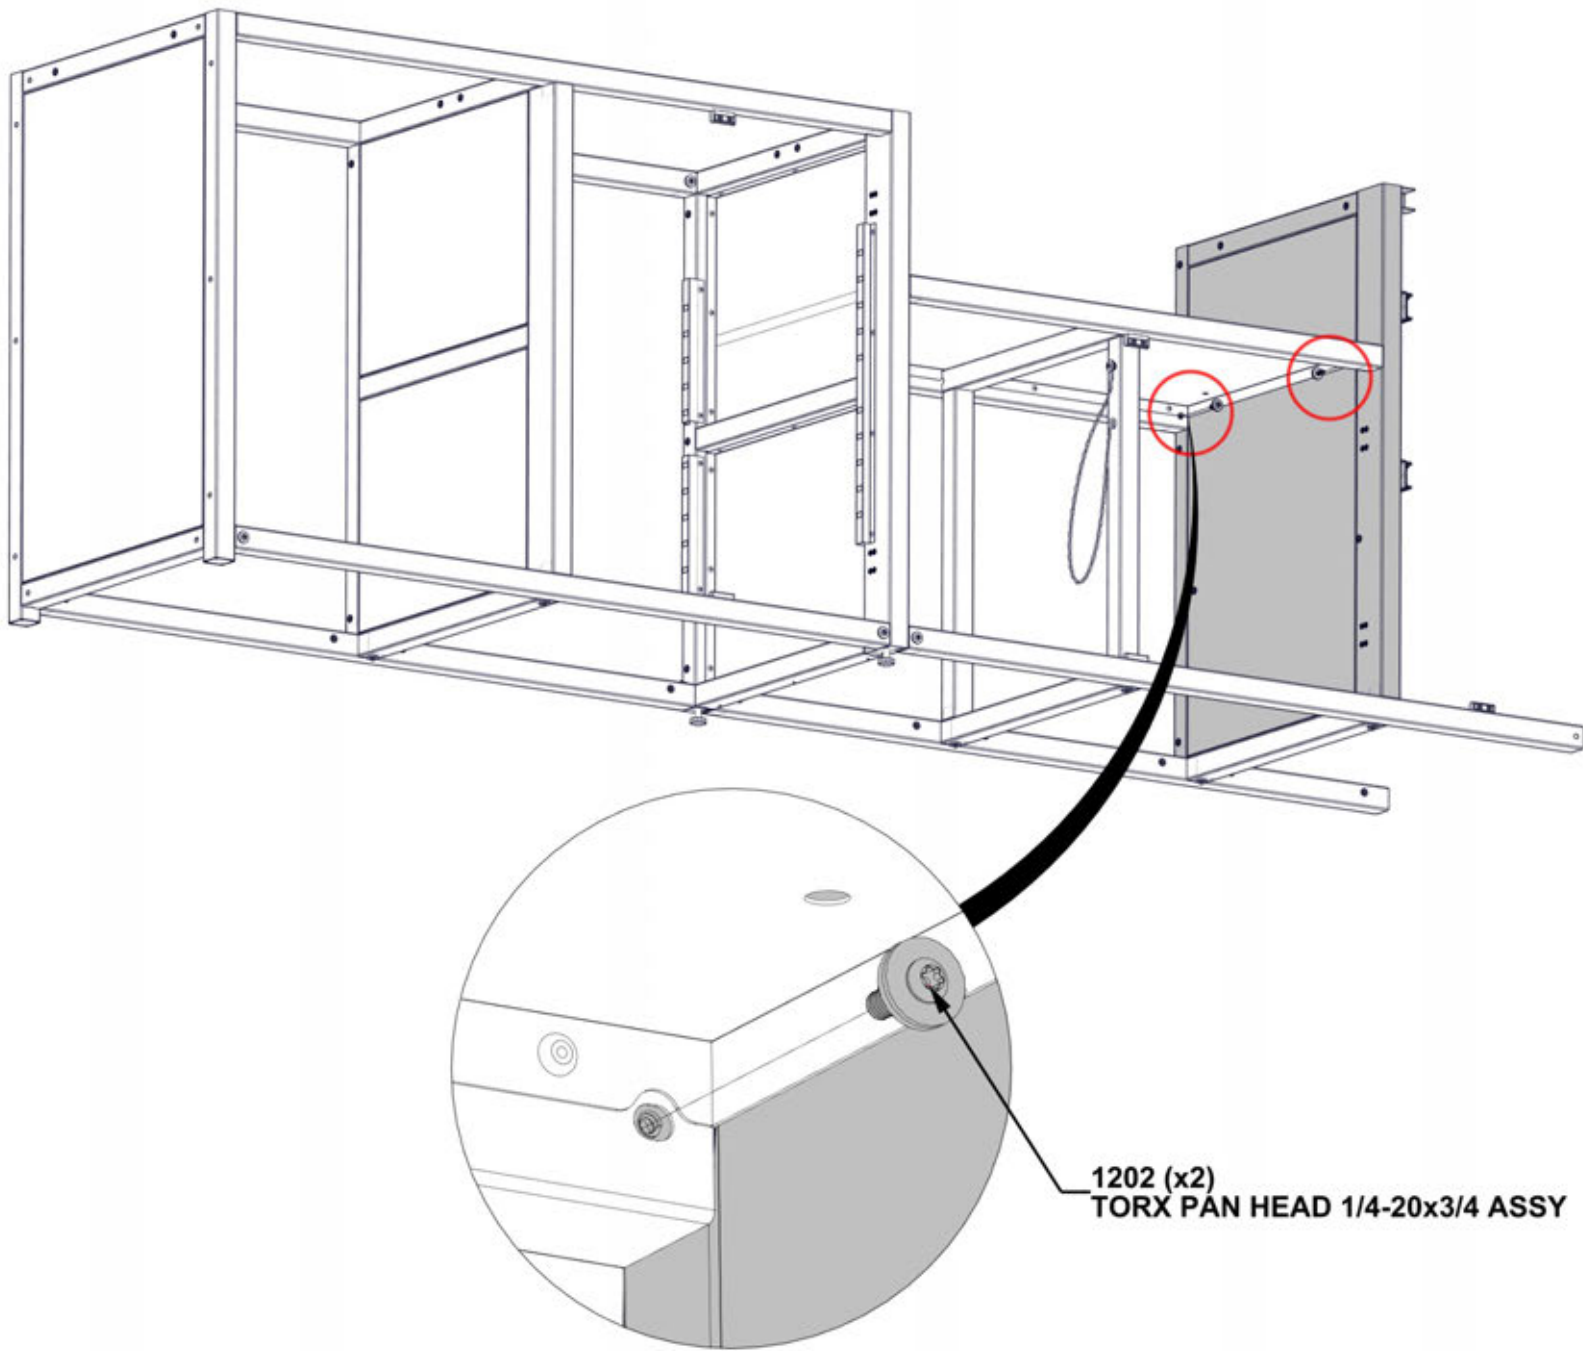



STEP 13A - KITCHEN CABINET ASSEMBLY



C06 CABINET PANEL - A4M02046
(x1) 2 15/16"x25"x38" (75x635x965)

ALIGN TUBE CONNECTORS ON C06 PANEL WITH TUBES ON BOTTOM RAILS

TIP:
- RUBBER Mallet MAY NEED TO
BE USED TO TAP PANELS IN PLACE

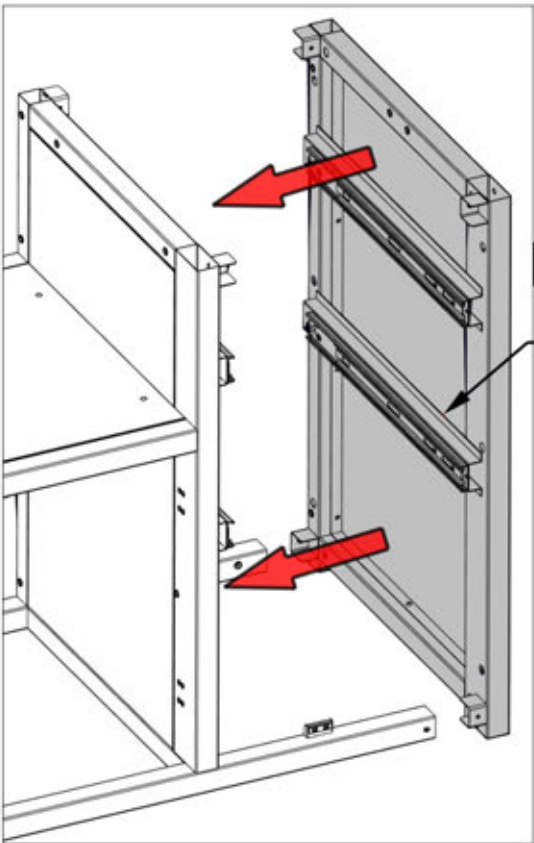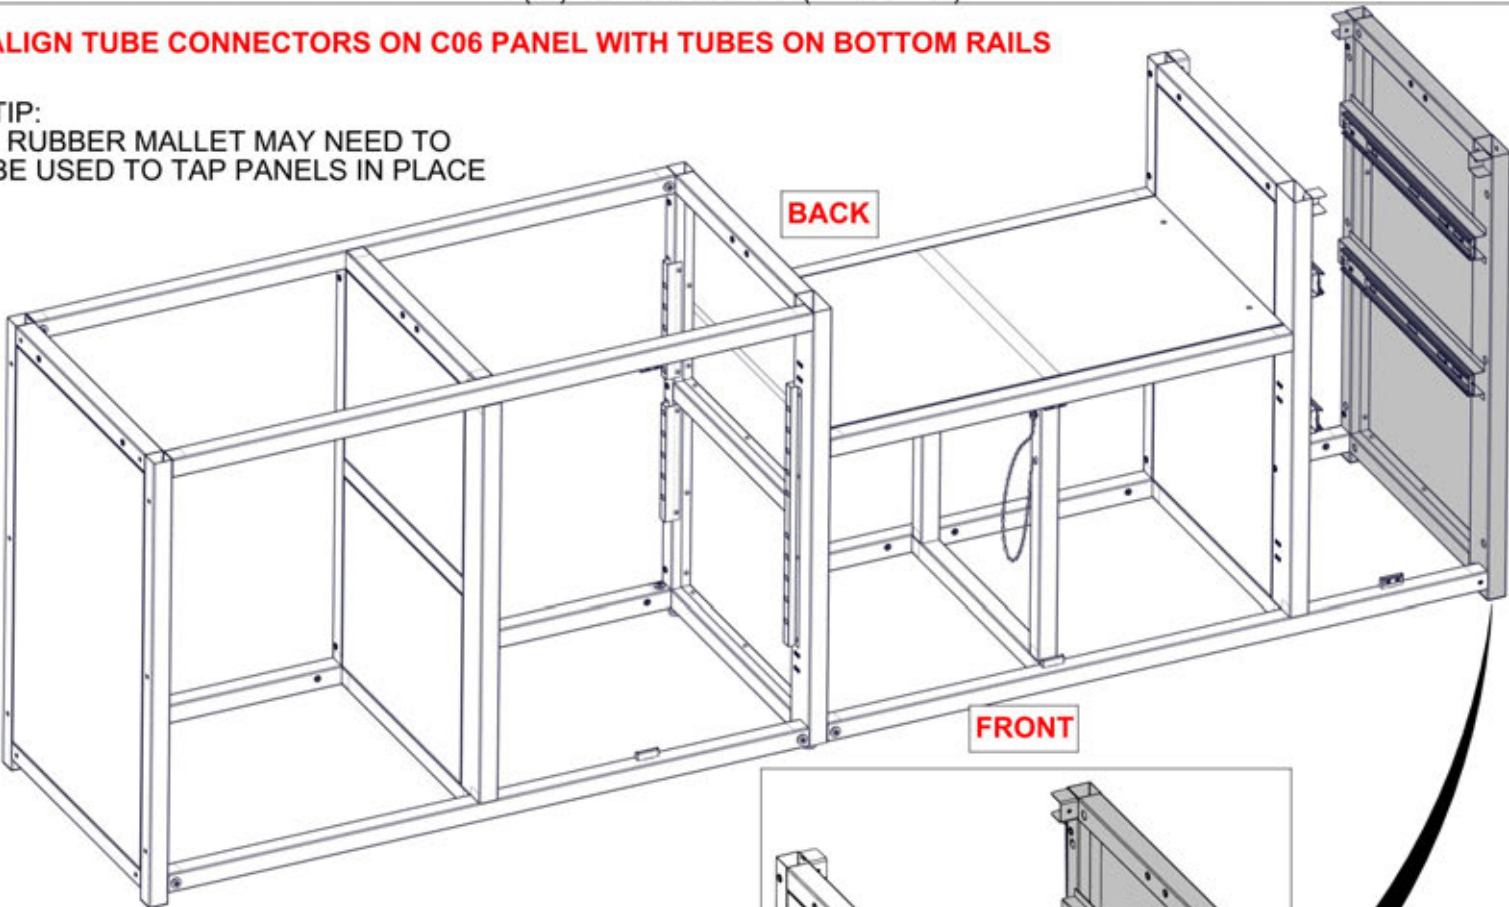


C06 (x1)
CABINET PANEL


STEP 13B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

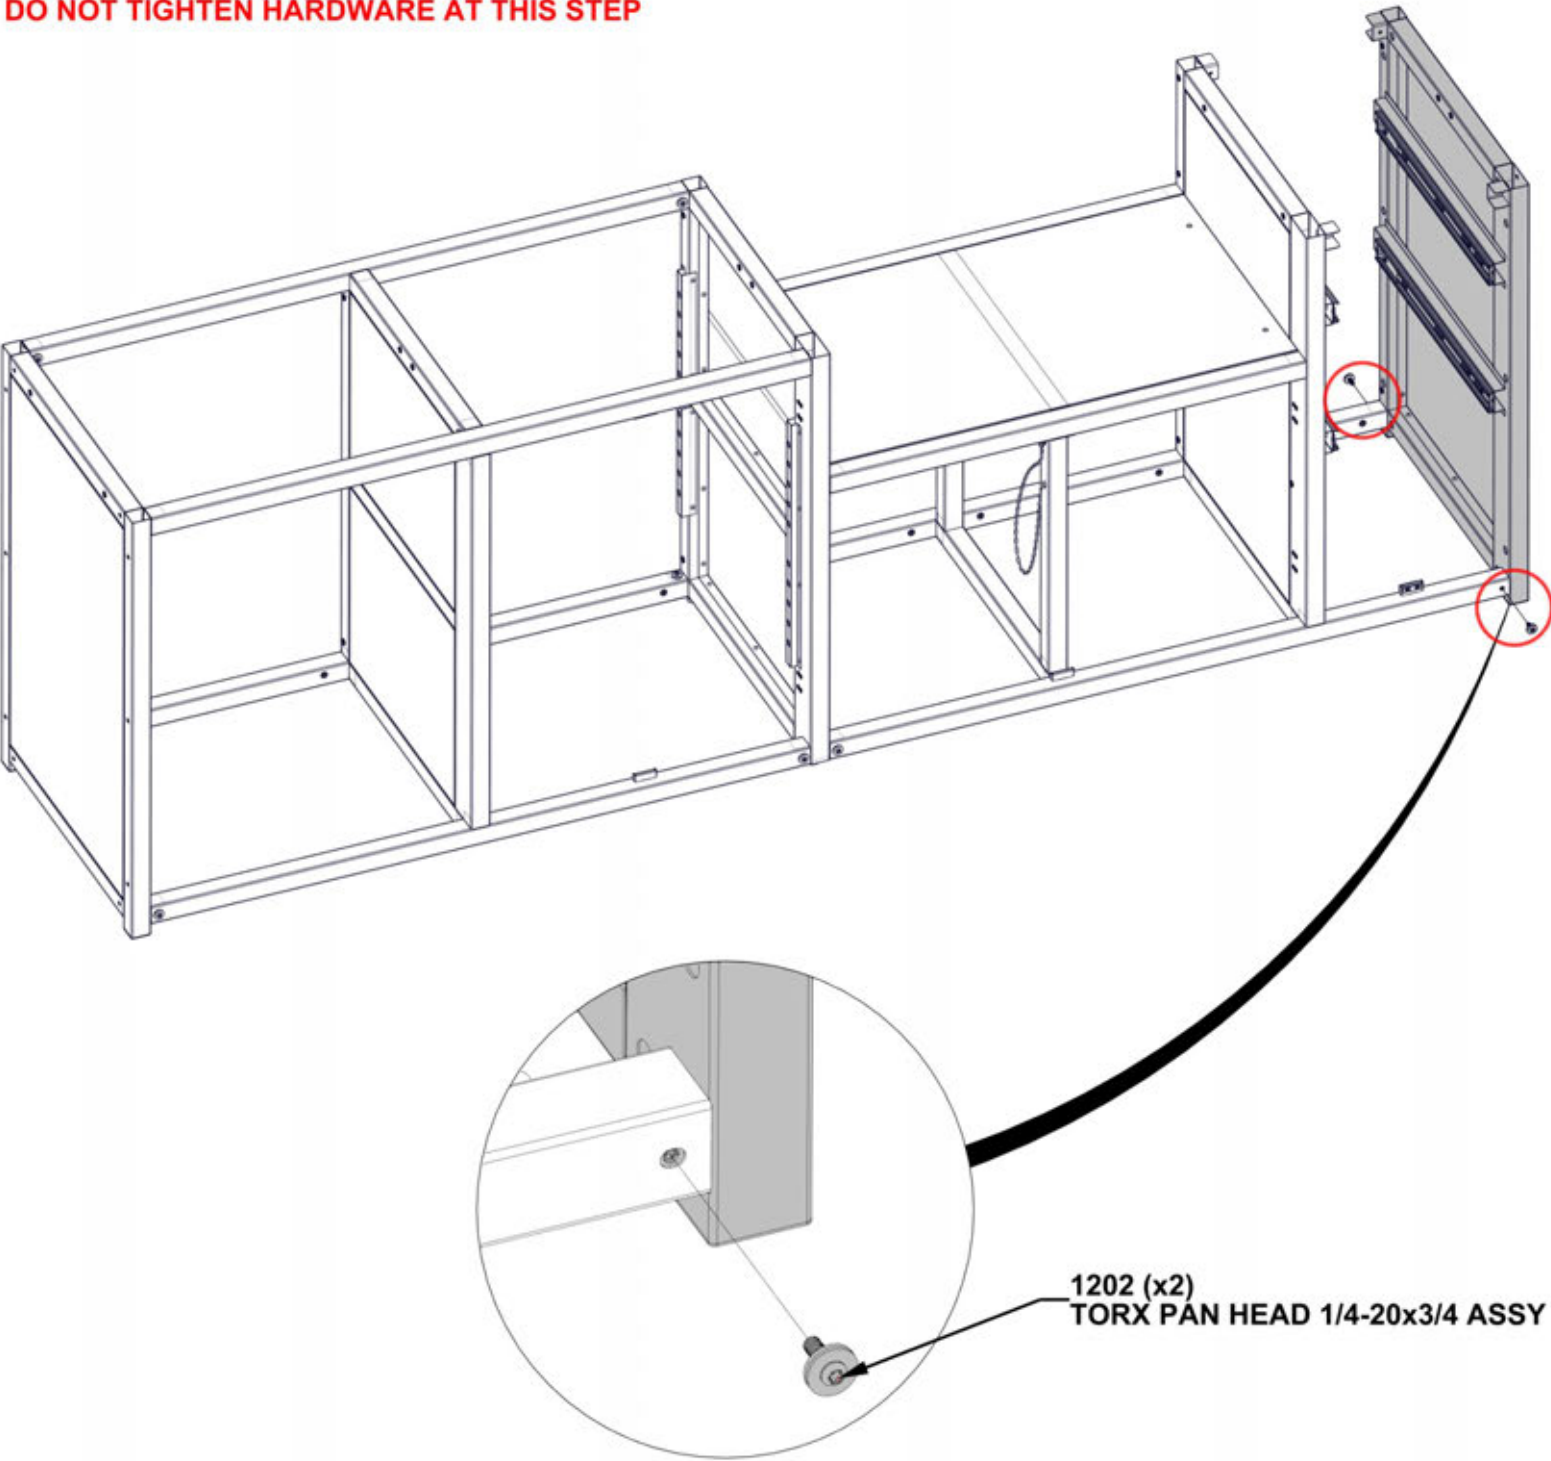

STEP 14A - KITCHEN CABINET ASSEMBLY

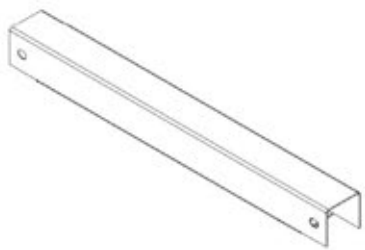


T01 TUBE - A4M02050
(x2) 1 9/16"x1 9/16"x14 7/8" (40x40x378)



PLACE T01 TUBES IN PLACE WITH NOTCH IN BOTTOM OF TUBE FACING DOWN

MAKE SURE SLOT IN TUBES FACE EACH OTHER TOWARDS INSIDE OF CABINET

TIP:
- RUBBER Mallet MAY NEED TO
BE USED TO TAP TUBES IN PLACE

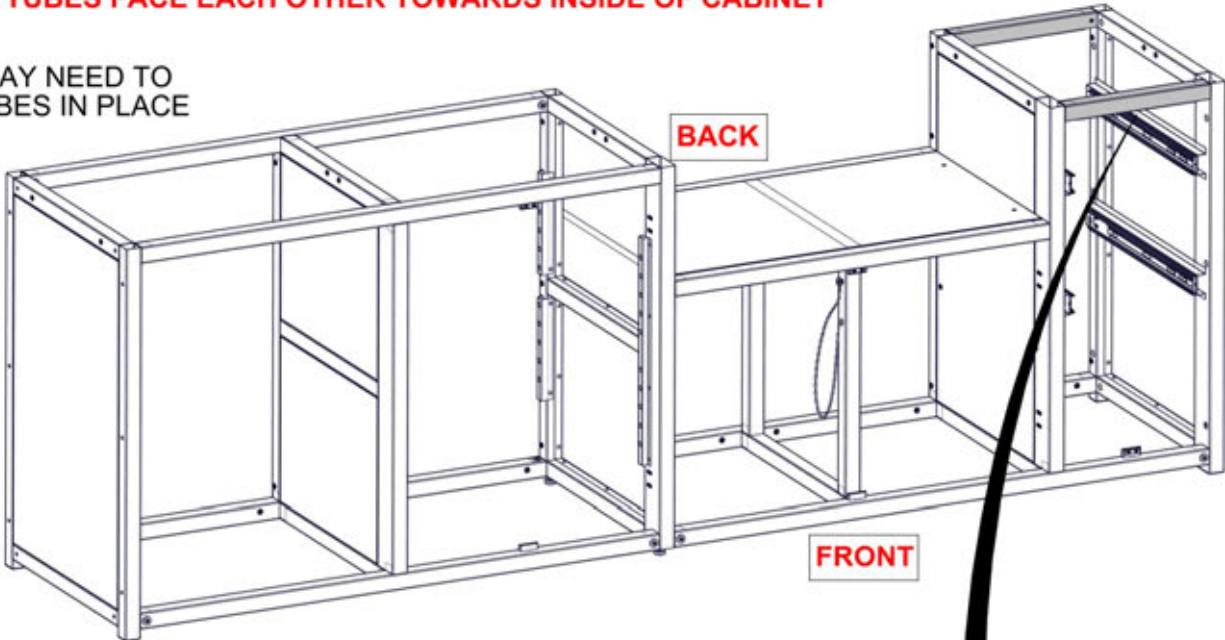


**NOTE: SLOT IN TUBE WILL
ALIGN WITH THREADED HOLE.
MAKE SURE SLOTS ON EACH
TUBE FACE EACH OTHER
TOWARD INSIDE OF CABINET.**

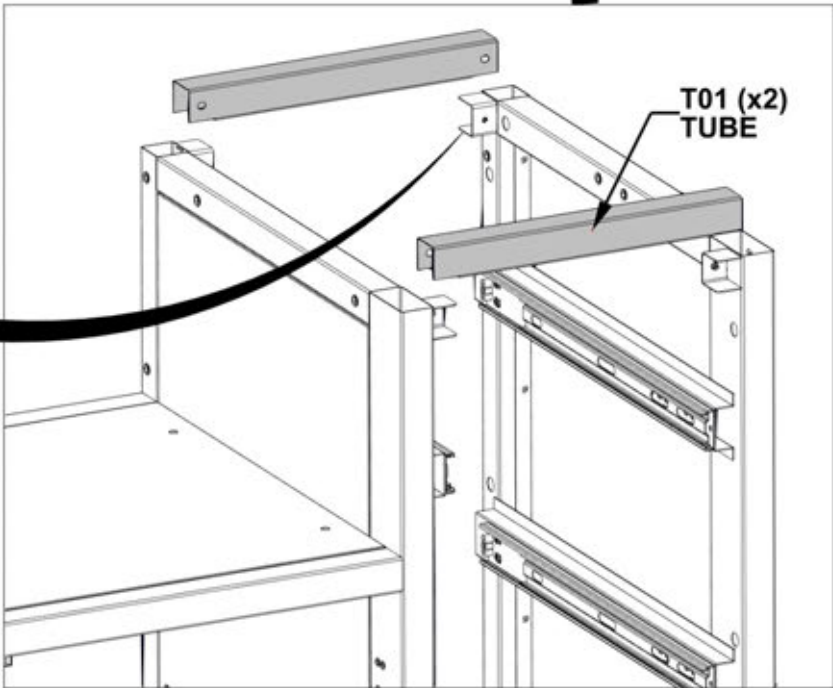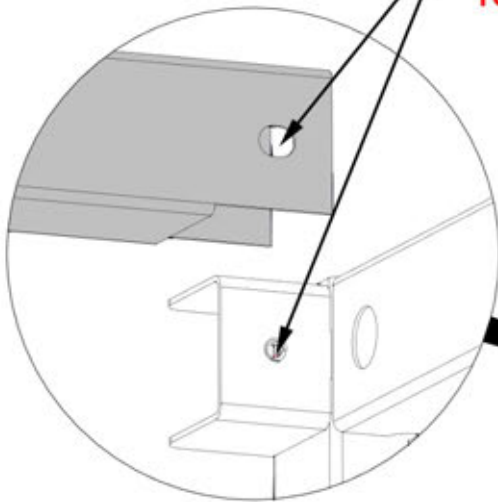

STEP 14B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



DO NOT TIGHTEN HARDWARE AT THIS STEP

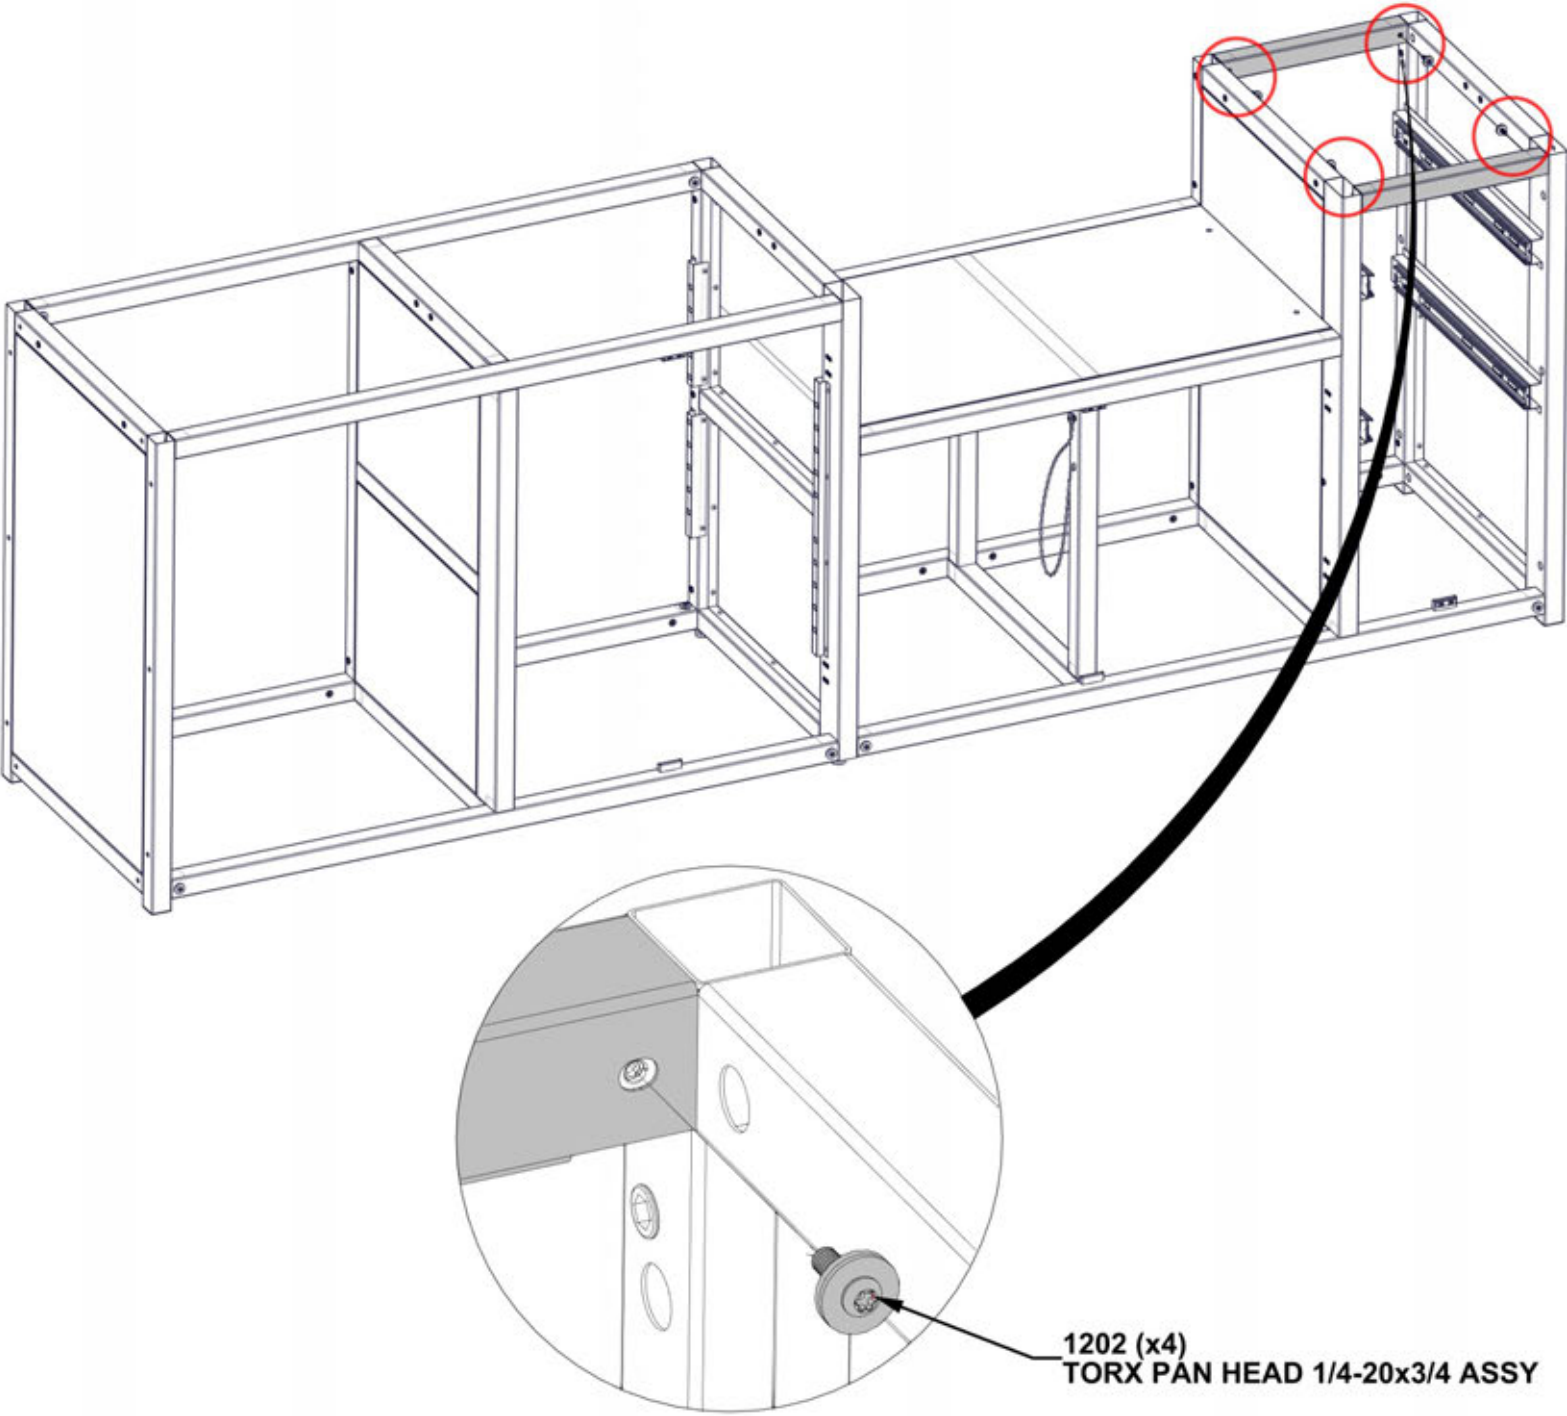

STEP 15 - SQUARE THE ASSEMBLY

**CRITICAL: SQUARE KITCHEN CABINETS BEFORE PROCEEDING TO NEXT STEPS.
ONCE SQUARE, TIGHTEN ALL HARWARE FROM PREVIOUS STEPS.**

MEASUREMENTS TAKEN FROM OUTSIDE CORNER OF CABINET TO OUTSIDE CORNER OF CABINET.

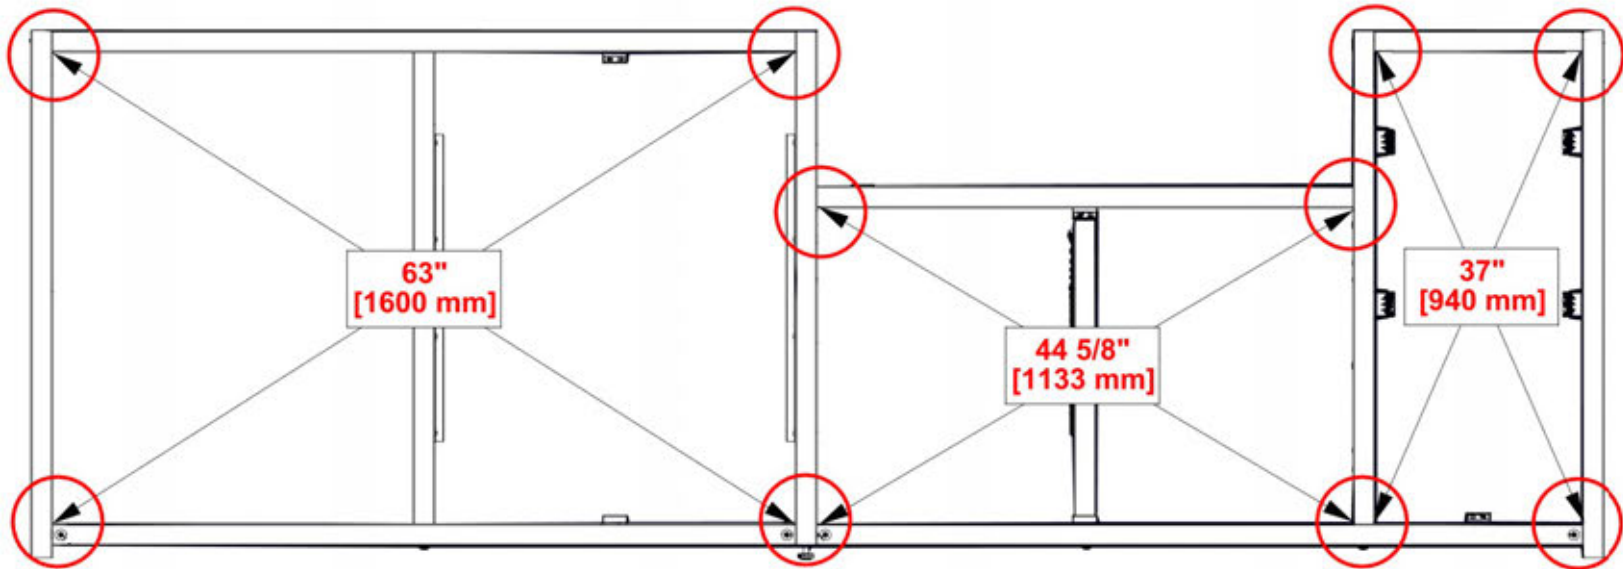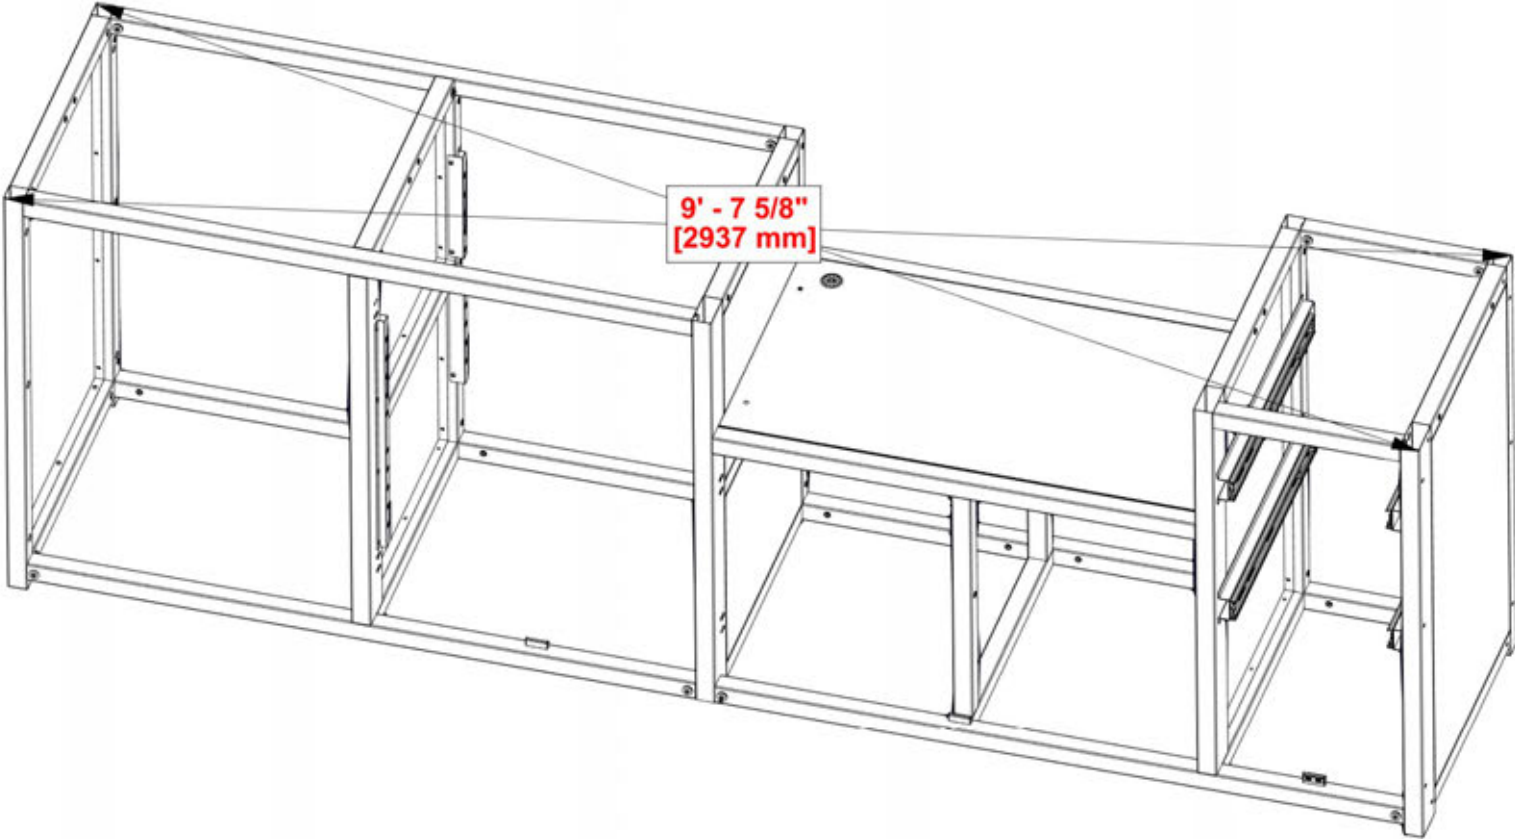


**CRITICAL: SQUARE ALL CABINET OPENINGS TO ENSURE PROPER DOOR,
COUTERTOP, AND DRAWER FITMENT**

**BEFORE PROCEEDING, MAKE SURE ALL HARDWARE
IS TIGHT AND KITCHEN CABINETS ARE SQUARE.**

STEP 16 - POST ASSEMBLY


QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

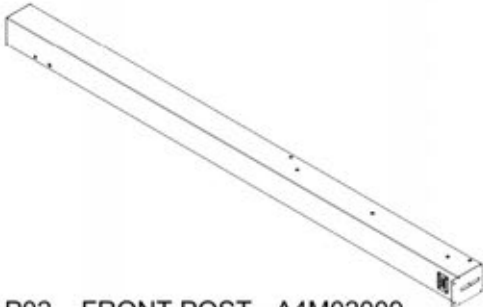

P02 FRONT POST - A4M02009
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)




A01 BRACKET - A4M02018
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

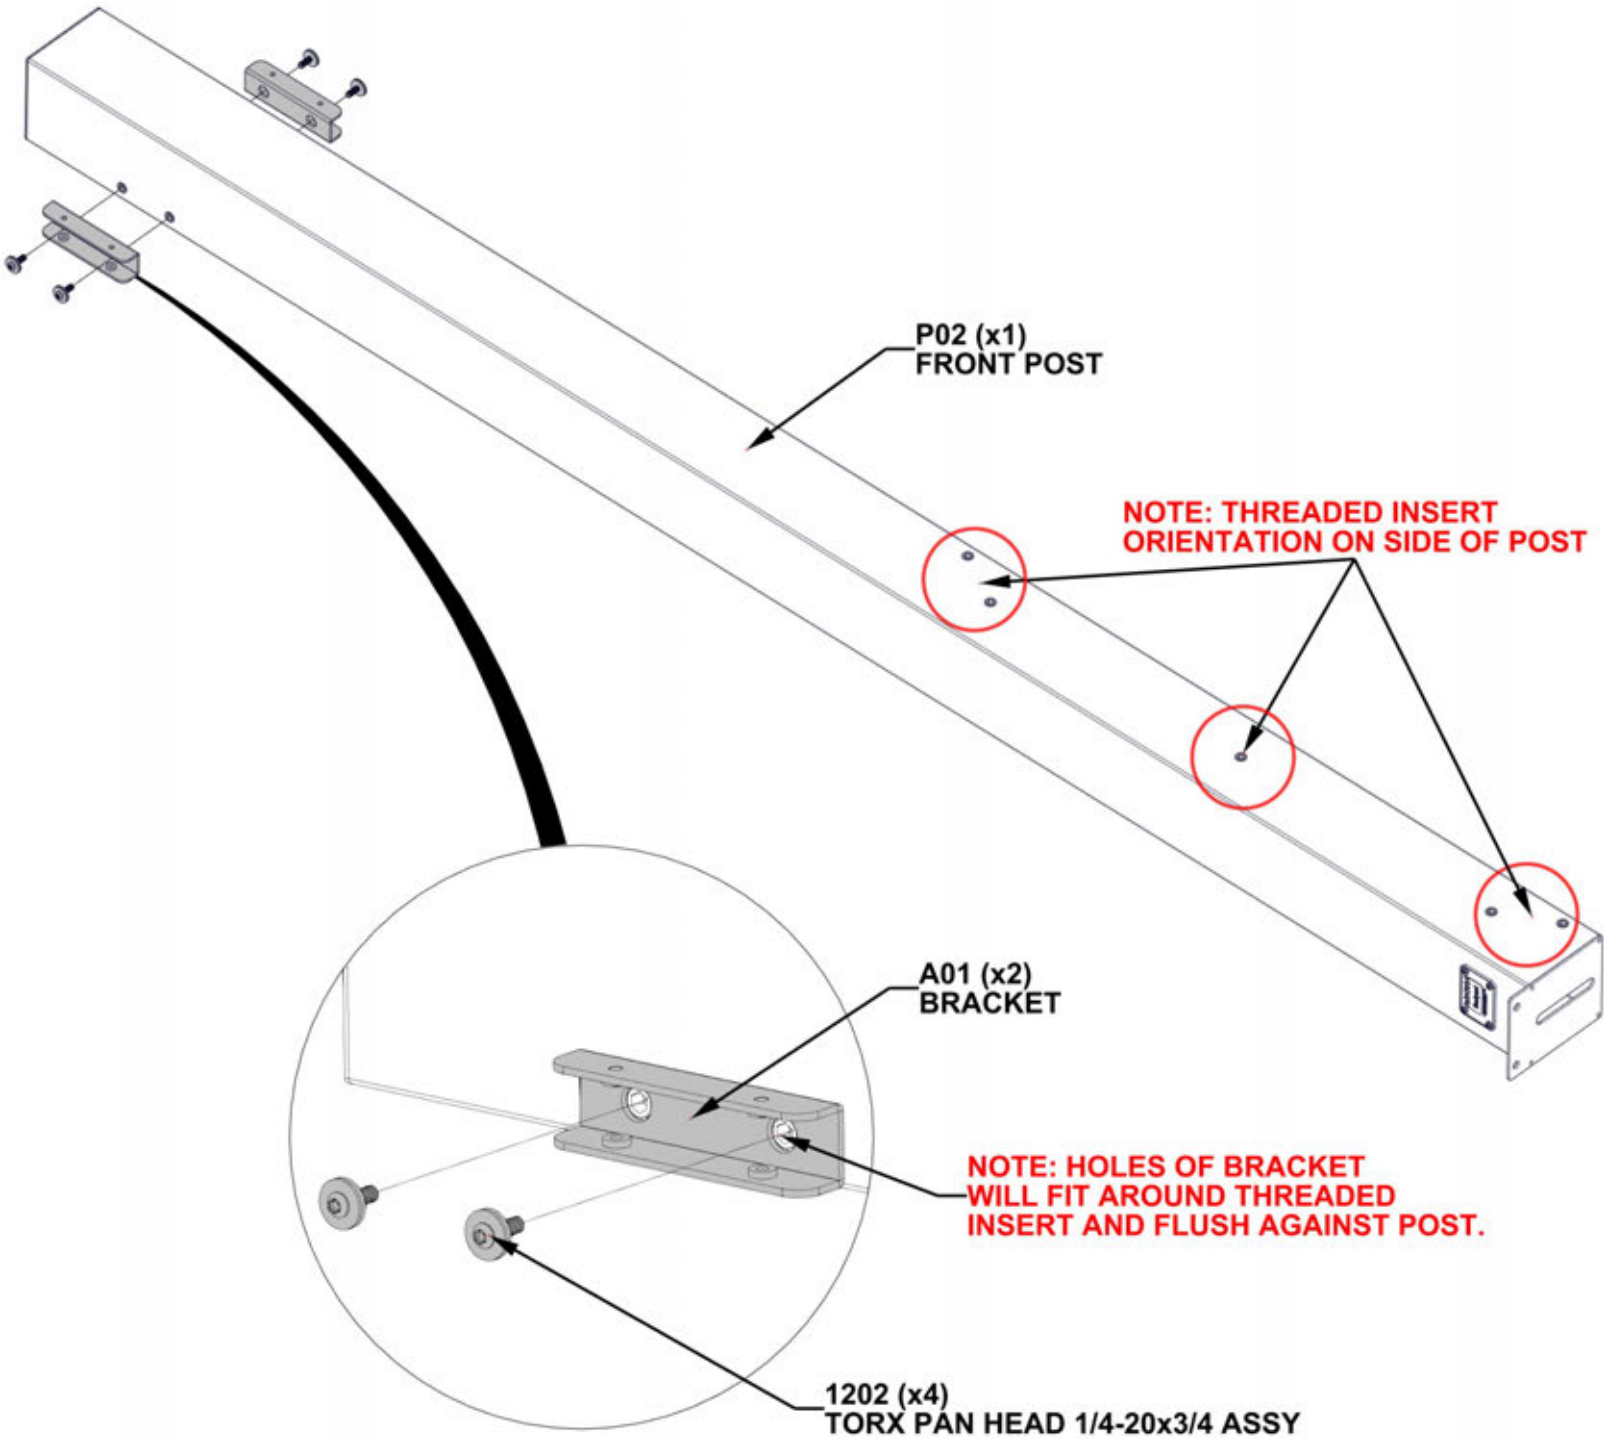

STEP 17 - POST ASSEMBLY


QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

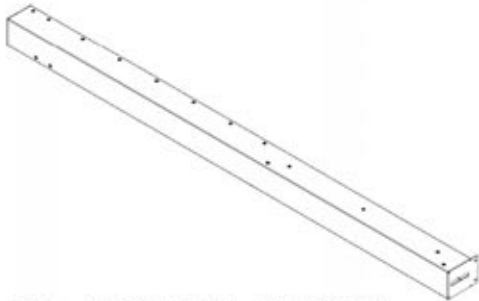

P03 BACK POST - A4M02010
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)




A01 BRACKET - A4M02018
(x1) 1"x1 5/16"x5 1/16" (25x33.2x128)

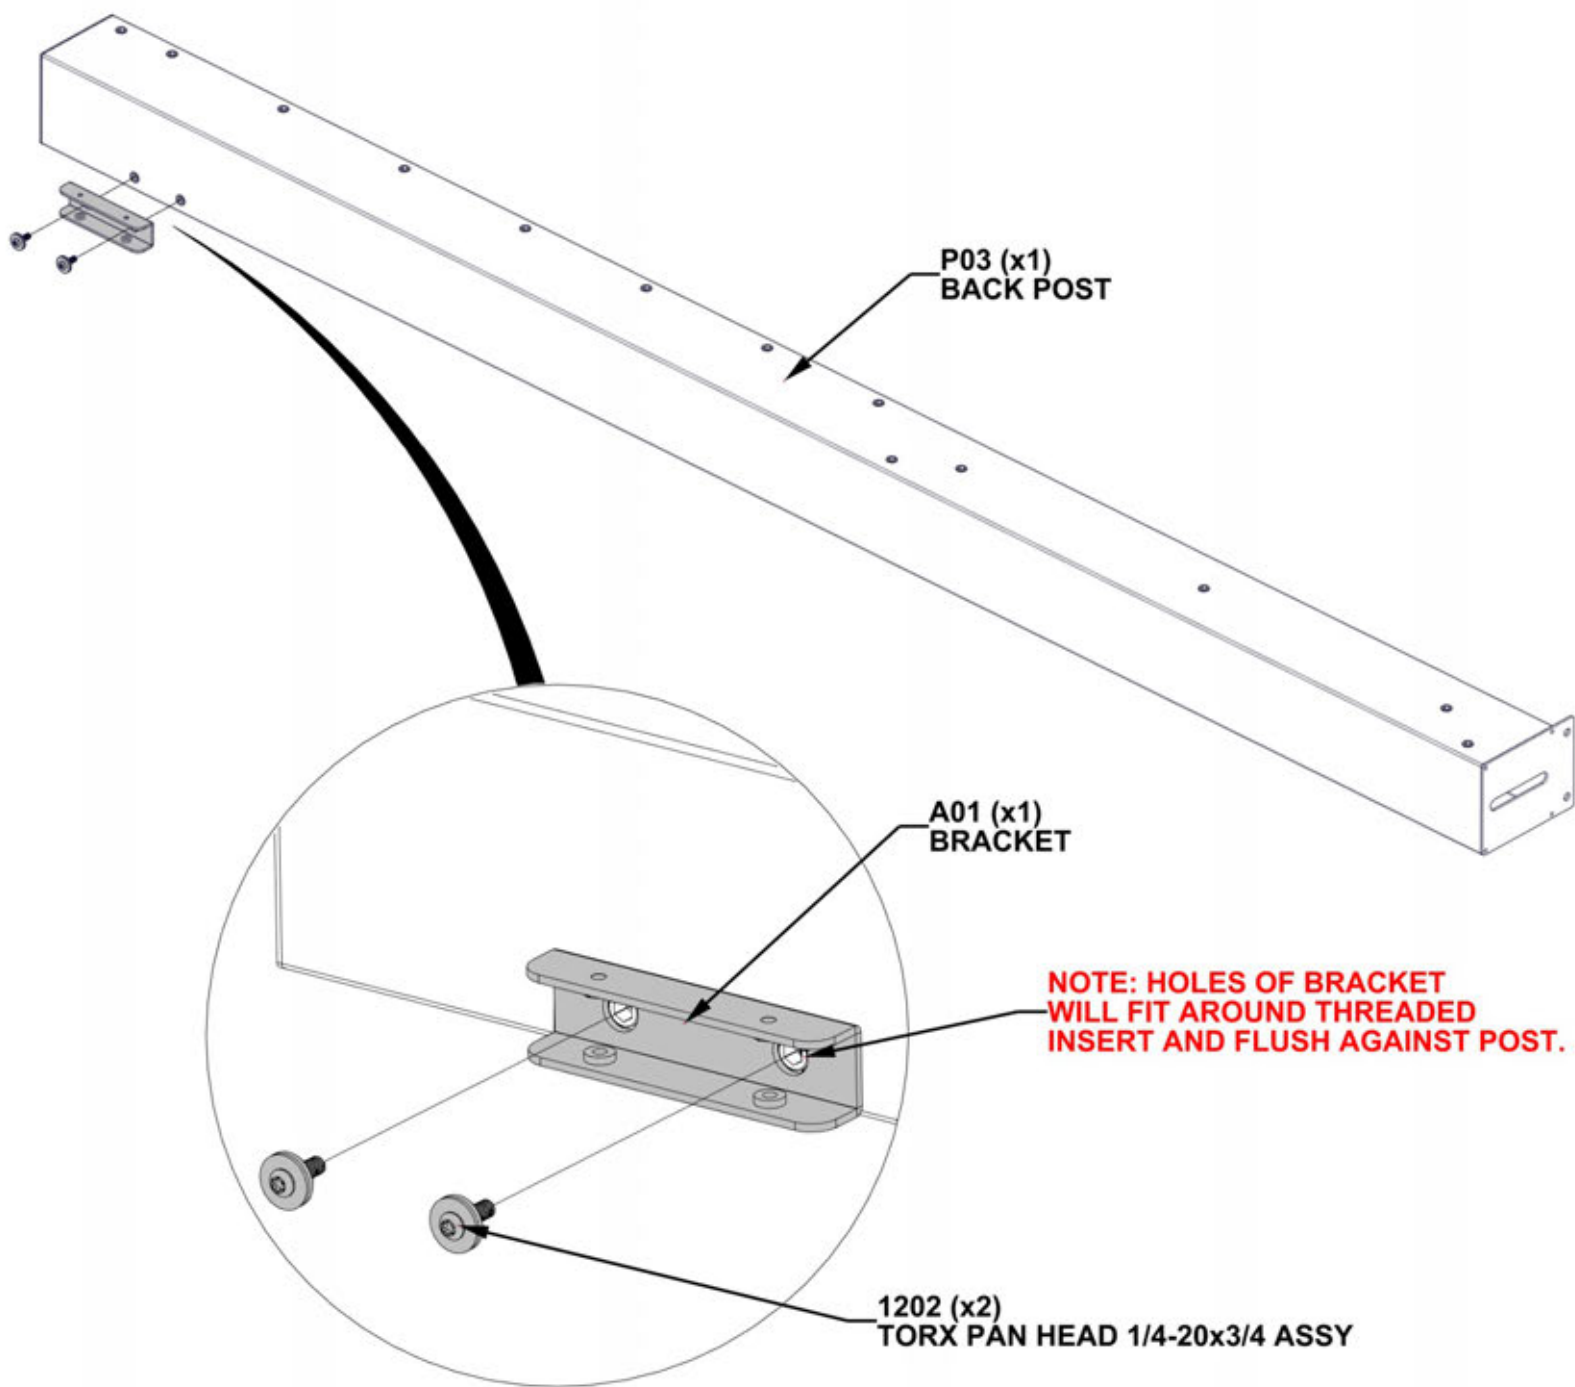

STEP 18 - POST ASSEMBLY


QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

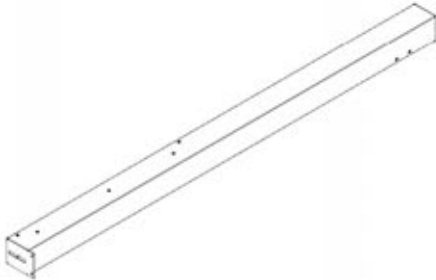

P01 FRONT POST - A4M02008
(x1) 4 3/4"x5 15/16"x89 1/2" (120x151x2274)




A01 BRACKET - A4M02018
(x2) 1"x1 5/16"x5 1/16" (25x33.2x128)

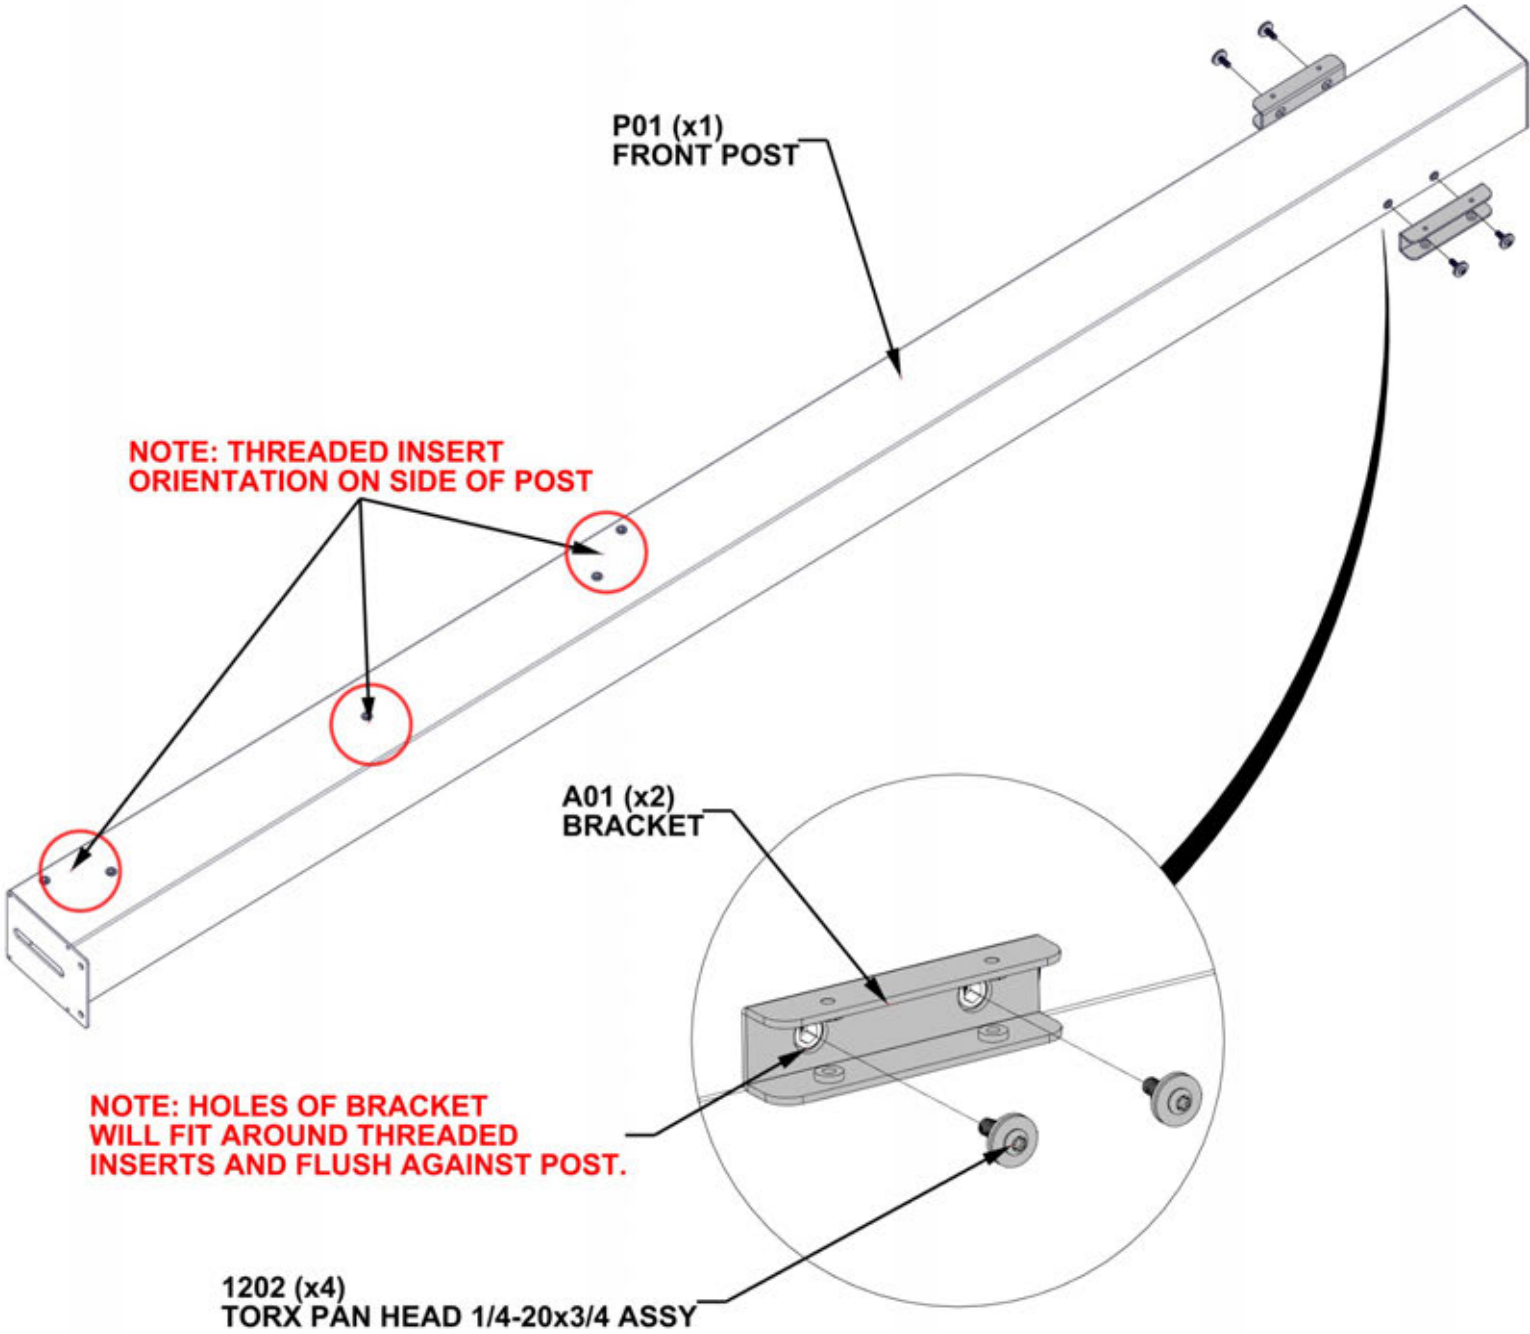

STEP 19 - POST ASSEMBLY


QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

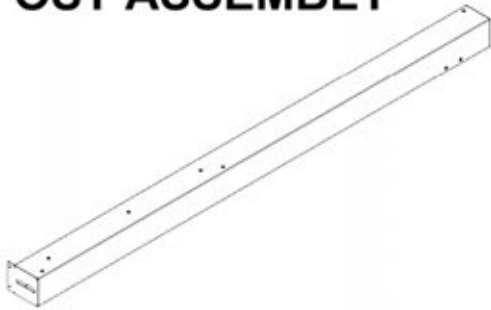


P04 BACK POST - A4M02011
(x1) 4 3/4"x5 15/16"x88 3/4" (120x151x2254)




A01 BRACKET - A4M02018
(x1) 1"x1 5/16"x5 1/16" (25x33.2x128)

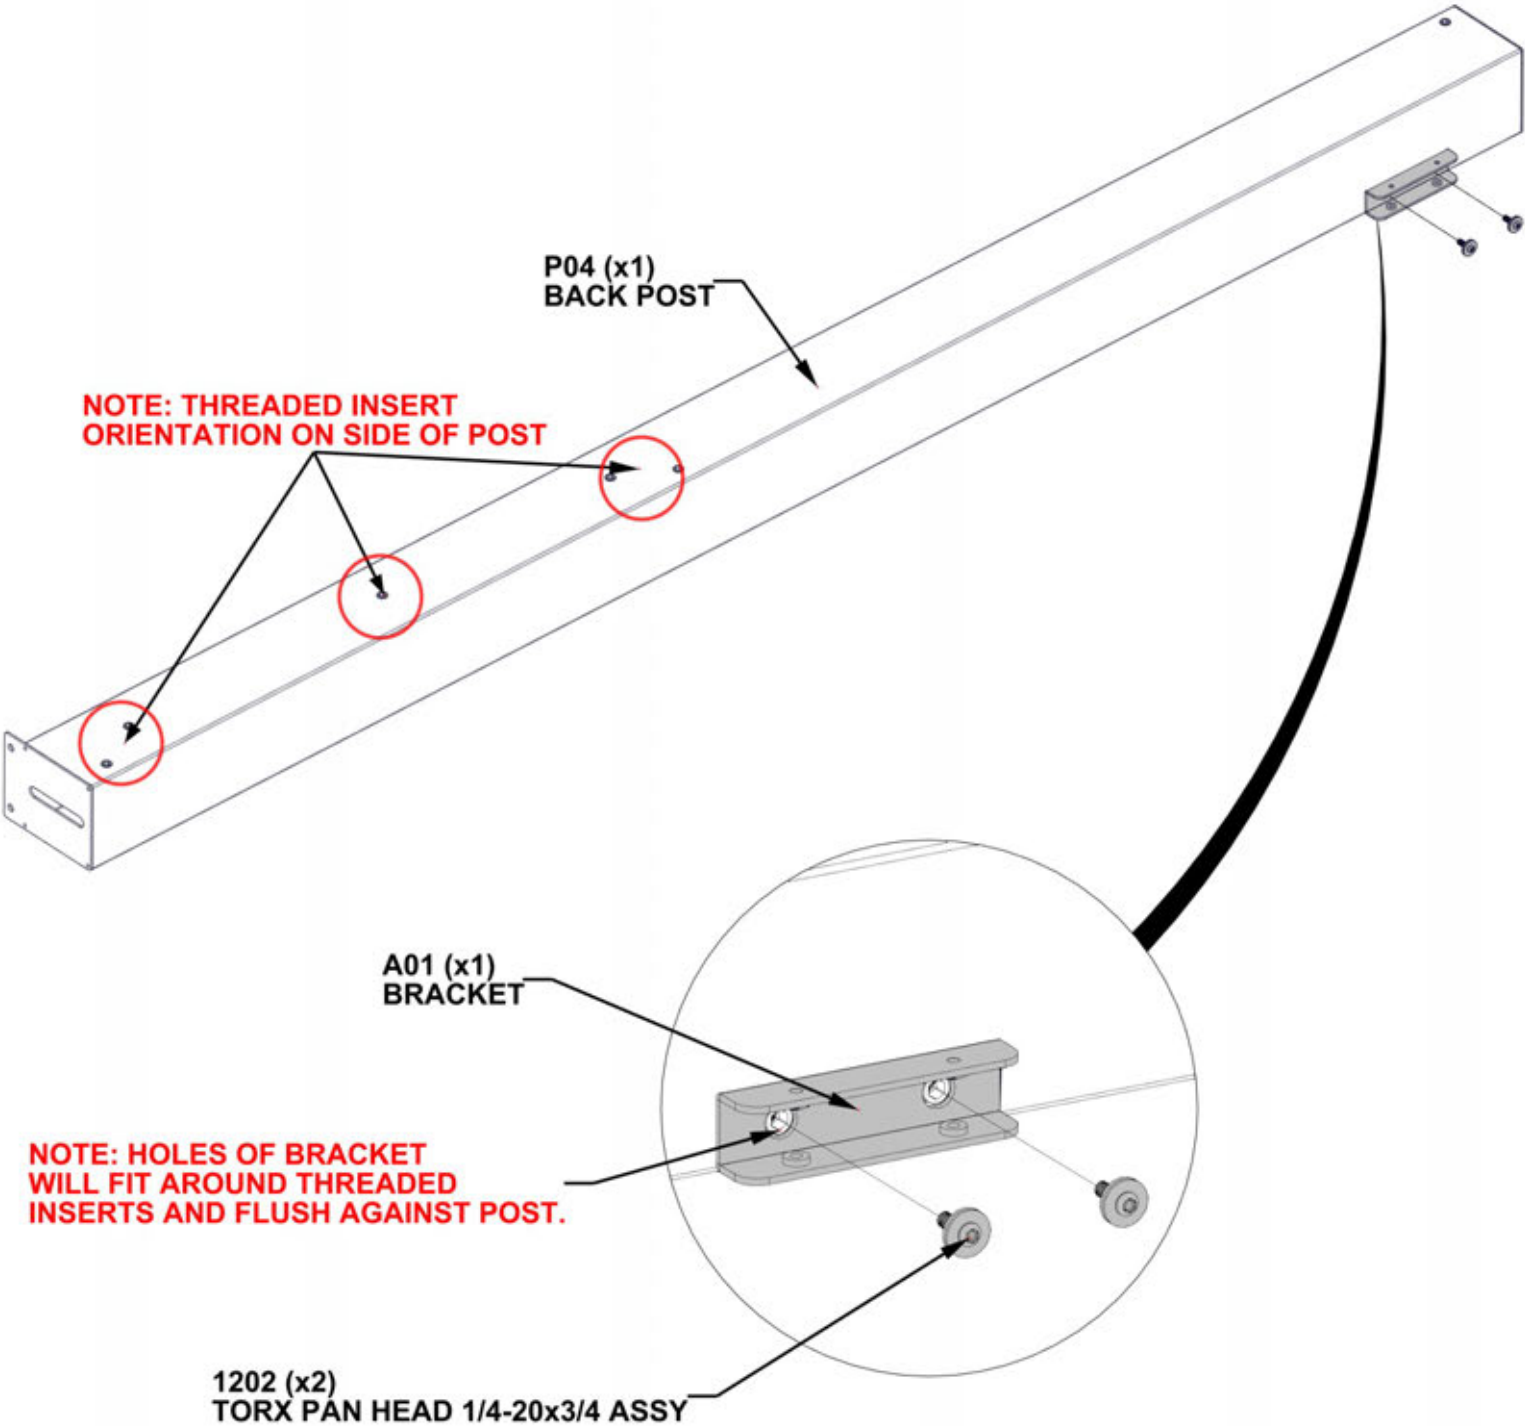

STEP 20 - KITCHEN ASSEMBLY

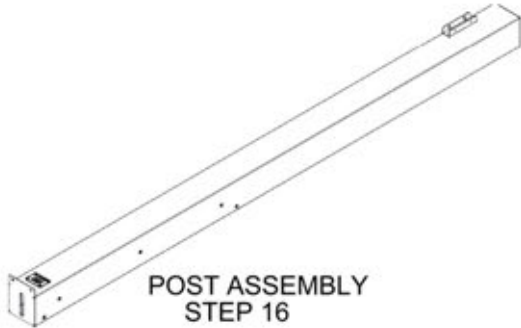

QTY	PART NUMBER	Description
5	H101103	TORX SOCKET SCREW 1/4-20

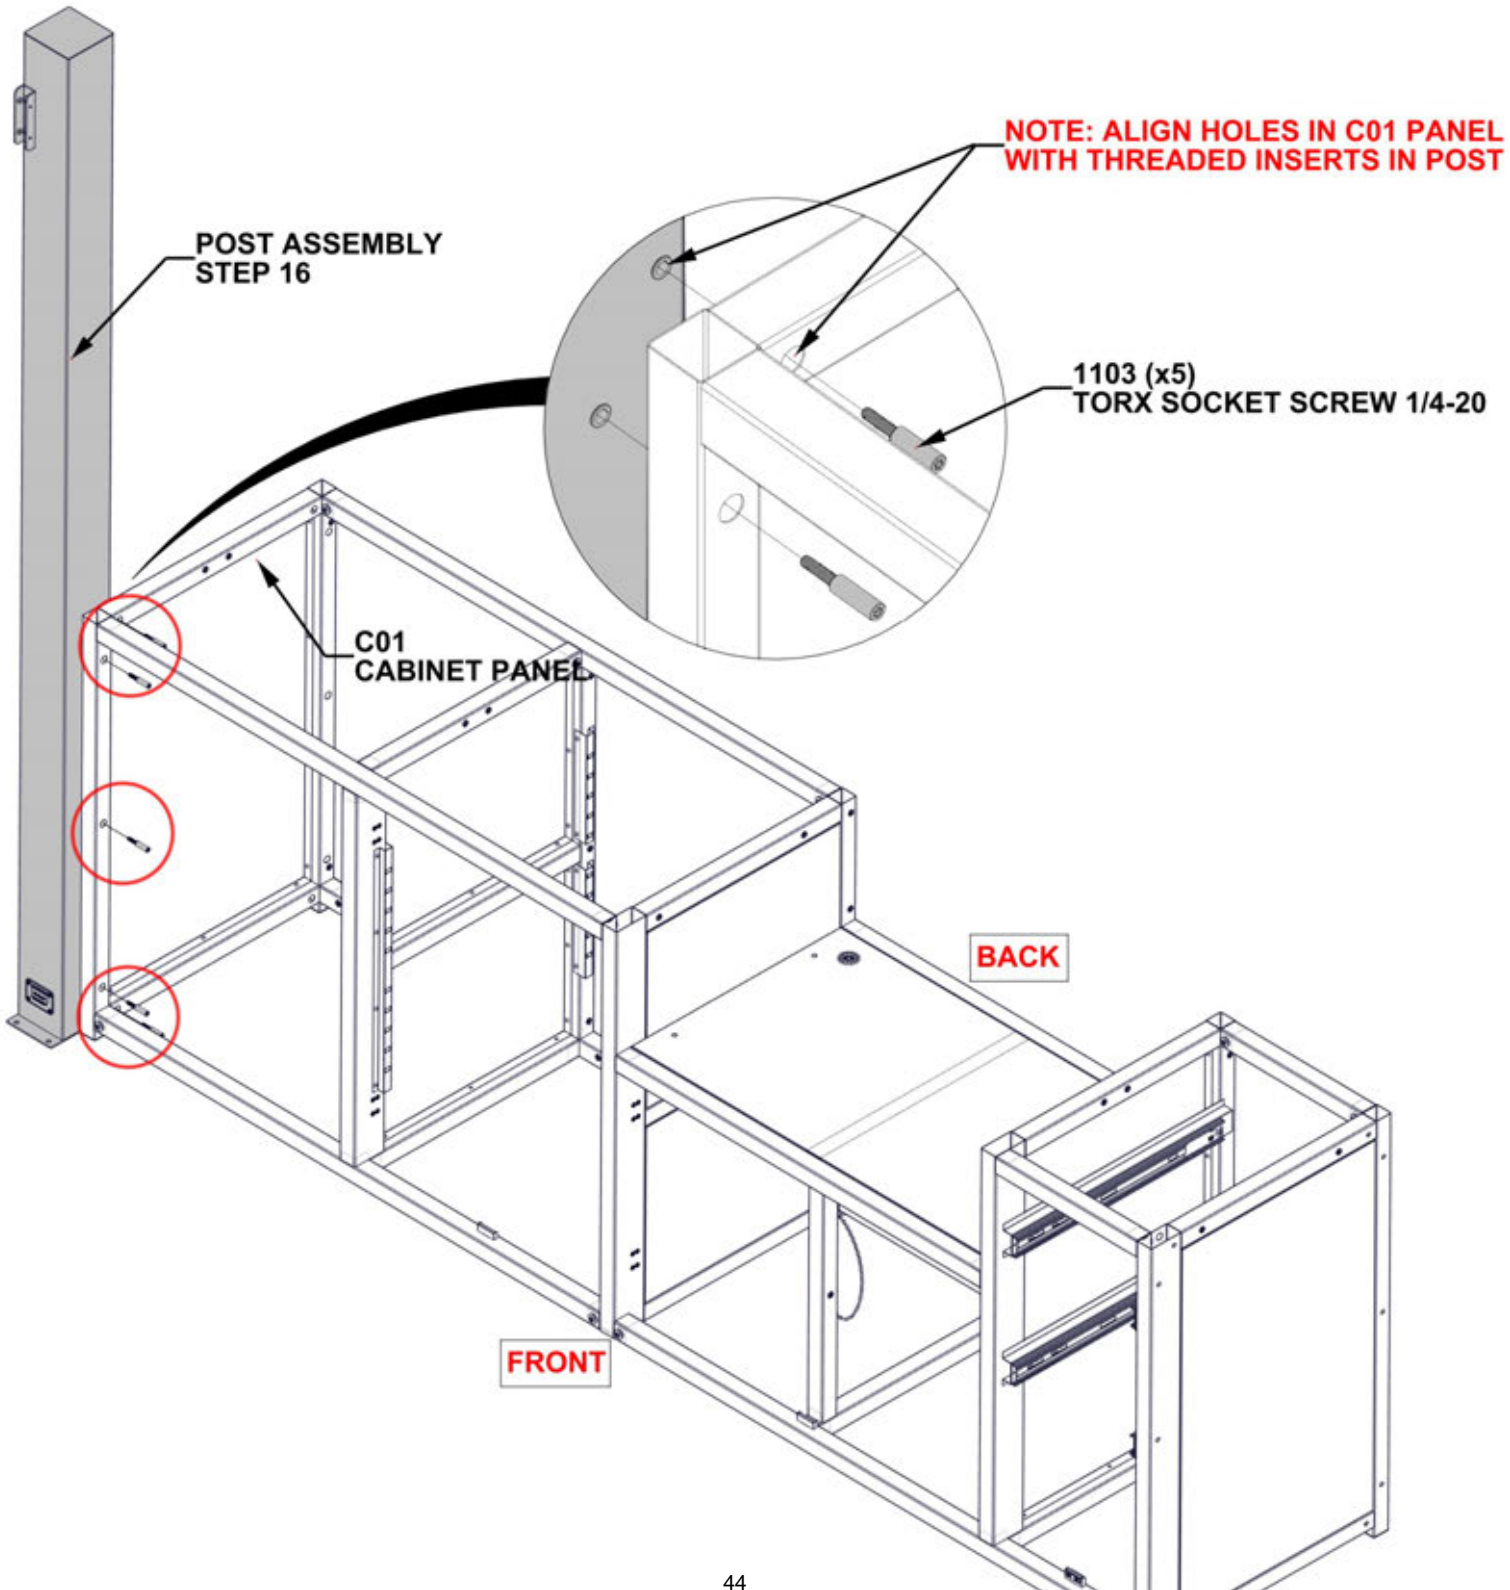


STEP 21 - KITCHEN ASSEMBLY




QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

B04 SIDE BEAM - A4M02019
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)

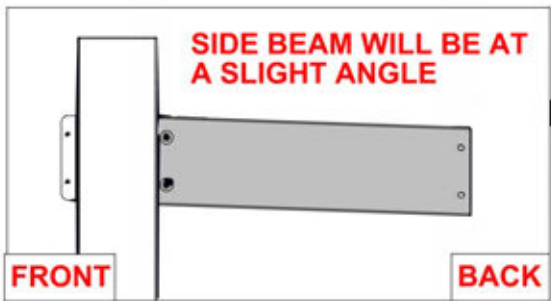

SLIDE BEAM ON TO
POST BRACKET


B04 (x1)
SIDE BEAM

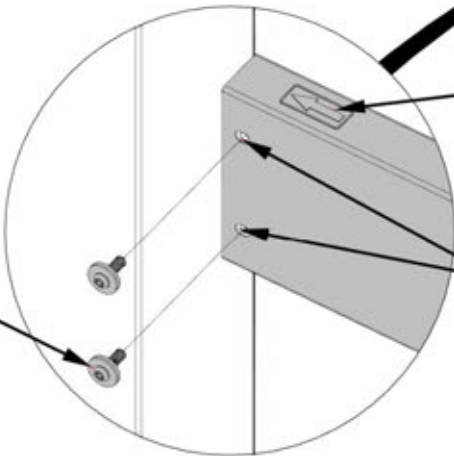


NOTE: ARROW ON
TOP OF SIDE BEAM
TOWARDS FRONT

NOTE: ALIGN HOLES
IN B04 BEAM WITH
THREADED HOLES
IN POST BRACKET


1202 (x2)
TORX PAN HEAD
1/4-20x3/4 ASSY

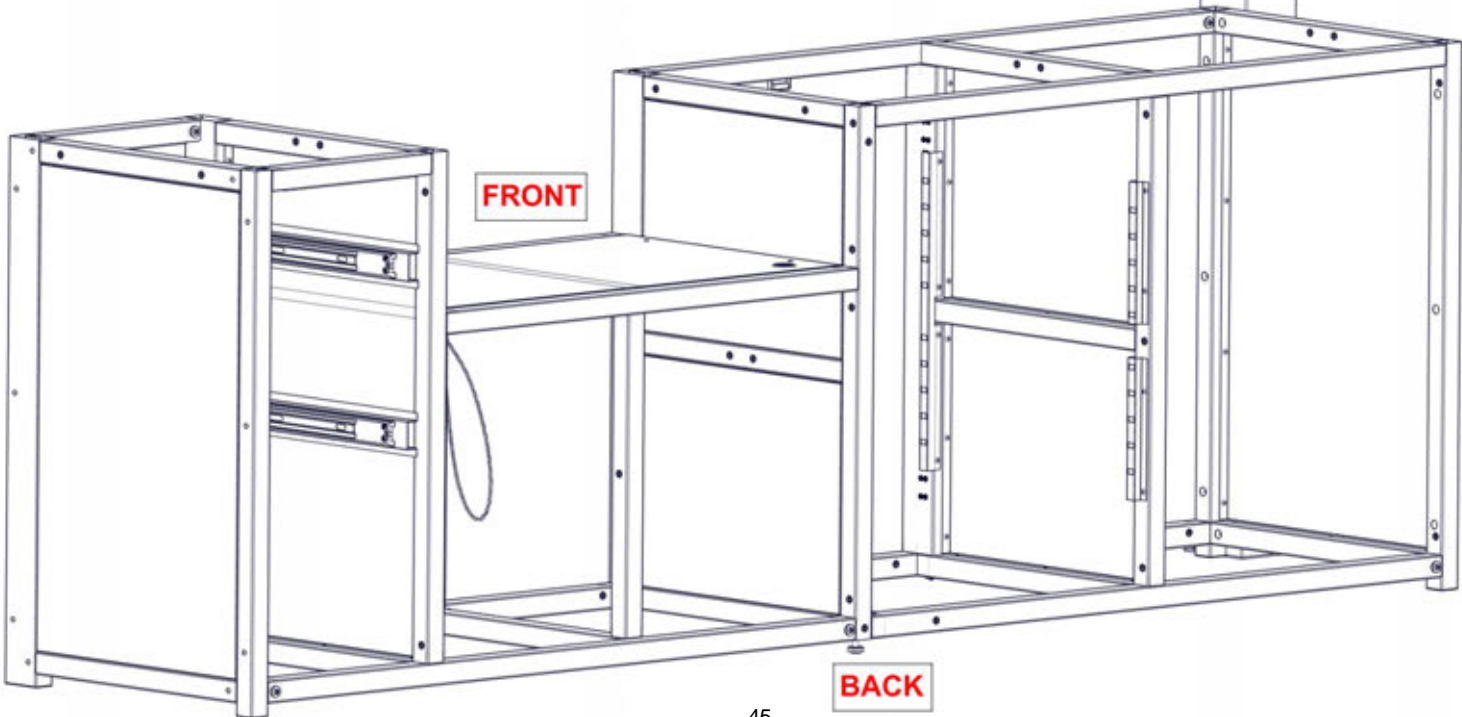


STEP 22 - KITCHEN ASSEMBLY

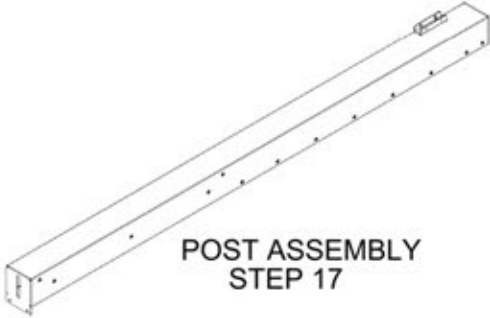


QTY	PART NUMBER	Description
5	H101103	TORX SOCKET SCREW 1/4-20
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

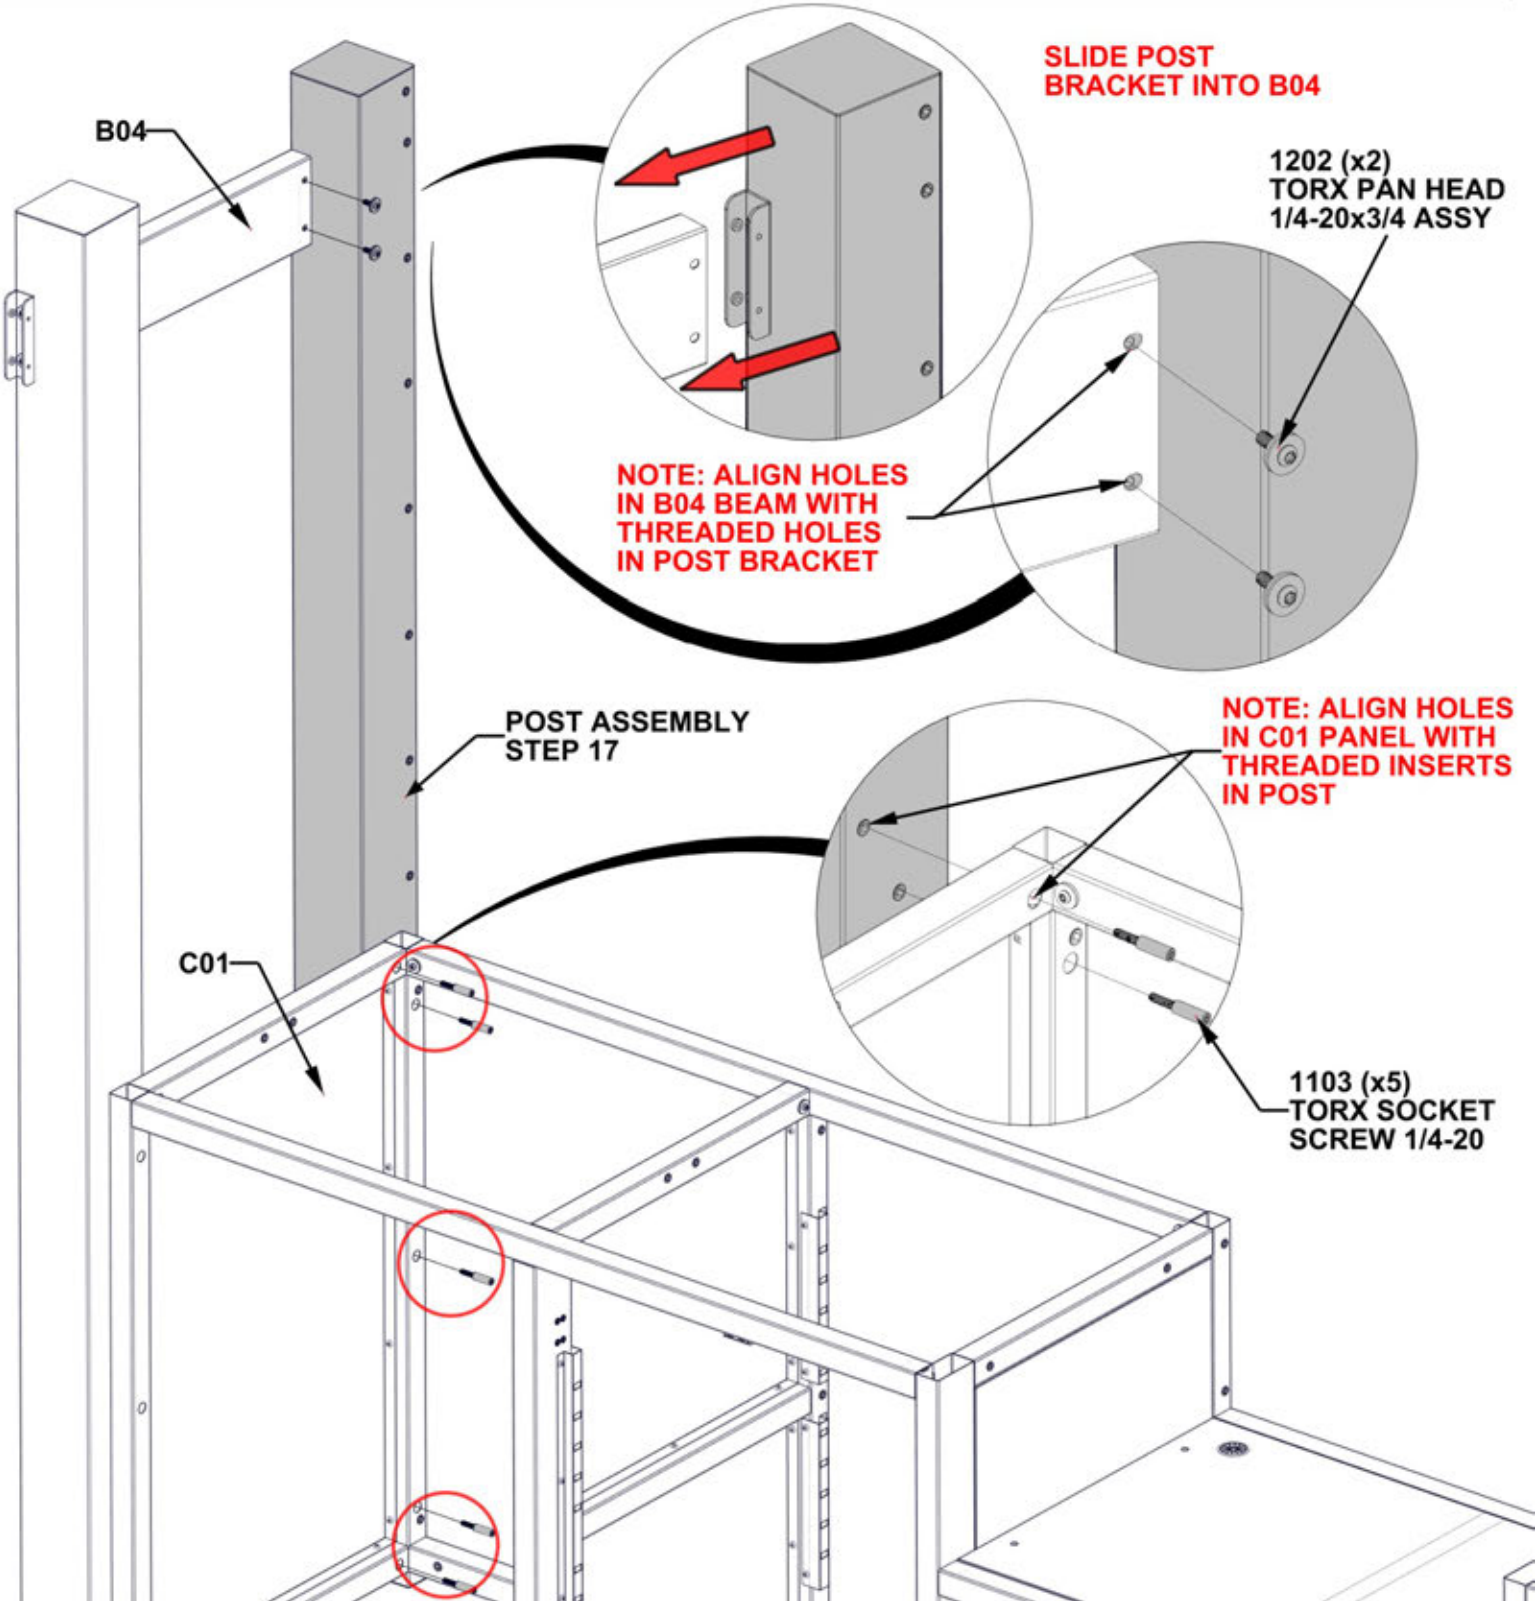

STEP 23 - KITCHEN ASSEMBLY

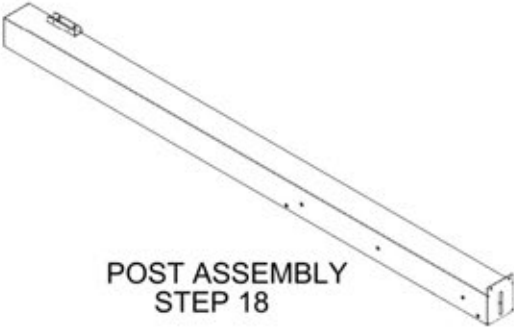

QTY	PART NUMBER	Description
5	H101103	TORX SOCKET SCREW 1/4-20

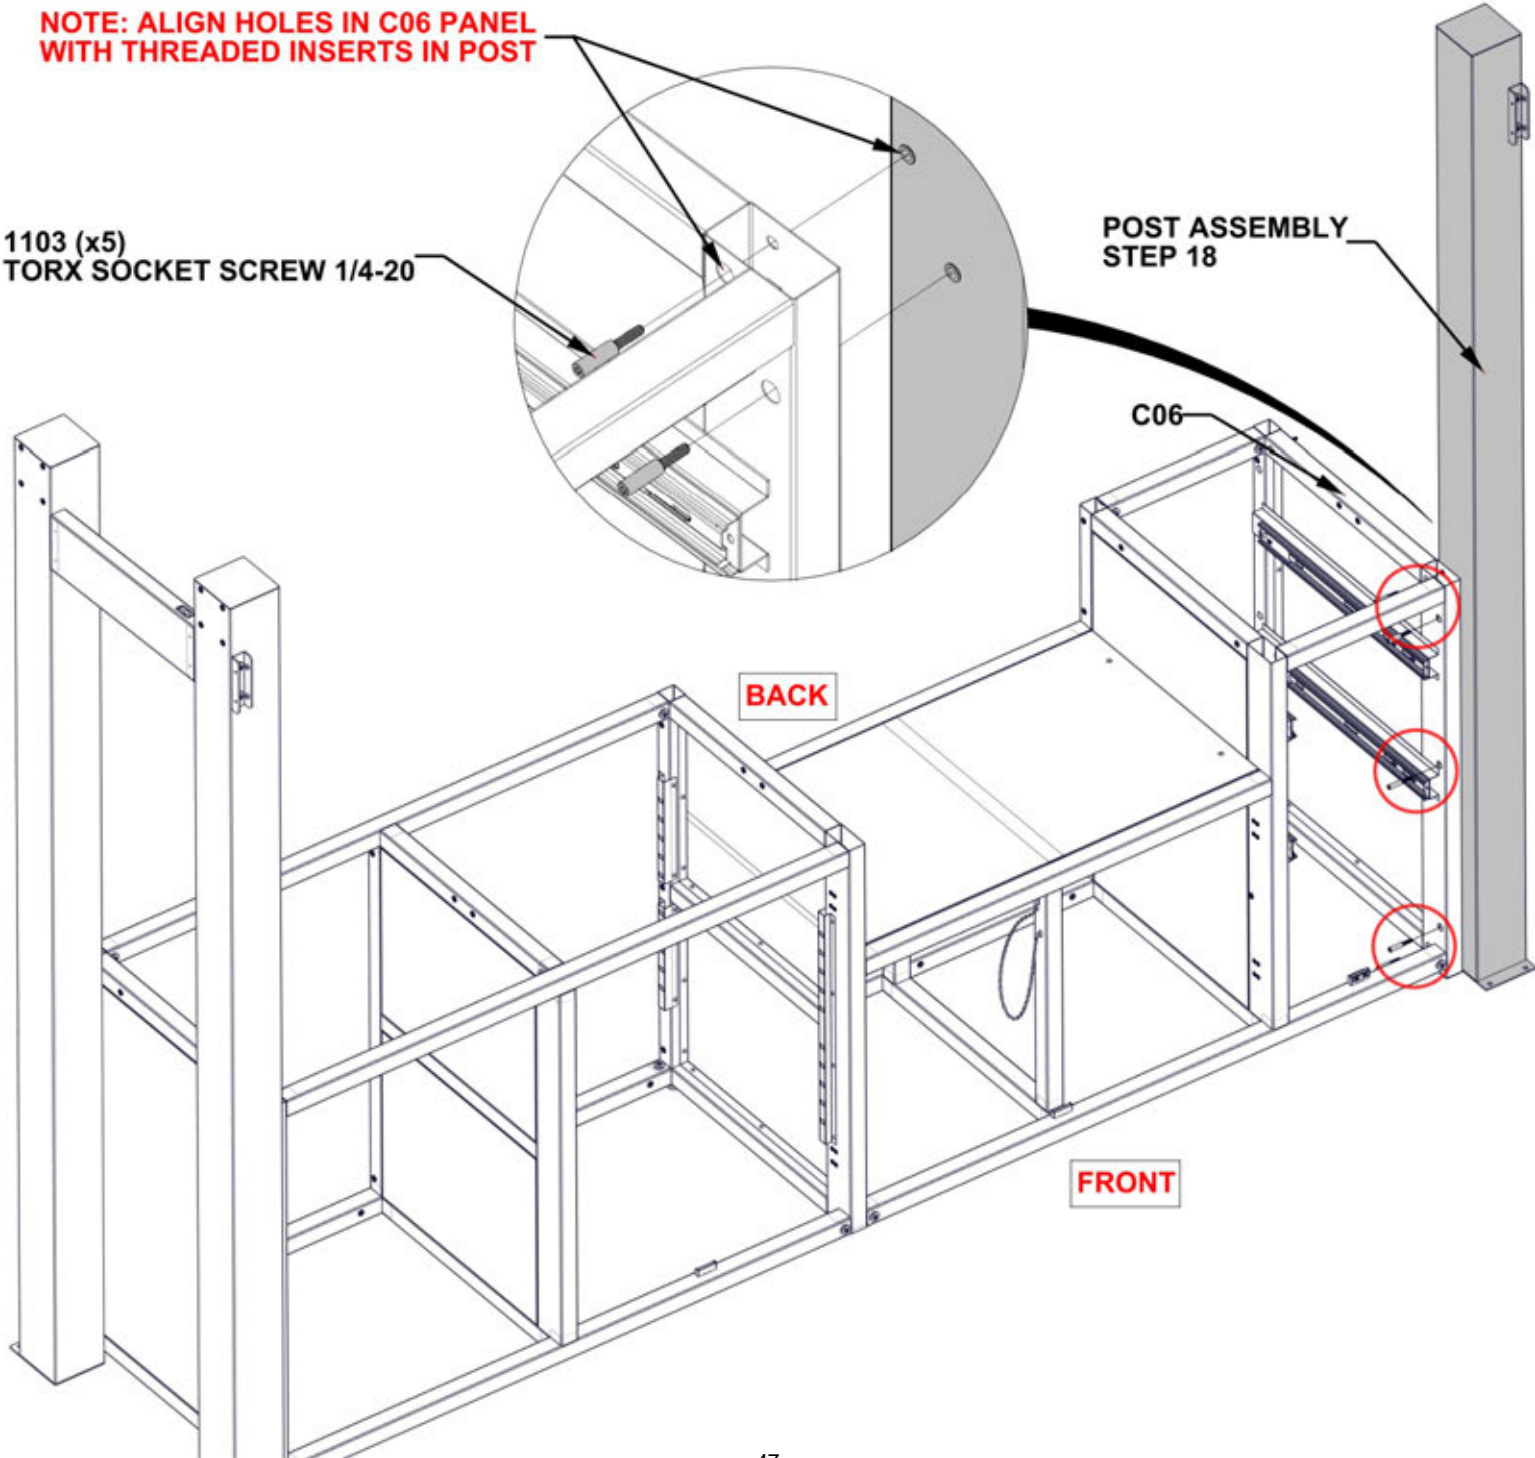


STEP 24 - KITCHEN ASSEMBLY




QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


B11 SIDE BEAM - A4M02106
(x1) 1 7/16"x5 1/4"x18 7/8" (36x134x480)

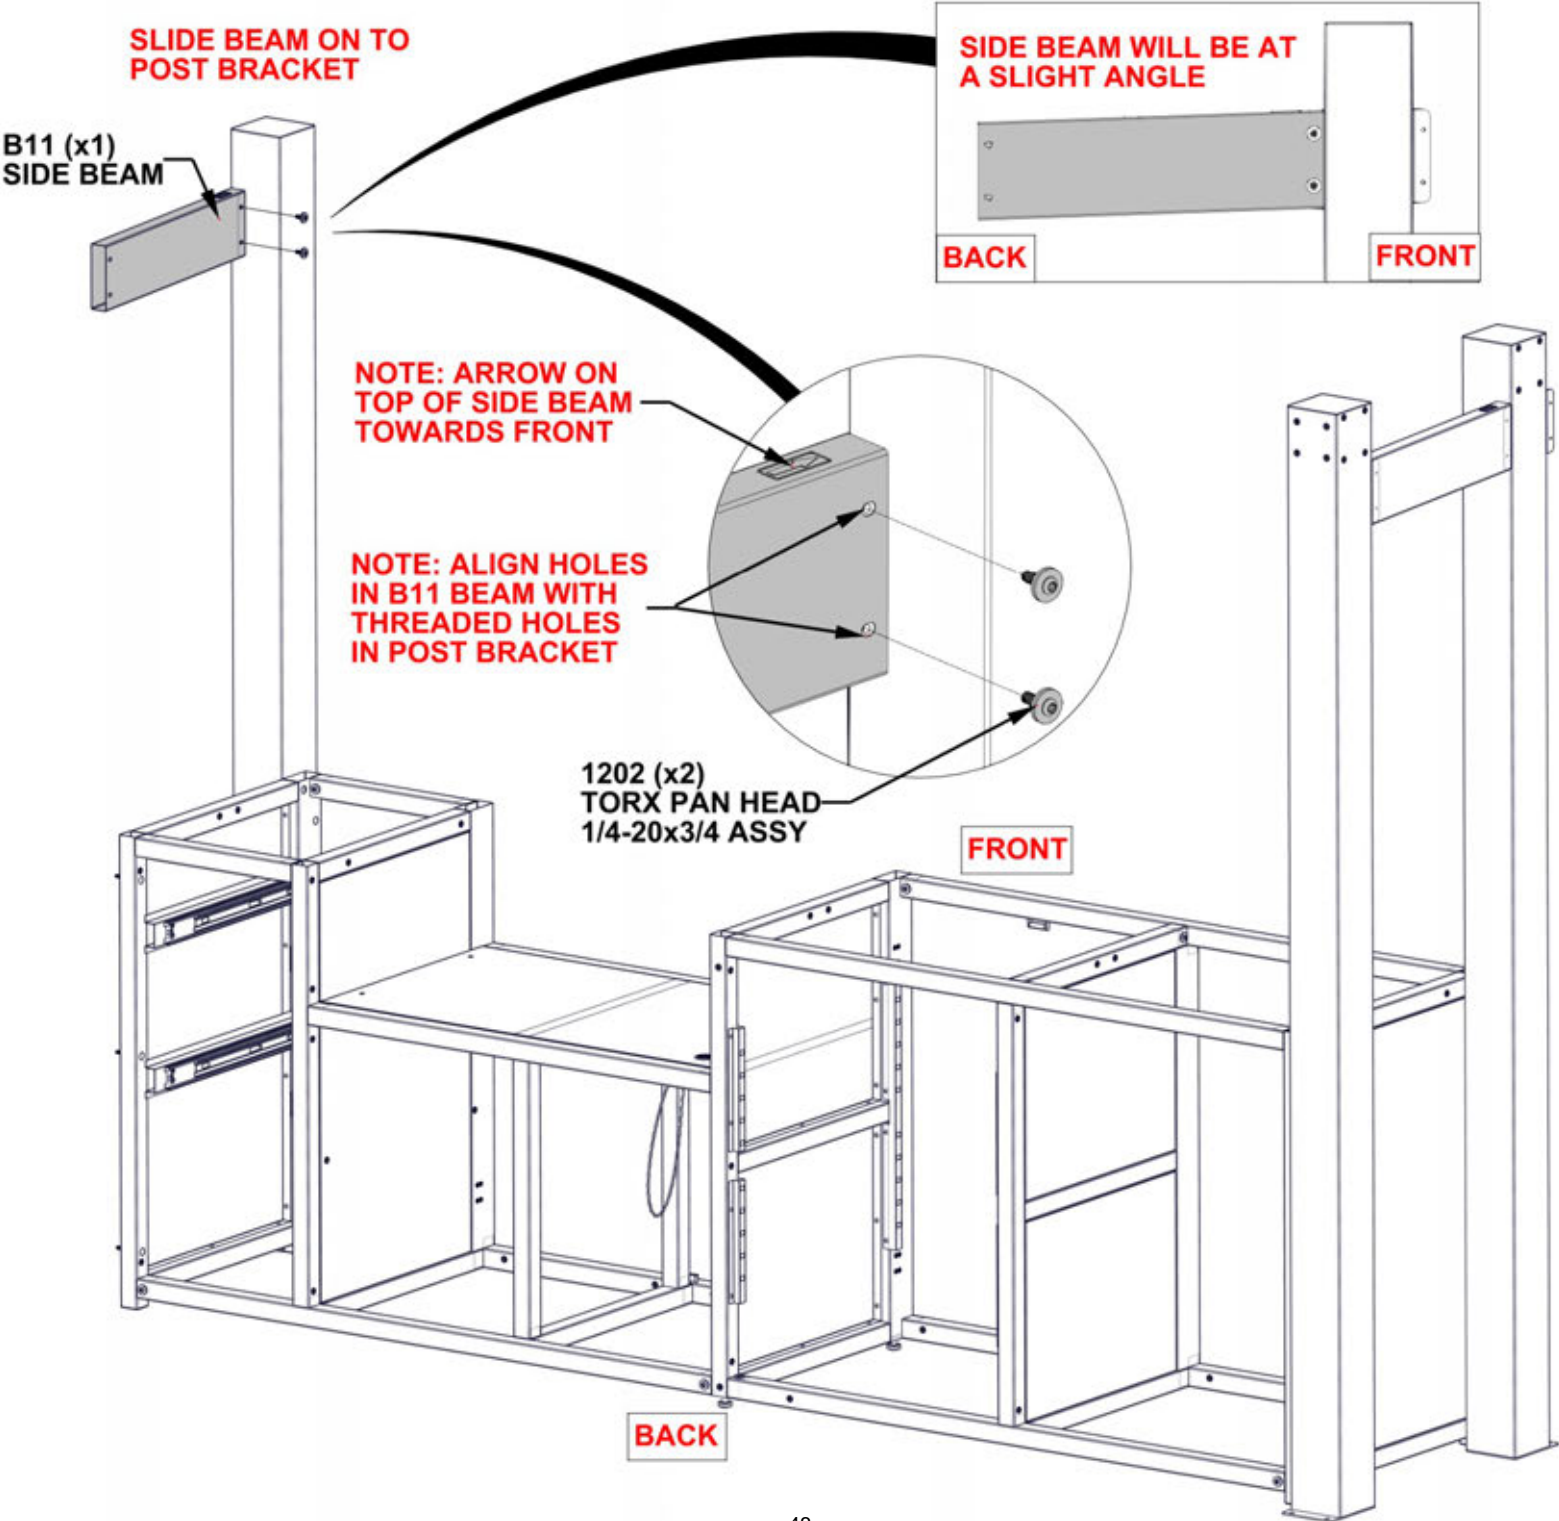

STEP 25 - KITCHEN ASSEMBLY

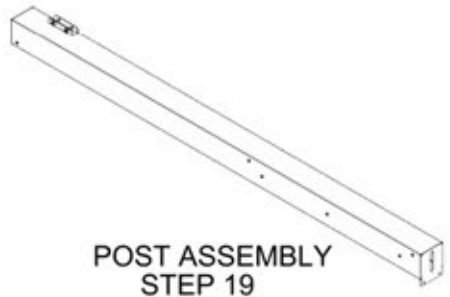

QTY	PART NUMBER	Description
5	H101103	TORX SOCKET SCREW 1/4-20
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

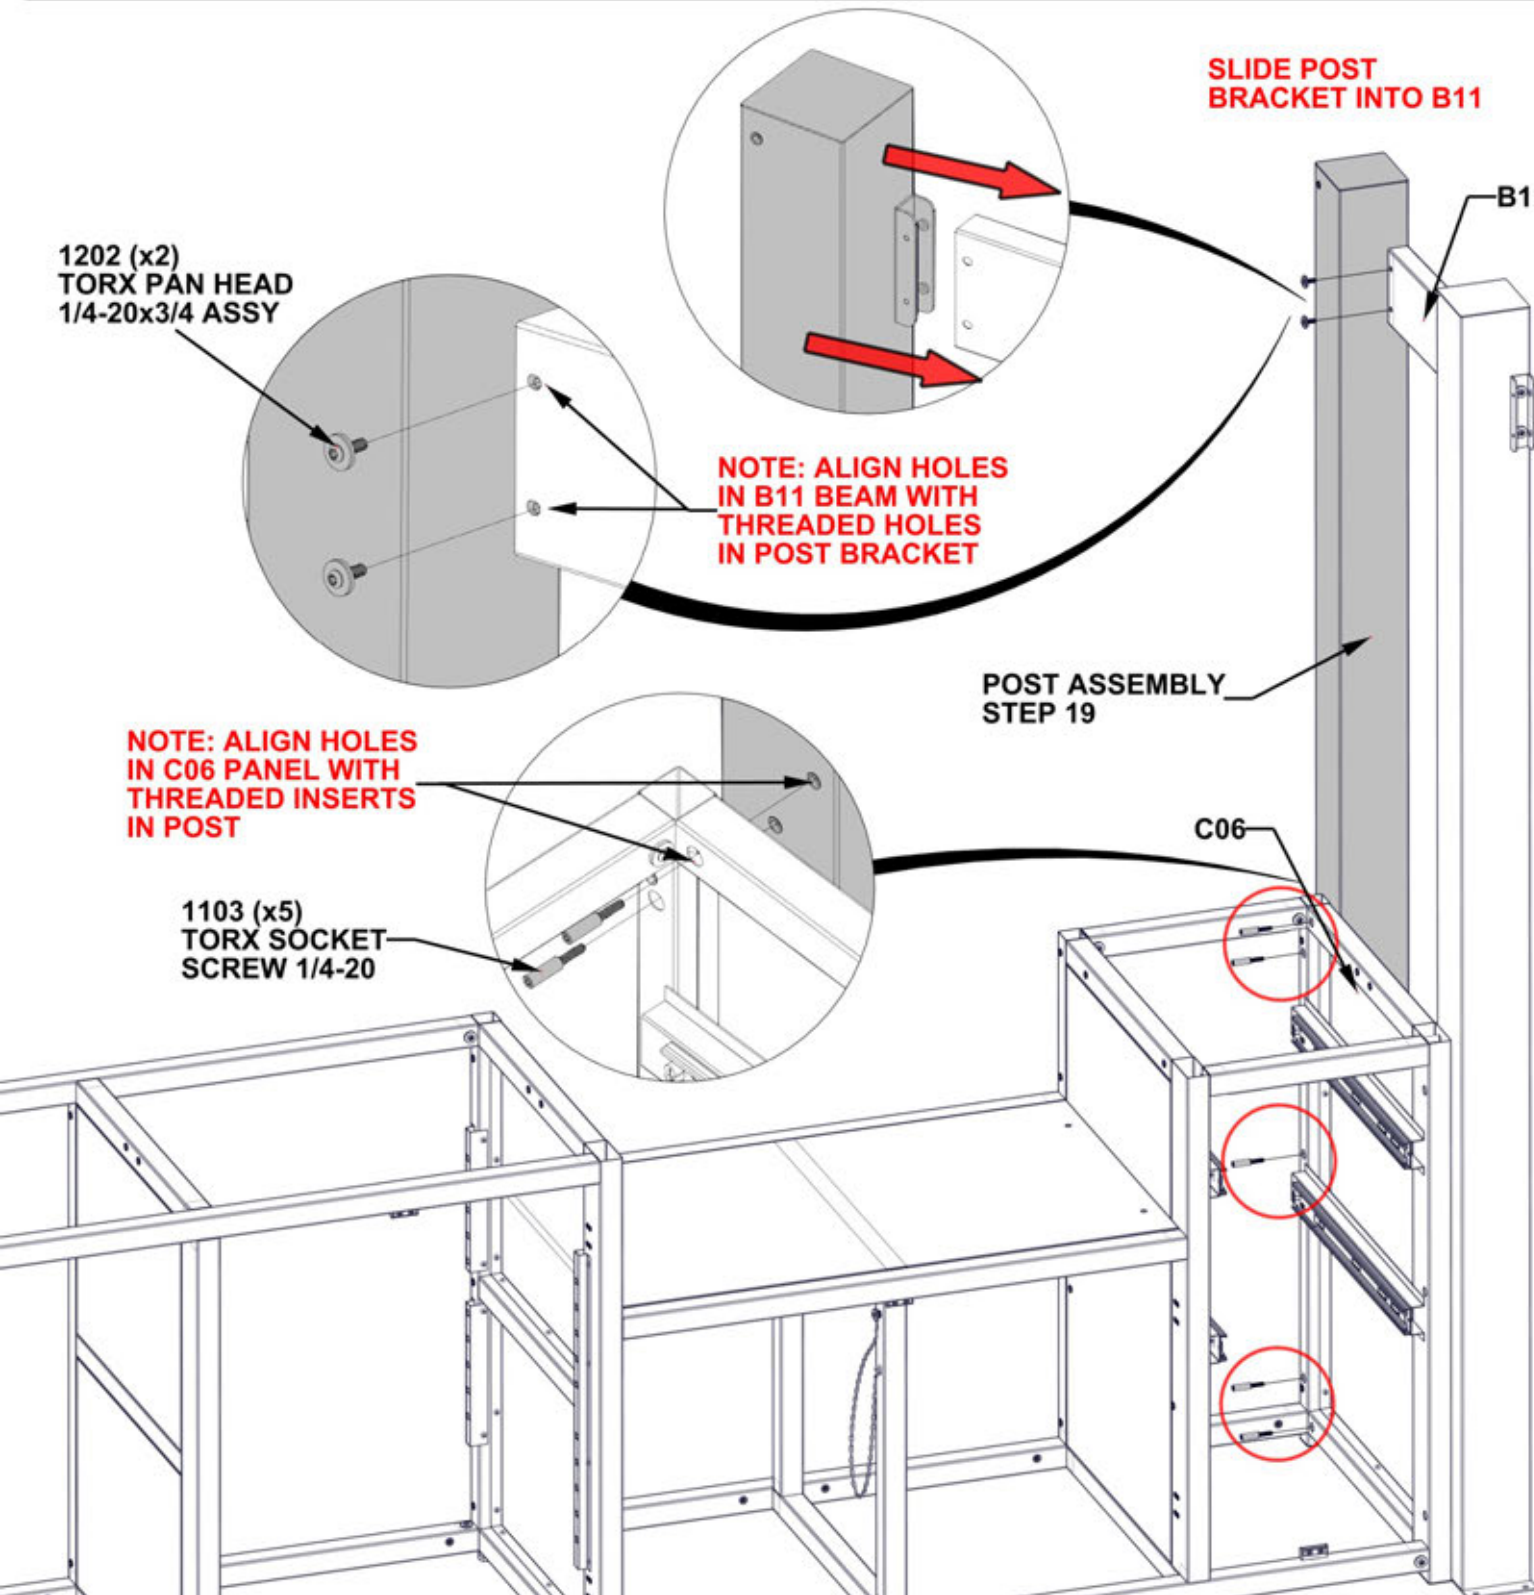


STEP 26 - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
20	H101132	TORX SOCKET SCREW 1/4-20


INSTALL TORX SOCKET SCREWS INTO
THREADED INSERT IN BOTTOM FLOOR RAILS

NOTE: THREADED INSERT
IN BOTTOM RAILS

1132 (x20)
TORX SOCKET SCREW 1/4-20

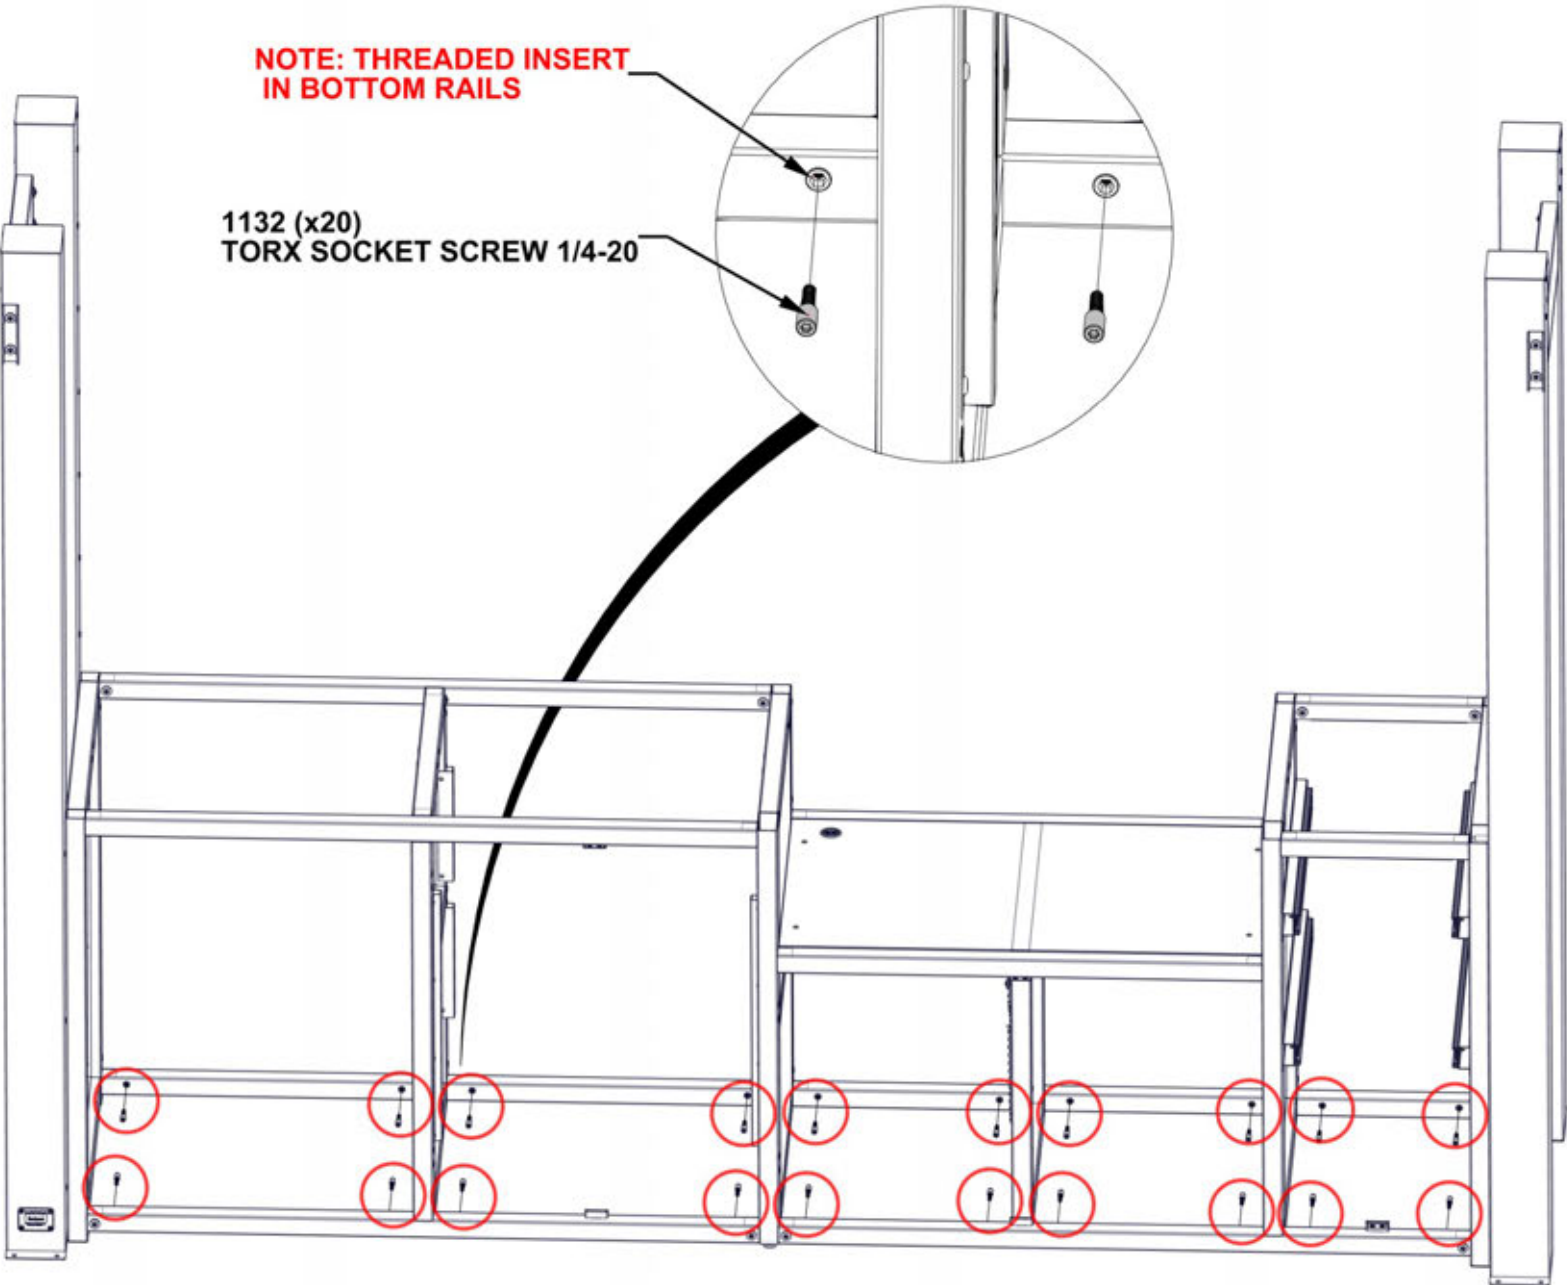


STEP 27 - KITCHEN ASSEMBLY

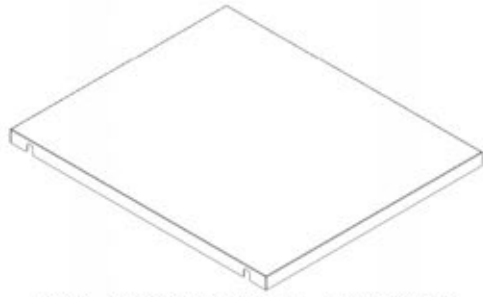

F03 FLOOR PANEL - A4M02202
(x2) 1 3/16"x21 3/4"x25 13/16" (30x553x655)



INSTALL FLOOR PANEL FROM
INSIDE OF CABINET. MAKE SURE
FINGERS ARE CLEAR, AS FLOOR
PANEL DROP IN PLACE

NOTE: SLOTS IN FLOOR
PANEL WILL SIT AROUND
SOCKET SCREWS FROM
STEP 26

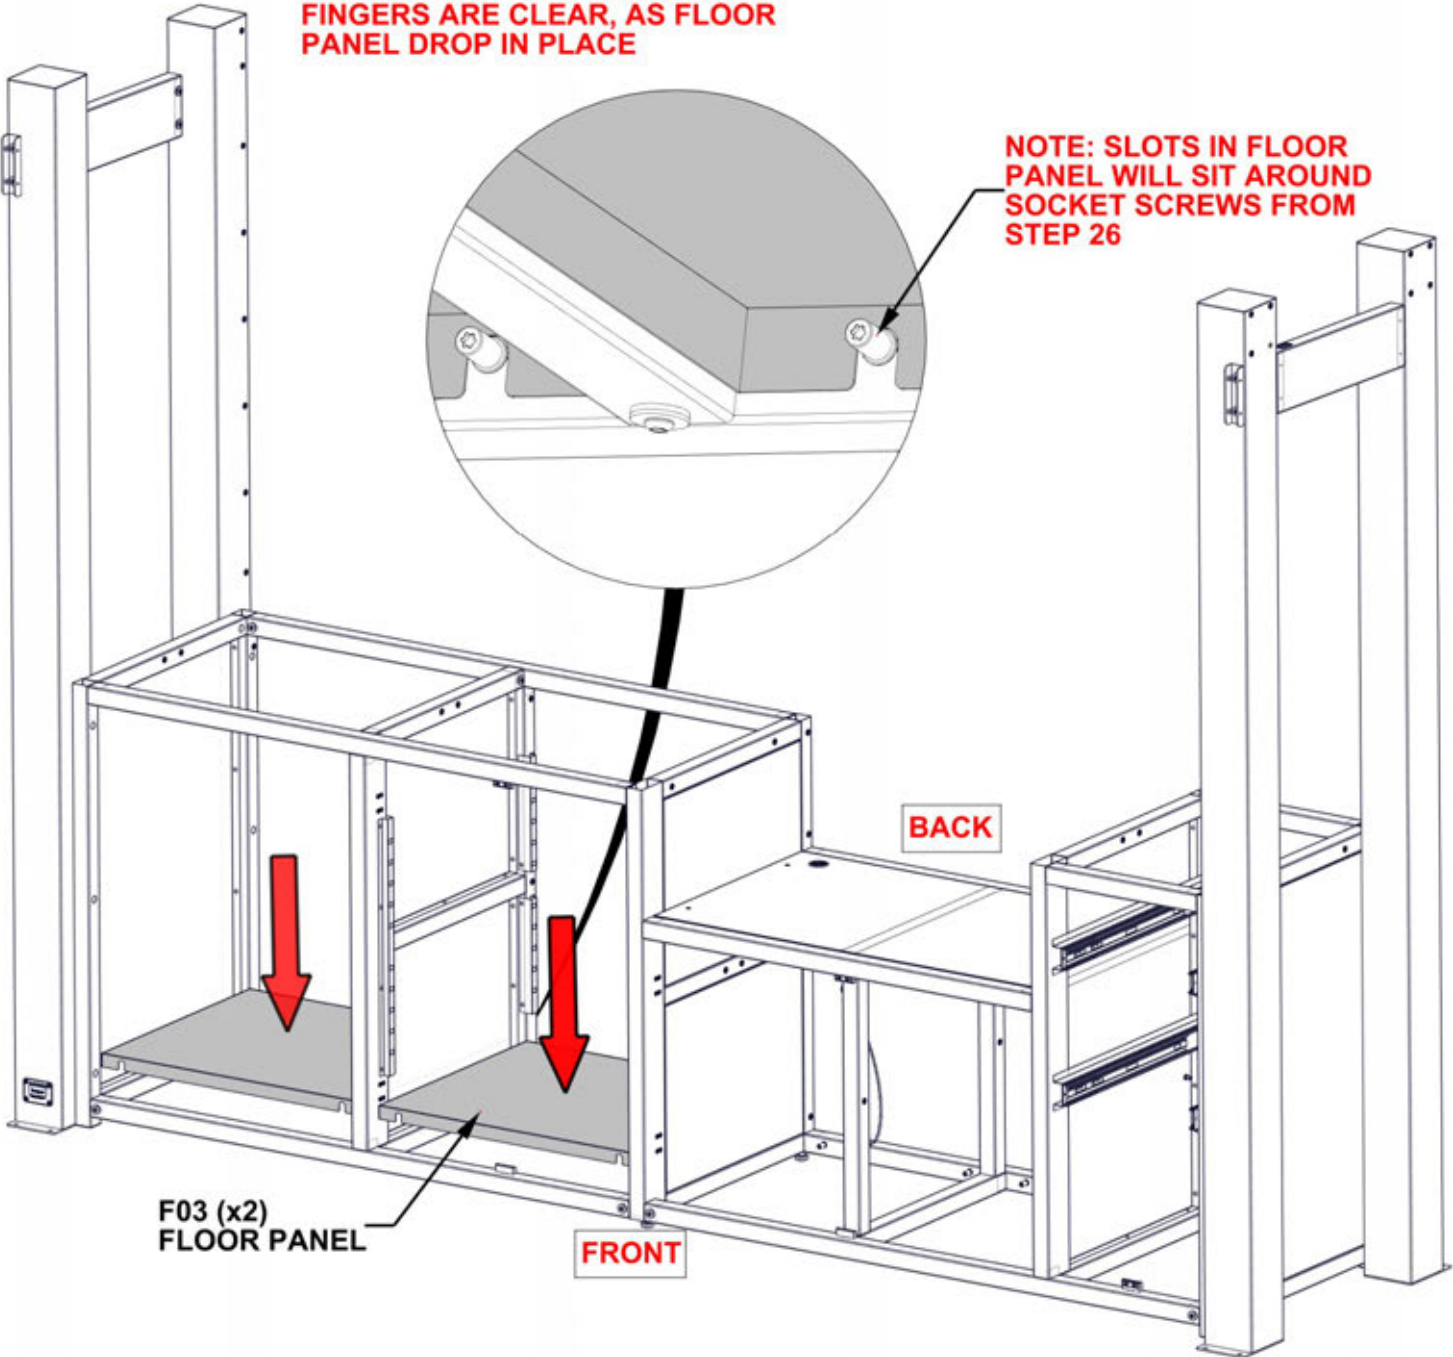


STEP 28A - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

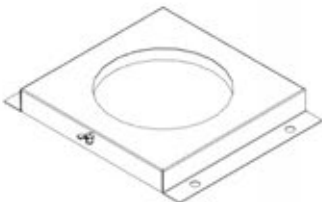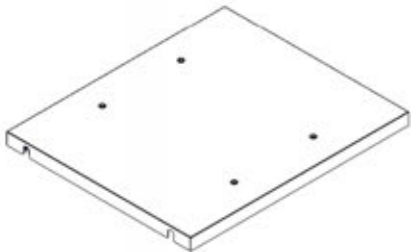


F12 FLOOR PANEL FOR PROPANE TANK - A4M02173
(x1) 1 3/16"x18 3/8"x21 3/4" (30x466.5x553)

A12 PROPANE TANK HOLDER - A4M02028
(x1) 1 5/8"x11 13/16"x14 9/16" (41x300x370)

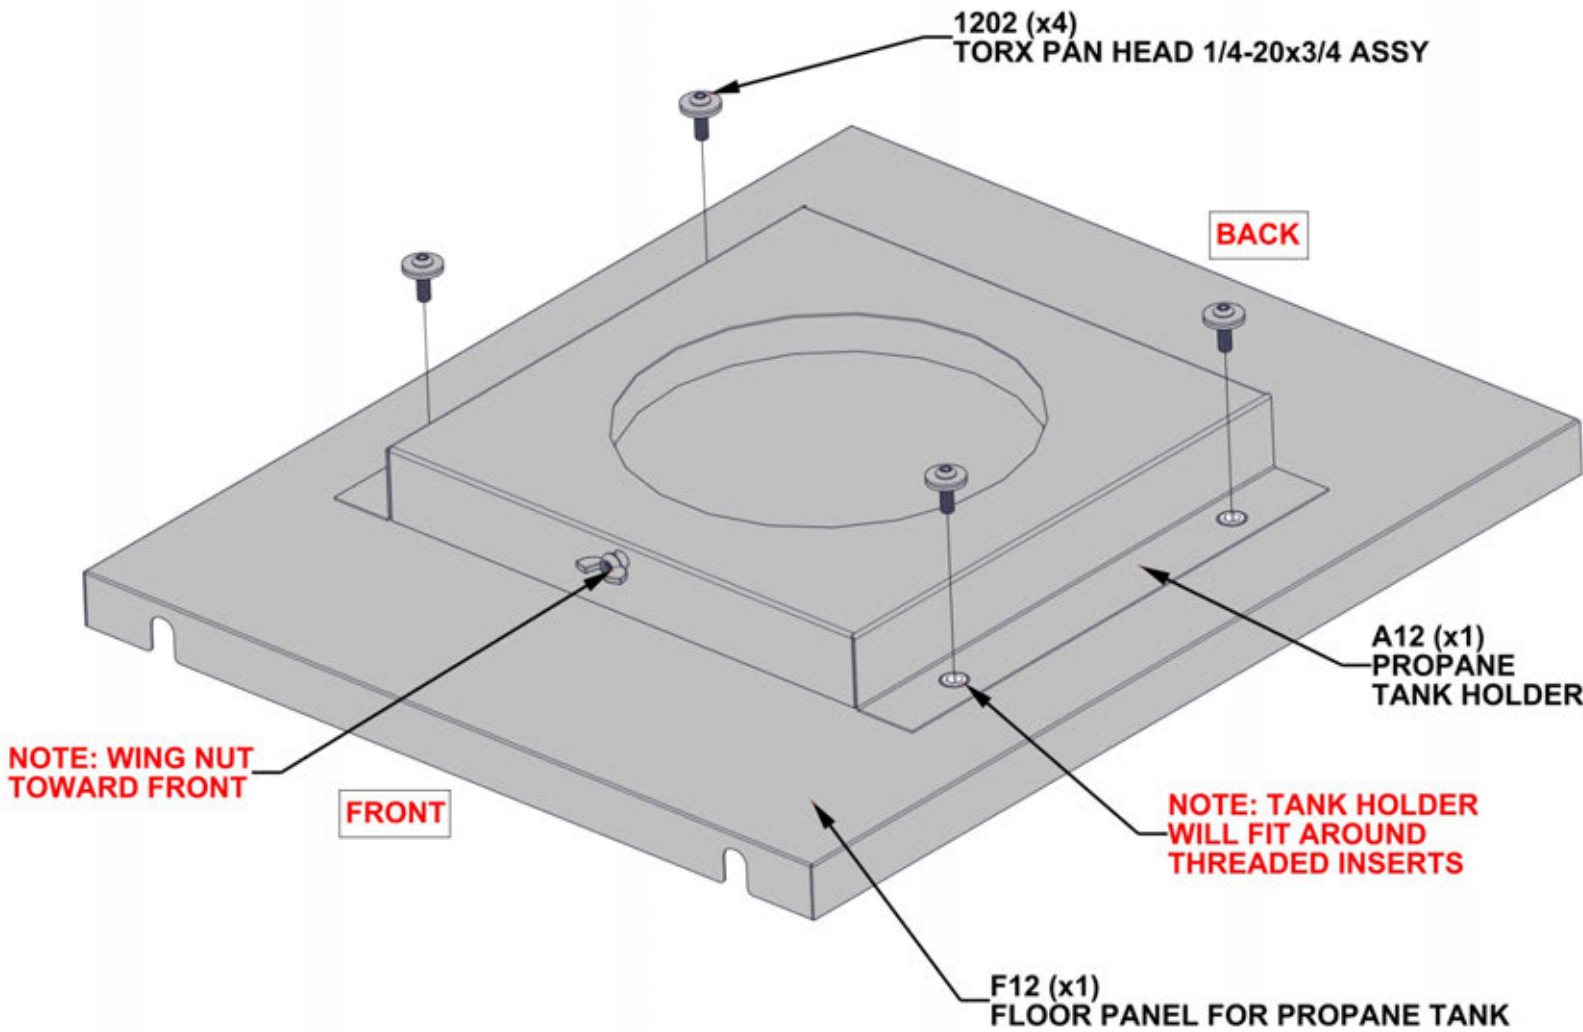


STEP 28B - KITCHEN ASSEMBLY

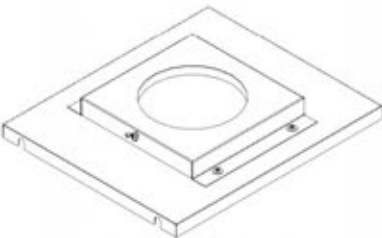

FLOOR PANEL
WITH TANK HOLDER
STEP 28A

**INSTALL FLOOR PANEL FROM
INSIDE OF CABINET. MAKE SURE
FINGERS ARE CLEAR, AS FLOOR
PANEL DROP IN PLACE**

**NOTE: SLOTS IN FLOOR
PANEL WILL SIT AROUND
SOCKET SCREWS FROM
STEP 26**

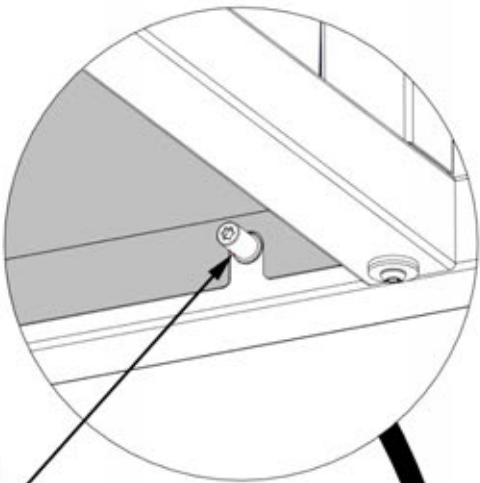


BACK


FRONT

FLOOR PANEL
WITH TANK HOLDER
STEP 28A

STEP 29 - KITCHEN ASSEMBLY

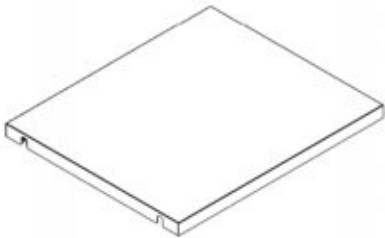



F10 FLOOR PANEL - A4M02208
(x1) 1 3/16"x18 3/8"x21 3/4" (30x467x553)

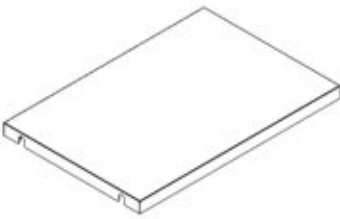

F11 FLOOR PANEL - A4M02209
(x1) 1 3/16"x14 13/16"x21 3/4" (30x376x553)

**INSTALL FLOOR PANEL FROM
INSIDE OF CABINET. MAKE SURE
FINGERS ARE CLEAR, AS FLOOR
PANEL DROP IN PLACE**

**NOTE: SLOTS IN FLOOR
PANEL WILL SIT AROUND
SOCKET SCREWS FROM
STEP 26**

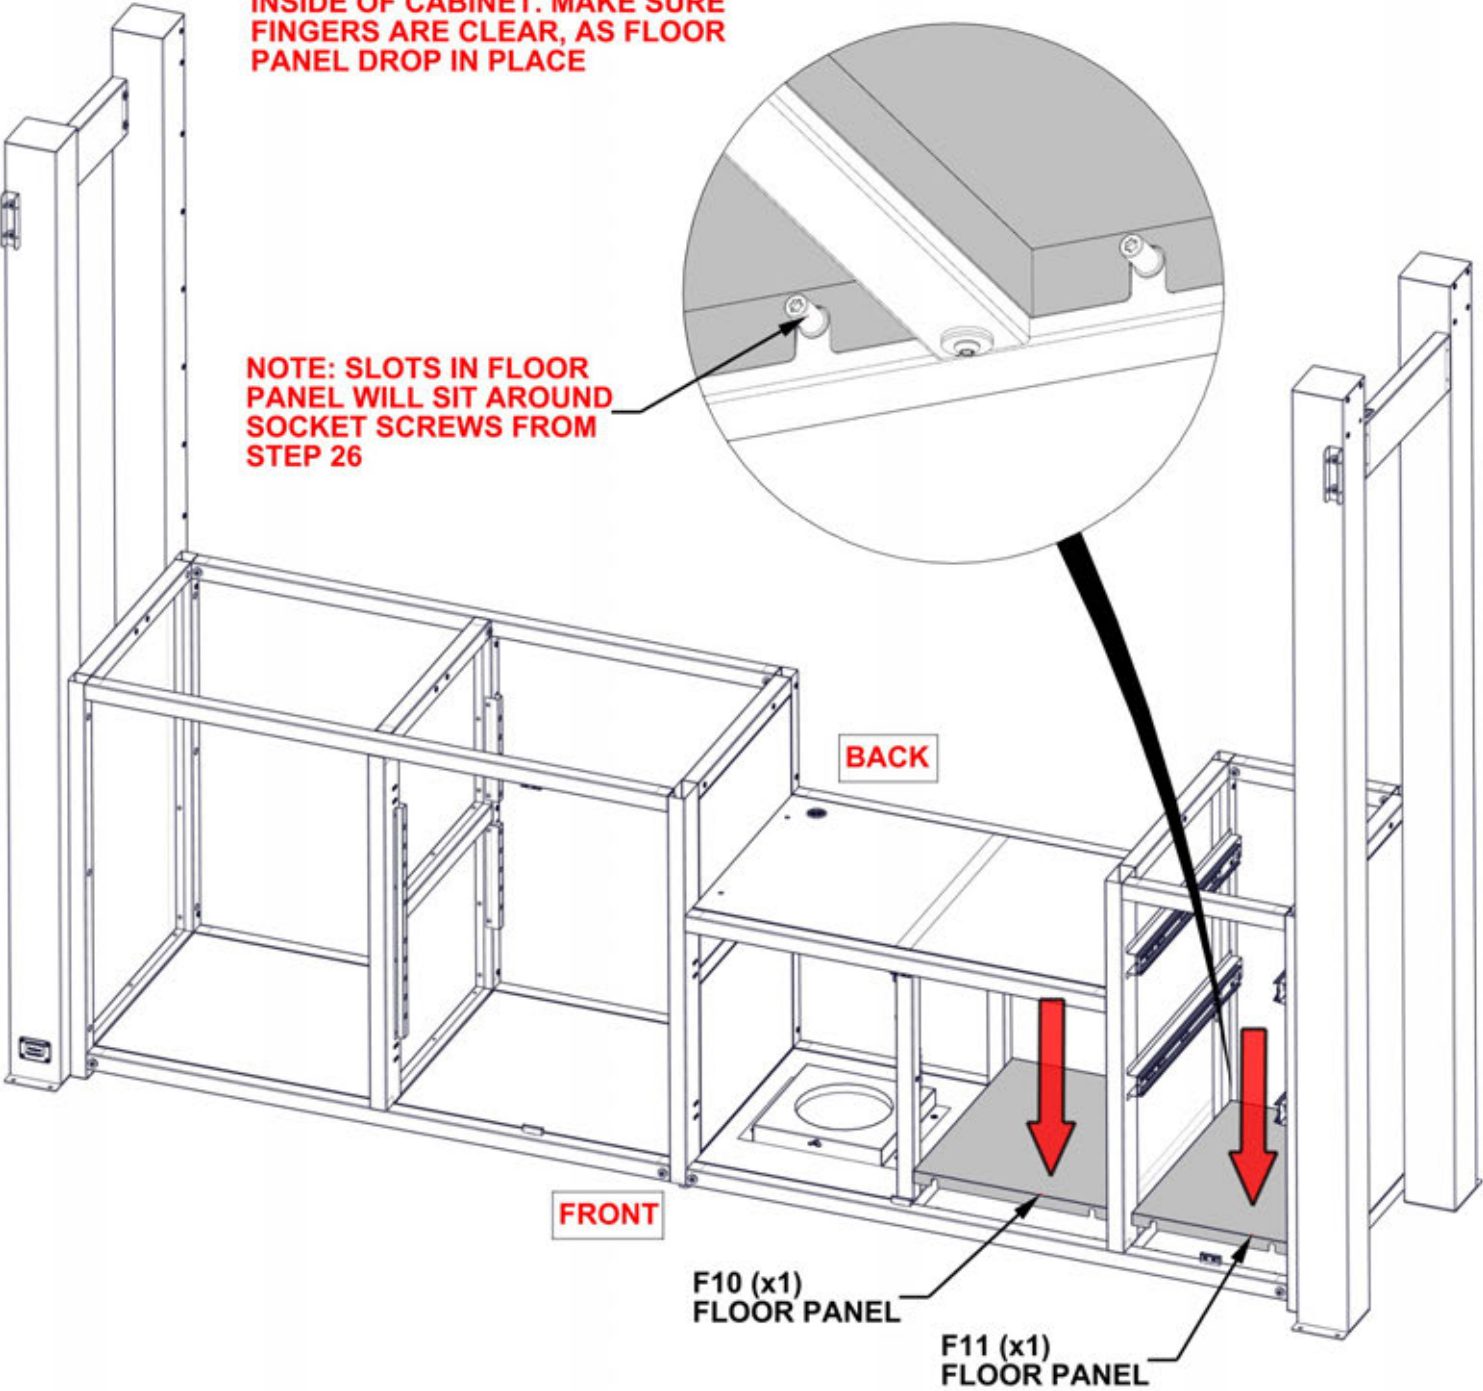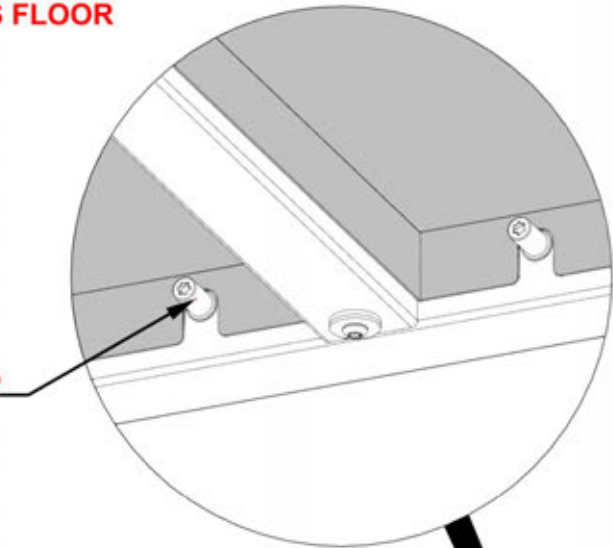


STEP 30 - KITCHEN ASSEMBLY




QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

BP05 BACK PANEL - A4M02055
(x1) 1 3/16"x25 13/16"x33 13/16" (30x656x859)

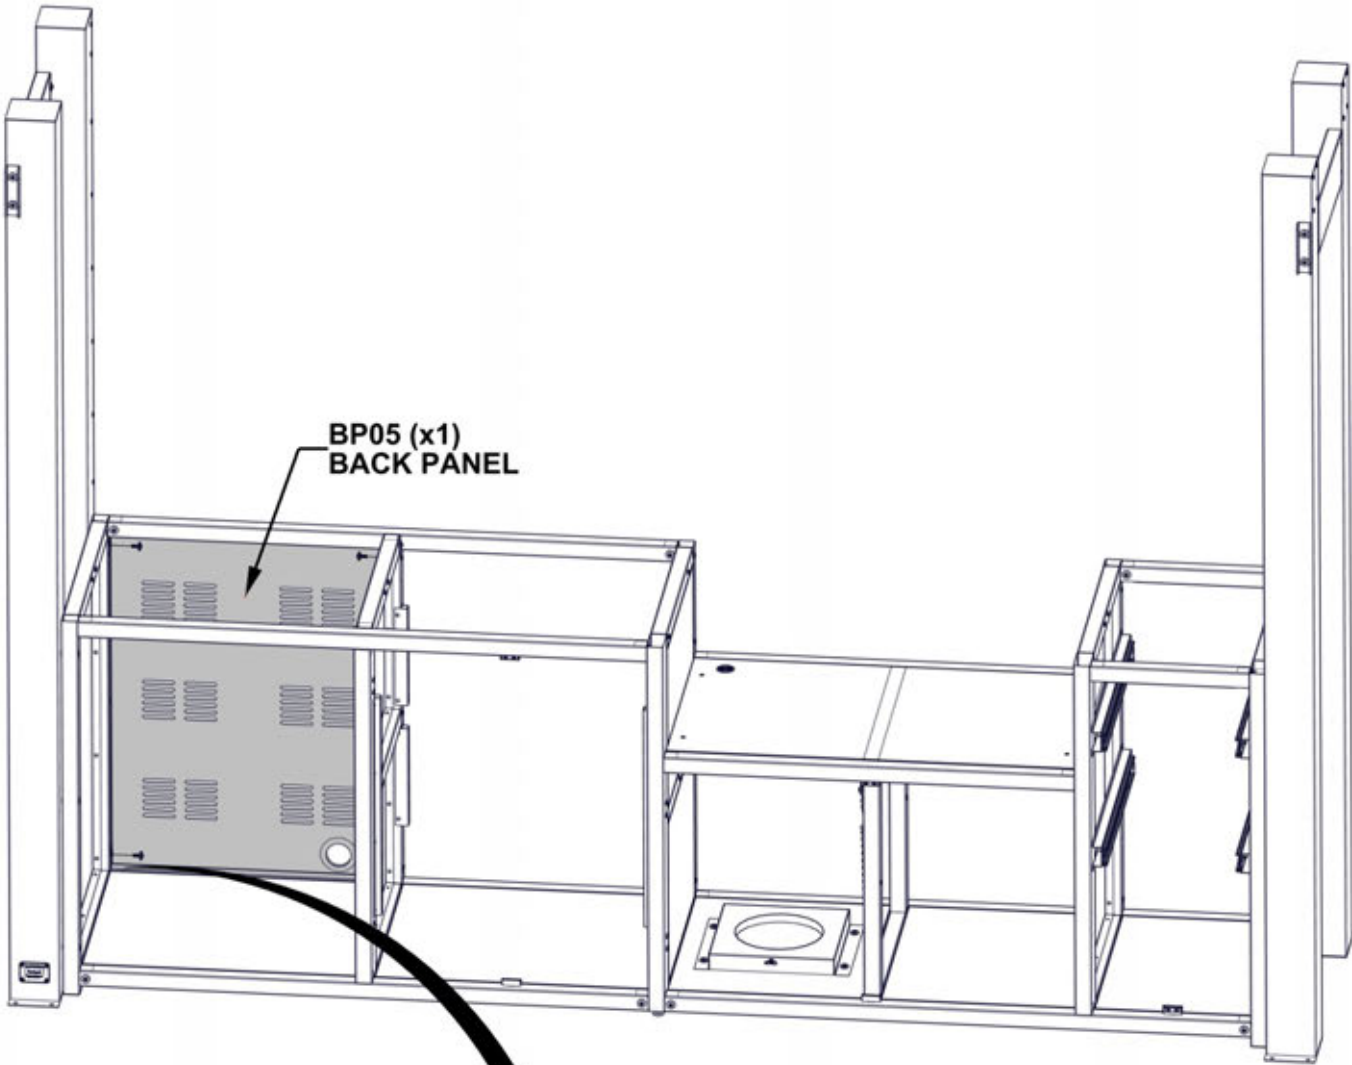

**NOTE: PANEL WILL FIT
AROUND THREADED INSERT**

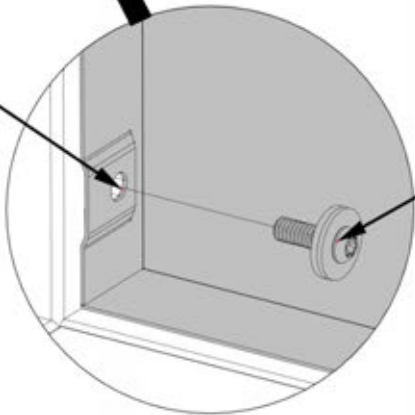


1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

STEP 31 - KITCHEN ASSEMBLY




QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

BP04 BACK PANEL - A4M02054
(x1) 1 3/16"x25 13/16"x33 7/8" (30x656x860)

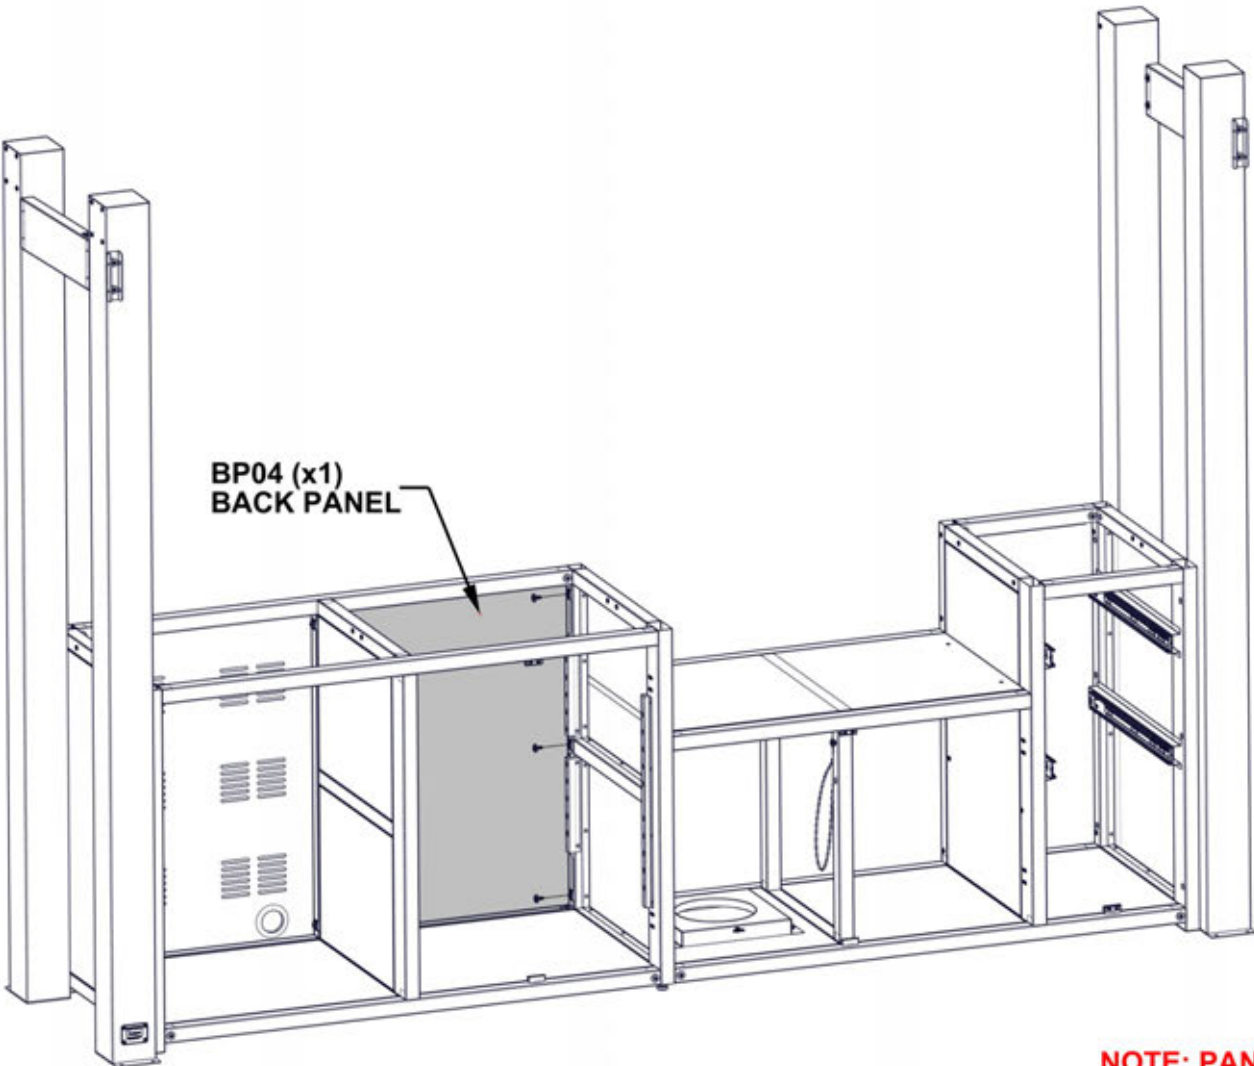


1202 (x6)
TORX PAN HEAD 1/4-20x3/4 ASSY

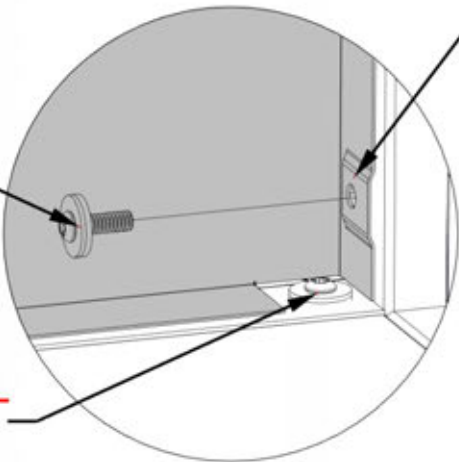

NOTE: PANEL WILL FIT
AROUND THREADED INSERT


NOTE: ORIENTATION OF PANEL
NOTCH IN CORNER WILL FIT
AROUND BOLT CONNECTION

STEP 32 - KITCHEN ASSEMBLY

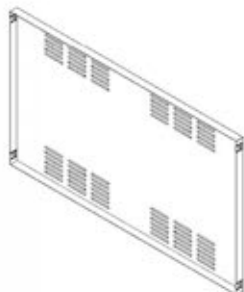


QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

BP02 BACK PANEL - A4M02052
(x1) 1 3/16"x22 5/8"x38 7/16" (30x575x976)

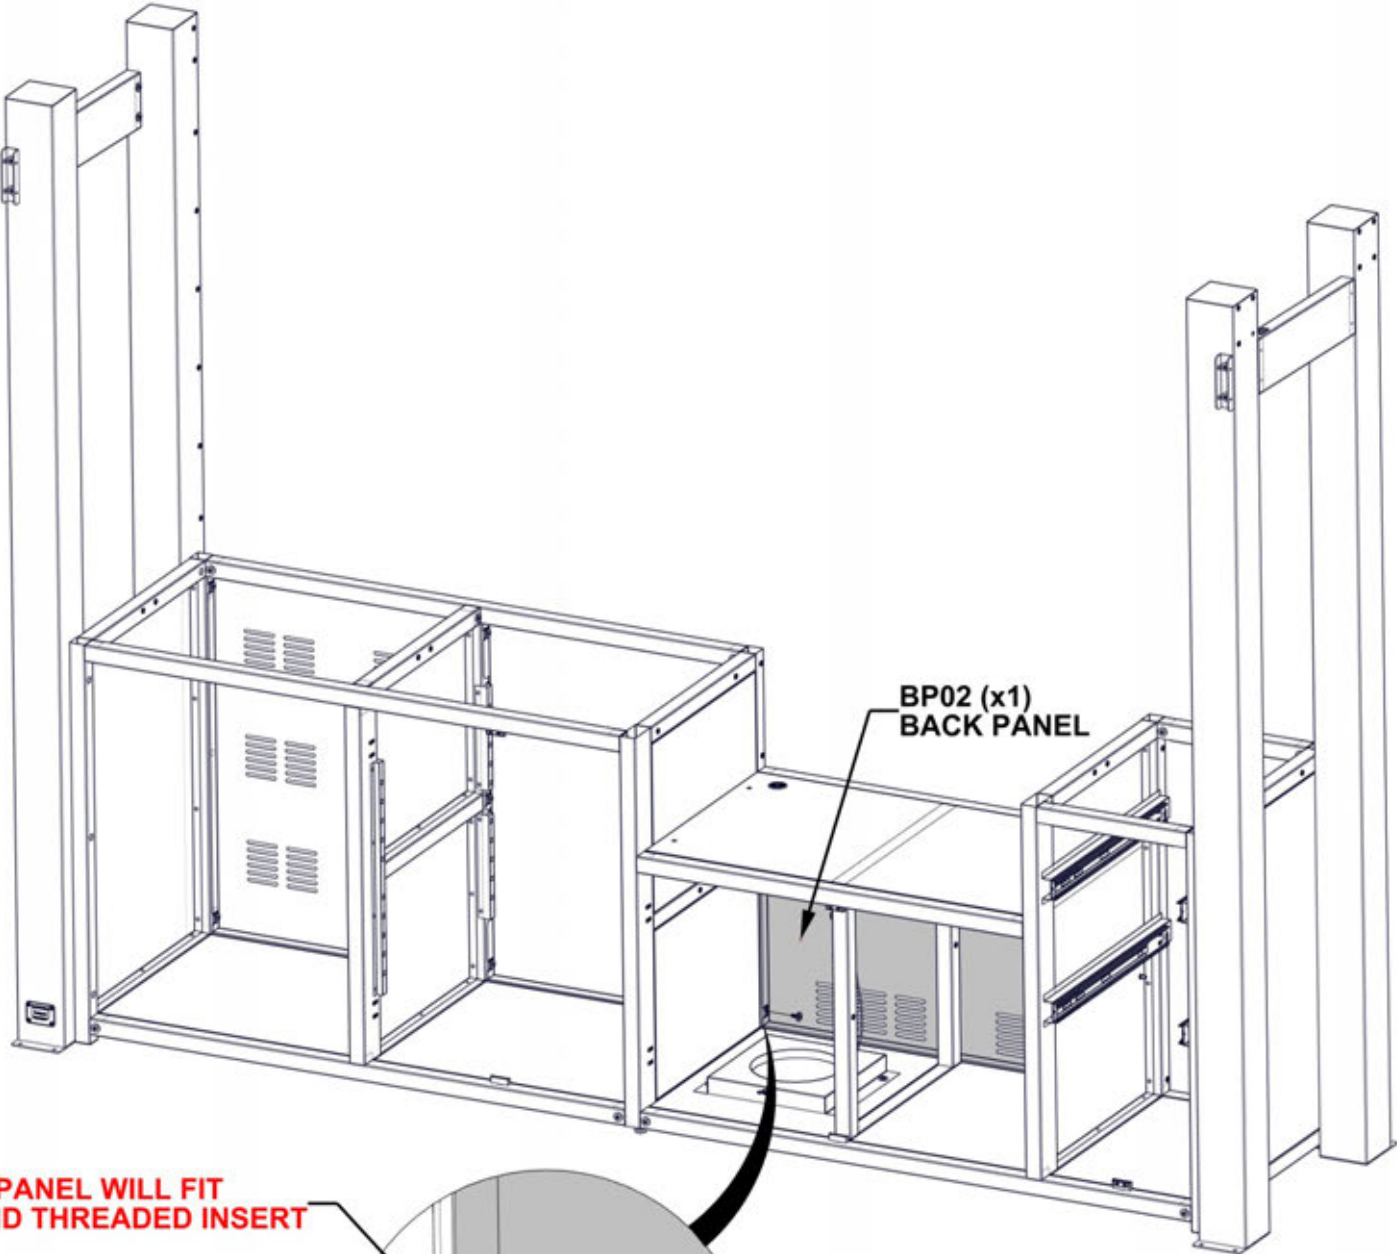


BP02 (x1)
BACK PANEL

NOTE: PANEL WILL FIT
AROUND THREADED INSERT

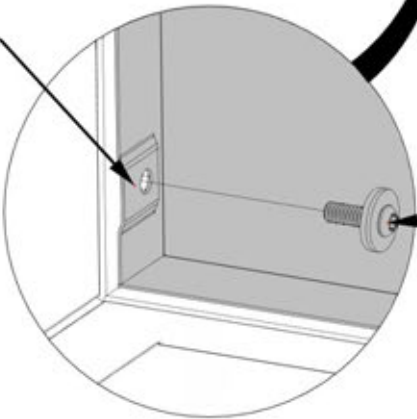


1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

STEP 33 - KITCHEN ASSEMBLY

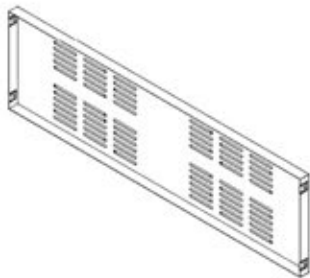

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

BP03 BACK PANEL - A4M02053
(x1) 1 3/16"x11 3/16"x38 3/8" (30x284x975)

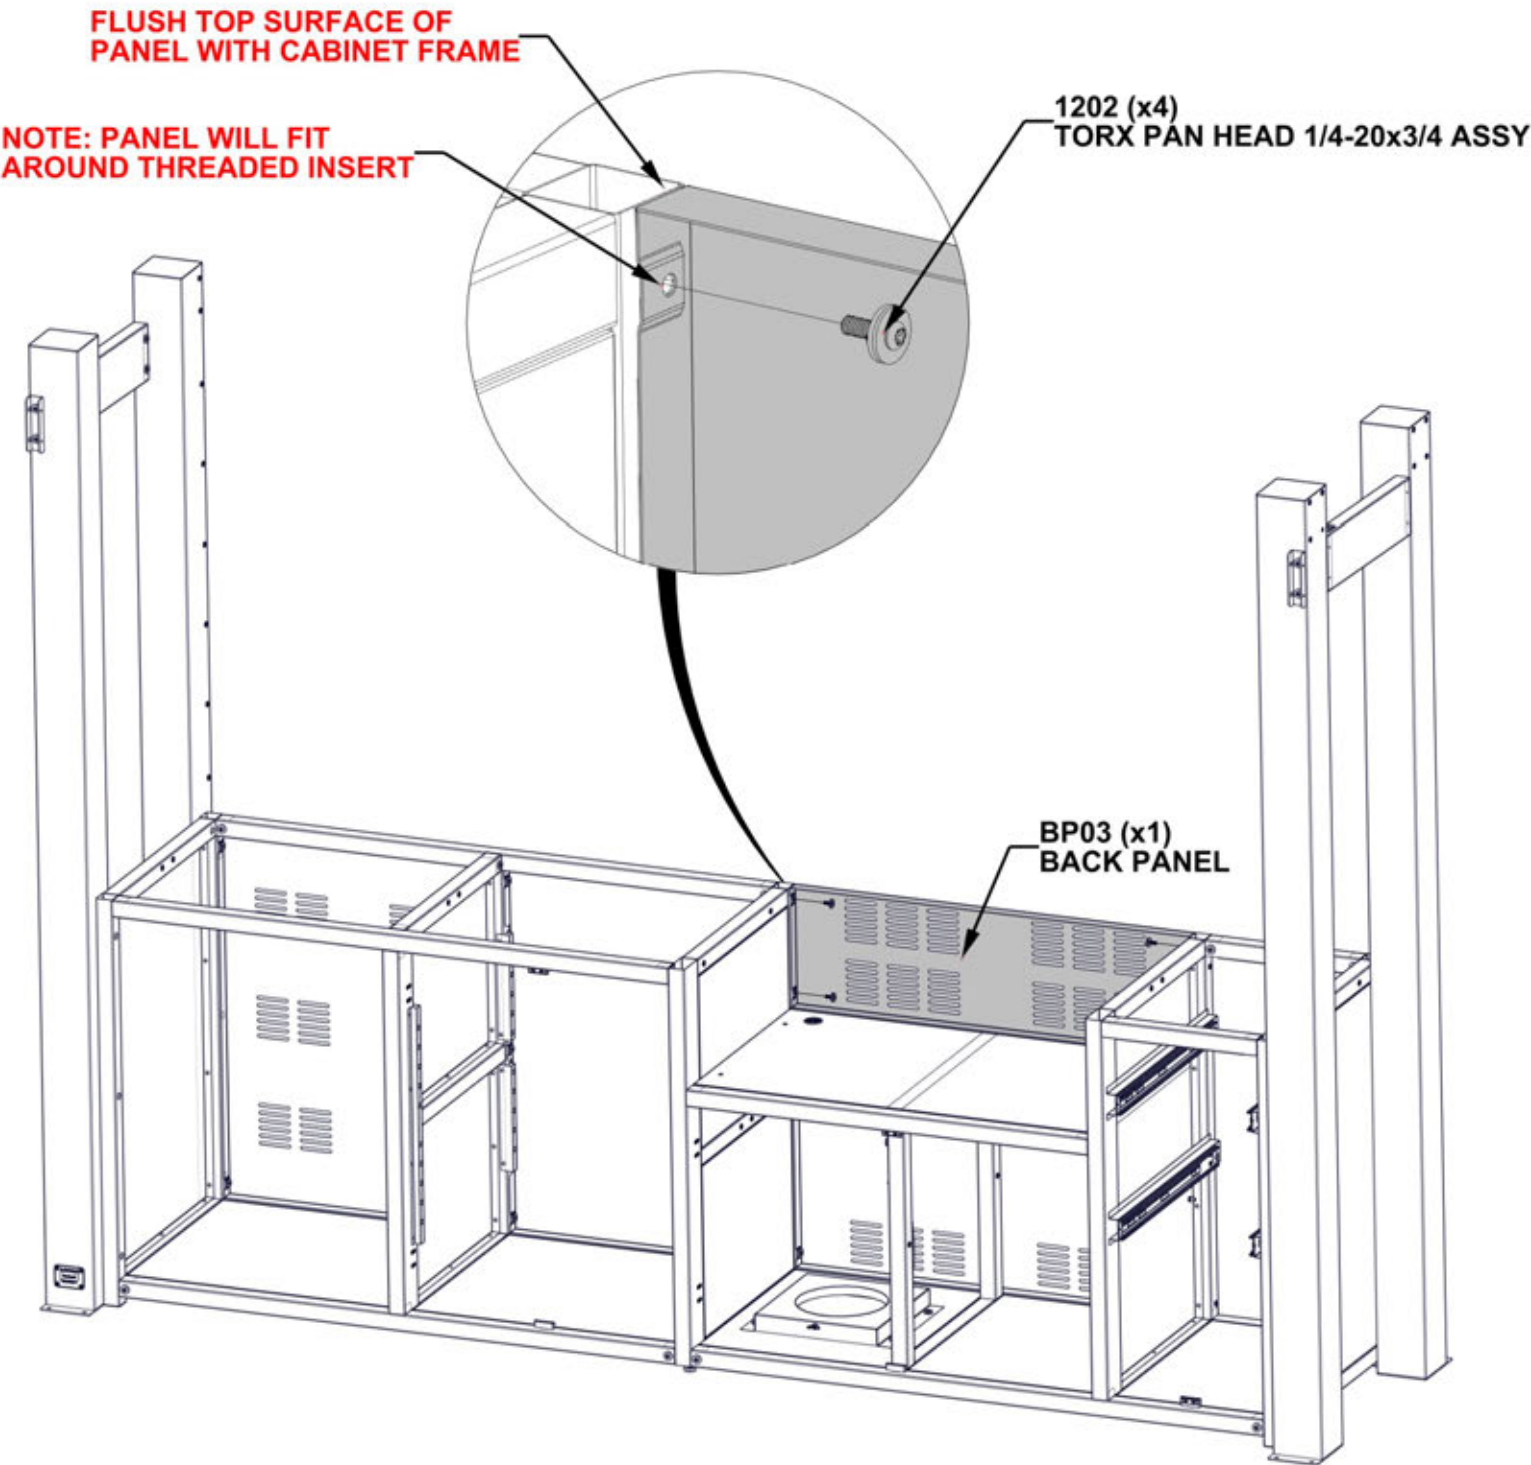


STEP 34 - KITCHEN ASSEMBLY




QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

BP01 BACK PANEL - A4M02051
(x1) 1 3/16"x14 13/16"x33 13/16" (30x377x859)

**NOTE: PANEL WILL FIT
AROUND THREADED INSERT**

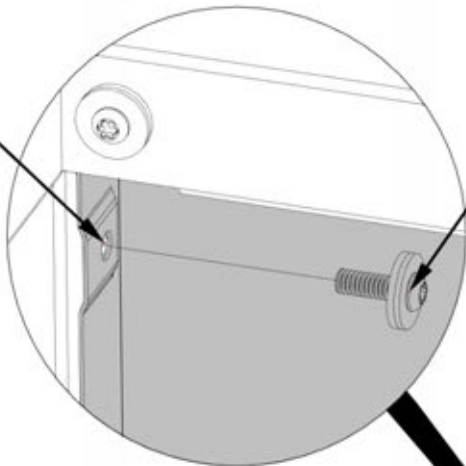


1202 (x4)
TORX PAN HEAD 1/4-20x3/4 ASSY

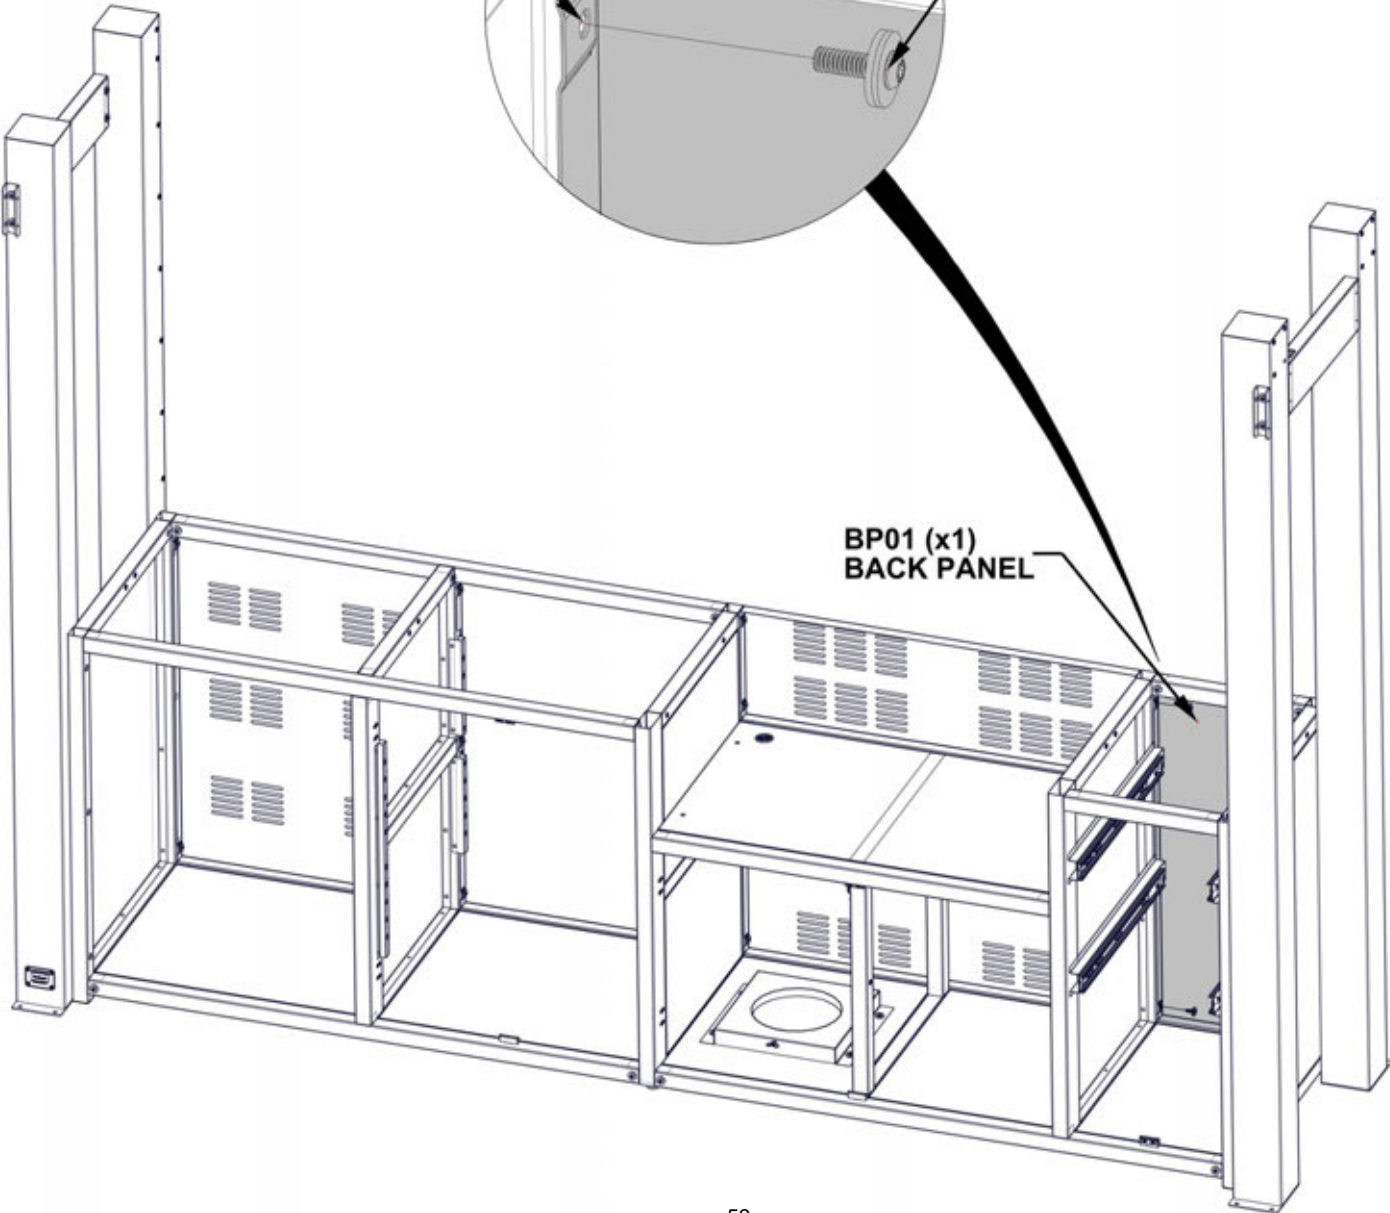

BP01 (x1)
BACK PANEL

STEP 35 - KITCHEN ASSEMBLY




B01 SIDE BEAM - A4M02012
(x1) 36x5 1/4"x46 1/2" (36x134x1181)

QTY	PART NUMBER	Description
8	H101103	TORX SOCKET SCREW 1/4-20

DO NOT TIGHTEN HARDWARE AT THIS STEP

NOTE: SIDE BEAM WILL BE AT A SLIGHT ANGLE

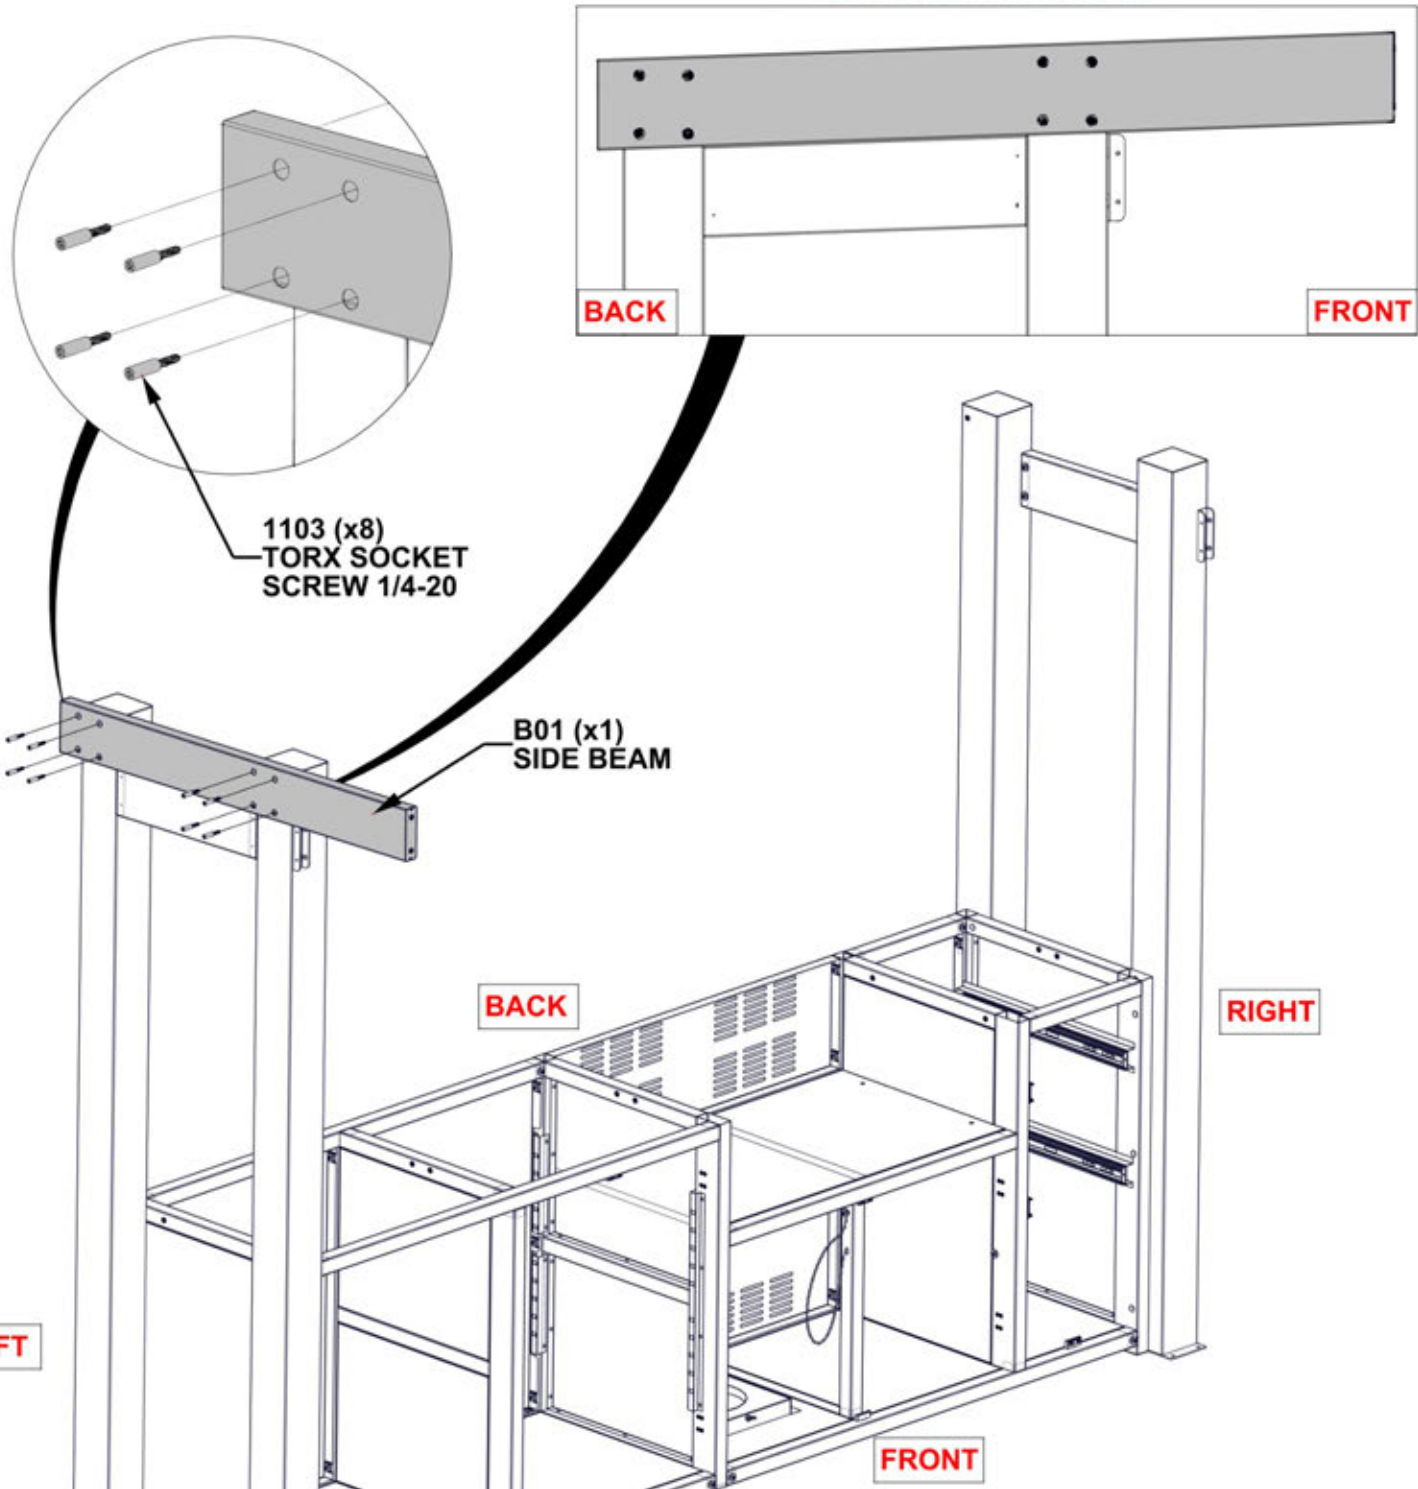


STEP 36A - KITCHEN ASSEMBLY




B09 CORBEL - A4M02042
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)

**NOTE: CORBEL BRACKET SLOTS
WILL FIT AROUND THREADED
INSERTS AND FLUSH AGAINST BEAM**

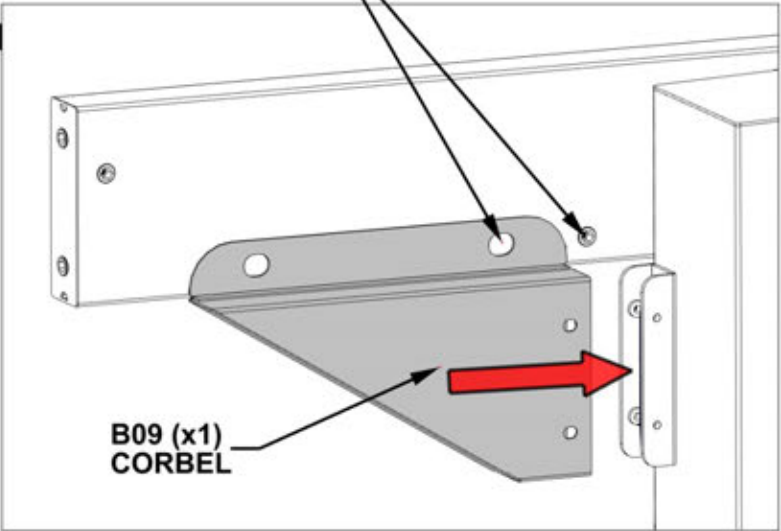


**SLIDE CORBEL IN PLACE
UNTIL FLUSH AGAINST POST**

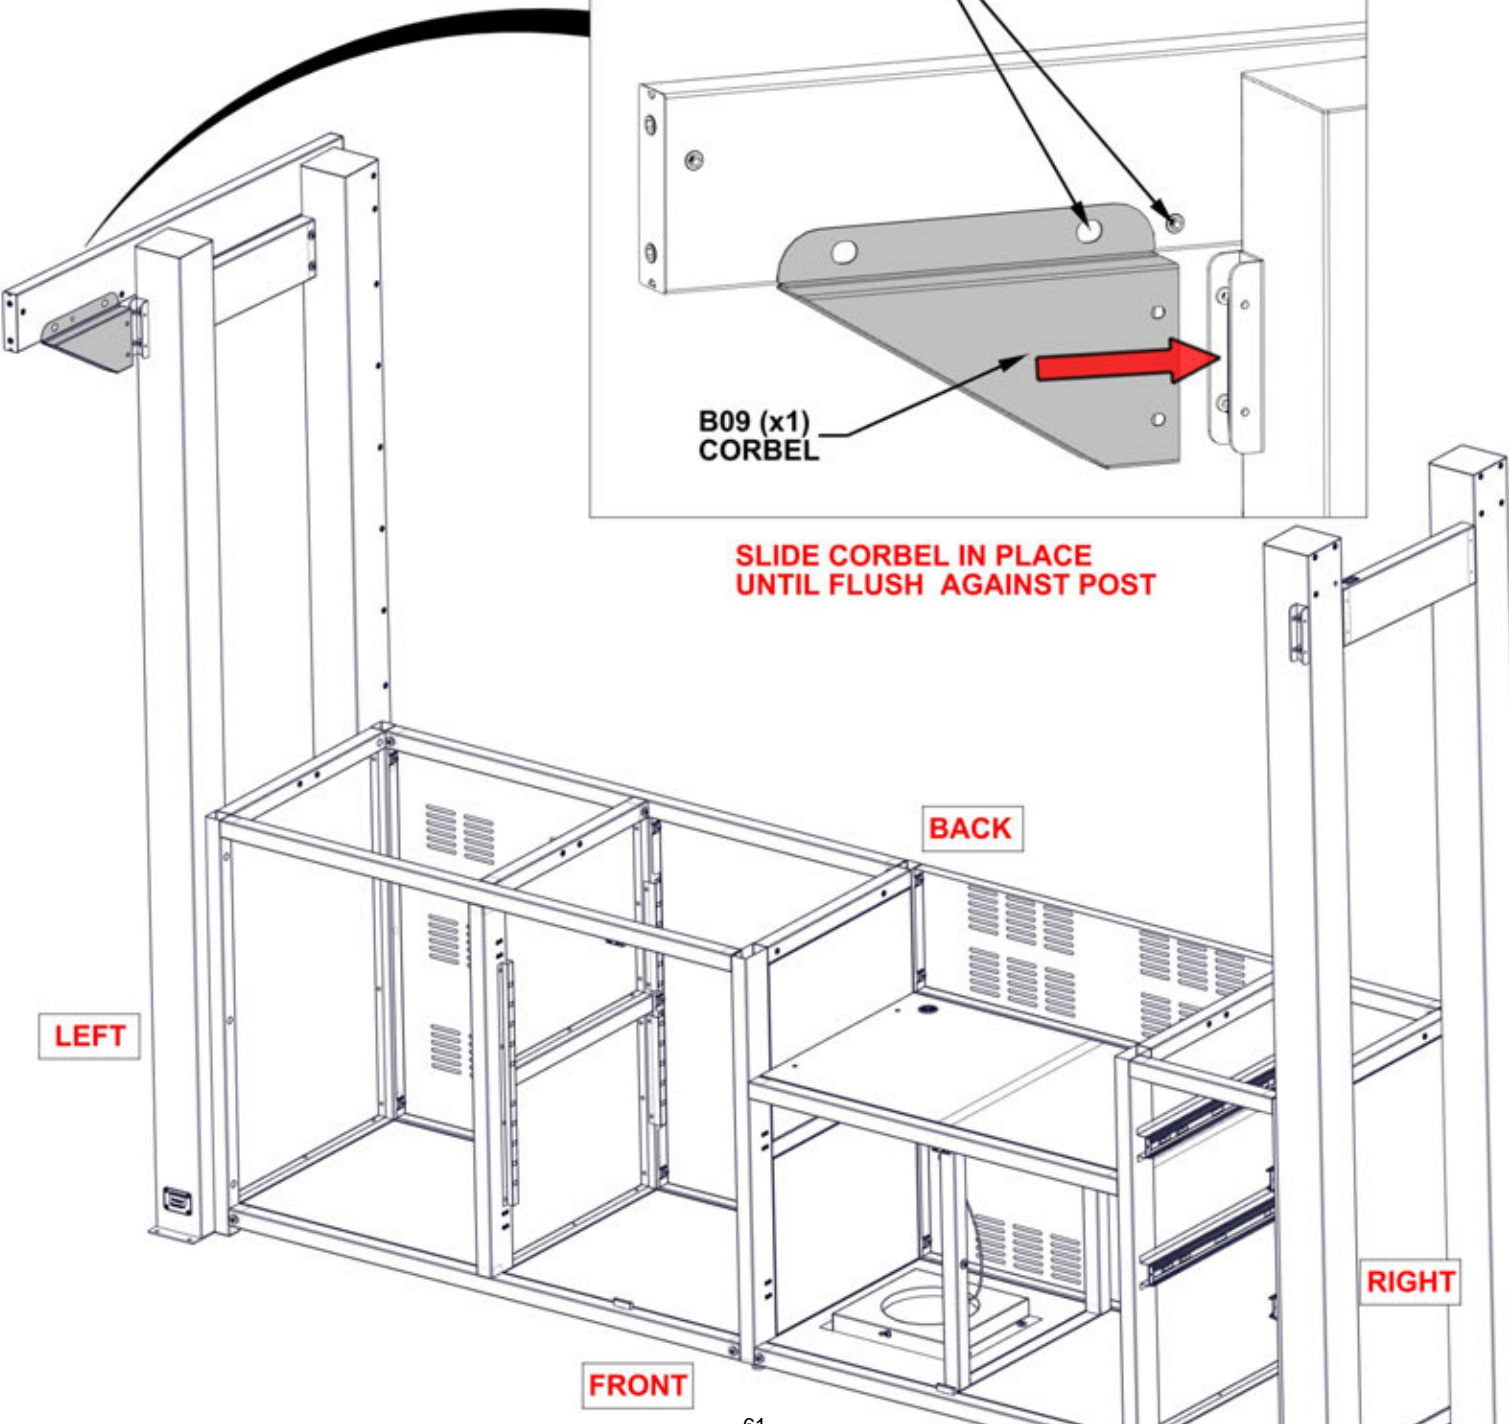


STEP 36B - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

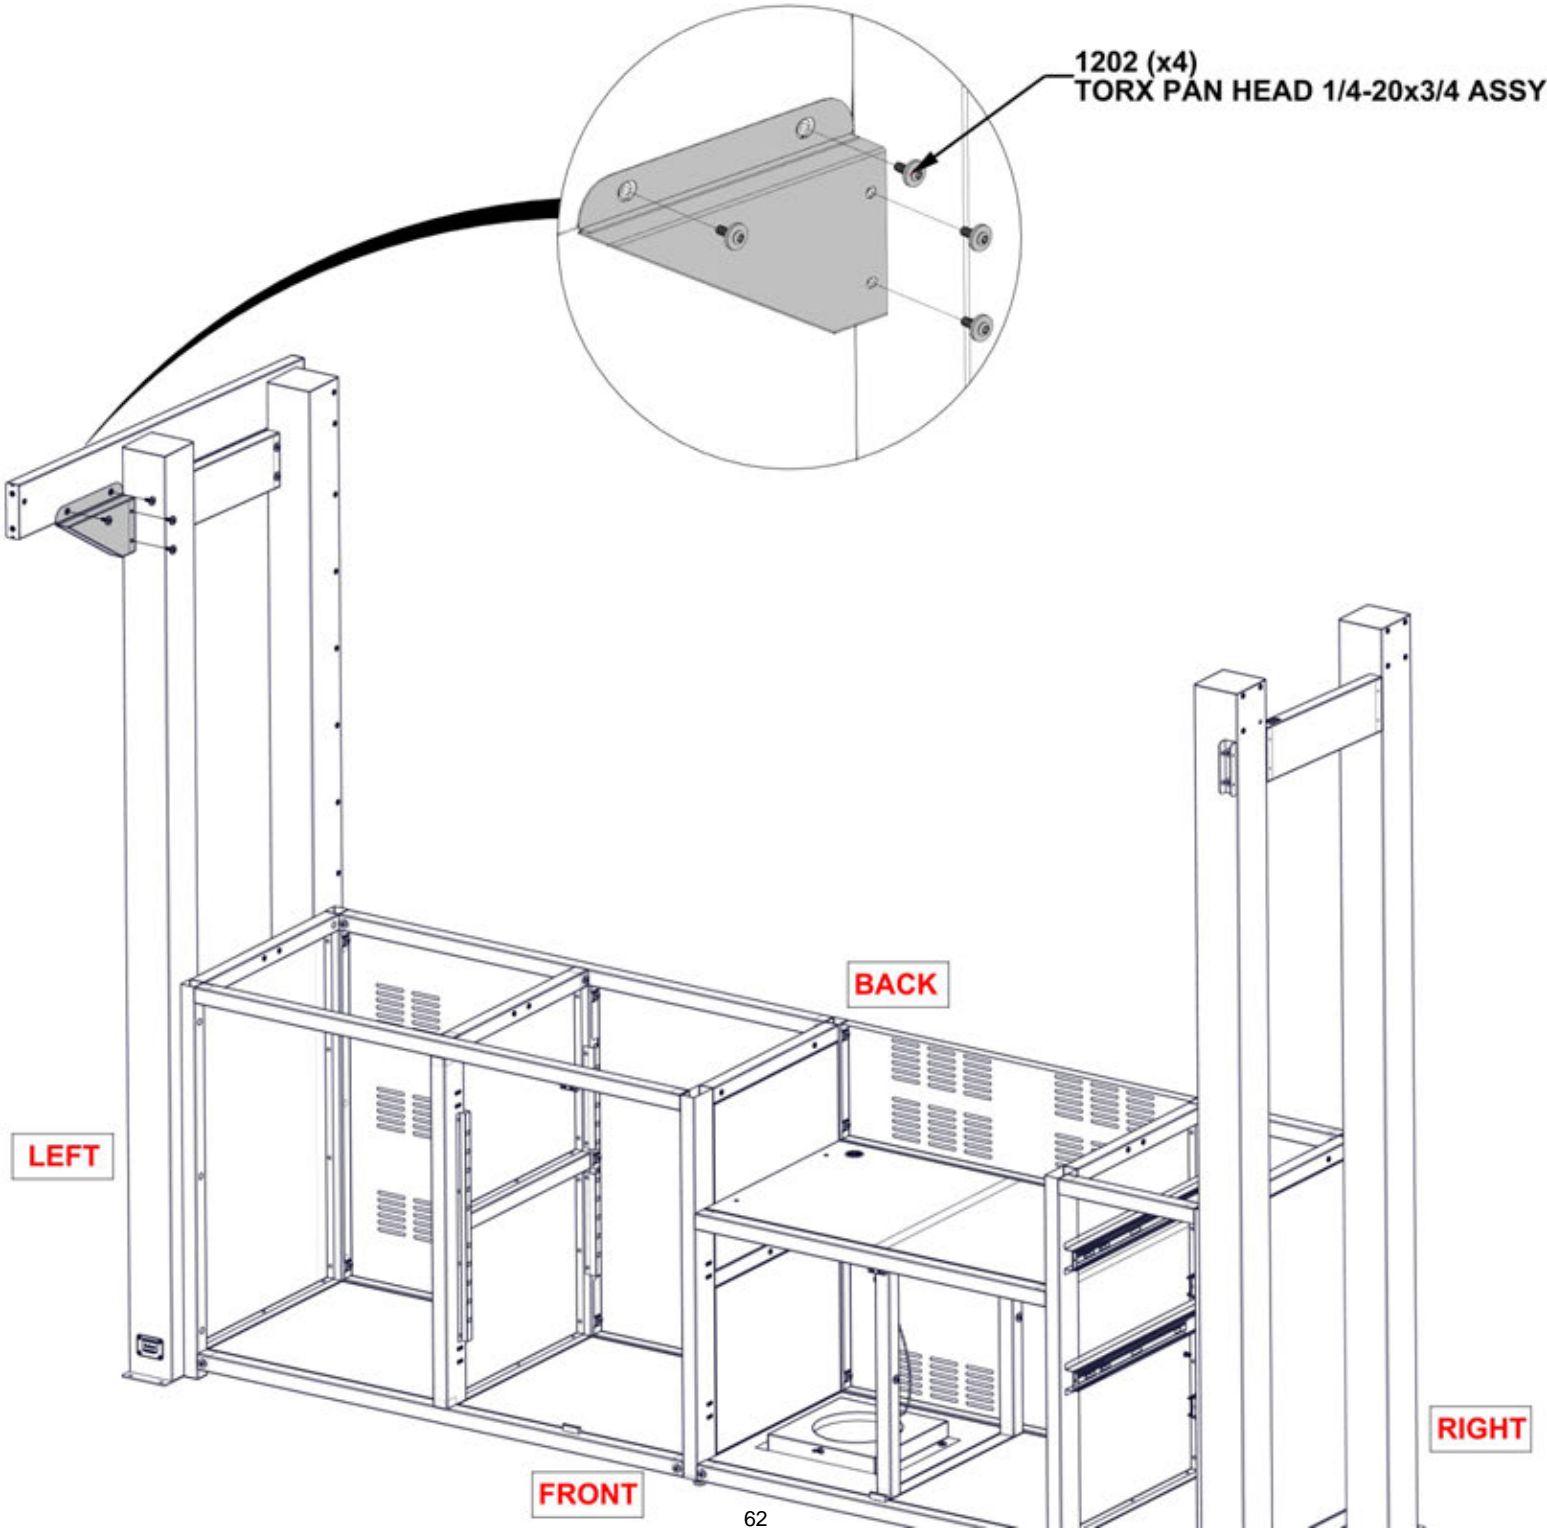



STEP 37 - KITCHEN ASSEMBLY



B05 SIDE BEAM - A4M02022
(x1) 1 7/16"x5 1/4"x46 1/2" (36x134x1181)

QTY	PART NUMBER	Description
8	H101103	TORX SOCKET SCREW 1/4-20

DO NOT TIGHTEN HARDWARE AT THIS STEP

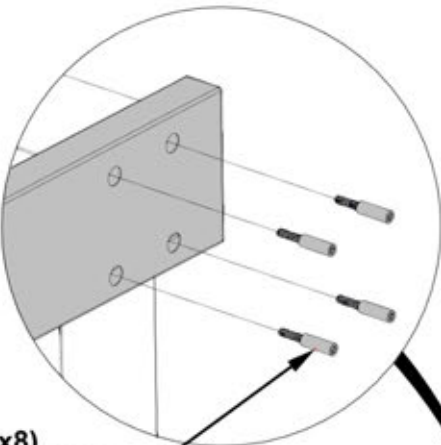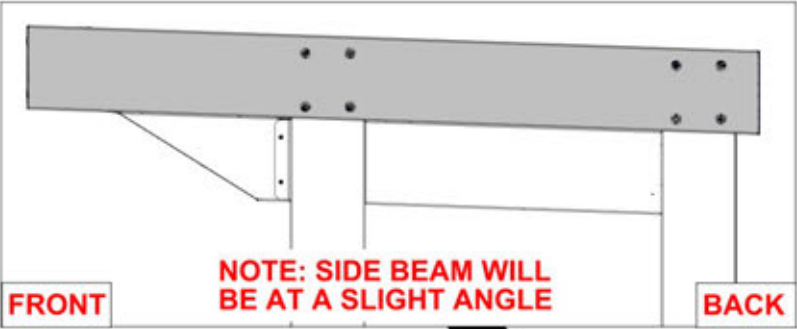

1103 (x8)
TORX SOCKET
SCREW 1/4-20

B05 (x1)
SIDE BEAM


BACK

LEFT

FRONT


RIGHT

STEP 38A - KITCHEN ASSEMBLY

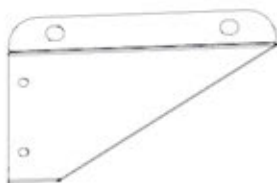


B08 CORBEL - A4M02041
(x1) 1 7/16"x6 11/16"x11 1/8" (36x170x282)

**NOTE: CORBEL BRACKET SLOTS
WILL FIT AROUND THREADED
INSERTS AND FLUSH AGAINST BEAM**

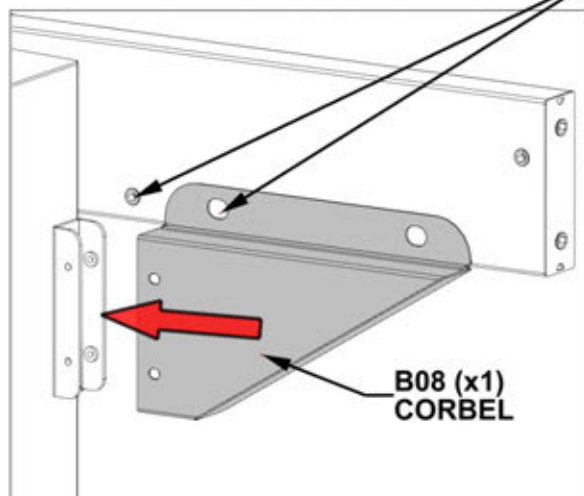


**SLIDE CORBEL IN PLACE
UNTIL FLUSH AGAINST POST**

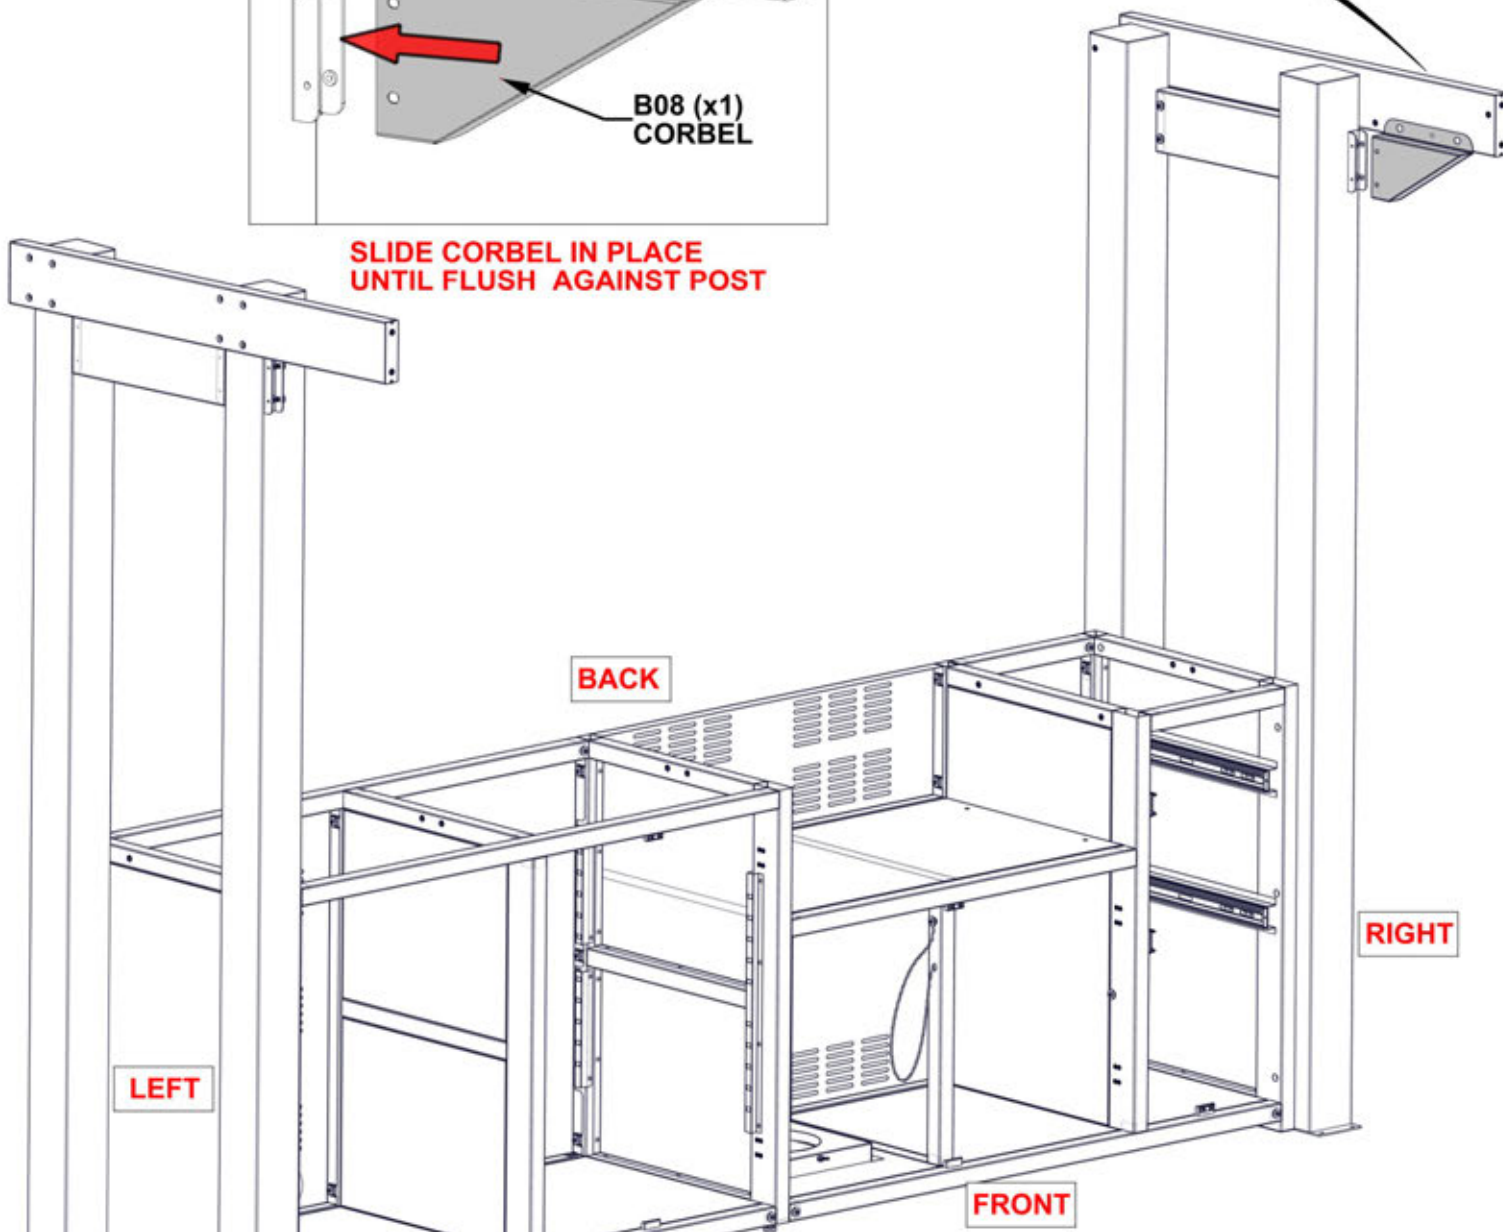

STEP 38B - KITCHEN ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT TIGHTEN HARDWARE AT THIS STEP

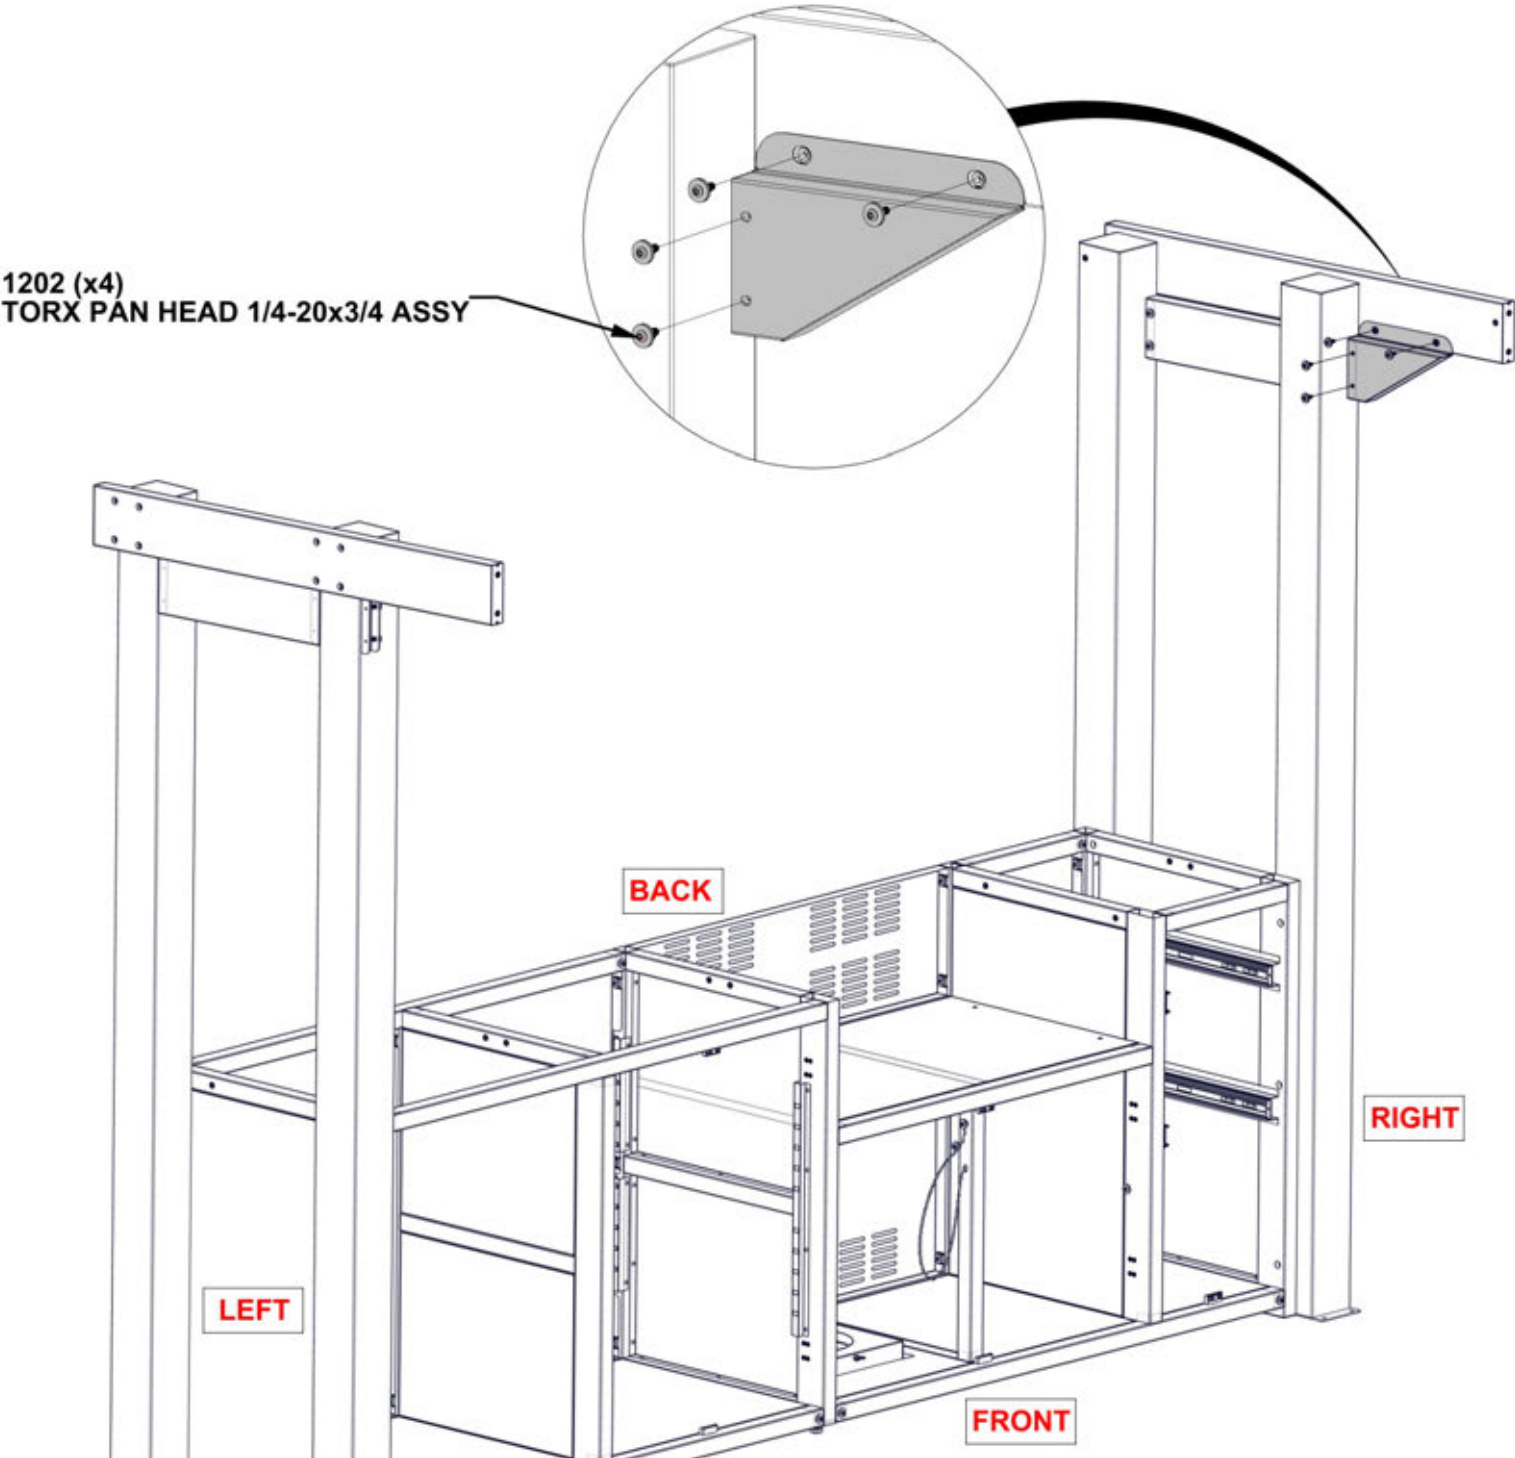

STEP 39 - BACK BEAM ASSEMBLY




J2 SPLICE BRACKET - A4M02184
(x1) 1 5/16"x4 11/16"x19 11/16" (33.2x119.2x500)

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY



B02 BACK BEAM - A4M02013
(x1) 1 7/16"x4 13/16"x61 1/4" (36x122x1556)

DO NOT TIGHTEN HARDWARE AT THIS STEP

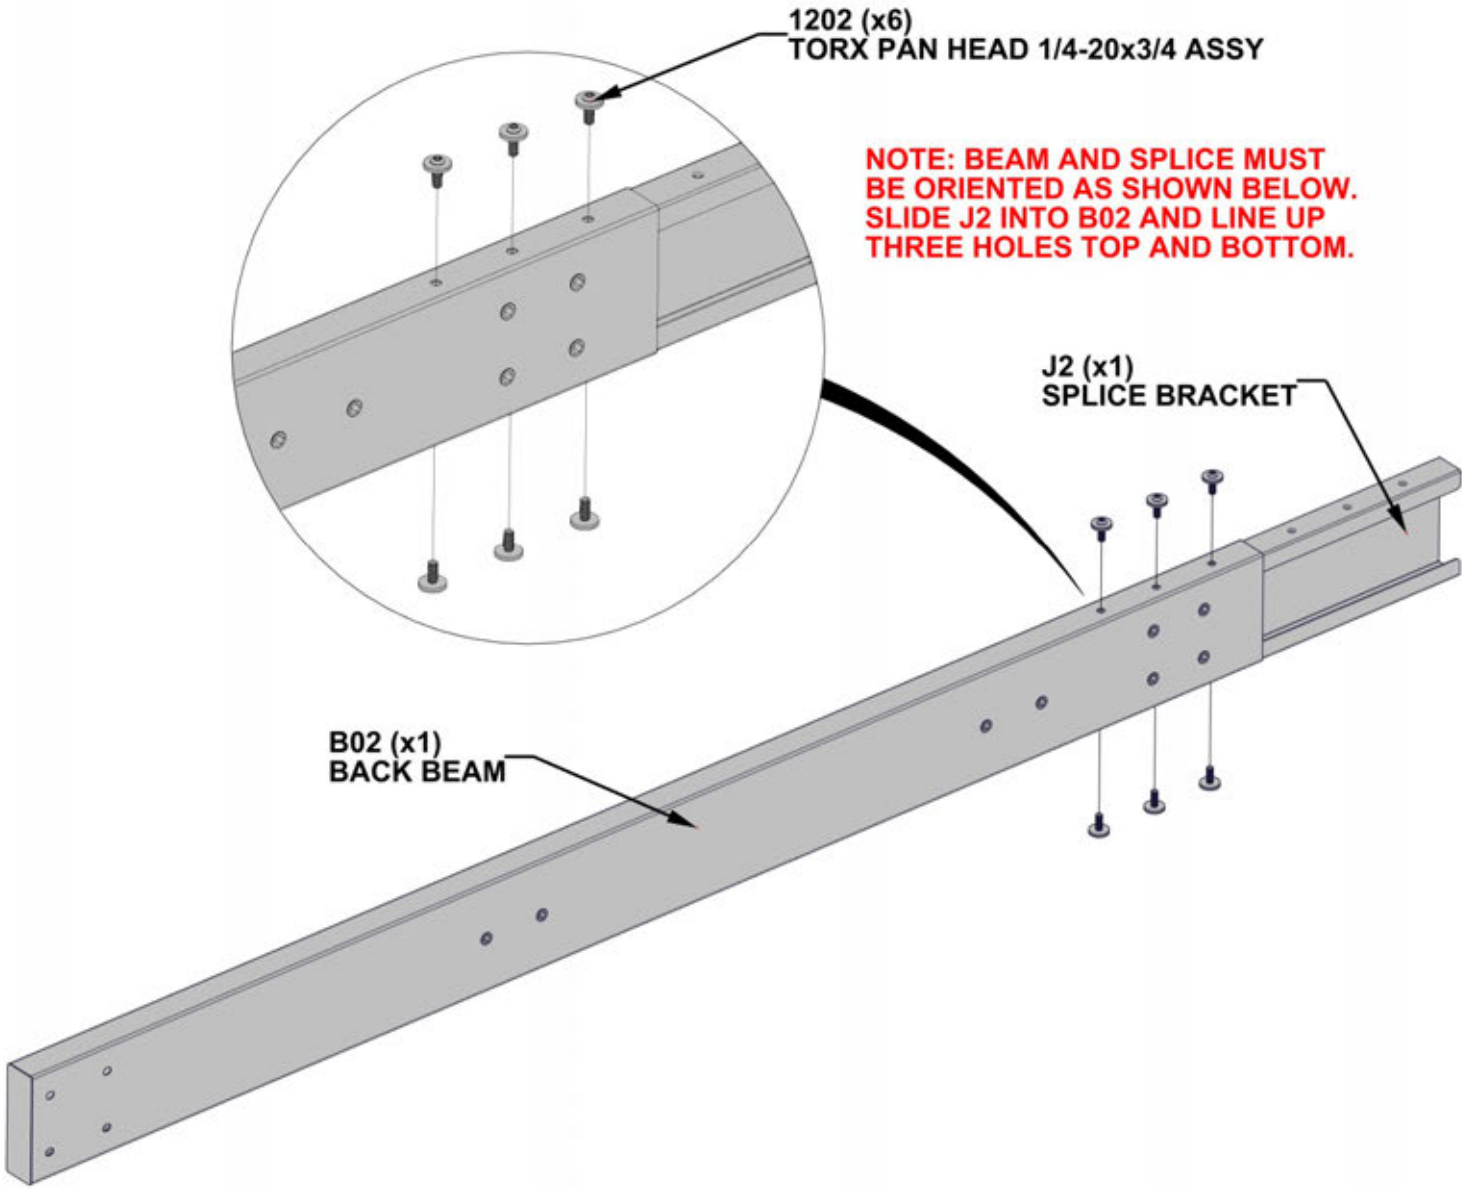


STEP 40 - BACK BEAM ASSEMBLY



B06 BACK BEAM - A4M02024
(x1) 1 7/16"x4 13/16"x (36x122x1556)

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

SLIDE B06 ONTO SPLICE BRACKET.
GENTLY TAP ENDS OF ASSEMBLY
WITH RUBBER Mallet UNTIL GAP
CLOSES, THEN TIGHTEN ALL BOLTS
ON BEAM.

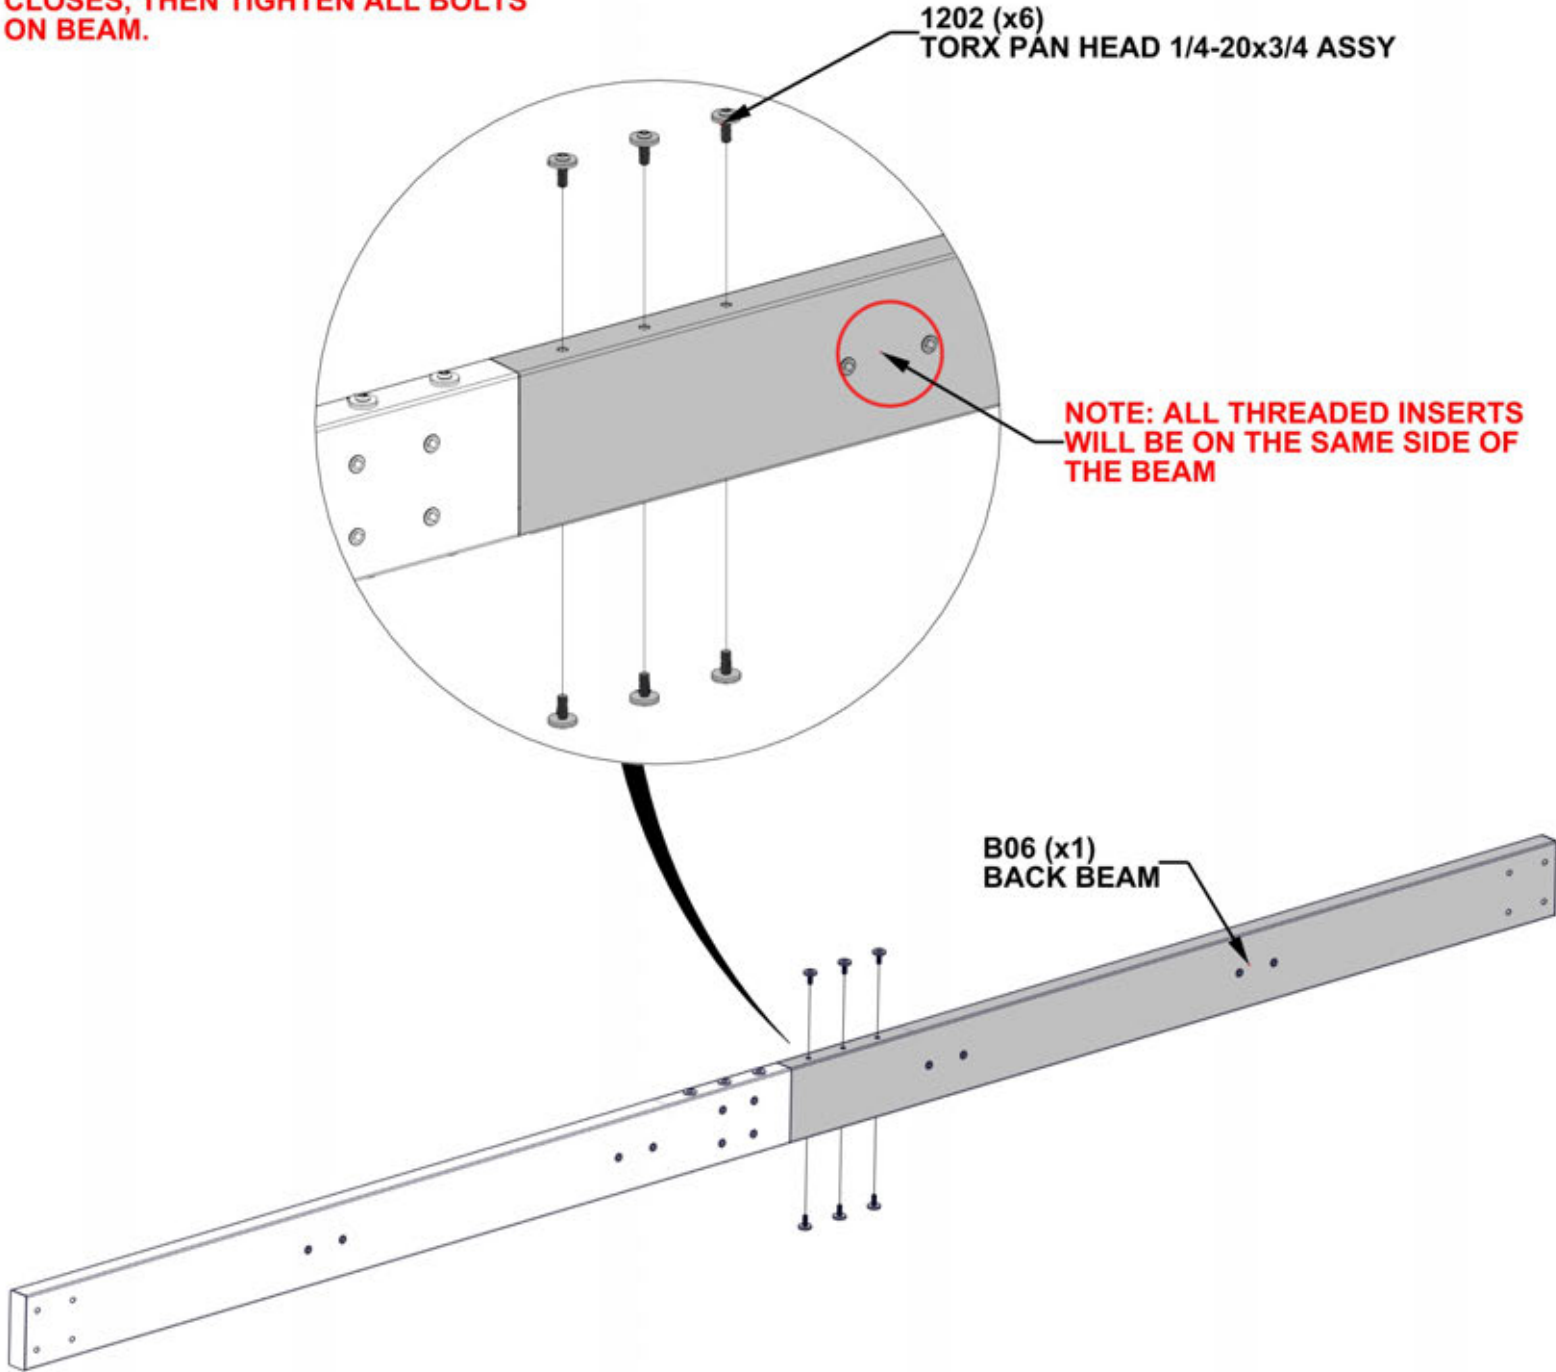

STEP 41 - FRONT BEAM ASSEMBLY



J1 SPLICE BRACKET - A4M02183
(x1) 1 5/16"x5 3/16"x19 11/16" (33.2x131.2x500)

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY




B03 FRONT BEAM - A4M02014
(x1) 1 7/16"x5 1/4"x62 11/16" (36x134x1593)

DO NOT TIGHTEN HARDWARE AT THIS STEP

NOTE: BEAM AND SPLICE MUST
BE ORIENTED AS SHOWN BELOW.
SLIDE J1 INTO B03 AND LINE UP
THREE HOLES TOP AND BOTTOM.


NOTE: ARROW INDICATES
TOP SURFACE OF BEAM

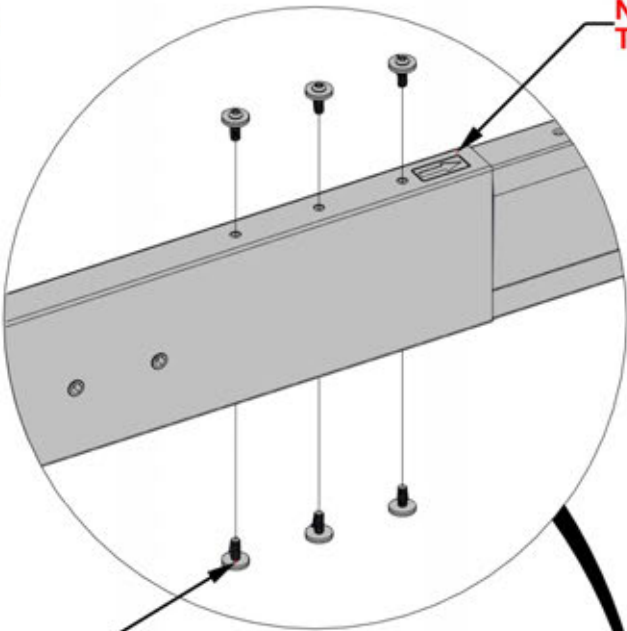

1202 (x6)
TORX PAN HEAD 1/4-20x3/4 ASSY

J1 (x1)
SPLICE BRACKET

B03 (x1)
FRONT BEAM

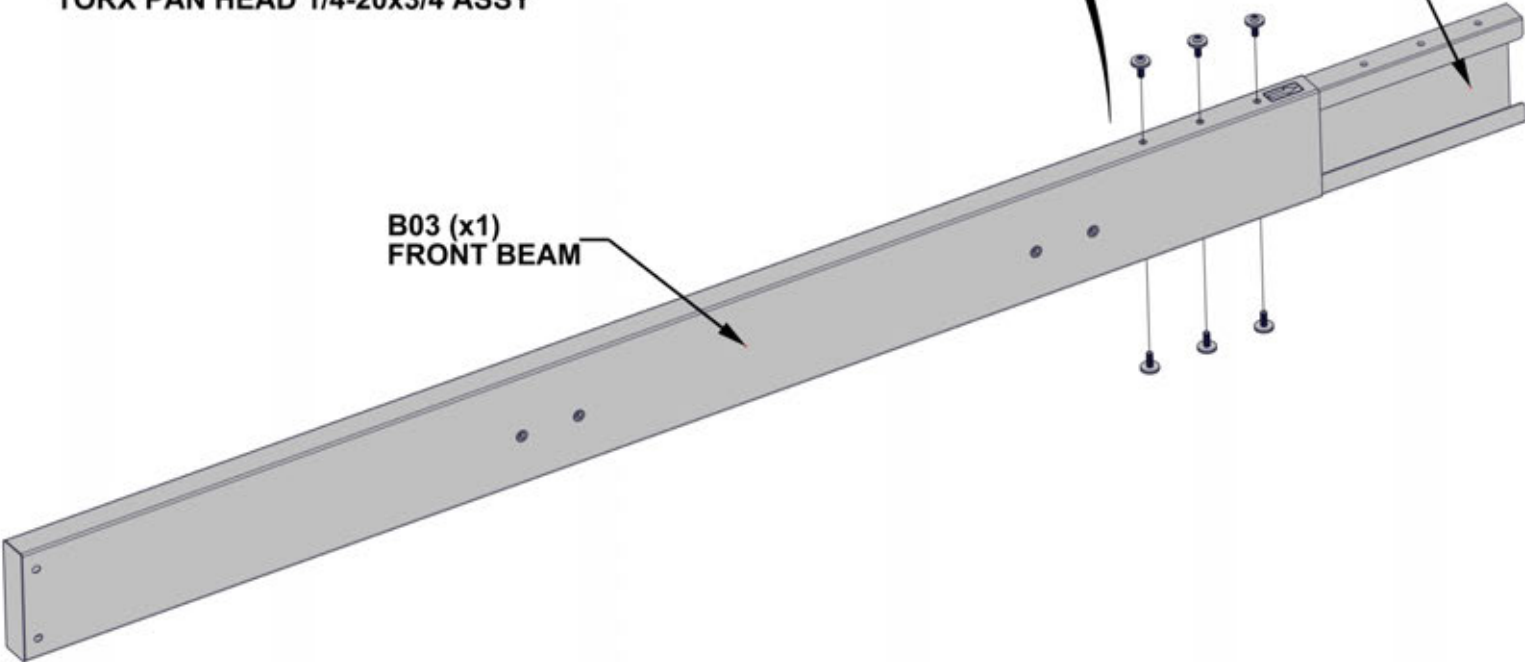

STEP 42 - FRONT BEAM ASSEMBLY



B07 FRONT BEAM - A4M02027
(x1) 1 7/16"x5 1/4"x62 11/16" (36x134x1593)

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


SLIDE B07 ONTO SPLICE BRACKET.
GENTLY TAP ENDS OF ASSEMBLY
WITH RUBBER Mallet UNTIL GAP
CLOSES, THEN TIGHTEN ALL BOLTS
ON BEAM.

NOTE: ARROWS INDICATE
TOP SURFACE OF BEAM.
BOTH ARROWS WILL FACE
EACH OTHER ON BEAM ASSEMBLY

1202 (x6)
TORX PAN HEAD 1/4-20x3/4 ASSY

NOTE: ALL THREADED
INSERTS WILL BE ON
THE SAME SIDE OF THE
BEAM

B07 (x1)
FRONT BEAM

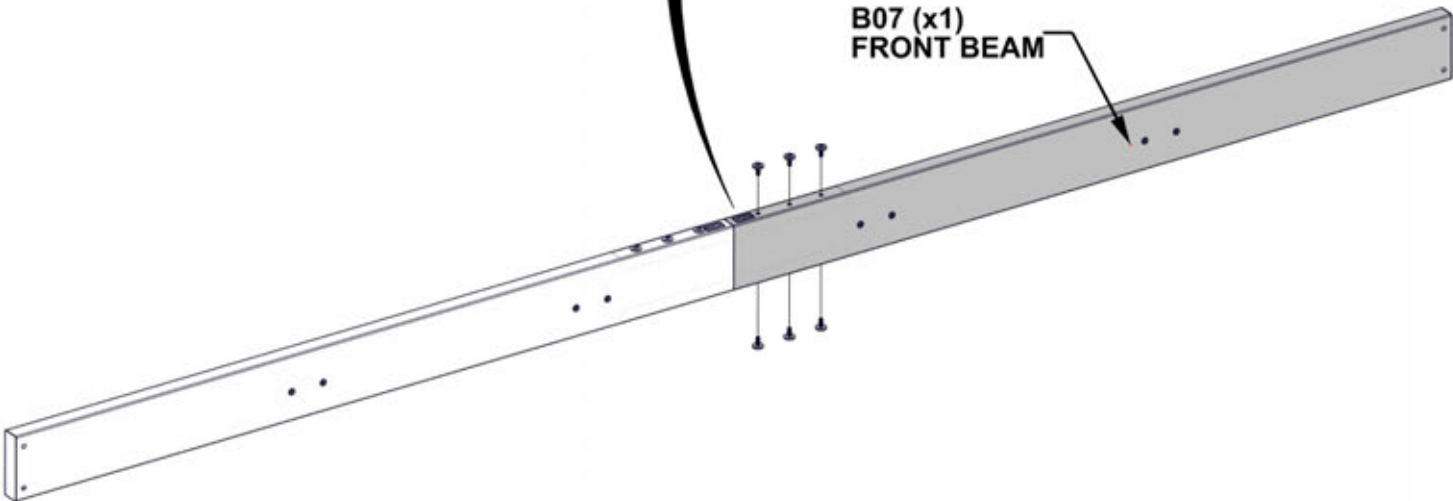

STEP 43 - ROOF ASSEMBLY




BACK BEAM ASSEMBLY
STEPS 39-40

QTY	PART NUMBER	Description
8	H101103	TORX SOCKET SCREW 1/4-20

FOR THIS STEP IT IS HELPFUL TO HAVE THREE ADDITIONAL PEOPLE TO HELP HOLD BACK BEAM IN PLACE AND ATTACH HARDWARE.

DO NOT STAND ON CABINET FRAME TO INSTALL BEAM.
DO NOT FULLY TIGHTEN HARDWARE AT THIS STEP.


CRITICAL: BACK BEAM MUST BE ORIENTED IN THE EXACT WAY SHOWN BELOW.

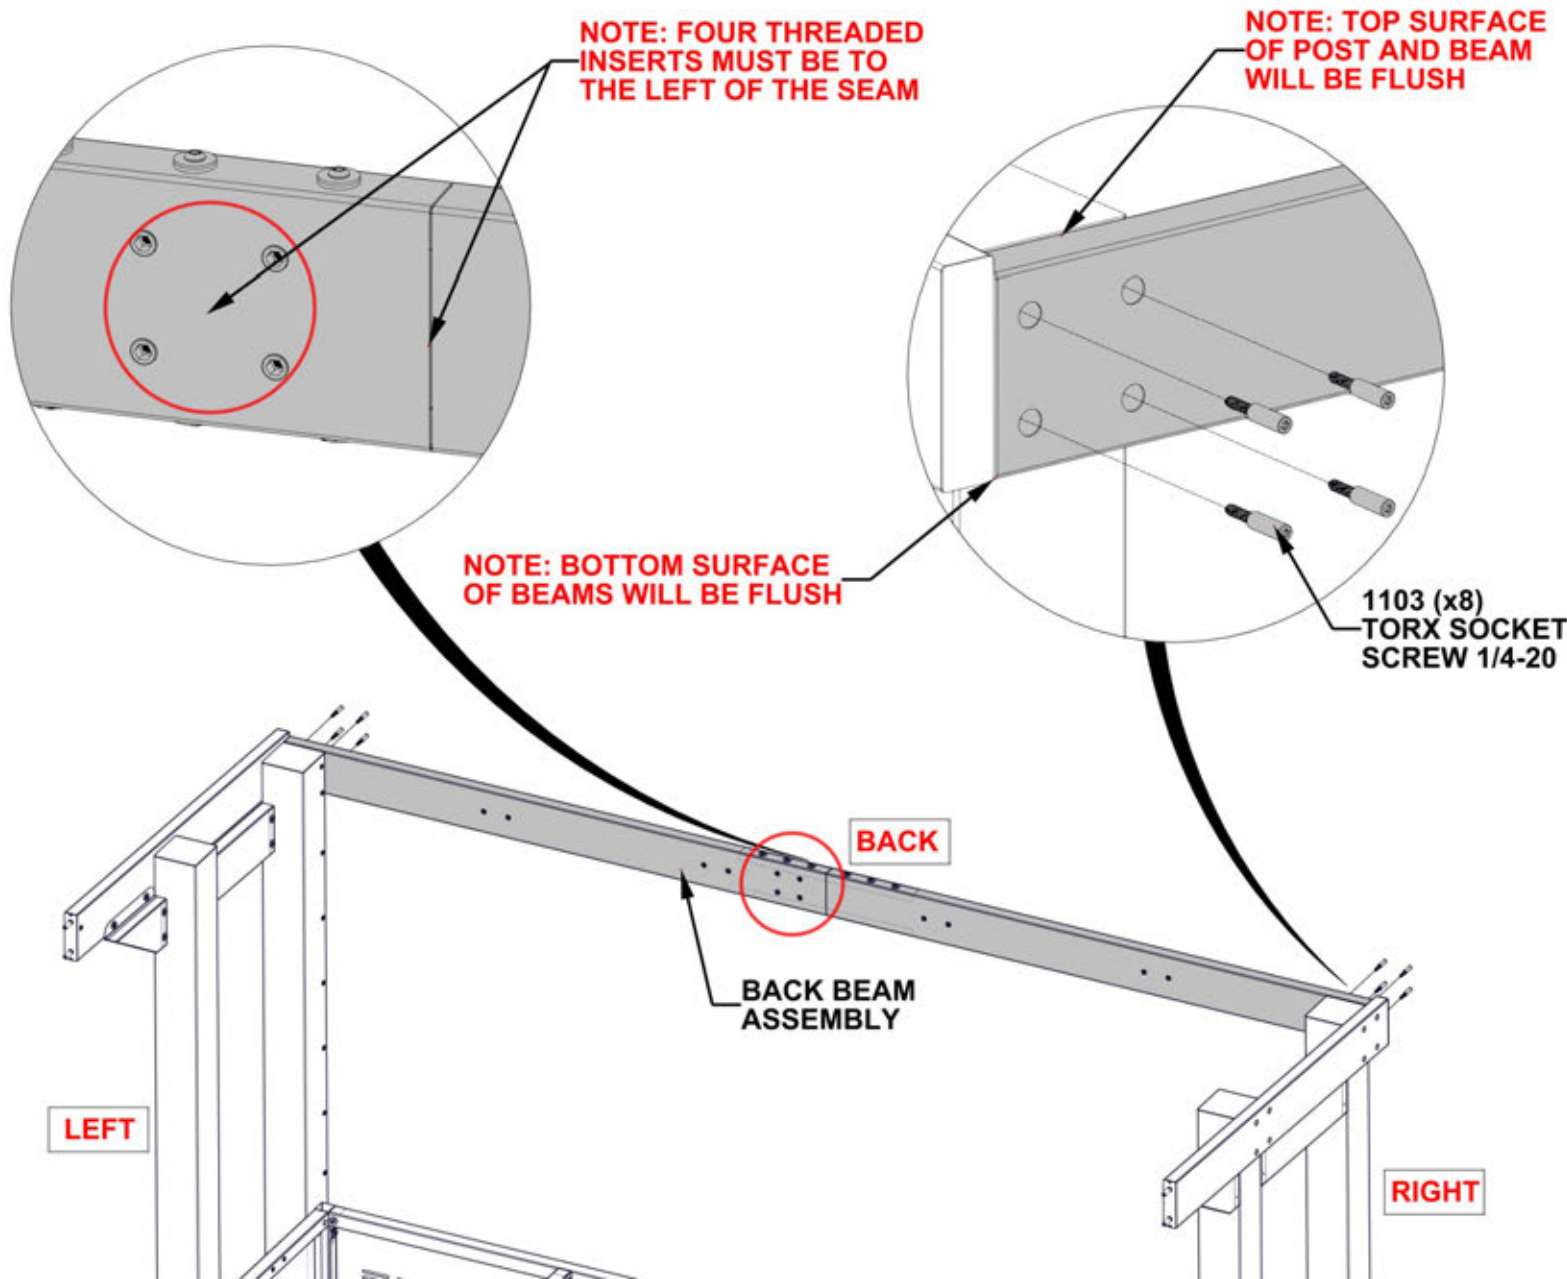


STEP 44A - ROOF ASSEMBLY

USE THIS STEP TO POSITION THE FRONT BEAM ASSEMBLY IN THE EXACT ORIENTATION SHOWN BELOW

FRONT BEAM ASSEMBLY
STEPS 41 - 42



NOTE: ARROWS INDICATE
TOP SURFACE OF BEAM.
BOTH ARROWS WILL FACE
EACH OTHER ON BEAM ASSEMBLY

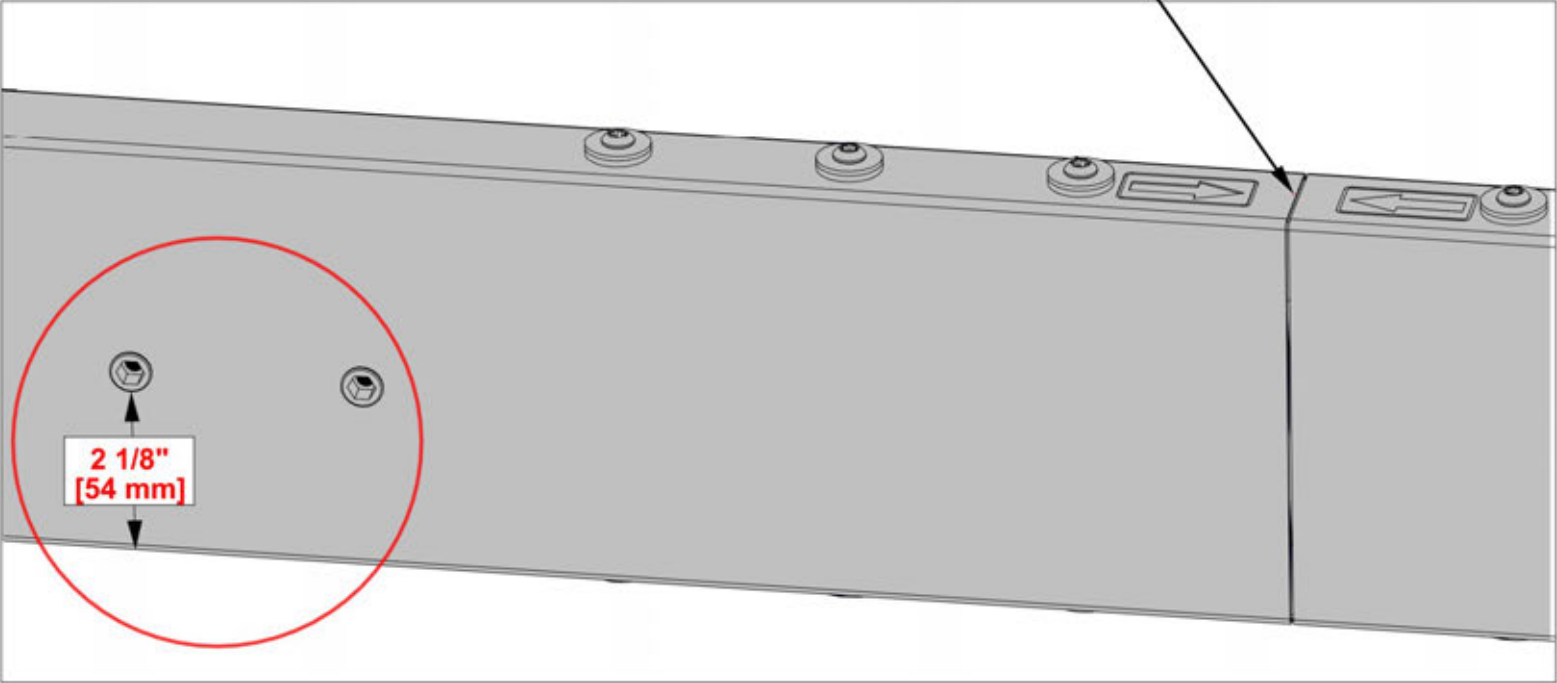

MEASURE FROM THE BOTTOM OF FRONT BEAM TO BOTTOM OF
THREADED INSERTS OUTLINED IN RED. IF THE DIMENSION IS NOT
CLOSE, FRONT BEAM WILL NEED TO BE FLIPPED.

STEP 44B - ROOF ASSEMBLY

QTY	PART NUMBER	Description
4	H101103	TORX SOCKET SCREW 1/4-20




FRONT BEAM ASSEMBLY
STEPS 41 - 42

FOR THIS STEP IT IS HELPFUL TO HAVE THREE ADDITIONAL PEOPLE TO HELP HOLD FRONT BEAM IN PLACE AND ATTACH HARDWARE.

DO NOT STAND ON CABINET FRAME TO INSTALL BEAM.
DO NOT FULLY TIGHTEN HARDWARE AT THIS STEP.

CRITICAL: FRONT BEAM MUST
BE ORIENTED IN THE EXACT
WAY SHOWN BELOW

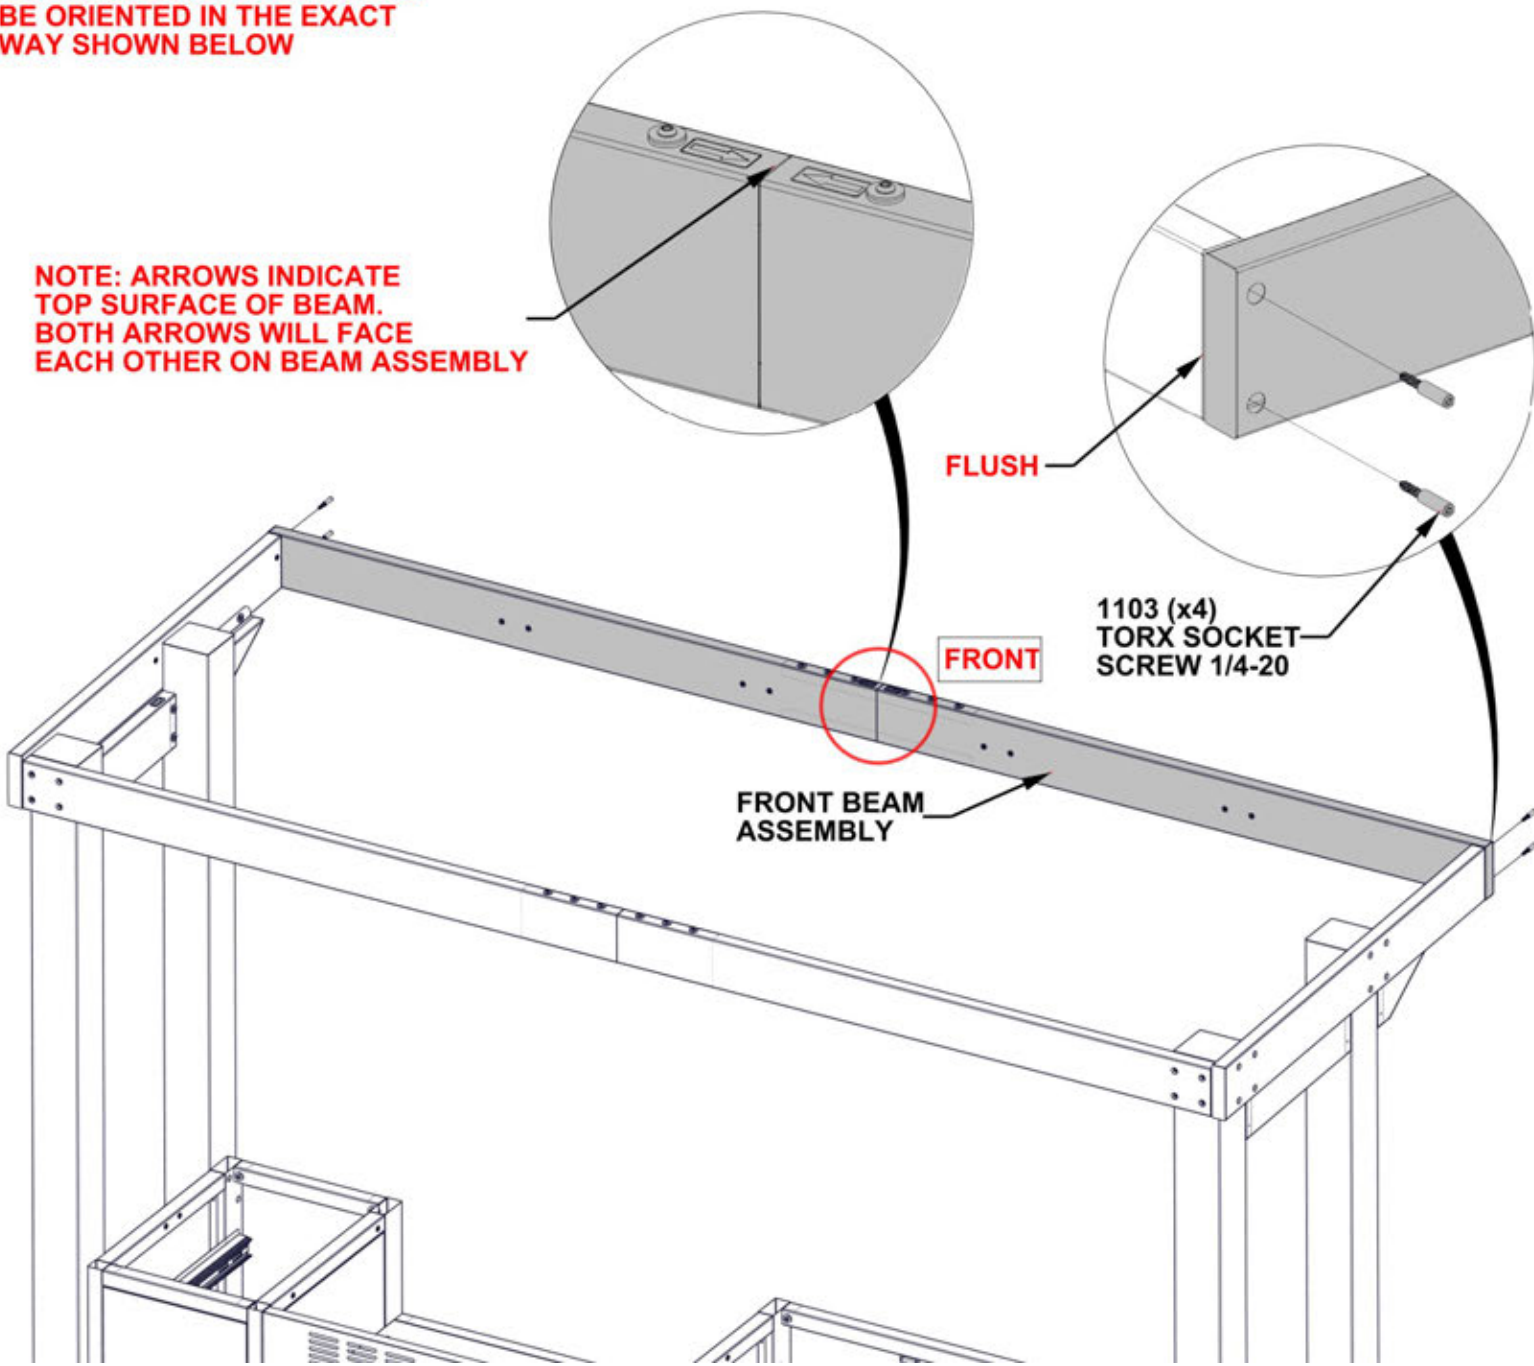


STEP 45 - KITCHEN ASSEMBLY




QTY	PART NUMBER	Description
4	H101103	TORX SOCKET SCREW 1/4-20

P05 BACK POST - A4M02015
(x1) 2 5/8"x7 7/8"x88 3/4" (66x200x2254)

DO NOT STAND ON CABINET FRAME TO INSTALL POST HARDWARE.
DO NOT TIGHTEN HARDWARE AT THIS STEP

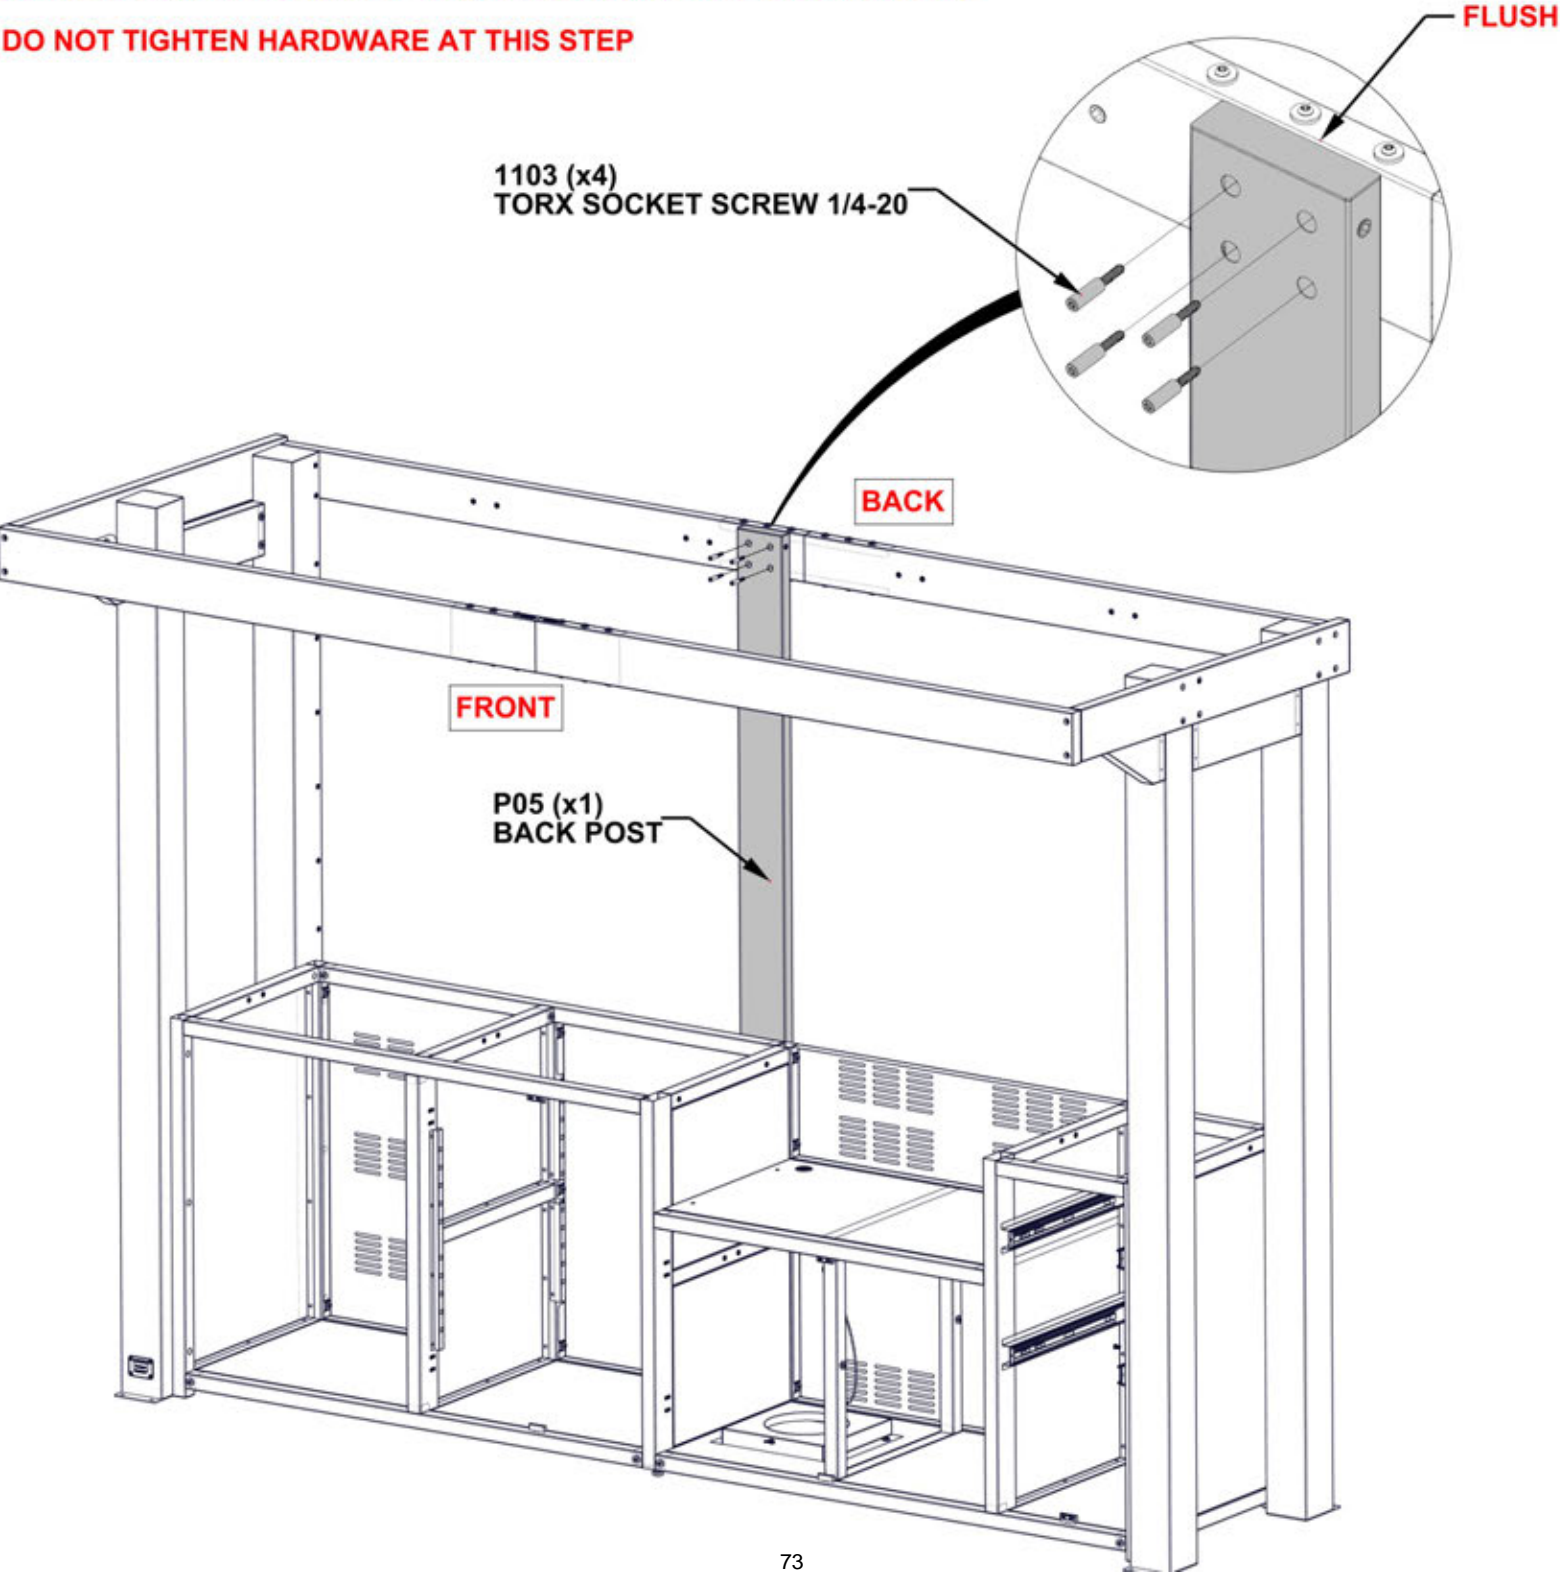

STEP 46 - KITCHEN ASSEMBLY

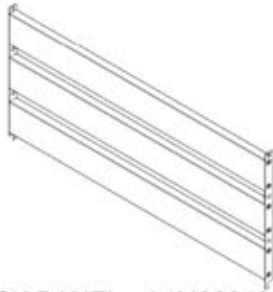

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

B10 BACK PANEL - A4M02043
(x1) 1 7/16"x22 11/16"x49 5/8" (36x576.5x1261)

DO NOT TIGHTEN HARDWARE AT THIS STEP

NOTE: USE RIGHT ANGLE DRILL ADAPTER FOR THIS STEP

NOTE: BACK PANEL WILL FIT AROUND THREADED INSERTS AND FLUSH AGAINST POST

1202 (x6)
TORX PAN HEAD
1/4-20x3/4 ASSY

NOTE: NOTCH IN BRACKET TOWARD BOTTOM

B10 (x1)
BACK PANEL

STEP 47 - KITCHEN ASSEMBLY



QTY	PART NUMBER	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

B10 BACK PANEL - A4M02043
(x1) 1 7/16"x22 11/16"x49 5/8" (36x576.5x1261)

DO NOT TIGHTEN HARDWARE AT THIS STEP


NOTE: USE RIGHT ANGLE DRILL ADAPTER FOR THIS STEP

NOTE: BACK PANEL WILL FIT AROUND THREADED INSERTS AND FLUSH AGAINST POST

1202 (x8)
TORX PAN HEAD
1/4-20x3/4 ASSY

NOTE: CONNECT NOTCHED BRACKETS IN THE ORIENTATION SHOWN

B10 (x1)
BACK PANEL

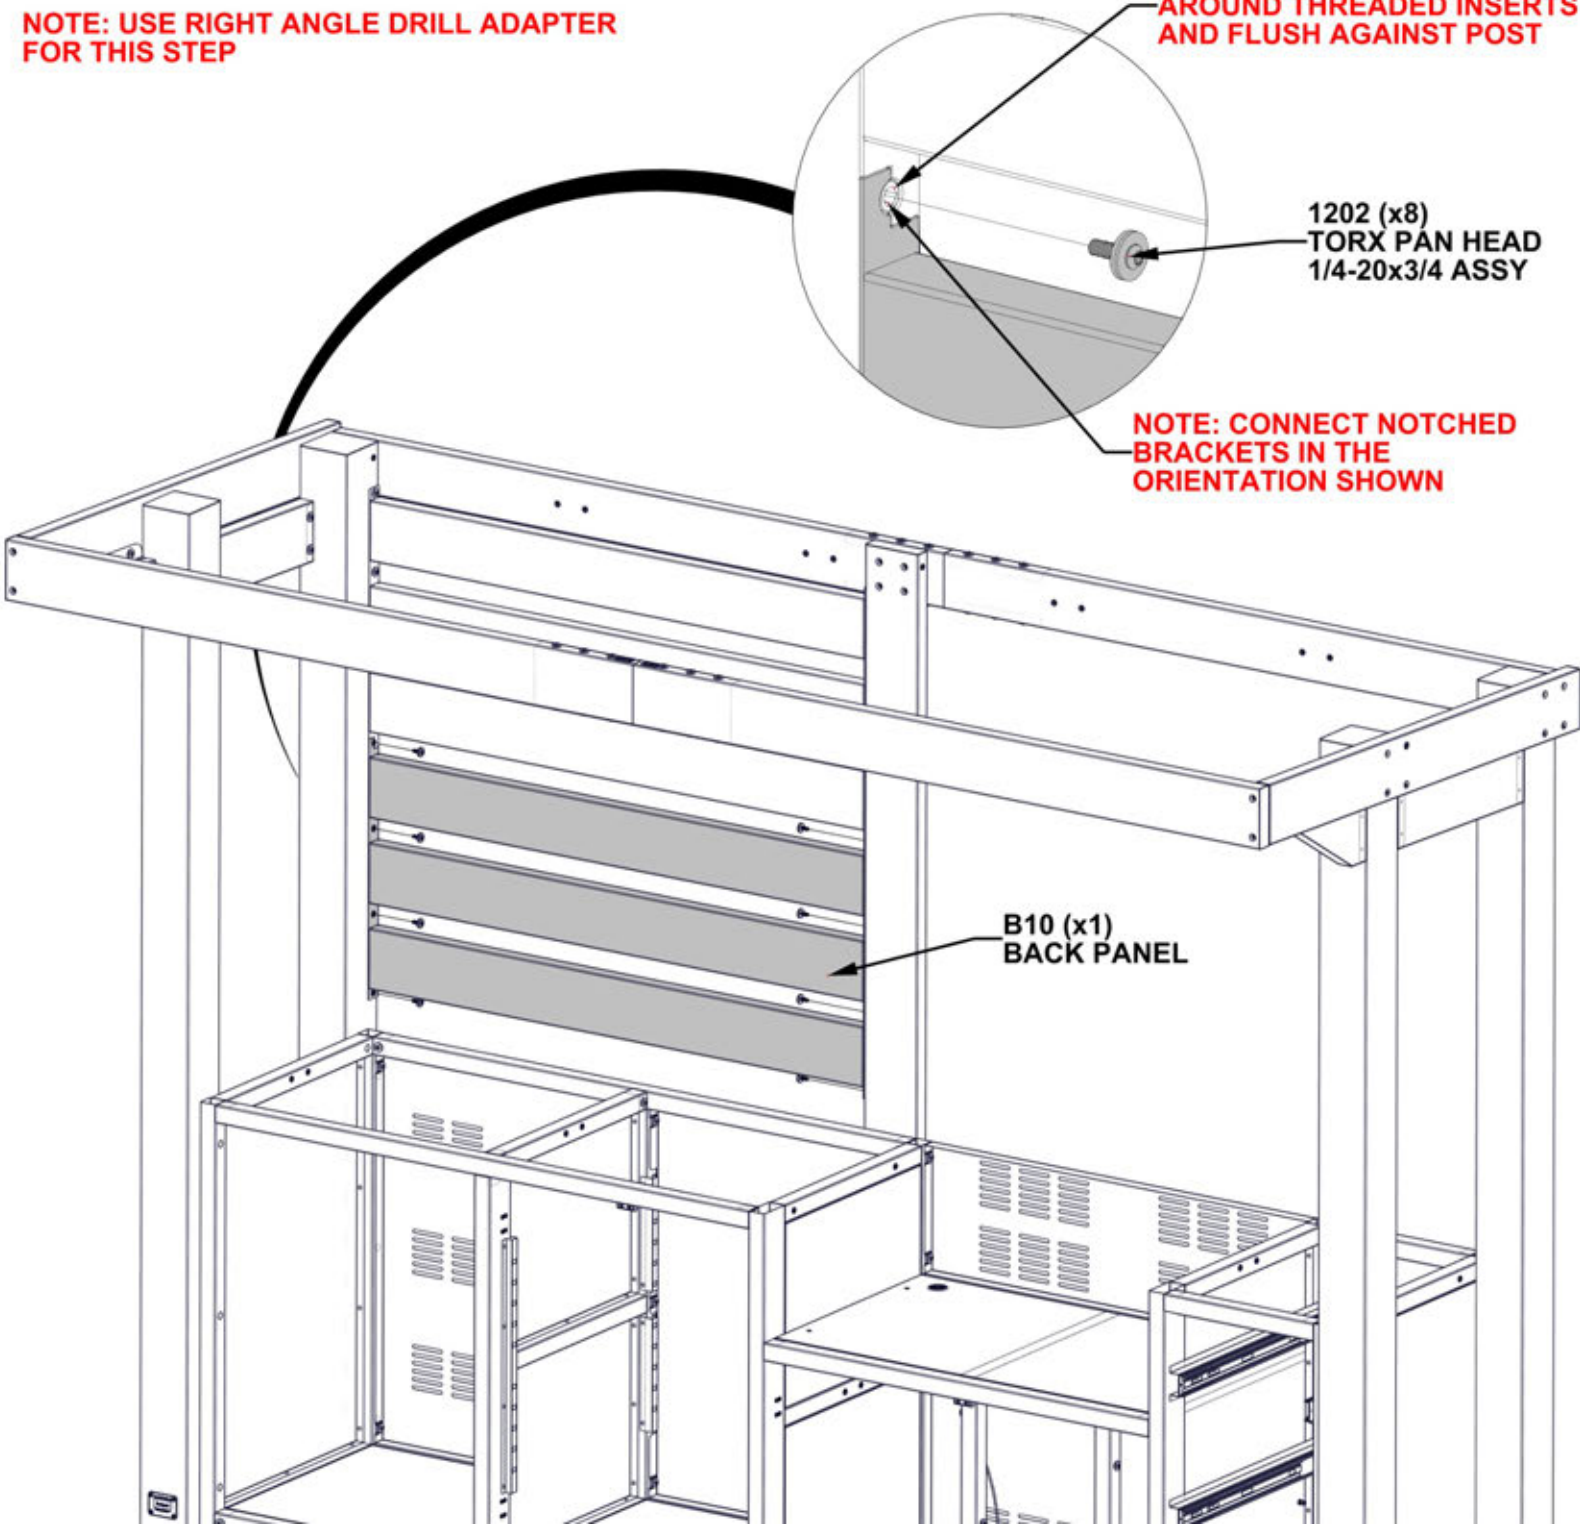

STEP 48 - ROOF ASSEMBLY




QTY	PART NUMBER	Description
16	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

R01 RAFTER - A4M02020
(x4) 3 1/8"x3 15/16"x45 1/16" (80x100x1144)

**DO NOT STAND ON CABINET FRAME TO
INSTALL RAFTERS**

DO NOT TIGHTEN HARDWARE AT THIS STEP

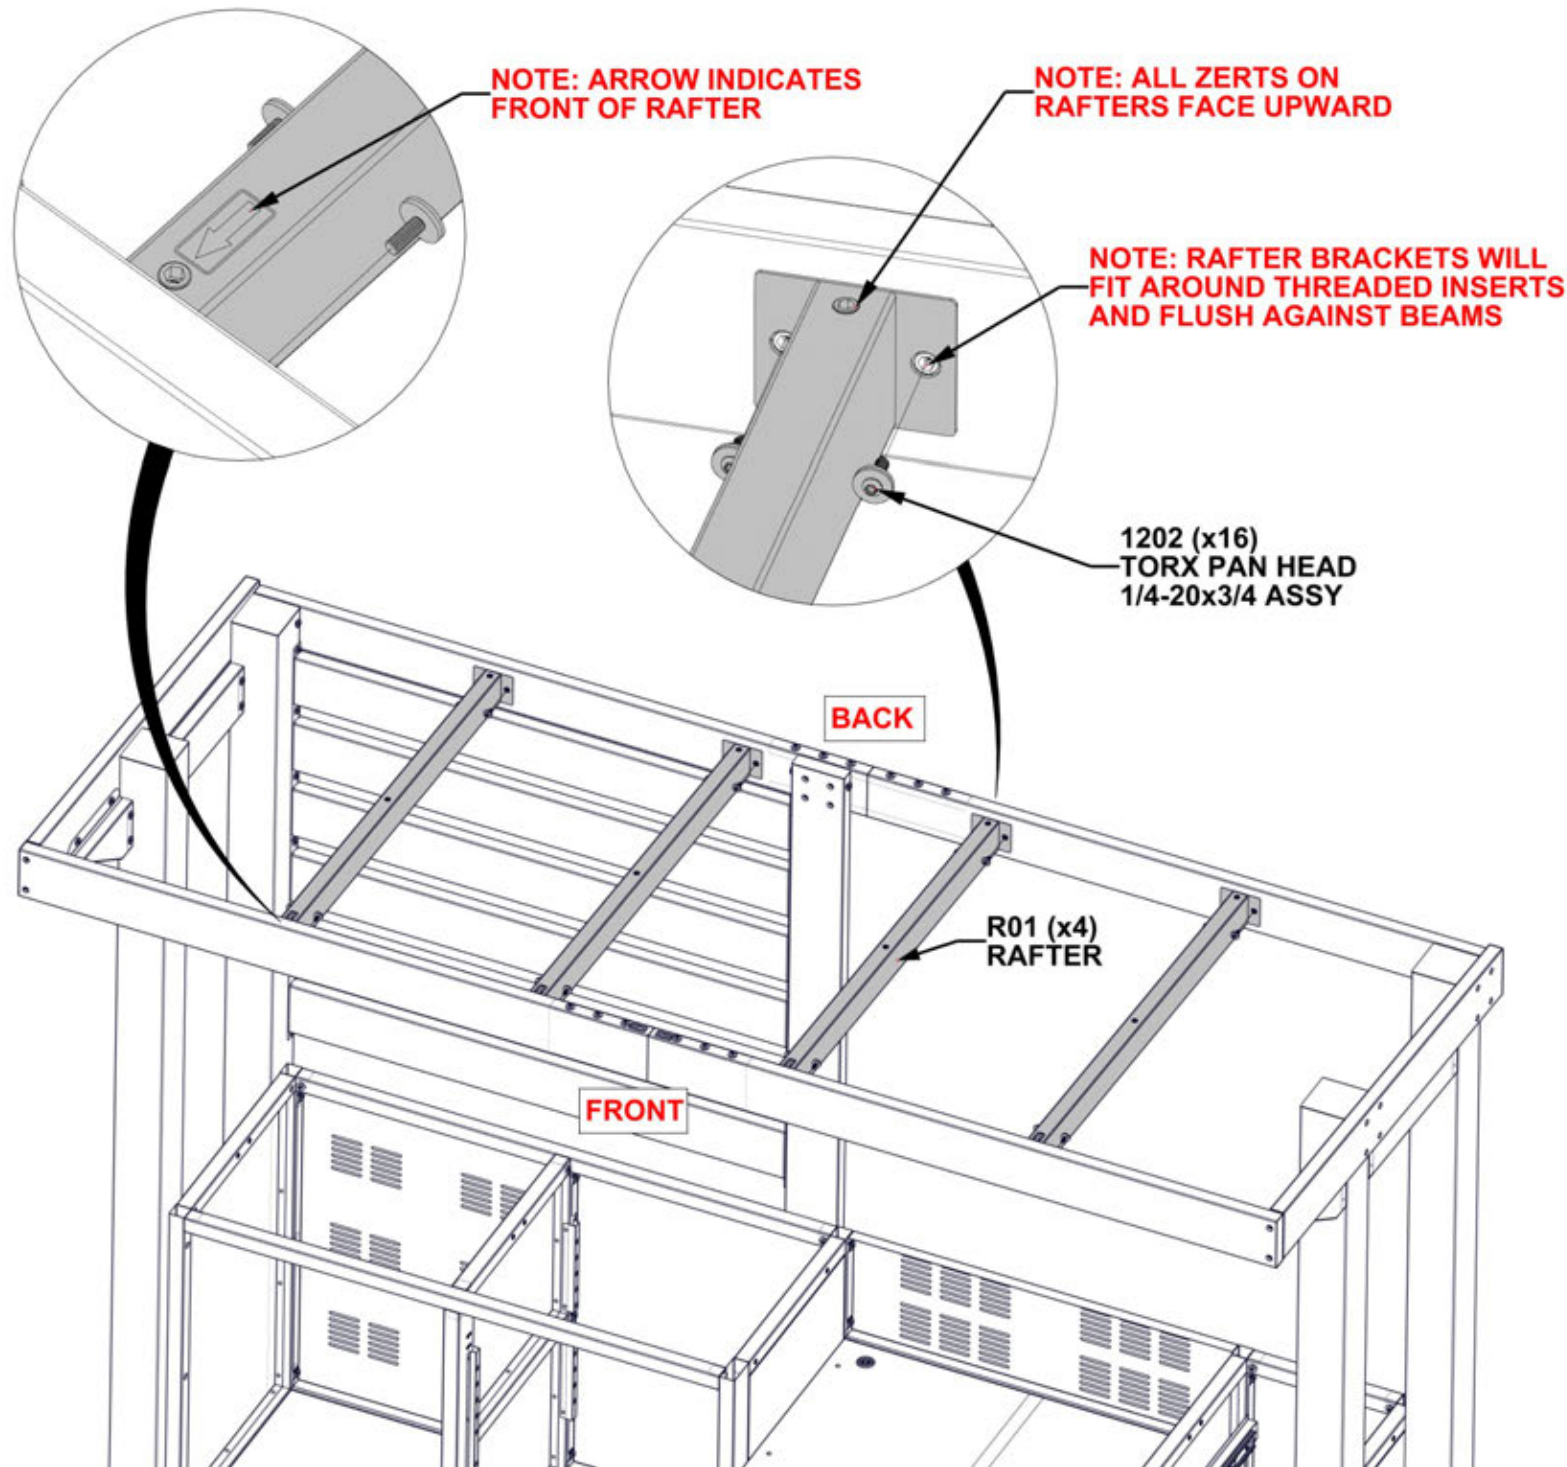

STEP 49 - PURLIN ASSEMBLY




A6P00530 2-WAY SQUARE PLUG
(x2)



E02 PURLIN - A4M02023
(x2) 1 9/16"x1 3/4"x73 5/8" (40x45x1870.75)

COMPLETE THIS STEP 2 TIMES

USE A RUBBER Mallet TO TAP 2-WAY SQUARE PLUG INTO END OF PURLINS

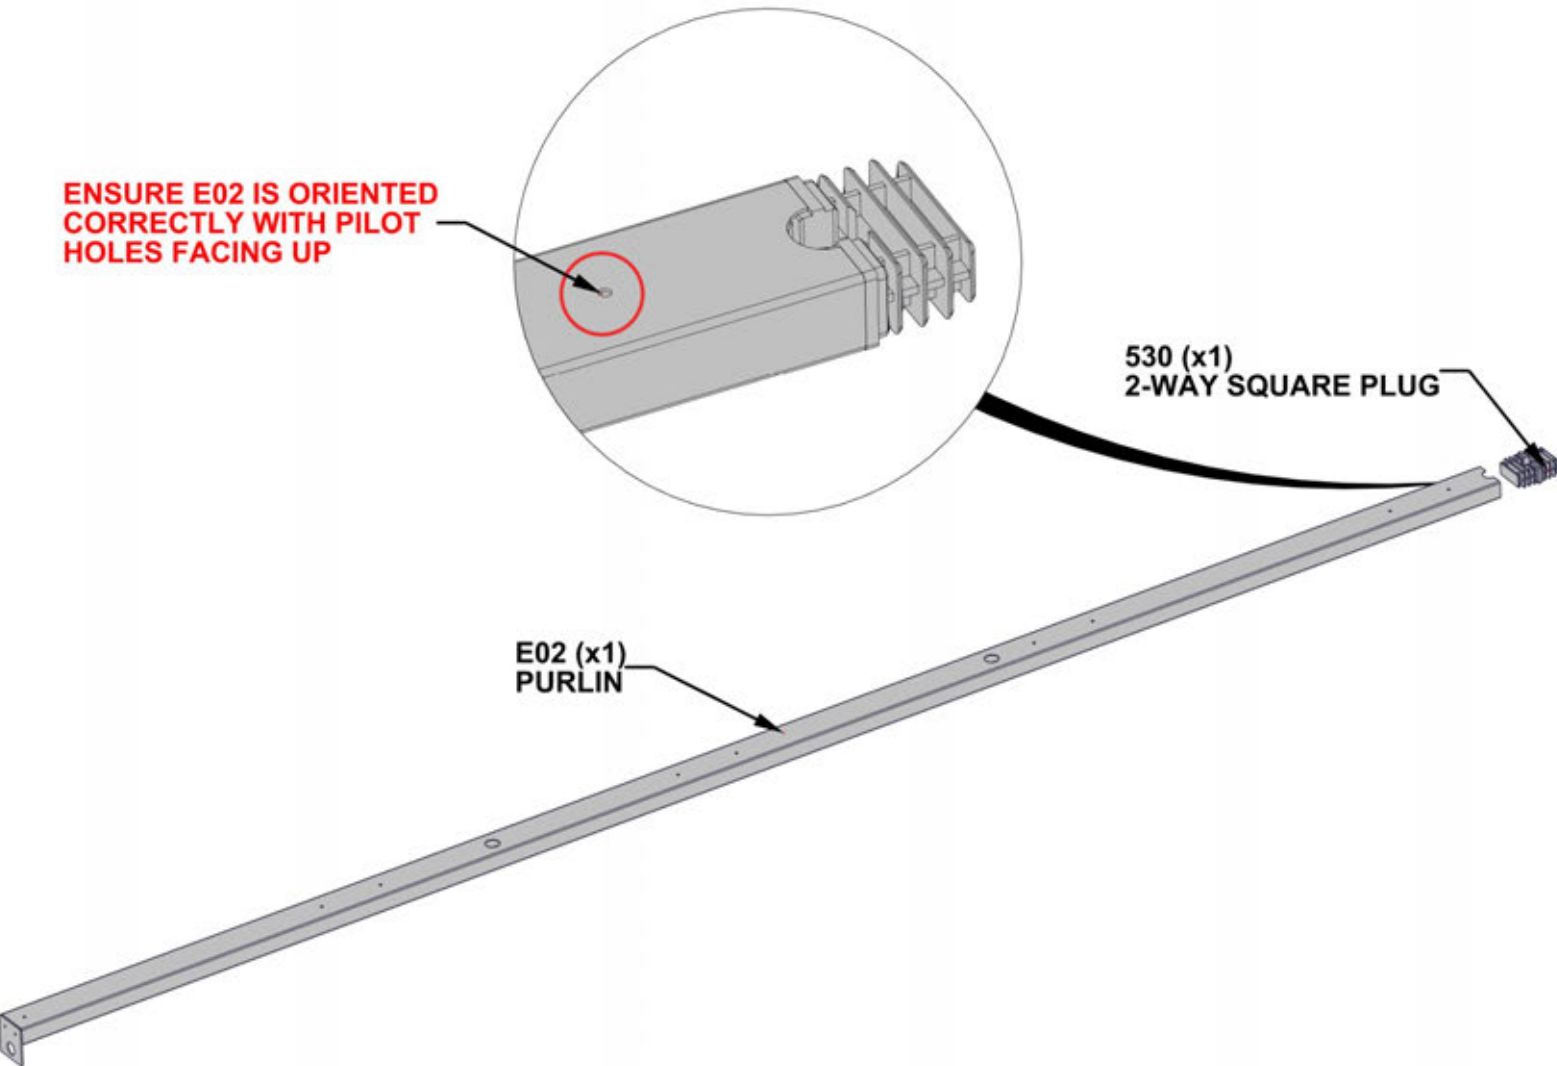


STEP 50 - PURLIN ASSEMBLY



E01 PURLIN - A4M02021
(x2) 1 9/16"x1 3/4"x48 13/16" (40x45x1239.75)

COMPLETE THIS STEP 2 TIMES

USE A RUBBER Mallet TO TAP ENDS
OF EACH PURLIN UNTIL TIGHT AGAINST
2-WAY PLUG

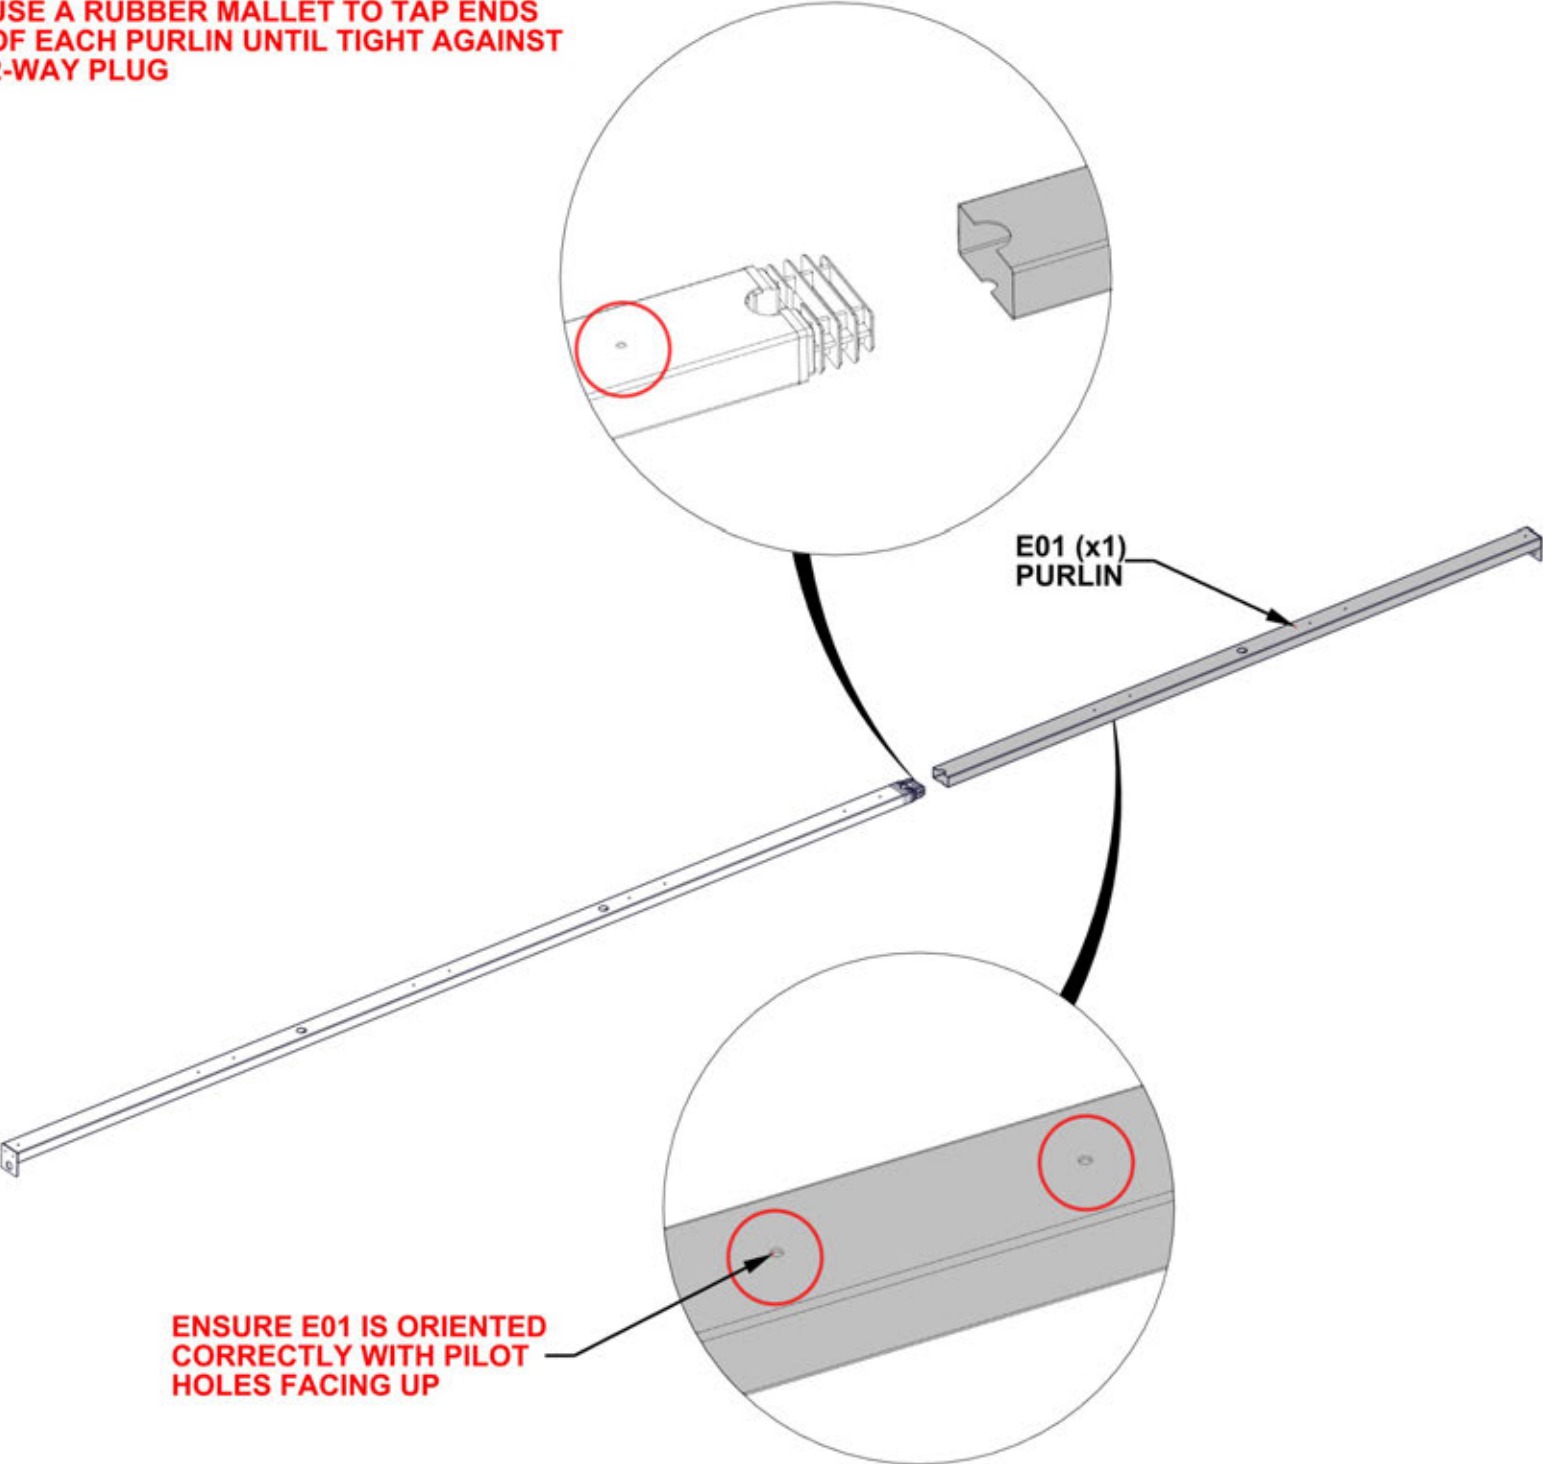

STEP 51A - ROOF ASSEMBLY


PURLIN ASSEMBLY STEP 49 - 50

QTY	PART NUMBER	Description
8	H101132	TORX SOCKET SCREW 1/4-20

**DO NOT STAND ON CABINET FRAME TO
INSTALL PURLINS**

DO NOT TIGHTEN HARDWARE AT THIS STEP

**NOTE: MAKE SURE MIDDLE OF PURLIN
ASSEMBLY IS SUPPORTED WHEN LIFTING**

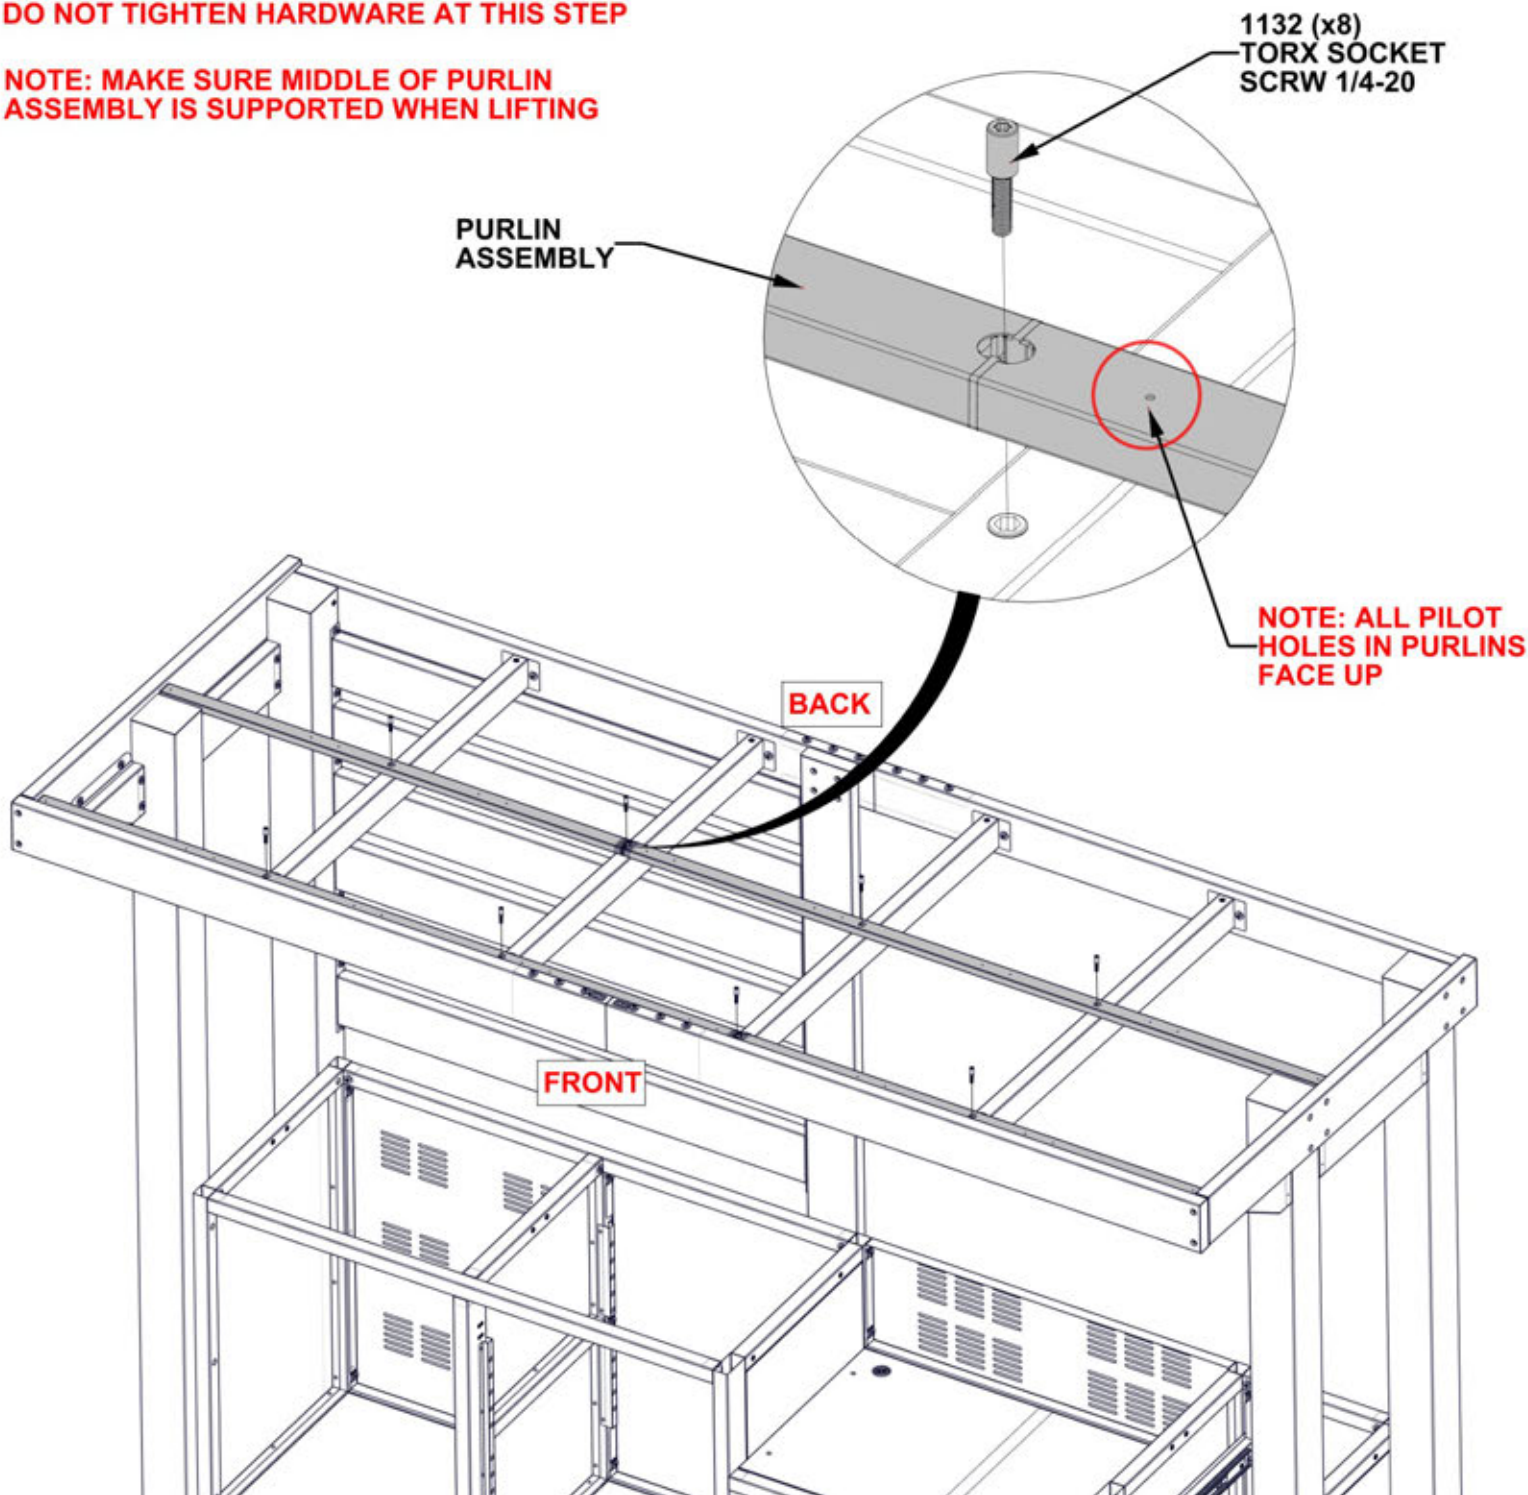

STEP 51B - ROOF ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY


DO NOT STAND ON CABINET FRAME TO
INSTALL PURLINS

DO NOT TIGHTEN HARDWARE AT THIS STEP

REPEAT THIS STEP FOR BOTH SIDES OF
KITCHEN ROOF

1202 (x2)
TORX PAN HEAD 1/4-20x3/4 ASSY

NOTE: BRACKET HOLE WILL
FIT AROUND THREADED INSERT
AND FLUSH AGAINST BEAM

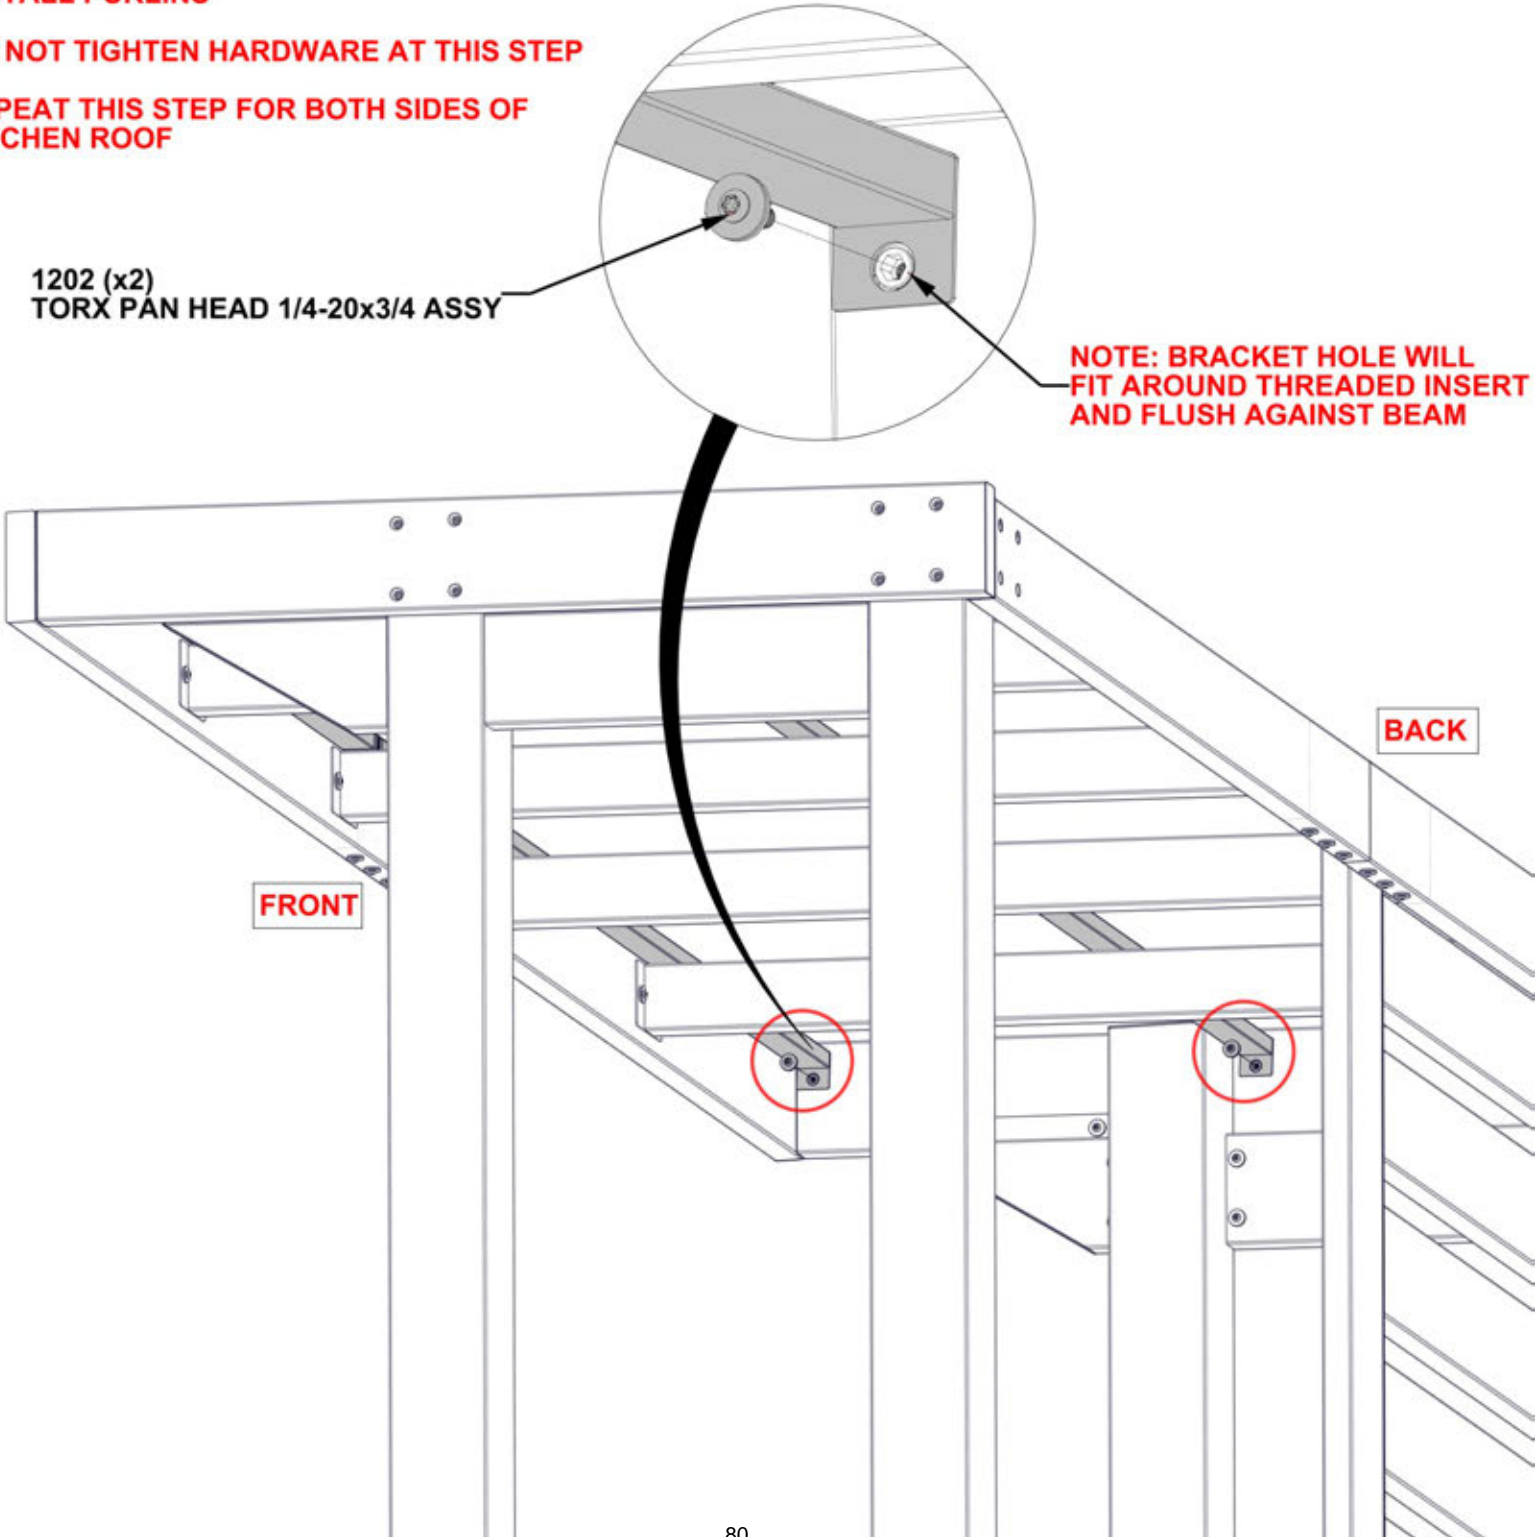

STEP 52A - ROOF ASSEMBLY



E03 PURLIN - A4M02025
(x1) 1 9/16"x1 3/4"x49 5/8" (40x45x1260)




QTY	PART NUMBER	Description
2	H101132	TORX SOCKET SCREW 1/4-20

DO NOT STAND ON CABINET FRAME TO
INSTALL PURLIN

DO NOT TIGHTEN HARDWARE AT THIS STEP

NOTE: ORIENTATION OF PURLIN.
TWO PILOT HOLES ON PURLIN
WILL BE CLOSEST TO MIDDLE POST.

1132 (x2)
TORX SOCKET
SCREW 1/4-20

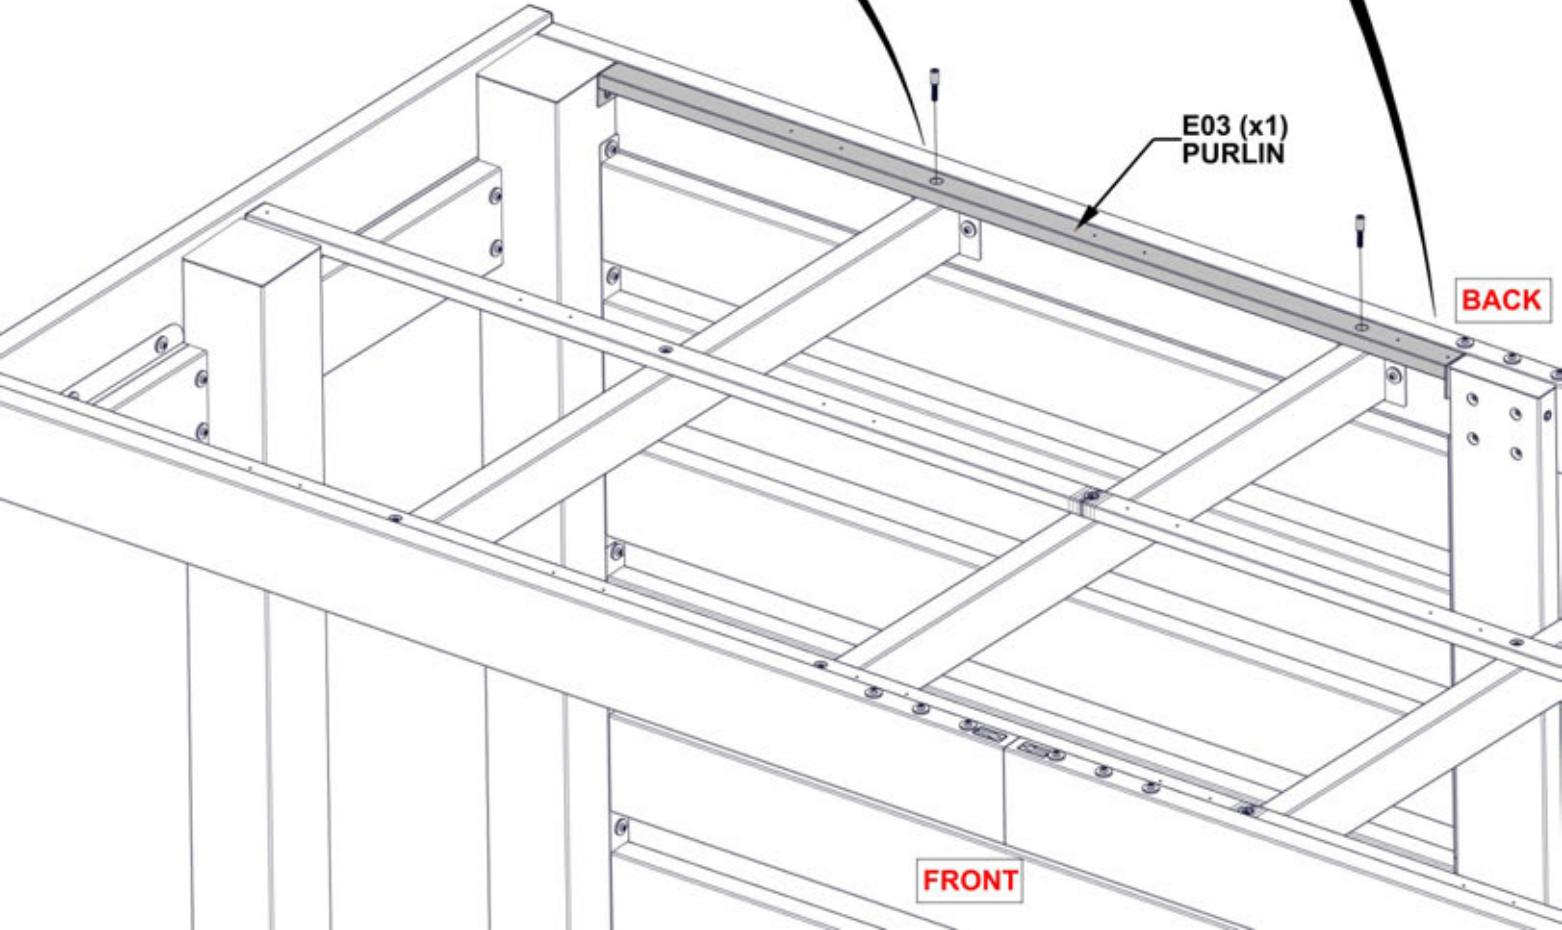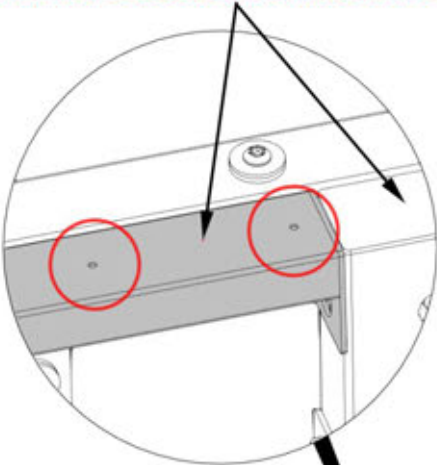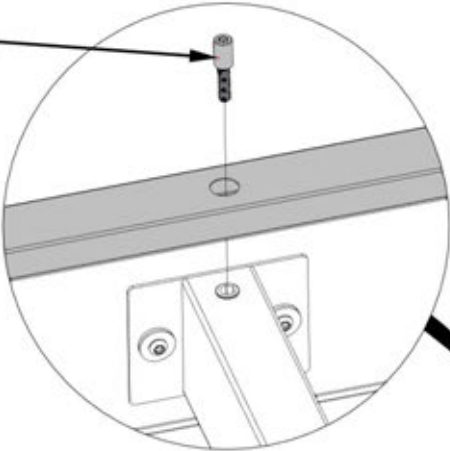


STEP 52B - ROOF ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT STAND ON CABINET FRAME TO
INSTALL PURLIN

DO NOT TIGHTEN HARDWARE AT THIS STEP

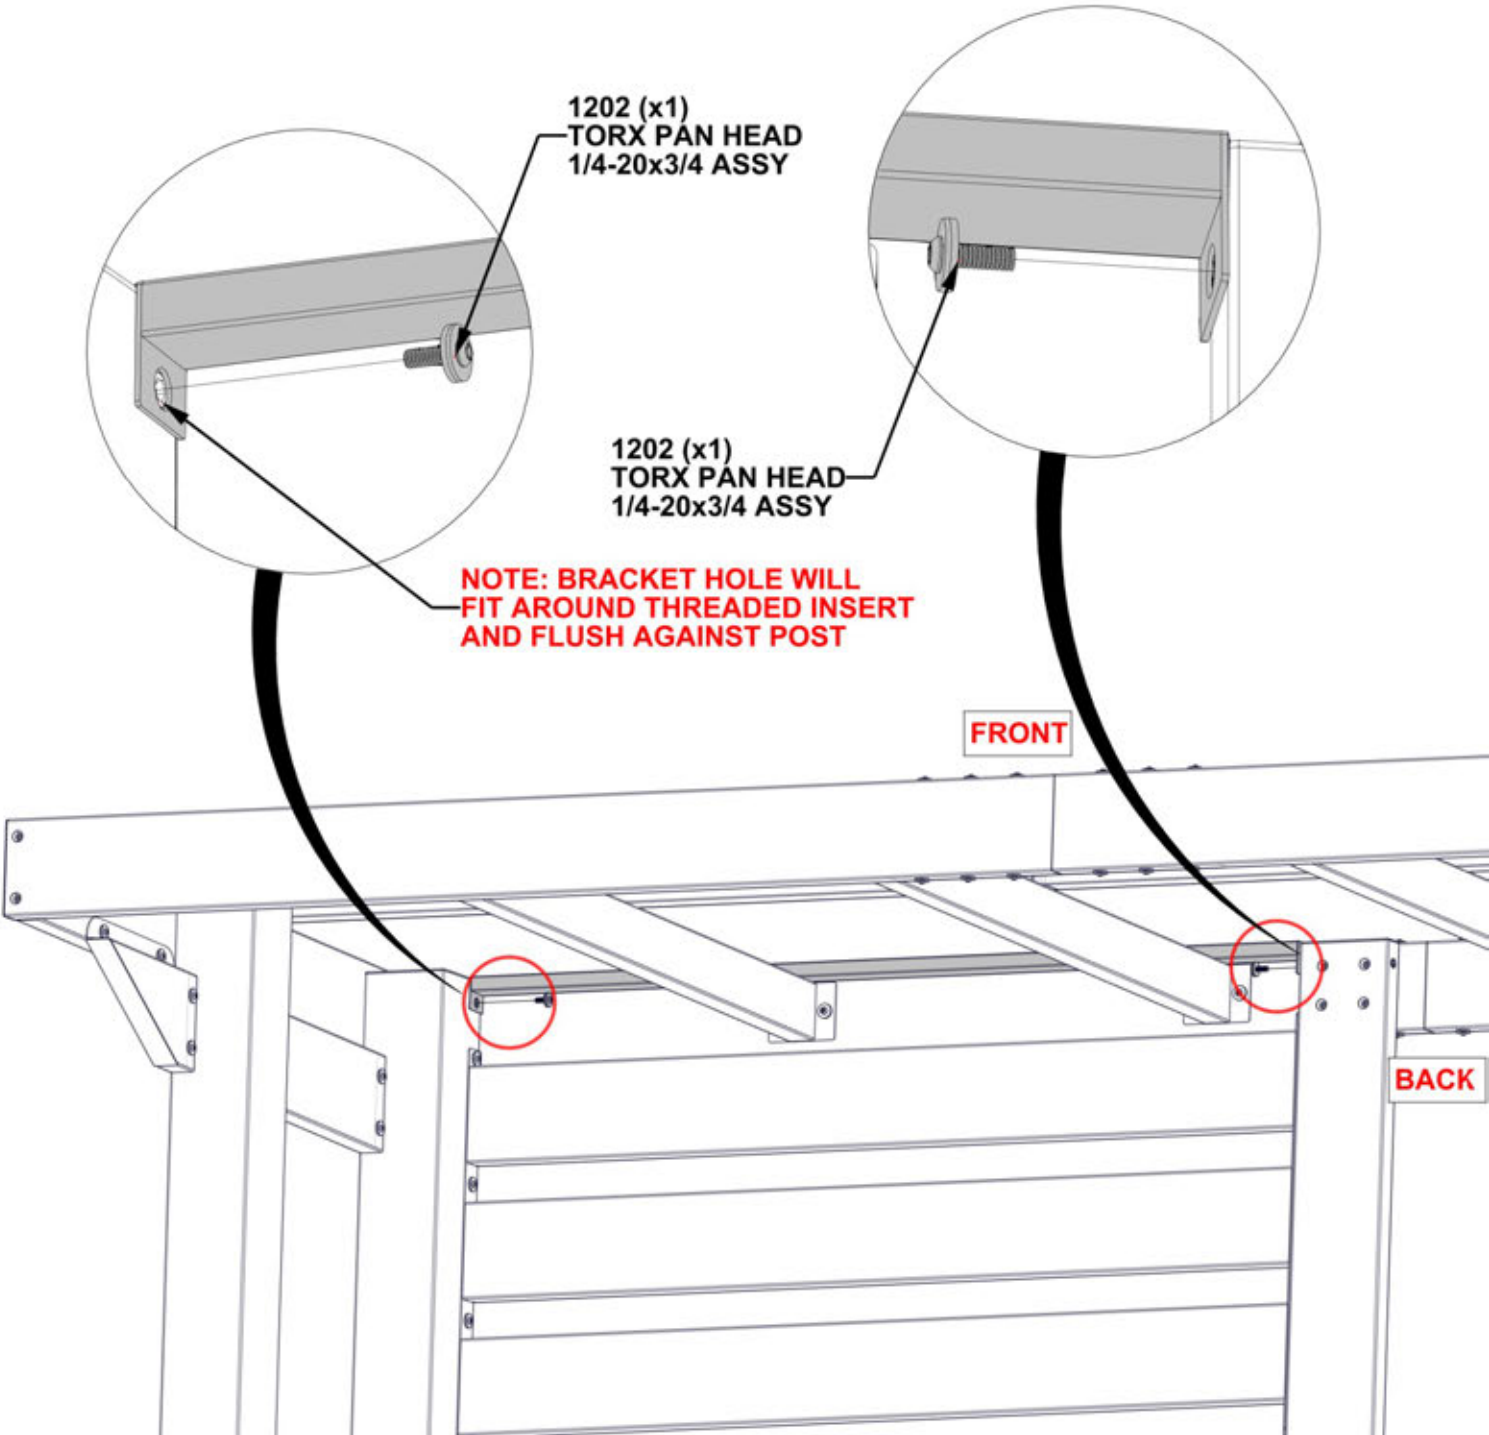

STEP 53A - ROOF ASSEMBLY



E04 PURLIN - A4M02026
(x1) 1 9/16"x1 3/4"x58 1/16" (40x45x1475)

QTY	PART NUMBER	Description
2	H101132	TORX SOCKET SCREW 1/4-20

**DO NOT STAND ON CABINET FRAME TO
INSTALL PURLIN**

DO NOT TIGHTEN HARDWARE AT THIS STEP

**NOTE: ORIENTATION OF PURLIN. PILOT
HOLES WILL BE CLOSEST TO MIDDLE POST
AND IN LINE WITH OTHER PURLIN HOLES.**

1132 (x2)
TORX SOCKET
SCREW 1/4-20

E04 (x1)
PURLIN

BACK


FRONT

STEP 53B - ROOF ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

DO NOT STAND ON CABINET FRAME TO INSTALL PURLIN


DO NOT TIGHTEN HARDWARE AT THIS STEP

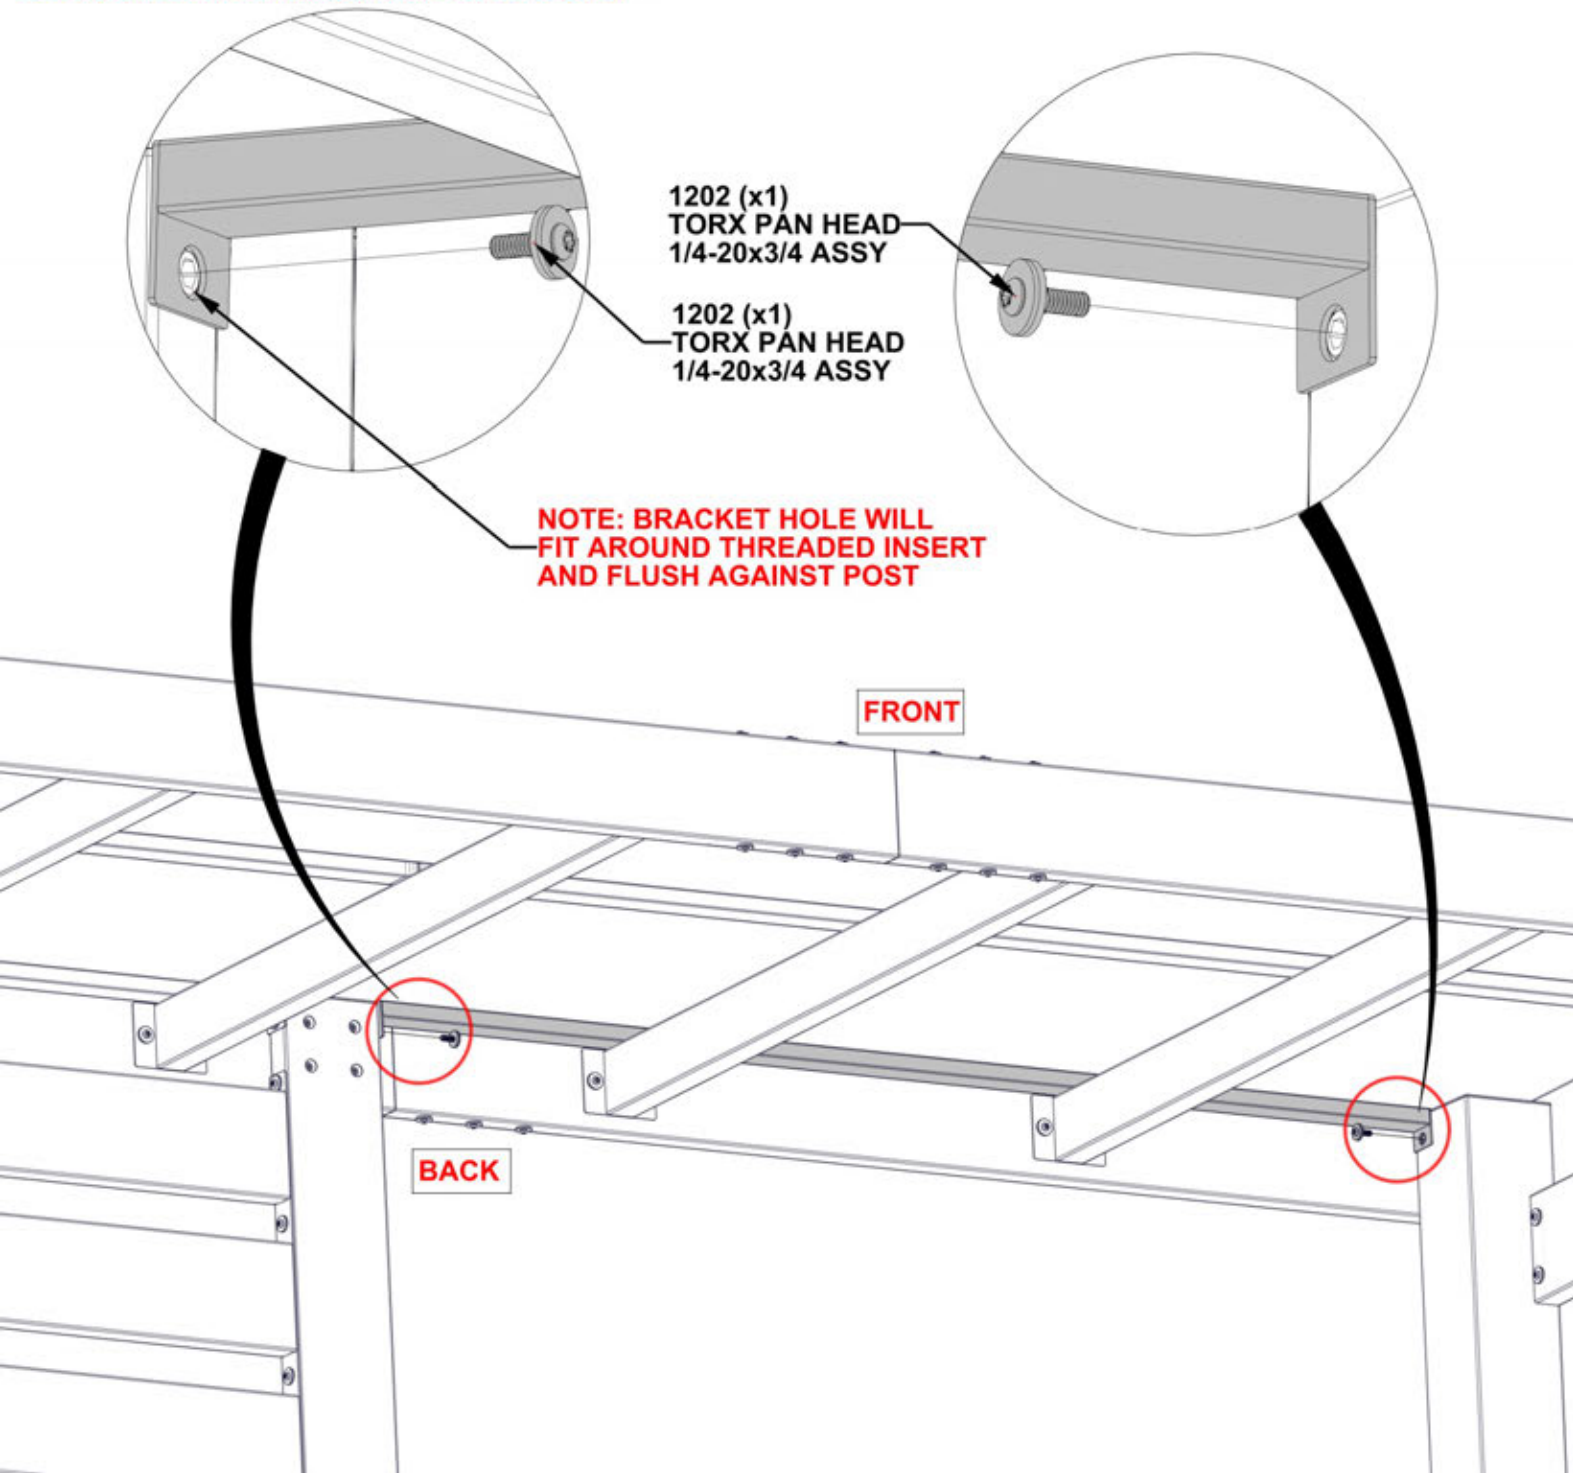

STEP 54 - SQUARE THE ASSEMBLY

**CRITICAL: SQUARE KITCHEN ROOF BEFORE PROCEEDING TO NEXT STEPS
ONCE SQUARE, TIGHTEN ALL HARDWARE.**

MEASUREMENTS TAKEN FROM CORNER TO CORNER OF ROOF.

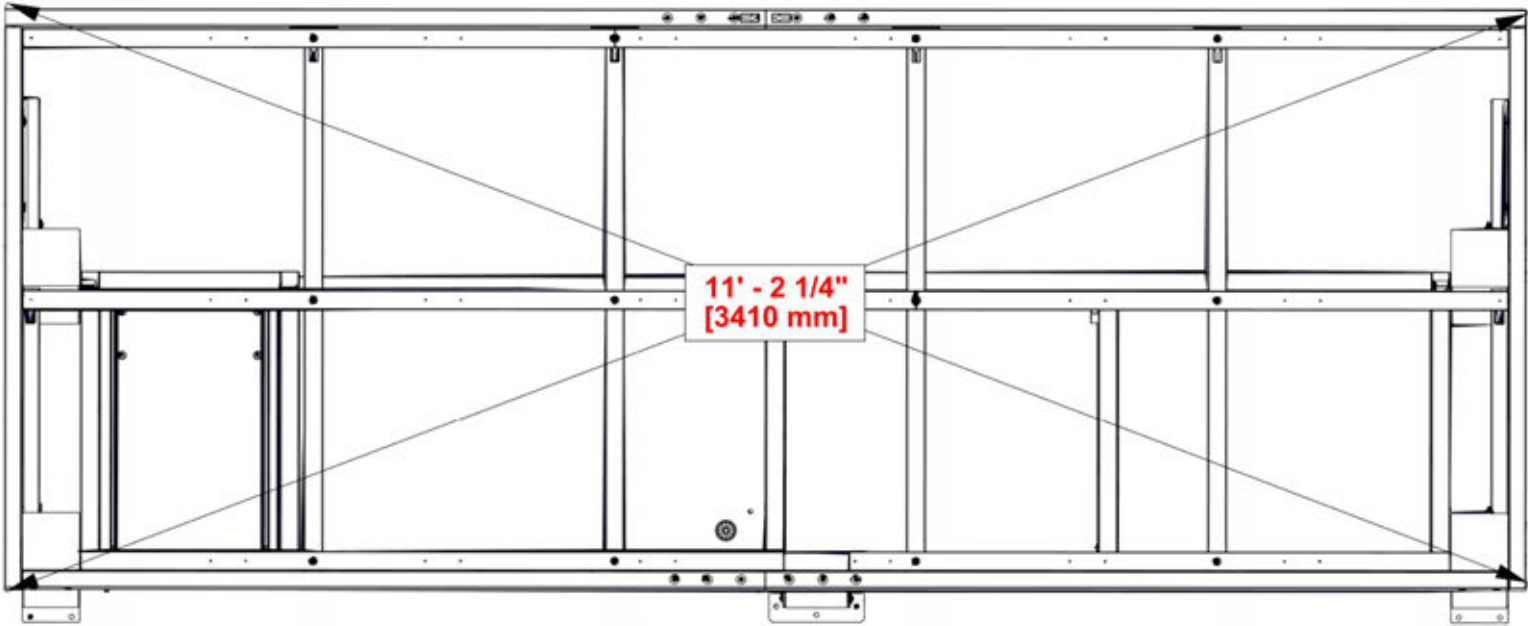

**BEFORE PROCEEDING, MAKE SURE ALL HARDWARE
IS TIGHT AND KITCHEN ROOF IS SQUARE.**


STEP 55 - KITCHEN ACCESSORIES




A4M02078 WOOD GRAIN HOLE COVER
(x28)

USE A SMALL PIECE OF WOOD AND RUBBER Mallet TO TAP HOLE COVERS IN.

DO NOT TAP DIRECTLY WITH A HAMMER AS YOU MAY DAMAGE THE FINISH ON PRODUCT.

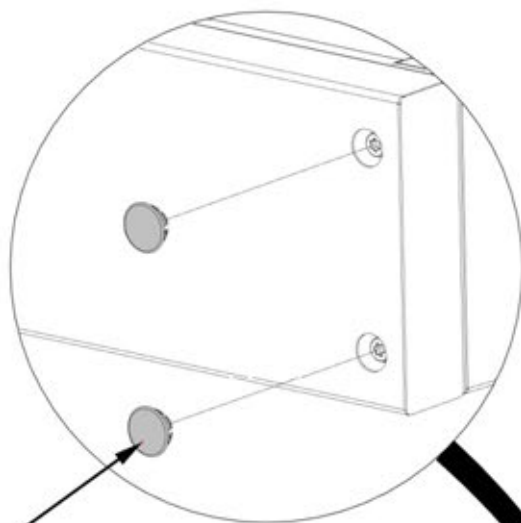

H2 (x28)
WOOD GRAIN HOLE COVER

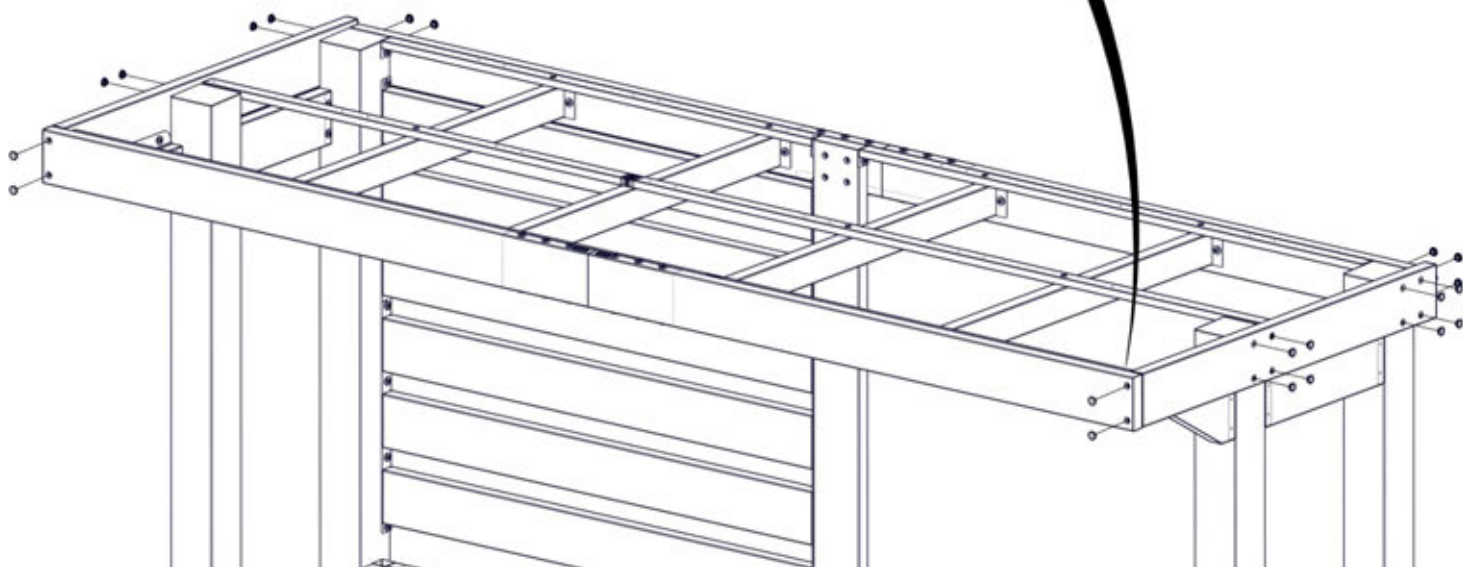

STEP 56 - ROOF ASSEMBLY

QTY	PART NUMBER	Description
4	H101117	SCREW WOODGRIP 10-16x3/4" BLK



A4M02079 29GA STEEL SHEETING LEFT
(x1)

TIPS:
- REMOVE PROTECTIVE FILM




**WARNING: GLOVES ARE RECOMMENDED
WHEN HANDLING STEEL ROOF PIECES**

**STARTING AT THE LEFT SIDE AND WORKING TO
THE RIGHT, LINE UP THE HOLES IN THE ROOF
SHEET WITH THE PILOT HOLES IN THE PURLINS**

**NOTE: DO NOT ADD
SCREWS TO THE BACK
ROW UNTIL LATER STEPS**

**ORIENT ROOF SHEET WITH
"FRONT" STICKER TOWARDS
THE FRONT SIDE OF THE GAZEBO
AS SHOWN.**

1117 (x4)
SCREW WOODGRIP 3/4"

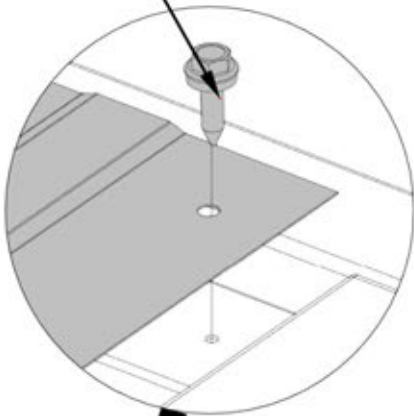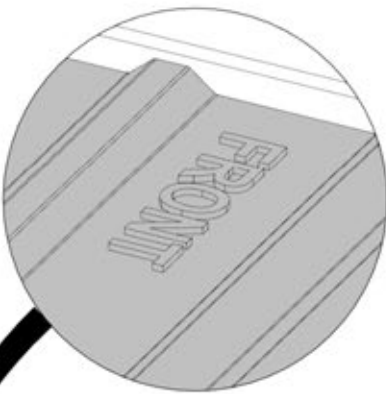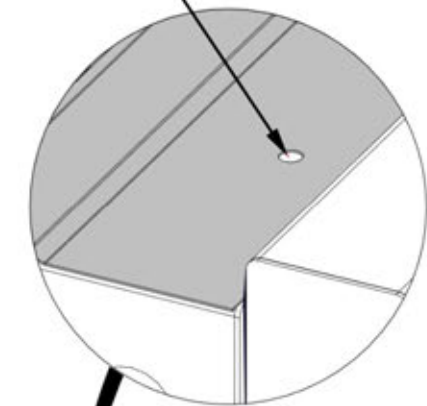

2079 (x1)
29GA STEEL
SHEETING LEFT

BACK

FRONT

LEFT

STEP 57 - ROOF ASSEMBLY

QTY	PART NUMBER	Description
20	H101117	SCREW WOODGRIP 10-16x3/4" BLK



A4M02007 29GA STEEL SHEETING
(x5)

TIPS:
- REMOVE PROTECTIVE FILM

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

ATTACH AND FULLY TIGHTEN ALL SCREWS ON EACH ROOF SHEET BEFORE ATTACHING THE NEXT ONE. THIS MAKES IT POSSIBLE TO REACH ALL THE SCREWS WITHOUT GETTING ON THE ROOF.

STARTING AT THE LEFT SIDE AND WORKING TO THE RIGHT, LINE UP THE HOLES IN THE ROOF SHEET WITH THE PILOT HOLES IN THE PURLINS

1117 (x20)
SCREW WOODGRIP 3/4"

NOTE: DO NOT ADD SCREWS TO THE BACK ROW UNTIL LATER STEPS

NOTE: SHEETS OVERLAP BY ONE RIB

ORIENT ROOF SHEET WITH "FRONT" STICKER TOWARDS THE FRONT SIDE OF THE GAZEBO AS SHOWN.

BACK

FRONT

LEFT

2007 (x5)
29GA STEEL SHEETING

STEP 58 - ROOF ASSEMBLY

QTY	PART NUMBER	Description
4	H101117	SCREW WOODGRIP 10-16x3/4" BLK




A4M02080 29GA STEEL SHEETING RIGHT
(x1)

TIPS:
- REMOVE PROTECTIVE FILM

WARNING: GLOVES ARE RECOMMENDED
WHEN HANDLING STEEL ROOF PIECES

ORIENT ROOF SHEET WITH
"FRONT" STICKER TOWARDS
THE FRONT SIDE OF THE GAZEBO
AS SHOWN.

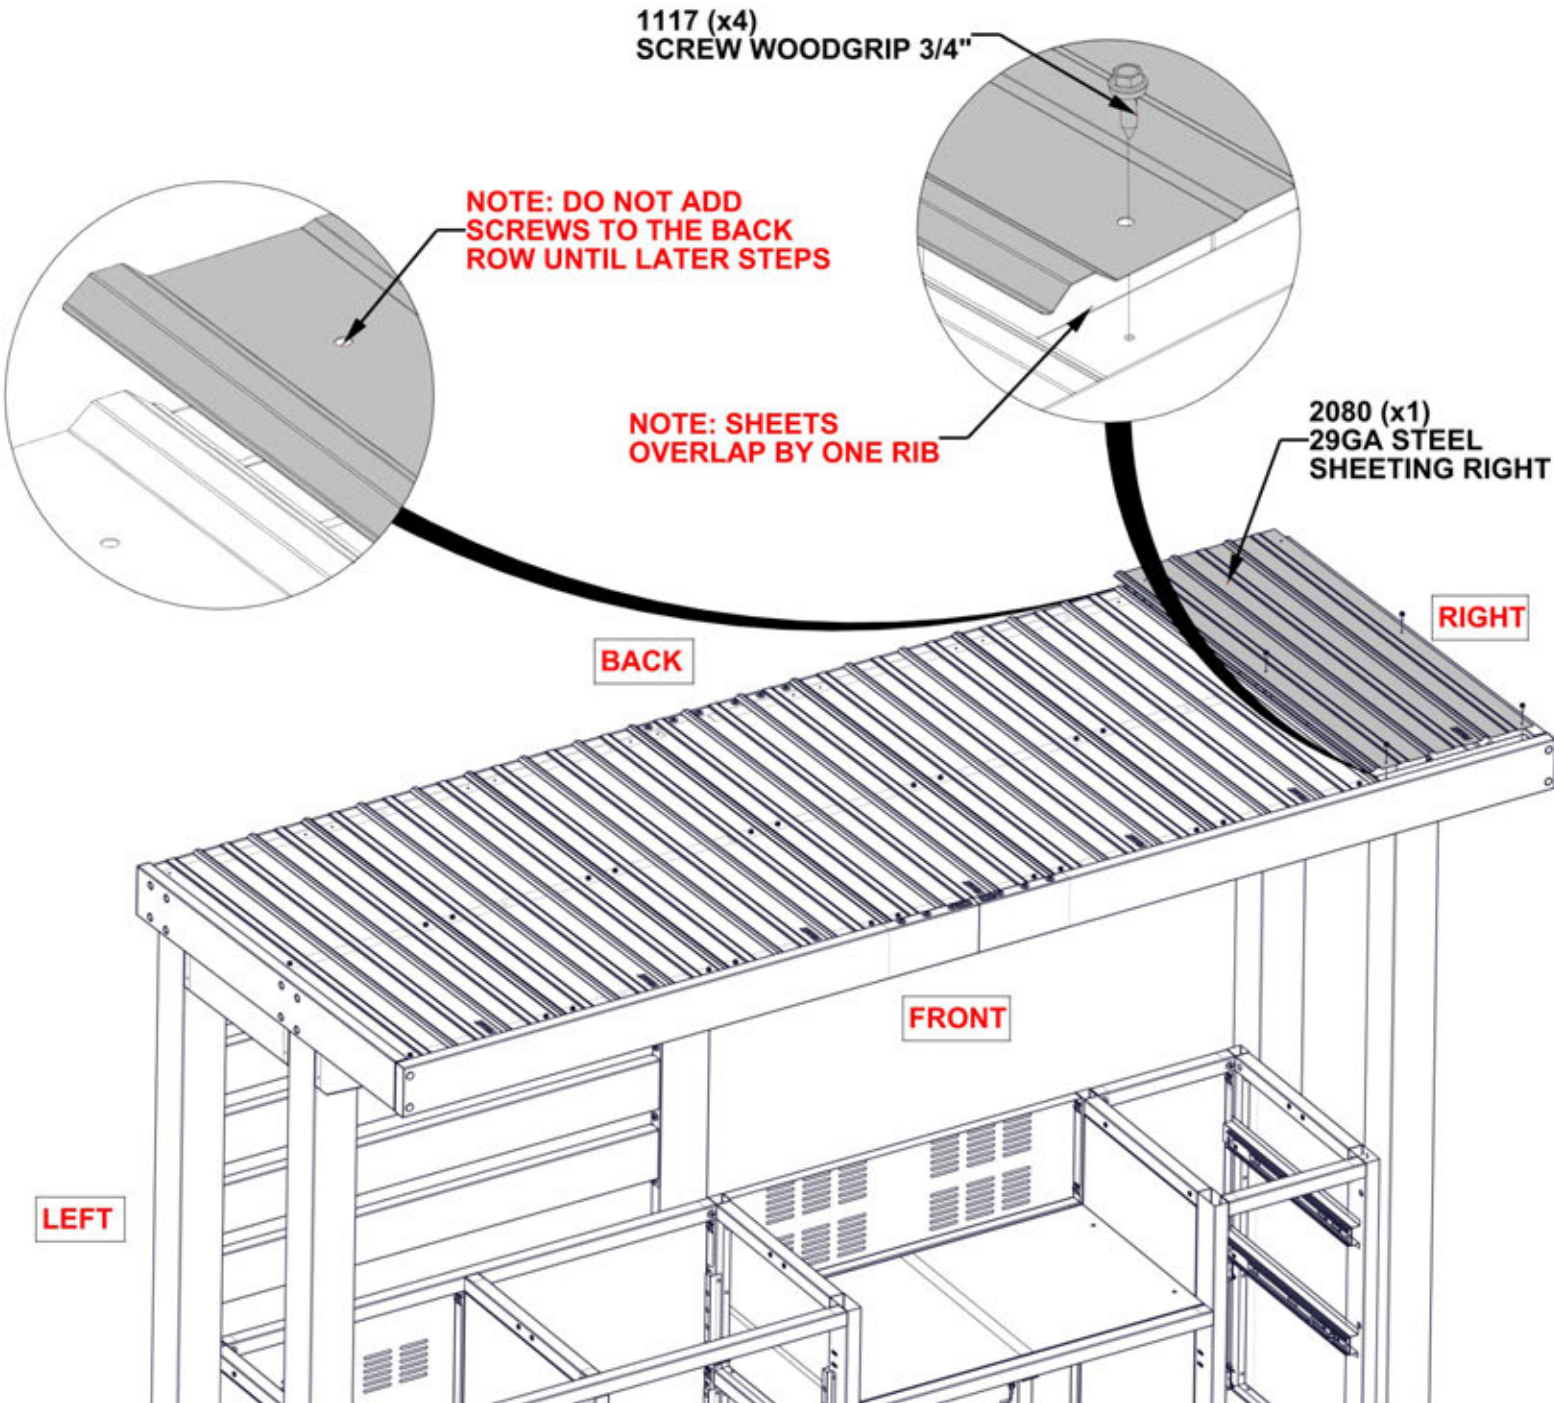

STEP 59 - ROOF ASSEMBLY

QTY	PART NUMBER	Description
14	H101117	SCREW WOODGRIP 10-16x3/4" BLK



A4M02107 DRIP EDGE
(x1)



A4M02272 DRIP EDGE
(x1)




A4M02108 DRIP EDGE SPLICE
(x1)

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

NOTES:

- REMOVE BLUE FILM FROM DRIP EDGE AND DRIP EDGE SPLICE.
- DUE TO MULTIPLE LAYERS OF METAL ON THE DRIP EDGE, IT IS RECOMMENDED THAT A 1/8" DRILL BIT BE USED TO CREATE STARTER HOLES.
- ORIENT DRIP EDGE AND SPLICE AS SHOWN BELOW.
- ATTACH USING HOLES IN SHEETING. DO NOT GET ON ROOF TO ATTACH SCREWS.

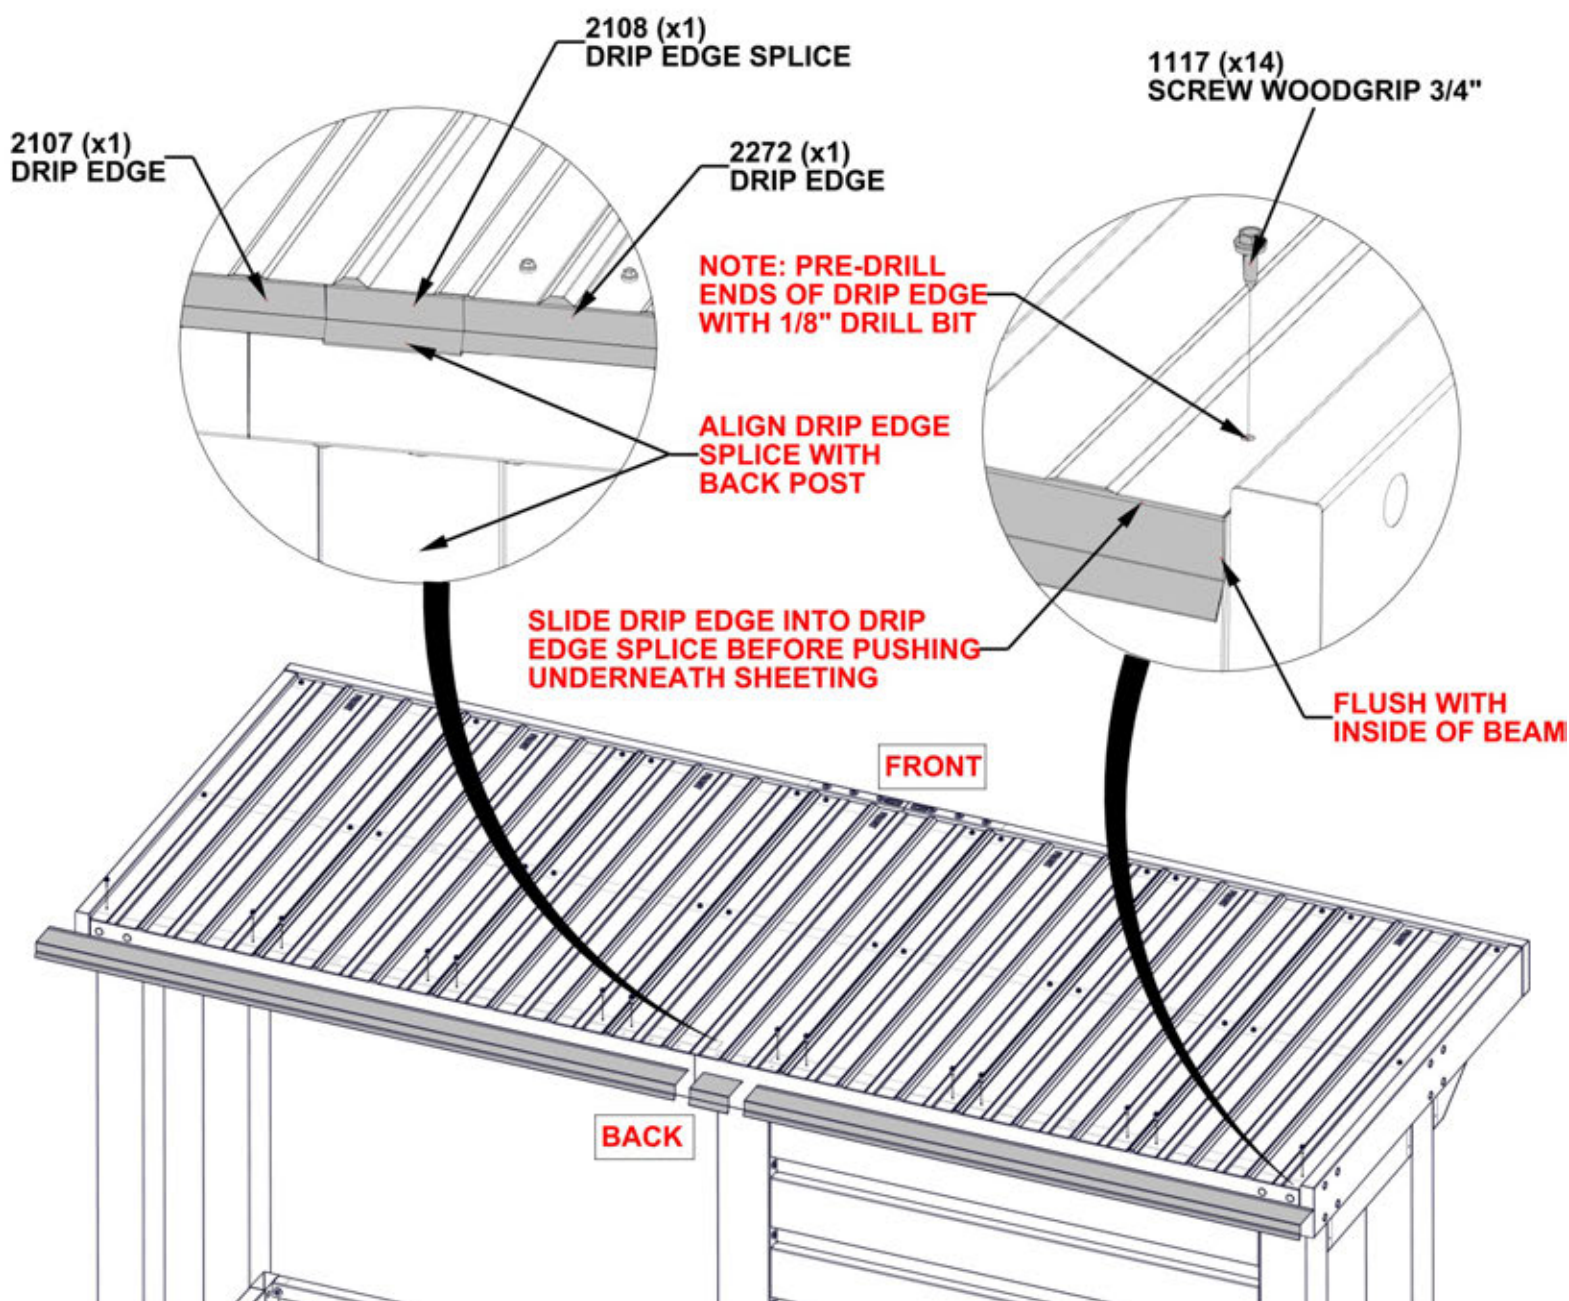

STEP 60 - ROOF ASSEMBLY




A4M02029 DRIP EDGE
(x2)

QTY	PART NUMBER	Description
8	H101116	SCREW SELF TAPPING 1/4x1 BLK


WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

- NOTES:
- REMOVE PROTECTIVE BLUE FILM.
 - DUE TO MULTIPLE LAYERS OF METAL ON THE EDGE TRIM, IT IS RECOMMENDED THAT A 1/8" DRILL BIT BE USED TO CREATE STARTER HOLES.


**EVENLY SPACE SCREWS
ALONG DRIP EDGE**

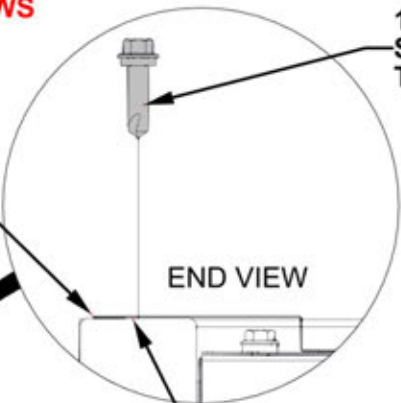

**SLIDE DRIP EDGE UNTIL
IT REACHES FRONT BEAM**

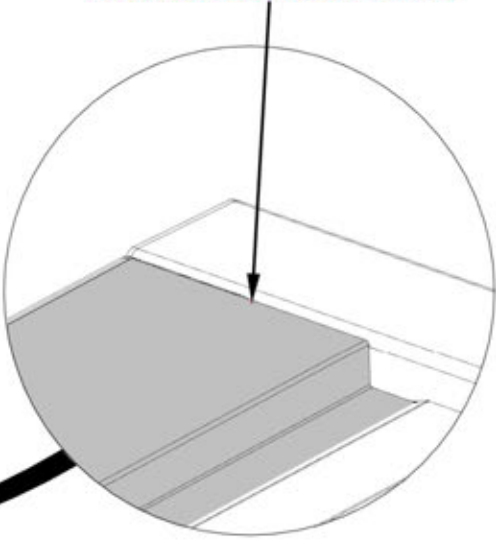


**SCREWS WILL GO
THROUGH DRIP EDGE
INTO SIDE BEAM**

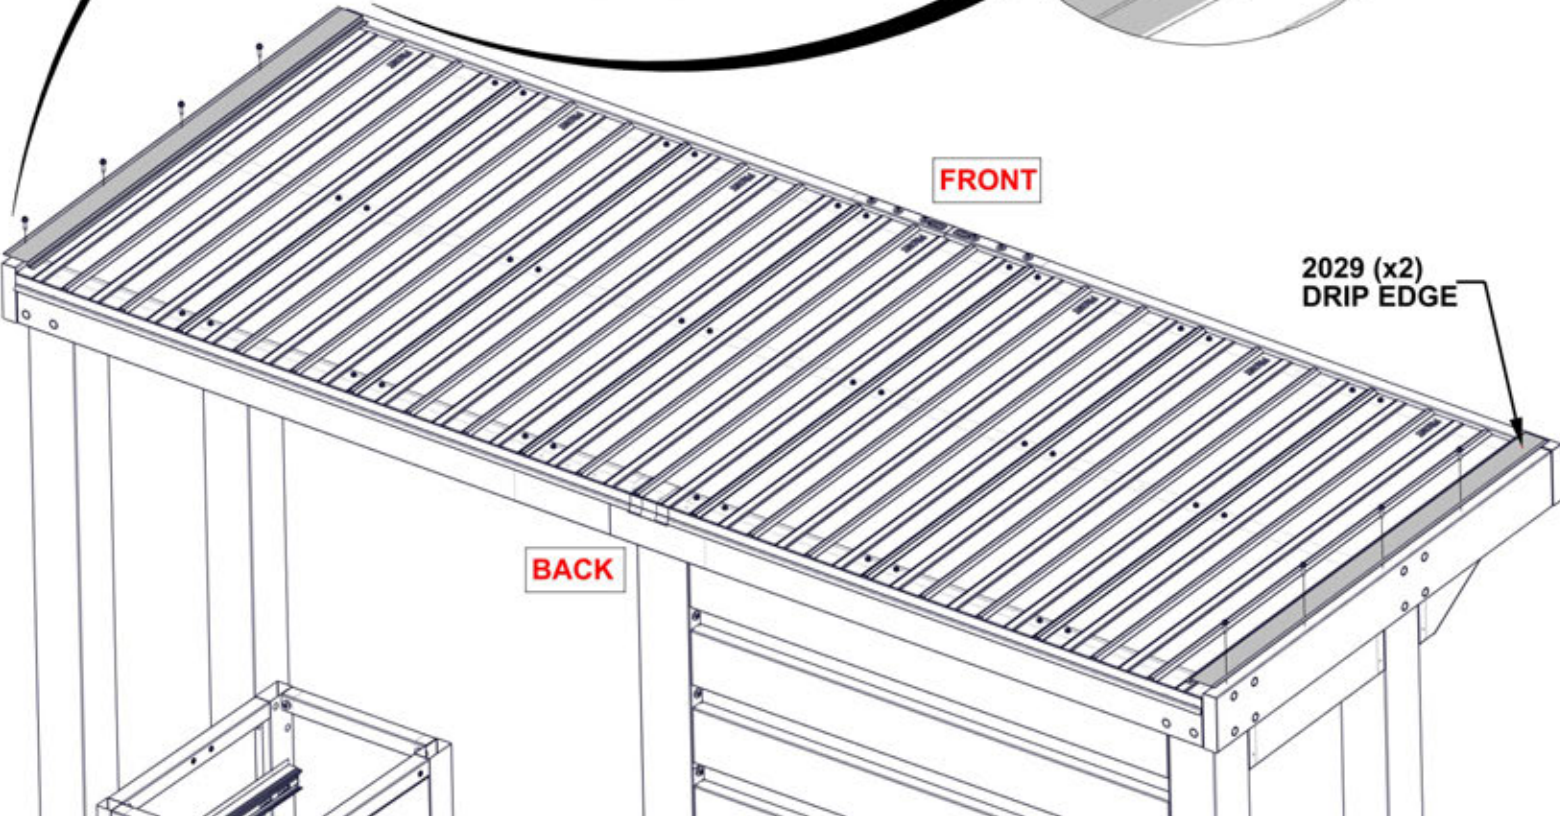

STEP 61A - ROOF ASSEMBLY

REMOVE THE 6 TORX BOLT/WASHER
FROM TOP SURFACE OF FRONT BEAM
ASSEMBLY AND SET ASIDE. HARDWARE
WILL BE USED IN LATER STEP.

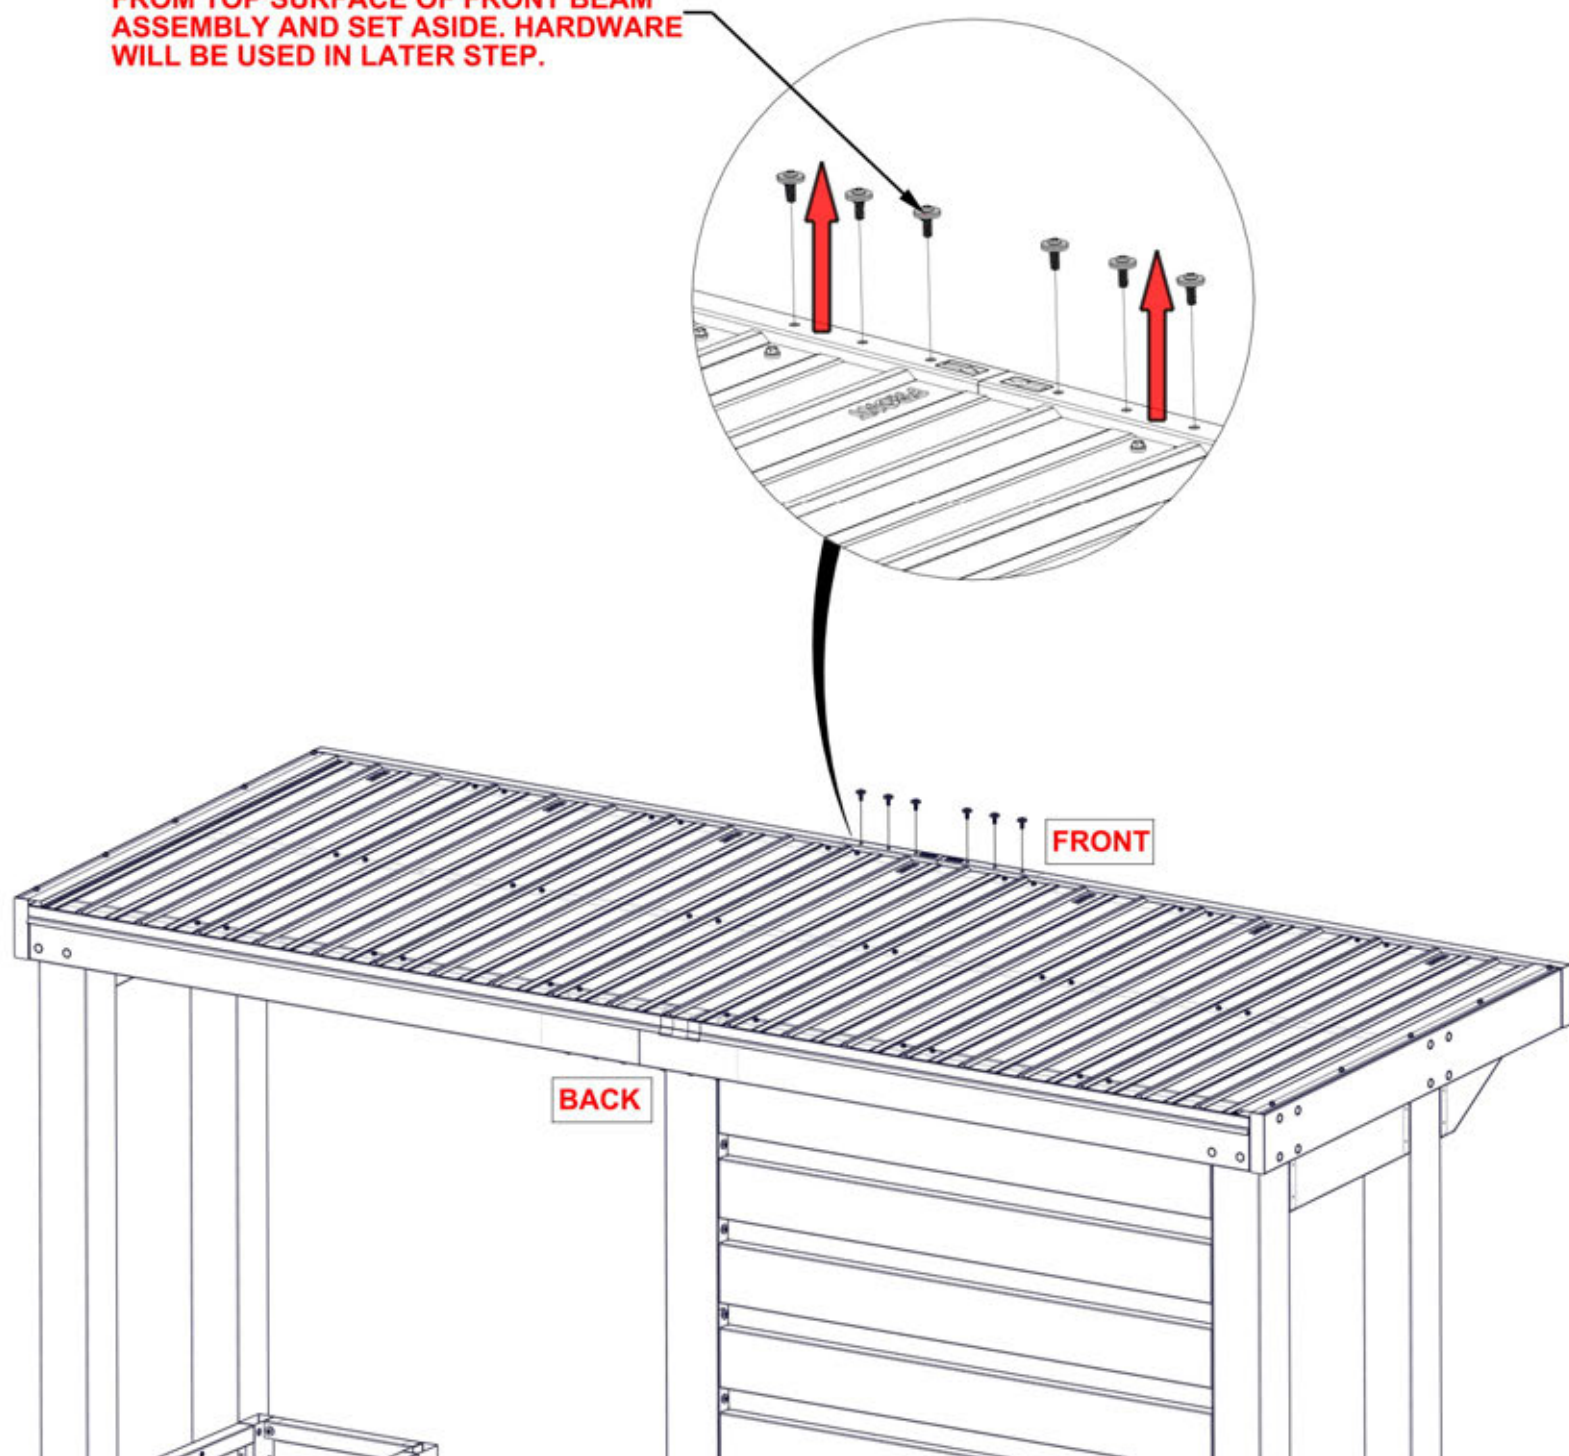

STEP 61B - ROOF ASSEMBLY



A4M02186 DRIP EDGE
(x1)




A4M02187 DRIP EDGE
(x1)



A4M02273 DRIP EDGE SPLICE
(x1)

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

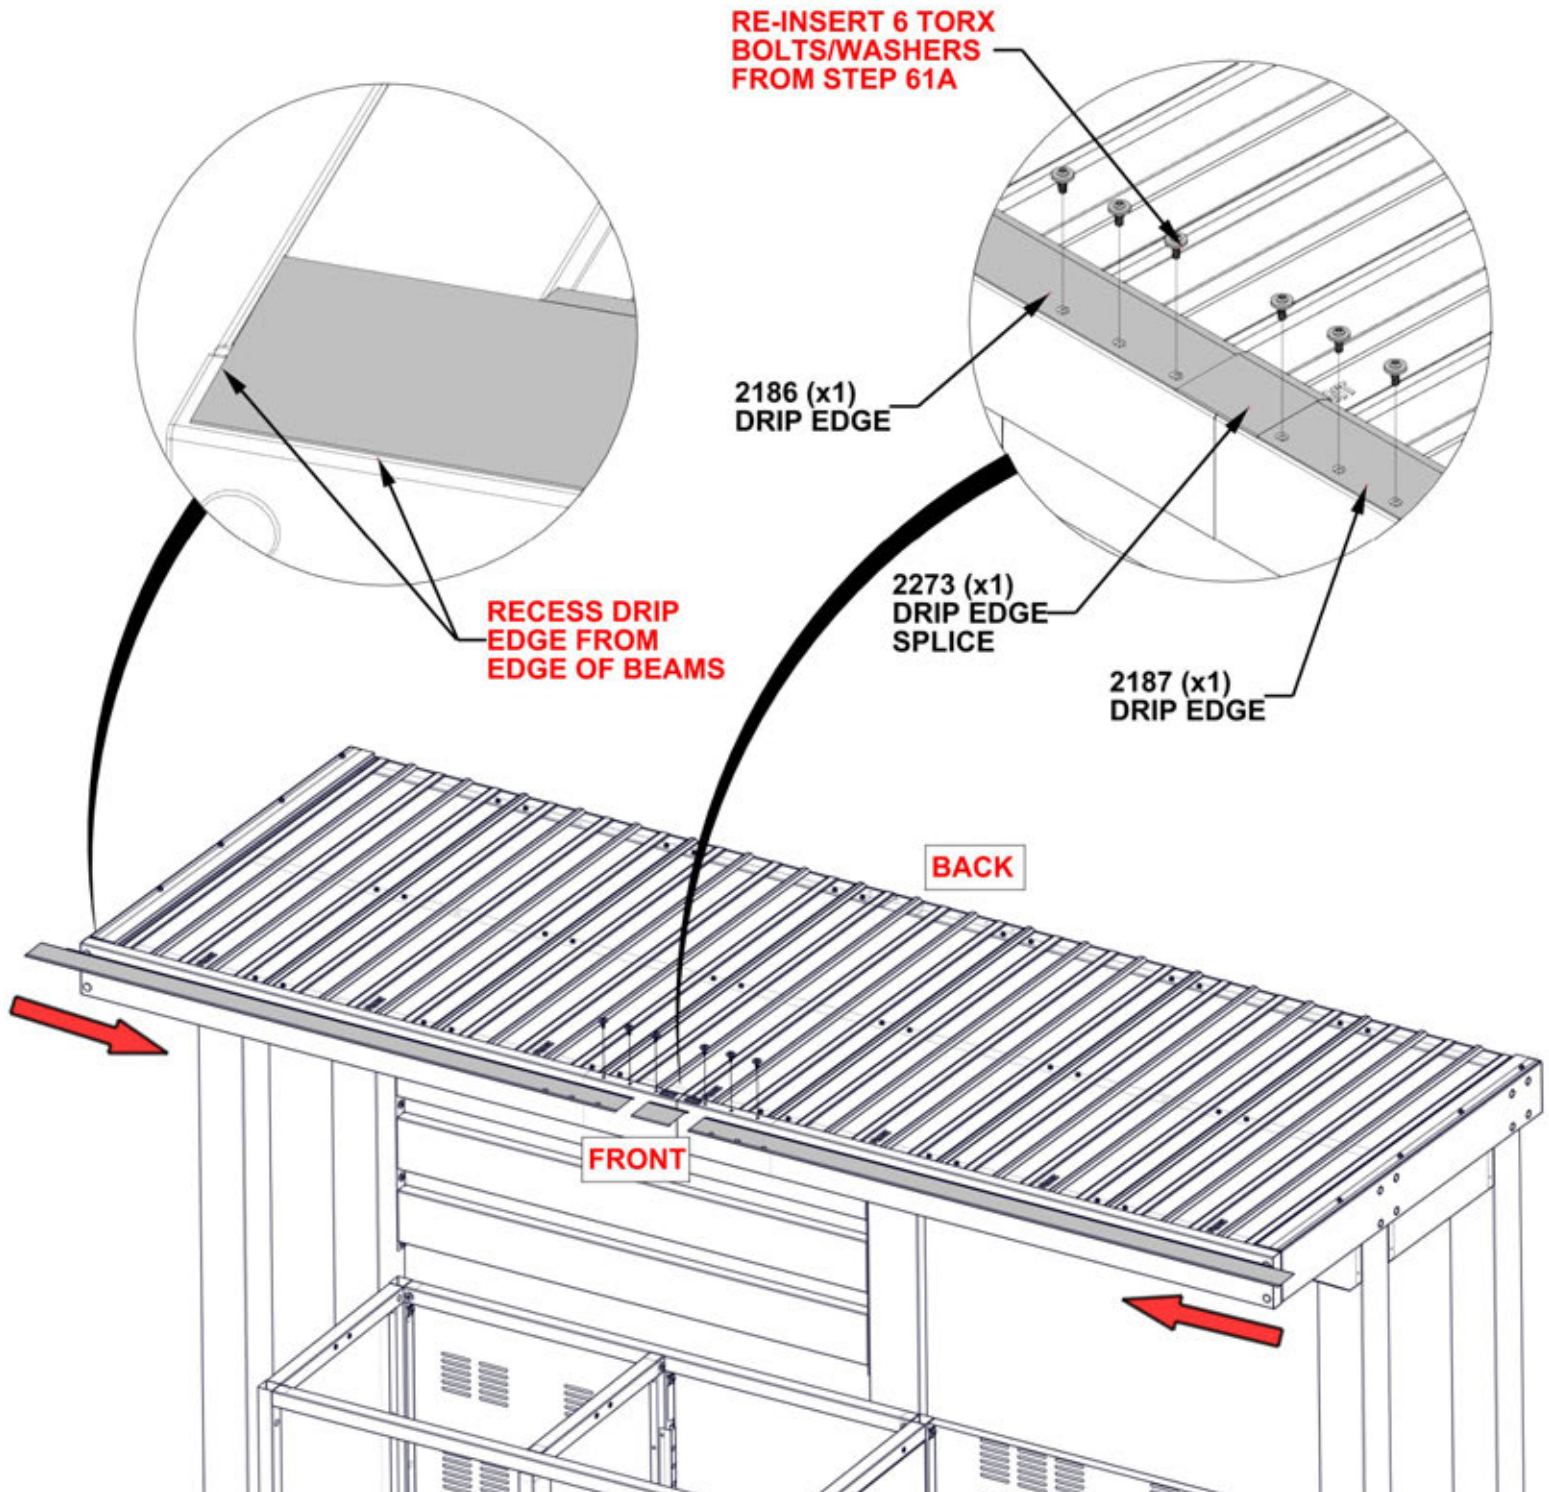


STEP 61C - ROOF ASSEMBLY

QTY	PART NUMBER	Description
12	H101116	SCREW SELF TAPPING 1/4x1 BLK


WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STEEL ROOF PIECES

- NOTES:
- REMOVE PROTECTIVE BLUE FILM.
 - DUE TO MULTIPLE LAYERS OF METAL ON THE EDGE TRIM, IT IS RECOMMENDED THAT A 1/8" DRILL BIT BE USED TO CREATE STARTER HOLES.

**EVENLY SPACE SCREWS
ALONG DRIP EDGE**

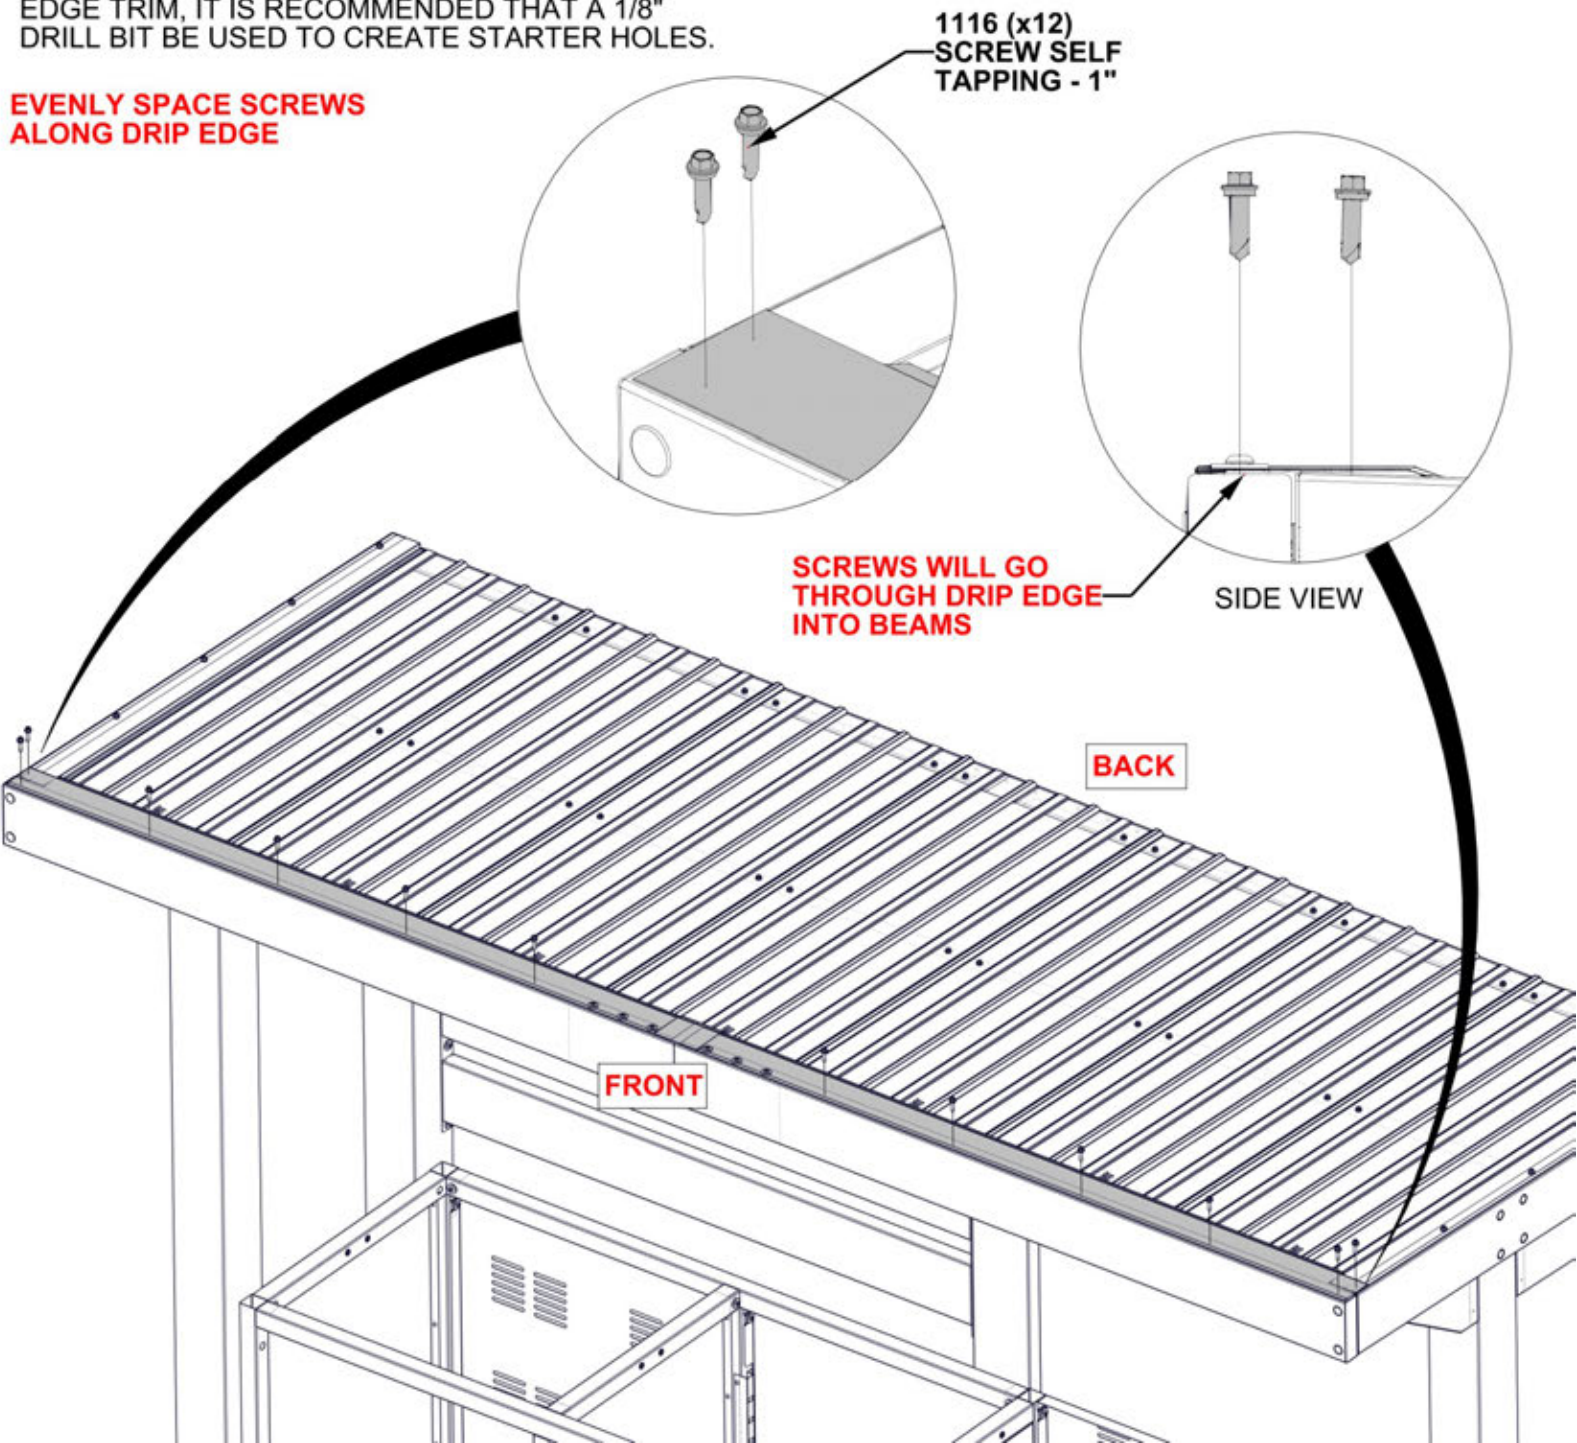


STEP 62A - KITCHEN CABINET ASSEMBLY

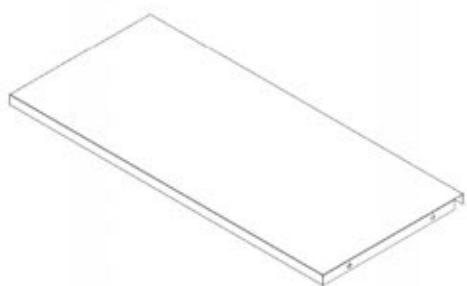

C10 COUNTERTOP - A4M02058
(x1) 1 5/8"x25 3/8"x56 5/8" (41x645x1438)


TIPS:
- REMOVE PROTECTIVE FILM FROM SIDES OF COUNTERTOP, LEAVING FILM ONLY ON TOP SURFACE UNTIL ASSEMBLY IS FINISHED TO PREVENT SCRATCHES.

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STAINLESS STEEL COUNTERTOP

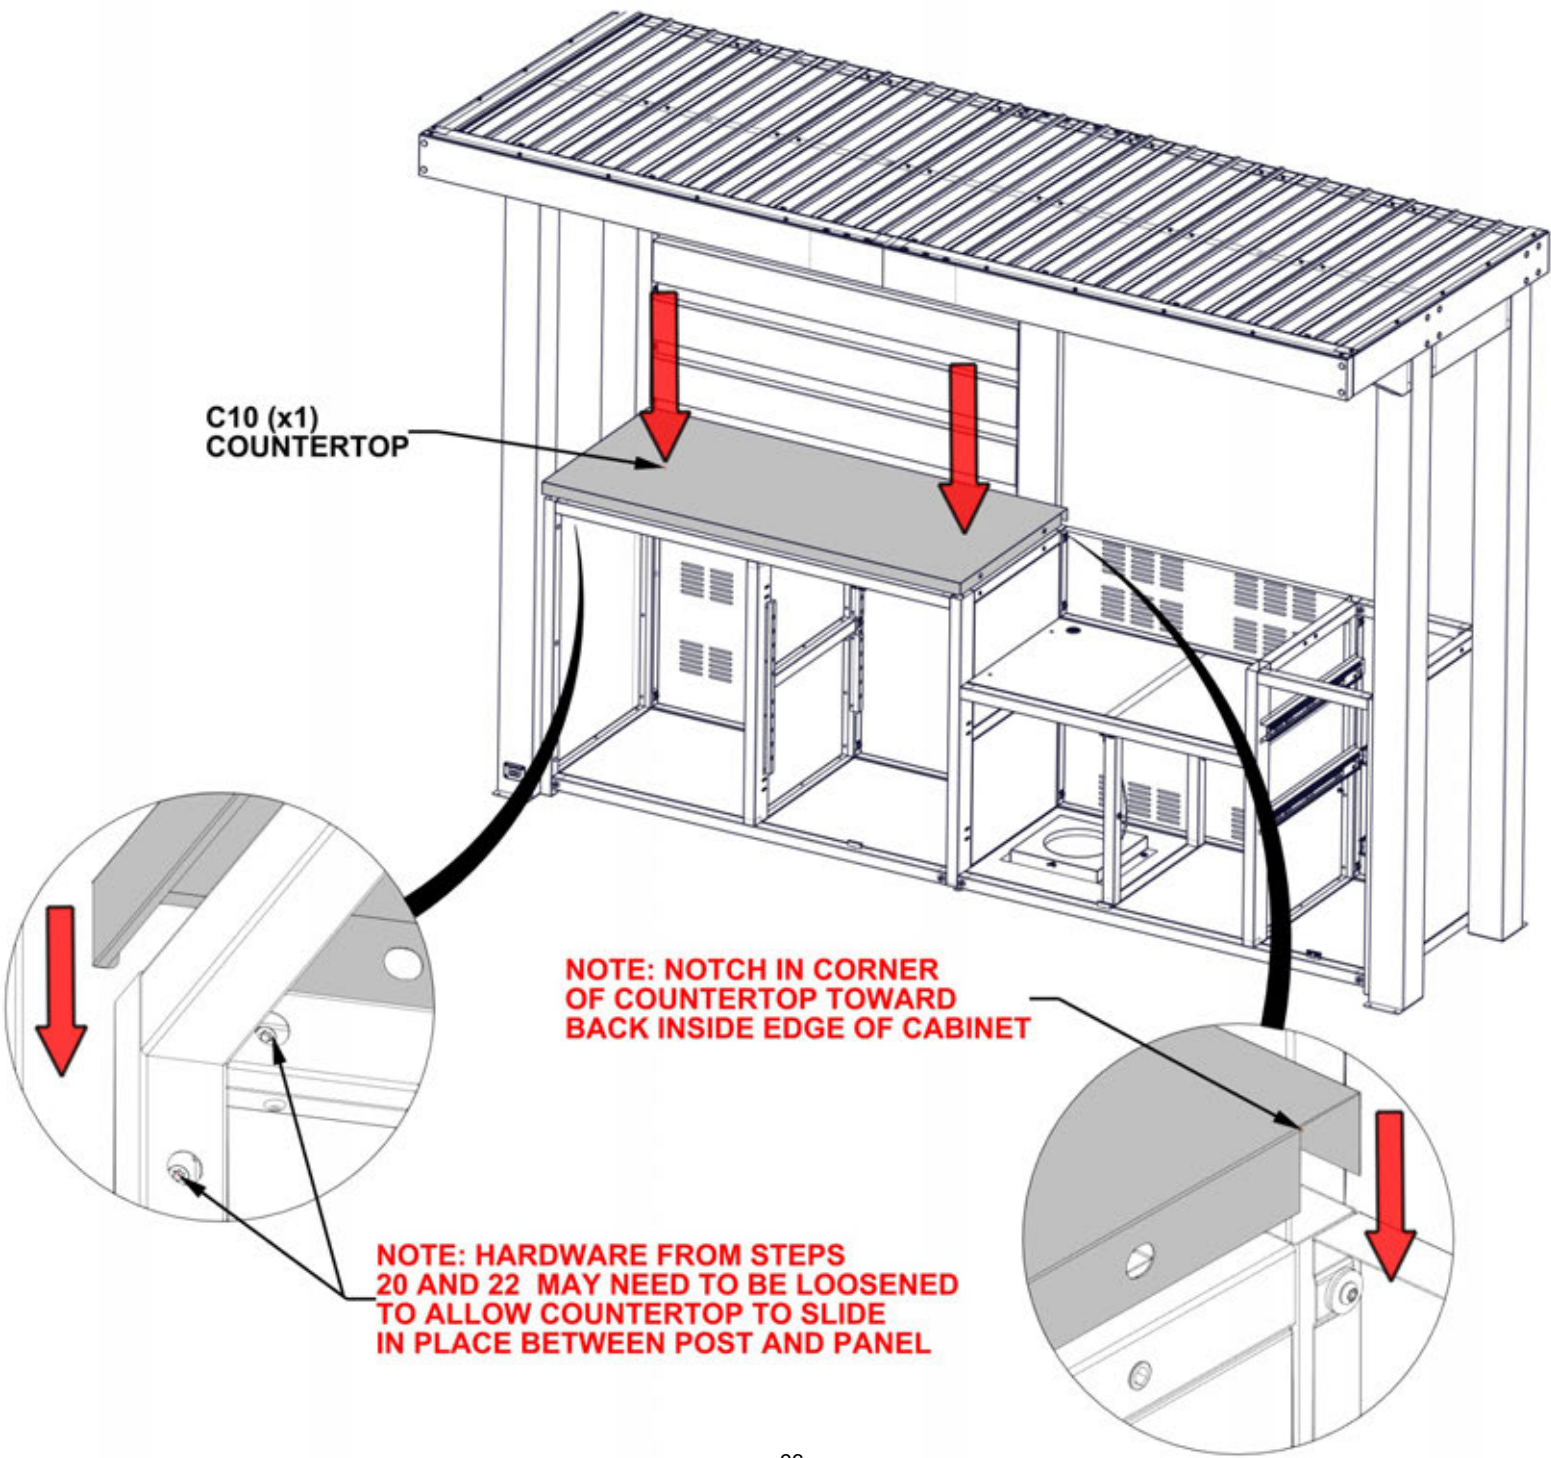


STEP 62B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

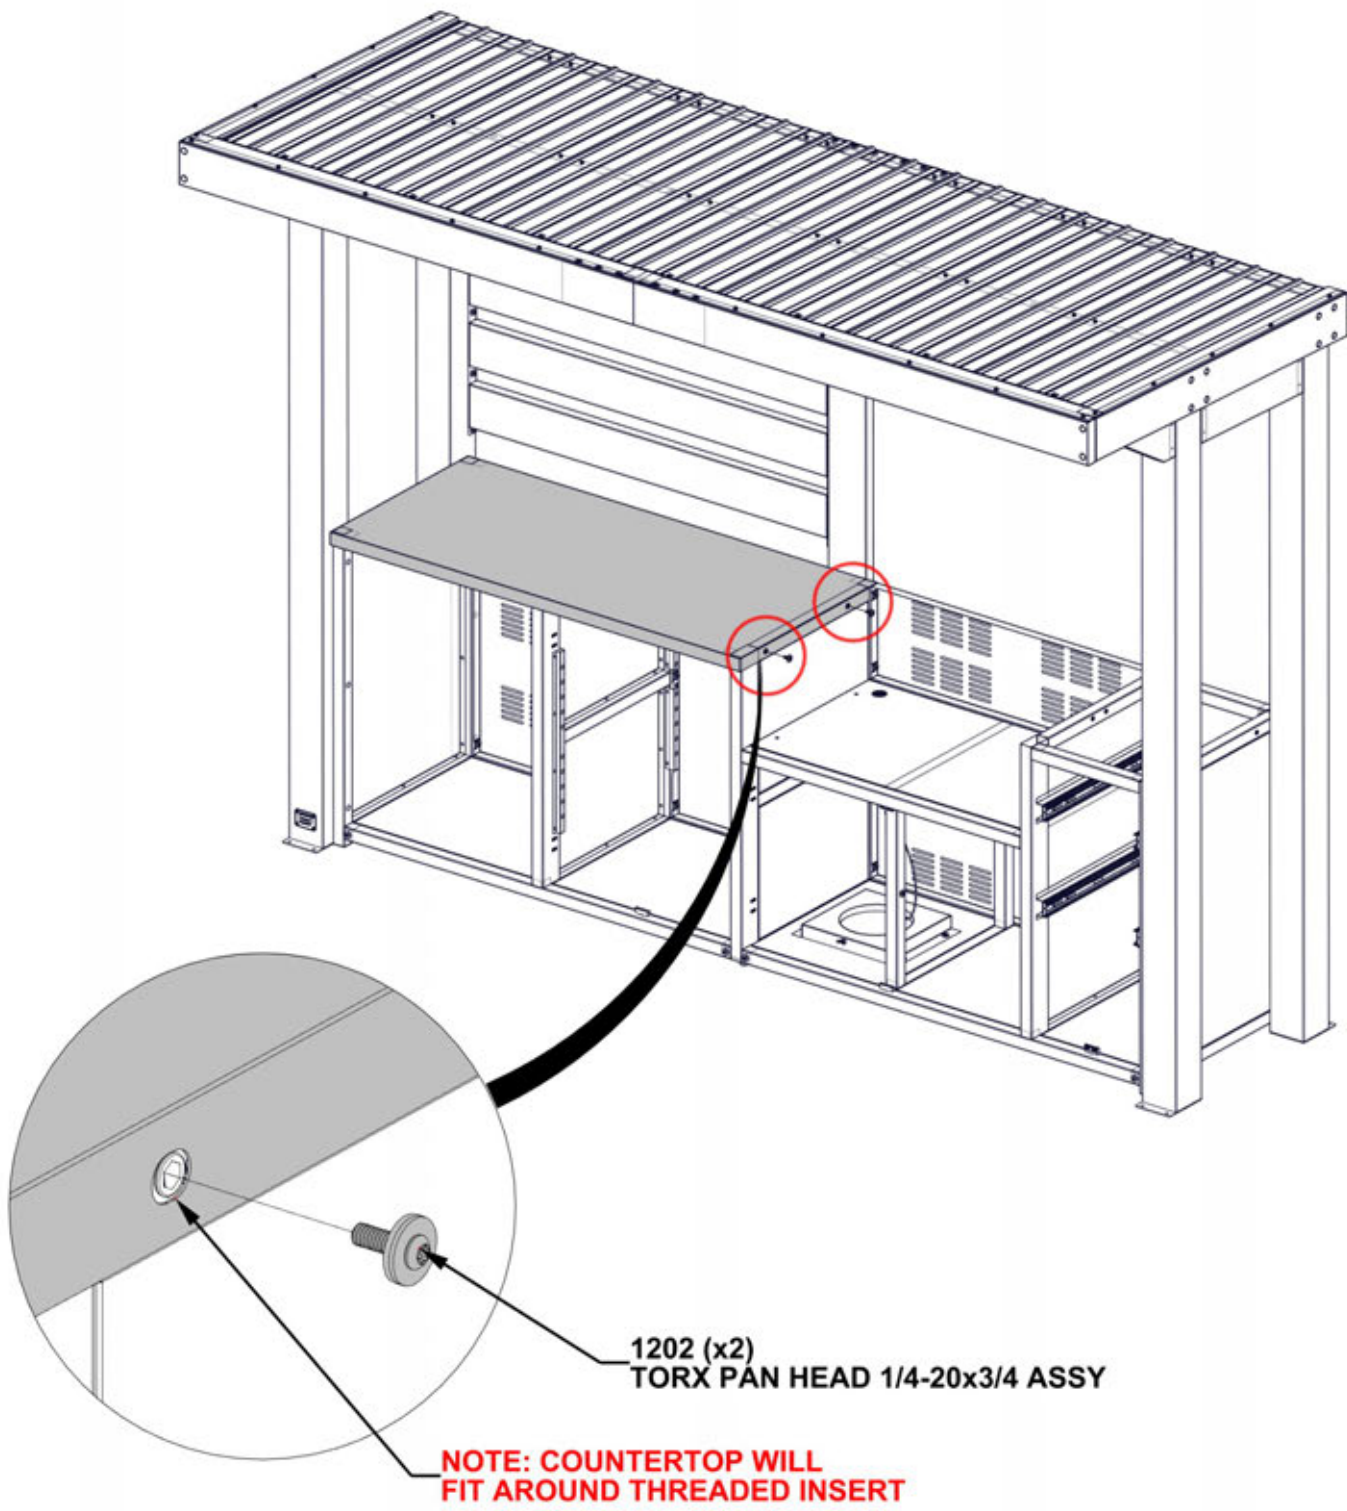

STEP 62C - KITCHEN CABINET ASSEMBLY


QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

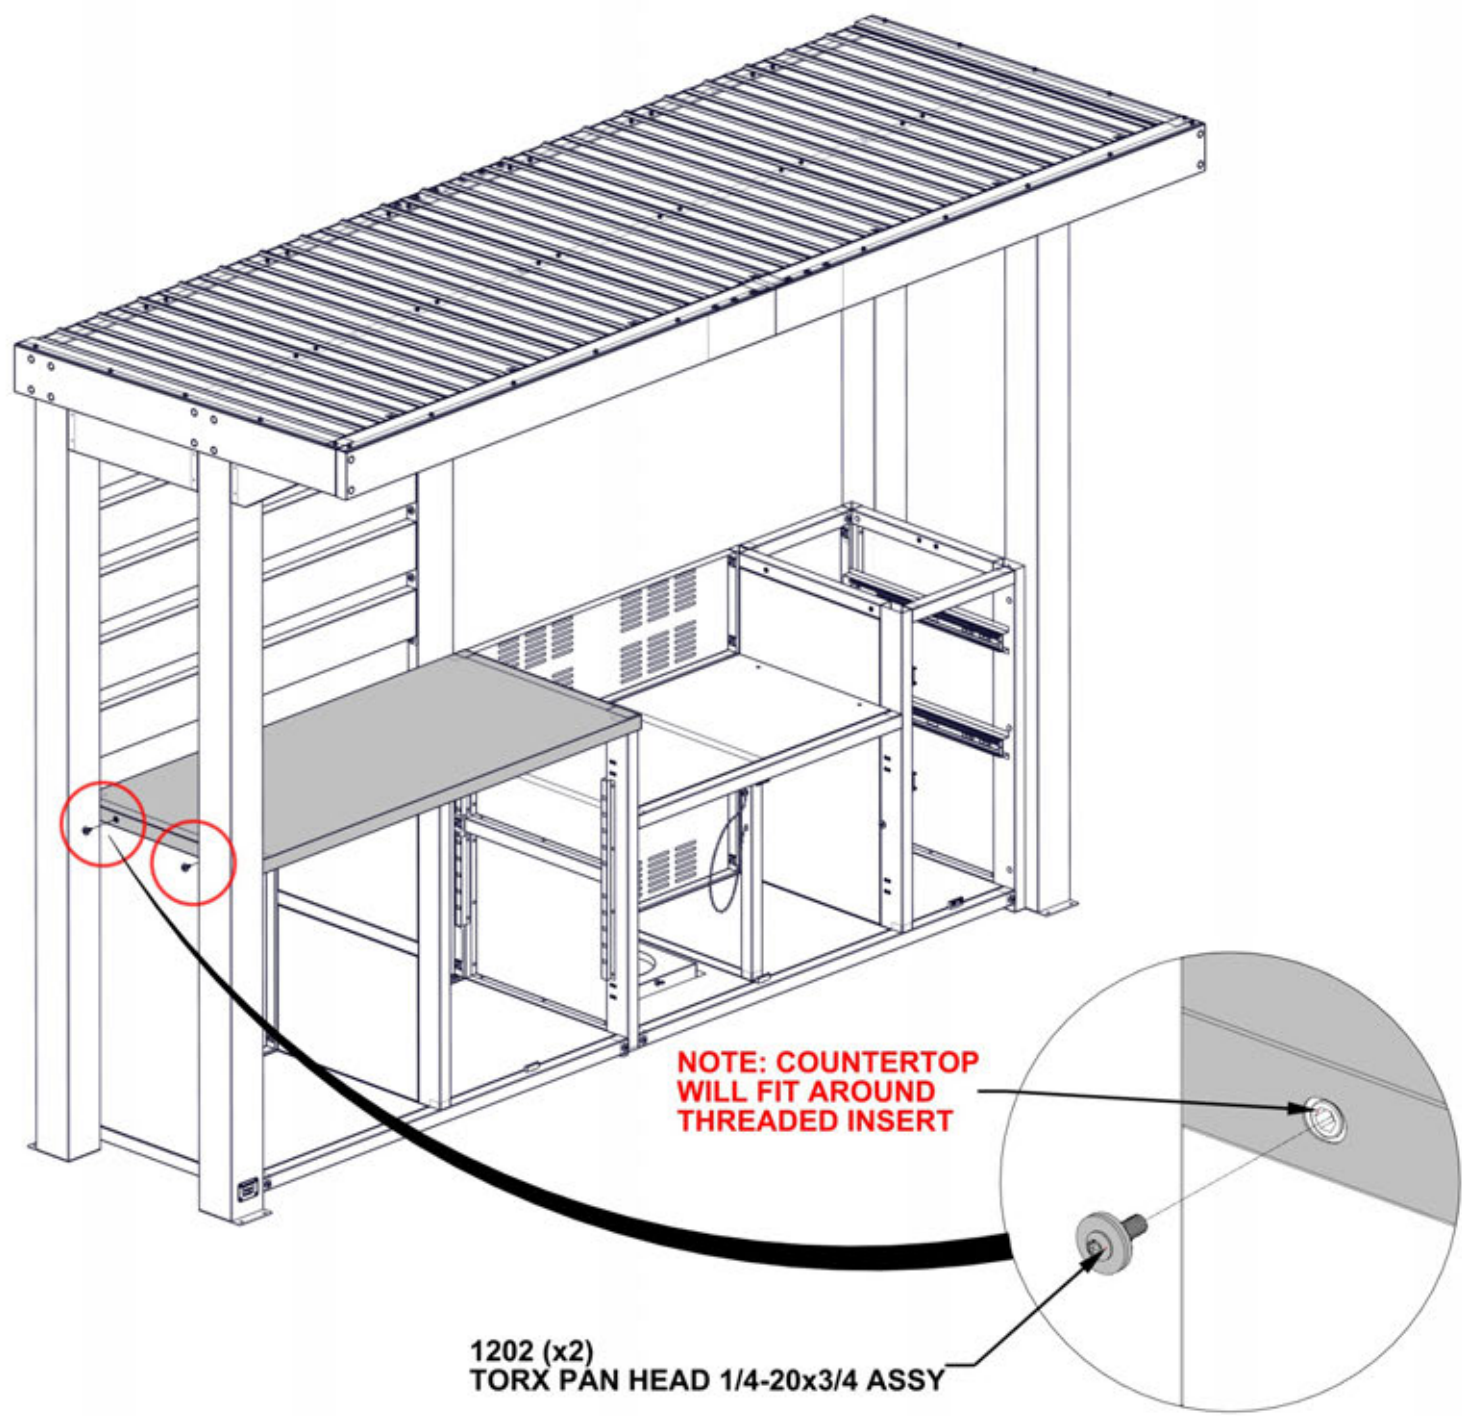


STEP 62D - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
8	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

ATTACH HARDWARE FROM UNDERSIDE OF COUNTERTOP.
RIGHT ANGLE DRILL ADAPTER IS HELPFUL FOR THIS STEP.

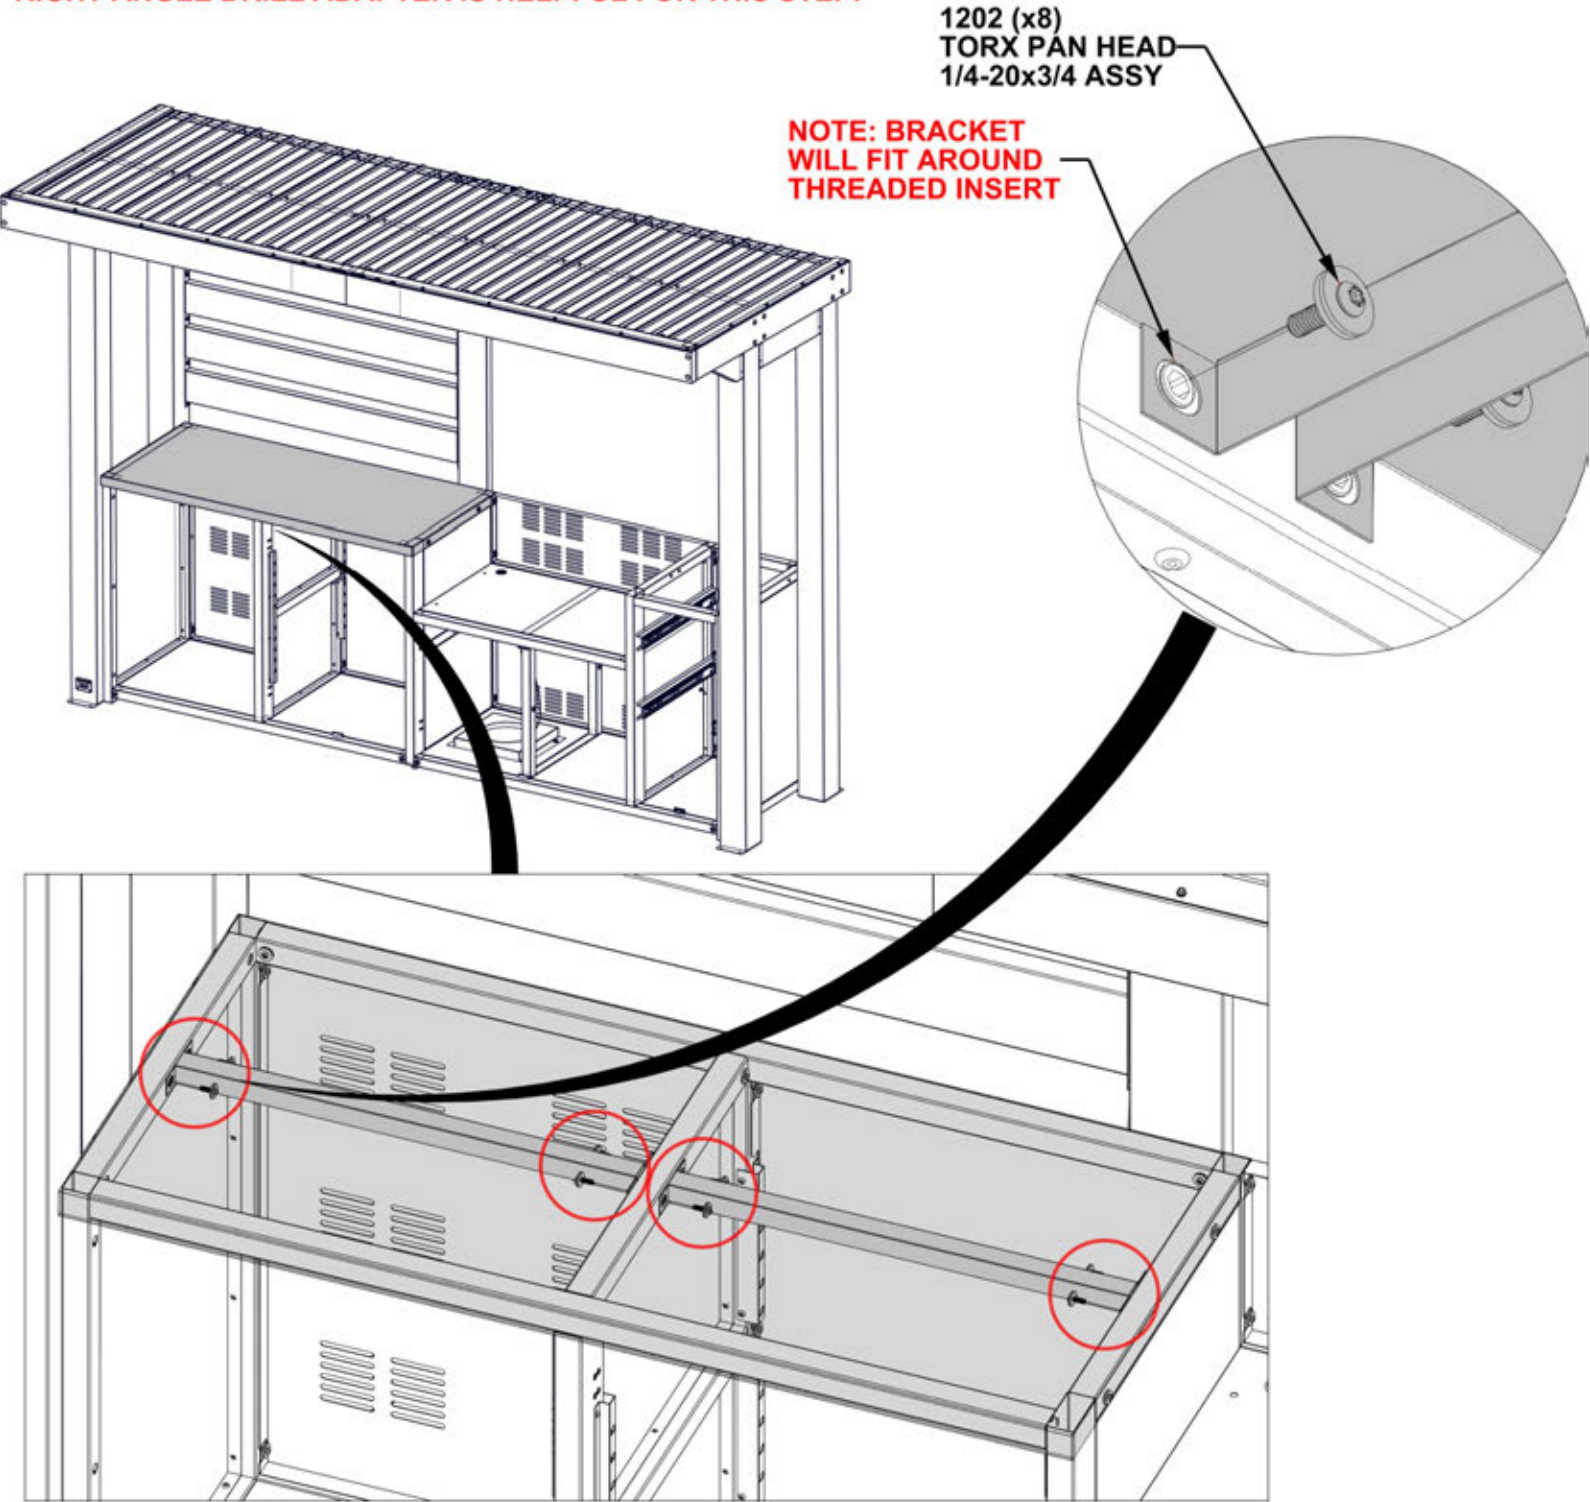

STEP 63A - KITCHEN CABINET ASSEMBLY

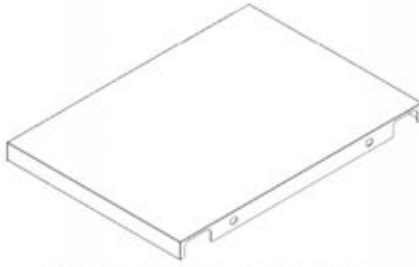


C11 COUNTERTOP - A4M02059
(x1) 1 5/8"x18 3/16"x25 3/8" (41x462x645)

TIPS:

- REMOVE PROTECTIVE FILM FROM SIDES OF COUNTERTOP, LEAVING FILM ONLY ON TOP SURFACE UNTIL ASSEMBLY IS FINISHED TO PREVENT SCRATCHES.

WARNING: GLOVES ARE RECOMMENDED WHEN HANDLING STAINLESS STEEL COUNTERTOP

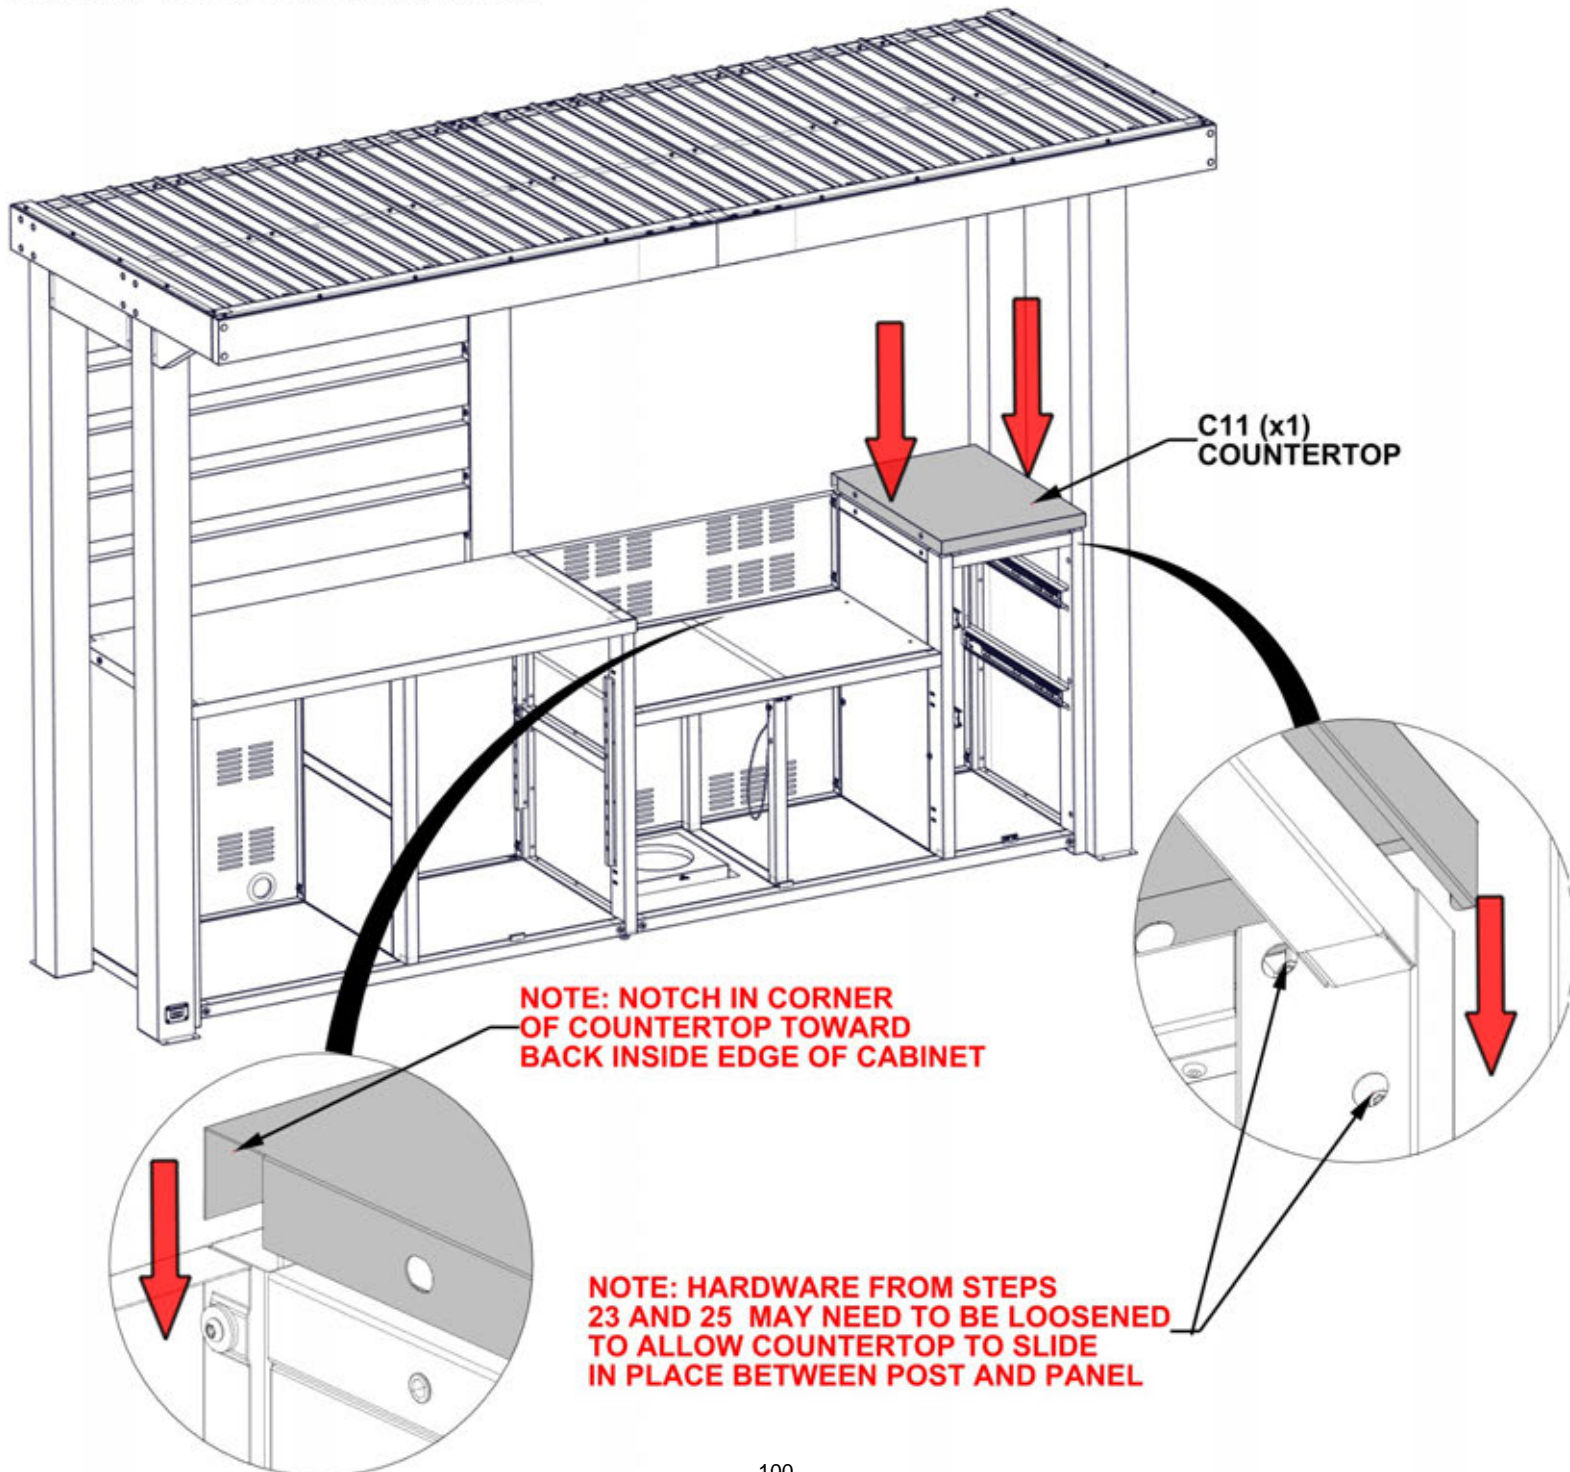


NOTE: NOTCH IN CORNER OF COUNTERTOP TOWARD BACK INSIDE EDGE OF CABINET

NOTE: HARDWARE FROM STEPS 23 AND 25 MAY NEED TO BE LOOSENED TO ALLOW COUNTERTOP TO SLIDE IN PLACE BETWEEN POST AND PANEL


STEP 63B - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

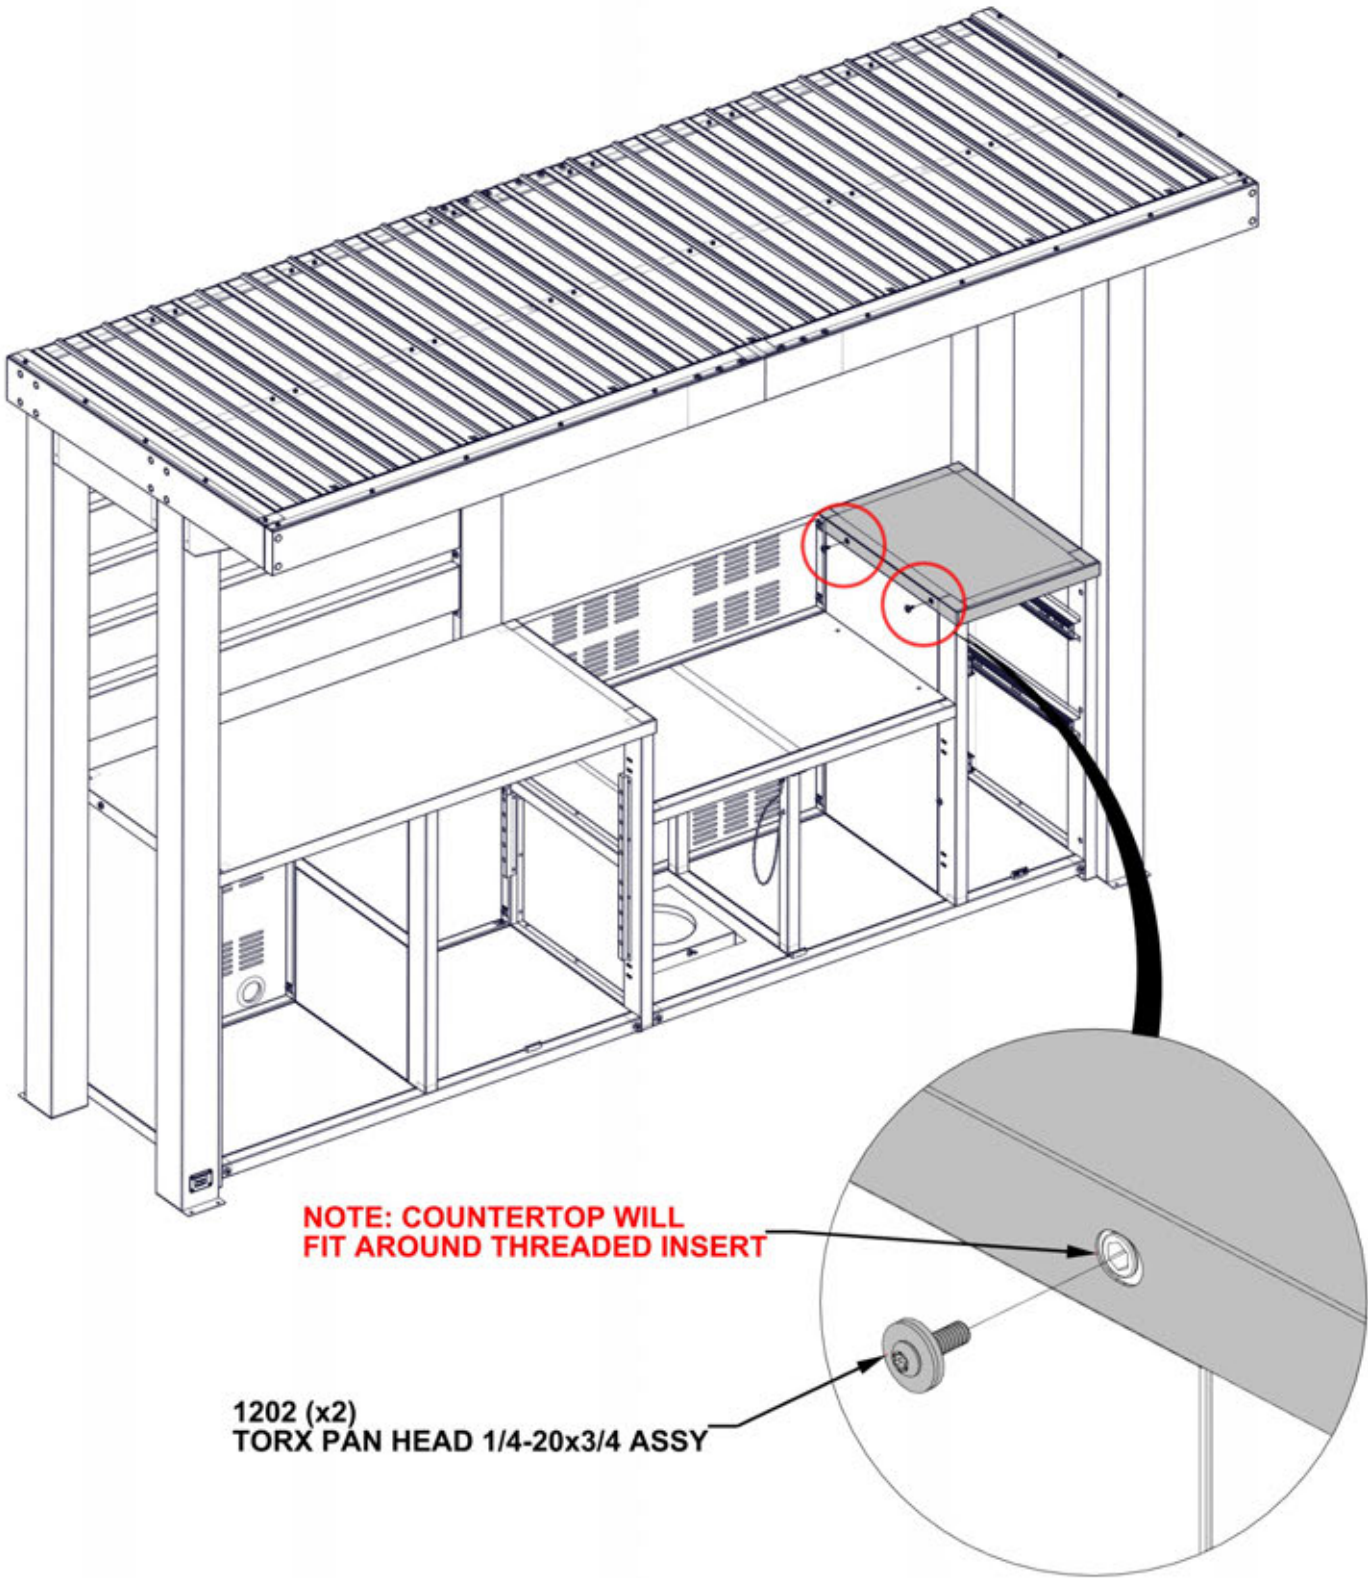

STEP 63C - KITCHEN CABINET ASSEMBLY


QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

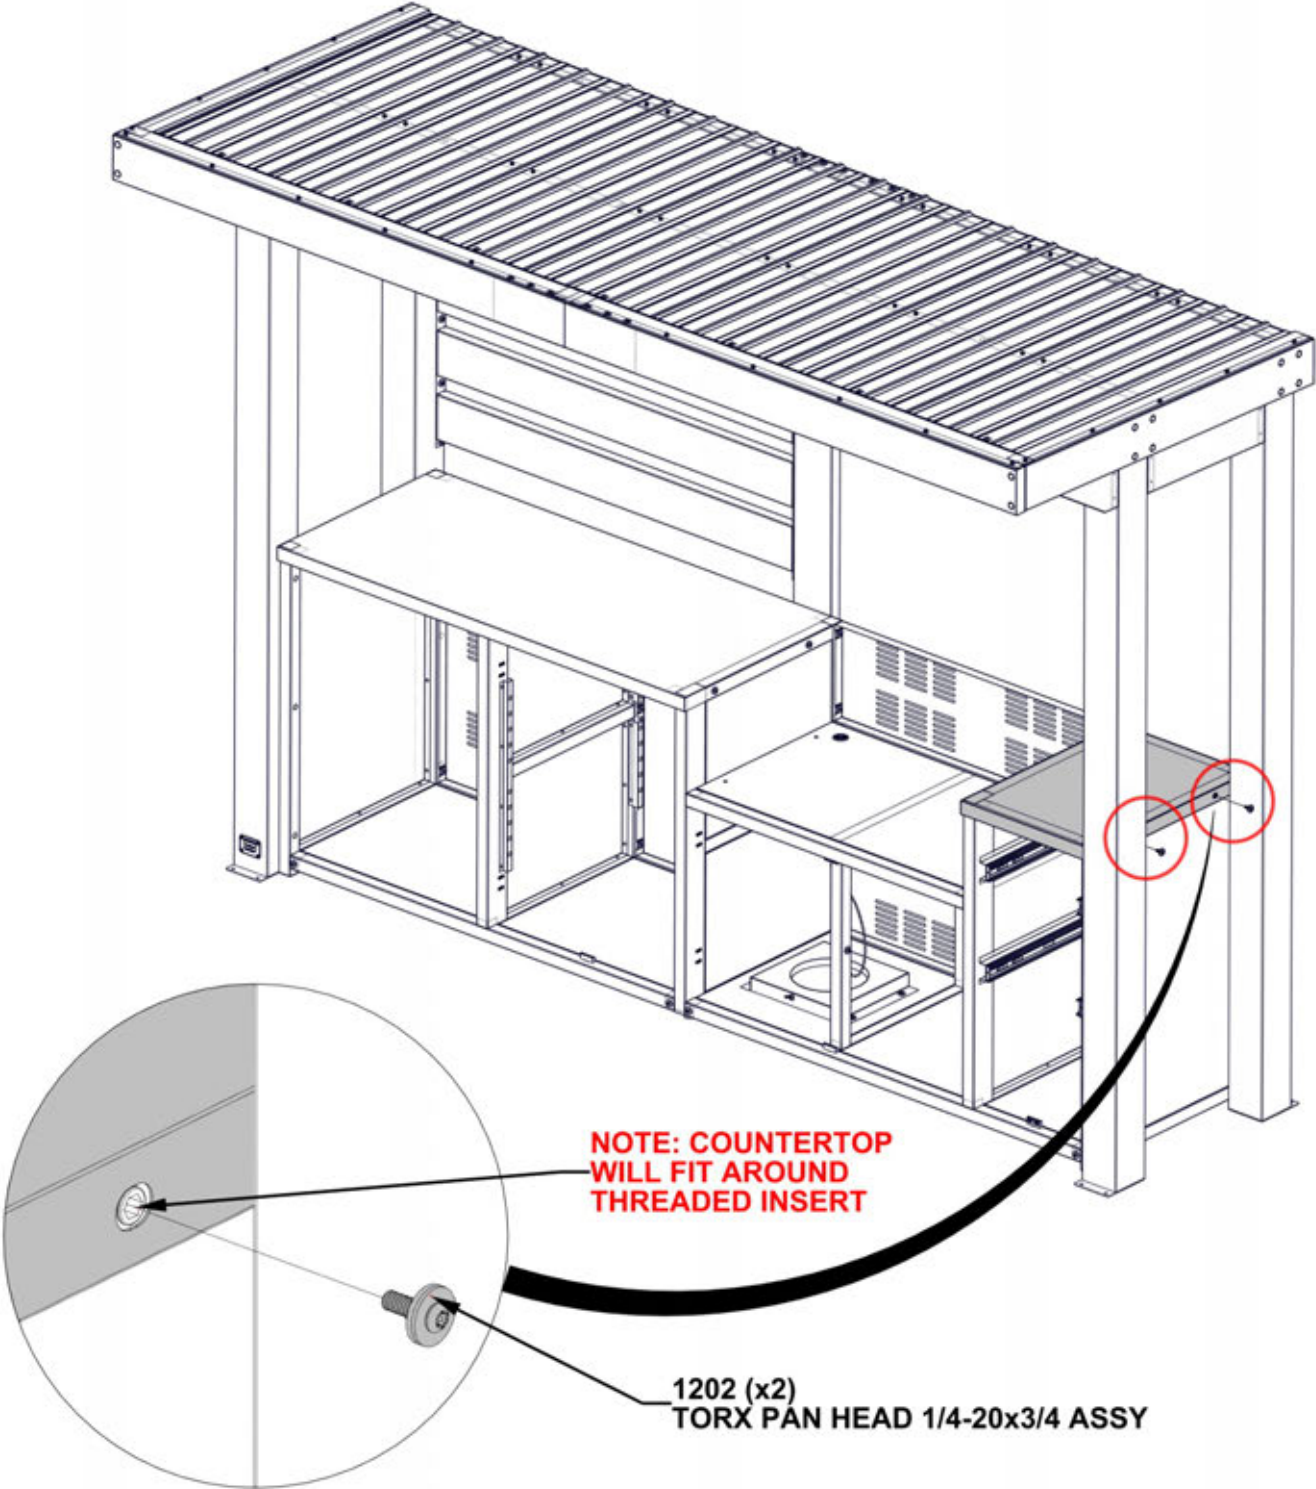


STEP 63D - KITCHEN CABINET ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

ATTACH HARDWARE FROM UNDERSIDE OF COUNTERTOP.
RIGHT ANGLE DRILL ADAPTER IS HELPFUL FOR THIS STEP.

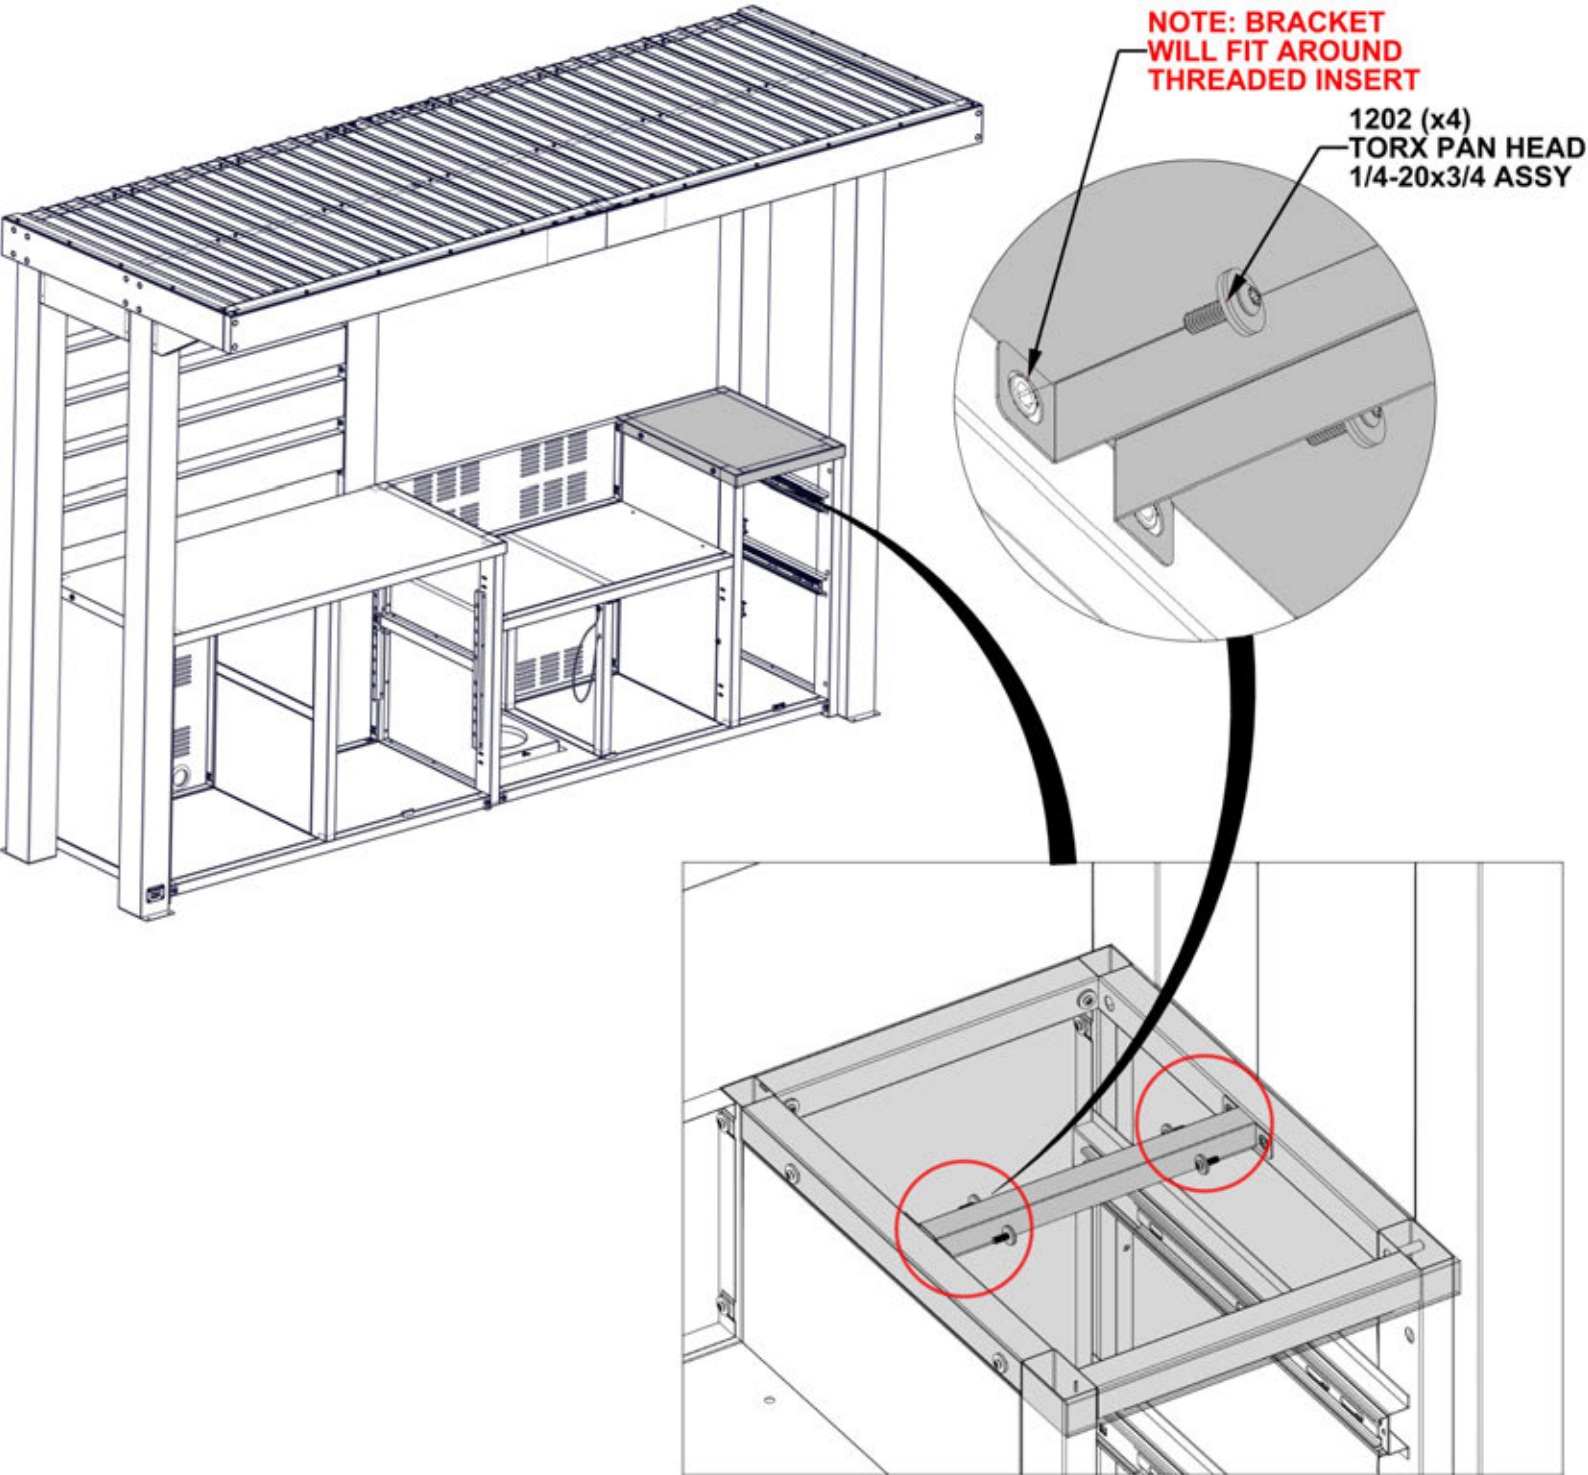


STEP 64 - KITCHEN CABINET ASSEMBLY

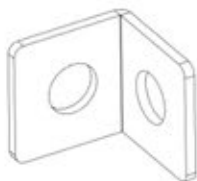

A02 BRACKET - A4M02056
(x3) 1 7/16"x1 7/16"x1 7/16" (36x36x36)

QTY	PART NUMBER	Description
6	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

**ATTACH A02 BRACKETS TO CONNECT
P05 BACK POST TO C02 CABINET PANEL
AND F01 BOTTOM PANEL RAIL**

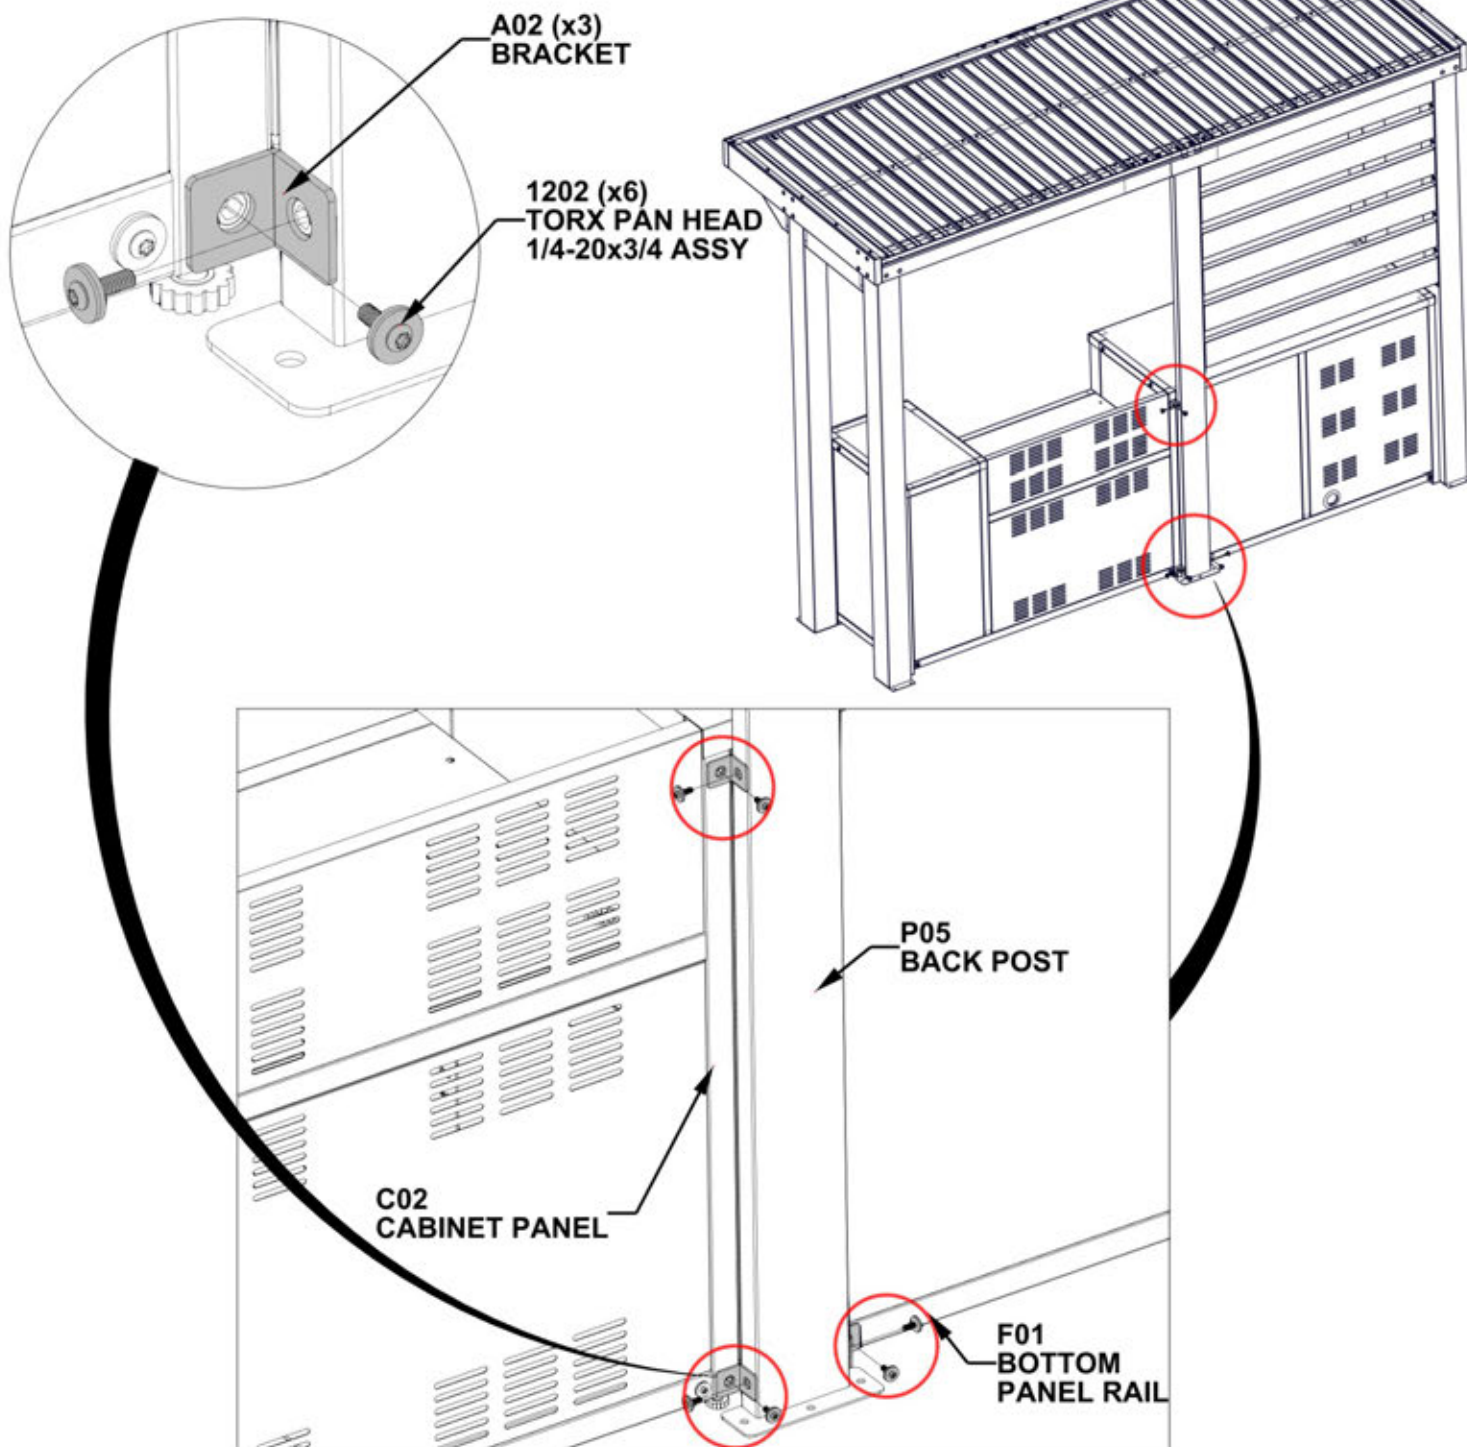


STEP 65 - KITCHEN CABINET ACCESSORIES




A06 ADJUSTABLE SHELF TAB - A4M02077
(x8) 11/16"x7/8"x1 3/16" (17x22x31)

ATTACH ADJUSTABLE SHELF TABS ON BOTH SIDES OF CENTER CABINET

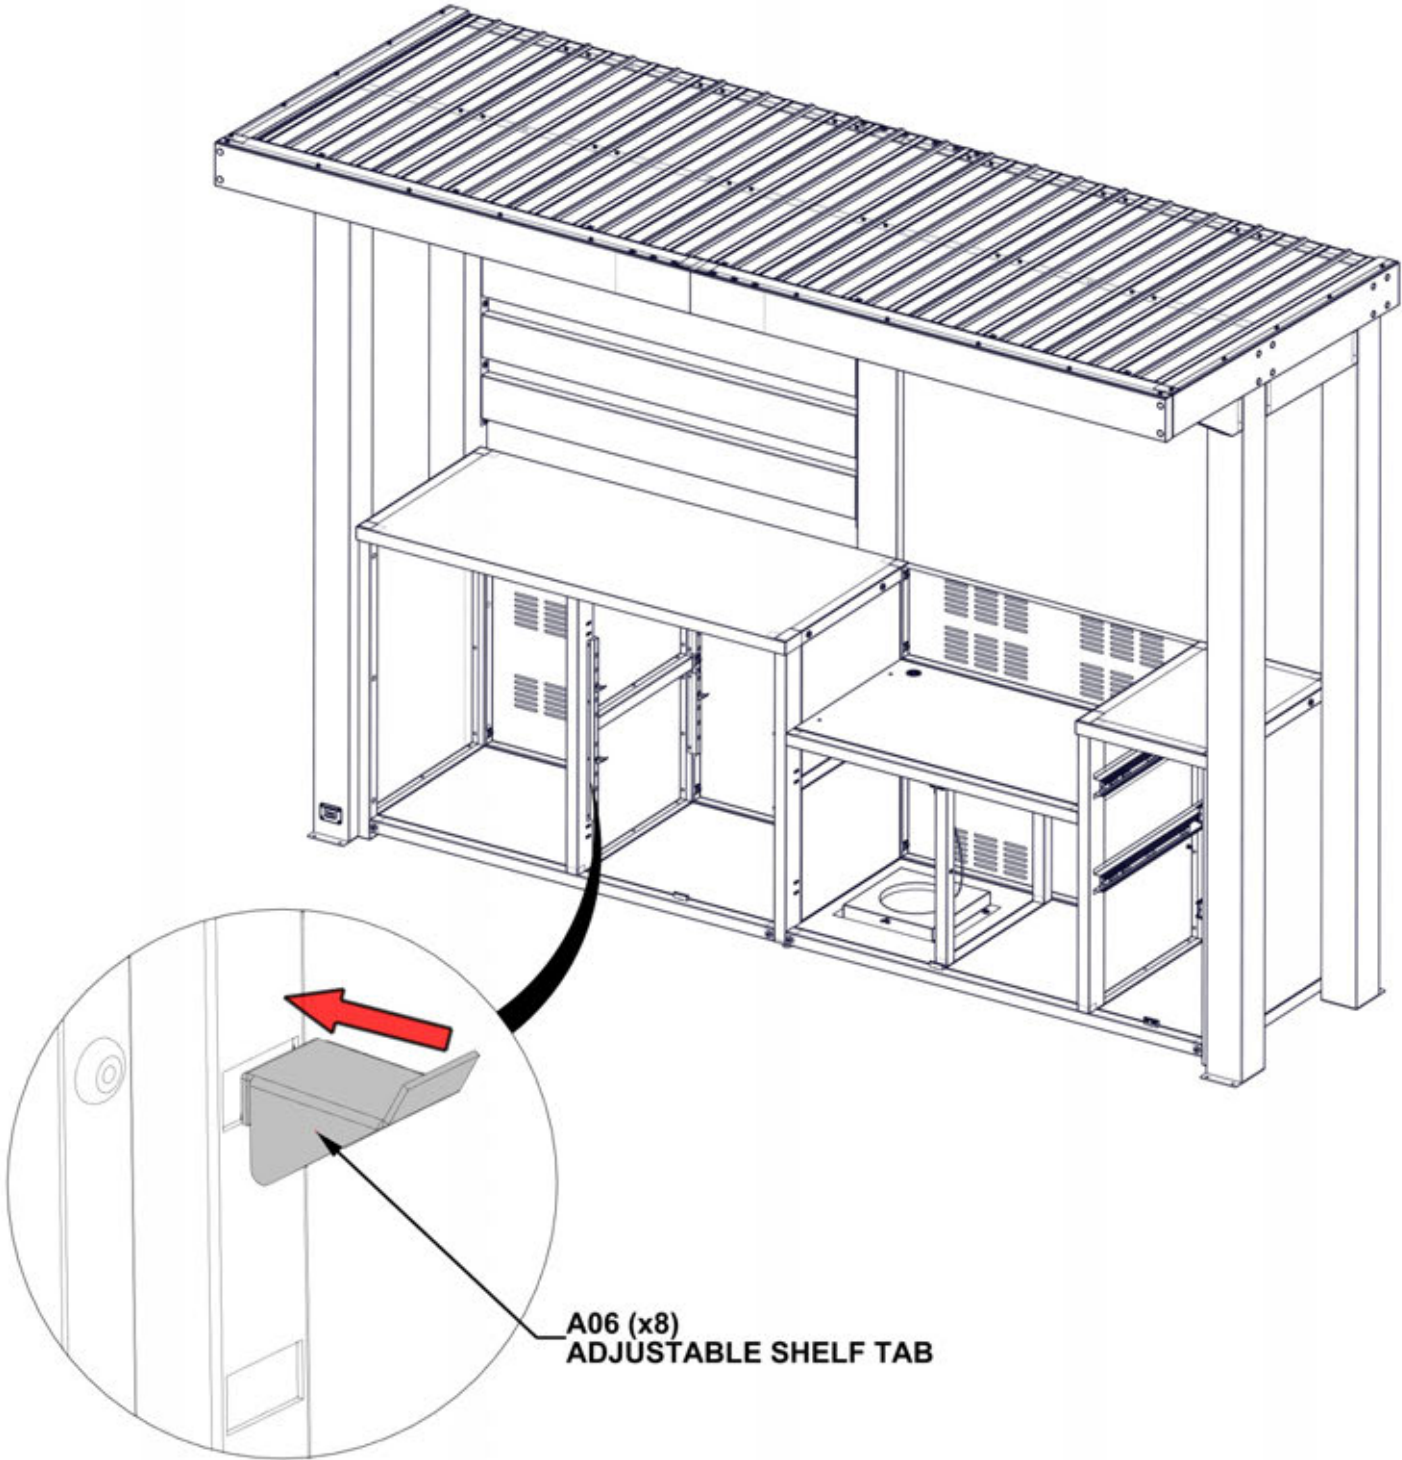

A06 (x8)
ADJUSTABLE SHELF TAB

STEP 66 - KITCHEN CABINET ACCESSORIES

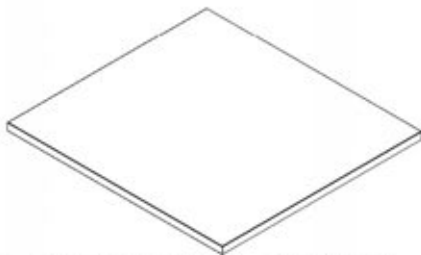


S01 CABINET SHELF - A4M02057
(x2) 13/16"x22 11/16"x24 1/2" (21x577x622)

INSTALL CABINET SHELVES IN CENTER CABINET.

SHELVES WILL REST ON ADJUSTABLE TABS FROM PREVIOUS STEP AND CAN BE POSITIONED AS DESIRED.

S01 (x2)
CABINET SHELF

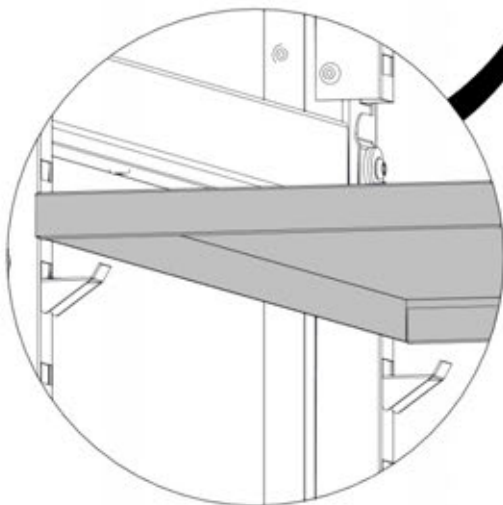


STEP 67 - KITCHEN CABINET ACCESSORIES



A11 SHELF - A4M02105
(x1) 13/16"x18 3/8"x21 1/2" (21x467x546)

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

ATTACH HARDWARE FROM UNDERSIDE OF SHELF
RIGHT ANGLE DRILL ADAPTER IS HELPFUL FOR THIS STEP

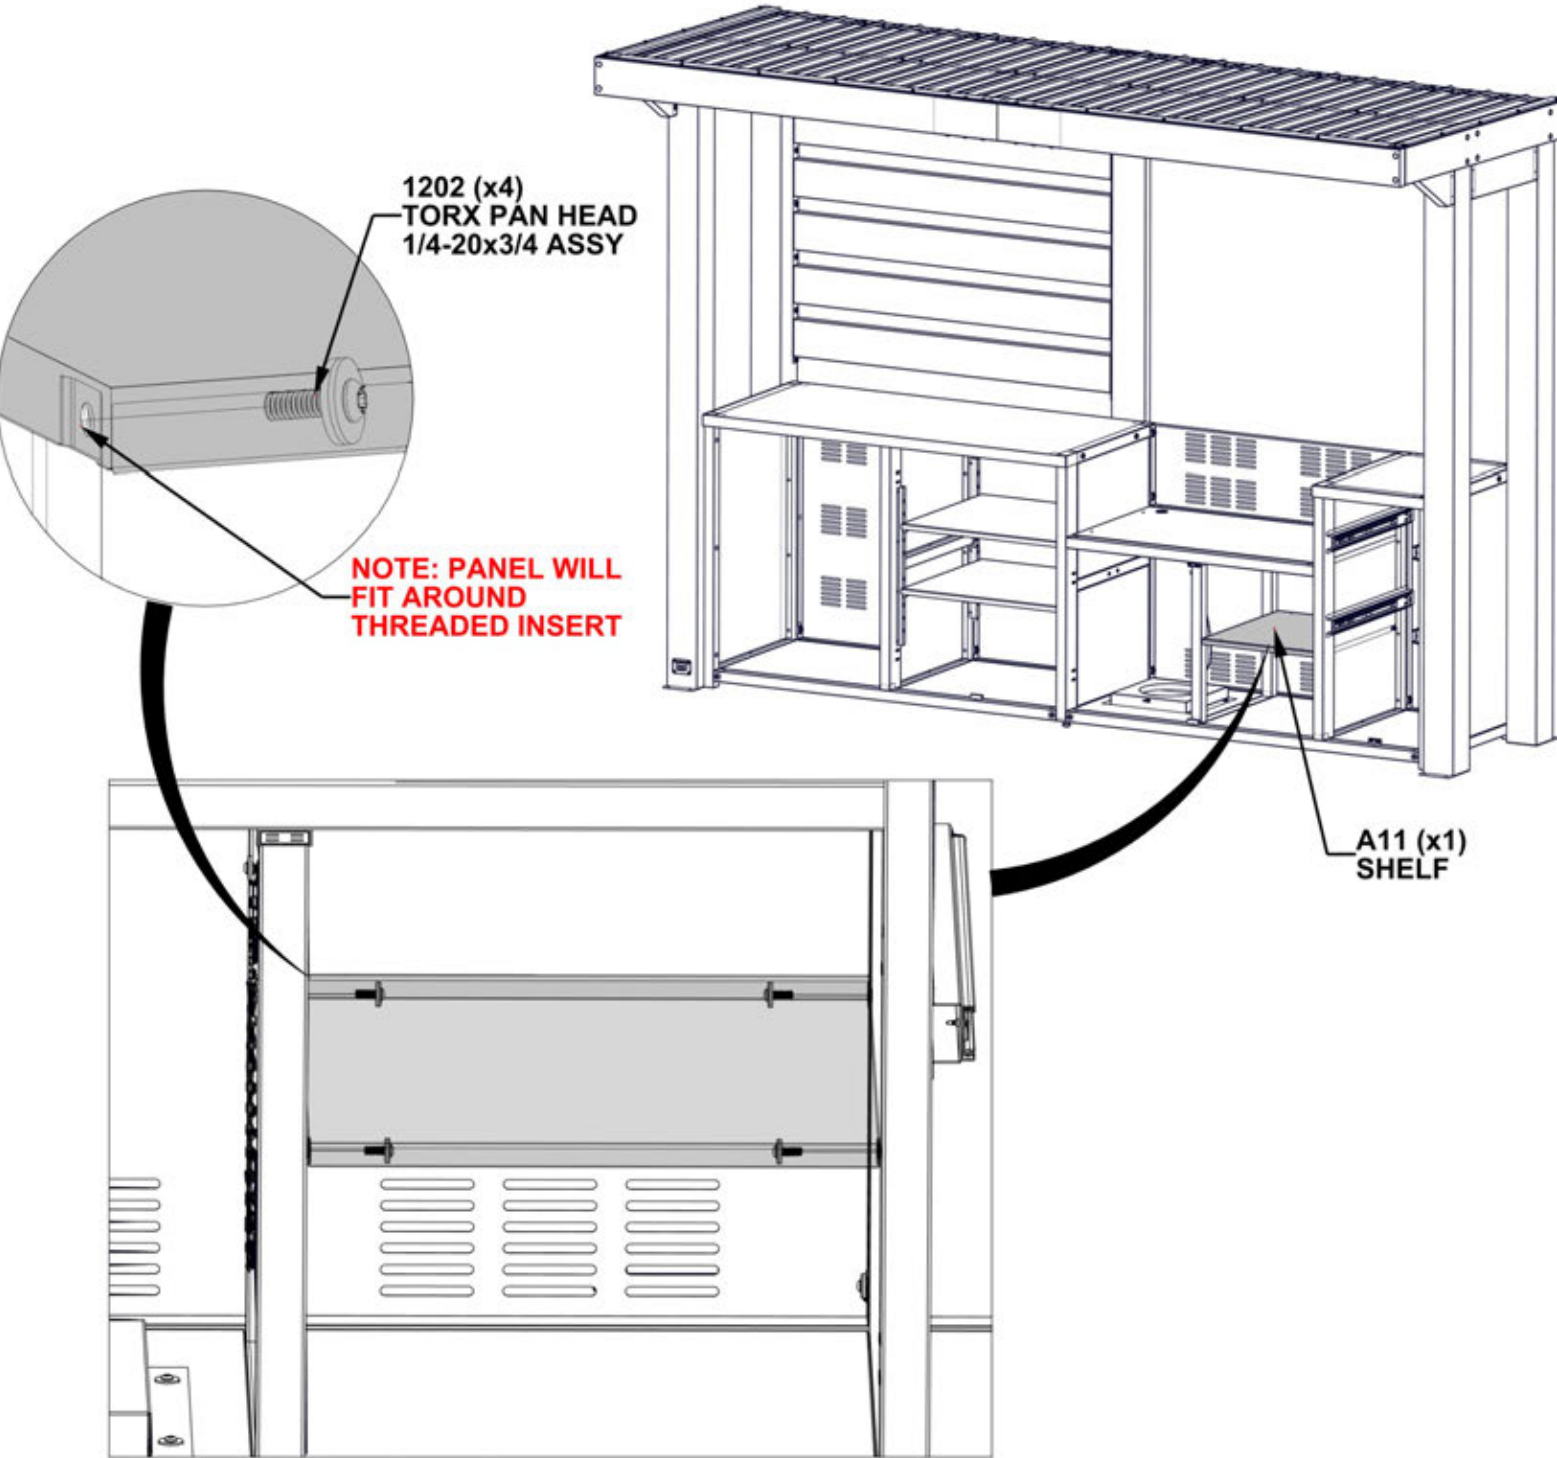


1202 (x4)
TORX PAN HEAD
1/4-20x3/4 ASSY

NOTE: PANEL WILL
FIT AROUND
THREADED INSERT

A11 (x1)
SHELF

STEP 68A - BACK SHELF

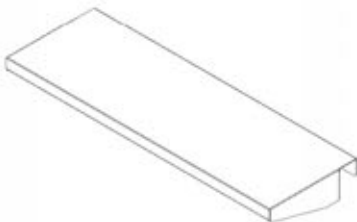



A03 BACK SHELF - A4M02072
(x2) 2 7/16"x7 15/16"x23 3/4" (61x201x603)




A6P00679 EVA TAPE
(x8)

APPLY EVA TAPE IN THE APPROXIMATE
LOCATIONS SHOWN

REPEAT FOR BOTH A03 SHELVES

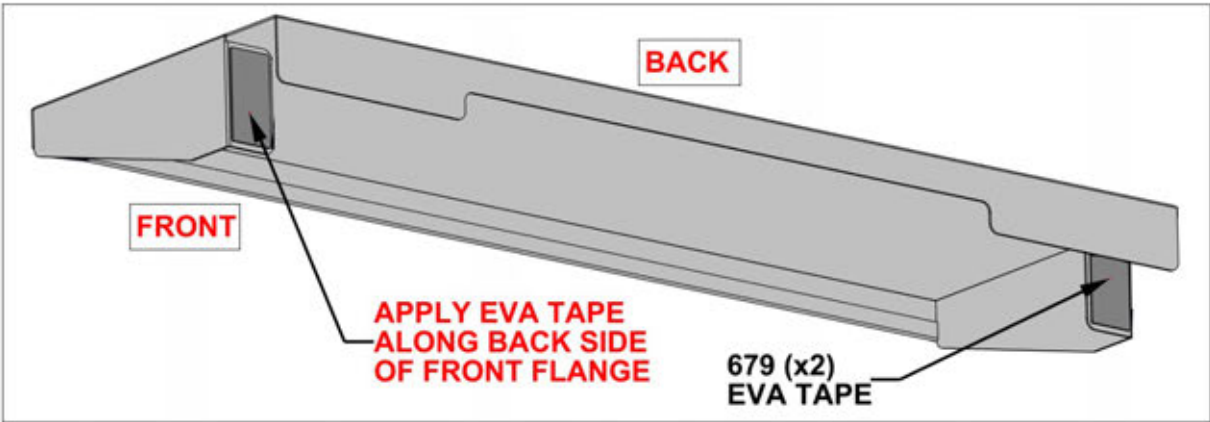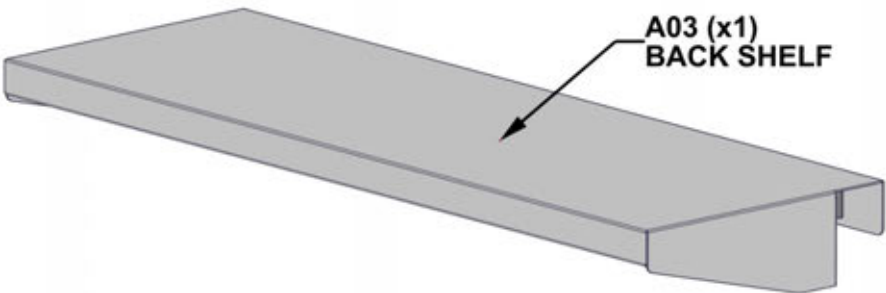


STEP 68B - KITCHEN CABINET ACCESSORIES

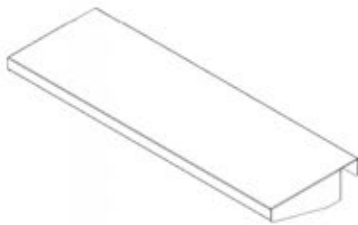


A03 BACK SHELF - A4M02072
(x2) 2 7/16"x7 15/16"x23 3/4" (61x201x603)

MAKE SURE EVA TAPE FROM PREVIOUS STEP, HAS BEEN APPLIED TO FLANGES OF EACH A03 SHELF BEFORE INSTALLING. THIS WILL PREVENT SHELVES FROM SCRATCHING SURFACE OF BACK PANEL

SLIDE BACK SHELF OVER ANY TUBE ALONG B10 BACK PANEL. SHELVES CAN BE POSITIONED ANYWHERE DESIRED.

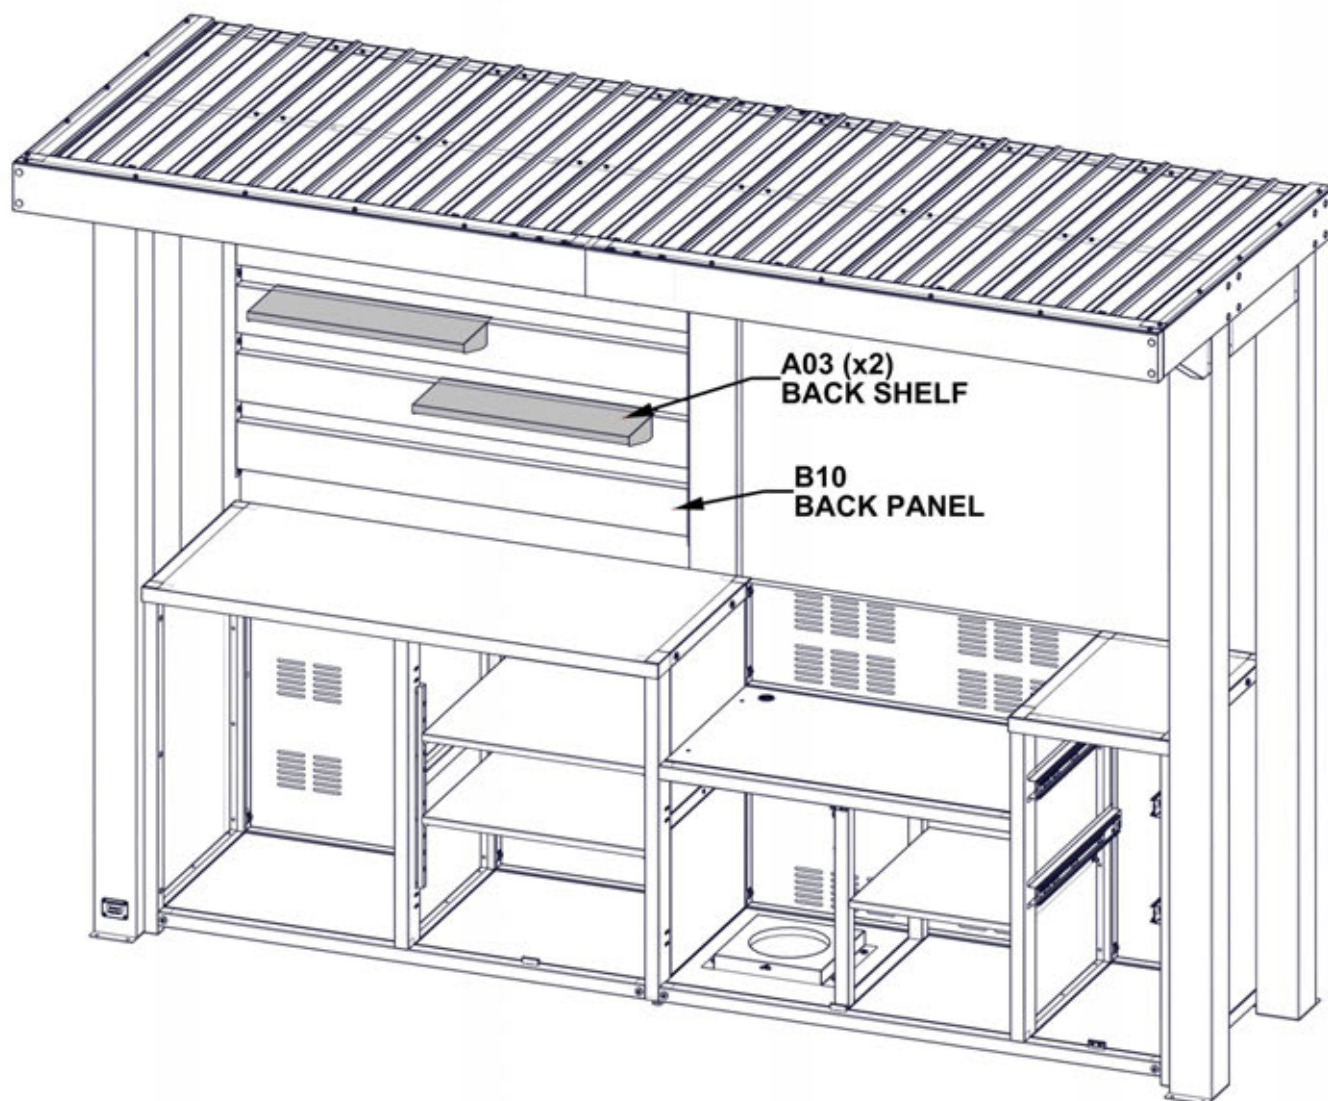


STEP 68C - KITCHEN CABINET ACCESSORIES

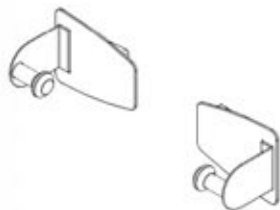

A4M02290 MAGNETIC PAPER TOWEL HOLDER
(x1)

MAGNETIC PAPER TOWEL HOLDER CAN BE ATTACHED TO ANY METAL SURFACE ON KITCHEN. WE RECOMMEND ATTACHING ALONG BACK PANEL.

MAKE SURE TO KEEP PAPER TOWEL HOLDER AT A SAFE DISTANCE FROM GRILLING SURFACE.

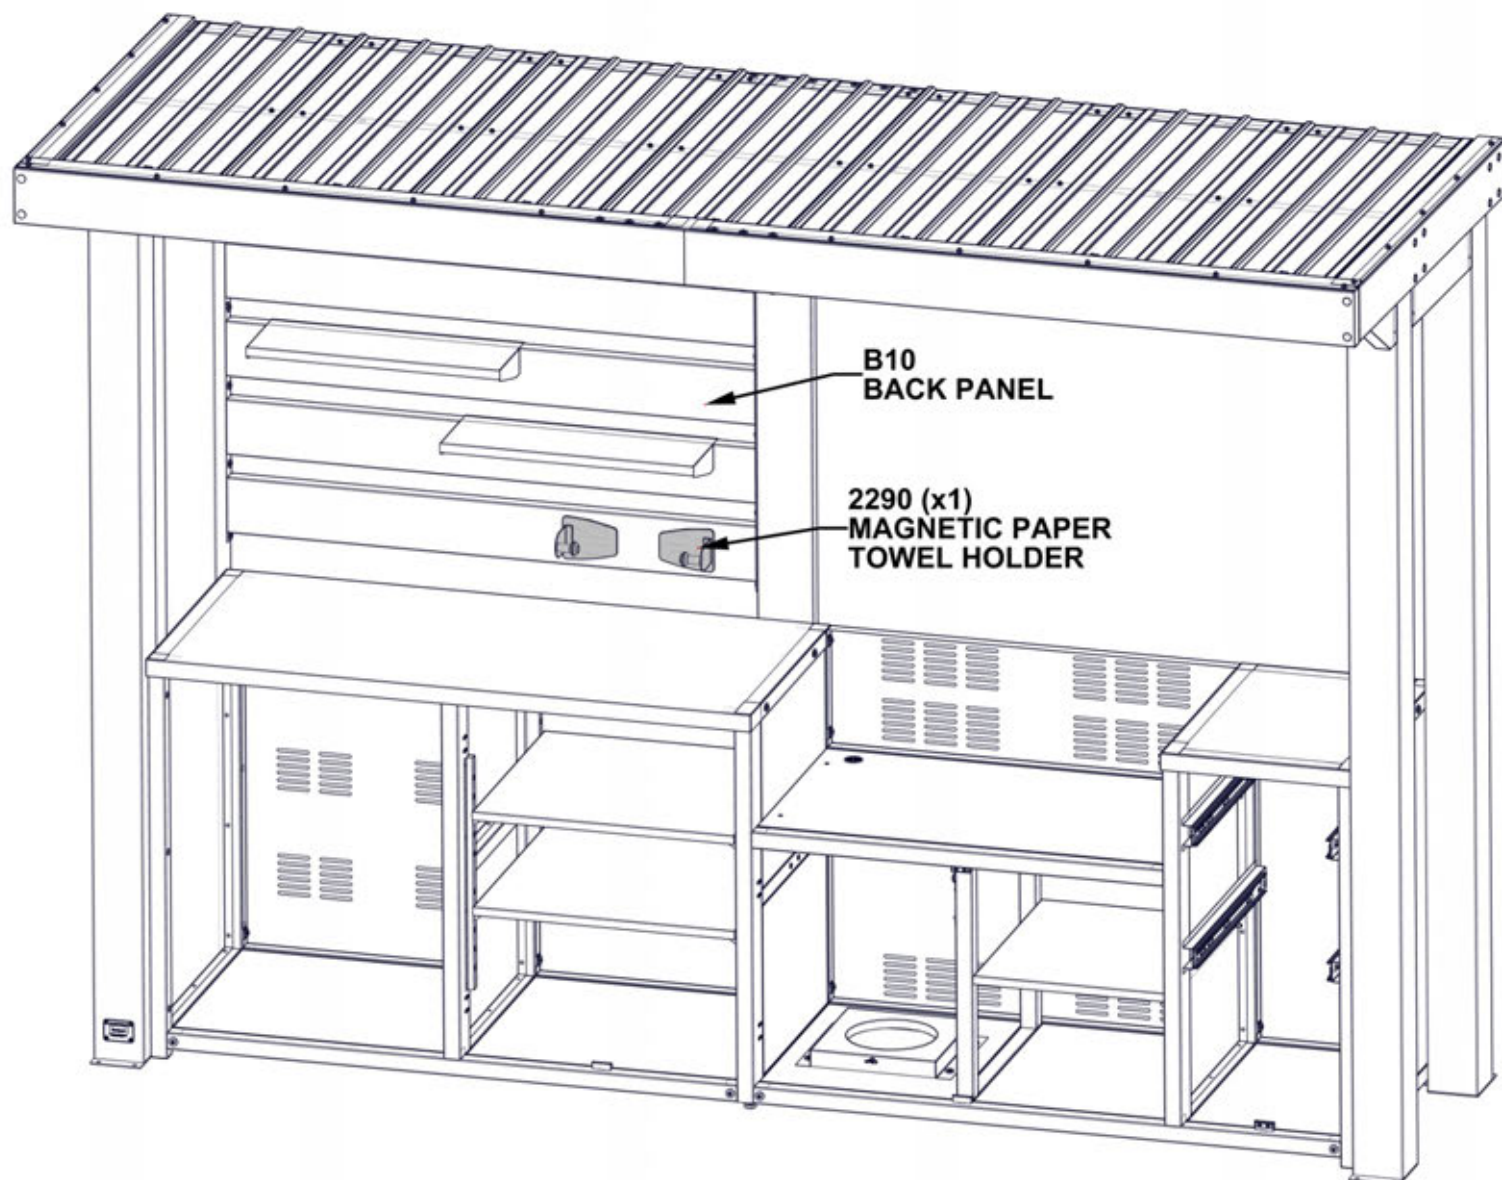




STEP 69A - KITCHEN CABINET ACCESSORIES



A4M01352 HOLE COVER
(x5)

USE A SMALL PIECE OF WOOD AND RUBBER
Mallet TO TAP HOLE COVERS IN.

DO NOT TAP DIRECTLY WITH A HAMMER AS
YOU MAY DAMAGE THE FINISH ON PRODUCT.

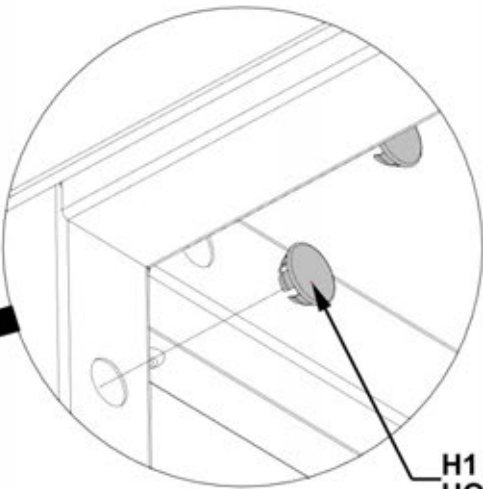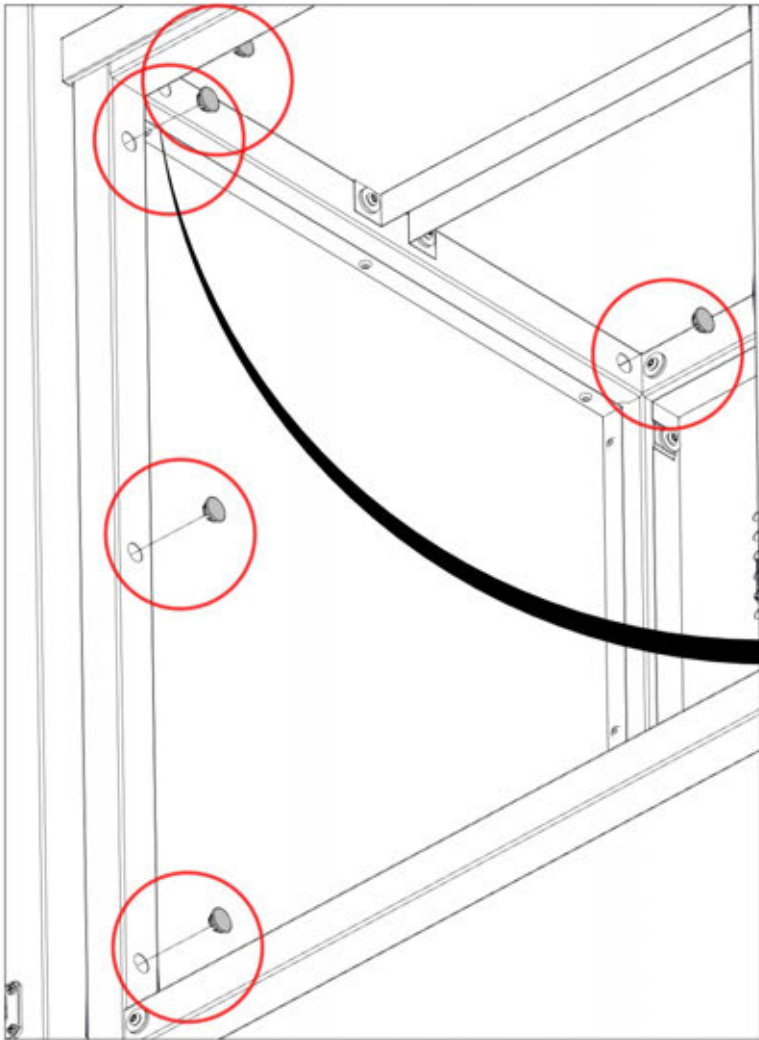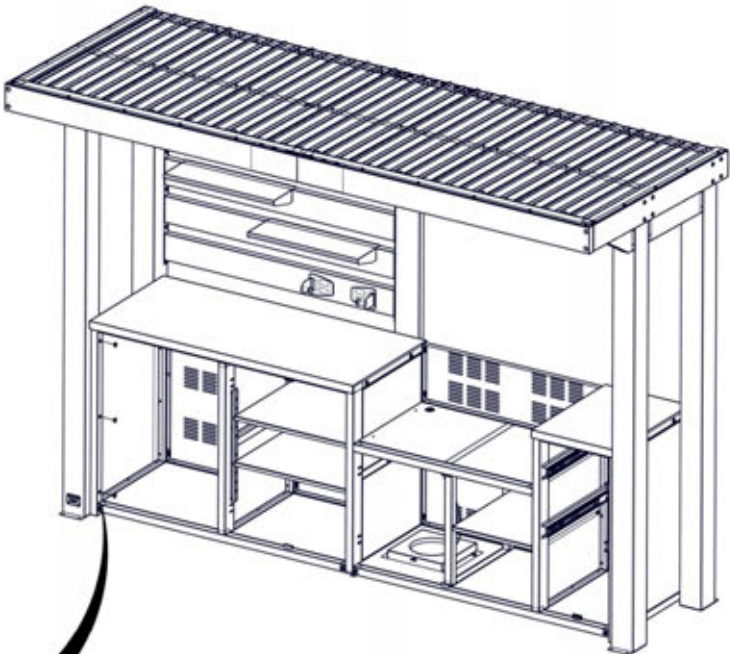


H1 (x5)
HOLE COVER


STEP 69B - KITCHEN CABINET ACCESSORIES



A4M01352 HOLE COVER
(x5)

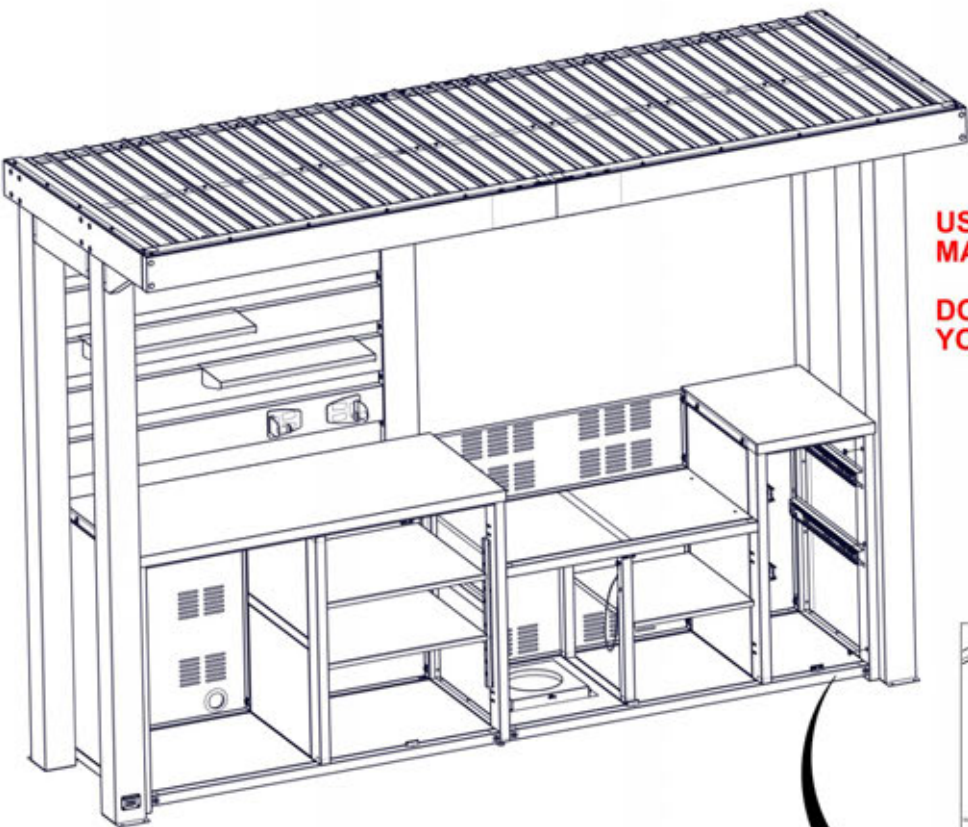

USE A SMALL PIECE OF WOOD AND RUBBER Mallet TO TAP HOLE COVERS IN.
DO NOT TAP DIRECTLY WITH A HAMMER AS YOU MAY DAMAGE THE FINISH ON PRODUCT.

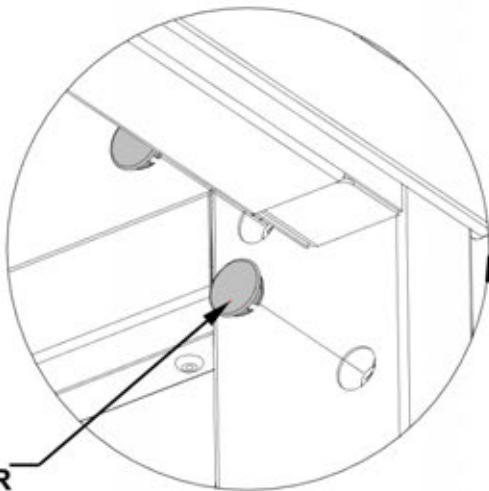

H1 (x5)
HOLE COVER



STEP 69C - KITCHEN CABINET ACCESSORIES





A4M01352 HOLE COVER
(x4)

**DO NOT STAND ON CABINET FRAME TO
INSTALL HOLE COVERS**

**USE A SMALL PIECE OF WOOD AND RUBBER
MALLET TO TAP HOLE COVERS IN.**

**DO NOT TAP DIRECTLY WITH A HAMMER AS
YOU MAY DAMAGE THE FINISH ON PRODUCT.**

H1 (x4)
HOLE COVER

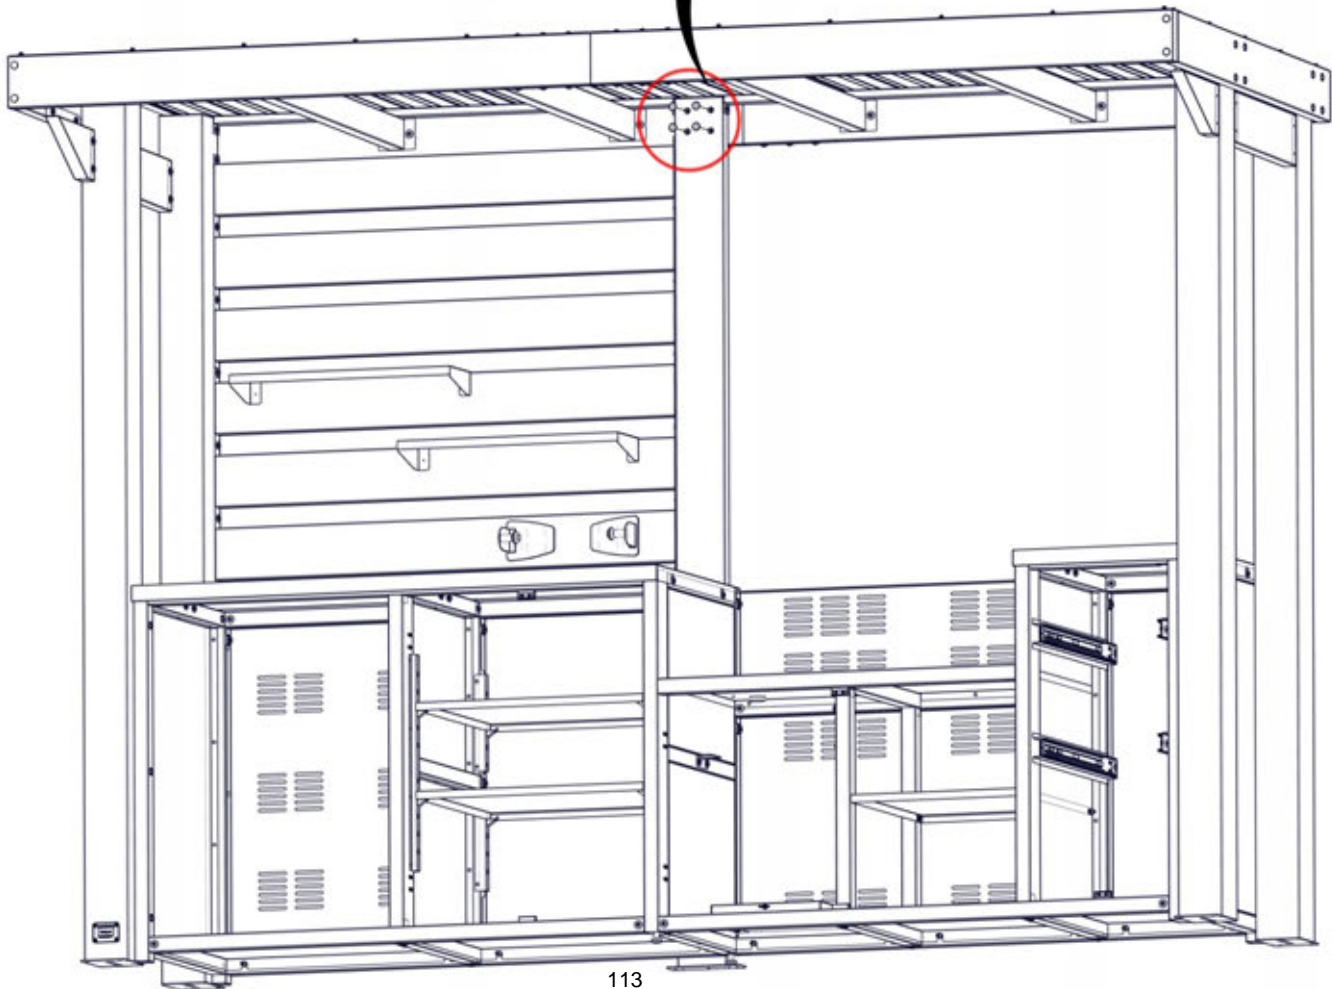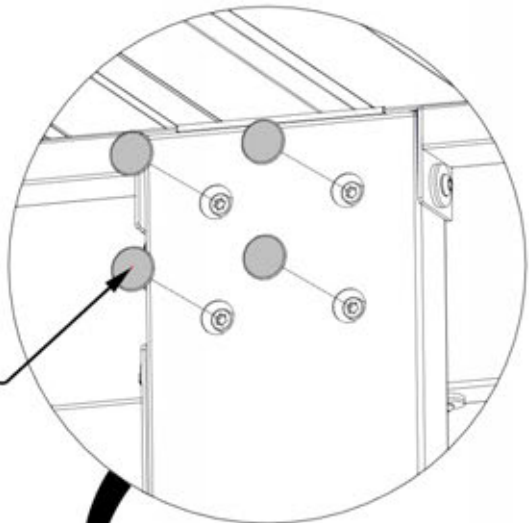

STEP 70A - KITCHEN TRASH CAN ASSEMBLY



A10 ANGLE BRACKET - A4M02276
(x1) 13/16"x5 15/16"x9 13/16" (20x151x250)



A07 ANGLE BRACKET - A4M02277
(x1) 13/16"x5 15/16"x9 13/16" (20x151x250)


QTY	PART NUMBER	Description
4	H100653	NUT LOCK 1/4 BLK
4	H100401	BOLT WH 1/4x1/2 BLK
4	H101133	WASHER FLAT 7x14 BLK



A04 7 GALLON TRASH CAN HOLDER - A4M02074
(x1) 1 1/4"x12 9/16"x21 5/8" (32x319.5x550)

ALIGN HOLES IN TOP OF ANGLE BRACKETS
WITH HOLES IN TRASH CAN HOLDER.

MAKE SURE FLAT SIDE OF BRACKETS FACE
OUTWARD AND FRONT EDGE IS FLUSH.

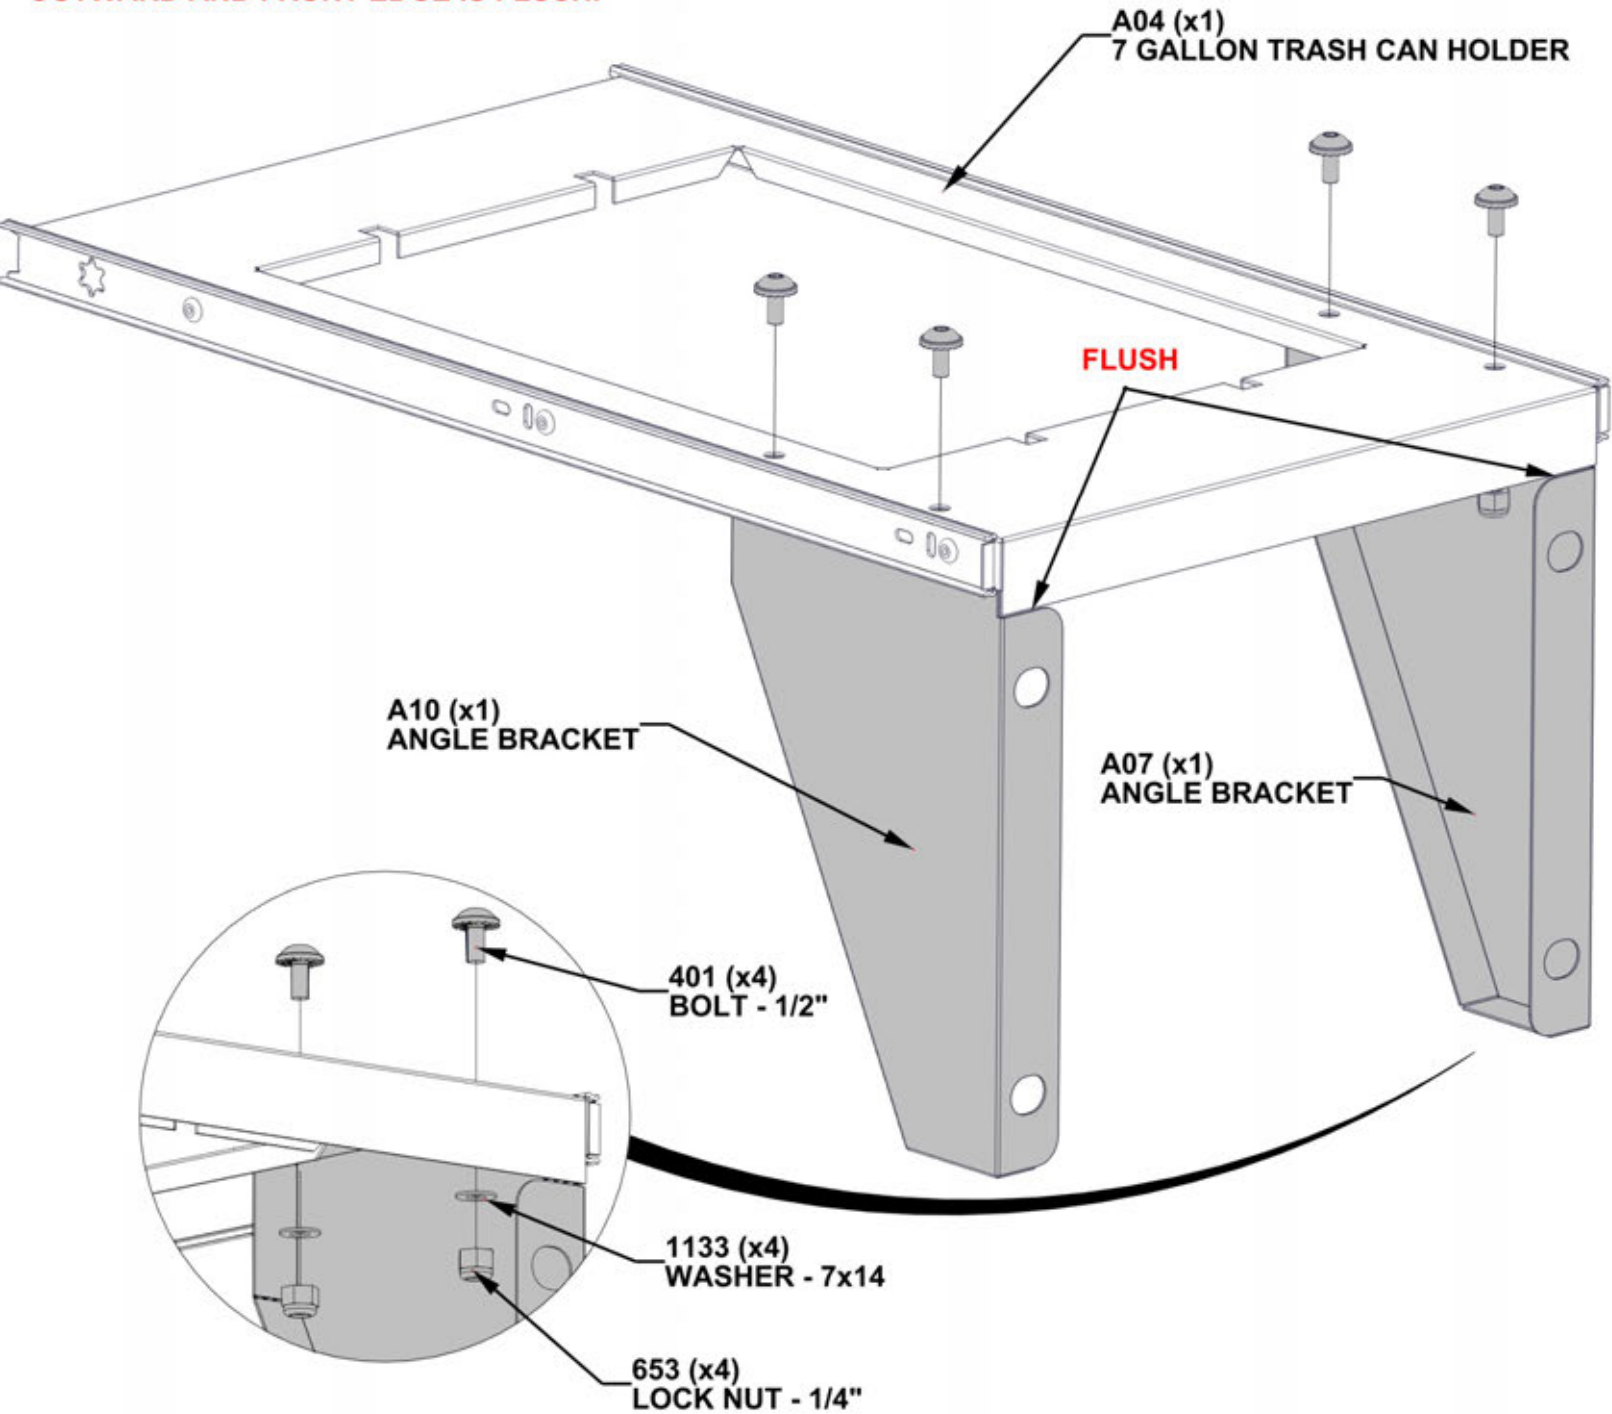


STEP 70B - KITCHEN TRASH CAN ASSEMBLY



QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

D03 DOOR PANEL - A4M02067
(x1) 7/8"x14 5/8"x22 7/16" (22x372x570)

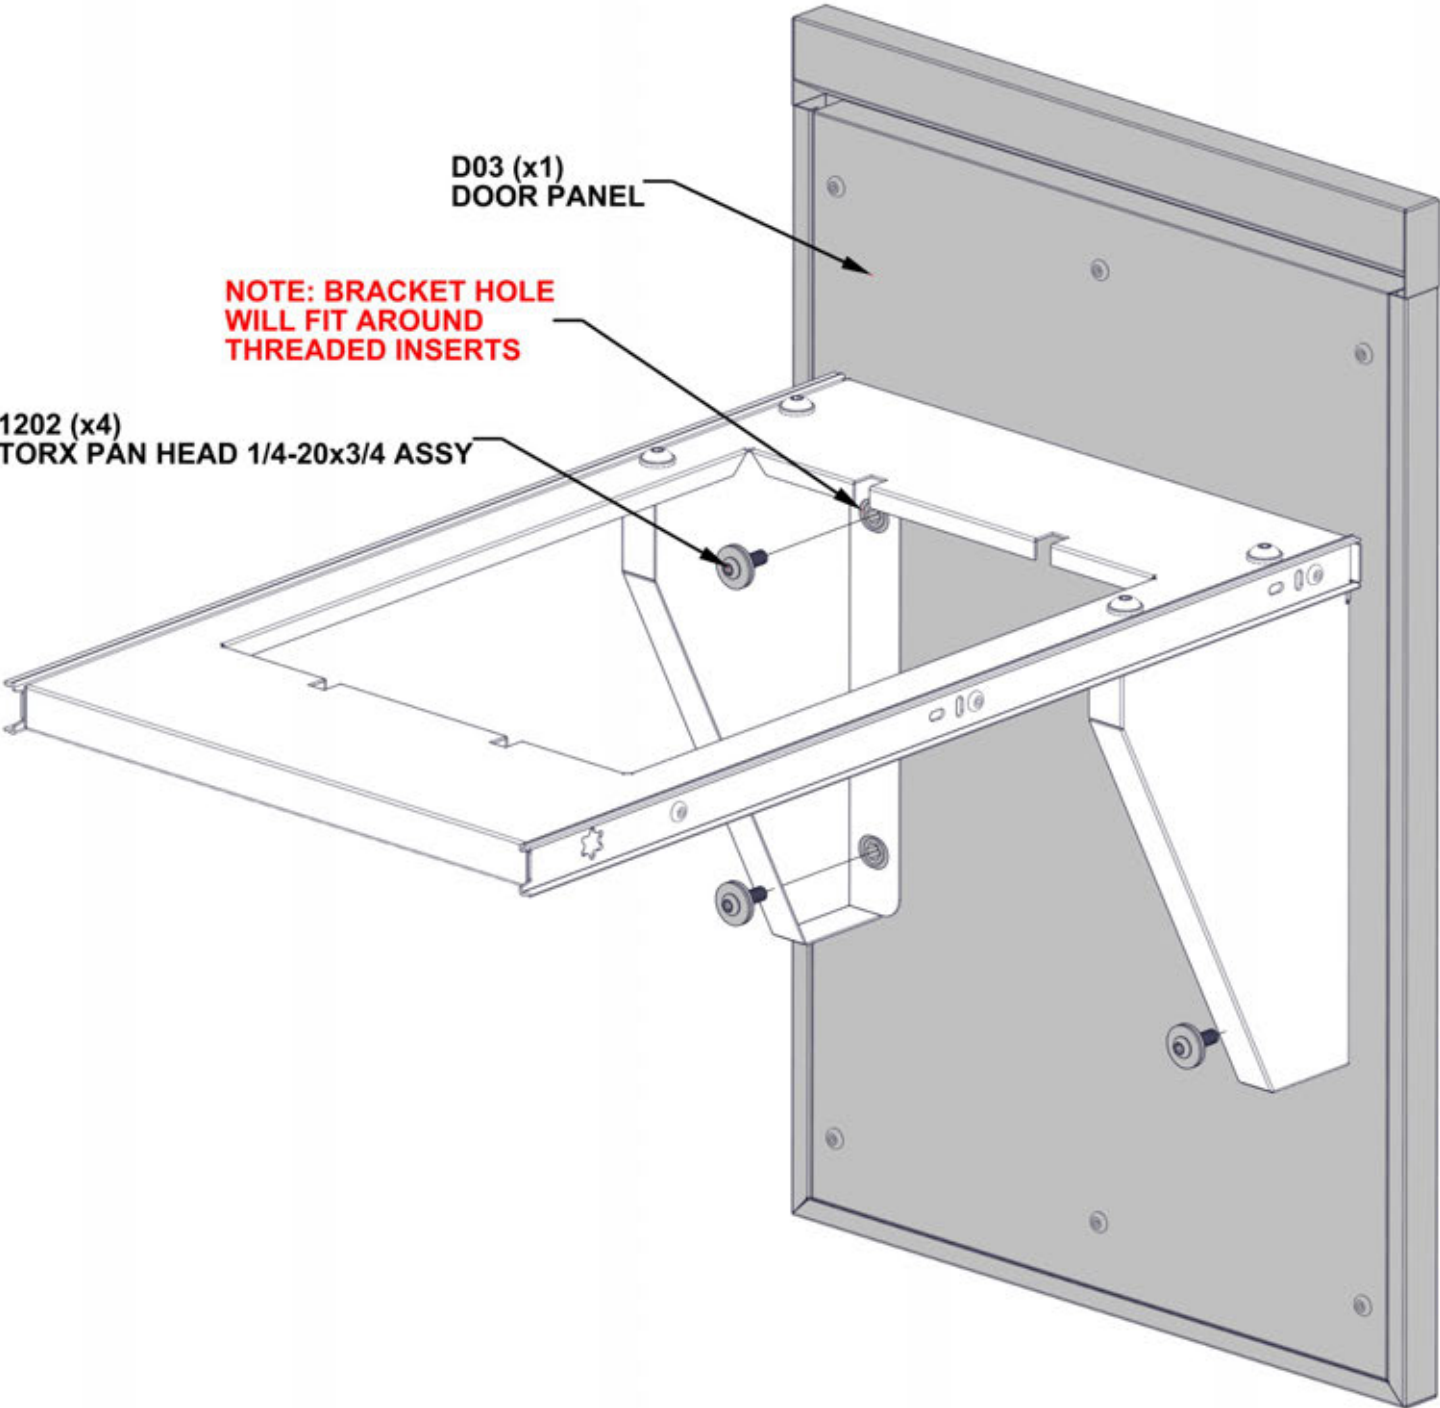

STEP 71 - KITCHEN CABINET ACCESSORIES





TRASH CAN HOLDER ASSEMBLY
STEPS 70A - 70B

**ATTACH TRASH CAN HOLDER BY ALIGNING BOTH ENDS OF
FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.**


**TIP: REFER TO STEP 79:
KITCHEN DOOR ADJUSTMENT**

PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.

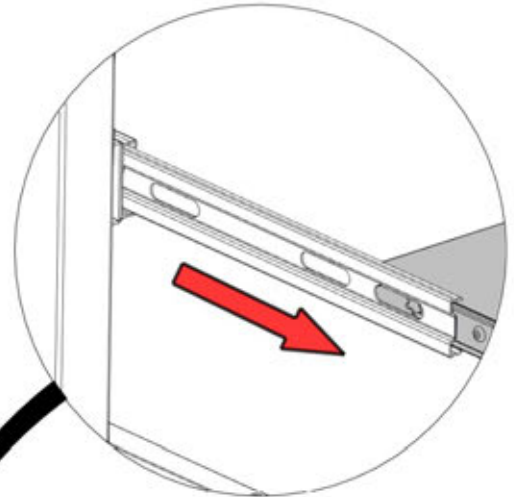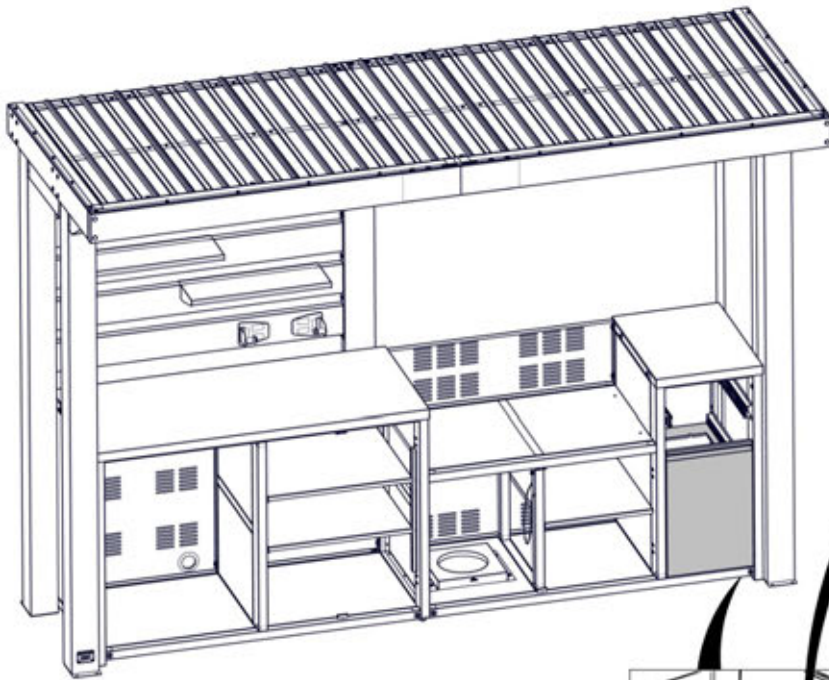

**NOTE: SLIDE INNER RACE OF
DRAWER SLIDE OUT BEFORE
ATTACHING SLIDES**



**ALIGN DRAWER SLIDES
ON BOTH SIDES OF TRASH
CAN HOLDER**

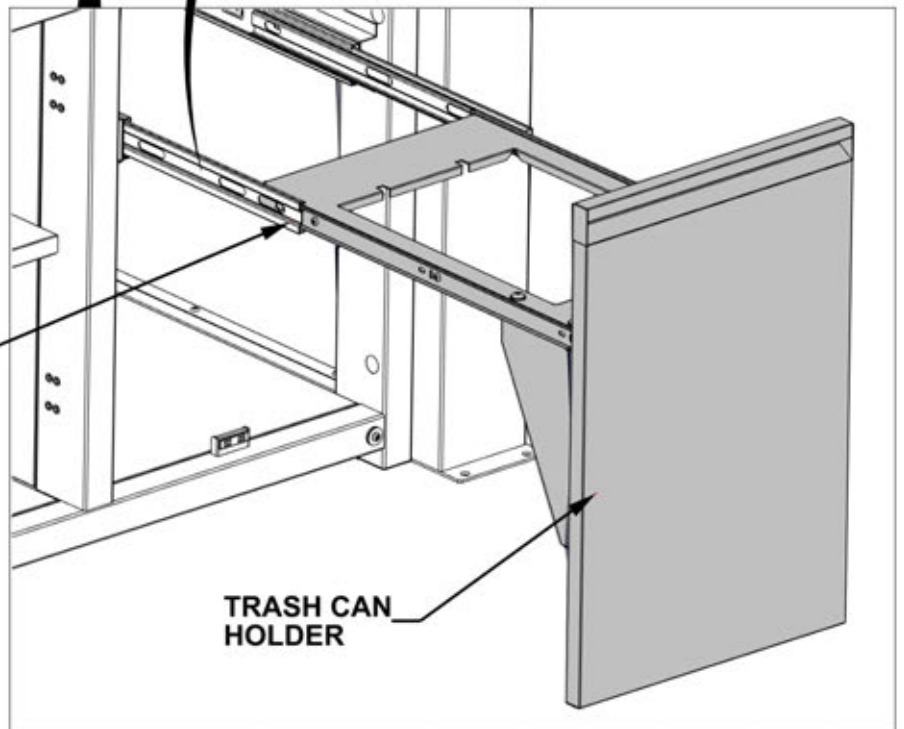

**TRASH CAN
HOLDER**


STEP 72 - CABINET DRAWER ASSEMBLY

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

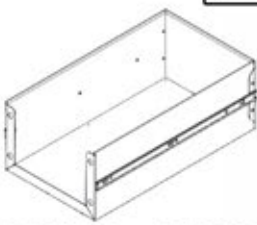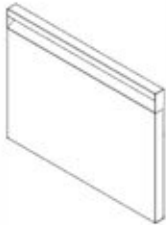


D06 DRAWER FACE - A4M02060
(x1) 7/8"x11 1/16"x14 5/8" (22x281x372)

D07 8" DRAWER - A4M02075
(x1) 8 1/16"x12 9/16"x21 11/16" (204x319.5x551)

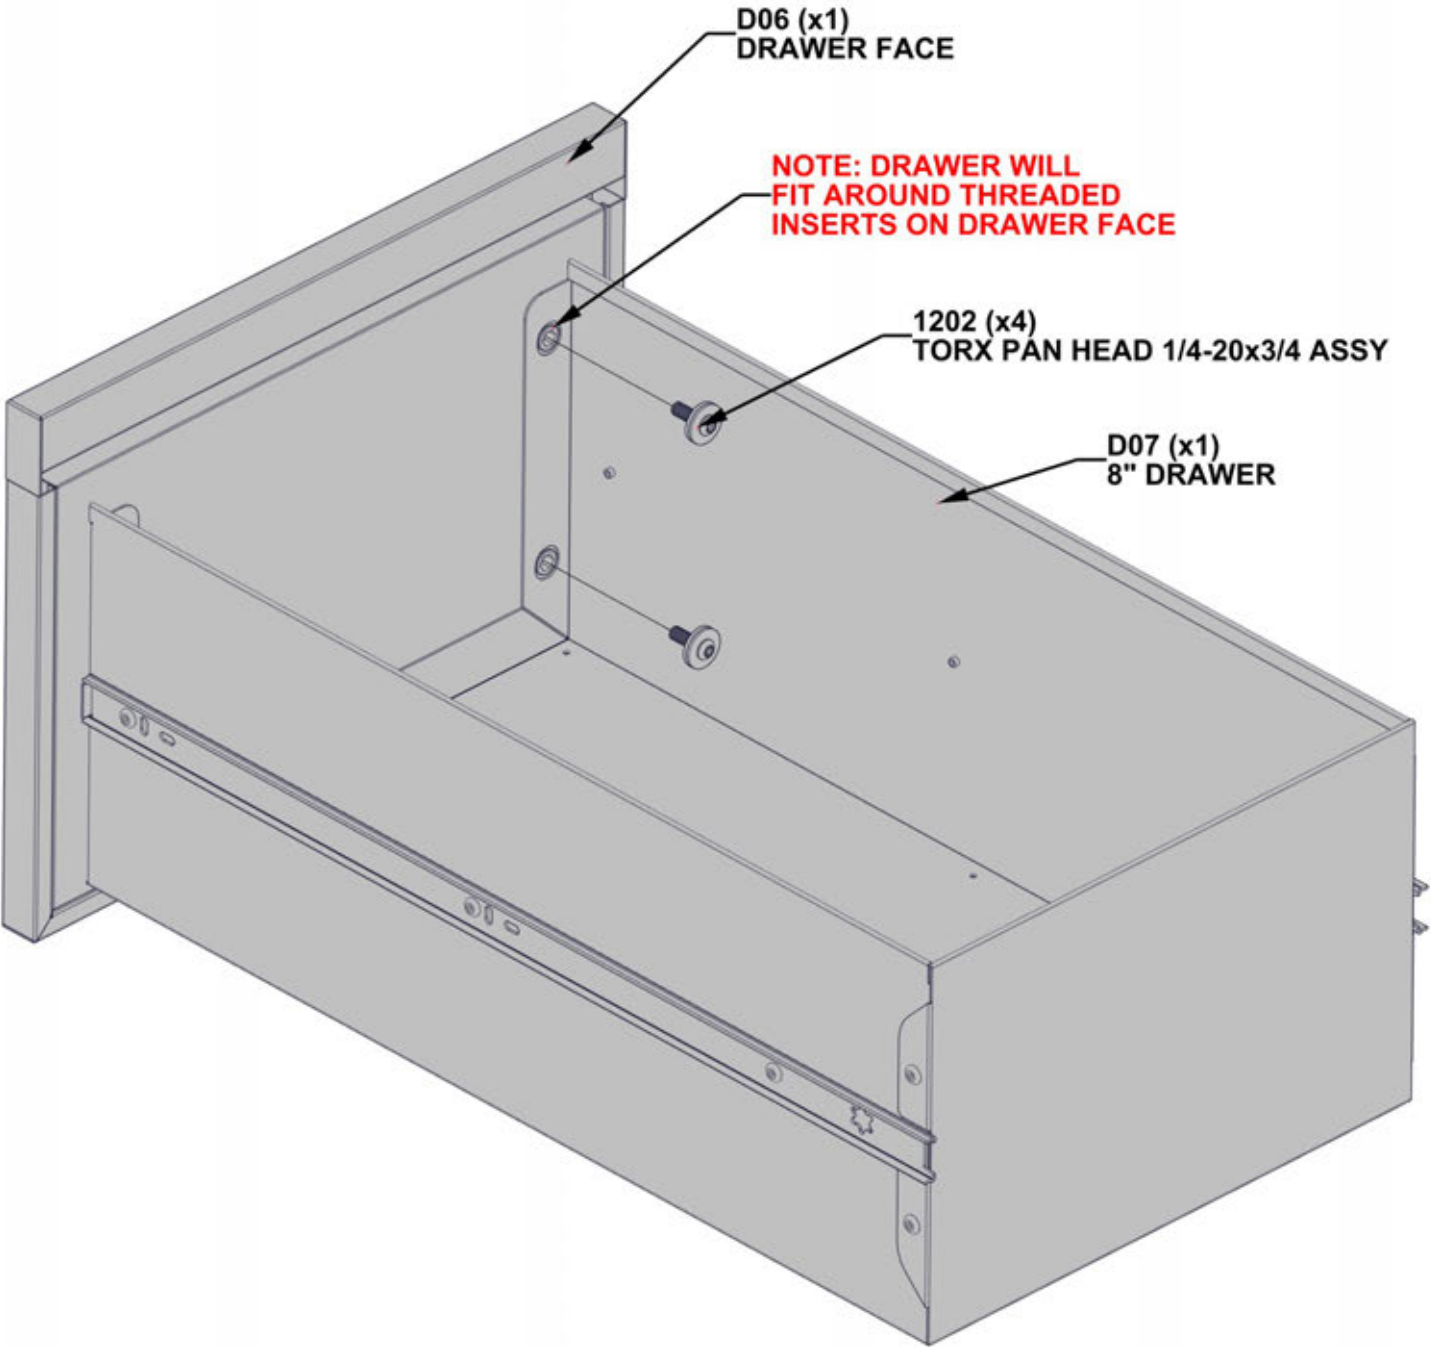


STEP 73 - KITCHEN CABINET ACCESSORIES

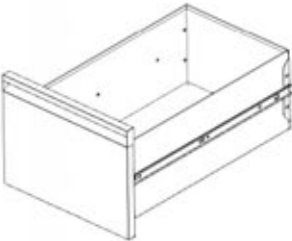



PULL OUT DRAWER
ASSEMBLY STEP 72

**ATTACH PULL OUT DRAWER BY ALIGNING BOTH ENDS OF
FACTORY ASSEMBLED DRAWER SLIDES WITH ONE ANOTHER.
PRESS TOGETHER UNTIL DRAWER SLIDES CONNECT.**

TIP: REFER TO STEP 79:
KITCHEN DOOR ADJUSTMENT

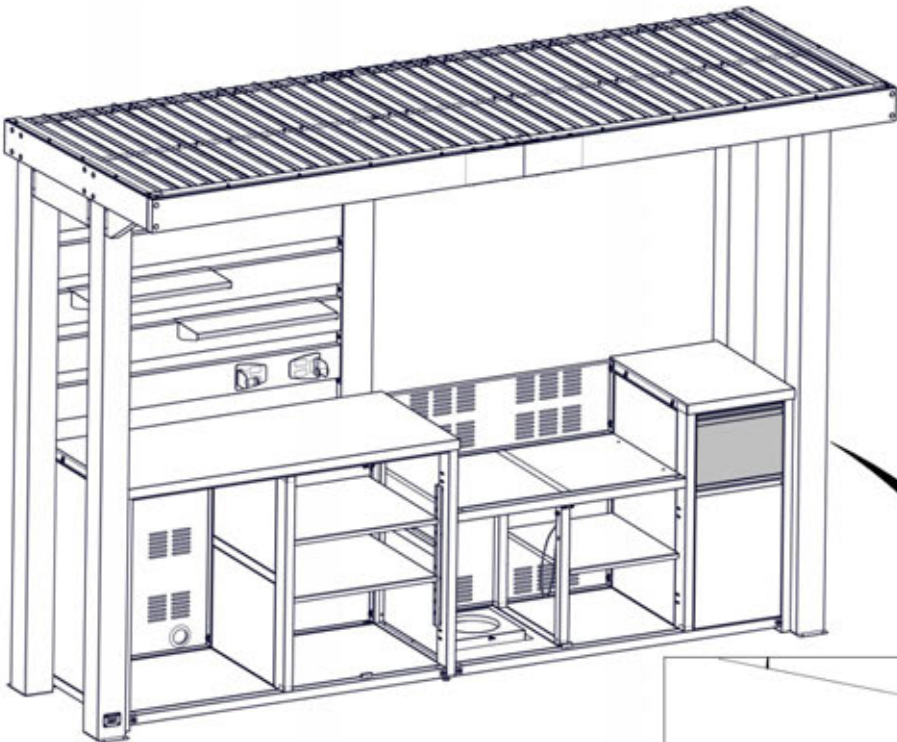

**NOTE: SLIDE INNER RACE OF
DRAWER SLIDE OUT BEFORE
ATTACHING SLIDES**

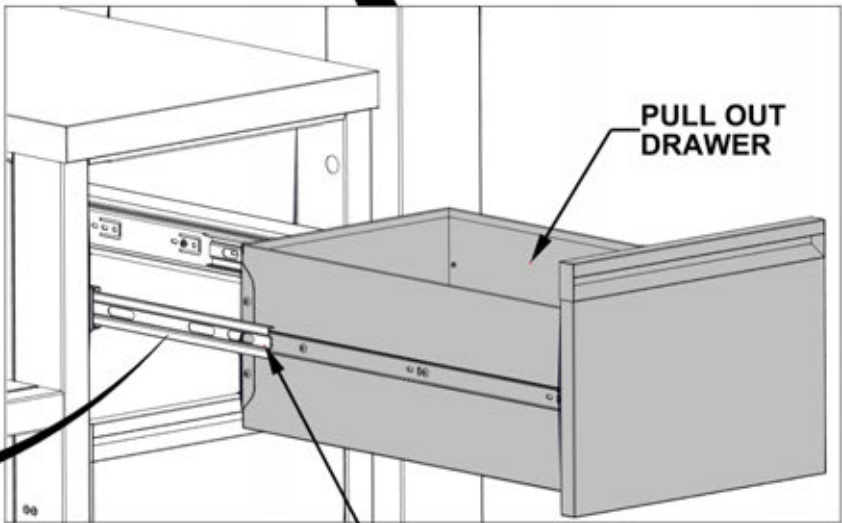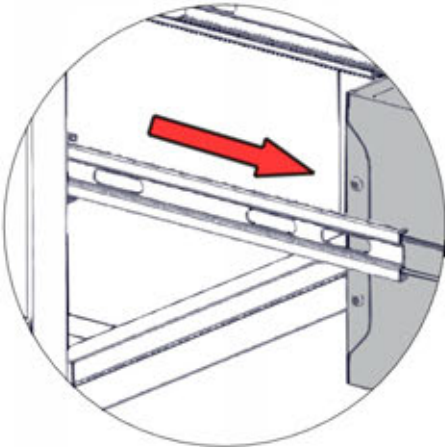

**ALIGN DRAWER SLIDES
ON BOTH SIDES OF PULL
OUT DRAWER**

STEP 74 - CABINET DOOR ASSEMBLY



D01 DOOR PANEL - A4M02064
(x1) 22x12 3/4"x33 5/8" (22x324x854)



D02 DOOR PANEL - A4M02066
(x1) 7/8"x12 3/4"x33 5/8" (22x324x854)



D04 DOOR PANEL - A4M02068
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)



D05 DOOR PANEL - A4M02069
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)




A4M02070 CABINET HINGE
(x8)

QTY	PART NUMBER	DESCRIPTION
16	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

INSTALL CABINET HINGES TO ALL DOORS.

DO NOT OVERTIGHTEN HARDWARE

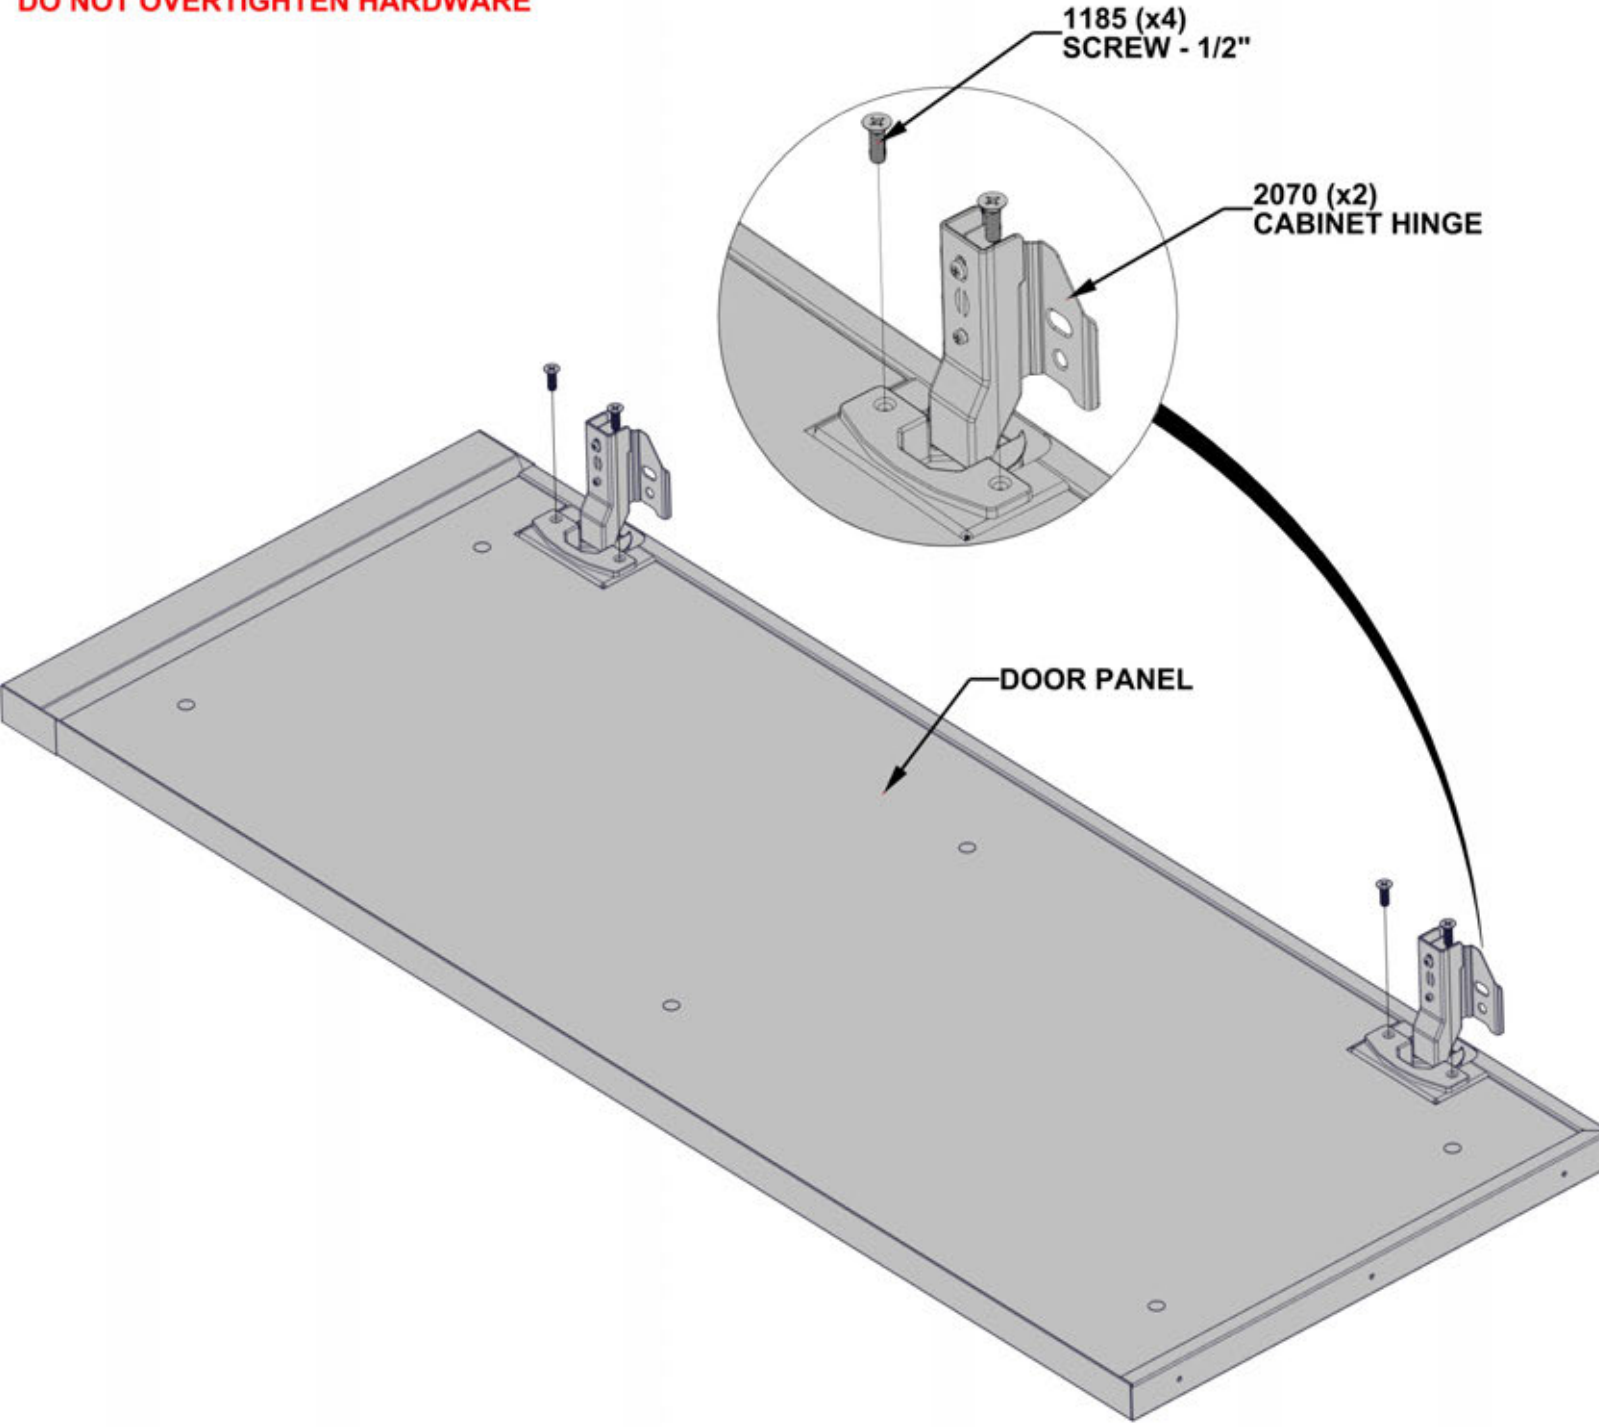

STEP 75 - CABINET DOOR ATTACHMENT



QTY	PART NUMBER	DESCRIPTION
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW


D02 DOOR PANEL - A4M02066
(x1) 7/8"x12 3/4"x33 5/8" (22x324x854)

FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.

WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH ZERTS IN SIDE OF CABINET PANEL.

DO NOT OVERTIGHTEN HARDWARE.

TIP: REFER TO STEP 79: ADJUSTING DOOR HINGES AS NEEDED

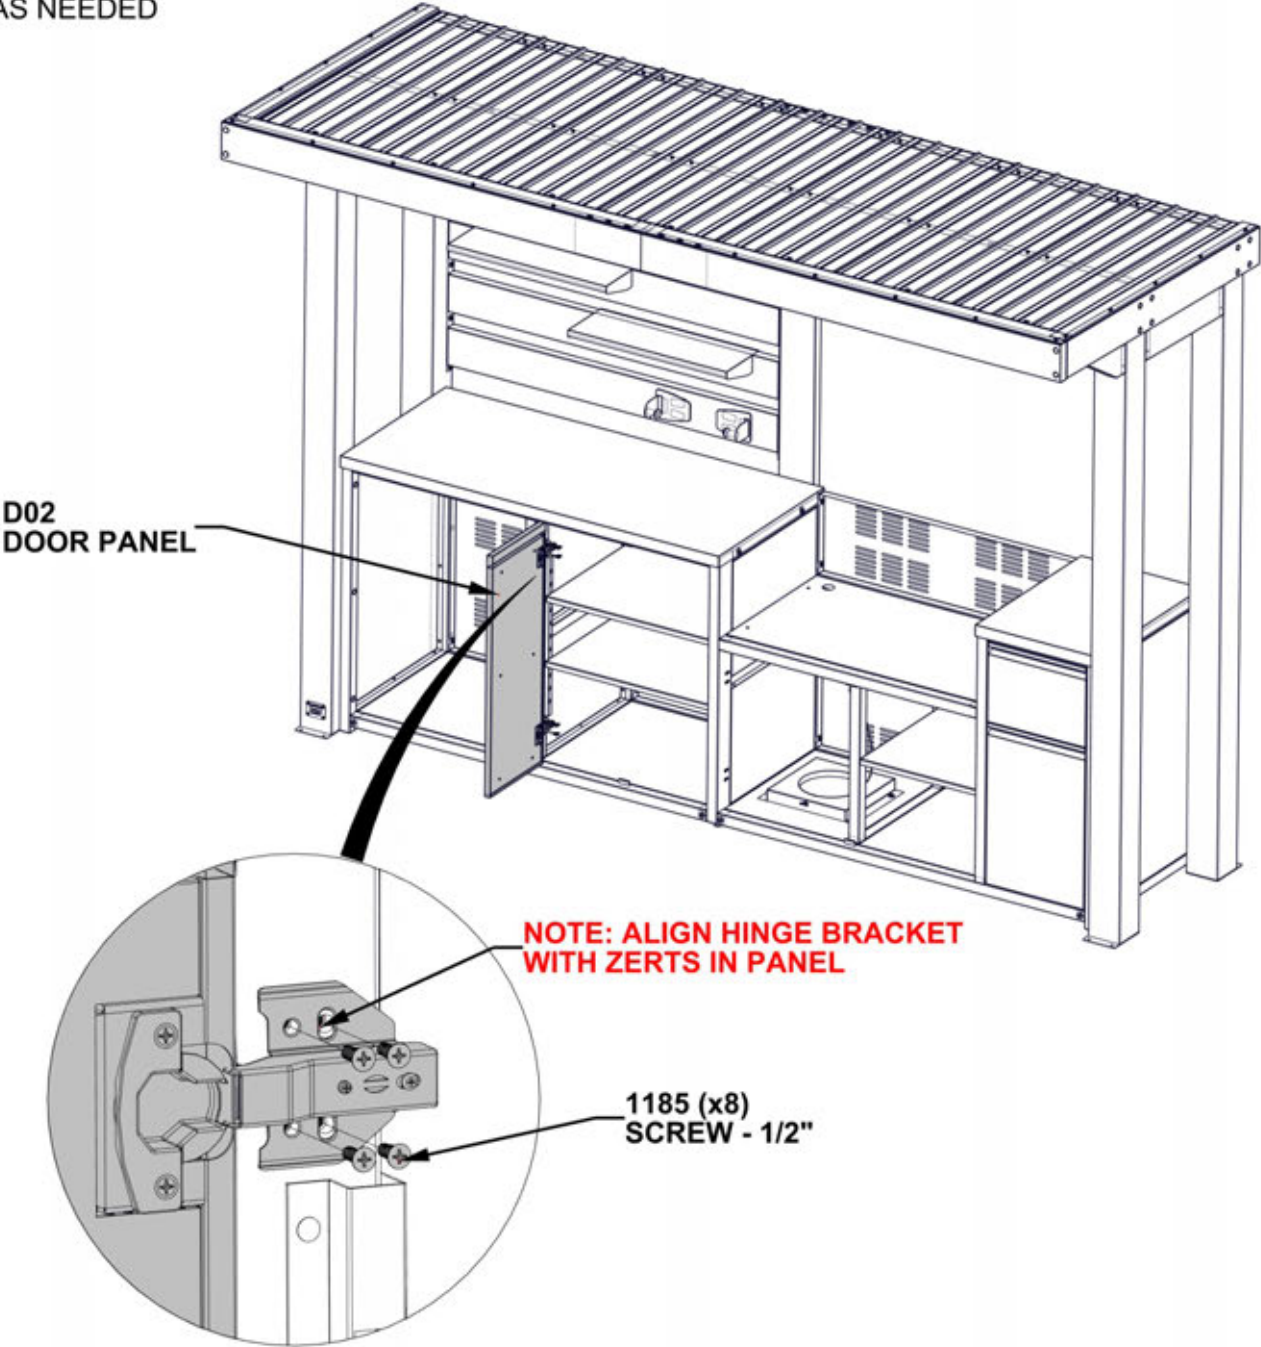

STEP 76 - CABINET DOOR ATTACHMENT



QTY	PART NUMBER	DESCRIPTION
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW


D01 DOOR PANEL - A4M02064
(x1) 22x12 3/4"x33 5/8" (22x324x854)

FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.

WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH ZERTS IN SIDE OF CABINET PANEL.

DO NOT OVERTIGHTEN HARDWARE.


TIP: REFER TO STEP 79: ADJUSTING DOOR HINGES AS NEEDED

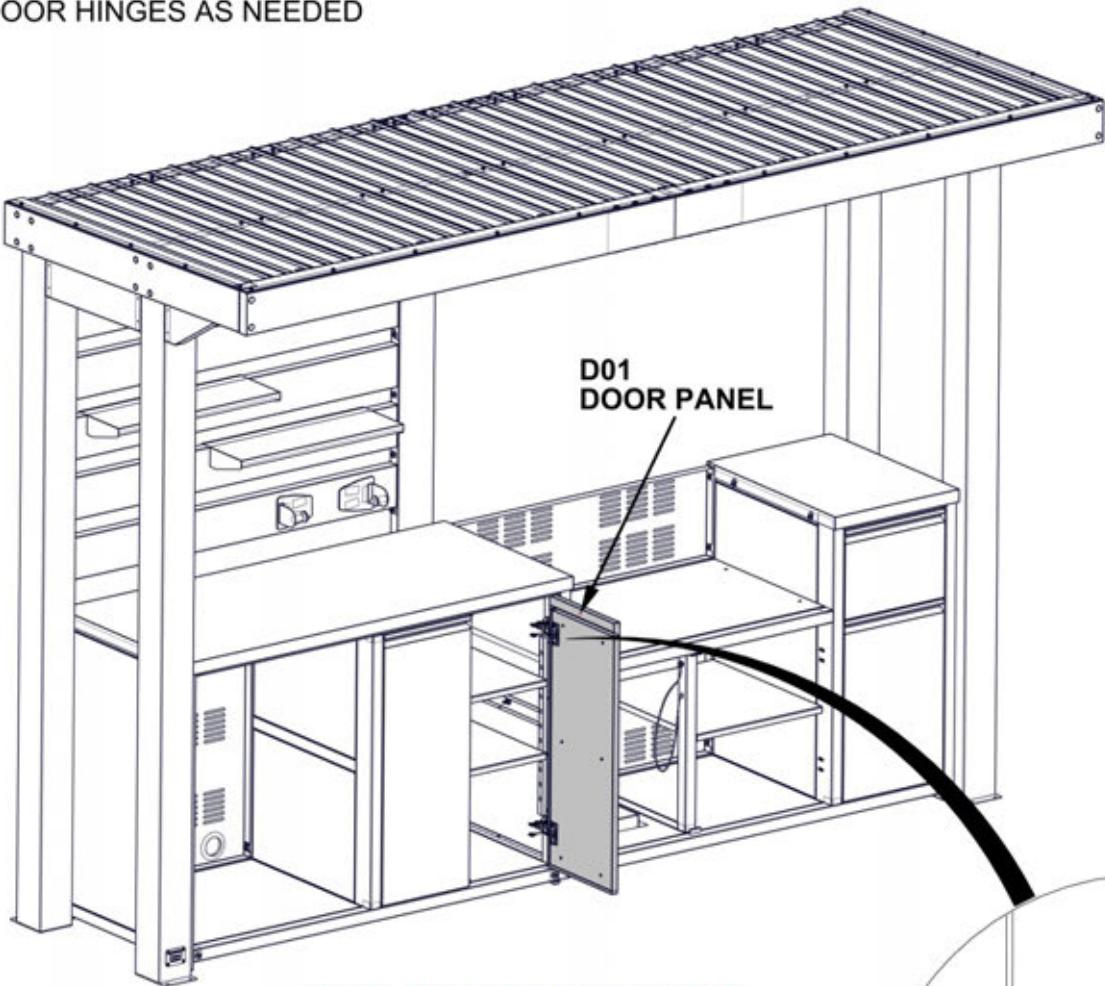

D01
DOOR PANEL

NOTE: ALIGN HINGE BRACKET WITH ZERTS IN TUBE

1185 (x8)
SCREW - 1/2"

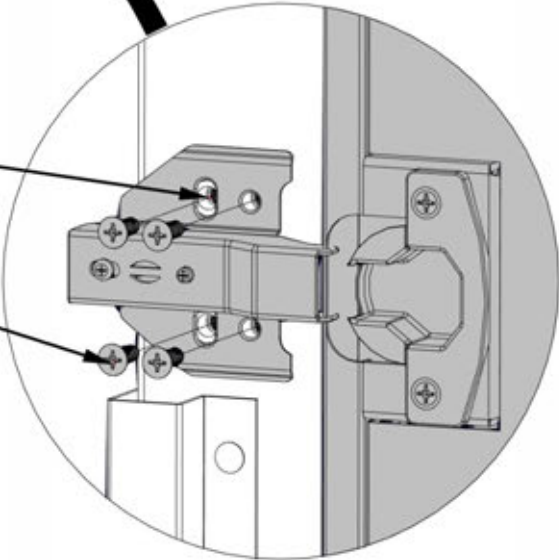

STEP 77 - CABINET DOOR ATTACHMENT




QTY	PART NUMBER	DESCRIPTION
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW

D05 DOOR PANEL - A4M02069
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)


FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.

TIP: REFER TO STEP 79: ADJUSTING DOOR HINGES AS NEEDED

WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH ZERTS IN SIDE OF CABINET PANEL.
DO NOT OVERTIGHTEN HARDWARE.

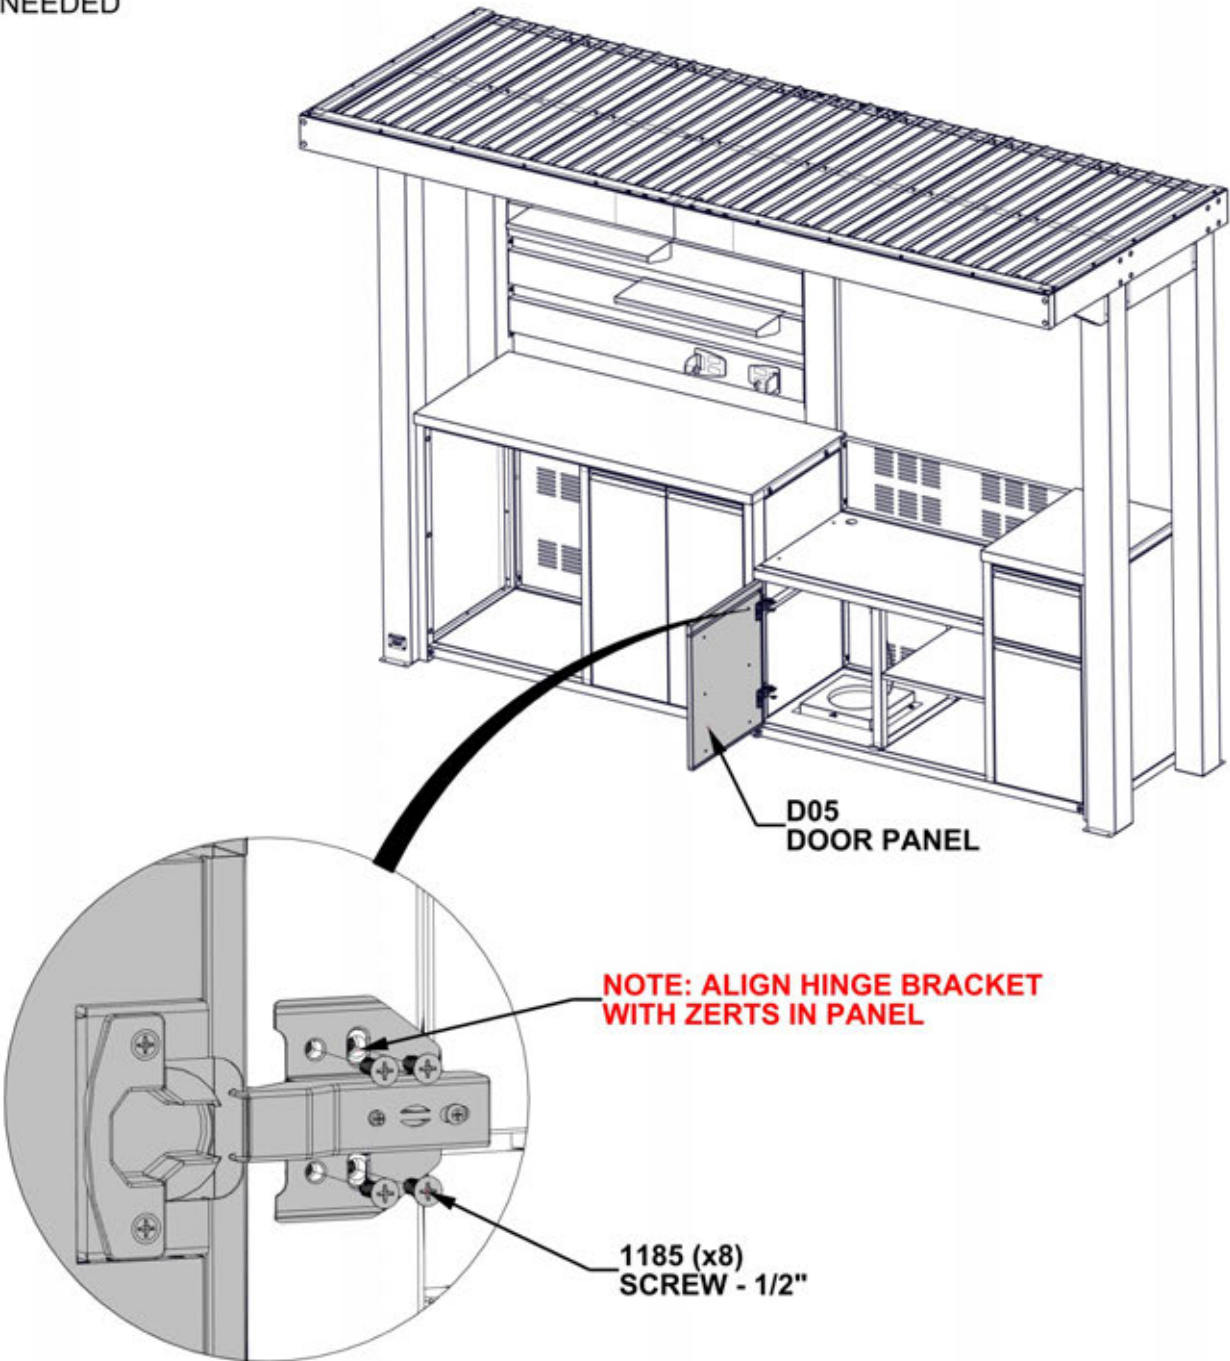

STEP 78 - CABINET DOOR ATTACHMENT

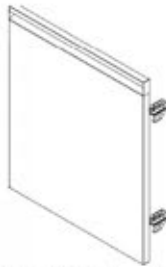

QTY	PART NUMBER	DESCRIPTION
8	H101185	PHILLIPS FLAT HEAD 8-32x.5 SCREW


D04 DOOR PANEL - A4M02068
(x1) 7/8"x19 1/16"x22 7/16" (22x484.5x570)

FOR THIS STEP IT IS HELPFUL TO HAVE AN ADDITIONAL PERSON HELP HOLD DOOR IN PLACE.

WITH CABINET HINGES ATTACHED TO DOOR, ALIGN HOLES IN HINGE BRACKET WITH ZERTS IN SIDE OF CABINET PANEL.

DO NOT OVERTIGHTEN HARDWARE.


TIP: REFER TO STEP 79: ADJUSTING DOOR HINGES AS NEEDED

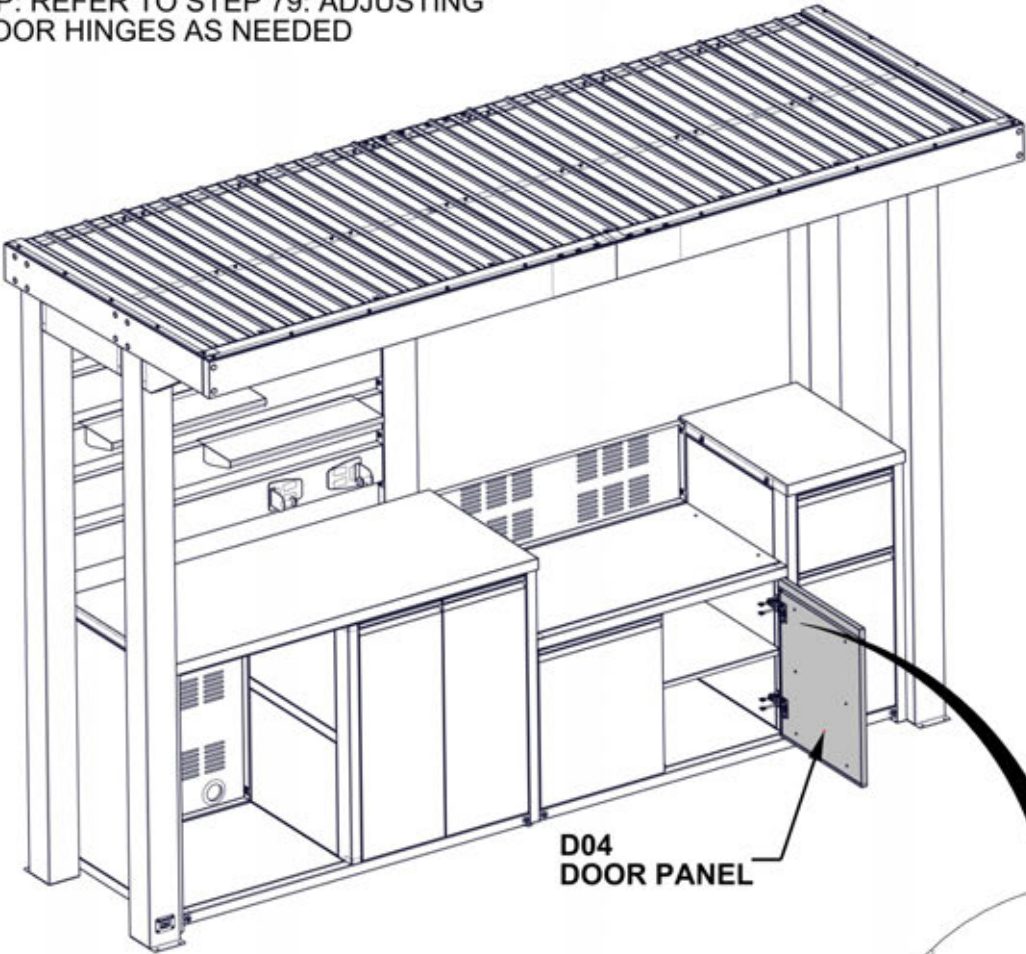

D04
DOOR PANEL

NOTE: ALIGN HINGE BRACKET WITH ZERTS IN PANEL



1185 (x8)
SCREW - 1/2"

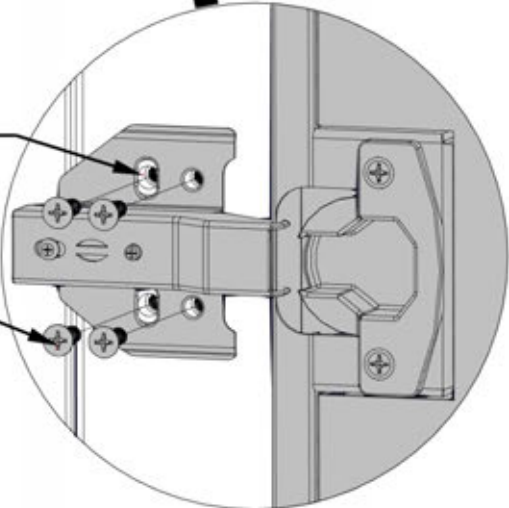


STEP 79 - KITCHEN DOOR ADJUSTMENT (AS NEEDED)

SCREW #1:
SCREW CLOCKWISE TO BRING EDGE OF DOOR AWAY FROM CABINET. SCREW COUNTER CLOCKWISE TO BRING EDGE OF DOOR CLOSER TO CABINET


SCREW #2:
LOOSEN THESE SCREWS TO SLIDE DOOR IN OR OUT OF CABINET, UNTIL FACE OF DOOR IS FLUSH WITH CABINET WHEN CLOSED.

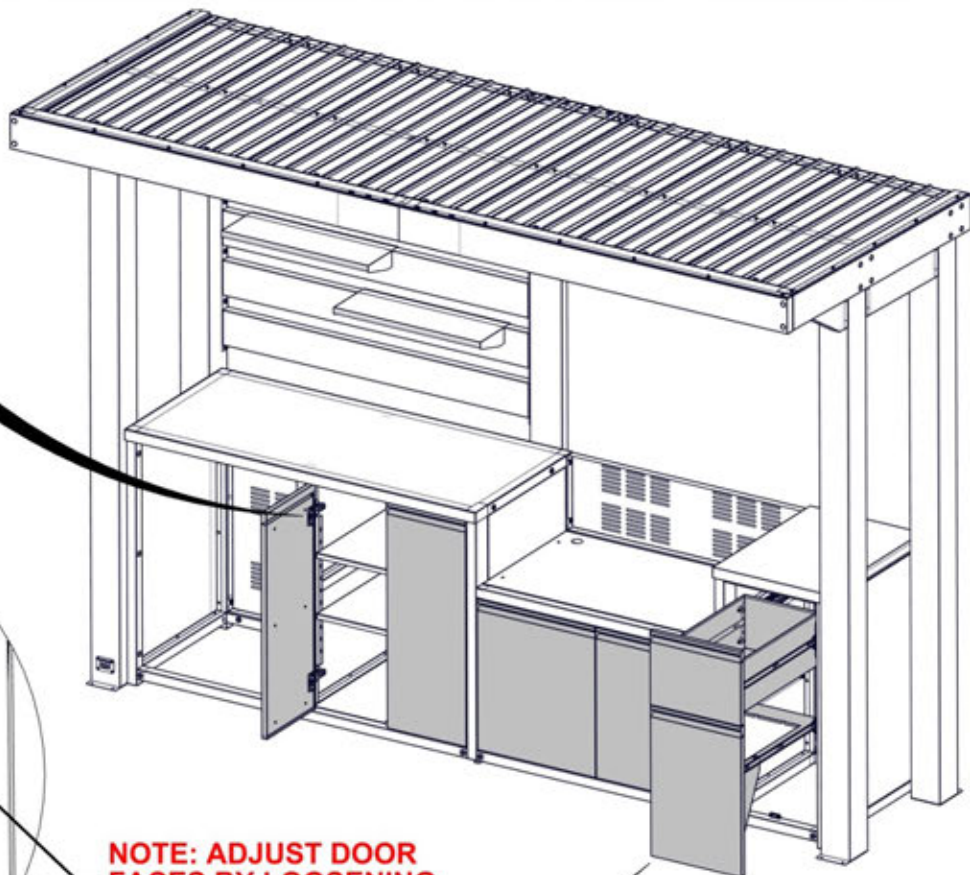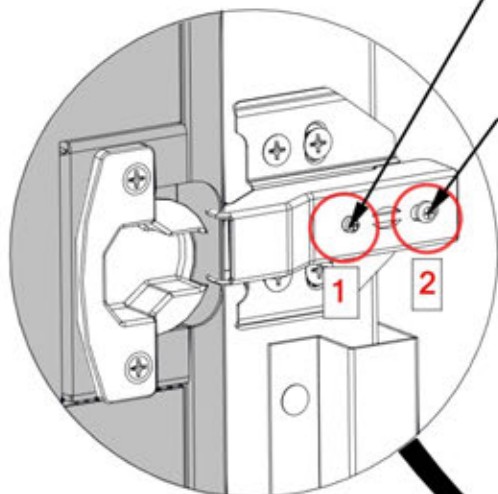

**NOTE: ADJUST DOOR
FACES BY LOOSENING
SCREWS AS NEEDED**

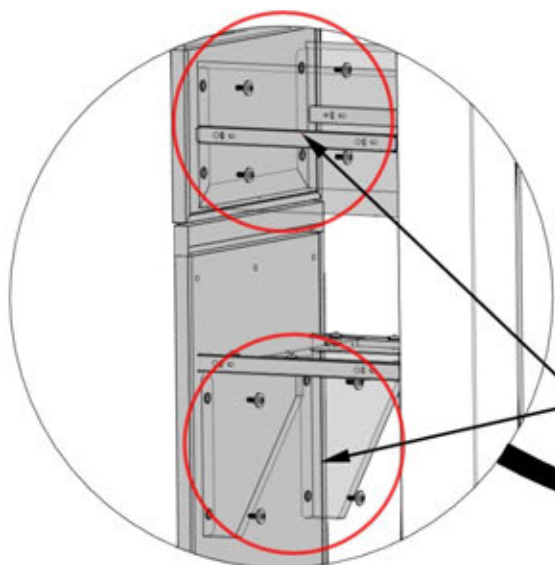

**ADJUST HINGES SO THAT THE GAP AROUND ALL
DOORS AND DRAWER FACE IS THE SAME, AND THERE IS
NO INTERFERENCE BETWEEN DOORS AND CABINETS**

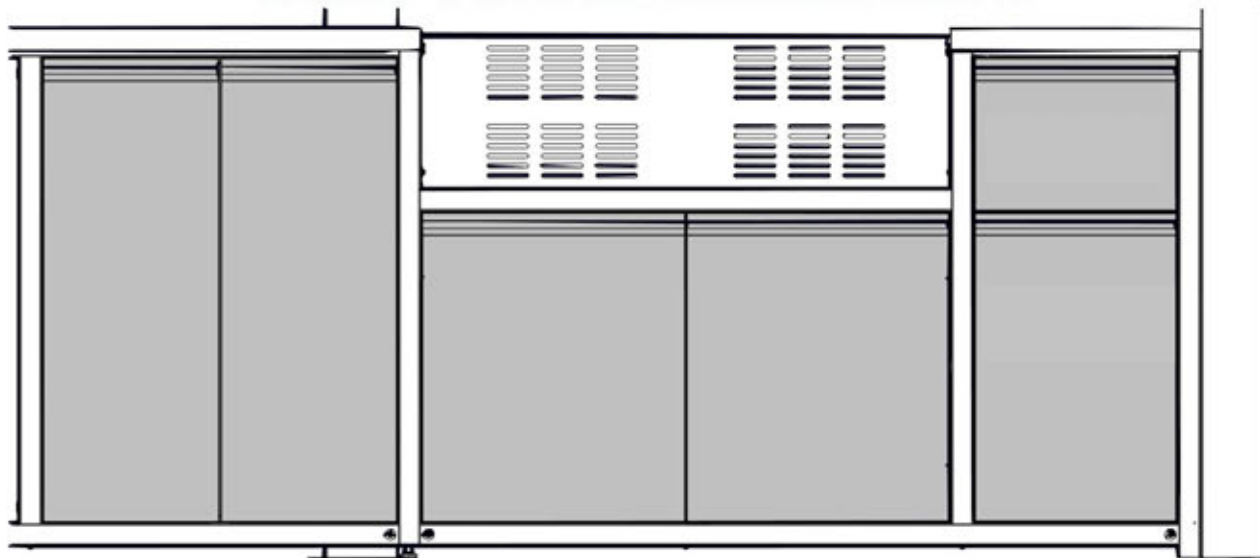


STEP 80 - KITCHEN ANCHORING

QTY	PART NUMBER	DESCRIPTION
11	H100630	WASHER FLAT 8x19 BLK
11	H100120	CONCRETE ANCHOR

MANUFACTURER RECOMMENDS INSTALLATION ON CONCRETE SURFACE OR CONCRETE POST PADS AS SHOWN BELOW.

FOR INSTALLATION ON WOOD DECK, YOU MUST ENSURE THERE IS AMPLE STRUCTURAL SUPPORT UNDER THE DECK. HARDWARE NOT INCLUDED FOR DECK ATTACHMENT.

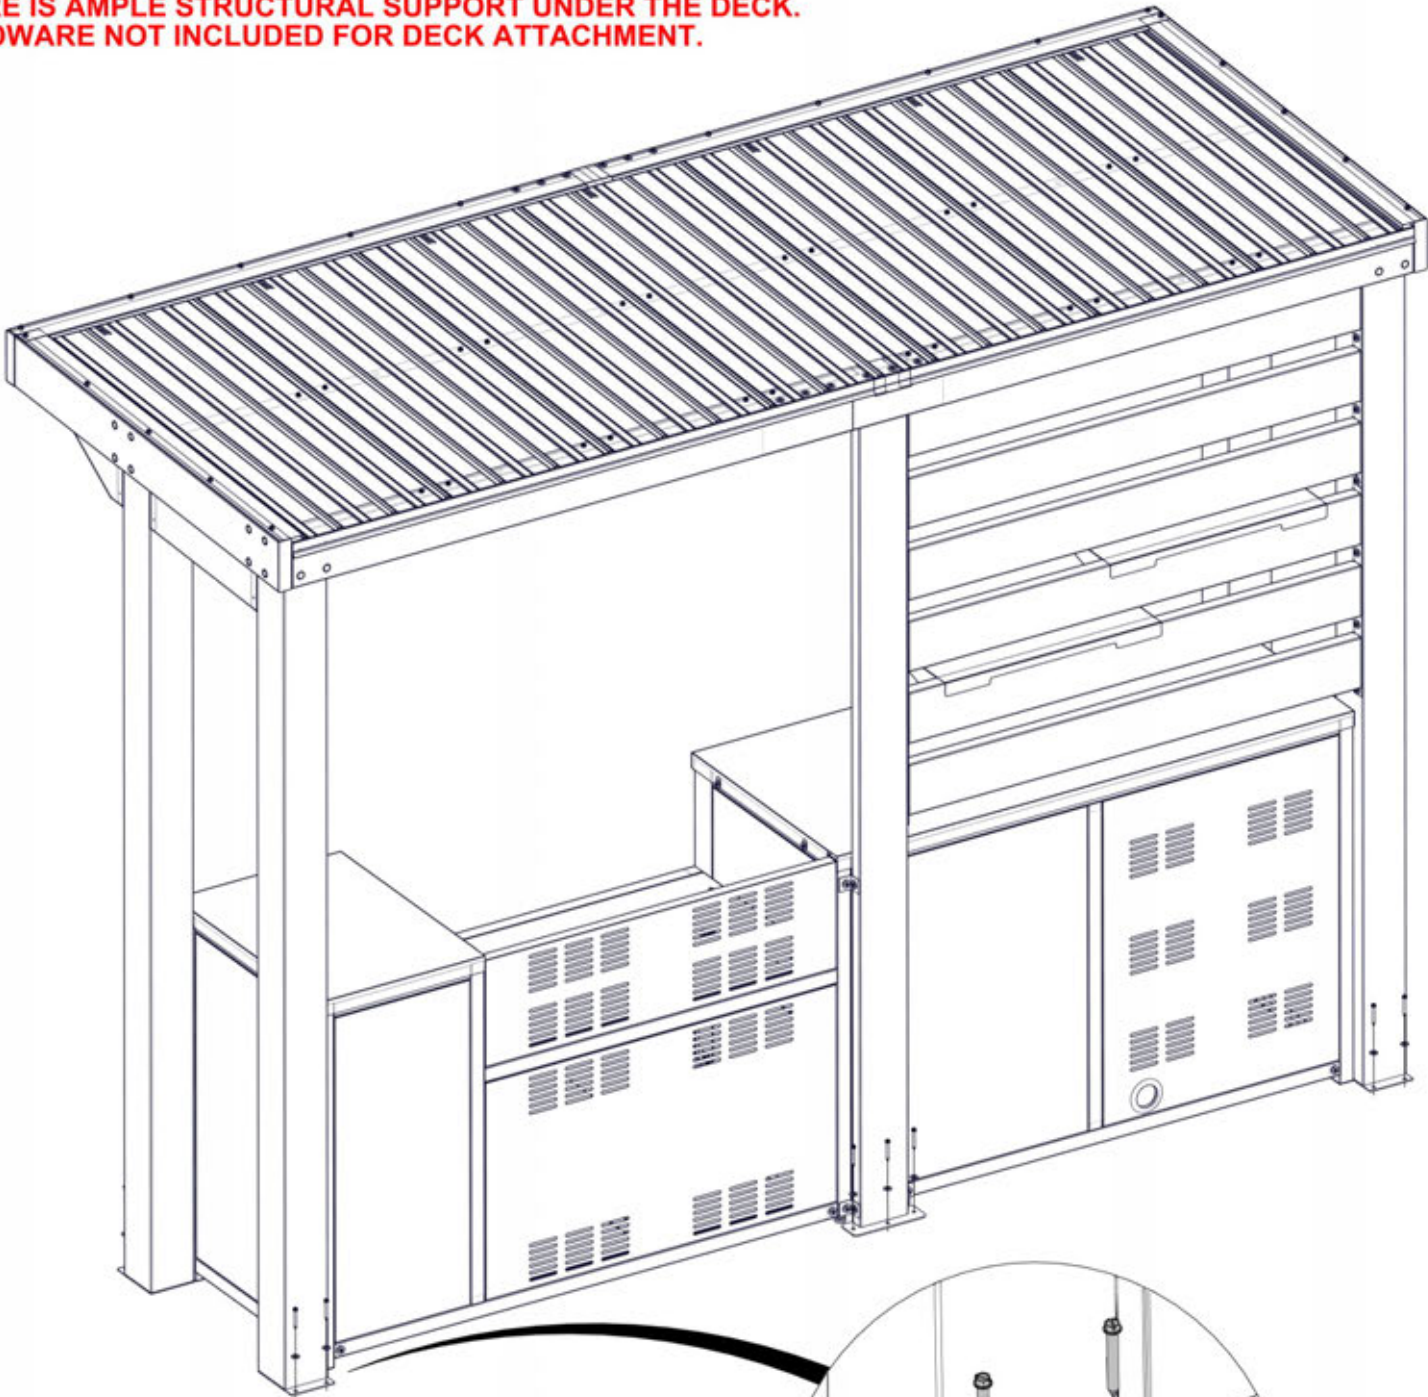


120 (x11)
CONCRETE SCREW-2"

630 (x11)
WASHER - 8x19

PRE-DRILL HOLES FOR
CONCRETE ANCHORS USING
A 3/16" CONCRETE DRILL BIT.

Outdoor Kitchen Grill Kit

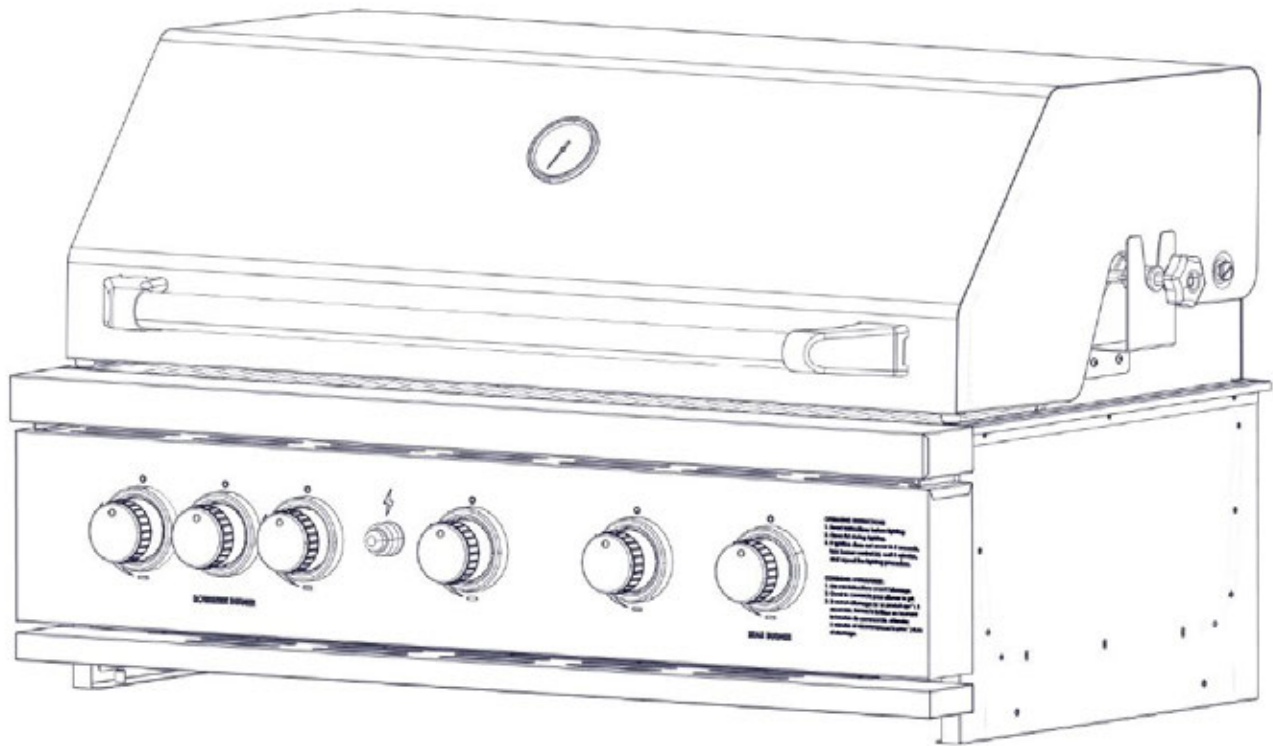


9230118 | **OUTDOOR KITCHEN GRILL KIT**
(x1)

FOR INSTALLATION OF OUTDOOR KITCHEN GRILL KIT, REFER TO PAGES BELOW IN THIS INSTRUCTION MANUAL.

FOR DETAILED INFORMATION REGARDING OUTDOOR KITCHEN GRILL KIT, REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE OUTDOOR KITCHEN GRILL KIT. FOLLOW DIRECTIONS FOR PROPER CARE AND USE.

STEP 1 - DROP IN GRILL INSTALLATION

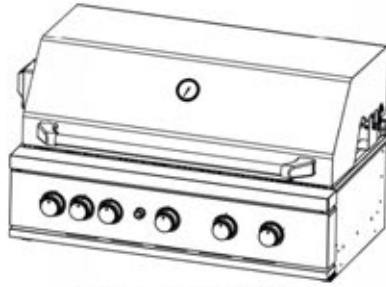


GRILL ASSEMBLY

**NOTE: THREE PEOPLE ARE HELPFUL FOR THIS STEP.
MAKE SURE THAT CORRUGATED GAS TUBE ON BOTTOM SIDE OF GRILL DOES NOT
BECOME PINCHED OR DAMAGED.**

**CAREFULLY LIFT ASSEMBLED GRILL ABOVE GRILL OPENING OF KITCHEN.
SLOWLY LOWER IN PLACE, WHILE ROUTING FLEX TUBE THRU GROMMET IN TABLE TOP.**

**NOTE: WHEN LOWERING
GRILL IN PLACE, KEEP
FINGERS CLEAR**

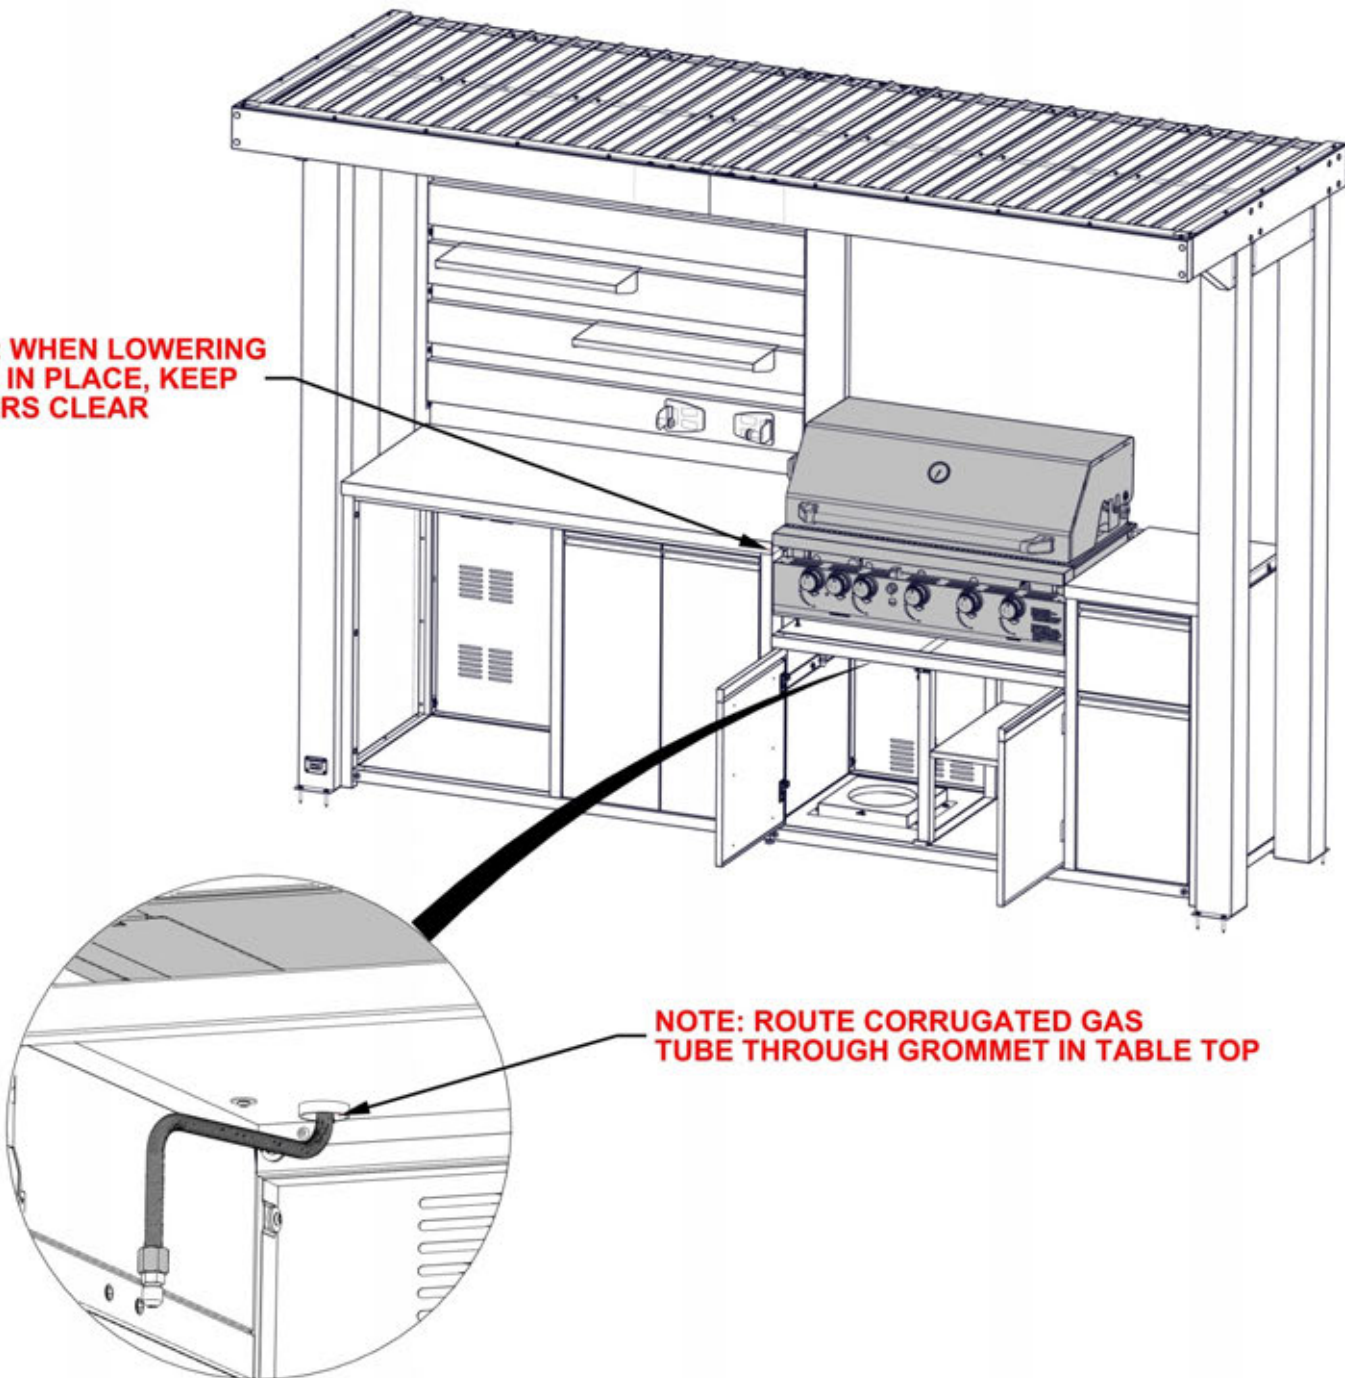


**NOTE: ROUTE CORRUGATED GAS
TUBE THROUGH GROMMET IN TABLE TOP**

STEP 2 - DROP IN GRILL INSTALLATION

QTY	PART NUMBER	Description
4	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

WITH GRILL CENTERED IN CABINET OPENING, ALIGN
FOUR MOUNTING POINTS IN GRILL WITH HOLES IN TABLE TOP

NOTE: USE HARDWARE SUPPLIED
WITH KITCHEN STRUCTURE

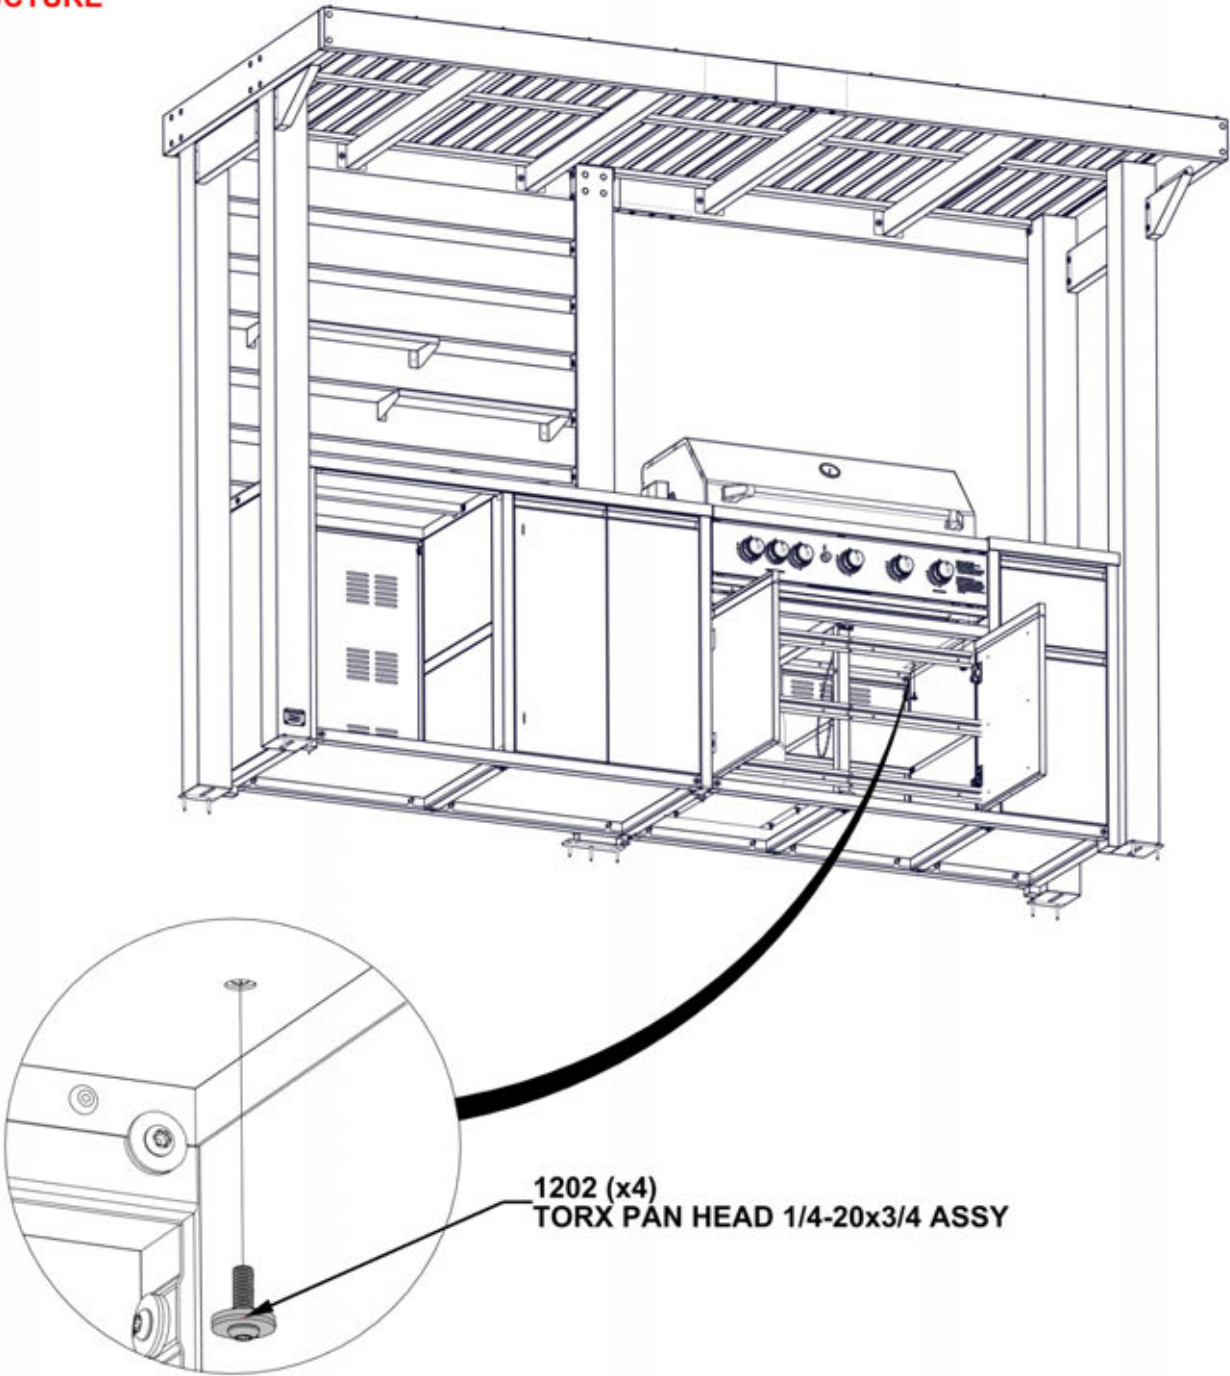


STEP 3 - DROP IN GRILL INSTALLATION




A4M02258 HOSE CLAMP
(x1)

QTY	PART NUMBER	Description
2	H101202	TORX PAN HEAD 1/4-20x3/4 ASSY

USING PROVIDED HOSE CLAMP AND HARDWARE FROM KITCHEN STRUCTURE, ATTACH HOSE CLAMP TO INSIDE OF CABINET.

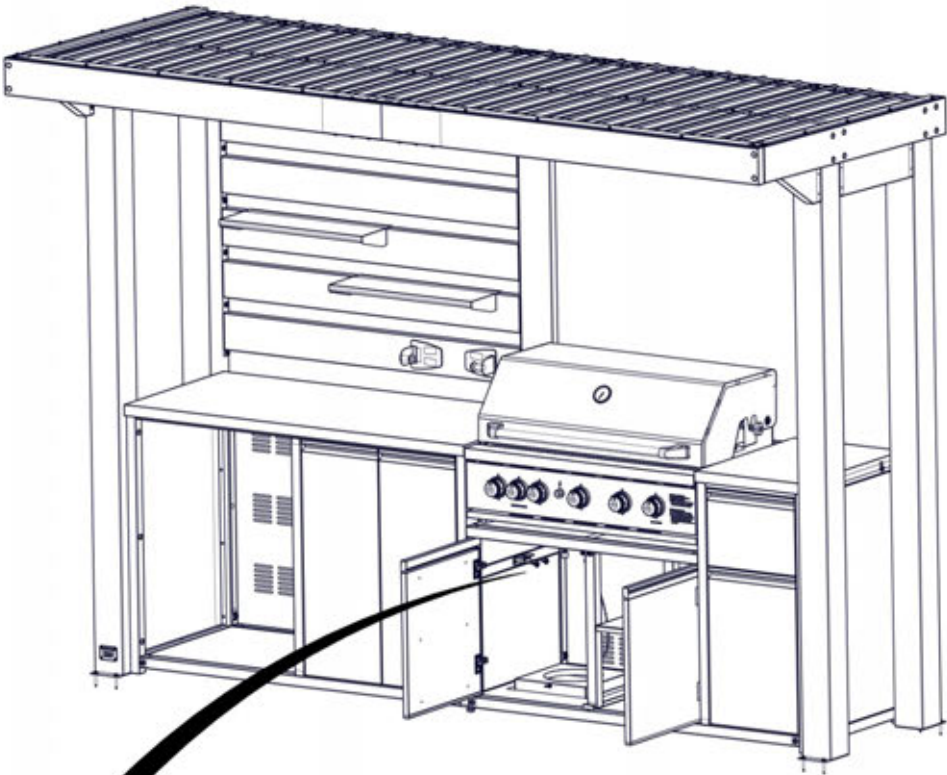

A05 (x1)
HOSE CLAMP


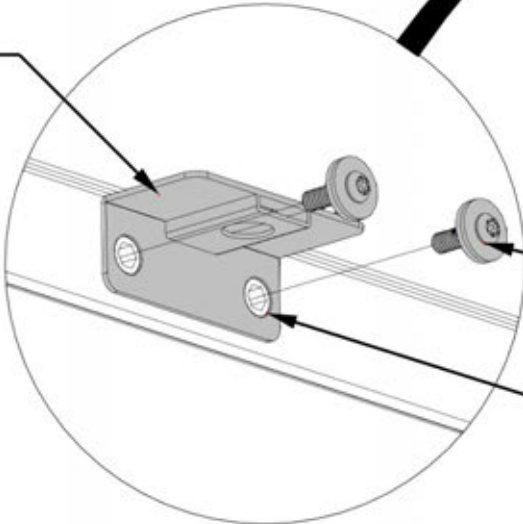


1202 (x2)
TORX PAN HEAD 1/4-20x3/4 ASSY

NOTE: HOSE CLAMP WILL
FIT AROUND NUT ZERTS

STEP 4 - DROP IN GRILL INSTALLATION

INSERT BRASS CONNECTOR ATTACHED TO FLEX TUBE INTO HOSE CLAMP. MAKE SURE HEX CONNECTOR SITS FLUSH AGAINST BRACKET AND FIRMLY IN PLACE.

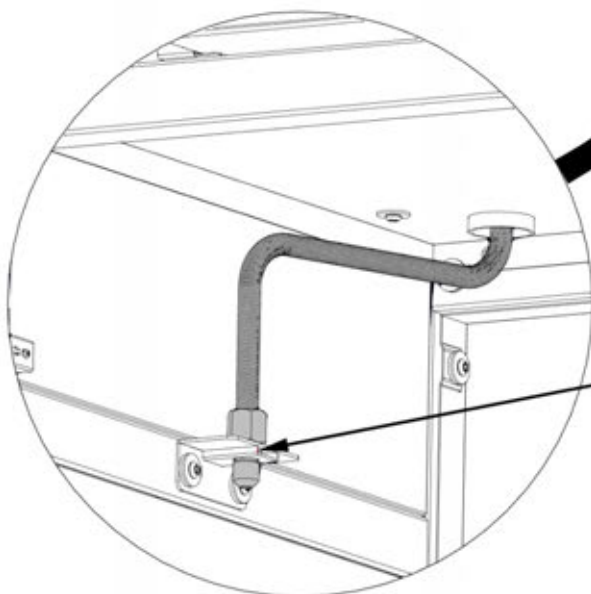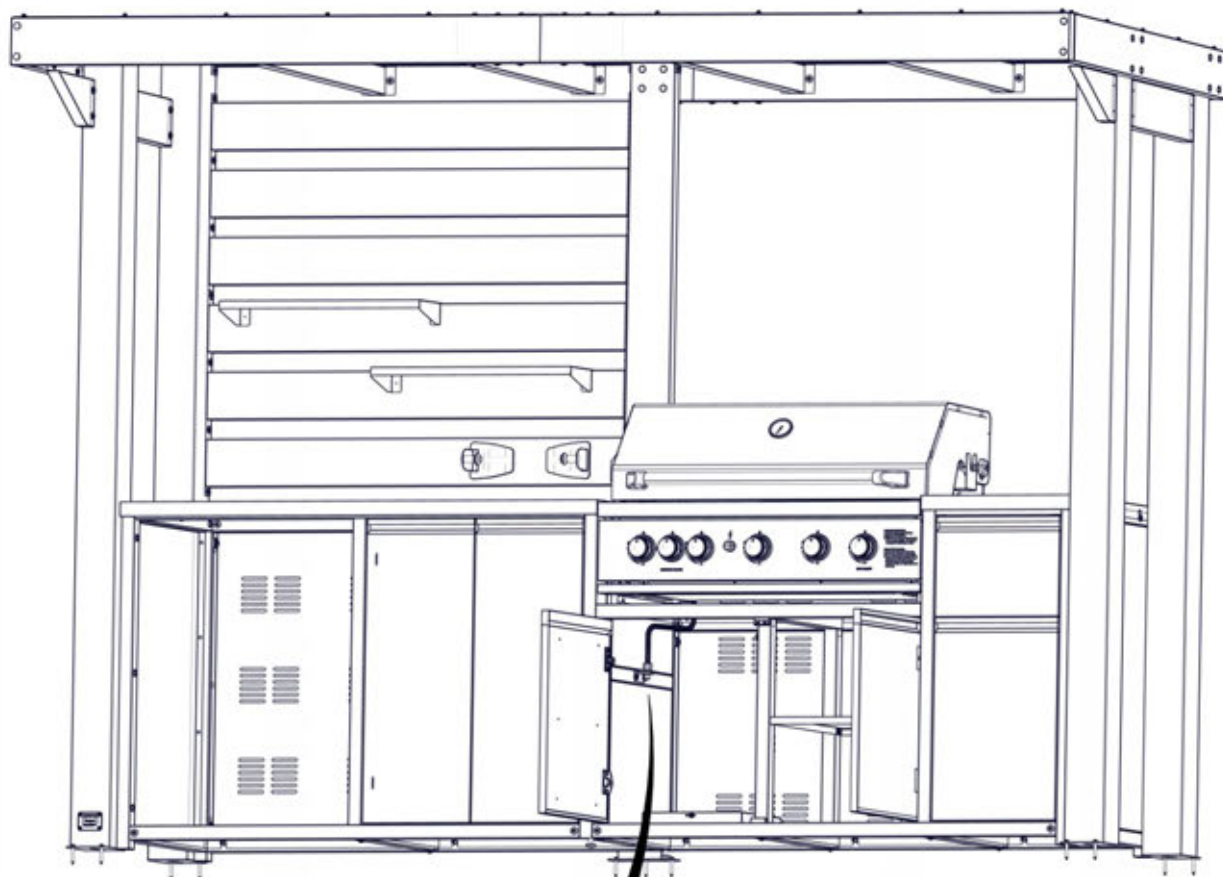

MAKE SURE HEX CONNECTOR IS FLUSH AGAINST BRACKET AND FIRMLY IN PLACE.



STEP 5 - DROP IN GRILL INSTALLATION



SUPPLIED GAS
REGULATOR HOSE


THE GAS PRESSURE REGULATOR SUPPLIED WITH THIS GRILL MUST BE USED. REPLACEMENT REGULATORS CAN BE OBTAINED BY CONTACTING CUSTOMER SERVICE.

**DO NOT ATTEMPT TO ADJUST OR REPAIR A REGULATOR
(OPERATING PRESSURE: 11" (27.9 cm) WCP)**

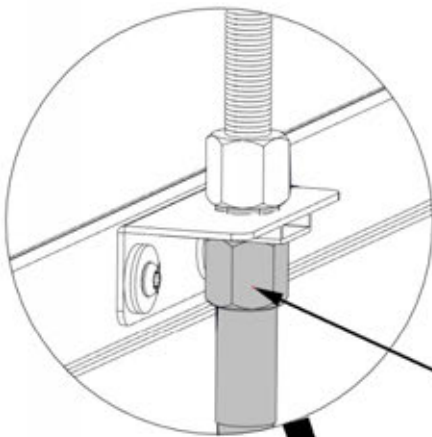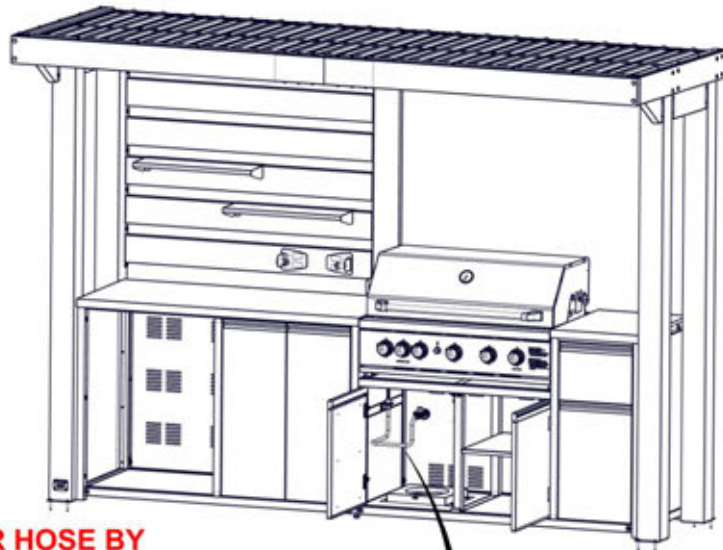

**CONNECT REGULATOR HOSE BY
THREADING NUT CLOCKWISE.
TIGHTEN WITH WRENCH.**

SUPPLIED GAS
REGULATOR HOSE

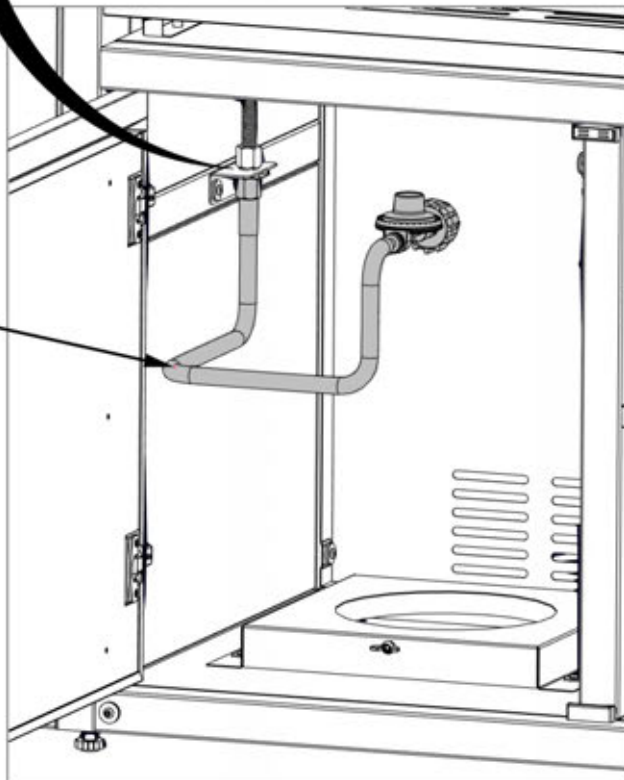

STEP 6A - LIQUID PROPANE CONNECTION


LIQUID PROPANE (L.P.) GAS CONNECTING SYSTEM:

This grill is equipped for use with a 20lb LP gas fuel tank (fuel tank not supplied, must be purchased separately).

Any brand of 20lb LP gas fuel tank is acceptable for use with the grill provided they are compatible with the grill tank holder.


The grill is also design-certified by CSA International for local LP gas supply. The 20lb LP gas fuel tank must be mounted and secured.

1. Open Cabinet Doors
2. Loosen the tank holder wing nut/bolt
3. Place 20lb LP gas fuel tank into the tank holder under the grill.
4. Clockwise tighten the wing nut/bolt against the bottom collar of the 20lb LP gas fuel tank to secure.
5. Do not lean over the tank. Always keep the cylinder in an upright position to provide vapor withdrawal.

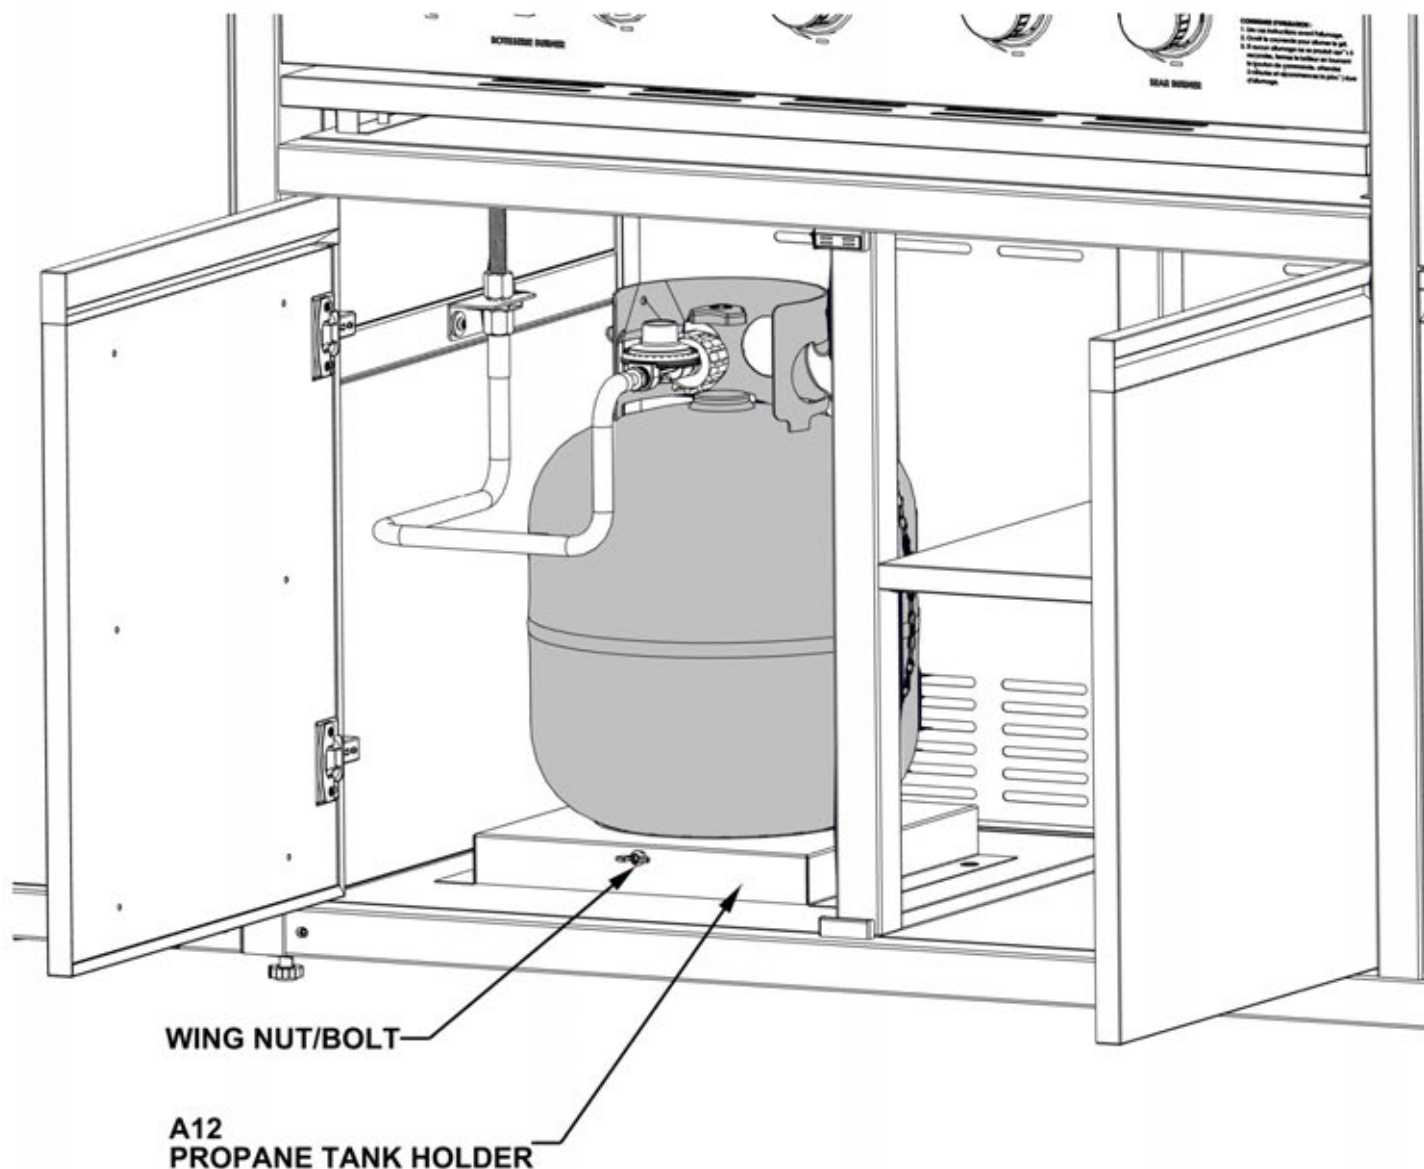


STEP 6B - LIQUID PROPANE CONNECTION

1. Check that the 20lb LP gas fuel tank is in the "OFF" position. If not, turn the valve clockwise until it stops.
2. Check that the 20lb LP gas fuel tank valve has the proper type-1 external male thread connections per ANSI Z21.81.
3. Check that the burner control knobs are in the "OFF" position.
4. Remove any debris and inspect the valve connections, ports, and gas pressure regulator/hose assembly for damage.
5. Using your hand, turn the gas pressure regulator/hose assembly clockwise to connect to the 20lb LP gas fuel tank as shown. Hand tighten only. Use of a wrench could damage the quick coupling nut.
6. Open the tank valve fully by turning the valve counterclockwise. Wait a few minutes for gas to move through the gas line.

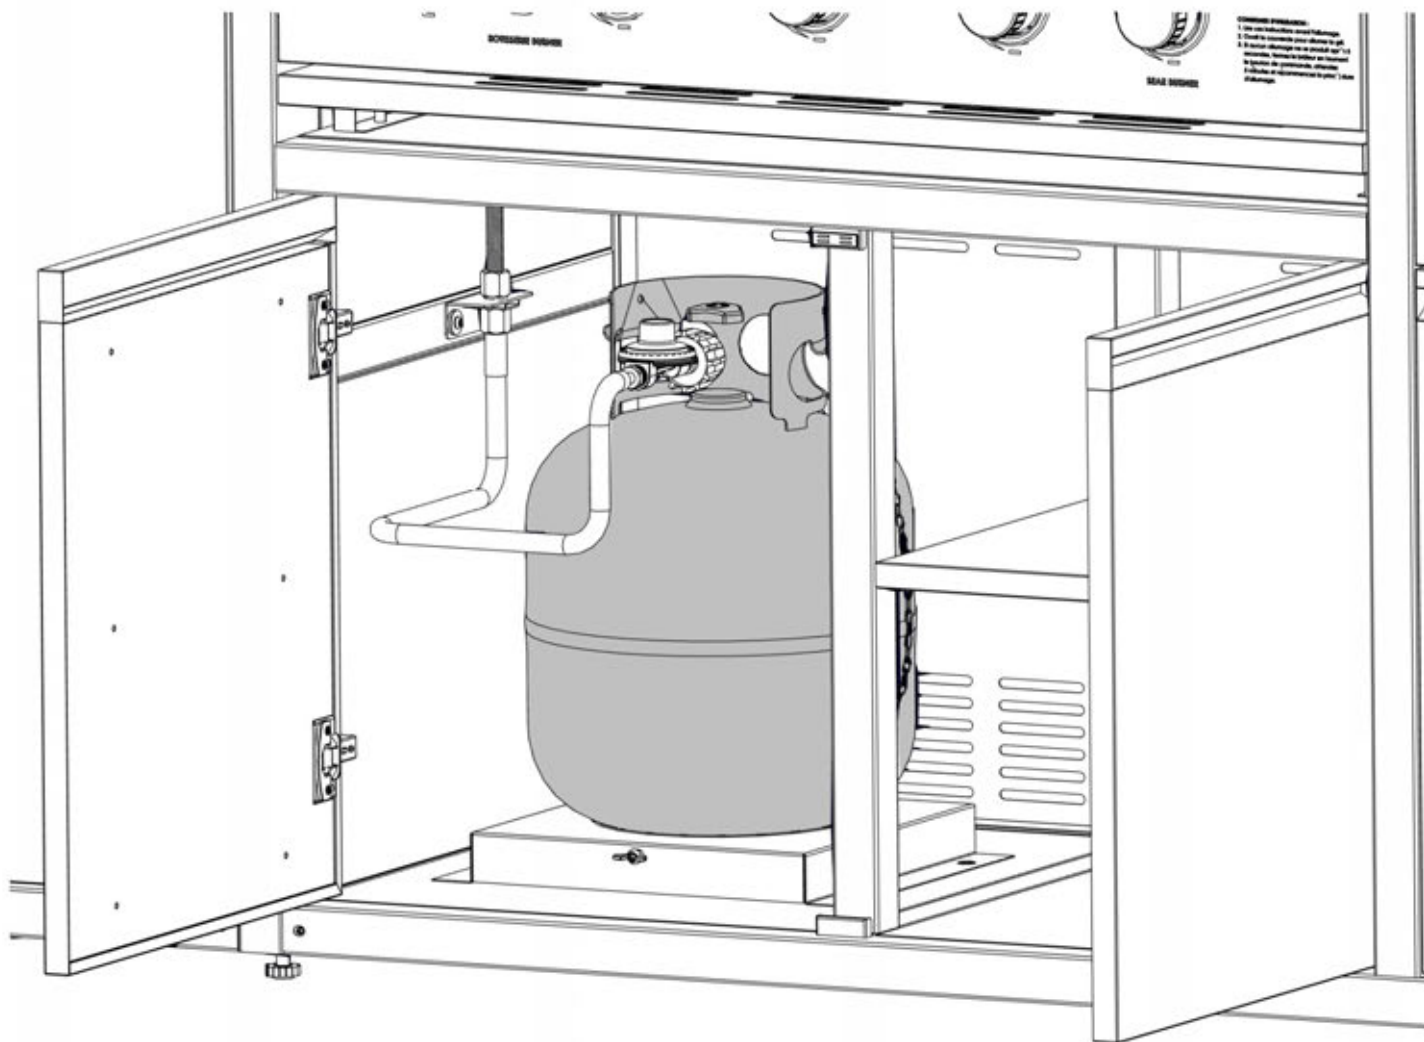

Outdoor Kitchen Fridge

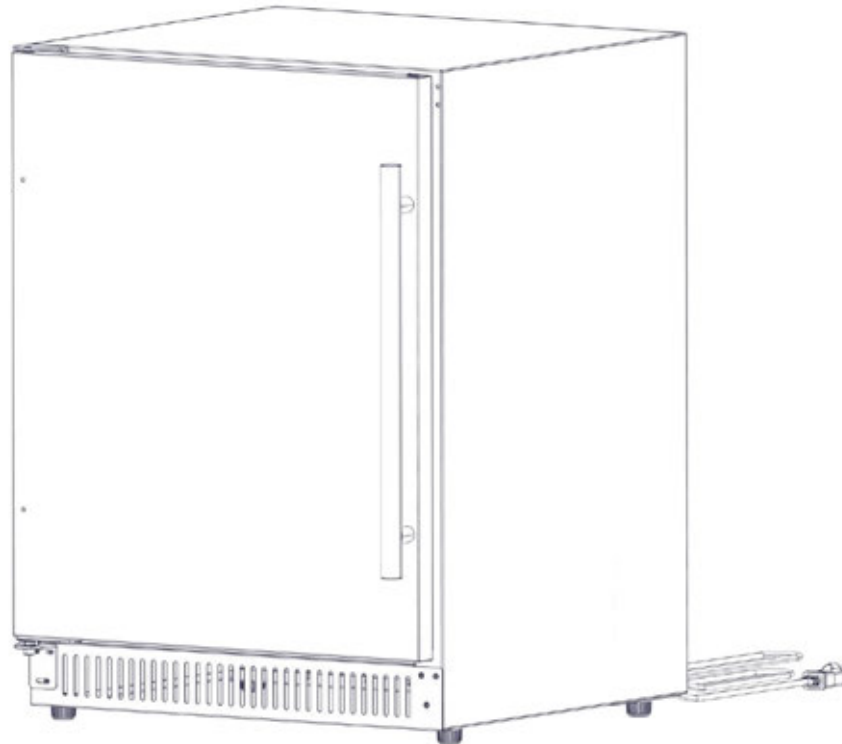

9230132 | **OUTDOOR KITCHEN FRIDGE**
(x1)

FOR INSTALLATION OF OUTDOOR KITCHEN FRIDGE,
REFER TO PAGES BELOW IN THIS INSTRUCTION
MANUAL.




FOR DETAILED INFORMATION REGARDING OUTDOOR
KITCHEN FRIDGE, REFER TO ASSEMBLY
INSTRUCTIONS THAT COMES PACKAGED WITH THE
OUTDOOR KITCHEN FRIDGE KIT. FOLLOW DIRECTIONS
FOR PROPER CARE AND USE.

FRIDGE INSTALLATION INSTRUCTION

OUTDOOR KITCHEN FRIDGE WILL BE INSTALLED IN THE CABINET OPENING ON THE LEFT SIDE OF THE OUTDOOR KITCHEN ASSEMBLY.

CAREFULLY SLIDE FRIDGE INTO CABINET OPENING MAKING SURE THAT THE ELECTRICAL CORD IS ROUTED THROUGH HOLE IN BACK PANEL.

NOTE: IF FRIDGE IS NOT IN UPRIGHT POSTION, PLEASE LET SIT FOR 24 HRS BEFORE PLUGGING INTO RECEPTACLE. FRIDGE CANNOT BE CONNECTED TO ELECTRICAL ENCLOSURE ATTACHED TO OUTDOOR STRUCTURE.

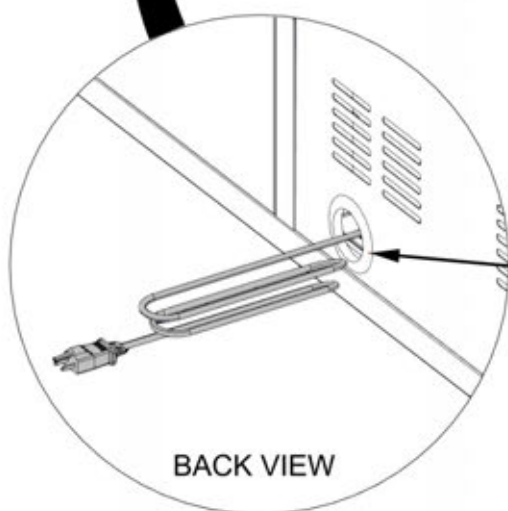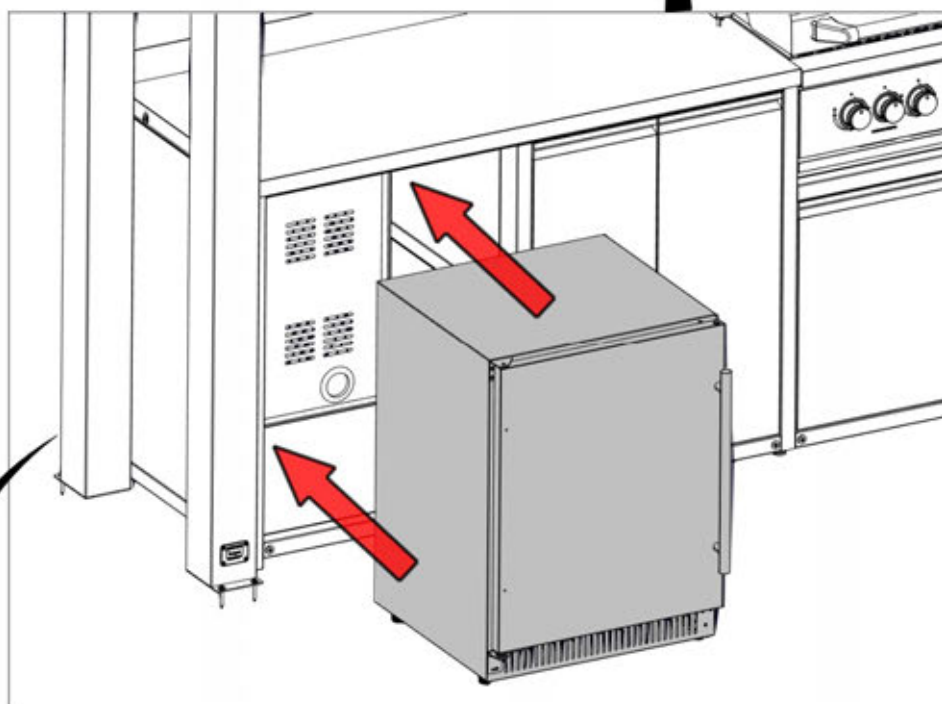
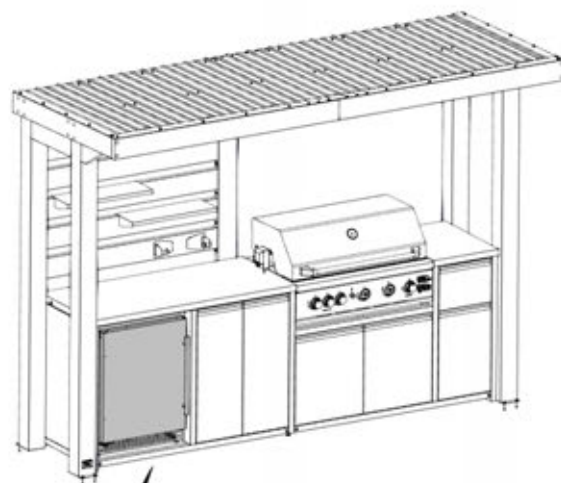


NOTE: ROUTE FRIDGE ELECTRICAL CORD THROUGH HOLE IN BACK PANEL

FRIDGE INSTALLATION INSTRUCTION

ALIGN FEET ON FRIDGE UNIT SO THAT IT IS LEVEL AND DOES NOT TILT.


THREAD FEET CLOCKWISE TO EXTEND THEM AND COUNTERCLOCKWISE TO SHORTEN. REPEAT THIS FOR ALL FOUR FRIDGE LEGS AS NEEDED TO LEVEL.

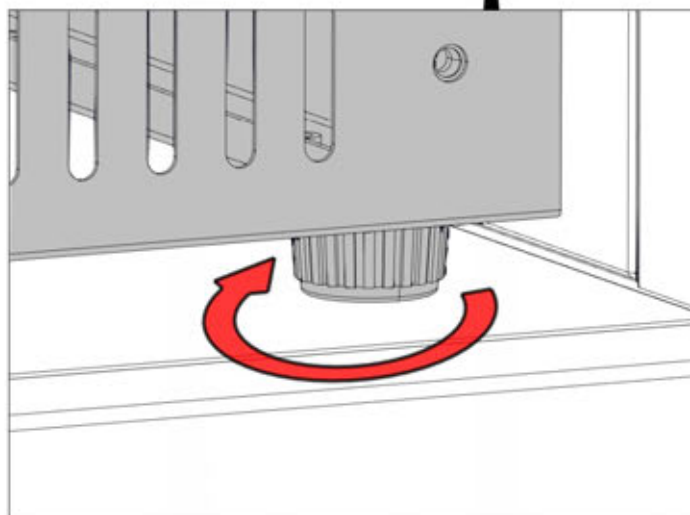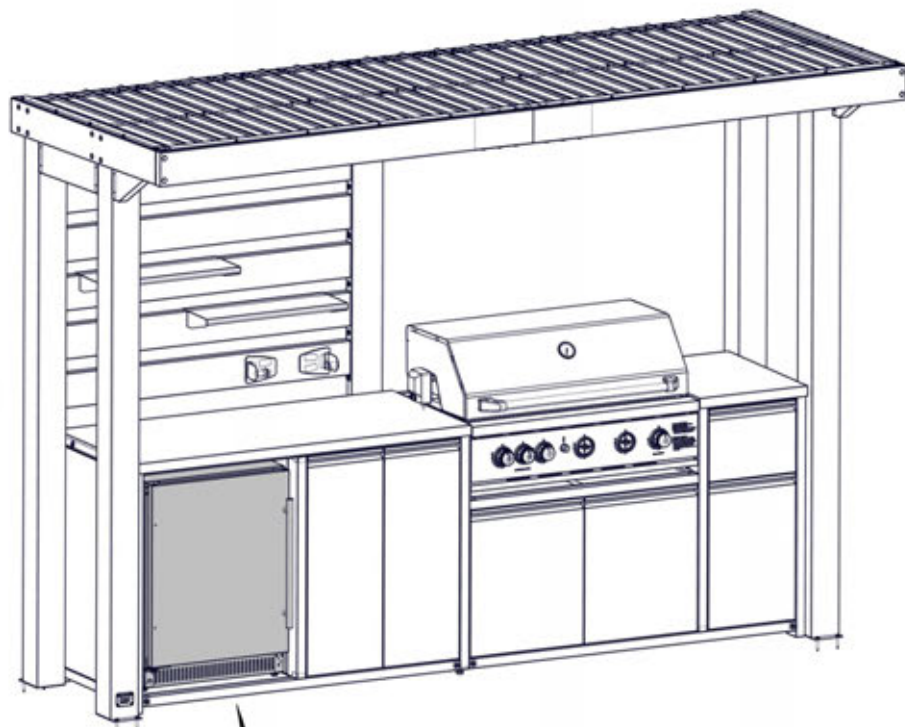

REMOVE ANY PROTECTIVE FILM REMAINING ON STAINLESS STEEL COUNTERTOPS

COUNTERTOP AND APPLIANCE CARE INSTRUCTIONS:

- WIPE DOWN COUNTERTOPS AND GRILL USING A DAMP MICROFIBER CLOTH TO REMOVE DUST AND SMUDGES. WIPE ALONG THE GRAIN OF THE STAINLESS STEEL TO PREVENT SCRATCHING.
- TO DEEP CLEAN USE A COMMERCIAL STAINLESS STEEL CLEANER AND MICROFIBER CLOTH WIPING ALONG THE GRAIN DIRECTION TO PREVENT SCRATCHES.
- SCRATCHES WILL HAPPEN TO COUNTERTOPS OVERTIME. DO NOT USE SANDPAPER OR STEEL WOOL AGAINST STAINLESS STEEL AS THIS WILL MAKE IT WORSE.
- IF YOU DENT OR DING THE SURFACE OF THE COUNTERTOP, APPLY PRESSURIZED AIR OR ICE TO THE SURFACE UNTIL COLD AND THEN HEAT USING A HAIR DRYER TO POP DENT OUT.

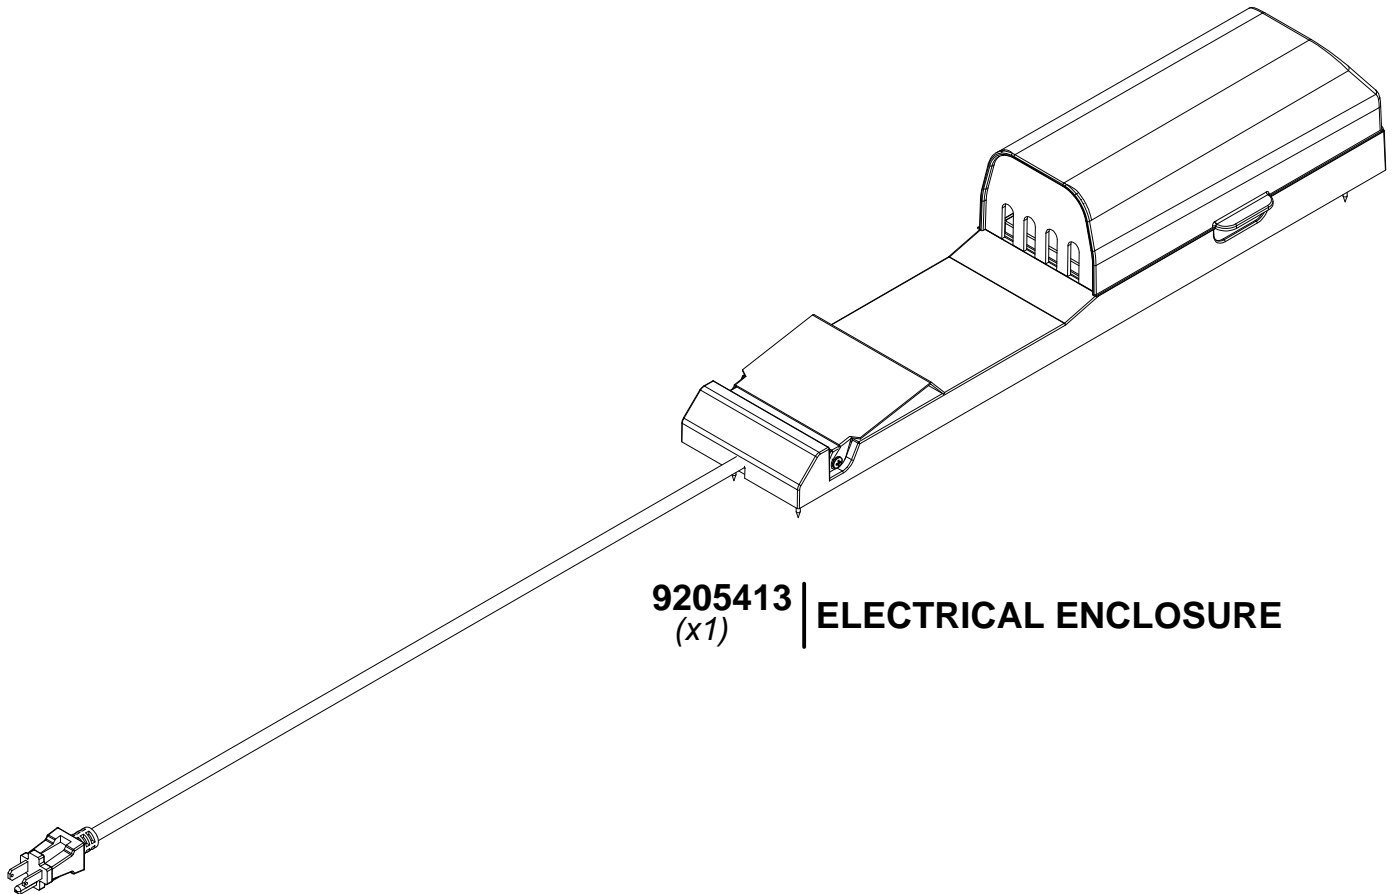

9205413
(x1) | **ELECTRICAL ENCLOSURE**

FOR POWERPORT INSTALLATION REFER TO ASSEMBLY INSTRUCTIONS THAT COME PACKAGED WITH THE POWERPORT KIT. INSTALL ON ANY EXTERIOR POST THAT IS DESIRED. FOLLOW DIRECTIONS FOR PROPER INSTALLATION.

DO NOT INSTALL POWERPORT ON MIDDLE POST OF ASSEMBLY, AS THIS WILL BE TOO CLOSE TO THE GRILL.